

SIMPLE MANUAL

HIGH POWER
SPEAKER
SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download
Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
FJ7




www.lg.com

Copyright © 2018 LG Electronics Inc. All Rights Reserved.

ENGLISH



Rear panel

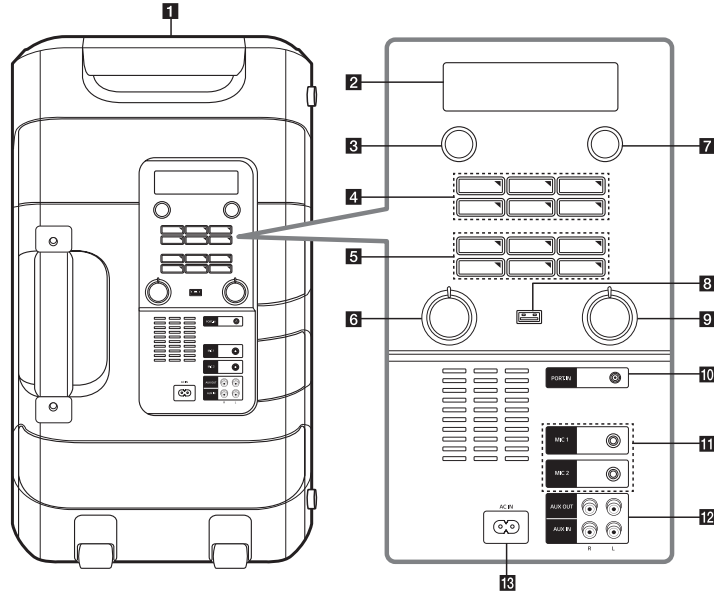

- 1 Handle
- 2 Display window
- 3 (Standby)
Turns the power on or off.
- 4 **PRESET/DEMO**
 - Press and hold to store radio stations.
 - Chooses a preset number for a radio station.
 - In power off status, if you press **PRESET/DEMO**, show demo mode.
- AUTO DJ/PRESET DELETE**
 - Selects the AUTO DJ mode.
 - Press and hold to delete all the saved stations.
 - Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
- WIRELESS LINK**
 - Selects MASTER or SLAVE on WIRELESS PARTY LINK mode.
 - Enable or disable WIRELESS PARTY LINK mode.
- I<<** (Skip/Search)
 - Skips backward.
 - Searches for a section within a file.
 - Selects the radio stations.


- >II** (Play/Pause)
Starts or pauses playback.
- >>I** (Skip/Search)
 - Skips forward.
 - Searches for a section within a file.
 - Selects the radio stations.
- 5 **USER EQ/PARTY LINK**
 - Selects the sound effect created by your own.
 - Press and hold to select PARTY LINK.
- SOUND EFFECT/BASS BLAST**
 - Chooses sound impressions.
 - Press and hold to select BASS effect directly.
- VOICE CANCELLER**
You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.
- ECHO**
Selects ECHO mode.
- KEY CHANGER**
Press to change the key to suit your vocal range.
- VOCAL EFFECTS**
Selects VOCAL EFFECTS mode.

- 6 **MIC VOLUME/LEVEL CONTROL**
 - Adjust microphone volume.
 - Turns clockwise or counterclockwise to control the USER EQ level.
 - Adjust KEY CHANGER level.
 - Sets Delay value in PARTY LINK mode.
- 7 **F** (Function)
Selects the function and input source.
- 8 USB Port
You can play sound files by connecting the USB device.
- 9 **MASTER VOLUME**
Adjust speaker volume.

- 10 PORT. (Portable) IN jack
- 11 MIC (Microphone) 1/2 jack
- 12 **AUX OUT** (L/R)
AUX IN (L/R)
Connect an auxiliary device.
- 13 AC IN socket

Carrying the unit

The unit has wheels and a handle so you can easily move the unit.

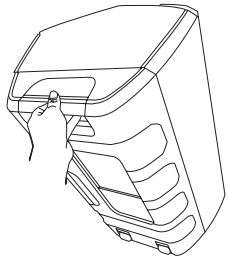

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 461 mm x 717 mm x 378 mm
Bus Power Supply (USB)	5 V 1 A
Amplifier (Total RMS output power)	400 W RMS

Design and specifications are subject to change without notice.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS POWER SUPPLY WHEN IT IS NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.

CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

PRECAUTIONS

Please read these precautions before you operate this unit.

- Avoid extreme heat, cold, moisture and dust.
- Avoid using near a magnetic field. (This will adversely affect the units performance.)
- Be careful when the surface of the case is wiped with a volatile agent such as benzene, alcohol, thinner, etc. or a chemically processed cloth, the surface finish may deteriorate or its coating may peel.
- Use the unit only in a horizontal position, and do not place anything heavy on it.
- Keep the unit away from flower vases, tubs, sinks, etc. If any liquids should spill into unit, serious damage could occur. In that case, please consult qualified service personnel.
- Do not obstruct the ventilation holes: they prevent overheating. Even soft materials such as paper and cloth may prevent proper ventilation of the unit.
- **There are no serviceable parts inside. For service, please contact your service centre.**

دليل بسيط

نظام السماعات ذي القوة العالية

يرجى قرأ هذا الدليل بعناية قبل تشغيل جهازك واحتفظ به للرجوع إليه في المستقبل.
لعرض تعليمات الميزات المتقدمة، تفضل بزيارة موقع الويب <http://www.lg.com>، ثم قم بتنزيل دليل المالك.

يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.

الطراز

FJ7



MFL69849710


www.lg.com

حقوق النشر والتأليف © لعام 2018 لـ LG Electronics Inc. جميع الحقوق محفوظة.

الترقية



اللوحة الخلفية

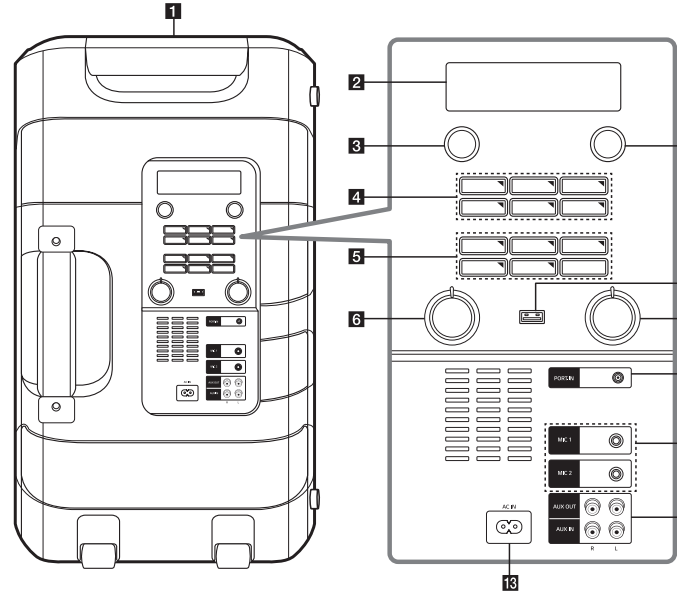

1 القيقض

2 نافذة العرض

3 (استعداد)

يشغل الطاقة أو يوقف تشغيلها.

4 PRESET/DEMO

- اضغط مع الاستمرار لتسجيل محطات الراديو.

- لاختيار رقم مضبوط مسبقًا لمحطة راديو.

- في حالة إيقاف التشغيل، إذا ضغط على زر PRESET/DEMO.

ويعرض وضع DEMO.

AUTO DJ/PRESET DELETE

- لاختيار الوضع AUTO DJ.

- اضغط مع الاستمرار احذف كل المحطات المحفوظة.

- لمشاهدة اسم كل أجهزة Bluetooth المتصلة في وضع Bluetooth.

WIRELESS LINK

- يحدد الوضع MASTER أو SLAVE في

WIRELESS PARTY LINK.

- يفعل وضع WIRELESS PARTY LINK أو يعطله.

I<<< (تخطي/بحث)

- تخطي للبحث.

- للبحث عن قسم داخل ملف.

- لاختيار محطات الإذاعة.

II>>> (تشغيل/إيقاف مؤقت)

ليبدء التشغيل أو الإيقاف المؤقت للتشغيل.

I>>> (تخطي/بحث)

- تخطي للأمام.

- للبحث عن قسم داخل ملف.

- لاختيار محطات الإذاعة.

5 USER EQ/PARTY LINK

- لتحديد المؤثر الصوتي الذي قمت بإعداده.

- اضغط مع الاستمرار لاختيار PARTY LINK.

SOUND EFFECT/BASS BLAST

- لاختيار الانطباعات الصوتية.

- اضغط مع الاستمرار لاختيار مؤثر BASS مباشرة.

VOICE CANCELLER

يمكنك الاستماع بالوظيفة أثناء تشغيل الموسيقى، من خلال تخفيض صوت

المغني في مصادر متعددة.

ECHO

يحدد وضع ECHO.

KEY CHANGER

اضغط لتغيير المفتاح ليناسب نطاقك الصوتي.

VOCAL EFFECTS

يحدد وضع VOCAL EFFECTS.

6 MIC VOLUME/LEVEL CONTROL

- لضبط مستوى صوت الميكروفون.

- يدور في اتجاه حركة عقارب الساعة أو عكسها للتحكم في مستوى

USER EQ.

- اضبط مستوى KEY CHANGER.

- لضبط قيمة التأخير في وضع PARTY LINK.

7 F (الوظيفة)

لتحديد الوظيفة ومصدر الدخل.

8 منفذ USB


يمكنك تشغيل ملفات صوتية بتوصيل جهاز USB.

9 MASTER VOLUME

لضبط مستوى صوت السماعة.

حمل الوحدة

تحتوي الوحدة على عجلات ومقبض حتى تتمكن من نقل الوحدة بسهولة.

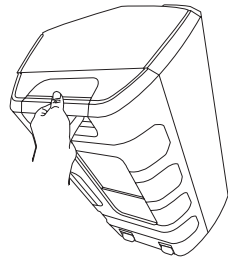

10 IN (محمول) PORT. مقبس

11 1/2 (ميكروفون) MIC مقبس

12 AUX OUT (L/R)

AUX IN (L/R)

قم بتوصيل الجهاز الإضافي.

13 AC IN مقبس

معلومات إضافية

المواصفات

متطلبات الطاقة	أرجع إلى الملصق الرئيسي
استهلاك الطاقة	أرجع إلى الملصق الرئيسي
الأبعاد	حوالي ٤٦١ مم X ٧١٢ مم X ٣٧٨ مم
(العرض x الارتفاع x العمق)	
وحدة التغذية بالطاقة	٥ فولت ١ أمبير
(النافذة) (USB)	
مضخم الصوت	٤٠٠ وات RMS
(إجمالي طاقة مخرج RMS)	

التصميمات والمواصفات عرضة للتغيير دون إشعار مُسبق.

ملاحظة سلامة هامة

كلاية الوصلة للقياس مزودة مع هذا المنتج وتم تثبيتها داخل الوصلة الكهربائية الموجودة التي تم تزويدها ، إذا كان لأي سبب

احتجت لتقصير الوصلة.

لا تستعمل مرة أخرى هذا القياس

يجب استعمال قابس جديد للتأكيد على سلامتك بصورة

متواصلة وذلك عن طريق إحكام إدخال القابس إلى الوصلة

الكهربائية طبقا للوائح القابس والمقبس للعام 1994.

مزامن صوت LG (لاسلكي)



لمزيد من المعلومات، حمل دليل المالك عبر الإنترنت.

<http://www.lg.com>

تطبيق المتحكم



تحميل تطبيق Music Flow Bluetooth على جهازك.
(النظام التشغيل أندرويد فقط.)

تحذير من أجل السلامة

يجب فصل هذا الجهاز عن مخرج التيار الكهربائي الرئيسي أثناء عدم استخدامه. لا تسمح لهذا الجهاز بالتعرض للأمطار أو الرطوبة.

تحذير تحذير

من أجل منع وقوع الصدمة الكهربائية، لا تسحب عنه الغطاء. لا يوجد في الداخل أجزاء للاستخدام. التصليح يجب أن يقوم به الشخص المختص.

تحذيرات للوقاية

اقرأ هذه التعليمات قبل تشغيل الجهاز

• تجنب درجات الحرارة أو البرودة العالية والرطوبة والغبار.

• تجنب الاستخدام قريباً من حقل مغناطيسي (سيوثر سلبياً على إنجاز الجهاز).

• حاذر عند مسح الغطاء بمادة متطايرة كالبنزين والكحول إلخ أو قطعة قماش معالجة بمواد كيميائية. ربما يؤدي ذلك إلى إتلاف سطح الغطاء أو تششير الطلاء.

• استخدم هذا الجهاز فقط بوضع أفقي ولا تضع فوقه أي شيء ثقيل.

• حافظ على وضع الجهاز بعيداً عن أحواض الزهور وأنابيب الماء وحوض الغسيل، إذا سقط عليه أي مادة سائلة فقد يحدث تلف كبير للجهاز. في مثل هذه الحالة قم بعرضه على خبير فني متخصص.

• لا تحجز منطقة التهوية، ثقب التهوية تمنع زيادة السخونة. وحتى المواد الخفيفة أو الناعمة كالورق أو القماش قد تسد ثقب التهوية.

• لا يوجد أجزاء للاستخدام من الداخل. من أجل الإصلاح والصيانة اعرضه على الفني المتخصص.