

SIMPLE MANUAL

High Power Speaker System

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
FJ5




www.lg.com

Copyright © 2018 LG Electronics Inc. All Rights Reserved.

ENGLISH



Top Panel

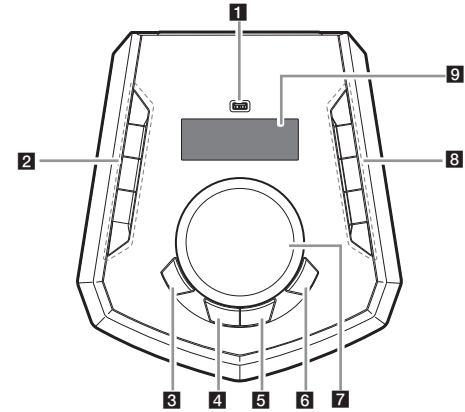

- 1** USB Port
You can play sound files by connecting the USB device.
- 2** (Standby)
Turns the power on or off
#/b KEY CHANGER
Changes the key to suit your vocal range.
VOICE CANCELLER
You can reduce the vocal tones during music playback from various input sources.
ECHO/DEMO
- Selects ECHO mode.
- In power off status, if you press **ECHO/DEMO**, shows DEMO mode.
- 3** LIGHTING
Selects the lighting effects.
- 4** MIC (Microphone) VOL. (Volume)
Select to adjust microphone volume.
(Adjust microphone volume by rotating **MASTER VOLUME/MULTI JOG**.)
- 5** VOCAL EFFECTS
Selects VOCAL EFFECTS mode.
- 6** BASS BLAST
Press to select BASS effect directly.

- 7** MASTER VOLUME/MULTI JOG
- Adjust speaker volume.
- Adjust microphone volume.
- Selects lighting mode.
- Selects VOCAL EFFECTS mode.
- 8** F (Function)
Selects the function and input source.
>>I (Skip/Search)
- Skips forward.
- Searches for a section within a file.
- Selects the radio stations.
>II (Play/Pause)
- Starts or pauses playback.
- Selects Stereo/Mono (Horizon mode only).
I<< (Skip/Search)
- Skips backward.
- Searches for a section within a file.
- Selects the radio stations.
WIRELESS LINK
- Selects MASTER or SLAVE on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.
- 9** Display window

Controller App




Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync (Wireless)




For more information, download the online owner's manual. <http://www.lg.com>

Front panel / Rear panel

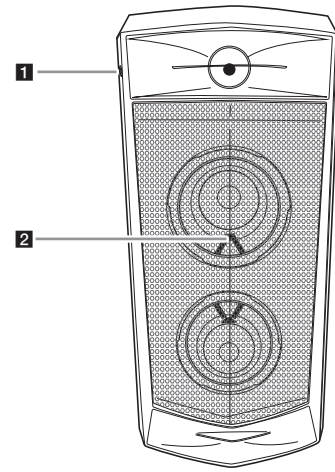


- 1** MIC (Microphone) jack
- 2** Remote sensor

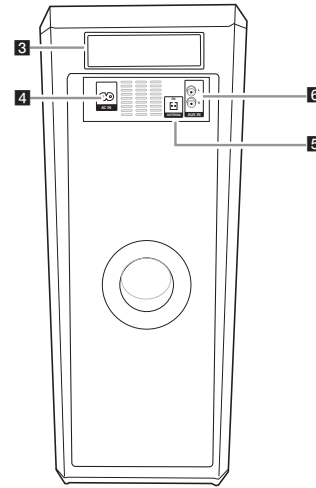

- 3** Handle
- 4** AC IN socket
- 5** ANTENNA (FM)
- 6** AUX IN (L/R)
Connect an auxiliary device.

How to place the unit

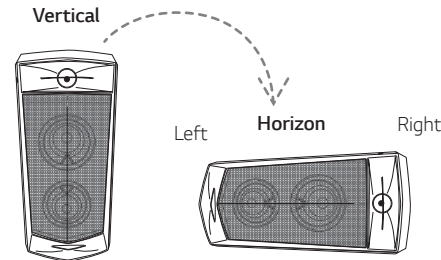

On the horizon mode, you can hear the stereo sound and on the vertical mode, the sound transforms into a mono signal.


Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 615 mm x 272 mm x 318 mm
Bus Power Supply (USB)	5 V 1 A
Amplifier (Total RMS output power)	220 W RMS

Design and specifications are subject to change without notice.

Replacement of battery

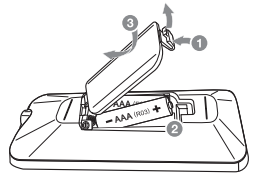

MANUAL SIMPLE

Sistema de
bocina de alta
potencia

Lea este manual detenidamente antes de utilizar su equipo y guárdelo para futuras consultas.
Para ver las instrucciones de las características avanzadas, visite <http://www.lg.com> y descargue el Manual del propietario. Ciertos contenidos de este manual pueden no coincidir con los de su unidad.

MODELO
FJ5




www.lg.com
Copyright © 2018 LG Electronics Inc. Todos los derechos reservados.

ESPAÑOL



Panel superior

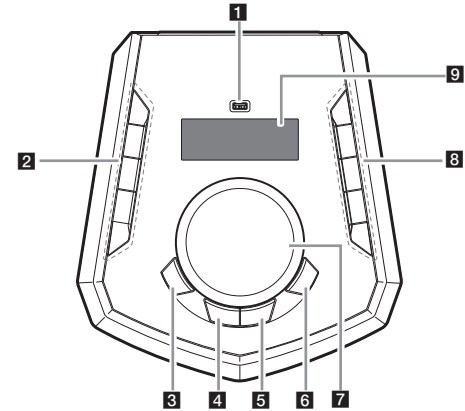

- 1** Puerto USB
Puede reproducir archivos conectando el dispositivo USB.
- 2** (Modo espera)
Enciende o apaga.
#/b KEY CHANGER
Cambia la clave para adecuarla al rango vocal.
- VOICE CANCELLER**
Puede disfrutar de la reproducción de la música, reduciendo el sonido de la voz de la música en las diferentes fuentes.
- ECHO/DEMO**
- Selecciona el modo ECHO.
- En estado apagado, si presiona **ECHO/DEMO**, se muestra el modo DEMO.

- 3** LIGHTING
Selección de los efectos de luz
- 4** MIC (Micrófono) VOL. (Volumen)
Selecciónelo para ajustar el volumen del micrófono.
(Ajuste el volumen del micrófono girando el **MASTER VOLUME/MULTI JOG.**)
- 5** VOCAL EFFECTS
Seleccione el modo de efectos de voz.
- 6** BASS BLAST
Presione para seleccionar el efecto BASS directamente.

- 7** MASTER VOLUME/MULTI JOG
- Ajusta el volumen del parlante.
- Ajuste el volumen del micrófono.
- Selección del modo de iluminación.
- Seleccione el modo de efectos vocales.
- 8** F (Función)
Selecciona la función y fuente de entrada.
>>I (Adelantar/Buscar)
- Adelantar.
- Busque una sección dentro de un archivo.
- Selecciona las emisoras de radio.
>II (Reproducir/Pausa)
- Inicia o pausa la reproducción.
- Selecciona Estéreo/Mono (Modo Horizon solamente).
I<< (Retroceder/Buscar)
- Retroceder.
- Busque una sección dentro de un archivo.
- Selecciona las emisoras de radio.
- WIRELESS LINK**
- Selecciona MASTER o SLAVE en el modo WIRELESS PARTY LINK.
- Activa o desactiva el modo WIRELESS PARTY LINK.
- 9** Pantalla

Aplicación del controlador




Descargue la aplicación **Music Flow Bluetooth** a su dispositivo. (Sólo Android)

LG Sound Sync (inalámbrico)




Para más información, descargue el manual del propietario. <http://www.lg.com>

Panel frontal/Panel trasero

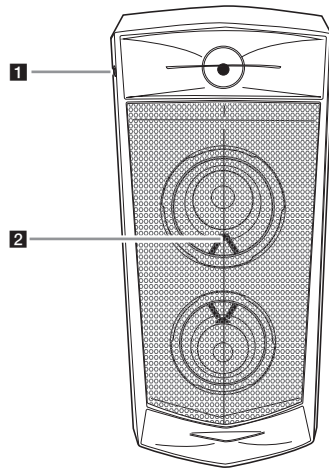


- 1** Entrada MIC (Micrófono) tipo Jack
- 2** Sensor remoto

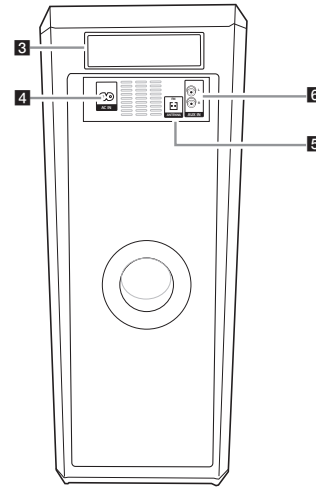

- 3** Asa (para levantar el equipo)
- 4** Toma de entrada CA
- 5** ANTENA (FM)
- 6** AUX IN (L/R)
Conecte un dispositivo auxiliar.

Cómo colocar el equipo

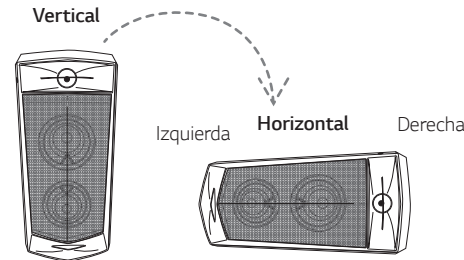

En el modo horizontal, podrá escuchar el sonido estéreo, y el modo vertical, el sonido volverá al modo monoaural.

Información adicional

Especificaciones

Requisitos eléctricos	Consulte la etiqueta principal de la unidad
Consumo de energía	Consulte la etiqueta principal de la unidad
Dimensiones (An x Al x P)	Aprox. 615 mm x 272 mm x 318 mm
USB (Bus Power Supply)	5 V 1A
Amplificador (Potencia RMS total)	220 W RMS

El diseño y las especificaciones están sujetos a cambios sin previo aviso.

Sustitución de la batería

