



REFRIGERATOR OWNER'S MANUAL MODEL: GC-051SA


PLEASE
READ THIS OWNER'S MANUAL THOROUGHLY
BEFORE OPERATING AND KEEP IT HANDY FOR
REFERENCE AT ALL TIMES.

LEMARI ES BUKU PANDUAN MODEL: GC-051SA

BACALAH LEMBAR PANDUAN INI DENGAN TELITI
SEBELUM MEMASANG DAN MENGOPERASIKAN
LEMARI ES ANDA. CATAT NOMOR MODEL DAN
NOMOR SERI LEMARI ES ANDA.

CONTENTS

INSTALLATION	3
FEATURE CHART	4
OPERATION	5
Starting	
Temperature Control	
Ice Making	
Defrosting	
SUGGESTIONS ON FOOD STORAGE	6
CLEANING	7
GENERAL INFORMATION	7
IMPORTANT WARNINGS	8
BEFORE CALLING FOR SERVICE	9

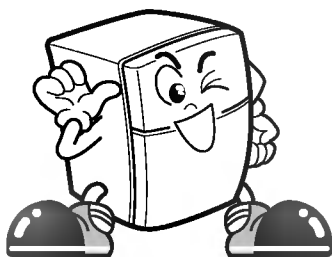


THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE, AND UTILIZES THE LATEST IN TECHNOLOGY.
WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH IT'S PERFORMANCE AND RELIABILITY.
BEFORE YOU START YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY. IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.

INSTALLATION

1. Select a good location.
Place your refrigerator where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. There must be proper air circulation around your refrigerator to keep it operating efficiently.
If your refrigerator is placed in a recessed area in the wall, allow at least a 10 inch or greater clearance above the refrigerator and 2 inches or more from the wall.
The refrigerator should be elevated 1 inch from the floor, especially if it is carpeted.
4. To avoid vibrations, the unit must be level.
If required, adjust the leveling screw to compensate for unevenness of the floor.
The front should be slightly higher than the rear to aid in door closing.
Leveling screw can be turned easily by tipping the cabinet slightly.
Turn the leveling screw clockwise to raise the unit, counterclockwise to lower it.
5. Clean your refrigerator thoroughly and wipe off all dust accumulated during shipping.
6. Install accessories such as ice tray, shelf, etc., in their proper places. They are packed together to prevent possible damage during shipment.
7. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
8. Prior to use, leave your refrigerator on for 2 or 3 hours.
Check the flow of cold air on the evaporator to ensure proper cooling.
Your refrigerator is now ready for use.

FEATURE CHART

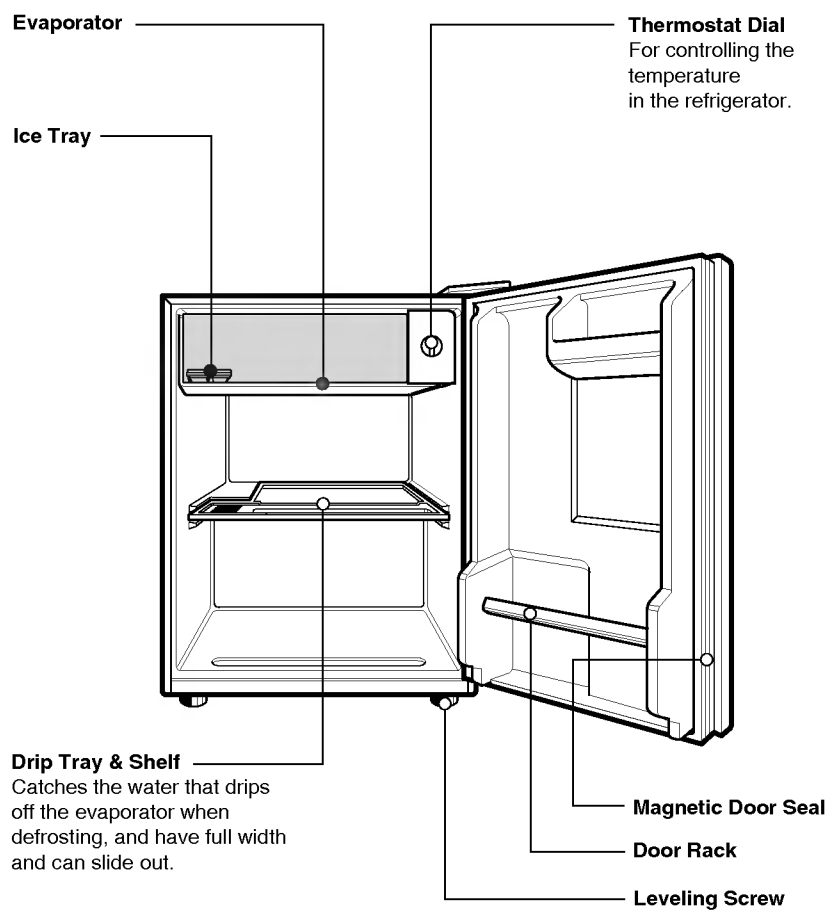


OPERATION

STARTING

When your refrigerator is first installed, allow it 2-3 hours to stabilize at normal operating temperature prior to filling it with fresh food.

If operation is interrupted, allow a 5 minute delay before restarting.

TEMPERATURE CONTROL

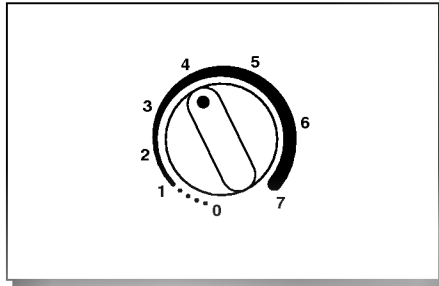

Your refrigerator has a control that let you regulate the temperature in the refrigerator.

Initially, set the control at mid-position.


For colder temperatures, adjust the control to a higher number, and for warmer temperatures, adjust the control to a lower number.

ICE MAKING

- To make ice cubes, fill the ice tray with water and place it on the evaporator.
- To remove ice cubes, hold the tray at its ends and twist gently.



To remove ice cubes easily, run water on the tray before twisting.

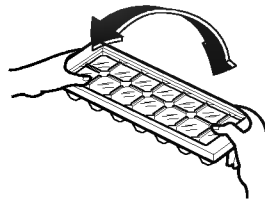

OPERATION

DEFROSTING

- It is necessary to regularly defrost your refrigerator in order to ensure efficient operation.
The frost on the surface of the evaporator should not exceed a quarter of an inch(6mm) before defrosting.
- To defrost, turn the control to '0'.
- Before you start the defrosting operation, remove food from the evaporator and place the drip tray in its proper position.
- When defrosting is completed, remove the drip tray, empty water, dry and put it back to its normal position.
Turn the control dial to a desired position.

SUGGESTIONS ON FOOD STORAGE

STORING FOOD

- Storing fresh food in the refrigerator, and how food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food, and lead to higher electric bills!
- When storing, wrap food in vinyl, or place in a covered container. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, causing temperatures to rise.
- Do not store bottles on the evaporator - they may break when frozen.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean, to prevent adjacent food from spoiling.
- Ice making compartment is for making ice only.

CLEANING

It is important that your refrigerator be kept clean to prevent undesirable odors. Spilled food should be wiped up immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners or strong alkaline solutions on any surface.

Before you clean, however, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

EXTERIOR - Use a lukewarm solution of mild soap or detergent to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR - Regular cleaning of the interior and interior parts is recommended. Disconnect the power supply, and remove food and shelves, trays etc. Wash all compartment and shelves, trays etc. with a baking soda solution. Rinse and dry.

WARNING

Always remove power cord from the wall outlet prior to cleaning in the vicinity of electrical parts. Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing a electric shock. Do not use flammable or toxic cleaning liquids.

GENERAL INFORMATION

VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation.

When you plan to be away for an extended period, remove all food, disconnect the power cord, clean the interior thoroughly, and leave the door OPEN to prevent odor formation.

POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

IF YOU MOVE

Remove or securely fasten down all loose items inside the refrigerator.

To avoid damaging the leveling screw, turn them all the way into the base.

IMPORTANT WARNINGS

DO NOT USE AN EXTENSION CORD

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power interruption.

POWER CORD REPLACEMENT

If the power supply cord of this appliance is damaged, it must only be replaced in a repair shop appointed by the manufacturer, because special purpose tools are required.

ABOUT GROUNDING (EARTHING)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove either gasket, latch, lid or the entire door from your unused appliance, or take some other action to make it harmless.

This appliance must be grounded (earthed).

DON'T WAIT! DO IT NOW!

NEVER STORE EXPLOSIVES AND CHEMICALS

BEFORE CALLING FOR SERVICE


SERVICE CALLS CAN OFTEN BE AVOIDED!

IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST :

PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	● Has a house fuse blown or circuit breaker tripped? ● Has the power cord plug been removed or loosened from the electrical wall outlet?
TEMPERATURE TOO WARM	● Temperature control not set on proper position. ● Appliance is placed close to wall or heat source. ● Warm weather-frequent door openings. ● Door left open for a long time. ● Large amount of foods are kept in the refrigerator
ABNORMAL NOISE(S)	● Refrigerator is installed in a weak or uneven place or leveling screw needs adjusting. ● Unnecessary objects placed in the back side of the refrigerator.
REFRIGERATOR HAS ODOR	● Foods with strong odors should be tightly covered or wrapped. ● Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	● Not unusual during periods of high humidity. ● Door may have been left ajar.

CONTENTS

MENEMPATKAN LEMARI ES	11
NAMA BAGIAN-BAGIAN LEMARI ES.....	12
PENGOPERASIAN	13
Starting	
Pengaturan suhu	
Membuat Es	
Peleburan Bunga Es	
PETUNJUK PENYIMPANAN MAKANAN ...	14
CARA MEMBERSIHKAN	15
PETUNJUK UMUM	15
PERINGATAN KHUSUS	16
SEBELUM ANDA MENANGGIL PETUGAS SERVIS	17

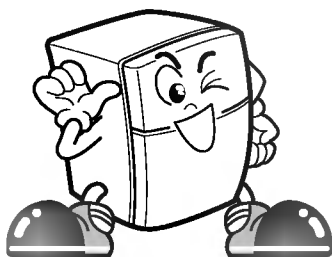


LEMARI ES INI DIBUAT SECARA TELITI DENGAN TEKNOLOGI YANG MUTAKHIR. KAMI YAKIN ANDA AKAN SANGAT PUAS DENGAN UNJUK KERJA DAN KEHANDALANNYA. SEBELUM MENGGUNAKAN LEMARI ES, BACALAH LEMBAR INI DENGAN SEKSAMA MENGENAI CARA MENEMPATKAN LEMARI ES YANG BENAR, PENGOPERASIAN DAN PERAWATANNYA SERTA JUGA DILENGKAPI DENGAN Kiat-Kiat bila anda menemukan MASALAH.

MENEMPATKAN LEMARI ES

1. Pilihlah tempat yang tepat. Letakan dimana anda mudah menggunakannya.
2. Hindari lokasi yang lembab dan sengatan matahari langsung.
3. Berikanlah ruang sirkulasi udara pada lemari es anda agar dapat bekerja dengan efisien. Berikanlah jarak 25 cm atau lebih dari dinding dan jarak 5 cm atau lebih dari bagian atasnya. Sebaiknya tinggi lemari es bagian muka adalah 2,5 cm dengan lantai, terutama bila dialasi karpet.
4. Untuk mencegah getaran, aturlah ketinggian. Demikian juga bila lantai tidak rata, putarlah pengatur ketinggian. Buatlah bagian depan sedikit lebih tinggi dari belakang agar mudah menutup pintu.
5. Bersihkan dengan seksama lemari es anda dan basuhlah debu yng menumpuk selama pengiriman.
6. Hubungkanlah saklamnya pada stop kontak. Jangan memasang kabel kontak alat listrik lain pada stop kontak yang sama.
7. Sebelum anda memasukan makanan biarkan dulu lemari es anda. Bekerja selama 2-3 jam. Periksa suhu udara pada evaporator. Bila sudah dingin maka lemari es anda sudah siap untuk si pakal.

NAMA BAGIAN-BAGIAN LEMARI ES

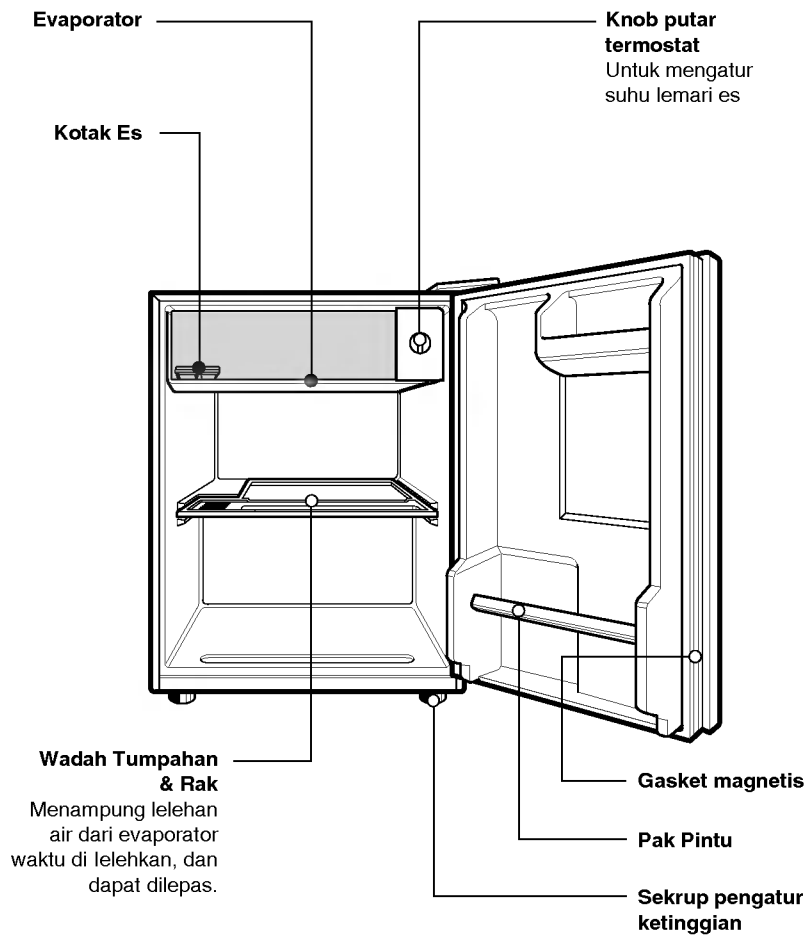


PENGOPERASIAN

STARTING

Pada saat pertama kali Lemari es anda dinyalakan, biarkan dulu agar stabil selama 2~3 jam sebelum di isi dengan makanan segar maupun beku.
Jika operasi terputus tunggu dulu selama 5 menit sebelum dinyalakan lagi.

PENGATUR SUHU

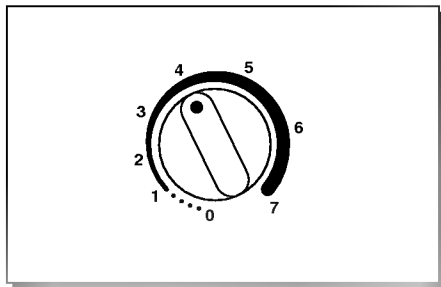


Lemari ES anda memiliki pengatur yang memungkinkan anda mendapatkan suhu diinginkan.

Mula-mula, pu tarlah pengatur pada posisi mid (menengah).

Bila anda ingin suhu yang rendah, putarlah kenomor yang lebih besar, sebaliknya putarlah keangka kecil untuk mendapatkan suhu yang lebih tinggi.

MEMBUAT ES

- Untuk membuat es kubik, isilah kotak es dengan air dan taruhlah pada evaporator.
- Bila anda ingin mengambil es tersebut peganglah salah satu ujungnya dan puntirlah dengan perlahan ujungnya yang lain.

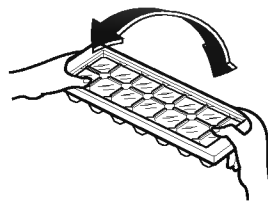

Untuk mengambil Es kubik dengan mudah dari kotak es, siramlah kotak es tersebut dengan air.

PENGOPERASIAN

PELELEHAN BUNGA ES

- Anda sebaiknya perlu melakukan peleburan bunga es ini secara teratur agar lemari es anda selalu beroperasi dengan efisien. Sebaiknya anda sudah melebur bunga es sebelum tinggi melebihi 6 mm.
- Untuk melakukan peleburan, tekanlah tombol untuk peleburan (defrosting).
- Setelah bunga es sudah tidak ada lagi, tombol peleburan tersebut akan kembali keposisi normal semua dengan sendirinya. Segera setelah itu buanglah genangan air pada wadah air lebur bunga es (tray drip), keringkan dan pasanglah kembali pada semula.

PETUNJUK PENYIMPANAN MAKANAN

- Simpanlah makanan segar pada Lemari Es. Bagaimana makanan dibekukan merupakan hal penting untuk tetap menjaga kesegaraan dan rasa.
- Janganlah menyimpan makanan yang mudah busuk pada suhu rendah, seperti pisang, nanas dan melon.
- Untuk buah Arbei dan anggur, sebarkan diatas talam dan hanya didinginkan untuk waktu yang singkat.
- Anginkan dulu makanan agar dingin sebelum memasukannya. Menaruh makanan yang masih panas dapat merusak makanan lain, dan bahkan akan membuat rekening listrik anda bertambah!
- Jangan menyimpan botol pada evaporator karena botol tersebut akan pecah saat beku.
- Bersihkan dulu makanan sebelum memasukannya. Untuk buah-buahan dan sayuran cuci dan basuhlah, untuk makanan yang di kemas, lap dahulu untuk mencegah makanan lain menjadi tercemar.

CARA MEMBERSIHKAN

Anda sebaiknya membersihkan lemari es anda secara teratur untuk mencegah timbulnya bau bau yang tidak diinginkan.

Laplah setiap makanan yang tumpah dengan segera, karena bersifat asam dan mengotori permukaan plastik jika dibiarkan melekat.

Jangan sekali-kali membersihkan permukaan apapun dengan memakai keset, sikat dan pembersih kasar sejenisnya maupun larutan alkali.

Sebelum membersihkan, sebaiknya anda selalu ingat bahwa setiap bahan yang basah akan mudah melekat pada permukaan suhu yang rendah. Jangan menyentuh permukaan yang beku dengan tangan yang basah atau kotor.

BAGIAN LUAR - Gunakan larutan busa sabun lunak atau deterjen yang hangat kuku pada luar bagian luar lemari es anda. Basuhlah dengan kain lap basah lalu keringkan.

BAGIAN DALAM - Membersihkan bagian dalam dan perlengkapannya secara teratur sangatlah dianjurkan. Lepaskan dulu saklar listrik, keluarkan seluruh makanan.

PERINGATAN

Selalu lepaskan saklar listrik sebelum membersihkan karena terdapat komponen elektris. Lap setiap sisa bercak air dengan karet busa atau kain lap, sehingga mencegah air atau cairan mengenai komponen elektris yang dapat membuat hubungan singkat (konselting), jangan menggunakan larutan bahan-bahan yang mudah terbakar ataupun asam untuk membersihkan

PETUNJUK UMUM

SAAT BEPERGIAN

Bila anda berpergian untuk jangka waktu yang agak lama, yang terbaik adalah mematikan dulu lemari es anda. Keluarkan seluruh makanan, lepaskan kabel kontak, bersihkan bagian dalam dengan baik dan biarkan pintu terbuka untuk mencegah bau yang tidak diinginkan.

LISTRIK PADAM

Biasanya kerusakan yang membuat listrik padam akan dapat diatasi kurang dari 2 jam, dan itu tidak akan mempengaruhi suhu lemari es anda. Hanya batas jumlah anda membuka tutup pintu bila listrik padam. Bila listrik padam agak lama taruhlah sejumlah dry ice diatas kemasan makanan yang anda bekukan.

MEMINDAHKAN LEMARI ES

Lepaskan atau perkuatlah setiap bagian yang longgar dari lemari es anda. Untuk mencegah rusaknya sekrupnya pengatur ketinggian, putar turun sekrup tersebut kearah base.

PERINGATAN KHUSUS

JANGAN GUNAKAN STOP KONTAK GANDA

sebaiknya hubungkan lemari es anda hanya pada stop kontak tunggal sehingga mencegah serta alat listrik lainnya maupun lampu rumah anda dari beban lebih yang dapat membuat daya listrik turun.

PENGgantian POWER CORD (KABEL KONTAK)

Bila saklar lemari es anda rusak, dapatkanlah penggantian pada bengkel resmi yang ditunjuk oleh pembuat karena memiliki alat khusus untuk itu.

GROUNDING (KABEL TANAH)

Pada saat terjadi hubungan singkat grounding (kabel tanah) akan mengurangi resiko mengalaminya arus listrik besar dengan tiba-tiba pada komponen listrik karena adanya kawat pengantar keluar dari arus listrik.

Untuk mencegah hal itu, maka alat itu harus diground-kan.

Penempelan kawat ground yang tidak tepat akan menyebabkan timbulnya aliran arus listrik besar. Tanyakan pada ahli listrik atau montir servis bila kurang memahami petunjuk menyambung kabel tanah ini, ataupun bila anda ragu akan perlunya penyambungan kabel tanah pada alat ini.

BERBAHAYA

Lemari es kosong akan menjadi pusat perhatian yang berbahaya bagi anak-anak. Lepaskan Gasket sebagian atau seluruh pintu dari unit lemari es yang tidak terpakai, atau lakukan hal lain yang membuatnya menjadi tidak berbahaya.

Alat ini harus diground-kan
**JANGAN MENUNDA!
LAKUKAN SEKARANG!**

Jangan menyimpan bahan kimia atau bahan yang mudah meledak

SEBELUM MEMAGGIL PETUGAS SERVIS

ANDA DAPAT MENGHINDARI PEMANGGILAN PETUGAS SERVIS!

JIKA MERASA LEMARI ES AANDA TIDAK BEKERJA SEBAGAIMANA MESTINYA, PERIKSALAH KEMUNGKINAN PENYEBABNYA BERIKUT INI :

KERUSAKAN	KEMUNGKINAN PENYEBAB
LEMARI ES TIDAK BERFUNGSI	● Periksa keadaan sekeliling rumah anda ● Lihat lagi apakah saklar lemari es anda longgar
TIDAK DINGIN	● Pengatur suhu tidak disetel pada posisi yang tepat ● Letak lemari es anda terlalu dekat dengan dinding atau dekat dengan sumber panas ● Suhu sekeliling yang memang panas terlalu sering membuka tutup pintu ● Pintu dibiarkan terbuka terlalu lama ● Terlalu banyak makanan yang disimpan dalam lemari es
ADA BUNYI YANG TIDAK NORMAL	● Lemari es ditaruh pada lantai yang lemah, tidak rata atau anda perlu mengatur ketinggian lemari es anda ● Ada benda yang tertinggal pada bagian belakang lemari es
ADA BAU DARI LEMARI ES	● Makanan yang beraroma tajam sebaiknya dibungkus rapat ● Cobalah membersihkan bagian dalam lemari es
ADA EMBUN PADA PERMUKAAN KABINET	● Gejala normal bila memang keadaan sekeliling sedang pada tingkat kelembaban yang tinggi ● Periksa apakah pintu tidak tertutup rapat

