

فارسی



مدل : G7100



CE 0700

Revision 1.2
PRINTED IN KOREA

P/N : MMBB0098420



ENGLISH



CE 0700

Revision 1.2
PRINTED IN KOREA

P/N : MMBB0098420

تلفن همراه جی پی آر اس (GPRS)

راهنمای مصرف کنندگان

مدل : G7100

لطفاً قبل از استفاده از تلفن همراه، این دفترچه راهنما را به دقت مطالعه فرمائید. همچنین توصیه میشود در حفظ این راهنما جهت مراجعات بعدی دقت فرمائید.

راهنمای مصرف کنندگان

GPRS Phone

USER'S MANUAL

MODEL: G7100

Please read this manual carefully
before operating your set.
Retain it for future reference.

تلفن همراه جي پي آر اس (GPRS)

راهنماي مصرف ڪندڙان

مدل: G7100

لطفاً قبل از استفاده از تلفن همراه، این دفترچه راهنما را به دقت مطالعه فرمائید. همچنین توصیه میشود در حفظ این راهنما جهت مراجعات بعدی دقت فرمائید.



نکات ایمنی

ذکر این نکته حائز اهمیت میباشد که تمام فرستنده های امواج رادیویی چنانچه در مجاورت لوازم الکترونیکی به کار گرفته شوند باعث ایجاد تداخل در کار آنها می گردد.

در تمام طول زمان پرواز می بایست تلفن همراه را خاموش نگه داشت.



در مکانهایی که به دلایلی استفاده از تلفن همراه ممنوع میباشد، دستگاه تلفن را خاموش نمائید.



استفاده از تلفن همراه در بیمارستانها ممنوع میباشد زیرا استفاده از آن باعث ایجاد اختلال در تجهیزات پزشکی از جمله دستگاههای تنظیم ضربان قلب می گردد.



تداخل امواج رادیویی باعث ایجاد اختلال در کارکرد دستگاههایی مانند تلویزیون، رادیو، کامپیوتر و غیره می گردد.



از به دست گرفتن تلفن همراه در حین رانندگی بپرهیزید.



از باز کردن دستگاه تلفن و باطری بپرهیزید.



دستگاه تلفن همراه را از دسترس کودکان دور نگهدارید زیرا این دستگاه شامل قطعات جاشدنی کوچک بوده و جداسازی آن باعث ایجاد شوک الکتریکی می گردد.



از تماس دستان خیس با شارژر پرهیز فرمائید.





منحصراً از باتری و شارژهای مشخص شده استفاده گردد زیرا به کارگیری انواع دیگر آنها باعث وارد آمدن خسارت به دستگاه تلفن همراه می گردد.



لطفاً به نکات زیر توجه فرمائید:

دور انداختن باتری می بایست بر طبق قوانین مربوطه انجام گیرد.



به منظور جلوگیری از وارد آمدن خسارت به دستگاه خود، منحصراً از لوازم اصلی و قابل اطمینان استفاده فرمائید.



امکان برقراری ارتباط اضطراری (مانند نیازهای اورژانسی) تحت تمامی شبکه های مخابراتی میسر نیست. بنابراین جهت برقراری این گونه ارتباطات صرفاً به تلفن همراه اکتفا نفرمائید.



از چرخاندن صفحه نمایش دستگاه خود با قدرت زیاد خودداری فرمائید.



نکته مهم

این راهنما حاوی اطلاعات مهم و اساسی در خصوص نحوه استفاده و به کارگیری دستگاه تلفن همراه می باشد که به منظور استفاده بهینه از آن و جلوگیری از وارد آمدن خسارت، لازم است مفاد آن قبل از استفاده به دقت مورد مطالعه قرار گیرد. هر گونه تغییر و تحول که بطور صریح و روشن در این راهنما از آن یاد نشده باشد باعث از بین رفتن گارانتی دستگاه شما می گردد.



تماشا

- 9 مشخصات قسمت‌های گوشی
- 9 قسمت جلوی دستگاه
 - 11 پشت دستگاه
- 12 شرح کلید
- 13 کلید کناری گوشی
 - 14 کلیدهای حروف

نشان دادن اطلاعات

- 15 نشان دادن اطلاعات
- 15 علامت‌های روی صفحه

فعال ساختن

- 16 نصب کردن
- 16 داخل کردن سیم کارت
 - 16 خارج کردن سیم کارت
 - 17 نصب کردن باتری
 - 17 شارژ کردن باتری
 - 18 جدا کردن شارژر
- 19 تماس گرفتن و پاسخ دادن به تلفن
- 19 تماس گرفتن
 - 19 تماس‌های بین‌المللی
 - 19 تلفن کردن با استفاده از دفترچه تلفن



وظایف اضافی

20	فهرست In Call
20	• هنگام مکالمه تلفنی
22	• تلفن های چندین جانبه یا کنفرانسی
25	کدهای دسترسی
25	• Pin کد (۴ تا ۸ رقمی)
25	• Pin۲ کد (۴ تا ۸ رقمی)
25	• Puk کد (۴ تا ۸ رقمی)
25	• Puk۲ کد (۴ تا ۸ رقمی)
25	• کد امنیتی (۴ تا ۸ رقمی)

اکسیسینگ ده مینیو

26	مینیوتری
28	پیغامها [لیست ۱]
28	• نوشتن پیغامهای کوتاه [لیست ۱-۱]
31	• نوشتن پیام مولتی مدیا [لیست ۱-۲]
35	• اطلاعات ورودی [لیست ۱-۳]
36	• اطلاعات خروجی [لیست ۱-۴]
38	• پست صوتی [لیست ۱-۵]
38	• اطلاعات خدماتی [لیست ۱-۶]
40	• نمونه ها [لیست ۱-۷]
41	• تنظیمات [لیست ۱-۸]
43	ثبت تماس [لیست ۲]
43	• تماس پاسخ داده نشده [لیست ۲-۱]
43	• تماس های رسیده [لیست ۲-۲]
43	• تماس های گرفته شده [لیست ۲-۳]
43	• پاک کردن تماسها [لیست ۳-۴]
43	• هزینه تماس [لیست ۲-۵]
46	• اطلاعات GPRS [لیست ۲-۶]



- 47** پروفایل - زنگ [لیست ۳]
- فقط و بیراتور [لیست ۳-۱] 47
 - سکوت [لیست ۳-۲] 47
 - عمومی [لیست ۳-۳] 47
 - بلند [لیست ۳-۴] 47
 - هدست [لیست ۳-۵] 47
 - استفاده از گوشی در ماشین [لیست ۳-۶] 48
- 51** **دوربین [لیست ۴]**
- عکس گرفتن [لیست ۴-۱] 51
 - گرفتن عکس درحالت‌های مختلف [لیست ۴-۲] 52
 - گرفتن پی در پی تصویر [لیست ۴-۳] 52
 - آلبوم شخصی [لیست ۴-۴] 53
 - تنظیمات [لیست ۴-۵] 53
- 54** **تنظیمات [لیست ۵]**
- زنگ ساعت [لیست ۵-۱] 54
 - تاریخ و وقت [لیست ۵-۲] 54
 - تنظیمات تلفن [لیست ۵-۳] 55
 - تنظیمات تماس [لیست ۵-۴] 56
 - تنظیمات امنیتی [لیست ۵-۵] 60
 - تنظیمات شبکه [لیست ۵-۶] 63
 - تنظیم مجدد [لیست ۵-۷] 63
- 64** **برنامه ریز [لیست ۶]**
- تقویم کاری [لیست ۶-۱] 64
 - دفتر تلفن [لیست ۶-۲] 66
- 73** **بازی و سرگرمی [لیست ۷]**
- بازی [لیست ۷-۱] 73
 - ماشین حساب [لیست ۷-۲] 73
 - پوشه شخصی [لیست ۷-۳] 74
 - ساخت ملودی [لیست ۷-۴] 75
 - تبدیل واحدها [لیست ۷-۵] 75




75	• ساعت جهان [لیست ۶-۷]
76	• ضبط صدا [لیست ۷-۷]
76	• فعال کردن اینفرارد [لیست ۸-۷]
76	• پیغام گیر [لیست ۹-۷]
77	اینترنت [لیست ۸]
77	• صفحه اصلی [لیست ۱-۸]
77	• علامت [لیست ۲-۸]
78	• فشاردکمه پیغام [لیست ۳-۸]
78	• پروفایل [لیست ۴-۸]
81	• رفتن به LRU [لیست ۵-۸]
81	• تنظیم صندوق [لیست ۶-۸]
81	• گواهی امنیتی [لیست ۷-۸]
81	• بازگشت منوی پروفایل [لیست ۸-۸]
81	• نوع جستجوگر [لیست ۹-۸]
82	منوهای مورد استفاده
83	جاوا [لیست ۹]
83	• برنامه کاربردی [لیست ۱-۹]
83	• دریافت [لیست ۲-۹]
83	• وضعیت حافظه [لیست ۳-۹]
84	مطلوب [لیست ۱۰]
85	لوازم جانبی
86	نگهداری
88	اطلاعات فنی



مشخصات قسمتهای گوشی

قسمت جلوی دستگاه

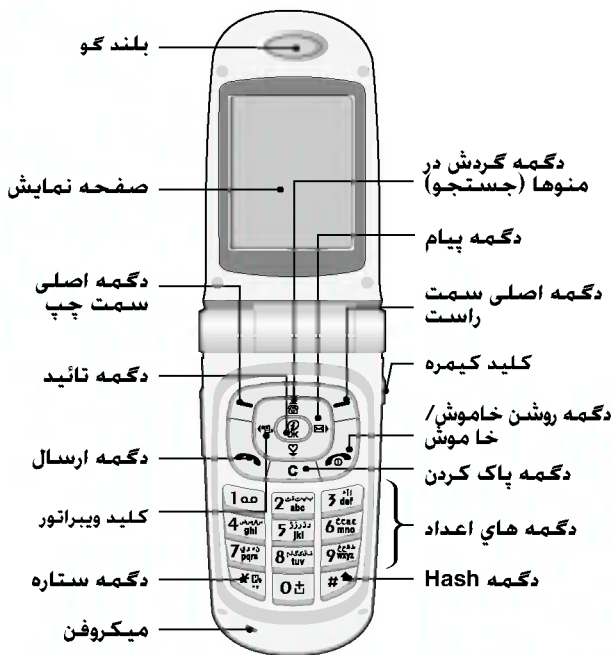



LCD (صفحه نمایش) را در جهت عقربه های ساعت ۹۰ درجه و در خلاف جهت عقربه های ساعت تا ۱۸۰ درجه می توانید چرخش دهید. در صورت چرخاندن صفحه نمایش با فشار زیاد ممکن است به دستگاه آسیب وارد شود.



پشت دستگاه








شرح کلید

کلیدهای گوشی به تفکیک در زیر نمایش داده شده است.



شرح صفحه کلید

توضیحات	کلید
<p>کلید چپ / کلید راست</p> <p>عملکرد این کلیدها توسط متن روی صفحه نمایش در بالای آن نشان داده می شود.</p>	
<p>لرزاننده (ویبراتور)</p> <p>ویبراتور را مستقیماً با تحت فشار دادن این کلید می توانید فعال کنید.</p> <p>کلید پیغام</p> <p>می توانید مستقیماً به منوی پیغام (اطلاعات ورودی، وضعیت حافظه، برنامه ریزیا آلام) بروید.</p> <p>کلیدهای جستجو</p> <p>برای جستجو از طریق نام، شماره های تلفن، منوها یا تعیین انتخاب ها بکار برده میشود. وقتی که کلید را فشار میدهید، منوی دلخواه نمایش داده می شود.</p> <p>کلید تأیید (وپ)</p> <p>اگر این کلید را لحظه ای فشار دهید مستقیماً به وپ وصل می شوید.</p>	
<p>کلید فرستنده</p> <p>می توانید شماره تلفن مورد نظر را گرفته و یا به تلفن پاسخ بدهید. اگر بدون داخل نمودن شماره این کلید را فشار دهید، تلفن تا آخرین شماره های گرفته شده، دریافت شده و از دست داده را نشان میدهد.</p>	
<p>کلیدهای اعداد</p> <p>این کلیدها عمدهً برای شماره گیری در حالت استند بای و وارد کردن شماره ها یا حروف در حالت تنظیم بکار میرود. زمانیکه کلیدهای زیر را به مدت طولانی فشار بدهید:</p> <ul style="list-style-type: none"> جهت تماس با شماره voice mail بکار میرود. برای تلفن های بین المللی بکار میرود. برای تلفن های با شماره گیری سریع (شماره های سپرده شده به حافظه صفحه کلید) بکار میرود. تا 	



کلید	توضیحات
	کلید خاموش / روشن برای قطع تلفن بکار میرود. می توانید با فشردن این کلید برای چند ثانیه، گوشی را خاموش یا روشن نمایید.
	حروف را پاک کرده می توانید به لیست برگردید. وقتی که این کلید را در حال انتظار مختصراً فشار دهید، فهرست حافظه صدا ظاهر می شود و اگر چند لحظه فشار دهید، صدا را می توانید ضبط کنید.
	اگر این کلید را به مدت طولانی فشار دهید می توانید تشخیص صدا را فعال کنید.

کلید کناری گوشی

کلید	توضیحات
	کلید بالا / پایین در حالت بسته گوشی با فشردن این کلید زمان، تاریخ و نمایش دلخواه شما روی صفحه نمایش ظاهر میگردد. اگر این کلید را یک بار فشار دهید ساعت نمایان می شود. زمان مطابق با تنظیمات آن در (Show Time) ظاهر می گردد.
	کلید دوربین این کلید برای گرفتن عکس و ذخیره آن بکار میرود.



نشان دادن اطلاعات

در زیر نشانه هایی که روی صفحه نمایش ظاهر می شود تشریح شده اند.

علامتهای روی صفحه


علامت / نشانه	توضیحات
	قدرت گیرندگی شبکه
	ارتباط برقرار است
	میتوانید از خدمات GPRS استفاده کنید.
	نشان میدهد که از خدمت رومینگ استفاده می نمائید.
	اگر سرویس ۲ خط توسط مخابرات پشتیبانی گردد.
	الارم، تنظیم شده روشن است.
	نشان دهنده وضعیت باطری است.
	نشان دهنده دریافت پیغام است.
	شما پیغام صوتی دریافت نموده اید.
	شما یک پیام تعقیبی را دریافت نموده اید.
	می توانید برنامه مورد نظر خود را مشاهده کنید.
	لرزاننده روشن است (تمامی سیگنالهای صوتی خاموش هستند)
	زنگ در حالت نرمال فعال است.
	صدای بلند (Loud).
	صدای زنگ غیر فعال است (Silent).
	صدای زنگ در هدفون فعال است.
	صدای زنگ برای داخل ماشین فعال است (Car Kit).
	انتقال شماره تلفن روی شماره دیگر (Divert).



۱. داخل کردن سیم کارت

سوکت سیم کارت را مطابق تصویر قرار دهید. جهت نصب سیم کارت مراحل زیر را به ترتیب انجام دهید.


۱. اگر باتری وصل است، آنرا جدا کنید.
۲. سیم کارت را زیر گیره های نقره ای، با اتصالات طلایی طوری که رو به پائین و گوشه بریده آن بسمت راست باشد، قرار دهید.

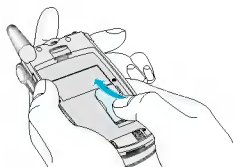

۲. خارج کردن سیم کارت

برای خارج کردن سیم کارت مراحل زیر را انجام دهید.

۱. اگر باتری وصل است، آنرا جدا کنید.
۲. سیم کارت را از داخل جعبه خارج کنید.

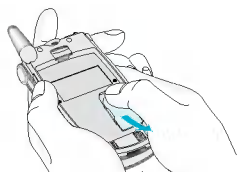


توجه

- هنگام روشن بودن دستگاه از جدا نمودن باتری جدا خودداری نمایید.
- خراشیدگیهای سطح فلزی سیم کارت به سادگی به آن صدمه می زند. در تماس با سیم کارت هنگام خارج کردن و نصب کردن، دقت نمایید. به توضیحات ارائه شده همراه سیم کارت توجه کنید.




۳. نصب کردن باطری

۱. قسمت پایین باطری را در محل خود قرار دهید.

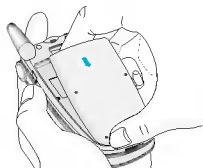


۲. قسمت بالای باطری را فشار داده تا صدای کلیک را بشنوید.

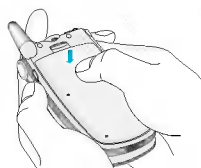


۴. شارژ کردن باطری

برای وصل کردن آداپتور به تلفن، باید باطری را نصب نموده باشید.

۱. سر سیم شارژر را مطابق تصویر در محل مشخص شده در زیر گوشی وصل نمایید.

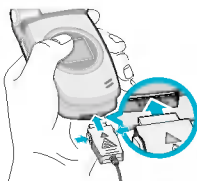

۲. انتهای دیگر آداپتور را به پریز برق شهری وصل کنید. (فقط از شارژر داخل گارتن دستگاه استفاده کنید)

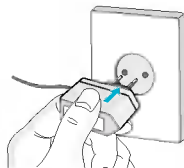



نصب کردن

اخطار

- هیچگاه سوکت آداپتور را با فشار وارد گوشی نکنید.

۵. جدا کردن شارژر

با فشردن دکمه های کناری بطوریکه در طرح نشان داده شده آداپتور را از تلفن جدا کنید.



زمان شارژ کردن مربوط به شارژر و باتری مورد استفاده میباشد.

یادداشت

- مطمئن شوید که قبل از استفاده از تلفن، باتری بطور کامل شارژ شده است.
- هنگام شارژ کردن، باتری یا سیم کارت را از دستگاه جدا نکنید.
- نمایش دهنده ذخیره باتری پس از تکمیل شدن شارژ متوقف می شود.



یادداشت

- اگر باتری شارژر نمیشود،
- تلفن را یکبار خاموش و سپس روشن نمایید.
- اطمینان حاصل کنید که باتری درست جا افتاده است.




تماس گرفتن و پاسخ دادن به تلفن




تماس گرفتن

۱. شماره تلفن مورد نظر را با کد منطقه وارد کنید. اگر میخواهید شماره را پاک کنید، **C** را فشار دهید.
۲.  را فشار دهید تا ارتباط با شماره مورد نظر برقرار گردد.
۳.  را فشار دهید تا مکالمه تلفنی را ختم نمایید.

تماسهای بین المللی

۱. کلید **[0+]** را برای پیشوند بین المللی فشرده و نگهدارید. جای حرف "+" ممکن است با کد بین المللی جایگزین شود.
۲. کد کشور، کد منطقه و شماره تلفن را وارد کنید.
۳.  را فشار دهید.

تلفن کردن با استفاده از دفترچه تلفن

۱. در حالت استندبای دکمه  را فشار دهید.
۲. وقتی که لیست نمایش داده میشود، با فشردن  جستجو را انتخاب کنید.
۳. پس از یافتن نام یا شماره تلفن مورد نظر دکمه  را برای برقراری تماس فشار دهید.



فهرست In Call

فهرست های صفحه نمایش گوشی هنگام مکالمه با صفحه اصلی صفحه نمایش متفاوت میباشد و انتخاب های آن در ذیل تشریح شده است.

۱ هنگام مکالمه تلفنی

۱-۱ متوقف ساختن (Hold)

در طول یک مکالمه دکمه [ارسال] را جهت توقف فشار دهید. سپس جهت فعال کردن مجدد دکمه را فشار دهید.

۱-۲ تماس با تلفن دوم

شماره مورد نظر را از حافظه تلفن انتخاب نمایید را فشرده سپس جستجو (search) را انتخاب کنید. برای حفظ شماره گرفته شده از حافظه تلفن حین مکالمه را فشرده سپس Add New (اضافه کردن) را انتخاب کنید.

۱-۳ بین دو مکالمه تلفنی


برای سوئیچ کردن بین دو مکالمه تلفنی را انتخاب کرده سپس Swap را انتخاب کنید و یا فقط را فشار دهید. میتوانید یکی از دو مکالمه را با فشردن دکمه های بالا / پایین انتخاب نمایید.




اگر میخواهید یکی از دو مکالمه را قطع کنید:

مکالمه ای که میخواهید ختم نمایید را فوکوس نمایید، سپس، مکالمه ای که میخواهید ختم گردد فوکوس باشد، کلید را فشار دهید.







۱-۴ پاسخ به تلفن وارده (انتظار مکالمه)



برای پاسخ دادن به تلفن وارده هنگامیکه تلفن زنگ میزند، کلید  را فشار دهید. زمانی که در حال صحبت کردن هستید می توانید توسط صدای مخصوص و علامت روی صفحه نمایش از دریافت تماس دوم مطلع شوید. این ویژگی در صورتی فعال است که شبکه مخابراتی به آن مجهز باشد. برای فعال و یا غیر فعال نمودن این ویژگی لیست ۴-۴-۴ را ملاحظه فرمایید.

اگر انتظار تماس روشن باشد، نخست با فشردن  یا با انتخاب  و سپس Hold/Answer مکالمه اول را متوقف و به تلفنها پاسخ دهید. با انتخاب  مکالمه جاری را ختم و مکالمه منتظر را میتوانید پاسخ دهید.

۱-۵ رد کردن تماس دریافتی


جهت رد کردن تماس دریافتی در حالت بسته بودن گوشی کلید  و در زمان باز بودن درب گوشی کلید  را فشار دهید. حین مکالمه، نیز با فشردن کلید  و انتخاب MultiParty/Reject یا با فشردن  یک تلفن وارده را می توانید رد کنید.

۱-۶ غیر فعال کردن صدای میکروفون


با فشردن کلید  سپس انتخاب Mute حین مکالمه، میتوانید میکروفون را خاموش کنید. گوشی با فشردن  میتواند مجدداً فعال (Un Mute) شود. وقتی که گوشی در حالت Mute باشد، تماس گیرنده صدای شما را نمیتواند بشنود در حالی که شما صدای وی را می شنوید.



۱-۷ فعال ساختن صداهای DTMF، در طول مکالمه تلفنی

برای فعال کردن صداهای DTMF هنگام مکالمه تلفنی، مثلاً برای اینکه گوشی از یک سوئیچبورد اتوماتیک استفاده کند، سپس  را انتخاب کنید، صداهای DTMF فعال است و به همین طریق غیر فعال می گردند.

۱-۸ خواستن پیامها و منوی اصلی Tool Kit

پیامها و گزینه های لیست عمده Sim تول کیت با انتخاب  در دسترس می باشد. این منو زمانی نمایش داده می شود که سیم کارت داخل دستگاه سرویس Sim tool kit را پشتیبانی کند.

۲ تلفن های چندین جانبه یا کنفرانسی

تلفن های چندین جانبه یا کنفرانسی به شما امکان مکالمه همزمان با بیش از یک نفر را فراهم میسازد، البته سیستم مخابراتی شبکه می بایست این امکان را فراهم نموده باشد.

مکالمه چندین جانبه تنها وقتی میتواند فعال باشد که یک مکالمه فعال و یک مکالمه متوقف پشت خط داشته باشید.

زمانیکه مکالمه چندین جانبه فعال است، شما می توانید یک تماس را قطع و یا نفر دیگری را به گروه مکالمه کنندگان اضافه کنید. یا می توانید یک نفر را جدا کنید. (به این معنی که از گروه خارج ولی هنوز به شما وصل است) در مکالمات چندین جانبه، حداکثر پنج مکالمه صورت میگیرد.

در زمان شروع مکالمه شما می توانید گروه شخصی جدیدی را اضافه کنید و یا یک نفر را جدا کنید (به این معنی که از گروه خارج ولی هنوز به شما وصل است). در زمان شروع مکالمه تنها شما می توانید به گروه شخص جدیدی را اضافه کنید.



۲-۱ شماره گیری ثانویه در حین مکالمه اول

برای این منظور، شماره دوم را وارد کرده و را فشار دهید. زمانیکه شماره دوم وصل می‌گردد، تلفن اول خودبخود متوقف می‌گردد. با انتخاب سپس تعویض (Swap) بین تلفن‌ها مکالمه کنید.

۲-۲ فعال ساختن مکالمه تلفنی چندین جانبه

برای این منظور خط متوقف شده Hold را برای تماس جاری متصل نمایید، دکمه و سپس Multiparty/Join All را انتخاب نمایید.

۲-۳ متوقف ساختن مکالمه تلفن چندین جانبه

برای متوقف ساختن مکالمه چندین جانبه، دکمه و سپس Multiparty/Join All را انتخاب نمایید.

۲-۴ فعال کردن مکالمه تلفنی چندین جانبه غیر فعال

برای فعال کردن مکالمه تلفنی چندین جانبه غیر فعال، دکمه و سپس Multiparty/Join All را انتخاب کنید.

۲-۵ اضافه کردن مکالمه جدید به مکالمه چندین جانبه غیر فعال


برای این منظور دکمه و سپس Multiparty/Join All را انتخاب کنید.

۲-۶ نمایش همه شماره تلفن‌ها در مکالمه تلفنی چندین جانبه


برای جستجو در شماره‌های تماس گیرندگان مکالمه چندین جانبه کلیدهای و را فشار دهید.




۲-۷ متوقف کردن یکی از مکالمات تلفنی


برای متوقف کردن یک تلفن کننده منتخب (که شماره اش روی صفحه قرار دارد) از فهرست مکالمات تلفنی چندین جانبه، دکمه  و سپس Multiparty/Exclude را انتخاب کنید.


۲-۸ متوقف کردن تمامی تماسها برای صحبت با یک تماس گیرنده

برای این منظور دکمه  و سپس Multiparty/Private را انتخاب نمایید.

۲-۹ قطع کردن یک مکالمه چندین جانبه

از بین تماسهای دریافتی می توانید یکی از تماسها را به وسیله دکمه  قطع کنید.

برای قطع مکالمه تلفنی چندین جانبه دکمه  و سپس End/ Multiparty را انتخاب کنید.

انتخاب دکمه  و سپس Multiparty/End All همه مکالمات فعال و متوقف را قطع خواهد ساخت.



کدهای دسترسی

جهت جلوگیری از استفاده غیر مجاز از گوشی می توانید از کدهای دسترسی زیر استفاده نمایید. (به استثنای کدهای PUK و PUK2)

Pin کد (۴ تا ۸ رقمی)

Pin کد (کد هویت شخصی) سیم کارت شما را از دسترسی افراد غیر مجاز محفوظ می دارد. این کد معمولاً با سیم کارت عرضه می گردد. وقتی که Pin کد، فعال باشد، هر زمان که گوشی را روشن نمایید می بایست آنرا وارد کنید. اگر غیر فعال باشد مستقیماً به شبکه وصل خواهد شد.

Pin2 کد (4 تا 8 رقمی)

این کد در تنظیم برخی امکانات از قبیل اعلام هزینه مکالمه، شماره گیری ثابت و غیره مورد نیاز می باشد. این امکانات می بایست توسط سیم کارت پشتیبانی گردد.

Puk کد (۴ تا ۸ رقمی)

کد Puk (کلید تغییر شماره شناسایی) برای تغییر کد پین مورد نیاز می باشد این کد می بایست توسط سیم کارت پشتیبانی گردد.

Puk2 کد (4 تا 8 رقمی)

به منظور تغییر کد Pin شماره 2 بکار می رود.

کد امنیتی (۴ تا ۸ رقمی)

کد امنیتی، تلفن نان را از استفاده غیر مجاز نگهداری میکند. کد امنیتی معمولاً با تلفن عرضه می گردد. همچنین جهت پاک کردن همه اطلاعات وارد شده روی تلفن همراه و بازگشت به تنظیمات کارخانه وجود این کد الزامی است. کد از پیش تنظیم شده «۰۰۰۰» می باشد.



۱ پیغامها

- ۱ نوشتن پیغامهای کوتاه
- ۲ نوشتن پیام مولتی مدیا
- ۳ اطلاعات ورودی
- ۴ اطلاعات خروجی
- ۵ پست صوتی
- ۶ اطلاعات خدماتی
- ۷ نمونه ها
- ۸ تنظیمات



۲ ثبت تماس

- ۱ تماس پاسخ داده نشده
- ۲ تماس های رسیده
- ۳ تماس های گرفته شده
- ۴ پاک کردن تماسها
- ۵ هزینه تماس
- ۶ اطلاعات GPRS



۳ پروفایل - زنگ

- ۱ فقط وایر اتور
- ۲ سکوت
- ۳ عمومی

۴ بلند

۵ هدست

۶ استفاده از گوشی در ماشین



۴ دوربین

- ۱ عکس گرفتن
- ۲ گرفتن عکس درحالت های مختلف
- ۳ گرفتن پی در پی تصویر
- ۴ آلبوم شخصی
- ۵ تنظیمات



۵ تنظیمات

- ۱ زنگ ساعت
- ۲ تاریخ ووقت
- ۳ تنظیمات تلفن
- ۴ تنظیمات تماس
- ۵ تنظیمات امنیتی
- ۶ تنظیمات شبکه
- ۷ تنظیم مجدد



۶ برنامه ریز

- ۱ تقویم کاری
- ۲ دفتر تلفن



۹ جاوا

- ۱ برنامه کاربردی
- ۲ دریافت
- ۳ وضعیت حافظه



۱۰ مطلوب



۱۱ سرویس سیم کارت

- این منو به سیم کارت و شبکه وابسته است.



۷ بازی و سرگرمی

- ۱ بازی
- ۲ ماشین حساب
- ۳ پوشه شخصی
- ۴ ساخت ملودی
- ۵ تبدیل واحدها
- ۶ ساعت جهان
- ۷ ضبط صدا
- ۸ فعال کردن اینفرارد
- ۹ پیغام گیر



۸ اینترنت

- ۱ صفحه اصلی
- ۲ علامت
- ۳ فشار دکمه پیغام
- ۴ پروفایل
- ۵ رفتن به LRU





پیغامها [لیست ۱]

این منو شامل وظایفی است که به SMS (سرویس پیام کوتاه)، MMS (سرویس پیام مولتی مدیا)، فرستادن صدا و همچنین خدمات پیغامهای شبکه مربوط میشود.

نوشتن پیغامهای کوتاه [لیست ۱-۱]

متن پیغام را نوشته و تصحیح نمائید، شماره صفحات پیغام را کنترل نمائید.

۱. با فشردن  [انتخاب] وارد منوی پیغامها شوید.
۲. اگر میخواهید یک پیغام جدید بنویسید، گزینه پیغام کوتاه را انتخاب کنید.
۳. برای تسهیل نوشتن، محتوی متن T9 را بکار ببرید. (به صفحه ۳۳ مراجعه شود)
۴. برای ضمیمه ساختن موارد زیر، کلید را فشار دهید.
۵. اگر میخواهید برای متن تان انتخاب های گوناگون تعیین کنید، یا نوشته تان را تکمیل نمائید،  را فشار دهید.

یادداشت

- تلفنی که به سیستم EMS Release مجهز است قابلیت ارسال تصاویر رنگی، زنگ، صدا، سبکهای متن و & را دارا می باشد. بدلیل ناسازگاری این گوشی با دیگر دستگاهها، ممکن است گوشی دریافت کننده موارد ارسالی را بخوبی دریافت نکند.



داخل نمودن

• الگو

حروف ویژه را می‌توانید اضافه کنید.

• تصویر

در پوشه شخصی تصاویر (موجود) یا تصاویری را که برای پیغامهای کوتاه وجود دارد می‌توانید وارد کنید.

• صدا

صداهایی را که برای پیغامهای کوتاه میسراند، می‌توانید داخل کنید.

• نمونه های متنی

از نمونه های متنی قبلا آماده شده در تلفن می‌توانید استفاده کنید.

• دفترچه تلفن

شماره های تلفن یا نشانی های ایمیل را در دفترچه می‌توانید اضافه کنید.

• کارت ویزیت



اطلاعات مربوط تماس خود را می‌توانید به پیغام اضافه کنید.



پیغامها [لیست ۱]

انتخاب

• ارسال

- پیغامهای متنی را می فرستد.
- ۱. شماره های گیرنده را داخل کنید.
- ۲. کلید  را بفشارید تا برای مشترکین بیشتری پیغام را ارسال نمایید.
- ۳. در دفترچه تلفن شماره های تلفن را می توانید اضافه کنید.
- ۴. پس از داخل نمودن شماره ها  را فشار دهید.

• ذخیره

پیامهای کوتاه را در اطلاعات خروجی نگهداری میکند.

• فونت

می توانید سایز و نوع فونت را انتخاب نمایید.

• رنگ

رنگ پس زمینه و یا نوشته را می توانید تعیین کنید.

• راست و یا چپ چین کردن متن

محتویات پیغامها را بطرف راست مرکز یا چپ می توانید بیاورید.

• لغتنامه T9

ابتدای کلمه خود را می توانید وارد کنید لغتنامه به صورت اتوماتیک بقیه کلمه را تایپ می کند. این منو فقط زمانی میتواند نشان داده شود که حالت (T9Abc/T9abc/T9ABC) پیش بینی شده باشد.

• T9 زبان

حالت T9 (input) را انتخاب کنید.


• خروج

هنگام نوشتن، اگر خروج را فشار دهید، نوشتن پیام را قطع و به منوی پیام بر می گردید، پیامی را که نوشته اید، حفظ نشده است.



نوشتن پیام مولتی مدیا [لیست ۱-۲]

قادر به نوشتن و تصحیح پیام مولتی مدیا هستید. حجم پیام خود را کنترل نمایید.

۱. به منوی پیام با فشردن  [انتخاب] داخل شوید.
۲. اگر میخواهید یک پیام جدید بنویسید، گزینه نوشتن پیام چندین جانبه را انتخاب کنید.
۳. میتوانید پیام جدید تنظیم کنید یا یکی از نمونه های مولتی مدیایی که قبلا تهیه شده را انتخاب نمایید.
۴. را فشار دهید تا الگو، تصویر، صدا، نمونه های متنی، دفترچه تلفن یا کارت ویزیت را اضافه نمایید.

انتخاب ها

- **نمایش قبل از ارسال**
پیامهای مولتی مدیایی را که نوشته اید، قبل از ارسال مشاهده کنید.
- **فرستادن**
میتوانید پیغامهای مولتی مدیا را برای چندین گیرنده بفرستید. می توانید پیام را طوری تنظیم کنید که بعدا ارسال گردد.
- **ذخیره**
پیغامهای مولتی مدیا را در اطلاعات خروجی یا بعنوان نمونه می توانید ذخیره کنید.
- **اضافه نمودن اسلاید**
می توانید به قبل یا بعد از اسلاید کنونی یک اسلاید اضافه نمایید.
- **رفتن به اسلاید بعدی**
به اسلاید قبلی یا بعدی می توانید حرکت کنید.
- **پاک کردن اسلاید**
اسلایدهای کنونی (جاری) را می توانید پاک کنید.



پیغامها [لیست ۱]

- **تنظیم فرمت اسلاید**
 - تنظیم تایمر
برای اسلاید، متن، تصویر و صدا، تایمر را می‌توانید تنظیم کنید.
 - **Swap متن و تصویر**
تصاویر و متون پیام را می‌توانید در اسلاید تغییر دهید.
- **پاک کردن مدیا**
تصاویر و متون پیغام را می‌توانید در اسلاید پاک کنید.
این انتخاب فقط در صورت وجود یک مدیا نشان داده می‌شود.
- **اضافه کردن T9 دفترچه لغت**
کلمه خود را اضافه کنید.
این منو فقط زمانی فعال است که ویرایش حالت پیش بینی فعال باشد.
- **T9 زبان**
حالت T9 را انتخاب کنید.
- **خروج**
می‌توانید به منوی پیغام بر گردید.

توجه

- اگر از تصویر با حجم K15 در نوشتن پیغام مالتی مدیا استفاده نمائید، زمان Load شدن آن حداقل ۱۵ دقیقه به طول خواهد انجامید. در مدت Load هیچ کلیدی را نمی‌توانید فعال کنید. پس از ۱۵ ثانیه نوشتن پیغام مولتی مدیا میسر است.




طریقه کاربرد T9

T9 به شما امکان میدهد تا متن پیام را بسرعت داخل کنید. در T9 شما فقط بفشردن ابتدای لغت مورد نظر نیاز دارید.

این امکان فقط در مورد لغتهای موجود در لغتنامه دستگاه صادق است.

• نوشتن کلمات با استفاده از T9

۱. با بکار بردن 2^{abc} تا 9^{9999} نوشتن یک کلمه را آغاز کنید. هر کلید را فقط یکبار برای یک کلمه فشار دهید. بطور مثال برای نوشتن "Girl" را فشار دهید

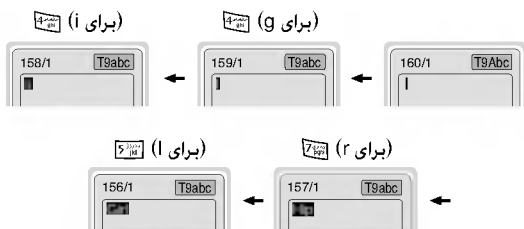

در هنگام وارد نمودن حروف ظاهر متن شما تغییر می یابد تا حصول نتیجه نهایی به وارد کردن حروف ادامه دهید.

برای حذف یک حرف بطرف چپ C را فشار دهید.


برای وارد کردن چند عدد $\#*$ را پائین نگهداشته و شماره ها را داخل کنید. اگر $*0$ را پائین بگیرید، نوع زبان را میتوانید تغییر دهید.

همچنین این تلفن به سه حالت زیر مجهز است.


Multitap (ABC/abc), Predictive (T9Abc/T9ABC/T9abc), Numeric (123)
بدهید، کلید $\#*$ را فشار دهید.






پیغامها [لیست ۱]

شيوه هاي ديگر:  را فشرده و الگوها را انتخاب کنید. حرف مورد نظر را انتخاب و Select را فشار دهید.


۲. پس از وارد کردن حرف از درست بودن آن اطمینان حاصل کنید.

اگر حرف درست است:  را فشرده و حرف بعد را بنویسید.

اگر حرف درست نیست: توسط ,  حرف قبل یا بعد را اصلاح کنید.

شيوه هاي ديگر: اگر حرفي را که ميخواهيد در گوشي موجود نباشد مي توانيد حرف خود را اضافه کنید.  را در Predictive Edit Mode فشار دهید، منوي دفترچه لغت T9 را اضافه کنید. موارد زير را مي توانيد ببينيد.



۳. براي داخل کردن علايم نقطه گذاري  را مکرر تا زماني فشار دهید که علامت مطلوب پديد آيد.

زبان هاي T9






- بوسيله انتخاب منو مي توانيد زبانهاي T9 را انتخاب کنید. مي تونيد حالت خاموش بودن T9 را نيز انتخاب نماييد، (در شرايط نرمال T9 روشن است).



اطلاعات ورودی [لیست ۱-۳]

وقتی که پیام برایتان می‌رسد، آگاهتان خواهد ساخت، این پیامها در اطلاعات ورودی طبقه بندی خواهد شد. و شما از آن مطلع خواهید شد. در اطلاعات ورودی هر پیام توسط علامت می‌تواند مشخص شود. برای تفصیل، به Icon Directive نگاه کنید.


Icon Directive

- [] پیام چندین جانبه
- [] پیام طبقه بندی شده
- [] پیام سیم کارت
- [] خواندن
- [] پیامهای مولتی مدیاج

اگر تلفن "برای پیام سیم کارت جا ندارد" را نشان بدهد، باید برخی از پیامهای موجود در اطلاعات ورودی یا اطلاعات خروجی را پاک کنید. و اگر پیام "برای پیام جا ندارد" را نشان بدهد، می‌بایست از طریق پاک کردن پیامها، مدیا و برنامه‌ها فضای خالی را به وجود آورید.

* پیام سیم کارت

پیام سیم کارت بمعنای پیامیست که بطور استثنائی در سیم کارت ذخیره شده، این پیام را می‌توانید به تلفن انتقال بدهید.

برای پیامهای مولتی مدیا شما باید برای آماده شدن و پروسس شدن منتظر پیام شوید. برای آگاهی بیشتر به [لیست ۱-۲-۸-۱] مراجعه کنید. برای خواندن یک پیام  را فشار دهید تا یکی از پیامها را انتخاب کنید.

پاسخ دادن به پیام

به فرستنده می‌تواند پاسخ دهد.



پیغامها [لیست ۱]

انتقال (تلفن دیگر)

یک پیام منتخب را به جانب دیگر می‌توانید بفرستید.

برگشت مکالمه

با شماره تلفن دریافت شده می‌توانید تماس بگیرید.

پاک کردن

پیغام را می‌توانید حذف کنید.

استخراج

قادر به استخراج تصویر، صدا و متن می‌باشید. آنها در پوشه شخصی یا دفترچه تلفن حفظ خواهند شد.

مشاهده اطلاعات

در مورد پیامهای دریافت شده، نشانی فرستنده، موضوع آنها (فقط برای پیام مولتی مدیا)، روز و ساعت، نوع و اندازه پیام را می‌توانید ببینید.

پاسخ (فقط در مورد پیام مولتی مدیا بکار میرود)

پیامهای مولتی مدیا را میتوانید پاسخ بدهید.

* دریافت (در مورد دریافت پیام آگاهی دهنده)

اگر پیغام مالتی مدیا بر روی حالت Auto download off تنظیم شده باشد شما تنها از این پیغامها مطلع خواهید شد. برای دریافت پیغام نیاز به انتخاب Receive دارید.

اطلاعات خروجی [لیست ۲-۱]


با ورود به این منو می‌توانید لیست پیامهای ارسال شده و نشده خود را مشاهده نمایید. عملکرد Browsing مانند اطلاعات ورودی میباشد.



Icon Directive

[] ارسال شده

[] ارسال نشده

[] تایید ارسال

* پس از ارسال پیام

انتقال

پیغام جاری را برای مشترکین دیگر میتوانید ارسال کنید.

پاک کردن

پیغامهای جاری را می توانید حذف کنید.

نمایش اطلاعات

در مورد پیغامهای اطلاعات خروجی، آدرس گیرنده، موضوع (تنها پیام مولتی مدیا)، زمان و تاریخ پیغام، نوع پیغام، سایز پیغام، اطلاعات را نشان می دهد.

* زمانیکه پیغام را ارسال نکرده اید.

ویرایش

می توانید پیغام را ویرایش کنید.

ارسال

می توانید پیغام را ارسال کنید.

حذف کنید

می توانید پیغام جاری را حذف کنید.

نمایش اطلاعات

می توانید اطلاعات مربوط به پیغامهای اطلاعات خروجی را مشاهده کنید.



پیغامها [لیست ۱]


پست صوتی [لیست ۵-۱]

گوش دادن به پست صوتی [لیست ۱-۵-۱]

پست صوتی را می‌توانید بشنوید.

فرستادن صدا [لیست ۲-۵-۱]

اگر شبکه این سیستم را پشتیبانی می‌کند می‌توانید، صدای فرستاده شده را دریافت کنید. وقتی که یک پست صوتی جدید می‌رسد، نشانه روی صفحه نشان داده خواهد شد.

۱. کلید  را در حال انتظار پائین نگهدارید.

۲. منوهای کوچک زیرین را بررسی کنید.

• صفحه اصلی

با انتخاب صفحه اصلی صداهای فرستاده شده را می‌توانید بشنوید.

• رومینگ

با در اختیار داشتن این سرویس در خارج از کشور هم می‌توانید به پیغامهای صوتی ارسال شده گوش فرا دهید.

اطلاعات خدماتی [لیست ۱-۶]

(مربوط است به شبکه و اشتراک)

پیامهای اطلاعاتی پیامهایی هستند که توسط شبکه مخابرات برای مشترکین ارسال می‌گردد. این پیغامها حاوی اطلاعاتی چون گزارشهای مربوط به هوا، اخبار ترافیک، تاکسی، داروخانه ها و بهای اسناد بهادر را فراهم مینماید. هر کدام از اطلاعات فوق نیاز به شماره خاص خود را دارد که برای استفاده از آنها باید با شبکه تماس بگیرید.



خواندن [لیست ۱-۶-۱]

۱. وقتی که یک پیام خدمات اطلاعاتی دریافت و خواندن را انتخاب نمودید پیام روی صفحه نشان داده خواهد شد. با انتخاب «یا» ، پیام دیگری را می‌توانید مطالعه کنید.
۲. پیام تا وقتی نشان داده خواهد شد که پیام دیگر برسد.

دریافت [لیست ۱-۶-۲]

- **بلی**
اگر منو را انتخاب کنید، تلفن تان خدمات اطلاعاتی را دریافت خواهد کرد.
- **خیر**
اگر این منو را انتخاب کنید تلفن تان پس از این سرویس خدمات اطلاعات دریافت نخواهد کرد.

زنگ [لیست ۱-۶-۳]

- **آری**
وقتی که شماره های پیام سرویس خدمات اطلاعاتی دریافت میکنید، تلفن تان زنگ خواهد زد.
- **خیر**
با انتخاب این گزینه حتی در صورت دریافت خدمات اطلاعاتی گوشی شما زنگ نخواهد زد.


زبان [لیست ۱-۶-۴]

- با فشردن زبان مطلوب خود را می‌توانید انتخاب کنید، سپس پیام خدمت اطلاعاتی به زبان منتخب تان نمایش داده خواهد شد.



پیغامها [لیست ۱]

موضوع (مربوط است به شبکه و اشتراک) [لیست ۵-۶-۱]

- **اضافه کردن**
در حافظه تلفن شماره های پیام خدمات اطلاعاتی را می توانید به اسامی خود اضافه کنید.
- **نمایش لیست**
شماره های پیام خدمت اطلاعاتی را که اضافه نموده اید، می توانید ببینید اگر  را فشار بدهید، گروه پیام اطلاعاتی را که اضافه نموده اید، می توانید تصحیح و حذف کنید.
- **لیست فعال**
در لیست فعال، شماره های پیغام خدمات اطلاعاتی را می توانید انتخاب کنید، اگر یک شماره خدمت اطلاعاتی را فعال نمایید، پیامهای ارسالی این شماره را می توانید دریافت کنید.

نمونه ها [لیست ۱-۷]

متن [لیست ۱-۷-۱]

در تلفن شمار ۱۱ نمونه متنی وجود دارد، نمونه های از قبل تعیین شده را می توانید به نمونه های دلخواه خود تبدیل نموده یا Empty را می توانید پر کنید.

چندین جانبه [لیست ۱-۷-۲]

- میتوانید انتخابهای زیر را بکار ببرید.
- ویرایش** : نمونه های چندین جانبه (مولتی مدیا) را می توانید تصحیح کنید.
- اضافه کردن جدید** : نمونه های جدید مولتی مدیا را به شما نشان میدهد.
- نوشتن پیام** : با استفاده از نمونه های مولتی مدیا، می توانید پیامهای جدید مولتی مدیا بنویسید.
- پاک کردن** : نمونه های مولتی مدیا را می توانید حذف کنید.



کارت ویزیت [لیست ۳-۷-۱]

کارت ویزیت خویش را می‌توانید ایجاد کنید. نام، شماره تلفن، شماره فکس و ایمیل را داخل کنید.

تنظیمات [لیست ۸-۱]

پیام کوتاه [لیست ۱-۸-۱]

• انواع پیام

متن، صدا، پیچینگ، ایمیل، 400X، ERMES، معمولاً، نوع پیام به متن تنظیم می‌گردد. می‌توانید بنا به مقتضی دستگاه پیام متن را به انواع دیگر آن تبدیل کنید.

• مدت اعتبار

این خدمت شبکه به شما امکان می‌دهد که پیام‌های متنی شما تا چه مدت در مرکز پیام حفظ باشد.

• گزارش

در صورت انتخاب گزینه بلی می‌توانید ببینید پیامتان با موفقیت ارسال شده است.

• پاسخ از طریق مرکز سرویس یکسان

در صورت ارسال پیام از سوی مقابل شما قادر به پرداخت هزینه آن هستید.

• مرکز اس ام اس

اگر می‌خواهید که پیام متن را بفرستید، نشانی مرکز اس ام اس را از این منو می‌توانید دریافت کنید.



پیغامها [لیست ۱]

پیام چندین جانبه [لیست ۲-۸-۱]

- **مدت اعتبار**
این سرویس به شما اجازه میدهد تا مدت زمانی را که پیامهای تان در مرکز پیام نگهداری خواهد شد، تعیین نماید.
- **گزارش ارسال**
اگر آری در این منو انتخاب شود، می توانید ببینید که آیا پیام تان با موفقیت فرستاده شده یا نه.
- **دریافت اتوماتیک**
اگر روشن را انتخاب کنید، پیامهای مولتی مدیا خودبخود دریافت می شوند. اگر خاموش را انتخاب کنید فقط پیام آگاهی دهنده را در اطلاعات ورودی میتوانید دریافت کنید. سپس این اطلاعات را میتوانید ببینید.
- **تنظیمات شبکه**
سرور پیام را بکار ببرید، URL را از سرور پیغام مولتی مدیا دریافت کنید.
- **انواع پیغامهای مجاز**
شخصی : پیامهای شخصی
تبلیغات : پیامهای بازرگانی.
اطلاعات : اطلاعات ضروری.

شرح حافظه [لیست ۳-۸-۱]

قسمت خالی و انتقال شده فضای سیم کارت را می توانید مشاهده کنید.



ثبت تماس [لیست ۲]

تماس پاسخ داده نشده [لیست ۱-۲]

این منو شماره های اخیرا پاسخ داده نشده را نشان میدهد. شما می توانید با این شماره ها تماس گرفته آنها را ذخیره کنید و ساعت و تاریخ آن را مشاهده نمایید.

تماس های رسیده [لیست ۲-۲]

این منو شماره های اخیرا دریافت شده را نشان میدهد. شما می توانید با این شماره ها تماس گرفته آنها را ذخیره کنید و ساعت و تاریخ آن را مشاهده نمایید.

تماس های گرفته شده [لیست ۳-۳]

این منو شماره های اخیرا گرفته شده را نشان میدهد. شما می توانید با این شماره ها تماس گرفته آنها را ذخیره کنید و ساعت و تاریخ آن را مشاهده نمایید.

پاک کردن تماسها [لیست ۴-۳]

مکالمات تلفنی اخیرا از دست رفته، ورودی، خروجی، یا همه تماسها را میتوانید پاک کنید.

هزینه تماس [لیست ۵-۲]

در داخل این زیر فهرستها، مدت و بهای مکالمات تلفنی تان را میتوانید ببینید.



ثبت تماس [لیست ۲]

زمان مکالمه [لیست ۱-۵-۲]

این عمل به شما اجازه دیدن زمان کلیه تماسها را به صورت ساعت، دقیقه و ثانیه می دهد. تایمر تماس را نیز مجدداً می توانید صفر کنید.

۱. [لیست] را در حال انتظار فشار بدهید.
 ۲. [2abc] را برای تماس مستقیم فشار دهید، یا [*)] را برای وارد شدن به ثبت تماس بکار برده، سپس هزینه تماس را انتخاب کنید.
 ۳. برای فعال کردن زمان مکالمه [F] را فشار بدهید.
- ۵ منوی زیر نمایان میشود: آخرین تماس، تمام تماسها، تماسهای دریافتی، تماسهای ارسالی، تنظیم کلی.

هزینه تماس [لیست ۲-۵-۲]

این امکان به شما اجازه میدهد بهای آخرین تماس، بهای باقیمانده و تعیین مجدد بها را ببینید. برای تعیین مجدد بها، به PIN۲ کد (پین کد) نیاز دارید.

۱. [لیست] را در حال انتظار فشار بدهید.
 ۲. [2abc] را برای تماس مستقیم فشار دهید، یا [*)] را بکار ببرید تا وارد ثبت تماس شوید و سپس هزینه تماس را انتخاب کنید.
 ۳. برای فعال کردن بهای مکالمه [F] [انتخاب کنید] را فشار بدهید.
- ۴ مینوی آتی قرار داد: آخرین تماس، تمام تماسها، باقیمانده و تنظیم کلی.



- هزینه اصلی بهای مکالمات که توسط شرکت مخابرات بر روی قبض مشخص و ارسال میگردد ممکن است به دلیل هزینه مالیات و & متفاوت باشد.



تنظیمات [لیست ۳-۵-۲] (مربوط به سیم کارت است)

• تنظیم تعرفه

نوع پول و واحد پولی را میتوانید تعیین کنید. برای بدست آوردن نرخ تغییر واحد، با شبکه خویش تماس بگیرید. برای انتخاب پول یا واحد در این منو به بین کد ۲ نیاز دارید.

اگر میخواهید نشانه های €، £، \$ را وارد کنید، تمام واحدهای پول رایج را پاک کرده سپس کلید را فشار دهید. اگر میخواهید نشانه ها را تغییر دهید، کلید را دوباره فشار دهید.

یادداشت

- وقتی که همه واحدها مورد استفاده قرار گیرد، جز تلفن های اضطراری هیچ تلفن دیگر صورت نمیگیرد. شما به بین کد ۲، برای تجدید بهای یک مکالمه تلفنی، که به سیم کارت مربوط میشود، نیاز دارید.

• تنظیم اعتبار

این سرویس شبکه به شما امکان می دهد بر مبنای رقم مورد نظر شما کارکرد گوشی تنظیم گردد. اگر گزینه خواندن را انتخاب نمایید، میزان اعتبار باقی مانده مشخص می شود. اگر گزینه تغییر دهید را انتخاب کنید، میزان اعتبارتان را میتوانید تغییر دهید.

• نمایش خودکار

این سرویس شبکه به شما اجازه میدهد تا بهای آخرین تلفن تان را بطور خودبخود ببینید. اگر آری انتخاب شود، آخرین بها را پس از ختم مکالمه می توانید ببینید.



ثبت تماس [لیست ۲]

اطلاعات GPRS [لیست ۲-۶]

حجم اطلاعات انتقال داده شده از شبکه از طریق GPRS (جی پی آر اس) را نمایش می دهد و نیز مدت زمان اتصال به شبکه مشخص می گردد.

زمان مکالمه [لیست ۲-۶-۱]

مدت زمان آخرین مکالمه و همه مکالمه ها را می توانید ببینید. زمان مکالمه را مجدداً می توانید انتخاب کنید.

حجم اطلاعات [لیست ۲-۶-۲]

ارسال شده، دریافت شده یا تمامی حجم اطلاعات و را می توانید ببینید.



پروفایل - زنگ [لیست ۳]

در این منو، زنگهای گوشی را برای محیط های مختلف میتوانید انتخاب کنید.

۱. [لیست] را در حال انتظار فشار دهید.
۲. [فشار] را برای تماس مستقیم فشار دهید یا [بازگشت] را بکار ببرید.
۳. شما با فشردن کلید [بازگشت] در حال انتظار نیز به این منو میتوانید مستقیماً داخل شوید.
۴. وقتی که درب گوشی شما بسته است با فشردن کلید کناری به مدت زیاد پروفایل منو فعال می گردد.

فقط ویبراتور [لیست ۱-۳]

اگر می خواهید گوشی فقط در حالت ویبراتور باشد در پروفایل حالت ویبراتور را فعال نمایید.

سکوت [لیست ۲-۳]

اگر می خواهید گوشی فقط در حالت سکوت باشد در پروفایل حالت سکوت را فعال نمایید.

عمومی [لیست ۳-۳]

اگر میخواهید زنگ گوشی در حالت عمومی باشد در پروفایل حالت عمومی را فعال نمایید.

بلند [لیست ۴-۳]

اگر در محیط شلوغی هستید، پروفایل را به حالت بلند می توانید انتخاب کنید.

هدست [لیست ۵-۳]

زمان استفاده از هدست، در منوی پروفایل هدست را انتخاب نمایید.



پروفایل - زنگ [لیست ۳]

استفاده از گوشی در ماشین [لیست ۳-۶]

وقتی که Hands Free kit را فعال میسازید، پروفایل را در حالت ماشین قرار دهید.

یادداشت

- پروفایل هدست و ماشین فقط زمانی می‌توند فعال شود که هندزفری کیت یا میکروفون گوش به هدست نصب شده باشد. اما، ویژگی‌هایشان می‌تواند شخصی شده باشد.

فعال شدن [لیست ۳-X-۱]

پروفایل‌های منتخب را فعال کنید.

شخصی [لیست ۳-X-۲]

هر کدام بغیر از حالت ویبراتور به صورت زیر دارای زیر فهرست می‌باشند.

نوع زنگ تماس

با این امکان شما می‌توانید گوشی را در حالت انواع زنگ، ویبراتور و غیره قرار دهید.

نوع صدای زنگ

به شما امکان تنظیم نوع زنگ مطابق با محیط اطراف را میدهد.

صدای زنگ

صدای زنگ گوشی را با توجه به محیط می‌توانید کم و یا زیاد نمایید. صدای خاموش و روشن شدن و تمامی صداها مطابق با تنظیم صدای زنگ تغییر می‌کنند.

آموزش کار با گوشی



زنگ پیغام

با فعال نمودن این امکان در زمان رسیدن پیغام می توانید نوع زنگ را انتخاب کنید.

صدای ولوم صفحه کلید

قادر به کم و یا زیاد کردن صدای صفحه کلید می باشید.

زنگ صفحه کلید

با فعال نمودن این امکان می توانید نوع زنگ را برای صفحه کلید انتخاب کنید.

ضربه آهنگ

با توجه به محیط اطراف می توانید ضربه آهنگ را تنظیم نمایید.

قطع و وصل کردن ولوم

اجازه تنظیم قطع یا وصل بودن ولوم برای تنظیم محیط را می دهد.

روشن (فعال)/خاموش (غیرفعال)

می توانید با توجه به محیط اطراف روشن (فعال)/خاموش (غیرفعال) را قطع و وصل کنید.



پروفایل - زنگ [لیست ۳]

جوابگویی خودکار

این عملکرد فقط زمانی فعال است که گوشی در حالت هدست یا هندز فری باشد.

- خاموش : جوابگویی خودکار فعال نیست.
- بعد از ۵ ثانیه : پس از ۵ ثانیه تلفن خودبخود پاسخ خواهد داد.
- بعد از ۱۰ ثانیه : پس از ۱۰ ثانیه تلفن خودبخود پاسخ خواهد داد.

تغییر اسم [لیست ۳-X-۳]

به استثنای وایرلور، هدست و ماشین (car) نام منوی پروفایل را میتوانید تغییر دهید.

یادداشت

- اگر هندزفری کیت را به تلفن متصل بسازید، حالت ارتعاش مربوط به نوع زنگ یا زنگ پیغام را نمی‌توانید بکار ببرید. در منوی ماشین، منوهای زیر وجود دارند:
- نوع زنگ تماس : زنگ، سایلنت (سکوت)
- نوع زنگ پیغام : زنگ زدن مداوم، یک بار زنگ زدن موقتی، خاموش



دوربین [لیست ۴]

هنگامیکه در حرکت هستید با استفاده از دوربین قادر به گرفتن عکس از صحنه های گوناگون هستید.

عکس گرفتن [لیست ۱-۴]

۱. گزینه دوربین را انتخاب نموده و سپس رافشا ریدهید. اگر می‌خواهید مستقیماً به این منو بروید را به مدت طولانی فشار بدهید.
۲. روی موضوع تمرکز کنید تا تصویر را بگیرد و سپس یا رافشا ریدهید.
۳. برای ذخیره عکس گرفته شده یا رافشا ریدهید.

مرجع

• پنجره تنظیمات

با فشردن کلید کناری بالای حاشیه یا کلید () اندازه تصویر، نور، روشنی، رنگ، چرخش و فاصله را می‌توانید کنترل کنید.

- کیفیت : QVGA 320*240 ، VGA 640*480 ، PB: 48*48 ، QQVGA 160*120

- فلاش : خاموش / روشن

- چرخش : تصویر را ۹۰ درجه خلاف دوران ساعت، می‌چرخاند

- کیفیت تصویر: بالا، نرمال و پائین






- بزرگنمایی : ۱x ، ۲x ، ۳x حالت دیفالت ۱x است.

- رنگ : رنگ حقیقی، سیپا، سیا/سفید.



دوربین [لیست ۴]

فعال ساختن یک کلید

- $\left[\begin{smallmatrix} \text{P} \\ \text{A} \end{smallmatrix} \right]$: آیتمی را که تنظیم میکنید جابجا کنید.
-  : تصویر را گرفته و ذخیره میکند.
-  : به منوی قبلی برگشته یا از حالت دوربین خارج شوید.
-  : در تعین برنامه، حالت دیفالت را تغییر داده و با زاویه ۹۰ درجه تصویر را میتوانی چرخش دهید.
-  : آیتمی را که تنظیم می کنید جابجا کنید.
-  : تصویر را گرفته و ذخیره کنید.


گرفتن عکس در حالت های مختلف [لیست ۲-۴]

عکس را با پس منظره های گوناگون میتواند بگیرد.
به علاوه با فشردن $\left[\begin{smallmatrix} \text{P} \\ \text{A} \end{smallmatrix} \right]$ میتواند فریم دلخواه را انتخاب کنید.

مرجع

- در این حالت تنظیم کیفیت و رنگ عکس را نمیتوانید تغییر دهید.

گرفتن پی در پی تصویر [لیست ۳-۴]

میتوانید در این حالت حداکثر ۹ عکس را پی در پی بگیرید.
پس از گرفتن عکس با فشردن $\left[\begin{smallmatrix} \text{P} \\ \text{A} \end{smallmatrix} \right]$ آنرا میتوان دید.
با فشردن  میتوان عکس را ذخیره کرد.

مرجع

- اگر کیفیت ۴۸*۶۴۰ را انتخاب کنید فقط میتوان ۳ عکس بگیرید و با کیفیت ۲۴۰*۳۲۰، تعداد ۶ عکس را بگیرید.

تعداد عکس



آلبوم شخصی [لیست ۴-۴]

یک تصویر را انتخاب و می‌توانید بفرستید همچنین تصویر مربوطه را می‌توانید، به عنوان پس زمینه صفحه نمایش گوشی خود انتخاب نمایید.

همه تصاویر [لیست ۴-۴-۱]

حداکثر ۹ تصاویر را به ترتیب می‌توانید ببینید.

تصاویر عمومی [لیست ۴-۴-۲]

غیر از تصاویرهای فریم دار و دفترچه تلفن، همه تصاویر را می‌توانید ببینید.

حالت تصویر [لیست ۴-۴-۳]

همه تصویرها را می‌توانید ببینید.

تصاویر دفترچه تلفن [لیست ۴-۴-۴]

همه تصویرهای دفترچه تلفن را می‌توانید ببینید.

• انتخاب

- نمایش مجدد : حداکثر ۹ نمونه را در یک صفحه می‌توانید ببینید.
- نوشتن پیغام های مولتی مدیا : از طریق MMS، یک عکس را می‌توانید ارسال کنید.
- تنظیم پس زمینه : یک تصویر را به عنوان پس زمینه صفحه نمایش انتخاب نمایید.
- پاک کردن : یک تصویر را می‌توانید حذف کنید.
- ویرایش عنوان : عنوان عکس را می‌توانید تعیین کنید.

تنظیمات [لیست ۴-۵]

شرح حافظه [لیست ۴-۵-۱]

حجم استفاده شده و باقی مانده حافظه را می‌توانید ببینید.

پاک کردن آلبوم [لیست ۴-۵-۲]

همه عکس های ذخیره شده در حافظه را می‌توانید پاک کنید.



تنظیمات [لیست ۵]

- برای راحتی خود میتوانید منوهای زیر را تنظیم نمایید.
۱. [لیست] رادرحال انتظار فشاربدهید.
 ۲. برای رفتن مستقیم به تنظیمات [OK] را فشاربدهید.

زنگ ساعت [لیست ۵-۱]

- تا ۵ نوع زنگ میتوانید برای ساعت تنظیم کنید.
۱. گزینه روشن را انتخاب نموده وساعت مورد نظر خود را برای زنگ زدن وارد نمایید.
 ۲. شما میتوانید برنامه موردنظر خود را برای زنگ زدن تعریف کنید مثلاً: یکبار، دوشنبه تا جمعه، جمعه تا شنبه، هرروز.
 ۳. نام زنگ را مطلوب را انتخاب و [OK] را فشاربدهید.
 ۴. نام زنگ را تصحیح و [OK] را فشاربدهید.
 ۵. اگرزنگ ساعت را درحالت خاموش بودن زنگ (Power off Alarm) تنظیم کنید، حتی اگر تلفن خاموش باشد الارم (زنگ) درزمان مشخص به صدا درخواهد آمد.

تاریخ ووقت [لیست ۵-۲]

عملیات مرتبط به تاریخ ووقت را میتوانید تنظیم کنید.

تنظیم تاریخ [لیست ۵-۲-۱]

تاریخ روز را میتوانید وارد کنید.

شکل دادهها [لیست ۵-۲-۲]

فرمت تاریخ را مانند YYYY/MM/DD.DD/MM/YYYY.MM/DD/YYYY (سال: Y/ماه: M/روز: D) میتوانید تنظیم کنید.

تنظیم زمان [لیست ۵-۲-۳]

وقت (زمان) کنونی یا جاری را میتوانید داخل کنید.

فرمت زمان [لیست ۵-۲-۴]

فرمت ساعت را بین ۲۴ ساعت و ۱۲ ساعت میتوانید تنظیم کنید.



تنظیمات تلفن [لیست ۳-۵]

عملیات مربوط به تلفن رامیتوانید انتخاب کنید.

تنظیمات صفحه نمایش [لیست ۱-۳-۵]

- **صفحه زمینه**
در حالت انتظار، تصاویر پس زمینه رامیتوانید انتخاب کنید.
- **دیفالت**
یک تصویر یا انیمیشن رابه عنوان پس زمینه با فشردن [F5] میتوانید انتخاب کنید.
- **پوشه شخصی**
یک تصویر یا یک انیمیشن رابه عنوان پس زمینه میتوانید انتخاب کنید.
- **تماس دریافتی**
انیمیشن راحین اینکه تلفن دریافت میکنید میتوانید انتخاب کنید.
- **تماس گرفته شده**
انیمیشن را حین اینکه تلفن میکنید میتوانید انتخاب کنید.
- **پیام خوشامد گویی**
اگرگزینه روشن را انتخاب کنید متنی را که در حال انتظار نشان داده میشود میتوانید اصلاح کنید.
- **هر کال بارینگ مینیو، مینیوهای کوچک زیر را دارا می باشد.**
- **مدت روشن بودن صفحه نمایش**
مدت روشنی صفحه نمایش رامیتوانید تعیین کنید.
- **میزان نور صفحه نمایش**
با فشردن [F6] نور صفحه نمایش را تعیین کنید.
- **دریچه اطلاعات**
وضع کنونی منوی منتخب راقبل ازگشودن منومیتوانید مشاهده نمایید. این وضع در پایان صفحه نمایش نشان داده میشود.



تنظیمات [لیست ۵]

- رنگ منو
میتوانید میان ترکیبات گوناگون رنگ منو را انتخاب کنید.


Sub LCD [لیست ۲-۳-۵]

- صفحه نمایش : با فشردادن کلید کناری، تصریر رامیتوانید تنظیم شخصی کنید.
- نمایش ساعت : در LCD کوچک میتوانید مدت زمان نمایش ساعت را روی صفحه نمایش تعیین کنید.
- وضوح روشنایی : در LCD کوچک می توانید وضوح روشنایی را روی صفحه نمایش تعیین کنید.
- رنگ قلم : رنگ فونتی که روی LCD کوچک نمایش داده میشود را میتوانید تنظیم کنید.

زبان [لیست ۳-۳-۵]

- میتوانید زبان تلفن تان را تغییر بدهید.
- این تغییر به زبان On path mode نیز اثر خواهد گذاشت.

تنظیمات تماس [لیست ۴-۵]

- میتوانید با فشردن  [انتخاب] درمنوی تنظیمات منوی مربوط به یک مکالمه تلفنی را فعال کنید.

انتقال مکالمه [لیست ۱-۴-۵]

سررویس انتقال مکالمه به شما اجازه میدهد تا تماسهای صوتی، تماسهای فکس، تماس داده هارابه شماره دیگر منتقل کند.

- کل تلفن های صوتی
تمامی تلفنهای صوتی را انتقال میدهد.
- اگر مشغول باشد
در صورت مشغول بودن، تلفن های صوتی را انتقال میدهد.



- **اگر پاسخ ندهید**
در صورتیکه پاسخ ندهید تماسها را انتقال میدهد.
- **اگر در دسترس نباشد.**
وقتی که تلفن خاموش یا در دسترس باشد تماسها را انتقال میدهد.
- **همه تلفنهای اطلاعاتی**
با یک ارتباط کامپیوتری به یک شماره انتقال میدهد.
- **همه تماسهای فاکس**
یک شماره با ارتباط فکس را بدون قید و شرط انتقال میدهد.
- **انصرافات انتقال مکالمه**
تمام دستورات انتقال مکالمه را لغو میکند.

زیرفهرست

منوهای انتقال مکالمه در زیر نشان داده شده است.

- فعال

سرویس مواصلاتی را فعال میسازد.

به مرکز پیام صوتی

انتقال تماسها به مرکز پیغامها این عملکرد در تمامی تماسهای تلفن های اطلاعاتی و همه فکسها میسر نیست.

به شماره دیگر

شماره مورد نظر را برای انتقال وارد میکند.

به شماره های دلخواه

شماره اخیر را ذخیره میکند.

- لغو

سرویس مواصلاتی را غیرفعال میسازد.

- نمایش وضعیت

وضع سرویس مواصلاتی را میتوان دید ببینید.



تنظیمات [لیست ۵]

حالت پاسخ [لیست ۲-۴-۵]

- **تلفن درحالت باز**
اگر این منورا انتخاب کنید تماس وارده رافقط توسط بازکردن درب میتوانید دریافت کنید.
- **فشار هرکلید**
اگر این منو را انتخاب کنید با فشردن هرکلید به استثنای کلی (پایان)، تلفن را میتوانید جواب دهید.
- **فرستادن**
اگر این منورا انتخاب کنید فقط با فشردن کلید (فرستادن) میتوانید تلفن را جواب دهید.

فرستادن شماره شخصی [لیست ۳-۴-۵] (به شبکه و اشتراک مربوط است)

- **روشن**
درصورت فعال بودن این گزینه هنگام انتقال تماس شما به تلفن دیگر شماره تلفن شما روی تلفن دوم نشان داده خواهد شد.
- **خاموش**
درصورت فعال بودن این گزینه هنگام تماس شما به تلفن دیگر شماره تلفن شماروی تلفن دوم نشان داده نخواهد شد.
- **تنظیم بوسیله شبکه**
اگر این منورا انتخاب میکنید شماره تلفن تان را میتوانید درصورت وجود سرویس ۲ خط روی یکی از خطوط ۱ و ۲ بفرستید.

انتظار مکالمه [لیست ۴-۴-۵] (مربوط است به شبکه)

- **فعال شدن**
اگر فعال شدن را انتخاب کنید تلفن شما سیستم انتظار مکالمه را دریافت خواهد کرد.



• لغو

اگر لغو را انتخاب کنید تلفن منتظر (وارده) را نمی‌توانید بشناسد.

• نمایش وضعیت


وضعیت تلفن منتظر را نشان می‌دهد.

• بوق کوتاه دقیقه شمار [لیست ۵-۴-۵]

اگر روش را انتخاب کردید حین تلفن مدت مکالمه را در جریان مکالمه تلفنی، هر دقیقه با صدای مخصوص می‌توانید متوجه شوید.

• شماره گیری صوتی [لیست ۵-۴-۶]

• اتوماتیک: هر زمانیکه گوشی را باز می‌کنید برای شماره گیری می‌توانید نام مورد نظر خود را بگویید.

• دستی: با فشردن کلید  برای شماره گیری می‌توانید نام مورد نظر خود را بگویید.

• شماره گیری مجدد خودکار [لیست ۵-۴-۷]

• روشن

شماره های تماس شما نمایش داده نخواهد شد.

• خاموش

در این حالت اگر تماس برقرار نگردد شماره گیری مجدداً آغاز نخواهد شد.

• انتخاب خط [لیست ۵-۴-۸]

این عملکرد فقط زمانی بکار میرود که شبکه سرویس ۲ خطی را پشتیبانی کند. در صورت فراهم شدن این سرویس منوهای زیر نشان داده خواهد شد.

• خط ۱

• خط ۲



تنظیمات [لیست ۵]

گروه کاربر مسدود است [لیست ۹-۴-۵] (مربوط است به شبکه)

از این عملکرد برای محدود کردن استفاده از تماسهای تلفنی با شماره هایی که متعلق به مشترکین گروههای خاص هستند استفاده میگردد. اگر از این امکان استفاده گردد، تمامی وابسته به یک فهرست گروهی است اگر فهرست گروه مشخص شده باشد برای تماسهای خروجی استفاده میشود.

- . پیش فرض : تنظیم فهرست CUG انتخاب شده
- . تنظیم : فهرست منتخب CUG را تعیین میکند.
- . ویرایش : نام CUG و فهرست CUG را تصحیح میکند.
- . پاک کردن : CUG منتخب را پاک میکند.
- . پاک کردن کل : همه CUG را پاک میکند.

تنظیمات امنیتی [لیست ۵-۵]

درخواست پین کد [لیست ۱-۵-۵]

با فعال نمودن این منو هنگام روشن کردن دستگاه از شما تقاضای وارد کردن پین کد خواهد شد.

۱. رمزی معیارهای امنیتی، تقاضای پین کد را انتخاب کنید و سپس [انتخاب] را فشار دهید.
۲. منوی روشن/خاموش را انتخاب کنید.
۳. اگر بخواهید وضع تنظیم شد را تغییر بدهید زمانی که تلفن را روشن میکنید باید پین کد را وارد کنید.
۴. اگر بیشتر از ۳ بار پین کد غلط داخل کنید تلفن قفل خواهد شد. اگر پین قفل شود به PUK CODE نیاز خواهید داشت.
۵. PUK Code را تا ۱۰ بار میتوانید داخل کنید اگر بیشتر از ۱۰ بار پین کد غلط را داخل نمایید قفل تلفن را نمیتوانید باز کنید باید با مخابرات تماس بگیرید.



قفل تلفن [لیست ۲-۵-۵]

برای اجتناب از استفاده غیرمجاز کد امنیتی رامیتوانید بکاربیرید وقتیکه تلفن را روشن می کنید اگرمنوی قفل امنیتی فعال باشد تلفن کد امنیتی را خواهد خواست. اگرکد امنیتی راخودبخود فعال سازید تلفن تان کد امنیتی رافقط حین تغییر سیم کارت تان خواهد خواست.

محدودیت تماس [لیست ۳-۵-۵]

این سرویس مانع دریافت تعداد معینی ازتماسهای تلفنی میگردد. این عمل به رمز ممنوعیت تلفن نیازدارد منوهای زیررا میتوانید ببینید.

• همه تماسهای خروجی

سرویس ممنوعیت تمام تلفن های صادره.

• تنظیمات صادره بین المللی

سرویس ممنوعیت برای همه تلفن های صادره بین الملل.

• تلفن های صادره بین الملل بجزکشور خود

سرویس ممنوعیت برای همه تماسهای صادره بین الملل به استثنا کشور خود.

• تلفن های وارده

سرویس ممنوعیت برای همه تلفن های وارده.

• تلفن های وارده درهنگام سفرهای برون مرزی

سرویس ممنوعیت برای همه تلفن های وارده هنگام سفرهای برون مرزی.

• لغو کردن همه

سرویس ممنوعیت رامیتواند فسخ کند.

• تغییر رمز

رمز محدودیت تماس سرویس را میتواند تغییردهد.



تنظیمات [لیست ۵]

منوی تغییر هر ممنوعیت تلفن منوهای زیر دارد:

• فعال

سرورس ممنوعیت تلفن فعال میگردد.

• لغو

ممنوعیت انتخابی تلفن را فسخ میکند.

• نمایش وضعیت

میتوانید ببینید که تماسها ممنوع شده اند یا نه.

شماره تلفن ثابت [لیست ۴-۵-۵] (مربوط به سیم کارت)

تلفن ها ارسالی را به شماره های منتخب میتوانید محدود کنید. شماره ها توسط پین کد شما حفاظت میشود.

• فعال

تلفن های ارسالی را به شماره های منتخب تلفن میتوانید محدود کنید.

• لغو

میتوانید عمل شماره گیری معین را غیرفعال بکنید.

• لیست شماره ها

فهرست شماره هایی که بمثابة شماره معین شماره گیری شده را میتوانید ببینید.

تغییر کدها [لیست ۵-۵-۵]

PIN (شماره هویت شخصی است) که برای ممانعت تماس استفاده کننده غیرمجاز بکاربرده میشود.

میتوانید کدهای تماس را تغییر بدهید: PIN، کد، PIN۲، کد، کد امنیتی.

۱. اگر میخواهید که کد امنیتی / پین / پین ۲ کد را تغییر بدهید، کد اصلی تان را داخل کنید، سپس [OK] را فشار بدهید.

۲. کد جدید امنیتی / پین / پین ۲ کد را داخل نموده و آنها را تصدیق کنید.



تنظیمات شبکه [لیست ۵-۶]

میتوانید یک شبکه را انتخاب کنید که یا به طور خود بخود یا بصورت دستی ثبت خواهد شد. معمولاً، انتخاب شبکه به طور اتوماتیک انجام میشود.

اتوماتیک [لیست ۵-۶-۱]

اگر حالت اتوماتیک را انتخاب میکنید، تلفن، یک شبکه را خودبخود جستجو و برایتان انتخاب خواهد کرد.

دستی [لیست ۵-۶-۲]

تلفن فهرست شبکه های موجود را یافته و به شما نشان خواهد داد. سپس شبکه ای را که میخواهید به کار ببرید، انتخاب نمائید. به شرطیکه مخابرات این شبکه را برای شما پشتیبانی کند. در صورت عدم تماس با شبکه منتخب به شما امکان انتخاب شبکه دیگر داده میشود.

شبکه مرجح [لیست ۵-۶-۳]

فهرست شبکه های مرجح را تعیین نمایید. و قبل از کوشش برای ثبت در شبکه دیگر، تلفن تلاش میکند با شبکه نخست تماس برقرار کند. این فهرست از فهرست قبلاً تعیین شده شبکه های شناخته شده تشکیل میگردد.

تنظیم مجدد [لیست ۵-۷]

برای فعال ساختن مجدد تنظیمات کارخانه سازنده به کد امنیتی نیاز دارید.



برنامه ریز [لیست ۶]

تقویم کاری [لیست ۱-۶]

زمانیکه وارد این منو میشوید یک تقویم ظاهر میشود. در رأس این صفحه بخشهایی برای تاریخ و نشانه ها قرار دارد. همچنان در پایان صفحه icon ها برای (تقویم، حافظه) قرار دارد. هر وقت که تاریخ را تغییر میدهید، تقویم مطابق آن تغییر پیدا میکند و یک خانه مشخص شده جهت تعیین روز خاص مشخص میشود. اسکوئر کرسر به کار برده خواهد شد تا روز معین را بیابد. اگر این علامت را در منوی تقویم ببینید، به معنای آنست که یک برنامه یا یک یادداشت در آنروز وجود دارد. این عمل در بخاطر آوردن برنامه و یادداشتتان کمک میکند. تلفن در صورتیکه یک یادداشت تنظیم کرده باشید، زنگ خواهد زد.

کلید	شرح	کلید	شرح
	سالنامه		هفتگی
	ماهنامه		روزانه

یادداشت

- برای استفاده از این عملکرد تلفنتان باید روشن باشد.

اضافه کردن جدید [لیست ۱-۱-۶]

میتوانید حداکثر ۳۹ حرف را تصحیح کنید (۲۱ حرف در زبان چینی) و تا ۲۰ یادداشت بگیرید.



• برنامه

با فشردن کلیدهای مجاز، موضوع، وقت معین، تکرار، الارم را داخل نمائید.







برنامه ریز [لیست ۶]

• حافظه

۱. با فشردن  [انتخاب] اضافه کردن جدید را انتخاب کنید.
۲. حافظه را فشار دهید.
۳. یادداشت را داخل نموده سپس  [OK] را فشار دهید.




نمایش [لیست ۱-۲-۶]

با این امکان شما می‌توانید یادداشتهایی را برای روزهای مشخص بنویسید.

برای جستجو در فهرستهای یادداشت  و  را به کار ببرید. شما می‌توانید برای برنامه مورد نظر خود را با تعیین زمان مشخص از الارم استفاده نمایید. در این وقت اگر شما  [انتخاب] را فشار دهید، یادداشت را به تفصیل می‌توانید ببینید. با فشار دادن  می‌توانید یادداشت خود را حذف و یا تصحیح نمایید.

نمایش همه موارد [لیست ۱-۳-۶]

یادداشتهای همه روزها را نشان می‌دهد.

برای جستجوی در فهرست یادداشتهای،  و  را به کار ببرید. می‌توانید منوی ۳ نمایش ۳ را با فشردن  به کار ببرید.



پاک کردن یادداشتهای قدیمی [لیست ۱-۴-۶]

شما می‌توانید برنامه گذشته را حذف کنید.

پاک کردن همه موارد [لیست ۱-۵-۶]

همه یادداشتهای را می‌توانید پاک کنید.

دفتر تلفن [لیست ۲-۶]

۱. ابتدا دفتر تلفن را با فشار کلید  [نامها] باز نمایید.
۲. برای رفتن به دفترچه تلفن در حالت انتظار دکمه  را فشار داده و برنامه را انتخاب نمایید.



برنامه ریز [لیست ۶]

جستجو [لیست ۱-۲-۶]

(تلفن کردن از دفتر تلفن)

۱. ابتدا دفتر تلفن را با فشار کلید [نامها] باز نمایید. همچنین با رفتن به منوی برنامه ریز دفتر تلفن خود را جستجو نمایید.
۲. دکمه انتخاب را فشار دهید.
۳. شما میتوانید اسم مورد نظر یا آدرس ایمیل را با وارد نمودن پیدا کنید.
۴. با وارد کردن حروف اول نام یا شماره مورد نظر جستجوی سریع میسر است
۵. برای ویرایش، نمایش، حذف، کپی، تماس و یا صداگذاری، دکمه (گزینه ها) را انتخاب کنید. منوهای زیر نشان داده خواهد شد.
 - **ویرایش** : با فشردن [OK] نام، شماره، ایمیل و فکس را میتوانید تصحیح کنید.
 - **نوشتن پیام** : پس از یافتن شماره مورد نظر شما میتوانید به شماره مورد نظر پیام ارسال فرمایید.
 - **کپی** : شما میتوانید اطلاعات موجود در سیم کارت را به گوشی و یا بلعکس انتقال دهید.
 - **صدا** : میتوانید صدا را زیاد یا نوارصدا را تغییر دهید.
 - **شماره اصلی** : میتوانید شماره ای را که بیشتر از آن استفاده میکنید مثل دفتر یا منزل انتخاب کنید. اگر آنرا فعال کنید، شماره اصلی، نخست نشان داده خواهد شد.
 - **پاک کردن** : میتوانید یک نام را حذف کنید.

اضافه کردن جدیدی [لیست ۲-۲-۶]

- با به کار بردن این عمل، به شماره های دفتر تلفن میتوانید اضافه کنید. حافظه دفتر تلفن گنجایش ۲۰۰ شماره را دارد. گنجایش حافظه سیم کارت مربوط به شبکه مخابراتی میشود. شما میتوانید برای هر اسم تا ۲۰ حرف وارد نمایید اما در سیم کارت این بستگی به حافظه سیم کارت دارد.
۱. در حالت استند بای ابتدا دفتر تلفن را با فشردن [اسمها] باز کنید.



۲. شما می‌توانید با انتخاب کلید افزون جدید Add new تلفن مورد نظر را وارد نمایید.
۳. حافظه ای را که می‌خواهید ذخیره کنید انتخاب نمایید.
سیم کارت یا تلفن: اگر تلفن را تنظیم می‌کنید میبایست انتخاب بنمائید کدام شماره اصلی است.

 - a. [اوکی] را فشار دهید تا نام را وارد شود.
 - b. [اوکی] را فشار دهید، شماره مورد نظر را وارد نمایید.
 - c. [اوکی] را فشار دهید.
 - d. با فشردن [(،)] می‌توانید گروه موردنظر خود را انتخاب نمایید.
 - e. با فشردن [*] ، [#] ، [*] ، [#] می‌توانید یک عکس انتخاب نمایید.
 - f. اگر می‌خواهید صدا اضافه کنید، کلید [آری] را فشار دهید.

یادداشت

- وقتی که می‌خواهید یک متن و تصویر را در دفتر تلفن همزمان ثبت کنید، یک تصویر را در هر حالتی می‌توانید ببینید.

شما باید کلمات را طی ۲ ثانیه بیان کنید و دستگاه از شما بیان مکرر تقاضا میکند تا صدا را شناسایی کند.
پس از پایان شناخت صدا، صدا با موفقیت ذخیره میشود.

یادداشت




- صدا فقط به شماره اصلی که شما تعیین می‌کنید مربوط میشود. به طور مثال اگر شماره اصلی را تغییر میدهید، صدا، خوب خود به شماره جدید مرتبط میشود. این بدان معنی است که صدا را به شماره موبایل، دفتر یا منزل همزمان نمیتوانید مرتبط کنید.
- می‌توانید صدا را به شماره تلفن در سیم کارت اضافه میکند. اگر سیم کارت را تعویض نمائید، صدا پاک میشود.



برنامه ریز [لیست ۶]

گروه زنگها [لیست ۳-۲-۶]

در هر گروه میتوانید تا ۲۰ عضو داشته باشید و در کل ۷ گروه نیز میتوانید تعریف کنید.

۱. دکمه  [نامها] را فشار دهید.
۲. به قسمت گروه زنگها رفته، سپس  [انتخاب] را فشار بدهید.
۳. با فشردن  [انتخاب]، نام گروه مطلوبتان را انتخاب کنید.

• لیست اعضا

اعضای گروه هایی که انتخاب کرده اید، را نشان میدهد.

• زنگ گروه

شما میتوانید تا برای تماس اعضای گروه، زنگ مخصوصی مشخص بسازید.

• نشانه گروه

شما امکان انتخاب نشان مخصوص هر گروه را دارید.

• اضافه کردن اعضا

اعضای گروه را میتوانید زیاد کنید. هر عضو گروه از ۲۰ عضو نباید تجاوز کند.



• جابجا کردن اعضا



میتوانید عضو را از لیست اعضای گروه حذف کنید. ولی شماره تلفن وی همچنان در دفترچه تلفن باقی میماند.

• نامگذاری مجدد

نام یک گروه را میتوانید تغییر دهید.

شماره گیری سریع [لیست ۴-۲-۶]

امکان ایجاد ارتباط هریک از کلیدهای  تا  با اسامی دفتر تلفن جهت شماره گیری سریع وجود دارد. با فشردن این کلیدها به مدت ۲-۳ ثانیه مستقیماً میتوانید تلفن کنید.

۱. با فشردن دکمه  [نامها] دفتر تلفن را باز کنید.
۲. به شماره گیری سریع بروید سپس  [انتخاب] را فشار دهید.



۳. چنانچه میخواهید موردی را اضافه نمایید گزینه (خالی) را انتخاب کرده سپس به جستجو دردفتر تلفن بپردازید.

۴. توسط تماس گرفتن سریع گزینه اختصاص دادن یک اسم را انتخاب کرده و پاک کردن یا تغییردادن را برای تصحیح اسم انتخاب کنید.

• پاک کردن

میتوانید شماره های تعیین شده برای شماره گیری سریع را پاک کنید.

• تغییردادن

قابلیت تعویض شماره های تعیین شده برای شماره گیری سریع موجود است.

لیست صوتی [لیست ۵-۲-۶]

همه شماره های تلفن که صدآرآر را میتوانید ببینید پس ازانتخاب شماره تلفن توسط بکاربردن و فشردن [گزینه ها]، منوهای زیررا میتوانید ببینید.

• **پخش کردن** : صدای ضمیمه به شماره تلفن را میتوانید پخش نمایید.

• **تغییر** : صدآرآر میتوانید تغییردهید.

• **پاک کردن** : صدآرآر میتوانید پاک کنید.

• **تماس** : با انتخاب این گزینه، میتوانید تماس بگیرید.

تنظیمات [لیست ۶-۲-۶]

۱. گزینه [نامها] را فشاردهید.

۲. به تنظیمات بروید و سپس [انتخاب] را فشاربدهید.

• تنظیم حافظه

برروی گزینه تنظیم حافظه رفته جهت ورود به منودکمه [انتخاب] را فشاردهید.


- اگر حین اضافه کردن قابل دسترس را انتخاب میکنید، تلفن محل ذخیره را تقاضا خواهدکرد.

- سیم کارت یا تلفن را انتخاب کنید اطلاعات ذخیره خواهد شد.



برنامه ریز [لیست ۶]


• جستجو بوسیله

گزینه جستجو بوسیله را انتخاب نموده سپس  [انتخاب] را فشار دهید

- اگر گزینه قابل دسترس را انتخاب نمایید تلفن خواهد پرسید که چگونه جستجو نماید.

- اگر اسم یا شماره را انتخاب کنید دستگاه اسم یا شماره را جستجو خواهد کرد.

• نمایش گزینه ها

به فهرست مشاهده گزینه ها رفته، سپس دکمه  [انتخاب] را فشار دهید.


- فقط اسم : فهرست دفتر تلفن را طوری تنظیم کنید که فقط نام را نشان دهید.


- همراه با تصویر : فهرست دفتر تلفن را طوری تنظیم کنید که تصویر و نام را نشان دهید.

کپی کلی [لیست ۷-۲-۶]

شما میتوانید شماره موجود درسیم کارت را درحافظه دستگاه کپی فرمایید.

عکس این عمل نیز امکان پذیر است.

۱. با فشردن  [نامها] دفتر تلفن را باز کنید.

۲. به گزینه کپی Copy all، جهت ورود به منو دکمه  [انتخاب] را فشار دهید.

• سیم کارت به تلفن : میتوانید شماره ها را ازسیم کارت به حافظه گوشی منتقل کنید.

• ازتلفن به سیم کارت : میتوانید شماره ها را ازحافظه گوشی به سیم کارت انتقال دهید.

۳. منوهای زیر را میتوانید ببینید.

• نگهداری نسخه اصلی : در زمان کپی شماره تلفن اصلی گرفته شده نگهداری میشود.

• حذف نسخه اصلی : در زمان کپی شماره تلفن گرفته شده پاک میشود.



حذف کلي [لیست ۸-۲-۶]

- امکان پاک کردن همه موارد ضبط شده بر روی سیم کارت و تلفن وجود دارد.
- این عملکرد به استثنای ورودی های صوتی نیاز به وارد کردن کد امنیتی خواهد داشت.
- گزینه [نامها] را فشار داده و روی گزینه حذف کلي دکمه [انتخاب] را فشار دهید.
 - حافظه تلفن یا سیم کارت را برای پاک کردن انتخاب نمایید.
 - کد امنیتی را وارد کرده و [OK] یا [برگشت] را فشار دهید.

اطلاعات [لیست ۹-۲-۶]

• سرویس شماره گیری

در صورت پشتیبانی شبکه مخابرات در این منو می‌توانید لیست سرویس‌های ارائه شده را ملاحظه فرمایید.

- با فشردن دکمه [نامها] دفتر تلفن را باز کنید و گزینه اطلاعات را انتخاب نمایید.
- به سرویس شماره گیری بروید سپس [انتخاب] را فشار دهید.
- نامهای خدمات موجود نشان داده خواهد شد.
- برای انتخاب یک سرویس دکمه های را فشار دهید.

• شرح حافظه

این ویژگی به شما امکان می‌دهد فضای خالی و استفاده شده دفتر تلفن خود را ببینید.

- دفتر تلفن را با فشردن [نامها] باز کنید. اطلاعات را با فشردن دکمه [انتخاب] انتخاب کنید.
- به شرح حافظه رفته سپس [OK] را فشار دهید.

• شماره شخصی سیم کارت

می‌توانید شماره خود را در سیم کارت کنترل نمایید.



بازی وسرگرمی [لیست ۷]

بازی [لیست ۱-۷]

شما میتوانید ازبازیهای موجود دردستگاه لذت ببرید.

یادداشت

- کلیدهای کنترل برحسب هر بازی متفاوت هستند. هر یک مقدمه ای دارد تا کلیدهای اصلی کنترل را معرفی کند، مابقی به قرار زیر میباشد.

[کلیدهای مشترک]

- منوی بازی :
- برگشت :
- Pause : برگشت به عقب

ماشین حساب [لیست ۲-۷]

این ماشین حساب دارای ۴ عمل اصلی میباشد: جمع، تفریق، ضرب، تقسیم.

۱. اعداد را از طریق دکمه اعداد وارد کنید.
۲. کلید جستجو را برای انتخاب علامت محاسبه فشار دهید.
۳. سپس اعداد را وارد کنید.
۴. با فشار دکمه [نتیجه] نتیجه را ببینید.
۵. برای تکرار عملیات بالا، دکمه (تنظیم مجدد) را فشار داده یا اعداد را وارد کنید.
۶. کلید را برای پاک کردن اعداد یا علامت بکار ببرید.
۷. با فشردن کلید اعداد منفی و با فشردن کلید اعداد اعشاری را میتوان وارد نمایید.
۸. برای خامه کاری ماشین حساب دکمه [برگشت] را فشار دهید.



بازی و سرگرمی [لیست ۷]

پوشه شخصی [لیست ۳-۷]

میتوانید صدا و تصویر download شده را مشاهده کنید و یا آنها را به عنوان پس زمینه انتخاب کنید، آنها را حذف نموده و یا تغییر دهید.

تصاویر [لیست ۱-۳-۷]

صدا [لیست ۲-۳-۷]

زیرمنوها برای هرمنوی اصلی

- **ویرایش عناوین**
شما امکان اصلاح عنوان هر سری از اطلاعات انتقال یافته را دارید.
- **نوشتن پیام**
میتوانید پیام کوتاه/پیغام مولتی مدیا را با تصاویر یا صداهای موجود بنویسید.
- **تنظیم تصویر پس زمینه/تنظیم صدای زنگ**
صداها یا تصاویر را بعنوان تصویر پس زمینه یا صدای زنگ میتوانید آماده کنید.
- **پاک کردن**
میتوانید هر اطلاعات وارد شده را پاک کنید.
- **پاک کردن همه موارد**
همه اطلاعات وارد شده را میتوانید پاک کنید.



بازی وسرگرمی [لیست ۷]

ساخت ملودی [لیست ۴-۷]

با این گزینه شما می توانید زنگ مطلوب خود را بسازید.

۱. نتهای مورد نظر را وارد کنید. (۱۵۵) [7] (CDEFGAB) :

۲. برای تصحیح نتهای، دستورات زیر را انجام دهید:

- زمان : این کلید کشیدگی نت را کوتاه و [9] :

کشیدگی نت را زیاد میکند.

- تنظیم مجدد : [0] کشیدگی نت را به حالت استاندارد برمیگرداند

- Octave : این کلید برای تنظیم Octave برای نتهای جدید بکار میرود.

- نت زیر : [*] نت را زیر میسازد.

تبدیل واحدها [لیست ۵-۷]

در این منوها امکان تبدیل انواع واحدها را به واحد مورد نظر دارید این واحدها عبارتند

۱. با فشردن کلید [F] [واحدها] میتوانید یکی از این چهار واحد را انتخاب نمایید.

۲. با استفاده از دکمه های [B] و [C] ارزش استاندارد فعلی واحد را انتخاب نمایید.

۳. ارزش قابل تبدیل را برای واحدی که می خواهید کنترل کنید. با [D] و [E] تنظیم فرمایید.

۴. همچنان، با فشردن [*] یک عدد اعشاری را میتوانید وارد کنید.

ساعت جهان [لیست ۶-۷]

ساعتهای شهرهای عمده جهان را میتوانید ببینید.

۱. ساعت شهرهایی که متعلق به یک مکان زمانی خاص هستند را با فشردن [B] و [C] میتوانید ببینید.

۲. با فشردن دکمه [F] میتوانید زمان را برطبق شهر مورد نظر تغییر دهید.



ضبط صدا [لیست ۷-۷]

شما می‌توانید تا ۱۰ پیام صوتی ۲۰ ثانیه‌ای ضبط کنید.

ضبط [لیست ۷-۷-۱]

۱. پیام صوتی را در منوی ضبط صدا می‌توانید ضبط کنید.
۲. با شروع ضبط دستگاه به شما زمان باقیمانده (پیغام Recording) نشان می‌دهد.
۳. اگر بخواهید ضبط کردن را تمام کنید [ذخیره] را فشار دهید.
۴. عنوانی برای پیام صوتی را وارد نموده، [OK] را فشار دهید.

نمایش لیست [لیست ۷-۷-۲]

فهرست پیام‌های صوتی را نشان می‌دهد، می‌توانید پیام‌های ثبت شده صوتی را دوباره شنیده و یا پاک کنید.

فعال کردن اینفرارد [لیست ۷-۸]

در صورت فعال کردن این عملکرد، می‌توانید از کامپیوتر نیز استفاده نمایید. Serial port و این عملکرد را همزمان نمی‌توانید به کار ببرید.

ارتباط با کامپیوتر PC sync

برنامه ایست برای تبادل اطلاعات میان کامپیوتر و گوشی توسط کابل اطلاعات. برای اطلاعات بیشتر، به سی دی راهنما مراجعه فرمایید.

پیغام گیر [لیست ۷-۹]

شما می‌توانید پیغام گیر خود را در یکی از حالت‌های زیر قرار دهید.



بازي وسرگرمي [ليست ۷]

لغو [ليست ۱-۷-۹]

شما مي توانيد اين منو را غيرفعال نماييد.

عمومي [ليست ۲-۷-۹]

هنگام فعال شدن اين منو تماس گيرنده مي تواند پيغام كلي از پيش ضبط شده را دريافت نمايد.

هنگام جلسه [ليست ۳-۷-۹]

هنگام فعال شدن اين منو تماس گيرنده مي تواند پيغام در حالت جلسه (که از پيش ضبط شده) را دريافت نمايد.

هنگام رانندگي [ليست ۴-۷-۹]

هنگام فعال شدن اين منو تماس گيرنده مي تواند پيغام در حالت رانندگي (که از پيش ضبط شده) را دريافت نمايد.

انتخاب کاربر [ليست ۵-۷-۹ / ۶-۷-۹]

شما مي توانيد صدای شخصی خود را ضبط نماييد. هنگام انتخاب اين منو شخص تماس گيرنده مي تواند صدای ضبط شده شخصی کاربر را دريافت نمايد.

پيغام ضبط شده [ليست ۷-۷-۹]

شما مي توانيد پيغامهاي ضبط شده را دريافت نماييد.

تنظيم زمان فعال شدن [ليست ۸-۷-۹]

شما مي توانيد زمان فعال شدن پيغامگير را فعال نماييد. سيستم مي تواند پس از يك يا سه يا پنج زنگ فعال شود.





اینترنت [لیست ۸]

تلفن شما قابلیت پشتیبانی سرویسهای مبتنی بر (وب) را دارد. با سرویسی که توسط شبکه تان پشتیبانی میشود، میتوانید به این امکان دسترسی پیدا کنید. این سرویس به شما اجازه میدهد که اطلاعاتی مثل: اخبار، گزارشهای هوا و زمان پروازها را به دست آورید.

صفحه اصلی [لیست ۱-۸]

از این منو برای اتصال به Homepage استفاده نمایید. شبکه مخابرات ممکن است سایتی را برای این منظور در نظر گرفته باشد که میتوانید در منوی امکانات آن را بیابید.

علامت [لیست ۲-۸]

- کلید  [انتخاب] را فشار دهید تا به انتخابهای موجود دسترسی پیدا کنید، یا برای خروج کلید  [برگشت] را فشار دهید.
- **ارتباط** : از این طریق میتوانید به آدرس نشانه گذاری شده وصل شوید.
- **افزودن جدید** : از این طریق میتوانید یک آدرس جدید را به طور دستی نشانه گذاری کنید.
- **ویرایش** : میتوانید عنوان و آدرس نشانه گذاری شده را تصحیح کنید.
- **پاک کردن** : میتوانید آدرس نشانه گذاری شده را از لیست پاک کنید.



فشاردکمه پیغام [لیست ۳-۸]

اطلاعات ورودی [لیست ۱-۳-۸]

شما امکان خواندن و یا حذف این پیغامها را دارید.

- اطلاعات : اطلاعات دریافت شده را نشان میدهد.
- دریافت : با استفاده از اطلاعات دریافت شده میتوانید به سایت مشخص وصل شوید.
- پاک کردن : فشاردکمه پیغام را پاک کنید.

دریافت [لیست ۲-۳-۸]

گزینه ها را میتوانید طوری انتخاب کنید که پیغام را دریافت کنید و یا خیر.

پروفایل [لیست ۴-۸]

شما میتوانید تا ۱۰ منوی امکانات را باز و فقط یکی از آنها را فعال کنید. به شرح حال مطلوب رفته را فشار دهید.

• فعال

منوی مطلوب را فعال مینماید.

• تنظیمات

تنظیمات (وب) منوی امکانات را اصلاح یا تغییر میدهد.

- صفحه اصلی

به شما اجازه میدهد که آدرس اینترنتی (URL) سایت مطلوب خود را وارد و از آن به عنوان پایگاه اصلی استفاده فرمایید. شما، ضرورت به تایپ http:// ندارید. زیرا جستجوگر وب آنرا خودبخود انجام خواهد داد.



- حامل

شما می‌توانید اطلاعات را انتخاب نمایید.

• داده‌ها

• جی پی آر اس (GPRS)

- تنظیمات داده‌ها

تنها وقتی پدید می‌آید که تنظیمات اطلاعات را به عنوان حامل/خدمات، انتخاب کنید.

- آدرس** : نشانی (IP) را برای ورود به اینترنت وارد کنید.
- کلمه عبور** : کلمه عبور توسط سرور شما مورد نیاز می‌باشد.
- کاربر ID** : هویت استفاده کننده به سرور دایل تان ونه به مدخل WAP تا شما را به شناسد.
- نوع شماره گیری تلفن** : نوع شماره تلفن را بر اساس آنالوگ یا دیجیتال انتخاب نمایید.
- نوع تماس** : نوع تلفن اطلاعاتی را انتخاب کنید: آنالوگ یا دیجیتال (آی اس دی ان).
- سرعت تماس** : سرعت انتقال اطلاعات: ۹۶۰۰ یا ۱۴۴۰۰.
- زمان آهسته** : باید در زمان تعیین شده داخل شوید پس از دخول به آن، اگر اطلاعات وارد نشده باشد، سرویس جستجو (وب) آماده نخواهد بود.

- تنظیمات (GPRS)

این امکان فقط زمانی که (GPRS) بعنوان حامل انتخاب گردد، در دسترس می‌باشد.

- آدرس** : نشانی (IP) را برای ورود به اینترنت وارد کنید.
- APN** : (APN) را برای ورود به شبکه وارد کنید.
- مشخصات کاربر** : هویت کاربر را برای تماس با سرور وارد نمایید.
- رمز** : کلمه رمز عبور را برای ورود به شبکه وارد نمایید.



- تصاویر
میتوانید انتخاب کنید که تصاویر روی (وب) نشان داده شود یا نه.
- نوع ارتباط
این گزینه برای انتخاب نوع ارتباط، موقت یا دائم به کار میرود.
ارتباط دائم
مکانیزم تأیید شده تحویل دهی ولی ترافیک بیشتری را در شبکه به وجود می آورد.
ارتباط موقت
سرویس تأیید نشده (بدون ارتباط).
- تنظیمات امنیتی
مطابق نیاز این گزینه را خاموش یا روشن فرمایید.
- تغییر نام
نام پروفایل را تغییر میدهد.
- پاک کردن
پروفایل را پاک میکند.
- اضافه کردن جدید
میتوانید پروفایل جدید را اضافه کنید.
- سرویس دهنده ایمیل
ارتباط
جهت اتصال به سرور پست الکترونیک تنظیم شده به کار میرود.
- تصحیح آدرس
نشانی سرویس دهنده ایمیل را تصحیح میکند.



رفتن به LRU [لیست ۵-۸]

میتوانید مستقیماً به سایتی که میخواهید، وصل شوید. برای این منظور نیاز به آدرس اینترنتی مشخصی دارید.

تنظیم صندوق [لیست ۶-۸]

شما امکان پاک کردن محتوای حافظه را داشته و میتوانید حالت حافظه را نیز تغییر دهید.

پاک کردن صندوق [لیست ۱-۶-۸]

شما امکان پاک کردن محتوای حافظه را دارید.

کنترل صندوق [لیست ۲-۶-۸]

در این منو شما قادر به کنترل حافظه هستید.

گواهی امنیتی [لیست ۷-۸]

یک فهرست گواهی های موجود نشان داده میشود.

بازگشت منوی پروفایل [لیست ۸-۸]

تنظیم منوی پروفایل را به حالت اولیه برمیگرداند.

نوع جستجوگر [لیست ۹-۸]

نوع جستجوگر (وب) را نشان میدهد.



منوهای مورد استفاده

- چنانچه به اینترنت متصل هستید منوهای زیر را میتوانید ببینید.
- **صفحه اصلی**
به [لیست ۱-۸] مراجعه شود.
 - **ذخیره مجدد**
باز کردن مجدد صفحه حاضر را انجام میدهد.
 - **علامتها**
[لیست ۲-۸] را ببینید.
 - **ذخیره علائم**
یک سایت را بعنوان درس اینترنتی علامت گذاری مینمایید.
 - **پیغامها**
هنگام اتصال به اینترنت، پیامهای کوتاه را میتوانید ببینید.
 - **فشردن دکمه پیغام**
[لیست ۳-۸] را ببینید.
 - **رفتن به LRU**
به سایت مطلوبتان میتوانید بروید. در این منو، نشانی سایت را میتوانید تصحیح کنید.
 - **به سرویس دهنده ایمیل بروید.**
آدرس سرور ایمیل خود را اصلاح نمایید.
 - **تنظیم سرور ایمیل**
شما میتوانید آدرس اینترنتی جاری را بعنوان سرور ایمیل تعریف کنید.
 - **پاک کردن صندوق**
محتویات صندوق را پاک مینماید.
 - **ذخیره تصاویر**
تصاویر دریافتی از اینترنت را ذخیره مینماید.



جاوا [لیست ۹]

برنامه کاربردی [لیست ۱-۹]



حالت‌های مختلف منوی جاوا

به یک برنامه بروید و اوپشنز را انتخاب کنید.

۱. باز کردن : MIDlet منتخب را راه می‌اندازد.
۲. پاک کردن : MIDlet منتخب را پاک می‌کند.
۳. به روز کردن : با تماس می‌گردد و MIDlet منتخب را به روز می‌کند.
۴. اطلاعات : در مورد MIDlet منتخب اطلاعات را نشان می‌دهد.
۵. وضعیت تلفن : به شما اجازه می‌دهد تا برای بازیهای جاوا، نور پس زمینه و صدا را فعال بسازید.

دریافت [لیست ۲-۹]

نشانی MIDlet سرور را تصحیح و می‌توانید انتخاب کنید. با استفاده از WAP. مرورگر MIDlet ها را آماده و در تلفن می‌توانید حفظ نمایید. شما فهرست MIDlet که در صفحه کاربردی ذخیره شده است را نیز می‌توانید ببینید.

وضعیت حافظه [لیست ۳-۹]


اندازه حافظه که برای نصب بازی و برنامه هاست را نشان می‌دهد. شما تمام وضع حافظه تلفن دستی را نیز می‌توانید ببینید.



نشانی تجاری Java است.



مطلوب [لیست ۱۰]

- می توانید حداکثر تا ۹ منو در فهرست مورد علاقه تشکیل دهید. با فشار دادن کلید  می توانید مستقیماً به این منو وارد شوید.
- برای ثبت یک منو در فهرست مورد علاقه مطلوب فهرست (Empty) را انتخاب نمایید. گزینه ها بصورت زیر نمایش داده خواهد شد.
- انتخاب : منوی ثبت شده را فعال می سازد.
 - تغییر : لیست را تغییر می دهد.
 - حذف : منوی ثبت شده را حذف می کند.
 - حذف کلی : همه منوهای ثبت شده در فهرست مورد علاقه را حذف می کند.
 - اطلاعات : اطلاعات منوی ثبت شده را نشان می دهد.



لوازم جانبی

لوازم جانبی متعددی برای گوشی شما موجود است. بر اساس نیاز شخصی می‌توانید هر کدام از آنها را تهیه نمایید.

باتری استاندارد



هندز فری



آداپتور مسافرتی (شارژ)



بند آویز گردن



کابل انتقال اطلاعات

با این کابل می‌توانید جهت تبادل اطلاعات گوشی خود را به کامپیوتر شخصی خود متصل نمایید.



توجه

- فقط از لوازم جانبی LG استفاده نمایید. در غیر این صورت ممکن است گارانتی گوشی شما از بین برود.
- لوازم جانبی ممکن است از مناطق مختلف، متفاوت باشد برای اطلاعات بیشتر با مرکز سرویس منطقه مورد نظر تماس بگیرید.



هنگام استفاده از گوشی پیشگیریهای مقدماتی زیر باید صورت گیرد.

- صفحه نمایش را از اشیاء تیز دور نگهدارید.
- گوشی را در معرض مایعات و رطوبت قرار ندهید.
- با لوازم جانبی به دقت رفتار کنید.
- از دست زدن بی مورد به آنتن پرهیز کنید.
- قطعات گوشی راهرگز باز نکنید (در صورت نیاز به تعمیر به مرکز سرویس مجاز مراجعه نمایید).
- گوشی را از لوازم الکتریکی مانند تلویزیون رادیو و کامپیوتر دور نگهدارید.
- دقت نمایید گوشی به زمین نیافتد.
- برای تمیز کردن بخشهای خارجی گوشی از پارچه خشک استفاده نمایید. (از محلولهایی مانند بنزین، تینر و یا الکل استفاده نفرمائید)
- گوشی را در معرض دود و گرد و خاک قرار ندهید.
- گوشی را در معرض لرزش و شوک مکانیکی قرار ندهید.
- گوشی را در کنار کارتهای اعتباری مثل عابر بانک قرار ندهید چرا که ممکن است بر اطلاعات آن اثر بگذارد.



□ نگهداری باتری

قبل از دوباره شارژ کردن باتری نیاز به دشارژ کردن نیست. بر خلاف سیستم باتریهای دیگر اثر حافظه ای که بر کارکرد باتری تأثیرگذار وجود ندارد.

- تنها از باتری و شارژر LG استفاده نمائید. شارژرهای LG برای بیشترین طول عمر باتری طراحی شده اند.
- اجزای باتری را از هم جدا نکنید.
- قسمت فلزی باتری را تمیز نگهدارید.
- زمانیکه باتری به خوبی عمل نمیکند آن را تعویض کنید.
- باتری پس از صدها بار شارژ نیز ممکن است نیاز به تعویض نداشته باشد.
- اگر از باتری برای مدت طولانی استفاده نشد است آنرا شارژ نمائید.
- باتری را در معرض مستقیم نور خورشید قرار ندهید. و از آن در رطوبت بالا مثل حمام استفاده نکنید.
- باتری را در محلهای سرد یا گرم قرار ندهید.



عمومي

نام توليد : G7100
سيستم : GSM 900 / DCS 1800

حرارت محيط

حداكثر : +55 درجه سانتیگراد
حداقل : -10 درجه سانتیگراد

GPRS Phone

USER'S MANUAL

MODEL: G7100

Please read this manual carefully
before operating your mobile phone.
Retain it for future reference.



All radio transmitters carry risks of interference with electronics in close proximity.



Mobile Phones must be switched off at all times in an aircraft.



Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.



Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.



Minor interference may affect TVs, radios, PCs, etc.



Do not hold the phone in your hand while driving.



Do not dismantle the phone or battery.



Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.



Do not touch the charger or phone with wet hands.



For Your Safety



For your safety, use **ONLY** specified **ORIGINAL** batteries and chargers.

Please note:



Batteries should be disposed of in accordance with relevant legislation.



Only use **ORIGINAL** accessories to avoid damage to your phone.



Emergency call may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls.



LCD indicator can be damaged if you turn a flip excessively. For details, please see P.12.

Important Information

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.



Overview

Part of the Phone	9
• Main body of the Phone	9
• Outside of the Phone	11
Key Description	12
• Side of the Key	13
• Letter Keys	14

Display Information

Display Information	15
• On-Screen Icons	15

Getting Started

Installation	16
• Inserting the SIM Card	16
• Removing the SIM Card	16
• Installing the Battery	17
• Charging the Battery	17
• Disconnecting the charger	18
Making and Answering Calls	19
• Making a call	19
• International Calls	19
• Making a call using the Phonebook	19

Additional Functions

In call Menu	20
• 1 During a call	20
• 2 Multiparty or Conference Calls	22



Contents

Access Codes	25
• PIN code (4 to 8 digits)	25
• PIN2 code (4 to 8 digits)	25
• PUK code (4 to 8 digits)	25
• PUK2 code (4 to 8 digits)	25
• Security code (4 to 8 digits)	25
<u>Accessing the Menu</u>	
Menu Tree	26
Messages [Menu 1]	28
• Write short message [Menu 1-1]	28
• Write multimedia message [Menu 1-2]	31
• Inbox [Menu 1-3]	35
• Outbox [Menu 1-4]	36
• Voice mail [Menu 1-5]	38
• Info service [Menu 1-6]	38
• Templates [Menu 1-7]	40
• Settings [Menu 1-8]	41
Call register [Menu 2]	43
• Missed calls [Menu 2-1]	43
• Received calls [Menu 2-2]	43
• Dialed calls [Menu 2-3]	43
• Delete recent calls [Menu 2-4]	43
• Call charges [Menu 2-5]	43
• GPRS information [Menu 2-6]	45
Profiles [Menu 3]	46
• Vibrate only [Menu 3-1]	46
• Quiet [Menu 3-2]	46
• General [Menu 3-3]	46
• Loud [Menu 3-4]	46



• Headset [Menu 3-5]	46
• Car [Menu 3-6]	46
Camera [Menu 4]	49
• Take picture [Menu 4-1]	49
• Take in modes [Menu 4-2]	50
• Take continuously [Menu 4-3]	50
• My album [Menu 4-4]	51
• Settings [Menu 4-5]	51
Settings [Menu 5]	52
• Alarm clock [Menu 5-1]	52
• Date & Time [Menu 5-2]	52
• Phone settings [Menu 5-3]	53
• Call settings [Menu 5-4]	54
• Security settings [Menu 5-5]	59
• Network settings [Menu 5-6]	61
• Reset settings [Menu 5-7]	62
Organiser [Menu 6]	63
• Scheduler [Menu 6-1]	63
• Phonebook [Menu 6-2]	65
Fun & Tools [Menu 7]	72
• Games [Menu 7-1]	72
• Calculator [Menu 7-2]	72
• My folder [Menu 7-3]	73
• Melody composer [Menu 7-4]	74
• Unit converter [Menu 7-5]	74
• World time [Menu 7-6]	74
• Voice recorder [Menu 7-7]	75
• Activate IrDA [Menu 7-8]	75
• Auto answer [Menu 7-9]	75




Contents

Internet [Menu 8]	76
• Home [Menu 8-1]	76
• Bookmarks [Menu 8-2]	76
• Push messages [Menu 8-3]	76
• Profiles [Menu 8-4]	77
• Go to URL [Menu 8-5]	80
• Cache settings [Menu 8-6]	80
• Security certification [Menu 8-7]	80
• Reset profiles [Menu 8-8]	80
• Browser version [Menu 8-9]	80
On browsing menu	81
Java [Menu 9]	82
• Applications [Menu 9-1]	82
• Download [Menu 9-2]	82
• Memory status [Menu 9-3]	82
Favorites [Menu 10]	83
Accessories	84
Care and Maintenance	85
Technical Data	87



Main body of the Phone

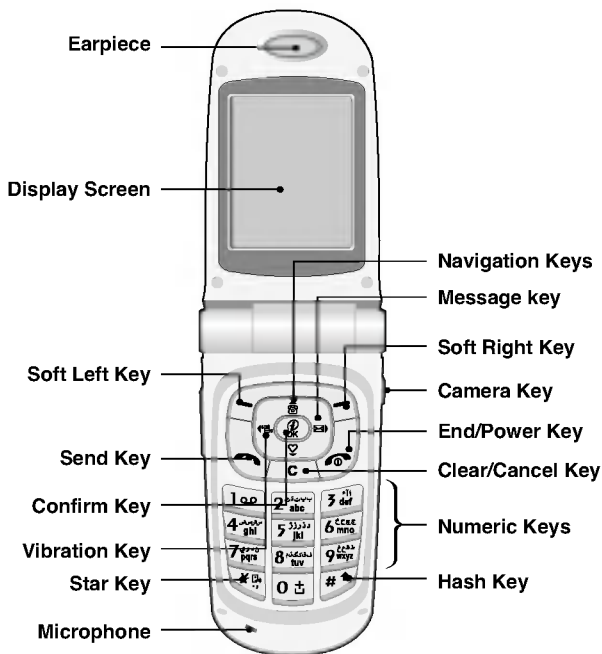




Part of the Phone



You can rotate LCD clockwise an angle of 90 degrees and counter-clockwise an angle of 180 degrees. However, if you turn it by force, it can cause serious damage.



Outside of the Phone


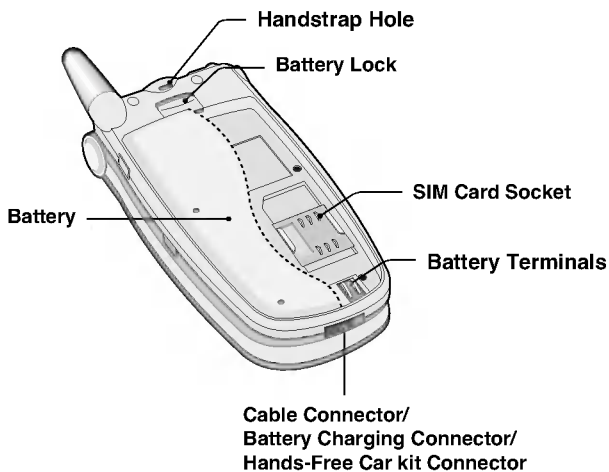













Key Description

The following shows key components of the phone.



Keypad Description

Key	Description
	<p>Soft Left Key / Soft Right Key</p> <p>Each of these keys performs the function indicated by the text on the display immediately above it.</p>
	<p>Vibration key</p> <p>You can activate the vibration directly by holding down this key.</p> <p>Message key</p> <p>You can go to Message menu (Inbox, Memory status, Scheduler or Alarm) directly.</p> <p>Navigation Keys</p> <p>Used to scroll through name, phone numbers, menus or setting options. When you press down key, you can view Favorites menu list.</p> <p>WAP Hot key (=Confirm key)</p> <p>If you press this key for a while, you can connect to WAP directly.</p>
	<p>Send Key</p> <p>You can dial a phone number and answer a call. If you press this key without entering a number, your phone shows the most recently dialed, received and missed numbers.</p>
	<p>Numeric Keys</p> <p>These keys are used mainly to dial in standby mode and enter numbers or characters in editing mode. When you press these keys for a long time.</p> <ul style="list-style-type: none"> Used to call your voicemail box by . Used to call for international call by . Used to call Speed dials by from  to .
	<p>END/PWR Key</p> <p>Used to end or reject a call. This key is also used as Power Key by pressing this key for a few seconds.</p>



Key	Description
	You can delete the characters, go back the menu. In addition, you can view voice memo list when you press this key shortly in a standby mode.
	If you press this key for a long time, you can activate voice recognition.

Side of the Key

Key	Description
	Up/Down Side Key On closing a flip, when you press this key sequently, time, date, my display, and greeting note is displayed respectively. If you press this key once, time is displayed. It will show up depending on setting "Show time".
	Camera key This key is used to take a picture and save it.



Key Description

Letter Keys

Each key can be used for several symbols. There are shown below.



















Key	Description
	.! ', - ? @ _ 1)
	A B C 2 Å Ä Å Æ Ç a b c à á â ã ä å æ ç پ پ ب ث ت ٢
	D E F 3 È É Ê d e f è é ê آ إ و أ ء ء ء ٣
	G H I 4 Î Ï Ñ g h i î ï ñ ق س ش ص ٤
	J K L 5 j k l ذ د ژ ز ر ٥
	M N O 6 Ñ Ò Ó Ô Õ m n o ñ ò ó ô õ ج ح خ ٦
	P Q R 7 p q r s ي ه و ن ٧
	T U V 8 Û Ü Ú t u v ù ù ú ق ك گ ل ٨
	W X Y Z 9 w x y z ف غ ع ظ ٩
	[space] 0 .

Display Information



The screen displays several icons. There are described below.


On-Screen Icons

Icon/Indicator	Description
	Tells you the strength of the network signal.
	Call is connected.
	You can use GPRS service.
	Shows that you are using a roaming service.
	Line 1/2 is in use for outgoing calls – If you subscribe to the Two Line Service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	You have received an push message.
	You can view your schedule.
	All audible signals are turned off.
	General menu in profile.
	Loud menu in profile.
	Silent menu in profile.
	Headset menu in profile.
	Car menu in profile.
	You can divert a call.



Installation


1. Inserting the SIM Card

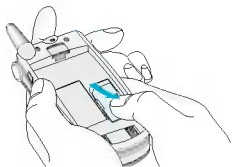

Locate the SIM card socket in the back of the phone. Follow the steps below to install the SIM card.

1. Remove the battery if attached.
2. Slide the SIM card into the slot, under the silvery holders, with the golden connectors facing down and the cut corner to the right.

2. Removing the SIM Card

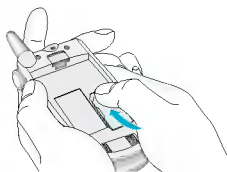

Follow the steps below to Remove the SIM card.


1. Remove the battery if attached.
2. Take out the SIM card from the slot.

Notice


- Removing the battery from the phone whilst it is switched on may cause it to malfunction.
- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card when you handle and install. Follow the instructions supplied with the SIM card.



3. Installing the Battery

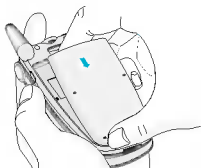

1. Position the lugs on the bottom of the battery into the retaining holder.

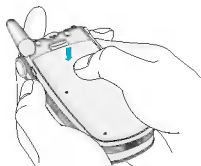


2. Then push to the half of the battery into position.

4. Charging the Battery

To connect the travel adapter to the phone, you must have installed the battery.



1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.

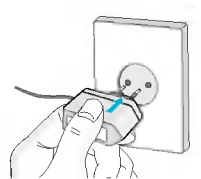

2. Connect the other end of the travel adapter to the mains socket. Use only the included packing charger.





Installation

Warning

- Do not force the connector as this may damage the phone and/or the travel adapter.

5. Disconnecting the charger



Disconnect the travel adapter from the phone by pressing its side buttons as shown in the diagram.

Note

- Ensure the battery is fully charged before using the phone.
- Do not remove your battery or the SIM card while charging.
- The moving bars of battery icon will stop after charging is complete.

Note

If the battery does not charge,

- switch the phone off.
- ensure the battery is correctly fit.



Making a call

1. Key in phone number including the area code. If you want to delete number, press .
2. Press to call the number.
3. Press to end the call.

International Calls

1. Press and hold the key for the international prefix.
“+” character may replace with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press .

Making a call using the Phonebook

1. In standby mode, press [Names].
2. When the menu is displayed, you select Search by pressing .
3. If you find out the desired item through searching by a name or a number, press to call.





In call Menu



The menu displayed on the handset screen during a call is different to the default main menu reached from the idle screen, and the options are described here.

1 During a call



1-1 Putting a Call on Hold


When a call is made or answered, press the  [Send] to place it on hold. When a call is held, press the  [Send] to make it active.

1-2 Making a Second Call

You can get a dial number from phonebook to make a second call. Press  [Names] then select **Search**. To save the dial number into phonebook during call, press  [Names] then select **Add new**.


1-3 Swapping Between Two Calls

To switch between two calls, select  [Options], then select **Swap** or just press  [Send] key.



You can make one of two calls focused by pressing up/down arrow key. If you want to end one of two calls, make the call you want to end focused, then press  [End] key when the call you want to end is focused.




1-4 Answering an Incoming Call



To answer an incoming call when the handset is ringing, simply press the  [Send] key.



The handset is also able to warn you of an incoming call while you are already in a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as Call Waiting, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting [Menu 5-4-4].

If Call Waiting is on, you can put the first call on hold and answer the second, by pressing  [Send] or by selecting  [Answer], then **Hold & Answer**.



You can end the current call and answer the waiting call by selecting  [Menu], then **End & Answer**.

1-5 Rejecting an Incoming Call

When not in a call you can reject an incoming call without answering it by simply pressing the  [End] or  for a long time when the flip is closed.

When in a call you can reject an incoming call by pressing the  [Menu] key and selecting **Multiparty/Reject** or by pressing  [End] key.

1-6 Muting the Microphone


You can mute the microphone during a call by pressing the  [Options] key then selecting **Mute**. The handset can be unmuted by pressing the  [Unmute].

When the handset is muted, the caller cannot hear you, but you can still hear them.




In call Menu

1-7 Switching DTMF Tones on During a Call

To turn DTMF tones on during a call, for example, to allow your handset to make use of an automated switchboard, select  [Options], then **DTMF On**. DTMF tones can be turned off the same way.

1-8 Calling up Messages and SIM Tool kit main menu

The Messages and SIM Tool kit main menu options can be reached from the in-call menu by selecting  [Options]. SIM Tool kit menu is shown only when SIM in the handset supports SIM Tool kit service.

2 Multiparty or Conference Calls



The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature.

A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls may be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call.


The maximum callers in a multiparty call is five. Once started, you are in control of the multiparty call, and only you can add calls to the multiparty call.




2-1 Making a Second Call

You can make a second call while you are already in a call. To do this, enter the second number and press  [Send]. When you get second call the first call is automatically put on hold. You can swap between calls by selecting  [Options] then **Swap**.


2-2 Setting up a Multiparty Call

You can connect a call on hold to the currently active call to form a multiparty call by selecting  [Options] then **Multiparty/Join all**.


2-3 Putting the Multiparty Call on Hold

To put a multiparty call on hold, select  [Options] then **Multiparty/Hold all**.



2-4 Activate the Multiparty Call on Hold

To make a multiparty call on hold active, select  [Options] then **Multiparty/Join all**.

2-5 Adding Calls to the Multiparty Call

To join an active call to the held multiparty call, select  [Options] then **Multiparty/Join all**.


2-6 Displaying Callers in a Multiparty Call

To scroll through the numbers of the callers who make up a multiparty call on the handset screen, press  and  keys.




In call Menu



2-7 Putting a Member of a Multiparty Call on Hold

To place one selected caller (whose number is currently displayed on-screen) of a multiparty call on hold, select  [Options] then **Multiparty/Exclude**.

2-8 A Private Call in a Multiparty Call

To have a private call with one caller of a multiparty call, display the number of the caller you wish to talk to on the screen, then select  [Options] and **Multiparty/Private** to put all the other callers on hold.

2-9 Ending a Multiparty Call

The currently displayed caller of a multiparty call can be disconnected by pressing the  [End] key. To end a multiparty call, press  [Options] then select **Multiparty/End** multiparty.

Selecting  [Options] then **Multiparty/End all**, will end all the active and held calls.



You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using [Menu 5-5-5].

[PIN code \(4 to 8 digits\)](#)

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When **PIN code** is set **On**, your phone will request the PIN code every time it is switched on. On the contrary, when **PIN code** is set **Off**, your phone connects to the network directly without the request PIN code.

[PIN2 code \(4 to 8 digits\)](#)

The PIN2 code, supplied with some SIM cards, is required to access some functions such as Advice of call charge, Fixed Dial number. These functions are only available if supported by your SIM card.

[PUK code \(4 to 8 digits\)](#)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your local service provider for the code. If you lose the code, also contact your service provider.

[PUK2 code \(4 to 8 digits\)](#)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your service provider.

[Security code \(4 to 8 digits\)](#)

The security code protects the unauthorized use of your phone. It is usually supplied with the phone. This code is required to delete all phone entries and to activate “Reset settings” menu. The default number is “**0000**”.



Menu Tree



1 Messages

- 1 Write short message
- 2 Write multimedia message
- 3 Inbox
- 4 Outbox
- 5 Voice mail
- 6 Info service
- 7 Templates
- 8 Settings



2 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Delete recent calls
- 5 Call charges
- 6 GPRS information



3 Profiles

- 1 Vibrate only
- 2 Quiet
- 3 General
- 4 Loud

- 5 Headset
- 6 Car



4 Camera

- 1 Take picture
- 2 Take in modes
- 3 Take continuously
- 4 My album
- 5 Settings



5 Settings

- 1 Alarm clock
- 2 Date & Time
- 3 Phone settings
- 4 Call settings
- 5 Security settings
- 6 Network settings
- 7 Reset settings



6 Organiser

- 1 Scheduler
- 2 Phonebook



7 Fun & Tools

- 1 Games
- 2 Calculator
- 3 My folder
- 4 Melody composer
- 5 Unit converter
- 6 World time
- 7 Voice recorder
- 8 Activate IrDA
- 9 Auto answer



8 Internet

- 1 Home
- 2 Bookmarks
- 3 Push messages
- 4 Profiles
- 5 Go to URL
- 6 Cache settings
- 7 Security certification
- 8 Reset profiles
- 9 Browser version



9 Java

- 1 Applications
- 2 Download
- 3 Memory status



10 Favorites



11 SIM Service

This menu depends on SIM and the network services.





Messages [Menu 1]

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages.

Write short message [Menu 1-1]

You can write and edit text message, checking the number of message pages.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write short message**.
3. To make text input easier, use T9. For details, see **How to use T9** (Page 33).
4. Press [Insert] to attach the followings.
5. If you want to set option for your text, or to finish your writing, press  [Options].

Note

- The phone which supports EMS release 5 is available to send colour pictures, sounds, text styles, etc.. The other party may not receive pictures, sounds or text styles you sent properly if the phone does not support such options.



Insert

- **Symbol**

You can add special characters.

- **Picture**

You can insert the **Default** pictures or pictures in **My folder** that are available for short messages.

- **Sound**

You can insert sounds that are available for short messages.

- **Text templates**

You can use **Text templates** already set in the phone.

- **Phonebook**

You can add phone numbers or e-mail addresses in **Phonebook**.

- **Business card**

You can add your contact information to the message.





Messages [Menu 1]

Options

- **Send**

Sends text messages.

1. Enter numbers of recipient.
2. Press  key to add more recipients.
3. You can add phone numbers in the phone book.
4. Press  after entering numbers.

- **Save**

Stores messages in Outbox.

- **Font**

You can select **Size** and **Style** of fonts.

- **Colour**

You can select **Colour** of foreground and background.

- **Alignment**

You can make the message contents aligned **Right**, **Centre** or **Left**.

- **Add T9 dictionary**

You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.

- **T9 language**

Select a T9 input mode.


- **Exit**

If you press **Exit** while writing a message, you can end the writing message and back to the Message menu. The message you have written is not saved.



Write multimedia message [Menu 1-2]

You can write and edit multimedia messages, checking message size.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write multimedia message**.
3. You can create a new message or choose one of the multimedia message templates already made.
4. Press **Insert** to add **Symbol, Photo, Picture, Sound, Text template, Phonebook** or **Business card**.

Options

• **Preview**

You can preview multimedia messages you wrote.

• **Send**

You can send multimedia messages to multiple recipients, prioritise your message, and make it sent later as well.

• **Save**

You can save multimedia messages in the outbox or as templates.

• **Add slide**

You can add a slide before or after current slide.

• **Move to slide**

You can move to previous or next slide.

• **Delete slide**

You can delete current slides.



Messages [Menu 1]

- **Set slide format**

- **Set timer**

- You can set timer for slide, text, picture and sound.

- **Swap picture and text**

- You can switch the position of picture and text of the message.

- **Remove media**

- You can remove pictures or sounds in the slide. This option can be shown only when any media exists.

- **Add T9 dictionary**

- You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.

- **T9 language**

- Select a T9 input mode.

- **Exit**

- You can back to the Message menu.



Note

- If you select the picture (15K) on writing multimedia message, loading duration will take around 15 seconds at least. Furthermore, you can't activate any key during loading time. After 15 seconds, it is available to write multimedia message.



How to Use T9


T9 allows you to input text quickly.

In T9, you only need to press the key with the corresponding letter once. This is based on a built-in dictionary to which you can also add new words.

• Writing words by using T9.

1. Start writing a word by using the keys to . Press each key only once for one letter.

To write for instance 'Girl', press , , , . The characters that you enter appear blocked.

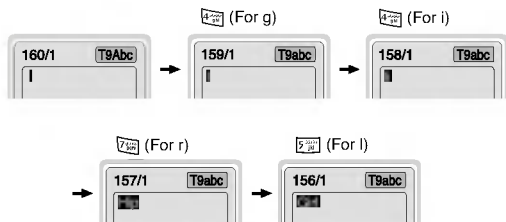

The word changes after each keystroke. Therefore you shouldn't pay too much attention to how the word appears on the display until you have pressed all the appropriate keys.

To delete a character to the left, press .


To insert several numbers, hold down and key in the numbers.

If you hold down, you can change the type of language. (You can also use options.)


Also, the phone supports three modes: **Predictive** (T9Abc, T9ABC, T9abc), **Multitap** (ABC, abc), **Numeric** (123). If you want to change a mode, press key.



Messages [Menu 1]


Alternatively : Press  key and select insert symbols. Select the desired character and press **select**.

2. When you have finished writing a word, check whether the word is correct.


If the word is correct : Press  and write the next word.

If the word is not correct : Search by ,  (**Previous** and **Next word**).

Alternatively : If there is no word you want you can add your own word.

Press  [Options] in the Predictive edit mode. Select Add T9 dictionary Menu. You can see the following.



3. To insert a punctuation mark, press  repeatedly until the desired mark appears.

T9 languages

- You can select T9 Languages by selecting Menu. In T9 mode, you can also select T9 Off menu. (Default is T9 On)








Inbox [Menu 1-3]

You will be alerted when you have received messages. They will be stored in Inbox.

In Inbox, you can identify each message by icons. For detail, see the icon directive.

Icon directive


- [] Multimedia message
- [] Short message
- [] SIM message
- [] Read
- [] Notified multimedia message

If the phone shows 'No space for SIM message', you have to delete only SIM messages from Inbox. If the phone displays 'No space for message', you can make space of each repository as deleting messages, media and applications.

*** SIM message**

SIM message means the message exceptionally stored in SIM card.

For notified multimedia message, you have to wait for downloading and processing of the message. For notification setting, see [Menu 1-8-2] for detail.

To read a message, select one of the messages by pressing .

Reply

You can reply to the sender.



Messages [Menu 1]

Forward

You can forward the selected message to another party.

Return call

You can call back to the sender.

Delete

You can delete the current message.

Extract

You can extract picture, sound and text. They will be saved in My folder or Phonebook.

View information

You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

Replay (applicable to Multimedia message only)

You can replay multimedia messages.

* Receive (In the case of notification message)

If **Multimedia message** is set to **Auto download off**, you can get only Notification. To receive a message, you need to select [Receive].




Outbox [Menu 1-4]

You can see sent and unsent messages here. For sent message, you can see the delivery status.

The browsing is same as that for the inbox message.



Icon directive

- [] Sent
- [] Unsent
- [] Delivery confirmed

* When you already sent the message:

Forward

You can forward the current message to other recipients.

Delete

You can delete the current message.

View information

You can view information about outbox messages; Recipient's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

* When you didn't send the message:

Edit

You can edit the message.

Send

You can send the message.

Delete

You can delete the current message.

View information

You can view information about outbox messages.



Messages [Menu 1]


Voice mail [Menu 1-5]

Listen to voice mail [Menu 1-5-1]

You can listen to voice mail.

Voice mail centre [Menu 1-5-2]

You can receive the voicemail if this feature is supported by your network service provider. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

1. Hold down  key in standby mode.
2. You can check the following submenus.

- **Home**

You can listen to voice mails by selecting **Home**.

- **Roaming**

Even when you are in abroad, you can listen to voice mails if roaming service is supported.


Info service [Menu 1-6]

(Dependent to network and subscription)

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information has the number; therefore, you can contact service provider as long as you have input the certain number for the information. When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed. To view the message again or not in standby mode, follow the sequence shown below;



Read [Menu 1-6-1]

1. When you have received an info service message and select **Read** to view the message, it will be displayed on the screen. You can read another message by scrolling (←, →) or  [Next].
2. The message will be shown until another message is reached.

Receive [Menu 1-6-2]

- **Yes**

If you select this menu, your phone will receive Info service messages.

- **No**

If you select this menu, your phone will not receive Info service messages any more.

Alert [Menu 1-6-3]

- **Yes**

Your phone will beep when you have received Info service message numbers.

- **No**

Your phone will not beep even though you have received info service messages.

Languages [Menu 1-6-4]

You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.




Messages [Menu 1]

Topics (Dependent to network and subscription) [Menu 1-6-5]

- **Add new**

You can add Info service message numbers in the Phone memory with its nickname.

- **View list**

You can see Info service message numbers which you added. If you press  [Options], you can edit and delete info message category which you added.

- **Active list**

You can select Info service message numbers in the active list. If you activate an info service number, you can receive messages sent from the number.

Templates [Menu 1-7]

Text [Menu 1-7-1]

You have 11 text templates. You can change the predefined templates into your favorite ones or fill the <empty>s.

Multimedia [Menu 1-7-2]

You can use the following options.

Edit : You can edit multimedia templates.

Add new : Allows you to add new multimedia templates.

Write message : You can write multimedia messages using multimedia templates.

Delete : You can delete multimedia templates.



Business card [Menu1-7-3]

You can make your business card. Key in Name, Phone number, Fax number and Email.

Settings [Menu 1-8]

Short message [Menu 1-8-1]

- **Message types**

Text, Voice, Fax, Natl. paging, X.400, E-mail, ERMES

Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- **Validity period**

This network service allows you to set how long your text messages will be stored at the message centre.

- **Delivery report**

If you set to **Yes**, you can check whether your message is sent successfully.

- **Reply via same service centre**

When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.

- **SMS centre**

If you want to send the text message, you can receive the address of SMS centre through this menu.



Messages [Menu 1]

Multimedia message [Menu 1-8-2]

- **Validity period**

This network service allows you to set how long your text messages will be stored at the message centre.

- **Delivery report**

If it is set to **Yes** in this menu, you can check whether your message is sent successfully.

- **Auto download**

If you select **On**, you receive multimedia messages automatically. If you select **Off**, you receive only notification message in the inbox and then you can check this notification.

- **Network settings**

If you select multimedia message server, you can set URL for multimedia message server.

- **Permitted message types**

Personal : Personal message.

Advertisements : Commercial message.

Information : Necessary information.

Memory status [Menu 1-8-3]

You can check free space and memory usage of each repository, SIM memory. You can go to each repository menu.



Missed calls [Menu 2-1]

This menu shows recently missed numbers. You can call these numbers, save and view the date and the time.

Received calls [Menu 2-2]

This menu shows recently received numbers. You can call these numbers, save and view the date and the time.

Dialled calls [Menu 2-3]

This menu shows the latest dialled numbers up to 20.

Delete recent calls [Menu 2-4]

You can delete recent calls of **Missed calls**, **Received calls**, **Dialled calls** or **All calls**.

Call charges [Menu 2-5]

Within these submenus, you can view the duration and the call cost of your calls.

Call duration [Menu 2-5-1]

This function allows you to view the duration of your Last Call, All Calls, Received calls and Dialled calls in hours, minutes and seconds. You can also reset the call timers.

1. Press [Menu] in standby mode.
2. Press for direct access or use and to enter **Call register**, then select **Call charges**.
3. Scroll to highlight **Call duration** and Press [Select].

The following 5 submenus: **Last call**, **All calls**, **Received calls**, **Dialled calls** and **Reset all**.



Call register [Menu 2]

Call costs [Menu 2-5-2]

This function allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need the PIN2 code.

1. Press [Menu] in standby mode.
2. Press for direct access or use and to enter **Call register**, then select **Call charges**.
3. Scroll to highlight **Call costs** and Press [Select].

The following 4 submenus: **Last call**, **All calls**, **Remaining** and **Reset all**.

Note

- The actual cost invoiced for calls by your service provider may vary, depending upon network features, rounding-off for billing, tax, and etc.

Settings [Menu 2-5-3] [SIM Dependent]

• Set tariff

You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.

If you want to input €, £, \$ symbol, clear all currency strings and then press key. If you want to change symbol, press key again.

Note

- When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.



- **Set credit**

This network service allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining unit is shown. If you select **Change**, you can change your charge limit.

- **Auto display**

This network service allows you to see automatically the cost of your last calls. If set to **On**, you can see the last cost when the call is released.

GPRS information [Menu 2-6]

You can check the amount of data transferred over the network through GPRS. In addition, you can view how much time you are online.

Call duration [Menu 2-6-1]

You can check the duration of **Last call** and **All calls**. You can also reset the call timers.



Data volumes [Menu 2-6-2]

You can check the **Sent**, **Received** or **All data volumes** and reset all.



Profiles [Menu 3]

In this menu, you can adjust and customize the phone tones for different events and environments.

1. Press  [Menu] in standby mode.
2. Press  for direct access or use { * (and) # }.
3. You can also enter this menu directly by pressing { * (key in standby mode.
4. When you press side key for a long time with closing the flip, you can use Profile menu.

Vibrate only [Menu 3-1]

You can adjust the profile as **Vibrate only** if you need vibration mode. In the mode, all kinds of alert are Vibrate or Silent.

Quiet [Menu 3-2]

You can adjust the profile as **Quiet** if you are in quiet place.

General [Menu 3-3]

You can adjust the profile as **General**.

Loud [Menu 3-4]

You can adjust the profile as **Loud** if you are in a noisy environment.

Headset [Menu 3-5]

You can adjust the profile as **Headset** when you put on a headset.

Car [Menu 3-6]

You can adjust the profile as **Car** when you activate Handsfree kit.



Note

- Headset and Car profiles can be activated only when Handsfree kit or Ear microphone put on the handset. However, their properties can be personalised.

Activate [Menu 3-x-1]

Activates the selected Profile.

Personalise [Menu 3-x-2]

Each has the submenus as shown below except for **Vibrate only**.

Call alert type

Allows to select alert type such as Ring, Vibrate, etc. for the incoming for adjusting environment.

Ring tone

Allows to set the ring tone for adjusting environment.

Ring volume

Allows to set the ring volume for adjusting environment. The volume of Power on / off sound and all the alert sounds set according to **Ring volume**.

Message alert type

Allows to alert when receiving a message for adjusting environment.

Message tone

Allows to select the alert tone for message reception.

Keypad volume

Allows to set the keypad volume for adjusting environment.



Profiles [Menu 3]

Keypad tone

Allows to select the keypad tone for adjusting environment.

Flip tone

Allows to set the flip tone for adjusting environment.

Effect sound volume

Allows to set the effect sound volume for adjusting environment.

Power on/off volume

Allows to set the power on/off volume for adjusting environment

Auto answer

This function will be activated only when your phone is connected to the headset or handsfree kit.

- **Off** : The phone will not answer automatically.
- **After 5 secs** : After 5 seconds, the phone will answer automatically.
- **After 10 secs** : After 10 seconds, the phone will answer automatically.

Rename [Menu 3-x-3]

You can change the default profile name except of Vibrate only, Headset, and Car menus.

Note

- If you set the Handsfree kit to the phone, you can't use the vibrate mode related with Call alert type or Message alert menu. In car menu, the following submenus are available;
 - **Call alert type** : Ring, Silent
 - **Message alert type** : Ring once, Ring periodically, Silent



With the camera you can take pictures of people and events while on the move.

Take picture [Menu 4-1]

1. Select **Camera**, and then press . If you want to reach this menu directly, press for a long time.
2. Focus on the subject to capture the image, and then press or .
3. If you want to save it, press or .

Reference!

• Settings window

You can control the image size, flash, brightness, colour, rotating and zooming by pressing side up key or or .

- **Resolution** : VGA 640*480, QVGA 320*240, QQVGA 160*120, PB : 48*48.
- **Flash** : On, Off
- **Rotating** : Rotate an image 90 degrees anticlockwise.
- **Image quality** : High, Normal, and Low
- **Zooming** : x1, x2, x4. The default value is x1.
- **Brightness** : -2, -1, Standard, +1, +2.
- **Colour** : True colour, Sepia, Black/ White.



Camera [Menu 4]

Activating a key

- : Move the item which you set.
- : Take and save a picture.
- : Go back to the previous menu or exit from camera mode.
- : In application setting, you can change the default value.
- : Move the item which you set.
- : Take and save a picture

Take in modes [Menu 4-2]

You can take a picture on the various of backgrounds. Furthermore, you can select a frame by pressing , .

Reference!

- In this mode, you can't change the settings of resolution.

Take continuously [Menu 4-3]

You can take the maximum of 9 pictures subsequently at the same time. After taking a picture, you can view it by pressing , . You can also save it by pressing .

Reference!

- If you set 640x480 in resolution, you can take only 3 pictures. In case of 320x240, it is available to 6 pictures.



My album [Menu 4-4]

You can view and send a picture. In addition, you can set the window as a background.

All pictures [Menu 4-4-1]

You can view the maximum of 9 pictures in order.

General pictures [Menu 4-4-2]

You can view all pictures except of frame and phone book ones.

Mode pictures [Menu 4-4-3]

You can view all frame pictures.

Phonebook pictures [Menu 4-4-4]

You can view all phonebook pictures.

• Option

- **Multi view** : You can view the maximum of 9 thumbnails in a screen.
- **Write multimedia messages** : You can send a picture thru MMS.
- **Set as wallpaper** : You can set a picture as a wallpaper.
- **Delete** : You can delete a picture.
- **Edit title** : You can edit the title of picture.

Settings [Menu 4-5]

Memory status [Menu 4-5-1]

You can check the capacity of total, used, and free memory.



Clear album [Menu 4-5-2]

You can delete all pictures which saved in a memory.





Settings [Menu 5]

You can set the following menus for your convenience and preferences.

1. Press  [Menu] in standby mode.
2. Press  for direct access to enter **Settings**.

Alarm clock [Menu 5-1]

You can set up to 5 alarm clocks to go off at a specified time.

1. Select **On** and enter the alarm time you want.
2. Select the repeat period : **Once, Mon~Fri, Mon~Sat, Everyday**.
3. Select the alarm tone you want and press  [OK].
4. Edit the alarm name and press  [OK].
5. If you set **Alarm clock** to **Power off alarm** the alarm goes off at a specified time even though the phone is switched off.

Date & Time [Menu 5-2]

You can set functions relating to the date and time.

Set date [Menu 5-2-1]

You can enter the current date.

Date format [Menu 5-2-2]

You can set the Date format such as **DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD**. (D: Day / M: Month / Y: Year)

Set time [Menu 5-2-3]

You can enter the current time.

Time format [Menu 5-2-4]

Your can set the time format between 24-hour and 12-hour.



Phone settings [Menu 5-3]

You can set functions relating to the phone.

Display settings [Menu 5-3-1]

- **Wallpaper**

You can select the background pictures in standby mode.

- **Default**

You can select a picture or an animation of wallpaper by pressing {*****(or)*****}.

- **My folder**

You can select a picture or an animation as wallpaper.

- **Incoming calls**

You can set the animation as getting a call.

- **Outgoing calls**

You can set the animation as making a call.

- **Greeting note**

If you select **On**, you can edit the text which is displayed in standby mode.

- **Backlight**

You can set the light-up duration of the internal display.

- **LCD contrast**

You can set the brightness of LCD by pressing {*****(,)*****}.

- **Information window**

You can preview the current state of the selected menu before open the menu. The state is shown at bottom of the display.



Settings [Menu 5]

- **Menu colour**

You can select the preferred menu colour among various combination.


Sub LCD [Menu 5-3-2]

- **My display** : You can set the animation when you press side key.
- **Show time** : You can set the duration when you scroll sub LCD.
- **Brightness** : You can set the brightness when you scroll sub LCD.
- **Font colour** : You can set the font colour which is displayed on sub LCD.

Language [Menu 5-3-3]

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Call settings [Menu 5-4]

You can set the menu relevant to a call by pressing  [Select] in the Setting menu.

Call divert [Menu 5-4-1]

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

- **All voice calls**

Diverts voice calls unconditionally.

- **If busy**

Diverts voice calls when the phone is in use.

- **If no reply**

Diverts voice calls which you do not answer.



- **If out of reach**

Diverts voice calls when the phone is switched off or out of coverage.

- **All data calls**

Diverts to a number with a PC connection unconditionally.

- **All fax calls**

Diverts to a number with a fax connection unconditionally.

- **Cancel all**

Cancels all call divert service.

- **The submenus**

Call divert menus have the submenus shown below.

- **Activate**

Activate the corresponding service.

- To voice mail centre**

Forwards to message centre. This function is not shown at All data calls and All fax calls menus.

- To other number**

Inputs the number for diverting.

- To favourite number**

You can check recent 5 diverted numbers.

- **Cancel**

Deactivate the corresponding service.

- **View status**

View the status of the corresponding service.




Settings [Menu 5]

Answer mode [Menu 5-4-2]


- **Flip open**

If you select this menu, you can receive an incoming call by only opening the flip.

- **Press any key**

If you select this menu, you can receive a call by pressing any key except  [End] key.

- **Send only**

If you select this menu, you can receive a call by only pressing  [Send] key.

Send my number [Menu 5-4-3]

(network and subscription dependent)

- **On**

You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

- **Off**

Your phone number will not be shown.

- **Set by network**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.



Call waiting [Menu 5-4-4]

(network dependent)

- **Activate**

If you select Activate, you can accept a waiting (receiving) call.

- **Cancel**

If you select Cancel, you cannot recognize the waiting (receiving) call.

- **View status**


Shows the status of Call waiting.

Minute minder [Menu 5-4-5]

If you select **On**, you can check the call duration by deep sound every minute during a call.

Voice dial [Menu 5-4-6]

- **Automatic** : You can enter the voice dial mode whenever you open the flip.

- **Manual** : You can enter the voice dial mode by holding down  key.

Auto redial [Menu 5-4-7]

- **On**

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

- **Off**

Your phone will not make any attempts to redial when the original call has not connected.



Settings [Menu 5]

Select line [Menu 5-4-8]

This function is only used if Two Line Service is supported by the Service Provider. If this function is supported by your service provider, the following menu will be displayed.

- Line 1
- Line 2

Closed User Group [Menu 5-4-9]

(network dependent)

Restricts usage of the phone with numbers that belong to certain user groups. When this function is used, every outgoing call is associated with a group index. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index (a specific index that is stored in the network).


- A. Default** : Activate the default group agreed on with the network operator.
- B. Set** : Setting the selected CUG Index.
- C. Edit** : Editing the CUG name and CUG Index.
- D. Delete** : Deleting the selected CUG.
- E. Delete all** : Deleting All CUG.



Security settings [Menu 5-5]

PIN code request [Menu 5-5-1]

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press  [Select].
2. Set **On/Off**.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Phone lock [Menu 5-5-2]

You can use security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to **On**. If you set phone lock to **Automatic**, your phone will request security code only when you change your SIM card.



Settings [Menu 5]

Call barring [Menu 5-5-3]

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- **All outgoing**

The barring service for all outgoing calls.

- **Outgoing international**

The barring service for all outgoing international calls.

- **Outgoing international except home country**

The barring service for all international outgoing calls except home network.

- **All incoming**

The barring service for all incoming calls

- **Incoming when abroad**

The barring service for all incoming calls when roaming

- **Cancel all**

You can cancel all barring services.

- **Change password**

You can change the password for Call Barring Service.

Each call barring menu has following submenus:

- **Activate**

Allows to request the network to set call restriction on.

- **Cancel**

Set the selected call restriction off.



- **View status**

View the status whether the calls are barred or not.

Fixed dial number [Menu 5-5-4] (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

- **Activate**

You can restrict your outgoing calls to selected phone numbers.

- **Cancel**

You can cancel fixed dialling function.


- **Number list**

You can view the number list saved as Fixed dial number.

Change codes [Menu 5-5-5]

PIN is an abbreviation of Personal Identification Number used to prevent use by only unauthorized person.

You can change the access codes: **PIN code**, **PIN2 code**, **Security code**.

1. If you want to change the Security code/PIN/PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN/PIN2 code and verify them.

Network settings [Menu 5-6]

You can select a network which will be registered either automatically or manually. Usually, the network selection is set to **Automatic**.



Settings [Menu 5]

Automatic [Menu 5-6-1]

If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected “Automatic”, the phone will be set to “Automatic” even though the power is off and on.

Manual [Menu 5-6-2]

The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.

Preferred [Menu 5-6-3]

You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone’s predefined list of known networks.

Reset settings [Menu 5-7]








You can initialize all factory defaults. You need Security code to activate this function.



Scheduler [Menu 6-1]

When you enter this menu a Calendar will show up. On top of the screen there are sections for date. Also on bottom of the screen there are sections for icons (schedule, memo). Whenever you change the date, the calendar will be updated according to the date. And square cursor will be used to locate the certain day. If you see under bar on the calendar, it means that there is a schedule or memo that day. This function helps to remind you of your schedule and memo. The phone will sound an alarm tone if you set this for the note.

To change the day, month, and year.

Key	Description	Key	Description
 	Yearly	 	Weekly
 	Monthly		Daily

Note

- Your phone should be switched on to use this function.

Add new [Menu 6-1-1]

You can edit maximum 39 characters (21 characters in Chinese) and take up to 20 notes.

• Schedule

Input the subject, the schedule time, the repeat, the alarm by pressing allowed keys.



Organiser [Menu 6]

• Memo

1. Select **Add new** by pressing [Select].
2. Press **Memo**.
3. Input the memo and then press [OK].

View [Menu 6-1-2]

Shows the note for the chosen day. Use , to browse through the note lists. If you set alarm for the note, Alarm watch is displayed. At that time, if you press [Select], you can see the note in detail. Press [Options] to delete, edit the note you selected.

View all [Menu 6-1-3]

Shows the notes that are set for all days. Use , to browse through the note lists. You can use the same menu as “View” by pressing [Options].

Delete past [Menu 6-1-4]

You can delete the past schedule that has been already notified you.

Delete all [Menu 6-1-5]

You can delete for the all note(s).

Phonebook [Menu 6-2]

1. To use **Phonebook**, press [Names] in standby mode.
2. To use **Phonebook**, press [Menu] in standby mode and select **Organiser**.



Search [Menu 6-2-1]

(Calling from phonebook)

1. In standby mode, press [Names].
2. **Search** by pressing [Select].
3. Enter the name whose phone numbers or e-mail address you want to search or Select 'List' to view phonebook.
4. Instant searching is available by inputting the initial letter of the name or number you want to search.
5. If you want to edit, delete, copy an entry, or to add the voice to one, select [Options]. The following menu will be displayed.
 - **Edit** : You can edit the name, number, E-mail and fax by pressing [OK].
 - **Write message** : After you have found the number you want, you can send a message to the selected number.
 - **Copy** : You can copy an entry from SIM to phone or from phone to SIM.
 - **Voice** : You can add the voice to the entry or change the voice tag.
 - **Main number** : You can select the one out of mobile, home, office that you often use. The main number will be displayed first, if you set this.
 - **Delete** : You can delete an entry.

Add new [Menu 6-2-2]

You can add phonebook entry by using this function.

Phone memory capacity is 200 entries. SIM card memory capacity depends on the cellular service provider.

You can also save 20 characters of name in The Phone memory, and save characters in the SIM card. The number of character is SIM dependent feature.



Organiser [Menu 6]

1. Open the phonebook first by pressing [Names] in standby mode.
2. Scroll to highlight **Add new**, and press [Select].
3. Select the memory you want to save: **SIM** or **Phone**. If set to Phone, you need to select which number you want as Main number.
 - a. Press [OK] to input a name.
 - b. Press [OK], then you can input a number.
 - c. Press [OK].
 - d. You can set a group for the entry by pressing :
 - e. You can set a character and a picture for the entry by pressing , , .
 - f. If you want to add the voice, press [Yes].

Note

- When you save text and picture in a phone book at the same time, you can view a picture on any condition.

You should speak words within 2 seconds, and the phone asks you to speak it again to ensure the accuracy of voice recognition. After voice recognition has finished, Voice is attached successfully.

Note

- The voice can only be attached to the main number which you set. For example, if you change the main number, voice will be automatically attached to the changed number. This means that you cannot attach voice to mobile, office, home number simultaneously.
- You can add voice tag to phone number in SIM card. The voice tag can be erased if you remove or change SIM card.



Caller Groups [Menu 6-2-3]

You can list up to 20 members per one group. There are 7 groups you can make lists to.

1. In standby mode, press [Names].
2. Scroll to **Caller groups** item then press [Select], and every Group list will be displayed.
3. Select Group name you want by pressing [Select].

- **Member list**

Shows the group members you have selected.

- **Group ring tone**

Allows you to specify ring tone for the group members' call.

- **Group icon**

Allows you to select the icon dependent on Group.

- **Add member**

You can add group members. Each group member shouldn't be exceeded 20.

- **Remove member**

You can remove the member from the Group member list. But the name and the number still remain in phonebook.

- **Rename**

You can change a group name.

Speed dials [Menu 6-2-4]

You can assign any of the keys, to with a Name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open the phonebook first by pressing [Names] in standby mode.
2. Scroll to **Speed dial**, then press [Select].



Organiser [Menu 6]

3. If you want to add Speed dial, select (**Empty**). Then, you can search the name in phonebook.
4. Select allocated a name by speed dial, and choose **Change** or **Delete** to edit the name.
 - **Change**
You can allocate a new phone number to the dial key.
 - **Delete**
You can remove the allocated phone number from the dial key.

Voice list [Menu 6-2-5]

You can see all phone numbers which contain voice. After selecting phone number by using and and press [Options], you can see the following submenus.

- **Play** : You can play voice which is attached to phone number.
- **Change** : You can change voice.
- **Delete** : You can delete voice.
- **Call** : You can call by selecting this menu.

Settings [Menu 6-2-6]

1. Press [Names] in standby mode.
2. Scroll to **Settings**, then press [Select].

- **Set memory**

Scroll to highlight **Set memory**, then press [Select].

- If you select **Variable**, when adding entry, the phone will ask where to store.
- If you select **SIM** or **Phone**, the phone will store an entry to SIM or phone.



- **Search by**

Scroll to highlight **Search by**, then press [Select].

- If you select **Variable**, the phone will ask how to search.
- If you select **Name** or **Number**, the phone will search an entry by Name or Number.

- **View options**

Scroll to highlight **View options**, then press [Select]

- **Name only** : Set the phonebook list with displaying only name.
- **With pictures** : Set the phonebook list with the information of character and picture.

Copy all [Menu 6-2-7]

You can copy/move entries from SIM card memory to Phone memory and vice versa.

1. Open the Phonebook first by pressing [Names] in standby mode.
2. Scroll to **Copy all**, then press [Select] to enter this menu.
 - **SIM to Phone** : You can copy the entry from SIM Card to Phone memory.
 - **Phone to SIM** : You can copy the entry from Phone memory to SIM Card.
3. You can see the following submenus.
 - **Keep original** : When copying, Original Dial Number is kept.
 - **Delete original** : When copying, Original Dial Number will be erased.



Organiser [Menu 6]

Delete all [Menu 6-2-8]

You can delete all entries in SIM, Phone, and Voice. This function requires Security code except for voice.

1. Press [Names] in standby mode and select Delete all, press [Select].
2. Then select a memory to erase.
3. Enter security code and Press [OK] or [Back].

Information [Menu 6-2-9]

• Service dial number

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

1. Open the phonebook first by pressing [Names] in standby mode and select **Information**.
2. Scroll to **Service dial number**, then press [Select] to enter.
3. The names of the available services will be shown.
4. Use and to select a service. Press [Send].

• Memory status

This feature allows you to see how many free and in-use are in your phonebook.

1. Open the phonebook first by pressing [Names] in standby mode. Select **Information** by pressing [Select].
2. Scroll to **Memory status**, then press [OK].

• Own number (SIM dependent)

You can check your own number in SIM card.






Games [Menu 7-1]

The phone offers you the games to play with.

Note






- The control keys are different depending on a game. However, each one has an introduction to explain the main control keys. The rest ones are as follows.

[Common Key Function]

-  : Game menu
-  : Back
-  : Pause or resume a game

Calculator [Menu 7-2]

This contains the standard functions such as $+$, $-$, \times , \div : **Addition**, **Subtraction**, **Multiplication**, and **Division**.

1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press  [Result] to view the result.
5. Press [Reset] or enter numbers to repeat the procedure above.
6. Use  key to erase any numbers or signs.
7. If you press  key, you can input a minus number. In addition, If you press  key, you can input a decimal number.
8. To end **Calculator**, press  [Back].



Fun & Tools [Menu 7]

My folder [Menu 7-3]

Enables you to view the downloaded pictures and sounds. They can be set as Wallpaper or Ring tone. You can view, listen, delete or rename downloaded data.

Pictures [Menu 7-3-1]

Sound [Menu 7-3-2]

The Submenus for each main one

- **Edit title**

You can edit the title for each download contents.

- **Write message**

You can write Short message/Multimedia message(available depending on type of Media) with attachment pictures or sounds.

- **Set as Wallpaper/Set as ring tone**

You can set downloaded sounds or pictures as wallpaper or Ring tone.

- **Delete**

You can delete each downloaded content.

- **Delete all**

You can delete all downloaded contents.



Melody composer [Menu 7-4]

You can compose a ring tone melody which you want. When you enter this function, the tones that you composed before are played. To enter a new or edit an existing tone:

1. Enter the desired notes. ([1 Oct] ~ [7 Oct] : CDEFGAB)
2. To adjust the characters of the note, do as follows:
 - **Duration** : [8 Oct] shortens and [9 Oct] lengthens the duration of the note or rest.
 - **Rest** : [0 Rest] inserts a rest of the same duration as the previous note.
 - **Octave** : [X Oct] sets the octave for new notes.
 - **Sharp note** : [#*] makes the note sharp.

Unit converter [Menu 7-5]

This converts any measurement into a unit you want. There are 4 types that can be converted into units: **Length**, **Area**, **Weight**, and **Volume**.

1. You can select one of four unit types by pressing [Unit] key.
2. Select the standard value by using [←(,)→].
3. Select the unit you want to convert by pressing [↑] and [↓].
4. You can check the converted value for the unit you want. Also, you can input a decimal number by pressing [#*].



Fun & Tools [Menu 7]

World time [Menu 7-6]

You can view clocks of the world's major cities.

1. Select the city belonged to the time zone by pressing $\left\{ \leftarrow, \rightarrow \right\}$ key.
2. You can set the current time to the city time you select by pressing \leftarrow [Set].

Voice recorder [Menu 7-7]

The voice memo feature you to record up to 10 voice messages and each memo is up to 20 Seconds.

Record [Menu 7-7-1]

1. You can record voice memo in Voice recorder menu and also holding down \overline{c} in the standby mode.
2. Once recording is started, the message Recording and the remaining time is displayed.
3. If you want to finish recording, press \leftarrow [Save].
4. Key in Voice memo title, press \leftarrow [OK].

View list [Menu 7-7-2]

The phone shows voice memo list. You can Playback and Delete the recorded voice memo.

Activate IrDA [Menu 7-8]

If you activate this function, you can use PC-Sync by infrared. You can't use serial port and infrared function at the same time.



PC Sync

PC Sync is a program for data exchange between PC and the phone by data cable. For more information, you can use the guide of PC Sync Help file in CD.

Auto answer [Menu 7-9]

You can activate answering machine on the condition of adjusting each environment as follows:

Off [Menu 7-9-1]

You can cancel the function.

General [Menu 7-9-2]

If you activate this, callers will hear the General voice guide.

Meeting [Menu 7-9-3]

If you activate this, callers will hear the Meeting voice guide.

Driving [Menu 7-9-4]

If you activate this, callers will hear the Driving voice guide.

User define [Menu 7-9-5/6-9-6]

You can record your own voice guide. If you activate this, callers will hear the voice guide.

Recorded messages [Menu 7-9-7]

You can check recorded messages.

Ringling time [Menu 7-9-8]

You can set the ringling time before the answering system answers incoming calls. The system can answer calls after 1 ring, 3 rings, or 5 rings.





Internet [Menu 8]

The phone supports services based on Wireless Application Protocol (WAP). You can access services supported by your network. The services menu allows you to get the information such as news, weather reports, and flight times.

Home [Menu 8-1]

Connect to a homepage. The homepage may be the site which is defined in the activated profile. It will be defined by Service Provider if you don't make in activated profile.

Bookmarks [Menu 8-2]

Press  [Select] to access available options, or press  [Back] to exit.

- **Connect** : Connect to the selected bookmark.
- **Add new** : Add a new bookmark manually.
- **Edit** : Edit the title and the address of the selected bookmark.
- **Delete** : Delete the selected bookmark from the bookmark list.

Push messages [Menu 8-3]

Inbox [Menu 8-3-1]

You can read or delete push messages.


- **Information** : Show the information of received push messages.
- **Load** : You can connect to a specific site using the information in the received push message.
- **Delete** : Delete the selected push message.

Receive [Menu 8-3-2]

You can set the option whether you will receive the message or not.



Profiles [Menu 8-4]

You can make up to 10 profiles and activate only one out of them. Scroll to the desired profile and press  to access available options.

- **Activate**

You can activate the profile you want.

- **Settings**

You can edit and change WAP settings of the selected profile.

- **Homepage**

This setting allows you to enter the address (URL) of a site you want to use as homepage. You do not need to type “http://” at the front of each URL as the WAP Browser will automatically add it.

- **Bearer**

You can set the bearer data service.

- **Data**

- **GPRS**

- **Data settings**

Appears only if you select Data settings as a Bearer\service.

IP address : Enter the IP address of the WAP gateway you want.

Dial number : Enter the telephone number to dial to access your WAP gateway.

User ID : The users identity for your dial-up server (and NOT the WAP gateway).

Password : The password required by your dial-up server (and NOT the WAP gateway) to identify you.

Call type : Select the type of data call: Analogue or Digital (ISDN).



Internet [Menu 8]

Call speed : The speed of your data connection;9600 or 14400.

Linger time : You need to enter timeout period.After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.

- GPRS settings

The service settings are only available when GPRS is chosen as a bearer service.

IP address : Input the IP address of the WAP gateway you access.

APN : Input the APN of the GPRS.

User ID : The users identify for your APN server.

Password : The password required by your APN server.

- Display image

You can select whether images on WAP cards are displayed or not.

- Connection type

The options for connection type are Temporary or Continuous and depend on the gateway you are using.

Continuous

A confirmed delivery mechanism but generates more network traffic.

Temporary

A non-confirmed (connectionless) service.



- **Secure settings**

According to the used gateway port, you can choose this option as **On** or **Off**.

- **Rename**

Edit the Profile Name.

- **Delete**

Delete the Profile.

- **Add new**

You can add a new profile manually.

- **Email server**

- **Connect**

Connect to the E-mail server that you configured.

- **Edit address**

Edit the E-mail address.



Internet [Menu 8]

[Go to URL \[Menu 8-5\]](#)

You can directly connect to the site you want. You need to enter a specific URL.

[Cache settings \[Menu 8-6\]](#)

You can remove the contents of Cache memory or change the Cache mode.

[Clear cache \[Menu 8-6-1\]](#)

The contents of Cache memory will be removed.

[Check cache \[Menu 8-6-2\]](#)

You can set the option whether you will check the cache memory or not.

[Security certification \[Menu 8-7\]](#)

A list of the available certificates is shown.

[Reset profiles \[Menu 8-8\]](#)

You can reset profiles to return to original settings.

[Browser version \[Menu 8-9\]](#)

The WAP Browser version is displayed.



If you are on line, you can view the following menus.

■ **Home**

Refer to [Menu 8-1].

■ **Reload**

Reloads the current page.

■ **Bookmarks**

See [Menu 8-2].

■ **Save as bookmark**

You can save a site as bookmark.

■ **Messages**

During Wap connection, you can see the Short messages.

■ **Push messages**

See [Menu 8-3].

■ **Go to URL**

You can move to the site you want. In this menu, you can also edit the site address.

■ **Go to email server**

You can move to the E-mail server that you configured.

■ **Set as email server**

You can set the address of current site as E-mail server.

■ **Clear cache**

The contents of cache memory will be removed.

■ **Save Images**

You can save the image which is provided by the WAP.



Java [Menu 9]

Applications [Menu 9-1]



Java Menu Options

Scroll to an application and select Options.

- 1. Open** : Launches the selected MIDlet.
- 2. Delete** : Deletes the selected MIDlet.
- 3. Update** : Accesses the server and updates the selected MIDlet.
- 4. Information** : Displays information about the selected MIDlet.
- 5. Phone settings** : Allows you to set backlight and sound for java game.

Download [Menu 9-2]

You can edit and set MIDlet server address. Download MIDlets using WAP Browser and store them in the phone. You can also view the list of MIDlets stored on the Applications screen.

Memory status [Menu 9-3]

Shows the size of memory available for game and application installations. You can also see the whole memory status of Handset.



JAVA™ is a trademark of Sun Microsystems, Inc.

Favorites [Menu 10]



You can set up to 9 menus which you have used often in Favorites. You can connect this menu directly by pressing hot key $\overline{\heartsuit}$.

If you want to register the menu in favorites, select <Empty> on a list. If the menu is already registered, the options are displayed as follows:

- **Select** : Activate the registered menu.
- **Change** : Change the menu.
- **Delete** : Delete the registered menu.
- **Delete all** : Delete all menus which are registered in Favorites.
- **Information** : View the information of registered menu.



Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.



Standard Battery



Portable Handsfree

This connects to your phone, allowing handsfree operation.



Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Neckstrap



Data cable/CD

You can connect your phone to PC to exchange the data between them.

Note

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquires.



When using this unit, basic safety precautions as below should be always followed.

- Do not disassemble this unit. (Take it to a qualified service technician when repair work is required.)
- Away from electrical appliance such as a TV, radio or personal computer.
- The unit should be situated from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.



Care and Maintenance

□ Caring for the Battery

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.



General

Product name : G7100

System : GSM 900 / DCS 1800

Ambient Temperatures

Max : +55°C

Min : -10°C

Declaration of Conformity



This model complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used for its intended use.

1. Health (Article 3.1.a of the R&TTE Directive)
2. Safety (Article 3.1.a of the R&TTE Directive)
3. Electromagnetic compatibility (Article 3.1.b of the R&TTE Directive)
4. Efficient use of the radio frequency spectrum (Article 3.2 of the R&TTE Directive)

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned articles of the directive.

if available, write the contact person(s)

Mr. Jin Seog, Kim
 LG Amsterdam Branch Office
 Capronilaan 6, 1119 NR Schiphol-rijik,
 The Netherlands
 (Tel.) +31-20-655 7774

CE 0700

Mr. Ji Jong, Jeon
 LG Electronics Inc. GSM Division
 Emerald BD, 1042 Hogye-Dong, Dongan-Gu
 Anyang-city, Kyuengki-Do
 431-080, Korea