Remote Control Buttons

BAND
Select the System's tuner (FM and AM bands)

POWER
Switches System ON and OFF.

DVD/CD
Select the output source (CD/DVD).

TV/RADIO
To select the digital TV mode.

0-9 numerical buttons
Select a service, programme number directly or select numbered options in a menu.

TEXT •
To switch on or off teletext.

SUBTITLE •
To display or change the subtitle language for the current service.

GUIDE •
To display the programme information list box on the TV screen.

SETUP
Accesses or removes setup menu .

DVD MENU •
Accesses menu on a DVD disc.

LIST •
Displays the TV/Radio programme

SLOW SCAN (◀◀/▶▶)
Reverse/ Forward slow playback.

PR/PRESET(+/-)
Select programme of TV or Radio.

STOP (■) •
Stops playback.

PAUSE/STEP (❚❚) •
Pause playback

PLAY (▶) •
Starts playback.

PROGRAM •
Accesses or removes Program menu.

CLEAR •
Removes a track number on the program menu or a mark on the MARKER SEARCH menu.


REPEAT •
Repeat chapter, track, title, all.

A-B/REPEAT •
Repeats sequence.

RDS •
View the various displays of the RDS options that are available when a station is transmitting RDS data.

PTY •
Search for a different PTY.

PTY SEARCH •
Starts a search for a specific PTY type.

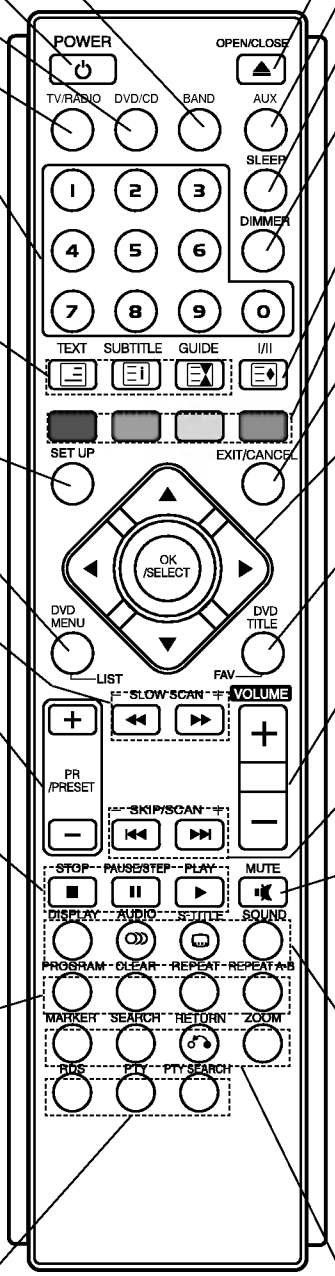

OPEN/CLOSE (⏏)
Opens and closes the disc tray.

AUX
Selects input source.

SLEEP
Set the System to turn off automatically at a specified time.

DIMMER
Press to change brightness of the display window on the front panel during in power-on status.

I/II
Selects the audio language of TV Station.

COLOURED BUTTONS
Used for interactive applications, Setup and EPG mode.

EXIT/CANCEL
Returns to TV viewing from any menu. Clears the menu from the screen.

- **◀/▶/▲/▼ (left/right/up/down)**
  Selects an option in the menu.
- **OK/SELECT**
  - Displays functions on the TV screen.
  - Acknowledges menu selection.

- **DVD TITLE**
  Displays the disc's Title menu, if available.
- **FAV**
  Displays the favourite channel list.

VOLUME (+/-)
Adjusts speaker volume.

- **-SKIP/SCAN (⏮)**
  Search backward*/go to beginning of current chapter or track or go to previous chapter or track.
- **+SKIP/SCAN (⏭)**
  Search forward*/go to next chapter or track.

MUTE
Mute the speakers.

- **DISPLAY**
  Accesses On-Screen display.
- **AUDIO**
  Selects an audio language (DVD) or an audio channel (CD).
- **SUBTITLE**
  Selects a subtitle language (DVD).
- **SOUND MODE**
  Selects sound mode between PRO LOGIC, PLII MOVIE, PLII MUSIC, PLII MATRIX, ROCK, POP, LIVE, DANCE, TECHNO, CLASSIC, SOFT, 3D SURROUND and BYPASS.

- **MARKER**
  Marks a point during playback.
- **SEARCH**
  Displays MARKER SEARCH menu.
- **RETURN**
  Removes the setup menu.
- **ZOOM**
  Enlarges DVD video image.

Sleep Timer Setting

You can set the System to turn off automatically at a specified time.

1 **Press SLEEP to set the desired sleep time.**
The SLEEP indicator and sleep time appears in the display window.

2 **Each time you press SLEEP the setting changes in the following order.**
SLEEP 180 →150 →120 →90 →80 → 70 → 60→ 50 → 40 → 30 → 20 →10 → OFF

Note

- **You can check the time remaining before the System turns off.**
  Press SLEEP. The remaining time appears in the display window.

Dimmer

This function will change the brightness of the display window on the front panel during in power-on status.

Press the DIMMER repeatedly.

Mute

Press MUTE to mute your unit.

You can mute your unit in order, for example, to answer the telephone, "MUTE" indicator flashes in the display window.

Using Headphone Jack

Connect a stereo headphone plug (ø3.5mm) into the **PHONES connector**.

The speakers are automatically disconnected when you plug in headphones (not supplied).

Selecting input source

You can use VCRs or other units connected to the AV1, AV2 connectors, EURO SCART or Optical connector. Refer to the owner's manual supplied with the unit for further information on the operation.

Press AUX repeatedly on the remote control to select the desired input source.

Each time you press this button, the mode of the function changes in the following sequence:

- **AV1:** for selecting the analogue signal from AV1 AUDIO IN (L/R) & VIDEO IN Connectors.
- **AV1 OPT:** for selecting the digital signal from AV1 OPTICAL IN Connector.
- **AV2:** for selecting the analogue signal from AV2 AUDIO IN (L/R) & VIDEO IN Connectors.
- **TV-AUDIO:** for selecting the TV audio signal from SCART.

Notes

- The Optical input function is available only when the other unit's Sampling Frequency is 32 ~ 96kHz.
- You can also select the input source by pressing PLAY/FUNC. on the front panel.
  Press and hold down this button about 3 seconds, then press repeatedly to select input source.