

GPRS與MMS手機

型號系列

型號: L1100

使用手機前，請務必詳讀本手冊。

並小心保管本手冊，以便日後參考之用。

簡介

恭喜您購置了先進輕巧、採用最新數碼流動通訊科技設計而成的L1100流動電話。



本使用手冊涵蓋手機的使用與操作方面的重點資訊。欲發揮手機的最佳性能，並避免因使用不當而造成損壞，請詳閱本手冊的所有內容。若對手機作出任何本手冊內未開列許可之改裝行為，將喪失保費權益。



請閱讀這些簡單的準則。違反規定將面臨以下合法。本部門將會說明更詳細的資訊。

射頻電磁場暴露準則

無線電波暴露準則與特定比吸收率(SAR) 資訊

本型號的手機L1100的設計符合無線電波暴露準則適用的安全要求。此要求包括可確保與眾安全的设计準則，並針對各種年齡對象所有的健康狀況。

- 無線電波暴露準則採用被稱為特定比吸收率或 SAR 的測量單位。SAR 是採用標準方式進行測定，即用通過認證之最大功率，針對所有頻率波段進行測定。
- 儘管各型 LG 手機的 SAR 值各不相同，但 LG 設計的全部產品，均符合無線電波暴露的相關準則。
- 國際非電離輻射防護委員會 (ICNIRP) 建議的 SAR 限制值為平均十面組織 2 瓦特/平方公尺。
- DASY4 為此型手機測試在周邊使用時的最大 SAR 值為 0.691 瓦特/平方公尺 (10 面)。
- 根據電機工程師學會 (IEEE) 的建議，各國家/地區為與眾評定的 SAR 限制值為平均十面組織 1.6 瓦特/平方公尺 (例如美國、加拿大、澳洲及台灣)。



安全與有效使用準則

產品的保養與保護

警告：只可使用通過本特定型號手機使用許可的電池、充電器與配件。使用任何其他產品可能會導致本手機適用的任何認證或保養失效，且可能會造成危險。

- 請勿拆解本手機。請交由合格維修人員為您進行維修。
- 遠離電池設備，如電池、收音機或個人電腦。
- 手機應遠離熱源，如暖氣機或爐具。
- 避免掉落。
- 請勿使手機遭受機械震動或撞擊。
- 若使用封套或保護殼，可能會損壞手機表面塗層。
- 請使用乾布清潔手機外部。(請勿使用如苯、稀釋劑或酒精等溶劑。)
- 請勿讓手機處於霧氣濃潤或外塵污染嚴重的環境中。
- 請勿讓手機靠近信令塔或電磁干擾；否則會影響磁帶內的存儲。
- 請勿用尖銳物品刮傷屏幕，否則會損壞手機。
- 請勿讓手機接觸液體或暴露在潮濕的環境中。
- 審慎使用耳機等配件。除非必要，請勿配戴耳機。

此手機的部分外殼元件可能採用金屬或金屬鍍層。金屬材料天然具有導電性，例如鑰匙、磁卡夾、扣針等，若接觸到任何液體均有機會引致短路並產生高溫。請小心使用。



自鎖的手機操作

要在耗電最小的狀態下享有最佳的手機性能，請遵守以下原則：

- 拿手機的方式- 如使用任何其他電話通話一樣。直接使用咪筒進行通話時，請將天線朝上越過肩膀。如果天線不用時，請在通話期間拔出天線。
- 使用手機時，請勿抓著天線。如果抓著天線，可能會影響通話品質，另外手機還可能會需要較高功率才能操作，因而縮短通話突觸時間。
- 如果您的流動電話支援紅外線，請勿將紅外線對準他人眼睛。

警告裝置

所有流動電話都可能會受到干擾，因而影響性能。

- 未經許可，請勿在醫療設備附近使用流動電話。避免將手機放在心律調整器之上，也避免物前口袋。
- 部份助聽器可能會受到流動電話的干擾。
- 對電視、收音機、電腦等均可能造成輕微干擾。

道路安全

請查閱當地對行車時使用流動電話的法律規定。

- 駕駛時請勿使用手提式手機。
- 請集中精神駕駛。
- 如果有的話，請使用免提裝置。
- 請按駕駛時的當地，在撥打電話的接聽來電之前，將汽車停靠路邊。



安全與有效使用準則

- 射頻能對可能影響汽車部份電子系統，如汽車音響、安全設備。
- 如果您的汽車備有安全氣囊，請勿在其附近安裝或放附無線裝置，以免造成障礙。運作不當將會造成嚴重傷害。

爆破區域

請勿在爆破作業區使用手機。請查明限制並遵守所有規定準則。

具潛在爆炸危險的環境

- 請勿在燃料補給區使用手機。請勿在燃料貯存等處附近使用手機。
- 車上攜有流動電話零件時，請勿運載或儲存可燃氣體、液體或炸藥在車庫內。

在飛機上

無線裝置對飛機會造成干擾。

- 請在登機前關閉流動電話。
- 落地時，未獲機員允許，請勿使用流動電話。

兒童

手機應用於兒童無法接近的安全地方。手機含有小型零件，如易拆解，可能會有阻塞之虞。

緊急電話

並非所有流動電話網絡均提供緊急電話服務。因此，請勿只依賴手機來撥打緊急電話。詳情請洽當地服務供應商。



電池管理與保養

- 電池充電前，無須先空放電。與其他電池系統不同，本機所用電池的性能不會受到記憶效應的影響。
- 只限使用 LG 電池和充電器。LG 充電器是經過特別設計，可提供最長的電池壽命。
- 請勿拆解或讓電池發生短路。
- 電池的金屬接觸點應保持清潔。
- 更換性能不再令人滿意的電池。充電數百次後，才需拆卸更換電池。
- 如長期未使用的電池，請先進行充電以取得最大的效力。
- 請勿使電池充電器直接曝曬在陽光下，或在浴室門等濕度高的場所使用。
- 請勿把電池留在過熱或過冷的地方，否則會降低電池性能。



目 錄

您的手機	11
手機圖解	11
手機外觀說明	12
側邊按鍵	13
顯示屏	14
開始使用	15
安裝 SIM 卡與手機電池	15
為電池充電	16
取下充電器	17
開啓與關閉您的手機	18
密碼鎖	18
一般功能	20
撥打電話與接聽來電	20
輸入文字	22
電話簿	27
通話功能表	27
電話會議	28
功能表樹狀目錄	30
選取功能表選項	32
情景模式[功能表1]	33
震動[功能表1-1]	33
靜音[功能表1-2]	33
標準[功能表1-3]	33
人聲[功能表1-4]	33
聽筒[功能表1-5]	33
前屏[功能表1-6]	33
通話記錄[功能表2]	35
未接來電[功能表2-1]	35
已接來電[功能表2-2]	36



引撥音訊[功能表2-3]	36
刪除近期通話[功能表2-4]	37
通話時間[功能表2-5]	37
通話計數[功能表2-6]	38
計費設定[功能表2-7]	38
GPRS設定[功能表2-8]	39
娛樂室 三 [功能表3]	40
響鬧[功能表3-1]	40
計數機[功能表3-2]	40
我的文件夾[功能表3-3]	41
單位換算器[功能表3-4]	42
時區設置[功能表3-5]	42
錄音器[功能表3-6]	43
啟動紅外線[功能表3-7]	44
語音簿[功能表4]	45
日曆表[功能表4-1]	45
備忘錄[功能表4-2]	46
音簿簿[功能表4-3]	47
訊息[功能表5]	53
文字訊息[功能表5-1]	53
多媒體訊息(MMS)[功能表5-2]	58
留言訊息[功能表5-3]	63
小區廣播[功能表5-4]	63
滑叫短語[功能表5-5]	64
訊息觀狀態[功能表5-6]	66
相機[功能表6]	67
拍照[功能表6-1]	67
圖庫[功能表6-2]	69

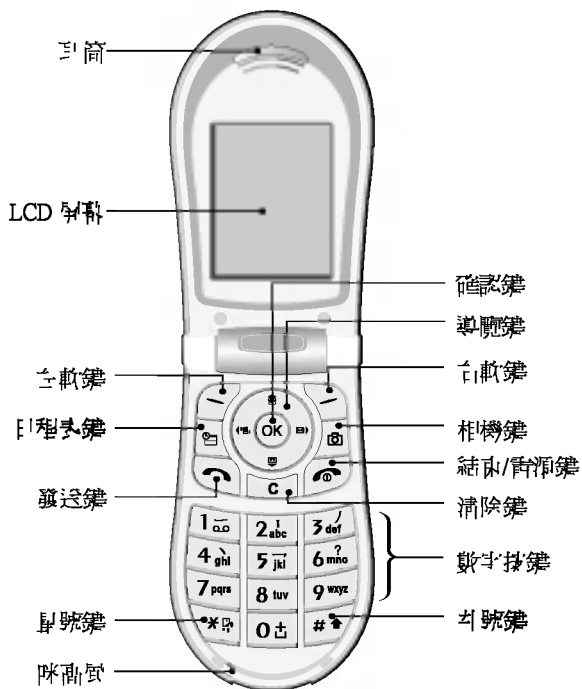


目 錄

遊戲及應用程式 [功能表7]	70
遊戲 [功能表7-1]	70
應用程式 [功能表7-2]	71
下載 [功能表7-3]	71
音訊 [功能表7-4]	72
互 聯 網 [功能表8]	73
主頁 [功能表8-1]	74
書籤 [功能表8-2]	74
Push 訊息 [功能表8-3]	75
網絡設定 [功能表8-4]	75
進 入 URL [功能表8-5]	76
緩存設定 [功能表8-6]	76
安全認證 [功能表8-7]	76
重新設定 [功能表8-8]	76
WAP 音訊 [功能表8-9]	76
設 定 [功能表9]	77
日期和時間 [功能表9-1]	77
手機設定 [功能表9-2]	77
通話設定 [功能表9-3]	78
保密設定 [功能表9-4]	82
網絡設定 [功能表9-5]	86
GPRS 設定 [功能表9-6]	87
音訊 [功能表9-7]	88
Q&A	89
配件	92
技術數據	93









手機圖解





您的手機


手機外觀說明

按鍵	說明
	<p>左軟鍵/右軟鍵 這兩個軟鍵都可以執行螢幕上顯示於軟鍵正上方文字所指示的功能。</p>
	<p>導覽鍵 用來快速存取手機功能。</p> <ul style="list-style-type: none"> • 向上導覽鍵 備用模式時按此鍵可依姓名搜尋電話簿。 • 向下導覽鍵 直接進入錄音器功能表。按此鍵可直接開始錄音。 • 向左導覽鍵 進入情報模式功能表的捷徑按鍵。 • 向右導覽鍵 進入訊息收件箱的捷徑按鍵。 <p>確認鍵 選擇功能表選項並確認動作。</p>
	<p>撥送鍵 撥打電話號碼及接聽來電。備用模式時按此鍵可快速存取最後來電、回撥電話或未接來電。</p>
 	<p>數字按鍵 可輸入數字、字號與一些特殊字元。</p>
	<p>結束/音源鍵 用來結束通話或拒接來電並回到備用模式。</p>



按鍵	說明
	清除鍵 每按一次刪除一個字元。按住此鍵可清除所有輸入。
	相機鍵 按此鍵可使用相機功能。
	日曆表鍵 進入日曆表功能表的捷徑按鍵。

側邊按鍵

按鍵	說明
	側邊按鍵 <ul style="list-style-type: none">• 這話由可控制副機音響。• 如果機蓋已關閉, 按其印一個按鍵可輪流顯示目前的时间與日期。• 如果機蓋已開啓, 可控制副機模式的按鍵音響。



您的手機

顯示資訊

以下表格說明手機顯示螢幕上所出現的各種狀態指示器或圖示。

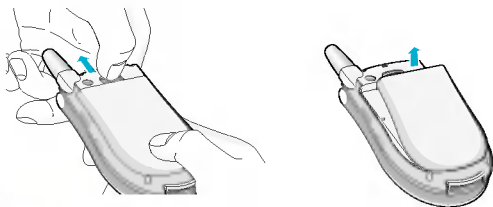
狀態圖示

圖示	說明
	網路訊號強度。
	通話進行中。
	可以使用的 GPRS 服務。
	您正在另一個網絡上漫遊。
	鬧鐘已經設定為處於啟動狀態。
	電池充電狀態。
	收到文字訊息。
	收到留言訊息。
	收到多媒體訊息。
	設定使用震動模式。
	收到電郵訊息。
	已啟用大聲情調模式。
	已啟用靜音情調模式。
	已啟用聽筒情調模式。
	已啟用前音情調模式。
	已啟用標準情調模式。
	可以使用的 Push 訊息服務。
	在日曆表功能表印選定的日可以安排行程。
	手機正在存取 WAP。
	您正在使用 GPRS。
	進入安全印面。



安裝 SIM 卡時關閉手機

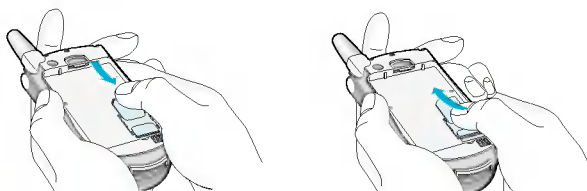
1. 取出電池前，請先確定電源已經關閉。將電池釋放門往上按，以 45 度角取出電池。



附註

- 在電源開啓時取出電池可能會導致手機發生故障。

2. 將 SIM 卡插入固定座。將 SIM 卡滑入 SIM 卡固定座。請確定 SIM 卡正確插入卡槽上的金屬接觸點朝向下。取出 SIM 卡，請輕輕往上按，然後往反方向拉出。



插入 SIM 卡

取出 SIM 卡

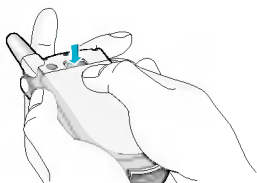
附註

- SIM 卡金屬接觸點容易刮傷而非壞。拿取 SIM 卡時請特別注意。請參照 SIM 卡所附之說明書進行安裝。



開始使用

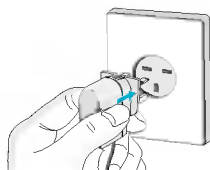
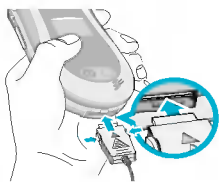
3. 將電池底部的凸出插到固定座，然後，將電池上半部推入固定座。



為電池充電

本手機只限使用隨附的充電器。

1. 電池在手機中時，請將旅行充電器的導線連接到手機底部。請確定導線接頭上的箭頭與手機正面向著同一方向。
2. 將充電器另一端連接到電源插座。



注意

- 使用未經認可的配件可能會損壞手機並使保費失效。
- 請勿強行插入接頭，以免損壞手機和/或充電器。



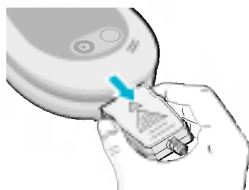
注意

- 插上旅行充電器後，螢幕會顯示「電池正在充電」。唯在電池完全沒電時，通話指示燈才會不顯示「電池正在充電」的狀態才亮起。

插入充電器

請務必使用原廠提供之充電器為您的手機充電。

1. 充電完成時，電池圖示的移動式指示列會停止動作，且螢幕上會顯示「已滿」。
2. 拔出電池插座上的充電器插頭。按插頭兩側的外向彈簧片，然後拔出插頭，分開手機與充電器。



附註

- 首次使用手機前，請先確定電池已完全充電。
- 請勿在充電時取出電池或 SIM 卡。
- 如果電池充電不足，請使用電池座將手機關閉後再打開，然後為電池重新充電。拆下並重新裝上電池後，為電池重新充電。




開始使用

開啓或關閉您的手機

開啓您的手機




1. 安裝手機電池後，將手機連接到外接式電源，例如旅行充電器、點煙器充電器或可移動電源。將充電器的電源插頭插入手機。
2. 按  幾秒鐘，直到 LCD 螢幕開啓。
3. 隨著 PIN 碼要求提示的不同，您可能必須輸入您的 PIN 密碼。

附註

- 與其他無線電裝置一樣，手機開啓時，除非必要，請避免碰觸天線。

關閉您的手機

1. 按  幾秒鐘，直到 LCD 螢幕關閉。

密碼鎖

使用本節所述之密碼鎖，可避免他人擷取您的手機。密碼鎖 (PUK 和 PUK2 密碼除外) 可用使用 [功能表 9-4-5] 中的更改密碼功能啟用/變更。



PIN 碼(4 至 8 位數字)

PIN (個人身份號碼) 密碼能保護您的 SIM 卡密碼他人擅自。
通常PIN碼會隨 SIM 卡一起提供。當PIN 碼被設定為開
啓，每次開機時，手機會要求您輸入 PIN 碼。當PIN 碼被設定
為關閉，手機不用輸入 PIN 碼即可直接連上網絡。

PIN 2 碼(4 至 8 位數字)

有些 SIM 卡會隨附PIN 2 碼，您需輸入此密碼才能使用如啓用
通話計費與固定撥號等功能。這些功能僅在 SIM 卡支援的情況下
才能使用。詳細資訊，請洽詢您的網絡商。

PUK 碼(4 至 8 位數字)

密碼被鎖定的PIN碼，必須輸入 PUK(PIN開鎖密碼)碼。
PUK碼可能會隨 SIM 卡一起提供。如果沒有，請洽詢您的網絡商
以取單該密碼。如果遺失該密碼，也可向網絡商索取。

PUK 2 碼(4 至 8 位數字)

有些 SIM 卡會隨附PUK 2碼，輸入此密碼才能解除被鎖定的
PIN 2碼。如果遺失該密碼，也可向網絡商索取。

安全密碼 (4 至 8 位數字)

安全密碼可防止手機遺失他人擅自。預設安全密碼為「0000」，
關閉除所有手機記錄及啓用直撥功能表時，將需輸入安全密
碼。此外，關閉密碼簿則防止他人擅自手機的快捷鎖功能時，
也需輸入安全密碼。如修改安全密碼的預設值，請利用保護設
定功能表。

限制密碼

使用通話限制服務功能時，需輸入限制密碼。申請此功能時請
向網絡商索取密碼。如取單詳細資訊，請參閱第84頁。



一般功能

撥打電話與接聽來電

撥打電話

1. 確定手機已經開啓。
2. 鍵入電話號碼，包括區碼。在 LCD 屏幕上編輯號碼，按向上/向下導航鍵，將游標移動到所需的位置，或是直接按清除鍵(☒)，即可一次清除一個數字。
▶ 按住清除鍵(☒)清除整個號碼。
3. 按發送鍵(☎)撥出電話。
4. 在結束通話，按結束鍵(☎)或右軟鍵。關閉機器也可以結束通話。

使用發送鍵撥打電話


1. 在叫喚模式時，按發送鍵(☎)將會顯示最後來電、已撥電話與未撥電話的號碼。
2. 使用向上/向下導航鍵選擇所需的號碼。
3. 按☎。

撥打國際電話

1. 按住☒鍵以輸入國際撥號前碼。「+」字元會自動選擇國際撥號前碼。
2. 輸入國碼、區碼及電話號碼。
3. 按☎。




結束通話

結束通話時，按  鍵。

透過電話簿撥打電話

您可以將經常撥打的姓名與電話號碼儲存在 SIM 卡和/或手機記憶體中，也就是電話簿。您可以透過查看電話簿姓名來撥打所需的號碼。有關電話簿功能的詳細資訊，請參閱第 47-52 頁。

調整音量

在通話時調整手機音量，請使用側邊按鍵 。按上側邊按鍵調高音量，按下側邊按鍵調低音量。


接聽來電

接到來電時，手機會發出鈴聲且手機圖示會在螢幕上閃爍。如果手機可以識別來電者，則會顯示來電者的電話號碼（或儲存在電話簿中的姓名或姓名）。

1. 摺開機蓋以接聽來電。

附註


- 使用電話簿或其他功能表功能時也可以接聽來電。

2. 關閉機蓋或按  以結束通話。



一般功能

訊號強度

要了解訊號強度，請查看手機 LCD 屏幕上的訊號指示器 。訊號強度各有不同，尤其是在建築物內。靠近窗邊將可改善接收狀況。

輸入文字

您可以用手機鍵盤輸入文字。例如，在簡訊簿內儲存姓名、輸入訊息、建立個人歡迎郵件或在日程表中安排日程都需要輸入文字。

本手機所用的文字輸入方法如下。


T9 模式

使用此模式時，每個字只須按一次按鍵即可輸入單字。鍵盤上每個按鍵都代表一個單上的字。T9 模式會自動將您按下的按鍵與內建字典進行對比，然後決定正確的单字，因此按鍵次數較傳統 ABC 模式少。這有時之稱為預測文字。

ABC 模式

使用此模式時，按一次、兩次、三次或四次標示所需字型的按鍵，直到顯示所需字型，才可輸入該字型。

123 模式 (數字模式)

只須按一次按鍵即可輸入一個數字。利用文字輸入欄的輸入模式變更為 123 模式，請長按  鍵直到顯示 123 模式。



變化的字輸入模式

1. 進入說話輸入字元的欄位後，在 LCD 解碼台上即可看到文字輸入模式指示器。
2. 長按 可變化的字輸入模式。您可在 LCD 解碼台上查看目前的文字輸入模式。

使用 T9 模式

T9 預測文字輸入模式讓您可以使用最少的按鍵次數輕鬆輸入單字。當您按每個按鍵時，手機會開始根據已鍵入字顯示手機認為您需輸入的字元。您也可在字典中新增單字。新增單字後，單字會隨變化的顯示字與最相近的待選字。

1. 在 T9 預測文字輸入模式中，按 至 開始輸入單字。每個字只按一個按鍵。
 - 單字會隨著鍵入的字變換。在未完成鍵入前，請勿理會解碼台上的顯示項目。
 - 如果鍵入完成後的單字還是不對，請按一次或多次向下導航鍵，以循環顯示其他的單字選項。

例如

- 按 可鍵入 Good。
- 按 [向下導航鍵] 可鍵入 Home。

- 如果單字選擇列表中沒有所需的單字，請使用 ABC 模式新增單字。
- 您可使用選擇 T9 模式的語言。按 鍵 [選項]，然後選擇 T9 語言或長按鍵盤上的 鍵來切換語言。選擇所需的 T9 模式語言。您也可用選擇停用 T9 來關閉 T9 模式。手機預設停用 T9 模式。



一般功能

2. 在編輯或刪除任何按鍵輸入之前，輸入整個單字。
3. 輸入每個單字後，按 **[Out]** 鍵加上空格。要刪除字型，請按 **[C]**。按住 **[C]** 可清除所有單字。

附註

- 如果您儲存輸入內容則結束文字輸入模式，請按 **[OK]**。否則機會回到備註模式。

► 如何使用 T9 輸入法

- 1) **ST (字劃輸入法)**：如何使用字劃輸入法選擇印出字元。

當您逐一輸入各個字劃字根後，印出字元便會顯示出來。使用 **[←]** 及 **[→]** 鍵來查看其他字元選項，並按 **[OK]** 加以選擇。同樣地，使用 **[←]**、**[→]**、**[↑]** 及 **[↓]** 鍵來尋找其他不同字元。

例如：要輸入「你們」，請順時按數字鍵 **[5*]**、**[2*]**、**[3*]**、**[5*]** 及 **[2*]**，然後您將會看到第一個字元「你」。現在，按 **[OK]** 然後再按 **[1*]** 鍵選擇「你」。然後再按 **[OK]** 及 **[1*]** 鍵選擇「們」。

按鍵	筆劃	按鍵	筆劃
[1*]	一	[6*]	? (通配符號)
[2*]	丨	[7*]	
[3*]	丿	[8*]	
[4*]	丶	[9*]	
[5*]	㇇	[OK]	選擇鍵

<字劃表>



2) PY (拼音輸入法)：「拼音輸入法」可根據中文字元的英文拼音尋找字元。

拼音輸入法：在輸入首個拼音符號後便可直接尋找字元。

例如) 輸入「國貨」，請單擊按數字鍵 **4**、**8** 及 **6**，然後「guo」及「huo」將出現在外部編碼屏幕。在選取「guo」後，許多具有相同拼音方式的字元將會出現供您選擇。接下來您可從其中選取字元「國」（按 **OK** 然後再按 **1**）。在選取首個字元後，接著會出現其他各種字元。您可採用相同方法選取「貨」（按 **OK** 然後再按 **5**）。

按鍵	注音	按鍵	注音
1	ㄅ ㄆ ㄇ	6	ㄆ ㄇ ㄨ
2	ㄉ ㄊ ㄋ	7	ㄩ ㄛ ㄜ ㄝ
3	ㄍ ㄎ ㄌ	8	ㄎ ㄏ ㄨ ㄨ ㄨ
4	ㄐ ㄑ ㄒ	9	ㄎ ㄎ ㄨ ㄨ ㄨ
5	ㄗ ㄘ ㄙ	0	ㄟ ㄨ ㄨ

▶ 簡化的 ABC 模式

使用 **2** 至 **9** 鍵輸入您的文字。

1. 按標有所需字元的按鍵：

- 按一次選擇第一個字元
- 按兩次選擇第二個字元
- 以此類推

2. 插入空格，請按一次 **0** 鍵。刪除字元，請按 **c** 鍵。

按住 **c** 鍵清除所有顯示。



一般功能

附註

- 請參閱以下表格，瞭解透過數字按鍵輸入的可別字元語彙表。

按鍵	按鍵時顯示的字元	
	大寫	小寫
	., - ? ! ' @ : 1	., - ? ! ' @ : 1
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i 4
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	空白鍵	空白鍵

▶ 使用 123 (數字) 模式

您可以使用 123 模式在文字訊息中輸入數字 (例如，電話號碼)。在自動切換到適當的文字輸入模式之前，按下對應於所需數字的按鍵。



電話簿

您可以在您的 SIM 卡記憶體中儲存電話號碼與電話號碼對應的姓名。此外，手機記憶體最多可以儲存 255 個號碼與姓名。

SIM 卡與手機在電話簿功能表中的使用方式都一樣。(詳細資訊，請參閱第 47-52 頁。)

通話功能表

本手機提供某些通話時可以使用的控制功能。要在通話時存取這些功能，請按左軟鍵 [選項]。

通話中

通話時手機螢幕上顯示的功能表，與個別模式中顯示的預設功能表不同，並具有下述選項。

撥打第二個電話

您可以從電話簿取單所需撥打的號碼，再撥打第二個電話。按右軟鍵後選擇 **撥動**。要在通話時將撥打的號碼儲存至電話簿，請按右軟鍵後選擇 **新增**。

在兩個電話之間切換

要在兩個電話之間切換，請按左軟鍵後選擇 **切換**。

撥聽來電

要在手機鈴響時撥聽來電，只需按 **撥聽** 鍵即可。通話中如有其他來電，本手機具備額外的通知功能。鈴筒會議出聲音，而螢幕上則會顯示第二個電話正在等候撥聽。

此功能稱為 **來電等候**，僅在網路支援時才可使用。若要瞭解如何啟動與取消此功能的詳細資訊，請參閱第 80 頁的 **來電等候** [功能表 9-3-4]。



一般功能

如已啓動來電等候，您可以按 或依本選取空載鍵與保留鍵撥號，保留第一個電話並撥號第二個電話。您可以依本選取空載鍵與結束鍵與撥號，結束目前通話並撥號正在等候的來電。

來電拒接

直接按 鍵即可不叫接聽而拒接來電。

您可以在通話中按空載鍵 [選項] 鍵並選取 **電話會議 / 拒接**，或按 拒接來電。

咪高質靜音

在通話時按 [選項] 鍵，然後選取 **靜音開啓**，可使咪高質靜音。選取 **靜音關閉**，可取消手機靜音。手機靜音時，來電者將聽不見您的聲音，但您仍可聽見來電者的聲音。

在通話中開啓DTMF音頻

如在通話時開啓 DTMF 音頻，請按空載鍵後選取 **DTMF 開啓**。使用相同方法可關閉 DTMF 功能。DTMF 音頻讓手機可用使自動變換機功能。

電話會議

如與網絡商支援多方通話或電話會議服務，您即可使用此功能同時與多個來電者通話。目前在您撥號兩個電話後，呈其中一個電話的狀態為通話中，而另一個為保留時，才可用設定多方通話。設定多方通話後，設定者可新增、中斷或隔離 (即從多方通話中移除，但仍保持連線) 通話。這些選項均可從來電功能表中取用。多方通話中的來電者人數最多為五人。啓用多方通話後，您可用對其進行控制，並且只有您才可用新增來電者。

撥打第二個電話

您可以在通話時撥打第二個電話。輸入第二個號碼後按 鍵。



接通第二個電話後，會自動保留第一個電話。按左軟鍵後選取**切換通話**，可在兩個電話之間切換。

設定電話會議

將第一個電話保留至接聽目前電話時，按左軟鍵後選取**電話會議 / 全部加入**。

保留電話會議

按左軟鍵後選取**電話會議 / 全部保留**。

許可保留中的電話會議

按左軟鍵後選取**電話會議 / 全部加入**。

新增通話到電話會議

將新增通話到現有的電話會議，請按左軟鍵後選取**電話會議 / 全部加入**。


顯示多方通話中的通話者

在手機螢幕上捲動查看參與多方通話的來電者號碼，使用上下導航鍵進行瀏覽。

在多方通話中進行私人通話

與多方通話中的某個通話者進行私人通話，請先使其號碼顯示在螢幕上，然後依次選取左軟鍵[選項]與多方通話/私人通話，並保留所有其他來電。

結束電話會議

按  鍵和螢幕目前顯示的電話會議來電者。要結束電話會議，請按左軟鍵後選取**電話會議 / 結束多方通話**。按左軟鍵後選取**電話會議 / 全部結束**，將會結束目前正在進行與保留的所有通話。



功能表樹狀目錄



1 情景模式

- 1 震動
- 2 靜音
- 3 標準
- 4 大聲
- 5 聽筒
- 6 靜音



2 通話記錄

- 1 未接來電
- 2 已接來電
- 3 已撥電話
- 4 刪除近期通話
- 5 通話時間
- 6 通話計費
- 7 計費設定
- 8 GPRS計費



3 娛樂樂器

- 1 響鬧
- 2 計數機
- 3 巧的文件夾
- 4 單位換算器
- 5 時區設置
- 6 錄音器
- 7 啟動紅外線



4 詞典簿

- 1 日程表
- 2 備忘錄
- 3 電話簿



5 訊息

- 1 文字訊息
- 2 多媒體訊息(MMS)
- 3 留言訊息
- 4 小區廣播
- 5 簡訊短語
- 6 訊息體狀態



6



6 相機

- 1 拍照
- 2 圖庫

7



7 遊戲及應用程式

- 1 遊戲
- 2 應用程式
- 3 下載
- 4 記錄

8



8 互聯網

- 1 移動
- 2 書籤
- 3 Push 訊息
- 4 網絡設定
- 5 進階 URL
- 6 緩存設定
- 7 安全認證
- 8 重新設定
- 9 WAP 記錄

9



9 設定

- 1 日期及時間
- 2 手機設定
- 3 通話設定
- 4 保密設定
- 5 網絡設定
- 6 GPRS 設定
- 7 重設

0





0 SIM 卡服務

本功能表內皆視乎 SIM 卡及網絡服務而定。

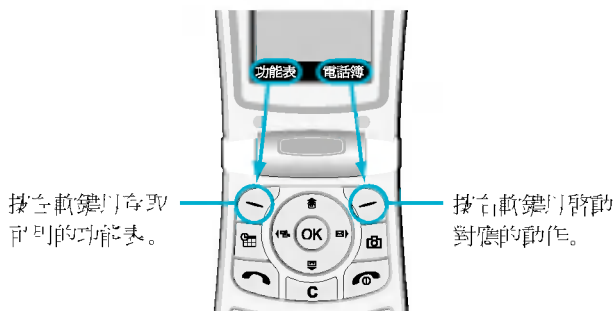


選取功能表選項

本手機提供一組讓您可以自訂手機的功能。這些功能配置在功能表與子功能表中，利用兩個標示有  與  的軟鍵來存取。

您可以利用每個功能表與子功能表查看及變更特定功能的設定。

軟鍵的功用隨著目前所顯示的畫面而有所不同；螢幕下方位於每個軟鍵正上方的一行標籤表示軟鍵目前的功用。





在情景模式中，您可以調整和自訂不同事件、環境的來電者群組的三機鈴聲。

預設的情景模式有八種：震動、靜音、標準、大聲、簡短及靜音。除了震動與靜音外，每種情景模式都用一個大作。

按功能表鍵(☰)，然後使用導聽鍵選取情景模式。

啓動 [功能表1-X-1]

1. 顯示情景模式列表。
2. 在情景模式列表中，捲動到想別啓動的情景模式，然後按左軟鍵[確認]或確認鍵。
3. 然後，選擇啓動。

自訂情景模式 - 設定 [功能表1-X-2]

在情景模式列表中捲動到所需的情景模式。按確認鍵或左軟鍵後，選擇**更改**。情景模式設定選項將會開啓。按需設定選項。

來電鈴聲類型：設定來電提示的類型。

鈴聲類型：從列表內選取所需的鈴聲。使用向上/向下導聽鍵捲動列表。您可以收藏過所需的鈴聲後再進行選取。

鈴聲音量：設定鈴聲音量。

訊息提示類型：設定訊息提示類型。

訊息提示音：選取訊息提示音。

按鍵音：選取所需的按鍵音。

按鍵音量：設定按鍵音量。

翻蓋音效：設定機蓋開啓或關閉時的音效。

音訊效果：設定音訊效果。



情景模式 [功能表1]

音源開關鈴聲：設定開啓/關閉手機時的鈴聲音源。

自動接聽：(限前叫操作模式) 您可用啓用自動接聽功能。
選取自動接聽前的響鈴時間。

自訂情景模式 - 重新命名[功能表1-X-3]

您可用重新命名情景模式，設定任何你想要的名稱。**震動、聽筒**及前叫情景模式無法重新命名。

1. 選擇情景模式的名稱，請在情景模式列表中按動到所需的情景模式，按**確認**鍵或**左軟**鍵後選取**重新命名**。
2. 鍵入所需的名稱後，再按**確認**鍵或**左軟** [儲存]。

道語記錄 [功能表2]



如果網絡支援服務區域內的本會線路識別 (CLI)，則您可以查看未接、已接和已攝的電話。

號碼與姓名 (如果有的話) 及圖片 (如果有的話) 會和電話的日期與時間一起顯示。您也可以查看道語時間與說明。

按功能表鍵 (☞)，然後使用導覽鍵選取**道語記錄**。

未接來電 [功能表2-1]

使用此選項可以查看最近 10 個未接來電。按左軟鍵 [選項] 後，您也可見：

- 查看號碼 (如果有的話) 及撥打該號碼，或將其儲存在電話簿中。
- 為該號碼輸入新的姓名並儲存在電話簿中。
- 傳送訊息給此號碼。
- 從列表中刪除此個電話。

附註

- 要刪除列表中所有的道語記錄，請使用刪除近期道語功能表。

- 編寫儲存在電話簿中的姓名。

附註

- 在電話簿中只有一個號碼的記錄亦可編輯姓名。其他號碼 (例如 FDN、SDN) 無法編輯姓名。



通話記錄 [功能表2]

☰ 撥來電 [功能表2-2]

使用此選項可以查看最近 10 個☰撥來電。按下軟鍵 [選項] 後，您將看到：

- 查看號碼 (如與自的話) 及撥打該號碼，再將其儲存在電話簿中。
- 為該號碼輸入新的姓名並儲存在電話簿中。
- 傳送訊息給此號碼。
- 從列表刪除此個電話。

附註

- 刪除列表中的所有通話記錄，請使用刪除近期通話功能表。

- 編輯儲存在電話簿中的姓名。

附註

- 在電話簿中只有一個號碼的記錄才可以編輯姓名。其他號碼 (例如 FDN、SDN) 無法編輯姓名。

☰ 撥電話 [功能表2-3]

使用此選項可以查看最近 10 個☰撥電話 (☰撥出或背號撥出)。使用 [選項] 鍵，您將看到：

- 查看號碼 (如與自的話) 及撥打該號碼，再將其儲存在電話簿中。
- 為該號碼輸入新的姓名並儲存在電話簿中。
- 傳送訊息給此號碼。
- 從列表刪除此個電話。



附註

- 刪除列表中所有的通話記錄，請使用刪除近期通話功能表。

- 編輯儲存在電話簿中的姓名。

附註

- 如已啓用 FDN，將不會顯示 [編輯名稱] 功能表。

刪除近期通話[功能表2-4]

使用此功能可刪除未接、已接和已撥的電話列表。您可以選取所有通話一次刪除所有電話列表。

通話時間[功能表2-5]

使用此功能可查看來電或已撥電話的通話時間。使用向上/向下導覽鍵移動時，可在屏幕下方查看每個電話的通話時間。按 [確認] 鍵或左軟鍵 [直設] 可直設選定電話的通話計時器。為防止意外直設，您必須輸入安全密碼。

- 最後通話：上次通話時間
- 已接來電：來電的通話時間
- 已撥電話：已撥電話的通話時間
- 所有通話：從上次直設計時器算起，所有已撥或已接電話的總通話時間。



通話記錄 [功能表2]

附註

- 通話商的實際通話時間帳單會隨網絡功能、帳單四捨五入計算等而有所不同。

通話計費 [功能表2-6]

使用此網絡服務可查看上次通話費與所有通話費。通話費明會顯示在 LCD 螢幕下方。要設置通話費明，請按主軟鍵 [通話] 或確認鍵。您必須輸入 PIN2 碼。

附註

- 通話商的實際通話費明帳單會隨網絡功能、帳單四捨五入計算、稅額等而有所不同。

計費設定 [功能表2-7]

- **通話費明限制：**使用此網絡服務可將通話費明限制在一定的計費金額或幣值金額內。您每月撥打或接聽的通話，不能超過特定費明限制。輸入 PIN2 碼後即可變更通話費明的限制。
- **設定幣率：**設定幣值與單位。請洽詢服務供應商以了解計費單位。在此功能表中選取**幣值**或**單位**，您可能需輸入 PIN2 碼。

附註

- 明盡全部金額後，除緊急通話外，您將無法撥打任何通話。您需輸入 PIN2 碼才能設定通話費明限制，視 SIM 卡而定。



- **自動顯示**：使用此網絡服務時自動顯示上次通話數目。
如果在**自動顯示**功能表中選取**開啓**，則在通話結束後查看數目。

GPRS 數據 [功能表 2-8]

利用 GPRS 數據選項，可查看透過網絡傳輸的數據量。此外，也可查看網上連接時間。(GPRS 為 General Packet Radio Service 的縮寫，即「通用分組無線電服務」。)

- **WAP 數據**

您可以查看採用 WAP 連線的數據流量與使用時間。在選定的功能表中，按左箭鍵 [查詢] 或確認鍵清除計數器。

- **外接設備**

您可以查看用連接埠等外接式裝置進行之 GPRS 連線的數據流量與使用時間。

- **總數據**

您可以檢視所有透過 WAP 與外部裝置的數據使用數目。



娛樂樂器 [功能表3]

按功能表鍵 (☰)，然後使用導覽鍵選取娛樂樂器。

響鬧 [功能表3-1]

設定響鬧在指定的時間響起。在響鬧功能表中，可以用以下選項。

開啓

設定響鬧的時間。

1. 進入功能表。
2. 利用向上/向下導覽鍵選取 [開啓]。
3. 使用數字鍵輸入響鬧時間。
4. 利用向上/向下導覽鍵選取其日一個響鬧選項：一次、每日、每週及每月。
5. 響鬧音樂部份：利用向上/向下導覽鍵選取所需的響鬧音樂。

關閉

停止響鬧。




計算機 [功能表3-2]

此功能可以用將手機當作計算機使用。計算機可提供基本的計算功能：加法、減法、乘法及除法。(您最多可以用輸入到小數點後十位的數字。)

使用計算機

1. 使用數字鍵輸入第一個數字。
2. 要選擇計算功能，請按對應的導航鍵。
3. 要計算結果，請按左軟鍵 [結果] 或確認鍵。
4. 計算後，按左軟鍵 [重設] 回到最初的狀態。

附註

- 要刪除任何錯誤並清除屏幕，請按  鍵。要加上小數點，請按  鍵。要加上前號，請按  鍵。

我的文件夾 [功能表 3-3]

我的文件夾有 3 個資料夾：圖片、動畫及聲音。您可以用檢視、刪除或控制下載的內容。您可以用 WAP 網站、多媒體訊息或文字訊息取得圖片、動畫或聲音。當您在查看每一項內容時，您可以利用文字訊息或多媒體訊息傳送、修改或刪除內容。您可以用將動畫文件夾中的內容設定為牆紙。至於聲音，則可以將所需的聲音設定為鈴聲。

圖片 [功能表 3-3-1]

動畫 [功能表 3-3-2]

聲音 [功能表 3-3-3]

記憶體狀態 [功能表 3-3-4]



娛樂樂器 [功能表3]

單位換算器 [功能表3-4]

此功能可用轉換任何數值單位。轉換單位類型共有 4 種：長度、面積、重量及體積。

1. 按左軟鍵 [單位] 選取四種單位類型中的一種。
2. 按向下導航鍵移至要用的單位部份。
3. 使用向左/向右導航鍵選取要轉換的單位。
4. 按向下導航鍵移至轉換單位部份。
5. 使用向左/向右導航鍵選取要轉換的單位。
6. 使用數字鍵輸入數字。轉換將會自動計算。

附註

- 按 鍵可輸入小數。

時區設置 [功能表3-5]

使用向左/向右導航鍵可以查看格林威治標準時間 (GMT) 與全球 59 個主要城市的目前時間。

屏幕上會顯示城市的名稱、目前的日期與時間。如選取所在位置的時區，請按照以下步驟進行：

1. 按一次或多下向左/向右導航鍵，選取與您的時區對應的城市。當地日期與時間將會顯示。
2. 如將在備用模式中的顯示時間變更為選定的時間，請按左軟鍵 [選項]。然後選取 。

附註

- 時區設置功能表中每個城市的時區設定可能會受到網絡狀況的影響。



錄音器功能表 3-6

您可以用錄製備忘錄。最多可以用錄製 3 則語音備忘錄，每則最長 30 秒。使用左軟鍵 [選項] 鍵可以用播放或刪除已錄的備忘錄或錄製新的語音備忘錄。

- **播放**

讓您可以播放所有已錄製的備忘錄，從最新的備忘錄開始播放。屏幕上會顯示備忘錄的錄製日期與時間。

- **刪除**

讓您可以刪除一則特定的備忘錄。

- **新錄音**

讓您可以錄製新的備忘錄。

- **全部刪除**

讓您可以刪除所有備忘錄，使用導聽鍵捲動至是，然後按左軟鍵 [確認]。

附註

- 在備用模式中，按向下導聽鍵可直接進入錄音器功能表。
- 如果所有備忘錄位數已滿，則必須在錄製新的備忘錄之前先刪除一則舊的。



娛樂樂器 [功能表3]

啓動紅外線 [功能表3-7]

使用此功能可利用紅外線場傳送或接收數據/傳真。要使用紅外線連接：

1. 安裝用來接收或傳送數據/傳真的數據機驅動程式。
2. 在電腦上安裝網絡商提供的網絡撥接軟件或傳真應用程式。
3. 設定或啓用電腦的 IrDA 相容紅外線場。
4. 啓動手機的紅外線功能；III 符號會顯示在屏幕的右下角。
5. 撥打服務供應商提供的網絡服務號碼。

如果手機與 IrDA 相容裝置在啓動紅外線功能的 30 秒內無法通訊，將會自動取消。

詳細資訊，請洽詢您的網絡商。

附註

- PC Sync 是一套程式，可透過數據傳輸線在 PC 和手機間交換資料。因此，如果欲使用此功能，請購買該配件包。詳情請參閱光碟印出的 PC Sync 說明檔案。



按功能表鍵(☞)。使用導覽鍵選取記事簿。

日程表 [功能表 4-1]

進入此功能表後，記事曆將會顯示。目前日期會以方框游標加粗標示。您可以使用導覽鍵移到另一個日期。如果日期下方的顏色顯示，表示當天有安排日程或訂有備忘錄。此功能可提醒您日程與備忘錄。如果設定此功能，手機屏時將會發出響鬧聲。

查看 [功能表 4-1-1]

顯示所選日期的日程。按 [選項] 可刪除或修改選取的日程。

修改 [功能表 4-1-2]

修改日程。

刪除 [功能表 4-1-3]

刪除日程。

新加 [功能表 4-1-4]

最多可新增 30 則日程，每則日程最多可編排 30 個字元。

記事曆 [功能表 4-1-5]

回到記事曆。

日程表鈴聲 [功能表 4-1-6]

當可啟用此選項的日程到達所定的日期與時間時，手機會發出響鬧聲。

查看所有日程表 [功能表 4-1-7]

顯示您設定的所有日程。使用向上/向下導覽鍵瀏覽日程列表。



記事簿 [功能表 4]

進¹日期[功能表4-1-8]

移至特定日期。使用數字鍵與向左/向右導覽鍵輸¹日期。

刪除舊記事[功能表4-1-9]

您可以用刪除鍵¹擷獲通知的過期日程。

全部刪除[功能表4-1-10]

刪除所有日程。有機會要求您確認此動作。

備忘錄[功能表4-2]

您可以用加¹、修改及刪除特定日期的備忘錄。

1. 捲動至備忘錄。
2. 按左軟鍵 [加¹]。
3. 輸¹備忘錄後按左軟鍵 [選項]。

可以用使用的選項如下。

- 儲存：儲存備忘錄。
- T9 語言：選擇在備忘錄中使用的 T9 語言。
- 退出編輯器：結束備忘錄編輯程式。

將備忘錄輸¹螢幕後，

1. 選擇一個備忘錄。
2. 按左軟鍵 [選擇]。
3. 按左軟鍵 [選項]。

可以用使用的選項如下。

- 修改：編輯選定的備忘錄。
- 刪除：刪除選定的備忘錄。
- 新加¹：新增備忘錄。
- 全部刪除：刪除所有備忘錄。

電話簿 [功能表 4-3]

您可以用您的 SIM 卡記憶體中儲存電話號碼與對應的姓名。
此外，手機記憶體最多可以儲存 255 個號碼與姓名。

- 在備用模式中按左軟鍵 [功能表]，然後選擇 **電話簿** → **電話簿**。
- 或在備用模式中按右軟鍵 [電話簿]。

搜尋 [功能表 4-3-1]

1. 在功能表模式中選擇 **電話簿** → **電話簿**，然後選擇 **搜尋**。或在備用模式中按右軟鍵 [電話簿] 然後選擇 **搜尋**。輸入要尋找的姓名開頭，然後按左軟鍵 [搜尋]。

附註

- 您也可以直接在備用模式中按 \uparrow 向上導覽鍵即可進行電話簿搜尋。

2. 找到所需姓名後，按 [發送] 鍵即可撥出電話。或按左軟鍵 [選項] 使用以下選項。
 - **查看細節**：查看選定姓名的詳細資訊。
 - **修改**：編輯姓名、號碼與所列群組，齊部、備忘錄、電話簿柱狀。
 - **刪除**：刪除電話簿項目。
 - **更改字訊息**：輸入要發送給該姓名的文字訊息。
 - **更多媒體訊息**：輸入要發送給該姓名的多媒體訊息。
 - **複製**：將 SIM 卡電話簿項目複製到手機記憶體，反之亦然。
 - **語音**：錄製選定電話簿項目的姓名以進行聲控撥號。



記事簿 [功能表 4]

新增 \rightarrow [功能表 4-3-2]

使用此功能可以新增電話號碼到電話簿。此處共有兩種記憶體：
手機記憶體和 SIM 卡記憶體。

欲選擇哪一種記憶體，請到 **記憶設定** [功能表 4-3-8-1]。手機記憶體
容數為 255 筆。在手機記憶體中，每個姓名最多可輸入 20 個
字元。SIM 卡記憶體的容數隨 SIM 卡而異。

1. 在功能表模式中選擇 **記事簿** \rightarrow **電話簿**，或在側列模式中按右
軟鍵 [電話簿]。
2. 捲動至 **新增 \rightarrow** ，選定 \rightarrow 後按 [選擇]。
3. 您可以用新增電話簿項目至 SIM 卡記憶體或手機記憶體。
 - **\rightarrow 新增至 SIM 卡記憶體**
您可以用輸入姓名與號碼，然後選擇所需詳記。(隨 SIM 卡
而異)
 - **\rightarrow 新增至手機記憶體**
您可以用輸入姓名、號碼(手機)、住址、公司、電郵地址與備
忘錄，然後選擇所需詳記。

附註

- 電話簿相片只可以用新增至電話簿記憶體。

快速撥號[功能表4-3-3]

您可以指定 [2-9] 至 [9-999] 中的任何一個數字鍵，作為姓名列表項目的快速撥號代碼。按快速撥號列表項目的[發送]鍵，或按空鍵 [選項] 然後選擇撥號，即可撥出該電話號碼。或在備用模式下按指定按鍵 ([2-9] - [9-999]) 兩三秒，即可直接撥打電話。

1. 在功能表模式中選擇 **設置** → **電話簿**，或在備用模式中按前軟鍵[電話簿]。
2. 捲動到快速撥號，然後按[確認]。
3. 將新增號碼至快速撥號，選擇 <空>然後按空軟鍵[OK]。您可以在電話簿中進行搜尋，再按[選擇]來選擇姓名。
4. 透過按空軟鍵[選項]，您可以更改或刪除快速撥號號碼、撥號、編碼文字或多媒體訊息。您可以查看下列功能表。
 - **更改**：變更成戶列表。
 - **刪除**：刪除成戶列表。
 - **撥號**：撥打選定的號碼。
 - **數字字訊息**：編碼訊息給該姓名的文字訊息。
 - **多媒體訊息**：編碼訊息給該姓名的多媒體訊息。



語音簿 [功能表 4]

聲控撥號列表 [功能表 4-3-4]

您可用姓名列表項目指定一段語音，作為語音撥號之用。

按 [發送] 鍵或在按 [軟鍵(選項)] 後選擇撥號，即可撥出該語音號碼。

1. 在功能表模式中選擇 **語音簿** → **語音簿**，或在備用模式中按 [軟鍵(語音簿)]。
2. 捲動至聲控撥號列表，然後按 [確認]。
3. 將新增號碼至聲控撥號列表，按 [軟鍵(加)]。您可在語音簿中進行搜尋，或按 [選擇] 來選擇姓名。在選取語音號碼後，錄製一段語音。
4. 透過按 [軟鍵(選項)]，您可用播放、更改或刪除一段語音、撥打語音、新加或刪除所有語音列表。您可用查看下列功能表。
 - **播放**：播放指定給語音號碼的語音設定。
 - **更改**：變更指定給語音號碼的語音設定。
 - **刪除**：刪除指定給語音號碼的語音設定。
 - **撥號**：撥打語音給選定的號碼。
 - **新加**：新增聲控撥號的語音號碼。
 - **全部刪除**：刪除所有聲控撥號的號碼。

附註

- 您最多可輸入 10 個聲控撥號的語音號碼。

來賓者群組[功能表4-3-5]

類型的群組有6個，還有一個標示其他的附加群組，您可以在此建立列表。

1. 在功能表模式由選擇**語音簿**→**賓語簿**，或在剛叫模式由按右軟鍵[賓語簿]。
2. 選擇**來賓者群組**。將會顯示多個群組列表：**家人**、**親朋人物**、**朋友**、**同事**、**群組1**、**群組2**及其他。
3. 按左軟鍵[選項] 選擇您要管理的群組名稱。除可其他外，將會顯示以下功能表。
 - **成員列表**：顯示群組內的成員列表。
 - **群組鈴聲設定**：選擇收到群組成員來賓時所使用的鈴聲。
 - **群組圖示**：選擇收到群組成員來賓時所顯示的圖示。
 - **加上新號碼**：新增群組成員。
 - **刪除號碼**：刪除群組成員。
 - **重新命名**：為群組設定新的名稱。

全部複製[功能表4-3-6]

您可以將項目從SIM卡記憶體複製/移到手機記憶體，反之亦然。

- **SIM卡存至手機**：將SIM卡中的項目複製到手機記憶體。
- **手機存至SIM卡**：將手機記憶體中的項目複製到SIM卡。

可用使用的選項如下。

- **保留原卡設定**：複製時，保留原卡號碼。
- **刪除原卡設定**：複製時，清除原卡號碼。

全部刪除[功能表4-3-7]

您可以刪除SIM卡、手機及語音列表的所有項目。除可**聯按撥號列表**之外，此功能需輸入安全密碼。




說明簿 [功能表 4]

設定 [功能表 4-3-8]

- **記憶設定**

您可以在 SIM 陸空手機之間選擇青語簿所儲存的記憶體。
如選擇**自選**，在新增項目時，手機會要求您提供儲存號碼的位置。

- **搜尋方式**

翻閱至**搜尋方式**，然後按  鍵 [選擇] 進入。

- 如您選擇**自選**，在搜尋時，手機將會詢問您怎樣搜尋。
- 如您選擇姓名或號碼，手機會依姓名或號碼搜尋項目。

- **相片顯示**

搜尋青語簿時，您可以在設定相片列表的檢視方式為相片檢視或檢視列表。如您選擇相片檢視，搜尋清單將顯示相片。

訊息提示 [功能表 4-3-9]

- **特別服務號碼 (取決於 SIM 陸)**

查看您的網絡商指定的服務編號 (SDN) 列表 (如與 SIM 陸支援的話)。此類號碼包括緊急、青語號碼查詢及留言號碼。

1. 選擇特別服務號碼選項。
2. 可用服務名稱將會顯示。
3. 使用向上/向下導覽鍵選擇服務。

- **記憶體狀態**

您可以在查看 SIM 陸空手機記憶體目前的記憶體狀態。

- **本機號碼 (取決於 SIM 陸)**

顯示儲存在 SIM 陸的青語號碼。



按功能表鍵(☰)後使用導覽鍵選取訊息。

文字訊息[功能表5-1]

您的手機可接收留言通知訊息與短訊服務(SMS)訊息。

留言與短訊服務都屬於網絡服務。詳細情況請洽詢您的網絡商。

📞 圖示顯示時，表示您有留言。📧 圖示顯示時，表示您有新的文字訊息。如果訊息記憶體已滿，將會顯示通知訊息，且 📧 圖示會閃爍，而您無法再接收任何新訊息。請使用收件箱功能表中的刪除選項刪除過時的訊息。

訊息記憶體由自訂可別空間時，將可接收任何未傳送的短訊服務訊息(如果可別空間足夠的話)。

撥訊息[功能表5-1-1]

您可撥輸入與編輯文字訊息。

1. 輸入您的訊息。有關如何輸入文字的詳細情況，請參閱第22至26頁(輸入文字)。
2. 完成輸入訊息後，選擇所需選項，請按左軟鍵[選項]。

可用使用的選項如下。

- **傳送到電話號碼：**輸入號碼或從電話簿或最近號碼記錄中選取號碼。一次最多可傳送訊息給5個電話號碼。按左軟鍵[選項]，將顯示下列選項。
 - 發送(輸入電話號碼後才會顯示)
 - 最近號碼記錄
 - 搜尋
- **儲存到草稿箱：**讓您儲存訊息以便稍後傳送。
- **T9 語言：**選擇T9輸入模式的語言。
- **清除文字：**清除所有文字。
- **退出：**結束撥訊息功能表。



訊息 [功能表5]

3. 輸入訊息時，您也可以按功能鍵[附加]來加入隨訊息一起傳送的附檔。
 - 符號：插入特定字元。
 - 圖片：您可以傳送與接收含有圖片的文字訊息，也就是所謂的「圖片MMS」。手機中您可以使用的預設圖片有好幾種，且您可以換成從其他來源收到的新圖片。
 - 動畫：利用EMS (Enhanced Messaging Service，改善短訊服務) 您可以在訊息中插入動畫。您可以在手機中挑選15種動畫中的一種。
 - 聲音：如果您使用的話，您也可以用在短訊中插入聲音。
 - 文字範本：使用手機中設定的常用短語。
 - 電話號碼：在訊息中加入電話號碼。
 - 簽名：您可以插入您的姓名。

收件箱[功能表5-1-2]

您可以搜尋所收到的文字訊息與彩信訊息並查看其內容。收到的訊息將依日期順序顯示。

按功能表鍵，然後選取訊息 → 文字訊息 → 收件箱。

圖示	說明
	已閱讀的SIM 簡訊
	未閱讀的SIM簡訊
	已閱讀的訊息
	未閱讀的訊息
	已閱讀的傳送報告
	未閱讀的傳送報告



附註

- SIM附訊息代表儲存在SIM附記憶體中的訊息。網絡會將傳入的訊息分辨為SIM附訊息或一般訊息。

與剛收到的訊息可以使用的以下選項。按左軟鍵[選項]。

- **回覆**
對收到的訊息作出回覆。
- **轉寄**
將收到的訊息轉寄給其他人。
- **覆音**
撥打寄件者電話。
- **取單**
取單訊息中的圖片、動畫、聲音、電話號碼、網頁或電郵地址。這些將會儲存在我的文件夾、電話簿或書籤中。
- **刪除**
刪除收件箱中選定的訊息。
- **查看訊息**
顯示選定訊息的更多相關資訊。



訊息 [功能表5]

發信箱[功能表5-1-3]

您可以用此功能表查看已傳送訊息的列表與內容，並可以檢查傳送是否成功。

圖示	說明
	已傳送的SIM 卡訊息
	已傳送的訊息

您可以使用的選項如下。

- **轉寄**
將目前的訊息轉寄給其他人。
- **刪除**
刪除發信箱中的訊息。
- **查看訊息**
顯示選定訊息的更多相關資訊。

草稿[功能表5-1-4]

在此功能表中，您可以查看儲存為草稿的訊息。使用向上/向下導覽鍵捲動列表。每則草稿具有以下選項。

- **發送**
將選定的訊息傳送給其他人。
- **刪除**
刪除選定的訊息。



設定[功能表5-1-5]

使用此功能表可以設定預設的短訊服務資訊。

- **訊息類型**
文字、語音、傳真、傳呼、X.400、電郵、ERMES
將預設的訊息類型設定為文字或語音。網絡可以將訊息轉換為選定的格式。
- **訊息有效期**
設定當文字訊息嘗試傳送給收件人時，該訊息儲存在短訊服務中心的時間。可以設定的數值為1小時、12小時、1日、1週以及網絡商許可的最長時限。
- **收發短訊狀態**
啓用或停用報告功能。啓用此功能時，網絡商會通知您訊息是否已經傳送。
- **互相回服務回覆**
如果網絡商提供此服務的話，將在您的SMS訊息收件人經由您的訊息中心傳送回覆給您。
- **訊息中心號碼**
儲存或變更傳送文字訊息的訊息中心號碼。您必須從您的服務供應商取得此號碼。

全部刪除[功能表5-1-6]

您可以刪除訊息記憶體中的所有訊息。




訊息 [功能表5]

多媒體訊息(MMS)[功能表5-2]

多媒體訊息可以包含文字、圖像與/或聲音片段。

此功能只有在您的網絡服務供應商支援時才能使用。只有提供相容性多媒體訊息的齊部功能的裝置才能接收與傳送多媒體訊息。

寫多媒體訊息[功能表5-2-1]

1. 編寫訊息主題，然後按OK鍵或軟鍵。
2. 輸入文字訊息。使用軟鍵的T9輸入模式時，您可以輸入符號、號碼與表情。輸入文字訊息後，請按軟鍵[完成]。
3. 加入圖像與/或聲音。您可以使用向上/向下導航鍵移至下一個部份。
4. 將游標移到  上，然後按確認鍵或軟鍵[選擇]，即可新增投影片。您也可以使用軟鍵[功能表]加入投影片。
5. 按軟鍵[功能表]。您可以使用的選項如下。
 - 發送：支援多個號碼與齊部地址的傳送。
 - 預覽：顯示您將傳送的多媒體訊息。
 - 儲存：將多媒體訊息儲存為草稿或副本。
 - 刪除：刪除MMS 訊息。
 - 投影片播放時間：設定投影片的播放時間。
 - 投影片格式：將訊息內含軌下、軌上、軌左或軌右。
 - 加入投影片：在目前的投影片前後新增投影片。
 - 除去這頁：刪除選定的投影片。



收件箱[功能表5-2-2]

收到訊息時您會得到通知。訊息將會儲存在收件箱中。您可以根據圖示識別每則訊息。詳細資訊，請參閱下列圖示說明。

圖示	說明
	已閱讀的多媒體訊息
	未閱讀的多媒體訊息
	已收到通知且已閱讀的多媒體訊息
	已收到通知但尚未閱讀的多媒體訊息

如果手機顯示「無儲存空間」的訊息，請刪除訊息、多媒體響應應用程式以釋放空間。

- **停止計時器**

當您收到包含不同相片之訊息時，將會顯示停止計時器功能表。相片這將會自動連續顯示。但是，如果選取此功能表，自動按空軟鍵[下一張]則可看到下一張相片。

- **上一張按影片**

顯示上一頁。

- **重播**

重播多媒體訊息。

- **刪除訊息**

刪除目前的訊息。

- **全部回覆**

回覆所有寄件者。





訊息 [功能表5]

- **轉寄**
將選定的訊息轉寄給其他人。
- **儲存訊息**
將多媒體訊息儲存為草稿格式或副本。
- **儲存項目**
取得圖片或聲音。它們將儲存在我的文件夾或音訊簿內。
- **細節**
顯示可接收訊息的相關資訊：寄件者地址、主旨(僅限於多媒體訊息)、訊息日期與時間、類型與大小。

發信箱[功能表5-2-3]

查看已傳送的訊息。對勾則已傳送的訊息，您可以查看傳送狀態。

	說明
	已傳送

- **停止計時器**
通常會以自動播放投影片的方式來顯示相片。但是，如果選取此功能表，手動按左箭鍵[下一張]則可看到下一張相片。
- **上一張投影片**
顯示上一張投影片。
- **重播**
重新播放目前的訊息。
- **刪除訊息**
刪除目前的訊息。



- **轉寄**
將目前的訊息轉寄給其他人。
- **儲存訊息**
將多媒體訊息儲存為草稿格式的本。
- **儲存項目**
儲存圖像、聲音與訊息附檔等項目。
- **細節**
顯示發信箱的訊息的相關資訊：主旨(僅限於多媒體訊息)、
訊息日期與時間、類型、大小。
- **回覆**
回覆目前訊息。
- **全部回覆**
回覆選定訊息的所有收件人。

草稿功能表 5-2-4

使用此功能表，您可以預設多達三則最常使用的多媒體訊息。
此功能表會顯示預設的多媒體訊息列表。您可以使用的選項如下。

- **發送**
支援多個成員與電郵地址的傳送。
- **預覽**
查看多媒體訊息草稿。
- **儲存**
將多媒體訊息儲存為草稿格式的本。



訊息 [功能表5]

- **刪除**
刪除訊息。
- **投影片播放時間**
設定投影片的播放時間。
- **投影片格式**
將訊息內含幕下、幕上、幕左或幕右。
- **加片 投影片**
在目前的投影片前後新增投影片。
- **除去這片**
移除反目的投影片。

設定 [功能表5-2-5]

經由此功能表，您可以設定多種多媒體訊息的設定。
可用使用的選項如下。

- **投影片播放時間**
設定每張投影片的播放時間。
- **對齊**
設定訊息的排列位置。
- **有效期**
設定將訊息保留在網路伺服器中的時間。
- **自動下載**
開啓：如果您選取此選項，將會在收到訊息時自動下載訊息。
確認：要求您確認是否下載訊息。
關閉：延遲下載訊息。




- 訊息中心

輸入多媒體訊息伺服器的地址以使用多媒體訊息服務。


- 網絡設定

詳細資訊，請參閱第75頁。

留言訊息[功能表5-3]

此功能表提供您快速存取留言信箱的方式(如果您的網絡提供此功能)。使用此功能前，您必須輸入從網絡商取得的語音伺服器號碼。收到新的語音留言時，屏幕將會顯示  符號。請向您的網絡商洽詢服務內容的詳細資料，並按此子功能表圖示。

聽取留言訊息[功能表5-3-1]

選擇此選項後，以快捷鍵(確認)，即可聽取語音留言。您也可以在此功能表圖示按住  鍵聽取語音留言。

留言信箱號碼[功能表5-3-2]

輸入及設定留言信箱號碼。

小區廣播[功能表5-4]

小區廣播訊息是網絡傳送給流動電話用戶的文字訊息。網絡提供如天氣報導、交通新聞、稅務、購票和股市行情等一般資訊。各種資訊類型均與號碼有關，請從網絡商取得該號碼。收到小區廣播訊息時，將會顯示彈出訊息以表示收到新訊息後直接顯示小區廣播訊息。

在此功能表圖示查看小區廣播訊息時，您可以利用下列選項。

讀取[功能表5-4-1]

您可以搜尋已接收的廣播訊息列表並查看其內容。



訊息 [功能表5]

接收 [功能表5-4-2]

啟用或停用廣播訊息的接收功能。

提醒提示 [功能表5-4-3]

啟用或停用收到新廣播訊息的通知功能。

自動顯示 [功能表5-4-4]

如果您將此選項設為**開啟**，將自動顯示所有收到的廣播訊息。

語言 [功能表5-4-5]

(取決於網絡和您所訂購的服務務)

使用此選項可以選取所需語言。基於廣播訊息將會以選定的語言顯示。如果您使用支援所有語言的手機，請選取列表末項的**自動**。

題目 [功能表5-4-6]

(取決於網絡和您所訂購的服務務)

按**左軟鍵**[確認]後選取**加**，建立新的主題。如果您已經有主題，則可使用**左軟鍵**[選項]關閉、修改或刪除主題。

常用短語 [功能表5-5]

列表中有預設的訊息。您可以查看與修改常用短語訊息或建立新的訊息。您可以使用三種常用短語：文字訊息、多媒體訊息和簡台。

文字訊息 [功能表5-5-1]

- 修改

在文字常用短語列表中輸入新訊息或編輯選定的常用短語訊息。



- **刪除**
在文字簡訊短語列表內刪除選定的簡訊短語訊息。
- **傳送文字訊息**
用文字訊息傳送選定的簡訊短語訊息。
- **傳送多媒體訊息**
用多媒體訊息傳送選定的簡訊短語訊息。
- **新增**
建立新簡訊短語。

多媒體訊息[功能表5-5-2]

- **發送**
傳送多媒體簡訊短語。支援多個號碼與電郵地址的傳送。
- **預覽**
顯示多媒體訊息的草稿。
- **儲存**
將多媒體訊息儲存為草稿格式或簡訊短語。
- **刪除**
刪除多媒體簡訊短語。
- **按影片播放時間**
設定影片的播放時間。
- **按影片格式**
將訊息內嵌幕下、幕上、幕左或幕右。



訊息 [功能表5]

- **加⁺ 投影片**
在目前的投影片前後新增投影片。
- **除去這頁**
刪除目前的投影片。
- **加⁺ 圖像**
在目前的圖像前後加⁺ 圖像。
- **加⁺ 聲音**
在目前的聲音前後加⁺ 聲音。

論旨 [功能表5-5-3]

此選項可協助您製作個人論旨。請鍵入姓名、流動電話號碼、公司號碼、傳真號碼以及電郵地址。

- **修改**
輸入新的訊息或編整選定的論旨。
- **刪除**
刪除選定的論旨。
- **以文字訊息發送**
以文字訊息傳送選定的論旨。
- **以多媒體訊息發送**
以多媒體訊息傳送選定的論旨。

記憶體狀態 [功能表5-6]

您目前查看文字訊息與多媒體訊息目前的記憶體狀態。



L1100設有內建相機，支援縮放、白平衡、對焦/深淺的/外度設定以及連環快拍功能。

拍照[功能表6-1]

按功能表鍵(☰)，然後選取相機→拍照。

或是在備用模式中按相機鍵(📷)。

1. 對準拍攝主題後，按[OK] 鍵或相機快捷鍵。

附註

- 在預覽模式中，按[開啟]鍵(📷)即可馬上進入圖情。

2. 「可儲存」選項會顯示在拍攝圖像上方。

按著會自動儲存拍攝的圖像。

附註

- 剩餘的記憶體會顯示在圖像的右上方。如記憶體空間不足，圖像會自動縮小。如記憶體已滿，將會顯示「記憶體已滿」，並呈無法再拍攝任何相片。請刪除舊圖像以釋放空間。

3. 按[確認] 鍵繼續拍攝相片。或按(🗑️)鍵刪除該圖像。按[開啟] 鍵將該圖像儲存作圖片 多媒體訊息發送。



相機 [功能表6]

< 拍攝相機前可用選項的選項 >



按左軟鍵[選項]顯示預覽模式選項。按[OK]鍵可用選取所需的項目。您會在預覽畫面上方看到目前選擇的設定值。

按左右導覽鍵修改為所需的值。如您按下[OK]鍵取消軟鍵的[確認]，將設定選取項目值立回到預覽模式。

您可用設定以下選項。

附註

- 圖像尺寸越大，品質越好。不過，這也會佔用更多的記憶體。

1. 圖像大小：選擇要拍攝的圖像大小。[640x480、320x240、160x120、128x160、48x80]
2. 焦距：選擇所需的焦距。[-2 ~ +2]
3. 白平衡：選擇所需的白平衡。
[自動/日光/晴天/陰天/螢光燈]
4. 縮放：選擇縮放比例 [x1、x2、x4]
5. 色彩效果：使用左右導覽鍵選擇彩色/深褐色/單色模式。
6. 連環快拍：選擇連續拍攝模式和拍攝的圖像數目。
7. 快門聲音：選擇快門聲音 [聲音1 / 聲音2 / 聲音3 / 關閉]。
8. 出廠設定：回復出廠設定。

圖畫功能表-6-2]

然後選擇圖像類型。

[全都圖片 / 一般圖片 / 音訊簿圖片]

您可以查看、管理及發送相機所儲存的相片。

1. 使用導航鍵選取您要檢視的相片。
2. 按[OK]鍵。您將在 LCD 螢幕上看到圖像的名稱。
3. 按左軟鍵[選項]存取以下子功能表。
 - **縮圖/放大**：查看選定的圖像。
 - **刪除**：刪除選定的圖像。
 - **以多媒體訊息發送**：把選定的圖像當作多媒體圖片訊息發送。有關如何輸入 MMS 訊息，請參閱第54頁。
 - **設成牆紙**：將選定的圖像設為牆紙。
 - **投影片播放**：依序連續播放選定類型中的所有圖像，如停止播放投影片，請按[返回]鍵。
 - **重新命名**：您可以變更選定圖像的名稱。
 - **全都刪除**：刪除選定類型中的所有圖像。
 - **縮簡**：您可以查看選定圖像的主題、資訊、日期與時間。
4. 如回到相機功能表，請按右軟鍵[返回]。

在 [回憶觀狀態] 子功能表內，您可以查看相機的回憶觀狀態。

[總計 / 日期 / 日期]



遊戲及應用程式[功能表7]

Java是Sun Microsystems所開發的技術。和使用標準Netscape或MS Internet Explorer瀏覽器下載Java Applet 的方式類似，您也可使用具有WAP功能的手機下載Java MIDlet。取決於服務供應商，您也可下載所有Java程式，例如Java遊戲，並在手機上執行。下載後，您可在應用程式功能表內查看Java程式並進行選取、執行或刪除。本手機會以 .JAD與 .JAR格式儲存Java程式的檔案。

附註

- JAR檔案是Java程式的壓縮格式，JAD檔案則是包含所有詳細資訊的說明檔案。在從網絡下載之前，您可先從JAD檔案查看所有的詳細檔案說明。

警告

- 只有J2ME (Java 2 Micro Edition, Java 2 微型版) 程式才能在手機環境中執行。J2SE (Java 2 Standard Edition, Java 2 標準版) 程式只能在電腦環境中執行。



遊戲[功能表7-1]

您的手機包含以下遊戲，供您消遣娛樂。

附註

- 每個遊戲的控制鍵皆不相同。但是每個遊戲都分別有詳細說明解釋其主控鍵的用法。以下是一般的控制鍵：

[一般按鍵功能]

-  : 遊戲功能表
-  : 返回



應用程式 [功能表 7-2]

應用程式功能表可顯示使用 WAP 下載的 Java 程式列表。您可以用應用程式功能表選擇、刪除或詳細查看所有之前下載的程式。在應用程式功能表的列表中，可以用到的選項如下：

- **開啟**：開啟選定程式。列表中包括安裝在手機中的所有 Java 程式。
- **刪除**：刪除選定程式。刪除後，將無法復原程式，除非再使用 WAP 下載一次。
- **細節**：顯示選定程式的詳細資訊。其中包括程式名稱、程式大小、程式版本、供應商資訊及網址的 URL。
- **連線項目**：某些 Java 應用程式可能需創建數據連線。選擇下列其中一種方法。
 1. **先詢問**：在應用程式連線前先提問。
 2. **允許**：立即創建連線，不需事先通知。
 3. **不允許**：不連連線。

下載 [功能表 7-3]

使用 WAP 下載新的 Java 程式後，下載的網址即是所謂的書籤。Java 功能表包括用來下載 Java 程式的書籤列表，您可以用下載功能表查看此書籤列表。您可以用連接、查看、編輯、刪除及新增書籤。

- **連接**：書籤中選定的網址可用於資料連線。連線成功後，可從列表中下載所需的 Java 程式。
- **查看**：您可以用查看書籤的詳細資訊，例如書籤網址、網絡設定名稱及連線至特定網站所需的明碼 ID。



遊戲及應用程式[功能表7]

- **修改：**您可以編輯選定的書籤。依地址→題目。建立新的書籤時，請依相同的順序。服務供應商功能列表ID與密碼資訊，但是如果並未揭開，則不必輸入。
- **刪除：**刪除選定的書籤。您可以完全刪除書籤列表螢幕上的所有書籤。刪除的書籤將無法復取，因此刪除書籤時請務必小心。
- **新增：**新增書籤。新增書籤的順序和編輯書籤時的一樣。選取書籤功能表中的新增⁺選項，如果沒有任何書籤，請從書籤列表螢幕中選取新增⁺。

附註

- 選取存取Java MIDlet 服務商伺服器連線功能後，您可以從許多Java 程式中選擇一種下載並安裝到手機中。連接到伺服器之後，您可以按「到」按鈕，查看所需程式的JAD資訊。「提取」按鈕將會開始下載安裝程式。下載安裝程式會同時進行，下載完成後即可馬上執行Java程式。您可以選擇種後從應用程式功能表執行已安裝的Java程式。

資訊[功能表7-4]


記憶體狀態[功能表7-4-1]

顯示您可以安裝遊戲與應用程式的記憶體容對。您也可以查看手機的整體記憶體狀態。



按功能表鍵(☰)，然後使用導覽鍵選取**三、聯網**。

您可以存取各種WAP (無線應用協定) 服務，例如銀行業務、新聞、天氣報導與飛機票二等資訊。這些服務專為流動電話設計並由WAP服務供應商支援。請向提供您欲使用的服務之網絡商或/或服務供應商查詢您使用的WAP服務、價格與收費表。服務供應商也會提供如何使用的說明。在開啓三、聯網後，請洽詢您的網絡商。欲使用網絡瀏覽器，您必須利用**本機號碼**功能表選項顯示您的電話號碼(詳見第52頁)，請參閱第52頁。




連線後，將會顯示主頁。主頁內容因服務供應商而異。輸入URL網址即可存取任何網頁。任何時候欲結束瀏覽器，請按鍵。手機將會回到備用模式。

使用WAP瀏覽器瀏覽

使用手機按鍵的WAP 瀏覽器功能表即可上網。

使用手機按鍵

上網時，手機按鍵的功能和手機模式時不同。

按鍵	說明
	捲動內容區的每一行
	回到上一頁
	選擇選項並確認動作

使用WAP瀏覽器功能表

無線上網時您可以使用各種功能表選項。

附註

- WAP瀏覽器的功能表將因您的瀏覽器版本而有所不同。



三、聯網 [功能表 8]

主頁 [功能表 8-1]

連線到主頁。主頁頁面是在瀏覽器中的網絡設定中所定義的網站。如果您還未在瀏覽器中的網絡設定中定義主頁，將會由服務供應商定義。

書籤 [功能表 8-2]

將目前的主頁設定為新的書籤或移動一個已經建立的書籤。您的主機可能已經預先安裝了一些與 LG 有關的網站書籤。LG 無法為這些網站提供保證或支援。如果您選擇存取這些網站，則應採取與存取任何網站時所使用的相同安全或內容預防措施。

收件箱 [功能表 8-2-1]

您可以用將 URL 儲存為書籤。

Java [功能表 8-2-2]

您可以用開啓 Java 功能表。

電子郵件伺服器 [功能表 8-2-3]

- **連接**
連接至您設定的電子郵件伺服器。
- **修改地址**
修改電子郵件地址。

全部刪除 [功能表 8-2-4]

刪除全部書籤。



Push訊息[功能表-8-3]

收件箱[功能表-8-3-1]

您可以用WAP服務供應商訂閱Push訊息。Push訊息是一種通知，例如頭條新聞，可能包含文字訊息或WAP服務網址。有關訂閱服務與訂閱的資訊，請洽詢您的WAP服務供應商。每次收到新的Push訊息時，服務供應商會訂閱新現有的Push訊息。即使您將訊息移至其他資料夾，一樣訂閱新訊息。Push訊息過期時，將會自動刪除。

- **訂閱**

顯示收到的Push訊息訂閱。

- **下載**

使用可接收的Push訊息中的訂閱連接至特定網站。

- **刪除**

刪除選定的Push訊息。

接收[功能表-8-3-2]

您可以用選擇是否接收Push訊息。

網絡設定[功能表-8-4]

詳細資訊，請洽詢您的網絡商。每個網絡設定的功能表如下：

- **啟動**： 啟用選取的網絡設定。
- **設定**： 用來編輯與變更選定網絡設定的WAP設定。
- **重新命名**： 變更選定的網絡設定名稱。
- **刪除**： 刪除列表內選定的網絡設定。
- **新設定**： 新增網絡設定。



三 聯網 [功能表8]

附註

- 使用這些選項所進行的變更可能會影響多媒體訊息功能。

[進³ URL \[功能表8-5\]](#)

直接連接至想瀏覽的網站。要這樣做，您必須輸入一個特定 URL。

[緩存設定 \[功能表8-6\]](#)

您存取過的資訊或服務會儲存在手機的緩存記憶體中。

[清除緩存 \[功能表8-6-1\]](#)

移除所有儲存在緩存記憶體中的文字。

[緩存直連 \[功能表8-6-2\]](#)

設定是否透過緩存記憶體進行連線。

附註

- 緩存記憶體是一種緩衝記憶體，可用來暫時儲存資料。

[安全認證 \[功能表8-7\]](#)

顯示可用證書表。

[重新設定 \[功能表8-8\]](#)

重新設定網絡設定以恢復原廠設定。

[WAP資訊 \[功能表8-9\]](#)

顯示 WAP 瀏覽器版本。



按功能表鍵(☰)，然後使用導覽鍵選取設定。

日期和時間[功能表9-1]

使用此選項可以變更目前顯示的時間與日期。您可以使用的選項如下。

日期設定[功能表9-1-1]

輸入日、月、年。您可以利用日期格式功能表選項變更日期格式。

日期格式[功能表9-1-2]

您可以在本功能表中設定日期格式。日/月/年，月/日/年，年/月/日。

設定時間[功能表9-1-3]

輸入目前時間。您可以利用時間格式功能表選項選擇時間格式。

時間格式[功能表9-1-4]

您可以選擇24小時或12小時的時間格式。

手機設定[功能表9-2]

本手機的許多功能都可以自行符合您的個人喜好。這些功能全部都可以在手機設定功能表存取。

牆紙[功能表9-2-1]

用來設定觸屏模式時的LCD 螢幕顯示。

歡迎資訊[功能表9-2-2]

用來在內屏（觸屏模式）或外屏顯示歡迎辭。



設定 [功能表9]

功能表顯示 [功能表9-2-3]

您的手機提供4種功能表的顯示題。按動並按下選擇鍵可設定功能表顯示。

語言 [功能表9-2-4]

您可以選擇顯示的語言。如果手機不支援SIM卡的語言，則將設定為英文 (English)。

背光燈 [功能表9-2-5]

用來選取手機是否使用背光燈。關閉背光燈將可稍微增加喇叭通話時間。

您可以分別設定鍵盤在上/下位圖時的背光燈選項。

LED 指示器 [功能表9-2-6]

用此來設定 LED 指示器開機響否，以顯示手機是否開啓。

網絡名稱 [功能表9-2-7]

用此來於備用模式顯示在LCD螢幕上的網絡名稱。

通話設定 [功能表9-3]

轉到來電轉接設定。

來電轉接 [功能表9-3-1]

啓用此網絡服務時，您可以將您的來電轉接到另一個號碼，例如，轉到您的留言信箱號碼。詳細資訊，請洽詢您的網絡商。選取其任一項轉接選項，例如，選取**忙線時**可在您的號碼忙線時您拒接來電時轉接語音電話。



可以使用的選項如下。

- **所有語音通話**
無條件轉接所有語音通話。
- **忙線時**
線路繁忙時轉接語音通話。
- **無人接聽時**
無人接聽時轉接語音通話。
- **無網絡或關機時**
關機時不在服務區域內時轉接語音通話。
- **所有數據通話**
無條件轉接至連接PC的號碼。
- **所有傳真通話**
無條件轉接至連接傳真的號碼。

來電轉接功能表內含下列功能表

- **幫助**
聲明對應服務。
 - **轉接到留言信箱**
轉接至訊息中心。此功能無法在所有數據通話和所有傳真通話功能表內使用。
 - **轉接到其他號碼**
輸入來電轉接號碼。



設定 [功能表9]

- 取消
取消選定的來電轉接。
- 查看狀態
查看服務狀態。
- 取消全部轉接
取消所有來電轉接設定。

撥號模式 [功能表9-3-2]

選取所需的撥號來電模式。

- 撥號開啓
以撥開機蓋即可撥號來電。
- 任何鍵
手機發出鈴聲時，您可以按除任何鍵與靜音鍵以外的任何鍵來撥號來電。
- 以臥置送鍵
您可以按靜音鍵來撥號來電。

傳送本機號碼 [功能表9-3-3]

使用此網絡服務可決定是否對您撥打的對象顯示 (開啓) 或隱藏 (關閉) 您的來電號碼。選取**按網絡設定**顯示手機，則採用您目前啟用的服務供應商設定。

來電等候 [功能表9-3-4]

(網絡服務)

網絡將會在您通話時通知您有新的來電。選取**啓助**以求網絡啓用來電等候，選取**取消**以求網絡停用來電等候，或選取**查看狀態**查看本功能是否已經啓用。



每分鐘提示 [功能表9-3-5]

設定為開啓時，撥出電話後，手機會在通話期間每分鐘發出響聲，讓您知道通話的時間長度。

聲控撥號 [功能表9-3-6]

您可以說出附加至聯絡人姓名的語音設定來撥出電話。語音設定可以是任何字眼。使用聲控撥號之前，請注意以下事項：

- 語音設定和語言無關，而是和說話者的聲音有關。
- 語音設定對背景雜音很敏感。請在安靜的環境中錄製語音設定來進行聲控撥號。
- 錄製語音設定或說出語音設定進行聲控撥號時，將會引到擴音器。請將手機身在距離雙耳口嘴部不遠處並面對著手機，以助近距感應器關閉擴音器。
- 手機將不接受過短的姓名。請使用長度足夠的姓名，並避免不同的號碼使用同類型的姓名。
 - 自動
將鍵盤往下滑動時即進入聲控撥號模式。
 - 手動
按住星號[*] / [語音] 鍵即可進入聲控撥號模式。

附註

- 您必須說出與錄製時完全相同的姓名。在嘈雜的環境下或緊急時，聲控撥號可能會發生辨識上的問題，因此不能只依賴聲控撥號。

自動重撥 [功能表9-3-7]

選取開啓，然後您的手機會在撥打失敗後重新嘗試撥號，最多為三次。



設定 [功能表9]

選擇線路 [功能表9-3-8]

只有當服務供應商支援雙線路服務時，才可使用這項功能。在此服務下，您的手機可登錄兩個獨立的電話號碼。這項功能可讓您選擇目前使用的手機號碼。如果您的服務供應商不支援這項功能，則屏幕上將顯示以下功能表。

- 線路1
- 線路2

可封閉的群組 [功能表9-3-9]

這屬於網絡服務項目，用來指定您可用撥打以及可打電請給您的可封閉群組。詳細瞭解，請洽詢您的網絡商或服務供應商。如可指定群組索引，手機會只在所有撥出電請。如未指定群組索引，網絡將使用首選索引。(儲存在網絡中的特定索引)。

- 預設：設定為可選定的CUG 索引。
- 開啓：您可用編碼CUG 索引並加開啓。
- 關閉：刪除選定的CUG。

保密設定 [功能表9-4]

本手機使用各種密碼保護手機的某些功能。

PIN 碼秘求 [功能表9-4-1]

啓用PIN碼秘求功能時，每次開啓手機均必須輸入PIN碼。因此，沒有您的PIN碼，任何人可在未取單您的同意之前，將無法使用您的手機。

附註

- 關閉PIN碼秘求功能之前，您必須輸入您的PIN 碼。



可以使用的選項如下：

- **開啓**
每次開啓手機時必須輸入PIN碼。
- **關閉**
手機在開啓時直接連接至網絡。

手機鎖[功能表9-4-2]

啓用**手機鎖**功能後，將會鎖住手機，每次開啓手機時便必須輸入手機密碼。密碼的預設設定為0000。改變手機密碼，請參閱**更改密碼 - 安全密碼**功能表選項[功能表9-4-5]。輸入正確的密碼後，即可使用手機直到關機為止。

可以使用的選項如下：

- **開機**
 - **啓動**
開啓手機時必須輸入手機密碼。
 - **關閉**
開啓手機時不必輸入手機密碼。
 - **SIM 卡更換**
您的手機只會在您更換SIM卡時要求輸入安全密碼。

- **重開**
輸入正確的**安全密碼**後，手機會在進入閒置狀態後鎖住。
如要關閉此**手機鎖**，請在按**右軟鍵**後輸入正確的**安全密碼**。
如在**手機鎖**狀態下關機，下次開啓手機時，手機將在鎖住狀態。



設定 [功能表9]

通話限制服務[功能表9-4-3]

(取決於網絡)

使用通話限制可限制手機撥打某些類型的電話。使用此功能時，您必須使用限制密碼，請向您的服務供應商索取。

可用使用的選項如下：

- **所有撥號**
無法撥打任何電話。
- **國際撥號**
無法撥打任何國際電話。
- **限制回本國**
身在國外時，只能撥打所在國家與自己國家的號碼，其他在您所屬網絡商所在國家以外的電話則無法撥打。
- **所有來電**
無法接聽任何來電。
- **來電漫遊時**
在異國服務區域外使用手機時，無法接聽任何來電。
- **取消所有限制**
停用所有的通話限制設定；如前撥打電話與接聽來電。
- **更改密碼**
設定及變更從服務供應商取得的限制密碼。在指定新的密碼前，您必須輸入現行密碼。輸入新密碼後，手機會要求您再次輸入一次以確認。

附註

- 為使用通話限制服務，您必須輸入網絡密碼。通話受到限制時，某些網絡還是可以撥打特定的緊急號碼。

固定撥號(FDN)[功能表9-4-4]**(依SIM卡是否提供此項功能)**

如果您的 SIM 卡支援此功能，便能夠限制可撥出的電話號碼。可撥出的 FDN 列表會隨 SIM 卡而異。輸入 FDN 時需輸入 PIN2 碼。此功能將儲存部份號碼 (例如區碼)。

例如：

如固定撥號列表中儲存了三個號碼 (0123、123123、789012)，則您可撥打 012345678...、01236789...、123123，或 189012 和 289012。(“?” 代表任何數字)

如您無法撥打尚未加入固定撥號列表內的號碼，並會看見“固定撥號查閱”訊息。

• 啓動

如已啓動固定撥號，則您可撥打列表內的號碼。部份電話簿功能可能會受到限制。您無法新增記錄至 SIM 卡，且可新增記錄至電話簿記憶體。您也可用搜尋功能新增至電話簿記憶體的電話簿記錄。

• 關閉

如已關閉固定撥號，則您可正常使用電話簿功能。

• 號碼列表

您可查看固定撥號列表。按空餘鍵[選項]即可新增、編輯或刪除固定撥號。



設定 [功能表9]

附註

- 並非所有的SIM卡都有PIN2 碼。如果您的SIM 卡沒有PIN2 碼，將不會顯示此功能表選項。

更改密碼[功能表9-4-5]

使用更改密碼功能可以將現行密碼變更為新的密碼。在指定新的密碼前，您必須輸入現行密碼。

可變更為存取密碼：安全密碼、PIN1 碼、PIN2 碼。

附註

- PIN：個人身份號碼

網絡設定[功能表9-5]

使用此網絡設定功能指定漫遊(在現屬區域之外)時使用的網絡選擇自動、手動、首選及頻道選擇四個設定中的哪一個。

附註

- 您可以選擇現屬網絡以外的網絡，以與此網絡與您的現屬網絡訂立有效的漫遊協定。



自動[功能表9-5-1]

用此來設定手機自動搜尋並選擇區域內可用且最佳的流動網絡。手機在關閉後將會回到預設的自動。

手動[功能表9-5-2]

手動從網絡列表內選擇所需的網絡。如果與手動選擇的網絡失去連線，手機會顯示錯誤提示音，並要求您重新選擇網絡。

首選[功能表9-5-3]

您可以用設定首選的網絡列表，手機會先嘗試登入這些網絡，然後再嘗試登入到其他網絡。此列表是透過手機的已知網絡預選列表而建立的。

頻道選擇[功能表9-5-4]

用此來設定網絡頻道，GSM 900/1800 或 GSM1900。

GPRS 設定[功能表9-6]

透過GPRS (通用分組無線電服務) 技術，流動電話可以傳送與接收流動網絡上的資料。GPRS 屬於一種資料載體，讓您可以用無線存取資料網絡，例如是互聯網。

使用GPRS 技術之前。

- 您必須申請GPRS 服務。有關申請服務案申請GPRS 服務的資料，請洽詢您的網絡商或服務供應商。
- 您必須儲存GPRS 應用程式的GPRS 設定。



設定 [功能表9]

附加[功能表9-6-1]

如果您選擇**自動啟動**且位於支援GPRS 的網路中，手機將會登入 GPRS 網路並可經由GPRS 傳送短訊。此外，啟動自動的封包資料連線，例如，傳送來接收簡訊，速度也會比較快。

如果選擇**關閉**時，手機只會在您啟動應用程式或有所動作時才會使用GPRS 連線。如果沒有任何應用程式關閉GPRS 連線，連線將會結束。

附註

- 如果沒有可使用的GPRS 連線且您選擇自動，手機將會在時間嘗試建立連線。

外接設備[功能表9-6-2]

如果您透過外接式裝置使用GPRS 連上網際網路，則可設定以下各種網路設定：**重新命名**、**APN**、**IP 地址**、**DNS**、**MTIID** 及 **密碼**。

重設[功能表9-7]

您可用將手機重設為原廠設定。

欲進行重設，請按照以下步驟操作。

1. 選擇**重設**功能表選項。
2. 輸入 4 位數的安全密碼。


附註

- 安全密碼預設為0000。






在尋求服務或致電服務工程師之前，請查看此處有關您的手機問題的概述。


Q 我如何查看撥出電話、來電與未接來電的列表？


A 請按 。


Q 我如何清除所有的電話記錄？

A 按主按鍵後再按   。

Q 我如何查看所有儲存在記憶體中的號碼？

A 按主按鍵後再按 。

Q  一直出現在螢幕上，無法消失。

A 請查看您是否在服務區域內。如果一直看到 ，請先關機，然後等待大約 2 分鐘後再開機。如果狀態依舊沒變，請移到另一個區域再查看一次。

Q 通話品質很差或在某些區域中聽不到任何聲音。

A 在某些區域中，訊號強度的變化非常大。請移到其他位置試試看。繁重的網絡流量可能會影響通話的功能或通話的穩定性。



Q&A

- Q** 建立連線後的連線質量很差。
- A** 在某些區域中，訊號強度的變化非常大。請移到其他位置測試看看。繁重的網絡流量可能會影響連線的功能或通話的穩定性。
- Q** LCD 無法開啓。
- A** 請取出電池，更換後再開啓電池。如果手機還是無法開啓，請為電池充電後再試一次。
- Q** 與某些區域的某些電話連線時會聽到回音。
- A** 這是所謂的「回音現象」。音頻過高時會產生這種現象，或因另一端機器的特性(半雙工式電話交換機)所造成。
- Q** 手機發熱。
- A** 長時間通話，或長時間玩遊戲/上網，手機便可能會發熱。這是很正常的現象，對於產品壽命或性能無影響。
- Q** 手機無法發出鈴聲，只有指示燈或LCD 閃爍。
- A** 手機在情景模式功能表中設定為「震動」或「靜音」。請選擇「標準」或「大聲」。



Q 手機的備用時間越來越短。

A 香沖的使用壽命有限。舊香沖香力只能維持原來時間的一半時，表示需要更換新的香沖。更換香沖時，舊假使用仍可獲認新的香沖。


Q 香沖使用時間越來越短。

A 如果香沖使用時間縮短，可能是因為用戶環境、通話者對通話的訊號微弱所造成。

Q 重新撥打香話簿項目時，無法撥出任何號碼。

A 請使用香話簿搜尋功能查看號碼是否正確儲存。同時，請重新儲存號碼。

Q 他人無法打通您的香話。

A 您的手機是否已經開啓(按  超過三秒以上)？您使用的流動網絡是否正確？您是否設定了來香通話限制選項？

Q 我找不到安全、PIN 或 PUK 等密碼？

A 預設的安全密碼是「0000」。如果您忘記或遺失安全密碼，請洽詢您的手機經銷商。如果您忘記或遺失 PIN 或 PUK 密碼，或未收到此類密碼，請洽詢您的網絡服務商。



配件

本系列電話可以使用的配件有很多種。您可以根據您的個人通訊需求選取這些配件。有關可以使用的選購配件資訊，請洽詢當地的經銷商。



隨附充電器

不管在家或在辦公室，均可使用此充電器進行充電。



電話

提供的是標準電話。



耳機

可以進行免提撥號筒的操作。附耳機安裝指南。



數據傳輸套件

連接手機與電腦。

附註

- 請務必使用原廠裝LG 配件。不使用原廠配件可能會導致保養失效。



一般資料

產品名稱 : L1100

系統 : GSM 900/DCS 1800

環境溫度

最高 : +55 °C

最低 : -10 °C



備忘錄





備忘錄

GPRS手机

用户手册

型号: L1100

请您在操作您的手机前仔细阅读此手册。
并保留它作为将来的参考。

简介

恭喜您购买此款功能先进、外观小巧的 L1100 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。



本用户手册包含有关手机使用和操作的重要信息。请仔细阅读所有信息以获得手机的最佳性能，并防止因误用而造成的任何损坏。如果作出未在本用户手册中明确认可的更改或修改，可能导致手机的保修失效。

关于安全有效使用手机的准则



请阅读以下简单的准则。违反这些规定可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息

此款L1100型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 随不同LG手机型号间的SAR 能级可能有所差别，但它们均设计为符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会 (ICNIRP) 建议的SAR 上限值为2W/kg，平均值超过十(10)克薄纸。
- 由DASY3 对该型号手机进行的测试，人耳能够承受的SAR 最大值为0.691W/kg（10克）。
- 电气电子工程师协会 (IEEE) 建议的SAR 上限值为1.6W/kg，平均值超过一(1)克薄纸，此SAR 数据适用于各个国家/地区的居民（例如美国、加拿大、澳大利亚和泰国）。



关于安全有效使用手机的准则

产品保养和维护

警告：请仅使用经过认可且与特定手机型号相符的电池、充电器和配件。使用其它类型的配件将可能终止该手机的相关证明或担保，甚至可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂。）
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

此手机的部分外壳元件可能采用金属或金属电镀。由于金属材料必然有导电属性，例如钥匙、回形针、扣针等，若接触到任何电源，均有可能引起短路并产生高温。因此使用时务必小心。



有效的手机操作

为了在耗电最省的情况下享受最佳性能，请：

- 当与其它任何话机通话时，拿起手机。当直接对着麦克风说话时，调整天线角度，使之朝上并高出您的肩膀。如果天线是可伸缩的，则应在呼叫期间将天线伸长。
- 使用手机时，不要握住天线，否则会影响呼叫质量，还可能导致手机以高于所需的功率电平操作并缩短通话和待机时间。
- 如果您的手机支持红外线功能，切勿将红外线对准任何人的眼睛。

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。



安全及有效使用指南

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 应将全部注意力集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或应答电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 请在登机前关闭手机。
- 未经机务人员允许，不得在地面上使用手机。



儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有蜂窝网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急电话功能。请向当地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用LG电池和充电器。LG充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要在于浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。



目 录

手机	11
手机部件	11
键盘描述	12
侧按键	13
屏幕图标	14
开始	15
安装SIM卡和手机电池	15
为电池充电	16
断开适配器	17
开机和关机	18
访问密码	19
常规功能	21
拨打电话和应答电话	21
输入文本	23
电话本	28
呼叫中功能表	28
多方通话	29
功能表树	31
选择功能和选项	33
情景模式[功能表1]	34
振动[功能表1-1]	34
静音[功能表1-2]	34
私人[功能表1-3]	34
大声[功能表1-4]	34
耳机[功能表1-5]	34
汽车[功能表1-6]	34
通话记录[功能表2]	36
未接来电[功能表2-1]	36
已接来电[功能表2-2]	37



拨出电话[功能表2-3]	38
删除最近呼叫[功能表2-4]	38
通话计时[功能表2-5]	39
通话计费[功能表2-6]	39
话费设定[功能表2-7]	40
GPRS信息[功能表2-8]	40
附件[功能表3]	42
闹钟[功能表3-1]	42
计算器[功能表3-2]	42
我的文件夹[功能表3-3]	43
单位转换器[功能表3-4]	44
时区设置[功能表3-5]	44
语音备忘录[功能表3-6]	45
红外传输[功能表3-7]	46
公文包[功能表4]	47
日程表[功能表4-1]	47
备忘录[功能表4-2]	48
电话簿[功能表4-3]	49
信息[功能表5]	56
短信[功能表5-1]	56
彩信[功能表5-2]	61
语音邮件[功能表5-3]	67
小区广播[功能表5-4]	67
模板[功能表5-5]	69
内存状态[功能表5-6]	71
相机[功能表6]	72
拍摄照片[功能表6-1]	72
我的照片[功能表6-2]	74

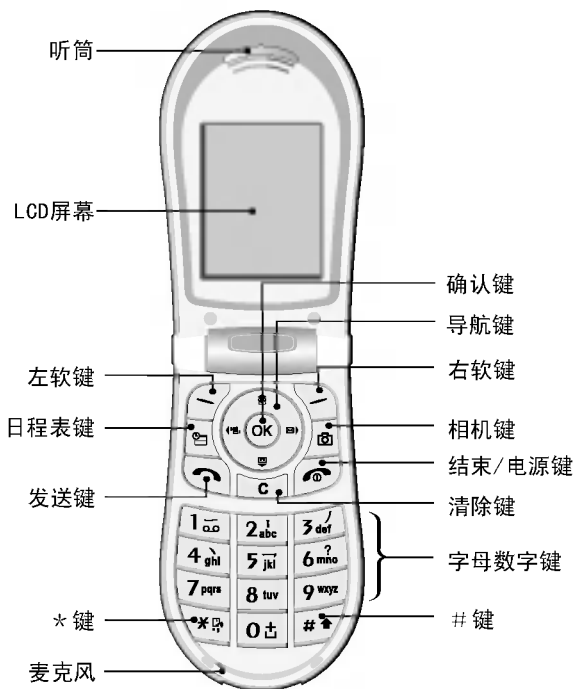


目 录

游戏&应用[功能表7]	76
游戏[功能表7-1]	76
应用[功能表7-2]	76
下载[功能表7-3]	77
信息[功能表7-4]	78
互联网[功能表8]	79
主页[功能表8-1]	80
书签[功能表8-2]	80
Push信息[功能表8-3]	81
网络设定[功能表8-4]	81
转到URL[功能表8-5]	82
缓存[功能表8-6]	82
安全设置[功能表8-7]	83
重新设定[功能表8-8]	83
WAP信息[功能表8-9]	83
设置[功能表9]	84
日期和时间[功能表9-1]	84
手机设定[功能表9-2]	84
通话设定[功能表9-3]	86
保密设定[功能表9-4]	90
网络设定[功能表9-5]	94
GPRS设置[功能表9-6]	95
恢复初始设定[功能表9-7]	96
问题与回答	97
附件	100
技术数据	101



手机部件













手机

以下是手机的主要元件。


键盘描述

按键	描述
	左软键/右软键 此软键执行出现在其上方屏幕上所显示的对应功能。
	导航键 用以快速访问手机功能。 <ul style="list-style-type: none">• 向上导航键 在待机模式中按此键，您可以按姓名搜索电话本。• 向下导航键 可以直接转到录音功能表。直接按住此键即可开始录音。• 向左导航键 情景模式功能表的快捷键。• 向右导航键 收信箱的快捷键。 确认键 选择功能表选项并确认操作。
	发送键 拨打电话号码并应答来电。在待机模式中按此键，您可以快速访问最后的来电、去电和未接来电。
	字母数字键 输入数字、字母和一些特殊字符。



按 键	描 述
	结束/电源键 用于结束呼叫或拒接来电，也用于返回待机模式。按住此键开关手机电源。
	清除键 每按一下删除一个字符。按住此键清除所有输入内容。也可使用此键返回上一屏幕。
	相机键 按此键使用相机功能。直接转到相机模式。
	日程表键 日程表菜单的快捷键。

侧按键

按 键	描 述
	侧键 <ul style="list-style-type: none">在通话中控制听筒音量。当手机翻盖合闭时，按其中一个键，轮流显示当前时间和日期。当手机翻盖打开时，在待机模式中控制按键音量。



手机

下表说明出现在手机显示屏上的各种指示符或图标。

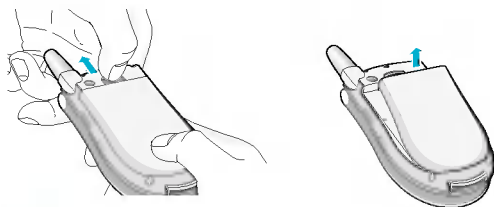
屏幕图标

图 标	说 明
	指示网络信号的强度。
	指示呼叫正在进行中。
	指示GPRS服务可用。
	指示目前正在另一网络上漫游。
	指示已设置并开启闹钟。
	指示电池的充电状态。
	指示接收到文本信息。
	指示接收到语音邮件。
	指示接收到彩信。
	指示已启动“振动”情景模式。
	指示接收到电子邮件信息。
	指示已启动“大声”情景模式。
	指示已启动“静音”情景模式。
	指示已启动“耳机”情景模式。
	指示已启动“汽车”情景模式。
	指示已启动“私人”情景模式。
	指示您可以使用Push信息服务。
	指示您在日程表功能表有所选日期的日程表。
	指示手机目前正在访问WAP。
	指示您目前正在使用GPRS。
	指示已进入安全页面。



安装SIM卡和手机电池

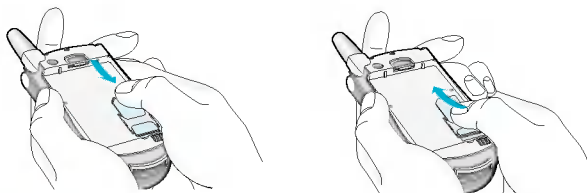
1. 在卸下电池前确保电源已关闭。向上按电池释放栓，并以45度的角度从手机上卸下电池。



注意

如果在电源打开时从手机上卸下电池，可能导致手机出现故障。

2. 将SIM卡插入插槽内。将SIM卡滑进SIM卡插槽中。确保SIM卡以正确方式插入并且卡上的金色接触区域面朝下。要取出SIM卡，轻轻将卡向下按并反向推出。



插入SIM卡

取出SIM卡

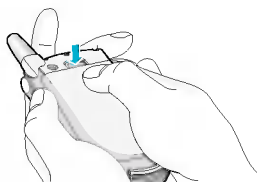
注意

SIM卡的金属触点很容易因刮擦而损坏。操作时请对SIM卡多加注意。遵守随SIM卡提供的说明。



开始

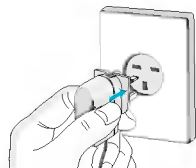
推入到位直到门锁锁紧。



为电池充电

仅使用随手机提供的电源适配器。

1. 当电池正确装入手机后，将旅行适配器的导线连接到手机底部。确保导线接头上的箭头朝向手机正面。
2. 将适配器的另一端连接到电源插座。



小心

使用未经授权的配件可能损坏您的手机，并可能使保修失效。不要强行插拨接头，这可能会损坏手机和（或）电源适配器。



注意

- 连接旅行适配器后，“正在充电”将显示在屏幕上。只有当电池完全耗尽时，才会点亮“调用指示灯”，而不显示“正在充电”。

断开适配器

1. 充电结束后，电池图标的移动条停止并且屏幕上显示“已满”字样。
2. 从电源插座上拨下适配器。按住接头两侧的灰色凸钮并拉出接头，将适配器从手机上断开。



备注

- 在首次使用手机之前，确保电池已完全充电。
- 不要在充电过程中取出电池或SIM卡。
- 如果出现电池未正确充电的情况，请使用电源键关闭并重新打开手机，然后再次对电池进行充电。在取出并重新装入电池之后，请再次对电池进行充电。




开始

开机和关机

开机




1. 在手机中装入电池，并将手机连接到诸如旅行适配器、点烟器适配器或免持汽车装置之类的外部电源。或者在手机中装入已充电的电池。
2. 按下  数秒钟，直到LCD屏幕亮起。
3. 视需要PIN码设置的状态而定，您可能需要输入PIN码。

备注

与其它任何无线电设备一样，避免在手机开机状态下触摸天线。

关机

1. 按下  数秒钟，直到LCD屏幕熄灭。



访问密码

您可以使用本节所述的访问密码来防止他人未经允许使用您的手机。可以使用**更换密码**功能[功能表9-4-5]来更改访问密码（除PUK和PUK2码）。请参阅第96页。

PIN码（4至8位数字）

PIN（个人身份号码）码防止他人未经允许使用您的SIM卡。PIN码通常随SIM卡提供。当**需要PIN码**设置为**开**时，每次开机时手机都会要求PIN码。当**需要PIN码**设置为**关**时，手机将直接连接到网络，而无需PIN码。

PIN2码（4至8位数字）

随某些SIM卡会提供PIN2码，访问诸如**话费设定**和**固定拨号**之类的功能时要求PIN2码。仅当您的SIM卡支持此类功能时，才可以使用这些功能。请咨询网络运营商以获得进一步的信息。

PUK码（4至8位数字）

更改被锁定的PIN码时需要PUK（PIN解锁密码）码。SIM卡可能会提供PUK码。如果未提供，请联系您的网络运营商以获得该密码。如果丢失了该密码，请同样与您的网络运营商联系。

PUK2码（4至8位数字）

随某些SIM卡会提供PUK2码，更改被锁定的PIN2码时需要PUK2码。如果丢失了该密码，请同样与您的网络运营商联系。



开始

安全密码（4至8位数字）

安全密码防止他人未经允许使用您的手机。默认的安全密码设置为“0000”。删除所有电话记录及激活**恢复初始设定**功能表时需要安全密码。并且，开关手机锁定功能以防止未经允许使用手机时，也需要安全密码。从保密设定功能表中可以设置安全密码。





限制密码

当使用**呼叫限制**功能时需要限制密码。当预订了此功能时，您将从网络运营商处获得此密码。有关详细信息，请参阅第91页。





拨打电话和应答电话



拨打电话

1. 确保手机已开机。
2. 输入电话号码，包括区号。要编辑LCD屏幕上的电话号码，按  键一次删除一个数字。
按住清除键  删除整个号码。
3. 按发送键  拨叫号码。
4. 要结束呼叫，请按结束键  或右软键。也可以通过合上翻盖来结束呼叫。


使用发送键拨打电话

1. 在待机模式中，按发送键 ，屏幕将显示最后的来电、去电和未接来电。
2. 使用向上/向下导航键选择所需的号码。
3. 按 。

拨打国际电话

1. 持续按住  键以输入国际前缀。“+”字符为自动选择国际接入码。
2. 输入国家代码、地区代码和电话号码。
3. 按 。

结束呼叫

结束通话时，按结束键 。




常规功能

从电话本中拨打电话

您可以将常用的联系人姓名和电话号码保存在SIM卡和（或）手机内存中，这就是电话本功能。通过在电话本中查找所需的姓名，即可拨打相应电话号码。有关电话本功能的详细信息，请参阅第49-55页。

调节音量

如果您要在呼叫时调节听筒音量，则使用侧键()。按向上侧键以提高音量，按向下侧键以降低音量。


应答电话

当接收到电话时，手机响铃并且屏幕上出现闪烁的电话图标。如果可以识别致电者，则会显示该致电者的电话号码（保存在电话本中的姓名或图片）。

1. 要应答来电，请打开翻盖。

备注

- 当使用电话本或其它功能表功能时，也可以应答电话。

2. 要结束呼叫，请合上翻盖或按.



信号强度

您可以通过手机LCD屏幕上的信号指示符(📶)检查信号强度。信号强度会有所差别,尤其是在建筑物内。移到窗口附近可以改进接收质量。

输入文本

您可以使用手机键盘输入字母数字字符。例如,在电话本中存储姓名、写短信、创建个人问候语或者在日历中安排事件等,都需要输入文本。

本款手机提供以下文本输入方法。

T9模式

此模式允许以每个字母只需一次击键的方式输入单词。键盘上的每个按键对应于多个字母。T9模式自动将所击按键与内部词典进行比较,然后确定正确的单词,因此所需的击键次数比传统的ABC模式要少。有时这也称为预测性文本。

ABC模式

在此模式中,输入字母时,按标示为所需字母的按键一次、两次、三次或四次,直到显示该字母。


123模式(数字模式)

以每个数字一次击键的方式输入数字。要在文本输入区域中更改为123模式,按 $\boxed{\#*}$ 键直到显示123模式。





常规功能

更改文本输入模式

1. 当处于允许输入字符的区域中时，在LCD屏幕的右下角可以看到文本输入模式指示符。
2. 通过按  更改文本输入模式。在LCD屏幕的右下角，可以查看文本输入模式。


使用T9模式

T9预测性文本输入模式允许您以最少的按键次数输入单词。当您按每个按键时，手机开始显示它根据内置词典认为正确的字符。您还可以在词典中添加新单词。当添加新单词时，手机将从词典中选择可能性最大的单词。




1. 当处于T9预测性文本输入模式时，通过按  到  键开始输入单词。每个字母按一次键。
 - 在输入字母时，单词不断更改。请忽略屏幕上显示的单词，直至整个单词输入完毕。
 - 如果在完成输入之后单词仍不正确，按向下导航键一次或多次以循环选择其它单词。

备注


- 按      输入Good
- 按      [向下导航键]输入Home

- 如果供选单词列表中没有所需的单词，请使用ABC模式添加该单词。
- 您可以选择T9模式的语言。按左软键[选项]，然后选择**T9语言输入法** 或者按键盘上的  键来选择T9模式的所需语言。也可以通过选择“T9关闭”来关闭T9模式。手机的默认设置为“T9开启”模式。















2. 输入整个单词之后再对输入的内容进行编辑或删除。
3. 按  键以空格结束每个单词。要删除字母，按  。
按住  删除整个单词。











备注

- 要从文本输入模式中退出而不保存输入内容，按  。手机返回待机模式。

中文输入法

- 1) **笔划 (ST)** : 如何使用笔划来选择中文字符。在您依次输入中文笔划时，屏幕上将显示相关的中文字符。使用  和  键来查看符合条件的其它字符，按  按钮选定字符。同样，使用 、、 和  键也可以查看更多类型的字符。

例如 要输入“你好”请依次按数字 、、，随后，您便可以看到第一个字符，现在“你”。请按 ，然后再按  按钮选定“好”。

按键	笔划	按键	笔划
	一		? (通配符号)
	丨		
	丿		
	丶		
	フ		选择键

<汉字笔划表>



常规功能

- 2) 拼音(PY): “拼音”输入是通过中文字符的拼音来查找中文字符。

拼音: 当输入拼音的第一个字母时, 您便可以直接查找字符。

例如) 要输入“国民”请依次按数字 、 和 ，此时在子编辑屏幕上会显示‘guo’和‘huo’的发音。如果选择“guo”则所有与之发音相同的字符均将被列出以供您选择。然后, 您便可以从中选择字符“国”。(按 和)。现在, 选择完第一个字符后, 屏幕上将再次显示多个字符。您可以按相同的方法输入“民”。(按 和)。)

按键	英文字母	按键	英文字母
			MNO
	ABC		PQRS
	DEF		TUV
	GHI		WXYZ
	JKL		选择键

<汉语拼音表>

使用ABC模式

使用 至 键输入文本。

- 按标示为所需字母的按键:
 - 按一次输入第一个字母
 - 按两次输入第二个字母
 - 依此类推
- 要插入空格, 按 键一次。要删除字母, 按 键。按住 键以清除显示的所有内容。



备注

- 有关可使用字母数字键输入的字符，请参阅下表了解更多信息。

	描 述	
	大 写	小 写
	., - ? ! ' @ : 1	., - ? ! ' @ : 1
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i 4
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	空格键	空格键

使用123 (数字) 模式

使用 123 模式，您可以在文本信息中输入数字（例如电话号码）。按与所需数字对应的按键，然后手动切换回适当的文本输入模式。



常规功能

电话本

您可以将电话号码及其对应的姓名存储在SIM卡的内存中。此外，您还可以在手机内存中存储最多255个号码和姓名。

电话本功能表中以同样方式使用SIM卡和手机的内存。（有关详细信息，请参阅第49-55页。）

呼叫中功能表

您的手机提供许多可以在呼叫期间使用的控制功能。要在呼叫期间访问这些功能，按左软键[选项]。

呼叫期间

在手机屏幕上，在呼叫期间显示的功能表与在待机模式中显示的默认主功能表不同，下面对这些选项进行说明。


拨打第二个电话

您可以从电话本中查到号码以拨打第二个电话。按右软键，然后选择**查找**。要在呼叫期间将所拨的号码保存到电话本中，请按右软键，然后选择**新增**。

在两个呼叫之间切换


要在两个呼叫之间切换，按左软键，然后选择**切换通话**。

应答来电


要在手机响铃时应答来电，只需按  键。当您已处于呼叫中时，手机还能够提示您有新入来电。听筒中发出提示音，显示屏上将显示第二个呼叫正在等待。


此功能称为**呼叫等待**，仅当网络支持此功能时才可使用。有关如何激活和停用此功能的详细信息，请参阅第88页的**呼叫等待** [功能表9-3-4]。



如果启用了**呼叫等待**功能，您可以按  或按左软键来应答第二个呼叫。

拒接来电

只需按  键，您可以拒接来电而不作应答。

在呼叫期间，您可以通过按左软键[功能表] 键并选择多方通话/拒接来电，或通过按 ，拒绝接听来电。

使话筒静音

在呼叫期间，您可以通过按[功能表]键，然后选择**静音**，使话筒静音。通过选择**关闭静音**，可以解除手机的静音。当手机静音时，致电者不能听到您的声音，但您仍可听到他们的声音。

在呼叫期间打开双音多频音调

要在呼叫期间打开双音多频音调功能，按左软键，然后选择**开启双音多频**。可以使用同样方式关闭双音多频音调。双音多频音调允许您的手机使用自动电话交换台。


多方通话

通过多方通话服务，您能够与多个致电者同时通话（如果您的网络运营商支持此功能）。仅当您具有一个活动的呼叫及一个保持的呼叫时（已应答这两个呼叫），才可以建立多方通话。一旦建立多方通话，则建立多方呼叫的用户可以添加、断开或分离（即从多方通话中撤出，但仍与您相连接）呼叫。所有这些选项均在“呼叫中”功能表中提供。在多方通话中最多可以与五位致电者通话。开始之后，您即可以控制多方通话，并且只有您能将致电者加入多方通话。



常规功能

拨打第二个电话

当前已处于呼叫中时，您可以拨打第二个电话。输入第二个号码并  键。当连接第二个呼叫之后，第一个呼叫自动置于保持状态。您可以通过按左软键，然后选择切换通话，在两个呼叫之间切换。

建立多方通话

保持一个呼叫，并在一个呼叫处于活动状态时，按左软键，然后选择多方通话/加入。

保持多方通话

按左软键，然后选择保持通话。

激活保持的多方通话

按左软键，然后选择继续通话。


向多方通话加入呼叫

要将呼叫加入现有的多方通话，按左软键，然后选择多方通话/加入。

在多方通话期间拨打私人电话

要与多方通话中的某个致电者进行私人通话，在屏幕上显示该致电者的号码，然后按左软键。选择多方通话/私人将所有致电者置于保持状态。

结束多方通话

通过按  键可以将当前显示的多方呼叫中的致电者断开。要结束多方通话，按左软键，然后选择结束通话/连接通话。在按左软键后，选择多方通话/全部通话，所有活动和保持的呼叫都将结束。



1 情景模式

- 1 振动
- 2 静音
- 3 私人
- 4 大声
- 5 耳机
- 6 汽车



2 通话记录

- 1 未接来电
- 2 已接来电
- 3 拨出电话
- 4 删除最近呼叫
- 5 通话计时
- 6 通话计费
- 7 话费设定
- 8 GPRS信息



3 附件

- 1 闹钟
- 2 计算器
- 3 我的文件夹
- 4 单位转换器
- 5 时区设置
- 6 语音备忘录
- 7 红外传输



4 公文包

- 1 日程表
- 2 备忘录
- 3 电话簿



5 信息

- 1 短信
- 2 彩信
- 3 语音邮件
- 4 小区广播
- 5 模板
- 6 内存状态



功能表树

6



6 相机

- 1 拍摄照片
- 2 我的照片

7



7 游戏&应用

- 1 游戏
- 2 应用
- 3 下载
- 4 信息

8



8 互联网

- 1 主页
- 2 书签
- 3 Push信息
- 4 网络设定
- 5 转到URL
- 6 缓存
- 7 安全设置
- 8 重新设定
- 9 WAP信息

9



9 设置

- 1 日期和时间
- 2 手机设定
- 3 通话设定
- 4 保密设定
- 5 网络设定
- 6 GPRS设置
- 7 恢复初始设定

0





0 SIM服务

该功能视SIM卡和网络服务而定。

选择功能和选项



本款手机提供一系列可供您自定义手机的功能。这些功能位于功能表和子功能表中，可以通过标记为  和  的两个软键来访问。

每个功能表和子功能表允许您查看和更改特定功能的设置。根据当前的操作环境，软键发挥的作用也不同；每个按键上方、屏幕底部一行的文字指示其当前的作用。






情景模式[功能表1]

在“情景模式”中，您可以调节和自定义手机铃声，用于不同的事件、环境或群组。

有六种预设的情景模式：**振动、静音、私人、大声、耳机和汽车**。除振动、静音以外，每种情景模式均可以进行更改。

按“功能表”键()，然后使用导航键选择情景模式。

更改情景模式[功能表1-X-1]

1. 屏幕上显示情景模式的列表。
2. 在情景模式列表中，滚动到要启动的情景模式，然后按左软键[确定]或“确定”键。
3. 然后，选择启动。

自定义情景模式 - 更改[功能表1-X-2]

在情景模式列表中，滚动到所需的情景模式。在按“确定”键或左软键后，选择**更改**。情景模式设置选项打开。按需要设置该选项。

来电提示： 设置来电的提示类型。

铃声类型： 从列表中选择所需的铃声类型。使用向上/向下导航键在列表中滚动。您可以在作出选择前听到所需的铃声。

铃声音量： 设置铃声的音量。

短信提示类型： 设置短信的提示类型。

短信提示音： 选择短信提示音。

按键音： 选择所需的按键音。

按键音量： 设置按键音的音量。

翻盖声音： 设置打开和关闭翻盖的声音。

声效音量： 设置声效的音量。



电源开启/关闭铃声：设置开机/关机时的铃声音量。

自动应答：（仅在汽车情景模式中）您可以激活自动应答功能。在自动应答之前选择时间。

自定义情景模式 - 重命名[功能表1-X-3]

您可以将情景模式重命名为所要的任何名称。但不能重命名为振动、耳机和汽车等情景模式。


1. 要更改情景模式的名称，在情景模式列表中滚动到该情景模式，在按“确定”键或左软键之后，选择**重命名**。
2. 键入所需的名称，然后按“确定”键或左软键[保存]。



通话记录[功能表2]

仅当网络支持服务区内的主叫线路识别(CLI)时，您才能检查未接来电、已接来电和拨出电话。

屏幕上显示电话号码和姓名（如果有）以及通话日期和时间。您还可以查看通话计时和计费。

按“功能表”键 ()，然后使用导航键选择**通话记录**。

未接来电[功能表2-1]

此选项允许您查看最后10个未应答的来电。在按左软键[选项]之后，您还可以：

- 查看电话号码（如果有），并复电或将该号码保存到电话本中。
- 为该号码输入新的姓名，并保存到电话本中。
- 向该号码发送信息。
- 从列表中删除该呼叫。

备注

- 使用“删除最近呼叫”功能表，您可以从列表中删除所有通话记录。

- 编辑保存在电话本中的姓名。

备注

- 每个电话号码在电话本中可能只能对应编辑一个姓名。而其它号码（如FDN、SDN）则不能编辑姓名。



已接来电[功能表2-2]

此选项允许您查看最后10个来电。在按左软键[选项]之后，您还可以：

- 查看电话号码(如果有)，并复电或将该号码保存到电话本中。
- 为该号码输入新的姓名，并保存到电话本中。
- 向该号码发送信息。
- 从列表中删除该呼叫。

备注

- 使用“删除最近呼叫”功能表[功能表2-4]，您可以从列表中删除所有通话记录。

- 编辑保存在电话本中的姓名。

备注

- 每个电话号码在电话本中可能只能对应编辑一个姓名。而其它号码(如FDN、SDN)则不能编辑姓名。



通话记录[功能表2]

拨出电话[功能表2-3]

此选项允许您查看最后10个去电(拨出或尝试)。使用[选项]键，您还可以：

- 查看电话号码(如果有)，并复电或将该号码保存到电话本中。
- 为该号码输入新的姓名，并保存到电话本中。
- 向该号码发送信息。
- 从列表中删除该呼叫。

备注

- 使用“删除最近呼叫”功能表[功能表2-4]，您可以从列表中删除所有通话记录。

- 编辑保存在电话本中的姓名。

备注

- 如果启用了FDN，[编辑姓名]功能表将不会显示。

删除最近呼叫[功能表2-4]

使用此功能删除未接来电列表、已接来电列表、拨出电话列表。您也可以选择全部通话一次性删除所有通话列表。



通话计时 [功能表2-5]

使用此功能查看来电和去电的持续时间。使用向上/向下导航键，您可以在屏幕底部查看每次通话的持续时间。按[确定]键或左软键[清除]可重设所选通话的计时器。为防止意外情况，您必须输入安全密码才能重设计时器。

- **最后通话：**最后一次通话的时间长度。
- **已接来电：**来电的时间长度。
- **拨出电话：**去电的时间长度。
- **全部通话：**上次计时器重设之后，所有来电和去电的总时间长度。

注意

- 服务提供商在发票上列出的实际时间可能与此不同，这取决于网络功能、计费的舍入方式等等。

通话计费 [功能表2-6]

此网络服务允许您检查最后一次通话的费用和总通话费用。通话费用显示在LCD屏幕的底部。要重设通话费用，按左软键[清除]或“确定”键。您必须输入PIN2码。

备注

- 服务提供商在发票上列出的实际话费可能与此不同，这取决于网络功能、计费的舍入方式、税款等等。



通话记录[功能表2]

话费设定[功能表2-7]

- **通话费用限制：**此网络服务允许您将通话费用限制为一定数目的收费单位或货币单位。您在拨打或接听电话时，不得超过指定的通话费用限制。在输入PIN2码之后，您可以更改通话费用限制。
- **设定费率：**您可以设置货币类型和单价。与您的服务提供商联系以了解收费单价。要在此功能表中选择货币或单价，您必须输入PIN2码。

备注

- 当达到话费限制时，则除紧急电话以外，您不能拨打任何电话。视SIM卡而定，您可能需要 PIN2 码来设置通话费用限制。
- **自动显示：**此网络服务允许您自动查看最后一次通话的费用。如果您在**自动显示**功能表中选择**开**，当结束最后一个通话后即可查看其费用。

GPRS信息[功能表2-8]

您可以通过GPRS信息选项查看在网络上传输的数据量。此外，您也可以查看自己的在线时间。（GPRS的全称是“通用分组无线电业务”。）

- **WAP信息**

您可以查看使用WAP的数据中，按左软键[清除]或“确定”键清除计数器。量和所费时间。在所选的功能表。



- **外部设备**

您可以查看通过诸如串行端口之类的外部设备使用GPRS的数据量和所费时间。

- **全部数据**

您可以查看通过WAP和外部设备的总数据量。



附件[功能表3]

按“功能表”键()，然后使用导航键选择附件。

闹钟[功能表3-1]

设置闹钟以在特定时间响铃。在闹钟功能表中提供以下选项。

开

设置闹钟时间。

1. 进入功能表。
2. 通过向左/向右导航键选择[开]。
3. 使用数字键输入闹钟时间。
4. 使用向左/向右导航键，选择其中一个闹钟选项：一次、每天、每周、每月。
5. 闹钟铃声选择：使用向左/向右导航键选择所需的铃声。

关

停用闹钟。

计算器[功能表3-2]




使用此功能，您可以将手机作为计算器使用。手机上的计算器提供基本的数学运算功能：加、减、乘、除。



使用计算器

1. 使用数字键输入数字。
2. 按相应导航键选择数学运算功能。
3. 要计算结果，按左软键[结果]或“确定”键。
4. 计算之后，按左软键[清除]返回初始状态。

备注

- 要删除任何错误的输入并清空显示屏，按  键。
要输入小数点，按  键。要输入负号，按  键。

我的文件夹[功能表3-3]

我的文件夹具有3个文件夹：图片库、动画和歌曲。您可以查看、删除或控制已下载的内容。您可以从WAP网站、彩信或短信服务获取图片、动画或歌曲。当查看每项内容时，您可以通过彩信或短信发发送、编辑或删除该内容。您可以在“图片库”文件夹或动画文件夹中设置一项作为墙纸。对于歌曲，您可以将所需的歌曲设置为铃声。

图片库[功能表3-3-1]

动画[功能表3-3-2]

歌曲[功能表3-3-3]

内存状态[功能表3-3-4]



附件[功能表3]

单位转换器[功能表3-4]

此功能可将任何度量值从一种单位转换为另一种单位。

可供进行转换的单位类型有4种：长度、面积、重量和体积。

1. 按左软键[单位]选择四种单位类型之一。
2. 按向下导航键移到“当前值”单位部分。
3. 使用向左/向右导航键选择要转换的单位。
4. 按向下导航键移到“转换值”单位部分。
5. 使用向左/向右导航键选择要转换到的目标单位。
6. 使用数字键输入数字。手机自动进行转换计算。

备注

- 您可以按  键输入小数点。

时区设置[功能表3-5]

使用向左/向右导航键，您可以查看格林威治标准时间(GMT)和世界各地59个主要城市的时间。

屏幕上显示城市名、当前日期和时间。

要选择您所位于的时区，请按以下步骤操作：

1. 按向左/向右导航键一次或多次，选择与您的时区对应的城市。屏幕上显示当地日期和时间。
2. 如果您想在待机模式中更改时间显示以反映正确的时间，按左软键[选项]。然后选择**设定**。

备注

- 在“时区设置”菜单中每个城市的时区设置可能受网络条件的影响。



语音备忘录[功能表3-6]

您可以录制语音备忘录。最多可以录制3条语音备忘录，每条最长30秒。使用左软键[选项]键，您可以播放或删除所录制的备忘录，或者录制新的语音备忘录。

- **播放**

允许您从最近的备忘录开始回放所有录制的备忘录。屏幕将显示录制备忘录的日期和时间。

- **删除**

允许您删除特定备忘录。

- **新记录**

允许您录制备忘录。

- **全部删除**

允许您删除所有备忘录。

备注

- 在待机模式中，您可以按向下导航键直接转到“语音备忘录”功能表。
- 如果所有备忘录位置均已满，您必须删除旧的备忘录之后才能录制新备忘录。



附件[功能表3]

红外传输[功能表3-7]

此功能允许您通过红外线端口发送或接收数据/传真。要使用红外线连接：

1. 安装用于接收或发送数据/传真的调制解调器驱动程序。
2. 安装您的网络提供商提供的网络拨号软件，或者安装传真应用程序以便与PC间进行传真呼叫。
3. 配置并激活PC上的IrDA兼容红外线端口。
4. 激活手机上的红外线功能：红外线符号出现在显示屏底部右侧。
5. 呼叫服务提供商所给的网络服务号码。


如果在激活该功能30秒内手机和IrDA兼容设备之间仍无信号，则能被自动停用。

有关详细信息，请联系您的网络提供商。

备注

- PC Sync程序允许在PC和手机之间通过数据电缆交换数据。因此，如果想要使用此功能，您需要购买该配件装置。有关详细信息，您可以参考光盘上的PC Sync帮助文件。



按“功能表”键()。使用导航键选择公文包。

日程表[功能表4-1]

当进入此功能表时，屏幕上出现日历。当前日期上有一方形光标。您可以使用导航键将光标移到其它日期。如果某个日期以不同颜色显示，意味着该日有日程安排或备忘录。此功能为您提醒日程安排和备忘录。如果设置的话，手机将发出闹钟铃声。

查看[功能表4-1-1]

显示所选日期的备注。按[选项]删除或编辑所选的备注。

修改[功能表4-1-2]

使用此功能修改日程表。

删除[功能表4-1-3]

使用此功能删除日程表。

新增[功能表4-1-4]

您可以编辑最多20条备注，每条备注最多30个字符。

日历[功能表4-1-5]

返回日历。

日程表铃声[功能表4-1-6]

使用此选项，当到达已安排有活动的日期和时间时，手机将发出闹钟铃声。



公文包[功能表4]

查看全部[功能表4-1-7]

显示为所有日期设置的备注。使用向上/向下导航键浏览整个备注列表。

查看日期[功能表4-1-8]

使用此功能转到特定日期。使用数字键和向左/向右导航键输入日期。

删除已过日程[功能表4-1-9]

您可以删除已发出通知的过期日程表备注。

全部删除[功能表4-1-10]

使用此功能删除所有日程表。您需要确认此操作。

备忘录[功能表4-2]

您可以编写、编辑和删除特定日期的备忘录。

1. 滚动以突出显示备忘录。
2. 按左软键[添加]。
3. 输入备忘录内容，然后按左软键[选项]。

可以使用以下选项。

- **保存：**保存备忘录。
- **T9语言输入法：**选择在备忘录中使用的T9语言输入法。
- **退出编辑器：**从备忘录编辑器中退出。

在手机中输入备忘录之后，

1. 选择备忘录。
2. 按左软键[选择]。
3. 按左软键[选项]。



可以使用以下选项。

- **修改：**修改所选的备忘录。
- **删除：**删除所选的备忘录。
- **新增：**增加新的备注。
- **全部删除：**删除所有备注。

电话簿[功能表4-3]

您可以将电话号码及对应的姓名保存在SIM卡或手机的内存中。此外，最多可以在手机内存中保存255个号码和姓名。

- 在待机模式中按左软键[功能表]，选择公文包→电话簿。
- 或者，在待机模式中按右软键[电话本]。

查找[功能表4-3-1]

1. 在功能表模式中选择公文包→电话本，选择“查找”。
或者，在待机模式中按右软键[电话本]，选择“查找”。
通过输入所欲查找姓名或号码的首字母可以进行快速查找。

备注

- 您也可以在待机模式中按向上导航键来浏览电话本

2. 找到所需的姓名之后，您可以按[发送]键拨打该号码。或者按左软键[选项]以使用以下选项。
 - **查看细节：**查看所选姓名的详细信息。
 - **修改：**修改姓名、号码、接听群组、电子邮件、备忘录和电话本图片。
 - **删除：**删除通讯录条目。



公文包[功能表4]

- **写短信：**使用此功能向该联系人写文字信息。
- **写彩信：**使用此功能向该联系人写多媒体信息。
- **复制：**使用此功能将通讯录条目从SIM卡复制到手机内存或从手机内存复制到SIM卡。
- **语音：**录制所选通讯录条目的姓名以便用于语音激活拨号。

新增[功能表4-3-2]

您可以使用此功能添加通讯录条目。

共有两种内存：手机内存和SIM内存。要选择内存，请转到**保存至**[功能表4-3-8-1]。手机内存容量为255个条目。在手机内存中，您可以为每个姓名最多输入20个字符。SIM卡内存容量视SIM卡自身而定。

1. 在功能表模式中选择公文包→电话本，或者在待机模式中按右软键[电话本]。
2. 滚动以突出显示**新增**，然后按[选择]。
3. 您可以将电话本条目添加到SIM卡内存或手机内存中。
 - **将新条目添加到SIM卡内存中**
您可以输入姓名和号码，然后选择所需的群组。（视SIM卡而定）
 - **将新条目添加到手机内存中**
您可以输入姓名、电话号码（手机、住宅和办公室）、电子邮件地址、所需的群组、备忘录和电话本图片。

备注

- 电话本图片只能添加到手机内存中。



快速拨号[功能表4-3-3]

您可以通过在快速拨号列表中按[发送]键来拨号，或者按左软键[选项]，选择“呼叫”。或者，您也可以在待机模式中按指定的按键(2-3)2-3秒钟，直接呼叫。

1. 在功能表模式中选择“公文包”→“电话本”，或者在待机模式中，按右软键 [电话本]。
2. 滚动到快速拨号，然后按[确定]。
3. 要将号码添加到“快速拨号”，选择<空>，然后按左软键[添加]。您可以按[查找]来在电话本中搜索并选择联系人。
4. 您可以通过按左软键[选项]来更改或删除快速拨号号码、拨打电话、写文字信息或写多媒体信息。可以看到以下子功能表。
 - **更改：**更改成员列表。
 - **删除：**删除成员列表。
 - **呼叫：**拨打所选的电话号码。
 - **写短信：**使用此功能向该联系人写文字信息。
 - **写彩信：**使用此功能向该联系人写多媒体信息。



公文包[功能表4]

语音[功能表4-3-4]

您可以通过姓名列表条目录制声音，将其用于语音拨号。

您可以按[发送]键拨号，或者按左软键[选项]，选择“呼叫”。

1. 在功能表模式中选择“公文包”→“电话本”，或者在待机模式中，按右软键 [电话本]。
2. 滚动到语音列表，然后按[确定]。
3. 要将号码添加到“语音列表”，请按左软键 [添加]。您可以按[查找]来在电话本中搜索并选择联系人。选择号码后，进行录音。
4. 您可以通过按左软键[选项]来播放、更改或删除所录制的声音、拨打电话、新增或删除所有语音列表。可以看到以下子功能表。
 - **播放：**回放为该电话号码录制的语音标签。
 - **更改：**更改为该电话号码录制的语音标签。
 - **删除：**删除为该电话号码录制的语音标签。
 - **呼叫：**拨打所选的电话号码。
 - **新增：**添加新的电话号码用于语音激活拨号。
 - **全部删除：**删除所有语音激活拨号号码。

备注

- 您最多可以输入10个电话号码用于语音拨号。



群组[功能表4-3-5]

共有6个预定义的群组以及一个名为其它的附加群组，您可以在这些群组中创建列表。

1. 在功能表模式中选择公文包→电话本，或者在待机模式中按右软键[电话本]。
2. 滚动到**群组**，然后按[确定]。将显示每个群组列表：**家人、重要人士、朋友、同事、组1、组2和其他**。
3. 按左软键[选项]，选择要管理的群组名称。除对于其它外，将显示以下子功能表。
 - **成员列表**：显示群组中成员的列表。
 - **群组来电铃声**：使用此功能选择当接收到来自群组中某个联系人的语音呼叫时使用的铃声类型。
 - **群组标志**：使用此功能选择当接收到来自群组中某个联系人的电话时显示的图标。
 - **添加成员**：向群组添加成员。
 - **删除成员**：从群组删除成员。
 - **重命名**：为群组分配新的名称。

全部复制[功能表4-3-6]

您可以在SIM卡内存和手机内存之间复制/移动条目。

- **SIM转到手机**：使用此功能将条目从SIM卡复制到手机内存。
- **手机转到SIM卡**：使用此功能将条目从手机内存复制到SIM卡。

可以使用以下选项。

- **保留原号码**：复制时保留原来的拨号号码。
- **删除原号码**：复制时删除原来的拨号号码。



公文包[功能表4]

全部删除[功能表4-3-7]

您可以删除SIM卡、手机和语音列表中的所有条目。除语音以外，此功能要求安全密码。

设定[功能表4-3-8]

- **保存至**

您可以在SIM和手机之间选择用于电话本功能的内存。如果您选择**自选**，当添加条目时，手机将询问将号码保存到何处。

- **查找方式**

滚动屏幕光标到**查找方式**，然后按[选择]进入。

- 如果您选择变量，在查找时，手机将提示如何查找。
- 如果您选择姓名或号码，手机不提示您如何查找，直接按姓名或号码查找条目。

- **显示图片**

在搜索电话本时，您可以通过“图片”视图或“列表”视图来设置图片列表。如果选择了“图片”视图，搜索列表将会与图片一起显示。

信息提示[功能表4-3-9]

- **服务号码（视SIM而定）**

使用此功能查看网络运营商分配的“服务拨号号码”（SDN）列表。此类号码包括紧急电话、查号台和语音邮件号码。

1. 选择“服务号码”选项。
2. 屏幕上将显示可用服务的名称。
3. 使用向上/向下导航键选择服务。



- **内存状态**

您可以检查SIM卡和手机内存的当前内存状态。

- **本手机号码（视SIM而定）**

使用此功能显示SIM卡中的电话号码。





信息[功能表5]

按“功能表”键()，然后使用导航键选择信息。

短信[功能表5-1]

此款手机可接收语音邮件通知信息和短信服务(SMS)信息。语音邮件和短信属于网络服务。请联系您的网络运营商以了解更多信息。

当图标出现时，说明接收到语音邮件。

当图标出现时，说明接收到新的文本信息。如果信息内存已满，则会出现一则消息，图标闪烁并且您无法接收任何新信息。使用收信箱功能表中的删除选项以删除无用的信息。一旦信息内存中有空间，则将收到任何未送达的SMS短信（假如有足够的空间）。

写短信[功能表5-1-1]

您可以撰写和编辑文本信息。

1. 键入您的信息。有关如何输入文本的详细信息，请第参阅第23到27页（输入文本）。
2. 完成信息输入之后，按左软键[选项]选择所需的选项。可以使用以下选项。
 - **发送**：输入号码、从电话本中选择号码或选择最近的号码。您可以一次将一条短信最多发送给5个电话号码。按左软键[选项]。屏幕上显示以下选项。
 - 发送（在输入电话号码后才显示）
 - 近期目录
 - 查找



- **保存到草稿箱：**允许您保存信息以便以后发送。
 - **T9语言输入法：**选择 T9 模式的所需语言。
 - **清除文本：**删除整个文本。
 - **退出：**从写短信功能表中退出。
3. 当输入信息时，您也可以按右软键[附加]随短信发送附件。
- **符号：**您可以添加特殊字符。
 - **图片：**您可以发送和接收包含图片的文本信息，称为“图片短信”。手机中提供几个预设的图片，您可以用来自其它来源的新图片代替这些图片。
 - **动画：**通过EMS（增强短信服务）可以实现短信中附加动画。您可以从手机中提供的15幅动画中选择。
 - **声音：**如果有声音，可以在短信中附加声音。
 - **文本模板：**可以使用手机中已设置的常用短语。
 - **电话本：**可以在短信中添加电话号码。
 - **名片：**可以附加自己的名片。

收信箱[功能表5-1-2]

可以搜索收到的文本信息和传呼信息，并可查看其内容。

收到的短信按日期顺序显示。

按“功能表”键，然后选择信息 → 文本信息 → 收信箱。



信息[功能表5]

图 标	说 明
	已读SIM短信
	未读SIM短信
	已读短信
	未读短信
	已读状态报告
	未读状态报告

备注

- SIM短信是指保存在SIM内存中的短信。网络将识别收到的短信是SIM短信或普通短信。

每条收到的短信具有以下选项。按左软键[选项]。

- **回复**

回复所收到的短信。

- **转发**

将收到的短信转发给其它接收人。

- **回复电话**

拨打发送人的电话。

- **保存信息资料**

从短信中提取图片、声音、文本web页面或电子邮件地址。这些内容将被保存到“我的文件夹”、“电话本”或书签中。



- **删除**

从收信箱中删除所选短信。



- **查看信息**

显示有关选定短信的详细信息。

发信箱[功能表5-1-3]

可以搜索收到的文本信息和传呼信息，并可查看其内容。

收到的短信按日期顺序显示。

图 标	说 明
	已发送SIM短信
	发送信息

可以使用以下选项。

- **转发**

将当前短信转发给其它接收人。

- **删除**

从发信箱中删除所选短信。

- **查看信息**

显示有关选定短信的详细信息。



信息[功能表5]

草稿箱[功能表5-1-4]

在此功能表中，您可以查看保存为草稿的短信列表。使用向上/向下导航键在列表中滚动。每个草稿具有以下选项。

- **发送**
将所选短信发送给其它接收人。
- **删除**
删除所选短信。

设定[功能表5-1-5]

此功能表允许您设置默认的SMS信息。

- **信息类型**
设置默认的信息类型（文本、语音、传真、传呼、X.400、电子邮件和ERMES）。网络可以将信息转换为所选格式。
- **信息有效期**
设置当尝试向接收人发送文本信息时将文本信息保存在SMS中心的时间。可能值为、1小时、12小时、1天、1周和您的网络运营商认可的最大值。
- **状态报告**
启动或停用报告功能。启用此功能时，网络将通知您信息是否已发送。
- **回复付费**
如果网络支持该服务，则SMS信息接收人可通过信息中心回复您的信息。



• 信息中心号码

在发送文本信息时，保存或更改SMS中心的号码。此号码必须从服务提供商处获得。


全部删除[功能表5-1-6]

您可以删除信息内存中的所有信息或仅删除已读信息。

彩信[功能表5-2]

多媒体信息可以包含文本、图片和/或歌曲剪辑。只有在获得网络运营商或服务提供商的支持时，此功能可用。只有提供兼容多媒体信息或电子邮件功能的设备才能接收和发送多媒体信息。

写彩信[功能表5-2-1]

1. 您可以创建一条新信息或者选择已经编制好的多媒体信息模板。
2. 键入您的文本信息。使用右软键，您可以通过T9输入模式输入符号、数字和图释。输入文本信息之后，按左软键[完成]。
3. 添加图像和（或）声音。可以使用向上/向下导航键移到下一部分。
4. 通过将光标移到  上，然后按“确定”键或左软键[选择]，可以添加幻灯片。也可以使用右软键[功能表]添加幻灯片。



信息[功能表5]

5. 按右软键[功能表]。可以使用以下选项。
- **发送：**支持多个号码和电子邮件地址。
 - **预览：**显示要发送的多媒体短信。
 - **保存：**可以将多媒体短信保存在草稿箱中或保存为模板。
 - **删除：**删除MMS彩信。
 - **屏幕持续时间：**设置屏幕放映的持续时间。
 - **屏幕格式：**上下左右对齐屏幕内容。
 - **添加屏幕：**在当前屏幕之前或之后添加屏幕。
 - **删除屏幕：**删除所选屏幕。

收信箱[功能表5-2-2]

当收到短信时，您将会收到提示。这些短信保存在收信箱中。您可以通过图标识别每条短信。有关详细信息，请参阅以下图标说明。

图 标	说 明
	已读多媒体信息
	未读多媒体信息
	已读发出通知的多媒体信息
	未读发出通知的多媒体信息

如果手机上提示“无空间”，您可以通过删除信息、媒体和应用程序获得空间。



- **重放**
重新播放多媒体信息。
- **保存邮件**
将多媒体信息保存为草稿或模板。
- **保存内容**
提取图片或声音。这些内容将保存在“我的文件夹”或“电话本”中。
- **详情**
显示有关所收到信息的细节，包括发送人地址、主题（仅对于多媒体信息）、信息的日期及时间、信息类型、信息大小。
- **答复**
回复所有发送人。
- **全部答复**
回复所有发送人。
- **删除邮件**
删除当前信息。
- **转发**
将所选信息转发给其它接收人。



信息[功能表5]

发信箱[功能表5-2-3]

使用此功能查看已发送的信息。对于每条已发送的信息，您可以查看发送状态。

图 标	说 明
	已发送

- **重放**
重新播放多媒体信息。
- **保存邮件**
将多媒体信息保存为草稿或模板。
- **保存内容**
保存诸如图像、声音和信息附件之类的项目。
- **详情**
显示有关发信箱的信息：主题（仅适用于多媒体信息）、信息的日期及时间、信息类型、信息大小。
- **答复**
回复当前短信。
- **全部答复**
回复所选短信的所有接收人。
- **删除邮件**
删除当前信息。
- **转发**
将当前信息转发给其它接收人。



草稿箱[功能表5-2-4]

使用此功能表，您可以预设最多五条常用的多媒体信息。此功能表显示预设的多媒体短信列表。

可以使用以下选项。

- **发送**
支持多个成员和电子邮件地址。
- **预览**
查看多媒体信息草稿。
- **保存**
将多媒体信息保存为草稿或模板。
- **删除**
删除短信。
- **屏幕持续时间**
选择此功能设置幻灯片持续时间。
- **屏幕格式**
选择此功能设置短信内容对齐方式。
- **添加幻灯片**
在当前幻灯片之前或之后添加幻灯片。
- **删除幻灯片**
删除突出显示的幻灯片。



信息[功能表5]

设定[功能表5-2-5]

通过此功能表，您可以设置彩信的默认设定。

可以使用以下选项。

- **幻灯片持续时间**
设置每幅幻灯片的持续时间。
- **对齐**
设置信息的对齐方式。
- **有效期**
设置在网络服务器上保存信息的时间。
- **自动下载**
开：如果选择此项，在接收时将自动下载信息。
确认：要求您确认是否下载信息。
关：暂不下载信息。
- **信息中心**
输入彩信服务器的地址以使用彩信服务。
- **网络设定**
有关详情，请参阅第76页。



语音邮件[功能表5-3]

此功能表提供访问语音邮箱的快速方法（如果网络提供语音邮箱）。在使用此功能之前，您必须输入从网络运营商处获得的语音服务号码。

当收到新的语音邮件时，屏幕上显示(📞)符号。请与网络提供商联系，了解有关其服务的详细信息，以便对您的手机正确进行配置。

收听语音邮件[功能表5-3-1]

一旦选择此选项，只需按左软键[确定]即可收听语音邮件。您可以在待机模式中按住[📞]键以收听语音邮件。

语音邮件中心[功能表5-3-2]

您可以进入和设置语音邮件号码。

小区广播[功能表5-4]

小区广播信息是网络向手机用户发送的文本信息。它们提供诸如天气报告、交通新闻、出租车、药店和股票行情之类的一般信息。每种类型的信息均有相关的服务号码，这可以从网络运营商处获得。当您收到小区广播信息时，将出现说明收到新短信的弹出信息或者直接显示小区广播信息。在待机模式中，查看小区广播信息时可以使用以下选项。

读取[功能表5-4-1]

可以搜索所收到的广播信息列表，或查看其内容。



信息[功能表5]

接收[功能表5-4-2]

使用此功能开/关广播信息的接收。

来电提示[功能表5-4-3]

设置当收到新的广播信息时开关提示。

自动显示[功能表5-4-4]

如果将此选项选择为开，所有收到的广播信息将自动显示在屏幕上。

语言[功能表5-4-5]

(视网络和预订的服务而定)

此选项允许您选择首选语言。将以所选语言显示广播信息。如果使用手机所支持的所有语言，请选择列表末尾的**自动**。

栏目[功能表5-4-6]

(视网络和预订的服务而定)

要创建新栏目，按左软键[选项]，然后选择**新增**。如果已有栏目，您可以通过左软键[选项]来停用、编辑或删除它们。



模板[功能表5-5]

在该列表中有一些预定义的信息。您可以查看和编辑模板信息或创建新的信息。具有三种可用的模板：文本、多媒体和签名。

短信[功能表5-5-1]

- **修改**
使用此功能撰写新的信息，或者在常用短语列表中编辑所选短语。
- **删除**
从常用短语列表中删除所选的常用短语。
- **发送短信**
使用此功能通过SMS发送所选的模板。
- **发送彩信**
使用此功能通过MMS发送所选的模板。
- **新增**
使用此功能创建新的常用短语。

彩信[功能表5-5-2]

- **发送**
发送多媒体模板。支持多个号码和电子邮件地址。
- **预览**
显示多媒体信息草稿。



信息[功能表5]

- **保存**
将多媒体信息保存为草稿或模板。
- **删除**
删除多媒体模板。
- **屏幕持续时间**
在当前幻灯片之前或之后添加幻灯片。
- **屏幕格式**
删除突出显示的幻灯片。
- **添加屏幕**
使用此功能在当前图像之前或之后添加图像。

名片[功能表5-5-3]

此选项帮助您制作自己的名片。输入姓名、手机号码、办公室电话号码、传真号码和电子邮件地址。

- **编辑**
使用此功能撰写新的短信，或编辑所选名片。
- **删除**
使用此功能删除所选名片。



- **通过短信发送**

使用此功能通过SMS发送所选的名片。

- **通过多彩信发送**

通过MMS彩信发送所选的名片。

内存状态[功能表5-6]



您可以检查用于短信和彩信的当前内存状态。



相机[功能表6]

L1100具有内置相机。它支持变焦、白平衡、彩色/黑白/灰度设置以及多段连拍功能。

拍摄照片[功能表6-1]

按功能表键()，选择相机 → 拍摄照片。或者在待机模式下，按相机键()。

1. 对准要拍摄的物体，然后按[确定]键或相机热键。


提示

- 在预览模式中，您可以通过按右软键[图片库]立即转到右软键中。

2. “保存”字样将显示在所拍图影像的左上角。然后，按“确定”键保存拍摄的图像。

提示

- 剩余内存将显示在图像的右上角。如果内存不足，则会自动缩减图像大小。如果内存已满，则屏幕将显示“内存已满”，您不能继续拍摄照片。可以通过删除旧图像获取内存。

3. 按[确定]键，以继续拍摄照片。或者按清除键()来删除该图像。按右软键来发送使用所拍摄图像的MMS图片信息。

〈拍摄照片之前的选项〉



在预览模式中按左软键[选项]来设置选项。

您可以通过按[确定]来选择所需的操作。

您将会在预览屏幕上看到当前的选项设置值。

这样您即可通过按向左/向右导航键来候改所需的值。如果选择[确定]或左软键[完成]，则选定的选项将会被设置并返回预览模式。

您可以设置以下选项。

提示

- 图像尺寸越大，图像质量越好。但是，所需的内存就越多。

1. **图像大小**：选择所需的图像拍摄尺寸。[640x480, 320x240, 160x120, 128x160, 48x80]
2. **亮度**：选择所需的亮度。[-2 - +2]
3. **平衡**：选择所需的白平衡。[自动/日光/荧光灯/阴天/白炽灯]
4. **焦距**：选择变焦系数[x1, x2, x4]
5. **色彩影响**：使用向左/向右导航键来选择彩色/深褐色/单色。
6. **连续拍摄**：选择要以多段连拍模式拍摄的图像数。



相机[功能表6]

7. **快门声音**：选择快门声音[声音1/声音2/声音3/关]
8. **出厂设置**：恢复默认的出厂设置。

我的照片[功能表6-2]

选择图像类别。

[所有图片/普通图片/电话本图片]

您可以查看、编排和发送手机中保存的图片。

1. 使用导航键选择要全屏查看的图片。在LCD屏幕顶部将看到图像的名称。
2. 按[确定]键。在LCD屏幕顶部将看到图像的名称。
3. 按左软键[选项]访问以下子功能表。
 - **缩小/放大**：您可以查看所选的图像。
 - **删除**：删除所选的图像。
 - **通过彩信发送**：使用所选的图像发送彩信图片。有关写彩信的详情，请参阅第63页。
 - **设为墙纸**：将所选的图像设为墙纸。
 - **幻灯片显示**：依次、连续地回放每幅图像。要停止回放幻灯片，按[]键。
 - **重命名**：可以更改所选图像的标题。
 - **全部删除**：删除手机上的所有图像。
 - **详细资料**：您可以查看所选图像的标题、大小、日期和时间。

4. 要返回相机功能表，按右软键[返回]。

您可以在[内存状态]子功能表中检查手机的内存状态。

[总计/已用/可用]



Java是由Sun Microsystems开发的一项技术。与使用标准Netscape或微软Internet Explorer浏览器下载Java Applet的方式相同，可以使用具有WAP功能的手机下载Java MIDlet。视服务提供商而定，所有基于Java的程序（如Java游戏）均可以下载到手机上并运行。一旦下载之后，即可以在“应用”功能表内查看、选择、执行或删除Java程序。Java程序文件以JAD和JAR格式保存在手机中。

备注

- JAR文件是Java程序的压缩格式，JAD文件是包含所有详细信息的描述文件。在下载之前，您可以从网络上的JAD文件中查看所有详细的文件说明。

警告

- 只有基于J2ME(Java2微版本)的程序会在手机上运行。基于J2SE(Java2标准版本)的程序只能在PC环境中运行。



游戏&应用[功能表7]



游戏[功能表7-1]

手机为您提供多种有趣的的游戏。

备注

- 依游戏不同控制键也会不同。每个游戏会有主要控制键的说明。其他请参考如下所述：

[通用控制键]

-  : 游戏功能表
-  : 返回

应用[功能表7-2]

“应用”功能表显示使用WAP下载的Java程序列表。在“应用”功能表内，可以选择、删除所有先前下载的程序，或者查看其详细信息。从“应用”功能表内的列表中，可以使用以下选项：

- **打开：** 打开所选程序。该列表包括手机中已安装的所有Java程序。
- **删除：** 删除所选程序。一旦删除，则无法恢复该程序，除非使用WAP再次下载。
- **详细资料：** 显示有关所选程序的详细信息。其中包括程序名称、程序大小、程序版本、厂商信息、网站地址或URL。
- **接入网络：** 一些Java应用程序可能要求建立数据连接。选择以下选项之一。
 1. **首先询问：** 在应用程序建立连接之前将询问您。
 2. **允许：** 不作通知即立即建立连接。
 3. **禁止：** 不允许建立连接。



下载[功能表7-3]

当使用WAP下载了新的Java程序时，其下载地址称为书签。Java功能表包括用于下载Java程序的书签列表，可以从“下载”功能表中查看此书签列表。您可以连接、查看、编辑、删除和添加书签。

- **连接：**书签中的所选地址用于数据连接。在成功建立连接之后，即可从列表中下载所需的Java程序。
- **查看：**可以查看有关书签的详细信息，例如连接到特定站点所需的书签地址、网络设定名称和用户ID等。
- **修改：**可以编辑所选书签。编辑书签是以“地址”→“标题”的顺序完成的。当创建新的标签时，须遵循相同顺序。
- **删除：**删除所选书签。可以从书签列不能恢复已删除的书签，所以删除时务必小心。表屏幕中完全删除所有书签。
- **新增：**已新增书签。“新增”书签的顺序与“编辑”书签相同。从书签功能表中选择“新增”选项；或者当没有书签存在时，可以从书签列表屏幕中选择“新增”。

备注

- 在选择“连接”功能以访问Java MIDlet提供商的服务器后，可以从众多Java程序选择一个，并下载和安装到您的手机中。一旦连接到该服务器，即可按“搜索”按钮以查看有关所需程序的JAD信息。按“获取”按钮将开始下载和安装过程。下载和安装过程同步发生，一旦下载完毕，即可运行Java程序。可从“应用”功能表中选择已安装的Java程序以运行。




游戏&应用[功能表7]

信息[功能表7-4]

内存状态[功能表7-4-1]


显示可用于安装游戏和应用程序的存储空间的大小。您也可以看到整部手机的内存状态。



按“确定”键()，然后使用导航键选择互联网。

您可以访问不同的WAP（无线应用协议）服务，如银行业务、新闻、天气报告和航班信息等。这些服务专为手机应用而设计，由WAP服务提供商负责进行维护。向您的网络运营商及（或）希望使用其服务的服务提供商咨询，了解WAP服务的提供、定价和收费情况。服务提供商将向您提供有关如何使用其服务的说明。请联系您的网络运营商以开通Internet帐户。要使用Web浏览器，您必须通过**本手机号码**功能表选项指定自己的手机号码。（有关详细信息，请参阅第54页。）

一旦建立连接，屏幕上即显示主页。主页内容视服务提供商而定。




通过输入相应和URL地址，您可以访问任何网站页面。要在任何时间退出浏览器，按键。手机将返回待机模式。

使用WAP浏览器导航

您可以使用手机按键或WAP浏览器功能表上网。

使用手机按键

上网期间，手机按键的功能与手机模式中不同。

图 标	说 明
	将内容区域滚动一行
	返回上一页
	选择选项并确认操作。



互联网[功能表8]

使用WAP浏览器功能表

当无线上网时，有多个功能表选项可供使用。

备注

- 视浏览器版本而定，WAP浏览器功能表可能有所不同。

主页[功能表8-1]

连接到主页。主页是在激活的网络设定中定义的站点。如果您未在激活的网络设定中定义该站点，则将由服务提供商定义。

书签[功能表8-2]

将当前页面设置为新书签，或者转到已设置的书签。

您的手机中可能已经预先安装一些站点的书签（这些站点与LG不具 结盟关系）。LG不对这些站点作出保证或认可。如果您选择访问这些站点，应如同访问任何其它站点一样注意安全并警惕其内容。

邮件服务器[功能表8-2-1]

- **连接**
连接到所配置的电子邮件服务器。
- **编辑地址**
编辑邮件地址。

全部删除[功能表8-2-2]

删除所有书签。



Push信息[功能表8-3]

收信箱[功能表8-3-1]

您可以从WAP服务提供商处订制Push信息。

Push信息是新闻头条之类的通知，可以包含文本信息或WAP服务的地址。有关该服务的提供和预订情况，请联系您的WAP服务提供商。每当接收到新的Push信息时，服务提供商可以更新现有的Push信息。即使已将Push信息移到另一文件夹，也可以更新这些信息。Push信息过时后会自动删除。

- **信息提示**

显示所收到的push信息的提示。

- **下载**

使用所收到的push信息中的提示连接到特定站点。

- **删除**

删除所选push信息。

接收[功能表8-3-2]

可以选择是否希望收到push信息。

网络设定[功能表8-4]

有关详细信息，请咨询您的网络运营商。

每个网络设定均有子功能表，如下所示：

- **启动：**启动所选网络设定。
- **设定：**使用此功能编辑和更改所选网络设定的WAP设置。
- **重命名：**可以更改所选网络设定的名称。



互联网[功能表8]

- **删除：** 从列表中删除所选网络设定。
- **添加：** 可以添加新的网络设定。

备注

- 使用这些选项作出的更改可能影响彩信功能。

转到URL [功能表8-5]

您可以直接连接到所要的站点。必须输入特定URL才能成功连接。

缓存[功能表8-6]

您已访问的信息或服务保存在手机的缓存中。

清除缓存[功能表8-6-1]

删除缓存中保存的所有信息。

缓存查询[功能表8-6-2]

设置是否通过缓存尝试进行连接。

备注

- 缓存是一种缓冲存储器，可以暂时保存数据。



安全设置[功能表8-7]

显示可用证书の列表。

重新设定[功能表8-8]


可以重设网络设定以返回初始设置。

WAP信息[功能表8-9]

显示WAP浏览器版本。



设置[功能表9]

按“功能表”键()，然后使用导航键选择设置

日期和时间[功能表9-1]

此选项允许您更改显示的当前时间和日期。

可以使用以下选项。

日期设定[功能表9-1-1]

使用此功能输入年、月、日。您可以通过日期格式功能表选项更改日期格式。

日期格式[功能表9-1-2]

在该功能表中，您可以设定日期格式比如：日/月/年，月/日/年，年/月/日。

时间设定[功能表9-1-3]

使用此功能输入当前时间。您可以通过时间格式功能表选项选择时间格式。

时间格式[功能表9-1-4]

您可以在12小时制和24小时制之间设置时间格式。

手机设定[功能表9-2]

手机的许多功能都能够按您的喜好加以定制。通过手机设定功能表可以访问所有这些功能。

墙纸[功能表9-2-1]

使用此功能设置在待机模式中LCD屏幕的显示画面。



问候语[功能表9-2-2]

使用此功能可在待机的主屏上显示问候语。

菜单颜色[功能表9-2-3]

本款手机提供4种功能表颜色风格。通过滚动和按“选择”键设置功能表颜色。

语言[功能表9-2-4]

可以选择显示语言。如果手机不支持SIM卡上的语言，则将使用英语。

背景灯[功能表9-2-5]

使用此功能选择手机是否使用背景灯。将背景灯关闭，可以稍微延长待机/通话时间。

在上/下位置单独设置键盘的每个背景灯选项。

LED指示灯[功能表9-2-6]

使用此功能来开启/关闭LED指示灯的闪烁功能，以此显示您的手机是否开机。

网络名称[功能表9-2-7]

使用此功能在待机时在LCD屏幕上显示所使用的网络名称。



设置[功能表9]

通话设定[功能表9-3]

更改呼叫转接的设置。

呼叫转接[功能表9-3-1]

当激活此网络服务时，您可以将来电转接到另一号码，例如，您的语音信箱号码。有关详细信息，请联系您的网络运营商。选择转接选项之一，例如，选择正在通话时转接来电以在您的号码正忙时或拒接来电时转接语音来电。

可以使用以下选项。

- **转接所有语音来电**
无条件地转接所有语音来电。
- **正在通话时转接来电**
当手机正在使用时转接语音来电。
- **无人接听时转接来电**
转接未应答的语音来电。
- **无网络或关机时转接来电**
当手机关机或处于网络覆盖范围之外时转接语音来电。
- **转接所有数据来电**
无条件地转接具有PC连接的号码。
- **转接所有传真来电**
无条件地转接具有传真连接的号码。
- **全部取消**
取消所有呼叫转接设置。



子功能表

- 启动

激活相应服务。

• 转到语音信箱

转接到信息中心。此功能不适用于转接所有数据来电和转接所有传真来电功能表。

• 转到其它号码

输入用于呼叫转接的号码。

- 关闭

取消所选的呼叫转接。

- 查询状态

您可以查看服务的状态。



接听模式[功能表9-3-2]

选择所需的电话接听模式。

• 翻盖

只需打开翻盖即可接听来电。

• 任意键

当手机响铃时，可以按除  键和右软键 () 以外的任何按键接听电话。

• 按发送键接听

只能按发送键接听电话。



设置[功能表9]

发送号码[功能表9-3-3]

此网络服务允许您确定是否向被呼叫人显示您的手机号码（“开”或“关”）。选择**自动设定**将手机重设为您已与服务提供商达成协议的设置。

呼叫等待[功能表9-3-4]

(网络服务)

当正在通话中时，网络将通知您有新增来电。选择**启动**以要求网络激活呼叫等待功能，选择**取消**以要求网络停用呼叫等待功能，或选择**查询状态**以检查该功能是否已激活。

分钟提示[功能表9-3-5]

当设置为“开”时，在通话期间每隔一分钟手机鸣音一次，让您知道通话时间。

语音拨号[功能表9-3-6]

说出已添加到联系人名片中的语音标签，即可拨打电话。任何字词都可以作为语音标签。在使用语音拨号之前，请注意：

- 语音标签与语言无关，而是由说话者的语音决定。
- 语音标签对背景噪音敏感。请在安静的环境中录制语音标签和进行语音拨号。
- 当录制语音标签或通过说出语音标签拨打电话时，扬声器处于使用状态。举起手机放在距离嘴边和脸部较近的位置，这样近程传感器不会关闭扬声器。
- 过短的姓名无效。使用足够长的姓名，并避免对于不同号码使用相同姓名。



- 自动

使用此功能以在每当打开翻盖时即进入语音拨号模式。

- 手动

使用此功能以在按住星号[* /语音]键时进入语音拨号模式。

备注

- 所说的姓名必须与录制时所说的完全一致。这可能有所困难，例如，在嘈杂的环境中或紧急情况下，所以您不应在所有环境中都唯一性地依赖语音拨号方式。

自动重拨[功能表9-3-7]

选择开，如果拨打电话不成功，手机将最多重拨五次该号码。

线路选择[功能表9-3-8]

仅在服务提供商支持选择线路服务时才可以使用该功能。如果您的服务提供商支持该功能，将显示以下功能表：

- 线路 1
- 线路 2



设置[功能表9]

封闭用户群组[功能表9-3-9]

这是一项网络服务，用于指定您可以呼叫和可以呼叫您的联系人群组。有关详细信息，请联系您的网络运营商或服务提供商。如果指定了群组索引，则其将用于所有去电。如果未指定群组索引，网络将使用优先索引。（存储在网络中的特定索引。）

- **预设：** 设置所选封闭用户群组索引。
- **开：** 可以编辑并激活封闭用户群组索引。
- **关：** 删除所选封闭用户群组。

保密设定[功能表9-4]

不同的密码用于保护手机的特定功能。

需要PIN码[功能表9-4-1]

当需要PIN码功能启用时，每次开机时必须输入PIN。因此，未经您的许可，任何不知道此PIN的人均无法使用您的手机。



备注

- 在禁用需要PIN码功能之前，必须输入您的PIN。

可以使用以下选项：

- **开**
每次开机时必须输入PIN。
- **关**
手机开机后直接连接到网络。



手机锁[功能表9-4-2]

当手机锁功能启用时，手机被锁定，每次开机时必须输入手机密码。初始密码为0000。要更改手机密码，请参阅更改密码 - 安全密码功能表选项[功能表9-4-5]。一旦输入正确密码，则可以使用手机，直到关机。

可以使用以下选项：

- **开机**

- **开**

- 打开手机时需要您输入手机密码。

- **关**

- 打开手机时无需您输入手机密码。

- **更换SIM卡**

- 更换SIM卡时，要求您输入手机安全密码。

- **立即**

输入正确的安全密码，将在进入待机状态后锁定手机。如果想要关闭手机锁定功能，请在按下右软键后输入正确的安全密码。如果在锁定状态下关机，则在下次开机时，手机仍处于锁定状态。

呼叫限制[功能表9-4-3]

(视网络而定)

可以限制使用您的手机拨打和接听电话。此功能要求提供呼叫限制密码，您可以从服务提供商处获得此密码。

可以使用以下选项：

- **所有拨出电话**

- 不能拨打电话。



设置[功能表9]

- **拨出国际电话**
不能拨打国际电话。
- **国际漫游时拨打电话**
在国外时，只能向您目前所在的国家及您本国（网络提供商所在的国家）国内的号码拨打电话。
- **所有来电**
不能接听电话。
- **国际漫游时来电**
当在本国服务区以外的国家使用手机时，不能接听电话。
- **全部取消**
停用所有呼叫限制设置，恢复正常接听和拨打电话。
- **更改密码**
使用此功能设置和更改由服务提供商提供的呼叫限制密码。
必须输入当前密码，才能指定新密码。输入新密码之后，必须再次输入以作确认。



备注

- 必须输入网络密码，才能使用呼叫限制。当呼叫受限时，在某些网络上仍允许拨打特定的紧急电话号码。



固定拨号 (FDN) [功能表9-4-4]

(视SIM而定)

如果SIM卡支持，您可以限制呼叫选定的电话号码。可增加的FDN容量受SIM卡限制。在输入FDN时需要PIN2码。此功能允许保存部分号码（如区号）。

例如：

如果FDN列表中保存了3组号码（0123，123123，?89012），则允许您拨打：012345678...、01236789...、单独 123123、189012和 289012。（“?”指任意数字）

如果您试图拨打未添加到FDN列表的号码，您将无法拨通并将看到一则消息“检查FDN”。

- **启用**

如果启用了FDN，您将只可以拨打列表中的号码。电话本的功能也会被部分限制。您不能添加条目到SIM卡中，而只能将条目添加到手机内存中。此外，您将只能搜索添加到手机内存的电话本条目。

- **禁用**

如果禁用了FDN，则您可以使用电话本功能。



设置[功能表9]

• 号码列表

您可以看到FDN列表。您可以通过按左软键[选项]来添加、编辑和删除FDN。

备注

- 并非所有SIM卡都具有PIN2。如果您的SIM卡没有PIN2，则不显示此功能表选项。

更换密码[功能表9-4-5]

此更换密码功能允许您将当前密码更改为新密码。必须输入当前密码，才能指定新密码。

使用此功能更改访问密码：**安全密码、PIN码、PIN2码**

备注

- PIN：个人识别码

网络设定[功能表9-5]

通过网络设定功能，您可以指定当漫游时（本地区以外）是以自动、手动还是优先方式选择网络。

备注

- 对于本地网络以外的其它网络，仅当其与您的本地网络之间具有有效的漫游协议时，才可以选择该网络。



自动[功能表9-5-1]

使用此功能，将手机设置为自动搜索和选择其中一个可在您区域使用的蜂窝网络。如果在默认情况下关机，则手机将返回**自动**。

手动[功能表9-5-2]

使用此功能，您可以从网络列表中手动选择所需的网络。如果未建立手动选择的网络连接，则手机将发出错误提示音，询问您是否要再次选择网络。

首选网络[功能表9-5-3]

用于设置首选网络的列表，应首先尝试注册手机，然后尝试注册任何其它网络。此列表已在手机已知网络的预定义列表中创建。

频段选择[功能表9-5-4]

使用此功能可在以下两项中进行选择，以此设置网络频段：
GSM 900/1800 或 GSM1900。

GPRS设置[功能表9-6]

GPRS（通用分组无线业务）是一种允许使用手机通过移动网络收发数据的技术。GPRS是允许以无线方式访问数据网络（如互联网）的数据载体。

在可以使用GPRS技术之前

- 您需要预订GPRS服务。有关GPRS服务的提供和预订情况，请联系您的网络运营商或服务提供商。
- 您需要为通过GPRS使用的应用程序保存GPRS设置。



设置[功能表9]

连接[功能表9-6-1]

如果选择**电源打开**并且位于支持GPRS的网络中，手机会向GPRS网络注册，并且发送短信操作将通过GPRS完成。并且，启动活动的分组数据连接（如收发电子邮件）的速度也更快。如果选择**需要时**，手机将仅在您启动需要GPRS的应用程序或操作时才使用GPRS连接。当没有应用程序需要GPRS连接时，GPRS连接即关闭。

备注

- 如果没有GPRS覆盖，并且已选择“自动”，则手机将定期性地尝试建立连接。

外部设备[功能表9-6-2]

当通过外部设备经由 GPRS 使用互联网时，可以设置以下六种网络设定：**重命名**、**APN**、**IP地址**、**DNS**、**用户ID**和**密码**。

恢复初始设定[功能表9-7]

您可以将手机恢复为其默认配置。要恢复初始设定，请按以下步骤操作。

1. 选择**恢复初始设定**功能表选项。
2. 输入4位数的安全密码。

备注

- 安全密码预先设置为0000。






如果您的手机出现任何问题，请在将其送去维修或致电服务工程师之前，先在此处检查有无对该问题进行描述。


问 如何查看去电、已接来电和未接来电的列表？

答 按 。


问 如何清除所有通话记录？

答 按左软键，然后按   。

问 如何查看内存中保存的所有号码？

答 按右软键，然后按 。

问  不从屏幕上消失。

答 检查您是否在服务区内。如果一直看到 ，请关闭手机电源并等待大约2分钟，然后重新开机。如果问题仍然存在，请转移到另一区域并再次检查。

问 在某些区域内连接质量不佳或听不见。

答 在某些区域内，信号强度可能变化很大。请转移到另一位置。繁忙的网络通信可能影响连接能力或呼叫稳定性。

问 即使建立连接之后，连接质量不佳。

答 在某些区域内，信号强度可能变化很大。请转移到另一位置。繁忙的网络通信可能影响连接能力或呼叫稳定性。



问题与回答

问 LCD显示屏不亮起。

答 取出并更换电池，然后开机。如果手机仍无法开机，请将电池充电并重试。

问 当与特定区域内的特定电话连接时，可以听到回声。

答 这称为“回声现象”。如果音量过高会发生这种现象，或者由对方一端机器的特殊属性（半电子电话交换机）而导致。

问 手机变热。

答 在长时通话期间，或者如果长时间使用游戏/Internet，手机可能会发烫。这是正常现象，对于手机的使用寿命或性能没有影响。

问 手机不响铃，或者只是指示灯或LCD闪烁。

答 在“情景模式”功能表中，手机设置为“振动”或“静音”。请选择“私人”或“大声”。

问 手机的待机时间逐渐缩短。

答 电池的寿命是有限的。当电池的持续时间只是其原先的一半时，则需要更换。请只使用认可的备件。

问 电池的使用时间缩短。

答 如果电池使用时间缩短，可能是由于使用环境、通话音量过高或信号微弱等因素造成。



问 当使用电话本条目拨打电话时，未拨出任何号码。

答 使用电话本“搜索”功能检查所保存的号码是否正确。如果需要，重新保存。

问 不能接收电话。

答 手机是否开机（按下 \square 三秒以上）？是否接入了正确的蜂窝网络？是否已设置来电限制选项？

问 我找不到锁定、PIN或PUK码或密码。

答 默认锁定密码为“0000”。如果遗忘或丢失锁定密码，请联系您的手机经销商。如果遗忘或丢失PIN或PUK码，或者未收到此类密码，请联系您的网络服务提供商。



配件

有多种配件可用于您的手机。您可以根据个人的通信要求选择这些配件。关于配件的供应情况，请咨询本地经销商。



随机提供的适配器

此适配器用于在家中或办公室中充电。



电池

提供标准电池。



耳机

用于免持操作。包括听筒和麦克风。



数据电缆套件

将手机连接到PC。

备注

- 确保使用正规的LG配件。
- 仿冒品或替代品及非原厂配件可能会让您丧失保修权益。
- 各个地区的配件可能不同；如有任何疑问，请与我们的地区服务公司或代理查证核实。



常规

产品名称 : L1100

系统 : GSM 900/DCS 1800

环境温度

最高 : +55 °C

最低 : -10 °C



备忘录





备忘录

ENGLISH

GPRS Phone

USER'S MANUAL

MODEL: L1100

Please read this manual carefully
before operating your mobile phone.
Retain it for future reference.

Introduction

Congratulations on your purchase of the advanced and compact L1100 mobile phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Guidelines for safe and efficient use



Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model L1100 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.691 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).



Guidelines for safe and efficient use

Product care and maintenance

Warning: Use only batteries, charger and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliance such as a TV, radio or personal computer.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit.
(Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously.
Do not touch the antenna unnecessarily.

Part(s) of this handset's external components may consist of metal or electroplated metal. As all metal such as keys, paper clips, fibula is conductive, it may lead to short circuit and heat generation if contacting any source of electricity. Please be careful when using it.



Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

- Hold the phone as you speak to any other telephone. While speaking directly into the microphone, angle the antenna in a direction up and over your shoulder. If the antenna is extendable/retractable, it should be extended during a call.
- Do not hold the antenna when the phone is in use. If you hold it, it can affect call quality, it also may cause the phone to operate as a higher power level than needed and shorten talk and standby times.
- If your mobile phone supports infrared, never direct the infrared ray at anyone's eye.

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over the pacemaker, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.



Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your motor vehicle such as car stereo, safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.



Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.



Contents

Your phone	12
• Phone components	12
• Your phone's features	13
• Side of the Key	14
• Display information	14
Getting started	16
• Installing the SIM card and the handset battery	16
• Charging the battery	17
• Disconnecting the adapter	18
• Turning your phone on and off	19
• Access codes	20
General functions	22
• Making and answering calls	22
• Entering text	24
• Phonebook	28
• In-call menu	28
• Multiparty or conference calls	30
Menu tree	32
Selecting functions and options	34
Profiles [Menu 1]	35
• Vibrate Only [Menu 1-1]	35
• Silent [Menu 1-2]	35
• General [Menu 1-3]	35
• Loud [Menu 1-4]	35
• Headset [Menu 1-5]	35
• Car [Menu 1-6]	35



Call register [Menu 2]	37
• Missed calls [Menu 2-1]	37
• Received calls [Menu 2-2]	38
• Dialed call [Menu 2-3]	39
• Delete recent calls [Menu 2-4]	39
• Call durations [Menu 2-5]	40
• Call costs [Menu 2-6]	40
• Cost settings [Menu 2-7]	41
• GPRS information [Menu 2-8]	41
Fun & Tools [Menu 3]	43
• Alarm clock [Menu 3-1]	43
• Calculator [Menu 3-2]	43
• My folder [Menu 3-3]	44
• Unit converter [Menu 3-4]	45
• World time [Menu 3-5]	45
• Voice recorder [Menu 3-6]	46
• Infrared [Menu 3-7]	47
Organizer [Menu 4]	48
• Schedule [Menu 4-1]	48
• Memo [Menu 4-2]	49
• Phonebook [Menu 4-3]	50
Messages [Menu 5]	57
• Text messages [Menu 5-1]	57
• Multimedia messages [Menu 5-2]	62
• Voice messages [Menu 5-3]	68
• Info services [Menu 5-4]	68



Contents

• Templates [Menu 5-5]	70
• Memory status [Menu 5-6]	72
Camera [Menu 6]	73
• Take picture [Menu 6-1]	73
• Gallery [Menu 6-2]	75
Games & Apps [Menu 7]	76
• Games [Menu 7-1]	77
• Applications [Menu 7-2]	77
• Download [Menu 7-3]	78
• Information [Menu 7-4]	79
Internet [Menu 8]	80
• Home [Menu 8-1]	81
• Bookmarks [Menu 8-2]	81
• Push messages [Menu 8-3]	82
• Profiles [Menu 8-4]	82
• Go to URL [Menu 8-5]	83
• Cache settings [Menu 8-6]	83
• Security certificates [Menu 8-7]	84
• Reset profiles [Menu 8-8]	84
• WAP information [Menu 8-9]	84
Settings [Menu 9]	85
• Date & Time [Menu 9-1]	85
• Phone settings [Menu 9-2]	85
• Call settings [Menu 9-3]	87
• Security settings [Menu 9-4]	91



- Network settings [Menu 9-5] 95
- GPRS settings [Menu 9-6] 96
- Reset settings [Menu 9-7] 97

Q&A 98

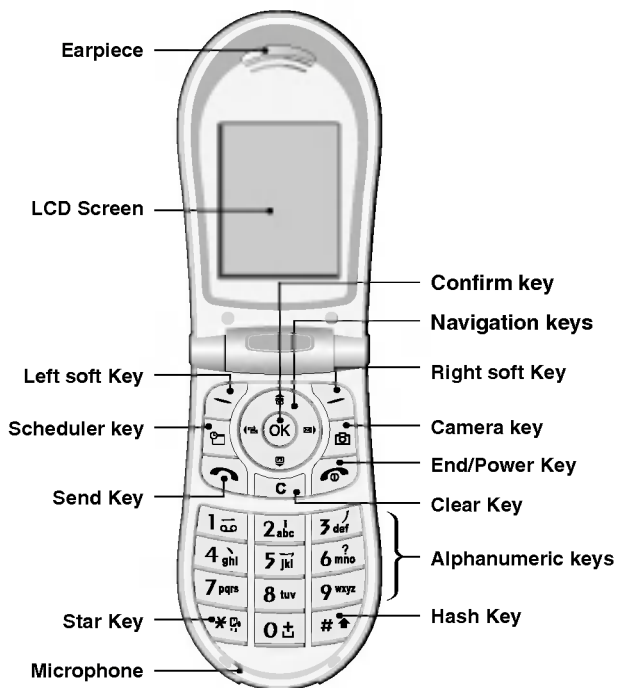
Accessories 101

Technical Data 102








Your phone

Phone components








Your phone's features


Key	Description
	Left soft key / Right soft key Each of these keys performs the function indicated by the text on the screen immediately above it.
	Navigation keys Use for quick access to phone functions. <ul style="list-style-type: none">• Up navigation key By pressing this key in standby mode, you can search the phonebook by name.• Down navigation key You can go directly to the voice recording menu. Holding this key down directly starts voice recording.• Left navigation key A shortcut key to the profile menu.• Right navigation key A shortcut key to the message inbox. OK key (=Confirm key) Selects menu options and confirms actions.
	Send Key Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls by pressing the key in standby mode.
	Alphanumeric keys Enter numbers, letters and some special characters.
	End / Power key Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.



Your phone

Key	Description
	Clear key Deletes a character by each press. Hold the key down to clear all input. Also use this key to go back to the previous screen.
	Camera key Press this key to use the camera feature. Directly goes to the camera mode.
	Scheduler key A shortcut key to the scheduler menu.



Side of the Key

Key	Description
	Side Key <ul style="list-style-type: none">• Controls the earpiece volume during a phone call.• When a flip is closed, pressing one of these displays the current time and date by turns.• Controls the volume of the key tone in standby mode with opening flip.




















Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

On-Screen Icons

Icon	Description
	Indicates the strength of the network signal.
	Indicates a call is in progress.



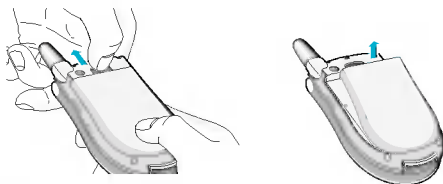
Icon	Description
	Indicates that GPRS service is available.
	Indicates that you are roaming on another network.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates the receipt of a text message.
	Indicates the receipt of a voice message.
	Indicates the receipt of a MMS message.
	Indicates that the vibration ringer has been set.
	Indicates the receipt of an e-mail message.
	Indicates the Loud profile is activated.
	Indicates the Silent profile is activated.
	Indicates the Headset profile is activated.
	Indicates the Car profile is activated.
	Indicates the General profile is activated.
	Indicates that you can use the push message service.
	Indicates that you have a schedule for the selected day in the schedule menu.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Indicates that you entered the security page.



Getting started

Installing the SIM card and the handset battery

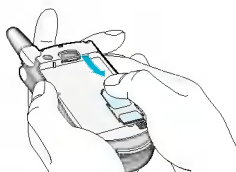
1. Make sure the power is off before you remove the battery. Press the battery release latch up and remove the battery from the phone at a 45 degree angle.



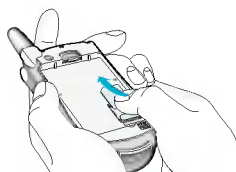
Note

- Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.



To insert the SIM card



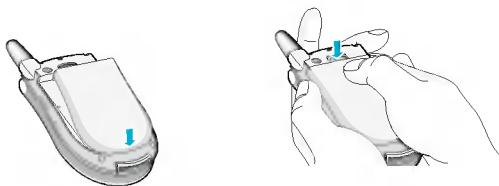
To remove the SIM card

Note

- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.



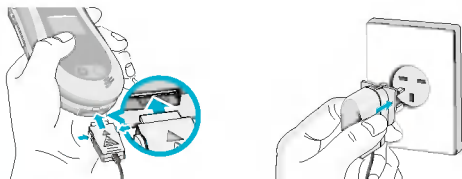
3. Position the lugs on the bottom of the battery into the retaining holder. Then, push the top half of the battery into position until the latch clicks



Charging the battery

Only use the mains adapter supplied with your phone.

1. With the battery in position on the phone, connect the lead from the travel adapter to the bottom of the phone. Make sure that the arrow on the lead connector is facing towards the front of the phone.
2. Connect the other end of the adapter to the power outlet.



Caution

- Use of unauthorised accessories could damage your phone and invalidate your warranty.
- Do not force the connector as this may damage the phone and/or the mains adapter.



Getting started

Note

- “Battery Charging” is displayed on the screen after connecting the travel adapter. Only if the battery is totally empty, Call indicator Light is on without displaying “Battery Charging”.

Disconnecting the adapter

1. When charging is finished, the moving bars of the battery icon stop and ‘Full’ is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.



Note


- Ensure the battery is fully charged before first using the phone.
- Do not remove the battery or SIM card while charging.
- In the case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery. After detaching and reattaching the battery, please recharge the battery.



Turning your phone on and off

Turning your phone ON




1. Install a battery to the handset and connect the phone to an external power source such as the travel adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the **PIN code request** setting you may need to enter your PIN code.

Note

- Like any other radio devices, avoid any unnecessary contact with the antenna while your phone is on.

Turning your phone OFF

1. Press  for a few seconds until the LCD screen is turned off.



Getting started

Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 9-4-5].

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **On**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Off**, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your network operator.



Security code (4 to 8 digits)

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.

Barring password





The barring password is required when you use the **Call barring** function. You obtain the password from your network operator when you subscribe to this function. See page 92 for further details.





General functions

Making and answering calls



Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code. To edit a number on the LCD screen, press the right/left navigation keys to move the cursor to the desired position or simply press the clear key () to erase one digit at a time.
 - ▶ Press and hold the clear key () to erase the entire number.
3. Press the send key () to call the number.
4. To end the call, press the end key () or the right soft key. You can also end the call by closing the flip.


Making a call using the send key

1. In standby mode, press the send key () and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation key.
3. Press .

Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press .

Ending a call

When you have finished your call, press the end key ()



Making a call from the phonebook

You can save the names and phone numbers dialed regularly in the SIM card and/or phone memory, which is phonebook. You can dial a number by simply looking up the desired name in the phonebook. For further details on the phonebook feature, please refer to page 50-56.


Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys (). Press the up side key to increase and down side key to decrease the volume.

Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (name or photo if saved in the Phonebook) is displayed.

1. To answer an incoming call, open the flip.




- ▶ You can answer a call while using the phonebook or other menu features.

2. To end the call, close the flip or press the .



General functions

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Phonebook, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

The following text input methods are available in the phone.


T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.

ABC mode


This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.





Changing the text input mode









1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the lower right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the lower right corner of the LCD screen.

► Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.





1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
 - The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
 - If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.


Example


- Press     to type **Good**.
- Press     [Down navigation key] to type **Home**.



General functions




- If the desired word is missing from the word choice list, add it using the ABC mode.
 - You can select the language of the T9 mode. Press the left soft key [Option], then select **T9 languages** or press the "" key on your keypad to switch the language. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.
2. Enter the whole word before editing or deleting any keystrokes.
 3. Complete each word with a space by pressing the  key. To delete letters, press . Press and hold down to erase  entire words.



- To exit from the text input mode without saving your input, press . The phone goes back to standby mode.

► Using the ABC mode

Use the  to  keys to enter your text.

1. Press the key labelled with the required letter:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.



Note

- Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper case	Lower case
	., - ? ! ' @ : 1	., - ? ! ' @ : 1
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	Space key	Space key

► Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.



General functions

Phonebook

You can store phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can store up to 255 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Phonebook** menu. (Refer to page 50-56 for details.)

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.

Making a second call


You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the Phonebook during a call, press the right soft key then select **Add new**.

Switching between two calls


To switch between two calls, press the left soft key then select **Swap**.




Answering an incoming call


To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see [Menu 9-3-4].

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting left soft key, then **Hold & Answer**. You can end the current call and answer the waiting call by selecting left soft key and then **End & Answer**.

Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key [Menu] key and selecting the **Conference / Reject** or by pressing the .

Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.

Switching DTMF tones on during a call

To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.




General functions

Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting **Swap**.

Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference / Join all**.

Putting a conference call on hold

Press the left soft key, then select the **Conference / Hold all**.

Activate the conference call on hold

Press the left soft key, then select the **Conference / Join all**.



Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference / Join all**.


Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference / Private** to put all the other callers on hold.

Ending a conference call

The currently displayed caller from a conference call can be disconnected by pressing the  key. To end a conference call, press the left soft key, then select the **Conference / End multiparty**. After pressing the left soft key, selecting **Conference / End all** will end all the active and on-hold calls.



Menu tree



1 Profiles

- 1 Vibrate only
- 2 Silent
- 3 General
- 4 Loud
- 5 Headset
- 6 Car



2 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed call
- 4 Delete recent calls
- 5 Call durations
- 6 Call costs
- 7 Cost settings
- 8 GPRS information



3 Fun & Tools

- 1 Alarm clock
- 2 Calculator
- 3 My folder
- 4 Unit converter
- 5 World time
- 6 Voice recorder
- 7 Infrared



4 Organizer

- 1 Schedule
- 2 Memo
- 3 Phone book



5 Messages

- 1 Text messages
- 2 Multimedia messages
- 3 Voice messages
- 4 Info services
- 5 Templates
- 6 Memory status



6 Camera

- 1 Take picture
- 2 Gallery



7 Games & Apps

- 1 Games
- 2 Applications
- 3 Download
- 4 Information



8 Internet

- 1 Home
- 2 Bookmarks
- 3 Push messages
- 4 Profiles
- 5 Go to URL
- 6 Cache settings
- 7 Security certificates
- 8 Reset profiles
- 9 WAP information



9 Settings

- 1 Date & Time
- 2 Phone settings
- 3 Call settings
- 4 Security settings
- 5 Network settings
- 6 GPRS settings
- 7 Reset settings





0 SIM Service

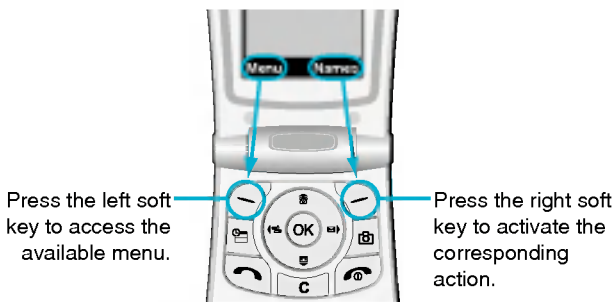
This menu depends on SIM and the network services.



Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.




Profiles [Menu 1]



In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are six preset profiles: **Vibrate only**, **Silent**, **General**, **Loud**, **Headset** and **Car**. Each profile can be personalised except Vibrate only and Silent.

Press the Menu key () and select **Profiles** using navigation keys.

Changing the profile [Menu 1-x-1]

1. A list of **Profiles** is displayed.
2. In the **Profile** list, scroll to the profile you want to activate and press the left soft key [Select] or OK key.
3. Then, select **Activate**.

Customising profiles – Personalise [Menu 1-x-2]

Scroll to the desired profile in the Profile list. After pressing the OK key or the left soft key, select **Personalise**. The profile setting option opens. Set the option as required.

Incoming alert type: Set the alert type for incoming calls.

Ring tone: Select the desired ring tone from the list. Scroll through the list using up/down navigation keys. You can hear the desired tone prior to making a selection.

Ring volume: Set the volume of the ringing tone.

Message alert type: Set the alert type for messages.

Message tone: Select the alert tone for messages.

Key tone: Select the desired keypad tone.

Key volume: Set the volume of keypad tone.

Flip tone: Set the flip tone for flip open and close.

Effect tone volume: Set the volume of effect sound.

Power on/off volume: Set the volume of the ringing tone when switching the phone on/off.



Profiles [Menu 1]

Automatic answer: (only in Car profile) You can activate the automatic answer feature. Select the time before answering automatically.

Customising profiles – Rename [Menu 1-x-3]

You can rename a profile and give it any name you want. **Vibrate only, Headset** and **Car** profiles cannot be renamed.


1. To change the name of a profile, scroll to the profile in the profile list and after pressing the OK key or the left soft key, select **Rename**.
2. Key in the desired name and press the OK key or the left soft key [Save].

Call register [Menu 2]



You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number, the name (if available), and the picture (if available) are displayed together with the date and time at which the call was made. You can also view call times and costs.

Press the Menu key () and select Call register using navigation keys.

Missed calls [Menu 2-1]

This option lets you view the last 10 unanswered calls. After pressing the left soft key [Option], you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Note

- You can delete all the call records from the list using the **Delete recent calls** menu.

- Edit the name saved in the phonebook.

Note

- It is possible for only a number in the Phonebook to edit a name. Another numbers (e.g. FDN, SDN) can't edit names.



Call register [Menu 2]

Received calls [Menu 2-2]

This option lets you view the last 10 incoming calls. After pressing the left soft key [Option], you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Note

- You can delete all the call records from the list using the Delete recent calls menu.

- Edit the name saved in the phonebook.

Note

- It is possible for only a number in the Phonebook to edit a name. Another numbers (e.g. FDN, SDN) can't edit names.



Dialed call [Menu 2-3]

This option lets you view the last 10 outgoing calls (called or attempted). Using the [Option] key, you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Note

- You can delete all the call records from the list using the **Delete recent calls** menu.

- Edit the name saved in the phonebook.

Note

- If the FDN is enabled, the menu [Edit name] will not be shown.

Delete recent calls [Menu 2-4]

Use this to delete the missed call list, received call list, or dialed call list. You can also delete all call lists at a time selecting **All calls**.



Call register [Menu 2]

Call durations [Menu 2-5]

Use this to view the duration of your incoming and outgoing calls. You can check each call duration at the bottom of screen while scrolling using the up/down navigation keys. Pressing the [OK] key or the left soft key [Reset] resets the call timer of selected call. To prevent accidental reset, you are requested to enter the Security code.

- **Last call:** Length of the last call
- **Received calls:** Length of the incoming calls
- **Dialed Calls:** Length of the outgoing calls
- **All calls:** Total length of all calls made or received calls since the timer was last reset.

Note

- The actual time invoiced for calls by your service provide may vary, depending on network features, rounding-off for billing, etc.

Call costs [Menu 2-6]

This network service allows you to check the last call cost and the total call cost. The call cost is displayed on the bottom of the LCD screen. To reset the call cost, press the left soft key [Reset] or the OK key. You are requested to enter the PIN2 code.

Note

- The actual cost invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, taxes, etc.



Cost settings [Menu 2-7]

- **Call cost's limit:** This network service allows you to limit the cost of your calls to the number of charging units or units of currency. You can make or receive a call up to the specified cost limit. You can change the call cost's limit after entering the PIN2 code.
- **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the **Currency** or **1 Unit** in this menu, you need the PIN2 code.

Note

- When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.

- **Auto display:** This network service allows you to see automatically the cost of your last call. If you select **On** in **Auto display** menu, you can see the cost of the last call when the call is released.

GPRS information [Menu 2-8]

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.
(GPRS stands for General Packet Radio Service.)

• **WAP information**

You can check the data volume and the time spent using WAP. On the selected menu, pressing the left soft key [Reset] or the OK key clears the counter.



Call register [Menu 2]

- **External device**


You can check the data volume and the time spent using GPRS with an external device such as a serial port.

- **Total data**

You can check the total amount of data through WAP and the external device.

Fun & Tools [Menu 3]



Press the Menu key () and select **Fun & Tools** using navigation keys.

Alarm clock [Menu 3-1]

Set the alarm to ring at a specific time. In the **Alarm Clock** menu, the following options are available.

On

Set the alarm time.

1. Enter the menu.
2. Select [On] by the left/right navigation key.
3. Enter the alarm time using the numeric keys.
4. Using the left/right navigation keys, select one of the alarm options: **Once**, **Daily**, **Weekly**, and **Monthly**.
5. Alarm melody section: select the desired alarm melody using the left/right navigation keys.

Off

Deactivates the alarm.

Calculator [Menu 3-2]

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division. (You can enter numbers up to the second decimal place.)






Fun & Tools [Menu 3]

Using the calculator

1. Enter the first number using the numeric keys.
2. Press the corresponding navigation key to select a mathematical function.
3. To calculate the result, press the left soft key [Result] or OK key.
4. After calculation, press the left soft key [Reset] to return to the initial state.

Note

- To erase any mistakes and clear the display, press the  key. To include a decimal point, press the  key. To include a minus sign, press the  key.

My folder [Menu 3-3]

My folder has 3 folders: Picture, Animation and Sound. You can view, delete, or control downloaded contents. You can get pictures, animation or sounds from WAP site, MMS or SMS. While you're checking each content, you can send it via SMS or MMS, edit or delete it. You can set one in the Picture folder or Animation folder as the wallpaper. For sounds, you can set the desired sound as the ring tone.

Picture [Menu 3-3-1]

Animation [Menu 3-3-2]

Sound [Menu 3-3-3]

Memory status [Menu 3-3-4]




Unit converter [Menu 3-4]

This converts any measurement from one unit to another. There are 4 types that can be converted into units: Length, Surface, Weight and Volume.

1. Select one of four unit types by pressing the left soft key [Unit].
2. Move to the current unit section by pressing the down navigation key.
3. Select the unit you want to convert using the left/right navigation keys.
4. Move to the Convert unit section by pressing the down navigation key.
5. Select the unit you want to convert to, using the left/right navigation keys.
6. Input numbers using the numeric keys. Conversion is calculated automatically.

Note

- You can input a decimal number by pressing  key.

World time [Menu 3-5]

You can check the current time of Greenwich Mean Time (GMT) and 59 major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time. To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press the left soft key [Options]. And select **Set**.



Fun & Tools [Menu 3]

Note

- The time zone setting of each city in World time menu may be affected by network condition.

Voice recorder [Menu 3-6]

You can record a memo. You can record up to 3 voice memos up to a maximum of 30 seconds each. You can play or delete the recorded memo or record new voice memo using the left soft key [Options] key.

Play

Allows you to play back all memos recorded, starting with the most recent memo. The screen displays the Date and time when the memo was recorded.

Delete

Allows you to delete a specific memo.

Record new

Allows you to record a memo.

Delete all

Allows you to delete all memos. Press left key [Select]. Press the left soft key [Yes] to confirm.

Note

- In standby mode, you can go directly to the Voice recorder menu by pressing the down navigation key.
- If all memo locations are full, you must delete an old memo before recording a new one.



Infrared [Menu 3-7]

This feature allows you to send or receive data/fax through the infrared port. To use an infrared connection:

1. Install the modem driver for receiving or sending the data/fax.
2. Install the network dial-up software supplied by your network provider or fax application program for a fax call on your PC.
3. Configure and activate an IrDA-compliant infrared port on your PC.
4. Activate the infrared feature on the phone; the red IrDA symbol appears on the right side at the bottom of the display.
5. Call the network service number given to you by the service provider.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activation of the feature, it is automatically deactivated.


For further details, contact your network provider.

Note

- PC Sync is a program for data exchange between PC and the phone by a data cable. For more information, you can use the PC Sync Help file on the CD.



Organizer [Menu 4]

Press the Menu key () and select **Organizer** using navigation keys.

Schedule [Menu 4-1]

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move to another date using navigation keys. If a date is shown in a different colour, it means that there is a schedule or memo for that day. This function reminds you of your schedule and memos. The phone will sound an alarm tone if you set the phone to do so.

View [Menu 4-1-1]

Shows the note for the chosen day. Press [Options] to delete or edit the note you selected.

Edit [Menu 4-1-2]

Use this to edit the schedule.

Delete [Menu 4-1-3]

Use this to delete the schedule.

Add new [Menu 4-1-4]

You can edit a maximum of 30 characters and take up to 20 notes.

Calendar [Menu 4-1-5]

Goes back to the calendar.

Scheduler tone [Menu 4-1-6]

The phone can sound an alarm tone when the scheduled date and time for an event has been reached with this option.



View all schedules [Menu 4-1-7]

Shows the notes that are set for all days. Use the up/down navigation keys to browse through the note lists.

Go to date [Menu 4-1-8]

Use this to jump to a specific date. Enter the date using the numeric keys and the left/right navigation keys.

Delete past [Menu 4-1-9]

You can delete expired schedule notes that have already been notified.

Delete all [Menu 4-1-10]

Use this to delete all schedules. You are asked to confirm this action.

Memo [Menu 4-2]

You can write, edit and delete a memo on a specific date.

1. Scroll to highlight Memo.
2. Press the left soft key [Add].
3. Input the memo and then press the left soft key [Options].

The following options are available.

- **Save:** Allows you to save the memo.
- **T9 languages:** Select the desired language of T9 mode.
- **Exit editor:** Allows you to exit from the memo editor.

After a memo is already input in your phone,

1. Select a memo.
2. Press the left soft key [Select].
3. Press the left soft key [Options].



Organizer [Menu 4]

The following options are available.

- **Edit:** You can edit the selected memo.
- **Delete:** Deletes the selected memo.
- **Add new:** You can add new memo.
- **Delete all:** Deletes all memo.

Phone book [Menu 4-3]

You can save phone numbers and their corresponding names in the memory of your SIM card. In addition, you can save up to 255 numbers and names in the phone memory.

- Press the left soft key [Menu] in standby mode, then select **Organizer** → **Phone book**.
- Or, press right soft key [Names] in standby mode.

Search [Menu 4-3-1]

1. In menu mode, Select an **Organizer** → **Phone book**, and select **Search**. Or in standby mode, press right soft key [Names] and select Search.
Enter the start of the name that you wish to find and press left soft key [Search].



- You can also scroll through the phonebook in standby mode by pressing the navigation up key.
2. After finding the desired name, you can make a call to the number by pressing the [Send] key. Or press the left key [Options] to use the following options.
 - **View detail:** To view details of the selected name.
 - **Edit:** Edits the name, number, the listing group, the e-mail, the memo, and the phonebook photo.
 - **Delete:** Deletes the Phonebook entry.



- **Write text message:** Use this to write a text message to the name.
- **Write multimedia message:** Use this to write a multimedia message to the name.
- **Copy:** Use this to copy the Phonebook entry from SIM to the phone memory or vice versa.
- **Voice:** Records the name of the selected Phonebook entry for voice-activated dialling.

Add new [Menu 4-3-2]

You can add a Phonebook entry using this function.

There are 2 memories : Phone memory and SIM memory. To select the memory type, go to **Set memory** [Menu 4-3-8-1].

The phone memory capacity is 255 entries. You can enter up to 20 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

1. In menu mode, Select an **Organizer** → **Phone book**, or in standby mode, press right soft key [Names].
2. Scroll to highlight **Add new**, and press [OK].
3. You can add new Phonebook entries to SIM memory or the phone memory.

• Adding new entries into SIM memory

You can enter a name, a number, and a required group.
(Depends on the SIM)

• Adding new entries into the phone memory

You can enter a name, numbers (mobile, home, office), e-mail address, a required group, a memo, and a phonebook photo.

Note

- A phonebook photo is able to be added only into the phone memory.



Organizer [Menu 4]

Speed dials [Menu 4-3-3]

You can assign any of the keys $\boxed{2 \text{ sec}}$ to $\boxed{9 \text{ min}}$ with a name list entry. You can make a call to the number by pressing the [Send] key in the Speed dial list, or press the left key [Options] and select **Call**. Or, you can call directly by pressing the assigned key ($\boxed{2 \text{ sec}}$ - $\boxed{9 \text{ min}}$) for 2-3 seconds in standby mode.

1. In menu mode, select an **Organizer** → **Phonebook**, or in standby mode, press right soft key [Names].
2. Scroll to **Speed dials**, then press [OK].
3. To add a number to **Speed dials**, select <Empty> and then, press the left soft key [Add]. You can search and select the name to press [Select] through the phonebook.
4. You can change or delete a speed dial number, make a call, write text message, or write multimedia message by pressing the left soft key [Options]. You can see the following submenu.
 - **Change:** Changes the member list.
 - **Delete:** Deletes the member list.
 - **Call:** Makes a call to the number.
 - **Write text message:** Use this to write a text message to the name.
 - **Write multimedia message:** Use this to write a multimedia message to the name.



Voice list [Menu 4-3-4]

You can assign a voice with a name list entry for voice-activated dialling.

You can make a call to the number by pressing the [Send] key, or press the left key [Options] and select **Call**.

1. In menu mode, Select an **Organizer** → **Phonebook**, or in standby mode, press right soft key [Names].
2. Scroll to **Voice list**, then press [OK].
3. To add a number to **Voice list**, press the left soft key [Add]. You can search and select the name to press [Select] through the phonebook. After selecting a number, record a voice.
4. You can play, change, or delete a voice, make a call, add new or delete all voice lists by pressing the left soft key [Options]. You can see the following submenus.
 - **Play**: Plays back the voice tag assigned to the phone number.
 - **Change**: Changes the voice tag assigned to the phone number.
 - **Delete**: Deletes the voice assigned to the phone number.
 - **Call**: Makes a call to the selected number.
 - **Add new**: Adds a new phone number for voice-activated dialling.
 - **Delete all**: Deletes all voice-activated dialling numbers.



Note

- You can enter up to 10 phone numbers for voice dial.



Organizer [Menu 4]

Caller groups [Menu 4-3-5]

There are 6 pre-defined groups, as well as one additional group labelled Others, where you can create lists.

1. In menu mode, select an **Organizer** → **Phonebook**, or in standby mode, press right soft key [Names].
2. Scroll to **Caller groups**, then press [OK]. Every group list will be displayed: **Family**, **VIP**, **Friends**, **Colleague**, **Group 1**, **Group 2**, and **Others**.
3. Select the group name that you want to manage by pressing the left soft key [Options]. The following options will be displayed except for **Others**.
 - **Member list**: Displays the member list in the group.
 - **Group ring tone**: Use this to select the ring tone to be used when you receive a voice phone call from a person in the group.
 - **Group icon**: Use this to select the graphic icon to be displayed when you receive a call from a person in the group.
 - **Add member**: Add a member to the group.
 - **Delete member**: Delete a member from the group.
 - **Rename**: Assigns a new name to the group.

Copy all [Menu 4-3-6]

You can copy/move entries from the SIM card memory to the phone memory and vice versa.

- **SIM to Phone** : Use this to copy the entry from the SIM Card to Phone memory.
- **Phone to SIM** : Use this to copy the entry from the Phone memory to the SIM Card.



The following options are available.

- **Keep original** : When copying, the original dial numbers are kept.
- **Delete original**: When copying, the original dial numbers will be erased.

Delete all [Menu 4-3-7]

You can delete all entries in SIM, Phone, and Voice list. Except for **Voice list**, this function requires the security code.

Settings [Menu 4-3-8]

- **Set memory**

You can select the memory for the phonebook feature between the SIM and the phone. If you select **Variable**, when adding entry, the phone will ask where to save the number.

- **Search by**

You can set the phone to search by name or number, when you search the Phonebook. If you select **Variable**, the phone will ask how to search when you search the phonebook.

- **Photo display**

You can set the photo list by **Photo view** or **List view**, when you search the phonebook. If you select **Photo view**, the search list will be shown with photos.



Organizer [Menu 4]

Information [Menu 4-3-9]

- **Service dial number (SIM dependent)**

Use this to view the list of Service Dialling Numbers (SDN) assigned by your network operator (if supported by the SIM card). Such numbers include the emergency, directory enquiries and voice mail numbers.

1. Select the Service dial number.
2. The names of the available services will be shown.
3. Use the up/down navigation keys to select a service.

- **Memory status**


You can check the current memory status of the SIM card and phone memory.

- **Own number (SIM dependent)**

Use this to display your phone number in the SIM card.

Messages [Menu 5]






Press the Menu key () and select **Messages** using navigation keys.

Text messages [Menu 5-1]

Your phone receives voice mail notification messages and Short Message Service (SMS) messages.

Voice mail and SMS are network services. Please contact your network operator for more information.

When the  icon appears, you have received voice mail.

When the  icon appears, you have received a new text message. If the message memory is full, a message is displayed, the  icon flashes and you cannot receive any new messages. Use the **Delete** option in the **Inbox** menu to delete obsolete messages.

Once there is space in the message memory, any undelivered SMS messages will be received (provided sufficient space is available).

Write message [Menu 5-1-1]

You can write and edit text messages.

1. Key in your message. For details on how to enter text, refer to page 24 through 27 (Entering Text).
2. After you complete the message, to select the required option, press the left soft key [Option].

The following options are available.

- **Send to number:** Enter the number or select the number from the Phonebook or the recent numbers. You can send a message up to 5 phone numbers at a time. Press the left soft key [Options]. The following options will be displayed.
 - Send (It only shows after a phone number is entered)
 - Recent numbers
 - Search



Messages [Menu 5]

- **Save to draft:** Allows you to save the message so that it can be sent later.
 - **T9 languages:** Select the desired language of T9 mode.
 - **Clear text:** Erases the whole text.
 - **Exit:** Allows you to exit from the **Write message** menu.
3. You can also send attachments with the message by pressing the right soft key [Attach], while you're entering a message.
- **Symbol:** You can attach special characters.
 - **Picture:** You can send and receive text messages that contain pictures, known as 'picture messages'. Several preset pictures are available in the phone and they can be replaced with new ones received from other sources.
 - **Animation:** Attaching an animation in a message can be done through EMS (Enhanced Messaging Service). You can select any of 15 animations in the phone.
 - **Sound:** If available, you can attach a sound available for a short message.
 - **Text template:** You can use text templates already set in the phone.
 - **Phone number:** You can add phone numbers in the message.
 - **Signature:** You can attach your signature.

Inbox [Menu 5-1-2]

Received messages can be searched and the contents can be viewed.

Received messages are displayed in date order.

Press the menu key and select **Messages → Text messages → Inbox**.



Icon	Description
	Read SIM message
	Unread SIM message
	Read message
	Unread message
	Read delivery report
	Unread delivery report

Note

- SIM message refers the message saved in the SIM memory. And the network distinguishes an incoming message into the SIM message or just message.

Each received message has the following options available. Press the left soft key [Options].

• **Reply**

Replies to the received message.

• **Forward**

Forwards a received message to other recipients.

• **Return call**

Calls the sender's phone.



Messages [Menu 5]

- **Extract**

Extracts a picture, animation, sound, phone number, text web page or email address from the message. These will be saved in My folder, Phonebook, or bookmarks.

- **Delete**



Deletes the selected message from the Inbox.

- **View information**

Shows more detailed information about the selected message.

Outbox [Menu 5-1-3]

You can view the list and contents of sent messages in this menu and can also verify if the transmission was successful.

Icon	Description
	Sent SIM message
	Sent message

The following options are available.

- **Forward**

Forwards the current message to other recipients.

- **Delete**

Deletes the selected message from the Outbox.

- **View information**

Shows more detailed information about the selected message.



Draft [Menu 5-1-4]

In this menu, you can see the message list saved as draft. Scroll through the list using the up/down navigation keys. Each draft has the following options.

- **Send**

Sends the selected message to other recipients.

- **Delete**

Deletes the selected message.

Settings [Menu 5-1-5]

This menu lets you set up default SMS information.

- **Message types**

Sets the default message type between Text, Voice, Fax, Paging, X.400, E-mail and ERMES. The network can convert the messages into the selected format.

- **Validity period**

Sets the length of time for which your text messages will be saved at the SMS center while attempts are made to deliver them to the recipient. Possible values are 1 hour, 12 hours, 1 day, 1 week and the maximum authorised by your network operator.

- **Delivery reports**

Activates or deactivates the report function. When this function is activated, the network informs you whether or not your message has been delivered.



Messages [Menu 5]

- **Reply with same service centre**

Allows the recipient of your SMS message to send you a reply via your message centre, if the service is provided by the network.

- **SMS centre**

Saves or changes the number of your SMS centre when sending text messages. You must obtain this number from your service provider.

Delete all [Menu 5-1-6]


You can delete all messages in the message memory.

Multimedia messages [Menu 5-2]

A multimedia message can contain text, images, and/or sound clips.

This feature can be used only if it is supported by your network operator or service provider. Only devices that offer compatible Multimedia message or e-mail features can receive and send multimedia messages.

Write [Menu 5-2-1]

1. Write message title, then press OK key or left soft key.
2. Key in the text message. Using the right soft key, you can input symbols, numbers and emoticons, or use T9 input mode. After the text message input, press the left soft key [Done].
3. Add an image and/or sound. You can move to the next section using the up/down navigation.
4. You can add a slide by moving the cursor on , then pressing the OK key or the left soft key [Select]. You can also add a slide using the right soft key [Menu].



5. Press the right soft key [Menu]. The following options are available.
- **Send:** Supports multiple numbers and email addresses.
 - **Preview:** Displays the multimedia message you wish to send.
 - **Save:** Saves the multimedia message in draft or as a template.
 - **Delete:** Deletes the MMS message.
 - **Slide duration:** Set the slide show duration.
 - **Slide format:** Align the message contents right, left, top or bottom.
 - **Add Slide:** Adds a slide before or after the current slide.
 - **Remove Slide:** Deletes the selected slide.

Inbox [Menu 5-2-2]

You will be alerted when you have received messages. They will be saved in the Inbox. You can identify each message by icons. For details, see the icon description below.

Icon	Description
	Read multimedia messages
	Unread multimedia messages
	Read notified multimedia messages
	Unread notified multimedia messages

If the phone has 'No space for messages', you can make space by deleting messages, media and applications.



Messages [Menu 5]

- **Timer stop**

The Timer stop menu is displayed when you receive a message including various pictures. Usually, the pictures are sequentially displayed automatically. However, if you select this menu, you can see the next picture by pressing the left soft key [Next] manually.

- **Previous slide**

Displays the previous page.

- **Replay**

Replays multimedia messages.

- **Delete message**

Deletes the current message.

- **Reply all**

Replies to all senders.

- **Forward**

Forwards the selected message to other recipients.

- **Save message**

Saves a multimedia message in draft form or as a template.

- **Save item**

Extracts pictures or sounds. They will be saved in My folder or Phonebook.

- **Detail**

Displays information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.



Outbox [Menu 5-2-3]

Use this to see sent messages. For each sent message, you can see the delivery status.

Icon	Description
	Sent

- **Timer stop**

Usually, the pictures are in the form of an automatic slide show. However, if you select this menu, you can see the next picture by pressing the left soft key [Next] manually.

- **Previous slide**

Displays the previous page.

- **Replay**

Replays the current message.

- **Delete message**

Deletes the current message.

- **Forward**

Forwards the current message to other recipients.

- **Save message**

Saves a multimedia message in draft form or as a template.

- **Save item**

Saves items such as images, sound and attachments to a message.



Messages [Menu 5]

- **Detail**

Displays information about the outbox messages:
Subject (only for Multimedia message), Message date & time,
Message type, Message size.

- **Reply**

Replies to the current message.

- **Reply all**

Replies to all recipients of the selected message.

Draft [Menu 5-2-4]

Using this menu, you can preset up to five multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.

- **Send**

Supports multiple member and email addresses.

- **Preview**

To see the draft multimedia message.

- **Save**

Saves multimedia messages in draft form or as templates.

- **Delete**

Deletes the message.

- **Slide duration**

Set the slide show duration.

- **Slide format**

Align the message contents right, left, top or bottom.



- **Add slide**

Adds a slide before or after the current slide.

- **Remove slide**

Removes the highlighted slide.

Settings [Menu 5-2-5]

Via this menu, you can set up the default multimedia message information.

The following options are available.

- **Slide duration**

Set the duration of each slide.

- **Alignment**

Set the alignment of messages.

- **Validity period**

Set the duration for keeping messages on the network server.

- **Auto download**

On: If you select this, messages are downloaded automatically on receipt.

Confirm: Requires you to confirm you want to download the message.

Off: Defers downloading messages.

- **Message centre**

Enter the address of an MMS server to use the MMS service.




Messages [Menu 5]

- **Profiles**


See page 82 for further information.

Voice messages [Menu 5-3]

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your network operator.

When new voice message is received, the () symbol will be displayed on the screen. Please check with your network provider for details of their service in order to configure the handset correctly.

Listen to voice mail [Menu 5-3-1]

Once this option has been selected, simply press the left soft key [OK] to listen to voice messages. You can also hold down the  key in standby mode to listen to voice messages.

Voice mail centre [Menu 5-3-2]

You can input and set the voice mailbox number.

Info services [Menu 5-4]

Info service messages are text messages sent by the network to mobile phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices.

Each type of information is associated with a number, which can be obtained from the network operator. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly.

In standby mode, the following options are available when viewing info service messages.



Read [Menu 5-4-1]

The list of received broadcast messages can be searched and the contents viewed.

Receive [Menu 5-4-2]

Use this to enable or disable the reception of broadcast messages.

Alert [Menu 5-4-3]

Set alert on or off for a new broadcast message.

Auto display [Menu 5-4-4]

If you select this option **On**, all received broadcast messages will be automatically displayed.

Languages [Menu 5-4-5] (Dependent to network and subscription)

This option lets you select the preferred languages. Cell broadcast messages will be displayed in the selected language. If you use all languages supported by the phone, select **Automatic** at the end of the list.

Topics [Menu 5-4-6] (Dependent to network and subscription)

To create new topics, press the left soft key [Option] then select **Add new**. If you already have topics, you can cancel, edit, or delete them by using the left soft key [Options].



Messages [Menu 5]

Templates [Menu 5-5]

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Three types of templates are available: Text, Multimedia and Signature.

Text [Menu 5-5-1]

- **Edit**

Use this to write a new message or edit the selected template message from the text template list.

- **Delete**

Deletes the selected template message from the text template list.

- **Send text message**

Use this to send the selected template message by SMS.

- **Send multimedia message**

Use this to send the selected template message by MMS.

- **Add new**

Use this to create new template.

Multimedia [Menu 5-5-2]

- **Send**

Sends the multimedia template. Supports multiple numbers and email addresses.

- **Preview**

Displays the draft multimedia message.



- **Save**
Saves multimedia messages in draft form or as templates.
- **Delete**
Deletes the multimedia template.
- **Slide duration**
Set the slide show duration.
- **Slide format**
Align the message contents right, left, top or bottom.
- **Add Slide**
Adds a slide before or after the current slide.
- **Remove Slide**
Deletes the highlighted slide.
- **Add Image**
Use this to add an image before or after the current image.
- **Add Sound**
Adds a sound before or after the current sound.

Signature [Menu 5-5-3]

This option helps you to make your own **Signature**. Key in the name, mobile phone number, office number, Fax number, and E-mail address.

- **Edit**
Use this to write a new message or edit the selected Signature.
- **Delete**
Use this to delete the selected signature.



Messages [Menu 5]

- **Send text message**

Use this to send the selected signature by SMS.

- **Send multimedia message**

Sends the selected signature by MMS.

Memory status [Menu 5-6]



You can check the current memory status for SMS and MMS.

Camera [Menu 6]



The L1100 has a built-in camera. It supports Zoom, White balance, Colour/Sepia/Grey settings, and Multi burst functions.

Take picture [Menu 6-1]

Press the Menu key () and select **Camera** → **Take picture**. Or, press the camera key () in standby mode.

1. Focus on the subject to capture, then press the [OK] key or the camera hot key.


Note

- In the preview mode, you can immediately go to Gallery by pressing the right soft key [Gallery].

2. 'Saved' is displayed in the top left of the captured image. The captured image is then automatically saved.

Note

- The remaining memory is shown in the top right of the image. If there is insufficient memory, the image size is automatically reduced. If the memory is full, 'memory full' is displayed and you cannot take any more picture. Create space by deleting old images.

3. Press the [OK] key to continue taking pictures. Or press the clear key () to delete the image. Press the right soft key to send MMS picture message using the captured image.



Camera [Menu 6]

< Options before taking a picture >



Press the left soft key [Options] to set the options in the preview mode. You can select the desired option by pressing the [OK]. And you will see the current option setting value in the top of the preview screen.

Then you can modify the desired value by pressing the left/right navigation keys. If you press the [OK] or left soft key [Done], the selected option value is set and return to the preview mode.

You can set the following options.

Note

- The larger the image size, the better the image quality. However, this will use more memory.

1. **Image size:** Select the desired image size to be captured. [640x480, 320x240, 160x120, 128x160, 48x80]
2. **Brightness:** Select the desired brightness. [-2 ~ +2]
3. **White balance:** Select the desired white balance. [Auto/ Daylight/ Incandescent/ Cloudy/ Fluorescent]
4. **Zoom:** Select the zoom factor [x1, x2, x4]
5. **Colour effect:** Select Colour/Sepia/Mono mode by using the left/right navigation keys.
6. **Multi shot:** Select the number of images to be captured in multi burst mode.
7. **Shutter sound:** Select shutter sound [Sound1 / Sound2 / Sound3 / Off]
8. **Factory settings:** Return to the default factory settings.




Gallery [Menu 6-2]

Then select image category.

[All pictures / General pictures / Phonebook pictures]

You can view, organise and send pictures saved in your phone.

1. Use the navigation keys to select the picture you want a full screen view of.
2. Press the [OK] key. You will see the name of the image on top of the LCD screen.
3. Press the left soft key [Options] to access the following submenus.
 - **Thumbnail/Enlarge:** You can view the selected image.
 - **Delete:** Deletes the selected image.
 - **Send multimedia message:** Sends MMS picture messages using the selected image. See page 62 about writing MMS message.
 - **Set as wallpaper:** Set the selected image as wallpaper.
 - **Slide show:** Plays back every image in the selected category in succession, in order. To stop the slide show playback, press the  key.
 - **Rename:** You can change the title of the selected image.
 - **Delete all:** Deletes all images in the selected category.
 - **Details:** You can check the title, size, date and time of the selected image.
4. To go back to the Camera menu, press the right soft key [Back].

In [Memory status] sub menu, you can check the memory status in your phone.

[total size / used size / free size]



Games & Apps [Menu 7]

Java is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using the WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed within the Applications menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD and .JAR formats.

Note

- The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

Warning

- Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.





Games [Menu 7-1]

The phone offers you the games to play with.

Note

- The control keys are different depending on a game. However, each one has an introduction to explain the main control keys.

[Common key function]

-  : Game menu
-  : Back

Applications [Menu 7-2]

Application menu displays the list of Java programs downloaded using the WAP. All previous downloaded programs can be selected, deleted, or viewed in detail within the Application menu. From the list within the Application menu, the following options are available:

- **Open:** Open the selected program. The list includes all Java programs installed in the phone.
- **Delete:** Delete the selected program. Once deleted, you will not be able to restore the program unless it is downloaded again using the WAP.
- **Details:** Display detailed information on the selected program. This includes the program name, program size, program version, vendor information and the website address or the URL.



Games & Apps [Menu 7]

- **Connect options:** Some Java applications may require data connection to be made. Select one of the following options.
 1. **Ask first:** You will be asked before the application makes the connection.
 2. **Allowed:** The connection is created immediately without a notification.
 3. **Not allowed:** No connection is allowed.

Download [Menu 7-3]

When a new Java program is downloaded using the WAP, the address from which a download takes place is known as a bookmark. The Java menu includes a bookmark list for downloading Java programs and this bookmark list can be viewed from the Download menu. You can connect, view, edit, delete, and add new bookmarks.

- **Connect:** Selected address in the bookmark is used for data connection. After successful connection, desired Java program can be downloaded from the list.
- **View:** Detailed information on a bookmark can be viewed such as the address of bookmark and title of bookmark required for connecting to certain sites.
- **Edit:** Selected bookmark can be edited. Editing a bookmark is done in the order of Address → Title. When creating a new bookmark, same order is followed.
- **Delete:** Selected bookmark is deleted. All bookmarks can be deleted completely from the bookmark list screen. Deleted bookmark cannot be restored so caution is required when deleting bookmarks.
- **Add new:** New bookmark is added. The same order used during Edit bookmark applies to Add new bookmark. Select the Add new option from the bookmark menu or when no bookmark exists, then the Add new can be selected from the bookmark list screen.



Note

- After selecting the Connect function to access the Java MIDlet Provider's server, you may choose one of many Java programs to download and install into your phone. Once connected to the server, the Go button can be pressed to view the JAD information on a desired program. The Get button will begin the download and install process. The download and install process will take place simultaneously and once download is complete you can immediately run the Java program. The installed Java program can be selected to run at a later time from the Application menu.

Information [Menu 7-4]

Memory status [Menu 7-4-1]

Shows the size of memory available for game and application installations. You can also see the whole memory status of Handset.



Internet [Menu 8]


Press the Menu key  and select **Internet** using navigation keys.

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your network operator to open your Internet account. To use the Web Browser, you must indicate your phone number via the **Own number** menu option.

Once connected, the homepage is displayed. The content depends on the service provider.




You can access any website page by entering its URL address. To exit the browser at any time, press the  key. The phone will return to the standby mode.

Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Key	Description
	Scrolls each line of the content area
	Returns to the previous page
	Selects options and confirms actions



Using the WAP browser menu

There are various menu options available when surfing the Wireless Web.

Note

- The WAP browser menus may vary, depending on your browser version.

Home [Menu 8-1]

Connect to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

Bookmarks [Menu 8-2]

Set the current page as a new bookmark or move an established bookmark. Your phone may have some pre-installed bookmarks for sites not affiliated with LG. LG does not warrant or endorse these sites. If you choose to access them, you should use the same security or content precautions as you would with any site.

E-mail server [Menu 8-2-1]

• Connect

Connects to the E-mail server that you configured.

• Edit address

Edit the E-mail address.

Delete all [Menu 8-2-2]

Delete all bookmarks.



Internet [Menu 8]

Push messages [Menu 8-3]

Inbox [Menu 8-3-1]

You can order Push messages from WAP service providers. Push messages are notifications of, for example, news headlines and they can contain a text message or the address of a WAP service. For availability and subscription, contact your WAP service provider. Service providers can update an existing Push message every time a new Push message is received. Messages can be updated even if you have moved them to another folder. When Push messages expire, they are deleted automatically.

- **Information**

Shows the information of received push messages.

- **Load**

Connects to a specific site using the information in the received push message.

- **Delete**

Deletes the selected push message.

Receive [Menu 8-3-2]

You can choose whether or not you wish to receive push messages.

Profiles [Menu 8-4]

For more information, consult your network operator. Each profile has submenus as follows:

- **Activate:** Activates the selected profile.
- **Settings:** Use this to edit and change WAP settings for the selected profile.
- **Rename:** You can change the selected profile's name.



- **Delete:** Deletes the selected profile from the list.
- **New profile:** You can add a new profile.

Note

- The changes using these options may affect the MMS function.

Go to URL [Menu 8-5]

You can connect directly to the site you want. To do this, you need to enter a specific URL.

Cache settings [Menu 8-6]

The information or services you have accessed are saved in the cache memory of the phone.

Clear cache [Menu 8-6-1]

Removes all context saved in cache.

Check cache [Menu 8-6-2]

Set a value whether a connection attempt is made through cache or not.

Note

- A cache is a buffer memory, which is used to save data temporarily.



Internet [Menu 8]

[Security certificates \[Menu 8-7\]](#)

A list of the available certificates is shown.

[Reset profiles \[Menu 8-8\]](#)


You can reset profiles to return to original settings.

[WAP information \[Menu 8-9\]](#)

The WAP browser version is displayed.

Settings [Menu 9]



Press the Menu key () and select **Settings** using navigation keys.

Date & Time [Menu 9-1]

This option lets you change the current time and date displayed. The following options are available.

Set date [Menu 9-1-1]

Use this to enter the day, month and year. You can change the date format via the **Date format** menu option.

Date format [Menu 9-1-2]

You can set the date format such as DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD. (D: Day, M: Month, Y: Year)

Set time [Menu 9-1-3]

Use this to enter the current time. You can choose the time format via the **Time format** menu option.

Time format [Menu 9-1-4]

You can set the time format between 12 hours and 24 hours.

Phone settings [Menu 9-2]

Many features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone settings** menu.

Wallpaper [Menu 9-2-1]

Use this to set up the display on the LCD screen in the standby mode.



Settings [Menu 9]

Greeting note [Menu 9-2-2]

Use this to show the greeting note on the internal LCD screen in the standby mode.

Menu colour [Menu 9-2-3]

Your phone provides you with 4 menu colour themes. Set the menu colour by scrolling and pressing the Select key.

Languages [Menu 9-2-4]

You can select the display language. English will be set if the language on the SIM card is not supported by the phone.

Backlight [Menu 9-2-5]

Use this to select whether or not the phone uses the backlight. A small increase in standby/talk time can be achieved by turning the backlight off.

You set the backlight option for the keypad in the up/down position independently.

LED Indication [Menu 9-2-6]

Use this to set LED Indication blinking on/off, which shows whether your phone is power on.

Network name [Menu 9-2-7]

Use this to display network name you use on the LCD screen in the standby mode.



Call settings [Menu 9-3]

To change the settings for call diverting.

Call divert [Menu 9-3-1]

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your network operator. Select one of the divert options, for example, select **If busy** to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available.

- **All voice calls**

Diverts all voice calls unconditionally.

- **If busy**

Diverts voice calls when the phone is in use.

- **If no reply**

Diverts voice calls which you do not answer.

- **If out of reach**

Diverts voice calls when the phone is switched off or out of coverage.

- **All data calls**

Diverts to a number with a PC connection unconditionally.

- **All fax calls**

Diverts to a number with a fax connection unconditionally.

Each option has the following menu:

- **Activate**

Activates the corresponding service.



Settings [Menu 9]

- **To voice mail**

Forwards to message centre. This function does not apply to **All data calls** and **All fax calls** menus.

- **To other number**

Input the number for call diverting.

- **Cancel**

Cancels the selected call divert.

- **View status**

You can check the status of the service.

- **Cancel all**

Cancels all call divert settings.

Answer mode [Menu 9-3-2]

Select the desired mode to answer a call.

- **Flip open**

You can receive a call simply by opening the flip.

- **Any key**

When the phone rings, you can answer a call by pressing any key except the key and the right soft key (⏏).

- **Only send key**

You can answer a call only by pressing the send key.

Send my number [Menu 9-3-3]

This network service lets you decide whether your phone number is displayed (On) or hidden (Off) from the person you are calling.

Select **Set by network** to reset the phone to the setting that you have agreed upon with your service provider.



Call waiting [Menu 9-3-4] (Network Service)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.

Minute minder [Menu 9-3-5]

When set to On, the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

Voice dial [Menu 9-3-6]

You can make a phone call by speaking a voice tag that has been added to a contact card. Any spoken word(s) can be a voice tag. Before using voice-activated dialling, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- When recording a voice tag or making a call by saying a voice tag, the loudspeaker is in use. Hold the phone at a short distance away from your mouth and face so that the proximity sensor does not turn the loudspeaker off.
- Very short names are not accepted. Use long enough names and avoid similar names for different numbers.

- **Automatic**

Use this to enter voice-activated dialling mode whenever you open the flip.

- **Manual**

Use this to enter voice-activated dialling mode by holding the star [*]/voice] key.



Settings [Menu 9]

Note

- You must say the name exactly as you said when you recorded it. This may be difficult, for example, in a noisy environment or during an emergency, so you should not rely solely upon voice – activated dialling in all circumstances.

Auto redial [Menu 9-3-7]

Select **On**, and your phone will make a maximum of five attempts to connect the call after an unsuccessful call attempt.

Select line [Menu 9-3-8]

This function is only used if **Two Line Service** is supported by the Service Provider. If this function is supported by your service provider, the following menu will be displayed.

- **Line 1**
- **Line 2**

Closed user group [Menu 9-3-9] (Network Service)

This is a network service that specifies the group of people who you can call and who can call you. For more information, contact your network operator or service provider. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index. (A specific index is stored in the network.)

- **Preset** : Sets the selected CUG index.
- **On**: You can edit the CUG index and activate it.
- **Off**: Deletes the selected CUG.



Security settings [Menu 9-4]

Various passwords are used to protect certain features of your phone.

PIN code request [Menu 9-4-1]

When the **PIN code request** feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.



Note

- Before disabling the PIN code request feature, you must enter your PIN.

The following options are available:

- **On**

You must enter the PIN each time the phone is switched on.

- **Off**

The phone connects directly to the network when you switch it on.

Phone lock [Menu 9-4-2]

When the **Phone lock** feature is enabled, the phone is locked and you must enter the phone password each time the phone is switched on. The password is factory set to **0000**. To change the phone password, refer to the **Change codes – Security code** menu option [Menu 9-4-5]. Once the correct password has been entered, you can use the phone until you switch it off.



Settings [Menu 9]

The following options are available:

- **Power On**

- **Enable**

- You are required to enter the phone password when you switch the phone on.

- **Disable**

- You do not need to enter the phone password when you switch the phone on.

- **If SIM changed**

- Your phone will request security code only when you change your SIM card.

- **Immediately**

After entering the correct security code, the phone will lock after going into the idle state. If you want to disable this phone lock, you should enter the right security code after pressing the right soft key. If you power off in the phone lock state, when the phone is next powered on, the phone is in the lock state.

Call barring service [Menu 9-4-3] (Network dependent)

Call barring lets you restrict the making and receiving of calls with your phone. For this function, you need the barring password, which you can obtain from your service provider.

The following options are available:

- **All outgoing**

- No call can be made.



- **Outgoing international**

International calls cannot be made.

- **Outgoing international except home country**

When abroad, calls can be made only to numbers within the current country and to your home country. No call can the country where your home network provider is located.

- **All incoming**

No call can be received.

- **Incoming when abroad**

Calls cannot be received when you are using your phone outside your home service area.

- **Cancel all barrings**

All call barring settings are deactivated; calls can be made and received normally.

- **Change password**

Use this to set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one. Once you have entered a new password, you are asked to confirm it by entering it again.



Note

- To use **Call barring service**, you must input the network password. When calls are barred, calls may be possible to certain emergency numbers on some networks.



Settings [Menu 9]

Fixed dial number (FDN) [Menu 9-4-4] (SIM dependent)

You can restrict outgoing calls to selected phone numbers if supported by your SIM card. The FDN capacity to add depends on the SIM card. When you enter the FDN, the PIN2 code is required.

This Function enables partial numbers (e.g. area codes) to save.

Examples:

If 3 numbers (0123, 123123, ?89012) are stored in the FDN list, then you are allowed to dial:

012345678..., 01236789..., 123123 only, 189012, and 289012.

("?" means any numbers)

If you try to make a call which is not added in the FDN list, you can't make a call and see a message "FDN Check".

• Enable


If the FDN is enabled, you can make a call by only number on a list. A phonebook function is restricted partially. You can't add entries into SIM, but can only add entries into the phone memory. Also, you can search only phonebook entries which are added into the phone memory.

• Disable

If the FDN is disabled, you can use a phonebook function.

• Number list

You can see the FDN list. You can add, edit and delete the FDN by pressing the left soft key [Options].



Note

- Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.



Change codes [Menu 9-4-5]

The **Change codes** feature lets you change your current password to a new one. You must enter the current password before you can specify a new one.

Use this to change the access codes: **Security code**, **PIN code**, **PIN2 code**

Note

- PIN: Personal Identification Number

Network settings [Menu 9-5]

The Network settings feature enables you to indicate whether the network used when roaming (outside your home area) is selected automatically, manually or preferably.

Note

- You can select a network other than your home network only if it has a valid roaming agreement with your home network.

Automatic [Menu 9-5-1]

Use this to set the phone to automatically search for and select one of the cellular networks available in your area.

The phone will default back to **Automatic** if it is switched off.

Manual [Menu 9-5-2]

If you want to select the desired network manually from a list of network. If the connection to the manually selected network is lost, the phone will sound an error tone and ask you to select a network again.



Settings [Menu 9]

Preferred [Menu 9-5-3]

You can set a list of preferred networks the handset should attempt to register with first, before attempting to register to any other networks. This list is created from the handset's predefined list of known networks.

Band selection [Menu 9-5-4]

Use this to set the network band between two choices, GSM 900/1800 or GSM1900.

GPRS settings [Menu 9-6]

GPRS (General Packet Radio Service) is a technology that allows mobile phones to be used for sending and receiving data over the mobile network. GPRS is a data bearer that enables wireless access to data network such as the Internet.

Before you can use GPRS technology;

- You need to subscribe to the GPRS service. For availability and subscription to GPRS service, contact your network operator or service provider.
- You need to save the GPRS settings for the applications used over GPRS.

GPRS Attach [Menu 9-6-1]

If you select **Power on** and you are in a network that supports GPRS, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker.

If you select **When needed**, the phone will use a GPRS connection only if you start an application or action that needs it. The GPRS connection is closed after it is no longer required by any application.



Note

- If there is no GPRS coverage and you have chosen Automatic, the phone will periodically try to establish a connection.

External device [Menu 9-6-2]

When you use Internet via GPRS by using external device, you can set the following six profiles: **Rename, APN, IP address, DNS, User ID, and Password.**

Reset settings [Menu 9-7]

You can reset your phone to its default configuration.

To do so, proceed, as follows.

1. Select the **Reset settings** menu option.
2. Enter the 4-digit security code.

Note

- The security code is preset to 0000.






Q&A

Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.


Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press .


Q How do I clear all call history?

A Press the left soft key and then   .

Q How do I view all numbers saved in the memory?

A Press the right soft key and then .

Q  does not disappear from the screen.

A Check whether you are in a service area. If you continue to see , turn off the power and wait for approximately 2 minutes before turning it back on. If there is no change, relocate to another area and check again.

Q Connection is poor or is not audible in certain areas.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

Q Connection is poor even when established.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.



Q LCD does not turn on.

A Remove and replace the battery and turn on the power. If the phone still does not turn on, charge the battery and try again.

Q An echo can be heard during connection with a certain telephone in a certain area.

A It is called 'Echo Phenomenon'. It occurs if the volume is too high or caused by special properties (semi electronic telephone exchange) of the machine on the other end.

Q The phone gets warm.

A During long calls, or if games/Internet are used for a long time, the phone may become hot. This is perfectly normal and has no effect upon the life of the product or performance.

Q The bell does not ring, or lamp or LCD blinks only.

A The phone is set to 'Vibrate' or 'Silent' in the Profiles menu. Please select 'General' or 'Loud'

Q Standby duration of the phone gradually becomes shorter.

A Batteries have a limited life. When the battery lasts for half its original time, it requires replacement. Only use authorised replacement parts.

Q Usage time of battery becomes shorter.

A If the battery time is short, it may be due to the user environment, or large volume of calls, or weak signals.



Q&A

- Q** No number is dialled when you recall a phonebook entry.
- A** Check that the numbers have been saved correctly, by using the phonebook Search feature. Resave them, if necessary.
- Q** You cannot be contacted.
- A** Is your phone switched on (📞 pressed for more than three seconds)? Are you accessing the right cellular network? Have you set an incoming call barring option?
- Q** I cannot find the lock, PIN, or PUK code, or password?
- A** The default lock code is '0000'. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.

Accessories



There are a variety of accessories available for your mobile phone. You can select these according to your personal communication requirements. Consult your local dealer for availability.



Supplied adapter

This adapter lets you charge the while at home or in the office.




Battery

Standard battery is available.



Headset

Allows hands-free operation. Includes earpiece and microphone.



Data cable kit

Connects your phone to a PC.

Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.



Technical Data

General

Product name : L1100

System : GSM 900/DCS 1800

Ambient temperatures

Max : +55°C

Min : -10°C

Memo





Memo
