



Washing Machine

OWNER'S MANUAL

MODELS : **WP-850N/WP-850G/WP-850Q**
WP-860N/WP-860G/WP-860Q
WP-850YQ/WP-860YQ/WP-855Q

Please read this manual carefully before operating your set.
Retain it for future reference.
Record model number and serial number of the set.
See the label attached on the back cover and quote this
information to your dealer when you require service.
This washing machine is designed and manufactured for
household use only.

CONTENTS

SAFETY MEASURE	3~4
PARTS IDENTIFICATION	4~5
INSTALLATION	6~7
PREPARATIONS BEFORE WASHING	8
HOW TO WASH	9
HOW TO RINSE	10~11
HOW TO SPIN	11
AFTER FINISHING	12
REFERENCE	12
CARE AND MAINTENANCE	13~14
TROUBLESHOOTING GUIDE	14
SPECIFICATIONS	15

SAFETY MEASURE

- Manufacturer is not responsible for accidents caused by the user as a result of not following the user's guide.

CAUTION

In Operation

- Do not insert the hand inside the spin dryer basket while the machine is in operation. (Do not let children climb on the machine or climb into the tub. Injury may occur.)



Installation Area

- Avoid area exposed to snow, rain, or where humidity is high. It may cause electric shock.



Switch Area

- Avoid watering on the switch area. It may cause electric shock or fire.




Spin Motor

- After continuous using spinning program 3 times, please stop spinning more than 1 hour. Otherwise the spin motor could be damaged or fired.

Volatile Material

- Do not use volatile material such as Benzene, Gasoline, bug killer. Do not leave strong alkaline substance such as bleach inside the tub. Damage on plastic surface and rubber parts may occur.

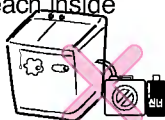

Heat

- Avoid electric heater, candle light, cigarette light, bug smoker, etc. near the machine. It may ignite or deform plastic part.



Electric Outlet

- Avoid connecting several electric devices to single outlet. It may cause fire.

Power Cord

- If the power supply cord is damaged, it must only be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.

Hard objects

- Remove pins, buckles and removable hard objects in the wash load to avoid damaging the tub before your washing



CAUTION


Hot water

- Avoid using hot water over 50°C. It may deform plastic parts or cause malfunction.




Installation

- Install the washing machine on a horizontal support. Otherwise, it may cause vibration and noise.

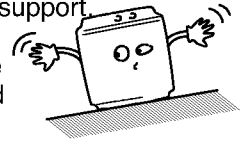

Power Cord


- Do not treat the power supply cord with your wet hand.

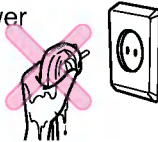

- Plug out the power supply cord. When cleaning or not using the washing machine for a long time.



PARTS IDENTIFICATION

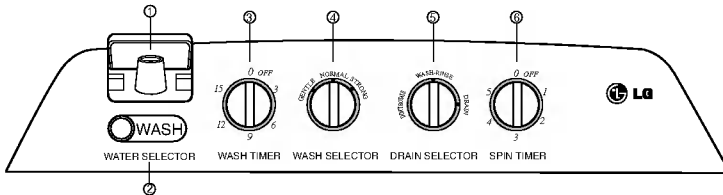

1. Water Supply Inlet

Connect here with the inlet hose from the water faucet to feed water to the tub.

2. Water Selector

Select "WASH" to supply water for washing and rinsing and "SPIN" for spin shower rinse.

3. Wash Timer

Select the desired time for washing or rinsing.

4. Wash Selector

Set the selector to "GENTLE", "NORMAL", "STRONG" according to kinds and quantity of the laundry.

5. Drain Selector

Select "WASH-RINSE" for washing and rinsing and "DRAIN" to drain the water out of the tub.


6. Spin Timer

Select the desired time for spinning. The max. limit is 5 min. Don't rotate the knob more than prescribed limit.

※ Buzzer (Option : Inside)


It is electrically operated to facilitate you to know the completion of washing cycle.

PARTS IDENTIFICATION

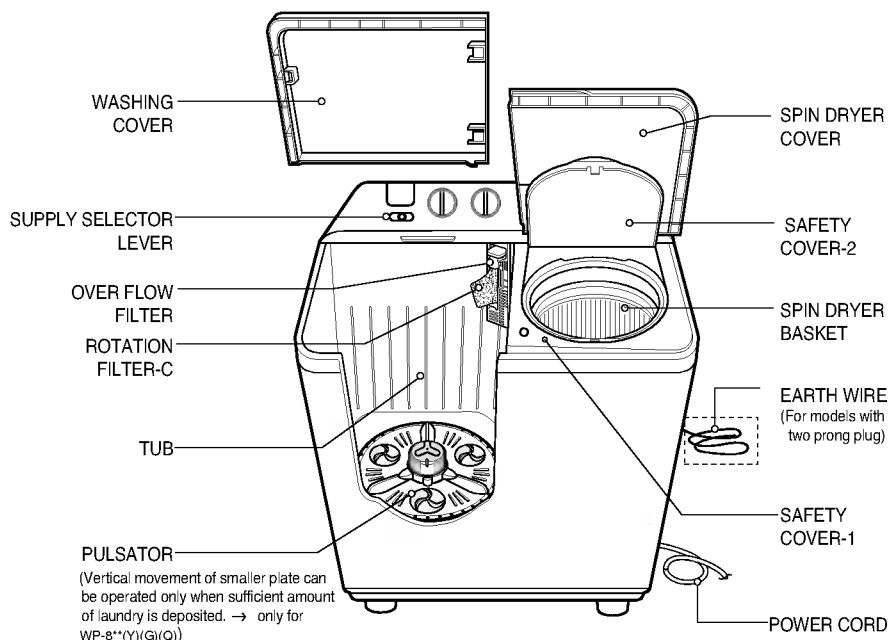

Accessories

Safety Cover



Drain Hose Asm



OPTION

Wheel Asm × 4



OPTION




Adjustable Leg × 2

INSTALLATION


Installation area

- Select flat and firm floor.
- Incorrect installation may cause severe noise and break down.
- Maintain more than 10cm between the side of drain hose and the wall.

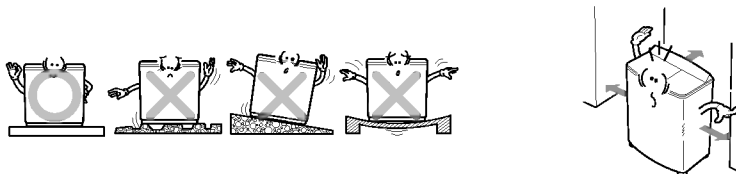



Leveling the machine (Option)

- Lift the front of the washing machine and twist the Adjustable Leg until the washing machine is placed evenly.
- If the Adjustable Leg is too short, use the Level Adjusting Plates as shown.






Connecting the drain hose

- Connect the drain hose to the outlet of the plunger valve located at the back side of the washing machine.
- Push the clamp toward the body of the washing machine as shown in the figure.




Notes :

- Be sure to re-route the hose so that it is not kinked or has sharp bends which will prevent proper drainage.
- The level of the drain should be slightly lower than the lowest part of the washing machine in order to ensure proper and complete drainage.

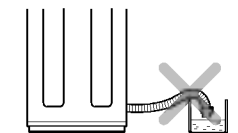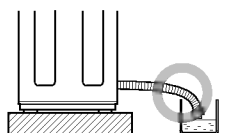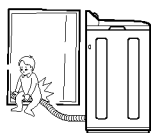

Connecting the earth wire

- Install the earth wire to prevent short-circuit due to leaking current and electric shock.
- It is attached at the back of the washer. Connect it to the metal water pipe. If the water pipe is made of plastic, it does not have the earth effect.

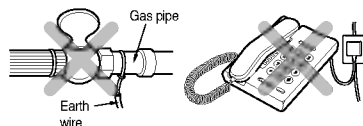


- Never connect the earth wire to the gas pipe, lightning arrester, telephone connector, etc.


※ WARNING-THE APPLIANCE WITH TWO-PRONGED PLUG MUST BE GROUNDED.

Other earthing method


- After connecting the earth wire to the earth copper plate, bury it at least 75cm deep under the wet ground.

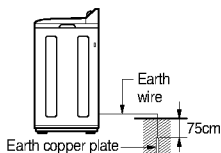

- Connect to the earthing-only outlet.

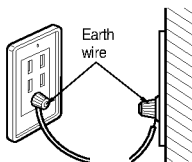


- When installing it in an area where earthing is not possible, purchase a short-circuit breaker (15mA at operation, 7.5mA at idle) and connect it to the outlet.

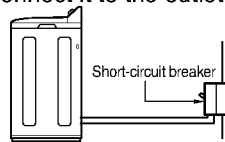




Connecting the power plug

- Insert the power plug into the outlet.
- Before connecting the power plug, check if the voltage setting of the washer matches the outlet voltage.
- If AC outlet with ground terminal is used, grounding is not needed. If not, never forget earthing (earthing method above).
- The appliance must be positioned so that the plug is accessible.

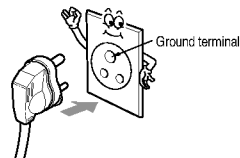

Voltage Change (only for dual voltage)

This washer is assembled for 220V, but can be changed from 220V to 110V(or 127V). Check your electrical source and follow the diagram below to convert voltage.

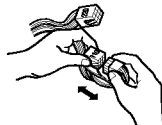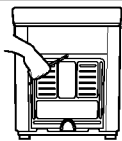


PREPARATIONS BEFORE WASHING

Preparation

- Connect the water supply hose to the water supply inlet.

- Set the supply selector lever to "WASH" for washing and rinsing, to "SPIN" for interim spin rinse.

• Note: The water selector lever should not be placed near the center (as shown in Fig (A)) otherwise water flows to the wash and spin tub simultaneously.)



(Fig A)

- Inlet hose

- Connect the power cord to the electrical outlet.

- Drain hose


Lay down the drain hose. Keep the drain hose flipped down while washing is in process.

Before washing


- 1 Check the washing instructions labels on the clothing to be washing



- 2 Remove any objects from the pockets of the clothing. Object left in the pockets may damage the clothing or washing machine (especially cause clogging of the drain hose).

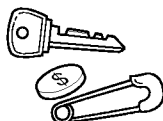

- 3 After separating an oiled or dyed laundry, wash.

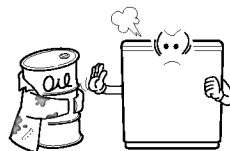

HOW TO WASH


- 1** Set the drain selector to "WASH · RINSE" position.




- 2** Set the water selector to "WASH"



- 3** Open the water tap and fill water in the wash tub about halfway to the desired water level.

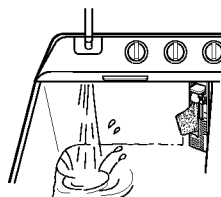

- 4** Put the appropriate amount of detergent and the laundry into the wash tub. And add water to the desired water level.

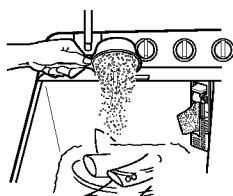


- Refer to TABLE 2 in REFERENCE on page 12.

- 5** Select the wash selector to "GENTLE", "NORMAL", "STRONG" according to kinds and quantity of the laundry



- Refer to TABLE 2 in REFERENCE on page 12

- 6** Set the desired wash time.

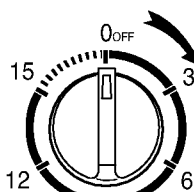

- Refer to TABLE 2 in REFERENCE on page 12 for information on how to select the appropriate washing time.

- 7** When washing is finished, select the drain selector to "DRAIN" position and drain the water out.



- 8** Spinning in the spin dryer basket.

- Put the laundry into the spin dryer basket.
- Put the laundry down lightly.
- Place the safety cover horizontally on the laundry.
- Set the desired spin time with the spin timer.




HOW TO RINSE

Interim spin rinse

- Interim spin rinse prior to regular rinsing will remove sudsy water from the laundry and improve rinsing efficiency.

1 After washing.

- Put the laundry into the spin dryer basket.
- Place the safety cover horizontally on the laundry.

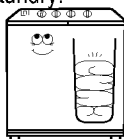


2 Set the water selector to "SPIN"




3 Allow the water to flow appropriately.

4 Turn off the water supply, close the safety cover-2 and spin dryer cover

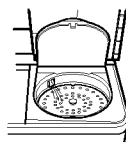

5 Set the desired spin time with the spin timer

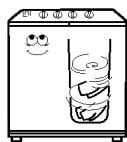

6 After spinning.
• Put the laundry into the wash tub and rinse.




Economical water supply rinse

- This course allows you to save water as this course is to rinse after feeding appropriate water to the tub.


1 Set the drain selector to "WASH RINSE" position and feed appropriate water to the tub.



2 Set the rinse time with the wash timer

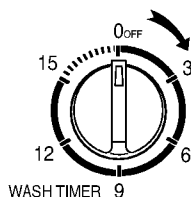

3 Put the laundry into the spin dryer basket and set the spin time with the spin timer.

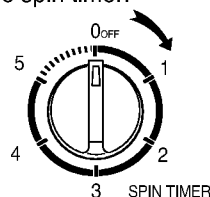


4 Put the laundry into the wash tub and repeat 1 to 3 course.

Continuous water supply rinse

- This course is to rinse while feeding water continuously.


- 1 Set the drain selector to "WASH • RINSE" position.

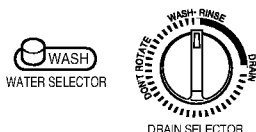

- 2 Put the laundry into the wash tub and open the water faucet.





- 3 Set the rinse time with the wash timer and feed water continuously.

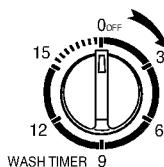

HOW TO SPIN

1. Put the laundry evenly into the spin dryer basket.
2. Put the laundry down lightly.
3. Place the safety cover horizontally on the top of the laundry.
4. Close the spin dryer cover.
5. Set the spin timer according to the following table.

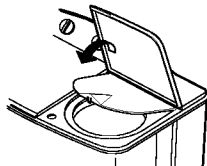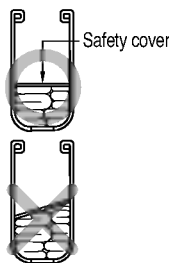


Spin time guide

Type of clothing	Spin time
Thin fabrics (synthetic fabrics, mixed fabrics)	1 minute
Sweaters (synthetic fabrics)	1~3 minutes
Cotton underwear	3~5 minutes
Sheets, towels	5 minutes

- If the spin dryer basket is off-balance and vibrates excessively, stop the spinning, rearrange the clothes evenly, and then resume spinning.
- Should spinning fail to stop within 15 seconds after the spin dryer cover is opened, the brake is out of order. Immediately stop using the machine and request repair service.

AFTER FINISHING

1. Remove the laundry from the spin dryer basket and close the spin dryer cover,
2. If there is water in the wash tub, set the drain selector to "DRAIN" in order to drain it out.
3. Disconnect the power cord from the electrical outlet.
4. Clean the washing machine. (Refer to CARE AND MAINTENANCE on page 13~14.)

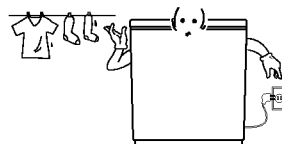

REFERENCE

TABLE 1. weight guide for clothes

Type of clothing	Type of fabric	Weight per piece
Under shirt	Cotton	150 g (53oz)
Handkerchief	Cotton	50 g (1.8oz)
Bath towel	Cotton	300 g (10.6oz)
Shirt	Mixed fabric	200 g (7.1oz)
Socks (1 pair)	Mixed fabric	50 g (1.8oz)
Pajama (shirt and pants)	Cotton	500g(17.6oz)
Winter undershirt	Cotton	600g(21.2oz)
Workclothes	Mixed fabric	800g(28.2oz)
Blouse	Mixed fabric	200g(7.1oz)

TABLE 2. GUIDE FOR WASHING

Type of fabric	Wash selector	Wash time	Amount of laundry	Water level	Amount of water	Amount of detergent
Synthetics, Silk, Woolen, Knits	GENTLE	2~5 min.	0.5~4.0 kg (1.1~8.8lb)	L	46 l	42~46 g (1.5~1.6 oz)
			4.0~4.7 kg (8.8~10.4lb)	M	54 l	51~55 g (1.8~1.9 oz)
			4.7~5.5 kg (10.4~12.1lb)	H	61 l	56~60 g (2.0~2.1oz)
Cotton, Linen	NORMAL	5~10 min.	0.5~4.0 kg (1.1~8.8lb)	L	46 l	42~46 g (1.5~1.6 oz)
			4.0~4.7 kg (8.8~10.4lb)	M	54 l	51~55 g (1.8~1.9 oz)
			4.7~5.5 kg (10.4~12.1lb)	H	61 l	56~60 g (2.0~2.1oz)
Very soiled cotton and linen	STRONG	10~15 min.	0.5~4.0 kg (1.1~8.8lb)	L	46 l	42~46 g (1.5~1.6 oz)
			4.0~4.7 kg (8.8~10.4lb)	M	54 l	51~55 g (1.8~1.9 oz)
			4.7~5.5 kg (10.4~12.1lb)	H	61 l	56~60 g (2.0~2.1oz)

Note : • Amount of laundry is a weight of dry laundry.
• Detergent is a general synthetic detergent.

CARE AND MAINTENANCE

- Be sure to disconnect the power cord from the electric outlet before starting care and maintenance.


Washing machine

- If the washing machine itself becomes dirty.
- The washing machine can be cleaned with a mild liquid detergent. Never use abrasive cleanser or chemicals such as benzene or thinner to clean the washing machine, because these materials will damage both the painted surfaces and the plastic parts.

Pulsator

- If a button or some other object gets caught in the pulsator.

1. Take out the pulsator cap with "-" type driver.
(only for WP-8**(Y)(G)(Q))
2. Use a screwdriver to loosen the screw in the center of the pulsator, and lift the pulsator straight up in order to remove the button or other object.
3. Replace the pulsator and tighten the screw.
4. Replace the pulsator cap.

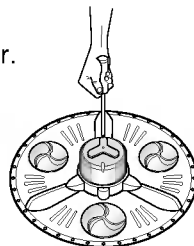

Overflow filter & Rotation filter-C


1 • Lift up the area ① of the over flow filter. • Take out the rotation filter-C by pulling in direction shown.	2 • Pull the overflow filter forward from the wash tub in the direction of the arrow.	3 • Turn the net over and rinse in water
4 • Use a brush or your hand to remove all of the lints which has adhered to the overflow filter.	5 • Insert the over flow filter back into the wash tub.	6 • Insert the rotation filter-C back into the overflow filter.

- If only rotation filter-C need washing, proceed the process 1 → 3 → 6 on the upper figure.

CARE AND MAINTENANCE

Spin dryer basket

- If clothing becomes trapped between the spin dryer basket and the spin tub.
 1. Unscrew the screw at the left corner in the safety cover-1.
 2. Take hold of the front of the safety cover-1.
 3. Pull the tub by the other hand.
 4. Pull the safety cover-1 upward.
 5. Remove the article of clothing.
 6. Close the safety cover-1, pressing down on it so that it fits securely into the spin tub.
 7. Tighten the screw at the left corner in the safety cover-1.

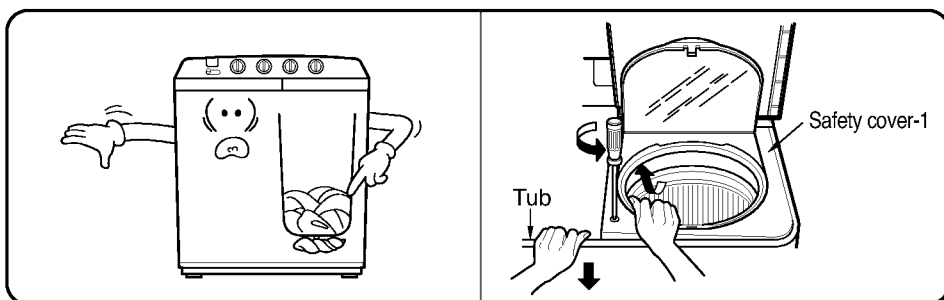


TROUBLESHOOTING GUIDE

Before Requesting Service

Type of clothing	Checking point
Motor does not operate,	• Is the power cord firmly plugged in? • Is the timer turned to a suitable point except "OFF"?
Spin dryer basket does not operate.	• Is there any cloth dropped between the basket and tub? • Is the spin dryer cover closed? • Is the laundry gathered to one side of the spin dryer basket?
No draining	• Is the lint stuck to the plunger valve? • Is the end of the drain hose guide located at an exceed height?

SPECIFICATIONS

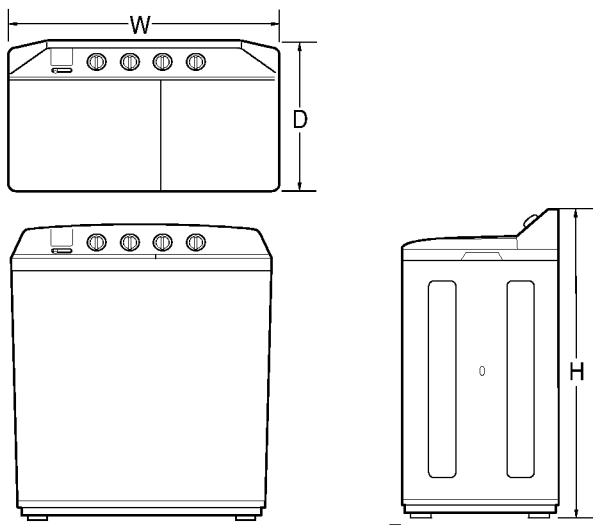

Power source	On SPECIFICATION LABEL
Water level	H : 61ℓ, M : 54ℓ, L : 46ℓ
Water Pressure	Less than 100kPa (1kgt/cm ²)
Dimensions	WP-85*(Y)(G)(Q) : 820 X 482 X 983mm. (W X D X H)
	WP-86*(Y)(G)(Q) : 820 X 482 X 995mm. (W X D X H)
Weight (Net)	31.5kg

- How to read the manufactured month and year from the label stuck on the back of the product.

EX) 9 1 1 T W 0 0 0 0 1

Serial No.

Product code

Month

Year (The last digit to year)

- Main service parts list : Refer to below listed parts name when you need service call.

Part name	Remark
- WASH MOTOR	90W
- SPIN MOTOR	40W
- S·D·BASKET	PLASTIC
- CYCLE TIMER ASM	
- CAPACITOR	
- GEAR CASE ASM	

NOTE





جهاز الغسالة

دليل المستخدم

بمضخة التصريف

الموديل : دبليو بي - ٨٥٠ (إن) (جي) (كيو)
الموديل : دبليو بي - ٨٦٠ (إن) (جي) (كيو)
الموديل : دبليو بي - ٨٥٥ كيو

MODELS : WP-850N/WP-850G/WP-850Q

WP-860N/WP-860G/WP-860Q

WP-850YN/WP-860YN/WP-855Q

الرجاء قراءة إرشادات التشغيل بعناية وبصورة
كاملة قبل تركيب وتشغيل الغسالة الخاصة بك.
رقم وموديل الغسالة مسجل على الرقعة الخلفية.
راجع الرقعة الموجودة على الغطاء الخلفي وأعط هذه
المعلومات لعميلك عندما تتطلب الصيانة
تم تصميم وصنع هذه الغسالة من أجل الاستخدام
المنزلي فقط.



المحتويات

٤~٣	توجيهات خاصة بالسلامة والتحمل
٥~٤	التعريف بالأجزاء
٧~٦	التركيب
٨	الاستعدادات قبل الغسيل
٩	طريقة الغسيل
١١~١٠	طريقة الشطف
١١	طريقة التجفيف
١٢	بعد الانتهاء
١٢	المراجع
١٤~١٣	العناية والصيانة
١٤	دليل تحرى الخلل واصلاحه
١٥	المواصفات

تحذيرات من أجل السلامة

- لن تكون الشركة الصانعة مسؤولة عن أية حوادث يسببها المستخدم نتيجة لعدم إتباعه الإرشادات الواردة في دليل المستخدم

تنبيه !

في حالة تشغيل

- لا تدخل يدك في داخل سلة التجفيف عندما تكون الغسالة (لا تترك الاطفال تتسلقون الغسالة أو الصعود الى سلة التجفيف لكي لا يصابون بجرح)

منطقة التركيب

- تجنب تركيب الغسالة في مكان معرض لسقوط الثلج أو المطر والرطوبة العالية لان ذلك يؤدي إلى صدمة كهربائية.



منطقة المفتاح الكهربائي

- تجنب رش الماء فوق المفتاح الكهربائي. الأمر قد يؤدي إلى صدمة كهربائية أو حريق.




المحرك الدوار

- بعد استخدام برنامج التجفيف المستمر ٣ مرات، يرجى إيقاف التجفيف أكثر من ١ ساعة، وإلا قد يحدث حريق في المحرك الدوار.


الحرارة

- تجنب أجهزة التدفئة الكهربائية، أو ضوء الشموع أو ضوء الولاعات أو الدخان الطارد للحشرات ... الخ بالقرب من الجهاز لان ذلك قد يؤدي إلى إشعال أو تشويه الجزء البلاستيكي.

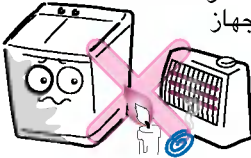

المواد المتطايرة

- لا تستعمل مواد متطايرة مثل البنزين والغازولين أو مبيد الحشرات. ولا تضع مواد قلبية قوية مثل محلول التبييض في داخل الغسالة تجنباً لحدوث تلف.

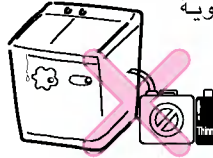

مخرج التيار

- تجنب توصيل الأجهزة الكهربائية العديدة إلى مخرج التيار الواحد. الأمر قد يؤدي إلى إحداث حريق.


الأشياء الصلبة

- اخرج الدبابيس، الإبريمات والأشياء الصلبة القابلة للسحب قبل وضع الملابس في حوض الغسيل لتجنب ضرر في الملابس.

كبل الطاقة

- إذا تعرض كبل امداد الطاقة للتلحق، يجب استبداله من قبل المنتج أو مركز الخدمات له أو الشخص المؤهل المشيل من أجل تجنب خطر.

- لا تمسك كبل الكهرباء بيدك وهي مبقلة.

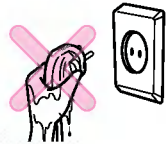



تحذير !



التركيب


- ركب جهاز الغسالة على أرضية مستوية ولا تصدر ضوضاء ويحدث اهتزاز.



الماء الساخن

- تجنب استخدام الماء الساخن في غسالتك. هذا قد يؤدي إلى حدوث تشويه في الأجزاء البلاستيكية أو حدوث عطل في الجهاز.

تعليمات الأجزاء

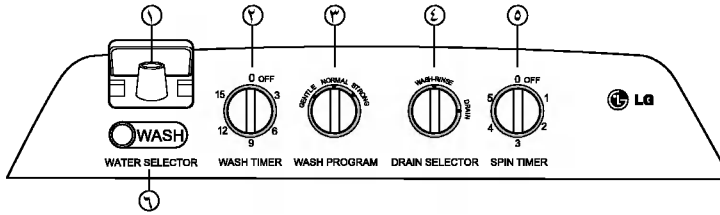

٥. مؤقت التجفيف
اختر الوقت المطلوب للتجفيف. أقصى حد للوقت ٥ دقائق. ولا تدور هذا المؤقت أكثر من الحد الأقصى.

٦. مفتاح اختيار الماء
اختر "غسيل" لتزويد الماء للغسيل والشطف واختر "التدوير" للشطف الدوار بالرش المائي.
* صفارة (اختيارية: من الداخل)
هذه تعمل أوتوماتيكيا لكي تعرفك اكتمال دوران الغسيل.


١. مدخل تزويد الماء
صل خرطوم تزويد الماء من هذا المدخل إلى حنفية الماء لتزويد الحوض بالماء.

٢. مؤقت الغسيل
اختر الوقت المطلوب للغسيل أو الشطف.


٣. مفتاح برنامج الغسيل
اضبط هذا المفتاح على "خفيف"، "عادي"، و"ثقيل" وفقا لنوع الملابس وكميتها.

٤. مفتاح اختيار التصريف
اختر "غسيل/شطف" للغسيل والشطف واختر "تصريف" لترصيف الماء من الحوض.

تعريف الأجزاء

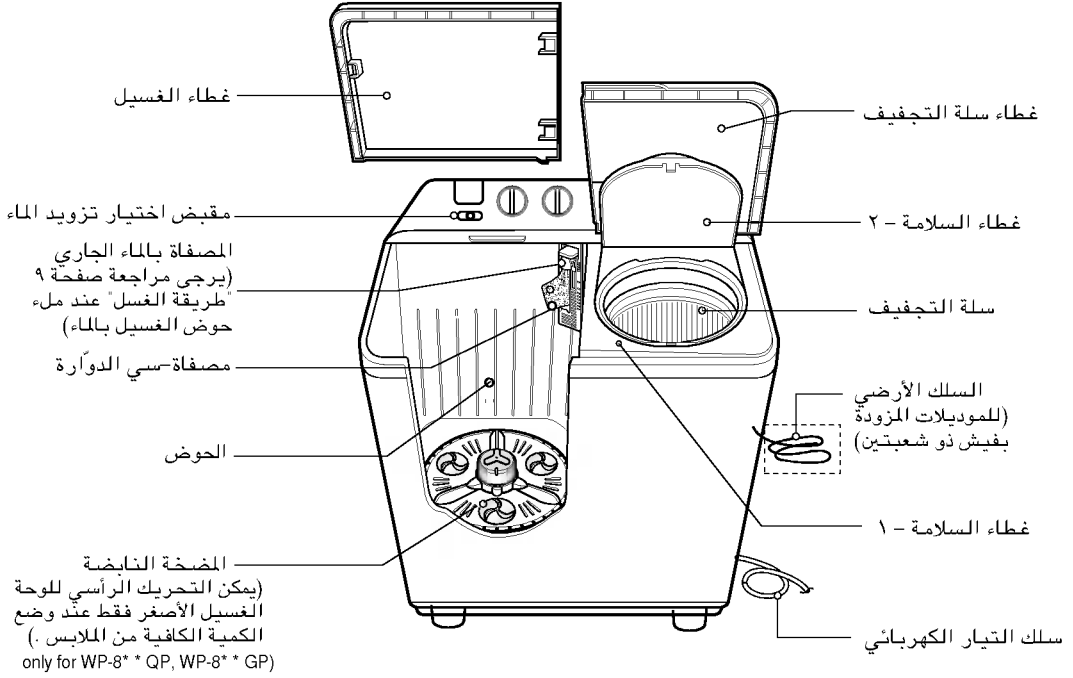


التابع

اختياري	اختياري	خرطوم التصريف	غطاء السلامة
 رجل قابل للتعديل ٢ ×	 مجموعة عجلة ٤ × عمود عجلة ٤ ×		

التركيب

منطقة التركيب

- اترك مسافة أكثر من ١٠ سم بين جانب خرطوم التصريف والحائط.
- لا بد من عدم سد فتحات التهوية بالسجادة.

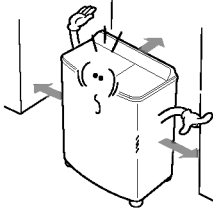


- اختر أرضية مستوية وثابتة.
- التركيب غير الصحيح ربما يؤدي الى احداث ضجيج شديد وتعطل الجهاز.




استواء الغسالة (اختياري)

- ارفع أمام جهاز الغسالة ودورّ الرجل القابل للتعديل حتى يصبح وضع الغسالة متساويا.
- اذا كان الرجل القابل للتعديل قصيرا جدا، استخدم صفيحة قابلة لتعديل الاستواء كما هو مبين في الشكل.




توصيل خرطوم التصريف

- اضغط الملزم نحو جسم جهاز الغسالة كما هو موضح في الشكل.



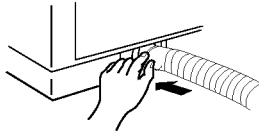


- صل خرطوم التصريف الى صمام مخرج التصريف الموجود في خلف اللوحة الجانبية من جهاز الغسالة.




تحويل الفولتية (بالنسبة للفولتية المزدوجة فقط)

يتم تجميع هذا الجهاز على ٢٢٠ فولت ، لكن يمكنك تحويل الفولتية من ٢٢٠ فولت الى ١١٠ فولت (أو ١٢٧ فولت) . تأكد من مصدر الطاقة الكهربائية واتبع الأشكال المبينة أدناه لتحويل الفولتية.

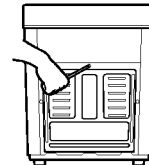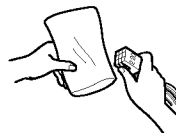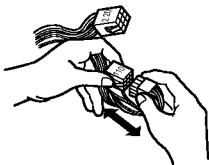

توصيل سلك التأريض

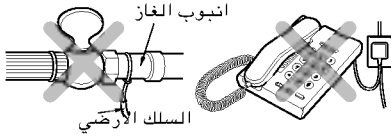


- ركب السلك الأرضي لمنع حدوث قطع كهربائي نتيجة لتسرب التيار والصدمة الكهربائية.
- السلك الأرضي مركب في ظهر الغسالة. أوصل السلك إلى أنبوب الماء المعدني. وإذا كان أنبوب الماء مصنوعاً من البلاستيك فليس لديه تأثير أرضي.
- لا توصل السلك الأرضي مطلقاً إلى أنبوب الغاز أو واقية الصواعق أو وصلة التلفون الخ.


✳ تحذير - أوصل السلك الأرضي أولاً قبل توصيل قابس الطاقة إلى مخرج التيار في الجدار.

طريقة تأريض أخرى


• عند تركيب السلك في أرض غير قابلة للتأريض قم بشراء قاطع الدائرة الكهربائية (١٥ ملي أمبير غير مشغل) وأوصله إلى مأخذ التيار.

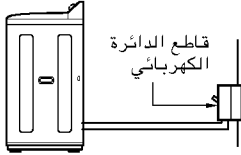


• أوصل إلى مأخذ التيار الأرضي الوحيد.

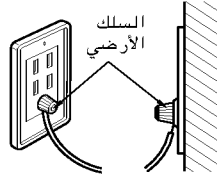

• بعد توصيل السلك الأرضي إلى اللوح النحاسي الأرضي، ادفنه بعمق لا يقل عن ٧٥ سم تحت الأرض المبلولة.

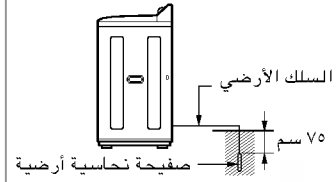


توصيل قابس الطاقة



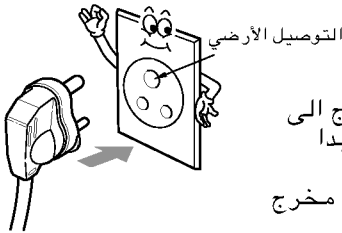


- أوصل قابس الطاقة إلى مأخذ التيار.
- قبل توصيل قابس الطاقة، أفحص إذا كان ضبط فولتية الغسالة يتطابق مع فولتية مخرج التيار.
- إذا استخدم مخرج التيار المتردد بالطرف الأرضي، لا يحتاج إلى التوصيل الأرضي. وإذا لم يكن، لا تنس التوصيل الأرضي أبداً (كيفية التوصيل الأرضي المذكور أدناه).
- لا بد من وضع الجهاز في المكان الذي يصل قابس الجهاز إلى مخرج التيار.

الإجراءات الاستعدادية قبل الغسيل





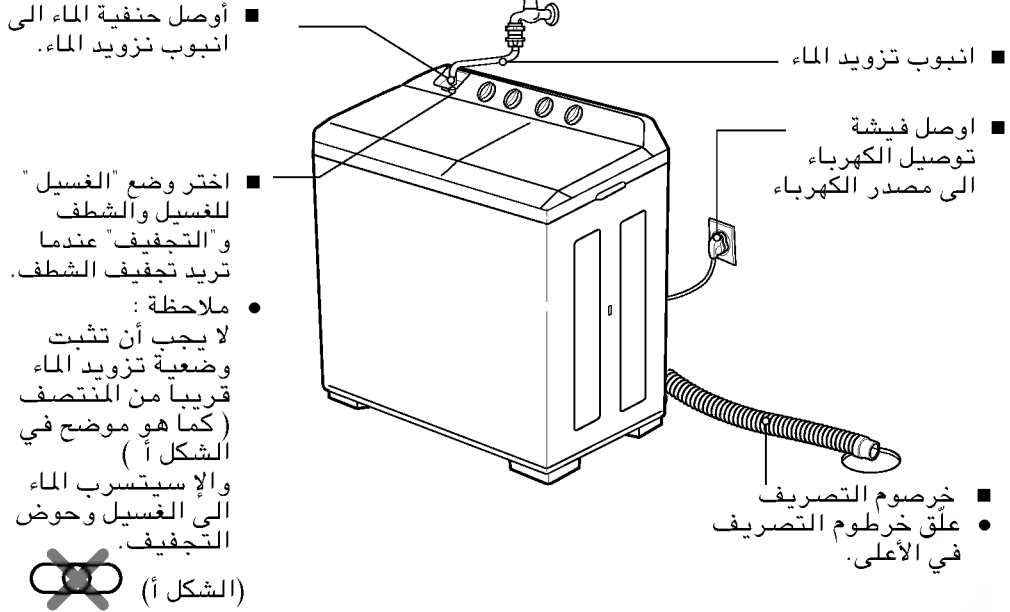


قبل الشروع في الغسل

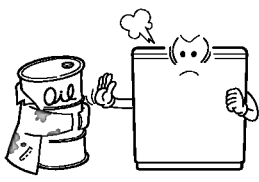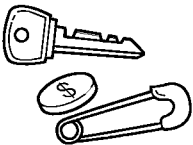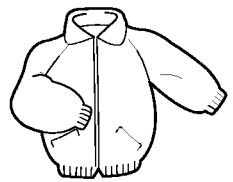٣ اغسل بعد تفريز الملابس المطلوبة من الملابس بالزيت أو المصبوغة. 	٢ اخرج الأشياء الموجودة في جيوب الملابس. الأشياء المتروكة في الجيوب ربما احدثت تلفاً في الملابس أو الغسالة (هذا قد يؤدي الى انسداد خرطوم التصريف). 	١ اقرأ تعليمات الغسيل المكتوبة على البطاقات المصفاة على الملابس المعدة للغسيل. 
---	---	--

● من أجل الغسيل الأفضل لكمية كبيرة من الملابس، من الموصى به وضع الملابس الشديدة الوسخ أولاً.



طريقة الغسل

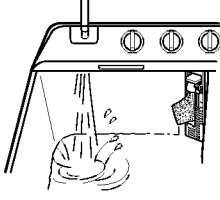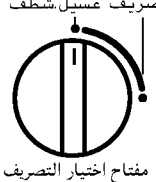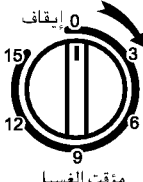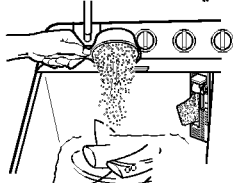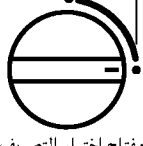٣ افتح حنفية الماء واملء حوض الغسيل بالماء حتى يصل الى المستوى المطلوب الموضوع بالعلامات 	٢ ضع مفتاح اختيار الماء في حوض الغسيل . 	١ اضبط مفتاح اختيار التصريف على وضعية " صفر (إيقاف) " . 
٦ اضبط وقت الغسيل المرغوب فيه .  مؤقت الغسيل • راجع الجدول ٢ في المرجع في صفحة ١٢ لمزيد من المعلومات الخاصة بكيفية اختيار وقت الغسل المناسب.	٥ اضبط مفتاح برنامج الغسيل على وضعيات "خفيف" "عادي" "ثقيل" وفقا لنوع وكمية من الملابس ودرجة الوسخ.  مفتاح برنامج الغسيل • راجع الجدول ٢ في المرجع في صفحة ١٢.	٤ ضع كمية مناسبة من المنظفات والملابس في حوض الغسيل. واضف الماء حتى يصل الى مستوى الماء المرغوب فيه.  • راجع الجدول ٢ في المرجع في صفحة ٢٢.
٨ الدوران في سلة التجفيف. • انقل ملابس الغسيل إلى سلة التجفيف. • ضع الملابس في قعد حوض الغسيل بخفة. • ضع غطاء السلامة افقيا فوق الغسيل. • اضبط وقت الدوران مع مؤقت الدوران. 	٧ عند الانتهاء من الغسل، اضبط مفتاح اختيار التصريف على موضع "اصرف" لتصريف الماء تصريف غسيل شطف الى الخارج.  مفتاح اختيار التصريف	

كيفية الشطف




الشطف الدوار المؤقت

■ هذا النظام يتيح لك التوفير في الوقت. الماء اللازم لوضع الماء في السلة الدوارة وتشغيل الدوران المؤقت مجدداً بعد عملية الدوران.

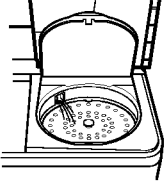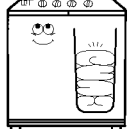٣ افتح حنفية الماء وزود السلة الدوارة بالماء. ٤ افقل حنفية الماء بعد التزويد بالماء اللازم. 	٢ ضع مفتاح تزويد الماء "التجفيف".  مفتاح اختيار الماء	١ بعد الغسيل. • ضع الغسيل في السلة الدوارة. • ضع غطاء السلامة على الملابس بشكل افقي. 
٦ بعد الدوران، • ضع الغسيل في الحوض واشطفه. 	٥ اضغط مؤقت الدوران بواسطة مؤقت الدوران. 	




الشطف الاقتصادي لإمداد الماء

■ تسمح لك هذه الدورة أن يقتصد في الماء لأن هذه الدورة خاصة بالشطف بعد ملء كمية مناسبة من الماء الى الحوض.

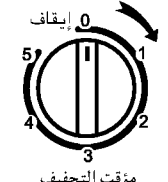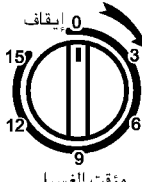
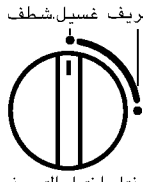
٣ ضع الغسيل في سلة حوض التجفيف واضبط الدوران مع ساعة توقيت الدوران.  مؤقت التجفيف	٢ أضبط وقت الشطف مع ساعة توقيت الغسل.  مؤقت الغسيل	١ أضبط منتقى التصريف على موضع "اغسل - اظطف" واوثا كمية كافية من الماء الى الحوض. تصريف غسيل شطف  مفتاح اختيار التصريف
٤ ضع الملابس في حوض الغسيل وكرر الدوران من ١ وحتى ٣.		

شطف إمداد الماء المستمر

■ تتم عملية الشطف في هذه الدورة مع إمداد الماء بصورة مستمرة.

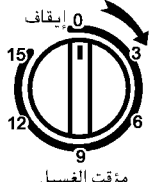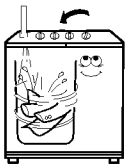٣ اضبط وقت الشطف مع ساعة توقيت الغسيل واوصل إمداد الماء بصورة مستمرة.  مؤقت الغسيل	٢ ضع الغسيل في حوض الغسيل وأفتح حنفية الماء. 	١ اضبط منقّي التصريف على موضع "اغسل - شطف".  تصريف غسيل شطف مفتاح اختيار غسيل مفتاح اختيار
---	---	--

كيفية التجفيف

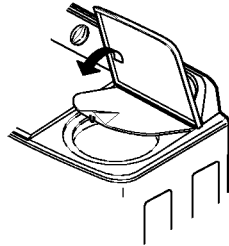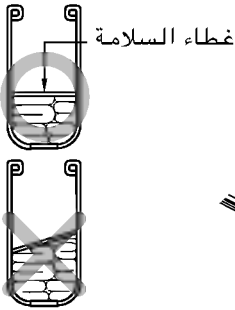

١. ضع الغسيل بهدوء في سلة اسطوانة التجفيف.
٢. ضع الملابس في قعد حوض الغسيل بخفة.
٣. ضع غطاء السلامة أفقياً فوق الغسيل.
٤. أقفل غطاء اسطوانة التجفيف.
٥. ضع مؤشروقت التجفيف على الوضع المناسب وقم بالدوران.

توجيه خاص بوقت التجفيف

نوع الملابس	وقت التجفيف
الأقمشة الخفيفة، الأقمشة الاصطناعية، الأقمشة المختلطة	١ دقيقة
البلوفران الصوفية (الكنزات) (الأقمشة الاصطناعية)	١ - ٣ دقائق
الملابس الداخلية القطنية	٣ - ٥ دقائق
الشراشف ، المناشف	٥ دقائق

- إذا لم يتم وضع الملابس المتوازن في سلة التجفيف، يحدث اهتزاز للغاية، وفي هذه الحالة أوقف التجفيف واعد وضع الملابس متساوياً، ثم قم بالتجفيف مرة أخرى.
- إذا فشلت في إيقاف التجفيف في غضون ١٥ ثانية بعد فتح غطاء سلة التجفيف، الفرمة عاطلة. في هذه الحالة أوقف الجهاز عن العمل واطلب الخدمات من مركز الخدمات فوراً.

بعد الانتهاء



١. اخرج الغسيل من سلة التجفيف ثم أغلق غطاء التجفيف.
٢. إذا كان هناك ماء متبقى في أنبوب التصريف ضع المؤشر على وضعية "التصريف" لتصريفه الى الخارج ثم اعد ضبط المفتاح على وضعية "الإيقاف (OFF)".
٣. قم بفصل كبل التوصيل عن مصدر الطاقة الكهربائية
٤. نظف الغسالة (مراجعة العناية والصيانة صفحة رقم ١٣ - ١٤).
٥. تأكد من أن مفتاح اختيار التصريف مضبوط على وضع "Off (إيقاف)" بعد استخدام الجهاز.

المرجع

جدول ١ - دليل الوزن للملابس

نوع الملابس	نوع القماش	وزن كل قطعة
قميص داخلي	قطن	١٥٠ جرام (٥,٣ أونس)
منديل	قطن	٥٠ جرام (١,٨ أونس)
منشفة حمام	قطن	٣٠٠ جرام (١٠,٦ أونس)
قميص	قماش مختلط	٢٠٠ جرام (٧,١ أونس)
جوارب قصيرة (زوج)	قماش مختلط	٥٠ جرام (١,٨ أونس)
بحاما (قميص وبنطلون)	قطن	٥٠٠ جرام (١٧,٦ أونس)
قميص داخلي شتوي	قطن	٦٠٠ جرام (٢١,٢ أونس)
ملابس العمل	قماش مختلط	٨٠٠ جرام (٢٨,٢ أونس)
بلوزة	قماش مختلط	٢٠٠ جرام (٧,١ أونس)

جدول ٢ - دليل الغسيل

نوع القماش	مفتاح اختيار الغسيل	وقت الغسيل	كمية الملابس	مستوى الماء	كمية الماء	كمية مادة التنظيف
اصطناعية، حرير، صوفية، محبوكة	خفيف	٥-٢٠ دقائق	٢٠٠-٢٠٠,٥ كجم	صغير	٤٦ لتر	٤٦ جرام
			٣-٢ كجم	منخفض	٥٤ لتر	٥٤ جرام
			٣ كجم ~	متوسط	٦١ لتر	٦١ جرام
قطن، كتان	عادي	١٠-٥٠ دقائق	٢٠٠-٢٠٠,٥ كجم	صغير	٤٦ لتر	٤٦ جرام
			٣-٢ كجم	منخفض	٥٤ لتر	٥٤ جرام
			٣ كجم ~	متوسط	٦١ لتر	٦١ جرام
قطن وكتان ثقيل، الوسخ	ثقل	١٥-١٠٠ دقائق	٢٠٠-٢٠٠,٥ كجم	صغير	٤٦ لتر	٤٦ جرام
			٣-٢ كجم	منخفض	٥٤ لتر	٥٤ جرام
			٣ كجم ~	متوسط	٦١ لتر	٦١ جرام

- ملاحظات :
- كمية الملابس تعتبر وزن الملابس المجففة.
 - مادة التنظيف مادة تنظيف اصطناعية عامة.
 - من أجل غسيل أفضل لكمية كبيرة من الملابس، من الموصى به استخدام ٣٠٠ ملليجرام من مادة التنظيف. لكن إذا حدثت رغبة كثيرة جداً، اخفض كمية مادة التنظيف.


العناية والصيانة

- تأكد من فصل سلك الكهرباء عن مأخذ التيار الكهربائي قبل الشروع في العناية والصيانة.

تنظيف جهاز الغسالة

- إذا أصبحت الغسالة الكهربائية ذاتها متسخة.
- يمكن تنظيف الغسالة الكهربائية بمنظف سائل خفيف. لا تستعمل مواد التنظيف التي تخدش الغسالة اطلاقاً أو الكيماويات مثل البنزين أو مرقق القوام بهدف تنظيف الغسالة الكهربائية نظراً لأن هذه المواد تؤدي إلى إتلاف كل من السطح المطلي والأجزاء البلاستيكية.

المضخة النابضة

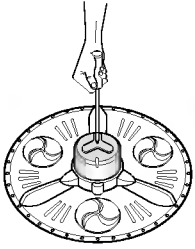

- إذا انحبس زر أو أي شيء آخر في اسطوانة مضخة الغسل.
- اسحب غطاء كامة مجموعة المضخة النابضة بواسطة مفك من نوع " - " .
(For only WP-881QP, WP-850QP & WP-860QP)
- استعمل مفك براغي لإرخاء اللولب في وسط المضخة النابضة ثم ارفع المضخة النابضة إلى أعلى مباشرة من أجل إبعاد الزر أو الشيء الآخر.
- اعد المضخة النابضة إلى مكانها وشد اللولب بإحكام.
- اعد غطاء مجموعة المضخة النابضة إلى مكانه بدفعه إلى الأسفل بالقوة.

مصفاة بالماء الجاري ومصفاة-سي الدوارة


٣ قلب الشبكة واشطفها بالماء.	٢ - ارفع جزء ① من المصفاة بالماء الجاري. - أخرج مصفاة - سي الدوارة بسحبها باتجاه مبين في الشكل.	١ اسحب المصفاة بالماء الجاري من حوض الغسيل إلى الأمام باتجاه السهم.
٦ اعد مصفاة - سي الدوارة إلى مكانها في المصفاة بالماء الجاري.	٥ اعد المصفاة بالماء الجاري إلى مكانها في حوض الغسيل.	٤ أزل جميع النسيل والثفل اللاصق بالمصفاة بالماء الجاري باستخدام فرشاة أو يد.

- إذا احتجت إلى غسيل مصفاة-سي الدوارة ، اتبع إجراءات ٢←٣←٦ المبينة في الشكل أعلاه.

العناية والصيانة

سلة اسطوانة التجفيف

- اذا دخلت الملابس بين سلة اسطوانة التجفيف وحوض الدوران.
- ١. ارج البرغى من الزاوية اليسرى لغطاء السلامة-١.
- ٢. ادخل مفك برغى (نوع " - ") الى موضع الخطاف.
- ٣. امسك بقمدة غطاء السلامة - ١.
- ٤. اخرج القطع من الملابس.
- ٥. اغلق غطاء السلامة - ١ وضاعطا عليه الى الأسفل حتى ينطبق بإحكام على حوض التجفيف.

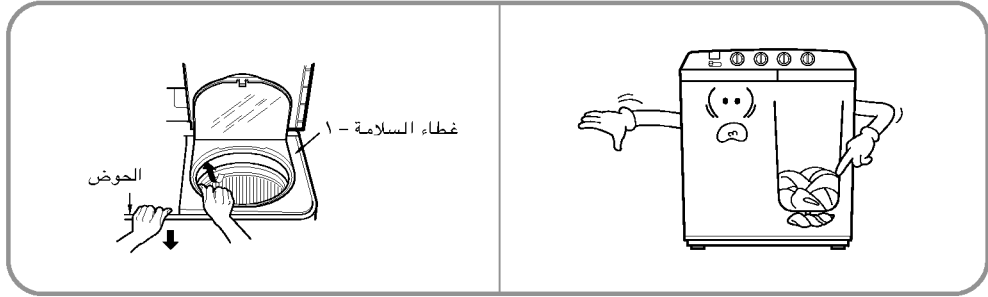


دليل تحرى الخلل وإصلاحه

قبل طلب الخدمة

نقاط الفحص	الاعطال
- هل كيبيل الطاقة موصل الى القابس بصورة محكمة ؟ - هل ساعة التوقيت موجهة الى قنطة مناسبة غير موضع "إيقاف" ؟	المحرك (الموتور) لا يعمل
- هل هناك اي ملابس ملقاة بين السلة وحوض الغسل ؟ - هل غطاء اسطوانة التجفيف مثبت ؟ - هل الغسيل محشور الى جانب واحد من سلة اسطوانة التجفيف ؟	سلة التجفيف لا تعمل
- هل أي نسييل من القماش لاصق بصمام الحوض ؟ - هل نهاية دليل خرطوم التصريف موضوعة في ارتفاع عال جدا ؟ - هل تعمل مضخة التصريف ؟	عدم تصريف



المواصفات

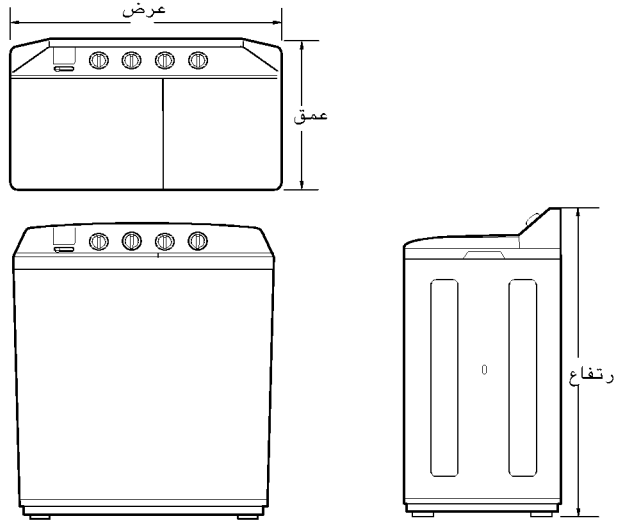

مصدر الطاقة	مكتوب على بطاقة المواصفات
مستوى الماء	مرتفع: ٥٠ لتر
ضغط الماء	أقل من ١٠٠ kPa (١ كجم. قوة / سم ^٢)
الأبعاد	الموديل : دلبو بي - ٨٥٠ (إن)(جي)(كيو) ٩٨٣×٤٨٢×٨٢. (عرض×عمق×ارتفاع)
الأبعاد	الموديل : دلبو بي - ٨٦٠ (إن)(جي)(كيو) ٩٩٥×٤٨٢×٨٢. (عرض×عمق×ارتفاع)
الوزن (الصافي)	٣٣ كجم

■ كيفية قراءة تاريخ الإنتاج : رقعة مكتوب عليها تاريخ الإنتاج ملصقة على اللوحة .

مثلا 212TW00001

الرقم المسلسل
رمز الجهاز
الشهر
السنة (الرقم الأخير للسنة)

