



F2400

Návod na používanie

SLOVENSKY / ENGLISH

Niektoré časti tohto návodu sa môžu líšiť od vášho telefónu v závislosti od softvéru telefónu alebo mobilného operátora.



CE 0168



F2400 Návod na používanie - SLOVENSKY



Likvidácia vášho starého prístroja

1. Keď sa na produkte nachádza tento symbol prečiarknutej smetnej nádoby s kolieskami, znamená to, že daný produkt vyhovuje európskej smernici 2002/96/ES.
2. Všetky elektrické a elektronické produkty by sa mali likvidovať oddelene od komunálneho odpadu prostredníctvom na to určených zberných zariadení, ktoré boli ustanovené vládou alebo orgánmi miestnej správy.
3. Správnou likvidáciou nepotrebných zariadení pomôžete predchádzať potenciálnym negatívnym vplyvom na životné prostredie a ľudské zdravie.
4. Podrobnejšie informácie o likvidácii nepotrebných zariadení získate na miestnom úrade, v službe na likvidáciu odpadu alebo u predajcu, kde ste tento produkt zakúpili.

Obsah



Úvod	8	Strom menu	36
Pokyny na bezpečné a účinné používanie	9	Výber funkcií a volieb.....	39
Vlastnosti telefónu F2400	14	História hovorov	40
Časti telefónu	14	Zmeškané hovory	40
Informácie na displeji.....	18	Prijaté hovory	40
		Volané hovory	40
Základná obrazovka	20	Zmazať posledné hovory	41
Začíname	21	Tarifikácia hovoru	41
Vloženie SIM karty a batérie.....	21	Trvanie hovoru	41
Nabitie batérie	23	Cena hovoru	42
Odpojenie nabíjačky	24	Nastavenia	42
Zapnutie a vypnutie telefónu	24	Informácie GPRS	42
Prístupové kódy	25	Trvanie hovoru	42
Blokovacie heslo	26	Objem dát	43
Základné funkcie	27	Adresár	44
Telefonovanie	27	Hľadať.....	44
Telefónny zoznam	32	Pridať	45
Menu počas hovoru	32	Skupiny volajúcich	45
Konferenčné hovory	34	Rýchla voľba.....	46

Nastavenia	46	Tón po minúte	52
Kopírovať všetko	47	Automatické opakované vytáčanie	53
Zmazať všetko	47	Bezpečnostné nastavenia	53
Informácie	47	Vyžiadanie kódu PIN	53
		Zámka telefónu	53
Nastavenia	49	Blokovanie hovoru	53
Budík	49	Pevná voľba (závisí od SIM)	54
Dátum a čas	49	Zmeniť kódy	55
Nastaviť dátum	49	Nastavenia siete	55
Formát dátumu	50	Automaticky	55
Nastaviť čas	50	Ručne	55
Formát času	50	Preferované	56
Nastavenia telefónu	50	Nastavenie GPRS	56
Nastavenia displeja	50	Pôvodné nastavenia	56
Jazyky	51		
Nastavenia hovoru	51	Fotoaparát	57
Presmerovanie hovoru	51	Fotografovať	57
Režim prijatia hovoru	52	Odfotiť oramovanu fotografiu	59
Odoslať vlastné číslo	52	Snímať stále	60
Ďalší hovor na linke	52	Album fotografií	60



Nastavenia	61	Šablóny textových správ	75
Stav pamäte	61	Šablóny obrazkových správ	76
Vyprázdniť album	61	Podpis	76
Automatické ukladanie	61	Nastavenia	76
Správy	63	Textová správa	76
Nová správa	63	Obrazkova sprava	77
Napísať krátku správu	63	E-mail	79
Vytvoriť obrazkovu spravu	65	Centrum hlasovej pošty	79
Napísať emailovú správu	66	Info služba	79
Prijaté správy	67	Správa o službe	80
Orange Messenger	68	Orange World	81
Emailová schránka	73	Profily	83
Koncepty	73	Aktivovať	83
Odoslané správy	73	Prispôbiť	83
Vypočúť hlasovú poštu	74	Premenovať	84
Info služba	74	Album médií	85
Čítať	75	Hry a aplikácie	85
Temy	75	Obrázky	85
Šablóny	75		

Zvuky	85
Ďalšie obrázky	86
Extra	87
Bluetooth	87
Moje zariadenia	87
Zariadenia Handsfree	87
Nastavenia	87
Kalkulačka	88
Prevodník jednotiek	88
Svetový čas	89
Hlasový záznamník	89
Stav pamäte	90
Pomocník Orange	90
Problémy a riešenia	91
Príslušenstvo	94
Technické údaje	95

Blahoželáme Vám k zakúpeniu pokročilého a kompaktného mobilného telefónu F2400 navrhnutého na prácu s najnovšími digitálnymi technológiami z oblasti mobilnej komunikácie.



Tento návod na používanie obsahuje dôležité informácie o obsluhu a prevádzke tohto telefónu. Prosíme, čítajte všetky informácie pozorne, aby ste dosiahli optimálny výkon prístroja a aby ste sa vyhli jeho poškodeniu alebo nesprávnemu použitiu. Akákoľvek zmena alebo modifikácia prístroja, ktorá nie je výslovne schválená týmto návodom na používanie, môže spôsobiť zneplatnenie záruky na tento prístroj.



Prečítajte si tieto jednoduché pokyny. Porušenie týchto pravidiel môže byť nebezpečné alebo protizákonné. Ďalšie podrobné informácie sú obsiahnuté v tomto návode.

Stupeň rizika vystavenia vysokofrekvenčnej (VF) energii

Informácia o stupni rizika rádiových vln a špecifickom absorbovanom výkone (SAR)

Model mobilného telefónu F2400 bol navrhnutý tak, aby vyhovoval bezpečnostným požiadavkám na expozíciu vysokofrekvenčnými vlnami. Tieto požiadavky sú založené na vedeckých smerniciach, ktoré zahŕňajú bezpečnostné rezervy, aby zaistili bezpečnosť všetkých osôb nezávisle od veku a zdravotného stavu.

- Expozičné normy pre mobilné telefóny používajú meraciu jednotku, ktorá je známa ako špecifický absorbovaný výkon (angl. Specific Absorption Rate – SAR). Merania SAR sa vykonávajú v štandardných prevádzkových polohách s telefónom, ktorý vysiela na maximálnom certifikovanom výkone vo

všetkých testovaných frekvenčných pásmach.

- Hoci sa hodnoty SAR jednotlivých modelov telefónov LG môžu odlišovať, sú všetky v súlade s príslušnými smernicami na expozíciu VF žiarením.
- Limit SAR, odporúčaný Medzinárodnou komisiou na ochranu pred neionizujúcou radiáciou (angl. International Commission on Non-Ionizing Radiation Protection – ICNIRP), je 2 W/kg, pričom ide o priemernú hodnotu na 10 gramov tkaniva.
- Najvyššia hodnota SAR testovaná DASY4 pri tomto modeli na použitie pri uchu je 1.3 W/kg.

Starostlivosť o telefón a jeho údržba

Upozornenie: Používajte výlučne batérie, nabíjačku a príslušenstvo schválené na používanie s týmto modelom telefónu. Používaním akýchkoľvek iných typov môžu stratiť platnosť všetky povolenia a záruky platné na telefón a môže to byť nebezpečné.

- Nerozoberajte prístroj. Ak je potrebná oprava,



Pokyny na bezpečné a účinné používanie

zverte ho kvalifikovanému servisnému stredisku.

- Udržiavajte telefón vo väčšej vzdialenosti od elektrických zariadení, ako sú televízor, rádio alebo osobný počítač.
- Nenechávajte telefón v blízkosti zdrojov tepla, ako sú radiátory alebo sporáky.
- Zabráňte pádu telefónu na zem.
- Nevystavujte telefón mechanickým vibráciám ani nárazom.
- Povrchová úprava telefónu sa môže poškodiť v prípade vloženia prístroja do drsného alebo vinylového obalu.
- Na čistenie telefónu používajte suché tkaniny. (Nepoužívajte rozpúšťadlá ako benzén, riedidlo alebo alkohol.)
- Nevystavujte telefón nadmernému dymu ani prachu.

- Nenechávajte telefón v blízkosti kreditných kariet alebo cestovných lístkov, môže pôsobiť na informáciu na magnetických pásoch.
- Nedotýkajte sa displeja ostrými predmetmi, môže to poškodiť telefón.
- Nevystavujte telefón nadmernej vlhkosti.
- Používajte príslušenstvo opatrne. Pokiaľ to nie je potrebné, nedotýkajte sa antény.

Elektronické zariadenia

Všetky mobilné telefóny môžu interferovať, čo môže ovplyvniť výkon iných elektronických zariadení.

- Nepoužívajte mobilný telefón v blízkosti zdravotníckych prístrojov bez výslovného povolenia. Vyhýbajte sa umiestneniu telefónu do blízkosti kardiostimulátora, napríklad v náprsnom vrecku.
- Mobilné telefóny môžu rušiť niektoré typy načúvacích zariadení.



- Menšie rušenie môže ovplyvniť televízory, rádia, osobné počítače a pod.

Bezpečnosť cestnej premávky

Zistite si pravidlá používania mobilných telefónov v oblastiach, kde vediete vozidlo.

- Počas riadenia vozidla nedržte telefón v ruke.
- Venujte plnú pozornosť riadeniu.
- Ak môžete, používajte sadu „hands free“.
- Keď to dopravná situácia umožňuje, pred uskutočnením hovoru odbočte z vozovky a zaparkujte.
- Vysokofrekvenčná energia môže ovplyvniť niektoré elektronické systémy v motorovom vozidle, ako napríklad autorádio či bezpečnostný systém.

- Ak máte vozidlo vybavené airbagom, neumiestňujte žiadne predmety, vrátane inštalovaných alebo prenosných bezdrôtových zariadení, do oblasti pred airbagom alebo do oblasti, kam sa airbag rozpína. Mohlo by to v prípade aktivácie airbagu spôsobiť vážne zranenia.

Oblasť odstrelových prác

Nepoužívajte telefón v oblasti, kde sa uskutočňujú odstrelové práce.

Všímajte si obmedzenia a dodržujte všetky nariadenia a predpisy.

Potenciálne explozívne prostredia

- Nepoužívajte telefón na čerpacích staniciach. Nepoužívajte ho v blízkosti paliva alebo chemikálií.
- Neprevážajte a neskladujte horľavé plyny, kvapaliny alebo výbušné materiály v rovnakom priestore ako telefón alebo jeho príslušenstvo.



V lietadle

Bezdrôtové prístroje môžu v lietadlách spôsobovať rušenie.

- Vypnite telefón pred nastúpením do lietadla.
- Nepoužívajte telefón na letisku bez povolenia posádky.

Deti

Udržujte telefón na bezpečnom mieste mimo dosahu detí. Skladá sa z drobných častí, ktoré môžu v prípade prehltnutia spôsobiť dusenie.

Tiesňové volania

Tiesňové volania nemusia byť dostupné vo všetkých mobilných sieťach. Preto by ste nemali byť nikdy závislí iba od tiesňového volania z telefónu. Podrobnejšie informácie získate od operátora.

Informácie o batérii a jej údržbe


- Pred nabíjaním nemusíte batériu úplne vybiť. Na rozdiel od iných batériových systémov nemá batéria pribalená k prístroju žiadny pamäťový efekt, ktorý by mohol znížiť jej výkon.
- Používajte len batérie a nabíjačky LG. Nabíjačky LG sú navrhnuté tak, aby maximalizovali životnosť batérie.
- Nerozoberajte a neskratujte batérie.
- Udržujte kovové kontakty batérie čisté.
- Vymeňte batériu, ak už neposkytuje prijateľný výkon. Životnosť batérie je až niekoľko stoviek nabíjacích cyklov.
- Ak sa batéria dlhší čas nepoužívala, nabite ju, aby ste maximalizovali jej použiteľnosť.
- Nevystavujte nabíjačku batérií priamemu slnečnému žiareniu ani vysokej vlhkosti (napríklad v kúpeľni).



- Nenechávajte batériu na horúcich alebo studených miestach, môže to zhoršiť jej výkon.

Časti telefónu

Pohľad z prednej strany

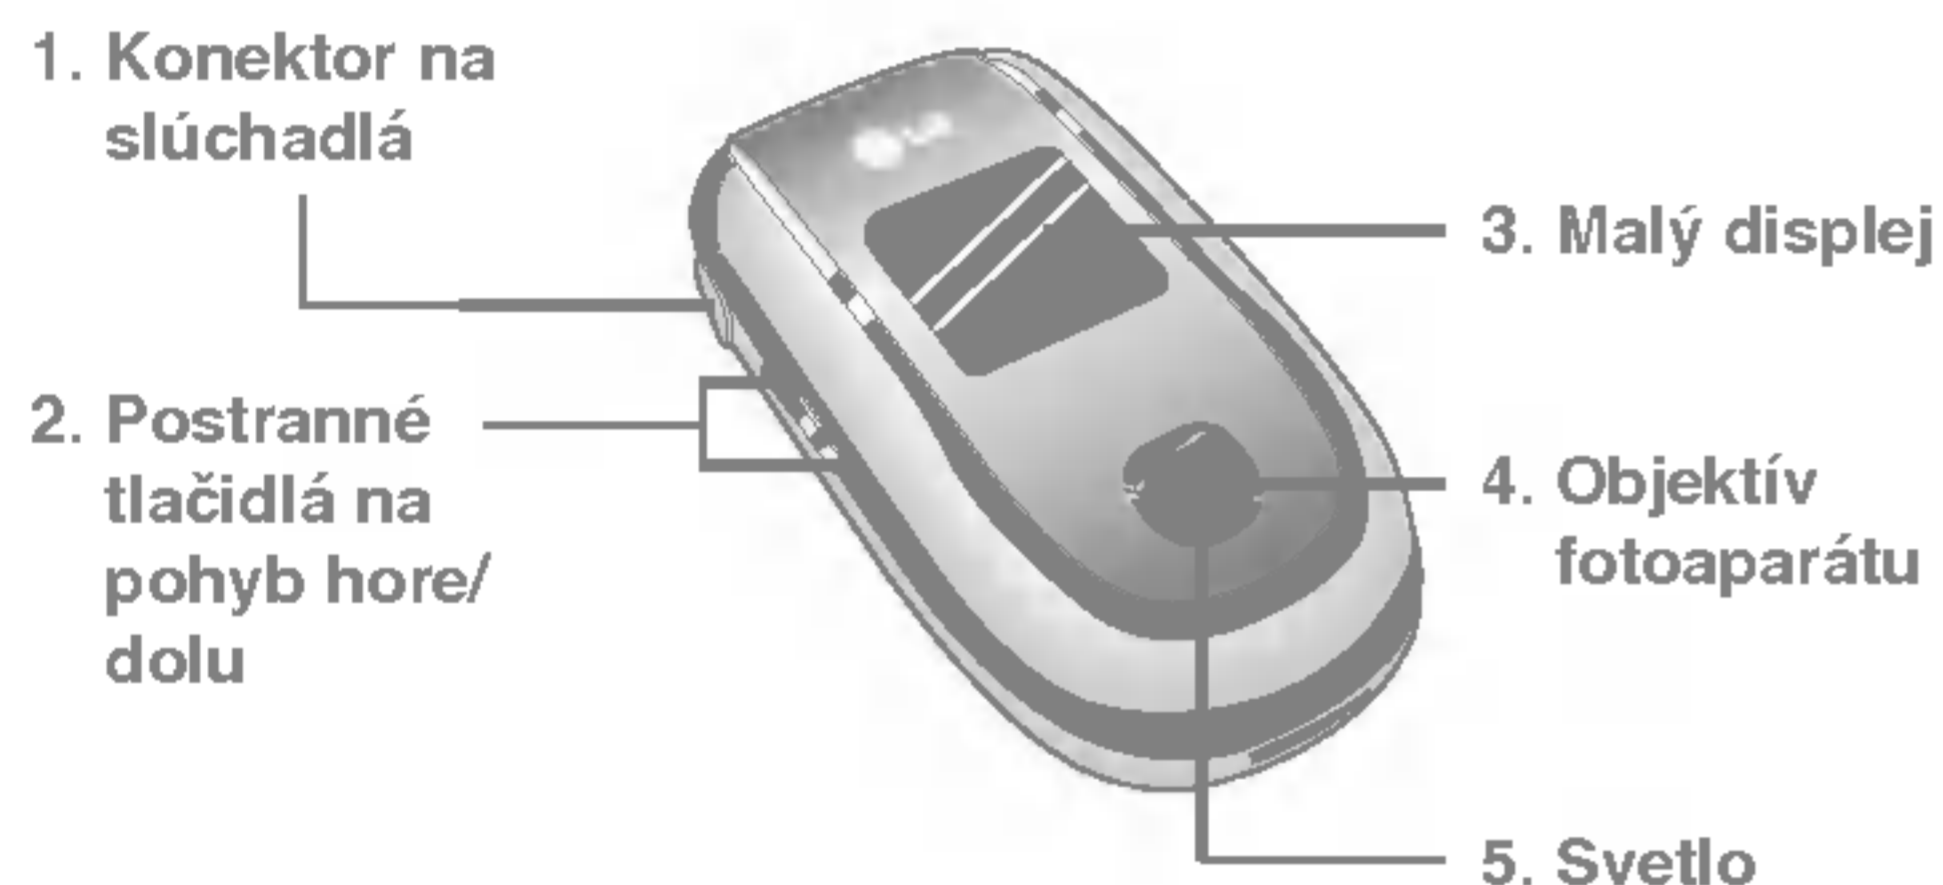

1. Konektor na slúchadlá

- Pripojenie slúchadiel.

2. Postranné tlačidlá na pohyb hore/ dolu

- Ak chcete zobrazit' aktuálny čas na malom displeji, stlačte a podržte toto tlačidlo.
- Ovládanie hlasitosti tónov klávesnice v pohotovostnom režime, ak je telefón otvorený.
- Ovládanie hlasitosti slúchadla počas telefonického hovoru.

3. Malý displej

4. Objektív fotoaparátu

- ❗ **Poznámka** Znečistenie objektívu fotoaparátu môže ovplyvniť kvalitu obrazu.

5. Svetlo




Pohľad z pravej strany




Tlačidlo fotoaparátu

Ak podržíte toto tlačidlo stlačené, aktivujete režim fotoaparátu. Potom má toto tlačidlo funkciu spúšte.

Pohľad zo zadnej strany

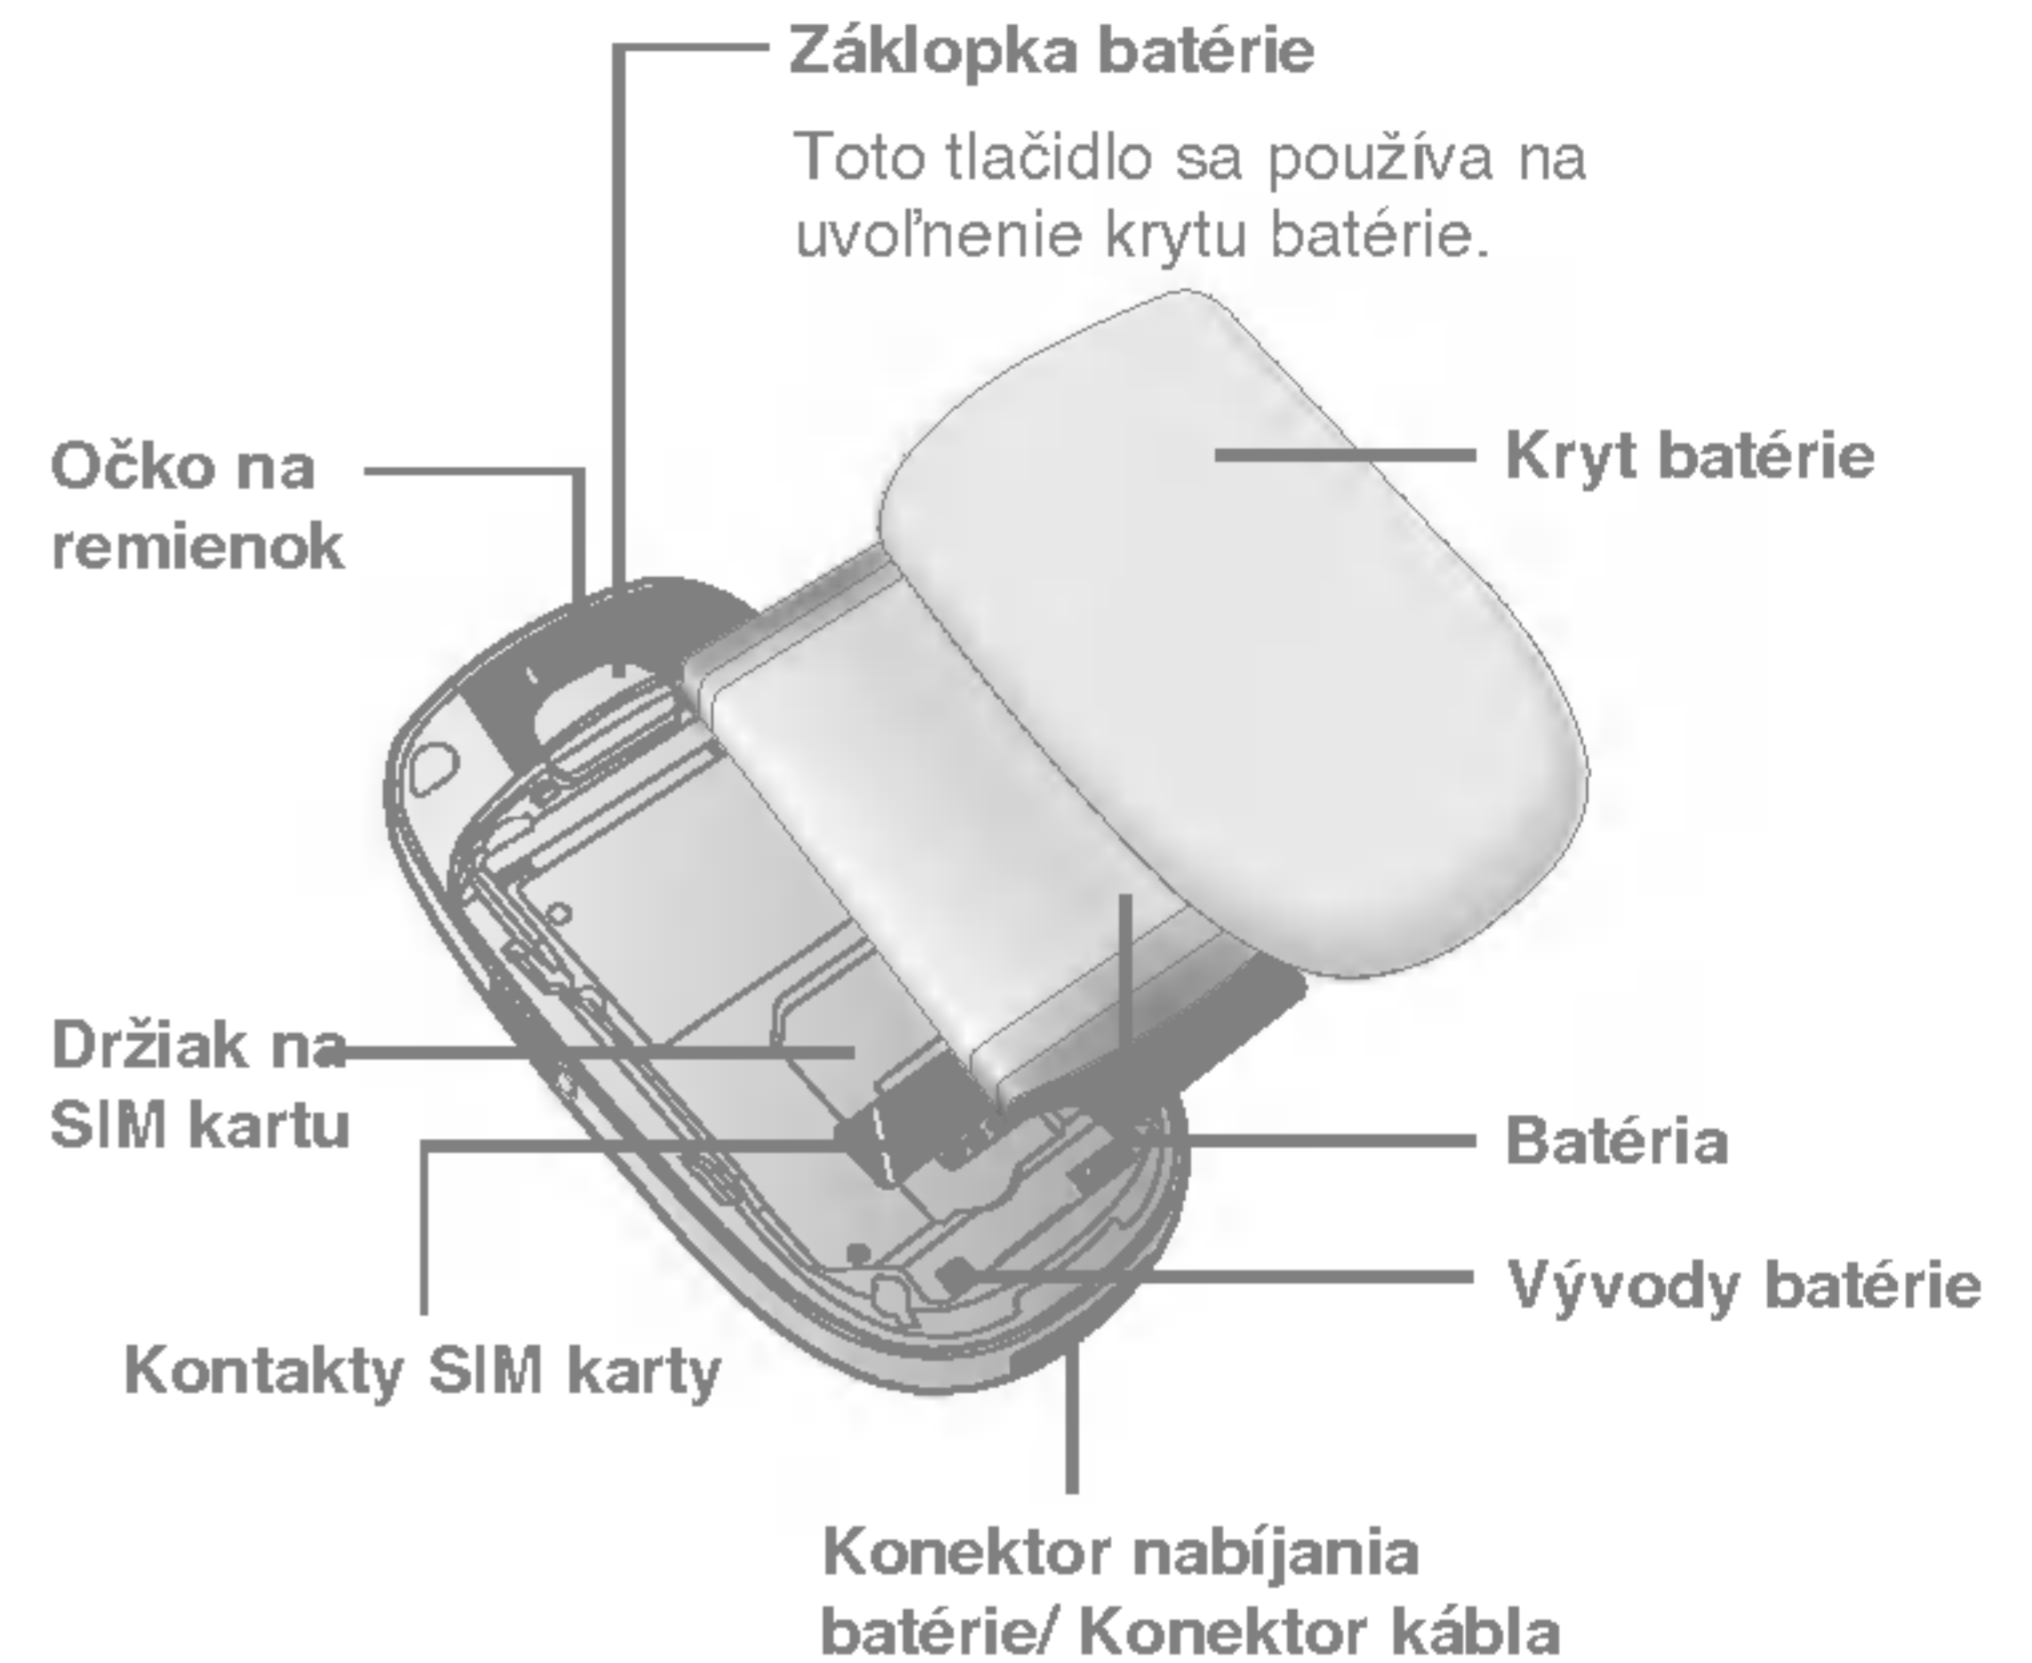

Časti telefónu

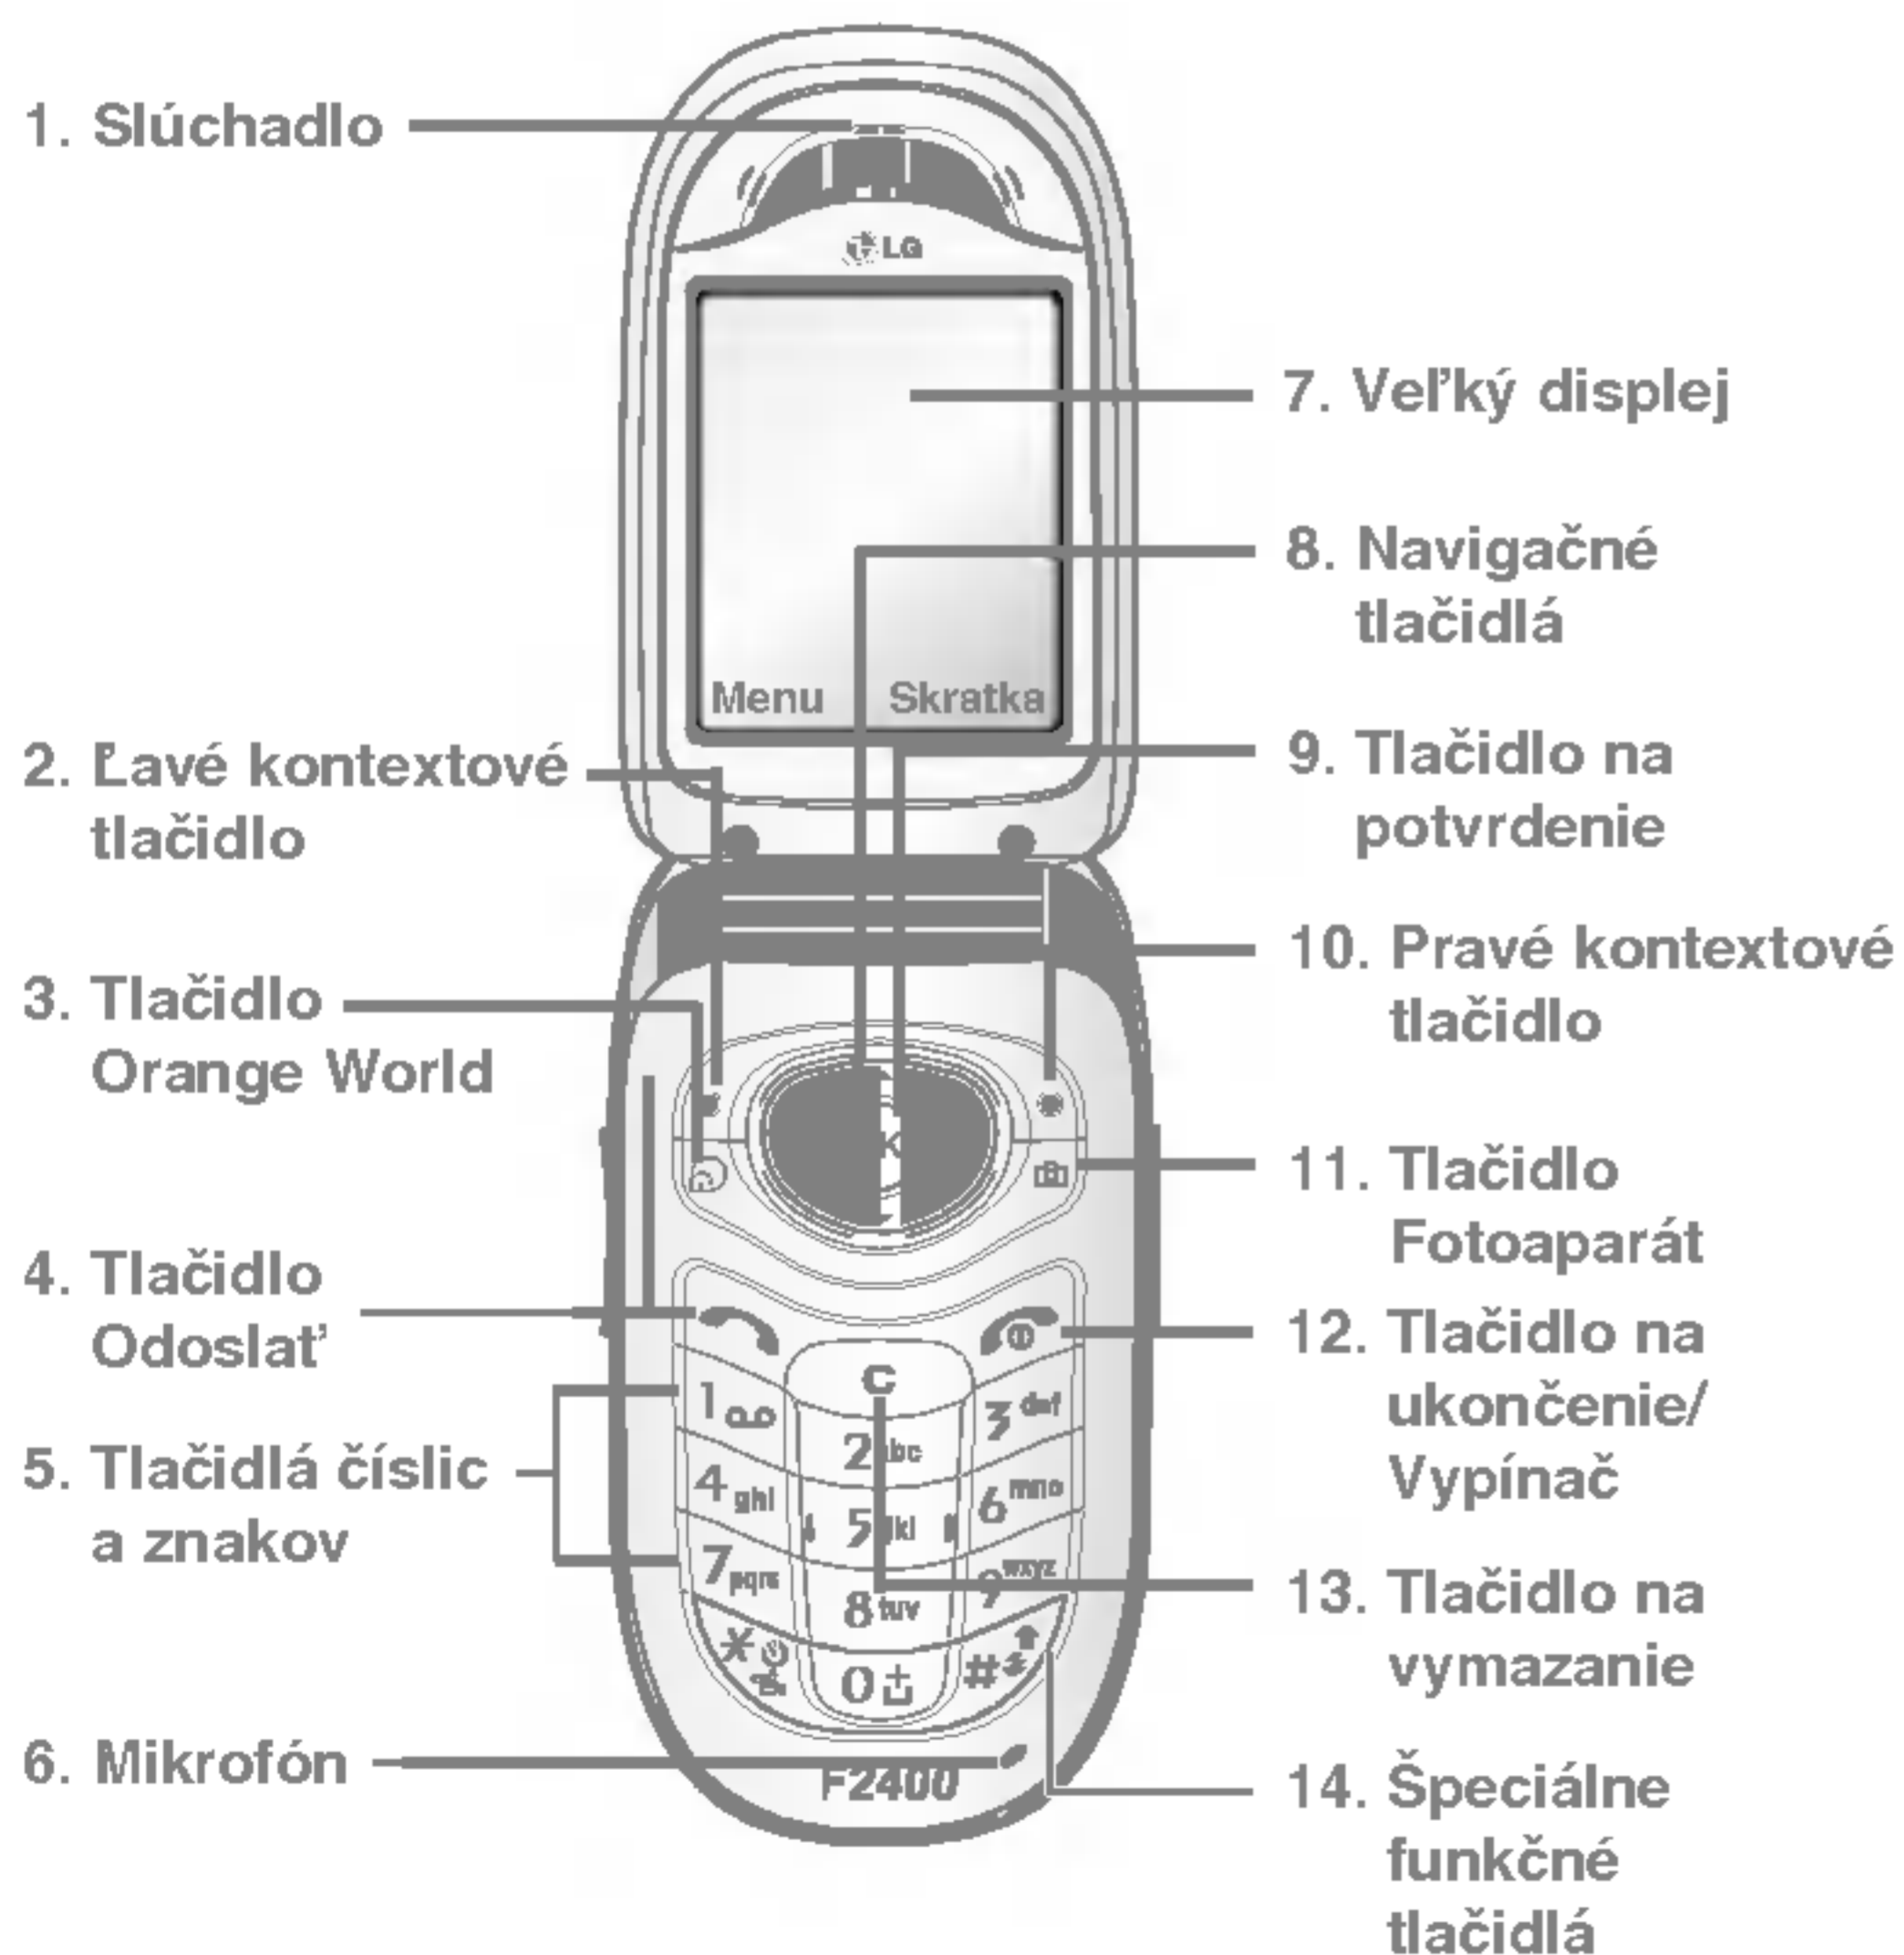

Funkcie telefónu

1. Slúchadlo

2, 10. Ľavé kontextové tlačidlo/ Pravé kontextové tlačidlo: Každé z týchto tlačidiel slúži na funkciu, ktorá je uvedená na displeji nad ním.

3. Tlačidlo Orange World: Skratka do menu Orange World.

4. Tlačidlo Odoslať: Vytočí telefónne číslo a prijme prichádzajúci hovor. Stlačením tohto tlačidla v pohotovostnom režime môžete tiež rýchlo pristupovať k posledným prichádzajúcim, odchádzajúcim a zmeškaným hovorom.




5. Tlačidlá číslíc a znakov: Slúžia na písanie čísel, písmen a niektorých špeciálnych znakov.

6. Mikrofón: Môžete ho počas hovoru aj stlmiť. (Pozri stranu 34.)



7. **Veľký displej:** Zobrazuje ikony stavu telefónu, položky menu, webové informácie, obrázky atď.
8. **Navigačné tlačidlá:** Používajú sa na posúvanie v menu a pohyb kurzora.
9. **Tlačidlo na potvrdenie:** Vyberie možnosti menu a potvrdí voľby.
11. **Tlačidlo Fotoaparát:** Slúži ako spúšť fotoaparátu. Ak ho podržíte stlačené, priamo prejdete do režimu Fotoaparát.
12. **Tlačidlo na ukončenie/ Vypínač:** Pomocou tohto tlačidla môžete ukončiť alebo odmietnuť hovor a tiež sa môžete vrátiť do pohotovostného režimu. Ak chcete zapnúť alebo vypnúť telefón, podržte toto tlačidlo stlačené.
13. **Tlačidlo na vymazanie:** Vymaže po každom stlačení jeden znak. Ak chcete vymazať celý vložený text, tlačidlo podržte. Stlačením tohto tlačidla sa tiež vrátite na predchádzajúcu obrazovku.

14. Špeciálne funkčné tlačidlá:





-  : Dlhým stlačením tohto tlačidla sa aktivujete a vypína vibračný režim
-  : Dlhým stlačením tohto tlačidla sa vkladá znak „+“ na medzinárodný hovor.
-  : Počas voľby telefónneho čísla sa dlhým stlačením tohto tlačidla vloží pauza.

Informácie na displeji

Nasledujúca tabuľka opisuje rôzne indikátory na displeji a ikony, ktoré sa na ňom môžu objaviť.

Ikony na displeji

	Opis
	Informuje o sile signálu siete.
	Informuje o prebiehajúcom hovore.
	Indikátor používania roamingu.
	Informuje o možnosti použitia služby GPRS.
	Indikuje, že budík je nastavený a zapnutý.
	Zobrazuje stav nabitia batérie.
	Upozorňuje na príjem krátkej textovej správy (SMS).
	Upozorňuje na príjem hlasovej správy.

	Indikuje zapnutie vibračného vyzváňania.
	Upozorňuje na príjem emailovej správy.
	Indikuje zapnutie hlasného profilu.
	Indikuje zapnutie tichého profilu.
	Indikuje zapnutie profilu Slúchadlá.
	Indikuje zapnutie normálneho profilu.
	Poukazuje na možnosť použitia služby push správy.
	Upozorňuje, že máte na vybratý deň pripomienku v plánovači.
	Indikuje, že telefón sprístupňuje službu WAP.
	Indikuje, že používate službu GPRS.



Indikuje, že ste vstúpili na
zabezpečenú stránku.

Spoločnosť Orange pridala do telefónu základnú obrazovku, ktorá umožňuje rýchlo sa pripojiť k najčastejšie používaným funkciám a pohľadom zistiť všetky zmeškané volania alebo nové správy.



Rýchly prístup

Základná obrazovka umožňuje spustiť kľúčové funkcie telefónu a skvelé služby spoločnosti Orange len pomocou dvoch stlačení klávesov. Či už chcete odoslať textovú správu, fotografovať alebo spustiť prieskumníka Orange World, teraz to dokážete rýchlejšie ako predtým.

Všetky možnosti

Pri každom výbere jednej z ikon na ľavej strane obrazovky sa zobrazí zoznam možností, ktorý poskytne ďalší výber. Napríklad pri prehľadávaní Orange World si môžete vybrať priamy prechod do možností Orange World, Kanály, Vaša stránka a Hľadať.




Vloženie SIM karty a batérie

Pred vybratím batérie skontrolujte, či je telefón vypnutý.

1. Odstránenie krytu batérie.


Zatlačte západku batérie a posuňte kryt batérie smerom k spodnej časti telefónu. Odstráňte kryt batérie.

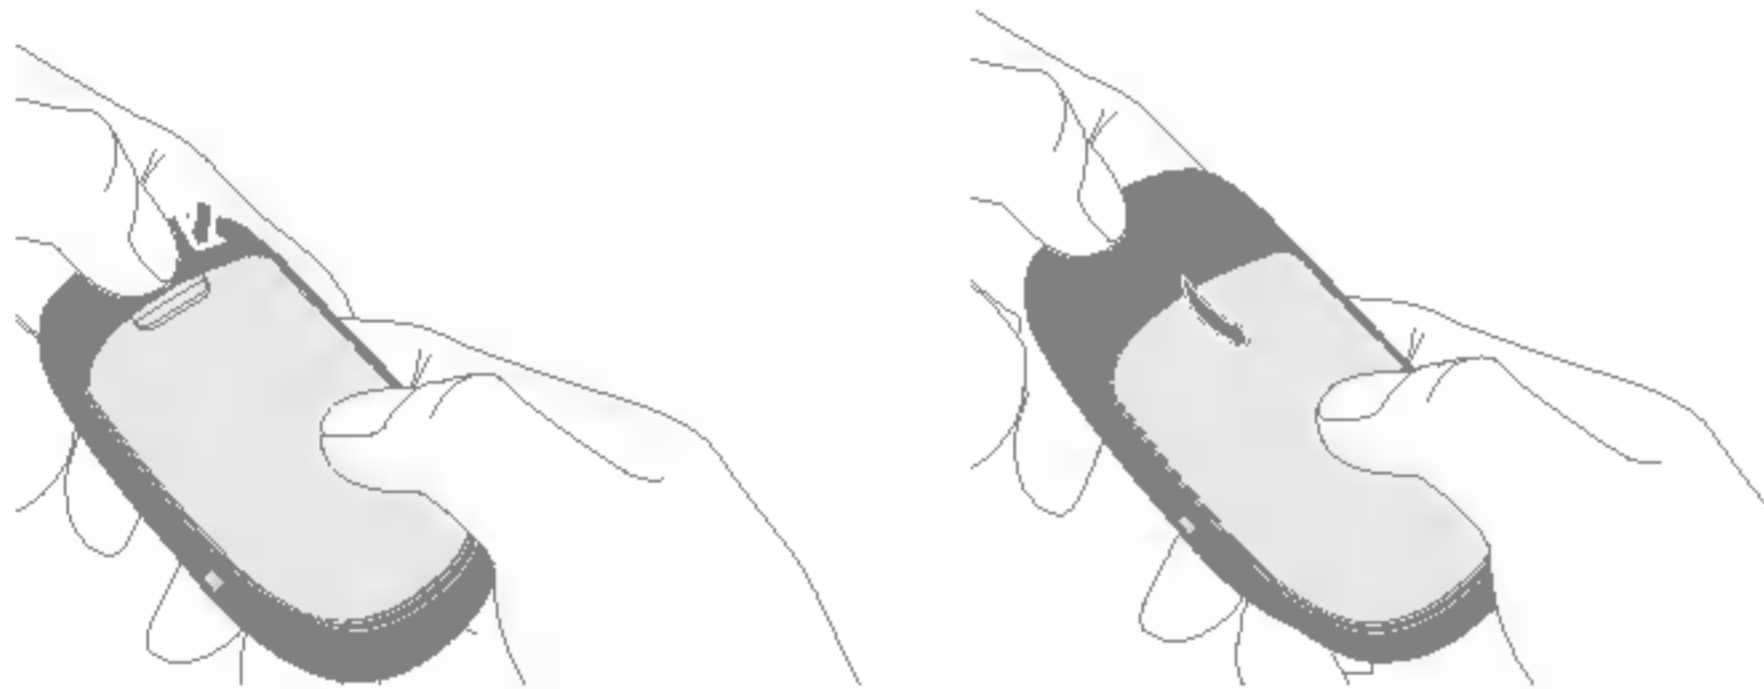

! **Poznámka** Vybratie batérie zo zapnutého telefónu môžete narušiť jeho správne fungovanie.

2. Vybratie batérie.

Uchopte batériu za jej vrchnú stranu a vyberte ju z priestoru na batériu.

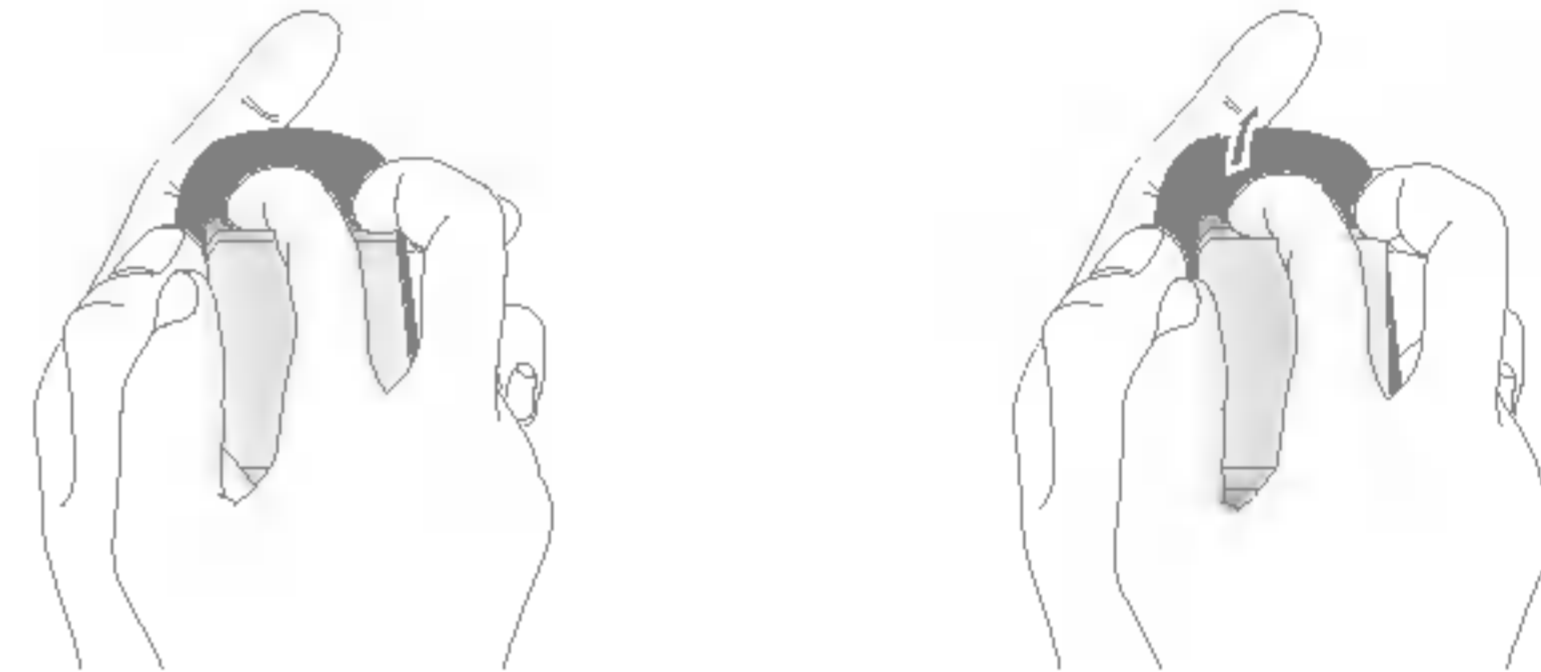


3. Vloženie SIM karty.

Vsuňte SIM kartu do otvoru podľa obrázka. Uistite sa, že je SIM karta správne vložená a že pozlátená kontaktná plocha karty je obrátená dovnútra prístroja. Ak chcete SIM kartu vytiahnuť, opatrne ju vytlačte z držiaka, ako to ukazuje obrázok.



Vloženie SIM karty

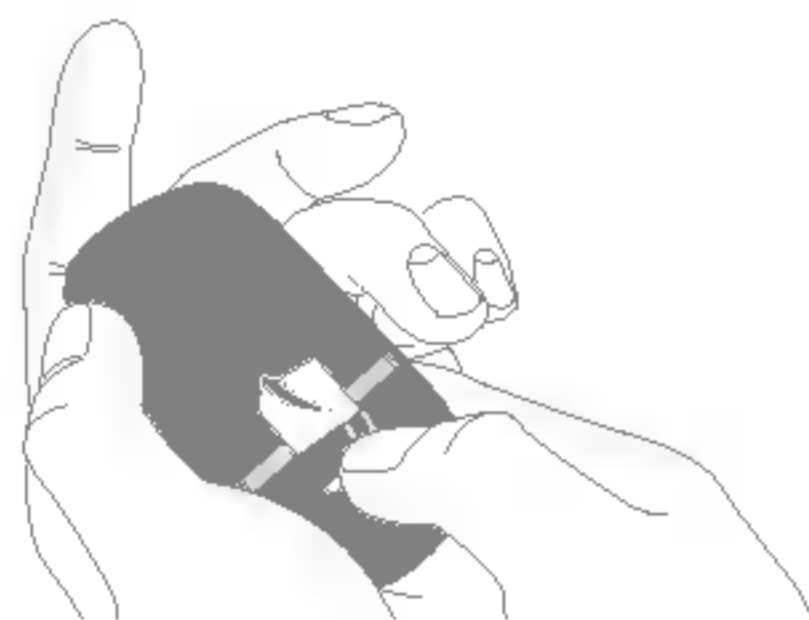


Vybratie SIM karty

! Upozornenie Kovový kontakt SIM karty sa môže ľahko poškriabať. Dávajte preto veľký pozor pri zaobchádzaní so SIM kartou. Postupujte podľa inštrukcií priložených k SIM karte.


4. Vloženie batérie.

Vložte najprv spodnú časť batérie do spodnej časti priestoru na batériu. Zatlačte vrch batérie, až kým nezapadne na svoje miesto.

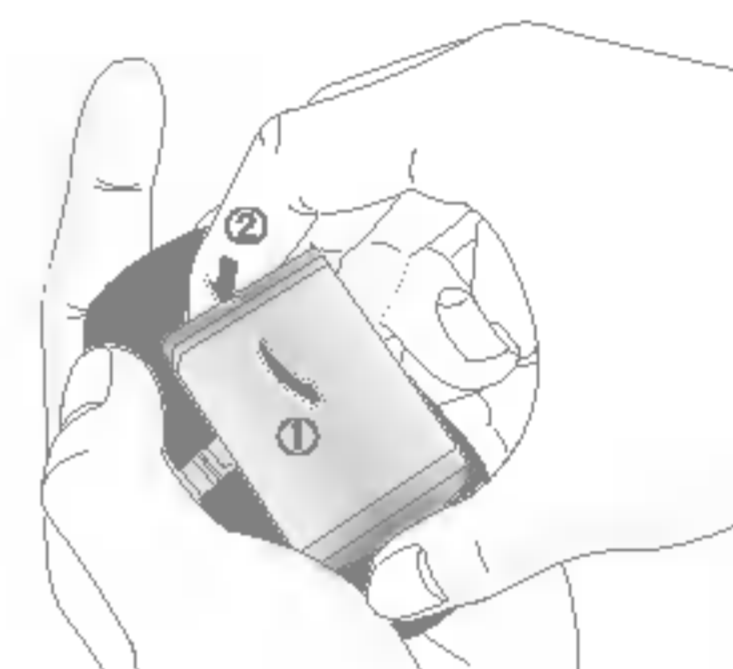

5. Založenie krytu batérie.


Položte kryt batérie na príslušné miesto telefónu a posúvajte ho, až kým západka „nezaklapne“.

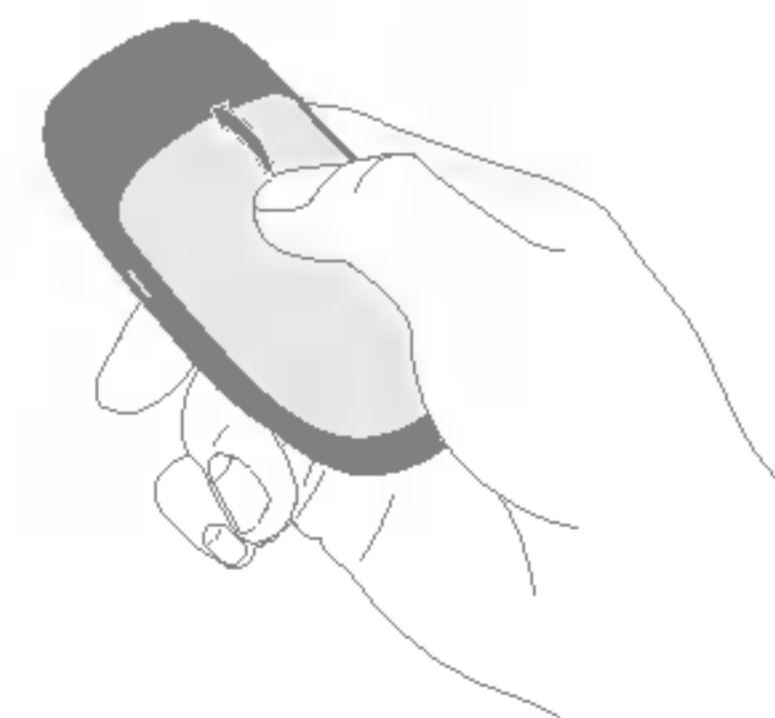



Nabitie batérie

Skôr ako pripojíte nabíjačku k telefónu, skontrolujte, či ste vložili batériu.

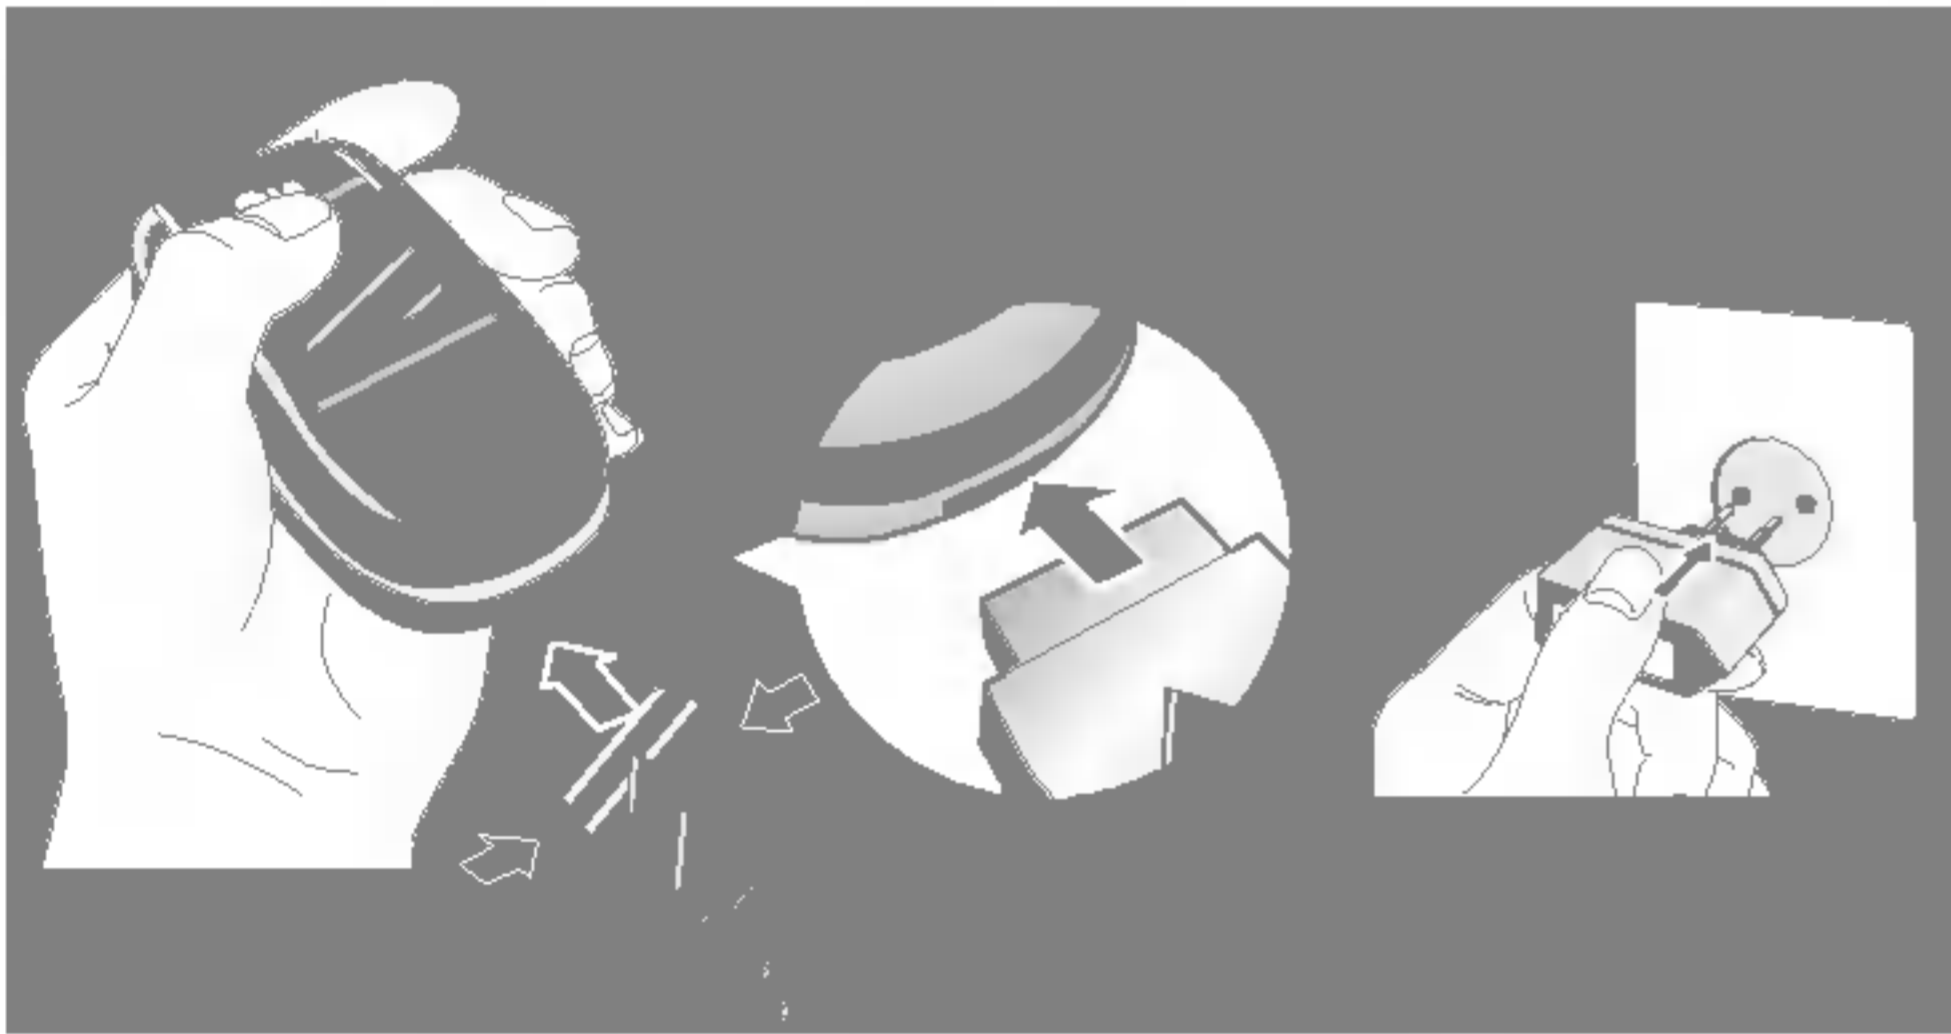


1. Zasuňte konektor nabíjačky do otvoru v spodnej časti telefónu tak, aby šípka na konektore ukazovala na telefón (pozri obrázok). Po „zacvaknutí“ je nabíjačka pripravená na použitie.
2. Zapojte nabíjačku do sieťovej zásuvky. Používajte výhradne nabíjačku dodávanú spolu s telefónom.

3. Keď sa prestanú pohybovať čiarky na indikátore stavu batérie, je nabíjanie ukončené.

- ❗ **Výstraha**
 - Nepoužívajte hrubú silu, inak môžete poškodiť telefón a/ alebo nabíjačku.
 - Zasuňte nabíjačku do zásuvky vo vodorovnom smere.
 - Ak chcete používať nabíjačku aj v zahraničí, možno budete potrebovať adaptér do zásuvky.
 - Ak sa telefón nabíja, nevyberajte z neho batériu ani SIM kartu.
- ❗ **Pozor!**
 - Počas búrky odpojte nabíjačku zo siete. Mohlo by dôjsť k požiaru alebo zásahu elektrickým prúdom.
 - Zaistite, aby sa do kontaktu s batériou nedostali ostré predmety ako zuby zvierat, nechty a pod. Mohlo by dôjsť k požiaru.
 - Ak sa telefón nabíja, netelefonujte ani neprijímajte hovory. Mohlo by dôjsť ku skratu alebo k zásahu elektrickým prúdom.

Odpojenie nabíjačky


1. Po skončení nabíjania sa na displeji prestane pohybovať ukazovateľ dobíjania batérie a zobrazí sa nápis oznamujúci nabitie batérie.
2. Odpojte adaptér zo siete. Stlačte sivé postranné tlačidlá na konektore a vytiahnite ho z telefónu.

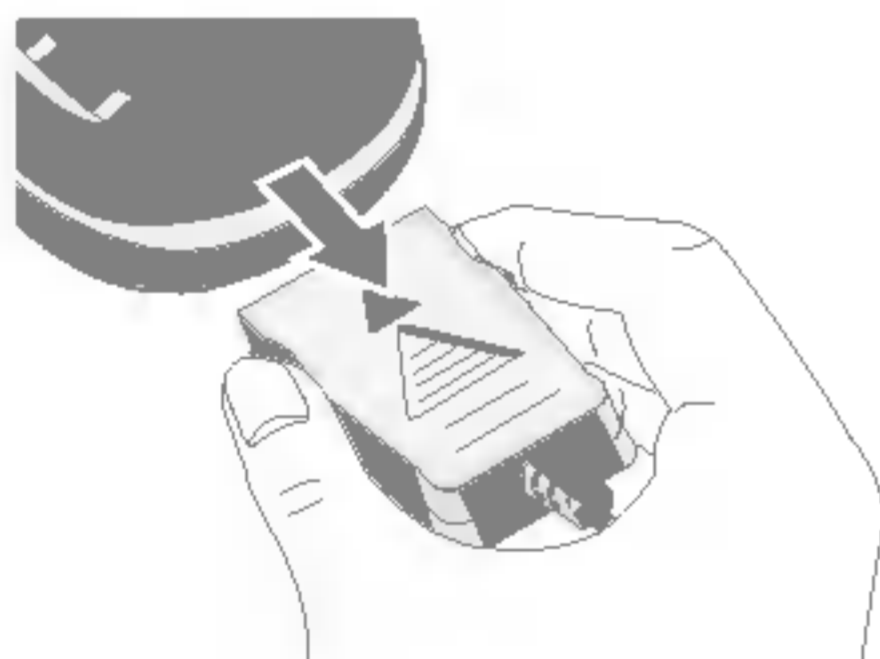

- ! Poznámka**
- Pred prvým použitím telefónu sa uistite, že je batéria úplne nabitá.
 - Nevyberajte batériu ani SIM kartu, keď sa telefón nabíja.
 - Ak batéria nie je úplne nabitá, vypnite telefón tlačidlom vypínača. Potom telefón opäť zapnite a dajte batériu opäť nabiť. Ak batériu z telefónu vyberiete, po vložení ju opäť dobite.

Zapnutie a vypnutie telefónu

Zapnutie telefónu

1. Vložte batériu do prístroja a zapojte telefón do externého zdroja, ako je napríklad cestovná nabíjačka, autonabíjačka alebo autosúprava na použitie v režime hands-free. Alebo vložte do telefónu nabitú batériu.
2. Podržte  niekoľko sekúnd, až kým sa nezapne displej.
3. V závislosti od nastavenia telefónu môže byť potrebné vloženie osobného identifikačného čísla (angl. Personal Identification Number - PIN).

Vypnutie telefónu

1. Podržte  niekoľko sekúnd, až kým sa displej nevypne.



Prístupové kódy

Prístupové kódy opísané v tejto časti slúžia na to, aby ste zabránili neoprávnenému používaniu svojho telefónu. Prístupové kódy (okrem kódov PUK a PUK2) môžete zmeniť použitím voľby Zmeniť kódy [Menu 3-5-5]. (Pozri stranu 55.)

Kód PIN (4 až 8 číslic)

Kód PIN chráni SIM kartu pred neoprávneným používaním. Kód PIN zvyčajne dostanete spolu so SIM kartou. V prípade zapnutia voľby Vyžiadanie kódu PIN bude telefón požadovať vloženie kódu PIN po každom zapnutí. V prípade vypnutia voľby Vyžiadanie kódu PIN sa telefón pripojí do mobilnej siete bez nutnosti vkladať kód PIN.

Kód PIN2 (4 až 8 číslic)

Kód PIN2 sa dodáva spolu s niektorými SIM kartami a je potrebný na prístup k niektorým funkciám, ako napríklad Informácie o cene hovoru, Pevná voľba. Tieto funkcie sú k dispozícii iba vtedy, ak ich podporuje SIM karta. Ďalšie informácie získate od svojho operátora.

Kód PUK (4 až 8 číslic)

Kód PUK (PIN Unblocking Key - kľúč odblokovania PIN) je potrebný na zmenu zablokovaného kódu PIN. Kód PUK sa niekedy dodáva spolu so SIM kartou. Ak ste ho so SIM kartou nedostali alebo ste ho stratili, vyžiadajte si ho od operátora.

Kód PUK2 (4 až 8 číslic)

Kód PUK2 sa dodáva spolu s niektorými SIM kartami a je potrebný na zmenu zablokovaného kódu PIN2. Ak kód stratíte, obráťte sa na operátora.



Bezpečnostný kód (4 až 8 číslic)

Bezpečnostný kód chráni telefón pred neoprávneným používaním. Prednastavený kód je „0000“. Tento kód si telefón vyžiada pri vymazaní všetkých položiek v pamäti a pri obnovení pôvodných nastavení. Bezpečnostný kód je potrebný aj na aktivovanie alebo deaktivovanie funkcie uzamknutia telefónu ako ochrany pred jeho neoprávneným používaním. Štandardné nastavenie bezpečnostného kódu môžete zmeniť v menu Bezpečnostné nastavenia.





Blokovacie heslo

Blokovacie heslo je potrebné na používanie funkcie Blokovanie hovoru. Toto heslo obdržíte od operátora v prípade, ak si aktivujete túto funkciu. Ďalšie informácie nájdete na strane 53.





Telefonovanie



Volanie

1. Uistite sa, že je telefón zapnutý.
2. Navoľte telefónne číslo vrátane medzimestskej predvoľby. Ak potrebujete opraviť vložené číslo, prostredníctvom ľavého/ pravého navigačného tlačidla presuňte kurzor na potrebnú pozíciu a tlačidlom na vymazanie () vymažete jednu číslicu.
 - ▶ Ak tlačidlo na vymazanie () podržíte, vymažete celé číslo.
3. Stlačte tlačidlo Odoslať () a číslo sa vytočí.
4. Hovor ukončíte tlačidlom na ukončenie () alebo pravým kontextovým tlačidlom. Hovor môžete ukončiť aj zatvorením telefónu.


Volanie pomocou tlačidla Odoslať

1. Stlačte v pohotovostnom režime tlačidlo Odoslať () a zobrazí sa zoznam posledných prijatých, volaných a zmeškaných hovorov.
2. Zvoľte telefónne číslo prostredníctvom horného/dolného navigačného tlačidla.
3. Stlačte  .

Medzinárodné hovory

1. Podržte tlačidlo  na medzinárodnú predvoľbu. Znak „+“ automaticky vyberie medzinárodnú predvoľbu.
2. Navoľte predvoľbu krajiny, medzimestskú predvoľbu a telefónne číslo.
3. Stlačte  .


Ukončenie hovoru

Ak ste dokončili hovor, stlačte tlačidlo na ukončenie ().

Volanie s použitím telefónneho zoznamu

Telefónne čísla si môžete uložiť do telefónneho zoznamu do pamäte SIM karty alebo telefónu. Číslo môžete vytočiť po jednoduchom vyhľadani v telefónnom zozname. Ďalšie informácie o voľbách telefónneho zoznamu nájdete na stranách 44 – 48.


Nastavenie hlasitosti

Ak chcete nastaviť hlasitosť slúchadla počas hovoru, použite postranné tlačidlá (). Stlačte horné postranné tlačidlo na zvýšenie a dolné postranné tlačidlo na zníženie hlasitosti.

Prijatie hovoru

Telefón zvonením oznamuje prichádzajúci hovor. Ak môže byť hovor identifikovaný, zobrazí sa na displeji telefónne číslo volajúceho (alebo jeho meno a obrázok, ak sú uložené v telefónnom zozname).

1. Ak chcete prijať prichádzajúci hovor, otvorte telefón. (Ak je funkcia prijatia hovoru priradená otvoreniu telefónu, pozri stranu 52.)

! Poznámka Ak je telefón nastavený tak, že hovor prijmete stlačením ľubovoľného tlačidla (pozri stranu 52), môžete prijať hovor stlačením ľubovoľného tlačidla okrem tlačidla  a pravého kontextového tlačidla.

▶ Ak nechcete prijať prichádzajúci hovor, podržte postranné tlačidlo na ľavej strane telefónu a telefón neotváraťe.

▶ Hovor môžete prijať, i keď máte otvorený telefónny zoznam alebo iné menu.


2. Ak chcete hovor ukončiť, zatvorte telefón alebo stlačte tlačidlo .

Rýchle prepnutie profilu


Ak podržíte tlačidlo  stlačené, prepnete sa z aktuálneho profilu na vibračný.



Rýchla voľba telefónneho čísla

Po otvorení telefónu aktivujete podržaním jedného postranného tlačidla () rýchlu voľbu telefónneho čísla.

Kvalita signálu

Silu signálu ukazuje indikátor signálu () na displeji telefónu. Sila signálu sa môže meniť, najmä vnútri budov. Ak sa presuniete k oknu, príjem signálu sa môže zlepšiť.

Písanie textu

Pomocou alfanumerických tlačidiel klávesnice telefónu môžete písať text. Napríklad môžete ukladať mená do telefónneho zoznamu, písať správy, vytvoriť osobný pozdrav alebo vkladať udalosti do kalendára.

Telefón umožňuje tieto možnosti písania textu:


Režim T9

Tento režim umožňuje písať slová pomocou jedného stlačenia tlačidla pre každé písmeno. Každé tlačidlo na klávesnici telefónu obsahuje viac ako jedno písmeno. Režim T9 automaticky porovnáva stlačenia tlačidiel s interným slovníkom a určí príslušné slovo, takže potrebujete omnoho menej stlačení ako pri režime klasickej klávesnice. Táto funkcia sa označuje ako prediktívny text.

Režim klasickej klávesnice (režim ABC)

V tomto režime vkladáte písmená opakovaným stláčaním príslušného tlačidla, až kým sa nezobrazí žiadané písmeno.

Číselný režim (režim 123)


Stlačením tlačidiel vkladáte príslušné čísla. Na zapnutie režimu 123 v textovom poli pridržte kláves , až kým sa nezobrazí informácia o zapnutí režimu 123.



Zmena textového režimu

1. Keď sa nachádzate v poli, ktoré umožňuje vloženie znakov, indikátor textového režimu je zobrazený v pravom dolnom rohu displeja.
2. Stlačením tlačidla zmeníte režim písania textu. Aktuálny režim je indikovaný symbolom v pravom hornom rohu displeja.

Režim písania textu

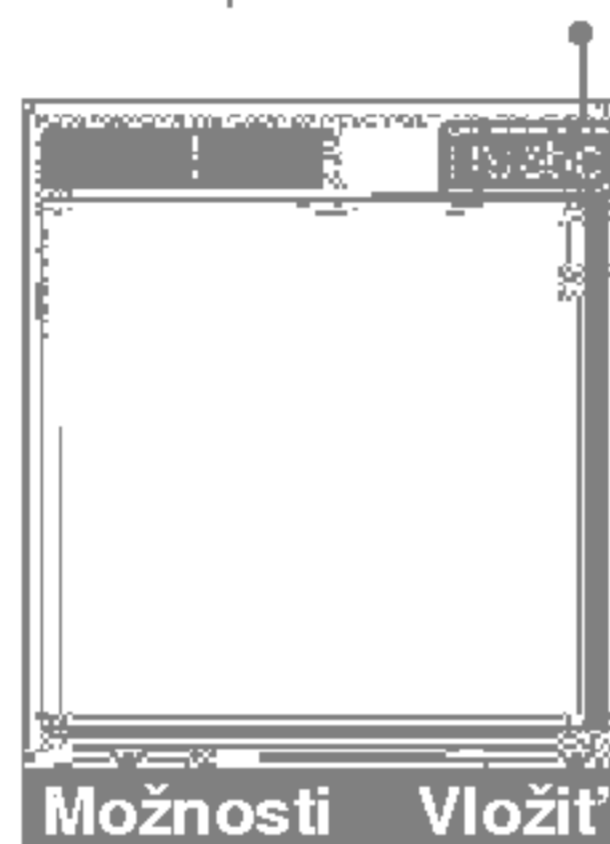

► Používanie režimu T9

Prediktívny režim písania textu T9 umožňuje písať slová jednoduchšie a s minimálnym počtom stlačených klávesov. Postupne so stláčaním jednotlivých tlačidiel telefón zobrazuje znaky, o ktorých predpokladá, že ich chcete napísať. Toto rozhodnutie uskutočňuje na základe vstavaného slovníka. Do slovníka môžete pridávať nové slová. Keď sú nové slová vložené, odráža sa to na priority jednotlivých ponúk zo slovníka.

1. Keď ste v režime T9, stláčajte tlačidlá až ; každé tlačidlo iba raz.

- Slovo sa mení s pribúdajúcimi písmenami. Nevšímajte si, čo je na displeji, až kým neskončíte s vkladáním písmen.
- Ak je slovo po skončení vkladania písmen stále nesprávne, pomocou dolného navigačného tlačidla si môžete vybrať zo slov v slovníku náležiacich k danej kombinácii tlačidiel.

Príklad (anglické nastavenie T9):

Stlačte na napísanie slova **Good**.




Stlačte a dolné navigačné tlačidlo na výber slova **Home**.


- Ak požadované slovo nie je v ponuke slovníka, vložte ho použitím režimu ABC.



- Jazyk režimu T9 si môžete vybrať. Stlačte ľavé kontextové tlačidlo [Možnosti] a vyberte voľbu Jazyky T9. Zvoľte požadovaný jazyk režimu T9. Režim T9 vypnete výberom voľby Vypnúť T9. Štandardne je režim T9 zapnutý.

2. Vložte celé slovo pred úpravou alebo vymazaním ľubovoľných písmen.

3. Dokončíte každé slovo medzerníkom – stlačením tlačidla . Ak chcete vymazať písmená, stlačte . Ak  podržíte, vymažú sa celé slová.




! Poznámka Na ukončenie písania textu bez jeho uloženia do pamäte stlačte . Telefón sa vráti do pohotovostného režimu.

► Používanie režimu ABC

Na písanie textu používajte tlačidlá  až .

1. Stlačte tlačidlo označené príslušným písmenom:

- jedenkrát pre prvé písmeno,
- dvakrát pre druhé písmeno a tak ďalej.

2. Na vloženie medzery stlačte jedenkrát tlačidlo . Na vymazanie písmen stlačte tlačidlo . Ak chcete vymazať celý displej, podržte tlačidlo .



Základné funkcie

! Poznámka Ďalšie podporované znaky nájdete v nasledujúcej tabuľke s alfanumerickými tlačidlami.

Tlačidlo	Znaky v poradí, v akom sa zobrazujú	
	Veľké písmená	Malé písmená
	., / ? ! - : ' " 1 @	., / ? ! - : ' " 1 @
	A B C Á Ä Ç Š Â Å Ć 2	a b c á ä ç š â å ć 2
	D E F Ď Ě ě Đ Ę 3	d e f đ é ě đ ě 3
	G H I Í Î 4	g h i í î 4
	J K L Ł Ľ £ 5	j k l ł ľ £ 5
	M N O Ń Ó Ň Ô Ö Ő 6	m n o ñ ó ñ ô ö ő 6
	P Q R S Ŕ Š Ŗ Ś 7	p q r s ŕ š ŕ ś 7
	T U V Ť Ú Ů Ţ Ü Ű 8	t u v ť ú ů ť ü ű 8
	W X Y Z Ý Ž Ž Ž 9	w x y z ý ž ž ž 9
	medzerník, 0 (podržať)	medzerník, 0 (podržať)

► Používanie režimu 123

Režim 123 umožňuje vkladať do textu čísla (napríklad telefónne číslo).

Stlačte tlačidlá prislúchajúce jednotlivým číslicam pred manuálnym prepnutím do príslušného textového režimu.

Telefónny zoznam

Do pamäte SIM karty si môžete ukladať telefónne čísla a k nim náležiacie mená.

Navyše do pamäte telefónu môžete uložiť 200 čísel a mien.

Pamäť SIM karty i telefónu sa v menu telefónneho zoznamu používa rovnakým spôsobom. (Pozri strany 44 – 48.)

Menu počas hovoru

Telefón poskytuje množstvo funkcií, ktoré môžete využívať počas hovoru. Na prístup k týmto funkciám počas hovoru stlačte ľavé kontextové tlačidlo [Možnosti].



Počas hovoru

Menu zobrazené na displeji počas hovoru sa líši od východiskového menu v pohotovostnom režime. Voľby sú opísané v nasledujúcom texte.


Uskutočnenie druhého hovoru

Z telefónneho zoznamu môžete vybrať ľubovoľné číslo a vytočiť ho. Stlačte pravé kontextové tlačidlo a vyberte voľbu Hľadať. Na uloženie vytočeného čísla do telefónneho zoznamu počas hovoru stlačte pravé kontextové tlačidlo a vyberte voľbu Pridať.


Prepínanie medzi dvomi hovormi

Na prepnutie medzi dvomi hovormi stlačte ľavé kontextové tlačidlo a vyberte voľbu Vymeniť.


Prijatie prichádzajúceho hovoru


Ak chcete prijať prichádzajúci hovor, stlačte tlačidlo . Telefón vás môže upozorniť na ďalší prichádzajúci hovor aj počas prebiehajúceho hovoru. V slúchadle sa ozve zvuk a displej signalizuje, že máte druhý hovor.

Táto funkcia sa volá Ďalší hovor na linke a k dispozícii je iba vtedy, ak ju podporuje sieť. Podrobnosti o tom, ako funkciu aktivovať a deaktivovať, nájdete v časti Ďalší hovor na linke [Menu 3-4-4] na strane 52.

Ak je Ďalší hovor na linke aktivovaný, môžete podržať prvý hovor a prijať druhý – stlačte  alebo ľavé kontextové tlačidlo a vyberte voľbu Podržať a Prijat'. Môžete ukončiť aktuálny hovor a prijať čakajúci hovor stlačením ľavého kontextového tlačidla a výberom voľby Ukončiť a Prijat'.

Odmietnutie prichádzajúceho hovoru

Prichádzajúci hovor odmietnete stlačením tlačidla .

Počas hovoru môžete odmietnuť prichádzajúci hovor stlačením ľavého kontextového tlačidla [Menu] a vybratím voľby Konferenčný hovor/Odmietnuť alebo stlačením tlačidla .



Stlmenie mikrofónu

Počas hovoru môžete stlmiť mikrofón stlačením ľavého kontextového tlačidla [Menu] a vybratím voľby Stlmiť. Mikrofón môžete opäť aktivovať stlačením ľavého kontextového tlačidla Zrušiť tlmenie. Keď je mikrofón stlmený, volajúci vás nepočuje, ale vy môžete počuť jeho.

Prepnutie tónov DTMF počas hovoru


Na zapnutie tónov DTMF počas hovoru stlačte ľavé kontextové tlačidlo a vyberte voľbu Zapnúť DTMF. Rovnakým spôsobom sa tóny DTMF vypínajú. Tóny DTMF umožňujú telefónu používať automatickú ústredňu.

Konferenčné hovory

Služba konferenčných hovorov umožňuje viesť hovor súčasne s viacerými volajúcimi za predpokladu, že operátor túto funkciu podporuje. Konferenčný hovor sa dá zostaviť len vtedy, keď máte jeden hovor aktívny a druhý podržíte, teda ak ste prijali obidva hovory. Keď je konferenčný hovor zostavený, osoba, ktorá ho zostavila,

môže hovory spojiť, ukončiť alebo rozdeliť (čo znamená odpojiť ich od konferencie, ale pokračovať v súkromnom hovore mimo nej). Na konferencii sa môže zúčastniť maximálne päť osôb. Kontrolu nad konferenčným hovorom má iba ten, kto ho zostavil, a iba ten k nemu môže pridávať ďalšie hovory.

Uskutočnenie druhého hovoru

Počas telefonovania môžete uskutočniť druhý hovor tak, že vložíte druhé číslo a stlačíte tlačidlo . Keď sa druhý hovor spojí, prvý sa automaticky podrží. Medzi hovormi prepínate stlačením ľavého kontextového tlačidla a výberom voľby Prenos.

Vytvorenie konferenčného hovoru

Dajte jeden hovor medzi čakajúce, a kým je druhý hovor aktívny, stlačte ľavé kontextové tlačidlo a vyberte voľbu Konferenčný hovor/ Pripojiť všetkých.



Podržanie konferenčného hovoru

Stlačte ľavé kontextové tlačidlo a vyberte voľbu Konferenčný hovor/ Podržať všetky.

Aktivácia podržaného konferenčného hovoru

Stlačte ľavé kontextové tlačidlo a vyberte voľbu Konferenčný hovor/ Pripojiť všetkých.

Pripojenie hovorov ku konferenčnému hovoru

Ak chcete k existujúcemu konferenčnému hovoru pripojiť ďalší hovor, stlačte ľavého kontextové tlačidlo a vyberte voľbu Konferenčný hovor/ Pripojiť všetkých.


Zobrazenie účastníkov konferenčného hovoru

Na zobrazenie telefónnych čísel účastníkov konferenčného hovoru na displeji telefónu použite horné a dolné navigačné tlačidlá.

Súkromný hovor počas konferenčného hovoru

Ak chcete hovoriť s jedným účastníkom konferenčného hovoru súkromne, vyberte jeho číslo a stlačte ľavé kontextové tlačidlo. Vyberte voľbu Konferenčný hovor/ Súkromný a ostatné hovory budú podržané.

Ukončenie konferenčného hovoru

Práve zobrazený účastník konferenčného hovoru sa dá odpojiť stlačením tlačidla . Stlačením ľavého kontextového tlačidla a výberom Konferenčný hovor/ Ukončiť konferenčný hovor ukončíte konferenčný hovor.

Stlačením ľavého kontextového tlačidla a výberom Konferenčný hovor/ Ukončiť všetky hovory ukončíte všetky aktívne aj podržané hovory.

Strom menu

Nasledujúce strany zobrazujú stromovú štruktúru menu a uvádzajú:

- ▶ Číslo klávesovej skratky priradenej ku každej voľbe menu.
- ▶ Stranu, kde môžete nájsť opis príslušnej funkcie.

Do vybratého menu sa môžete dostať použitím ľavého kontextového tlačidla [Menu], navigačnými tlačidlami a tlačidlom [OK]. Po stlačení ľavého tlačidla [Menu] a kombinácie číslíc sa skráteným spôsobom dostanete k požadovanému menu.



1. História hovorov (pozri str. 40)

- 1 Zmeškané hovory
- 2 Prijaté hovory
- 3 Volané hovory
- 4 Zmazať posledné hovory
- 5 Tarifikačia hovoru
- 6 Informácie GPRS



2. Adresár (pozri str. 44)

- 1 Hľadať
- 2 Pridať
- 3 Skupiny volajúcich
- 4 Rýchla voľba
- 5 Nastavenia
- 6 Kopírovať všetko
- 7 Zmazať všetko
- 8 Informácie



3. Nastavenia (pozri str. 49)

- 1 Budík
- 2 Dátum a čas
- 3 Nastavenia telefónu
- 4 Nastavenia hovoru
- 5 Bezpečnostné nastavenia
- 6 Nastavenia siete
- 7 Nastavenie GPRS
- 8 Pôvodné nastavenia



4. Fotoaparát (pozri str. 57)

- 1 Fotografovať
- 2 Odfotit oramovanu fotografiu
- 3 Sniť stále
- 4 Album fotografií
- 5 Nastavenia



5. Správy (pozri str. 63)

- 1 Nová správa
- 2 Prijaté správy
- 3 Orange Messenger
- 4 Emailová schránka
- 5 Koncepty
- 6 Odoslané správy
- 7 Vypočít' hlasovú poštu
- 8 Info služba
- 9 Šablóny
- 0 Nastavenia



6. Orange World (pozri str. 81)

- 1 E-mail
- 2 Kalendár
- 3 Označenie
- 4 Správy
- 5 Šport
- 6 Cestovanie
- 7 Film
- 8 Obrázky
- 9 Moje záložky
- 0 Nastavenia
- * Services +



7. Profily (pozri str. 83)

- 1 Normálny
- 2 Iba vibrovanie
- 3 Tichý
- 4 Hlasný
- 5 Slúchadlá



8. Album médií (pozri str. 85)



- 1 Hry a aplikácie
- 2 Obrázky
- 3 Zvuky
- 4 Ďalšie obrázky




9. Extra (pozri str. 87)

- 1 Bluetooth
- 2 Kalkulačka
- 3 Prevodník jednotiek
- 4 Svetový čas
- 5 Hlasový záznamník
- 6 Stav pamäte
- 7 Pomocník Orange



Telefón ponúka sadu funkcií, ktoré vám umožňujú prispôbiť si ho. Tieto funkcie sa nachádzajú v menu a podmenu a sú prístupné prostredníctvom dvoch kontextových tlačidiel označených [] a []. Každé menu a podmenu umožňuje prezrieť si a pozmeniť aktuálne nastavenia príslušných funkcií.

Úloha kontextových tlačidiel sa mení v závislosti od aktuálneho kontextu. Pomenovanie v spodnej časti displeja nad každým tlačidlom zobrazuje jeho aktuálnu úlohu.

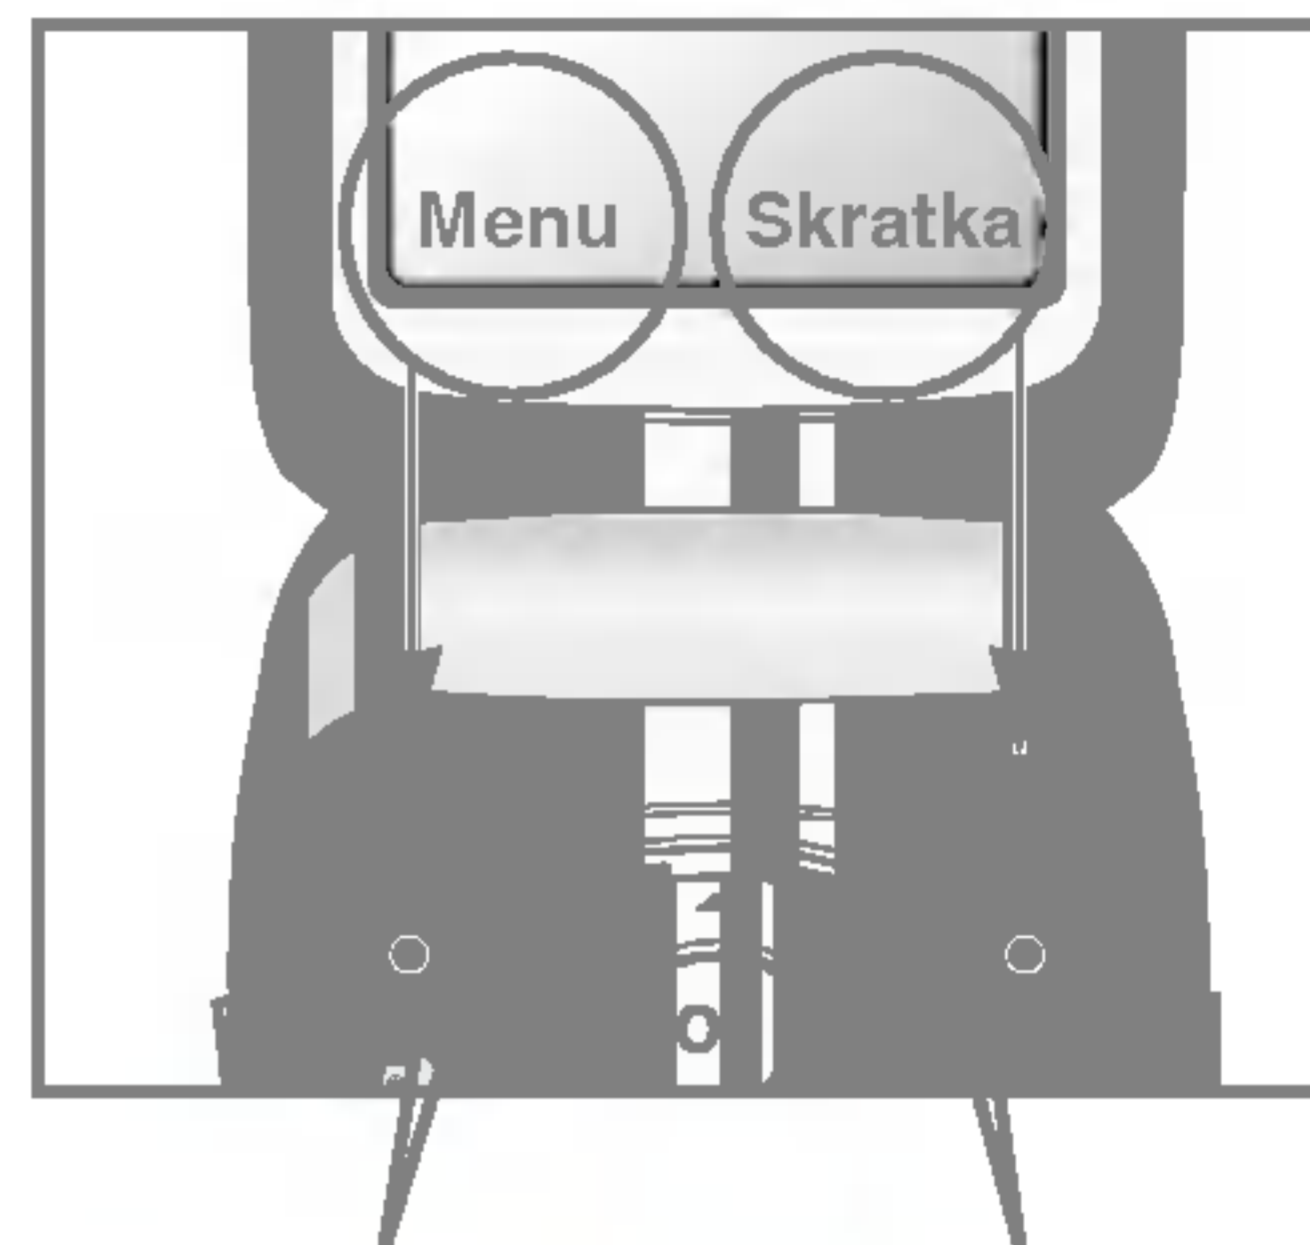


Stlačte ľavé kontextové tlačidlo na prístup do menu.

Stlačením pravého kontextového tlačidla vstúpíte do menu skratiek.

Záznamy o zmeškaných, prijatých a volaných hovoroch si môžete prezerať len v prípade, ak sieť podporuje technológiu zobrazenia čísla volajúceho (angl. Calling Line Identification Presentation – CLIP).

Číslo a meno (ak sú k dispozícii) sú zobrazené spolu s dátumom a časom, kedy bol hovor uskutočnený. Môžete si prezerať aj trvanie a cenu hovorov.

Stlačte tlačidlo Menu () a použitím navigačných tlačidiel vyberte voľbu História hovorov.

Zmeškané hovory Menu 1-1

Táto voľba umožňuje prezerať posledných desať neprijatých hovorov. Po stlačení ľavého kontextového tlačidla [Možnosti] môžete:

- Zobrazit' číslo (ak je k dispozícii) a zavolať naň alebo ho uložiť do telefónneho zoznamu.
- Pridať k telefónnemu číslu meno a uložiť ho do telefónneho zoznamu.

- Odoslať na toto číslo správu.
- Vymazať číslo zo zoznamu.

Prijaté hovory Menu 1-2

Táto voľba umožňuje prezerať si posledných desať prijatých hovorov. Po stlačení ľavého kontextového tlačidla [Možnosti] môžete:

- Zobrazit' číslo (ak je k dispozícii) a zavolať naň alebo ho uložiť do telefónneho zoznamu.
- Pridať k telefónnemu číslu meno a uložiť ho do telefónneho zoznamu.
- Odoslať na toto číslo správu.
- Vymazať číslo zo zoznamu.

Volané hovory Menu 1-3

Táto voľba umožňuje prezerať si posledných desať odchádzajúcich hovorov (prepojených aj neprepojených). Po stlačení ľavého kontextového tlačidla [Možnosti] môžete:

- Zobrazit' číslo (ak je k dispozícii) a zavolať naň alebo ho uložiť do telefónneho zoznamu.



- Pridať k telefónnemu číslu meno a uložiť ho do telefónneho zoznamu.
- Odoslať na toto číslo správu.
- Vymazať číslo zo zoznamu.

! **Poznámka** Všetky záznamy zo zoznamu môžete vymazať pomocou menu Zmazať posledné hovory [Menu 1-4].

Zmazať posledné hovory **Menu 1-4**

Použite túto voľbu, ak chcete vymazať zoznam zmeškaných hovorov, zoznam prijatých hovorov alebo zoznam volaných hovorov. Vybratím voľby Všetky hovory vymažete všetky uvedené zoznamy.

Tarifikácia hovoru

Menu 1-5

Trvanie hovoru

Menu 1-5-1

Použite túto voľbu na zobrazenie trvania prichádzajúcich a odchádzajúcich hovorov. V spodnej časti displeja si pri prechádzaní jednotlivými záznamami pomocou navigačných tlačidiel môžete prezerať trvanie jednotlivých hovorov. Záznam o dobe trvania hovorov môžete vynulovať pomocou menu Vynulovať všetko.

▶ **Posledný hovor:** Dĺžka posledného hovoru

▶ **Všetky hovory:** Dĺžka všetkých hovorov od posledného vymazania počítadla

▶ **Prijaté hovory:** Dĺžka prijatých hovorov

▶ **Volané hovory:** Dĺžka odchádzajúcich hovorov

▶ **Vynulovať všetko:** Vymaže dĺžky všetkých hovorov

! **Poznámka** Čas započítavaný operátorom môže byť odlišný v závislosti od možností siete, zaokrúhľovania pri spoplatňovaní a podobne.



Cena hovoru

Menu 1-5-2

Táto služba siete vám umožní zistiť cenu posledného hovoru a celkovú prevolanú čiastku. Cena hovoru je zobrazená v spodnej časti displeja. Na vymazanie počítadla vyberte menu Vynulovať všetko. Na potvrdenie voľby je potrebný kód PIN2.

- ❗ **Poznámka** Cena započítavaná operátorom môže byť odlišná v závislosti od možností siete, zaokrúhľovania pri spoplatňovaní a podobne.

Nastavenia

Menu 1-5-3

- ▶ **Nastaviť tarifu:** Môžete nastaviť druh meny a cenu za platobnú jednotku. Viac informácií o cene za jednotku hovoru získate od operátora. Na prístup do tohto menu je potrebný kód PIN2.

- ❗ **Poznámka** V prípade prevolania všetkých jednotiek nie je možné uskutočniť žiadny hovor s výnimkou tiesňových volaní. V závislosti od typu SIM karty potrebujete vložiť kód PIN2 na nastavenie nového limitu.

- ▶ **Nastaviť kredit:** Táto služba siete umožňuje obmedziť čiastku platenú za hovory vzhľadom na platobné jednotky. Výberom voľby Čítať zistíte aktuálny nastavený limit. Limit môžete zmeniť pomocou voľby Zmeniť.

- ▶ **Automatické zobrazovanie:** Táto služba siete automaticky zobrazí cenu posledného hovoru. Ak v menu Automatické zobrazovanie vyberiete voľbu Zapnúť, zobrazí sa cena posledného hovoru hneď po ukončení hovoru.

Informácie GPRS

Menu 1-6

Pomocou tejto voľby môžete zistiť množstvo dát prenesených sieťou cez GPRS a dobu pripojenia. (GPRS je z anglického výrazu General Packet Radio Service.)

Trvanie hovoru

Menu 1-6-1

Pomocou tejto voľby môžete zistiť dĺžku posledného hovoru a všetkých hovorov. Výberom menu Vynulovať všetko môžete vynulovať počítadlo trvania hovoru.



Objem dát

Menu 1-6-2


Umožňuje zistiť objem odoslaných a prijatých dát alebo ich celkový objem. Výberom menu **Vynulovať všetko** môžete vynulovať počítadlo objemu dát.

Do pamäte SIM karty si môžete ukladať telefónne čísla a k nim náležiacie mená. Okrem nich ešte môžete uložiť ďalších 200 čísel a mien do pamäte telefónu.

- Stlačte v pohotovostnom režime ľavé kontextové tlačidlo [Menu] a vyberte voľbu Adresár.

Hľadať

Menu 2-1

1. Stlačte v pohotovostnom režime dolné navigačné tlačidlo. Stlačte tlačidlo OK a vyberte voľbu Hľadať. Zobrazí sa požiadavka na vloženie mena.
2. Napíšte niekoľko začiatkových písmen mena, ktoré chcete vyhľadať, a stlačte ľavé kontextové tlačidlo [Hľadať].
 - ❗ **Poznámka** Telefónnym zoznamom môžete prechádzať aj od začiatku, ak stlačíte ľavé kontextové tlačidlo [Zoznam].
3. Po vyhľadaní požadovaného mena môžete stlačením tlačidla Odoslať () vytočiť číslo. Ak stlačíte ľavé kontextové tlačidlo [Možnosti], zobrazí sa toto menu:

- ▶ **Upraviť**: Upraví meno, číslo a priradenie do skupiny volajúcich.
- ▶ **Napísať krátku správu**: Použite túto voľbu, ak chcete na vybraté telefónne číslo napísať textovú správu.
- ▶ **Vytvoriť obrázkovú správu**: Použite túto voľbu, ak chcete na vybraté telefónne číslo napísať textovú správu.
- ▶ **Odoslať cez Bluetooth**: Odoslanie položiek adresára prostredníctvom prepojenia Bluetooth.
- ▶ **Kopírovať**: Použite túto voľbu, ak chcete kopírovať záznam zo SIM karty do pamäte telefónu alebo naopak.
- ▶ **Hlavné číslo**: Umožňuje vybrať najčastejšie používané telefónne číslo - číslo na mobilný telefón, domov alebo do práce. Nastavením tejto voľby sa vybraté číslo zobrazí ako prvé.
- ▶ **Zmazať**: Vymaže záznam z telefónneho zoznamu.



Pridat'

Menu 2-2

Pomocou tejto voľby vložíte do telefónneho zoznamu nový záznam.

K dispozícii sú dve pamäte: pamäť telefónu a pamäť SIM karty. Ak chcete vybrať pamäť, prejdite do menu Nastaviť pamäť [Menu 2-5-1]. Kapacita pamäte telefónu je 200 záznamov. Meno v pamäti telefónu môže mať 20 znakov. Kapacita pamäte SIM karty závisí od typu SIM karty.

1. Vyberte voľbu Pridat' a stlačte [OK].
3. Nové záznamy môžete ukladať do pamäte SIM karty alebo do pamäte telefónu. Ak chcete vybrať pamäť, prejdite do menu Nastaviť pamäť [Menu 2-5-1].

► Uloženie nového záznamu do pamäte SIM karty

Napíšte meno a číslo a vyberte priradenie do skupiny volajúcich (závisí od typu SIM karty).

► Uloženie nového záznamu do pamäte telefónu

Napíšte meno, čísla, emailové adresy a poznámky a vyberte priradenie do skupiny volajúcich.

Skupiny volajúcich

Menu 2-3

Záznamy adresára môžete zaradiť do siedmich skupín. Túto funkciu môžete použiť na priradenie vyzváňacieho tónu a grafickej ikony pre každú skupinu. Umožní vám to identifikovať volajúcich z každej skupiny.

1. Vyberte Skupiny volajúcich. Zobrazia sa všetky skupiny: Rodina, Priatelia, Kolegovia, VIP, Skupina 1, Skupina 2 a Iné.
2. Stlačením ľavého kontextového tlačidla (Zvoliť) vyberte skupinu, ktorú chcete upravovať. Zobrazí sa toto podmenu (okrem prípadu, keď si vyberiete skupinu Iné):

► **Zoznam členov:** Zobrazí zoznam členov príslušnej skupiny volajúcich.



- ▶ **Vyzváňací tón skupiny:** Slúži na výber vyzváňacieho tónu skupiny volajúcich. Ak vám zavolá niekto z danej skupiny, bude použitý vybratý vyzváňací tón.
- ▶ **Ikona skupiny:** Použite, ak chcete, aby sa vybratá ikona zobrazovala zakaždým, keď vám zavolá niekto z danej skupiny.
- ▶ **Pridať člena:** Vloží do skupiny nového člena.
- ▶ **Odstrániť člena:** Vymaže člena z danej skupiny.
- ▶ **Premenovať:** Priradí skupine nové meno.

Rýchla voľba

Menu 2-4

Ľubovoľnému číslu z telefónneho zoznamu môžete priradiť ľubovoľné z tlačidiel 2 až 9. Toto číslo potom vytočíte podržaním priradeného tlačidla po dobu 2 – 3 sekúnd.

1. Vyberte menu Rýchla voľba a stlačte [Zvoliť].
2. Ak chcete k telefónnemu číslu priradiť rýchlu voľbu, stlačte ľavé kontextové tlačidlo [Zvoliť]. Vyhľadajte meno v telefónnom zozname.

3. Stlačením ľavého kontextového tlačidla [Možnosti] môžete zmeniť alebo vymazať číslo rýchlej voľby, vytočiť ho alebo odoslať naň správu.

Nastavenia

Menu 2-5

Nastaviť pamäť


Telefónne čísla sa môžu ukladať do pamäte telefónu alebo do pamäte SIM karty. Ak zvolíte Variabilne, bude sa váš telefón pri každom zázname pýtať, kam ho chcete uložiť.

Hľadať podľa

V tomto menu môžete nastaviť, aby telefón vyhľadával kontakty v telefónnom zozname podľa Mena alebo podľa Čísla. Ak zvolíte Variabilne, bude sa váš telefón zakaždým pýtať, ako má vyhľadávať.



Zobrazit' možnosti

Nalistujte a vyberte Zobrazit' možnosti, potom stlačte  [Zvoliť].

- **Iba meno:** V telefónnom zozname sa zobrazia len mená.
- **S obrázkami:** V telefónnom zozname sa zobrazia informácie aj s obrázkami.
- **Meno a číslo:** V telefónnom zozname sa zobrazia mená a čísla.

Kopírovať všetko

Menu 2-6

V tomto menu môžete kopírovať záznamy zo SIM karty do pamäte telefónu alebo naopak.


- ▶ **Zo SIM karty do telefónu:** Použite túto voľbu, ak chcete kopírovať záznam zo SIM karty do pamäte telefónu.
- ▶ **Z telefónu na SIM kartu:** Použite túto voľbu, ak chcete kopírovať záznam z pamäte telefónu na SIM kartu.

Dostupné sú tieto voľby:

- **Zachovať originál:** Kopírované telefónne čísla sa zachovávajú aj na pôvodnom umiestnení.
- **Zmazať originál:** Kopírované telefónne čísla sa vymažú z pôvodného umiestnenia.

Zmazať všetko

Menu 2-7

Môžete zmazať všetky záznamy na SIM karte a v telefóne. Táto funkcia vyžaduje Bezpečnostný kód. Na návrat do pohotovostného režimu stlačte tlačidlo .

Informácie

Menu 2-8

- ▶ **Číslo služby (závisí od typu SIM karty):** Použite na zobrazenie servisných čísel priradených operátorom (ak SIM karta podporuje túto funkciu). Často tu nájdete čísla na pohotovosť, telefonické informácie a číslo hlasovej schránky.
 1. Vyberte voľbu Číslo služby.
 2. Zobrazia sa názvy dostupných služieb.



3. Použite horné/ dolné navigačné tlačidlo na výber služby. Stlačte .

- ▶ **Stav pamäte:** Môžete zistiť zaplnenie pamäte SIM karty a pamäte telefónu.
- ▶ **Vlastné číslo:** Použite na zobrazenie telefónneho čísla SIM karty (vášho čísla).
- ▶ **Vizitka:** Môžete poslať svoju elektronickú vizitku telefónom. Ak chcete vytvoriť vizitku, postupujte takto:
 1. Stlačte ľavé kontextové tlačidlo [Upraviť].
 2. Uvedte meno, číslo mobilného telefónu, číslo do práce, faxové číslo a emailovú adresu.







Stlačte tlačidlo Menu () a použitím navigačných tlačidiel vyberte voľbu Nastavenia.

Budík

Menu 3-1

K dispozícii je päť budíkov. Nastavte budík na zvonenie v určenom čase.

Po výbere budíka môžete použitím ľavého kontextového tlačidla [Zvoliť]:

-  **Zapnúť/ Vypnúť:** Vyberte Zapnúť použitím ľavého/ pravého navigačného tlačidla. Na vypnutie budíka vyberte možnosť Vypnúť.
-  **Čas:** Pomocou numerických tlačidiel vložte čas, kedy sa má spustiť budík.
-  **Opakovať:** Vyberte jednu z možností Raz, Po - Pia, Po - So a Každý deň pomocou ľavého/ pravého navigačného tlačidla.
-  **Tón budíka:** Vyberte melódiu vyzváňania pomocou ľavého/ pravého navigačného tlačidla.

5. Stlačte ľavé kontextové tlačidlo [OK].

6. Pomenovanie budíka môžete aj upraviť. Po vložení mena stlačte ľavé kontextové tlačidlo [OK].

Keď aktivujete budík, v pohotovostnom režime sa zobrazí ikona .

Vyzváňacia melódia sa spustí v čase nastavenom na budenie.

► Na vypnutie budíka stlačte pravé kontextové tlačidlo [Koniec].

Dátum a čas

Menu 3-2

Táto voľba umožňuje nastaviť zobrazovaný dátum a čas.

K dispozícii sú tieto voľby:

Nastaviť dátum

Menu 3-2-1

Vložte deň, mesiac a rok. Formát dátumu môžete zmeniť v menu Formát dátumu.



Formát dátumu

Menu 3-2-2

DD/MM/RRRR (deň/mesiac/rok)

MM/DD/RRRR (mesiac/deň/rok)

RRRR/MM/DD (rok/mesiac/deň)

Nastaviť čas

Menu 3-2-3

Slúži na nastavenie aktuálneho času. Formát času si môžete vybrať pomocou menu Formát času.

Formát času

Menu 3-2-4

24-hodinový

12-hodinový

Nastavenia telefónu

Menu 3-3

Mnoho funkcií telefónu si môžete upraviť tak, aby spĺňali vaše požiadavky. Tieto funkcie sú prístupné prostredníctvom menu Nastavenia telefónu.

Nastavenia displeja

Menu 3-3-1

- ▶ **Tapeta:** Vyberte pozadie malého a veľkého displeja, ktoré sa bude zobrazovať v pohotovostnom režime.
- ▶ **Farba menu:** V telefóne si môžete vybrať spomedzi štyroch farieb menu. Na nastavenie farby použite tlačidlo [Zvoliť].
- ▶ **Uvítanie:** Ak vyberiete voľbu Zapnúť, môžete v tomto menu napísať alebo upraviť krátky text zobrazený v pohotovostnom režime.
- ▶ **Podsvietenie:** Nastavte podsvietenie displeja. Ak túto funkciu vypnete, dosiahnete malý nárast výdrže batérie.
- ▶ **Okno s informáciami:** Ak potvrdíte túto funkciu, v spodnej časti displeja sa bude zobrazovať informácia o aktuálnom nastavení menu označeného kurzorom bez toho, aby ste doň museli vstupovať.
- ▶ **Meno siete:** Ak zvolíte Zapnúť, v pohotovostnom režime sa bude na displeji zobrazovať názov operátora.



Jazyky

Menu 3-3-2

V tomto menu si môžete vybrať jazyk menu. Ak vyberiete voľbu Automaticky, jazyk bude vybraný podľa jazyka, ktorý používa SIM karta. Ak telefón nepodporuje jazyk SIM karty, bude vybraná angličtina.

Nastavenia hovoru

Menu 3-4

Slúži na nastavenie volieb súvisiacich s hovormi.

Presmerovanie hovoru

Menu 3-4-1

Ak je táto služba siete aktivovaná, môžete presmerovať prichádzajúce hovory na iné telefónne číslo, napríklad do hlasovej schránky. Bližšie informácie získate od operátora. Vyberte jednu z možností presmerovania, napríklad Ak mám obsadené, a hovory budú presmerované, ak je vaše telefónne číslo obsadené alebo ak odmietnete prichádzajúci hovor. Môžete si vybrať z týchto možností:

Všetky datovehovory: Presmeruje všetky hovory.

Ak mám obsadené: Presmeruje hovor, ak práve telefonujete.

Ak neodpovedám: Presmeruje hovor, ak ho neprijmete.

Ak som mimo dosahu: Presmeruje hovor, ak je telefón vypnutý alebo mimo pokrytia sieťou.

Všetky dátové hovory: Presmeruje hovory na číslo s pripojením na počítač.

Všetky faxové hovory: Presmeruje hovory na číslo s pripojením na fax.

Každá z možností má takéto podmenu:

► **Aktivovať:** Aktivuje príslušnú službu.

- **Do centra hlasovej pošty:** Presmeruje hovor do centra hlasových správ. Táto funkcia sa nevzťahuje na voľby Všetky dátové hovory a Všetky faxové hovory.

- **Na iné číslo:** Určte číslo, na ktoré budú hovory presmerované.

- **Na obľúbené číslo:** Môžete zistiť posledných päť čísel na presmerovanie.





- ▶ **Zrušiť:** Zruší vybraté presmerovanie.
- ▶ **Zobraziť stav:** Zobrazí aktuálne nastavenie služby.

Zrušiť všetko: Zruší všetky nastavenia presmerovaní.

Režim prijatia hovoru Menu 3-4-2

Vyberte požadovaný režim prijatia hovoru.

- ▶ **Otvorenie telefónu:** Hovor môžete prijať otvorením telefónu.
- ▶ **Stlače ľubovoľne tlačidlo:** Hovor môžete prijať stlačením ľubovoľného tlačidla okrem tlačidla  a pravého kontextového tlačidla ().
- ▶ **Iba tlačidlo Odoslať:** Hovor môžete prijať len stlačením tlačidla Odoslať.

Odoslať vlastné číslo Menu 3-4-3

Táto služba siete vám umožní zvoliť si, či chcete, aby bolo vaše číslo viditeľné alebo skryté pre osobu, s ktorou voláte.

Ak chcete obnoviť nastavenia telefónu, ktoré ponúka operátor, zvolte Nastaviť podľa siete.

Ďalší hovor na linke (služba siete) Menu 3-4-4

Sieť vás upozorní na prichádzajúci hovor, ak práve telefonujete. Vyberte voľbu Aktivovať na aktivovanie tejto služby, voľbu Zrušiť na deaktivovanie služby alebo voľbu Zobrazíť stav na zobrazenie aktuálneho nastavenia tejto služby.

Tón po minúte Menu 3-4-5

Keď je táto funkcia aktivovaná, telefón pípnutím oznámi každú minútu odchádzajúceho hovoru, aby vás informoval o jeho dĺžke.



Automatické opakované vytáčanie

Menu 3-4-6

Ak aktivujete túto funkciu, telefón bude v prípade neúspešného spojenia opakovať vytáčanie čísla, maximálne päťkrát.

Bezpečnostné nastavenia

Menu 3-5

Na ochranu telefónu sa používajú rôzne heslá. Bližšie informácie o nich nájdete na strane 25-26.

Vyžiadanie kódu PIN

Menu 3-5-1

Ak je aktivovaná voľba Vyžiadanie kódu PIN, musíte vložiť kód PIN zakaždým, keď zapnete telefón. Takže osoba, ktorá nepozná kód PIN, nemôže používať telefón bez vášho povolenia.

! Poznámka Pred vypnutím funkcie vyžiadania kódu PIN musíte vložiť platný kód PIN.

K dispozícii sú tieto možnosti:

- **Zapnúť:** V tomto prípade musíte vložiť kód PIN zakaždým, keď zapnete telefón.

- **Vypnúť:** Telefón sa po zapnutí automaticky pripojí k sieti.

Zámka telefónu

Menu 3-5-2

Keď je aktivovaná funkcia uzamknutia telefónu, telefón je zablokovaný a vy musíte vložiť heslo telefónu zakaždým, keď ho zapnete. Výrobné prednastavenie hesla je „0000“. Ak chcete heslo zmeniť, pozrite si menu Zmeniť kódy - Bezpečnostný kód [Menu 3-5-5-1]. Po vložení správneho kódu môžete telefón normálne používať, až kým ho opäť nevypnete.

Blokovanie hovoru

Menu 3-5-3

Blokovanie hovorov umožňuje zakázať vytáčanie a prijímanie hovorov z telefónu. Na túto funkciu je potrebné blokované heslo, ktoré získate od operátora.

- ▶ **Všetky odchádzajúce:** Z telefónu nebude možné telefonovať.
- ▶ **Odchádzajúce medzinárodné:** Z telefónu nebude možné telefonovať do zahraničia.



- ▶ **Medzinárodné v zahraničí:** Keď ste v zahraničí a využívate službu roamingu, môžete volať len na čísla v danej krajine a do domovskej krajiny (krajiny, kde má domovské sídlo váš operátor).
- ▶ **Všetky prichádzajúce:** Nemožno prijímať žiadne hovory.
- ▶ **Prichádzajúce v zahraničí:** Telefón nemôže prijímať hovory, ak ste v zahraničí a využívate služby roamingu.
- ▶ **Zrušiť všetko:** Všetky blokovania hovorov budú deaktivované, môžete prijímať a uskutočňovať všetky hovory.
- ▶ **Zmeniť heslo:** Umožňuje nastaviť alebo zmeniť heslo blokovania hovorov. Vložte platné heslo a potom napíšte nové. Nové heslo musíte potvrdiť opakovaným vložením.

❗ **Poznámka** Na používanie služby Blokovanie hovorov je potrebné vložiť heslo siete. Počas blokovania hovorov je v niektorých sieťach umožnené volanie na určité pohotovostné čísla.

Pevná voľba (závisí od SIM) Menu 3-5-4

Ak SIM karta podporuje túto funkciu, môžete ju použiť na obmedzenie odchádzajúcich hovorov na vybrané telefónne čísla. Na jej nastavenie je potrebné vložiť kód PIN2.

K dispozícii máte tieto možnosti:

- ▶ **Aktivovať:** Po zvolení tejto voľby bude možné volať len na čísla uložené v telefónnom zozname pevnej voľby. Na potvrdenie je potrebný kód PIN2.
- ▶ **Zrušiť:** Zruší obmedzenie odchádzajúcich hovorov.
- ▶ **Zoznam čísel:** Zobrazí zoznam čísel pevnej voľby.

❗ **Poznámka** Kód PIN2 nemajú všetky SIM karty. Ak ho vaša SIM karta nemá, toto menu sa nezobrazí.



Zmeniť kódy

Menu 3-5-5

Táto voľba umožňuje zmeniť aktuálne kódy. Pred vložením nového kódu je potrebné najprv vložiť platný kód.

Táto voľba sa používa na zmenu prístupových kódov: PIN1, PIN2, Bezpečnostný kód

! **Poznámka** PIN = Osobné identifikačné číslo (angl. Personal Identification Number)

Nastavenia siete

Menu 3-6

Voľba Nastavenia siete umožňuje zistiť, ktorá z možností roamingu je aktivovaná (ak používate telefón v zahraničí): Automaticky, Ručne, Preferované.

! **Poznámka** Inú sieť je možné vybrať iba v prípade, ak má táto sieť platnú roamingovú zmluvu s vašou domácou sieťou, resp. s vaším operátorom.

Automaticky

Menu 3-6-1

Použité v prípade, ak chcete, aby telefón automaticky vyhľadal a vybral sieť dostupnú vo vašej oblasti. Do tohto režimu sa telefón vráti aj po každom vypnutí.

Ručne

Menu 3-6-2

Ak si chcete vybrať sieť zo zoznamu sietí, použite túto voľbu. Ak sa pripojenie na manuálne vybratú sieť preruší, telefón to oznámi chybovým tónom a požiada vás, aby ste vybrali sieť znova. Vybratá sieť musí mať platnú roamingovú zmluvu s vašou domácou sieťou, tzn. s operátorom, ktorý vydal SIM kartu. Telefón vám umožní vybrať inú sieť v prípade, ak sa mu nepodarí pripojiť k vybratej sieti. Ak telefón vypnete, ručná voľba sa prepne na automatickú.



Preferované

Menu 3-6-3

V tomto menu si môžete nastaviť zoznam preferovaných sietí, do ktorých sa telefón pokúsi prihlásiť skôr ako do ostatných. Tento zoznam sa vytvára z preddefinovaného zoznamu známych sietí.

Nastavenie GPRS

Menu 3-7

GPRS (General Packet Radio Service) je technológia, ktorá umožňuje mobilným telefónom odosielať a prijímať dáta cez sieť mobilných telefónov. GPRS je dátový nosič, ktorý umožňuje bezdrôtový prístup k dátam internetu.

Pred používaním technológie GPRS:

- ▶ Musíte si zriadiť službu GPRS. Informácie o dostupnosti a zriadení GPRS získate od operátora.
- ▶ Musíte uložiť nastavenia potrebné na aplikácie GPRS.

Ak vyberiete voľbu Zapnúť a sieť podporuje GPRS, telefón sa prihlási do siete GPRS. Od tejto chvíle bude zasielanie krátkych správ prebiehať cez GPRS. Prenos aktívneho dátového spojenia bude rýchlejší (napríklad odoslanie a prijatie emailu). Ak vyberiete voľbu V prípade potreby, telefón použije prenos GPRS, iba ak spustíte aplikáciu alebo činnosť, ktorá ho vyžaduje. Spojenie GPRS sa ukončí, hneď ako ho nebude vyžadovať žiadna aplikácia.

- ❗ **Poznámka** Ak ste v oblasti, kde nie je dostupné GPRS a máte vybratú voľbu Automaticky, telefón sa bude opakovane pokúšať nadviazať spojenie.

Pôvodné nastavenia

Menu 3-8

V tomto menu môžete obnoviť pôvodné nastavenia telefónu. Postupujte takto:

1. Vyberte voľbu Pôvodné nastavenia.
2. Vložte štvormiestny bezpečnostný kód.

- ❗ **Poznámka** Bezpečnostný kód je prednastavený na „0000“. Informácie o zmene kódu nájdete na strane 55.



Mobilný telefón F2400 má vstavaný fotoaparát s funkciami priblíženia, nastavenia farebnej škály a sekvenčného snímania.

Fotografovať

Menu 4-1

Stlačte tlačidlo menu  a postupne vyberte **Fotoaparát** → **Fotografovať** alebo v pohotovostnom režime stlačte a podržte tlačidlo Fotoaparát . Aktivuje sa režim Fotoaparát a na displeji sa zobrazí objekt, ktorý môžete odfotiť.




Okno menu Voľby zobrazenia

Pred fotografovaním môžete nastaviť tieto hodnoty:


- 1. Digitálne priblíženie (■):** x1, x2, x4, x8
- 2. Odtieň fotky (■):** Farebná/ Sépiovo hnedá/ Čiernobiela
- 3. Jas (■):** +2, +1, 0, -1, -2
- 4. Časovač (■):** Vypnutý, 3 sek., 5 sek.
- 5. Pamäť (■):** Zobrazí aktuálny stav zaplnenia pamäte.
! Poznámka Ak je pamäť plná, zobrazí sa správa „Pamäť je plná“ a nemôžete uložiť fotku. Vytvorte miesto vymazaním starých fotiek v zložke **Album** fotografií.
- 6. Svetlo (■):** Pomocou horného/ dolného navigačného tlačidla vyberte nastavenie zapnúť (■)/ vypnúť (■) osvetlenie.
- 7. Rozlíšenie (■):** 640x480(VGA), 320x240(QVGA), 128x160(displej), 48x48(Adresár)
- 8. Kvalita obrazu (■):** Fine (Vysoká)/ Normal (Normálna)/ Basic (Základná).



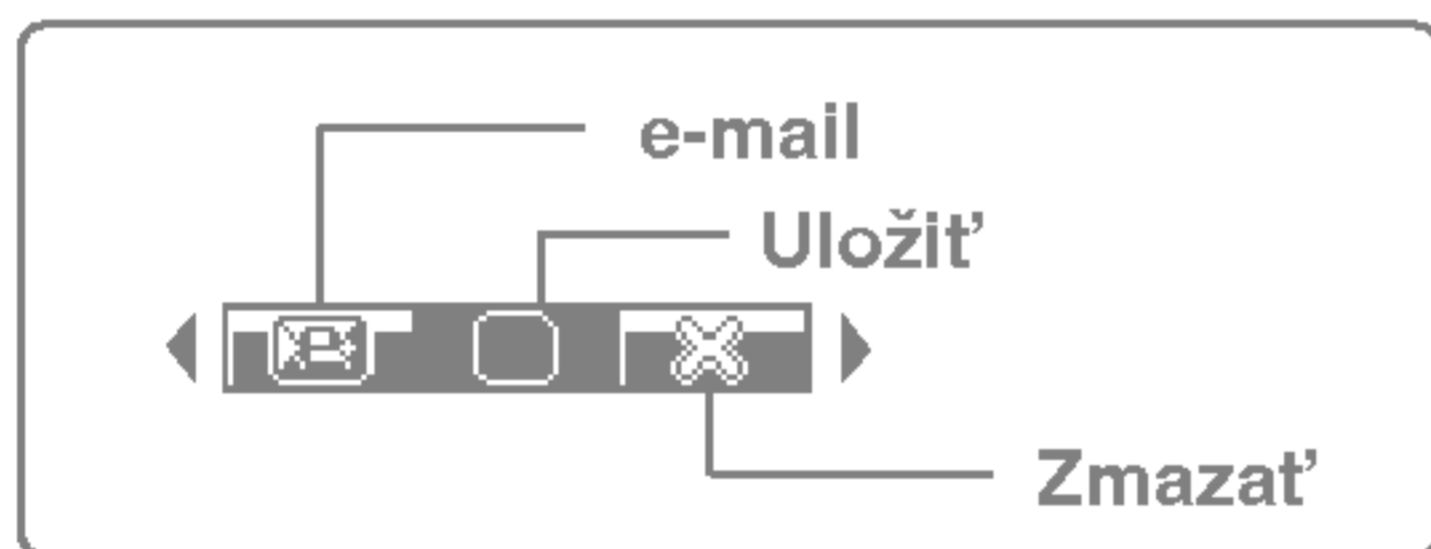

1. Zobrazte na stred požadované menu volieb použitím ľavého/ pravého navigačného tlačidla.
2. Pomocou horného/dolného navigačného tlačidla vyberte požadovanú hodnotu.
3. Po ukončení nastavenia volieb fotoaparátu zaostrite na predmet, ktorý chcete odfotiť, a stlačte tlačidlo fotoaparátu alebo tlačidlo OK. Odfotí sa obrázok a zobrazí sa toto okno menu:

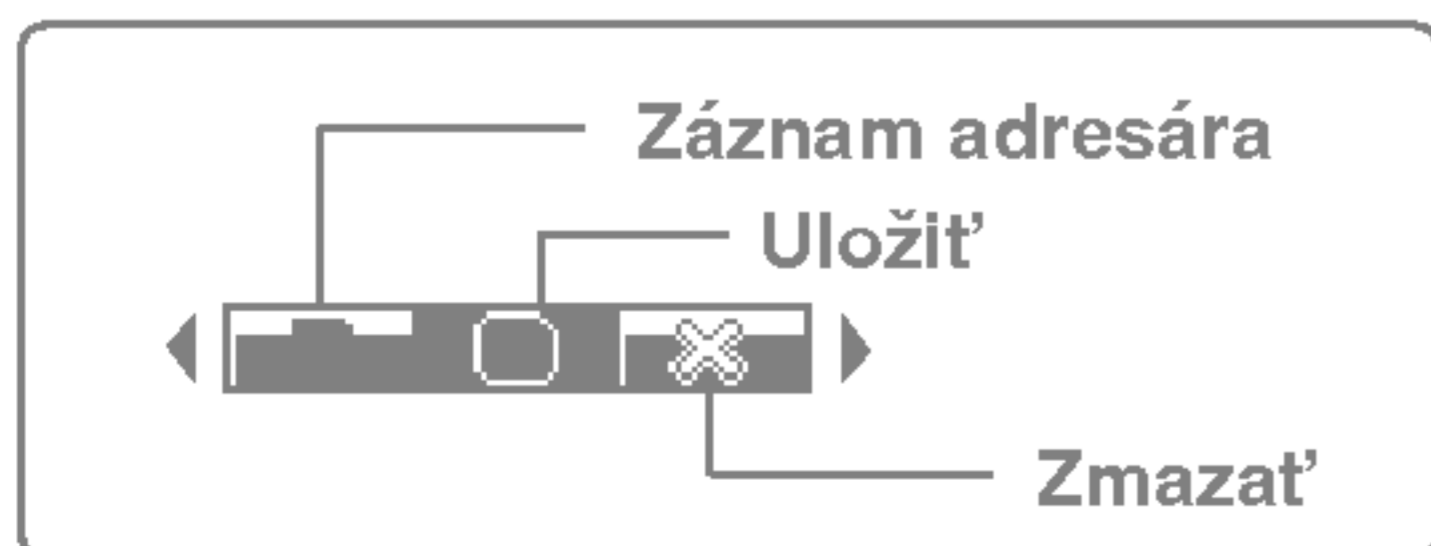

- ! Poznámka** Keď je pri rozlíšení nastavená možnosť 48x48 (Adresár), zobrazí sa v menu toto okno:




Ak je aktivovaná voľba Automatické ukladanie [Menu 4-5-3], odfotený obrázok sa automaticky uloží bez zobrazenia tohto okna menu (pozri str. 61).

4. Ak chcete uložiť obrázok, umiestnite do stredu  a stlačte tlačidlo OK. Ak nechcete uložiť obrázok, umiestnite do stredu  a stlačte tlačidlo OK.

Výberom položky  môžete odoslať obrázok e-mailom.

Obrázok môžete tiež poslať pomocou multimedialnej správy vybratím .

Ďalšie informácie týkajúce sa obrazových správ a písania e-mailov nájdete na stranách 65 – 66.

Po odfotografovaní môžete obrázok s rozlíšením 48x48 (Adresár) priamo uložiť do adresára výberom položky .



Odfotit oramovanu fotografiu

Menu 4-2

Môžete využiť fotenie do siedmich prednastavených šablón. Stlačte tlačidlo Menu a pomocou navigačných tlačidiel postupne vyberte voľby **Fotoaparát** → **Fotografovať cez šablónu**.




Okno menu Možnosti zobrazenia

Pred fotením môžete nastaviť tieto voľby:



- 1. Šablóna (■):** Vyberte požadovanú šablónu spomedzi siedmich prednastavených.
- 2. Kvalita obrazu (■):** Fine (Vysoká)/ Normal (Normálna)/ Basic (Základná).

- 3. Odtieň fotky (■):** Farebná/ Sépiovo hnedá/ Čiernobiela
- 4. Jas (■):** -2, -1, 0, +1, +2
- 5. Digitálne priblíženie (■):** x1, x2, x4
- 6. Časovač (■):** Vypnutý, 3 sek., 5 sek.
- 7. Pamäť (■):** Zobrazí aktuálny stav zaplnenia pamäte.
- 8. Svetlo (■):** Pomocou horného/ dolného navigačného tlačidla vyberte nastavenie zapnúť (■)/ vypnúť (■) osvetlenie.

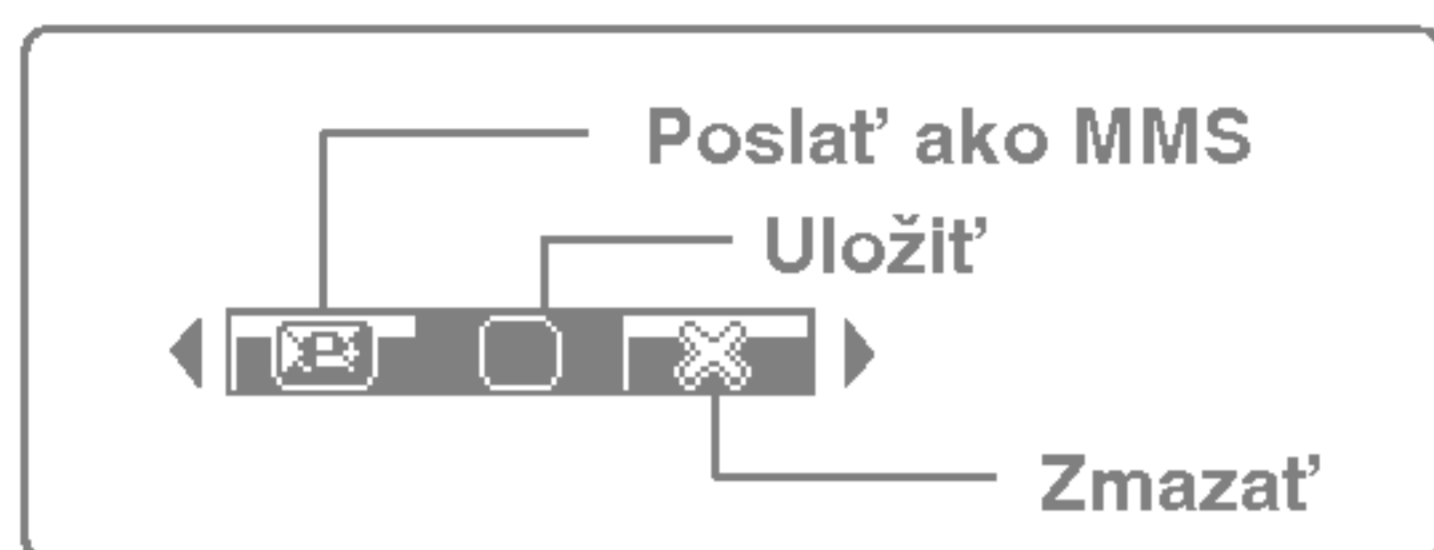
1. Zobrazte na stred požadované menu volieb použitím ľavého/pravého navigačného tlačidla.
2. Pomocou horného/ dolného navigačného tlačidla vyberte požadovanú hodnotu.
3. Po ukončení nastavenia volieb fotoaparátu zaostríte na predmet, ktorý chcete odfotiť, a stlačte tlačidlo fotoaparátu alebo tlačidlo OK. Odfotí sa obrázok a zobrazí sa toto okno menu:



- ❗ **Poznámka** Ak je aktivovaná voľba Automatické ukladanie [Menu 4-5-3], odfotený obrázok sa automaticky uloží bez zobrazenia tohto okna menu (pozri str. 61).



4. Ak chcete uložiť obrázok, umiestnite  do stredu a stlačte tlačidlo OK. Ak nechcete uložiť obrázok, umiestnite  do stredu a stlačte tlačidlo OK.

Obrázok môžete odoslať e-mailom výberom položky .

Obrázok môžete tiež poslať pomocou multimedialnej správy vybratím .

Snimat stale

Menu 4-3

Táto funkcia umožňuje odfoťiť maximálne 9 obrázkov za sebou. Fotky si môžete prezrieť pomocou , , uložíte ich stlačením .

Album fotografií

Menu 4-4

Všetky fotografie sa uložia v tomto menu. Fotografie sú usporiadané v položkách **Normálne fotografie**, **Orámované fotografie** a **Fotografie telefónneho zoznamu**. Položka **Všetky fotografie** umožňuje zobrazit' všetky fotografie. Do nasledujúceho podmenu sa môžete dostať stlačením ľavého kontextového tlačidla [Možnosti].

- ▶ **Niekoľko zobrazení:** Na displeji môžete naraz zobrazit' maximálne 9 zmenšených fotiek.
- ▶ **Napísať emailovú správu:** Fotografiu môžete poslať e-mailom.
- ▶ **Vytvorit' obrazkovu správu:** Fotku môžete odoslať ako MMS.



- ▶ **Nastaviť ako tapetu:** Fotku môžete nastaviť ako pozadie displeja.
- ▶ **Prezentácia:** Fotky si môžete prezrieť ako prezentáciu, ktorú môžete kedykoľvek zastaviť ľavým kontextovým tlačidlom.
- ▶ **Zmazať:** Vybratú fotku môžete vymazať.
- ▶ **Upraviť názov:** Umožňuje upraviť názov fotky.

Nastavenia

Menu 4-5

Stav pamäte

Menu 4-5-1

V tomto menu môžete zistiť stav zaplnenia pamäte telefónu.

Vyprázdniť album

Menu 4-5-2

Toto menu použite na vymazanie všetkých fotiek. Voľbu musíte potvrdiť.

Uložiť automaticky

Menu 4-5-3

Ak zapnete túto funkciu, odfotené obrázky sa uložia automaticky bez zobrazenia okna menu Uložiť.

<Fotografovanie so zatvoreným telefónom>



1. Ak chcete aktivovať malý displej, stlačte a podržte postranné tlačidlo fotoaparátu.
2. Ak sa chcete otvoriť menu fotoaparátu, znovu stlačte a podržte postranné tlačidlo fotoaparátu. Zobrazí sa ďalšie podmenu.

Vyberte požadované menu prostredníctvom postranných tlačidiel a voľbu potvrdíte tlačidlom fotoaparátu.





1. Fotografovať

Táto položka sa vyberá pri fotografovaní autoportrétu. Ak chcete odfotografovať obrázok, stlačte postranné tlačidlo fotoaparátu. Do ponuky fotoaparátu sa vrátite stlačením a podržaním postranného tlačidla fotoaparátu.

2. Prezentácia

Postupné zobrazenie všetkých obrázkov v **albume fotografií**. Na predchádzajúce alebo nasledujúce obrázky sa môžete presunúť manuálne pomocou postranných tlačidiel nahor/ nadol. Ak chcete zastaviť prezentáciu a vrátiť sa späť do menu fotoaparátu, stlačte postranné tlačidlo fotoaparátu.

3. Osvetliť

Pomocou postranných tlačidiel nahor/ nadol vyberte nastavenie zapnúť ()/ vypnúť () osvetlenie.

4. Späť

Touto položkou sa vyberá návrat do pohotovostného režimu.



Stlačte tlačidlo Menu () a použitím navigačných tlačidiel vyberte voľbu Správy.

Nová správa

Menu 5-1

Napísať krátku správu

Menu 5-1-1

Telefón môže prijímať správy hlasovej schránky a krátke textové správy (angl. Short Message Service - SMS).

Hlasová schránka a SMS sú služby siete. Bližšie informácie o týchto službách získate od operátora.

Ikonan  a displeji informuje o prijatí hlasovej správy.

Ikonan  a displeji informuje o prijatí textovej správy.

Ak je pamäť plná, na displeji sa zobrazí upozornenie - bliká ikona a nemôžete prijať ďalšie textové správy. Na vymazanie starších správ použite voľbu Zmazať v menu Prijaté správy. Keď bude v pamäti voľné miesto, telefón prijme doposiaľ neprijaté SMS správy (ak je

k dispozícii dostatok miesta).

1. Napíšte správu. Podrobné informácie o písaní textu nájdete na stranách 29 až 32 (Písanie textu).
2. Po napísaní správy použite na výber volieb ľavé kontextové tlačidlo [Možnosti].

K dispozícii máte tieto možnosti:

- **Odoslať:** Napíšte číslo, prípadne vyberte číslo z telefónneho zoznamu alebo zo zoznamu posledných hovorov. Správu môžete naraz odoslať maximálne na 5 telefónnych čísel. Stlačte ľavé kontextové tlačidlo [Možnosti]. Zobrazia sa tieto voľby:

Odoslať (zobrazí sa len po vložení telefónneho čísla)

① Posledné číslo

② Hľadať

- **Uložiť:** Uloží správu, aby ste ju mohli odoslať neskôr.
- **Písmo:** Môžete si vybrať veľkosť a štýl písma.



- ▶ **Farba:** Môžete si vybrať farbu textu a pozadia.
 - ▶ **Zarovnanie:** Text správy môžete zarovnať vľavo, na stred a vpravo.
 - ▶ **Pridať do slovníka T9:** Do slovníka režimu T9 môžete pridávať svoje vlastné slová. Toto menu sa zobrazí iba vtedy, keď je režim písania textu nastavený na prediktívny (T9).
 - ▶ **Jazyky T9:** Vyberte jazyk režimu T9. Režim T9 môžete deaktivovať výberom voľby Vypnúť T9. Podrobné informácie o režime T9 nájdete na stranách 29 až 31.
 - ▶ **Koniec:** Výber tejto položky umožňuje ukončiť písanie správy a vrátiť sa na predchádzajúcu obrazovku. Správa, ktorú ste písali, sa neuloží.
3. K správe môžete pripojiť prílohu stlačením pravého kontextového tlačidla [Vložiť].
- ▶ **Symbol:** Slúži na vloženie špeciálnych znakov.
 - ▶ **Obrázok:** Telefón umožňuje posielat' a prijímat' textové správy, ktoré obsahujú obrázky. Takéto správy sa nazývajú obrázkové správy. V telefóne je uložených niekoľko predvolených obrázkov, ktoré možno nahradiť novými obrázkami získanými z iných zdrojov.
 - ▶ **Zvuk:** Ku krátkej správe môžete pripojiť zvuk.
 - ▶ **Šablóny textových správ:** Môžete použiť prednastavené šablóny uložené v telefóne.
 - ▶ **Kontakty:** Do správy vloží telefónne číslo z telefónneho zoznamu.
 - ▶ **Podpis:** Pripojí k správe vaše kontaktné údaje.



Vytvorit obrazkovu spravu Menu 5-1-2

Multimediálna správa môže obsahovať text, obrázky a/ alebo zvukové záznamy. Táto služba je dostupná, len ak ju podporuje operátor. Prijat' a odoslať MMS môžu len zariadenia, ktoré majú kompatibilné multimediálne alebo emailové vlastnosti.

1. Napíšete textovú správu. Použitím pravého kontextového tlačidla môžete vložiť symboly, čísla, emotikony atď.
2. Pripojte obrázok a/ alebo zvuk.
3. Ak chcete k správe pridať ďalší prezentačný obrázok, stlačte ľavé kontextové tlačidlo alebo tlačidlo OK a vyberte možnosť Pridať snímku.

! Poznámka Správa môže pozostávať až z deviatich prezentačných obrázkov.

4. Stlačte ľavé kontextové tlačidlo [Možnosti].
K dispozícii máte tieto možnosti:


- ▶ **Odoslať:** Správu môžete odoslať na viacero čísel alebo emailových adries.
- ▶ **Zobraziť:** Zobrazí MMS správu, ktorú chcete odoslať.
- ▶ **Uložiť:** Uloží MMS správu ako koncept alebo ako šablónu.
- ▶ **Pridať snímku:** Pridá ďalší prezentačný obrázok pred aktuálny alebo zaň.
- ▶ **Prejsť na snímku:** Presunie sa na ďalšiu alebo predchádzajúcu snímku.
- ▶ **Zmazať snímku:** Vymaže vybratú snímku.
- ▶ **Nastaviť formát snímky**
 - **Nastaviť časovač:** Môžete nastaviť časovač pre snímky, text, obrázok a zvuk.
 - **Zameniť text a obrázok:** Môžete zameniť polohu obrázka a textu správy.
- ▶ **Odstrániť médiá:** Môžete vymazať obrázok alebo zvuk v prezentačnom obrázku. Táto voľba sa zobrazí, len ak správa obsahuje médiá (obrázok, zvuk).

- ▶ **Pridať do slovníka T9:** Do slovníka režimu T9 môžete pridávať svoje vlastné slová. Toto menu sa zobrazí iba vtedy, keď je režim písania textu nastavený na prediktívny (T9).
- ▶ **Jazyky T9:** Výber jazyka režimu písania textu T9. Režim T9 môžete vypnúť aj výberom položky „Vypnúť T9“.
- ▶ **Koniec:** Ak sa táto položka vyberie počas písania správy, môžete ukončiť písanie správy a vrátiť sa späť na predchádzajúcu obrazovku. Správa, ktorú ste písali, sa neuloží.

Napísať emailovú správu Menu 5-1-3

Ak chcete odosielať a prijímať e-maily, musíte si nastaviť emailové konto. Ďalšie informácie o **e-mailoch** nájdete na strane 79.

1. Môžete vložiť až dvadsať adres do pol'a Komu a Skrytá kópia

Tip: Ak chcete vložiť znak „@“, stlačte tlačidlo  a vyberte znak „@“.
2. Uvedte predmet e-mailu a stlačte tlačidlo OK.

3. Po napísaní emailovej správy stlačte ľavé kontextové tlačidlo [Možnosti]. Zobrazia sa tieto možnosti:
 - ▶ **Poslať:** Odoslanie emailovej správy.
 - ▶ **Vložiť:** Môžete vložiť textové šablóny, telefónne čísla, symboly a vizitku.
 - ▶ **Upraviť adresátov:** Úprava adresátov.
 - ▶ **Upraviť predmet:** Úprava predmetu.
 - ▶ **Uložiť:** Touto voľbou sa správa uloží medzi **koncepty**.
 - ▶ **Jazyky T9:** Výber jazyka režimu písania textu T9. Režim T9 môžete vypnúť aj výberom položky „Vypnúť T9“.
 - ▶ **Ukončiť:** Ak sa táto položka vyberie počas písania správy, môžete ukončiť písanie správy a vrátiť sa späť na predchádzajúcu obrazovku. Správa, ktorú ste písali, sa neuloží.
4. K správe môžete pripojiť súbory po stlačení pravého kontextového tlačidla [Pripojiť].



Prijaté správy







Menu 5-2

V tomto menu si môžete prezrieť zoznam prijatých správ a zobrazit' ich obsah.

Správy sa zobrazujú v poradí podľa dátumu prijatia.

Stlačte tlačidlo Menu a postupne vyberte voľby **Správy** → **Prijaté správy**.

V pohotovostnom režime môžete použiť aj klávesovú skratku, ak stlačíte horné/ dolné navigačné tlačidlo, vyberiete ikonku správ, potvrdíte voľbu pravým navigačným tlačidlom alebo tlačidlom OK a vyberiete možnosť Prijaté správy.

	Opis
	Prečítaná správa SIM
	Neprečítaná správa SIM
	Prečítaná správa
	Neprečítaná správa
	Prečítaná správa o doručení
	Neprečítaná správa o doručení

! Poznámka Termín „správa SIM“ sa vzťahuje na správu uloženú v pamäti SIM karty. Sieť odlišuje správy prichádzajúce na SIM kartu a obyčajné správy.

Pri každej prijatej správe si môžete vybrať z nasledujúcich možností:





Stlačte ľavé kontextové tlačidlo [Voľby].

- ▶ **Odpovedať:** Odpovedať na prijatú správu.
- ▶ **Poslať ďalej:** Poslať prijatú správu ďalším adresátom.

- ▶ **Volat' naspat':** Vytočit' telefónne číslo odosielateľa správy.
- ▶ **Zmazať:** Vymaže vybratú správu zo schránky prijatých správ.
- ▶ **Vybrať:** Vyberie zo správy obrázok, zvuk, adresu webovej stránky alebo emailovú adresu. Vybratá položka bude uložená v zložke Album médií, Telefónny zoznam alebo Záložky.
- ▶ **Zobraziť informácie:** Zobrazí informácie o prijatej správe: Adresu odosielateľa, Predmet (iba multimedialne spravy), Dátum a čas správy, Typ správy, Veľkosť správy.

Telefón vás upozorní na prichádzajúce správy. Správy sa uložia do zložky Prijaté správy, kde ich môžete identifikovať podľa ikon. Podrobnejšie informácie nájdete v nasledujúcej tabuľke.

Ak telefón nemá dostatok miesta na správy, môžete ho uvoľniť vymazaním správ, médií alebo aplikácií.

	Opis
	Prečítaná multimedialna správa
	Neprečítaná multimedialna správa
	Prečítané oznámenie o doručení MMS
	Neprečítané oznámenie o doručení MMS

Orange Messenger

Menu 5-3

Od užívateľov funkcie odosielania okamžitých správ sa vyžaduje platná identifikácia užívateľa a heslo na prihlásenie, výmenu správ a na kontrolu stavu pri pripojení (online).



Menu bez pripojenia (offline)

Prihlásiť sa

Táto voľba umožňuje užívateľovi prihlásiť sa vložením identifikácie užívateľa a hesla.

- ❗ **Poznámka** Nie je potrebné vždy vkladať identifikáciu užívateľa a heslo, ak bol proces prihlasovania úspešný a informácie sa uložili. Táto funkcia je voliteľná.

Uložené konverzácie

Položka umožňuje užívateľovi zobrazit' uložené konverzácie.

Nastavenia

- ▶ **Názov obrazovky:** Výber názvu obrazovky, ktorý sa bude používať v službe skupinového rozhovoru.
- ▶ **Dostupnosť:** Výber stavu dostupnosti (od stavu Dostupné po stav Nedostupné a naopak).

- ▶ **Text stavu:** Nastavenie aktuálneho stavu vo formáte voľného textu.
- ▶ **Uložiť heslo:** Uloženie hesla vkladaneho pri prihlasovaní.
- ▶ **zapnut pri Prihláseni:** Ak uložíte platné heslo a potom vypnete a znovu zapnete telefón, môžete sa automaticky prihlásiť po 20 sekundách od zapnutia a pod.
- ▶ **Pripojenie:** Nastavenie vlastných informácií na pripojenie Orange Messenger. Zmenu týchto informácií však konzultujte s operátorom.

Keď vyberiete ako prepojavací protokol HTTP

- **WV server:** Môžete zmeniť adresu WV servera.
- **Internetové profily:** Zmena nastavenia internetového pripojenia.



Informácie IM

- Zobrazenie informácií o klientovi odosielať okamžitých správ (meno klienta, číslo verzie).

On-line Menu/ Konverzácia 1 : 1

Po úspešnom prihlásení sa na obrazovke zobrazí zoznam s kontaktmi.

V závislosti od polohy kurzora v zozname kontaktov budú prístupné nasledujúce možnosti menu.

Kurzor je umiestnený na zozname konverzácií

- ❗ **Poznámka** Zoznam konverzácií neobsahuje len kontakt, ktorého konverzácia je už otvorená, ale aj neznámy kontakt.

- ▶ **Zobraziť/Skryť konverzácie:** Táto voľba poskytuje možnosť zobraziť alebo skryť kontakty vo vybratom zozname.

- ❗ **Poznámka** Keď vyberiete ľavé alebo pravé navigačné tlačidlo alebo tlačidlo potvrdenia na zozname kontaktov, ponúkne sa možnosť zobraziť alebo skryť konverzáciu.

- ▶ **Odoslať ostatným:** Táto voľba poskytuje možnosť odoslať správu na adresu neznámeho kontaktu. Keď sa vyberie táto možnosť pred spustením spojenia OM alebo konverzácie, je potrebné identifikovať užívateľa.

- ▶ **Uložené konverzácie:** Zobrazenie alebo odstránenie uložených konverzácií.

▶ Nastavenia

- **Názov obrazovky:** Výber názvu obrazovky, ktorý sa použije počas služby skupinového rozhovoru.
 - **Dostupnosť:** Výber stavu dostupnosti (Dostupné alebo Nedostupné).
 - **Text stavu:** Nastavenie aktuálneho stavu vo formáte voľného textu.
 - **Zobraziť možnosti:** Ponuka zobrazenia všetkých kontaktov alebo len kontaktov on-line.
- ▶ **Odhlásiť sa:** Spustenie procesu odhlasovania.



Kurzor je umiestnený na konverzácii

- ▶ **Zobraziť:** Možnosť konverzácie s vybratým neznámym kontaktom a kontaktom, s ktorým sa konverzácia už začala. Zobrazí sa konverzácia s kontaktom, s ktorým konverzácia už začala.
- ▶ **Skončiť konverzáciu:** Zatvorenie vybratej konverzácie. Ak bol vybratý neznámy kontakt, odstráni sa.
- ▶ **Zobraziť informácie:** Zobrazenie informácií. Zobrazuje sa identifikácia užívateľa, nálada, text stavu.
- ▶ **Obnoviť kontakt:** Obnovenie informácií o prítomnosti vybratého kontaktu.
- ▶ **Nastavenia:** Pozrite si predchádzajúce menu nastavení.
- ▶ **Odhlásiť sa:** Spustenie procesu odhlasovania.

Kurzor je umiestnený na zozname kontaktov

- ▶ **Zobraziť/ Skryť kontakty:** Táto voľba poskytuje možnosť zobraziť alebo skryť kontakty vo vybratom zozname.
- ▶ **Pridať zoznam:** Pridanie nového zoznamu kontaktov.
- ▶ **Pridať kontakt:** Pridanie nového kontaktu do vybratého zoznamu kontaktov, zatiaľ sa kontakt vyhľadáva na základe e-mailovej adresy, krstného mena, priezviska.
- ❗ **Poznámka** Toto zariadenie podporuje maximálne 30 kontaktov. Ak je kontaktov viac ako 30, nebudú sa všetky zobrazovať.
- ▶ **Zmazať zoznam:** Odstránenie vybratého zoznamu kontaktov.
- ▶ **Obnoviť zoznam:** Obnovenie informácií o prítomnosti kontaktov zo zoznamu kontaktov.
- ▶ **Nastavenia:** Pozrite si predchádzajúce menu nastavení.
- ▶ **Odhlásiť sa:** Spustenie procesu odhlasovania.



Kurzor je umiestnený na kontakte

- ▶ **Rozhovor/Zobraziť:** Rozhovor zobrazí obrazovku, na ktorej môže prebiehať konverzácia s vybratým kontaktom/ Zobrazenie konverzácie kontaktu, ktorého konverzácia už začala.
- ▶ **Pridať kontakt:** Pridanie nového kontaktu do vybratého zoznamu kontaktov, zatiaľ sa kontakt vyhľadáva na základe e-mailovej adresy, krstného mena, priezviska.
- ▶ **Zmazať kontakt:** Odstránenie vybratého kontaktu.
- ▶ **Zobraziť informácie:** Zobrazenie informácií. Zobrazuje sa identifikácia užívateľa, nálada, text stavu.
- ▶ **Obnoviť kontakt:** Obnovenie informácií o prítomnosti vybratého kontaktu.
- ▶ **Nastavenia:** Pozrite si predchádzajúce menu nastavení.
- ▶ **Odhlásiť sa:** Spustenie procesu odhlasovania.

Možnosti menu dostupné na obrazovke konverzácie

- ▶ **Odoslať:** Odoslanie napísanej správy.
- ▶ **Späť do zoznamu:** Obnovenie zoznamu kontaktov na obrazovke.
- ▶ **Skončiť konverzáciu:** Ukončenie aktívnej konverzácie a vymazanie vyrovnávacej pamäte konverzácie.
- ▶ **Zablokovať/Odblokovať kontakt:** Umožnenie alebo zablokovanie konverzácie s vybratým kontaktom.
- ▶ **Pridať slovo do slovníka T9:** Do slovníka režimu T9 môžete pridávať svoje vlastné slová. Toto menu sa zobrazí iba vtedy, ak je režim písania textu nastavený na prediktívny (T9).
- ▶ **Jazyky T9:** Výber jazyka režimu písania textu T9.



- ! Poznámka**
- Na obrazovke konverzácie môžete pomocou pravého kontextového tlačidla vložiť symbol, emotikonu („smajlíka“) a textovú šablónu.
 - V okne konverzácie môžete použiť na posúvanie postranné tlačidlo alebo navigačné tlačidlo nahor/ nadol.
 - Maximálny počet podporovaných znakov je 500 pre prichádzajúcu a 160 pre odosielanú správu.
 - Informácia o účasti sa nemôže aktualizovať v reálnom čase. Na získanie najaktuálnejšieho stavu môžete použiť možnosť „Obnoviť zoznam/ Obnoviť kontakt“.

Emailová schránka

Menu 5-4

Môžete kontrolovať uložené e-maily, koncepty, schránku odoslaných správ a odoslané maily.

V schránke Obnoviť zoznam sa ukladá až 20 e-mailov.

Koncepty

Menu 5-5

V tomto menu si môžete zobrazit' zoznam uložených rozpísaných správ. V zozname sa presúvajte pomocou horného/dolného navigačného tlačidla. Pri každej rozpísanej správe máte tieto možnosti:

Zobraziť, Upraviť, Zmazať, Zobrazit' informácie, Zmazať všetko

Odoslané správy



Menu 5-6

V tomto menu si môžete pozriet' zoznam a obsah odoslaných správ a overit' si, či bolo odoslanie úspešné.

K dispozícii máte tieto možnosti:

- ▶ **Poslať ďalej:** Poslať aktuálnu správu ďalším adresátom.
- ▶ **Zmazať:** Vymaže vybratú správu zo zložky Odoslané správy.

Pri každej odoslanej správe si môžete pozrieť stav doručenia.


	Odoslaná SIM správa
	Odoslaná správa

- **Zobraziť informácie:** Zobrazí informácie o odoslanej správe: Predmet (iba multimedialne správy), Dátum a čas odoslania správy, Typ správy, Veľkosť správy, Číslo adresáta a stav doručenia).

	Opis
	Odoslaná

Vypočut' hlasovú poštu Menu 5-7

Toto menu poskytuje rýchly prístup k hlasovej schránke (ak to umožňuje sieť). Pred použitím tejto voľby musíte vložiť číslo servera hlasovej schránky. Toto číslo získate od operátora.

Pri doručení novej hlasovej správy sa na displeji zobrazí symbol . Odporúčame vám, aby ste si od operátora zistili bližšie informácie, ktoré sú potrebné na správne nastavenie telefónu.

Info služba Menu 5-8

Správy Info služby sú textové správy zasielané sieťou na mobilné telefóny užívateľov. Poskytujú základné informácie ako predpoveď počasia, dopravné informácie, sprostredkovanie taxíkov, informácie o lekárňach a cenách akcií. Každý typ informácie je spojený s telefónnym číslom, ktoré môžete získať od operátora. Keď obdržíte správu Info služby, ikona bude indikovať príjem novej správy alebo sa správa zobrazí priamo na displeji. V pohotovostnom režime sú pri zobrazení informačných správ prístupné tieto voľby:



Čítať

Menu 5-8-1

Použite na aktiváciu/deaktiváciu prijímania správ Info služby.

Temy

Menu 5-8-2

Ak chcete vytvoriť novú tému, stlačte ľavé kontextové tlačidlo [Zvoliť] a vyberte možnosť Pridať. Ak ste sa už prihlásili na odoberanie nejakých tém, môžete si ich deaktivovať, upraviť alebo zmazať použitím ľavého kontextového tlačidla [Zvoliť].

Šablóny

Menu 5-9

V tomto menu si môžete prezerať a upravovať preddefinované šablóny správ alebo vytvárať nové správy. Môžete vytvárať a používať dva typy šablón: textové a multimedialne.

Šablóny textových správ

Menu 5-9-1

- **Prosím, zavolaj mi naspäť.**
- **Meškám. Prídem o...**
- **Kde si teraz?**
- **Som na ceste.**
- **Súrne. Prosím, zavolaj mi.**
- **Milujem ťa.**

K dispozícii máte tieto možnosti:

- ▶ **Zobraziť:** Zobrazí vybratú šablónu.
- ▶ **Upraviť:** Použite túto voľbu na napísanie novej správy alebo úpravu vybratej šablóny.
- ▶ **Napísať správu:** Vybratú šablónu môžete odoslať ako správu.
- ▶ **Pridať:** Môžete vytvoriť novú šablónu.
- ▶ **Zmazať:** Vymaže vybratú šablónu zo zoznamu textových šablón.
- ▶ **Zmazať všetko:** Môžete vymazať všetky šablóny.



Šablóny obrazkových správ Menu 5-9-2

Možnosti sú rovnaké ako pri textových šablónach (pozri stranu 75).

- **Zobraziť**
- **Upraviť**
- **Napísať správy**
- **Pridať**
- **Zmazať**
- **Zmazať všetko**

Podpis Menu 5-9-3

V tomto menu si môžete vytvoriť vizitku. Vložte meno, číslo mobilného telefónu, telefónne číslo domov, do práce, číslo faxu a emailovú adresu.

- **Upraviť**
- **Zmazať**
- **Odoslať**
- **Prijať**
- **Vymeniť**

Nastavenia Menu 5-0

Textová správa Menu 5-0-1

► Typy správ

Text, Hlas, Fax, Národný paging, X.400, E-mail, ERMES

Typ správ je zvyčajne nastavený na Text. Textovú správu môžete prekonvertovať do ďalších formátov. Bližšie informácie o tejto funkcii získate od operátora.

► **Doba platnosti:** Táto služba siete umožňuje nastaviť, ako dlho budú textové správy uložené v centre správ.

► **Správa o doručení:** Ak nastavíte Áno, môžete si overiť, či bola vaša správa úspešne doručená.

► **Odpovedať cez rovnaké stredisko služieb:** Adresát správy môže odpovedať na vašu správu, cena odpovede bude pripísaná na váš telefónny účet.



- ▶ **SMS centrum:** V tomto menu môžete zistiť číslo SMS centra na odosielanie krátkych správ.

Obrazkova sprava

Menu 5-0-2

- ▶ **Priorita:** Pomocou tejto voľby môžete nastaviť požadovanú prioritu správy: Nízka, Normál a Vysoká.
- ▶ **Doba platnosti:** Táto služba siete umožňuje nastaviť, ako dlho budú multimedialne správy uložené v centre správ.
- ▶ **Správa o doručení:** Ak nastavíte Áno, môžete si overiť, či bola vaša správa úspešne doručená.
- ▶ **Automatické sťahovanie**
 - Zapnúť:** Budete prijímať multimedialne správy automaticky.
 - Vypnúť:** Obdržíte len notifikačnú správu (oznam), stiahnutie multimedialnej správy budete musieť potvrdiť.

Len domáca sieť: V domácej sieti môžete aktivovať menu Zapnúť automatické sťahovanie; ak ste v zahraničí, automatické sťahovanie môžete aktivovať, keď nastavíte možnosť Vypnúť.

▶ Skryt' vlastné číslo

- ▶ **Účty:** Aby ste mohli sťahovať multimedialne správy zo servera, potrebujete nastaviť dátové spojenie CSD alebo GPRS. Ak vyberiete server multimedialnych správ, môžete nastaviť URL servera multimedialnych správ. Na pripojenie služby môžete nastaviť 5 profilov.

- **Domovská stránka:** Pomocou tohto menu sa môžete pripojiť k MMS centru (MMSC).

- Nosič dat

- Dáta
- GPRS

- **Nastavenia dát:** Zobrazí sa iba vtedy, ak zvolíte ako Nosič voľbu Dáta.



IP adresa

Vytočit' číslo: Vložte telefónne číslo, cez ktoré sa pripájate k bráne WAP.

Užívateľské ID

Heslo

Typ pripojenia: Vyberte si Analógové alebo ISDN (digitálny).

Rýchlosť pripojenia: Rýchlosť dátového pripojenia 9600 alebo 14400.

- **Nastavenia GPRS:** Zobrazí sa iba vtedy, ak zvolíte ako Nosič voľbu GPRS.

IP adresa

APN: Vložte APN (názov prístupového bodu, angl. Access Point Name) GPRS.

Užívateľské ID

Heslo

- **Typ pripojenia:** K dispozícii sú voľby Trvalé, Dočasné a HTTP.

- Nastavenia proxy

- Nastavenia DNS

- **Bezpečnostné nastavenia:** V závislosti od zvoleného portu brány môžete túto voľbu zapnúť alebo vypnúť.

► Povolené typy správ

Osobné: Osobné správy.

Reklama: Komerčné správy.

Informácie: Potrebné informácie.



E-mail

Menu 5-0-3

Toto menu umožňuje upraviť, odstrániť a pridať emailové účty.

Môžete nastaviť až tri emailové účty. Ak si chcete vytvoriť vlastný emailový účet, budete musieť vložiť identifikáciu a heslo.

1. Zvoľte účet.
2. Vyberte možnosť **Upraviť** a posuňte sa na položku ID/PWD prichádzajúceho.
3. Uvedte svoju identifikáciu a heslo.

Centrum hlasovej pošty

Menu 5-0-4

Hlasovú poštu môžete prijímať do odkazovej schránky, ak túto službu podporuje operátor. Keď príde do odkazovej schránky nová hlasová správa, na displeji sa zobrazí príslušný symbol. Bližšie informácie potrebné na správne nastavenie tejto služby získate od operátora.

1. Pridržte v pohotovostnom režime stlačené tlačidlo .

2. Objaví sa toto podmenu:

- ▶ **Domov:** Po vybratí tejto voľby si môžete vypočítať hlasovú poštu.
- ▶ **Roaming:** Prístup k hlasovej pošte máte aj v zahraničí, ak je k dispozícii roaming.

Info služba

Menu 5-0-5

▶ Prijat

- **Áno:** Ak vyberiete túto voľbu, telefón bude prijímať správy informačnej služby.
- **Nie:** Ak vyberiete túto voľbu, telefón nebude prijímať správy informačnej služby.

▶ Upozornenie

- **Áno:** Telefón pípnutím oznámi prijatie správy informačnej služby.
- **Nie:** Telefón neoznámi prijatie správy informačnej služby.

- ▶ **Jazyky:** Požadovaný jazyk vyberiete stlačením [Zap/Vyp]. Správy linformačnej služby sa zobrazia v požadovanom jazyku.



Správa o službe

Menu 5-0-6

Pomocou tejto voľby nastavíte, či bude telefón prijímať tieto správy alebo nie.



Jedným kliknutím na Orange World

Stačí jedno kliknutie na vašom novom telefóne F2400 a prenesiete sa do sveta najnovších hier, vyzváňacích tónov a športových správ z celého sveta.

Nájdite si najbližší bankomat, potom si vyberte bar, kde to roztočíte, alebo sa natiahnite na pohovku a čítajte si o vašich obľúbených celebritách. Alebo ak sa na to cítite, vyskúšajte si jednu z našich skvelých hier. Nech máte akúkoľvek náladu, na Orange World vždy nájdete niečo zaujímavé. Tak do toho!

Ak chcete vstúpiť do Orange World, stlačte Orange. Otvorí sa Orange World. Prechádzajte stránkou a keď objavíte odkaz, na ktorý chcete prejsť, stlačte Zvoliť. Vďaka kanálom vám môže Orange navrhnúť odkazy, ktoré sa vám budú páčiť. Návrhy, ktoré vám dáme, budú založené na vašom nastavení telefónu a na dni v týždni. V sobotu vám napríklad môžeme ponúknuť šport, aby ste sa rýchlo dostali k futbalovým výsledkom.

Ak si chcete prispôbiť telefón, používajte Kanály – stiahnite si nové vyzváňacie tóny, tapety alebo najnovšie hry vrátane tých najlepších, ako sú Fifa Football a Tiger Woods Golf. Môžete tiež poslať priateľom blahoželanía Purple Ronnie, a tak ich prekvapiť. Môžete si vybrať aj služby iných operátorov, ako sú BBC či RAC.

Ako si vytvoriť vlastný Orange World?

To najlepšie na Orange World je, že si ho môžete neustále aktualizovať podľa vašich záujmov. Keď prvýkrát vstúpite do Orange World, venujte minútku či dve vyplneniu sprievodcu Orange World, ktorý sa vás opýta na vaše záujmy, aby vám mohol poskytnúť tie najpriliehavšie služby. Ak si chcete nastaviť sprievodcu Orange World, kliknite na odkaz Vaša stránka. Keď ukončíte nastavenie, použijete tento odkaz a rýchlo prejdete na služby, ktoré vás zaujímajú.



Pomocou jednoduchých volieb môžete na vašu stránku pridávať alebo odoberať odkazy. Tipy na odkazy, ktoré by vás mohli zaujímať, sa zobrazia na vrchnej časti domovskej stránky Orange zakaždým, keď ju navštívite.

Ako nájsť svoj spôsob používania Orange World?

Nič človeka nenahnevá tak, ako keď sa stratí alebo nemá poruke to správne číslo. To už môžete hodiť za hlavu vďaka účelnej funkcii Hľadať, ktorá vám ukáže, kde sa nachádzate alebo vás prenesie na zoznam stránok, ako Time Out, aby vám pomohla nájsť informácie, ktoré potrebujete kvôli práci alebo zábave.

Orange World môžete napríklad použiť na vyhľadanie bankomatu najbližšieho k baru, kde sa máte stretnúť s vašimi priateľmi. Keď ste ho už na Orange World našli, čo tak zohnať si taxík, aby ste sa tam dostali? Je to jednoduché, rýchle a predovšetkým vždy poruke. Vyskúšajte si to hneď a uvidíte, čo môžete robiť dnes večer.



V menu Profily môžete meniť a upravovať tóny telefónu pre rôzne udalosti, prostredia alebo skupiny volajúcich.

Telefón má šesť prednastavených profilov: Normálny, Iba vibrovanie, Tichý, Hlasný, Slúchadlá. Každý z profilov sa dá prispôbiť.

Stlačte tlačidlo menu () a použitím navigačných tlačidiel vyberte voľbu Profily.

Aktivovať

Menu 7-X-1

1. Na displeji sa zobrazí zoznam profilov.
2. V zozname profilov sa presuňte na profil, ktorý chcete aktivovať, a stlačte ľavé kontextové tlačidlo [Zvoliť] alebo tlačidlo OK.
3. Vyberte voľbu Aktivovať.

Prispôbiť

Menu 7-X-2

Upravovať môžete všetky profily okrem profilov Iba vibrovanie a Tichý. Presuňte sa v zozname profilov na profil, ktorý chcete upraviť. Po stlačení tlačidla OK alebo ľavého kontextového tlačidla vyberte voľbu Prispôbiť. Otvoria sa voľby nastavení profilu, ktoré môžete podľa potreby nastaviť.

- ▶ **Typ ohlásenia hovoru:** Nastavte typ ohlásenia prichádzajúcich hovorov.
- ▶ **Vyzváňací tón:** Vyberte si zo zoznamu požadovaný vyzváňací tón. V zozname sa presúvajte pomocou horného/dolného navigačného tlačidla. Pred výberom si požadovaný vyzváňací tón môžete vypočúť.
- ▶ **Hlasitosť zvonenia:** Nastavte hlasitosť zvonenia.
- ▶ **Typ ohlásenia správy:** Nastavte typ ohlásenia prichádzajúcej správy.
- ▶ **Tón správy:** Vyberte upozorňovací tón na prichádzajúce správy.



- ▶ **Tón klávesnice:** Vyberte požadovaný tón tlačidiel.
- ▶ **Hlasitosť klávesnice:** Nastavte hlasitosť tónov tlačidiel.
- ▶ **Tón pri otvorení:** Vyberte zvuk, ktorý sa bude ozývať pri otvorení a zatvorení telefónu.
- ▶ **Hlasitosť zvukového efektu:** Nastavte hlasitosť zvukov telefónu.
- ▶ **Hlasitosť zapnutia/vypnutia:** Nastavte hlasitosť tónov pri zapnutí/vypnutí telefónu.
- ▶ **Automatické prijatie (len profil Slúchadlá):** Môžete aktivovať možnosť automatického prijatia hovoru. Vyberte časový interval, po ktorom telefón automaticky prijme hovor.

Premenovať

Menu 7-X-3

Profilom môžete dať mená podľa vlastného uváženia. Profily Iba vibrovanie a Slúchadlá však premenovať nemôžete.

1. Ak chcete profil premenovať, presuňte sa naň a po stlačení tlačidla OK alebo ľavého kontextového tlačidla vyberte voľbu Premenovať.
2. Napíšte nové meno profilu a stlačte tlačidlo OK alebo ľavé kontextové tlačidlo [OK].



Ak to váš operátor umožňuje, môžete sa pomocou wapového prehliadača alebo Javy pripojiť k mobilnému internetu a stiahnuť si hry.

Hry a aplikácie

Menu 8-1

Prostredníctvom vášho telefónu máte prístup k veľkému množstvu hier. Tieto hry sa líšia od hier, ktoré si môžete stiahnuť, keďže pri nich potrebujete mať stále pripojenie.

Java™

Java je technológia vyvinutá spoločnosťou Sun Microsystems. Tak ako internetový prehliadač umožňuje sťahovať Java Applet, pomocou telefónu využívajúceho WAP možno sťahovať Java MIDlet. V závislosti od operátora možno do telefónu stiahnuť a spustiť v ňom všetky programy založené na Jave, napríklad Java hry. Po stiahnutí Java programu si ho môžete prezrieť v Aplikačnom menu, kde možno program vybrať, spustiť alebo vymazať. Súbory Java programov sú v telefóne uložené vo formáte .JAD a .JAR.

! Poznámka Súbor JAR je skomprimovaný Java program, súbor JAD je opisný súbor, ktorý obsahuje všetky detailné informácie. Zo siete si ešte pred stiahnutím programu môžete prezrieť všetky detailné opisy súboru JAD.

! Upozornenie V telefóne možno spustiť len programy založené na technológii J2ME (Java 2 Micro Edition). Programy založené na technológii J2SE (Java 2 Standard Edition) možno spustiť len v počítači.

Obrázky

Menu 8-2

Pomocou služby siete si môžete stiahnuť do telefónu obrázky. Potom ho môžete odoslať ako multimediálnu správu alebo nastaviť ho ako tapetu.

Zvuky

Menu 8-3

Pomocou služby siete si tiež môžete stiahnuť do telefónu zvuk. Potom ho môžete odoslať ako multimediálnu správu alebo nastaviť ho ako vyzváňací tón.



Ďalšie obrázky

Menu 8-4

Pripojte sa k sieti Orange. Môžete st'ahovať obrázky pomocou služby WAP. Uložia sa v položke Ďalšie obrázky.



Stlačte tlačidlo menu () a použitím navigačných tlačidiel vyberte voľbu Doplnky.

Bluetooth Menu 9-1

Rozhranie Bluetooth umožňuje vzájomnú bezdrôtovú komunikáciu kompatibilných mobilných zariadení, periférnych zariadení a počítačov, ktoré sa nachádzajú v blízkosti. Tento telefón podporuje zabudované rozhranie pripojenia Bluetooth, ktoré umožňuje prepojenie s kompatibilným slúchadlom Bluetooth, počítačovými aplikáciami atď.

Moje zariadenia Menu 9-1-1

Môžete zobrazit' všetky zariadenia, ktoré sú kompatibilné so systémom bluetooth.

Zariadenia Handsfree Menu 9-1-2

Môžete zobrazit' zoznam zariadení handsfree, ktoré sú kompatibilné s telefónom s rozhraním bluetooth.

Nastavenia Menu 9-1-3

Môžete zaregistrovat' nové zariadenie, ktoré je kompatibilné so systémom bluetooth. Ak už máte pridané zariadenie, môžete ho vyhľadat' po vložení hesla.

Nastavit' Bluetooth

Funkciu Bluetooth môžete aktivovat' alebo vypnúť.

Viditeľnosť môjho telefónu

Vyberte, či má byt' váš telefón viditeľný pre ostatné zariadenia s funkciou Bluetooth, alebo má byt' skrytý.

Meno môjho telefónu

Môžete vybrať názov zariadenia bluetooth. Predvolený názov je F2400.




Kalkulačka

Menu 9-2

Pomocou tohto menu môžete používať telefón ako kalkulačku. Kalkulačka ovláda základné matematické úkony: sčítanie, odčítanie, násobenie a delenie. (Môžete vkladať čísllice s dvoma desatinnými miestami.)

Používanie kalkulačky

1. Vložte prvé číslo pomocou číselných tlačidiel.
2. Stlačte príslušné navigačné tlačidlo na výber matematického úkonu a vložte druhé číslo.

! Poznámka Na vymazanie preklepov a na vymazanie displeja slúži tlačidlo . Na vloženie desatinnej čiarky použite tlačidlo . Na vloženie záporného čísla stlačte tlačidlo .

3. Výpočet výsledku – stlačte ľavé kontextové tlačidlo [Výsledok] alebo tlačidlo OK.
4. Po výpočte stlačte ľavé kontextové tlačidlo [Zmazať] na návrat do počiatočného stavu.

Prevodník jednotiek

Menu 9-3

Prevedie údaj z jednej jednotky na inú.

Používa štyri veličiny: Dĺžka, Plocha, Hmotnosť, Objem.

1. Vyberte si veličinu stlačením ľavého kontextového tlačidla [Veličina].
2. Presuňte sa do aktuálnej sekcie jednotiek stlačením dolného navigačného tlačidla.
3. Pomocou ľavého/pravého navigačného tlačidla vyberte jednotku, ktorú chcete previesť.
4. Dolným navigačným tlačidlom sa presuňte do poľa prevodu jednotiek.
5. Stlačením ľavého/pravého navigačného tlačidla vyberte jednotku, na ktorú chcete zvolenú jednotku previesť.
6. Číselnými tlačidlami vložte číslo. Prevod sa vypočíta automaticky.

! Poznámka Desatinnú čiarku môžete vložiť pomocou klávesu .



Svetový čas

Menu 9-4

Pomocou ľavého/pravého navigačného tlačidla môžete zistiť aktuálny greenwitchský čas (angl. Greenwich Mean Time – GMT) i aktuálny čas v ďalších 73 mestách na celom svete.

Displej zobrazuje názov mesta, aktuálny dátum a čas.

Ak chcete vybrať časovú zónu, v ktorej sa nachádzate, postupujte takto:

1. Stlačením ľavého/pravého navigačného tlačidla (raz alebo opakovane) vyberte mesto, ktoré sa nachádza v rovnakej časovej zóne. Po úspešnom výbere sa zobrazí dátum a čas v oblasti.
2. Ak chcete zmeniť nastavenie času zobrazeného v pohotovostnom režime, stlačte ľavé kontextové tlačidlo [Nastaviť].

! Poznámka Nastavenie časovej zóny každého mesta v menu Svetový čas môže byť ovplyvnené stavom siete.

Hlasový záznamník

Menu 9-5

Pomocou tejto voľby si môžete zaznamenať krátke záznamy zvuku. Môžete si nahrat' 3 hlasové záznamy, každý s celkovou dĺžkou maximálne 30 sekúnd.

Pomocou ľavého kontextového tlačidla [Zvoliť] môžete tieto záznamy prehrávať, mazať alebo zaznamenať nové.

! Poznámka Stlačením dolného navigačného tlačidla v pohotovostnom režime môžete prejsť priamo do menu Hlasový záznamník.

Nahrat'

1. Vyberte menu Hlasový záznamník a potom voľbu Nahrat'
2. Keď sa začne nahrávanie, na displeji sa zobrazí správa „Nahrávanie...“ a zostávajúci čas.
3. Keď skončíte nahrávanie, stlačte ľavé kontextové tlačidlo [Uložiť].

! Poznámka Ak je pamäť poznámok plná, musíte pred nahraním novej poznámky vymazať niektorú staršiu.



Zobrazit' zoznam

Stlačením tlačidla v pohotovostnom režime telefón zobrazí názov záznamu. Tento záznam môžete prehrávať alebo vymazať.

- **Prehravanie:** Umožňuje prehrávanie zaznamenaných záznamov, začínajúc posledným nahraným. Na displeji sa zobrazí dátum a čas, kedy bola poznámka nahraná.
- **Odfotiť ako obrazkovú správu:** Táto voľba umožňuje odoslať zvuk prostredníctvom multimedialnej správy.
- **Napísať emailovú správu:** Zvukový záznam môžete odoslať pomocou e-mailu.
- **Zmazať:** Táto voľba umožňuje vymazať konkrétny záznam.
- **Zmazať všetko:** Vymaže všetky záznamy. Na potvrdenie tejto voľby stlačte ľavé kontextové tlačidlo [Áno].

Stav pamäte

Menu 9-6

Umožňuje skontrolovať veľkosť voľnej a dostupnej pamäte podľa jej jednotlivých sekcií.

Pomocník Orange

Menu 9-7

Toto menu vám pomôže detailne preniknúť do Orange World.



Ak sa vyskytne nejaký problém, pred návštevou servisu alebo kontaktovaním servisného technika sa pokúste nájsť riešenie v nasledujúcich problémoch a riešeniach. Problémy sú označené P a riešenia R.

P Ako si môžem prezrieť zoznam odchádzajúcich, prichádzajúcich a zmeškaných hovorov?

R Stlačte .


P Ako môžem vymazať celú históriu volaní?

R Stlačte ľavé kontextové tlačidlo a potom   .

P Ako si môžem prezrieť všetky čísla uložené v pamäti?

R Stlačte pravé kontextové tlačidlo a potom  .

P  nechce zmiznúť z displeja.

R Skontrolujte, či sa nachádzate v dosahu služby. Ak zobrazenie pretrváva , vypnite telefón, počkajte asi 2 minúty a opäť ho zapnite. Ak sa problém nezmení, skúste sa presunúť do inej oblasti a opäť skontrolujte, či problém pretrváva.


P Spojenie je slabé, dokonca v niektorých oblastiach nepočuteľné.

R V niektorých oblastiach sa sila signálu môže veľmi dramaticky odlišovať. Skúste sa presunúť do inej lokality. Silné zaťaženie mobilnej siete môže ovplyvniť možnosť pripojenia alebo stabilitu signálu.



- P** Spojenie je slabé aj po pripojení.
- R** V niektorých oblastiach sa sila signálu môže veľmi dramaticky odlišovať. Skúste sa presunúť do inej lokality. Silné zaťaženie mobilnej siete môže ovplyvniť možnosť pripojenia alebo stabilitu signálu.
- P** Displej sa nechce zapnúť.
- R** Vyberte a vymeňte batériu a telefón zapnite. Ak sa telefón stále nezapol, nabite batériu a skúste to znova.
- P** Počas spojenia s konkrétnym telefónom v konkrétnej oblasti počuť echo.
- R** Volá sa to „fenomén echa“. Nastáva v prípade, keď je hlasitosť príliš vysoká, prípadne je to spôsobené špeciálnymi vlastnosťami zariadenia na druhej strane (poloautomatická telefónna ústredňa).
- P** Telefón sa zohrieva.
- R** Počas dlhých hovorov alebo ak sa dlhší čas používajú hry či internet, sa telefón môže zohriať. To je úplne normálne a nemá to vplyv na životnosť telefónu ani na jeho výkon.
- P** Telefón nevyzváňa alebo lampa či displej len blikajú.
- R** Telefón je nastavený na profil „iba vibrovanie“ alebo „Tichý“. Prosíme, vyberte „Normálny“ alebo „Hlasný“.
- P** Doba pohotovostného režimu sa rapídne skrátila.
- R** Batérie majú obmedzenú životnosť. Ak vydržia polovičný čas oproti tomu, ktorý vydržali ako nové, mali by ste ich vymeniť. Používajte len autorizované náhradné diely.



- P** Úžitkový čas batérie sa skrátil.
- R** Ak je výdrž batérie nízka, môže to byť spôsobené užívateľským prostredím, dlhotrvajúcimi hovormi alebo slabým signálom siete.
- P** Keď vyvolám záznam telefónneho zoznamu, nevytočí sa žiadne číslo.
- R** Prostredníctvom voľby Hľadať sa uistite, že čísla boli v telefónnom zozname uložené správne. Ak je to potrebné, uložte ich znova.
- P** Nemôžu ma dovolať.
- R** Je váš telefón zapnutý ( stlačené na viac ako 3 sekundy)? Pripájate sa do správnej mobilnej siete? Nenastavili ste blokovanie prichádzajúcich hovorov?
- P** Nemôžem nájsť kód zámky telefónu, kód PIN, kód PUK alebo heslo.
- R** Prednastavený kód zámky je „0000“. Ak ho zabudnete alebo stratíte, obráťte sa na predajcu telefónu. Ak zabudnete alebo stratíte kód PIN alebo PUK alebo ak ste ich neobdržali, obráťte sa na operátora.

K tomuto mobilnému telefónu existuje veľké množstvo príslušenstva. Môžete si vybrať podľa vašich požiadaviek na komunikáciu. Informácie o dostupnosti príslušenstva získate od oblasťného predajcu.


Batéria

Dostupná je štandardná batéria.



Slúchadlá (sada Headset)

Umožňuje používať základné funkcie telefónu bez toho, aby ste ho museli držať v ruke. Obsahuje slúchadlá a mikrofón.

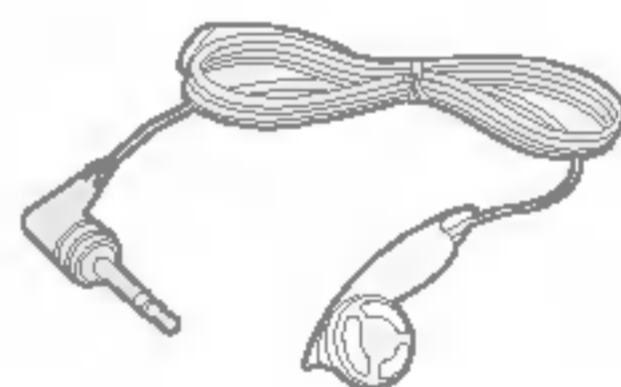


Nabíjačka

Pomocou nabíjačky si môžete nabíjať telefón.



Dátová sada

Slúži na prepojenie telefónu s počítačom.

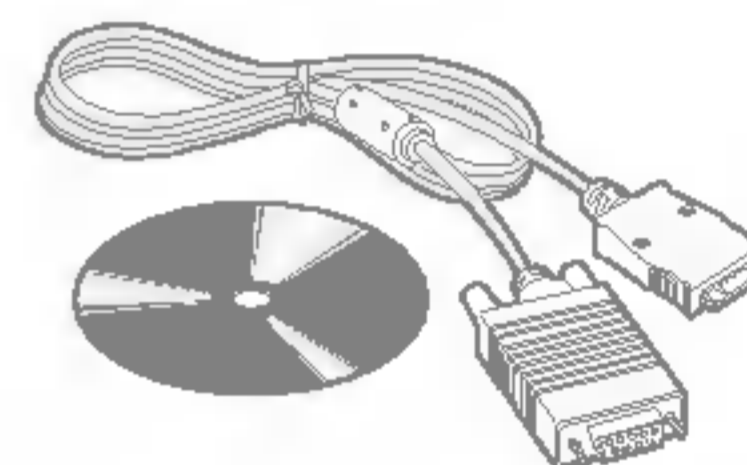

- ! Poznámka**
- Vždy používajte výlučne príslušenstvo dodávané spoločnosťou LG. Nedodržanie tohto pokynu môže spôsobiť zneplatnenie záruky.
 - Príslušenstvo sa v rôznych regiónoch môže líšiť. Ak máte nejaké otázky, obráťte sa na našu oblasťnú servisnú spoločnosť alebo predajcu.



Všeobecné

Názov produktu: F2400

System : GSM 900 / DCS 1800

Teplotný rozsah

Max.: +55 °C

Min. : -10 °C



F2400 User Guide - ENGLISH



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Table of Contents



Introduction	8	Menu Tree	33
Guidelines for safe and efficient use	9	Selecting functions and options	36
F2400 features	13	Call history.....	37
Parts of the phone	13	Missed calls	37
Display information	16	Received calls	37
		Dialled calls	37
Homescreen	18	Delete recent calls	38
Getting started	19	Call charges	38
Installing the SIM card and the handset battery	19	Call duration	38
Charging the battery	21	Call costs	38
Disconnecting the adapter	22	Settings	39
Turning your phone on and off	22	GPRS information	39
Access codes.....	23	Call duration	39
Barring passw ord	24	Data volumes	39
General functions	25	Address book.....	40
M aking and answering calls.....	25	Search	40
Address book.....	29	Add new	40
In-call menu	30	Caller groups	41
M ultiparty or conference calls	31	Speed dial	41

Settings 42

Copy all 42

Delete all 42

Information..... 43

Settings 44

Alarm clock 44

Date & Time 44

Set date 44

Date format 45

Set time 45

Time format 45

Phone settings 45

Display settings 45

Language 46

Call settings 46

Call divert 46

Answer mode 47

Send my number 47

Call waiting..... 47

Minute minder 47

Auto redial 47

Security settings 47

PIN code request 48

Phone lock 48

Call barring..... 48

Fixed dial number (FDN)..... 49

Change codes 49

Network settings 49

Automatic 50

Manual 50

Preferred 50

GPRS setting 50

Reset settings 51

Camera 52

Take photo 52

Take framed photo 53

Take continuously 55

Photo album 55

Table of Contents



Settings	55	Text message templates.....	68
Memory status	55	Picture message templates	69
Clear album	55	Signature	69
Auto save	56	Settings	70
Messages	57	Text message	70
New Message	57	Picture message	70
Write text message	57	Email	72
Write picture message	58	Voice mail centre	72
Write email message	60	Info service	73
Inbox	61	Service message	73
Orange Messenger	62	Orange World	74
Mailbox	66	Profiles	76
Drafts	66	Changing the profile	76
Outbox	66	Customising profiles - Personalise.....	76
Listen to voice mail	67	Customising profiles - Rename	77
Info service	67	Media album	78
Read	68	Games & Apps.	78
Topics	68	Pictures	78
Templates	68		

Sounds	78
More pictures	79
Extras	80
Bluetooth	80
My devices	80
Handsfree devices	80
Settings	80
Calculator	81
Unit converter	81
World time	82
Voice recorder	82
Memory status	83
Orange Help	83
Q&A	84
Accessories	87
Technical Data	88

Congratulations on your purchase of the advanced and compact F2400 mobile phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Guidelines for safe and efficient use

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model F2400 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DAS3 for use at the ear is 1.3 W/kg (10g).

Product care and maintenance

Warning: Use only batteries, charger and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliance such as a TV, radio or personal computer.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.



Guidelines for safe and efficient use

- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over the pacemaker, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.



- RF energy may affect some electronic systems in your motor vehicle such as car stereo, safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.




Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

Parts of the phone

Front view

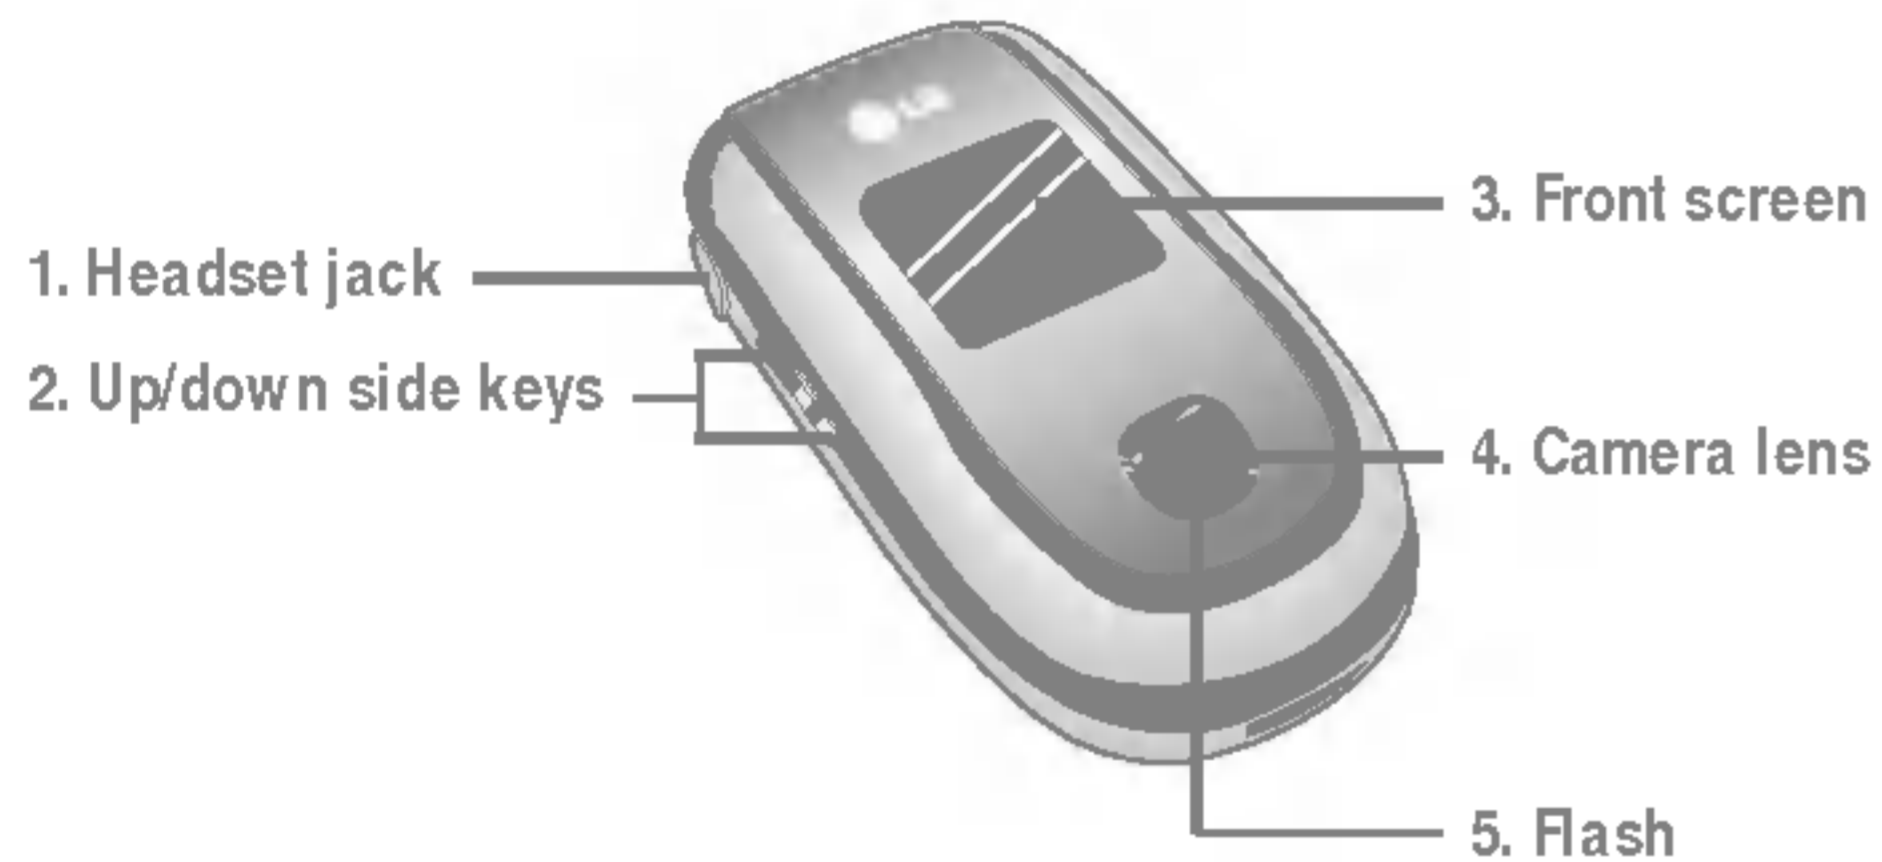

1. Headset jack

- Connect a headset here.

2. Up/down side keys

- Press this key to display the current time on the front screen.
- Controls the volume of keypad tone in standby mode with the clamshell open.
- Controls the earpiece volume during a phone call.

3. Front screen

4. Camera lens

- ❗ **Note** Dirt on the camera lens could affect the image quality.

5. Flash


Right side view



Camera key

Press this key twice activate the camera mode.
Also use this key to take a shot.

Rear view

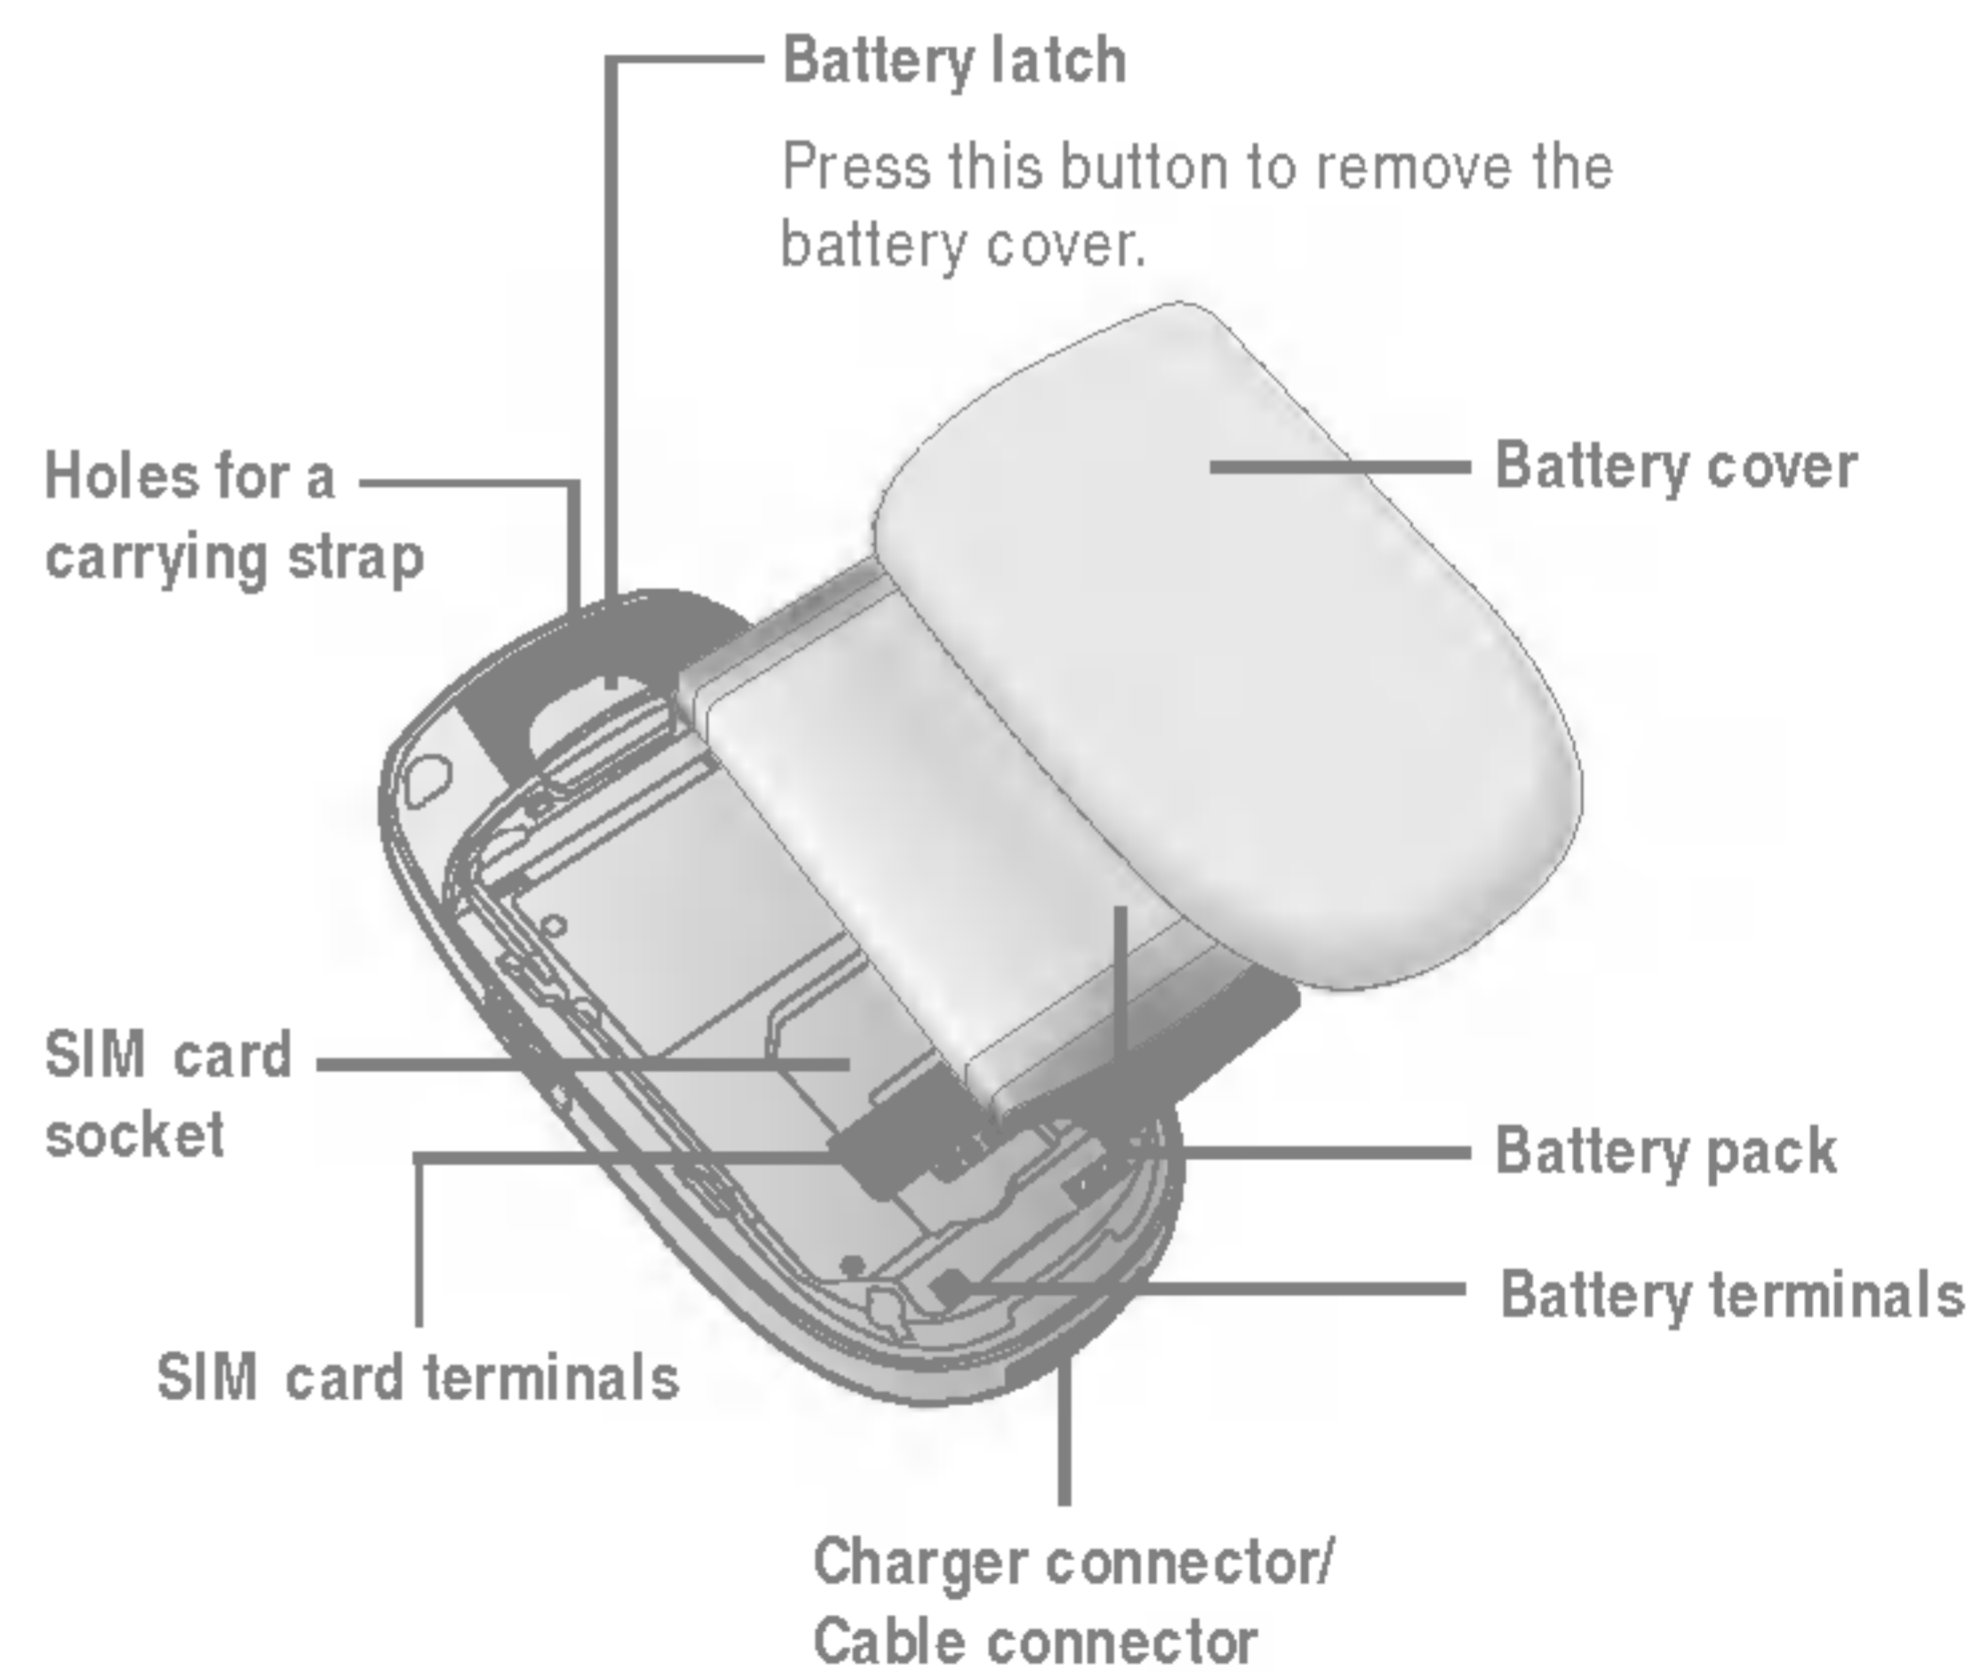

Battery latch

Press this button to remove the battery cover.

Holes for a carrying strap

Battery cover

SIM card socket


Battery pack

SIM card terminals

Battery terminals

Charger connector/
Cable connector

Open view

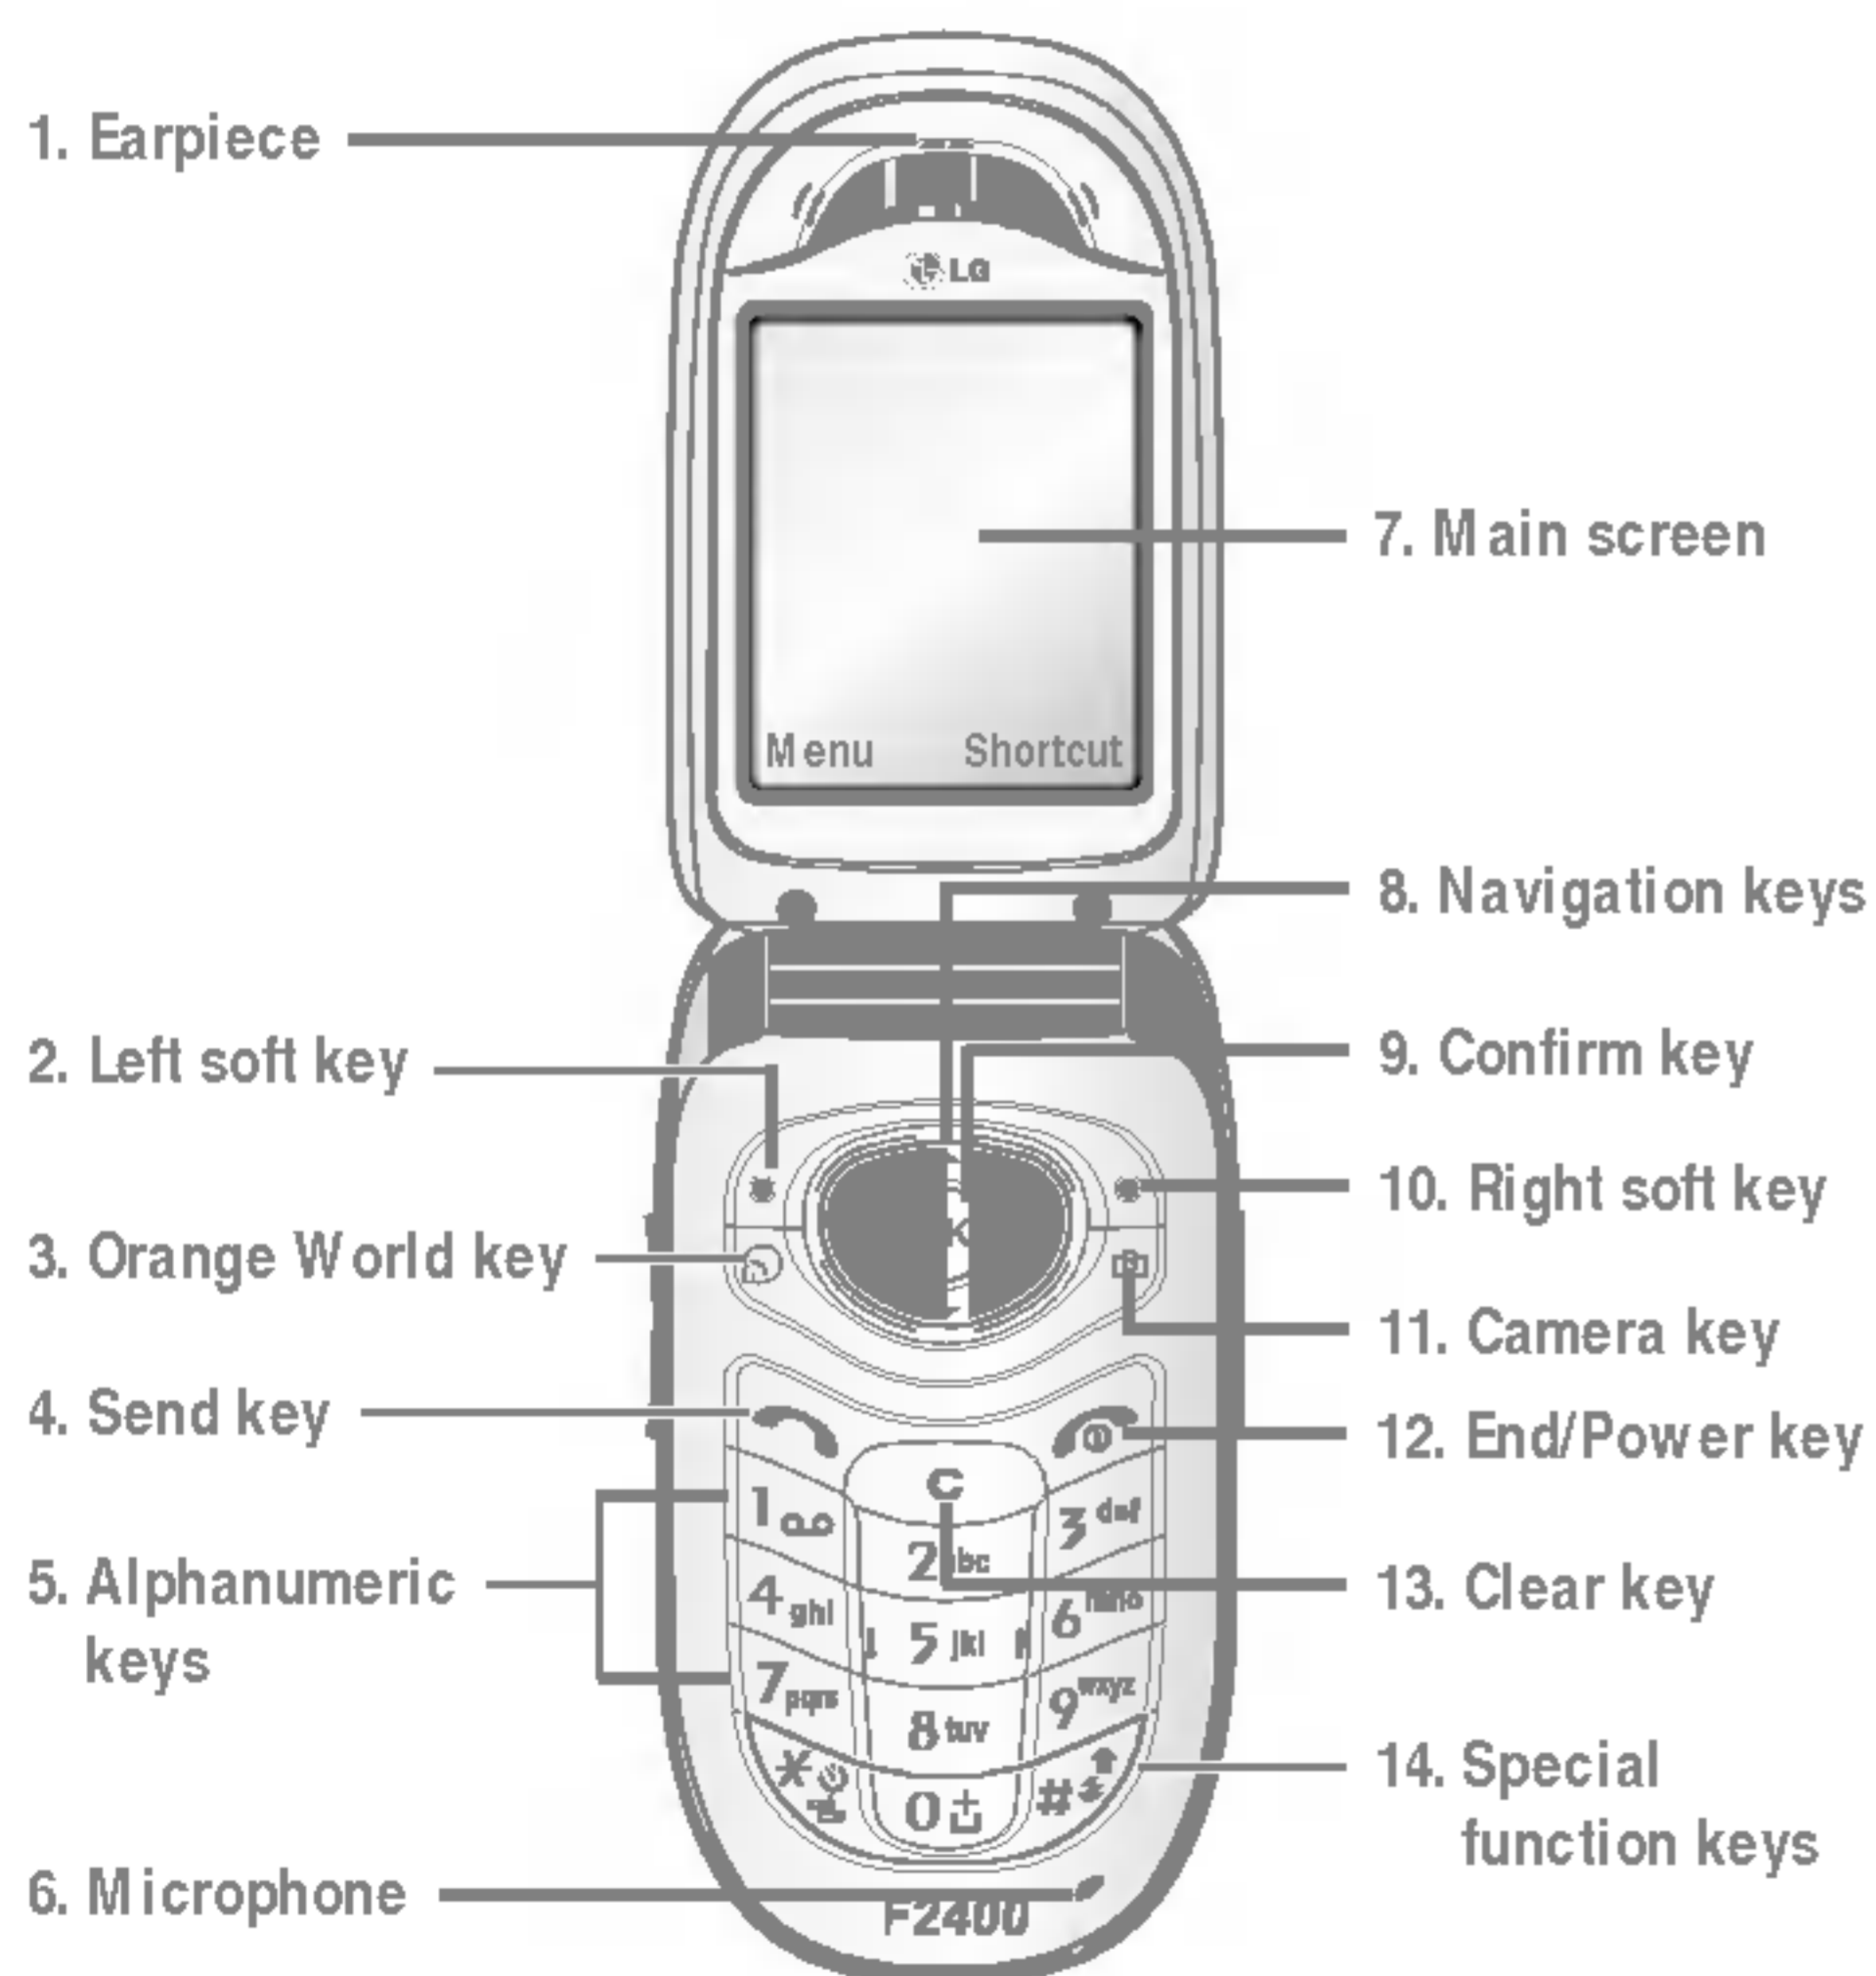

1. Earpiece

2, 10. Left soft key/ Right soft key: Performs the function indicated by the text on the screen immediately above it.

3. Orange World key: A shortcut key to access to Orange World WAP.

4. Send key: Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls by pressing the key in standby mode.




5. Alphanumeric keys: Enter numbers, letters and some special characters.

6. Microphone: Can be muted during a call for privacy.

7. Main screen: Displays phone status icons, menu items, Web information, pictures and more in full colour.

8. Navigation keys: Use to scroll through menus and move the cursor.









9. Confirm key: Selects menu options and confirms actions.











11. **Camera key:** Press this key to use the camera feature. Directly goes to the camera mode.
12. **End/Power key:** Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.
13. **Clear key:** Deletes a character by each press. Hold the key down to clear all input. Also use this key to go back to the previous screen.
14. **Special function keys:**
 -  : A long press of this key activates/deactivates the manner mode.
 -  : A long press of this key enters the international call character "+".
 -  : While keying in a phone number, a long press of this key enters a pause.

Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

On-Screen Icons

	Description
	Indicates the strength of the network signal.
	Indicates a call is in progress.
	Indicates that you are roaming on another network.
	Indicates that GPRS service is available.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates the receipt of a text/picture message.
	Indicates the receipt of a voice message.

	Description
	Indicates that the vibration ringer has been set.
	Indicates the receipt of an e-mail message.
	Indicates the Loud profile is activated.
	Indicates the Silent profile is activated.
	Indicates the Headset profile is activated.
	Indicates the General profile is activated.
	Indicates that you can use the push message service.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Indicates that you entered the security page.

Orange has added the Home screen to your phone so that you can quickly link to the features you use the most as well as see at a glance any missed calls or new messages.



Quick access

The Home screen lets you launch key features of your phone and great services from Orange in as little as two key presses. Whether you want to send a text message, take a photo or start exploring Orange World, you can now do it faster than ever.

All the options


Each time you select one of the icons in the left of your screen, you're presented with a list of options that give you even more choice. So, for example, when you want to browse Orange World, you can choose to go direct to Info, Fun, Tools or Your Page.

Installing the SIM card and the handset battery

Make sure the power is off before you remove the battery.

1. Remove the battery cover.


Press the battery release latch and slide the battery cover toward the bottom of the phone. And remove the battery cover.

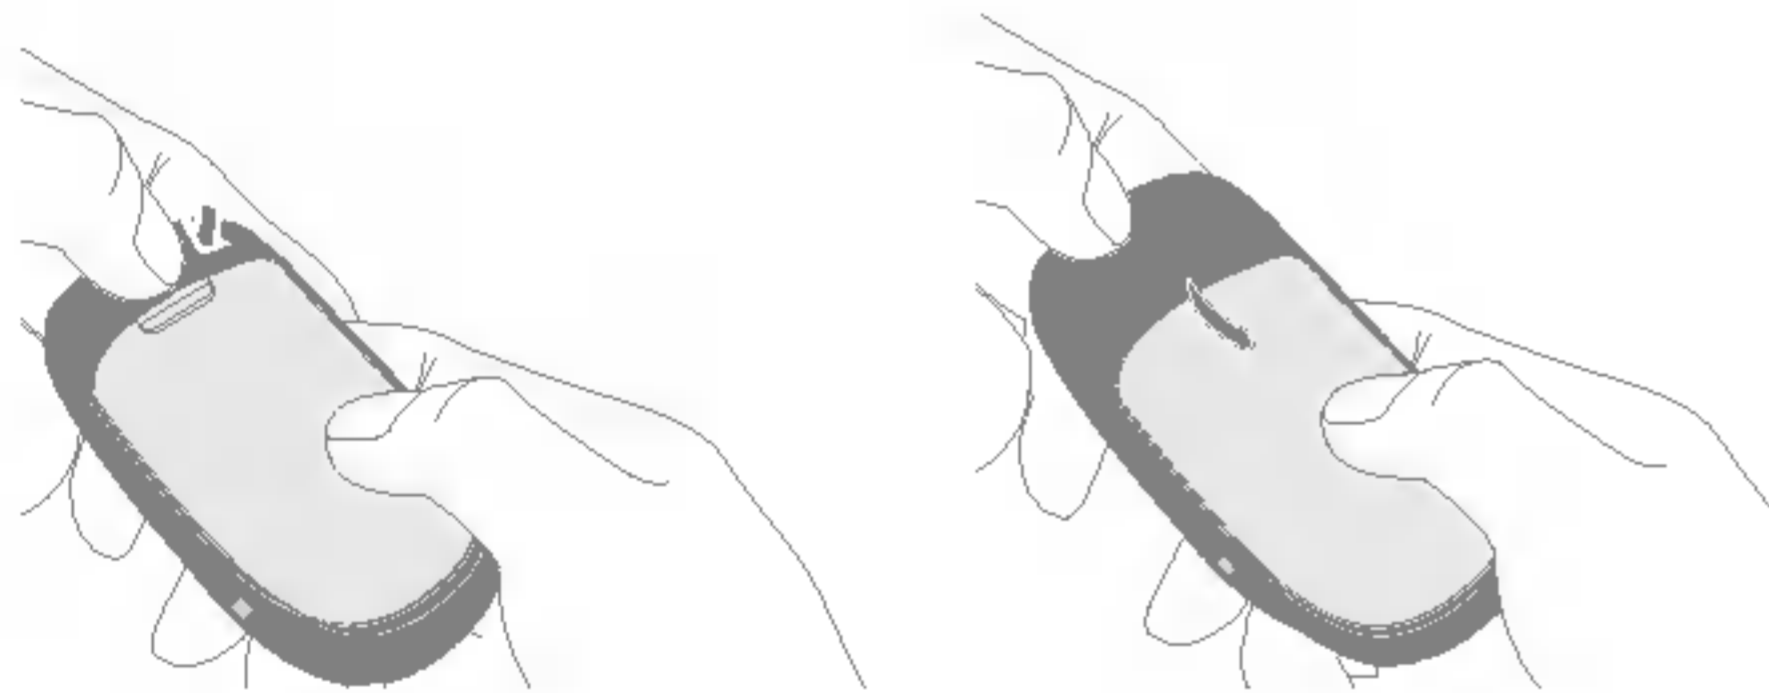

! Note Removing the battery from the phone when the power is on may cause the phone to malfunction.


2. Remove the battery.

Hold the top edge of the battery and lift the battery from the battery compartment.

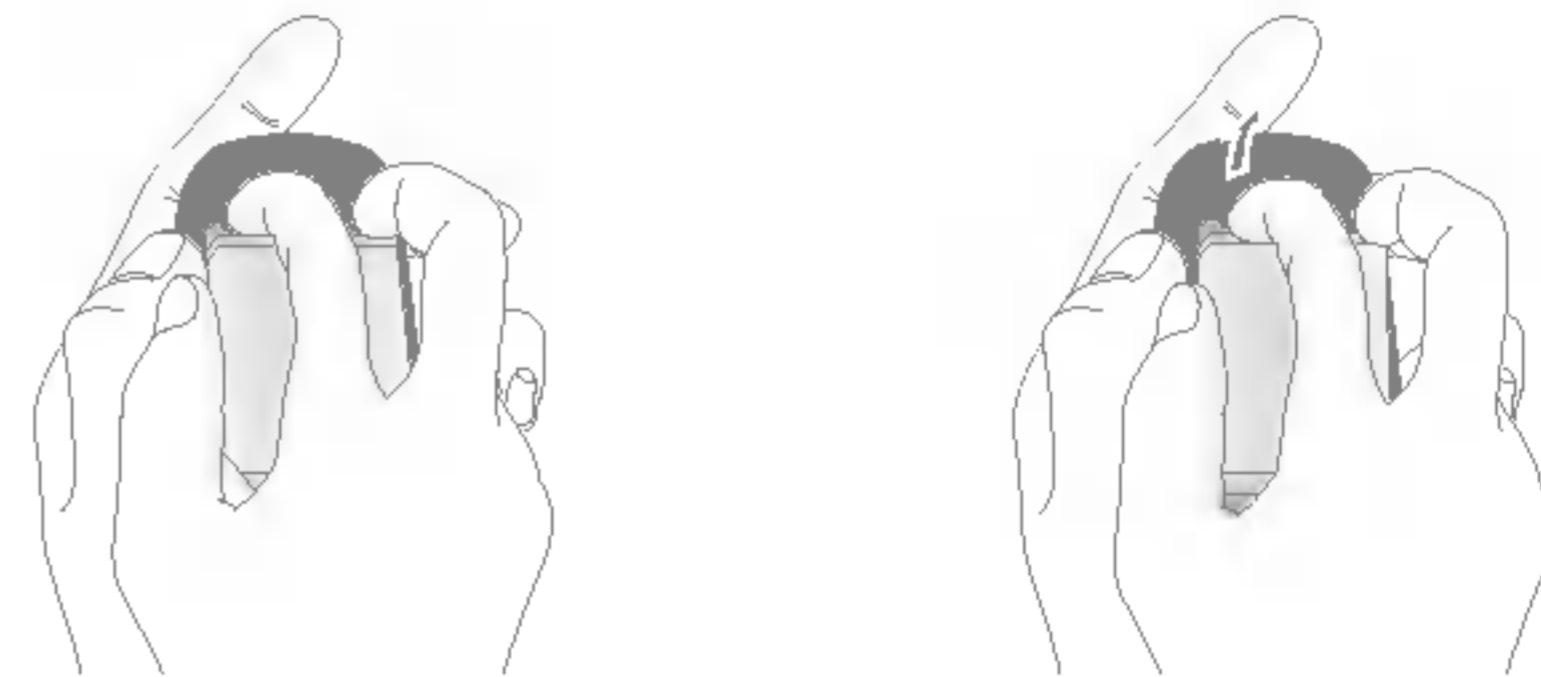

3. Install the SIM card

Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

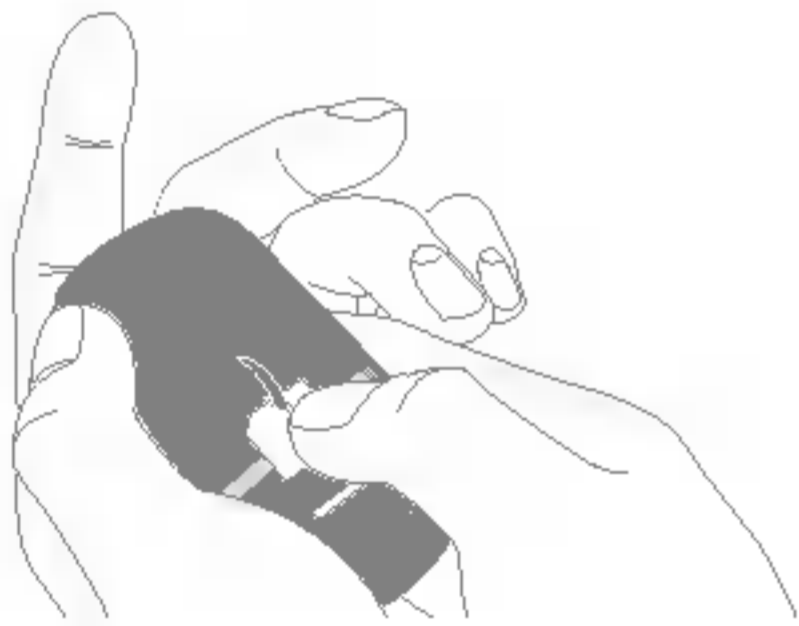

To insert the SIM card




To remove the SIM card

! Caution The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.


4. Install the battery.

Insert the bottom of the battery first into the bottom edge of the battery compartment. Push down the top of the battery until it snaps into space.

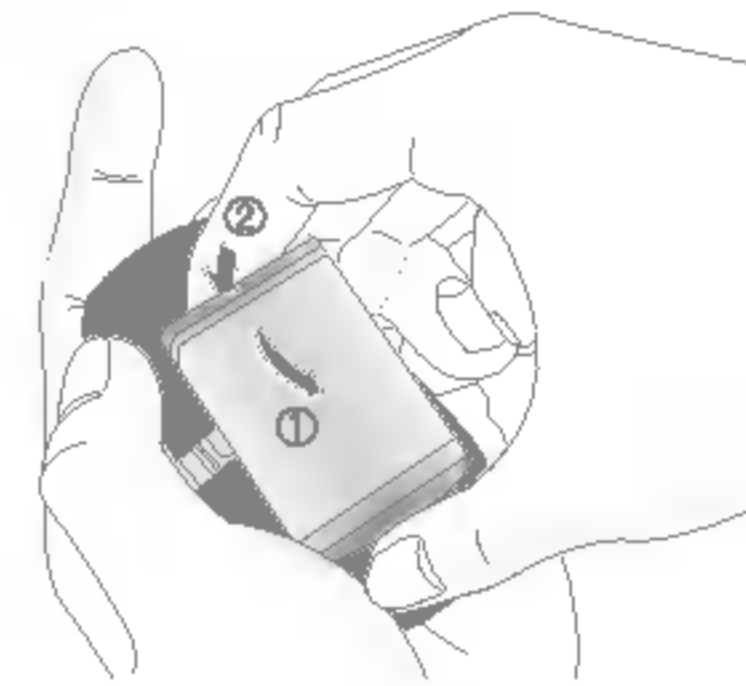


5. Replace the battery cover.

Lay the battery cover in place of the phone and slide it until the latch clicks.

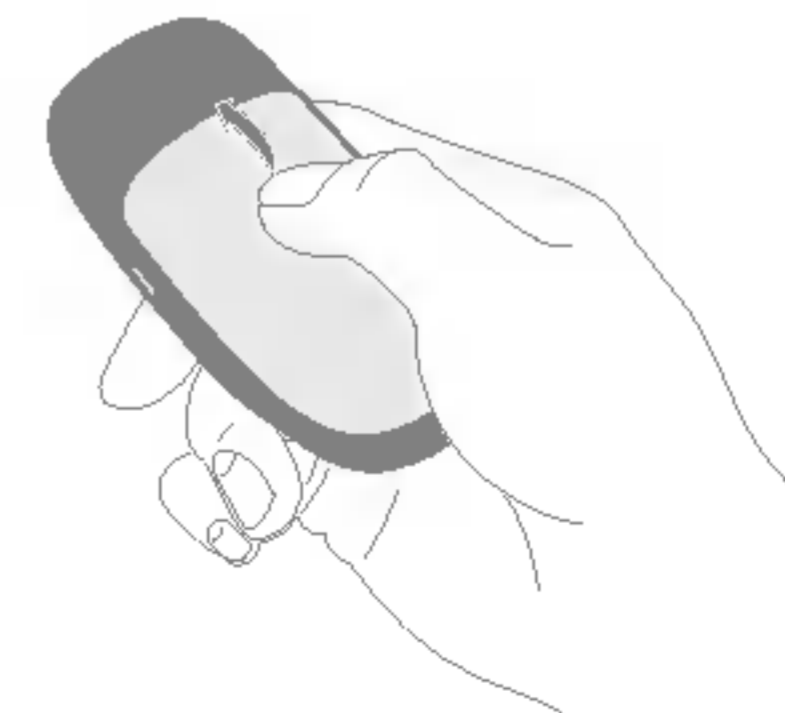

Charging the battery

To connect the mains adapter to the phone, you must have installed the battery.

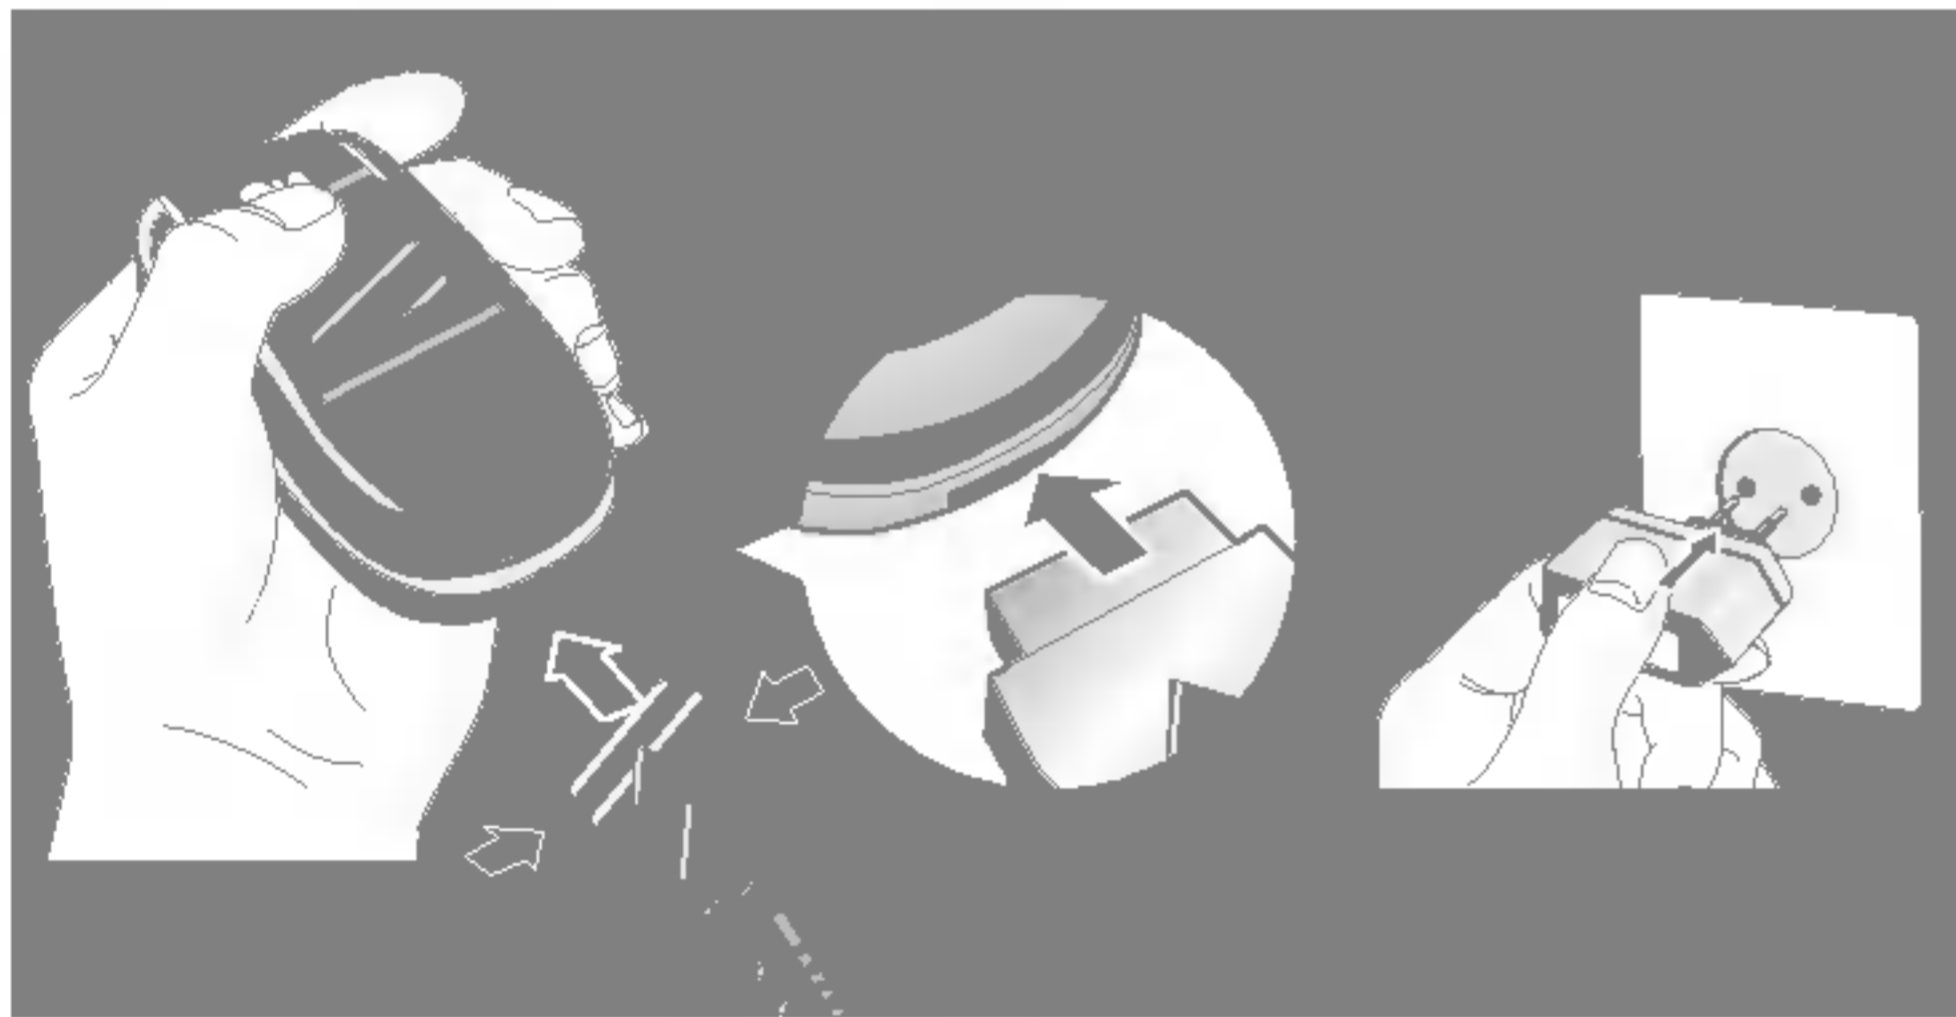


1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.
2. Connect the other end of the mains adapter to the mains socket. Use only the included packing charger.
3. The moving bars of battery icon will stop after charging is complete.

- ⚠ **Caution**
 - Do not force the connector as this may damage the phone and/or the travel adapter.
 - Insert the battery pack charger vertically to wall power outlet.
 - If you use the battery pack charger out of your own country, use an attachment plug adapter for the proper configuration.
 - Do not remove your battery or the SIM card while charging.
- ⚠ **Warning**
 - Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
 - Make sure that no sharp-edged items such as animal teeth, nails, come into contact with the battery. There is a risk of this causing a fire.
 - Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

Disconnecting the adapter


1. When charging is finished, the moving bars of the battery icon stop and 'Full' is displayed on the screen.
2. Unplug the adapter from the power outlet.
Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.

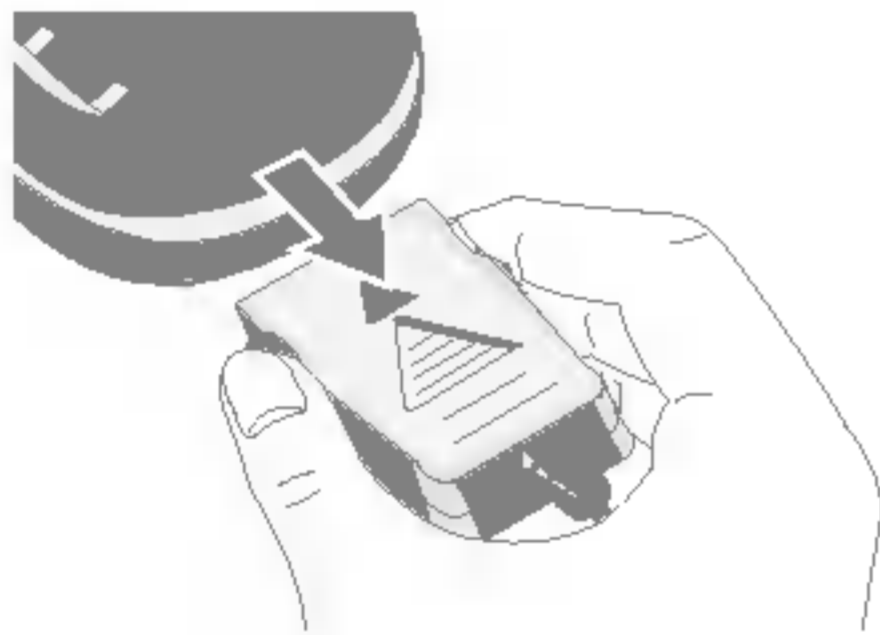

- ! Note**
- Ensure the battery is fully charged before first using the phone.
 - Do not remove the battery or SIM card while charging.
 - In the case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery. After detaching and reattaching the battery, please recharge the battery.

Turning your phone on and off

Turning your phone ON

1. Install a battery to the handset and connect the phone to an external power source such as the travel adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the **PIN code request** setting you may need to enter your PIN code.

Turning your phone OFF

1. Press  for a few seconds until the LCD screen is turned off.



Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 3-5-5]. See page 49.

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **Enable**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Disable**, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your network operator.

Security code (4 to 8 digits)

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.






Barring password



The barring password is required when you use **Call barring** [Menu 3-5-3] function. You obtain the password from your network operator when you subscribe to this function. See page 48 for further details.

Making and answering calls



Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code.
 - ▶ Press and hold the clear key () to erase the entire number.
3. Press the send key () to call the number.
4. To end the call, press the end key () or the right soft key.


Making a call using the send key

1. In standby mode, press the send key (), and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation key.
3. Press  .

Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  .


Ending a call

When you have finished your call, press the end () key.

Making a call from the address book

You can save the names and phone numbers dialled regularly in the SIM card and/or phone memory, which is address book. You can dial a number by simply looking up the desired name in the address book.

Adjusting the volume


If you want to adjust the earpiece volume during a call, use the side keys (). Press the up side key to increase and down side key to decrease the volume.

Note In standby mode with the phone open, pressing the side keys adjusts the key tone volume.

Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if saved in the phonebook) is displayed.

1. To answer an incoming call, open the phone. (When **Flip open** has been set as the answer mode. See page 47 [Menu 3-4-2].)


Note If **Press any key** has been set as the answer mode (see page 47), any key press will answer a call except for the  or the right soft key.

► To reject an incoming call, press and hold one of the side keys on the left side of the phone without opening the phone.


► You can answer a call while using the address book or other menu features.

2. To end the call, close the phone or press the  key.

Manner mode (Quick)

You can activate the manner mode by pressing and holding down the  key after opening the phone.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting.

The following text input methods are available in the phone.


T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.


ABC mode


This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field,  press the key until 123 mode is displayed.

Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the lower right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the lower right corner of the LCD screen.

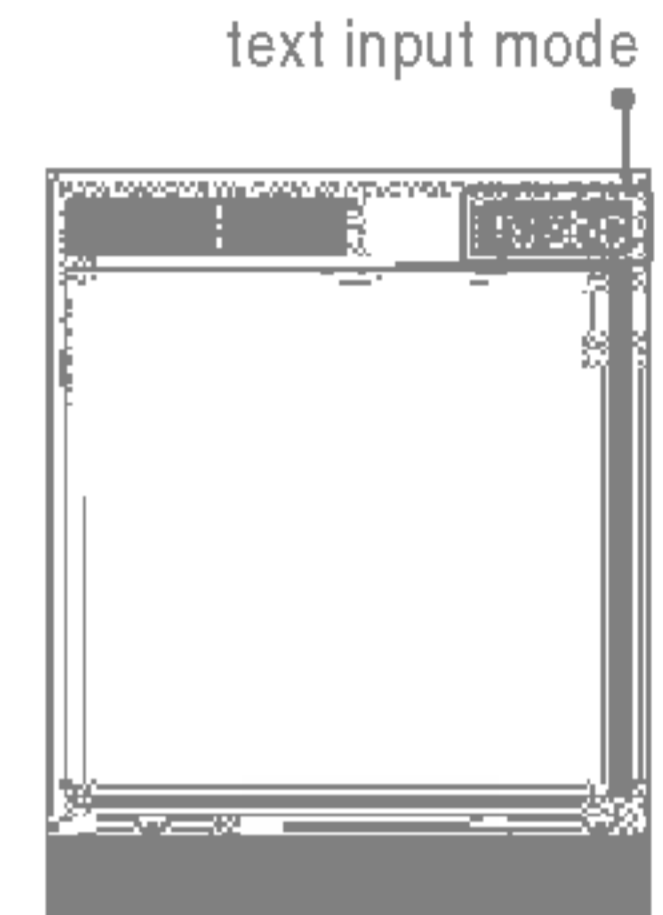

► Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.



General functions

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys to . Press one key per letter.
 - The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
 - If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.

Example:

Press to type **Good**

Press [Down navigation key] to type **Home**

- If the desired word is missing from the word choice list, add it using the ABC mode.
- You can select the language of the T9 mode. Press the left soft key [Option], then select **T9 languages**. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.

2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the key. To delete letters, press . Press and hold down to erase entire words.

! Note To exit from the text input mode without saving your input, press . The phone goes back to standby mode.











► Using the ABC mode

Use the to keys to enter your text.

1. Press the key labelled with the required letter:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. To insert a space, press the key once. To delete letters, press the key. Press and hold down the key to clear the whole display.



Note Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper Case	Lower Case
	., / ? ! - : ' " 1 @	., / ? ! - : ' " 1 @
	A B C 2 Ä Å Æ Ç	a b c 2 ä å æ ç
	D E F 3 È É Ê	d e f 3 è é ê
	G H I 4 Ï Î Ñ	g h i 4 ï î ñ
	J K L 5	j k l 5
	M N O 6 Ñ Ö Ø Ò Ó Ô Õ Æ	m n o 6 ñ ö ø ò ó ô õ æ
	P Q R S 7 ß Ş	p q r s 7 ß ş
	T U V 8 Ü Ù Ú Û	t u v 8 ü ù ú û
	W X Y Z 9	w x y z 9
	Space 0	Space 0

► Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Address book

You can store phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can store up to 200 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Address book** menu.



In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.


Making a second call

You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the phonebook during a call, press the right soft key then select **Add new**.


Switching between two calls

To switch between two calls, press the left soft key then select **Swap**.

Answering an incoming call


To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call waiting** [Menu 3-4-4] on page 47.

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting left soft key, then **Hold & Answer**. You can end the current call and answer the waiting call by selecting left soft key and then **End & Answer**.

Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key [Menu] key and selecting the **Conference/Reject** or by pressing the .



Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.

Switching DTMF tones on during a call


To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.

Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the

person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting **Swap**.

Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference/Join all**.

Putting a conference call on hold

Press the left soft key, then select the **Conference/Hold all**.



Activate the conference call on hold

Press the left soft key, then select the **Conference/Join all**.

Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference/Join all**.


Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference/Private** to put all the other callers on hold.

Ending a conference call

The currently displayed caller from a conference call can be disconnected by pressing the  key. To end a conference call, press the left soft key, then select the **Conference/End multiparty**. After pressing the left soft key, selecting **Conference/End all** will end all the active and on-hold calls.

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.
- ▶ Page where you can find the feature description.

You can go to the desired menu using the left soft key [Menu], navigation keys and the [OK] key. And you can also take a shortcut by pressing the corresponding number key of desired menu after pressing the left soft key [Menu].

1. Call history (see page 37)

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Delete recent calls
- 5 Call charges
- 6 GPRS information

2. Address book (see page 40)

- 1 Search
- 2 Add new
- 3 Caller groups
- 4 Speed dial
- 5 Settings
- 6 Copy all
- 7 Delete all
- 8 Information

3. Settings (see page 44)

- 1 Alarm clock
- 2 Date & Time
- 3 Phone settings
- 4 Call settings
- 5 Security settings
- 6 Network settings
- 7 GPRS setting
- 8 Reset settings



Menu Tree



4. Camera (see page 52)

- 1 Take photo
- 2 Take framed photo
- 3 Take continuously
- 4 Photo album
- 5 Settings



5. Messages (see page 57)

- 1 New Message
- 2 Inbox
- 3 Orange Messenger
- 4 Mailbox
- 5 Drafts
- 6 Outbox
- 7 Listen to voice mail
- 8 Info service
- 9 Templates
- 0 Settings



6. Orange World (see page 74)



7. Profiles (see page 76)

- 1 Normal
- 2 Vibrate only
- 3 Silent
- 4 Loud
- 5 Headset





8. Media album (see page 78)

- 1 Games & Apps.
- 2 Pictures
- 3 Sounds
- 4 More pictures




9. Extras (see page 80)

- 1 Bluetooth
- 2 Calculator
- 3 Unit converter
- 4 World time
- 5 Voice recorder
- 6 Memory status
- 7 Orange Help

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked [] and []. Each menu and sub-menu lets you view and alter the settings of a particular function

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

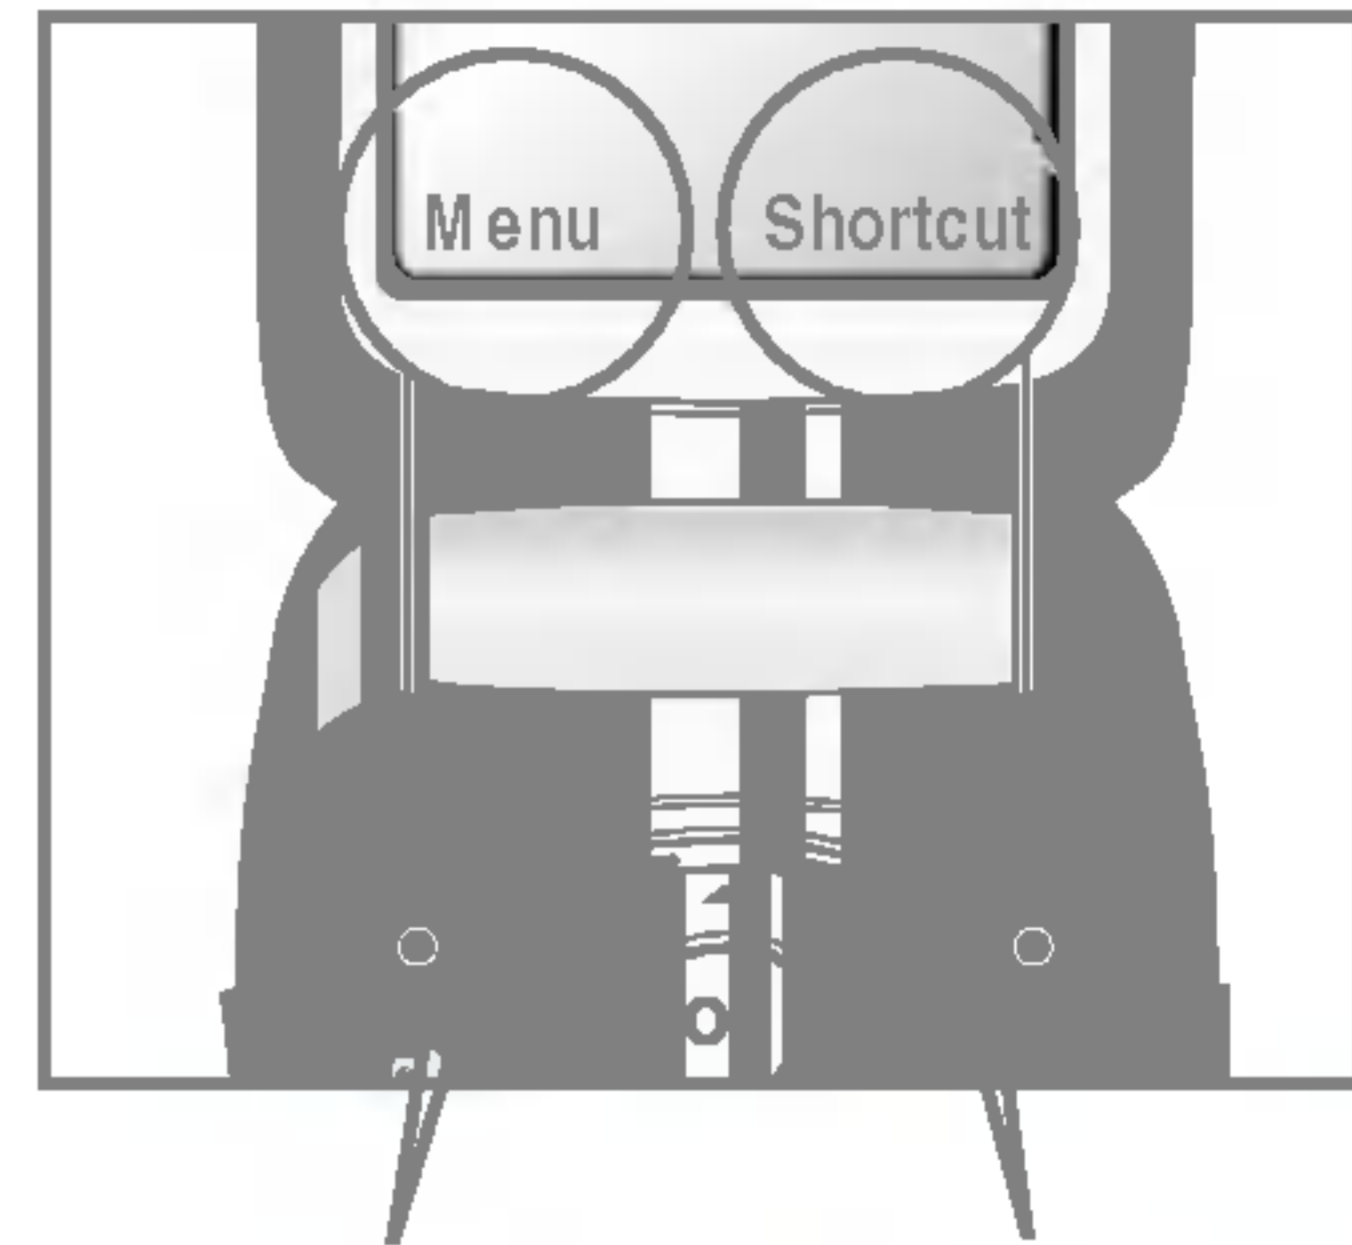

Press the left soft key to access the available menu.

Press the right soft key to access the shortcut menus.

You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times and costs.

Press the Menu key () and select **Call register** using navigation keys.

Missed calls

Menu 1-1

This option lets you view the last 10 unanswered calls. After selecting a phone number, you can make a call to the number by pressing the send key. After pressing the left soft key [Options], you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Received calls

Menu 1-2

This option lets you view the last 10 incoming calls. After selecting a phone number, you can make a call to the number by pressing the send key. After pressing the left soft key [Options], you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Dialled calls

Menu 1-3

This option lets you view the last 10 outgoing calls (called or attempted). After selecting a phone number, you can make a call to the number by pressing the send key. Using the [Option] key, you can also:

- View the number if available and call it or save it in the phonebook.



Call history

- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

! Note You can delete all the call records from the list using the **Delete recent calls** menu [Menu 1-4].

Delete recent calls Menu 1-4

Use this to delete the missed call list, received call list, or dialled call list. You can also delete all call lists at a time selecting **All calls**.

Call charges Menu 1-5

Call duration Menu 1-5-1

Use this to view the duration of your incoming and outgoing calls. You can check each call duration at the bottom of screen while scrolling using the up/down navigation keys. You can reset the call timer by selecting **Reset all**.

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made or received calls since the timer was last reset.
- ▶ **Received calls:** Length of the incoming calls.
- ▶ **Dialled calls:** Length of the outgoing calls.
- ▶ **Reset all:** You can delete all records of call timer.

! Notice The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, etc.

Call costs Menu 1-5-2

This network service allows you to check the last call cost and the total call cost. The call cost is displayed on the bottom of the LCD screen. To reset the call cost, select **Reset all**. You are requested to enter the PIN2 code.

! Note The actual cost invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, taxes, etc.



Settings

Menu 1-5-3

- ▶ **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices.
To select the **Currency** or **1 Unit** in this menu, you need the PIN2 code.
 - ❗ **Note** When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.
- ▶ **Set credit:** This network service allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining unit is shown. If you select **Change**, you can change your charge limit.
- ▶ **Auto display:** This network service allows you to see automatically the cost of your last call. If you select **On** in **Auto display** menu, you can see the cost of the last call when the call is released.

GPRS information

Menu 1-6

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online. (GPRS stands for General Packet Radio Service.)

Call duration

Menu 1-6-1

You can check the duration of **Last call** and **All calls**. You can also reset the call timers by selecting **Reset all**.

Data volumes

Menu 1-6-2

You can check the **Sent**, **Received** or **All** data volumes. You can also reset the counter by selecting **Reset all**.

You can save phone numbers and their corresponding names in the memory of your SIM card.

- Press the left soft key [Menu] in standby mode, then select **Address book**.

Search

Menu 2-1

1. Select **Search**. You are asked to enter a name.
2. Enter the start of the name that you wish to find and press left soft key [Search].

Note You can also scroll through the address book from the beginning, by pressing the left soft key [List] directly.

3. After finding the desired name, you can make a call to the number by pressing the [send] key. Or press the left key [Options] to use the following options.

- ▶ **Edit:** Edits the name, number, and the listing group.
- ▶ **Write text/picture message:** Use this to write messages.
- ▶ **Send via Bluetooth:** Sends the address book entry via Bluetooth.

- ▶ **Copy:** Use this to copy the address book entry from SIM to the phone memory or vice versa.

- ▶ **Main number:** You can select the one of mobile, home, office that you often use. The main number will be displayed first, if you set this menu.

- ▶ **Delete:** Deletes the entry.

Add new

Menu 2-2

You can add an entry using this function.

There are 2 memories: Phone memory and SIM memory. To select the memory, go to **Set memory** [Menu 2-5-1]. The phone memory capacity is 200 entries. You can enter up to 20 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

1. Scroll to highlight **Add new**, and press [Select].
2. You can add new phonebook entries to SIM memory or the phone memory. To select the memory, go to **Set memory** [Menu 2-5-1].



► **Adding new entries into SIM memory**

You can enter a name and number, and select the required group. (Depends on the SIM)

► **Adding new entries into the phone memory**

You can enter a name, numbers, E-mail address and memo, and select the required group.

Caller groups

Menu 2-3

You can classify the address book entries with 7 groups. Use this feature to assign a ring tone and/or a graphic icon to each group. This enables you to identify callers from which group.

1. Select **Caller groups**. Every group list will be displayed: **Family**, **Friend**, **Colleague**, **VIP**, **Group1**, **Group2**, and **Others**.
 2. Select the group name that you want to manage by pressing the left soft key [Select]. The following submenus will be displayed except for **Others**.
- **Member list**: Displays the member list in the group.

► **Group ring tone**: Use this to select the ring tone to be used when you receive a voice phone call from a person in the group.

► **Group icon**: Use this to select the graphic icon to be displayed when you receive a call from a person in the group.

► **Add member**: Add a member to the group.

► **Remove member**: Delete a member from the group.

► **Rename**: Assigns a new name to the group.

Speed dial

Menu 2-4

You can assign any of the keys 2 to 9 with a name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Scroll to **Speed dial**, then press [Select].
2. To add a number to **Speed dials**, press the left soft key [Select]. Search the name through the address book.
3. You can change or delete a speed dial number, make a call or send a message by pressing the left soft key [Options].



Settings

Menu 2-5

Set memory

You can select the memory for the Address book feature between the SIM and the phone. If you select **Variable**, when adding entry, the phone will ask where to save the number.

Search by

You can set the phone to search by **name** or **number**, when you search the Address book. If you select **Variable**, the phone will ask how to search when you search the Address book.

View options

Scroll to highlight **View options**. Then press  Select.

- **Name only:** Set the address book list with displaying only name.
- **With pictures:** Set the address book list with the information of character and picture.

- **Name & number:** Set the address book list with the name and the number.

Copy all

Menu 2-6

You can copy/move entries from the SIM card memory to the phone memory and vice versa.


- ▶ **SIM to Phone:** Use this to copy the entry from the SIM Card to Phone memory.
- ▶ **Phone to SIM:** Use this to copy the entry from the Phone memory to the SIM Card.

The following options are available.

- **Keep original:** When copying, the original dial numbers are kept.
- **Delete original:** When copying, the original dial numbers will be erased.

Delete all

Menu 2-7


You can delete all entries in SIM or phone memory. This function requires the security code. Press  to return to standby mode.



Information

Menu 2-8

- ▶ **Service dial number (SIM dependent):** Use this to view the list of Service Dialling Numbers (SDN) assigned by your network operator (if supported by the SIM card). Such numbers include the emergency, directory enquiries and voice mail numbers.

1. Select the Service dial number option.
2. The names of the available services will be shown.
3. Use the up/down navigation keys to select a service. Press .

- ▶ **Memory status:** You can check the current memory status of the SIM card and phone memory.
- ▶ **Own number:** Use this to display your phone number in the SIM card.
- ▶ **Business card:** You can send your e-business card through the phone. To make a business card, do the followings.

1. Press the left soft key [Edit].
2. Key in the name, mobile phone number, office number, Fax number, and E-mail address.





Press the Menu key () and select **Settings** using navigation keys.

Alarm clock

Menu 3-1

There are 5 alarm clocks available. Set the alarm to ring at a specific time.

After selecting an alarm clock using the left soft key [Select],

1.  **Alarm on/off:** Select On using the left/right navigation key. To deactivate the alarm function, select Off.
2.  **Alarm time:** Enter the alarm time using the numeric keys
3.  **Repeat:** Select the desired one from Once, Mon~Fri, Mon~Sat, and Everyday using the left/right navigation key.
4.  **Alarm melody:** Select the desired alarm melody using the left/right navigation key.
5. Press the left soft key [OK].

6. You can edit the alarm clock name. After keying in the name, press the left soft key [OK].

When an alarm function is activated, “  ” is shown in standby mode.

When the alarm time is reached, it sounds the alarm melody.

- ▶ To turn off the alarm, press the right soft key [Quit].

Date & Time

Menu 3-2

This option lets you change the current time and date displayed.

The following options are available.

Set date

Menu 3-2-1

Use this to enter the day, month and year. You can change the date format via the **Date format** menu option.



Date format

Menu 3-2-2

DD/MM/YYYY (day/month/year)

MM/DD/YYYY (month/day/year)

YYYY/MM/DD (year/month/day)

Set time

Menu 3-2-3

Use this to enter the current time. You can choose the time format via the **Time format** menu option.

Time format

Menu 3-2-4

24-hour

12-hour

Phone settings

Menu 3-3

Many features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone settings** menu.

Display settings

Menu 3-3-1

- ▶ **Wallpaper:** Select the wallpaper which will be displayed on the main LCD and the sub LCD screen each in standby mode.
- ▶ **Menu colour:** Your Phone provides you with 4 menu colour themes. Set the menu colour by scrolling and pressing the Select key.
- ▶ **Greeting note:** If you select **On**, you can edit the text which will be displayed in standby mode.
- ▶ **Backlight:** Use this to select whether or not the phone uses the backlight. A small increase in standby/talk time can be achieved by turning the backlight off.
- ▶ **Information window:** You can preview the current status of the selected menu before opening the menu. The status is shown at the bottom of the screen.
- ▶ **Network name:** If you select **On**, you can see the name of network service provider which is displayed in standby mode.



Settings

Language

Menu 3-3-2

You can select the display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used. English will be set if the language on the SIM card is not supported by the phone.

Call settings

Menu 3-4

To change the settings for call diverting.

Call divert

Menu 3-4-1

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your network operator. Select one of the divert options, for example, select **If busy** to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available.

All voice calls: Diverts all voice calls unconditionally.

If busy: Diverts voice calls when the phone is in use.

If no reply: Diverts voice calls which you do not answer.

If out of reach: Diverts voice calls when the phone is switched off or out of coverage.

All data calls: Diverts to a number with a PC connection unconditionally.

All fax calls: Diverts to a number with a fax connection unconditionally.

Each option has the following menu:

► **Activate:** Activates the corresponding service.

- **To voice mail centre:** Forwards to message centre. This function does not apply to **All data calls** and **All fax calls** menus.

- **To other number:** Input the number for call diverting.

- **To favourite number:** You can check recent five diverted numbers.

► **Cancel:** Cancels the selected call divert.





► **View status:** You can check the status of the service.

Cancel all: Cancels all call divert settings.

Answer mode Menu 3-4-2

Select the desired mode to answer a call.

► **Flip open:** When the phone rings, you can answer a call simply by opening the flip.

► **Press any key:** When the phone rings, you can answer a call by pressing any key except the  key and the right soft key ().

► **Send only:** You can answer a call only by pressing the send key.

Send my number Menu 3-4-3

This network service lets you decide whether your phone number is displayed (On) or hidden (Off) from the person you are calling. Select **Set by network** to reset the phone to the setting that you have agreed upon with your service provider.

Call waiting (Network Service) Menu 3-4-4

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.

Minute minder Menu 3-4-5

When set to **On**, the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

Auto redial Menu 3-4-6

Select **On**, and your phone will make a maximum of five attempts to connect the call after an unsuccessful call attempt.

Security settings Menu 3-5

Various passwords are used to protect certain features of your phone. Refer to page 23 for the various passwords.



PIN code request

Menu 3-5-1

When the **PIN code request** feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note Before disabling the PIN code request feature, you must enter your PIN.

The following options are available:

- **On:** You must enter the PIN each time the phone is switched on.
- **Off:** The phone connects directly to the network when you switch it on.

Phone lock

Menu 3-5-2

When the **Phone lock** feature is enabled, the phone is locked and you must enter the phone password each time the phone is switched on. The password is factory set to **0000**. To change the phone password, refer to the **Change codes – Security code** menu option [Menu 3-5-5-3]. Once the correct password has been entered, you can use the phone until you switch it off.

Call barring

Menu 3-5-3

Call barring lets you restrict the making and receiving of calls with your phone. For this function, you need the barring password, which you can obtain from your service provider.

The following options are available:

- ▶ **All outgoing:** No call can be made.
- ▶ **Outgoing international:** International calls cannot be made.
- ▶ **International when roam:** When abroad, calls can be made only to numbers within the current country and to your home country, the country where your home network provider is located.
- ▶ **All incoming:** No call can be received.
- ▶ **Incoming when abroad:** Calls cannot be received when you are using your phone outside your home service area.
- ▶ **Cancel all:** All call barring settings are deactivated; calls can be made and received normally.



► **Change password:** Use this to set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one. Once you have entered a new password, you are asked to confirm it by entering it again.

❗ **Note** To use **Call barring**, you must input the network password. When calls are barred, calls may be possible to certain emergency numbers on some networks.

Fixed dial number (FDN) (SIM dependent) Menu 3-5-4

Use this to restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM card. The PIN2 code is required.

The following options are available:

- **Activate:** Use this to only call phone numbers saved in the phonebook. You must enter your PIN2 code.
- **Cancel:** Allows you to call any number.
- **Number list:** Use this to view the numbers saved as fixed dial numbers.

❗ **Note** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

Change codes Menu 3-5-5

The **Change codes** feature lets you change your current password to a new one. You must enter the current password before you can specify a new one.

Use this to change the access codes: **PIN2 code**, **Security Code**

❗ **Note** PIN: Personal Identification Number

Network settings Menu 3-6

The **Network settings** feature enables you to indicate whether the network used when roaming (outside your home area) is selected automatically, manually or preferably.

❗ **Note** You can select a network other than your home network only if it has a valid roaming agreement with your home network.



Automatic

Menu 3-6-1

Use this to set the phone to automatically search for and select one of the cellular networks available in your area.

The phone will default back to **Automatic** if it is switched off.

Manual

Menu 3-6-2

If you want to select the desired network manually from a list of network, you can activate this function. If the connection to the manually selected network is lost, the phone will sound an error tone and ask you to select a network again. The selected network must have a roaming agreement with your home network, that is, the operator whose SIM card is in your phone. The phone will let you select another network if the phone fails to access the selected network. If you switch off the phone, the phone will be reset to **Automatic**.

Preferred

Menu 3-6-3

You can set a list of preferred networks the handset should attempt to register with first, before attempting to register to any other networks. This list is created from the handset's predefined list of known networks.

GPRS setting

Menu 3-7

GPRS(General Packet Radio Service) is a technology that allows mobile phones to be used for sending and receiving data over the mobile network. GPRS is a data bearer that enables wireless access to data network such as the Internet.

Before you can use GPRS technology

- ▶ You need to subscribe to the GPRS service. For availability and subscription to GPRS service, contact your network operator or service provider.
- ▶ You need to save the GPRS settings for the applications used over GPRS.



If you select **Power on** and you are in a network that supports GPRS, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If you select **When needed**, the phone will use a GPRS connection only if you start an application or action that needs it. The GPRS connection is closed after it is no longer required by any application.

! Note If there is no GPRS coverage and you have chosen **Automatic**, the phone will periodically try to establish a connection.

Reset settings

Menu 3-8

You can reset your phone to its default configuration. To do so, proceed, as follows.



1. Select the **Reset settings** menu option.
2. Enter the 4-digit security code.

! Note The security code is preset to 0000.

The F2400 has a built-in camera. It supports Zoom, Colour/Grey settings, and Multi burst functions.

Take photo





Menu 4-1

Press the Menu key () and select **Camera** → **Take photo**. Or, press the camera key () in standby mode. The camera module opens and you'll see the view to be captured.

Before shooting, you can set the following values.




— preview option menu bar

1. **Digital zoom** (): x1, x2, x4, x8
2. **Tone** (): Colour, Sepia, Black and white
3. **Brightness** (): +2, +1, 0, -1, -2
4. **Timer** (): Off, 3 sec., 5 sec.

5. Memory (): Shows the current memory status.


Note If the memory is full, "Memory full" message is popped up and you cannot save a photo. Create space by deleting old photos in **Photo album**.

6. Flash (): Select the flash on ()/off () by the up/down navigation keys.


7. Resolution (): 640x480(VGA), 320x240(QVGA), 128x160(Screen), 48x48(Address book)

8. Image quality (): Fine/Normal/Basic

1. Center the desired option menu using the left/right navigation keys.
2. Select the desired value with the up/down navigation keys.
3. After finishing all the settings, focus on the subject to capture and press the Camera key or OK key. With a click, the image is captured and the following menu bar appears.

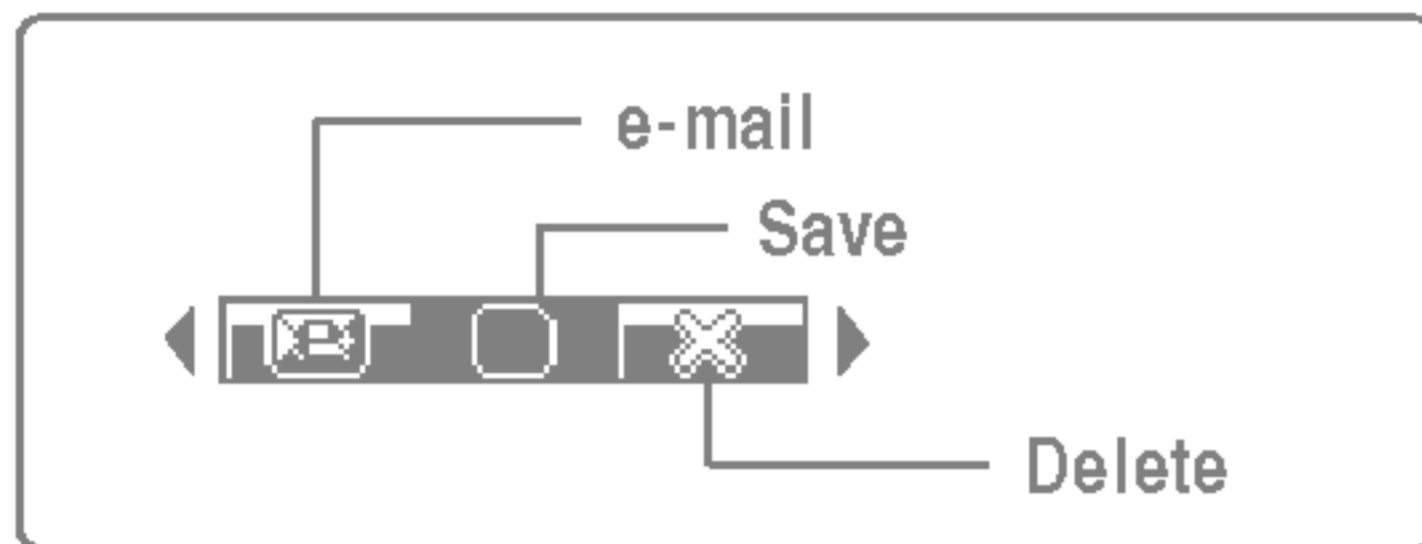

Note When the resolution is set to 48x48 (Address book), the following menu bar appears.

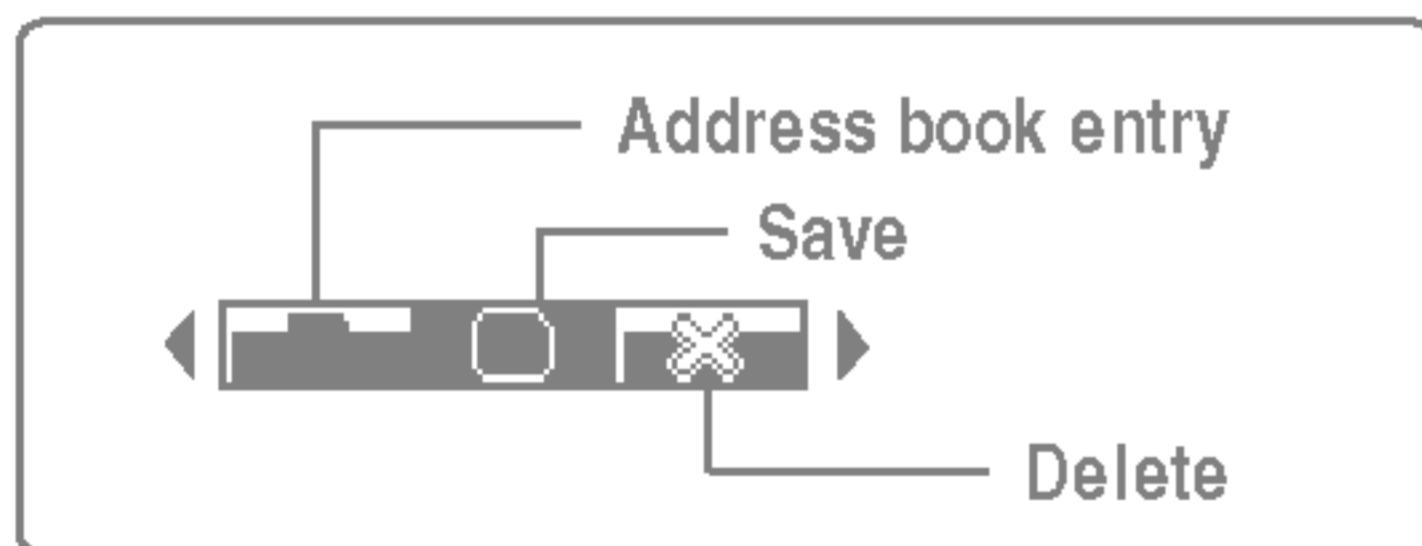

If **Auto save** [Menu 4-5-3] is set to **Yes**, the captured image is automatically saved without displaying the above menu bar. (Refer to page 56.)

- To save the image, centre the "■" and press the OK key. If you don't want to save the image, centre the "X" and press the OK key.

You can send the image through e-mail by selecting "■".

You can also send the image via picture message by selecting "■".

For further information regarding picture message/e-mail writing, refer to page 58-60.

After taking a photo in 48x48 (Address book), you can directly save the image in the address book by selecting "■".

Take framed photo

Menu 4-2


You can enjoy taking photos in diverse preset frames. 7 preset frames are available. Press the Menu key and select **Camera** → **Take framed photo** using navigation keys.

Before shooting, you can set the following options.



1. **Frame** (■): Select the desired one from 7 preset frames.
2. **Image quality** (■): Fine/ Normal/ Basic.
3. **Tone** (■): Colour/ Sepia/ Black and white
4. **Brightness** (■): -2, -1, 0, +1, +2
5. **Digital zoom** (■): x1, x2, x4
6. **Timer** (■): Off, 3 sec., 5 sec.
7. **Memory** (■): Shows the current memory status.
8. **Flash** (■): Select the flash on (■)/off (■) by the up/down navigation keys.

1. Center the desired option menu using the left/right navigation keys.
2. Select the desired value with the up/down navigation keys.
3. After finishing all the setting, focus on the subject to capture and press the Camera key or OK key. With a click, the image is captured and the following menu bar appears.

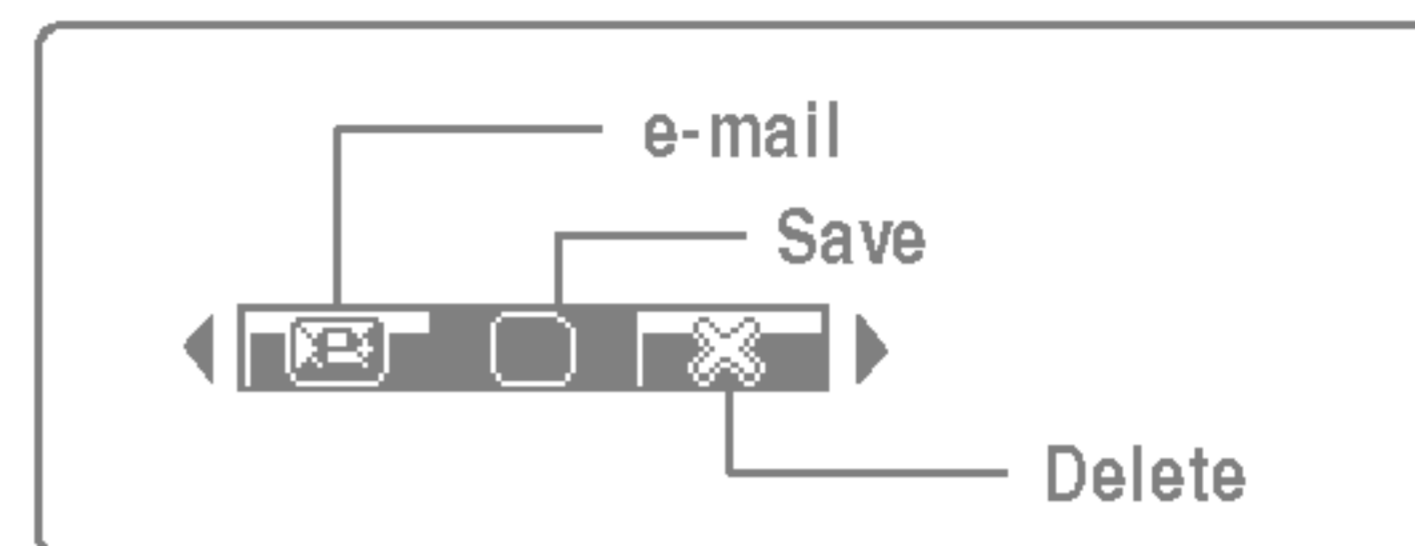

Note If **Auto save** [Menu 4-5-3] is set to **Yes**, the captured image is automatically saved without displaying this menu bar. (Refer to page 56.)

4. To save the image, center the (■) and press the OK key. If you don't want to save the image, center the (■) and press the OK key.




You can send the image through e-mail by selecting "■".

You can also send the image via multimedia message by selecting (■).



Take continuously

Menu 4-3

You can take the maximum of 9 photos subsequently at the same time. After taking a photo, you can view it by pressing , . You can also save it by pressing .

! Reference If you set 320x240 in resolution you can take only 6 pictures. If you set 128x160, it can take 9 pictures.

Photo album

Menu 4-4

All the photos taken are stored in this menu. The photos are classified into **General pictures**, **Mode pictures**, and **Address book pictures**. And in **All pictures**, you can view all the photos. You can access the following submenus by pressing the left soft key [Options].

- ▶ **Multi view:** You can view the maximum of 9 thumbnails in a screen.
- ▶ **Write email message:** You can send the photo through e-mail.
- ▶ **Write picture message:** You can send a picture through MMS.

▶ **Set as wallpaper:** You can set a picture as a wallpaper.

▶ **Slide show:** You can view the pictures in slide show.

▶ **Delete:** You can delete a picture.

▶ **Edit title:** You can edit the title of picture.

▶ **View information:** You can view information of picture such as title, size, date, time.

▶ **Protection:** If you activate this function on each picture, you can't send, edit or delete.

Settings

Menu 4-5

Memory status

Menu 4-5-1

You can check the current memory status on the phone.

Clear album

Menu 4-5-2


Use this menu to delete all the photos. You are asked to confirm this action.

Auto save

Menu 4-5-3

If you set this **Yes**, the captured images are automatically saved without displaying the Save menu bar.

<Taking photos in the clamshell closed state>

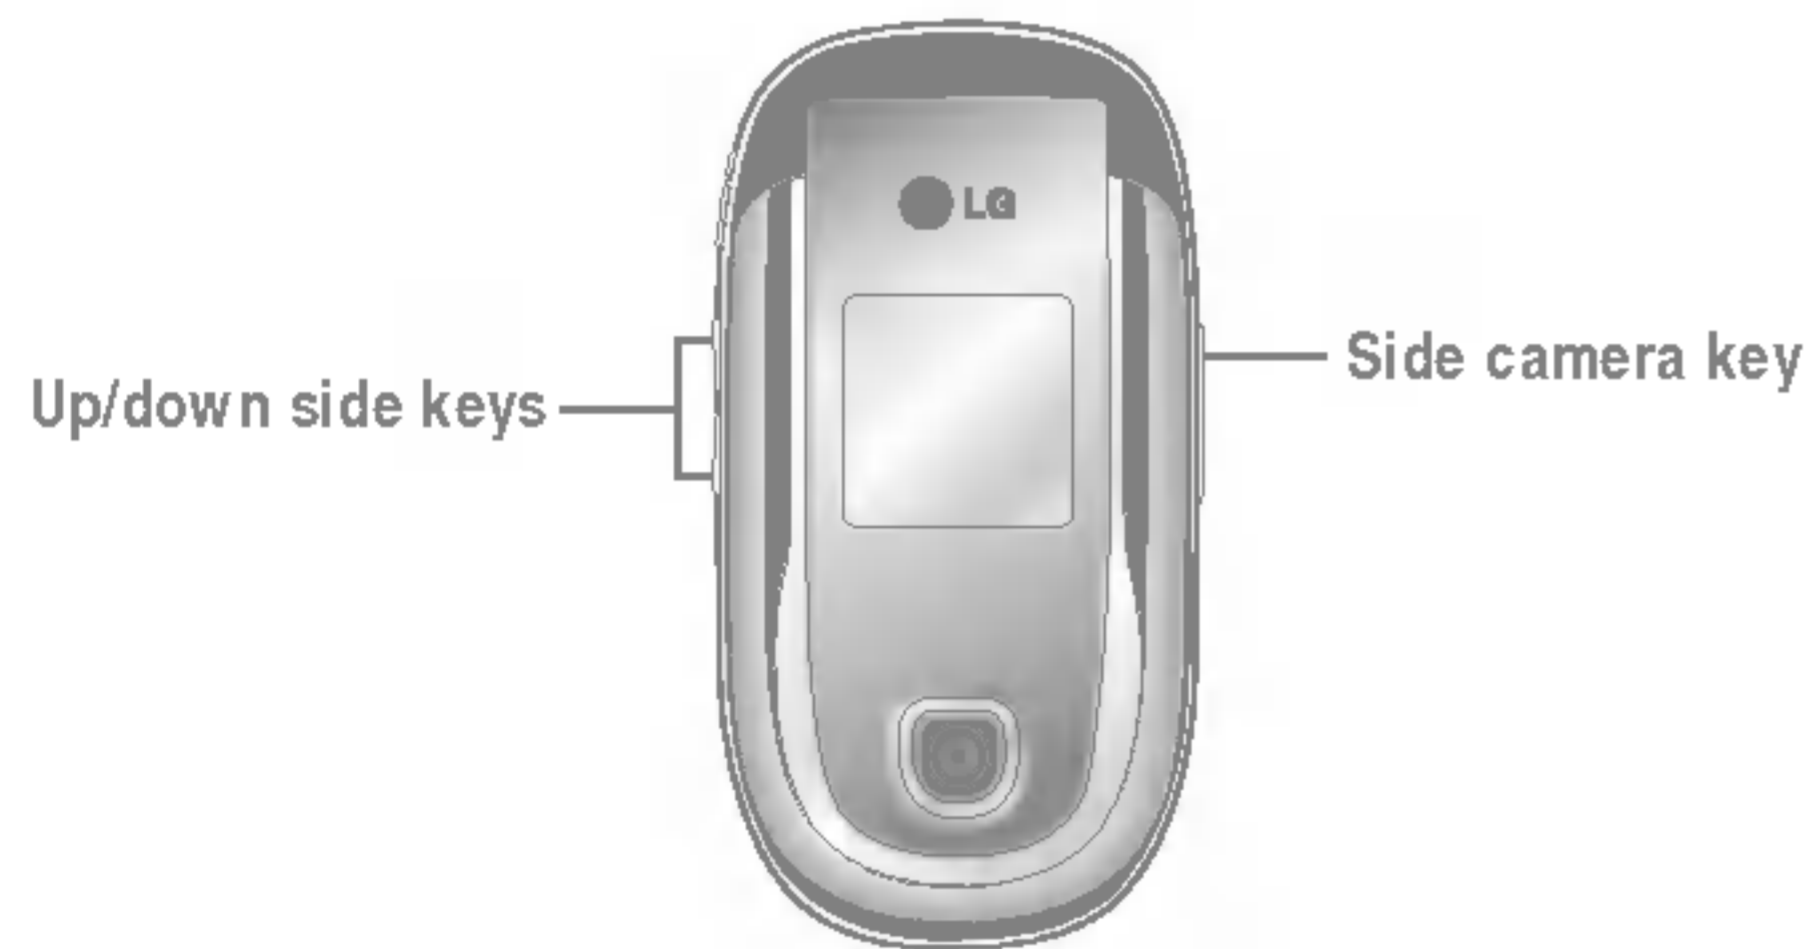

1. Press the side camera key to activate the display on the front screen.
2. Press the side camera key again to access the camera menu. The following submenus are available.

After highlighting the desired menu using side keys, press the side camera key to select it.

1. Take picture

Select this to take photos. You can take self-shots. To capture the image, press the side camera key. To go back to the camera menu, press and hold down the side camera key.

2. Slide show

Displays every image in the **Photo album** in succession. You can move to previous/next images manually with the up/down side keys. To stop the slide show and go back to the camera menu, press the side camera key.

3. Torch

Select the flash on(■)/off(■) with the up/down side keys.

4. Back

Select this to go back to standby mode.

Press the Menu key () and select **Messages** using navigation keys.

New Message




Menu 5-1

Write text message

Menu 5-1-1

Your phone receives voice mail notification messages and Short Message Service(SMS) messages.

Voice mail and SMS are network services. Please contact your network operator for more information.

When the  icon appears, you have received voice mail. When the  icon appears, you have received a new text message. If the message memory is full, a message is displayed, the  icon flashes and you cannot receive any new messages. Use the **Delete** option in the **Inbox** menu to delete obsolete messages. Once there is space in the message memory, any undelivered SMS messages will be received (provided sufficient space is available).

1. Key in your message. For details on how to enter text, refer to page 26 through 29 (Entering Text).

2. After you complete the message, to select the required option, press the left soft key [Options].

The following options are available.

- ▶ **Send:** Enter the number or select the number from the phonebook or the recent numbers. You can send a message up to 5 phone numbers at a time. Press the left soft key [Options]. The following options will be displayed.
 - ① Send (It only shows after a phone number is entered)
 - ② Recent numbers
 - ③ Search
- ▶ **Save:** Allows you to save the message so that it can be sent later.
- ▶ **Font:** Sets the font size and style.
- ▶ **Colour:** You can select colour of foreground and background.
- ▶ **Alignment:** You can set the position of the message - Right, Centre or Left.



- ▶ **Add T9 dictionary:** You can add your own word. This menu can be shown only when the edit mode is Predictive.
 - ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
 - ▶ **Exit:** If you select this while writing the message, you can exit from writing message and go back to the previous screen. The message you have written is not stored.
3. You can also send attachments with the message by pressing the right soft key [Insert], while you're entering a message.
- ▶ **Symbol:** You can attach special characters.
 - ▶ **Picture:** You can send and receive text messages that contain pictures, known as 'picture messages'. Several preset pictures are available in the phone and they can be replaced with new ones received from other sources.

- ▶ **Sound:** If available, you can attach a sound available for a short message.
- ▶ **Text message:** You can use text templates already set in the phone.
- ▶ **Contacts:** You can add phone numbers in the message.
- ▶ **Signature:** You can attach your name card.


Write picture message

Menu 5-1-2

A multimedia message can contain text, images, and/or sound clips. This feature can be used only if it is supported by your network operator or service provider. Only devices that offer compatible multimedia message or e-mail features can receive and send multimedia messages.

1. Key in the text message. Using the right soft key, you can input symbols, numbers and emoticons, or use T9 input mode. After the text message input, press the left soft key [Done].
2. Add an image and/or sound. You can move to the next section using the up/down navigation.



3. You can add a slide by moving the cursor on , then pressing the OK key or the left soft key [Select]. You can also add a slide using the right soft key [Menu].
4. Press the left soft key [Options]. The following options are available.
 - ▶ **Send:** Supports multiple numbers and email addresses.
 - ▶ **Preview:** Displays the multimedia message you wish to send.
 - ▶ **Save:** Saves the multimedia message in draft or as a template.
 - ▶ **Add Slide:** Adds a slide before or after the current slide.
 - ▶ **Move to slide:** Moves the next or previous slide.
 - ▶ **Delete slide:** Deletes the selected slide.
 - ▶ **Set slide format**
 - **Set timer:** You can set the timer for slide, text, picture and sound.
 - **Swap text and picture:** You can switch the position of picture and text of the message.
 - ▶ **Remove media:** You can remove picture or sound in the slide. This option can be shown only when any media file is.
 - ▶ **Add T9 dictionary:** You can add your own word. This menu can be shown only when the edit mode is Predictive.
 - ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
 - ▶ **Exit:** If you select this while writing the message, you can exit from writing message and go back to the previous screen. The message you have written is not stored.
5. Press the right soft key [Insert]. You can insert symbol, photo, image, sound, and voice memo. In addition, you can write the message by searching the phonebook.

Write email message

Menu 5-1-3

To send/receive an email, you should set up the email account. Refer to **Email** on page 72 first.

1. You can input up to 20 email addresses in the To and Cc field.

Tip: To input "@", press the  and select "@".

2. Key in the subject of the mail and press OK.
3. After writing an email message, press the left soft key [Options]. You can access the following option menus.
 - ▶ **Send:** Sends the email message.
 - ▶ **Insert:** You can insert text templates, phone numbers, symbols and/or the signature.
 - ▶ **Edit recipients:** You can edit recipients.
 - ▶ **Edit subject:** You can edit the subject.
 - ▶ **Save:** Select this to save the message in **Drafts**.







- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
 - ▶ **Exit:** If you select this while writing the message, you can exit from writing message and go back to the previous screen. The message you have written is not stored.
4. You can attach files by pressing the right soft key [Attach].
 5. Press the right soft key [Attach] to attach files.

Inbox

Menu 5-2

Received text messages and page messages can be searched and the contents can be viewed.

Received messages are displayed in date order.

	Icon directive
	Read SIM message
	Unread SIM message
	Read message
	Unread message
	Read delivery report
	Unread delivery report





Note SIM message refers the message saved in the SIM memory. And the network distinguishes an incoming message into the SIM message or just message.

Each received message has the following options available. Press the left soft key [Options].

- ▶ **Reply:** Replies to the received message.
- ▶ **Forward:** Forwards a received message to other recipients.
- ▶ **Return call:** Calls the sender's phone.
- ▶ **Extract:** Extracts a picture, sound, text web page or email address from the message. These will be saved in My folder, Phonebook, or bookmarks.
- ▶ **Delete:** Deletes the selected message from the Inbox.
- ▶ **View information:** Displays information about the received message.

You will be alerted when you have received messages. They will be saved in the Inbox. You can identify each message by icons. For details, see the icon description below.

If the phone has 'No space for messages', you can make space by deleting messages, media and applications.

	Icon directive
	Read multimedia messages
	Unread multimedia messages
	Read notified multimedia messages
	Unread notified multimedia messages

- **Reply:** Replies to the sender.
- **Forward:** Forwards the selected message to other recipients.
- **Return call:** Call back to the sender.
- **Delete:** Deletes the current message.
- **Extract:** Extracts pictures or sounds. They will be saved in My folder or Phonebook.
- **View information:** Displays information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

Orange Messenger

Menu 5-3

For Instant Messaging users, a valid User ID and Password will be required in order to login and exchange messages as well as checking the online status.

Offline Menu

Login

This allows users to login by filling in the User ID and Password.

- **Note** There is no need to type the User ID and Password all the time if only Login process is successful and they are saved. This feature is optional.

Saved Conversations

This is where a user can view saved conversations.

Settings

- ▶ **Screen Name:** You may select the Screen Name to be used while in the Group chat service.
- ▶ **Availability:** You may select your availability status (Available to Not Available, vice versa).



- ▶ **Status Text:** You may set your current status in free text format.
- ▶ **Save Password:** You may save your password in Login input.
- ▶ **Power-on Login:** You may start login automatically after 20 seconds or so on power-on if you save a valid password and then reset your mobile.
- ▶ **Connection:** You may set your IM connection information. But, please check with your Network provider before changing this information.

When you select Binding Protocol as HTTP

- **WV Server:** You can change the WV Server address.
- **Internet Profiles:** You can change internet connection settings.

IM Information

Instant Messaging Client Information (Client Name, Version Number) is displayed.

Online Menu / 1 to 1 conversation

After successful Login, a contact list with contacts will appear on screen.

Depending on the cursor location in the contact list, following menu options will be available.

When cursor is located on a Conversations List

- ❗ **Note** Conversations List contains not only contact which conversation is already opened but also unknown contact.
- ▶ **View/Hide Conversations:** This provides the option to view or hide contacts from the selected list.
- ❗ **Note** When you select left/right navigation Key or Confirm Key on the Contact List, it offers the ability to view or hide conversations.
- ▶ **Send To Others:** This offers the ability to send a message to unknown contact. When selected, User ID must be typed in prior to starting an IM session or conversation.
- ▶ **Saved Conversations:** You may view or delete the stored conversation session.



► Settings

- **Screen Name:** You may select the Screen Name to be used while in the Group chat service.
- **Availability:** You may select your availability status (Available to Not Available).
- **Status Text:** You may set your current status in free text format.
- **View Options:** You may offer the ability to show all contacts or only online contacts.

► **Logout:** This begins the Logout process.

When cursor is located on a Conversation

- **View:** View allows you to converse with the selected Unknown Contact and contact which conversation is already started. It shows conversation of the contact which conversation is already started.
- **End Conversation:** This close the selected conversation. If an unknown contact was selected, that contact is deleted also.

► **View Information:** This allows you to view information. It provides User ID, Mood, Status Text.

► **Refresh Contact:** This refreshes the presence information of the selected contact.

► **Settings:** Please refer to the previous Settings Menu.

► **Logout:** This begins the Logout process.

When cursor is located on a Contact List

► **View/Hide Contacts:** This provides the option to view or hide contacts from the selected list.

► **Add List:** This adds a new contact list.

► **Add Contact:** This adds a new contact to the selected contact list, in the meantime this searches contact on the basis of E-mail Address, First Name, Last Name.

❗ **Note** The device only can support a maximum of 30 contacts and therefore not all their contacts will be visible on the phone if they have more than 30.

► **Delete List:** This deletes the selected contact list.



- ▶ **Refresh List:** This refreshes the presence information of the contacts within the contact list.
- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Logout:** This begins the Logout process.

When cursor is located on a Contact

- ▶ **Chat/View:** Chat will display a screen where conversation with selected Contact can take place / View shows conversation of the contact which conversation is already started.
- ▶ **Add Contact:** This adds a new contact to the selected contact list, in the meantime this searches contact on the basis of E-mail Address, First Name, Last Name.
- ▶ **Delete Contact:** This deletes the selected Contact.
- ▶ **View Information:** This allows you to view information. It provides User ID, Mood, Status Text.
- ▶ **Refresh Contact:** This refreshes the presence information of the selected contact.

- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Logout:** This begins the Logout process.

Menu options available in the Conversation screen

- ▶ **Send:** Typed message can be sent.
- ▶ **Back To List:** This brings the screen back to the contact list.
- ▶ **End Conversation:** This ends the active conversation and clears the conversation buffer.
- ▶ **Save Conversation:** Stores currently active conversation.
- ▶ **Add T9 dictionary:** You can add your own word. This menu can be shown only when the edit mode is Predictive.
- ▶ **T9 Languages:** Select the language for T9 input mode.

- Note**
- Within the conversation screen, you can insert Symbol, Emoticon and Text Template by using the right soft key.
 - In the conversation window, you can use a side key or up/down navigation key for scrolling conversation.
 - Maximum number of characters supported by a message is 500 characters for receiving and 160 characters for sending.
 - The presence information might not update in real time so the “Refresh List”/“Refresh Contact” option can be used for most up to date status.

Mailbox

Menu 5-4

You can check the saved emails, drafts, outbox, and sent emails.

In the Inbox, up to 20 emails are stored.

Drafts

Menu 5-5

In this menu, you can see the message list saved as draft. Scroll through the list using the up/down navigation keys. Each draft has the following options.



- ▶ **View:** Views the message saved as a draft.
- ▶ **Edit:** Edits the message before sending.
- ▶ **Delete:** Deletes the current message.
- ▶ **View information:** Check the date, time, type, and file size of the message.
- ▶ **Delete all:** Deletes all message in draft.

Outbox

Menu 5-6

You can view the list and contents of sent messages in this menu and can also verify if the transmission was successful.

The following options are available.

	Icon directive
	Sent SIM message
	Sent message

- ▶ **Forward:** Forwards the current message to other recipients.
- ▶ **Delete:** Deletes the selected message from the Outbox.

Use this to see sent messages. For each sent message, you can see the delivery status.


	Icon directive
	Sent

- **Delete:** Deletes the current message.
- **Forward:** Forwards the current message to other recipients.
- **View:** Displays information about the outbox messages: Subject (only for Multimedia message), Message date & time, Message type, Message size.

Listen to voice mail

Menu 5-7

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your network operator.

When new voice message is received, the  symbol will be displayed on the screen. Please check with your network provider for details of their service in order to configure the handset correctly.

Info service

Menu 5-8

Info service messages are text messages sent by the network to mobile phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information is associated with a number, which can be obtained from the network operator. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly. In standby mode, the following options are available when viewing info service messages.



Messages

Read

Menu 5-8-1

When you have received broadcast messages and select **Read** to view the message, it will be displayed on the screen.

Topics

Menu 5-8-2

To create new topics, press the left soft key [Option] then select **Add new**. If you already have topics, you can deactivate, edit, or delete them by using the left soft key [Options].

Templates

Menu 5-9

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Two types of templates are available: Text and Multimedia.

Text message templates

Menu 5-9-1

- **Please call me back.**
- **I'm late. I will be there at...**
- **Where are you now?**

- **I'm on the way.**
- **Top urgent. Please contact.**
- **I love you.**

The following options are available.

- ▶ **View:** Views the selected message.
- ▶ **Edit:** Use this to write a new message or edit the selected template message from the text template list.
- ▶ **Write messages**
 - **Write text message:** Use this to send the selected template message by SMS.
 - **Write picture message:** Use this to send the selected template message by MMS.
- ▶ **Add new:** Use this to create new template.
- ▶ **Delete:** Deletes the template.
- ▶ **Delete all:** Deletes all templates.



Picture message templates

Menu 5-9-2

- ▶ **Preview:** Displays the draft multimedia message.
- ▶ **Save:** Saves multimedia messages in draft form or as templates.
- ▶ **Add Slide:** Adds a slide before or after the current slide.
- ▶ **Move to slide:** Moves to next or previous slide.
- ▶ **Delete slide:** Deletes the highlighted slide.
- ▶ **Set slide format:** Sets the timer for slide, text, or to align the message contents right, left, top and bottom.
- ▶ **Add T9 dictionary:** You can add our own word. This menu can be shown only when the edit mode is Predictive.
- ▶ **T9 languages:** Selects T9 input mode.
- ▶ **Exit:** Exits the menu.

Signature

Menu 5-9-3

This option helps you to make your business card. Key in the name, mobile phone number, office number, Fax number, and E-mail address.

- ▶ **Edit:** Use this to edit the business card.
- ▶ **Delete:** Use this to delete the business card.
- ▶ **Send:** You can send the business card using a text message or a multimedia message, or a via Bluetooth.
- ▶ **Receive:** You can receive others' business card via Bluetooth.
- ▶ **Exchange:** You can exchange your business card with others' via Bluetooth.



Settings

Menu 5-0

Text message

Menu 5-0-1

▶ Message types:

Text, Voice, Fax, Natl. paging, X.400, E-mail, ERMES

Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to **Yes**, you can check whether your message is sent successfully.
- ▶ **Reply via same service centre:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.
- ▶ **SMS centre:** If you want to send the text message, you can receive the address of SMS centre through this menu.

Picture message

Menu 5-0-2

- ▶ **Priority:** You can send the message after setting the level of priority: Low, Normal and High.
- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If it is set to Yes in this menu, you can check whether your message is sent successfully.
- ▶ **Auto download**
 - On:** The messages are downloaded automatically on receipt.
 - Off:** Requires to confirm the message which you want to download.
 - Home network only:** In home network, you can activate Auto download "On" menu, Otherwise, you can activate Auto download in roaming network when you set Off.
- ▶ **Hide own number:** If you set this menu, you can hide your number on sending the message.



► **Accounts:** In order to download MMS from the server, you need to set up a CSD or GPRS data connection. If you select multimedia message server, you can set URL for multimedia message server. You can set over 5 profiles to connect service.

- **Homepage:** This menu allows to connect MMS centre (MMSC).

- **Bearer**

- Data
- GPRS

- **Data settings:** Appears only if you select Data settings as a Bearer\service.

IP address

Dial number: Enter the telephone number to dial to access your WAP gateway.

User ID

Password

Call type: Select the type of data call, Analogue or Digital (ISDN).

Call speed: The speed of your data connection 9600 or 14400.

- **GPRS settings:** The service settings are only available when GPRS is chosen as a bearer service.

IP address

APN: Insert APN (Access Point Name) of GPRS.

User ID

Password

- **Connection type:** The options for connection type are Temporary or Continuous.

- **Proxy settings**

IP address: Input IP address of the proxy.

Port: Input port number of the proxy.

- **DNS settings:** Insert the primary and secondary DNS if it is required by the network operator.

- **Secure settings:** Depending on the chosen gateway port, you can select this option On or Off.



► Permitted message types

Personal: Personal message.

Advertisements: Commercial message.

Information: Necessary information.

Email

Menu 5-0-3

This menu allows you to edit, delete or add and email account.


You can set up to 3 email accounts. To create your own email account, you will need to enter an ID and password.

1. Select an account.
2. Select **Edit** and scroll to **Incoming ID/PWD**.
3. Enter your ID and password.

Voice mail centre

Menu 5-0-4

You can receive the voicemail if this feature is supported by your network service provider. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

1. Hold down  key in standby mode.
2. You can check the following submenus.
 - **Home:** You can listen to voice mails by selecting **Home**.
 - **Roaming:** Even when you are in abroad, you can listen to voice mails if roaming service is supported.



Info service

Menu 5-0-5

► Receive

- **Yes:** If you select this menu, your phone will receive Info service messages.
- **No:** If you select this menu, your phone will not receive Info service messages any more.

► Alert

- **Yes:** Your phone will beep when you have received Info service message numbers.
- **No:** Your phone will not beep even though you have received info service messages.

- **Languages:** You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.

Service message

Menu 5-0-6

You can set the option whether you will receive the message or not.

One click to your new Orange World

Just one click on your new F2400 transports you to the latest games, ringtones and sports news from around the world.

Find your nearest cashpoint then pick out a bar to blow your wages in, or simply curl up on the sofa and read about your favourite celebrities. Or, if you're feeling lucky, why not enter one of our great competitions. Whatever your mood, you're bound to find something of interest in your Orange World, so take the leap and get exploring now!

To enter Orange World press Orange. Orange World will open. Scroll down the page and press Select when you come to a link you want to visit. Channels enables Orange to suggest links that you'll enjoy, the suggestions we make are based on your phone and the day of the week. For example, on a Saturday we may suggest sport to give you quick access to football results.

Use Channels to personalise your phone by downloading new ring tones, wallpapers, or the latest games, including some of the biggest games around

such as Fifa Football and Tiger Woods Golf. You can even send Purple Ronnie greeting cards to send a surprise message to your friends. You can also access services from other providers such as the BBC and RAC.

How to create your own Orange World

The great thing about using Orange World is that you can constantly update it to suit your interests. When you first enter Orange World, spend a minute or two completing the Orange World wizard, which will ask you about your interests in order to provide the most relevant services to you. To set up your Orange World wizard, click the link under Your Page. Once you have finished personalising, use the Your Page link to quickly go to services which are of interest to you.

You can add or delete links to Your Page using the simple options provided. A suggestion for a link that might be useful will also appear at the top of the Orange homepage each time that you begin browsing.



How to find your way using Orange World

There's nothing more annoying than being lost or not having the right number to hand. You can now put these frustrations behind you with a dedicated Find feature which will show you where you are or take you to a list of sites, such as Time Out, to help you find the information you need to keep working or partying.

For example, use Orange World to find the nearest cash point to the pub you arranged to meet your friends in. Once you're there, use the Find feature to find the local cinema, and grab a cab number to organise a lift there. It's simple, quick, and above all convenient. Try it now to see what you could be doing tonight.

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups. There are six preset profiles: **Normal**, **Vibrate only**, **Silent**, **Loud**, and **Headset**. Each profile can be personalised.

Press the Menu key () and select **Profiles** using navigation keys.

Changing the profile

Menu 7-X-1

1. A list of profiles is displayed.
2. In the **Profile** list, scroll to the profile you want to activate and press the left soft key [Select] or OK key.
3. Then, select **Activate**.

Customising profiles - Personalise

Menu 7-X-2

Scroll to the desired profile in the Profile list. After pressing the OK key or the left soft key, select **Personalise**. The profile setting option opens. Set the option as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tone:** Select the desired ring tone from the list. Scroll through the list using up/down navigation keys. You can hear the desired tone prior to making a selection.
- ▶ **Ring volume:** Set the volume of the ringing tone.
- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tone:** Select the alert tone for messages.
- ▶ **Keypad tone:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Flip tone:** Set the alert tone when opening the flip.
- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.
- ▶ **Auto answer:** (only in **Headset** profile) You can activate the automatic answer feature. Select the time before answering automatically.



Customising profiles - Rename

Menu 7-X-3

You can rename a profile and give it any name you want. **Vibrate only**, **Silent** and **Headset** profiles cannot be renamed.

1. To change the name of a profile, scroll to the profile in the profile list and after pressing the OK key or the left soft key, select **Rename**.
2. Key in the desired name and press the OK key or the left soft key [Save].

You can connect to game downloads on the mobile Internet by using your WAP browser or Java, if this service is available from your service provider. Check with your service provider for availability and details for use.

Games & Apps.

Menu 8-1

You can access a great selection of games on your phone. These games are different to the downloadable games as you require you to be connected while you are playing.

Java™ is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using the WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed in the **My games & more** menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD or .JAR format.

Note The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

Caution Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

Option Some Java applications may require a data connection to be made. Select this to set the connecting options.

Pictures

Menu 8-2

You can download the picture on your phone by using network service. After downloading, you can send the message with a picture, and set it as a wallpaper.

Sounds

Menu 8-3

You can also download the sound on your phone by using network service. You can send the message with a sound, and set it as a ring tone.



More pictures

Menu 8-4

Connects to Orange. You can download pictures using the WAP. And they are stored in **More pictures**.

Press the Menu key () and select **Extras** using navigation keys.

Bluetooth Menu 9-1

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires. This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

My devices Menu 9-1-1

You can view all devices which are compatible with Bluetooth phone.

Handsfree devices Menu 9-1-2

You can view the list of handsfree devices which are compatible with bluetooth phone.

Settings Menu 9-1-3

You can register a new device which is compatible with bluetooth. If you already have added the device, you can search it after entering a password.

Set bluetooth

You can activate or cancel bluetooth function.

My phone's visibility

Select whether to let your phone be shown to other Bluetooth devices or hidden.

My phone's name

You can set the name of bluetooth device. The default name is F2400.


Calculator

Menu 9-2

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division. (You can enter numbers up to the second decimal place)

Using the calculator

1. Enter the first number using the numeric keys.
2. Press the corresponding navigation key to select a mathematical function.

! Note To erase any mistakes and clear the display, press the  key.

To include a decimal point, press the  key.

To include a minus sign, press the  key.

3. To calculate the result, press the left soft key [Result] or OK key.
4. After calculation, press the left soft key [Reset] to return to the initial state.

Unit converter

Menu 9-3

This converts any measurement from one unit to another.

There are 4 types that can be converted into units: Length, Surface, Weight and Volume.

1. Select one of four unit types by pressing the left soft key [Unit].
2. Move to the current unit section by pressing the down navigation key.
3. Select the unit you want to convert using the left/right navigation keys.
4. Move to the Convert unit section by pressing the down navigation key.
5. Select the unit you want to convert to, using the left/right navigation keys.
6. Input numbers using the numeric keys. Conversion is calculated automatically.

! Note You can input a decimal number by pressing the  key.



World time

Menu 9-4

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press the left soft key [Options]. And select **Set**.

Note The time zone setting of each city in World time menu may be affected by network condition.

Voice recorder

Menu 9-5

You can record a memo. You can record up to 3 memos up to a maximum of 30 seconds each.

You can play or delete the recorded memo or record new memo using the left soft key [Option] key.

Note In standby mode, you can go directly to the Voice recorder menu by pressing the down navigation key.

Record

1. Select **Voice recorder- Record** menu.
2. Once recording is started, the message 'Recording...' and the remaining time is displayed.
3. When you finish recording, press left soft key [Save].

Note If all memo locations are full, you must delete an old memo before recording a new one.



View list

You can Play, or Delete the recorded memo.

- ▶ **Playback:** Allows you to play back all memos recorded, starting with the most recent memo. The screen displays the Date and time when the memo was recorded.
- ▶ **Send by picture message:** You can send the voice memo with picture message.
- ▶ **Write email message:** You can send the voice memo by email.
- ▶ **Delete:** Allows you to delete a specific memo.
- ▶ **Delete all:** Allows you to delete all memos. Press the left soft key [Yes] to confirm.

Memory status

Menu 9-6

You can check the size of free memory and available memory of each menu such as text, picture message, inbox and outbox.

Orange Help

Menu 9-7

This menu will help you to access the Orange World in details.

Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.

Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press .


Q How do I clear all call history?

A Press the left soft key and then   .

Q How do I view all numbers saved in the memory?

A Press the left soft key and then  .

Q  does not disappear from the screen.

A Check whether you are in a service area. If you continue to see , turn off the power and wait for approximately 2 minutes before turning it back on. If there is no change, relocate to another area and check again.

Q Connection is poor or is not audible in certain areas.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

Q Connection is poor even when established.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

Q LCD does not turn on.

A Remove and replace the battery and turn on the power. If the phone still does not turn on, charge the battery and try again.



Q An echo can be heard during connection with a certain telephone in a certain area.

A It is called 'Echo Phenomenon'. It occurs if the volume is too high or caused by special properties (semi electronic telephone exchange) of the machine on the other end.

Q The phone gets warm.

A During long calls, or if games/Internet are used for a long time, the phone may become hot. This is perfectly normal and has no effect upon the life of the product or performance.

Q The bell does not ring, or lamp or LCD blinks only.

A The phone is set to 'Vibrate' or 'Silent' in the Profiles menu. Please select 'General' or 'Loud'.

Q Standby duration of the phone gradually becomes shorter.

A Batteries have a limited life. When the battery lasts for half its original time, it requires replacement. Only use authorised replacement parts.

Q Usage time of battery becomes shorter.

A If the battery time is short, it may be due to the user environment, or large volume of calls, or weak signals.


Q No number is dialled when you recall a phonebook entry.

A Check that the numbers have been saved correctly, by using the phonebook Search feature. Resave them, if necessary.



Q&A

Q You cannot be contacted.

A Is your phone switched on ( pressed for more than three seconds)? Are you accessing the right cellular network? Have you set an incoming call barring option?

Q I cannot find the lock, PIN, or PUK code, or password?

A The default lock code is '0000'. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.

There are a variety of accessories available for your mobile phone. You can select these according to your personal communication requirements. Consult your local dealer for availability.

Battery

Standard battery is available.



Headset

Allows hands-free operation. Includes earpiece and microphone.




Supplied adapter

This adapter lets you charge the while at home or in the office.



Data cable kit

Connects your phone to a PC.

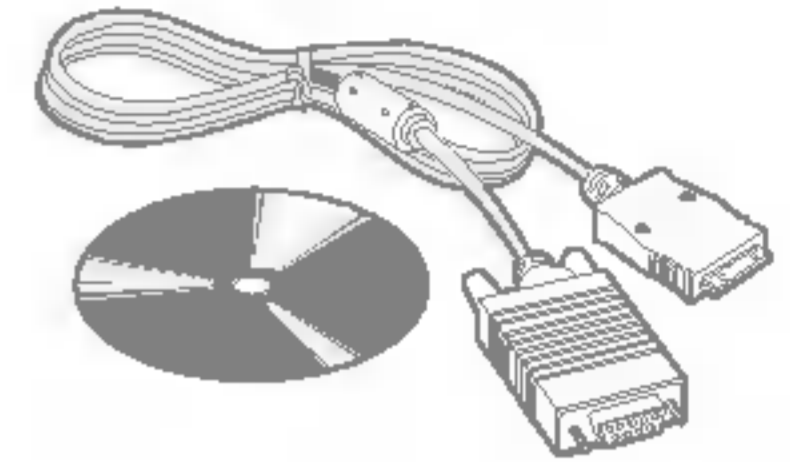

- ! Note**
- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
 - Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

Technical Data

General

Product name: F2400

System : GSM 900 / DCS 1800

Ambient temperatures

Max: +55° C

Min : -10° C

Declaration of Conformity



LG Electronics

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Kang-nam Tower
679, Yoksam-dong, Kangnam-gu, Seoul, Korea

Product Name

E-GSM 900 / GSM 1800 Dual-Band Terminal Equipment

Model Name

F2400

Trade Name

LG

CE 0168

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.4.1 (2002-08), EN 301 489-7 V1.2.1(2002-08)

EN 60950 : 2000

EN 50360 2001, EN50361 2001

EN 300 328 V1.4.1(2003)

TS51.010-1 V5.10.0

Selection according to GCF-CC 3.16.0 including requirements of EN 301 511 V.9.0.2(2003)

The conformity to above standards is verified by BABT with Certificate No.(NC/12361) and GSM test report (no.WG613452/01 Issue 1,WG613450/03 Issue 1), EMC test report(no. HCT-C05-0205),safety test report(no. ITYA0105485) SAR test report(no. TCMA0804765) and Bluetooth (no. HCT-RF05-0201)

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Jin Seog, Kim / Director

Issued Date

7. Apr. 2005

LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seekim @ lge.com

Signature of representative

