

# S 5 2 0 0 | KULLANICI KILAVUZU |

**LG Electronics Inc.**

<http://www.lge.com>

P/N : MMBB0192711 (1.0) ■

| S 5 2 0 0 | KULLANICI KILAVUZU

**LG Electronics Inc.**



CE 0168

TÜRKÇE  
ENGLISH




# | S 5 2 0 0 | KULLANICI KILAVUZU

Bu kılavuzdaki bilgilerden bazıları, telefonunuzdaki yazılıma ya da servis sağlayıcınıza bağlı olarak telefonunuzda farklı olabilir.

TÜRKÇE

# | S5200 | KULLANICI KILAVUZU

Bu kılavuzdaki bilgilerden bazıları, telefonunuzdaki yazılıma ya da servis sağlayıcınıza bağlı olarak telefonunuzda farklı olabilir.

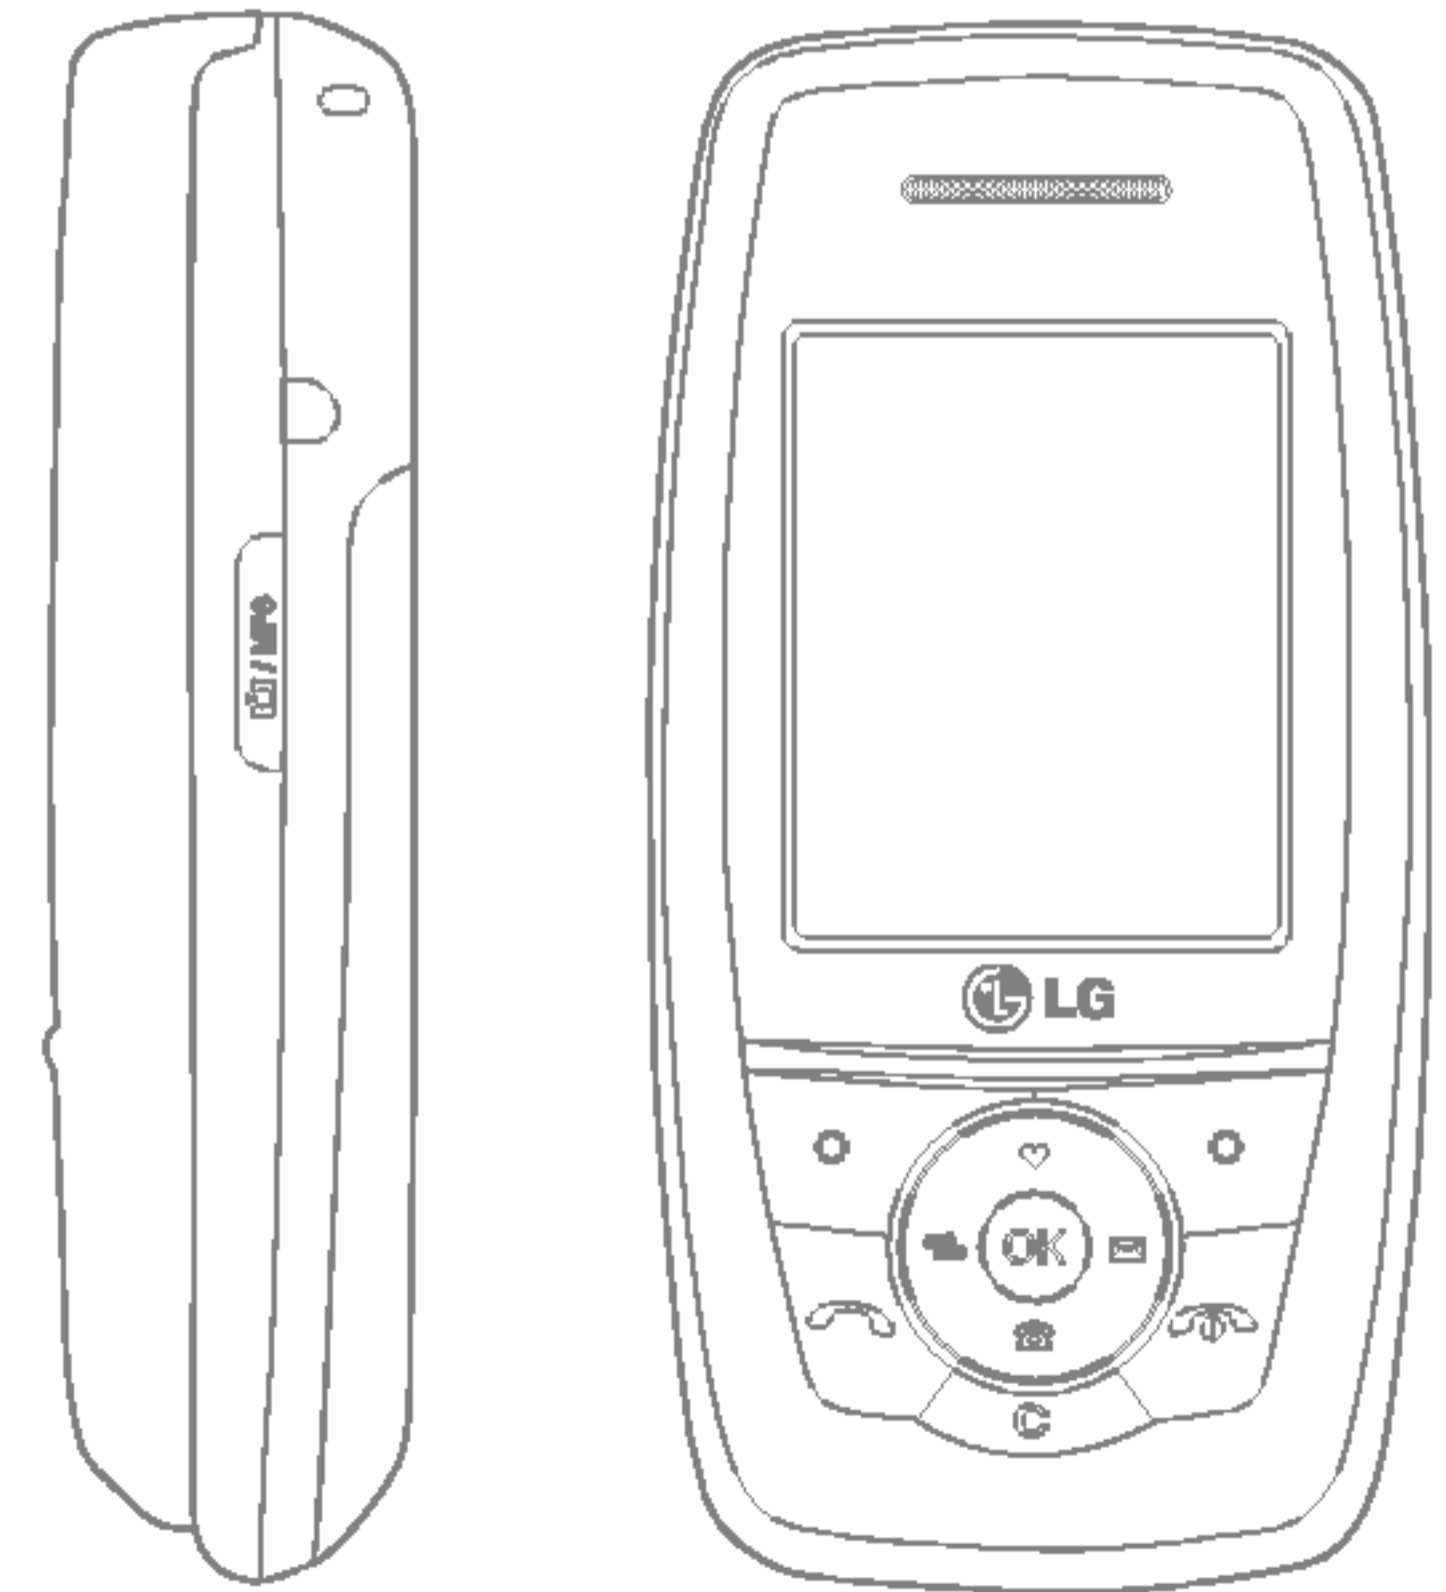

# İçindekiler

<b>Giriş</b>	<b>6</b>
<b>Güvenli ve etkili kullanma kuralları</b>	<b>7</b>
<b>S5200'ün özellikleri</b>	<b>11</b>
<b>Telefonun parçaları</b>	
<b>Ekranla ilgili bilgiler</b>	<b>15</b>
<b>Başlangıç</b>	<b>17</b>
<b>SIM kartın ve telefonun pilinin takılması</b>	
<b>Pilin şarj edilmesi</b>	<b>18</b>
<b>Adaptörün çıkartılması</b>	<b>19</b>
<b>Telefonu açmak ve kapatmak</b>	<b>20</b>
<b>Erişim kodları</b>	
<b>Engelleme şifresi</b>	<b>21</b>

<b>Genel işlevler</b>	<b>22</b>
<b>Arama yapma ve cevaplama</b>	
<b>Rehber</b>	<b>27</b>
<b>Arama içi menüsü</b>	
<b>Çok kişili ya da konferans görüşmeler</b>	<b>29</b>
<b>Menü ağacı</b>	<b>31</b>
<b>İşlevleri ve seçenekleri belirleme</b>	<b>34</b>
<b>Profiller</b>	<b>35</b>
<b>Etkinleştir</b>	
<b>Kişiselleştir</b>	
<b>Yeni ad ver</b>	<b>36</b>

<b>Çağrı kaydı</b>	<b>37</b>
<b>Cevapsız aramalar</b>	
<b>Kabul edilen aramalar</b>	
<b>Yapılan çağrılar</b>	
<b>Son aramaları sil</b>	<b>38</b>
<b>Arama Ücretleri</b>	
<b>Arama süresi</b>	
<b>Arama Ücretleri</b>	
<b>Ayarlar</b>	
<b>GPRS info</b>	<b>39</b>
<b>Arama süresi</b>	
<b>Veri miktarı</b>	

---

<b>Ekstralar</b>	<b>40</b>
Çalar Saat	
Bluetooth	
Cihazların	
Serbest konuşma cihazları	41
Ayarlar	
<b>Hesap mak.</b>	
<b>Birim dönüş.</b>	
<b>Yerel saatler</b>	<b>42</b>
<b>Modem</b>	

---

<b>Ajanda</b>	<b>43</b>
<b>Rehber</b>	
Ara	
Yeni ekle	44
Arama grupları	
Hızlı arama	45
Ayarlar	
Hepsini Kopyala	46
Tümünü Sil	
Bilgi	
<b>Takvim</b>	<b>47</b>
Yeni ekle	48
Günlük programı göster	
Sonuncuyu sil	
Tümünü Sil	
Tarihe git	
Alarm tonunu belirle	
<b>Kısa not</b>	

---

<b>Mesajlar</b>	<b>49</b>
<b>Yeni mesaj</b>	
SMS yaz	
MMS yaz	50
<b>Gelen kutusu</b>	<b>52</b>
<b>Giden kutusu</b>	<b>53</b>
<b>Taslaklar</b>	<b>54</b>
<b>Sesli mesaj dinle</b>	
<b>Bilgi mesajı</b>	<b>55</b>
Oku	
Konular	
<b>Kalıplar</b>	
Metin şablonları	56
MMS şablonları	
İmza	57
<b>Ayarlar</b>	
SMS	
MMS	
Ses postası merkezi	58
Bilgi mesajı	
Push mesajları	59

# İçindekiler

<b>Multimedya</b>	<b>60</b>
Resim çek	
Video kamera	
<b>Fotoğraflarım</b>	<b>61</b>
<b>Videom</b>	
<b>MP3</b>	<b>62</b>
MP3-Oynatıcısı	63
Çalma listesi	
Ayarlar	64
<b>Ses kaydedici</b>	
Kaydet	
Listeyi görüntüle	
<b>Ayarlar</b>	
Kamera	
Video kamera	65

<b>Ayarlar</b>	<b>66</b>
<b>Tarih &amp; Saat</b>	
Tarih ayarla	
Zaman ayarla	
<b>Telefon ayarı</b>	
Ekran Ayarları	
Renk düzeni	67
Dil	
<b>Çağrı Ayarı</b>	
Çağrı Yönlendirme	
Cevap modu	68
Numaramı gönder	
Çağrı Bekletme	69
Çağrı Hatır.	
Oto. tekrar ara	

<b>Güvenlik</b>	<b>69</b>
PIN kodu isteği	
Telefon kilidi	70
Oto. tuş kilidi zaman aşımı	
Çağrı Engelleme	
Sabit arama numarası	71
Kodları değiştir	
<b>Şebeke ayarları</b>	<b>72</b>
Şebeke seçimi	
Bant seçimi	
<b>GPRS ayarı</b>	
<b>Ayarları Sıfırla</b>	
<b>Hafıza durumu</b>	<b>73</b>
İç bellek	
Multimedya bellek	

---

<b>Servis</b>	<b>74</b>
<b>Internet</b>	<b>75</b>
Ana sayfa	
Yer imleri	
URL'ye git	
<b>Ayarlar</b>	<b>76</b>
<b>SIM servisi</b>	<b>78</b>

---

<b>İndirilenler</b>	<b>79</b>
<b>Oyunlarm ve dięerleri</b>	
Oyunlarm ve dięerleri	
<b>Profiller</b>	<b>80</b>
<b>Resimler</b>	
<b>Melodiler</b>	
<b>Dosya hafızası</b>	<b>81</b>
<b>Aksesuarlar</b>	<b>84</b>
<b>Teknik Veriler</b>	<b>85</b>

# Giriş

En son dijital mobil iletişim teknolojisiyle çalışmak üzere tasarlanmış gelişmiş ve kompakt S5200 mobil telefonu satın aldığınız için tebrik ederiz.

Kullanıcı kılavuzunda, bu telefonun kullanılması ve çalıştırılmasıyla ilgili önemli bilgiler bulunmaktadır. En iyi performansı elde etmek ve telefona gelebilecek hasarları ya da telefonun yanlış kullanılmasını önlemek için burada verilen tüm bilgileri dikkatlice okuyun. Bu kullanıcı kılavuzunda açıkça onaylanmayan değişiklikler, cihazın garantisini geçersiz kılabilir.



# Güvenli ve etkili kullanma kuralları

Lütfen bu basit kuralları okuyun. Kuralların çiğnenmesi tehlikeli ve yasa dışı olabilir. Bu kılavuzda daha ayrıntılı bilgiler verilmektedir.

## Radyo frekansı enerjisine maruz kalma

### Radya dalgasına maruz kalma ve Özel Emilim Hızı (SAR – Specific Absorption Rate) bilgileri

S5200 modeli mobil telefon, radyo dalgalarına maruz kalmayla ilgili güvenlik gereksinimlerine uyumlu olacak şekilde tasarlanmıştır. Bu gereksinim, yaşa ve sağlık durumuna bağlı olmaksızın tüm kişilerin güvenliğini garanti altına almak için tasarlanmış güvenlik sınırlarını içeren bilimsel kuralları temel almaktadır.

- ▶ Radyo dalgalarına maruz kalma kurallarında, Özel Emilim Hızı ya da SAR olarak bilinen bir ölçüm birimi kullanılmaktadır. SAR testleri, telefonun kullanılan tüm frekans bantlarında onaylı en yüksek güç seviyesinde iletim yaptığı standart bir yöntem kullanılarak gerçekleştirilmektedir.

- ▶ Çeşitli LG telefonu modellerinin SAR seviyeleri arasında farklılıklar olmasına karşın, tüm modeller radyo dalgalarına maruz kalmayla ilgili kuralların gereklerini yerine getirecek şekilde tasarlanmıştır.
- ▶ Uluslararası İyonize Olmayan Radyasyon Koruması Komisyonu (ICNIRP), önerilen SAR sınırını on (10) gram doku üzerinde 2W/kg olarak belirlemiştir.
- ▶ Kulakta kullanım için DASY4 ile test edilen bu telefon modelinin en yüksek SAR değeri, 0.117 W/kg'dir (10g).

## Ürüne özen ve bakım

**Uyarı!** Yalnızca bu telefon modelinde kullanılması onaylanmış pilleri, şarj aletlerini ve aksesuarları kullanın. Diğer türlerde ürünlerin kullanılması, telefonun onaylarını ya da garantisini geçersiz kılabilir ve tehlikeli olabilir.

- ▶ Bu cihazı sökmeyin. Onarım gerektiğinde yetkili bir servis teknisyenine götürün.
- ▶ TV, radyo ya da kişisel bilgisayar gibi elektrikli aletlerden uzak tutun.

# Güvenli ve etkili kullanma kuralları

- ▶ Bu ürün, radyatör ve fırın gibi ısı kaynaklarından uzak tutulmalıdır.
- ▶ Düşürmeyin.
- ▶ Bu ürünü mekanik titreşim ya da darbelere maruz bırakmayın.
- ▶ Bu telefonun kaplaması, ambalaj malzemeleri ya da vinil sarma malzemeleriyle sarıldığında bozulabilir.
- ▶ Cihazın dış yüzeyini temizlemek için kuru bir bez kullanın. (Benzin, tiner ya da alkol gibi solventler kullanmayın.)
- ▶ Bu ürünü aşırı duman ya da toza maruz bırakmayın.
- ▶ Telefonu kredi kartları ya da seyahat biletlerinin yanına koymayın; manyetik şeritlerin üzerinde bulunan verileri etkileyebilmektedir.
- ▶ Ekranı keskin bir nesneyle vurmuyun; aksi takdirde telefona hasar verebilir.
- ▶ Telefonun sıvıya ya da neme maruz kalmasını önleyin.
- ▶ Kulaklık gibi aksesuarları dikkatli kullanın.

## Elektronik cihazlar

Tüm mobil telefonlar, performansını etkileyen girişimlere neden olabilir.

- ▶ Mobil telefonu, izin almadan tıbbi cihazların yanında kullanmayın. Telefonu, kalp pillerine yakın yerlere, örneğin göğsünüzün üzerindeki ceplere yerleştirmeyin.
- ▶ Mobil telefonlar bazı işitme cihazlarında girişime neden olabilir.
- ▶ Küçük çaplı girişimler TV'leri, radyoları, PC'leri vs. etkileyebilir.

## Yol güvenliği

Araç kullandığınız yerlerde sürüş sırasında mobil telefon kullanımıyla ilgili yasaları ve yönetmelikleri kontrol edin.

- ▶ Sürüş sırasında telefonu elde tutarak konuşmayın.
- ▶ Sürüş sırasında dikkatinizi tamamen yola verin.

- ▶ Mümkünse telefonla uzaktan konuşma (handsfree) kitlerini kullanın.
- ▶ Sürüş koşulları gerektiriyorsa arama yapmadan ya da gelen aramayı yanıtlamadan önce kenara çekin ve park edin.
- ▶ RF enerjisi, araba teybi, güvenlik cihazları gibi aracınızın bazı elektronik sistemlerini etkileyebilir.
- ▶ Araç kullanırken hava yastığının yakınına telefonunuzu koymayın ya da hands-free kitinizi bu tür yerlere yerleştirmeyin. Eğer kablosuz cihaz yanlış takılırsa ve hava yastığı devreye girerse, ciddi biçimde yaralanabilirsiniz.

## Patlatma işlemlerinin yapıldığı alanlar

Patlatma işlemlerinin yapıldığı yerlerde telefonu kullanmayın. Yasaklara, düzenlemelere ve kurallara uyun.

## Patlama riski olan ortamlar

- ▶ Telefonu yakıt istasyonlarında kullanmayın. Yakıt ya da kimyasal maddelerin yakınında kullanmayın.
- ▶ İçinde mobil telefonunuz varken patlayıcı gaz, sıvı ya da diğer patlayıcıları aracınızın içinde taşımayın ya da saklamayın.

## Uçakta

Kablosuz cihazlar uçakta girişime neden olabilmektedir.

- ▶ Uçaklara binmeden önce mobil telefonunuzu kapatın.
- ▶ Uçak yerdeyken, mürettebattan izin almadan kullanmayın.

## Çocuklar

Telefonu, çocukların ulaşamayacağı güvenli bir yerde saklayın. Üründen söküldüğünde çocuklarda nefes borusunun tıkanmasına neden olabilecek küçük parçalar bulunmaktadır.

# Güvenli ve etkili kullanma kuralları

## Acil aramalar

Acil aramaları, her hücresel şebekede yapamayabilirsiniz. Bu nedenle, acil arama yapmak için asla yalnızca telefona güvenmemelisiniz. Bölgenizdeki servis sağlayıcıyla görüşerek bilgi alın.

## Pil bilgisi ve bakımı

- ▶ Yeniden şarj etmeden önce pilin tam bitmesi gerekli değildir. Diğer pil sistemlerinin aksine, pilin performansını etkileyebilecek hafıza etkisi olmayan piller kullanılmaktadır.
- ▶ Yalnızca LG pilleri ve şarj aletleri kullanın. LG şarj aletleri, pilinizin en uzun ömürlü olmasını sağlayacak şekilde tasarlanmıştır.
- ▶ Pili sökmeyin ya da kısa devre yaptırmayın.
- ▶ Pilin metal temas yüzeylerini temiz tutun.
- ▶ Pil artık yeterli performans sağlayamadığında değiştirin. Pil, değişme zamanı gelene kadar yüzlerce kez şarj edilebilir.

- ▶ En uzun ömre sahip olması için uzun süre kullanılmadığında pili şarj edin.
- ▶ Pil şarj aletini doğrudan güneş ışığına maruz bırakmayın ya da banyo gibi yüksek nem oranına sahip yerlerde kullanmayın.
- ▶ Pili soğuk ya da sıcak yerlerde bırakmayın. Bu durum pilin performansını etkileyebilir.

# S5200'ün özellikleri

## Telefonun parçaları

### Önden görünüm



#### 1. Kulaklık girişi

- Kulaklığı buraya takın.

#### 2. Yukarı/aşağı tuşları

- Bekleme durumunda tuş seslerinin yüksekliğini kontrol eder.
- Telefon görüşmesi sırasında ahize kulaklığının ses yüksekliğini kontrol eder.

#### 3. Ön ekran

# S5200'ün özellikleri

## Sağdan görünüm



### Kamera/MP3

- Telefon kapalı olduğunda resim çekebilirsiniz. Kamera modunu etkinleştirmek için bu tuşa iki kez basın ve basılı tutun. Çekim yapmak için de bu tuşu kullanabilirsiniz. Ön ekranı bir vizör gibi kullanın.

## Arkadan görünüm

### Kamera lensi

- Kamera lensinin üzerinde pislik bulunması, görüntü kalitesini etkileyebilir.



## Açık görünüm



### Not

► Karşı tarafı duymakta zorlanmamak için telefonu kullanırken kaydırarak telefonu açın.

# S5200'ün özellikleri

## 1. Ahize Kulaklığı

**2, 8. Sol seçim tuşu / Sağ seçim tuşu:** Bu tuşlar, ekranda, hemen tuşun üzerinde bulunan metnin belirttiği işlevi yerine getirir.

**3. Gönder tuşu:** Telefon numaralarını arar ve gelen aramaları yanıtlar. Bekleme modunda bu tuşa basarak en son gelen, yapılan ve cevapsız aramalara çabucak ulaşabilirsiniz.

**4. Alfa-sayısal tuşlar:** Numaraları, harfleri ve bazı özel karakterleri girmek için kullanılır.

**5. Mikrofon:** Görüşme sırasında kapatılarak özel konuşma yapmanızı sağlar.

**6. Main screen:** Telefonun durum simgelerini, menü öğelerini, Web bilgisini, resimleri ve bir çok diğer öğeyi tam renkli olarak gösterir.



**7. Gezinme tuşu:** Menülerde gezinme ve imleci hareket ettirmek için kullanılır.

**9. Onaylama tuşu:** Menü seçeneklerini seçer ve işlemleri onaylar.

**10. Sonlandırma/Açma-Kapama tuşu:** Bir aramayı sonlandırmanızı ya da reddetmenizi, aynı zamanda bekleme moduna geri dönmenizi sağlar. Bu tuşa basılı tutarak t telefonu kapatabilir/açabilirsiniz.

**11. Silme tuşu:** Her bastığınızda bir karakter siler. Tüm girişleri silmek için tuşa basılı tutun. Aynı zamanda bir önceki ekrana geçmek için de bu tuşu kullanabilirsiniz.


## 12. Özel işlev tuşu:










- ▶  : Bu tuşa uzun bir süre basıldığında, uluslararası arama karakteri "+" girilir.
- ▶  : Bir telefon numarası yazarken, bu tuşa uzun süre basılarak duraklama girilebilir.

## Ekranla ilgili bilgiler







Aşağıdaki tabloda, telefonun ekranında görüntülenen çeşitli ekran göstergeleri ve simgeleri gösterilmektedir.

### Ekranla Gösterilen Simgeler

Simgelerin	Açıklaması
	Şebeke sinyalinin gücünü gösterir.
	Bir görüşme yapılmakta olduğunu gösterir.
	Başka bir şebekede dolaşım (roaming) olduğunuzu gösterir.
	GPRS servisinin mevcut olduğunu gösterir.
	Bir alarmin ayarlandığını ve açık duruma getirildiğini belirtir.
	Pil şarj durumunu gösterir.

Simgelerin	Açıklaması
	Bir metin mesajı alındığını gösterir.
	Bir sesli mesaj alındığını gösterir.
	Bir MMS mesajı alındığını gösterir.
	Titreşimin açılmış olduğunu gösterir.
	E-posta mesajının alındığını gösterir.
	Yüksek profilinin etkin olduğunu gösterir.
	Sessiz profilinin etkin olduğunu gösterir.
	Kulaklık profilinin etkin olduğunu gösterir.
	Genel profilinin etkin olduğunu gösterir.

# S5200'ün özellikleri

Simgelerin	Açıklaması
	Push mesajı servisini kullanabileceğinizi gösterir.
	Telefonun WAP'a girdiğini gösterir.
	GPRS kullandığınızı gösterir.
	Takvime olay girildi
	Çağrı yönlendirme aktif
	Bluetooth aktif

## Not


- ▶ Pil zayıf olduğunda Kamera ve Multimedya fonksiyonlarını kullanamayabilirsiniz.
- ▶ Multimedya fonksiyonlarını kullanırken pil durumu değişebilir.

## SIM kartın ve telefonun pilinin takılması

Pili çıkartmadan önce telefonu kapattığınızdan emin olun.

### 1. Pili çıkartın.

Pilin üst kenarını tutuna ve kaldırarak pil bölmesinden çıkartın.

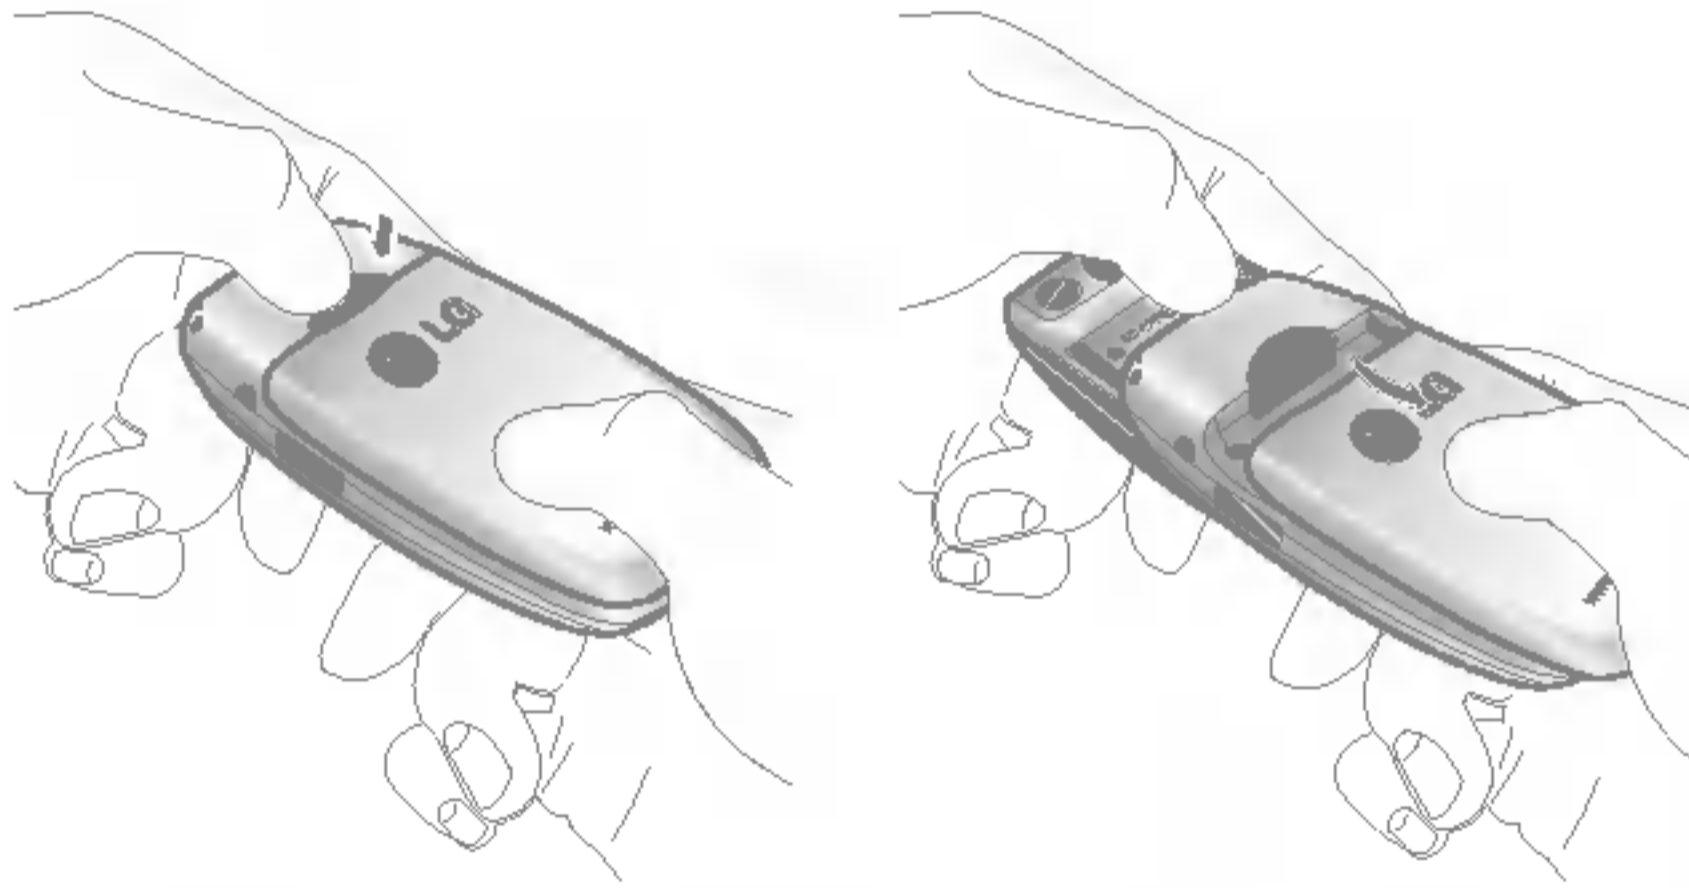


### Not

- Telefon açıkken pilin çıkartılması, telefonun bozulmasına neden olabilir.

### 2. SIM kartı takın.

SIM kartı, yuvasına yerleştirin. SIM kartı, SIM kart yuvasına kaydırın. SIM kartın doğru takıldığından ve kartın üzerindeki altın kontakların bulunduğu alanın aşağıya dönük olduğundan emin olun. SIM kartı çıkartmak için hafifçe aşağıya doğru bastırın ve ters yönde çekin.

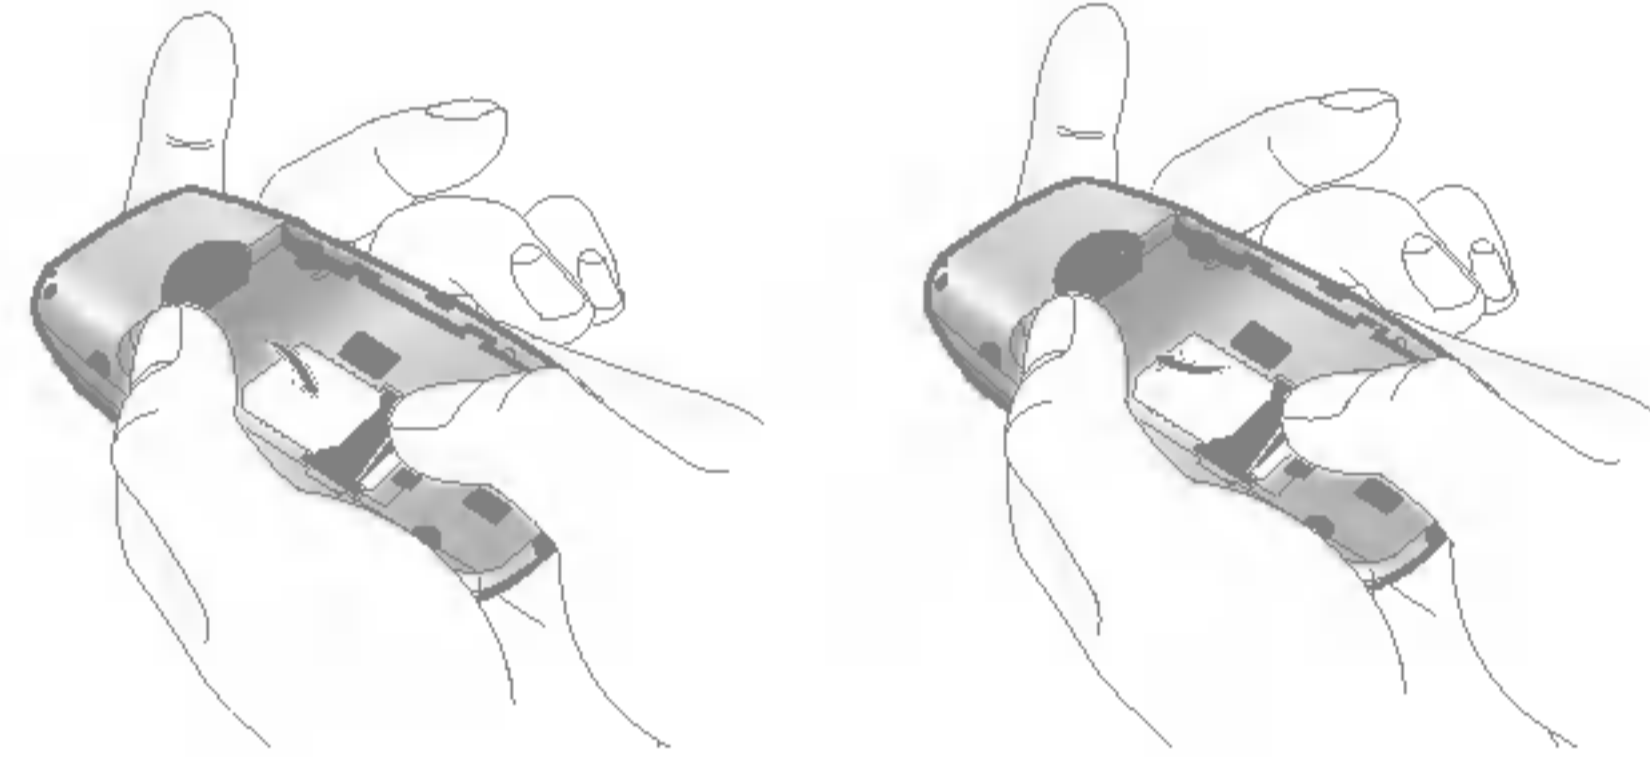

SIM kartın takılması


SIM kartın çıkartılması

### Dikkat!

- SIM kartın metal yüzeyleri, çizilerek kolayca zarar görebilir. SIM kartı takıp çıkartırken dikkatli olun. SIM kartla birlikte verilen talimatları uygulayın.


# Başlangıç

## 3. Pili takın.

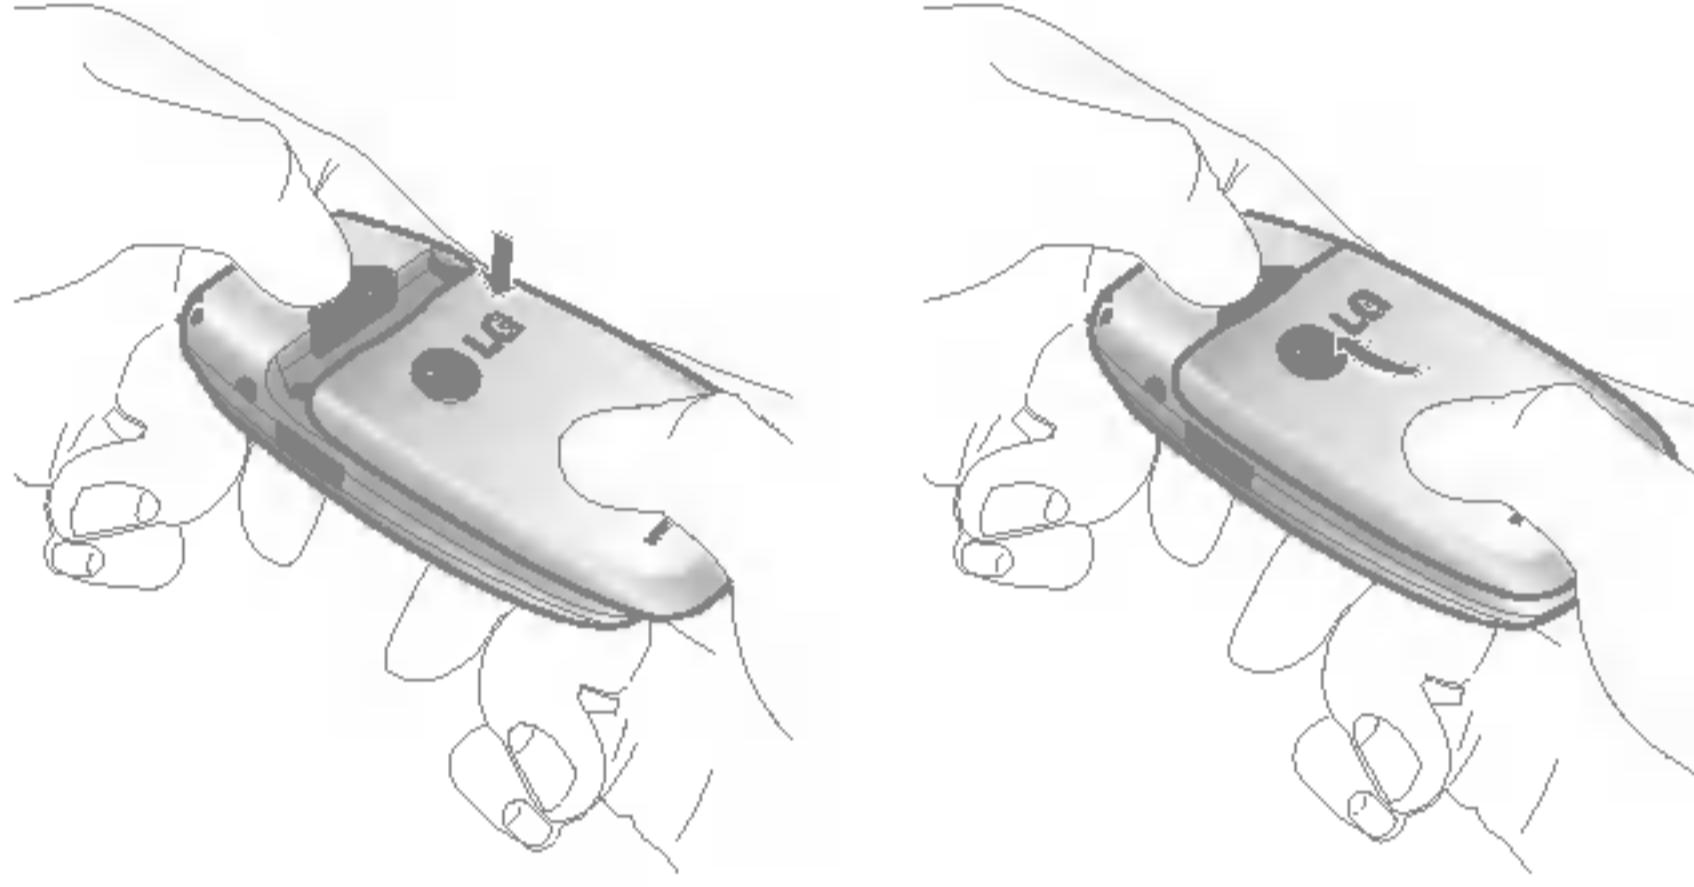

## Pilin şarj edilmesi

Seyahat adaptörünü telefona takabilmeniz için bataryayı takmış olmanız gereklidir.

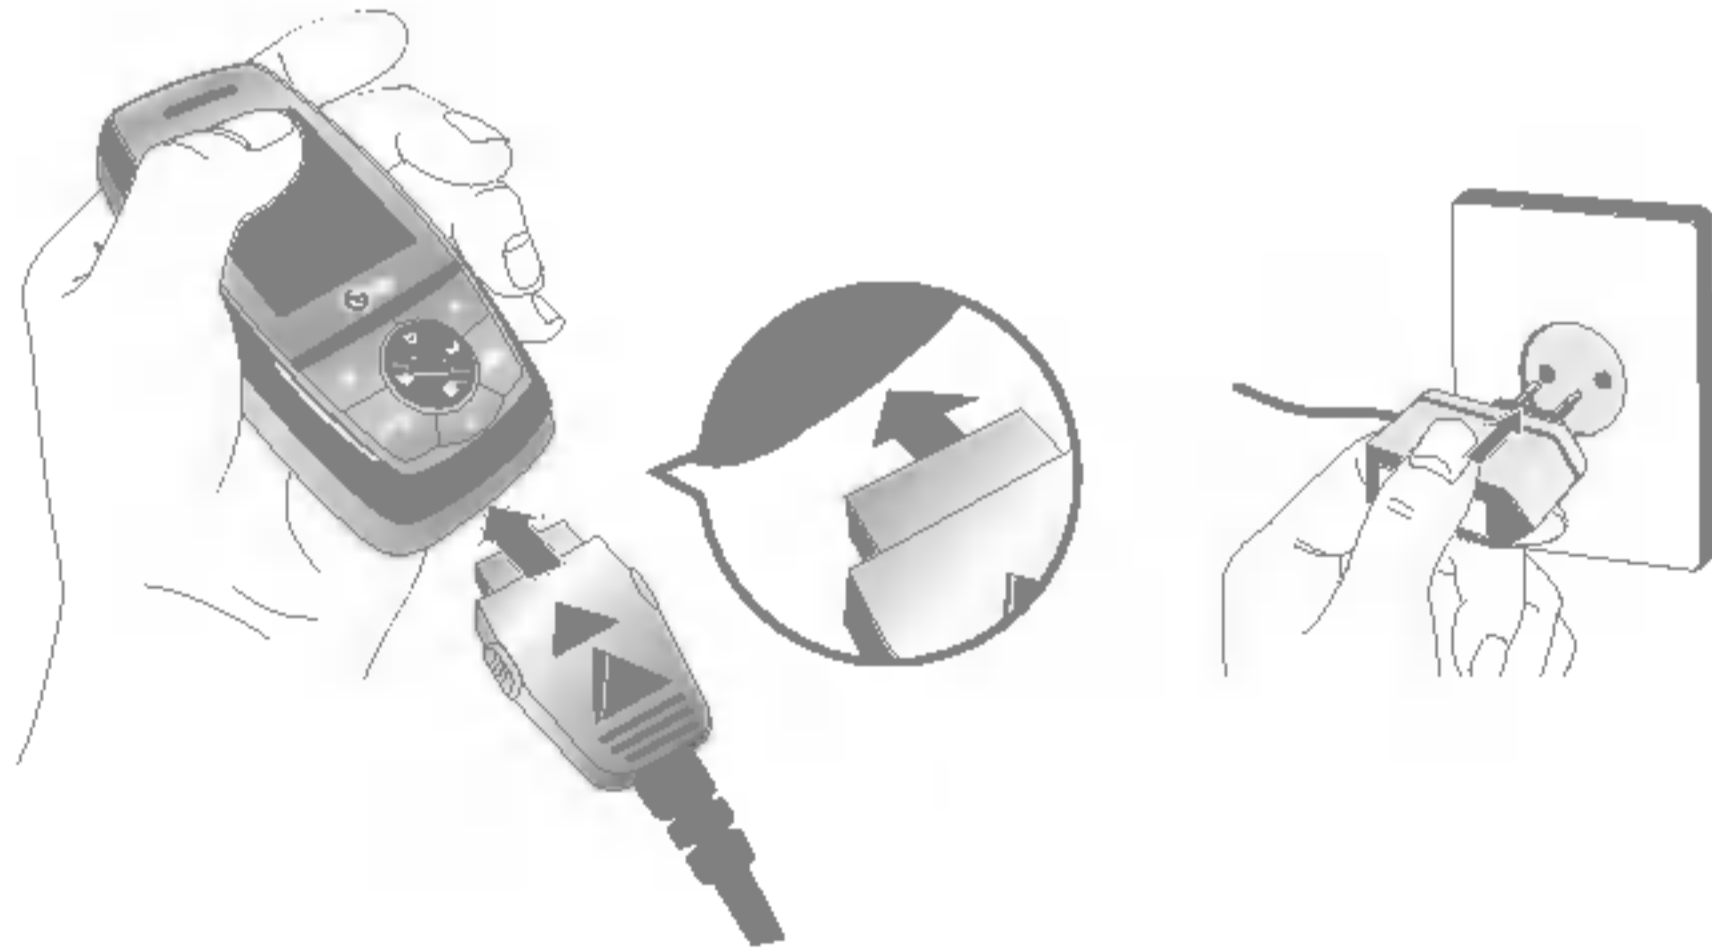

1. Batarya adaptörünün fişini, şemada da gösterildiği gibi ok size bakacak şekilde, tam olarak yerine oturana dek telefonun alt tarafındaki yuvanın içerisine itin.
2. Seyahat adaptörünün diğer ucunu elektrik prizine takın. Yalnızca kutuyla birlikte verilen şarj cihazını kullanın.
3. Şarj işlemi tamamlandıktan sonra batarya simgesindeki hareket eden şeritler duracaktır.

### Dikkat!


- ▶ Konnektörü yuvaya oturtmak için zorlamayın; bu, telefona ve/veya seyahat adaptörüne zarar verebilir.
- ▶ Pil paketi şarj cihazını, dikey olarak elektrik prizine takın.
- ▶ Kendi ülkeniz için belirlenen dışında bir pil paketi kullanıyorsanız, düzgün takmak için bir ek fiş adaptörü kullanın.
- ▶ Şarj sırasında bataryanızı veya SIM kartınızı çıkartmayın.

**Uyar!**

- ▶ Elektrik çarpmaları ya da yangını önlemek için yıldırımların düştüğü fırtınalı havalarda elektrik kordonunu ve şarj cihazını prizden çıkartın.
- ▶ Pil ile hayvan dişi, tırnağı gibi keskin kenarlı nesnelerin temas etmediğinden emin olun. Bu tür durumlarda yangın çıkma riski bulunmaktadır.
- ▶ Telefonda kısa devre yapabileceğinden ve yangına ya da elektrik çarpmalarına neden olabileceğinden telefon şarj olurken aramaları cevaplamayın ya da arama yapmayın.

**Adaptörün çıkartılması**


1. Şarj işlemi tamamlandığında, pil simgesinin hareket eden çubukları durur ve ekranda 'Dolu' mesajı görüntülenir.
2. Adaptörü elektrik prizinden çıkartın. Konektörün her iki yanında bulunan gri çıkıntılara basıp konektörü dışarı doğru çekerek adaptörü telefondan çıkartın.

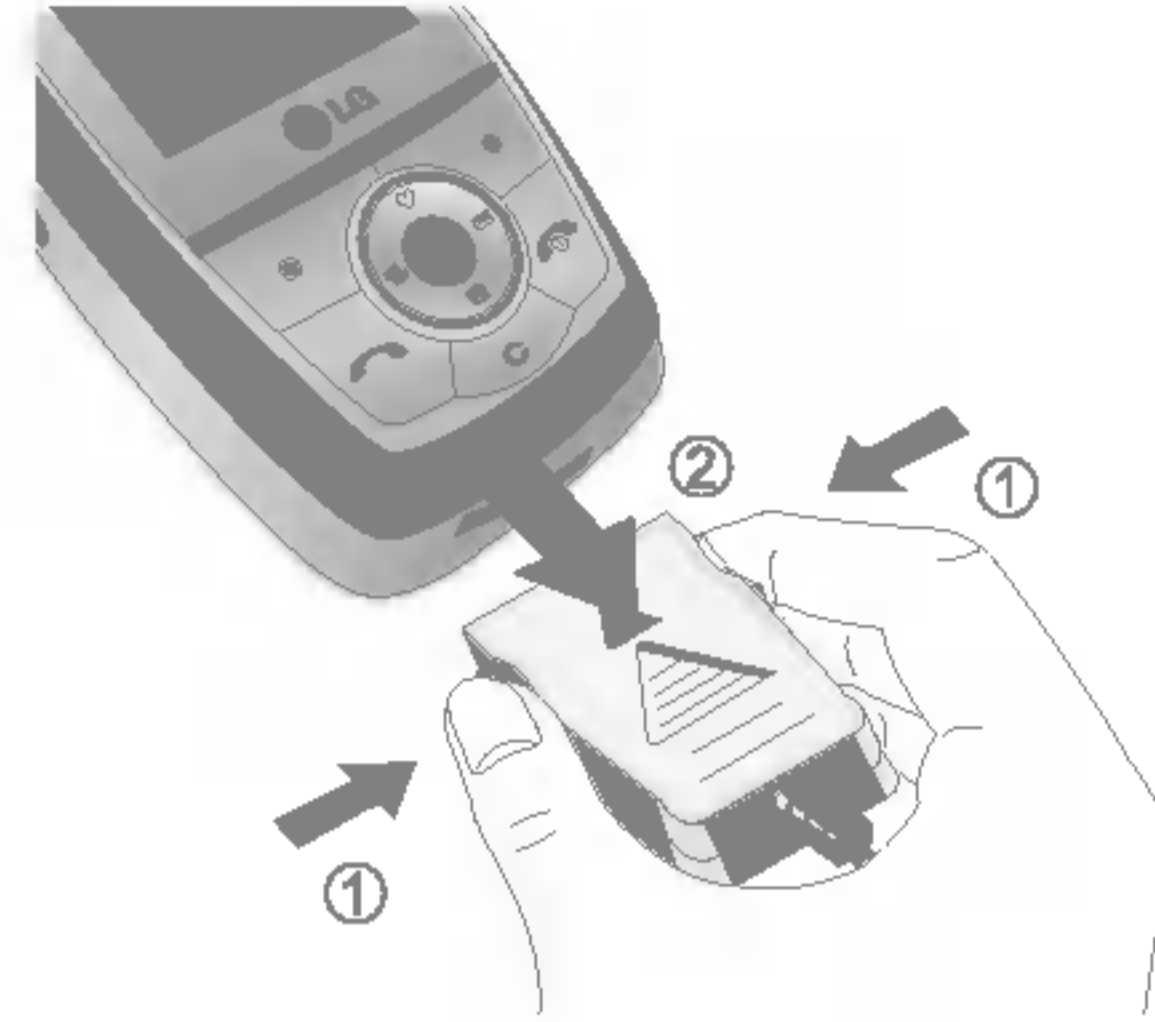**Not**


- ▶ Telefonu ilk kullanımınızda pilin tam şarj edildiğinden emin olun.
- ▶ Şarj ederken pili ya da SIM kartınızı çıkartmayın.
- ▶ Pil düzgün biçimde şarj edilmediyse, lütfen açma- kapama tuşunu kullanarak telefonu kapatın, açın ve ardından pili yeniden şarj edin. Pili çıkartıp yeniden taktıktan sonra lütfen şarj edin.

## Telefonu açmak ve kapatmak

### Telefonu açmak

1. Telefona pilini takın ve seyahat adaptörü, çakmak yuvası adaptörü ya da ahizesiz görüşme (handsfree) araç kitine bağlayın. Ya da telefona şarj edilmiş bir pil takın.
2. LCD ekran açılana kadar  tuşuna bir kaç saniye basın.
3. **PIN kodu isteği** ayarının durumuna göre, PIN kodnuzu girmeniz gerekebilir.

### Telefonu kapatmak

1. LCD ekran kapanana kadar  tuşuna bir kaç saniye basın.

## Erişim kodları

Telefonunuzun izinsiz kullanılmasını önlemek için bu bölümde açıklanan erişim kodlarını kullanabilirsiniz. Erişim kodları (PUK ve PUK2 kodları dışında) **Kodları değiştir** işleviyle [Menü 7-4-6] değiştirilebilir.

### PIN kodu (4 - 8 basamak)

PIN (Kişisel Kimlik Numarası) kodu, SIM kartınızı, izinsiz kullanıma karşı korur. PIN kod genellikle SIM kartınızla birlikte verilir. **PIN kodu isteği**, **Etkinleştir** değerine ayarlı olduğunda, telefonunuz her açıldığında PIN kod sorulacaktır. **PIN kodu isteği**, **Kapat** değerine ayarlı olduğunda, telefonunuz PIN kod sorulmadan doğrudan şebekeye bağlanır.

### PIN2 kodu (4 - 8 basamak)

Bazı SIM kartlarla birlikte verilen PIN2 kodu, **Arama Ücreti Bilgisi** ve **Sabit arama numarası** gibi işlevlerin kullanılması için gereklidir. Bu işlevler yalnızca SIM kartınız desteklediğinde kullanılabilir. Daha fazla bilgi için şebeke servis sağlayıcınızla görüşün.

## PUK kodu (4 - 8 basamak)

PUK (PIN Bloke Açma Anahtarı) kodu, bloke olmuş PIN kodlarını değiştirmek için kullanılır. PUK kod SIM kartınızla birlikte verilebilir. Verilmediyse, kodu öğrenmek için şebeke operatörünüzle görüşün. Kodu kaybettiğinizde de şebeke operatörünüzle görüşebilirsiniz.

## PUK2 kodu (4 - 8 basamak)

Bazı SIM kartlarla birlikte verilen PUK2 kodu, bloke olmuş PIN2 kodunun değiştirilmesi için kullanılır. Kodu kaybettiğinizde de şebeke operatörünüzle görüşebilirsiniz.

## Güvenlik kodu (4 - 8 basamak)

Güvenlik kodu, telefonu, izinsiz kullanımlara karşı korur. Varsayılan güvenlik kodu '0000' dir. Güvenlik kodu tüm telefon kayıtlarının silinmesinde ve Fabrika ayarları menüsünü etkinleştirmek için kullanılır. Aynı zamanda telefonun izinsiz kullanılmasını önlemek için kullanılan telefon kilidi işlevini etkinleştirmek ve kapatmak için de güvenlik kodu gerekir. Güvenlik kodu varsayılan ayarı, **Güvenlik ayarları** menülerinde değiştirilebilir.




## Engelleme şifresi

**Çağrı engelleme** işlevini kullanırken engelleme şifresinin girilmesi gerekir. Şifreyi, bu işleve abone olduğunuzda şebeke operatörünüzden alabilirsiniz. Daha fazla bilgi için 106. sayfaya bakın.



# Genel işlevler

## Arama yapma ve cevaplama



### Arama yapma

1. Telefonunuzun açık olduğundan emin olun.
2. Alan koduyla birlikte istediğiniz telefon numarasını girin.
  - ▶ Tüm numarayı silmek için silme tuşuna (  ) basın ve basılı tutun.
3. Numarayı aramak için gönder tuşuna (  ) basın.
4. Aramayı kapatmak için sonlandırma tuşuna (  ) ya da sağ seçim tuşuna basın.


### Gönderme tuşunu kullanarak arama yapma

1. Bekleme modunda gönder tuşuna (  ), bastığınızda, en sonra gelen, yapılan ve cevapsız aramaların telefon numaraları gösterilir.
2. Yukarı/aşağı gezinme tuşunu kullanarak istediğiniz numarayı seçin.
3.  tuşuna basın.


## Uluslararası aramalar yapma

1. Uluslararası arama ön kodu için  tuşuna basın ve basılı tutun. '+' karakteri, otomatik olarak uluslararası erişim kodunu seçer.
2. Ülke kodunu, alan kodunu ve telefon numarasını girin.
3.  tuşuna basın.


## Aramayı sonlandırma

Görüşmeniz bittiğinde, sonlandırma (  ) tuşuna basın.

## Rehberde arama yapma

Sık sık aradığınız adları ve telefon numaralarını Rehber'e kaydedebilirsiniz. SIM karta ve/veya telefon hafızasına kaydedebilirsiniz. Rehberdeki bir numarayı aramak için rehberde istediğiniz kişinin adını bulun ve (  ) tuşuna basın.

## Ses seviyesinin ayarlanması

Görüşme sırasında ahize hoparlörünün ses seviyesini ayarlamak için yan tuşları (  ) kullanın. Sesi açmak için yukarı yan tuşa, azaltmak için aşağı yan tuşa basın.

### Not


- Bekleme modunda, kayar tuş takımı aşağıdayken, yan tuşları tuş sesi seviyesini ayarlamak için kullanabilirsiniz.

## Aramaların yanıtlanması


Bir arama geldiğinde, telefonunuz çalar ve ekranda yanıp sönen bir telefon simgesi görüntülenir. Arayan kişinin numarası algılanıyorsa,

1. Gelen aramayı yanıtlamak için tuş takımını aşağıya kaydırın. (Yanıtlama modunda **Kapak açma** ayarlandıysa.)


### Not

- Yanıtlama modunda Herhangi bir tuşla yanıtlama seçildiyse,  ya da sağ seçim tuşu dışında herhangi bir tuşa basarak aramayı yanıtlayabilirsiniz.

- Adres defterini ya da diğer menü işlevlerini kullanırken bir aramayı yanıtlayabilirsiniz.

2. Aramayı sonlandırmak için kapağı kapatın ya da  tuşuna basın.


## Hoparlörü Kullanma

Görüşme esnasında  tuşuna basarak hoparlörü etkinleştirebilirsiniz. Görüşmeyi sonlandırdığınızda, hoparlör otomatik olarak kapatılacaktır.

### Uyarı!


- Yüksek ses seviyeleri nedeniyle, hoparlör açık iken telefonu kulağınıza yaklaştırmayınız.

## Bildirim modu (Hızlı)

Kayar tuş takımı yukarıdayken sol gezinmedan birine  basıp basılı tutarak bildirim modunu etkinleştirebilirsiniz.

# Genel işlevler

## Sinyal gücü

Telefonun LCD ekranındaki sinyal göstergesi (  ) ile bulunduğunuz ortamdaki sinyalin gücünü görebilirsiniz. Sinyal gücü, özellikle binaların içlerinde değişebilir. Bir pencereye doğru ilerleyerek sinyal gücü alımının daha iyi hale gelmesini sağlayabilirsiniz.

## Metin girme

Telefonun tuş takımını kullanarak alfa-sayısal karakterler girebilirsiniz. Örneğin telefona adları girmek, mesaj yazmak, kişisel karşılama mesajı oluşturmak gibi.

Telefonda, aşağıdaki metin giriş yöntemleri kullanılabilir.

### T9 modu


Bu mod, her harf için ilgili tuşa bir kez dokunarak sözcükleri girmenize olanak sağlar. Tuş takımındaki her tuşa birden fazla harf atanmıştır. T9 modu, bastığınız tuşları otomatik olarak bir dahili sözlükle kıyaslayarak doğru sözcüğü arar.

Dolayısıyla geleneksel ABC moduna göre çok daha az sayıda tuşa basarak sözcükleri girebilirsiniz. Bu işleve bazen akıllı metin girişi de denmektedir.

### ABC modu


Bu modda, harfleri, ilgili tuşa harf gösterilene kadar bir, iki, üç ya da dört kez basarak girebilirsiniz.


### 123 modu (Sayı modu)

Her numara için ilgili tuşa bir kez basmanız yeterlidir. Metin girişi alanında 123 moduna geçmek için, 123 modu gösterilene kadar  tuşuna basın.

## Metin girişi modunu değiştirme

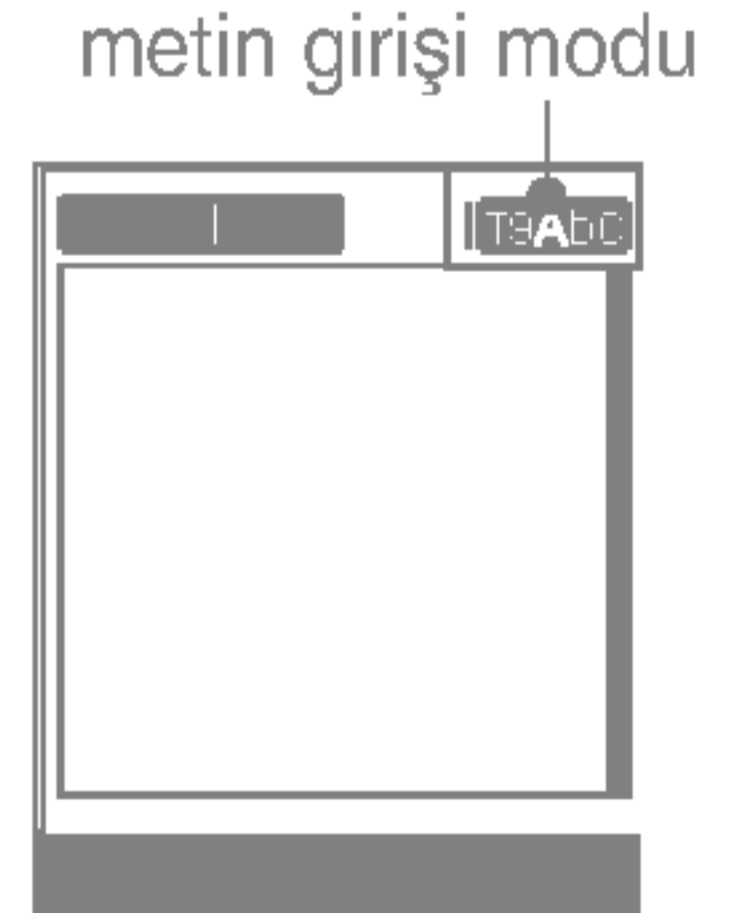

1. Karakterlerin girilmesine olanak sağlayan bir alanda olduğunuzda, LCD ekranın sağ alt köşesinde metin girişi modu göstergesini göreceksiniz.



2.  tuşuna basarak metin girişi modunu değiştirebilirsiniz. Kullanılan metin girişi modunu, LCD ekranın sağ alt köşesinde görebilirsiniz.





## T9 modunun kullanılması





T9 akıllı metin girişi modu, tuşlara mümkün olduğunca az sayıda basarak sözcükleri kolay biçimde girmenizi sağlar. Her tuşa bastığınızda, telefon, dahili sözlüğüyle kıyaslayarak girmeye çalıştığınızı düşündüğü karakterleri göstermeye başlar. Sözlüğe yeni sözcükler ekleyebilirsiniz. Yeni sözcükler eklendikçe, sözcük, sözlükteki en benzer kaydı gösterecek şekilde değişir.

1. T9 akıllı metin girişi modundayken  -  . Press one key per letter. arası tuşlara basarak bir sözcük girmeye başlayabilirsiniz. Her harf için ilgili tuşa bir kez basın.

- Siz harf girdikçe gösterilen sözcük değişecektir. İsteddiğiniz sözcüğü tam olarak yazana kadar ekranda gösterilen sözcüğü dikkate almayın.




- Tümünü yazdıktan sonra gösterilen istediğiniz sözcük değilse, aşağı gezinme tuşuna basarak diğer sözcük seçeneklerini görebilirsiniz.

**Örnek:** Good yazmak için     tuşlarına basın.


Home yazmak için     [Aşağı gezinme tuşu] tuşlarına basın.

- İsteddiğiniz sözcük, sözcük seçenekleri listesinde yoksa, ABC modunu kullanarak ekleyebilirsiniz.
  - T9 modunun dilini değiştirebilirsiniz. Sol seçim tuşuna [Seçenek] basın ve **T9 dilleri** öğesini seçin. İsteddiğiniz T9 modu dilini seçin. **T9 kapalı** seçerek de T9 modunu kapatabilirsiniz. Telefonda T9 modu varsayılan olarak açık durumdadır.
2. Ekranda gösterilen harfleri silmeden ya da düzenlemeye çalışmadan önce tüm sözcüğü girin.

# Genel işlevler




3. Sözcükleri  tuşuna basıp boşluk bırakarak tamamlayın. Harfleri silmek için  tuşuna basın. Tüm sözcüğü silmek için  tuşuna basın ve basılı tutun.

## Not

- Girişinizi kaydetmeden metin girişi modundan çıkmak için  tuşuna basın. Telefon yeniden bekleme moduna döner.











## ABC modunun kullanılması

Metin girmek için  -  arası tuşları kullanın.

1. Girmek istediğiniz harfin bulunduğu tuşa basın:
  - İlk harf için bir kez
  - İkinci harf için iki kez
  - Bu şekilde devam edin
2. Boşluk girmek için  tuşuna bir kez basın. Harfleri silmek için  tuşuna basın. Tüm ekranı silmek için  tuşuna basın ve basılı tutun.

## Not

- Alfa-sayısal tuşları kullanarak girilebilecek karakterlerle ilgili daha fazla bilgiyi aşağıdaki tabloda bulabilirsiniz.

Tuş	Gösterilme sırasıyla karakterler	
	Büyük harf	Küçük harf
	., / ? ! - : ' " 1	., / ? ! - : ' " 1
	A B C Ç A A Ä Á Æ 2	a b c ç a a a a æ 2
	D E F E E E E 3	d e f e e e e 3
	G H I 4 İ İ İ İ Ğ	g h i 4 i i i i ğ
	J K L 5	j k l 5
	M N O 6 Ñ Ö Ø Ó Ô Õ Ö	m n o 6 ñ ö ø ó ô õ ö
	P Q R S 7 ß Ş	p q r s 7 ß ş
	T U V 8 Ü Û Ú Û	t u v 8 ü û ú û
	W X Y Z 9	w x y z 9
	Boşluk tuşu, 0	Boşluk tuşu, 0

## 123 (Numara) modunun Kullanılması

123 modu, bir metin mesajına sayı (örneğin telefon numarası) girmenizi sağlar.

İlgili metin girişi moduna kendiniz geri dönmeden önce istediğiniz sayılara karşılık gelen tuşlara basın.

## Rehber

Telefon numaralarını ve bunlara bağlı isimleri SIM kartınızın hafızasında saklayabilirsiniz. Ayrıca telefon hafızasında 1000 numara ve isim saklayabilirsiniz.

**Rehber** menüsünde SIM kart ve telefon hafızası aynı şekilde kullanılmaktadır.

## Arama içi menüsü

Telefonunuzda, görüşme sırasında kullanabileceğiniz çeşitli kontrol işlevleri bulunmaktadır. Görüşme sırasında bu işlevlere ulaşmak için sol seçim tuşuna [Seçenek] basın.

## Arama sırasında

Bir görüşme sırasında telefonun ekranında gösterilen menü ile bekleme modunda gösterilen farklıdır ve seçenekler aşağıda açıklanmıştır.

## İkinci aramayı yapma


İkinci bir arama yapmak için telefon rehberinden istediğiniz bir numarayı alabilirsiniz. Sağ seçim tuşuna basın ve **Ara**'yı seçin. Aradığınız numarayı görüşme sırasında rehberde kaydetmek için sağ seçim tuşuna basın ve **Yeni ekle**'yi seçin.

## İki arama arasından geçiş yapma


İki arama arasında geçiş yapmak için sol seçim tuşuna basın ve **Değiştir** öğesini seçin.

# Genel işlevler

## Gelen aramayı yanıtlama


Telefon çaldığında gelen aramayı yanıtlamak için  tuşuna basmanız yeterlidir. Görüşme sırasında bile telefonunuz gelen aramada sizi uyarabilir. Ahize hoparlöründe bir ses duyulur ve ekranda ikinci aramanın beklediği gösterilir.

Bu özelliğe **Çağrı bekletme** denir yalnızca şebekeniz destekliyorsa kullanılabilir. **Çağrı bekletme**'yi [Menü 7-4-4] nasıl etkinleştireceğiniz ya dakapatacağınızla ilgili bilgi için 102. sayfaya bakın.

**Çağrı bekletme** etkinse,  tuşuna basarak ya da sol seçim tuşunu seçip **Beklet ve Yanıtla** ögesini seçerek ilk görüşmenizi beklemeye alıp ikinci aramayı yanıtlayabilirsiniz. Sol seçim tuşuna basıp **Kapat ve Yanıtla** ögesini seçerek mevcut aramanızı kapatabilir ve bekleyen aramayı yanıtlayabilirsiniz.

## Gelen aramayı reddetme

 tuşuna basarak gelen bir aramayı reddedebilirsiniz.

Görüşme sırasında gelen aramayı sol seçim tuşuna [Menü] basıp **Konferans/Reddet** ögesini seçerek ya da  tuşuna basarak reddedebilirsiniz.

## Mikrofonu kapatma

[Menu] tuşuna basıp **Ses kapalı** seçerek mikrofonu kapatabilirsiniz. Telefon, **Ses açık** ögesi seçilerek tekrar sesi iletecek hale getirilebilir. Telefon sessiz olduğunda, görüştüğünüz kişi sizi duyamaz ama siz onu duymaya devam edersiniz.


## Görüşme sırasında DTMF tonlarına geçme

Görüşme sırasında DTMF tonlarını açmak için sol seçim tuşuna basın ve **DTMF açık** ögesini seçin. DTMF tonları aynı şekilde kapatılabilir. DTMF tonları, telefonunuzun otomatik santral işlevlerini kullanabilmesini sağlar.

## Çok kişili ya da konferans görüşmeler

Çok kişili ya da konferans hizmeti, şebeke operatörünüz destekliyorsa birden fazla kişiyle aynı anda görüşme yapabilmenize olanak sağlar. Çok kişili görüşme yalnızca her ikisi de yanıtlanmış bir etkin bir de beklemede olan arama olduğunda ayarlanabilir. Çok kişili arama kurulduğunda, aramayı kuran kişi tarafından başka aramalar eklenebilir, mevcut aramalar kapatılabilir ya da ayrılabilir (yani çok kişili görüşmeden çıkartılır ama sizinle görüşmeye devam eder). Bu seçeneklerin tümüne Arama içi menüsünden ulaşılabilir. Çok kişili görüşmede olabilecek maksimum kişi sayısı beştir. Çok kişili görüşme başladığında tüm kontrol sizde olur ve görüşmeye yalnızca siz yeni kişiler ekleyebilirsiniz.

## İkinci aramayı yapma

Bir görüşme yaparken ikinci bir arama yapabilirsiniz. İkinci numarayı girin ve  tuşuna basın. İkinci görüşmeye bağlanıldığında birinci görüşme otomatik olarak beklemeye alınır. Sol seçim tuşuna basıp Değiştir seçerek görüşmeler arasında geçiş yapabilirsiniz.

## Konferans arama kurma

Bir görüşmeyi beklemeye alın ve etkin arama açıkken sol seçim tuşuna basın ve **Konferans/Tümünü bağla** ögesini seçin.

## Konferans aramasını beklemeye alma

Sol seçim tuşuna basın ve **Konferans/Tümünü beklet** ögesini seçin.

## Beklemedeki konferans aramasını etkinleştirme

Sol seçim tuşuna basın ve **Konferans/Tümünü bağla** ögesini seçin.

# Genel işlevler

## Konferans aramaya kişiler ekleme

Mevcut konferans aramaya yeni bir kişi eklemek için sol seçim tuşuna basın ve **Konferans/Tümünü bağla** öğesini seçin.


## Konferans aramadaki kişileri görüntüleme

Telefonun ekranında, konferans aramasındaki kişilerin numaraları arasında hareket etmek için yukarı/aşağı gezinme tuşlarını kullanın.

## Konferans arama sırasında özel bir arama alma

Konferans aramadaki bir kişiyle özel bir görüşme yapmak için, görüşme yapmak istediğiniz kişinin numarasını ekranda bulun ve sol seçim tuşuna basın. Tüm diğer arayanları beklemeye almak için **Konferans/Özel** öğesini seçin.

## Konferans aramayı sonlandırma

Konferans aramadaki o sırada gösterilen kişi,  tuşuna basılarak görüşmeden çıkartılabilir. Konferans aramayı sonlandırmak için sol seçim tuşuna basın ve Konferans/Çok kişili görüşmeyi kapat öğesini seçin. Sol seçim tuşuna basıp Konferans/Tümünü kapat öğesini seçtiğinizde, tüm etkin ve beklemedeki aramalar kapatılacaktır.

# Menü ağacı

<b>1. Profiller</b>
1.1 Titremeli
1.2 Sessiz
1.3 Genel
1.4 Yüksek
1.5 Kulaklık
<b>2. Çağrı kaydı</b>
2.1 Cevapsız aramalar
2.2 Kabul edilen aramalar
2.3 Yapılan çağrılar
2.4 Son aramaları sil
2.5 Arama Ücretleri
2.5.1 Arama süresi
2.5.2 Arama ücretleri
2.5.3 Ayarlar
2.6 GPRS info
2.6.1 Arama süresi
2.6.2 Veri miktarı

<b>3. Ekstralar</b>
3.1 Çalar Saat
3.2 Bluetooth
3.2.1 Cihazlarm
3.2.2 Serbest konuşma cihazları
3.2.3 Ayarlar
3.3 Hesap mak.
3.4 Birim dönüş.
3.5 Yerel saatler
3.6 Modem

<b>4. Ajanda</b>
4.1 Rehber
4.1.1 Ara
4.1.2 Yeni ekle
4.1.3 Arama grupları
4.1.4 Hızlı arama
4.1.5 Ayarlar
4.1.6 Hepsini Kopyala
4.1.7 Tümünü Sil
4.1.8 Bilgi
4.2 Takvim
4.2.1 Yeni ekle
4.2.2 Günlük programı göster
4.2.3 Sonuncuyu sil
4.2.4 Tümünü Sil
4.2.5 Tarihe git
4.2.6 Alarm tonunu belirle
4.3 Kısa not

# Menü ağacı

<b>5. Mesajlar</b>
<b>5.1 Yeni mesaj</b> 5.1.1 SMS yaz 5.1.2 MMS yaz
<b>5.2 Gelen kutusu</b>
<b>5.3 Giden kutusu</b>
<b>5.4 Taslaklar</b>
<b>5.5 Sesli mesaj dinle</b>
<b>5.6 Bilgi mesajı</b> 5.6.1 Oku 5.6.2 Konular
<b>5.7 Kalıplar</b> 5.7.1 Metin şablonları 5.7.2 MMS şablonları 5.7.3 İmza
<b>5.8 Ayarlar</b> 5.8.1 SMS 5.8.2 MMS 5.8.3 Ses postası merkezi 5.8.4 Bilgi mesajı 5.8.5 Push mesajları

<b>6. Multimedya</b>
<b>6.1 Resim çek</b>
<b>6.2 Video kamera</b>
<b>6.3 Fotoğraflarım</b>
<b>6.4 Videom</b>
<b>6.5 MP3</b> 6.5.1 MP3-Oynatıcısı 6.5.2 Çalma listesi 6.5.3 Ayarlar
<b>6.6 Ses kaydedici</b> 6.6.1 Kaydet 6.6.2 Listeyi görüntüle
<b>6.7 Ayarlar</b> 6.7.1 Kamera 6.7.2 Video kamera



<b>7. Ayarlar</b>
<b>7.1 Tarih &amp; Saat</b> 7.1.1 Tarih ayarla 7.1.2 Zaman ayarla
<b>7.2 Telefon ayarı</b> 7.2.1 Ekran Ayarları 7.2.2 Renk düzeni 7.2.3 Dil
<b>7.3 Çağrı Ayarı</b> 7.3.1 Çağrı Yönlendirme 7.3.2 Cevap modu 7.3.3 Numaramı gönder 7.3.4 Çağrı Bekletme 7.3.5 Çağrı Hatır. 7.3.6 Oto. tekrar ara

<b>7.4 Güvenlik</b> <ul style="list-style-type: none"><li>7.4.1 PIN kodu isteği</li><li>7.4.2 Telefon kilidi</li><li>7.4.3 Oto. tuş kilidi zaman aşımı</li><li>7.4.4 Çağrı Engelleme</li><li>7.4.5 Sabit arama numarası</li><li>7.4.6 Kodları değiştir</li></ul>
<b>7.5 Şebeke ayarları</b> <ul style="list-style-type: none"><li>7.5.1 Şebeke seçimi</li><li>7.5.2 Bant seçimi</li></ul>
<b>7.6 GPRS ayarı</b>
<b>7.7 Ayarları Sıfırla</b>
<b>7.8 Hafıza durumu</b> <ul style="list-style-type: none"><li>7.8.1 İç bellek</li><li>7.8.2 Multimedya bellek</li></ul>

<b>8. Servis</b>
<b>8.1 Internet</b> <ul style="list-style-type: none"><li>8.1.1 Ana sayfa</li><li>8.1.2 Yer imleri</li><li>8.1.3 URL'ye git</li><li>8.1.4 Ayarlar</li></ul>
<b>8.2 SIM servisi</b>

<b>9. İndirilenler</b>
<b>9.1 Oyunlarm ve diğerleri</b> <ul style="list-style-type: none"><li>9.1.1 Oyunlarm ve diğerleri</li><li>9.1.2 Profiller</li></ul>
<b>9.2 Resimler</b>
<b>9.3 Melodiler</b>
<b>9.4 Dosya hafızası</b>

# İşlevleri ve seçenekleri belirleme

Telefonda, telefonun özelliklerini kişiselleştirmenizi sağlayacak çeşitli işlevler bulunmaktadır. Bu işlevler, menüler ve alt menüler şeklinde düzenlenmiştir ve bunlara [  ] ve [  ] ile işaretli seçim tuşlarıyla ulaşılabilir.

Her menü ve alt menü, belirli bir işlevin ayarını görmenizi ve değiştirmenizi sağlar. Seçim tuşlarının görevleri mevcut duruma göre değişir; ekranın en altında, her tuşun hemen üzerinde bulunan metinler, tuşların işlevini gösterir.




**İlgili menüye ulaşmak için sol seçim tuşuna basın.**

**Rehber'e ulaşmak için sağ seçim tuşuna basın.**

Profillerde, farklı işlemler, ortamlar ya da arayan grupları için telefonun seslerini ayarlayabilir ve kişiselleştirebilirsiniz. Altı önceden ayarlanmış profil bulunmaktadır: **Titremeli**, **Sessiz**, **Genel**, **Yüksek** ve **Kulaklık**. Tüm profilleri istediğiniz gibi kişiselleştirebilirsiniz. Sol seçim tuşuna [Menü] basın ve yukarı/aşağı gezinme tuşlarını kullanarak Profiller'i seçin.


## Etkinleştir

Menü 1.x.1

1. Profil listesi görüntülenir.
2. Profil listesinde etkinleştirmek istediğiniz profile ilerleyin ve sol seçim tuşuna  [Seç] ya da Tamam tuşuna basın.
3. Ardından **Etkinleştir** seçin.

## Kişiselleştir

Menü 1.x.2

Profil listesinde istediğiniz profile ilerleyin. Tamam tuşuna ya da sol seçim tuşuna  bastıktan sonra **Kişiselleştir** ögesini seçin. Profil ayarlama seçenekleri açılır. Seçenekleri istediğiniz gibi ayarlayın.

- ▶ **Arama uyarı türü:** Gelen aramalar için uyarı türünü belirleyin.
- ▶ **Zil Tonu:** Listedeki istediğiniz zil tonunu seçin.
- ▶ **Zil sesi seviyesi:** İstenen zil sesi düzeyini seçin.

### Not

- ▶ Slayt açıkken işitme sistemini korumak için maksimum ses seviyesi 3'tür.

- ▶ **Mesaj uyarı:** Mesajlar için uyarı türünü belirleyin.
- ▶ **Mesaj sesi:** Mesajlar için uyarı sesini belirleyin.
- ▶ **Tuş sesi:** İstediğiniz tuş sesini seçin.
- ▶ **Tuş ses seviyesi:** İstenen tuş sesi seviyesini belirleyin.
- ▶ **Kayar kapak sesi:** Kapak sesini, istediğiniz gibi ayarlamayı sağlar.
- ▶ **Efekt ses seviyesi:** Efekt sesleri için istenen ses seviyesini belirleyin.

# Profiller

- ▶ **Aç/kapa ses sev.:** Telefonu kapatırken/açarken kullanılan istenen zil sesi yüksekliğini belirleyin.



## Yeni ad ver

Menü 1.x.3

Profile istediğiniz bir ismi verebilirsiniz.

### Not

- ▶ Yalnızca titreşim, Sessiz ve Kulaklık profillerine yeni ad verilemez.

1. Profilin ismini değiştirmek için profil listesinde istediğiniz profile ilerleyin, Tamam tuşuna ya da sol seçim tuşuna  basıp **Yeni ad ver**.
2. İsteddiğiniz ismi girin ve Tamam tuşuna ya da sol seçim tuşuna  [Tamam].

Şebekeniz, servis alanı içinde Arayan Hattı Kimliği (CLI) özelliğini destekliyorsa cevapsız, gelen ya da yapılan aramaların kayıtlarını görebilirsiniz.

Numara ve isimle (varsa) birlikte, aramanın gerçekleştiği saat ve tarih de gösterilir. Aynı zamanda çağrı sürelerini de görebilirsiniz.

## Cevapsız aramalar

Menü 2.1

Bu seçenek en son 10 cevapsız aramayı görmenizi sağlar. Aynı zamanda:

- ▶ Varsa numarayı görebilir, arayabilir ya da rehberde kaydedebilirsiniz.
- ▶ Numara için yeni bir isim girebilir ve her ikisini rehberde kaydedebilirsiniz.
- ▶ Bu numarayla mesaj gönderebilirsiniz.
- ▶ Aramayı listeden silebilirsiniz.

## Kabul edilen aramalar

Menü 2.2

Bu seçenek en son 10 gelen aramayı görmenizi sağlar. Aynı zamanda:

- ▶ Varsa numarayı görebilir, arayabilir ya da rehberde kaydedebilirsiniz.
- ▶ Numara için yeni bir isim girebilir ve her ikisini rehberde kaydedebilirsiniz.
- ▶ Bu numarayla mesaj gönderebilirsiniz.
- ▶ Aramayı listeden silebilirsiniz.

## Yapılan çağrılar

Menü 2.3

Bu seçenek en son 20 yapılan aramayı görmenizi sağlar.

Aynı zamanda:

- ▶ Varsa numarayı görebilir, arayabilir ya da rehberde kaydedebilirsiniz.
- ▶ Numara için yeni bir isim girebilir ve her ikisini rehberde kaydedebilirsiniz.
- ▶ Bu numarayla mesaj gönderebilirsiniz.
- ▶ Aramayı listeden silebilirsiniz.

## Son aramaları sil

Menü 2.4


Cevapsız çağrılar ve Gelen çağrılar listelerini silmenizi sağlar. Yapılan çağrılar ve Bütün çağrılar listelerini tek seferde silebilirsiniz.

## Arama Ücretleri

Menü 2.5

### Arama süresi (Menü 2.5.1)

Gelen ve yapılan aramaların süresini görmenizi sağlar. Aynı zamanda çağrı sürelerini sıfırlayabilirsiniz. Aşağıdaki sayaçları kullanabilirsiniz:

- ▶ **Son çağrı:** Son aramanın süresi.
- ▶ **Bütün çağrılar:** Sayacın son sıfırlanmasından bu yana yapılan ya da gelen tüm aramaların toplam süresi.
- ▶ **Kabul edilen aramalar:** Gelen aramaların süresi.
- ▶ **Yapılan çağrılar:** Yapılan aramaların süresi
- ▶ **Sıfırla:** Sol seçim tuşuna  [Evet] bastığınızda, tüm aramaların uzunluğunu silmenizi sağlar.

### Arama ücretleri (Menü 2.5.2)

Bu işlev son arama, tüm aramalar ve kalan ücret bilgilerini görüntülemenizi ve ücret bilgilerini sıfırlamanızı sağlar. Ücret bilgilerini sıfırlamak için, PIN2 kodu gereklidir.

### Ayarlar (Menü 2.5.3) (SIM kartına bağlıdır)

- ▶ **Tarife Ayarla:** Döviz türünü ve birim fiyatını ayarlayabilirsiniz. Uygulanan birim fiyatlarını edinmek için servis sağlayıcılarınıza başvurun. Bu menüdeki para birimi veya birimi seçebilmek için, PIN2 kodu gereklidir.
- ▶ **Kredi ayarla:** Bu şebeke servisi, kontör ücretlerini seçerek, arama ücretlerinizi sınırlandırabilmenizi sağlar. **Oku** seçeneğini işaretlerseniz, kalan kontör sayısı görüntülenir. **Değiştir** seçeneğini işaretlerseniz, ücret sınırını değiştirebilirsiniz.
- ▶ **Otomatik görüntü:** Bu şebeke hizmeti otomatik olarak son aramalarınızın ücretini görüntüleyebilmenizi sağlar. Açık seçeneği işaretlenirse, arama sona erdiğinde son aramanın ücretini görebilirsiniz.

## GPRS info

Menü 2.6

GPRS aracılığıyla şebeke üzerinden aktarılan veri miktarını denetleyebilirsiniz. Buna ek olarak, ne kadar süre çevrimiçi kaldığınızı da görüntüleyebilirsiniz.

### Arama süresi (Menü 2.6.1)

**Son çağrı, Bütün çağrılar ve Hepsini sıfırla** süresini denetleyebilirsiniz. Bunun yanı sıra arama sayaçlarını sıfırlayabilirsiniz.

### Veri miktarı (Menü 2.6.2)



**Gönderildi, Alındı veya Hepsi ile Hepsini sıfırla** seçeneklerini denetleyebilirsiniz.

# Ekstralar

## Çalar Saat

Menü 3.1

5 farklı çalar saat ayarlayabilirsiniz.

1. **Açık** seçeneğini işaretleyip, alarmin çalmasını istediğiniz saati girin.
2. Tekrar süresini seçin: **1 Kez, Pzt~Cum, Pzt~Cts, Her gün.**
3. İsteddiğiniz alarm uyarı sesini seçip  [Tamam] tuşuna basın.
4. Alarm adını düzenleyip  [Tamam] tuşuna basın.

## Bluetooth

Menü 3.2

Bluetooth, birbirlerine yakın uyumlu cep telefonu, çevre birimi ve bilgisayarların, herhangi bir kabloya gereksinim duyulmadan doğrudan iletişim kurmalarını sağlar. Bu telefon, dahili Bluetooth bağlantı özelliğine sahiptir. Bu özellik sayesinde uyumlu Bluetooth kulaklıklarına, bilgisayar uygulamalarına vs. bağlanabilir.

Başka bir Bluetooth cihazından data alacağı nız

zaman telefon sizden onay ister. Transferi onayladıktan sonra dosya telefonunuza kopyalanır.

Dosya tipine göre aşağıdaki klasörlere kaydedilir.

- **MP3:** MP3 klasör (Menü 6.5.2)
- **Video (.3GP):** video klasör (Menü 6.4)
- **Rehber(.VCF):** Rehber (Menü 4.1.1)
- **Diğer dosyalar:** Dosya saklama alanı (Menü 9.4)

### Not

- ▶ Uyum probleminden dolayı, bazı cihazlar bu fonksiyonu desteklemez.
- ▶ DUN için desteklenen Bluetooth yazılımları (Bluetooth yığınları):
  - WIDCOMM Bluetooth for Windows 1.4 and 3.0

### Cihazlarm (Menü 3.2.1)

Bluetooth telefonuyla uyumlu tüm cihazları görüntüleyebilirsiniz.

## Serbest konuşma cihazları (Menü 3.2.2)

Bluetooth telefonla uyumlu handsfree (eller serbest) cihazların bir listesini görebilirsiniz.



## Ayarlar (Menü 3.2.3)

Bluetooth ile uyumlu yeni bir cihaz kaydedebilirsiniz. Zaten bir cihaz eklediyseniz, parolayı girdikten sonra (genellikle 0000) buna bağlanabilirsiniz.

## Hesap mak.




Menü 3.3

Bu işlev +, -, x, ÷ gibi standart işlemleri kapsar : **Toplama, Çıkarma, Çarpma ve Bölme.**

1. Sayısal tuşları kullanarak sayıları girin.
2. Gezinme tuşunu kullanarak hesaplama işaretini seçin.
3. Ardından sayıları girin.
4. Sonucu görüntülemek için  [Sonuç] tuşuna basın.
5. Yukarıdaki işlemi tekrarlamak için  [Sıfırla] tuşuna basın veya sayıları girin.

6. Hesap makinesini kapatmak için  [Geri] düğmesine basın.




### Not

- Sayıları veya işaretleri silmek için  tuşunu kullanın.  tuşuna basarak eksi sayı girebilirsiniz. Buna ek olara  tuşuna basarak ondalık sayı girebilirsiniz.

## Birim dönüş.

Menü 3.4




Bu işlev herhangi bir ölçü birimini istediğiniz bir diğer ölçü birimine dönüştürür.

1.  [Birim] tuşuna basarak dört ölçü biriminden birini seçebilirsiniz.
2.  ve  tuşlarını kullanarak dönüştürmek istediğiniz ölçü birimini seçin.
3. İsteddiğiniz ölçü birimine dönüştürülmüş değeri görebilirsiniz.

## Yerel saatler

Menü 3.5

Dünyanın büyük şehirlerinin saatlerini görüntüleyebilirsiniz.

1.  ve  tuşuna basarak saat dilimine ait şehri seçin.
2.  [Ayarla] tuşuna basarak geçerli saati seçtiğiniz şehrin saati olarak ayarlayabilirsiniz.

## Modem


Menü 3.6

Internete modem üzerinden bağlanabilirsiniz  
Eğer PCsnyc, Contents banks, Internet Cube kullanacaksanız, menüden modemi aktif ettikten sonra USB kablodunu takmalısınız.

## Rehber

Menü 4.1

### Not

- Bekleme modunda, doğrudan erişmek için sağ seçim tuşuna  [Rehber] basın.


## Ara (Menü 4.1.1)

### (Telefon defterinden çağırma)

1. Sol seçim tuşu  [Select] or [OK].

### Not











- Aramak istediğiniz kişinin veya numaranın ilk harflerini girerek hızlı arama yapılabilir.

2. Giriş düzenlemek, silmek veya kopyalamak ya da sesli etiket eklemek isterseniz  [Seçenekler] tuşuna basın. Aşağıdaki menü görüntülenir.

- **Düzeltil:** Gezinme tuşunu kullanarak adı, numarayı, grubu, karakteri ve resmi düzenleyebilirsiniz.
- **SMS/MMS yaz:** Numarayı bulduktan sonra, seçili numaraya kısa/multimedya mesaj gönderebilirsiniz.
- **Bluetooth ile gönder:** Rehber verilerini, bluetooth üzerinden bu teknoloji ile uyumlu cihazlara gönderebilirsiniz.
- **Kopyalama:** Girişi SIM kartından telefon belleğine veya telefon belleğinden SIM karta kopyalayabilirsiniz.
- **Ana numara:** Cep, ev, ofis numaralarından, sık kullandığınız birini seçebilirsiniz. Bunu ayarladıktan sonra, arama yaptığınızdan önce ana numara görüntülenir.
- **Sil:** Girişi silebilirsiniz.

## Yeni ekle (Menü 4.1.2)

Bu işlevi kullanarak telefon defterine giriş ekleyebilirsiniz. Telefon belleği kapasitesi 1000 giriştir. SIM kart belleğinin kapasitesi hücresel servis sağlayıcıya bağlıdır. Karakter sayısı SIM kartına bağlı bir özelliktir.



1. Sol seçim tuşu  [Seç] ya da [Tamam] basarak Yeni ekle seçin.
2. Girişi saklamak istediğiniz belleği seçin: **SIM** veya **Telefon**. Telefon seçeneğini işaretlerseniz, Ana numara olarak kullanmak istediğiniz numarayı seçmeniz gerekir.
  - a. Bir ad girmek için  [Tamam] tuşuna basın.
  - b.  [Tamam] tuşuna basıp, numarayı girin.
  - c.  [Tamam] tuşuna basın.
  - d.  ve  tuşlarına basarak giriş için bir grup belirleyebilirsiniz:
  - e.  ,  ,  ve  tuşlarına basarak giriş için bir karakter belirleyebilirsiniz.



## Arama grupları (Menü 4.1.3)

Her grup en fazla 20 üyeden oluşabilir. Listeleyebileceğiniz 7 adet grup bulunur.



- ▶ **Üye listesi:** Seçmiş olduğunuz grup üyelerini görüntüler.
- ▶ **Grup zil sesi:** Grup üyelerinden gelen aramalar için bir zil sesi belirleyebilmenizi sağlar.
- ▶ **Grup simgesi:** Gruba bağlı olan simgeyi seçebilmenizi sağlar.
- ▶ **Üye ekle:** Gruba üyeler ekleyebilirsiniz. Her bir grup 20 üyeyi aşmamalıdır.
- ▶ **Üyeyi çıkart:** Üyeyi Grup üyesi listesinden çıkarabilirsiniz. Ancak ad ve telefon numarası telefon defterinde kalır.
- ▶ **Yeni ad ver:** Grup adını değiştirebilirsiniz.

## Hızlı arama (Menü 4.1.4)

 ile  arasındaki tuşlara İsim listesi girişi atayabilirsiniz. Doğrudan bu tuşa basarak arayabilirsiniz.

1. Bekleme modundayken  [Rehber] tuşuna basarak, önce telefon defterini açın.
2. **Hızlı arama** seçeneğine ilerleyip, ardından  [Seç] tuşuna basın.
3. Hızlı arama numarası eklemek isterseniz **<Boş>** seçeneğini işaretleyin. Bu işlemin ardından, telefon defterinde adı arayabilirsiniz.
4. Hızlı arama tuşuna atanan adı seçin ve adı düzenlemek için **Değiştir** veya **Sil** seçeneğini işaretleyin.

## Ayarlar (Menü 4.1.5)

1. Bekleme modunda  [Rehber] tuşuna basın.
2. **Ayarlar** seçeneğine ilerleyip  [Seç] tuşuna basın.

### ► Bellek belirle

**Bellek belirle** seçeneğinin üzerine gelip vurgulayın ve  [Seç] tuşuna basın.

- **Değişken** seçeneğini işaretlerseniz, giriş eklerken telefon size girişin nerede saklanacağını sorar.
- **SIM** veya **Telefon** seçeneğini işaretlerseniz, telefon girişi SIM veya telefona kaydeder.



### ► Seçen. göster

Seçenekleri göster seçeneğinin üzerine gelip vurgulayın ve  [Seç] tuşuna basın.

- **Yalnızca isim:** Telefon defteri listesini yalnızca adları görüntüleyecek şekilde ayarlayın.
- **Resimler ile:** Telefon defteri listesini karakter bilgisi ve fotoğraf görüntüleyecek şekilde ayarlayın.
- **İsim ve numara:** Rehber listesinin, isim ve numara gösterecek şekilde olmasını sağlar.





## Hepsini Kopyala (Menü 4.1.6)

SIM kart belleğinden Telefon belleğine veya bunun tam tersi girişleri kopyalayabilir veya taşıyabilirsiniz.

1. Bekleme modundayken  [Rehber] tuşuna basarak, önce Telefon defterini açın.
2. **Hepsini Kopyala** seçeneğinin üzerine gelin ve bu menüye girmek için  [Seç] tuşuna basın.
  - ▶ **SIM'den telefona:** Girişi SIM Karttan Telefon belleğine kopyalayabilirsiniz.
  - ▶ **Telefondan SIM'e:** Girişi Telefon belleğinden SIM Karta kopyalayabilirsiniz.
3. Aşağıdaki alt menüleri görebilirsiniz.
  - ▶ **Orijinali sakla:** Kopyalanırken, Orijinal Arama Numarası saklanır.
  - ▶ **Orijinali sil:** Kopyalanırken, Orijinal Arama Numarası silinir.

## Tümünü Sil (Menü 4.1.7)


SIM kart, Telefon belleği girişlerinin tümünü silebilirsiniz. Sesli etiketler dışında, bu işlevin kullanılabilmesi için Güvenlik kodu gerekir.





1. Bekleme modunda  [Rehber] tuşuna basın ve Tümünü sil seçeneğini işaretleyip  [Seç] tuşuna basın.
2. Ardından silinecek belleği seçin.
3. Güvenlik kodunu girip  [Tamam] veya  [Geri] tuşuna basın.

## Bilgi (Menü 4.1.8)

### ▶ Serv. arama no.




Şebeke operatörünüz tarafından sağlanan belirli servisler listesine erişmek için, bu işlevi kullanın (SIM kart tarafından destekleniyorsa).

1. Bekleme modundayken  [Rehber] tuşuna basarak, telefon defterini açın ve **Bilgi** seçeneğini işaretleyin.

2. **Serv. arama no.** seçeneğine ilerleyin ve menüye girmek için  [Seç] tuşuna basın.
3. Kullanılabilir servislerin adları görüntülenir.
4. Bir servis seçmek için  ve  tuşuna basın.  [Gönder] tuşuna basın.

#### ► Bellek durumu

Bu özellik telefon defterinizde ne kadar boş ve kullanılan alan olduğunu görebilmenizi sağlar.

1. Bekleme modundayken  [Rehber] tuşuna basarak, önce telefon defterini açın.  [Seç] tuşuna basarak **Information** seçeneğini işaretleyin.
2. **Bellek durumu** seçeneğine ilerleyip  [Tamam] tuşuna basın.

#### ► Kendi numaram (SIM karta bağlı)

SIM karta kendi numaranızı kaydedebilir ve kontrol edebilirsiniz.

## Takvim

Menü 4.2

Bu menüye girdiğinizde bir takvim görüntülenir. Ekranın üst kısmında tarih bölümleri vardır. Tarihi değiştirdiğinizde ise takvim bu değişikliğe uygun olarak güncelleştirilir. Kare imleç, belirli bir günü bulmak için kullanılır. Takvimde alt çizgi görürseniz, bu, ilgili günde kayıtlı bir plan veya not bulunduğu anlamına gelir. Bu işlev, plan veya notlarınızı hatırlamanıza yardımcı olur. Not için uyarı sesi ayarladıysanız, telefon uyarı verir. Gün, ay ve yılı değiştirmek için.

Tuş	Açıklama
 	Yıllık
 	Aylık
 	Haftalık
 	Günlük

Program modunda, belirtilen şekilde sol seçim tuşuna  [Seçenekler] basın;

# Ajanda

## Yeni ekle (Menü 4.2.1)

Seçilen gün için yeni program eklemenizi sağlar.

Konuyu girin ve sol seçim tuşuna  [Tamam] basın.

## Günlük programı göster (Menü 4.2.2)

Tarafınızdan yapılandırılan tüm içerik olan, ayrıntılı bir programa da başvurabilirsiniz.

## Sonuncuyu sil (Menü 4.2.3)

Size daha önce bildirilmiş olan geçmiş planları silebilirsiniz.

## Tümünü Sil (Menü 4.2.4)

Tüm notları silebilirsiniz.

## Tarihe git (Menü 4.2.5)




Tarihi girerek istediğiniz günü görebilirsiniz.

## Alarm tonunu belirle (Menü 4.2.6)


Alarmı ayarlarsanız, belirtilen alarm sesi çalar.

## Kısa not

Menü 4.3

1. Sol seçim tuşuna  [Seç] basarak Not ögesini seçin.
2. Boşsa, sol seçim tuşuna  [Ekle] basarak yeni ekleyin.
3. Notu girip  [Tamam] tuşuna basın.

### Not

- Metin girişi modunu değiştirmek istiyorsanız,  tuşuna sırasıyla basın.

Menü tuşuna (  ) basın ve gezinme tuşlarını kullanarak **Mesajlar**'ı seçin.




## Yeni mesaj

Menü 5.1

### SMS yaz (Menü 5.1.1)

Telefonunuz sesli posta bildirim mesajlarını ve Kısa Mesaj Servisi (SMS) mesajlarını alır.

Sesli posta ve SMS şebeke servisleridir. Daha fazla bilgi için lütfen şebeke operatörüyle görüşün.

 simgesi görüntüleniyorsa, bir sesli postanız vardır.  simgesi, yeni bir metin mesajı aldığınızı gösterir. Mesaj hafızası doluyorsa, bir mesaj gösterilir,  simgesi yanıp sönmeye başlar ve artık başka mesaj alamazsınız. Gerekli olmayan mesajları silmek için **Gelen kutusu** menüsünde Sil seçeneğini kullanın.

Mesaj hafızasında yer açıldığında daha önce gelmeyen SMS mesajları alınır (yeterli alan olması koşuluyla).

1. Mesajınızı girin. Nasıl mesaj gireceğinizle ilgili daha fazla bilgi için 24-27 arası sayfalara (Metin Girme) bakın.
2. Mesajı tamamladıktan sonra istediğiniz işlevi seçmek için sol seçim tuşuna [Seçenekler] basın.

Aşağıdaki seçenekleri kullanabilirsiniz.

► **Gönder:** Bir numara girin ya da rehberden veya son kullanılan numaralardan bir numara seçin. Mesajı, aynı anda 6 kişiye gönderebilirsiniz. Sol seçim tuşuna [Seçenekler] basın. Aşağıdaki seçenekler görüntülenir.

- ① Gönder (Yalnızca bir telefon numarası girildikten sonra görünür)
- ② Son numaralar
- ③ Ara

► **Taslaklara Kaydet:** Mesajı kaydederek daha sonra görebilmenizi sağlar.

► **Yazı tipi:** Yazı tipi Boyut ve Stil seçebilirsiniz.

► **Renk:** Ön plan ve arka plan Renk seçebilirsiniz.

# Mesajlar

- ▶ **Hizalama:** Mesajın içeriğini Sol, Orta veya Sağ hizalayabilirsiniz.
  - ▶ **T9 sözlüğüne ekle:** Kendi kelimenizi ekleyebilirsiniz. Bu menü yalnızca düzenleme modu Akıllı olarak belirlenmişse görüntülenir.
  - ▶ **T9 dilleri:** T9 giriş modu için istediğiniz dili seçin. 'T9 kapalı' seçerek de T9 giriş modunu kapatabilirsiniz.
  - ▶ **Çık:** Mesaj yazarken Çık tuşuna basarsanız, mesaj yazımını bitirebilir ve bir üst mesaj menüsüne dönebilirsiniz. Yazmış olduğunuz mesaj kaydedilmez.
3. Mesaj girerken sağ seçim tuşuna [Ekle] basarak, mesajla birlikte ekler de gönderebilirsiniz.
- ▶ **Resim:** 'Resimli mesaj' olarak da bilinen resim içeren metin mesajları gönderebilir ve alabilirsiniz. Telefonda bir çok resim bulunmaktadır. Bu resimlerin yerine diğer kaynaklardan aldığınız başka resimler koyabilirsiniz.

- ▶ **Ses:** Varsa, kısa mesaja varolan bir ses dosyasını ekleyebilirsiniz.
- ▶ **Metin şablonları:** Telefonda kayıtlı olan metin şablonlarını kullanabilirsiniz.
- ▶ **Rehber:** Mesaja telefon numaraları ekleyebilirsiniz.
- ▶ **Sembol:** Özel karakterler ekleyebilirsiniz.
- ▶ **İmza:** Kartvizitinizi ekleyebilirsiniz.

## MMS yaz (Menü 5.1.2)

Multimedya mesajlar, metin, görüntü ve/veya ses klipleri içerebilir. Bu özellik, yalnızca şebeke operatörü ya da servis sağlayıcı tarafından destekleniyorsa kullanılabilir. Yalnızca uyumlu multimedya mesaj ya da e-posta özelliklerine sahip cihazlar multimedya mesaj gönderebilir ve alabilir.

1. Metin mesajını girin. Sağ seçim tuşunu kullanarak, semboller, numaralar ve duygu sembolleri girebilir. Metin mesajını girdikten sonra sol seçim tuşuna [OK] basın.

2. Bir görüntü ve/veya ses ekleyin. Yukarı/aşağı gezinme tuşlarını kullanarak bir sonraki bölüme geçebilirsiniz.
3. Seçenek menüsünden sol seçim tuşu ile slayt ekleyebilirsiniz. Sol seçim tuşuna basın ve seçenek menüsünden "Slayt ekle" yi seçerek slayt ekleyebilirsiniz.
4. Sağ seçim tuşuna [Menü] basın. Aşağıdaki seçenekleri kullanabilirsiniz.
  - ▶ **Gönder:** Birden fazla numara ve e-posta adresini destekler.
  - ▶ **Önizle:** Göndermek istediğiniz multimedya mesajı görüntüler.
  - ▶ **Kaydet:** Multimedya mesajı taslak ya da şablon olarak kaydeder.
  - ▶ **Diya ekle:** Geçerli slayttan önceye ya da sonraya bir slayt ekler.
  - ▶ **Diyaya git:** Bir önceki ya da sonraki slayta ilerler.
  - ▶ **Diyayı sil:** Seçilen slaytı siler.

- ▶ **Diya biçimini belirle**
    - **Zamanlayıcıyı ayarla:** Slayt, metin, resim ve sesler için zamanlayıcıyı ayarlayabilirsiniz.
    - **Metin ve resim değiştir:** Mesajdaki resim ve metnin konumunu değiştirebilirsiniz.
  - ▶ **Ortamı kaldır:** Slayttaki resim veya sesleri kaldırabilirsiniz. Bu seçenek yalnızca ortam mevcutsa görüntülenir.
  - ▶ **T9 sözlüğüne ekle:** Kendi kelimenizi ekleyebilirsiniz. Bu menü yalnızca düzenleme modu Akıllı olarak belirlenmişse görüntülenir.
  - ▶ **T9 dilleri:** T9 giriş modu için istediğiniz dili seçin. Ayrıca 'T9 kapalı' seçerek de T9 giriş modunu kapatabilirsiniz.
  - ▶ **Çık:** Mesaj yazarken bunu seçerseniz, mesaj yazımından çıkabilir ve bir önceki ekrana geri dönebilirsiniz. Yazdığınız mesaj da kaydedilir.
5. Sağ seçim tuşuna [Ekle] basın. Sembol, fotoğraf, Fotoğraf çek, ses ve ses notu ekleyebilirsiniz.

# Mesajlar

## Gelen kutusu

Menü 5.2

Mesaj aldığınızda size bildirilir. Gelen kutusunda saklanacaklardır.

Gelen kutusunda, mesajları simgelerine bakarak tanımlayabilirsiniz. Ayrıntılar için simge yönergelerine bakın.

Simge	Açıklama
	MMS
	Kısa mesaj
	SIM mesajı
	Okunmuş multimedia mesaj
	Okunmuş metin mesajı
	Push mesajı
	Okunmuş push mesajı
	Bildirilen multimedia mesaj


Telefonda "SIM mesajı için yer yok" görüntüleniyorsa, Gelen kutusundan yalnızca

SIM mesajlarını silmeniz gerekir. Telefonda 'Mesaj için yer yok' görüntüleniyorsa, mesajlar, medya ve uygulamaları silerek her bir hafıza biriminde yer açabilirsiniz.

### SIM mesajı

SIM mesajı, özel olarak SIM kartta saklanan mesaj anlamına gelmektedir. Bu mesajı telefona taşıyabilirsiniz.

Bildirilen multimedia mesajlar için mesajın indirilmesini ve işlenmesini beklemeniz gerekmektedir.

Mesajı okumak için sol seçim tuşuna  basarak istediğiniz bir mesajı seçin.

- ▶ **Göster:** Alınan mesajları görebilirsiniz.
- ▶ **Sil:** Geçerli mesajı silebilirsiniz.
- ▶ **Yanıtla:** Gönderene yanıt verebilirsiniz.
- ▶ **İlet:** Seçilen mesajı diğer bir kişiye iletebilirsiniz.
- ▶ **Geri ara:** Mesajı gönderen kişiyi arayabilirsiniz.

- **Bilgileri göster:** Alınan mesajlarla ilgili, Gönderenin adresi, Konu (yalnızca Multimedya mesaj), Mesaj tarihi ve saati, Mesaj türü, Mesaj boyutu gibi bilgileri görüntüleyebilirsiniz.
- **Tümünü Sil:** Tüm mesajları silebilirsiniz.

### Özel MMS seçenekleri

- **Tekrarla:** Seçilen multimedya mesajın tekrar oluşturmanızı sağlar.
- **Al:** (yalnızca multimedya mesaj bildirim için). Multimedya mesajlarının, metin mesajlarının aksine sunucudan otomatik olarak ya da el ile indirilmesi gerekmektedir. Şebeke önce multimedya mesaj bildirimini gönderir: Otomatik İndirme seçeneği, kapalıysa ya da bir hata meydana geldiyse, alma işleminin [Al] seçilerek onaylanması gerekmektedir. Otomatik İndirme seçeneği açıksa, bildirim alınmasından sonra mesaj otomatik olarak indirilir.






### Özel indirme mesajları seçenekleri

- **Bilgi:** İndirilen mesajların içeriğini gösterir.
- **Yükle:** İndirme mesajında bulunan URL'ye bir WAP bağlantısı başlatır. İndirme mesajlarının kullanılabilmesi için telefonun WAP hizmetleri için yapılandırılması gerekmektedir.

## Giden kutusu

Menü 5.3

Burada gönderilmiş ve gönderilmemiş mesajları görebilirsiniz. Gönderilen mesajın iletim durumunu görebilirsiniz. Mesajlara göz atma sistemi, gelen kutusu mesajlarıyla aynıdır.

Simge	Açıklama
	MMS Gönderildi
	MMS Gönderilmedi
	MMS iletimi onaylandı
	SMS gönderildi
	SMS gönderilmedi
	SMS iletimi onaylandı

# Mesajlar

## Mesajı zaten gönderdiyseniz:

- ▶ **Göster:** Gönderilen mesajları görebilirsiniz.
- ▶ **Sil:** Geçerli mesajı silebilirsiniz.
- ▶ **İlet:** Geçerli mesajı diğer alıcılara iletebilirsiniz.
- ▶ **Bilgileri göster:** Giden kutusu mesajlarıyla ilgili, Alıcının adresi, Konu (yalnızca Multimedya mesaj), Mesaj tarihi ve saati, Mesaj türü, Mesaj boyutu gibi bilgileri görüntüleyebilirsiniz.
- ▶ **Tümünü sil:** Gönderilmemiş tüm mesajları silebilirsiniz.

## Mesajı göndermediyseniz:

- ▶ **Göster:** Göndermediğiniz mesajları görebilirsiniz.
- ▶ **Sil:** Geçerli mesajı silebilirsiniz.
- ▶ **Gönder:** Mesajı gönderebilirsiniz.
- ▶ **Bilgileri göster:** Giden kutusuyla ilgili bilgileri görebilirsiniz.
- ▶ **Tümünü gönder:** Gönderilmemiş tüm mesajları gönderebilirsiniz.

- ▶ **Tümünü sil:** Gönderilmemiş tüm mesajları silebilirsiniz.

## Taslaklar

Menü 5.4

Bu menüyü kullanarak, en sok kullandığınız beş multimedya mesajı taslak olarak ayarlayabilirsiniz. Bu menü önceden ayarlanmış multimedya mesaj listesini göstermektedir.

Aşağıdaki seçenekleri kullanabilirsiniz.


- ▶ **Göster:** Multimedya mesajları görebilirsiniz.
- ▶ **Düzeltil:** Seçtiğiniz mesajı değiştirmenizi sağlar.
- ▶ **Sil:** Seçtiğiniz mesajı siler.
- ▶ **Bilgileri göster:** Mesajla ilgili bilgileri gösterir.
- ▶ **Tümünü sil:** Klasördeki tüm mesajları siler.

## Sesli mesaj dinle

Menü 5.5

Bu menü, sesli mesaj kutunuza (şebekeniz tarafından sağlanıyorsa) hızlı biçimde ulaşmanızı sağlar.

Bu özelliği kullanmadan önce şebeke operatörünüzden aldığınız sesli mesaj sunucusu numarasını girmelisiniz.

 Yeni mesaj alındığında ekranda bir sembol gösterilecektir. Telefonu doğru biçimde yapılandırmak için servisle ilgili diğer bilgileri şebeke operatöründen alabilirsiniz.

## Bilgi mesajı

Menü 5.6

(Şebekeye ve aboneliğe bağlıdır.)

Bilgi servisi mesajları, şebeke tarafından mobil telefon kullanıcılarına gönderilen metin mesajlarıdır. Hava raporları, trafik haberleri, taksiler, eczaneler ve hisse senedi fiyatları gibi genel bilgiler sağlarlar. Bilgi türleri için numaralar belirlenmiştir. Bu numaraları şebeke operatöründen alabilirsiniz. Bilgi servisi mesajı aldığınızda, yeni mesaj geldiğini belirten bir mesaj açılır ya da bilgi servisi mesajı doğrudan görüntülenir. Bekleme modunda bilgi servisi mesajlarını görüntülerken aşağıdaki seçenekler kullanılabilir.

## Oku (Menü 5.6.1)

Bilgi servisi mesajı alınca, mesajı görüntülemek için **Oku** seçeneği işaretleyin; bunun ardından mesaj ekranda görüntülenecektir.

## Konular (Menü 5.6.2)

Yeni konular oluşturmak için sol seçim tuşuna [Seçenek] basın ve **Yeni ekle** öğesini seçin. Daha önce girdiğiniz konular varsa bunları kapatabilir, düzenleyebilir ya da sol seçim tuşunu [Seçenekler] kullanarak silebilirsiniz.

## Kalıplar

Menü 5.7

Listede önceden tanımlanmış mesajlar bulunmaktadır. Şablon mesajlarını görebilir, düzenleyebilir ve yeni mesajlar oluşturabilirsiniz. İki tür şablon vardır: Metin ve Multimedya mesaj şablonları.

## Metin şablonları (Menü 5.7.1)

- Lütfen beni ara.
- Geciktim. Saat ... geliyorum.
- Şu an neredesin?
- Yoldayım.
- Çok acil. Lütfen ara.
- Seni seviyorum.

Aşağıdaki seçenekleri kullanabilirsiniz.

- ▶ **Göster:** Seçilen mesajı gösterir.
- ▶ **Sil:** Şablonu siler.
- ▶ **Yeni ekle:** Yeni bir şablon oluşturmak için bunu kullanın.
- ▶ **Böyle gönder:** SMS ile veya MMS ile gönder.
- ▶ **Düzeltil:** Yeni bir mesaj yazmak ya da metin şablonları listesindeki seçilmiş şablon mesajlarını düzenlemek için bunu kullanabilirsiniz.
- ▶ **Tümünü Sil:** Tüm şablonları siler.

## MMS şablonları (Menü 5.7.2)

Aşağıdaki seçenekleri kullanabilirsiniz.

- ▶ **Önizle:** Taslak multimedya mesajını gösterir.
- ▶ **Kaydet:** Multimedya mesajları taslak formunda ya da şablon olarak kaydeder.
- ▶ **Konuyu düzenle:** Konuyu düzenleyebilirsiniz.
- ▶ **Diya ekle:** Geçerli slayttan önceye ya da sonraya bir slayt ekler.
- ▶ **Önizle:** Taslak multimedya mesajını gösterir.
- ▶ **Diyayı sil:** Seçilen slaytı siler.
- ▶ **Diya biçimini belirle:** Slayt, metin süresini ayarlar ya da mesaj içeriğini sağa, sola, yukarıya ya da aşağıya hizalar.
- ▶ **Medyayı kaldır:** Slayttaki resim veya sesleri kaldırabilirsiniz. Bu seçenek yalnızca ortam mevcutsa görüntülenir.
- ▶ **T9 sözlüğüne ekle:** Kendi sözcüğünüzü ekleyebilirsiniz. Bu menü yalnızca düzenleme modu Tahmini olduğunda gösterilir.
- ▶ **T9 dilleri:** T9 giriş modunu seçer.

- **Çık:** Menüden çıkar.

## İmza (Menü 5.7.3)

Bu seçenek kendi kartvizitinizi göndermenizi sağlar. Adınızı, mobil telefon numaranızı, iş numaranızı, Faks numaranızı ve E-posta adresini girin

## Ayarlar

Menü 5.8

### SMS (Menü 5.8.1)

- **Mesaj türleri:**

**Metin, Ses, Faks, Protokol, X.400, E-posta, ERMES**

Mesaj türü genellikle **Metin** olarak ayarlanır. Metninizi alternatif biçimlere dönüştürebilirsiniz. Bu işlevin kullanılabilirliği hakkında servis sağlayıcınıza başvurun.

- **Geçerlilik süresi:** Şebeke servisi metin mesajlarınızın mesaj merkezinde ne kadar süre saklanacağını belirleyebilmenizi sağlar.

- **İletim raporu:** Evet seçeneğini işaretlerseniz, mesajınızın başarıyla gönderilip, gönderilmediğini denetleyebilirsiniz.
- **Aynı servis merkeziyle yanıtla:** Bir mesaj gönderildiğinde, bu alıcıya yanıtlama ve yanıtlama masrafının size ait telefon faturasında ücretlendirme olanağı sağlar.
- **SMS Merkezi:** Metin mesajı göndermek istediğinizde, bu menü aracılığıyla SMS merkezinin adresini alabilirsiniz.

### MMS (Menü 5.8.2)

- **Öncelik:** Seçtiğiniz mesajın önceliğini ayarlayabilirsiniz.
- **Geçerlilik süresi:** Şebeke servisi metin mesajlarınızın mesaj merkezinde ne kadar süre saklanacağını belirleyebilmenizi sağlar.
- **İletim raporu:** Bu menüde Evet seçeneğini işaretlerseniz, mesajınızın başarıyla gönderilip, gönderilmediğini denetleyebilirsiniz.

# Mesajlar

- ▶ **Oto. indir:** Açık seçeneğini işaretlerseniz, multimedya mesajlarını otomatik olarak alırsınız. Kapalı seçeneğini işaretlerseniz, yalnızca gelen kutusundaki uyarı mesajını alabilir ve ardından bu uyarıyı inceleyebilirsiniz. Yalnızca Ana Şebeke seçerseniz, ana şebekeye bağlı multimedya mesajları alabilirsiniz.
- ▶ **Şebeke uyarı:** Multimedya mesaj sunucusu seçeneğini işaretlerseniz, multimedya mesaj sunucusunun URL'sini ayarlayabilirsiniz.
- ▶ **İzinli tip**
  - Kişisel:** Kişisel mesajlar.
  - Reklam:** Ticari mesaj.
  - Bilgi:** Gerekli bilgiler.

## Ses postası merkezi (Menü 5.8.3)

Bu özellik şebeke servisi sağlayıcısı tarafından destekleniyorsa, sesli mesaj alabilirsiniz. Yeni bir sesli mesaj alındığında, ekranda sembol görüntülenecektir. Telefonunuzu uygun şekilde yapılandırmak için lütfen şebeke servisi

sağlayıcınızla servisin ayrıntıları hakkında bağlantı kurun.

- ▶ **Ana sayfa:** Giriş sayfası seçeneğini işaretleyerek sesli mesajlarınızı dinleyebilirsiniz.
- ▶ **Dolaşımında:** Yurtdışındayken dahi, dolaşım servisi tarafından destekleniyorsa sesli mesajlarınızı dinleyebilirsiniz.

## Bilgi mesajı (Menü 5.8.4)

### ▶ AI

**Evet:** Bu menüyü seçerseniz, telefonunuz Bilgi servisi mesajlarını alacaktır.

**Hayır:** Bu menüyü seçerseniz, telefonunuz bundan sonra Bilgi servisi mesajlarını almayacaktır.

### ▶ Uyarı

**Evet:** Bilgi servisi mesaj numarası aldığınızda, telefonunuz uyarı sesi verecektir.

**Hayır:** Bilgi servis mesajı alsanız dahi telefonunuz uyarı sesi vermeyecektir.

### ► Diller

İstediğiniz dili [Aç/Kapa] tuşuna basarak seçebilirsiniz. Bu işlemin ardından, bilgi servis mesajı seçtiğiniz dilde görüntülenecektir.

## Push mesajları (Menü 5.8.5)

Mesajın alınıp alınmayacağını belirleyen seçeneği ayarlayabilirsiniz.

### ► AI

**Açık:** Bütün push mesajlarını alırsınız.

**Kapalı:** Push mesajlarını almazsınız.

### ► Otomatik Yükle

**Açık:** Push mesajı otomatik olarak yüklenir.

**Kapalı:** Push mesajı kullanıcı tarafından yüklenir.

# Multimedya

## Resim çek

Menü 6.1

Bu uygulama, fotoğraf çekmenizi sağlar. İstedığınız boyutta bir resim çekebilir ve bunu rehber fotoğrafı, ana ekran ya da diğer genel amaçlar için kullanabilirsiniz. Çekilen görüntüler, Multimedya mesaj ya da E-posta ile gönderilebilir.

Aşağıdaki açılır menü öğelerini görüntülemek için sol seçim tuşuna [Seçenekler] basın.

- ▶ **Parlaklık:** Parlaklığı tanımlar.
- ▶ **Boyut:** Görüntünün boyutunu tanımlar.
- ▶ **Zamanlayıcı:** Gecikme süresini tanımlar.
- ▶ **Kalite:** Görüntünün kalitesini tanımlar.
- ▶ **Beyazlık ayarı:** Ayarları, ortama göre değiştirmenizi sağlar.
- ▶ **Albüm:** Çekilen fotoğrafları gösterir.
- ▶ **Çık:** Kamera'dan çıkmak için.
- ▶ **Mod:** Çoklu fotoğraf çekme işleminin etkin olup olmayacağını tanımlar.

- ▶ **Efekt:** Resimde uygulanacak özek efekti tanımlar.
- ▶ **Flaş:** Flaş çalışmasını tanımlar.
- ▶ **Efekt:** Yakınlaştırma oranını tanımlar.

### Not

- ▶ Çoklu çekim sadece 128 x 160 piksel çözün ürlükte yapılabilir.

## Video kamera

Menü 6.2

Bu uygulama, video klipler kaydetmenizi sağlar. Bu işlevi kullanarak, kayıtlı video dosyalarını oynatabilir ve izleyebilirsiniz. Kaydedilen video klipler, Multimedya mesaj ya da E-posta olarak gönderilebilir.

Aşağıdaki açılır menü öğelerini görüntülemek için sol seçim tuşuna [Seçenekler] basın.

- ▶ **Parlaklık:** Parlaklığı tanımlar.
- ▶ **Boyut:** Görüntünün boyutunu tanımlar.
- ▶ **Zamanlayıcı:** Gecikme süresini tanımlar.
- ▶ **Kalite:** Video klibin kalitesini tanımlar.

- ▶ **Beyazlık ayarı:** Ayarları, ortama göre değiştirmenizi sağlar.
- ▶ **Kaydedme zamanı:** Kayıt süresini tanımlar.
- ▶ **Albüm:** Kaydedilen video klipleri gösterir.
- ▶ **Çık:** Video kamera'dan çıkmak için.
- ▶ **Efekt:** Video klipte uygulanacak özel efekti tanımlar.
- ▶ **Flaş:** Flaş çalışmasını tanımlar.
- ▶ **Zoom:** Yakınlaştırma oranını tanımlar.

## Fotoğraflarım

Menü 6.3

Fotoğraf görüntüleyebilir ve gönderebilirsiniz. Buna ek olarak, pencereyi arka plan olarak ayarlayabilirsiniz.

### Seçenekler

- ▶ **Çoklu görünüm:** Bir ekranda en fazla 9 resim karesi görüntüleyebilirsiniz.
- ▶ **Bluetooth ile gönder:** Bluetooth mesajları yoluyla fotoğraf gönderebilirsiniz.

- ▶ **Multimedya mesajlar gönder:** MMS mesajları yoluyla fotoğraf gönderebilirsiniz.
- ▶ **Duvar kağıdı olarak ayarla:** Fotoğrafı duvar kağıdı olarak ayarlayabilirsiniz.
- ▶ **Diya şovu:** Bu menü, otomatik olarak slayt gösterisi izlemenizi sağlar.
- ▶ **Sil:** Fotoğrafı silebilirsiniz.
- ▶ **Konuları düzelt:** Fotoğrafın başlığını düzenleyebilirsiniz.
- ▶ **Bilgi:** Resmin Başlığını, Boyutunu ve çekim tarihini- saatini görebilirsiniz.

## Videom

Menü 6.4

Videoları oynatabilir ve gönderebilirsiniz.

### Seçenekler

- ▶ **Oynat:** Videoyu oynatır.
- ▶ **Bluetooth ile gönder:** Videoyu Bluetooth ile gönderebilirsiniz.
- ▶ **Yeni ad ver:** Videonun başlığını düzenleyebilirsiniz.
- ▶ **Sil:** Videoyu silebilirsiniz.

- ▶ **Tümünü sil:** Kaydedilmi. tüm vidoları silebilirsiniz.
- ▶ **Bilgi:** Video ile ilgili bilgileri görebilirsiniz.

## MP3

Menü 6.5

S5200'de, tümleşik bir MP3 çalar bulunmaktadır. Uygun bir kulaklık ya da dahili hoparlör ile telefonunuzun belleğindeki MP3 müzik dosyalarını dinleyebilirsiniz.

### Not

- ▶ Hoparlörün küçük olması nedeniyle, özellikle maksimum ses seviyesinde ve bas seslerde seste bozulma meydana gelebilir. Bu nedenle, müziği yüksek kalitede dinlemek için stereo kulaklıklar kullanmanızı öneririz.

Müzik çalar aşağıdakileri destekler:

- ▶ MPEG-1 Katman III, MPEG-2 Katman III, MPEG- 2.5 Katman III Frekansı 8KHz den 48KHz. Bit rate 320Kbps, stereo.
- ▶ **AAC:** ADIF, ADTS biçimleri (Frekansı 8KHz den 48KHz)

- ▶ **AAC+:** V1 : (Bit rate 16~128Kbps)  
V2 : (Bit rate 16~48Kbps)  
(Frekansı 8KHz den 48KHz)
- ▶ **MP4 , M4A:** Frekansı 8KHz den 48KHz, Bit rate 320 Kbps, stereo.
- ▶ **WMA:** Frekans 8KHz den 48KHz, Bit rate 320Kbps, stereo.

### Not


- ▶ S5200, MP3 ve AAC dosyasının değişken hızını desteklemez. Bu nedenle, dosya biçimini VBR MP3'ten AAC'ye değiştirebilirsiniz.

Satış paketi CD-ROM'unda verilen LG Contents Bank'i kullanarak uyumlu bir PC'deki MP3 dosyalarını telefonunuzdaki belleğe atabilirsiniz. USB kablo kullanarak telefonu PC'ye bağladığınızda (aynı pakette verilir), bir sürücü yüklemeniz gerekir. Daha fazla bilgi için CD-ROM kılavuzuna bakın.

## Not

- ▶ MP3 dosyalarını MyMediaMusic klasörüne kopyalamalısınız. Başka bir yere kopyalarsanız MP3 dosyalarını göremezsiniz.
- ▶ Bilgisayarda Windows 98 SE, Windows ME, Windows 2000, Windows XP işletim sistemi bulunmalıdır.

## MP3-Oynatıcısı (Menü 6.5.1)

1. MP3 menüsüne basın ve MP3 çaları seçin.
  2. Aşağıdaki menülere girmek için sol seçim tuşu  [Seçenekler]'e basın.
- ▶ **Çalma listesini göster:** Müzik dinlerken çalma listesine bakabilirsiniz.
  - ▶ **Tekrarla:** Menüden bu özelliği seçtiğinizde, seçilen kısım tekrar edilir.
  - ▶ **Zil tonu olarak ayarla:** Bu menü, MP3 dosyasını zil sesi olarak atamanızı sağlar. Profilde bir zil sesi olarak da ayarlayabilirsiniz.

## ▶ Ayarlar

- **Equalizer:** Bu menü, müzik dinlemekle ilgili çeşitli ortamları ayarlamanıza yardımcı olur. Bu telefon dört önayar menüsü destekler. Bu menüye girdiğinizde ekolayzerin geçerli değerini görebilirsiniz.
- **Çalma modu:** Bu menü, çalma modunu ayarlamanızı sağlar.
- **Karıştırma ayarla:** Bütün MP3 şarkılarını karışık olarak dinleyebilirsiniz.
- **Görsel efekt:** Görsel efektleri menüden seçebilirsiniz. Bu menü MP3 çalarken ana LCD ve ön LCD arkaplanını değiştirmenizi sağlar.

## Çalma listesi (Menü 6.5.2)

Bu menü, tüm çalma listesini görmenizi sağlar. Gezinme tuşuna basarak parçayı hareket ettirebilirsiniz. Ayrıca seçenek menüsünü seçerseniz, dosyayı silebilir ya da bilgilerini görebilirsiniz.

## Not

► Müzik dosyalarının telif hakkı uluslararası anlaşmalar ve ulusal telif hakkı yasalarıyla korumada olabilir. Bu nedenle, müzikleri çoğaltmak ya da kopyalamak için izin almanız gerekli olabilir. Bazı ülkelerde, ulusal yasalar, telif hakkına sahip malzemelerin bireysel olarak kopyalanmasını yasaklamaktadır. Dosyayı indirmeden ya da kopyalamadan önce, lütfen ilgili ülkenin bu tür malzemeleri kullanımıyla ilgili yasalarını kontrol edin.

## Ayarlar (Menü 6.5.3)

Bu menü aşağıdaki maddeleri ayarlamanızı sağlar. Ekolayzer, Çalma modu, Karıştırma modu ve Görsel efekt.



## Ses kaydedici

Menü 6.6

Sesli not özelliği, her biri 20 saniyelik 10 sesli mesaj kaydetmenize olanak sağlamaktadır.

## Kaydet (Menü 6.6.1)

Ses kaydedici menüsünde ses notlarını kaydedebilirsiniz.

1. Kayıt başladığında, ekranda 'Kaydediyor' mesajı ve kalan kayıt süresi gösterilir.
2. Kaydı bitirmek istiyorsanız, sol seçim tuşuna  [Kaydet] basın.
3. Ses notu başlığını yazın ve sol seçim tuşuna  [Tamam] basın.

## Listeyi görüntüle (Menü 6.6.2)

Telefon ses not listesini gösterir. Kayıtlı ses notunu çalabilir (Çal) ya da silebilirsiniz (Sil).

## Ayarlar

Menü 6.7

## Kamera (Menü 6.7.1)

- **Otomatik kaydet:** Açık'a ayarlarsanız, görüntüler, kaydetmek için menü çubuğu görüntülenmeden otomatik olarak kaydedilir.



- ▶ **Tüm fotoğrafları sil:** Bu menü, onayınızı istedikten sonra tüm fotoğrafları silmenizi sağlar.

## **Video kamera** (Menü 6.7.2)

- ▶ **Tüm videoları sil:** Bu menü, bütün videoları silmenizi sağlar.

# Ayarlar

Kişisel rahatlığınız ve tercihlerinize bağlı olarak, aşağıdaki menüleri ayarlayabilirsiniz.

1. Bekleme modunda  [Menü] tuşuna basın.
2. **Ayarlar** menüsüne girmek üzere doğrudan erişim için  tuşuna basın.

## Tarih & Saat

Menü 7.1

Tarih ve saatle ilgili işlevleri ayarlayabilirsiniz.

### Tarih ayarla (Menü 7.1.1)

- ▶ **Tarihi ayarla:** Günün tarihini girebilirsiniz.
- ▶ **Tarih biçimini b:** Tarih biçimini GG/AA/YYYY, AA/GG/YYYY veya YYYY/AA/GG olarak ayarlayabilirsiniz. (G: Gün / A: Ay / Y: Yıl)

### Zaman ayarla (Menü 7.1.2)

- ▶ **Saati ayarla:** Geçerli saati girebilirsiniz.
- ▶ **Saat biçimini be:** Saat biçimini 24 ve 12 saatlik biçimlerden birini seçerek ayarlayabilirsiniz.

## Telefon ayarı



Menü 7.2

Telefonla ilgili işlevleri ayarlayabilirsiniz.

### Ekran Ayarları (Menü 7.2.1)

- ▶ **Duvar kağıdı:** Bekleme modunda görüntülenecek arka plan resimlerini seçebilirsiniz.

#### Standart

 veya  tuşuna basarak duvar kağıdı animasyonu veya resmi seçebilirsiniz.

#### Klasörüm

Duvar kağıdı olarak bir resim veya animasyon seçebilirsiniz.

- ▶ **Selam mesajı:** Açık seçeneğini işaretlerseniz, bekleme modunda görüntülenen metni düzenleyebilirsiniz.
- ▶ **Arka ışığı:** Dahili ekrandaki ışığın yanma süresini ayarlayabilirsiniz.
- ▶ **Şebeke adı:** AÇIK seçerseniz, Şebeke adı (servis sağlayıcı adı) İç LCD'de görüntülenir.

## Renk düzeni (Menü 7.2.2)

Önceden ayarlanmış temalardan birini seçmenizi sağlar.

## Dil (Menü 7.2.3)

Telefonunuzun ekranında görüntülenen metinlerin dilini değiştirebilirsiniz. Bu değişiklik, Dil Giriş modunu da etkiler.

## Çağrı Ayarı

Menü 7.3

Ayarlar menüsündeyken  [Seç] tuşuna basarak, aramayla ilgili menüyü ayarlayabilirsiniz.

## Çağrı Yönlendirme (Menü 7.3.1)

Arama yönlendirme servisi, gelen sesli aramaları, faks aramalarını ve veri aramalarını başka bir numaraya yönlendirebilmenizi sağlar. Ayrıntılı bilgi için, servis sağlayıcınıza başvurun.

- ▶ **Tüm sesli ara.:** Sesli aramaları koşulsuz olarak yönlendirir.
- ▶ **Meşgulse:** Telefon kullanımdaysa sesli aramaları yönlendirir.

- ▶ **Cevap yoksa:** Yanıtlamadığınız sesli aramaları yönlendirir.
- ▶ **Ulaşılami.:** Telefon kapalı veya kapsama alanı dışındaysa sesli aramaları yönlendirir.
- ▶ **Bütün veri çağrıları:** Bilgisayar bağlantısına sahip bir numaraya koşulsuz olarak yönlendirir.
- ▶ **Bütün faks çağrıları:** Faks bağlantısına sahip bir numaraya koşulsuz olarak yönlendirir.
- ▶ **Hepsini iptal et:** Tüm arama yönlendirme hizmetlerini iptal eder.

### Alt menüler

Arama yönlendirme menülerinde aşağıdaki alt menüler bulunur.

- **Etkinleştir**

İlgili servisi etkinleştirir.

- **Ses postası merkezi**

Mesaj merkezine aktarır. Bu işlem Tüm veri aramaları ve Tüm faks aramaları menülerinde görüntülenmez.

## Diğer numaraya

Yönlendirmenin yapılacağı numarayı girer.

## Favori numaraya

En son yönlendirilen 5 numarayı görüntüleyebilirsiniz.

### • İptal Et

İlgili servisi devre dışı bırakır.

### • Durumu göster


İlgili servisin durumunu görüntüler.

## Cevap modu (Menü 7.3.2)


### ► Kayar kapak açılışı

Bu menüyü seçerseniz, gelen aramayı kapağı açarak yanıtlayabilirsiniz.

### ► Herhangi bir tuş

Bu menüyü seçerseniz, gelen aramayı  [Bitir] tuşu dışındaki tüm tuşlarla yanıtlayabilirsiniz.

### ► Sadece gönder

Bu menüyü seçerseniz, gelen aramayı yalnızca  [Gönder] tuşuyla yanıtlayabilirsiniz.

## Numaramı gönder (Menü 7.3.3)

(Şebekeye ve aboneliğe bağlıdır)

### ► Şebekeye göre ayarlandı

Bu seçeneği işaretlerseniz, telefon numaranızı hat 1 veya hat 2 gibi iki hat servisine bağlı olarak gönderebilirsiniz.

### ► Açık

Telefon numaranızı üçüncü şahıslara gönderebilirsiniz. Numaranız alıcının telefonunda görüntülenir.

### ► Kapalı

Telefon numaranız görüntülenmez.

## Çağrı Bekletme (Menü 7.3.4) (şebekeye bağlıdır)

### ► Etkinleştir

Etkinleştir seçeneğini işaretlerseniz, bekleyen (gelen) aramayı kabul edebilirsiniz.

### ► İptal Et

İptal seçeneğini işaretlerseniz, bekleyen (gelen) aramayı kabul edip onaylayamazsınız.

### ► Durumu göster

Bekleyen arama durumunu görüntüler.

## Çağrı Hatır. (Menü 7.3.5)

Açık seçeneğini işaretlerseniz, görüşme süresince her dakikada bir verilen uyarı sesiyle arama süresini denetleyebilirsiniz.

## Oto. tekrar ara (Menü 7.3.6)

### ► Açık

Bu işlem etkinleştirildiğinde, aramanın başarısız olması durumunda telefon otomatik olarak yeniden aramayı dener.

### ► Kapalı


İlk aramanın başarısız olması durumunda telefonunuz yeniden aramayı denemez.

## Güvenlik

Menü 7.4

### PIN kodu isteği (Menü 7.4.1)

Bu menüde, telefon, açıldığında SIM kartınızın PIN kodunu soracak şekilde ayarlayabilirsiniz. Bu işlem etkinleştirilirse, PIN kodunu girmeniz istenir.

1. Güvenlik ayarları menüsünde PIN kodu isteği seçeneğini işaretleyip, ardından  [Seç] düğmesine basın.
2. **Etkinleştir/Devre dışı bira** olarak ayarlayın.
3. Ayarı değiştirmek isterseniz, telefonu açtığınızda PIN kodunu girmeniz gerekir.
4. PIN kodunu üç defadan fazla hatalı girerseniz, telefon kilitlenir. PIN bloke edilirse, PUK kodunu girmeniz gerekir.

5. PUK kodunuzu en fazla 10 defa girebilirsiniz. PUK kodunu 10 defadan fazla hatalı girerseniz, telefonunuzun kilidini açamazsınız. Servis sağlayıcınıza başvurmanız gerekir.

## Telefon kilidi (Menü 7.4.2)

Telefonun yetkisiz kişilerce kullanılmasını önlemek için, güvenlik kodunu kullanabilirsiniz. Telefon kilidini “**Açık**” olarak ayarlarsanız, telefonu her açışınızda telefon güvenlik kodunu girmeniz istenir. Telefon kilidini “**Otomatik**” olarak ayarlarsanız, her SIM kartınızı değiştirdiğinizde telefon sizden güvenlik kodunu girmenizi ister.

## Oto. tuş kilidi zaman aşımı (Menü 7.4.3)

Bu menü otomatik tuş kilidi zaman aşımını ayarlamanızı sağlar.

## Çağrı Engelleme (Menü 7.4.4)

Arama engelleme servisi, telefonunuzun belirli kategorilerdeki aramaları yapmasını veya

almasını engeller. Bu işlev, arama engelleme şifresini sorar. Aşağıdaki alt menüleri görebilirsiniz.

### ► Tüm yapılan

Tüm giden aramaları engelleme servisi.

### ► Uluslararası

Tüm giden uluslararası aramaları engelleme servisi.

### ► Dolaşımında uluslararası

Kendi ülkemdeki şebeke hariç tüm giden uluslararası aramaları engelleme servisi.

### ► Tüm ulaşan

Tüm gelen aramaları engelleme servisi.

### ► Dolaşımında gelen arama

Yurtdışındayken gelen tüm aramaları engelleme servisi.

### ► Hepsini iptal et

Tüm arama engelleme servislerini iptal edebilirsiniz.

**► Şifre deęiş.**

Arama Engelleme Servisi şifresini deęiştirebilirsiniz.

**Alt menüler:****• Etkinleştire**

Şebekeden arama sınırlandırma servisinin etkinleştirilmesi isteęinde bulunulmasını sağlar.

**• İptal Et**

Seçili arama sınırlandırma servisini devre dışı bırakır.

**• Durumu göster**

Aramaların engellenip engellenmedięini denetler.

**Sabit arama numarası** (Menü 7.4.5)  
**(SIM karta baęlıdır)**

Giden aramaları seçili telefon numaraları ile sınırlandırabilirsiniz. Numaralar PIN2 kodunuz tarafından korunur.

**► Etkinleştire**

Giden aramaları seçili telefon numaraları ile sınırlandırabilirsiniz.

**► İptal Et**

Sabit arama işlevini devre dışı bırakabilirsiniz.


**► Numara listesi**

Sabit numara olarak kaydedilen numaraların listesini görüntüleyebilirsiniz.

**Kodları deęiştire** (Menü 7.4.6)

PIN, telefonun yetkisiz kişilerce kullanılmasını önlemek için kullanılan Personal Identification Number'ın (Kişisel Kimlik Numarası) kısaltmasıdır.

Aşağıdaki erişim kodlarını deęiştirebilirsiniz:  
**PIN2 Kodu, Güvenlik kodu.**

1. Güvenlik kodu/PIN2 kodlarını deęiştirmek isterseniz, orijinal kodunuzu girip  [Tamam] tuşuna basın.
2. Yeni Güvenlik kodu/PIN2 kodunu girip, doğrulayın.

## Şebeke ayarları

Menü 7.5

Otomatik veya el ile kaydedilecek bir şebeke seçebilirsiniz. Şebeke seçimi genellikle **Otomatik** olarak ayarlanır.

### Şebeke seçimi (Menü 7.5.1)

#### Otomatik

Otomatik modu seçerseniz, telefon sizin yerinize şebekeyi otomatik olarak arar ve seçer.

**Otomatik** modu bir kez seçtikten sonra, güç açılıp kapatılsa dahi telefon “Otomatik” olarak ayarlanacaktır.

#### Manuel

Telefon kullanılabilir şebekelerin listesini bulup, size gösterir. Bunun ardından kullanmak istediğiniz şebekeyi, kendi ülkenizdeki şebeke operatörüyle dolaşım anlaşması varsa, seçebilirsiniz. Telefon seçili şebekeye erişemezse, size başka bir şebeke seçme olanağı sunar. Telefonu kapattığınızda, telefon şebeke ayarını **Otomatik** olacak şekilde sıfırlar.

## Tercih edilen

Tercih edilen şebekelerin listesini ayarlayabilirsiniz; telefon, diğer şebekelere kaydetmeye çalışmadan önce listedeki ilk şebekeye kaydetmeye çalışır. Bu liste, telefonda bulunan önceden tanımlanmış, bilinen şebekeler listesinden ayarlanır.

### Bant seçimi (Menü 7.5.2)

Şebekenin kullandığı bant olarak GSM 900/1800 ya da GSM1900 seçmek için bunu kullanın.

## GPRS ayarı

Menü 7.6

Çeşitli durumlara bağlı olarak GPRS servisini ayarlayabilirsiniz.

## Ayarları Sıfırla

Menü 7.7

Telefonun başlangıçtaki fabrika ayarlarına dönmesini sağlayabilirsiniz. Bu işlevi etkinleştirmek için Güvenlik kodu gereklidir.

## Hafıza durumu

Menü 7.8

### İç bellek (Menü 7.8.1)


- Bu işlem, telefonun kullanıcı belleği durumunu gösterir.

### Multimedya bellek (Menü 7.8.2)

- Bu işlem, telefonun multimedya belleği durumunu gösterir.

# Servis

Bankacılık, haberler, hava durumu raporları ve uçuş bilgileri gibi birçok WAP (Kablosuz Uygulama Protokolü) hizmetlerine ulaşabilirsiniz. Bu hizmetler özel olarak mobil telefonlar için tasarlanmıştır ve WAP servis sağlayıcıları tarafından sağlanır. Hangi WAP hizmetlerinin sunulduğunu, fiyatları ve tarifeleri şebeke operatörünüzden ve/veya servislerini kullanmak istediğiniz servis sağlayıcılardan öğrenebilirsiniz. Servis sağlayıcılar, kendi servislerini nasıl kullanabileceğinizle ilgili bilgiler de sağlayacaktır.




Bağlanıldığında ana sayfa görüntülenecektir. Sayfanın içeriği servis sağlayıcıya bağlıdır. URL adresini girerek istediğiniz web sitesi sayfasına ulaşabilirsiniz. Tarayıcıdan istediğiniz zaman çıkmak için (  ) tuşuna basın. Telefon bekleme moduna geri döner.

## WAP tarayıcıyla gezinme

Telefon tuşları ya da WAP tarayıcı menüsünü kullanarak internette gezebilirsiniz.

## Telefon tuşlarını kullanma

İnternette gezinirken telefon tuşları, telefon modunda olduğundan farklı çalışır.

Tuş	Açıklama
	İçerikte satırlar arasında hareket etmenizi sağlar
	Bir önceki sayfaya dönmenizi sağlar
	Seçenekleri seçer ve işlemleri onaylar.

## WAP tarayıcı menüsünün kullanılması

Mobil Web'de gezerken kullanılabilecek çeşitli menü seçenekleri bulunmaktadır.

### Not

- WAP tarayıcı menüsü, tarayıcı sürümüne göre farklılık gösterebilir.

## Internet

Menü 8.1


### Ana sayfa (Menü 8.1.1)




Bir ana sayfaya bağlanır. Ana sayfa, etkin profilde tanımlanmış olan site olacaktır. Etkin profilde tanımlanmadıysa, servis sağlayıcı tarafından tanımlanacaktır.

### Yer imleri (Menü 8.1.2)

Bu menü, daha sonra kolay ulaşabilmeniz için istediğiniz web sayfalarının URL adreslerini kaydetmenizi sağlar. Telefonunuzda çok sayıda önceden yüklenmiş yer imi bulunmaktadır. Bu önceden yüklenmiş yer imleri silinemez.

#### Bir yer imi oluşturmak için

1. Sol seçim tuşuna  [Seçenekler] basın.
2. Yeni ekle seçin ve Tamam tuşuna basın.
3. İstediğiniz URL'yi ve başlığı girdikten sonra Tamam tuşuna basın.

\* *İpucu:* “  ” tuşunu kullanın ve “  ” sembol girin. “.”, “  ” basın.

Yer imlerini oluşturduktan sonra aşağıdaki seçenekleri kullanabilirsiniz.

- ▶ **Bağlan:** Seçin yer imine bağlanır.
- ▶ **Yeni ekle:** Yeni bir yer imi oluşturmak için bunu seçin.
- ▶ **Düzenle:** Seçilen yer iminin URL'sini ve/veya başlığını düzenleyebilirsiniz.
- ▶ **Sil:** Seçilen yer imini siler.
- ▶ **Tümünü sil:** Tüm yer imlerini siler.

### URL'ye git (Menü 8.1.3)

İstediğiniz siteye doğrudan bağlanabilirsiniz. Belirli bir URL girdikten sonra, Tamam tuşuna basın.

## Ayarlar (Menü 8.1.4)

### Profiller

Profil, İnternet'e bağlanmak için kullanılan şebeke bilgileridir.

#### Not

- ▶ SIM kart SAT destekliyorsa. ( SIM Application Toolkit) Bu menü operatöre bağlı bir servistir ve SIM kartta bulunur. Eğer SIM kart SAT servisini desteklemiyorsa bu menü Profiller olur.

Her profilde aşağıdaki alt menüler bulunur:

- ▶ **Etkinleştir:** Seçilen profili etkinleştirir.
- ▶ **Ayarlar:** Seçilen profildeki WAP ayarlarını düzenlemek ve değiştirmek için bunu kullanın.
  - **Ana site:** Bu ayar, ana sayfa olarak kullanmak istediğiniz sitenin adresini (URL) girebilmenizi sağlar. URL'nin başına http://yazmanıza gerek yoktur; çünkü WAP tarayıcısı bunu otomatik olarak ekler.

- **Taşıyıcı:** Taşıyıcı veri servisini ayarlayabilirsiniz.

#### 1 Veri 2 GPRS

- **Veri ayarları:** Yalnızca Taşıyıcı servisi olarak Veri ayarlarını seçerseniz, görüntülenir.

**Numara çevir:** WAP ağ geçidine erişmek için aranacak telefon numarasını girin.

**Kull. adı:** Çevirmeli sunucunuz için kullanıcı kimliği (WAP ağ geçidi için DEĞİL).

**Şifre:** Çevirmeli sunucunuzun sizi tanımlayabilmesi için gereken şifre (WAP ağ geçidi için DEĞİL).

**Çağrı türü:** Veri arama türünü seçin: Analog veya Dijital (ISDN).

**İşlemsiz süre:** Zaman aşımı süresi girmeniz gerekir. Bu süreyi girdikten sonra, veri girilse veya aktarılsa bile WAP gezinme servisi kullanılamaz.

**Çağrı hızı:** Veri bağlantınızın hızı; 9600 veya 14400.

- **GPRS Ayarları:** Servis ayarları yalnızca taşıyıcı servisi olarak GPRS seçilirse kullanılabilir.

**APN:** GPRS'in APN'sini girin.

**Kull. adı:** APN sunucunuz için tanımlanan kullanıcılar.

**Şifre:** APN sunucunuzun istediği şifre.

- **Proxy ayarları**

**Proxy:** Açık/Kapalı

**IP adresi:** Kullandığınız Yetkili sunucunun IP adresini girin.

**Port:** Yetkili Sunucu portunu girme

- **DNS ayarları**

**Birincil sunucu:** Kullandığınız birincil DNS'nin IP adresini girin.

**İkincil sunucu:** Kullandığınız ikincil DNS'nin IP adresini girin.

► **Yeni ad ver:** Profil adını değiştirebilirsiniz.

► **Sil:** Listedeki seçilen profili siler.

► **Yeni ekle:** El ile yeni bir profil girebilirsiniz.

## Cache

Bağlantı girişiminin önbellek üzerinden yapıp yapılmadığını gösteren bir değer belirler.

## Çerez

Bir çerezin kullanılıp kullanılmadığını kontrol eder.

## Cache temizle

Önbellekte kayıtlı tüm içeriği siler.

## Cookie'yi temizle

Çerezlerde kayıtlı tüm içeriği siler.

## Sertifikası

Mevcut sertifikaların listesi görüntülenir.

► **Yetki:** Telefonunuzda kayıtlı yetki sertifikalarının bir listesini görebilirsiniz.



► **Kişisel:** Telefonunuzda kayıtlı kişisel sertifikaların bir listesini görebilirsiniz.

## **SIM servisi** Menü 8.2 (SIM' baęlı)

Servis saęlayıcınız, ev bankacılıęı, borsa vs. gibi konularda SIM kart üzerinden çeşitli uygulamalar sunuyor olabilir. Bu servislerden herhangi birine kayıtlıysanız, servis adı, ana menünün sonunda görüntülenecektir. SIM servisi menüsüyle telefonunuz gelecekteki uygulamalarla uyumludur ve servis saęlayıcınızın ileride saęlayacaęı servis eklemelerini destekleyecektir. Daha fazla bilgi için servis saęlayıcınızla görüşün.

## Oyunlarm ve diğlerleri Menü 9.1

### Oyunlarm ve diğlerleri (Menü 9.1.1)

Bu menüde, telefonunuzda yüklü Java uygulamalarını yönetebilirsiniz. İndirilen uygulamaları çalıştırabilir ya da silebilir veya bağlantı seçeneğini ayarlayabilirsiniz. İndirilen uygulamalar, klasörler halinde düzenlenir. Sol seçim tuşuna  [Seç] basarak, seçilen klasörü açabilir ya da seçilen midlet'i çalıştırabilirsiniz. Sol seçim tuşunu  [Seçenekler] kullanarak aşağıdaki menülere ulaşabilirsiniz.

#### Not

- Herhangi bir Java oyununu indirdikten sonra kök klasörüne kaydetmek için "Tamam" Tuşuna ( ● ) basın.

- **Başlat:** Seçilen uygulamayı başlat.
- **Bilgi:** Uygulamanın bilgilerini gösterir.
- **Seçenekler:** Bazı Java uygulamaları, veri bağlantısının yapılmasını gerektirebilir. Bağlantı seçeneklerini ayarlamak için bunu seçin.

- **Her zaman:** Bağlantı, herhangi bir bildirimde bulunulmadan anında oluşturulur.
- **Sor:** Uygulama bağlantıyı kurmadan önce size sorulur.
- **Asla:** Hiçbir bağlantıya izin verilmez.

#### Not

- Önceden yüklenmiş bir klasörü ya da klasördeki bir oyunu kaldıramaz ya da yeniden adlandıramazsınız.

Java™, Sun Microsystems tarafından geliştirilmiş bir teknolojidir. Netscape ya da MS Internet Explorer tarayıcılarını kullanarak Java Applet'i indirebilmeniz gibi WAP kullanan telefonla Java MIDlet'leri indirilebilmektedir. Servis sağlayıcıya bağlı olarak Java oyunları gibi tüm Java tabanlı programlar indirilebilir ve telefonda çalıştırılabilir. İndirilen Java programları, seçim, çalıştırma ya da silme yapabileceğiniz Oyunlarm ve diğlerleri menüsünde görülebilir. Telefona kaydedilen Java programı dosyaları .JAD ve .JAR biçimlerindedir.

## Not

- ▶ JAR dosyası, Java programının sıkıştırılmış biçimidir ve JAD dosyaları, tüm ayrıntılı bilgileri içeren bir tanımlama dosyasıdır. İndirmeden önce şebekede dosyayla ilgili tüm ayrıntılı bilgileri JAD dosyasında görebilirsiniz.
- ▶ Standart bir dili (J2ME) temel alıyor olsalar da, telefon modeline göre farklı kütüphaneler kullanılıyor olabileceğinden tüm Java uygulamaları her telefonla uyumlu değildir. Telefon için özel olarak geliştirilmemiş Java uygulamaları indirildiğinde, yazılım kilitlenebilir ya da kendini açabilir. Bu sorunların, ürünlerdeki bir hatadan değil uyumsuz uygulamalardan kaynaklandığını hatırlatmak isteriz.

## Dikkat!

- ▶ Telefon ortamında yalnızca J2ME (Java 2 Micro Edition) tabanlı programlar çalışır. J2SE (Java 2 Standard Edition) tabanlı programlar yalnızca PC ortamında çalışır.

## Profiller (Menü 9.1.2)

Bu menü, Internet menüsüyle aynı ayarları içerir. Aslında yeni uygulamalar indirmek için bir WAP bağlantısı gerekmektedir.

## Resimler

Menü 9.2

Sol seçim tuşu  [Seçenekler], aşağıdaki seçeneklerin açılmasını sağlar.

- ▶ **Duvar kağıdı olarak ayarla:** O sırada seçili Resim duvar kağıdı olarak ayarlanabilir.
- ▶ **MMS:** İndirilen Resim, MMS ile gönderilebilir.
- ▶ **Bluetooth ile gönder:** Resimler bluetooth ile gönderilebilir.

## Melodiler

Menü 9.3

Sol seçim tuşu  [Seçenekler], aşağıdaki seçeneklerin açılmasını sağlar.

- ▶ **Zil tonu olarak ayarla:** O sırada seçili Sesi, Zil tonu yapar.
- ▶ **Mesaj yaz:** Melodi Sesi, SMS ve MMS ile gönderilebilir.

- **Bluetooth ile gönder:** Melodi sesleri bluetooth ile gönderilebilir.

## Dosya hafızası

Menü 9.4

Bu klasör bir dosya saklama alanına benzer. Telefon, görüntüleri, sesleri ve genel dosyaları desteklemediğinden UMS işlevi ya da Bluetooth ile aktarılan tüm dosyaları içerir.

[Seçenek] seçim tuşuna basarak, dosyayı görebilir ya da oynatabilir (destekleniyorsa), silebilir ya da Bluetooth ile gönderebilirsiniz.

### USB bağlantısı

S5200, dosya, içerik aktarımı ve dahili modem kullanımı için USB kablosu üzerinden PC'ye bağlanabilir. Aşağıdaki bölümde bu işlevle ilgili tüm bilgileri bulabilirsiniz.

### USB Ortam Saklama Alanı (UMS)

UMS işlevi (USB Ortam Saklama Alanı), telefonun dahili hafızasında (64 MB) bulunan multimedya dosyaların, sanki normal bir USB hafıza çubuğundaymış gibi kullanılmasını sağlar. Bu işlev herhangi bir ek yazılım yüklenmesini gerektirmez.

MMS ekli dosyada JPG (Maksimum 460K), GIF (Maksimum 100K) görüntüleyebilir ve sesleri çalabilirsiniz.

### Not

- UMS işlevini kullanırken, herhangi bir mesaj ya da arama alamazsınız.

1. Telefonun bekleme ekranında USB kablosunu telefona ve PC'ye bağlayın. PC bir kaç saniye sonra çevre birimini tanıyacaktır.
2. Telefonun ana LCD ekranında "USB" yazısı görüntülenir
3. Telefon, PC'de, Bilgisayarım klasöründe "Çıkartılabilir disk" olarak tanınır. Ayrıca "E:\" gibi bir sistem diski harfi atanacaktır. Bundan sonra dosyaları telefondan, sanki normal bir Windows klasöründelermiş gibi yükleyebilir ve indirebilirsiniz.
4. "Çıkartılabilir disk"i çift tıklatın ve "My Media" klasörünü açın. Dört yeni klasör görüntülenir:

# İndirilenler

- **Müzik:** Bu klasörde, müzik dosyalarını kopyalayabilirsiniz. Desteklenen biçimler: MP3, AAC, AAC+, AAC++, WMA, MP4 (ses) ve WAV'dır. Bu klasördeki dosyalar, telefonun MP3 çaları kullanılarak çalınabilir.
- **Fotoğraflar:** Bu klasör telefonun dijital kamerasından çekilen resimlere ayrılmıştır. PC'de kopyala-yapıştır komutlarını kullanarak da telefondaki resimleri PC'ye aktarabilirsiniz.

## Not

- PC'den yeni resimleri telefona aktarabiliyor olmanıza karşın telefon bunları Fotoğraflarım menüsünde göstermez. Bu nedenle, bu klasöre herhangi bir şey yüklememenizi öneririz. Telefona yeni duvar kağıtları yüklemek istiyorsanız lütfen, CD-ROM'da verilen bu işe özel programı kullanın.

- **Saklama:** Bu klasör bir dosya saklama alanına benzer. Buraya görüntüler, ses, hatta yalnızca yanınızda taşımak ve daha

sonra bir bilgisayara aktarmak üzere telefonun desteklemediği dosyalar (örneğin word ve excel dosyaları) da dahil olmak üzere her türlü dosyayı yükleyebilirsiniz. Telefonda bu klasörde saklanan dosyalar, (Menü - İndirilenler- Dosya Saklama) alanında listelenirler.

- **Videolar:** Bu klasörde, telefonun dijital kamerasıyla çekilen videoları indirebilir ve telefona yeni videolar yükleyebilirsiniz. Bu klasör, 3GP dosya biçimini desteklemektedir. Telefonda, bu klasördeki dosyaları (Menü - Multimedya - Videolarım) alanında görebilirsiniz.

## Not

- Hafıza dolana kadar istediğiniz boyutta dosyaları yükleyebilirsiniz.
- 4 varsayılan klasörün altında, 10 taneye kadar alt klasör oluşturabilirsiniz.
- Varsayılan klasör ismini değiştirmeyin yoksa düzgün şekilde çalışmaz.

5. Dosya aktarımı tamamlandığında, USB çevre biriminin bağlantısını Windows'ta kesin ve kabloyu telefondan çıkartın.

### **Uyari!**

- Bir dosya aktarımı devam ederken asla telefonun bağlantısını kesmeyin. Bu tür bir hareket, hafızaya zarar verebilir. Kabloyu çıkartmadan önce her zaman çevre birimi bağlantısını Windows seçeneklerinden kesin

### **PC programları ve İnternet**

Telefonu bilgisayarınıza bağladığınızda, rehber kayıtlarınızı yönetebilir, duvar kağıtları ve zil sesleri gibi yeni içerikleri yükleyebilir ya da dahili modemi kullanabilirsiniz.

1. CD-ROM'da bulunan programları yükleyin.
2. Telefonda Araçlar - Modem menüsünü açın ve etkinleştirmeyi onaylayın.
3. Telefonu PC'ye, USB kablosunu kullanarak bağlayın ve istenen programı başlatın.

### **Not**

- Telefon açıldıktan bir süre sonra USB kablosunu takın.

4. Modemi kullandıktan sonra, Araçlar - Modem menüsünden kapatmanız önerilmektedir.

# Aksesuarlar

Cep telefonunuzla kullanabileceğiniz çeşitli aksesuarlar vardır. Kişisel iletişim ihtiyaçlarınıza göre bu seçenekler arasından seçim yapabilirsiniz.

## Standart Batarya



## Kulaklık

Handsfree çalışabilmenizi sağlar. Kulaklık ve mikrofon içerir.



## Seyahat Adaptörü

Bu şarj cihazı evinizden veya ofisinizden uzaktayken bataryayı şarj edebilmenizi sağlar.



## CD/Veri kablosu

Cihazlar arasında veri aktarmak için telefonunuzu bilgisayara bağlayabilirsiniz.



### Not

- ▶ Daima orijinal LG aksesuarları kullanın.
- ▶ Bu kurallara uyulmaması garantiyi geçersiz kılabilir.
- ▶ Aksesuarlar farklı bölgelerde değişiklik gösterebilir, ayrıntılı bilgi için lütfen bölgesel servis şirketimize veya acentemize başvurun.

## Genel

Ürün adı : S5200

Sistem : GSM 900 / DCS 1800 / PCS 1900

## Ortam ısısı

Maksimum : +55°C (boşalıyor)  
+45°C (şarj oluyor)

Minimum : -10°C



# Declaration of Conformity LG Electronics

**Name**

LG Electronics Inc

**Address**

LG Twin Tower  
20, Yeouido-dong, Yeongdeungpo-guSeoul, Korea 150-721

**Product Name**

GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

**Model Name**

S5200

**Trade Name**

LG

# CE 0168

**R&TTE Directive 1999/5/EC**

EN 301 489-01 / EN 301 489-07 : 2002 / EN 301 489-17 V1.2.1  
EN 300 328 V1.4.1  
EN 60950 : 2001  
EN 50360/EN 50361 : 2001  
3GPP TS 51.010-1,  
EN 301 511 V9.0.2

The conformity to above standards is verified by BABT.

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

**Name**

Jin Seog, Kim / Director

**Issued Date**

8.Sep. 2005


LG Electronics Inc. Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

  
Signature of representative



# | S5200 | USER GUIDE

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

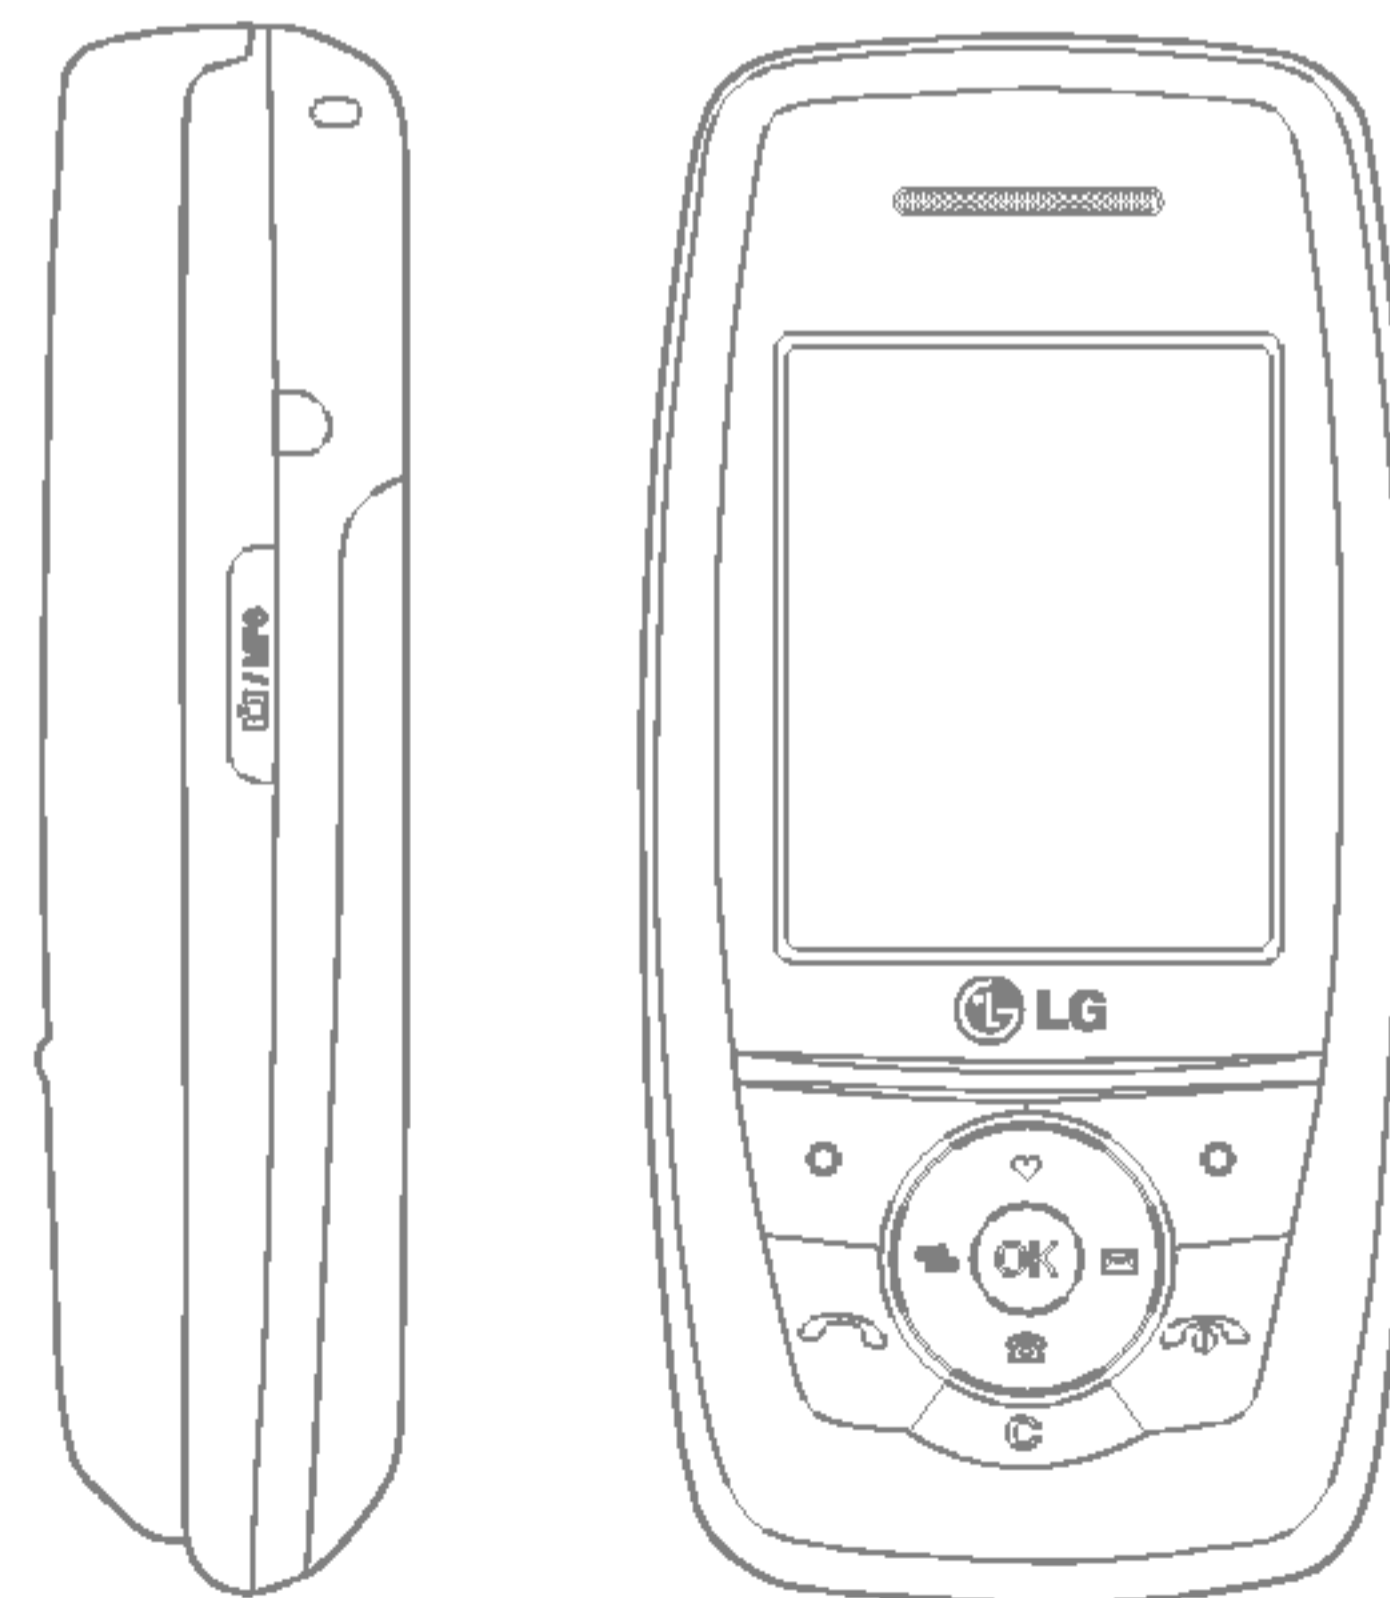

# Table of Contents

Introduction	6	General Functions	22	Call register	36
Guidelines for safe and efficient use	7	Making and answering calls		Missed calls	
S5200 features	11	Contacts	26	Received calls	
Parts of the phone		In-call menu		Dialled calls	
Display information	15	Multiparty or conference calls	28	Delete recent calls	37
Getting started	17	Menu Tree	30	Call charges	
Installing the SIM card and battery		Selecting functions and options	33	Call duration	
Charging the Battery	18	Profiles	34	Call costs	
Disconnecting the adapter	19	Activate		Settings	
Turning your phone on and off	20	Personalise		GPRS information	38
Access codes		Rename	35	Call duration	
Barring password	21			Data volumes	

<b>Tools</b>	<b>39</b>	<b>Organiser</b>	<b>42</b>	<b>Messages</b>	<b>48</b>
Alarm clock		<b>Contacts</b>		<b>New message</b>	
<b>Bluetooth</b>		Search		Write text message	
Paired devices		Add new		Write multimedia message	49
Handsfree devices		Caller groups	43	<b>Inbox</b>	<b>51</b>
Settings	40	Speed dial		<b>Outbox</b>	<b>52</b>
<b>Calculator</b>		Settings	44	<b>Drafts</b>	<b>53</b>
Unit converter		Copy all		Listen to voice mail	
World time		Delete all	45	<b>Info message</b>	<b>54</b>
<b>Modem</b>	<b>41</b>	Information		Read	
		<b>Calendar</b>	<b>46</b>	Topics	
		Add new		<b>Templates</b>	
		View daily schedules		Text templates	
		Delete past		Multimedia templates	55
		Delete all		My business card	
		Go to date		<b>Settings</b>	<b>56</b>
		Set alarm tone		Text message	
		<b>Memo</b>	<b>47</b>	Multimedia message	
				Voice mailbox number	57
				Info message	
				Push messages	

# Table of Contents

<b>Multimedia</b>	<b>58</b>	<b>Settings</b>	<b>63</b>	<b>Security settings</b>	<b>66</b>
Camera		<b>Date &amp; Time</b>		PIN code request	
Video camera		Date		Handset lock	
<b>My photos</b>	<b>59</b>	Time		<b>Auto key lock timeout</b>	<b>67</b>
<b>My video</b>		<b>Phone settings</b>		Call barring	
<b>MP3</b>	<b>60</b>	<b>Display settings</b>		Fixed dial number	
MP3 player	61	<b>Theme Settings</b>	<b>64</b>	<b>Change codes</b>	<b>68</b>
Playlist		Language		<b>Network settings</b>	
<b>Settings</b>	<b>62</b>	<b>Call settings</b>		Network selection	
<b>Voice recorder</b>		Call divert		<b>Band selection</b>	<b>69</b>
Record		<b>Answer mode</b>	<b>65</b>	<b>GPRS setting</b>	
View list		Send my number		<b>Reset settings</b>	
<b>Settings</b>		Call waiting		<b>Memory status</b>	
Camera		<b>Minute minder</b>	<b>66</b>	Internal memory	
Video camera		Auto redial		Multimedia memory	

---

<b>Service</b>	<b>70</b>
Internet	
Home	
Bookmarks	71
Go to URL	
Settings	
<b>SIM service</b>	<b>73</b>

---

<b>Downloads</b>	<b>74</b>
Games & Apps	
Games & Apps	
Profiles	75
Images	
Sounds	
<b>File storage</b>	<b>76</b>
<b>Accessories</b>	<b>79</b>
<b>Technical data</b>	<b>80</b>

# Introduction

Congratulations on your purchase of the advanced and compact S5200 mobile phone, designed to operate with the latest digital mobile communication technology.

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.



# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model S5200 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- ▶ The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.117 W/kg (10g).

## Product care and maintenance

**WARNING!** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV, radio or personal computer.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.

# Guidelines for safe and efficient use

- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use the accessories like an earphone cautiously.

## Electronics devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.

- ▶ RF energy may affect some electronic systems in your motor vehicle such as car stereo or safety equipment.
- ▶ When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

## Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

## Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

# Guidelines for safe and efficient use

## Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

# S5200 features

## Parts of the phone

### Front view



#### 1. Headset jack

- ▶ Connect a headset here.

#### 2. Up/down side keys

- ▶ Controls the volume of keypad tone in standby mode with the phone open/closed.
- ▶ Controls the earpiece volume during a phone call.

#### 3. Front screen

# S5200 features

S5200 features

## Right side view




### Camera/MP3 key

► Open the slide to reveal the camera lens. Press and hold down this key to activate the camera mode. Also use this key to take a shot. Use the front screen as a viewfinder.

## Rear view

### Camera lens

► Dirt on the camera lens could affect the image quality.

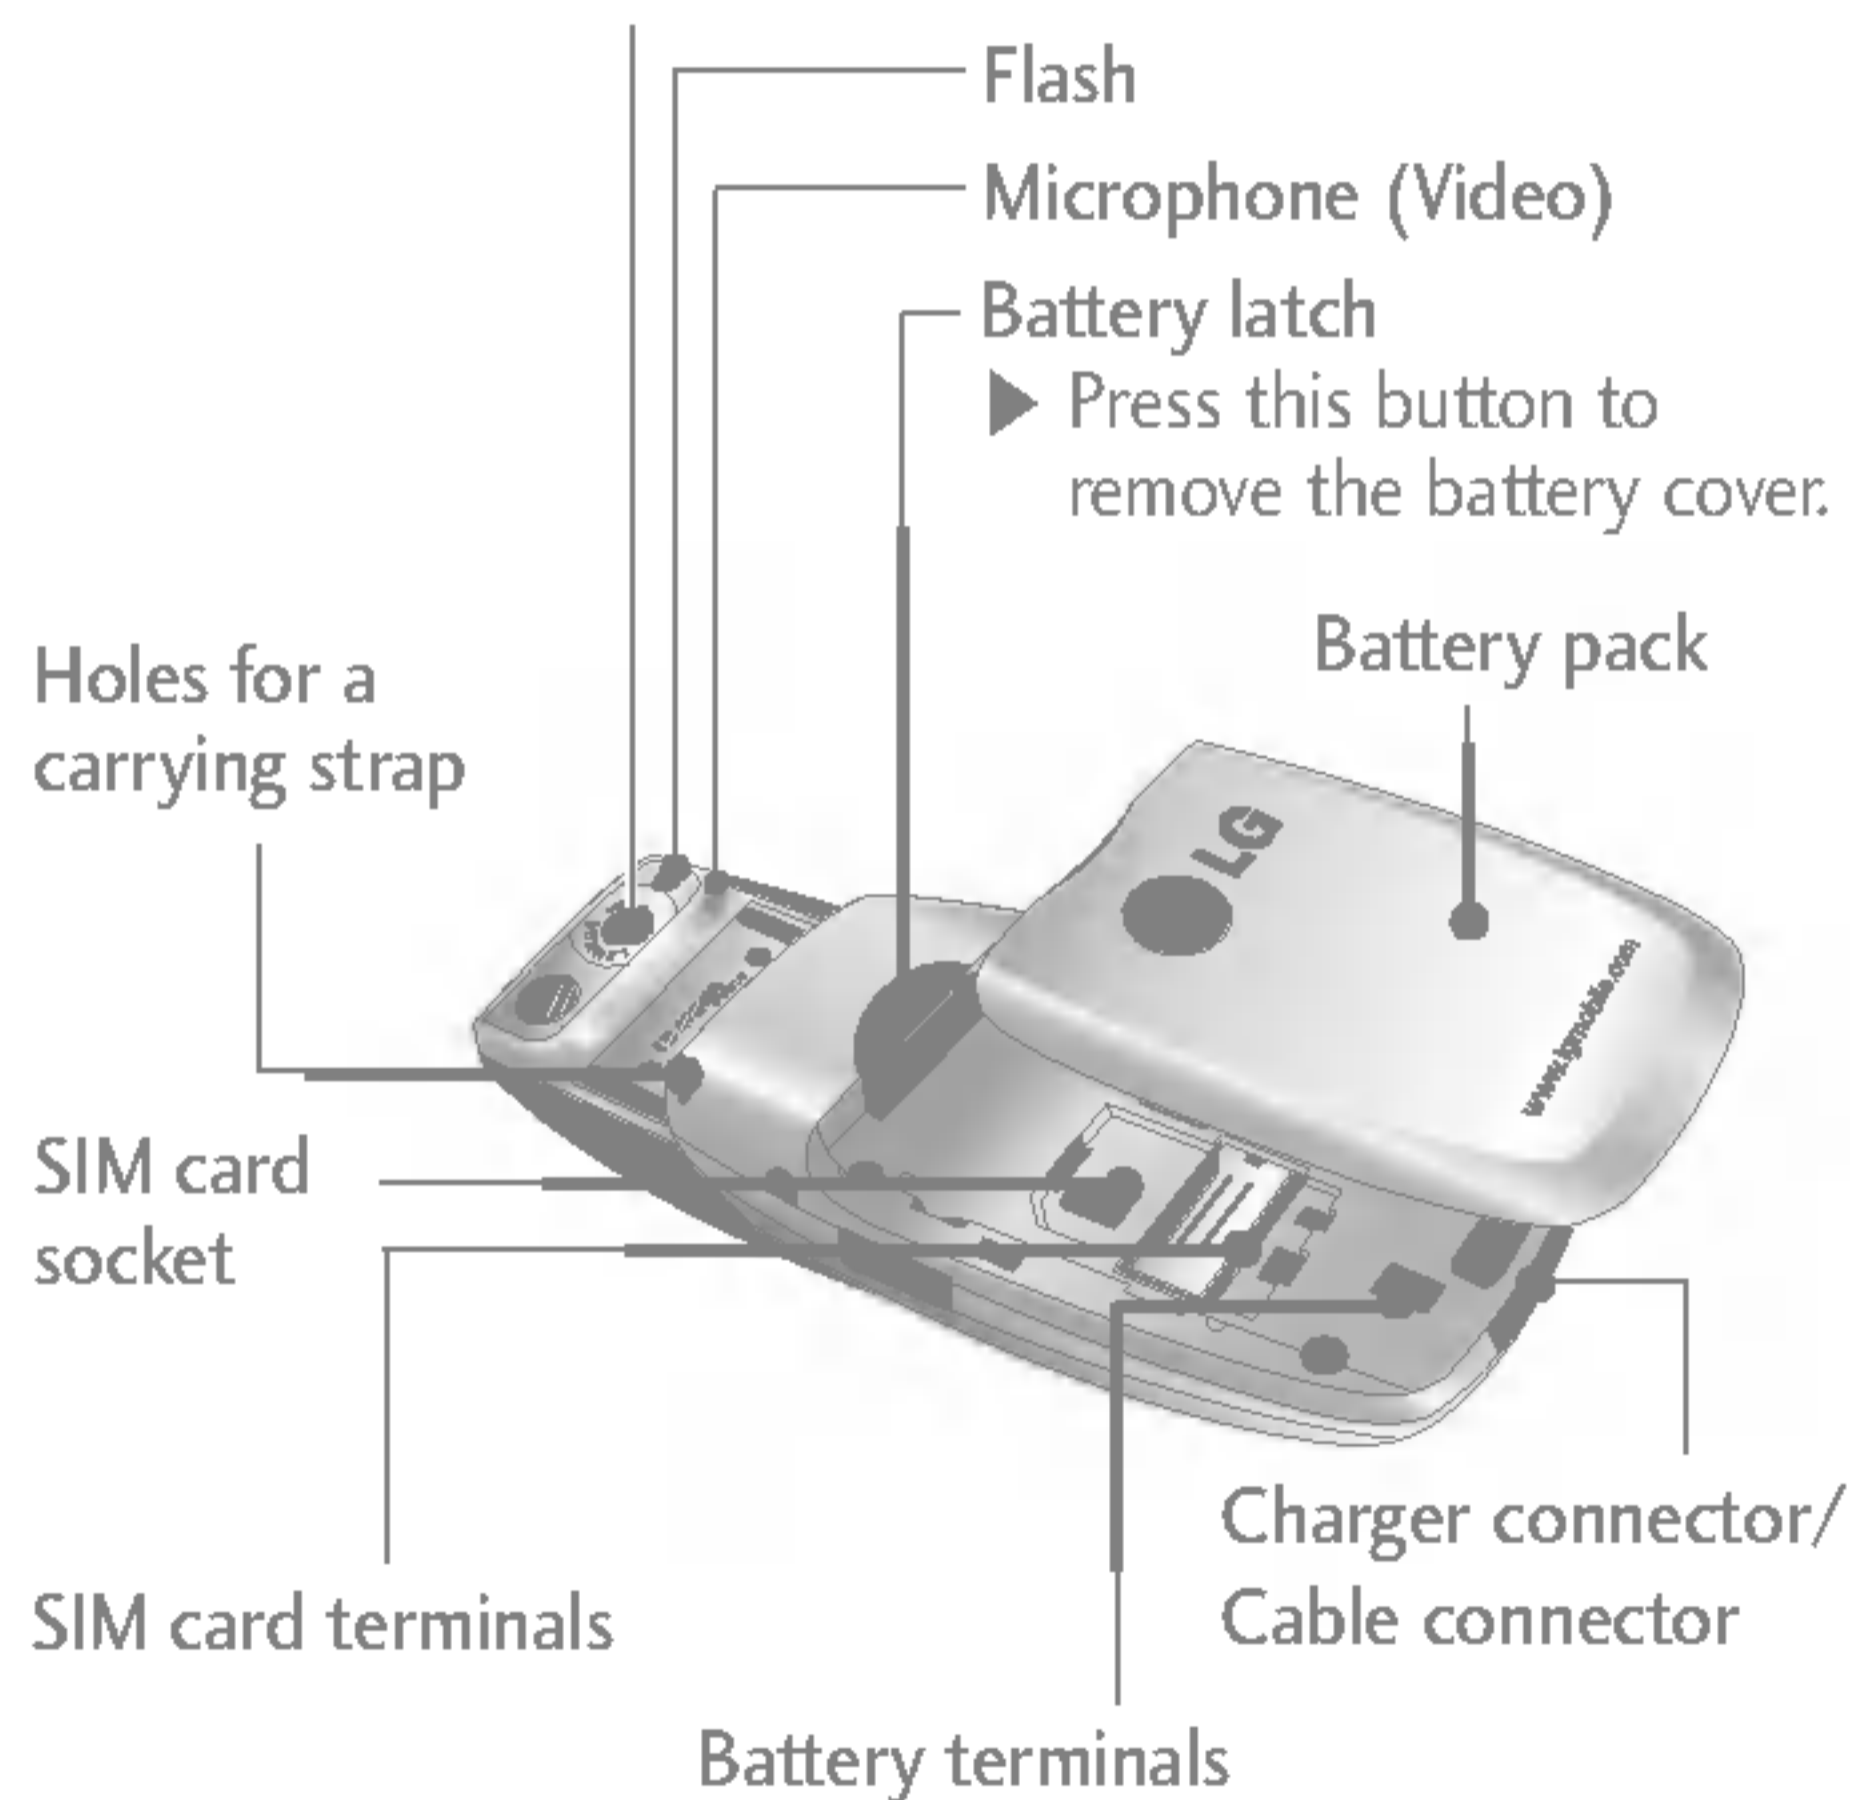



## Open view



### Note

- ▶ To prevent the difficulty in hearing of the other side, slide open while using phone.




# S5200 features

1. **Earpiece**
2. **Left soft key:** Performs the function indicated by the text on the screen immediately above it.
3. **Send key:** Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls by pressing the key in standby mode.
4. **Alphanumeric keys:** Enter numbers, letters and some special characters.
5. **Microphone:** Can be muted during a call for privacy.
6. **Main screen:** Displays phone status icons, menu items, Web information, pictures and more in full colour.
7. **Navigation keys:** Use to scroll through menus and move the cursor.
8. **Right soft key:** Performs the function indicated by the text on the screen immediately above it.
9. **Confirm key:** Selects menu options and confirms actions.
10. **End/Power key:** Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.
11. **Clear key:** Deletes a character with each press. Hold the key down to clear all input. Use this key to go back to a previous screen.
12. **Special function keys**
  - ▶  : A long press of this key enters the international call character “+”.
  - ▶  : While keying in a phone number, a long press of this key enters a pause.

## Display Information











The table below describes various display indicators or icons that appear on the phone's display screen.

### On-Screen Icons







Icon	Description
	Indicates the strength of the network signal. *
	Indicates a call is in progress.
	Indicates that you are roaming on another network.

#### Note

- ▶ \*The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and bad audio. Please take the network bars as indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).

Icon	Description
	Indicates that GPRS service is available.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates the receipt of a message.
	Indicates the receipt of a voice message.
	Indicates that the vibration ringer has been set.
	Indicates the Loud profile is activated.
	Indicates the Silent profile is activated.
	Indicates the Headset profile is activated.
	Indicates the General profile is activated.

# S5200 features

Icon	Description
	Indicates that you can use the push message service.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Agenda event set
	Call divert service active
	Bluetooth enabled

## Note


- ▶ When the status of the battery indicates low, you may not use Camera or Multimedia function.
- ▶ While using Multimedia function, the status of the battery is changeable.

## Installing the SIM card and battery

Make sure the power is off before you remove the battery.

### 1. Remove the battery.

Press the button to release the battery, then slide the battery down till it stops. Now lift the battery from its compartment.

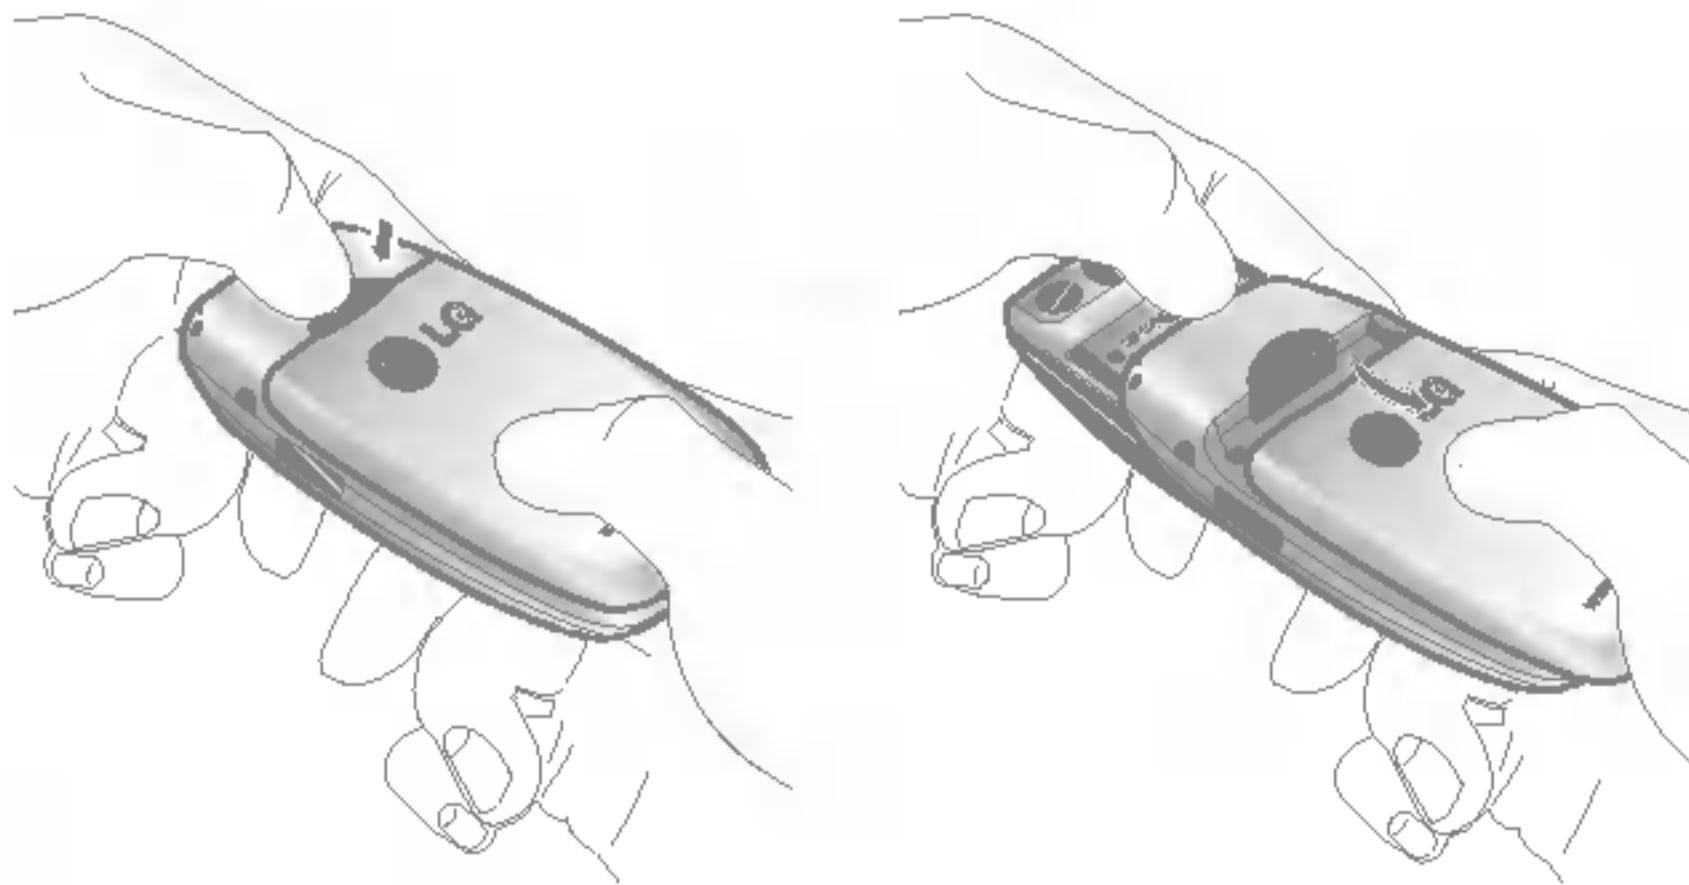


#### Note

- ▶ Removing the battery from the phone when the power is on may cause the phone to malfunction.

### 2. Install the SIM card.

Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

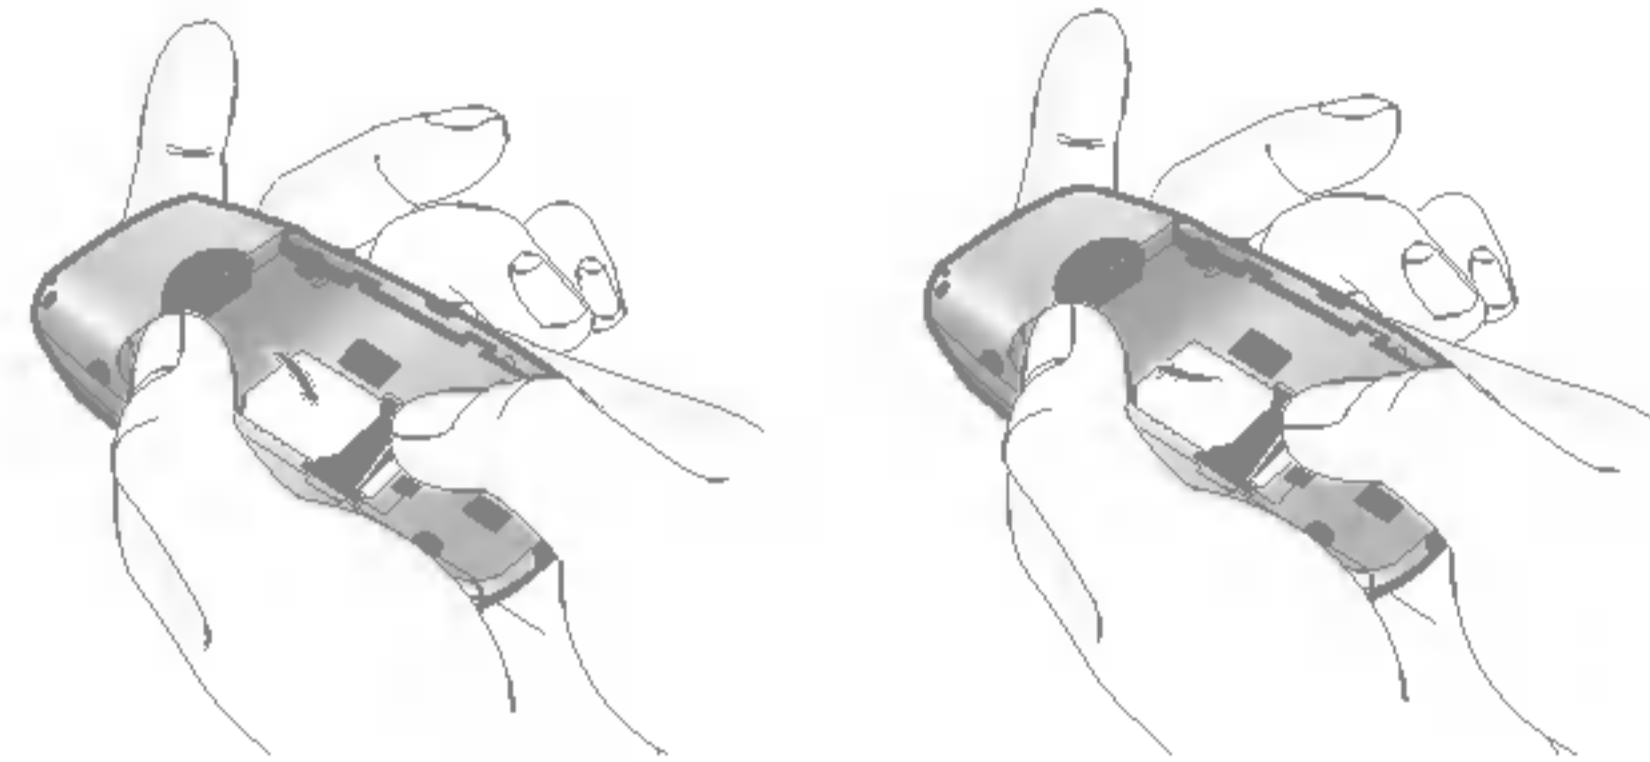

To insert the SIM card


To remove the SIM card

#### Caution!

- ▶ The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.


# Getting started

## 3. Install the battery.

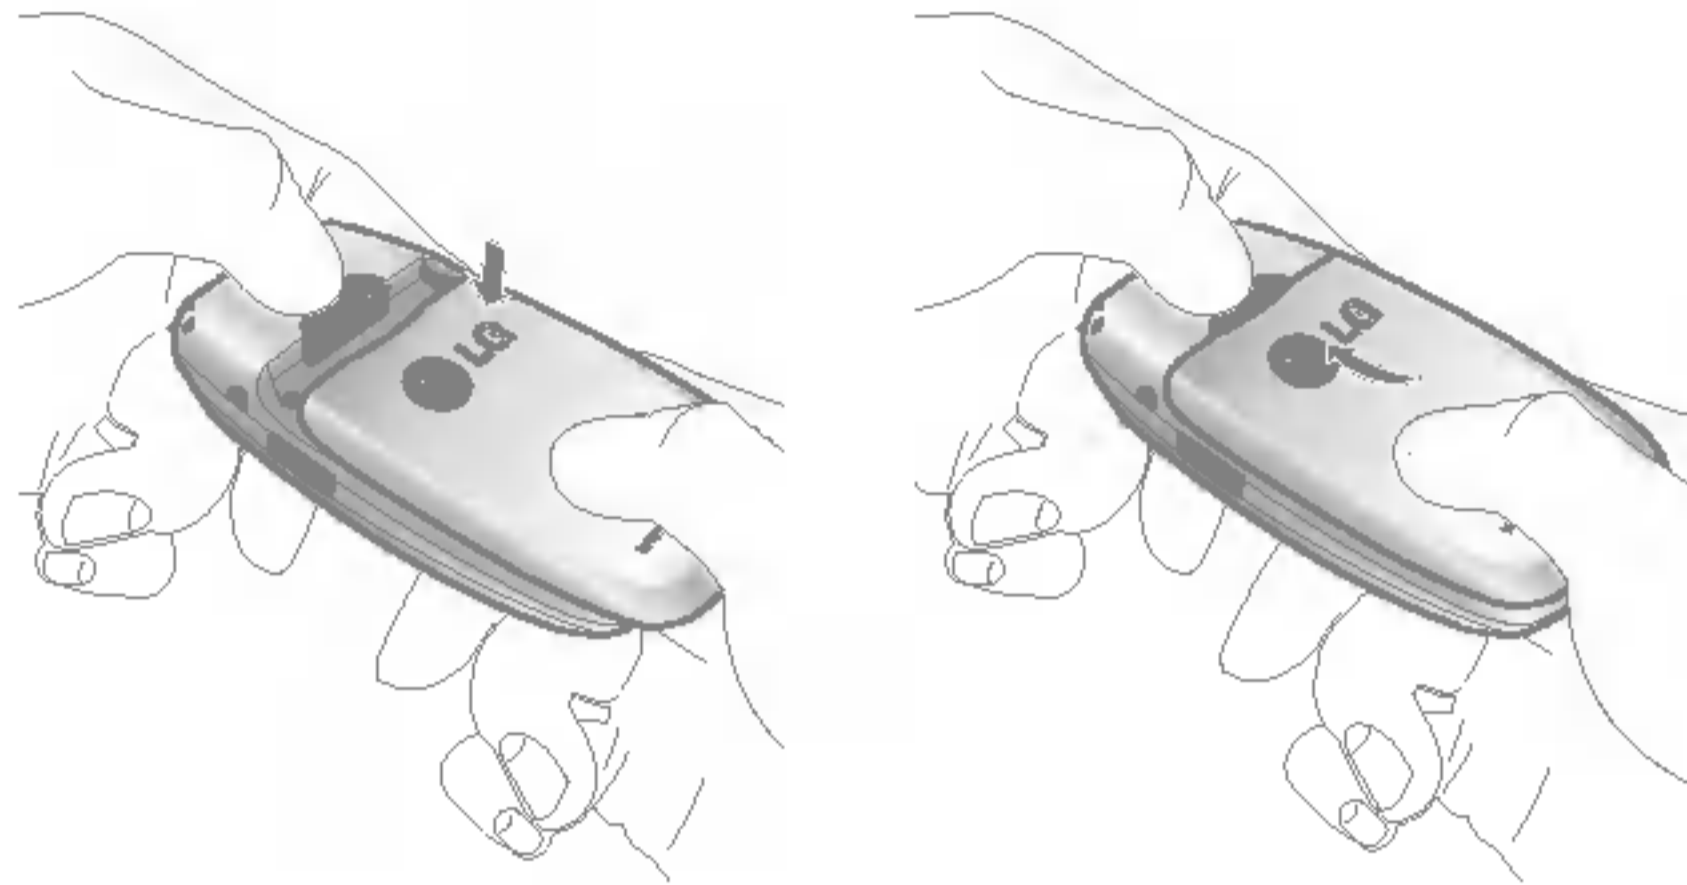

## Charging the Battery

To connect the mains adapter to the phone, you must have installed the battery.

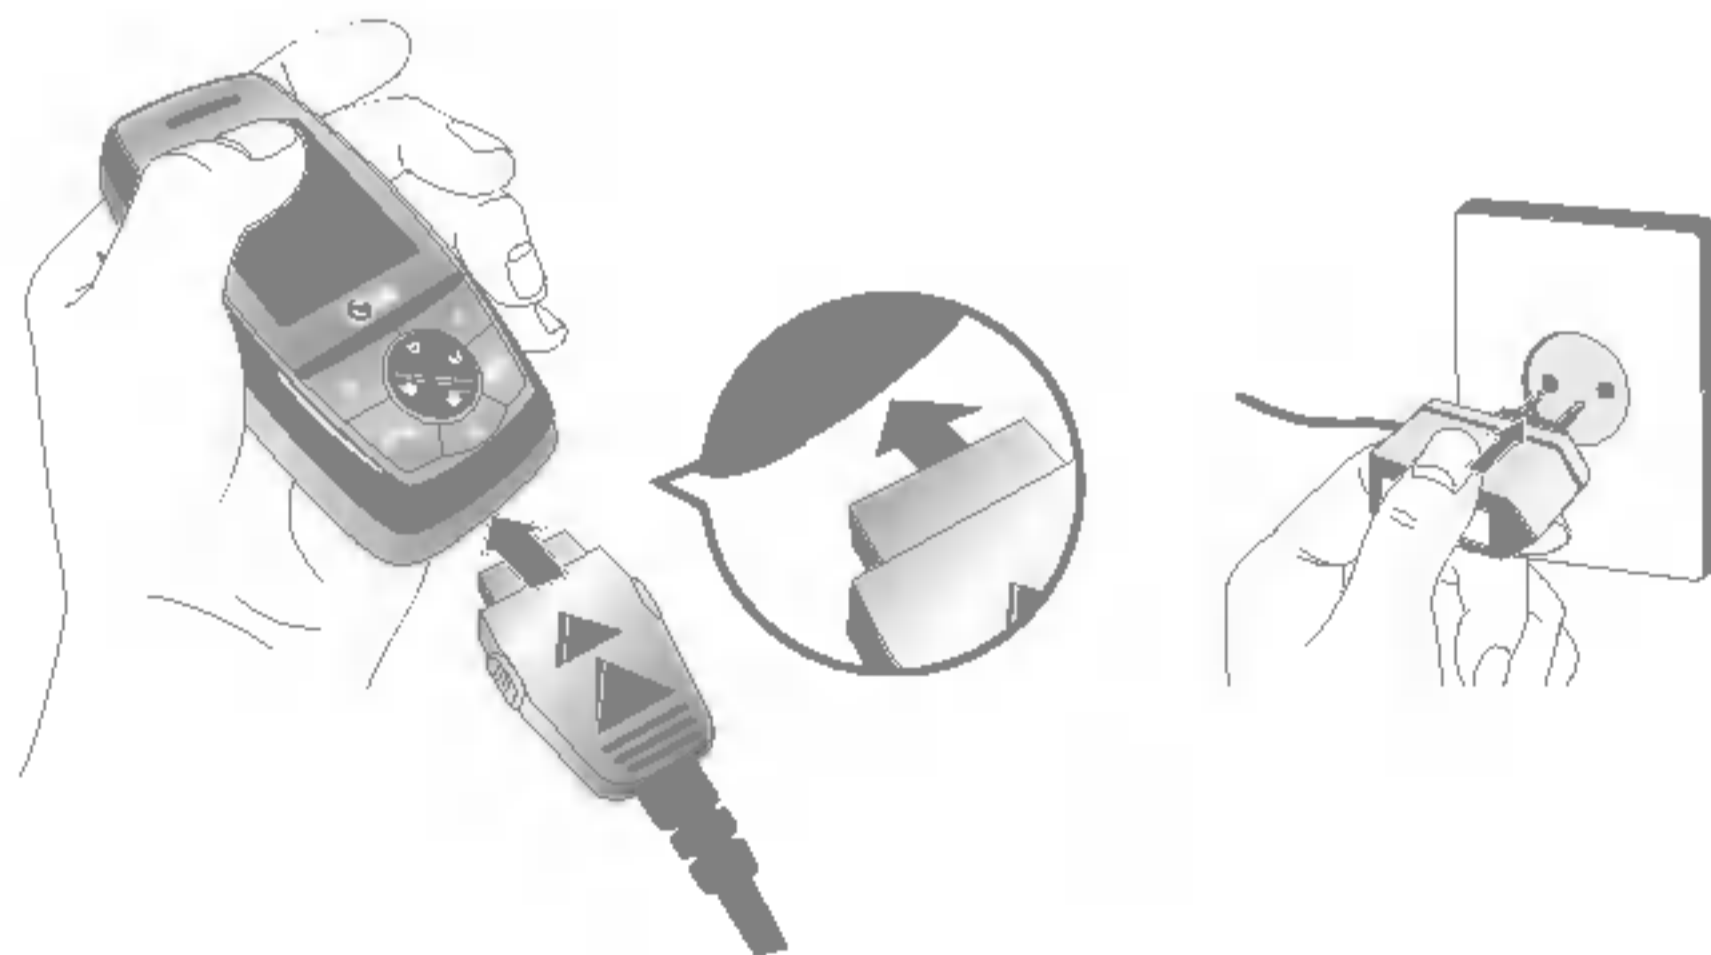

1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.
2. Connect the other end of the mains adapter to the mains socket. Only use the charger included in the box.
3. The moving bars of battery icon will stop after charging is complete.

### Caution!

- ▶ Do not force the connector as this may damage the phone and/or the charger.
- ▶ If you use the battery pack charger out of your own country, use an attachment plug adapter for the proper configuration.
- ▶ Do not remove your battery or the SIM card while charging.


**Warning!**

- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ Make sure that no sharp-edged items such as animal teeth or nails come into contact with the battery. There is a risk of this causing a fire.
- ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

**Disconnecting the adapter**

Disconnect the travel adapter from the phone by pressing its side buttons as shown in the diagram.

1. When charging is finished, the moving bars of the battery icon stop and 'Full' is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.

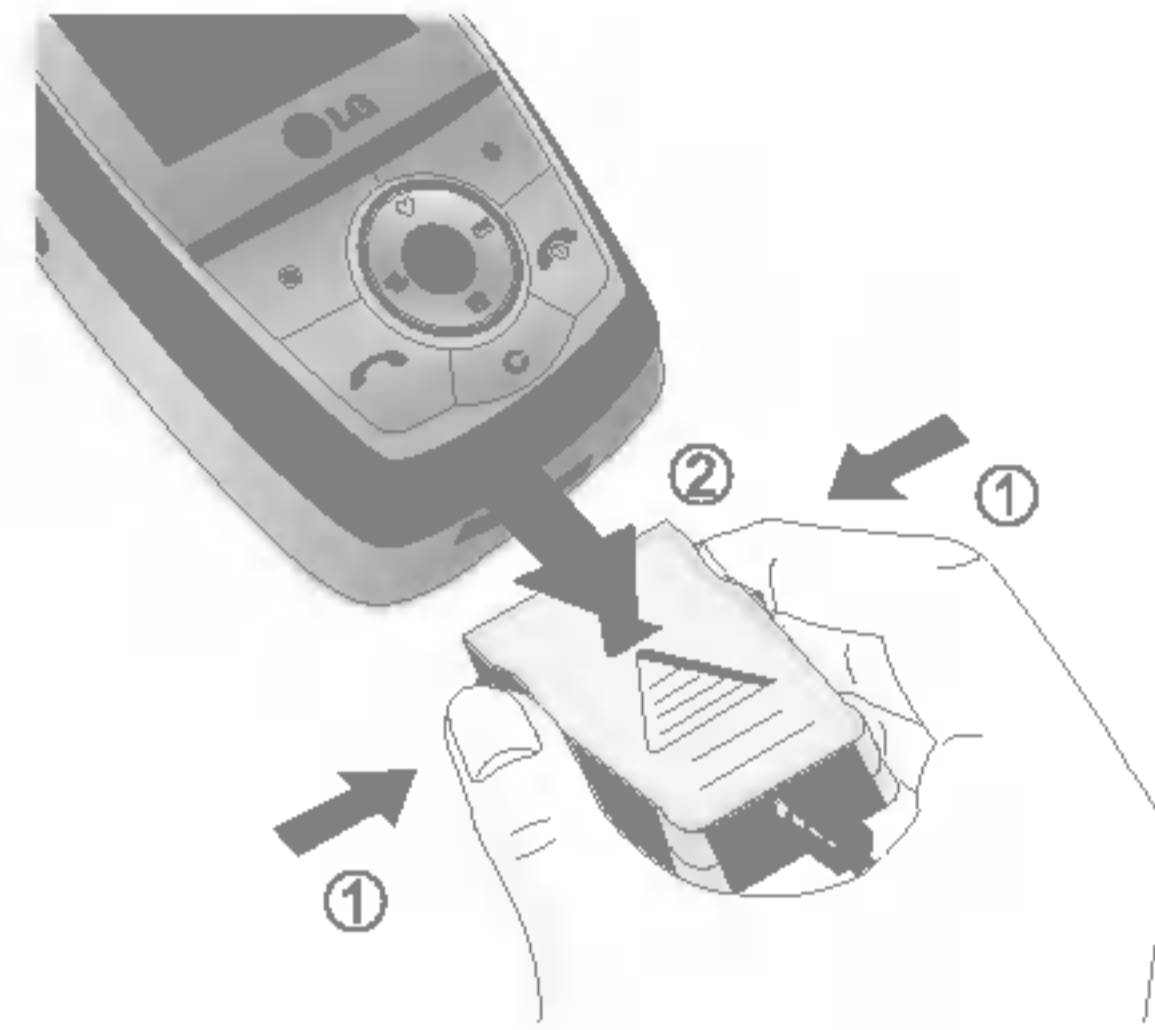
**Note**

- ▶ Ensure the battery is fully charged before using the phone for the first time.
- ▶ Do not remove the battery or SIM card while charging.
- ▶ In the case the battery is not properly charged, please turn the phone off and on using the power key. Then detach and reattach the battery, and recharge the phone.

# Getting started

## Turning your phone on and off

### Turning your phone ON

1. Install a battery to the handset and connect the phone to an external power source such as the travel adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press and hold  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the **PIN code request** setting you may need to enter your PIN code.

### Turning your phone OFF

1. Press and hold  for a few seconds until the LCD screen is turned off.

## Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 7-4-6].

### PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **Enable**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Disable**, your phone connects to the network directly without the PIN code.

### PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network operator for further information.

## PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to unlock a PIN blocked phone. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

## PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, please contact your network operator.

## Security code (4 to 8 digits)

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.




## Barring password

The barring password is required when you use the **Call barring** function. You can obtain the password from your network operator when you subscribe to this function.



# General Functions

## Making and answering calls



### Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code.
  - ▶ Press and hold the clear key (  ) to erase the entire number.
3. Press the send key (  ) to call the number.
4. To end the call, press the end key (  ) or the right soft key.


### Making a call from the call history list

1. In standby mode, press the send key (  ), and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation keys.
3. Press  to call the number.


## Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  to call the number.


## Ending a call

When you have finished your call, press the end (  ) key.

## Making a call from the phonebook

You can save the names and phone numbers dialed regularly in Contacts. You can save them to the SIM card and/or phone memory. You can dial a number by simply looking up the desired name in the phonebook and pressing the (  ) key.

## Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys (  ). Press the up side key to increase and down side key to decrease the volume.

### Note


- ▶ In standby mode with the phone open/closed, pressing the side keys adjusts the key tone volume.

## Answering a call


When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name/photo if saved in the phonebook) is displayed.

1. To answer an incoming call, open the phone. (When **Slide open** has been set as the answer mode. [Menu 7-3-2].)


### Note

- ▶ If Press any key has been set as the answer mode any key press will answer a call except for the  or the right soft key.

- ▶ You can answer a call while using the address book or other menu features.

2. To end the call, close the phone or press the  key.

## Using the Speakerphone

You can use the integrated Speakerphone during a call by pressing the  key. The loudspeaker is automatically deactivated when you end the call.


### Warning!

- ▶ Due to higher volume levels, don't place the phone near your ear while the speakerphone is enabled.

## Manner mode (Quick)

You can activate the manner mode by pressing and holding down the  key after opening the phone.

## Signal strength

You can check the strength of your signal by the signal indicator (  ) on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

# General Functions

## Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting.

The following text input methods are available in the phone.


### T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.


### ABC mode


This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

### 123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.


## Changing the text input mode

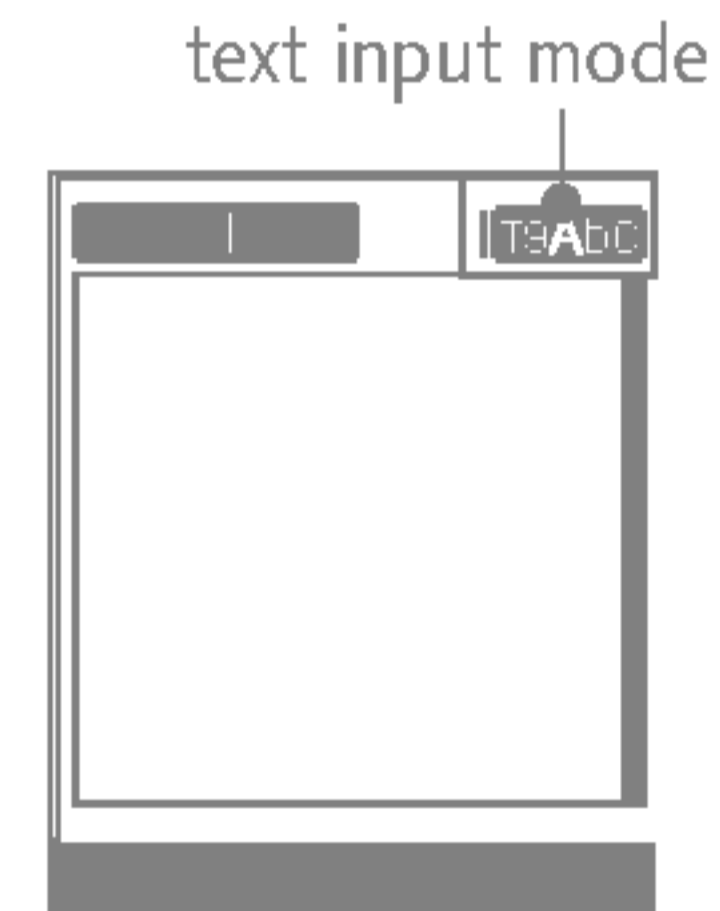

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the top right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the top right corner of the LCD screen.



### Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.




You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary. You can turn the T9 mode on or off, and change the T9 language by holding down the (  ) key.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
  - ▶ The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
  - ▶ If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.


**Example:** Press     to type **Good**.

Press     [down navigation key] to type **Home**.

- ▶ If the desired word is missing from the word choice list, add it using the ABC mode.

- ▶ You can select the language of the T9 mode. Press the left soft key [Option], then select **T9 languages**. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.
2. Enter the whole word before editing or deleting any keystrokes.
  3. Complete each word with a space by pressing the  key. To delete letters, press . Press and hold down  to erase entire words.

### Note




- ▶ To exit from the text input mode without saving your input, press . The phone goes back to standby mode.

### Using the ABC mode

Use the  to  keys to enter your text.











1. Press the key labelled with the required letter:
  - ▶ Once for the first letter.
  - ▶ Twice for the second letter.
  - ▶ And so on.

# General Functions

- To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.


## Note

- Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper Case	Lower Case
	., / ? ! - : ' " 1	., / ? ! - : ' " 1
	ABC2	abc2
	DEF3	def3
	GHI4	ghi4
	JKLM5	ijkl5
	MNO6	mno6
	PQRS7	pqrs7
	TUV8	tuv8
	WXYZ9	wxyz9
	Space 0	Space 0

## Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode. You can quickly switch from letters to numbers by pressing and holding down the () key.

## Contacts

You can store phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can store up to 1000 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Contacts** menu.

## In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

## During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.


## Making a second call

You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the phonebook during a call, press the right soft key then select **Add new**.


## Switching between two calls

To switch between two calls, press the left soft key then select **Swap**.

## Answering an incoming call


To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call waiting** [Menu 7-3-4].

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting the left soft key, then **Hold & Answer**. You can end the current call and answer the waiting call by selecting the left soft key and then **End & Answer**.

## Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key [Menu] key and selecting the **Conference/Reject** or by pressing the .

## Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.

# General Functions


## Switching DTMF tones on during a call

To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.

## Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

## Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting **Swap**.

## Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference/Join all**.

## Putting a conference call on hold

Press the left soft key, then select the **Conference/Hold all**.

## Activate the conference call on hold

Press the left soft key, then select the **Conference/Join all**.

## Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference/Join all**.


## Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

## Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference/Private** to put all the other callers on hold.

## Ending a conference call

The currently displayed caller from a conference call can be disconnected by pressing the  key. To end a conference call, press the left soft key, then select the **Conference/End multiparty**.

After pressing the left soft key, selecting **Conference/End all** will end all the active and on-hold calls.

# Menu Tree

<b>1. Profiles</b>
1.1 Vibrate only
1.2 Silent
1.3 General
1.4 Loud
1.5 Headset
<b>2. Call register</b>
2.1 Missed calls
2.2 Received calls
2.3 Dialed calls
2.4 Delete recent calls
2.5 Call charges
2.5.1 Call duration
2.5.2 Call costs
2.5.3 Settings
2.6 GPRS information
2.6.1 Call duration
2.6.2 Data volumes

<b>3. Tools</b>
3.1 Alarm clock
3.2 Bluetooth
3.2.1 Paired devices
3.2.2 Handsfree devices
3.2.3 Settings
3.3 Calculator
3.4 Unit converter
3.5 World time
3.6 Modem

<b>4. Organiser</b>
4.1 Contacts
4.1.1 Search
4.1.2 Add new
4.1.3 Caller groups
4.1.4 Speed dial
4.1.5 Settings
4.1.6 Copy all
4.1.7 Delete all
4.1.8 Information
4.2 Calendar
4.2.1 Add new
4.2.2 View daily schedules
4.2.3 Delete past
4.2.4 Delete all
4.2.5 Go to date
4.2.6 Set alarm tone
4.3 Memo

<b>5. Messages</b>
<b>5.1 New message</b> 5.1.1 Write text message 5.1.2 Write multimedia message
<b>5.2 Inbox</b>
<b>5.3 Outbox</b>
<b>5.4 Drafts</b>
<b>5.5 Listen to voice mail</b>
<b>5.6 Info message</b> 5.6.1 Read 5.6.2 Topics
<b>5.7 Templates</b> 5.7.1 Text templates 5.7.2 Multimedia templates 5.7.3 My business card
<b>5.8 Settings</b> 5.8.1 Text message 5.8.2 Multimedia message 5.8.3 Voice mailbox number 5.8.4 Info message 5.8.5 Push messages

<b>6. Multimedia</b>
<b>6.1 Camera</b>
<b>6.2 Video camera</b>
<b>6.3 My photos</b>
<b>6.4 My video</b>
<b>6.5 MP3</b> 6.5.1 MP3 player 6.5.2 Playlist 6.5.3 Settings
<b>6.6 Voice recorder</b> 6.6.1 Record 6.6.2 View list
<b>6.7 Settings</b> 6.7.1 Camera 6.7.2 Video camera

<b>7. Settings</b>
<b>7.1 Date &amp; Time</b> 7.1.1 Date 7.1.2 Time
<b>7.2 Phone settings</b> 7.2.1 Display settings 7.2.2 Theme Settings 7.2.3 Language
<b>7.3 Call settings</b> 7.3.1 Call divert 7.3.2 Answer mode 7.3.3 Send my number 7.3.4 Call waiting 7.3.5 Minute minder 7.3.6 Auto redial



# Menu Tree

<b>7.4 Security settings</b> <ul style="list-style-type: none"><li>7.4.1 PIN code request</li><li>7.4.2 Handset lock</li><li>7.4.3 Auto key lock timeout</li><li>7.4.4 Call barring</li><li>7.4.5 Fixed dial number</li><li>7.4.6 Change codes</li></ul>
<b>7.5 Network settings</b> <ul style="list-style-type: none"><li>7.5.1 Network selection</li><li>7.5.2 Band selection</li></ul>
<b>7.6 GPRS setting</b>
<b>7.7 Reset settings</b>
<b>7.8 Memory status</b> <ul style="list-style-type: none"><li>7.8.1 Internal memory</li><li>7.8.2 Multimedia memory</li></ul>

<b>8. Service</b>
<b>8.1 Internet</b> <ul style="list-style-type: none"><li>8.1.1 Home</li><li>8.1.2 Bookmarks</li><li>8.1.3 Go to URL</li><li>8.1.4 Settings</li></ul>
<b>8.2 SIM service</b>

<b>9. Downloads</b>
<b>9.1 Games &amp; Apps</b> <ul style="list-style-type: none"><li>9.1.1 Games &amp; Apps</li><li>9.1.2 Profiles</li></ul>
<b>9.2 Images</b>
<b>9.3 Sounds</b>
<b>9.4 File storage</b>

# Selecting Functions and Options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in the menus and sub-menus, accessed via the two soft keys marked [  ] and [  ]. Each menu and sub-menu lets you view and alter the settings of a particular function.

The role of the soft keys vary according to the current context or the label on the bottom line of the screen just above each key indicates its current role.



Press the left soft key to access the available menu.


Press the right soft key to access the available Contacts.

# Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups. There are five preset profiles: **Vibrate only**, **Silent**, **General**, **Loud** and **Headset**. Each profile can be personalised. Press the left soft key **[Menu]** and select **Profiles** using up/down navigation keys.


## Activate

Menu 1.x.1

1. A list of profiles is displayed.
2. In the **Profiles** list, scroll to the profile you want to activate and press the left soft key  **[OK]** or OK key.
3. Then, select **Activate**.

## Personalise

Menu 1.x.2

Scroll to the desired profile in the Profile list. After pressing the left soft key  or the OK key, select **Personalise**. The profile setting option opens. Set the options as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tone:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ringing tone.

### Note

- ▶ To protect the sense of hearing while Slide open, maximum volume level is 3.

- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tone:** Select the alert tone for messages.
- ▶ **Keypad tone:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Slide tone:** Allows to set the slide tone for adjusting environment.
- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.



## Rename

Menu 1.x.3

You can rename a profile and give it any name you want.

### Note

► **Vibrate only**, **Silent** and **Headset** profiles cannot be renamed.

1. To change the name of a profile, scroll to the profile in the profile list and after pressing the left soft key  or the OK key, select **Rename**.
2. Key in the desired name and press the OK key or the left soft key  [OK].

# Call register

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

## Missed calls

Menu 2.1

This option lets you view the last 10 unanswered calls. You can also:

- ▶ View the number if available and call it, or save it in the phonebook
- ▶ Enter a new name for the number and save both in the phonebook
- ▶ Send a message to this number
- ▶ Delete the call from the list

## Received calls

Menu 2.2

This option lets you view the last 10 incoming calls. You can also:

- ▶ View the number if available and call it, or save it in the phonebook
- ▶ Enter a new name for the number and save both in the phonebook
- ▶ Send a message to this number
- ▶ Delete the call from the list

## Dialled calls

Menu 2.3

This option lets you view the last 20 outgoing calls (called or attempted).

You can also:

- ▶ View the number if available and call it or save it in the phonebook
- ▶ Enter new name for the number and save both in the phonebook
- ▶ Send a message to this number
- ▶ Delete the call from the list

## Delete recent calls

Menu 2.4


Allows you to delete **Missed calls** and **Received calls** lists. You can delete **Dialled calls** and **All calls** lists at one time.

## Call charges

Menu 2.5

### Call duration (Menu 2.5.1)

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call times. The following timers are available:

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and incoming calls since the timer was last reset.
- ▶ **Received calls:** Length of the incoming calls.
- ▶ **Dialled calls:** Length of the outgoing calls.
- ▶ **Reset all:** Allows you to reset the timers of all calls by pressing the left soft key  [Yes].

## Call costs (Menu 2.5.2)

Allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need to know your PIN2 code.

### Settings (Menu 2.5.3)

(SIM Dependent)

- ▶ **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.
- ▶ **Set credit:** This network allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining unit is shown. If you select **Change**, you can change your change limit.
- ▶ **Auto display:** This network service allows you to see automatically the cost of your last calls. If set to **On**, you can see the last cost when the call is released.

# Call register

## GPRS information

Menu 2.6

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.

### Call duration (Menu 2.6.1)

You can check the duration of **Last call** and **All calls**. You can also reset the call timers.



### Data volumes (Menu 2.6.2)

You can check the **Sent(Last/All)**, **Received(Last/All)** or **All** data volumes and **Reset all**.

## Alarm clock

Menu 3.1

You can set up to 5 alarm clocks to go off at a specified time.

1. Select **On** and enter the alarm time you want.
2. Select the repeat period: **Once, Mon~Fri, Mon~Sat, Everyday.**
3. Select the alarm tone you want and press  [OK].
4. Edit the alarm name and press  [OK].

## Bluetooth

Menu 3.2

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires. This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

When you receive data from another Bluetooth device, the phone requests for a confirmation. After confirming the transfer, the file will be copied in your phone.

Depending on the file type, it will be stored in the following folders:

- ▶ **MP3:** MP3 folder (Menu 6.5.2)
- ▶ **Video (.3GP):** video folder (Menu 6.4)
- ▶ **Phonebook contacts (.VCF):** Phonebook (Menu 4.1.1)
- ▶ **Other files:** File storage folder (Menu 9.4)

### Note

- ▶ Due to a compatibility problem, some devices may not support this function.
- ▶ Supported Bluetooth software (Bluetooth stacks) for DUN :
  - WIDCOMM Bluetooth for Windows 1.4 and 3.0

## Paired devices (Menu 3.2.1)

You can view all devices which are compatible with your Bluetooth phone.

## Handsfree devices (Menu 3.2.2)

You can view the list of handsfree devices which are compatible with your Bluetooth phone.

# Tools




## Settings (Menu 3.2.3)

You can register a new device which is compatible with Bluetooth. If you already have added the device, you can connect to it after entering a password (usually 0000).




## Calculator

Menu 3.3

This contains the standard functions such as +, −, ×, ÷ : **Addition, Subtraction, Multiplication, and Division.**

1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press the left soft key  [Result] to view the result.
5. Press the left soft key  [Reset] or enter numbers to repeat the procedure above.
6. To end **Calculator**, press the right soft key  [Back].




## Note

- ▶ Use  key to erase any numbers or signs. If you press  key, you can input a minus number. In addition, press  key, you can input a decimal number.

## Unit converter

Menu 3.4



This converts any measurement into a unit you want.

1. You can select one of unit types by pressing  [Unit] key.
2. Select the unit you want to convert by pressing  and .
3. You can check the converted value for the unit you want.

## World time

Menu 3.5

You can view clocks of the world's major cities.

1. Select the city belonged to the time zone by pressing  key.
2. You can set the current time to the city time you select by pressing the left soft key  [Set].

# Modem

Menu 3.6


You can access the network services through Modem. If you want to use PCsync, Contents banks, Internet Cube, you should access the menu and activate the modem and then plug in the USB cable.

# Organiser

## Contacts

Menu 4.1

### Note

- ▶ In standby mode, press right soft key  [Contacts] to access directly.


## Search (Menu 4.1.1)

### (Calling from phonebook)

1. Select **Search** by press the left soft key  [Select] or [OK].

### Note







- ▶ Instant searching is available by inputting the initial letter of the name you want to search.

2. If you want to edit, delete or copy an entry, select the left soft key  [Options]. The following menu will be displayed.

- ▶ **Edit:** You can edit the name, number, group, character and picture by using the navigation key.
- ▶ **Write text/multimedia message:** After you have found the number you want, you can send a text/multimedia message to the selected number.
- ▶ **Send via Bluetooth:** You can send the data of phone book to devices which is compatible with Bluetooth through Bluetooth.
- ▶ **Copy:** You can copy an entry from SIM to phone or from phone to SIM.
- ▶ **Main number:** You can select the one out of mobile, home, office that you often use. After you set this, the main number will be displayed first, when you search.
- ▶ **Delete:** You can delete an entry.

## Add new (Menu 4.1.2)

You can add phonebook entry by using this function. Phone memory capacity is 1000 entries. SIM card memory capacity depends on the service provider. The number of characters you can save in the SIM card is a SIM dependent feature.



1. Select **Add new** by pressing the left soft key  [Select] or [OK].
2. Select the memory you want to save to: **SIM** or **Phone**. If you set to Phone, you need to select which number you want as Main number.
  - a. Press  [OK] to input a name.
  - b. Press  [Save], then you can input a number.
  - c. Press  [Save].
  - d. You can set a group for the entry by pressing .
  - e. You can set a character and a picture for the entry by pressing .



## Caller groups (Menu 4.1.3)

You can add up to 20 members per group, with up to a maximum of 7 groups in total.

- ▶ **Member list:** Shows the group members you have selected.
- ▶ **Group ring tone:** Allows you to specify ring tone for the group members' call.
- ▶ **Group icon:** Allows you to select the icon dependent on Group.
- ▶ **Add member:** You can add group members. Each group should not exceed 20 members.
- ▶ **Remove member:** You can remove the member from the Group member list. But the name and the number will remain in the phonebook.
- ▶ **Rename:** You can change a group name.



## Speed dial (Menu 4.1.4)

Assign contacts to any of the keys  to . You can then call that contact by pressing the corresponding number key.

1. Open the phonebook first by pressing the Right soft key  [Contacts] in standby mode.
2. Scroll to **Speed dial**, then press the left soft key  [OK].
3. If you want to add Speed dial, select **(empty)**. Then, you can search the name in phonebook.
4. After assigning the number as speed dial, you can change and delete the entry. You can also make a call or send a message to this number.

# Organiser

## Settings (Menu 4.1.5)

1. Press the right soft key  [Contacts] in standby mode.
2. Scroll to Settings, then press the left soft key  [OK].

### ► Set memory

Scroll to highlight **Set memory**, and then press the left soft key  [OK].

- If you select **Variable**, when adding entry, the phone will ask whether you wish to store on the sim or phone.
- If you select **SIM** or **Phone**, the phone will store an entry to SIM or phone.

### ► View options



Scroll to highlight **View options**, and then press the left soft key  [OK].

- **Name only:** Set the phonebook list by displaying the name only.
- **With pictures:** Set the phonebook list with the information of character and picture.

- **Name & number:** Set the phonebook list by displaying the name and number.






## Copy all (Menu 4.1.6)

You can copy/move entries from SIM card memory to Phone memory and vice versa.

1. Open the Phonebook first by pressing the right soft key  [Contacts] in standby mode.
2. Scroll to **Copy all**, and then press the left soft key  [OK] to enter this menu.
  - **SIM to Phone:** You can copy/move the entries from SIM Card to Phone memory.
  - **Phone to SIM:** You can copy/move the entries from Phone memory to SIM Card.
3. You can see the following submenus.
  - **Keep original:** When copying, the Original Dial Number is kept.
  - **Delete original:** When copying, the Original Dial Number is erased.

## Delete all (Menu 4.1.7)



You can delete all entries in the SIM and Phone. This function requires the Security code.

1. Press the right soft key  [Contacts] in standby mode and select Delete all, press  [OK].
2. Highlight the memory you wish to erase, and then press the left soft key () [OK].
3. Enter the security code and press the left soft key  [OK] or the right soft key  [Back].

## Information (Menu 4.1.8)

### ► Service dial number

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).




1. Open the phonebook first by pressing the right soft key  [Contacts] in standby mode and select **Information**.
2. Scroll to **Service dial number**, then press the left soft key  [OK] to enter.

3. The names of the available services will be shown.

4. Use  and  to select a service. Press  [Send].

### ► Memory status

This feature allows you to see how many entries are in use, or free in your phonebook.

1. Open the phonebook first by pressing the right soft key  [Contacts] in standby mode. Select Information by pressing the left soft key  [OK].
2. Scroll to **Memory status**, then press the left soft key  [OK].

### ► Own number (SIM dependent)

You can check and save your own number in the SIM card.





# Organiser


## Calendar

Menu 4.2


When you enter this menu a Calendar will be displayed. The month and year are shown at the top of the screen. Whenever you change the date under the Settings menu, the calendar will update automatically. The current date will be highlighted in green and any schedule or memos will be indicated with a red triangle at the top left hand corner of the corresponding square. An audible alarm can be set for memo's and reminders.

To change the day, month, and year.

Key	Description
	Yearly
	Monthly
	Weekly
	Daily

In the scheduler mode, press left soft key  [Options] as follows;

## Add new (Menu 4.2.1)

Allows you to add a new schedule for the chosen day. Input the subject and then press the left soft key  [OK].

## View daily schedules (Menu 4.2.2)

You can refer to a detailed schedule, that is the whole contents of the schedule configured by you.

## Delete past (Menu 4.2.3)

You can delete the past schedule that is no longer required.

## Delete all (Menu 4.2.4)

You can delete all notes.

## Go to date (Menu 4.2.5)




You can go to the chosen date directly.

## Set alarm tone (Menu 4.2.6)


You can set the alarm tone.

## Memo

Menu 4.3

1. Select the Memo by pressing the left soft key  [OK].
2. If the entry is empty, add new by pressing the left soft key  [Add].
3. Input the memo and then press the left soft key  [OK].

### Note

- ▶ If you want to change the text input mode, press the  in order.

# Messages




Press the Menu key (  ) and select Messages using navigation keys.

## New message

Menu 5.1

### Write text message (Menu 5.1.1)

Your phone receives voice mail notification messages and Short Message Service(SMS) messages. Voice mail and SMS are network services. Please contact your network operator for more information.

When the  icon appears, you have received a new voice mail. When the icon  appears, you have received a new text message. If the message memory is full, a message is displayed, the  icon flashes and you cannot receive any new messages. Use the Delete option in the Inbox menu to delete obsolete messages.

Once there is space in the message memory, any undelivered SMS messages will be received (provided sufficient space is available).

1. Key in your message. For details on how to enter text, refer to page 24 through 26 (Entering Text).
2. After you complete the message, to select the required option, press the left soft key [Options].

The following options are available.

- ▶ **Send:** Enter the number or select the number from the phonebook or the recent numbers. You can send a message up to 6 phone numbers at a time. Press the left soft key [Options]. The following options will be displayed.
  - ① Send (It only shows after a phone number is entered)
  - ② Recent numbers
  - ③ Search
- ▶ **Save to drafts:** Allows you to save the message so that it can be sent later.
- ▶ **Font:** Sets the font size and style.
- ▶ **Colour:** You can also set colour of the text (foreground) and the background.
- ▶ **Alignment:** You can set the position of the message - Right, Centre or Left.

- ▶ **Add T9 dictionary:** You can add your own words. This menu will only be shown when the edit mode has been set to T9ABC/T9Abc/T9abc.
  - ▶ **T9 languages:** Select the desired language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
  - ▶ **Exit:** If you select this whilst writing a message, you will be taken back to the message menu. Also the written message will not have been saved.
3. You can also send attachments with the message by pressing the right soft key [Insert], while you're entering a message.
- ▶ **Images:** You can send and receive text messages that contain pictures, known as 'picture messages'. Several preset pictures are available in the phone and they can be replaced with new ones received from other sources.
  - ▶ **Sounds:** If available, you can attach a sound available for a short message.
  - ▶ **Text templates:** You can use text templates already set in the phone.

- ▶ **Contacts:** You can add phone numbers in the message.
- ▶ **Symbol:** You can attach special characters.
- ▶ **My business card:** You can attach your name card.

### Write multimedia message (Menu 5.1.2)

A multimedia message can contain text, images, and/or sound clips. This feature can be used only if it is supported by your network operator or service provider. Only devices that offer compatible multimedia message or e-mail features can receive and send multimedia messages.

1. Key in the multimedia message. Using the right soft key, you can input symbols and numbers, or use T9 input mode. After the multimedia message input, press the left soft key [OK].
2. Add an image and/or sound. You can move to the next section using the up/down navigation.
3. You can add a slide by option menu using the left soft key. If press the left key and select "Add slide" from the option menu, you can add the new slide.

# Messages

4. Press the left soft key [Options]. The following options are available.

- ▶ **Send:** Supports multiple numbers and email addresses.
- ▶ **Preview:** Displays the multimedia message you wish to send.
- ▶ **Save:** Saves the multimedia message in drafts or as a template.
- ▶ **Add slide:** Adds a slide before or after the current slide.
- ▶ **Move to slide:** Moves to the next or previous slide.
- ▶ **Delete slide:** Deletes the selected slide.
- ▶ **Set slide format**
  - **Set timer:** You can set the timer for slide, text, picture and sound.
  - **Swap text and picture:** You can switch the position of picture and text of the message.
- ▶ **Remove media:** You can remove a picture or sound in the slide. This option can be shown only when any media file has been added.

- ▶ **Add T9 dictionary:** You can add your own word. This menu will only be shown when the edit mode has been set to T9ABC/T9Abc/T9abc.

- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.

- ▶ **Exit:** If you select this whilst writing a message, you will be taken back to the message menu. Also the written message will not have been saved.









5. Press the right soft key [Insert]. You can insert a symbol, photo, or create a new photo, sound, new sound, template, My Business card and Contacts.

## Inbox

Menu 5.2

You will be alerted when you have received messages. They will be stored in the Inbox.

In the Inbox, you can identify each message by icons. For detail, see the icon directive.

Icon	Icon directive
	Multimedia message
	Short message
	SIM message
	Read multimedia message
	Read text message
	Push message
	Read push message
	Notified multimedia message

If the phone shows 'No space for SIM message', you only have to delete the SIM messages from the Inbox. If the phone displays 'No space for message', you will

then need to delete messages, media or applications to free up space.

### SIM message

SIM message means that the message is exceptionally stored in the SIM card. You can move this message to the phone.

When you are notified that you have received a multimedia message, you have to wait for the message to be downloaded before you can view it.

To read a message, select one of the messages by pressing the left soft key .

- ▶ **View:** You can view the received messages.
- ▶ **Delete:** You can delete the current message.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** You can call back to the sender.

# Messages

- ▶ **Information:** You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- ▶ **Delete all:** You can delete all messages.

## Specific MMS options

- ▶ **Repeat:** Allows you to repeat reproduction of the selected multimedia message.
- ▶ **Receive:** (for multimedia message notification only). Multimedia messages, unlike text messages, must be downloaded from the server automatically or manually. The network initially sends multimedia message notification: If the Auto retrieve option is off or an error has occurred, receipt must be confirmed by selecting [Receive]. If the Auto retrieve option is on, the message is automatically downloaded after receipt of notification.

## Specific download message options







- ▶ **Information:** Shows the content of the downloaded messages.

- ▶ **Load:** Launches the WAP connection to the URL contained in the download message. The phone must be configured for WAP services to download messages.

## Outbox

Menu 5.3

You can see the sent and unsent messages here. For sent messages, you can see the delivery status. The browsing is same as that for the inbox message.

Icon	Icon directive
	MMS Sent
	MMS Unsent
	MMS delivery confirmed
	SMS sent
	SMS unsent
	SMS delivery confirmed

### When you already sent the message:

- ▶ **View:** You can view the sent messages.

- ▶ **Forward:** You can forward the current message to other recipients.
- ▶ **Delete:** You can delete the current message.
- ▶ **Information:** You can view information about outbox messages; Recipient's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- ▶ **Delete all:** You can delete all messages in the outbox.

#### When you didn't send the message:

- ▶ **View:** You can view messages you didn't.
- ▶ **Delete:** You can delete the current message.
- ▶ **Send:** You can send the message.
- ▶ **Information:** You can view information about outbox
- ▶ **Send all:** You can send all the messages that have not been sent.
- ▶ **Delete all:** You can delete all messages that have not been sent.

## Drafts

Menu 5.4

Using this menu, you can preset up to five multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.


- ▶ **View:** You can see the multimedia messages.
- ▶ **Edit:** Allows you to modify the chosen message.
- ▶ **Delete:** Deletes the message you choose.
- ▶ **Information:** To view the information of the message.
- ▶ **Delete all:** Deletes all of the messages in the folder.

## Listen to voice mail

Menu 5.5

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your network operator.

# Messages

When new voice message is received, the  symbol will be displayed on the screen. Please check with your network provider for details of their service in order to configure the handset correctly.

## Info message

Menu 5.6

(Dependant to network and subscription)

Info service messages are text messages sent by the network to mobile phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly. In standby mode, the following options are available when viewing info service messages.

## Read (Menu 5.6.1)

When you have received broadcast messages and select **Read** to view the message, it will be displayed on the screen.

## Topics (Menu 5.6.2)

To create new topics, press the left soft key [Option] then select **Add new**. If you already have topics, you can deactivate, edit, or delete them by using the left soft key [Options].

## Templates

Menu 5.7

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Two types of templates are available: Text and Multimedia.

## Text templates (Menu 5.7.1)

- Please call me back.
- I'm late. I will be there at
- Where are you now?
- I am on the way.
- Top urgent. Please contact.
- I love you.

The following options are available.

- ▶ **View:** Views the selected message.
- ▶ **Delete:** Deletes the template.
- ▶ **Add new:** Uses this to create new template.
- ▶ **Send via:** To send via Text message or Multimedia message.
- ▶ **Edit:** Use this to edit the selected template.
- ▶ **Delete all:** Deletes all templates.

## Multimedia templates (Menu 5.7.2)

You can use the following options.

- ▶ **Preview:** Displays the draft multimedia message.
- ▶ **Save:** Saves multimedia messages as templates.
- ▶ **Edit subject:** You can edit the subject.
- ▶ **Add Slide:** Adds a slide before or after the current slide.
- ▶ **Move to slide:** Moves to the next or previous slide.
- ▶ **Delete slide:** Deletes the highlighted slide.

- ▶ **Set slide format:** Sets the timer for slide, text, or to align the message contents right, left, top and bottom.
- ▶ **Remove media:** You can remove a picture or sound in the slide. This option can be shown only when any media file has been added.
- ▶ **Add T9 dictionary:** You can add our own word. This menu can be shown only when the edit mode is Predictive.
- ▶ **T9 languages:** Selects T9 input mode.
- ▶ **Exit:** Exits the menu.

## My business card (Menu 5.7.3)

This option helps you to make your own name card. Key in the name, mobile phone number, office number, Fax number, and E-mail address.

## Settings

Menu 5.8

### Text message (Menu 5.8.1)

#### ▶ Message types:

**Text, Voice, Fax, Natl. paging, X.400, Email, ERMES**

Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to **Yes**, you can check whether your message is sent successfully.
- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill. This feature is not supported by some network operators.
- ▶ **SMS centre:** If you want to send the text message, you can receive the address of SMS centre through this menu.

### Multimedia message (Menu 5.8.2)

- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity period:** This network service allows you to set how long your multimedia messages will be stored at the message centre.
- ▶ **Delivery report:** If it is set to **Yes** in this menu, you can check whether your message is sent successfully.
- ▶ **Auto retrieve:** If you select **on**, you receive multimedia messages automatically. If you select **Off**, you receive only notification message in the inbox and then you can check this notification. If you select **Home network only**, you receive multimedia messages depends on Homenetwork.
- ▶ **Network settings:** If you select multimedia message server, you can set URL for multimedia message server.
- ▶ **Permitted message types**
  - Personal:** Personal message.
  - Advertisements:** Commercial message.
  - Information:** Necessary information.

## Voice mailbox number (Menu 5.8.3)

You can receive the voicemail if your network service provider supports this feature. When a new voicemail has arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

- ▶ **Home:** You can listen to voice mails by selecting Home.
- ▶ **Roaming:** Even when you are in abroad, you can listen to voice mails if a roaming service is supported.

## Info message (Menu 5.8.4)

### ▶ Receive

**Yes:** If you select this menu, your phone will receive Info service messages.

**No:** If you select this menu, your phone will not receive Info service messages any more.

### ▶ Alert

**Yes:** Your phone will beep when you have received Info service message numbers.

**No:** Your phone will not beep even though you have received info service messages.

### ▶ Languages

You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.

## Push messages (Menu 5.8.5)

You can set the option whether you will receive the message or not.

### ▶ Receive

**Receive on:** Receive all push messages.

**Receive off:** Does not receive all push messages.

### ▶ Auto download

**On:** The push message is downloaded automatically.

**Off:** To download the push message, use user interaction.

# Multimedia

## Camera

Menu 6.1

This application enables you to take a still picture. You can take a picture in your desired size, and use it for the contacts photo, home screen and other more general purposes. Once taken, a still image can be sent via Multimedia msg or Email.

Press the left soft key [Options] to display the following popup menu items.

- ▶ **Brightness:** Determines the brightness.
- ▶ **Size:** Determines the size of an image.
- ▶ **Timer:** Determines the delay time.
- ▶ **Quality:** Determines the quality of an image.
- ▶ **White Balance :** Allows you to change the settings according to the environment.
- ▶ **Album:** Shows the still images taken.
- ▶ **Exit:** To exit the Camera.
- ▶ **Mode:** Determines whether to take a single or multishot photo.
- ▶ **Effect:** Determines the special effect to the picture.
- ▶ **Flash:** Determines the flash operation.

- ▶ **Zoom:** Determines the zoom rate.

### Note

- ▶ Frame shots are only available with the 128x160 pixel resolution.

## Video Camera

Menu 6.2

This application enables you to record a video clip. You can play and watch a saved video file while using this function. Once recorded, a video clip can be sent via Multimedia message or Email.

Press the left soft key [Options] to display the following popup menu items.

- ▶ **Brightness:** Determines the brightness.
- ▶ **Size:** Determines the size of an image.
- ▶ **Timer:** Determines the delay time.
- ▶ **Quality:** Determines the quality of a video clip.
- ▶ **White Balance :** Allows you to change the settings according to the environment.
- ▶ **Record Time:** Determines the recording time.
- ▶ **Album:** Shows the video clips recorded.

- ▶ **Exit:** To exit the Video camera.
- ▶ **Effect:** Determines the special effect to the video clip.
- ▶ **Flash:** Determines the flash operation.
- ▶ **Zoom:** Determines the zoom rate.

## My Photos

Menu 6.3

You can view and send a picture. In addition, you can set the picture as a wallpaper.

### Options

- ▶ **Multi view:** You can view the maximum of 9 thumbnails in a screen.
- ▶ **Send via Bluetooth:** You can send a picture via Bluetooth.
- ▶ **Write multimedia messages:** You can send a picture via MMS.
- ▶ **Set as wallpaper:** You can set a picture as a wallpaper.
- ▶ **Slide show:** This menu allows you to view as a slide show automatically.
- ▶ **Delete:** You can delete a picture.

- ▶ **Edit title:** You can edit the title of picture.
- ▶ **Information:** You can view the information about Title, Size, Date and Time you've taken.

## My Video

Menu 6.4

You can play and send a video.

### Options

- ▶ **Play:** Play the video
- ▶ **Send via Bluetooth:** You can send the video by bluetooth.
- ▶ **Rename:** You can edit the title of video.
- ▶ **Delete:** You can delete the video.
- ▶ **Delete All:** You can delete all the videos.
- ▶ **Information:** You can view the information of the video.

## MP3

Menu 6.5

The S5200 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on your phone memory using a compatible headset or via the internal loudspeaker.

### Note

- ▶ Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The music player supports:

- ▶ MPEG-1 Layer III, MPEG-2 Layer III, MPEG-2.5 Layer III Sampling frequency up from 8KHz to 48KHz. Bit rate up to 320Kbps, stereo.
- ▶ **AAC:** ADIF, ADTS formats (Sampling frequency from 8KHz to 48KHz)
- ▶ **AAC+:** V1 : (Bit rate 16~128Kbps)  
V2 : (Bit rate 16~48Kbps)  
(Sampling frequency from 8KHz to 48KHz)

- ▶ **MP4 , M4A:** Sampling frequency up from 8KHz to 48KHz, Bit rate up to 320Kbps, stereo.
- ▶ **WMA:** Sampling frequency up from 8KHz to 48KHz, Bit rate up to 320Kbps, stereo.

### Note


- ▶ S5200 doesn't support the variable rate of MP3 and AAC file. Therefore, you can't change the file from VBR MP3 format to AAC.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mass Storage. when you connect the phone to a PC using the USB cable(supplied in the same package), you just try to connect to PC via USB cable. If you use on win98 SE, you have to install Mass storage drive for windows 98 on CD-ROM.

### Note

- ▶ You should copy MP3 to my media\Music folder. If you copy another folder, you cannot see MP3 files.
- ▶ The PC should run Windows 98 SE, Windows ME, Windows 2000, Windows XP operating system.

## MP3 player (Menu 6.5.1)

1. Press MP3 menu, and then select MP3 player.
2. Press the left soft key  [Options] to access the following menus.
  - ▶ **View play list:** You can view the play list on listening to the music.
  - ▶ **Area repeat:** The special area part of the current music is repeated when you select ON of the menu.
  - ▶ **Set as ring tone:** This menu allows to set the MP3 file as a ring tone. You can also set it as a ring tone in Profile.
  - ▶ **Setting**
    - **Equalizer**  
This menu helps you to adjust a variety of environment on listening to the music. This phone supports four preset menus. When you enter this menu, you can view current value of equalizer.
    - **Playmode**  
This menu allows to set the play mode.

- **Set shuffle**

You can listen to MP3 music all randomly.

- **Visual effect**

You can select the visual effect menus: Wave, Guitarist, Aqua. This menu allows to change the background of main LCD and sub LCD on playing MP3 file.

## Playlist (Menu 6.5.2)

This menu allows to view the whole play list. You can move the track by pressing the navigation key. In addition, if you select option menu, you can delete the file or view its information .

### Note

- ▶ The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

## Settings (Menu 6.5.3)



This menu allows to set the following items; Equalizer, Playmode, Set shuffle and Visual effect.

## Voice recorder Menu 6.6

The voice memo feature you to record up to 10 voice messages and each memo is up to 20 Seconds.

### Record (Menu 6.6.1)

You can record a voice memo in the Voice recorder menu.

1. Once recording has started, the message Recording and the remaining time is displayed.
2. If you want to finish recording, press the left soft key  [Save].
3. Key in Voice memo title, press the left soft key  [OK].

### View list (Menu 6.6.2)

The phone shows voice memo list. You can Playback ,Send via multimedia and Delete the recorded voice memo.

## Settings Menu 6.7



### Camera (Menu 6.7.1)

- ▶ **Auto save:** If you set On, the images will be saved automatically without displaying menu bar to save.
- ▶ **Delete all photos:** This menu allows to delete all photos after asking your confirmation.

### Video camera (Menu 6.7.2)

- ▶ **Delete all videos:** This menu allows you to delete all the videos.

You can set the following menus for your convenience and preferences.

1. Press  [Menu] in standby mode.
2. Press  for direct access to enter Settings.

## Date & Time

Menu 7.1

You can set functions relating to the date and time.

### Date (Menu 7.1.1)

- ▶ **Set Date:** You can enter the current date.
- ▶ **Date format:** You can set the Date format such as DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD. (D: Day / M: Month / Y: Year)

### Time (Menu 7.1.2)

- ▶ **Set Time:** You can enter the current time.
- ▶ **Time format:** You can set the time format between 24-hour and 12-hour.

## Phone settings

Menu 7.2

You can set functions relating to the phone.

### Display settings (Menu 7.2.1)

- ▶ **Wallpaper:** You can select the background pictures in standby mode.

#### Default

You can select a picture or an animation of wallpaper by pressing  or .

#### My folder

You can select a picture or an animation as wallpaper.

- ▶ **Standby text:** If you select On, you can edit the text which is displayed in standby mode.
- ▶ **Backlight time:** You can set the light-up duration of the display.
- ▶ **Network name:** If you set ON, Network name (the name of service provider) will be appeared in Internal LCD.

# Settings

## Theme settings (Menu 7.2.2)


Allows you to choose from one of the preset themes.

## Language (Menu 7.2.3)

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

## Call settings

Menu 7.3

You can set the menu relevant to a call by pressing  [OK] in the Setting menu.

## Call divert (Menu 7.3.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

### ▶ All voice calls

Diverts voice calls unconditionally.

### ▶ If busy

Diverts voice calls when the phone is in use.

### ▶ If no reply

Diverts voice calls which you do not answer.

### ▶ If out of reach

Diverts voice calls when the phone is switched off or out of coverage.

### ▶ All data calls

Diverts to a number with a PC connection unconditionally.

### ▶ All fax calls

Diverts to a number with a fax connection unconditionally.

### ▶ Cancel all

Cancels all call divert service.

## The submenus

Call divert menus have the submenus shown below.

### • Activate

Activate the corresponding service.

### To voice mail centre

Forwards to message centre. This function is not shown at All data calls and All fax calls menus.

### To other number

Inputs the number for diverting.

### To favourite number

You can check recent 5 diverted numbers.

- **Cancel**

Deactivate the corresponding service.

- **View status**

View the status of the corresponding service.

## Answer mode (Menu 7.3.2)


- ▶ **Slide open**

If you select this menu, you can receive an incoming call by simply opening slide.

- ▶ **Any key**

If you select this menu, you can receive a call by pressing any key except  [End] key.

- ▶ **Send key only**

If you select this menu, you can receive a call by only pressing  [Send] key.

## Send my number (Menu 7.3.3) (network and subscription dependent)

- ▶ **Set by network**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

- ▶ **On**

You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

- ▶ **Off**

Your phone number will not be shown.

## Call waiting (Menu 7.3.4) (network dependent)

- ▶ **Activate**

If you select Activate, you can accept a waiting (receiving) call.

- ▶ **Cancel**

If you select Cancel, you cannot recognize the waiting (receiving) call.

## ► View status

Shows the status of Call waiting.

## Minute minder (Menu 7.3.5)

If you select **On**, you can check the call duration by a deep sound given every minute during a call.

## Auto redial (Menu 7.3.6)

### ► On

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

### ► Off

Your phone will not make any attempts to redial when the original call has not connected.

## Security settings

Menu 7.4

### PIN code request (Menu 7.4.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press  [OK].

2. Set **On/Off**.

3. If you want to change the setting, you need to enter PIN code when you switch on the phone.

4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in the PUK code.

5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

### Handset lock (Menu 7.4.2)

You can use security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to **On**. If you set phone lock to **Automatic**, your phone will request security code only when you change your SIM card.

## Auto key lock timeout (Menu 7.4.3)

This menu allows to set the time of Auto key lock.

## Call barring (Menu 7.4.4)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

### ▶ All outgoing

The barring service for all outgoing calls.

### ▶ International

The barring service for all outgoing international calls.

### ▶ International when roaming

The barring service for all international outgoing calls except home network.

### ▶ All incoming

The barring service for all incoming calls.

### ▶ Incoming when roaming

The barring service for all incoming calls when roaming.

### ▶ Cancel all

You can cancel all barring services.

### ▶ Change password

You can change the password for Call Barring Service.

### The submenus:

- **Activate**

Allows to request the network to set call restriction on.

- **Cancel**

Set the selected call restriction off.

- **View status**

View the status whether the calls are barred or not.

## Fixed dial number (Menu 7.4.5)

(SIM dependent)

You can restrict your outgoing calls to selected phone numbers.

The numbers are protected by your PIN2 code.

## ▶ Enable

You can restrict your outgoing calls to selected phone numbers.

## ▶ Disable

You can cancel fixed dialling function.


## ▶ Number list

You can view the number list saved as Fixed dial number.

## Change codes (Menu 7.4.6)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person.

You can change the access codes: **PIN2 code**, **Security code**.

1. If you want to change the Security code/PIN/PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN/PIN2 code and verify them.

## Network settings

Menu 7.5

You can select a network which will be registered either automatically or manually. Usually, the network selection is set to **Automatic**.

## Network selection (Menu 7.5.1)

### Automatic

If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected “Automatic”, the phone will be set to “Automatic” even though the power is off and on.

### Manual

The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone will let you select another network if the phone fails to access the selected network.

## Preferred

You can set a list of preferred networks that the phone will attempt to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

## Band selection (Menu 7.5.2)

Use this to set the network band between two choices, GSM 900/1800 or GSM1900.

## GPRS setting Menu 7.6

You can set GPRS service depending on various situations.

## Reset settings Menu 7.7

You can initialize all default settings. You need the Security code to activate this function.

## Memory status Menu 7.8

### Internal memory (Menu 7.8.1)

- ▶ This function shows the status of the user memory of the handset.


### Multimedia memory (Menu 7.8.2)

- ▶ This function shows the status of the multimedia memory of the handset.

# Service

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.





Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser at any time, press the (  ) key. The phone will return to the previous menu.

## Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

### Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Key	Description
 	Scrolls each line of the content area
	Returns to the previous page
	Selects options and confirms actions

## Using the WAP browser menu

There are various menu options available when surfing the Mobile Web.

### Note

- ▶ The WAP browser menus may vary, depending on your browser version.

## Internet

Menu 8.1

### Home (Menu 8.1.1)


Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.




## Bookmarks (Menu 8.1.2)

This menu allows you to store the URL of favourite web pages for easy access at a later time. Your phone has several pre-installed bookmarks.

These pre-installed bookmarks cannot be deleted.

### To create a bookmark

1. Press the left soft key  [Options].
2. Select Add new and press the OK key.
3. After entering the desired URL and title, press the OK key.

\* **Tip:** Use the “” key and “” key to enter symbols. To enter “.”, press “”.

After selecting a desired bookmark, the following options are available.

- ▶ **Connect:** Connects to the selected bookmark.
- ▶ **Add new:** Select this to create a new bookmark.
- ▶ **Edit:** You can edit the URL and/or the title of the selected bookmark.
- ▶ **Delete:** Deletes the selected bookmark.
- ▶ **Delete all:** Deletes all the bookmarks.

## Go to URL (Menu 8.1.3)

You can connect directly to the site you want. After entering a specific URL, press the OK key.

## Settings (Menu 8.1.4)

### Profiles

A profile is the network information used to connect to the Internet.

#### Note

- ▶ In case the SIM card support SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card. In case the SIM card does not support SAT services, this menu will be Profiles.

Each profile has submenus as follows:

- ▶ **Activate:** Activates the selected profile.
- ▶ **Settings:** Use this to edit and change WAP settings for the selected profile.

# Service

- **Homepage:** This setting allows you to enter the address (URL) of a site you want to use as homepage. You do not need to type http:// at the front of each URL as the WAP Browser will automatically add it.

- **Bearer:** You can set the bearer data service.

## 1 Data

## 2 GPRS

- **Data settings:** Appears only if you select Data Settings as a Bearer / service.

**Dial number:** Enter the telephone number to dial to access your WAP gateway.

**User ID:** The users identity for your dial-up server (and NOT the WAP gateway).

**Password:** The password required by your dial-up server (and NOT the WAP gateway) to identify you.

**Call type:** Select the type of data call : Analogue of Digital (ISDN)

**Linger time:** You need to enter timeout period. After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.

**Call speed:** The speed of your data connection ; 9600 or 14400

- **GPRS settings:** The service settings are only available when GPRS is chosen as a bearer service.

**APN:** Input the APN of the GPRS.

**User ID:** The users identify for your APN server.

**Password:** The password required by your APN server.

- **Proxy settings**

**Proxy:** On/Off

**IP address:** Input the IP address of the Proxy server you access.

**Port number:** Input the Proxy Port

- **DNS settings**

**Primary server:** Input the IP address of the primary DNS server you access

**Secondary server:** Input the IP address of the secondary DNS server you access

- ▶ **Rename:** You can change the profile name.

- ▶ **Delete:** Deletes the selected profile from the list.
- ▶ **Add new:** You can add a new profile.

### Cache

Set a value whether a connection attempt is made through cache or not.

### Cookie

Check whether a cookie is used or not.

### Clear cache

Removes all context saved in cache.

### Clear cookie

Removes all context saved in cookie.

### Security

A list of the available certification is shown.

- ▶ **Authority:** You can see the list of authority certificates that have been stored in your phone.
- ▶ **Personal:** You can see the list of personal certificates that have been stored in your phone.

## SIM service (SIM dependent)

Menu 8.2

Your service provider can offer special applications through the SIM card, such as home banking, stock market, etc. If you are registered for one of these services, the service name will appear at the end of the Main Menu. With the SIM Services menu your phone is future-proof and will support additions to your service provider's service.



For more information contact your service provider.

# Downloads

## Games & Apps

Menu 9.1

### Games & Apps (Menu 9.1.1)

In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option. The downloaded applications are organised in folders. Press the left soft key  [OK] to open the selected folder or launch the selected midlet. Using the left soft key  [Options], the following menus are available.

#### Note

- ▶ After downloading any Java game, press the “Ok” Key ( ● ) to save it in the root folder.

- ▶ **Launch:** Start the selected application.
- ▶ **Information:** Shows the information of the application.
- ▶ **Permissions:** Some Java applications may require a data connection to be made. Select this to set the connecting options.

- **Always:** The connection is created immediately without a notification.
- **Prompt:** You will be asked before the application makes the connection.
- **Never:** No connection is allowed.

#### Note

- ▶ You cannot remove or rename the preinstalled folder or a game in the folder.

Java™, is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard MS Internet Explorer browser, Java MIDlets can be downloaded using the WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed in the **Games & Apps** menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD or .JAR format.

## Note

- ▶ The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.
- ▶ While being based on a standard language (J2ME), not all Java applications are compatible with all handsets on sale in so far as specific libraries may be used for a telephone model. The software may be blocked or switch itself on when Java applications not specifically developed for the phone is downloaded. We would like to point out that these problems are caused by incompatible applications and are not a product fault.

## Caution!

- ▶ Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

## Profiles (Menu 9.1.2)

This menu contains the same settings of the Internet menu. In fact, in order to download new applications, a WAP connection is needed.

## Images

Menu 9.2

The left soft key  [Options] will bring up the following options.

- ▶ **Set as wallpaper:** Currently selected Picture can be set as a Wallpaper.
- ▶ **Write multimedia message:** Downloaded Picture can be sent via MMS.
- ▶ **Send via Bluetooth :** The picture can be sent via Bluetooth.

## Sounds

Menu 9.3

The left soft key  [Options] will bring up the following options.

- ▶ **Set as ringtone:** This sets the Ring Tone with currently selected Sound.
- ▶ **Write messages:** Melody Sound can be sent via SMS and MMS.

- ▶ **Send via Bluetooth :** Melody Sound can be sent via Bluetooth.

## File Storage

Menu 9.4

This folder is similar to a file storage. It contains all the file transferred through UMS functionality or Bluetooth, as images, sounds and generic files not supported by the phone.

Pressing the [Option] softkey, you can view or play the file (if supported), delete it or send it via Bluetooth.

### USB connectivity

S5200 can be connected to a PC through a USB cable in order to transfer files, contents and to use the built-in modem. You can find all the details related to this functionality in the following section.

### USB Media Storage (UMS)

The UMS functionality (USB Media Storage) allows to handle multimedia files stored in the phone's internal memory (64MB), treating it as a common USB memory key. This function doesn't require the installation of additional software.

You can preview JPG(Max 460K), GIF(Max 100K) and can play sound can be attached in MMS.

### Note

- ▶ While using the UMS functionality, you won't be able to receive any call or message.

1. From the phone's stand-by screen, connect the USB cable to the phone and the PC. The PC will identify the peripheral after some seconds.
2. The phone will display "USB" on the main LCD
3. On the PC, the phone will be identified as "Removable disk" in My Computer folder. Also, a system disk letter will be assigned, such as "E:\". After that, you can upload or download files from the phone treating it just as a common Windows folder.
4. Double-click on "Removable disk" and open the folder "My Media". Four new folders will appear:
  - **Music:** In this folder you can copy music files. The supported formats are: MP3, AAC, AAC+, AAC++, WMA, MP4 (audio) and WAV. The files in this folder can be played using the MP3 player of the phone.

- **Photos:** This folder is reserved for the pictures taken with the phone's digital camera. You can transfer the pictures from the phone to the PC using the commands copy and paste of the PC.

### Note

- ▶ Even though you can upload new pictures from the PC, the phone won't list them in the My photo menu. Therefore, we recommend not to upload anything to this folder. If you want to upload new wallpapers to the phone, please use the dedicated program available in the CD-Rom.

- **Storage:** This folder is similar to a file storage. You can upload any kind of file here, images, audio or even files not specifically supported by the phone (i.e. word and excel files) just to carry them with you and download them later to another PC. On the phone, the files stored in this folder are listed in the (Menu – Downloads – File Storage).

- **Videos:** In this folder you can download on PC the videos taken with the phones' digital camera and upload new videos on the phone. This folder supports the 3GP file format. On the phone, you can view the files in this folder in the (Menu – Multimedia – My video).

### Note

- ▶ You can upload files of any size, until the memory is full.
- ▶ You can create up to 10 nested folders in the 4 default folders.
- ▶ Do not change the default folder name, or it does not work properly.

5. Once the file transfer is finished, disconnect the USB peripheral from Windows and disconnect the cable from the phone.

### Warning!

- ▶ Never disconnect the phone while there's a file transfer in progress. Doing so may damage the memory. Always disconnect the peripheral through Windows options before disconnecting the cable.

# Downloads

## PC programs and Internet

You can connect the phone to your PC to manage your phonebook contacts, upload new contents such as wallpapers and ringtones or use the built in modem.

1. Install the programs included in the CD-Rom.
2. On the phone, open the menu Tools – Modem and confirm the activation.
3. Connect the phone to the PC using the USB cable and start the desired program.

### Note

- ▶ To connect USB, several minutes after power on phone and in the idle window.

4. After using the modem, it is recommended to deactivate it from the menu Tools - Modem.

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

---


## Standard Battery



---

## Headset

Allows hands-free operation. Includes earpiece and microphone.

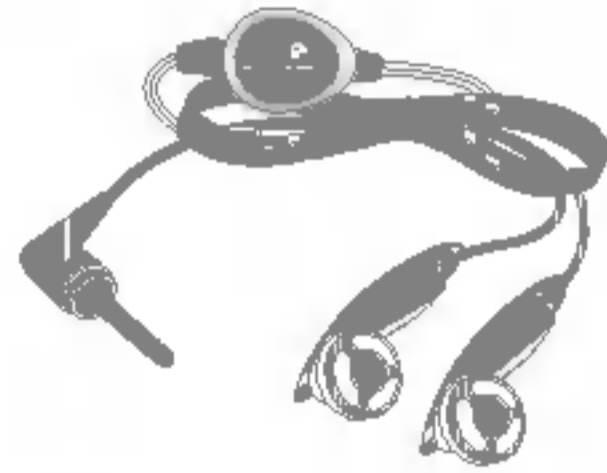

---

## Travel Adapter

This charger allows you to charge the battery while away from home or your office.



---

## Data cable/CD

You can connect your phone to PC to exchange the data between them.



### Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

# Technical data

## General

Product name : S5200

System : GSM 900 / DCS 1800 / PCS 1900

## Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

# Declaration of Conformity LG Electronics

**Name**

LG Electronics Inc

**Address**

LG Twin Tower  
20, Yeouido-dong, Yeongdeungpo-guSeoul, Korea 150-721

**Product Name**

GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

**Model Name**

S5200

**Trade Name**

LG

# CE 0168

**R&TTE Directive 1999/5/EC**

EN 301 489-01 / EN 301 489-07 : 2002 / EN 301 489-17 V1.2.1  
EN 300 328 V1.4.1  
EN 60950 : 2001  
EN 50360/EN 50361 : 2001  
3GPP TS 51.010-1,  
EN 301 511 V9.0.2

The conformity to above standards is verified by BABT.

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

**Name**

Jin Seog, Kim / Director

**Issued Date**

8.Sep. 2005

LG Electronics Inc. Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

  
Signature of representative













