

S 5 2 0 0 | 使用手冊 |

LG Electronics Inc.
<http://www.lge.com>

P/N : MMBB0192717 (1.0) ■

LG Electronics Inc.

| S 5 2 0 0 | 使用手冊



CE 0168


繁體中文
简体中文
ENGLISH



| S 5 2 0 0 | 使用手冊

| S5200 | 使用手冊

此手冊內的部份內容可能因應手機的軟件或你的服務供應商而跟你的手機有所不同。

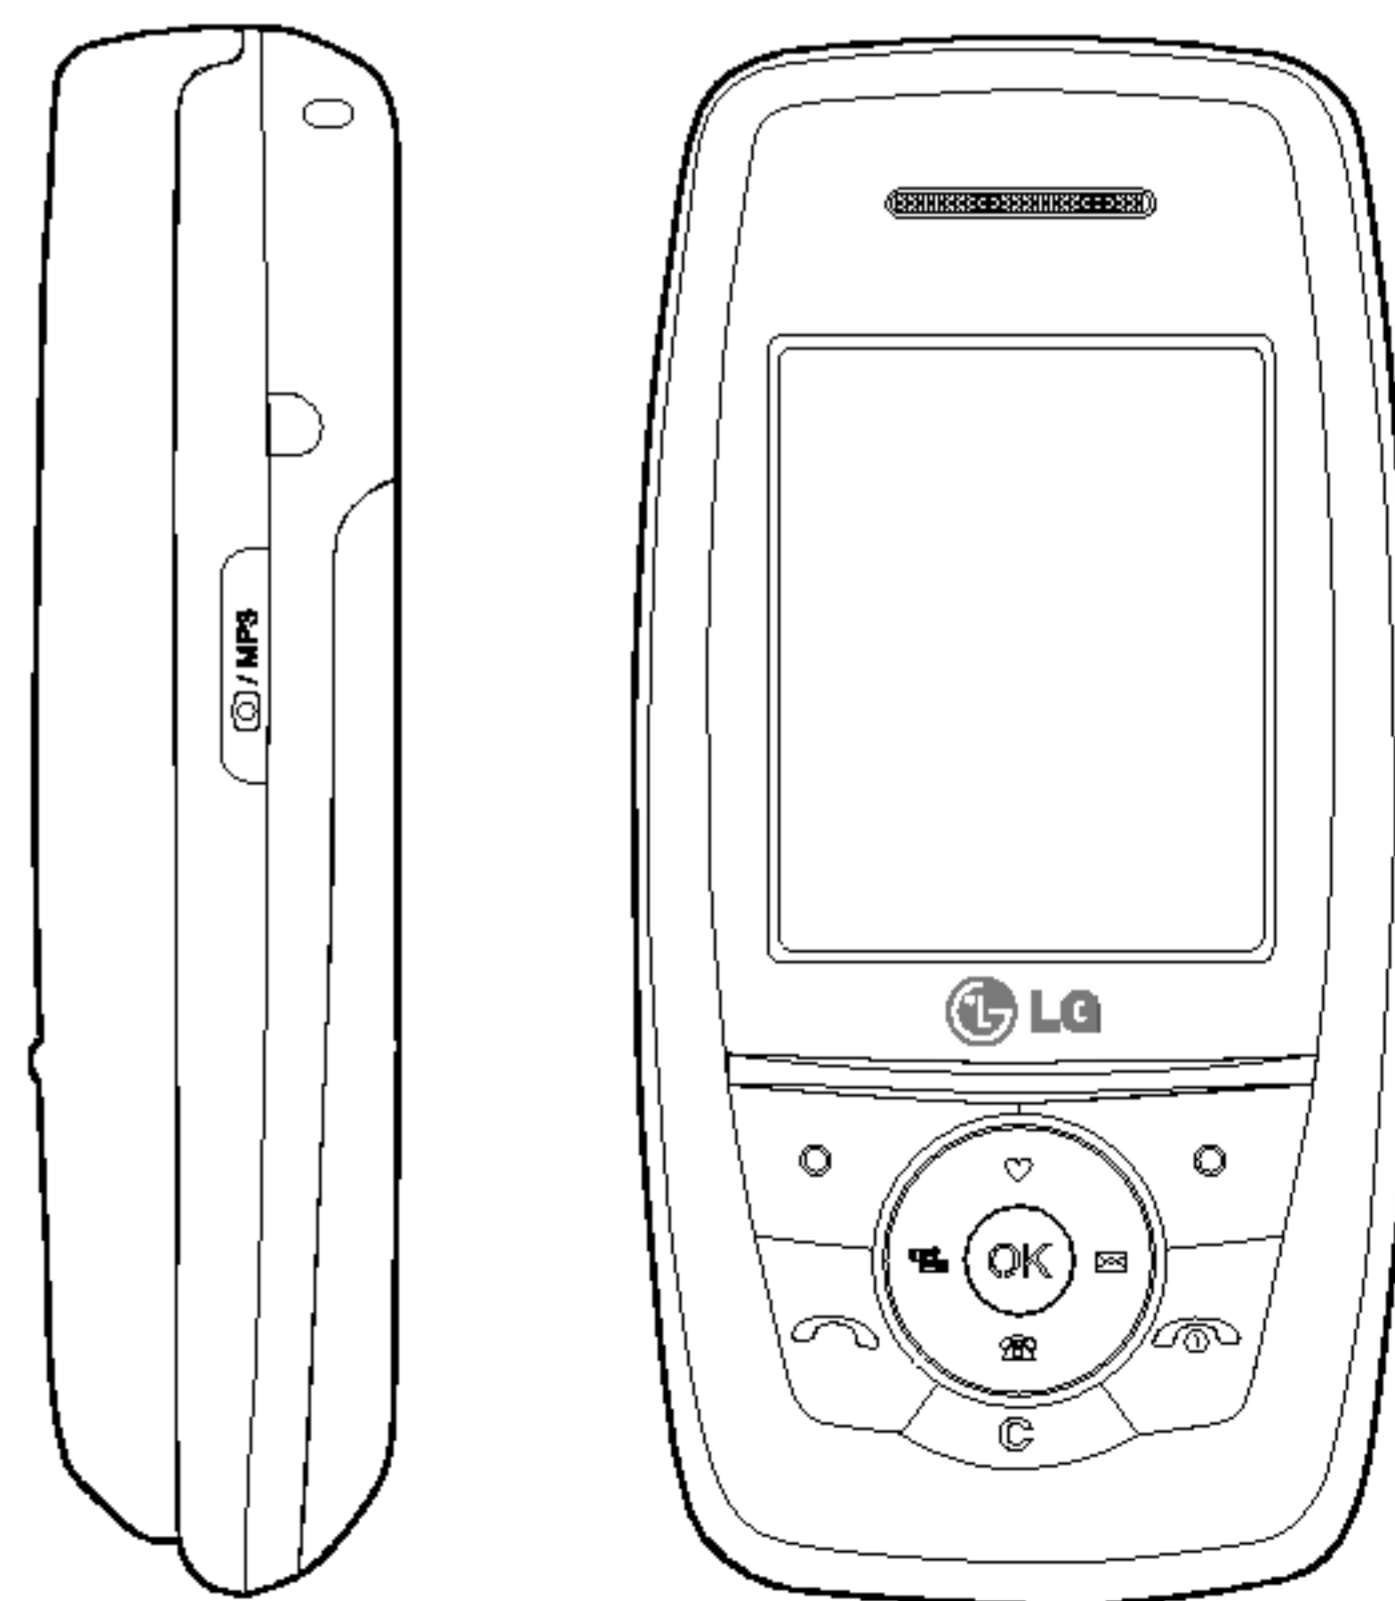

目錄

簡介	6	一般功能	20	通話記錄	33
安全與有效使用準則	7	撥打與接聽電話		未接來電	
S5200 功能	10	通訊錄	24	已接來電	
手機部位圖解		通話中功能表		已撥通話	
顯示資訊	14	多方通話	25	刪除最近通話	
開始使用	16	功能表結構	27	通話計費	34
安裝智能咭與手機電池		選擇功能與選項	30	通話時間	
為電池充電	17	情景模式	31	通話費用	
取出充電器	18	啓動		設定	
開啓/關閉手機電源		更改		GPRS記錄	
存取碼	19	重新命名	32	傳輸時間	
限制密碼				數據用量	35

工具	36	記事簿	38	訊息	43
鬧鐘		通訊錄		新訊息	
藍芽		搜尋		寫文字訊息	
我的裝置		新增		寫多媒體訊息	44
免提裝置		群組	39	收件匣	45
設定		快速撥號		寄件匣	46
計算機	37	設定		草稿	47
單位轉換器		複製全部	40	收聽留言訊息	
時區設置		刪除全部		資訊廣播	48
數據機		資訊		讀取	
		日曆	41	標題	
		新增	42	常用範本	
		檢視日程表		文字範本	
		刪除已過日程		多媒體訊息範本	49
		刪除全部		我的名片	
		轉到日期		設定	
		設定鬧鐘鈴聲		文字訊息	
		備忘錄		多媒體訊息	50
				留言信箱號碼	
				資訊廣播	
				Push訊息	51

目錄

多媒體	52	設定	57	安全設定	60
相機		日期和時間		PIN碼要求	
視像攝錄機		日期設定		手機鎖	
我的相片	53	時間設定		自動鍵盤鎖時間設定	
我的影片		手機設定		通話限制	61
MP3		顯示設定		固定撥號	
MP3 播放器	54	主題配置		更改密碼	62
播放列表	55	語言	58	網絡設定	
設定		通話設定		網絡選擇	
語音備忘錄		來電轉接		頻段選擇	
錄製		接聽模式	59	GPRS設定	
檢視列表	56	發送我的號碼		重設設定	
設定		來電等候		記憶體狀態	63
相機		分鐘提示	60	內置記憶體	
視像攝錄機		自動重撥		多媒體記憶	

服務	64	下載	68
互聯網		遊戲及應用	
主頁		遊戲及應用	
書籤		網絡設定	69
轉至URL	65	圖像	
設定		聲音	
智能咭服務	67	已儲存檔案	70
		配件	73
		技術資料	74

簡介

恭喜您購買了先進精巧，採用最新數碼流動通訊技術的S5200手提電話。

本用戶手冊內含有關本手機之操作與使用的重要資訊。請務必仔細詳讀所有資訊，以便能發揮最高的手機性能，並防止手機遭受任何損壞或不當使用。未經本用戶手冊中明確許可的任何變更或改裝，將會使您的產品保養失效。



安全與有效使用準則

請詳閱這些簡單準則。違反這些準則可能會招致危險或構成違法行爲。本手冊將會提供更進一步的詳細資訊。

無線電波頻率能量暴露

無線電波暴露標準與比吸收率(SAR)資訊

本手提電話型號 S5200 的設計，已符合暴露在無線電波下使用的安全要求。此種要求是建基於科學準則，包括可確保公眾安全的設計標準，範圍涵蓋各年齡層，以及他們的各種健康狀況。

- ▶ 無線電波暴露準則採用一種測量單位，即所謂的比吸收率 (SAR)。SAR 測試是透過標準方法進行的，測試當中手機將會在所有操作頻段中發射最高的認可功率。
- ▶ 儘管各LG型號手機的 SAR 值都不一樣，但是所有產品均符合任何相關的無線電波暴露準則。
- ▶ 國際非電離輻射防護委員會(ICNIRP)建議的 SAR 限制為平均每十克組織2瓦特/千克。
- ▶ 此手機型號透過 DASY4 測得在耳邊使用時的最高 SAR 值是0.117瓦特/千克 (10 克)。

產品保養與維護

警告! 僅限使用經過審查認可與此特定手機型號配合使用的電池、充電器與配件。使用任何其他類型的配件，可能會使任何本手機適用的認證或保養失效，並可能會造成危險。

- ▶ 請勿拆解本手機 (請交由合格維修人員爲您進行維修)。
- ▶ 手機應遠離電器設備，如電視、收音機或個人電腦。
- ▶ 手機應遠離熱源，如暖爐或爐具。
- ▶ 請勿讓手機摔落。
- ▶ 請勿使手機遭受機械震動或撞擊。
- ▶ 若使用封套或乙烯質護套，可能會損壞手機表面塗層。
- ▶ 使用乾布清潔外殼。(切勿使用如苯、稀釋劑或酒精的溶劑。)
- ▶ 請勿讓手機置於煙霧濃濁或灰塵污染嚴重的環境中。
- ▶ 請勿讓手機靠近信用咭或電子車票；否則會影響磁帶內的資訊。
- ▶ 請勿用尖銳物品碰觸屏幕，否則會損壞手機。

安全與有效使用準則

- ▶ 請勿讓手機接觸液體或暴露在潮濕的環境中。
- ▶ 審慎使用耳機等配件。

電子裝置

所有無線電話均可能因為受到干擾而影響性能。

- ▶ 未經許可，請勿在醫療設備旁使用本產品。避免將手機放在心律調整器上，也就是胸前口袋。
- ▶ 手提電話可能會干擾某些聽覺輔助器材。
- ▶ 手提電話也可能對電視、收音機、電腦等造成輕微干擾。

道路安全

請檢查當地對行車時使用手提電話的法律規定。

- ▶ 駕駛時請勿使用手提電話。
- ▶ 請專心駕駛。
- ▶ 如果有可能的話，請使用免提聽筒。

- ▶ 請按駕駛狀況需要，撥打或接聽電話前請將汽車停靠路邊。
- ▶ 射頻 (RF) 能量可能會影響某些汽車電子系統，例如：汽車音響、安全設備。
- ▶ 行車時，請勿將手機或免提聽筒套件放在靠近安全氣囊的位置。若無線裝置安裝不當且安全氣囊正好開啓，可能會造成嚴重傷害。

爆破區域

爆破作業進行當中，請勿使用手機。請查明禁止告示並遵守任何規章條例。

具有潛在爆炸危險的環境

- ▶ 請勿在加油站使用手機。請勿在汽油及化學品附近使用手機。
- ▶ 車上攜有流動電話與配件時，請勿運載或儲存可燃氣體、液體或爆炸物在車廂內。

飛機上

在飛機上，無線裝置可能會造成干擾。

- ▶ 登機前請先關閉手提電話。
- ▶ 未經空中服務人員許可，在地面停駐時也請勿使用。

兒童

將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急呼叫可能在某些電話網絡不能發出。因此，您不應該只倚賴手機發出緊急呼叫。請與您本地的服務供應商聯絡。

電池使用與保養

- ▶ 電池充電前，無須完全放電。與其他系統不同，本機所用電池的效能不會受到記憶效應的影響。
- ▶ 僅限使用LG電池和充電器。LG充電器是經過特別設計，能增加電池壽命至最大極限。
- ▶ 請勿拆解或讓電池發生短路。
- ▶ 電池的金屬接點應保持清潔。
- ▶ 更換性能不再令人滿意的電池。充電數百次後，才需要更換電池。
- ▶ 已長期未使用的電池，請先進行充電以取得最大的效能。
- ▶ 請勿使電池充電器直接曝曬在陽光下，或在浴室等濕度高的場所中使用。
- ▶ 請勿把電池留置在過熱或過冷的地方，否則會降低電池性能。

S5200 功能

手機部位圖解

手機正面



1. 耳機接孔

▶ 在這裡連接耳機。

2. 上/下方鍵

▶ 在手機開啓的備用模式下，控制按鍵音的音量。

▶ 通話時，控制耳機音量。

3. 主屏幕

手機右面




相機/MP3 鍵

- ▶ 打開滑蓋以顯示相機鏡頭。按住此鍵來啟動相機模式。也可用此鍵來拍攝。以主屏幕為取景器。

手機背面

相機鏡頭

- ▶ 相機鏡頭有污點可能會影響圖像質素。

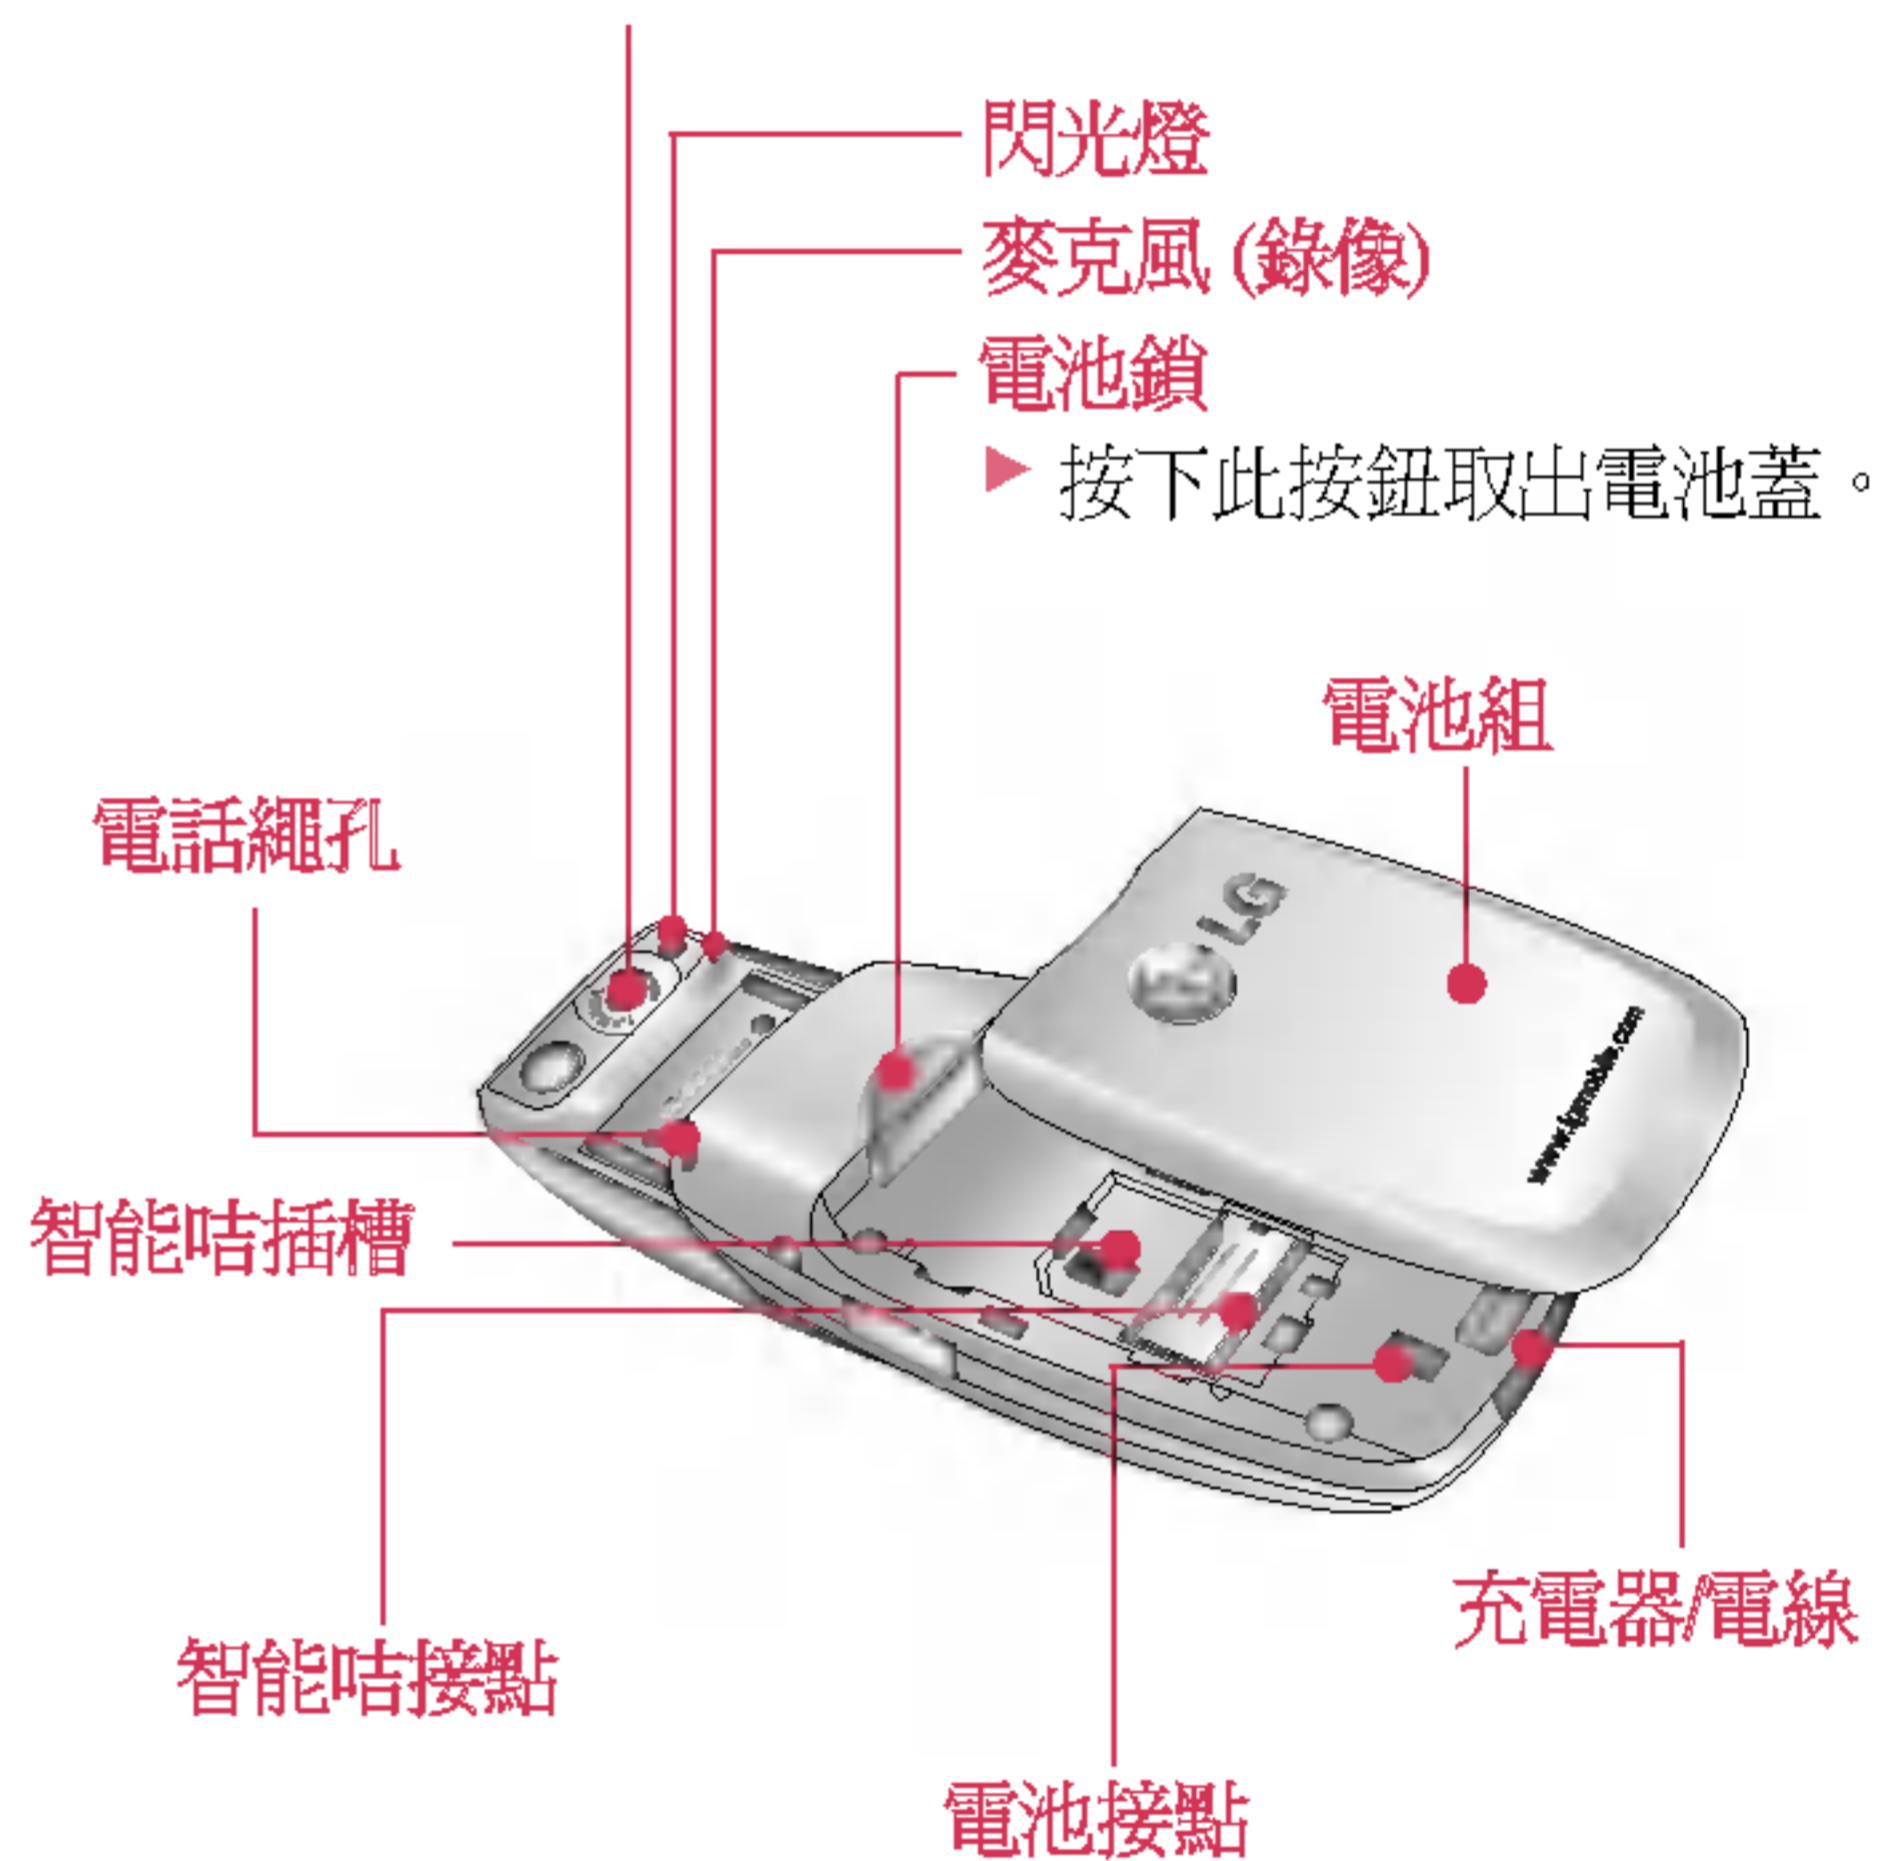

S5200 功能

手機展開





附註

▶ 為免與對方通話時有困難，使用時要滑開手機。

1. 耳機

- 2, 8. **左軟鍵/右軟鍵**: 執行屏幕上方顯示的文字的功能。
3. **發送鍵**: 撥打電話號碼及接聽來電。在備用模式下，按此鍵可快速顯示最近來電、已撥及未接的電話號碼。
4. **數字鍵**: 輸入數字、字母及某些特別字元。
5. **麥克風**: 私人通話時，可調較靜音。
6. **主屏幕**: 全彩色顯示手機狀態圖示、功能表項目、網絡資訊、圖片及更多。
7. **導覽鍵**: 可在功能表中進行捲動，或用來移動游標。
9. **確認鍵**: 選擇功能表選項及確認動作。
10. **關閉/開啓電源鍵**: 可結束通話或拒絕來電，也可返回備用模式。按住此鍵來開啓/關閉手機。
11. **清除鍵**: 每按一下就刪除一個字元。按住此鍵清除所有輸入的資料。用此鍵來返回前一個畫面。

12. 特別功能鍵

- ▶ : 長按此鍵可輸入國際撥號字元「+」。
- ▶ : 當輸入電話號碼時，長按此鍵即輸入“暫停”。

顯示資訊











以下圖表列出在手機屏幕上顯示的不同指示符號或圖示。






屏幕圖標

圖標	說明
	顯示網絡訊號強度。*
	顯示正在通話。
	顯示正以另一個網絡使用漫遊。
	顯示可以使用 GPRS 服務。

附註

- * 通話品質可能視網路訊號有所不同。當訊號強度少於兩格，可能發生靜音、來電中斷或音質不佳的情況。請將網路格數作為通話指示。當沒有格數便表示沒有網路訊號：這種情況下，您無法存取任何服務(電話、簡訊等)的網路。

圖示	說明
	顯示鬧鐘已設定並設為開啓。
	顯示電池量狀態。
	顯示收到訊息。
	顯示收到留言訊息。
	顯示已啓動震動模式。
	顯示已啓動大聲模式。
	顯示已啓動靜音模式。
	顯示已啓動耳機模式。
	顯示已啓動標準模式。
	顯示可以使用 Push 訊息服務。

圖示	說明
	正在使用WAP服務。
	正在使用GPRS服務。
	日程表已設定
	來電轉接服務已啓動
	藍芽已啓動

附註

- ▶ 電池狀態顯示電力不足時，將無法使用相機或多媒體功能。
- ▶ 使用多媒體功能時，電池狀態可能會改變。


開始使用

安裝智能咭與手機電池

取出電池前，請先確定電源已經關閉。

1. 取出電池。

按下按鈕鬆開電池，然後將電池向下滑至不能再滑動。提起並取出電池。

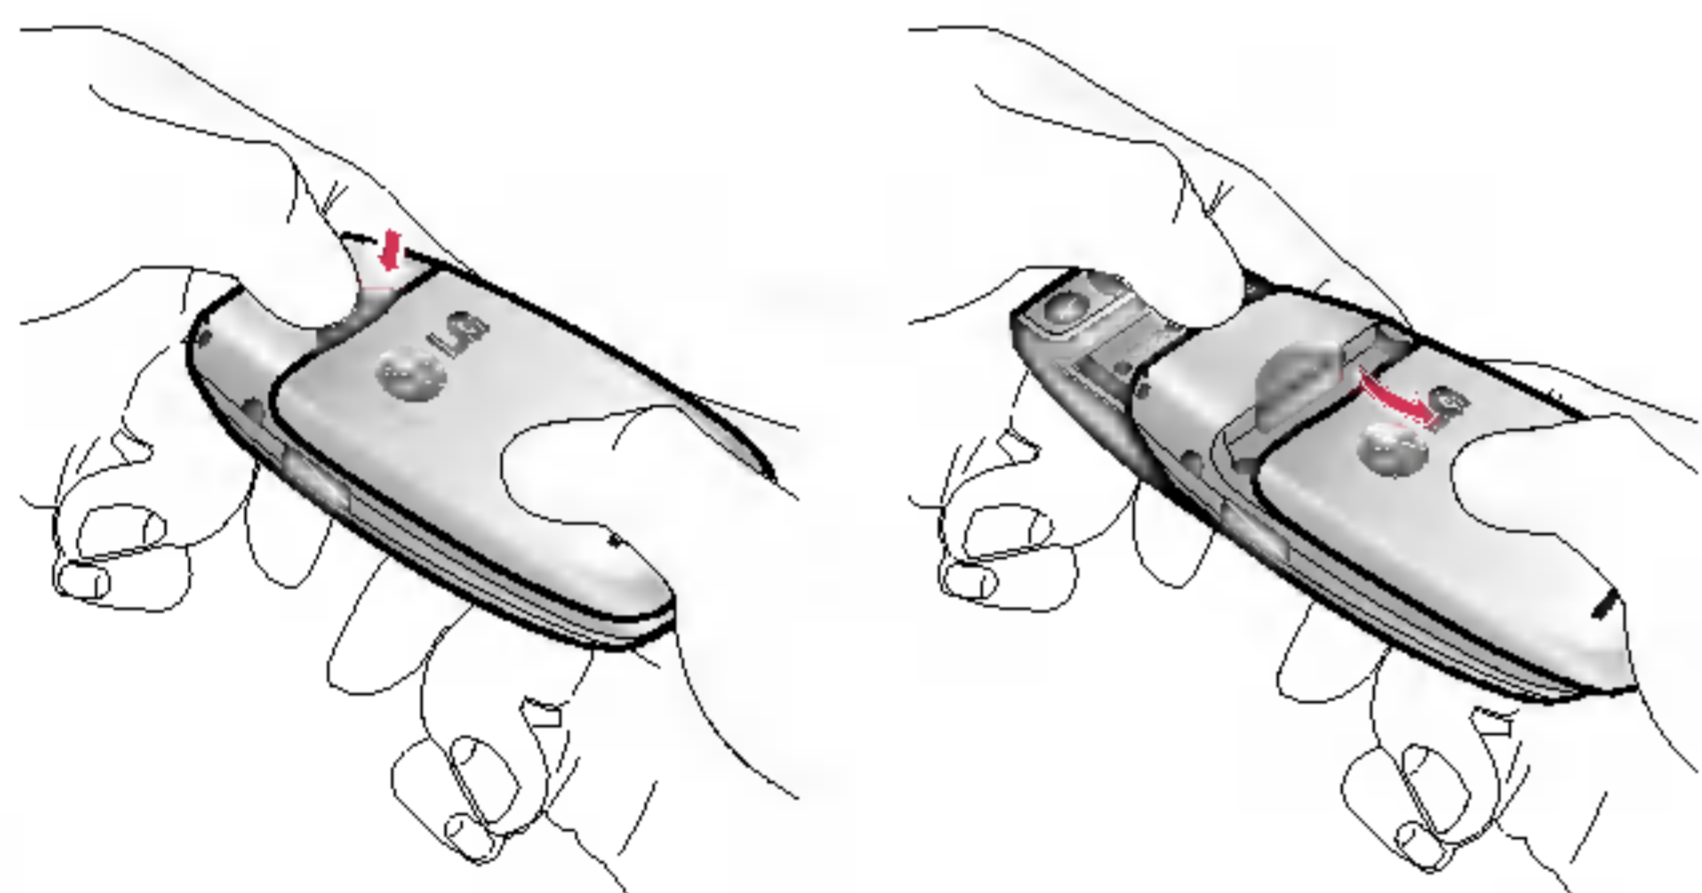


附註


- ▶ 在電源開啓時取出手機電池可能會導致手機發生故障。

2. 安裝智能咭。

將智能咭插入智能咭插槽。請確定智能咭已正確插入，且咭上的金色接點區朝向下。要取出智能咭，請輕輕往下按，然後往反方向拉出。

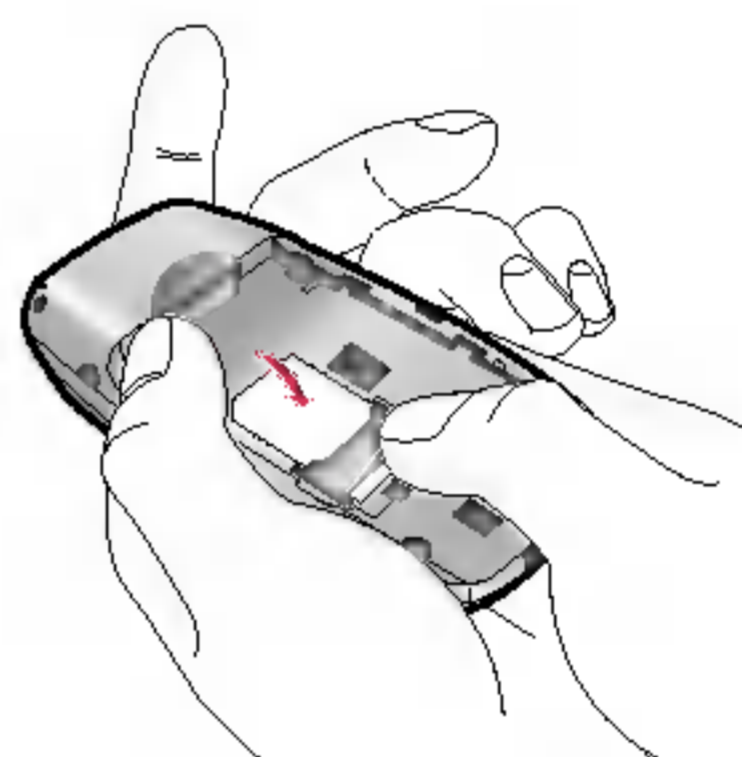

插入智能咭

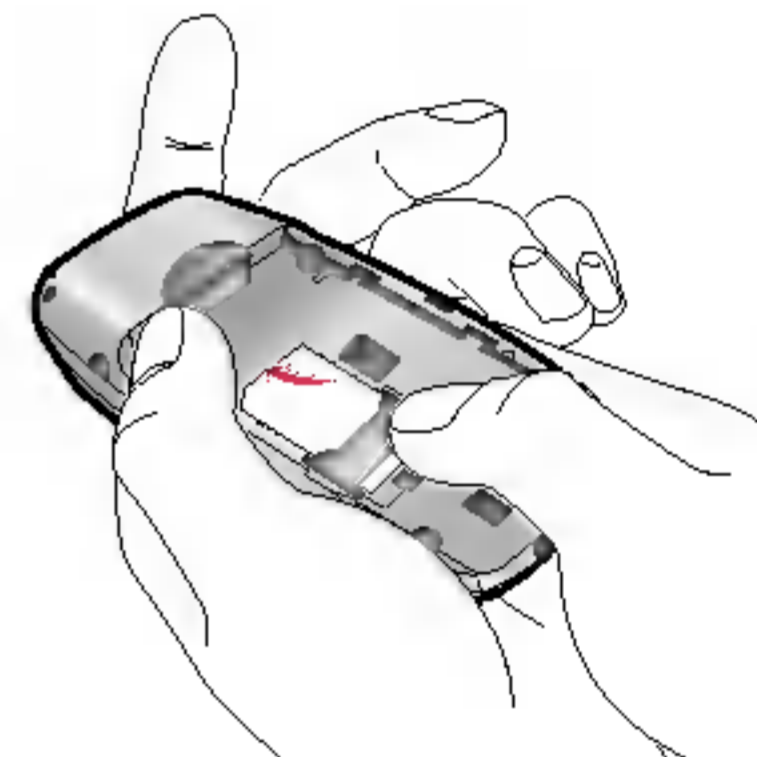


取出智能咭

注意!


- ▶ 智能咭金屬接點容易因刮傷而損壞。拿取智能咭時請特別注意。請依照智能咭所附之說明書進行安裝。

3. 安裝電池。

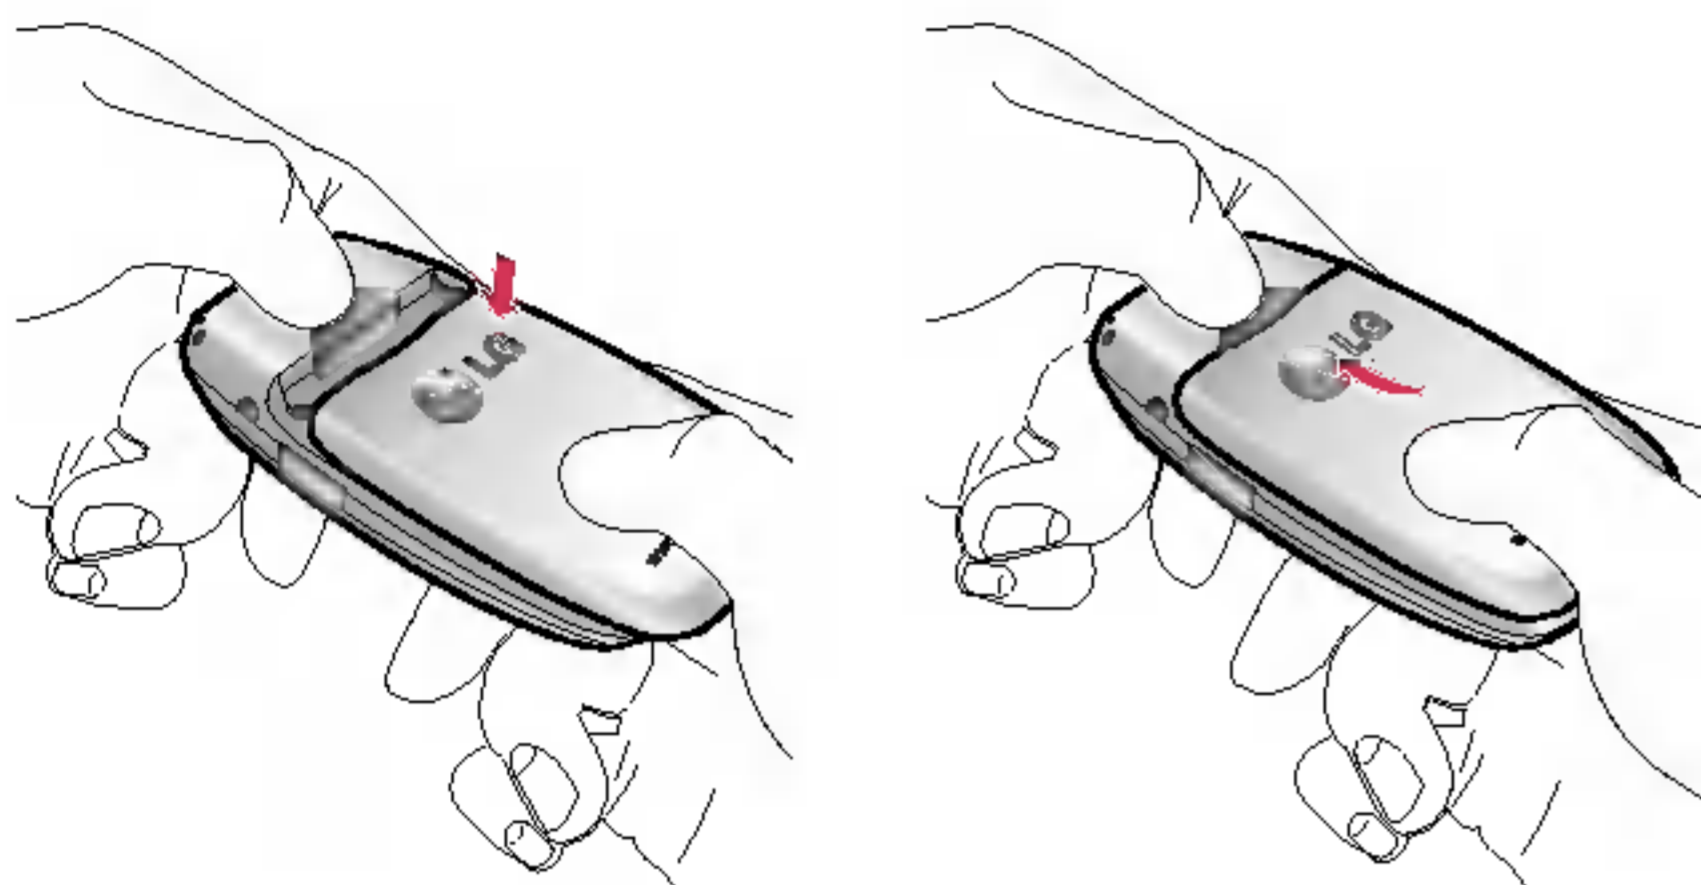

為電池充電

將旅行充電器接駁至手機之前，您必須先安裝好電池。

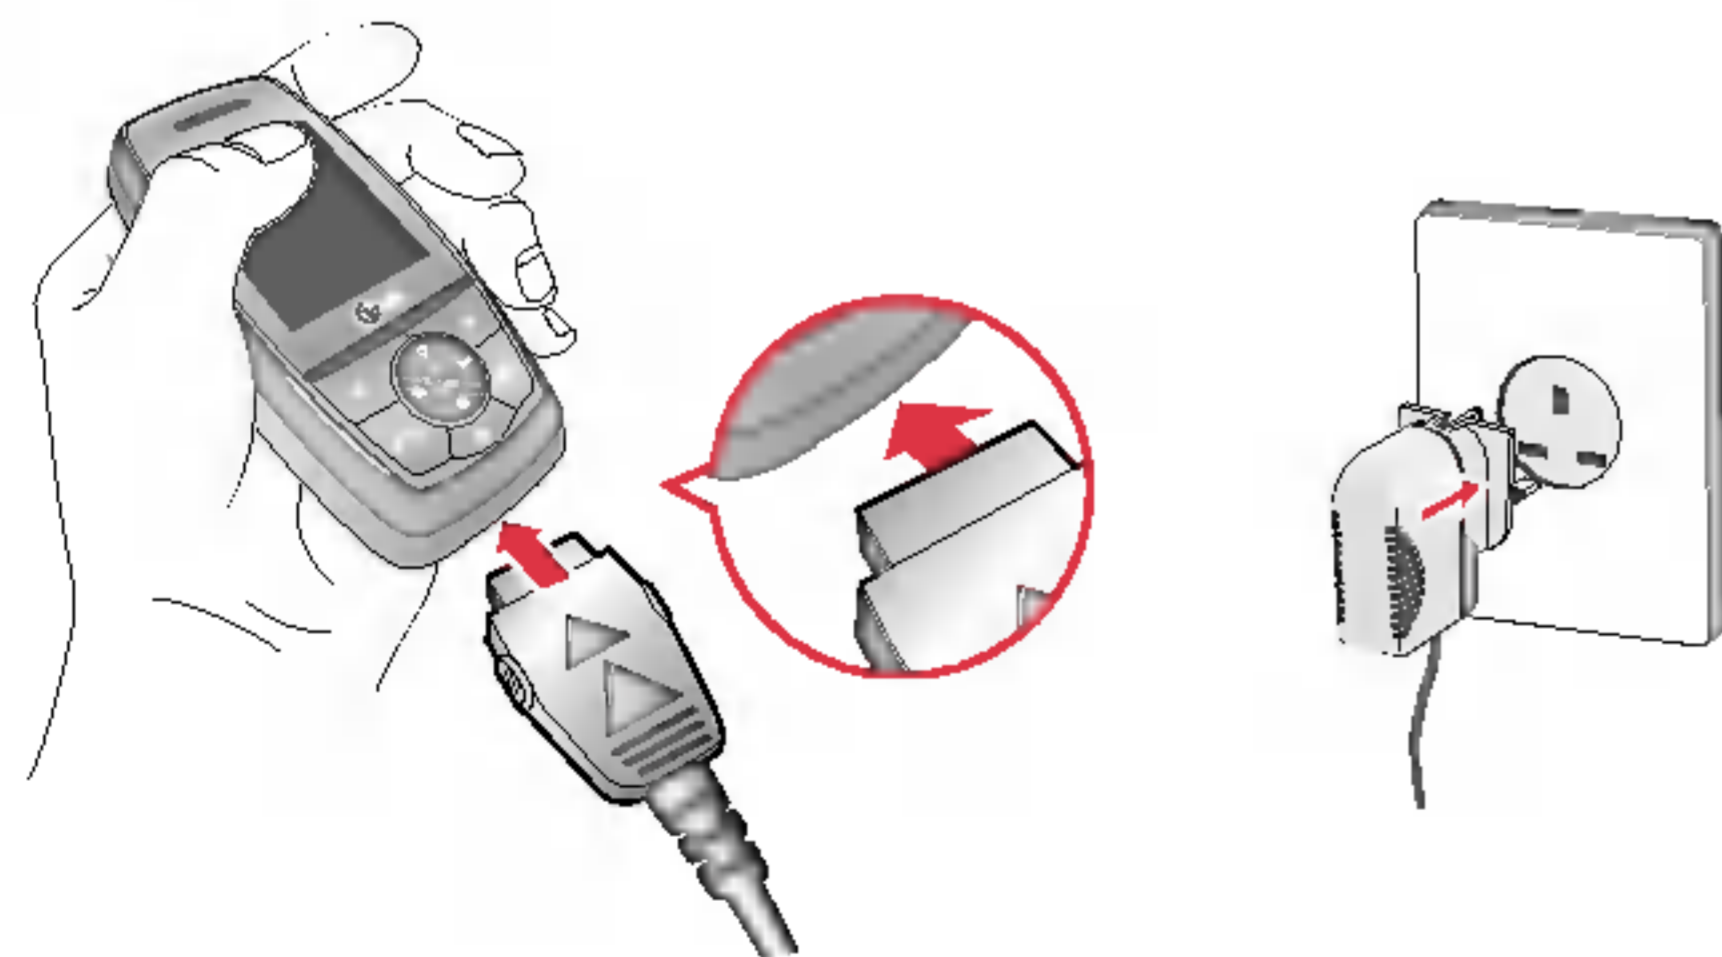

1. 將旅行充電器的一端接頭插入手機底端。
2. 將充電器的另一端接駁至牆上的交流電源插座。請務必使用手機隨附的充電器。
3. 充電完畢後，電池圖標的移動式指示列將會停止動作。

注意!

- ▶ 請勿強力推進接頭，這樣可能會損壞手機及/或旅行充電器。
- ▶ 若您是在其他國家/地區使用電池充電器，請使用符合當地規格的轉接頭配件。
- ▶ 在充電期間，請勿移除您的電池或智能咭。

警告!

- ▶ 如遇上雷暴，請拔除電源線與充電器以防觸電或失火。
- ▶ 請勿讓動物牙齒、指甲等尖銳物接觸電池。這可能會有失火的危險。
- ▶ 手機正在充電時，請勿撥打或接聽來電，這可能會造成手機短路或失火。

開始使用

取出充電器

壓住旅行充電器接頭兩側的按鈕即可從手機拔出充電器。

1. 充電完成後，電池圖示中的狀態列會停止移動，手機屏幕上將會顯示「已滿」。
2. 中斷充電器與電源插座的連接。同時按下充電器接頭兩側的灰色彈片，然後將接頭拔出，以中斷充電器與手機的連接。




附註


- ▶ 首次使用手機時，請確保電池已完全充電。
- ▶ 在充電過程中，請勿取出電池或智能咭。
- ▶ 如果電池未完全充電，請用電源鍵關閉後再開啓手機電源，並重新爲電池充電。取出及重新裝回電池後，請爲電池重新充電。

開啓/關閉手機電源

開啓手機電源

1. 在手機中裝入電池，然後將手機連接至外部電源 (如充電器、車用點煙器充電器或免提車用套件)，或在手機中裝入已充電的電池。
2. 按住  幾秒鐘，直到LCD屏幕的電源開啓。
3. 按PIN碼要求的狀態而定，您可能需要輸入PIN碼。

關閉手機電源

1. 按住  幾秒鐘，直到LCD屏幕的電源關閉。

存取碼

您可使用本章節中說明的存取碼，以防他人未經授權使用您的手機。您可變更存取碼 (PUK碼與PUK2碼除外)：使用**更改密碼**功能 [功能表-7-4-6] 即可

PIN碼 (4 到 8 位數)

PIN(個人識別碼) 碼可防止他人未經授權使用您的智能咭。PIN碼通常隨智能咭一同提供。如果將**PIN碼要求**設為**啓動**，則在每次開機時，手機均會要求輸入PIN碼。如果將**PIN碼要求**設為**關閉**，則無需輸入PIN碼，手機會直接連線至網絡。

PIN2 碼 (4 到 8 位數)

需要使用 PIN2碼 (部分智能咭中隨附) 來存取如**通話計費**和**固定撥號**等功能。僅在智能咭支援這些功能的情況下才可使用。請諮詢網絡供應商以取得更多資訊。

PUK 碼 (4 到 8 位數)

需要使用 PUK(PIN解鎖碼) 碼才能更改已鎖定的 PIN碼。PUK碼可能已隨智能咭一同提供。如

果智能咭中未提供，請諮詢網絡供應商以取得 PUK碼。如果遺失此碼，也請與網絡供應商聯絡。

PUK2 碼 (4 到 8 位數)

需要使用PUK2碼 (部分智能咭中隨附) 才能更改已鎖定的PIN2碼。如果遺失此碼，也請與網絡供應商聯絡。

安全密碼 (4 到 8 位數)

安全密碼可用於防止他人未經授權使用您的手機。預設安全密碼已設為「0000」，刪除任何手機記錄以及**重設設定**功能時都需要使用安全密碼。另外，啓動或關閉手機鎖定功能也要使用安全密碼，以防止他人未經授權使用您的手機。安全密碼預設值可在**安全設定**功能表中修改。




限制密碼

使用**通話限制**功能時需要使用限制密碼。在您使用此功能時，網絡供應商會提供此密碼。



一般功能

撥打與接聽電話


撥打電話

1. 確定已開啓手機電源。
2. 輸入電話號碼 (包括區碼)。
 - ▶ 按住清除鍵 () 可清除整個號碼。
3. 按下發送鍵 () 以撥打電話。
4. 要結束通話，請按下結束鍵 () 或右軟鍵。

從通話紀錄列表撥號


1. 在備用模式下，按下發送鍵 ()，最近來電、已撥電話及未接來電將會顯示。
2. 使用上/下導覽鍵選擇所需的號碼。
3. 按  撥號。

撥打國際電話

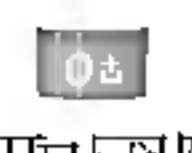
1. 按住  鍵以輸入國際首碼。「+」字元會自動選取國際碼。
2. 依次輸入國碼、區碼及電話號碼。

3. 按  撥號。


結束通話

結束通話之後，請按一下結束 () 鍵。

從通訊錄撥號

您可在「聯絡人」中儲存經常撥打的名稱及電話號碼。您可儲存到智能咭及/或手機記憶體。您只須在通訊錄中尋找想撥打的名稱，然後按下 () 鍵，就可撥出電話。

調較音量

如果要在通話時調整聽筒音量，請使用側面的上/下方鍵 ()。按下上方按鍵可提高音量，按下下方按鍵可降低音量。

附註

- ▶ 在備用模式下，按下側面按鍵可調整按鍵音的音量。


接聽來電

接到來電時，手機會發出鈴聲且手機圖標會在屏幕上閃爍。如果手機可以識別來電者，則會顯示來電者的電話號碼 (如果已在通訊錄中儲存名稱/相片，則可顯示出來)。

1. 要接聽來電，請打開手機。(當滑蓋打開已設定為接聽模式。 [功能表 7-3-2]。)

附註

- ▶ 如果將**按任何鍵**設定為接聽模式時，則按下除右軟鍵及結束鍵之外的任何鍵，均會接聽來電。
- ▶ 您可於接聽來電同時使用通訊錄或其他功能表的功能。

2. 要結束通話，請闔上機蓋或按下  鍵。


使用揚聲器

按下  鍵即可在通話時使用內建的揚聲器。當您結束通話時，揚聲器會自動停用。


警告！

- ▶ 當揚聲器啓用時，因為音量較大，請勿將電話靠近耳朵。

震動模式(快速)

打開手機後，按住左導覽鍵  可啓動震動模式。

訊號強度

透過手機LCD屏幕上的訊號指示 () 可查看訊號強度。訊號強度會不斷變化，尤其是在建築物內時。靠近窗戶可提升接收效果。

輸入文字

使用手機按鍵可輸入英數字元。例如：在通訊錄中儲存名稱、建立訊息、建立問候語或在日程表中新增/修改事件等，都需要輸入文字。

本手機提供以下文字輸入法。

T9 模式


此模式可讓您以每個字母按一個按鍵的方式來輸入文字。鍵盤上的每個按鍵都具有多個字母。T9模式會自動將按鍵與內建字典進行比較以判斷正確的文字，因此需要按下的按鍵遠遠少於傳統ABC 模式。這也稱為預測文字功能。

一般功能


ABC 模式


此模式可讓您輸入字母，方式為按一下、兩下、三下或多下標記有所需字母的按鍵，直到所需字母出現為止。

123 模式(數字模式)

以每個數字按一個按鍵的方式來鍵入數字。要在文字輸入欄位中變更爲 123 模式，請按下  鍵直到顯示 123 模式。


變更文字輸入模式

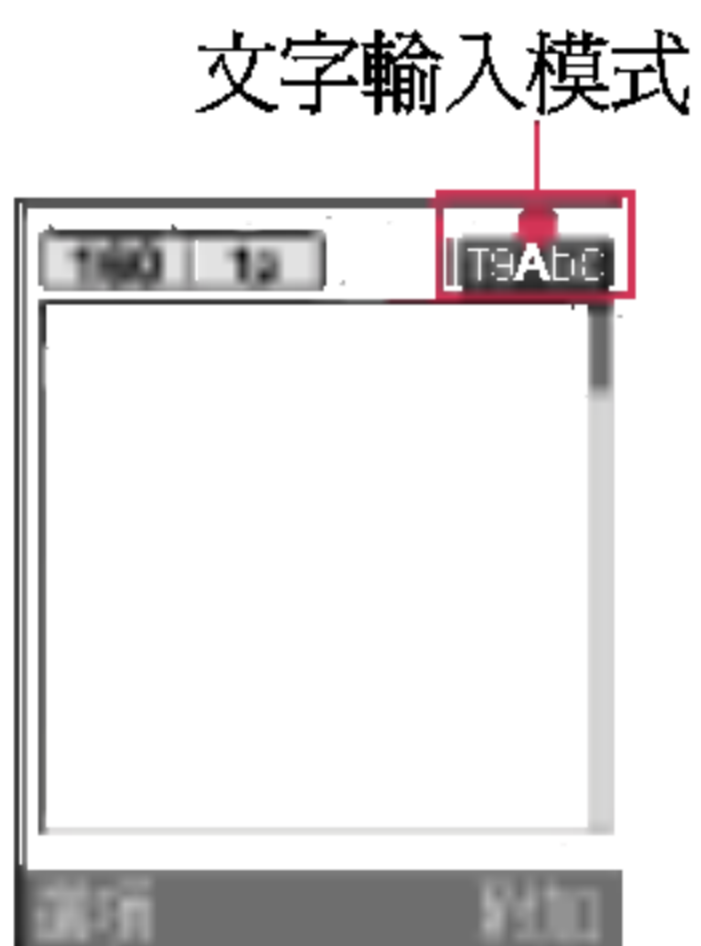

1. 在您處於允許輸入字元的欄位時，您會發現LCD屏幕右上角出現文字輸入模式指示。
2. 按下  以變更文字輸入模式。您可以在LCD屏幕的右上角檢查目前所用的文字輸入模式。



使用T9 模式

T9 預測文字輸入模式讓您只需按下最少的按鍵即可輕鬆輸入文字。在您按下每個按鍵時，手機會根據內建字典開始顯示它認爲您要鍵入的字

元。您也可以字典中新增文字。新增文字後，文字會發生變更，以反映字典中最可能的待選字。您可開啓或關閉 T9 模式，及按住 () 鍵來變更T9 語言。

1. 處於 T9 預測文字輸入模式時，按下按鍵  至  即可開始輸入文字。每個字母按一個按鍵。
 - ▶ 文字會隨鍵入的字母而變更。輸入完整文字之前，無需理會屏幕上顯示的內容。
 - ▶ 輸入完整文字後，如果所顯示的文字仍不正確，請按一下或多下向下導覽鍵以捲動尋找其他文字選項。

範例:


按下     可鍵入Good。

按下     [] 可鍵入Home。



- ▶ 如果文字選項列表中沒有所需的文字，請使用ABC 模式新增該文字。
 - ▶ 您可以選擇T9模式的語言。請按下左軟鍵 [選項]，選擇**T9語言輸入**，然後選擇所需的T9語言。您也可以選擇**關閉T9**以關閉T9模式。本手機的預設值爲開啓T9模式。
2. 輸入完整文字列後再編輯或刪除任何按鍵。




3. 按下  鍵輸入以完成每個文字的輸入。要刪除字母，請按下 。按住  可清除整個字元。

附註

- ▶ 要退出文字輸入模式而不儲存已輸入內容，請按下 。手機將返回備用模式。











使用 ABC 模式

使用按鍵  至  輸入文字。

1. 按下標記有所需字母的按鍵:
 - ▶ 按一下以輸入第一個字母
 - ▶ 按兩下以輸入第二個字母
 - ▶ 如此類推
2. 要輸入空格，請按一下  鍵。要刪除字母，請按下  鍵。按住  鍵可清除整個顯示內容。


附註

- ▶ 請參閱下表以取得更多有關使用英數字元鍵時可用字元的資訊。

按鍵	按順序顯示的字元	
	大寫	小寫
	., / ? ! - : ' " 1	., / ? ! - : ' " 1
	ABC2ÄÅÁÂÃÄÆÇ	abc2äåáâãäæç
	DEF3ËÈÉÊ	def3ëèéê
	GHI4ÏÌÍÎ	ghi4ïìíî
	JKL5	jkl5
	MNO6ÑÖØÒÓÔÕŒ	mno6ñöøòóôõœ
	PQRS7ßŞ	pqrs7ßş
	TUV8ÜÙÚÛ	tuv8üùúû
	WXYZ9	wxyz9
	[空格鍵] 0	[空格鍵] 0

一般功能

使用 123 (數字) 模式

123 模式可讓您在文字訊息中輸入數字 (如電話號碼)。請按下與所需數字相對應的按鍵，然後再手動切換適當的文字輸入模式。按住 () 鍵，您可快速從字母轉換成數字。

通訊錄

您可以將電話號碼及其對應名稱儲存在 智能咭 記憶體中。此外，您還可以在手機記憶體中最多儲存1000 個號碼與名稱。在通訊錄功能表中，智能咭與手機記憶體的使用方式相同。

通話中功能表

本手機提供可在通話時使用的多種控制功能。要在通話時存取這些功能，請按下左軟鍵 [選項]。

通話時

通話時手機屏幕上顯示的功能表，不同於備用模式下顯示的預設主功能表，其中包含的選項如下所述。



撥打第二個電話

您可以從通訊錄中取得要撥打的電話號碼，以撥打第二個電話。請按下右軟鍵，然後執行**搜尋**。要在通話時將已撥號碼儲存在通訊錄中，請按下右軟鍵，然後選擇**新增**。



在兩個電話之間切換

要在兩個電話之間切換，請按下左軟鍵，然後選擇**切換**。

接聽來電

當手機發出響鈴時，按  [發送] 鍵即可接聽來電。手機也可在您正在通話時向您發出來電提示。您的耳機中會響起一個嘟音，然後屏幕上會顯示第二個來電正在等候中。此功能稱為**來電等候**，能否使用則視乎您的網絡能否支援而定。有關如何啓動及關閉來電等候功能的詳細說明，請參閱有關**來電等候**的章節[功能表7-3-4]。如果已啓動**來電等候**，按下  或依次選擇左軟鍵及**保留並接聽**，可保留第一個電話並接聽第二個電話。依次選擇左軟鍵及**結束並接聽**，可結束目前通話並接聽待接來電。

拒接來電

按下  鍵即可拒接來電。在通話時，按下左軟鍵 [選項] 並選擇**多方通話/拒絕**或按下  可拒接來電。

使麥克風靜音

在通話時按下 [功能表] 鍵並選擇**靜音**可使麥克風靜音。選擇**關靜音**可取消手機靜音。靜音開啓時，來電者聽不到您的聲音，但您仍可聽到對方的聲音。

通話時開啓DTMF音頻


要在通話時開啓DTMF音頻，請按下左軟鍵，然後選擇DTMF開啓。使用相同方式可關閉DTMF音頻。DTMF音頻可讓手機充分利用自動交換機。

多方通話

如果網絡供應商支援此功能，多方通話服務可讓您同時與多個來電者通話。僅在您擁有一個正在接聽的來電及一個保留中的通話，且這兩個電話均已接聽時，才可建立多方通話。建立多方通話後，建立該通話的一方可新增、中斷或隔離 (即從多方通話中移除，但仍與您保持連接)通話。

這些選項均可在「通話中」功能表中進行選擇。加入多方通話的來電者人數最多為五人。開始多方通話後，您即可控制多方通話，並且只有您才能將來電者新增至多方通話。

撥打第二個電話

您可以在通話時撥打第二個電話。請輸入第二個電話號碼，然後按下  鍵。在第二個電話接通時，第一個電話將自動保留。按下左軟鍵並選擇「切換」，即可在兩個電話之間切換。

建立多方通話

在通話時將其中一個電話保留，然後按下左軟鍵並選擇**多方通話/全部加入**。

保留多方通話

按下左軟鍵，然後選擇**多方通話/全部保留**。

啓動保留中的多方通話

按下左軟鍵，然後選擇**多方通話/全部加入**。

一般功能

將來電新增至多方通話

要將來電新增至現有多方通話，請按下左軟鍵，然後選擇**多方通話/全部加入**。


在多方通話時顯示來電者

要在手機屏幕上捲動進行多方通話的來電者號碼，請使用上/下導覽鍵。

在多方通話時進行私人通話

要與多方通話的其中一個來電者進行私人通話，請在屏幕上顯示要與其通話的來電者號碼，並按下左軟鍵，然後選擇**多方通話/私人通話**以保留所有其他來電者。

結束多方通話

要結束多方通話，請按下  鍵。按下左軟鍵後選擇**結束通話**也可結束多方通話。要結束會議通話，請按左軟鍵，然後選擇「**會議/結束多方通話**」。按下左軟鍵後，選擇「**會議/全部結束**」即可結束所有現有和保留的通話。

功能表結構

1. 情景模式
1.1 震動
1.2 靜音
1.3 標準
1.4 大聲
1.5 耳機
2. 通話記錄
2.1 未接來電
2.2 已接來電
2.3 已撥通話
2.4 刪除最近通話
2.5 通話計費
2.5.1 通話時間
2.5.2 通話費用
2.5.3 設定
2.6 GPRS記錄
2.6.1 傳輸時間
2.6.2 數據用量

3. 工具
3.1 鬧鐘
3.2 藍芽
3.2.1 我的裝置
3.2.2 免提裝置
3.2.3 設定
3.3 計算機
3.4 單位轉換器
3.5 時區設置
3.6 數據機

4. 記事簿
4.1 通訊錄
4.1.1 搜尋
4.1.2 新增
4.1.3 群組
4.1.4 快速撥號
4.1.5 設定
4.1.6 複製全部
4.1.7 刪除全部
4.1.8 資訊
4.2 日曆
4.2.1 新增
4.2.2 檢視日程表
4.2.3 刪除已過日程
4.2.4 刪除全部
4.2.5 轉到日期
4.2.6 設定鬧鐘鈴聲
4.3 備忘錄

功能表結構

5. 訊息
5.1 新訊息 <ul style="list-style-type: none">5.1.1 寫文字訊息5.1.2 寫多媒體訊息
5.2 收件匣
5.3 寄件匣
5.4 草稿
5.5 收聽留言訊息
5.6 資訊廣播 <ul style="list-style-type: none">5.6.1 讀取5.6.2 標題
5.7 常用範本 <ul style="list-style-type: none">5.7.1 文字範本5.7.2 多媒體訊息範本5.7.3 我的名片
5.8 設定 <ul style="list-style-type: none">5.8.1 文字訊息5.8.2 多媒體訊息5.8.3 留言信箱號碼5.8.4 資訊廣播5.8.5 Push訊息

6. 多媒體
6.1 相機
6.2 視像攝錄機
6.3 我的相片
6.4 我的影片
6.5 MP3 <ul style="list-style-type: none">6.5.1 MP3 播放器6.5.2 播放列表6.5.3 設定
6.6 語音備忘錄 <ul style="list-style-type: none">6.6.1 錄製6.6.2 檢視列表
6.7 設定 <ul style="list-style-type: none">6.7.1 相機6.7.2 視像攝錄機



7. 設定
7.1 日期和時間 <ul style="list-style-type: none">7.1.1 日期設定7.1.2 時間設定
7.2 手機設定 <ul style="list-style-type: none">7.2.1 顯示設定7.2.2 主題配置7.2.3 語言
7.3 通話設定 <ul style="list-style-type: none">7.3.1 來電轉接7.3.2 接聽模式7.3.3 發送我的號碼7.3.4 來電等候7.3.5 分鐘提示7.3.6 自動重撥

7.4 安全設定
7.4.1 PIN碼要求
7.4.2 手機鎖
7.4.3 自動鍵盤鎖時間設定
7.4.4 通話限制
7.4.5 固定撥號
7.4.6 更改密碼
7.5 網絡設定
7.5.1 網絡選擇
7.5.2 頻段選擇
7.6 GPRS設定
7.7 重設設定
7.8 記憶體狀態
7.8.1 內置記憶體
7.8.2 多媒體記憶


8. 服務
8.1 互聯網
8.1.1 主頁
8.1.2 書籤
8.1.3 轉至URL
8.1.4 設定
8.2 智能咭服務

9. 下載
9.1 遊戲及應用
9.1.1 遊戲及應用
9.1.2 網絡設定
9.2 圖像
9.3 聲音
9.4 已儲存檔案

選擇功能與選項

您的手機提供了一組功能，可讓您自訂手機。這些功能設定在功能表與子功能表中，可透過兩個標有  與  的軟鍵存取。每個功能表與子功能表可讓您檢視與變更特定功能的設定。

軟鍵的功能因不同操作環境而不同；每個按鍵正上方之屏幕底部的標籤會指示其目前功能。

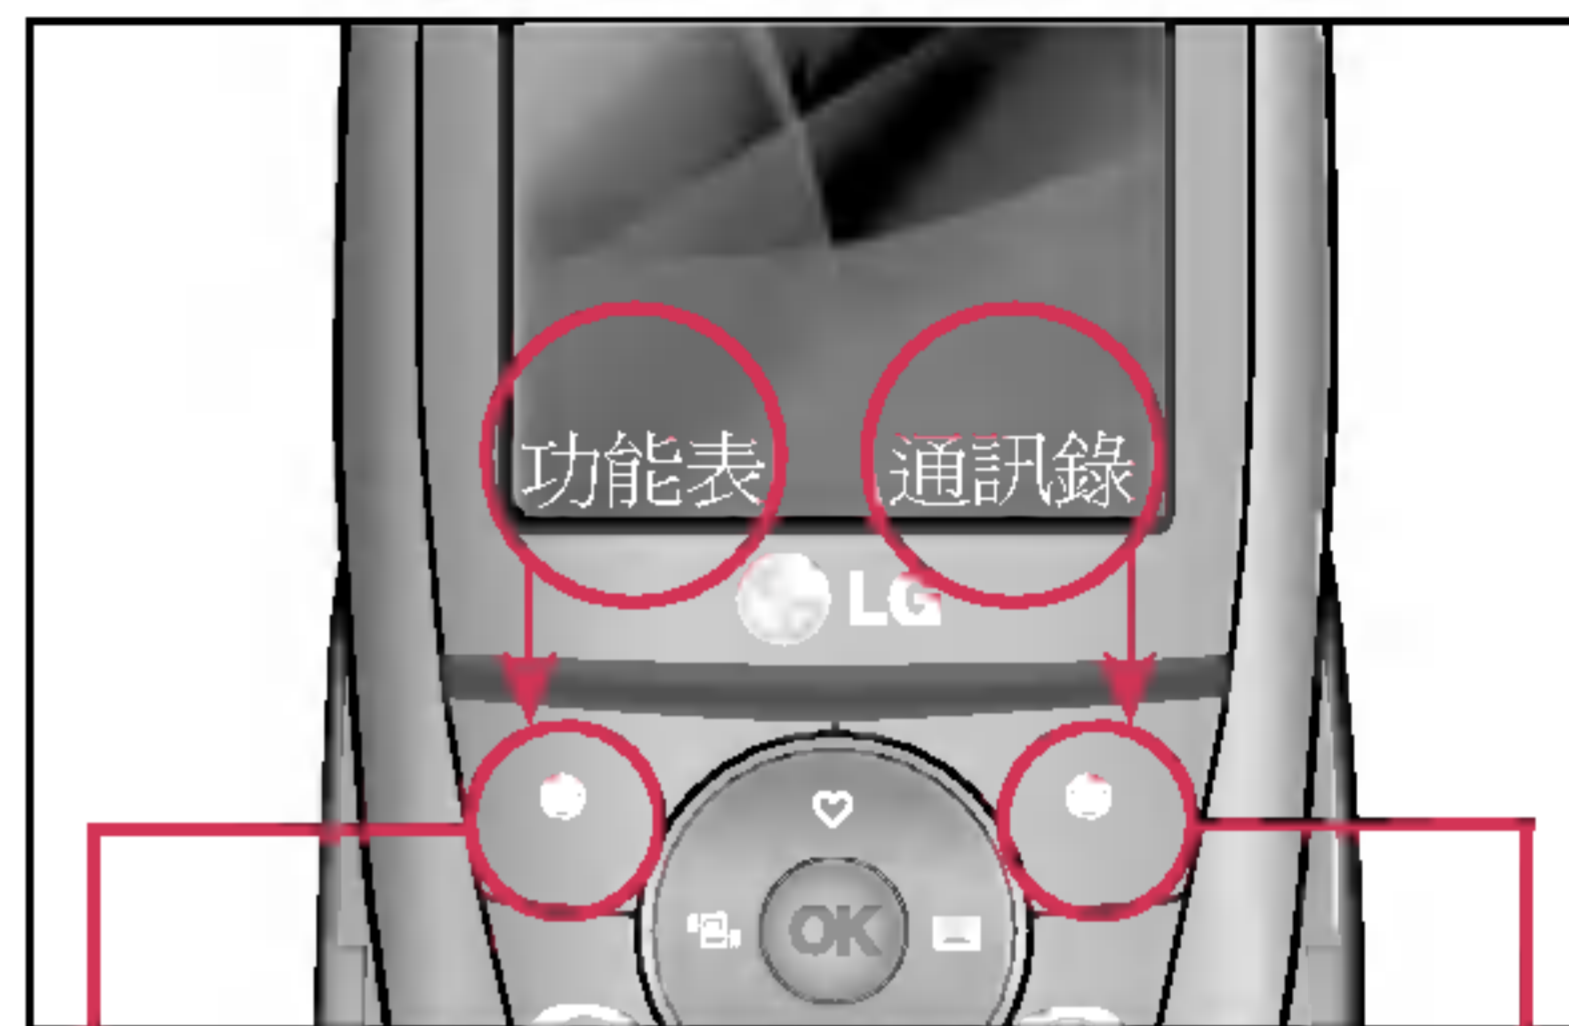

按下左軟鍵可存取可用功能表。


按右軟鍵存取可用的通訊錄。

在情景模式中，您可以調整和自訂不同事件、環境或來電者群組的手機鈴聲。

預設的模式有五種：「震動」、「靜音」、「標準」、「大聲」及「耳機」。除震動及靜音外，每種情景模式都可以進行個人化設定。按左軟鍵 [功能表]，然後使用上下導覽鍵選取「情景模式」。


啓動

功能表 1.X.1

1. 顯示情景模式列表。
2. 在**情景模式**列表中，捲動到想要啓用的情景模式，然後按左軟鍵  [選擇] 或 [確認] 鍵。
3. 然後，選擇「啓動」。

更改

功能表 1.X.2

在情景模式列表中捲動到所需的情景模式。按左軟鍵  或 [確認] 鍵後選擇 [更改]。情景模式設定選項將會開啓。視需要設定選項。

- ▶ **來電提示類型:** 設定來電提示的類型。
- ▶ **鈴聲:** 從列表中選取所需的鈴聲。
- ▶ **鈴聲音量:** 設定鈴聲音量。

附註

- ▶ 在滑開時為保護聽覺，最高音量為 3。

- ▶ **訊息提示類型:** 設定訊息提示類型。
- ▶ **訊息提示音:** 選取訊息提示音。
- ▶ **按鍵音效:** 選取所需的按鍵音。
- ▶ **按鍵音量:** 設定按鍵音量。
- ▶ **滑蓋音效:** 可根據不同環境設定滑蓋音效。
- ▶ **確認音音量:** 設定確認音音量。
- ▶ **開/關機音量:** 設定開啓/關閉手機時的鈴聲音量。
- ▶ **自動接通:** 可供您設定自動接聽來電以配合環境狀況。請注意，只有耳機情景模式包含此子功能表，可供您啓動此功能。
 - **關閉:** 手機不會自動接聽電話。
 - **5秒後:** 5秒後手機將會自動接聽。
 - **10秒後:** 10秒後手機將會自動接聽。

情景模式


重新命名

功能表 1.X.3

您可以重新命名情景情景模式，設定任何你想要的名稱。

附註

▶ 「震動」、「靜音」及「耳機」情景模式均無法重新命名。

1. 要變更情景模式名稱，請在情景模式列表中捲動至想要的情景模式，再按左軟鍵或[確認]鍵後選取「重新命名」。
2. 鍵入所需的名稱後，再按[確認]鍵或左軟鍵  [確認]。

如果網絡支援服務區域內的來電線路識別 (CLI)，您則可以查看未接、已接和已撥的電話。

號碼與名稱 (如果有的話) 會和通話的日期與時間一起顯示。您也可以查看通話時間。

未接來電

功能表 2.1

使用此選項可以查看最近10個未接來電。您也可以：

- ▶ 查看號碼 (如果有的話) 及撥打該號碼，或將其儲存在通訊錄中。
- ▶ 為該號碼輸入新的名稱，並將兩者同時儲存在通訊錄中。
- ▶ 使用此號碼傳送訊息。
- ▶ 刪除列表中的電話記錄。

已接來電

功能表 2.2

使用此選項可以查看最近10個已接來電。您也可以：

- ▶ 查看號碼 (如果有的話) 及撥打該號碼，或將其儲存在通訊錄中。

- ▶ 為該號碼輸入新的名稱，並將兩者同時儲存在通訊錄中。

- ▶ 使用此號碼傳送訊息。

- ▶ 刪除列表中的電話記錄。

已撥通話

功能表 2.3

使用此選項可以查看最近20個已撥通話(已撥出或嘗試撥出)。您也可以：

- ▶ 查看號碼 (如果有的話) 及撥打該號碼，或將其儲存在通訊錄中。
- ▶ 為該號碼輸入新的名稱，並將兩者同時儲存在通訊錄中。
- ▶ 使用此號碼傳送訊息。
- ▶ 刪除列表中的電話記錄。

刪除最近通話

功能表 2.4


您可以刪除未接來電和已接來電列表，也可以一次過刪除已撥通話和所有通話列表。

通話計費

功能表 2.5

通話時間 (功能表 2.5.1)

您可以查看來電與 的通話時間，也可以重設通話計時器。可以使用的計時器如下：

- ▶ **最後通話:** 上次通話時間。
- ▶ **所有通話:** 從上次重設計時器算起，所有撥打或接聽來電的總通話時間。
- ▶ **已接來電:** 來電的通話時間。
- ▶ **已撥通話:** 已撥電話的通話時間。
- ▶ **重設全部:** 按左軟鍵  [是] 可清除所有通話時間。

通話費用 (功能表 2.5.2)

您可以查看上次及全部的通話費用與餘額，並可重設費用。要重設全部，需要輸入 PIN 2 碼。

設定 (功能表 2.5.3) (取決於智能咭)

- ▶ **設定收費率:** 您可以設定貨幣類型及單位價格。請聯絡您的服務供應商以取得計費的單位價格。如要在本功能表中選擇貨幣或單位，您必須有 PIN2 碼。
- ▶ **設定限額:** 這項網絡服務可讓您按照選取的計費單位來限制您的通話費用。當您選擇**讀取**時，屏幕上會顯示出剩餘的單位數量。當您選擇**更改**時，您可更改您的計費限額。
- ▶ **自動顯示:** 這項網絡服務可讓您自動查看您最後通話的費用。如果您在自動顯示功能表中選擇**開啓**，您可以在通話結束時查看最新的費用記錄。

GPRS記錄

功能表 2.6

您可查詢已在 GPRS 網絡傳送的數據量。而且，您亦可查看網上連接時間。

傳輸時間 (功能表 2.6.1)

查看**最後傳輸**與**所有傳輸**的通話時間。您也可以重設全部通話計時器。

數據用量 (功能表 2.6.2)



您可檢視「已傳送 (最後/全部)」，「已下載 (最後/全部)」或「全部」及「重設全部」。

工具

鬧鐘

功能表 3.1

您可以在本功能表中設定手機在特定時間發出響鬧。

1. 選取**開啓**，然後輸入要設定的響鬧時間。
2. 選取**重複時間**: 一次、**星期一 ~ 星期五**、**星期一 ~ 星期六**、**每天**。
3. 選取要設定的鬧鐘鈴聲，然後按  [確認]。
4. 輸入鬧鐘名稱，然後按  [確認]。

藍芽

功能表 3.2

藍芽讓位於附近相容的行動裝置、周邊設備和電腦能夠直接彼此通訊，而不需使用連接線。本手機內建藍芽，可支援藍芽連線，讓您可以將手機與相容的藍芽耳機、電腦應用程式等連接。

當您從另一部藍芽裝置接收資料時，手機會要求確認。確認轉送後，檔案會複製到手機。

根據檔案類型，檔案會儲存在以下的資料夾：

- ▶ **MP3**: MP3 資料夾 (功能表 6.5.2)
- ▶ **影片 (.3GP)**: 我的影片 (功能表 6.4)
- ▶ **通訊錄聯絡人 (.VCF)**: 通訊錄 (功能表 4.1.1)

- ▶ **其他檔案**: 已儲存檔案 (功能表 9.4)

附註

- ▶ 因相容性問題，部份裝置可能不支援此功能。
- ▶ DUN 支援的藍芽軟件 (Bluetooth stacks):
 - WIDCOMM 藍芽，適用於 Windows 1.4 及 3.0

我的裝置 (功能表 3.2.1)

您可查看所有與您的藍芽手機相容的裝置。

免提裝置 (功能表 3.2.2)

您可以檢視與藍芽手機相容的免提裝置列表。



設定 (功能表 3.2.3)

您可以註冊與藍芽相容的新裝置。如果您已經新增裝置，您可以在輸入密碼後進行搜尋 (通常為 0000)。




計算機

功能表 3.3

此功能表包含標準的計算功能，例如 +、-、x、÷：加、減、乘、除。

1. 按數字鍵輸入數字。
2. 利用導覽鍵選擇運算符號。
3. 然後，輸入數字。
4. 您可以按  [結果] 鍵來查看結果。
5. 如果您要繼續計算，請重複以上步驟。
6. 要結束計算機，請按下  [返回]。


附註



- ▶ 利用  鍵清除任何數字或符號。如果按下  鍵，即可輸入負數值。此外，按下  鍵可以輸入小數值。

單位轉換器

功能表 3.4

這項功能可將任何測量單位轉換成您所需的單位。




1. 您可以按  [選擇] 鍵從這7種單位中選擇一種。

2. 利用  鍵、 鍵來選擇轉換值。
3. 您可以檢查已轉換成該單位的值。

時區設置

功能表 3.5

您可以查看世界各城市的時間。

1. 按  鍵、 鍵以選擇屬於時區內的城市。
2. 您也可以按下  [設定] 把您選取的城市時間設定為目前的時間。

數據機

功能表 3.6


您可用數據機使用網絡服務。如果您想使用 PCsync、Contents banks、Internet Cube，您可在功能表啓動數據機，然後插入 USB 線。

記事簿

通訊錄


功能表 4.1

附註


- ▶ 在備用模式中，按右軟鍵  [通訊錄] 可直接進行存取。

搜尋 (功能表 4.1.1)

(從通訊錄撥號)

1. 按左軟鍵  [選擇] 或[確認]來選擇「搜尋」。

附註





- ▶ 輸入要搜尋的姓名或號碼之首個字母亦可進行即時搜尋。
2. 如果您想要修改、刪除、複製一項記錄，或將語音附加到一項記錄，請選擇  鍵[選項]。屏幕上會顯示下列目錄。
 - ▶ **修改:** 您可以使用導覽鍵編輯名稱、號碼、群組、圖像及圖片。
 - ▶ **寫文字訊息/多媒體訊息:** 編寫訊息/多媒體訊息後傳送到選取的號碼。






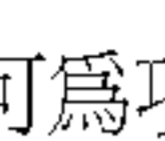
- ▶ **透過藍芽發送:** 您可以藍芽傳送通訊錄資料到相容藍芽的裝置上。
- ▶ **複製:** 您可將智能咭的記錄複製至手機，或從手機複製至智能咭。
- ▶ **主要號碼:** 可從手機號碼、住宅號碼或公司號碼之中選出一個經常使用的號碼。如已設定此號碼，搜尋時會先顯示主要號碼。
- ▶ **刪除:** 您可刪除一項記錄。

新增 (功能表 4.1.2)

您可利用此功能加入新的通訊錄記錄。

手機記憶庫最多可容納1000項記錄。智能咭的記憶容量則由流動電話服務供應商決定。智能咭的字元儲存容量依智能咭而定。

1. 按左軟鍵  [選擇] 或[確認]來選擇「新增」。
2. 選取要儲存的記憶體：**智能咭或手機**。如果設定為手機，則需要選擇主要號碼。
 - a. 按  鍵[選擇] 以輸入名稱。
 - b. 按  鍵[確認]，然後輸入一個號碼。
 - c. 按  鍵[儲存]。



- d. 按  鍵和  鍵可設定記錄的群組。
- e. 按  ，  ，  ，  可為項目設定圖像。接聽來電時，該圖像會顯示在屏幕上。



群組 (功能表 4.1.3)

在每一個群組中您最多可以編列20個成員。您總共可建立7個群組。



- ▶ **成員列表:** 顯示選定的群組成員。
- ▶ **群組鈴聲:** 您可以按照群組設定來電鈴聲。
- ▶ **群組圖示:** 您可以設定每個群組的動畫。
- ▶ **新增成員:** 您可以在來電群組中加入新成員。
- ▶ **刪除成員:** 您可以刪除已儲存在通訊錄中的成員。
- ▶ **重新命名:** 您可以更改群組名稱。

快速撥號 (功能表 4.1.4)


可將聯絡人指定到  至  的鍵上。您就可按下相應的號碼鍵來撥號至聯絡人。

1. 先在備用模式下按  鍵 [通訊錄]開啓通訊錄。
2. 翻閱至快速撥號，然後按  鍵 [選擇] 進入本功能表。
3. 如果您要加入快速撥號，請選擇 (空)。然後，您可以在通訊錄中搜尋姓名。
4. 將號碼指定為快速撥號後，您可變更及刪除項目。您也可撥打此號碼或傳送訊息到此號碼。

設定 (功能表 4.1.5)

1. 先在備用模式下按  鍵[通訊錄]以開啓通訊錄。
2. 翻閱至設定，然後按  鍵 [選擇] 進入。

▶ 預設儲存設定


翻閱至**預設儲存設定**，然後按  鍵 [選擇] 進入。

- 如果您選擇**自選**，在加入記錄時，手機會問您想儲存到智能咭還是手機。

記事簿

- 如果您選擇**智能咭/手機**，在加入記錄時，手機就不會要求您提供要儲存號碼的位置，而將記錄儲存至智能咭/手機的記憶。



▶ 檢視選項

捲動至查看選項，然後按  鍵 [確認]。

- **只顯示名稱:** 設定僅顯示名稱的電話號碼列表。
- **通訊錄圖片:** 設定含有圖像與圖片的電話號碼列表。
- **名稱及號碼:** 設定在通訊錄列表中顯示名稱與號碼。

複製全部 (功能表 4.1.6)

您可以將記錄從智能咭記憶複製/轉到手機記憶，或者從手機記憶複製/轉到智能咭記憶。

1. 先在備用模式下按  鍵 [通訊錄]以開啓通訊錄。
2. 翻閱至**複製全部**，然後按  鍵 [選擇] 以進入本功能表。
 - ▶ **智能咭至手機:** 您可以將記錄從智能咭複製至手機記憶。






- ▶ **手機至智能咭:** 您可以將記錄從手機記憶複製至智能咭。

3. 您可以查看下列子功能表。

- ▶ **保留原初號碼:** 複製時，保留原初號碼。
- ▶ **刪除原初號碼:** 複製時，清除原初號碼。

刪除全部 (功能表 4.1.7)






您可以刪除智能咭及手機中的所有記錄。這功能需要安全密碼。

1. 在備用模式下按  [通訊錄]並選取**刪除全部**，然後按  [選擇]。
2. 捲到所需刪除的記憶，然後按左軟鍵  [選擇]。
3. 輸入安全密碼，然後按  [確認] 或  [返回]。

資訊 (功能表 4.1.8)



▶ 特別服務號碼

利用這項功能可進入您的服務供應商所提供的特別服務號碼列表(若智能咭支援)。

1. 先在備用模式下按  鍵[通訊錄]以開啓通訊錄，並選取資訊。
2. 翻閱至**特別服務號碼**，然後按  鍵 [選擇] 進入本功能表。
3. 屏幕上將顯示可用的服務名稱。
4. 用  鍵及  鍵選擇一項服務。按  鍵 [發送]。

▶ **記憶體狀態**

這項功能可讓您查看您的通訊錄有多少可用及已用的記憶容量。

1. 先在備用模式下按  鍵 [通訊錄] 以開啓通訊錄，並選取**資訊**。
2. 翻閱至**記憶體狀態**，然後按  鍵[選擇]以進入本功能表。

▶ **本手機號碼(取決於智能咭)**

您可以儲存並查看智能咭內的本手機號碼。


日曆

功能表 4.2

當您進入本功能表時，屏幕上將會顯示一個日曆。月份及年份在屏幕上方顯示。每當您在設定功能表變更日期，日曆會自動更新。目前的日期會以綠色顯示，日程表或備忘錄會在相應正方形內的左上角以紅色三角形標記。備忘錄或提示可設定響音鬧鐘。


切換日、月、年的步驟。

按鍵	說明
 	每年
 	每月
 	每週
 	每天

在日程表模式中，按左軟鍵  [選項]，子功能表如下：

記事簿

新增 (功能表 4.2.1)

讓您在選定日期新增日程及備忘錄。
輸入主題後按左軟  [確認]。

檢視日程表 (功能表 4.2.2)

您可以參考詳細的日程表，全部內容為您編定的日程表。

刪除已過日程 (功能表 4.2.3)

刪除已收到通知的舊日程。

刪除全部 (功能表 4.2.4)

刪除所有日程。

轉到日期 (功能表 4.2.5)




您可直接移到選擇的日期。

設定鬧鐘鈴聲 (功能表 4.2.6)


您可以設定鬧鐘鈴聲。


備忘錄

功能表 4.3

1. 按左軟鍵  [選擇] 來選擇「備忘錄」。
2. 如果項目為空白，按下左軟鍵  [新增]來加入。
3. 輸入備忘錄，然後按  鍵[確認]。

附註

- ▶ 如果您要變更文字輸入模式，請依序按  鍵。




按下功能表 () 及用導覽鍵選擇訊息。

新訊息

功能表 5.1

寫文字訊息 (功能表 5.1.1)

您的手機收到留言通知訊息及簡訊服務 (SMS) 訊息。留言及簡訊服務為網絡服務。如果要更多資料，請絡您的網絡商。

當  圖出現，您已接收到新留言。當圖示  出現，您已接收到新文字訊息。如果訊息記憶體已滿，訊息會顯示出來， 圖示會閃現，表示不能再收到新訊息。在「收件匣」功能表用「刪除」選項，以刪除舊訊息。

訊息記憶體一旦有空間，將會收到未送達的文字訊息 (如果有足夠空間)。

1. 輸入訊息。輸入文字的詳細資料，請參考第 21 至 24 頁 (輸入文字)。
2. 完成輸入訊息後，按下左軟鍵[選項]以選擇以下所需的選項。

▶ **發送:** 輸入號碼或從通訊錄列表選擇號碼或最近通話號碼。您可以一次過傳送訊息給最多 6 個手機號碼。按下左軟鍵 [選項]。以下的選項會顯示出來。

- ① 通訊錄列表
- ② 最近通話號碼
- ③ 發送

▶ **儲存至草稿:** 可儲存訊息，稍後才傳送。

▶ **字型:** 設定模式及字型大小。

▶ **顏色:** 選取前景與背景的颜色。

▶ **對齊:** 調整訊息內容的對齊方式為靠左、置中或靠右。


▶ **新增字詞至字典:** 您可以加入自己的文字。此功能表只會在文字輸入模式設定為 T9ABC/T9Abc/T9abc 時才會顯示。

▶ **T9語言輸入:** 選擇 T9 輸入模式的語言。選擇「關閉T9」就可關閉 T9 輸入模式。

- ▶ **退出:** 如果您在輸入訊息時按結束，則可以結束輸入並返回 訊息功能表。已輸入的訊息將不會被儲存。
- 3. 當輸入訊息時，按下右軟鍵 [附加]，就可以加入連訊息一起傳送的附件。
- ▶ **圖像:** 您可以傳送及收到含有圖片的文字訊息，也叫作「圖片訊息」。在手機中有數幅預設圖片，預設圖片可由從其他地方收到的新圖片取代。
- ▶ **聲音:** 在短訊中插入可用的聲音。
- ▶ **文字範本:** 使用手機已設定的文字範本。
- ▶ **通訊錄:** 在訊息中可加入手機號碼。
- ▶ **符號:** 新增特定字元。
- ▶ **我的名片:** 您可加入您的名片。

寫多媒體訊息 (功能表 5.1.2)

多媒體訊息可以包含文字、影像及/或聲音片段。此功能僅在您的網絡供應商或服務供應商提供支援時才能使用。僅提供與多媒體訊息或電郵功能相容的裝置才能接收與傳送多媒體訊息。

1. 輸入標題。利用 ，可輸入符號及數字，或使用 T9 輸入模式。輸入多媒體訊息後，按左軟鍵 [確認]。
2. 加入圖像及/或聲音。用上/下導覽鍵可移到下一張。
3. 在選項功能表中用左軟鍵可以加入投影片。如果從選項功能表中捲動至「新增投影片」，並按下左軟鍵[選擇]，就可加入新投影片。
4. 按下左軟鍵 [選項]。可使用以下選項。
 - ▶ **發送:** 支援多個號碼及電郵地址。
 - ▶ **預覽:** 顯示您想傳送的多媒體訊息。
 - ▶ **儲存:** 將多媒體訊息存至草稿或作為範本。
 - ▶ **新增投影片:** 在目前的投影片之前一頁或下一頁加入新投影片。
 - ▶ **轉至投影片:** 移至前一頁或下一頁投影片。
 - ▶ **刪除投影片:** 刪除目前的投影片。
 - ▶ **設定投影片格式**
 - **設定計時器:** 設定投影片、文字、圖片及聲音的計時器。

- **切換文字和圖片:** 改變訊息內的圖片與文字位置。
 - ▶ **刪除媒體:** 您可以刪除投影片的圖像或聲音。此選項只有在加入媒體檔案後才會顯示。
 - ▶ **新增字詞至字典:** 新增個人常用語。僅在文字輸入模式為T9Abc/T9abc/ T9ABC時才會顯示此功能表。
 - ▶ **T9語言輸入:** 選擇 T9 輸入模式的語言。選擇「關閉T9」就可關閉 T9 輸入模式。
 - ▶ **退出:** 如果您在輸入訊息時按結束，則可以結束輸入並返回 訊息功能表。已輸入的訊息將不會被儲存。
5. 按下右軟鍵[附加]。您可插入符號、相片或拍照新相片、聲音、新語音備忘錄、文字範本、我的名片及通訊錄。

收件匣

功能表 5.2

在您收到訊息時會得到提示。訊息將儲存在收件匣中。

在收件匣中，您可以根據圖標識別每則訊息。有關詳細資料，請參閱 圖標說明。

圖標	圖標說明
	多媒體訊息
	文字訊息
	智能咭訊息
	已讀取的多媒體訊息
	已讀取的文字訊息
	Push訊息
	已讀取的Push訊息
	已通知的多媒體訊息

如果手機顯示「無足夠記憶體儲存智能咭訊息」，您只須刪除收件匣內的智能咭訊息。如果手機顯示「無足夠記憶體儲存訊息」，您必須刪除訊息、多媒體及應用程式以釋放空間。

智能咭訊息

SIM訊息指專門儲存在智能咭中的訊息。您可以把訊息移至 手機。

訊息

當提示您已收到多媒體訊息時，您需要等到訊息下載後才可查看。

要閱讀訊息，請按  以選取其中一則訊息。

- ▶ **檢視:** 您可以查看已接收的訊息。
- ▶ **刪除:** 刪除選取的訊息。
- ▶ **回覆:** 您可用訊息回覆給寄件人。
- ▶ **轉寄:** 您可將選取的訊息轉發給其他人。
- ▶ **回覆通話:** 您可以自動回覆電話給發送這封訊息的寄件人。
- ▶ **資訊:** 查看已接收的訊息之相關資訊：寄件者地址、主旨 (僅限於多媒體訊息)、訊息日期與時間、類型與大小。

- ▶ **刪除全部:** 您可以刪除全部訊息。

指定多媒體訊息選項

- ▶ **重複:** 您可重複製造已選的多媒體訊息。
- ▶ **接收:** (只限於多媒體訊息通知)。多媒體訊息與文字訊息不同，必須自動或手動從伺服器上下載。網絡傳送多媒體訊息通知：如果「自動」擷取選項關閉或出現錯誤，必須選擇 [接收] 以確認接收。如果「自動」擷取選項啟動，收到通知接收後訊息會自動下載。

指定下載訊息選項







- ▶ **資訊:** 顯示已下載訊息的內容。
- ▶ **載入:** 執行 WAP 連接到包含在下載訊息的 URL。手機必須設定為 WAP 服務以下載訊息。

寄件匣

功能表 5.3

您可以在其中查看已傳送與未傳送的訊息。對於已傳送的訊息，您可以查看傳送狀態。

查看方法與查看收件箱中的訊息相同。

圖標	圖標說明
	已傳送的多媒體訊息
	未發送的多媒體訊息
	轉發的多媒體訊息
	已傳送的文字訊息
	未發送的文字訊息
	轉發的文字訊息

傳送後:

- ▶ **檢視:** 您可以查看已傳送的訊息。
- ▶ **轉寄:** 您可將選取的訊息轉發給其他人。
- ▶ **刪除:** 刪除選取的訊息。
- ▶ **資訊:** 查看已接收的訊息相關資訊：寄件者地址、主旨 (僅限於多媒體訊息)、訊息日期與時間與類型。
- ▶ **刪除全部:** 您可刪除寄件匣內的全部訊息。

當您沒有發送訊息時:

- ▶ **檢視:** 您可查看沒有發送的訊息。
- ▶ **刪除:** 您可刪除目前的訊息。
- ▶ **發送:** 您可發送訊息。
- ▶ **資訊:** 您可查看寄件匣的資訊。
- ▶ **刪除發送:** 您可發送所有還未發送的訊息。
- ▶ **刪除全部:** 您可刪除所有還未發送的訊息。

草稿

功能表 5.4

使用此功能表，您可以預設多達五則最常使用的多媒體訊息。此功能表會顯示預設的多媒體訊息列表。


可以使用的選項如下。

- ▶ **檢視:** 您可以查看多媒體訊息。
- ▶ **修改:** 修改選定訊息。
- ▶ **刪除:** 刪除選定訊息。
- ▶ **資訊:** 檢視訊息資訊。
- ▶ **刪除全部:** 刪除資料夾中的全部訊息。

收聽留言訊息

功能表 5.5

此功能表可讓您快速存取留言訊息(如果網絡提供此服務)。使用此功能之前，您必須輸入從網絡供應商取得的語音伺服器號碼。

收到新的語音訊息時，此符號“”會在屏幕上顯示。請諮詢您的網絡供應商以取得其服務的詳細資料，以便正確設定手機。

資訊廣播

功能表 5.6

(須視網絡及申請的服務能否支援而定)

資訊廣播訊息是網絡傳送給手機用戶的文字訊息，其內容主要為一般資訊，例如：天氣預報、交通新聞、出租車資訊、醫藥及股票行情。在收到資訊廣播訊息時，會有一則快顯訊息提示您收到新訊息，或資訊廣播訊息會直接顯示。在備用模式下，檢視資訊廣播訊息時有下列可用選項。

讀取 (功能表 5.6.1)

如果收到資訊廣播訊息並選取**讀取**以查看訊息，訊息則會顯示在屏幕上。

標題 (功能表 5.6.2)

要建立新的標題，請按下左軟鍵 [選擇]，然後選擇**新增**。如果已經建立主題，則可使用左軟鍵 [選項]來修改或刪除標題。

常用範本

功能表 5.7

列表中有預設的訊息。您可以查看及編輯範本訊息或建立新訊息。有兩種範本可用：文字及多媒體訊息。

文字範本 (功能表 5.7.1)

- 請覆電話！
- 我遲到了，我會立刻到達。
- 您在哪裡？
- 我在路途上。
- 非常緊急，請速聯絡！
- 我愛你！

可以使用的選項如下。

- ▶ **檢視**: 查看已選的訊息。
- ▶ **刪除**: 刪除範本。
- ▶ **新增**: 可建立新範本。
- ▶ **發送方式**: 以文字訊息或多媒體訊息傳送。
- ▶ **修改**: 可修改已選的範本。
- ▶ **刪除全部**: 刪除所有範本。

多媒體訊息範本 (功能表 5.7.2)

您可以使用下列子功能表。

- ▶ **預覽:** 顯示草稿多媒體訊息。
- ▶ **儲存:** 儲存多媒體訊息為範本。
- ▶ **編輯標題:** 您可編輯標題。
- ▶ **新增投影片:** 在目前投影片的前或後加入投影片。
- ▶ **轉至投影片:** 移到下一個或前一個投影片。
- ▶ **刪除投影片:** 刪除選取的投影片。
- ▶ **設定投影片格式:** 設定投影片、文字的計時器，或將訊息內容放在右側、左側、上方或下方。
- ▶ **刪除媒體:** 您可移除在投影片上的圖片或聲音。此選項只有在加入媒體檔案後才會顯示。
- ▶ **新增字詞至字典:** 您可加入自己的文字。此功能表只有在文字輸入模式設為預測模式時才會顯示。
- ▶ **T9語言輸入:** 選擇 T9 輸入模式。
- ▶ **退出:** 結束功能表。

我的名片 (功能表 5.7.3)

此選項幫助您製作自己的名片。輸入名稱、手機號碼、公司電話號碼、傳真號碼及電郵地址。

設定

功能表 5.8

文字訊息 (功能表 5.8.1)

▶ 訊息類型

文字、語音、傳真、國內傳呼、X.400、電子郵件、ERMES

通常，訊息類型會被設定為文字。您可以將您的文字轉換為其他接收設備適用的格式。請洽詢您的服務供應商以瞭解您是否可使用此功能。

- ▶ **有效期:** 這項網絡服務可讓您設定訊息中心可以儲存訊息的期限。
- ▶ **發送報告:** 如果您設定本功能表為是，您可以檢查您的訊息是否已成功發出。

- ▶ **回覆費用:** 當您發送一個訊息時，這項功能可讓收件人回覆您的訊息，並將回覆費用記入您的通話帳單。部份網絡商不支援此功能。
- ▶ **短訊中心號碼:** 當您要發送文字訊息時，您可以透過本功能表取得短訊中心的地址。

多媒體訊息 (功能表 5.8.2)

- ▶ **重要性:** 您可以設定所選訊息的重要性。
- ▶ **有效期:** 此網絡服務可讓您設定訊息中心可以儲存文字訊息的期限。
- ▶ **發送報告:** 如果在此功能表中設定為是，可以查看是否已成功傳送訊息。
- ▶ **自動下載:** 如果選取開啓，可以自動接收多媒體訊息。如果選取關閉，您將只能接收收件匣中的通知訊息，然後您可以查看此通知。如您選用「僅限本地網絡」，手機則可以接收多媒體訊息，視本地網絡提供的服務而定。
- ▶ **網絡設定:** 如果選用多媒體訊息伺服器，您可設定多媒體伺服器的URL。

允許訊息類型

- 個人: 個人訊息。
- 廣告: 商業訊息。
- 資訊: 必要資訊。

留言信箱號碼 (功能表 5.8.3)

如果您的網絡服務供應商支援這項功能，您就可以聽取留言 訊息。當您收到新的留言訊息時，屏幕上將會顯示一個符號。請向您的網絡服務供應商瞭解他們的服務詳情，以適當地設定手機。

- ▶ **本地留言中心:** 在開戶網絡中收聽留言信箱所撥打的號碼。
- ▶ **漫遊地方:** 在其他網絡聽取留言訊息所撥打的號碼。

資訊廣播 (功能表 5.8.4)

▶ 接收

是: 若您選擇本功能表，您的手機將可接收資訊廣播訊息。

否: 若您選擇本功能表，您的手機將無法再接收資訊廣播訊息。

▶ **提示**

是: 若您選擇本功能表，您的手機在收到資訊廣播訊息時將會發出一聲嗶聲。

否: 若您選擇本功能表，您的手機在收到資訊廣播訊息時將不會發出一聲嗶聲。

▶ **語言**

按[開/關] 可以選取所需的語言。然後資訊廣播訊息將會以您選取的語言顯示。

Push 訊息 (功能表 5.8.5)

您可以設定選項是否接收訊息。

▶ **接收**

接收開啓: 接收所有 push 訊息。

接收關閉: 不接收任何 push 訊息。

▶ **自動下載**

開啓: 自動下載 push 訊息。

關閉: 下載 push 訊息，使用使用者互動。

相機

功能表 6.1

此應用程式可讓您拍攝靜態相片。您可拍攝您想要的大小的相片，還可用來當作聯絡人的相片、桌面及其他一般的用途。拍攝照片後，一幅靜態的圖像可以經多媒體訊息或電郵傳送。

按下左軟鍵顯示以下彈出功能表項目。

- ▶ **亮度:** 決定亮度大小。
- ▶ **大小:** 決定圖像大小。
- ▶ **計時器:** 決定延遲時間。
- ▶ **質量:** 決定圖像質素。
- ▶ **白平衡:** 根據環境而變更設定。
- ▶ **影集:** 顯示拍攝的靜態圖片。
- ▶ **退出:** 結束相機。
- ▶ **模式:** 決定是否靜態拍攝還是連環拍攝。
- ▶ **效果:** 決定相片的特別效果。
- ▶ **閃光燈:** 決定閃光燈操作。
- ▶ **縮放:** 決定縮放距離。

注意

- ▶ 畫框拍攝只能在大小設定為 128x160 像素時使用。

視像攝錄機

功能表 6.2

此應用程式可讓您拍攝影片。使用此功能時，可播放及觀看已儲存的影片檔案。拍攝影片後，影片檔案可以經多媒體訊息或電郵傳送。

按下左軟鍵 [選項] 顯示以下彈出功能表項目。

- ▶ **亮度:** 決定亮度大小。
- ▶ **大小:** 決定圖像大小。
- ▶ **計時器:** 決定延遲時間。
- ▶ **質量:** 決定錄像質素。
- ▶ **白平衡:** 根據環境而變更設定。
- ▶ **錄影時間:** 決定錄影時間。
- ▶ **影集:** 顯示已拍攝的影片。
- ▶ **退出:** 結束相機。
- ▶ **效果:** 決定錄影的特別效果。

- ▶ **閃光燈:** 決定閃光燈操作。
- ▶ **縮放:** 決定縮放距離。

我的相片

功能表 6.3

您可以檢視與傳送圖片。除此之外，還可設定相片為桌布。

選項

- ▶ **多格子預覽:** 屏幕上最多只可檢視9幅縮圖。
- ▶ **透過藍芽發送:** 可經由藍芽傳送圖片。
- ▶ **寫多媒體訊息:** 以多媒體訊息發送相片。
- ▶ **設為牆紙:** 您可以將圖片設為牆紙。
- ▶ **投影片播放:** 您可使用這個功能，以自動放映投影片的方式檢視圖片。
- ▶ **刪除:** 刪除圖片。
- ▶ **編輯名稱:** 編輯圖片名稱。
- ▶ **資訊:** 您可以查看圖片的標題、大小、日期和時間等資訊。

我的影片

功能表 6.4

您可以播放及發送影片。

選項

- ▶ **播放:** 播放影片。
- ▶ **透過藍芽發送:** 可經由藍芽傳送影片。
- ▶ **重新命名:** 您可以編輯影片的標題。
- ▶ **刪除:** 您可以刪除影片。
- ▶ **刪除全部:** 您可以刪除全部影片。
- ▶ **資訊:** 您可以查看影片的資訊。

MP3

功能表 6.5

S5200 備有內置整合 MP3 播放器。用相容的耳機或內置揚聲器，在手機記憶體上就可以聆聽 MP3 音樂檔案。

附註

- ▶ 因為揚聲器尺寸小，在某些情況下，聲音可能會扭曲，特別在音量調到最高及有很多低音時。因此，我們建議您使用立體聲耳機，享受高質素的音樂。

音樂播放器支援：

- ▶ MPEG-1 Layer III、MPEG-2 Layer III、MPEG-2.5 Layer III 取樣頻率由 8KHz 至 48KHz。位元率高至 320Kbps、立體聲。
- ▶ AAC: ADIF、ADTS 格式 (取樣頻率由 8KHz 至 48KHz)
- ▶ AAC+: V1: (位元率 16~128Kbps)
V2 (位元率 16~48Kbps)
(取樣頻率由 8KHz 至 48KHz)
- ▶ MP4、M4A: 取樣頻率最高由 8KHz 至 8KHz，位元率高至 320Kbps、立體聲。
- ▶ WMA: 取樣頻率最高由 8KHz 至 48KHz，位元率高至 320Kbps、立體聲。

附註


- ▶ S5200 不支援 MP3 及 AAC 檔案的變動率。因此，您不可能將檔案由 VBR MP3 格式變更爲 AAC。

使用大量儲存，可以從相容的電腦傳送 MP3 檔案到手機記憶體。當您用 USB 線 (在包裝內) 將手機連接到電腦時，只須用 USB 線連接電腦。如果使用 Win98 SE，您須要在 CD-ROM 安裝 Windows 98 大量儲存驅動程式。

附註

- ▶ 您應複製 MP3 到我的媒體\音樂資料夾。如果複製另一個資料夾，您不能看見 MP3 檔案。
- ▶ 電腦在 Windows 98 SE、Windows ME、Windows 2000、Windows XP 執行系統。

MP3 播放器 (功能表 6.5.1)

1. 按下 MP3 功能表，然後選擇 MP3 播放器。
2. 按下左軟鍵  [選項] 到下列功能表。
 - ▶ **檢視播放列表:** 在聆聽音樂時，您可查看播放列表。
 - ▶ **區域重複:** 當在功能表選擇「啓動」，目前音樂的特別區域會重複。
 - ▶ **設爲鈴聲:** 此功能表可設定 MP3 檔案爲鈴聲。您也可在「情景模式」設定爲聆聲。

▶ 設定

- **調諧器**
此功能表幫助您在聆聽音樂時配合不同環境。此手機支援四種預設功能表。當您進入此功能表，您可以查看均衡器目前的數值。
- **播放模式**
此功能表可設定播放模式。
- **設定隨機播放**
您可以隨機聆聽 MP3 音樂。
- **視覺效果**
您可以選擇視覺效果功能表：Wave、Guitarist、Aqua。在播放 MP3 檔案時，此功能表可變更主屏幕的背景。

播放列表 (功能表 6.5.2)

此功能表可查看整個播放列表。按下導覽鍵可移動曲目。

此外，如果您選擇選項功能表，您可刪除檔案或查看檔案資訊。

附註

- ▶ 音樂檔案之著作權可受國際公約及國內著作權法之保護。因此，可能需要取得授權或許可以複寫或複製音樂。在部份國家，國家法禁止私人複製受著作權保護的材料。在下載或複製檔案之前，請檢查適用國家關於使用此類材料的國家法律。

設定 (功能表 6.5.3)

此功能表可設定以下項目：調諧器、播放模式、設定隨機播放及視覺效果。


語音備忘錄


功能表 6.6

語音備忘讓您記錄多達十個備忘錄，而每個備忘錄可錄製多達二十秒。

錄製 (功能表 6.6.1)

您可在語音備忘錄功能表錄製語音備忘。

1. 一旦已開始錄製，會顯示訊息「錄音中」及餘下時間。
2. 如果您想結束錄製，按下左軟鍵  [儲存]。

3. 輸入語音備忘標題，按下左軟鍵  [確認]。

檢視列表 (功能表 6.6.2)

手機顯示語音備忘列表。您可以播放、以多媒體發送及刪除已錄製的語音備忘。

設定

功能表 6.7



相機 (功能表 6.7.1)

- ▶ **自動儲存:** 如果您設定為「是」，即使功能列不顯示出來，圖像也會自動儲存。
- ▶ **刪除全部相片:** 此功能表在徵詢您的確認後，可刪除全部相片。

視像攝錄機 (功能表 6.7.2)

- ▶ **刪除全部影片:** 此功能表可刪除全部影片。

您可以依您個人之方便與喜好來設定以下功能表。

1. 在備用模式下按  鍵[功能表]。
2. 按  鍵直接進入設定。

日期和時間

功能表 7.1

設定與日期和時間有關的功能。

日期設定 (功能表 7.1.1)

- ▶ **設定日期:** 在本功能表中，您可以輸入手機的日期。
- ▶ **日期格式:** 您可以在本功能表中設定日期格式。日期格式分別有日/月/年, 月/日/年, 年/月/日。

時間設定 (功能表 7.1.2)

- ▶ **設定時間:** 您可以在本功能表中輸入手機的時間。
- ▶ **時間格式:** 您可以選擇24小時制或12小時制的時間格式。

手機設定



功能表 7.2

您可以設定與手機有關的功能。

顯示設定 (功能表 7.2.1)

- ▶ **牆紙:** 您可以選擇在備用模式中的背景圖片。

預設

按  或  選取作為牆紙的圖案或動畫。

我的資料夾

選取作為牆紙的圖案或動畫。

- ▶ **問候語:** 如果您選擇開啓，本功能表可讓您選擇備用時顯示的問候語。您可在文字輸入模式下修改問候語的文字。
- ▶ **背景燈:** 您可以設定每次按一個按鍵時背景燈的亮燈時間。
- ▶ **網絡名稱:** 如果設為「開啓」，屏幕上會顯示網絡名稱(服務供應商名稱)。

主題配置 (功能表 7.2.2)


讓您在預設主題中選擇一個主題。

語言 (功能表 7.2.3)

變更手機顯示的語言。此操作亦會影響語言輸入模式。

通話設定

功能表 7.3

您可以在設定功能表中按  鍵[選擇]以設定有關通話的功能表。

來電轉接 (功能表 7.3.1)

來電轉接服務可讓您將語音、傳真和數據通話轉接到另一個號碼。詳細資訊請洽詢電訊服務商。

▶ 所有語音通話

無條件轉接所有語音來電。

▶ 線路繁忙時

當手機正在通話時轉接語音通話。

▶ 無人接聽時

當您沒有接聽時轉接語音通話。

▶ 無網絡或關機時

當手機已關機或在網絡範圍以外時轉接語音通話。

▶ 所有數據通話

無條件轉接至連接PC的號碼。

▶ 所有傳真通話

無條件轉接至連接傳真的號碼。

▶ 取消全部

取消所有通話轉接服務。

子功能表

來電轉接功能表亦包含下列子功能表。

• 啓動

啓動對應的服務。

留言信箱中心

轉接至訊息中心。此功能無法在所有傳真通話及數據通話功能表中使用。

其他號碼



輸入要轉接的號碼。

常用號碼

顯示最近5個轉接號碼的列表。

- 取消
取消對應的服務。
- 檢視狀態
檢視對應服務的狀態。

接聽模式 (功能表 7.3.2)

- ▶ 滑蓋打開
如果你選擇此功能表，只須簡單滑開手機，就可以接聽來電。
- ▶ 按任何鍵
如果您選擇本功能表，按除  [結束] 鍵以外的任何鍵都可接聽來電。
- ▶ 按發送鍵
如果選用此功能表，則只可以按  [發送] 鍵來接聽來電。

發送我的號碼 (功能表 7.3.3) (需視網絡及申請的服務能否支援而定)

- ▶ 按網絡設定
如選取此項目，則可以根據您撥打的線路提供手機號碼，如線路1或線路2。
- ▶ 開啓
如果您選擇本功能表，您可以將您的手機號碼發送給其他人。亦即是，您的電話號碼將會顯示在接聽者的手機上。
- ▶ 關閉
如果您選擇本功能表，您將不會發送您的手機號碼。

來電等候 (功能表 7.3.4) (需視網絡能否支援而定)

- ▶ 啓動
啓動對應的服務。
- ▶ 取消
取消對應的服務。

▶ 檢視狀態

查詢此服務的狀態。

分鐘提示 (功能表 7.3.5)

如果選擇「開啓」，通話時每分鐘發出嗶聲，以提示其通話時間。

自動重撥 (功能表 7.3.6)

▶ 開啓

啓動此功能後，通話無法接通時，手機會自動重撥該號碼。

▶ 關閉


當原初通話無法接通時，手機將不會自動重撥該號碼。

安全設定

功能表 7.4

PIN碼要求 (功能表 7.4.1)

在本選項中，您可以設定手機在開機時詢問智能咭的PIN碼。如果這項功能已被啓動，您將會被要求輸入PIN碼。

1. 在安全設定功能表中選取PIN碼要求，然後按  [選擇]。

2. 設定啓動/關閉。

3. 如果要變更此設定，則在開機時需要輸入PIN碼。

4. 如果輸入錯誤的PIN碼超過3次，手機將被鎖定。PIN碼一旦被鎖定，您需要輸入PUK碼。

5. 您最多可以輸入PUK碼10次。如果輸入錯誤的PUK碼超過10次，就無法將手機解除鎖定。請洽詢電訊服務商。

手機鎖 (功能表 7.4.2)

使用安全密碼可避免他人擅用您的手機。如果將手機鎖設定為開機時，每次開機時手機均會要求輸入安全密碼。如果將手機鎖設定為智能咭更換時，手機只會在您更換智能咭時才要求輸入安全密碼。

自動鍵盤鎖時間設定 (功能表 7.4.3)

此功能表可設定自動鍵盤鎖的時間。

通話限制 (功能表 7.4.4)

通話限制服務可限制您的手機撥打或接聽特定類別的來電。這項功能需要網絡密碼。您將可看到以下子功能表。

- ▶ **所有撥出通話**
限制撥出所有通話的服務。
- ▶ **國際撥號**
限制撥出所有國際通話的服務。
- ▶ **漫遊時的國際撥號**
限制撥出所有開戶網絡以外的通話（國際漫遊）服務。
- ▶ **所有來電**
限制接聽所有來電的服務。
- ▶ **漫遊時的來電**
限制漫遊時接聽所有來電的服務。
- ▶ **取消全部**
您可以取消所有通話限制服務。
- ▶ **更改密碼**
您可以更改從服務供應商取得的網絡密碼。

子功能表

- **啓動**
要求網絡啓用通話限制。
- **取消**
停用選取的通話限制。
- **檢視狀態**
檢視是否限制通話。

固定撥號 (功能表 7.4.5)

(取決於智能咭)


您可以限制撥出電話時只能撥打選取的電話號碼。這些號碼由您的PIN2碼提供保護的。

- ▶ **啓動**
您可以限制撥出電話時只能撥打選取的電話號碼。
- ▶ **關閉**
停用固定撥號功能。
- ▶ **號碼列表**
查看設定為固定撥號的號碼列表。

更改密碼 (功能表 7.4.6)

PIN 是個人身份號碼的縮寫，可防止他人擅用手機。

可以更改存取密碼：**PIN2碼**及**安全密碼**。

1. 如果您要更改PIN2碼及安全密碼，請輸入您的舊密碼，然後按  鍵[確認]。
2. 輸入新的PIN2碼及安全密碼，然後加以確認。

網絡設定

功能表 7.5

您可以自動或手動地選擇您要連接的網絡。通常，手機以自動方式選擇網絡。

網絡選擇 (功能表 7.5.1)

自動

如果選擇自動模式，手機會自動搜尋並選擇網絡。選擇自動後，即使電源關閉後再重新啓動，手機也會設定為自動。

手動

手機將搜尋並顯示出一個可用的網絡列表。如果您所需使用的網絡與您的開戶網絡服務商已簽訂漫遊協議，您就可以選擇這個網絡。如手機無法存取該選取的網絡，您仍可選擇其他網絡。如果關機，手機會重設為自動。

首選網絡

您可以設定首選的網絡列表，手機會先嘗試登入該網絡，然後再嘗試登入其他網絡。此列表是透過手機的已知網絡預定列表而建立的。

頻段選擇 (功能表 7.5.2)

用此來設定網絡頻段，GSM 900/1800 或 GSM1900。

GPRS設定

功能表 7.6

您可以根據各種不同狀況設定GPRS服務。

重設設定

功能表 7.7

您可恢復原初設定。此外，您必須有安全密碼才可啓動這項功能。

記憶體狀態

功能表 7.8

內置記憶體 (功能表 7.8.1)

此功能顯示手機記憶體的使用狀況。


多媒體記憶 (功能表 7.8.2)

此功能顯示手機多媒體記憶的使用狀況。

服務

您可以存取各種WAP (無線應用協定) 服務，例如銀行業務、新聞、天氣報導與航機班次等資訊。這些服務是專為流動電話而設計的，並由WAP服務供應商支援。

請向提供服務的網絡商與/或服務供應商查詢您可以使用的WAP服務、價格與收費表。服務供應商也會提供如何使用服務的說明。





連線後即會顯示主頁。主頁內容因服務供應商而異。輸入URL網址即可存取任何網頁。任何時候要結束瀏覽器，請按  鍵。手機將會回到備用模式。

使用WAP 瀏覽器瀏覽

使用手機按鍵或WAP 瀏覽器目錄即可上網。

使用手機按鍵

上網時，手機按鍵的功能和手機備用模式時不同。

按鍵	說明
 	捲動內容區的每一行
	回到上一頁
	選擇選項並確認動作

使用WAP 瀏覽器目錄

流動上網時可以使用各種目錄選項。

附註

▶ WAP 瀏覽器的目錄將因您的瀏覽器版本而有所不同。

互聯網

功能表 8.1

主頁 (功能表 8.1.1)


連線到主頁。主頁是目前啓用之網絡設定中定義的網站。如果您還未在已啓用的網絡設定中定義主頁，服務供應商將為您定義一個主頁。

書籤 (功能表 8.1.2)




您可以在此目錄中，將喜愛的網頁儲存起來，方便日後存取。

手機已預載許多書籤。這些預載書籤無法刪除。

建立書籤

1. 按左軟鍵  [選項]。
2. 選擇「新增」，然後按[確認]鍵。

3. 輸入所需的地址和標題後，按[確認]鍵。

- ▶ **要訣:** 使用  鍵和  鍵來輸入符號。要輸入“.”，請按  。

選定所需的書籤後，便可以使用下列選項。

- ▶ **連接:** 連接至您選取的書籤。
- ▶ **新增:** 選此建立新書籤。
- ▶ **修改:** 您可以編輯選定書籤的地址和/或標題。
- ▶ **刪除:** 刪除選定的書籤。
- ▶ **刪除全部:** 刪除全部書籤。

轉至URL (功能表 8.1.3)

直接連接至想要瀏覽的網站。輸入指定網址後，按[確認]鍵。

設定 (功能表 8.1.4)

網絡設定

網絡設定即用來連接互聯網的網絡資訊。

附註

- ▶ 如果智能咭支援 SAT (即智能應用程式工具集) 服務，本功能表將出現智能咭上儲存之系統業者服務名稱。如果智能咭並不支援 SAT 服務，本功能表將為操作模式。

每個網絡設定的目錄如下：

- ▶ **啓動:** 啓用選定網絡設定。
- ▶ **設定:** 用來編輯與變更選定網絡設定的WAP 設定。
 - **主頁:** 此設定可讓您輸入要當作主頁使用的 URL 位址。您不需要在每一個 URL 位址前面輸入“http://”，因為 WAP 瀏覽器會自動為您加入。
 - **連接方式:** 你可設定連接方式: GPRS 或數據。
 - 1 數據
 - 2 GPRS
 - **數據設定:** 僅在您選取數據作為連接方式服務時才會出現。
 - **撥出號碼:** 輸入您登入 WAP 閘道須撥打的電話號碼。

用戶帳號: 您的撥號伺服器（而非WAP閘道）將以此用戶名稱來確認您的身份。

密碼: 您的撥號伺服器（而非WAP閘道）將以此密碼來確認您的身份。

通話類型: 選擇數據通訊的類型：類比或數字(ISDN)。

持續時間: 您需要輸入持續時間。輸入持續時間後，如果沒有輸入或傳送任何資料，將停用WAP 導覽服務。

連接速度: 數據連接的速度。

- **GPRS設定:** 僅在選擇GPRS 作為連接方式時，才可使用這些服務設定。

APN: 輸入GPRS的APN。

用戶帳號: APN伺服器的用戶身份。

密碼: APN伺服器所需的密碼。

- **Proxy伺服器設定**

Proxy伺服器: 開啓/關閉

IP位址: 輸入代理的IP位址。

端埠號碼: 輸入代理端埠號碼。

- **DNS設定**

主伺服器: 輸入您要存取的主DNS伺服器IP位址。

次伺服器: 輸入您要存取的次DNS伺服器IP位址。

▶ **重新命名:** 變更設定名稱。

▶ **刪除:** 刪除列表中選定的網絡設定。

▶ **新增:** 新增網絡設定。

緩存記憶

設定是否透過緩存記憶體進行連線。

Cookies

檢查是否已使用Cookies。

清除緩存記憶

移除所有儲存在緩存記憶體中的文字。

清除Cookies

移除所有儲存在Cookies內的文字。

安全

在此功能表下將顯示一系列現有的安全認證標準。

- ▶ **授權:** 您可以查看手機儲存的機關憑證。
- ▶ **個人:** 您可以查看手機儲存的個人憑證。

智能咭服務 (不同智能咭有不同情況)

功能表 8.2

您的服務供應商可以透過智能咭提供特殊的應用程式，例如家庭銀行、股市等等。如您已註冊其中一種服務，服務名稱會出現在主功能表的最末處。透過智能咭服務功能表，您的手機將擁有未來擴充性，可支援服務供應商提供的額外服務。



詳細資訊請洽詢您的服務供應商。

下載


遊戲及應用

功能表 9.1

遊戲及應用 (功能表 9.1.1)

在此目錄中，您可以管理手機中安裝的Java 應用程式。您可以播放或刪除已下載的應用程式，或設定連線選項。已下載的應用程式會整理在資料夾內。按左軟鍵  [選項]，然後再按 [選擇] 來開啓選定資料夾，或啓動選定MIDlet。按左軟鍵  [選項]，即可使用下列目錄。

附註

- ▶ 下載 Java 遊戲後，請按[確認]鍵 () 儲存遊戲在新資料夾。

- ▶ **遊戲開始:** 開始執行選定應用程式。
- ▶ **資訊:** 顯示應用程式資訊。

附註

- ▶ 您無法將內建子資料夾或其內的遊戲移動或重新命名。

Java™ 是Sun Microsystems 所開發的技術。和使用標準 MS Internet Explorer 瀏覽器下載 Java Applet 的方式類似，您也可以使用具 WAP 功能的手機下載 Java MIDlet。取決於服務供應商，您可以下載所有Java 程式，例如Java 遊戲，並在手機上執行。下載後，您可以在「遊戲及應用」功能表內查看 Java 程式並進行選取、執行或刪除。本手機會以.JAD 與.JAR 格式儲存Java 程式的檔案。

附註

- ▶ JAR檔案是Java 程式的壓縮格式，JAD檔案則是包含所有詳細資訊的說明檔案。在下載之前，您可以透過網絡查看JAD檔案內全部檔案的詳細說明。
- ▶ 即使它們是以標準語言(J2ME) 建立，並非所有Java 應用程式均兼容於全部市售手機，因為它們可能只針對某款手機使用特定的程式庫。當下載了不是專為手機而設的 Java 應用程式，軟件可能會被鎖定或自動開啓。我們必須指出，造成這種問題的原因是應用程式不兼容，並非產品發生任何問題。

附註!

- ▶ 只有J2ME(Java 2 Micro Edition，Java 2 微型版)程式才能在手機環境中執行。J2SE(Java 2 Standard Edition，Java 2標準版) 程式只能在電腦環境中執行。

網絡設定 (功能表 9.1.2)

此功能表包含與互聯網功能表相同的設定。實際上，如要下載新應用程式，將需要使用WAP連線。

圖像

功能表 9.2

按左軟鍵  [選項] 可顯示下列選項。

- ▶ **設為牆紙:** 您可以將選定圖片設為牆紙。
- ▶ **寫多媒體訊息:** 已下載的圖片可以透過多媒體訊息發送。
- ▶ **透過藍芽發送:** 可經由藍芽傳送圖片。

聲音

功能表 9.3

按左軟鍵  [選項] 可顯示下列選項。

- ▶ **設為鈴聲:** 將目前選定聲音設定為鈴聲。
- ▶ **寫訊息:** 聲音可以透過文字訊息或多媒體訊息發送。
- ▶ **透過藍芽發送:** 聲音可經由藍芽傳送。

已儲存檔案

功能表 9.4

此資料夾與檔案儲存相似。因圖像、聲音及一般檔案不受手機支援，所以其包含所有經 UMS 功能或藍芽傳送的檔案。

按左軟鍵[選項]，您可以查看或播放檔案 (如果受支援)、刪除檔案或透過藍芽發送檔案。

USB 連接

S5200 可以經由 USB 線連接電腦，以傳送檔案、內容及使用內置數據機。您可以在以下部份找到與此功能有關的詳細資料。

USB 媒體儲存 (UMS)

UMS 功能 (USB 媒體儲存) 可以處理儲存在手機內置記憶體 (64MB) 的多媒體檔案，將其處理為一般 USB 儲存盤。此功能不需安裝額外的軟件。

您可以預覽 JPG(最高 460K)、GIF(最高 100K)、可以播放音樂、也可附加在多媒體訊息上。

附註

▶ 當使用 UMS 功能時，您不能夠接收手機或訊息。

1. 在手機待機畫面將 USB 線連到接手機及電腦。電腦會在幾秒後識別周邊設備。
2. 手機會在主屏幕顯示「USB」。
3. 在電腦上，手機在「我的電腦」資料夾會被識別為「卸除式磁碟」。同時，會指定系統磁碟字母，例如「E:\」。之後，您可以從手機上載或下載檔案，就如一般的 Windows 資料夾。
4. 雙按「卸除式磁碟」並開啓「我的媒體」資料夾。四個新資料夾會出現：
 - **聲音:** 在資料夾內您可以複製聲音檔案。支援的格式為：MP3、AAC、AAC+、AAC++、WMA、MP4 (聲音) 及 WAV。在此資料夾內的檔案可以手機 MP3 播放器播放。

- **相片:** 此資料夾用來儲存手機數碼相機拍攝的相片。使用指令複製及貼上，可以從手機傳送相片到電腦。

附註

- ▶ 即使您可以從電腦上載新圖片，手機也不會在「我的相片」功能表顯示出來。因此，我們建議不要上載任何東西到此資料夾。如果您想上載新牆紙到手機，請使用 CD-Rom 提供的專用程式。

- **儲存:** 此資料夾與已儲存檔案相似。您可以上載任何類型的檔案到這裡：圖像、聲音、甚至手機不支援的檔案 (即 word 及 excel 檔案)，可隨身攜帶及下載這些檔案到另一部電腦。在手機上，儲存在此資料夾的檔案列在 (功能表 - 下載 - 已儲存檔案)。
- **錄影:** 於此資料內，在電腦可以下載手機數碼相機拍攝的影片，也可上載新影片到手機。此資料夾支援 3GP 檔案格式。在手機上，您可以在此資料夾查看檔案 (功能表 - 多媒體 - 我的影片)。

附註

- ▶ 您可以上載任何大小的檔案直至記憶體已滿。
- ▶ 您可以在四個預設資料夾內建立多至十個巢狀資料夾。
- ▶ 切勿變更預設資料夾名稱，否則不能正確運作。

5. 檔案傳送完成後，從視窗選項拔除 USB 周邊設備及從手機拔除連線。

警告!

- ▶ 在檔案傳送中切勿拔除手機連線。拔除手機連線可能會損害記憶體。在拔除連線前，一定要經由視窗選項拔除周邊設備。

PC 程式及互聯網

您可以將手機連接到電腦，以管理您的通訊錄聯絡人、上載新內容 (如牆紙及鈴聲) 或使用內置數據機。

1. 安裝包含在 CD-Rom 的程式。
2. 在手機上，開啓功能表「工具 - 數據機」並確定啓動。
3. 使用 USB 線將手機連接到電腦，啓動想執行的程式。

附註

- ▶ 要連接 USB，打開手機電源後待數分鐘並停在備用視窗。

4. 使用數據機後，建議從功能表「工具 - 數據機」關閉數據機。


手機配有多種配件。您可依據個人需要選擇所需配件。

標準電池




數據傳輸組件/光碟

您可使用數據傳輸組件連接PC進行通訊。

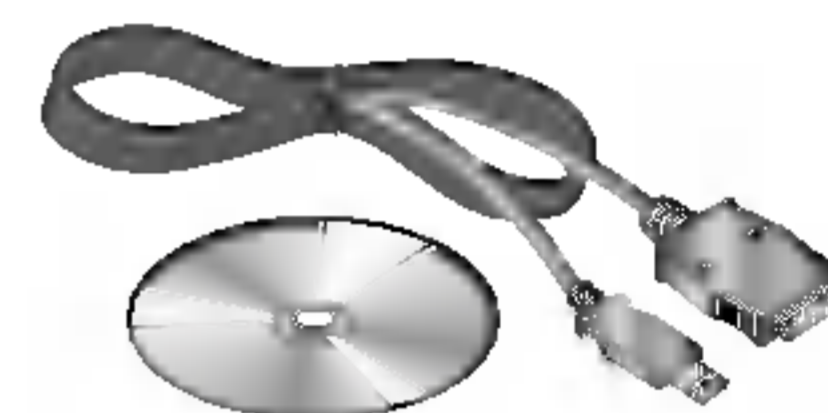

免提聽筒

進行免提聽筒操作。
包括耳機與麥克風。

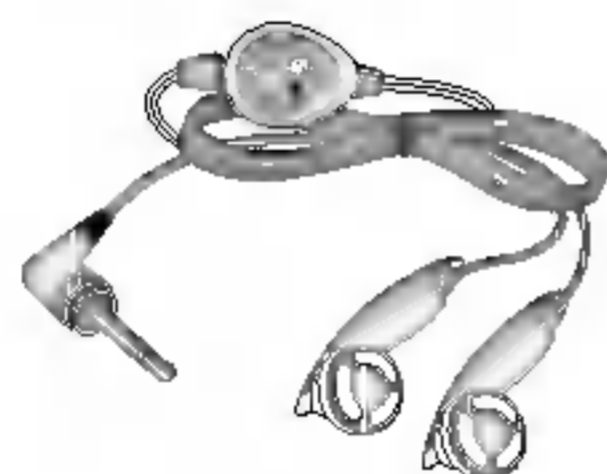

旅行充電器

您可在離家或辦公室
時使用充電器充電。



附註

- ▶ 請務必使用原裝LG 配件。
- ▶ 不使用原裝配件可能會導致保養失效。
- ▶ 以上配件可因區域不同而有所差異, 詳情可諮詢我們的區域服務商或代理商。

一般資料

產品名稱：S5200

系統：GSM 900 / DCS 1800 / PCS 1900

適用溫度

最高：+55°C (放電中)

+45°C (充電中)

最低：-10°C

Declaration of Conformity LG Electronics

Supplier Details

Name
LG Electronics Inc
Address
LG Twin Tower
20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name
GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment
Model Name
S5200
Trade Name
LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 / EN 301 489-07 : 2002 / EN 301 489-17 V1.2.1
EN 300 328 V1.4.1
EN 60950 : 2001
EN 50360/EN 50361 : 2001
3GPP TS 51.010-1,
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

Name Jin Seog, Kim / Director
Issued Date 8.Sep. 2005




LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seckim @ lge.com

Signature of representative

| S5200 | 用户手册

视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。

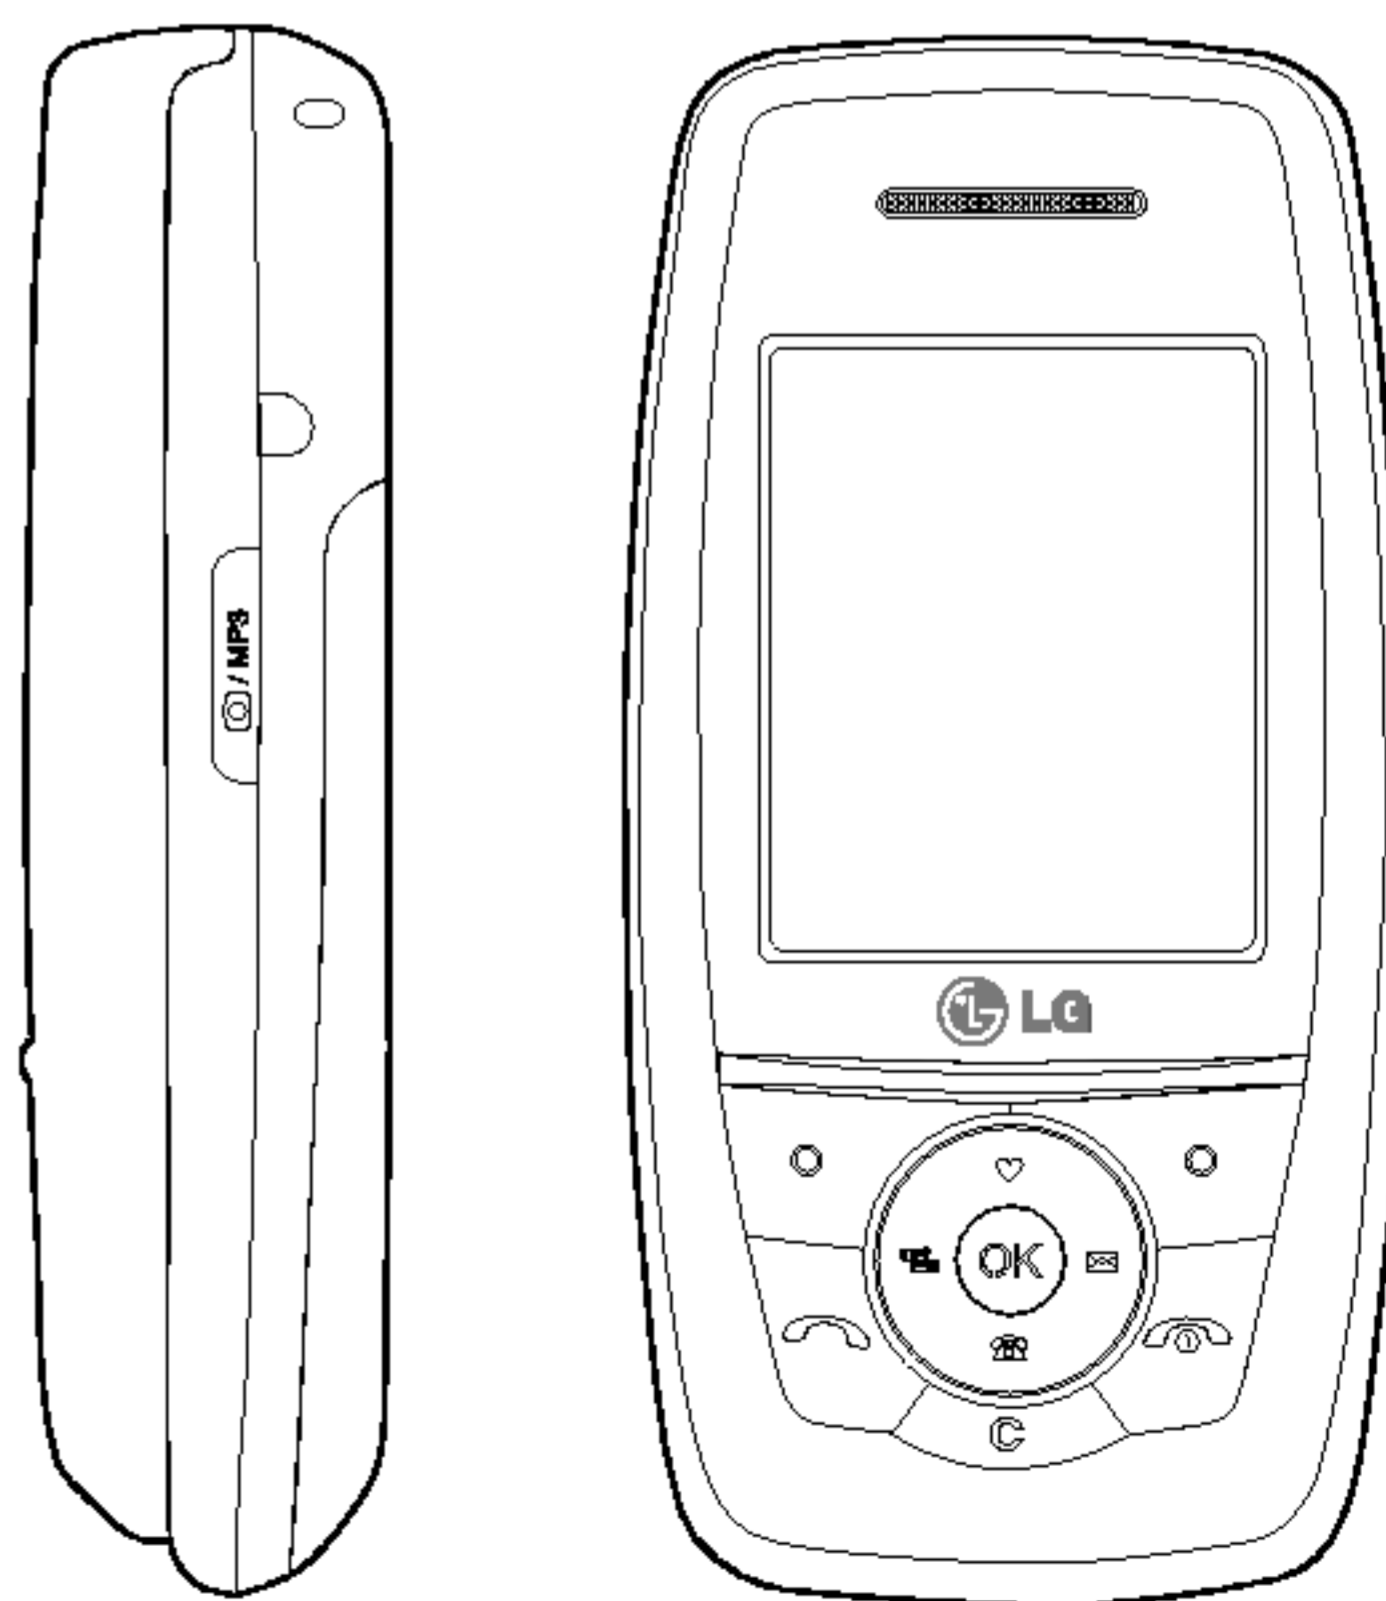

目录

产品介绍	6	常规功能	21	通话记录	34
安全及有效使用指南	7	拨打和电话		未接来电	
S5200 功能	10	电话本	25	已接来电	
手机正面		呼叫中菜单		拨出电话	
显示信息	14	多方通话	26	删除最近呼叫	
开始	16	菜单树	28	通话计费	35
安装 SIM 卡和手机电池		选择功能和选项	31	通话计时	
给电池充电	17	更改	32	通话费用	
断开充电器	18	启动		设定	
开机和关机	19	更改		GPRS信息	
访问密码		重命名	33	通话计时	
限制密码	20			数据量	36

工具	37	公文包	39	信息	44
闹钟		联系人		新信息	
蓝牙		搜索		写短信	
配套设备		新增		写多媒体短信	45
免提设备		群组	40	收信箱	46
设置		快速拨号		发信箱	47
计算器	38	设定		草稿箱	48
单位转换器		全部复制	41	收听语音邮件	
时区设置		全部清除		小区广播	49
调制解调器		信息	42	读取	
		日历		栏目	
		新增	43	常用短语	
		查看日程表		常用短语	
		删除已过日程		多媒体模板	
		全部清除		签名	50
		转到日期		设定	
		设定闹铃类型		文本信息	
		备忘录		彩信	51
				语音邮件中心	
				小区广播	
				增加信息	52

目录

多媒体	53	设定	58	保密设定	61
照相		日期设定和时间设定		需要PIN码	
摄像		日期设定		手机锁	
我的照片	54	时间设定		自动键盘锁延迟	
我的视频		手机设定		呼叫限制	62
MP3		显示设定		固定拨号	
MP3播放器	55	手机配置		更改密码	63
播放列表	56	语言	59	网络设定	
设定		通话设定		网络选择	
语音备忘录		呼叫转接		频段选择	
记录		接听模式	60	GPRS设置	
查看列表	57	发送号码		恢复初始设定	
设定		呼叫等待		内存状态	64
照相		分钟提示	61	Internal memory	
摄像机		自动重拨		Multimedia memory	

互联网	65	下载	69
互联网		我的游戏&更多	
住宅		我的游戏&更多	
书签		更改	70
转到URL	66	图片	
设定		音乐	
SIM 服务	68	文件存储	71
		附件	74
		技术数据	75

产品介绍

祝贺您购买了此款精巧时尚的S5200蜂窝式电话，它是当今尖端数字移动通信科技的完美体现。

本用户手册包括重要的手机使用和操作信息。请仔细阅读以使您的手机发挥最佳性能、防止手机损坏和不正当使用。本手册未明确认可的任何更改和修改可使手机的保修失效。



安全及有效使用指南

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

暴露在射频能量之下

辐射波照射和吸收比率(SAR)信息

该款S5200型移动电话的设计完全遵循了辐射波照射的相关安全要求。该要求基于科学的指导原则，包括用于确保所有人(无论年龄和健康状况)安全的辐射允许限度。

- ▶ 辐射波照射指导原则采用了一种称为吸收比率(或SAR)的测量单位。进行SAR测试时，手机将使用一种标准化的方法，在所有可用的频段上以其最高测定能量级发射频率。
- ▶ 虽然各种型号LG手机的SAR 级可能不尽相同，但它们均是遵循辐射波曝露的相关规定设计制造而成。
- ▶ 国际非电离辐射保护委员会(ICNIRP)所规定的SAR界限是在十(10)克人体组织上平均为2W/kg。

- ▶ 经DASY4测试表明，此型号手机在手持使用时SAR的最大值为 0.117 W/kg(10克)。

产品的保养与维护

警告！ 请仅使用经过认可且与特定手机型号相符的电池、充电器和配件。使用其它类型的配件将可能终止该手机的相关证明或担保，甚至可能造成危险。

- ▶ 请勿擅自拆装手机。(如需任何维修，请将其交给具备相关 资格的服务技术人员。)
- ▶ 手机应远离诸如电视机、收音机或个人计算机等电器设备。
- ▶ 切勿将手机置于散热设备或炊具附近。
- ▶ 切勿抛掷手机。
- ▶ 切勿对手机造成任何机械振动或震荡。
- ▶ 手机套或乙烯基外包装均有可能对手机表面造成损伤。
- ▶ 使用干布清洁手机外壳。(不要使用如苯、稀释剂或酒精之类的溶剂)。
- ▶ 切勿将手机置于过度烟尘环境中。

安全及有效使用指南

- ▶ 切勿将手机靠近信用卡或交通票卡；这有可能影响磁条中存储的信息。
- ▶ 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- ▶ 切勿将手机置于液体或潮湿的环境中。
- ▶ 谨慎使用耳机等手机配件。

电器设备

所有无线电话均会造成干扰，这可能会影响电器设备的性能。

- ▶ 在未得到允许的情况下，切勿将手机靠近医疗设备。请避免将手机放置在起搏器上方，例如，放在您胸前的口袋中。
- ▶ 手机还可能对某些助听设备造成影响。
- ▶ 少量干扰还可能影响到电视机、收音机、PC等。

道路安全

在您驾驶时，请查阅所在区域有关手机使用的法规。

- ▶ 请勿在驾驶时使用手持电话。
- ▶ 驾驶时应全神贯注。
- ▶ 如有条件，可使用免提装置。
- ▶ 如驾驶条件不允许，请将车停在路边或空地旁，然后再拨打或接听电话。
- ▶ 射频能量可能影响机动车辆上的某些电子系统，例如车载音响、安全设备等。
- ▶ 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

爆破现场

切勿在引爆过程中使用手机。请遵守相关限制，并按照规定行事。

潜在的爆炸性环境

- ▶ 切勿在加油站使用手机。切勿将手机靠近燃料或化学物品。
- ▶ 如车辆上携带有移动电话或其配件，请勿在车厢里装载或运输可燃性气体、液体或易爆物品。

飞机上

无线设备将对飞机通讯造成影响。

- ▶ 登机前请关闭移动电话。
- ▶ 未经乘务人员允许，请勿擅自使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有蜂窝网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急电话功能。请向当地的服务提供商核准。

电池信息与保养

- ▶ 您不必在充电前将电池完全放电。与其它电池系统不同，该手机电池不存在影响电池性能的记忆效应。
- ▶ 请仅使用LG电池和充电器。LG充电器根据电池而设计，可最大限度地延长电池寿命。
- ▶ 切勿拆卸电池，或造成电池短路。
- ▶ 保持电池组上金属触点的干净清洁。
- ▶ 电池无法再使用时，请更换电池组。电池组在更换前一般可进行数千次充电。
- ▶ 新换电池应继续充电，以利发挥其最大功效。
- ▶ 切勿将电池充电器直接曝露于阳光下，也不应在过度潮湿的环境中使用(如浴室)。
- ▶ 切勿将电池置于高温或寒冷的环境中，这将影响电池的性能。

S5200 功能

手机正面

前视图



1. 耳机插孔
 - ▶ 在此处连接耳机。
2. 向上/向下侧键
 - ▶ 当翻盖打开时，在待机模式中控制按键音量。
 - ▶ 在通话中控制听筒音量。
3. 外屏

右视图




相机键

- ▶ 打开翻盖，露出相机镜头。按住此键两次可启动相机模式。也可用此键拍摄照片。将外屏作为取景器。


手机背面

相机镜头

- ▶ 镜头上如有灰尘，将会影响图像质量。

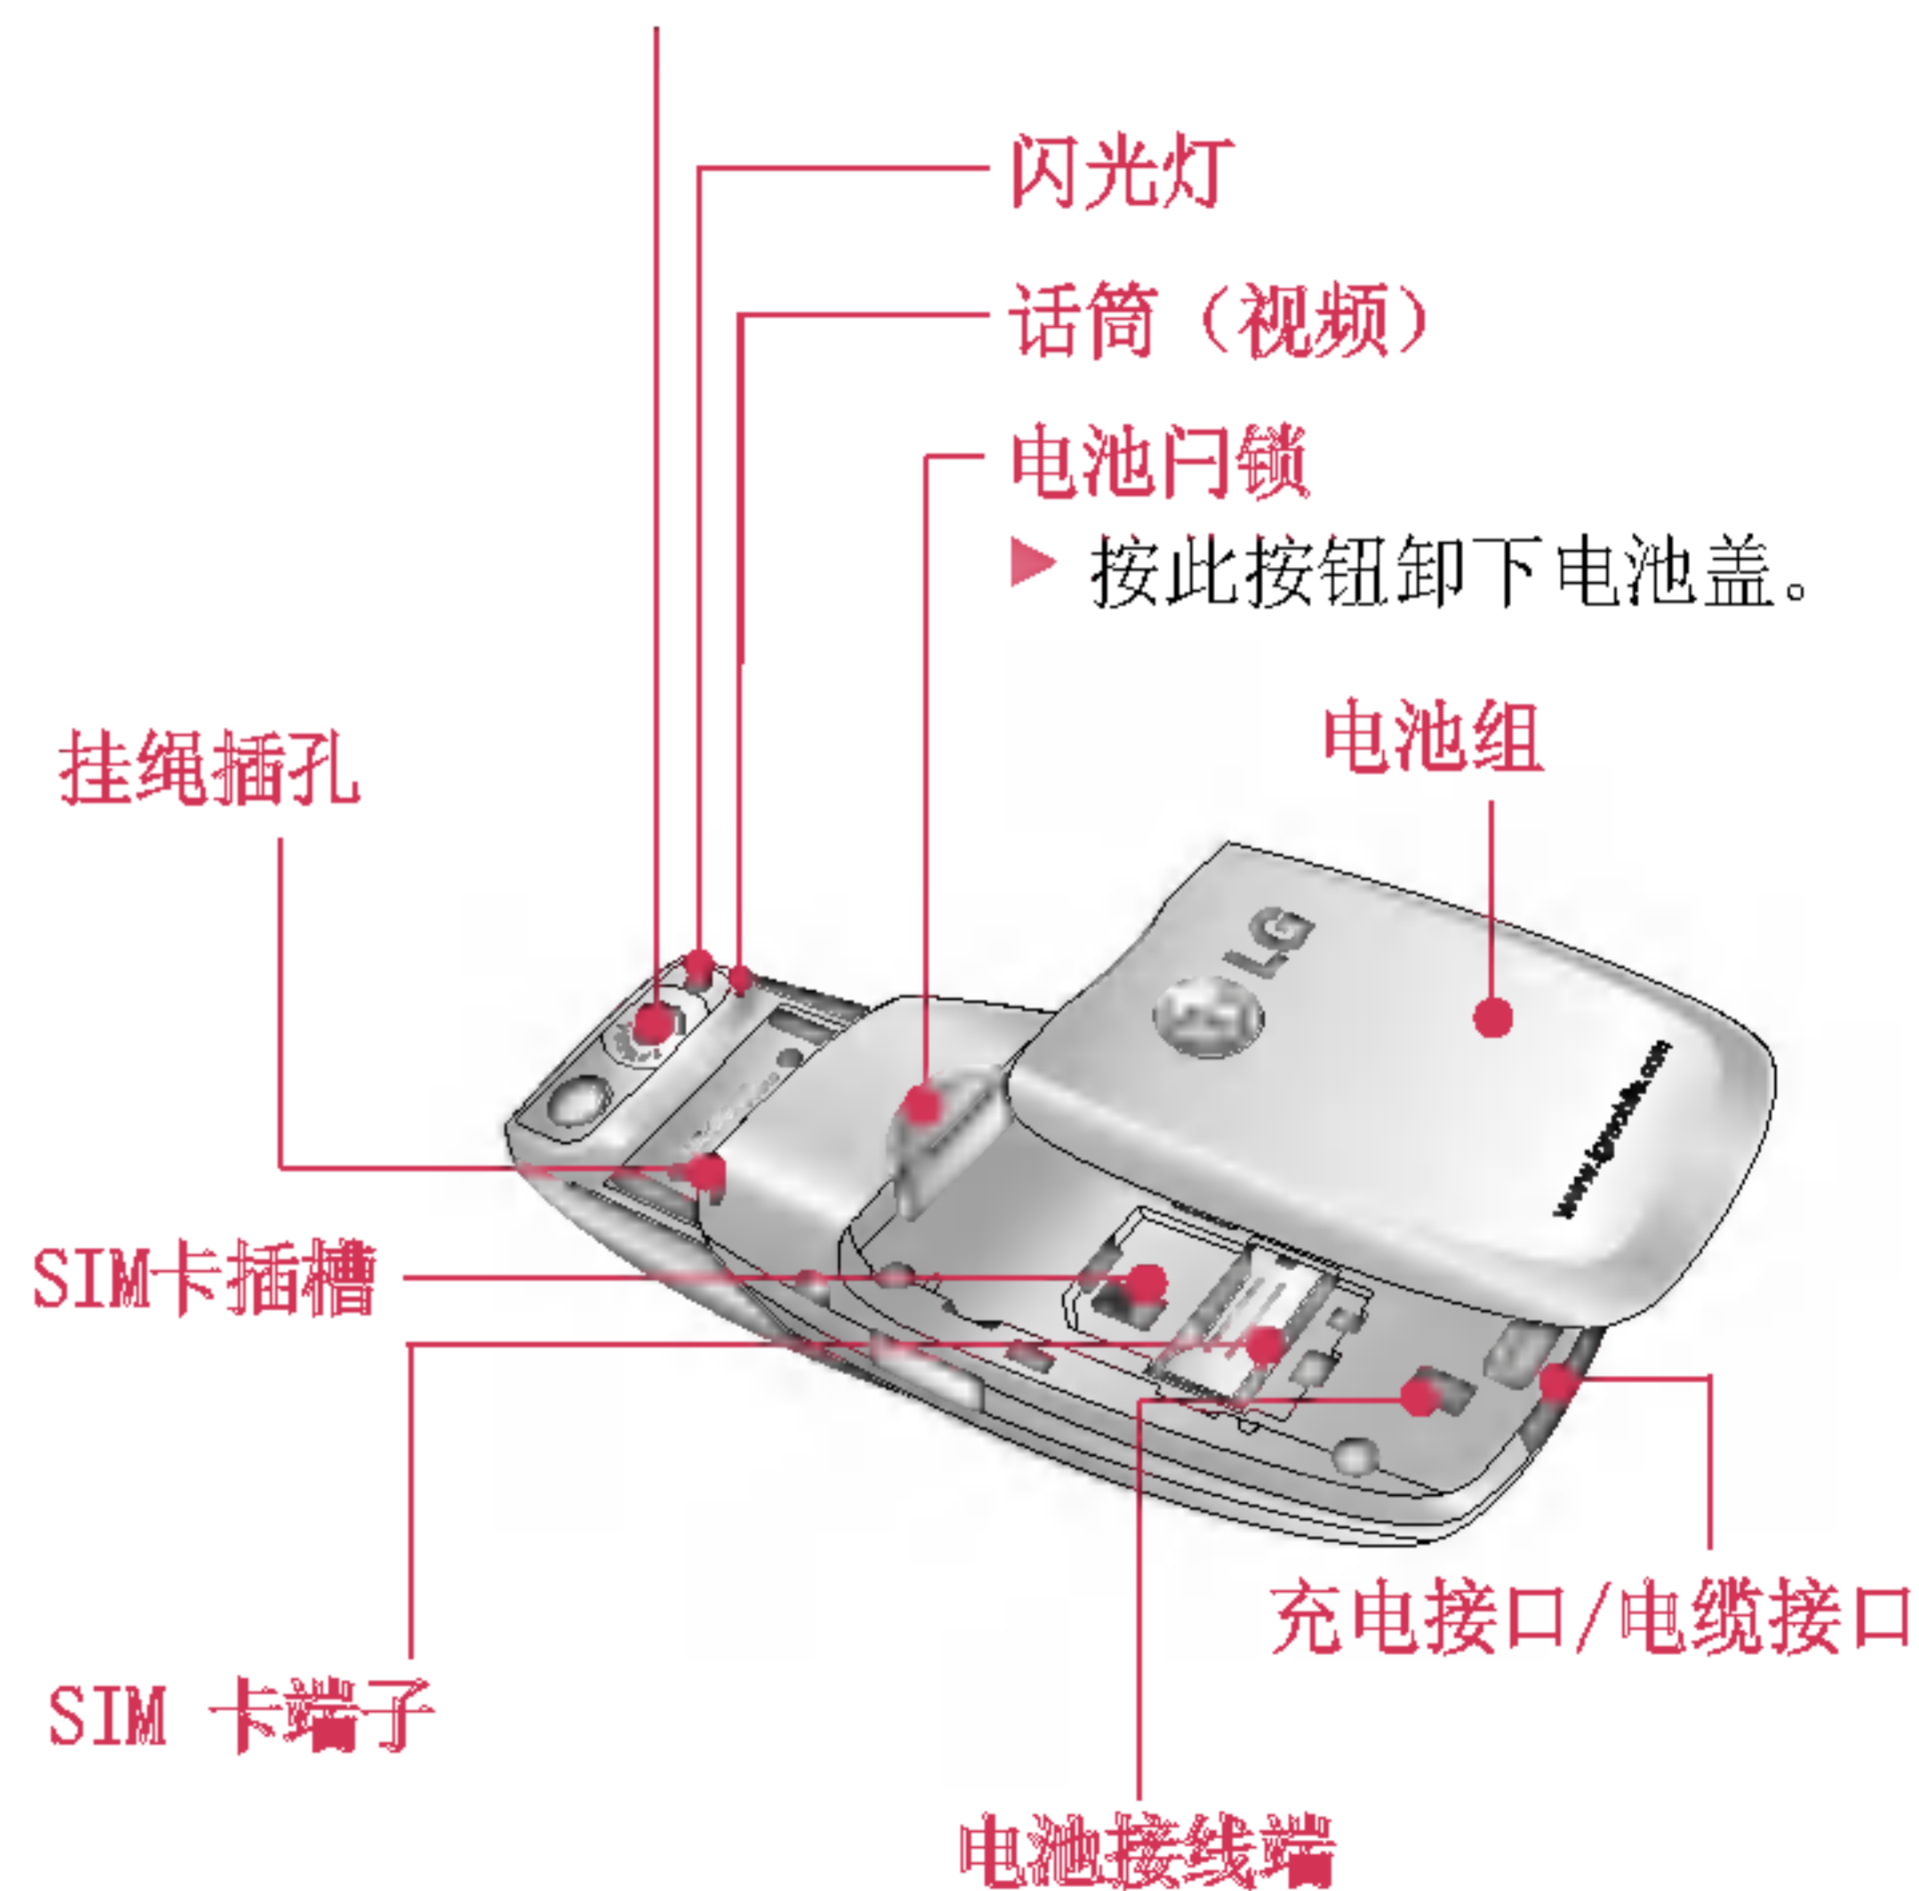

打开视图

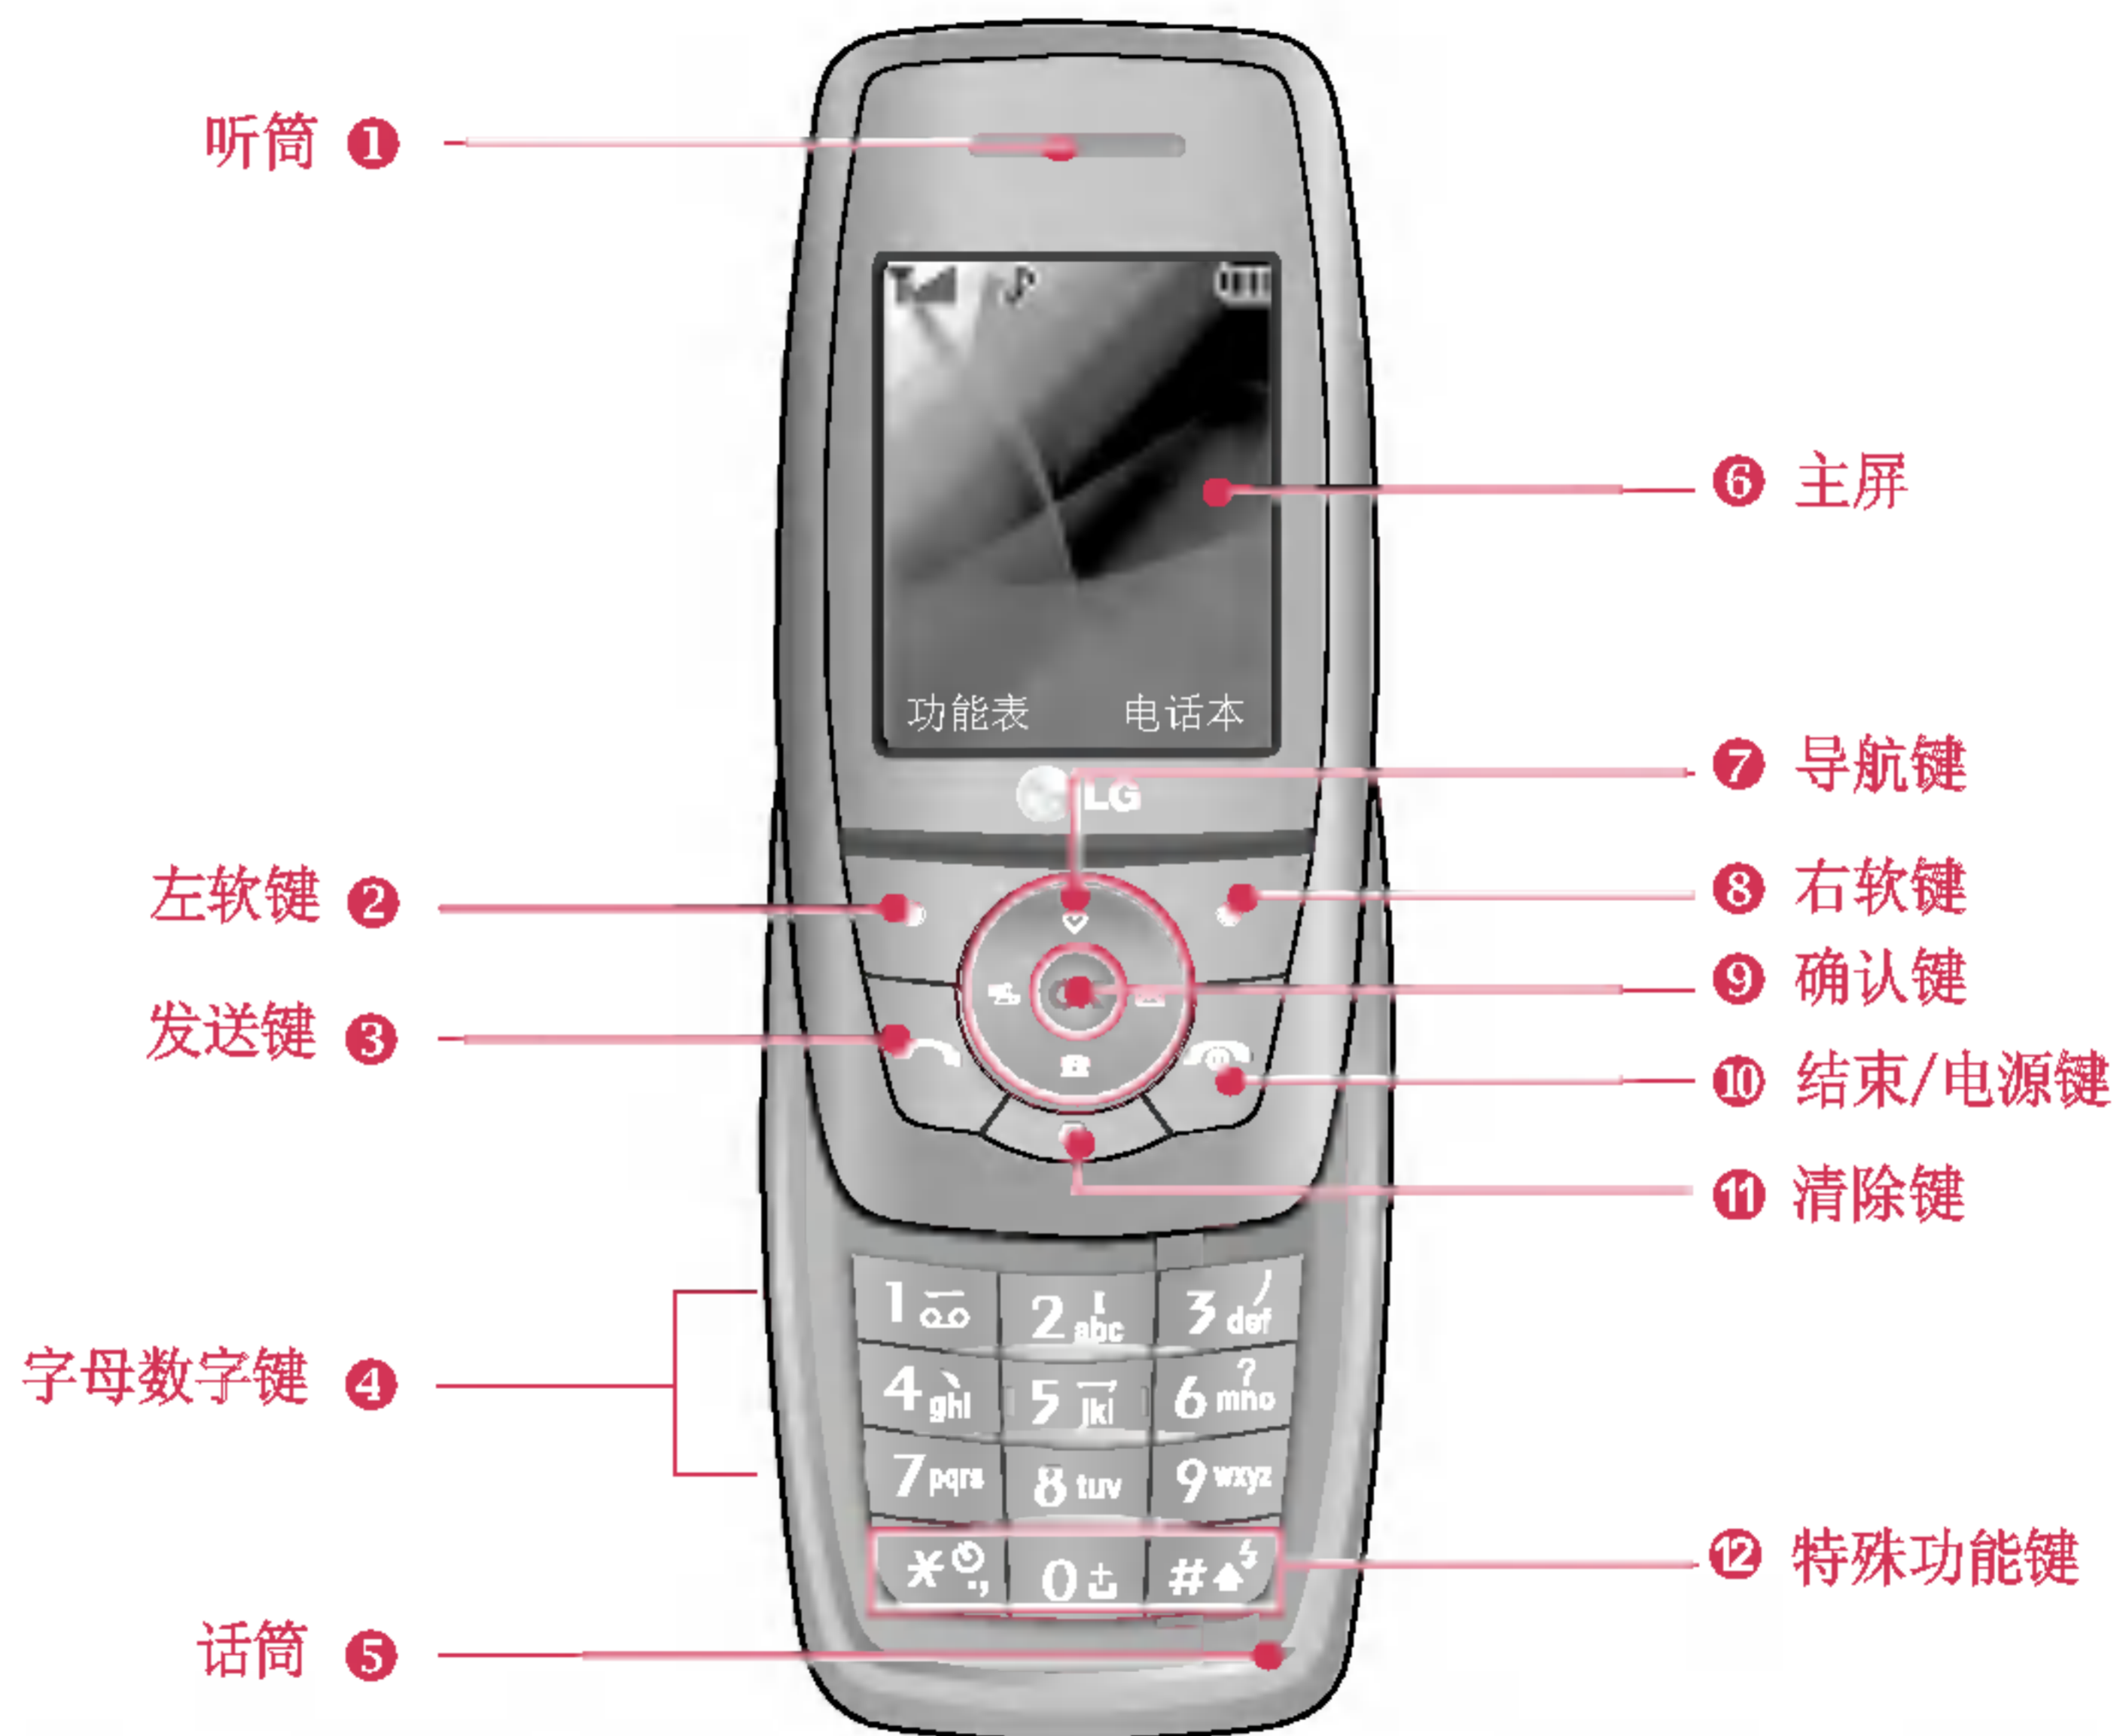

注意

▶ 要防止听不清另一方的讲话，使用手机时请将滑盖打开。

1. 听筒

2, 8. **左软键 / 右软键**: 执行屏幕上其上方文字指示的功能。

3. **发送键**: 拨打电话号码并接听来电。在待机模式中按此键, 您可以快速访问最后的来电、去电和未接来电。

4. **数字键**: 输入数字、字母和一些特殊字符。

5. **话筒**: 在通话中为保护隐私可以静音。

6. **主屏**: 全彩显示手机的状态图标、菜单项、Web 信息、图片等等。


7. **导航键**: 用于滚动菜单及移动光标。


9. **确认键**: 选择菜单选项并确认操作。

10. **结束/电源键**: 用于结束呼叫或拒接呼叫, 也用于返回待机模式。按住此键开关手机电源。

11. **清除键**: 每按一下删除一个字符。按住此键清除所有输入内容。使用此键返回上一屏幕。

12. 特殊功能键




▶ : 长按此键可输入国际电话符号“+”。

▶ : 输入电话号码时, 长按此键可输入一个暂停。

显示信息

下表说明出现在手机显示屏上的各种指示符或图标。







屏幕上的图标

图标	描述
	指示网络信号的强度。*
	指示呼叫正在进行中。
	指示目前正在另一网络上漫游。

注意

- ▶ 通话质量视网络信号强度而定。信号强度低于2格时，您可能会遇到没有声音、通话掉线或音质极差等情况。请根据网络信号强度指示条的情况，决定是否进行通话。当没有指示条时，表示不在网络服务区内：在此情况下，您不能访问网络以使用任何服务

图标	描述
	指示 GPRS 服务可用。
	指示已设置并开启闹钟。
	指示电池的充电状态。
	指示接收到信息。
	指示接收到语音邮件。
	指示已设置振动铃声。
	指示已启动“大声”情景模式。
	指示已启动“静音”情景模式。
	指示已启动“耳机”情景模式。
	指示已启动“标准”情景模式。

图标	描述
	指示您可以使用 Push 信息服务。
	指示手机目前正在访问WAP。
	指示您目前正在使用GPRS。
	日程表事件设置
	启用呼叫转接服务
	蓝牙已启用

注意

- ▶ 当电池状态指示为低时，您不能使用相机或多媒体功能。
- ▶ 使用多媒体功能时，电池状态是可更改的。


开始

安装 SIM 卡和手机电池

在卸下电池前确保电源已关闭。

1. 删除

按此键释放电池电量，然后将电池滑下，直至停止。将电池从电池室取出。

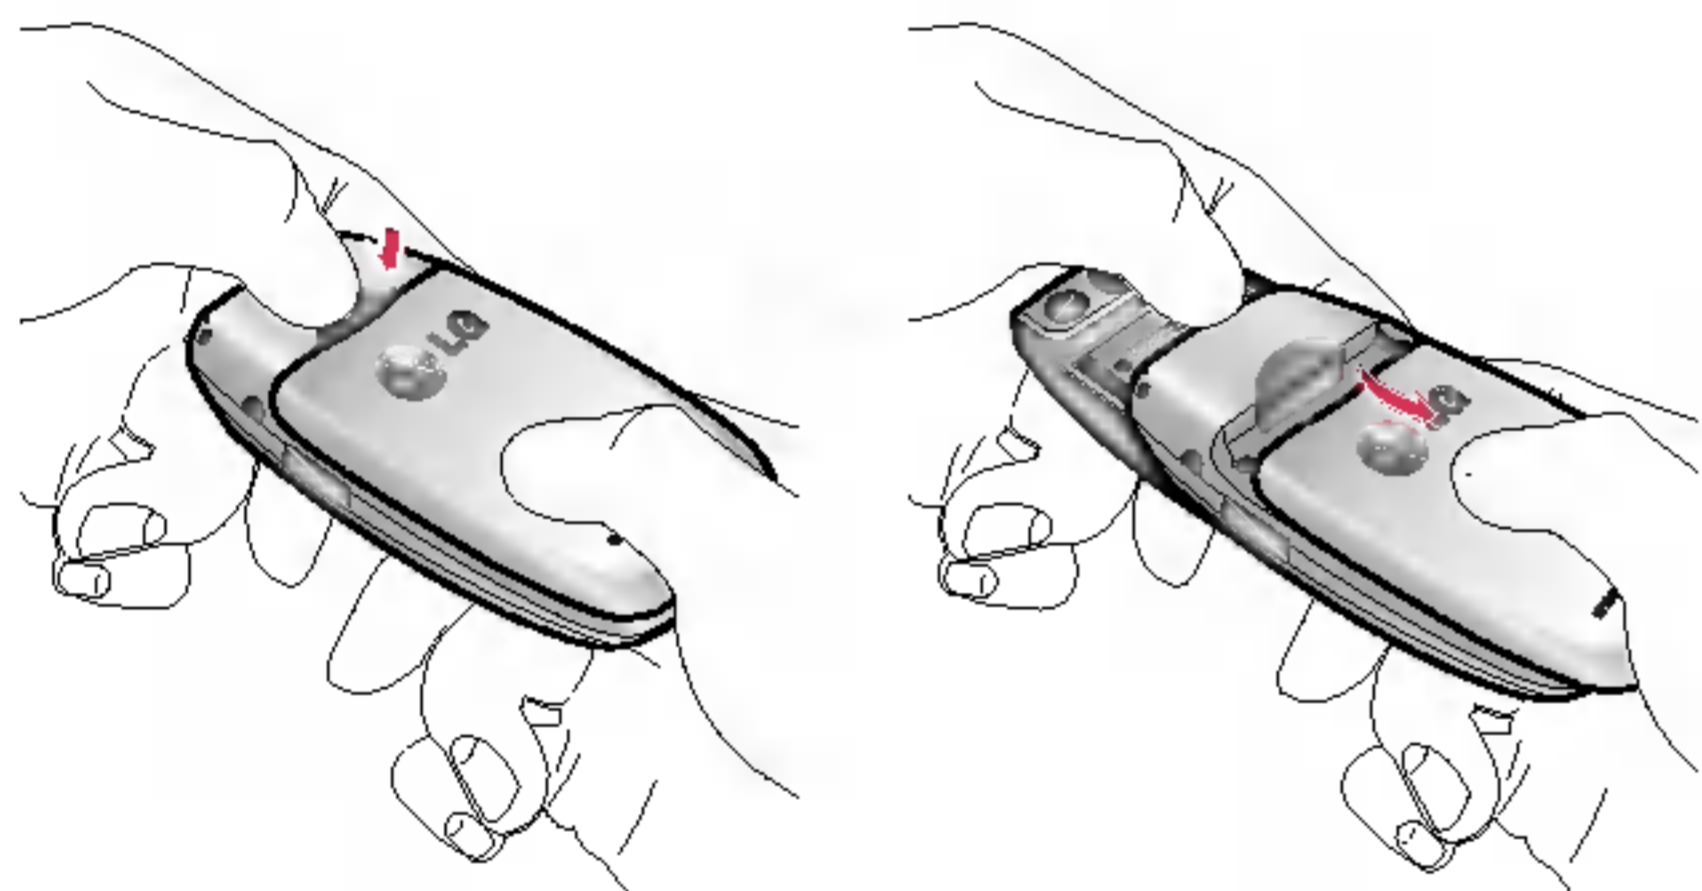


注意

- ▶ 如果在电源打开时从手机上卸下电池，可能导致手机出现故障。

2. 安装 SIM 卡

将SIM卡插入插槽内。将SIM卡滑进SIM卡插槽中。确保SIM卡以正确方式插入并且卡上的金色接触区域面朝下。要取出SIM卡，轻轻将卡向下按并反向推出。

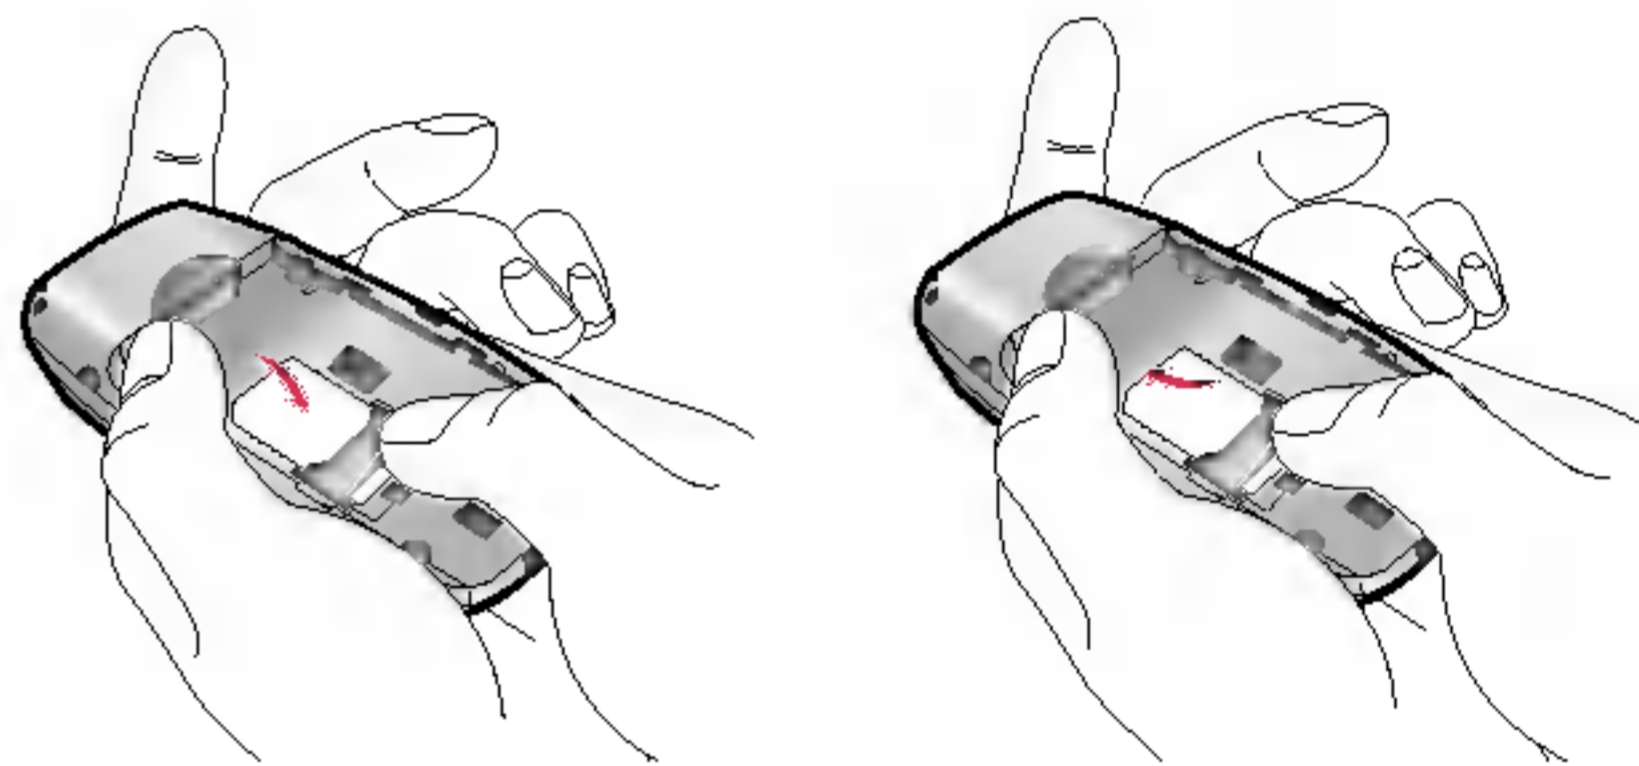


插入SIM卡

取出SIM卡

小心!


- ▶ SIM 卡的金属触点很容易因刮擦而损坏。操作时请对SIM卡多加注意。遵守随SIM卡提供的说明。

3. 安装电池。

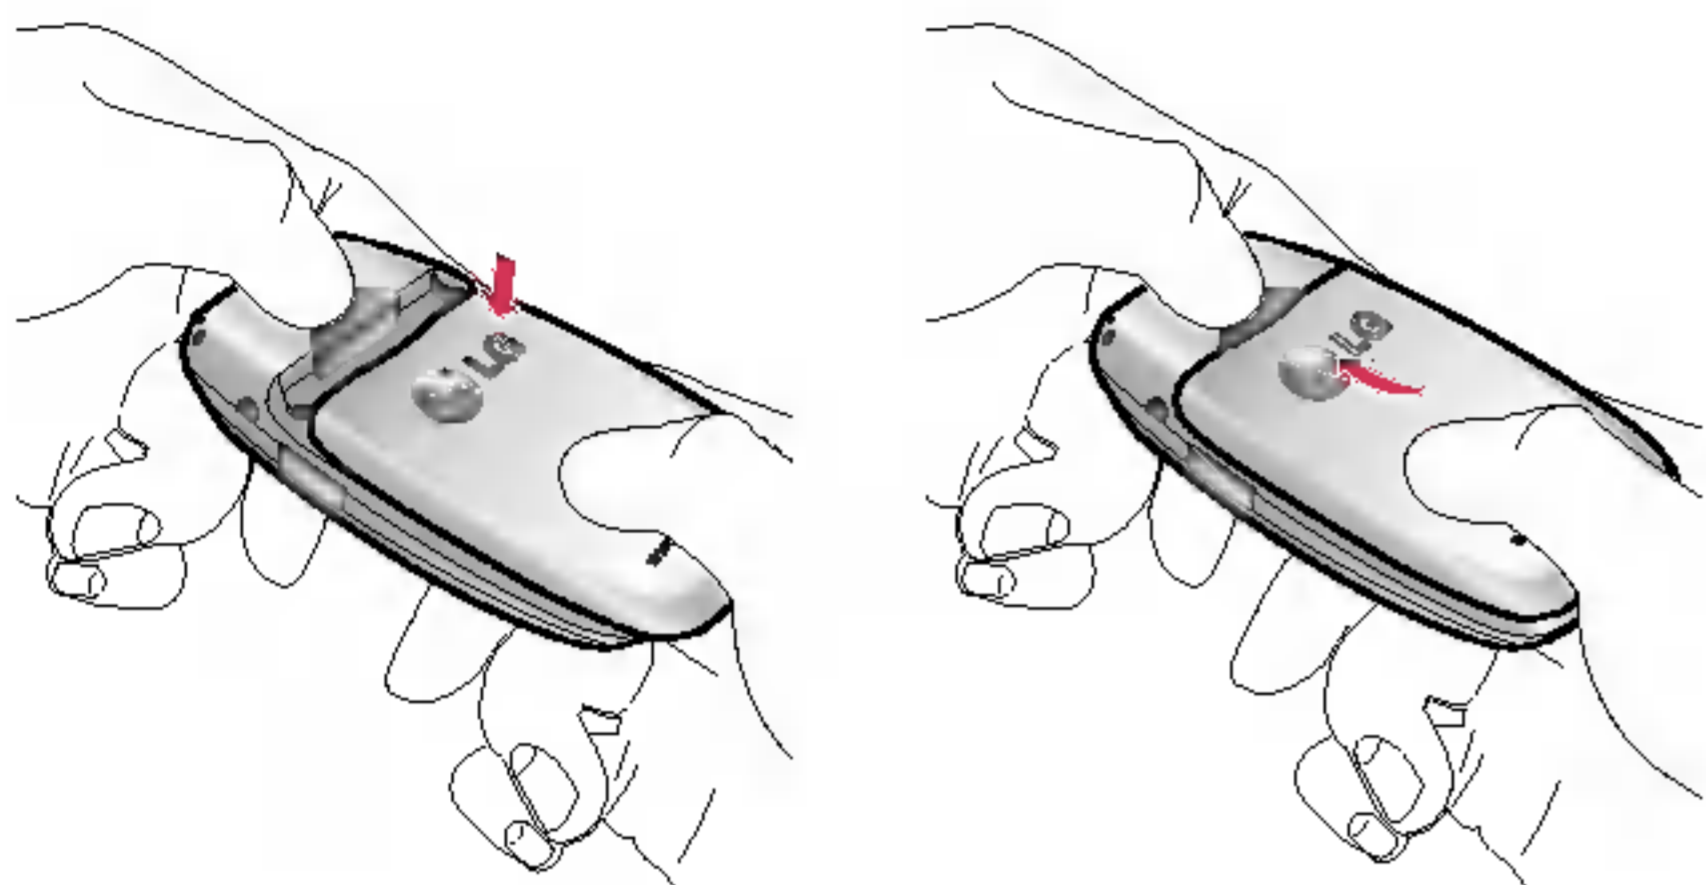

给电池充电

要用旅行充电器为手机充电，您必须先装上电池。

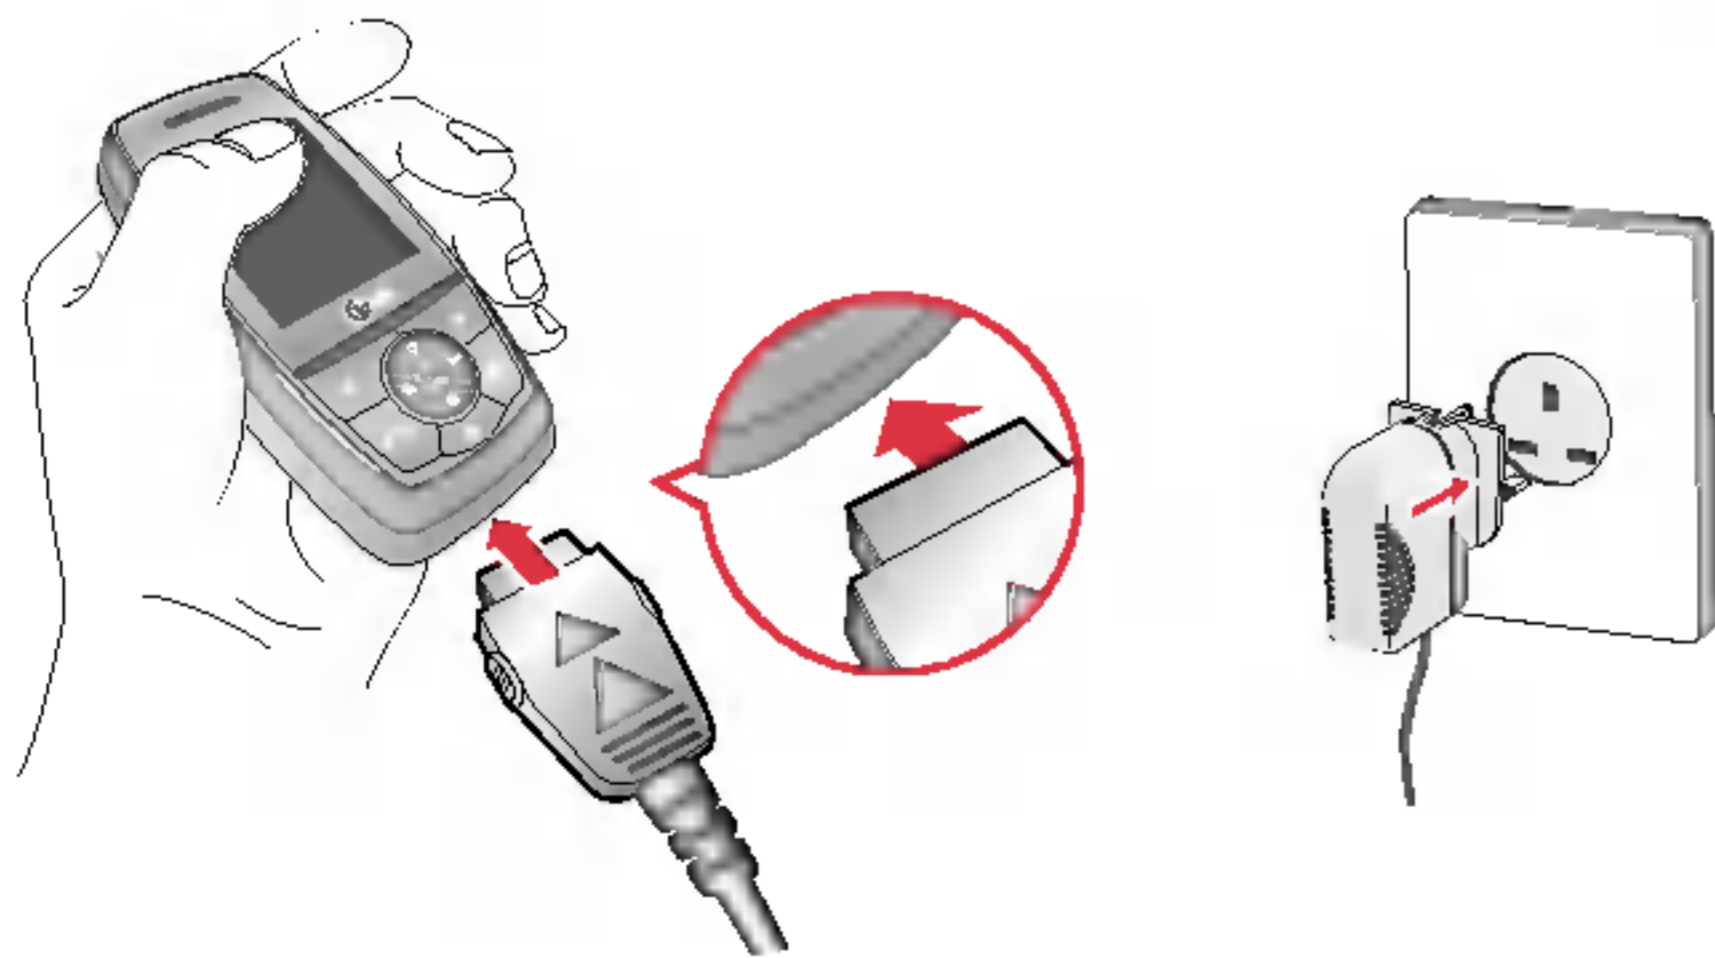

1. 如图所示，箭头面朝上，将电源适配器的插头推入手机底部的插座，直到卡入到位。
2. 将电源适配器的另一端连接到电源插座。请仅使用包装盒随附的充电器。
3. 完全充电后电池图标条棒将停止闪烁。

小心!

- ▶ 不要强行插拔接头，这可能会损坏手机和（或）充电器。
- ▶ 如果在本国外使用电池组充电器，务必使用附属的适配插头进行适当的配置。
- ▶ 充电时切勿取出电池或SIM卡。


警告!

- ▶ 在发生雷电时，务必拔掉电线和充电器，以免遭受电击或发生火灾。
- ▶ 确保没有细尖的物体，如动物牙齿、指甲等进入手机内触碰电池。这存在引发火灾的危险。
- ▶ 手机在充电时，不要拨打或接听电话，否则会使手机短路和/或发生电击或引发火灾。

断开充电器

如图所示，按充电器适配器两侧的按钮，将其与手机断开。

1. 充电结束后，电池图标的移动条停止并且屏幕上显示“已满”字样。
2. 从电源插座上拨下适配器。
按住接头两侧的灰色凸钮并拉出接头，将适配器从手机上断开。

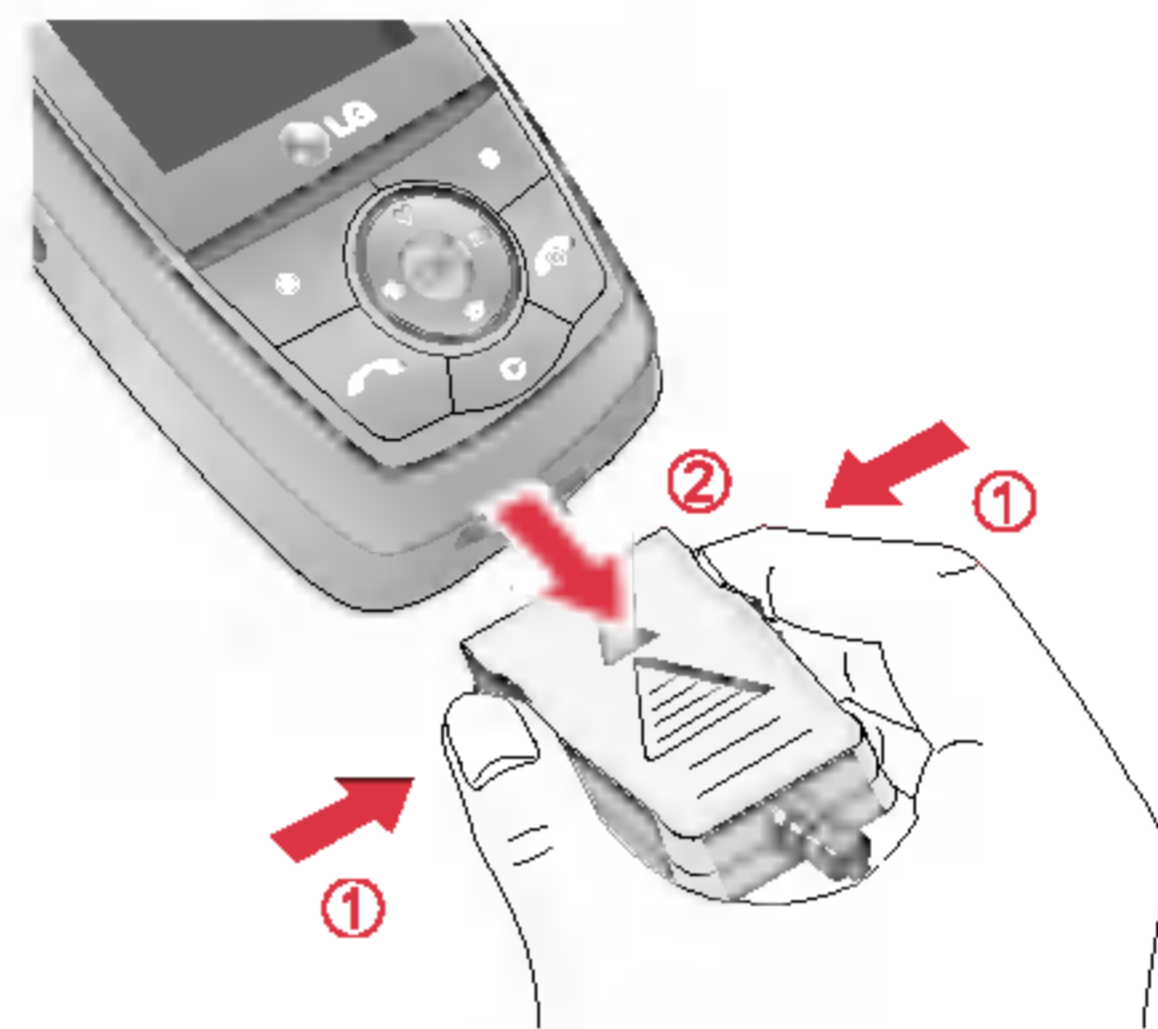


注意


- ▶ 使用手机之前，请确保电池已完全充电。
- ▶ 不要在充电过程中取出电池或 SIM 卡。
- ▶ 如果出现电池未正确充电的情况，请使用电源键关闭并重新打开手机。然后取出并重新装入电池，并再次对电池进行充电。

开机和关机

开机

1. 在手机中装入电池，并将手机连接到诸如旅行适配器、点烟器适配器或免持汽车装置之类的外部电源。或者在手机中装入已充电的电池。
2. 按住  数秒钟，直到 LCD 屏幕亮起。
3. 视需要 PIN 码设置的状态而定，您可能需要输入 PIN 码。

关机

1. 按住  数秒钟，直到 LCD 屏幕熄灭。

访问密码

您可以使用本节所述的访问密码来防止他人未经允许使用您的手机。可以使用**更换密码**功能 [菜单 7-4-6] 来更改访问密码（除 PUK 和 PUK2 码）。

PIN 码（4 至 8 位数字）

PIN（个人身份号码）码防止他人未经允许使用您的 SIM 卡。PIN 码通常随 SIM 卡提供。当**需要 PIN 码**设置为开时，每次开机时手机都会要求 PIN 码。当**需要 PIN 码**设置为关时，手机将直接连接到网络，而无需 PIN 码。

PIN2 码（4 至 8 位数字）

随某些 SIM 卡会提供 PIN2 码，访问诸如**话费建议和固定拨号**之类的功能时要求 PIN2 码。**拨出号码**。仅当您的 SIM 卡支持此类功能时，才可以使用这些功能。

请咨询网络运营商以获得进一步的信息。

PUK 码（4 至 8 位数字）

取消 PIN 锁定电话时需要输入 PUK（PIN 解锁密码）码。SIM 卡可能会提供 PUK 码。如果未提供，请联系您的网络运营商以获得该密码。如果丢失了该密码，请同样与您的网络运营商联系。

PUK2 码（4 至 8 位数字）

随某些 SIM 卡会提供 PUK2 码，更改被锁定的 PIN2 码时需要 PUK2 码。如果丢失了该密码，请与您的网络运营商联系。

安全密码（4 至 8 位数字）




安全密码防止他人未经允许使用您的手机。默认的安全密码设置为“0000”，删除所有电话记录及激活**恢复初始设定**菜单时需要安全密码。并且，开关手机锁定功能以防止未经允许使用手机时，也需要安全密码。从**安全设置**菜单中可以修改安全密码默认设置。

限制密码



当使用**呼叫限制**功能时需要限制密码。当预订了此功能时，您可从网络运营商处获得此密码。

拨打和电话


拨打一个电话


1. 确保手机已开机。
2. 输入电话号码，包括区号。
 - ▶ 持续按住清除键（）以删除整个号码。
3. 按（）[发送]键来拨打该号码。
4. 要结束呼叫，请按结束键（）或右软键。

从通话记录中拨打电话


1. 在待机模式中，按发送键（），屏幕将显示最后的来电、去电和未接来电。
2. 使用向上/向下导航键选择所需的号码。
3. 按  键以拨叫号码。

拨打国际电话


1. 按住  键以输入国际前缀。“+”字符自动选择国际接入码。

2. 输入国家代码，区位号以及电话号码。
3. 按  键以拨叫号码。


结束呼叫

结束通话时，按结束键（）。

从电话本中拨打电话

您可以将常用的联系人姓名和电话号码保存在电话本中。也可将它们保存在 SIM 卡和（或）手机内存中。通过在电话本中查找所需的姓名并按（）键，即可拨打相应电话号码。

调节音量

如果要在通话中调节听筒音量，请使用手机侧键（）。按上面的侧键以提高音量，按下面的侧键以降低音量。

注意


- ▶ 手机打开且处于待机模式时，按侧键可调节按键音量。


应答电话

当接收到电话时，手机响铃并且屏幕上出现闪烁的电话图标。如果可以识别致电者，则会显示该致电者的电话号码（或保存在电话本中的姓名/照片）。


1. 要应答来电，请打开手机。（在滑盖打开设置为应答模式时。[菜单 7-3-2]。）

注意

- ▶ 如果已将“按任意键”设置为应答模式，则按除  或右软键以外的任何按键可应答电话。
- ▶ 在使用地址簿或其它菜单功能时，您也可以接听电话。

2. 要结束呼叫，关闭手机或按  键。


使用扬声器

在呼叫期间，您可以按  键使用内置扬声器。在您结束呼叫时，扬声器自动停用。


警告

- ▶ 由于音量较高，在启用扬声器时，请勿使手机靠近耳朵。

静音模式(快速)

开机后，按住  键，可以激活静音速拨模式。

信号强度

您可以通过手机 LCD 屏幕上的信号指示符 () 检查信号强度。信号强度会有所差别，尤其是在建筑物内。移到窗口附近可以改进接收质量。

输入文本

您可以使用手机键盘输入字母数字字符。例如，在电话本中存储姓名、编写信息和创建个人问候语。

本款手机提供以下文本输入方法。


T9 模式

此模式允许以每个字母只需一次击键的方式输入单词。键盘上的方式输入单词。键盘上的每个按键对应于多个字母。T9 模式自动将所击按键与内部词典进行比较，然后确定正确的单词，因此所需的击键次数比传统的 ABC 模式要少。有时这也称为预测性文本。


ABC 模式


在此模式中，输入字母时，按标示为所需字母的按键一次、两次、三次或四次，直到显示该字母。

123 模式（数字模式）

以每个数字一次击键的方式输入数字。要在文本输入区域中更改为123 模式，按  键直到显示 123 模式。


更改文本输入模式

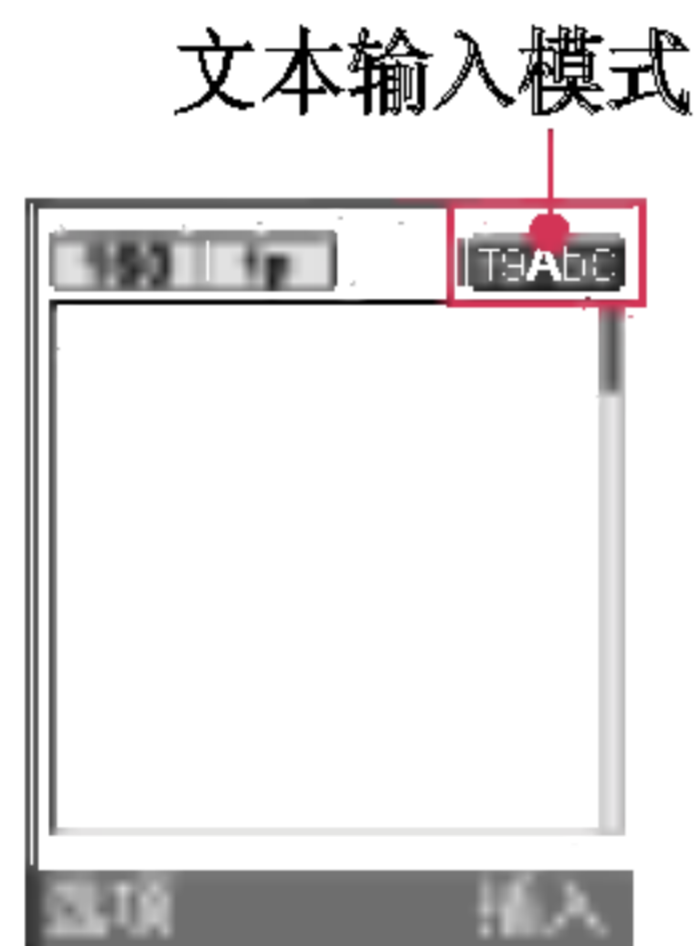

1. 当处于允许输入字符的区域中时，在 LCD 屏幕的右下角可以看到文本输入模式指示符。
2. 通过按  更改文本输入模式。在 LCD 屏幕的右上角，可以查看文本输入模式。



使用 T9 模式

T9 预测性文本输入模式允许您以最少的按键次数输入单词。当您按每个按键时，手机开始显示它根据内置词典认为正确的字符。您还可以在词典中添加新单词。

您还可以在词典中添加新单词。当添加新单词时，手机将从词典中选择可能性最大的单词。通过按住 () 键，您可以打开或关闭 T9 模式并更改 T9 语言。

1. 当处于 T9 预测性文本输入模式时，通过按  到  键开始输入单词。每个字母按一次键。




- ▶ 在输入字母时，单词不断更改。请忽略屏幕上显示的单词，直整个单词输入完毕。
- ▶ 如果在完成输入之后单词仍不正确，按向下导航键一次或多次以循环选择其它单词。

例：按     输入 Good


按     [向下导航键]
输入 Home

- ▶ 如果供选单词列表中没有所需的单词，请使用 ABC 模式添加该单词。
- ▶ 您可以选择 T9 模式的语言。按左软键 [选项]，然后选择 T9 语言输入法。选择 T9 模式的所需语言。也可以通过选择“T9 关闭”来关闭 T9 模式。手机的默认设置为“T9 开启”模式。

常规功能




2. 输入整个单词之后再对输入的内容进行编辑或删除。
3. 按  键以空格结束每个单词。要删除字母，请按 。按住  删除整个单词。

备注

- ▶ 要从文本输入模式中退出而不保存输入内容，按 。手机返回待机模式。











使用 ABC 模式

使用  至  键输入文本。

1. 按标示为所需字母的按键：
 - ▶ 按一次输入第一个字母
 - ▶ 按两次输入第二个字母
 - ▶ 依此类推
2. 要插入空格，按  键一次。要删除字母，按  键。按住  键以清除显示的所有内容。


备注

- ▶ 有关可使用字母数字键输入的字符，请参阅下表了解更多信息。

按键	按顺序显示的字符	
	大写	小写
	., / ? ! - : ' " 1	., / ? ! - : ' " 1
	ABC2	abc2
	DEF3	def3
	GHI4	ghi4
	JKL5	jkl5
	MNO6	mno6
	PQRS7	pqrs7
	TUV8	tuv8
	WXYZ9	wxyz9
	空格键 0	空格键 0

使用 123（数字）模式

使用 123 模式，您可以在文本信息中输入数字（例如电话号码）。

按与所需数字对应的按键，然后手动切换回适当的文本输入模式。通过按住 () 键，您可以在字母和数字间快速切换。

电话本

您可以将电话号码及其对应的姓名存储在 SIM 卡的内存中。

此外，您还可以在手机存储器中存储最多 1000 个号码和姓名。

电话本菜单中可以使用 SIM 卡和手机存储器，使用方式相同。

呼叫中菜单

您的手机提供许多可以在呼叫期间使用的控制功能。要在呼叫期间访问这些功能，按左软键 [选项]。

呼叫期间

在手机屏幕上，在呼叫期间显示的菜单与在待机模式中显示的默认主菜单不同，下面对这些选项进行说明。


拨打第二个电话

您可以从电话本中查到号码以拨打第二个电话。按右软键，然后选择**搜索**。要在呼叫期间将所拨的号码保存到电话本中，请按右软键，然后选择**新增**。

在两通话间切换


要在两个呼叫之间切换，按左软键，然后选择**切换**。

接听来电


要在手机发出响铃时接听来电，只需按  [发送] 键即可。当您在通话过程中有来电，手机也会提醒您。听筒会发出提示音，显示屏会显示第二个来电正在等待中。


常规功能

该功能被称为呼叫等待，只有在您的网络支持它时才可用。要获取有关如何启动和关闭呼叫等待的详细信息，请参见呼叫等待 [功能表 7-3-4]。

如果启用了呼叫等待功能，您可以按  或选择左软键，然后选择保持并应答，从而保持第一个呼叫并应答第二个呼叫。通过选择左软键，然后选择结束并应答，您可以结束当前呼叫并应答等待的呼叫。

拒接来电

只需按  键，您可以拒接来电而不作应答。

在呼叫期间，您可以通过按左软键 [菜单] 键并选择多方通话/拒接来电，或通过按  ，拒绝接听来电。

使麦克风静音

在呼叫期间，您可以通过按 [菜单] 键，然后选择静音，使麦克风静音。通过选择关闭静音，可以解除手机的静音。将手机静音后，呼叫者就无法听到您讲话，但您仍可以听到对方讲话。


在呼叫期间打开双音多频音调

要在呼叫期间打开双音多频音调，按左软键，然后选择开启双音多频。可以使用同样方式关闭双音多频音调。双音多频音调允许您的手机使用自动电话交换台。

多方通话

通过多方通话服务，您能够与多个致电者同时通话（如果您的网络运营商支持此功能）。仅当您具有一个活动的呼叫及一个保持的呼叫时（已应答这两个呼叫），才可以建立多方通话。一旦建立多方通话，则建立多方呼叫的用户可以添加、断开或分离（即从多方通话中撤出，但仍与您相连接）呼叫。所有这些选项均在“呼叫中”菜单中提供。在多方通话中最多可以与五位致电者通话。开始之后，您即可以控制多方通话，并且只有您能将致电者加入多方通话。

拨打第二个电话

当目前已处于呼叫中时，您可以拨打第二个电话。输入第二个号码并按  键。当连接二个呼叫之后，第一个呼叫自动置于保持状态。您可以通过按左软键，然后选择切换，在两个呼叫之间切换。

拨打第二个电话

保持一个呼叫，并在一个呼叫处于活动状态时，按左软键，然后选择**多方通话/全部加入**。

保持多方通话

按左软键，然后选择**多方通话/全部保持**。

保持多方通话

按左软键，然后选择**多方通话/全部加入**。

向多方通话加入呼叫

要将呼叫加入现有的多方通话，按左软键，然后选择**多方通话/全部加入**。


显示多方通话中的所有致电者

要在手机屏幕上滚动显示组成多方通话的致电者号码，请使用向上/向下导航键。

在多方通话期间拨打私人电话

要与多方通话中的某个致电者进行私人通话，在屏幕上显示该致电者的号码，然后按左软键。选择**多方通话/私人**将所有致电者置于保持状态。

结束多方通话

通过按  键可以将当前显示的多方呼叫中的致电者断开。要结束多方通话，按左软键，然后选择**多方通话/结束多方通话**。

按左软键后，选择**多方通话/全部结束**将结束所有当前通话和保持的通话。

菜单树

1. 更改
1.1 振动
1.2 静音
1.3 普通
1.4 大声
1.5 耳机
2. 通话记录
2.1 未接来电
2.2 已接来电
2.3 拨出电话
2.4 删除最近呼叫
2.5 通话计费
2.5.1 通话计时
2.5.2 通话费用
2.5.3 设定
2.6 GPRS信息
2.6.1 通话计时
2.6.2 数据量

3. 工具
3.1 闹钟
3.2 蓝牙
3.2.1 配套设备
3.2.2 免提设备
3.2.3 设置
3.3 计算器
3.4 单位转换器
3.5 时区设置
3.6 调制解调器

4. 公文包
4.1 联系人
4.1.1 搜索
4.1.2 新增
4.1.3 群组
4.1.4 快速拨号
4.1.5 设定
4.1.6 全部复制
4.1.7 全部清除
4.1.8 信息
4.2 日历
4.2.1 新增
4.2.2 查看日程表
4.2.3 删除已过日程
4.2.4 全部清除
4.2.5 转到日期
4.2.6 设定闹铃类型
4.3 备忘录

5. 信息
5.1 新信息
5.1.1 写短信
5.1.2 写多媒体短信
5.2 收信箱
5.3 发信箱
5.4 草稿箱
5.5 收听语音邮件
5.6 小区广播
5.6.1 读取
5.6.2 栏目
5.7 常用短语
5.7.1 常用短语
5.7.2 多媒体模板
5.7.3 签名
5.8 设定
5.8.1 文本信息
5.8.2 彩信
5.8.3 语音邮件中心
5.8.4 小区广播
5.8.5 增加信息

6. 多媒体
6.1 照相
6.2 摄像
6.3 我的照片
6.4 我的视频
6.5 MP3
6.5.1 MP3播放器
6.5.2 播放列表
6.5.3 设定
6.6 语音备忘录
6.6.1 记录
6.6.2 查看列表
6.7 设定
6.7.1 照相
6.7.2 摄像机

7. 设定
7.1 日期设定和时间设定
7.1.1 日期设定
7.1.2 时间设定
7.2 手机设定
7.2.1 显示设定
7.2.2 手机配置
7.2.3 语言
7.3 通话设定
7.3.1 呼叫转接
7.3.2 接听模式
7.3.3 发送号码
7.3.4 呼叫等待
7.3.5 分钟提示
7.3.6 自动重拨



菜单树

7.4 保密设定 <ul style="list-style-type: none">7.4.1 需要PIN码7.4.2 手机锁7.4.3 自动键盘锁延迟7.4.4 呼叫限制7.4.5 固定拨号7.4.6 更改密码
7.5 网络设定 <ul style="list-style-type: none">7.5.1 网络选择7.5.2 频段选择
7.6 GPRS设置
7.7 恢复初始设定
7.8 内存状态 <ul style="list-style-type: none">7.8.1 Internal memory7.8.2 Multimedia memory

8. 互联网
8.1 互联网 <ul style="list-style-type: none">8.1.1 住宅8.1.2 书签8.1.3 转到URL8.1.4 设定
8.2 SIM 服务

9. 下载
9.1 我的游戏&更多 <ul style="list-style-type: none">9.1.1 我的游戏&更多9.1.2 更改
9.2 图片
9.3 音乐
9.4 文件存储

选择功能和选项

本款手机提供一系列可供您使用和自定义手机的功能。这些功能位于菜单和子菜单中，可以通过标记为左软键 [] 和右软键 [] 的两个软键来访问。

每个菜单和子菜单允许您查看和更改特定功能的设置。根据当前的操作环境，软键发挥的作用也不同。每个按键上方、屏幕底部一行的文字指示其当前的作用。



按左软键访问可用的菜单。


按右软键激活相应的电话本。

更改

在“更改”中，您可以调节和自定义手机铃声，用于不同的事件、环境或群组。有五种预设的情景模式：**振动**、**静音**、**普通**、**大声**、**耳机**和**汽车**。每种情景模式均可以加以个人化。按左软键 [菜单]，然后使用上/下导航键选择情景模式。


启动

菜单 1.X.1

1. 屏幕上显示情景模式的列表。
2. 在情景模式列表中，滚动到要启动的情景模式，然后按左软键 [选择] 或“确定”键 。
3. 然后，选择启动。

更改

菜单 1.X.2

在情景模式列表中，滚动到所需的情景模式。按左软键  或 OK 键后，选择“更改”。情景模式设置选项打开。按需要设置该选项。

- ▶ **来电提示**：设置来电提示类型。
- ▶ **铃声类型**：从列表中选择所需的铃声类型。
- ▶ **铃声音量**：设置铃声的音量。

注意

- ▶ 要在滑盖打开时保护听觉，最大音量级为 3。
- ▶ **短信提示**：设置信息的提示类型。
- ▶ **短信提示音**：选择信息的提示音。
- ▶ **按键音**：选择所需的按键音。
- ▶ **按键音量**：设置按键音的音量。
- ▶ **滑盖音**：允许设置滑盖音，以适应环境。
- ▶ **确认音音量**：设置声效的音量。
- ▶ **开/关机音量**：设置开机/关机时的铃声音量。
- ▶ **自动应答**：请注意只有耳机模式拥有该子功能表。
 - **关**：即使您的手机响铃，也不会自动应答。
 - **5秒后**：在5秒后自动应答。
 - **10秒后**：在10秒后自动应答。



重命名

菜单 1.X.3

您可以将情景模式重命名为所要的任何名称。

注意

▶ 不能重命名振动、静音和耳机情景模式。

1. 要更改情景模式的名称，在情景模式列表中滚动到该情景模式，在按  “确定”键或左软键之后，选择**重命名**。
2. 键入所需的名称，然后按“确定”键或左软键  [确认]。

通话记录

仅当网络支持服务区内的主叫线路识别 (CLI) 时，您才能检查未接来电、已接来电和拨出电话。

屏幕上显示电话号码和姓名（如果有）以及通话日期和时间。您还可以查看通话计时和计费。

未接来电

菜单 2.1

此选项允许您查看最后10个未应答的来电。在按左软键[选项]之后，您还可以：

- ▶ 查看电话号码（如果有），并复电或将该号码保存到电话本中。
- ▶ 为该号码输入新的姓名，并保存到电话本中。
- ▶ 向该号码发送信息。
- ▶ 从列表中删除该呼叫。

已接来电

菜单 2.2

此选项允许您查看最后10个来电。在按左软键[选项]之后，您还可以：

- ▶ 查看电话号码（如果有），并复电或将该号码保存到电话本中。

- ▶ 为该号码输入新的姓名，并保存到电话本中。
- ▶ 向该号码发送信息。
- ▶ 从列表中删除该呼叫。

拨出电话

菜单 2.3

此选项允许您查看最后20个去电（拨出或尝试）。使用[选项]键，您还可以：

- ▶ 查看电话号码（如果有），并复电或将该号码保存到电话本中。
- ▶ 为该号码输入新的姓名，并保存到电话本中。
- ▶ 向该号码发送信息。
- ▶ 从列表中删除该呼叫。

删除最近呼叫

菜单 2.4


使用此功能删除未接来电列表、已接来电列表或拨出电话列表。您也可以选择**全部通话**一次性删除所有通话列表。

通话计费

菜单 2.5

通话计时 (菜单 2.5.1)

可查看来电和去电的通话时间长度。您也可以重置通话时间。可以使用以下计时方式：

- ▶ **最后通话**：最后一次通话的时间长度。
- ▶ **所有通话时间**：上次计时器重设之后，所有来电和去电的总时间长度。
- ▶ **已接来电**：来电的时间长度。
- ▶ **拨出电话**：去电的时间长度。
- ▶ **全部清零**：通过按左软键  [是]，允许您重置所有通话的计时器。

通话费用 (菜单 2.5.2)

可检查最后通话、全部通话的费用，保持或重置费用。要重置费用，您需要 PIN2 码。

设定 (菜单 2.5.3)

(视 SIM 卡情况而定)

- ▶ **通话费率**：您可设置货币类型和计费单价。通话费率的服务提供商联系以获得计费单价。要在该功能表选择货币或单位，您需要 PIN2 码。
- ▶ **设定话费**：该网络服务可让您通过选择计费单位来限制您的通话费用。如果您选择**读取**，将显示余额。如果您选择**更改**，您可以更改计费限制。
- ▶ **自动显示**：该网络服务可让您自动查看最后通话的费用。如果您在自动显示功能表中选择开启，通话结束时，您即可查看最后通话的用。

GPRS信息

菜单 2.6

你可以查看通过GPRS在网络上传输的数据量。另外，您还可以查看您的在线时间。

通话计时 (菜单 2.6.1)

您能查看GPRS的**最后**浏览时间和**全部**浏览时间，您也可以将通话计时器复零。

通话记录



数据量 (菜单 2.6.2)

您可以查看已发送、已接收或全部数据量和全部清零。

闹钟

菜单 3.1

您最多可以设置五个闹钟。

1. 选择开并输入闹钟的时间。
2. 选择重复周期：一次，星期一 ~ 星期五，
星期一 ~ 星期六，每天。
3. 选择闹钟铃声之后按  [确认]。
4. 编辑闹钟名称之后按  [确认]。

蓝牙

菜单 3.2

使用蓝牙，您可以与近距离的可兼容移动设备、外围设备和计算机直接通信，而无需任何连线。本手机支持内置蓝牙连接，这样使其可与兼容的蓝牙手机、计算机应用程序等连接。

当您从其它蓝牙设备上接收数据时，手机要求确认。确认传输之后，文件将被复制到您的手机上。

根据其类型，文件将被保存在以下文件夹：

- ▶ **MP3:** MP3 文件夹 (菜单 6.5.2)
- ▶ **视频(.3GP):** 视频文件夹 (菜单 6.4)

- ▶ **电话本联系人 (.VCF):** 电话本 (菜单 4.1.1)
- ▶ **其它文件:** 文件存储文件夹 (菜单 9.4)

注意

- ▶ 由于兼容性问题，某些设备可能不支持此功能。
- ▶ DUN 支持的蓝牙软件 (蓝牙栈)
 - WIDCOMM Bluetooth for Windows 1.4 and 3.0

配套设备 (菜单 3.2.1)

您可以查看与蓝牙手机兼容的所有设备。

免提设备 (菜单 3.2.2)

您可以查看与蓝牙手机兼容的免提设备列表。




设置 (菜单 3.2.3)

您可以注册与蓝牙兼容的新设备。如果您已添加了设备，则您可以在输入密码 (通常为 0000) 后连接到该设备。




计算器

菜单 3.3

该功能表包含的标准功能包括 +、-、×、÷：加、减、乘、除。

1. 通过按数字键输入数字。
2. 通过导航键选择一个运算符。
3. 然后输入数字。
4. 您可以按  [结果] 查看计算结果。
5. 按  [重设] 或继续输入数字, 重复上述过程。
6. 您可按  键退出计算器。

注意



- ▶ 使用  键清除任何数字或符号。如果按按键  , 则可输入负数。此外, 如果按按键  , 则可输入小数。

单位转换器

菜单 3.4

该功能可将任何单位转换为您需要的单位。




1. 您可以通过按  [单位] 键选择4种单位类型中的一种。

2. 您可以按  和  在当前值和转换值之间切换。
3. 您可以查看转换后的结果。

时区设置

菜单 3.5

您可以查看世界各个城市的时间。

1. 通过按  和  键, 您可以查看属于不同时区的城市时间。
2. 您可以使用  [设定] 键设置您选择的城市的时间。

调制解调器


菜单 3.6

您可以通过调制解调器访问网络服务。 如果想使用 PCsync、Contents banks、Internet Cube, 您应访问菜单并启用调制解调器, 然后插入 USB 电缆。

联系人

菜单 4.1

注意


- ▶ 或者，在待机模式中按右软键  [电话本]。

搜索 (菜单 4.1.1)

(从电话簿呼叫)

1. 按右软键  [选择] 或 [确定] 进行搜索。




注意








- ▶ 也可以通过输入要搜索的姓名的第一个字母或号码立即进行搜索。
2. 如果要编辑、删除或复制条目，请选择左软键  [选项]。屏幕上显示以下菜单。
 - ▶ **修改**：可通过使用导航键编辑姓名、号码、群组、字符和图片。
 - ▶ **写短信/写多媒体短信**：找到您要的号码后，则可给选定的号码发送一条短信/彩信。

- ▶ **通过蓝牙发送**：可通过蓝牙将电话本数据发送到可与蓝牙兼容的设备。
- ▶ **复制**：可将一个条目从 SIM 卡复制到手机或从手机复制到 SIM 卡。
- ▶ **主要号码**：可从您常用的移动电话、家庭电话和办公电话中选择一个号码作为主号码。设置此号码后，在搜索时主号码将优先显示。
- ▶ **删除**：可删除一个条目。

新增 (菜单 4.1.2)

您可以使用该功能来添加电话簿条目。手机内存容量为1000个条目。SIM卡内存容量取决于移动电话服务提供商。SIM 卡中可保存的字符数视 SIM 卡功能而定。

1. 按左软键  [选择] 或 [确定] 选择**新增**。
2. 选择您想使用的内存：SIM卡或手机。如果选择存储在手机内存中，您还可选择某一个号码作为主号码。
 - a. 按  [确定] 输入姓名。
 - b. 按  [保存]，然后输入号码。



- c. 按  [保存]。
- d. 您可以通过按 ,  键为此条目设置群组。
- e. 您可以通过按 , , ,  键为此条目设置个性图片。



群组 (菜单 4.1.3)

每组您可添加多达 20 个成员，最多可以有 7 个组。



- ▶ **成员列表：**您可以查看您想要的成员。
- ▶ **群组来电铃声：**您可以根据群组不同设定来电铃声。
- ▶ **群组标志：**您可以根据群组不同设定标志。
- ▶ **添加成员：**选择添加成员。每组成员不得超过 20 个。
- ▶ **删除成员：**您可以从组成员列表中删除成员。但是，该成员的名字和号码将保留在电话本中。
- ▶ **重命名：**您可以修改和编辑群组名称。

快速拨号 (菜单 4.1.4)


为联系人分配  到  的任意按键。然后，您可以按相应的数字键呼叫对应的联系人。

1. 首先，在待机模式下按  [电话本] 打开电话簿。
2. 滚动到**快速拨号**，然后按  [选择] 进入该功能表。
3. 如果您想添加快速拨号，选择空。然后，您可以在电话簿中查找姓名。
4. 在分配快速拨号号码后，您可以更改或删除条目。您也可以呼叫此号码或向此号码发送信息。

设定 (菜单 4.1.5)


1. 在待机设置中按右软键  [电话本]，然后在待机模式下按右软键。
2. 滚动到“设置”，然后按左软键  [选择]。

▶ 保存至

滚动光标到**保存至**，然后按  [选择] 进入。

- 如果选择**自选**，在添加条目时，手机将询问将号码保存在 SIM 卡上还是保存在手机上。
- 如果您选择SIM卡或手机，手机不提示您保存至何处，直接将条目保存在SIM卡或手机。


▶ 查看选项


滚动屏幕光标到**查看选项**，然后按  [选择]进入。

- **只显示姓名**：您可设置电话簿只显示姓名。
- **图片电话本**：您可设置电话簿显示个性图片。
- **姓名&号码**：设置含有显示姓名和号码的电话本列表。

全部复制 (菜单 4.1.6)

您可以将条目从SIM卡内存复制/移动到手机内存或从手机内存复制/移动到SIM卡内存。

1. 通过按右软键进入  [电话本]。

2. 滚动到**全部复制**，然后按  [选择]进入该功能表。

- ▶ **SIM卡转到手机**：您可以将条目从 SIM 卡复制/移至到手机存储器中。
- ▶ **手机转到SIM卡**：您可以将条目从手机存储器复制/移至到 SIM 卡。


3. 您可以看到下列子功能表。



- ▶ **保留原号码**：复制的同时，原来的电话记录被保留。
- ▶ **删除原号码**：复制的同时，原来的电话记录被清除。

全部清除 (菜单 4.1.7)

您可以删除SIM卡和手机中的所有条目。该功能需要安全密码。

1. 在待机模式下按  [电话本]，然后选择全部删除，按  [选择]。






2. 选中要清除的存储器，然后按左软键 () [选择]。

3. 按  [确认]或按  [返回]取消。

信息 (菜单 4.1.8)




▶ 特别服务号码

使用该功能访问您的网络运营商提供的特殊服务(如果您的SIM卡支持)。

1. 首先, 在待机模式下按  [电话本]打开电话簿。
2. 滚动到特别服务号码, 然后按  [确认]进入。
3. 将显示可用的服务名称。
4. 使用  键和  键选择服务。按  键[发送]。

▶ 内存状态

此功能允许您查看电话本中正在使用的条目或可用条目。

1. 首先, 在待机模式下按  [电话本]打开电话簿。按  [选择]选择信息提示。
2. 滚动到内存状态, 然后按  [确认]进入该功能表。

▶ 本手机号码 (取决于SIM卡)









您可以存储并查看自己的SIM卡号码。


日历

菜单 4.2


您输入此菜单时将显示日历。屏幕的顶部显示了月和年。只要您在设置菜单下更改了日期, 日历将会自动更新。当前日期将突出显示为绿色, 任何日程表或备忘录将以红色三角形显示在相应方格的左上角。备忘录和提醒可以设置为铃声闹钟提醒。

更改日、月、年。

按键	描述
 	每年
 	每月
 	每周
 	每天

在日程表模式下, 按左软键  [选项], 如下所示;

新增 (菜单 4.2.1)

可为选定的日期添加新的日程和备注。
输入主题然后按左软键  [确定]。

查看日程表 (菜单 4.2.2)

您可以参考详细的日程表，也就是您配置的日程表的全部内容。

删除已过日程 (菜单 4.2.3)

您可以删除不再需要的过期日程。

全部清除 (菜单 4.2.4)

您可以删除所有提示。

转到日期 (菜单 4.2.5)




您可以直接转到选定的日期。

设定闹铃类型 (菜单 4.2.6)


您可以设定闹铃类型。


备忘录

菜单 4.3

1. 按左软键  [选择] 选择备忘录。
2. 如果条目为空，可按左软键  [新增] 以增加备忘录。
3. 输入备忘录然后按左软键  [确定]。

注意

- ▶ 如果要更改文本输入模式，请依次按  。

按“菜单”键（），然后使用导航键选择信息。

新信息




菜单 5.1

写短信 (菜单 5.1.1)

此款手机可接收语音邮件通知信息和短信服务 (SMS) 信息。

语音邮件和短信属于网络服务。

请联系您的网络运营商以了解更多信息。

当  图标出现时，说明接收到新的语音邮件。当  图标出现时，说明接收到新的文本信息。如果信息内存已满，则会出现一则消息， 图标闪烁并且您无法接收任何新信息。使用收信箱菜单中的删除选项以删除无用的信息。一旦信息内存中有空间，则将收到任何未送达的 SMS 短信（假如有足够的空间）。

1. 键入您的信息。有关如何输入文本的详细信息，请第参阅第 22 到 25 页（输入文本）。
2. 完成信息输入之后，按左软键 [选项] 选择所需的选项。

可以使用以下选项。

- ▶ **发送：**输入号码、从电话本中选择号码或选择最近的号码。您可以一次将一条短信最多发送给 5 个电话号码。按左软键 [选项]。屏幕上显示以下选项。
 - ① 发送（在输入电话号码后才显示）
 - ② 近期号码
 - ③ 搜索
- ▶ **保存到草稿箱：**允许您保存信息以便以后发送。
- ▶ **字体：**设置字体大小和样式。
- ▶ **颜色：**您也可以设置文本（前景）和背景的颜色。
- ▶ **对齐：**您也可以设置信息的位置 - 靠右、居中或靠左。
- ▶ **添加 T9 词典：**您可以添加自己的词汇。仅在编辑模式设置为 T9ABC/T9Abc/T9abc 时，才会显示此菜单。
- ▶ **T9 语言输入法：**选择 T9 输入模式所需的语言。您也可以通过选择“T9 关闭”来停用 T9 输入模式。

- ▶ **退出：**如果您选择此项时正在写信息，则您将返回至信息菜单。同时，不会保存所写信息。
- 3. 您也可以按右软键 [插入] 随短信发送附件。
- ▶ **图片：**您可以发送和接收包含图片的文本信息，称为“图片信息”。手机中提供几个预设的图片，您可以用来自其它来源的新图片代替这些图片。
- ▶ **歌曲：**如果有，您可以在短信中附加声音。
- ▶ **常用短语：**可以使用手机中已设置的常用短语。
- ▶ **联系人：**可以在短信中添加电话号码。
- ▶ **符号：**您可以附加特殊字符。
- ▶ **名片：**可以附加自己的名片。

写多媒体短信 (菜单 5.1.2)

多媒体信息可以包含文本、图片和/或声音剪辑。只有在获得网络运营商或服务提供商的支持时，此功能方可使用。只有提供兼容多媒体信息或电子邮件功能的设备才能接收和发送多媒体信息。

1. 键入您的多媒体信息。使用右软键，您可以通过 T9 输入模式输入符号和数字。输入多媒体信息之后，按左软键 [确定]。
2. 添加图像和（或）声音。可以使用向上/向下导航键移到下一部分。
3. 使用左软键按选项菜单添加幻灯片。如果按左软键并从选项菜单中选择“添加幻灯片”，您可以添加新的幻灯片。
4. 按左软键 [选项]。可以使用以下选项。
 - ▶ **发送：**支持多个号码和电子邮件地址。
 - ▶ **预览：**显示要发送的多媒体短信。
 - ▶ **保存：**可以将多媒体信息保存在草稿箱中或另存为模板。
 - ▶ **增加：**在当前幻灯片之前或之后添加幻灯片。
 - ▶ **转到：**移到下一个或上一个幻灯片。
 - ▶ **删除幻灯片：**删除所选的幻灯片。
 - ▶ **设置信息格式**
 - **设定定时器：**您可以为多媒体信息片断中的文本，图片和歌曲设置定时器。

- **切换文本和图片：**您可以切换图片和信息文本的位置。
 - ▶ **删除媒体：**您可以删除幻灯片中的图片或声音。此选项仅在添加了任何媒体文件时显示。
 - ▶ **添加 T9 词典：**您可以添加自己的词汇。此菜单仅在编辑模式设置为 T9ABC/T9Abc/T9abc 时显示。
 - ▶ **T9 语言输入法：**选择 T9 输入模式的语言。您也可以通过选择“T9 关闭”来停用 T9 输入模式。
 - ▶ **退出：**如果您在写信息时选择它，则您将返回至信息菜单。同时，不会保存所写信息。
5. 按右软键 [插入]。您可以插入符号、照片；或创建新照片、声音和新声音。

收信箱

菜单 5.2

当收到信息时，手机会给予提示。收到的信息会存储到收信箱中。

在收信箱中，您可以通过指示图标识别每一条信息。图标的含义如下图所示。


图标	指示图标
	多媒体短信
	短信息
	SIM卡短信
	已读多媒体短信
	已读短信息
	Push信息
	读取 Push 信息
	多媒体信息通知

如果手机显示“SIM卡信息已满”，您将需要从SIM卡的收信箱中删除信息。如果手机显示“无空间”，那么您需要删除信息、媒体或应用程序以释放空间。

SIM 信息

SIM信息是指存储在SIM卡上的特殊信息。您可以把SIM信息转存到手机中。

当接收到通知您已接收到多媒体信息的通知时，查看之前，请等待对信息进行下载。

若要读取一条信息，通过按  选择读取信息。

- ▶ **查看：**您可以查看收到信息。
- ▶ **删除：**删除所选信息。
- ▶ **回复信息：**您可以向发送方回复信息。
- ▶ **转发：**您可以转发信息给另一方。
- ▶ **回复电话：**您可以向发送方回复电话。
- ▶ **信息：**您可以提取信息中的图片、歌曲和文本。他们将被存储到我的文件夹或者电话本中。
- ▶ **全部删除：**您可以删除所有信息。

特定 MMS 选项

- ▶ **重复：**允许您对选定的多媒体信息进行重复复制。
- ▶ **接收：**（仅适用于多媒体信息通知）。与文本信息不同，多媒体信息必须从服务器上自动或手动下载。最初，网络发送多媒体信息通知：如果关闭了自动检索选项或出现错误，就必须通过选择 [接收] 来确认接收。

如果打开了自动检索选项，在接收到通知后会自动下载此信息。







特定下载信息选项

- ▶ **信息：**显示已下载信息的内容。
- ▶ **加载：**启动包含在下载信息中的到 URL 的 WAP 连接。手机必须配置 WAP 服务以下载信息。

发信箱

菜单 5.3

您可以看到已经被发送和没有被发送的信息。对于已经发送的信息，您可以看到发送状态报告。同在收信箱中一样，您可以通过图标识别信息。

图标	指示图标
	多媒体信息已发
	多媒体信息未发
	多媒体信息发送已确认
	短信息已发
	短信息未发
	短信息发送已确认

当您使用已发送信息时

- ▶ **查看：**您可以查看已发送的信息。
- ▶ **转发：**您可以转发当前信息给其他接收方。
- ▶ **删除：**您可以删除所选信息。
- ▶ **查看信息：**您可以查看收信箱中信息的标题（仅适用于多媒体信息）、信息发送的日期和时间、信息的类型和信息的大小及发送报告。
- ▶ **全部删除：**您可以删除所有未发送的信息。

如果信息尚未发送：

- ▶ **查看：**您可以查看未发送的信息。
- ▶ **删除：**您可以删除当前信息。
- ▶ **发送：**您可以发送信息。
- ▶ **信息：**您可以查看有关发件箱的信息。
- ▶ **全部发送：**您可以发送所有未发送的信息。
- ▶ **全部删除：**您可以删除所有未发送的信息。

草稿箱

菜单 5.4

使用此功能表，您可以预设最多五条常用的多媒体短信。此功能表显示预设的多媒体短信列表。


可以使用以下选项。

- ▶ **查看：**您可以查看多媒体信息。
- ▶ **编辑：**允许您修改选定的信息。
- ▶ **删除：**删除您选择的信息。
- ▶ **查看详情：**用于查看信息的详情。
- ▶ **全部删除：**删除文件夹中的所有信息。

收听语音邮件

菜单 5.5

此菜单提供访问语音邮箱的快速方法（如果网络提供语音邮箱）。在使用此功能之前，您必须输入从网络运营商处获得的语音服务号码。

当收到新的语音邮件时，屏幕上显示相应符号 。请与网络提供商联系，了解有关其服务的详细信息，以便对您的手机正确进行配置。

小区广播

菜单 5.6

(取决于网络和订阅)

小区广播信息是网络向手机用户发送的文本信息。它们提供诸如天气报告、交通新闻、出车、药店和股票行情之类的一般信息。当您收到小区广播信息时，将出现说明收到新短信的弹出信息或者直接显示小区广播信息。在待机模式中，查看小区广播信息时可以使用以下选项。

读取 (菜单 5.6.1)

收到广播信息时，请选择**读取**以查看信息，信息将显示在屏幕上。

栏目 (菜单 5.6.2)

要创建新栏目，按左软键 [选项]，然后选择**新增**。如果已有栏目，您可以通过左软键 [选项] 来停用、编辑或删除它们。

常用短语

菜单 5.7

在该列表中有一些预定义的信息。您可以查看和编辑模板信息或创建新的信息。提供两种类型的模板：文本和多媒体。

常用短语 (菜单 5.7.1)

- 请呼我!
- 对不起! 我迟到了, 我马上到。
- 你现在在哪里?
- 我在路上。
- 非常紧急, 请速联系!
- 我爱你!

可以使用以下选项。

- ▶ **查看**: 查看所选信息。
- ▶ **删除**: 删除模板。
- ▶ **新增**: 使用此功能创建新的模板。
- ▶ **发送方式**: 通过文本信息或多媒体信息发送。
- ▶ **修改**: 选择它以编辑所选的模板。
- ▶ **全部清除**: 删除所有模板。

多媒体模板 (菜单 5.7.2)

您可以使用以下的功能。

- ▶ **预览：**显示多媒体短信草稿。
- ▶ **保存：**将多媒体信息保存为模板。
- ▶ **编辑主题：**您可以编辑主题。
- ▶ **添加幻灯片：**在当前幻灯片之前或之后添加幻灯片。
- ▶ **移到幻灯片：**移到下一个或上一个幻灯片。
- ▶ **删除幻灯片：**删除突出显示的幻灯片。
- ▶ **设置幻灯片格式：**设置幻灯片或文本的显示时间，或者设置信息内容的对齐方式（靠上、靠下、靠左、靠右）。
- ▶ **删除媒体：**您可以删除幻灯片中的图片或声音。此选项仅在添加了任何媒体文件时显示。
- ▶ **添加 T9 词典：**您可以添加自己的词汇。此菜单仅在预测性编辑模式下显示。
- ▶ **T9 语言：**选择 T9 输入模式。
- ▶ **退出：**退出此菜单。

签名 (菜单 5.7.3)

此选项帮助您制作自己的名片。输入姓名、手机号码、办公室电话号码、传真号码和电子邮件地址。

设定

菜单 5.8

文本信息 (菜单 5.8.1)

▶ 信息类型：

文本、语音、传真、国内传呼、X.400、电子邮件、ERMES

通常，信息类型设定为文本格式。您可以将文本信息转换为其它格式，以配合接收信息的设备。要获取有关该功能的信息，请联系您的服务提供商。

- ▶ **有效期：**该网络服务可让您在发送信息时设定文本信息在信息中心储存的期限。
- ▶ **状态报告：**如果您在该功能表中设定是，您即可查询您的信息是否已成功发送。
- ▶ **回复控制：**发送信息时，可以让接收信息者回复并将回复费用记入您的话费清单。一些网络运营商不支持此功能。
- ▶ **短信中心：**如果您想发送文本信息，您可以通过该功能表获得SMS中心地址。

彩信 (菜单 5.8.2)

- ▶ **优先权**: 您可以设置您选择的信息的优先级。
- ▶ **有效期**: 该网络服务可让您在发送信息时设定信息在信息中心储存的期限。
- ▶ **发送报告**: 如果您在该功能表中设定是, 您即可查询您的信息是否已成功发送。
- ▶ **自动下载**: 如果您选择开启, 您将自动接收多媒体信息。如果您选择关闭, 您将仅能在收件箱中收到通知信息, 然后再查阅这些通知信息。
- ▶ **网络设定**: 如果选择多媒体信息中心, 您可以设置多媒体信息中心的URL地址。
- ▶ **允许类型**
 - 个人: 私人信息。
 - 广告: 商业信息。
 - 信息: 必要信息。

语音邮件中心 (菜单 5.8.3)

如果您的网络服务提供商支持此功能, 则可接收语音邮件。当新语音邮件已接收, 屏幕上将显示符号。请向您的网络服务提供商查询服务详情, 以便相应地配置手机。

- ▶ **住宅**: 选择本地中心听取语音邮件。
- ▶ **漫游地中心**: 如果支持漫游服务, 您在漫游中可以收取语音邮件。

小区广播 (菜单 5.8.4)

- ▶ **接受**
 - 是: 如果您选择此选项, 您的手机将接收小区广播信息。
 - 否: 如果您选择此选项, 您的手机将不再接收小区广播信息。
- ▶ **来电提示**
 - 是: 如果您选择该功能, 当您收到小区广播信息时, 手机将发出提示音。
 - 否: 如果您选择该功能表, 尽管您收到小区广播信息, 您的手机不会发出提示音。

▶ 语言

您可以通过[开/关]选择您想要的语言。然后手机将以您所选的语言来接收小区广播信息。

增加信息 (菜单 5.8.5)

选择是否接收增加信息。

▶ 接收

开：接收所有 Push 信息。

关：不接收任何 Push 信息。

▶ 自动下载

开：自动下载 Push 信息。

关：要下载 Push 信息，请使用用户交互界面。

照相

菜单 6.1

此应用程序使您能够拍摄静止照片。您可以拍摄所需尺寸的照片，并将它用作联系人相片、主屏幕及其它更一般的用途。拍摄后，静止图像可以通过多媒体信息和电子邮件发送。

按左软键 [选项] 显示以下弹出菜单项。

- ▶ **亮度**：确定亮度。
- ▶ **大小**：确定图像的尺寸。
- ▶ **计时器**：确定延迟时间。
- ▶ **质量**：确定图像的质量。
- ▶ **白平衡**：允许您根据环境更改设置。
- ▶ **相册**：显示拍摄的静止图像。
- ▶ **退出**：退出相机。
- ▶ **模式**：确定是否拍摄单张照片或连拍照片。
- ▶ **效果**：确定照片的特殊效果。
- ▶ **闪光灯**：确定闪光灯操作。
- ▶ **缩放**：确定缩放率。

注意

- ▶ 相框拍摄仅在分辨率为 128x160 像素时可用。

摄像

菜单 6.2

此应用程序使您能够录制视频剪辑。您可以在使用此功能的同时播放和观看视频文件。录制后，视频剪辑可以通过多媒体信息或电子邮件进行发送。

按左软键 [选项] 显示以下弹出菜单项。

- ▶ **亮度**：确定亮度。
- ▶ **大小**：确定图像的尺寸。
- ▶ **计时器**：确定延迟时间。
- ▶ **质量**：确定视频剪辑的质量。
- ▶ **白平衡**：允许您根据环境更改设置。
- ▶ **录制时间**：确定录制时间。
- ▶ **相册**：显示录制的视频剪辑。
- ▶ **退出**：退出摄像机。

- ▶ **效果：**确定视频剪辑的特殊效果。
- ▶ **闪光灯：**确定闪光灯操作。
- ▶ **缩放：**确定缩放率。

我的照片

菜单 6.3

您可以查看和发送图片。此外，您还可以将此图片设为墙纸。

选项

- ▶ **图片预览：**可以在一个屏幕中查看最多9个缩略图。
- ▶ **通过蓝牙发送：**您可以通过蓝牙发送图片。
- ▶ **写多媒体短信：**可以通过多媒体信息发送照片。
- ▶ **设为墙纸：**可以将照片设置为墙纸。
- ▶ **放映幻灯片：**您可以通过此菜单自动的连续浏览照片。
- ▶ **删除：**可以删除照片。
- ▶ **编辑标题：**可以编辑照片的标题。
- ▶ **查看信息：**可以查看有关标题、大小、拍摄日期和时间的信息。

我的视频

菜单 6.4

您可以播放并发送视频。

选项

- ▶ **播放：**播放视频
- ▶ **通过蓝牙发送：**您可以通过蓝牙发送视频。
- ▶ **重命名：**您可以编辑视频标题。
- ▶ **删除：**您可以删除视频。
- ▶ **全部删除：**您可以删除所有视频。
- ▶ **信息：**您可以查看视频信息。

MP3

菜单 6.5

S5200 有一个内置的集成 MP3 播放器。通过使用兼容耳机或通过内置听筒，您可以欣赏手机内存中的 MP3 音乐文件。

注意

- ▶ 由于听筒的尺寸较小，在某些情况下声音可能失真，特别是在最大音量和低音部较多时。因此，建议您使用立体声耳机以便欣赏高质量的音乐。

音乐播放器支持：

- ▶ MPEG-1 Layer III, MPEG-2 Layer III, MPEG-2.5 Layer III 采样频率为 8KHz 至 48KHz。位速率高达 320Kbps, 立体声。
- ▶ **AAC:** ADIF、ADTS 格式 (采样频率为 8KHz 至 48KHz)
- ▶ **AAC+:** V1: (位速率为 16~128Kbps)
V2: (位速率为 16~48Kbps)
(采样频率为 8KHz 至 48KHz)
- ▶ **MP4、M4A:** 采样频率为 8KHz 至 48KHz, 位速率高达 320Kbps, 立体声。
- ▶ **WMA:** 采样频率为 8KHz 至 48KHz, 位速率高达 320Kbps, 立体声。

注意

- ▶ S5200 不支持 MP3 和 AAC 文件的可变频率。因此, 您无法将文件从 VBR MP3 格式更改为 AAC。


使用 Mass Storage, 您可以将 MP3 文件从兼容的 PC 传输到手机存储器中。

使用 USB 电缆 (同一包装盒中随附) 将手机连接到 PC 时, 您仅需尝试通过 USB 电缆连接到 PC。如果您在 win98 SE 中使用, 您需要在 windows 98 的 CD-ROM 上安装 Mass storage 驱动器。有关详情, 请参阅光盘上的手册。

注意

- ▶ 您应该将 MP3 复制至我的媒体\音乐文件夹。如果您复制其它文件夹, 将看不到 MP3 文件。
- ▶ 电脑应运行 Windows 98 SE、Windows ME、Windows 2000 或 Windows XP 操作系统。

MP3播放器 (菜单 6.5.1)

1. 按 MP3 菜单, 然后选择 MP3 播放器。
2. 按左软键  [选项] 访问以下菜单。
 - ▶ 查看播放列表: 您可以在收听音乐时查看播放列表。
 - ▶ 区域重复: 在菜单中选择“开”时, 会连续播放当前音乐的特殊区域部分。
 - ▶ 设为铃声: 此菜单允许您将 MP3 文件设置为铃声。您还可以在情景模式中将其设为铃声。

▶ 设置

- 均衡器

此菜单可帮助您调整收听音乐时的各种环境。本款手机支持四种预设菜单。进入此菜单后，您就可查看均衡器的当前值。

- 播放模式

此菜单允许您设置播放模式。

- 设置随机播放

您可以随机方式收听 MP3 音乐。

- 视觉效果

您可以选择视觉效果菜单：灯光、跳跃、弹跳。此菜单允许您更改播放 MP3 文件时主 LCD 屏幕和外 LCD 屏幕的背景。

播放列表 (菜单 6.5.2)

此菜单允许您查看整个播放列表。您可以按导航键来移动曲目。

此外，如果选择选项菜单，您可以删除文件或查看文件信息。

注意

- ▶ 此音乐文件的版权受国际条约和国家版权法保护。因此，复制音乐需获得许可或许可证。在某些国家，国家法禁止私人复制版权所有的材料。在下载或复制此文件前，请查看有关使用此材料的适用国家的国家立法。

设定 (菜单 6.5.3)

此菜单允许设置以下项目：均衡器、播放模式、设置随机播放和视觉效果。



语音备忘录

菜单 6.6

语音记录功能允许您记录 10 条 20 秒长的语音信息。

记录 (菜单 6.6.1)

您可使用功能表按键记录语音。

1. 开始记录后，会显示记录时间信息。
2. 按  键结束记录。
3. 按  [确认]键选择语音记录标题。

查看列表 (菜单 6.6.2)

您可查看语音记录列表，并可删除和播放语音记录。

设定

菜单 6.7

照相 (菜单 6.7.1)



- ▶ **自动保存：**如果设置为开，图片将自动保存，而不显示保存菜单栏。
- ▶ **删除所有照片：**此菜单允许您在确认之后删除所有照片。

摄像机 (菜单 6.7.2)

- ▶ **删除所有视频：**此菜单允许您删除所有视频。

设定

您可以根据您的需要设置下面的功能表。

1. 在待机模式下按  [功能表]。
2. 按  直接进入设定功能表。

日期设定和时间设定

菜单 7.1

您可设置与日期和时间相关的功能。

日期设定 (菜单 7.1.1)

- ▶ **设定日期**: 在该功能表中, 您可以设定手机日期。
- ▶ **日期格式**: 在该功能表中, 您可以设定日期格式比如: 日/月/年, 月/日/年, 年/月/日。

时间设定 (菜单 7.1.2)

- ▶ **设定时间**: 您可以设定当前手机时间。
- ▶ **时间格式**: 您可以选择时间格式为12小时制或24小时制。

手机设定

菜单 7.2

您可以根据需要完成手机设定。

显示设定 (菜单 7.2.1)

- ▶ **墙纸**: 您可以选择待机模式下的背景图片。

默认

您可以通过按  或  选择一张图片或动画作为墙纸。

我的文件夹

您可以选择一张图片或动画作为墙纸。

- ▶ **问候语**: 如果您选择开, 您将编辑手机在待机模式下显示的文本。
- ▶ **背光**: 您可以设定按键后背景灯开启的时间。
- ▶ **网络名称**: 如果您选择开, 网络名称 (服务提供商的名称) 将会出现在内屏上。

手机配置 (菜单 7.2.2)


允许您从预设主题中选择其中一种。

语言 (菜单 7.2.3)

您可以选择手机上文本显示的语言。此设定会影响到语言输入法。

通话设定

菜单 7.3

在设定功能表中，您可以按  [选择] 设定和通话相关的功能表。

呼叫转接 (菜单 7.3.1)

呼叫转移服务可让您将语音来电、传真来电和数据来电转移到其它号码。要获取更多信息，请联系您的服务提供商。

▶ 转接所有语音来电

无条件转移语音来电。

▶ 正在通话时转接来电

当手机正在使用时转移语音来电。

▶ 无人接听时转接来电

转移您没有应答的语音来电。

▶ 无网络或关机时转接来电

当手机关机或不在服务区时转移语音来电。

▶ 转接所有数据来电

无条件转移到使用PC连接的号码。

▶ 转接所有传真来电

无条件转移到使用传真连接的号码。

▶ 全部取消

取消全部呼叫转接。

子功能表

呼叫转接功能表有以下子功能表。

• 启动

启动相应服务。

语音信箱

转发到信息中心。该功能不包括在所有数据来电和所有传真来电功能表中。

其它号码

输入接受转移呼叫的电话号码。

常用号码

您可以查询5个转移号码。

- 取消

取消相应服务。

- 查询状态


查看相应服务的状态。

接听模式 (菜单 7.3.2)


- ▶ 折盖打开

如果选择此菜单，只需打开翻盖即可接听来电。

- ▶ 按任意键

选择此功能表，您可按任意键接听来电，但不包括  [结束]键。

- ▶ 按发送键接听

选择此功能表，您只可按  [接听]键接听来电。

发送号码 (菜单 7.3.3) (视网络和所申请的服务而定)

- ▶ 网络设定

如果您选择该功能，是否发送您的手机号码将视您两条线路的服务而定，比如线路一或者线路二。

- ▶ 开启

您可以将手机号码发送给对方，在接收方手机上将显示您的手机号码。

- ▶ 关闭

在接收方手机上不会显示您的手机号码。

呼叫等待 (菜单 7.3.4) (视网络而定)

- ▶ 启动

如果启用该服务，您可以接收待接来电。

- ▶ 取消

如果关闭该服务，您将取消此服务。

▶ 查看状态

显示呼叫等待的设置状态。

分钟提示 (菜单 7.3.5)

如果您选择开，可以在通话期间通过每分钟的蜂鸣声检查通话时间。

自动重拨 (菜单 7.3.6)

▶ 开启

当该功能设定为开启时，您的手机在连接失败后将再进行连接尝试。

▶ 关闭


连接失败后，您的手机将不再进行连接尝试。

保密设定

菜单 7.4

需要PIN码 (菜单 7.4.1)

在该功能表中，您可以设定手机在开机时需要SIM卡的PIN码。如果启动该功能，您将被要求输入PIN码。

1. 进入保密设定功能表，按  [选择] 选择要求PIN码。
2. 设置“开启”或者“关闭”。
3. 如果选择“开启”，开机时需要您输入PIN码。
4. 如果您连续三次输错PIN码，手机将被锁定，这时您需要输入PUK码。
5. 您最多可以连续十次输入PUK码，如果您连续十次输错PUK码，您将无法解锁您的手机。这时，您只能联系服务中心寻求帮助。

手机锁 (菜单 7.4.2)

您可以使用保密码防止他人未经授权使用您的手机。如果您将手机锁设定为开，则开机时手机将要求您输入安全密码。如果您将手机锁设定为自动，则只有当您更换SIM卡时，手机才要求您输入安全密码。

自动键盘锁延迟 (菜单 7.4.3)

此菜单允许您设置自动键盘锁定时间。

呼叫限制 (菜单 7.4.4)

呼叫限制服务可以防止您的手机拨打或接听某种电话。该功能需要呼叫限制密码。您可以查看以下子功能表。

▶ 所有拨出电话

您可以限制所有拨出电话。

▶ 国际

您可以限制拨出国际长途。

▶ 漫游时国际

您可以限制在国际漫游时所拨打的电话。

▶ 所有来电

您可以限制所有来电。

▶ 漫游时来话

您可以限制国外漫游时来电。

▶ 全部取消

您可以取消所有限制服务。

▶ 更换密码

您可以更改呼叫限制服务的密码。

一组呼叫限制子功能表:

• 启动

请求网络启动呼叫限制服务。

• 取消

取消所选子功能表呼叫限制服务。

• 查看状态

查询呼叫限制服务开启或关闭的状态。

固定拨号 (菜单 7.4.5)

(需SIM卡支持)

您可以限制拨电话号码的拨打。

这些号码由PIN2码保护。

▶ 启动

您可以限制拨打您所选择的电话号码。

▶ 成员列表

您可以不限制对电话号码的拨打。


▶ 成员列表

您可以查看被保存为FDN的号码列表。

更改密码 (菜单 7.4.6)

PIN是Personal Identification • Number(个人识别号码)的缩写。

可用来防止未经授权的人使用您的手机。您可以更改访问密码:安全密码, PIN码, PIN2码。

1. 如果您想更改访问密码: 安全密码, PIN码, PIN2码, 先输入原密码然后按  [确认]。
2. 输入新的 安全密码, PIN码, 或PIN2码, 然后确认。

网络设定 菜单 7.5

您可以选择能够自动或手动注册的网络。通常, 手机网络选择设定为自动。

网络选择 (菜单 7.5.1)

自动

如果您选择“自动”, 手机会自动选择在您区域内的可用网络。一旦您选择“自动”, 无论手机在开机状态还是关机状态, 都将保持设置为“自动”。

手动

手机会找到可用的网络列表并显示出来。然后您可以选择您想使用的网络, 前提是该网络与您本地网络运营商已签订漫游协议。如果手机无法接入到您选择的网络中, 手机允许您选择另一个网络。

首选网络

您可以设定手机在注册其它网络前首先注册的首选网络列表。该列表从手机预设的已知网络列表中创建。

频段选择 (菜单 7.5.2)

使用此功能可在以下两项中进行选择, 以此设置网络频带: GSM 900/1800 或 GSM1900。

GPRS设置 菜单 7.6

您可以根据不同的情形设置GPRS服务。

恢复初始设定 菜单 7.7

您可以通过选择该功能表将手机恢复为预设配置。然后, 您需要安全密码启动该功能。

内存状态

菜单 7.8

Internal memory (菜单 7.8.1)


此功能显示手机中用户内部存储器的状态。

Multimedia memory (菜单 7.8.2)

此功能显示手机中多媒体存储器的状态。

您可以访问不同的 WAP（无线应用协议）服务，如银行业务、新闻、天气报告和航班信息等。这些服务专为手机应用而设计，由WAP服务提供商负责进行维护。

向您的网络运营商及（或）希望使用其服务的服务提供商咨询，了解WAP服务的提供、定价和收费情况。服务提供商将向您提供有关如何使用其服务的说明。




一旦建立连接，屏幕上即显示主页。主页内容视服务提供商而定。要在任何时间退出浏览器，按  键。手机将返回待机模式。

使用WAP浏览器导航

您可以使用手机按键或 WAP 浏览器菜单上网。

使用手机按键

上网期间，手机按键的功能有所不同。

按键	说明
	将内容区域向上 / 向下滚动一行
	返回上一页
	选择选项并确认操作。

使用WAP浏览器菜单

当无线上网时，有多个菜单选项可供使用。

注意

- ▶ 视浏览器版本而定，WAP 浏览器菜单可能有所不同。

互联网

菜单 8.1


住宅 (菜单 8.1.1)

回到主页。主页是您在启动的上网设定中所设定的WAP站点。如果您没有进行设置，将使用运营商预先设定的站点。

书签 (菜单 8.1.2)

此菜单使您可以存储喜爱网页的 URL 以便以后访问。您的手机上已预先安装若干个书签。这些预先安装的书签不能删除。

要创建书签

1. 按左软键  [选项]。
2. 选择“添加”，然后按 OK 键。
3. 输入相应的 URL 和标题后，按 OK 键。

- ▶ **提示：**使用  键和  键可输入图标。要输入“.”，请按  。

选择需要的书签后，将出现以下选项。

- ▶ **连接：**连接到所选书签。
- ▶ **新增：**选择此选项创建新的书签。
- ▶ **修改：**您可以编辑所选书签的 URL 和/或标题。
- ▶ **删除：**删除所选书签。
- ▶ **全部删除：**删除所有书签。

转到URL (菜单 8.1.3)

您可以直接连接到想要的站点。输入特定的 URL 后，按 OK 键。

设定 (菜单 8.1.4)

更定

上网设定为用于连接互联网的网络信息。

备注

- ▶ 如果 SIM 卡支持 SAT（即，SIM 卡应用程序套件）服务，则此菜单将是 SIM 卡上存储的运营商特定服务的名称。如果 SIM 卡不支持 SAT 服务，则此菜单是“情景模式”。

每个上网设定均有子菜单，如下所示：

- ▶ **启动：**启动所选上网设定。
- ▶ **设定：**使用此功能编辑和更改所选上网设定的 WAP 设置。
 - **主页：**该设定可让您输入您想作为主页使用的网站地址(URL)。您不需要在每个URL前键入“http://”，因为WAP浏览器会自动加入。
 - **承载：**您可以设置载体数据服务。
 - 1 数据
 - 2 GPRS

- **数据设定**: 仅当选择“数据设定”作为载体服务时出现。

拨叫号码: 输入访问WAP网关的拨号号码。

用户名: 拨号服务器（不是WAP网关）的用户身份。

密码: 拨号服务器（不是WAP网关）识别您身份所需的密码。

呼叫类型: 选择数据来电的类型: 模拟或ISDN（数码）。

空闲时限: 您可以设定限制时间。超过此时间限制而没有数据输入或传输时，服务将自动关闭。

呼叫速率: 数据连接的速度，9600 或者14400。

- **GPRS设置**: 只有当选择GPRS作为载体服务时，服务设定才可用。

APN: 输入APN

用户名: APN服务器的用户身份。

密码: APN服务器识别您身份所需的密码。

- **设置代理服务器**

代理服务器: 开启/关闭

IP地址: 输入您访问的代理服务器的 IP 地址。

端口号: 输入代理服务器端口

- **DNS设定**

主服务器: 输入您访问的首选 DNS 服务器的 IP 地址

次服务器: 输入您访问的备用 DNS 服务器的 IP 地址

- ▶ **重命名**: 编辑上网设定的名称。
- ▶ **删除**: 删除上网设定。
- ▶ **新增**: 您可手动添加上网设定。

缓存

设置是否通过缓存尝试进行连接。

Cookie

检查是否使用了 cookie。

清除缓存

删除缓存中保存的所有信息。

删除cookie

删除保存在 cookie 中的所有上下文。

安全

显示可用证书的列表。

- ▶ **权威：**您可以查看存储在手机中的官方证书的列表。
- ▶ **个人：**您可以查看存储在手机中的个人证书的列表。

SIM 服务

菜单 8.2

（视 SIM 卡情况而定）



您的服务提供商可以通过 SIM 卡提供如家庭银行业务、股市行情之类的特殊应用。如果已注册这些服务之一，该服务名称将出现在主菜单末尾。通过“SIM 卡服务”菜单，您的手机能够满足将来的使用需要，并能够支持服务提供商所提供的额外服务。

有关详细信息，请联系您的服务提供商。


我的游戏&更多

菜单 9.1

我的游戏&更多 (菜单 9.1.1)

在此菜单中，您可以管理手机中安装的 Java 应用程序。您可以播放或删除下载的应用程序，或者设置连接选项。下载的应用程序可在文件夹中整理。按左软键  [选择] 打开所选的文件夹或启动选定的Midlet。使用左软键  [选项]，以下菜单将会出现。

注意

- ▶ 下载 Java 游戏后，按“确定”键 () 将其保存到根文件夹。

- ▶ **开始**：启动选定的应用程序。
- ▶ **信息**：显示应用程序的信息。
- ▶ **选项**：某些 Java 应用程序可能需要建立数据连接。选择此项以设置连接选项。
 - **翻盖常亮**：立即建立连接，而不显示通知。

- **提示**：在应用程序建立连接时进行询问。
- **从不查询**：不允许建立连接。

注意

- ▶ 您不可删除或重命名预先安装的文件夹或文件夹中的游戏。

Java是由Sun Microsystems开发的一项技术。与使用标准Netscape或微软Internet Explorer浏览器下载Java Applet的方式相同，可以使用具有WAP功能的手机下载Java MIDlet。视服务提供商而定，所有基于Java的程序（如Java游戏）均可以下载到手机上并运行。一旦下载之后，即可在“我的应用程序”菜单中查看 Java 程序，并可在此选择、执行或删除。Java程序。Java程序文件以 .JAD和 .JAR格式保存在手机中。

注意

- ▶ JAR文件是Java程序的压缩格式，JAD文件是包含所有详细信息的描述文件。在下载之前，您可以从网络上的JAD文件中查看所有详细的文件说明。
- ▶ 视标准语言（J2ME）而定，并非所有 Java 应用程序均兼容当前市场上销售的各种手机，这是因为不同手机型号所使用的库可能不同。如果下载了不是为本手册中所述的手机专门开发的Java 应用程序，软件可能会被屏蔽或自动开启，这时候您有必要“重新启动”手机。我们希望让您知道这些问题是由于应用程序不兼容导致的，而不是产品故障。

注意！

- ▶ 只有基于J2ME (Java 2 微版本)的程序会在手机上运行。
基于J2SE (Java 2 标准版本)的程序只能在PC环境中运行。

更改 (菜单 9.1.2)

此功能表含有与“互联网”功能表相同的设置。事实上，要下载新的应用程序，必需具有WAP连接。

图片

菜单 9.2

左软键  [选项] 可激活以下选项。

- ▶ **设为墙纸：**可将选定的图片设置为墙纸。
- ▶ **写多媒体短信：**可通过彩信发送下载的图片。
- ▶ **通过蓝牙发送：**可通过蓝牙发送图片。

音乐

菜单 9.3

左软键  [选项] 可激活以下选项。

- ▶ **设为铃音：**此选项可将当前选定的声音设置为铃声。
- ▶ **写信息：**可通过短信和彩信发送音乐。
- ▶ **通过蓝牙发送：**可通过蓝牙发送音乐。

文件存储

菜单 9.4

此文件夹与文件存储类似。它包含所有通过 UMS 功能或蓝牙传输的文件，如手机不支持的图像、声音和普通文件。

按 [选项] 软键，您可以查看或播放文件（如果支持），也可以通过蓝牙删除或发送文件。

USB 连接

S5200 可通过 USB 电缆连接到 PC，以传输文件、内容和使用内置调制解调器。您可以在下文中找到所有与此功能相关的详细资料。

USB 媒体存储 (UMS)

UMS 功能 (USB 媒体存储) 允许您将多媒体文件保存在手机的内部存储器 (64MB) 中，以将其当作普通的 USB 存储装置使用。使用此功能无需安装附加软件。

您可以预览 JPG (最大 460K) 和 GIF (最大 100K)，也可以播放 MMS 中附加的声音。

备注

- ▶ 使用 UMS 功能时，您将无法收到任何来电或信息。

1. 从手机的待机屏幕，将 USB 电缆连接到手机和 PC。几秒钟后，PC 将识别外围设备。
2. 手机将在主 LCD 屏幕上显示“USB”。
3. 在 PC 的“我的电脑”文件夹中，手机被识别为“可移动磁盘”。系统也将为其分配磁盘的盘符如：“E:\”。随后，您便可以将手机视为普通的 Windows 文件夹，然后从中上载或下载文件。
4. 双击“可移动磁盘”，打开“我的媒体”文件夹。此时将出现四个新文件夹：
 - **音乐**：您可以在此文件夹复制音乐文件。支持的格式包括：MP3、AAC、AAC+、AAC++、WMA、MP4（音频）和 WAV。使用手机的 MP3 播放器可播放此文件夹中的文件。
 - **照片**：此文件夹用以保存使用手机的数码相机所拍摄的照片。您可以使用电脑的“复制”或“粘贴”命令将照片从手机传输到 PC。

备注

- ▶ 尽管您可以从 PC 上载新图片，手机不会将其列在“我的照片”菜单中。

因此，我们建议您不要向此文件夹上载任何文件。如果您要向手机上载新墙纸，请使用 CD-ROM 中可用的专用程序。

- **存储：**此文件夹与文件存储类似。您可以上载任何类型的文件：图像、音频，甚至手机不支持的特定文件（如，Word 和 Excel 文件），只需随身携带，即可将其下载到其它 PC 中。在手机上，存储在此文件夹中的文件位于（菜单 - 下载 - 文件存储）中。
- **视频：**在此文件夹中，您可以将使用手机的数码相机拍摄的视频下载到 PC 上，也可以向手机上载新视频。此文件夹支持 3GP 文件格式。在手机上，您可以在位于（菜单 - 多媒体 - 我的视频）的文件夹中查看此文件。

备注

- ▶ 内存未滿时，您可以上载任何大小的文件。
- ▶ 您可以在 4 个默认文件夹中创建多达 10 个子文件夹。
- ▶ 请勿更改默认文件夹名称，否则它将无法正常工作。

5. 文件传输完成后，请断开 USB 外围设备与 Windows 的连接，并断开手机与电缆的连接。

警告！

- ▶ 正在传输文件时，切勿断开手机连接。这样做可能损坏内存。断开电缆连接之前，要通过 Windows 选项断开与外围设备的连接。

PC 程序和互联网

您可以将手机连接到 PC 以管理您的电话本联系人，上载新内容（如墙纸和铃声）或使用内置调制解调器。

1. 安装包含在 CD-ROM 中的程序。
2. 在手机中，打开菜单工具 - 调制解调器并确认激活操作。
3. 使用 USB 电缆将手机连接到 PC，启动所需的程序。

备注

- ▶ 要连接 USB，请在打开手机并出现待机窗口后几分钟进行。

4. 使用调制解调器后，建议从菜单工具 - 调制解调器中停用此调制解调器。

附件

我们为你的手机准备了多种附件。您可以根据个人的通信要求来选择合适的附件。

标准电池



耳机

用于免提操作。
包括听筒和麦克风。




旅行用适配器

当您不在办公室或家中时，
可以使用此充电器为
电池充电。



数据套件/CD

您可以将手机与PC相连，
进行数据交换。

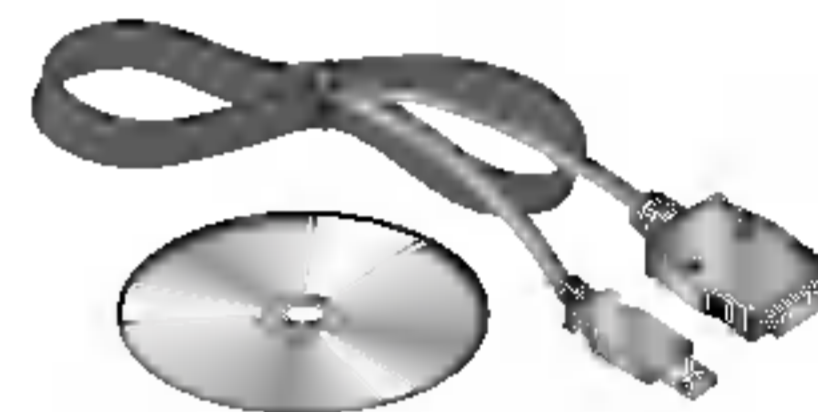

注意

- ▶ 确保使用正规的LG配件。
- ▶ 仿冒品或替代品及非原厂配件可能会让您丧失保修权益。
- ▶ 各个地区的配件可能不同；如有任何疑问，请与我们 的地区服务公司或代理查证核实。

常规

产品名称 : S5200

系统 : GSM 900 / DCS 1800 / PCS 1900

环境温度

最高 : +55° C (放电)

+45° C (充电)

最低 : -10° C

Declaration of Conformity

LG Electronics

Supplier Details

Name

LG Electronics Inc

Address

LG Twin Tower
20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

S5200

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 / EN 301 489-07 : 2002 / EN 301 489-17 V1.2.1

EN 300 328 V1.4.1

EN 60950 : 2001

EN 50360/EN 50361 : 2001

3GPP TS 51.010-1,

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

Name

Jin Seog, Kim / Director

Issued Date

8.Sep. 2005

LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seckim @ lge.com

Signature of representative

| S5200 | USER GUIDE

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

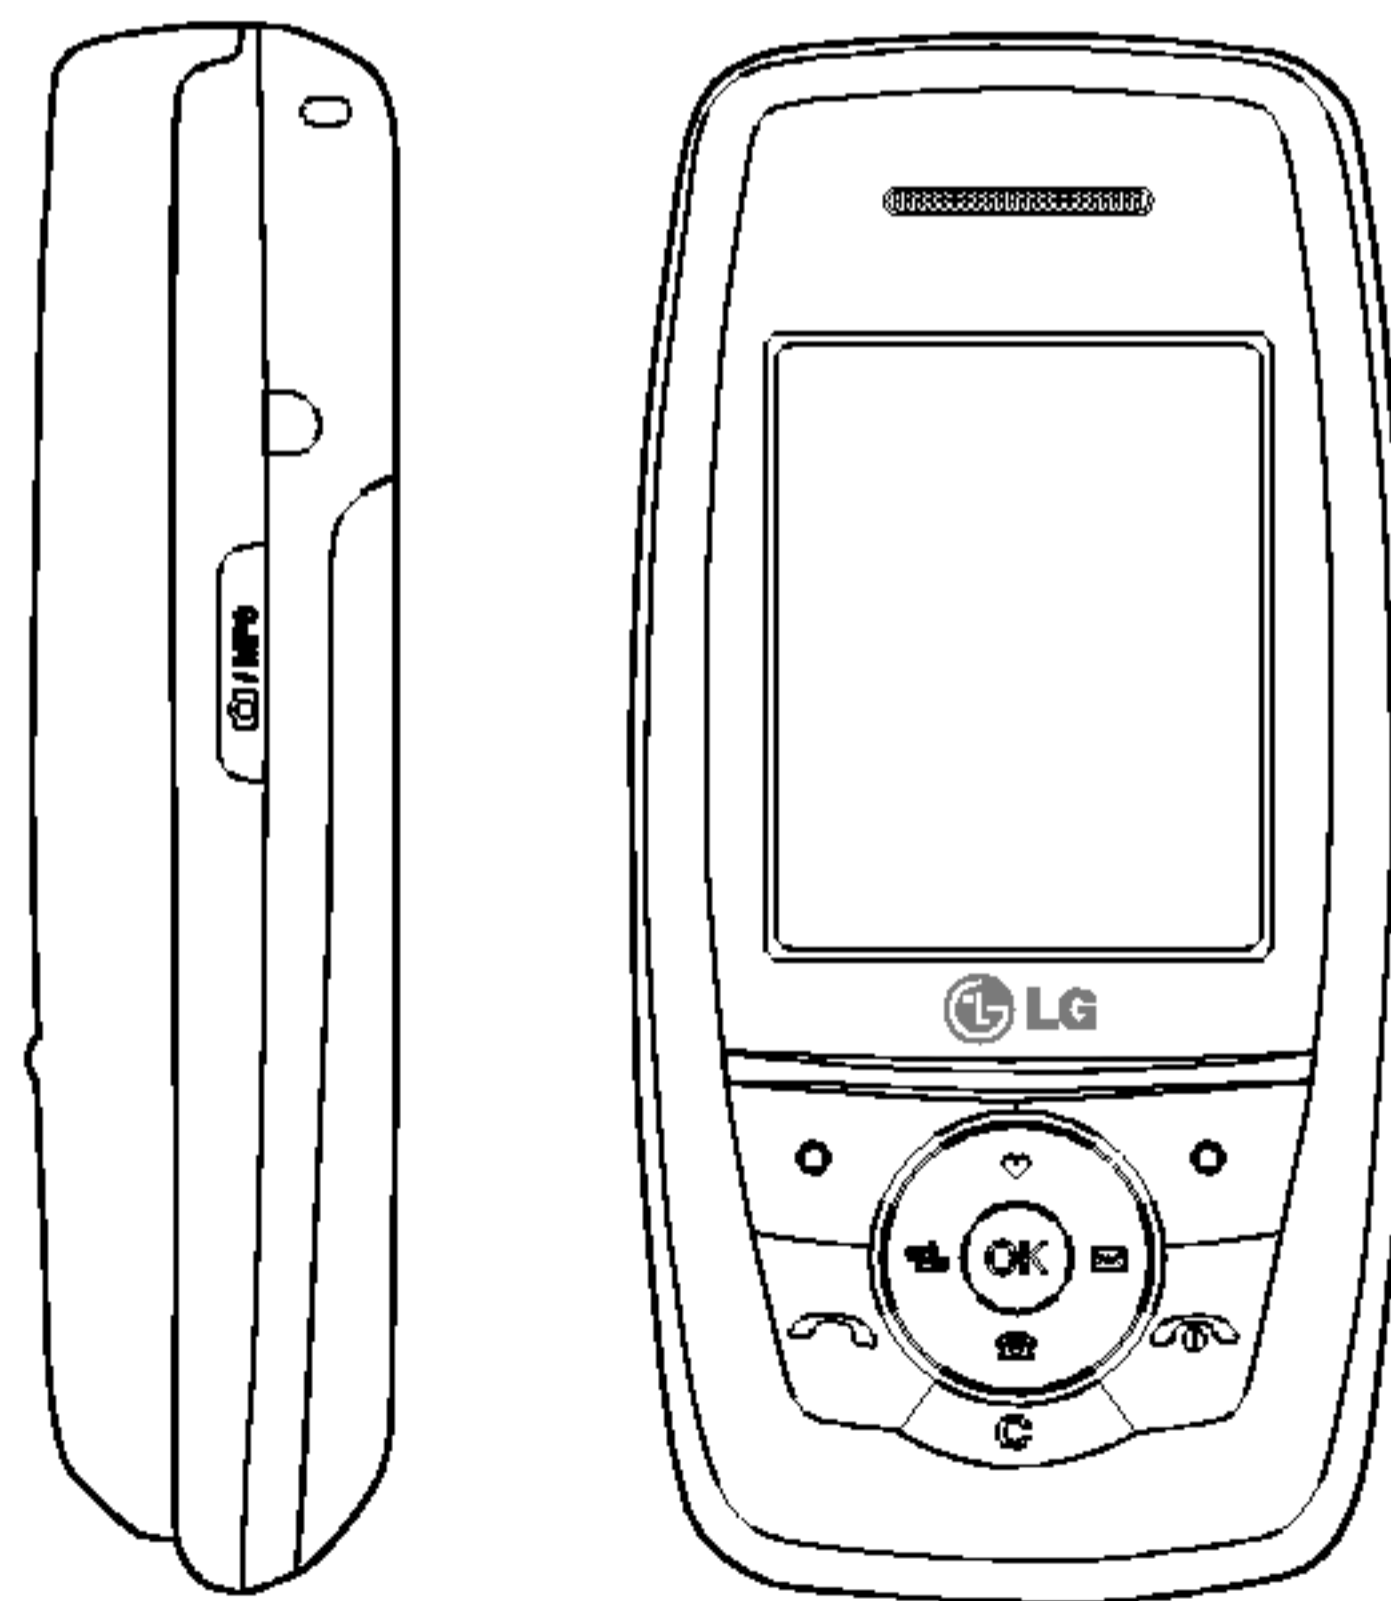


Table of Contents

Introduction	6	General Functions	22	Call register	36
Guidelines for safe and efficient use	7	Making and answering calls		Missed calls	
S5200 features	11	Contacts	26	Received calls	
Parts of the phone		In-call menu		Dialled calls	
Display information	15	Multiparty or conference calls	28	Delete recent calls	37
Getting started	17	Menu Tree	30	Call charges	
Installing the SIM card and battery		Selecting functions and options	33	Call duration	
Charging the Battery	18	Profiles	34	Call costs	
Disconnecting the adapter	19	Activate		Settings	
Turning your phone on and off	20	Personalise		GPRS information	38
Access codes		Rename	35	Call duration	
Barring password	21			Data volumes	

Tools	39	Organiser	42	Messages	48
Alarm clock		Contacts		New message	
Bluetooth		Search		Write text message	
Paired devices		Add new		Write multimedia	
Handsfree devices		Caller groups	43	message	49
Settings	40	Speed dial		Inbox	51
Calculator		Settings	44	Outbox	52
Unit converter		Copy all		Drafts	53
World time		Delete all	45	Listen to voice mail	
Modem	41	Information		Info message	54
		Calendar	46	Read	
		Add new		Topics	
		View daily schedules		Templates	
		Delete past		Text templates	
		Delete all		Multimedia templates	55
		Go to date		My business card	
		Set alarm tone		Settings	56
		Memo	47	Text message	
				Multimedia message	
				Voice mailbox number	57
				Info message	
				Push messages	

Table of Contents

Multimedia	58
Camera	
Video camera	
My photos	59
My video	
MP3	60
MP3 player	61
Playlist	
Settings	62
Voice recorder	
Record	
View list	
Settings	
Camera	
Video camera	

Settings	63
Date & Time	
Date	
Time	
Phone settings	
Display settings	
Theme settings	64
Language	
Call settings	
Call divert	
Answer mode	65
Send my number	
Call waiting	
Minute minder	66
Auto redial	

Security settings	66
PIN code request	
Handset lock	
Auto key lock timeout	67
Call barring	
Fixed dial number	
Change codes	68
Network settings	
Network selection	
Band selection	69
GPRS setting	
Reset settings	
Memory status	
Internal memory	
Multimedia memory	

Service	70
Internet	
Home	
Bookmarks	71
Go to URL	
Settings	
SIM service	73

Downloads	74
Games & Apps	
Games & Apps	
Profiles	75
Images	
Sounds	
File storage	76
Accessories	79
Technical data	80

Introduction

Congratulations on your purchase of the advanced and compact S5200 mobile phone, designed to operate with the latest digital mobile communication technology.

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.



Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model S5200 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- ▶ The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.117 W/kg (10g).

Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV, radio or personal computer.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.

Guidelines for safe and efficient use

- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use the accessories like an earphone cautiously.

Electronics devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.

- ▶ RF energy may affect some electronic systems in your motor vehicle such as car stereo or safety equipment.
- ▶ When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Guidelines for safe and efficient use

Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

S5200 features

Parts of the phone

Front view



1. Headset jack

- ▶ Connect a headset here.

2. Up/down side keys

- ▶ Controls the volume of keypad tone in standby mode with the phone open/closed.
- ▶ Controls the earpiece volume during a phone call.

3. Front screen

S5200 features

Right side view




Camera/MP3 key

▶ Open the slide to reveal the camera lens. Press and hold down this key to activate the camera mode. Also use this key to take a shot. Use the front screen as a viewfinder.

Rear view

Camera lens

▶ Dirt on the camera lens could affect the image quality.

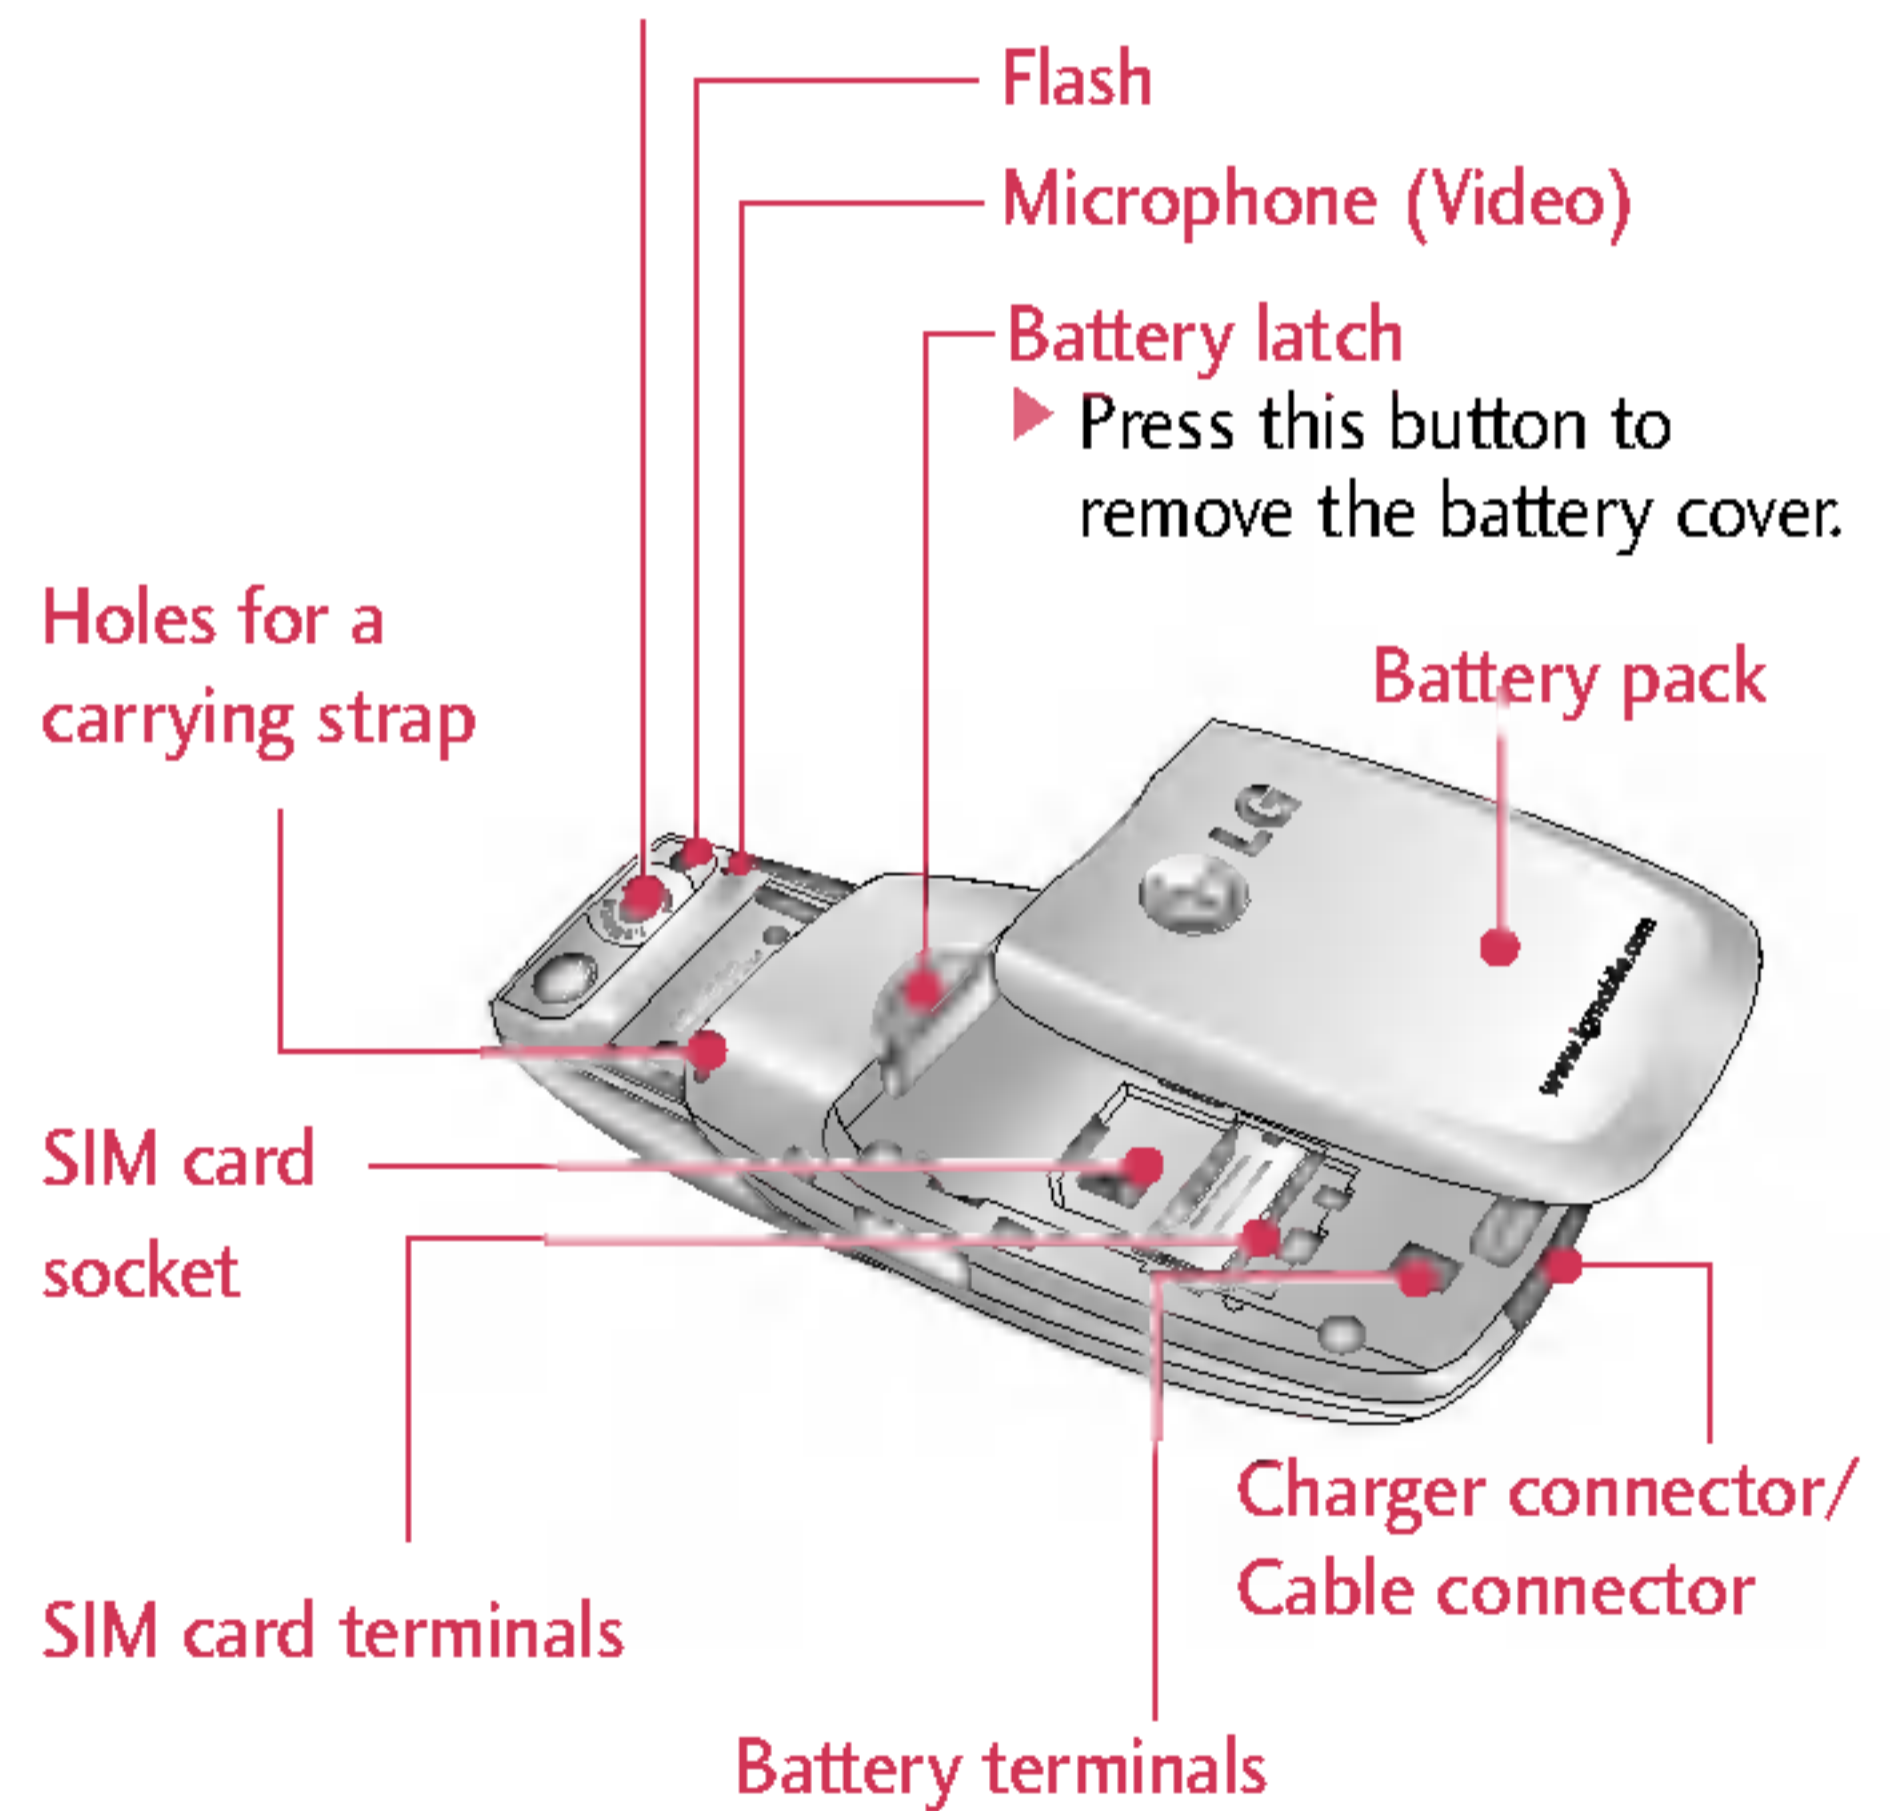



Open view



Note

- ▶ To prevent the difficulty in hearing of the other side, slide open while using phone.




S5200 features

1. **Earpiece**
- 2, 8. **Left soft key/Right soft key:** Performs the function indicated by the text on the screen immediately above it.
3. **Send key:** Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls by pressing the key in standby mode.
4. **Alphanumeric keys:** Enter numbers, letters and some special characters.
5. **Microphone:** Can be muted during a call for privacy.
6. **Main screen:** Displays phone status icons, menu items, Web information, pictures and more in full colour.
7. **Navigation keys:** Use to scroll through menus and move the cursor.
9. **Confirm key:** Selects menu options and confirms actions.
10. **End/Power key:** Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.
11. **Clear key:** Deletes a character with each press. Hold the key down to clear all input. Use this key to go back to a previous screen.
12. **Special function keys**
 - ▶  : A long press of this key enters the international call character “+”.
 - ▶  : While keying in a phone number, a long press of this key enters a pause.

Display Information











The table below describes various display indicators or icons that appear on the phone's display screen.

On-Screen Icons







Icon	Description
	Indicates the strength of the network signal. *
	Indicates a call is in progress.
	Indicates that you are roaming on another network.

Note

- ▶ *The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and bad audio. Please take the network bars as indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).

Icon	Description
	Indicates that GPRS service is available.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates the receipt of a message.
	Indicates the receipt of a voice message.
	Indicates that the vibration ringer has been set.
	Indicates the Loud profile is activated.
	Indicates the Silent profile is activated.
	Indicates the Headset profile is activated.
	Indicates the General profile is activated.

S5200 features

Icon	Description
	Indicates that you can use the push message service.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Agenda event set
	Call divert service active
	Bluetooth enabled

Note


- ▶ When the status of the battery indicates low, you may not use Camera or Multimedia function.
- ▶ While using Multimedia function, the status of the battery is changeable.

Installing the SIM card and battery

Make sure the power is off before you remove the battery.

1. Remove the battery.

Press the button to release the battery, then slide the battery down till it stops. Now lift the battery from its compartment.

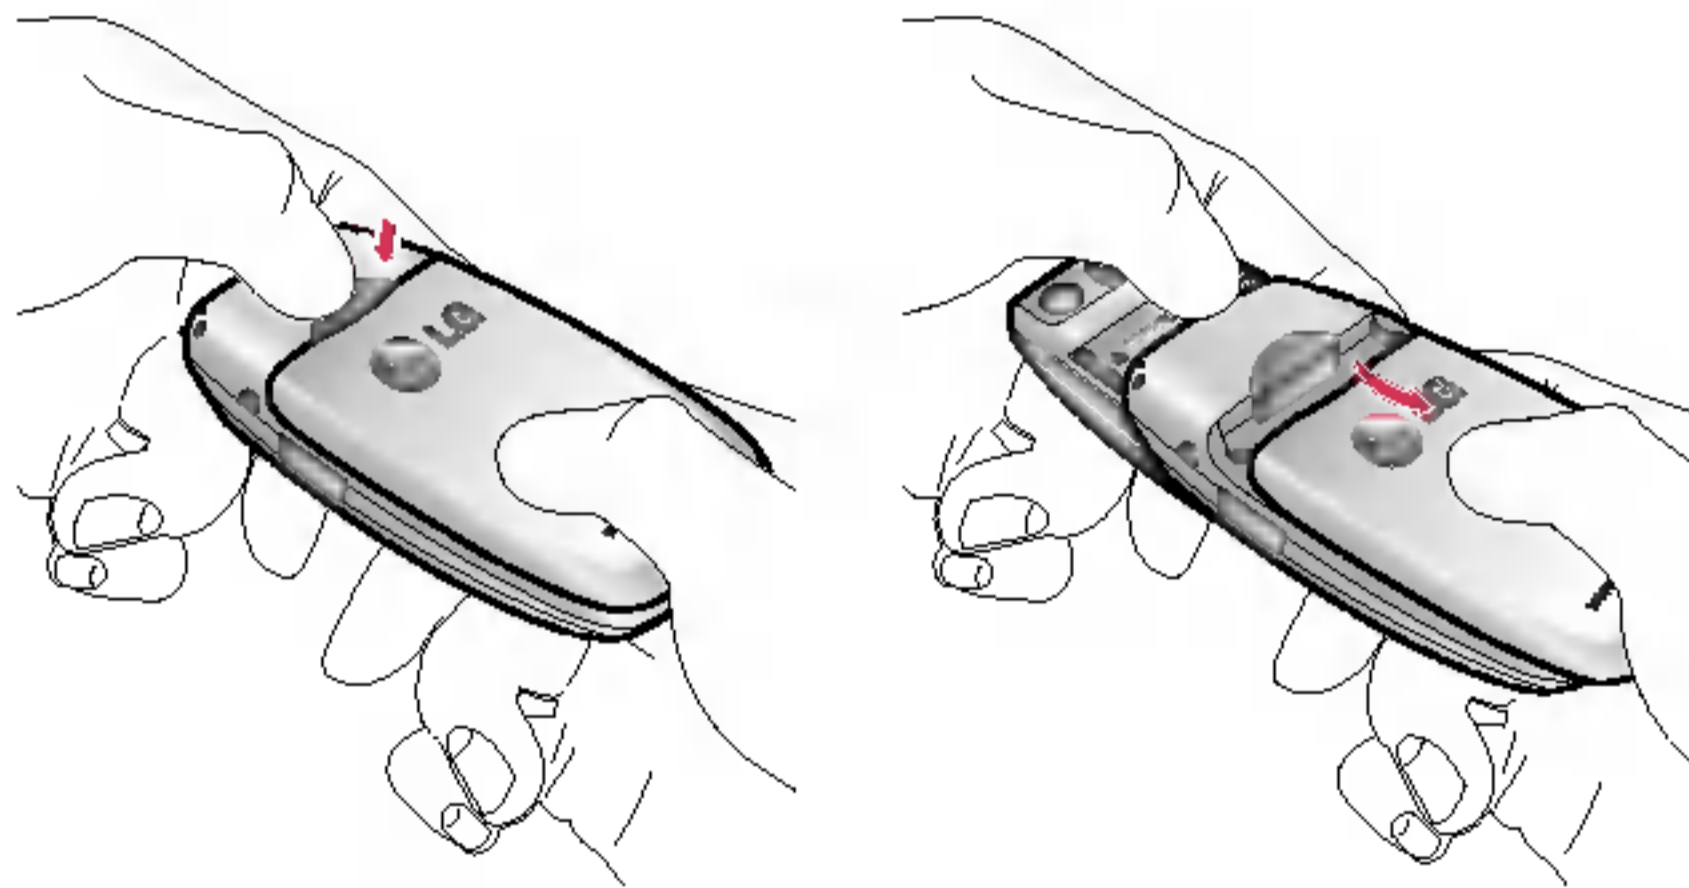


Note

- ▶ Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. Install the SIM card.

Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

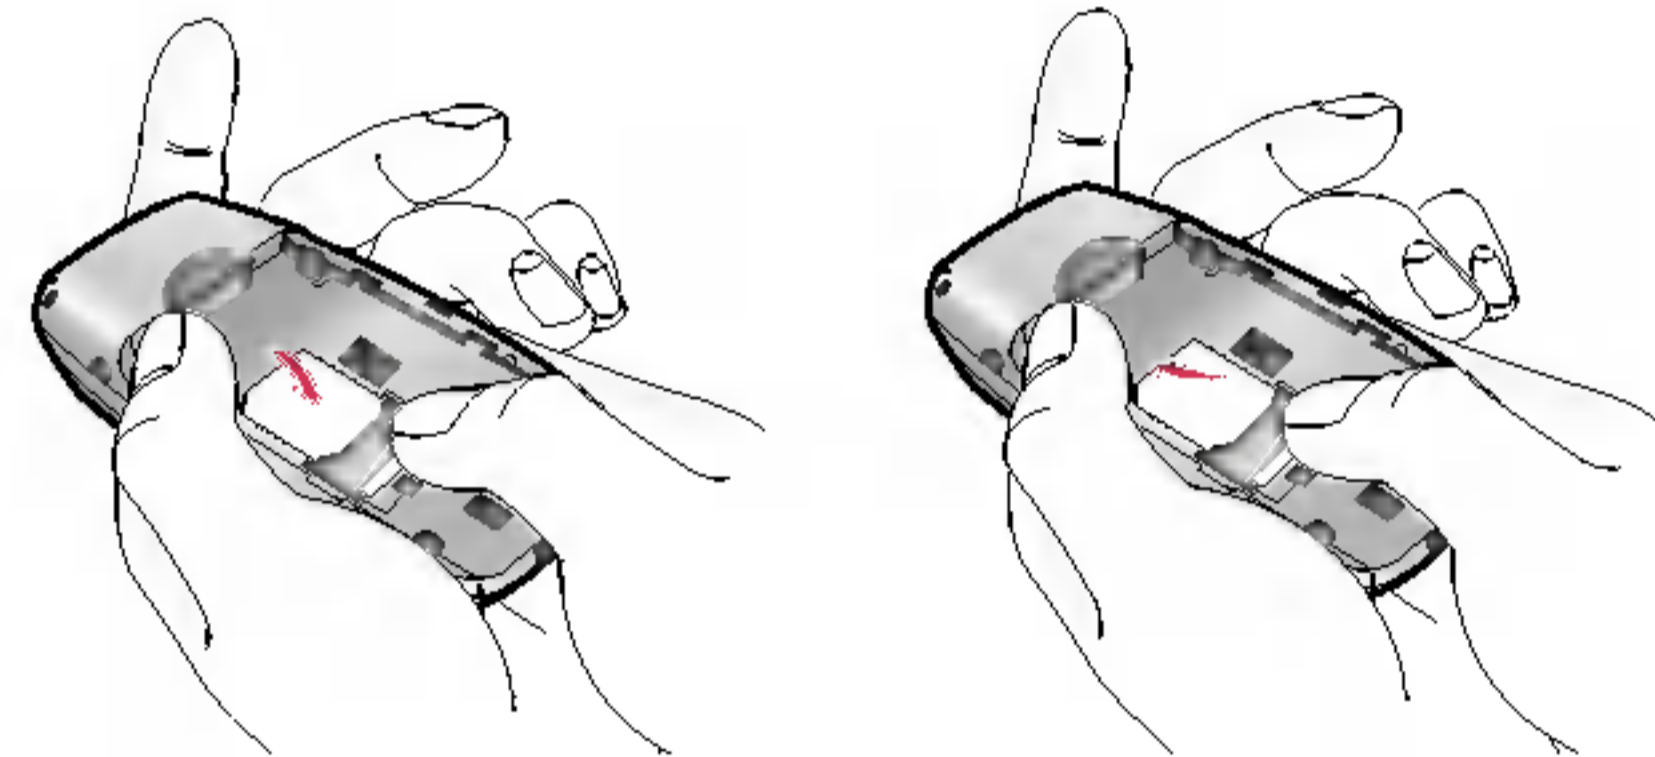

To insert the SIM card


To remove the SIM card

Caution!

- ▶ The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.


Getting started

3. Install the battery.

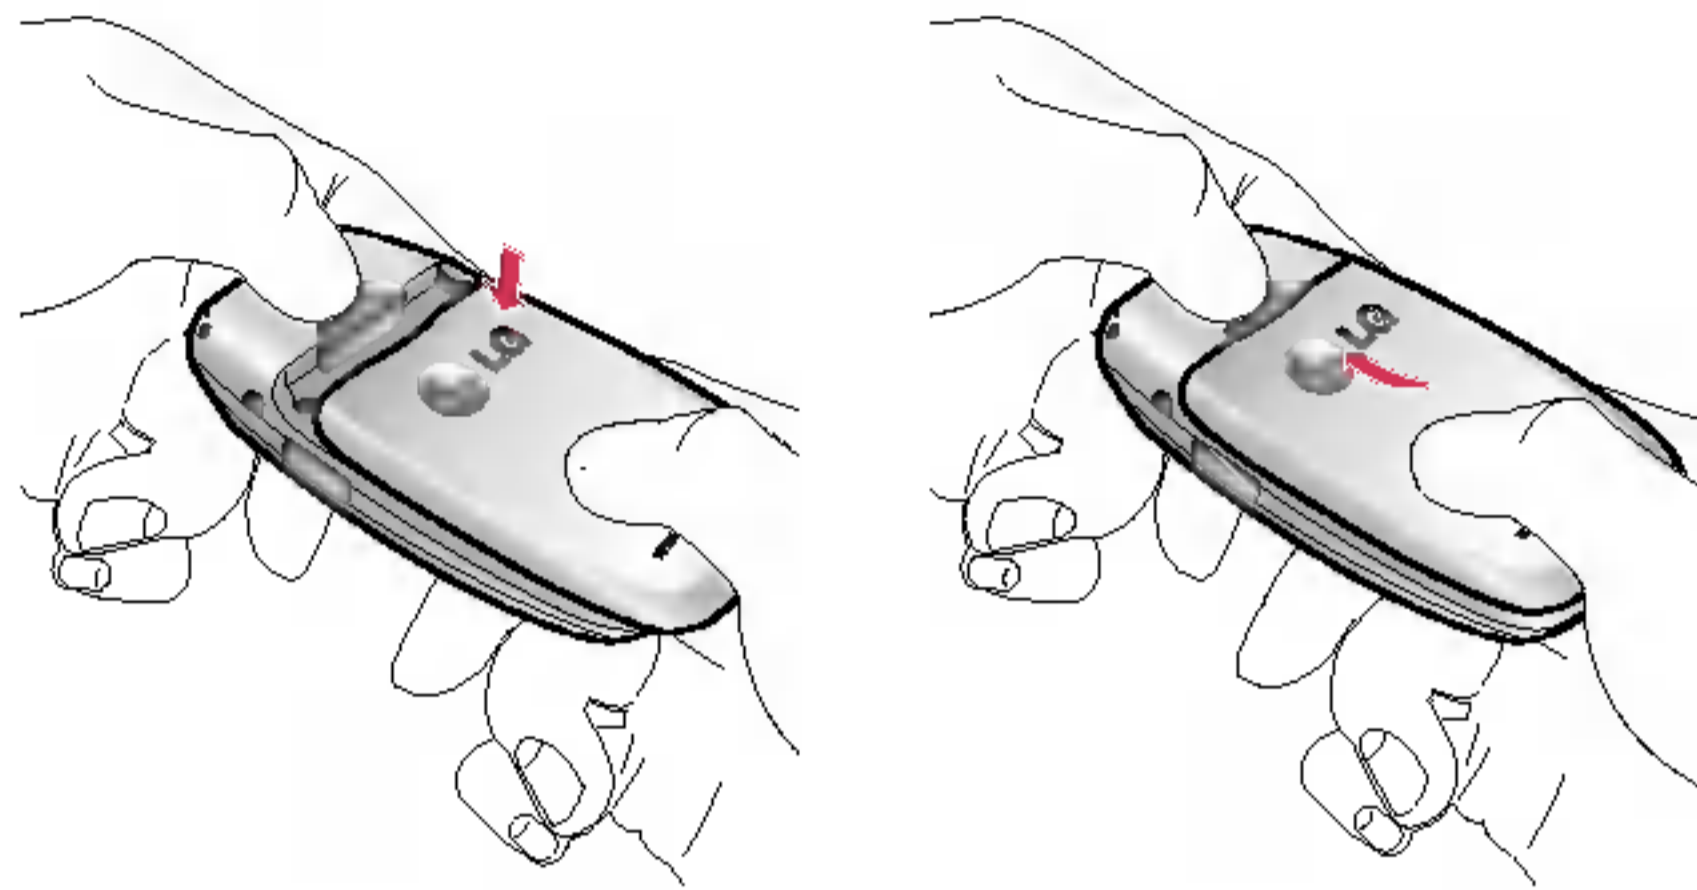

Charging the Battery

To connect the mains adapter to the phone, you must have installed the battery.

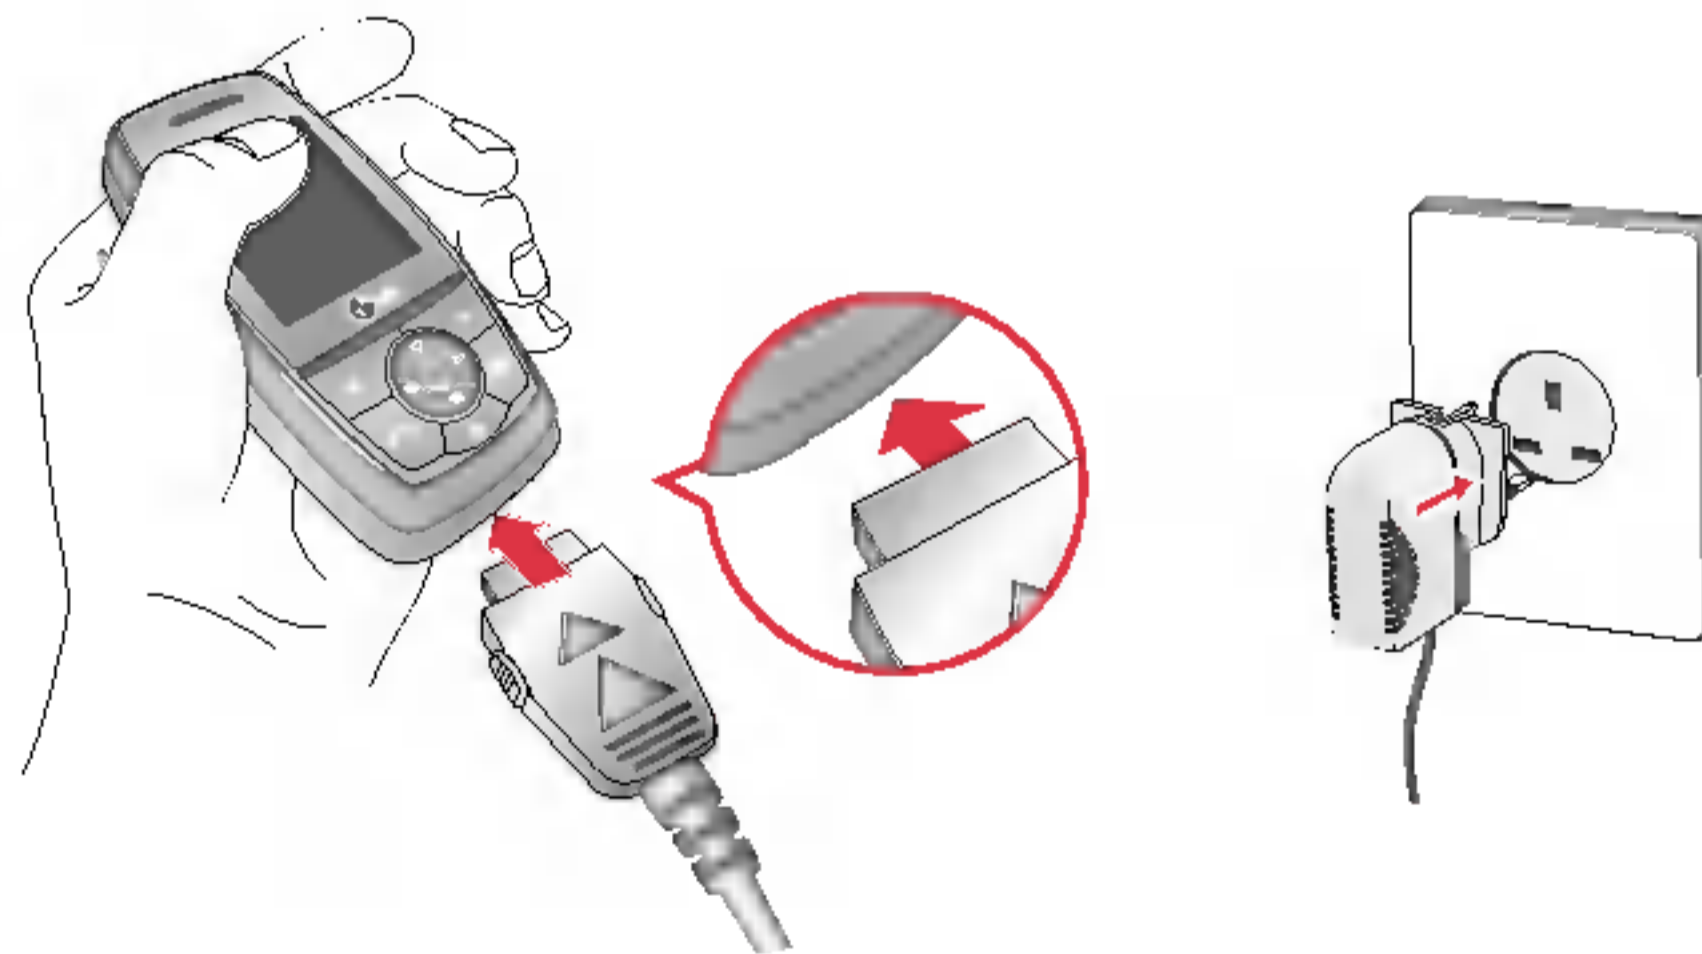

1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.
2. Connect the other end of the mains adapter to the mains socket. Only use the charger included in the box.
3. The moving bars of battery icon will stop after charging is complete.

Caution!

- ▶ Do not force the connector as this may damage the phone and/or the charger.
- ▶ If you use the battery pack charger out of your own country, use an attachment plug adapter for the proper configuration.
- ▶ Do not remove your battery or the SIM card while charging.

Warning!

- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ Make sure that no sharp-edged items such as animal teeth or nails come into contact with the battery. There is a risk of this causing a fire.
- ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

Disconnecting the adapter

Disconnect the travel adapter from the phone by pressing its side buttons as shown in the diagram.


1. When charging is finished, the moving bars of the battery icon stop and 'Full' is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.

**Note**


- ▶ Ensure the battery is fully charged before using the phone for the first time.
- ▶ Do not remove the battery or SIM card while charging.
- ▶ In the case the battery is not properly charged, please turn the phone off and on using the power key. Then detach and reattach the battery, and recharge the phone.

Turning your phone on and off

Turning your phone ON

1. Install a battery to the handset and connect the phone to an external power source such as the travel adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press and hold  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the **PIN code request** setting you may need to enter your PIN code.

Turning your phone OFF

1. Press and hold  for a few seconds until the LCD screen is turned off.

Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 7-4-6].

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **Enable**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Disable**, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network operator for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to unlock a PIN blocked phone. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, please contact your network operator.

Security code (4 to 8 digits)

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.




Barring password

The barring password is required when you use the **Call barring** function. You can obtain the password from your network operator when you subscribe to this function.



General Functions

Making and answering calls



Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code.
 - ▶ Press and hold the clear key () to erase the entire number.
3. Press the send key () to call the number.
4. To end the call, press the end key () or the right soft key.


Making a call from the call history list

1. In standby mode, press the send key (), and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation keys.
3. Press  to call the number.


Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  to call the number.


Ending a call

When you have finished your call, press the end () key.

Making a call from the phonebook

You can save the names and phone numbers dialed regularly in Contacts. You can save them to the SIM card and/or phone memory. You can dial a number by simply looking up the desired name in the phonebook and pressing the () key.

Adjusting the Volume

If you want to adjust the earpiece volume during a call, use the side keys (). Press the up side key to increase and down side key to decrease the volume.

Note


- ▶ In standby mode with the phone open/closed, pressing the side keys adjusts the key tone volume.

Answering a Call


When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name/photo if saved in the phonebook) is displayed.

1. To answer an incoming call, open the phone. (When **Slide open** has been set as the answer mode. [Menu 7-3-2].)


Note

- ▶ If Press any key has been set as the answer mode any key press will answer a call except for the  or the right soft key.

- ▶ You can answer a call while using the address book or other menu features.

2. To end the call, close the phone or press the  key.


Using the Speakerphone

You can use the integrated Speakerphone during a call by pressing the  key. The loudspeaker is automatically deactivated when you end the call.


Warning!

- ▶ Due to higher volume levels, don't place the phone near your ear while the speakerphone is enabled.

Manner mode (Quick)

You can activate the manner mode by pressing and holding down the  key after opening the phone.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

General Functions

Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting.

The following text input methods are available in the phone.


T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.


ABC mode


This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.


Changing the text input mode

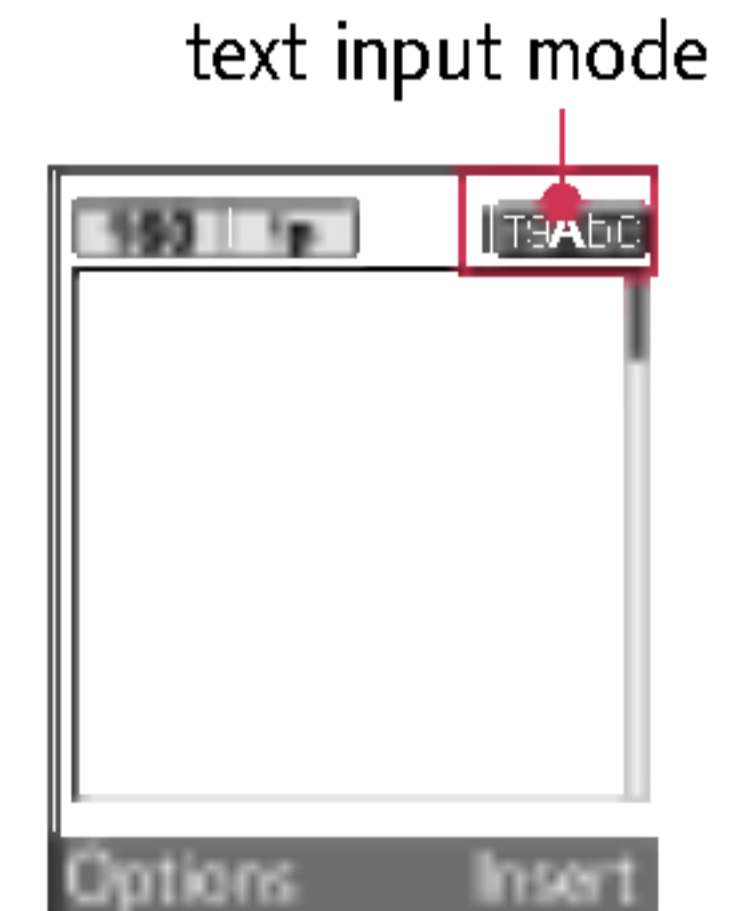

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the top right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the top right corner of the LCD screen.



Using the T9 mode





The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.

You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary. You can turn the T9 mode on or off, and change the T9 language by holding down the () key.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.




- ▶ The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
- ▶ If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.

Example: Press     to type **Good**.


Press     [down navigation key] to type **Home**.

- ▶ If the desired word is missing from the word choice list, add it using the ABC mode.

- ▶ You can select the language of the T9 mode. Press the left soft key [Option], then select **T9 languages**. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.

2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the  key. To delete letters, press . Press and hold down  to erase entire words.

Note




- ▶ To exit from the text input mode without saving your input, press . The phone goes back to standby mode.

Using the ABC mode

Use the  to  keys to enter your text.











1. Press the key labelled with the required letter:
 - ▶ Once for the first letter.
 - ▶ Twice for the second letter.
 - ▶ And so on.

General Functions

2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.


Note

- ▶ Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper Case	Lower Case
	., / ? ! - : ' " 1	., / ? ! - : ' " 1
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i 4
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	Space 0	Space 0

Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode. You can quickly switch from letters to numbers by pressing and holding down the () key.

Contacts

You can store phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can store up to 1000 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Contacts** menu.

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.


Making a second call

You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the phonebook during a call, press the right soft key then select **Add new**.


Switching between two calls

To switch between two calls, press the left soft key then select **Swap**.


Answering an incoming call


To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call waiting** [Menu 7-3-4].

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting the left soft key, then **Hold & Answer**. You can end the current call and answer the waiting call by selecting the left soft key and then **End & Answer**.

Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key [Menu] key and selecting the **Conference/Reject** or by pressing the .

Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.


Switching DTMF tones on during a call

To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.

Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting **Swap**.

Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference/Join all**.

Putting a conference call on hold

Press the left soft key, then select the **Conference/Hold all**.

Activate the conference call on hold

Press the left soft key, then select the **Conference/Join all**.

Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference/Join all**.


Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference/Private** to put all the other callers on hold.

Ending a conference call

The currently displayed caller from a conference call can be disconnected by pressing the  key. To end a conference call, press the left soft key, then select the **Conference/End multiparty**.

After pressing the left soft key, selecting **Conference/End all** will end all the active and on-hold calls.

Menu Tree

1. Profiles
1.1 Vibrate only
1.2 Silent
1.3 General
1.4 Loud
1.5 Headset
2. Call register
2.1 Missed calls
2.2 Received calls
2.3 Dialed calls
2.4 Delete recent calls
2.5 Call charges
2.5.1 Call duration
2.5.2 Call costs
2.5.3 Settings
2.6 GPRS information
2.6.1 Call duration
2.6.2 Data volumes

3. Tools
3.1 Alarm clock
3.2 Bluetooth
3.2.1 Paired devices
3.2.2 Handsfree devices
3.2.3 Settings
3.3 Calculator
3.4 Unit converter
3.5 World time
3.6 Modem

4. Organiser
4.1 Contacts
4.1.1 Search
4.1.2 Add new
4.1.3 Caller groups
4.1.4 Speed dial
4.1.5 Settings
4.1.6 Copy all
4.1.7 Delete all
4.1.8 Information
4.2 Calendar
4.2.1 Add new
4.2.2 View daily schedules
4.2.3 Delete past
4.2.4 Delete all
4.2.5 Go to date
4.2.6 Set alarm tone
4.3 Memo

5. Messages

5.1 New message

- 5.1.1 Write text message
- 5.1.2 Write multimedia message

5.2 Inbox

5.3 Outbox

5.4 Drafts

5.5 Listen to voice mail

5.6 Info message

- 5.6.1 Read
- 5.6.2 Topics

5.7 Templates

- 5.7.1 Text templates
- 5.7.2 Multimedia templates
- 5.7.3 My business card

5.8 Settings

- 5.8.1 Text message
- 5.8.2 Multimedia message
- 5.8.3 Voice mailbox number
- 5.8.4 Info message
- 5.8.5 Push messages

6. Multimedia

6.1 Camera

6.2 Video camera

6.3 My photos

6.4 My video

6.5 MP3

- 6.5.1 MP3 player
- 6.5.2 Playlist
- 6.5.3 Settings

6.6 Voice recorder

- 6.6.1 Record
- 6.6.2 View list

6.7 Settings

- 6.7.1 Camera
- 6.7.2 Video camera

7. Settings

7.1 Date & Time

- 7.1.1 Date
- 7.1.2 Time

7.2 Phone settings

- 7.2.1 Display settings
- 7.2.2 Theme settings
- 7.2.3 Language

7.3 Call settings

- 7.3.1 Call divert
- 7.3.2 Answer mode
- 7.3.3 Send my number
- 7.3.4 Call waiting
- 7.3.5 Minute minder
- 7.3.6 Auto redial



Menu Tree

7.4 Security settings <ul style="list-style-type: none">7.4.1 PIN code request7.4.2 Handset lock7.4.3 Auto key lock timeout7.4.4 Call barring7.4.5 Fixed dial number7.4.6 Change codes
7.5 Network settings <ul style="list-style-type: none">7.5.1 Network selection7.5.2 Band selection
7.6 GPRS setting
7.7 Reset settings
7.8 Memory status <ul style="list-style-type: none">7.8.1 Internal memory7.8.2 Multimedia memory


8. Service
8.1 Internet <ul style="list-style-type: none">8.1.1 Home8.1.2 Bookmarks8.1.3 Go to URL8.1.4 Settings
8.2 SIM service

9. Downloads
9.1 Games & Apps <ul style="list-style-type: none">9.1.1 Games & Apps9.1.2 Profiles
9.2 Images
9.3 Sounds
9.4 File storage

Selecting Functions and Options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in the menus and sub-menus, accessed via the two soft keys marked [] and []. Each menu and sub-menu lets you view and alter the settings of a particular function.

The role of the soft keys vary according to the current context or the label on the bottom line of the screen just above each key indicates its current role.

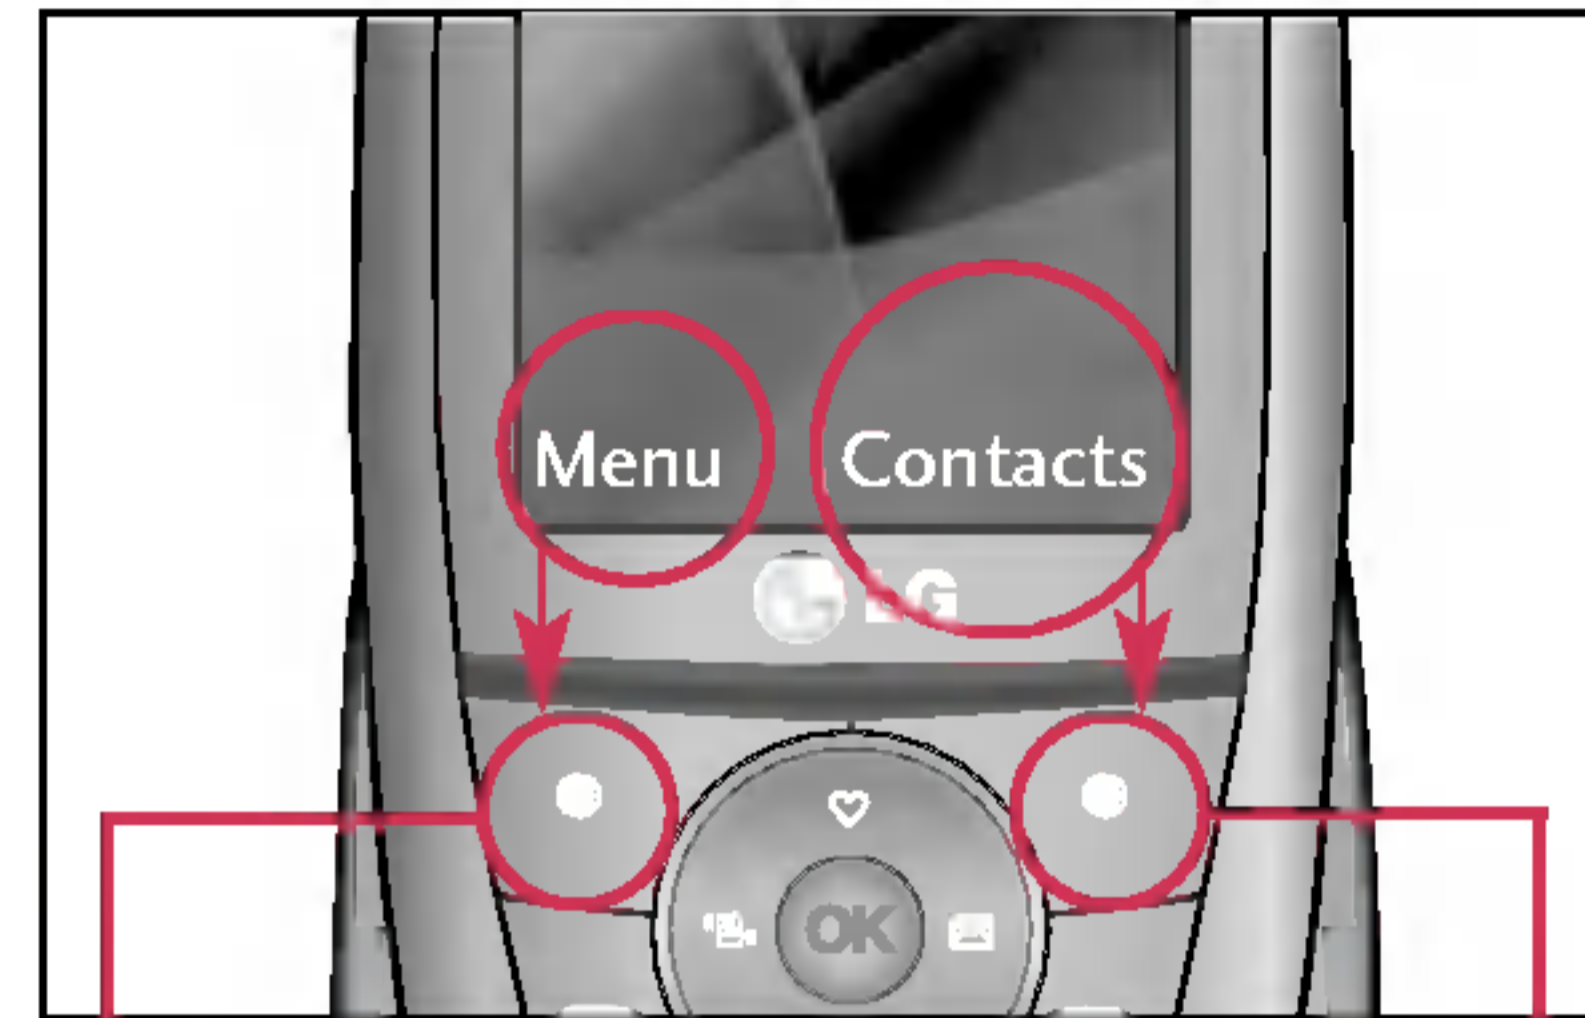

Press the left soft key to access the available menu.


Press the right soft key to access the available Contacts.

Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups. There are five preset profiles: **Vibrate only**, **Silent**, **General**, **Loud** and **Headset**. Each profile can be personalised. Press the left soft key **[Menu]** and select **Profiles** using up/down navigation keys.


Activate

Menu 1.x.1

1. A list of profiles is displayed.
2. In the **Profiles** list, scroll to the profile you want to activate and press the left soft key  **[OK]** or OK key.
3. Then, select **Activate**.

Personalise

Menu 1.x.2

Scroll to the desired profile in the Profile list. After pressing the left soft key  or the OK key, select **Personalise**. The profile setting option opens. Set the options as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tone:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ringing tone.

Note

- ▶ To protect the sense of hearing while Slide open, maximum volume level is 3.

- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tone:** Select the alert tone for messages.
- ▶ **Keypad tone:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Slide tone:** Allows to set the slide tone for adjusting environment.
- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.

- ▶ **Auto answer:** This function will be activated only when your phone is connected to the headset.
 - **Off:** The phone will not answer automatically.
 - **After 5 secs:** After 5 seconds, the phone will answer automatically.
 - **After 10 secs:** After 10 seconds, the phone will answer automatically.



Rename

Menu 1.x.3

You can rename a profile and give it any name you want.

Note

- ▶ **Vibrate only, Silent** and **Headset** profiles cannot be renamed.

1. To change the name of a profile, scroll to the profile in the profile list and after pressing the left soft key  or the OK key, select **Rename**.
2. Key in the desired name and press the OK key or the left soft key  [OK].

Call register

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

Missed calls

Menu 2.1

This option lets you view the last 10 unanswered calls. You can also:

- ▶ View the number if available and call it, or save it in the phonebook
- ▶ Enter a new name for the number and save both in the phonebook
- ▶ Send a message to this number
- ▶ Delete the call from the list

Received calls

Menu 2.2

This option lets you view the last 10 incoming calls. You can also:

- ▶ View the number if available and call it, or save it in the phonebook
- ▶ Enter a new name for the number and save both in the phonebook
- ▶ Send a message to this number
- ▶ Delete the call from the list

Dialled calls

Menu 2.3

This option lets you view the last 20 outgoing calls (called or attempted).

You can also:

- ▶ View the number if available and call it or save it in the phonebook
- ▶ Enter new name for the number and save both in the phonebook
- ▶ Send a message to this number
- ▶ Delete the call from the list

Delete recent calls

Menu 2.4


Allows you to delete **Missed calls** and **Received calls** lists. You can delete **Dialled calls** and **All calls** lists at one time.

Call charges

Menu 2.5

Call duration (Menu 2.5.1)

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call times. The following timers are available:

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and incoming calls since the timer was last reset.
- ▶ **Received calls:** Length of the incoming calls.
- ▶ **Dialled calls:** Length of the outgoing calls.
- ▶ **Reset all:** Allows you to reset the timers of all calls by pressing the left soft key  [Yes].

Call costs (Menu 2.5.2)

Allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need to know your PIN2 code.

Settings (Menu 2.5.3)

(SIM Dependent)

- ▶ **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.
- ▶ **Set credit:** This network allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining unit is shown. If you select **Change**, you can change your change limit.
- ▶ **Auto display:** This network service allows you to see automatically the cost of your last calls. If set to **On**, you can see the last cost when the call is released.

GPRS information

Menu 2.6

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.

Call duration (Menu 2.6.1)

You can check the duration of **Last call** and **All calls**. You can also reset the call timers.



Data volumes (Menu 2.6.2)

You can check the **Sent(Last/All)**, **Received(Last/All)** or **All** data volumes and **Reset all**.

Alarm clock

Menu 3.1

You can set up to 5 alarm clocks to go off at a specified time.

1. Select **On** and enter the alarm time you want.
2. Select the repeat period: **Once, Mon~Fri, Mon~Sat, Everyday.**
3. Select the alarm tone you want and press  [OK].
4. Edit the alarm name and press  [OK].

Bluetooth

Menu 3.2

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires. This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

When you receive data from another Bluetooth device, the phone requests for a confirmation. After confirming the transfer, the file will be copied in your phone.

Depending on the file type, it will be stored in the following folders:

- ▶ **MP3:** MP3 folder (Menu 6.5.2)
- ▶ **Video (.3GP):** video folder (Menu 6.4)
- ▶ **Phonebook contacts (.VCF):** Phonebook (Menu 4.1.1)
- ▶ **Other files:** File storage folder (Menu 9.4)

Note

- ▶ Due to a compatibility problem, some devices may not support this function.
- ▶ Supported Bluetooth software (Bluetooth stacks) for DUN :
 - WIDCOMM Bluetooth for Windows 1.4 and 3.0

Paired devices (Menu 3.2.1)

You can view all devices which are compatible with your Bluetooth phone.

Handsfree devices (Menu 3.2.2)




You can view the list of handsfree devices which are compatible with your Bluetooth phone.

Settings (Menu 3.2.3)




You can register a new device which is compatible with Bluetooth. If you already have added the device, you can connect to it after entering a password (usually 0000).

Calculator Menu 3.3

This contains the standard functions such as +, −, ×, ÷ : **Addition, Subtraction, Multiplication, and Division.**




1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press the left soft key  [Result] to view the result.
5. Press the left soft key  [Reset] or enter numbers to repeat the procedure above.
6. To end **Calculator**, press the right soft key  [Back].

Note

- ▶ Use  key to erase any numbers or signs. If you press  key, you can input a minus number. In addition, press  key, you can input a decimal number.



Unit converter Menu 3.4

This converts any measurement into a unit you want.

1. You can select one of unit types by pressing  [Unit] key.
2. Select the unit you want to convert by pressing  and .
3. You can check the converted value for the unit you want.

World time Menu 3.5

You can view clocks of the world's major cities.

1. Select the city belonged to the time zone by pressing  key.
2. You can set the current time to the city time you select by pressing the left soft key  [Set].

Modem

Menu 3.6


You can access the network services through Modem. If you want to use PCsync, Contents banks, Internet Cube, you should access the menu and activate the modem and then plug in the USB cable.

Organiser

Contacts


Menu 4.1

Note

- ▶ In standby mode, press right soft key  [Contacts] to access directly.


Search (Menu 4.1.1)

(Calling from phonebook)

1. Select **Search** by press the left soft key  [Select] or [OK].

Note







- ▶ Instant searching is available by inputting the initial letter of the name you want to search.

2. If you want to edit, delete or copy an entry, select the left soft key  [Options]. The following menu will be displayed.

- ▶ **Edit:** You can edit the name, number, group, character and picture by using the navigation key.
- ▶ **Write text/multimedia message:** After you have found the number you want, you can send a text/multimedia message to the selected number.
- ▶ **Send via Bluetooth:** You can send the data of phone book to devices which is compatible with Bluetooth through Bluetooth.
- ▶ **Copy:** You can copy an entry from SIM to phone or from phone to SIM.
- ▶ **Main number:** You can select the one out of mobile, home, office that you often use. After you set this, the main number will be displayed first, when you search.
- ▶ **Delete:** You can delete an entry.

Add new (Menu 4.1.2)

You can add phonebook entry by using this function. Phone memory capacity is 1000 entries. SIM card memory capacity depends on the service provider. The number of characters you can save in the SIM card is a SIM dependent feature.


1. Select **Add new** by pressing the left soft key  [Select] or [OK].
2. Select the memory you want to save to: **SIM** or **Phone**. If you set to Phone, you need to select which number you want as Main number.
 - a. Press  [OK] to input a name.
 - b. Press  [Save], then you can input a number.
 - c. Press  [Save].
 - d. You can set a group for the entry by pressing .
 - e. You can set a character and a picture for the entry by pressing .



Caller groups (Menu 4.1.3)

You can add up to 20 members per group, with up to a maximum of 7 groups in total.



- ▶ **Member list:** Shows the group members you have selected.
- ▶ **Group ring tone:** Allows you to specify ring tone for the group members' call.
- ▶ **Group icon:** Allows you to select the icon dependent on Group.
- ▶ **Add member:** You can add group members. Each group should not exceed 20 members.
- ▶ **Remove member:** You can remove the member from the Group member list. But the name and the number will remain in the phonebook.
- ▶ **Rename:** You can change a group name.

Speed dial (Menu 4.1.4)

Assign contacts to any of the keys . You can then call that contact by pressing the corresponding number key.

1. Open the phonebook first by pressing the Right soft key  [Contacts] in standby mode.
2. Scroll to **Speed dial**, then press the left soft key  [OK].
3. If you want to add Speed dial, select **(empty)**. Then, you can search the name in phonebook.
4. After assigning the number as speed dial, you can change and delete the entry. You can also make a call or send a message to this number.

Settings (Menu 4.1.5)

1. Press the right soft key  [Contacts] in standby mode.
2. Scroll to Settings, then press the left soft key  [OK].

▶ Set memory

Scroll to highlight **Set memory**, and then press the left soft key  [OK].

- If you select **Variable**, when adding entry, the phone will ask whether you wish to store on the sim or phone.
- If you select **SIM** or **Phone**, the phone will store an entry to SIM or phone.

▶ View options



Scroll to highlight **View options**, and then press the left soft key  [OK].

- **Name only:** Set the phonebook list by displaying the name only.
- **With pictures:** Set the phonebook list with the information of character and picture.

- **Name & number:** Set the phonebook list by displaying the name and number.






Copy all (Menu 4.1.6)

You can copy/move entries from SIM card memory to Phone memory and vice versa.

1. Open the Phonebook first by pressing the right soft key  [Contacts] in standby mode.
2. Scroll to **Copy all**, and then press the left soft key  [OK] to enter this menu.
 - ▶ **SIM to Phone:** You can copy/move the entries from SIM Card to Phone memory.
 - ▶ **Phone to SIM:** You can copy/move the entries from Phone memory to SIM Card.
3. You can see the following submenus.
 - ▶ **Keep original:** When copying, the Original Dial Number is kept.
 - ▶ **Delete original:** When copying, the Original Dial Number is erased.

Delete all (Menu 4.1.7)



You can delete all entries in the SIM and Phone. This function requires the Security code.

1. Press the right soft key  [Contacts] in standby mode and select Delete all, press  [OK].
2. Highlight the memory you wish to erase, and then press the left soft key () [OK].
3. Enter the security code and press the left soft key  [OK] or the right soft key  [Back].




Information (Menu 4.1.8)

▶ Service dial number

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).




1. Open the phonebook first by pressing the right soft key  [Contacts] in standby mode and select **Information**.
2. Scroll to **Service dial number**, then press the left soft key  [OK] to enter.

3. The names of the available services will be shown.

4. Use  and  to select a service. Press  [Send].

▶ Memory status

This feature allows you to see how many entries are in use, or free in your phonebook.

1. Open the phonebook first by pressing the right soft key  [Contacts] in standby mode. Select Information by pressing the left soft key  [OK].
2. Scroll to **Memory status**, then press the left soft key  [OK].

▶ Own number (SIM dependent)





You can check and save your own number in the SIM card.


Calendar

Menu 4.2


When you enter this menu a Calendar will be displayed. The month and year are shown at the top of the screen. Whenever you change the date under the Settings menu, the calendar will update automatically. The current date will be highlighted in green and any schedule or memos will be indicated with a red triangle at the top left hand corner of the corresponding square. An audible alarm can be set for memo's and reminders.

To change the day, month, and year.

Key	Description
	Yearly
	Monthly
	Weekly
	Daily

In the scheduler mode, press left soft key  [Options] as follows;

Add new (Menu 4.2.1)

Allows you to add a new schedule for the chosen day. Input the subject and then press the left soft key  [OK].

View daily schedules (Menu 4.2.2)

You can refer to a detailed schedule, that is the whole contents of the schedule configured by you.

Delete past (Menu 4.2.3)

You can delete the past schedule that is no longer required.

Delete all (Menu 4.2.4)

You can delete all notes.

Go to date (Menu 4.2.5)




You can go to the chosen date directly.

Set alarm tone (Menu 4.2.6)


You can set the alarm tone.

Memo

Menu 4.3

1. Select the Memo by pressing the left soft key  [OK].
2. If the entry is empty, add new by pressing the left soft key  [Add].
3. Input the memo and then press the left soft key  [Ok].

Note

- ▶ If you want to change the text input mode, press the  in order.

Messages




Press the Menu key () and select Messages using navigation keys.

New message

Menu 5.1

Write text message (Menu 5.1.1)

Your phone receives voice mail notification messages and Short Message Service(SMS) messages. Voice mail and SMS are network services. Please contact your network operator for more information.

When the  icon appears, you have received a new voice mail. When the icon  appears, you have received a new text message. If the message memory is full, a message is displayed, the  icon flashes and you cannot receive any new messages. Use the Delete option in the Inbox menu to delete obsolete messages.

Once there is space in the message memory, any undelivered SMS messages will be received (provided sufficient space is available).

1. Key in your message. For details on how to enter text, refer to page 24 through 26 (Entering Text).
2. After you complete the message, to select the required option, press the left soft key [Options].

The following options are available.

- ▶ **Send:** Enter the number or select the number from the phonebook or the recent numbers. You can send a message up to 6 phone numbers at a time. Press the left soft key [Options]. The following options will be displayed.
 - ① Contact list
 - ② Recent list
 - ③ Send
- ▶ **Save to drafts:** Allows you to save the message so that it can be sent later.
- ▶ **Font:** Sets the font size and style.
- ▶ **Colour:** You can also set colour of the text (foreground) and the background.
- ▶ **Alignment:** You can set the position of the message - Right, Centre or Left.

- ▶ **Add T9 dictionary:** You can add your own words. This menu will only be shown when the edit mode has been set to T9ABC/T9Abc/T9abc.
 - ▶ **T9 languages:** Select the desired language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
 - ▶ **Exit:** If you select this whilst writing a message, you will be taken back to the message menu. Also the written message will not have been saved.
3. You can also send attachments with the message by pressing the right soft key [Insert], while you're entering a message.
- ▶ **Images:** You can send and receive text messages that contain pictures, known as 'picture messages'. Several preset pictures are available in the phone and they can be replaced with new ones received from other sources.
 - ▶ **Sounds:** If available, you can attach a sound available for a short message.
 - ▶ **Text templates:** You can use text templates already set in the phone.

- ▶ **Contacts:** You can add phone numbers in the message.
- ▶ **Symbol:** You can attach special characters.
- ▶ **My business card:** You can attach your name card.

Write multimedia message (Menu 5.1.2)

A multimedia message can contain text, images, and/or sound clips. This feature can be used only if it is supported by your network operator or service provider. Only devices that offer compatible multimedia message or e-mail features can receive and send multimedia messages.

1. Key in the multimedia message. Using the right soft key, you can input symbols and numbers, or use T9 input mode. After the multimedia message input, press the left soft key [OK].
2. Add an image and/or sound. You can move to the next section using the up/down navigation.
3. You can add a slide by option menu using the left soft key. If press the left key and select "Add slide" from the option menu, you can add the new slide.

Messages

4. Press the left soft key [Options]. The following options are available.

- ▶ **Send:** Supports multiple numbers and email addresses.
- ▶ **Preview:** Displays the multimedia message you wish to send.
- ▶ **Save:** Saves the multimedia message in drafts or as a template.
- ▶ **Add slide:** Adds a slide before or after the current slide.
- ▶ **Move to slide:** Moves to the next or previous slide.
- ▶ **Delete slide:** Deletes the selected slide.
- ▶ **Set slide format**
 - **Set timer:** You can set the timer for slide, text, picture and sound.
 - **Swap text and picture:** You can switch the position of picture and text of the message.
- ▶ **Remove media:** You can remove a picture or sound in the slide. This option can be shown only when any media file has been added.









- ▶ **Add T9 dictionary:** You can add your own word. This menu will only be shown when the edit mode has been set to T9ABC/T9Abc/T9abc.
 - ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
 - ▶ **Exit:** If you select this whilst writing a message, you will be taken back to the message menu. Also the written message will not have been saved.
5. Press the right soft key [Insert]. You can insert a symbol, photo, or create a new photo, sound, new sound, template, My Business card and Contacts.

Inbox

Menu 5.2

You will be alerted when you have received messages. They will be stored in the Inbox.

In the Inbox, you can identify each message by icons. For detail, see the icon directive.

Icon	Icon directive
	Multimedia message
	Short message
	SIM message
	Read multimedia message
	Read text message
	Push message
	Read push message
	Notified multimedia message

If the phone shows 'No space for SIM message', you only have to delete the SIM messages from the Inbox. If the phone displays 'No space for message', you will

then need to delete messages, media or applications to free up space.

SIM message

SIM message means that the message is exceptionally stored in the SIM card. You can move this message to the phone.

When you are notified that you have received a multimedia message, you have to wait for the message to be downloaded before you can view it.

To read a message, select one of the messages by pressing the left soft key .

- ▶ **View:** You can view the received messages.
- ▶ **Delete:** You can delete the current message.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** You can call back to the sender.

Messages

▶ **Information:** You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

▶ **Delete all:** You can delete all messages.

Specific MMS options

▶ **Repeat:** Allows you to repeat reproduction of the selected multimedia message.

▶ **Receive:** (for multimedia message notification only). Multimedia messages, unlike text messages, must be downloaded from the server automatically or manually. The network initially sends multimedia message notification: If the Auto retrieve option is off or an error has occurred, receipt must be confirmed by selecting [Receive]. If the Auto retrieve option is on, the message is automatically downloaded after receipt of notification.

Specific download message options







▶ **Information:** Shows the content of the downloaded messages.

▶ **Load:** Launches the WAP connection to the URL contained in the download message. The phone must be configured for WAP services to download messages.

Outbox

Menu 5.3

You can see the sent and unsent messages here. For sent messages, you can see the delivery status. The browsing is same as that for the inbox message.

Icon	Icon directive
	MMS Sent
	MMS Unsent
	MMS delivery confirmed
	SMS sent
	SMS unsent
	SMS delivery confirmed

When you already sent the message:

▶ **View:** You can view the sent messages.

- ▶ **Forward:** You can forward the current message to other recipients.
- ▶ **Delete:** You can delete the current message.
- ▶ **Information:** You can view information about outbox messages; Recipient's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- ▶ **Delete all:** You can delete all messages in the outbox.

When you didn't send the message:

- ▶ **View:** You can view messages you didn't.
- ▶ **Delete:** You can delete the current message.
- ▶ **Send:** You can send the message.
- ▶ **Information:** You can view information about outbox
- ▶ **Send all:** You can send all the messages that have not been sent.
- ▶ **Delete all:** You can delete all messages that have not been sent.

Drafts

Menu 5.4

Using this menu, you can preset up to five multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.


- ▶ **View:** You can see the multimedia messages.
- ▶ **Edit:** Allows you to modify the chosen message.
- ▶ **Delete:** Deletes the message you choose.
- ▶ **Information:** To view the information of the message.
- ▶ **Delete all:** Deletes all of the messages in the folder.

Listen to voice mail

Menu 5.5

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your network operator.

Messages

When new voice message is received, the  symbol will be displayed on the screen. Please check with your network provider for details of their service in order to configure the handset correctly.

Info message Menu 5.6 (Dependant to network and subscription)

Info service messages are text messages sent by the network to mobile phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly. In standby mode, the following options are available when viewing info service messages.

Read (Menu 5.6.1)

When you have received broadcast messages and select **Read** to view the message, it will be displayed on the screen.

Topics (Menu 5.6.2)

To create new topics, press the left soft key [Option] then select **Add new**. If you already have topics, you can deactivate, edit, or delete them by using the left soft key [Options].

Templates Menu 5.7

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Two types of templates are available: Text and Multimedia.

Text templates (Menu 5.7.1)

- Please call me back.
- I'm late. I will be there at
- Where are you now?
- I am on the way.
- Top urgent. Please contact.
- I love you.

The following options are available.

- ▶ **View:** Views the selected message.
- ▶ **Delete:** Deletes the template.
- ▶ **Add new:** Uses this to create new template.
- ▶ **Send via:** To send via Text message or Multimedia message.
- ▶ **Edit:** Use this to edit the selected template.
- ▶ **Delete all:** Deletes all templates.

Multimedia templates (Menu 5.7.2)

You can use the following options.

- ▶ **Preview:** Displays the draft multimedia message.
- ▶ **Save:** Saves multimedia messages as templates.
- ▶ **Edit subject:** You can edit the subject.
- ▶ **Add Slide:** Adds a slide before or after the current slide.
- ▶ **Move to slide:** Moves to the next or previous slide.
- ▶ **Delete slide:** Deletes the highlighted slide.

- ▶ **Set slide format:** Sets the timer for slide, text, or to align the message contents right, left, top and bottom.
- ▶ **Remove media:** You can remove a picture or sound in the slide. This option can be shown only when any media file has been added.
- ▶ **Add T9 dictionary:** You can add our own word. This menu can be shown only when the edit mode is Predictive.
- ▶ **T9 languages:** Selects T9 input mode.
- ▶ **Exit:** Exits the menu.

My business card (Menu 5.7.3)

This option helps you to make your own name card. Key in the name, mobile phone number, office number, Fax number, and E-mail address.

Settings

Menu 5.8

Text message (Menu 5.8.1)

▶ Message types:

Text, Voice, Fax, Natl. paging, X.400, Email, ERMES

Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to **Yes**, you can check whether your message is sent successfully.
- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill. This feature is not supported by some network operators.
- ▶ **SMS centre:** If you want to send the text message, you can receive the address of SMS centre through this menu.

Multimedia message (Menu 5.8.2)

- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity period:** This network service allows you to set how long your multimedia messages will be stored at the message centre.
- ▶ **Delivery report:** If it is set to **Yes** in this menu, you can check whether your message is sent successfully.
- ▶ **Auto retrieve:** If you select **on**, you receive multimedia messages automatically. If you select **Off**, you receive only notification message in the inbox and then you can check this notification. If you select **Home network only**, you receive multimedia messages depends on Homenetwork.
- ▶ **Network settings:** If you select multimedia message server, you can set URL for multimedia message server.
- ▶ **Permitted message types**
 - Personal:** Personal message.
 - Advertisements:** Commercial message.
 - Information:** Necessary information.

Voice mailbox number (Menu 5.8.3)

You can receive the voicemail if your network service provider supports this feature. When a new voicemail has arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

- ▶ **Home:** You can listen to voice mails by selecting Home.
- ▶ **Roaming:** Even when you are in abroad, you can listen to voice mails if a roaming service is supported.

Info message (Menu 5.8.4)

▶ Receive

Yes: If you select this menu, your phone will receive Info service messages.

No: If you select this menu, your phone will not receive Info service messages any more.

▶ Alert

Yes: Your phone will beep when you have received Info service message numbers.

No: Your phone will not beep even though you have received info service messages.

▶ Languages

You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.

Push messages (Menu 5.8.5)

You can set the option whether you will receive the message or not.

▶ Receive

Receive on: Receive all push messages.

Receive off: Does not receive all push messages.

▶ Auto download

On: The push message is downloaded automatically.

Off: To download the push message, use user interaction.

Multimedia

Camera

Menu 6.1

This application enables you to take a still picture. You can take a picture in your desired size, and use it for the contacts photo, home screen and other more general purposes. Once taken, a still image can be sent via Multimedia msg or Email.

Press the left soft key [Options] to display the following popup menu items.

- ▶ **Brightness:** Determines the brightness.
- ▶ **Size:** Determines the size of an image.
- ▶ **Timer:** Determines the delay time.
- ▶ **Quality:** Determines the quality of an image.
- ▶ **White Balance:** Allows you to change the settings according to the environment.
- ▶ **Album:** Shows the still images taken.
- ▶ **Exit:** To exit the Camera.
- ▶ **Mode:** Determines whether to take a single or multishot photo.
- ▶ **Effect:** Determines the special effect to the picture.
- ▶ **Flash:** Determines the flash operation.

- ▶ **Zoom:** Determines the zoom rate.

Note

- ▶ Frame shots are only available with the 128x160 pixel resolution.
- ▶ Multi shots are available only with the 320 X 240 pixel resolution.

Video camera

Menu 6.2

This application enables you to record a video clip. You can play and watch a saved video file while using this function. Once recorded, a video clip can be sent via Multimedia message or Email.

Press the left soft key [Options] to display the following popup menu items.

- ▶ **Brightness:** Determines the brightness.
- ▶ **Size:** Determines the size of an image.
- ▶ **Timer:** Determines the delay time.
- ▶ **Quality:** Determines the quality of a video clip.
- ▶ **White Balance:** Allows you to change the settings according to the environment.
- ▶ **Record Time:** Determines the recording time.

- ▶ **Album:** Shows the video clips recorded.
- ▶ **Exit:** To exit the Video camera.
- ▶ **Effect:** Determines the special effect to the video clip.
- ▶ **Flash:** Determines the flash operation.
- ▶ **Zoom:** Determines the zoom rate.

My photos

Menu 6.3

You can view and send a picture. In addition, you can set the picture as a wallpaper.

Options

- ▶ **Multi view:** You can view the maximum of 9 thumbnails in a screen.
- ▶ **Send via Bluetooth:** You can send a picture via Bluetooth.
- ▶ **Write multimedia messages:** You can send a picture via MMS.
- ▶ **Set as wallpaper:** You can set a picture as a wallpaper.
- ▶ **Slide show:** This menu allows you to view as a slide show automatically.

- ▶ **Delete:** You can delete a picture.
- ▶ **Edit title:** You can edit the title of picture.
- ▶ **Information:** You can view the information about Title, Size, Date and Time you've taken.

My video

Menu 6.4

You can play and send a video.

Options

- ▶ **Play:** Play the video
- ▶ **Send via Bluetooth:** You can send the video by bluetooth.
- ▶ **Rename:** You can edit the title of video.
- ▶ **Delete:** You can delete the video.
- ▶ **Delete All:** You can delete all the videos.
- ▶ **Information:** You can view the information of the video.

MP3

Menu 6.5

The S5200 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on your phone memory using a compatible headset or via the internal loudspeaker.

Note

- ▶ Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The music player supports:

- ▶ MPEG-1 Layer III, MPEG-2 Layer III, MPEG-2.5 Layer III Sampling frequency up from 8KHz to 48KHz. Bit rate up to 320Kbps, stereo.
- ▶ **AAC:** ADIF, ADTS formats (Sampling frequency from 8KHz to 48KHz)
- ▶ **AAC+:** V1 : (Bit rate 16~128Kbps)
V2 : (Bit rate 16~48Kbps)
(Sampling frequency from 8KHz to 48KHz)

- ▶ **MP4 , M4A:** Sampling frequency up from 8KHz to 48KHz, Bit rate up to 320Kbps, stereo.
- ▶ **WMA:** Sampling frequency up from 8KHz to 48KHz, Bit rate up to 320Kbps, stereo.

Note


- ▶ S5200 doesn't support the variable rate of MP3 and AAC file. Therefore, you can't change the file from VBR MP3 format to AAC.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mass Storage. when you connect the phone to a PC using the USB cable(supplied in the same package), you just try to connect to PC via USB cable. If you use on win98 SE, you have to install Mass storage drive for windows 98 on CD-ROM.

Note

- ▶ You should copy MP3 to my media\Music folder. If you copy another folder, you cannot see MP3 files.
- ▶ The PC should run Windows 98 SE, Windows ME, Windows 2000, Windows XP operating system.

MP3 player (Menu 6.5.1)

1. Press MP3 menu, and then select MP3 player.
2. Press the left soft key  [Options] to access the following menus.
 - ▶ **View play list:** You can view the play list on listening to the music.
 - ▶ **Area repeat:** The special area part of the current music is repeated when you select ON of the menu.
 - ▶ **Set as ring tone:** This menu allows to set the MP3 file as a ring tone. You can also set it as a ring tone in Profile.
 - ▶ **Setting**
 - **Equalizer**
This menu helps you to adjust a variety of environment on listening to the music. This phone supports four preset menus. When you enter this menu, you can view current value of equalizer.
 - **Playmode**
This menu allows to set the play mode.

- **Set shuffle**
You can listen to MP3 music all randomly.
- **Visual effect**
You can select the visual effect menus: Wave, Guitarist, Aqua. This menu allows to change the background of main LCD and sub LCD on playing MP3 file.

Playlist (Menu 6.5.2)

This menu allows to view the whole play list. You can move the track by pressing the navigation key. In addition, if you select option menu, you can delete the file or view its information .

Note

- ▶ The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

Settings (Menu 6.5.3)



This menu allows to set the following items; Equalizer, Playmode, Set shuffle and Visual effect.

Voice recorder Menu 6.6

The voice memo feature you to record up to 10 voice messages and each memo is up to 20 Seconds.

Record (Menu 6.6.1)

You can record a voice memo in the Voice recorder menu.

1. Once recording has started, the message Recording and the remaining time is displayed.
2. If you want to finish recording, press the left soft key  [Save].
3. Key in Voice memo title, press the left soft key  [OK].

View list (Menu 6.6.2)

The phone shows voice memo list. You can Playback, Send via multimedia and Delete the recorded voice memo.

Settings Menu 6.7



Camera (Menu 6.7.1)

- ▶ **Auto save:** If you set On, the images will be saved automatically without displaying menu bar to save.
- ▶ **Delete all photos:** This menu allows to delete all photos after asking your confirmation.

Video camera (Menu 6.7.2)

- ▶ **Delete all videos:** This menu allows you to delete all the videos.

You can set the following menus for your convenience and preferences.

1. Press  [Menu] in standby mode.
2. Press  for direct access to enter Settings.

Date & Time

Menu 7.1

You can set functions relating to the date and time.

Date (Menu 7.1.1)

- ▶ **Set Date:** You can enter the current date.
- ▶ **Date format:** You can set the Date format such as DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD. (D: Day / M: Month / Y: Year)

Time (Menu 7.1.2)

- ▶ **Set Time:** You can enter the current time.
- ▶ **Time format:** Your can set the time format between 24-hour and 12-hour.

Phone settings

Menu 7.2

You can set functions relating to the phone.

Display settings (Menu 7.2.1)

- ▶ **Wallpaper:** You can select the background pictures in standby mode.

Default

You can select a picture or an animation of wallpaper by pressing  or .

My folder

You can select a picture or an animation as wallpaper.

- ▶ **Standby text:** If you select On, you can edit the text which is displayed in standby mode.
- ▶ **Backlight time:** You can set the light-up duration of the display.
- ▶ **Network name:** If you set ON, Network name (the name of service provider) will be appeared in Internal LCD.

Theme settings (Menu 7.2.2)


Allows you to choose from one of the preset themes.

Language (Menu 7.2.3)

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Call settings

Menu 7.3

You can set the menu relevant to a call by pressing  [OK] in the Setting menu.

Call divert (Menu 7.3.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

▶ All voice calls

Diverts voice calls unconditionally.

▶ If busy

Diverts voice calls when the phone is in use.

▶ If no reply

Diverts voice calls which you do not answer.

▶ If out of reach

Diverts voice calls when the phone is switched off or out of coverage.

▶ All data calls

Diverts to a number with a PC connection unconditionally.

▶ All fax calls

Diverts to a number with a fax connection unconditionally.

▶ Cancel all

Cancels all call divert service.

The submenus

Call divert menus have the submenus shown below.

• Activate

Activate the corresponding service.

To voice mail centre

Forwards to message centre. This function is not shown at All data calls and All fax calls menus.

To other number

Inputs the number for diverting.

To favourite number

You can check recent 5 diverted numbers.

- **Cancel**

Deactivate the corresponding service.

- **View status**


View the status of the corresponding service.

Answer mode (Menu 7.3.2)


- ▶ **Slide open**

If you select this menu, you can receive an incoming call by simply opening slide.

- ▶ **Any key**

If you select this menu, you can receive a call by pressing any key except  [End] key.

- ▶ **Send key only**

If you select this menu, you can receive a call by only pressing  [Send] key.

Send my number (Menu 7.3.3) (network and subscription dependent)

- ▶ **Set by network**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

- ▶ **On**

You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

- ▶ **Off**

Your phone number will not be shown.

Call waiting (Menu 7.3.4) (network dependent)

- ▶ **Activate**

If you select Activate, you can accept a waiting (receiving) call.

- ▶ **Cancel**

If you select Cancel, you cannot recognize the waiting (receiving) call.

▶ View status

Shows the status of Call waiting.

Minute minder (Menu 7.3.5)

If you select **On**, you can check the call duration by a deep sound given every minute during a call.

Auto redial (Menu 7.3.6)

▶ On

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

▶ Off

Your phone will not make any attempts to redial when the original call has not connected.

Security settings

Menu 7.4

PIN code request (Menu 7.4.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press  [OK].

2. Set **On/Off**.

3. If you want to change the setting, you need to enter PIN code when you switch on the phone.

4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in the PUK code.

5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Handset lock (Menu 7.4.2)

You can use security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to **On**. If you set phone lock to **Automatic**, your phone will request security code only when you change your SIM card.

Auto key lock timeout (Menu 7.4.3)

This menu allows to set the time of Auto key lock.

Call barring (Menu 7.4.4)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

▶ All outgoing

The barring service for all outgoing calls.

▶ International

The barring service for all outgoing international calls.

▶ International when roaming

The barring service for all international outgoing calls except home network.

▶ All incoming

The barring service for all incoming calls.

▶ Incoming when roaming

The barring service for all incoming calls when roaming.

▶ Cancel all

You can cancel all barring services.

▶ Change password

You can change the password for Call Barring Service.

The submenus:

- **Activate**

Allows to request the network to set call restriction on.

- **Cancel**

Set the selected call restriction off.

- **View status**

View the status whether the calls are barred or not.

Fixed dial number (Menu 7.5.4)

(SIM dependent)

You can restrict your outgoing calls to selected phone numbers.

The numbers are protected by your PIN2 code.

▶ **Enable**

You can restrict your outgoing calls to selected phone numbers.

▶ **Disable**

You can cancel fixed dialling function.


▶ **Number list**

You can view the number list saved as Fixed dial number.

Change codes (Menu 7.4.6)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person.

You can change the access codes: **PIN2 code**, **Security code**.

1. If you want to change the Security code/PIN/PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN/PIN2 code and verify them.

Network settings

Menu 7.5

You can select a network which will be registered either automatically or manually. Usually, the network selection is set to **Automatic**.

Network selection (Menu 7.5.1)

Automatic

If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected “Automatic”, the phone will be set to “Automatic” even though the power is off and on.

Manual

The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone will let you select another network if the phone fails to access the selected network.

Preferred

You can set a list of preferred networks that the phone will attempt to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

Band selection (Menu 7.5.2)

Use this to set the network band between two choices, GSM 900/1800 or GSM1900.

GPRS settings

Menu 7.6

You can set GPRS service depending on various situations.

Reset settings

Menu 7.7

You can initialize all default settings. You need the Security code to activate this function.

Memory status

Menu 7.8

Internal memory (Menu 7.8.1)

- ▶ This function shows the status of the user memory of the handset.


Multimedia memory (Menu 7.8.2)

- ▶ This function shows the status of the multimedia memory of the handset.

Service

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.




Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser at any time, press the () key. The phone will return to the previous menu.

Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Key	Description
	Scrolls each line of the content area
	Returns to the previous page
	Selects options and confirms actions

Using the WAP browser menu

There are various menu options available when surfing the Mobile Web.

Note

- ▶ The WAP browser menus may vary, depending on your browser version.

Internet

Menu 8.1

Home (Menu 8.1.1)


Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.




Bookmarks (Menu 8.1.2)

This menu allows you to store the URL of favourite web pages for easy access at a later time. Your phone has several pre-installed bookmarks.

These pre-installed bookmarks cannot be deleted.

To create a bookmark

1. Press the left soft key  [Options].
2. Select Add new and press the OK key.
3. After entering the desired URL and title, press the OK key.

* **Tip:** Use the “” key and  key to enter symbols. To enter “.”, press “”.

After selecting a desired bookmark, the following options are available.

- ▶ **Connect:** Connects to the selected bookmark.
- ▶ **Add new:** Select this to create a new bookmark.
- ▶ **Edit:** You can edit the URL and/or the title of the selected bookmark.
- ▶ **Delete:** Deletes the selected bookmark.
- ▶ **Delete all:** Deletes all the bookmarks.

Go to URL (Menu 8.1.3)

You can connect directly to the site you want. After entering a specific URL, press the OK key.

Settings (Menu 8.1.4)

Profiles

A profile is the network information used to connect to the Internet.

Note

- ▶ In case the SIM card support SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card. In case the SIM card does not support SAT services, this menu will be Profiles.

Each profile has submenus as follows:

- ▶ **Activate:** Activates the selected profile.
- ▶ **Settings:** Use this to edit and change WAP settings for the selected profile.

- **Homepage:** This setting allows you to enter the address (URL) of a site you want to use as homepage. You do not need to type http:// at the front of each URL as the WAP Browser will automatically add it.

- **Bearer:** You can set the bearer data service.

1 Data

2 GPRS

- **Data settings:** Appears only if you select Data Settings as a Bearer / service.

Dial number: Enter the telephone number to dial to access your WAP gateway.

User ID: The users identity for your dial-up server (and NOT the WAP gateway).

Password: The password required by your dial-up server (and NOT the WAP gateway) to identify you.

Call type: Select the type of data call : Analogue of Digital (ISDN)

Linger time: You need to enter timeout period. After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.

Call speed: The speed of your data connection ; 9600 or 14400

- **GPRS settings:** The service settings are only available when GPRS is chosen as a bearer service.

APN: Input the APN of the GPRS.

User ID: The users identify for your APN server.

Password: The password required by your APN server.

- **Proxy settings**

Proxy: On/Off

IP address: Input the IP address of the Proxy server you access.

Port number: Input the Proxy Port

- **DNS settings**

Primary server: Input the IP address of the primary DNS server you access

Secondary server: Input the IP address of the secondary DNS server you access

- ▶ **Rename:** You can change the profile name.

- ▶ **Delete:** Deletes the selected profile from the list.
- ▶ **Add new:** You can add a new profile.

Cache

Set a value whether a connection attempt is made through cache or not.

Cookie

Check whether a cookie is used or not.

Clear cache

Removes all context saved in cache.

Clear cookie

Removes all context saved in cookie.

Security

A list of the available certification is shown.

- ▶ **Authority:** You can see the list of authority certificates that have been stored in your phone.
- ▶ **Personal:** You can see the list of personal certificates that have been stored in your phone.

SIM service (SIM dependent)

Menu 8.2

Your service provider can offer special applications through the SIM card, such as home banking, stock market, etc. If you are registered for one of these services, the service name will appear at the end of the Main Menu. With the SIM Services menu your phone is future-proof and will support additions to your service provider's service.



For more information contact your service provider.

Downloads


Games & Apps

Menu 9.1

Games & Apps (Menu 9.1.1)

In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option. The downloaded applications are organised in folders. Press the left soft key  [OK] to open the selected folder or launch the selected midlet. Using the left soft key  [Options], the following menus are available.

Note

- ▶ After downloading any Java game, press the “Ok” Key () to save it in the root folder.

- ▶ **Launch:** Start the selected application.
- ▶ **Information:** Shows the information of the application.
- ▶ **Permissions:** Some Java applications may require a data connection to be made. Select this to set the connecting options.

- **Always:** The connection is created immediately without a notification.
- **Prompt:** You will be asked before the application makes the connection.
- **Never:** No connection is allowed.

Note

- ▶ You cannot remove or rename the preinstalled folder or a game in the folder.

Java™, is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard MS Internet Explorer browser, Java MIDlets can be downloaded using the WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed in the **Games & Apps** menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD or .JAR format.

Note

- ▶ The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.
- ▶ While being based on a standard language (J2ME), not all Java applications are compatible with all handsets on sale in so far as specific libraries may be used for a telephone model. The software may be blocked or switch itself on when Java applications not specifically developed for the phone is downloaded. We would like to point out that these problems are caused by incompatible applications and are not a product fault.

Caution


- ▶ Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

Profiles (Menu 9.1.2)

This menu contains the same settings of the Internet menu. In fact, in order to download new applications, a WAP connection is needed.

Images

Menu 9.2

The left soft key  [Options] will bring up the following options.

- ▶ **Set as wallpaper:** Currently selected Picture can be set as a Wallpaper.
- ▶ **Write multimedia message:** Downloaded Picture can be sent via MMS.
- ▶ **Send via Bluetooth:** The picture can be sent via Bluetooth.

Sounds

Menu 9.3

The left soft key  [Options] will bring up the following options.

- ▶ **Set as ringtone:** This sets the Ring Tone with currently selected Sound.
- ▶ **Write messages:** Melody Sound can be sent via SMS and MMS.

- ▶ **Send via Bluetooth:** Melody Sound can be sent via Bluetooth.

File Storage

Menu 9.4

This folder is similar to a file storage. It contains all the file transferred through UMS functionality or Bluetooth, as images, sounds and generic files not supported by the phone.

Pressing the [Option] softkey, you can view or play the file (if supported), delete it or send it via Bluetooth.

USB connectivity

S5200 can be connected to a PC through a USB cable in order to transfer files, contents and to use the built-in modem. You can find all the details related to this functionality in the following section.

USB Media Storage (UMS)

The UMS functionality (USB Media Storage) allows to handle multimedia files stored in the phone's internal memory (64MB), treating it as a common USB memory key. This function doesn't require the installation of additional software.

You can preview JPG(Max 460K), GIF(Max 100K) and can play sound can be attached in MMS.

Note

- ▶ While using the UMS functionality, you won't be able to receive any call or message.

1. From the phone's stand-by screen, connect the USB cable to the phone and the PC. The PC will identify the peripheral after some seconds.
2. The phone will display "USB" on the main LCD
3. On the PC, the phone will be identified as "Removable disk" in My Computer folder. Also, a system disk letter will be assigned, such as "E:\". After that, you can upload or download files from the phone treating it just as a common Windows folder.
4. Double-click on "Removable disk" and open the folder "My Media". Four new folders will appear:
 - **Music:** In this folder you can copy music files. The supported formats are: MP3, AAC, AAC+, AAC++, WMA, MP4 (audio) and WAV. The files in this folder can be played using the MP3 player of the phone.

- **Photos:** This folder is reserved for the pictures taken with the phone's digital camera. You can transfer the pictures from the phone to the PC using the commands copy and paste of the PC.

Note

- ▶ Even though you can upload new pictures from the PC, the phone won't list them in the My photo menu. Therefore, we recommend not to upload anything to this folder. If you want to upload new wallpapers to the phone, please use the dedicated program available in the CD-Rom.

- **Storage:** This folder is similar to a file storage. You can upload any kind of file here, images, audio or even files not specifically supported by the phone (i.e. word and excel files) just to carry them with you and download them later to another PC. On the phone, the files stored in this folder are listed in the (Menu – Downloads – File Storage).

- **Videos:** In this folder you can download on PC the videos taken with the phones' digital camera and upload new videos on the phone. This folder supports the 3GP file format. On the phone, you can view the files in this folder in the (Menu – Multimedia – My video).

Note

- ▶ You can upload files of any size, until the memory is full.
- ▶ You can create up to 10 nested folders in the 4 default folders.
- ▶ Do not change the default folder name, or it does not work properly.

5. Once the file transfer is finished, disconnect the USB peripheral from Windows and disconnect the cable from the phone.

Warning!

- ▶ Never disconnect the phone while there's a file transfer in progress. Doing so may damage the memory. Always disconnect the peripheral through Windows options before disconnecting the cable.

PC programs and Internet

You can connect the phone to your PC to manage your phonebook contacts, upload new contents such as wallpapers and ringtones or use the built in modem.

1. Install the programs included in the CD-Rom.
2. On the phone, open the menu Tools – Modem and confirm the activation.
3. Connect the phone to the PC using the USB cable and start the desired program.

Note

- ▶ To connect USB, several minutes after power on phone and in the idle window.

4. After using the modem, it is recommended to deactivate it from the menu Tools - Modem.


There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery



Data cable/CD

You can connect your phone to PC to exchange the data between them.

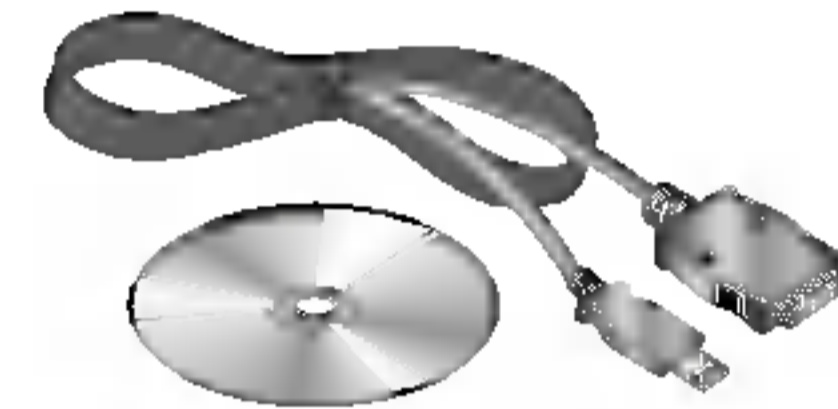

Headset

Allows hands-free operation. Includes earpiece and microphone.



Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

Technical data

General

Product name : S5200

System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Supplier's Details

Name

LG Electronics Inc

Address

LG Twin Tower
20, Yeouido-dang, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

S5200

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 / EN 301 489-07 : 2002 / EN 301 489-17 V1.2.1

EN 300 328 V1.4.1

EN 60950 : 2001

EN 50360/EN 50361 : 2001

3GPP TS 51.010-1,

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Jin Seog, Kim / Director

Issued Date

8.Sep. 2005

LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seekim @ lge.com

Signature of representative

