



Washing Machine

OWNER'S MANUAL

WD-14331(6)ADK

WD-12331(6)ADK

WD-15331(6)ADK

Thank you for buying a
LG Fully Automatic Washing machine.

Please read your owner's manual carefully, it provides
instructions on safe installation, use and maintenance.
Retain it for future reference.

Record the model and serial numbers of your washing machine.

P roduct Features



■ Protection against creases

With the alternate rotation of the drum, creasing in the laundry is minimized.



■ More economical by Intelligent Wash System

Intelligent Wash System detects the amount of load and water temperature, and then determines the optimum water level and washing time to minimize energy and water consumption.



■ Child-Lock

The child-lock system is to be used for preventing children from pressing any button to change the program during operation.



■ Low noise speed control system

By sensing the amount of load and balance, it evenly distributes load to minimize the spinning noise level.



■ Direct Drive System

The advanced Brushless DC motor rotates the drum directly without belt and pulley.

C ontents

Warnings.....	3
Installation.....	4
Specifications.....	5
Installation.....	6
Care before washing.....	12
Adding detergent	13
Function	15
How to use washer	16
Maintenance	25
Troubleshooting guide	29
Terms of Warranty	32

Warnings

READ ALL INSTRUCTIONS BEFORE USE

WARNING!

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury, or loss of life.

IMPORTANT SAFETY INSTRUCTIONS

WARNING : To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

- Do not install or store the washer where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in the user-maintenance instructions or published user-repair instructions that you understand and have the skills to carry out.
- Keep the area underneath and around your appliances free of combustible materials such as lint, paper, rags, chemicals, etc.
- Close supervision is necessary if this appliances is used by or near children or infirm persons. Do not allow them to play on, with, or inside this or any other appliance .
- Keep washer away from fire.
- Do not leave the washer door open. An open door could entice children to hang on the door or crawl inside the washer.
- Never reach into washer while it is moving. Wait until the drum has completely stopped.
- The laundry process can reduce the flame retardant of fabrics.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) which may ignite or explode. Oil may remain in the tub after a whole cycle resulting in fire during drying. So, do not load oiled clothes.
- To avoid such a result, carefully follow the garment manufacturer's wash and care instructions.
- Do not slam the washer door closed or try to force the door open when locked. This could result in damage to the washer.
- To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- dryer is intend only for drying textile material in water.
- When a product was under water, Please call service center. The risk of electric shock and fire.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinance.

- Do not use an adapter or otherwise defeat the grounding plug.
- If you don't have the proper outlet, consult an electrician.

WARNING : Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance - if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

I nstallation

To minimize the risk of fire in a tumble dryer, the following should be observed:

- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer.

Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent-this will reduce, but not eliminate, the hazard. Washed in hot water with extra detergent-this will reduce, but not eliminate, the hazard. The 'cool down' cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled or stacked while hot.

- Items that have been previously cleaned in, washed in, soaked in or spotted with petro/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in a tumble dryer.


Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, spot removers (some brands), turpentine, waxes and was removers.

- Items containing foam rubber (also known as latex foam) or similarly textured rubber, like materials should not be dried in a tumble dryer on a heat setting. Foam rubber materials can, when heated, produce fire by spontaneous combustion.
- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
- Undergarments that contain metal reinforcements should not be placed in a tumble dryer.

Damage to the tumble dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.

- Plastic articles such as shower caps or babies waterproof napkin covers should not be placed in a tumble dryer.
- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a tumble dryer.

S pecifications

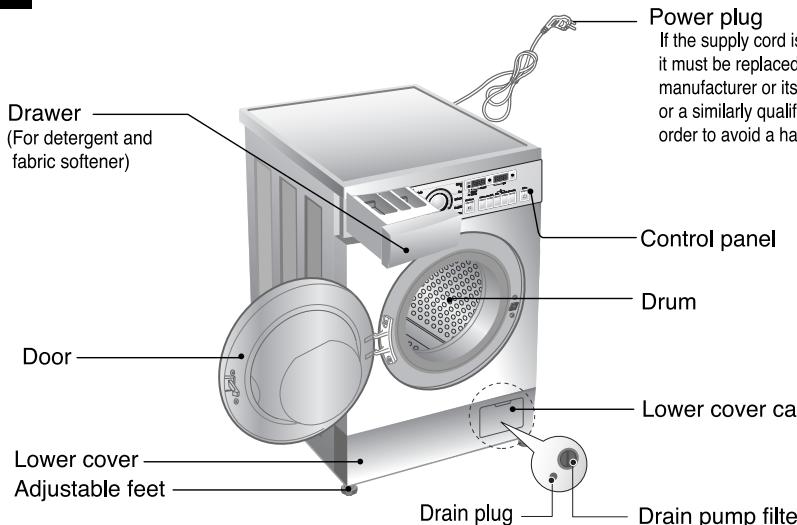


Power plug

If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or a similarly qualified person in order to avoid a hazard.


■ Name	: Front loading washing machine
■ Power supply	: 220 - 240V~, 50 Hz
■ Size	: 600mm(W) x 550mm(D) x 850mm(H)
■ Weight	: 61 kg
■ Wash capacity/Max. Watt	: Refer to the Rating Label
■ Dry capacity/Max. Watt	: Refer to the Rating Label
■ Water consumption	: 147 ℥
■ Permissible water pressure	: 0.3-10 kgf/cm ² (30-1000 kPa)
■ Spin speed	: No Spin/400/600/800/1000/1200/1400 [WD-14331(6)ADK, WD-15331(6)ADK] No Spin/400/600/800/1000/1200 [WD-12331(6)ADK]

* The appearance and specifications may be varied without notice to raise the units quality.

■ Accessories

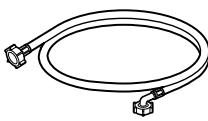

Inlet hose(1EA)



Spanner

I nstallation

Install or store where it will not be exposed to temperatures below freezing or exposed to the weather. Properly ground washer to conform with all governing codes and ordinances.

The base opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.


In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the appliance guarantee.

■ Transit bolts


The appliance is fitted with transit bolts to prevent internal damage during transport.

- Packing and all transit bolts must be removed before using the washer.

☞ When unpacking the base, be sure to remove the additional packing support in the middle of the base packing.

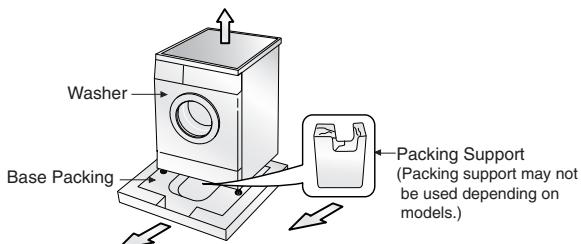


■ Removing transit bolts

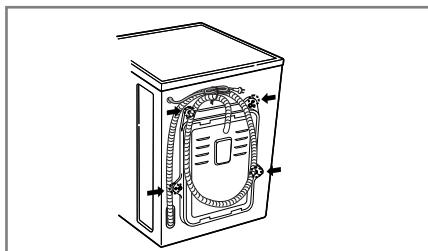

1. To prevent internal damage during transport, the special 4 bolts are locked. Before operating the washer, remove the bolts along with the rubber bungs.

• If they are not removed, it may cause heavy vibration, noise and malfunction.

2. Unscrew the 4 bolts with the spanner supplied.

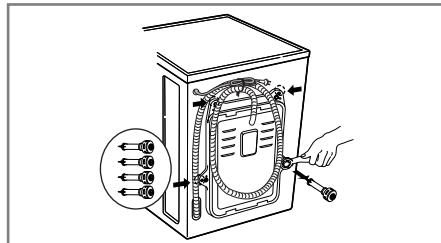


3. Take out the 4 bolts along with the rubber bungs by slightly twisting the bung. Keep the 4 bolts and the spanner for future use.

• Whenever the appliance is transported, the transit bolts must be refitted.

4. Close the holes with the caps supplied.

I nstallation

■ Installation place requirement

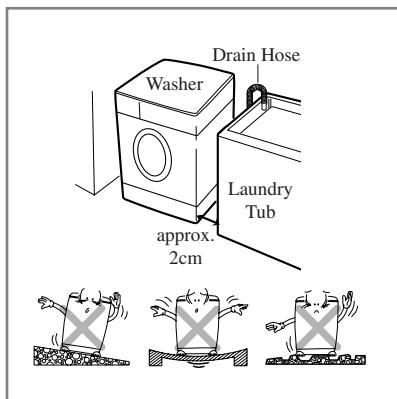

Level floor :

Allowable slope under entire washer is 1°

Power outlet :

Must be within 1.5 meters of either side of location of washer. Do not overload the outlet with more than one appliance.

Additional Clearance :

For wall, door and floor modeling is required.
(10cm : rear /2cm:right & left side)

Do not place or store laundry products on top of washer at any times.

They can damage the finish or controls.

■ Positioning

Install the washer on a flat hard floor.

Make sure that air circulation around the washer is not impeded by carpets, rug etc.

- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the washer.
- If it is impossible to avoid positioning the washer next to a gas cooker or coal burning stove, an insulating (85x60cm) covered with aluminum foil on the side facing the cooker or stove, must be inserted between the two appliances.
- The washer must not be installed in rooms where the temperature can drop below 0°C.
- Please ensure that when the washer is installed, it is easily accessible for the engineer in the event of a breakdown.
- With the washer installed adjust all four feet using the transit bolt spanner provided ensuring the appliance is stable, and a clearance of approximately 20mm is left between the top of the washer and the underside of the work-top.

I nstallation

■ Electrical connection

1. Do not use an extension cord or double adapter.
 2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.
 3. Always unplug the machine and turn off the water supply after use.
 4. Connect the machine to an earthed socket in accordance with current wiring regulations.
 5. The appliance must be positioned so that the plug is easily accessible.
- Repairs to the washing machine must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local service center
 - Do not install your washing machine in rooms where temperature below freezing may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
 - If the appliance is delivered in the winter months and temperatures are below freezing : Place the washing machine at room temperature for a few hours before putting it into operation.

CAUTION

CAUTION concerning the Power Cord


Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

■ Washing Machine is to be connected to the water mains using new hose-sets and old hose-sets should not be used.

■ Connecting water supply hose

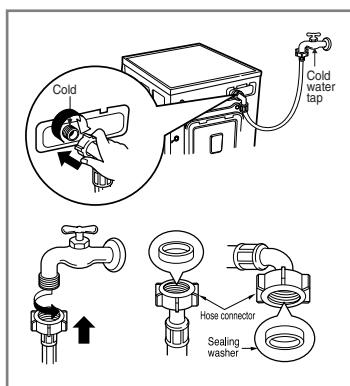

- Water supply pressure must be between 30kPa and 1000kPa (0.3~10kgf/cm²)
 - Don't strip or cross-thread when connecting Inlet hose to the valve.
 - If the water supply pressure is more than 1000kPa, a decompression device should be installed.
- Two rubber seals are supplied with the water inlet hoses. They are used for preventing water leaks.
 - Make sure the connection to taps is tight enough.
 - Periodically check the condition of the hose and replace the hose if necessary.
 - Make sure that there is no kink on the hose and that it is not crushed.


NOTE

After completing connection, if water leaks from the hose, repeat the same steps. Use the most conventional type of faucet for water supply. In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.


I nstallation

■ Normal Tap without thread & screw type inlet hose


1. Unscrew the fixing screw to attach the tap.



2. Push the connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.




3. Push the water supply hose vertically upwards so that the rubber packing within in the hose can adhere completely to the tap and then tighten it by screwing it to the right.

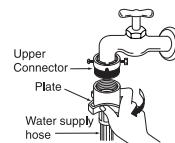

■ Normal Tap without thread & one touch type inlet hose


1. Untighten the upper connector screw.



- In case the diameter of the tap is large remove the guide plate.




2. Push the upper connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.

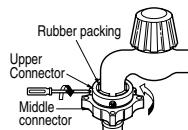


- Turn the middle connector not to have water leaked.
- Make sure that the rubber seal is inside the hose connector.

3. Connect the water supply hose to the middle connector, pushing the plate down.

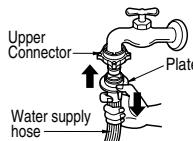

- To separate the water supply hose from the middle connector shut off the tap. Then pull the inlet hose down, pushing the plate down.



- Make sure that there are no kinks in the hose and that it is not crushed.

Used the horizontal tap	
Horizontal tap	
Extension tap	
Square tap	

I nstallation

This equipment is not designed for maritime use or for use mobile installations such as caravans, aircraft etc.

Turn off the stopcock if the machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain(gully) in the immediate vicinity.



When disposing of the appliance, cut off the mains cable, and destroy the Plug.

Disable the door lock to prevent young children being trapped inside.



Packaging material (e.g. Films, Styrofoam) can be dangerous for children. There is a risk of suffocation !

Keep all packaging well away from children

■ Installation of drain hose

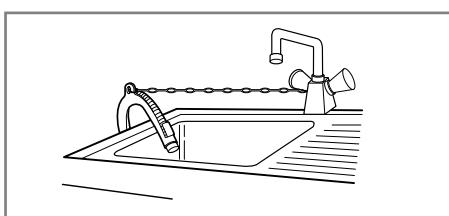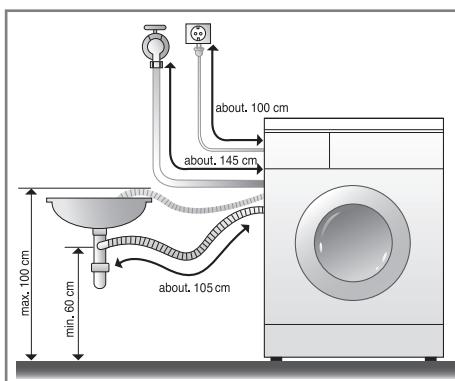

- When installing the drain hose to a sink, secure it tightly with a string.
- Proper securing of the drain hose will protect the floor from damage due to water leakage.

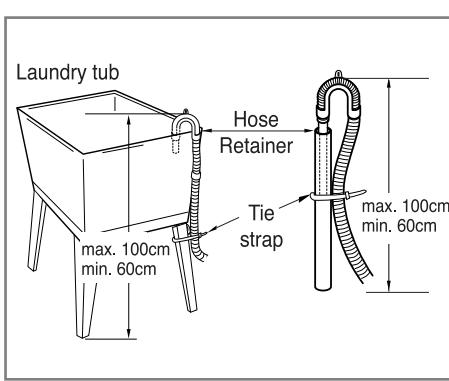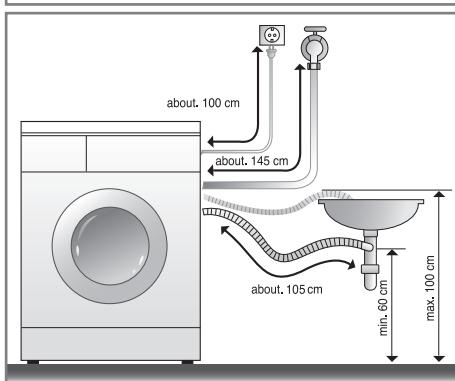

- The drain hose should not be placed higher than 100 cm above the floor. Water in the washer does not drain or drains slowly.
- Proper securing of the drain hose will protect the floor from damage due to water leakage.
- When the drain hose is too long, do not force back into the washer. This will cause abnormal noise.

I nstallation

■ Level adjustment




1. Adjusting the washing machine level properly prevents excessive noise and vibration.

Install the appliance on a solid and level floor surface, preferably in a corner of the room.

NOTE Timber or suspended type flooring may contribute to excessive vibration or load balance errors.

2. If the floor is uneven, adjust the adjustable feet as required. (do not insert pieces of wood etc. under the feet)
Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level. (use a spirit level)
※ *After the washer is level, tighten the lock nuts up towards of the base of the washer. All lock nuts must be tightened.*

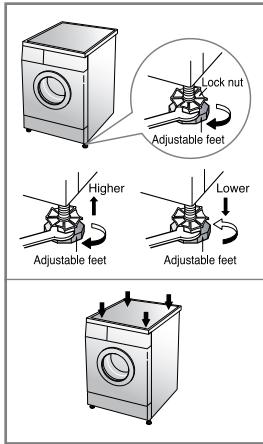

NOTE In the case that the washing machine is installed on a raised platform, it must be securely fastened in order to eliminate the risk that it might fall off.

■ Diagonal Check

*When pushing down the edges of the washing machine top plate diagonally, the machine should not move up and down at all.
(Please, check both of two directions)*

If machine rocks when pushing the machine top plate diagonally, adjust the feet again.

■ Concrete floors

- The installation surface must be clean, dry and level.
- Install washer on a flat hard floor.

■ Tile floors (Slippery floors)

- Position each foot on the Tread Mate and level the machine to suit. (Cut Tread Mate into 70x70 mm sections and stick the pieces on to the dry tile where machine is to be placed.)

※ *Tread Mate is a self adhesive material used on ladders & steps that prevents slipping.*

■ Wooden floors (Suspended floors)

- Wooden floors are particularly susceptible to vibration.
 - To prevent vibration we recommend you place rubber cups under each foot, at least 15mm thick under the washer, secured to at least 2 floor beams with screws.
 - If possible install the washer in one of the corners of the room, where the floor is more stable.
- ※ *Insert the rubber cups to reduce vibration.*
- ※ *Rubber cups (p/no. 4620ER4002B) can be purchased from the LG spare parts department.*



※ *It can be purchased from hardware suppliers.*

Important!

- Proper placement and levelling of the washer ensures long, regular and reliable operation.
- The washer must be absolutely horizontal and stand firmly in position.
- It must not "Seesaw" across corners under load.
- The installation surface must be clean, free from floor wax and other lubricant coatings.
- Do not let the feet of the washer get wet. If feet of the washer get wet, slipping may occur.

Care before washing

■ Before the first washing

Select a cycle (COTTON 60°C, add a half load of detergent) allow the unit to wash without clothing. This will remove residues and water from the drum that may have been left during manufacturing.

■ Caring before washing

1. Care Labels

Look for a care label on your clothes. This will tell you about the fabric content of your garment and how it should be washed.

2. Sorting

To get the best results, Sort clothes into loads that can be washed with the same wash cycle.

Water temperature and spin speed and different fabrics need to be washed in different ways.

Always sort dark colors from pale colors and whites. Wash separately as dye and lint transfer can occur causing discoloration of white etc. If possible, do not wash heavily soiled items with lightly soiled one.

Soil (Heavy, Normal, Light)

Separate clothes according to amount of soil.

Color (White, Lights, Darks)

Separate white fabrics from colored fabrics.

Lint (Lint producers, Collectors)


Wash lint producers and lint collectors

separately.


3. Caring before loading

■ Combine large and small items in a load. Load large items first. Large items should not be more than half the total wash load.


Do not wash single items. This may cause an out-of-balance load. Add one or two similar items.

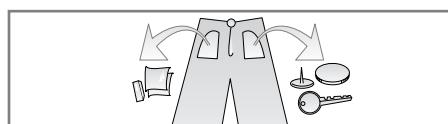


- Check all pockets to make sure that they are empty. Items such as nails, hair clip, matches, pens, coins and keys can damage both your washer and your clothes.

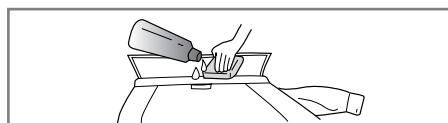


- Close zippers, hooks and strings to make sure that these items don't snag on other clothes.

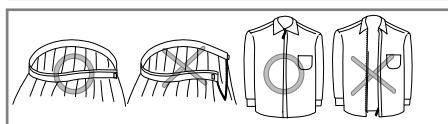

- Pre treat dirt and stains by brushing a little detergent dissolved in water onto stains like collars and cuffs to help shift dirt.

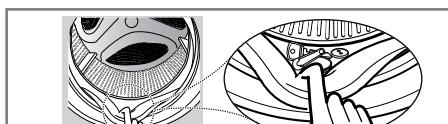

- Check the folds of the flexible gasket (gray) and remove any small articles, if any.

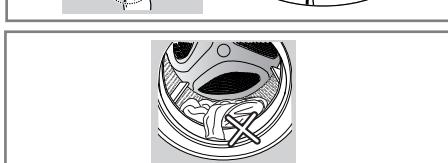


- Check inside of the drum and remove any left items in it for next wash cycle.

- Remove any clothing or items on the flexible gasket to prevent clothing and the gasket damages.

A ddng detergent


■ Adding detergent and fabric softener

1. The Dispenser Drawer

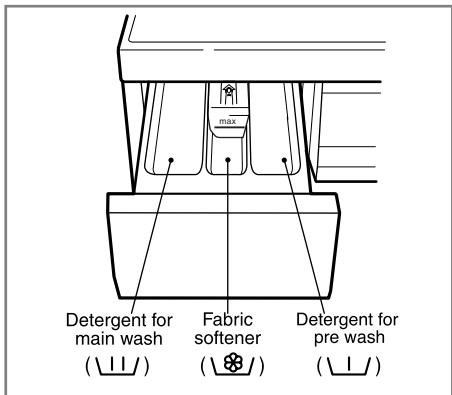

- Main wash only → \u222f/\u222f
- Pre Wash + Main Wash → \u222f/\u222f • \u222f/\u222f

2. Adding Fabric Softener

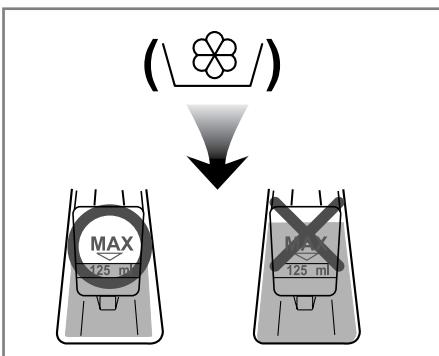

- Do not exceed the maximum fill line. Close the dispenser drawer slowly. Overfilling can cause early dispensing of the fabric softener which could stain clothes.
- Do not leave the fabric softener in the detergent drawer for more than 2 days. (Fabric softener could harden)
- Softener will automatically be added during the last rinse cycle.
- Do not open the drawer when water is supplied.
- Solvents(benzene, etc) are not allowable.

NOTE Do not pour fabric softener directly on the cloths

A dding detergent


3. Detergent dosage

- The detergent should be used according to the instruction of the detergent manufacture.
- If too much detergent is used, too many suds can occur and this will decrease the washing result or cause heavy load to the motor.
- Use powder detergent only for the front loading washer.

* If suds occur too much, please reduce the detergent amount.

- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid oversudsing.

4. Water softener

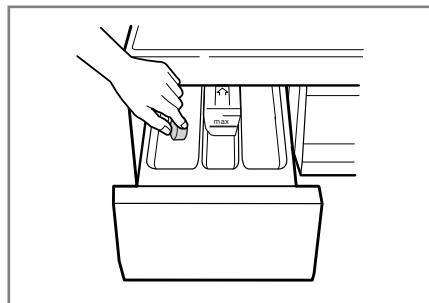

- A water softener, such as Anti limescale (Clagon) can be used to cut down on the use of detergent in extremely hard water areas. Dispense according to the amount specified on the packaging. First add detergent and then the water softener.
- Use the quantity of detergent as for soft water.

* Tips

Full load : according to manufacturer's recommendation.


Part load : 3/4 of the normal amount.

Minimum load : 1/2 of full load.


- Detergent is flushed from the dispenser at the beginning of the cycle.

5. Using the Tablets

- 1) Open the door and Tablets into the drum.

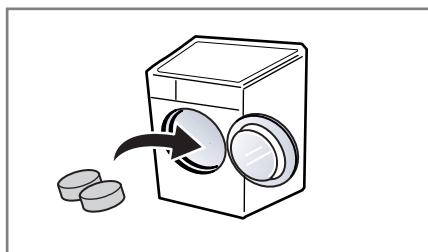

- 2) Load the laundry into the drum.

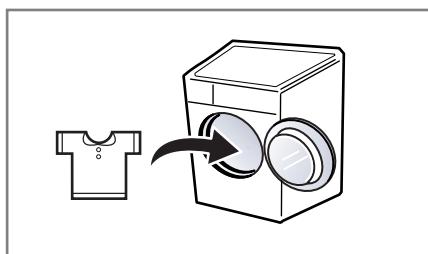

- 3) Close the door.

Function

■ Recommended courses according to the laundry type

Program	Fabric Type	Proper Temp. (Option)	Option	Maximum Load
Cotton	First check if laundry is machine washable. (white cotton, linen towel and sheets...)	95°C	<ul style="list-style-type: none"> - Intensive - Rinse Hold - Rinse+ - Pre Wash - Dry 	Rating
	Colour fast garments (shirts, night dresses, pajamas...) and lightly soiled white cotton (underwear...)	60°C (30°C, 40°C, 60°C-Eco)		Rating
Synthetic	Polyamide, Acrylic, Polyester.	40°C (30°C, 60°C)		4.0kg
Delicate	Delicate laundry easily damaged.	30°C (Cold, 40°C)		3.0kg
Wool/Silk	Machine washable woolens with pure new wool only.	30°C (Cold, 40°C)	<ul style="list-style-type: none"> - Intensive - Rinse Hold - Rinse+ 	2.0kg
Hand Wash	“Hand Wash” marked delicate and wool laundry.	Cold (30°C)		2.0kg
Quick 30	Coloured fast laundry which is lightly soiled.	30°C		4.0kg

* **Water Temperature** : Select the water temperature to the wash cycles.

Always follow garment manufacturer's care label or instructions when laundering.

* **Intensive** : If the laundry is heavily soiled “Intensive” option is effective.

* **Pre Wash** : If the laundry is heavily soiled, “Pre Wash” Cotton is recommended.
Pre Wash is available in Cotton, Eco and Synthetic Program.

How to use washer




1. Cotton automatically selected upon power on.

- Press the **Power** button to start.
- Press the **Start/Pause** button.
- Initial conditions
 - *Wash* : main wash
 - *Rinse* : 3 times
 - *Spin* :
 - 1400 rpm [WD-14331(6)ADK, WD-15331(6)ADK]
 - 1200 rpm [WD-12331(6)ADK]
 - *Water temperature* : 60°C
 - *Program* : Cotton

2. Manual Selecting

- Press the **Power** button to start.
 - Select the conditions which you want to use, by turning the program dial and pressing each button.
- For selecting the each conditions, please refer to the page17~page24*
- Press the **Start/Pause** button.

How to use washer

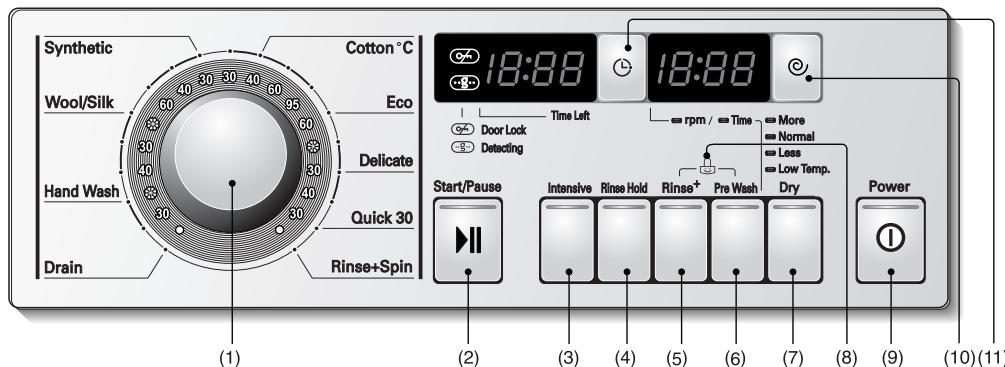


(1) Dial : Program
(2) Button : Start / Pause
(3) Button : Intensive
(4) Button : Rinse Hold

(5) Button : Rinse⁺
(6) Button : Pre Wash
(7) Button : Dry
(8) Button : Child Lock

(9) Button : Power
(10) Button : Spin
(11) Button : Time Delay

Option

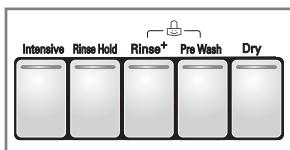

- Intensive - Rinse⁺
- Rinse Hold - Pre Wash
- Dry

• By pressing the Option button, all Option functions may be selected.

1. Intensive

- If the laundry is heavily soiled "Intensive" option is effective.
- By selecting the Intensive option, the wash time may be extended, depending on the program selected.

2. Rinse Hold

- Is selected by pressing the Rinse Hold button this function leaves clothes in the machine; suspended in the water after a rinse without entering into spin.
- To proceed to a Drain or Spin function after a Rinse hold, select Drain on the program dial or press the Spin selector button to the desired speed, then press the Start/Pause button.

3. Rinse+

- For additional rinse which may assist in removing traces of detergent residue.
- By selecting Rinse⁺ function, the rinse time and the rinse water are increased.

4. Pre Wash

- If the laundry is heavily soiled, "Pre Wash" course is effective.
- Pre Wash is available in Cotton, Eco and Synthetic.

5. Dry

- When you want to dry, select this button.
- Available in Cotton and Synthetic.
- Please note that the drying capacity is 3.5 kg. Please remove excess clothes from the completed wash before commencing the drying and ensure that the cold water tap is left on.


The required lamp will light up for identification.

How to use washer

Spin



[WD-14331(6)ADK, WD-15331(6)ADK]

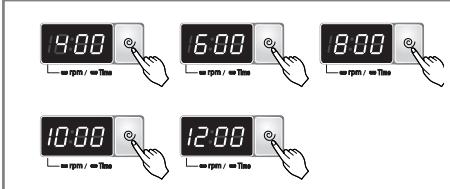

[WD-12331(6)ADK]

- By pressing the **Spin** button, the spin speed can be chosen and the LED of rpm is turned on.



Spin only:

1. Press the **Power** button.
2. Set the desired spin speed by pressing the **Spin** button.
3. Press the **Start/Pause** button.

1. Spin selection

- Spin Speed is available according to the program as follows.

WD-14331(6)ADK, WD-15331(6)ADK

- **Cotton, Rinse+Spin, Quick 30**
No Spin - 400 - 600 -
800 - 1000 - 1200 - 1400
- **Synthetic, Wool/Silk, Hand Wash**
No Spin - 400 - 600 - 800 - 1000
- **Delicate**
No Spin - 400 - 600 - 800

WD-12331(6)ADK


- **Cotton, Rinse+Spin, Quick 30**
No Spin - 400 - 600 - 800 -
1000 - 1200
- **Synthetic, Wool/Silk, Hand Wash**
No Spin - 400 - 600 - 800 - 1000
- **Delicate**
No Spin - 400 - 600 - 800

2. No spin

- If no spin is selected, the washer stops after draining water.

How to use washer

Water Temp.

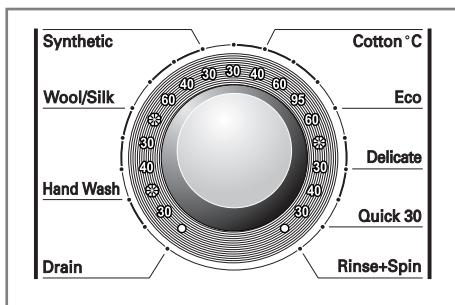


- By turning the Program Dial, the water temperature can be selected.
 - *Cold*
 - $30^{\circ}\text{C} / 40^{\circ}\text{C} / 60^{\circ}\text{C} / 95^{\circ}\text{C}$
 - Water temperature can be selected according to the program.

The required temperature lamp will light up for identification.


For the more detailed information, please refer to the page 15.

Child Lock

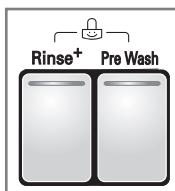


If you choose to lock the buttons on the control assembly to prevent tampering this function may be selected.


- Child Lock can be set by pressing the **Rinse+** button and **Pre Wash** button simultaneously. (About three seconds)

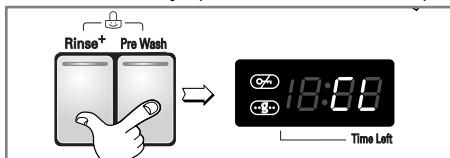

- When child lock is set, all buttons are locked except for power button.
 - To deactivate Child Lock system, press **Rinse⁺** and **Pre Wash** buttons simultaneously again. (About three seconds)

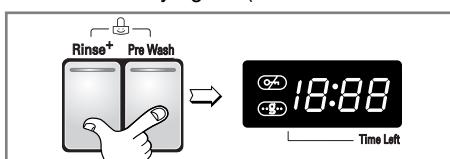

- To change to the desired program, whilst in child lock mode.
 1. Press both **Rinse⁺** and **Pre Wash** together once again. (About three seconds)
 2. Press the **Start/Pause** button.
 3. Select the desired program and press the **Start/Pause** button again.




- The child lock can be set at any time and it is automatically canceled when operational errors occur. Also *Child Lock* works when power is off.

How to use washer

Dry

NOTE The drying capacity for this model is 3.5 kg. Please remove appropriate excess weight before commencing the drying cycle.

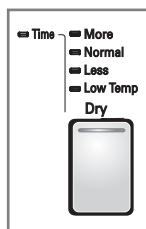


- This washer-dryer's automatical process from washing to drying can be selected easily.
- For most even drying, make sure all articles in the clothes load are similar in material and thickness.
- Do not overload dryer by stuffing too many articles into drum. Items must be able to tumble freely.
- If you open door and remove load before dryer has finished its cycle, remember to press the Start/Pause button.
- By pressing the DRY button, you can select

1.Drying Automatic guide

- Use your Automatic Cycles to dry most loads.
- Electronic sensors measures the temperature of the exhaust to increase or decrease drying temperatures for faster reaction time and tighter temperature control.
- Recommand Automatic drying course for clothes type.
 - a) For Synthetics select - Low Temp.
 - b) If you want to iron clothes-Less.
 - c) For Cottons select - Normal
 - d) For washable nappies select - More

NOTE: The estimated drying time varies from the actual drying time with an Automatic. The type of fabric, size of the load, and the dryness selected, do affect the drying times.



- After the end of dry, “” is displayed. By pressing the “**Start/Pause**” button the program can be ended. If you not press the “**Start/Pause**” button, the program is ended after about 4 hours.
“” Cooling Cycle.

How to use washer

Dry

2.Drying time guide

- By press the Dry button, the drying time can be selected.
- Drying course can last up to 150min. When selecting drying only, drying course will start after spinning. (The spinning time is about 19~22 min.)
- These drying times are given as a guide to help you set your dryer for manual drying. Drying times can vary greatly depending on dampness, room temperature and type of fabric and your own experience will be your best guide.

Woolen Articles

- Do not tumble dry woolen articles. Pull them to their original shape and dry them flat.

Woven and Loopknit Materials

- Some woven and loopknit materials may shrinks, by varying amounts, depending on their quality.
- Always stretch them out immediately after drying.

Permanent Press and Synthetics

- Do not overload your dryer
- Take out permanent press articles as soon as the dryer stops to reduce wrinkles.

Fiber or Leather Materials

- Always check the manufacture's instructions.

Baby clothes and Night Gowns

- Always check the manufacture's instructions.

Rubber and Plastics

- Do not dry any items made from or containing rubber or plastics, such as:
 - a) aprons, bibs, chair covers
 - b) curtains and table cloths
 - c) bathmats

Fiber glass


- Do not dry fiberglass articles in your dryer. Glass particles left in the dryer could be picked up by your clothes the next time you use the dryer and irritate your skin.

3.Completion of Drying

- When drying cycle is completed, “ [Cool Down] is displayed on the Multi display.
- The Cool Down is setting automatically when a drying cycle is complete.
- When you are not remove a loaf of clothes from the dryer as soon as it stops, wrinkles can form.
- The Cool Down operating periodically tumbles, rearranges and fluffs the load to avoid wrinkles without heat for up to 4 hours.
- The  message will continue to display until the clothes are removed or the “Start/Pause” button is pressed.

How to use washer


Time Delay



Preparing washing before starting "Time Delay"

- Turn on the water tap.
- Load laundry and close the door.
- Place the detergent and fabric softener in the drawer.
- How to set "Time Delay"
 - Press **Power** button.
 - Turn the **Program** dial to select the program you require.
 - Press **Time Delay** button and set the desired time.
 - Press the **Start/Pause** button.
(":" blinks.)
- If **Time Delay** button is pressed, "3:00" is displayed. The maximum delayed time is 19 hours and the minimum time is 3 hours.
- Each pressing of the button advances on time delay by one hour.
- To cancel the time delay, press the **Power** button.
- **Time Delay** is 'expected time' from the present to the completion of washing cycle or selected process (Wash, Rinse, Spin).
- *According to the condition of water supply and temperature, the delayed time and the actual washing time may vary.*

Program

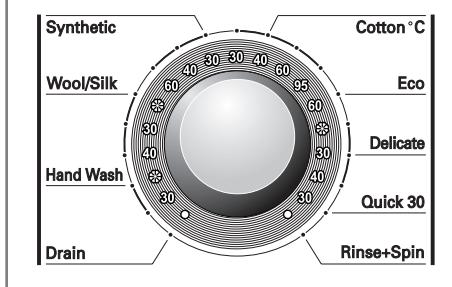

- 8 programs are available according to the laundry type.
- Lamp will light up to indicate selected program.
- When **Start/Pause** button is pressed, the Cotton program is automatically selected.
- By turning the Program dial, the program is selected in order of "Cotton – Delicate – Quick 30 – Rinse+Spin – Drain – Hand Wash – Wool/Silk – Synthetic".

For information regarding laundry type for each program, please refer to page 15.

How to use washer

Start/Pause



1. Start

- This **Start/Pause** button is used to start wash cycle or pause the wash cycle.

2. Pause


- If temporary stop of wash cycle is needed, press the **Start/Pause** button.
- When in Pause, the power is turned off automatically after 4 minutes.
- **NB.** The door will not open before 1 to 2 minutes when Pause is selected, or at the end of the wash cycle.

Door Lock



- Lights whenever the door of the washer is locked.
- The door can be unlocked by pressing the Start/Pause button to stop the washer.
- The door can be opened after a short delay.

Detecting



- While the "Detecting" is shown in the display the machine rotates slowly and detects how many laundries are loaded in the drum. It will take a few seconds.
- Available in Cotton, Synthetic.

Power



1. Power

- Press the Power button to turn power on and off
- To cancel the Time Delay function, the power button should be pressed.

2. Initial Program

- When the Power button is pressed, the washer is ready for Cotton program. And the other initial conditions as follows.
- So, if you want to advance into the washing cycle without changing the program, just press the **Start/Pause** button and then the washer will proceed.

■ Initial program

[WD-14331(6)ADK, WD-15331(6)ADK]

- Cotton Program / Main Wash / Normal Rinse / 1400 rpm / 60°C

[WD-12331(6)ADK]

- Cotton Program / Main Wash / Normal Rinse / 1200 rpm / 60°C

How to use washer

Display



1. Special function display

- When child lock is selected, the “**LL**” is displayed.
- After the end of dry, “**ED**” is displayed.
- When time delay is selected, it shows the remaining time to finish the selected program.

2. Self diagnosis display

- If the machine encounters a fault during operation, the associated fault will be displayed.

“**PE**” : Water pressure sensing error
“**FE**” : Problem of overfilling water
“**DE**” : Door is not closed
“**IE**” : Water inlet trouble
“**DE**” : Drainage trouble
“**UE**” : Unbalanced load
“**TE**” : Water temperature trouble
“**LE**” : Over load in motor
“**LE**” : Over load in motor
“**PF**” : The washer experienced a power failure.
“**dHE**” : Dry heater or thermostat trouble.

If these error letters are displayed, please refer to the troubleshooting page29 and follow the guide.

3. Completion of washing

- When washing cycle is completed, “**End**” is displayed.

4. Time left

- During washing cycle, the remaining washing time is displayed.

- Recommended program by manufacturer.

* () : WD-12331(6)ADK

- Cotton 95°C** : around 2 hours and 19(17) minutes
 - Cotton 60°C** : around 1 hour and 42(40) minutes
 - Synthetic** : around 1 hour and 20 minutes
 - Delicate** : around 52 minutes
 - Wool/Silk** : around 50 minutes
 - Hand Wash** : around 44 minutes
 - Quick 30** : around 30 minutes
 - Rinse+ Spin** : around 20(18) minutes
 - Drain** : around 1 minute
- The washing time may vary by the amount of laundry, water pressure, water temperature and other washing conditions.
 - If an unbalanced load is detected or if the suds removing program operates, the wash time may be extended. (Max. increasing time is 45 minutes.)


Maintenance

* Before cleaning the washer interior, unplug the electrical power cord to avoid electrical shock to avoid electrical shock hazards.


* When disposing of the appliance, cut off the mains cable, and destroy the plug Disable the door lock to prevent young children being trapped inside.

■ The water inlet filter


- "I E" error message will blink on the control panel when water does not enter the detergent drawer.
- If water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.
It is therefore a good idea to clean it from time to time.

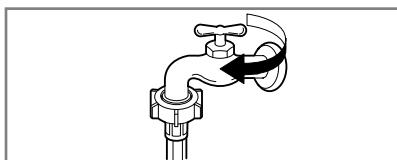


1. Turn off the water tap.

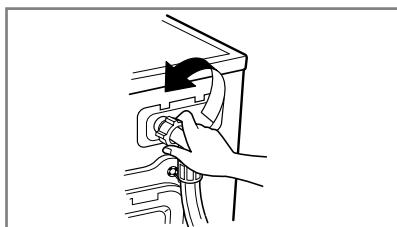

2. Unscrew the water inlet hose.

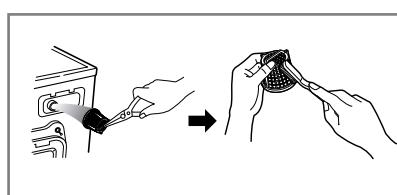

3. Clean the filter using a hard bristle brush.

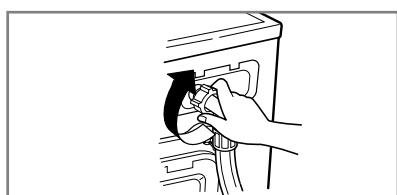

4. Tighten up the inlet hose.

Maintenance

■ The drain pump filter


* The drain filter collects threads and small objects left in the laundry.

Check regularly that the filter is clean to ensure smooth running of your machine.

▲ CAUTION First drain using the drain hose and then open the pump filter to remove whatever any threads or objects.

Be careful when draining if the water is hot.

* Allow the water to cool down before cleaning the drain pump, carrying out emergency emptying or opening the door in an emergency.

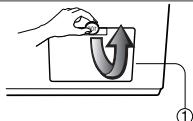


1. Open the lower cover cap (1) by using a coin.


Drain plug (2) to pull out the hose.




2. Unplug the drain plug (2), allowing the water to flow out. At this time use a vessel to prevent water flowing on to the floor. When water does not flow any more, turn the pump filter (3) open to the left.

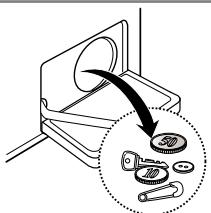

3. Remove out any foreign material from the pump filter (3).

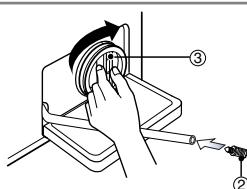


4. After cleaning, turn the pump filter (3) clockwise and insert the drain plug (2) to the original place. close the lower cover cap.

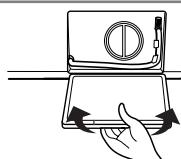

Maintenance


■ Dispenser drawer

- * After a while detergents and fabric softeners leave a deposit in the drawer.
- It should be cleaned from time to time with a jet of running water.
- If necessary it can be removed completely from the machine by pressing the catch downwards and by pulling it out.
- To facilitate cleaning, the upper part of the fabric softener compartment can be removed.

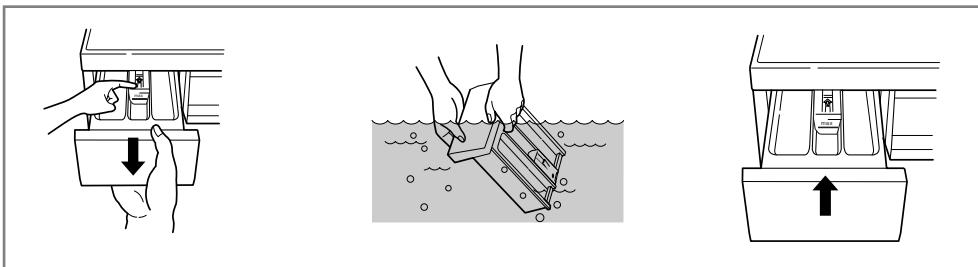

■ The drawer recess

- * Detergent can also accumulate inside the recess which should be cleaned occasionally with an old toothbrush.
- Once you have finished cleaning, replace the drawer and run a rinse cycle without laundry.

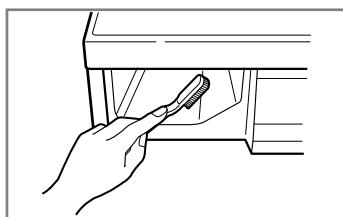

■ The washing drum

- If you live in a hard water area, limescale may continuously build up in places where it cannot be seen and thus not easily removed.
Over time the build up of scale clogs appliances, and if it is not kept in check, expensive maintenance or repairs may result.
- Although the washing drum is made of Stainless steel, specks of rust can be caused by small metal articles (paper clips, safety pins) which have been left in the drum.
- The washing drum should be cleaned from time to time.
- If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use.
* Descaler may contain chemicals that may damage part of your washing machine.
- Remove any spots with a stainless steel cleaning agent.
- Never use steel wool.

Maintenance

■ Cleaning your washer

1. Exterior

Proper care of your washer can extend its life.

The outside of the machine can be cleaned with warm water and a neutral non abrasive household detergent.

Immediately wipe off any spills. Wipe with damp cloth.

Try not to hit surface with sharp objects.

* IMPORTANT: Do not use methylated spirits, diluents or similar products.

2. Interior

Dry around the washer door opening, flexible gasket and door glass.

Run washer through a complete cycle using hot water.

Repeat process if necessary.

NOTE Remove hard water deposits using only cleaners labeled as washer safe.

■ Cold condition

If the washer is stored in an area where freezing may occur or moved in freezing temperatures, follow these instructions to prevent damage to the washer:

1. Turn off water supply tap.
2. Disconnect hoses from water supply and drain water from hoses.
3. Plug electrical cord into a properly grounded electrical outlet.
4. Add 1gallon(3.8L) of nontoxic recreational vehicle(RV) antifreeze into an empty wash drum. Close the door.
5. Set spin cycle and let washer spin for 1minute to drain out all water.
Not all of the RV antifreeze will be expelled.
6. Unplug electrical power cord, dry the drum interior, and close the door.
7. Remove dispenser drawer drain and dry excessive water from the compartments.
8. Store washer in an upright position.
9. To remove antifreeze from washer after storage, run empty washer through a complete cycle using detergent. Do not add wash load.

Troubleshooting guide

* This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately.

When the machine does not function properly or does not function at all, check the following points before you contact your service provider.

Symptom	Possible Cause	Solution
Rattling and clanking noise	<ul style="list-style-type: none">Foreign objects such as coins or safety pins maybe in drum or pump.	Stop washer and check drum and drain filter. If noise continues after washer is restarted, call your authorised service centre.
Thumping sound	<ul style="list-style-type: none">Heavy wash loads may produce a thumping sound. This is usually normal.	If sound continues, washer is probably out of balance. Stop and redistribute wash load.
Vibrating noise	<ul style="list-style-type: none">Have all the transit bolts and packing been removed?Are all the feet resting firmly on the ground?	If not removed during installation. Refer to Installation guide for removing transit bolts. Wash load may be unevenly distributed in drum. Stop washer and rearrange wash load.
Water leaks.	<ul style="list-style-type: none">Fill hoses or drain hose are loose at tap or washer.House drain pipes are clogged.	Check and tighten hose connections. Unclog drain pipe. Contact plumber if necessary.
Oversudsing		Too much detergent or unsuitable detergent may cause excessive foaming which may result in water leaks, and vibration during spin.
Water does not enter washer or it enters slowly	<ul style="list-style-type: none">Water supply is not adequate in area.Water supply tap is not completely open.Water inlet hose(s) are kinked.The filter of the inlet hose(s) clogged.	Check another tap in the house. Fully open tap. Straighten hose. Check the filter of the inlet hose.
Water in the washer does not drain or drains slowly.	<ul style="list-style-type: none">Drain hose is kinked or clogged.The drain filter is clogged.	Clean and straighten the drain hose. Clean the drain filter

Troubleshooting guide

Symptom	Possible Cause	Solution
Washer does not start	<ul style="list-style-type: none"> Electrical power cord may not be plugged in or connection may be loose. House fuse blown, circuit breaker tripped, or a power outage has occurred. Water supply tap is not turned on. 	<p>Make sure plug fits tightly in wall outlet.</p> <p>Reset circuit breaker or replace fuse. Do not increase fuse capacity. If problem is a circuit overload, have it corrected by a qualified electrician. Turn on water supply tap.</p>
Washer will not spin	* Check that the door is firmly shut.	<p>Close the door and press the Start/Pause button. After pressing the Start/Pause button, it may take a few moments before the clothes washer begins to spin. The door must lock before spin can be achieved.</p>
Door does not open		<p>Once started, the door can not be opened for safety reasons. Wait one or two minutes before opening the door to give the electric locking mechanism time to release.</p>
Wash cycle time delayed		<p>The washing time may vary by the amount of laundry, water pressure, water temperature and other usage conditions. If the imbalance is detected or if the suds removing program works, the wash time shall be increased.</p>
Dry problem	<ul style="list-style-type: none"> Does not dry 	<p>Do not overload. Check that the washer is draining properly to extract adequate water from the load. Clothes load is too small to tumble properly. Add a few towels.</p>

Troubleshooting guide

Symptom	Possible Cause	Solution
I E	<ul style="list-style-type: none"> • Water supply is not adequate in area • Water supply taps are not completely open. • Water inlet hose(s) are kinked. • The filter of the inlet hose(s) are clogged. 	<p>Check another tap in the house. Fully open tap.</p> <p>Straighten hose(s). Check the filter of the inlet hose(s).</p>
DE	<ul style="list-style-type: none"> • Drain hose is kinked or clogged. • The drain filter is clogged. 	<p>Clean and straighten the drain hose. Clean the drain filter.</p>
UE	<ul style="list-style-type: none"> • Load is too small. • Load is out of balance. • The appliance has an unbalance detection and correction system. If individual heavy articles are loaded (ex. bath mat, both robe, etc.), this system may stop spinning or even interrupt the spin cycle altogether. • If the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle. 	<p>Add 1 or 2 similar items to help balance the load. Rearrange load to allow proper spinning</p>
dB	 <ul style="list-style-type: none"> • Is the door open or not completely closed? 	<p>Close the door completely. * If “dB” is not released, call for service.</p>
EE		<p>Unplug the power plug and call for service.</p>
FE	<ul style="list-style-type: none"> • Water overfills due to the faulty water valve. 	<p>Close the water tap. Unplug the power plug. Call for service.</p>
PE	<ul style="list-style-type: none"> • Water level sensor has malfunctioned. 	
EE	<ul style="list-style-type: none"> • Over load in motor. 	
LE	<ul style="list-style-type: none"> • Over load in motor. 	
PF	<ul style="list-style-type: none"> • The washer experienced a power failure. 	<p>Restart the cycle.</p>
dHE	<ul style="list-style-type: none"> • Check water supply. 	<p>Turn the tap on If “dHE” is not released, unplug power plug and call service.</p>

Terms of Warranty

What Is Not Covered:

- Service trips to your home to teach you how to use the product.
- If the product is connected to any voltage other than that shown on the rating plate.
- If the fault is caused by accident, neglect, misuse or Act of God.
- If the fault is caused by factors other than normal domestic use or use in accordance with the owner's manual.
- Provide instruction on use of product or change the set-up of the product.
- If the fault is caused by pests for example, rats or cockroaches etc..
- Noise or vibration that is considered normal for example water drain sound, spin sound, or warming beeps.
- Correcting the installation for example, levelling the product, adjustment of drain.
- Normal maintenance which recommended by the owner's manual.
- Removal of foreign objects / substances from the machine, including the pump and inlet hose filter for example, grit, nails, bra wires, buttons etc.
- Replace fuses in or correct house wiring or correct house plumbing.
- Correction of unauthorized repairs.
- Incidental or consequential damage to personal property caused by possible defects with this appliance.
- If this product is used for commercial purpose, it is not warranted.
(Example : Public places such as public bathroom, lodging house, training center, dormitory)

If the product is installed outside the normal service area, any cost of transportation involved in the repair of the product, or the replacement of a defective part, shall be borne by the owner.



جهاز الغسالة

دليل المالك

WD-14331(6)ADK

WD-12331(6)ADK

WD-15331(6)ADK

شكراً لشراء جهاز الغسالة الأوتوماتيكي الكامل من إل جي.
يرجى قراءة دليل المالك بعناية، وهذا يقدم التعليمات عن
التركيب بسلامة والتتشغيل والصيانة.
احفظ به كمرجع في المستقبل.
سجل رقم الموديل والرقم المسلسل لجهاز الغسالة.



الحماية من التجاوز

يُفضل دوران الحلة المتناوب ، يقال التجعيد للملابس.




■ الاقتصاد الأكثر بنظام الغسيل الذكي

نظام الغسيل الذكي يكشف كمية الملابس ودرجة حرارة الماء، ثم يقرر أفضل مستوى ماء ووقت الغسيل لتخفيض الطاقة والمياه الاستهلاكة.



إغلاق الطفل ■

نظام إغلاق الطفل يستخدم لمنع الأطفال عن الضغط على أي زر لتغيير برنامج أثناء التشغيل.



■ نظام التحكم في السرعة بضجيج منخفض

بالإشعار بكمية الغسيل وتوازنه، يتم توزيع الغسيل لتخفيض مستوى خمج ناجم عن التدوير.



■ نظام الدفع المباشر

محرك DC المتقدم بلا فراش يدير الحلة مباشرةً بدون حزام وبكرة.

3	التنبيهات
4	التركيب
5	المواصفات
6	التركيب
12	العناية قبل الغسيل
13	إضافة مادة التنظيف
15	الوظيفة
16	كيفية استخدام الغسالة
25	الصيانة
29	دليل تحري الخل وإصلاحه
32	شروط الضمانة

اقرأ جميع التعليمات قبل الاستخدام

من أجل السلامة، لا بد من إتباع التعليمات الموضحة في هذا الدليل لتخفيض خطر الاحتراق أو الانفجار، والصدمات الكهربائية، أو لمنع الخسائر المالية، جرح الشخص، أو تقصير العمر.

تنبيه !

التعليمات المهمة من أجل السلامة

تنبيه: لخفض خطر الاحتراق، والصدمات الكهربائية، أو جرح الشخص عند استخدام جهاز الغسالة، اتبع التحذيرات الأساسية بما فيها الأمور التالية:

- عمليات الغسيل قد تخفيض مقاومة الالتهاب للأقمشة.٪ لا تخصل أو تجفف الأشياء التي يتم تنظيفها، غسلها، نقها أو وضع النقاط عليها بالمواد القابلة للاشتعال أو الانفجار (مثل الشمع، والزيت، والدهان، والغازولين، ومزيل الشحم، و محلول التنظيف الجاف، والكيروسين، و....) الأمر قد يؤدي إلى اشتعال أو انفجار.
- لتجنب هذه النتيجة، اتبع تعليمات الغسيل والصيانة من قبل صانع الملابس بعناية.
- لا تضرر بباب الغسالة بعنف أو لا تحاول فتح الباب بقوة وهو مغلق. هذا قد يؤدي إلى إحداث ضرر في الغسالة.
- لتخفيض احتمال صدمات كهربائية، افصل قابس الجهاز عن مخرج التيار أو افصل جهاز الغسالة عن موزع الكهرباء في البيت بواسطة إزالة صمبة أو إيقاف قاطع الدائرة قبل محاولة أي صيانة أو تنظيف.
- لا تحاول تشغيل هذا الجهاز في حالة حدوث ضرر، عطل، لذك جزئي، أو فقد قطعة أو انكسار قطع، بما فيها سلك أو قابس متضرر.
- لا تركب أو تحفظ جهاز الغسالة في مكان معرض للمطر والرطوبة.
- لا تركب أو تحفظ جهاز الغسالة في مكان معرض للمطر والرطوبة.
- لا تعثب بلوحة التحكم.
- لا تصلح أو تبدل أي قطعة من جهاز الغسالة أو لا تحاول أي إصلاح باستثناء الحالة الموصى بها خاصة في تعليمات الصيانة للمستخدم أو تعليمات إصلاح المستخدم الصادرة التي تفهمها وتقوم بها بمهارة.
- اترك تحت الجهاز و حول الجهاز خاليًا من المواد القابلة للاشتعال مثل الكتان ، والورق ، والسجادة ، المواد الكيميائية ... الخ.
- الإشراف الدقيق مطلوب في حالة أن هذا الجهاز يعمل من قبل أو قريباً من الأطفال.
- لا تسمح للأطفال باللعب على ، مع ، أو داخل هذا الجهاز أو أي جهاز آخر.
- لا تترك باب جهاز الغسالة مفتوحاً.
- الباب المفتوح يغرى الأطفال للتعلق بالباب أو الدخول إلى داخل الجهاز.
- لا تلامس جهاز الغسالة أثناء التشغيل. انتظر حتى تتوقف الحلة عن العمل تماماً.

احفظ هذه التعليمات

تعليمات التوصيل الأرضي

- لا بد من التوصيل الأرضي لهذا الجهاز. في حالة حدوث عطل أو خلل، التوصيل الأرضي يخفيض خطر الصدمات الكهربائية بتقديم مزود مقاومة أقل للتيار الكهربائي. هذا الجهاز مزود بسلك ذي أداة التوصيل الأرضي للجهاز وقياس التوصيل الأرضي. لا بد من وصل القابس إلى مخرج تيار مناسب تم تركيبه وتوصيله الأرضي بشكل صحيح وفقاً لجميع المزود المحلية والأحكام.
- لا تستخدم محولاً أو إلا: لا يصلح قابس التوصيل الأرضي.
 - إذا لم يكن لديك مخرج التيار المناسب ، اتصل بفني كهربائي.

تنبيه: التوصيل غير الصحيح لإداة التوصيل الأرضي للجهاز قد يؤدي إلى إحداث خطر الصدمات الكهربائية. تأكيد من التوصيل الصحيح من قبل فني كهربائي مؤهل أو فني للخدمات في حالة أنك تشك في التوصيل الأرضي للجهاز. لا تعدل القابس المزود بالجهاز - إذا كان مخرج التيار غير مناسب، ركب مخرج التيار المناسب من قبل فني كهربائي مؤهل.

لتخفيف الخطير من الحرائق في مجفف دوّار ، لا بد من مراعاة الأمور التالية:

المواد التي هناك بقع فيها والناقة بالزيت النباتي أو زيت الطبخ قد تؤدي إلى إحداث خطير الحرائق ولا بد من عدم وضعها في مجفف دوّار.

المواد المتسخة بالزيت قد تشتعل فوراً ، خاصة عند تعرضها لمصادر الحرارة مثل في مجفف دوّار . والمواد تصبح دافئة ، وهي تسبب تفاعل الأكسدة في الزيت . والاكسدة تحدث الحرارة . إذا لم تخرج الحرارة ، قد تصبح المواد ساخنة كافية بحيث حدث حريق . تراكم أو حفظ المواد المتسخة بالزيت قد تمنع الحرارة من الخروج فيؤدي إلى خطير الحرائق.

إذا أضطررت إلى وضع الأقمصة المتسخة بزيت نباتي أو زيت الطبخ أو منتجات عنابة الشعر في مجفف دوّار ، لا بد من غسلها بالماء الساخن مع مسحوق الغسيل الأمر الذي يؤدي إلى تخفيف الخطير ولا يزييل الخطير . ودوره « البارد المنخفض » للمجفف الدوّار لا بد من استخدامها لخفض درجة الحرارة للمواد . ولا تخرجها من المجفف الدوّار أو تراكمها أو تحفظها أثناء حرارتها.

المواد التي يتم تنظيفها مسبقاً بالتبول/الجازولين ، محلول التنظيف الجاف أو الأشياء الأخرى القابلة للاشتعال أو المتفجرات ويتم غسلها ونقعها أو وسخها بها لا بد من عدم وضعها في مجفف دوّار.

تتم إزالة الأشياء القابلة للاشتعال العالي التي تستخدم عادة في البيئة المحلية بما فيها الأسيتون ، الكحول البديل ، البترول/الجازولين ، النفط الأبيض ، مزيجات البقع (بعض العلامات) ، التربنتين ، الشمع.

المواد المحتوية على المطاط الرغوي (كما يعرف بالمطاط الرغوي) أو المطاط المثيل لا بد من تجفيفها في مجفف دوّار على ضبط حرارة.

المواد من المطاط الرغوي في حالة تسخينها قد تحدث الحرائق بالاحتراق التلقائي.

ملين القماش أو المنتجات المثيلة لها لا بد من عدم استخدامها في مجفف دوّار لإزالة الكهرباء السكونية باستثناء أن ملين القماش خاصة موصي به من قبل صانع ملين القماش أو الجهاز.

الملابس الداخلية التي تحتوي على المعادن المقاومة لا بد من عدم وضعها في مجفف دوّار.

الأمر قد يؤدي إلى إحداثضرر في المجفف الدوّار في حالة أن المعادن المقاومة تصبح مرتخية أثناء التجفيف . وقد يستخدم رف تجفيف متوفّر لمثل هذه المواد.


المواد البلاستيكية مثل غطاء الدش أو منديل الطفل المضاد للماء لا بد من عدم وضعها في مجفف دوّار.

المواد المغطاة بالمطاط والملابس مع الحشية المطاطية الرغوية والوسادة والكالوش وأحذية التنس المغطاة بالمطاط لا بد من عدم وضعها في مجفف دوّار.

في حالة تركيب جهاز الغسالة في منصة مرتفعة ، لا بد من تثبيته بإحكام من أجل منع الخطير بحيث قد يبسق .

عندما تري التجفيف ، اختر هذا الزر.

المواصفات

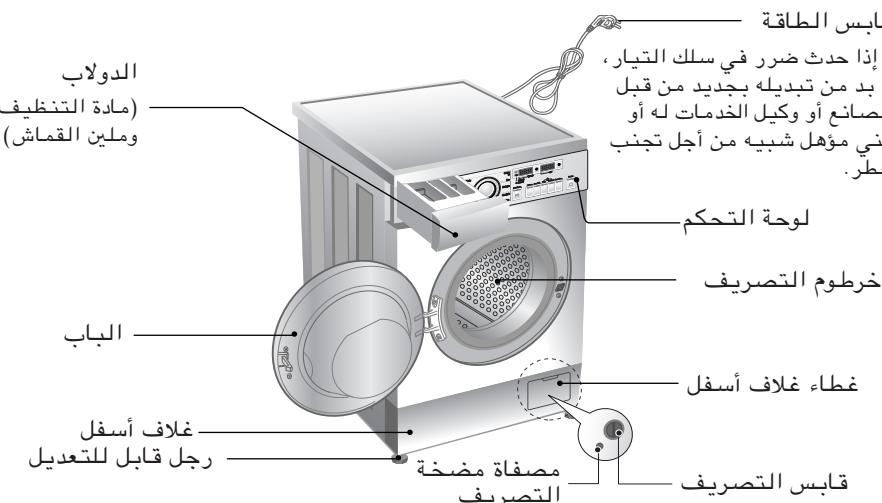

■ الاسم: جهاز الغسالة بالحمل الأمامي

■ الطاقة الكهربائية: 240-220 فولت ~ 50 هيرتز

■ الأبعاد: 600 ملم (عرض) × 550 ملم (عمق) × 850 ملم (ارتفاع)

■ الوزن: 61 كجم

■ سعة الغسيل: يرجى الرجوع إلى علامة التصنيف

■ سعة التجفيف: يرجى الرجوع إلى علامة التصنيف

■ سرعة التدوير: لا تجفيف/400/600/800/1000/1200 فرمي [WD-15331(6)ADK, WD-14331(6)ADK] 1400 فرمي [WD-12331(6)ADK]


■ سرعة التدوير: لا تجفيف/400/600/800/1000 فرمي [WD-12331(6)ADK] 1200 فرمي

■ استهلاك الماء: 147 لتر


■ ضغط الماء المسموح: 0,3 - 10 كجم.قوية/سم 2 (kPa 1000 - 30)

* التصاميم والمواصفات عرضة للتغيير بدون إشعار لتحسين جودة المنتجات.

■ الملحقات



خرطوم دخول الماء (1EA)



مفتاح الصمولة


ركب جهاز الغسالة أو احتفظها في مكان غير معرض لدرجة الحرارة أقل من درجة التجميد أو معرض للطقس. أعمل التوصيل الأرضي المناسب بالتأكيد من جميع الرموز الحكومية والأحكام. لا بد من عدم سد الفتحات تحت الجهاز بالسجادة في حالة تركيب جهاز الغسالة على أرض مغطاة بالسجادة.

في البلدان التي هناك فيها مناطق قد تعرّض لكثره المصوّر أو الحشرات الأخرى، خذ عناية خاصة من أجل الاحتفاظ ببنية الجهاز وحوله في جميع الأوقات. لا تغطي ضمانة هذا الجهاز أي ضرر قد تحدثه المصوّر أو الحشرات الأخرى.



■ مسامير النقل

ثم تثبيت الجهاز بواسطة مسامير النقل لمنع الجهاز عن حدوث ضرر داخل الجهاز أثناء النقل.

- يجب نزع صندوق الشحن ومسامير الترحيل كلها قبل استعمال الغسالة.

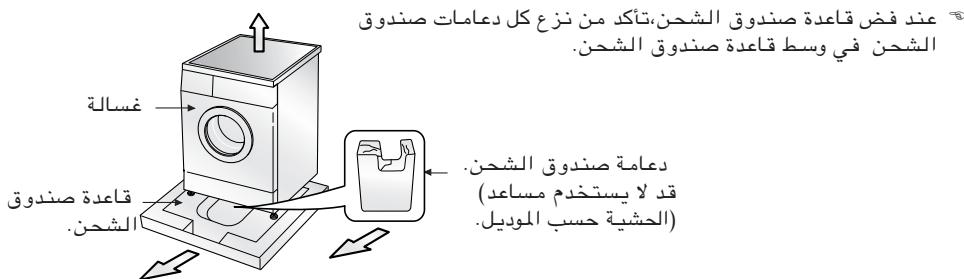

■ إزالة مسامير النقل

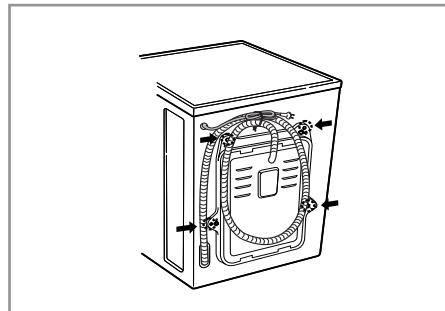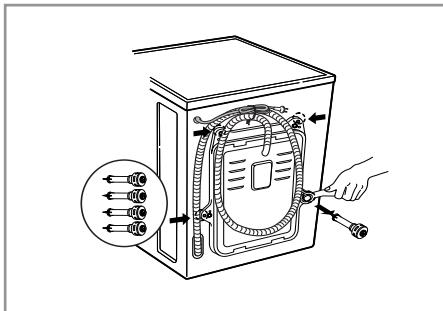

3. اسحب ٤ مسامير مع السدادات المطاطية للثقب بلوبيالسدادة بقليل. احفظ ٤ مسامير وملوي الصمولة لاستخدامها في المستقبل.

● كلما نقلت الجهاز، لا بد من تثبيت الجهاز بالمسامير مرة ثانية.

4. اغلق الفتحات بالأغطية المزودة.

1. لمنع حدوث ضرر داخل الجهاز أثناء النقل، تم تثبيت الجهاز بـ ٤ مسامير خاصة. قبل تشغيل الجهاز، ازل المسامير مع السدادات المطاطية للثقب.


● إذا لم تزلها، هذا قد يؤدي إلى إحداث اهتزاز شديد، وضجيج وعطل.

2. ارخ ٤ مسامير بواسطة مفتاح صمولة مزود بالجهاز.

■ متطلبات في مكان التركيب

- الارض المستوية :**
الانحدار المسموح تحت جهاز الغسالة كله 1 درجة .
- مخرج التيار :**
لا بد من وجوده في ضمن 1.5 متر من جانبي الغسالة. لا توصل إلا جهازا واحدا إلى مخرج التيار .
- المسافة الإضافية :**
من الجدار ، والباب ، والأرض المسافة المحددة مطلوبة .
(10 سم : خلف / 2 سم : جانبيين يمين ويسار)

لا تضع الملابس التي تغسلها أو تحفظها على أعلى جهاز الغسالة في أي وقت .
هي تؤثر على انتهاء الغسيل أو التحكم فيه .

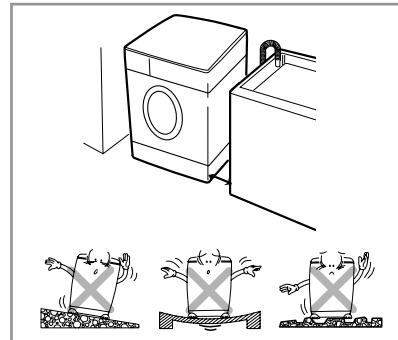

■ تحديد المكان

- تأكد من أن دوران الهواء حول الغسالة لا يعيق السجائر،بساط أو غيره .
- لا تحاول أبدا تصحيح أي مستوى على البلاط عن طريق قطع خشبية،ألواح خشبية أو مواد شبيه بذلك أسفل الغسالة .
- إذا استحال تحذب وضع الغسالة بالقرب من موقد غاز (فرن)أو موقد يعمل بالفحم،يجب وضع عازل(٩٨٢×٧٦٧×٦٨٦ سم) مغطى بورق المونيوم(فويل) على الجانب المواجه للفرن أو الموقد ، على أن يتم إدخاله بين الجهازين .
- يجب عدم تركيب الغسالة في غرف يمكن أن تنخفض درجة حرارتها إلى دون الصفر درجة مئوية .
- الرجاء التأكد عند تركيب الغسالة سهولة وصول فني الصيانة في حالة تعطلاها .
- مع تركيب الغسالة قم بتعديل الأقدام الأربع باستعمال مفتاح مسمار التر Higgins المزود للتأكد من استقرار الغسالة و وجود خلوص بمقدار ٢٠ ملم بين قمة الغسالة والجانب الأسفل للمحركات العليا .

■ التوصيل الكهربائي

- لا تستخدم سلكاً إضافياً أو محولاً مزدوجاً.
- إذا كان سلك التيار مضرراً، لا بد من تبديله بالجديد من قبل الصانع أو وكيل الخدمات له أو فني مؤهل شبيه من أجل تجنب خطر.
- انزع قابس الجهاز دائمًا وأغلق حنفية الماء بعد استخدام الجهاز.
- صل جهاز الغسالة إلى مخرج التيار الموصول أرضياً وفقاً لأحكام توصيل الأسلام.
- لا بد من وضع الجهاز بحيث يمكن توصيل القابس إلى مخرج التيار بسهولة.
- إصلاح جهاز الغسالة لا بد من القيام به من قبل الفني المؤهل. القيام بالإصلاح من قبل الفني غير المختص قد يؤدي إلى إصابة الشخص بالجرح أو العطل الخطير. اتصل بمركز الخدمات المحلي للـ.
- لا تركب جهاز الغسالة في الغرف التي تكون درجة الحرارة فيها أقل من درجة التجميد. الخرطوم المتجمد قد ينكسر بالضغط عليه. وقد تتقطع وحدة التحكم الإلكترونية في درجة الحرارة تحت نقطة التجميد.
- إذا تم نقل الجهاز في الأشهر الشتائية وكانت درجة الحرارة فيها أقل من نقطة التجميد: احفظ جهاز الغسالة في درجة حرارة الغرفة لمدة بعض ساعات قبل تشغيله.

تحذير

تحذير: بالنسبة لسلوك التيار الكهربائي، يوصى في معظم الأجهزة بوضع دائرة مخصصة، ذات منفذ أحادي والذي يزود التيار الكهربائي للجهاز فقط ولا يوجد به أي مثناة إضافية أو دوائر فرعية.

اقظر صفحة الموصفات في دليل المالك للتأكد.

لا تزيد حمل مثناة الطاولة.

فكل من مثناة الطاولة ذات الأحمال العالية، أو التالفة أو المرتخصية أو أسلاك التمديد أو الأسلاك الكهربائية البالية أو عزل الأسلاك التالفة أو المشقوق خطير.

ويعن أي من هذه الظروف أن تسبب صعق كهربائي أو اشتغال النار.

اقصر سلك التيار الكهربائي من سوء الاستخدام المادي أو الميكانيكي كأن يتم التوائه أو خرقه أو إغلاق الباب عليه أو المشي فوق.

يرجى مراعاة الانتباه عند التعامل مع القوابس ومنافذ الجدران وال نقطة التي يخرج السلك منها من الجهاز.

■ جهاز الغسالة لا بد من توصيله إلى حنفية الماء بواسطة مجموعة خراطيم جديدة ولا تستخدم مجموعة خراطيم قديمة.

■ توصيل خرطوم تزويد الماء

❖ لا بد من ضغط الماء من بين 30 و 1000 kPa (0.3-10 كجم.قوءة/سم²)

❖ لا تقصر أو تصلب الخيط عند توصيل خرطوم تزويد الماء إلى صمام الدخول.


❖ إذا كان ضغط الماء أكثر من 1000 kPa ، لا بد من تركيب إداة خفض الضغط.

● الختمان المطاطياني مزودان بخرطوم تزويد الماء وهذا من أجل منع تسرب الماء.

● تأكيد من توصيلات جهاز الغسالة بأحكام بفتح حنفية الماء تماماً.

● افحص حالة الخرطوم على فترات وبدل الخرطوم بجديد عند الحاجة.


● تأكيد من عدم وجود لي في الخرطوم وعدم ضغط الخرطوم.

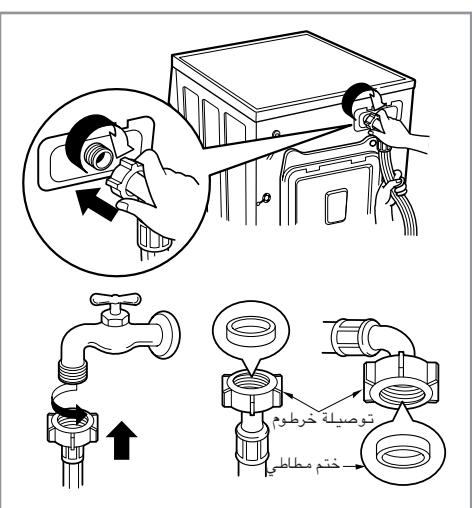

ملاحظة: بعد اكتمال التوصيل، في حالة تسرب الماء من الخرطوم، كرر نفس الخطوات. استخدم أكثر نوع من الحنفية سهولة لإمداد الماء. وفي حالة أن الحنفية مربعة أو كبيرة جداً، انزع حلقة الإبعاد قبل إدخال الحنفية إلى المحو.


■ حنفية عادية بدون خيط وخرطوم تزويد ماء من نوع براغي

- ادفع خرطوم تزويد الماء الى الأعلى عموديا بحيث تتصل الحشية المطاطية الموجودة داخل الخرطوم بالحنفية بإحكام ثم ثبته بتدوير البراغي الى اليمين.
- ادفع التوصيلة الى الأعلى حتى تتصل الحشية المطاطية بالحنفية بإحكام. ثم ثبت ة براغي.

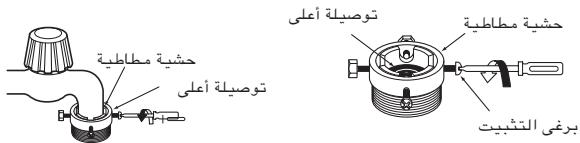

■ حنفية عادية بدون خيط وخرطوم تزويد ماء من نوع لسة واحدة

- صل خرطوم تزويد الماء الى التوصيلة الوسطى ، بدفع الصفيحة الى الأسفل.
- ادفع التوصيلة الاعلى الى الأعلى حتى تتصل الحشية المطاطية بالحنفية بإحكام. ثم ثبت ة براغي.

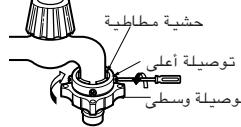


- لفصل خرطوم تزويد الماء عن التوصيلة الوسطى اغلق حنفية الماء. ثم اسحب خرطوم تزويد الماء الى الأسفل ، بدفع الصفيحة الى الأسفل.

- دور التوصيلة الوسطى لكي لا يتسرب الماء.
- تأكد من أن الختم المطاطي موجود داخل توصيلة الخرطوم.



- تأكد من أن عدم وجود لي في الخرطوم وأن الخرطوم غير مضغوط.

- ادخ براغي التوصيلة الأعلى



- في حالة أن قطر الحنفية أكبر من صفيحة الدليل.



الحنفية الأفقية مستخدمة



حنفية أفقية



حنفية إضافية



حنفية مربعة


هذا الجهاز غير مصمم للاستخدام على متن البحر أو للاستخدام في العربات المتحركة مثل القافلة والطائرة ... الخ.

اوقيف الحنفية في حالة عدم استخدام الجهاز لمدة طويلة (مثل الإجازة) ، خاصة ليس هناك الفتحة للتصرف (الأخدود) بالقرب.




عند طرد الجهاز ، اقطع الكابل الرئيسي ودمّر القابل واكسر قفل الباب لمنع الصغر من سقوطهم في داخل الجهاز.

مادة الحشية (مثل الأفلام والستيروفوم) قد تكون خطيرة للأطفال. هناك خطر الاختناق ! اترك جميع التغليفات جيدا على البعد عن الأطفال.

■ تركيب خرطوم التصريف

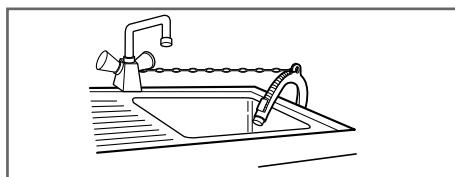

- عند تركيب خرطوم التصريف في البالوعة، ثبته بإحكام بواسطة حبل.
- تثبيت خرطوم التصريف المناسب يحمي الأرض من الضرر بسبب تسرب الماء.

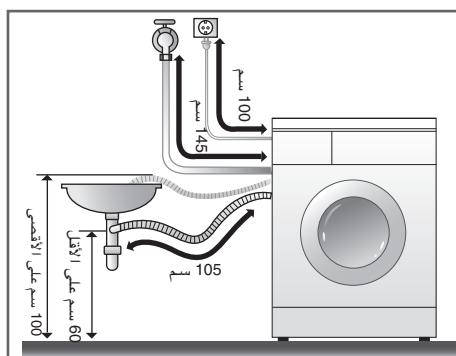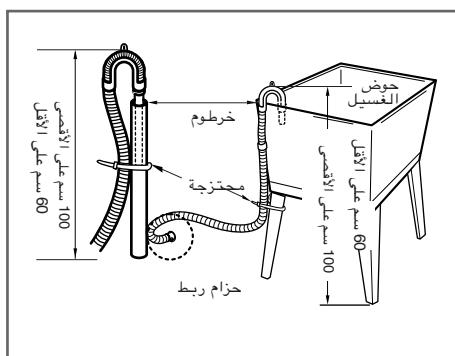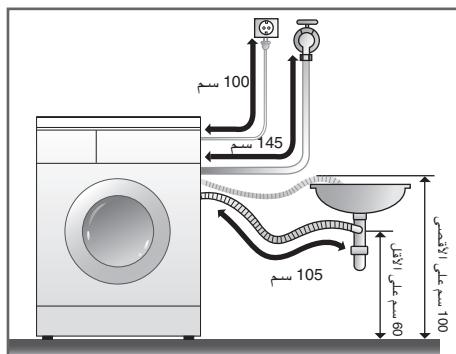

- لا بد من وضع خرطوم التصريف بارتفاع أعلى من 100 سم من الأرض.
- تثبيت خرطوم التصريف المناسب يحمي الأرض من الضرر بسبب تسرب الماء.
- في حالة أن خرطوم التصريف طويل جدا، يرجى عدم ملء الغسالة. هذا قد يؤدي إلى إحداث ضجيج غير عادي.


ضبط الاستواء

1. استواء جهاز الغسالة الصحيح يمنع **الضجيج والاهتزاز الشديد**. ركب جهاز الغسالة على أرض مستوية وثابتة ، والأفضل في زاوية الغرفة.



2. إذا كانت الأرض غير مستوية، أضبط الرجل القابل للتعديل كما تريده. (لا تدخل قطعة من الخشب .. الخ تحت الرجل) تأكيد من ثبات جميع أربعة أرجل ووضعها على الأرض ثم تأكيد من أن الجهاز مستوي تماما. (استخدم ميزان التسوية)

* بعد تعديل القدم، أحكم ربط صمولة الربط عن طريق تدويرها عكس اتجاه دوران الساعة.

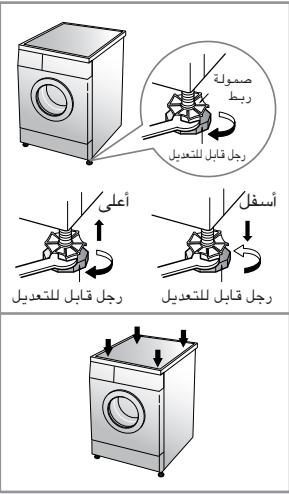

* **الفحص القطري**
عند الضغط على حافة أعلى جهاز الغسالة قطريا، لا بد من عدم تحرك جهاز الغسالة الى الاعلى والأسفل أبدا.
(يرجى فحص كلا الاتجاهين)
إذا تحرك جهاز الغسالة عند الضغط على أعلى جهاز الغسالة قطريا، أضبط الأرجل من جديد.

بلاط مسلح (قرميد...)

• يجب أن يكون سطح التركيب نظيفا، جافا ومستويا.
• ركب الغسالة على بلاط صلب مسلح.

الأرض من القراميد (الأرض الثالثة)

• ضع كل قدم من الجهاز على كل مسند لها وعدل استواء الجهاز مناسبا (قطع مسند قدم بـ 70×70 ملم)
والقص القطع على القرميد الجافة بحيث الجهاز موجود).

* مسند القدم صنع من المادة اللاصقة الذاتي التي تستخدم على السلايلم والخطوات المضادة للزلق .
كوب مطاطي



أرضية خشبية

• الأرضية الخشبية يمكن أن تؤدي إلى الاهتزاز.
• لمنع الاهتزاز نوصيك بوضع أكواب مطاطية أسفل كل قدم، بسمك 15 ملم على الأقل أسفل الغسالة، على أن يتم التثبيت باثنين من بلاط مسلح مع مسامير.
• إذا كان ممكنا، ركب الغسالة على إحدى زوايا الغرفة، حيث يكون البلاط أكثر ثباتا.
* أدخل الأكواب المطاطية لخفض الإهتزاز.
* يمكنك الحصول على الأكواب المطاطية. (بي/رقم قطع غيار ال جي 4620ER4002B) من قسم هام!

- تحديد مكان الغسالة وتسويتها يؤكد تشغيل أطول ومعتمد ومنتظم.
- يجب أن تكون الغسالة في وضع أفقى بالكامل وأن تكون في وضع معتمد بالكامل.
- يجب عدم «أرجحة» كل الزوايا تحت التحميل.
- يجب أن يكون سطح التركيب نظيفا، خاليا من شمع البلاط وأى طلاء لزج.
- لا تترك قدم الغسالة تتبلل. إذا أصبحت قدم الغسالة متبللة، قد يحدث زلتها.

■ قبل الغسيل الأول

اختن دوره (قطن 60° م و اضف نصف حمل من مسحوق الغسيل) تسمح للوحدة بالغسيل بدون وضع ملابس. هذا يزيل الرواسب من الطبل التي قد تبقى أثناء إنتاج الجهاز.

■ العناية قبل الغسيل

1. رقعة العناية

ابحث عن رقعة العناية الموجودة في ملابسك. هذه الرقعة تعرفك محتويات الأقمشة لملابسك وكيفية غسلها.

2. الفرز

للحصول على أفضل نتائج، افرز الملابس إلى نوع يمكن غسلها بدوران نفس الغسيل. درجة حرارة الماء وسرعة التدوير والأقمشة المختلفة مطلوبة لغسلها بطرق مختلفة.

افرز دائمًا الملابس باللون الغامق من الملابس باللون الخيف والملابس البيضاء. غسل الملابس منفصلة بين الملابس المصبوغة والملابس الكتانية وقد يحدث تحويل اللون للملابس البيضاء ... الخ. إذا أمكن، لا تغسل الملابس الشديدة الوسخ مع الملابس الخفيفة الوسخ.


وسخ (شديد ، عادي ، خفيف) لون (أبيض ، خفيف ، غامق) افضل الملابس البيضاء عن الأقمشة الملونة كتان (منتجات كتانية ، جامع كتان) اغسل منتجات كتانية وملابس يجمع الكتاب انصالا.

3. العناية قبل العمل


ضع الملابس الكبيرة والصغيرة معا. في هذه الحالة، ضع الملابس الكبيرة أولا. لا بد من عدم وضع الملابس الكبيرة أكثر من نصف كل الحمل.

لا تغسل الملابس الفردية. هذا قد يؤدي إلى عدم التوازن في الحمل. اضف قطعة أو قطعتين متشابهتين.


● افحص جميع الجيوب للتأكد من أنها فارغة. الأشياء مثل المسامير ، ومشبك الشعر ، وعود الثقب ، الأقلام ، والقطع المعدنية والمفاتيح قد تؤدي إلى إحداث ضرر في كلي جهاز الغسالة والملابس.

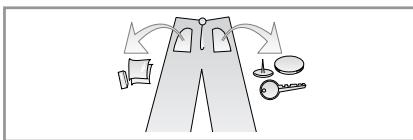


● اغلق السحاب ، الخطاف ، والحبال للتأكد من أن هذه المواد لا تتعلق بالملابس الأخرى.

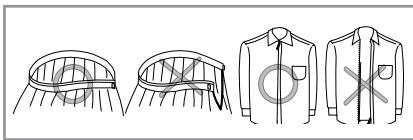

● امسح الوسخ والبقع بواسطة فرشاة مع سائل الغسيل القليل بماء على الوسخ مثل الياءة والكم للمساعدة في إزالة الوسخ.

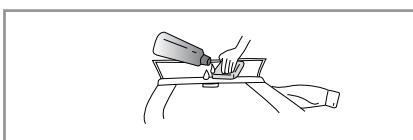

● افحص الطيات للحشية المرنة (رمادية) وانزع أي أشياء صغيرة إذا كانت موجودة. ● افحص داخل الحوض وانزع أي أشياء موجودة داخله من أجل دوره الغسيل القادمة.

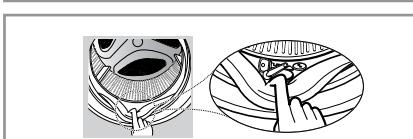


● اخرج أي ملابس أو أشياء في الحشية المرنة لمنع الملابس والخشية من الأضرار.



■ إضافة مادة التنظيف وملين القماش


1. دوّلاب التوزيع

- الغسيل الرئيسي فقط ← (١١)
- الغسيل الأولي + الغسيل الرئيسي ← (١٢/١٣)

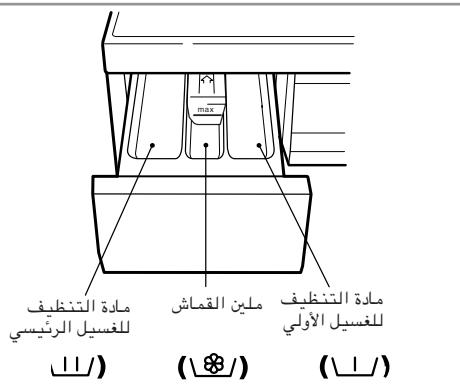

2. إضافة ملين القماش

- لا تملأ ملين القماش أكثر من الخط الأقصى للملء.
- الإفراط في الملء قد يؤدي إلى توزيع ملين القماش الذي يوسع الملابس.
- لا تترك ملين القماش في دوّلاب مادة التنظيف لمدة أكثر من يومين.
- (ملين القماش قد يتصلب)
- تتم إضافة ملين القماش أثناء آخر دوران من الشطف أوتوماتيكيا.
- لا تفتح الدوّلاب أثناء توزيد الماء.
- المحلولات (بنزين ... الخ) غير مسموحة.

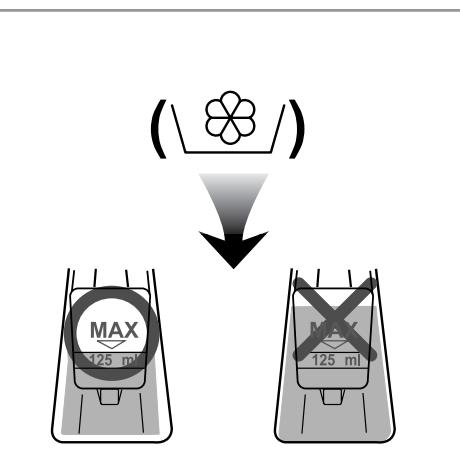

ملاحظة : لا تصب ملين القماش على الملابس مباشرة.


3. جرعة مادة التنظيف

- * **اللمحات**
 - الحمل الكامل** : وفقاً لنصائح الصانع.
 - الحمل الجزئي** : 4/3 من الكمية العادلة
 - الحمل الأدنى** : 2/1 من الحمل الكامل
 - تتدفق مادة التنظيف من الموزع في بداية الدوران.


- لا بد من استخدام مادة التنظيف وفقاً لتعليمات مادة التنظيف من قبل الصانع.
- إذا استخدمت كمية من مادة التنظيف أكثر من الكمية الموصى بها، قد تحدث الرغوة الكثيرة جداً وهذا يخضن كفاءة الغسيل أو يؤدي إلى الحمل الثقيل للموتور (يؤدي إلى العطل).

5. استخدام الأقراص.

- ١) افتح الباب ووضع الأقراص في الحوض.

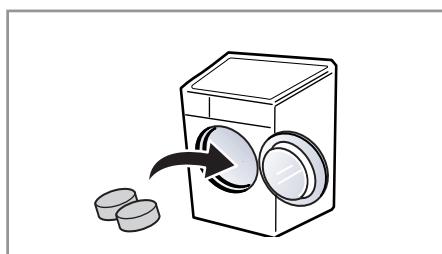


٢) ضع الملابس في الحوض.

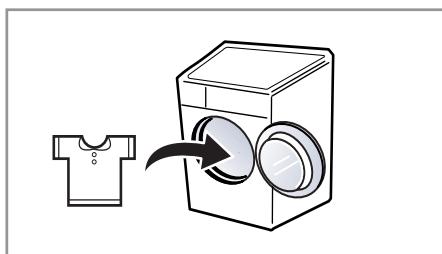

٣) اغلق الباب.

- كمية مادة التنظيف يمكن تعديلاً حسب درجة حرارة الماء، ونوع الماء، وكمية الملابس، ومستوى الوسخ للملابس. من أجل أفضل نتائج، تجنب الرغوة الزائدة.

4. منقى الماء

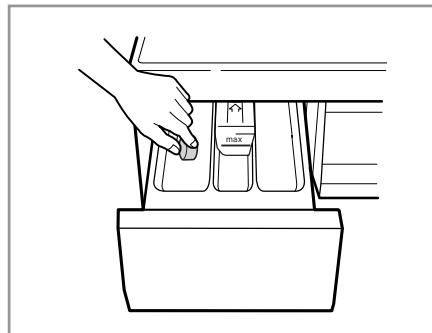

- منقى الماء مثل الكالجون يمكن استخدامه لخفض كمية من مسحوق الغسيل في مناطق فيها الماء العسير للغایة. وزعه وفقاً للكمية المبينة في العلبة. واضف مسحوق الغسيل أولاً ثم منقى الماء.

- استخدم كمية من مسحوق الغسيل لتنقية الماء.


■ الدوران الموصى به وفقا لنوع الغسيل

حمل أقصى	اختياري	درجة حرارة مناسبة	نوع القماش	البرنامج
مقدار		٩٥° م	افحص إذا كان الغسيل بالجهاز ممكنا أم لا. (قطن أبيض، منشفة كتانية، أغطية)	القطن
مقدار	الغسيل الأولي + شطف الكثيف انتظار الشطف التجفيف	٦٠° م (٣٠° م، ٤٠° م - ٦٠° م اقتصادي)	ملابس ثابتة اللون (قمصان، ثياب النوم، بيجاما...) وقطن أبيض خفيف وسخ (ملابس الداخلية)	
أقل من ٤,٠ كجم		٤٠° م (٣٠° م، ٦٠° م)	بوليمايد، أكلييليك، بوليستير	الاصطناعي
أقل من ٣,٠ كجم		٣٠° م (٤٠° م، بارد)	ملابس رقيقة وسهلة الضرر	الرقيق
أقل من ٢,٠ كجم	شطف + انتظار الشطف الكثيف	٣٠° م (٤٠° م، بارد)	الصوف القابل للغسيل في جهاز الغسالة مع الصوف الخالص الجديد فقط	الصوف /الحرير
أقل من ٢,٠ كجم		بارد (٣٠° م)	الملابس الرقيقة والصوفية بعلامة « الغسيل اليدوي »	الغسيل اليدوي
أقل من ٤,٠ كجم		٣٠° م	الملابس الملونة الخفيفة الوسخ	السريع ٣٠

* الغسيل الأولي : للملابس ثقيلة الوسخ، دوران « الغسيل الأولي » مفید. الغسيل الأولي يستخدم في برنامج الملابس الملونة والبيضاء والاصطناعية.

* الكثيف : إذا كانت الملابس متسخة بالوسخ الثقيل، من الأفضل استخدام « الكثيف » الاختياري.

* درجة حرارة الماء : اختر درجة حرارة الماء لدوران الغسيل. اتبع دائمًا توصيات صانع الأقمشة أو التعليمات عند الغسيل.

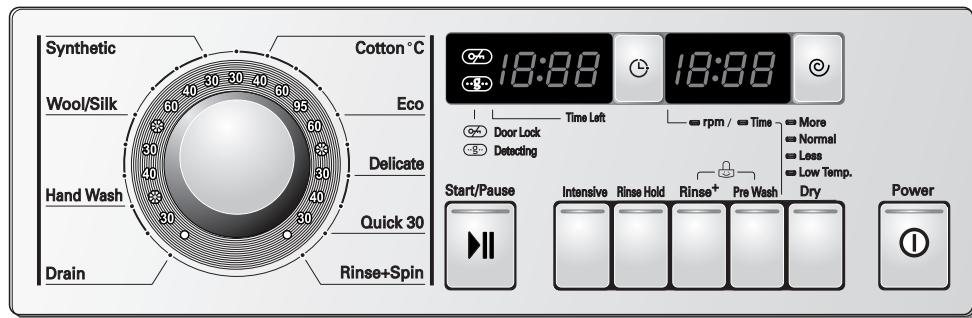

2. الاختيار اليدوي

- اضغط على زر Power لتشغيل الجهاز.
- اختر الأحوال التي تريده استخدامها، بتدوير حلقة البرنامج والضغط على كل زر لاختيار كل حالات الغسيل، يرجى مراجعة صفحات من 17 وحتى 24.
- اضغط على زر التشغيل/التوقيت.

1. للستخدام في البرنامج الأساسي(القطن)

- اضغط على زر Power لتشغيل الجهاز.
- اضغط على زر التشغيل/التوقيت المؤقت .
- الحالة الأساسية
 - الغسيل : الغسيل الرئيسي
 - الشطف : 3 مرات
 - التجفيف :

1400 دورة في الدقيقة
[WD-15331(6)ADK, WD-14331(6)ADK]

1200 دورة في الدقيقة
[WD-12331(6)ADK]

- درجة حرارة الماء : 60° م
- البرنامج : القطن


كيفية استخدام الغسالة



الاختياري

3. شـطـفـ +

- استخدام الشطف الإضافي قد يساعد على إزالة رواب مسحوق الغسيل.
- باختيار وظيفة شطف + ، يزيد وقت الشطف وماء الشطف.

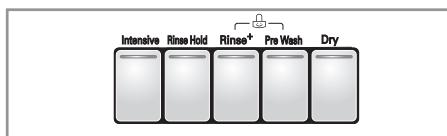

- بالضغط على زر الاختياري، يمكنك اختيار وظيفة الاختياري.

– الغـسـيلـ الأولـيـ
– شـطـفـ +
– الكـثـيفـ
– التـجـفـيفـ
– اـنتـظـارـ الشـطـفـ

4. الغـسـيلـ الأولـيـ

- إذا كانت الملابس شديدة الوضخ، دوران « الغـسـيلـ الأولـيـ » مفيد.
- الغـسـيلـ الأولـيـ يستخدم في برنامج القطن والاصطناعي. إذا أضـيـ المؤـشـرـ، يـتـمـ اختيارـ هذهـ الوـظـيفـةـ.

5. التـجـفـيفـ

- عندما تـريـدـ التـجـفـيفـ، اـخـتـرـ هـذـاـ الزـرـ.
- قـابـلـ لـلاـسـتـخـدـمـ لـالـقـطـنـ وـالـاـصـطـنـاعـيـ.
- يـرجـىـ مـلـاحـظـةـ أـنـ سـعـةـ التـجـفـيفـ 3,5ـ كـمـ.
- وـيـرجـىـ إـخـرـاجـ الـمـلـابـسـ الـرـائـدـةـ بـعـدـ غـسـيلـهاـ الـكـامـلـ قبلـ الـبـدـءـ بـالـتـجـفـيفـ وـتـأـكـدـ مـنـ أـنـ حـنـفـيـةـ الـبـارـدـ مـفـتوـحةـ.

1. الكـثـيفـ

- إذا كانت الملابس متـسـخـةـ بـالـوـسـخـ الثـقـيلـ، منـ الأـفـضلـ استـخـدـمـ «ـالـكـثـيفــ»ـ الاـخـتـيـارـيـ.
- باـخـيـارـ الكـثـيفـ الاـخـتـيـارـيـ، فـيـزـيـدـ وقتـ الغـسـيلـ حـسـبـ البرنامجـ المـخـتـارـ.

2. اـنتـظـارـ الشـطـفـ

- إذا أـرـدـتـ أـنـ تـرـكـ الـمـلـابـسـ فـيـ جـهـازـ الغـسـالـةـ بـدـوـنـ تـجـفـيفـ بـعـدـ الشـطـفـ لـمـنـهـاـ مـنـ التـجـفـيفـ، يـمـكـنـكـ اـخـتـيـارـ وـظـيـفـةـ اـنتـظـارـ الشـطـفـ بـالـضـغـطـ عـلـىـ زـرـ التـجـفـيفـ.

- مـنـ أـجـلـ عـمـلـيـاتـ التـصـرـيفـ أوـ التـجـفـيفـ، عـنـدـ اـكـتمـالـ وـظـيـفـةـ اـنتـظـارـ الشـطـفـ بـاستـخـدـمـ حـلـقـةـ الـبـرـنـامـجـ يـجـريـ الـبـرـنـامـجـ الـمـطـلـوبـ.

التجفيف



[WD-12331(6)ADK]



[WD-14331(6)ADK,
WD-15331(6)ADK]

1. اختيار التجفيف

[WD-15331(6)ADK, WD-14331(6)ADK]

٢٠ - القطن ، الشطف + التجفيف ، السريع 1400-1200-1000-800-600-400-
لا تجفيف-
-الرقيق 800-600-400-
لا تجفيف-

-الاصطناعي ، الصوف/الحرير ، الغسيل
اليدوي

1000-800-600-400-
لا تجفيف-

[WD-12331(6)ADK]

٢٠ - القطن ، الشطف + التجفيف ، السريع 1200-1000-800-600-400-
لا تجفيف-

-الرقيق
لا تجفيف- 800-600-400-

-الاصطناعي ، الصوف/الحرير ، الغسيل

اليدوي

1000-800-600-400-
لا تجفيف-

2. لا تجفيف

● إذا تم اختيار « لا تجفيف » ، يتوقف جهاز الغسالة عن العمل بعد تصريف الماء.

إذا أصيئ المؤشر ، يتم اختيار الوظيفة.

● بالضغط على زر التجفيف، يمكنك اختيار سرعة التجفيف.



● التجفيف فقط:

(1) اضغط على زر الطاقة.

(2) اختر سرعة التجفيف المرغوبة بتدوير حلقة التجفيف. واضغط على زر التشغيل/التوقف المؤقت.


(3) اضغط على زر التشغيل/التوقف المؤقت.

إغلاق الطفل




إذا أردت إغلاق جميع الأزرار لمنع طفل أو معوقين عن تشغيل ، يمكنك استخدام هذه الوظيفة.

● يمكنك ضبط إغلاق الطفل بالضغط على زر درجة Rinse+ و زر Pre Wash في نفس الوقت (حوالي ثلث ثوان)




● عند ضبط وظيفة إغلاق الطفل ، لا تعمل جميع الأزرار باستثناء زر الطاقة .

● لإلغاء نظام إغلاق الطفل، ابق ضاغطا على زر Pre Wash و زر Rinse+ في نفس الوقت (حوالي ثلث ثوان) مرة ثانية. (حوالي ثلث ثوان)




● إذا أردت تغيير البرنامج في حالة عمل وظيفة إغلاق الطفل.

1. ابق ضاغطا على زر Pre Wash و زر Rinse+ معا. (حوالي ثلث ثوان)
2. اضغط على زر التشغيل/التوقف المؤقت .
3. غير البرنامج المطلوب واضغط على زر التشغيل/التوقف المؤقت .

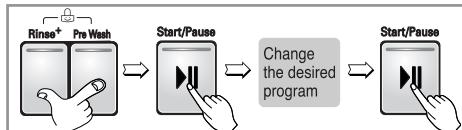

● يمكنك ضبط وظيفة إغلاق الطفل في أي وقت ويتم إلغاء إغلاق الطفل أوتوماتيكيا في حالة حدوث الخطأ في التشغيل. كما تعمل وظيفة إغلاق الطفل في حالة انطفاء الطاقة.

درجة حرارة الماء

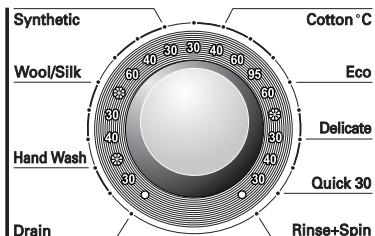

● بواسطة قرص البرنامج، يمكنك اختيار درجة حرارة الماء.

- بارد 30 ° م / 60 ° م / 95 ° م -

● يمكنك اختيار درجة حرارة الماء وفقا للبرنامج.

يضاً مؤشر درجة حرارة الماء المختارة. لمزيد من المعلومات بتفاصيل، يرجى مراجعة صفحة 14.

1. دليل التجفيف التلقائي

التجفيف

● استخدم الدورة التلقائية لتجفيف معظم الملابس.

المشعر الإلكتروني يستشعر بدرجة الحرارة لرفع أو خفض درجة الحرارة للتجفيف من أجل وقت رد فعل أسرع وتحكم أدق في درجة الحرارة.

● دورة التجفيف التلقائي الموصى بها حسب نوع من الملابس.

(أ) اختيار الاصطناعي - درجة الحرارة المنخفضة

(ب) إذا أردت كهو الملابس - أقل

(ج) لاختيار القطن - عادي

(د) لاختيار المناصير القابلة الغسيل

ملاحظة : وقت التجفيف المقيم يختلف من وقت التجفيف الحقيقي ببرنامج تلقائي. ويتم اختيار نوع القماش وحجم الحمل والجفاف بعد وقت التجفيف.


ملاحظة : سعة التجفيف

لهذا الموديل 3,5 كغم.

يرجى إخراج الملابس

الزائدة قبل البدء بدورة

التجفيف.

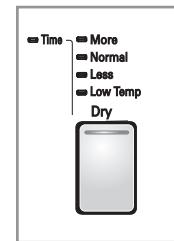

● يعمل جهاز الغسالة - التجفيف


أوتوماتيكيا من دورة الغسيل وحتى دورة التجفيف بسهولة اختيار.

● للتجفيف المتساوي الأكثر، تأكيد من أن جميع القطع من الملابس متشابهة في المادة والسمكية.

● لا تضع كمية كبيرة من الملابس في حلة الغسالة. لا بد من تحريك الملابس حرقة.

● إذا فتحت الباب وأخرجت الملابس قبل إنتهاء جهاز التجفيف لدورته، لا تنس الضغط على زر التشغيل/التوقف المؤقت.

● بالضغط على زر التجفيف، يمكنك اختيار



● بعد إنتهاء التجفيف، يعرض «  » .

ويمكنك إنتهاء البرنامج بالضغط على زر «  » التشغيل/التوقف المؤقت». إذا لم تضغط على زر «  » التشغيل/التوقف المؤقت، ينتهي البرنامج بعد حوالي 4 ساعات.

«  » دورة التبريد

2 . دليل وقت التجفيف

- الملابس الـلـيفـيـة أو الجـلـديـة**
 - تـأـكـدـ من تعـلـيمـاتـ الصـانـعـ دائـئـماـ.
- ملابسـ الـأـطـفـالـ وـالـنـانـمـةـ**
 - تـأـكـدـ من تعـلـيمـاتـ الصـانـعـ دائـئـماـ.
- الملابسـ الـمـطـاطـيـةـ الـبـلـاستـيـكـيـةـ**
 - لا تـجـفـفـ أيـ مـلـابـسـ مـصـنـوعـ أوـ مـحـتـويـ عـلـىـ جـزـءـ مـنـ الـمـطـاطـ أوـ الـبـلـاسـتـيـكـ مـثـلـ:
 - (أـ)ـ الـمـئـزـرـ ،ـ الصـدـرـيـةـ ،ـ غـطـاءـ الـكـرـسـيـ.
 - (بـ)ـ الـسـتـائـرـ وـأـغـطـيـةـ الـطاـوـلـةـ
 - (جـ)ـ حـصـيرـ الـحـمـامـ
 - لا تـجـفـفـ الملـابـسـ الـلـيفـيـةـ الـزـاجـاجـيـةـ فـيـ جـهـازـ التـجـفـيفـ

الـجـيـزـيـاتـ الـزـاجـاجـيـةـ الـبـاـقـيـةـ فـيـ جـهـازـ التـجـفـيفـ قدـ تـلـتـحـقـ بـالـلـابـسـ الـتـيـ يـتـمـ تـجـفـيفـ فـيـ جـهـازـ فـيـ الـمـرـةـ الـقـادـمـةـ وـقـدـ تـخـشـطـ بـشـرـتـكـ.

3 . إكمـالـ التـجـفـيفـ

- عند انتهاء دورة التجفيف، يعرض "L" (البريد) على Multi display (العرض المتعدد).
- يتم ضبط COOL DOWN (البريد) أوتوماتيكياً عند انتهاء دورة التجفيف.
- في حالة أنك لا تخرج الملابس من جهاز التجفيف فوراً عند إيقاف الجهاز، قد تحدث التجاعيد.
- تقوم وظيفة COOL DOWN (البريد) أوتوماتيكياً مؤقتاً بهز الملابس وإعادة ترتيبها وزగبها للتجنب التجاعيد بدون تسخينها لمدة حتى 4 ساعات.
- تبقى رسالة "L" على العرض حتى يتم إخراج الملابس أو الضغط على زر التشغيل/التوقيف المؤقت.

- بالضغط على زر التجفيف، يمكنك اختيار وقت التجفيف.
- يمكن استمرار دورة التجفيف لمدة حتى 150 دقيقة. عند اختيار التجفيف فقط، يبدأ الجهاز بدورة التجفيف بعد التدوير.
- أوقات التجفيف هذه تتبع في دليل لمساعدتك على ضبط جهاز التجفيف من أجل التجفيف اليدوي.
- وقد تختلف أوقات التجفيف وفقاً لدرجة الرطب، ودرجة حرارة الغرفة ونوع القماش وخبراتك في هذا تكون أفضل دليل لك.

الملابس الصوفية

- لا تهز الملابس الصوفية. اخرجها بشكلها الأصلي ، وقفّها على الأرض المستوية.


الملابس الصوفية والمحبوكة

- قد تقتصر بعد الملابس الصوفية والمحبوكة، وتختلف كميتها وفقاً لنوعيتها.
- مددّها دائماً فوراً بعد التجفيف.

الملابس بالضغط الدائم والإصطناعي

- لا تضع هذه الملابس كثيرة في جهاز الغسالة.
- اخرج الملابس بالضغط الدائم فوراً عند إيقاف جهاز التجفيف من أجل خفض التجاعيد.


البرنامح

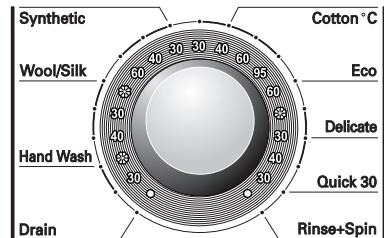

- تستخدم 8 برامج وفقا لنوع الملابس.
- سيضاء المؤشر للإشارة الى البرنامج المختار.
- عند الضغط على زر التشغيل/التوقف المؤقت، يتم اختيار برنامج القطن أوتوماتيكيًا.
- بالضغط على زر البرنامج، يتم اختيار البرنامج بالترتيب « القطن — الرقيق — السريع ٣٠ — الشطف + التجفيف — المضخة — الغسيل اليدوي — الصوف/الحرير — الاصطناعي.

لمعرفة نوع الملابس لكل برنامج، يرجى مراجعة صفحة ١٥.

تأجيل الوقت



- الإجراءات الاستعدادية للغسيل قبل تشغيل « تأجيل الوقت »
- افتح حنفيه الماء.
- ضع الملابس واغلق الباب.
- ضع مادة التنظيف وملين القماش في الدوّاب.

- كيفية ضبط « تأجيل الوقت »
- اضغط على زر Power.
- اضغط على زر Program لاختيار البرنامج المطلوب.
- اضغط على زر Time Delay واضبط الوقت المرغوب فيه.
- اضغط على زر التشغيل/التوقف المؤقت.
- (توضى «)

- إذا ضغطت على زر Time Delay ، تعرض « ٠٠:٣ » على زجاج العرض. وأقصى وقت للتأجيل ١٩ ساعة وأدنى وقت من التأجيل ٢ ساعات.

- كلما ضغطت على الزر يزيد وقت التأجيل بواقع ساعة.

- لإلغاء تأجيل الوقت ، اضغط على زر Power.
- وقت التأجيل هو « وقت مقدر » من انتهاء دوران الغسيل أو العمليات المختارة.
- وفقاً لحالة توزيد الماء ودرجة الحرارة، تأجيل الوقت ووقت الغسيل الحقيقي قد يختلف.

الطاقة



1. الطاقة

- اضغط على زر الطاقة لتشغيل/إيقاف الجهاز.
- لإلغاء وظيفة التشغيل/التوقيف المؤقت، يمكنك استخدام هذا الزر.

2. البرنامج الأساسي

- عند الضغط على زر الطاقة، جهاز الفسالة مستعد لدوران الملابس الملونة. والحالات الأساسية الأخرى كما يلي.
- إذا أردت الاستمرار في دوران الغسيل بدون اختياري برنامج، اضغط على زر التشغيل/التوقيف المؤقت فقط ثم يبدأ جهاز الغسالة بالعمل.

البرنامج الأساسي

WD-15331(6)ADK, WD-14331(6)ADK

- برنامج القطن / الغسيل الرئيسي / الشطف العادي / 1400 دورة في الدقيقة / 60° م

WD-12331(6)ADK

- برنامج القطن / الغسيل الرئيسي / الشطف العادي / 1200 دورة في الدقيقة / 60° م

التشغيل/التوقيف المؤقت



1. التشغيل

- زر التشغيل/التوقيف المؤقت هذا يستخدم لتشغيل دوران الغسيل أو التوقف المؤقت من هذا الدوران.

2. التوقف المؤقت

- إذا أردت توقف الجهاز مؤقتاً عن دوران الغسيل، اضغط على زر التشغيل/التوقيف المؤقت.
- بعد الضغط على زر التوقف المؤقت بدون ضغط على أي زر، يتوقف الجهاز عن العمل أوتوماتيكياً بعد 4 دقائق.

ملاحظة : لن يفتح الباب لمدة دقيقة أو دقيقتين بعد اختيار التوقف المؤقت، أو عند نهاية دوران الغسيل .

قفل الباب



- يضاء كلما يتم قفل الباب للغسالة.
- يمكنك إلغاء قفل الباب بالضغط على زر التشغيل/التوقيف المؤقت لإيقاف الغسالة عن العمل.
- يمكنك فتح الباب بعد تأجيل لمدة قصيرة.

كشف




- أثناء ظهور "كشف" في العرض، يعمل الجهاز ببطء ويكشف كم عدد من الملابس الموضوعة في حوض الغسيل. ويستغرق هذا بعض ثوان.
- متوفّر في القطن ، الاصطناعي

العرض

3. انتهاء الغسيل

- عند انتهاء دوران الغسيل، يعرض "٥٨٧" على العرض المتعدد.



4. الوقت المتبقى

- أثناء دورة الغسيل، يظهر الوقت المتبقى لعملية الغسيل على العرض.
- البرنامج الموصى به من الصانع.

❖ () : WD-12331(6)ADK

- القطن ٩٥ م : حوالي ساعتين و١٩ (١٧) دقيقة
- القطن ٦٠ م : حوالي ساعة و٤٢ (٤٠) دقيقة
- الاصطناعي : حوالي ساعة و٢٠ دقيقة
- الرقيق : حوالي ٥٢ دقيقة
- الصوف/الحرير : حوالي ٥٠ دقيقة
- الغسيل اليدوي : حوالي ٤٤ دقيقة
- السريع ٣٠ : حوالي ٣٠ دقيقة
- الشطف + التجفيف : حوالي ٢٠ (١٨) دقيقة
- المضخة : حوالي ١ دقيقة

- قد يختلف وقت الغسيل تبعاً لحجم حمل الغسيل وضغط الماء ، ودرجة حرارة الماء وظروف الغسيل الأخرى.
- إذا ظهر اختلال في التوازن أو إذا عمل برنامج إزالة الرغوة ، يزيد طول فترة الغسيل. (وقت الزيادة على الأقصى ٤٥ دقيقة)

1. عرض الوظيفة الخاصة

- عند اختيار إغلاق الطفل، يظهر مؤشر "١٧" على زجاج العرض.
- عند انتهاء دورة التجفيف، يعرض "٥٨٧" (التبريد) على العرض المتعدد.
- عند اختيار تأجيل الوقت، هذا يشير إلى الوقت المتبقى لانتهاء البرنامج المختار.

2. عرض التشخيص الذاتي

- إذا حدثت مشكلة في الغسالة ، يعرض نوع المشكلة.

- ٤٤ : خطأ في الإشعار بضغط الماء
- ٤٤ : مشكلة فيضان الماء
- ٤٤ : الباب غير مغلق
- ٤٤ : الحمل الزائد على الموتور
- ٤٤ : الحمل الزائد في الموتور
- ٤٤ : المشكلة في مدخل الماء
- ٤٤ : المشكلة في التصريف
- ٤٤ : مشكلة عدم التوازن
- ٤٤ : مشكلة درجة حرارة الماء
- ٤٤ : قد حدث انقطاع الكهرباء في جهاز الغسالة.

- ٤٤ : مشكلة في سخان جهاز التجفيف أو الترموموستات.


إذا عرضت حروف الأخطاء هذه ، يرجى مراجعة دليل تحرى الخلل وإصلاحه الموجود في صفحة 29 واتبع الدليل.

- * قبل تنظيف الأسطح الداخلية لجهاز الغسالة، افصل قابس الجهاز من مخرج التيار الكهربائي لتجنب صدمات كهربائية وخطر صدمات كهربائية.
- * عند طرد الجهاز، اقطع الكابل الرئيسي ودمّر القابل واكسر قفل الباب لمنع الصغر من سقوطهم في داخل الجهاز.


■ مصفاة مدخل الماء

- تومض رسالة خطأ "E1" على لوحة التحكم في حالة أن الماء لا يدخل الى دولاب مادة التنظيف.
- إذا كان الماء عسراً جداً أو احتوى على الثقل، قد تتسدّد مصفاة مدخل الماء.
لذلك فكرة جميلة أن تتنظف المصفاة من حين الى آخر.


1. اغلق حنفيّة الماء.

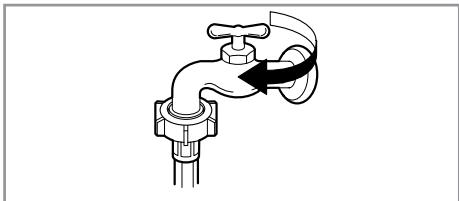


2. ارْخِ بِرْغِي خرطوم مدخل الماء

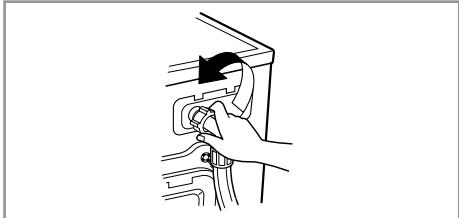

3. نظّف المصفاة بواسطة الفرشاة الخشنة
والصلبة.

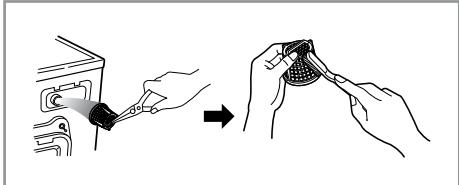


4. ثبّت خرطوم مدخل الماء بإحكام.

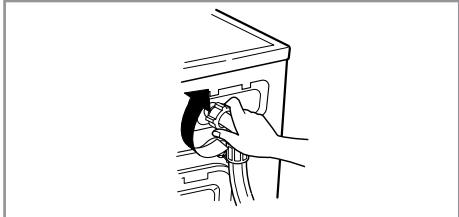


■ دولاب الموزع

- * بعد وضع مادة التنظيف وملين القماش في الدولاب.
- لا بد من تنظيف الدولاب من حين الى آخر باللاء الجاري.
- عند الحاجة يمكنك سحب الدولاب تماما من جهاز الغسالة بالضغط على الدولاب الى الأسفل وسحبه الى الخارج.
- من أجل التنظيف السهل، يمكنك إزالة الجزء الاعلى من حجيرة مليء القماش.

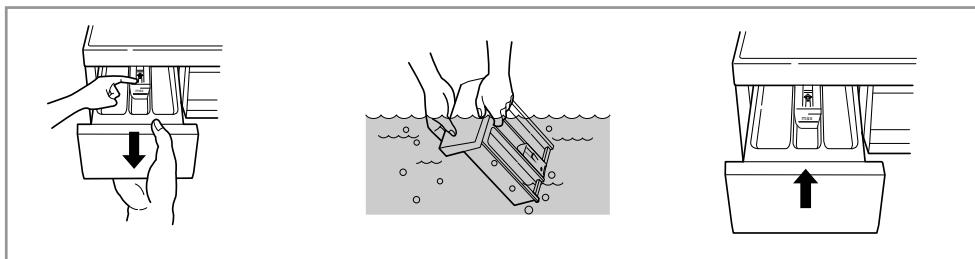

■ اف مكان داخلي للدولاب

- * قد تترافق مادة التنظيف داخل المكان الداخلي فلا بد من تنظيفه أحيانا بفرشاة الأسنان.
- عند انتهاء التنظيف، اعد الدولاب الى مكانه واجر دوران الشطف بدون ملابس.

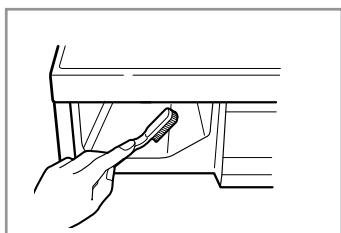

■ حلة الغسيل

- إذا عشت في منطقة المياه العسيرة، تتكون صفيحة الكلس باستمرار في الأماكن التي لا يمكن أن تراها ولا تزيلها بسهولة. تكون صفيحة الكلس يسد الأجهزة وإذا لم تتحصنه ولا بد من تبديله أخيرا.
- بالرغم من أن حلة الغسيل مصنوعة من الفولاذ الذي لا يصدأ، قد يحدث الصدأ بسبب الأشياء المعدنية الصغيرة (مشبك الورق ، ودبابس الأمان) التي كانت تبقى في الحلة.
- لا بد من تنظيف حلة الغسيل من حين الى آخر.
- إذا استخدمت مادة التنظيف و مادة الصبغ أو مادة التبييض غير القياسية ، تتأكد من أنها مناسبة للاستخدام في جهاز الغسالة.
- * المواد غير القياسية تحتوى على المكونات التي قد تؤدي الى ضرر في جهاز الغسالة.
- * ازيل البقع بسائل التنظيف الخاص بالفولاذ الذي لا يصدأ.
- * لا تستخدم صوف الفولاذ أبدا.

■ مصفاة مضخة التصريف

- * مصفاة التصريف تجمع الخيوط والأشياء الصغيرة المتبقية في الملابس.
- * افحص بانتظام أن المصفاة نظيفة لتضمن التشغيل الناعم لجهاز الغسالة.


▲ تحذير

أولاً صرف الماء بواسطة خرطوم التصريف ثم افتح مصفاة مضخة التصريف لإزالة أي شيء مسدود.


خذ عناء عند تصريف الماء إذا كان الماء حارا.

* اترك الماء ليصبح باردا قبل تنظيف مضخة التصريف، مع تفريغ طارئ أو فتح الباب في حالة طارئة.


1. افتح علبة الغطاء السفلي (1) باستخدام الأصبع. أدر مفتاح التصريف (2) لسحب الخرطوم.

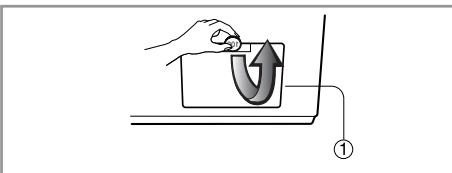



2. أفصل قابس التصريف (2)، ليسلل الماء إلى الخارج. في هذه الحالة، استخدم وعاء لمنع سيل الماء على الأرض. إذا لم يسل الماء، دور مصفاة المضخة (3) إلى اليسار للفتح.

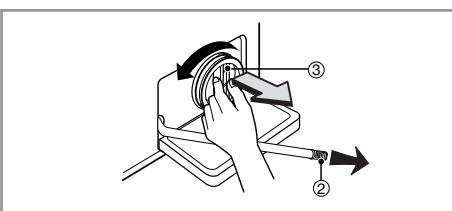

3. إذا لم يسل الماء، دور مصفاة المضخة (3) إلى اليسار للفتح.

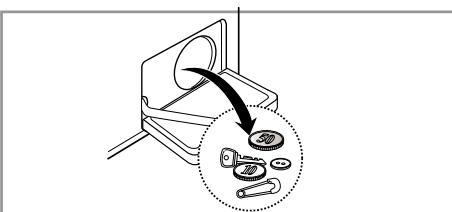

4. ازل أي شيء غريب من مصفاة المضخة (3). بعد التنظيف، دور مصفاة المضخة (3) باتجاه عقرب الساعة وادخل قابس التصريف (2) إلى مكانه الأصلي . اغلق غطاء الغلاف الأسفل.

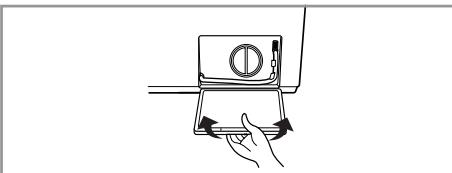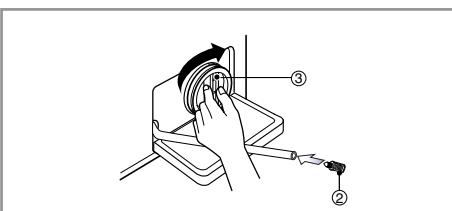

■ تنظيف الغسالة

1. الأسطح الخارجية

الصيانة المناسبة لجهاز الغسالة تستطيع تمديد عمر الجهاز. يمكنك تنظيف الأسطح الخارجية لجهاز الغسالة بملاء الدافئ ومادة التنظيف المعايدة غير الكاشطة للمنزل.

امسح أي سائل مصبوب فورا. وامسحها بالقماش الرطب. لا تحاول ضرب الأسطح لجهاز للأشياء الحادة.

* هام : لا تستخدم الميشيلات ، والمشعشعة أو المنتجات الشبيهة .

2. الأسطح الداخلية

جفف حول باب الغسالة المفتوح والخشية القابلة للثنى والباب الزجاجي. هذه المناطق لا بد من تنظيفها لضمان كتم الماء بإحكام.

اعمل جهاز الغسالة بدوران كامل باستخدام الماء الحار.

كرر الإجراءات عند الحاجة.

ملاحظة : ازل ثفل الماء اليسر باستخدام مادة تنظيف فقط برقعة الاستخدام الآمنية لجهاز الغسالة.

■ تعليمات عند حلول فصل الشتاء

إذا حفظت جهاز الغسالة في منطقة قد يتجمد الماء فيها أو يتغير الطقس فيها إلى درجة الحرارة المنخفضة حتى يتجمد الماء، اتبع هذه التعليمات عند حلول فصل الشتاء من أجل منع ضرر في جهاز الغسالة.

1. اغلق حنفيه الماء.

2. افصل الخرطوم من حنفيه الماء وصرف الماء من الخرطوم.

3. صل قابس التيار الكهربائي الى مخرج التيار الذي تم توصيله الأرضي المناسب.

4. اضف ١ غالون (3,8 لتر) من سائل مقاومة التجميد الخاص للسيارة غير المتسم (RV) لتفريغ حلة الغسيل. اغلق الباب.

5. اضبط دوران التجفيف واترك جهاز الغسالة يدور لمدة دقيقة واحدة لتصريف جميع الماء من الغسالة.

6. بخرج جميع السوائل مقاومة التجميد RV تماما.

6. انزع قابس التيار الكهربائي وتجفف الأسطح الداخلية للحلة واغلق الباب.

7. ازل دولاب الموزع. صرف أي ماء من حجيرات وجفف حجيرات واعد الدولاب الى مكانه.

8. احفظ جهاز الغسالة في موضع عمودي.

9. لإزالة سائل مقاومة التجميد من جهاز الغسالة بعد حفظه، اعمل جهاز الغسالة فراغا من خلال دوران كامل باستخدام مادة التنظيف. لا تضف الملابس.

دليل تحري الخل وإصلاحه

* جهاز الغسالة هذا مزود بوظائف السلامة الأوتوماتيكية التي تكشف وتشخص الأخطاء في مرحلة دوران ورددود فعل مناسبة. عندما لا يعمل جهاز الغسالة بوظيفة مناسبة لا يعمل أبداً، افحص الأمور التالية قبل الاتصال بمركز الخدمات.

ال المشكلة	السبب المحتمل	الحلول
صوت الشخص وضجيج الصالصل	<ul style="list-style-type: none"> ● الأشياء الغريبة مثل القطع المعدنية أو دبابيس السلامة قد توجد في الحلة أو المخنة. 	اوقف جهاز الغسالة من العمل وافحص الحلة ومصفاة التصريف. إذا استمر الضجيج بعد إعادة تشغيل الجهاز، اتصل بمركز الخدمات.
صوت ضخم	<ul style="list-style-type: none"> ● الملابس الثقيلة والكبيرة قد تصدر صوتاً كبيراً. هذا أمر عادي. ● هل أزالت مسامير التقل والتغليف؟ 	إذا استمر الصوت، جهاز الغسالة خارج التوازن. اوقف ورُّع الملابس من جديد. إذا لم تزل المسامير أثناء التركيب، راجع تعليمات التركيب من أجل إزالة مسامير التقل. وضع الملابس غير متوازن في الحلة.
ضجيج الاهتزاز	<ul style="list-style-type: none"> ● هل جميع الأرجل موضوعة على الأرض بثبات؟ 	اوقف جهاز الغسالة من العمل واعد ترتيب الملابس.
تسرب الماء	<ul style="list-style-type: none"> ● خرطوم تغذية الماء وخرطوم التصريف مرتخين في حنفية ماء أو جهاز غسالة. ● أنابيب التصريف الداخلية مسدودة. 	افحص توصيلات الخرطوم وثبتها. ازل شيئاً مسدوداً في أنبوب التصريف. واتصل بالفني عند الحاجة.
الرغوة الزائدة		مادة التنظيف الكثيرة جداً أو مادة التنظيف غير المناسبة؟ وحدوث الرغوة يؤدي إلى تسرب ماء. افحص الحنفية الأخرى في المنزل. افتح الحنفية كاملاً. استقم الخرطوم. افحص المصفاة في خرطوم دخول الماء. نظف واستقم خرطوم التصريف. نظف مصفاة التصريف.
لا يدخل الماء إلى الغسالة أو يدخله ببطء	<ul style="list-style-type: none"> ● تزويد الماء في المنطقة غير كافي. ● لا تفتح حنفية الماء كاملاً. ● خرطوم تزويد الماء ملتوي. ● مصفاة خرطوم دخول الماء مسدودة. ● خرطوم التصريف متلوى أو مسدود. ● مصفاة التصريف مسدودة. 	يتم التصريف ببطء
لا تصرف الماء من جهاز الغسالة أو		

الحلول	السبب المحتمل	المشكلة
<p>تأكد من توصيل القابس الى مخرج التيار بإحكام.</p> <p>اعد ضبط قاطع الدائرة أو بدال الصهيرية. ولا تزد سعة الصهيرة.</p> <p>إذا كانت مشكلة ناجمة عن حمل الدائرة الزائد، كن صحيحاً من قبل فني كهربائي مؤهل.</p> <p>افتح حنفية الماء.</p> <p>أغلق الباب واضغط على زر التشغيل/التوقف المؤقت.</p> <p>بعد الضغط على زر التشغيل/التوقف المؤقت، يستغرق وقت قليل للبدء بالتجفيف. لا بد من إغلاق الباب قبل البدء بالتجفيف.</p>	<ul style="list-style-type: none"> ● لا يصل قابس الجهاز الى مخرج التيار أو التوصيل مرتاح. ● صهيره البيت منقطعة، ويطفر قاطع الدائرة ، أو حدث انقطاع طاقة. ● لا تفتح حنفية الماء. <p>* تأكد من أن الباب مغلق بإحكام.</p>	<p>لا يعمل جهاز الغسالة</p> <p>لا تجفيف في الغسالة</p>
<p>عند التشغيل، لا يمكن فتح الباب سبباً للسلامة.</p> <p>انتظر دقيقة أو دقيقتين قبل فتح الباب لإعطاء وقت لفتح إغلاق الآلة الكهربائية.</p>		<p>لا يمكن فتح الباب</p>
<p>وقت الغسيل قد يختلف حسب كمية الملابس ، وضغط الماء ، ودرجة حرارة الماء والحالات الأخرى للغسيل.</p> <p>إذا كانت الملابس غير متوازنة أو إذا عمل برنامج إزالة الرغوة ، يزيد وقت الغسيل .</p>		<p>يتأجل وقت دوران الغسيل</p>
<p>لا يتضاعف الغسيل زائداً</p> <p>تأكد من التصريف من جهاز الغسالة كما ينبغي لتصريف الكمية الكافية من الماء من الملابس.</p> <p>الملابس التي وضعتها في الجهاز قليلة جداً لكي يعمل الجهاز كما ينبغي ، اضف اليها بعض القطع من المناشف.</p>	<p>لا يجري التجفيف.</p>	<p>مشكلة في التجفيف</p>

ال المشكلة	السبب المحتمل	الحلول
IE	<ul style="list-style-type: none"> ● تزويد الماء في المنطقة ضعيف. ● لا تفتح حنفية الماء كاملا. ● خرطوم دخول الماء ملتوي. ● مسافة خرطوم دخول الماء مسدود. 	افحص حنفية ماء أخرى في المنزل. افتح حنفية الماء كاملا. استقيم الخرطوم. افحص مسافة خرطوم دخول الماء.
DE	<ul style="list-style-type: none"> ● خرطوم التصريف ملتوي أو مسدود. ● مسافة التصريف مسدودة. 	نظف واستقم خرطوم التصريف. نظف مسافة التصريف.
UE	<ul style="list-style-type: none"> ● الحمل قليل جدا. ● الحمل غير متوازن. ● الجهاز مزود بنظام كشف عدم التوازن وتصحيحه. <p>إذا وضعت الأشياء الثقيلة مثل بطانية الحمام، رداء الحمام ... الخ. هذا النظام قد يتوقف عن التدوير أو إعاقة التدوير، في حالة أن الحمل غير متوازن جدا حتى بعد البدء بالتدوير عدة مرات.</p> <ul style="list-style-type: none"> ● إذا مازالت الملابس متبللة في نهاية الدوران، اضف القطع الأصغر من الملابس لتوازن الحمل وكرر دوران التجفيف. 	اضف قطعة أو قطعتين للمساعدة في توازن الحمل. توازن الحمل. اعد ترتيب الحمل للتدوير المناسب.
dE	<ul style="list-style-type: none"> ● هل الباب مفتوح ؟ 	اغلق الباب. * إذا لم يتلاش  ، اتصل بمركز الخدمات.
EE		افصل قابس التيار من مخرج التيار واتصل بمركز الخدمات.
FE	<ul style="list-style-type: none"> ● إذا فاض الماء بسبب خلل صمام الماء ، يعرض مؤشر  س على زجاج العرض. 	اغلق حنفية الماء . افصل قابس التيار. اتصل بمركز الخدمات.
PE	<ul style="list-style-type: none"> ● يعرض مؤشر  في حالة حدوث عطل في المؤشر بمستوى الماء. 	
CE	<ul style="list-style-type: none"> ● الحمل الزائد في المотор. 	
LE	<ul style="list-style-type: none"> ● الحمل الزائد في المотор. 	
PF	<ul style="list-style-type: none"> ● قد حدث انقطاع الكهرباء في جهاز الغسالة. 	اعد تشغيل الدورة. افتح حنفية الماء. إذا لم تحل مشكلة  ، اززع القابس من مخرج التيار واتصل بمركز الخدمات.
dHE	<ul style="list-style-type: none"> ● تأكد من توريد الماء. 	

ما لا تغطيه الضمانة

- رحلات الخدمة الى بيتك لتعليمك كيفية استخدام المنتج .
- اذا تم توصيل المنتج مع أي فولطية غير التي اشير اليها على لوحة النسب .
- اذا كان سبب الخطأ عن طريق حادث ، إهمال، أو كوارث طبيعية .
- اذا كان سبب الخطأ عن طريق عوامل غير الاستخدام المحلي العادي أو استخدام حسب دليل المالك .
- تقديم تعليمات حول استخدام المنتج أو تغيير ضبط المنتج .
- اذا تسبب في الخطأ آفة ما على سبيل المثال، فئران أو حشرات منزلية وغيرها .
- **الضجيج والاهتزاز** الذي يعتبر عادي ، مثال صوت تصريف الماء ، صوت دوران أو صوت التدفئة (بيب) .
- تصحيح التركيب مثلاً ، رفع المنتج ، تعديل التصريف .
- الصيانة العادية التي أوصى بها دليل المالك .
- التخلص من الاشياء الغريبة / مواد من الماكينات، يشمل ذلك المضخة ومصفاة الخرطوم الداخل على سبيل المثال ، حصى ، مسامير، قطع أسلاك، أزرار وغيرها .
- وضع الفيوز في أو تصحيح اسلاك البيت أو تصحيح سباكة البيت .
- تصحيح تعليمات غير مصرح بها .
- ضرر بسبب حادث أو نتج عنه تلف في الممتلكات الخاصة بسبب خلل في هذا الجهاز .
- إذا أستخدم هذا المنتج لاغراض تجارية ، لا تغطيه الضمانة . (مثال / أماكن تستخدم من قبل العامة مثل الحمامات ، فنادق، مركز تدريب، بيت به غرف للايجار)

