

OWNER'S MANUAL

V-CD271NT*

V-CD271HT*

V-CD281NT*

V-CD281HT*

V-CD201NT*

V-CD201HT*

Bagless vacuum cleaner






Table of contents

Safety Information	4-5
How to Use	6
Assembling cleaner	6
Using the cleaning head and Accessory Nozzles	8
Emptying the Dust Chamber	10
Operating the cleaner	11
Cleaning the Filter	12
Cleaning the Exhaust Filter	13
User's Guide For Turbine Nozzle(Optional)	14
Troubleshooting	15



IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire, electric shock, personal injury, or damage when using the vacuum cleaner. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand. This appliance complies with the following EC Directives: 73/23/EEC, 93/68/EEC-Low Voltage Directive-89/336/EEC-EMC Directive.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION."

These words mean:



WARNING

This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.



CAUTION

This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.



WARNING

- **Disconnect electrical supply before servicing or cleaning the unit or when cleaner is not in use.**
Failure to do so could result in electrical shock or personal injury.
- **Do not use vacuum cleaner to pick up anything that is burning or smoking such as cigarettes, or hot ashes.**
Doing so could result in death, fire or electrical shock.
- **Do not vacuum flammable or explosive substances such as gasoline, benzene, thinners, propane (liquids or gases).**
The fumes from these substances can create a fire hazard or explosion. Doing so could result in death or personal injury.
- **Do not handle plug or vacuum cleaner with wet hands.**
Doing so could result in death or electrical shock.
- **Do not unplug by pulling on cord.**
Doing so could result in product damage or electrical shock. To unplug, grasp the plug, not the cord.
- **Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.**
Failure to do so could result in electrical shock or personal injury.
- **Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.**
Failure to do so could result in electrical shock or personal injury or fire or product damage.
- **Do not allow to be used as toy. Close attention is necessary when used by or near children.**
Personal injury or product damage could result.
- **Do not use the vacuum cleaner if the power cord or plug is damaged or faulty.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use vacuum cleaner if it has been under water.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not continue to vacuum if any parts appear missing or damaged.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use an extension cord with this vacuum cleaner**
Fire hazard or product damage could result.
- **Using proper voltage.**
Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the bottom of vacuum cleaner.
- **Turn off all controls before unplugging.**
Failure to do so could result in electrical shock or personal injury.
- **Do not change the plug in any way.**
Failure to do so could result in electrical shock or personal injury or product damage. Doing so result in death. If plug does not fit, contact a qualified electrician to install the proper outlet.
- **Repairs to electrical appliances may only be performed by qualified service engineers.**
Improper repairs may lead to serious hazards for the user.
- **Do not plug in if control knob is not in OFF position.**
Personal injury or product damage could result. (Depending on model)
- **Keep children away and beware of obstructions when rewinding the cord to prevent personal injury**
The cord moves rapidly when rewinding. (Depending on model)
- **The hose contains electrical wires. Do not use it if it is damaged, cut or punctured.**
Failure to do so could result in death, or electrical shock. (Depending on model)

IMPORTANT SAFETY INSTRUCTIONS

CAUTION

- **Do not put any objects into openings.**
Failure to do so could result in product damage.
- **Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.**
Failure to do so could result in product damage.
- **Do not use vacuum cleaner without dust tank and/or filters in place.**
Failure to do so could result in product damage.
- **Do not use vacuum cleaner to pick up sharp hard objects, small toys, pins, paper clips, etc.**
They may damage the cleaner or dust bin.
- **Store the vacuum cleaner indoors.**
Put the vacuum cleaner away after use to prevent tripping over it.
- **The vacuum cleaner is not intended to use by young children or infirm people without supervision.**
Failure to do so could result in personal injury or product damage.
- **Only use parts produced or recommended by LG Electronics Service Agents.**
Failure to do so could result in product damage.
- **Use only as described in this manual. Use only with LG recommended or approved attachments and accessories.**
Failure to do so could result in personal injury or product damage.
- **To avoid personal injury and to prevent the machine from falling when cleaning stairs, always place it at the bottom of stairs.**
Failure to do so could result in personal injury or product damage.
- **Use accessory nozzles in sofa mode.**
Failure to do so could result in product damage.
- **Make sure the filters (exhaust filter and motor safety filter) are completely dry before replacing in the machine.**
Failure to do so could result in product damage.
- **Do not dry the filter in an oven or microwave.**
Failure to do so could result in fire hazard.
- **Do not dry the filter in a clothes dryer.**
Failure to do so could result in fire hazard.
- **Do not dry near an open flame.**
Failure to do so could result in fire hazard.
- **Always clean the dust bin after vacuuming carpet cleaners or fresheners, powders and fine dust.**
These products clog the filters, reduce airflow and can cause damage to the cleaner. Failure to clean the dust bin could cause permanent damage to the cleaner.
(Depending on model)
- **Don't grasp the tank handle when you are moving the vacuum cleaner.**
The vacuum cleaner's body may fall when separating tank and body. Personal injury or product damage could result.
You should grasp the carrier handle when you are moving the vacuum cleaner. (Depending on model)
- **If after emptying the dust tank the indicator light is on(red), clean the dust tank.**
Failure to do so could result in product damage.
(Depending on model)




Thermal protector :

This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. If the vacuum cleaner suddenly shuts off, turn off the switch and unplug the vacuum cleaner. Check the vacuum cleaner for possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum cleaner. After the 30 minute period, plug the vacuum cleaner back in and turn on the switch. If the vacuum cleaner still does not run, contact a qualified LG authorised Service Agent.

How to Use Assembling Cleaner

Fit the large cleaning head into the end of the tube.

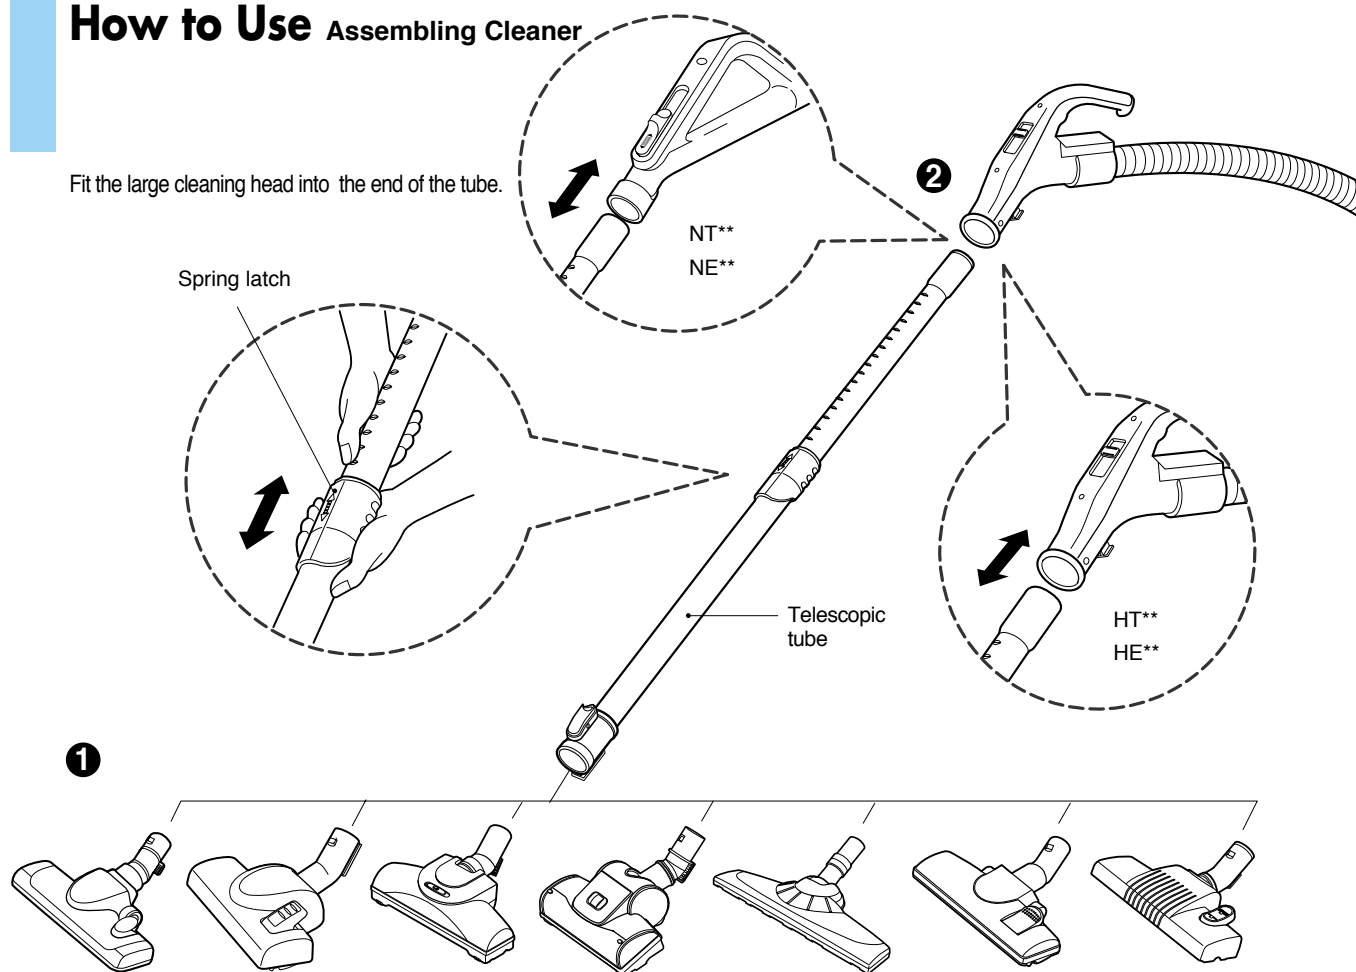


1 The 2 position head

Push telescopic tube into nozzle outlet.

2 Telescopic tube (depending on model)

- Press the spring latch to release.
- Pull out the tube to the desired length.
- Release spring latch to lock the tube in position.
- Push telescopic tube into hose handle firmly.

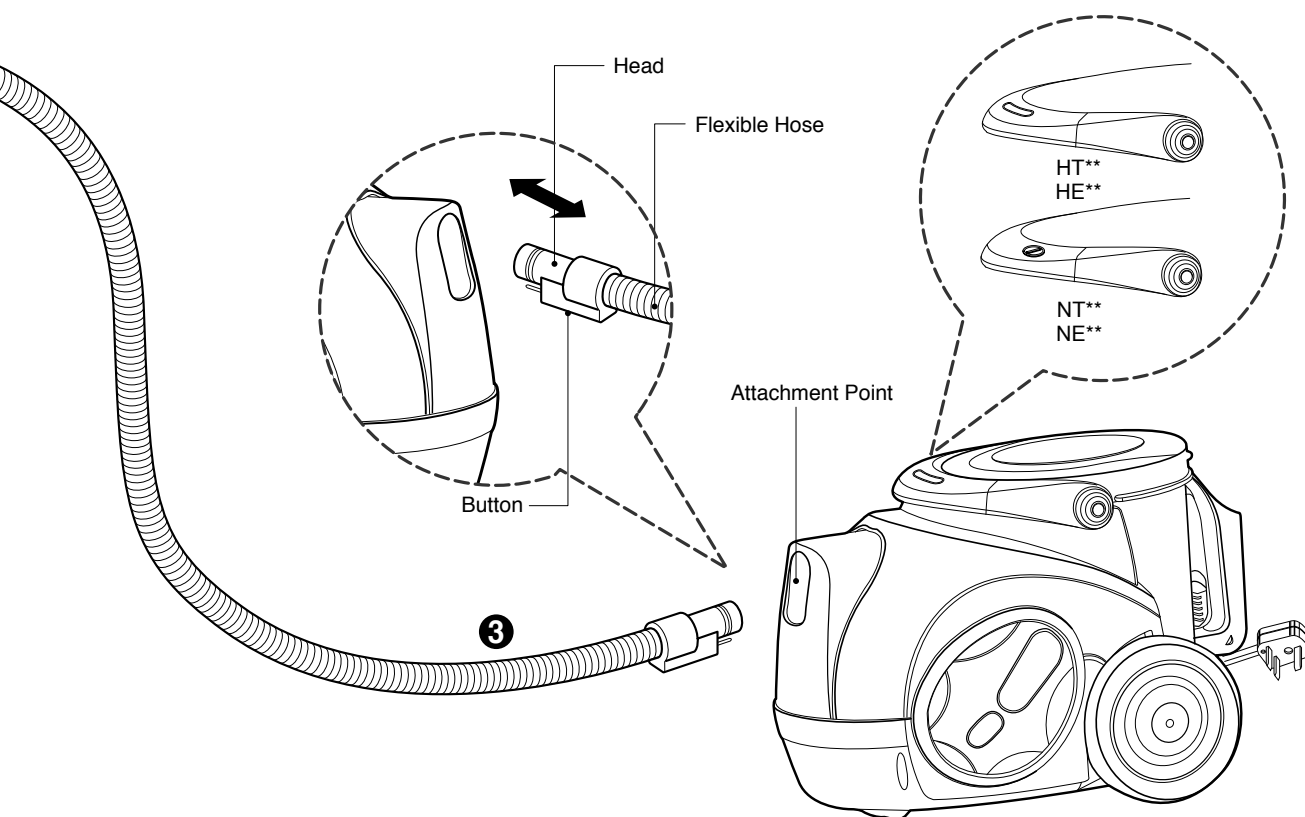

3 Connecting the flexible hose


- Push the end of the head on the flexible hose into the attachment point on the vacuum cleaner.
- To remove the flexible hose from the vacuum cleaner, press on the button situated on the head, then pull the head out of the vacuum cleaner.

CAUTION

- Suction power may be weakened when insignificant dusts are sucked. In this case, clean the filter.
- Make the dust box empty if dusts are filled to the maximum degree and then clean the filter when it becomes 5 times.

How to Use Using the cleaning head and Accessory Nozzles

Tear the vinyl bag and pull out accessories. Attach the accessory holder onto the telescopic tube. And then, fit the Dusting Brush, Crevice Tool and Upholstery Nozzle onto the accessory holder. Fit the accessory onto the hose.

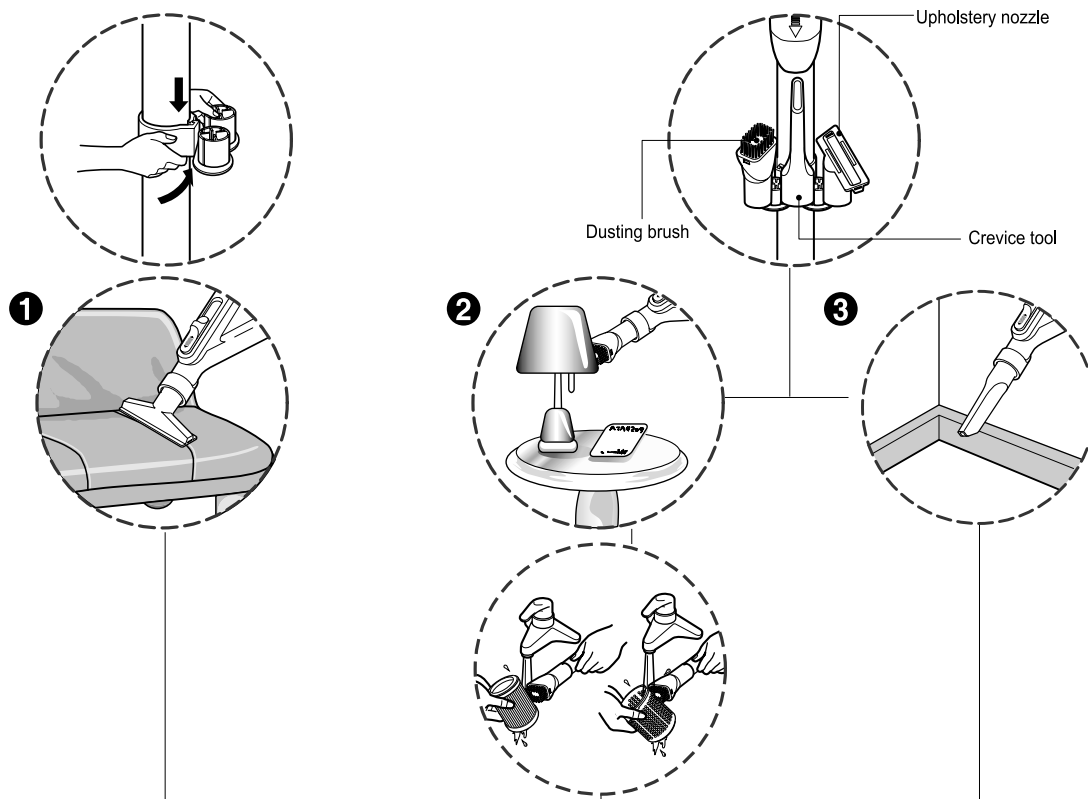

① Upholstery Nozzle



Upholstery Nozzle is for vacuuming upholstery, mattresses, etc. The thread collectors help to pick up the threads and fluff.

② Dusting Brush

Dusting Brush is for vacuuming picture frames, furniture frames, books and other irregular surfaces. Dusting Brush is also used for cleaning Filters.

③ Crevice Tool

Crevice Tool is for vacuuming in those normally hard-to-reach places such as reaching cobwebs, or between the cushions of a sofa.

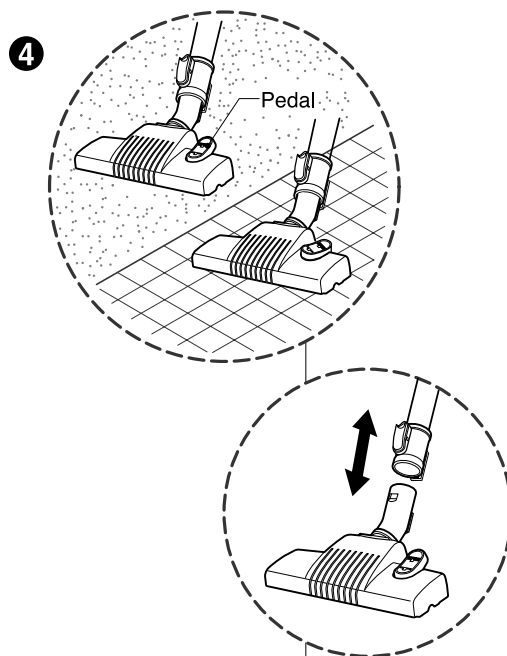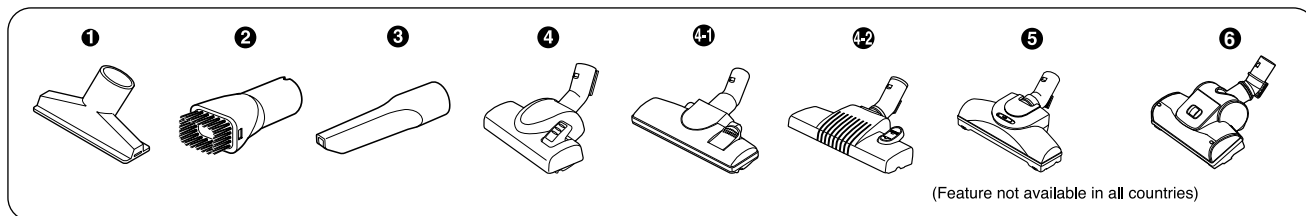


4 The 2 position head (Depending on model)

- **The 2 position cleaning head**
equipped with a pedal which allows
you to alter its position according to
the type of floor to be cleaned.
- **Hard floor position**
(tiles, parquets floor)
Press the pedal to lower brush.
- **Carpet or rug position**
Press the pedal to lift the brush up.



How to Use Emptying the dust chamber

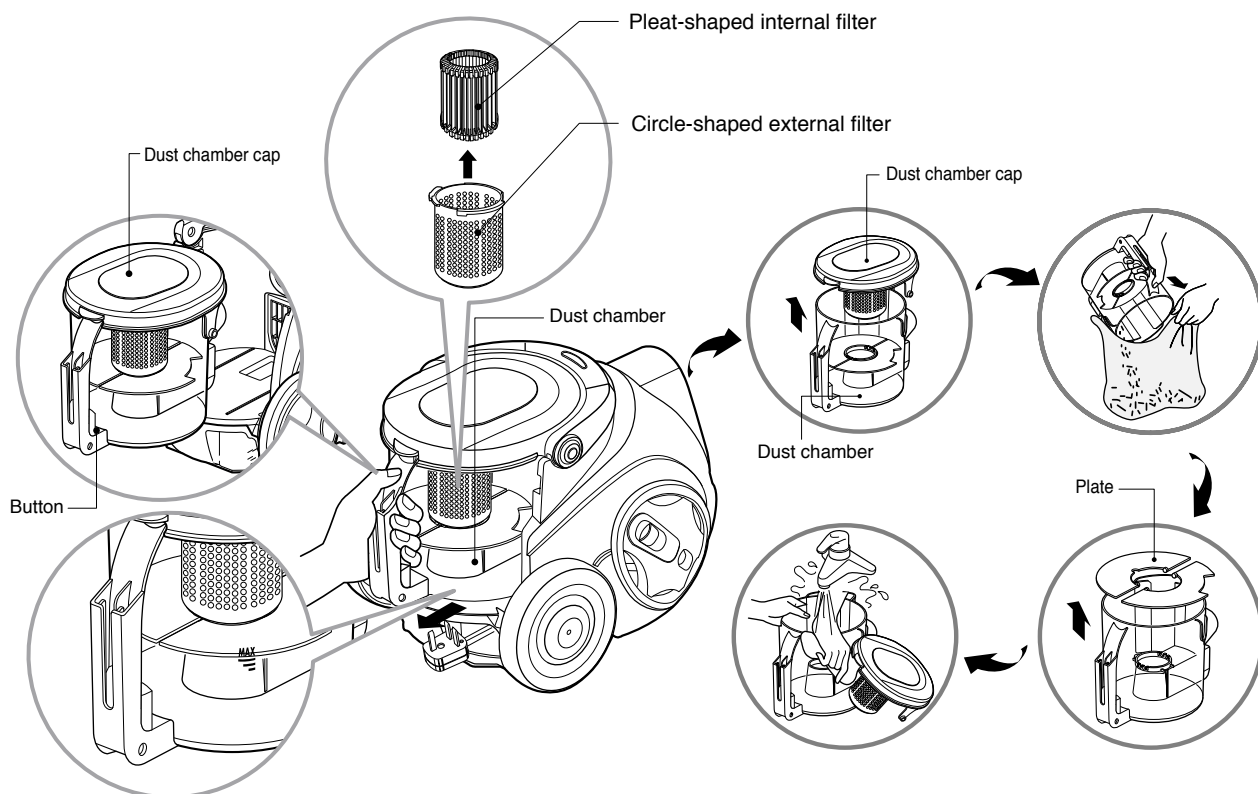


Suction power may be weakened when insignificant dusts are sucked. In this case, clean the filter.

- Turn off the vacuum cleaner and unplug it.
- Your vacuum cleaner is equipped with both a dust chamber and a motor filters.
Press the button and pull the dust chamber forward.
Remove the dust chamber cap.
Clean the pleat-shaped and the circle-shaped filters.
- To reinstall the dust chamber, replace the dust chamber cap and push the dust chamber into the tank mount as far as it will go.

- Open the dust chamber cap.
- Remove two plates from the dust chamber.
- Wash both parts with soft cloth. Gently rinse both parts under cold running water.

How to Use Operating the cleaner

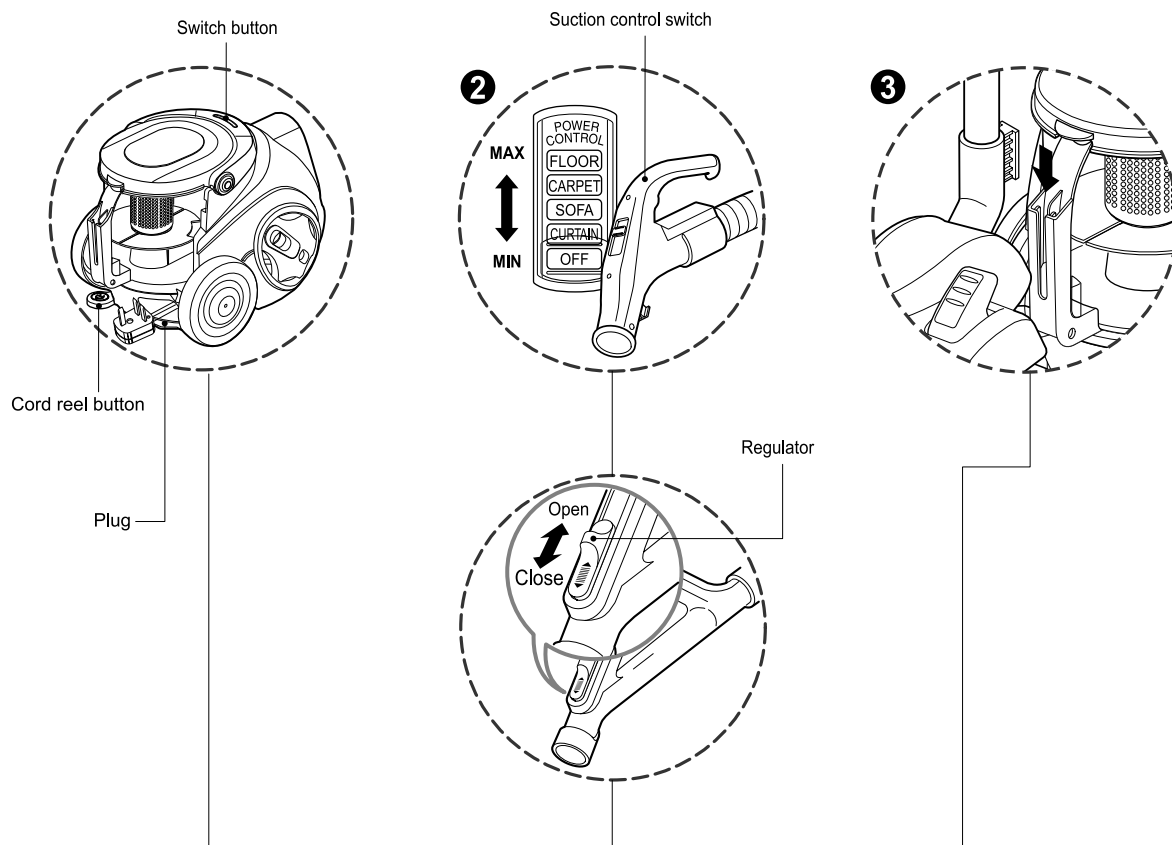

1 How to Plug in and Use

- Pull out the power cord to the desired length and plug into the socket.
- Push the suction control switch of the hose handle in the direction of the position what you want. (depending on model)
- To stop it, push down the suction control switch in the direction of OFF. (depending on model)
- Press switch button to start the vacuum cleaner. (depending on model)
- To stop it, press the switch button again. (depending on model)
- Press the cord reel button to retract the power cord after use.


2 Adjusting the Suction level (depending on model)

- Adjust suction with the suction control switch in the hose handle. (depending on model)
- The flexible hose handle has a manual air flow regulator which allows you to adjust the suction level briefly. (depending on model)

3 Park System

- To store after vacuuming and pause while vacuuming.
- For deposit after vacuuming, for example to move a small piece of furniture or a rug, use the Park system to support the flexible hose and cleaning head.
 - Slide the hook on the large cleaning head into the slot on the rear of the dust chamber.

How to Use Cleaning the Filter

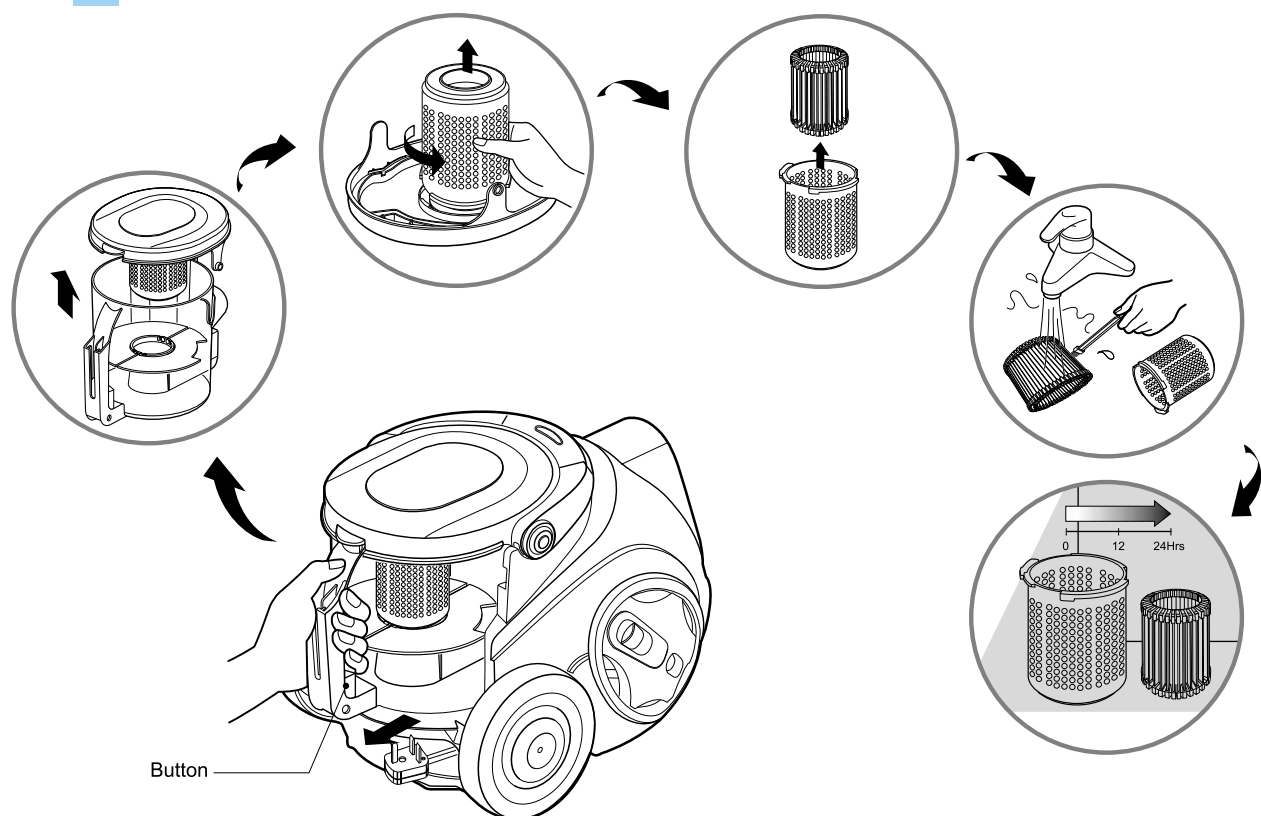

The reusable filters are situated under the dust chamber cap and you can use it permanently.

- Press the button and pull the dust chamber forward.
- Open the dust chamber cap.
- Remove the filters by rotating it counter-clockwise.
- **Clean the filters with the dusting brush under cold running water.**
- **Allow the filters to dry in a shaded location for a day.**
- Make the dust chamber empty if dusts are filled to the maximum degree and then clean the filter.



WARNING!

Gently rinse both parts separately under a cold running water until the water runs clear. **Do not use detergent or a washing machine or dishwasher.** Shake off excess water from the filter.

Do not tumble/spindry, microwave or place in oven or on direct heat.

Ensure the filter is completely dry.


Re-assemble and place it back in your machine, filter frame.

If the filter is damaged, do not place them in the machine.

Please call the Helpline.

Do not use the net-shaped filter separately.

How to Use Cleaning the Exhaust Filter

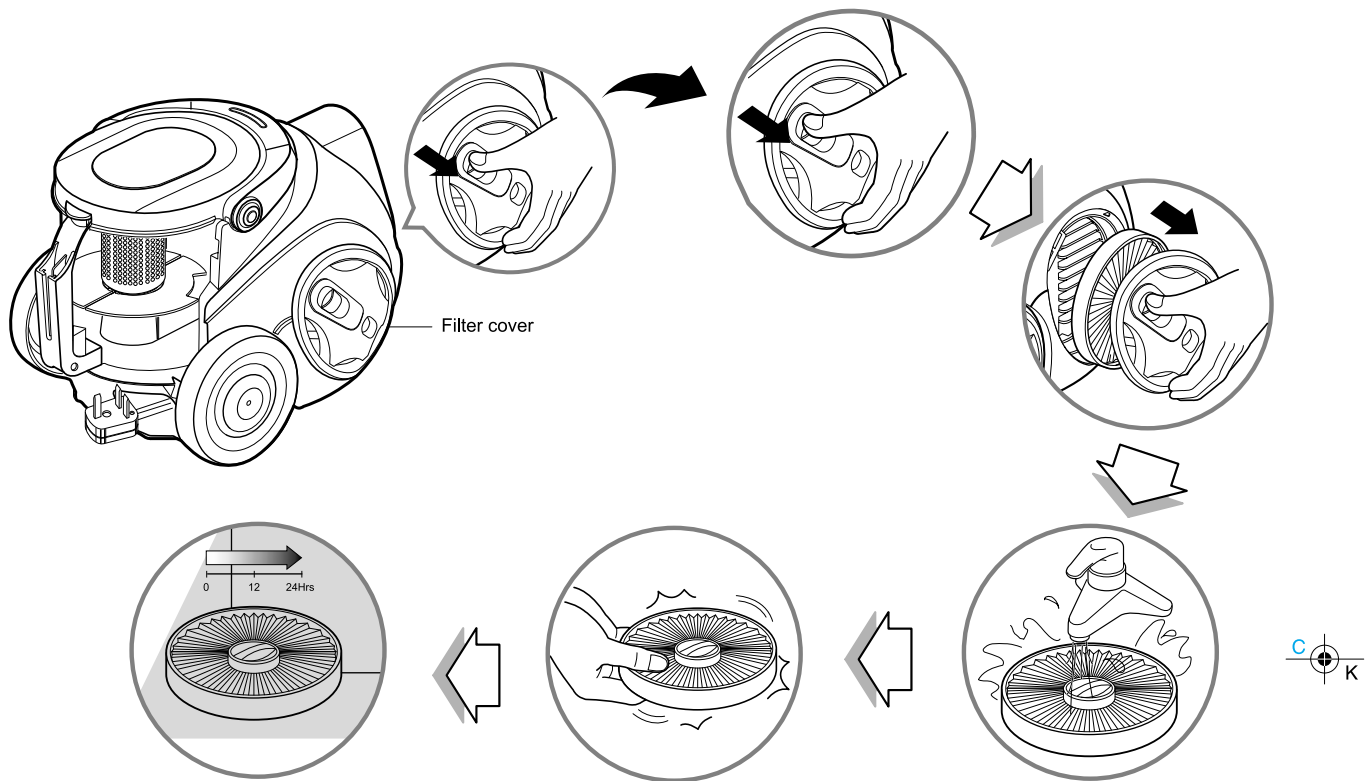


- The exhaust filter is a washable and reusable HEPA filter.
- To change the exhaust filter, remove the filter cover on the body by release hook.
- Pull out the exhaust filter.
- Clean it with cold, running water.
 - Do Not use the brush
 - Using the brush will cause permanent damage and allow dust to bypass the filter.
- Allow exhaust filter to dry in a shaded location for a dry.
- The exhaust filter should be cleaned at least once a year.


User's Guide for Turbine Nozzle

(Feature not available in all countries)


Open

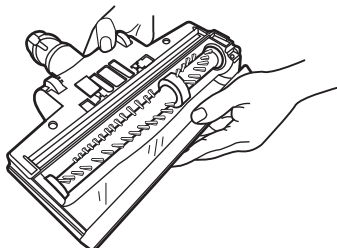


Top

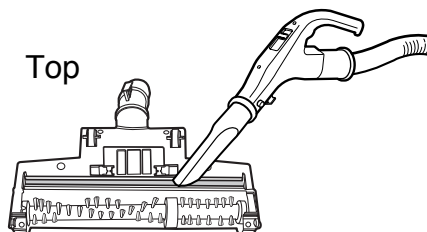

Open

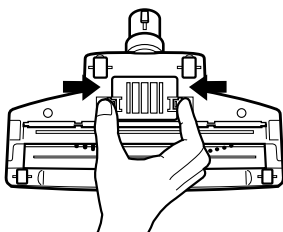

Bottom

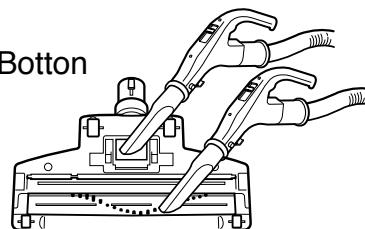

1 Turbine brush nozzle

Air adjustment

Slide the air control lever to the right for long pile carpet and to the left for short pile carpet.

Cleaning turbine brush nozzle

Press the button on the rear side of the nozzle to separate the air cover.

Use the dusting brush & crevice tool to vacuum clean the brush and fan.



Troubleshooting

What to Do When Suction Performance Decreases

- Turn off the vacuum cleaner and unplug it.
- Check the telescopic tube, flexible hose and cleaning tool for blockages or obstructions.
- Check that the dust chamber is not full. Empty if necessary.
- Check that the motor filter light is not on. Clean the motor filter, if necessary.
- Check that the exhaust filter is not blocked. Clean the exhaust filter, if necessary.
- If you are still experiencing problems, please contact your local service centre.

To locate your nearest service centre you can visit our web site www.lge.com.au

Notes



Notes





LG Electronics Inc.



LG Electronics Inc.






الاصلاح

ماذا ستعمل عند تخفيض قوة الشفط


- وقف عمل المكنسة الكهربائية واخراج قابسها .
- اختبار الأنبوب والخرطوم وأدوات التنظيف من أجل إزالة السد والأعطال .
- اختبار علبة الغبار (مليث) . يجب تفريغها ان انقتضى الأمر .
- اختبار اللمبة بسبب فلتر المحركات المسدود . يجب تنظيفه ان انقتضى الأمر .
- اختبار فلتر العادم (المسدود) .
- يرجى الاتصال بمركز الصيانة المحلي اذا لم تستطع حل المشاكل .
- يمكنكم زيارة الموقع www.lge.com.au من أجل البحث عن أقرب مركز الصيانة عندكم .

دليل الاستعمال لفوهات الطربينية


(عدم تجهيز المتممات في جميع الدول)

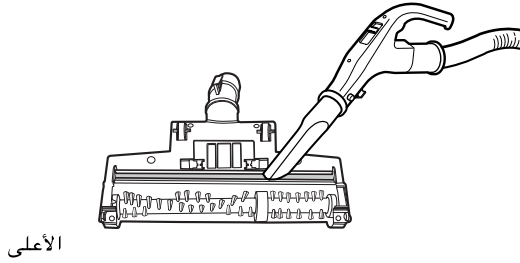


الأعلى

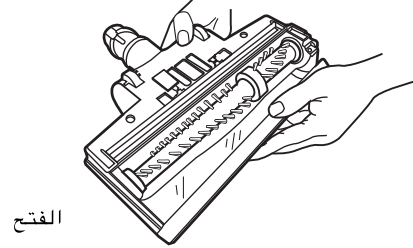

الفتح

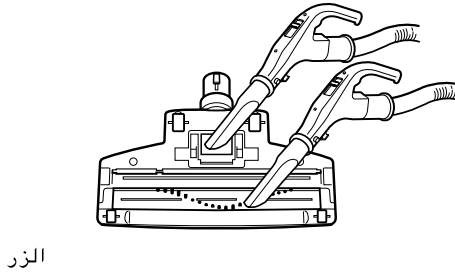

الزر

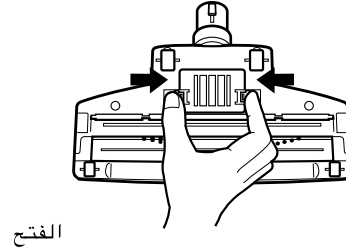


الفتح

① فوهة الفرشاة الطربينية


تعديل الهواء
نقل ذراع تحكم الهواء الى اليمين لتنظيف بساط الصوف الطويل، الى
اليسار لتنظيف بساط الصوف القصير .
تنظيف فوهة الفرشاة الطربينية
ضغط الزر وراء الفوهة لفك غطاء الهواء
استعمال فرشاة الغبار وأدوات تنظيف الأركان لتنظيف الفرشاة والمروح

تنظيف فلتر العادم

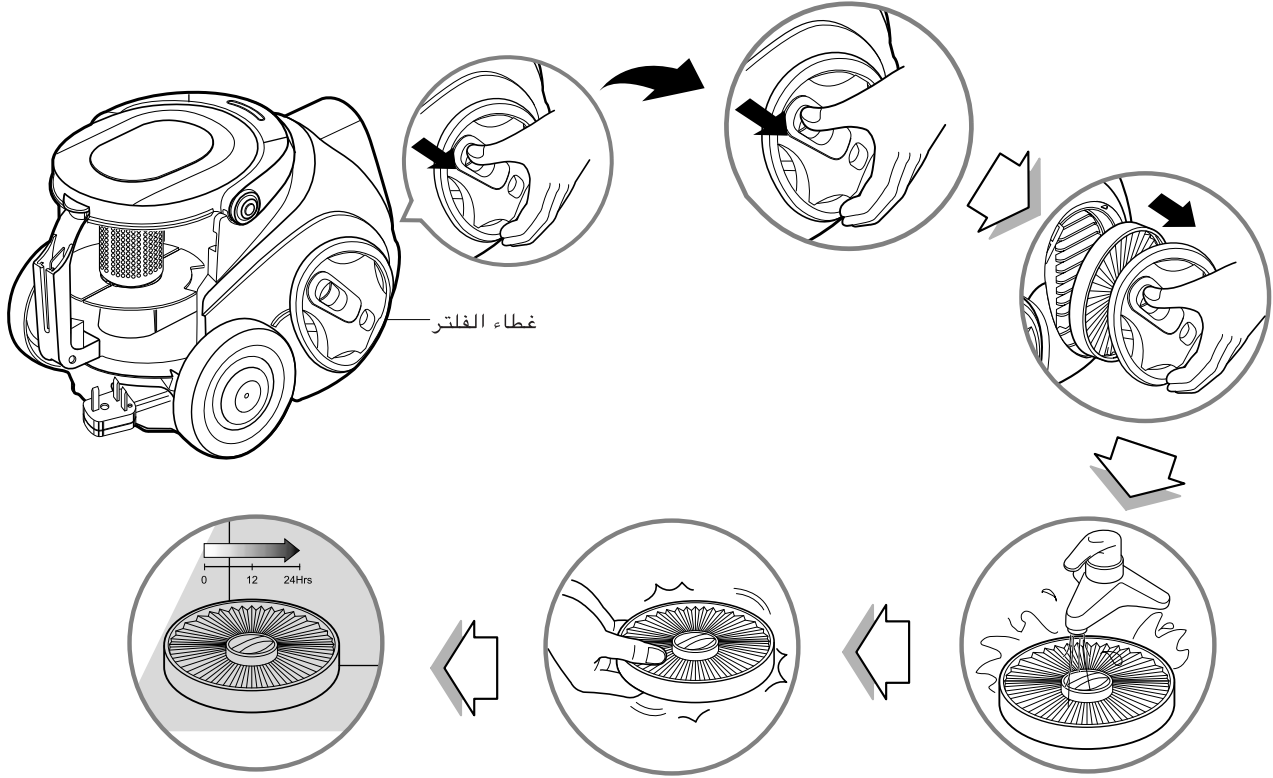

- فلتر العادم هو نوع من الفلتر شاذف الذي يمكن غسيله وإعادة استعماله .
- نقل غطاء الفلتر وفك الخطافة من أجل تغيير فلتر العادم .
- اخراج فلتر العادم .
- تنظيفه مع الماء الباردة من الحانفية .
- ممنوع استعمال الفرشاة .
- استعمال الفرشاة يسبب التخريب وسوف يمر الغبار من الفلتر .
- تجفيف فلتر العادم في ظل الشمس .
- يجب تنظيف فلتر العادم مرة واحدة على الأقل كل سنة .

كيفية الاستعمال تنظيف الفلتر

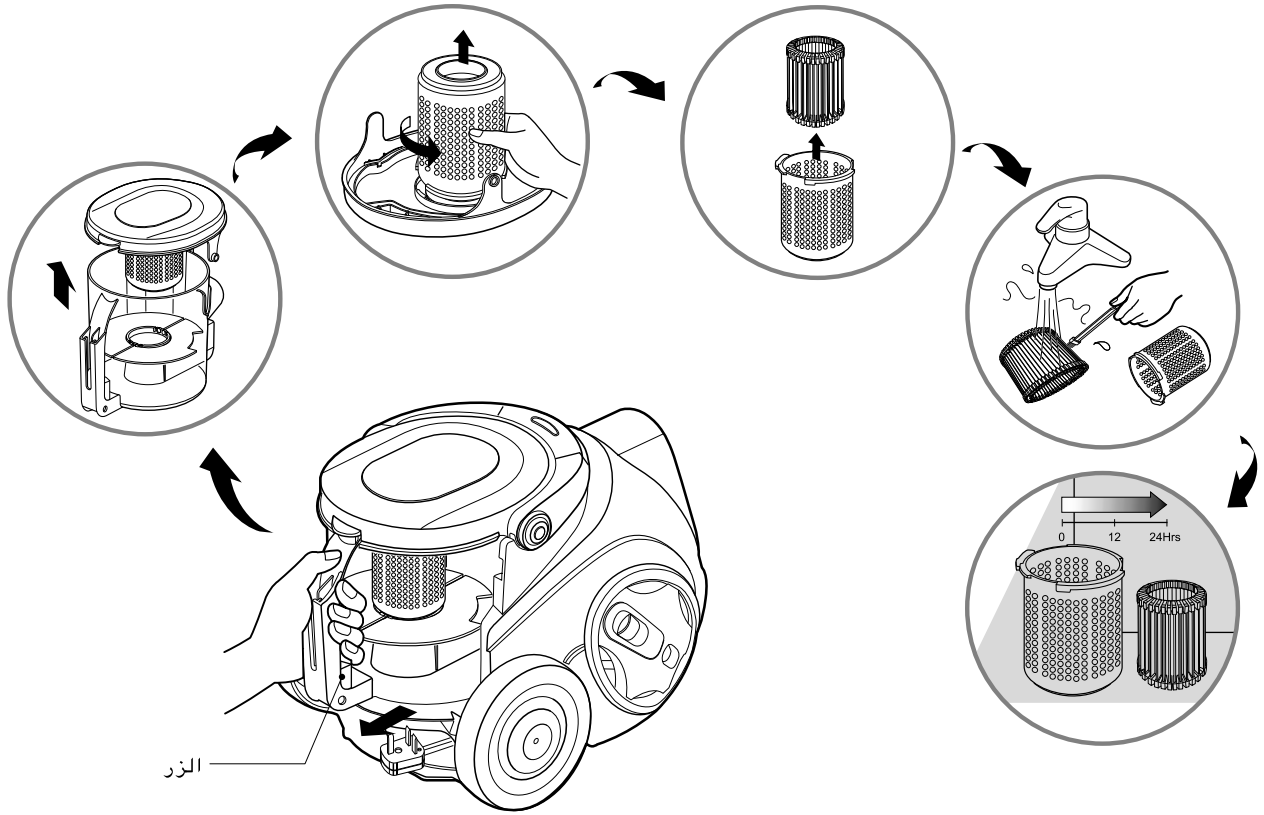


⚠ التحذير!

غسيل كل الأجزاء بشكل خفيف ومنفصل مع الماء الباردة من الحانفية حتى تخرج الماء النظيفة . **ممنوع استعمال السائل الكيماوي أو الغسالة أو ماكينة تنظيف.** تحريك الفلتر لإخراج الماء . ممنوع تسخين الفلتر بالميكرو موجة أو الفرن أو الحرارة المباشرة . التأكد من تجفيف الفلتر بشكل كامل . إعادة تركيب الفلتر الى المكنسة الكهربائية . **ممنوع إعادة تركيب الفلتر الى المكنسة الكهربائية اذا تم تخريب الفلتر . يرجى الاتصال بمركز الصيانة . ممنوع استعمال الفلترات بشكل منصفل .**

يتم تركيب الفلتر لإعادة الاستعمال تحت غطاء علبة الغبار ويمكنكم استعماله دائما .
• ضغط الزر وإخراج علبة الغبار .
• فتح غطاء علبة الغبار .
• نقل الفلتر بتحريكه بالعقارب العاكس .
• غسيل كل الأجزاء بفرشاة الغبار بشكل خفيف مع الماء الباردة من الحانفية .
• تجفيف الفلتر تحت ظل الشمس يوما واحدا .
• تفريغ علبة الغبار اذا كانت مليئة الى أكبر حد، ثم تنظيف الفلتر.

كيفية الاستعمال تشغيل المكنسة الكهربائية

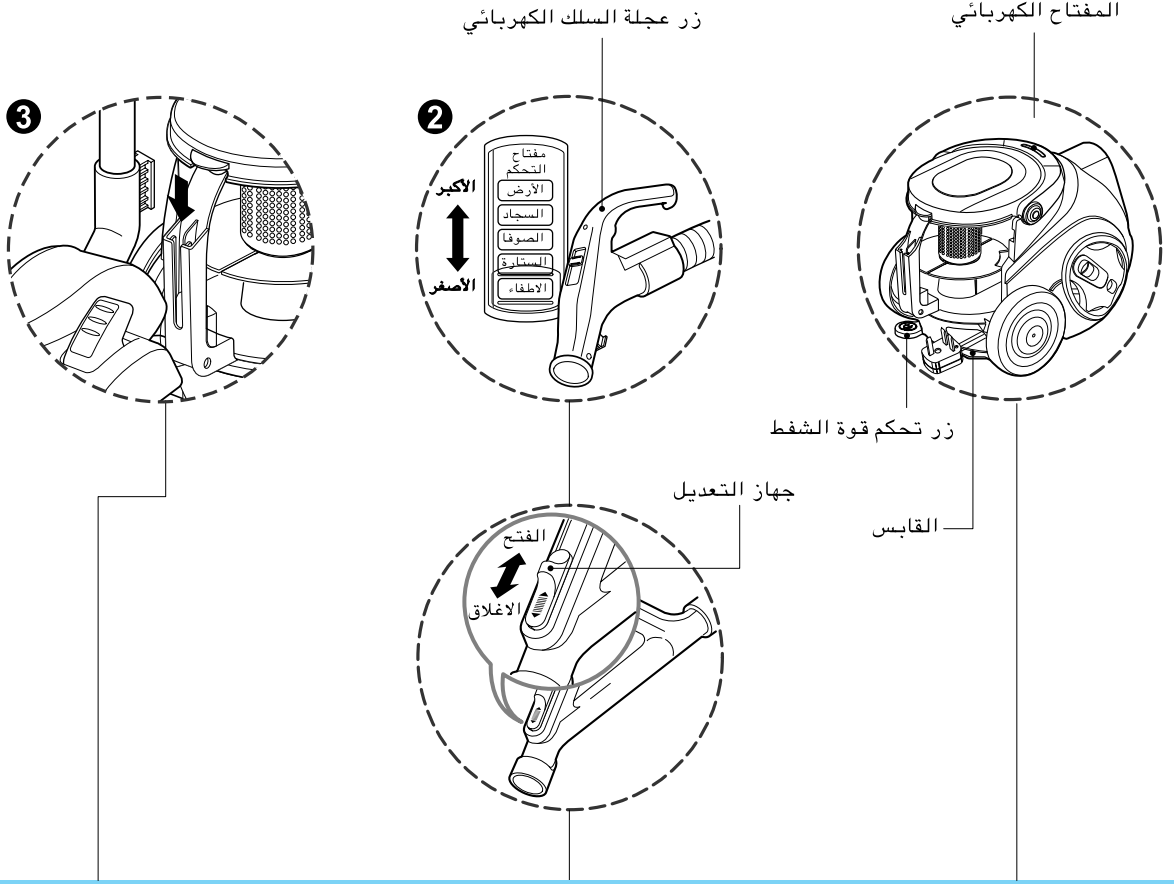

3 نظام الوقوف

- للتخزين بعد الشفط أو وقف العمل عند الشفط .
- من أجل الوضع بعد الشفط، مثلاً: استعمال نظام الوقوف لتثبيت الخرطوم ورأس التنظيف عند نقل الأثاث أو البساط .
- ادخال خطافة رأس التنظيف الكبير الى المقبس الخلفي للمكنسة الكهربائية .


2 تعديل قوة الشفط (حسب الموديلات)

- تعديل قوة الشفط بمفتاح تحكم قوة الشفط في مقبض الخرطوم . (حسب الموديلات)
- تركيب مقبض الخرطوم مع جهاز التعديل اليدوي لقوة الشفط (حسب الموديلات)

1 كيفية الادخال والاستعمال

- سحب السلك الكهربائي الى الطول المطلوب وادخاله الى المقبس .
- دفع مفتاح تحكم قوة الشفط الى الوضع الذي تريده . (حسب الموديلات)
- دفع مفتاح تحكم قوة الشفط الى الوضع عيب لوقف العمل. (حسب الموديلات)
- ضغط المفتاح الكهربائي لتشغيل المكنسة الكهربائية . (حسب الموديلات)
- ضغط زر عجلة السلك الكهربائي لارجاع السلك الكهربائي بعد الاستعمال



كيفية الاستعمال تفريغ علبة الغبار

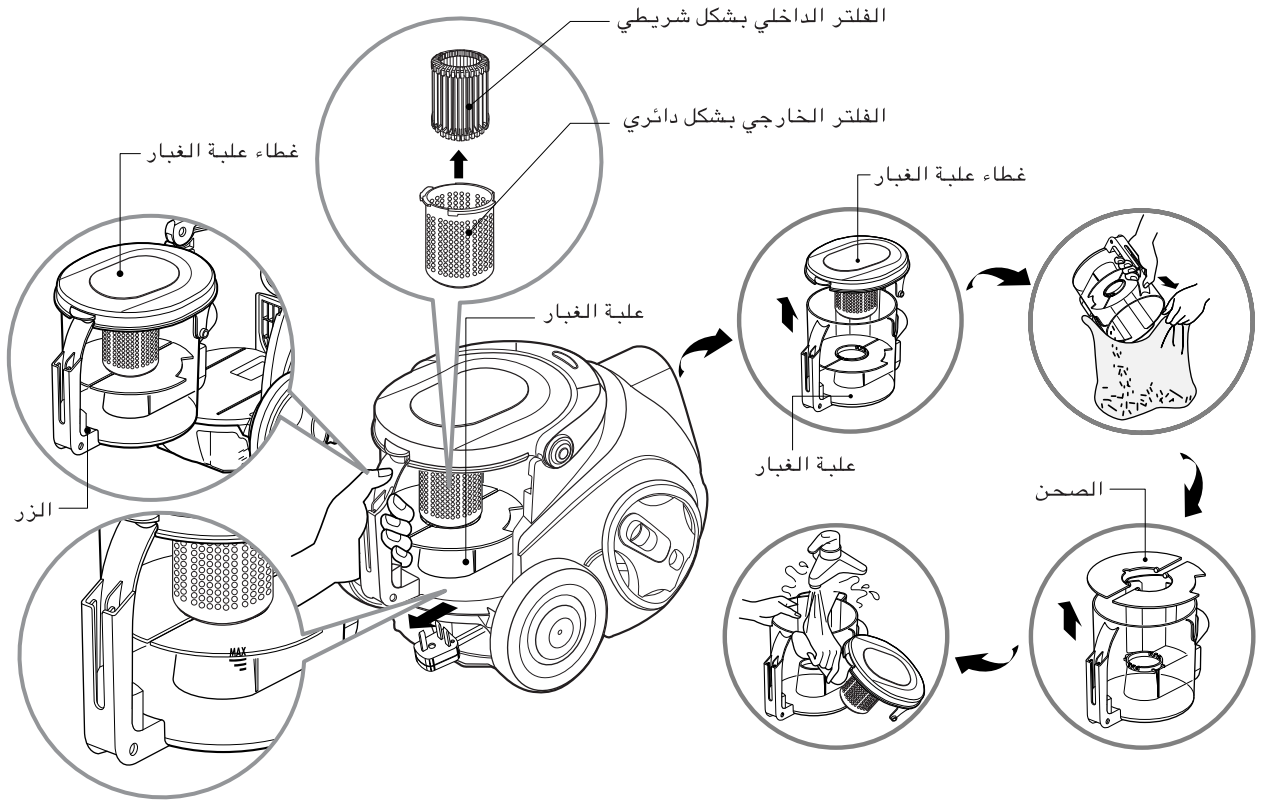

- فتح غطاء علبة الغبار .
- فك الصحنين من علبة الغبار .
- تنظيف كل الأجزاء بالقماش المرن .
- تنظيف كل الأجزاء بالماء الباردة بشكل خفيف

قد تكون قوة الشفط ضعيفة عند شفط الغبار الكثير .
فيجب تنظيف الفلتر هذه الأحوال .

- اطفاء المكنسة الكهربائية وإخراج القابس .
- يتم تركيب المكنسة الكهربائية مع علبة الغبار وفلتر المحركات .
- يتم تركيب المكنسة الكهربائية مع علبة الغبار وفلتر المحركات .
- ضغط الزر وسحب علبة الغبار الى الأمام .
- فتح غطاء علبة الغبار .
- تنظيف الفلتر الشريطي والفلتر الدائري .
- ادخال علبة الغبار الى الصندوق حتى تثبيتها لاعادة التركيب .

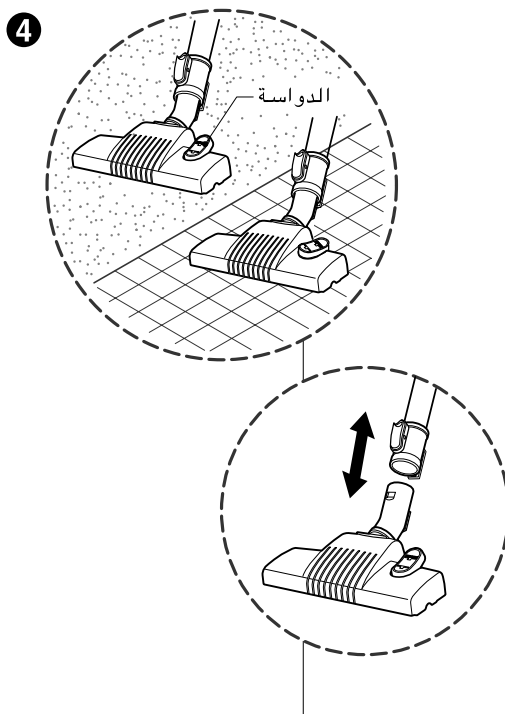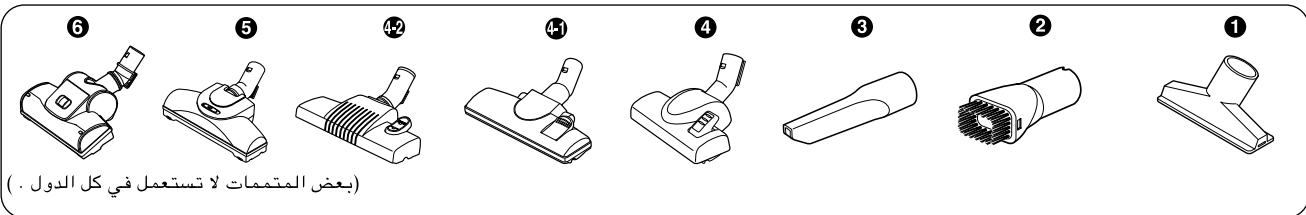


4 رأس التنظيف الكبير (حسب الموديلات)

- يتم تركيب الرأس ذو الوضع الثنائي مع الدواسة التي يمكنك اختيار نوع الأرض بها لتنظيف.
- وضع الأرضية الصلبة (الأرضيات الباركية أو السراميك) ضغط الدواسة لتخفيض الفرشاة
- وضع السجاد والبساط ضغط الدواسة لرفع الفرشاة.

كيفية الاستعمال استعمال رأس التنظيف والفوهات

فتح الكيس البلاستيكي وإخراج الممتصات منه . تركيب المقبض الى الأنبوب المتراكب .
ثم تركيب فرشاة الغبار وأدوات تنظيف الأركان وفوهة مواد التنجيد الى المقبض . تركيب
الممتصات الى الخرطوم .

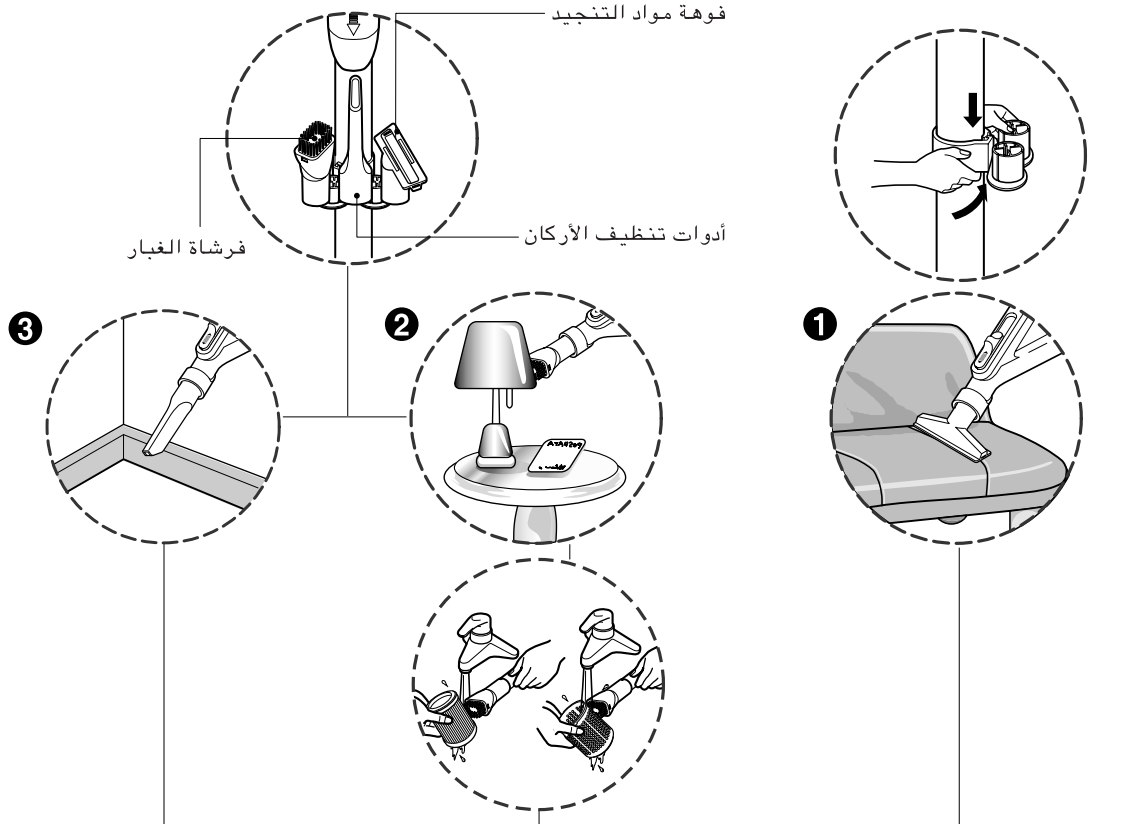

③ أدوات تنظيف الأركان


أدوات تنظيف الأركان
من أجل تنظيف الأماكن
التي يصعب الوصول إليها،
مثل الشبكة أو زوايا الصوف .

② فرشاة الغبار

فرشاة الغبار من أجل
شفط هياكل الصور و
الأثاث والكتب والسطوح
الغير منتظمة .
فرشاة الغبار من أجل
تنظيف الفلترات أيضا .

① فوهة مواد التنجيد

هذه الفوهة من أجل شفط
مواد التنجيد والمراتب ومالخ .
جهاز جمع الخيوط من أجل
التقاط الخيوط والزغب

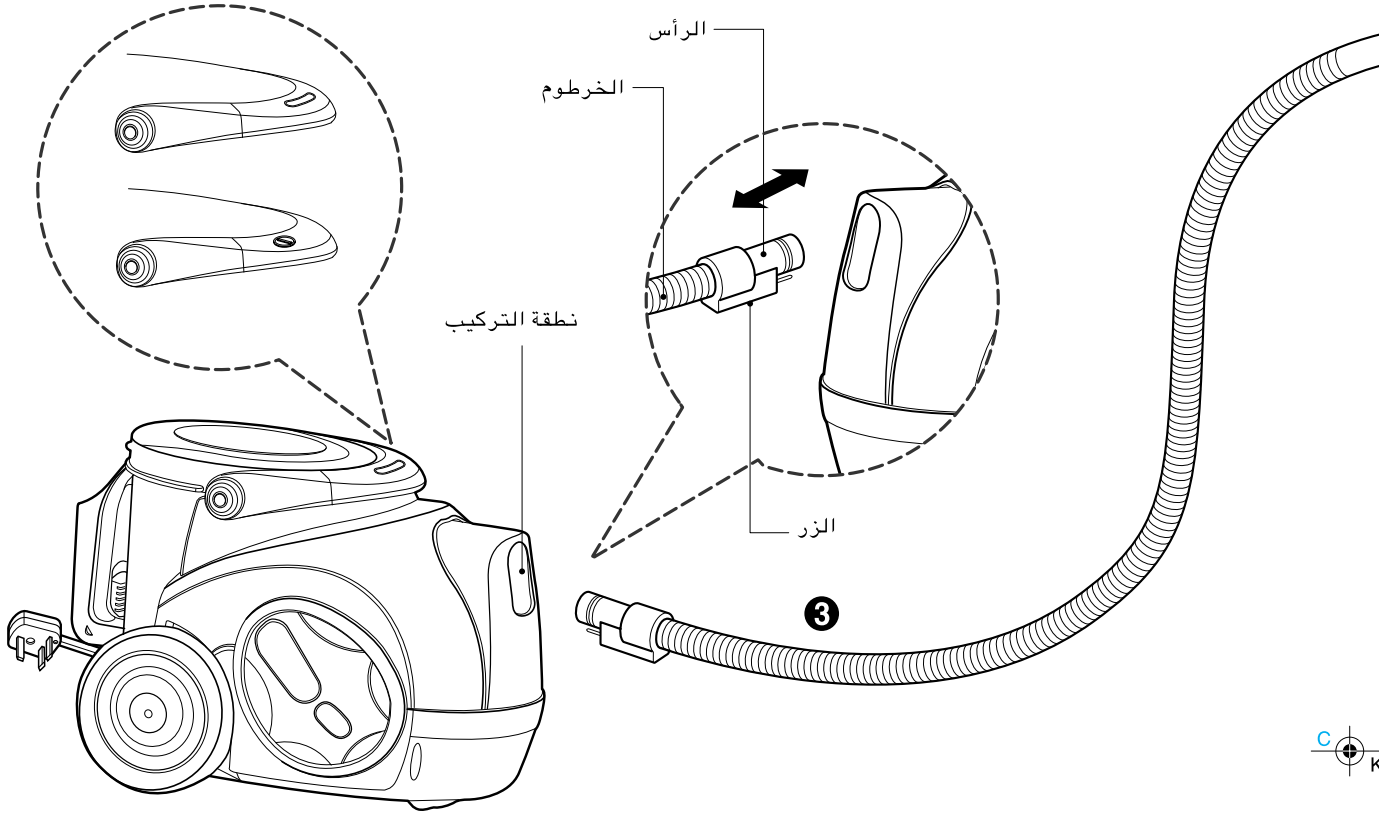

③ تركيب الخرطوم


⚠ التحذير!

قد تكون قوة الشفط ضعيفة عند شفط الغبار الكثير .
 فيجب تنظيف الفلتر في هذه الأحوال .
 يجب تفريغ علبة الغبار إذا كان الغبار الى أكبر حد .
 ويجب تنظيف الفلتر إذا أصبح ٥ مرات .

- ادخال نهاية رأس الخرطوم الى نقطة التركيب للمكنسة الكهربائية .
- فك الخرطوم من المكنسة الكهربائية، ضغط الزر من الرأس، السحب الى الأمام .

كيفية الاستعمال تركيب المكنسة الكهربائية

تركيب رأس التنظيف الكبير الى نهاية الأنبوب

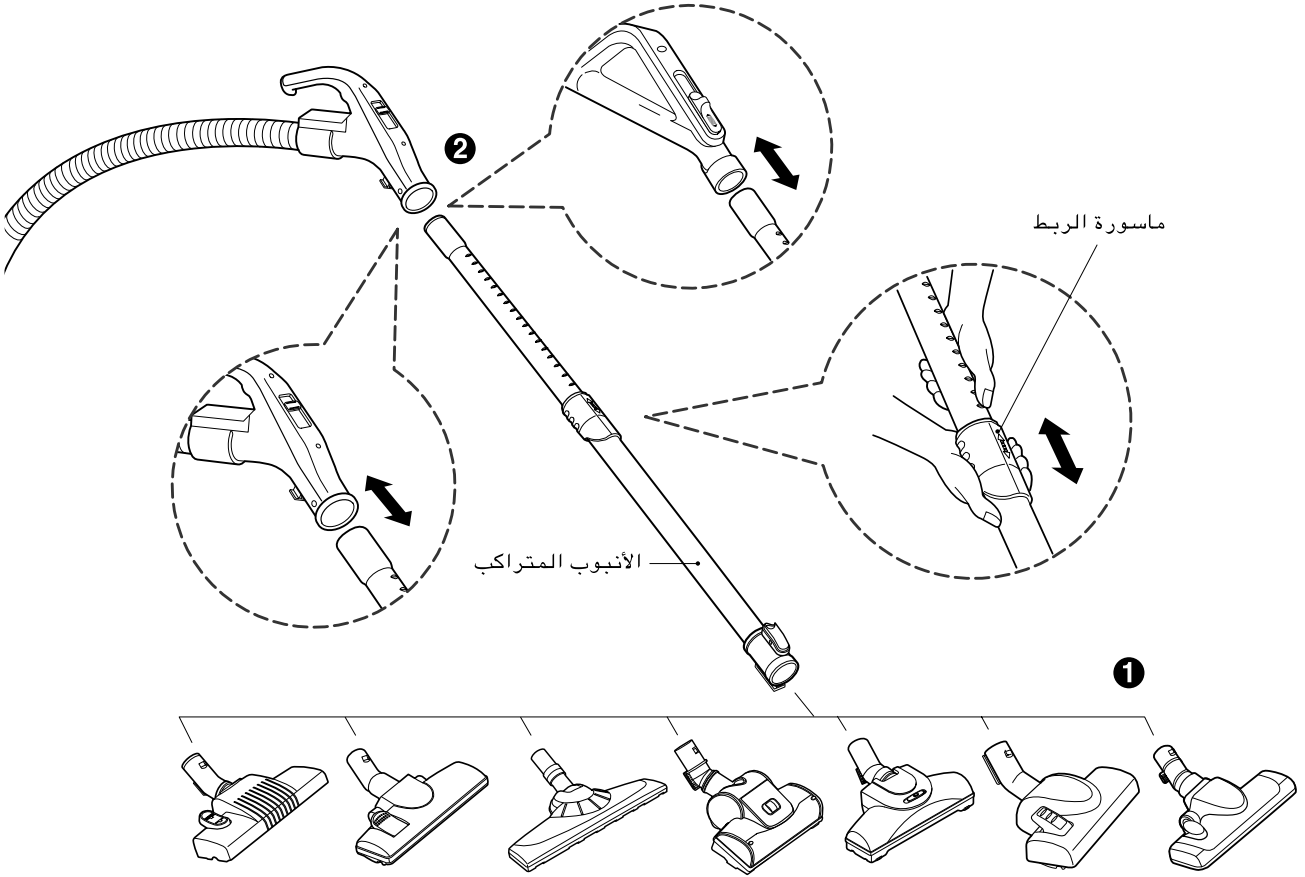

② الرأس ذو الوضع الثنائي (حسب الموديلات)

① الأنبوب المتراكب (حسب الموديلات)

ادخال الأنبوب المتراكب الى الفوهة الخارجية

- ضغط ماسورة الربط للتركيب .
- سحب الأنبوب الى الطول المطلوب .
- اعادة ماسورة الربط لاقفال الأنبوب في مكان مناسب .
- ادخال الأنبوب المتراكب الى خرطوم المقبض بشكل ثابت .

التعليمات الأمنية الهامة



تنبيه

- لا تضع أي أغراض في الفتحات حيث يمكن أن يؤدي عدم القيام بذلك إلى تلف المنتج .
- لا تستخدم المكنسة في حالة انسداد الفتحات: احفظ الفتحات بعيدا عن الأتربة أو النسالة أو الشعر أو أي شيء قد يقلل تيار الهواء .
- حيث يمكن أن يتسبب ذلك في تلف المنتج .
- لا تستخدم المكنسة بدون صندوق الأتربة و/أو المرشحات مثبتة في أماكنها.
- حيث يمكن أن يؤدي عدم القيام بذلك إلى تلف المنتج .
- لا تستخدم المكنسة في تنظيف الأشياء الحادة والصلبة مثل الدبابيس، أو الحجارة، أو الألعاب الصغيرة، إلخ .
- فقد تتلف هذه الأشياء المكنسة أو صندوق الأتربة .
- تخزين المكنسة الكهربائية داخل المنزل .
- أحفظ المكنسة بعيدا بعد الاستخدام لمنع لتجنب التعثر فيها .
- المكنسة غير معدة للاستخدام من قبل الأطفال أو الافراد ذوي الاحتياجات الخاصة بدون رقابة .
- حيث يمكن أن يؤدي عدم القيام بذلك إلى الإصابة الجسدية أو تلف المنتج .
- استخدم قطع الغيار المنتجة أو الموصى بها من قبل وكلاء خدمة شركة . نضعفكمهذعظفم .
- حيث يمكن أن يؤدي عدم القيام بذلك إلى تلف المنتج .
- استخدم المكنسة الكهربائية كما هو موصوف في هذا الدليل فقط استخدمها فقط مع الملحقات أو المرفقات الموصى بها أو المعتمدة من .
- حيث يمكن أن يؤدي عدم القيام بذلك إلى الإصابة الجسدية أو تلف المنتج .
- لتجنب الإصابة الجسدية أو لمنع الجهاز من الصندوق عند تنظيف السلالم، ضع المكنسة دائما أسفل السلالم .
- حيث يمكن أن يؤدي عدم القيام بذلك إلى الإصابة الجسدية أو تلف المنتج .

الوقاي الحراري:

يوجد بهذه المكنسة ترموستات يحميها في حالة ارتفاع درجة حرارة المحرك. في حالة توقف المكنسة الكهربائية فجأة، فأغلق المفتاح وافصلها عن التيار الكهربائي. افحص المكنسة الكهربائية للتأكد من عدم وجود مصدر لارتفاع الحرارة مثل امتلاء غرفة الأتربة أو انسداد خرطوم أو انسداد مرشح. في حالة وجود أي من هذه الحالات، قم بإصلاحها أو انتظر لمدة ٣٠ دقيقة على الأقل قبل محاولة استخدام المكنسة الكهربائية. وبعد مرور ٣٠ دقيقة، قم بتوصيل المكنسة الكهربائية بالتيار الكهربائي وأدر المفتاح .

التعليمات الأمنية الهامة

الرجاء قراءة جميع التعليمات قبل استخدام المكنسة الكهربائية لمنع خطر حدوث حريق، أو صدمة كهربية، أو إصابة للأشخاص، أو تلف عند استخدام المكنسة الكهربائية، لا يشمل هذا الدليل كل الظروف المحتملة التي قد تحدث. اتصل دائماً بفني الخدمة أو المصنع في حالة وجود أية مشكلات لا تفهمها يتوافق هذا الجهاز مع قوانين الاتحاد الأوروبي: EEC/23/73، وقانون الفولت المنخفض 89/336/CBE - وقانون EMC.

هذا هو رمز تنبيه للسلامة.

ينبهك هذا الرمز ضد المخاطر المحتملة التي يمكن أن تقتلك أو تؤذيك أنت أو الآخرين.

تنبيه للسلامة وتعني كلمة تحذير أو "WARNING" حق تلي كل رسائل السلامة كل رمز "CAUTION" ستنبيه س تعني هذه الكلمات ما يلي:



ينبهك هذا الرمز إلى المخاطر أو الممارسات غير الآمنة والتي قد تؤدي إلى إصابة جسدية خطيرة أو الوفاة.

تحذير

ينبهك هذا الرمز إلى المخاطر أو الممارسات غير الآمنة والتي قد تؤدي إلى إصابة جسدية أو تلف الممتلكات.

تنبيه

تحذير

- **أفضل مصدر التيار الكهربائي قبل صيانة الوحدة أو تنظيفها أو عند عدم استخدام المكنسة.**
قد يؤدي عدم القيام بذلك إلى الصدمة الكهربائية أو الإصابة الجسدية.
- **لا تستخدم المكنسة في تنظيف أشياء حارقة أو مصدر للاذخنة، مثل السجائر أو الرماد الساخن.**
حيث يمكن أن يؤدي ذلك إلى الوفاة أو الحريق أو الصدمة الكهربائية.
- **لا تتم بتنظيف المواد القابلة للاشتعال أو الانفجار مثل الجازولين أو البنزين أو مخفف الطلاء أو البروبان (سوائل أو غازات).**
حيث يمكن للاذخنة الذي ينبعث من هذه السوائل أن يتسبب في خطر الحريق أو الانفجار حيث يمكن أن يؤدي ذلك إلى الوفاة أو الإصابة الجسدية.
- **لا تمسك القابس أو المكنسة بأيدي مبللة.**
حيث يمكن أن يؤدي ذلك إلى تلف المنتج أو الصدمة.
- **لا تفصل التيار الكهربائي بجذب السلك.**
حيث يمكن أن يؤدي ذلك إلى تلف المنتج أو الصدمة الكهربائية.
- **لا تستبدل القابس بأي شكل من الأشكال**
قد يؤدي عدم القيام بذلك إلى الصدمة الكهربائية أو الإصابة الجسدية أو تلف المنتج قد يؤدي القيام بذلك إلى الوفاة إذا لم يكن القابس مناسباً، فاتصل بكهربائي مختص لتركيب المنفذ الصحيح.
- **يجب فقط القيام بإصلاح الأجهزة الكهربائية من قبل مهندس صيانة متخصصين.**
قد تؤدي الإصلاحات غير السليمة إلى مخاطر جسيمة للمستخدم.
- **لا تقم بتوصيل التيار الكهربائي إذا لم يكن المقبض على الوضع OFF (إيقاف التشغيل).**
حيث يمكن أن يتسبب ذلك في الإصابة الجسدية أو تلف المنتج (حسب الطراز)
- **ابق الأطفال بعيداً ولاحظ العوائق عند لف السلك لمنع الإصابة الجسدية.**
يتحرك السلك بسرعة أثناء اللف. (حسب الطراز)
- **يحتوي الخرطوم على أسلاك كهربائية لا تستخدمه إذا كان تالفاً أو مقطوعاً أو مثقوباً**
حيث يمكن أن يؤدي عدم القيام بذلك إلى الوفاة أو الصدمة الكهربائية (حسب الطراز)
- **لا تسحب المكنسة من سلك التيار أو تحملها منه، ولا تستخدم سلك التيار كمقبض، ولا تغلق الباب على سلك التيار، أو تلف سلك التيار حول أطراف حادة لا تسحب المكنسة الكهربائية على سلك التيار احتفظ بسلك التيار بعيداً عن الأسطح الساخنة.**
قد يؤدي عدم القيام بذلك إلى الصدمة الكهربائية أو الإصابة الجسدية أو الحريق أو تلف المنتج.
- **لا تستخدم المكنسة الكهربائية كلعبة.** يجب الانتباه الشديد عند استخدام المكنسة أو عندما تكون قريباً من الأطفال حيث يمكن أن يتسبب ذلك في الإصابة الجسدية أو تلف المنتج.
- **لا تستخدم الجهاز إذا كان سلك التيار الكهربائي تالفاً أو معيباً**
حيث يمكن أن يتسبب ذلك في الإصابة الجسدية أو تلف المنتج. في هذه الحالة اتصل بوكيل خدمة شركة نذرفقمهذعظغم لتجنب المخاطر.

المحتويات

5-4	التعليمات الأمنية الهامة
6	كيفية الاستعمال
6	تركيب المكنسة الكهربائية
8	استعمال رأس التنظيف والفوهات
10	تفريغ علبة الغبار
11	تشغيل المكنسة الكهربائية
12	تنظيف الفلتر
13	تنظيف فلتر العادم
14	دليل الاستعمال للفوهة الطربينية (المختارة)
15	الاصلاح



دليل الاستعمال

V-CD271NT*


V-CD271HT*

V-CD281NT*

V-CD281HT*

V-CD201NT*

V-CD201HT*

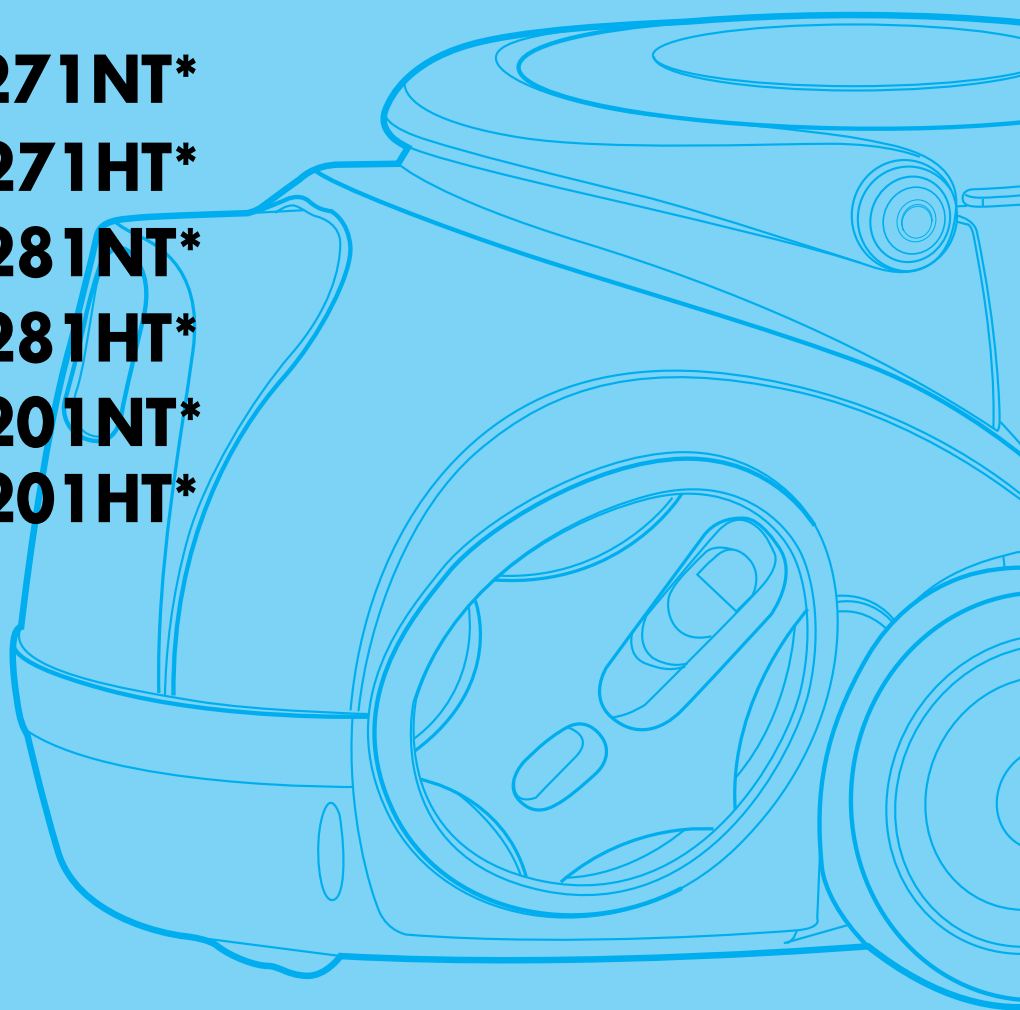

المكنسة الكهربائية بدون الكيس

