

Model	VF5720***/VF5718***		
Language	English/Hebrew		
Page	42	Color(cover/body)	2/1
Material	100g	Size(W*H)	145*215
Date	2009/03/28	Designer	YANGZH I HUA
Part No.	MFL56848303	Description	MANUAL, OWNERS


Chage Record

No.	Change content	ECO No.	Date	Designer	Confirm
①					
②					
③					
④					
⑤					
⑥					
⑦					
⑧					
⑨					



Upright Vacuum Cleaner Owner's Manual

MODEL: VF5720 * * *
VF5718 * * *

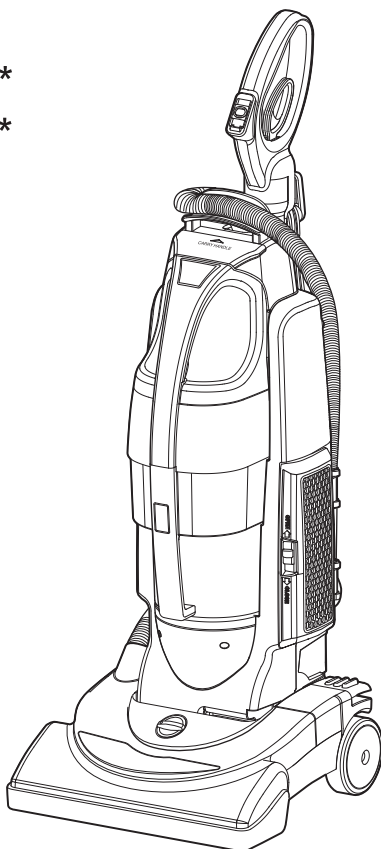

**PLEASE READ THIS MANUAL
THOROUGHLY AND CAREFULLY BEFORE
OPERATING THE VACUUM CLEANER**

TABLE OF CONTENTS

INFORMATION FOR YOUR SAFETY.....	3-4
PARTS AND FEATURES	5
TELESCOPIC HANDLE RELEASE	6
CORD RELEASE	6
SWITCH OPERATION	7
BODY RELEASE AND POSITIONS.....	7
RECOMMENDED PILE HEIGHT SETTINGS	7
ATTACHMENT USE CHART	8
VACUUMING TIPS	8
ATTACHMENTS.....	8
PERFORMANCE FEATURES.....	10
VACUUM CLEANER CARE.....	11
Vacuum Storage	11
Dust bin assembly.....	11
Dust bin cleaning	12
Filters cleaning / changing	13
Belt Changing and Agitator Cleaning.....	14
Cleaning exterior.....	16
Removing clogs	16
TROUBLESHOOTING	17


INFORMATION FOR YOUR SAFETY

Please read all the following information, which contains important instructions for the safety, the use and the maintenance of the appliance.

This appliance complies with the following EC Directives: -2006/95/EC,

-Low Voltage Directive -2004/108/EC-EMC Directive.

- ❑ Never allow children to use the appliance unsupervised.
- ❑ Do not allow it to use as a toy, injury could result.
- ❑ Do not continue to the cleaner if any appears to be faulty, missing or damaged.
In these cases, contact an approved LG Electronics Service Agent.
- ❑ Repairs, when necessary, must be performed at an approved LG Electronics Service Agent.
- ❑ Use only parts produced and recommended by LG. Otherwise, it could invalidate your warranty.
- ❑ Do not use without the dust bin or air filter.
- ❑ Do not use the vacuum cleaner If the power cord is damaged or faulty.
- ❑ If the power cord is damaged, it must be replaced by an approved LG Electronics Service Agent to avoid a hazard.
- ❑ Do not unplug by pulling on cord.
- ❑ Do not pull on the supply cord, run over it, pull it around sharp edges or near/over hot surfaces.
- ❑ Always turn the vacuum cleaner off before:
 - Emptying the dust bin.
 - Cleaning or changing the filter.
 - Removing from the mains outlet.
- ❑ Do not leave vacuum cleaner with the plug connected to a mains outlet-unplug when not in use.
- ❑ Do not use the vacuum with any of the openings blocked with any object that may restrict the airflow.
- ❑ Do not put any part of the body, clothes or any object (e.g. stick) or into the opening or moving parts of the cleaner.
- ❑ Do not use outdoors.
- ❑ Do not vacuum hot ash, embers etc. or sharp objects.
- ❑ Do not vacuum flammable or explosive substances(liquids or gases).
- ❑ Do not vacuum water or other liquids.
- ❑ Do not handle the cleaner or plug with wet hands.
- ❑ Do not immerse the whole cleaner in water.
- ❑ Do not use vacuum cleaner without repaired if it was under water.
- ❑ When you vacuum with an attachment appliance that has a rotating brush roller:
 - Do not reach into the running brush roller.
- ❑ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
- ❑ If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.
- ❑ Do not vacuum fine dust.
- ❑ Do not expose vacuum cleaner to heat.
- ❑ Do not hold the dust bin handle when you move the vacuum.
 - If you push the dust bin release button, the dust bin might be separated from the vacuum.
And then the alarm sounds after the vacuum turns off.
 - You should hold the carry handle when you move the vacuum.

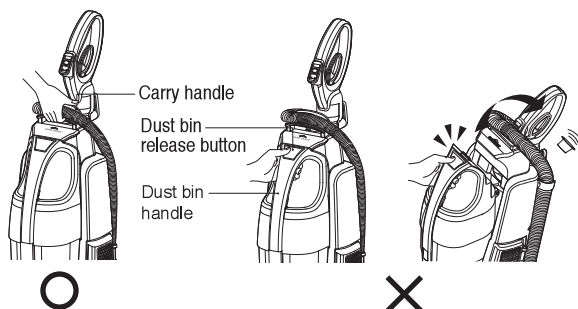

INFORMATION FOR YOUR SAFETY

Thermal protector: This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly shuts off, turn off the switch and unplug the cleaner. Check the cleaner for a possible source of overheating such as a full dust chamber, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minutes period, plug the cleaner back in and turn on the switch. If the cleaner still does not run, contact a qualified electrician.

Important for users in the UK.

The wires in the mains lead of this appliance are coloured in accordance with the following code:

BLUE-neutral

BROWN - live

VERY IMPORTANT:

Do not earth the appliance. If a 13 amp plug is fitted, fit a 13 amp **BS 1362 fuse**.

If any other type of plug is used, protect with a 15 amp fuse at the distribution board.

For appliances which come with mains lead and plug moulded on: the plug moulded on to the cable incorporates a fuse.

For replacement use a 13 amp BS 1362 fuse.


Only ASTA approved or certified fuses should be used.

The plug must not be used if the fuse cover/carrier is lost.

A replacement cover carrier must be obtained from authorised electrical goods retailers.

PARTS AND FEATURES

It is important to know your vacuum cleaner's parts and features to assure its proper and safe use. Review these before using your cleaner.

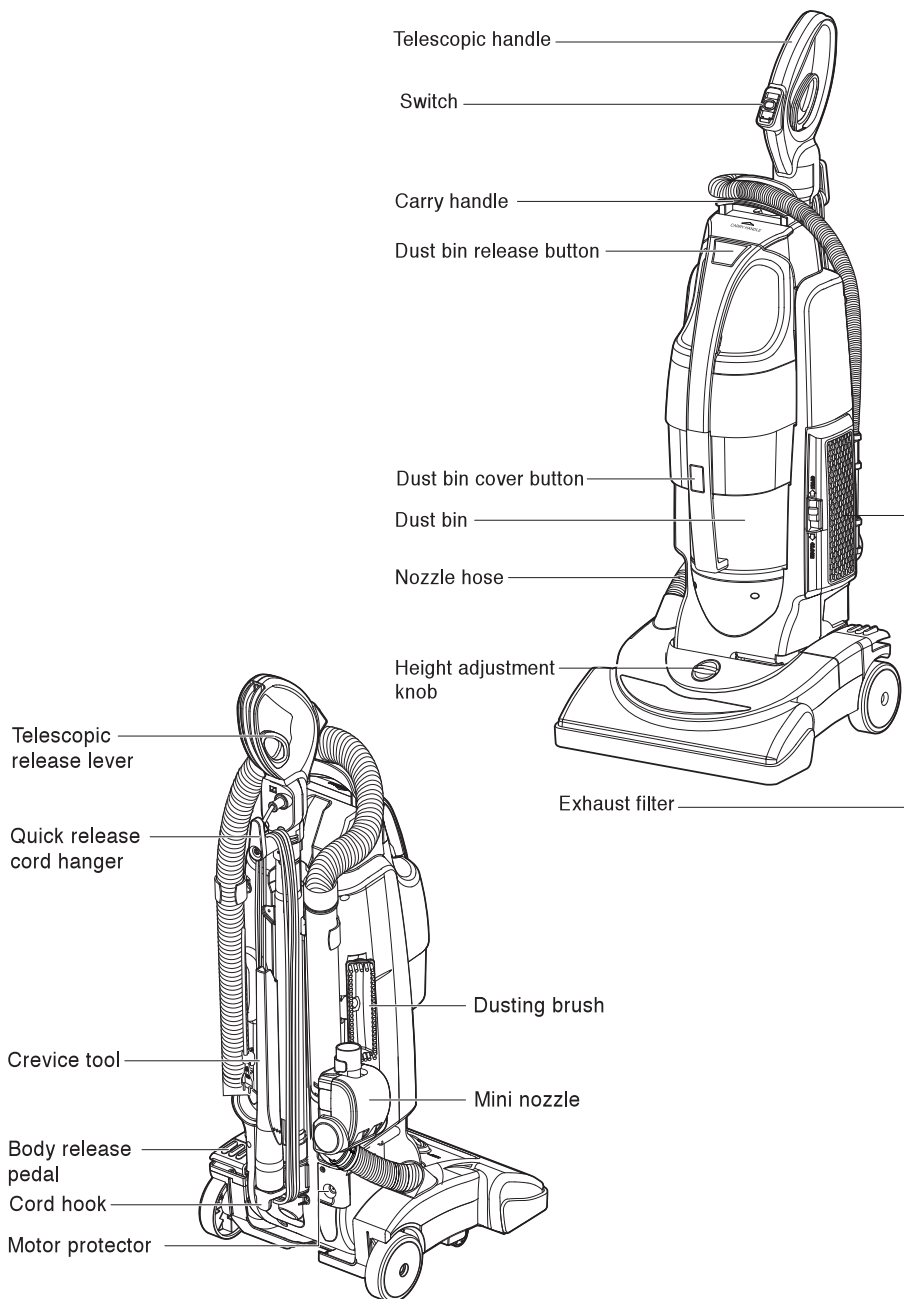


TELESCOPIC HANDLE RELEASE

Release the telescopic handle by pulling telescopic release lever up with fingers and pulling up the telescopic handle.

To lower the telescopic handle pull the telescopic release lever up with fingers and push down on the telescopic handle.


Note : For your convenience, adjust telescopic handle height properly to your height.

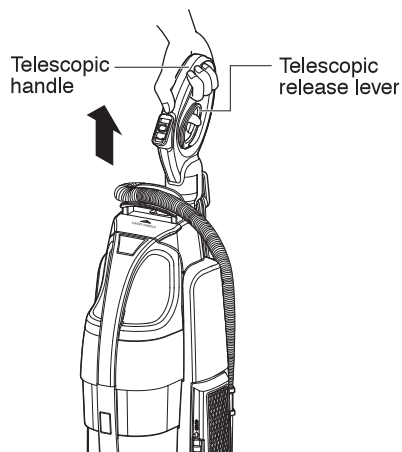


CORD RELEASE

Turn the quick release cord hanger to either side to release the power cord.


To store the power cord, wrap the power cord around the quick release cord hanger and hook, and clip the plug onto the power cord with cord holder.

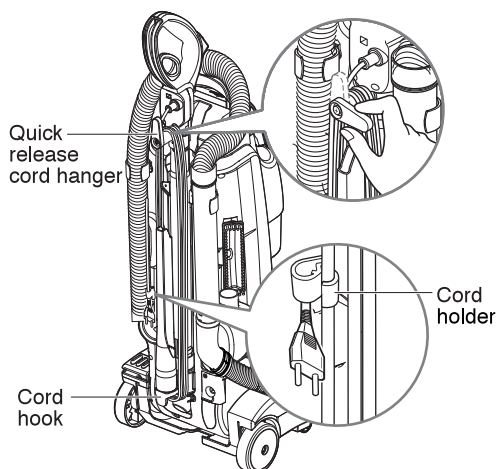

Plug shape:



NORTH AMERICA




UK



AUSTRALIA



EU




ISRAEL

SWITCH OPERATION

Switch operation

- Off
- Floor: Hard floors (Agitator off)
- Carpet: Agitator on

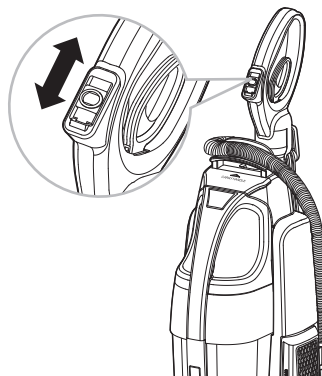


WARNING

Personal injury hazard

To avoid personal injury, do not turn switch On/Off if the vacuum or your hand is wet.

BODY RELEASE AND POSITIONS

Release the vacuum body by pressing down on the body release pedal with your foot and pulling back and down.

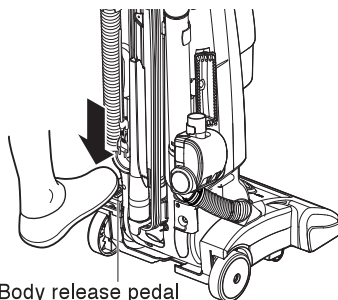

Body release pedal

RECOMMENDED PILE HEIGHT SETTINGS

To select a pile height setting :

Turn off cleaner first. Select a pile height setting by using height adjustment knob. Rotate the adjustment knob to the correct setting position.

Suggested pile height settings :

You may need to raise the height to make some jobs easier, such as scatter rugs and longer pile carpets.



For easiest adjustment, place cleaner in full upright position.

Attention: Special care is required when vacuuming certain types of carpet or floor covering. Always check the carpet or floor covering manufacturer's recommended cleaning instructions before vacuuming.



Height adjustment knob

ATTACHMENT USE CHART

ATTACHMENT	CLEANING AREA				
	Furniture*	Between Cushions*	Drapes*	Stairs	Walls
DUSTING BRUSH 	X	X	X	X	X
CREVICE TOOL 		X		X	X
MINI NOZZLE 		X		X	X

* Always clean attachments before using on fabrics.

VACUUMING TIPS

Carpet edges

Use attachments such as crevice tool, dusting brush, Mini-nozzle on carpet edges.
See page 8, 9



WARNING

Personal Injury Hazard

Use care if vacuum cleaner is placed on stairs. If it falls, personal injury or property damage could result.


ATTACHMENTS

To use attachments

- 1) Place the cleaner on a flat surface.
Remove the wand off the body by grasping and rotating while pulling up.
- 2) Set pile height to high
- 3) Place switch in "Floor" mode.


Dusting brush:

Functions as a dusting brush, also an upholstery nozzle which is useful for furniture, shelves etc. Attach as shown.

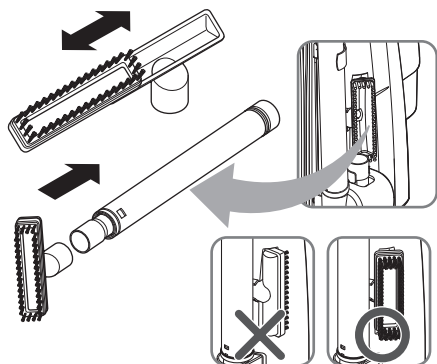


Crevice tool:

Crevice tool is attached as shown and used for corners, between cushions etc.

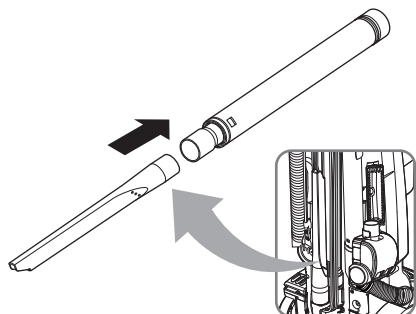


Note : For added reach the dusting brush can be used with crevice tool as shown.

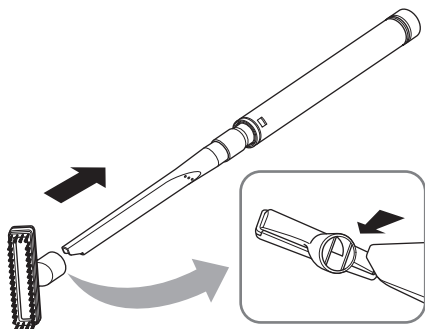


Mini-nozzle

Mini-nozzle is attached as shown and used for stairs and other hard to reach places.

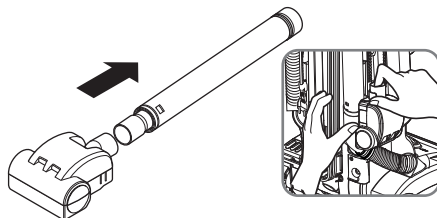

To remove Mini-nozzle cover:


Remove 2 screws on the bottom and take Mini-nozzle cover off as shown.

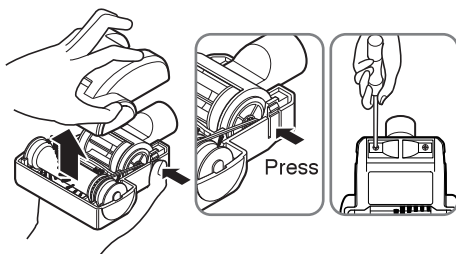

Frequently check and remove hair, string, and lint build-up the brush area. Failure to do so could cause damage to Mini-nozzle.

To extend wand:

Rotate the wand to unlock and pull.

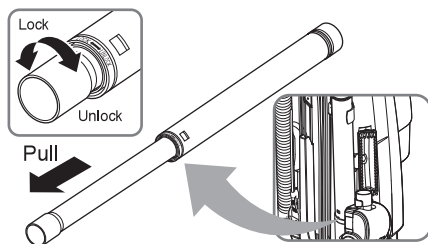

CAUTION

Do not pull the vacuum cleaner around the room by the hose. Property damage could result.

TO STORE ATTACHMENTS

Return the wand to its position on the body and the attachments to their holders.

PERFORMANCE FEATURES


Motor protector

This vacuum has a motor protector bypass valve which automatically opens to provide cooling air to the motor when a clog prevents the normal flow of air to the motor. If the bypass valve opens to prevent motor overheating and possible damage to the vacuum, you will notice a change of sound as air rushes through the valve opening.

NOTE: Do not block motor protector.

To correct problem: Check for and remove clogs. See CLOG REMOVAL section.

NOTE: The motor protector may open when using attachments or when cleaning new carpet, due to reduced airflow caused by the attachments themselves or by new carpet fiber filling the dust bin quickly.

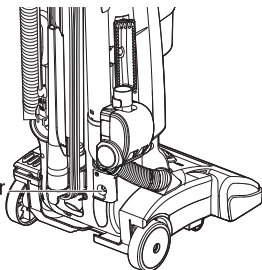

Motor protector

Thermal protector

This vacuum has a thermal protector which automatically trips to protect the vacuum from overheating. If a clog prevents the normal flow of air to the motor the thermal protector turns the motor off automatically to allow the motor to cool in order to prevent possible damage to the vacuum.

To correct problem: If this occurs, turn the vacuum off and unplug the power cord from the outlet to allow the vacuum to cool. Check for and remove clogs, if necessary. Wait approximately thirty(30)minutes and plug the vacuum in and turn back on to see if the motor protector has reset. The thermal protector system will not reset until the vacuum has cooled down.

VACUUM CLEANER CARE

Always follow all safety precautions when cleaning and servicing the vacuum cleaner.



WARNING

Electrical shock and personal injury hazard.

Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from cleaner suddenly starting.

VACUUM STORAGE


To store the vacuum cleaner when it is not used, assemble its cord and return its telescopic handle to its lower space saving position.



WARNING

Electrical shock and personal injury hazard.

Wrapping the cord too tightly puts stress on the cord and can cause cord damage. A damaged cord is an electrical shock hazard and could cause personal injury or damage.

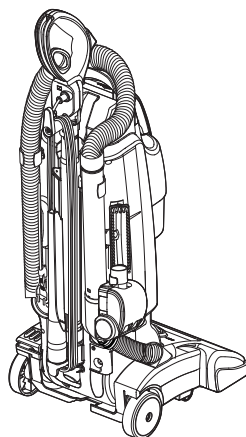

DUST BIN ASSEMBLY

Dust bin lid

The dust bin lid covers up the dust bin.

Air filter


The air filter the fine dust from dust bin.

Inner shield

The inner shield traps large dirt and debris that is picked up by the suction.

Dust bin

Where dirt is collected.

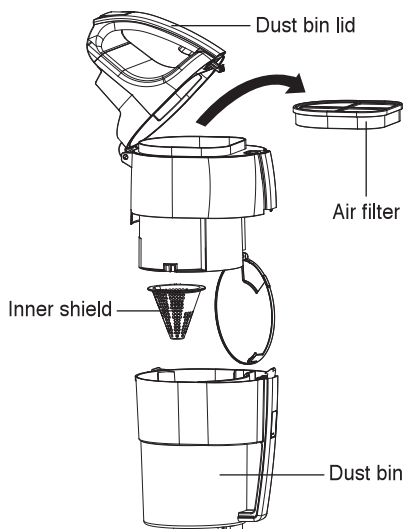

DUST BIN CLEANING

For best performance always empty the dust bin when the dust is full.




WARNING


Electrical shock and personal injury hazard.

Always unplug power cord from electrical outlet before performing any service on vacuum.

When the alarm sounds, check the dust bin. If the dust bin is full, empty the dust bin.

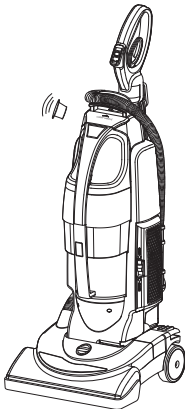


TO REMOVE DUST BIN, push the dust bin release button and pull the bin out of cleaner.

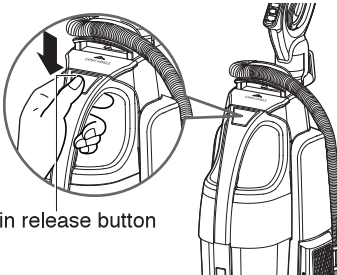



Dust bin release button

TO EMPTY DUST BIN, push the dust bin cover button as shown, separate the dust bin cover from the dust bin and remove dust.

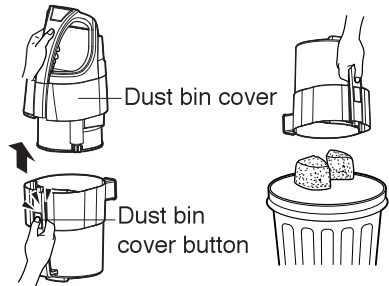


Note : When replacing the dust bin in the vacuum you need to push and snap it. Make sure that dust bin is fully engaged otherwise suction power could be low.

TO CLEAN DUST BIN remove catch on dust bin cyclone and separate the inner shield from the dust bin cover as shown.

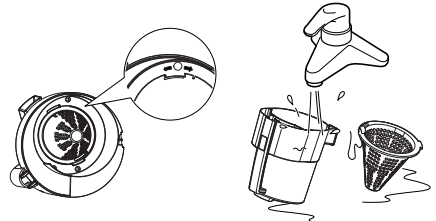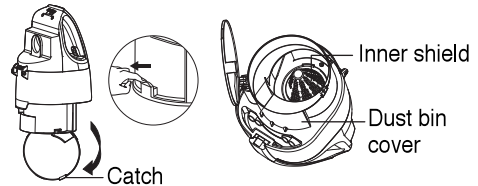


Do not use wet dust bin and inner shield. When reuse, dry completely.

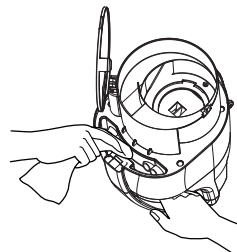


Clean dust bin cover with a cloth and brush to remove fluff or debris. And DO NOT USE ANY LIQUID AND WATER.

FILTERS CLEANING / CHANGING

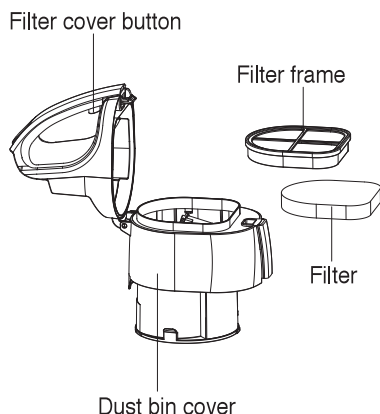

Press the filter cover button and separate the filter frame and the filter from the dust bin cover as shown.



Clean the filter frame and the filter in cold water only. **DO NOT USE DETERGENT OR SOAP.**

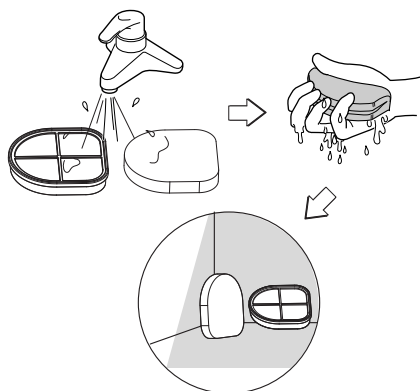

Let filter dry for 24 hours in the shade before putting it back.

TO CLEAN EXHAUST FILTER

Remove exhaust filter from vacuum and clean the filter in cold water only. **DO NOT USE DETERGENT AND SOAP.**

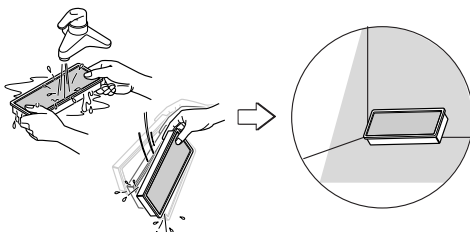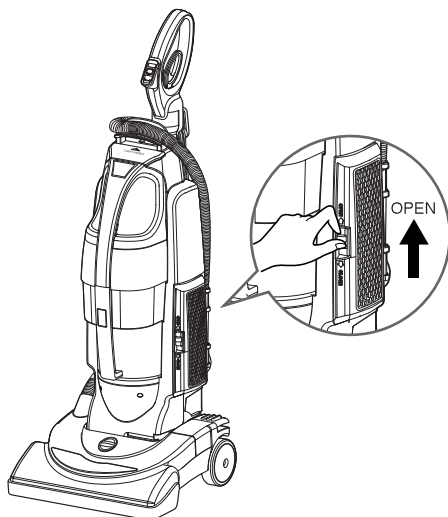

Allow exhaust filter to dry 24 hours in the shade before putting it back. Make sure that the filters dry completely.

FOR OPTIONAL PERFORMANCE, CHECK FILTERS FREQUENTLY AND CLEAN WHEN DIRTY.



CAUTION

Wet filter can cause permanent damage to cleaner.
Ensure that all filters dry completely.

The cycle of the cleaning.

- Air filter - Every 2 months.
- Exhaust filter - Once a year.

BELT CHANGING AND AGITATOR CLEANING



WARNING

Electrical shock and personal injury hazard.

Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from cleaner suddenly starting.



Frequently check and remove hair, string, and lint build-up in the agitator brush area. If build-up becomes excessive, follow the steps below. Should the belt become loose or should it break, follow the belt removal instructions.

NOZZLE BOTTOM PLATE REMOVAL / INSTALLATION


Disconnect electrical supply, press body release pedal and rotate body down, so the cleaner is laying flat on the floor.

To protect the floor surface place paper under the nozzle and work area.

Remove 4 screws from the bottom as shown. Remove the bottom plate as shown.

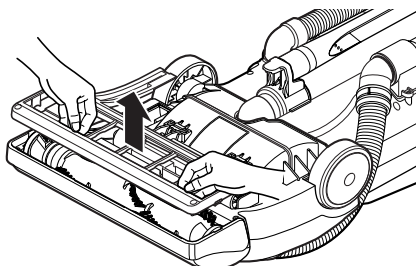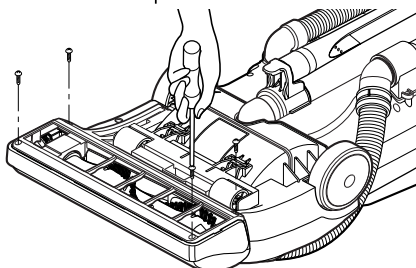

Check and remove hair, string, and lint build-up in the agitator brush area. To replace nozzle bottom plate, should regulation be placed in its place and reinstall things you removed.

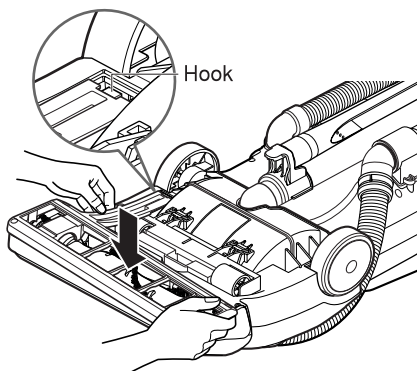

WARNING

Personal injury hazard


Always unplug the vacuum cleaner before cleaning the brush area as agitator may suddenly restart. Failure to do so can result in personal injury.

TO REMOVE BELT / CLEAN AGITATOR


Position hands on opposite ends of the agitator. If the belt is still attached to the agitator, there will be tension on it.

Carefully lift the right end of the agitator and then lift the other end.

Remove the worn or broken belt from the motor drive shaft and clean the agitator.

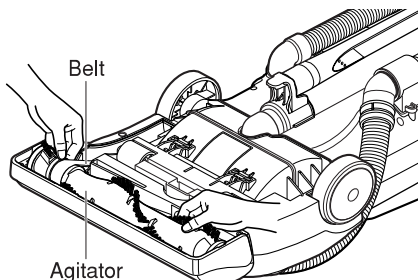

Remove string or hair that may be wrapped around the agitator.

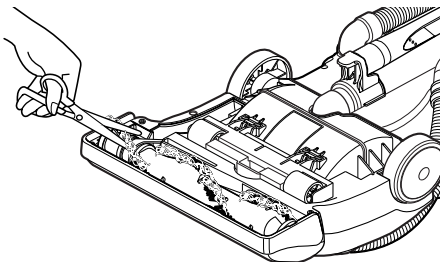


WARNING

Be careful when removing the agitator as the belt tension is high. Failure to do so could result in personal injury from the agitator releasing quickly and snapping away.


TO REPLACE BELT

Seat the right end of agitator into nozzle base.

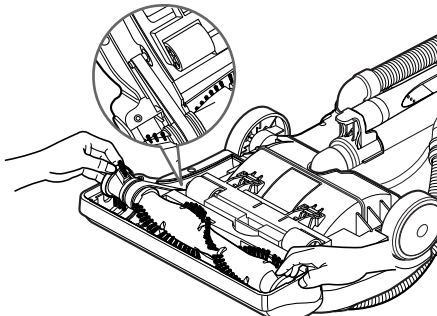


Loop the new belt on the motor shaft.


Loop the other end of belt onto the belt pulley on the left end of agitator.

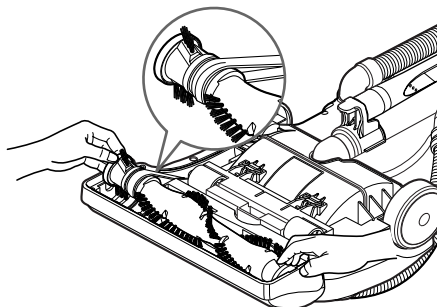


To seat agitator right end, pull both end of agitator forward and seat it into nozzle base.

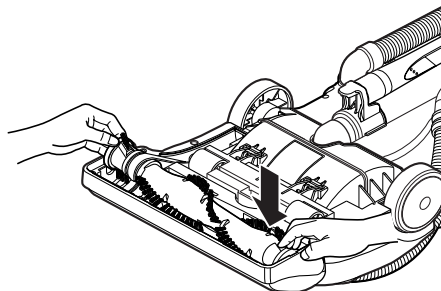

To seat agitator left end, put left end of agitator into slot in nozzle base as shown.

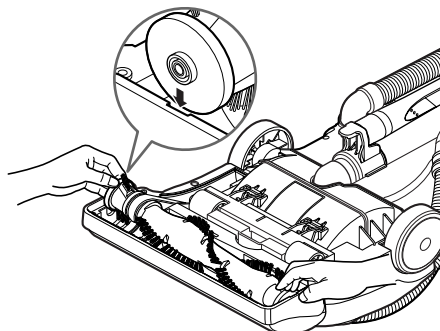

Press firmly, checking to see that each end is completely inserted. And then turn agitator making sure that belt turns freely and is not pinched between agitator and agitator shield.

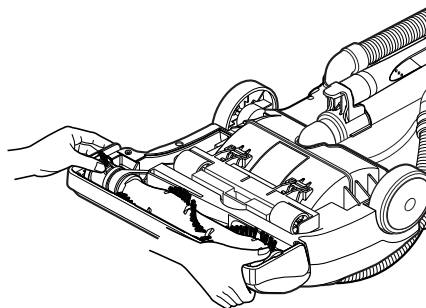

To replace the nozzle bottom plate, follow the NOZZLE BOTTOM PLATE REMOVAL / INSTALLATION section.(Page 14)

CLEANING EXTERIOR

Unplug power cord from wall outlet. Clean exterior using a clean, soft cloth that has been dipped in a solution of mild liquid detergent and water and wrung dry.

DO NOT drip water in the cleaner.

DO NOT clean tools in dishwasher or clothes washer. Wash tools in warm soapy water, rinse and air dry.

DO NOT use tools if they are wet.



REMOVING CLOGS

The hose located on the vacuum cleaner carries the dirt from the nozzle up to the dust bin. If the hose should become clogged :

Unplug vacuum. Remove the assembled wand, nozzle hose and check them.

Check the base of the hose for clogging as shown.

Check suction inlet and filters for clogs.

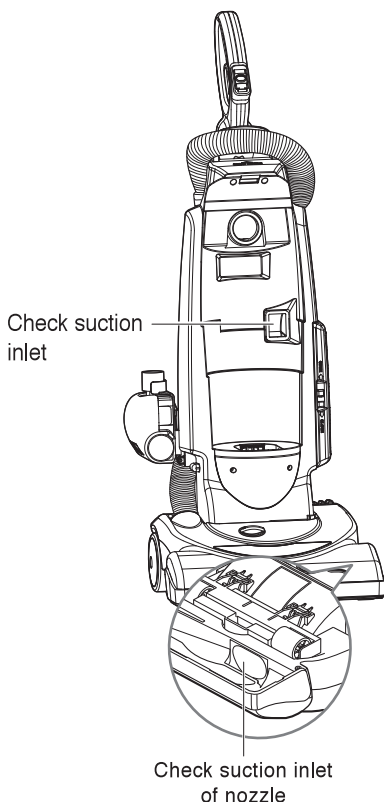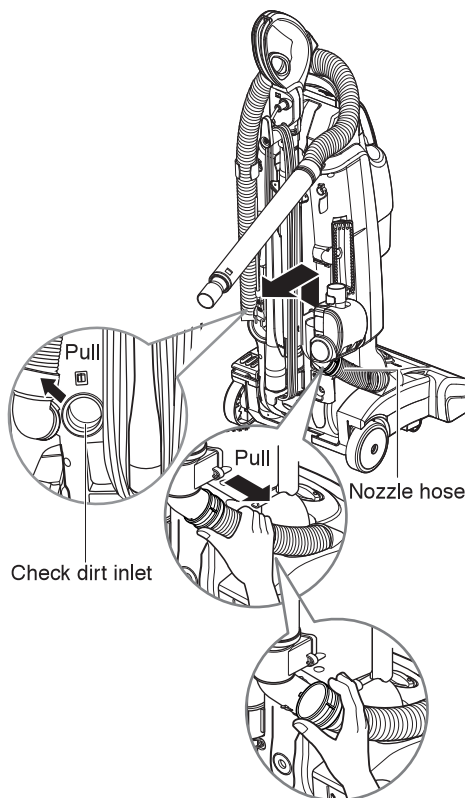

Note : Clogged filters can cause suction power to be low. To clean the filter, refer to FILTERS CLEANING / CHANGING section.
(Page 13)

TROUBLESHOOTING

Review this chart to find do-it-yourself solutions for a minor performance problems. Additional service needed, other than those described in this owner's manual, should be performed at an authorized LG Electronics Service agency.




WARNING

Electrical shock and personal injury hazard.

Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
CLEANER WILL NOT RUN	1. Unplugged at wall outlet. 2. Switch in off position. 3. Thermal protector activated.	1. Plug in firmly, check Motor protection system / fuse. 2. Push switch to floor or carpet mode. 3. See "To correct problem", page 10.
POOR DUST COLLECTION	1. Full or clogged dust bin. 2. Broken agitator belt. 3. Clogged hose or nozzle. 4. Hose not inserted fully 5. Worn agitator. 6. Hole in hose 7. Dust bin assembly improperly installed. 8. Belt not installed on motor shaft. 9. Motor protection system activated.	1. Empty dust bin and clean the filters. 2. Replace agitator belt. 3. Clean hose or nozzle area. 4. Insert hose. 5. Replace agitator. 6. Replace hose. 7. Properly install dust bin assembly. 8. Install belt on the motor shaft. 9. Check for clogs.
DUST ESCAPES THE DUST BIN	1. Dust bin assembly improperly installed.	1. Properly install dust bin.
SWITCH ON, MOTOR TURNS OFF AND THE ALARM SOUNDS	1. The dust bin is full. 2. The rotating blade in the dust bin is restricted by an obstacle. 3. The dust bin is in the wrong position.	1. Turn off the vacuum and empty the dust bin. 2. Turn off the vacuum and remove the obstacle from the dust bin. 3. Turn off the vacuum and reattach the dust bin in the correct position.

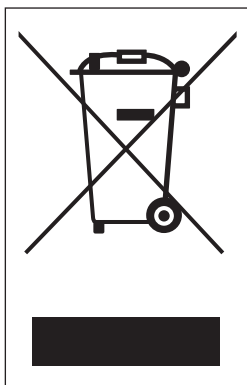

Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Note



Note



Note







הערות





הערות



פתרון בעיות

עיינו בטבלה זו כדי למצוא פתרונות לבעיות ביצועים קלות, שתוכלו לבצע בעצמכם. טיפולים דרושים נו ספים, פרט לאלה המתוארים במדריך למשתמש זה, יבוצעו בסוכנות שירות מורשית של Electronics LG.

אזהרה




סכנת התחשמלות ופציעה.

נחוק את אספקת החשמל בעת טיפול ביחידה או ניקוי.
אי סילוי הוראה זו עלול להסתיים בהתחשמלות או בפציעה.

בעיה	סיבה אפשרית	פתרון אפשרי
שואב האבק אינו נדלק	1. כבל החשמל מנותק מהשקע בקיר. 2. המחג במצב כבוי. 3. המגן התרמי הופעל.	1. חקעו את התקע בחוזקה, בדקו את מערכת הגנת המנוע/הנחיק. 2. לחצו על המחג למצב רצפה או שטיח. 3. עיינו בסעיף "תיקון הבעיה" בעמוד 10.
שאיבת לכלוך חלשה מאוד	1. מכל אבק מלא או סתום. 2. רצועת חובט קרועה. 3. צינור או פייה חסומים. 4. הצינור לא מוכנס עד הסוף. 5. חובט בלוי. 6. חור בצינור. 7. מכלול מכל האבק מותקן בצורה שגויה. 8. הרצועה לא מותקנת על ציר המנוע. 9. מערכת הגנת המנוע הופעלה.	1. רוקנו את מכל האבק ונקו את המסננים. 2. החליפו את רצועת החובט. 3. נקו את אזור הצינור או הפייה. 4. הכניסו את הצינור. 5. החליפו את החובט. 6. החליפו את הצינור הגמיש. 7. התקינו את מכלול מכל האבק כהלכה. 8. התקינו את הרצועה על ציר המנוע. 9. בדקו אם יש סתימות.
אבק נפלס מסכל האבק	1. מכלול מכל האבק מותקן בצורה שגויה.	1. התקינו את מכל האבק כהלכה.
שואב האבק דלוק, המנוע כבוי, ותשמעת האזעקה	1. מיכל האבק מלא. 2. הלהב הסובב שבתוכו של מיכל האבק נתקל במכשול. 3. מיכל האבק נמצא במקום לא נכון.	1. כבו את שואב האבק ורוקנו את מיכל האבק. 2. כבו את שואב האבק והסירו את המכשול ממיכל האבק. 3. כבו את שואב האבק והניחו את מיכל האבק במקום נכון.

השלכת המכשיר הישן

1. כאשר סמל פח האשפה עם איקס עליו מוצמד למוצר, פירוש הדבר שמוצר זה מכוסה על-ידי תקנת העווק האירופי 2002/96/EC.
2. יש להשליך את כל המוצרים החשמליים והאלקטרוניים בנפרד מהאשפה העירונית, דרך מתקני איסוף ייעודיים הממונים על-ידי הממשלה או הרשויות המקומיות.
3. השלכה כראוי של המכשיר הישן תסייע למנוע פגיעה בסביבה ובבריאות האדם.
4. לקבלת מידע מפורט יותר אודות השלכה של המכשיר הישן, פנו אל שירותי התברואה העירוניים או אל החנות שבה רכשתם את המוצר.

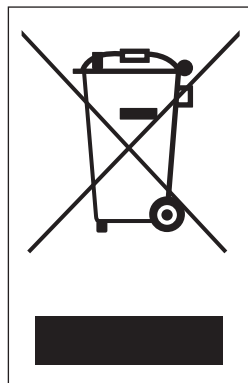

ניקוי החלק החיצוני

אסור לפתוף מים על השואב.

אסור לנקות את החלקים במדיח כלים או במכונת כביסה. רחצו את החלקים במי סבון פוש רים, שטפו והניחו לייבוש.
אסור להשתמש בכלים כשהם רטובים.

נתקו את כבל החשמל מהשקע בקיר. נקו את החלק החיצוני באמצעות מטלית נקייה ורכה שהוטבלה בתמיסה של נוזל ניקוי לא חריף ומים, ונסחטה.

הסרת סתימות

בדקו אם יש סתימות בבסיס הצינור, כפי שמוצג.


בדקו אם יש סתימות בפתח היניקה ובמסננים.




הערה: מסננים סחומים עלולים לפגוע בעוצמת השאיבה. לניקוי המסננים, עיינו בסעיף "ניקוי / החלפה של המסננים". (עמוד 13)

הצינור הממוקם על שואב האבק מעביר את הלך לוך מהפייה עד למכל האבק. אם הצינור נסתם:


נתקו את השואב מהחשמל. הסירו את המוט המורכב ואת צינור הפייה ובדקו אותם.

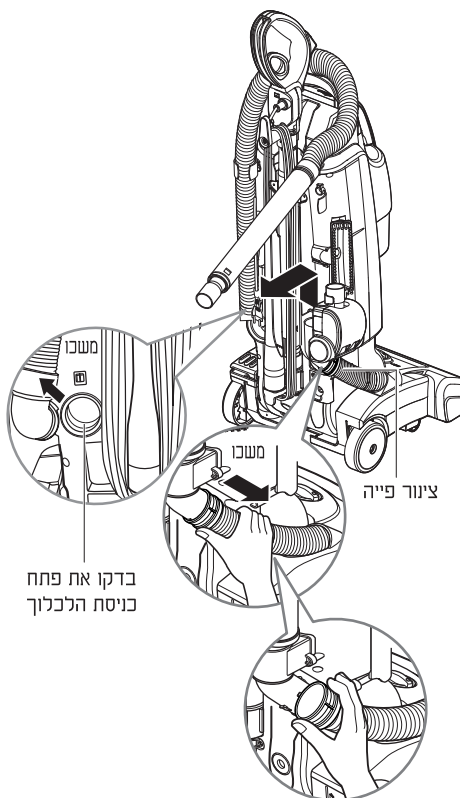


כדי לקבע את קצהו הימני של החובט, משכו את שני קצוות החובט לפנים, וקבעו את החובט בתוך בסיס הפייה.

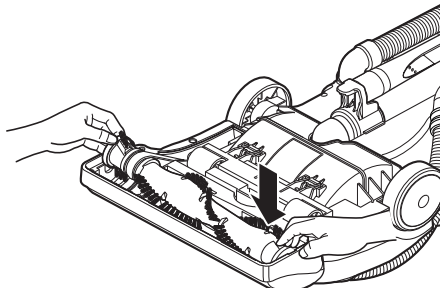

כדי לקבע את הקצה השמאלי של החובט, הניחו את הקצה השמאלי של החובט בתוך החריוך שב בסיס הפייה, כפי שמוצג באיור.

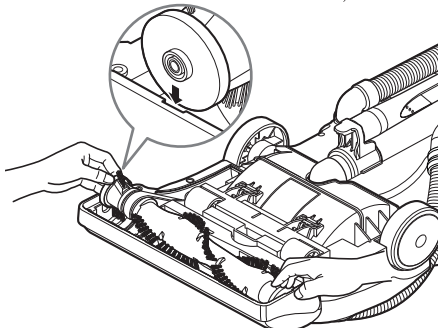


לחצו בחוזקה ובדקו ששני הקצוות מוכנסים לגמרי. לאחר מכן, סובבו את החובט וודאו שהרצועה מסתובבת בחופשיות ואינה לחוצה בין החובט והמגן שלו.

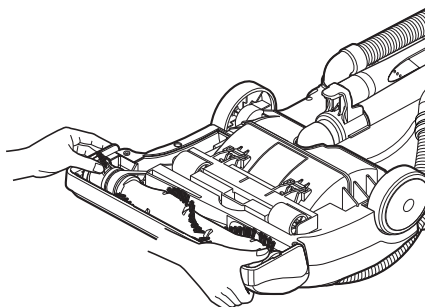

להתקנה מחדש של לוחית הפייה התחתונה, בצעו את ההוראות בסעיף "הסרה / התקנה של הלוחית התחתונה של הפייה" (עמוד 14).

הסירו את החוט או השערות שהסתככו בחובט.

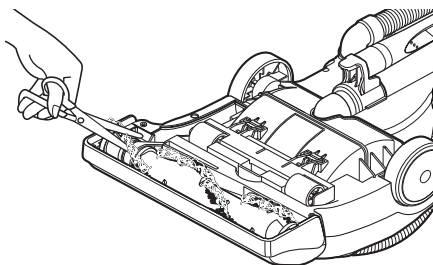


אזהרה




היזהרו בעת הסרת החובט, משום שהרצועה מתוחה מאוד. אי ביצוע הוראה זו עלול לגרום לפציעה עקב השתחררות מהירה של החובט.

החלפת הרצועה

הכניסו את הצד הימני של החובט לתוך בסיס הפייה.

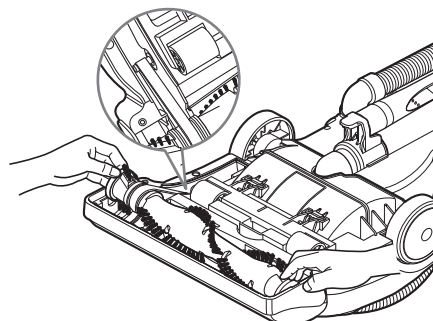


כרכו את הרצועה החדשה על ציד המנוע. כרכו את הקצה השני של הרצועה על גלגלת הרצוה, בקצה השמאלי של החובט.

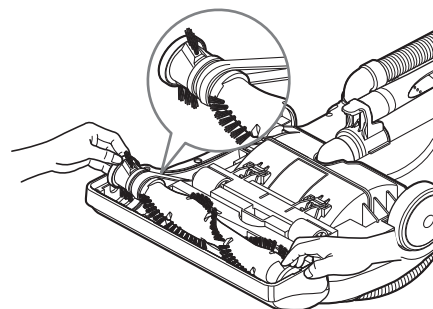

החלפת רצועה וניקוי החובט

בדקו והסירו הצטברות של שיער, חומים ומוך ב
אזור מברשת החובט. להתקנה מחדש של לוחית
הפייה התחתונה - פעלו בסדר הפוך, התקינו חז
רה את הברגים וחלקים אחרים שהוסרו.

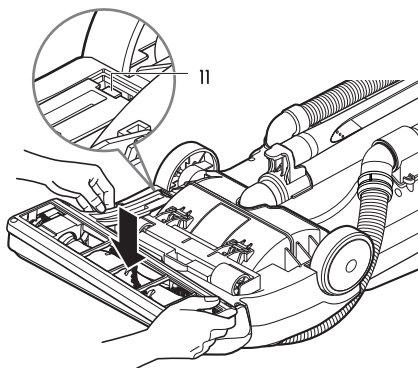


אזהרה



סכנת פציעה
נתקו תמיד את שואב האבק לפני ניקוי אזור המ
ברשת, מכיוון שהחובט עלול להתחיל לפעול
בצורה פתאומית. אי מילוי הוראה זו עלול לגרו
ם לפציעה.

הסרת רצועה / ניקוי החובט

הניחו את הידיים על שני קצות החובט. אם הרצועה
ה עדיין מחוברת לחובט, יהיה בו מתח.
הרימו בזהירות את הצד הימני של החובט ולאחר
מכן הרימו את הצד השני.
הסירו את הרצועה הבלויה או הקרועה מציד ההנ
עה של המנוע ונקו את החובט.

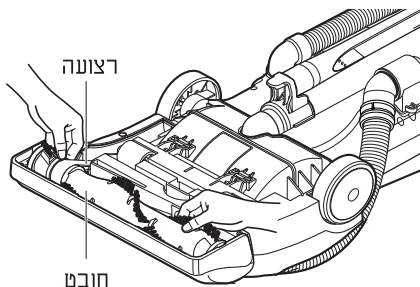

אזהרה



סכנת התחשמלות ופציעה.

נתקו את אספקת החשמל בעת טיפול ביחידה
או ניקויה. אי ביצוע הוראה זו עלול לגרום להת
חשמלות או לפציעה עקב הפעלה פתאומית ש
ל השואב.



בדקו לעתים קרובות והסירו הצטברות של שיער
, חומים ומוך באזור מברשת החובט. אם הצטברה
כמות ניכרת, בצעו את העלבים להלן. אם הרצו
עה משתחררת או נקדעת, בצעו את הוראות הסר
ת הרצועה.

הסרה / התקנה של הלוחית התחתונה של הפייה


נתקו את אספקת החשמל, לחצו על דוועת שחרור
גוף השואב וסובבו אותו כלפי מטה,
כך שהשואב ישכב על הרצפה.

כדי להגן על הרצפה, הניחו נייר תחת הפייה ואזור
העבודה.


הסירו את 4 הברגים מהחלק התחתון, כפי שמוצג.
הסירו את הלוחית התחתונה כפי שמוצג.

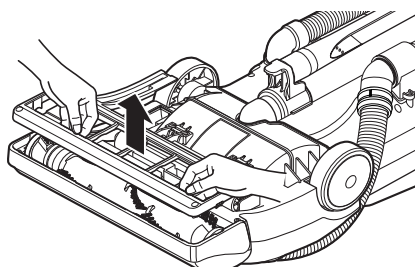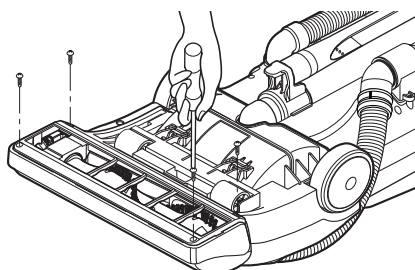


ניקוי / החלפה של המסננים

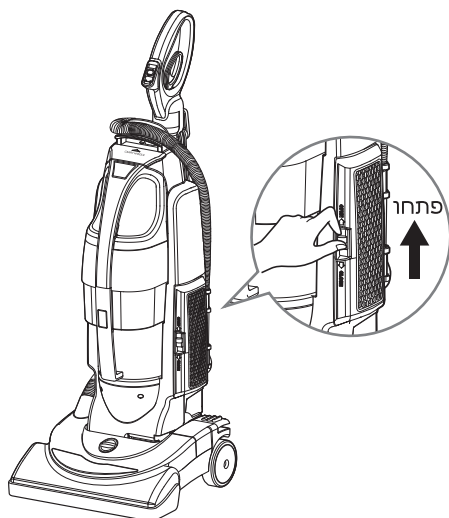


כפתור מכסה המסנן

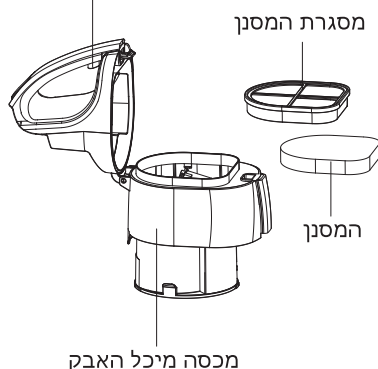

לחצו על כפתור מכסה המסנן, הסירו את מסגרת המסנן ואת המסנן ממכסה מיכל האבק כמוצג באיור.
נקו את מסגרת המסנן ואת המסנן רק במים קרים. אין להשתמש בתכשירי ניקוי או בסבון.

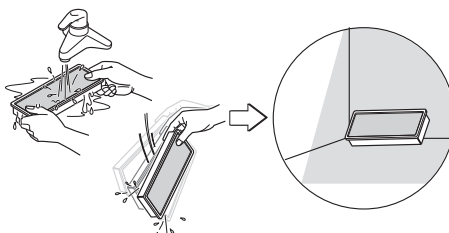

הניחו למסנן הפליטה להתייבש במשך 24 שעות בצל, לפני שתרכיבו אותו חזרה.
ודאו שהמסננים התייבשו לגמרי.
לקבלת ביצועים מיטביים, בדקו את המסננים לעתים קרובות ונקו אם הם מלוכלכים.

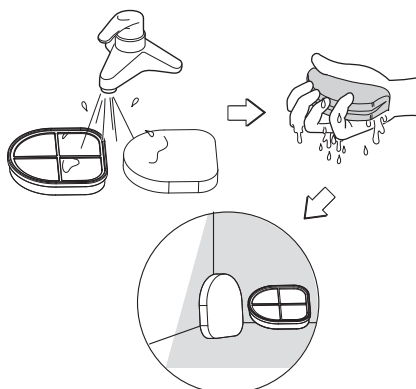

זהירות



**מסנן רטוב עלול לגרום נזק בלתי הפיך לשואב.
ודאו שכל המסננים התייבשו לגמרי.
מחזור הניקוי.**

- מסנן - כל 2 חודשים.
- מסנן פליטה - אחת לשנה.

הניחו למסנן להתייבש במשך 24 שעות בצל, לפני שתרכיבו אותו חזרה.
ניקוי מסנן הפליטה
הסירו את מסנן הפליטה מהשואב ונקו את המסנן והמאזר במים קרים בלבד. אין להשתמש בחומרי ניקוי או בסבון.

ניקוי מכל האבק




זהירות: כאשר מחזירים את מיכל האבק לתוך השואב, צריך ללחוץ ולסגור אותו בנקישה, צריך להבטיח שרגלי מיכל האבק ממוקמות במקומן, אחרת עוצמת השאיבה תהיה נמוכה.

כדי לנקות את מיכל האבק, הסירו את הבריה שבציקלון מיכל האבק, והסירו את המגן הפנימי ממכסה מיכל האבק כמוצג באיור.



אין להשתמש במיכל אבק רטוב או במגן פנימי רטוב. כאשר עושים שימוש חוזר בהם, צריך לייבש אותם לחלוטין.

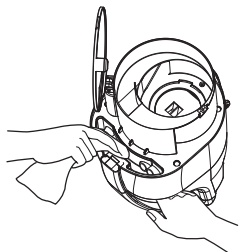

נקו את מכסה מיכל האבק עם מטלית ומברשת, כדי להסיר שיירי מוך שבתוכו. אין להשתמש בשום נזל או במים.


כדי להפיק את מיטב התוצאות משואב האבק, תמיד רוקנו את מיכל האבק כאשר הוא מלא.

אזהרה




**סכנת התחשמלות ופציעה.
נחקו תמיד את כבל החשמל משקע החשמל
לפני מיפול בשואב.**

כאשר נשמעת אזעקה, בדקו במיכל האבק, אם מיכל האבק מלא, רוקנו את מיכל האבק.

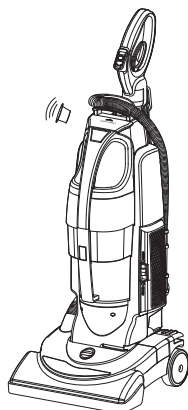

כדי להסיר את מיכל האבק מהשואב, לחצו על כפתור שחרור מיכל האבק, והסירו את המיכל מהשואב.

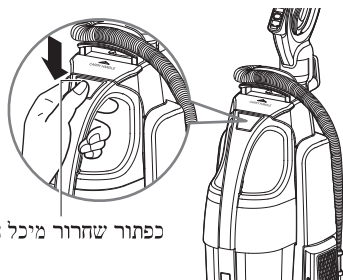

כפתור שחרור מיכל האבק

כדי לרוקן את מיכל האבק, לחצו על כפתור מכסה מיכל האבק כמוצג באיור, הסירו את מכסה מיכל האבק ממכל האבק, והסירו אבק.

טיפול בשואב האבק

בעת ניקוי וטיפול בשואב האבק, בצעו תמיד את כל אמצעי הזהירות.


אזהרה



סכנת התחשמלות ופציעה.

נתקו את אספקת החשמל בעת טיפול ביחידה או ניקויה. אי ביצוע הוראה זו עלול לגרום להתחשמלות או לפציעה עקב הפעלה פתאומית של השואב.

אחסון שואב האבק

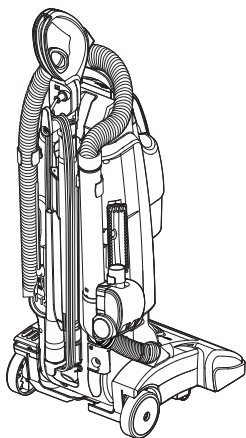

לאחסון שואב האבק כאשר אינו בשימוש, כרכו את כבל החשמל והחזירו את הידית הטלסקופית למצב הנמוך.

אזהרה



סכנת התחשמלות ופציעה.

כריכת כבל החשמל בצורה הדוקה מדי תפעיל לחץ על הכבל ועלולה לגרום לנזק. כבל חש מל פגום עלול לגרום להתחשמלות ולפציעה או לנזק.

מכלול מכל האבק



מכסה מכל האבק

מכסה מכל האבק סוגר את מכל האבק.

מסנן האוויר

מסנן האוויר אבק דק ממכל האבק.

המגן הפנימי

המגן הפנימי יכול ללכוד לכלוכים גדולים ושיירים שמאוספים על ידי השאיבה.

מכל אבק

משמש לאיסוף הלכלוך.

מגן תרמי

שואב אבק זה מצויד במגן תרמי אשר מכבה אוטו מפיית את שואב האבק כדי להגן עליו מפני התחממות יתר. אם סתימה מונעת זרימת אוויר למנוע, ה מגן התרמי מכבה את המנוע אוטומטית, כדי לאפשר למנוע להתקרר על מנת למנוע נזק אפשרי לשואב האבק.

תיקון הבעיה: במקרה זה, כבו את שואב האבק

ונתקו את כבל החשמל מהשקע, כדי לאפשר לשואב האבק להתקרר. בדקו אם יש סתימות והסירו אותן. במידת הצורך. המתינו כשלושים (30) דקות, חברו את התקע לשקע החשמל והפעילו את השואב כדי לבדוק אם מגן המנוע התאפס. מערכת המגן התרמי תתאפס רק לאחר התקררות שואב האבק.


שואב אבק זה מצויד בשסתום מעקף להגנה על המנוע, אשר נפתח אוטומטית כדי לספק אוויר לקירור המנוע, כאשר סתימה מונעת זרימת אוויר אל המנוע. אם שסתום המעקף נפתח כדי למנוע חימום יתר של המנוע ונזק אפשרי לשואב האבק, תבחינו בשינוי צליל השואב כאשר אוויר זורם דרך פתח השסתום.

הערה: אסור לחסום את מגן המנוע.

תיקון הבעיה: בדקו אם יש סתימות והסירו אותן.


עיינו בסעיף "הסרת סתימות".

הערה: מגן המנוע עשוי להיפתח בעת שימוש באביזרים או בעת ניקוי שטיח חדש, עקב זרימת האוויר המופחתת הנגרמת על-ידי האביזרים או על-ידי מוך השטיח החדש הממלא את מכל האבק במהירות.

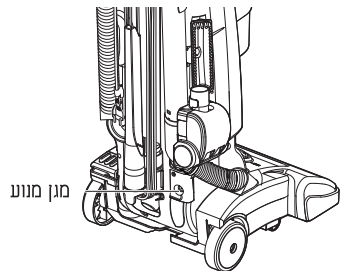


מברשת אבק:

גם פיית הריפוד פועלת כמברשת אבק, והיא שימושית עבור רהיטים, מדפים וכדומה. חברו באופן שמוצג.

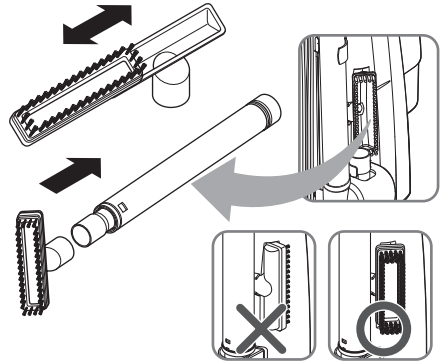


פייה לניקוי פינות:

חברו את פיית הפינות באופן שמוצג. ניתן להשתמש בה לפינות, בין כריות וכדומה.

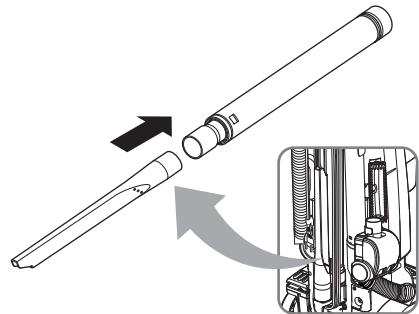


הערה: כדי להאריך את מברשת האבק, ניתן להשתמש בה יחד עם פיית הפינות, כפי שמוצג.

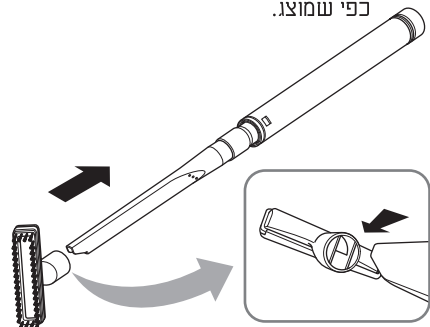


פיית מיני

חברו את פיית המיני כפי שמוצג. ניתן להשתמש בה עבור מדרגות ומקומות אחרים שקשה להגיע אליהם.

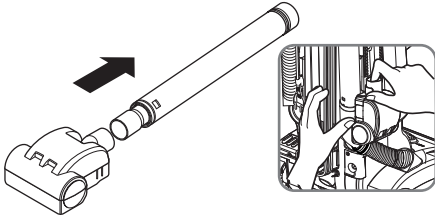


הסרת כיסוי פיית המיני:

הסירו את 2 הברגים שבחלק התחתון והסירו את כיסוי פיית המיני כפי שמוצג.

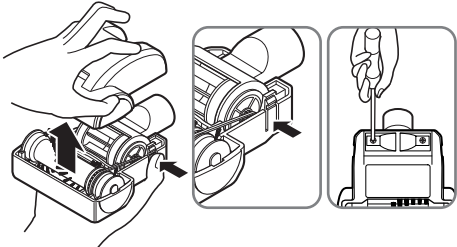

בדקו והסירו לעתים קרובות הצטברות של שיער, חוטים ומוך באזור המברשת. אי ביצוע פעולה זו עלול לפגוע בפיית המיני.

פתיחת המטה: סובבו את המטה כדי לפתוח אותו ומשכו.

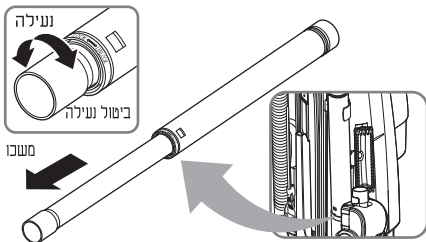

זהירות




אין לגרור את עוואב האבק ממקום למקום באמצעות הצינור. עלול להיגרם נזק.

אחסון האביזרים

החזירו את המטה למקומו בגוף השואב ואת האביזרים לתפסים שלהם.

טבלת שימוש באביזרים

אזור ניקוי					אביזר
קירות	מדרגות	וילונות*	בין כריזות*	רהיט*	
X	X	X	X	X	 מברשת אבק
X	X		X		 פייה לניקוי פינוח
X	X		X		 פיית מיני

* יש לנקות תמיד את האביזר לפני שימוש על בדים.

עצות שאיבה

עצות שאיבה

עבור שולי השטיח, השתמשו באביזרים כגון פייה לניקוי פינוח, מברשת אבק, פיית מיני. ראו עמודים 8,9

אזהרה




סכנת פציעה היזהרו כאשר שואב האבק מונח על מדרגות.
נפילת שואב האבק עלולה לגרום לפציעה אולנז ק לרכוש.

אביזרים

שימוש באביזרים

- הניחו את שואב האבק על משטח ישר.
- הסירו את המטה מגוף השואב על ידי אחיזתו וסיבובו תוך כדי משיכה כלפי מעלה.
- הגדירו את עובי השטיח לעבה.
- העבירו את המחג למצב "דצפה".

הפעלת המתג

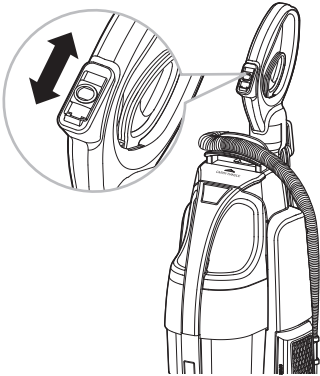

הפעלת המתג


- כבוי
- רצפה: רצפות קשות (חובט כבוי)
- שטיח: חובט מופעל

אזהרה



סכנת פציעה כדי למנוע פציעה, אין לגעת במתג אם שואב האבק רטוב או בידיים רטובות.

שחרור גוף השואב, ומצביו

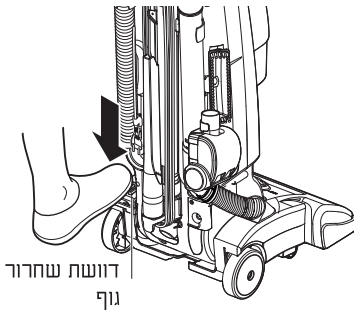

שחררו את גוף השואב על-ידי לחיצה על דוושט שחרור הגוף באמצעות הרגל, ומשיכה לאחור וכל פי מטה.

הגדרות מומלצות עבור עובי שטיח



בחירת הגדרת עובי שטיח:

כבו את השואב תחילה. בחרו הגדרת עובי שטיח באמצעות ידית כוון העובי. סובבו את ידית הכוון למצב המתאים.


הגדרות מוצעות עבור עובי שטיח:

ייתכן שתצטרכו להגביה את הגובה כדי להקל על עבודות מסוימות, כגון שטיחים מקיר לקיר או שטיחים עם שערות ארוכות יותר. להתאמה קלה, הציבו את השואב במצב זקוף.

שימו לב: יש להיזהר במיוחד בעת שאיבת סוגים

מסוימים של שטיחים או כיסוי רצפה. לפני השאיבה, בדקו תמיד את הוראות הניקוי המומלצות של יצרן השטיח או כיסוי הרצפה.

שחרור ידית מלסקופית

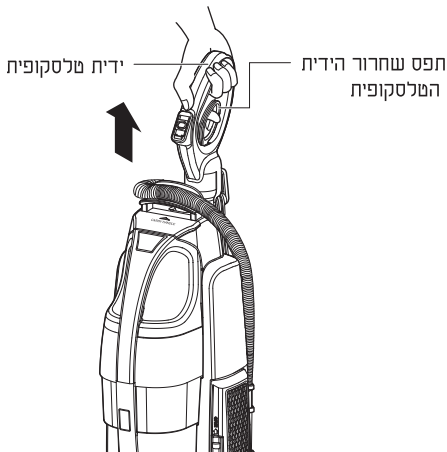


כדי לשחרר את הידית המלסקופית, משכו בא צבעותיכם את תפס הידית ומשכו את הידית ה מלסקופית כלפי מעלה.

כדי להנמיך את הידית המלסקופית, משכו בא צבעותיכם את תפס הידית ודחפו את הידית ה מלסקופית כלפי מטה.

הערה: לנווחתכם, התאימו את גובה הידי המלסקופית לגובה שלכם.

שחרור כבל חשמל

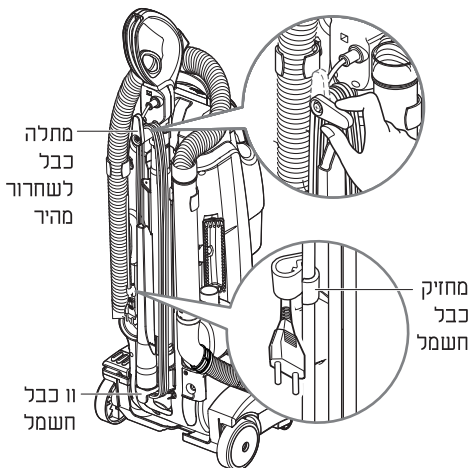

סובבו את מתלה הכבל לשחרור מהיר לא חד הכיוונים כדי לשחרר את כבל החשמ ל.


כדי לאחסן את כבל החשמל, כרכו את כ בל החשמל סביב מתלה כבל החשמל והו ו והצמידו את התקע של כבל החשמל למ חזיק הכבל.

צורת תקע:



חלקים ותכונות

חשוב שתכירו את חלקי שואב האבק ואת תכונותיו, כדי להבטיח שימוש הולם ובטיחותי, המשיכו לקרוא לפני השימוש בשואב האבק.

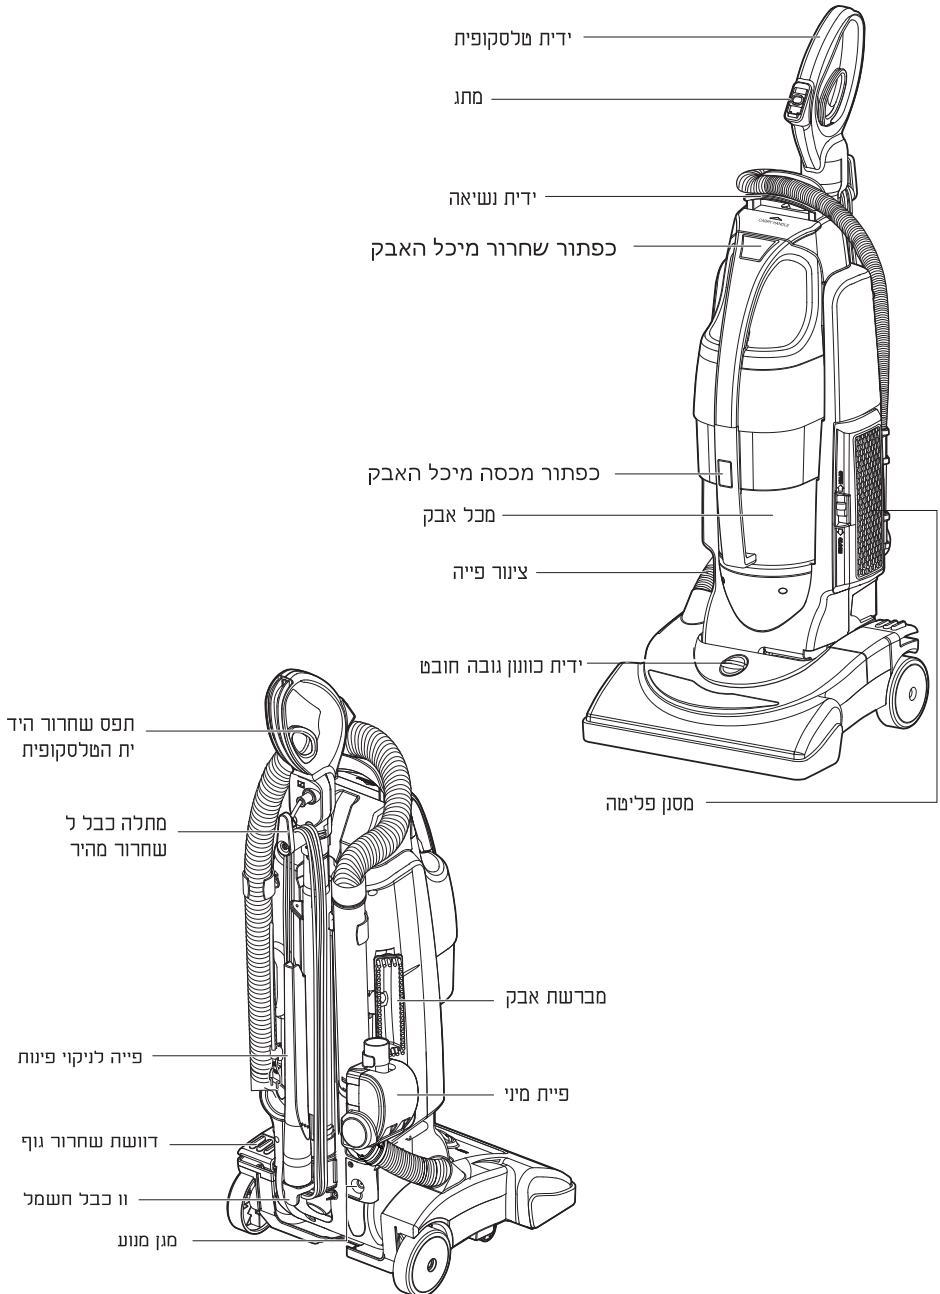

מידע לבטיחותכם

מגן חרמי: שואב אבק זה מצויד בתרמוסטט מיוחד שמגן עליו במקרה של חימום יתר של המנוע. אם שואב האבק כבה לפתע, כבו את המתג ונתקו את כבל החשמל. בדקו אם שואב האבק התחמם יתר על המידה עקב מכל אבק מלא, צינור חסום או מסנן סתום. אם זו הסיבה, תקנו אותה והמתינו לפחות 30 דקות לפני שתנסו להשתמש בשואב האבק. לאחר 30 דקות, חברו חזרה את השואב לחשמל והפעילו את המתג. אם שואב האבק עדיין לא פועל, פנו לחשמלאי מוסמך.

חשוב למשתמשים באנגליה.

חופי החשמל בכבל החשמל הראשי של מכשיר זה מקודדים בצבעים כדלהלן:

חום - פאזה

כחול-אפס

חשוב מאוד:

אין לחבר את המכשיר להארקה. אם מותקן תקע של 13 אמפר, התקינו **נתיך BS1362** של 13 אמפר. אם נעשה שימוש בתקע מסוג אחר, הגנו באמצעות נתיך של 15 אמפר בלוח החשמל. במכשירים המצוידים בכבל חשמל ותקע משולבים: התקע המשולב בכבל כולל נתיך. להחלפה השתמשו בנתיך BS 1362 של 13 אמפר. יש להשתמש רק בנתיכים עם אישור ASTA. אם כיסוי/בית הנתיך אובד, אין להשתמש בתקע. יש לרכוש כיסוי חלופי לבית הנתיך מספק מכשירי חשמל מאושר.

מידע לבטיחותכם

- נא לקרוא את כל המידע הבא, אשר מכיל הוראות חשובות לבטיחות, שימוש במכשיר ותחזוקתו.
מכשיר זה תואם להנחיה ה- EC הבאות: EMC Directive , 2006/95/EC Low Voltage Directive , 2004/108/EC-EMC.
- אין לאפשר לילדים להשתמש במכשיר ללא השגחה.
 - אין להרשות להשתמש בשואב האבק כבצעצו, עקב סכנת פציעה.
 - אל תמשיכו לשאוב אם גיליתם שחלק כלשהו פגום, חסר או לא תקין. במקרים אלה, פנו לסוכן שירות מוסמך של LG Electronics.
 - אין לאפשר לילדים להשתמש במכשיר ללא השגחה.
 - אין להרשות להשתמש בשואב האבק כבצעצו, עקב סכנת פציעה.
 - במקרה הצורך, חקונו יתבצעו רק אצל סוכן שירות מוסמך של LG Electronics.
 - השתמשו רק בחלקים המיוצרים או המומלצים על-ידי LG. אחרת האחריות עלולה להתבטל.
 - אין להשתמש ללא מכל האבק או מסנן האוויר.
 - אין להשתמש בשואב האבק אם כבל החשמל פגום או לא תקין.
 - אם כבל החשמל פגום, הוא יוחלף רק על-ידי סוכן שירות מוסמך של LG Electronics, כדי למנוע סכנה.
 - אין לכבות על ידי משיכת כבל החשמל.
 - אין למשוך את כבל החשמל, לעלות עליו, למשוך אותו סביב פינות חדות או בקרבת על/משטחים חמים.
 - תמיד יש לכבות את שואב האבק לפני:
 - ריקון מכל האבק.
 - ניקוי או החלפה של המסנן.
 - ניתוקו משקע החשמל.
 - אין להשאיר את שואב האבק מחובר לשקע החשמל כאשר אינו בשימוש.
 - אין להשתמש בשואב האבק כאשר אחד מהפתחים חסום בחפץ כלשהו שעלול להגביל את זרימת האוויר.
 - אין להכניס חלקי נוף, בנדים או עצם אחר (דוגמה, מקל) לתוך פתחים או חלקים נעים של השואב.
 - אין להשתמש בחוף.
 - אין לשאוב אפר חם, נחלים וכדומה, וכן חפצים חדים.
 - אין לשאוב חומרים דליקים או נפיצים (נוזלים או גזים).
 - אין לשאוב מים או נוזלים אחרים.
 - אין להשתמש בשואב או לחבר אותו לחשמל בידיים רטובות.
 - אין לטבול את השואב כולו במים.
 - אם השואב נטבל במים, אין להשתמש בו ללא חקיון.
 - בעת שאיבה עם אבזור שמצויד בגליל מברשת מסתובב:
 - אין להכניס את היד לגליל המברשת המסתובב.
 - שואב האבק הזה אינו מיועד לשימוש של אנשים (כולל ילדים) עם יכולות פיזיות, חושיות, מנטליות מוגבלות, או אנשים שחסר להם ניסיון או ידע, אלא אם כן הם מקבלים השגחה או הוראה לגבי השימוש בשואב האבק הזה על ידי משרה שאחראי לבטיחותם.
 - ילדים צריכים לקבל השגחה כדי להבטיח שהם לא ישחקו עם שואב האבק הזה.
 - אם המכשיר מחובר לכבל המאריך או לשקע חשמל נייד, יש למקם את הכבל המאריך המחובר לשקע החשמל היידי בצורה כזו שלא ירטב או יבוא במגע עם לחות.
 - אסור לשאוב אבק דק.
 - אסור לחשוף את שואב האבק לחום.
 - אין אחוז בידית מיכל אבק כאשר אתם מעבירים את השואב.
 - אם אתם לוחצים על כפתור שחרור מיכל האבק, מיכל האבק עלול להיפרד משואב האבק. אז נשמעת אזעקה אחרי כיבוי שואב האבק.
 - צריך לאחוז בידית האחזיה כאשר אתם מעבירים את השואב.



תוכן עניינים


3-4	מידע לבטיחותכם
5	חלקים ותכונות
6	שחרור ידיית מלסקופית
6	שחרור כבל חשמל
7	הפעלת המתג
7	שחרור גוף השואב, ומצביו
7	הגדרות מומלצות עבור עובי שטיח
8	מכלת שימוש באביזרים
8	עצות שאיבה
8	אביזרים
10	תכונות ביצועים
11	טיפול בשואב האבק
11	אחסון שואב האבק
11	מכלול מכל האבק
12	ניקוי מכל האבק
13	ניקוי / החלפה של המסננים
14	החלפת רצועה וניקוי החובט
16	ניקוי החלק החיצוני
16	הסרת סתימות
17	פתרון בעיות



שואב אבק עומד מדריך למשתמש

MODEL: VF5720 * * *

VF5718 * * *

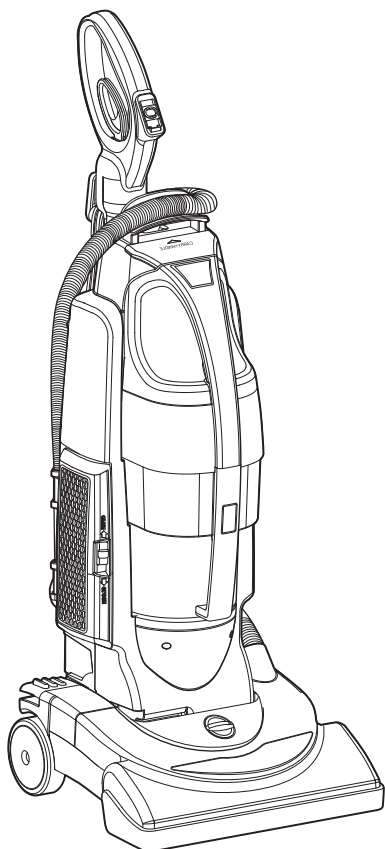

נא לקרוא את כל המדריך בקפידה
לפני הפעלת שואב האבק