
Model	VC68**		
Language	English+Hebrew		
Page	37	Color(cover/body)	1/1
Material	Weight 100g	Size(W*H)	150×220(mm)
Date	2009.05.19	Designer	GEYANG
Part No.	MFL57903803	Description	Owners Manual

Chage Record

No.	Change content	ECO No.	Date	Designer	Confirm
1	add new model name	ACTT903380	090519	DONGYUE	JIANTAO
2					
3					
4					
5					
6					
7					
8					
9					

OWNER'S MANUAL

VC6820NHT
VC6820UHAT

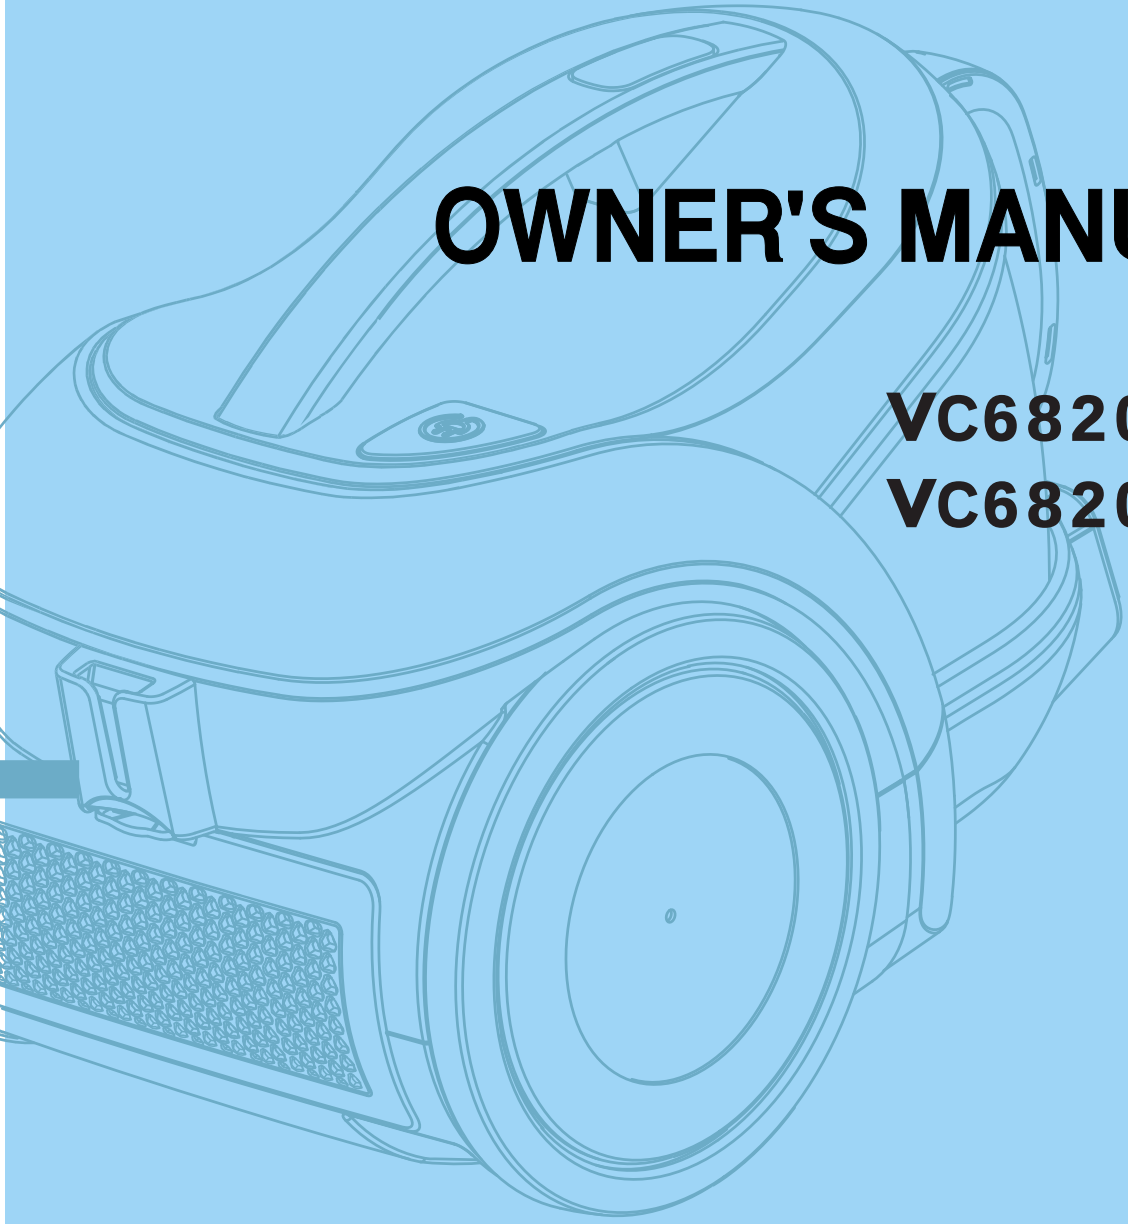

New Type Cyclone Vacuum Cleaner

This information contains important instructions for the safe use and maintenance of the vacuum cleaner.
Especially, please read all of the information on page 4,5 for your safety.
Please keep this manual in an easily accessible place and refer to it anytime.

LG

Table of contents

Important safety instructions .....4~5

How to use 6

Assembling vacuum cleaner.....6

Operating vacuum cleaner.....8

Using carpet and floor nozzle 9

User's guide for turbine nozzle 10

Using accessory nozzles 11

Emptying dust tank 12

Cleaning dust tank.....13

Cleaning air filter and motor safety filter 14

Cleaning exhaust filter 15

What to do if your vacuum cleaner does not work 16

What to do when suction performance decreases 16

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire,electric shock, personal injury,or damage when using the vacuum cleaner.This guide do not cover all possible conditions that may occur.Always contact your service agent or manufacturer about problems that you do not understand. This appliance complies with the following EC Directives :-73/23/EEC,93/68/EEC-Low Voltage Directive–89/336EEC –EMC Directive.



This is the safety alert symbol.
This symbol alerts you to potential hazards that can kill or hurt you and others.
All safety messages will follow the safety alert symbol and either the word “WARNING” or “CAUTION.”
These words mean:

WARNING This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.

CAUTION This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.

WARNING

- **Disconnect electrical supply before servicing or cleaning the unit or when cleaner is not in use.**
  Failure to do so could result in electrical shock or personal injury.
- **Do not use vacuum cleaner to pick up anything that is burning or smoking such as cigarettes, or hot ashes.**
  Doing so could result in death, fire or electrical shock.
- **Do not vacuum flammable or explosive substances such as gasoline, benzene, thinners, propane (liquids or gases).**
  The fumes from these substances can create a fire hazard or explosion. Doing so could result in death or personal injury.
- **Do not handle plug or vacuum cleaner with wet hands.**
  Doing so could result in death or electrical shock.
- **Do not unplug by pulling on cord.**
  Doing so could result in product damage or electrical shock. To unplug, grasp the plug, not the cord.
- **Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.**
  Failure to do so could result in electrical shock or personal injury.
- **Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.**
  Failure to do so could result in electrical shock or personal injury or fire or product damage.
- **Do not allow to be used as toy. Close attention is necessary when used by or near children.**
  Personal injury or product damage could result.
- **Do not use the vacuum cleaner if the power cord or plug is damaged or faulty.**
  Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use vacuum cleaner if it has been under water.**
  Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not continue to vacuum if any parts appear missing or damaged.**
  Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use an extension cord with this vacuum cleaner**
  Fire hazard or product damage could result.
- **Using proper voltage.**
  Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the bottom of vacuum cleaner.
- **Turn off all controls before unplugging.**
  Failure to do so could result in electrical shock or personal injury.
- **Do not change the plug in any way.**
  Failure to do so could result in electrical shock or personal injury or product damage. Doing so result in death. If plug does not fit, contact a qualified electrician to install the proper outlet.
- **Repairs to electrical appliances may only be performed by qualified service engineers.**
  Improper repairs may lead to serious hazards for the user.
- **Do not plug in if control knob is not in OFF position.**
  Personal injury or product damage could result.
  (Depending on model)
- **Keep children away and beware of obstructions when rewinding the cord to prevent personal injury**
  The cord moves rapidly when rewinding.(Depending on model)
- **The hose contains electrical wires. Do not use it if it is damaged, cut or punctured.**
  Failure to do so could result in death,or electrical shock.
  (Depending on model)


IMPORTANT SAFETY INSTRUCTIONS

⚠ CAUTION

- **Do not put any objects into openings.**
  Failure to do so could result in product damage.
- **Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.**
  Failure to do so could result in product damage.
- **Do not use vacuum cleaner without dust tank and/or filters in place.**
  Failure to do so could result in product damage.
- **Do not use vacuum cleaner to pick up sharp hard objects, small toys, pins, paper clips, etc.**
  They may damage the cleaner or dust bin.
- **Store the vacuum cleaner indoors.**
  Put the vacuum cleaner away after use to prevent tripping over it.
- **The vacuum cleaner is not intended to use by young children or infirm people without supervision.**
  Failure to do so could result in personal injury or product damage.
- **Only use parts produced or recommended by LG Electronics Service Agents.**
  Failure to do so could result in product damage.
- **Use only as described in this manual. Use only with LG recommended or approved attachments and accessories.**
  Failure to do so could result in personal injury or product damage.
- **To avoid personal injury and to prevent the machine from falling when cleaning stairs, always place it at the bottom of stairs.**
  Failure to do so could result in personal injury or product damage.
- **Use accessory nozzles in sofa mode.**
  Failure to do so could result in product damage.
- **Make sure the filters (exhaust filter and motor safety filter) are completely dry before replacing in the machine.**
  Failure to do so could result in product damage.
- **Do not dry the filter in an oven or microwave.**
  Failure to do so could result in fire hazard.
- **Do not dry the filter in a clothes dryer.**
  Failure to do so could result in fire hazard.
- **Do not dry near an open flame.**
  Failure to do so could result in fire hazard.
- **Always clean the dust bin after vacuuming carpet cleaners or fresheners, powders and fine dust.**
  These products clog the filters,reduce airflow and can cause damage to the cleaner. Failure to clean the dust bin could cause permanent damage to the cleaner.
  (Depending on model)
- **Don ’t grasp the tank handle when you are moving the vacuum cleaner.**
  The vacuum cleaner’s body may fall when separating tank and body. Personal injury or product damage could result. **You should grasp the carrier handle** when you are moving the vacuum cleaner.(Depending on model)

Thermal protector :
This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. If the vacuum cleaner suddenly shuts off, turn off the switch and unplug the vacuum cleaner. Check the vacuum cleaner for possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum cleaner. After the 30 minute period, plug the vacuum cleaner back in and turn on the switch. If the vacuum cleaner still does not run, contact a qualified LG authorised Service Agent.

How to use Assembling vacuum cleaner

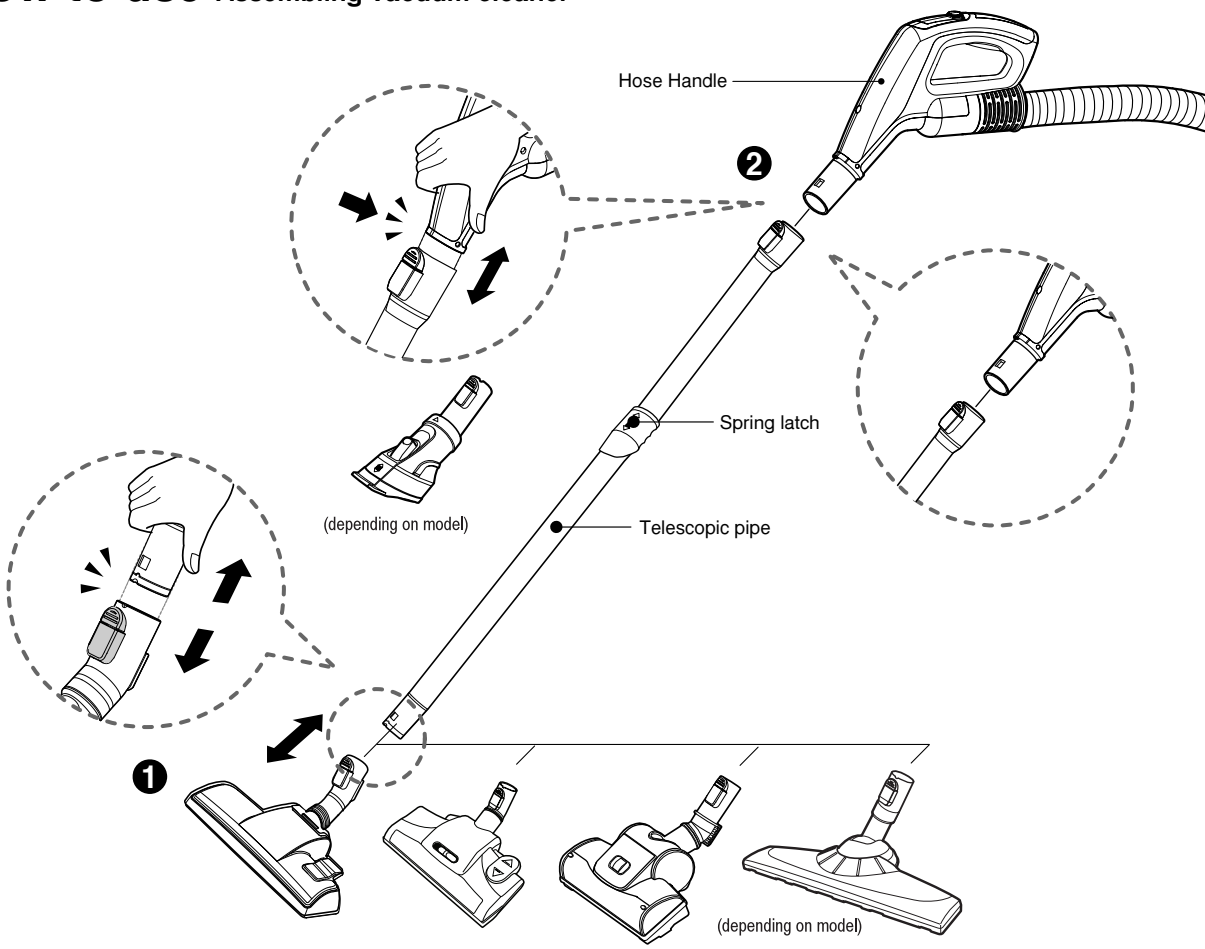


❶ Carpet and floor nozzle

Push the nozzle into the telescopic pipe.

❷ Telescopic pipe

- Push telescopic pipe firmly into hose handle.
- Grasp the spring latch to expand.
- Pull out the pipe to desired length.

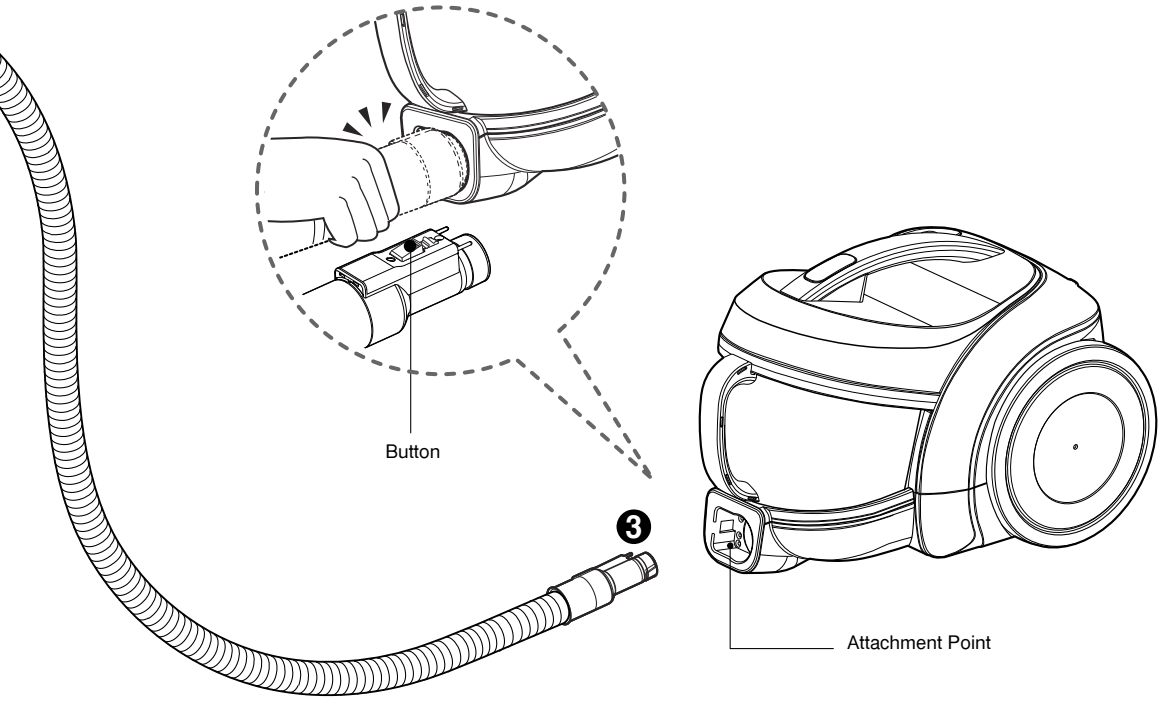



C K


❸ Connecting the hose to the vacuum cleaner

Push the fitting pipe on the flexible hose into the attachment point on the vacuum cleaner. To remove the flexible hose from the vacuum cleaner, press the button situated on the fitting pipe, then pull the fitting pipe out of the vacuum cleaner.

How to use Operating vacuum cleaner

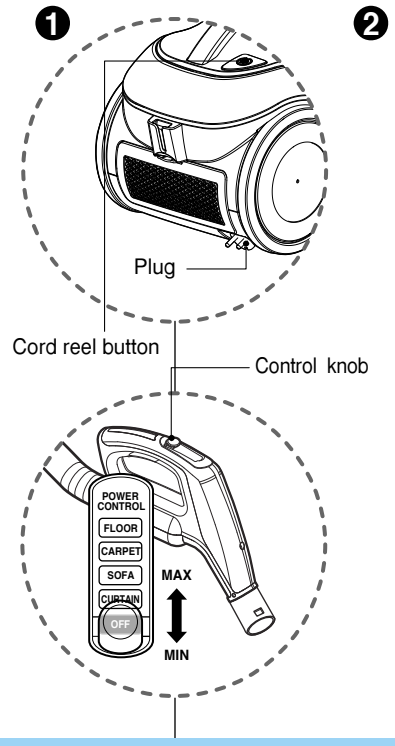

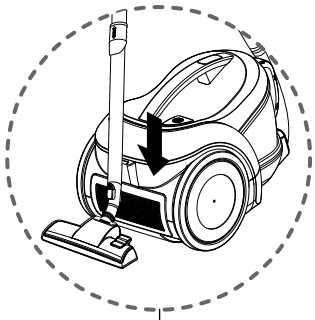

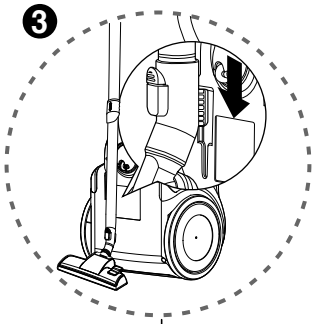

❶ How to operate

- Pull out the power cord to the desired length and plug into the socket.
- Place the control knob of the hose handle to the required position.
- To turn off, slide control knob to OFF position.
- Press the cord reel button to rewind the power cord after use.


❷ Park mode


- To store during vacuuming, for example to move a small piece of furniture or a rug, use park mode to support the flexible hose and nozzle.
  - Slide the hook on the nozzle into the slot on the side of vacuum cleaner.

❸ Storage

- When you have switched off and unplugged the vacuum cleaner, press the cord reel button to automatically rewind the cord.
- You can store your vacuum cleaner in a vertical position by sliding the hook on the nozzle into the slot on the underside of the vacuum cleaner.

How to use Using carpet and floor nozzle

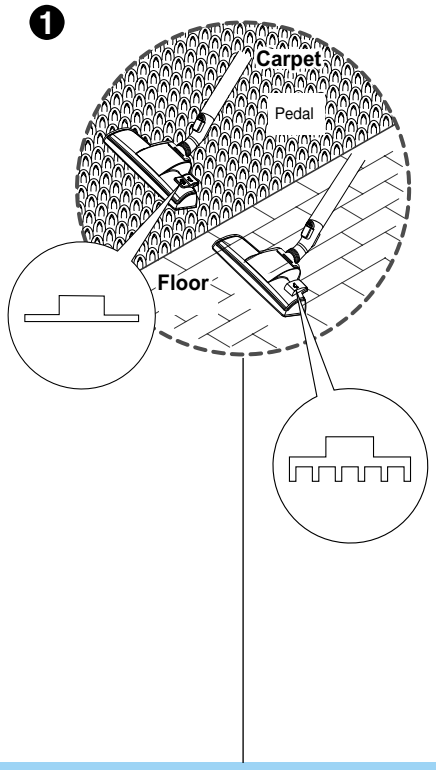

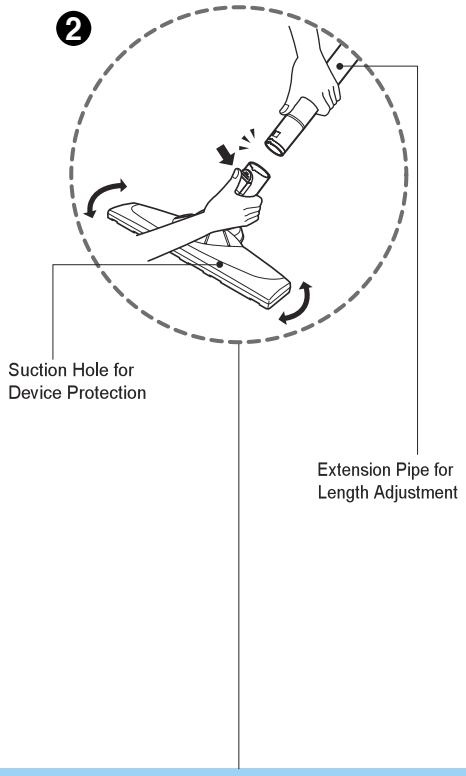

C K

❶ Carpet and floor nozzle (depend on model)


- **The 2 position nozzle**
  This is equipped with a pedal which allows you to alter its position according to the type of floor to be cleaned.
- **Carpet or rug position**
  Press the pedal to lift the brush up.
- **Hard floor position**
  (tiles, parquets floor)
  Press the pedal to lower brush.


❷ Suction Hole for Device Protection (depend on model)

You can perform cleaning at any place like corner or crevice since revolution of the suction hole is free.

How to use

USER'S GUIDE FOR TURBINE NOZZLE

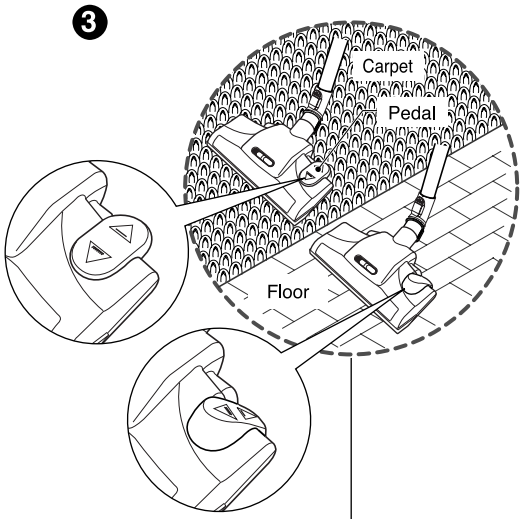

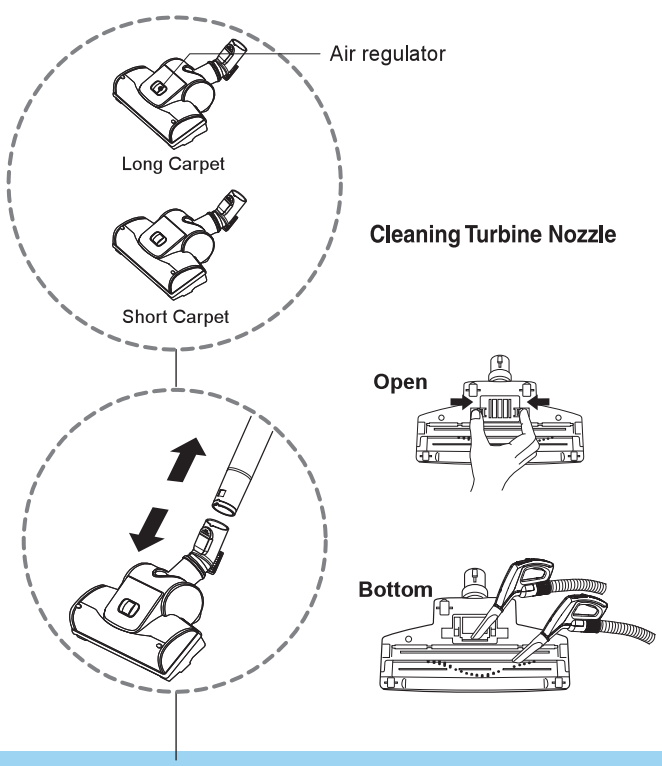

❸ All Floor nozzle (depend on model)


- **The 2 position nozzle**
  This is equipped with a pedal which allows you to alter its position according to the type of floor to be cleaned.
- **Carpet or rug position**
  Press the pedal (⧋), then brush will rotate
- **Hard floor position**
  Press the pedal (△), then brush will stop rotating.

❹ Turbine Nozzle (depending on model)


- **Cleaning turbine brush nozzle.**
- Press the button on the rear side of the nozzle to separate the air cover.
- Use the dusting brush & crevice tool to vacuum clean the brush and fan.

How to use Using accessory nozzles


Upholstery nozzle
(depending on model)

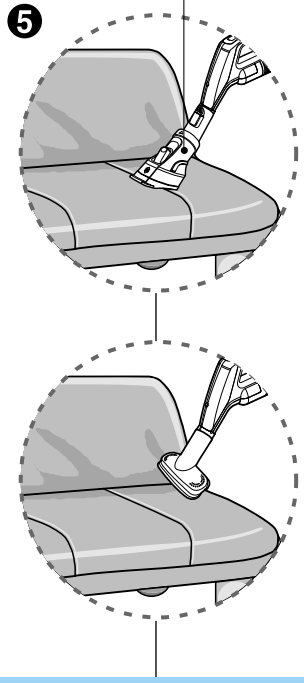

Dusting brush
(depending on model)

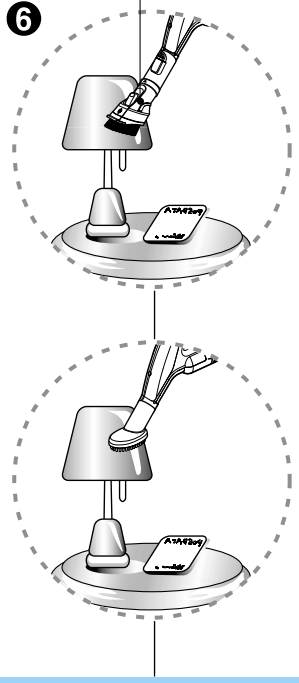


Crevice tool

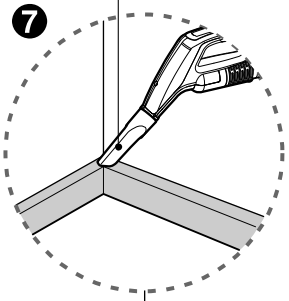

C K


❺ Upholstery nozzle

Upholstery nozzle is for vacuuming upholstery, mattresses etc.

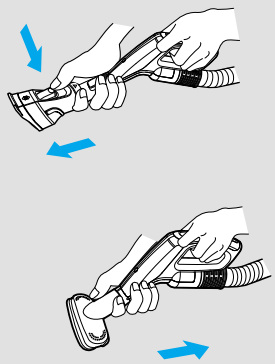

❻ Dusting brush

Dusting brush is for vacuuming picture frames, furniture frames, books and other irregular surfaces.

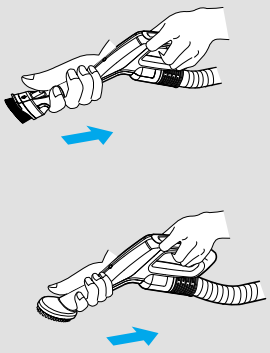


❼ Crevice tool


Crevice tool is for vacuuming in those normally hard-to-reach places such as reaching cobwebs or between the cushions of a sofa.

NOTICE

Use accessory in the sofa mode

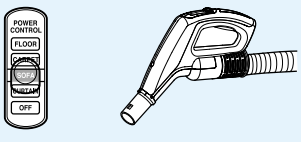

How to use Emptying dust tank

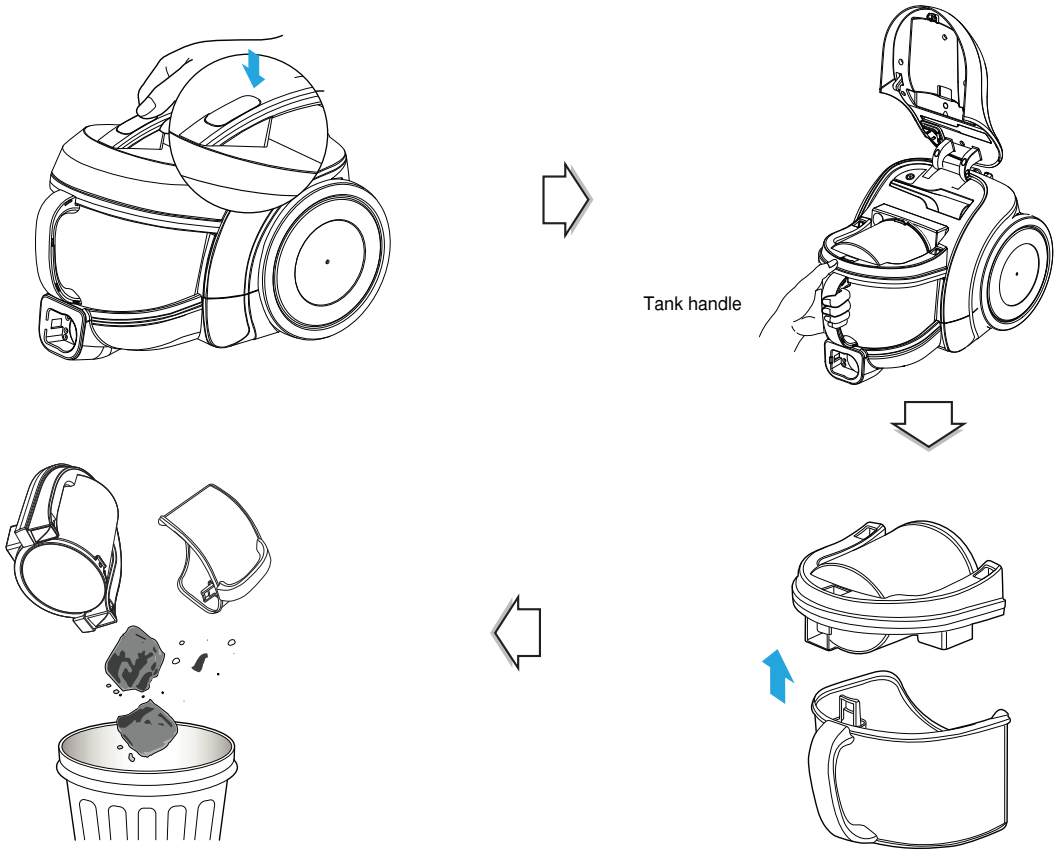


Cleaning the dust " tank".
• Open the tank cap.
• Wash both parts with soft material.
Gently rinse both parts under a cold running tap.

Caution: Do not push the cover open button when you carry the vacuum cleaner. If the cover opens, it is easy to detach the dust tank from the vacuum cleaner.

⚠ WARNING!

Gently rinse both parts separately under a cold running tap until the water runs clear.
Do not use detergent or a washing machine or dishwasher.

How to use Cleaning dust tank

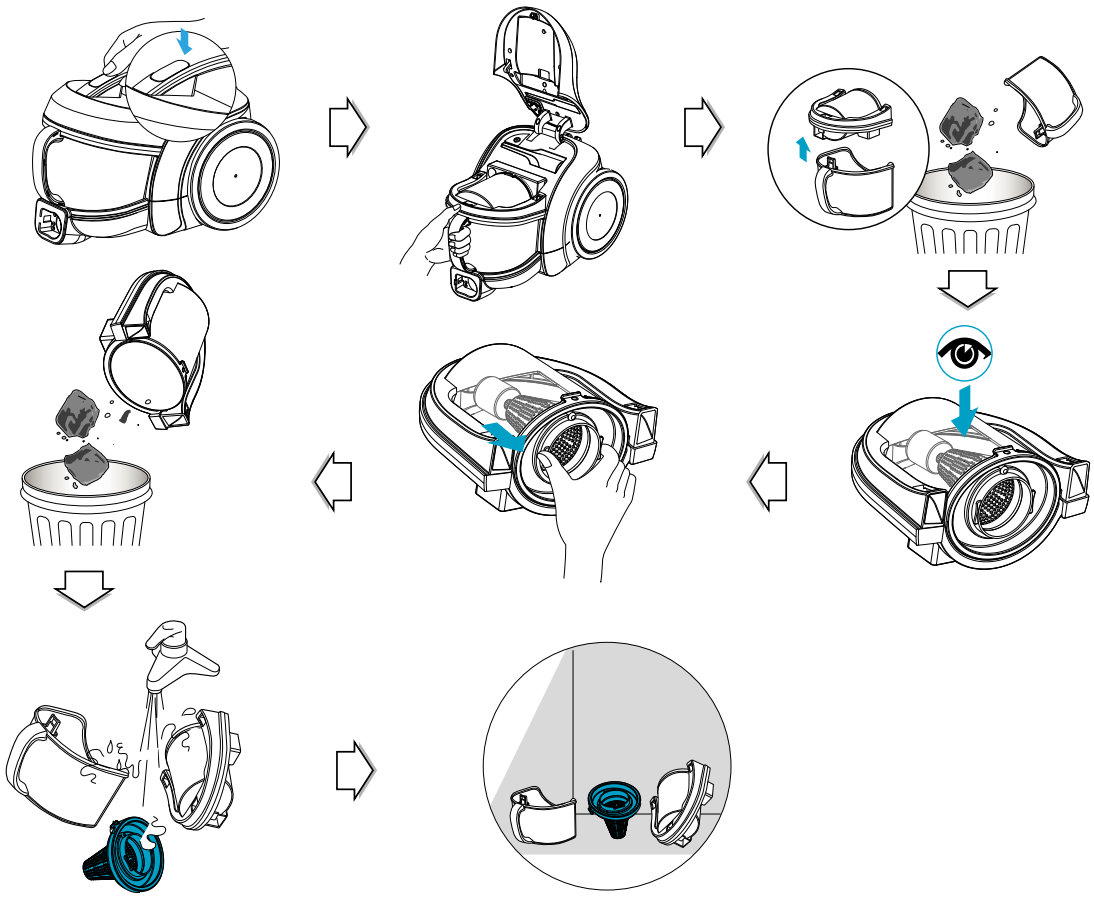


- Open cover with pushing button and pull out dust tank.
- Raise dust tank cap.
- Dry fully in shade so that moisture is entirely removed.

NOTICE

If suction power decreases after cleaning dust tank, clean air filter and motor safety filter. ➔ Next page

How to use Cleaning air filter and motor safety filter

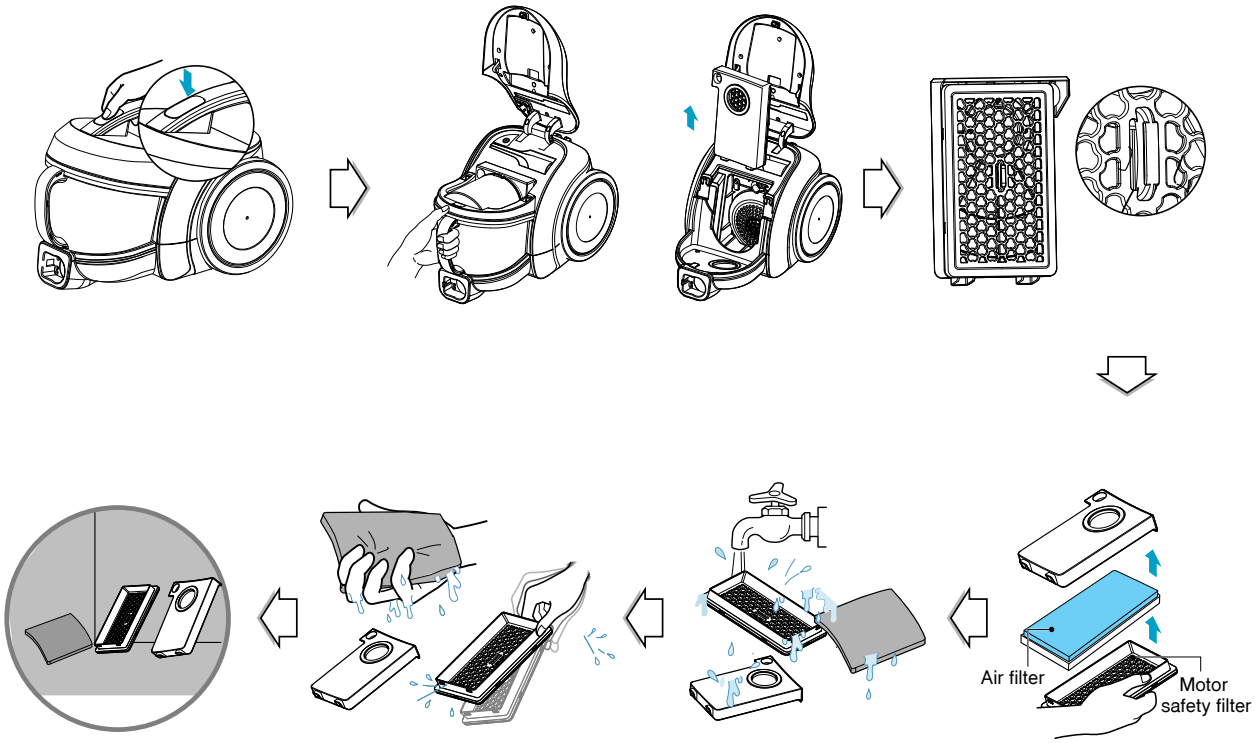


If suction power is decreased after cleaning dust tank, clean air filter and motor safety filter. Air filter and motor safety filter are located at the center of vacuum cleaner in the above figure.

- Open the air filter cover by pulling the air filter cover lever and take out air filter.
- Separate the parts
- Wash air filter and motor safety filter with water.
- Do not wash filters with hot water.
- Dry fully in shade so that moisture is entirely removed.
- Air filter and motor safety filter should be cleaned in the above case.

NOTICE

If filters are damaged, do not use them.
In this cases, contact LG Electronics Service Agent.

How to use Cleaning exhaust filter

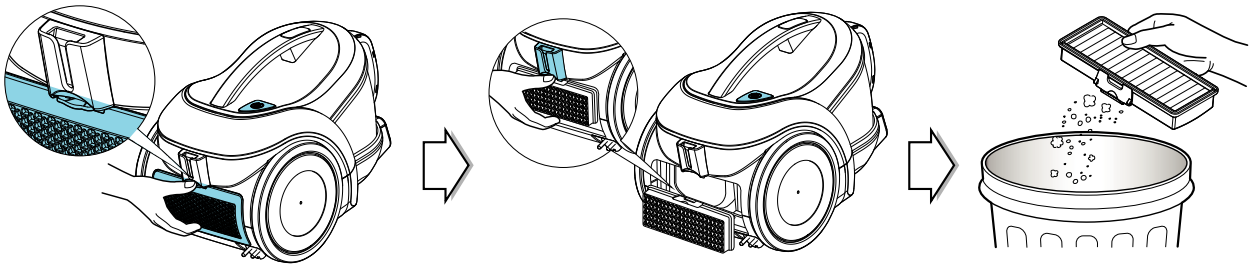

- The exhaust filter is a reusable HEPA filter.
- To change the exhaust filter, remove the filter cover on the body by release hook.
- Pull out the exhaust filter.
- Dust off filter. (Do not wash filter with water.)
- The exhaust filter should be cleaned at least once a year.

What to do if your vacuum cleaner does not work

Check that the vacuum cleaner is plugged in correctly and that the electrical socket is working.

What to do when suction performance decreases

- Turn off the vacuum cleaner and unplug it.
- Check the telescopic pipe, flexible hose and cleaning tool for blockages or obstructions.
- Check that the dust tank is not full. Empty if necessary.
- Check that the exhaust filter is not clogged. Clean the exhaust filter if necessary.
- Check that the air filter is not clogged. Clean the air filter if necessary.

Note

P/No.: MFL57903803
Made in China

P/No.: MFL57903803
Made in China

חשוב


מה ל'עשות במקרה ששואב האבק אינו פועל' ?

בדקו שהמכשיר מחובר ל'חשמל' כת'כה וששקע החשמל' תקין .

מה ל'עשות במקרה שביצועי השאיבה פוחתים ?


- כבו את שואב האבק ונתקו אותו מהחשמל' .
- בדקו שהצינור הפל'סקופי, הצינור הגמיש ואביזר השאיבה אינם סתומים או חסומים .
- בדקו שמיכל' האבק אינו מל'א. רוקנו אותו אם יש צורך .
- בדקו שמסנן הפל'יטה אינו סתום. נקו את מסנן הפל'יטה אם יש צורך .
- בדקו שמסנן האוויר אינו סתום. נקו את מסנן האוויר אם יש צורך .

אופן השימוש ניקוי מסנן הפל'יטה

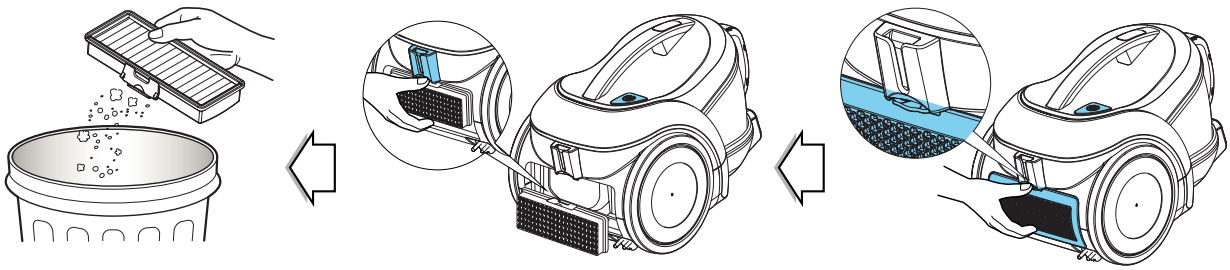

מסנן הפל'יטה הוא מסנן HEPA שניתן ל'שטוף ול'עשות בו שימוש חוזר .
כדי ל'התל'יף את מסנן הפל'יטה, הסירו את מכסה המסנן על' הגוף על' ידי שחרור הוו .
משכו החוצה את מסנן הפל'יטה .
נערו את המסנן כדי ל'הסיר אבק . (אין ל'נקות את המסנן עם מים)
יש ל'נקות את מסנן הפל'יטה ל'פחות פעם בשנה .

אופן השימוש ניקוי מסנן האוויר ומסנן בטיחות המנוע

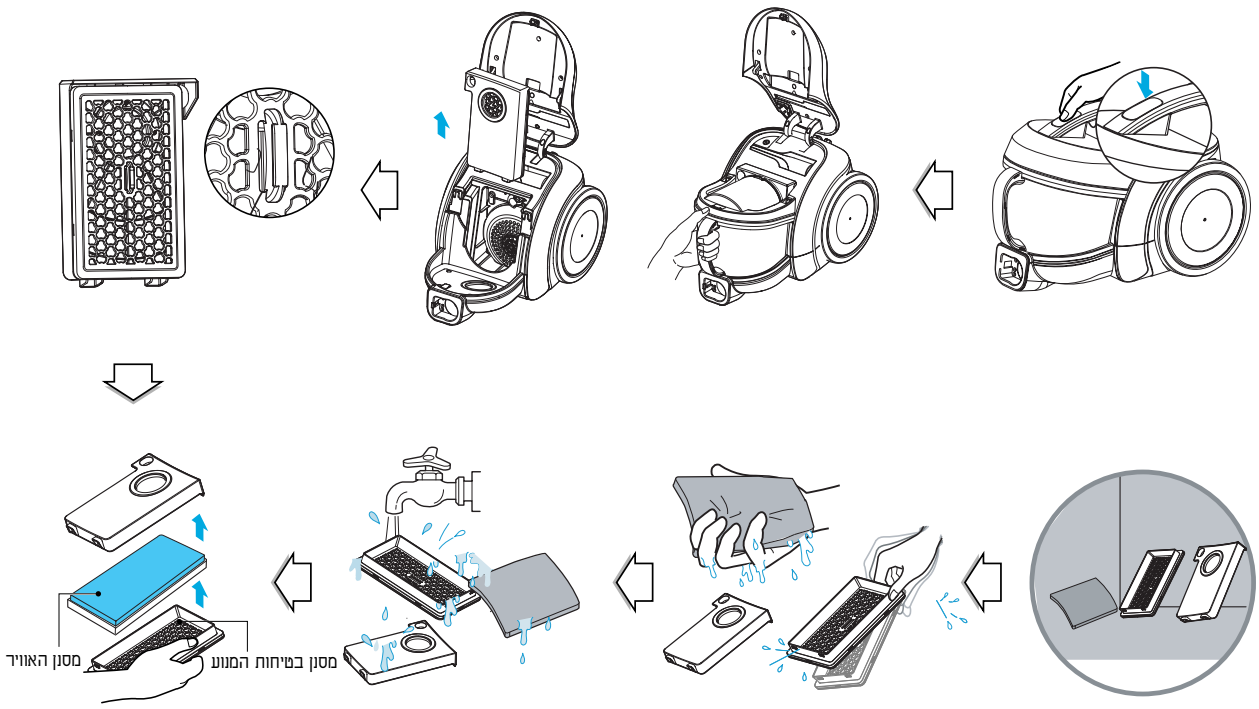


אם כוח השאיבה פוחת לאחר ניקוי מיכל האבק, נקו את מסנן האוויר ומסנן בטיחות המנוע .

- מסנן האוויר ומסנן בטיחות המנוע נמצאים בחלק המרכזי של שואב האבק בתמונות למעלה .
- פתחו את מכסה מסנן האוויר על ידי משיכת המנוף של המכסה , ומשכו את המסנן החוצה .
- הפרידו את החלקים .
- שטפו את מסנן האוויר ומסנן בטיחות המנוע תחת ברז מים .
- אין לשטוף את המסננים עם מים חמים .
- הניחו למסננים להתייבש במקום מוצל עד לייבוש מוחלט .
- יש לנקות את מסנן האוויר ומסנן בטיחות המנוע במקרה למעלה .

חשוב

אם המסננים ניזוקים, חל איסור להשתמש בהם.
במקרה זה, התקשרו לסוכן שירות של LG Electronics .


אופן השימוש ניקוי מיכל האבק

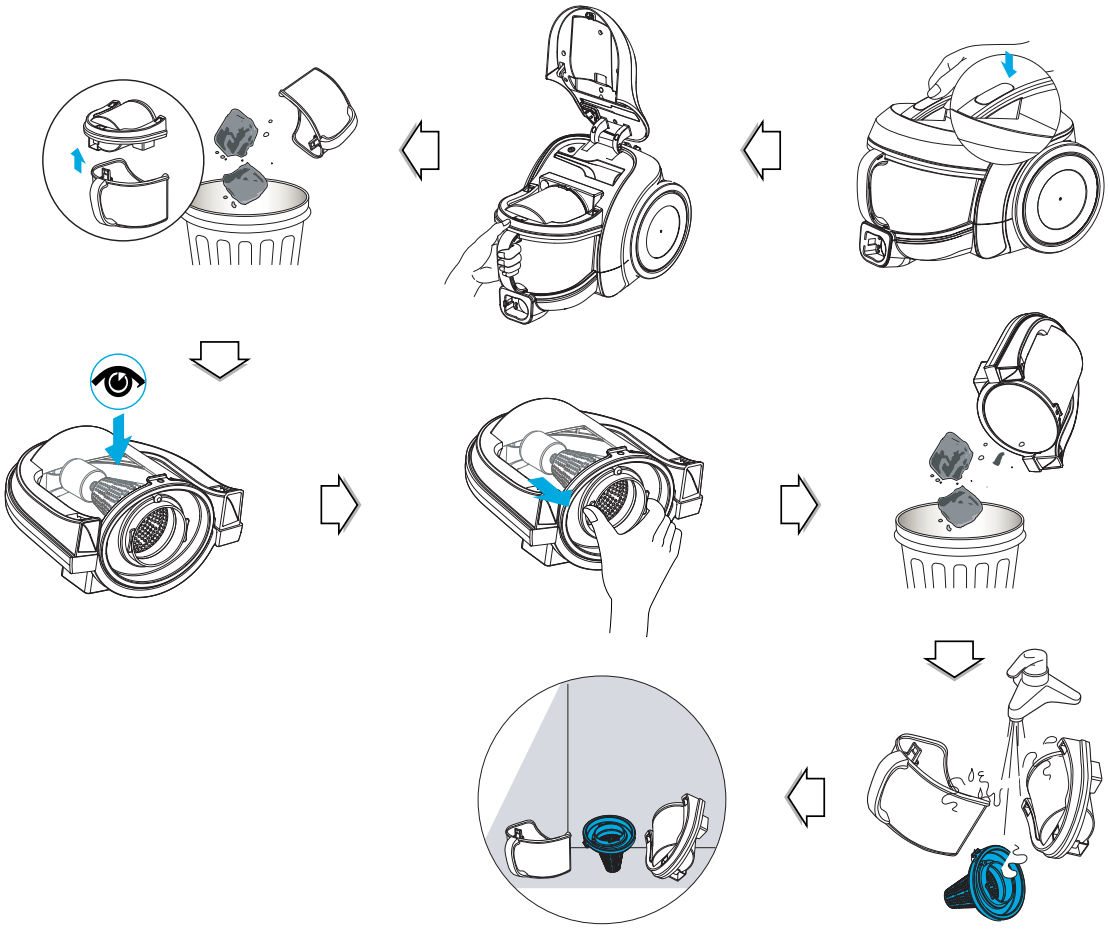

פתחו את המכסה על ידי לחיצת הלחצן ומשכו את מיכל האבק החוצה .
הרימו את מכסה מיכל האבק .
הניחו למיכל האבק להתייבש במקום מוצל עד ליבוש מוחלט .

חשוב
אם כוח השאיבה פוחת לאחר ניקוי מיכל האבק, נקו את מסנן האוויר ומסנן בטיחות המנוע . ← הדף הבא .

אופן השימוש ריקון מיכל האבק

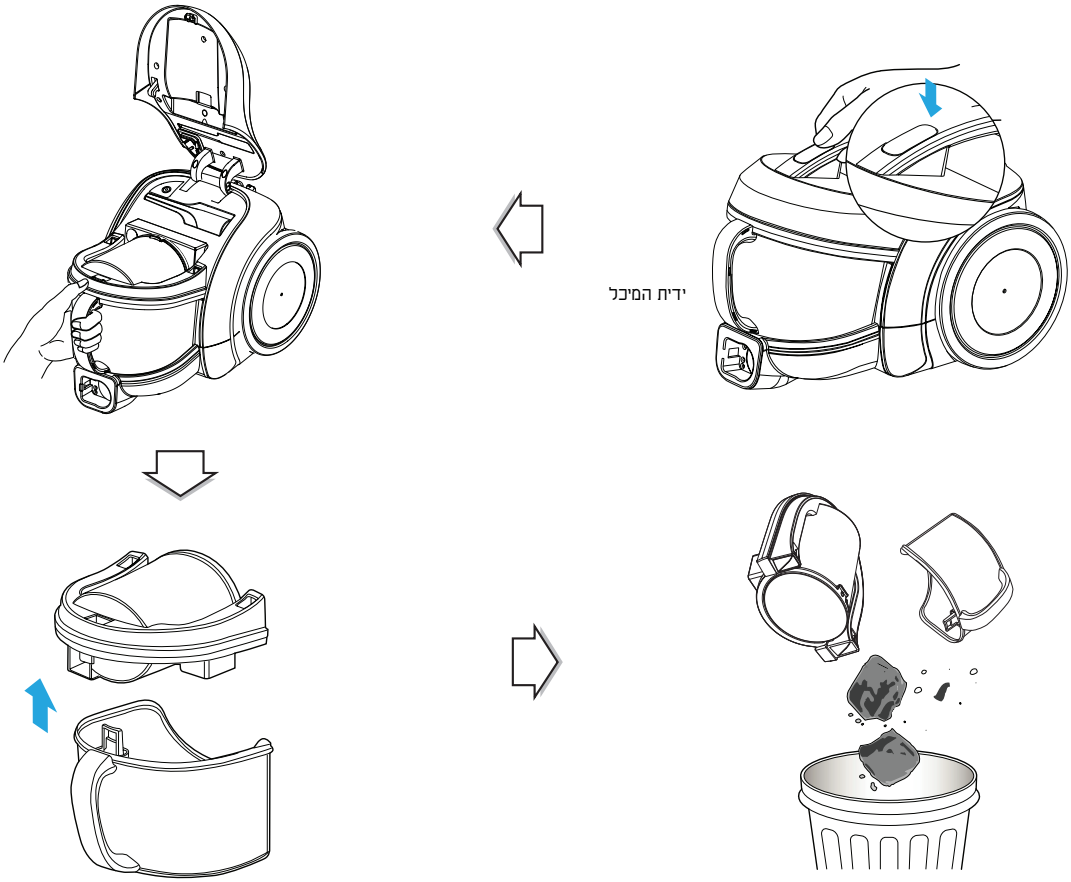


ידית המיכל
ניקוי " מיכל " האבק
• פתחו את מכסה המיכל .
• נקו את שני התל'קים עם ספוג או מטל'ית רכה .
• שטפו בעדינות את שני התל'קים תחת ברז מים קרים זורמים .


אזהרה: אין לדחוף את כפתור פתיחת המכסה כאשר אתם מעבירים את השואב. אם המכסה פתוח, זהעלול להפריד את מיכל האבק משואב האבק.


⚠ אזהרה

שטפו בעדינות את שני החלקים בנפרד תחת ברז מים ק רים זורמים עד אשר מי השטיפה יהיו נקיים .
אין להשתמשבחכשיר ניקוי או לנקות בחכוות כביסה או בחדיח כלים .

אופן השימוש שימוש באביזרי הפיות

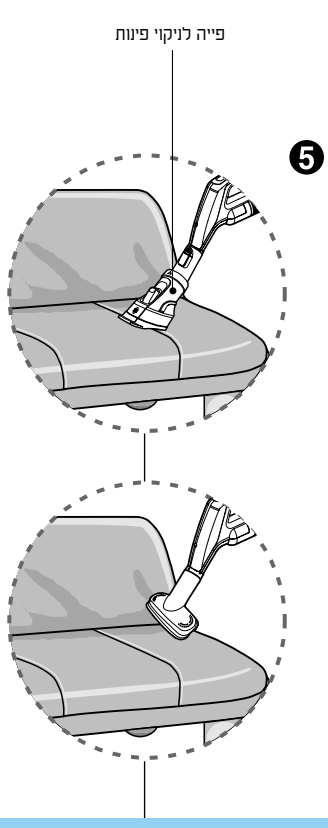

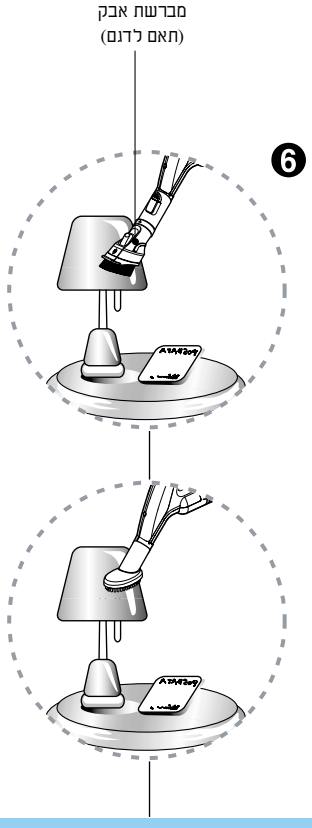

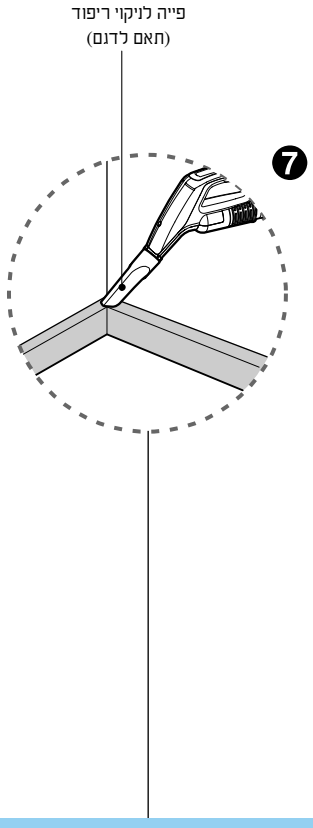

5 פייה ל'ניקוי ריפוד


פייה ל'ניקוי ריפוד ל'שאיבת ריפוד, מזרוני
ם וכדומה .


6 מברשת אבק

מברשת אבק ל'שאיבת מסגרות של'
תמונות, רהיטים, ספרים ומשטחים ח
ריגים אחרים .

7 פייה ל'ניקוי פינות


פייה ל'ניקוי פינות ל'שאיבה במקומות שהגי
שה א'יהם קשה בדרך כלל', כגון קורי עכ
ביש או בין כריות הספה .

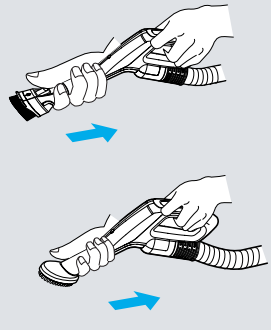

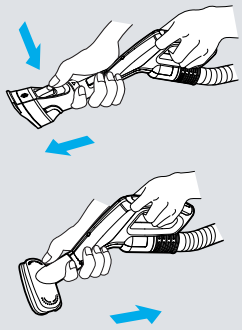


חשוב


השתמשו באביזרי הפיות במודה של ספה .

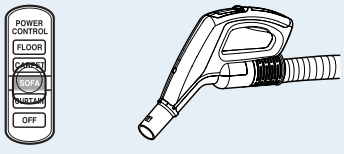

אופן השימוש

מדריך המשתמש ל'פייה המסתובבת

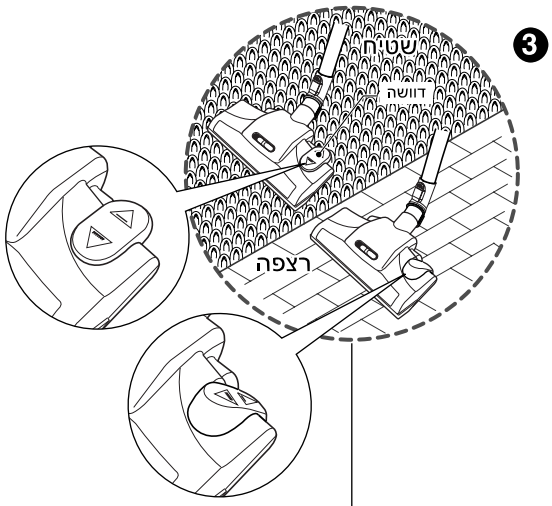

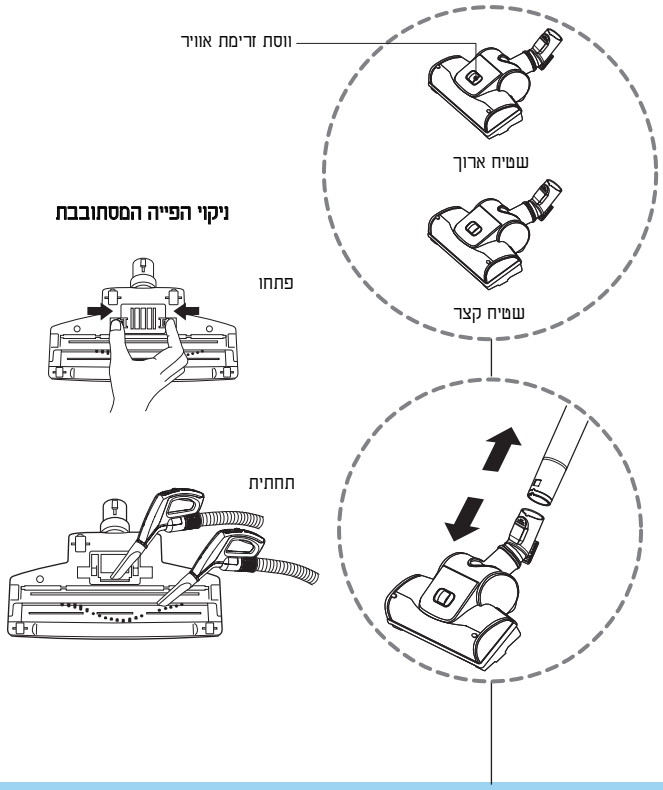

❸ פייה לכל סוגי הרצפות (בהתאם לדגם)


- **הפייה הדו-מצבית**
  פייה זו מצוידת בדוושה שמאפשרת לשנות את מצבה, בהתאם לסוג הרצפה שיש לנקות.
- **מצב שטיח או מרבד**
  לחצו על הדוושה (⏏) כדי שהמברשת תסתובב
- **מצב רצפה קשה**
  לחצו על הדוושה (⏏) כדי שהמברשת תפסיק להסתובב

❹ פייה מסתובבת (בהתאם לדגם)


- ניקוי פיית המברשת המסתובבת .
- ל'חצו על' ה'חצן בצד האחורי של' הפייה, כדי ל'הפריד את מכסה האוויר .
- השתמשו במברשת האבק ובפייה ל'ניקוי פינות כדי ל'שאוב ו'נקות את המברשת והמאוורר .

אופן השימוש שימוש בפייה ל'ניקוי שטיח ורצפה

❶

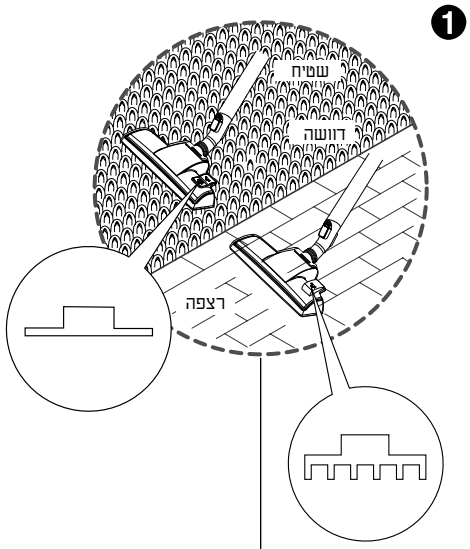

❷

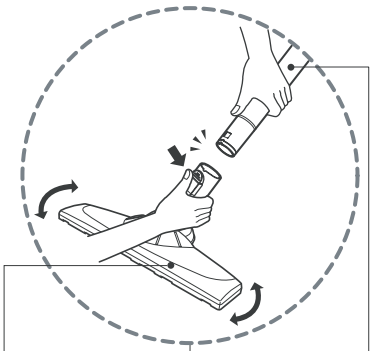

❶ פיית שטיחים ורצפה (בהתאם לדגם)

• הפייה הדו-מצבית
פייה זו מצוידת בדוושה שמאפשרת לשנות את מצבה, בהתאם לסוג הרצפה שיש לנקות.


• מצב רצפה קשה
(סרצפות, רצפת פרקט וכדומה).
ל'חצו על' הדוושה כדי ל'הוריד את המברשת.

• מצב שטיח או מרבד.
ל'חצו על' הדוושה כדי ל'הרים את המברשת.

❷ פיית השאיבה ל'הגנת המכשיר (בהתאם ל'דגם)

ניתן ל'בצע ניקוי במקום כגון פינה כי סיבוב פיית השאיבה הוא בחופשיות .

אופן השימוש הפעל'ת שואב האבק

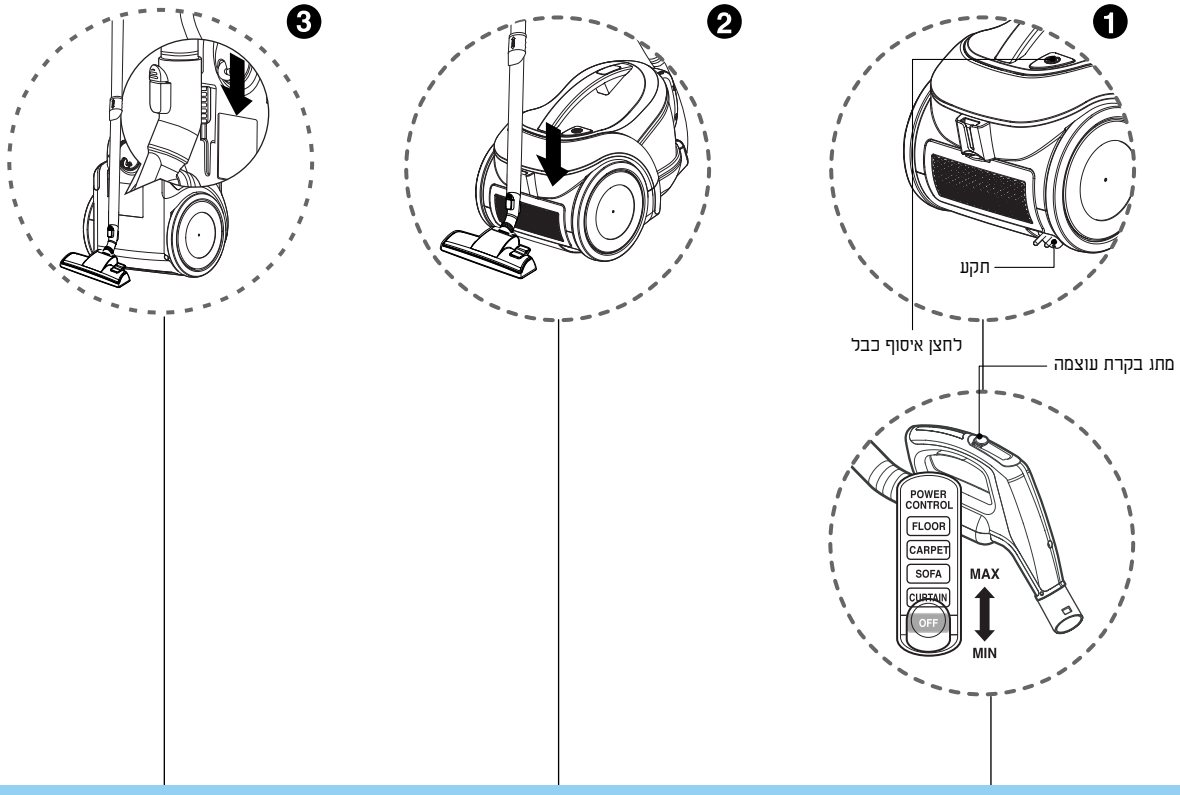

1 אופן ההפעל'ה


- משכו את כבל' החשמל' ל'אורך הרצוי ותקעו אותו בשקע החשמל' .
- דחפו את מתג בקרת העוצמה על' ידית הציוור ל'כיוון המצב הרצוי .
- כדי ל'כבות, דחפו את מתג בקרת העוצמה ל'מצב OFF .
- ל'חצו על' ל'חצן איסוף הכבל' כדי ל'גל'גל' חזרה את כבל' החשמל' ל'אחר השימוש .

2 מערכת חנייה

- ל'הפסקות קצרות במת'ך השאיבה , ל'דוגמה, כדי ל'הזיז רהיט קטן או מרבד, השתמשו במערכת החנייה על' מנת ל'תמוב ציוור הגמיש ובראש הניקוי .
- הת'יקו את הוו שנמצא בפייה ל'תוך החריץ שבת'ל'קו האחורי על' שואב האבק .

3 אחסון


- ל'אחר כיבוי שואב האבק וניתוקו מהחשמל', ל'חצו על' ל'חצן איסוף הכבל' כדי ל'גל'גל' חזרה את הכבל' אוטומטית .
- ניתן ל'אחסן את שואב האבק במצב אנכי על' ידי הכנסת הוו שעל' הפייה ל'תוך החריץ שבת'ל'ק התחתון על' שואב האבק .

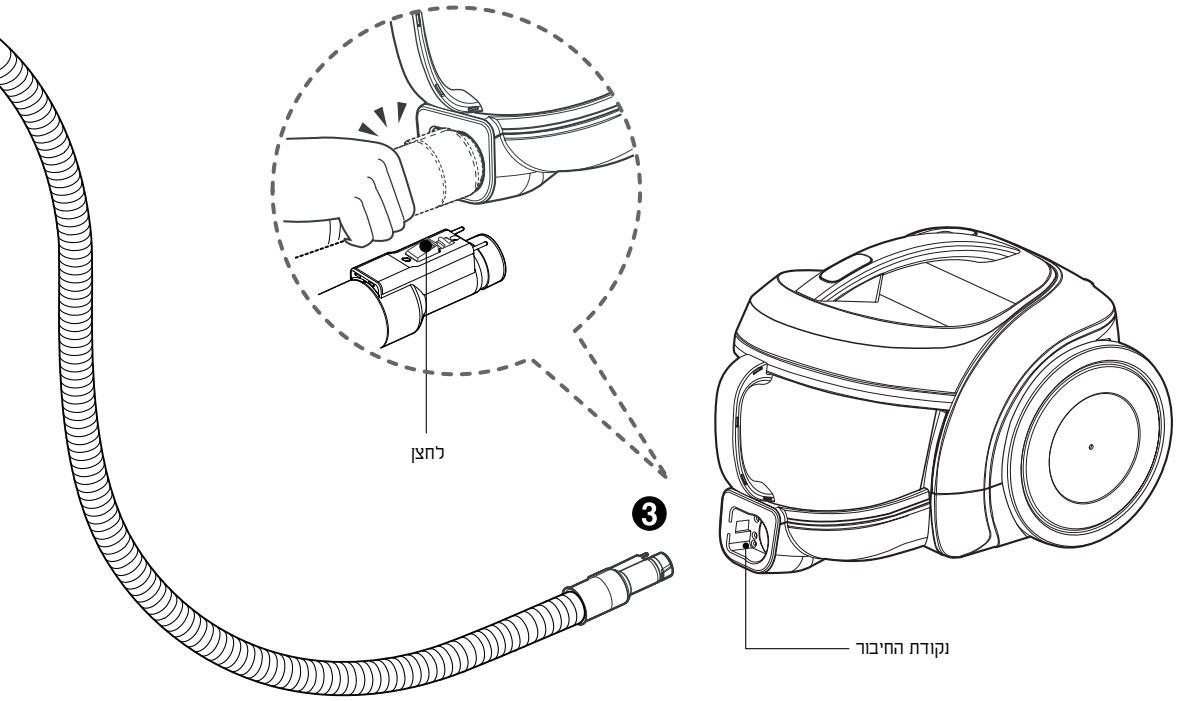

❸ חיבור הצינור ל'שואב האבק

- דחפו את קצה הראש על' הצינור הגמיש ל'תוך נקודת החיבור שבשואב האבק .
- כדי ל'הסיר את הצינור הגמיש משואב האבק, ל'חצו על' תל'חצן שנמצא בראש על' הצינור הגמיש, ול'אחר מכן משכו את הראש מתוך שואב האבק .

אופן השימוש הרכבת שואב האבק

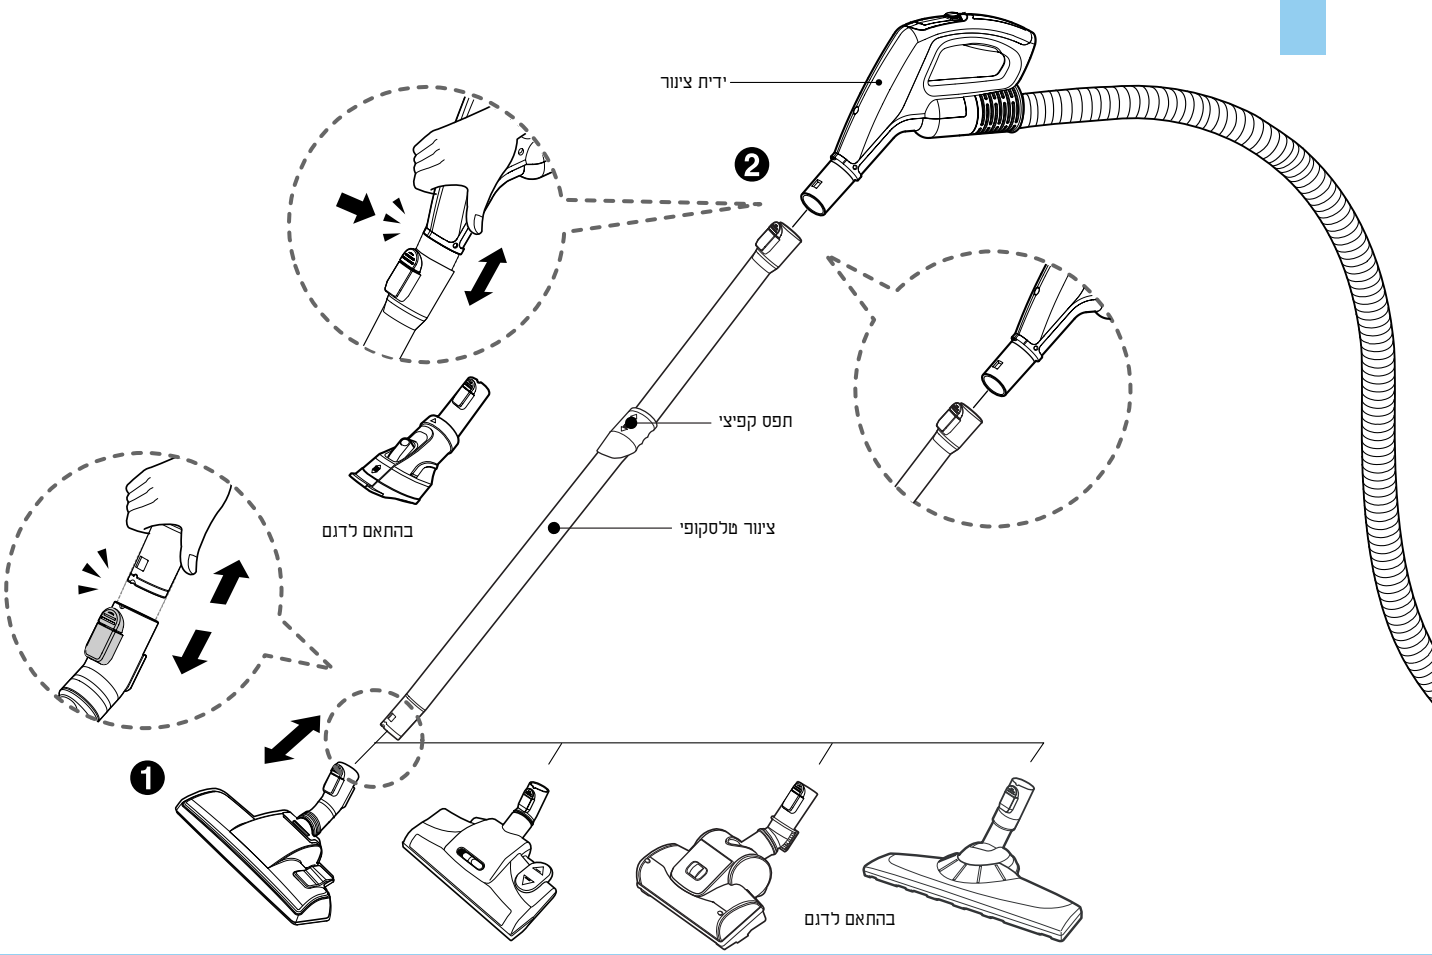

1 פייה ל'ניקוי שטיח ורצפה

דחפו את הפייה ל'תוך הצינור הטלסקופי.

2 צינור טל'סקופי

- דחפו את הצינור הטל'סקופי ל'תוך ידית הצינור בחוזקה.
- תפסו את התפס הקפיצי.
- משכו את הצינור ל'אורך הרצוי.

הוראות בטיחות חשובות

⚠ זהירות

• **יש להשתמש באביזרי הפיות במודה של ספה (Sofa Mode) .**
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר .

• **יש להבטיח שהמסנגים (מסנן הפליטה ומסנן בפיחות המנוע) יבשים לגמרי לפני שמחזירים אותם בחזרה לשואב האבק .**
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר.

• **אסור ליבש את המסנן בתנור או במיקרוגל .**
אי ביצוע הוראה זו עלול לגרום לסכנת אש.

• **אסור ליבש את המסנן במכונת ייבוש .**
אי ביצוע הוראה זו עלול לגרום לסכנת אש .

• **אסור ליבש את המסנן ליד אש .**
אי ביצוע הוראה זו עלול לגרום לסכנת אש .

• **תמיד נקו את מיכל האבק אחרי שאיבת תכשיר לניקוי שפיחים, או מרעננים, פודרות ואבקות דקות .**
חומרים אלה עלולים לחסום את המסננים, להפחית את זרימת האוויר, ולגרום לנזק לשואב האבק .
אי ניקוי מיכל האבק עלול לגרום לנזק בלתי הפיך לשואב האבק .
(בהתאם לדגם)

• **אין לאחוז בידית המיכל כאשר מעבירים את שואב האבק .**
גוף השואב עלול ליפול כאשר מפרידים את המיכל והגוף. אי ביצוע הוראה זו עלול לגרום לפציעה אישית או נזק למכשיר.
יש לאחוז בידית נשיאה כאשר מעבירים את שואב האבק .
(בהתאם לדגם)

• **אם אחרי התרוקנות מיכל האבק, מחוון מצב מיכל האבק מראה אדום, נקו את מיכל האבק .**
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר .
(בהתאם לדגם)

• **אל תניחו חפצים כלשהם בתוך הפתחים .**
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר .

• **אל תשתמשו כאשר אחד מן הפתחים חסום . שמרו על הפתחים מפני אבק, מוך, שיער או כל העלול להפחית את זרימת האוויר .**
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר .

• **אל תשתמשו בשואב האבק ללא מיכל אבק ו / או מסנן במקומם .**
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר .

• **אל תשתמשו בשואב האבק כדי לשאוב חפצים חדים וקשים, צעצועים קפנים, סיכות, מהדקים וכדי .**
הם עלולים לגרום לנזק למכשיר או מיכל האבק .

• **אחסנו את שואב האבק בתוך הבית .**
שמרו על שואב האבק הרחק מהדרך אחרי שימוש כדי למנוע תאונות .

• **שואב האבק הזה אינו מיועד לשימושם של ילדים או של אנשים מוגבלים ללא השגחה .**
אי ביצוע הוראה זו עלול לגרום לפציעה אישית או נזק למכשיר .

• **יש להשתמש אך ורק בחלקים המיוצרים או מומלצים לשימוש על ידי סוכני השירות של LG Electronics .**
אי ביצוע הוראה זו עלול לגרום לנזק למכשיר .

• **יש להשתמש בשואב האבק אך ורק בהתאם למתואר בחוברת זו . יש להשתמש אך ורק באביזרים המומלצים או מאושרים על ידי LG .**
אי ביצוע הוראה זו עלול לגרום לפציעה אישית או נזק למכשיר .

• **למניעת פציעה אישית וסכנת נפילה של שואב האבק בעת ניקוי מדרגות, הציבו את שואב האבק במדרגה נמוכה ולשאוב את המדרגות שמעליו .**
אי ביצוע הוראה זו עלול לגרום לפציעה אישית או נזק למכשיר .

מתג ניתוק תרמי :

שואב האבק הזה מצויד במתג ניתוק תרמי המיועד להגן עליו במקרה של התחממות יתר של המנוע . אם שואב האבק נכבה לפתע מעצמו, כבו את שואב האבק ונתקו אותו משקע החשמל שבקיר. נסו לגלות את הסיבה להתחממות היתר כגון שקית אבק מלאה, צינור יניקה חסום, או מסנן מלוכלך. אם מוצאים את הסיבות, טפלו בהן, והמתינו 30 דקות לפחות לפני השימוש בשואב האבק. לאחר 30 דקות, חברו את התקע לשקע החשמל שבקיר והדליקו את שואב האבק.

הוראות בטיחות חשובות

נא לקרוא את כל ההוראות הבאות לפני השימוש בשואב האבק הזה, על מנת למנוע סכנת אש, הלם חשמלי, פציעה אישית או נזק למכשיר, בעת השימוש בשואב האבק . חוברת זו אינה כוללת את כל המצבים האפשריים שנעלולים לקרות . תמיד התקשרו לסוכן השירות שלך, או ליצרן בקשר לבעיות שאתם לא מבינים . מכשיר זה תואם להנחיות ה EC- הבאות : - Low Voltage -93/68/EEC ,Directive-73/23/RV ,Directive EMC-EEC336/89- .

זה סימן התרעה .

סימן זה מתריע לכם על אפשרות חשיפה לסכנה שעלולה להרוג או לפגוע בכם ובאחרים .

כל מידע בטיחות בא אחרי סימן התרעה, והמילה "אזהרה" או "זהירות" . משמעותן של מילים אלה :

אזהרה סימן זה מתריע לכם על אפשרות חשיפה לסכנת פגיעה חמורה או מוות .

זהירות סימן זה מתריע לכם על אפשרות חשיפה לסכנת פציעה גופנית או נזק לרכוש .

אזהרה

- **אין לגרור או לקחת את כבל החשמל, להשתמש בו כידית, או למשכו סביב קצוות חדים או פינות . אל תעבירו את שואב האבק מעל הכבל. שמרו על הכבל הרחק ממשטחים חמים .**
  אי ביצוע הוראה זו עלול לגרום להלם חשמלי, או פציעה אישית, או אש, או נזק למכשיר.
- **השגיחו על ילדים קטנים כדי לוודא כי אינם משחקים במכשיר זה . הקפידו במיוחד בעת השימוש בקרבת ילדים .**
  אי ביצוע הוראה זו עלול לגרום לפציעה אישית או נזק למכשיר .
- **אין להשתמש במכשיר אם כבל החשמל או תקע פגום או לא תקין .**
  אי ביצוע הוראה זו עלול לגרום לפציעה אישית או נזק למכשיר.
  במקרים אלה, התקשרו לסוכן שירות של LG Electronics כדי למנוע סכנה .
- **אין להשתמש בשואב האבק אם הוא היה נמצא במים .**
  אי ביצוע הוראה זו עלול לגרום לפציעה אישית או נזק למכשיר .
  במקרים אלה, התקשרו לסוכן שירות של LG Electronics כדי למנוע סכנה .
- **יש לנתק את שואב האבק מהחשמל לפני השירות או ניקוי המכשיר או כאשר שואב האבק אינו בשימוש .**
  אי ביצוע הוראה זו עלול לגרום להלם חשמלי או פציעה אישית .
- **אין להשתמש בשואב האבק כדי להרים דבר הנמצא עדיין בבעירה או מעלה עשן, כגון סיגריות או אפר חם .**
  אי ביצוע הוראה זו עלול לגרום למוות, אש או הלם חשמלי.
- **אין לשאוב חומרים דליקים או נפיצים כגון נפטלין, בנזן, מדללים, ופרופן (נוזלים או גזים)**
  הענשן מהחומרים האלה יכול ליצור סכנת אש או פיצוץ . אי ביצוע הוראה זו עלול לגרום למוות או פציעה אישית .
- **אל תטפלו בתקע או בשואב האבק בידיים רטובות .**
  אי ביצוע הוראה זו עלול לגרום למוות או הלם חשמלי .
- **אל תנתקו מן החשמל באמצעות משיכת הכבל .**
  אי ביצוע הוראה זו עלול לגרום לנזק למכשיר או הלם חשמלי. לניתוק, אחזו בתקע, לא בכבל
- **הרחיקו שיער, לבוש רפוי, אצבעות וכל חלק גוף אחר מן הפתחים והחלקים הנעים .**
  אי ביצוע הוראה זו עלול לגרום להלם חשמלי או פציעה אישית .
- **תיקונים למכשירים אלקטרוניים חייבים להתבצע אך ורק על ידי טכנאי מוסמך .**
  תיקונים בלתי נכונים עלולים לגרום לסכנות חמורות למשתמש .
- **אין לחבר את התקע לשקע החשמל אם בקרת העוצמה אינה במצב OFF (כבוי) .**
  אי ביצוע הוראה זו עלול לגרום לפציעה אישית או נזק למכשיר.
  (בהתאם לדגם)
- **שימרו על ילדים הרחק, ושימו לב למחסומים כאשר מגלגלים את כבל החשמל כדי למנוע פציעה אישית .**
  הכבל נע במהירות בעת הגילגול . (בהתאם לדגם)
- **יש בציור כבלים חשמליים . אין להשתמש בציור אם הוא ניזוק, חתוך או מנוקב .**
  אי ביצוע הוראה זו עלול לגרום למוות או הלם חשמלי. (בהתאם לדגם)
- **אין להמשיך להשתמש בשואב האבק אם פריט כלשהו חסר או ניזוק .**
  אי ביצוע הוראה זו עלול לגרום לפציעה אישית או נזק למכשיר.
  במקרים אלה, התקשרו לסוכן שירות של LG Electronics כדי למנוע סכנה.
- **אין להשתמש בכבל כאריך עם שואב האבק .**
  אי ביצוע הוראה זו עלול לגרום לסכנת אש או נזק למכשיר.
- **השתמשו במתח חשמלי מתאים .**
  שימוש במתח חשמלי בלתי מתאים עלול לגרום לנזק למנוע ופציעה למשתמש .
  מתח חשמלי מתאים רשום על התווית בתחתית שואב האבק .
- **כבו את כל הבקרות לפני הניתוק מן החשמל .**
  אי ביצוע הוראה זו עלול לגרום להלם חשמלי או פציעה אישית .
- **אין להחליף את התקע בשום אופן .**
  אי ביצוע הוראה זו עלול לגרום להלם חשמלי, או פציעה אישית או נזק למכשיר. אם מחליפים את התקע, זה עלול לגרום למוות . אם התקע אינו מתאים, התקשרו לטכנאי מוסמך כדי להתקין את השקע המתאים .

תוכן העניינים

הוראות בטיחות חשובות.....4~5

אופן השימוש 6

הרכבת שואב האבק 6

הפעל'ת שואב האבק 8

שימוש בפייה ל'ניקוי שטיח ורצפה 9

מדריך המשתמש ל'פייה המסתובבת 10

שימוש באביזרי הפיות 11

ריקון מיכל' האבק.....12

ניקוי מיכל' האבק 13


ניקוי מסנן האוויר ומסנן בטיחות המנוע 14

ניקוי מסנן הפל'יטה.....15

מה ל'עשות במקרה ששואב האבק אינו פועל' 16

מה ל'עשות במקרה שביצועי השאיבה פוחתים ? 16

הוראות הפעל'ה

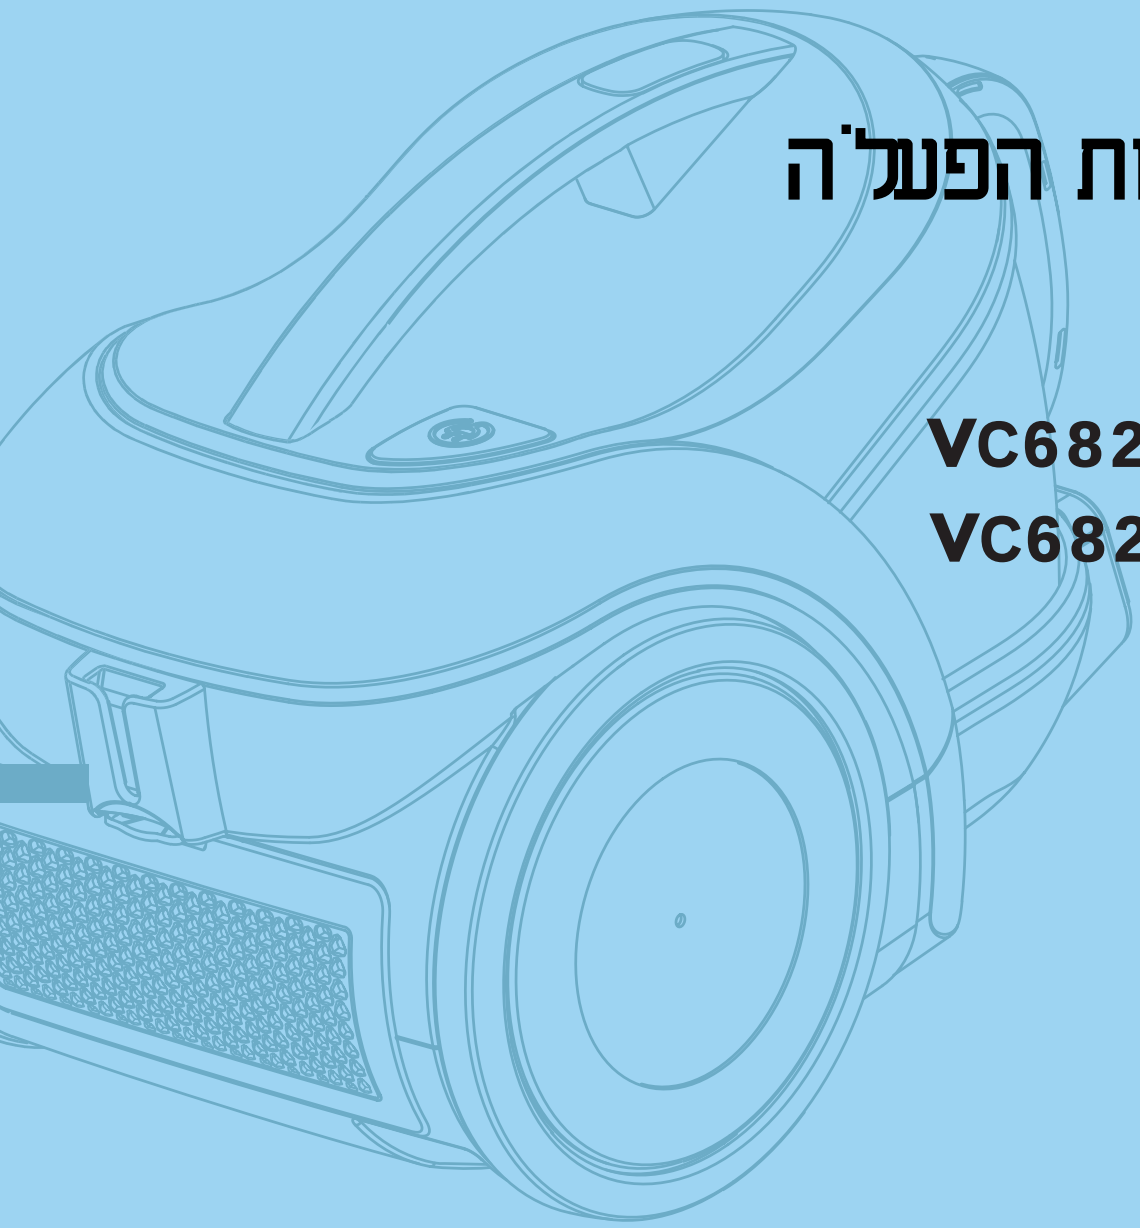

VC6820NHT
VC6820UHAT

שואב אבק ציקל'ון דגם חדש

מידע זה מכיל' הוראות חשובות ל'שימוש בטיחותי בשואב האבק ותחזוקתו .
במיוחד קראו בבקשה את כל' המידע בדף 14 - 5 ל'בטיחותכם .
שמרו בבקשה את ההוראות במקום נגיש בקל'ות ל'צורך עיון חוזר בעתיד .

LG