



REFRIGERATOR OWNER'S MANUAL


Please read this manual carefully and thoroughly before operating this unit.

Year of Mfg. : 2009

P/No.: 3828JH8003K

CONTENTS

INSTALLATION	3
FEATURE CHART	4
OPERATION	5
Starting	
Temperature Control	
Ice Making	
Bottle Rack Cooling	
Chilled Compartment	
Defrosting	
Deodorizer (option)	
F.I. R. Lamp (option)	
LAMP REPLACEMENT	8
SUGGESTIONS ON FOOD STORAGE	9
CLEANING	10
GENERAL INFORMATION	10
IMPORTANT WARNINGS	11
BEFORE CALLING FOR SERVICE	12

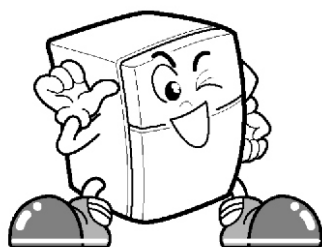

THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE, AND UTILIZES THE LATEST IN TECHNOLOGY.

WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH IT'S PERFORMANCE AND RELIABILITY.

BEFORE YOU START YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY. IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.

ENTRY

The model and serial numbers are found on the inner case back of refrigerator compartment of this unit. These numbers are unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of Purchase	:	
Dealer purchased from	:	
Dealer address	:	
Dealer phone no.	:	
Model no.	:	
Serial no.	:	



INSTALLATION

1. Select a good location.
Place your refrigerator where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. There must be proper air circulation around your refrigerator to keep it operating efficiently.
If your refrigerator is placed in a recessed area in the wall, allow at least 10 inches or greater clearance above the refrigerator and 2 inches or more from the wall.
The refrigerator should be elevated 1 inch from the floor, especially if it is carpeted.
4. To avoid vibrations, the unit must be level.
If required, adjust the leveling screws to compensate for unevenness of the floor.
The front should be slightly higher than the rear to aid in door closing.
Leveling screws can be turned easily by tilting the cabinet slightly.
Turn the leveling screws clockwise(➡) to raise the unit, counterclockwise(⬅) to lower it.
5. Install this appliance between 10°C and 43°C.
If the temperature around the appliance is too low or high, cooling ability may lessen.
6. The Refrigerator must be positioned so that the plug is easily accessible.

NEXT

1. Clean your refrigerator thoroughly and wipe off all dust accumulated during shipping.
2. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
4. Prior to storing food, leave your refrigerator on for 2 or 3 hours.
Check the flow of cold air in the freezer compartment to ensure proper cooling.
Your refrigerator is now ready for use.

FEATURE CHART

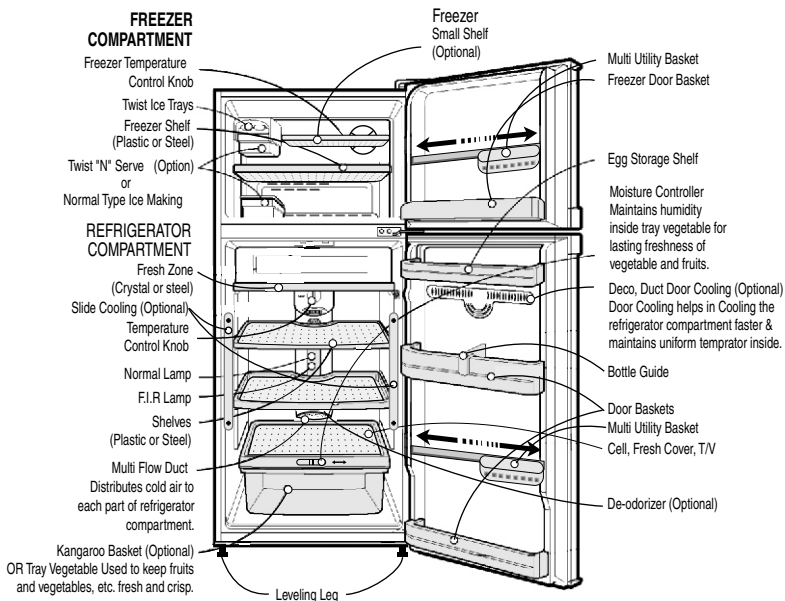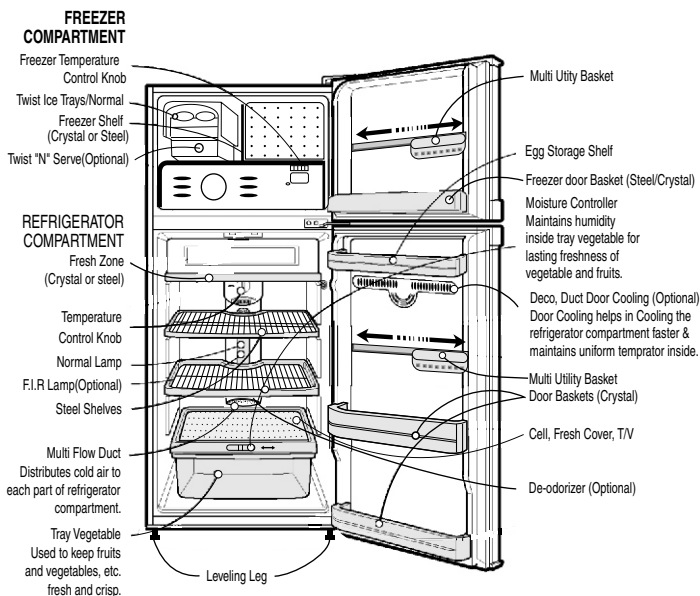

* In view of any policy of continuous improvements, the above technical specifications are subject to change.

OPERATION

STARTING


When your refrigerator is first installed, allow it 24 hours to stabilize at normal operating temperatures prior to filling it with fresh or frozen foods. Then adjust the knobs to get satisfactory results as per instruction given below.

If operation is interrupted, allow 5 minutes delay before restarting.


TEMPERATURE CONTROL

☐ REFRIGERATOR

- Your refrigerator has two controls that let you regulate the temperature in the freezer and refrigerator compartments.

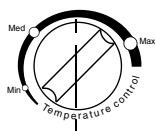


- Initially set the REFRIGERATOR TEMP. CONTROL MED/NORMAL and the FREEZER TEMP. CONTROL at NORMAL. Leave it operating for 24 hours(one day) to stabilize. Then adjust the compartment temperature according to your desire.

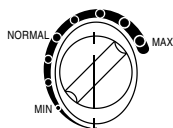

- **REFRIGERATOR TEMP. CONTROL (MIN, MED/NORMAL)**
1, 2, 3, 4, 5, 6, 7
MIN, MED, MAX
The higher the setting, the colder the refrigerator compartment will become.

*FREEZER



- **FREEZER TEMP. CONTROL - 1, 2, 3, 4, 5, 6**
Setting at "6", the freezer compartment becomes coldest. But the refrigerator compartment becomes warmer because less cold air flows into the refrigerator compartment.

- **In cold weather** the unit operates less and the freezer compartment has a tendency to warm up. For colder freezer, turn the FREEZER TEMP. CONTROL to "4"~"5" & REFRIGERATOR TEMP. CONTROL to 1 or minimum. For warmer refrigerator, Please put the FREEZER TEMP. CONTROL to 1~2 and REFRIGERATOR TEMP. CONTROL TO 1 or minimum.
- **If you keep a lot of foods in the freezer or open its door frequently**, its temperature could go higher. In this case, set the FREEZER TEMP. CONTROL dial between 5 and 6 to cool it. Return the FREEZER TEMP. CONTROL dial to the original position after usage.

- **In hot weather or to put much foods in the refrigerator compartment**, the refrigerator compartment has a tendency to warm up. For colder refrigerator turn the FREEZER TEMP. CONTROL to "1"~"3" to direct more cold air into the refrigerator compartment, and the REFRIGERATOR TEMP. CONTROL towards max.
Setting at "4"~"5" of the FREEZER TEMP. CONTROL, the refrigerator compartment will not be cold enough.


OPERATION

ICE MAKING


Kindly, Find your appliance is using General type or Twisting ice serve type.

Normal Type

- To make ice cubes, fill the ice tray with water till the water level mark and place it on the Ice cube box. Then insert the ice cubes box in the freezer compartment.

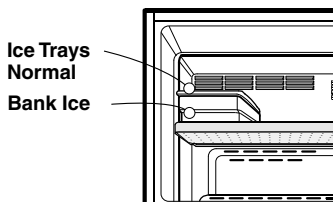


- To remove ice cubes, hold the tray at its ends and twist gently, ice cubes fall automatically.

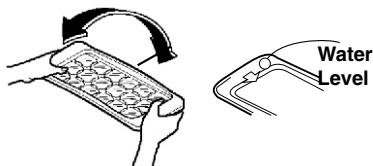

Twist 'N' Serve Type

- To make ice cubes, fill the ice tray with water and insert in its position.

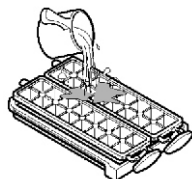


- To remove ice cubes, hold the knob of the tray and turn gently. Then, ice cubes drop in the Bank Ice.

- **In case of a steel shelf**

To place a shelf at a higher position, remove the ice cube box, and place the shelf, and then replace the ice cube box.

Instruction for Bank Ice


- **USE BANK ICE ONLY TO STORE ICE CUBES. DO NOT MAKE ICE IN IT, AS IT MAY BREAK.**

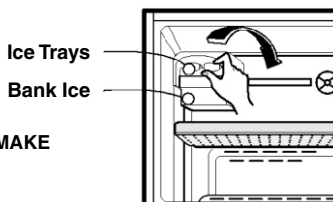

OPERATION


DOOR COOLING

- Cool air vent is placed on the refrigerator door to provide Door Shelves with cool air
- If foreign substances enter the cool air vent while cleaning, efficiency will be lowered. In addition, if gasket is damaged, efficiency may be lowered due to the escape of cool air. So care should be taken during cleaning.

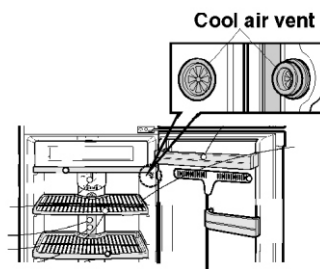

CHILLER COMPARTMENT

When the door is opened, the warmer air doesn't influence the cooling of chiller compartment. So you can keep food fresher in it.

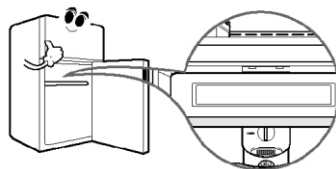

DEFROSTING


- Defrosting takes place automatically.
- The defrosted water flows down to the evaporating tray which is located in the lower back side of the refrigerator and is evaporated automatically.

DEODORIZER

- By using a catalyst, deodorizing performance is guaranteed.
- Unpleasant odor of food in fresh food compartment is deodorized with no harm to you and the food.

How to use

- As the catalyst is located in cooling air outlet for circulating air in fresh food compartment, there is no need for any handling.
- Do not prick the cooling air outlet with a sharp tip because the deodorizing catalyst may be damaged.
- When storing food with a strong odor, wrap it or store it in a container with a lid because odor may be passed on to other foods.
- Don't try to remove the deodorizer cover, as you may break the catalyst.

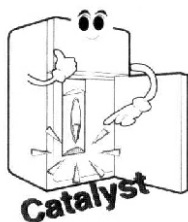

OPERATIONS


F.I.R LAMP

Feature

- Far Infrared Rays emitted from Far Infrared Ray Lamp restrains the dryness of the foods and keeps its Moisture without deteriorating nutritron value.
- By increasing the nucleic acid, Far Infrared Rays also keeps the aroma and the smell of the food for a longer time.

Operating

- When the refrigerator begins to operate, F.I.R Lamp turns on. During the refrigerator's operating, the on and off of the F.I. R Lamp is automatically controlled by the refrigerator inner temperature. Therefore it is not necessary to handle F.I.R Lamp.

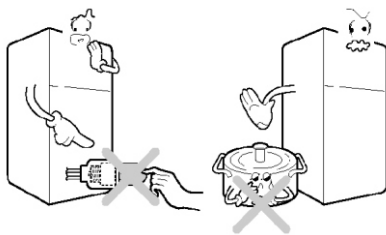

- If you store the foods wrapped in the vinyl or wrapper, not in the vessel with lid, the foods will get more effective F.I.R results.

LAMP REPLACEMENT

1. Unplug the power cord from the outlet.
2. Remove refrigerator shelves.
3. To remove the lamp cover, insert a slotted driver at the one of under hole of the lamp cover and pull it out forwards.
4. Turn the lamp counterclockwise.
5. Assemble in reverse order of disassembly.

Replacement bulb must be the same specification as original



CAUTION

- If you want to check the F.I.R Lamp operation, don't touch F.I.R Lamp because you may burn your fingers with the high temperature of its surface.
- Don't try to take out the lamp cover to check F.I.R. lamp operation as you may break it, if not removed carefully. Call service person / authorized dealer in case of doubt.

SUGGESTIONS ON FOOD STORAGE

STORING FOOD


- Store fresh food in the refrigerator compartment. How food is frozen and defrosted is an important factor in maintaining freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food, and lead to high electric bills!
- When storing, **wrap food in vinyl, or place in a covered container**. This prevents moisture from evaporating, and helps food to keep its taste and nutritional value.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, causing temperatures to rise.
- To adjust the temperature control easily, do not store food near the temperature control dial.

FREEZER COMPARTMENT

- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been defrosted. This causes loss of taste and nutritional value.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door Shelf.

REFRIGERATOR COMPARTMENT

- Avoid placing moist food on deep interior refrigerator shelves, it could freeze upon direct contact with chilled air. To avoid this it is better to store food in the covered container .
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack, ensure that they are fresh, and always store them in a up-right position, which keeps them fresh longer.

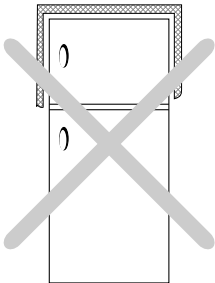

NOTE

- If you keep the refrigerator in a hot, and humid place, frequently open its door or put a lot of vegetables in it, dew may form in it, which has no effect on its performance. Remove the dew with dust cloth free from care.
- Don't use plastic cover. Cloth or any other item to cover your refrigerator on sides, it will hamper performance of the refrigerator.

CLEANING

It is important that your refrigerator be kept clean to prevent undesirable odors. Spilled food should be wiped up immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners or strong alkaline solutions on any surface.

Before you clean, however, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

EXTERIOR - Use a lukewarm solution of mild soap or detergent to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR - Regular cleaning of the interior and interior parts is recommended. If you have the No Frost Model which defrosts automatically, leave both doors open during the entire cleaning process. Disconnect the power supply, and remove food and all Compartment Shelves, Storage Trays etc. Wash all compartments with a baking soda solution. Rinse and dry.

INTERIOR PARTS - Wash compartment shelves, door shelves, storage trays and magnetic door seals etc. with a baking soda solution or a mild detergent and warm water. Rinse and dry.

WARNING

Always remove power cord from the wall outlet prior to cleaning in the vicinity of electrical parts (lamps, switches, controls, etc.). Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing a electric short circuit. Do not use flammable or toxic cleaning liquids.

GENERAL INFORMATION

VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation with REFRIGERATOR TEMP. CONTROL at "MIN" Position.

Place freezable items in freezer for longer life.

When you plan to be away for an extended period, remove all food, disconnect the power cord, clean the interior thoroughly, and don't leave door OPEN.

POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

IF YOU MOVE


Remove or securely fasten down all loose items inside the refrigerator.

To avoid damaging the leveling screws, turn them all the way into the base.

ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet will always be warm, especially just after installation. Don't be alarmed. This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent "sweating" on the outer cabinet wall.

Anti-Condensation Pipe

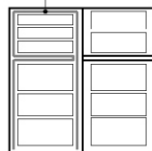

IMPORTANT WARNINGS

DO NOT USE AN EXTENSION CORD

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload and intermittent tripping

POWER CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by a special cord or assembly from the manufacturer or its authorised service agent.

VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove gaskets, latches, lids or the entire door from your unused appliance, or take some other action to make it harmless. Keep the keys out of reach of children and not in the vicinity of the refrigerator.

ABOUT GROUNDING(EARTHING)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

This appliance must be grounded(earthed).

DON'T WAIT! DO IT NOW!

NEVER STORE EXPLOSIVES AND CHEMICALS

VENTILATION

Keep the ventilations openings in the Refrigerator, clear of obstruction.

DEFROSTING

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

APPLIANCES USED INSIDE

Do not use electrical appliances inside the food storage compartments, unless they are of the type recommended by the manufacturer.

DISPOSAL

Refrigerator not to be disposed by burning as the insulation blowing gas is highly flammable. It can be handed over to licensed hazardous waste disposal facility for safe disposal.

BEFORE CALLING FOR SERVICE

SERVICE CALLS CAN OFTEN BE AVOIDED!

IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST :


PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	● Has a house fuse blown or circuit breaker tripped? ● Has the power cord plug been removed or loosened from the electrical wall outlet?
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	● Temperature control not set on proper position. ● Appliance is placed close to wall or heat source. ● Warm weather-frequent door openings. ● Door is not closed entirely. ● Door left open for a long time. ● Large amount of foods are kept in the refrigerator.
ABNORMAL NOISE(S)	● Refrigerator is installed in a weak or uneven place or leveling screw needs adjusting. ● Unnecessary objects placed in the back side of the refrigerator.
REFRIGERATOR HAS ODOR	● Foods with strong odors should be tightly covered or wrapped. ● Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	● Not unusual during periods of high humidity. ● Door may have been left ajar.

CIRCUIT DIAGRAM

MODEL :

Voltage / Frequency:- 220V~60Hz


GR-242QP
GR-272QP
GR-T302QM
GR-T332QM

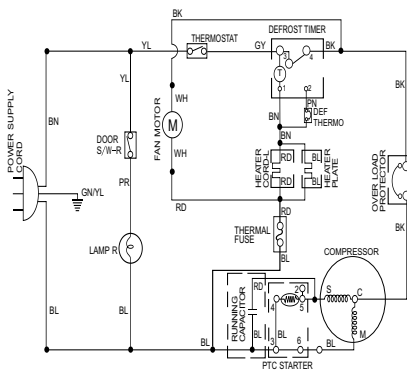

MODEL :

Voltage / Frequency:- 127V~60Hz

GR-242QP
GR-272QP
GR-T302QM
GR-T332QM

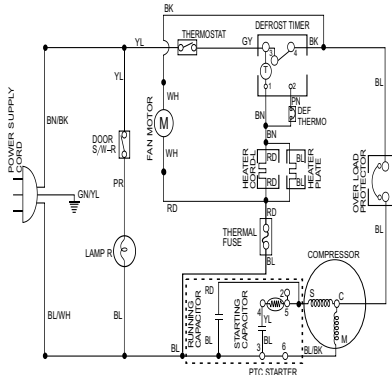

SPECIFICATIONS

MODEL NUMBER	GR-242**	
CLIMATE CLASS	TROPICAL(T)	
RATED VOLTAGE	127V	220V
RATED FREQUENCY	60Hz	50/60Hz
RATED INPUT	121W	127W
RATED CURRENT	1.232A	0.75A
DEFROSTING INPUT :	128W	106W
DEFROSTING CURRENT	0.993A	0.48A
ELECTRIC POWER CONSUMPTION	1.85(Kwh/24Hrs)	1.8(Kwh/24Hrs)
RATED INPUT OF LAMP R :	15W	
PERCENTAGE RUNNING TIME	65%	
QUANTITY OF ICE PRODUCED PER 24 HRS	1.9Kg	
REFRIGERANT R 134a	120gm	
MASS OF APPLIANCE	49Kg	
RATED STORAGE VOLUME	201L	
RATED GROSS VOLUME	225L	
RATED SHELF AREA	0.815m ²	
MANUFACTURER	LG ELECTRONICS	
COUNTRY OF ORIGIN	MADE IN INDIA	
DIMENSIONS mm :	540(W)x640(D)x1450(H)	

MODEL NUMBER	GR-272**	
CLIMATE CLASS	TROPICAL(T)	
RATED VOLTAGE	127V	220V
RATED FREQUENCY	60Hz	50/60Hz
RATED INPUT	121W	127W
RATED CURRENT	1.232A	0.75A
DEFROSTING INPUT :	128W	106W
DEFROSTING CURRENT	0.993A	0.48A
ELECTRIC POWER CONSUMPTION	2.40(Kwh/24Hrs)	1.9(Kwh/24Hrs)
RATED INPUT OF LAMP R :	15W	
PERCENTAGE RUNNING TIME	65%	
QUANTITY OF ICE PRODUCED PER 24 HRS	1.8Kg	
REFRIGERANT R 134a	120gm	
MASS OF APPLIANCE	51Kg	
RATED STORAGE VOLUME	220L	
RATED GROSS VOLUME	245L	
RATED SHELF AREA	0.815m ²	
MANUFACTURER	LG ELECTRONICS	
COUNTRY OF ORIGIN	MADE IN INDIA	
DIMENSIONS mm :	540(W)x640(D)x1545(H)	

SPECIFICATIONS

MODEL NUMBER	GR-T302**	
CLIMATE CLASS	TROPICAL(T)	
RATED VOLTAGE	127V	220V
RATED FREQUENCY	60Hz	50/60Hz
RATED INPUT	128W	126W
RATED CURRENT	1.23A	0.71A
DEFROSTING INPUT :	144W	133W
DEFROSTING CURRENT	1.12A	0.5A
ELECTRIC POWER CONSUMPTION	1.88(Kwh/24Hrs)	1.9(Kwh/24Hrs)
RATED INPUT OF LAMP R :	15W	
PERCENTAGE RUNNING TIME	58%	
QUANTITY OF ICE PRODUCED PER 24 HRS	1.40Kg	
REFRIGERANT R 134a	120gm	
MASS OF APPLIANCE	54Kg	
RATED STORAGE VOLUME	245L	
RATED GROSS VOLUME	275L	
RATED SHELF AREA	0.938 m ²	
MANUFACTURER	LG ELECTRONICS	
COUNTRY OF ORIGIN	MADE IN INDIA	
DIMENSIONS mm :	580(W)x640(D)x1560(H)	

MODEL NUMBER	GR-T332**	
CLIMATE CLASS	TROPICAL(T)	
RATED VOLTAGE	127V	220V
RATED FREQUENCY	60Hz	50/60Hz
RATED INPUT	128W	126W
RATED CURRENT	1.23A	0.71A
DEFROSTING INPUT :	144W	133W
DEFROSTING CURRENT	1.12A	0.5A
ELECTRIC POWER CONSUMPTION	1.89(Kwh/24Hrs)	2.0(Kwh/24Hrs)
RATED INPUT OF LAMP R :	15W	
PERCENTAGE RUNNING TIME	62%	
QUANTITY OF ICE PRODUCED PER 24 HRS	1.60Kg	
REFRIGERANT R 134a	125gm	
MASS OF APPLIANCE	56Kg	
RATED STORAGE VOLUME	272L	
RATED GROSS VOLUME	304L	
RATED SHELF AREA	0.938 m ²	
MANUFACTURER	LG ELECTRONICS	
COUNTRY OF ORIGIN	MADE IN INDIA	
DIMENSIONS mm :	580(W)x640(D)x1680(H)	



البراد

كتيب المستخدم

الرجاء قراءة هذا الكتيب بشكل كامل
وبعناية قبل تشغيل هذه الوحدة

المحتويات

3..... التركيب

4 جدول السمات

5 التشغيل

بدء التشغيل

التحكم في درجة الحرارة

تكوين الثلج

تبريد حامل الزجاجات

قسم التبريد

إذابة الثلج

مزيل الروائح (اختياري)

مصباح بأشعاعات بعيدة تحت الحمراء F.I.R (اختياري)

8 استبدال المصباح


9 اقتراحات لتخزين الأطعمة

10 التنظيف

10 معلومات عامة

11 تحذيرات هامة

12 قبل الاتصال بمركز الخدمة

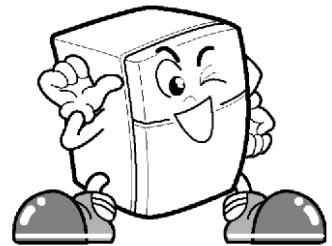

لقد تم تصنيع هذا البراد بعناية فائقة، وباستخدام أحدث التقنيات الداخلية. نحن على يقين من رضاك التام بأدائه والقدرة على الاعتماد عليه. قبل تشغيل البراد، الرجاء قراءة الكتيب بعناية. فهو يقدم تعليمات دقيقة للتركيب، التشغيل والصيانة، وكذلك يمدك ببعض الإرشادات المفيدة.

مدخل

الموديل والرقم المسلسل موجودان على الصندوق الداخلي أو اللوحة الخلفية لحجيرة التبريد في هذا الجهاز. هذه الأرقام خاصة بهذا الجهاز وحده وغير موجودة في غيره. يجب تدوين الملاحظات المطلوبة هنا وان تحتفظ بهذا الدليل كسجل دائم عند شرائك. الصق السندات والإيصال هنا.

تاريخ الشراء	:	
الوكيل الذي تم الشراء فيه	:	
عنوان الوكيل	:	
رقم تلفون الوكيل	:	
رقم الموديل	:	
الرقم المسلسل	:	

التركيب

- اختار مكان جيد.
 - ضع البراد في مكان حيث يسهل استعمال البراد.
 - تجنب وضع الوحدة بالقرب من مصادر الحرارة، الشمس المباشرة أو الرطوبة.
 - يجب توفر مكان جيد التهوية حول البراد للحفاظ على التشغيل الكفء. إذا وضعت البراد في مكان غائر في الحائط، اترك ما لا يقل عن 10 بوصات أو أكثر منطقة فارغة فوق البراد ولا يقل عن بوصتين أو أكثر من الحائط.
 - يجب رفع البراد عن الأرض بمسافة بوصة واحدة، خاصة إن كان فوق سجادة.
 - لتجنب الاهتزازات، يجب وضع الوحدة بشكل مستو.
 - ركب الجهاز بين 10°C و 43°C درجة مئوية. إذا كانت درجة الحرارة حول الجهاز منخفضة أو مرتفعة جداً، فقد تقل قدرة الجهاز على التبريد.
 - يجب وضع البراد في مكان يساعد على الوصول للمأخذ الكهربائي (القابس) بسهولة.
- بعد ذلك**
- نظف البراد بعناية وامسح كافة الأتربة المصاحبة خلال الشحن.
 - ركب الإضافات الكمالية مثل صندوق مكعبات الثلج، وما إلى ذلك في أماكنهم المحددة. لقد تم شحنهم معها لتجنب التعرض للضرر المحتمل خلال الشحن.
 - وصل كبل مذود الطاقة (أو وصل القابس) لمخرج الكهرباء. لا تستخدم مشترك مع أجهزة أخرى على نفس مخرج الكهرباء.
 - قبل تخزين الأطعمة، أترك البراد يعمل لمدة ساعتين إلى 3 ساعات.
 - افحص تدفق الهواء البارد في حجرة التجميد للتأكد من التبريد السليم.
 - البراد الآن جاهز للتشغيل.

حجرة التجميد

درجة حرارة حجرة التجميد
زر التحكم
قالب الثلج بالثني العادية
رف حجرة التجميد
(من الكريستال أو الصلب)
قالب بالثني (اختياري)

حجرة البراد


حجرة التبريد
من الكريستال أو الصلب

زر التحكم في درجة الحرارة

مصباح عادي
مصباح الأشعة البعيدة تحت الحمراء FIR/اختياري
أرفف من الصلب

مجرى متعدد التدفق
يوزع الهواء البارد لكل جزء من حجرة البراد

وعاء الخضروات
يستخدم لتخزين الفواكه والخضروات وغير ذلك الطازجة والهشة

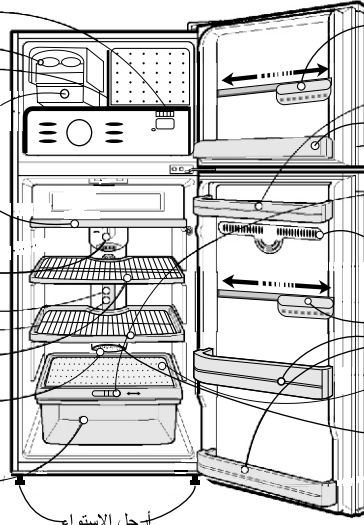

سلة صغيرة على باب حجرة التجميد (اختياري) (Sliding)

رف حفظ البيض
سلة باب حجرة التجميد (صلب/كريستال)

أداة ضبط الرطوبة
يحافظ على الرطوبة داخل وعاء الخضروات للحفاظ على الخضروات الطازجة.

باب التبريد بمجرى (اختياري)
باب التبريد يساعد على تبريد حجرة التبريد بشكل أسرع و يحافظ على تناسق الحرارة بالداخل.

سلة الباب الصغيرة (اختياري) (Sliding)
سلة الباب (من الصلب/الكريستال)

تجفيف، غطاء الطازج، T/V

مزيل الروائح (اختياري)

حجرة التجميد

زر التحكم في درجة حرارة حجرة التجميد
قالب الثلج بالثني عادي
رف حجرة التجميد
(بلاستيك أو صلب)
قالب الثلج طراز "N" بالثني (اختياري)
النوع العادي لعمل الثلج

حجرة البراد


حجرة التبريد
(من البلاستيك أو الصلب)

زر التحكم في درجة الحرارة

مصباح عادي
مصباح الأشعة البعيدة تحت الحمراء FIR/اختياري
أرفف من (البلاستيك أو الصلب)

مجرى متعدد التدفق
يوزع الهواء البارد لكل جزء من حجرة البراد

وعاء الخضروات
يستخدم لتخزين الفواكه والخضروات وغير ذلك

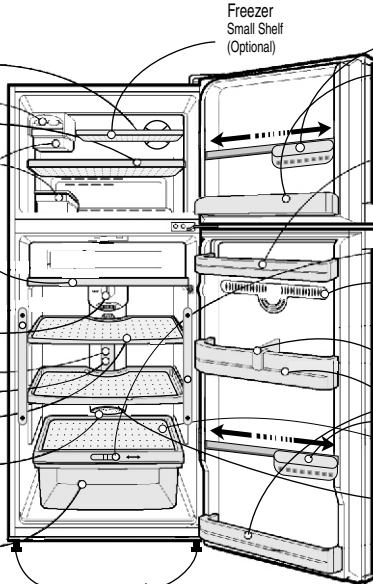

سلة صغيرة على باب حجرة التجميد (اختياري) (Sliding)

سلة باب حجرة التجميد

رف حفظ البيض
أداة ضبط الرطوبة

يحافظ على الرطوبة داخل وعاء الخضروات للحفاظ على الخضروات الطازجة.

باب التبريد بمجرى (اختياري)
باب التبريد يساعد على تبريد حجرة التبريد بشكل أسرع و يحافظ على تناسق الحرارة بالداخل.

دليل الزجاجات
سلات الباب

سلة الباب الصغيرة (اختياري) (Sliding)
خلية، غطاء الطازج، T/V

مزيل الروائح

نظرا لسياسة التحسينات المستمرة، المواصفات الفنية المذكورة أعلاه قابلة للتغيير.


البداية

عند تركيب البراد لأول مرة، امنحه 24 ساعة ليثبت عند درجات حرارة التشغيل الطبيعية قبل ملئ البراد بالأطعمة الطازجة أو المجمدة. ثم عدا الأضرار للحصول على النتائج المرضية حسب التعليمات المذكورة فيما يلي. في حالة إعاقة التشغيل، اسمح بـ 5 دقائق قبل إعادة التشغيل.

التحكم في درجة الحرارة


البراد

- يوجد 2 جهاز للتحكم في البراد يساعدان على ضبط درجة الحرارة في حجرة التجميد وحجرات البراد.

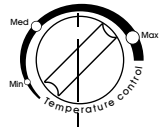

- أولاً جهاز التحكم في درجة حرارة البراد Med/Normal متوسط/عادي وجهاز التحكم في درجة حرارة حجرة التجميد على Normal عادي. أتركه ليعمل لمدة 24 ساعة (مدة يوم) ليثبت. ثم اضبط درجة حرارة الحجرة حسب رغبتك.


- جهاز التحكم في درجة حرارة البراد (Normal، Med، Min) (أدنى، متوسط، عادي) 1، 2، 3، 4، 5، 6، 7

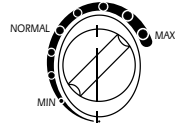

MAX، MED، MIN أدنى، متوسط، أقصى
كلما كان الضبط أعلى، كلما صارت حجرات البراد أكثر برودة

- حجرة التجميد. التحكم في درجة حرارة حجرة التجميد - 1، 2، 3، 4، 5، 6. الضبط على "6" تصير حجرات التجميد في أقصى برودة. ولكن تصبح حجرة البراد أكثر دفئاً بسبب قلة تدفق الهواء البارد بداخل حجرة البراد.

*FREEZER




- في الجو البارد تعمل الوحدة بشكل أقل وتميل حجرات المجمد إلي أن تصبح أكثر دفئاً. من أجل زيادة برودة المجمد اضبط جهاز التحكم في برودة المجمد على "4-5" وجهاز التحكم في درجة حرارة البراد على 1 أو أدنى. للحصول على دفي أكثر، الرجاء اضبط جهاز التحكم في درجة حرارة حجرة التجميد على 1-2 وجهاز التحكم في درجة حرارة البراد على 1 أو أدنى.
- إذا احتفظت بطعام كثير في حجرة التجميد أو تفتح الباب بشكل متكرر، فقد ترتفع درجة الحرارة، في هذه الحالة، اضبط درجة حرارة حجرة التجميد بين درجة 5 و 6 لتبريد الجو. أرجع لجهاز التحكم في درجة الحرارة. عد للوضع الأصلي بعد الاستخدام.
- في الجو الحار أو لإضافة طعام أكثر في البراد، تميل حجرات البراد إلي أن تصير أكثر دفئاً. لتبريد البراد بشكل كبير، اضبط درجة حرارة حجرة التجميد على "1-3" لتوجيه المزيد من الهواء البارد بداخل وحدات البراد، واضبط وحدة التحكم في درجة حرارة البراد على أقصى.
- ضبط جهاز التحكم في درجة حرارة البراد على "4" - "5" لن يكون كافياً لتوفير البرودة المطلوبة للبراد.

تكوين الثلج


الرجاء، اكتشف النوع المستخدم في جهازك هل هو النوع العام أو نوع التزويد بالثلج بالنتي .

النوع العادي

- لعمل مكعبات الثلج، املاً قالب الثلج بالماء حتى يصل مستوى الماء للعلامة المحددة وضعه على صندوق مكعبات الثلج. ثم ضع صندوق مكعبات الثلج في حجرة التجميد.

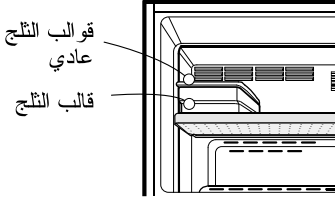


- لرفع مكعبات الثلج، امسك القالب من الأطراف وقم بثنيه برفق، سوف تقع قوالب الثلج تلقائياً.

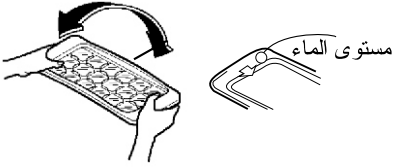

نوع القالب شكل "N" بالنتي


- لعمل مكعبات الثلج، املاً قالب الثلج بالماء وضعه في مكانه.

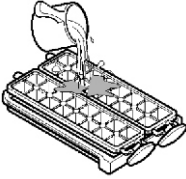

- لرفع مكعبات الثلج، امسك بقالب الثلج واتنيه برفق. عندئذ سوف تسقط المكعبات في قاعدة قالب الثلج.

في حالة الرف الصلب

- لوضع الرف على مستوى أعلى، أزل صندوق مكعبات الثلج، وضع الرف، ثم أعد وضع صندوق مكعبات الثلج.

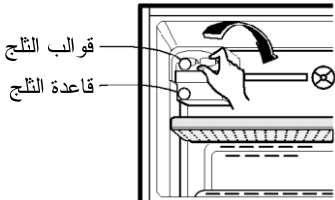


تعليمات بخصوص قاعدة الثلج

- اهتمل قاعدة الثلج لتخزين مكعبات الثلج فقط. لا يجب استعمال القاعدة لعمل الثلج بها، فقد تتعرض للكسر.

تبريد الباب

- مَنفذ الهواء البارد موضوع على باب البراد لتزويد أرفف الباب بالهواء البارد.


مَنفذ الهواء البارد

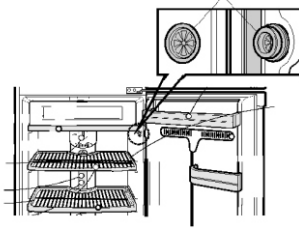

- إذا دخلت أي أجسام غريبة في مَنفذ الهواء خلال التنظيف، فسوف تنخفض كفاءة التشغيل نتيجة تسرب الهواء البارد. لذلك يجب توخي الحذر خلال التنظيف.

حجرة المُبرِّد

- عند فتح الباب، لا يؤثر الهواء الأكثر دفئاً على تبريد حجرة المُبرِّد. لذلك يمكنك تخزين الطعام الطازج به.

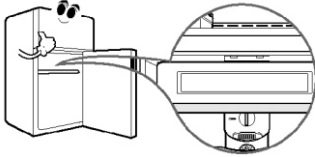

إذابة الجمد

- تتم عمل إذابة الجمد تلقائياً.
- يتدفق الماء المذاب لأسفل إلى قالب التبخير الموجود أسفل البراد في الجانب الخلفي به وتتم عملية التبخير بشكل تلقائي.

مزيل الروائح

- باستعمال مادة حفازة، تتم عملية إزالة الروائح بشكل مضمون.
- تتم عملية إزالة الروائح الكريهة من حجرة الطعام الطازج بدون أي ضرر لك أو للطعام.

طريقة الاستعمال


- لأن المادة الحفازة موضوعة في مخرج الهواء البارد لانتشار الهواء في حجرة الطعام، ليس هناك ضرورة لأي معالجة.
- لا يجب تقب مخرج الهواء البارد بطرف حاد فقد يتسبب ذلك في تلف المادة المحفزة مزيل الروائح.
- عند تخزين الأطعمة ذات الروائح القوية، قم بتغليفها أو وضعها في وعاء بغطاء فقد تنتسرب الرائحة للأطعمة الأخرى.
- لا تحاول إزالة غطاء مزيل الروائح ، فقد تتسبب في كسر المادة المحفزة.



مِصباح بأشعاعات بعيدة تحت الحمراء F.I.R

سمه

- أشعاعات تحت الحمراء بعيدة مُصدرة من مصباح بأشعاعات بعيدة تحت الحمراء يقيد جفاف الأطعمة ويحتفظ بها رطبه بدون الإقلال من قيمتها الغذائية.
- مع زيادة الحامض النووي، تحتفظ الأشعة البعيدة تحت الحمراء بنكهة ورائحة الأطعمة لمدة طويلة.

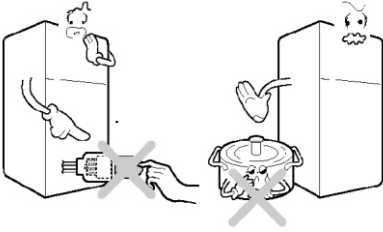

التشغيل

- عند بدء البراد في التشغيل، يبدأ مصباح الأشعة البعيدة تحت الحمراء في العمل. خلال تشغيل البراد، يتم تشغيل أو توقف مصباح الأشعة البعيدة تحت الحمراء بالتحكم التلقائي حسب درجة حرارة البراد من الداخل.
- لذلك فليس هناك ضرورة لمعالجة مصباح الأشعة البعيدة تحت الحمراء

- إذا احتفظت بالأطعمة مغلفة في فينيل أو غلاف، ليس في إناء بغطاء، ستتأثر الأطعمة بشكل أكبر بنتائج مصباح الأشعة البعيدة تحت الحمراء.

استبدال المصباح



1. افصل كبل الطاقة من مخرج الكهرباء.
 2. أنزع أرفف البراد.
 3. لرفع غطاء المصباح، أدخل مطرقة منقوبة أسفل ثقب غطاء المصباح واسحبه للخارج للأمام.
 4. لف المصباح عكس دوران الساعة.
 5. ركه في عكس طريقة الفك.
- أن يكون الجزء الزجاجي من المصباح من نفس مواصفات الأصلي.

تحذير

- إذا رغبت في فحص تشغيل مصباح الأشعة البعيدة تحت الحمراء FIR، لا تلمس مصباح الأشعة البعيدة تحت الحمراء فقد تحرق أصابعك نتيجة الحرارة العالية لسطح المصباح.
- لا تحاول إخراج غطاء المصباح لفحص تشغيل مصباح الأشعة البعيدة تحت الحمراء FIR فقد تعرضه للكسر لو لم تخرجه بعناية. اتصل بعامل الخدمة/ الوكيل المعتمد في حالة الارتباك.

اقتراحات لتخزين الأطعمة

لتخزين الأطعمة

- قم بتخزين الطعام الطازج في حجرة البراد. طريقة تجميد وإذابة الثلج من العوامل الهامة في الحفاظ على النضارة والنكهة.
- لا تقوم بتخزين الأطعمة المعرضة للتلف بسرعة في درجات حرارة منخفضة، مثل الموز، الأناناس، البطيخ و الشمام.
- اترك الطعام الساخن ليبرد قبل التخزين. وضع الطعام الساخن في البراد قد يتلف الأطعمة الأخرى، ويتسبب في فوائير استهلاك كهرباء مرتفعه.
- عند التخزين، **لف الطعام بالفنيل**، أو **ضعه في وعاء بغطاء**. هذا يساعد على تجنب تبخر الرطوبة ، ويساعد على احتفاظ الطعام بالطعم والقيمة الغذائية.
- لا تشد فتحات التهوية بالأطعمة. الدوران السلس للهواء المبرد يحافظ على درجات حرارة البرد متساوية.
- لا تفتح الباب بشكل متكرر. فتح الباب يساعد على دخول الهواء الدافئ في البراد، ويتسبب في ارتفاع درجات الحرارة.
- لضبط زر التحكم في درجة الحرارة بسهولة، لا تخزن الأطعمة بالقرب من زر ضبط التحكم.

حجرة التجميد


- لا تخزن الزجاجات في حجرة التجميد، فقد يتعرضوا للكسر عند التجميد.
- لا تعيد تجميد الأطعمة التي تم إذابة الثلج عنها، لأن ذلك يتسبب في فقدان الطعم والقيمة الغذائية.
- عند تخزين أطعمة مجمدة مثل الأيس كريم (الجيلاتيني) لمدة طويلة، ضعها على رف حجرة التجميد، وليس على باب عرفة التجميد.

حجرة البراد

- تجنب وضع الطعام الرطب في الأرفف الداخلية العميقة، فقد تتجمد عند الاتصال المباشر بالهواء المبرد. لتجنب ذلك من الأفضل تخزين الأطعمة في وعاء مغطى.
- نظف الأطعمة دائما قبل وضعها في البراد. يجب غسل ومسح الفواكه والخضروات، ويجب مسح الأطعمة المعبئة لتنظيفها، لتجنب إتلاف الأطعمة المجاورة.
- عند تخزين البيض في حامل تخزين البيض، تأكد من أن البيض طازج، مع التأكد من تخزينهم في وضع عمودي، فذلك يحافظ على الاحتفاظ بالبيض طازج لمدة أطول.

تحذير

- إذا احتفظت بالبراد في مكان حار، ورطب، وفتح المتكرر للباب ووضع كمية كبيرة من الخضروات به، قد يتسبب في تكوين قطرات ندى عليه، الأمر الذي لا يؤثر على أداءه. أمسح نقاط الندى بمسحة نظيفة من القماش.
- لا تستخدم غطاء من البلاستيك. أي مواد من القماش لتغطية البراد من الداخل قد تعرقل أداء البراد.

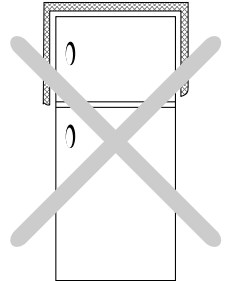

التنظيف

الأجزاء الداخلية- اغسل أرفف الحجرات وأرفف الباب، صواني التخزين، سدادات الباب المغناطيسية وغير ذلك، وذلك باستعمال محلول بيكرونات الصودا. ثم اشطفهم أتركهم ليجفوا.

تحذير

أفضل كبل التزويد بالطاقة دائما من مخرج الحائط قبل التنظيف في المنطقة المجاورة للأجزاء الكهربائية (المصابيح، مفاتيح الكهرباء، أدوات الحكم وغير ذلك) امسح الرطوبة الزائدة بقطعة إسفنجية أو قطعة من القماش لمنع الماء أو السائل من الترشب للأجزاء الكهربائية والتسبب في عطل تماس قصر الدائرة الكهربائية. لا تستخدم سوائل تنظيف قابلة للاشتعال أو سامه.

من الضروري الحفاظ على نظافة البراد لتجنب الروائح الكريهة. يجب مسح أي طعام يسكب فوراً، لأنه قد يتأكسد ويقع الأسطح البلاستيكية لو ترك ليستقر.

لا تستخدم مطلقاً قطع التنظيف المعدنية، الفرش، مواد حادة خشنة منظفه أو محاليل قلوية قوية على أي سطح.

لكن، قبل التنظيف تذكر أن الأجسام الرطبة سوف تلتصق أو تمسك على الأسطح شديدة البرودة. لا تلمس مطلقاً الأسطح المتجمدة بيدين مبتلئين أو رطبتين.

من الخارج- بمحلول فاتر مكون من صابون معتدل أو منظف لتنظيف البراد من الخارج. امسحه بقطعة قماش نظيفة و رطبه ثم اتركه ليجف.

من الداخل- تنظيف منتظم من الداخل وللأجزاء الداخلية. إذا كان لديك الطراز No Frost ضد تكوين الثلج حيث يذوب الثلج بشكل تلقائي، اترك كلا البابين مفتوحين طوال عملية التنظيف. افصل التيار الكهربائي، واخلج الطعام وكافة الأرفف و صواني التخزين وغير ذلك. اغسل كل الحجرات بمحلول بيكرونات الصودا. ثم اشطفه وأتركه ليجف.

اطلاعات عمومي

وقت العطلات

خلال العطلات الطويلة إلي حد ما من الأفضل أن تترك البراد وهو يعمل باستخدام التحكم في درجة حرارة البراد على وضع " أدنى".

ضع الأشياء القابلة للتجميد في حجرة التجميد للإطالة حياتها. عندما تنوي السفر لمدة مطوله، اخرج كافة الأطعمة من البراد، افصل كبل الكهرباء، نظف داخل البراد جيداً، ولا تترك الباب مفتوحاً.

انقطاع التيار الكهربائي

معظم أعطال التيار الكهربائي تنتهي خلال ساعة أو ساعتين ولن تؤثر على درجات حرارة البراد. لكن، يجب أن تقلل مرات فتح الباب عند انقطاع التيار الكهربائي. خلال انقطاع التيار لمدة طويلة، ضع قالب من الثلج الجاف أعلى العيوب المتجمدة.


في حالة انتقالك

أرفع أو أربط جيداً كافة الأجزاء الغير محكمه داخل البراد. لتجنب إتلاف لولب الاستواء، لفهم إلي القاعدة بشكل كامل.

ماسورة مضادة للتكثف

سوف يستمر الحائط الخارجي للبراد في حالة سخونة، خاصة بعد التركيب مباشرة. لا تقلق، السبب هو أن الماسورة المضادة للتكثف التي تضخ غاز التبريد لمنع " ارتشاح" الحائط الخارجي لكابينة البراد.

ماسورة مضادة للتكثف

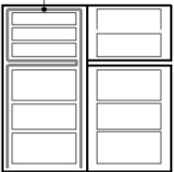

تحذيرات هامه

معلومات بخصوص التأسيس (توصيل بالأرض)

في حالة حدوث عطل تماس كهربائي، يقوم التأسيس (التوصيل بالأرض) بتقليل خطر الصدمة الكهربائية بتوفير سلك إفلات للتيار الكهربائي.

من أجل تجنب صدمة كهربائية محتملة، يجب توصيل هذا الجهاز بالأرض.

الإستخدام الغير سليم لقياس التأسيس قد يتسبب في صدمة كهربائية. أستخدم كهربائي مؤهل أو رجل خدمة في حالة عدم الفهم الكامل لتعليمات التأسيس، أو في حالة ارتباكك أن الجهاز قد تم توصيله للأرض بشكل سليم.

يجب تأريض هذا الجهاز (توصيله بالأرض).

لا تنتظر قم بذلك الآن!

لا يجب تخزين أي مواد متفجرة أو كيماويات مطلقاً

لا تستعمل كبل إطالة

إذا استطعت، وصل البراد إلي المخرج الكهربائي الخاص به لتجنب التسبب في حمل زائد وفصل متقطع على البراد وغيره من الأجهزة أو المصابيح الكهربائية.

استبدال كبل الطاقة

في حالة تلف كبل التزويد بالطاقة، يجب استبداله بكبل خاص أو تركيبه بواسطة المصنع أو وكيله المعتمد.

جذب خطر جدا

البراد الفارع قد يكون جذاب بشكل خطر بالنسبة للأطفال. أزل الحشيات، السقاطات، الأغشية من على الباب بأكمله من على الجهاز الغير مستخدم، أو اتخذ أي إجراء آخر بحيث يصبح غير مؤذ.

التهوية

احتفظ بفتحات التهوية في البراد بدون عوائق.

إزالة الصقيع

لا تستعمل أجهزة ميكانيكية أو وسائل أخرى لتعجيل عملية إزالة الصقيع، بخلاف الموصى بها بواسطة المصنع.

الأجهزة المستخدمة بالداخل

لا تستخدم أجهزة كهربائية بداخل قسم تخزين الطعام، إلا إذا كانوا من الأنواع التي يوصى بها المصنع.

التخلص من النلاحة:

لا يجب التخلص من النلاحة بإحراقها إذ أن غاز العزل شديد الاشتعال. للحفاظ على أعلى درجات السلامة، يمكنك التخلص منها بتسليمها لإحدى المنشآت المتخصصة في التخلص من النفايات والمصرح لها بذلك.

قبل الاتصال بمركز الخدمة

في أحوال كثيرة يمكن تجنب الاتصال بمركز الخدمة!
إذا شعرت أن البراد لا يعمل بشكل سليم، افحص أولاً الأسباب المحتملة التالية:


المشكلة	الأسباب المحتملة
جهاز التبريد (البراد) لا يعمل	- احتراق صمام مكان التثبيت أو فصل قاطع الدائرة؟ - رفع أو ثققل قابس الطاقة من مخرج الكهرباء الجداري؟
زيادة كبيرة في حرارة البراد أو حجرة التجميد.	- التحكم في درجة الحرارة غير موجه على الوضع السليم. - وضع الجهاز على مقربة كبيرة من الحائط أو مصدر حراري. - جو حار - فتح متكرر للباب. - الباب غير مغلق تماماً. - ترك الباب مفتوحاً لفترة طويلة. - ملء البراد بكميات كبيرة من الأطعمة.
صوت (أصوات) غير طبيعية	- تم تركيب البراد في مكان ضعيف أو غير مستو أو احتياض يرغي (مسمار) ضبط الاستواء إلى ضبط. - وضع أشياء غير ضرورية في الجانب الخلفي من البراد.
وجود رائحة في البراد	- الأطعمة ذات الروائح النفاذة يجب تغطيتها برفق أو تغلف. - في حاجة إلى تنظيف البراد من الداخل.
تكوين ندى على سطح وحدات التخزين.	- أمر معتاد خلال فترات الرطوبة العالية. - احتمال ترك الباب مفتوح جزئياً.

CIRCUIT DIAGRAM

MODEL :

GR-242QP
GR-272QP
GR-T302QM
GR-T332QM


Voltage / Frequency:- 220V~60Hz

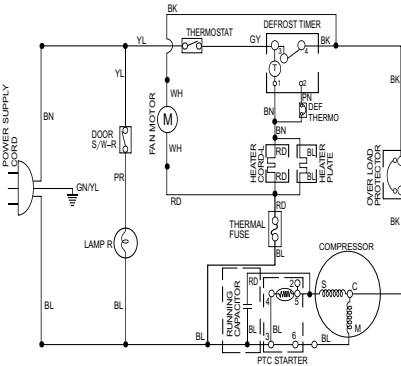

MODEL :

GR-242QP
GR-272QP
GR-T302QM
GR-T332QM

Voltage / Frequency:- 127V~60Hz

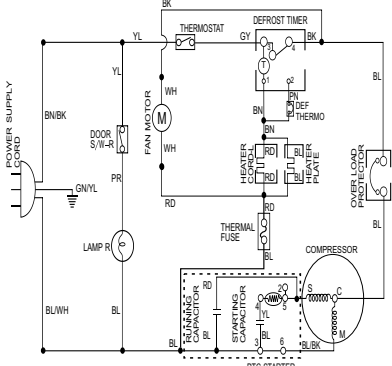

المواصفات

GR- ٢٤٢ **		رقم الطراز
(T) الإستوائي		صنف مناخ
٢٢٠ فولت	١٢٧ فولت	القطبية المقدره
٦٠-٥٠ هرتز	٦٠ هرتز	التواتر المقدر
١٢٧ واط	١٢١ واط	الزاد المقدر
٠٠٧٥ امبير	١,٢٣٢ امبير	التيار المقدر
١٠٦ واط	١٢٨ واط	الزاد المزيل
٠٠٤٨ امبير	٠,٩٩٣ امبير	التيار المزيل
١,٨ kWh ٢٤ ساعة	١,٨٥ kWh ٢٤ ساعة	إستهلاك الطاقة الكهربائية
١٥ واط		الزاد المقدر للمصباح أ:
٦٥%		النسبة المئوية للوقت الجاري
١,٩ كيلو غرام		كمية الثلج أنتجت كل 24 ساعة
١٢٠ غرام		مبرد R 134a
٤٩ كيلو غرام		مقدار الاستعمال
٢٠١ لتر		حجم الخزن المقدر
٢٢٥ لتر		السعة الإجمالية المقدره
٠,٨١٥ m ^٢		منطقة الرف المقدره
إلكترونيات إل جي		المنتج
المصنوع في الهند		بلد المنشأ
(١٥٤٠×٦٤٠×٥٤٠ مم (عرض×عمق×ارتفاع)		الأبعاد مليمتري:

GR- ٢٧٢ **		رقم الطراز
(T) الإستوائي		صنف مناخ
٢٢٠ فولت	١٢٧ فولت	القطبية المقدره
٦٠-٥٠ هرتز	٦٠ هرتز	التواتر المقدر
١٢٧ واط	١٢١ واط	الزاد المقدر
٠٠٧٥ امبير	١,٢٣٢ امبير	التيار المقدر
١٠٦ واط	١٢٨ واط	الزاد المزيل:
٠٠٤٨ امبير	٠,٩٩٣ امبير	التيار المزيل
١,٩ kWh ٢٤ ساعة	٢,٤٠ kWh ٢٤ ساعة	إستهلاك الطاقة الكهربائية
١٥ واط		الزاد المقدر للمصباح أ:
٦٥%		النسبة المئوية للوقت الجاري
١,٨ كيلو غرام		كمية الثلج أنتجت كل 24 ساعة
١٢٠ غرام		مبرد R 134a
٥١ كيلو غرام		مقدار الاستعمال
٢٢٠ لتر		حجم الخزن المقدر
٢٤٥ لتر		السعة الإجمالية المقدره
٠,٨١٥ m ^٢		منطقة الرف المقدره
إلكترونيات إل جي		المنتج
المصنوع في الهند		بلد المنشأ
(١٥٤٥×٦٤٠×٥٤٠ مم (عرض×عمق×ارتفاع)		الأبعاد مليمتري:

المواصفات

GR-T ٣٠٢**		رقم الطراز
(T) الإستوائي		صنف مناخ
٢٢٠ فولت	١٢٧ فولت	الفلطية المقدرة
٦٠-٥٠ هرتز	٦٠ هرتز	التواتر المقدر
١٢٦ واط	١٢٨ واط	الزاد المقدر
١٠,٧١ أمبير	١٠,٢٣ أمبير	التيار المقدر
١٣٣ واط	١٤٤ واط	الزاد المزيل
١٠,٥ أمبير	١٠,١٢ أمبير	التيار المزيل
١,٩ kWh ٢٤ ساعة	١,٨٨ kWh ٢٤ ساعة	إستهلاك الطاقة الكهربائية
١٥ واط		الزاد المقدر للمصباح آر:
٥٨%		النسبة المئوية للوقت الجاري
١,٤٠ كيلو غرام		كمية الثلج أنتجت كل 24 ساعة
١٢٠ غرام		ميرد R 134a
٥٤ كيلو غرام		مقدار الاستعمال
٢٤٥ لتر		حجم الخزن المقدر
٢٧٥ لتر		السعة الإجمالية المقدرة
٠,٩٣٨ m ²		منطقة الرف المقدرة
إلكترونيات إل جي		المنتج
المصنوع في الهند		بلد المنشأ
١٥٦٠×٦٤٠×٥٨٠ مم (عرض×عمق×ارتفاع)		الأبعاد ملليمتر:

GR-T ٣٣٢**		رقم الطراز
(T) الإستوائي		صنف مناخ
٢٢٠ فولت	١٢٧ فولت	الفلطية المقدرة
٦٠-٥٠ هرتز	٦٠ هرتز	التواتر المقدر
١٢٦ واط	١٢٨ واط	الزاد المقدر
١٠,٧١ أمبير	١٠,٢٣ أمبير	التيار المقدر
١٣٣ واط	١٤٤ واط	الزاد المزيل:
١٠,٥ أمبير	١٠,١٢ أمبير	التيار المزيل
٢,٠ kWh ٢٤ ساعة	١,٨٩ kWh ٢٤ ساعة	إستهلاك الطاقة الكهربائية
١٥ واط		الزاد المقدر للمصباح آر:
٦٢%		النسبة المئوية للوقت الجاري
١,٦٠ كيلو غرام		كمية الثلج أنتجت كل 24 ساعة
١٢٥ غرام		ميرد R 134a
٥٦ كيلو غرام		مقدار الاستعمال
٢٧٢ لتر		حجم الخزن المقدر
٣٠٤ لتر		السعة الإجمالية المقدرة
٠,٩٣٨ m ²		منطقة الرف المقدرة
إلكترونيات إل جي		المنتج
المصنوع في الهند		بلد المنشأ
١٦٨٠×٦٤٠×٥٨٠ مم (عرض×عمق×ارتفاع)		الأبعاد ملليمتر: