


Model	VF-4800HT VF-4801HT		
Language	+	Part No.	MFL62699403
Page	36	인쇄도수(외/내)	2/2
재 질	100g	크 기(D*W)	190*260
작성일자	2009.09.16	담당자	

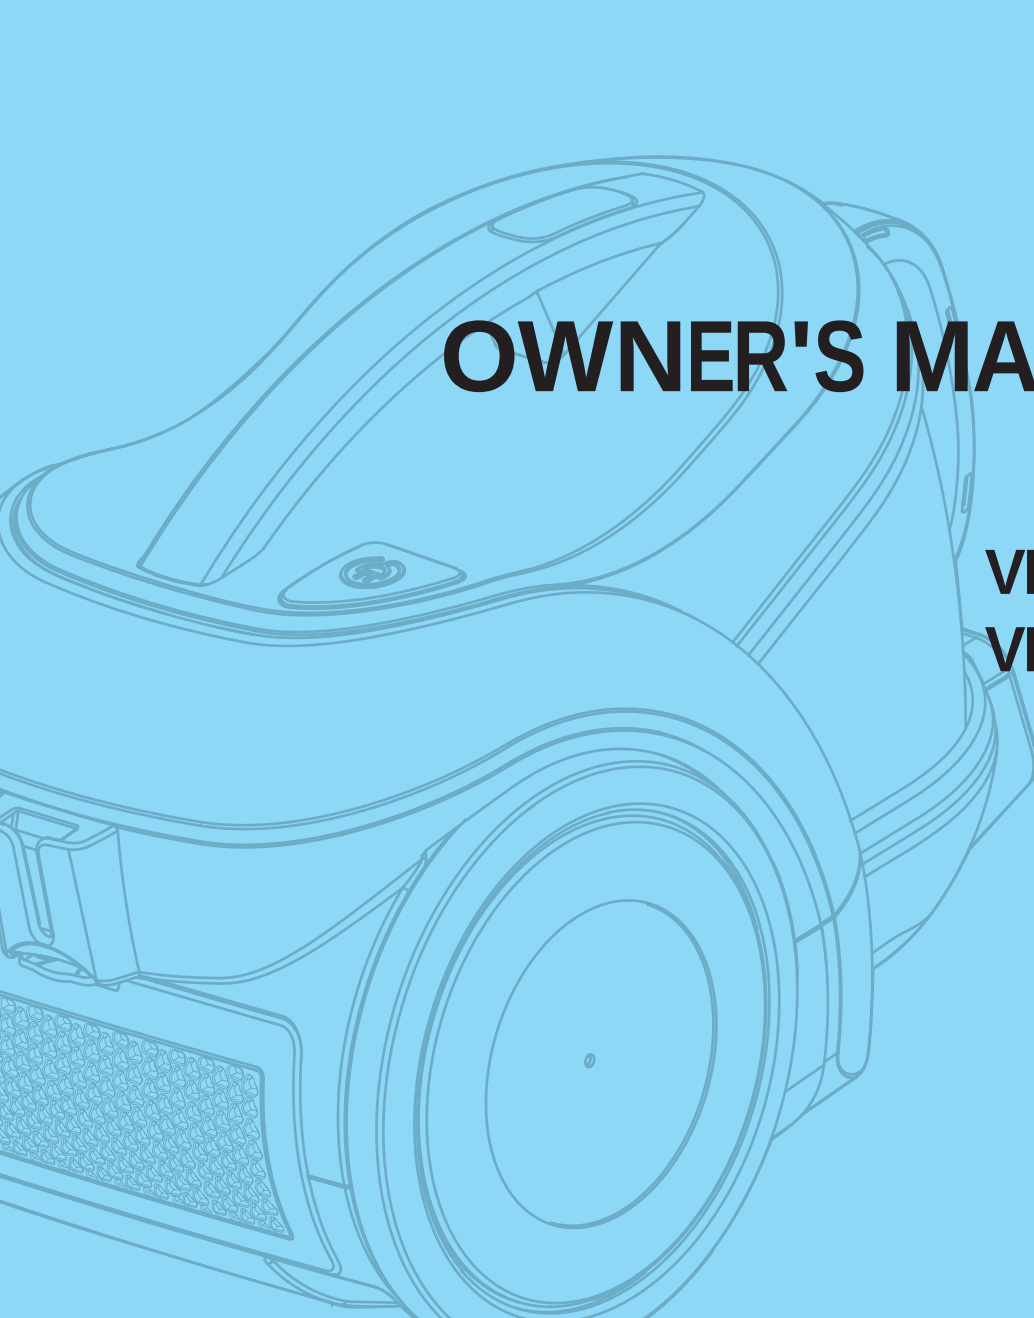

OWNER'S MANUAL

VF-4800HT

VF-4801HT

New type cyclone vacuum cleaner

This information contains important instructions for the safe use and maintenance of the vacuum cleaner. Especially, please read all of the information on page 4, 5 for your safety.
Please keep this manual in an easily accessible place and refer to it anytime.

P/No.: MFL62699403

Made in KOREA






Table of contents

Important safety instructions	4~5
How to use	6
Assembling vacuum cleaner	6
Operating vacuum cleaner	8
Using carpet and floor nozzle / all floor nozzle / Suction hole for device protection / Hard floor nozzle	9
Using all floor nozzle and mini turbine nozzle	10
User's guide for turbine nozzle	11
Using accessory nozzles	12
Emptying dust tank	13
Cleaning dust tank	14
Cleaning air filter and motor safety filter	15
Cleaning exhaust filter	16
What to do if your vacuum cleaner does not work	17
What to do when suction performance decreases	17

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire, electric shock, personal injury, or damage when using the vacuum cleaner. This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand. This appliance complies with the following EC Directives : 2006/95/EC Low Voltage Directive 2004/108/EC EMC Directive.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION."

These words mean:



WARNING

This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.



CAUTION

This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.



WARNING

- **Do not plug in if control switch is not in OFF position.**
Personal injury or product damage could result.
- **Keep children away and beware of obstructions when rewinding the cord to prevent personal injury**
The cord moves rapidly when rewinding.
- **Disconnect electrical supply before servicing or cleaning the unit or when cleaner is not in use.**
Failure to do so could result in electrical shock or personal injury.
- **Do not use vacuum cleaner to pick up anything that is burning or smoking such as cigarettes, or hot ashes.**
Doing so could result in death, fire or electrical shock.
- **Do not vacuum flammable or explosive substances such as gasoline, benzene, thinners, propane (liquids or gases).**
The fumes from these substances can create a fire hazard or explosion. Doing so could result in death or personal injury.
- **Do not handle plug or vacuum cleaner with wet hands.**
Doing so could result in death or electrical shock.
- **Do not unplug by pulling on cord.**
Doing so could result in product damage or electrical shock. To unplug, grasp the plug, not the cord.
- **Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.**
Failure to do so could result in electrical shock or personal injury.
- **Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.**
Failure to do so could result in electrical shock or personal injury or fire or product damage.
- **The hose contains electrical wires. Do not use it if it is damaged, cut or punctured.**
Failure to do so could result in death, or electrical shock.
- **Do not allow to be used as toy. Close attention is necessary when used by or near children.**
Personal injury or product damage could result.
- **Do not use the vacuum cleaner if the power cord or plug is damaged or faulty.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use vacuum cleaner if it has been under water.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not continue to vacuum if any parts appear missing or damaged.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use an extension cord with this vacuum cleaner**
Fire hazard or product damage could result.
- **Using proper voltage.**
Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the bottom of vacuum cleaner.
- **Turn off all controls before unplugging.**
Failure to do so could result in electrical shock or personal injury.
- **Do not change the plug in any way.**
Failure to do so could result in electrical shock or personal injury or product damage. Doing so result in death. If plug does not fit, contact a qualified electrician to install the proper outlet.
- **Repairs to electrical appliances may only be performed by qualified service engineers.**
Improper repairs may lead to serious hazards for the user.

IMPORTANT SAFETY INSTRUCTIONS


CAUTION

- **Do not put any objects into openings.**
Failure to do so could result in product damage.
- **Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.**
Failure to do so could result in product damage.
- **Do not use vacuum cleaner without dust tank and/or filters in place.**
Failure to do so could result in product damage.
- **Always clean the dust bin after vacuuming carpet cleaners or fresheners, powders and fine dust.**
These products clog the filters, reduce airflow and can cause damage to the cleaner. Failure to clean the dust bin could cause permanent damage to the cleaner.
- **Do not use vacuum cleaner to pick up sharp hard objects, small toys, pins, paper clips, etc.**
They may damage the cleaner or dust bin.
- **Store the vacuum cleaner indoors.**
Put the vacuum cleaner away after use to prevent tripping over it.
- **The vacuum cleaner is not intended to use by young children or infirm people without supervision.**
Failure to do so could result in personal injury or product damage.
- **Only use parts produced or recommended by LG Electronics Service Agents.**
Failure to do so could result in product damage.
- **Use only as described in this manual. Use only with LG recommended or approved attachments and accessories.**
Failure to do so could result in personal injury or product damage.
- **To avoid personal injury and to prevent the machine from falling when cleaning stairs, always place it at the bottom of stairs.**
Failure to do so could result in personal injury or product damage.
- **Use accessory nozzles in "MIN" mode.**
Failure to do so could result in product damage.
- **Don't grasp the tank handle when you are moving the vacuum cleaner.**
The vacuum cleaner's body may fall when separating tank and body. Personal injury or product damage could result. **You should grasp the carrier handle** when you are moving the vacuum cleaner.
- **If after emptying the dust tank the indicator light is on (red), clean the dust tank.**
Failure to do so could result in product damage.
- **Make sure the filters (exhaust filter and motor safety filter) are completely dry before replacing in the machine.**
Failure to do so could result in product damage.
- **Do not dry the filter in an oven or microwave.**
Failure to do so could result in fire hazard.
- **Do not dry the filter in a clothes dryer.**
Failure to do so could result in fire hazard.
- **Do not dry near an open flame.**
Failure to do so could result in fire hazard.
- **If the power cord is damaged, it must be replaced by an approved LG Electronics Service Agent to avoid a hazard.**
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
Children should be supervised to ensure that they do not play with the appliance.

Thermal protector :

This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. If the vacuum cleaner suddenly shuts off, turn off the switch and unplug the vacuum cleaner. Check the vacuum cleaner for possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum cleaner. After the 30 minute period, plug the vacuum cleaner back in and turn on the switch. If the vacuum cleaner still does not run, contact a qualified electrician.

How to use Assembling vacuum cleaner

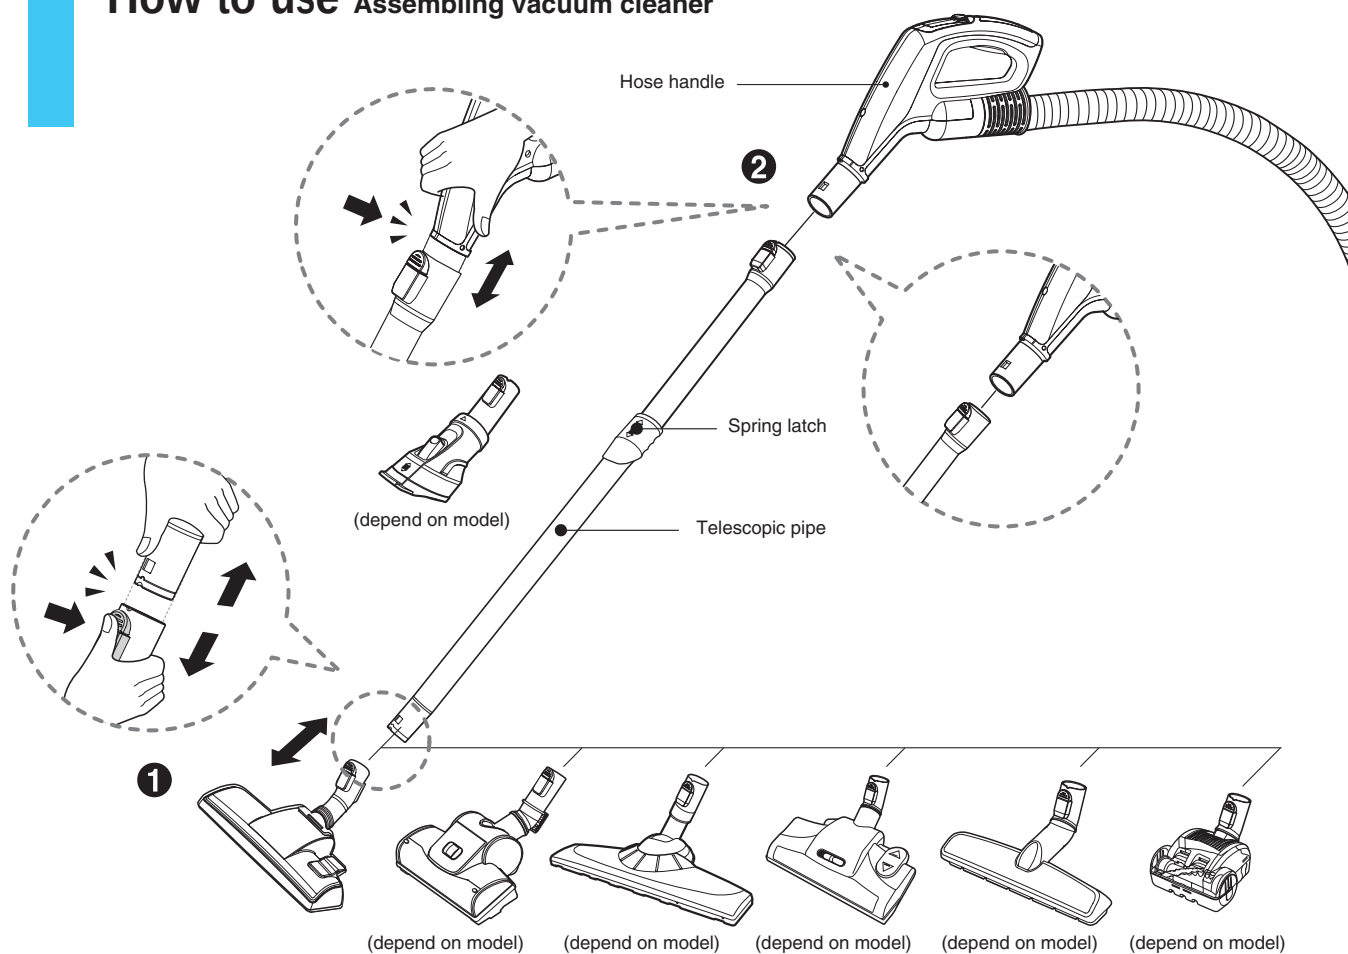


1 Carpet and floor nozzle

Push the nozzle into the telescopic pipe.

2 Telescopic pipe




- Push telescopic pipe firmly into hose handle.
- Grasp the spring latch to expand.
- Pull out the pipe to desired length.

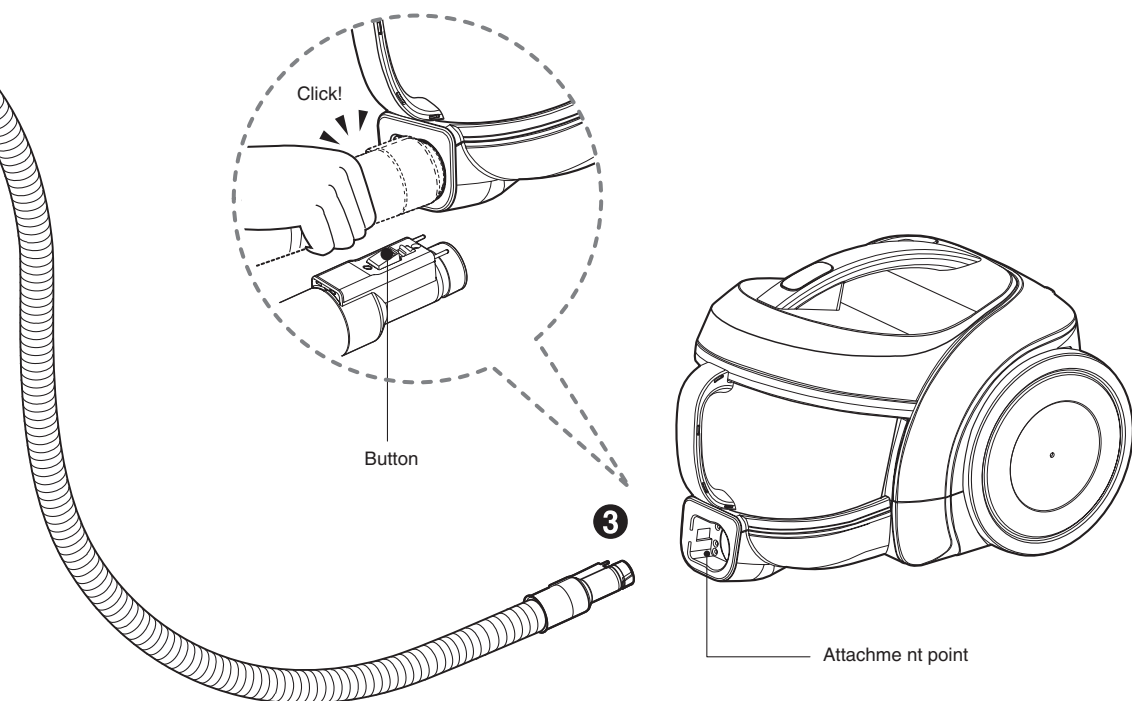

3 Connecting the hose to the vacuum cleaner

Push the fitting pipe on the flexible hose into the attachment point on the vacuum cleaner. To remove the flexible hose from the vacuum cleaner, press the button situated on the fitting pipe, then pull the fitting pipe out of the vacuum cleaner.

How to use Operating vacuum cleaner

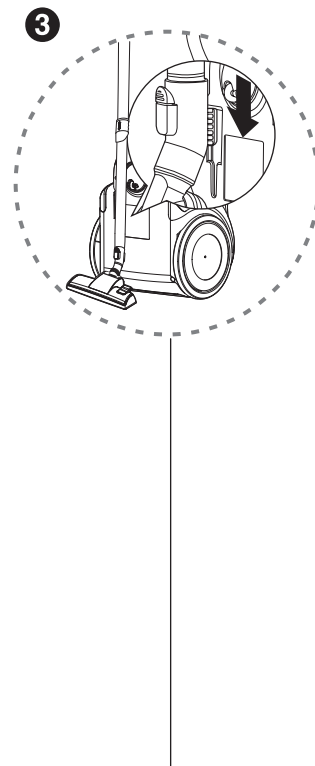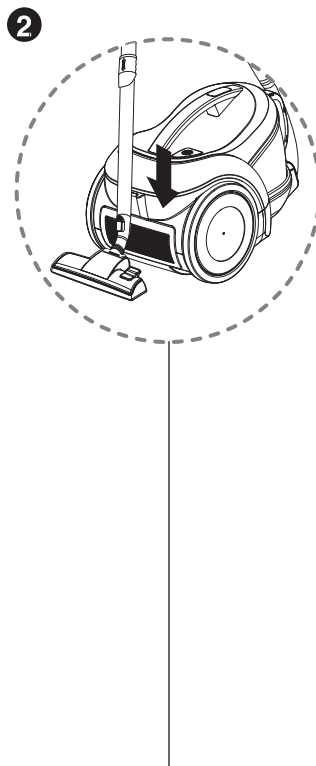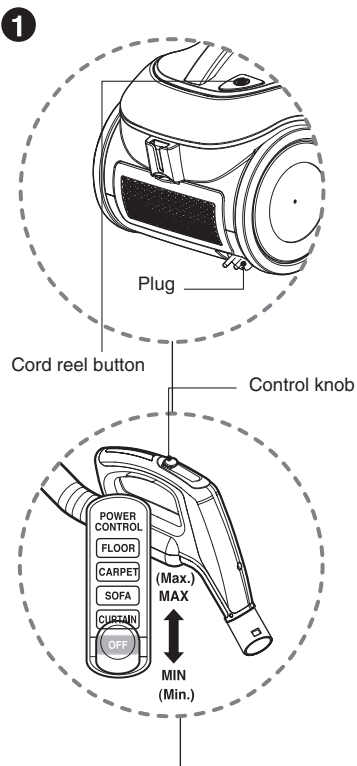

1 How to operate

- Pull out the power cord to the desired length and plug into the socket.
- Place the control knob of the hose handle to the required position.
- To turn off, slide control knob to OFF position.
- Press the cord reel button to rewind the power cord after use.

2 Park mode


- To store during vacuuming, for example to move a small piece of furniture or a rug, use park mode to support the flexible hose and nozzle.
 - Slide the hook on the nozzle into the slot on the side of vacuum cleaner.

3 Storage

- When you have switched off and unplugged the vacuum cleaner, press the cord reel button to automatically rewind the cord.
- You can store your vacuum cleaner in a vertical position by sliding the hook on the nozzle into the slot on the underside of the vacuum cleaner.

How to use

Using carpet and floor nozzle / all floor nozzle / Suction hole for device protection / Hard floor nozzle

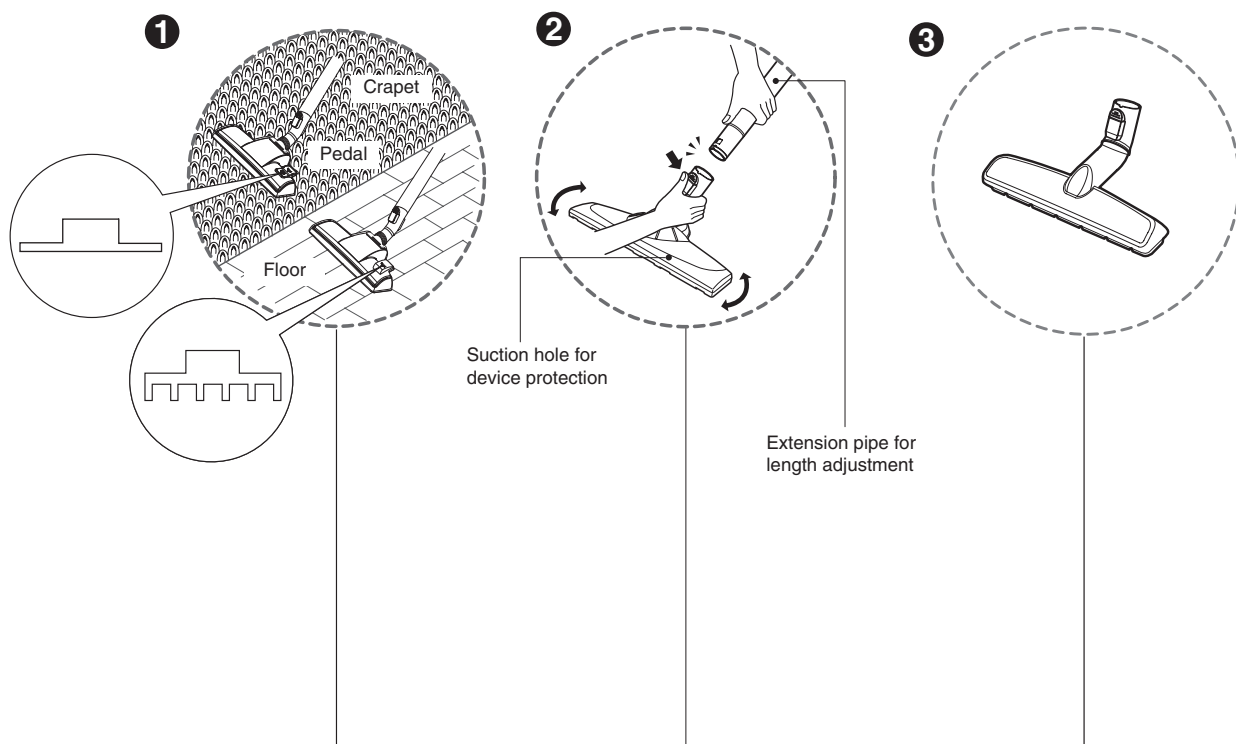

1 Carpet and floor nozzle


- **The 2 position nozzle**
This is equipped with a pedal which allows you to alter its position according to the type of floor to be cleaned.
- **Carpet or rug position**
press the pedal to lift the brush up.
- **Hard floor position** (tiles, parquets floor)
press the pedal to lower brush.

2 Suction hole for device protection (depend on model) 3 Hard floor nozzle (depend on model)

You can perform cleaning at any place like corner or crevice since revolution of the suction hole is free.


- Efficient cleaning of hard floors (wood, linoleum, etc)

How to use Using all floor nozzle and mini turbine nozzle

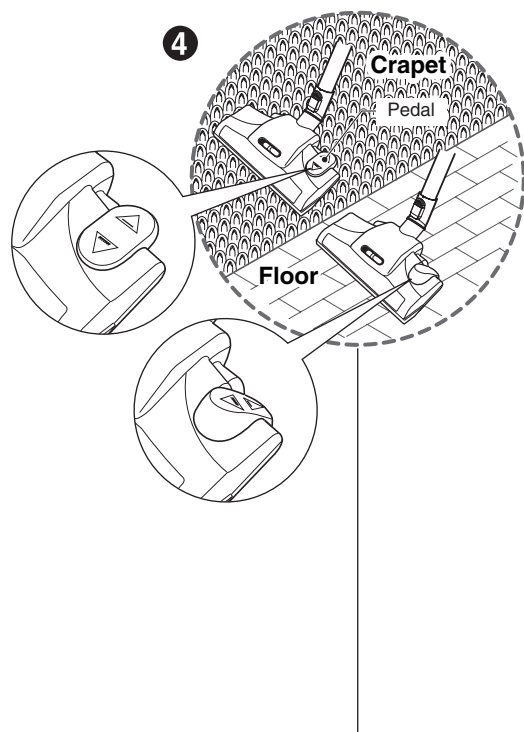

4 All floor nozzle (depend on model)


- **The 2 position nozzle**
This is equipped with a pedal which allows you to alter its position according to the type of floor to be cleaned.
- **Carpet or rug position**
Press the pedal (), then brush is will rotate.
- **Hard floor position**
Press the pedal (), then brush will stop rotating.

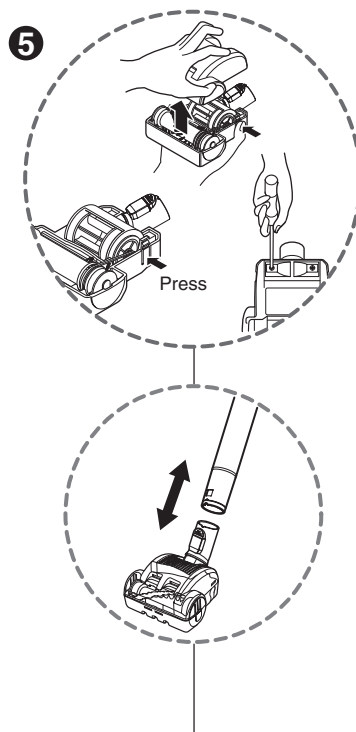

5 Mini turbine nozzle (depend on model)


- Mini turbine is used for stairs and other hard to reach places.
- To clean the mini turbine nozzle, remove the nozzle cover :
Remove 2 screws on the bottom and take mini turbine nozzle cover off as shown.
- Frequently clean and remove hair, string, and lint build-up in the brush area. Failure to do so could damage to mini turbine nozzle.

Cleaning all floor nozzle

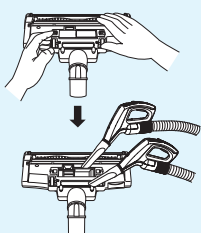

- Open the cover by pulling the hook.
- Clean the hole and brush of the nozzle.

How to use User's guide for turbine nozzle

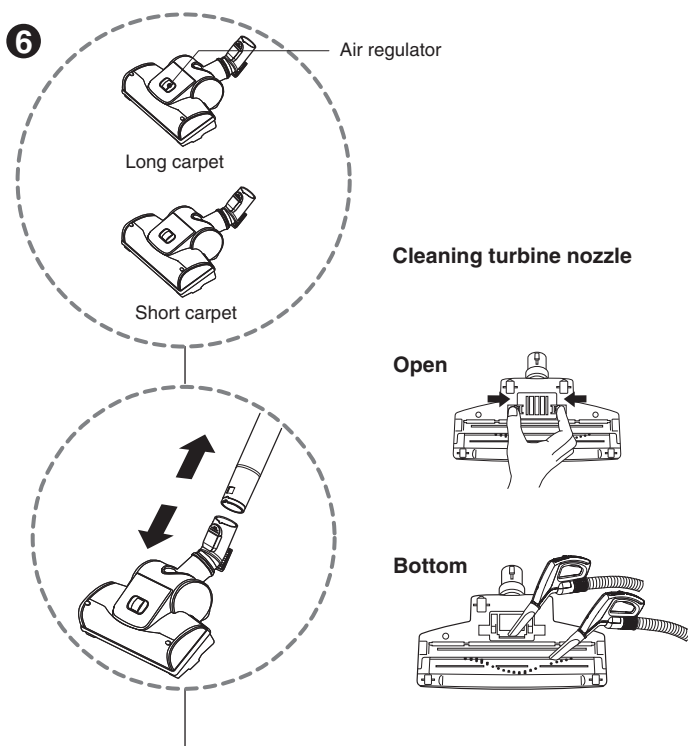


6 Turbine nozzle (depend on model)


- **Cleaning turbine brush nozzle.**
- Press the button on the rear side of the nozzle to separate the air cover.
- Use the dusting brush & crevice tool to vacuum clean the brush and fan.

How to use Using accessory nozzles


Upholstery nozzle
(depend on model)

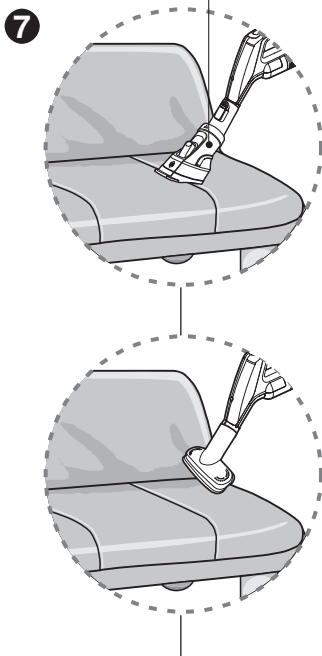

Dusting brush
(depend on model)

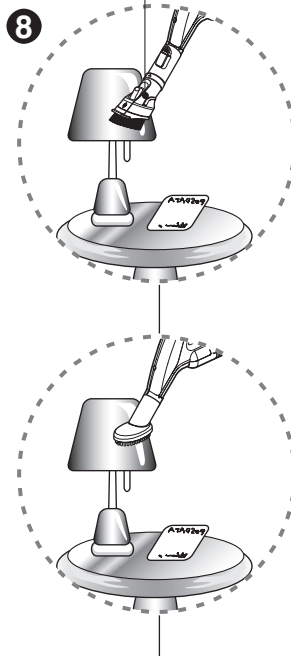

Crevice tool

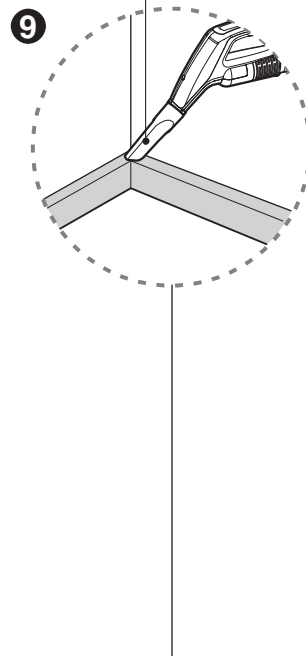

7 Upholstery nozzle



Upholstery nozzle is for vacuuming upholstery, mattresses, etc.

8 Dusting brush

Dusting brush is for vacuuming picture frames, furniture frames, books and other irregular surfaces.



9 Crevice tool

Crevice tool is for vacuuming in those normally hard-to-reach places such as reaching cobwebs, or between the cushions of a sofa.

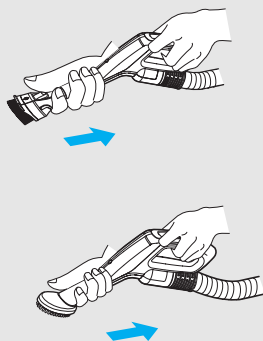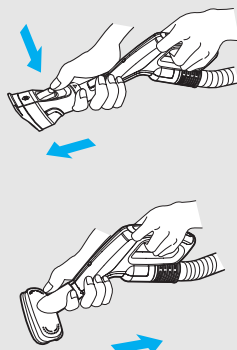


NOTICE

Use accessory in the sofa mode

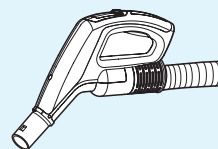

How to use Emptying dust tank

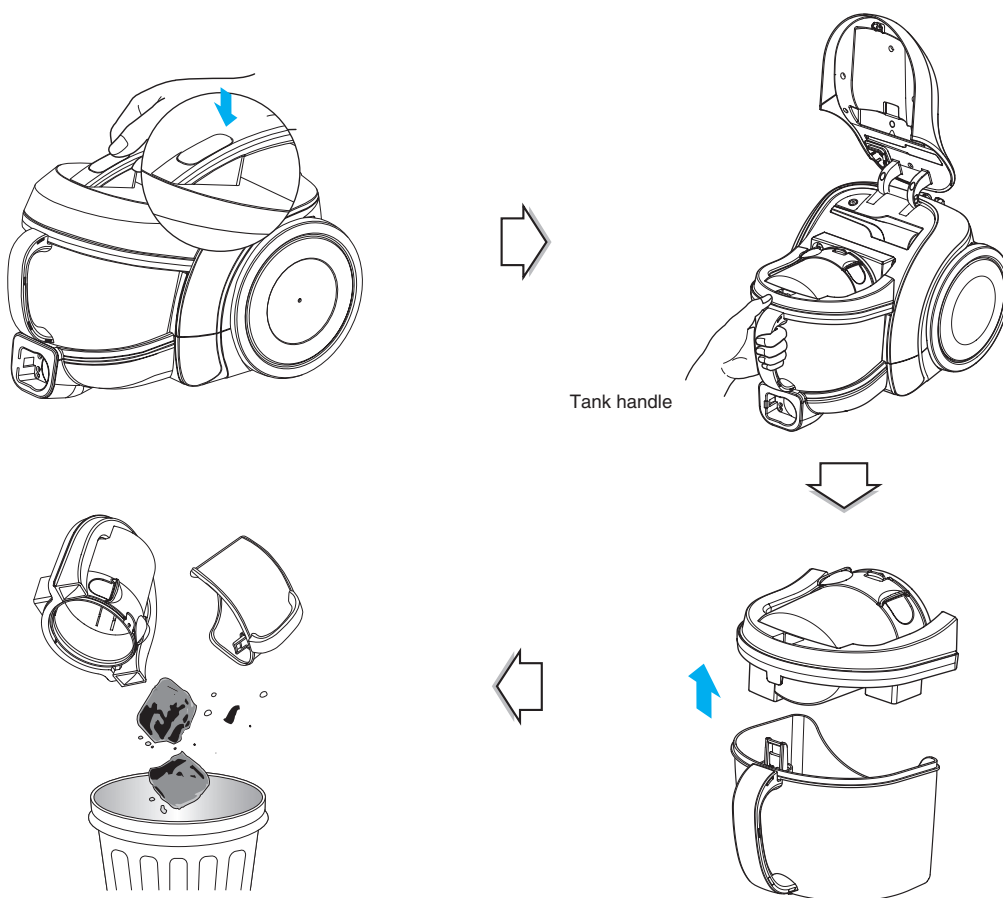

Cleaning the dust "tank"

- Open the tank cap.
 - Wash both parts with soft material.
- Gently rinse both parts under a cold running tap.

WARNING!


Gently rinse both parts separately under a cold running tap until the water runs clear.

Do not use detergent or a washing machine or dishwasher.

- Place the control knob of rear cover to the required position.

Caution: Do not push the cover open button when you carry the vacuum cleaner.
If the cover opens, it is easy to detach the dust tank from the vacuum cleaner.

How to use Cleaning dust tank

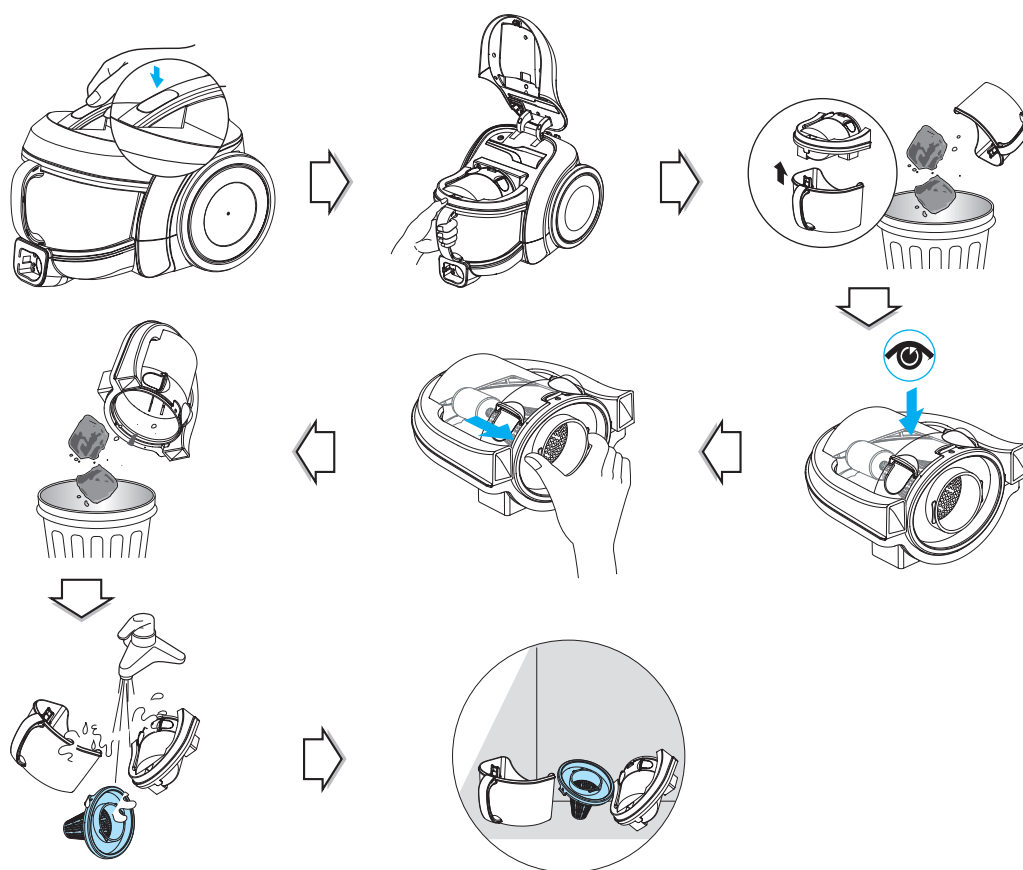


- Open cover with pushing button and pull out dust tank.
- Raise dust tank cap
- Dry fully in shade so that moisture is entirely removed.

NOTICE

If suction power decreases after cleaning dust tank, clean air filter and motor safety filter. ➔ Next page

How to use Cleaning air filter and motor safety filter

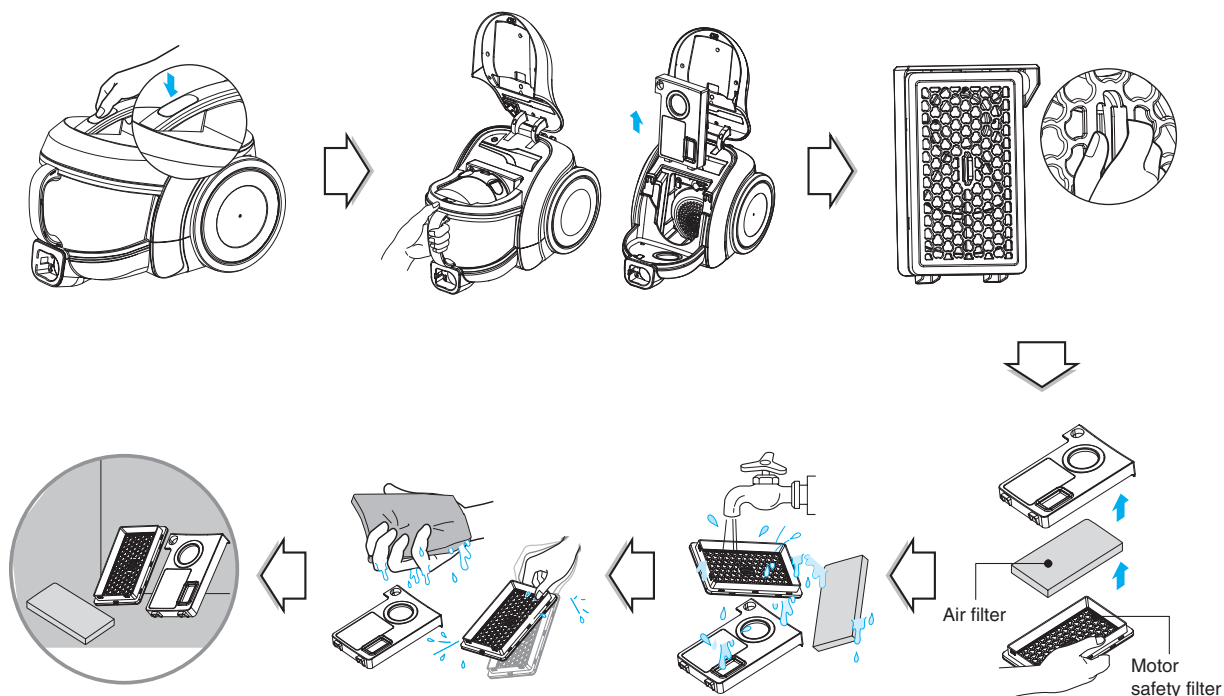


If suction power is decreased after cleaning dust tank, clean air filter and motor safety filter. Air filter and motor safety filter are located at the center of vacuum cleaner in the above figure.

- Open the air filter cover by pulling the air filter cover lever and take out air filter.
- Separate the parts
- Wash air filter and motor safety filter with water.
- Do not wash filters with hot water.
- Dry fully in shade so that moisture is entirely removed.
- Air filter and motor safety filter should be cleaned in the above case.

NOTICE

If filters are damaged, do not use them.
In this cases, contact LG Electronics Service Agent.

How to use Cleaning exhaust filter

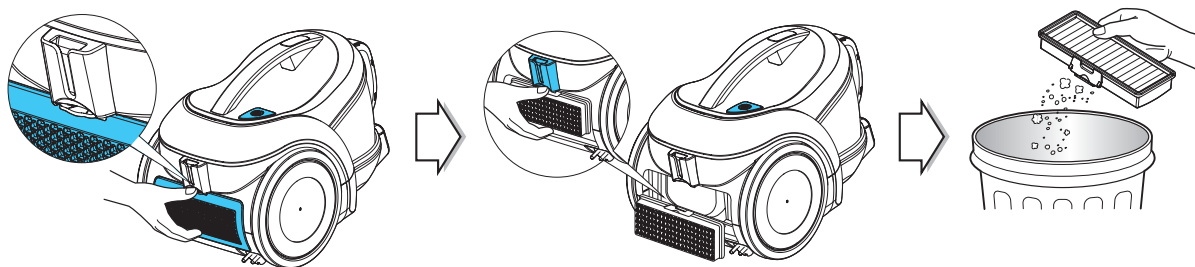

- The exhaust filter is a reusable HEPA filter.
- To change the exhaust filter, remove the filter cover on the body by release hook.
- Pull out the exhaust filter.
- Dust off filter.(Do not wash filter with water.)
- The exhaust filter should be cleaned at least once a year.

What to do if your vacuum cleaner does not work

Check that the vacuum cleaner is plugged in correctly and that the electrical socket is working.

What to do when suction performance decreases

- Turn off the vacuum cleaner and unplug it.
- Check the telescopic pipe, flexible hose and cleaning tool for blockages or obstructions.
- Check that the dust tank is not full. Empty if necessary.
- Check that the exhaust filter is not clogged. Clean the exhaust filter if necessary.
- Check that the air filter is not clogged. Clean the air filter if necessary.

Note



دفترچه راهنمای کاربر

VF-4800HT

VF-4801HT

نوع جدید جاروبرقی گردبادی

لطفا پیش از استفاده از دستگاه همه اطلاعاتی را که در این دفترچه آمده است، به دقت مطالعه کنید، زیرا دربرگیرنده نکات مهمی درباره ایمنی شما و فرزندانتان و سالم ماندن دستگاه است. به ویژه همه نکات صفحه های 4 و 5 را برای ایمنی خود بخوانید. لطفا دفترچه راهنما را در دسترس بگذارید تا در هر زمان لازم به آن مراجعه کنید.



شماره فنی: MFL62699403

ساخت کره

5-4	 دستورالعمل های مهم ایمنی
6	 روش کاربُرد
6	 روش سر هم کردن جاروبرقی
8	 روش کار کردن با جاروبرقی
9	 استفاده از کله گی فرش و کف / سوراخ مکش برای محافظت از دستگاه / سری تمیزکننده سطوح سخت
10	 استفاده از کله گی عمومی و کله گی دارای چرخاننده کوچک
11	 راهنمای کاربر درباره کله گی
12	 استفاده از کله گی های الحاقی
13	 خالی کردن محفظه زباله
14	 تمیز کردن محفظه زباله
15	 تمیز کردن فیلتر هوا و فیلتر ایمنی موتور
16	 تمیز کردن فیلتر خروجی
17	 اگر جاروبرقی کار نکرد، چه کار باید کرد؟
17	 اگر قدرت مکش جاروبرقی کم شد، چه کار باید کرد؟

دستورالعمل های مهم ایمنی

بمنظور جلوگیری از خطرات آتش سوزی، برق گرفتگی، بروز جراحت و یا آسیب دیدگی دستگاه جارو برقی در هنگام استفاده، این راهنما را قبل از مورد استفاده قرار دادن دستگاه، مطالعه و دستورالعمل های آن را مورد دقت قرار دهید. این راهنما مسلمان کلیه وضعیت هایی که ممکن است پیش آید را نمی تواند پوشش دهد. همیشه در برخورد با ایراداتی که در مورد آنها آگاهی ندارید، با نماینده سرویس و یا کارخانه سازنده تماس حاصل بفرمائید. این دستگاه با استانداردهای اتحادیه اروپا بشرح زیر مطابقت دارد: استاندارد ایی سی / 2006/95 و ولتاژ پایین استاندارد ایی ام سی، ایی سی / 2004/108.

این سمبل نشاندهنده هشدار ایمنی می باشد.
این سمبل به شما در خصوص خطرات احتمالی که منجر به مرگ یا جراحت شما و دیگران می گردند، هشدار می دهد.
پس از کلیه پیام های ایمنی، نشانه های هشدار ایمنی و یا کلمات "هشدار" و یا "احتیاط" خواهند آمد.
معنای این کلمات بدین شرح می باشند:



هشدار



این سمبل مواردی را به شما خبر می دهند که انجام آن ها خطرناک و غیر ایمن بوده و می توانند منجر به بروز سوانح جدی بدنی و یا حتی مرگ گردند.

احتیاط



این سمبل مواردی را به شما خبر می دهند که انجام آن ها خطرناک و غیر ایمن بوده و می توانند منجر به بروز جراحات بدنی و یا آسیب دیدگی دستگاه گردند.

هشدار



- در زمانی که دکمه کنترل بروی حالت خاموش قرار ندارد، دو شاخه دستگاه را به پریز برق وصل ننمائید.
- در این حالت بروز جراحت به اشخاص و یا آسیب دیدگی دستگاه متصور است.
- بمنظور جلوگیری از بروز جراحات بر افراد، در هنگام جمع کردن کابل برق به موانع موجود توجه داشته باشید و در عین حال کودکان را از دستگاه دور نگه دارید.
- حرکت کابل در هنگام جمع شدن سریع است.
- در زمانی که از دستگاه جارو برقی استفاده نمی نمائید و یا در هنگام سرویس و تمیز کاری آن، دو شاخه را از پریز برق خارج فرمائید.
- عدم انجام چنین کاری باعث بروز برق گرفتگی و یا جراحت افراد خواهد شد.
- از دستگاه جارو برقی برای مکش و برداشتن مواد در حال اشتعال و یا دود زا همانند سیگار روشن و یا خاکستر داغ استفاده نفرمائید.
- انجام چنین کاری احتمال خطر مرگ، آتش سوزی و یا برق گرفتگی را به همراه خواهد داشت.
- از مکش مواد اشتعال زا و یا قابل انفجار همانند گازوئیل، بنزین، تینر پروپان (بصورت مایع و یا گاز) خود داری بفرمائید.
- بخار حاصل از این مواد قابلیت ایجاد خطر آتش سوزی و یا انفجار را دارا می باشد.
- انجام چنین عملی امکان بروز مرگ و یا جراحت افراد را به همراه خواهد داشت.
- از تماس دستان خیس با دو شاخه یا بدنه دستگاه جارو برقی پرهیز فرمائید.
- انجام چنین کاری احتمال خطر مرگ و یا برق گرفتگی را به همراه خواهد داشت.
- از خارج کردن دو شاخه از پریز بوسیله کشیدن سیم، خودداری شود.
- انجام چنین کاری احتمال آسیب دیدگی دستگاه و یا برق گرفتگی را به همراه خواهد داشت.
- جهت خارج کردن دو شاخه، خود آن و نه سیم را، محکم بگیرید.
- مو، لباس گشاد، انگشتان دست و کلیه قسمت های بدن را از منافذ و اجزای متحرک دستگاه دور نگاه دارید.
- عدم رعایت انجام چنین کاری احتمال برق گرفتگی و یا جراحات فردی را به همراه خواهد داشت.
- از کشیدن یا حمل دستگاه بوسیله سیم آن و یا استفاده از سیم بعنوان دسته خودداری شود. همچنین از بستن درب بروی سیم و کشیده شدن سیم بروی لبه ها و گوشه های تیز پرهیز گردد.
- از حرکت دادن دستگاه جارو برقی بروی سیم آن خود داری شود.
- سیم را از سطوح داغ دور نگه دارید.
- عدم رعایت انجام چنین کاری احتمال برق گرفتگی و یا جراحات فردی همچنین آتش سوزی و خرابی دستگاه را به همراه خواهد داشت.
- لوله کابل حاوی سیم های برق می باشد. در هنگام آسیب دیدگی، بریدگی و یا سوراخ شدن آن، از استفاده بپرهیزید.
- عدم رعایت انجام چنین کاری احتمال مرگ و یا برق گرفتگی را به همراه خواهد داشت.
- اجازه ندهید که از دستگاه بعنوان بازیچه استفاده شود.
- در هنگامیکه از دستگاه در نزدیکی کودکان استفاده می کنید، توجه دقیق لازم است.
- حاصل این عمل جراحات فردی و یا آسیب دیدگی دستگاه خواهد بود.
- در صورت خرابی و یا آسیب دیدگی سیم برق و یا دو شاخه، از دستگاه جارو برقی استفاده نفرمائید.
- حاصل این عمل جراحات فردی و یا آسیب دیدگی دستگاه خواهد بود.
- در این موارد، بمنظور جلوگیری از خطر با نماینده سرویس شرکت ال جی الکترونیکس تماس حاصل بفرمائید.
- در صورتیکه روی دستگاه آب ریخته باشد، از آن استفاده نکنید.
- حاصل این عمل جراحات فردی و یا آسیب دیدگی دستگاه خواهد بود.
- در این موارد، بمنظور جلوگیری از خطر با نماینده سرویس شرکت ال جی الکترونیکس تماس حاصل بفرمائید.
- در صورتیکه بنظر میرسد هر کدام از قطعات دستگاه معیوب و یا معیوب است، از آن استفاده ننمائید.
- حاصل این عمل جراحات فردی و یا آسیب دیدگی دستگاه خواهد بود.
- در این موارد، بمنظور جلوگیری از خطر با نماینده سرویس شرکت ال جی الکترونیکس تماس حاصل بفرمائید.
- در موقع کار کردن با دستگاه جارو برقی، از سیم رابط استفاده ننمائید.
- حاصل این عمل احتمال آتش سوزی و یا آسیب دیدگی دستگاه خواهد بود.
- از ولتاژ مناسب استفاده شود.
- استفاده از ولتاژ نامناسب باعث خرابی موتور و امکان بروز جراحت برای فرد مصرف کننده خواهد بود. نوع ولتاژ مناسب در قسمت کف دستگاه جارو برقی درج شده است.
- قبل از خارج کردن دو شاخه از پریز، کلیه کنترل ها را در وضعیت خاموش قرار دهید.
- عدم رعایت انجام چنین کاری احتمال برق گرفتگی و یا جراحت فردی را به همراه خواهد داشت.
- بهیچ وجه دو شاخه دستگاه را عوض نکنید.
- عدم رعایت انجام چنین کاری احتمال برق گرفتگی و یا جراحت فردی و یا آسیب دیدگی دستگاه را به همراه خواهد داشت. انجام این کار خطر مرگ را به همراه دارد. چنانچه نوع دو شاخه، مناسب پریز شما نیست، از یک متخصص برقکار مجرب کمک بخواهید تا پریز مناسب را بر ای شما نصب کند.
- انجام امور تعمیراتی بروی دستگاه های برقی می باید صرفاً توسط مهندسین کارآمد سرویس و خدمات انجام شود.
- تعمیرات غیر اصولی منجر به بروز خطرات جدی برای مصرف کننده خواهد شد.

دستورالعمل های مهم ایمنی

⚠ احتیاط

- از فرو کردن اجسام در منافذ دستگاه خود داری کنید.
- عدم رعایت انجام چنین کاری احتمال آسیب دیدگی دستگاه را به همراه خواهد داشت.
- در هنگام انسداد هر یک از منافذ دستگاه، از استفاده از آن خود داری شود. کلیه منافذ را از وجود گرد و خاک، کرک پارچه و هر آنچه که مانع جریان هوا میشود، پاک نگاه دارید.
- عدم رعایت انجام چنین کاری احتمال آسیب دیدگی دستگاه را به همراه خواهد داشت.
- از استفاده دستگاه در زمان عدم وجود محفظه آشفال و / یا فیلتر ها در جای خود، پرهیز شود.
- عدم رعایت انجام چنین کاری احتمال آسیب دیدگی دستگاه را به همراه خواهد داشت.
- همیشه پس از جaro کردن مواد تمیز کننده فرش، نرم کننده ها، پودر ها و گرد و غبار، محفظه آشفال دستگاه را تمیز کنید.
- وجود این مواد باعث گرفتگی فیلتر ها شده و جریان هوا را کاهش میدهد که متقابلاً باعث خرابی دستگاه جaro برقی می گردد. عدم تمیز کاری محفظه آشفال نیز می تواند آسیب های جبران ناپذیری را به دستگاه وارد نماید.
- از دستگاه جaro برقی جهت مکش اشیاء تیز و سخت، اسباب بازی های کوچک، سنجاق، گیره های کاغذ و امثالهم استفاده نکنید.
- وجود این اشیاء باعث خرابی دستگاه جaro برقی و یا محفظه آشفال می گردد.
- دستگاه جaro برقی را در مکان مسقف نگه داری نمائید.
- بمنظور جلوگیری از افتادن بروی دستگاه، آن را پس از استفاده در مکانی بدور از رفت و آمد قرار دهید.
- طراحی کاربرد این دستگاه جهت استفاده کودکان و یا افراد معلول بدون نظارت افراد عادی، نمی باشد.
- عدم رعایت انجام چنین موردی، احتمال بروز جراحت شخصی و یا آسیب دیدگی دستگاه را به همراه خواهد داشت.
- فقط قطعات تولیدی توسط شرکت ال جی الکترونیکس و یا توصیه شده نمایندگان سرویس آن شرکت را مورد بهره برداری قرار دهید.
- عدم رعایت انجام چنین موردی، احتمال آسیب دیدگی دستگاه را به همراه خواهد داشت.
- دستگاه جaro برقی را تنها بر اساس نکات ذکر شده در این دفترچه راهنما مورد استفاده قرار دهید. تنها از لوازم جانبی و ملزومات مورد تایید و توصیه شرکت ال جی استفاده فرمائید.
- عدم رعایت انجام چنین موردی، احتمال بروز جراحت شخصی و یا آسیب دیدگی دستگاه را به همراه خواهد داشت.
- بمنظور جلوگیری از بروز جراحات فردی و همچنین جهت پرهیز از افتادن دستگاه در هنگام جaro کشی پلکان، همیشه دستگاه را در پایین پله ها قرار دهید.
- عدم رعایت انجام چنین موردی، احتمال بروز جراحت شخصی و یا آسیب دیدگی دستگاه را به همراه خواهد داشت.

محافظ حرارتی:

این دستگاه جaro برقی دارای یک محافظ حرارتی مخصوص می باشد که دستگاه را در مواقعی که دمای موتور آن به بیش از حد مجاز برسد، محافظت می نماید.

در صورتیکه دستگاه جaro برقی بطور ناگهانی خاموش شد، دکمه را در وضعیت خاموش قرار داده و دوشاخه را از پریز برق خارج کنید.


دستگاه جaro برقی را از جهت عوامل احتمالی افزایش دمای موتور از قبیل پر بودن محفظه آشفال، انسداد لوله و یا گرفتگی فیلتر مورد بررسی قرار دهید.

در صورت وجود چنین مواردی، آن ها را برطرف نموده و پیش از استفاده مجدد از دستگاه جaro برقی، حداقل 30 دقیقه صبر نمائید.

پس از گذشت زمان 30 دقیقه ای، دو شاخه دستگاه جaro برقی را به پریز وصل نموده و دکمه آن را در وضعیت روشن قرار دهید.

چنانچه باز هم دستگاه جaro برقی کار نکرد، با یک متخصص برقکار مجرب تماس بگیرید.

روش کاربرد سر هم کردن جارو برقی

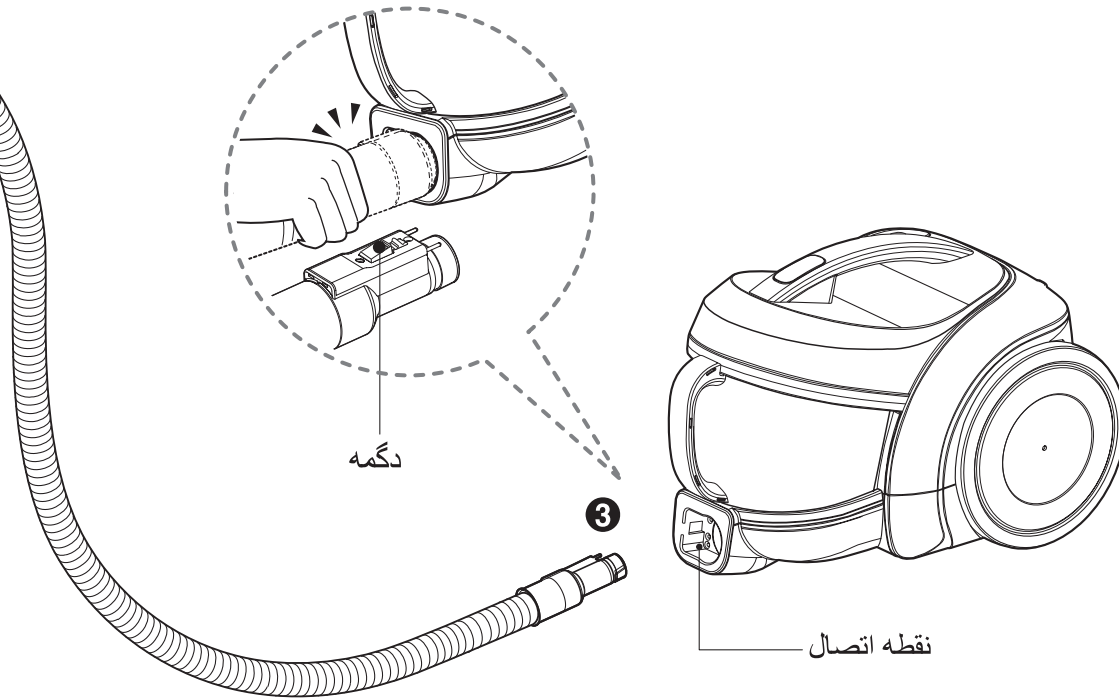


۱ کله گی فرش و کف

- کله گی را به لوله تلسکوپی فرو کنید.

۲ لوله تلسکوپی


- لوله تلسکوپی را محکم در دسته شیلنگ فرو کنید.
- گیره فنری را بکشید و نگه دارید.
- طول لوله را به اندازه دلخواه تنظیم کنید.

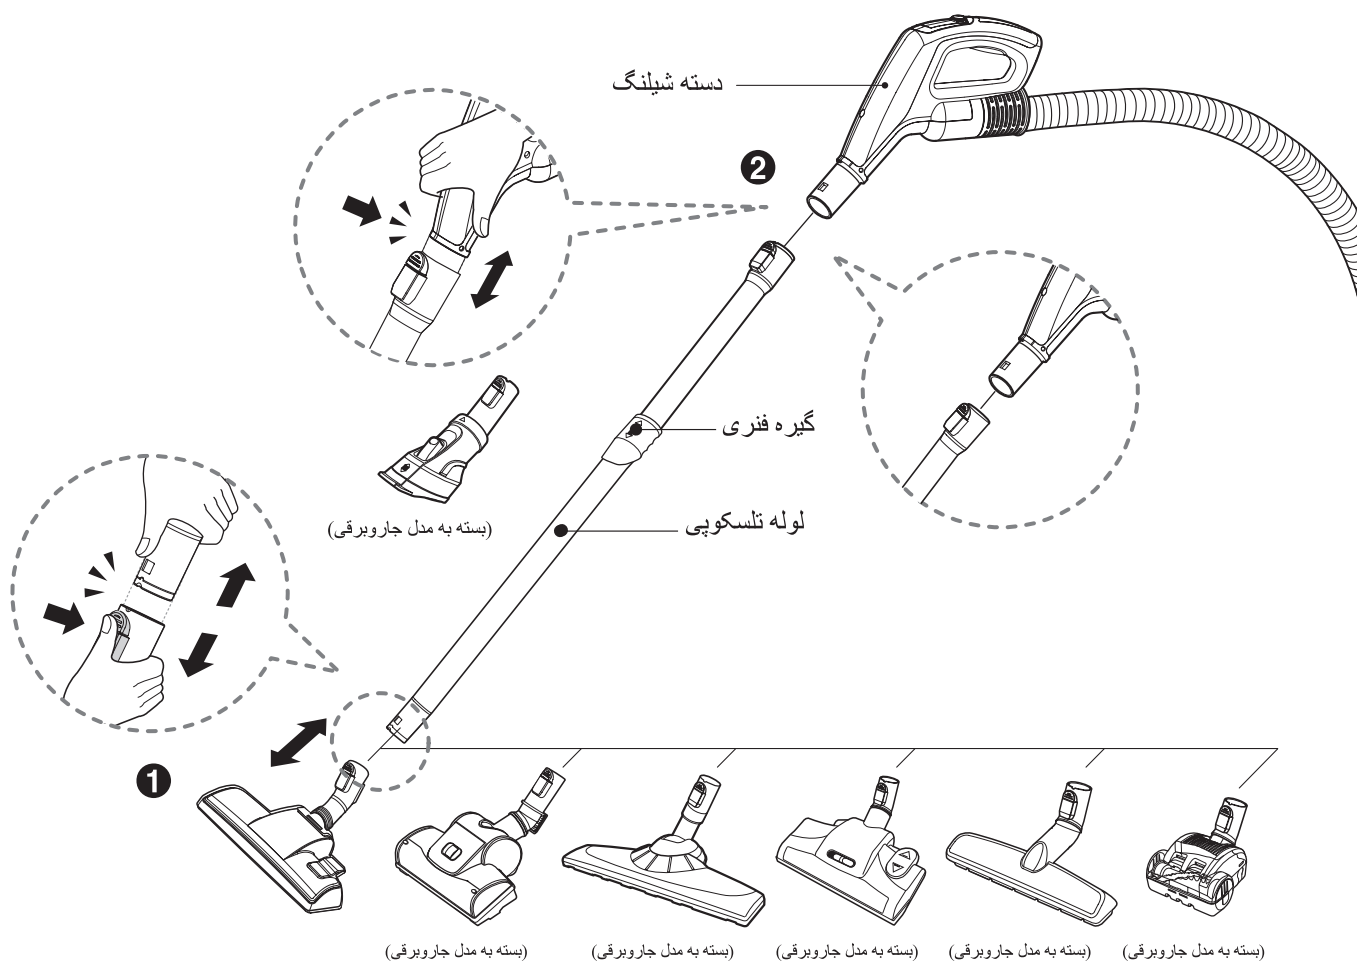

3 اتصال شیلنگ به جاروبرقی

- انتهای شیلنگ را در گلو جاروبرقی فرو کنید.
- وقتی می خواهید شیلنگ را از جاروبرقی جدا کنید، دگمه روی انتهای شیلنگ را فشار دهید و بعد شیلنگ را از گلو جاروبرقی بیرون بکشید.

روش کار بُرد روش کار با جاروبرقی

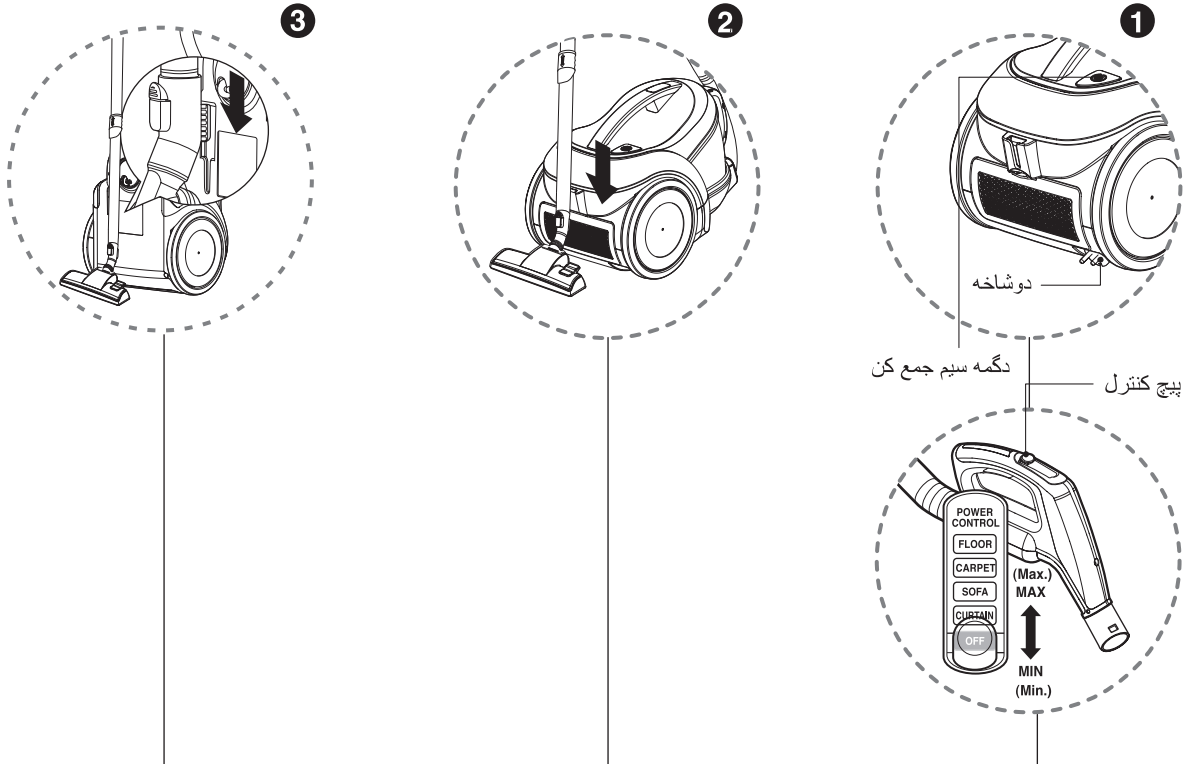


1 روش کار کردن با جاروبرقی 2 پارک کردن جاروبرقی 3 نگه داری

- سیم برق را به اندازه لازم و دلخواه بیرون بکشید و به پریز بزنید.
- پیچ کنترل پوشش در پشت دستگاه را روی حالت لازم تنظیم کنید.
- برای خاموش کردن دستگاه، پیچ کنترل را روی خاموش (OFF) تنظیم کنید.
- روی دسته شیلنگ انعطاف پذیر یک تنظیم کننده دستی قدرت مکش جارو وجود دارد که هنگام جارو کردن می توانید با آن قدرت مکش دستگاه را کم و زیاد کنید.
- پس از تمام شدن جارو گِشی دوشاخه را از پریز خارج کنید و دکمه سیم جمع کن را فشار دهید.

- برای منتظر گذاشتن جاروبرقی در حالی که روشن است (مثلاً برای برداشتن چیزی از سر راه آن) دستگاه را به اصطلاح پارک می کنیم.
- برای نگه داشتن شیلنگ انعطاف پذیر و کله گی، قلاب روی کله گی را در شکاف پهلوی جاروبرقی بلغزانید.

- وقتی جارو کشیدن را تمام و دستگاه را خاموش کردید، دکمه سیم جمع کن را فشار دهید تا سیم به طور خودکار جمع شود.
- می توانید پایه متحرک در انتهای دستگاه را بیرون بکشید و آن را به حالت عمودی بایستانید.

استفاده از کله گی فرش و کف / سوراخ مکش برای محافظت از دستگاه / سری تمیز کننده سطوح سخت

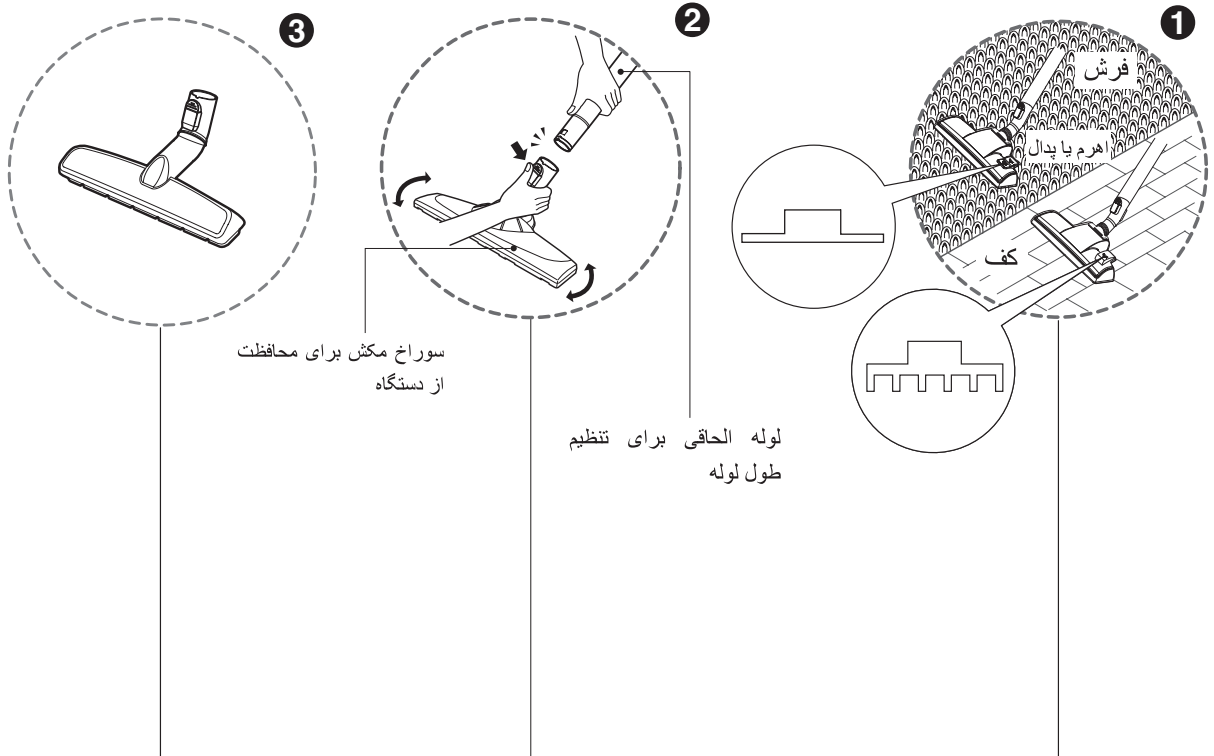

1 کله گی فرش و کف


- سر دو حالتی این کله گی مجهز به اهرمی است که به کمک آن می توانید وضعیت برس را متناسب با کفی که جارو می کنید، تغییر بدهید.
- وضعیت فرش و یا گلیم جهت بالا آمدن برس، پدال را فشار دهید.
- حالت کف سخت هر دو وضعیت اهرم مناسب است.

2 سوراخ مکش برای محافظت از دستگاه (بسته به مدل جاروبرقی)

- تا زمانی که سوراخ مکش آزادانه می چرخد، می توانید به جارو کردن هر جایی از جمله گنج ها و شکاف ها ادامه دهید.

3 سری تمیز کننده سطوح سخت (بسته به مدل جاروبرقی)

- تمیز کننده موثر سطوح سخت (چوبی، روکش دار، غیره)

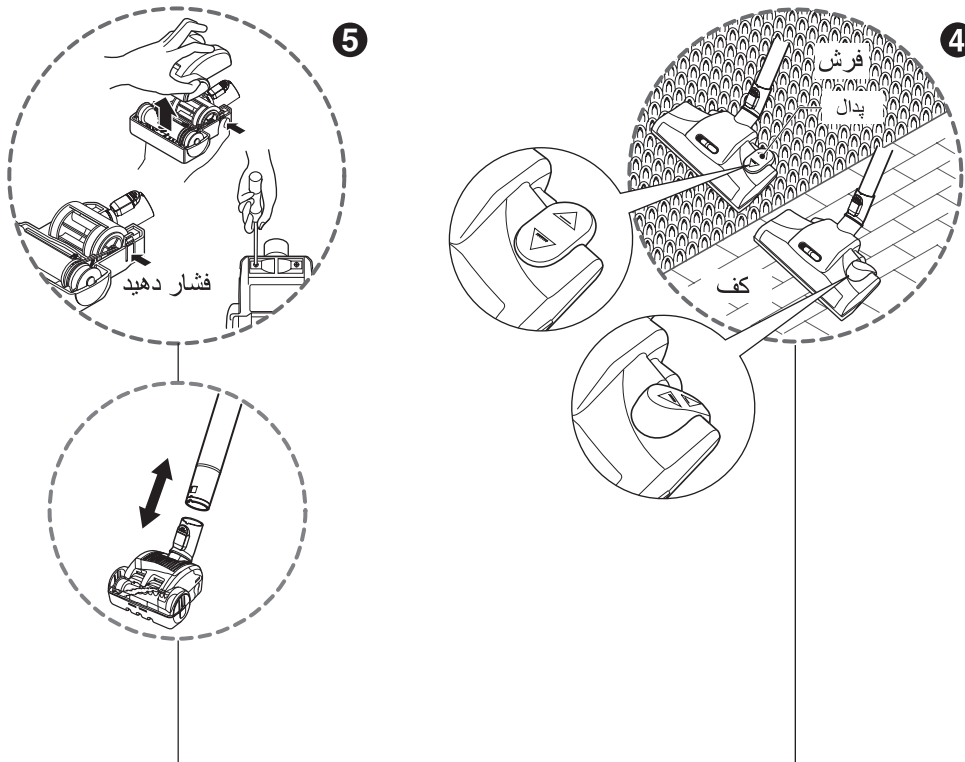

4 کله گی عمومی (بسته به مدل جاروبرقی)


- سر دو حالتی
- این کله گی مجهز به اهرمی است که به کمک آن می توانید وضعیت برس را متناسب با کفی که جارو می کنید، تغییر دهید.
- حالت فرش و گلیم
- اهرم (▲) را فشار دهید تا برس رو به خارج حرکت کند.
- حالت کف سخت
- اهرم (△) را فشار دهید تا برس دیگر نچرخد.

- چرخاننده کوچک مخصوص استفاده در پله ها یا جاهایی است که دسترسی به آنها سخت است.
- برای تمیز کردن کله گی دارای چرخاننده، پوشش کله گی را بردارید.
- مرتب مو، نخ و پرزهای جمع شده در اطراف برس را تمیز کنید.
- کوتاهی در این کار باعث خراب شدن کله گی دارای چرخاننده کوچک می شود.

تمیز کردن کله گی عمومی

- قلاب را بکشید و پوشش را باز کنید.
- سوراخ و برس کله گی را تمیز کنید.

تمیز کردن کله گی دارای چرخاننده

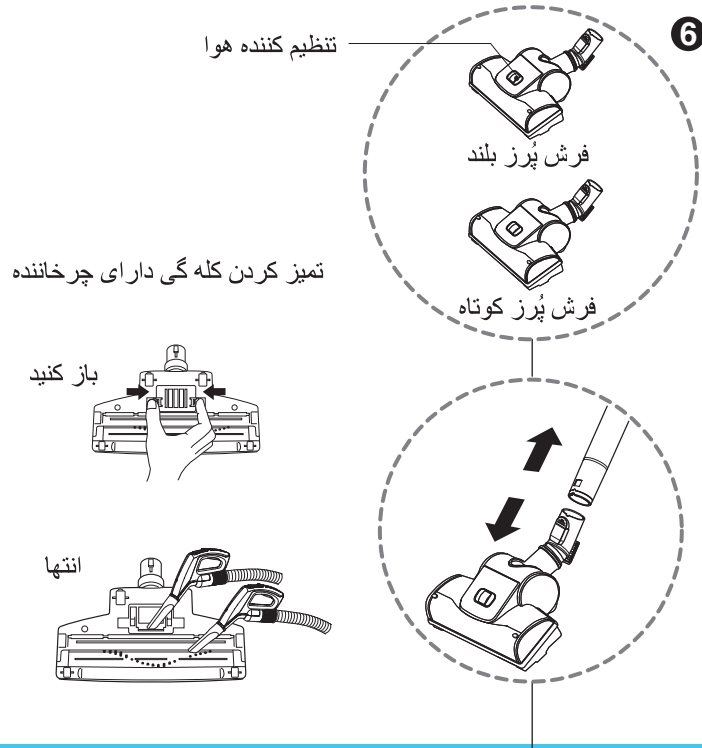


6 کله گی دارای چرخاننده (بسته به مدل جاروبرقی)

- تمیز کردن کله گی دارای چرخاننده
- دگمه روی کله گی در قسمت پشت آن را فشار دهید و پوشش هوا را جدا کنید.
- از برس گردگیری و ابزار شکاف استفاده کرده و برس و پروانه را با جاروبرقی تمیز کنید.

روش کاربرد استفاده از کله گی های الحاقی


ابزار شکاف

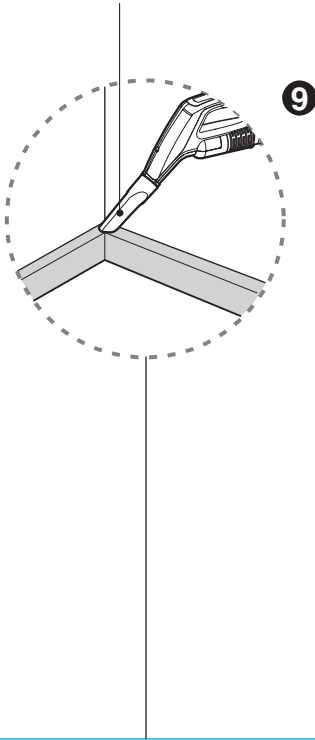

9 ابزار شکاف

ابزار شکاف برای جارو کردن جاهایی مناسب است که معمولاً دسترسی به آنها سخت است. مانند جاهایی که عنکبوت تار تنیده یا بین کاناپه و نازبالش ها.


برس گردگیری
(بسته به مدل جاروبرقی)

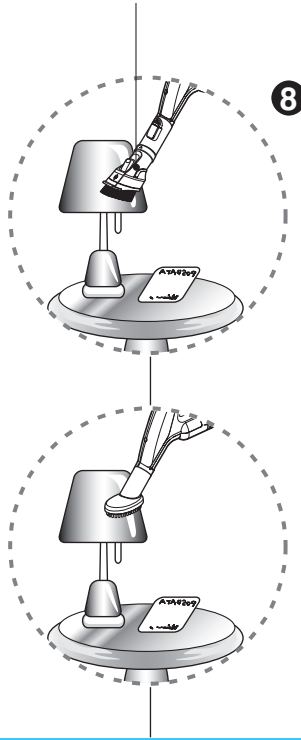

8 برس گردگیری

این برس برای جارو کردن روی قاب عکس ها، اطراف مبلمان، کتاب و دیگر سطوح متغیر مناسب است.

کله گی مبلمان
(بسته به مدل جاروبرقی)





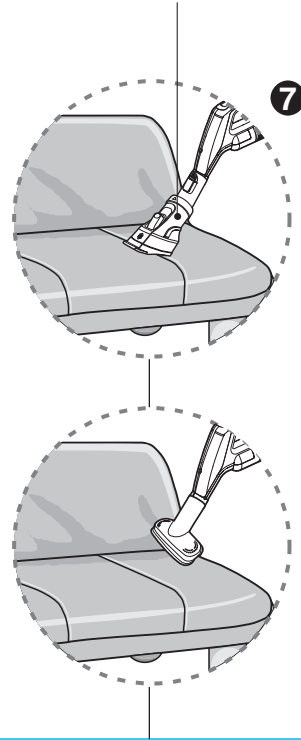


7 کله گی مبلمان


این کله گی برای جارو کردن مبلمان و لحاف و دشب مناسب است.

توجه

لوازم جانبی را در حالت کاناپه مورد استفاده قرار دهید.

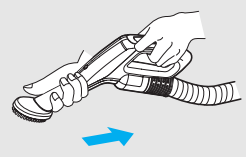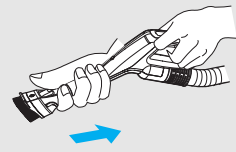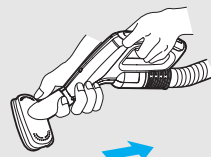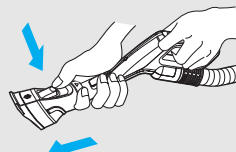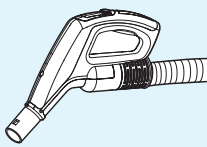

روش کاربرد خالی کردن محفظه زباله

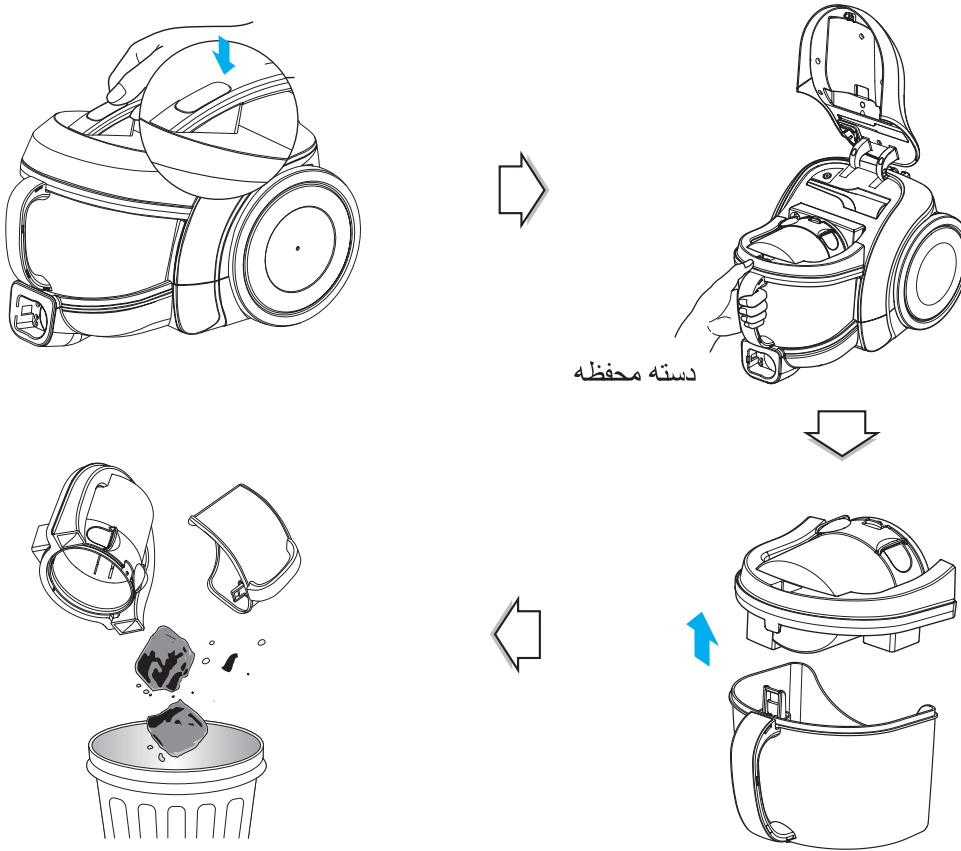

⚠ هشدار!

- هر دو قسمت را به آرامی زیر آب سرد بشویید تا زمانی که آب زلال شود.


- پیچ کنترل روی پوشش پشت دستگاه را روی وضعیت لازم تنظیم کنید

تمیز کردن محفظه زباله

- سرپوش محفظه را باز کنید.
- با یک تکه پارچه نرم هر دو روی محفظه را بشویید.
- هر دو قسمت را زیر آب سرد شیر آب بکشید.

احتیاط: وقتی جاروبرقی را حمل می‌کنید، دگمه باز طردن پوشش را فشار ندهید. اگر پوشش باز شود، محفظه به راحتی بیرون می‌افتد.

100

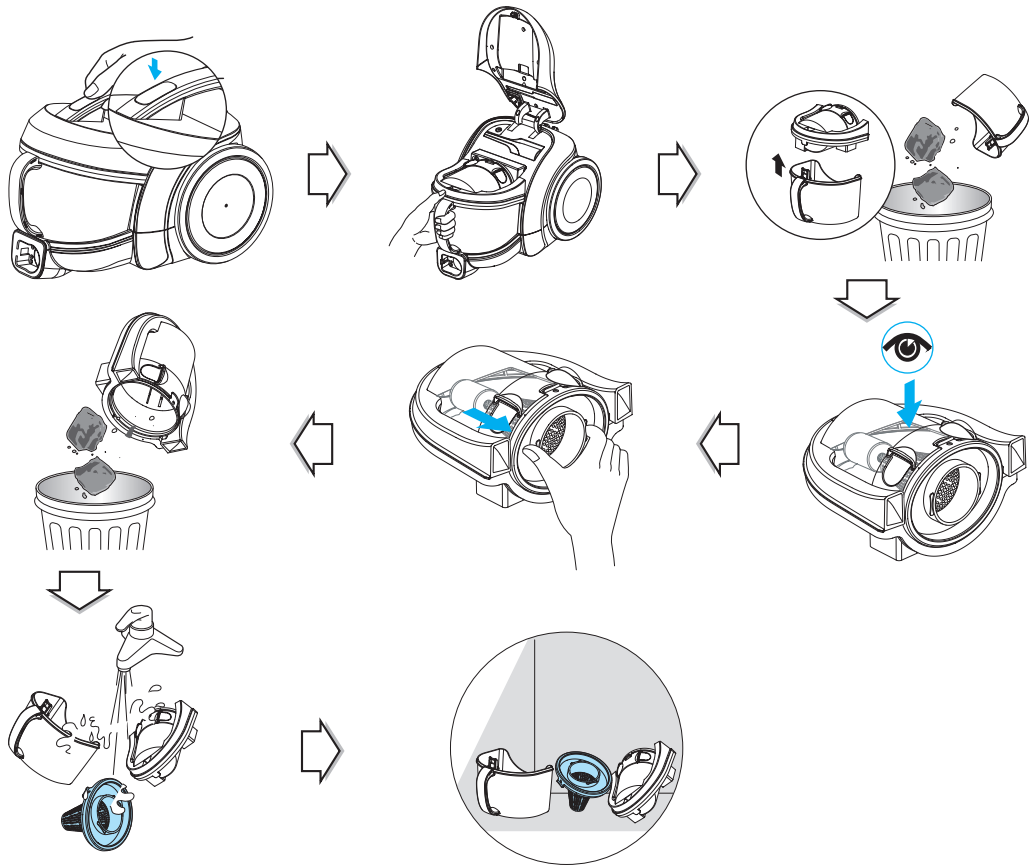


دقت کنید
اگر قدرت مکش دستگاه پس از تمیز کردن محفظه زیاله کم شد، فیلتر هوا و فیلتر ایمنی موتور را تمیز کنید. ➡ توضیح روش این کار در صفحه بعد.

- 14

روش کاربرد

تمیز کردن فیلتر هوا و فیلتر ایمنی موتور

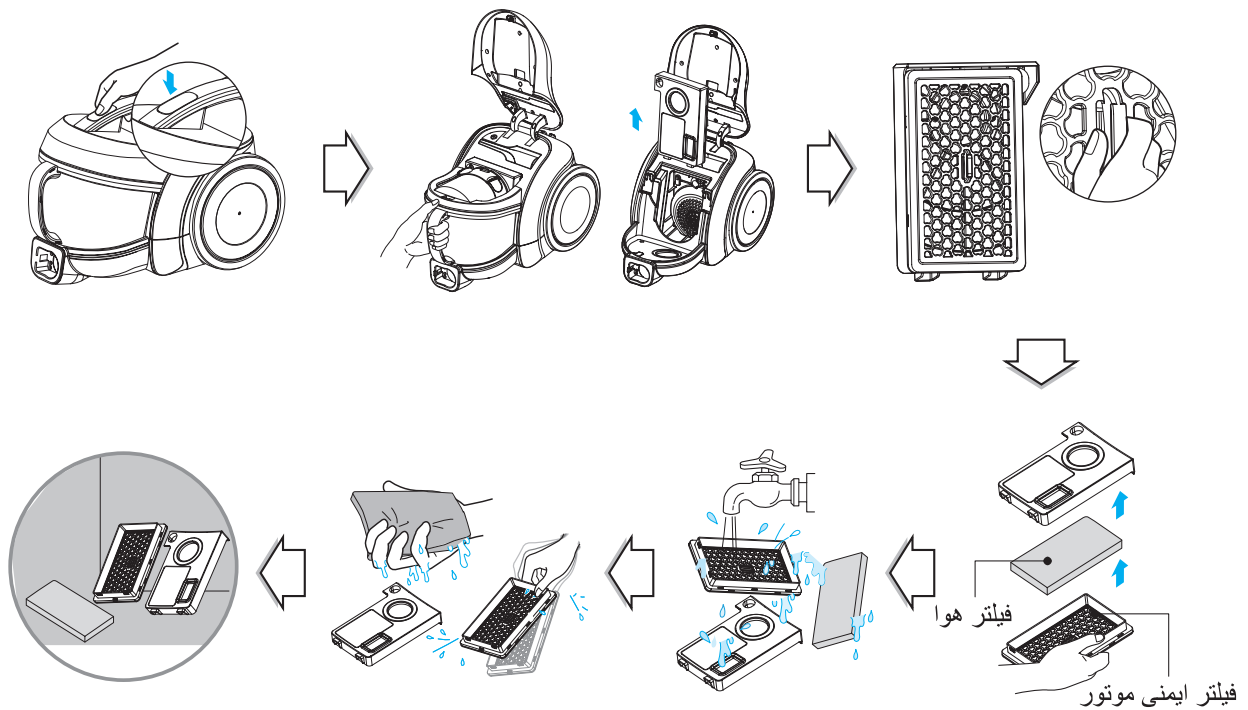


دقت کنی

اگر فیلترها خراب شده اند، دیگر از آنها استفاده نکنید. در چنین مواردی به نزدیک ترین مرکز خدمات ال جی مراجعه کنید.

فیلتر هوا و فیلتر ایمنی موتور در شکل بالا در مرکز جاروبرقی نشان داده شده است.

- اهرم پوشش فیلتر هوا را بکشید و پس از باز شدن پوشش آن را بیرون بکشید.
- قطعاتش را جدا کنید.
- فیلتر ایمنی موتور را به آرامی در زیر آب سرد بشویید.
- فیلترها را با آب گرم یا داغ نشویید.
- فیلترها را در سایه کاملاً خشک کنید به طوری که هیچ رطوبتی در آنها باقی نماند.
- فیلتر هوا و فیلتر ایمنی موتور را در موارد بالا باید تمیز کنید.

روش کاربرد تمیز کردن فیلتر خروجی

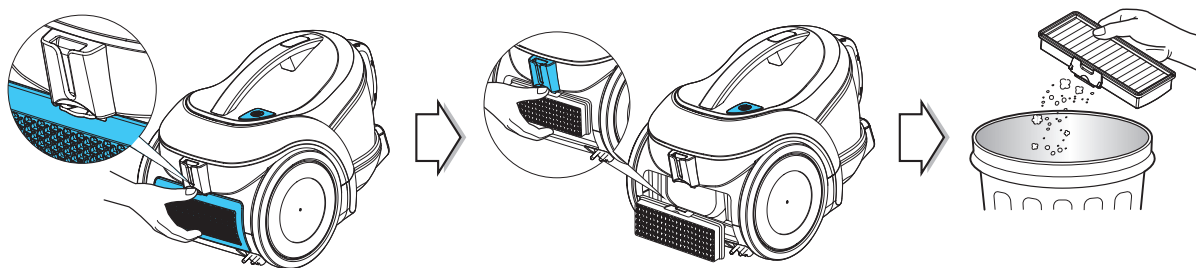

- فیلتر خروجی از نوع فیلترهای چندبار مصرف HEPA است.
- برای عوض کردن فیلتر خروجی، قلاب پوشش روی بدنه را رها کنید و فیلتر را خارج کنید.
- فیلتر خروجی را بیرون بکشید.
- فیلتر را گردگیری کنید. (این فیلتر را هرگز با آب نشویید.)
- فیلتر خروجی را هر سال باید دست کم یک بار تمیز کنید.

اگر جاروبرقی کار نکرد، چه کار باید کرد؟
ببینید آیا جاروبرقی دست به برق زده شده و آیا پریز برق سالم است.

اگر قدرت مکش جاروبرقی کم شد، چه کار باید کرد؟

- جاروبرقی را خاموش کنید و از برق بکشید.
- لوله تلسکوپی و لوله انعطاف پذیر و دیگر ابزار جانبی متصل به جاروبرقی را بررسی کنید و ببینید آیا جسمی مسیر آنها را مسدود نکرده باشد.
- ببینید آیا محفظه زباله پر نشده باشد. اگر پر شده آن را خالی کنید.
- ببینید آیا فیلتر خروجی با گرد و غبار مسدود شده است. در صورت لزوم فیلتر خروجی را تمیز کنید.
- ببینید آیا فیلتر هوا با گرد و غبار مسدود شده است. در صورت لزوم فیلتر هوا را تمیز کنید.

