



ไ  
ท  
ย  
E  
N  
G  
L  
I  
S  
H

คู่มือการใช้

LG-T500



CE0168

P/N : MFL67202043 (1.0)

[www.lg.com/th](http://www.lg.com/th)



# คู่มือการใช้ LG-T500 – ไทย

ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ

## โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้า และผลิตภัณฑ์ของ ทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียน แบบ จากตลาด ลักลอบนำเขาสินค้า รวมถึงเพื่อให้ความไว้วางใจลูกค้าได้รับ บริการทางด้านการประกันสินค้าอย่างเป็นทางการ เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งขอความปรออมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบ ผลิตภัณฑ์นี้ สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการ รับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและ รับรอง คุณจะ "ได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์ จากบริษัท LG" โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพรองจาก มาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานใน การซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

### การรับพลังงานคลื่นความถี่วิทยุ ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น LG-T500 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ ทั้งนี้เพื่อความปลอดภัยของผู้ใช้ทุกคนโดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐานโดยให้เครื่องโทรศัพท์

ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 1.07 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.761 วัตต์/กก. (10 กรัม)

- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

### การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

**⚠ คำเตือน:** ใช้แบตเตอรี่อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นตอมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์มือถือ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสันสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น การใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียกขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำให้ความเสียหายต่อข้อมูลในแถบแม่เหล็ก
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำให้ความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

### การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

#### อุปกรณ์อิเล็กทรอนิกส์

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

### ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่

- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อน โทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุ อาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์เพกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

## หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้นเราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดเครื่องใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

**หมายเหตุ:** เสียงและแรงดันที่มากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้

## บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

## บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่ายหรือระเบิดได้ในห้องโดยสารของรถซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

## บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงาน

## เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

## การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

## ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้มากที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่

- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานต่อได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้งหากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

# การติดตั้งซิมการ์ดและแบตเตอรี่ในเครื่อง

## การใส่ซิมการ์ด

เมื่อคุณสมัครใช้บริการเครือข่ายโทรศัพท์เคลื่อนที่ คุณจะได้รับ ซิมการ์ด ฟล็กอินพร้อมรายละเอียดการสมัครขอรับบริการ เช่น PIN ของคุณ บริการเสริมที่มีให้เลือกใช้ได้ และอื่นๆ


### ข้อสำคัญ!

ซิมการ์ดฟล็กอินและขั้วสัมผัสอาจชำรุดเสียหายได้ง่าย หากถูกขูดขีดหรือหักงอ ดังนั้นจึงควรใช้งาน ใส่ หรือถอดการ์ดด้วยความระมัดระวัง เก็บซิมการ์ดทั้งหมดให้พ้นมือเด็กเล็ก

## ภาพประกอบ

โปรดปิดอุปกรณ์และเลิกการเชื่อมต่อกับแท่นชาร์จก่อนถอดแบตเตอรี่

- 1 ถอดฝาครอบด้านหลัง
- 2 ยกแบตเตอรี่ออก
- 3 การใส่ซิมการ์ด
- 4 การใส่แบตเตอรี่
- 5 ประกอบฝาหลัง
- 6 การชาร์จแบตเตอรี่

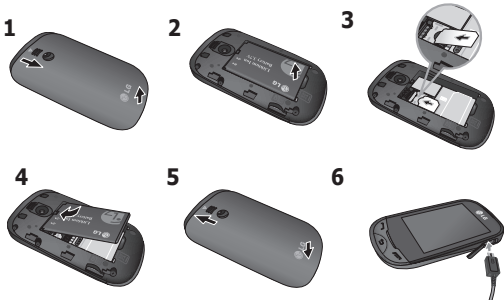

## ส่วนประกอบตัวเครื่อง



- ปุ่มเปิด/ปิดเครื่อง/ปุ่มล็อค
- กดครุหนึ่งเพื่อเปิด/ปิดหน้าจอ
  - กดค้างไว้เพื่อเปิด/  
ปิดโทรศัพท์



## การใช้หน้าจอสัมผัส

### เคล็ดลับสำหรับหน้าจอสัมผัส

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัส ที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ
- เมื่อไม่มีการใช้งานโทรศัพท์ LG-T500 เครื่องจะกลับไปสื่อกหน้าจอ

### ควบคุมหน้าจอสัมผัส

การควบคุมบนหน้าจอสัมผัสของ LG-T500

สามารถเปลี่ยนแปลงได้ขึ้นอยู่กับงานที่คุณกำลังทำ

### การเปิดแอปพลิเคชัน

ในการเปิดแอปพลิเคชันใดก็ตาม เพียงแตะที่ไอคอนนั้น


### การเลื่อนหา

ลากจากด้านหนึ่งไปยังอีกด้านหนึ่งเพื่อเลื่อนในหน้าจอบางหน้าจอ เช่น รายการขอมูลการโทร คุณสามารถเลื่อนขึ้นหรือลงได้อีกด้วย

## การโทร


### การโทรออก


- 1 **แตะ**  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกด
- 3 **แตะ**  เพื่อเริ่มการโทรออก

**เคล็ดลับ!** ในการป้อน + เพื่อโทรออกต่างประเทศ ให้กดค้างไว้ที่ 


กดปุ่มเปิดปิดเพื่อล็อคหน้าจอ สัมผัสเพื่อป้องกันการโทรออกโดยไม่ตั้งใจ

### การโทรออกโดยใช้รายชื่อ


- 1 จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด **รายชื่อ**
- 2 แตะที่กลุ่มฟิลด์ชื่อที่ด้านบนของหน้าจอ และป้อนตัวอักษรสองสามตัวแรกของรายชื่อที่ต้องการโทร โดยใช้ปุ่มกด


- 3 จากรายการที่ฟิลเดอร์นี้ ให้แตะที่ไอคอนโทร ถัดจากรายชื่อที่ต้องการโทร หมายเลขเริ่มต้นจะถูกใช้ในการโทร หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข
- 4 หรือ คุณอาจแตะที่ชื่อและเลือกหมายเลขที่จะใช้ หากรายชื่อนี้มีหมายเลขมากกว่าหนึ่งหมายเลข คุณอาจแตะ  เพื่อโทรโดยใช้หมายเลขเริ่มต้นก็ได้

### การรับสายและการปฏิเสธสายเรียกเขา

เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่ม  เพื่อรับสาย ในการปิดเสียงกริ่ง ให้แตะที่แท็บ **เงียบ** ในหน้าจอสัญญาณตอบรับ วิธีนี้เป็นวิธีที่มีประโยชน์ หากคุณเลื่อมเปลี่ยนรูปแบบเสียงเป็นเงียบ เมื่ออยู่ในห้องประชุม แตะที่แท็บ **ปฏิเสธ** เพื่อปฏิเสธสายเรียกเขาในหน้าจอสัญญาณตอบรับ

## การเปลี่ยนการตั้งค่าการโทรทั่วไป

- 1 **แตะที่ การโทร ในเมนูตั้งค่า**
- 2 **เลื่อนแล้วแตะ การตั้งค่าทั่วไป**
- **ปฏิเสธการรับสาย** - เลื่อนสวิตช์ไปทางซ้ายเพื่อเปิด คุณสามารถแตะที่ปฏิเสธรายการ เพื่อเลือกทุกสาย, รายชื่อ, กลุ่ม, ผู้โทรที่ไม่รู้จักทั้งหมด หรือหมายเลขที่ไม่รู้จักทั้งหมด
- **ส่งเบอร์ตัวเอง** - เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่
- **โทรข้ามอัตโนมัติ** - เลื่อนสวิตช์ไปทางซ้ายเพื่อเปิดหรือทางขวาเพื่อ ปิด
- **โหมดตอบรับ**  
**กดปุ่มรับสาย:** คุณสามารถรับสายเรียกเขาได้โดยการกดปุ่ม 

**รับได้ทุกปุ่ม:** คุณสามารถรับสายเรียกเขาได้โดยการกดได้ทุกปุ่ม ยกเว้นปุ่ม 

- **เดือนทุกนาที** - เลื่อนสวิตช์ไปทางซ้ายเพื่อ เปิด ฟังเสียงเดือนทุกนาทีระหว่างการใช้สาย
- **โหมดตอบรับ BT** - เลือก แชนด์ฟรี เพื่อให้สามารถรับสายได้โดยใช้ชุดหูฟังบลูทูธหรือเลือก ตัวเครื่อง เพื่อรับสายโดยกดปุ่มบนตัวเครื่อง
- **บันทึกเบอร์ใหม่** - เลือก ปิด หรือ เปิด เพื่อบันทึกหมายเลขใหม่

## รายชื่อ

### การค้นหารายชื่อ

- 1 **แตะที่ รายชื่อ**
- 2 **แตะที่ ค้นหา**
- 3 **คุณ akan เห็นรายชื่อ พิมพ์ตัวอักษรแรกของชื่อในฟิลด์ชื่อจะทำในเมนูไปที่ของรายชื่อตามตัวอักษรนั้น**

## การเพิ่มรายชื่อใหม่

- 1 แตะที่ **รายชื่อ** และแตะที่ **เพิ่ม**
- 2 เลือกว่าจะบันทึกรายชื่อไปยัง **หน่วยความจำภายใน** หรือ **ซิม**
- 3 ป้อนชื่อและนามสกุล
- 4 คุณสามารถป้อนหมายเลขที่แตกต่างกันได้สูงสุด 5 หมายเลขต่อหนึ่งรายชื่อ
- 5 เพิ่มอีเมลแอดเดรส คุณสามารถป้อนอีเมลแอดเดรสที่แตกต่างกันได้สูงสุดสองอีเมลต่อหนึ่งรายชื่อ
- 6 กำหนดรายชื่อให้กับกลุ่มหนึ่งกลุ่มหรือมากกว่า
- 7 แตะที่ **บันทึก** เพื่อบันทึกรายชื่อ

## การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถปรับการตั้งค่ารายชื่อเพื่อให้ตรงกับ **รายชื่อ** ในแบบที่คุณต้องการได้

แตะที่ **ปุ่มตัวเลือก**   
แล้วแตะที่ **ตั้งค่า**


- **ชื่อที่แสดง** - เลือกว่าจะแสดงชื่อหรือนามสกุลของรายชื่อก่อนก็ได้
- **คัดลอก** - คัดลอกรายชื่อจากซิมไปยังตัวเครื่อง หรือจากตัวเครื่องไปยังซิม คุณสามารถคัดลอกทีละรายการหรือทั้งหมดในครั้งเดียว
- **ย้าย** - ตัวเลือกนี้ทำงานในลักษณะเดียวกับคัดลอก แต่รายชื่อจะถูกจัดเก็บไว้ในที่ตั้งใหม่เท่านั้น ดังนั้น เมื่อคุณย้ายรายชื่อจากซิมไปยังหน่วยความจำภายใน รายชื่อนั้นจะถูกลบออกจากหน่วยความจำซิม
- **ส่งทุกรายชื่อผ่านบลูทูธ** - ส่งรายชื่อทั้งหมดไปยังเครื่องอื่นผ่านบลูทูธ
- **สำรองรายชื่อ/เรียกคืนรายชื่อ** - บันทึกหรือเรียกคืนข้อมูลรายชื่อไปยังที่เก็บอื่น

- **ลบรายชื่อทั้งหมด** - ลบรายชื่อทั้งหมดของคุณและที่ ใช้ หากคุณต้องการลบรายชื่อของคุณทั้งหมด

## ข้อความ

โทรศัพท์ LG-T500 ของคุณได้ผสมผสาน SMS และ MMS ไว้ในที่เดียว และมีเมนูที่ใช้ง่าย




## การส่งข้อความ

- 1 แตะที่ **ข้อความ** ในเมนูแล้วแตะที่ **เขียนข้อความ** เพื่อเริ่มเขียนข้อความใหม่
- 2 แตะที่ **แทรก** เพื่อเพิ่มภาพ วิดีโอ เสียง รูปแบบอัตโนมัติ และอื่นๆ
- 3 แตะที่ **ถึง** ที่ด้านบนของหน้าจอเพื่อป้อนผู้รับ จากนั้นป้อนหมายเลขหรือแตะ  เพื่อเลือกรายชื่อ คุณสามารถเพิ่มรายชื่อหลายรายการได้
- 4 แตะที่ **ส่ง** เมื่อพร้อม

### คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

## การป้อนข้อความ

คุณสามารถเลือกวิธีป้อนข้อมูลได้โดยแตะที่  และ **วิธีป้อนข้อมูล** และ  เพื่อเปิดโหมด T9 ไอคอนนี้จะแสดงเฉพาะเมื่อคุณเลือก **ปุ่มกด** เป็นวิธีป้อนข้อมูล และที่  เพื่อเปลี่ยนระหว่างตัวเลข สัญลักษณ์ และการป้อนข้อความ ใช้ปุ่ม **Shift** เพื่อเปลี่ยนระหว่างการป้อนตัวพิมพ์ใหญ่หรือพิมพ์เล็ก

## **เขียนมือ**

ในโหมดเขียนมือ คุณจะเขียนบนหน้าจอและ LG-T500 ของคุณจะแปลงลายมือของคุณเป็นข้อความ

## **การตั้งค่าอีเมล**

แตะที่ **อีเมล** ในหน้าจอแอปพลิเคชัน

ถ้าไม่ได้ตั้งค่าอีเมลแอดเดสส์ให้เริ่มวิชาการตั้งค่าอีเมลและดำเนินการจนเสร็จสิ้น

## **การเปลี่ยนการตั้งค่าข้อความตัวอักษร**

แตะที่ **ข้อความ** แล้วแตะที่ **ตั้งค่า** เลือก **ข้อความตัวอักษร**

**ศูนย์ข้อความตัวอักษร** - ป้อนรายละเอียดของศูนย์ข้อความ

**รายงานผลการส่ง** - เลื่อนสวิตช์ไปทางซ้ายเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว

**ช่วงที่มีผลใช้** - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

**ชนิดข้อความ** - แปลงข้อความตัวอักษรเป็น **ตัวอักษร, เสียง, แฟกซ์, X.400** หรือ **อีเมล**

**การเข้ารหัสตัวอักษร** - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความ และค่าบริการส่งข้อความของคุณ

**การส่งข้อความยาว** - เลือกเพื่อส่งข้อความยาวแบบหลาย **SMS** หรือเป็น **MMS**

## การเปลี่ยนการตั้งค่าขอ ความมัลติมีเดีย

แตะที่ **ข้อความ**  
แล้วแตะที่ **ตั้งค่า** และ  
**ขอความมัลติมีเดีย**

**โหมดเรียกข้อมูล** -  
เลือกระหว่าง **เครือข่ายหลัก**  
หรือ **เครือข่ายโรมมิ่ง**  
ถ้าคุณเลือก **กำหนดเอง**  
คุณจะได้รับเฉพาะข้อความแจ้ง  
MMS และคุณสามารถตัดสินใจว่าจะดาวน์โหลดแบบเต็ม  
หรือไม่

**รายงานผลการส่ง** - เลือกเพื่อ  
ให้ส่งหรือขอรายงานผลการส่ง  
**อ่านข้อความตอบรับ** -  
เลือกเพื่อให้ส่งหรือขอการ  
ตอบกลับ

**ความสำคัญ** - เลือกระดับ  
ความสำคัญของ MMS

**อายุข้อความ** - เลือกระยะเวลา  
ที่จัดเก็บข้อความไว้ในศูนย์รับ  
ฝากข้อความ

**ระยะเวลาสไลด์** - เลือกระยะเวลา  
ที่จะทำให้สไลด์ปรากฏบน  
หน้าจอ

**การแนบเอกสารที่ไม่รองรับ** -  
เลือกว่าคุณจะทำกับเอกสาร  
แนบเอกสารที่ไม่รองรับหรือไม่  
**เวลาส่ง** - เลือกระยะเวลาใน  
การรอก่อนส่งข้อความ  
**ศูนย์ MMS** - เลือกหนึ่งศูนย์  
จากรายการหรือเพิ่มศูนย์ขอ  
ความใหม่

## บริการเครือข่ายสังคม (SNS)

โทรศัพท์ LG-T500 มี SNS ที่  
ให้คุณสนุกสนานและจัดการ  
เครือข่ายสังคมของคุณได้

**หมายเหตุ:** คุณสมบัติ SNS  
เป็นแอปพลิเคชันที่ใช้ข้อมูล  
จำนวนมาก เมื่อเชื่อมต่อและ  
ใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถาม  
ข้อมูลการคิดค่าใช้จ่ายกับผู้  
ให้บริการเครือข่ายของคุณ

## Facebook (SNS ต่อ)

**หน้าหลัก:** ล็อกอิน จากนั้นคุณ จะเห็นข้อมูลอัปเดตสถานะของ เพื่อนๆ ของคุณ ป้อนความเห็น ของคุณเกี่ยวกับสถานะใหม่และ ตรวจสอบดูอื่นๆ

**โปรไฟล์:** คุณสามารถเลือก กระดาน > อัปเดตสถานะ และเขียนสถานะปัจจุบันได้ดู รายละเอียดข้อมูล


**เพื่อน:** ค้นหาเพื่อนของคุณใน Facebook โดยการเลือกแท็บ ค้นหา

### ข้อความ:

คุณสามารถดูโพลเดอ์ญาติเข้า/ส่ง และเขียนข้อความได้


## กล้องถ่ายรูป

### การถ่ายภาพด่วน

- 1 แตะที่เมนู **กล้องถ่ายรูป**
- 2 เมื่อกล้องจับโฟกัสที่วัตถุ แล้ว ให้แตะที่  ที่ตรง กลางด้านขวาของหน้าจอ เพื่อถ่ายภาพ

**เคล็ดลับ:** ในการสลับโหมด กล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลื่อนไอคอนกล้องถ่ายรูป หรือวิดีโอที่ตรงกลางขวาของ ช่องมองภาพขึ้น/ลง

### ภายหลังการถ่ายรูป

ภาพที่ถ่ายจะปรากฏบนหน้าจอ ตัวเลือกที่คุณเลือกใช้ได้มีดังนี้ แตะที่ 


**อัปโหลด** - แตะเพื่ออัปโหลด รูปภาพ.

**ส่งทาง** - แตะเพื่อส่งรูปภาพ เป็นข้อความ, อีเมล หรือผ่านทางบลูทูธ

**ตั้งเป็น** - คุณสามารถตั้งเป็น ภาพหน้าจอหลัก ภาพล็อค หน้าจอ หรือภาพรายชื่อ


**แก้ไข** - แตะเพื่อแก้ไขรูปภาพ

 แตะเพื่อลบภาพ

 แตะเพื่อถ่ายภาพอื่นทันที โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้

 **ตะเพื่อดูคลังภาพที่บันทึกไว้**

## **การใช้การตั้งค่าขั้นสูง**

จากช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

คุณสามารถเปลี่ยนการตั้งค่ากล้องถ่ายรูปได้โดยเลื่อนปุ่มหมุน หลังจากเลือกตัวเลือกให้แตะปุ่ม **ตกลง**

**ขนาด** – เปลี่ยนขนาดของรูปภาพเพื่อประหยัดหน่วยความจำ

**ความสมดุลแสง** – เลือกระหว่าง **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** และ **มีดครีမ်**

**เอฟเฟกต์สี** – เลือกโทนสีสำหรับรูปภาพใหม่

**ชัตเตอร์ต่อเนื่อง** – จัดให้วัตถุอยู่ในช่องมองภาพ แล้วกดปุ่มถ่ายภาพเหมือนกับการถ่ายภาพปกติ กล้องจะถ่ายภาพต่อเนื่องอย่างรวดเร็ว

**เวลาถ่ายภาพ** – ตั้งเวลาถ่ายภาพทำให้คุณสามารถตั้งช่วงเวลาหน่วงหลังจากที่กดชัตเตอร์แล้ว เลือก **ปิด**, **3 วินาที**, **5 วินาที** หรือ **10 วินาที** ซึ่งเป็นวิธีการที่ช่วยให้คุณรูปตนเองได้

**โหมดกลางคืน** – ใช้สำหรับการถ่ายภาพในที่มืด

**เลือกที่จัดเก็บ** – เลือกว่าจะบันทึกรูปภาพที่หน่วยความจำเครื่อง หรือที่หน่วยความจำภายนอก

**แสดงภาพที่ถ่าย** – เลือกเปิด เพื่อตรวจสอบรูปภาพที่คุณถ่ายทันที





**เสียงชัตเตอร์** – เลือก **ปิด/เปิด** เสียงชัตเตอร์

**รีเซ็ตการตั้งค่า** – เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป

## กล้องวิดีโอ



### การถ่ายวิดีโอด้วย

ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลื่อนไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางขวาของช่องมองภาพขึ้น/ลง


- 1 ให้ถือโทรศัพท์ในแนวนอน และหันไปทางสิ่งที่จะถ่าย
- 2 กดที่จุดสีแดง 
- 3 ● **Rec** จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพและตัวตั้งเวลาทางด้านล่าง เพื่อแสดงระยะเวลาของวิดีโอของคุณ
- 4 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  แล้วเริ่มบันทึกต่อโดยเลือก 
- 5 แตะที่  บนหน้าจอ

## หลังจากถ่ายวิดีโอ

ภาพหนึ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ ชื่อของวิดีโอจะแสดงอยู่ที่ด้านล่างของหน้าจอ พร้อมกับมีไอคอนไอคอนเรียงอยู่ทางด้านซ้ายและขวา

 แตะเพื่อเล่นวิดีโอ  
ตัวเลือกที่คุณเลือกใช้ได้มีดังนี้  
แตะที่ 


ส่ง - แตะเพื่อส่งวิดีโอเป็นข้อความ, อีเมล หรือผ่านทางบลูทูธ

 แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

● แตะเพื่อถ่ายภาพวิดีโออื่นต่อทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้

 แตะเพื่อดูคลังภาพของวิดีโอและภาพที่บันทึกไว้

## การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

**เอฟเฟกต์สี** - เลือกโทนสีเพื่อใช้กับรูปภาพมุมมองใหม่

**ความสมดุลแสง** - สมดุลแสงจะช่วยให้มั่นใจได้ว่าส่วนที่เป็นสีขาวที่ปรากฏในวิดีโอจะสวยสมจริง เพื่อหลีกเลี่ยงของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อนเลือกระหว่าง **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** และ **นิตครัม**

**ระยะเวลา** - ตั้งค่าจำกัดระยะเวลาสำหรับวิดีโอของคุณเลือกระหว่าง ปกติ และ MMS เพื่อจำกัดขนาดวิดีโอให้สามารถส่งเป็นข้อความ MMS ได้

**เลือกที่จัดเก็บ** - เลือกว่าจะบันทึกรูปภาพที่หน่วยความจำเครื่อง หรือที่หน่วยความจำภายนอก

**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด

## เพลง

ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะที่ **เพลง** จากขั้นตอนนี้ คุณสามารถเข้าใช้งานโพลเดอร์ดังๆ ดังนี้:

**เล่นล่าสุด** - เล่นเพลงที่คุณเล่นล่าสุด

**ทุกแทร็ค** - มีเพลงทั้งหมดที่คุณมีในโทรศัพท์ยกเว้นเพลงเริ่มต้นที่โหลดล่วงหน้า

**ศิลปิน** - ดูรายการเพลงที่เก็บไว้ตามศิลปิน

**อัลบั้ม** - ดูรายการเพลงที่เก็บไว้ตามอัลบั้ม

**แนวเพลง** - ดูรายการเพลงที่เก็บไว้ตามแนวเพลง

**รายการเพลง** - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

**สับเปลี่ยนแทร็ค** - เล่นแทร็คในลำดับสุ่ม

## การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์คือ ทางบลูทูธ หรือสายเคเบิลข้อมูล

คุณยังสามารถใช้ LG PC Suite ได้ในการโอนเพลงโดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธและเชื่อมต่อกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์อื่นแล้วเลือกส่งไฟล์นั้นผ่านทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏขึ้นใน เพลง > ทุกแทร็ค

## การจัดการไฟล์

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ การใช้การ์ดหน่วยความจำทำให้คุณเพิ่มพื้นที่ในหน่วยความจำของโทรศัพท์ได้โดยแตะที่ **เพิ่มข้อมูล** คุณจะสามารถเปิดรายการของโฟลเดอร์ที่คุณเก็บไฟล์มัลติมีเดียทั้งหมดได้

## เกมส์และแอปพลิเคชัน

เพื่อความเพลิดเพลิน คุณสามารถดาวน์โหลดเกมส์และแอปพลิเคชันใหม่ลงในโทรศัพท์ได้

## การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 แตะที่ ปฏิทิน
- 2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
- 3 แตะที่ เพิ่ม

## แอปพลิเคชัน

### การตั้งเวลาการปลุก

- 1 แตะที่ ตั้งปลุก
- 2 แตะที่ เพิ่ม แล้วคุณสามารถตั้งค่าและบันทึกการเตือนของคุณในเมนูนี้ได้

### บันทึกเสียง

ใช้เครื่องบันทึกเสียง เพื่อบันทึกเสียงเตือนความจำหรือไฟล์เสียงอื่นๆ

### การใช้เครื่องคิดเลข

- 1 แตะ เครื่องคิดเลข ในหน้าจอมีลดีมีเดีย
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข

## การแปลงหน่วย

- 1 แตะที่ ตัวแปลงหน่วย ในหน้าจอแอปพลิเคชัน
- 2 เลือกว่าคุณจะแปลงสกุลเงิน พื้นที่ ความยาว น้ำหนัก อุณหภูมิ ปริมาตร หรือความเร็ว
- 3 จากนั้น ให้เลือกหน่วยและป้อนค่าที่คุณต้องการแปลง

## เว็บไซต์

### เบราว์เซอร์

ช่วยให้คุณเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ไม่ว่าจะอยู่ที่ไหน หรือกำลังทำอะไร

### การเข้าใช้เว็บไซต์

- 1 แตะที่ เบราวเซอร์
- 2 ในการไปยังหน้าจอลึกของเบราว์เซอร์ ให้เลือกหน้าหลัก หรือเลือกไปยัง URL และพิมพ์ URL ตามด้วย เชื่อมต่อ

**หมายเหตุ:** มีค่าใช้จ่ายในการเชื่อมต่อกับบริการเหล่านี้ และการดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

## การเข้าใช้บริการของ Google

หากต้องการเข้าใช้บริการของ Google ให้แตะ Google Search เพื่อเปิดแอปพลิเคชัน Google search

## ตั้งค่า


### การปรับแต่งรูปแบบเสียงของคุณ

คุณสามารถกำหนดการตั้งค่าโปรไฟล์แต่ละโปรไฟล์โดยใช้เมนูตั้งค่า

- 1 แตะที่ **โปรไฟล์**
- 2 เลือกรูปแบบเสียงที่คุณต้องการแก้ไข

- 3 คุณจะสามารเปลี่ยนตัวเลือกเสียงและการเตือนทั้งหมดที่มีอยู่ในรายการได้ รวมทั้งการตั้งค่าเสียงเรียกเข้า และระดับเสียง, เสียงข้อความ และอื่นๆ

## การเปลี่ยนการตั้งค่าโทรศัพท์

อิสระในการปรับการทำงานของโทรศัพท์ LG-T500 ในแบบที่คุณต้องการได้จากหน้าจอหลัก ให้เลือก  แล้วเลื่อนไปที่ **ตั้งค่าโทรศัพท์**

## การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้น คุณจึงสนุกกับโทรศัพท์ใหม่ของคุณได้ทันที ในการเปลี่ยนการตั้งค่าใดๆ ให้ใช้เมนูนี้: แตะที่ **การเชื่อมต่อ**

## การส่งและการรับไฟล์โดยใช้บลูทูธ

### ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ หรือเพลง
- 2 เลือก **ส่ง** เลือก **บลูทูธ**
- 3 หากคุณจับคู่อุปกรณ์ **บลูทูธ** แล้ว โทรศัพท์ LG-T500 จะไม่คนหาอุปกรณ์ **บลูทูธ** อื่นโดยอัตโนมัติ หากคุณยังไม่จับคู่อุปกรณ์บลูทูธ โทรศัพท์ LG-T500 จะคนหาอุปกรณ์อื่นๆ ที่ใช้ **บลูทูธ** ภายในรัศมี
- 4 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป
- 5 ไฟล์ของคุณจะถูกส่งออกไป

### ในการรับไฟล์:

- 1 ในการรับไฟล์ คุณต้องตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** โปรดดูข้อมูลเพิ่มเติมที่ **การเปลี่ยนการตั้งค่าบลูทูธ** ดานล่าง
- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และที่ **ใช่** เพื่อรับไฟล์

- 3 คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว สำหรับไฟล์ภาพ คุณสามารถเลือกดูไฟล์หรือ **ใช่**เป็นพื้นหลังโดยทั่วไป ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมใน **แฟ้มข้อมูล**

### เคล็ดลับ!

- 1 เมื่อคุณใช้ชุดหูฟังบลูทูธ จะไม่รองรับโปรไฟล์ A2DP และ AVRCP ขณะที่คุณเล่นวิดีโอ ซึ่งหมายความว่า คุณจะไม่ได้ยินเสียงของวิดีโอหากคุณใช้ชุดหูฟังบลูทูธ
- 2 ฟังก์ชันการถ่ายโอนไฟล์ทางบลูทูธจะถูกปิดในขณะที่ใช้แอปพลิเคชันบางอย่าง (สายสุทธนา, กล้องถ่ายรูป/กล้อง, ภายวิดีโอ, เครื่องเล่นเพลง, UMS/PC ซิงค์)

**การเปลี่ยนการตั้งค่าบลูทูธ:**  
แตะ บลูทูธ แล้วเลือก ตัวเลือก  
🔘 และเลือก ตั้งค่า

### **การจับคู่กับอุปกรณ์บลูทูธอื่น**

ในการจับคู่โทรศัพท์ LG-T500 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้

- 1** ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็นเปิด และ มองเห็นได้ คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู ตั้งค่า
- 2** แตะที่ ค้นหา
- 3** โทรศัพท์ LG-T500 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ รีเฟรช จะปรากฏขึ้นบนหน้าจอ
- 4** เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่าน จากนั้นให้แตะ ตกลง
- 5** โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่น ซึ่งคุณจำเป็นต้องป้อนรหัสผ่านเดียวกัน

- 6** การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

### **ซอฟต์แวร์โอเพ่นซอร์ส**

ในการขอรับซอร์สโค้ดที่เกี่ยวข้องตาม GPL, LGPL, MPL และใบอนุญาตโอเพ่นซอร์สอื่นๆโปรดไปที่ <http://opensource.lge.com/> เงื่อนไขใบอนุญาตการปฏิเสธการรับประกันและประกาศที่อ้างอิงถึงทั้งหมดสามารถดาวน์โหลดได้พร้อมกับซอร์สโค้ด

## อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการสื่อสารส่วนตัวของคุณ

อุปกรณ์ชาร์จ



แบตเตอรี่



ชุดหูฟังสเตอริโอ



สายเคเบิล  
ข้อมูลและ  
ซีดี



### หมายเหตุ



- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

# ข้อมูลทางเทคนิค

## อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ) +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

Declaration of Conformity		 LG Electronics
<b>Suppliers Details</b>		
Name	LG Electronics Inc	
Address	LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721	
<b>Product Details</b>		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment	
Model Name	LG-T500	
Trade Name	LG	
<b>CE0168</b>		
<b>Applicable Standards Details</b>		
R&TTE Directive 1999/5/EC		
EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1		
EN 300 328 v1.7.1		
EN 60950-1:2006+A11:2009		
EN 50360:2001 / EN62209-1:2006		
EN 301 511 v9.0.2		
<b>Supplementary Information</b>		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom Notified Body Identification Number : 0168		
<b>Declaration</b>		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives	Name	Issued Date
	Doo Haeng Lee / Director	28, Mar, 2011
LG Electronics Inc. - EU Representative Veluwezoom 15, 1327 AE Almere, The Netherlands	 Signature of representative	

**ศูนย์บริการ LG โดย บริษัท แอลจี  
อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด**

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน  
เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน  
แขวงนุดคโกล เขตธนบุรี กรุงเทพฯ 10600  
วันและเวลาทำการ: จันทร์-อาทิตย์,  
07:00 - 19:00น.

**Call center : 0-2878-5757**

## การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์  
คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหามบางประการ  
แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาด USIM	ไม่ได้ใส่ USIM การ์ดในโทรศัพท์ หรือใส่ไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ USIM การ์ดอย่างถูกต้อง
ไม่มีการเชื่อมต่อกับเครือข่าย	สัญญาณอ่อน อยู่นอกพื้นที่เครือข่าย GSM	ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่าย
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดย ป้อนรหัสใหม่อีกครั้ง รหัสที่ คุณป้อนทั้งสองครั้งไม่ตรงกัน	รหัสเริ่มต้นคือ [0000] หากคุณลืมรหัส โปรดติดต่อผู้ให้บริการ
ตั้งค่าฟังก์ชันไม่ได้	ผู้ให้บริการไม่สนับสนุน หรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อ หมายเลข มีการใส่ USIM การ์ดใหม่ ถึงขีดจำกัดการโทรของคุณแล้ว	ระบบเครือข่ายใหม่ยังไม่ได้รับ อนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการ จำกัดการโทรใหม่โดยใส่รหัส PIN 2

## การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
เปิดเครื่อง โทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดไม่นานพอ แบตเตอรี่หมด ขั้วสัมผัสแบตเตอรี่สกปรก	กดปุ่มเปิด/ปิดค้างไว้อย่างน้อย สองวินาที เสียบอุปกรณ์ชาร์จให้นานขึ้น ทำความสะอาดขั้วสัมผัสแบตเตอรี่
	แบตเตอรี่หมดโดยสิ้นเชิง อุณหภูมิสูงหรือต่ำเกินไป มีปัญหาที่ขั้วสัมผัส	ชาร์จแบตเตอรี่ ตรวจสอบให้แน่ใจว่าอยู่ในอุณหภูมิ แวดล้อมที่เหมาะสม รอสักครู่ จากนั้นชาร์จแบตเตอรี่อีกครั้ง ตรวจสอบกระแสไฟฟ้าและ การเชื่อมต่อกับโทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่ และทำความสะอาดหากจำเป็น
ข้อผิดพลาดเกี่ยวกับ การชาร์จ	ไม่มีกระแสไฟฟ้า	เสียบปลั๊กเข้ากับเต้าเสียบอื่นหรือ ตรวจสอบแรงดันไฟฟ้า
	อุปกรณ์ชาร์จชำรุด	หากอุปกรณ์ชาร์จไม่ทำงาน ให้เปลี่ยนอุปกรณ์ชาร์จใหม่
	อุปกรณ์ชาร์จไม่ถูกต้อง	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น
	แบตเตอรี่ชำรุด	เปลี่ยนแบตเตอรี่
โทรศัพท์โทรออก ไม่ได้	กำลังใช้งานฟังก์ชันกำหนด หมายเลขโทรออก	ตรวจสอบการตั้งค่า

# LG-T500 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

## **Product Authentication program**

Dear Customers, To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.' The customer shall bear the cost of one SMS for the product authentication program.

In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

#### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-T500 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 1.07 W/kg (10g) and when worn on the body is 0.761 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and

Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.

## Guidelines for safe and efficient use

- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

### Efficient phone operation

#### Electronic devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

**NOTE:** Excessive sound and pressure from earphones can causing hearing loss.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

## Guidelines for safe and efficient use

### Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

### Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

## Installing the SIM card and the handset battery

### Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

#### Important!


The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all

SIM cards out of the reach of small children.



### Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

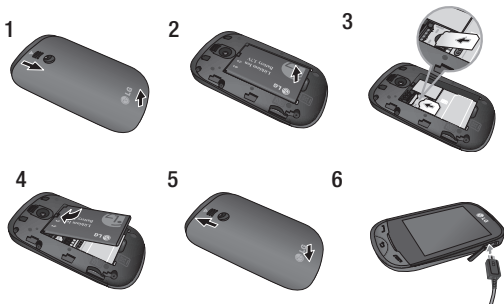

## Phone Components

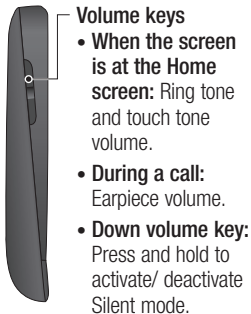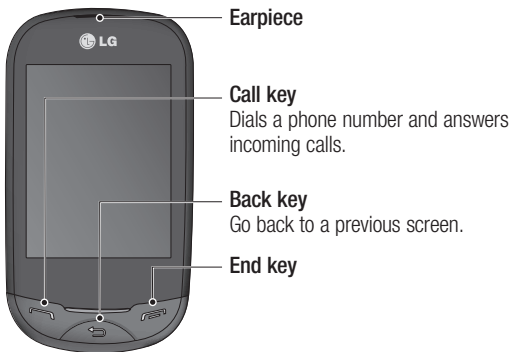

- Power/Lock key**
- Short press to turn on/off the screen.
  - Long press for power on/off.



## Using your touch screen

### Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T500 is not in use, it will return to the lock screen.

### Control the touch screen

The controls on the LG-T500 touch screen change dynamically depending on the task you are carrying out.

### Opening Applications



To open any application, simply touch its icon.


### Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

## Calls


### Making a Call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

**TIP!** To enter + for making an international call, press and hold .

Press the power key to lock the touchscreen to prevent calls being made by mistake.

### Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.

- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

### Answering and rejecting a call


When your phone rings, press  key to answer the call.

To mute the ringing, touch on Silent tab in alerting screen. This is useful if you forgot to change your profile to Silent for a meeting. Touch on Reject tab to reject an incoming call in alerting screen.

## Changing the common call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 Scroll and touch **Common settings**.
  - **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers and All unknown numbers.
  - **Send my number** - Choose whether to display your number on an outgoing call.
  - **Auto-redial** - Slide the switch left for ON or right for OFF.
  - **Answer mode**

**Press send key:** Allows you to only answer an incoming call by pressing the  key.

**Press any key:** Allows you to answer an incoming call by pressing any key, except the side volume keys and  key.

- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **BT answer mode** - Select Handsfree to be able to answer a call using a Bluetooth headset, or select Handset to press a handset key to answer a call.
- **Save new number** - Slide the switch left for ON to save a new number.

## Contacts

### Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

## Adding a new contact

- 1 Touch **Contacts** and touch **Add**.
- 2 Choose whether to save the contact to your **Internal memory** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.
- 7 Touch **Save** to save the contact.

## Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.


Touch **Options key**  and touch **Settings**.


- **Display name** - Choose whether to display the first or last name of a contact first.
- **Contacts view** - Choose whether to display **Name** or **Name & number**.
- **Copy** - Copy your contacts from your SIM to Internal memory, or vice versa.
- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts/ Restore contacts** - Save or restore the contacts data to the other storage.
- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts.

## Messaging


Your LG-T500 combines SMS and MMS into one intuitive and easy-to-use menu.


### Sending a message


- 1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients, then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.

 **WARNING:** If an image, video, sound, New slide and so on is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

## Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch to  change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

## Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T500 will convert your handwriting into your message.

## Setting up your email

Touch E-mail in screen 2.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

## Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long text as** - Choose to send long messages as **Multiple SMS** or as an **MMS**.

## Changing your multimedia message settings

Touch **Messages** and touch **Settings**. Select **Multimedia message**.

**Retrieval mode** - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to request and/or allow a delivery report.

**Read receipt** - Choose to request and/or allow a reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on the screen.

**Unsupported attachment** - Choose whether the unsupported attachment is restricted or not.

**Delivery time** - Choose how long to wait before a message is delivered.

**MMS centre** - Choose one from the list or add a new message centre.

## Social network services (SNS)

Your LG-T500 has SNS that lets you enjoy and manage your social network.

**NOTE:** SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

## Facebook (Continued SNS)

**Home:** Log in and you will see your friend's updated status. Input your comment about new status or check others.


**Profile:** You can select the **Wall > Status updates** and write the current status. See your info detail and see your uploaded photos.

**Friends:** Search your friends in facebook by selecting Search tap.

**Message:** You can see the Inbox, Sent and Updates.

## Camera

### Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo.

**TIP:** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

### After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch .

**Upload** - Touch to upload the photo.


**Send via** - Touch to send the photo as **Message**, **Email** or via **Bluetooth**.

**Set as** - Touch to set as Homescreen wallpaper, Lockscreen wallpaper, Contacts image.


**Edit** - Touch to edit the photo.

 Touch to delete the image.

 Touch to take another photo immediately.

 Touch to view a gallery of your saved photos.

### Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

**Size** - Change the size of the photo to save memory.

**White balance** - Choose between **Auto, Incandescent, Sunny, Fluorescent,** and **Cloudy.**

**Colour effect** - Choose a color tone for your new photo.

**Continuous shot** - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

**Self-timer** - The self-timer allows you to set a delay after the shutter is pressed. Select **Off, 3 seconds, 5 seconds,** or **10 seconds.** This is ideal if you want to be included in a photo.

**Night mode** - Useful to user in dark places.

**Select storage** - Choose whether to save your photos to the Handset memory or to the External memory.

**Show captured image** -

Choose On to check the picture you took right away.


**Shutter sound** - Select shutter sound on/off.




**Reset settings** - Restore all camera default settings.

## Video camera

### Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 **● Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.

- 4 To pause the video, touch  and resume by selecting .
- 5 Touch  on screen to stop video recording.

## After making a video


A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides .


 Touch to play the video.


The following options are available.

Touch .


**Send via** - Touch to send the video as **Message**, **Email** or via **Bluetooth**.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view a gallery of saved videos and images.

## Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

**Colour Effect** - Choose a color tone to use for your new view.

**White balance** - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

**Duration** - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

**Select storage** - Choose whether to save your videos to the Handset memory or to the External memory.

**Reset settings** - Reset all the video camera settings.

## Music

To access the music player, touch **Music**. From here, you can access a number of folders:

**Recently played** - Plays the songs you have played recently.

**All tracks** - Contains the songs you have on your phone except the pre-loaded default music.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains all the playlists you have created.

**Shuffle tracks** - Play your tracks in a random order.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## FM Radio

You can listen to FM radio with your external earphone so you can tune into your favourite stations to listen on the move.

### Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

#### To auto tune:

- 1 Scroll and touch **FM radio**, and touch .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

**NOTE:** You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

## Managing files

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.

## Games and Applications

You can download new games and applications to your phone to keep you enjoy.

## Application

### Adding an event to your calendar

- 1 Touch **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**, then you can select **Appointment**, **Anniversary** or **Birthday**.

### Setting your alarm

- 1 Touch **Alarms**.
- 2 Touch **Add**, then you can set and save your alarm in this menu.

### Voice recorder

Use your voice recorder to record voice memos or other audio files.

### Using your calculator

- 1 Touch **Calculator**.
- 2 Touch the number keys to enter numbers.

## Converting a unit

- 1 Touch **Unit converter**.
- 2 Choose whether you want to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 3 Then select the unit and enter the value you would like to convert from.

## The web

**Browser** gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

### Accessing the web

- 1 Touch the **Browser**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

**NOTE:** You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

## Access to Google Service

Touch Google to launch Search, Mail and Blogger application.

## Profiles

### Personalising your profiles

You can personalise each profile setting.

- 1 Touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your Ringtone and Volume, Message tone settings and more.

## Settings

### Changing your phone settings

Use the freedom of adapting the LG-T500 to your own preferences.

From the home screen, select  and touch **Settings** then scroll to **Device settings**.

### Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu:  
Touch **Connectivity**.

## Sending and receiving your files using Bluetooth

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send via**. Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your LG-T500 will not automatically search for other **Bluetooth** devices. If not, your LG-T500 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

### To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file. Files will usually be saved to the appropriate folder in **My stuff**.

### TIP!

- 1 When you use a Bluetooth headset, A2DP and AVRCP profiles are not supported while you play video. It means you will not listen video sound if you use Bluetooth headset.
- 2 Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera, MusicPlayer, UMS/PCSync)

### Changing your Bluetooth settings:

Touch **Bluetooth** then select **Options** and choose **Settings**.

## Pairing with another Bluetooth device

By pairing your LG-T500 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your LG-T500 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

### **Open Source**

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>  
All referred licence terms, disclaimers and notices are available for download with the source code.

## Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

**Charger**



**Battery**



**Stereo headset**



**Data cable and CD**



### **NOTE**



- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

# Technical data

## Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

Declaration of Conformity		 LG Electronics
<b>Suppliers Details</b>		
Name	LG Electronics Inc	
Address	LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721	
<b>Product Details</b>		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment	
Model Name	LG-T500	
Trade Name	LG	
		<b>CE0168</b>
<b>Applicable Standards Details</b>		
R&TTE Directive 1999/5/EC		
EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1		
EN 300 328 v1.7.1		
EN 60950-1:2006+A11:2009		
EN 50360:2001 / EN62209-1:2006		
EN 301 511 v9.0.2		
<b>Supplementary Information</b>		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom		
Notified Body Identification Number : 0168		
<b>Declaration</b>		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives	Name	Issued Date
LG Electronics Inc. - EU Representative Veluwezoom 15, 1327 AE Almere, The Netherlands	Doo Haeng Lee / Director	28, Mar, 2011
		
	Signature of representative	

**“LG Service Center”**

**by LG Electronics (Thailand) Co. Ltd.**

72/127 Somdetprachaw Taksin Rd.,

Bookalo, Thonburi, Bangkok 10600

LG Service Working day: Mon - Sun

07:00 - 19:00

Call center: 0-2878-5757

## Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure the USIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the Network Operator coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New USIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

## Troubleshooting

Message	Possible causes	Possible Solutions
Phone cannot be switched on	On/Off key not pressed long enough	Press the On/Off key down for at least two seconds.
	Battery empty	Keep charger attached for a longer time.
	Battery contacts dirty	Clean the contacts.
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
Number not permitted	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Number not permitted	The Fixed dial number function is on.	Check settings.





