

عربي

ENGLISH



ENGLISH

عربي

دليل مستخدم

LG-P500

USER GUIDE

LG-P500



CE 0168 !

www.lg.com

P/N : MFL67288601 (1.0) G



CE 0168 !

www.lg.com

P/N : MFL67288601 (1.0) G



LG-P500 دليل مستخدم

هذا الدليل يساعدك على التعرف على هاتفك و عند الحاجة لاي معلومات الرجاء زيارة الموقع الالكتروني:

www.lge.com



- قد لا تنطبق بعض محتويات هذا الدليل على هاتفك وهذا يتوقف على برنامج الهاتف أو موفر الخدمة لديك.
- هذا الجهاز غير مخصص للمكفوفين نظراً للوحة المفاتيح التي تعمل باللمس.
- جميع حقوق الطبع محفوظة لشركة LG 2010, Inc. جميع الحقوق محفوظة. LG وشعار LG هما علامتان تجاريتان مسجلتان لمجموعة LG Group والكيانات التابعة. كل العلامات التجارية الأخرى تعود إلى مالكيها.
- Google™ و Google Mail™ و YouTube™ و Google Talk™ و Google Maps™ و Android Market™ هي علامات تجارية لـ Google, Inc.

تهانينا لشراءك هاتف LG-P500 المتقدم والصغير
من LG، والمصمّم للعمل مع التكنولوجيا الرقمية
الأحدث لاتصالات الهواتف المحمولة.

تنبيه هام

يرجى التحقق لمعرفة ما إذا كان قد تم وصف أي مشكلة من المشاكل التي تواجهها مع هاتفك في هذا القسم قبل نقل الهاتف إلى الصيانة أو قبل الاتصال ممثل الصيانة.

1. ذاكرة الهاتف

عندما تكون المساحة المتاحة على ذاكرة الهاتف أقل من 10%، فلن يستطيع الهاتف استقبال رسالة جديدة، لذا تحتاج إلى التحقق من ذاكرة الهاتف وحذف بعض البيانات مثل التطبيقات أو الرسائل لإتاحة المزيد من الذاكرة لإدارة التطبيق

1 على الشاشة الرئيسية، المس علامة التبويب التطبيقات وحدد الإعدادات < التطبيقات > إدارة التطبيقات.

2 عندما تظهر جميع التطبيقات، قم بالتمرير وحدد التطبيق الذي تريد إلغاء تثبيته.

3 انتقل إلى علامة التبويب إلغاء التثبيت والمس موافق لإلغاء تثبيت التطبيق المطلوب.

2. إطالة فترة عمل البطارية

يمكنك تمديد عمر البطارية عن طريق إيقاف الميزات التي لا تحتاج إلى تشغيلها بصورة مستمرة في الخلفية، يمكنك أيضاً مراقبة كيفية استهلاك التطبيقات وموارد النظام لطاقة البطارية.


لتمديد عمر البطارية

- قم بإيقاف تشغيل الاتصالات اللاسلكية التي لا تستخدمها، أوقف تشغيل Wi-Fi أو بلوتوث في حال عدم استخدامها.
- قلل سطوع الشاشة واضبط مهلة أقصر للشاشة.
- أوقف تشغيل المزامنة التلقائية لـ Google Mail™ والتقويم، وجهات الاتصال، والتطبيقات الأخرى.
- قد تؤدي بعض التطبيقات التي قمت بتنزيلها إلى تقليل فترة عمل البطارية.

تنبيه هام

3. تثبيت برنامج مفتوح المصدر

إذا قمت بتثبيت برنامج مفتوح المصدر على هاتفك، ولم تستخدم البرنامج الذي توفره الجهة المصنعة، فقد لا يعمل الهاتف بشكل صحيح.

 **تحذير:** في حال استخدمت برنامجاً يختلف عن الذي توفره الجهة المصنعة، فتبطل كفاءة الهاتف.

 **تحذير:** لحماية الهاتف والبيانات الشخصية، قم بتنزيل التطبيقات من مصادر موثوقة فقط. مثل Android™ Market. في حالة عدم تثبيت بعض التطبيقات بالهاتف بشكل سليم، قد لا يعمل الهاتف بشكل طبيعي أو قد يحدث خطأ جسيم. ستكون بحاجة إلى إلغاء تثبيت هذه التطبيقات وكل بياناتها وضوابطها من الهاتف.

4. استخدام نقش إلغاء القفل

قم بضبط نقش إلغاء القفل لتأمين الهاتف، يؤدي إلى فتح شاشات ترشدك أثناء رسم نقش إلغاء قفل الشاشة.

للتحقق من مستوى شحن البطارية

1 على الشاشة الرئيسية، المس علامة التبويب التطبيقات وحدد الإعدادات > حول الهاتف < الحالة.

2 يتم عرض حالة البطارية (جار الشحن، الشحن، التفريغ) والمستوى (مثل النسبة المئوية لاكمال الشحن) في أعلى الشاشة.

لمراقبة ما يستخدم البطارية والتحكم فيه

1 على الشاشة الرئيسية، المس علامة التبويب التطبيقات وحدد الإعدادات > حول الهاتف < استخدام البطارية.

2 يعرض الجزء العلوي من الشاشة وقت استخدام البطارية. سواء الفترة التي مرت منذ آخر توصيل لها بمصدر طاقة أو إذا تم توصيلها بمصدر طاقة، فما هي الفترة التي مرت على استخدام طاقة البطارية، يعرض الجزء

الرئيسي بالشاشة التطبيقات والخدمات التي تستخدم طاقة البطارية بدءاً من ما يستهلك أكبر قدر من الطاقة وصولاً إلى ما يستهلك أقل قدر من الطاقة.

- 1 أوقف تشغيل الطاقة.
- 2 اضغط باستمرار لأكثر من 10 ثوانٍ: مفتاح الطاقة + مفتاح الشاشة الرئيسية + مفتاح خفض مستوى الصوت.
- 3 عند تشغيل الطاقة. حرّر هذه المفاتيح.

5. استخدام الوضع الآمن وإعادة التعيين الثابتة

استخدام الوضع الآمن

* لاستعادة الهاتف من حالة التعطل

- 1 قم بإيقاف تشغيل الهاتف. ثم إعادة التمهيد. أثناء رجوع الهاتف لحالة التشغيل. اضغط باستمرار على مفتاح الشاشة الرئيسية أثناء عرض شعار LG. سيقوم الهاتف بالتمهيد بكامل الخطوات إلى الشاشة الرئيسية ويعرض "الوضع الآمن" في الزاوية اليمنى السفلى.
- 2 حدد الاعدادات < التطبيقات > إدارة التطبيقات. واختر التطبيق ثم حدد الرمز لإلغاء التثبيت.
- 3 بعد إلغاء تثبيت التطبيق. قم بإيقاف تشغيل الهاتف وإعادة التمهيد.

⚠ تحذير: احتياطات يجب اتباعها

عند استخدام نقش القفل من المهم جداً تذكر نقش إلغاء القفل الذي قمت بتعيينه. لن تتمكن من الوصول إلى الهاتف إذا استخدمت نقشاً غير صحيح 5 مرات. لديك 5 فرص لإدخال نقش إلغاء القفل أو رمز PIN أو كلمة المرور. إذا استخدمت كل الفرص الـ 5. فيمكنك المحاولة بعد 30 ثانية.

عند تعذر استعادة نقش إلغاء القفل أو رمز PIN أو كلمة المرور:

اضغط على زر نسيان النقش. في حال إنشاء حساب Google على الهاتف و استخدمت نقش غير صحيح 5 مرات ثم يُطلب منك تسجيل الدخول باستخدام حساب Google لإلغاء قفل الهاتف في حال عدم إنشاء حساب Google على الهاتف أو نسيانه. عليك تنفيذ تعيينات الشركة المصنعة.

تنبيه: في حالة تنفيذ تعيينات الشركة المصنعة. سيتم حذف كل تطبيقات وبيانات المستخدم. يرجى تذكر إجراء نسخ احتياطي لأي بيانات هامة قبل تنفيذ تعيينات الشركة المصنعة.

تنبيه هام

* استخدام إعادة التعيين الثابتة (تعيينات الشركة المصنعة)

في حالة عدم الرجوع إلى الحالة الأصلية، استخدم إعادة التعيين الثابتة لتهيئة الهاتف.

إذا قام المستخدم بتشغيل الهاتف بالضغط باستمرار على مفتاح الطاقة + الشاشة الرئيسية + خفض مستوى الصوت في الوقت نفسه (أو لمدة خمس ثوانٍ)، فيقوم الهاتف بالتشغيل وتنفيذ تعيينات الشركة المصنعة على الفور.

يُرجى ملاحظة أنه بعد تنفيذ إعادة التعيين الثابتة، سيتم مسح كل البيانات والتطبيقات من هاتفك ولن يمكن استعادتها.

تحذير

في حالة تنفيذ إعادة التعيين الثابتة، سيتم حذف كل تطبيقات المستخدم وبيانات المستخدم. يُرجى تذكر الاحتفاظ بأي معلومات هامة قبل تنفيذ إعادة التعيين الثابتة.

6. التوصيل بشبكات Wi-Fi

بفضل استخدام تقنية Wi-Fi بهاتفك، يمكنك الوصول إلى نقطة وصول لاسلكية أو "نقطة فعالة". تكون بعض نقاط الوصول مفتوحة ويمكنك ببساطة الاتصال بها. في

حين تكون بعض النقاط الأخرى مخفية أو تطبق ميزات أمان، لذا يلزمك تكوين الهاتف حتى يمكنه الاتصال بها.

أوقف تشغيل ميزة Wi-Fi عند عدم استخدامها وذلك لإطالة عمر البطارية.

لتشغيل ميزة Wi-Fi والاتصال بشبكة Wi-Fi

1 على الشاشة الرئيسية. المس علامة التبويب التطبيقات وحدد الإعدادات < الاتصالات اللاسلكية والشبكات < إعدادات Wi-Fi.

2 المس Wi-Fi لتشغيله وبدء البحث عن شبكات Wi-Fi المتوفرة.

- يتم عرض قائمة بشبكات Wi-Fi المتاحة. كما تتم الإشارة إلى الشبكات المؤمنة برمز القفل.

3 المس إحدى الشبكات للاتصال بها.

- إذا كانت الشبكة مفتوحة، ستم مطالبتك بتأكيد رغبتك في الاتصال بهذه الشبكة عن طريق لمس اتصال.

⚠️ تحذير:

لا تقم بإدراج بطاقة الذاكرة أو إخراجها عندما يكون الهاتف في وضع التشغيل. وإلا فقد يلحق الضرر ببطاقة الذاكرة والهاتف. وقد تلتف البيانات المحزنة في بطاقة الذاكرة. لإزالة بطاقة الذاكرة بأمان. يرجى خديد الشاشة اعدادات التطبيقات < تخزين الهاتف و بطاقة SD < إلغاء تثبيت بطاقة SD

8. فتح وتغيير التطبيقات

يُعد القيام بمهام متعددة أمرًا سهلاً مع Android لأن التطبيقات المفتوحة تظل قيد التشغيل حتى في حالة فتح تطبيق آخر. لا توجد حاجة للخروج من التطبيق قبل فتح آخر. يمكنك استخدام العديد من التطبيقات المفتوحة والتنقل بينها. حيث يقوم برنامج Android بإدارة كل تطبيق وإيقافه وتشغيله عند الحاجة وذلك للتأكد من أن التطبيقات الخاملة لا تستهلك موارد بشكل غير ضروري.

لإيقاف استخدام التطبيق الذي

تستخدمه

1 على الشاشة الرئيسية. المس

- إذا كانت الشبكة مؤمنة، فستتم مطابقتك بإدخال كلمة مرور أو بيانات اعتماد أخرى. (راجع مسؤول الشبكة للتعرف على التفاصيل).
4 يعرض شريط الحالة رموز تشير إلى حالة Wi-Fi.

7. استخدام بطاقة microSD

يمكن حفظ الصور بالإضافة إلى ملفات الموسيقى والفيديو على ذاكرة خارجية فقط.

قبل استخدام الكاميرا المدمجة. ستحتاج إلى إدخال بطاقة ذاكرة microSD إلى هاتفك أولاً.

بدون إدخال بطاقة ذاكرة، لن تتمكن من حفظ الصور ومقاطع الفيديو التي قمت بتسجيلها.

تنبيه هام

رسالة (SMS). الإشارة المرجعية.
سجل المكالمات)

- نقل ملفات وسائط متعددة (الصور وملفات الفيديو والموسيقى) بسهولة تامة بعملية سحب وإفلات بسيطة بين الكمبيوتر والهاتف

- نقل الرسائل من هاتف إلى كمبيوتر

- استخدام الهاتف كمودم

- تحديث البرنامج من دون خسارة البيانات

تثبيت برنامج **LG PC Suite** من بطاقة الذاكرة **microSD**

1 قم بإدراج بطاقة ذاكرة **microSD** في الهاتف. (قد تكون مدرجة مسبقاً في الهاتف.)

2 قبل توصيل كبل البيانات **USB**. تأكد من أن وضع التخزين ذات السعة الكبيرة فقط ممكن على الهاتف. (في قائمة التطبيقات. اختر الإعدادات < الهاتف. ثم حدد خانة الاختيار وسيلة تخزين ذات سعة كبيرة فقط.)

3 قم بتوصيل هاتفك بالكمبيوتر عبر كبل بيانات **USB**.

علامة التبويب التطبيقات وحدد الإعدادات < التطبيقات > إدارة التطبيقات.

2 قم بالتمرير إلى التطبيق المطلوب والمس حمل على التوقف لإيقاف استخدامه.

تلميح الرجوع إلى التطبيقات الحديثة

- اضغط باستمرار على مفتاح الشاشة الرئيسية. فتعرض شاشة قائمة التطبيقات التي استخدمتها مؤخراً

9. نسخ LG PC Suite من بطاقة SD

إن **LG PC Suite IV** عبارة عن برنامج يساعدك على توصيل الهاتف المحمول بالكمبيوتر باستخدام كبل اتصال بيانات **USB**. بحيث يمكنك استخدام وظائف الهاتف المحمول على الكمبيوتر.

الوظائف الرئيسية لبرنامج **LG PC Suite IV**

- إنشاء بيانات الهاتف وتعديلها وحذفها بسهولة تامة

- مزامنة البيانات من الكمبيوتر والهاتف (جهات الاتصال، التقويم/

10. توصيل الهاتف بالكمبيوتر عبر USB

ملاحظة: يتوجب عليك تثبيت برنامج LG PC suite على الكمبيوتر. لمزامنة البيانات على الهاتف مع الكمبيوتر باستخدام كبل USB. يمكنك تنزيل هذا البرنامج من موقع ويب لـ LG (www.lg.com). انتقل إلى <http://www.lg.com> وحدد منطقتك. والبلد واللغة. تفضل بزيارة موقع ويب لـ LG للحصول على مزيد من المعلومات. نظراً إلى أنّ PC suite مضمّن في بطاقة SD في صندوق الوارد. يمكنك نقله ببساطة إلى الكمبيوتر. لا يعتمد LG-P500:

- اتصال الكمبيوتر عبر بلوتوث
- مزامنة LG Air Sync (مزامنة عبر ويب، R-Click)
- OSP (On Screen Phone)
- المهام في التقويم
- المذكرة
- البريد الإلكتروني
- تطبيق Java

يتوفر دليل المستخدم الخاص بـ PC Suite IV في قائمة التعليمات بعد تثبيت برنامج PC Suite IV.

4 • اسحب رمز USB في شريط الحالة.

• اختر توصيل USB والتركيب.

• يمكنك عرض محتوى التخزين ذات سعة كبيرة على الكمبيوتر ونقل الملفات.

5 • انسخ حافظة 'LGPCSuiteIV'

من وسيلة التخزين ذات السعة الكبيرة إلى جهازك الكمبيوتر.

• شغل ملف "LGInstaller.exe" على الكمبيوتر واتبع الإرشادات.

* عند اكتمال تثبيت LG PC Suite IV.

قم بتعطيل وضع وسيلة تخزين ذات سعة كبيرة فقط لتشغيل LG PC Suite IV.

ملاحظة: يرجى عدم إزالة أو حذف ملف برنامج آخر مثبت على بطاقة الذاكرة إذ قد يؤدي ذلك إلى إلحاق الضرر بالتطبيق الذي تم تثبيته مسبقاً على الهاتف.

تنبيه هام

تلميح! لاستخدام بطاقة microSD بالهاتف مرة أخرى، ستحتاج لفتح نافذة الإعلام ولس إيقاف تشغيل تخزين USB".

في هذه الأثناء، لا يمكنك الوصول إلى بطاقة microSD من هاتفك.

ولذا لا يمكنك استخدام التطبيقات التي تعتمد على بطاقة microSD كالكاميرا والمعرض والموسيقى.

لفصل الهاتف عن الكمبيوتر، اتبع بعناية الإرشادات التي تظهر على الكمبيوتر لفصل أجهزة USB بشكل صحيح لتفادي فقدان المعلومات الموجودة على البطاقة.

1 قم بفصل جهاز USB عن الكمبيوتر.

2 قم بفتح نافذة الإعلام ولس إيقاف تشغيل وحدة تخزين USB.

3 المس إيقاف تشغيل في مربع الحوار الذي يفتح.

1 استخدم كبل USB الذي يأتي مع الهاتف لتوصيل الهاتف بمنفذ USB الموجود على الكمبيوتر.

وسوف تتلقى إعلانًا بأنه تم توصيل الجهاز عبر USB.

2 افتح نافذة الإعلام ولس جهاز USB الذي تم توصيله.

3 المس تركيب لتأكيد رغبتك في نقل الملفات بين بطاقة microSD في الهاتف والكمبيوتر.

عند توصيل الهاتف كوحدة تخزين USB، سوف تتلقى إعلانًا بذلك. لقد تم تثبيت بطاقة microSD الخاصة بالهاتف كأحد محركات الأقراص بالكمبيوتر. يمكنك الآن نسخ الملفات من بطاقة microSD.

11. إلغاء قفل الشاشة عند استخدام اتصال البيانات

سوف تصبح الشاشة مظلمة إذا لم يتم لمسها لفترة من الوقت عند استخدام اتصال البيانات، لتشغيل شاشة LCD، ما عليك إلا لمسها.

ملاحظة: عند إلغاء تثبيت PC Suite IV، لا تتم إزالة برامج تشغيل USB و بلوتوث تلقائيًا. وبالتالي، يجب إلغاء تثبيتها يدويًا.

12. حمل الهاتف بشكلٍ مستقيم

يرجى حمل الهاتف بشكلٍ مستقيم كالهاتف العادي.

أثناء إجراء/تلقي مكالمات أو إرسال/تلقي بيانات، حاول تجنب الإمساك بالجزء السفلي من الهاتف حيث يكون الهوائي موجوداً. قد يؤثر ذلك على جودة المكالمات.

13. عند تجمّد الشاشة

في حال لم يتجاوب الهاتف مع إدخال المستخدم أو تجمّدت الشاشة؛ أخرج البطارية. قم بإدراجها مجدداً وقم بتشغيل الهاتف. في حال استمرت المشكلة، يرجى الاتصال بمركز الخدمة.

14. لا تقم بتوصيل الهاتف عند

تشغيل/إيقاف تشغيل الكمبيوتر

تأكد من قطع اتصال الهاتف والكمبيوتر الشخصي باستخدام كبل البيانات إذا قد تحدث أخطاء على الكمبيوتر الشخصي.

التعرّف على الهاتف الخاص بك

لتشغيل الهاتف، اضغط باستمرار على مفتاح الطاقة لمدة 3 ثوانٍ.
لإيقاف تشغيل الهاتف، اضغط على مفتاح الطاقة لمدة 3 ثوانٍ والمسّ إيقاف التشغيل.



تحذير! وضع أشياء ثقيلة أو الجلوس على الهاتف من الممكن ان يؤدي الى تلف وظائف شاشة اللمس و LCD، لا تغطي حامي الشاشة لان ذلك سوف يؤدي الى جعل المستشعر يعمل بشكل غير صحيح.

تلميح! اضغط على مفتاح القائمة عند الضغط على تطبيق للتحقق من الخيارات المتوفرة.

تلميح! لا يعتمد LG-P500 مكالمات الفيديو.

تلميح! في حال حدوث أخطاء في LG-P500 عند استخدامه، وفي حال تعذّر تشغيله، قم بإزالة البطارية وتثبيتها مجدداً وتشغيل الهاتف بعد 5 ثوانٍ.

موصل سماعة الأذن استريو



مفتاح الطاقة/القفل

٥١٥

مفاتيح مستوى الصوت

- على الشاشة الرئيسية:
تتحكم بمستوى صوت
الرنين.

- أثناء مكالمة: يتحكم

بمستوى صوت سماعة الأذن.

- عند تشغيل مسار: تحكم

بمستوى الصوت باستمرار.



الشاحن. موصل كبل USB



الميكروفون

الصغير

عدسة الكاميرا




الغطاء الخلفي

فتحة بطاقة

الذاكرة

microSD


فتحة بطاقة SIM

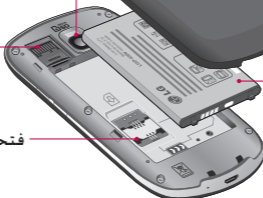

البطارية

التعرّف على الهاتف الخاص بك

2 أدخل بطاقة SIM داخل حامل بطاقة SIM. تأكد من كون ناحية الملامسات الذهبية الموجودة على البطاقة موجهة نحو الأسفل.

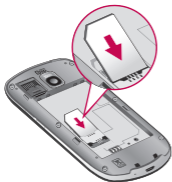

3 أدخل البطارية في مكانها من خلال محاذاة الملامسات الذهبية الموجودة على الهاتف والبطارية.



تركيب بطاقة SIM والبطارية

قبل البدء باستكشاف الهاتف الجديد، يجب أن تقوم بإعداده. لإدراج بطاقة SIM والبطارية:

1 لإزالة الغطاء الخلفي، امسك الهاتف بيدك بقوة، وباليد الأخرى، اضغط بقوة بإبهامك على الغطاء الخلفي، وارفع غطاء البطارية بالسبابة.



4 اعد تركيب الغطاء الخلفي للهاتف.



تثبيت بطاقة الذاكرة

لتخزين ملفات وسائط متعددة مثل الصور الملتقطة من خلال كاميرا مدمجة، يجب أن تقوم بإدخال بطاقة ذاكرة إلى الهاتف.

لإدخال بطاقة الذاكرة:

- 1 قم بإيقاف تشغيل الهاتف قبل إدخال بطاقة الذاكرة أو إزالتها. انزع الغطاء الخلفي.



- 2 افتح غطاء حماية الفتحة وأدخل بطاقة الذاكرة في الفتحة. تأكد من كون ناحية الملامسات الذهبية موجهة نحو الأسفل.

شحن الهاتف



ملاحظة: يجب شحن البطارية بالكامل أولاً لتحسين فترة عمل البطارية.

ملاحظة: الهاتف LG-P500 مزود بهوائي داخلي. احرص على عدم خدش أو تلف هذا الجانب الخلفي، إذ قد يؤدي ذلك إلى توقف الجهاز عن التشغيل.

التعرّف على الهاتف الخاص بك

⚠️ تحذير!


لا تقم بإدراج بطاقة الذاكرة أو إخراجها عندما يكون الهاتف في وضع التشغيل، وإلا فقد يلحق الضرر ببطاقة الذاكرة والهاتف. وقد تلتف البيانات المحزنة في بطاقة الذاكرة.



إعادة تهيئة بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهياً أصلاً. إذا لم يتم إعادة تهيئة بطاقة الذاكرة، فعليك إعادة تهيئتها قبل أن تبدأ باستخدامها.

ملاحظة: يتم حذف كل الملفات الموجودة على البطاقة عندما تقوم بإعادة تهيئة البطاقة. ملاحظة: إذا توفر محتوى على بطاقة الذاكرة، قد تكون بنية الحافظة مختلفة بعد إعادة التهيئة نظراً لحذف كل الملفات. تلميح! إذا سبق أن تمت إزالة بطاقة الذاكرة، فيمكنك اتباع الخطوات التالية لتهيئتها. المس التطبيقات < الإعدادات < تخزين الهاتف و بطاقة SD < إعادة تهيئة بطاقة SD.



3 أغلق غطاء حماية الفتحة.



الشاشة الرئيسية الخاصة بك


إقفال الهاتف

إلغاء قفل.

تنبيه: لا يمكنك إلغاء قفل الهاتف عند حدوث أكثر من 5 أخطاء في رسم النقش. في هذه الحالة، سيتم حذف المعلومات الشخصية والبيانات التي تم تنزيلها.

شاشة إلغاء القفل

عندما لا يكون الهاتف LG-P500 قيد الاستخدام، يعود إلى شاشة القفل. حرّك اصبعك من اليسار إلى اليمين لإلغاء قفل الشاشة.

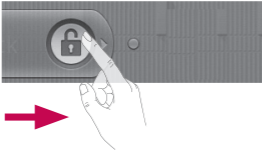

اضغط على مفتاح الطاقة لإقفال الهاتف LG-P500. عند عدم استخدامه، يساعد ذلك على منع الضغط على أي من المفاتيح بطريق الخطأ وعلى توفير طاقة البطارية.

إذا لم تستخدم الهاتف لفترة معينة، يتم استبدال الشاشة الرئيسية أو الشاشة الأخرى التي تقوم بعرضها بشاشة القفل لتوفير طاقة البطارية.


- إذا كان ثمة برامج قيد التشغيل أثناء تعيين النقش، فقد تبقى قيد التشغيل في وضع القفل. يُنصح بإنهاء كل البرامج قبل دخول وضع القفل لتجنّب أي رسوم غير ضرورية، (مثلاً المكالمات الهاتفية، والوصول إلى ويب واتصالات البيانات)

ضبط نقش إلغاء القفل: يمكنك رسم نقش إلغاء القفل الخاص بك من خلال توصيل أربع نقاط أو أكثر. تقفل شاشة الهاتف عند تعيين نقش. ارسم النقش الذي قمت بتعيينه على الشاشة لإلغاء قفل الهاتف.

تنبيه: يجب إنشاء حساب Gmail الخاص بك أولاً عند تعيين نقش

الشاشة الرئيسية الخاصة بك

ملاحظة: قد تخلق بعض صور الشاشات وهذا يتوقف على موفر خدمة الهاتف. تلميح! لإضافة رمز تطبيق إلى الشاشة الرئيسية. المس باستمرار التطبيق الذي تريد إضافته إلى الشاشة الرئيسية.

تلميح! لحذف رمز تطبيق من الشاشة الرئيسية. اضغط باستمرار فوق رمز الاختصار الذي تريد حذفه واسحبه إلى .

تلميح! لا يمكنك حذف التطبيقات المحملة مسبقاً. (يمكن حذف رموزها فقط من الشاشة.)

العودة إلى تطبيقات مستخدمة مؤخراً

المس مفتاح الشاشة الرئيسية واضغط عليه. ستظهر الشاشة إطاراً منبثقاً مع رموز تطبيقات استخدمتها مؤخراً.

وضع الصامت

المس  ليصبح  في نافذة الإعلام أو في حال عدم استخدام نقش إلغاء القفل، ما عليك إلا سحب  إلى اليسار.



لتنشيط الهاتف. اضغط على مفتاح القائمة أو الشاشة الرئيسية أو الرجوع أو الطاقة أو البحث. تظهر شاشة القفل. المس رمز القفل وقم بتمرير إصبعك إلى الجانب الأيمن لإلغاء قفل الشاشة الرئيسية. تفتح الشاشة الأخيرة التي كنت تستخدمها.


الصفحة الرئيسية

اسحب بإصبعك إلى اليسار أو اليمين لعرضها.

ويمكنك تخصيص كل لوحة مع عناصر واجهة الاستخدام. وتكون اختصارات للتطبيقات. والحافظات والخلفيات المفضلة لديك.

نافذة الإعلام

يتم تشغيل نافذة الإعلام في أعلى الشاشة.

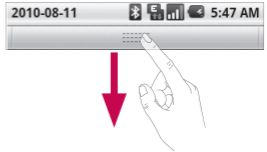

المس نافذة الإعلام ومررها نحو الأسفل بإصبعك. أو المس مفتاح القائمة وحدد الإعلانات على الشاشة الرئيسية. يمكنك هنا التحقق من حالة Wi-Fi و بلوتوث وإعلامات أخرى وإدارتها.

إدخال النص

يمكنك أيضاً إدخال نص باستخدام لوحة المفاتيح على الشاشة. تعرض لوحة المفاتيح على الشاشة تلقائياً عندما تحتاج إلى إدخال نص. لعرض لوحة المفاتيح يدوياً، ما عليك إلا لمس حقل النص حيث تريد إدخال النص.

لوحة مفاتيح الهاتف

مفتاح Shift - المس مرة واحدة

لكتابة الحرف التالي بخط كبير.

اضغط مرتين للكتابة بأحرف كبيرة.

مفتاح XT9 - تشغيل أو إيقاف

تشغيل وضع XT9.

مفتاح الضبط

مفتاح الأرقام والرموز - المس

لتغيير إدخال الأرقام والرموز وحجم الأحرف.

مفتاح Enter

مفتاح لإزالة لوحة المفاتيح من

الشاشة.

مفتاح الحذف

التنقل إلى الأمام أو إلى

الخلف بين الأحرف.


الشاشة الرئيسية الخاصة بك

الكلمات

الرد على مكالمة ورفضها

عندما تكون الشاشة مقفلة

اسحب رمز الرد  إلى اليمين.


اسحب رمز الرفض  إلى اليسار لرفض مكالمة واردة. اسحب شريط رسالة الاعتذار من الأسفل إذا أردت إرسال رسالة. إذا كان المتصل غير معروف، لا يكون شريط رسالة الاعتذار متوفراً.


عند إلغاء قفل الشاشة

المس رمز الرد . المس رمز الرفض  لرفض مكالمة واردة.

الرسائل

يجمع الهاتف LG-P500 ميزات إرسال رسائل SMS وMMS في قائمة واحدة بديهية وسهلة الاستخدام.

 **تحذير:** قد يختلف الحد المكوّن من 160 حرفاً من بلدٍ إلى آخر وفقاً لكيفية ترميز SMS واللغة.

تلميح! للتبديل بين لوحة المفاتيح الكاملة ولوحة مفاتيح الهاتف. المس  واختر تخطيطات لوحة المفاتيح.

إعداد حساب Google

عند فتح تطبيق Google للمرة الأولى على الهاتف، سيطلب منك تسجيل الدخول بحساب Google الموجود والخاص بك. سيطلب منك إنشاء حساب Google إذا لم يكن لديك حساباً.

هام

- تعمل بعض التطبيقات، مثل التقويم، مع حساب Google الأول الذي قمت بإضافته فقط. إذا كنت تخطط لاستخدام أكثر من حساب Google واحد مع الهاتف، تأكد من تسجيل الدخول إلى الحساب الذي تريد استخدامه مع هذه التطبيقات أولاً. عند تسجيل الدخول، تتم مزامنة جهات الاتصال، ورسائل Gmail، وأحداث التقويم ومعلومات أخرى من هذه التطبيقات والخدمات على ويب مع الهاتف.



تحذير: إذا تمت إضافة صورة، أو ملف فيديو أو ملف صوتي إلى رسالة SMS، فسيتعمد تحويلها تلقائياً إلى رسالة MMS، وسيفرض رسم عليك وفقاً لذلك.

فتح البريد الإلكتروني وشاشة الحسابات

يمكنك استخدام تطبيق البريد الإلكتروني لقراءة البريد الإلكتروني من خدمات أخرى غير خدمة Gmail. يعتمد تطبيق البريد الإلكتروني أنواع الحسابات التالية: POP3 و IMAP و Exchange.

الشبكات الاجتماعية

بواسطة هاتفك، يمكنك التمتع بالشبكات الاجتماعية وإدارة مدونتك الصغيرة في مجتمعات على الإنترنت، يمكنك تحديث حالتك الحالية، وتحميل صور وعرض تحديثات حالات أصدقائك الفعلية.

يمكنك إضافة Facebook و Twitter إلى هاتفك.


ملاحظة: قد تفرض تكاليف إضافية عند الاتصال بخدمات على إنترنت واستخدامها. للحصول على تفاصيل تتعلق بالرسوم المفروض على البيانات، اتصل بموفر الشبكة.

الكاميرا

التعرّف على محدّد المنظر

السطوع - يعمل هذا الخيار على تحديد مقدار ضوء الشمس الداخِل للصورة والتحكّم فيه. قم بتمرير مؤشر السطوع على طول الشريط باتجاه علامة "-" للحصول على صورة أقل سطوعًا أو باتجاه علامة "+" للحصول على صورة أكثر سطوعًا.

التكبير/التصغير - تكبير أو تصغير. كطريقة بديلة يمكنك استخدام مفاتيح مستوى الصوت الجانبية.

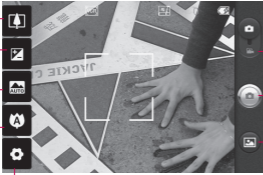

وضع الفيديو - قم بتمرير هذا الرمز لأسفل للتبديل إلى وضع الفيديو.

التقاط صورة

المعرض - يمكنك هذا الخيار من الوصول إلى الصور المحفوظة من داخل وضع الكاميرا. ما عليك سوى لمس. وسيظهر الاستوديو على الشاشة.

الاعدادات - المس هذا الرمز لفتح قائمة الاعدادات. انظر استخدام الاعدادات المتقدمة.

التركيز - المس هذا الرمز لتحديد قائمة الخيارات. راجع استخدام وضع التركيز.

وضع المشهد - اختر من بين تلقائي وعمودي وأفقي ورياضة وليلي. وغروب الشمس.

ملاحظة: حتّاج لإدخال بطاقة ذاكرة أولاً لالتقاط صورة. بدون إدخال بطاقة ذاكرة. لن تتمكن من التقاط صور وحفظها.

بمجرد التقاط الصورة

مشاركة المس لمشاركة صورتك
كـ بلوتوث أو Email أو
Gmail أو Facebook
أو الرسائل أو Picasa أو
Twitter.

ملاحظة: قد يتم فرض رسوم إضافية عند
تنزيل رسائل MMS أثناء التجوال.

تعيين كـ المس لاستخدام الصورة
كرمز للاسم أو خلفية
للشاشة.

إعادة التسمية المس لتعديل اسم
الصورة المحددة.

تطبيقات Google


Google Maps™


تحقق من موقعك الحالي وحركة المرور واحصل على التوجيهات للوصول إلى وجهتك. يجب أن يتم توصيل LG-P500 بـ Wi-Fi أو 3G/GPRS.

ملاحظة مهمة: قد لا تعمل هذه التطبيقات عندما لا يدعمها موفر الخدمة

ملاحظة: لا تغطي Google Maps™ كل المدن والبلدان.


اضغط على مفتاح القائمة لاستخدام الخيارات:

البحث  - أدخل المكان الذي تريد البحث عنه.

الاتجاهات  - يتيح لك هذا الخيار العثور على طريق المكان الذي


أدخلته. المس  لإدخال البيانات .

اختر من بين الخيارات جهات الاتصال أو الإشارة على الخريطة أو موقعي الحالي.


الطبقات  - يمكنك تبديل

العرض من حركة المرور إلى القمر الاصطناعي أو الأرض. اضغط على

Latitude فترى موقع جهات الاتصال من حساب Google.

موقعي  - أشر إلى موقعك الحالي على الخريطة.

الانضمام إلى Latitude  - شارك موقعك مع Google والأصدقاء الذين تختارهم.

المزيد  - امسح الخريطة أو اعثر على عناصر موضوع عليها علامة نجمة والكثير غير ذلك.

Market™

يتيح لك Android Market™ تنزيل تطبيقات وألعاب مفيدة.

Google Mail™

تتم مزامنة Google Mail™ تلقائياً على الهاتف مع حساب Google Mail™ على ويب. ويتوقف ذلك على إعدادات المزامنة.

Google Talk™

Google Talk™ هو برنامج مراسلات فورية على Google. يتيح لك هذا الخيار التواصل مع الذين يستخدمون Google Talk™ أيضاً.

ThinkFree Office

يتيح لك ThinkFree Office قراءة المستندات، ويوفر وظائف تعديل محدودة لـ Microsoft Word و Excel و PowerPoint، ولكن لا يمكنك تعديل ملف PDF. المس باستمرار ملفاً، فتتوفر خيارات الفتح، والتحميل، وإعادة التسمية، والنقل، والنسخ، والحذف والإرسال والخصائص. يتوقف ذلك على نوع الملف.



الإطار - يظهر كل الإطارات المفتوحة.

تحديث - المس لتحديث صفحة ويب.

إعادة التوجيه - ينقلك هذا الخيار إلى الصفحة التالية التي اتصلت بها بعد الصفحة الحالية. هذا المفهوم مخالف لمفتاح الرجوع، الذي ينتقل إلى الصفحة السابقة.

Wi-Fi

تشغيل Wi-Fi

من الشاشة الرئيسية، افتح نافذة الإعلام والمس  للتشغيل. من القائمة، اختر الاعدادات < اعدادات الاتصالات اللاسلكية و الشبكات <  Wi-Fi.

لاتصال بشبكة Wi-Fi

اختر شبكة Wi-Fi التي تريد الاتصال بها، إذا رأيت ، فتحتاج إلى إدخال كلمة المرور للاتصال.

تلميح!

إذا كنت خارج منطقة Wi-Fi واخترت اتصال الجيل الثالث (3G)، فقد تفرض رسوم إضافية.



ويب

المتصفح

ملاحظة: يتم فرض رسوم إضافية عند الاتصال بهذه الخدمات وتنزيل المحتوى. اتصل بموفر الشبكة للتحقق من رسوم البيانات.

استخدام الخيارات

اضغط على مفتاح القائمة لعرض الخيارات.

 إطار جديد - فتح إطار جديد.
 الإشارة المرجعية - إضافة/إظهار إشارة مرجعية. إظهار الموقع الذي تتم زيارته بكثرة والمحفوظات.

اتصال USB

(إضافية).

تحديث برنامج الهاتف

تحديث برنامج الهاتف المحمول LG من إنترنت

للحصول على مزيد من المعلومات حول استخدام هذه الوظيفة، يرجى زيارة الموقع

http://update.lgmobile.com أو
http://www.lg.com/common/index.jsp ← حدد البلد واللغة.

تسمح لك هذه الميزة بتحديث أحدث إصدار لبرامج الهاتف الثابتة بسهولة من إنترنت من دون الحاجة إلى زيارة مركز الخدمة.

بما أن تحديث برنامج الهاتف المحمول الثابت يتطلب انتباه

المستخدم الكامل لمدة عملية التحديث، يرجى التحقق من كل

التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. تجدر الملاحظة إلى أن إزالة كبل بيانات

توصيل الهاتف بجهاز الكمبيوتر USB أو البطارية أثناء التحديث قد يتسبب بإلحاق ضرر بالغ بهاتفك المحمول.

يمكنك مشاركة اتصال إنترنت في الهاتف مع الكمبيوتر

يمكنك توصيل الهاتف بالكمبيوتر USB باستخدام كبل

الإعدادات < الاتصالات اللاسلكية والشبكات < نقطة اتصال فعالة ومحمولة < اتصال USB

انقر فوق تعليمات للحصول على مزيد من المعلومات حول اتصال USB.

اتصال Wi-Fi

استخدم LG-P500 كنقطة Wi-Fi محمولة.

الاعدادات < الاتصالات اللاسلكية والشبكات < نقطة اتصال فعالة ومحمولة < نقطة Wi-Fi فعالة ومحمولة

تلميح!

إذا انتقل الهاتف إلى وضع السكون حتى ان كان متصلاً بشبكة Wi-Fi، فيتم إيقاف اتصال Wi-Fi تلقائياً.

وفي هذه الحالة، إذا كان لهاتفك وصول إلى بيانات الجيل الثالث (3G)،

فقد يتصل بشبكة الجيل الثالث (3G) تلقائياً، وقد تفرض رسوم



وتستخدم بموجب
ترخيص.

حول فيديو DivX®: DivX عبارة عن
تهيئة فيديو رقمية أنشأتها شركة
DivX, Inc. هذا جهاز رسمي من
DivX Certified® وهو يشغل فيديو
DivX. يرجى زيارة الموقع www.divx.com
للحصول على مزيد من
المعلومات وعلى أدوات البرامج
لتحويل ملفاتك إلى ملفات فيديو
بتنسيق DivX.

حول فيديو DivX عند الطلب: يجب
تسجيل جهاز DivX Certified® بهدف
تشغيل أفلام فيديو DivX عند الطلب
(VOD) التي تم شراؤها. للحصول
على رمز التسجيل الخاص بك. حدد
موقع قسم DivX VOD في قائمة
خيار مشغل الفيديو. للحصول على
مزيد من المعلومات حول كيفية
إكمال التسجيل. توجه إلى الموقع
vod.divx.com

DivX Certified®

لتشغيل فيديو

بحجم DivX® 320 x 240

والشعارات التجارية DivX Certified® و DivX®


المفترنة هي علامات تجارية لشركة DivX, Inc.

الملحقات

تم تزويدك بهذه الملحقات مع الهاتف LG-P500.
(قد تكون العناصر الموصوفة أدناه اختياريةً)



كبل البيانات
توصيل الهاتف
بجهاز الكمبيوتر



الشاحن



البطارية



دليل مستخدم
اعرف
المزيد حول
LG-P500.



سماعة
رأس
استيريو

ملاحظة:

- استخدم ملحقات LG الأصلية دائماً.
- يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة إلى أخرى.

قبل استخدام الهاتف المحمول، يرجى قراءة التعليمات أولاً!

- عند تنزيل ملفات فيديو أو موسيقى، يجب أن تكون حقوق النشر محفوظة. يرجى الانتباه إلى أن الملف التالف أو الملف المزدود بملحق خطأ قد يلحق الضرر بالهاتف.

كيفية تشغيل ملفات الموسيقى/ الفيديو في الهاتف

تشغيل ملفات الموسيقى وحدد موقع الملف الذي تريده في القائمة ثم حدده للتشغيل. تشغيل ملفات الفيديو وحدد موقع الملف الذي تريده في القائمة ثم حدده للتشغيل.

كيفية نقل جهات الاتصال من الهاتف القديم إلى الهاتف الحالي

قم بتصدير جهات الاتصال كملف CSV من الهاتف القديم إلى الكمبيوتر لشخصي باستخدام برنامج مزامنة الكمبيوتر الشخصي.

1 قم بتنزيل برنامج المزامنة عبر الهاتف المحمول لـ Android على الموقع www.lg.com وقيم بتثبيته في الكمبيوتر الشخصي. قم بتشغيل البرنامج وتوصيل الهاتف المحمول بالكمبيوتر

كيفية حفظ ملفات الموسيقى/ الفيديو في الهاتف

قم بتوصيل الهاتف بالكمبيوتر باستخدام كبل USB.

المس شريط الحالة على الشاشة الرئيسية واسحبه لأسفل. حدد تم توصيل USB < تشغيل وحدة تخزين USB < فتح حافظه لعرض الملفات. إذا لم تقم بتثبيت LG Android Platform Driver على الكمبيوتر، يجب أن تقوم بتعيينه يدوياً. للحصول على مزيد من المعلومات، راجع 'نقل الملفات باستخدام أجهزة التخزين ذات السعة الكبيرة'.

احفظ ملفات الموسيقى أو الفيديو من الكمبيوتر إلى وحدة التخزين القابلة للإزالة في الهاتف.

- يمكنك نسخ أو نقل ملفات من الكمبيوتر إلى وحدة التخزين القابلة للإزالة في الهاتف باستخدام قارئ البطاقات.

- في حال وجود ملف فيديو مع ملف فرعي (ملف من نوع smi. أو srt. يحمل اسم ملف الفيديو نفسه). ضع الملفين في الحافظة نفسها لعرض الملف الفرعي تلقائياً عند تشغيل ملف الفيديو.

قبل استخدام الهاتف المحمول، يرجى قراءة التعليمات أولاً!

كيفية إرسال البيانات من الهاتف عبر بلوتوث

إرسال البيانات عبر بلوتوث: يمكنك إرسال البيانات عبر بلوتوث من خلال تشغيل التطبيق المناسب خارج قائمة بلوتوث. بخلاف الهواتف المحمولة العادية.

* إرسال صور: قم بتشغيل تطبيق الاستوديو وحدد الصورة < القائمة. انقر فوق مشاركة وحدد بلوتوث < تحقق من كون بلوتوث قيد التشغيل وحدد التحقق من الأجهزة < واختر الجهاز الذي تريد إرسال البيانات إليه من القائمة.

* تصدير جهات اتصال: قم بتشغيل تطبيق جهات الاتصال. المس العنوان الذي تريد التصدير إليه. اضغط على القائمة وحدد مشاركة < بلوتوث < تحقق من كون بلوتوث قيد التشغيل وحدد التحقق من الأجهزة < واختر الجهاز الذي تريد إرسال البيانات إليه من القائمة.

* إرسال العديد من جهات الاتصال المحددة: قم بتشغيل تطبيق "جهات الاتصال". لتحديد أكثر من جهة اتصال واحدة اضغط على القائمة والمس تحديد متعدد. حدد

الشخصي باستخدام كبل USB.

2 حدد الرمز جهات الاتصال. انتقل إلى القائمة < الملف < استيراد وحدد ملف CSV المحفوظ في الكمبيوتر الشخصي.

3 في حال اختلفت الحقول في ملف CSV المستورد عن الحقول في ميزة المزامنة عبر الهاتف المحمول لـ Android، فيجب أن تقوم بتخطيط الحقول. بعد تخطيط الحقول، انقر فوق موافق. سيتم لاحقاً إضافة جهات الاتصال في ميزة المزامنة عبر الهاتف المحمول لـ Android.

4 في حال كشفت ميزة المزامنة عبر الهاتف المحمول لـ Android اتصال الهاتف LG-P500 (باستخدام كبل USB)، انقر فوق "مزامنة" أو "مزامنة جهات الاتصال" لمزامنة جهات الاتصال المحفوظة في الكمبيوتر الشخصي إلى الهاتف وحفظها.

ثم حدد خانة الاختيار "قابل للكشف".

يتم مسح خانة الاختيار بعد 120 ثانية.

- الأنماط المعتمدة هي SDAP و HFP و HSP و OPP و PBAP (الخادم) و FTP (الخادم) و A2DP و AVRCP و DUN.

جهات الاتصال التي تريد إرسالها أو اضغط على مفتاح القائمة والمس تحديد الكل < المس المشاركة < بلوتوث < تحديد الكل. حدد المشاركة < بلوتوث < تحقق من كون بلوتوث قيد التشغيل وحدد التحقق من الأجهزة < واختر الجهاز الذي تريد إرسال البيانات إليه من القائمة.

* الاتصال بـ FTP (يعتمد هذا الهاتف خادم FTP فقط): حدد "الاعدادات" < "الاتصالات اللاسلكية و الشبكات" < "اعدادات بلوتوث". ثم حدد خانة الاختيار "قابل للكشف" وابحث عن أجهزة أخرى. اعثر على الخدمة التي تريد واتصل بخادم FTP.

تلميح: الإصدار هو بلوتوث 2.1 EDR وتمت المصادقة عليه من قبل بلوتوث SIG. وهو متوافق مع الأجهزة الأخرى المصادق عليها من قبل بلوتوث SIG.

- إذا أردت البحث عن هذا الهاتف من أجهزة أخرى، انتقل إلى "الاعدادات" < "الاتصالات اللاسلكية و الشبكات" < "اعدادات بلوتوث".

LG-P500 User Guide



This guide helps you get started using your phone.

If you need more information, please visit www.lg.com.

- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google search, Maps, Google Mail, YouTube, Talk and Android Market are trademarks of Google, Inc.



Congratulations on your purchase of the advanced and compact LG-P500 phone by LG, designed to operate with the latest digital mobile communication technology.

Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.

1. Phone memory

When available space on your phone memory is less than 10%, your phone can not receive a new message. You need to check your phone memory and delete some data such as applications or messages to make more memory available.

To manage the application

- 1 On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications**.
- 2 When all applications appear, scroll and select the application you want to uninstall.
- 3 Tap **Uninstall** and touch OK to uninstall application you desired.

2. Optimising Battery Life

You can extend your battery's life by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Google Mail, Calendar, Contacts, and other applications.
- Some applications you've downloaded may cause your battery's life to be reduced.

Important notice

To check the battery charge level


- 1 On the home screen, touch **Applications** tab and select **Settings> About phone> Status**.
- 2 The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.


To monitor and control what uses the battery

- 1 On the home screen, touch **Applications** tab and select **Settings> About phone> Battery use**.
- 2 The top of the screen displays battery usage time. Either how long since last connected to a power source or, if connected to a power source, how long you were last running on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

3. Installing an Open Source OS

If you install an open source OS on your phone, and do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

 **WARNING:** If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

 **WARNING:** To protect your phone and personal data, download applications only from trusted sources, such as Android Market™. If some applications are not properly installed on your phone, your phone may not work normally or a serious error can be occurred. You will need to uninstall those applications and all of its data and settings from the phone.

4. Using Unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.



WARNING: Precautions to take when using the Pattern Lock, It is very important that you remember the unlock pattern you set. You have 5 opportunities to enter your unlock Pattern, PIN or Password. If you used all the 5 opportunities, you can attempt it after 30 seconds.

When you can't recall your unlock Pattern, PIN, or Password:

If you logged in Google account on the phone and failed to use correct pattern 5 times, tap the Forgot pattern button. Then, you are required to sign in with your Google account to unlock your phone.

If you haven't created a Google account on the phone or you forgot it, you need to perform a factory reset.

Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset.

- 1 Turn the power off.
- 2 Press and hold for over 10 seconds: Power key + Home Key + Down volume key.
- 3 When the power turns on, release these keys.

5. Using Safe Mode and Hard Reset

Using Safe mode

* **To recover from malfunction state of your phone**

- 1 Turn off your phone and reboot. While your phone is powering back on, press and hold the Menu key during LG Logo is displayed. Your phone _____

Important notice

will boot all the way to the main screen and display "safe mode" in lower left corner.

- 2 Select **Settings**>**Applications**>**Manage applications**, and choose the application then select an **Uninstall** icon.
- 3 After uninstalling the application, turn off and reboot your phone.

* Using Hard Reset (Factory Reset)

If it does not restore to the original condition, use **Hard Reset** to initialise your phone. If user turns on the phone with pressing and holding Power + Home + Down volume key at the same time (for 10 seconds), the phone will turn on and perform factory reset immediately.

Please note, after you perform **Hard Reset**, all your data and applications on your phone will be erased and cannot be reversed.

WARNING

If you perform Hard Reset, all user applications and user data will be deleted. Please remember to back up any important data before performing **Hard Reset**.

6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you access a wireless access point, or "hotspot." Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

To turn Wi-Fi on and connect to a Wi-Fi network

- 1 On the home screen, touch **Applications** tab and select **Settings > Wireless & networks > Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn it on and begin scan for available Wi-Fi networks.
 - List of available Wi-Fi networks are displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
 - If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)

- 4 The Status bar displays icons that indicate Wi-Fi status.

7. Using a microSD card

Pictures, along with Music and Video files, can only be saved to external memory.

Before using the built-in camera, you need to insert a micro SD memory card to your phone first.

Without inserting a memory card, you will not be able to save pictures and video you had taken.

Important notice

WARNING:

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Settings > SD Card&phone storage > Unmount SD card.**

8. Opening and Switching Applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources

unnecessarily.

To stop the application you use

- 1 On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications.**
- 2 Scroll to the desire application and touch **Force stop** to stop using it.

TIP Getting back to recent Apps

- Press and hold Home key, then a screen will display a listing the applications you used recently

9. Copy LG PC Suite from SD Card

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of the mobile phone on your PC.

Major Functions of the LG PC Suite IV

- Create, edit and delete phone data conveniently
- Synchronise data from a PC & phone (Contacts, Calendar, Message(SMS), Bookmark, Call log)
- Transfer multimedia files (photos, videos, music) conveniently with a simple drag & drop between a PC and phone
- Transfer the messages from a phone to a PC
- Use your phone as a Modem
- S/W update without losing

your data

Installing LG PC Suite from your microSD memory card

- 1 Insert your microSD memory card on your phone. (It may already be inserted on your phone.)
- 2 Before connecting the USB data cable, make sure that the **Mass storage only** mode is enabled on your phone. (On the applications menu, choose **Settings > SD card & phone storage**, then select **Mass storage only** check box.)
- 3 Connect your phone through USB data cable to your PC.
- 4
 - In the status bar, drag the USB icon.
 - Choose USB Connected and Mount.
 - You can view the mass storage content on your PC and transfer the files.

Important notice

- 5 • Copy the 'LGPCSuiteIV' folder on your mass storage to your PC.
 - Run 'LGInstaller.exe' file on your PC and follow the instructions.

* When LG PCSuite IV installation completed, disable **Mass storage only** mode to run LG PCSuite IV.

NOTE: Please do not remove or delete other program file installed on your memory card this may cause to damage your pre-installed application on the phone.

10. Connecting your phone to a computer via USB

NOTE: To synchronize your phone via USB cable with your PC, you need to install the LG PC suite program on your PC. You can download this program from the LG website (www.lg.com). Go to <http://www.lg.com> and select your region, country & language. Visit LG Website for

more information. As PC suite is embedded at inboxed SD card, you can simply copy it to your PC.

LG-P500 does not support:

- PC Connection via Bluetooth
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- Java Application

User's guide for PC Suite IV is in Help menu after install PC Suite IV.

- 1 Use the USB cable with your phone to connect the phone to a USB port on your computer. You receive a notification that the USB is connected.
- 2 Open the Notification drawer and touch USB connected.

- 3 Touch **Mount** to confirm that you want to transfer files between your phone's microSD card and the computer.

When the phone is connected as USB storage, you receive a notification. Your phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

11. Unlock screen when using data connection

Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just touch it.

Note: When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

Tip! To use a microSD card on your phone again, you need to open the Notification drawer and touch "Turn off USB storage".

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer, carefully follow your computer's instructions to disconnect USB devices correctly, to avoid losing information on the card.

- 1 Safely disconnect the USB device on your computer.
- 2 Open the Notification drawer and touch **Turn off USB storage**.
- 3 Touch **Turn off** in the dialog that opens.

Important notice

12. Hold Phone straight up

Please hold the mobile phone straight up as a regular phone.

While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. It may affect call quality.

13. When Screen freezes

If the phone does not respond to user input or the screen freezes:

Remove the battery, insert it again and power on the phone. If it still does not work, please contact to the service center.

NOTE: Do not connect your phone When you power on/off your PC.

Getting to know your phone

To turn on the phone, press and hold Power key for 3 seconds.

To Turn off the phone, press Power key for 3 seconds, touch Power Off and touch Ok.

Earpiece

Power/Lock key 

Proximity Sensor

- Powers your phone on/off by pressing and holding the key.
- Turns off the screen and locks.

Home key 

- Returns to home screen from any screen.

Menu key 


- Check what options are available.

Back key 

- Returns to the previous screen.

Search key 

- Search the web and contents in your phone.

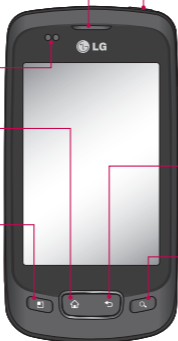

WARNING: Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functionalities.

Do not cover the protective film on the LCD's proximity sensor.

This can cause the sensor to malfunction.

Tip! Press Menu key whenever you tap an application to check what options are available.

Tip! LG-P500 does not support Video call.

Tip! If LG-P500 has errors when you use it or you can not turn it on, remove battery, install it again and turn it on after 5 seconds.

Getting to know your phone

Stereo earphone connector



Power/Lock key



Volume keys

- On the home screen: controls ringer volume.
- During a call: controls your earpiece volume.
- When playing a track: controls volume continuously.



Charger, micro USB cable connector




Microphone connector

Camera lens



Back cover

microSD memory card slot

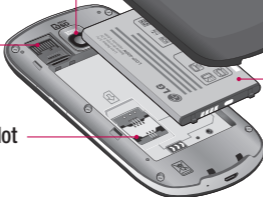

Battery

SIM card slot

Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

- 1 To remove the back cover, Hold the phone on your hand firmly. With the other hand, firmly press your thumb on the back cover. And lift off the battery cover.



- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.



- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery.



- 4 Replace the back cover of the phone.



Charging your phone



NOTE: The battery must be fully charged initially to improve battery lifetime.

NOTE: The LG-P500 has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance.

Installing the memory card


To store multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.

To insert a memory card:

- 1 Turn the phone off before inserting or removing the memory card. Remove the back cover.



- 2 Open the slot protection and insert the memory card into the slot. Make sure the gold contact area is facing downwards.

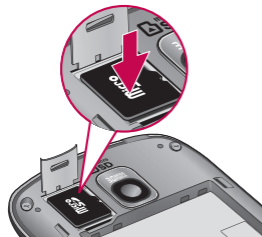

3 Close the slot protection.



WARNING!

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on the card are deleted when you format the card.

NOTE: If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

Tip! If your memory card is already Unmount, you can use the following step to format it. Touch **Applications > Settings > SD card & phone storage > Format SD Card.**

Your Home screen

Proximity sensor

When receiving and making calls, this sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.

Lock your phone

When you are not using LG-P500, Press the power key to lock your phone. This helps prevent accidental presses and saves battery power.

Also, If you do not use the phone for a while, the home screen or other screen you are viewing, is replaced with the lock screen to conserve the battery.

- If there are any programs running when you lock your phone, they may be still running in lock mode. It is recommended to exit all programs before entering

the lock mode to avoid unnecessary charges. (e.g., phone call, web access and data communications)

Setting unlock pattern: You can draw your own unlock pattern by connecting four or more dots.

If you set a pattern, the phone's screen is locked. To unlock the phone, draw the pattern you set on the screen.

Caution: When you set an unlock pattern, you need to create your Gmail account first.



Caution: If there are more than 5 pattern drawing errors in a row, you cannot unlock the phone. In this case, your personal information and downloaded data will be deleted.


Unlock screen

Whenever your LG-P500 is not in use, it will return to the lock screen. Touch the lock icon and drag your finger to the right to unlock the screen.



Silent Mode

From Notification drawer, touch  Or if you don't use unlock pattern, simply drag  to the left.



To wake up your phone, press **Menu, Home, Back, Search** or **Power** key. The lock screen will appear. Touch the lock icon and drag your finger to the right to unlock home screen or the last screen you were working .


Home screen

Simply swipe your finger to the left or right to view them.

You can also customise each panel with widgets, shortcuts which are shortcuts to your favourite applications, folders and wallpapers.

NOTE: Some screen images may be different depending on your phone provider.

Tip! To add an application icon to home screen, touch and hold an application you want to add to home screen.


Tip! To delete an application icon on the home screen, click and hold the shortcut icon you want to delete and drag to .

Getting back to a recently used applications

Touch and hold the Home key. The screen will show you a pop up with icons of applications that you've used recently.

Notification drawer

The notification drawer runs across the top of your screen.

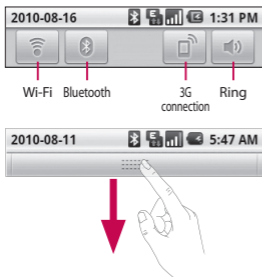

Touch and slide the notification drawer down with your finger. Or, on the home screen, touch **Menu** key and select **Notifications**. Here, you can

check and manage Wi-Fi, Bluetooth, 3G Connection, Silent mode status as well as other notifications.

Entering text

You can also enter text using the onscreen keyboard. The onscreen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Phone Keypad


 **Shift Key** - Touch once to capitalize the next letter you type. Double-tap for all caps.

 **XT9 Key** - Turn on or off XT9 Mode.



 **Setting key**


 **Number and Symbols Key** - Touch to change input to number and symbol entry. caps.

 **Enter Key**

 **Key** Remove keypad from the screen.

Delete Key

  Go forward or backward between letters.

Tip! To switch between Qwerty Keypad and Phone Keypad, Touch  and choose keypad Types.

Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.

IMPORTANT


- Some applications, such as Calendar, work only with the Google Account. If you plan to use more than one Google Account with your phone you have option to use more than one google account, When you sign in, your contacts, Gmail


mails, Calendar events, and other information from these applications and services on the web are synchronized with your phone.

Calls



Answering and rejecting a call

When screen locked

Drag the **Answer** icon  to the right.


Drag **Decline** icon  to the left reject an incoming call. Drag Excues msg bar bottom to up if you want to send one. If the caller is unknow, this Excuse msg bar is not available.


When screen unlocked

Touch the **Answer** icon  .
Touch **Decline** icon  to reject an incoming call.

Messaging

Your LG-P500 combines SMS and MMS into one intuitive, easy-to-use menu.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded and language.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

Opening Email and the Accounts Screen

You can use the **Email** application to read email from services like Gmail. The Email application supports the following account types: POP3, IMAP and Exchange.

Social Networking

With your phone, you can enjoy the social networking and manage your micro-blog in on-line communities. You can update your current status upload photos and view your friends' status updates real-time. You can add your Facebook, Twitter to your phone.

NOTE: An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys.



Video mode – Slide down this icon to switch to video mode.

Taking a photo

Gallery – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Focus – Touch this icon to select the options menu. See **Using the focus mode**.

Scene mode – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night**, and **Sunset**.

NOTE: You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to take a picture.

Camera

Once you've taken the photo

Share Touch to share your photo via **Bluetooth, Email, Facebook, Gmail, Messaging, Picasa** or **Twitter**.

NOTE: Additional charges may apply when MMS messages are sent or downloaded while roaming.

Set as Touch to use the image as **Contact icon** or **Wallpaper**.

Rename Touch to edit the name of the selected picture.

Google applications



Maps


Check your current location and traffic and receive directions to your destination. The LG-P500 must be connected to Wi-Fi or 3G/GPRS.

NOTE: Google Maps does not cover all cities and countries.

Press Menu key to use options:


Search  – Enter the place you are looking for.

Directions  – This will let you find out the route of your entered place. Touch  to input the place. Choose from Contacts or Point on Map or My current location.

Layers  – You can switch view from Traffic to Satellite or Terrain. Tap Latitude then you will see the location of your contacts from Google Account.

My Location  – Point your current location on the map.

Join Latitude  – Share your location with friends you choose and Google.

More  – Clear map or find Starred items and more.

Market

Android Market lets you download useful applications and games.

Gmail

Depending on your synchronization settings, Gmail on your phone is automatically synchronised with your Gmail account on the web.

Talk

Talk is Google's instant messaging program. It lets you communicate with other people who also use Talk.

ThinkFree Office

ThinkFree Office allows you to read documents, and provides limited edit functions for Microsoft Word, Excel and PowerPoint. But You can not edit PDF file.

Touch and hold a file, then Open, Upload, Rename, Move, Copy, Delete, Send and Properties options are available. This is depending on the file type.

The Web

Browser

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using options


Press the **Menu** key to view options.

 **New window** – Open a new window.

 **Bookmark** – Add/Show Bookmark, show Most Visited Site and History.


 **Windows** – Show all your open windows.


 **Refresh** – Touch to refresh the web page.

 **Forward** – Goes to the page you connected later than current page. This is opposite concept with Back key, which goes to the previous page.


Wi-Fi

Turn on Wi-Fi

From Home Screen , open Notification drawer and touch  on.

From Menu, Choose settings > Wireless & network settings > Wi-Fi .

To connect to Wi-Fi

Choose Wi-Fi network you want to connect. If you see  , you need to enter password to connect.

TIP!

If you are out of Wi-Fi area and choose 3G connection, additional charges may be applied.

USB tethering

You can share your phone's internet connection with your computer.

You can tether your phone to your computer with a USB cable.

Settings > Wireless & network settings > Tethering & portable hotspot > USB tethering

For more information regarding USB tethering, click Help.

TIP!

To use USB Tethering, you need to install PC Suite on to your PC first.

Wi-Fi Tethering

Use your LG-P500 as portable Wi-Fi hotspot or share LG-P500's data connection via usb

Settings > Wireless & network settings > Tethering & portable

hotspot > Portable Wi-Fi hotspot

TIP!

If your phone turns into sleep mode even when it is connected to Wi-Fi, the Wi-Fi connection will be disabled automatically.

In this case, if your phone has access to 3G data, it may be connected to the 3G network automatically, and additional charges may be applied.)

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a

service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

DivX Mobile **DIVX**

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.


DivX Certified® to play DivX® video up to 320 x 240.

DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.

Accessories

These Accessories are available for use with the LG-P500.
(Items described below may be optional.)

Charger



Data cable

Connect your LG-P500 and PC.



Battery



User Guide

Learn more about your LG-P500.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Before using the mobile phone, please read first!

How to save music/video files to the phone

Connect your phone to the PC using the USB cable.

Touch and drag down the status bar on the home screen. Select **USB connected > Turn on USB storage > select OK > Open folder to view files.**

If you didn't install LG Android Platform Driver on your PC, you need set it manually.

For more information, refer to 'Transferring files using mass storage devices' .

Save music or video files from the PC to the phone's removable storage.

- You may copy or move files from the PC to the phone's removable storage using a card reader.
- If there is a video file with a subtitle file (.smi or .srt file with the same name as the video file), place them in the same

folder to display the subtitle automatically when playing the video file.

- When downloading music or video files, copyright must be secured. Please note that a corrupted file or file with a wrong extension may cause damage to the phone.

How to play music/video files in the phone

Playing music files

Locate the file you want in the list and select it to play.

Playing video files

Locate the file you want in the list and select it to play.

How to move the contacts from the old phone to the current phone

Export your contacts as a CSV file from your old phone to the PC using a PC sync program.

- 1 Download Mobile Sync for Android at www.lg.com and install it in the PC. Run the program and connect your Android mobile phone to the PC using the USB cable.
- 2 Select the **Contacts** icon. Go to **Menu > File > Import** and select the CSV file saved in the PC.
- 3 If the fields in the imported CSV file are different from the ones in Mobile Sync for Android, you need to map the fields. After mapping the fields, click OK. Then, the contacts are added in Mobile Sync for Android.
- 4 If the connection of LG-P500 phone (using the USB cable) is detected by Mobile Sync for Android, click "Sync" or "Sync contacts" to synchronize the contacts saved in the PC to your phone and save them.

How to send data from your phone via Bluetooth

Sending data via Bluetooth:

You can send data via Bluetooth by running a corresponding application, not from Bluetooth menu, unlike regular mobile phones.

- * **Sending pictures:** Run the Gallery application and select **Picture > Menu**. Click **Share** and select **Bluetooth > Check If Bluetooth is turned on** and select **Scan for devices > Choose the device you want to send data from the list**.

Before using the mobile phone, please read first!

* **Exporting contacts:** Run the Contacts application. Touch the address you want to export to. Press **Menu** and Select **Share > Bluetooth > Check If Bluetooth is turned on** and select **Scan for devices >** Choose the device you want to send data from the list.

* **Sending multi-selected contacts:** Run the "Contacts" application. To Select more than one contact press Menu key and touch **Multiselect** . Select the contacts you want to send or press **Menu** key and touch **Select all to select all the contacts and > Touch Share > Bluetooth > Select all**. Select **Share > Bluetooth > Check If Bluetooth is turned on** and select **Scan for devices >** Choose the device you want to send data from the list.

* **Connecting to FTP (Only the FTP server is supported on this handset):** Select "Settings"

> "Wireless & networks" > "Bluetooth settings". Then, select the "Discoverable" checkbox and search for other devices by scan for devices option . Find the service you want and connect to the FTP server.

TIP: The version is Bluetooth 2.1 EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

- If you want to search for this phone from other devices, go to "Settings" > "Wireless & networks" > "Bluetooth settings".

Then, select the "Discoverable" checkbox.

The checkbox is cleared after 120 seconds.

- Supported profiles are SDAP, HFP, HSP, OPP, PBAP (server), FTP (server), A2DP, AVRCP, and DUN.