



ไทย
ENGLISH

คู่มือการใช้

LG-A100

P/NO : MFL67206605 (1.0)

www.lg.com



LG-A100 | คู่มือการใช้

คู่มือนี้จะช่วยให้คุณทำความรู้จักโทรศัพท์มือถือใหม่ของคุณ ซึ่งจะช่วยให้คุณเข้าใจที่เป็นประโยชน์ของคุณสมบัติต่างๆ ในโทรศัพท์ของคุณ

ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินการตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบ จากตลาดลักลอบนำเข้าสินค้า รวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับ บริการทางด้านบริการประกันสินค้าอย่างเป็นทางการ เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนังสือความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่น ๆ ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบบร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์



สารบัญ

| | |
|---|----|
| เริ่มทำความรู้จักกับโทรศัพท์ของคุณ..... | 3 |
| การใส่ซิมการ์ดและการชาร์จแบตเตอรี่ . | 4 |
| ข้อมูลบนหน้าจอ..... | 5 |
| เมนูและตัวเลือก | 6 |
| การป้อนข้อความ | 7 |
| การอ้างอิงคุณสมบัติอย่างย่อ | 10 |
| คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ | 16 |
| การแก้ปัญหา..... | 23 |
| อุปกรณ์เสริม..... | 26 |
| ข้อมูลทางเทคนิค | 27 |

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



การใส่ซิมการ์ดและการชาร์จแบตเตอรี่

การใส่ซิมการ์ด

เมื่อคุณสมัครใช้บริการเครือข่ายโทรศัพท์มือถือ คุณจะได้รับซิมการ์ดพร้อมกับรายการละเอียดการสมัครขอรับบริการ เช่น PIN ของคุณ บริการเสริมที่มีให้เลือกใช้ได้ และอื่นๆ

ข้อสำคัญ!

- > ซิมการ์ดพลาสติกและขั้วสัมผัสอาจชำรุดเสียหายได้ง่ายหากถูกขูดขีดหรือหักงอ ดังนั้น จึงควรใช้งานใส่ หรือถอดการูดด้วยความระมัดระวัง เก็บซิมการ์ดทั้งหมดให้พ้นมือเด็กเล็ก
- > รองรับเฉพาะซิม 2G/2.5G เท่านั้น

ภาพประกอบ

- 1 เปิดฝาครอบแบตเตอรี่
- 2 ถอดแบตเตอรี่ออก
- 3 ใส่ซิมการ์ด
- 4 ใส่แบตเตอรี่
- 5 ปิดฝาครอบแบตเตอรี่
- 6 ชาร์จแบตเตอรี่

คำเตือน: ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

1



2



3



4




5



6



ข้อมูลบนหน้าจอ

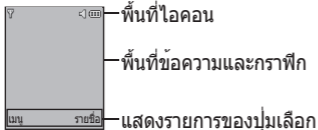


ไอคอนบนหน้าจอ

| | |
|--|---|
| | แสดงความแรงของสัญญาณเครือข่าย |
| | แสดงระดับประจุไฟของแบตเตอรี่ |
| | แสดงข้อความตัวอักษรใหม่ |
| | แสดงข้อความเสียงใหม่ |
| | แสดงว่ามี การตั้งนาฬิกาปลุก |
| | แสดงว่าโทรศัพท์ของคุณใช้การตั้งค่าทั่วไป |
| | แสดงว่าโทรศัพท์ของคุณใช้การตั้งค่าเงียบ |
| | แสดงว่าโทรศัพท์ของคุณใช้การตั้งค่านอกอาคาร |
| | แสดงว่าโทรศัพท์ของคุณใช้การตั้งค่าชุดหูฟัง |
| | แสดงว่าสายเรียกเข้าทั้งหมดจะถูกโอนไปยังอีกหมายเลขอื่น |
| | แสดงว่าโทรศัพท์ของคุณอยู่ในโหมด Flight |
| | แสดงนัดหมายใหม่ |

เมนูและตัวเลือก

โทรศัพท์ของคุณมีชุดฟังก์ชันที่ช่วยให้คุณปรับแต่งได้ โดยฟังก์ชันดังกล่าวนี้มีอยู่ในเมนูและเมนูย่อยต่างๆ ซึ่งคุณสามารถเข้าใช้ได้โดยผ่านทางปุ่มเลือกซ้ายและขวา ขอความที่ด้านล่างของหน้าจอซึ่งอยู่ด้านบนของปุ่มเลือกจะแสดงฟังก์ชันปัจจุบัน

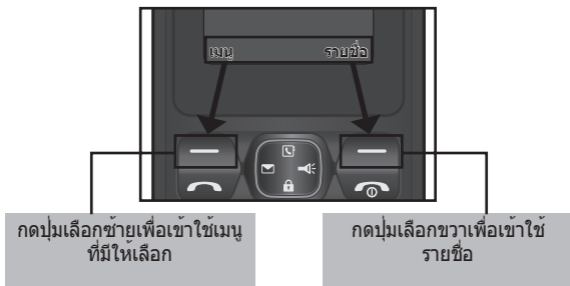

การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษรได้โดยใช้ปุ่มกดของโทรศัพท์ ตัวอย่างเช่น การบันทึกชื่อในรายชื่อ การเขียนข้อความ และการทำตารางนัดหมายในปฏิทินล้วนแต่ต้องใช้การป้อนข้อความทั้งสิ้น ในการเปลี่ยนโหมดให้กดปุ่ม **#** :

| สัญลักษณ์ | ฟังก์ชัน (โหมด English Smart) |
|------------|-------------------------------|
| 123 | ตัวเลข |
| abc | มัลติแท็บ Abc |
| abc | มัลติแท็บ abc |
| ABC | มัลติแท็บ ABC |



โหมด T9

ในโปรแกรมแก้ไข กดตัวเลือก เลือก "ตั้งค่า T9" เลือกเปิด โหมดนี้ให้คุณป้อนคำได้โดยการกดเพียงครั้งเดียวต่อหนึ่งตัวอักษร แม้ว่าแต่ละปุ่มบนแผงปุ่มกดนั้นจะมีตัวอักษรมากกว่าหนึ่งตัวอักษรก็ตาม โหมด T9 จะเปรียบเทียบการกดปุ่มของคุณกับพจนานุกรมทางภาษาภายในเครื่องโดยอัตโนมัติ เพื่อพิจารณาหาคำที่ถูกกด ดั้งนั้น คุณจึงกดปุ่มน้อยกว่าการป้อนคำโดยใช้โหมด ABC ตามปกติ

การเปิดหรือปิดเครื่อง



คุณสามารถเปิดหรือปิดเครื่องได้โดยการกดปุ่มเปิด/ปิดเครื่องค้างไว้

การโทรออก



- 1 ป้อนหมายเลขโดยใช้ปุ่มกด
- 2 กด  เพื่อเริ่มการโทร
- 3 หากต้องการวางสาย ให้กด 

เคล็ดลับ! ในการป้อน + เมื่อโทรออกต่างประเทศ ให้กดปุ่ม **0** ค้างไว้

การโทรออกโดยใช้รายชื่อ

- 1 กด  (ขึ้น) เพื่อเปิดสมุดแอดเดรส
- 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยใช้ปุ่มกด
- 3 หากต้องการเลื่อนดูรายชื่อ ให้ใช้ปุ่มขึ้นและลง และหากต้องการเลื่อนดูหมายเลขอื่นๆ ให้ใช้ปุ่มซ้ายและขวา
- 4 กด  เพื่อเริ่มการโทร

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้กด **ยอมรับ** หรือกด  เพื่อรับสาย ขณะที่โทรศัพท์ของคุณดังขึ้น ให้เลือก **เจียบ** เพื่อปิดเสียงเรียกเข้า วิธีนี้เป็นวิธีที่ดี หากคุณลืมเปลี่ยนรูปแบบเป็น **เจียบ** เมื่ออยู่ในห้องประชุม กด  หรือ **ปฏิเสธ** เพื่อปฏิเสธสายเรียกเข้า

เคล็ดลับ! คุณสามารถเปลี่ยนการตั้งค่าในโทรศัพท์เพื่อรับสายด้วยวิธีอื่นๆ ได้ กด **เมนู** กด **ตั้งค่า** และเลือก **การโทร** เลือก **โหมดตอบรับ** และเลือก **ปุ่มใดๆ** หรือ **เฉพาะปุ่มรับสาย**

- **ปุ่มใดๆ** – คุณสามารถรับสายโดยกดปุ่มใดก็ได้
- **เฉพาะปุ่มรับสาย** – คุณสามารถรับสายได้โดยกดปุ่มส่งเท่านั้น

การเปลี่ยนการตั้งค่าการโทร

คุณสามารถตั้งค่าเมนูที่เกี่ยวข้องกับการโทรได้ กด **เมนู เลือก ตั้งค่า** และเลือก **การโทร**

- **การโอนสาย** – เลือกวิธีการโอนสาย
- **สายเรียกซ้อน** – เลือกใช้งานหรือยกเลิกสายเรียกซ้อน

การตรวจสอบข้อมูลการโทร

คุณสามารถตรวจสอบบันทึกสายทั้งหมด, สายที่ไม่ได้รับ, สายที่โทรออก, สายที่รับ และระยะเวลาการโทรได้ ชื่อและหมายเลข (หากมีอยู่) จะปรากฏขึ้นพร้อมกับวันที่และเวลาที่มีการโทรนั้น และคุณยังสามารถดูระยะเวลาที่คุณโทรได้ด้วย กด **เมนู เลือก ข้อมูลการโทร**

การอ้างอิงคุณสมบัติอย่างย่อ

ข้อความ

การส่งข้อความ

- 1 กด **เมนู** เลือก **ข้อความ** และเลือก **ข้อความใหม่**
- 2 เติเตอร์ข้อความใหม่จะเปิดขึ้น โหมดเริ่มต้นของเติเตอร์ข้อความคือโหมด SMS
- 3 ป้อนข้อความของคุณโดยใช้ระบบช่วยสะกดคำ T9 หรือการป้อนตัวอักษรด้วยตนเอง คุณสามารถสลับโหมดการป้อนข้อความได้โดยกด **#?**
- 4 กด **ตัวเลือก** และเลือก **แทรก** เพื่อเพิ่ม **สัญลักษณ์, รูปแบบอัตโนมัติ, รายชื่อ, นามบัตร**
- 5 กด **ส่งไปที่**
- 6 ป้อนหมายเลขโทรศัพท์หรือกด **ตัวเลือก** และเลือก **รายชื่อ** หรือ **รายการล่าสุด** เพื่อเปิดลิสต์รายชื่อ
- 7 กด **ตัวเลือก** และเลือก **ส่ง**
 - **กดเข้า** – เครื่องจะแจ้งเตือนให้ทราบเมื่อมีข้อความเข้า ซึ่งจะบันทึกไว้ที่นี่
 - **ร่าง** – เมนูนี้แสดงข้อความที่บันทึกไว้
 - **กดออก** – เมนูนี้ช่วยให้คุณดูข้อความที่กำลังจะส่ง หรือส่งไม่สำเร็จ
 - **ส่ง** – เมนูนี้ช่วยให้คุณดูข้อความที่ส่งแล้ว รวมถึงเวลาและเนื้อหาของข้อความได้

- **ฟังข้อความเสียง** – เมนูนี้ช่วยให้คุณเข้าใช้ระบบฝากข้อความเสียงของคุณได้สะดวกรวดเร็ว
- **บริการข้อมูล** – ข้อความบริการข้อมูลคือข้อความตัวอักษรที่เครือข่ายส่งไปที่โทรศัพท์ของคุณ
- **ข้อความอัตโนมัติ** – มีข้อความที่กำหนดไว้ล่วงหน้าในรายการ คุณสามารถดูและแก้ไขข้อความสำเร็จรูปหรือสร้างข้อความใหม่
- **ตั้งค่า** – เมนูนี้ช่วยให้คุณตั้งค่าคุณสมบัติผู้ให้บริการเครือข่ายของคุณ

สมุดโทรศัพท์

คุณสามารถค้นหารายชื่อในรายชื่อของคุณได้

- 1 กด **รายชื่อ** และเลือก **ค้นหา** เลือก **รายชื่อ** จากหน้าจอ **เมนู** หรือกด **☐** (ปุ่มเลือกขวา) จากหน้าจอสแตนด์บาย
 - 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยใช้ปุ่มกด
 - 3 หากต้องการเลื่อนดูรายชื่อ ให้ใช้ปุ่มขึ้นและลง หากต้องการเลื่อนดูหมายเลขอื่นๆ ให้ใช้ปุ่มซ้ายและขวา
- **ค้นหา** - คุณสามารถค้นหารายชื่อในสมุดโทรศัพท์ของคุณ
 - **รายชื่อใหม่** – คุณสามารถรายชื่อลงในสมุดโทรศัพท์ด้วยการใช้เมนูนี้
 - **โทรด่วน** – กำหนดรายชื่อให้กับปุ่มระหว่าง 2 ถึง 9
 - **คัดลอกทั้งหมด** – คุณสามารถคัดลอกรายการทั้งหมดจากหน่วยความจำซิมการ์ดไปยังหน่วยความจำโทรศัพท์ และจากหน่วยความจำโทรศัพท์ไปยังหน่วยความจำซิมการ์ดได้
 - **ลบทั้งหมด** – คุณสามารถลบรายการทั้งหมดออกจากหน่วยความจำซิมการ์ดหรือหน่วยความจำโทรศัพท์ได้
 - **สถานะความจำ** – คุณสามารถตรวจสอบสถานะหน่วยความจำของซิมและโทรศัพท์ได้

• ข้อมูล

- › เบอร์บริการ – เข้าใช้รายการหมายเลขบริการที่กำหนดให้โดยผู้ให้บริการได้อย่างปลอดภัย
- › เบอร์ส่วนตัว – คุณสามารถบันทึกและตรวจสอบหมายเลขของคุณในซิมการ์ดได้
- › นามบัตร – คุณสามารถบันทึกและตรวจสอบนามบัตรที่มีข้อมูลชื่อของคุณ โทรศัพท์มือถือ โทรศัพท์บ้าน โทรศัพท์ที่ทำงาน และอีเมล และส่งเป็นข้อความได้

ข้อมูลการโทร

คุณสามารถตรวจสอบบันทึกสายทั้งหมด, สายที่ไม่ได้รับ, สายที่โทรออก, สายที่รับ และระยะเวลาการโทรได้ ชื่อและหมายเลข (หากมีอยู่) จะปรากฏขึ้นพร้อมกับวันที่และเวลาที่มีการโทรนั้น และคุณยังสามารถดูระยะเวลาที่คุณโทรได้ด้วย






- **ทุกสาย** – แสดงรายการของทั้งสามประเภท (สายที่ได้รับ/สายที่โทรออก/สายที่ไม่ได้รับ) ตามเวลา
- **สายไม่ได้รับ** – ตัวเลือกนี้ช่วยให้คุณดูหมายเลขที่ไม่ได้รับสาย 20 รายการล่าสุดได้
- **สายโทรออก** – ตัวเลือกนี้ช่วยให้คุณดูสายที่โทรออก (ที่โทรออกหรือพยายามโทรออก) 20 สายล่าสุดได้
- **สายที่ได้รับ** – ตัวเลือกนี้ช่วยให้คุณดูหมายเลขเรียกเข้า 20 รายการล่าสุดได้
- **เวลาโทร** – ช่วยให้คุณสามารถดูระยะเวลาของสายที่โทรเข้าและโทรออกได้

เกมส์

โทรศัพท์ LG-A100 มาพร้อมกับเกมส์เพื่อช่วยให้คุณได้เพลิดเพลินในยามว่าง กด **เมนู** และเลือก **เกมส์**

โปรไฟล์

คุณสามารถเปลี่ยนรูปแบบเสียงได้ โดยเลือกทั่วไป เงียบ นอกอาคาร โหมด Flight และชุดหูฟัง

- **ทั่วไป** – หลังจากตั้งค่ารูปแบบเสียงนี้ สัญลักษณ์  จะปรากฏขึ้นบนหน้าจอสถานะเดสก์ทอป
- **เงียบ** – ปิดเสียงเรียกเข้าและเปิดระบบสั่น เมื่อคุณตั้งค่ารูปแบบเสียงนี้ สัญลักษณ์  จะปรากฏขึ้นบนหน้าจอสถานะเดสก์ทอป
- **นอกอาคาร** – นี่คือนรูปแบบเสียงเริ่มต้น เปิดระดับเสียงเรียกเข้าและเสียงปุ่มกดดังที่สุด เมื่อคุณตั้งค่ารูปแบบเสียงนี้ สัญลักษณ์  จะปรากฏขึ้นบนหน้าจอสถานะเดสก์ทอป
- **โหมด Flight** – เมื่อคุณตั้งรูปแบบนี้, สัญลักษณ์  จะแสดงบนหน้าจอสถานะเดสก์ทอป
- **ชุดหูฟัง** – เมื่อเชื่อมต่อชุดหูฟังกับโทรศัพท์ สัญลักษณ์  จะปรากฏขึ้นบนหน้าจอสถานะเดสก์ทอป คุณสามารถกำหนดแบบเตือนสายเสียงเรียกเข้า ระดับเสียงเรียกเข้า แบบเตือนข้อความ เสียงข้อความ ระดับเสียงข้อความ เสียงปุ่มกด ระดับเสียงปุ่มกด ระดับเสียงเอฟเฟกต์ และระดับเสียงเปิด/ปิด

เครื่องมือ

- **ไฟฉาย** – ปิด/เปิด ไฟฉายโดยตรงผ่านปุ่มนาฬิกาขนาบ
- **เครื่องคิดเลข** – ประกอบด้วยฟังก์ชันมาตรฐาน เช่น บวก ลบ คูณ และหาร
- **นาฬิกาจับเวลา** – ตัวเลือกนี้ช่วยให้คุณใช้ฟังก์ชันนาฬิกาจับเวลาได้

- **ตัวแปลงหน่วย** – แปลงหน่วยวัดให้เป็นหน่วยที่คุณต้องการ
- **เวลาโลก** – ช่วยให้คุณสามารถตรวจสอบเวลาปัจจุบันในโซนเวลาหรือประเทศอื่นได้

สมุดบันทึก

- **ตั้งปลุก** – คุณสามารถตั้งนาฬิกาปลุกได้ 3 เวลาตามเวลาที่กำหนดได้
- **บันทึก** – คุณสามารถลงทะเบียนบันทึกของคุณได้ที่นี้

ปฏิทิน

- **ปฏิทิน** – เมื่อคุณเข้าสู่เมนูนี้ ปฏิทินจะปรากฏขึ้น เคอร์เซอร์รูปสี่เหลี่ยมจะอยู่ที่วันที่ปัจจุบัน คุณสามารถเลื่อนเคอร์เซอร์ไปยังวันที่อื่นได้โดยใช้ปุ่มนาฬิกา

ตั้งค่า

- **วันที่ & เวลา** – คุณสามารถตั้งค่าฟังก์ชันเกี่ยวกับวันที่และเวลาได้
- **ภาษา** – คุณสามารถเปลี่ยนภาษาที่แสดงข้อความบนโทรศัพท์ของคุณ การตั้งค่าเปลี่ยนแปลงนี้มีผลต่อโหมดบ่อนภาษาด้วย
- **แสดง** – คุณสามารถปรับการตั้งค่าหน้าจอของโทรศัพท์ได้
- **การโทร** – คุณสามารถตั้งค่าเมนูที่เกี่ยวข้องกับการโทรได้
- **ล๊อคปุ่มกดอัตโนมัติ** – ล๊อคปุ่มกดอัตโนมัติในหน้าจอสแตนด์บาย

- **ระบบป้องกัน** – เมนูนี้ช่วยให้คุณตั้งค่าโทรศัพท์ได้อย่างปลอดภัย
 - > **คำขอรหัส PIN** – เลือกรหัส PIN ที่เครื่องจะขอให้คุณป้อนรหัสเมื่อคุณเปิดเครื่อง
 - > **ล็อคโทรศัพท์** – เลือกรหัสความปลอดภัยเพื่อล็อคโทรศัพท์ของคุณเมื่อเปิดเครื่อง, เมื่อเปลี่ยนซิม หรือ ทันที
 - > **ป้องกันการโทร** – เลือกรหัสผ่านป้องกันสำหรับสายโทรออกทั้งหมด โทรออกต่างประเทศ โทรออกต่างประเทศแบบข้ามเครือข่าย สายเรียกเข้าทั้งหมด หรือสายเรียกเข้าเมื่อโรมมิ่ง
 - > **กำหนดเบอร์โทรออก** – เลือกรหัส PIN2 เพื่อใช้กำหนดเบอร์โทรออกให้คุณจำกัดการโทรเฉพาะในรายชื่อเท่านั้น
 - > **เปลี่ยนรหัส** – คุณสามารถเปลี่ยน รหัสป้องกัน, รหัส PIN หรือ รหัส PIN2
- **ประหยัดพลังงาน** – หากคุณตั้งค่าเปิดเสมอ คุณสามารถประหยัดพลังงานแบตเตอรี่ได้เมื่อไม่ได้ใช้โทรศัพท์ เลือกเพื่อสลับระหว่างการตั้งค่าประหยัดพลังงาน **เปิดเสมอ**, **เฉพาะกลางคืน** หรือ **ปิด**
- **เลือกเครือข่าย** – คุณสามารถเลือกเครือข่ายที่จะลงทะเบียนได้โดยอัตโนมัติหรือด้วยตนเอง
- **รีเซ็ตการตั้งค่า** – ใช้ **รีเซ็ต** เพื่อเรียกคืนการตั้งค่าจากโรงงาน คุณต้องใช้รหัสป้องกันเพื่อใช้งานฟังก์ชันนี้ รหัสที่กำหนดมาให้คือ "0000"
- **สถานะความจำ** – คุณสามารถตรวจสอบพื้นที่ว่าง และการใช้หน่วยความจำของพื้นที่จัดเก็บแต่ละส่วนได้

□ คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย ข้อมูลโดยละเอียดเพิ่มเติมมีอธิบายอยู่ในคู่มือเล่มนี้

⚠ คำเตือน

- ควรปิดโทรศัพท์เคลื่อนที่ทุกครั้งที่อยู่บนเครื่องบิน
- ห้ามถือโทรศัพท์ในขณะที่ขับรถ
- ไม่ควรใช้เครื่องใกล้สถานีบริการน้ำมัน คลังน้ำมัน โรงงานเคมี หรือบริเวณที่มีการปฏิบัติงานที่เกี่ยวข้องกับการระเบิด
- เพื่อความปลอดภัยของคุณ โปรดใช้แบตเตอรี่และแท่นชาร์จของแท้ที่กำหนดให้เท่านั้น
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดหรือทำให้โทรศัพท์ชำรุดเสียหายได้
- เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี

ข้อควรระวังในการใช้งาน

- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน
- เพื่อหลีกเลี่ยงความเสียหายที่อาจเกิดขึ้น โปรดใช้แต่อุปกรณ์เสริมที่เป็นของแท้เท่านั้น

□ คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ (ต่อ)

- เครื่องส่งสัญญาณวิทยุทุกชนิดสามารถส่งคลื่นรบกวนอุปกรณ์อิเล็กทรอนิกส์ต่าง ๆ ที่อยู่ใกล้เคียง ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย
- ควรทิ้งแบตเตอรี่ตามวิธีที่กฎหมายกำหนด
- ห้ามถอดแยกเครื่องโทรศัพท์หรือแบตเตอรี่

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น LG-A100 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ใดมาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้
- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนักสิบ (10) กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.974 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.653 วัตต์/กก. (10 กรัม)

❑ คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ (ต่อ)

- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื่องเยื่อหนึ่ง (1) กรัม

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

⚠ คำเตือน

- ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้
- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต่อการตรวจสอบ
 - ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
 - ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
 - ไม่ควรทำโทรศัพท์ตก
 - ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
 - สารเคลือบบนตัวเครื่องโทรศัพท์อาจหลุดลอกได้ หากหุ้มด้วยวัสดุหรือสิ่งที่ทำจากไวนิล
 - ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
 - ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
 - อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้

❑ คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ (ต่อ)

- อย่าเคาะหน้าจอด้วยวัตถุมีคม มิฉะนั้นอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากช่องไหลหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่ากดเส้าอากาศโดยไม่จำเป็น

การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องอาจได้รับผลจากคลื่นรบกวนได้
ทำให้มีผลต่อการทำงาน

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาต
เสี่ยงอันตราย หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของ
หัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่อง
ช่วยฟังได้
- ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่
ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี

□ คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ (ต่อ)

- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม เพราะอาจทำให้การทำงานของ หรือทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้ หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดเครื่องใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

หมายเหตุ: แรงดันเสียงที่มากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี

❑ คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ (ต่อ)

- ห้ามชนถ้ำหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์บนเครื่องบินก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บขึ้นส่วนขนาดเล็ก ซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้ยาวนานที่สุด

□ คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ (ต่อ)

- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายรอบครั้ง ก่อนที่จะต้องเปลี่ยนก้อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เนื่องจากประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้ว เพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ

□ การแก้ปัญหา

| ปัญหา | วิธีการแก้ไขที่เป็นไปได้ |
|--|---|
| เปิดเครื่องโทรศัพท์ไม่ได้ | โปรดถอดแบตเตอรี่แล้วใส่ใหม่อีกครั้ง แล้วกด ปุ่มวาง/ เปิดเครื่อง เพื่อเปิดเครื่อง |
| แบตเตอรี่หมด | ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์แสดงการชาร์จบนหน้าจอ |
| แบตเตอรี่ไม่สามารถชาร์จได้อย่างเหมาะสมหรือโทรศัพท์ดับไปเองในบางครั้ง | เช็ดบริเวณขั้วต่อทั้งที่โทรศัพท์และแบตเตอรี่ด้วยผ้าที่สะอาดอ่อนนุ่ม |
| เวลาใช้งานของแบตเตอรี่สั้นลง | หากอายุใช้งานของแบตเตอรี่สั้นลง อาจเนื่องมาจากสภาพการใช้งานของผู้ใช้ จำนวนการโทรมาก หรือระดับสัญญาณอ่อน |
| ข้อผิดพลาดเกี่ยวกับการชาร์จ — อุณหภูมิสูงหรือต่ำเกินไป | ตรวจสอบให้แน่ใจว่าอยู่ในอุณหภูมิแวดล้อมที่เหมาะสม รอสักครู่ จากนั้นชาร์จแบตเตอรี่อีกครั้ง |
| ข้อผิดพลาดเกี่ยวกับการชาร์จ — ใช้เครื่องชาร์จไม่ถูกต้อง | ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น |
| ข้อผิดพลาดเกี่ยวกับการชาร์จ — แบตเตอรี่เสื่อม | เปลี่ยนแบตเตอรี่ |
| ข้อผิดพลาดเกี่ยวกับการชาร์จ — ไม่มีไอคอนแบตเตอรี่ปรากฏขณะชาร์จ | แบตเตอรี่หมดหรือไม่ได้ใช้มาเป็นเวลานาน ไอคอนแบตเตอรี่อาจใช้เวลาสักครู่ในการปรากฏขึ้นมาบนหน้าจอ |

□ การแก้ปัญหา (ต่อ)

| ปัญหา | วิธีการแก้ไขที่เป็นไปได้ |
|---|---|
| ลืมรหัสโทรศัพท์หรือรหัสผ่าน | รหัสโทรศัพท์เริ่มต้นคือ "0000" |
| ป้อน PUK | คุณป้อนรหัส PIN ผิด 3 ครั้งติดต่อกัน โทรศัพท์จึงถูกล็อค โปรดป้อน PUK ที่ผู้ให้บริการให้มา |
| สัญญาณเครือข่ายสูญหาย | คุณอาจอยู่ในบริเวณที่มีระดับสัญญาณอ่อน เปลี่ยนสถานที่โทรแล้วลองใหม่อีกครั้ง คุณพยายามเข้าใช้ตัวเลือกที่คุณไม่ได้สมัครใช้กับผู้ให้บริการ โปรดติดต่อผู้ให้บริการเพื่อสอบถามข้อมูลเพิ่มเติม |
| คุณป้อนหมายเลขโทรศัพท์แล้วแต่โทรศัพท์ไม่หมุนเบอร์ | ตรวจสอบให้แน่ใจว่าคุณกด ปุ่มโทร/รับสาย แล้ว ตรวจสอบให้แน่ใจว่าคุณเข้าใช้บริการเครือข่ายถูกต้อง ตรวจสอบให้แน่ใจว่าคุณไม่ได้ตั้งตัวเลือกป้องกันสายโทรออกไว้ ตรวจสอบให้แน่ใจว่าคุณป้อนรหัสพื้นที่แล้ว |
| ผู้ที่ต้องการติดต่อคุณไม่สามารถติดต่อคุณได้ | ตรวจสอบให้แน่ใจว่าโทรศัพท์ของคุณเปิดอยู่ กด ปุ่มโทร/รับสาย ค้างไว้นานกว่าหนึ่งวินาที ตรวจสอบให้แน่ใจว่าคุณกำลังเข้าใช้บริการเครือข่าย ตรวจสอบให้แน่ใจว่าคุณไม่ได้ตั้งตัวเลือกป้องกันสายโทรเอาไว้ |

□ การแก้ปัญหา (ต่อ)

| ปัญหา | วิธีการแก้ไขที่เป็นไปได้ |
|--|---|
| คู่สนทนาไม่ได้ยินเสียง คุณพูด | ตรวจสอบให้แน่ใจว่าคุณเปิดลำโพงแล้ว ตรวจสอบให้แน่ใจว่าคุณถือโทรศัพท์ไว้ใกล้ปากพอดีแล้ว ไม่ควรโฟนติดตั้งอยู่ด้านล่างของโทรศัพท์ |
| คุณภาพเสียงการสนทนา ไม่ดี | ตรวจสอบสัญลักษณ์ความแรงสัญญาณบนหน้าจอ จำนวนขีดบ่งชี้ระดับความแรงของสัญญาณ ลองย้ายตำแหน่งโทรศัพท์หรือเข้าใกล้หน้าต่างหากคุณอยู่ในอาคาร |
| ไม่มีหมายเลขโทรออกเมื่อ คุณเรียกใช้รายชื่อ | ใช้คุณสมบัติค้นหาสมุดโทรศัพท์เพื่อตรวจสอบว่าหมายเลขได้รับการจัดเก็บอย่างถูกต้องแล้ว บันทึกหมายเลขอีกครั้งหากจำเป็น |
| หากคำแนะนำด้านบนไม่สามารถ รณแก้ปัญหาให้คุณได้ | ให้จดหมายเลขรุ่นของโทรศัพท์และคำบรรยายอาการที่เป็นปัญหาให้ชัดเจน แล้วติดต่อผู้จำหน่ายโทรศัพท์หรือศูนย์บริการ LG เพื่อรับความช่วยเหลือ |

□ อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการสื่อสารส่วนตัวของคุณ

แบตเตอรี่มาตรฐาน



อะแดปเตอร์สำหรับชาร์จแบตเตอรี่



หมายเหตุ

- > ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- > อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

□ ข้อมูลทางเทคนิค

อุณหภูมิแวดล้อม

- > สูงสุด: +55°C (คายประจุ)
+45°C (ขณะชาร์จ)
- > ต่ำสุด: -10°C

ศูนย์บริการ LG โดย

บริษัท แอลจี อีเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน เลขที่ 72/127

ถ. สมเด็จพระเจ้าตากสิน แขวงบวศโล เขตธนบุรี
กรุงเทพฯ 10600

วันและเวลาทำการ: จันทร์-อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757



LG-A100 | USER GUIDE

This guide will help you to understand your new mobile phone. It will provide you with useful explanations of the features on your phone. Some of the contents of this manual may differ from your phone depending on the phone software or your service provider.

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The customer shall bear the cost of one SMS for the product authentication program.

In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.


The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.



Contents

| | |
|--|----|
| Getting to know your phone | 3 |
| Installing the SIM Card and Charging the Battery..... | 4 |
| Display Information | 5 |
| Menu and Options | 6 |
| Entering Text | 7 |
| Quick feature reference..... | 10 |
| Guidelines for safe and efficient use..... | 16 |
| Troubleshooting | 23 |
| Accessories | 26 |
| Technical Data | 27 |

Getting to know your phone

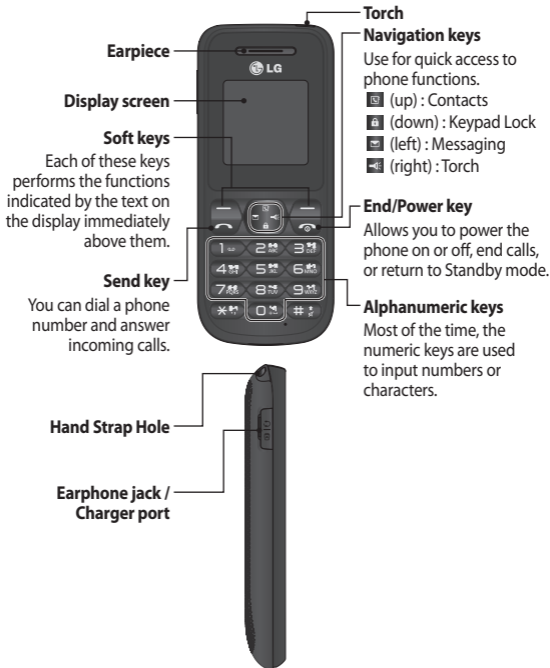

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a mobile phone network, you are provided with a plug-in SIM card which is loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

› The plug-in SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

› only 2G/2.5G SIM supported


Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert the battery
- 5 Close the battery cover
- 6 Charge your battery

WARNING: Do not remove the battery while the phone is switched on, as this may damage the phone.



Display Information

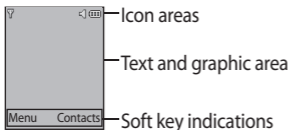


On-Screen Icons

| | |
|--|--|
| | Tells you the strength of the network signal. |
| | Indicates the battery charge level. |
| | Indicates new text message(s). |
| | Indicates new voice message(s). |
| | Indicates that the alarm clock is set. |
| | Indicates that your phone is using the general settings. |
| | Indicates that your phone is using the silent settings. |
| | Indicates that your phone is using the outdoor settings. |
| | Indicates that your phone is using the headset setting. |
| | Indicates that all calls are being diverted to another number. |
| | Indicates that your phone is in Flight mode. |
| | Indicates new schedule(s). |

Menu and Options

Your phone offers a set of functions that allow you to customise it. These functions are arranged in menus and sub-menus, which are accessed via the left and right soft keys. The label at the bottom of the display screen immediately above the soft keys indicates their current function.

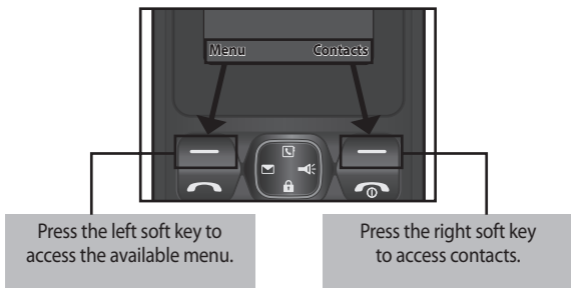

Entering Text

You can enter alphanumeric characters via the phone's keypad. For example, storing names in Contacts, writing a message and scheduling events in the calendar all require entering text. To change modes, press the **#** key.

The input method is displayed in the upper right corner of your phone.

| Indicator | Function (English Smart mode) |
|-----------|-------------------------------|
| 123 | Numeric |
| Abc | Multitap Abc |
| abc | Multitap abc |
| ABC | Multitap ABC |



T9 Mode

In Editor, Press Options Choose "Set T9" Select On. This mode allows you to enter words with only one keystroke per letter. Each key on the keypad is associated with more than one letter. T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

Turning Your Phone On and Off



You can power the phone on and off by pressing and holding the power key.

Making a Call


- 1 Key in the number on the keypad.
- 2 Press  to initiate the call.
- 3 To end the call, press .


TIP! To enter + when making an international call, press and hold **0**.

Making a call from your contacts

- 1 Press  (up navigation key) from Standby screen to open the address book.
- 2 On the keypad, enter the first letter of the contact you want to call.
- 3 To scroll through your contacts, use the up and down navigation keys. And to scroll through their different numbers, use the left and right navigation keys.
- 4 Press  to initiate the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call. While your phone is ringing, select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose **Any key** or **Send key only**.

- **Any key** – You can answer a call by pressing any key.
- **Send key only** – You can answer a call only by pressing the Send key.

Changing your call settings

You can set the menu depending on the call. Press **Menu**, select **Settings** and choose **Call**.

- **Call divert** – Select methods for diverting calls.
- **Call waiting** – Select Active or cancel call waiting.

Checking your call history

You can check the record of all, missed, dialled, received calls and call durations. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called. Press **Menu**, select **Call history**.

Quick feature reference

Messaging


Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 A new message editor will open. The default setting of the message editor is SMS mode.
- 3 Enter your message using either the T9 predictive mode or Abc manual mode or 123 mode. You can switch text input modes by pressing **# 0**.
- 4 Press **Options** and choose **Insert** to add an **Symbol, Template, Contact, Business card**.
- 5 Press **Send to**.
- 6 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list.
- 7 Press **Options** and choose **Send**.
 - **Inbox** – You will be alerted when you have received a message. It will also be saved here.
 - **Drafts** – This menu shows the message you have saved.
 - **Outbox** – This menu allows you to view the message which is about to be sent or could not be sent.
 - **Sent** – This menu allows you to view the messages which have already been sent, including time and content.

- **Listen voice mail** – This menu provides you with a quick way to access your voice mailbox.
- **Info messages** – Info service messages are text messages that are delivered by the network to your handset.
- **Templates** – There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
- **Settings** – This menu allows you to set the features of your network service provider.

Contacts

You can search for a contact in your Contacts.

- 1 Press Contacts (Up navigation key) from the standby screen and choose Search, select Contacts from the Menu screen or press  (right soft key) from the standby screen.
 - 2 On the keypad enter the first letter of the contact you want to call.
 - 3 To scroll through the contacts, use the up and down navigation keys. To scroll through their different numbers use the left and right navigation keys.
- **Search** - You can search for a contacts in your phonebook.
 - **New contact** – You can add phonebook entries by using this menu.
 - **Speed dials** – Assign contacts to any keys between 2 and 9.
 - **Copy all** – You can copy all entries from the SIM card memory to the Phone memory or from the Phone memory to the SIM card memory.
 - **Delete all** – You can delete all entries from the SIM card memory or Phone memory.
 - **Memory status** – You can check the memory status for your SIM and phone.

• Information

- › **Service dial numbers** – Access the list of service numbers assigned by your service provider securely.
- › **Own number** – You can save and check your own numbers on the SIM card.
- › **Business card** – You can save and check your business card containing information including your name, mobile phone, home, office and email, and send it in a message.

Call history

You can check the record of all, missed, dialled, received calls and call durations. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.






- **All calls** – Displays the lists of all three types (Received/Dialled/Missed calls) by time.
- **Missed calls** – This option lets you view the last 20 unanswered calls.
- **Dialled calls** – This option lets you view the last 20 outgoing calls (called or attempted).
- **Received calls** – This option lets you view the last 20 incoming calls.
- **Call duration** – Allows you to view the duration of your incoming and outgoing calls.

Games

Your LG-A100 comes with preloaded games to keep you amused when you have time to spare. Press **Menu** and select **Games**.

Profiles

You change your profile, then choose from General, Silent, Outdoor, Flight mode and Headset.

- **General** – After setting up this profile, the indicator  will be displayed on the standby screen.
- **Silent** – Ring tone is disabled and Vibrate is activated. When you set up this profile, the indicator  will be displayed on the standby screen.
- **Outdoor** – This is the default profile. Ring tone and key tone volume are set to maximum. When you set up this profile, the indicator  will be displayed on the standby screen.
- **Flight Mode** – When you set up this profile, the indicator  will be displayed on the standby screen.
- **Headset** – When the headset is connected to the phone, the indicator  will be displayed on the standby screen. You can personalise your call alert type, ring tones, ring volume, message alert type, message tones, message volume, keypad tones, keypad volume, effect sound volume and power on/off volume.

Tools

- **Torch** – Turn on/off the torch directly by holding the right navigation key from Standby screen.
- **Calculator** – This contains the standard functions such as Addition, Subtraction, Multiplication and Division.
- **Stopwatch** – This option allows you to use the function of a stopwatch.

- **Unit converter** – This converts any measurement into a unit you want.
- **World clock** – Allows you to determine the current time in another time zone or country.

Organiser

- **Alarms** – You can set up to 3 alarm clocks to go off at a specified time.
- **Memo** – You can register your own memos here.

Calendar

- **Calendar** – When you enter this menu, a calendar appears. A square cursor is placed on the current date. You can move the cursor to another date using the navigation keys.

Settings

- **Date & Time** – You can set functions relating to the date and time.
- **Language** – You can change the language for the display texts in your phone. This change will also affect the Language Input modes.
- **Display** – You can adjust settings for the phone display.
- **Call** – You can set the menu depending on the call.
- **Auto key lock** – Lock the keypad automatically in standby screen.

- **Security** – This menu allows you to set the phone securely.
 - › **PIN code request** – Choose a PIN code to be requested when you turn your phone on.
 - › **Phone lock** – Choose a security code to lock your phone, When power on, When SIM changed or Immediately.
 - › **Call barring** – Choose a barring password for all outgoing calls, outgoing international, outgoing international when roaming, all incoming calls, or incoming when roaming.
 - › **Fixed dial number** – Choosing a PIN2 code to enable fixed dial number lets you restrict calls to only those in Contacts.
 - › **Change codes** – Change your Security code, PIN code or PIN2 code.
- **Power save** – If you set Always on, you can save the battery power when you are not using the phone. Choose to switch between power save settings **Always on**, **Night only** or **Off**.
- **Network selection** – You can select a network that will be registered either automatically or manually.
- **Reset settings** – Use **Reset settings** to restore the factory settings. You need the security code to activate this function. The default number is “0000”.
- **Memory status** – You can check the free space and memory usage of each repository.

Guidelines for safe and efficient use

Please read these simple guidelines. Failure to follow these guidelines may be dangerous or illegal. More detailed information is given in this manual.

WARNING

- Mobile phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Keep the phone in a safe place out of reach of small children. It includes small parts which if detached may present a choking hazard.
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

CAUTION

- Switch the phone off in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available on all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.

☐ Guidelines for safe and efficient use (Continued)

- Batteries should be disposed of in accordance with pertinent legislation.
- Do not dismantle the phone or battery.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-A100 has been designed to comply with applicable safety requirements regarding exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the pertinent guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/Kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.974 W/Kg (10g) and when worn on the body is 0.653 W/Kg (10g).

Guidelines for safe and efficient use (Continued)

- SAR data information for residents of countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over one (1) gram of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories that have been approved for use with this phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if it is covered with wrapping or vinyl wrapper.
- Use a dry cloth to clean the exterior of the unit. (Do not use solvents such as benzene, thinner or alcohol.)
- Do not expose this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

☐ Guidelines for safe and efficient use (Continued)

- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories such as the earphone cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones are susceptible to interference, which may affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas where you drive.

- Do not use a hand-held phone while driving.
- Give your full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

☐ Guidelines for safe and efficient use (Continued)

- If your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can fail or cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Your hearing may be damaged if you are exposed to loud sounds for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Note: Excessive sound pressure from earphones can cause hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point. Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

☐ Guidelines for safe and efficient use (Continued)

In aircraft

Wireless devices can cause interference with aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the aircraft without permission from the cabin crew.

Children

Keep the phone in a safe place out of reach of small children. It includes small parts which if detached may present a choking hazard.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to discharge the battery completely before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times before it needs replacing.

□ Guidelines for safe and efficient use (Continued)

- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places as this may impair battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption by the charger.

□ Troubleshooting

| Problem | Possible Solution |
|---|---|
| Telephone cannot be switched on | Please take out battery and insert again. Then press End/Power on key to power on the phone. |
| Battery empty | Charge battery. Check charging indicator on display. |
| The battery doesn't charge properly or the phone sometimes turns itself off | Wipe the charging contacts, both on the phone and on the battery, with a clear soft cloth. |
| Usage time of battery becomes shorter | If the battery time is short, it may be due to the user environment, a large volume of calls, or weak signals. |
| Charging error— Temperature out of range | Make sure the ambient temperature is right, wait for a while, and then charge again. |
| Charging error— Wrong charger | Only use original LG accessories. |
| Charging error— Battery defective | Replace battery. |
| Charging error—No battery icon appears when charging | The battery is empty or has been not used for a long time. It may take a while before the battery icon appears on the screen. |

❏ Troubleshooting (Continued)

| Problem | Possible Solution |
|---|--|
| Forgot the phone code or password | The default phone code is "0000". |
| Enter PUK | The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider. |
| Loss of Network | You may be in a weak signal area. Move and try again. You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details. |
| You have entered a number but it was not dialed | Be sure that you have pressed Send Key . Be sure that you have accessed the right network service. Be sure that you have not set an outgoing call barring option. Be sure that you have entered the area code. |
| Your correspondent cannot reach you | Be sure that your phone is switched on. Press Send Key for more than one second. Be sure that you are accessing the network service. Be sure that you have not set an incoming call barring option. |

□ Troubleshooting (Continued)

| Problem | Possible Solution |
|--|--|
| Your correspondent cannot hear you speaking | Be sure that you have switched off the loudspeaker. Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone. |
| The voice quality of the call is poor | Check the signal strength indicator on the display. The number of bars indicates the signal strength. Try moving the phone slightly or moving closer to a window if you are in a building. |
| No number is dialed when you recall a contact | Use the Phonebook Search feature to ensure the number has been stored correctly. Resave the number, if necessary. |
| If the above guidelines do not help you to solve the problem | Take note of the model number of your mobile phone and a clear description of the problem. Contact your phone dealer or LG Service Center for help. |

□ Accessories

These Accessories are available for use with the LG-A100. (Items described below may be optional.)

Standard Battery



Travel Adapter



Note

- › Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- › Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

Technical Data

Ambient Temperatures

- › **Max** : +55°C (discharging)
+45°C (charging)
- › **Min** : -10°C

LG Service Center

by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd., Bookalo,
Thonburi, Bangkok 10600

Working day : Mon-Sun 07:00 - 19:00

Call center : 0-2878-5757

