

繁體中文
簡體中文
ENGLISH



chocolate KU800



KU800


使用手冊

LG Electronics Inc.

CE 0889



<http://www.lgmobile.com>

P/N : MMBB0222827 (1.0) 

LG KU800 使用手冊

繁體中文

本文件是 LG KU800 3G 視像手機的使用手冊。LG Electronics 保留本文件的所有權利。未經 LG Electronics 公司同意，嚴禁複製、修改和分發本文件。



目錄

簡介	5	一般功能	24	已儲存網頁	33
安全須知	6	撥打與接聽電話		瀏覽器設定	
安全與有效		接聽來電	25	網絡設定	
使用準則	7	輸入文字	26	安全	
KU800 功能	11	使用T9 模式	27	字元編碼	
手機部位圖解		使用 ABC 模式	28	捲動控制	
如何使用輕觸鍵	15	使用123(數字模式)	29	顯示圖像	34
開始使用	17	使用符號模式		快取記憶	
安裝智能咭與手機電池		功能表功能簡介	30	Cookies	
為電池充電	18	娛樂	31	Javascript	
拔下充電器	19	遊戲與應用程式		重設設定	
如何使用 microSD 記憶咭		更多遊戲		音樂	35
開／關手機	21	Java 設定		正在播放	
存取碼		互聯網	32	全部曲目	
顯示資訊	22	主頁		播放列表	
		輸入網址			
		輸入網址			
		最近瀏覽的網頁			
		書籤			

相機	36	我的檔案	54	記事簿與工具	58
相機		圖片		鬧鐘	
視像攝錄機	39	聲音		日曆	
訊息	42	影片	55	工作	60
新增		遊戲與應用程式	56	備忘錄	
訊息		藍芽檔案		計算機	
電郵	43	其他檔案	57	單位轉換器	61
收件匣	44	外置記憶體		匯率	
草稿	45			面積	
寄件匣				長度	
已發送的訊息	46			重量	
電郵	47			溫度	62
常用範本	48			體積	
文字範本				速度	
多媒體範本				世界時間	
訊息設定				語音備忘錄	
文字訊息					
多媒體訊息	49				
電郵	50				
資訊服務	52				
服務訊息					

目錄

通訊錄	64	視像通話	68	固定撥號號碼	78
新增		視像通話過程中		數據用量	
通訊錄列表		撥入視像通話		通話費用	
群組		設定	70	轉駁	79
快速撥號		手機設定		來電等候	81
服務撥號號碼		情景模式		留言信箱	82
本手機號碼	65	日期及時間	71	視像通話	
設定		語言	72	一般設定	
通訊錄檢視		安全		通訊錄設定	83
顯示圖像/替身		省電模式	73	連接	
複製全部		記憶體狀態	74	藍芽	
移動全部		手機資訊		同步	87
清除通訊錄資料		重設設定		網絡	88
通話	66	顯示設定	75	存取點	89
所有通話		屏幕顯示		瀏覽器設定	
已撥通話		功能表樣式		串流	90
已接來電		字體		撥號網絡	
未接來電		背景燈		配件	92
智能咭工具組	67	歡迎訊息		技術資料	93
		Java 設定			
		訊息設定	76		
		通話設定			
		通話時間			
		通話限制			

簡介

恭喜您購買了先進輕巧的 KU800 3G 視像手機，本手機專為利用最新的數碼流動通訊科技而設計。



本使用手冊包括使用及操作本手機的重要資訊。仔細閱讀所有資訊，以便發揮手機的最佳性能，並避免手機遭受損害或不當使用。任何未經使用手冊明確允許的變更或修改可能會使此產品的保養失效。

對滑蓋式手機使用有磁石鎖的手機套會引致如網絡訊號變弱及消耗手機電量等問題。

安全須知

請詳閱這些簡單準則。違反這些準則可能會招致危險或構成違法行爲。本手冊將會提供更進一步的詳細資訊。

警告!

- 在飛機內，應全程關閉手機。
- 駕駛時，請勿手持手機通話。
- 在加油站、儲油槽、化學工廠或爆破場地附近，請勿啓動手機。
- 請務必使用指定的電池和充電器，否則可能會損壞手機。
- 請勿在手濕時操作正在充電的手機。這可能會引致觸電或造成手機嚴重損壞。
- 手機內附有細小配件。爲免小孩誤吞的危險，請將手機放置於小孩觸摸不到的地方。

注意!

- 在醫院內請務必關機。心律調整器和助聽器等醫療電子裝置可能會受到干擾。
- 緊急撥號也許未能適用於所有網絡。請勿將手機用作緊急救援的主要通訊工具。
- 請務必使用原裝配件，以避免對手機造成損害。
- 所有無線電收發器都有可能對鄰近的電子裝置造成干擾。手機可能會對電視機、收音機、電腦等造成輕微的干擾。
- 耗盡的電池需依法令規定予以處置。
- 請勿自行拆開手機或電池。

安全與有效使用準則

請詳閱這些簡單準則。違反這些準則可能會招致危險或構成違法行為。本手冊將會提供更進一步的詳細資訊。

無線電波頻率能量暴露

無線電波暴露標準與比吸收率(SAR)資訊

您的流動電話是一部無線電波收發器。其設計和製造不會超出由國際指引(ICNIRP)建議的無線電波頻率能量暴露限制。這些限制是綜合指引的一部份，並定出對一般人的RF能量接受水平。這些指引是經由獨立的科學機構通過對科學研究作定期和徹底的評估而制定的。這些指引包括為確保任何年齡和任何健康狀態人士安全而設的基本安全極限。流動電話的暴露標準採用了一組名為比吸收率的測量數據，即SAR。國際指引中所規定的SAR限制為2.0 W/kg*。對SAR的測試是通過在標準的操作位置使電話以最高認可功率水平在所有測試波段中傳輸訊號而進行的。儘管SAR是在最高認可功率水平下確定的，電話的實際SAR會遠遠低於其實際值。這是因為電話的設計是為了在不同的功率水平下工作，以達到僅僅接通使用網絡所需的功率。在一般情況下，您離基站越近，電

話的輸出功率就越低。在某款型號的電話上市之前，必須符合歐洲R&TTE指引中的標準。該指引包含保護使用者和任何其他個人健康和安全的的基本要求。測試該裝置在耳邊使用的最高SAR值為0.418 W/kg。

在將手機置於耳邊正常使用或使其距身體至少1.5厘米遠的情況下，此流動電話符合關於RF暴露的指引。如果隨身攜帶手機，所用的手機套或其他裝置中不可包含金屬物品，並應使手機與身體至少保持1.5厘米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，直至傳輸完成為止。測試該裝置貼近身體使用的最高SAR值為0.802 W/kg。

*公眾使用的流動電話SAR限制為10克。人體組織上平均2.0瓦特/千克(W/kg)。指引包括一個基本安全極限，用以向公眾提供額外的保護，並解決任何量度上的差異所帶來的問題。SAR值會視乎國家報告要求及網絡波段而定。如需其他地區的SAR資訊，請參閱www.lgmobile.com網頁中的產品資料。

安全與有效使用準則

產品保養與維護

警告!

僅限使用經過審查認可與此特定手機型號配合使用的電池、充電器與配件。使用任何其他類型的配件，可能會使任何本手機適用的認證或保養失效，並可能造成危險。

- ▶ 請勿拆解本手機 (請交由合格維修人員為您進行維修)。
- ▶ 手機應遠離電器設備，如電視、收音機或個人電腦。
- ▶ 手機應遠離熱源，如暖爐或爐具。
- ▶ 請勿將手機放置於微波爐裡，這會導致電池發生爆炸。
- ▶ 請勿讓手機摔落。
- ▶ 請勿使手機遭受機械震動或撞擊。
- ▶ 若使用封套或乙烯質護套，可能會損壞手機表面塗層。
- ▶ 使用乾布清潔外殼。(切勿使用如苯、稀釋劑或酒精的溶劑。)

- ▶ 請勿讓手機置於煙霧濃濁或灰塵污染嚴重的環境中。
- ▶ 請勿讓手機靠近信用咭或電子車票；否則會影響磁帶內的資訊。
- ▶ 請勿用尖銳物品碰觸螢幕，否則會損壞手機。
- ▶ 請勿讓手機接觸液體或暴露在潮濕的環境中。
- ▶ 在使用耳機等配件時，請勿讓耳機連接線過於摺疊。同時不要讓它們接觸到天線。
- ▶ 審慎使用耳機等配件。

有效手機操作

要以最低電源消耗量得到最佳效能，請：

- ▶ 當手機正在使用時，請勿按住天線。如果您按住天線，天線會影響通話質素，手機亦可能以較高功率進行操作，從而縮短通話和備用時間。

電子裝置

所有無線電話均可能因為受到干擾而影響性能。

- ▶ 未經許可，請勿在醫療設備旁使用本產品。避免將手機放在心律調整器上，也就是胸前口袋。
- ▶ 手提電話可能會干擾某些聽覺輔助器材。
- ▶ 手提電話也可能對電視、收音機、電腦等造成輕微干擾。

道路安全

請檢查當地對行車時使用手提電話的法律規定。

- ▶ 駕駛時請勿使用手提電話。
- ▶ 請專心駕駛。
- ▶ 如果有可能的話，請使用免提聽筒。
- ▶ 請按駕駛狀況需要，撥打或接聽電話前請將汽車停靠路邊。

- ▶ 射頻 (RF) 能量可能會影響某些汽車電子系統，例如：汽車音響、安全設備。
- ▶ 行車時，請勿將手機或免提聽筒套件放在靠近安全氣囊的位置。若無線裝置安裝不當且安全氣囊正好開啓，可能會造成嚴重傷害。

在聆聽音樂時，請調較適當的音量以讓您可留意周遭發生的事情，這特別是在橫過馬路時。

避免損害您的聽覺

如果長時間身處於高音量或喧鬧狀態，這會導致損害您的聽覺。所以我們建議開啓或關閉耳機時，不要將它放於太近耳朵。並將音量調較至適當的水平。

爆破區域

爆破作業進行當中，請勿使用手機。請查明禁止告示並遵守任何規章條例。

安全與有效使用準則

具有潛在爆炸危險的環境

- ▶ 請勿在加油站使用手機。請勿在汽油及化學品附近使用手機。
- ▶ 車上攜有流動電話與配件時，請勿運載或儲存可燃氣體、液體或爆炸物在車廂內。

飛機上

在飛機上、無線裝置可能會造成干擾。

- ▶ 登機前請先關閉手提電話。
- ▶ 未經空中服務人員許可，在地面停駐時也請勿使用手機。

兒童

將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急撥號

緊急撥號可能在某些電話網絡不能發出。因此，您不應該只倚賴手機發出緊急撥號。請與您本地的服務供應商聯絡。

電池使用與保養

- ▶ 電池充電前，無須完全放電。與其他系統不同，本機所用電池的效能不會受到記憶效應的影響。
- ▶ 僅限使用LG電池和充電器。LG充電器是經過特別設計，能增加電池壽命至最大極限。
- ▶ 請勿拆解或讓電池發生短路。
- ▶ 電池的金屬接點應保持清潔。
- ▶ 更換性能不再令人滿意的電池。充電數百次後，才需要更換電池。
- ▶ 已長期未使用的電池，請先進行充電以取得最大的效能。
- ▶ 請勿使電池充電器直接曝曬在陽光下，或在浴室等濕度高的場所中使用。
- ▶ 請勿把電池留置在過熱或過冷的地方，否則會降低電池性能。


KU800 功能

手機部位圖解

手機正面




KU800 功能

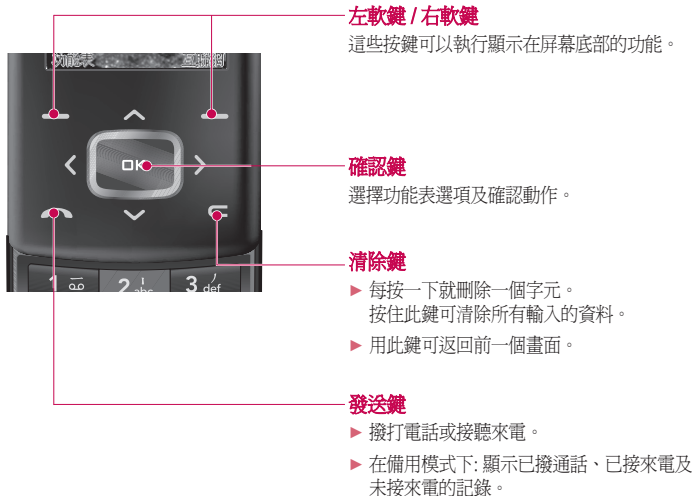

手機左側



手機右側

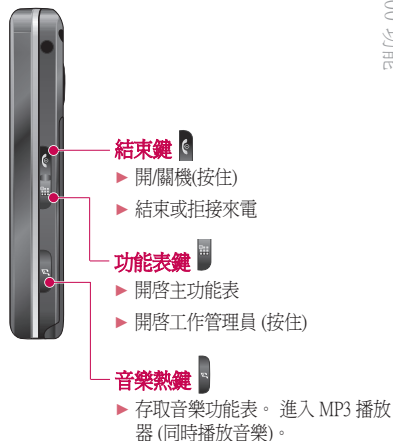

KU800 功能

KU800 功能

後視圖



如何使用輕觸鍵

- ▶ 該產品滑蓋上的按鍵為輕觸鍵。
- ▶ 確保在使用輕觸鍵前，認真閱讀「輕觸鍵使用注意事項」。

輕觸鍵使用注意事項

1. 確保雙手潔淨、乾爽。
 - 在潮濕環境中，請抹乾雙手或輕觸鍵表面上的濕氣。

2. 無需用力按下輕觸鍵亦可正常運作。避免產品受到嚴重撞擊，以防輕觸鍵的感應器受損。
3. 使用指尖準確按在所需輕觸鍵上，注意不要錯按其他功能的按鍵。
4. 當桌面及輕觸鍵燈都關閉時，按下輕觸鍵不會開啓桌面燈。按 **OK** 鍵，桌面燈就會開啓 (輕觸鍵燈關閉時，輕觸鍵不會運作)。
5. 如果滑蓋合上並且輕觸保護功能已開啓，輕觸鍵鎖功能會在通話時自動啓動。(有關詳情，請參閱「使用手機時的輕觸鍵狀態」。)
6. 如果手機套或膠套蓋著輕觸鍵，輕觸鍵可能無法正常運作。同時，戴著手套使用手機時，輕觸鍵亦可能無法正常操作。
7. 保持輕觸鍵表面遠離金屬及其他導電物料，以防因接觸這些物料而引致錯誤。



如何使用輕觸鍵


使用手機時的輕觸鍵狀態

滑蓋合上時，為防止在使用手機或通話中不慎進行操作，輕觸保護功能會自動啟動。(在此情況下，即使按下輕觸鍵也不會運作)

1. 滑蓋合上時

- 當滑蓋合上時，輕觸保護功能會自動啟動。(此功能會在開啓滑蓋時自動關閉。)
- 要在滑蓋合上時停用「輕觸保護」功能，請按音量鍵兩次。
- 停用「輕觸保護」功能後，如果一段時間內都沒有按下按鍵(3秒)，「輕觸保護」功能就會再次啟動。

2. 通話時

- 通話時，不論滑蓋狀態如何，「輕觸保護」功能都會自動啟動。
- 要停用「輕觸保護」功能，請按除  外的任何鍵。

- 停用輕觸鍵鎖後，如果一段時間內都沒有按下按鍵(3秒)，「輕觸保護」功能就會再次啟動。

注意

- ▶ 為方便使用者，購買產品時，每個輕觸鍵功能的輕觸鍵圖示會顯示在桌面上。

開始使用

安裝智能咭與手機電池

1. 安裝智能咭。

智能咭包含手機號碼，服務詳情和通訊錄，且必須插入到手機中。如果取出智能咭，手機將無法使用（緊急通話除外），直至插入有效的智能咭為止。插入和取出智能咭前，務必要斷開手機上的充電器和其他配件。將智能咭插入智能咭插槽。請確定智能咭已正確插入，且咭上的金色接點區朝向上方。要取出智能咭，請輕輕往下按，然後往下方拉出。



插入智能咭



取出智能咭

注意

- ▶ 智能咭金屬接點容易因刮傷而損壞。拿取智能咭時請特別注意。請依照智能咭所附之說明書進行安裝。

2. 安裝電池。

向上滑電池直至聽到「啪」一聲，表示已固定到位。



取出電池。

關閉電源。(如果未關閉電源，有可能會遺失儲存的電話號碼和訊息。)

按住電池釋放鍵，向下滑出電池。




開始使用

為電池充電

手機要連接旅行充電器前，必須先裝入電池。



1. 將旅行充電器的一端接頭插入手機底端。
2. 將旅行充電器的另一端連接至電源插座。



注意

- ▶ 只限使用盒中隨附的充電器。

3. 充電完畢後，電池圖標的移動式指示列將會停止動作。
4. 在第一次使用手機前，請確保電池充足電。

注意！

- 請勿強力推進接頭，這樣可能會損壞手機及/或旅行充電器。
- 將電池充電器垂直插入牆壁的電源插座。
- 若您是在其他國家/地區使用電池充電器，請使用符合當地規格的轉接頭配件。
- 在充電期間，請勿移除您的電池或智能咭。

警告！

- 如遇上雷暴，請拔下電源線與充電器以防觸電或失火。
- 請勿讓動物牙齒、指甲等尖銳物接觸電池。
這可能會有失火的危險。

拔下充電器

如下圖所示方式，中斷旅行充電器與手機的連接。



如何使用 microSD 記憶咭



<如何插入 microSD 記憶咭>

1. 關閉手機。開機狀態下插入或取出 microSD 記憶咭可能會損壞儲存在記憶咭中的檔案。
2. 提起用於保護 microSD 記憶咭插槽的膠蓋。



開始使用

3. 將記憶咭插入插槽中。金色接點必須保持在 microSD 記憶咭的背側。推動 microSD 記憶咭時，切勿用力過大。如果無法順利滑入插槽，則可能因為插入方式不正確或插槽中有異物。
4. 插入後，推動記憶咭直至聽到卡嗒聲，即表示 microSD 記憶咭已正確就位。



5. 合上塑膠插槽保護蓋。
6. 要取出記憶咭，請先關機，打開插槽保護蓋並推動 microSD 記憶咭以解鎖。小心取出記憶咭。

注意：

- ▶ 電池電量過低時，避免使用快閃記憶咭。

- ▶ 在咭上寫入資料時，請等到操作完成後再取出記憶咭。
- ▶ 該咭設計為僅可以單一方方向輕鬆插入到系統中。
- ▶ 請勿彎曲記憶咭或強行插入插槽。
- ▶ 請勿插入除 microSD 製造外的其他任何記憶咭。
- ▶ 若已使用 FAT32 格式化 microSD 記憶咭，請再次使用 FAT16 格式化 microSD 記憶咭。

有關 microSD 記憶咭的更多資訊，請參閱記憶咭的使用手冊。

記憶咭格式化

開始使用記憶咭前，需要對其格式化。插入記憶咭後，請選擇 [功能表] → [設定] → [手機設定] → [記憶體狀態] → [格式化外置記憶體]，然後按 **OK**。本項操作只需在第一次使用記憶咭時進行。格式化過程中，系統會為不同的資料類型建立多個資料夾。

開／關手機

開啓手機

確保智能咭已插入手機且電池已充電。按住 **■** 鍵直至開機。如果 PIN 碼要求設定為「開啓」，則輸入隨智能咭提供的智能咭 PIN 碼。(注意：請參閱第 72 頁) 您將會在幾秒鐘後在網上註冊。

關閉手機

按住 **■** 直至關機。手機電量較低時，可能有幾秒鐘延遲。此時，切勿再次開機。

存取碼

您可使用本章節中說明的存取碼，以防他人未經授權使用您的手機。您可變更存取碼 (PUK 碼與 PUK2 碼除外)：使用更改密碼功能 [功能表 #1.4.3] 即可。

PIN 碼 (4 到 8 位數)

PIN (個人識別碼) 碼可防止他人未經授權使用您的智能咭。PIN 碼通常隨智能咭一

同提供。如果將 PIN 碼要求設為開啓，則在每次開機時，手機均會要求輸入 PIN 碼。如果將 PIN 碼要求設為關閉，則無需輸入 PIN 碼，手機會直接連線至網絡。

PIN2 碼 (4 到 8 位數)

需要使用 PIN2 碼 (部分智能咭中隨附) 來存取如通話費用和固定撥號等功能。僅在智能咭支援這些功能的情況下才可使用。

PUK 碼 (4 到 8 位數)

需要使用 PUK (PIN 解鎖碼) 碼才能更改已鎖定的 PIN 碼。PUK 碼可能已隨智能咭一同提供。如果智能咭中未提供，請諮詢網絡供應商以取得 PUK 碼。如果遺失該碼，請聯絡網絡商客戶服務部。

PUK2 碼 (4 到 8 位數)

需要隨某些智能咭提供的 PUK2 碼，以解鎖已鎖定的 PIN2 碼。如果遺失該碼，請聯絡網絡商客戶服務部。


開始使用

安全密碼 (4 到 8 位數)

安全密碼可防止他人未經授權使用您的手機。預設安全密碼為「0000」，刪除所有手機記錄及將手機恢復到出廠設定時需要輸入安全密碼。

顯示資訊


無智能咭備用畫面

這是手機中未安裝智能咭或安裝的智能咭無效時所顯示的初始畫面。在此畫面中，使用者僅可撥打緊急通話和關閉手機。要關機，請按住  鍵幾秒鐘。

畫面結構

如果手機未安裝智能咭，則會顯示一個動畫，提示您插入智能咭。如果插入手機的智能咭無效，則會顯示一個動畫，提示您插入的智能咭已鎖定。

緊急通話功能

畫面上的右軟鍵由「緊急通話」表示。按右軟鍵或使用數字鍵撥緊急號碼，然後按  鍵進行緊急通話。

備用畫面

當您安裝了正確的智能咭並開機時，會顯示備用畫面。


畫面結構

備用畫面由背景圖片上網絡商名稱、指示符及日期和時間構成。您可在「顯示設定」功能表中變更牆紙。

號碼畫面

當在備用畫面上按數字鍵時，會顯示號碼畫面。


畫面結構

號碼畫面由狀態指示符、撥打的號碼及軟鍵功能表構成。狀態指示符與備用畫面的指示符相同。您可在「顯示設定」功能表中變更撥號字體的大小和顏色。撥號後按  鍵可進行通話。

軟鍵

撥號時，您可透過軟鍵使用多項功能。使用左軟鍵，可撥打視像通話、發送訊息到此號碼、將號碼儲存到「通訊錄」。

手機鎖定畫面

選定手機鎖定功能後，您僅可在此畫面中撥打緊急電話、解鎖和關機。同樣，您可透過按住  鍵幾秒鐘來關機。

畫面結構

除鎖定訊息替代備用畫面顯示外，手機鎖定畫面的結構與備用畫面相同。

緊急通話功能

使用右軟鍵，可撥打緊急通話。如同無智能咭的備用畫面一樣，僅可撥打緊急通話。

解鎖功能

按左軟鍵後會出現快顯畫面，要求您輸入安全密碼以解除鎖定手機。安全密碼是在更改密碼中設定的 (# [設定] → 1. [手機設定] → 4. [安全] → 3. 更改密碼)。如果您輸入錯誤的安全密碼，則手機仍會處於手機鎖定狀態。如果輸入正確的安全密碼，則手機會被解鎖，顯示備用畫面。如果您已在「手機鎖定」狀態下關機，則再次開啓時，您會發現手機仍處於手機鎖定狀態。

限制密碼

該服務可在特定條件下限制通話服務。可使用通話限制功能來編輯這些條件 (# [設定] → 5. [通話設定] → 2. 通話限制)。使用通話限制功能時，需要使用限制密碼。當您申請該項服務時，可從網絡商客戶服務處獲取密碼。啓用服務後，來電者會聽到如下資訊訊息：由於通話限制，暫時無法接通。

一般功能

撥打與接聽電話

撥打電話

- 輸入電話號碼 (包括區碼)。
 - ▶ 要刪除一個數字，請按 **⏪** 鍵。
 - ▶ 要刪除所有數字，請按住 **⏪** 鍵。
- 按 **☎** 鍵可撥打電話。
- 按 **⏹** 鍵或合上手機可結束通話。

注意

- ▶ 要在通話中啓用免提聽筒，請啓用輕觸鍵並按 **OK**。

從通話紀錄列表撥號

- 在備用模式下、按下發送鍵 **☎**、最近來電、已撥通話及未接來電將會顯示。
- 使用上/下導覽鍵選擇所需的號碼 **▼** / **▲**。
- 按 **☎** 撥號。


撥打視像通話

您可在 3G 覆蓋服務區域內撥打視像通話。如果來電者位於 3G 覆蓋服務區域內且使用 3G 視像手機，則會建立通話。您也可接聽視像通話。要撥打/接聽視像通話，請執行如下操作。

- 使用按鍵輸入手機號碼或從已撥通話/已接來電列表中選擇號碼。
 - ▶ 要更正號碼，短按 **⏪** 鍵可刪除一個數字，或按住 **⏪** 鍵則刪除所有數字。
- 如果您不想使用免提聽筒，請確保已插入耳機。
- 要啓用視像功能，請按左軟鍵 [選項] 並選擇「撥打視像通話」。
 - ▶ 系統會通知您：在撥打視像通話前，您需要關閉其他應用程式。




注意

- ▶ 接通視像通話可能需要一些時間。請耐心等待。連線時間也取決於對方接聽電話的速度。連線視像電話時，您將看到自己的圖像；對方接聽電話後，他們的圖像便會顯示在畫面上。



4. 根據需要調校相機位置。
5. 按  鍵或合上手機可結束通話。

透過「通訊錄」撥打語音/視像通話



撥打「通訊錄」中儲存的號碼十分方便。

1. 按  鍵存取通訊錄列表。
2. 捲動至要撥號的聯絡人。
3. 按  鍵撥打語音通話。按左軟鍵並選擇「撥打視像通話」以撥打視像電話。
4. 按  結束通話。

撥打國際電話

1. 按住  鍵以輸入國際首碼。「+」字元會自動選取國際碼。
2. 依次輸入國碼、區碼及電話號碼。
3. 按  。

調較音量




通話過程中，如果需要調節耳機音量，請使用手機左側的  鍵。在備用模式下，您可使用  調節按鍵音音量。

接聽來電


接到來電時，手機會發出鈴聲且手機圖標會在屏幕上閃爍。如果手機可以識別來電者，則會顯示來電者的電話號碼（如果已在通訊錄中儲存名稱/相片，則可顯示出來）。

1. 開啓滑蓋以接聽來電。


注意

- ▶ 要拒接來電，請按  或右軟鍵兩次。
- ▶ 如果您將「接聽模式」設定為「按發送鍵」（功能表 #5.0.4），則在開啓滑蓋後，按  鍵可接聽來電。
- ▶ 如果「接聽模式」設定為「按任何鍵」，則按除  外的任何鍵均可接聽來電。


一般功能

2. 透過合上手機或按  鍵來結束通話。


注意

- ▶ 您可在使用「通訊錄」或其他功能表的功能時接聽來電。
- ▶ 連線相容耳機後，您可同時使用耳機鍵和手機來接聽來電。要拒接來電，請按 。
- ▶ 來電時，您可透過按住音量下側邊鍵來使鈴聲靜音。

啓動震動模式的捷徑

開機後，您可透過按住  鍵啓動震動模式。

訊號強度

透過手機LCD屏幕上的訊號指示 () 可查看訊號強度。訊號強度會不斷變化，尤其是在建築物內時。靠近窗戶可提升接收效果。

輸入文字

使用手機按鍵可輸入英數字元。例如，在通訊錄中儲存名稱、編寫訊息、建立個人歡迎辭或在日曆中排定事件，都需要輸入文字。

本手機提供以下文字輸入法。


T9 模式

此模式可讓您以每個字母按一個按鍵的方式來輸入文字。鍵盤上的每個按鍵都具有多個字母。T9模式會自動將按鍵與內建字典進行校對以判斷正確的文字，因此需要按下的按鍵遠遠少於傳統 ABC 模式。這也稱為預測文字功能。


ABC 模式

此模式可讓您輸入字母，方式為按一下、兩下、三下或多下標記有所需字母的按鍵，直到所需字母出現為止。

123 模式(數字模式)

以每個數字按一個按鍵的方式來鍵入數字。要在文字輸入欄位中變更為 123 模式，請按下  鍵直到顯示 123 模式。

變更文字輸入模式

1. 在您處於允許輸入字元的欄位時，您會發現 LCD 屏幕右上角出現文字輸入模式指示。
2. 按  可在 T9Abc、T9abc、Abc、abc 和 123 之間循環切換。

使用 T9 模式

T9 預測文字輸入模式讓您只需按下最少的按鍵即可輕鬆輸入文字。在您按下每個按鍵時，手機會根據內建字典開始顯示它認為您要鍵入的字元。新增文字後，文字會發生變更，以反映字典中最可能的待選字。

1. 處於 T9 預測文字輸入模式時，按下按鍵  至  即可開始輸入文字。每個字母按一個按鍵。




- ▶ 文字會隨鍵入的字母而變更。輸入完整文字之前，無需理會屏幕上顯示的內容。
- ▶ 輸入完整文字後，如果所顯示的文字仍不正確，請按一下或多下向下導覽鍵以捲動尋找其他文字選項。

範例

按下     可鍵入

Good。

按下  可鍵入 Home。

- ▶ 如果文字選項列表中沒有所需的文字，請使用 ABC 模式新增該文字。
2. 輸入完整文字列後再編輯或刪除任何按鍵。
 3. 完成每個文字的輸入，按下  鍵以輸入空格。要刪除字母，請按下 。按住  可清除整個字元。

一般功能

使用 ABC 模式

使用按鍵 **2..** 至 **9=** 輸入文字。

1. 按下標記有所需字母的按鍵：
 - ▶ 按一下以輸入第一個字母
 - ▶ 按兩下以輸入第二個字母
 - ▶ 如此類推
2. 要輸入空格，請按一下 **0-** 鍵。要刪除字母，請按下 **=** 鍵。按住 **=** 鍵可清除整個顯示內容。

參閱下表，了解可透過字母數字鍵輸入字元之詳細資料。

按鍵	按順序顯示的字元	
	小寫	大寫
1	.,?!:@1/.,0;,'	.,?!:@1/.,0;,'
2..	abc2ääåãäæç	ABC2ÄÅÄÅÄÆÇ
3..	def3ëéèë	DEF3ÈÉÊË
4..	ghi4iïï	GHI4IÏÏ
5..	jkI5£	JKL5£
6=	mno6ñóóóóøœ	MNO6ÑÓÓÓÓØŒ
7=	pqr s7ßš	PQRS7ßŠ
8=	tuv8úúúú	TUV8ÚÚÚÚ
9=	wxyz9	WXYZ9
0-	[空格鍵], 0	[空格鍵], 0

注意

- ▶ 指定給按鍵的字元及相應的顯示順序取決於使用「語言輸入」選項所選擇的語言。以上表格提供針對英語而設定的字元。

使用123(數字模式)

123模式可讓您在文字訊息輸入中輸入數字(如電話號碼)。請按下與所需數字相對應的按鍵，然後再手動切換適當的文字輸入模式。

使用符號模式

您可以使用符號模式輸入符號或特殊字元。要輸入符號，請選擇 [選項] > [附加] > [符號]。使用導覽鍵和數字鍵選擇所需符號，然後按 **OK** 鍵。

功能表功能簡介

您可在備用畫面中按 **OK** 鍵以啓動功能表。移至所需項目並按 **OK** 鍵進入子功能表。

您亦可從主功能表中直接按對應的數字鍵 (如下所示) 進入子功能表。主功能表包括以下置頂功能表和子功能表。

1. 娛樂

- 1.1 遊戲與應用程式
- 1.2 更多遊戲
- 1.3 Java 設定

2. 互聯網

- 2.1 主頁
- 2.2 輸入網址
- 2.3 書籤
- 2.4 已儲存網頁
- 2.5 瀏覽器設定

3. 音樂

- 3.1 正在播放
- 3.2 全部曲目
- 3.3 播放列表

4. 相機

- 4.1 相機
- 4.2 視像攝錄機

5. 訊息

- 5.1 新增
- 5.2 收件匣
- 5.3 草稿
- 5.4 寄件匣
- 5.5 已發送的訊息
- 5.6 電郵
- 5.7 常用範本
- 5.8 訊息設定

6. 我的檔案

- 6.1 圖片
- 6.2 聲音
- 6.3 影片
- 6.4 遊戲與應用程式
- 6.5 藍芽檔案
- 6.6 其他檔案
- 6.7 外置記憶體

7. 記事簿與工具

- 7.1 鬧鐘
- 7.2 日曆
- 7.3 工作
- 7.4 備忘錄
- 7.5 計算機
- 7.6 單位轉換器
- 7.7 世界時間
- 7.8 語音備忘錄

8. 通訊錄

- 8.1 新增
- 8.2 通訊錄列表
- 8.3 群組
- 8.4 快速撥號
- 8.5 服務撥號號碼
- 8.6 本手機號碼
- 8.7 設定

9. 通話

- 9.1 所有通話
- 9.2 已撥通話
- 9.3 已接來電
- 9.4 未接來電

* 智能咭工具組

若智能咭並不支援 SAT 服務，本功能表將設為鬧鐘。

0. 視像通話

#. 設定

- #.1 手機設定
- #.2 顯示設定
- #.3 Java 設定
- #.4 訊息設定
- #.5 通話設定
- #.6 通訊錄設定
- #.7 連接

娛樂 [功能表 1]

遊戲與應用程式

功能表 1.1

選擇此功能表後，您可輕鬆執行某些應用程式。位於「遊戲與應用程式」資料夾中的所有遊戲和應用程式均為 Java 應用程式 (MIDlet)。預設情況下，從網站下載的應用程式均會儲存在「遊戲與應用程式」資料夾中。

更多遊戲

功能表 1.2

您可透過此連結下載應用程式。請注意，使用網上服務可能需要另行收費。

Java 設定

功能表 1.3

啓用網絡設定

1. 將游標移動到要啓用的網絡設定。
2. 按 **OK** 鍵或從「選項」功能表中選擇「啓動」。

新增網絡設定

1. 從「選項」功能表中選擇「新增」。需要設定以下項目。

服務名稱	為網絡設定輸入帳戶名稱。
連線模式	從提供的連線模式列表中進行選擇。(預設為使用 Proxy 的 TCP)
IP 位址	輸入由網絡商提供的 WAP 網關 IP 位址。(例如 195. 115. 025. 129)
Proxy 伺服器連接埠	取決於連線模式，網絡商會提供連接埠的詳情。
存取點	從提供的存取點列表中選擇。(有關新增或編輯新存取點的更多詳情，請參閱第 89 頁。)

2. 按右軟鍵 [完成] 以儲存設定變更。

您亦可從「選項」功能表中選擇「編輯」和「刪除」，以編輯或刪除網絡設定。

互聯網 [功能表 2]

主頁

功能表 2.1

您可啓動網頁瀏覽器並存取網絡服務的主頁。

- ▶ 您亦可在備用模式下按右軟鍵，直接存取互聯網。



輸入網址

功能表 2.2

輸入網址

(功能表 2.2.1)

您可手動輸入網址並存取相關網頁。

- ▶ 要輸入符號，請按  或右軟鍵 [符號] 以顯示符號表格。
- ▶ 要切換輸入法，請按 .

最近瀏覽的網頁

(功能表 2.2.2)

顯示最近瀏覽過的網頁。

書籤


功能表 2.3

您可儲存最常存取或喜歡的網址／網頁。您可對書籤執行「開啓」、「發送」、「新增」、「編輯」、「標記/取消標記」或「刪除」等操作。數個預設定的網址將會儲存爲書籤。

新增書籤

1. 按右軟鍵 [新增]。
2. 輸入標題及相關的網址資訊。
3. 按右軟鍵 [完成] 以儲存。

連線到所需書籤

按  鍵或從「選項」功能表中選擇「開啓」。

將書籤發送給其他人

從「選項」功能表中選擇「發送」。您可透過訊息或電郵發送。

刪除書籤

從「選項」功能表中選擇「刪除」。透過「標記/取消標記」選項，您可刪除多個書籤。

已儲存網頁

(功能表 2.4)

本手機可將畫面上的網頁儲存為離線檔案。可儲存多達 20 個網頁。

瀏覽器設定

(功能表 2.5)

您可變更瀏覽器顯示、安全和憑證的設定。

網絡設定

(功能表 2.5.1)

按 **OK** 選擇適合的網絡設定。此舉可啓動使用瀏覽器的網絡設定。

安全

(功能表 2.5.2)

認證

若已儲存，此處可顯示一份 WTLS/TLS 所必需的根認證機構列表。您可從此列表檢視認證。

節段清除

使用該選項，可清除安全 (WTLS/TLS) 節段資料。您需要清除節段數據才可以建立新安全節段。

字元編碼

(功能表 2.5.3)

把瀏覽器預設字元設定設為以下之一：

自動、英文(ASCII)、英文(ISO)、英文(拉丁)、Unicode(UCS2 BE)、Unicode(UCS2 LE)、Unicode(UCS2 自動)、Unicode(UTF-16 BE)、Unicode(UTF-16 LE)、Unicode(UTF-16 自動)、Unicode(UTF-8)及中文(BIG 5)。

捲動控制

(功能表 2.5.4)

您可透過選擇捲動控制來設定舉動的速度。
從小(1 行)、中(2 行)及大(3 行)中選擇。

顯示圖像

(功能表 2.5.5)

讓您可以啓用或停用瀏覽時的圖像顯示。

注意

啓用此功能會延遲圖像顯示直至傳輸完成爲止。停用此功能會阻止瀏覽器從伺服器下載圖像，因而可加快傳輸速度。

重設設定

(功能表 2.5.9)

選擇此選項，可將您的手機重設爲預設瀏覽器設定。

快取記憶

(功能表 2.5.6)

啓用快取模式讓您可以將存取過的網頁儲存到手機中。若網頁經已在快取模式儲存，則會大大提高隨後在同一網頁瀏覽的網頁載入速度。

Cookies

(功能表 2.5.7)

啓用 Cookies 讓您可以儲存伺服器傳送的 Cookies。停用此功能可阻止 Cookies 儲存到您的手機中。

Javascript

(功能表 2.5.8)

選擇開啓或關閉 Javascript。

音樂 [功能表 3]

正在播放

功能表 3.1

存在若干個目前可播放的曲目時，該功能表會啓用。

全部曲目

功能表 3.2

您可檢視手機／外置記憶體中的所有音樂檔案。

播放列表

功能表 3.3

透過從全部曲目列表中選擇曲目，您可建立自己的播放列表。

相機 [功能表 4]


相機

功能表 4.1

此應用程式可讓您拍攝靜態相片。您可以所需尺寸拍攝相片，還可用來當作通訊錄的相片、牆紙及其他一般用途。

拍攝後，相片可透過訊息、電郵或藍芽來發送。

顯示目前相機設定。

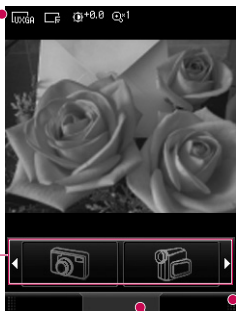

您可使用 [左箭] / [右箭] 在相機和視像攝錄機之間切換。

透過右軟鍵，您可轉換內外鏡頭。

按 [OK] 可拍攝相片。

1. 按左軟鍵可存取「選項」並設定以下所需環境。

- ▶ 透過 [左箭] / [右箭] 在選項功能表之間移動。
- ▶ 憑藉 [上箭] / [下箭] 選擇所需值並透過左軟鍵 [選擇] 或 [OK] 確認選擇。

轉到	啓動「圖片」資料夾，且將現有圖片顯示為縮圖。 您可透過按 OK 來檢視圖片。 您亦可透過訊息、電郵或藍芽，將所選圖片發送給其他人。
大小	1600x1200 (Lv9a)，1280x960 (Lv8a)， 640x480 (Lv6a)，320x240 (Lv5a)， 牆紙 (Lv3ma)，176x144 (Lv1Pr)， 通訊錄 (Lv1m)
質素	超細緻 (Lv9P)、細緻 (Lv8P)、 標準 (Lv7)
補光燈	關閉、常開 (☺)、拍照時 (☺) ▶ 您可在預覽模式下，透過 ☺ 開啓／關閉相機補光燈。
連環拍攝	一、三 (☺)、六 (☺)、九 (☺) (注意：可用連環拍攝取決於大小。)
縮放	x1 (☺)、x2 (☺) (注意：可用縮放級別取決於大小。) ▶ 預覽模式下，您可使用 ☺ 放大/使用 ☺ 縮小。
亮度	從 2.0 到 2.0，間隔等級為 0.5。等級越高，畫面亮度越大。 ▶ 預覽模式下，您可使用 ☺ 調節亮度。

白平衡	您可根據天氣情況，調整背景照片的色調。 自動、日光、陰天、照明燈、室內
夜間模式	選擇「開啓」後，您可在夜間拍攝效果更好的相片。
畫框拍攝	拍照時，您可套用九種畫框效果中的一種。 (僅可用於牆紙大小的情況)
計時器	您可延遲相機快門時間。無、3秒、5秒、10秒；啓用計時器後，畫面上會顯示 ☺ 。
效果	無、黑白、負片、復古
聲音	選擇所需快門聲音。
記憶體	選擇所需記憶體，「手機」或「外置」。
鏡像	選擇「開啓」後，您可啓用鏡像效果。
轉換鏡頭	您可在內外相機鏡頭之間進行轉換。
預覽樣式	正常和全屏幕

相機

2. 完成所有設定後，請按右軟鍵 [關閉]。
3. 將鏡頭聚焦於想拍攝的物件並按 **OK** 鍵。
4. 按 **OK** 儲存相片。拍攝的相片會儲存在「我的檔案」的「圖片」資料夾中。
您可透過按右軟鍵 [發送]，以訊息、電郵或藍芽方式直接發送圖片。

注意


按 **C** 返回到預覽模式，而不儲存圖片。

視像攝錄機

功能表 4.2

此應用程式可讓您拍攝影片。您可在該功能表中播放及觀看已儲存的影片檔案。完成錄製後，可透過訊息、電郵或藍芽來發送短片。

顯示目前相機設定。

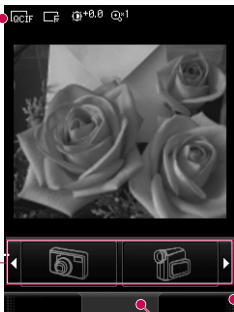

您可使用 **◀** / **▶** 在相機和視像攝錄機之間切換。

透過右軟鍵，您可轉換內外鏡頭。

按 **OK** 可錄製短片。

1. 按左軟鍵可存取「選項」並設定以下所需環境。

- ▶ 透過 **◀** / **▶** 在選項功能表之間移動。
- ▶ 憑藉 **▲** / **▼** 選擇所需值並透過左軟鍵 [選擇] 或 **OK** 確認選擇。

相機

轉到	啓動「影片」資料夾，且現有影片顯示為縮圖。您可透過按  來檢視影片。您亦可透過訊息、電郵或藍芽，將所選影片發送給其他人。
大小	320x240 ()、176x144 ()、128x96 ()
質素	超細緻 ()、細緻 ()、標準 ()
補光燈	關閉、常開 ()、錄製時 () ▶ 您可在預覽模式下，透過  開啓／關閉相機補光燈。
縮放	x1 ()、x2 () (注意：可用縮放級別取決於大小。) ▶ 預覽模式下，您可使用  放大使用  縮小。
亮度	從 2.0 到 2.0，間隔等級為 0.5。等級越高，畫面亮度越大。 ▶ 預覽模式下，您可使用  調節亮度。

白平衡	您可根據天氣情況，調節背景影片的色調。 自動、日光、陰天、照明燈、室內
夜間模式	選擇「開啓」後，您可在夜間錄製效果更好的影片。
效果	無、黑白、負片、復古
長度	選擇所需錄製時間。 訊息、30 秒、1 分鐘、2 分鐘、5 分鐘和 60 分鐘
記憶體	選擇所需記憶體，「手機」或「外置」。
鏡像	選擇「開啓」後，您可啓用鏡像效果。
聲音	決定是否錄音。
轉換鏡頭	您可在內外鏡頭之間進行轉換。

2. 完成所有設定後，請按右軟鍵 [關閉]。
3. 將鏡頭聚焦於想拍攝的物件並按 **OK** 鍵開始錄製。
按 **OK** 鍵可停止錄製。
 - ▶ 按右軟鍵 [暫停] 可暫停錄製。
4. 按 **OK** 可儲存短片。它將會儲存在「我的檔案」的「影片」資料夾中。
您可透過按右軟鍵 [發送]，以訊息、電郵或藍芽方式直接發送影片。

注意

按 **C** 返回到預覽模式，而不儲存短片。

訊息 [功能表 5]

新增

功能表 5.1

訊息

(功能表 5.1.1)

您可編寫和編輯包含文字、圖像、影片和聲音的訊息。

1. 在「訊息」欄位中輸入您的訊息。

「訊息」欄位中的「選項」功能表

▶ **附加:** 您可執行以下動作：

1. 圖片：您可插入圖像。(每張投影片一張圖像)
2. 拍照：相機模組開啓，您即可拍照。然後，該圖片會插入到訊息視窗中。(每張投影片一張圖片)。
3. 影片：您可插入短片。(每張投影片一個影片)
4. 拍攝影片：視像攝錄機模組開啓，您即可攝錄影片。該錄製影片會插入到訊息中。(每張投影片一個影片)
5. 聲音：您可插入聲音檔案。(每張投影片一個聲音檔案)

6. 錄製聲音：語音備忘錄模組開啓，您即可錄製聲音。錄製的聲音會插入到訊息中。(每張投影片一個聲音檔案)

7. 通訊錄資料：您可新增儲存在「通訊錄」中的姓名和/或號碼。選擇要發送的「名稱」、「電話號碼」或「名稱及號碼」並按 **OK**。「通訊錄」列表開啓，您可搜尋要插入的聯絡人。

8. 常用範本：您可插入儲存在手機上的文字範本。選擇一個後，按 **OK**。所選範本會插入到「訊息」視窗中。

9. 抄本：選擇此選項可插入抄本。

0. 標題：選擇此選項可插入標題。

- * 新增投影片：選擇此項可新增投影片。

- # 符號：您可插入符號。輸入對應的數字鍵後，按 **OK**。

▶ **新增收件者：**您可從「通訊錄」中新增收件者，或直接輸入號碼。

▶ **發送：**選擇此選項可發送建立的訊息。

- ▶ **儲存至草稿**：選擇此項可將訊息儲存至草稿。
 - ▶ **語言輸入**：選擇所需字典模式。
 - ▶ **新增至字典**：您可將字詞新增到字典。
 - ▶ **取消**：選擇此項可取消編輯。
2. 按右軟鍵 [繼續]。您可從「通訊錄」中新增收件者或直接輸入號碼。(您最多可輸入 10 個號碼。)

「收件者」欄位中的「選項」功能表

- ▶ **新增收件者**：您可從「通訊錄」中新增收件者，或直接輸入號碼。
 - ▶ **發送**：選擇此項可發送訊息。
 - ▶ **儲存至草稿**：將訊息儲存至草稿。
 - ▶ **取消**：選擇此項可取消編輯。
3. 按右軟鍵 [發送] 可發送訊息。訊息會自動儲存在「已發送的訊息」資料夾中。如果該訊息尚未發送，則仍位於「寄件匣」中，且顯示發送失敗狀態。

電郵

(功能表 5.1.2)

若要傳送/接收電郵，您必須建立一個電郵帳戶。(參閱第 51-52 頁，了解如何建立電郵帳戶。)

1. 在「收件者」、「抄本」、「密送」欄位中輸入收件者的電郵地址。您可透過按 **OK** 鍵來搜尋「通訊錄」。

注意

- 在 Cc (抄本) 欄位中輸入要抄送的電郵地址，以轉寄電郵。
- 在 Bcc (密送) 欄位中輸入要隱藏抄送的電郵地址，以轉寄電郵，但不顯示相關資訊。
- 收件者 (To)、抄送地址 (Cc) 和隱藏抄送地址 (BCC) 欄位僅容許使用有效的電郵地址。指定電郵地址後，會顯示您可指定另外一個地址的欄位。您可在「收件人」和「抄本」欄位中指定多達 20 個收件者，在「密送」欄位中指定多達 10 個收件者。

訊息

- 將游標移至「標題」欄位，並輸入標題內容。
 - 將游標移至「訊息」欄位後，您可輸入訊息內容。
 - 透過左軟鍵 [選項]，您可使用以下功能。
 - ▶ **附加：**選擇該功能表，以插入特殊字元、範本和通訊錄。也可以附加多媒體檔案（圖片、影片和聲音）。
 - ▶ **新增收件者：**選擇該功能表，以插入儲存在「通訊錄」中的電郵地址。（游標位於「收件者」/「抄本」/「密送」欄位時，僅顯示「選項」功能表。）
 - ▶ **發送：**發送建立的電郵。
 - ▶ **儲存至草稿：**選擇此項可將訊息儲存至「草稿」。
 - ▶ **預覽：**發送前，您可預覽建立的電郵。
 - ▶ **檢視附件：**顯示附加的檔案。（該項目僅在已附加檔案時可用。）
 - ▶ **語言輸入：**選擇所需字典模式。
 - ▶ **新增至字典：**您可將新字詞加入到字典。
 - ▶ **設定郵件重要性：**您可設定要發送郵件的重要性。
 - ▶ **取消：**結束電郵撰寫程式。
- 完成編寫電郵時，按右軟鍵 [發送] 以發送電郵。

收件匣

功能表 5.2

- 您可檢視儲存的訊息。選擇訊息，然後按 **OK** 以檢視該訊息。
- 透過 **◀** / **▶**，您可檢視前一則或下一則訊息。
- 要檢視多媒體訊息(通知)，選擇訊息通知檢視畫面中的「重新接收」。然後，檔案會進行傳輸，完成後，您可檢視該檔案。

透過「收件匣」中的左軟鍵 [選項]，您可使用以下功能。

- ▶ **檢視：**開啓所選訊息。
- ▶ **回覆：**建立對所選訊息的寄件者或所有收件者的回覆。

- ▶ **轉寄**：轉寄所選訊息。

注意

不支援多媒體訊息 (通知) 和 WAP PUSH 訊息。

- ▶ **撥打視像通話**：您可撥打視像通話。
- ▶ **刪除**：刪除目前的訊息。
- ▶ **建立新訊息**：您可編寫新的訊息或電郵。
- ▶ **標記/取消標記**：您可選擇標記或標記全部以進行多重刪除。
- ▶ **篩選**：按所需訊息類型顯示訊息。
- ▶ **複製**：在文字訊息下，您可將訊息複製到手機或智能咭。
- ▶ **移動**：在文字訊息下，您可將訊息移至手機或智能咭。
- ▶ **訊息資訊**：您可檢查訊息類型、日期和時間及儲存位置。

注意

您可檢查電郵中已儲存的電郵內容 [功能表 5.6]。

草稿

功能表 5.3

您可檢視儲存的訊息。選擇訊息，然後按 **OK** 以編輯該訊息。透過左軟鍵 [選項]，您可使用以下功能。

- ▶ **編輯**：可編輯訊息。
- ▶ **刪除**：刪除所選訊息。
- ▶ **建立新訊息**：您可編寫新的訊息或電郵。
- ▶ **標記/取消標記**：您可選擇標記或標記全部以進行多重刪除。
- ▶ **篩選**：按所需訊息類型顯示訊息。
- ▶ **訊息資訊**：您可檢查訊息類型、日期和時間及儲存位置。

寄件匣

功能表 5.4

「寄件匣」是待發訊息的臨時儲存位置。發送失敗的訊息也置於「寄件匣」中。例如，如果未正確設定「電郵」帳戶，電郵將會置於「寄件匣」中。

1. 選擇訊息，然後按 **OK** 以檢視該訊息。
2. 透過左軟鍵 [選項]，您可使用以下功能。

[對於發送/等待發送的訊息]

- ▶ **建立新訊息**：您可編寫新的訊息或電郵。
- ▶ **取消**：您可停止發送／等待發送狀態。
- ▶ **訊息資訊**：您可檢查訊息類型、日期和時間及儲存位置。

[對於發送失敗的訊息]

- ▶ **重新傳送**：重新傳送所選訊息。
- ▶ **轉寄**：轉寄所選訊息。
- ▶ **編輯**：可編輯所選訊息。
- ▶ **刪除**：刪除目前的訊息。
- ▶ **建立新訊息**：您可編寫新的訊息或電郵。
- ▶ **標記/取消標記**：您可選擇標記或標記全部以進行多重刪除。
- ▶ **訊息資訊**：您可檢查訊息類型、日期和時間及儲存位置。

已發送的訊息

功能表 5.5

顯示已發送的訊息 (訊息/電郵)。

[選項]

- ▶ **檢視**：開啓所選訊息。
- ▶ **轉寄**：轉寄所選訊息。
- ▶ **刪除**：刪除目前的訊息。
- ▶ **編輯**：可編輯所選訊息。
- ▶ **建立新訊息**：可編寫新訊息。
- ▶ **儲存號碼**：儲存寄件者的號碼。
- ▶ **標記/取消標記**：您可選擇標記或標記全部以進行多重刪除。
- ▶ **篩選**：按所需訊息類型顯示訊息。
- ▶ **複製**：在文字訊息下，您可將訊息複製到手機或智能咭。
- ▶ **移動**：在文字訊息下，您可將訊息移至手機或智能咭。
- ▶ **訊息資訊**：您可檢查訊息類型、日期和時間及儲存位置。

電郵

功能表 5.6

檢視電郵訊息列表

1. 選擇電郵帳戶，然後按 **OK** 以檢視已接收的電郵列表。
2. 使用右軟鍵 [重新接收]，您可從所選帳戶的電郵伺服器中重新接收新電郵列表。
3. 在電郵列表中，透過左軟鍵 [選項]，您可使用以下功能。
 - ▶ **檢視**：開啓所選電郵。
 - ▶ **回覆**：建立對選定電郵的回覆。
 - ▶ **轉寄**：將所選電郵訊息轉寄給其他人。
 - ▶ **重新接收**：重新接收新電郵訊息。
 - ▶ **刪除**：刪除電郵。
 - ▶ **建立新訊息**：建立新訊息或電郵。
 - ▶ **儲存地址**：將寄件者的地址儲存在「通訊錄」。
 - ▶ **標記/取消標記**：您可選擇標記或標記全部以進行多重刪除。

- ▶ **設為已讀/未讀**：可將所選電郵設定為已讀或未讀。
- ▶ **訊息資訊**：訊息的簡要資訊，包括大小、類型、日期、時間和檔名。

檢視電郵訊息

1. 選擇其中一封已接收的電郵，按「開啓」鍵以接收電郵的內容。
2. 已接收電郵內容會自動顯示於「檢視」畫面上。
3. 透過 **◀ / ▶**，您可檢視前一封或下一封電郵內容。
4. 在電郵「檢視」畫面上，您可使用左軟鍵 [選項] 選擇以下功能。
 - ▶ **回覆**：建立對選定電郵的回覆。
 - ▶ **轉寄**：將所選電郵訊息轉寄給其他人。
 - ▶ **刪除**：刪除電郵。
 - ▶ **儲存地址**：將寄件者的地址儲存在「通訊錄」。
 - ▶ **建立新訊息**：建立新訊息。

- ▶ **使用：**從電郵訊息中擷取號碼、電郵地址或網址。
- ▶ **檢視附件：**顯示附加的檔案。
- ▶ **檢視收件者地址：**顯示收件者和抄送 (Cc) 的電郵地址。
- ▶ **訊息資訊：**訊息的簡要資訊，包括大小、類型、日期、時間和檔案名。

常用範本

功能表 5.7

文字範本

(功能表 5.7.1)

透過左軟鍵 [選項]，您可新增、編輯和刪除常用的實用短語。

注意

取決於服務供應商的不同，部份常用範本會儲存為預設設定。

多媒體範本

(功能表 5.7.2)

建立多媒體訊息時，您可新增、編寫和檢視可用範本。預設情況下，會儲存五種範本 (生日、歡迎辭、假期、感謝和抱歉)。

可使用以下選項。

- ▶ **新增：**您可建立新多媒體範本。
- ▶ **編寫多媒體訊息：**透過所選範本，建立多媒體訊息。
- ▶ **檢視：**顯示所選範本。
- ▶ **編輯：**編輯所選範本。
- ▶ **刪除：**刪除所選範本。(無法刪除預設的五種範本)

訊息設定

功能表 5.8

文字訊息

(功能表 5.8.1)

您可設定文字訊息的相關選項。

1. **文字訊息中心：**輸入文字訊息中心的地點。
2. **發送報告：**啓用該選項後，您可驗證該訊息是否已成功發送。
3. **有效時期：**這項網絡服務可讓您設定訊息儲存在短訊中心的期限。
4. **發送長文字為：**將長文字訊息選為多個文字訊息或多媒體訊息。

多媒體訊息

(功能表 5.8.2)

您可設定多媒體訊息的相關選項。

1. **接收模式：**您可分別使用本地網絡和漫遊網絡來設定接收模式。如果選擇「自動」，您會自動接收到多媒體訊息。如果選擇「手動」，則僅可在收件匣中接收通知訊息，然後再決定是否下載多媒體訊息。
2. **發送報告：**可讓您決定是否要求收件者發送確認郵件，及是否發送確認郵件給寄件者。
 - ▶ 要求報告：決定是否對多媒體訊息要求發送確認郵件。
 - ▶ 允許報告：決定是否針對發送確認郵件要求允許傳送發送確認郵件。
3. **閱讀回覆：**可讓您決定是否對收件者要求閱讀確認郵件，與是否允許發送閱讀確認郵件給寄件者。
 - ▶ 要求回覆：決定是否對多媒體訊息要求閱讀確認郵件。
 - ▶ 允許回覆：決定是否針對閱讀確認郵件要求允許發送閱讀確認郵件。

4. **重要性：**您可選擇訊息的重要性(最低優先、正常優先及最高優先)。
5. **有效時期：**發送多媒體訊息時，可讓您設定訊息的有效時期。該訊息僅會在設定的期限內儲存在多媒體訊息伺服器中。
6. **投影片播放時間：**編寫訊息時，可讓您設定每頁的播放時間。
7. **發送時間：**設定向收件者傳送訊息的時間。多媒體訊息中心會在發送時間後發送訊息。
8. **多媒體訊息中心：**允許您設定網絡資訊，如 MMSC 和 WAP 網閘，以發送多媒體訊息。
 使用左軟鍵 [選項]，您可啓動、新增或刪除網絡設定。由核取符號選取的網絡設定名稱是目前的設定值。透過按右軟鍵 [編輯]，您可在編輯模式下檢視和編輯網絡設定的內容。在「選項」下建立新網絡設定時，亦會顯示編輯畫面。每個項目的含義如下。
 - ▶ 標題：網絡設定名稱。

- ▶ **MMSC 主頁：**輸入多媒體訊息中心的網址。
- ▶ **多媒體訊息 proxy 伺服器：**輸入 WAP 網關地址和連接埠號碼。
- ▶ **連線模式：**選擇其中一種連線模式。(帶 Proxy 的 TCP、無 Proxy 的 TCP 及 UDP)
- ▶ **存取點：**指定存取點名稱。(查看 WAP 連線設定。)

按右軟鍵 [完成] 以儲存變更並完成多媒體訊息中心設定。


電郵

(功能表 5.8.3)

您可設定用於接收和發送電郵的設定。

1. **允許回覆電郵：**決定是否針對閱讀確認郵件要求允許發送閱讀確認郵件。
2. **要求回覆電郵：**決定是否要求閱讀確認郵件。
3. **自動接收：**您可設定自動接收，以自動從內送郵件伺服器中接收電郵。新郵件抵達時，畫面的頂端會顯示圖示。您可將自動接收時隔選為關閉、15 分鐘、30 分鐘或 1 小時。

請注意，使用此自動接收功能可能需要另外收費。

4. **轉寄與回覆時加入原始訊息：**決定是否將轉寄或回覆訊息中加入接收時的原始訊息。
5. **簽名：**您可設定文字簽名，附加在電郵的最後。設定的簽名文字會在發送郵件時，自動或手動地附加到電郵的最後。
6. **重要性：**您可選擇電郵的重要性(最低優先、正常優先及最高優先)。
7. **電郵帳戶：**您可建立或設定包含電郵伺服器和使用者 ID 的電郵帳戶。透過按右軟鍵 [編輯]，您可編輯所選的電郵帳戶。您可透過  選擇一個電郵帳戶，以用於發送郵件。透過左軟鍵 [選項]，您可選擇以下功能。
 - ▶ **新增：**建立新電郵帳戶。
 - ▶ **編輯：**編輯所選的電郵帳戶。
 - ▶ **啓動：**啓用所選的帳戶以用於外寄郵件。
 - ▶ **刪除：**刪除所選的電郵帳戶。包含在帳戶中的所有電郵將會被刪除。

建立新電郵帳戶

1. 從電郵帳戶功能表選項中選擇「新增」。
2. 需要設定以下項目。

標題	輸入一個標題。 .
用戶帳號	輸入電郵帳戶的用戶帳號。
密碼	輸入電郵帳戶密碼。
電郵地址	輸入外寄郵件的電郵地址。
回覆電郵地址	輸入要回覆的電郵地址。
外寄郵件伺服器	輸入外寄電郵伺服器。
內送郵件伺服器	輸入內送電郵伺服器。
SMTP 連接埠號碼	輸入郵件伺服器連接埠號碼。一般而言，SMTP (外寄郵件伺服器連接埠號碼) 為 25。
內送郵件伺服器連接埠	輸入郵件伺服器連接埠號碼。一般而言，內送郵件伺服器連接埠號碼為 110(POP3) 或 143(IMAP4)。
最大接收大小	使用 <input type="checkbox"/> 選擇最大電郵接收大小。接收大小限制不可超過 1MB。 .
信箱類型	使用 <input type="checkbox"/> 選擇信箱類型，POP3 或 IMAP4。
儲存到伺服器	使用 <input type="checkbox"/> 決定是否在內送郵件伺服器中保留訊息副本。 當信箱類型設定為 IMAP4 時，訊息副本始終會儲存到伺服器上。

儲存已發送的郵件到	選擇儲存已發送郵件的位置 (信箱類型設定為 IMAP4 時)。信箱類型為 POP3 時，已發送的郵件始終會儲存到手機中。
接入點	選擇連線到互聯網的接入點。您可使用 <input type="checkbox"/> 選擇設定的接入點。
自動接收	透過 <input type="checkbox"/> ，決定是否啟用自動接收。使用自動接收，您可設定自動接收時間隔 [功能表 5.8.3.3]。(請參閱第 50 頁。)
SMTP 驗證	使用 <input type="checkbox"/> 決定外寄郵件伺服器是否需要驗證。當 SMTP 驗證設定為「開啓」時，您可輸入 SMTP 使用者名稱和 SMTP 密碼以進行 SMTP 驗證。
APOP 安全登入	透過 <input type="checkbox"/> ，決定是否啟用 APOP 安全登入。當信箱類型為 IMAP4 時，則 APOP 安全登入始終設定為「關閉」。

3. 按右軟鍵 [完成] 以完成電郵帳戶設定。

編輯電郵帳戶

1. 從電郵帳戶列表中選擇所需電郵帳戶，然後按右軟鍵 [編輯]。
2. 透過上下移動游標，可編輯所需欄位。
3. 完成設定後，請按右軟鍵 [完成] 以完成電郵帳戶設定。

注意

嘗試變更信箱類型時，之前下載的所有電郵將會被刪除。

資訊服務

(功能表 5.8.4)

- ▶ **區域廣播:** 您可設定接收模式。
- ▶ **頻道:** 您可新增或編輯頻道。
- ▶ **語言:** 您可設定資訊服務的語言。資訊服務訊息將會以您選擇的語言顯示。

服務訊息

(功能表 5.8.5)

- ▶ **服務訊息**
您可設定訊息設定選項，如 PUSH(SI/SL) 和 OTAP。
- **訊息接收:** 如果將此項設定為「開啓」，則會接收到所有服務訊息。
- **載入服務:** 如果將訊息接收設定為「開啓」，您可從「提示」、「停用」及「時常」中選擇服務載入選項。
- ▶ **時常:** S/L 訊息會使用該訊息中指定的網址自動發送到互聯網。

- ▶ **提示:** 當 S/L 訊息抵達時，會顯示一則快顯訊息，詢問您是否處理 S/L 訊息。
- ▶ **停用:** S/L 訊息會在抵達時捨棄。
- ▶ **服務安全**
您可處理有關 PUSH(SI/SL) 和 OTAP 訊息的所有收件者選項。

- 服務安全設定

- ▶ **受信任的:** 如果將其設定為「開啓」，則手機會透過對比「信任列表」來驗證訊息的適當性。
- ▶ **不受信任的:** 如果將其設定為「開啓」，則手機會透過對比「不受信任列表」來驗證訊息的適當性。
- ▶ **更新:** 透過將此選項設定為「開啓」，您可憑藉訊息抵達地址，更新受信任/不受信任列表。

服務訊息抵達後，您可透過從快顯功能表中選擇一個選項，進而選擇要更新的列表。

而且，訊息中的伺服器 SMSC 和始發地址會儲存到信任/不受信任列表中。

- 受信任列表 (僅當有效「服務安全設定 → 受信任的」狀態為開啓)

具有匹配值 (SMSC 和始發地址) 的訊息表示有效。

與 SMSC 或 OA 地址值不同的訊息將被捨棄。

- 不受信任列表 (僅當有效「服務安全設定 → 不受信任的」狀態為開啓)

其方式與受信任列表完全相反。

具有匹配值 (SMSC 和始發地址) 的訊息表示無效。

具有 SMSC 或 OA 地址不同值的訊息將會被接受。

我的檔案 [功能表 6]

圖片

功能表 6.1

使用相機拍攝的相片會儲存到「圖片」資料夾中，而您亦可建立新的資料夾以便管理它們。您還可以將所選檔案儲存為動畫 GIF，並將多個檔案發送給其他人。

選定一個檔案後，透過按左軟鍵 [選項]，可顯示以下選項。

- ▶ **檢視**：可檢視所選圖片。
- ▶ **建立新資料夾**：可在目前選定的資料夾中建立新資料夾。
- ▶ **發送**：可透過訊息、電郵或藍芽來發送所選圖像。
- ▶ **檔案**
 - 移動：可將檔案移動到其他資料夾。
 - 複製：可將檔案複製到其他資料夾。
 - 重新命名：可重新命名圖像。
 - 編輯：可編輯圖像。
 - 製作 GIF 動畫：您可使用不同相片建立動畫 GIF 檔案 (最多可顯示 10 個解像度為 240X320、最大 2MB 的檔案)。
 - 資訊：顯示關於選定圖像檔案的資訊。

- ▶ **刪除**：刪除所選圖像。
- ▶ **標記/取消標記**：使用標記功能，您可發送、刪除、移動和複製多個檔案。
- ▶ **屏幕顯示**：可將圖像設定為屏幕顯示 (桌面、撥出通話、開機圖像、關機圖像)。
- ▶ **播放投影片**：可開始播放投影片。
- ▶ **排序方式**：可按名稱、日期或檔案類型來排序。
- ▶ **列表檢視/多格子檢視**：可以列表檢視或多格子檢視來檢視圖像。
- ▶ **記憶體狀態**：可檢視記憶體狀態 (手機記憶體或外置記憶咭)。

聲音

功能表 6.2

「聲音」資料夾由用於下載鈴聲和音樂的內置連結及包含預設聲音和錄音的資料夾組成。您可在此處管理、發送或將聲音設定為鈴聲。

影片





功能表 6.3

您可在此處管理或發送下載或錄製的短片。

透過「影片」列表中的左軟鍵 [選項]，可執行以下操作。

- ▶ **播放：**播放影片。
- ▶ **建立新資料夾：**可建立新資料夾。
- ▶ **發送：**如果未受數碼權限管理 (DRM) 保護，您可透過訊息、電郵或藍芽來發送所選短片。
- ▶ **檔案**
 - 移動：將檔案移至手機記憶體或外置記憶體中。
 - 複製：複製手機記憶體或外置記憶體中的檔案。
 - 重新命名：可重新命名影片。
 - 資訊：顯示關於選定影片檔案的資訊。
- ▶ **刪除：**刪除所選影片。
- ▶ **標記/取消標記：**使用標記功能，您可發送、刪除、移動和複製多個檔案。

- ▶ **聲音主題：**可將影片設定為語音鈴聲或視像鈴聲。
- ▶ **排序方式：**可按日期、檔案類型或名稱來排序檔案。
- ▶ **列表檢視/多格子檢視：**可以列表檢視或多格子檢視來檢視圖像。
- ▶ **記憶體狀態：**顯示記憶體狀態 (手機記憶體或外置記憶咭)。

透過影片播放器，您可觀賞影片。影片檔案以縮圖顯示在列表中。使用  /  /  / ，您可選擇所需影片。選擇所需的影片後，選擇「播放」可觀賞錄製的影片。

選擇所需的影片後，選擇「播放」可觀賞錄製的影片。

選定選項 1. 「播放」時，短片會使用 Media Player 進行播放。要暫停播放，請在播放過程中按 **OK**。要繼續播放，請再次按 **OK**。

要擷取畫面截圖，請在播放暫停時，按右軟鍵 [拍攝]。

要全屏檢視目前的播放內容，請在播放過程中按右軟鍵。

我的檔案

要恢復到之前的畫面大小，請在全屏模式下再次按右軟鍵。

在 Media Player 中觀賞短片時，可使用以下選項：

- ▶ **暫停/播放**：可播放或暫停播放檔案。
- ▶ **發送**：如果檔案未受數碼權限管理 (DRM) 保護，您可透過訊息、電郵或藍芽來發送影片。
- ▶ **跳至列表**：返回列表。
- ▶ **刪除**：刪除所選影片。
- ▶ **聲音主題**：可將影片設定為話音鈴聲或視像鈴聲。
- ▶ **闊屏幕檢視**：可在闊屏幕檢視模式下觀賞影片。
- ▶ **靜音/取消靜音**：如果音量設定為大於零，則靜音模式會啟用；而當音量設定為零，則取消靜音模式會啟用。
- ▶ **拍攝**：可將暫停畫面的內容儲存為一個圖像檔案 (僅可在暫停模式下)。
- ▶ **設定重複**：可設定重複選項 (無/目前檔案/全部檔案)。

▶ 移至檔案

- 上一個檔案：播放上一個影片檔。
- 下一個檔案：播放下一個影片檔。

- ▶ **檔案資訊**：播放時，您可檢查檔案資訊 (檔案名稱、大小、日期、類型、長度 and 保護)。

遊戲與應用程式

功能表 6.4

選擇此功能表後，您可輕鬆執行某些應用程式。位於「遊戲與應用程式」資料夾中的所有遊戲和應用程式均為 Java 應用程式 (MIDlet)。預設情況下，從入口網站下載的應用程式均會儲存到「遊戲與應用程式」資料夾中。

藍芽檔案

功能表 6.5

使用藍芽接收的檔案會儲存在該資料夾中。您無法在藍芽檔案資料夾中建立子資料夾。

您無法複製或移動不受「我的檔案」管理的檔案。

顯示的選項取決於所選的檔案類型。例如，對於圖像，您可使用以下功能。

- ▶ 檢視/編輯/移動/複製/刪除/重新命名檔案。
- ▶ 標記/取消標記一個或多個檔案。
- ▶ 如果檔案未受數碼權限管理 (DRM) 保護，您可透過多媒體訊息、電郵及藍芽來發送。
- ▶ 如果相關，您可將圖像設定為屏幕主題 (桌面、撥出通話、開機圖像、關機圖像)。
- ▶ 如果相關，可開啓或設定 (標準或全屏、播放時隔) 播放投影片。
- ▶ 如果相關，可透過不同的圖片，建立動畫 GIF 檔案。
- ▶ 按名稱、日期或檔案類型來排序檔案。
- ▶ 記憶體資訊 (手機記憶體或外置記憶咭)。
- ▶ 檢視檔案資訊。

其他檔案

功能表 6.6

除圖片、聲音、影片、遊戲和應用程式的其他檔案均儲存在該資料夾中。

外置記憶體


功能表 6.7

如果您購買選擇性的外置 microSD 記憶咭，則可管理更多的內容。請參閱第 19 頁上「如何使用 microSD 記憶咭」部份，了解如何插入與取出記憶咭。您可如同在手機上一樣來管理內容。

記事簿與工具 [功能表 7]

鬧鐘

功能表 7.1

如果您設定鬧鐘，則  會顯示在指示符列中。指定的鬧鐘會在設定的時刻響鈴。按 **OK** 以停止鬧鐘後，鬧鐘隨即釋放。按右軟鍵 [延後] 並選擇延後間隔。鬧鐘響鈴停止，並在所選延後時間後恢復響鬧。您最多可設定 5 個鬧鐘。

1. 根據需要，在鬧鐘列表中選擇要設定的鬧鐘。如果沒有鬧鐘，請按右軟鍵 [新增] 以新增鬧鐘。
2. **設定/取消鬧鐘**：透過使用可指定鬧鐘為開啓狀態的選項或透過選擇響鬧時間來設定或取消鬧鐘。
3. **輸入響鬧時間**：透過指定小時和分鐘，輸入所需的響鬧時間。如果手機採用 12 小時的時間格式，則可選擇「AM」或「PM」。
4. **選擇重複模式**：使用 **</>** 選擇所需重複模式或按 **OK** 從列表中選擇所需的模式。
5. **選擇鈴聲**：使用 **</>** 或按 **OK** 開啓列表來選擇在鬧鐘時間響鈴的鈴聲。
6. **輸入備忘錄**：輸入鬧鐘名稱。

7. **延後**：可設定鬧鐘的延後時隔。
8. 完成鬧鐘設定後，請按右軟鍵 [完成]。

注意

即使手機已關閉，鬧鈴仍會響鈴。

日曆

功能表 7.2

日程表查詢和搜尋

1. 按月參考

您可按月參考您的日程表。游標位於目前日期上，而指定的日期亦會標記出來。

針對游標所處日期而儲存的日程將由一個圖示表示。按快捷鍵 **1** 移至上一年，按 **3** 移至下一年，而按 **5** 移至今天。按 **7** 移至上一月，按 **9** 移至下一月。按 ***** 移至週日曆，按 **#** 移至月日曆。您可使用 **▲/▼/◀/▶** 來移動日期。

2. 按日參考

按 **OK** 一下「按月參考」移至「按日參考」，您可於此參考每日的日程表。您可使用 **</>** 參考移動日期標籤。作為搜尋結果，會顯示簡要的日程內

容、重複設定組態和鬧鐘設定組態。您可透過 SMS (文字訊息)、MMS (多媒體訊息)、電郵或藍芽，將日程表發送給其他手機或互聯網網站。

3. 詳細參考

您可參考詳細的日程表，全部內容為使用者編定的日程表。您可使用左軟鍵 [選項]，透過 SMS (文字訊息)、MMS (多媒體訊息)、電郵或藍芽，將日程表發送給其他手機或互聯網網站。

搜尋日程表

您可新增日程表。您可設定開始日期、結束日期、開始時間、結束時間、內容、日程表類型、重複和日程表鬧鐘。

- ▶ **設定類型：**約會、週年紀念、生日和其他
- ▶ **設定重複：**一次、每天、每星期、每月、每年、使用者設定
- ▶ **設定鬧鐘：**無鬧鐘設定、準時、15 分鐘前、30 分鐘前、1 小時前、1 天前、3 天前、1 星期前

刪除日程表

1. 刪除先前的記錄

使用該功能表，您可刪除所有過去的日程表。

2. 全部刪除

使用此功能，您可刪除所有已儲存的日程表內容。

設定及重設假期

您可設定或清除使用者的假期。按左軟鍵 [選項] 並選擇「設定假期」。所選的日期會以紅色顯示。

要清除假日，請按左軟鍵 [選項] 並選擇「重設假期」。

日程表通知

如果使用者已完成鬧鐘設定，則指定的鬧鐘聲音將會響鈴。如果通知時間位於日程表開始時間之前，您可再次設定鬧鐘。

記事簿與工具

工作

功能表 7.3

您可檢視、編輯和新增要完成的工作。工作按時間順序顯示。可透過不同的方式顯示已完成或未完成的工作。

新增

要新增工作，請按「工作」列表管理畫面上的右軟鍵 [新增]。然後輸入該工作的日期、記錄和重要性。完成資料輸入後，按右軟鍵 [完成] 以儲存新工作。

詳細檢視和編輯

要檢視詳細工作內容，請將游標置於「工作」列表中的所需項目上，然後按 **OK**。透過使用左軟鍵 [選項]，您可編輯和刪除工作。您亦可透過標記/取消標記，一次過刪除多個或所有工作。

設定工作狀態

已完成的工作會以刪除線標記，並顯示在「工作」列表中未完成工作的下方。透過選擇「選項」，您可將「設為已完成」的工作「設為未完成」。

備忘錄

功能表 7.4

使用備忘錄管理功能，您可檢視並管理已儲存的備忘錄內容並新增備忘錄。

新增備忘錄

要新增備忘錄，按右軟鍵 [新增]。輸入備忘錄內容。按右軟鍵 [完成]，您可將備忘錄儲存到列表中。

編輯和刪除備忘錄

反白選取所需備忘錄並按 **OK** 以檢視其內容。使用左軟鍵 [選項]，您可編輯或刪除備忘錄的內容。透過按 **C**，您可返回到備忘錄管理畫面。透過使用標記/取消標記選項選擇多個或所有備忘錄，然後按右軟鍵 [刪除] 來刪除備忘錄。

計算機

功能表 7.5

計算器模組可讓您執行基本的算術功能 (如加、減、乘、除) 以及一些科學計算功能。

1. 按下左軟鍵 [選項]。
2. 選擇「功能」並選擇適合的功能。

您可透過數字鍵輸入數字，透過  /  和  /  輸入運算符。按  可輸入小數點。每次按  後，系統會以相反方向連續刪除字元。按住 ，所有字元會以相反方向一次過刪除。

計算完成後，結果會顯示在畫面上。按一個數字會清除之前的結果，即使未按右軟鍵 [清除]，計算機亦會等待新的輸入內容。計算完成後，結果會顯示在畫面上，按符號可將結果儲存到該符號中，然後繼續計算。

單位轉換器

(功能表 7.6)

使用該功能表，使用者可轉換匯率、面積、長度、重量、溫度、體積和速度。

匯率

(功能表 7.6.1)

1. 選擇「匯率」功能表。
2. 透過 [匯率]，使用者可設定外幣匯率。
3. 最多可輸入 6 種對應於英鎊的貨幣匯率，然後按 [完成]。然後，您可將一種貨幣轉換為另外一種。
4. 您可檢視多達 6 種貨幣單位的值。

5. 按 [重新設定] 以清除目前輸入欄位。

面積

(功能表 7.6.2)

1. 選擇「面積」功能表。
2. 使用 [單位]，選擇要轉換的單位。
3. 輸入標準單位並檢視轉換值。
4. 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。

長度

(功能表 7.6.3)

1. 選擇「長度」功能表。
2. 使用 [單位]，選擇要轉換的單位。
3. 輸入標準單位並檢視轉換值。
4. 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。

重量

(功能表 7.6.4)

1. 選擇「重量」功能表。
2. 使用 [單位]，選擇要轉換的單位。
3. 輸入標準單位並檢視轉換值。

記事簿與工具

- 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。

溫度

(功能表 7.6.5)

- 選擇「溫度」功能表。
- 使用向上或向下按鍵，將游標置於所需的單位上。
- 輸入標準單位並檢視轉換值。
- 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。
- 透過選擇 [-]，您可插入負數值。

體積

(功能表 7.6.6)

- 選擇「體積」功能表。
- 使用 [單位]，選擇要轉換的單位。
- 輸入標準單位並檢視轉換值。
- 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。

速度

(功能表 7.6.7)

- 選擇「速度」功能表。
- 使用 [單位]，選擇要轉換的單位。
- 輸入標準單位並檢視轉換值。
- 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。

世界時間

功能表 7.7

世界時間功能可提供世界主要城市的時間資訊。透過使用 **</>** 導覽，您可檢視所需國家或城市的時間。透過使用右軟鍵 [本地]，您可將目標城市作為本地時間標準。

語音備忘錄

功能表 7.8

- 錄音前，按左軟鍵 [選項] 以顯示選項快顯功能表。
- 使用 **^ / v** 移動到所需的功能表項目，然後按 **OK**。

► **質素：**您可從特細緻、細緻和標準中選擇錄音質素。

- ▶ **長度**：您可將錄音長度設定為多媒體訊息大小、30 秒或 1 分鐘。
 - ▶ **新錄製**：選擇該功能表，開始錄製到新檔案。
 - ▶ **我的檔案**：開啓「我的檔案」中「語音錄製」資料夾。
3. 按 **OK** 開始錄音。開始錄音後，錄音時間會顯示在 LCD 上。要取消錄音，請按右軟鍵 [取消]。
 4. 完成錄音後，按 **OK** 退出。錄製的檔案會自動儲存到「我的檔案」的「語音錄製」資料夾中。
 5. 未進行錄音時，按 **OK** 可開始在新檔案上錄音。
未進行錄音時，按右軟鍵 [發送] 可發送已錄製的檔案。
使用 **▲** / **▼** 從訊息、電郵或藍芽中選擇一個，並按 **OK**。
 6. 錄音後，按左軟鍵，選擇多個不同的選項。
 7. 使用 **▲** / **▼** 選擇所需的功能表，並按 **OK**。
- ▶ **刪除**：選擇該功能表可刪除錄製的檔案。
 - ▶ **新錄製**：選擇該功能表，開始新的語音錄製。
 - ▶ **發送**：可發送錄製的檔案。使用 **▲** / **▼** 從訊息、電郵和藍芽中選擇一個，並按 **OK**。
 - ▶ **聲音主題**：您可將錄製檔案設定為話音鈴聲、視像鈴聲、開機音效和關機音效。
 - ▶ **我的檔案**：開啓「我的檔案」中「語音錄製」資料夾。
8. 按右軟鍵可關閉子功能表快顯視窗。

通訊錄 [功能表 8]

新增

功能表 8.1

您可記錄新聯絡人的地址。您可輸入新聯絡人的名稱、不同的電話號碼和電郵地址。亦可將聯絡人指定給群組，包括圖像或替身、指定特定鈴聲以及輸入聯絡人備忘錄。其他可用欄位包括主頁網址、住宅地址、公司名稱、職位和公司地址。取決於記憶體使用情況，您可輸入並管理聯絡人地址。

通訊錄列表

功能表 8.2

執行通訊錄地址搜尋功能。預設情況下，搜尋操作按名稱來執行。目前的搜尋方法和找到的結果會顯示在「搜尋」視窗中。您可撥打電話或將訊息發送到所選的電話號碼。您亦可按電話號碼或群組資訊來執行通訊錄搜尋。

群組

功能表 8.3

透過該功能表，您可管理群組資訊 (同時包括儲存到手機和智慧咭中的資訊)。在手機記憶體中，有 4 種預設群組：家庭、朋友、同事和學校。您可新增、編輯和刪除群組。未指定某號碼的鈴聲時，則來自該號碼的電話會將指定給該群組的鈴聲作為其自己的鈴聲。


快速撥號

功能表 8.4

透過該功能表，您可對快速撥號進行管理。快速撥號會在 2-9 之間設定。您可為特定聯絡人地址記錄多達 5 個不同號碼的快速撥號，亦可為同一聯絡人地址指定多個快速撥號號碼。

服務撥號號碼

功能表 8.5

您可檢視由服務供應商指定的「服務撥號號碼」(SDN) 列表 (如果智能咭支援)。此類號碼包括緊急電話、電話號碼查詢和留言信箱號碼。選擇服務號碼後，按  撥打服務電話。

本手機號碼

(功能表 8.6)

可讓您顯示智能咭中的手機號碼。您可將自己目前的號碼儲存在智能咭中。

設定

(功能表 8.7)

通訊錄檢視

(功能表 8.7.1)

選擇要顯示的通訊錄資訊 (從手機記憶體、從智能咭記憶體或全部)。「全部」為預設設定。

顯示圖像/替身

(功能表 8.7.2)

選擇是否顯示圖像/替身。

複製全部

(功能表 8.7.3)

您可在手機記憶體和智能咭記憶體之間複製通訊錄資料。您可複製全部，或依次序複製。

移動全部

(功能表 8.7.4)

您可在手機記憶體和智能咭記憶體之間移動通訊錄資料。您可移動全部，或依次序移動。

清除通訊錄資料

(功能表 8.7.5)

清除所有通訊錄的資料。您可刪除儲存在手機和智能咭上所有通訊錄的資料。

通話 [功能表 9]

如果網絡支援服務區域內的來電線路識別 (CLI)、則您可以查看未接、已接和已撥的電話。號碼與名稱 (如果有的話) 會和來電的日期與時間一起顯示。您也可以查看通話時間。

所有通話

功能表 9.1

可讓您檢視未接、已接和已撥電話的記錄。對於從記錄中選取的號碼，您可撥打電話或發送訊息。您亦可將號碼儲存到「通訊錄」中。

已撥通話

功能表 9.2

可讓您檢視已撥通話記錄，您可以撥打電話或發送訊息，以及將號碼儲存到「通訊錄」中。

已接來電

功能表 9.3

可讓您檢視已接來電記錄，您可以撥打電話或發送訊息，以及將號碼儲存到「通訊錄」中。

未接來電

功能表 9.4

可讓您檢視未接來電記錄，您可以撥打電話或發送訊息，以及將號碼儲存到「通訊錄」中。

智能咭工具組 [功能表 *]

取決於您是否擁有智能咭上的 SAT 支援服務 (即智能咭應用程式工具組)，該功能表 (功能表 *) 可能有所不同。

如果智能咭支援 SAT 服務，則該功能表將為儲存在智能咭上的相關網絡服務名稱，例如「Special」。在此情況下，請參閱智能咭所提供的資訊，以便了解有關如何使用相關選項的更多資訊。

如果智能咭並不支援 SAT 服務，本功能表將為鬧鐘。有關鬧鐘功能表的功能，請參閱第 58 頁。

視像通話 [功能表 0]

使用該功能表，您可撥打視像通話。

1. 輸入要撥打的號碼。
 - ▶ 您可輸入號碼。
 - ▶ 透過左軟鍵 [通訊錄]，您可從「通訊錄」中選擇號碼。
 - ▶ 您可以透過 **OK** [通話] 查看通話列表。
2. 按右軟鍵 [V-Call] 可撥打視像通話。

視像通話過程中

進行視像通話時，畫面上會顯示聯絡人姓名和通話時間、聯絡人的影像、音量指示符、視像控制台以及您本人的影像。

您可以透過按左軟鍵 [選項] 存取以下選項功能表。

- ▶ 麥克風開啓/關閉
- ▶ 揚聲器開啓/關閉
- ▶ 藍芽/耳機通話 (已連接藍芽耳機連時)
- ▶ 私人/共用模式
- ▶ 保留/繼續

- ▶ 拍攝
- ▶ 檢視寄件者號碼
- ▶ 設定
- ▶ 結束通話

撥入視像通話


收到視像通話時，畫面上會顯示來電者的如下資訊。

- ▶ **圖片/動畫**：顯示「通訊錄」中設定的圖片 ID、圖像或表示來電的預設動畫。
- ▶ **來電者的姓名和號碼**：顯示來電者號碼。如果該號碼已儲存在「通訊錄」中，則顯示聯絡人的姓名。

圖片 ID 和動畫設定會按照「通訊錄」、「群組」鈴聲中的影片檔案、「情景模式」中的影片檔案這種順序來使用。

另外，您亦可為撥入視像通話設定音效。音效設定會按照「通訊錄」、「群組」鈴聲和「情景模式」這種順序來使用。

透過按左軟鍵 [接受]，您可接聽來電。

按右軟鍵 [靜音]，可將來電鈴聲靜音。
您亦可透過長按手機左側的  來靜音。
靜音後，按右軟鍵 [拒接] 可拒接來電。

設定 [功能表 #]

手機設定

功能表 #.1

情景模式

(功能表 #.1.1)

您可選擇來電的鈴聲或震動效果，並根據情景模式，設定鈴聲、按鍵音和音效的聲音和音量。提供的情景模式包括 [標準]、[靜音]、[震動]、[戶外]、[耳機]、[自訂 1]、[自訂 2] 和 [自訂 3]。要啟動所選的情景模式，按 **OK**。按左軟鍵 [選項] 可進入 [標準]、[戶外]、[耳機]、[自訂 1]、[自訂 2] 和 [自訂 3] 情景模式的編輯功能表，以變更設定。選擇進行編輯的每個情景模式提供了不同的選項列表。

提示類型

您可從 [鈴聲]、[震動]、[靜音]、[鈴聲與震動]、[先震動後響鈴]、[最大鈴聲與震動] 中進行選擇。

話音鈴聲

您可選擇話音通話的鈴聲。

視像鈴聲

您可選擇視像通話的鈴聲。

音量

設定鈴聲音量。

訊息提示

您可選擇在閱讀收到的訊息之前，手機進行提示的頻率。

訊息提示音

您可從個人檔案或預設檔案中選擇檔案，以便在收到訊息時由手機自動播放這些檔案。

按鍵音

您可設定按鍵時播放的按鍵音。

按鍵音音量

從 7 種可用的級別中，設定所選按鍵音的音量。

滑蓋音效

根據需要，選擇手機滑蓋開合時發出的音效。

確認音效

您可設定手機用於確定動作時播放的確認音。

開機音效

您可設定手機開機時是否播放音效。

選擇開機音效

您可選擇手機開機時播放的音效。

關機音效

您可設定手機關機時是否播放音效。

選擇關機音效

您可選擇手機關機時播放的音效。

日期及時間

(功能表 #1.2)

僅管目前的時間可在手機註冊到網絡時自動設定，使用者仍可透過該功能表直接設定時間和日期。使用者設定的時間僅在手機開機時有效。

時間

(功能表 #1.2.1)

1. 從日期及時間列表中選擇時間項目，然後按 **OK**。
2. 使用導覽鍵移至所需的欄位：小時、分鐘、秒鐘或上午/下午欄位。(在您選擇的時間格式為 12 小時)

3. 使用數字鍵輸入小時、分鐘和秒鐘。

4. 使用 **<** / **>** 選擇時間格式。

5. 向下捲動選擇小時指示格式，即關閉、布穀鳥鳴鐘及鐘聲。

6. 按右軟鍵 [完成]，使用指定的值設定時間。

日期

(功能表 #1.2.2)

1. 從日期及時間列表中選擇日期項目，然後按 **OK**。
2. 使用數字鍵輸入年月日。
3. 使用 **<** / **>** 選擇日期格式。
4. 按右軟鍵 [完成]，使用指定的值設定日期。

自動更新日期/時間

(功能表 #1.2.3)

當「自動更新」設定為「開啓」時，時間和日期會根據目前時區自動更新。如果選擇「首先確認」，則在自動更新前，會首先確認時間和日期更新。

夏令時間

(功能表 #1.2.4)

選擇是否啓用夏令時間功能。您可將選取的本地城市夏令時間設定為 1 小時或 2 小時。

設定

語言

(功能表 #.1.3)

選擇顯示語言。您可選擇自動語言選項，以將顯示語言變更為智能咭的支援語言。

安全

(功能表 #.1.4)

PIN碼要求

若將此設為「開啓」，則在您每次開機時，都會要求輸入 PIN 碼。

注意

- ▶ 在 PIN 碼輸入視窗中按 **⏪** 鍵以返回到上一步。
- ▶ 3 次錯誤輸入 PIN 碼將導致 PIN 碼失效。此時，您需要輸入 PUK (PIN 解鎖鍵) 碼以重新設定 PIN 碼。
- ▶ 您最多可輸入 10 次 PUK 碼。(注意，如果您 10 次都輸入錯誤的 PUK 碼，則智能咭將會被鎖定，且必須更換。)
- ▶ 如果網絡商設定無法停用 PIN 碼要求，您將無法選擇此功能表項目。

手機鎖

您可鎖定手機。我們提供了以下 4 種鎖定功能。

在開機時：一旦開機，手機即被鎖定。

在智能咭更換時：如果更換了手機智能咭，則手機會被鎖定。

立即：立即鎖定手機。

無：停用手機鎖定功能。

您需要輸入安全密碼以確認該選擇。

- ▶ 要解除鎖定手機，您需要輸入安全密碼。

更改密碼

您可變更 PIN 碼、PIN2 碼和安全密碼。

PIN 碼

PIN 碼是個人識別號碼的縮寫，用於限制他人在未經授權的情況下使用手機。

PIN 碼變更程序

1. 從「更改密碼」列表中選擇「PIN 碼」，然後按 **OK**。
2. 輸入目前的 PIN 碼，然後按 **OK**。

- 輸入新的 PIN 碼，然後按 **OK**。
- 再次輸入新的 PIN 碼，然後按 **OK**。
 - ▶ 如果該 PIN 碼不同於步驟 3 中的 PIN 碼，則該程序會從步驟 3 重新開始。
- 正確變更 PIN 碼後，會顯示一則「已更改」訊息。如果您在步驟 2 中輸入錯誤的 PIN 碼，則該程式會從步驟 2 重新開始，而且，可嘗試輸入號碼的次數會減少 1 次。
- 在 PIN 碼輸入視窗中按 **C** 鍵以返回到上一步。

注意

- ▶ 如果在 PIN 碼輸入視窗中三次輸入錯誤的 PIN 碼，則 PIN 碼將失效。此時，您需要輸入 PUK (PIN 解鎖鍵) 碼以重新設定 PIN 碼。您最多可輸入 10 次 PUK 碼。(注意，如果您 10 次都輸入錯誤的 PUK 碼，則智能咭將會被鎖定，且必須更換。)

PIN2 碼

PIN2 碼是個人識別號碼 2 的縮寫，同 PIN 碼一樣，用於限制手機的非授權使用。PIN2 碼變更程序同 PIN 碼相同。3 次錯誤輸入 PIN2 碼將導致 PIN2 碼失效。此時，您需要輸入 PUK2 碼以再次使用 PIN2 碼。同 PUK1 碼一樣，您最多可輸入 10 次 PUK2 碼。10 次錯誤輸入 PUK2 碼將導致 PIN2 碼失效。

安全密碼

安全密碼用於變更手機密碼。與 PIN 和 PIN2 碼不同，安全密碼沒有輸入次數上限。

按鍵鎖

如果您選擇「關閉」，則僅在滑蓋開啓時，按鍵可啓用。如果您選擇「開啓」，透過按手機左側的 **⏏**，即可啓用按鍵。

省電模式

(功能表 #1.5)

決定是否啓用省電模式。

設定

記憶體狀態

(功能表 #1.6)

用戶記憶體

該功能可顯示手機用戶記憶體的狀態。因為該功能會掃描整個檔案系統，以進行統計，因此需要幾秒鐘時間。

用戶預留記憶體

該功能可顯示用戶預留記憶體的狀態。常見內容包括「文字訊息」、「通訊錄」、「日曆」、「工作」和「備忘錄」。而且，它可以一個清晰的示意圖顯示每個項目的實際量與總量的對比。

智能咭記憶體

該功能可顯示智能咭用戶記憶體的狀態。

外置記憶體

該功能可顯示外置記憶咭用戶記憶體的狀態。該功能可顯示使用中和可用記憶體的使用狀態。

格式化外置記憶體

選擇此項可格式化外置記憶體。

手機資訊

(功能表 #1.7)

該功能可顯示智能咭的電話號碼、手機的型號和軟件版本。

重設設定

(功能表 #1.8)

清除記憶體

選擇此項可清除記憶體。您必須輸入安全密碼。

- ▶ **手機內容**：刪除下載的所有多媒體內容。
- ▶ **手機個人資訊**：刪除個人資訊，如已接收的訊息或電郵。

原初設定

選擇此選項，將您的手機重設為預設設定。您必須輸入安全密碼。

顯示設定

(功能表 #.2)

此功能表讓您可以把畫面的顯示選項及功能表的所有圖形介面進行個人化設定。

螢幕顯示

(功能表 #.2.1)

您可設定顯示在螢幕上的螢幕顯示。

桌面

- ▶ **牆紙**：您可選擇顯示於螢幕上的圖像。
- ▶ **顯示項目**：您可選擇顯示於畫面上的項目類型：沒有顯示、日曆 + 時鐘、日曆、時鐘和兩地時鐘。
- ▶ **時鐘類型**：選擇時鐘的類型。
- ▶ **顯示捷徑圖示**：決定是否顯示捷徑圖示。

撥出通話

您可選擇撥號時顯示的圖像。

開機圖像

您可選擇手機開機時顯示的圖像。

關機圖像

您可選擇手機關機時顯示的圖像。

功能表樣式

(功能表 #.2.2)

您可從格子樣式和順序樣式中選擇所需的**功能表樣式**。

字體

(功能表 #.2.3)

使用 **◀ / ▶**，您可設定字體樣式、撥號字體大小和撥號字體顏色。

背景燈

(功能表 #.2.4)

您可分別設定螢幕背景燈持續時間和螢幕亮度。

歡迎訊息

(功能表 #.2.5)

選擇「開啓」後，您可編寫歡迎訊息。

Java 設定

功能表 #.3

啓用網絡設定

1. 將游標移至要啓用的網絡設定。
2. 按 **⏏** 鍵或從「選項」功能表中選擇「啓動」。

設定

新增網絡設定

1. 從「選項」功能表中選擇「新增」。需要設定以下項目。

服務名稱	為網絡設定輸入服務名稱。
連線模式	從提供的連線模式列表中進行選擇。(預設為使用 Proxy 的 TCP)
IP位址	輸入由網絡商提供的 WAP 網關 IP 位址。(例如 195.115.025.129)
Proxy 伺服器 連接埠	取決於連線模式，網絡商會提供連接埠的詳情。
存取點	從提供的存取點列表中選擇。 (有關新增或編輯新存取點的更多詳情，請參閱第 89 頁。)

2. 按右軟鍵 [完成] 以儲存設定變更。

您亦可從「選項」功能表中選擇「編輯」和「刪除」，以編輯和刪除網絡設定。

訊息設定

功能表 #.4

詳細資訊，請參閱第 48 頁。

通話設定

功能表 #.5

通話時間

(功能表 #.5.1)

您可按類型檢視通話時間。按左軟鍵 [選項] 以選擇部份初始化或全部初始化。另外，按右軟鍵 [清除] 可初始化所選通話時間類型。初始化時需要安全密碼。

可以使用的計時器如下：

- ▶ 最後通話: 以小時/分鐘/秒顯示最近通話時間。
- ▶ 已接來電: 顯示來電通話時間。
- ▶ 已撥通話: 顯示撥出電話時間。
- ▶ 所有通話: 顯示總通話時間。

通話限制

(功能表 #.5.2)

提供語音和視像通話的通話限制功能表。

該功能表包括「語音通話」、「視像通話」和「停用全部」。「語音通話」和「視像通話」功能表具有以下子功能表。

「通話限制」子功能表包含「所有撥出通話」、「撥出的國際通話」、「撥打本地

以外的國際通話」、「所有來電」和「國際漫遊時來電」子功能表。

「所有撥出通話」功能表限制所有撥出電話，「撥出的國際通話」功能表限制撥出國際通話，「撥打本地以外的國際通話」功能表限制所有撥出的外國電話，除本地 PLMN 國家外。「所有來電」拒接所有的來電，「國際漫遊時來電」功能表拒接漫遊時的來電。

語音通話

視像通話

所有撥出通話

1. 選定 **OK** 後，該選項會從使用者接收限制密碼並在網絡上啟用限制服務。要求訊息和動畫將會出現。網絡響應時，操作結果將會出現。
2. 選定「選項」功能表後，將啟用「所有撥出通話」功能表。從最底端功能表的軟功能表上選擇「選項」功能表。然後顯示「停用」、「啟動」、「停用全部」、「檢視狀態」和「更改密碼」功能表。選擇「啟動」功能表以從使用者接收限制密碼並在網絡上啟用限制服

務。「停用」功能表會在輸入使用者限制密碼後，停用限制服務。「停用全部」功能表會在輸入使用者限制密碼後，停用在網絡上設定的所有限制服務。「檢視狀態」功能表可讓使用者檢視目前網絡設定。選擇檢視狀態功能表後，會顯示帶動畫的要求訊息及網絡響應時的操作結果。「更改密碼」功能表可讓使用者變更目前限制密碼。

撥出的國際通話

1. 選定 **OK** 後，其運作方式與「所有撥出通話」功能表一樣。
2. 選定「選項」功能表後，將啟用並執行「撥出的國際通話」功能表。其運作方式與「所有撥出通話」功能表一樣。

撥打本地以外的國際通話

1. 選定 **OK** 後，其運作方式與「所有撥出通話」功能表一樣。
2. 選定「選項」功能表後，將啟用並執行「撥打本地以外的國際通話」功能表。其運作方式與「所有撥出通話」功能表一樣。

設定

所有來電

1. 選定 **OK** 後，其運作方式與「所有撥出通話」功能表一樣。
2. 選定「選項」功能表後，將啓用並執行「來電」功能表。其運作方式與「所有撥出通話」功能表一樣。

國際漫遊時來電

1. 選定 **OK** 後，其運作方式與「所有撥出通話」功能表一樣。
2. 選定「選項」功能表後，將啓用並執行「國際漫遊時來電」功能表。其運作方式與「所有撥出通話」功能表一樣。

固定撥號號碼

(功能表 #5.3)

- ▶ **開啓/關閉**：選擇是否啓用固定撥號。需要驗證 PIN2 碼。
- ▶ **固定撥號列表**：顯示目前固定撥號列表。您可編輯、新增或刪除固定撥號列表。編輯該列表時，需要驗證 PIN2 碼。而設定資訊會儲存在智能咭上。當固定撥號限制撥出電話時，將使用儲存在智能咭上的資訊。

數據用量

(功能表 #5.4)

可讓您檢查接收、傳輸及所有數據。(不包括透過 TE 連線傳輸的資料量。)

按左軟鍵 [選項] 以選擇清除或清除全部。您亦可使用右軟鍵 [清除] 來初始化所選用量類型。初始化時需要安全密碼。

通話費用

(功能表 #5.5)

1. 該功能可顯示最後通話和所有通話的通話費用。
2. 要初始化，請按右軟鍵 [清除] 並輸入 PIN2 碼。
3. 您可在設定通話費用中選擇單位或貨幣。根據您的設定，通話時會顯示通話費用 (如果智能咭和網絡支援通話計費 (AOC))。
4. 在設定中，選擇「開啓」以設定通話費用限制。設定通話費用限制後，當達到通話費用限制時，將無法撥出電話。

轉駁

(功能表 #5.6)

提供語音和視像通話的來電轉接功能表。該功能表包括「語音通話」、「視像通話」和「停用全部」。

語音通話

全部語音通話

線路繁忙時

無人接聽時

無法接通時

1. 選定「停用」功能表時

會刪除註冊到網絡的「來電轉駁號碼」。等候網絡結果時，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。

2. 選定「到號碼」時

顯示對話視窗，可讓您輸入轉駁至的電話號碼。輸入轉駁號碼，然後按 **OK**。等候網絡結果時，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。

3. 選定最近轉駁號碼列表時

會透過選定的號碼執行轉駁註冊。選擇號碼，然後按 **OK**。等候網絡結果時，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。

4. 選項功能表

啓用所有語音通話功能表後，選擇位於功能表底端的「選項」功能表時，會顯示停用、啓動、停用全部、檢視狀態和清除列表功能表。

啓動：移至「設定」功能表，以啓用來電轉駁。「檢視狀態」功能表可顯示網絡上的設定。如果您選擇該功能表，則會顯示要求訊息和動畫。然後，當從網絡上接收到資訊時，會顯示網絡設定。從右軟鍵功能表中選擇 [狀態] 時，會顯示相同的結果。如果您選擇「停用」功能表，則註冊到網絡的來電轉駁號碼會在使用者確認後刪除。選擇「停用全部」功能表，可在出現要求訊息和動畫後顯示操作結果。「清除列表」功能表會刪除所有轉駁號碼列表。

設定

視像通話

全部視像通話

1. 選定「停用」功能表時

會刪除註冊到網絡的「來電轉駁號碼」。等候網絡結果時，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。

2. 選定「到號碼」時

顯示對話視窗，可讓您輸入轉駁至的電話號碼。輸入轉駁號碼，然後按 **OK**。等候網絡結果時，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。

3. 選定最近轉駁號碼列表時

會透過選定的號碼執行轉駁註冊。選擇號碼，然後按 **OK**。等候網絡結果時，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。

4. 選項功能表

啓用「全部視像通話」功能表後，選擇位於功能表底端的「選項」功能表時，會顯示停用、啓動、停用全部、檢視狀態和清除列表功能表。

啓動：移至設定功能表（以上 1~4），以啓用來電轉駁。「檢視狀態」功能表可

顯示網絡上的設定。如果您選擇該功能表，則會顯示。訊息和動畫將會出現。然後，當從網絡上接收到資訊時，會顯示網絡設定。從右軟鍵功能表中選擇 [狀態] 時，會顯示相同的結果。如果您選擇「停用」功能表，則註冊到網絡的來電轉駁號碼會在使用者確認後刪除。選擇「停用全部」功能表，可在出現要求訊息和動畫後顯示操作結果。「清除列表」功能表會刪除所有轉駁號碼列表。

線路繁忙時

1. 選定「停用」功能表時

其運作方式與「全部視像通話」功能表一樣。

2. 選定「到號碼」時

其運作方式與「全部視像通話」功能表一樣。

3. 選定最近轉駁號碼列表時

其運作方式與「全部視像通話」功能表一樣。

4. 選定「選項」功能表時

它會啓用並執行「線路繁忙時」功能表。其運作方式與「全部視像通話」功能表一樣。

無人接聽時

1. 選定「停用」功能表時

其運作方式與「全部視像通話」功能表一樣。

2. 選定「到號碼」時

其運作方式與「全部視像通話」功能表一樣。

3. 選定最近轉駁號碼列表時

其運作方式與「全部視像通話」功能表一樣。

4. 選定「選項」功能表時

啟用並執行「無人接聽時」功能表。除使用者可在功能表列表的「設定等候時間」功能表中設定延遲時間外，其運作方式與「全部視像通話」功能表一樣。

無法接通時

1. 選定「停用」功能表時

其運作方式與「全部視像通話」功能表一樣。

2. 選定「到號碼」時

其運作方式與「全部視像通話」功能表一樣。

3. 選定最近轉駁號碼列表時

其運作方式與「全部視像通話」功能表一樣。

4. 選定「選項」功能表時

啟用並執行「無法接通時」功能表。其運作方式與「全部視像通話」功能表一樣。

來電等候

(功能表 #5.7)

- ▶ **啓動**：啓用來電等候服務。選擇該項目後，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。
- ▶ **停用**：停用來電等候服務。選擇該項目後，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。
- ▶ **檢視狀態**：顯示網絡的啓用來電等候服務群組項目。選擇該項目後，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。

設定

留言信箱

(功能表 #.5.8)

您可新增或編輯留言信箱。

視像通話

(功能表 #.5.9)

撥打/接聽視像通話時，您可設定屏幕顯示。

- ▶ **顯示我的圖像：**決定是否顯示自己的圖像。
- ▶ **選擇靜態圖像：**選擇要顯示的靜態圖像。
- ▶ **鏡像：**選擇是否啓用鏡像效果。
 - **開啓：**正反翻轉顯示圖像。
 - **關閉：**按原樣顯示圖像。
- ▶ **我的圖像大小：**選擇要顯示的我的圖像大小。
- ▶ **我的圖像位置：**選擇圖像顯示的位置。

一般設定

(功能表 #.5.0)

來電拒接

您可設定是否拒接來電。

1. 在「拒接」功能表中選擇「開啓」，以啓用來電拒接。拒接列表功能表將會出現。
2. 在拒接列表功能表中設定所需的來電拒接選項。
 - ▶ **所有通話：**拒接所有通話。
 - ▶ **通訊錄：**拒接「通訊錄」中儲存號碼的來電。
 - ▶ **群組：**您可指定儲存在「通訊錄」中的群組單元，對其進行來電拒接。
 - ▶ **無名稱記錄：**拒接未儲存在「通訊錄」中的來電。
 - ▶ **無來電號碼：**拒接無 CLI 資訊的來電。

發送我的號碼

- ▶ **按網絡設定：**透過由網絡商決定的預設設定來設定。
- ▶ **開啓：**設定在撥出電話時，發送我的手機號碼。
- ▶ **關閉：**設定在撥出電話時，不發送我的手機號碼。

自動重撥

當撥打電話失敗時，可讓您設定自動重撥功能。

接聽模式


可讓您設定接聽方式。您可選擇「按發送鍵」、「開啓滑蓋」和「按任何鍵」。

分鐘提示

決定是否在通話過程中，播放每分鐘提示音。

藍芽接聽模式

- ▶ **免提：**連線藍芽後，可使用藍芽耳機接聽來電。

- ▶ **手機：**按手機上的  後，您可在手機上通話。如果您按藍芽耳機鍵接聽來電，則可使用藍芽耳機通話。

這是初始接聽模式選擇。通話時，您可在手機和耳機之間互相切換。

通訊錄設定

功能表 #.6

詳細資訊，請參閱第 65 頁。(功能表 8.7)

連接

功能表 #.7

藍芽

(功能表 #.7.1)

藍芽連線

本手機採用內置藍芽無線技術，可讓您將手機無線連接到其他藍芽裝置，如免提裝置、電腦、PDA 或其他電話。

例如，您可以透過無線藍芽免提裝置通話或憑藉手機的無線連線，瀏覽互聯網。例如，您也可以交換名片、日曆項目和圖片。

設定

注意

- ▶ 我們建議，手機和藍芽裝置之間的距離不要超過 10 米。如果您的手機和其他藍芽裝置之間沒有固體物件，連線效果將會提高。

1. 開始使用

- 功能表 → #. 設定 → 7. 連接 → 1. 藍芽 → 1. 配對裝置

使用藍芽功能前，需要將藍芽設定為「開啓」。

2. 設定藍芽設定

- 功能表 → #. 設定 → 7. 連接 → 藍芽 → 2. 設定

- **藍芽使用狀況：**要使用藍芽功能，請將其設為「開啓」。否則，設為「關閉」。
- **顯示我的手機：**將「顯示我的手機」設定為「顯示給全部」，這樣，當其他裝置搜尋藍芽裝置時，便可偵測到您的手機。如果您選擇 [隱藏]，當其他裝置搜尋藍芽裝置時，便無法偵測到您的手機。

- **我的手機名稱：**您可命名或重新命名您的手機在其他裝置上顯示的名稱。僅當「顯示我的手機」設為「顯示給全部」時，您的手機名稱才能顯示在其他裝置上。

注意

- ▶ 當使用者在手機上使用藍芽裝置時，手機可能存在安全風險。因此，我們建議在設定或裝置配對後，將藍芽的能見度設定為「隱藏」。不論透過何款藍芽配對裝置接收文件，在檢查寄件者詳細資料後，您可選擇接受或拒絕連線。

3. 配對裝置

配對裝置 (與裝置配對)

如果存在配對藍芽裝置。

- 功能表 → #. 設定 → 7. 連接 → 1. 藍芽 → 1. 配對裝置 → 選項 → 新增

如果沒有配對藍芽裝置。

- 功能表 → #. 設定 → 7. 連接 → 1. 藍芽 → 1. 配對裝置 → 新增

選項

- ▶ **新增**：使用該功能表，您可將新藍芽裝置與手機配對。
- ▶ **配置簡稱**：使用該功能表，您可根據需要重命名配對手機。
- ▶ **連接/中斷連接裝置**

1. 如果您想建立與所選裝置的連接，請選擇「連接」。
2. 如果您想中斷與所選裝置的連接，請選擇「中斷」。

- ▶ **刪除**：使用該功能表，您可刪除配對的藍芽裝置。
- ▶ **刪除全部**：使用該功能表，您可以刪除所有配對的藍芽裝置。

<配對裝置>

1. 要搜尋配對的藍芽裝置，請按「新增」。
2. 畫面會顯示「搜尋藍芽裝置」。您可搜尋到 10 米範圍內的藍芽裝置。
3. 找到藍芽裝置後，這些裝置會列於畫面上。如果找不到藍芽裝置，系統會詢問您是否需要重新搜尋。

4. 配對程序

- 按 **OK**。畫面上會顯示要求您輸入密碼的視窗。
- 建立密碼 (由 1 至 16 數位組成) 後，其他裝置的使用者必須輸入配對密碼。其他設備的使用者必須知道密碼才可進行驗證。

<刪除裝置>

1. 從配對裝置畫面上選擇要刪除的裝置。
2. 透過按「刪除」鍵或選擇 選項 → 刪除來刪除裝置。要刪除所有配對裝置，請選擇 選項 → 刪除全部。

<使用藍芽傳輸資料>

1. 要將資料從您的手機傳輸到其他藍芽裝置上，請首先選擇儲存目標資料的應用程式 例如，將「我的檔案」中的資料發送到其他裝置，請選擇 功能表 → 6. 我的檔案 → 1. 圖片 / 2. 聲音 / 3. 影片 / 5. 藍芽檔案 / 6. 其他檔案 / 7. 外置記憶體 → 選擇要傳輸的資料 → 發送 → 3. 藍芽

設定

2. 傳輸資料

- 1) 顯示上次找到的裝置。如果所需裝置不在列表中，請選擇 [更多裝置]。
- 2) 從畫面上顯示的裝置中選擇用於接收資料的裝置，並按 **○**。
- 3) 如果對方在回答 [連線要求] 時選擇 [是]，資料就會進行傳輸。

<使用藍芽接收資料>

功能表 → #. 設定 → 7. 連接 → 1. 藍芽 → 1. 配對裝置

如果對方嘗試傳輸資料，則畫面上會顯示 [連線要求] 詢問。如果您選擇 [是]，則資料會傳輸到您的手機上。資料傳輸過程中，藍芽圖示會閃爍。

<藍芽檔案儲存資料夾>

您可透過以下操作，檢查已接收的數據
功能表 → 6. 我的檔案 → 5. 藍芽檔案。

4. 裝置

<連接耳機>

功能表 → #. 設定 → 7. 連接 → 1. 藍芽

1. 根據「配對裝置」部份中介紹的程序，連接耳機。
2. 要使用耳機，從註冊裝置中選擇耳機，按「選項」鍵後，選擇 3. 連接。
3. 要檢查所選耳機是否成功連線，請按「選項」鍵。如果成功連線，則會顯示 3. 中斷連接。否則，顯示 3. 連接

<連接免提套件>

1. 功能表 → #. 設定 → 7. 連接 → 1. 藍芽
2. 根據「配對裝置」部份中介紹的程序，連線免提套件。
3. 要使用免提套件，從註冊裝置中選擇免提套件，按「選項」鍵，然後選擇 3. 連接。
4. 要檢查所選的免提套件是否成功連線，請按「選項」鍵。如果成功連線，會顯示 3. 中斷連接。否則，顯示 3. 連接。

同步

(功能表 #7.2)

(注意：該服務並不可用於所有國家。請聯絡您的網絡商，了解更多資訊。)

如果網絡商支援該同步服務，則該服務功能將透過無線網絡同步手機中的資料與伺服器上的資料，如通訊錄、日曆和工作。

連接

1. 選擇連線項目，然後按 **OK**。
2. 透過所選伺服器網絡設定連線到伺服器，當執行同步操作時，會顯示同步動畫。

記錄

選擇「記錄」項目，然後按 **OK** 來檢視上次執行的同步操作。

伺服器同步中心

1. 選擇「伺服器同步中心」項目並按 **OK**。
2. 該功能表可讓您設定同步伺服器的網絡設定。
 - ▶ **網絡設定檔名稱**：輸入網絡設定檔的名稱。

- ▶ **主機地址**：聯絡您的服務供應商。
- ▶ **proxy 伺服器 IP 位址**：輸入 WAP 網關位址和連接埠號碼。
- ▶ **用戶帳號**：輸入同步伺服器的使用者 ID。
- ▶ **密碼**：輸入您的密碼。
- ▶ **通訊錄**：選擇是否同步「通訊錄」。
- ▶ **通訊錄名稱**：輸入伺服器存取的通訊錄資料庫名稱。
- ▶ **日曆**：選擇是否同步日曆。
- ▶ **行事曆名稱**：輸入伺服器存取的行事曆資料庫名稱。
- ▶ **工作**：選擇是否同步工作。
- ▶ **工作名稱**：輸入伺服器存取的工作資料庫名稱。
- ▶ **同步類型**：選擇以下同步類型。
 - 正常
需要手機和伺服器交換有關修改資料的資訊。

設定

- 備份

手機將某資料庫中的所有資料傳送到伺服器。伺服器可使用手機發送的資料來替代目標資料庫中的所有資料。如此一來，手機可覆寫伺服器資料庫中的所有資料。

- 還原

伺服器將其資料庫中的所有資料傳送給手機。手機將會用伺服器傳送的資料來替換目標資料庫中的所有資料。如此一來，伺服器可覆寫手機資料庫中的所有資料。

- ▶ **存取點：**選擇用於資料連線的存取點。

網絡

(功能表 #.7.3)

網絡選擇

在自動和手動間選擇。

- ▶ **自動：**自動搜尋網絡並將手機註冊到網絡。推薦使用這種方式以便獲得最佳的服務和品質。

- ▶ **手動：**目前所有可用的 2G(GSM) 和 3G(UMTS) 網絡都會顯示，您可從中選擇要註冊的網絡。如果網絡註冊失敗，則目前所有可用的網絡會再次顯示，您可選擇其他網絡進行註冊。網絡註冊成功後，如果手機的服務狀態為無服務或限制服務，您可參閱備用畫面中的手動模式。並且，您可參閱用於變更網絡選擇模式的快顯訊息。如果選擇「是」，可檢視「網絡功能表」。然後，您可再次選擇網絡。

網絡模式

在選擇網絡功能表中搜尋網絡時，您可設定要搜尋的網絡類型。

- ▶ **自動：**搜尋所有可連線的網絡。
- ▶ **UMTS：**僅搜尋支援 3G 的網絡。
- ▶ **GSM 900/1800：**僅搜尋支援 GSM 900/1800 頻帶的網絡。
- ▶ **GSM 1900：**搜尋僅支援 GSM 1900 頻帶的網絡。

首選列表

如果網絡在自動搜尋，則您可新增首選網絡以進行連線。而且，可使用以下選項。

- ▶ **新增：**透過以下操作，您可新增網絡。
 - 搜尋：您可從手機所儲存的網絡列表中進行選擇。
 - 輸入新網絡：您可輸入國家代碼 (MCC) 及要新增的網絡代碼 (MNC)。設定後，按「完成」鍵。
- ▶ **刪除：**刪除所選網絡。
- ▶ **編輯：**您可修改所選網絡的資訊。
- ▶ **上移：**將所選網絡上移。
- ▶ **下移：**將所選網絡下移。

存取點

(功能表 #7.4)

該功能表可顯示接入點列表。透過「選項」功能表，您可建立新網絡設定、刪除或編輯這些設定。但是，視乎國家的不同，您無法刪除或編輯預設設定。透過選擇左軟鍵，您可編輯以下設定項目。

連線標題	接入點網絡設定名稱。
連接方式	從列表中選擇連接方式。 (預設為 UMTS。)
核證	從清單中選擇驗證。 (預設為不驗證)
用戶名稱	服務供應商提供的資訊。
密碼	服務供應商提供的資訊。
APN	存取網絡的 APN 名稱。 服務供應商提供的資訊。

- ▶ 按「完成」鍵可儲存任何設定變更。

瀏覽器設定

(功能表 #7.5)

網絡設定

按 **OK** 選擇適合的網絡設定。此舉可啟動使用瀏覽器的網絡設定。

安全

如果使用者按「認證」，認證資訊將會顯示。透過按節段清除，使用者可清除安全節段資訊。

認證

若已儲存，此處可顯示一份 WTLS/TLS 所必需的根認證機構列表。您可從此列表檢視認證。

設定

節段清除

使用該選項，可清除安全 (WTLS/TLS) 節段資料。您需要清除節段數據才可以建立新安全節段。

字元編碼

把瀏覽器預設字元設定設為以下之一：

- ▶ 自動、英文(ASCII)、英文(ISO)、英文(拉丁)、Unicode(UCS2 BE)、Unicode(UCS2 LE)、Unicode(UCS2 自動)、Unicode(UTF-16 BE)、Unicode(UTF-16 LE)、Unicode(UTF-16 自動)、Unicode(UTF-8)及中文(BIG 5)。

捲動控制

您可透過選擇捲動控制來設定舉動的速度。從小 (1 行)、中 (2 行) 及大 (3 行) 中選擇。

顯示圖像

瀏覽時讓您可以啟用或停用圖像顯示。

快取記憶

啟用快取模式讓您可以將存取過的網頁儲存到手機中。若網頁經已在快取模式儲

存，則會大大提高隨後在同一網頁瀏覽的網頁載入速度。

Cookies

啟用 Cookies 讓您可以儲存伺服器傳送的 Cookies。停用此功能可阻止 Cookies 儲存到您的手機中。

Javascript

選擇開啓/關閉。

重設設定

選擇此選項，將您的手機重設為預設設定。

串流

(功能表 #7.6)

如果您想設定不同的網絡設定來播放串流內容，您可設定不同的網絡設定。

撥號網絡

(功能表 #7.7)

您可透過各種 PC 連接和數據通訊應用程式來使用您的手機。選擇 USB 和藍芽作為您想使用的數據連線。

注意

- ▶ 啓用此功能會延遲圖像顯示直至傳輸完成。停用此功能會阻止瀏覽器從伺服器下載圖像，因而可加快傳輸速度。

配件

手機配有多種配件。您可依據個人需要選擇所需配件。

旅行充電器

該充電器讓您在遠離住所或辦公室時亦可為電池充電。



標準電池



數據傳輸組件/光碟

您可使用數據傳輸組件連接PC 進行通訊。



免提聽筒及音樂播放控制組件

立體聲耳機

控制器:接聽和結束按鈕、音樂控制播放器、音量控制、按鈕鎖定按鈕、以及麥克風。



將耳機及控制器連接後，請將控制器末端插入手機右側的耳機接孔中。



注意

- ▶ 請務必使用原裝 LG 配件。
- ▶ 不使用原裝配件可能會導致保養失效。
- ▶ 以上附件可因區域不同而有所差異，詳情可諮詢我們的區域服務商或代理商。

一般資料

產品名：KU800

系統：GSM900/DCS1800/PCS1900,
WCDMA 2100

淨重：67.5g (不含電池)

適用溫度

最高: +55°C

最低: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / GSM 1800 / GSM 1900 / W-CDMA Terminal Equipment

Model Name

KU800

Trade Name

LG

CE 0889

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.5.1, ETSI EN 301 489-07 V1.2.1
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.2.1
ETSI TS 151 010-1 V5.9.0 specified by ETSI EN 301 511 V9.0.2
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-2 V2.2.1
ETSI EN 301 908-1 V2.2.1, ETSI EN 300 328 V1.4.1
EN 50360:2001; EN 50361:2001
EN 60950 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog, Kim / Director 19.July. 2006

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokdm @ lge.com


Signature of representative

|| KU800 用户手册 ||

- 简体中文

本档是 3G 视频手机 LG KU800 的用户手册。LG Electronics 保留对此档的所有权利。未经 LG Electronics 同意，不得复制、修改和散发本档。



内容

产品介绍	5	常规功能	25	Internet	32
安全措施	6	拨打电话		主页	
关于安全有效使用手机的准则	7	输入文本	28	输入 URL	
KU800 功能	12	更改文本输入模式		输入地址	
打开视图		使用 T9 模式		输入地址	
如何使用轻触式按键	16	使用 ABC 模式		最近打开的页面	
开始	18	使用 123 (数字) 模式	29	书签	
安装 USIM 卡和手机电池		使用符号模式		保存的网页	33
给电池充电	19	菜单功能概览	30	浏览器设置	
断开充电器	20	娱乐	31	上网设定	
如何使用 microSD 存储卡		游戏和应用程序		安全设定	
开机/关机	22	更多游戏		字符编码	
访问密码		JAVA 设置		滚动控制	
显示信息	23			显示图像	
				缓存	34
				Cookies	
				JavaScript	
				恢复初始设定	
				音乐	35
				立即播放	
				所有曲目	
				播放列表	

照相	36	我的文件	54	公文包和工具	58
照相		图片		闹钟	
语音备忘录	39	铃声	55	日程表	
信息	42	视频		任务	60
新建		游戏和应用程序	57	备忘录	
信息		蓝牙数据		计算器	
电子邮件	43	其它文件		换算器	61
收件箱	44	外部存储器		币种	
发件箱	45			面积	
发信箱				长度	
已发信息	46			重量	62
电子邮件	47			温度	
模板	48			音量	
文本模板				速度	
多媒体模板				世界时间	
信息设置	49			语音备忘录	63
短信					
彩信					
电子邮件	50				
小区广播	52				
服务信息					

内容

电话本 64

添加

联系人列表

群组

快速拨号

服务号码

本手机号码

设置 65

查看电话本

显示图像/个人形象

全部复制

全部移动

清空电话本

呼叫 66

全部通话

已拨电话

已接来电

未接来电

USIM 卡工具包 67

可视电话 68

视频通话过程中

视频来电

设置 70

手机设置

情景模式

日期和时间 71

语言 72

安全设定

省电 74

内存状态

手机信息

恢复初始设定

显示设定 75

主屏

菜单样式

字体

背景灯

欢迎信息

Java 设置 76

信息设置

通话设置^s

通话计时

呼叫限制 77

固定拨号 78

数据音量

通话费用

转接 79

呼叫等待 82

语音邮件

可视电话

常用设置

电话本设置 83

连接 84

蓝牙

同步 87

网络 88

接入点 89

浏览器设置 90

恢复出厂设定 91

拨号网络

附件 92

技术数据 93

产品介绍

恭喜您购买此款功能先进、外观小巧的 KU800 3G 视频手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。



本用户手册包括重要的手机使用和操作信息。请仔细阅读以使您的手机发挥最佳性能、防止手机损坏和不正当使用。本手册未明确认可的任何更改功能表 电话本和修改可使手机的保修失效。

对于翻盖手机、使用磁铁锁可能会导致一些问题、如自动关机、无网络。

安全措施

请阅读以下简单的准则。违反这些规定可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

警告！

- 在飞机上、必须关闭手机。
- 开车时请不要手持手机。
- 在加油站、燃料仓库、化工厂或爆破活动附近请关机。
- 为了您的安全、请只使用原厂电池和充电器。
- 手机在充电时、不要用湿手拿起手机。这可能会导致电击或使您的手机严重受损。
- 请将手机放在儿童接触不到的安全地方、以防止它的可拆部件使儿童造成窒息危险。

小心！

- 在任何有特殊规定的场所请关机。例如、在医院内请关机、因为手机会对心脏起搏器和助听器等电子医疗设备造成干扰。
- 并非所有蜂窝网络都支持紧急呼叫。因此您不可以只依靠手机作为紧急时刻的通信工具、例如：紧急医疗救护。
- 仅使用原厂附件以防损坏手机。
- 手机可能对电视、收音机、电脑等造成轻微干扰。
- 切勿拆除手机或电池。
- 对于滑盖手机、使用磁铁锁可能会导致一些问题、如自动关机、无网络。

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些规定可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

证书信息 (SAR)

本手机符合无线电波暴露的国际准则

本手机是一种无线电发射器和接收器。设计和制造都不能超过国际准则 (ICNIRP) 建议的射频 (RF) 暴露的发射限制。这些限制是完整准则中的一部分，为大众建立了射频的许可水平。此准则以由独立的科学组织通过定期充分地评估科学研究而制定的标准为基础。此准则包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。手机的暴露标准采用一种称为“特定吸收率”或 SAR 的测量单位。国际准则中规定的 SAR 上限值为 2.0 W/kg*。

SAR 测试是在所有测试的频带中以手机的最高认可功率电平进行发射时，使用标准操作位置执行的。SAR 是以最高认可功率电平来确定的，手机操作时的实际 SAR 值可能远小于最大值。这是由于手机设计以多个功率电平操作，从而只使用抵达网络所需的功率。因此一般而言，离基站越

近则手机的功率输出越低。在新款手机可销售给大众之前，必须证明它符合欧洲 R&TTE 指令。此指令是保护用户及他人健康和所需满足的必要条件。对该手机进行测试时，人耳能够承受的 SAR 最大值为 0.418 W/kg。

携带时，可使用皮带夹或底座固定，皮带夹和底座不得包含金属成分，应将手机置于身体以外 1.5cm 的位置。本手机在用于耳朵附近的正常使用位置时，或位于距离身体以外 1.5cm 的位置时，均符合 RF 暴露准则。在某些情况下，如果连接不可用，数据文件和信息的传输将会延迟，直至有可用连接。传输过程中，请保持上述分离距离。要传输数据文件或信息，本手机需要连接到网络。对该手机进行测试时，身体能够承受的 SAR 最大值为 0.802 W/kg。

* 大众使用的手机的 SAR 限制为 2.0 瓦特/千克 (W/kg)，平均值超过十克薄纸。准则包括了安全裕量，以加强对公众的保护及补偿任何测量变量。SAR 值可能根据国家报道需要和网络频带而不同。有关其它地区的 SAR 信息，请参阅 www.lgmobile.com 上的产品信息部分。

关于安全有效使用手机的准则

产品的保养与维护

警告！

请仅使用经过认可且与特定手机型号相符的电池、充电器和配件。使用其它类型的配件将可能终止该手机的相关证明或担保、甚至可能造成危险。

- ▶ 请勿擅自拆装手机。(如需任何维修、请将其交给具备相关资格的服务技术人员。)
- ▶ 手机应远离诸如电视机、收音机或个人计算机等电器设备。
- ▶ 切勿将手机置于散热设备或炊具附近。
- ▶ 切勿抛掷手机。
- ▶ 切勿对手机造成任何机械振动或震荡。
- ▶ 手机套或乙烯基外包装均有可能对手机表面造成损伤。
- ▶ 请勿使用刺激性的化学药品(如酒精、苯、稀释剂等)或清洁剂来清洁手机。这存在引发火灾的危险。
- ▶ 切勿将手机置于过度烟尘环境中。
- ▶ 切勿将手机靠近信用卡或交通票卡;这有可能影响磁条中存储的信息。
- ▶ 切勿以尖锐物体接触屏幕;否则将对手机造成损伤。
- ▶ 不要将手机暴露在液体或潮气中。
- ▶ 谨慎使用如耳机之类的配件。
- ▶ 如果将手机放在口袋或手提包时没有盖上手机插孔(电源插销)、则金属物件(如硬币、回形针或钢笔)会使手机短路。请在不使用时始终盖好插孔。
- ▶ 切勿将手机放在微波炉上、否则会造成电池爆炸。
- ▶ 只有授权人员才能对手机及其配件进行维修。安装不当或非法维修可能会发生意外、并因此使保修失效。
- ▶ 如果天线损坏、请勿使用手机。如果损坏的天线接触皮肤、则会导致皮肤轻度灼伤。请联系 LG 授权维修中心、以便更换损坏的天线。

- ▶ 请您谨慎使用诸如耳机和听筒等配件。使其线路不被卷折弄断并确保不要碰处天线。
- ▶ 手机标签包含有用于客户支持目的的重要信息。不要将其撕掉。

有效的手机操作

要以最少的耗电量发挥手机的最佳性能、请您注意以下事项：

- ▶ 通话时请握住手机。直接向话筒中说话、天线朝上、并且手机应位于肩部之上。如果天线可以伸缩、则在通话时应拉出天线。
- ▶ 使用手机时请勿握住天线、因为这样不仅会影响通话质量、还将增加手机工作时的耗电量、从而缩短通话和待机时间。
- ▶ 如果您的手机支持红外线功能、切勿将红外线对准任何人的眼睛。

电子设备

所有手机都可能受到干扰、这种干扰会对性能造成影响。

- ▶ 在未经允许的情况下、不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上、即胸前的口袋内。
- ▶ 手机可能会对某些助听器造成干扰。
- ▶ 微弱的干扰可能会影响电视、收音机、个人计算机等。
- ▶ 不要折弯、刮擦或将其暴露在静下。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- ▶ 请勿在驾驶时使用手持电话。
- ▶ 驾驶时应全神贯注。
- ▶ 如有条件、可使用免提装置。
- ▶ 如驾驶条件不允许、请将车停在路边或空地旁、然后再拨打或接听电话。

关于安全有效使用手机的准则

- ▶ 射频能量可能影响车辆内的电子系统、例如立体声音响、安全设备等。
- ▶ 驾车时、不要将手机或免提装置放在靠近安全气囊的地方。如果无线装置安装不当、则在安全气囊弹出时、您可能会受到严重创伤。

若您在户外听音乐时请您将音量调节适当。确保您能掌握周围环境和动态。特别在您过马路时应特别注意。

防止损伤您的听力

长时间高分贝的音量会损伤您的听力。所以我们建议您不要贴近耳边开/关电话听筒。注意将音乐及通话音量调节适当。

爆破现场

切勿在引爆过程中使用手机。请遵守相关限制、并按照规定行事。

潜在的爆炸性环境

- ▶ 切勿在加油站使用手机。切勿将手机靠近燃料或化学物品。

- ▶ 如车辆上携带有移动电话或其配件、请勿在车厢里装载或运输可燃性气体、液体或易爆物品。

在飞机上

无线设备可能对飞机造成干扰。

- ▶ 请在登机前关闭手机。
- ▶ 未经机务人员允许、请勿擅自使用手机。

电池信息及保养

- ▶ 您无需在再次充电前对电池进行完全放电。与其它电池系统不同、本机电池不具有可能影响电池性能的记忆效应。
- ▶ 只能使用 LG 电池和充电器。LG 充电器设计会最大程度地延长电池使用寿命。
- ▶ 切勿拆解电池组或将其短路。
- ▶ 保持电池组的金属触点清洁。

- ▶ 当电池不再提供合乎要求的性能时、请更换电池。在需要更换之前、电池组可以反复充电数千次。
- ▶ 如果电池已经使用很长一段时间、请对电池再次进行充电以保持最佳使用状态。
- ▶ 切勿将电池充电器暴露在直射阳光下、或置于诸如浴室之类的高湿环境中。
- ▶ 切勿将电池存放在过热或过冷的地方、这可能损害电池的性能。

网络服务

- ▶ 本用户手册中所述的服务和功能视网络类型或订阅情况而定。因此、您的手机中并非所有菜单均可用。有关预订服务和功能的更多信息、请联系您的网络运营商。

儿童准则


- ▶ 请确保将显示屏保护薄及所有其它薄片卸下并适当弃置。由于儿童有可能吸入或吞下这些薄片、请将其置于儿童无法接触的地方。

KU800 功能

打开视图


前视图



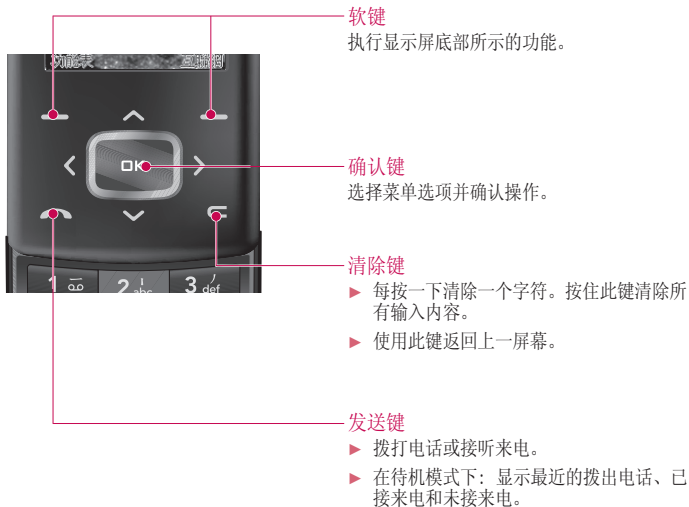


KU800 功能

手机左面

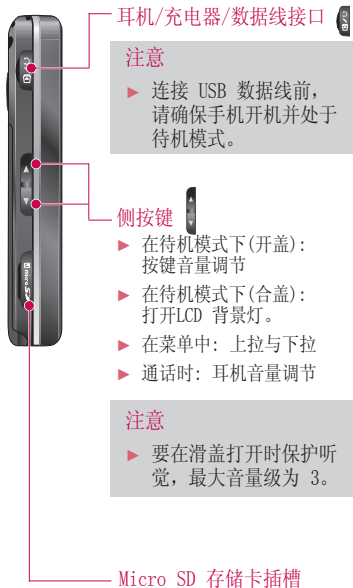

手机右面

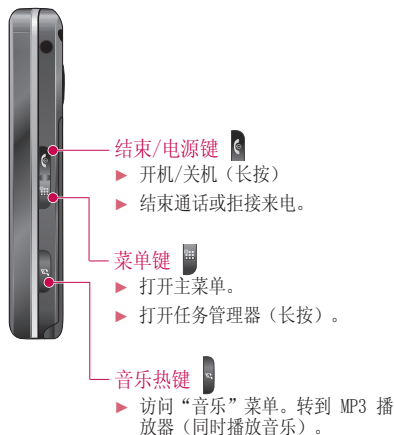


手机背面



如何使用轻触式按键

- ▶ 本手机滑盖上的按键为轻触式按键。
- ▶ 使用轻触式按键前，请确保仔细阅读了“轻触式按键警告”。

轻触式按键警告

1. 请确保您的双手是清洁且干燥的。
 - 避免双手表面残留水气或将轻触式按键置于潮湿的环境中。
2. 您无需大力按轻触式按键来使其正常工作。避免用力撞击手机，以免损坏轻触式按键传感器。
3. 使用指尖准确轻按您所需的轻触式按键，请小心不要接触到具有其它功能的按键。
4. 当主屏和轻触式按键指示灯都关闭时，按轻触式按键不会打开主屏指示灯。按  键，主屏指示灯亮起（轻触式按键指示灯关闭时，轻触式按键无法正常工作）。
5. 如果手机滑盖关闭，“轻触保护”功能将自动打开；通话过程中，“轻触式按键锁”功能将自动启用。（有关详细信息，请参阅“使用手机时的轻触式按键状态”。）
6. 如果轻触式按键被手机盒或塑料盖住，那么它们可能无法正常工作。此外，如果您使用轻触式按键时戴着手套，那么它们可能无法正常工作。



轻触式按键快捷方式图

注意：您可以在显示设定菜单 [菜单 #. 2. 1. 1] 中启用此功能。

7. 使轻触式按键表面远离金属或其它传导材料，因为接触它们将导致损坏。

使用手机时的轻触式按键状态


当滑盖关闭时，为了避免在手机使用或通话过程中无意触碰到轻触式按键以执行任何操作，“轻触保护”功能将自动启用。（此情况下，即使按轻触式按键，它们也无法正常工作）

1. 滑盖关闭时

- 滑盖关闭时，“轻触保护”功能将自动启用。（打开滑盖将自动禁用该功能。）
- 滑盖关闭时要禁用“轻触保护”功能，请按音量按钮两次。
- 禁用“轻触保护”功能后，如果在特定时间段（3 秒）内没有执行任何按键操作，“轻触保护”功能将再次启用。

2. 通话过程中

- 通话过程中，无论滑盖状态如何，“轻触保护”功能都将自动启用。

- 要禁用“轻触保护”功能，请按除  以外的任意键。
- 禁用“轻触式按键锁”功能后，如果在特定时间段（3 秒）内没有执行任何按钮操作，“轻触保护”功能将再次启用。

注意

- ▶ 为了方便用户，购买产品时，轻触式按键图像和每个按键功能将显示在主屏上。

开始

开始

安装USIM卡和手机电池

1. 安装 USIM卡

USIM 卡包含手机号码、服务详细资料和联系信息，因此必须插入手机。

取出 USIM 卡之后，手机将无法使用（紧急呼叫除外），直到插入一个有效的 USIM 卡。插入或取出 USIM 卡之前，请始终断开手机与充电器和其它附件的连接。将 USIM 卡滑进 USIM 卡插槽中。确保 USIM 卡以正确方式插入并且卡上的金色接触区域面朝下。要取出 USIM 卡，轻轻将卡向下按并反向推出。



插入USIM卡



取出USIM

注意

- ▶ SIM 卡的金属触点很容易因刮擦而损坏。操作时请对 SIM 卡多加注意。遵守随 SIM 卡提供的说明。

2. 安装电池

向上滑入电池、直到其卡入到位。



删除

关机。（如果保持开机状态，您可能会丢失保存的电话号码和信息。）

按住电池释放按钮、将电池滑下。




给电池充电

要用旅行充电器为手机充电、您必须先装上电池。



1. 如图所示，箭头面朝上，将电源适配器的插头推入手机右侧的插座，直到卡入到位。
2. 将旅行充电器的另一端连接到墙上的 AC 电源插座。



注意

- ▶ 请仅使用包装盒随附的充电器。

3. 完全充电后电池图标条棒将停止闪烁。
4. 使用手机之前，请确保电池已完全充电。

小心!

- 不可强行插入充电接口、因为这将损坏手机及旅行充电器。
- 如果在国外使用电池组充电器，务必使用附属的适配插头进行适当的配置。
- 不要在充电过程中取出电池或 SIM 卡。

警告!

- 在发生雷电时、务必拔掉电线和充电器、以免遭受电击或发生火灾。
- 确保没有细尖的物体、如动物牙齿、指甲进入手机内触碰电池。这可能引发火灾。

开始

开始

断开充电器

如下图所示，将旅行充电器从手机上断开。



如何使用 microSD 存储卡



〈MicroSD 存储卡〉

〈如何插入 microSD 存储卡〉

1. 关机。在手机开机时插入或取出 microSD 卡会损坏保存在存储卡中的文件。
2. 掀开保护 microSD 插槽的塑料盖。



3. 将存储卡插入插槽。金属触点必须与 microSD 的背部接触。不要太用力的推入 microSD。如果不能轻松地将其插入插槽，则您可能是插入方式出错或是插槽内有异物。
4. 插入后，向前推入存储卡，直到听到“咔”的一声，这意味着 microSD 卡已被正确锁定。



5. 关闭插槽塑料保护。
6. 要取出存储卡，请关机后打开插槽保护，然后将 microSD 退出以解除锁定。小心取出存储卡。

注意：

- ▶ 电池电量低时避免使用闪存。

- ▶ 写入存储卡时，请在写入操作完成后再取出存储卡。
- ▶ 存储卡在设计时即采取仅以一个方向轻松插入到位。
- ▶ 不要折弯存储卡或强行将其插入插槽。
- ▶ 除 microSD 卡外，不要插入其它任何类型的存储卡。
- ▶ 如果已使用 FAT32 格式化 microSD 卡，请再使用 FAT16 格式化 microSD 卡一次。

有关 microSD 卡的详细信息，请参阅存储卡说明指南。

存储卡格式化

开始使用存储卡之前，您必须先对其进行格式化。插入存储卡后，请选择“菜单”→“设置”→“手机设置”→“内存状态”→“格式化外部存储卡”，然后按 **OK**。此操作仅应在第一次插入存储卡时完成。格式化期间，手机将为不同的数据类型创建不同的文件夹。

开机/关机

开机

确保在手机中插入 USIM 卡并装入已充电的电池。按住 **电源** 键直至开机。当 PIN 码请求设置为开时，请输入随 USIM 卡提供的 USIM PIN 码。（备注：请参阅第 74 页）数秒钟后，手机便可完成网络注册。

关机

按住 **电源** 键直至关机。关机时可能会出现几秒钟的延迟。在此期间，不要再次开机。

访问密码

您可以使用本节所述的访问密码来防止他人未经允许使用您的手机。可以使用更换密码功能 [菜单 #-1-4-3] 来更改访问密码（除 PUK 和 PUK2 码）。

PIN 码（4 至 8 位数字）

PIN（个人身份号码）码防止他人未经允许使用您的 USIM 卡。PIN 码通常随 USIM 卡提供。当 PIN 码请求设置为开时，每次开机时手机都会要求输入 PIN 码。当 PIN 码请求设置为关时，手机将直接连接到网络，而无需 PIN 码。

PIN2 码（4 至 8 位数字）

某些 USIM 卡会提供 PIN2 码，访问诸如话费建议和固定拨号之类的功能时要求输入 PIN2 码。仅当您的 USIM 卡支持此类功能时，才可以使用这些功能。

PUK 码（4 至 8 位数字）

取消 PIN 锁定电话时需要输入 PUK（PIN 解锁密码）码。USIM 卡可能会提供 PUK 码。如果未提供，请联系您的网络运营商客户服务中心，以获得该密码。如果丢失了密码，请与您的网络运营商客户服务中心联系。

PUK2码（4至8位数字）


随某些 USIM 卡会提供 PUK2 码，更改被锁定的 PIN2 码时需要 PUK2 码。如果丢失了密码，请与您的网络运营商客户服务中心联系。

安全密码（4至8位数字）

安全密码防止他人未经允许使用您的手机。默认的安全码设置为“0000”，删除所有电话记录及恢复手机出厂设定时需要输入安全码。

显示信息


无 USIM 卡待机屏

这是在未插入 USIM 卡或插入的 USIM 卡无效的情况下，手机上出现的初始屏幕。在此屏幕中，用户只能拨打紧急电话，然后关机。要关机，请按住  数秒。

屏幕结构

如果未插入 USIM 卡，屏幕上将出现动画，提示您插入 USIM 卡。如果插到手机中的 USIM 卡无效，屏幕上将出现动画，提示您 USIM 卡已锁定。

紧急呼叫功能

屏幕上的右软键显示为“紧急”。按右软键或使用数字键键入所需的紧急呼叫号码，然后按  键拨打紧急电话。

待机屏

如果您在未插入正确的 USIM 卡的情况下开机，将会出现待机屏幕。


屏幕结构

待机屏幕由一个显示有运营商的名称、指示符、日期和时间的背景图像组成。您可以更改显示设置菜单上的墙纸。

编号屏幕

当您在待机屏幕状态下按数字键时，将会出现编号屏幕。


屏幕结构

编号屏幕包含状态指示符、拨出号码和软键菜单。这里的状态指示符与待机屏幕上的状态指示符完全相同。您可以在显示设置菜单中更改拨号字体的大小和颜色。在拨号过程中，您可以通过按  键来拨打电话。

软键

在拨号过程中，您可以使用几个功能的软键。使用左软键，您可以拨打视频电话、向某号码发送信息、将某号码保存到电话本。

话机锁屏幕

在选择话机锁功能后，您只能拨打紧急电话、取消锁定，然后在此屏幕上关机。照例，通过按住  键几秒钟，您可以关机。

屏幕结构

除了屏幕上出现的是锁定信息而不是待机屏幕标志外，话机锁屏幕结构与待机屏幕结构完全相同。

紧急呼叫功能

您可以使用右软键拨打紧急电话。出现“无 USIM 卡”待机屏时，近可拨打紧急电话。

解锁功能

如果您按左软键，此时将出现一个弹出屏幕，要求您输入安全码以解除手机锁定。您可以在“更改密码”中配置安全码（#. 设置 → 1. 手机设置 → 4. 安全 → 3. 更改密码）。如果您键入错误的安全码，手机将继续保持锁定状态。如果您键入正确的安全码，手机将解除锁定，此时将显示待机屏幕。如果您在手机处于锁定状态的情况下关机，则当您重新开机时，您会发现手机仍然处于锁定状态。





限制密码

在某些条件下，此服务会影响通话服务。可使用“呼叫限制”功能编辑此条件（#. 设置 → 5. 通话设置 → 2. 呼叫限制）。在使用呼叫限制功能时需要输入限制密码。如果预订了此服务，您将从网络运营商客户服务中心处获得此密码。激活此服务时，呼叫者将听到信息邮件：由于呼叫限制，此呼叫无法连接。


常规功能

拨打电话





拨打语音电话

1. 输入电话号码，包括完整区号。
 - ▶ 要删除一个数字，请按 。
 - ▶ 要删除所有数字，请按住 。
2. 按  拨打电话。
3. 按  或闭合翻盖结束通话。

注意



- ▶ 要在通话过程中启用扬声器，请激活轻触式按键并按 。

从通话记录拨打电话

1. 在待机模式下，按 ，屏幕上将显示最后的来电、去电和未接来电。
2. 使用  /  选择所需号码。
3. 按  键以拨出号码。

拨打视频电话


您可以在 3G 覆盖的服务区域拨打视频电话。如果被呼叫者具有 3G 视频电话，且位于 3G 覆盖的服务区域内，那么你们即可建立通话连接。您还可以接听视频电话。要拨打/应答视频电话，请执行以下操作。

1. 使用键盘输入电话号码，或者从呼入/呼出列表选择电话号码。
 - ▶ 要更正错误，请短按  删除输入的最后一个数字，或者按住  删除所有数字。
2. 若不想使用扬声器，请确保将耳机插入。
3. 要启用视频功能，请按左软键 [选项]，然后选择“拨打视频电话”。
 - ▶ 要拨打视频电话，系统将通知您需要关闭其它应用程序。

常规功能




注意

- ▶ 视频电话可能需要一定时间进行连接。请耐心等待。连接时间也取决于对方应答呼叫的速度。在视频电话连接过程中，您会看到自己的图像；在对方应答后，屏幕将显示其图像。


4. 请根据需要调整相机位置。
5. 按  或闭合翻盖结束呼叫。


从电话本拨打语音/视频电话

拨打在电话本中存有号码的联系人的电话非常方便。



1. 按  访问联系人列表。
2. 滚动到联系人并拨打电话。
3. 按  拨打视频电话。按左软键并选择“拨打视频电话”。
4. 按  结束呼叫。

拨打国际电话

1. 按住  以输入国际前缀。“+”字符可作为国际接入码前缀。

2. 输入国家代码、地区代码和电话号码。
3. 按 。

调节音量



通话过程中，如果要调节听筒音量，请使用手机左侧  键。在待机模式下，您可以使用  调节按键音量。



应答电话

当接收到电话时、手机响铃并且屏幕上出现闪烁的电话图标。如果可以识别致电者、则会显示该致电者的电话号码（或保存在电话本中的姓名/照片）。


1. 打开滑盖即可接听来电。

注意

- ▶ 要拒绝来电，请按  或右软键两次。
- ▶ 如果接听模式设置为“按发送键”（菜单 #.5.0.4），您可以在打开滑盖后按  接听来电。

- ▶ 如果接听模式设置为“按任意键”，除了  键，按任何键都将接听来电。
2. 要结束通话，请关闭翻盖或按  。


注意

- ▶ 在使用电话本或其它菜单功能时，您也可以接听来电。
- ▶ 在手机连接到兼容耳机时，您也可以使用耳机键来接听来电，和使用手机一样。要拒接来电，请按  。
- ▶ 您可以通过按下下方音量侧键，在来电时静音。

激活振动模式的快捷方式

开机后，按住  可激活振动模式。

信号强度

您可以通过手机屏幕上的信号指示符 () 检查信号强度。信号强度会有所差别、尤其是在建筑物内。移到窗口附近可以改善接收质量。


T9英文模式

此模式允许以每个字母只需一次击键的方式输入单词。键盘上的每个按键对应于多个字母。T9英文模式自动将所击按键与内部词典进行比较、然后确定正确的单词、因此所需的击键次数比传统的 ABC 模式要少。有时这也称为预测性文本。

ABC 模式

在此模式中、输入字母时、按标示为所需字母的按键一次、两次、三次或四次、直到显示该字母。

123 模式（数字模式）

以每个数字一次击键的方式输入数字。要在文本输入区域中更改为 123 模式、按  键直到显示 123 模式。

常规功能


输入文本

您可以使用键盘输入字母数字字符。

例如，在电话本中存储姓名、写短信、创建个人问候语或者在日历中安排事件等，都需要输入文本。

本手机提供以下文本输入方法。


更改文本输入模式

1. 当处于允许输入字符的区域中时，在 LCD 屏幕的右上角可以看到文本输入模式指示符。
2. 按  在 T9Abc, T9abc, Abc, abc 和 123 之间切换。

使用 T9 模式

T9 预测性文本输入模式允许您以最少的按键次数输入单词。当您按每个按键时，手机开始显示它根据内置词典认为正确的字符。当添加新单词时，手机将从词典中选择可能性最大的单词。


1. 当处于 T9 预测性文本输入模式时、通过按  到  键开始输入单词。每个字母按一次键。

- ▶ 在输入字母时、单词不断更改。请忽略屏幕上显示的单词、直到整个单词输入完毕。
- ▶ 如果在完成输入之后单词仍不正确，请按  一次或多次以循环选择其它单词。

例：

按     输入 GOOD。

按  则输入 Home。

- ▶ 如果供选单词列表中没有所需的单词、请使用 ABC 模式添加该单词。
2. 输入整个单词之后再对输入的内容进行编辑或删除。
 3. 按  键以空格结束每个单词。

要删除字母、请按 。按住  删除整个单词。

使用 ABC 模式

使用  至  键输入文本。

1. 按标示为所需字母的按键：
 - ▶ 按一次输入第一个字母
 - ▶ 按两次输入第二个字母

► 依此类推

- 要插入空格、按 **0** 键一次。要删除字母、按 **☐** 键。按住 **☐** 键以清除显示的所有内容。

有关可使用字母数字键输入的字符、请参阅下表了解更多信息。

按键	按顺序显示的字符	
	小写	大写
1	, . ? ! " ' * - () @ / : _	, . ? ! " ' * - () @ / : _
2	abc2âçääääæç	ABC2ĂÇĂĂĂĂÆÇ
3	def3déeèèè	DEF3ĐÉÉÉÉÉ
4	ghi4iiii	GHI4iiii
5	jkI5εil	JKL5εLL
6	mno6ñóóóóñôôø	MNO6ÑÓÓÓÓÑÔÔØ
7	pqrs7íśšð\$	PQRS7ŘŠŠð\$
8	tuv8ťúúúúú	TUV8ŤÚÚÚÚÚ
9	wxyz9ÿž	WXYZ9ÝŽ
0	空格键 0	空格键 0

注意

- 分配到按键的字符及其出现顺序取决于使用“输入法”选项选择的语言。上表提供了适用于英语语言的字符设置。

使用 123（数字）模式

使用123模式、您可以在文本信息中输入数字（例如电话号码）。按与所需数字对应的按键、然后手动切换回适当的文本输入模式。

使用符号模式

使用符号模式可输入各种符号或特殊字符。要输入符号，请选择“选项”→“插入”→“符号”。使用导航键和数字键选择所需的符号，然后按 **OK**。

菜单功能概览

您可以通过按待机屏幕中的 **OK** 启动菜单。移至所需项目并按 **OK** 进入子菜单。

您也可以通过直接按对应的数字键（如下所示），从主菜单进入子菜单。主菜单包含以下顶层菜单和子菜单。

1. 娱乐

- 1.1 游戏和应用程序
- 1.2 更多游戏
- 1.3 JAVA 设置

2. Internet

- 2.1 主页
- 2.2 输入 URL
- 2.3 书签
- 2.4 保存的网页
- 2.5 浏览器设置

3. 音乐

- 3.1 立即播放
- 3.2 所有曲目
- 3.3 播放列表

4. 照相

- 4.1 照相
- 4.2 语音备忘录

5. 信息

- 5.1 新建
- 5.2 收件箱
- 5.3 收件箱
- 5.4 发信箱
- 5.5 已发信息
- 5.6 电子邮件
- 5.7 模板
- 5.8 信息设置

6. 我的文件

- 6.1 图片
- 6.2 铃声
- 6.3 视频
- 6.4 游戏和应用程序
- 6.5 蓝牙数据
- 6.6 其它文件
- 6.7 外部存储器

7. 公文包和工具

- 7.1 闹钟
- 7.2 日程表
- 7.3 任务
- 7.4 备忘录
- 7.5 计算器
- 7.6 换算器
- 7.7 世界时间
- 7.8 语音备忘录

8. 电话本

- 8.1 添加
- 8.2 联系人列表
- 8.3 群组
- 8.4 快速拨号
- 8.5 服务号码
- 8.6 本手机号码
- 8.7 设置

9. 呼叫

- 9.1 全部通话
- 9.2 已拨电话
- 9.3 已接来电
- 9.4 未接来电

* USIM 卡工具包
/警报 (如果 USIM
卡不支持 SAT)

0. 可视电话

#. 设置

- #.1 手机设置
- #.2 显示设定
- #.3 Java 设置
- #.4 信息设置
- #.5 通话设置
- #.6 电话本设置
- #.7 连接

娱乐 [功能表 1]

游戏和应用程序 功能表 1.1

选择此菜单，您可以轻松执行某些应用程序。“游戏和应用程序”文件夹中的所有游戏和应用程序都是 Java 应用程序 (MIDlet)。默认情况下，从门户网站中下载的应用程序保存在“游戏和应用程序”文件夹中。

更多游戏 功能表 1.2

您可以通过此链接下载应用程序。请注意，使用在线服务时可能会产生额外费用。

JAVA 设置 功能表 1.3

激活网络设定

1. 将光标移至您要激活的网络设定。
2. 按 **OK** 或从“选项”菜单中选择“激活”。

添加新的网络设定

1. 从“选项”菜单选择“新增”。需要配置以下项目。

服务名称	输入网络设定的帐户名。
连接方式	从指定的连接模式列表中选择。 (默认为使用代理的 TCP)
IP 地址	输入运营商提供的 WAP 网关 IP 地址。(例如，195.115.025.129)
代理服务端口	运营商提供的端口详细信息取决于“连接模式”。
接入点	从指定的接入点列表中选择。(有关添加或编辑新的接入点的详细信息，请参阅第 91 页。)

2. 按右软键 [完成] 保存任何配置更改。

您可以通过从“选项”菜单选择“编辑”和“删除”以编辑或删除网络设定。

Internet [功能表 2]

主页

功能表 2.1

您可以启动网络浏览器并访问网络服务的主页。

- ▶ 您还可以通过在待机模式下按右软键访问Internet。



输入 URL

功能表 2.2

输入地址

(功能表 2.2.1)

您可以手动输入 URL 地址并访问相关网页。

- ▶ 要输入符号，请按  或右软键 [符号] 以显示符号表。
- ▶ 要切换输入模式，请按 。

最近打开的页面

(功能表 2.2.2)

显示最近浏览的页面。

书签


功能表 2.3

您可以保存经常访问的或喜爱的 URL/网页。可对书签执行打开、发送、新增、编辑、标记/取消标记或删除操作。部分预先配置的 URL 被保存为书签。

添加新书签

1. 按右软键 [添加]。
2. 输入标题和相关的 URL 信息。
3. 按右软键 [完成] 保存。

连接到所需书签

按  或从“选项”菜单中选择“打开”。

向他人发送书签

从“选项”菜单中选择“发送”。您可以通过“信息”或“电子邮件”发送。

删除书签

从“选项”菜单中选择“删除”。使用“标记/取消标记”选项，您可以删除多个书签。

保存的网页

(功能表 2.4)

本手机可将显示屏上的页面保存为脱机文件。最多可以保存 20 个网页。

浏览器设置

(功能表 2.5)

您可以更改浏览器的显示、安全性和证书设置。

上网设定

(功能表 2.5.1)

按 **OK** 选择相应的网络设定。这将激活网络设定以启动浏览器。

安全设定

(功能表 2.5.2)

证书

如果有存储的话，在这里还可以找到 WTLS/TLS 需要的根证书列表。用户可以查看列表中的证书。

清除会话

使用此选项可清除安全 (WTLS/ TLS) 会话数据。要新建安全会话，应首先清除会话数据。

字符编码

(功能表 2.5.3)

将浏览器默认字符集设为以下之一：

自动、英语 (ASCII)、英语 (ISO)；
英语 (LATIN)、Unicode (UCS2 BE)；
Unicode (UCS2 LE)，Unicode (UCS2 Auto)；
Unicode (UTF-16 BE)，Unicode (UTF-16 LE)；
Unicode (UTF-16 Auto)，Unicode (UTF-8)，
Chinese (BIG5)。

滚动控制

(功能表 2.5.4)

允许您通过选择要滚动的行数来设置滚动速度。

从“小” (1 行)、“中” (2 行)、“大” (3 行)中选择。

显示图像

(功能表 2.5.5)

允许您在浏览过程中启用或禁用图像显示。

注意

启用此功能将在传输完成之前延时显示图像。禁用此功能将阻止浏览器从服务器下载图像，以实现更快的传输。

缓存

(功能表 2.5.6)

启用“缓存”将允许您将访问过的页面保存到手机上。一旦页面存储于缓存中，那么在您以后浏览该页面时，其加载速度将大大提高。

Cookies

(功能表 2.5.7)

启用 Cookie 将允许您保存发自服务器的 cookie。禁用此功能将阻止 cookie 存储到您的手机中。

JavaScript

(功能表 2.5.8)

选择将 JavaScript 设置为“开”或“关”。

恢复初始设定

(功能表 2.5.9)

选择以将手机重新设置为默认浏览器设置。

立即播放

功能表 3.1

当前正在播放曲目时，将激活此菜单。

所有曲目

功能表 3.2

您可以在手机或外部存储器中查看整个音乐文件。

播放列表

功能表 3.3

您可以从“所有曲目”菜单列表中选择曲目以创建您自己的播放列表。

照相 [功能表 4]


照相

功能表 4.1

此应用程序使您能够拍摄照片。您可以拍摄所需尺寸的照片，并将它用作联系人照片、主屏及其它更一般的用途。

拍摄后，可以通过信息、电子邮件或蓝牙发送照片。

显示当前相机设置。

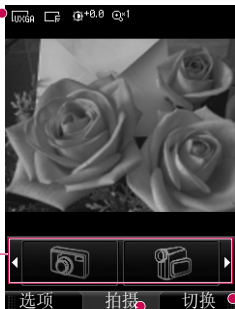

使用 **<** / **>**，您可以在相机和摄像机之间切换。

使用右软键，您可以切换到相机以激活内部或外部相机。

按 **OK** 拍照。

1. 按左软键访问“选项”并设置所需环境，如下所示：

- ▶ 使用 **<** / **>** 在选项菜单间移动。
- ▶ 使用 **^** / **v** 选择所需的值，然后使用左软键 [选择] 或 **OK** 确定。

转到	此时将启动“图片”文件夹，并以缩略图形式显示现有照片。 您可以通过按 OK 查看照片。您还可以通过信息、电子邮件或蓝牙将选定照片发送给其他人。
大小	1600x1200 (L), 1280x960 (L), 640x480 (L), 320x240 (L), 墙纸 (P), 176x144 (C), 添加到电话本 (U)
质量	超精细 (S)、精细 (F)、标准 (N)
灯	关、始终打开 (☞)、拍照时打开 (☞) ▶ 在预览模式下，您可以将相机灯设置为开/关 ☞ 。
连拍	1 张、3 张 (☞)、6 张 (☞)、9 张 (☞) (备注：可连拍张数取决于照片大小。)
缩放	x1 (☞), x2 (☞) (备注：可用缩放级别取决于照片大小。) ▶ 预览模式下，您可以放大 ☞ / 缩小照片 ☞ 。
亮度	从 -2.0 至 2.0，增量为 0.5。级别越高，屏幕越亮。 ▶ 在预览模式下，您可以使用 ☞ 调节亮度。

白平衡	您可以根据天气调节背景照片的颜色。 自动、日光、阴天、照明、室内
夜间模式	选择“开”，在夜晚您可以拍摄出更好的照片。
快拍	拍照时，您可以在 9 种相框中进行选择。（仅适用于墙纸大小）
计时器	您可以延迟相机的快门时间。无、3 秒、5 秒、10 秒；激活计时器时，将显示 ☞ 。
效果	无、黑白、底片、怀旧
声音	选择所需的快门声音。
内存	为手机或外部存储器选择所需内存。
镜像	选择“开”，您可以激活镜像效果。
切换	您可以切换到相机以激活内部或外部相机。
预览样式	标准、全屏

2. 完成所有设置后，按右软键 [关闭]。
3. 将相机对准要拍摄的物体，然后按 **OK**。
4. 按 **OK** 保存照片。照片将保存在“我的文件”中的“图片”文件夹中。按右软键 [发送]，您可以通过信息、电子邮件或蓝牙发送照片。

注意


按 **←** 返回预览模式而不保存照片。

语音备忘录

功能表 4.2

此应用程序使您能够录制视频剪辑。在此菜单中，您可以选择同时播放并观看保存的视频文件。录制后，视频剪辑可以通过信息、电子邮件或蓝牙发送。

显示当前相机设置。

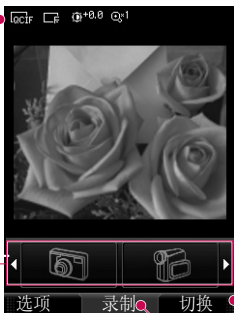

使用 **◀** / **▶**，您可以在相机和摄像机之间切换。

使用右软键，您可以切换到相机以激活内部或外部相机。




按 **OK** 录制视频剪辑。

1. 按左软键访问“选项”并设置所需环境，如下所示：
 - ▶ 使用 **◀** / **▶** 在选项菜单间移动。
 - ▶ 使用 **▲** / **▼** 选择所需的值，然后使用左软键 [选择] 或 **OK** 确定。


照相

转到	此时将启动“视频”文件夹，并以缩略图形式显示现有视频。 您可以通过按  观看视频。您还可以通过信息、电子邮件或蓝牙将选定视频发送给其他人。
大小	320x240 ()，176x144 ()，128x96 ()
质量	超精细 ()、精细 ()、标准 ()
灯	关、始终打开 ()、录制时打开 () ▶ 在预览模式下，您可以使用  将相机灯设置为开/关。
缩放	x1 ()，x2 () (备注：可用缩放级别取决于文件大小。) ▶ 预览模式下，您可以放大  /  缩小照片。
亮度	从 -2.0 至 2.0，增量为 0.5。级别越高，屏幕越亮。 ▶ 在预览模式下，您可以使用  调节亮度。
白平衡	您可以根据天气调节背景视频的颜色。 自动、日光、阴天、照明、室内

夜间模式	选择“开”，在夜晚您可以拍摄出更好的视频。
效果	无、黑白、底片、怀旧
长度	选择所需的录制时间。 信息、30秒、1分钟、2分钟、5分钟、60分钟
内存	为手机或外部存储器选择所需内存。
镜像	选择“开”，您可以激活镜像效果。
声音	决定是否要录制声音。
切换	您可以切换相机以激活内部或外部相机。

2. 完成所有设置后，按右软键 [关闭]。
3. 将相机对准要录制的物体，然后按  开始录制。
按  停止录制。
 - ▶ 按右软键 [暂停] 可以停止录制。
4. 按  保存视频剪辑。视频将保存在“我的文件”中的“视频”文件夹中。
按右软键 [发送]，您可以直接通过信息、电子邮件或蓝牙发送视频剪辑。

注意

按  返回预览模式而不保存视频剪辑。

信息 [功能表 5]

新建

功能表 5.1

信息

(功能表 5.1.1)

您可以撰写并编辑包含文本、图像、视频和音频的信息。

1. 在“信息”字段中输入您的信息。

“信息”字段中的选项菜单

▶ 添加：您可以执行以下操作：

1. 图片：插入图片。（每个幻灯片一张图片）。
2. 拍照：此时将打开相机模式，您可以拍照。此时照片将被插入到信息窗口中。（每个幻灯片一张图片）。
3. 视频：您可以插入视频剪辑。（每个幻灯片一个视频剪辑）。
4. 摄像：此时将打开摄像机模式，您可以录制视频。录制的视频将插入到信息中。（每个幻灯片一个视频剪辑）
5. 歌曲：您可以插入声音文件。（每个幻灯片一个声音）

6. 录制声音：此时将打开摄像机模式，您可以录制声音。录制的声音将插入到信息中。（每个幻灯片一个声音）。

7. 联系人详细信息：您可以添加存储在电话本中的姓名和/或号码。选择是发送姓名、号码，还是发送姓名和号码，然后按 **OK**。此时将打开联系人列表，您可以搜索要插入的联系人。

8. 模板：您可以插入一个保存在手机中的文本模板。选择一个模板，按 **OK**。选定的模板将被插入到“信息”窗口中。

9. 抄送：选择以插入抄送。

0. 主题：选择以插入主题。

*. 新幻灯片：选择以添加新幻灯片。

#. 符号：您可以插入符号。输入相应的数字键后，按 **OK**。

▶ 添加收件人：您可以从您的电话本添加收件人，或直接输入号码。

- ▶ 发送：选择以发送创建的信息。
 - ▶ 保存到草稿箱：选择此菜单可将邮件保存到草稿箱中。
 - ▶ 输入法：选择所需的字典模式。
 - ▶ 添加至字典：您可以将单词添加到字典。
 - ▶ 取消：选择以取消编辑。
2. 按右软键 [继续]。您可以从电话本中添加收件人，或直接输入号码。（您最多可以输入 10 个号码）

“收件人”字段中的选项菜单

- ▶ 添加收件人：您可以从您的电话本添加收件人，或直接输入号码。
 - ▶ 发送：选择以发送信息。
 - ▶ 保存到草稿箱：将信息保存到草稿箱。
 - ▶ 取消：选择以取消编辑。
3. 按右软键 [发送] 发送信息。信息将自动保存到“已发信息”文件夹。如果消息未发送出去，它将被保存在发件箱中并标记为失败状态。

电子邮件

(功能表 5.1.2)

要发送/接收电子邮件，您应先设置电子邮件帐户。（请参阅第 51-53 页，以获得如何设置电子邮件帐户的信息。）

1. 在“收件人”、“抄送”、“密件抄送”字段中输入收件人的电子邮件地址。您可以按 **OK** 搜索联系人。

注意




- 在“抄送”字段中输入参考电子邮件地址，以转发电子邮件。
- 在“密件抄送”字段中输入隐藏的参考电子邮件地址，以转发电子邮件（不转发邮件信息）。
- 对于收件人（“收件人”）、参考地址（“抄送”）和隐藏的参考地址（“密件抄送”）字段，仅可输入有效的电子邮件地址。当指定一个电子邮件地址后，将会出现另一个字段，您可以从中指定其它地址。您最多可以为“收件人”和“抄送”地址字段指定 20 个收件人，为“密件抄送”地址字段指定 10 个收件人。

信息

2. 将光标移到“主题”字段，然后键入主题。
3. 您可以通过将光标移到“信息”字段来输入信息内容。
4. 使用左软键 [选项]，您可以使用以下功能。
 - ▶ 添加：选择此菜单插入特殊字符、模板和联系人。此外，还可以附加多媒体文件（图片、视频和声音）。
 - ▶ 添加收件人：选择此菜单插入保存在电话本中的电子邮件地址。（仅在光标定位在“发件人”/“抄送”/“密件抄送”字段时，才显示在“选项”菜单中。）
 - ▶ 发送：发送创建的电子邮件。
 - ▶ 保存到草稿箱：选择此菜单可将邮件保存到草稿箱中。
 - ▶ 预览：发送前，您可以先预览创建的电子邮件。
 - ▶ 查看附件：显示附加的文件。（仅在附件了文件时，此项方可用。）
 - ▶ 输入法：选择所需的字典模式。
 - ▶ 添加至字典：您可以将新单词添加到字典。
 - ▶ 设置邮件优先级：您可以配置要发送的电子邮件的优先级。
 - ▶ 取消：退出电子邮件编辑器。
5. 完成电子邮件撰写后，按右软键 [发送] 发送电子邮件。

收件箱

功能表 5.2

1. 您可以查看保存的信息。选择一条信息，然后按  查看信息。
2. 您可以使用  /  查看上一条或下一条信息。
3. 要查看多媒体信息（通知），请选择信息通知查看屏幕中的“检索”。随后，将传输文件；传输完成后，您可以查看文件。

使用收件箱中的左软键 [选项]，您可以使用以下功能。

- ▶ 查看：查看所选信息。
- ▶ 回复：创建对发件人或选定信息所有收件人的回复。

- ▶ 转发：转发所选信息。

注意

不支持彩信（通知）和 WAP Push 信息。

- ▶ 拨打视频电话：您可以拨打视频电话。
- ▶ 删除：删除当前信息。
- ▶ 新建信息：您可以撰写新信息或电子邮件。
- ▶ 标记/取消标记：您可以选择一个或多个信息以执行“删除多个”操作。
- ▶ 过滤器：按所需信息类型显示信息。
- ▶ 复制：对于短信，您可以将信息复制到手机或 USIM 卡。
- ▶ 移动：对于短信，您可以将信息移动到手机或 USIM 卡。
- ▶ 信息：您可以检查信息类型、日期和时间，以及保存位置。

注意

您可以检查保存在“电子邮件”中的电子邮件 [菜单 5.6]。

发件箱

功能表 5.3

您可以查看保存过的信息。选择一条信息，然后按 **OK** 编辑信息。

使用左软键 [选项]，您可以使用以下功能。

- ▶ 删除：您可以编辑信息。
- ▶ 发送：删除所选信息。
- ▶ 新建信息：您可以撰写新信息或电子邮件。
- ▶ 标记/取消标记：您可以选择一个或多个信息以执行“删除多个”操作。
- ▶ 过滤器：按所需的信息类型显示信息。
- ▶ 信息：您可以检查信息类型、日期和时间，以及保存位置。

发信箱

功能表 5.4

发件箱是等待发送信息的临时存储处。发送失败的信息也将位于发件箱中。例如，如果电子邮件账户配置不正确，那么电子邮件将被保存在发件箱中。

信息

1. 选择一条信息，然后按 **OK** 查看信息。
2. 使用左软键 [选项]，您可以使用以下功能。

[适用于发送/等待信息]

- ▶ 新建信息：您可以撰写新信息或电子邮件。
- ▶ 取消：您可以停止发送/等待状态。
- ▶ 信息：您可以检查信息类型、日期和时间，以及保存位置。

[适用于发送失败的信息]

- ▶ 重新发送：重新发送选定的信息。
- ▶ 转发：转发选定的信息。
- ▶ 编辑：您可以编辑选定的信息。
- ▶ 删除：删除当前信息。
- ▶ 新建信息：您可以撰写新信息或电子邮件。
- ▶ 标记/取消标记：您可以选择一个或多个信息以执行“删除多个”操作。
- ▶ 信息：您可以检查信息类型、日期和时间，以及保存位置。

已发信息

功能表 5.5

显示发送的信息（信息/电子邮件）。

[选项]

- ▶ 查看：查看所选信息。
- ▶ 转发：转发选定的信息。
- ▶ 删除：删除当前信息。
- ▶ 编辑：您可以编辑选定的信息。
- ▶ 新建信息：您可以撰写新信息。
- ▶ 保存号码：保存发件人的号码。
- ▶ 标记/取消标记：您可以选择一个或多个信息以执行“删除多个”操作。
- ▶ 过滤器：按所需的信息类型显示信息。
- ▶ 复制：对于短信，您可以将信息复制到手机或 USIM 卡。
- ▶ 移动：对于短信，您可以将信息移动到手机或 USIM 卡。
- ▶ 信息：您可以检查信息类型、日期和时间，以及保存位置。

电子邮件

功能表 5.6

查看电子邮件信息列表

1. 选择一个电子邮件账户，然后按 **OK** 查看收到的电子邮件列表。
2. 使用右软键 [检索]，您可以从选定帐户的电子邮件服务器上检索新电子邮件列表。
3. 在电子邮件列表中，使用左软键 [选项]，您可以使用以下功能。
 - ▶ 查看：打开选定的电子邮件。
 - ▶ 回复：创建对选定电子邮件的回复。
 - ▶ 转发：向他人转发选定的电子邮件。
 - ▶ 检索：检索新电子邮件。
 - ▶ 删除：删除电子邮件。
 - ▶ 新建信息：创建新信息或电子邮件。
 - ▶ 保存地址：将发件人的地址保存到电话本。

- ▶ 标记/取消标记：使用“标记/取消标记”选项删除多项。
- ▶ 设为已读/未读：您可以将选定电子邮件设为已读或未读。
- ▶ 信息：有关信息的简短消息，例如：大小、类型、日期、时间和文件名。

查看电子邮件信息

1. 选择一封收到的电子邮件，然后按“打开”键接收电子邮件的内容。
2. 收到的电子邮件的内容会自动显示在“视图”屏幕上。
3. 您可以使用 **◀** / **▶** 查看上一封或下一封电子邮件。
4. 在“电子邮件视图”屏幕中，您可以通过使用左软键 [选项] 选择以下功能。
 - ▶ 回复：创建对选定电子邮件的回复。
 - ▶ 转发：向他人转发选定的电子邮件。

- ▶ 删除：删除电子邮件。
- ▶ 保存地址：将发件人的地址保存到电话本。
- ▶ 新建信息：创建新信息。
- ▶ 提取：从电子邮件中提取号码、电子邮件地址或网址。
- ▶ 查看附件：显示附加的文件。
- ▶ 查看地址：显示收件人和参考地址（抄送）的电子邮件地址。
- ▶ 信息：有关信息的简短消息，例如：大小、类型、日期、时间和文件名。

模板

功能表 5.7

文本模板

(功能表 5.7.1)

您可以使用左软键 [选项] 添加、编辑和删除经常使用的有用短语。

注意

根据服务提供商的不同，手机中将默认保存一些常用短语。

多媒体模板

(功能表 5.7.2)

您可以在创建多媒体信息时创建、编辑和查看可用的模板。本手机预设保存 5 种类型的模板（生日、问候、假期、感谢、道歉）。

可以使用以下选项。

- ▶ 新增：您可以创建新的多媒体模板。
- ▶ 写多媒体信息：使用选定模板创建多媒体信息。
- ▶ 查看：显示选定的模板。
- ▶ 编辑：编辑选定的模板。
- ▶ 删除：删除选定的模板。（不适用于预设的 5 个模板）

信息设置

功能表 5.8

短信

(功能表 5.8.1)

您可以配置与选项相关的文本信息。

1. 文本信息中心：输入文本信息中心的地址。
2. 发送报告：启用此选项，您可以验证信息是否已成功发送。
3. 有效期：该网络服务可让您在发送信息时设定文本信息在信息中心储存的期限。
4. 将长文本另发送为：以多条短信或彩信选择长文本信息。

彩信

(功能表 5.8.2)

您可以配置与选项相关的多媒体信息。

1. 检索模式：您可以分别使用本地网络和漫游网络设置检索模式。您可以分别使用本地网络和漫游网络设置检索模式。如果选择“自动”，将自动检索多媒体信息。如果选择“手动”，那么您仅会在收件箱中收到一条通知

信息，随后，您可以决定是否要下载该多媒体信息。

2. 发送报告：此菜单使您能够确定是否向收件人请求发送确认邮件，以及是否允许向发件人发送送达确认邮件。
 - ▶ 请求报告：确定是否为多媒体信息请求发送确认邮件。
 - ▶ 允许报告：确定是否允许为发送确认邮件请求发送送达确认邮件。
3. 阅读回复：此菜单使您能够确定是否向收件人请求读取确认邮件，以及是否允许向发件人发送读取确认邮件。
 - ▶ 请求回复：确定是否为多媒体信息请求读取确认邮件。
 - ▶ 允许回复：确定是否允许为阅读确认邮件请求发送读取确认邮件。
4. 优先级：您可以选择信息优先级（低、中或高）。
5. 有效期：允许您在发送多媒体信息时配置信息的有效期。此信息只在配置好的有效期内保存在多媒体服务器中。

6. 幻灯片持续时间：允许您在创建信息时配置每个页面的持续时间。
7. 发送时间：配置将信息发送至收件人的发送时间。多媒体信息中心将在到达发送时间后发送信息。
8. 多媒体信息中心：允许您配置网络信息（如 MMSC 合 WAP 网关），以发送多媒体信息。

使用左软键 [选项]，您可以激活、添加或删除网络设定。带复选标记的网络设定名是当前配置值。您可以通过按右软键 [编辑] 在编辑模式下查看和编辑网络设定的内容。当您在“选项”下创建新网络设定时，也会出现编辑屏幕。下面将解释这些项的具体涵义。

- ▶ 标题：网络设定名。
- ▶ MMSC URL：输入多媒体信息中心的 URL。
- ▶ 彩信代理：输入 WAP 网关地址和端口号。
- ▶ 连接方式：选择连接模式之一。（使用代理的 TCP，不使用代理的 UDP）

- ▶ 接入点：指定接入点名称。（请参阅 WAP 连接设置。）

按右软键 [完成] 保存所作的更改并完成多媒体信息中心设置。

电子邮件

(功能表 5.8.3)

您可以配置设置以接收和传输电子邮件。

1. 允许回复电子邮件：确定是否允许为阅读确认邮件请求发送读取确认邮件。
2. 请求回复电子邮件：确定是否为多媒体信息请求读取确认邮件。
3. 自动检索：您可以配置自动检索以从邮件接收服务器中自动检索电子邮件。当新电子邮件到达时，待机屏幕的顶部将出现一个图标。您可以选择自动接收的时隙：关、15 分钟、30 分钟或 1 小时。请注意，使用“自动检索”功能时可能会产生附加费用。
4. 在转发和回复中包含信息：确定在转发或回复信息时是否包含接收到的信息。

5. 签名：您可以配置签名文本以附加在电子邮件的末尾。在发送电子邮件时，配置的签名文本将自动或手动附加在电子邮件的末尾。
6. 优先级：您可以选择电子邮件优先级（低、中或高）。
7. 电子邮件账户：您可以创建或配置电子邮件帐户，包括电子邮件服务器和用户ID。按右软键 [编辑]，您可以编辑选定的电子邮件账户。您可以使用 选择用于发送电子邮件的电子邮件账户。使用左软键 [选项]，您可以选择以下功能。
 - ▶ 新增：创建新的电子邮件帐户。
 - ▶ 编辑：编辑选定的电子邮件帐户。
 - ▶ 激活：激活选定的用于发送邮件的帐户。
 - ▶ 删除：删除选定的电子邮件帐户。账户中包含的所有电子邮件将被删除。

创建新的电子邮件账户

1. 从“电子邮件帐户”菜单选项中选择“新增”。

2. 需要配置以下项目。

标题	输入标题。
用户名	输入电子邮件账户的用户名。
密码	输入电子邮件账户密码。
电子邮件地址	输入用于发送邮件的电子邮件地址。
邮件回复地址	输入用于回复电子邮件的电子邮件地址。
发送邮件服务器	输入发送电子邮件服务器。
接收邮件服务器	输入接收电子邮件服务器。
SMTP 端口号	输入邮件服务器端口号。一般情况下，SMTP（发送邮件服务器的端口号）为 25。
接收服务器端口	输入邮件服务器端口号。一般情况下，输入邮件服务器端口号为 110 (POP3) 或 143 (IMAP4)。
最大接收大小	使用 <input type="checkbox"/> 选择电子邮件最大接收大小。允许的最大接收大小不超过 1MB。
邮箱类型	使用 <input type="checkbox"/> 选择电子邮件收件箱类型是 POP3 还是 IMAP4。
保存到服务器	使用 <input type="checkbox"/> 确定是否在接收服务器上保留邮件副本。当邮箱类型设置为 IMAP4 时，将始终在服务器上保留邮件副本。

保存已发送邮件至	选择是否保存已发送邮件（当邮箱类型设置为 IMAP4 时）。当邮箱类型设置为 POP3 时，已发送邮件将始终保存在手机中。
接入点	选择要连接到 Internet 的接入点。您可以使用 OK 选择配置好的接入点。
自动检索	使用 OK 决定是否要激活自动检索。您可以使用“自动检索”[菜单 5.8.3.3] 设置自动接收的时隙。（请参阅第 51 页。）
SMTP 认证	使用 OK 决定是否要发送邮件服务器进行认证。当 SMTP 认证设为“开”时，您可以输入要进行 SMTP 认证的 SMTP 用户名和 SMTP 密码。
APOP 安全登录	使用 OK 决定是否激活 APOP 安全登录。当邮箱类型为 IMAP4 时，APOP 安全登录将始终设置为“关”。

3. 按右软键 [完成] 完成电子邮件账户配置。

编辑电子邮件账户

1. 从电子邮件账户列表中选择所需的电子邮件账户，然后按右软键 [编辑]。
2. 您可以通过上下移动光标来编辑所需的字段。

3. 配置完成吼，按右软键 [完成] 完成电子邮件账户配置。

注意

当您尝试更改邮箱类型时，之前下载的所有电子邮件都将被删除。

小区广播

(功能表 5.8.4)

- ▶ 手机广播：您可以设置接收状态。
- ▶ 频道：您可以添加或修改频道。
- ▶ 语言：通过按 **OK**，您可以选择所需语言。随后，小区广播信息将以您选定的语言显示。

服务信息

(功能表 5.8.5)

- ▶ 服务信息
您可以配置信息设置选项，如 Push(SI/SL) 和 OTAP。
 - 信息接收：如果将此选项设为“开”，将接收每一条服务信息。
 - 服务载入：如果将“信息接收”设为“开”，您可以从以下“服务载入”选项中选择：提示、禁用、始

终。

- ▶ 始终：S/L 信息将自动使用 S/L 信息中指定的 URL 连接到 Internet。
- ▶ 提示：当 S/L 信息到达时，您将收到一则弹出信息，询问您是否要载入 S/L 信息。
- ▶ 禁用：S/L 信息在到达时即被放弃。
- ▶ 服务安全性
您可以设置有关 Push(SI/SL) 和 OTAP 信息的所有接收选项。
 - 服务安全性设置
 - ▶ 可信：如果设为“开”，手机将自动与“可信列表”中的内容进行比较，以验证信息是否适当。
 - ▶ 不可信：如果设为“开”，手机将自动与“不可信列表”中的内容进行比较，以验证信息是否适当。
 - ▶ 更新：将此选项设为“开”，您可以使用到达的信息地址更新“可信/不可信列表”。

一旦服务信息到达后，您可以从弹出信

息中选择一个选项，以选择要更新哪个列表。

随后，服务器的 SMSC 和信息中的始发地址将被保存在“可信/不可信列表”中。

- 可信列表（仅“服务安全性设置 → 可信”状态设为“开”时有效）

符合值（SMSC 和始发地址）的信息意味着有效。

其值不符合 SMSC 或始发地址的信息将被放弃。

- 不可信列表（仅“服务安全性设置 → 不可信”状态设为“开”时有效）

与“可信列表”相反。

符合值（SMSC 和始发地址）的信息意味着无效。

其值不符合 SMSC 或始发地址的信息将被接收。

我的文件 [功能表 6]

图片

功能表 6.1

相机拍摄的照片存储在“图片”文件夹中，您也可以创建新的文件夹管理它们。您也可以将选定文件另存为 GIF 动画文件，然后将多个文件发送给其他人。

选定一个文件后，按左软键 [选项] 将出现以下选项：

- ▶ 查看：您可以查看选定的图片。
- ▶ 新建文件夹：您可以在当前选定文件夹内创建一个新的文件夹。
- ▶ 发送：您可以通过信息、电子邮件或蓝牙发送选定图像。
- ▶ 文件
 - 移动：可以将文件移到其它文件夹。
 - 复制：可以将文件复制到其它文件夹。
 - 重命名：可以重命名图像。
 - 编辑：可以编辑图像
- 制作 GIF 动画：您可以使用不同的照片创建 GIF 动画文件（分辨率为 240X320 时最多可显示 10 个文件，文件最大为 2Mbyte）。
- 信息：显示选定图像文件的信息。
- ▶ 删除：删除选定的图像。
- ▶ 标记/取消标记：使用“标记”功能，您可以发送、删除、移动和复制多个文件。
- ▶ 主屏：您可以将某图像设置为屏幕主题（主屏、呼叫图像、开机图像、关机图像）。
- ▶ 幻灯片放映：您可以启动幻灯片放映。
- ▶ 排序方式：按名称、日期或文件类型对文件进行排序。
- ▶ 列表视图/网格视图：您可以以列表视图或网格视图查看图像。
- ▶ 内存状态：您可以查看内存状态（手机或外部存储卡）。

铃声

功能表 6.2

“声音”文件夹由包含默认声音和录音的文件夹组成。在此，您可以管理、发送或将声音设为铃声。

视频

功能表 6.3





在此，您可以管理或发送下载的或拍摄的视频剪辑。

使用视频列表中的左软键 [选项]，您可以使用以下选项。

- ▶ 播放：播放视频。
- ▶ 新建文件夹：您可以创建新文件夹。
- ▶ 发送：您可以通过信息、电子邮件或蓝牙发送选定的视频剪辑（如果不受数字版权管理（DRM）保护）。
- ▶ 文件
 - 移动：将文件移至手机内存或外部存储器。
 - 复制：将文件复制到手机内存或外部存储器。
 - 重命名：可以重命名视频。

- 信息：显示选定视频文件的信息。

- ▶ 删除：删除选定视频。
- ▶ 标记/取消标记：使用“标记”功能，您可以发送、删除、移动和复制多个文件。
- ▶ 声音主题：您可以将视频设为语音铃声或视频铃声。
- ▶ 排序方式：您可以按日期、文件类型或名称对文件进行排序。
- ▶ 列表视图/网格视图：以列表视图或网格视图显示视频文件。
- ▶ 内存状态：显示内存状态（手机或外部存储卡）。

您可以使用视频播放器观看视频。视频文件以缩略图的形式显示在列表中。您可以使用  /  /  /  选择所需的视频。选择所需的视频，然后选择“播放”以观看所录制的视频。

选择右软键 [发送]，将选定视频附加到信息、电子邮件或蓝牙中。

如果选择选项“1. 播放”，手机将使用

我的文件

Media Player 播放视频剪辑。要暂停播放，请在播放过程中按 **OK**。要恢复暂停的播放，请再按一次 **OK**。

要捕获屏幕抓图，请在暂停播放后按右软键[捕获]。

要全屏观看当前播放的内容，请在播放过程中按右软键。

要返回至上一个屏幕大小，请在全屏模式下再按一次右软键。

在 Media Player 中观看视频剪辑时，可使用以下选项：

- ▶ 暂停/播放：您可以播放或暂停播放文件。
- ▶ 发送：您可以通过信息、电子邮件或蓝牙发送视频文件（如果不受数字版权管理(DRM)保护）。
- ▶ 转到列表：返回列表。
- ▶ 删除：删除选定视频。
- ▶ 声音主题：您可以将视频设为语音铃声或视频铃声。

- ▶ 广角视图：您可以以广角视图模式观看视频。
- ▶ 静音/取消静音：如果“音量”设置为 0 以上的值，“静音”模式将会激活；如果“音量”设置为 0，“取消静音”模式将会激活。
- ▶ 捕获：您可以将暂停屏幕上的内容保存为图像文件。（仅适用于“暂停”模式）。
- ▶ 设置重复：您可以设置重复选项（无/当前文件/所有文件）。
- ▶ 移至文件
 - 上一个文件：播放上一个视频文件。
 - 下一个文件：播放下一个视频文件。
- ▶ 文件信息：您可以查看正在播放的文件的相关信息（文件名、大小、日期、类型、持续时间、保护）。

游戏和应用程序 功能表 6.4

选择此菜单，您可以轻松执行某些应用程序。“游戏和应用程序”文件夹中的所有游戏和应用程序都是 Java 应用程序 (MIDlet)。默认情况下，从门户网站中下载的应用程序保存在“游戏和应用程序”文件夹中。

蓝牙数据 功能表 6.5

使用蓝牙接收的文件保存在此文件夹中。您不能在“蓝牙”数据文件夹中创建子文件夹。

您不能复制或移动不受“我的文件”管理的文件。

显示的选项随您选定的文件类型而定。例如，如果是图像，则支持以下功能。

- ▶ 查看/编辑/移动/复制/删除/重命名文件。
- ▶ 标记/取消标记一个或所有文件。
- ▶ 通过彩信、电子邮件或蓝牙发送文件（如果不受数字版权管理 (DRM) 保护）。

- ▶ 您可以将某图像设置为屏幕主题（主屏、呼叫图像、开机图像、关机图像）。
- ▶ 如果相关，开始或设置（标准还是全屏、放映速度等）幻灯片放映。
- ▶ 如果相关，使用不同的图片创建 GIF 动画文件。
- ▶ 按名称、日期或文件类型对文件进行排序。
- ▶ 内存信息（手机或外部存储卡）。
- ▶ 查看文件信息。

其它文件 功能表 6.6

除图片、声音、视频、游戏和应用程序以外的其它文件都保存在此文件夹。


外部存储器 功能表 6.7

如果购买可选的外部 microSD 存储卡，则您可以管理更多内容。请参阅第 20 和 21 页“如何使用 microSD 存储卡”部分，了解如何插入和取出存储卡。您可以管理相关内容，操作与手机相同。

公文包和工具 [功能表 7]

闹钟

功能表 7.1

如果您设置了闹钟， 将出现在指示符栏中。指定的闹钟将在预定时间响起。按 **OK** 停止闹钟，此时闹钟设置被取消。按右软键 [暂停] 并选择暂停间隔。闹钟停止并在暂停持续一段时间后恢复。您可以配置 5 个闹钟。

1. 在闹钟中选择要配置的闹钟。如果没有闹钟，请按右软键 [添加]，添加新的闹钟。
2. 设置/取消闹钟：使用用于指定是否打开闹钟的选项或者通过选择闹钟时间来设置或取消闹钟。
3. 输入闹钟时间：通过指定“小时”和“分钟”值来输入所需的闹钟时间。如果手机设置为 12 小时制格式，请选择“AM”或“PM”。
4. 选择重复模式：使用 **<** / **>** 或通过按 **OK** 从列表中选择所需模式。
5. 选择铃声：使用 **<** / **>** 或通过按 **OK** 打开列表并从中选择闹钟铃声。
6. 输入备忘录：输入闹钟名称。

7. 暂停：您可以设置闹钟休眠持续时间。
8. 闹钟设置结束后，按右软键 [完成]。

注意

即使关机，闹钟设置仍然有效。

日程表

功能表 7.2

日程表查询和搜索

1. 按月参考
您可以按月参考日程表。光标定位在当前日期上，注册日期下显示下划线。为光标所定位日期保存的日程表显示为图标。按快捷键 **1 up** 移到上一年，按快捷键 **3 dn** 移到下一年，按快捷键 **5 rt** 移到今天。按快捷键 **7 up** 移到上个月，按快捷键 **9 up** 移到下个月。按 **4 +** 移至周日历，按 **4 -** 移至月日历。您可以使用 **^** / **v** / **<** / **>** 移动日期。
2. 按天参考
按“按月参考”中的 **OK** 可以移到“按天参考”，在此，您可以按天

参考日程表。使用 **◀** / **▶** 您可以参考移动日期选项卡。搜索结果中会显示简要的日程表内容、重复设置配置以及闹钟设置配置。您可以通过短信（文本信息）、彩信（图片信息）、电子邮件或蓝牙将日程表发送给其它手机或网站。

3. 详细参考

您可以参考详细的日程表，也就是用户配置的日程表的全部内容。使用左软键 [选项]，您可以通过短信（文本信息）、彩信（图片信息）、电子邮件或蓝牙将日程表发送给其它手机或网站。

搜索日程表

您可以添加日程表。您可以配置开始时间、结束时间、内容、日程表类型、重复和日程表闹钟。

- ▶ 设置类型：约会、周年纪念、生日、其它
- ▶ 设置重复：一次、每日、每周、每月、每年、用户设置

- ▶ 设置闹钟：无闹钟、一次、15 分钟前、30 分钟前、1 小时前、1 天前、3 天前、1 周前

删除日程表

1. 删除过期日程表

您可以使用此功能删除所有过期的日程表。

2. 全部删除

您可以使用此功能删除所有保存的日程表内容。

设置和取消假期

您可以设置或取消用户假期。按左软键 [选项]，然后选择“设置假期”。选定日期将以红色显示。

要取消假期，按左软键 [选项]，然后选择“重设假期”。

日程表通知

如果用户已配置闹钟设置，则指定的闹钟将会响起。如果通知时间早于预定的起始时间，您可以重新设置闹钟。

任务

功能表 7.3

您可以查看、编辑和添加要执行的任务。任务按时间顺序显示。已完成任务或未完成任务的显示方式不同。

添加

要添加任务，请按“任务”列表管理屏幕中的右软键 [添加]。然后，输入任务的日期、说明和优先级。

输入数据完成后，按右软键 [完成] 保存新任务。

详细视图和编辑

要查看详细的任务内容，请将光标定位在“任务”列表中所需的项目上，然后按 **OK**。您可以使用左软键 [选项] 编辑或删除任务。您还可以使用“标记/取消标记”选项，一次删除多个或所有任务。

设置任务状态

设置为已完成的任务带删除线，并且显示在“任务”列表中未完成任务的下面。您可以通过选择“选项”将已完成的任务设置为未完成。

备忘录

功能表 7.4

使用备忘录管理功能，您可以查看和管理保存的备忘录内容，也可以添加新备忘录。

添加备忘录

要添加新的备忘录，请按右软键 [添加]。输入备忘录的内容。按右软键 [完成]，您可以将备忘录保存到列表中。

编辑和删除备忘录

高亮显示所需的备忘录，然后按 **OK** 查看其内容。您可以使用左软键 [选项] 编辑或删除备忘录的内容。**ESC** 您可以按 返回至备忘录管理屏幕。返回至备忘录管理屏幕。

计算器

功能表 7.5

计算器模式允许您执行基本的数学运算，例如加法、减法、乘法和除法；以及一些科学计算函数。

1. 按左软键 [选项]。
2. 选择“功能”，然后选择相应功能。

您可以使用数字键输入数字，并使用  / 、 /  输入运算符。您可以通过按 。按 ，字符将按相反的方向依次删除。按住 ，所有字符将按相反的方向一次性删除。

计算完成且屏幕上显示结果时，按一个数字将清除之前结果，计算器等待新的输入（即使您没有按右软键 [清除]）。计算完成且屏幕上显示结果时，按一个符号将结果应用至符号操作并继续计算。

换算器

功能表 7.6

使用此菜单，用户可以换算币种、面积、长度、重量、温度、体积和速度。

币种

(功能表 7.6.1)

1. 选择“币种”菜单。
2. 用户可以使用 [汇率] 设置币种汇率。
3. 最多输入 6 种币种的汇率（相当于 GBP），然后按 [完成]。然后，您可以将一种币种换算为另一种币种。

4. 您最多可以查看 6 种货币单位的汇率值。
5. 按 [重置] 清除当前输入字段中的值。

面积

(功能表 7.6.2)

1. 选择“面积”菜单。
2. 使用 [单位] 选择换算时所需的单位。
3. 输入标准单位，然后查看换算后的值。
4. 按 [重置] 清除当前输入字段中的值，然后将光标定位在输入字段中。

长度

(功能表 7.6.3)

1. 选择“长度”菜单。
2. 使用 [单位] 选择换算时所需的单位。
3. 输入标准单位，然后查看换算后的值。
4. 按 [重置] 清除当前输入字段中的值，然后将光标定位在输入字段中。

公文包和工具

重量

(功能表 7.6.4)

1. 选择“重量”菜单。
2. 使用 [单位] 选择换算时所需的单位。
3. 输入标准单位，然后查看换算后的值。
4. 按 [重设] 清除当前输入字段中的值，然后将光标定位在输入字段中。

温度

(功能表 7.6.5)

1. 选择“温度”菜单。
2. 使用向上、向下箭头键将光标定位在所需的单位上。
3. 输入标准单位，然后查看换算后的值。
4. 按 [重设] 清除当前输入字段中的值，然后将光标定位在输入字段中。
5. 您可以通过选择 [-] 插入负值。

音量

(功能表 7.6.6)

1. 选择“体积”菜单。

2. 使用 [单位] 选择换算时所需的单位。
3. 输入标准单位，然后查看换算后的值。
4. 按 [重设] 清除当前输入字段中的值，然后将光标定位在输入字段中。

速度



(功能表 7.6.7)

1. 选择“速度”菜单。
2. 使用 [单位] 选择换算时所需的单位。
3. 输入标准单位，然后查看换算后的值。
4. 按 [重设] 清除当前输入字段中的值，然后将光标定位在输入字段中。

世界时间







功能表 7.7

世界时间功能提供世界各地主要城市的时间信息。

使用  /  查看所需国家/地区或城市的时间。您可以使用右软键 [主页] 选择所需的城市作为基准。

语音备忘录

功能表 7.8

1. 按左软键 [选项] 在录音前显示选项弹出菜单。
2. 使用  /  移到所需的菜单项目，然后按 。
 - ▶ 质量：您可以从“超精细”、“精细”和“标准”中选择录音质量。
 - ▶ 长度：您可以将录音的持续时间设置为多媒体大小、30 秒或 1 分钟。size, 30 secs, or 1 min.
 - ▶ 新录制：选择此菜单以开始录制新文件。
 - ▶ 我的文件：在“我的文件”中打开“录音”文件夹。
3. 按  开始录音。开始录音后，录制时间将显示在 LCD 屏幕上。要取消录音，请按右软键 [取消]。
4. 录音结束之后，按  退出。录制的文件将自动保存在“我的文件”的“录音”文件夹中。
5. 如果目前没有录音，按  开始在新文件上录音。

如果目前没有录音，按右软键 [发送] 发送已录制的文件。

使用  /  从信息、电子邮件或蓝牙中选择一个，然后按 。

6. 录音完成后，按左软键选择不同的选项。
7. 使用  /  选择所需的菜单，然后按 。
 - ▶ 删除：选择此菜单以删除录制的文件。
 - ▶ 新录制：选择此菜单以开始新录音。
 - ▶ 发送：发送录制的文件。使用  /  从信息、电子邮件或蓝牙中选择一个，然后按 。
 - ▶ 声音主题：您可以将录制的文件设置为语音铃声、视频铃声、开机声音或关机声音。
 - ▶ 我的文件：在“我的文件”中打开“录音”文件夹。
8. 按右软键关闭子菜单弹出窗口。

电话本 [功能表 8]

添加

功能表 8.1

您可以注册新的联系人通讯信息。您可以输入新联系人的姓名、不同电话号码和电子邮件地址。您也可以将联系人分配给群组，包括图像或个人形象；为联系人分配特定铃声以及输入备忘录。其它可用字段包括：主页 URL、住宅地址、公司名称、职务和公司地址。根据内存使用情况，您可以输入和管理联系人通讯信息。

联系人列表

功能表 8.2

执行联系人通讯信息搜索功能。默认情况下，搜索操作按姓名执行。当前搜索方法和找到的结果显示在“搜索”窗口中。您可以向所选电话号码打电话或发送信息。可根据电话号码或群组信息执行联系人搜索。

群组

功能表 8.3

使用此菜单，您可以管理群组信息（存储在手机和 USIM 卡中的信息）。手机内存中有 4 个默认群组：朋友、家人、同事和同学。您可以添加、编辑和删除群组。

如果没有为某个号码指定铃声，则其来电铃声为所属群组所分配的铃声。


快速拨号

功能表 8.4

使用此菜单，您可以管理快速拨号。可在 2⁹ 间对快速拨号进行配置。您可以为特定联系人地址分配任何不超过 5 位数的快速拨号号码，可以为同一个联系人地址分配多个快速拨号。

服务号码

功能表 8.5

您可以查看由您的服务提供商分配的服务拨号号码 (SDN) (如果 USIM 卡支持)。此类号码包括紧急电话、查号台和语音邮件号码。选择服务号码后，按  呼叫服务。

本手机号码

功能表 8.6

允许在 USIM 卡中您的电话号码。您可以在 USIM 卡中保存正在使用的本机号码。

设置

(功能表 8.7)

查看电话本 (功能表 8.7.1)

选择要显示的联系人信息（从手机内存、SIM 卡内存或二者）。所有设置为预设设置。

显示图像/个人形象 (功能表 8.7.2)

选择是否要显示图像/个人形象。

全部复制

(功能表 8.7.3)

您可以将联系人从手机内存复制到 USIM 卡或从 USIM 卡复制到手机内存。您可以一次复制所有项目。

全部移动

(功能表 8.7.4)

您可以将联系人从手机内存移动到 USIM 卡或从 USIM 卡复制到手机内存。您可以一次移动所有项目。

清空电话本

(功能表 8.7.5)

清除所有联系人信息。您可以删除保存在手机内存或 USIM 卡中的所有联系人信息。

呼叫 [功能表 9]

仅当网络支持服务区内的主叫线路识别 (CLI) 时、您才能检查未接来电、已接来电和拨出电话。

屏幕上显示电话号码和姓名 (如果有) 以及通话日期和时间。您还可以查看通话计时和计费。

全部通话

功能表 9.1

此菜单允许您查看未接来电、已接来电、和拨出电话记录。您可以拨打电话或者发送信息到从通话记录中选定的号码中。您也可以将号码保存到电话本中。

已拨电话

功能表 9.2

使您能够查看拨出电话的记录、拨打电话、发送信息以及将号码保存到电话本中。

已接来电

功能表 9.3

使您能够查看来电记录、拨打电话、发送信息以及将号码保存到电话本中。

未接来电

功能表 9.4

使您能够查看未接来电记录、拨打电话、发送信息以及将号码保存到电话本中。

USIM 卡工具包 [功能表 *]

此菜单（菜单 *）根据 USIM 卡是否提供了 SAT 支持服务（如 USIM 卡应用程序工具包）而不同。

如果 USIM 卡支持 SAT 服务，此菜单将是 USIM 卡上存储的运营商特定服务的名称，例如，“特殊”。有关如何使用相关选项的信息，请参考上述情况中 USIM 卡提供的信息。

如果 USIM 卡不支持 SAT 服务，则此菜单将是“闹钟”。

有关“闹钟”菜单功能，请参阅第 59 页。

可视电话 [功能表 0]

使用此菜单，您可以拨打视频电话。

1. 输入您要拨打的号码。

- ▶ 您可以键入号码。
- ▶ 您可以使用左软键 [电话本] 从电话本中选择号码。
- ▶ 您可以通过按 **OK** [通话] 从通话记录中选择号码。

2. 按右软键 [视频电话] 拨打视频电话。

视频通话过程中

当您进行视频通话时，屏幕上将显示联系人的姓名和通话持续时间、联系人图像、音量指示符、视频控制面板和您的图像。

您可以通过按左软键 [选项] 来访问以下选项菜单。

- ▶ 麦克风开/关
- ▶ 扬声器开/关
- ▶ 蓝牙/耳机交谈（连接了蓝牙耳机时）
- ▶ 私人/公共模式

- ▶ 保持/恢复
- ▶ 捕获
- ▶ 查看发件人号码
- ▶ 设置
- ▶ 结束通话

视频来电


接收到视频电话时，将显示以下致电者信息。

- ▶ 图片/动画：显示来电图片、电话本中配置的图片或识别来电的预设动画。
- ▶ 致电者姓名和号码：显示致电者号码。如果该号码存储在电话本中，将显示该联系人的姓名。

来电图片和动画设置的使用顺序为：电话本、用于群组铃声的视频文件、用于情景模式的视频文件。

此外，可将声音设置为视频来电铃声。声音设置的使用顺序为：电话本、群组铃声和情景模式。

您可以通过按左软键 [接受] 以接受来电。

按右软键 [静音] 可使来电铃声静音。也可以通过长按手机左侧的  静音。

铃声静音后，按右软键 [拒绝] 拒接来电。

设置 [Menu #]

手机设置

功能表 #.1

情景模式

(功能表 #.1.1)

您可以根据情景模式选择来电铃声或振动、配置铃声的声音和音量、按键音以及音效。提供的情景模式包括：[标准]、[静音]、[仅振动]、[户外]、[耳机]、[自定义 1]、[自定义 2] 和 [自定义 3]。选择所需的情景模式，然后按 **OK** 激活情景模式。按左软键 [选项] 后，选择 [标准]、[户外]、[耳机]、[自定义 1]、[自定义 2] 和 [自定义 3] 情景模式的“编辑”菜单以更改配置。对于每种情景模式，提供的可供编辑的选项列表不同。

提示依据

此选项用于确定来电通知方式。您可以从下列选项进行选择：[响铃]、[振动]、[静音]、[响铃并振动]、[振动后响铃]、[最大响铃并振动]。

语音铃声

您可以为语音来电选择铃声。

视频铃声

您可以为视频来电选择铃声。

音量

选择铃声音量。

信息提示

您可以设置手机在收到信息后提示您的频率，直到您阅读该信息为止。

信息提示音

您可以从个人文件或默认文件中选择一个要在接收信息时播放的文件。

按键音

您可以设置要在按键时播放的按键音。

按键音量

您可以设置所选按键音的音量，有 7 个级别可供选择。

滑盖音

选择向上/向下滑动手机时发出的铃声。

确认提示音

您可以设置要在手机执行确认操作时播放的确认提示音。

开机声音

您可以设置开机时要播放的声音效果。

选择开机声音

您可以选择开机时要播放的文件。

关机声音

您可以设置关机时要播放的声音效果。

选择关机声音

您可以选择关机时要播放的文件。

日期和时间 (功能表 #.1.2)

尽管手机注册到网络时会自动配置当前时间，用户可以使用此菜单直接配置时间和日期。用户配置的时间仅在手机开机时有效。

时间设定 (功能表 #.1.2.1)

1. 从“时间和日期”列表中选择“时间”项，然后按 **OK**。

2. 使用导航键移到所需字段：“小时”、“分钟”或“AM”/“PM”字段。（当您选择“12 小时”作为“时间格式”时）
3. 使用数字键输入小时和分钟。
4. 使用 **<** / **>** 选择时间格式。
5. 下拉菜单，选择小时指示格式，即，关闭、布谷鸟报时或敲钟报时。
6. 按右软键 [完成] 使用指定值设置时间。

日期设定 (功能表 #.1.2.2)

1. 从“日期和时间”列表中选择“日期”项，然后按 **OK**。
2. 使用 **<** / **>** 选择日期格式。
3. 使用数字键输入日、月和年。
4. 按右软键 [完成] 使用指定值设置日期。

自动更新日期/时间 (功能表 #.1.2.3)

当“自动更新”设为“开”时，手机会根据当前时区自动更新时间 and 日期。如果选择了“确认首个”，那么在自动更新之前会先进行确认。

设置

夏令时 (功能表 #.1.2.4)

选择是否激活夏令时功能。您可以设置选定的当地城市的夏令时时差：1 小时或 2 小时。

语言 (功能表 #.1.3)


选择显示语言。您可以选择“自动”语言选项，将显示语言更改为 USIM 卡支持的语言。

安全设定 (功能表 #.1.4)

设置PIN码

如果此选项设为“开”，那么在您每次开机时，会要求您输入 PIN 码。

注意

- ▶ 在 PIN 码输入窗口中按  以返回上一步。
- ▶ 如果 3 次输入的 PIN 码均不正确将会导致 PIN 码失效。在这种情况下，您必须输入 PUK (PIN 解锁密码) 码，然后重新配置 PIN 码。

- ▶ 您可输入 PUK 码的最多次数为 10。（备注：如果您 10 次输入的 PUK 码均不正确，USIM 卡将锁定，必须更换。）
- ▶ 如果根据运营商设置无法禁用 PIN 码请求，那么您将无法选择此菜单项。

手机锁

您可以锁定手机。本手机提供了以下 4 个锁定功能。

开机时：开机时锁定手机。

如果更换 USIM 卡：如果更换了手机的 USIM 卡，将锁定手机。

立即：立即锁定手机。

无：停用锁定功能。

您需要输入安全码以确认所作的选择。

- ▶ 要解锁手机，您需要输入安全码。

更改密码

您可以更改 PIN 码、PIN2 码和安全密码。

PIN码

PIN 是 Personal Identification Number (个人识别码) 的缩写, 用于限制未认证用户的使用权限。

PIN 码更改过程

1. 从“更改密码”列表中选择“PIN 码”, 然后按 **OK**。
 2. 输入当前的 PIN 码, 然后按 **OK**。
 3. 输入新 PIN 码, 然后按 **OK**。
 4. 再次输入新 PIN 码, 然后按 **OK**。
- ▶ 如果再次输入的 PIN 码与步骤 3 中输入的 PIN 码不同, 请重新从步骤 3 开始执行更改过程。
5. 在正确更改 PIN 码之后, 屏幕上将显示“已更改”信息。如果在步骤 2 中输入的 PIN 码不正确, 请重新从步骤 2 开始执行更改过程, 剩余的输入尝试次数将按 1 递减。
 6. 在 PIN 码输入窗口中按 **C** 以返回上一步。

注意

- ▶ 如果在 PIN 码输入窗口中 3 次输入不正确的 PIN 码, 将使 PIN 码失效。在这种情况下, 您必须输入 PUK (PIN 解锁密码) 码, 然后重新配置 PIN 码。您可输入 PUK 码的最多次数为 10。(备注: 如果您 10 次输入的 PUK 码均不正确, USIM 卡将锁定, 必须更换。)


PIN2码

PIN2 是 Personal Identification Number 2 (个人识别码 2) 的缩写, 用于限制未认证用户的使用权限, 与 PIN 类似。PIN2 码的更改过程与 PIN 码的更改过程相同。如果 3 次输入的 PIN2 码均不正确也会导致 PIN2 码失效。在这种情况下, 您必须输入 PUK2 码才能重新使用 PIN2 码。您可输入 PUK2 码的最多次数为 10, 和 PUK1 码一样。如果 10 次输入的 PUK2 码均不正确也会导致 PIN2 码失效。

安全码

安全码用于更改手机密码。尝试输入安全码的最多次数限制与 PIN 码和 PIN2 码不同

键盘锁

如果选择“关”，仅在打开滑盖时激活键盘。如果选择“开”，您可以通过按手机左侧的  激活键盘。

省电

(功能表 #.1.5)

选择是否要激活省电模式。

内存状态

(功能表 #.1.6)

用户内存

此功能显示手机中用户内存的状态。由于此功能会扫描整个文件系统以进行统计，因此可能要几秒钟的时间。

用户剩余内存

此功能显示用户剩余内存的状态。常见内容是指文本信息、电话本、日历、任务和备忘录。它可以通过图示形式清楚地说明每个项目实际使用内存占总内存的百分比。

USIM 卡内存

此功能显示 USIM 卡用户内存的状态。

外部存储器

此功能显示外部存储卡用户内存的状态。此功能将显示已用内存和可用内存的统计数据。

格式化外部存储器

选择此选项以格式化外部存储器。

手机信息

(功能表 #.1.7)

此功能将显示手机的 USIM 卡电话号码、型号和软件版本。

恢复初始设定

(功能表 #.1.8)

清除内存

选择此选项清除内存。您必须输入安全码。

- ▶ 手机内容：删除所有下载的多媒体内容。
- ▶ 手机个人信息：删除个人信息，如收到的信息或电子邮件。

默认设置

选择此选项将手机重新设置为默认配置。您必须输入安全码。

显示设定

功能表 #.2

此菜单允许您自定义屏幕和菜单的整个图形界面的显示选项。

主屏

(功能表 #.2.1)

您可以设置要在主屏上显示的屏幕主题。

主屏

- ▶ 墙纸：您可以设置要在主屏上显示的图像。
- ▶ 显示项目：您可以选择要在屏幕上显示的项目：日历 + 时钟、日历、时钟、双时钟或不显示。
- ▶ 时钟类型：选择时钟的类型。
- ▶ 显示快捷方式图标：决定是否要显示快捷方式图标。

拨出电话

您可以选择要在拨打某号码时显示的图

像。

开机图像

您可以选择要在开机时显示的图像。

关机图像

您可以选择要在关机时显示的图像。

菜单样式

(功能表 #.2.2)

您可以选择所需的菜单样式：网格样式以及逐个样式。

字体

(功能表 #.2.3)

您可以使用 ◀ / ▶ 设置字体样式、拨号字体以及拨号字体颜色。

背景灯

(功能表 #.2.4)

您可以分别设置主屏和键盘的背景灯持续时间。

欢迎信息

(功能表 #.2.5)

选择“开”后，您可以撰写欢迎信息。

JAVA 设置

功能表 #.3

激活网络设定

1. 将光标移至您要激活的网络设定。
2. 按 **OK** 或从“选项”菜单中选择“激活”。

添加新的网络设定

1. 从“选项”菜单选择“新增”。需要配置以下项目。

服务名称	输入网络设定的帐户名。
连接方式	从指定的连接模式列表中选择。 (默认为使用代理的 TCP)
IP 地址	输入运营商提供的 WAP 网关 IP 地址。(例如, 195.115.025.129)
代理服务器端口	运营商提供的端口详细信息取决于“连接模式”。
接入点	从指定的接入点列表中选择。(有关添加或编辑新的接入点的详细信息, 请参阅第 91 页。)

2. 按右软键 [完成] 保存任何配置更改。

您可以通过从“选项”菜单选择“编辑”和“删除”以编辑或删除网络设定。

信息设置

功能表 #.4

有关详细信息, 请参阅第 49 页。

通话设置

功能表 #.5

通话计时

(功能表 #.5.1)

您可以按类型查看通话时间。按左软键 [选项] 选择部分初始化还是全部初始化。也可以按右软键 [清除] 初始化选定的通话时间类型。初始化要求您提供安全码。

可以使用以下计时方式:

- ▶ 最后通话: 以小时/分钟/秒为单位显示最近通话时间。
- ▶ 已接来电: 显示来电电话时间。
- ▶ 已拨电话: 显示拨出电话的通话时间。
- ▶ 全部通话: 显示总通话时间。

呼叫限制

(功能表 #.5.2)

为语音和视频通话提供了“呼叫限制”菜单。

菜单包括“语音电话”、“视频电话”和“全部停用”。“语音电话”和“视频电话”包括以下子菜单。

“呼叫限制”菜单包括：“所有拨出电话”、“拨打国际电话”、“国际漫游时拨打电话”、“所有来电”和“国际漫游时来电”子菜单。

“所有拨出电话”菜单限制拨打所有电话；“拨打国际电话”限制拨打国际电话；“国际漫游时拨打电话”限制拨打除本国 PLMN 以外的电话。“所有来电”拒接所有来电；“国际漫游时来电”拒接在漫游时收到的来电。

转接语音来电

可视电话

所有拨出电话

1. 选择 **OK** 后，手机即接受用户提供的限制密码，然后激活网络内的限制服务。此时，屏幕上将出现请求信息和

动画。网络应答后，操作结果将显示在屏幕上。

2. 如果选择“选项”菜单，则将激活“拨出电话”菜单。从最下面的菜单上的软菜单中选择选项菜单。此时将出现“停用”、“激活”、“全部停用”、“查看状态”和“更改密码”菜单。选择“激活”菜单从用户接收限制密码，然后激活网络内的限制服务。

“停用”菜单将在用户输入限制密码后停用限制服务。“全部停用”菜单将在用户输入限制密码后停用在网络内配置的所有限制服务。“查看状态”菜单允许用户查看当前网络配置。如果选择“查看状态”菜单，屏幕上将显示请求信息和动画。网络应答后，操作结果将显示在屏幕上。

“更改密码”菜单允许用户更改当前的限制密码。

国际

1. 选择 **OK** 后，操作过程与“拨出电话”菜单完全相同。

2. 选择 菜单后，它将激活并操作“国际电话”菜单。操作过程与“拨出电话”菜单完全相同。

国际漫游时拨打电话

1. 选择 **OK** 后，操作过程与“拨出电话”菜单完全相同。
2. 选择 菜单后，它将激活并操作“国际漫游时拨打电话”菜单。操作过程与“拨出电话”菜单完全相同。

所有来电

1. 选择 **OK** 后，操作过程与“拨出电话”菜单完全相同。
2. 选择 菜单后，它将激活并操作“来电”菜单。操作过程与“拨出电话”菜单完全相同。

国际漫游时来电

1. 选择 **OK** 后，操作过程与“拨出电话”菜单完全相同。
2. 选择 菜单后，它将激活并操作“国际漫游时来电”菜单。操作过程与“拨出电话”菜单完全相同。

固定拨号

(功能表 #.5.3)

- ▶ FDN 开/关：选择是否要激活 FDN。需要进行 PIN 码认证。
- ▶ FDN 列表：显示当前 FDN 列表。您可以编辑、添加或删除固定拨号号码。要编辑该列表，需要进行 PIN2 码认证。配置信息将保存在 USIM 卡中。当 FDN 要限制拨出电话时，将使用 USIM 卡中保存的信息。

数据音量

(功能表 #.5.4)

允许您查看发送、接收和传输所有数据的音量。（通过 TE 连接传输的数据音量不包括在内。）

按左软键 [选项] 选择部分初始化还是全部初始化。您也可以使用右软键 [清除] 初始化选定的音量类型。初始化要求您提供安全码。

通话费用

(功能表 #.5.5)

1. 此功能将显示“上一次通话”及“所有通话”的费用。

2. 要进行初始化，请按右软键 [清除]，然后输入 PIN2 码。
3. 您可以在“设置通话费用”中选择“单位”或“币种”。根据您的设置，通话过程中将显示通话费用（如果 USIM 卡和网络支持话费建议 (AOC)）。
4. 在“设置限制配置”中，选择“开”以配置费用限额。配置完费用限制后，如果通话费用达到该限额，用户将不能继续拨打电话。

转接

(功能表 #.5.6)

为语音和视频通话提供了“呼叫转接”菜单。

菜单包括“语音电话”、“视频电话”和“全部停用”。

转接语音来电

转接所有语音来电

线路忙时

无人接听时

转接所有语音来电

1. 选择“停用”菜单时删除向网络注册的呼叫转接号码。在等待网络处理结果的过程中，屏幕上将会出现请求信息和动画。网络应答后，操作结果将显示在屏幕上。
2. 选择“至其它电话号码”时屏幕上将出现一个对话框窗口，您可以直接在其中输入接受呼叫转接的电话号码。输入接受呼叫转接的电话号码，然后按 **OK**。在等待网络处理结果的过程中，屏幕上将会出现请求信息和动画。网络应答后，操作结果将显示在屏幕上。
3. 选择“最近转接号码列表”时使用选定号码执行转接注册。选择号码，然后按 **OK**。在等待网络处理结果的过程中，屏幕上将会出现请求信息和动画。网络应答后，操作结果将显示在屏幕上。
4. 选项菜单
在激活“所有语音电话”菜单后，如果选择菜单底部的“选项”菜单，屏幕上将显示“停用”、“激活”、“全部停用”、“查看状态”以及“清除列表”菜单。激活：

移至“设置”菜单以激活呼叫转接。“查看状态”菜单将显示网络设置。如果您选择此菜单，屏幕上将出现请求信息和动画。然后，在收到网络发送的信息之后，屏幕上将显示网络设置。选择右软菜单中的“状态”也会产生相同的结果。如果您选择“停用”菜单，用户确认后，在网络中注册的呼叫转接号码将被删除。如果选择“全部取消”菜单，在显示请求信息和动画后，屏幕上将显示操作结果。

“清除列表”菜单将删除所有转接号码列表。

可视电话

所有可视电话

1. 如果选择“停用”菜单，则将删除向网络注册的呼叫转接号码。在等待网络处理结果的过程中，屏幕上将会出现请求信息和动画。网络应答后，操作结果将显示在屏幕上。
2. 如果选择“至其它电话号码”，屏幕上将出现一个对话框窗口，您可以在其中输入接受呼叫转接的电话号码。

输入接受呼叫转接的电话号码，然后按 **OK**。在等待网络处理结果的过程中，屏幕上将会出现请求信息和动画。网络应答后，操作结果将显示在屏幕上。

3. 选择“最近转接号码列表”时使用选定号码执行转接注册。选择号码，然后按 **OK**。在等待网络处理结果的过程中，屏幕上将会出现请求信息和动画。网络应答后，操作结果将显示在屏幕上。

4. 选项菜单

在激活“所有视频电话”菜单后，如果选择菜单底部的“选项”菜单，屏幕上将显示“停用”、“激活”、“全部停用”、“查看状态”以及“清除列表”菜单。激活：移至“设置”菜单（前面的 1—4）以激活呼叫转接。“查看状态”菜单将显示网络设置。如果您选择此菜单，屏幕上将出现请求信息和动画。然后，在收到网络发送的信息之后，屏幕上将显示网络设置。选择右软菜单中的“状态”也会产生相同的结果。如果您选择“停用”菜单，用户确认

后，在网络中注册的呼叫转接号码将被删除。如果选择“全部取消”菜单，在显示请求信息和动画后，屏幕上将显示操作结果。“清除列表”菜单将删除所有转接号码列表。

线路忙时

1. 选择“停用”菜单时
它的操作过程与“所有语音电话”菜单完全相同。
2. 选择“至号码”时
它的操作过程与“所有语音电话”菜单完全相同。
3. 选择“最近转接号码列表”时
它的操作过程与“所有语音电话”菜单完全相同。
4. 选择“选项”菜单时
它将激活并操作“线路忙时”菜单。它的操作过程与“所有语音电话”菜单完全相同。

无人接听时

1. 选择“停用”菜单时
它的操作过程与“所有语音电话”菜单完全相同。

2. 选择“至号码”时
它的操作过程与“所有语音电话”菜单完全相同。
3. 选择“最近转接号码列表”时
它的操作过程与“所有语音电话”菜单完全相同。
4. 选择“选项”菜单时
激活并选择“无人接听时”菜单。除了用户可以在菜单列表的“设置等待时间”菜单中配置延迟时间外，它的操作过程与“所有语音电话”菜单完全相同。

无法接通时

1. 选择“停用”菜单时
它的操作过程与“所有语音电话”菜单完全相同。
2. 选择“至号码”时
它的操作过程与“所有语音电话”菜单完全相同。
3. 选择“最近转接号码列表”时
它的操作过程与“所有语音电话”菜单完全相同。

4. 选择“选项”菜单时

激活并操作“无法接通时”菜单。它的操作过程与“所有语音电话”菜单完全相同。

呼叫等待

(功能表 #.5.7)

- ▶ 启动：激活等待服务。如果选择此项目，屏幕上将显示请求信息和动画。网络应答后，操作结果将显示在屏幕上。
- ▶ 停用：停用呼叫等待服务。如果选择此项目，屏幕上将显示请求信息和动画。网络应答后，操作结果将显示在屏幕上。
- ▶ 查看状态：显示网络中已激活呼叫等待服务的群组项目。如果选择此项目，屏幕上将显示请求信息和动画。网络应答后，操作结果将显示在屏幕上。

语音邮件

(功能表 #.5.8)

您可以添加或修改语音邮件中心。

可视电话

(功能表 #.5.9)

您可以设置拨打/接收视频电话的屏幕显示。

- ▶ 显示个人图像：确定是否要显示个人图像。
- ▶ 选择静态图像：选择要显示的静态图像。
- ▶ 镜像：选择是否要激活镜像效果。
 - 打开：以与原图像翻转的形式显示图像。
 - 关闭：按原样显示图像。
- ▶ 我的图像大小：选择我的图像的显示大小。
- ▶ 我的图像位置：选择您的图像的显示位置。

常用设置

(功能表 #.5.0)

拒接来电

您可以设置是否要拒接来电。

1. 在“拒绝”菜单中选择“开”以激活拒接来电。此时将出现“拒接列表”菜单。

2. 在“拒接列表”菜单中设置所需的拒接来电选项。

- ▶ 所有来电：拒接所有来电。
- ▶ 联系人：拒接电话本中保存的号码的来电。
- ▶ 群组：您可以按存储在电话本中的群组指定拒接来电。
- ▶ 未注册：拒接所有未保存在电话本中的来电。

- ▶ 无来电显示：拒接没有 CLI 信息的来电。

发送号码

- ▶ 由网络设置：使用服务提供商确定的默认设置进行配置。
- ▶ 打开：配置为在拨出电话时发送我的电话号码。
- ▶ 关闭：配置为在拨出电话时不发送我的电话号码。

自动重拨

允许您在呼叫尝试失败时设置自动重拨功能。


接听模式

允许您设置应答方式。您可以选择：按发送键、滑开手机以及按任意键。

分钟提示

确定在开机状态下是否每隔 1 分钟响 1 分钟的提示音。

蓝牙接听模式

- ▶ 免提：连接蓝牙后，您可以使用蓝牙耳机接听电话。
- ▶ 手机：如果按手机上的  接听电话，您可以通过手机讲电话。如果按蓝牙耳机键接听电话，您可以使用蓝牙耳机讲电话。

这是初始接听模式。接听电话过程中，您可以从手机转到耳机，或从耳机转到手机。

电话本设置

功能表 #.6

有关详细信息，请参阅第 67 页。
(菜单 8.7)

连接

功能表 #.7

蓝牙

(功能表 #.7.1)

蓝牙连接

您的手机具有内置蓝牙无线技术，因此您可以将手机无线连接至其它蓝牙设备上，例如免提、电脑、PDA 或其它电话。

您可以通过无线蓝牙免提电话进行通话，或者通过手机无线上网。您也可以交换名片、日历项目和图片。

注意

- ▶ 建议将手机和与之联系的蓝牙设备保持在 10 米的范围内。如果您的手机与蓝牙设备间不存在固体对象，则连接质量会提高。

1. 开始

- 菜单 → #. 设置 → 7. 连接 →
1. 蓝牙 → 1. 配对设备

要使用蓝牙功能，您必须先将“蓝牙”设置为“打开”。

2. 配置蓝牙设置

- 菜单 → #. 设置 → 7. 连接 →
1. 蓝牙 → 2. 设置
- 使用蓝牙：要使用蓝牙功能，请将其设置为 [打开]。否则，将其设置为 [关闭]。
- 显示本机号码：将 [显示本机号码] 设置为 [全部显示]，以便其它设备在搜索蓝牙设备时可以检测到您的手机。如果您选择 [隐藏]，其它设备在搜索蓝牙设备时将无法检测到您的手机。
- 显示本机名称：您可以对您的手机出现在其它设备上的名称进行命名或重命名。只有在 [显示本机号码] 设置为 [全部显示] 时，您的手机名称才会显示在其它设备上。

注意

- ▶ 用户使用手机中的蓝牙设备时，不能保证手机安全。因此，建议在进行配置或设备配对后，将蓝牙可见性设为隐藏。对于没有进行设备配对而通过蓝牙传入的文件，您可以在检查发件人详细信息后选择接收或拒绝连接。

3. 配对设备

配对设备（与设备配对）

如果已经存在配对的蓝牙设备。

- 菜单 → #. 设置 → 7. 连接 →
 1. 蓝牙 → 1. 配对设备 → 选项 → 新增

如果不存在配对的蓝牙设备。

- 菜单 → #. 设置 → 7. 连接 →
 1. 蓝牙 → 1. 配对设备 → 添加

选项

- ▶ 新增：您可以使用此菜单将新的蓝牙设备与您的手机配对。
- ▶ 指定简称：您可以使用此菜单根据需要重命名配对的手机。
- ▶ 连接设备/断开设备连接
 1. 如果要打开与所选设备的连接，则选择“连接”。
 2. 如果要关闭与所选设备的连接，则选择“断开连接”。
- ▶ 删除：您可以使用此菜单删除配对的蓝牙设备。

- ▶ 全部删除：您可以使用此菜单删除所有配对的蓝牙设备。

<配对设备>

1. 要搜索蓝牙设备以配对，请按“添加”或“新增”。
2. 此时屏幕上将显示：正在搜索设备。将找到 10 米以内的蓝牙设备。
3. 如果找到蓝牙设备，这些设备将列在屏幕上。如果没有找到任何蓝牙设备，系统将询问您是否要重新搜索。
4. 配对过程

- 按 **OK**。此时屏幕上将出现一个窗口，要求输入您的密码。
- 在创建完密码（1 - 16 位）之后，对方设备的用户必须输入此密码才能配对。对方设备的用户必须提前知道密码，以便通过认证。

<删除设备>

1. 从配对设备屏幕中选择要删除的设备。

- 您可以通过按“删除”键或者选择“选项”→“删除”来删除设备。要删除所有配对设备，请选择“选项”→“全部删除”。

〈使用蓝牙传输数据〉

- 要将您手机上的数据传输到另一个蓝牙设备上，请先选择用于保存目标数据的应用程序。例如，要将“我的文件”总的文件发送至另一个设备，请选择“菜单”→6. 我的文件 → 1. 菜单 → 6. 我的文件 → 1. 图片 / 2. 声音 / 3. 视频 / 5. 蓝牙数据 / 6. 其它文件 / 7. 外部存储器 → 选择要传输的数据 → 发送 → 3. 蓝牙
- 正在传输数据

- 1) 此时将显示最后找到的设备。如果列表中并没有所需设备，请选择 [更多设备]。
- 2) 选择要通过屏幕上的设备向其传输数据的设备，然后按
- 3) 对于 [要求连接]，如果对方选择 [是]，数据将被传输出去。

〈使用蓝牙接收数据〉

菜单 → #. 设置 → 7. 连接 → 1. 蓝牙 → 1. 配对设备

如果另一方试图传输数据，[连接请求] 问题将出现在屏幕上。如果您选择 [是]，数据将传输到您的手机上。数据传输过程中，蓝牙图标会闪烁。

〈蓝牙数据存储文件夹〉

您可以通过选择“菜单”→6. 我的文件 → 5. “蓝牙数据”来检查收到的数据。

4. 设备

〈正在连接耳机〉

菜单 → #. 设置 → 7. 连接 → 1. 蓝牙

1. 按照“配对设备”部分中介绍的过程连接耳机。
2. 要使用耳机，请从注册设备中选择耳机，然后按“选项”键并且选择“3. 连接”。
3. 要检查选定的耳机是否连接成功，请按“选项”键。如果连接正确，屏幕上将出现“断开连接”。如果未连

接，屏幕上将出现“3. 连接”。

〈正在连接免提套件〉

1. 菜单 → #. 设置 → 7. 连接 →
 1. 蓝牙
2. 按照“配对设备”部分中介绍的过程连接免提套件。
3. 要使用免提套件，请从注册设备中选择免提套件，然后按“选项”键并且选择“3. 连接”。
4. 要检查免提套件是否连接成功，请按“选项”键。如果连接正确，屏幕上将出现“3. 断开连接”。如果未连接，屏幕上将出现“3. 连接”。

同步

(功能表 #.7.2)

(备注：此服务并非适用于所有国家/地区。有关详细信息，请与您的服务提供商联系。)

如果您的网络运营商支持同步服务，则此服务功能可以通过无线网络使手机中的数据与服务器上的数据（如电话本、日历和任务）保持同步。

连接

1. 选择“连接”项，然后按 **OK** 。
2. 使用所选的服务器情景模式连接至服务器。当执行同步时，屏幕上会显示同步动画。

记录

选择“记录”项，然后按 **OK** 查看执行的最近一个同步操作的记录。

服务器同步中心

1. 选择“服务器同步中心”项，然后按 **OK** 。
2. 此菜单允许您配置同步服务器的网络设定。
 - ▶ 网络设定名称：输入网络设定的名称。
 - ▶ 主机地址：与您的服务提供商联系。
 - ▶ 代理 IP 地址：输入 WAP 网关地址和端口号。
 - ▶ 用户名：输入同步服务器的用户名。

- ▶ 密码：输入您的密码。
- ▶ 电话本：选择是否要同步电话本。
- ▶ 联系人名称：输入服务器访问的联系人数据库名称。
- ▶ 日历：选择是否要同步日历。
- ▶ 日历名称：输入服务器访问的日历数据库名称。
- ▶ 任务：选择是否要同步任务。
- ▶ 任务名称：输入服务器访问的任务数据库名称。
- ▶ 同步类型：选择以下同步类型。

- 标准

要求手机和服务器交换有关修改后数据的信息。

- 备份

手机会将其数据库中的所有数据发送至服务器。然后，服务器将用手机发送给它的数据替换目标数据库中的所有数据。也就是说，手机数据将覆盖服务器数据库中的所有数据。

- 恢复

服务器会将其数据库中的所有数据发送至手机。然后，手机将用服务器发送给它的数据替换目标数据库中的所有数据。也就是说，服务器数据将覆盖手机数据库中的所有数据。

- ▶ 接入点：选择用于数据连接的接入点。

网络

(功能表 #.7.3)

网络选择

选择“自动”还是“手动”。

- ▶ 自动：此功能可自动搜索网络并向网络注册手机。为了得到最佳的服务和质量，建议选择此设置。
- ▶ 手动：所有当前 2G (GSM) 和 3G (UMTS) 网络将会显示在屏幕上，您可以从中选择一个注册。如果网络注册失败，则屏幕上会重新列出当前所有可用的网络，您可以选择另外一个进行注册。成功注册网络后，如果手机的服务状态为无服务或限制服务，您

将在待机屏幕上看到“手动模式”。并且，您会看到一个弹出窗口，可用于更改网络选择模式。如果选择“是”，您将看到“网络”菜单。您可以重新选择网络。

网络模式

您可以在“选择网络”菜单中设置网络类型，以搜索何时搜索网络。

- ▶ 自动：搜索所有可连接网络。
- ▶ UMTS：仅搜索支持 3G 的网络。
- ▶ GSM 900/1800：仅搜索支持 GSM 900/1800 频段的网络。
- ▶ GSM 1900：仅搜索支持 GSM 1900 频段的网络。

首选列表

如果自动搜索网络，您可以添加要连接的首选网络。以下选项可用：

- ▶ 新增：您可以使用以下选项添加新网络。
 - 搜索：您可以从存储在手机中的网络列表中选择其一。

- 输入新网络：您可以输入国家代码 (MCC) 和网络代码 (MNC) 以添加。设置完成后，请按“完成”键。

- ▶ 删除：删除选定的网络。
- ▶ 编辑：您可以修改选定网络的信息。
- ▶ 上移：您可以向上移动选定的网络。
- ▶ 下移：您可以向下移动选定的网络。

接入点

(功能表 #.7.4)

此菜单将显示接入点列表。您可以使用“选项”菜单新建、删除或编辑网络设定。但是，根据国家/地区不同，您可能无法删除或编辑默认配置。

您可以通过选择右软键来编辑以下配置项目。

连接标题	接入点网络设定名称。
载体	从列表中选择载体。 (默认为 UMTS。)
认证	从列表中选择认证。 (默认为“不认证”)
用户名	信息由服务提供商提供。
密码	信息由服务提供商提供。
APN	访问网络的 APN 名称。信息由服务提供商提供。

设置

- ▶ 按“完成”键保存任何配置更改。

浏览器设置

(功能表 #.7.5)

网络设定

按 **OK** 选择相应的网络设定。这将网络设定以启动浏览器。

安全

如果用户按“证书”，将显示证书信息。用户可以通过按“清除会话”清除安全会话。

证书

如果有存储的话，在这里还可以找到 WTLS/TLS 需要的根证书列表。用户可以查看列表中的证书。

清除会话

使用此选项可清除安全 (WTLS/ TLS) 会话数据。要新建安全会话，应首先清除会话数据。

字符编码

将浏览器默认字符集设为以下之一。

- ▶ 自动、英语 (ASCII)、英语 (ISO); 英语 (LATIN)、Unicode (UCS2 BE); Unicode (UCS2 LE), Unicode (UCS2 Auto); Unicode (UTF-16 BE), Unicode (UTF-16 LE); Unicode (UTF-16 Auto), Unicode (UTF-8), Chinese (BIG5)。

滚动控制

允许您通过选择要滚动的行数来设置滚动速度。

从“小” (1 行)、“中” (2 行)、“大” (3 行) 中选择。

显示图像

允许您在浏览过程中启用或禁用图像显示。

注意

- ▶ 启用此功能将延迟图像显示，直到传输完成为止。禁用此功能将阻止浏览器从服务器下载图像，以实现更快的传输。

缓存

启用“缓存”将允许您将访问过的页面保存到手机上。一旦页面存储于缓存中，那么在您以后浏览该页面时，其加载速度将大大提高。

Cookie

启用 Cookie 将允许您保存发自服务器的 cookie。禁用此功能将阻止 cookie 存储到您的手机中。

JavaScript

选择“开”/“关”。

恢复出厂设定

选择此选项将手机重新设置为默认配置。

恢复出厂设定 (功能表 #.7.6)

您可以设置不同的网络设定以播放流媒体内容。

拨号网络 (功能表 #.7.7)

您可以将您的手机与各种电脑连接和数据通信应用程序一起使用。选择用于数据连接的 USB 和蓝牙。

附件

我们为你的手机准备了多种附件。您可以根据个人的通信要求来选择合适的附件。

旅行用适配器

此充电器允许您在离开家或公司的时候可以对电池进行充电。



标准电池



数据套件/CD

您可以将手机与PC相连、进行数据交换。



免提式耳麦与音乐播放器控制器组合

立体声耳机控制器：

控制器：接听与结束键、音乐播放器控制、音量控制、保持按钮和麦克风。

连接耳机与控制器后，将控制器的一端插入手机左侧的耳机插孔。



注意

- ▶ 确保使用正规的LG配件。
- ▶ 仿冒品或替代品及非原厂配件可能会让您丧失保修权益。
- ▶ 各个地区的配件可能不同；如有任何疑问、请与我们的地区服务公司或代理查证核实。

技术数据

常规

产品型号: KU800

系统: GSM900/DCS1800/PCS 1900,
WCDMA 2100

净重: 67.5g (不含电池)

环境温度

最高: +55° C

最低: -10° C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / GSM 1800 / GSM 1900 / W-CDMA Terminal Equipment

Model Name

KJ800

Trade Name

LG

CE 0889

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.5.1, ETSI EN 301 489-07 V1.2.1
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.2.1
ETSI TS 151 010-1 V5.9.0 specified by ETSI EN 301 511 V9.0.2
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-2 V2.2.1
ETSI EN 301 908-1 V2.2.1, ETSI EN 300 328 V1.4.1
EN 50360:2001; EN 50361:2001
EN 60950 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog, Kim / Director 19.July. 2006

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokdm @ lge.com


Signature of representative

| KU800 User Guide |

- English

This document is the user guide for the LG KU800 3G Video Mobile Phone. All rights for this document are reserved by LG Electronics. Copying, modifying and distributing this document without the consent of LG Electronics are prohibited.



Table of Contents

Introduction	5	General Functions	26	Internet	34
For Your Safety	6	Making and answering calls		Homepage	
Guidelines for Safe and Efficient Use	7	Entering text	28	Enter URL	
KU800 Features	12	Changing the text input mode	29	Enter address	
Parts of the phone		Using the T9 Modes		Recent pages	
How to Use Touch Keys	16	Using the ABC Mode	30	Bookmarks	
Getting Started	18	Using the 123 (Number) mode	31	Saved pages	35
Installing the USIM card and battery		Using the symbol mode		Browser settings	
Charging the Battery	19	Overview of Menu Functions	32	Profiles	
Disconnecting the charger	20	Entertainment Games & Applications	33	Security	
How to use a microSD memory card	21	More games		Character encoding	
Turning the handset on/off	22	Java settings		Scrolling control	
Access codes	23			Show image	36
Display information	24			Cache	
				Cookies	
				JavaScript	
				Reset settings	
				Music	37
				Now playing	
				All tracks	
				Playlists	


Camera	38	My Files	58	Organiser & Tools	63
Camera		Pictures		Alarms	
Video recorder	41	Sounds	59	Calendar	
Messaging	44	Videos		Tasks	65
Create new		Game & Applications	61	Memo	66
Message		Bluetooth data		Calculator	
E-Mail	45	Other files	62	Converter	67
Inbox	47	External memory		Currency	
Drafts	48			Surface	
Outbox				Length	
Sent messages	49			Weight	68
E-Mail				Temperature	
Templates	51			Volume	
Text templates				Velocity	
Multimedia templates				World time	69
Messaging settings				Voice recorder	
SMS					
MMS	52				
E-Mail	53				
Info. service	55				
Service message	56				

Table of Contents

Contacts	71	Video call	75	Call barring	85
Add new		During a video call		Fixed dial numbers	87
Contacts list		Incoming video call		Data volume	
Groups				Call costs	
Speed dials				Diverts	88
Service dial numbers				Call waiting	91
Own number	72			Voice mail	
Settings		Settings	77	Video call	
View contacts from		Phone settings		Common settings	92
Show image/avatar		Profile		Contact settings	93
Copy all		Date & time	78	Connectivity	
Move all		Language	79	Bluetooth	
Clear contacts		Security		Synchronisation	97
		Power save	81	Network	99
		Memory status		Access points	100
		Handset Information	82	Browser settings	
		Reset settings		Streaming	102
		Display settings	83	Dial-up network	
Calls	73	Main display			
All calls		Menu style			
Dialled calls		Font			
Received calls		Backlight			
Missed calls		Welcome message			
		Java settings	84	Accessories	103
USIM Tool Kit	74	Messaging settings		Technical data	104
		Call settings		Index	105
		Call durations			

Introduction

Congratulations on your purchase of the advanced and compact KU800 3G video mobile phone, designed to operate with the latest digital mobile communication technology.

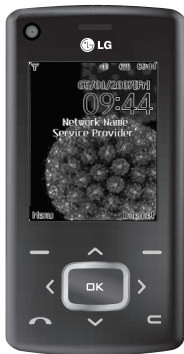

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Use of phone cases with magnetic locks with slide type phones has caused problems such as loss of network signal and phones powering off.

For Your Safety

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

WARNING!

- *Mobile Phones must be switched off at all times in aircrafts.*
- *Do not hold the phone in your hand while driving.*
- *Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.*
- *For your safety, use ONLY specified ORIGINAL batteries and chargers.*
- *Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.*
- *Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.*

CAUTION!

- *Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.*
- *Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.*
- *Only use ORIGINAL accessories to avoid damage to your phone.*
- *All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.*
- *Batteries should be disposed of in accordance with relevant legislation.*
- *Do not dismantle the phone or battery.*

Guidelines for Safe and Efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Certification information (SAR)

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device. Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person. The highest SAR value for this device when tested for use at the ear is 0.418 W/kg.

Guidelines for Safe and Efficient Use

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed. The highest SAR value for this device when tested for use at the body is 0.802 W/kg.

* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

For SAR information in other regions please look under product information at www.lgmobile.com.

Product care and maintenance

WARNING!

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's, radios or personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.

- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- ▶ Please remove the data cable before powering on the handset.

Efficient phone operation

To enjoy optimum performance with minimum power consumption please.

- ▶ Do not hold the antenna when the phone is in use. If you hold it, it can affect call quality, it may also cause the phone to operate at a higher power level than needed and shorten talk and standby times.

Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.

Guidelines for Safe and Efficient Use

- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst outside and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

Damage to your hearing can occur if you are

exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.


Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

KU800 Features

Parts of the phone

Open view

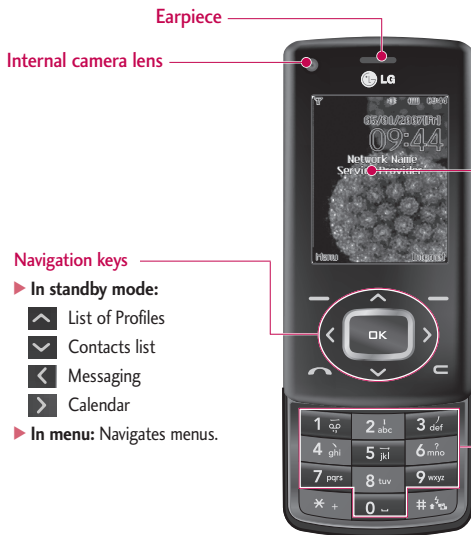

Navigation keys

▶ In standby mode:

- ▶ List of Profiles
- ▶ Contacts list
- ▶ Messaging
- ▶ Calendar


▶ In menu: Navigates menus.

LCD screen

- ▶ **Top:** Icons showing signal strength, battery level and various other functions
- ▶ **Bottom:** Soft key indications


Alpha numeric keys

- ▶ **In standby mode:** Input numbers to dial. Hold down:
 - ▶ **0** for international calls.
 - ▶ **1** to dial voice mail centre.
 - ▶ **2** to **9** for speed dials.
- ▶ **In editing mode:** Enter numbers & characters.

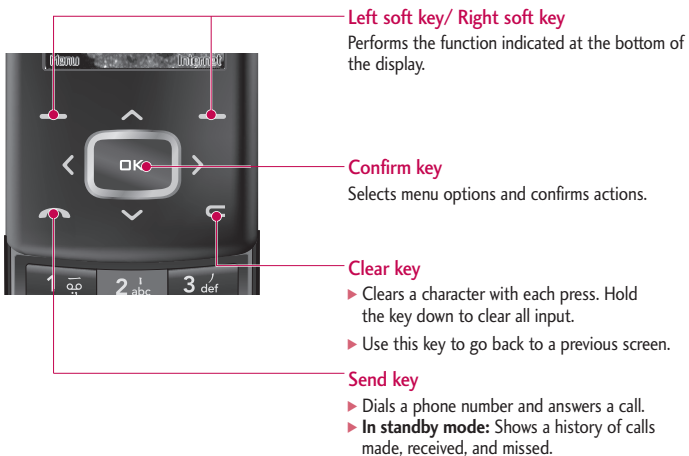


KU800 Features

Left side view

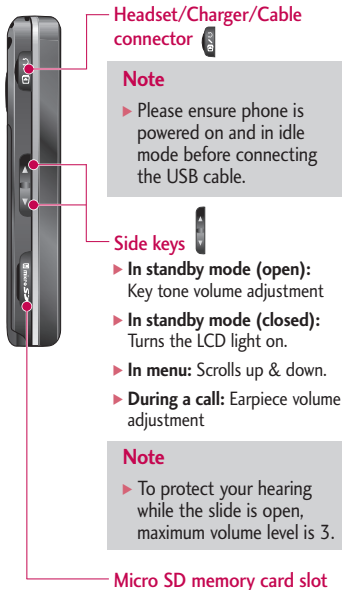

Right side view

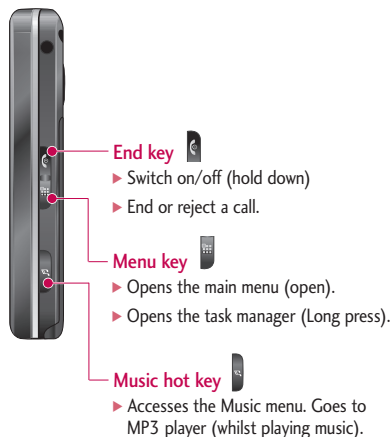

Rear view



How to Use Touch Keys

- ▶ This product's keys on the slide are touch keys.
- ▶ Be sure to read “Cautions for Touch Keys” before using touch keys.

Cautions for Touch Keys

1. Make sure your hands are clean and dry.

- Remove all moisture from the surface of your hands or the touch keys in a humid environment.



Touch key shortcut image

Note: You can enable this feature in the display settings menu [Menu #.2.1.1].

Touch keypad

2. You do not need to press hard on the touch keys to make them work normally.

Do not subject the product to severe impact, as this may damage the touch key sensors.

3. Use the **tip** of your finger to press exactly on the touch key you want, being careful not to touch the keys for other functions.

4. When both the home screen and touch key lights are off, pressing a touch key will not turn on the home screen light. Press **⏻** and the home screen light will turn back on(touch keys do not work when the touch key lights are off).

5. If the slide is closed and the **Touch Protection function** is on, during calls the **Touch key Lock** function is automatically enabled. (For details, see “Touch Key Status When Using Mobile Phone.”)

6. Touch keys may not work normally if a mobile phone case or plastic cover is covering them. Also, touch keys may not work normally if you are wearing gloves.
7. Keep metal and other conductive materials away from the surface of the touch keys, as contact with them may result in an error.

Touch Key Status When Using Mobile Phone


When the slide is closed, to prevent indiscreet action of the touch keys whilst using the phone or during calls, the **Touch Protection** function is automatically enabled. (In this case, the touch keys will not work even if they are pressed)

1. When slide is closed

- When the slide is closed, the Touch Protection function is automatically enabled. (Opening the slide will automatically disable it.)
- To disable Touch Protection when the slide is closed, press the volume key twice.

- After disabling Touch Protection, if there is no key action for a certain duration (3 seconds), the Touch Protection function is enabled again.

2. During calls

- During calls, regardless of slide status, the Touch Protection function is automatically enabled.
- To disable the Touch Protection, press any key except .
- After disabling the Touch key Lock, if there is no key action for a certain duration (3 seconds), the Touch Protection function is enabled again.

Note

- ▶ For user convenience, the touch key image with the functions of each touch key is shown on the home screen when purchasing products.

Getting Started

Installing the USIM card and battery

1. Installing the USIM card.

Your USIM card contains your phone number, service details and contacts and must be inserted into your handset.

If your USIM card is removed then your handset becomes unusable (except for emergency calls) until a valid one is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your USIM card. Slide the USIM card into the USIM card holder. Make sure that the USIM card is properly inserted and the gold contact area on the card is facing downwards. To remove the USIM card, press down lightly and pull it in the reverse direction.



To insert the USIM card



To remove the USIM card

Note

▶ The metal contact of the USIM card can easily be damaged by scratches. Pay special attention to the USIM card while handling. Follow the instructions supplied with the USIM card.

2. Installing the battery.

Slide the battery upwards until it snaps back into place.



To remove the battery.

Turn the power off. (If the power is left on, there is a chance you could lose the stored telephone numbers and messages.)

Press and hold down the battery release button and slide the battery down.




Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.



1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the left side of the phone until it clicks into place.
2. Connect the other end of the travel adapter to the mains socket.



Note

► Only use the charger included in the box.

Getting Started

3. The moving bars on the battery icon will stop after charging is complete.
4. Ensure the battery is fully charged before using the phone for the first time.

CAUTION!

- Do not force the connector as this may damage the phone and/or the travel adapter.
- If you use the battery pack charger when abroad, use an attachment plug adaptor for the proper configuration.
- Do not remove your battery or the USIM card while charging.

WARNING!

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery.
This may cause a fire.

Disconnecting the charger

Disconnect the travel adapter from the phone as shown in the diagram below.



How to use a microSD memory card



<MicroSD memory card>

<How to insert a microSD memory card>

1. Turn the phone off. Inserting or removing the microSD when the phone is on may damage the files stored in the memory card.
2. Lift the plastic cover which protects the microSD slot.



3. Insert the memory card into the slot. The gold contacts must be kept on the back of the microSD. Don't push the microSD too much. If it doesn't go into the slot easily, you may be trying to insert it in the wrong way or there could be a foreign object in the slot.
4. Once inserted, push the memory card until you hear a **Click**, meaning that the microSD has been correctly engaged.



5. Close the plastic slot protection.
6. To remove the memory card, turn the phone off, open the slot protection and push the microSD to unlock it. Carefully extract the memory card.

Getting Started

Attention:

- ▶ Avoid using the Flash Memory Card when the battery is low.
- ▶ When writing to the card, wait for the operation to complete before removing the card.
- ▶ The card is designed to fit easily into the system one way only.
- ▶ Do not bend the card or force it into the slot.
- ▶ Do not insert any memory cards other than those made by microSD.
- ▶ If the microSD has been formatted using FAT32, format the microSD using FAT16 again.

For more information on the microSD, please refer to the memory card instruction manual.

Memory card formatting

Before you start to use the memory card you have to format it. After you insert the memory card, select **Menu > Settings > Phone settings > Memory status > Format external memory**, then press **OK**. This operation should only be done when you

insert the memory card for the first time. During formatting various folders will be created for different data types.

Turning the handset on/off

Turning your handset on

Ensure that your USIM card is in your handset and the battery is charged. Press and hold **Power** until the power comes on. Enter the USIM PIN code that was supplied with your USIM card if the **PIN code request** is set to **On**. (Note: Please refer to page 79) After a few seconds you will be registered on the network.

Turning your handset off

Press and hold **Power** until the power goes off. There may be a few seconds delay while the handset powers down. Do not turn the handset on again during this time.

Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except the PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu #.1.4.3].

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your USIM card against unauthorised use. The PIN code is usually supplied with the USIM card. When the **PIN code request** is set to **On**, your phone will request the PIN code every time it is switched on. When the **PIN code request** is set to **Off**, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some USIM cards, is required to access functions such as **Fixed dial number**. These functions are only available if supported by your USIM card.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to unblock a blocked PIN code. The PUK code may be supplied with the USIM card. If not, contact your network operator's customer service department for the code. If you lose the code, contact your network operator's customer service department.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some USIM cards, is required to unblock a blocked PIN2 code. If you lose the code, contact your network operator's customer service department.


Security code (4 to 8 digits)

The security code prevents unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to restore the handset to the factory settings.

Getting Started

Display information



No USIM idle screen

This is the initial screen of the phone that appears when there is no USIM card installed in the phone, or the installed USIM card is invalid. In this screen, users can only make emergency calls, and turn the phone off. To turn the phone off, press and hold down  for a few seconds.

Screen structure

If there is no USIM card installed, an animation telling you to insert a USIM card appears. If the USIM card inserted into the phone is invalid, an animation telling you that the USIM card is locked appears.

Emergency call function

The right soft key is represented by “Emergency” on the screen. Press the right soft key and then press  to make an emergency call or dial your emergency number using the number keys, and then press  to make an emergency call.

Idle screen

The idle screen appears when you have installed a proper USIM card and turned the phone on.


Screen structure

Idle screen consists of the operator’s name, indicators, date and time on a background image. You can change the wallpaper in the **Display settings** menu.

Numbering screen

The numbering screen appears when a number key is pressed in the idle screen.


Screen structure

The numbering screen consists of status indicators, dialled number and soft menu. Status indicators are the same as those of the idle screen. You can change the size and colour of the dialling font in the **Display settings** menu. You can make a call while dialling a phone number by pressing .

Soft key

You can use the soft keys for several functions while dialling a number. Using the left soft key, you can make a video call, send a message to the number, save the number to Contacts.

Handset lock screen

When the **Handset lock** function is selected, you can only make an emergency call, release the lock, and turn off the phone in this screen. As always, you can turn the phone off by pressing and holding  for a few seconds.

Screen structure

The screen structure of the Handset lock screen is the same as that of the idle screen, except that the lock message appears instead of the idle screen.

Emergency call function

You can make an emergency call using the right soft key. As with the **No USIM idle screen**, only emergency numbers can be dialled.

Unlock function

If you press the left soft key, a popup screen appears asking you to input the Security code to unlock the phone. The Security code is configured in the **Change codes** (#. Settings > 1. Phone settings > 4. Security > 3. Change codes). If you key in an incorrect Security Code, the phone will remain in **Handset lock** status. If you key in the correct Security code, the phone will be unlocked, and the idle screen will be displayed. If you have turned the phone off in the **Handset lock** status, you will find the phone remains in **Handset lock** status when you turn it on.





Barring password

This service obstructs calling service in some conditions. This condition can be edited using the **Call barring** feature (#. Settings > 5. Call settings > 2. Call barring). The barring password is required when you use the call barring function. The password is obtained from your network operator's customer service when you subscribe to this service. While this service is activated, the caller will hear the information message that the call is not connected because of the call barring.


General Functions

Making and answering calls





Making a voice call

1. Enter the number including the full area code.
 - ▶ To delete a digit press .
 - To delete all digits press and hold .
2. Press  to make the call.
3. Press  to finish the call, or close the handset.

Note



- ▶ To activate the speakerphone during a call, activate the touch keys and press .

Making a call from the call logs

1. In standby mode, press  and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using  / .
3. Press  to call the number.


Making a video call

You can make a video call in a 3G covered service area. If the called user has a 3G video phone in a 3G covered service area, the call will be established. You can also answer a video call for video incoming call. To make/answer a video call, do the following.

1. Input the phone number using the keypad, or select the phone number from the calls made/received lists.
 - ▶ To correct mistakes, press  briefly to delete the last number, or press and hold  to delete all numbers.
2. If you do not want to use the speakerphone, ensure you have the headset plugged in.
3. To start the video function, press the left soft key [Options] and select **Make video call**.
 - ▶ You will be notified that you will need to close other applications to make the video call.




Note

► The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.



- Adjust the camera position if necessary.
- Press  to finish the call, or close the handset.

Making a voice/video call from Contacts



It is easy to call anyone whose number you have stored in your Contacts.

- Press  to access the contacts list.
- Scroll to the contact to make a call.
- Press  to make a voice call. Press the left soft key and select **Make video call** to make a video call.
- Press  to finish the call.

Making international calls

- Press and hold  for the international prefix. The '+' character prefixes the international access code.
- Enter the country code, area code, and the phone number.
- Press .

Adjusting the volume

During a call, if you want to adjust the earpiece volume, use  on the left side of the phone. In idle mode, you can adjust the key volume using .





Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Contacts) is displayed.


General Functions

1. Open the slider to answer an incoming call.


Note

- ▶ To reject an incoming call, press  or the right soft key once/twice depends on profile selection.
 - ▶ If you set **Answer mode** as **Press send key** (Menu #.5.0.4), you can answer the call by pressing  after opening the slider.
 - ▶ If the answer mode is set to Press any key, any key will answer a call except for .
2. End the call by closing the handset or pressing .


Note

- ▶ You can answer a call while using the Contacts or other menu features.
- ▶ When the compatible headset is connected, you can also answer a call using the headset key, as well as using the phone. To reject an incoming call, press .
- ▶ You can mute the ringtone when a call comes in by pressing and holding the volume down side key.

Shortcut to activate vibrate mode

You can activate the vibrate only mode by pressing and holding down  after opening the phone.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving close to a window may improve reception.

Entering text

You can enter alphanumeric characters using the keypad.

For example, storing names in Contacts, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

The following text input methods are available with the handset.


T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.


ABC mode

This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)



Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press  until 123 mode is displayed.

Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the LCD screen.
2. Press  to cycle between T9Abc, T9abc, Abc, abc and 123.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the handset begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing  to . Press one key per letter.

General Functions

- ▶ The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
- ▶ If the word is still incorrect after typing completely, press ***->** once or more to scroll through the other word options.

Example

Press **4** **6** **3** to type **GOOD**.

Press ***->** to get **Home**.

- ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.
2. Enter the whole word before editing or deleting any keystrokes.
 3. Complete each word with a space by pressing **0-**.

To delete letters, press **←**. Press and hold down **←** to erase entire words.

Using the ABC Mode

Use **2-** to **9=** to enter your text.

1. Press the key labelled with the required letter:
 - ▶ Once for the first letter.
 - ▶ Twice for the second letter.
 - ▶ And so on.
2. To insert a space, press **0-** once. To delete letters, press **←**. Press and hold down **←** to clear the display.

Refer to the following table for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Lower case	Upper case
1	.,?!:@1/()_--;,'	.,?!:@1/()_--;,'
2	abc2ääääääæç	ABC2ÄÄÄÄÆÇ
3	def3èéêë	DEF3ÈÉÊË
4	ghi4ïíî	GHI4ÏÍÎ
5	jk l 5 £	J K L 5 £
6	mno6ñóóóóøœ	MNO6ÑÓÓÓØŒ
7	p q r s 7 ß ş	P Q R S 7 ß Ş
8	t u v 8 ù ú û ü	T U V 8 ù Ú Û Ü
9	w x y z 9	W X Y Z 9
0	Space, 0	Space, 0

Note

- ▶ The characters assigned to the keys and their order of appearance depends on the language selected using the option **Input method**. The table above provides the characters set for English language.

Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a message (a telephone number, for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the symbol mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options > Insert > Symbol**. Use the navigation and numeric keys to select the desired symbol and press .

Overview of Menu Functions

You can launch a menu by pressing **OK** in the idle screen. Move to the desired item and press **OK** to go into the sub menu.

From the main menu you can also go into a submenu by directly pressing the corresponding numeric key as follows. The main menu consists of the following top menu and sub menus.

1. Entertainment

- 1.1 Games & Applications
- 1.2 More games
- 1.3 Java settings

2. Internet

- 2.1 Homepage
- 2.2 Enter URL
- 2.3 Bookmarks
- 2.4 Saved pages
- 2.5 Browser settings

3. Music

- 3.1 Now playing
- 3.2 All tracks
- 3.3 Playlists

4. Camera

- 4.1 Camera
- 4.2 Video recorder

5. Messaging

- 5.1 Create new
- 5.2 Inbox
- 5.3 Drafts
- 5.4 Outbox
- 5.5 Sent messages
- 5.6 E-Mail
- 5.7 Templates
- 5.8 Messaging settings

6. My Files

- 6.1 Pictures
- 6.2 Sounds
- 6.3 Videos
- 6.4 Games & Applications
- 6.5 Bluetooth data
- 6.6 Other files
- 6.7 External memory

7. Organiser & Tools

- 7.1 Alarms
- 7.2 Calendar
- 7.3 Tasks
- 7.4 Memo
- 7.5 Calculator
- 7.6 Converter
- 7.7 World time
- 7.8 Voice recorder
- 7.9 Calendar Settings

8. Contacts

- 8.1 Add new
- 8.2 Contacts list
- 8.3 Groups
- 8.4 Speed dials
- 8.5 Service dial numbers
- 8.6 Own number
- 8.7 Settings

9. Calls

- 9.1 All calls
- 9.2 Dialed calls
- 9.3 Received calls
- 9.4 Missed calls

*. USIM Tool Kit /Alarms(if SAT not supported by USIM)

0. Video Call

#. Settings

- #.1 Phone settings
- #.2 Display settings
- #.3 Java settings
- #.4 Messaging settings
- #.5 Call settings
- #.6 Contact settings
- #.7 Connectivity

Entertainment [Menu 1]

Games & Applications

Menu 1.1

You can easily execute some applications by selecting this menu. All the games and applications in “**Games & Application**” folder are Java applications(MIDlets). The downloaded applications from the portal site will be stored in the “Games & Application” folder by default.

More games

Menu 1.2

You can download an application through this link. Please note that additional costs may be incurred when using online services.

Java settings

Menu 1.3

Activating a profile

1. Move the cursor to the profile which you would like to activate.
2. Press **OK** or select **Activate** from the **Options** menu.

Adding a new profile

1. Select **Add new** from the **Options** menu.
The following items need to be configured.

Service name	Enter an account name for the profile.
Connection mode	Choose from the given list of connection modes. (Default is TCP with Proxy)
IP address	Enter the WAP Gateway IP address provided by the operator. (e.g. 195. 115. 025. 129)
Proxy server port	Port details are provided by the operator, depending upon the Connection mode.
Access point	Choose from the given list of access points. (For more details on adding or editing a new access point, refer to page 100.)

2. Press the right soft key [Done] to save any configuration changes.

You can edit or delete a profile by selecting **Edit** and **Delete** from **Options** menu.

Internet [Menu 2]

Homepage

Menu 2.1

You can launch the web browser and access the homepage of the web service.

- ▶ You can also directly access Internet by pressing the right soft key in idle mode.



Enter URL

Menu 2.2

Enter address

(Menu 2.2.1)

You can manually enter a URL address and access the associated web page.

- ▶ To enter a symbol, press  or the right soft key [Symbol] to display the Symbol table.
- ▶ To switch input mode, press .

Recent pages

(Menu 2.2.2)

Shows the recently-browsed pages.

Bookmarks


Menu 2.3

You can store frequently accessed or favourite URLs/Pages. **Open, Send, Add new, Edit, Mark/Unmark** or **Delete** operations can be performed on **Bookmarks**. Several preconfigured URLs are stored as bookmarks.

Adding a new bookmark

1. Press the right soft key [Add].
2. Enter the title and associated URL information.
3. Press the right soft key [Done] to save.

Connecting to a desired bookmark

Press  or select **Open** from the **Options** menu.

Sending the bookmark to others

Select **Send** from **Options** menu. You can send it via **Message** or **E-Mail**.

Deleting a bookmark

Select **Delete** from **Options** menu. You can delete multiple bookmarks using the **Mark/Unmark** option.


Saved pages Menu 2.4

The phone can save the page on display as an offline file. Up to 20 pages can be saved.

Browser settings Menu 2.5

You can change the settings for browser display, security, and certificates.

Profiles (Menu 2.5.1)

Select the appropriate profile by pressing . This will activate the profile to initiate the browser launch.

Security (Menu 2.5.2)

Certificates

If stored, a list of root/ca certificates required for WTLS/TLS can be found here.

Certificates can be viewed from the list.

Session clear

Secure (WTLS/TLS) session data can be cleared using this option. Session data should be cleared to establish a new secure session.

Character encoding (Menu 2.5.3)

Sets the browser default character set to one of the following:

Automatic, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto), Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8), Chinese(BIG5).

Scrolling control (Menu 2.5.4)

Allows you to set the scroll speed by selecting the number of lines to scroll.

Select one from Small(1 line), Medium(2 lines), Large(3 lines).

Show image (Menu 2.5.5)

Allows you to enable or disable the image display during browsing.

Note

Enabling this function will delay displaying images until the completion of transmission. Disabling this function will prevent the browser from downloading images from the server, thus allowing faster transmission.

Cache (Menu 2.5.6)

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in the Cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

Cookies (Menu 2.5.7)

Enabling Cookies allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

JavaScript (Menu 2.5.8)

Select whether to turn JavaScript **On** or **Off**.

Reset settings (Menu 2.5.9)

Select this to reset your phone to its default browser configuration.

Music [Menu 3]

Now playing

Menu 3.1

This menu will be activated when there are some tracks currently played.

All tracks

Menu 3.2

You can view the entire music files in the phone/external memory.

Playlists

Menu 3.3


You can create your own playlists by choosing tracks from the All tracks menu list.

Camera [Menu 4]

Camera

Menu 4.1

This application enables you to take a still picture. You can take a picture in the size you want, and use it for the address book photo, home screen and other more general purposes. Once taken, the picture can be sent by Message, E-Mail or Bluetooth.

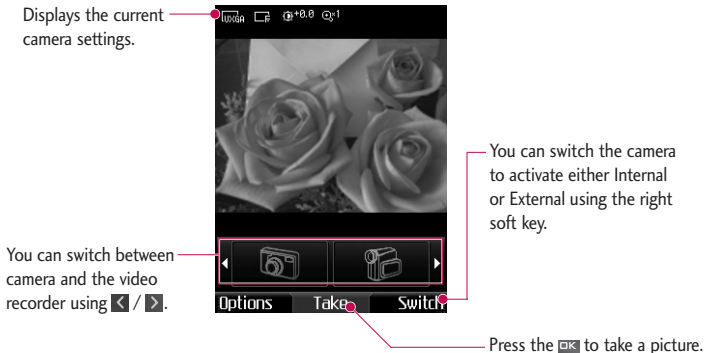

1. Press the left soft key to access **Options** and set the desired environment as follows.

- ▶ Move between the options menus with < / > .
- ▶ Select the desired value with ^ / v and confirm the selection with the left soft key [Select] or OK .

Go to	The Pictures folder is launched and displays existing pictures as thumbnails. You can view pictures by pressing . You can also send the selected picture to another party via Message, E-Mail or Bluetooth.
Size	1600x1200 (), 1280x960 (), 640x480 (), 320x240 (), Wallpaper (), 176x144 () Contact ()
Quality	Super fine () , Fine () , Standard ()
Light	Off , Always on () , When taking () ▶ You can turn the camera light on/off with in preview mode.
Multishot	One, Three () , Six () , Nine () (Note: Available multishot depends on the size.)
Zoom	x1 () , x2 () (Note: Available zoom level depends on the size.) ▶ You can zoom in with / zoom out with in preview mode.
Brightness	From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen. ▶ You can adjust the brightness using in preview mode.

White balance	You can adjust the tone of the background photo according to the weather. Auto, Daylight, Cloudy, Illuminate, Indoors
Night mode	You can take better pictures at night by selecting On .
Frame Shot	You can apply one of 9 frame effects when taking a picture. (available only in case of Wallpaper size)
Timer	You can delay the camera shutter time. None, 3 seconds, 5 seconds, 10 seconds " " is shown when the timer is activated.
Effect	None, Black & White, Negative, Sepia
Sound	Select the desired shutter sound.
Memory	Select the desired memory, either Handset or External .
Mirror	You can activate the mirror effect by selecting On .
Switch	You can switch the camera to activate either the Internal or the External camera.
Preview Style	Normal, Full screen

Camera

2. After finishing all the settings, press the right soft key [Close].
3. Focus the camera on what you want to take and press **OK**.
4. Press **OK** to save the picture. It is saved in the Pictures folder of My Files.

You can directly send the picture via Message, E-Mail or Bluetooth by pressing the right soft key [Send].


Note

Press **←** to go back to the preview mode without saving the picture.

Video recorder

Menu 4.2

This application enables you to record a video clip. You can play and watch a saved video file in this menu. Once recorded, a video clip can be sent by Message, E-Mail or Bluetooth.

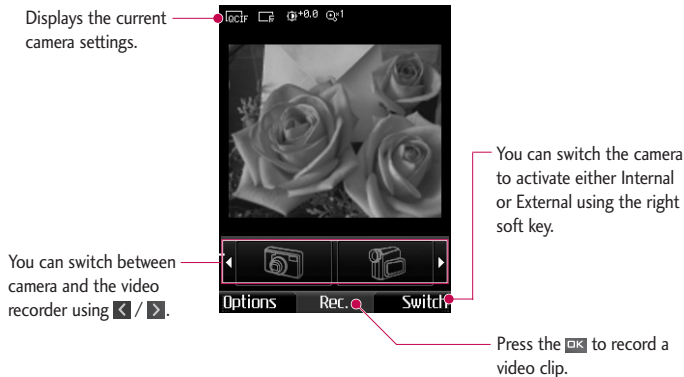

1. Press the left soft key to access **Options** and set the desired environment as follows.
 - ▶ Move between the options menus with [Left Arrow] / [Right Arrow].
 - ▶ Select the desired value with [Up Arrow] / [Down Arrow] and confirm the selection with the left soft key [Select] or [OK].

Camera

Go to	The Videos folder is launched and displays existing videos as thumbnails. You can view videos by pressing . You can also send the selected video to another party via Message, Email or Bluetooth.
Size	320x240 (), 176x144 (), 128x96 (
Quality	Super fine () , Fine () , Standard ()
Light	Off, Always on (). When recording () ▶ You can turn the camera light on/off with in preview mode.
Zoom	x1 () , x2 () (Note: Available zoom level depends on the size.) ▶ You can zoom in with / zoom out with in preview mode.
Brightness	From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen. ▶ You can adjust the brightness using in preview mode.

White balance	You can adjust the tone of the background video according to the weather. Auto, Daylight, Cloudy, Illuminate, Indoors
Night mode	You can take better shots at night by selecting On .
Effect	None, Black & White, Negative, Sepia
Duration	Select the desired recording time. Message, 30 seconds, 1 minute, 2 minutes, 5 minutes and 60 minutes
Memory	Select the desired memory, either Handset or External .
Mirror	You can activate the mirror effect by selecting On .
Sound	Decide whether to record the sound or not.
Switch	You can switch the camera to activate either Internal or External .

2. After finishing all the settings, press the right soft key [Close].
3. Focus the camera on what to record and press **OK** to start recording.
And press **OK** to stop recording.
 - ▶ You can pause the recording by pressing the right soft key [Pause].
4. Press **OK** to save the video clip. It is saved in the Videos folder of My Files.

You can directly send the video clip via Message, E-Mail or Bluetooth by pressing the right soft key [Send].

Note

Press **←** to go back to the preview mode without saving the video clip.

Messaging [Menu 5]

Create new

Menu 5.1

Message

(Menu 5.1.1)

You can write and edit a message containing a combination of text, image, video and audio.

1. Enter your message in the Message field.

Option menus in Message field

- ▶ **Insert:** You can perform the following actions:

1. **Pictures:** You can insert an image. (One image per slide)
2. **Take Picture:** The camera module opens and you can take a picture. The picture is then inserted in the message window. (One picture per slide).
3. **Videos:** You can insert a video clip. (One video clip per slide)
4. **Take Video:** The video recorder module opens and you can record a video. The recorded video is inserted in the message. (One video clip per slide)

5. **Sounds:** You can insert a sound file. (One sound per slide)
6. **Record Sound:** The voice recorder module opens and you can record a sound. The recorded sound is inserted in the message. (One sound per slide)
7. **Contact details:** You can add a name and/or a number stored in the Contacts. Make your selection to send either the Name, Number or Name & Number and press **OK**. The Contacts list opens and you can search the desired contact to be inserted.
8. **Templates:** You can insert a text template saved on the phone. After selecting one, press **OK**. The selected template is inserted into the Message window.
9. **Cc:** Select this to insert Cc.
0. **Subject:** Select this to insert a subject.
- *. **New slide:** Select this to add a new slide.
- #. **Symbol:** You can insert symbols. After entering the corresponding number keys, press **OK**.

- ▶ **Add recipients:** You can add recipients from your Contacts or enter the number directly.
 - ▶ **Send:** Select this to send the created message.
 - ▶ **Save to drafts:** Select this to save the message to drafts.
 - ▶ **Input method:** Select the desired dictionary mode.
 - ▶ **Add to dictionary:** You can add a word to the dictionary.
 - ▶ **Cancel:** Select this to cancel editing.
2. Press the right soft key [Continue]. You can add recipients from Contacts or enter the number directly. (You can enter up to 10 numbers.)

Option menus in To field

- ▶ **Add recipients:** You can add recipients from your Contacts or enter the number directly.
- ▶ **Send:** Select this to send the message.

- ▶ **Save to drafts:** Saves the message to drafts.
 - ▶ **Cancel:** Select this to cancel editing.
3. Press the right soft key [Send] to send the message. The message will automatically be saved in the Sent messages folder. If the message has not been sent, it will remain in the Outbox with a failed status.

E-Mail

(Menu 5.1.2)

To send/receive an email, you should set up the email account. (Refer to page 54-56 for how to set up an E-Mail account.)

1. Enter the email addresses of the recipients in the To, Cc, Bcc fields. You can search the Contacts by pressing **OK**.

Note

- Enter the reference email address to forward the email in Cc(Carbon copy) field.
- Enter a hidden reference email address to forward the email without forwarding information in Bcc(Blind Carbon Copy) field.

Messaging

- Only valid email addresses are allowed for the recipient (To), reference address (Cc) and hidden reference address (BCC) fields. When an email address has been specified, another field where you can specify another address appears. You can specify up to 20 recipients for the To and Cc address fields and 10 recipients for the BCC address field.

2. Move the cursor to the Subject field and key in the subject.
3. You can enter the message contents by moving the cursor to the Message field.
4. Use the following functions by using the left soft key [Options].
 - ▶ **Insert:** Select this menu to insert special characters, templates, and contacts. It is also possible to attach multimedia files (pictures, videos and sounds).
 - ▶ **Add recipients:** Select this menu to insert email addresses saved in Contacts. (Only shown in Option menu when cursor is located in To/Cc/Bcc fields.)

- ▶ **Send:** Sends the created email.
 - ▶ **Save to drafts:** Select this menu to save the message in Drafts.
 - ▶ **Preview:** You can preview the created email before sending it.
 - ▶ **View attachment:** Shows the attached files. (This item is only available when some files have been attached.)
 - ▶ **Input method:** Select the desired dictionary mode.
 - ▶ **Add to dictionary:** You can add a new word to the dictionary.
 - ▶ **Set mail priority:** You can configure the priority of the email you wish to send.
 - ▶ **Cancel:** Exits the email composer.
5. When you have finished writing an email, press the right soft key [Send] to send the email.

Inbox

Menu 5.2

1. You can view saved messages. Select a message and then press **OK** to view the message.
2. You can view the previous or next message by using **◀** / **▶**.
3. To view a multimedia message (Notification), select **Retrieve** in the message notification view screen. Then the file is transmitted, and you can view the file when the transmission is complete.

You can use the following functions by using the left soft key [Options] in the Inbox.

- ▶ **View:** Opens the selected message.
- ▶ **Reply:** Creates a reply to the sender or all recipients of the selected message.
- ▶ **Forward:** Forwards the selected message.

Note

Not supported for multimedia message (Notification) and WAP push messages.

- ▶ **Make video call:** You can make a video call.

- ▶ **Delete:** Deletes the current message.
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Copy:** In case of SMS, you can copy the message into handset or USIM.
- ▶ **Move:** In case of SMS, you can move the message into handset or USIM.
- ▶ **Message info.:** You can check the message type, date and time and where it is saved.

Note

You can check the saved Emails in Email [Menu 5.6].

Messaging

Drafts

Menu 5.3

You can view saved messages. Select a message and then press **OK** to edit the message.

You can use the following functions by using the left soft key [Options].

- ▶ **Edit:** You can edit messages.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Message info.:** You can check the message type, date and time and where it's saved.

Outbox

Menu 5.4

The Outbox is a temporary storage place for messages waiting to be sent. Failed messages are also placed in Outbox. For example, Emails will be placed in Outbox if the Email account is not correctly configured.

1. Select a message and then press **OK** to view the message.
2. You can use the following functions by using the left soft key [Options].

[For sending / waiting messages]  

- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Cancel:** You can stop sending/waiting status.
- ▶ **Message info.:** You can check the message type, date and time and where it's saved.

[For sending a failed message] 

- ▶ **Resend:** Resends the selected message.
- ▶ **Forward:** Forwards the selected message.
- ▶ **Edit:** You can edit the selected message.
- ▶ **Delete:** Deletes the current message.
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.

- ▶ **Message info.:** You can check the message type, date and time and where it's saved.

Sent messages

Menu 5.5

Shows the messages you sent (Message/Email).

[Options]


- ▶ **View:** Opens the selected message.
- ▶ **Forward:** Forwards the selected message.
- ▶ **Delete:** Deletes the current message.
- ▶ **Edit:** You can edit the selected message.
- ▶ **Create new message:** You can write a new message.
- ▶ **Save number:** Save the sender's number.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Copy:** In case of SMS, you can copy the message into handset or USIM.

- ▶ **Move:** In case of SMS, you can move the message into handset or USIM.
- ▶ **Message info.:** You can check the message type, date and time and where it is saved.

E-Mail

Menu 5.6

Viewing email message list

1. Select an email account and then press  to view the received email list.
2. Using the right soft key [Retrieve], you can retrieve a new email list from the email server of the selected account.
3. In email list, you can use the following functions by using the left soft key [Options].
 - ▶ **View:** Opens selected email.
 - ▶ **Reply:** Creates a reply to the selected email.
 - ▶ **Forward:** Forwards the selected email message to others.
 - ▶ **Retrieve:** Retrieves new email messages.

Messaging

- ▶ **Delete:** Deletes the email.
- ▶ **Create new message:** Creates a new message or Email.
- ▶ **Save address:** Save sender's address to Contacts.
- ▶ **Mark/Unmark:** Use mark/unmark option for multiple deletion.
- ▶ **Set as read/unread:** You can set the selected email to read or unread.
- ▶ **Message info.:** Brief information on the message including size, type, date, time and filenames.

Viewing an email message

1. Select one of the received emails and press the Open key to receive the contents of the email.
2. The contents of the received email are automatically displayed in the View screen.
3. You can view the contents of the previous or next email by using **<** / **>**.

4. In the email View screen, you can select the following functions by using the left soft key [Options].
 - ▶ **Reply:** Creates a reply to the selected email.
 - ▶ **Forward:** Forwards the selected email message to others.
 - ▶ **Delete:** Deletes the email.
 - ▶ **Save address:** Saves the sender's address to Contacts.
 - ▶ **Create new message:** Creates a new message.
 - ▶ **Use:** Extracts the number, email address or Web address from email message.
 - ▶ **View attachment:** Shows the attached file.
 - ▶ **View to address:** Shows the email addresses of the recipients and reference (Cc).
 - ▶ **Message info.:** Brief information on the message including size, type, date, time and filenames.

Templates

Menu 5.7

Text templates

(Menu 5.7.1)

You can add, edit, and delete frequently used useful phrases using the left soft key [Options].

Note

Depending on your service provider, useful phrases are saved as a default.

Multimedia templates

(Menu 5.7.2)

You can create, edit and view available templates when creating multimedia messages. Five types of template (Birthday, Greeting, Holiday, Thanks, Sorry) are saved by default.

The following options are available.

- ▶ **Add new:** You can create a new multimedia template.
- ▶ **Write multimedia message:** Creates a multimedia message with the selected template.
- ▶ **View:** Displays the selected template.
- ▶ **Edit:** Edits the selected template.
- ▶ **Delete:** Deletes the selected template. (Not available for default five templates)

Messaging settings

Menu 5.8

SMS

(Menu 5.8.1)

You can configure text message related options.

1. **Text message centre:** Input the address of the Text message centre.
2. **Delivery report:** By enabling this option, you can verify whether your message has been sent successfully.
3. **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
4. **Send long text as:** Select a long text message as Multiple SMS or MMS.

Messaging

MMS

(Menu 5.8.2)

You can configure Multimedia message related options.

- 1. Retrieval mode:** You can set the retrieval mode using Home network and Roaming network respectively. If you select **Automatic**, you will receive multimedia messages automatically. If you select **Manual**, you will only receive a notification message in the inbox and then you can decide whether to download multimedia messages or not.
- 2. Delivery report:** Allows you to determine whether to request a delivery confirmation mail to a recipient, and whether to allow sending a delivery confirmation mail to a sender.
 - ▶ **Request report:** Determines whether to request a delivery confirmation mail for a Multimedia message.
 - ▶ **Allow report:** Determines whether to allow sending a delivery confirmation mail for a delivery confirmation mail request.
- 3. Read reply:** Allows you to determine whether to request a read confirmation mail to a recipient, and whether to allow sending a read confirmation mail to a sender.
 - ▶ **Request reply:** Determines whether to request a read confirmation mail for a Multimedia message.
 - ▶ **Allow reply:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
- 4. Priority:** You can select the priority level of the messages (Low, Normal and High).
- 5. Validity period:** Allows you to configure the term of validity for a message when transmitting a multimedia message. The message would be saved in the multimedia message server only for the configured term.
- 6. Slide duration:** Allows you to configure the duration of each page when writing a message.

- 7. Delivery time:** Configures the delivery time of message to the recipient. The Multimedia message centre will deliver the message after the delivery time.
- 8. Multimedia msg. centre:** Allows you to configure network information such as the MMSC and the WAP gateway, to send a multimedia message.

Using the left soft key [Options], you can activate, add or delete a profile. A profile name selected by a checkmark is the currently configured value. You can view and edit the contents of the profile in edit mode by pressing the right soft key [Edit]. The edit screen also appears when creating a new profile under Options. The meaning of each item is given below.

- ▶ **Title:** Profile name.
- ▶ **MMSC URL:** Enter the multimedia message centre URL.
- ▶ **MMS Proxy:** Enter the WAP gateway address and port number.
- ▶ **Connection mode:** Select one of the connection mode. (TCP with Proxy, TCP without Proxy, UDP)
- ▶ **Access points:** Specify the access point name. (see WAP connection settings.)

Press the right soft key [Done] to save the changes and complete Multimedia msg. centre setting.

E-Mail

(Menu 5.8.3)

You can configure settings for receiving and transmitting emails.

- 1. Allow reply email:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
- 2. Request reply email:** Determines whether to request a read confirmation mail.
- 3. Auto retrieve:** You can configure Auto retrieve to retrieve emails automatically from the incoming mail server. When a new email arrives, an icon appears at the top of the screen. You can select the auto receiving time slot to **Off, 15 minutes, 30**

Messaging

minutes or 1 hour.

Please note that additional charges may be incurred using the **Auto retrieve** feature.

4. Include message in Fwd. & Reply:

Determines whether to include the received message when you forward the message or reply to it.

5. Signature: You can configure a text signature to be attached to the end of an email. The configured signature text is automatically or manually attached to the end of the email when it is sent.

6. Priority: You can select the priority level of Emails (Low, Normal and High).

7. Email accounts: You can create or configure an email account including the email server and user ID. You can edit a selected email account by pressing the right soft key [Edit]. You can select an email account to be used to send an email using **OK**. You can select the following functions using the left soft key [Options].

- ▶ **Add new:** Create a new email account.
- ▶ **Edit:** To edit the selected email account.

- ▶ **Activate:** Activates the selected account for outgoing mail.
- ▶ **Delete:** Deletes a selected email account. All the emails included in the account will be deleted.

Creating a new email account

1. Select **Add new** from the Email account menu options.
2. The following items need to be configured.

Title	Enter a title.
Username	Enter the user name of the email account.
Password	Enter the email account password.
Email address	Enter the email address for outgoing mail.
Reply email address	Enter the email address to reply to your email.
Outgoing mail server	Enter the outgoing email server.
Incoming mail server	Enter the incoming email server.
SMTP port number	Enter the mail server port number. In general, the SMTP (Outgoing mail server port number) is 25.
Incoming server port	Enter the mail server port number. In general, the incoming mail server port number is 110(POP3) or 143(IMAP4).

Maximum receive size	Select the maximum email receive size using OK . The permissible maximum receive size is no more than 1MB.
Mailbox type	Select the email inbox type either POP3 or IMAP4 using OK .
Save to server	Determine whether to leave a copy of messages on the incoming server or not using OK . When the mailbox type is set to IMAP4, a copy of messages are always saved to the server.
Save sent mail into	Select where to save the sent mails (when the mailbox type is set to IMAP4). When the mailbox type is POP3, sent mails are always saved into handset.
Access points	Select an access point to connect to the Internet. You can select a configured access point using OK .
Auto retrieve	Decide whether to activate Auto retrieve or not using OK . You can set the auto receiving time slot using the Auto retrieve [Menu 5.8.3.3]. (See page 54.)
SMTP authentication	Decide whether the outgoing mail server to require authentication or not using OK . When the SMTP authentication is set to On, you can enter the SMTP Username and SMTP Password for SMTP authentication.
APOP secure login	Decide whether to activate APOP secure login or not using OK . When the mailbox type is IMAP4, APOP secure login is always set to OFF.

3. Press the right soft key [Done] to complete the email account configuration.

Editing an email account

1. Select a desired email account from the email account list and press the right soft key [Edit].
2. You can edit desired fields by moving the cursor up and down.
3. When configuration is complete, press the right soft key [Done] to complete the email account configuration.

Note

When you try to change the mailbox type, all emails downloaded before would be deleted.

Info. service

(Menu 5.8.4)

- ▶ **Cell broadcast:** You can set the reception status.
- ▶ **Channels:** You can add or modify the channels.
- ▶ **Languages:** You can select the language you want by pressing **OK**. Then, the info service message will be shown in the language that you have selected.

Messaging

Service message

(Menu 5.8.5)

▶ Service message

You can configure the options of message setting such as Push(SI/SL) and OTAP.

- **Message receive:** If you set this **On**, every service message will be received.
- **Service loading:** If you set **Message receive** to **On**, you can select the service loading option from Prompt, Disable, Always.

- ▶ **Always:** S/L message is auto launched to the Internet with URL what is specified in S/L message.
- ▶ **Prompt:** When S/L message is arrived, you will see a pop-up asking you whether process the S/L message.
- ▶ **Disable:** S/L message will be discarded at the time of arrival.

▶ Service security

You can manipulate the overall receipt options about Push(SI/SL) and OTAP messages.

– Service security set

- ▶ **Trusted:** If it is set to **On**, phone will verify appropriateness of message by compare to the list in "Trusted list".
- ▶ **Untrusted:** If it is set to **On**, phone will verify appropriateness of message by compare to the list in "Untrusted list".
- ▶ **Update:** By setting this option **On**, you can update the Trusted/Untrusted list with the address of message arrive.

On service message arrival, you can choose which list you want to update through selecting one of options from popup.

And server's SMSC & Originating address in the message will be saved in either of Trusted/Untrusted list.

- **Trusted list** (Only valid "Service security set → Trusted" status is **On**)

Message which has matched values(SMSC & Originating address) means valid.

Message which has different value to either of SMSC or OA address will be discarded.

- **Untrusted list** (Only valid "Service security set → Untrusted" status is **On**)

This is acting exactly opposite way of Trusted list.

Message which has matched values(SMSC & Originating address) means invalid.

Message which has differ value to either of SMSC or OA address will be accepted.

My Files [Menu 6]

Pictures

Menu 6.1

Pictures taken using the camera are stored in the Pictures folder and you can create new folders to manage them. You can also save selected files as animated Gifs and send multiple files to other people.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **View:** You can view the selected picture.
 - ▶ **Create new folder:** You can create a new folder within the folder currently selected.
 - ▶ **Send:** You can send the selected image via Message, E-Mail or Bluetooth.
 - ▶ **File**
 - **Move:** Enables the file to be moved to other folder.
 - **Copy:** Enables the file to be copied to other folder.
 - **Rename:** You can rename the image.
 - **Edit:** Enables the image to be edited.
- **Make GIF animation:** You can create an animated GIF file with different photos (up to 10 files of 240X320 resolution with a 2Mbyte file size limit for display).
 - **Info.:** Shows information on the selected image file.
- ▶ **Delete:** Deletes the selected image.
 - ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
 - ▶ **Main display:** You can set an image as the screen theme (Home screen, Outgoing call, Start up image, Power off image).
 - ▶ **Slide show:** You can start a slide show.
 - ▶ **Sort by:** You can sort the files by name, date, or file type.
 - ▶ **List view/Grid view:** You can view the images as a List view or Grid view.
 - ▶ **Memory status:** You can view the memory status(handset or external memory card).

Sounds

Menu 6.2

The Sounds folder consists of folders containing the Default sounds and Voice recordings. Here you can manage, send or set sounds as ringtones.

Videos





Menu 6.3

Here you can manage or send downloaded or captured videos clips.



The following are available using the left soft key [Options] in the Video list.

- ▶ **Play:** Plays the video.
 - ▶ **Create new folder:** You can create a new folder.
 - ▶ **Send:** You can send the selected video clip via Message, E-Mail or Bluetooth if not protected by Digital Rights Management (DRM).
- ▶ **File**
 - **Move:** Moves the file into handset memory or external memory.
 - **Copy:** Copies the file in handset memory or external memory.
 - **Rename:** You can rename the video.
 - **Info.:** Shows information on the selected video file.
 - ▶ **Delete:** Deletes the selected video.
 - ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
 - ▶ **Sound theme:** You can set a video as the voice ringtone or video ringtone.
 - ▶ **Sort by:** You can sort files by date, file type or name.
 - ▶ **List view/Grid view:** Displays the video files as a List view or Grid view.
 - ▶ **Memory status:** Displays the memory status(handset or external memory card).

My Files

You can view a video using the video player. Video files are displayed in the list as thumbnails. You can select a desired video by using the  /  /  / . Select a desired video and select **Play** to view the recorded video.

Select the right soft key [Send] to attach the selected video to a message, Email or Bluetooth.

When option **1. Play** is selected, the video clip will be played with the Media Player. To pause the playback, press  during the playback. To resume the paused playback, press  once again.

To capture the screen shot, press the right soft key [Capture] when the playback is paused.

To view the current playback in full screen, press the right soft key during the playback.

To return to the previous screen size, press the right soft key once again in full screen mode.

When viewing video clips in the Media Player, the following options are available:

- ▶ **Pause/Play:** You can play or pause playing a file for a moment.
- ▶ **Send:** You can send the video via Message, E-Mail or Bluetooth if the file is not protected by Digital Rights Management (DRM).
- ▶ **Go to list:** Goes back to the list.
- ▶ **Delete:** Deletes the selected video.
- ▶ **Sound theme:** You can set a video as the voice ringtone or video ringtone.
- ▶ **Wide view:** You can view the video in wide view mode.
- ▶ **Mute/Unmute:** If the Volume is set to more than 0, Mute mode is activated and if the Volume is set to 0, the Unmute mode is activated.
- ▶ **Capture:** You can save what is on the paused screen as an image file (only possible in Pause mode).
- ▶ **Set repeat:** You can set the repeat option (None/Current file/All files).

Move to file

- **Previous file:** Plays the previous video file.
- **Next file:** Plays the next video file.
- ▶ **File info.:** You can check information on files being played (File name, Size, Date, Type, Duration, Protection).

Games & Applications Menu 6.4

You can easily execute some applications by selecting this menu. All the games and applications in “**Games & Application**” folder are Java applications (MIDlets). The downloaded applications from the portal site will be stored in the “Games & Application” folder by default.

Bluetooth data Menu 6.5

The files received using Bluetooth are saved in this folder. You cannot create a sub-folder within the Bluetooth data folder.

You cannot copy or move files that are not managed by My Files.

The options displayed depend on the type of file selected. For instance, in case of an image, the following functions are supported.

- ▶ View/Edit/Move/Copy/Delete/Rename file(s).
- ▶ Mark/Unmark one or all file(s).
- ▶ Send a file via MMS, Email or Bluetooth if not protected by Digital Rights Management (DRM).
- ▶ If relevant, you can set an image as the screen theme (Home screen, Outgoing call, Start up image, Power off image).
- ▶ If relevant, start or set (normal or full screen, at what pace) a slide show.
- ▶ If relevant, create an animated GIF file with different pictures.
- ▶ Sort the files by name, date or file type.
- ▶ Memory info (handset or external memory card).
- ▶ View file information.

Other files

Menu 6.6

Other files except pictures, sounds, videos, games & applications are stored in this folder.

External memory


Menu 6.7

If you purchase an optional external microSD memory card, you can manage more content. Refer to the section **How to use a microSD memory card** on page 21 and 22 to learn how to insert and remove the memory card. You can manage content as you do on your phone.

Organiser & Tools [Menu 7]

Alarms

Menu 7.1

If you set the alarm, the  appears on the indicator bar. The specified alarm sounds at the scheduled time. Press **OK** to stop the alarm, and the alarm is released. Press the right soft key [Snooze] and choose the snooze interval. The alarm sound stops and resumes after the selected Snooze duration. You can configure up to 5 alarms.

1. Select your desired alarm to configure in the alarm list. If there is no alarm, press the right soft key [Add] to add a new alarm.
2. **Set/Cancel alarm:** Set or cancel the alarm using the options for specifying whether the alarm is on or by choosing the alarm time.
3. **Input alarm time:** Input your desired alarm time by specifying Hour and Minute. Choose either 'AM' or 'PM' which is visible if 12 hour format is specified for the phone.

4. **Select repeat mode:** Select the desired repeat mode using **<** / **>** or select the desired one from the list by pressing **OK**.
5. **Select bell:** Select the bell to ring at the alarm time using **<** / **>** or opening the list by pressing **OK**.
6. **Input memo:** Input alarm name.
7. **Snooze:** You can set the snooze duration for the alarm.
8. When you have finished setting the alarm, press the right soft key [Done].

Note

The alarm will go off even when the phone is switched off.

Calendar












Menu 7.2

Schedule inquiry and search




1. Reference by Months

You can refer to your schedule by months. The cursor is on the current date, and the registered date is marked. The schedule saved for the date where the cursor is located is represented by an icon.

Organiser & Tools

Pressing the shortcut key  moves to the previous year and pressing  move to the next year and pressing  moves to today. Pressing  moves to the previous month, and  moves to the next month. Pressing  moves to the weekly calendar, and  moves to the monthly calendar. You can move the date using  /  /  / .

2. Reference by Days

Pressing  in the reference by month moves to reference by day where you can refer to your schedule by days. You can refer to the moving date tab using  / . As a search result, brief schedule contents, repetition set up configuration, and alarm set up configuration are displayed. You can send the schedule to another phone or an Internet site through SMS(Text message) or MMS(Picture message) or Email or Bluetooth.

3. Detailed reference

You can refer to a detailed schedule, that is the whole contents of the schedule configured by the user. You can send the schedule to another phone or an Internet

site through SMS(Text message) or MMS(Picture message) or Email or Bluetooth using the left soft key [Options].

Add schedule

You can add a schedule. You can configure the start date, end date, start time, end time, contents, type of schedule, repetition, alarm of the schedule.

- ▶ **Set type:** Appointment, Anniversary, Birthday, Others
- ▶ **Set repeat:** Once, Daily, Weekly, Monthly, Annually, User setting
- ▶ **Set alarm:** No alarm, On time, 15 mins before, 30 mins before, 1 hour before, 1 day before, 3 days before, 1 week before

Delete schedule

1. Previous entries

You can delete all elapsed schedules using this function.

2. All entries

You can delete all saved schedule contents using this function.

Set up and release holiday

You can set up or release user holidays. Press the left soft key [Options] and select **Set holiday**. The selected date will be displayed in red.

To release the holiday, press the left soft key [Options] and select **Reset holiday**.

Schedule notification

If the user has configured the alarm setting, the specified alarm sound will ring. If the notification time is before the schedule start time, you can set up the alarm again.

Tasks

Menu 7.3

You can view, edit and add tasks to do. Tasks are displayed in time order. Tasks that have been completed or not completed are displayed in different ways.

Add

To add a task, press the right soft key [Add] in the Tasks list management screen. Then input the date, description and priority for the task.

When you have finished entering the data, press the right soft key [Done] to save the new task.

Detailed view and Edit

To view detailed task contents, locate the cursor on the desired item in the Tasks list, and then press **OK**. You can edit and delete a task using the left soft key [Options]. You can also delete multiple or all tasks at once using the **Mark/Unmark** option.

Set job status

Tasks set as finished are displayed as crossed out below the unfinished tasks in the Tasks list. You can set Finished tasks to Not finished by selecting **Option**.

Memo



Menu 7.4

Using the memo management function, you can view and manage saved memo contents, and add new memo.

Add memo

To add a new memo, press the right soft key [Add]. Enter the contents of the memo. You can save the memo to the list by pressing the right soft key [Done].

Edit and delete memo








Highlight the desired memo and press  to view its contents. You can edit or delete the contents of a memo using the left soft key [Options]. You can return to the memo management screen by pressing . You can select Multiple or All memos using the Mark/Unmark option and then delete a memo by pressing the right soft key [Delete].

Calculator

Menu 7.5

The calculator module allows you to perform basic arithmetic functions such as addition, subtraction, multiplication, and division as well as some scientific functions.

1. Press the left soft key [Options].
2. Select **Functions** and select the appropriate function.

You can enter numbers by using the number keys, and the operators by using  / ,  / . You can enter a decimal point by pressing . Whenever you press , characters are sequentially deleted in reverse order. Whenever you hold  down, all the characters are deleted in reverse order in one go.

When calculation is complete and the result is displayed on the screen, pressing a number clears the previous result and the calculator waits for new input, even if you did not press the right soft key [Clear]. When calculation is complete and the result is displayed on the screen, pressing a symbol saves the result into the symbol, and continues calculation.

Converter

(Menu 7.6)

Using this menu, users can convert Currency, Surface, Length, Weight, Temperature, Volume and Velocity.

Currency

(Menu 7.6.1)

1. Select the Currency menu.
2. Users can set a currency exchange rate using [Rate].
3. Enter currency rates for up to 6 currencies equivalent to GBP and then press [Done]. Then you can convert from one currency to another.
4. You can view the value of up to 6 currency units.
5. Press [Reset] to clear the current input Field.

Surface

(Menu 7.6.2)

1. Select Surface menu.
2. Select the desired unit to convert using [Unit].
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input Field, and locate the cursor in the input field.

Length

(Menu 7.6.3)

1. Select the length menu.
2. Select the desired unit to convert using [Unit].
3. Enter the standard unit and view your converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.

Organiser & Tools

Weight

(Menu 7.6.4)

1. Select the Weight menu.
2. Select the desired unit to convert using [Unit].
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input Field, and locate the cursor in the input field.

Temperature

(Menu 7.6.5)

1. Select the Temperature menu.
2. Position the cursor on the desired unit by using the up or down arrow keys.
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.
5. You can insert negative values by selecting [-].

Volume

(Menu 7.6.6)

1. Select the Volume menu.
2. Select the desired unit to convert using [Unit].
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.

Velocity

(Menu 7.6.7)

1. Select the Velocity menu.
2. Select the desired unit to convert using [Unit].
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.

World time

Menu 7.7

The World time function provides time information on major cities worldwide. You can view the time of the desired country or city by navigating using **◀** / **▶**. You can select a desired city as a base using the right soft key [Home].

Voice recorder

Menu 7.8

1. Press the left soft key [Options] to display the option pop up menu before recording.
2. Move to the desired menu item using **▲** / **▼** and press **OK**.
 - ▶ **Quality:** You can select a recording quality from **Super Fine, Fine** and **Normal**.
 - ▶ **Duration:** You can set the recording duration to MMS msg. size, 30 secs, or 1 min.
 - ▶ **New recording:** Select this menu to start recording to a new file.

- ▶ **My Files:** Opens the Voice recordings folder in My Files.
3. Pressing **OK** starts recording. When a recording is started, the recording time appears on the LCD. To cancel the recording, press the right soft key [Cancel].
 4. When you finish the recording, press **OK** to exit. The recorded file is automatically saved in the Voice recordings folder in My files.
 5. When no recording is in progress, pressing **OK** starts recording on a new file.

When no recording is in progress, press the right soft key [Send] to send a recorded file.

Select one from Message, Email, or Bluetooth using **▲** / **▼** and press **OK**.
 6. Press the left soft key to select the various options after the voice recording.
 7. Select the desired menu using **▲** / **▼** and press **OK**.

Organiser & Tools

- ▶ **Delete:** Select this menu to delete a recorded file.
 - ▶ **New recording:** Select this menu to start a new voice recording.
 - ▶ **Send:** To send the recorded file. Select one from Message, Email and Bluetooth using  /  and press .
 - ▶ **Sound theme:** You can set the recorded file as the **Voice Ringtone**, **Video Ringtone**, **Start up sound** or **Power off sound**.
 - ▶ **My Files:** Opens the Voice recordings folder in My Files.
8. Press the right soft key to close the sub-menu popup window.

Contacts [Menu 8]

Add new

Menu 8.1

You can register a new contact address. You can enter the name, different phone numbers and email addresses of a new contact. You can also assign the contact to groups, include an image or avatar, assign a specific ringtone and even enter a memo for the contact. Other available fields include Home page URL, Home address, Company name, Job title and company address. You can enter and manage contact addresses depending on the memory usage.

Contacts list

Menu 8.2

Performs the contact address search function. The search operation is performed based on a name as a default. The current search method and results found are displayed in the Search window. You can make a phone call or send a message to the selected phone number. A Contacts search can be performed based on the phone number or group information.

Groups

Menu 8.3

Using this menu you can manage group information (both stored in the Handset and the USIM). In the handset memory, there are 4 default groups: Family, Friends, Colleagues and School. You can add, edit and delete groups. When a ringtone for a number is not specified, a call from the number sounds the group ringtone assigned to the number for the group.

Speed dials


Menu 8.4

Using this menu you can manage speed dials. Speed dials are configured between 2-9. You can register speed dials for a specific contact address up to 5 different numbers, and a contact address may have multiple speed dials.

Service dial numbers

Menu 8.5

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the USIM card).

Such numbers include emergency, directory enquiries and voice mail numbers. After selecting a service number, press  to dial the service.

Own number (Menu 8.6)

Allows you to display your phone number in the USIM card. You can save own numbers being used in the USIM card.

Settings (Menu 8.7)

View contacts from (Menu 8.7.1)

Select which contact information shall be displayed (from handset memory, from SIM memory or both). **All** is the default setting.

Show image/avatar (Menu 8.7.2)

Select whether to display image/avatar or not.

Copy all (Menu 8.7.3)

You can copy contacts from the phone memory to the USIM or from the USIM to the phone memory. You can copy all items or one at a time.

Move all (Menu 8.7.4)

You can move contacts from the phone memory to the USIM or from the USIM to the phone memory. You can move all items or one at a time.

Clear contacts (Menu 8.7.5)

Clears all contact information. You can delete all contacts saved in the mobile phone memory as well as on the USIM card.

Calls [Menu 9]

You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

All calls

Menu 9.1

Allows you to view the missed, received, and dialled call records. You can make a call, or send a message to the number you have selected from the records. You can also save the number in Contacts.

Dialled calls

Menu 9.2

Allows you to view dialled call records, make a call, send a message, and save the number in Contacts.

Received calls

Menu 9.3

Allows you to view received call records, make a call, send a message, and save the number in Contacts.

Missed calls

Menu 9.4

Allows you to view missed call records, make a call, send a message, and save the number in Contacts.

USIM Tool Kit [Menu ✖]

Depending on whether you have SAT support services or not (i.e. USIM Application Toolkit) on the USIM card, this menu (Menu ✖) may be different.

If the USIM card supports SAT services, this menu will be the operator-specific service name stored on the USIM card, for instance “Special”. Please refer in that case to the information provided with your USIM card for further information on how to use the related options.

If the USIM card does not support SAT services, this menu will be **Alarms**. For the **Alarms** menu feature, please refer to page 63.

Video call [Menu 0]

You can make a video call using this menu.

1. Enter the number you want to dial.
 - ▶ You can key in the number.
 - ▶ You can select the number from Contact using the left soft key [Contacts].
 - ▶ You can find the number from call logs by pressing **OK** [Calls].
2. Press the right soft key [V-Call] to make a video call.

During a video call

When you are in a video call, the screen will show the contact's name and duration of call, contact's image, volume indicator, video control panel, and your image.

You can access the following option menus by pressing the left soft key [Options].

- ▶ Microphone on/off
- ▶ Speaker on/off
- ▶ Bluetooth/Handset talk (When the Bluetooth headset is connected)

- ▶ Private/Public mode
- ▶ Hold/Resume
- ▶ Capture
- ▶ View sender number
- ▶ Settings
- ▶ End call

Incoming video call

When a video call is received, the caller's information is displayed as following.


- ▶ **Picture/Animation:** Displays picture ID, graphic image configured in Contacts, or default animation indicating the incoming call.
- ▶ **Caller's name and number:** Shows incoming caller's number. If the number is stored in Contacts, displays the name of the contacts.

Picture ID and animation setting is used in the order of Contacts, video file used in Group ringtone, and video file used in Profile.

Video call

Also, sound can be set for the incoming video call. The sound setting is used in the order of Contacts, Group ringtone, and Profile.

You can accept the incoming call by pressing the left soft key [Accept].

The incoming call ringing can be silenced by pressing the right soft key [Silent]. It can be also silenced by long press on  on the left side of the phone.

When ringing is silenced, press the right soft key [Reject] to reject the call.

Settings [Menu #]

Phone settings

Menu #.1

Profile

(Menu #.1.1)

You can select ringtone or vibration for an incoming call and configure the sound and volume of the ringtone, key tone, and sound effect, according to a profile. The profiles provided include [Normal], [Silent], [Vibrate only], [Outdoor], [Headset], [Customised 1], [Customised 2], and [Customised 3]. Select a profile, and press **OK** to activate the profile. After pressing the left soft key [Options], select the Edit menu for the [Normal], [Outdoor], [Headset], [Customised 1], [Customised 2] and [Customised 3] profile to change the configuration. A different list of options is available for each profile that has been selected for editing.

Alert by

This option determines the incoming call notification mode. You can select from [Ring], [Vibration], [Silent], [Ring & vibration], [Ring after vibration], [Max Ring & Vibration].

Voice ringtone

You can select the ringtone for incoming voice calls.

Video ringtone

You can select the ringtone for incoming video calls.

Volume

Set the ringtone volume.

Message alert

You can set how often the phone is to inform you of a received message until it is read.

Message tone

You can select a file from among your own personal files or from the default files, to be played by the phone upon receiving a message.

Key tone

You can set the key tone to be played when pressing the keys.

Settings

Key tone volume

You can set the volume of the chosen key tone, choosing from 7 available levels.

Slide tone

Select the desired tone the phone will emit when you slide up/down the phone.

Confirmation tone

You can set the confirmation tone to be played by the phone to confirm actions.

Start up sound

You can set the effect to be played when the phone is switched on.

Select start up sound

You can select which file will be played when the phone is switched on.

Power off sound

You can set the effect to be played when the phone is switched off.

Select power off sound

You can select which file will be played when the phone is switched off.

Date & time

(Menu #.1.2)

Although the current time is automatically configured when the phone is registered to the network, users can configure the time and date directly using this menu. The time configured by the user is valid only while the phone is turned on.

Time

(Menu #.1.2.1)

1. Select the **Time** item from the Date & time list, and then press **OK**.
2. Move to your desired field, **Hour**, **Minute**, or am/pm field using the navigation keys. (When you have selected **12 hour** as **Time format**)
3. Enter **Hour**, and **Minutes** using the number keys.
4. Select the time format using **<** / **>**.
5. Scroll down to select the hour indicator format i.e. Off, Cuckoo clock or Chime bell.

6. Press the right soft key [Done] to set the time with the specified value.

Date (Menu #.1.2.2)

1. Select the **Date** item from the Date & time list, and then press **OK**.
2. Select the date format using **<** / **>**.
3. Enter **Day**, **Month** and **Year** using the number keys.
4. Press the right soft key [Done] to set the date with the specified value.

Auto update date/time (Menu #.1.2.3)

When Auto Update is configured to **On**, the time and date are automatically updated according to the current time zone. If **Confirm first** is selected, the time and date update is confirmed before it is updated automatically.

Daylight saving (Menu #.1.2.4)

Select whether to activate the daylight saving function or not. You can set the Summer time difference of selected home city for 1 hour or 2 hours.

Language (Menu #.1.3)

Select the display language. You can select **Automatic** language option to change display language to the USIM card supported language.

Security (Menu #.1.4)

PIN code request

When this is set to On, you are requested to enter your PIN each time you switch the phone on.

Note

- ▶ Press **ESC** in the PIN code entry window to return to the previous step.
- ▶ 3 incorrect PIN code entries would invalidate the PIN code. And you have to enter the PUK (PIN Unblock Key) code to configure the PIN code again.
- ▶ The maximum number of times you may enter the PUK code is 10. (Note: If you enter an incorrect PUK code 10 times, the USIM card will be blocked and must be replaced.)
- ▶ If the PIN code request cannot be disabled by operator settings, you will not be able to choose this menu item.

Settings

Handset lock

You can lock your phone. The following 4 lock functions are available.

When switching on: Locks the handset whenever the handset is switched on.

If USIM changed: Locks the handset when the phone's USIM card has been changed.

Immediate: Locks the handset immediately.

None: Deactivates the lock function.

You are requested to enter the security code to confirm the selection.

- ▶ To unlock the handset, you need to enter the security code.

Change codes

You can change the PIN code, PIN2 code and Security code.

PIN code

PIN is the abbreviation for Personal Identification Number, and is used to restrict use by an unauthorised user.

PIN code change procedure

1. Select 'PIN code' from the 'Change codes' list and then press **OK**.
2. Enter the current PIN code, and press **OK**.
3. Enter the new PIN code, and press **OK**.
4. Enter the new PIN code once again, and press **OK**.
- ▶ If the PIN code is different from that of step 3, the procedure is restarted from step 3.
5. When the PIN code is changed properly, a **Changed** message is displayed. If you enter an incorrect PIN code in step 2, and the procedure is restarted from step 2, and the number of attempts you have left to enter the number decreased by 1.
6. Press **←** in the PIN code entry window to return to the previous step.

Note

- ▶ Three incorrect PIN code entries in the PIN code entry window would invalidate the PIN code. In this case, you have to enter the PUK (PIN Unblock Key) code to configure the PIN code again. The maximum number of times you may enter the PUK code is 10. (Note: If you enter an incorrect PUK code 10 times, the USIM card will be blocked and must be replaced.)


PIN2 code

PIN2 is the abbreviation for Personal Identification Number 2, and is used to restrict use by unauthorised users as with the PIN. The PIN2 code change procedure is the same as the one for the PIN code. 3 incorrect PIN2 code entries would invalidate the PIN2 code. In this case, you have to enter the PUK2 code in order to use the PIN2 code again. The maximum number of times you may try to enter the PUK2 code is 10, like PUK1. 10 incorrect PUK2 code entries would invalidate the PIN2 code.

Security code

The security code is used to change the mobile phone password. The maximum number of attempts to enter the security code is not limited as it is with PIN and PIN2.

Keypad lock

If you select **Off**, the keypad can be activated only when the slide is open. If you select **On**, you can activate the keypad by pressing  on the left side of the phone.

Power save

(Menu #.1.5)

Decide whether to activate the power save mode or not.

Memory status

(Menu #.1.6)

User memory

This function shows the status of the user memory of the mobile phone. Since this function scans the overall file system for statistics, a few seconds are required.

Settings

User reserved memory

This function shows the status of the User reserved memory. The usual contents are Text messages, Contacts, Calendar, Tasks, Memo. And it gives a clear illustration of the actual amount compared with the total amount for each item.

USIM memory

This function shows the status of the USIM card user memory.

External memory

This function shows the status of the External card user memory. This function displays the In-use and free memory usage statistics.

Format external memory

Select this to format the external memory.

Handset Information (Menu #.1.7)

This functions shows the USIM card telephone number, model name and software version of the mobile phone.

Reset settings (Menu #.1.8)

Clear memory

Select this to clear the memory. You are requested to enter the security code.

- ▶ **Handset contents:** Deletes all the multimedia contents downloaded.
- ▶ **Handset personal info.:** Deletes personal information such as received messages or emails.

Default setting

Select this to reset your phone to its default configuration. You are requested to enter the security code.

Display settings Menu #.2

This menu allows you to personalise the display options of the screens and of the menus entire graphic interface.

Main Display (Menu #.2.1)

You can set the screen theme to be displayed on the main screen.

Home screen

- ▶ **Wallpaper:** You can select an image to be displayed on the main screen.
- ▶ **Display items:** You can select which items to display on the screen: Calendar + Clock, Calendar, Clock, Dual clock or Do not show.
- ▶ **Clock type:** You may select the clock type displayed.
- ▶ **Shows shortcut icons:** Decide whether to display the shortcut icons or not.

Welcome call

You can select the image to be displayed while dialling a number.

Start up image

You can select the image to be displayed while the phone is being switched on.



Power off image

You can select the image to be displayed while the phone is being switched off.

Menu style (Menu #.2.2)

You can select the desired menu style from Grid style and One by one style.

Font (Menu #.2.3)

You can set the font style, dialling font size, and dialling font colour using  / .

Backlight (Menu #.2.4)

You can set the backlight duration on the Home screen and Keypad individually.

Welcome message (Menu #.2.5)

After selecting On, you can write a welcome message.

Settings

Java settings

Menu #.3

Activating a profile

1. Move the cursor to the profile you would like to activate.
2. Press **OK** or select **Activate** from the **Options** menu.

Adding a new profile

1. Select **Add new** from the **Options** menu.
The following items need to be configured.

Service name	Enter an account name for the profile.
Connection mode	Choose from the given list of connection modes. (Default is TCP with Proxy)
IP address	Enter the WAP Gateway IP address provided by the operator. (e.g. 195. 115. 025. 129)
Proxy server port	Port details are provided by the operator, depending upon the Connection mode.
Access point	Choose from the given list of access points. (For more details on adding or editing a new access point, refer to page 100.)

2. Press the right soft key [Done] to save any configuration changes.

You can edit and delete a profile by selecting **Edit** and **Delete** from the **Options** menu.

Messaging settings

Menu #.4

For detailed information, please refer to page 51.

Call settings

Menu #.5

Call durations

(Menu #.5.1)

You can view call time by types. Press the left soft key [Options] to choose either partial initialisation or entire initialisation. Also press right soft key [Clear] to initialise a selected duration type. Initialization will require your Security code.

The following timers are available:

- ▶ **Last call:** Shows the latest call time in units of hours/minutes/seconds.

- ▶ **Received calls:** Shows incoming call time.
- ▶ **Dialled calls:** Shows outgoing call time.
- ▶ **All calls:** Shows total call time.

Call barring (Menu #.5.2)

Call barring menus for Voice and Video calls are provided.

The menu consists of **Voice calls**, **Video calls** and **Deactivate all**. The Voice calls and Video calls menus have the following submenus.

The **Call barring** menu consists of **All outgoing**, **Outgoing international**, **Outgoing international calls except home country**, **All incoming** and **Incoming when abroad** submenus.

The **All outgoing** menu bars dialling all outgoing calls, the **Outgoing international** menu bars dialling outgoing international calls, and the **Outgoing international calls except home country** menu bars dialling outgoing international calls except for the Home PLMN country. **All incoming** rejects all incoming calls and the **Incoming when**

abroad menu rejects incoming calls when roaming.

Voice calls

Video calls

All outgoing

1. When is selected, it receives the Barring password from user, and activates the barring service on the network. A requesting message and animation appears. When the network answers, the result of the operation is displayed.
2. When the Options menu is selected, it activates the Outgoing calls menu. Select the Options menu from the soft menu on the lowest menu. Then **Deactivate**, **Activate**, **Deactivate all**, **View status** and **Change password** menus appear. Select the **Activate** menu to receive the Barring password from the user and activate the barring service on the network. The **Deactivate** menu deactivates the barring service after the user's Barring password is entered. The **Deactivate all**

menu deactivates all barring services configured in the network after the user's Barring password has been entered. The **View status** menu enables users to view the current network configuration. Selecting **View status** menu displays the Requesting message with animation and the result of the operation when the network answers. **Change password** menu enables users to change the current barring password.

Outgoing international

1. When **OK** is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected, it activates and operates the International calls menu. It operates in the same way as the **Outgoing calls** menu.

Outgoing international calls except home country

1. When **OK** is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected – It activates and operates the **International except home country** menu. It operates in the same way as the **Outgoing calls** menu.

All incoming

1. When **OK** is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected, it activates and operates the Incoming calls menu. It operates in the same way as the **Outgoing calls** menu.

Incoming when abroad

1. When **OK** is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected, it activates and operates the Incoming calls when abroad menu. It operates in the same way as the **Outgoing calls** menu.

Fixed dial numbers (Menu #.5.3)

- ▶ **FDN ON/OFF:** Select whether to activate FDN or not. PIN authentication is required.
- ▶ **FDN List:** Displays the current FDN list. You can edit, add, or delete fixed dial numbers. PIN2 authentication is required to edit the list. And the configuration information is saved on the USIM. The information saved on the USIM is used when FDN restricts outgoing calls.

Data volume (Menu #.5.4)

Allows you to check the sent, received and all data volume transferred. (Data volume transferred through TE connection is excluded from counting.)

Press the left soft key [Options] to choose for partial initialization or entire initialization. You can also use the right soft key [Clear] for the initialization of the selected volume type. Initialization will require your Security code.

Call costs (Menu #.5.5)

1. This function displays the call costs of the Last call and All calls.
2. To initialise, press the right soft key [Clear] and enter the PIN2 code.
3. You can select either **Units** or **Currency** in **Set call cost**. According to your setting, the call cost is displayed during a call (If USIM and Network support Advice Of Charge(AOC)).
4. In the **Set limit** configuration, select **On** to configure the cost limit. When a cost limit is configured, and the call costs reach the limit, making a call will not be allowed.

Settings

Diverts

(Menu #.5.6)

Call divert menus for voice and video calls are provided.

The menu consists of Voice calls, Video calls and Deactivate all.

Voice calls

All voice calls

When busy

No answer

Not reachable

1. When the Deactivate menu is selected

Deletes Call Divert Number registered to the network. While waiting for the result from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.

2. When To a number is selected

A dialogue window appears allowing you to enter a phone number to divert to. Input a phone number to divert calls to, and press **OK**. While waiting the result

from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.

3. When Recent divert number list is selected

Divert registration is performed with the selected number. Select the number, and press **OK**. While waiting for the result from the network, a Requesting message and animation appears. When the network answers, the result of the operation is displayed.

4. Options menu

After activating All voice calls menu, selecting the Options menu at the bottom of the menus displays the Deactivate, Activate, Deactivate all, View status and clear list menus.

Activate: Move to Settings menu to activate call divert.

The View status menu shows the settings on the network. If you select this menu, Requesting message and animation appear. Then the network settings are displayed when the information is received

from the network. Selecting Status in the right soft menu gives the same result. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Selecting the Cancel all menu will display the operation result after showing the Requesting message and animation. Clear list menu will delete all divert number list.

Video calls

All video calls

1. When the Deactivate menu is selected

Deletes Call Divert Number registered to the network. While waiting for the result from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.

2. When To a number is selected

A dialogue window appears allowing you to enter a phone number to divert to. Input a phone number to divert calls to, and press **OK**. While awaiting the result

from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.

3. When Recent divert number list is selected

Divert registration is performed with the selected number. Select the number, and press **OK**. While waiting for the result from the network, a Requesting message and animation appears. When the network answers, the result of the operation is displayed.

4. Options menu

After activating the All video calls menu, selecting the Options menu at the bottom of the menus displays the Deactivate, Activate, Deactivate all, View status and clear list menus.

Activate: Move to Settings menu (above 1~4) to activate call divert. The View status menu shows the settings on the network. If you select this menu, Requesting. Message and animation appear. Then the network settings are displayed when the information is received

from the network. Selecting Status in the right soft menu gives the same result. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Selecting the Cancel all menu will display the operation result after showing the Requesting message and animation. Clear list menu will delete all divert number list.

When busy

1. When the Deactivate menu is selected

It operates the same as All voice calls menu.

2. When To a number is selected

It operates the same as All voice calls menu.

3. When Recent divert number list is selected

It operates the same as All voice calls menu.

4. When Options menu is selected

It activates and operates If busy menu. It operates the same as All voice calls menu.

No answer

1. When the Deactivate menu is selected

It operates the same as All voice calls menu.

2. When To a number is selected

It operates the same as All voice calls menu.

3. When Recent divert number list is selected

It operates the same as All voice calls menu.

4. When Options menu is selected

Activates and operates No answer menu. It operates the same as All voice calls menu except that users can configure delay time in the Set waiting time menu in the menu list.

Not reachable

1. When Deactivate menu is selected

It operates the same as All voice calls menu.

2. When To a number is selected

It operates the same as All voice calls menu.

3. When Recent divert number list is selected

It operates the same as All voice calls menu.

4. When Options menu is selected

Activates and operates If out of reach menu.
It operates the same as All voice calls menu.

Call waiting (Menu #.5.7)

- ▶ **Activate:** Activates waiting service. Selecting this item, displays requesting message and animation. When the network answers, the result of the operation is displayed.
- ▶ **Deactivate:** Deactivates Call waiting service. Selecting this item displays requesting message and animation. When the network answers, the result of the operation is displayed.
- ▶ **View status:** Displays activated Call waiting service group item of the network. Selecting this item displays requesting message and animation. When the network answers, the result of the operation is displayed.

Voice mail (Menu #.5.8)

You can add or modify voice mail centre.

Video call (Menu #.5.9)

You can set the screen display when making /receiving a video call.

- ▶ **Show private image:** Determine whether to show the private image or not.
- ▶ **Select still image:** Select the still image to be displayed.
- ▶ **Mirror:** Select to activate the mirror effect or not.
 - **On:** Displays the image flipped side to side.
 - **Off:** Displays the image as it is.
- ▶ **My image size:** Select my image size to be displayed.

Settings

- ▶ **My image position:** Select the position where your image will be displayed.

Common settings (Menu #.5.0)

Call reject

You can set whether to reject incoming calls.

1. Select **On** in Reject menu to activate call reject. The Reject list menu appears.
 2. Set the desired call reject option in the Reject list menu.
- ▶ **All calls:** Rejects all calls.
 - ▶ **Contacts:** Rejects the calls from the number stored in Contacts.
 - ▶ **Groups:** You can specify call rejects by group units stored in Contacts.
 - ▶ **Unregistered:** Rejects calls from the number not stored in Contacts.
 - ▶ **No caller ID:** Reject calls which do not have CLI information.

Send my number

- ▶ **Set by network:** Configures with the default settings determined by the service provider.
- ▶ **On:** Configures to send my phone number when making an outgoing call.
- ▶ **Off:** Configures not to send my phone number when making an outgoing call.

Auto redial

Allows you to set the auto redial function when a call attempt has failed.


Answer mode

Allows you to set the answering method. You can choose between **Press send key**, **Slide up** and **Press any key**.

Minute minder

Determines whether to sound a 1 minute tone every 1 minute when you are on the phone.

BT answer mode

- ▶ **Hands-free:** You can answer a call using the Bluetooth headset, when the Bluetooth is connected.
- ▶ **Handset:** If you press  on the handset to answer a call, you can talk on the handset. If you press the Bluetooth headset key to answer a call, you can talk using the Bluetooth headset.

This is the initial answer mode selection. And while talking, you can switch from handset to headset or from headset to handset.

Contact settings Menu #.6

For detailed information, please refer to page 72. (Menu 8.7)

Connectivity Menu #.7

Bluetooth (Menu #.7.1)

Bluetooth connection

Your phone has built-in Bluetooth wireless technology which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a handsfree, PC, PDA or other phones.

You can, for example, have a conversation via a cordless Bluetooth handsfree or browse the Internet, wirelessly connected via a mobile phone. You can also exchange, for example, business cards, calendar items and pictures.

Note

- ▶ We recommend that your phone and the Bluetooth device you are communicating with be within a range of 10 meters. The connection may be improved if there are no solid objects between your phone and the other Bluetooth device.

Settings

1. Getting started

- **Menu > #. Settings > 7. Connectivity > 1. Bluetooth > 1. Paired devices**

To use the Bluetooth function, you must first set Bluetooth to **On**.

2. Configuring Bluetooth settings

- **Menu > #. Settings > 7. Connectivity > 1. Bluetooth > 2. Settings**

- **Bluetooth usage:** To use the Bluetooth function, set it to [On]. Otherwise, set it to [Off].

- **My handset's visibility:** Set [My handset's visibility] to [Show to all] so that other devices can detect your phone when they are searching for a Bluetooth device. If you select [Hidden], other devices will not be able to detect your phone when they are searching for a Bluetooth device.

- **My handset's name:** You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when [My handset's visibility] is set to [Show to all].

Note

▶ When user uses Bluetooth Device in the handset, the security of the handset is at risk.

Therefore, we recommend that Bluetooth visibility be set to **Hidden** after configuration or device pairing. For incoming files via Bluetooth regardless of paired devices, you can choose to accept or reject the connection, after checking the sender details.

3. Paired device

Pairing Devices(Pairing with a device)

If a paired Bluetooth device already exists.

- **Menu > #. Settings > 7. Connectivity > 1. Bluetooth > 1. Paired devices > Options > Add new**

If there is no paired Bluetooth device.

- **Menu > #. Settings > 7. Connectivity > 1. Bluetooth > 1. Paired devices > Add**

Options

▶ **Add new:** Using this menu, you can pair a new Bluetooth device with your phone.

▶ **Assign short name:** Using this menu, you can rename a paired phone as required.

▶ **Connecting/Disconnecting the device**

1. If you want to open the connection to the selected device, select the Connect.
2. If you want to close the connection to the selected device, select the Disconnect.

▶ **Delete:** Using this menu, you can delete the paired Bluetooth device.

▶ **Delete all:** Using this menu, you can delete all of the paired Bluetooth devices.

<Pairing devices>

1. To search for a Bluetooth device to pair, press **Add** or **Add new**.
2. Screen shows **Searching for devices**. Bluetooth devices within a range of 10m will be found.
3. If Bluetooth devices are found, these devices are listed on the screen. If no Bluetooth device is found, you will be asked if you want to search again.

4. Pairing procedure

- Press **OK**. A window will appear on the screen asking you to enter your password.
- After creating a password (of 1 to 16 digits), the user of the other device must enter the password for pairing. The user of the other device must know the password in advance for authentication.

<Deleting devices>

1. Select a device to delete from the Paired devices screen.
2. You can delete a device by pressing the Delete key or by selecting Options > Delete. To delete all paired devices, select Options > Delete All.


<Transmitting data using Bluetooth>

1. To transmit data from your phone to another Bluetooth device, first select the application where the target data is saved. For example, to send data in the My Files to another device, select

Settings

Menu > 6. My Files > 1. Pictures /
2. Sounds / 3. Videos/ 5. Bluetooth data
/ 6. Other files / 7. External memory >
Select data to transmit > Send > 3.
Bluetooth

2. Transmitting data

- 1) Last device found is displayed. If the desired device does not exist in the list, select [More devices].
- 2) Select the device to which you want to transmit data from the devices on the screen and press .
- 3) If the other party selects [Yes] for [Connection request], the data is transmitted.

<Receiving data using Bluetooth>

Menu > #. Settings > 7. Connectivity >
1. Bluetooth > 1. Paired devices

If another party attempts to transmit data, the [Connection request] question will appear on the screen. If you select [Yes], the data will be transmitted to your phone. During data transmission, the Bluetooth icon flashes.

<Bluetooth data storage folder>

You can check the received data by selecting
Menu > 6. My Files > 5. Bluetooth data.

4. Device

<Connecting a headset>

Menu > #. Settings > 7. Connectivity >

1. Bluetooth

1. Connect the headset according to the procedures described in the Pairing Devices section.
2. To use the headset, select the headset from the registered devices, press the Option key and then select 3.Connect.
3. To check that the selected headset has been connected successfully, press the Option key. If it is properly connected, 3.Disconnect will appear. If it is not connected, 3.Connect will appear.

<Connecting a handsfree kit>

1. Menu > #. Settings > 7. Connectivity >
1. Bluetooth

2. Connect the handsfree kit according to the procedures described in the Pairing Devices section.
3. To use the handsfree kit, select the handsfree kit from the registered devices, press the Option key and then select 3.Connect.
4. To check that the selected handsfree kit has been connected successfully, press the Option key. If it is properly connected, 3.Disconnect will appear. If it is not connected, 3.Connect will appear.

Synchronisation (Menu #.7.2)

(Note: This service is not available in all countries. Please contact your service provider for further information.)

If Sync service is supported by your network operator, this service function synchronizes the data in a phone and the data on a server such as Contacts, Calendar, and Tasks via a wireless network.

Connect

1. Select the Connect item and then press **OK**.
2. Connect to the server with the selected server profile and the synchronization animation is displayed while the synchronization is performed.

Logs

Select the Logs item and then press **OK** to view the log for the last synchronization operation performed.

Server synch. centre

1. Select the Server synch. centre item and then press **OK**.
2. This menu allows you to configure the profile for a synchronization server.
 - ▶ **Profile name:** Input the name for the profile.
 - ▶ **Host address:** Contact your service provider.
 - ▶ **Proxy IP address:** Enter the WAP gateway address and port number.

Settings

- ▶ **User name:** Enter your user ID for synchronization server.
- ▶ **Password:** Input your password.
- ▶ **Contacts:** Select whether to synchronise Contacts or not.
- ▶ **Contact name:** Input the contacts database name for server access.
- ▶ **Calendar:** Select whether to synchronise Calendar or not.
- ▶ **Calendar name:** Input the calendar database name for server access.
- ▶ **Tasks:** Select whether to synchronise Tasks or not.
- ▶ **Tasks name:** Input the Tasks database name for server access.
- ▶ **Sync type:** Select the synchronization type below.
 - Normal
The phone and the server are required to exchange information about the modified data.
 - Backup
The phone sends all the data from a database to the server. The server is expected to replace all data in the target database with the data sent by the phone. This means the phone overwrites all the data in the server database.
 - Restore
The server sends all its data from a database to the phone. The phone is expected to replace all data in the target database with the server sent by the server. This means the server overwrites all data in the phone database.
- ▶ **Access point:** Select an access point to use for the data connection.

Network

(Menu #.7.3)

Network selection

Select between **Automatic** and **Manual**.

- ▶ **Automatic:** Automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.
- ▶ **Manual:** All the currently 2G(GSM) and 3G(UMTS) available networks are shown and you can select one of them for registration. If the registration of the network has failed, all the currently available networks are listed again and you can select any other one for registration. After the registration of the network was a success, if the service status of mobile is no service or limited service, you can see the "Manual mode" in idle screen. And you can see the popup that is available to change network selection mode. If you select yes, you can see the Network Menu. And you can select network again.

Network mode

You can set a type of network to search for when networks are searched in the **Select network** menu.

- ▶ **Automatic:** Searches all the networks connectable.
- ▶ **UMTS:** Searches only networks supporting 3G.
- ▶ **GSM 900/1800:** Searches only networks supporting GSM 900/1800 band.
- ▶ **GSM 1900:** Searches only networks supporting GSM 1900 band.

Preferred lists

If the network is searching automatically, you can add a preferable network to be connected to. And the following options are available.

- ▶ **Add new:** You can add a new network using the followings.
 - **Search:** You can select one from the network list stored in the phone.

Settings

- **Enter new network:** You can enter the country code (MCC) and the network code (MNC) to add. After setting, press **Done** key.

- ▶ **Delete:** Deletes the selected network.
- ▶ **Edit:** You can modify the information of the selected network.
- ▶ **Move up:** Moves the selected network upward.
- ▶ **Move down:** Moves the selected network downward.

Access points (Menu #.7.4)

This menu shows the access point list. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

You can edit the following configuration items by selecting the right soft key.

Connection title	Access Point profile name.
Bearer	Choose the bearer from the list. (Default is UMTS.)
Authentication	Choose the authentication from the list. (Default is No auth)
User name	Information provided by service provider.
Password	Information provided by service provider.
APN	APN name to access network. Information provided by service provider.

- ▶ Press **Done** key to save any configuration changes.

Browser settings (Menu #.7.5)

Profiles

Select the appropriate profile by pressing **OK**. This will activate the profile to initiate browser launch.

Security

If user presses Certificates, certification information is shown.

User can clear secure session information by pressing Session clear.

Certificates

If stored, a list of root/ca certificates required for WTLS/TLS can be found here.

Certificates can be viewed from the list.

Session clear

Secure (WTLS/ TLS) session data can be cleared using this option. Session data should be cleared to establish a new secure session.

Character encoding

Sets the browser default character set to one of the following.

- ▶ Automatic, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto), Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8), Chinese(BIG5).

Scrolling control

Allows you to set the scroll speed by selecting the number of lines to scroll. Select from Small(1 line), Medium(2 lines), Large(3 lines).

Show Image

Allows you to enable or disable image display during browsing.

Cache

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

Cookies

Enabling Cookies allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

JavaScript

Select On/Off.

Reset settings

Select this to reset your phone to its default configuration.

Settings

Streaming

(Menu #.7.6)

If you want to set different network setting to play streaming content, you can set different network settings.

Dial-up network

(Menu #.7.7)

You can use your phone with a variety of PC connectivity and data communications applications. Select USB and Bluetooth you want to use for the data connection.

Note

- ▶ Enabling this function will delay displaying of images until transmission is completed. Disabling this function will prevent the browser from downloading images from the server, thus allowing faster transmission.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Standard Battery



Data cable/CD

You can connect your phone to PC to exchange the data between them.



Hands free ear-microphone and music player controller combo

Stereo headset



Controller: Answer & End key, music player control, volume control, Hold button and microphone.



After connecting the headset and the controller, plug the end of controller into the headset jack on the right side of the phone.

Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do so may invalidate your warranty.
- ▶ Accessories may vary in different regions: please check with our regional service company or agent for further information.

Technical data

General

Product name: KU800

System: GSM900/DCS1800/PCS 1900,
WCDMA 2100

Net weight: 67.5g(Without battery)

Ambient Temperatures

Max: +55°C

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / GSM 1800 / GSM 1900 / W-CDMA Terminal Equipment

Model Name

KU800

Trade Name

LG

CE 0889

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.5.1, ETSI EN 301 489-07 V1.2.1
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.2.1
ETSI TS 151 010-1 V5.8.0 specified by ETSI EN 301 511 V9.0.2
ETSI TS 134 121 V5.8.0 specified by ETSI EN 301 908-2 V2.2.1
ETSI EN 301 908-1 V2.2.1, ETSI EN 300 328 V1.4.1
EN 50380:2001; EN 50361:2001
EN 60950 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog, Kim / Director

19.July. 2008

LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim@lge.com


Signature of representative

