



繁體中文
簡體中文
ENGLISH



KM380

使用手機前，請務必詳細閱讀本手冊。
並小心保存本手冊，以備日後參考之用。



www.lgmobile.com

P/N : MMBB0281814 (1.0)

CE0168

Bluetooth QD ID B013827

■ KM380 ■ 使用手冊

此指南將幫助您了解您的新手機。

有關詳細資料，請參閱隨附光碟上的使用手冊。

使用手機前，請務必詳細閱讀本手冊。並小心保存本手冊，以備日後參考之用。



內容

了解您的手機	3	FM 收音機	13
插入智能咭和電池 / 記憶咭	5	語音備忘錄	
功能總覽	6	我的檔案	14
通話功能	7	遊戲及應用功能	
撥打電話		記事簿 / 工具	
透過通訊錄撥打電話		瀏覽器	15
接聽來電和拒接來電		設定	16
變更通話設定		變更您的情景模式	
檢視通話記錄	8	變更您的日期及時間	
通訊錄		變更語言	
搜尋通訊錄		變更您的顯示設定	
新增通訊錄		變更安全設定	
訊息	9	使用飛航模式	17
發送訊息		省電	
輸入文字	10	重設手機	
相機	11	檢視記憶體狀態	
視像攝錄機		變更連線設定	18
MP3 播放器	12	安全及有效使用的指引	19
		技術資料	25

了解您的手機

聽筒

主屏幕

左軟鍵 / 右軟鍵

執行顯示在屏幕底部的功能。

確認鍵

選擇功能表選項並確認操作。

發送鍵

撥打電號碼及接聽來電。

導覽鍵

在功能表中導覽功能表。

清除鍵

每按一下就刪除一個字元。用此鍵可返回前一個屏幕。結束或拒接通話。(長按)


數字鍵




在備用模式中輸入數字來撥號。在編輯模式中輸入數字和文字。








MP3 播放器按鍵





合上手機後，您也可以透過  鍵存取 MP3 播放器功能表和播放音樂檔案。

使用  和  選擇音樂檔案，然後按  鍵。

播放音樂時：

- 按  暫停歌曲。
- 按  以跳至上一首歌曲。
- 按  以跳至下一首歌曲。
- 按 ， 返回到 MP3 播放器功能表。

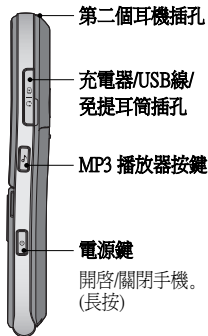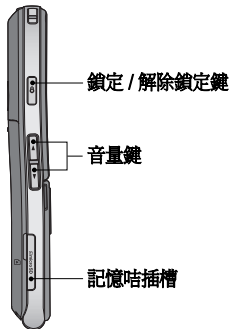

注意：第二耳機只可用來欣賞音樂 (MP3 檔案)。
(插入第二個耳機後，連接有線耳機時手機無法通話。)

插入智能咭和電池 / 記憶咭


1 取下電池蓋




2 取出電池



3 插入智能咭

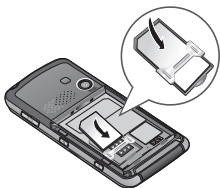

4 安裝電池

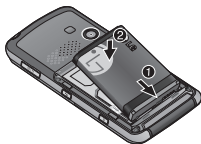

5 裝回電池蓋

6 手機充電



安裝記憶咭



功能總覽



遊戲及應用功能

- 1 遊戲
- 2 應用程式
- 3 網絡設定



通話記錄

- 1 所有通話
- 2 未接來電
- 3 已撥通話
- 4 已接來電
- 5 通話時間
- 6 通話費用
- 7 數據資訊



記事簿

- 1 日曆
- 2 備忘錄



多媒體

- 1 相機
- 2 視像攝錄機
- 3 FM 收音機
- 4 語音備忘錄



訊息

- 1 新訊息
- 2 收件匣
- 3 電郵郵箱
- 4 草稿
- 5 寄件匣
- 6 已發送
- 7 收聽留言訊息
- 8 資訊訊息
- 9 常用範本
- 0 設定



我的檔案

- 1 圖像
- 2 聲音
- 3 影片
- 4 文件
- 5 其他
- 6 外置記憶體



情景模式

- 1 標準
- 2 靜音
- 3 震動
- 4 戶外
- 5 耳機



通訊錄

- 1 搜尋
- 2 新增通訊錄
- 3 快速撥號
- 4 群組
- 5 複製全部
- 6 刪除全部
- 7 設定
- 8 資訊



工具

- 1 鬧鐘
- 2 計算機
- 3 秒錶
- 4 單位轉換器
- 5 世界時間
- 6 智能咭服務



瀏覽器

- 1 主頁
- 2 Yahoo! Go
- 3 書籤
- 4 輸入網址
- 5 記錄
- 6 已儲存網頁
- 7 設定
- 8 資訊



MP3 播放器

- 1 所有歌曲
- 2 我的播放列表
- 3 演出者
- 4 專輯
- 5 類型
- 6 隨機播放所有曲目



設定

- 1 日期及時間
- 2 語言
- 3 顯示
- 4 連接
- 5 通話
- 6 安全
- 7 飛航模式
- 8 省電
- 9 重設
- 0 記憶體狀態

通話功能

撥打電話

- 1 使用鍵盤輸入號碼。要刪除數字，請按下
- 2 按 開始通話。
- 3 要結束通話，請按

提示！ 若要在撥打國際電話時輸入「+」，請按住 0。

透過通訊錄撥打電話

- 1 按 以開啓通訊錄。
- 2 使用鍵盤輸入要通話聯絡人的首個字母。
- 3 要選擇聯絡人及其不同的號碼，請使用導覽鍵。
- 4 按 開始通話。

接聽來電和拒接來電

手機響鈴後，按接聽或按 接聽來電。

手機響鈴時，選擇**靜音**，使鈴聲靜音。如果在開會時忘記將情景模式變更為**靜音**，此方法十分有效。

按 或按拒接，拒接來電。

提示！ 您可變更手機上的設定，從而採用不同的方式接聽來電。

按**功能表**，選擇**設定**並選擇**通話**。選擇**接聽模式**並從**揭蓋開啓**、**按任何鍵**或**按發送鍵**中選擇。

變更通話設定

可設定與通話相關的功能表。按**功能表**，選擇**設定**並選擇**通話**。


檢視通話記錄

如果網絡支援服務區域內的來電線路識別 (CLI)，則您可以查看未接聽、已接聽和撥出的電話。號碼與姓名（如果有的話）會和電話的日期與時間一起顯示。您也可以查看通話時間。按**功能表**，選擇**通話記錄**。

通訊錄

搜尋通訊錄

透過此項功能，您可以搜尋通訊錄。

- 1 按**通訊錄**並選擇**搜尋**，從**功能表**屏幕選擇**通訊錄**，或從備用屏幕按 。
- 2 使用鍵盤輸入要通話聯絡人的首個字母。
- 3 要選擇聯絡人及其不同的號碼，請使用導覽鍵。

新增通訊錄

透過此項功能，您可以新增電話簿項目。

- 1 按**通訊錄**並選擇**新增通訊錄**。
- 2 選擇在**手機**或**智能咭**上儲存新通訊錄。
- 3 輸入在欄位中提供的所有資訊，並選擇**儲存**。

注意：當要儲存聯絡人電郵地址時，請按  輸入符號，並使用導覽鍵按，直到您看到 @。

訊息


KM380 包含與 SMS（文字訊息服務）、MMS（多媒體訊息服務）和電郵及藍芽訊息相關的功能。

發送訊息

- 1 按**功能表**，選擇**訊息**並選擇**新訊息**。
- 2 選擇**訊息**以發送文字訊息或多媒體訊息。
- 3 新訊息編輯器將開啓。訊息編輯器將文字訊息和多媒體訊息集中在同一個功能表中，可輕鬆在文字訊息模式和多媒體訊息模式之間切換。訊息編輯器的預設設定為文字訊息模式。
- 4 使用 T9 模式或 Abc 模式輸入您的訊息。

提示！ 當在訊息欄位中輸入的文字長度超過兩頁時，您可選擇訊息類型為文字訊息或多媒體訊息。

- 5 按**選項**並選擇**附加**，您可新增圖像、聲音、影片、符號、文字範本、情感圖示、名稱和號碼、新增投影片、標題或更多（通訊錄/我的名片/日程表）。
- 6 按**發送給**。
- 7 輸入手機號碼或按**選項**並選擇**通訊錄**開啓通訊錄清單。您可以選擇多個通訊錄。
- 8 按**發送**。

 **警告：** 若向訊息編輯器加插了**圖像、聲音、影片、投影片、標題、通訊錄、我的名片或日程表**，它將自動轉換為多媒體訊息模式，而您亦需為此支付相應費用。

輸入文字

使用手機鍵盤，您可輸入英數字元。例如，在通訊錄中儲存名稱、編寫訊息和在日曆中建立日程表，都需要輸入文字。手機中提供以下可用的文字輸入方式：T9 模式、ABC 模式和 123 模式。

注意：部份欄位只可使用一種文字輸入模式（例如通訊錄欄位中的電話號碼）。

T9 模式

T9 模式使用內置字典，識別根據按按鍵順序寫入的單字。只需按與要輸入字母關聯的數字按鍵，且只要輸入所有字母，字典便可識別要輸入的單字。

ABC 模式

此模式可讓您輸入字母，方式為按一下、兩下、三下或多下標記有所需字母的按鍵，直到所需字母出現為止。

123 模式

只要按一次按鍵即可輸入一個數字。您亦可透過按住所需按鍵在字母模式下加入數字。

相機

快速拍照

使用內置於手機的相機，可以拍攝相片或錄影。此外，你亦可以將照片發送給其他人及選擇將照片設為牆紙。

- 1 按**功能表**並選擇**多媒體**，並選擇**相機**以開啓取景器。
- 2 水平握住手機，將鏡頭對準拍照對象。
- 3 按**確認鍵**以拍攝照片。

視像攝錄機


拍攝快速影片

- 1 按**功能表**並選擇**多媒體**，並選擇**視像攝錄機**以開啓攝錄機。
- 2 將鏡頭對準拍攝對象。
- 3 按**確認鍵**以開始錄影。
- 4 **REC** 將顯示在取景器的下方中央，計時器將顯示拍攝影片的長度。
- 5 要暫停影片，請選擇**暫停**，透過選擇**繼續**以繼續。
- 6 按**停止**停止錄製。


MP3 播放器

LG KM380 具有內置的 MP3 播放器，這樣，您可播放所有喜愛的音樂。

注意：

- 音樂播放時間：長達 40 小時（在使用立體聲耳機的情況下）
- 音樂播放時間取決於網絡配置、音量、音樂內容、記憶咭類型、使用方法、電池和環境條件。
-  Gracenote 音樂辨識技術及相關資料由 Gracenote® 提供。

播放歌曲

- 1 按**功能表**並選擇**MP3 播放器**。
- 2 選擇要播放的音樂。按 **▶**。
- 3 按 **||** 暫停歌曲。
- 4 按 **▶▶** 以跳至下一首歌曲。
- 5 按 **◀◀** 以跳至上一首歌曲。
- 6 按**選項**並選擇**最少化**隱藏音樂播放器屏幕，這樣，您可在播放音樂的同時，繼續按正常情況使用手機。
- 7 按 **||** 停止音樂並按  返回到音樂功能表。

提示！ 當 MP3 曲目在 MP3 播放器上播放時，按側面的 MP3 快捷鍵後，您可使用 備用屏幕模式。在備用屏幕模式中，您可以在使用其他功能的同時播放 MP3。

FM 收音機

LG KM380 具有 FM 收音機功能，這樣，您可在外出旅途中調諧至最愛電台，收聽節目。

注意：您需要插入耳機才可收聽收音機。將插頭插入耳機插孔中（即為將充電器插入至的相同插孔）。

收聽收音機

- 1 按**功能表**並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 選擇要收聽電台的頻道號。

注意：您可以透過內置喇叭收聽電台節目。按**選項**，選擇**收聽透過 - 揚聲器**(需插入耳機)。

語音備忘錄

使用**語音備忘錄**錄製語音備忘錄或其他聲音。

錄製語音備忘錄

- 1 按**功能表**並選擇**多媒體**，然後選擇**語音備忘錄**。
- 2 按 **●** 開始錄製。
- 3 選擇**暫停**暫停錄製。
- 4 選擇**停止**結束錄製。
- 5 選擇 **▶** 收聽錄製聲音。

注意：透過選擇**影集**，您可收聽已儲存的所有錄音。

我的檔案

您可將多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖像、聲音、影片和文件。您亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。所有的多媒體檔案將儲存在**我的檔案**中。按**功能表**，然後選擇**我的檔案**，以開啟資料夾清單。

遊戲及應用功能

KM380 手機提供有預載遊戲，可讓您在休閒時娛樂。如果您選擇下載任何其他遊戲或應用功能，下載的遊戲或應用功能將儲存在此資料夾中。按**功能表**並選擇**遊戲及應用功能**。

記事簿 / 工具

日曆 (功能表 > 記事簿 > 日曆)

您可以在日曆中新增日程表及編輯日曆事件。

新增備忘錄 (功能表 > 記事簿 > 備忘錄)

您可以建立備忘錄列表。

設定鬧鐘 (功能表 > 工具 > 鬧鐘)

您可以設定鬧鐘，讓其在指定時間發出響鬧。您最多可設定 5 個鬧鐘。

使用計算機 (功能表 > 工具 > 計算機)

計算機中包括標準功能，如 +、-、x、÷：加、減、乘和除。

使用秒錶 (功能表 > 工具 > 秒錶)

您可以使用秒錶。

轉換單位 (功能表 > 工具 > 單位轉換器)

此功能可將任何測量數據轉換至所需的單位。

新增城市至世界時間 (功能表 > 工具 > 世界時間)

您可以查看格林威治平時 (GMT) 及世界主要城市目前的時間。

智能咭服務 (功能表 > 工具 > 智能咭服務)

此功能取決於智能咭和網絡服務。如果智能咭支援 SAT (即 SIM 應用程式工具集) 服務，本功能表將出現智能咭上儲存之網絡商服務名稱。

瀏覽器

存取網絡

連線至主頁。主頁將為於啟動網絡設定中定義的站點。如果您尚未在啟動網絡設定中定義，則它將由服務供應商定義。您可直接連線至所需的站點。

- 1 按**功能表**並選擇**瀏覽器**。
- 2 要直接存取瀏覽器主頁，請選擇**主頁**。或者，選擇**輸入網址**並鍵入所需的網址，然後按**連接**。

注意：連線至此服務和下載內容，需另行收費。請向網絡供應商諮詢資料費用。


Yahoo! Go

要存取 Yahoo! Go 服務，請按**功能表**並依次選擇**瀏覽器**和 **Yahoo! Go**。

提示！ 在部份地區或國家，您可能無法存取 **Yahoo! Go**。具體取決於網絡服務。

設定

變更您的情景模式

您可以從備用屏幕快速變更您的情景模式。只需要按 ，然後選擇要啓用的情景模式。從以下選項中選擇：標準、靜音、震動、戶外。

變更您的日期及時間 (功能表 > 設定 > 日期及時間)

您可設定與日期和時間相關的功能。

變更語言 (功能表 > 設定 > 語言)

您可變更屏幕手機中文字的語言。這亦會影響語言輸入模式。

變更您的顯示設定 (功能表 > 設定 > 顯示)

您可變更您的顯示設定。

變更安全設定 (功能表 > 設定 > 安全)

變更安全設定，保護 KM380 和手機中重要資訊的安全。

- **手機遺失追蹤** - 如果手機被盜，手機會向真正所有者配置的號碼發送文字訊息。使用者必須在 ATMT 設定中指定名稱、主要電話號碼以及次要電話號碼。預設 ATMT 代碼是「0000」。ATMT SMS 包含這些資料：被盜手機的 IMEI、目前所在位置及目前正在使用此手機的使用者的電話號碼。
- **PIN 碼要求** - 選擇開啓手機時，需要輸入密碼。
- **自動按鍵鎖** - 如果啓動此功能，在備用模式下，沒有進行按鍵操作，系統將會自動鎖定按鍵。

- **手機鎖** - 在以下狀態下選擇安全密碼鎖定您的手機：**在開機時、智能咭更換時或立即**。
- **通話限制** - 選擇何時限制通話。
- **固定撥號號碼** - 選擇可從您的手機撥出的號碼清單。您需要從您的網絡商處得到一個PIN2碼。僅固定撥號清單中包含的號碼可從手機撥出。
- **更改密碼** - 變更您的**安全密碼、PIN1碼、PIN2碼**或手機追蹤密碼。

使用飛航模式 (功能表 > 設定 > 飛航模式)

使用此功能，**開啓**或**關閉**飛航模式。**開啓飛航模式**後，您將無法撥打電話，連接到互聯網，發送訊息或使用藍芽。

省電 (功能表 > 設定 > 省電)

如果設定為始終開啓，您便可以在不使用手機時節省電池電量。選擇以便在省電設定永遠開啓、僅夜間或關閉間切換。

重設手機 (功能表 > 設定 > 重設)

使用**重設**，將所有設定重設為原廠定義。您需要安全密碼，才能啓用此功能。

檢視記憶體狀態 (功能表 > 設定 > 記憶體狀態)

KM380 手機具有三種可用記憶體：手機、智能咭和外置記憶體（您可能需要另行購買記憶咭）。您可以使用記憶體狀態查看可用的空間。

變更連線設定 (功能表 > 設定 > 連接)

您的網絡商已經為您設定連線設定，因而，您可以立即享用您的新手機。若要變更任何設定，請使用此功能表。

您可以在此功能表中配置網絡設定及數據存取設定檔。

- **藍芽** - 設定 KM380 以使用藍芽。您可調整是否向其他裝置顯示您的手機，或搜尋其他裝置。
- **網絡** - 您的 KM380 會自動連線至您的首選網絡。使用此功能表可變更這些設定。您亦可以使用此功能表來新增接入點。
- **USB 連接模式** - 選擇**數據服務**並透過 LG PC Suite 軟件同步您的 KM380，藉此複製您手機中的檔案。若您已插入記憶咭，選擇**大容量儲存**，可將手機用作 USB 記憶棒。連接電腦，並將檔案拖放至 KM380 可移除裝置資料夾。

注意： 要使用 USB 大容量儲存功能，您需要在手機中插入外置記憶咭。

安全及有效使用的指引

請閱讀以下簡易的使用準則。違反這些準則可能會發生危險或觸犯法律。詳細資訊刊於本用戶手冊的正文部份。

警告

- 在飛機上必須始終關閉手機。
- 駕車時請勿手持手機。
- 請勿在加油站、燃料庫、化工廠或爆破工程附近使用您的手機。
- 僅請使用原裝的電池與充電器，以策安全。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

注意

- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。
- 僅請使用原裝配件，以免損壞手機。
- 所有無線電收發器均有可能干擾附近的電子裝置。輕微干擾可影響電視、收音機、個人電腦等。
- 請根據相關法例來處理棄置的電池。
- 請勿拆開手機或電池。
- 若使用類型不當的電池，則有發生爆炸的危險。

請閱讀以下簡易的使用準則。違反這些準則可能會發生危險或觸犯法律。詳細資訊刊於本用戶手冊的正文部份。

無線電波暴露準則

無線電波暴露及比吸收率 (SAR) 資訊

本手機型號 KM380 已為遵守無線電波暴露的應用安全要求而設計。此要求根據包括專為確保任何年齡、任何健康狀況的所有人士安全而設的安全極限的科學指引。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會(ICNIRP) 建議的 SAR 限制，即平均十 (10) 克組織 2 W/Kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.669 W/Kg (10g)，攜帶於身上時則為 0.932 W/Kg (10g)。
- 採用了電氣與電子工程師學會(IEEE) 建議 SAR 限制 (即平均一(1) 克組織 1.6 W/Kg) 的國家/地區居民的 SAR 數據資訊 (如美國、加拿大、澳洲及臺灣)。

產品護理及維修

警告！

僅請使用經認可用於此特定手機型號的電池、充電器及配件。使用其他種類可能使手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 遠離電子裝置，如電視、無線電或個人電腦。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 切勿將手機放入微波爐中，這會導致電池爆炸。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 如果手機被覆蓋物或乙烯基包裹布所覆蓋，手機的外層可能會被損毀。
- 請勿使用刺鼻的化學物品（如酒精、苯、稀釋劑等等）或清潔劑來清潔手機。這可能有失火的危險。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 小心使用如耳機與聽筒一類的配件。確保纜線安全捲起，如無必要，切勿觸及天線。
- 開機前，請拔除數據線。

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上（即您的胸口袋）。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

馬路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提聽筒套件，請使用免提聽筒套件。
- 若有駕駛條例限制，請駛離馬路並停泊好汽車後再撥打或接聽電話。
- RF 能量可能影響您的汽車內某些電子系統，如汽車立體音響裝置、安全設備。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。有可能因使用不當而造成嚴重損傷。

如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在過馬路時尤為必要。

避免損害聽力

如果長時間以較大音量收聽，可能會對聽覺造成損害。因此我們建議您不要在耳邊開啓或關閉手機。我們亦建議將音樂及通話音量設定至合適水平。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。請勿在燃料或化學物質旁使用。
- 請勿在車內擺放手機和配件的位置，運送或儲藏易燃氣體、液體或爆炸物。

在飛機

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。

技術資料

一般

產品名稱 : KM380

系統 : GSM 900 / DCS 1800 /
PCS 1900

環境溫度

最高 : +55°C (放電)
+45°C (充電)

最低 : -10°C

Bluetooth QD ID B013827

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM380

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

29. FEB. 2008

European Standard Center
LG Electronics Logistics and Services B.V.
Vekweezoom 15, 1327 AE Almere, The Netherlands
Tel : +31-36-547-8940, Fax : +31-36-547-8794
e-mail : jacob @ lge.com


Signature of representative

丨 KM380 丨 用户手册

此指南有助于您了解您的新手机。

有关详细信息，请参阅随附的 CD 中提供的用户指南。

视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。




内容


开始了解您的手机	3	FM 收音机	13
安装 SIM 卡和电池 / 存储卡	5	语音备忘录	
菜单地图	6	我的文档	14
通话	7	游戏和应用程序	
拨打电话		公文包 / 工具	
从电话簿拨打电话		浏览器	15
接听和拒绝电话		设置	16
更改通话设置		更改情景模式	
查看通话记录	8	更改日期和时间	
电话簿		更改语言	
搜索		更改显示设置	
新联系人		更改保安设置	17
信息	9	使用飞行模式	
发送信息		节省电源	
输入文本	10	重设手机	18
相机	11	查看内存状态	
录像机		更改连接设置	
MP3 播放器	12	关于安全有效使用手机的准则	19
		技术参数	25




开始了解您的手机

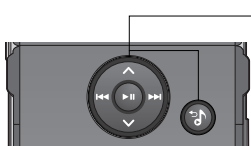








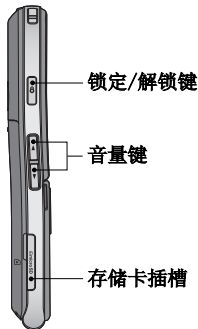
MP3 播放器键

在合盖状态下，您可以按  此键听音乐文件。

按 ， 选择您要播放的歌曲，然后按  播放。

播放音乐时：


- 按  暂停歌曲。
- 按  以跳到上一首歌曲。
- 按  以跳到下一首歌曲。
- 按 ,  以停止音乐并返回音乐菜单。



锁定/解锁键

音量键

存储卡插槽

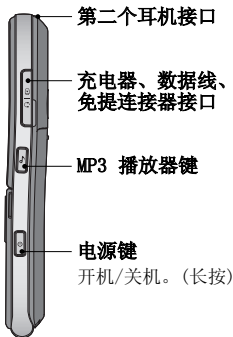

第二个耳机接口

充电器、数据线、
免提连接器接口

MP3 播放器键

电源键
开机/关机。(长按)

备注：第二个耳机仅可用于听歌（MP3）。
(插入第二个耳机时，无法使用无线耳机通话。)

安装 SIM 卡和电池 / 存储卡


1 卸下电池盖



2 取出电池



3 安装 SIM 卡

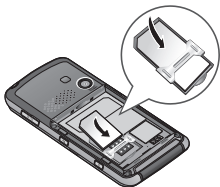

4 安装电池



5 更换电池盖

6 充电



安装存储卡



菜单地图



游戏和应用程序

- 1 游戏
- 2 应用程序
- 3 网络设置文件



通话记录

- 1 所有通话
- 2 未接来电
- 3 拨电
- 4 已接来电
- 5 通话时间
- 6 通话费用
- 7 数据资料



记事本

- 1 日历
- 2 备忘录



多媒体

- 1 照相机
- 2 录像机
- 3 FM 收音机
- 4 录音机



信息

- 1 新信息
- 2 收件箱
- 3 电邮箱
- 4 草稿箱
- 5 发件箱
- 6 已发送
- 7 收听语音邮件
- 8 小区广播信息
- 9 模板
- 0 设置



我的文档

- 1 图像
- 2 声音
- 3 视频
- 4 文件
- 5 其它
- 6 外部存储卡



情景模式

- 1 通用
- 2 静音
- 3 仅振动
- 4 户外
- 5 耳机



电话簿

- 1 搜索
- 2 新联系人
- 3 快速拨号
- 4 群组
- 5 全部复制
- 6 全部删除
- 7 设置
- 8 资料



工具

- 1 闹钟
- 2 计算器
- 3 秒表
- 4 单位对换器
- 5 世界时钟
- 6 SIM 卡服务



浏览器

- 1 主页
- 2 雅虎! GO
- 3 书签
- 4 输入网址
- 5 网页浏览记录
- 6 已保存的页面
- 7 设置
- 8 资料



MP3 播放器

- 1 所有歌曲
- 2 我的播放列表
- 3 歌手/艺人
- 4 专辑
- 5 风格
- 6 随机播放所有歌曲



设置

- 1 日期和时间
- 2 语言
- 3 显示
- 4 连接性
- 5 呼叫
- 6 保安设置
- 7 航行模式
- 8 节省电源
- 9 重新设置
- 0 存储器状态





通话

拨打电话


- 1 使用键盘键入号码。要删除一个数字，请按 。
- 2 按  开始通话。
- 3 要结束通话，请按 。

提示！要输入 + 以拨打国际电话，请按住 0。

从电话簿拨打电话

- 1 按  以打开电话簿。
- 2 使用键盘输入您要呼叫的联系人的第一个字母。
- 3 要在联系人及其不同电话号码间选择，请使用  和 。
- 4 按  启动通话。

接听和拒绝电话

电话响后，按接受或按  应答来电。

电话响后，选择静音以静音。如果您在开会时忘记将情景模式更改为静音，这非常有帮助。

按  拒接来电。

提示！您可以更改手机上的设置以不同方式接听来电。

按**菜单**，选择**设置**，然后选择**呼叫**。选择**接听模式**，从**翻盖**、**按任何键**或**仅用发送键**中选择。

更改通话设置

您可以设定与通话相关的菜单。按**菜单**，选择**设置**，然后选择**呼叫**。




查看通话记录

仅当网络支持服务区内的线路识别(CLI)时,您才能查看未接来电、已接来电和拨电记录。屏幕上将显示电话号码和姓名(如果有)以及通话日期和时间。您还可以查看通话持续时间。按**菜单**,选择**通话记录**。

电话簿

搜索




您可以在电话簿中搜索联系人。

- 1 按**电话簿**,选择**搜索**,然后从**菜单**屏幕选择**电话簿**或从待机屏幕选择 .
- 2 使用键盘输入您要呼叫的联系人的第一个字母。
- 3 要在联系人及其不同电话号码间滚动,请使用  和 .

新联系人

使用此菜单,您可以添加新联系人。

- 1 按**电话簿**,然后选择**新联系人**。
- 2 选择是将新联系人保存到**手机**还是 **SIM 卡**。
- 3 在提供的字段中输入所有信息,然后选择**保存**。

备注: 保存联系人的电子邮件地址时,按  输入符号,使用  和  滚动,直到看到 @。

信息


KM380 包含与短信（短信服务）、多媒体信息（多媒体信息服务）、电子邮件，以及网络服务消息相关的功能。

发送信息

- 1 按**菜单**，选择**信息**，然后选择**新信息**。
- 2 选择**信息**以发送短信或多媒体信息。
- 3 此时将打开新信息编辑器。信息编辑器是一款直观易用的工具，它将短信和彩信组合在一起，可在短信模式和彩信模式间轻松切换。信息编辑器的默认设置为短信模式。
- 4 使用 T9 预测模式或 Abc 手动模式输入信息。

提示! 当您在信息字段中输入的文本超过 2 页时，您可以选择是将短信还是彩信作为信息类型。

- 5 按**选项**，然后选择**插入**以添加**图像、声音、视频、符号、文本模板、图释、姓名和号码、新幻灯片、主题**或**更多**（**电话簿/我的名片/日程表**）。
- 6 按**收件人**。
- 7 输入电话号码，或按**选项**并选择**电话簿**以打开联系人列表。您可以添加多个联系人。
- 8 按**发送**。

 **警告:** 如果在信息编辑器中添加了**图像、视频、视频、新幻灯片、主题、电话簿、我的名片**或**日程表**，将自动转换到彩信模式，您将需要支付相应的费用。

输入文本

您可以使用手机键盘输入字母数字字符。例如，在电话簿中存储姓名、写短信、在日程表中安排事件等，都需要输入文本。手机中可以使用以下文本输入法：T9 预测模式、ABC 手动模式和 123 模式。

备注：某些字段可能只允许以一种文本输入模式输入（如在地址簿字段输入电话号码）。

T9 预测模式

T9 预测模式使用内置字典，根据您按键的顺序识别您写入的内容。只需按与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。

ABC 手动模式

在此模式中，输入字母时，按标记着所需字母的键一次、两次、三次或更多，直到显示该字母。

123 模式

以每个数字一次击键的方式输入数字。在字母模式下，通过按住相应按键，也可以输入数字。

相机

快速拍照

使用手机内置的相机模式，您可以拍摄人物照片。此外，您可以将照片发送给其他人，或将照片用作墙纸。

- 1 按菜单，选择多媒体，向下滚动并选择照相机以打开取景器。
- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 对准要拍摄的对象，按 OK 键。

录像机

快速摄像


您可以录制和保存视频剪辑。

- 1 按菜单，选择多媒体，向下滚动并选择摄像机以打开取景器。
- 2 将相机镜头对准要拍摄的物体。
- 3 要开始录音，请按 OK 键。
- 4 **REC** 出现在取景器的下角中间，计时器将显示视频长度。
- 5 要暂停视频，请按**暂停**，要恢复录制，请选择**恢复**。
- 6 按**停止**可以停止录制。







MP3 播放器

LG KM380 拥有内置的音乐播放器，因此，您可以播放所有喜爱的音乐。

备注：

- 音乐的最长播放时间可达40个小时(仅使用耳机听音乐时)。
- 音乐的实际播放时间受网络、音量、单曲长短、SD卡种类、使用模式、电池及周围环境等的影响。
-  Gracenote 音乐识别技术及相关数据由 Gracenote® 提供。

播放歌曲

- 1 按**菜单**，选择 **MP3 播放器**。
- 2 选择要播放的歌曲。按 。
- 3 按  暂停歌曲。
- 4 按  以跳到下一首歌曲。
- 5 按  以跳到上一首歌曲。
- 6 按**选项**、“**最小化**”隐藏音乐播放器屏幕，这样，在音乐播放时，您可以像往常一样使用手机。
- 7 选择 ， 以停止音乐并返回音乐菜单。

提示！ 如果您在 MP3 播放器正在播放 MP3 曲目时按 MP3 短键，或按**选项**并选择**最小化**，就可以使用 BGM 模式。在 BGM（背景音乐）模式中，您可以在使用其它功能时同时播放 MP3。BGM 可以在 MP3 播放器屏幕上停止。

FM 收音机

LG KM380 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

备注：要收听收音机，您需要插入耳机。将耳机插入耳机插槽（与插入充电器的插槽相同）。

收听收音机

- 1 按**菜单**，然后选择**电话簿**。
- 2 选择 **FM 收音机**。
- 3 选择您要收听的电台的频道编号。

备注：您可以通过内置扬声器收听收音机。按选项，选择收听方式，然后选择扬声器。

语音备忘录

使用**语音备忘录**录制语音备忘录或其它声音。

录制语音备忘录

- 1 按**菜单**，选择**多媒体**，然后选择**录音机**。
- 2 按 **●** 开始录音。
- 3 选择**暂停**暂停录音。
- 4 选择**保存**结束录音。
- 5 选择 **▶** 收听录音。

备注：选择**选项**，然后选择**声音**可以收听保存的所有语音备忘录。

我的文档

您可以将任意多媒体文件存储到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。所有多媒体文件保存在**我的文档**中。按**菜单**，然后选择**我的文档**以打开文件夹列表。

游戏和应用程序

KM380 中预安装了多款游戏，供您在闲暇时娱乐。如果选择要下载其它游戏或应用程序，它们将保存到此文件夹中。按**菜单**，然后选择**游戏和应用程序**。

公文包 / 工具

日程表（ 菜单 > 记事本 > 日历 ）

您可添加和修改日程表，还可设定闹钟定时提醒。

添加备忘录（ 菜单 > 记事本 > 备忘录 ）

您可以创建备忘录。

设置闹钟（ 菜单 > 工具 > 闹钟 ）

您可以将闹钟设为在指定时间响铃。

使用计算器（ 菜单 > 工具 > 计算器 ）

该功能包含的标准功能包括 +、-、×、÷。

使用秒表（菜单 > 工具 > 秒表）

计时表与日常生活中看到的和使用的计时表用法相似。

换算单位（菜单 > 工具 > 单位对换器）

该功能可执行货币单位的转换。

向世界时间添加城市（菜单 > 工具 > 世界时钟）

允许您确定另一个国家或地区的当前时间。

SIM 卡服务（菜单 > 工具 > SIM 卡服务）

此功能视 SIM 卡和网络服务而定。如果 SIM 卡支持 SAT（即，SIM 卡应用程序套件）服务，则此菜单将是 SIM 卡上存储的运营商特定服务的名称。

浏览器

访问网页

连接到主页。主页是在已启动的网络设定中定义的站点。如果您未在已启动的网络设定中定义该站点，则将由服务提供商定义。您可以直接连接到所要的站点。

- 1 按**菜单**，然后选择**浏览器**。
- 2 要直接访问浏览器主页，请选择**主页**。或者，选择**输入地址**并键入所需的 URL，然选择**连接**。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

雅虎! Go


您可以连接到 **雅虎! Go** 服务。

要访问 **雅虎! Go** 服务, 请按菜单, 选择浏览器, 然后选择 **雅虎! Go**。

提示! 在某些国家/地区, 您无法访问 **雅虎! Go**。具体取决于网络服务。

设置

更改情景模式

您可以在待机屏幕上快速更改情景模式。按 , 然后按您要激活的情景模式。从**普遍、静音、仅振动、户外**中选择。

更改日期和时间 (菜单 > 设置 > 日期和时间)

您可以设置与日期和时间相关的功能。

更改语言 (菜单 > 设置 > 语言)

转到**设置**, 选择**语言**以更改手机中任意文本的语言。此更改还将改变语言输入模式。

更改显示设置 (菜单 > 设置 > 显示)

您可以更改手机显示的设置。

更改保安设置（菜单 > 设置 > 保安设置）

更改保安设置以保护 KM380 及重要信息。

- **防盗手机追踪器** - 一旦被盗，手机将发送一条短信至真正的手机主人所配置的号码。用户需要配置 ATMT 设置，包括名称、主电话号码、次电话号码。默认 ATMT 码为“0000”。ATMT 短信将包含有关被盗手机的相关信息：IMEI 号、目前使用该手机的人所在的位置和所用的号码。
- **PIN 码要求** - 在此菜单中，您可以将手机设定为开机时要求输入 SIM 卡的 PIN 码。如果启动此功能，手机将要求您输入 PIN 码。
- **自动键盘锁** - 如果激活此功能，待机模式下无需任何按键操作即会自动锁定键盘。
- **手机锁** - 为以下选项选择安全码以锁定手机：**开机时**、**更换 SIM 卡时**或**立即**。
- **呼叫阻截** - 选择何时限制呼叫。
- **固定拨号号码** - 选择可从此手机拨出的号码列表。
- **更改密码** - 更改您的**安全码**、**PIN1 码**或**PIN2 码**。

使用飞行模式（菜单 > 设置 > 航行模式）

使用此功能，将飞行模式设为**开**或**关**。**飞行模式**被设为**开**时，您将无法拨打电话、连接互联网、发送信息或使用蓝牙。

节省电源（菜单 > 设置 > 节省电源）

选择开启或关闭初始的省电设置。如果设置为始终打开，可以在不使用手机时节省用电。选择省电设置：**始终打开**、**仅夜间**或**关**。

重设手机（ 菜单 > 设置 > 重新设置 ）

使用**重设**将所有设置重置到其出厂设置。要启动此功能，您需要安全密码。

查看内存状态（ 菜单 > 设置 > 存储器状态 ）

KM380 有三种可用存储器：手机、SIM 卡和外部存储卡（您可能需要单独购买存储卡）。您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

更改连接设置（ 菜单 > 设置 > 连接性 ）

网络运营商已为您设置连接设置，因此，您开机即可使用手机。

如果要更改设置，请使用此菜单。

- **蓝牙** - 设置 KM380 以使用蓝牙。您可以调整对其它设备的可见性，或搜索您可以与之配对的设备。
- **网络** - KM380 将自动连接到首选网络。要更改这些设置，请使用此菜单。您也可以使用此菜单添加新的接入点。
- **USB 连接** - 选择**数据服务**并使用 LG PC 套件软件同步 KM380 以复制手机中的文件。如果您已插入内存卡，请选择**批量储存**，以与插入 USB 记忆棒时使用手机的相同方式来使用手机。连接计算机，将文件拖放到 KM380 可移动设备文件夹。

备注：要使用批量储存功能，您需要在手机中插入外部存储卡。

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

警告

- 在飞机上请务必关闭手机。
- 驾驶时请勿持握手机。
- 请勿在加油站、加油点、化工厂或爆破区附近使用手机。
- 为了您的安全，请仅使用指定的原装电池和充电器。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。
- 如果手机置于柔软物体之上，请不要充电。应将手机放在完全通风的位置充电。

警告

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。
- 并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。
- 仅使用原装配件，以免损坏您的手机。
- 所有的无线电发射器都有对近距离内的电子干扰的危险。微弱的干扰可能会影响电视、收音机、个人计算机等。
- 应按照相关条例处置电池。
- 请勿拆卸手机或电池。

暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR) 信息

此款 KM380 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会(ICNIRP) 建议的 SAR 上限值为 2W/kg，平均值超过十(10)克薄纸。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.669 W/kg (10克)，戴在身体上时，其值为 0.932 W/kg (10 克)。
- 电气电子工程师协会(IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过一(1)克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告！

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向当地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。

技术参数

标准

产品名称: KM380

系统: GSM 900 / DCS 1800 /
PCS 1900

外部环境

最高温度: +55° C (放电)、
+45° C (充电)

最低温度: -10° C

Bluetooth QD ID B013827

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri-Band Terminal Equipment

Model Name

KM380

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives.

Name

Issued Date

Seung Hyoun, Ji / Director

29, FEB, 2008

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel. : +31-36-547-8940, Fax : +31-36-547-8794
e-mail : jacob@lge.com

Signature of representative

|| KM380 || User Guide

This guide will help you understand your new mobile phone.
For more details, please refer to the user guide in the supplied CD.
Some of the contents in this manual may differ from your phone
depending on the software of the phone or your service provider.



Contents

Getting to know your phone	3	FM radio	13
Installing the SIM and battery / Memory card	5	Voice recorder	
Menu map	6	My stuff	14
Calls	7	Games and Apps Organiser / Tools	
Making a call		Browser	15
Making a call from your contacts		Settings	16
Answering and rejecting a call		Changing your profiles	
Changing the call settings		Changing your date & time	
Viewing your call logs	8	Changing the language	
Contacts		Changing your display settings	
Searching for a contact		Changing your security settings	
Adding a new contact		Using flight mode	17
Messaging	9	Power save	
Sending a message		Resetting your phone	18
Entering text	10	Viewing memory status	
Camera	11	Changing your connectivity settings	
Video camera		Guidelines for safe and efficient use	19
MP3 Player	12	Technical data	25

Getting to know your phone

Earpiece

Main screen

Soft keys

Performs the function indicated at the bottom of the display.

Confirm key

Selects menu options and confirms actions.

Call key

Dials a phone number and answers incoming calls.

Navigation keys

Use for quick access to phone functions.


Clear/End Key

Deletes a character with each press. Use this key to go back to the previous screen.
Ends or rejects a call.


Alpha numeric keys




These keys are used to dial a number in standby mode or to enter numbers or characters in edit mode.

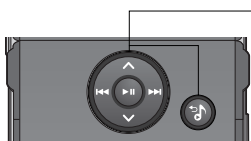








MP3 Player keys

When the flip is closed, access the MP3 player menu and play the music file by using .

From the list select the music file by using  and , then press  key.

While playing music:

- Press  to pause the song.
- Press  to skip to the previous song.
- Press  to skip to the next song.
- Press  to stop the music and press  to return to the music menu.



Lock/Unlock key

Volume key

Micro SD memory card slot



Second headset connector

Headset/Charger/
USB Cable connector

MP3 player key

Power key

Turns the phone on/off.
(hold down)

Note: Second headset can be used for listening sounds(MP3) only.

(When the second headset is inserted, phone call is not available with wired headset.)

Installing the SIM and battery / Memory card


1 Remove the battery cover.




2 Remove the battery.



3 Install the SIM card.

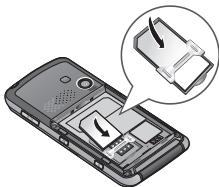

4 Install the battery.

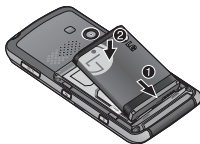

5 Replace the battery cover.

6 Charging your phone.



Installing a memory card



Menu map



Games & Apps

- 1 Games
- 2 Applications
- 3 Network profiles



Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



Organiser

- 1 Calendar
- 2 Memo



Multimedia

- 1 Camera
- 2 Video camera
- 3 FM radio
- 4 Voice recorder



Messaging

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Drafts
- 5 Outbox
- 6 Sent
- 7 Listen to voicemail
- 8 Info messages
- 9 Templates
- 0 Settings



My stuff

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Documents
- 5 Others
- 6 External memory



Profiles

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



Tools

- 1 Alarm clock
- 2 Calculator
- 3 Stopwatch
- 4 Unit converter
- 5 World clock
- 6 SIM services



Browser

- 1 Home
- 2 Yahoo! Go
- 3 Bookmarks
- 4 Enter address
- 5 History
- 6 Saved pages
- 7 Settings
- 8 Information



MP3 player

- 1 All songs
- 2 My playlist
- 3 Artists
- 4 Albums
- 5 Genres
- 6 Shuffle all songs






Settings

- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Connectivity
- 5 Call
- 6 Security
- 7 Flight mode
- 8 Power save
- 9 Reset
- 0 Memory status





Calls

Making a call


- 1 Key in the number using the keypad. To delete a digit press .
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold **0**.


Making a call from your contacts

- 1 Press  (when home screen short cut is on) to open the address book.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 To scroll through the contacts and their different numbers use  and .
- 4 Press  to initiate the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing, select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. To choose different answer mode, press **Menu**, select **Settings** and choose **Call** then **Answer mode** and choose from **Flip open**, **Any key** or **Send key only**.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call**.




Viewing your call logs

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call durations. To view call log, press **Menu**, select **Call history**.

Contacts

Searching for a contact




You can search for a contact in your contacts.

- 1 Press **Contacts** and choose **Search**, select **Contacts** from the **Menu** screen or press  from the standby screen.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, to find the contact - Office, press **6** three times.
- 3 To scroll through the contacts and their different numbers use  and .

Adding a new contact

You can add a new contact in your contacts.

- 1 Press **Contacts** and choose **New contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

Note: When you are storing a contact's email address, press  to enter a symbol and scroll with  and  until you see special characters.

Messaging


Your KM380 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), email and Bluetooth, as well as the network's service messages.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between SMS mode and MMS mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using either the T9 predictive mode or Abc manual mode.

TIP! You can select your message type as SMS or MMS when you enter a text longer than 2 pages in the message field.

- 5 Press **Options** and choose **Insert** to add an **Image, Sound, Video, Symbol, Text template, Emoticon, Name & Number, New slide, Subject** or **More (Contact/My business card/Schedule)**.
- 6 Press **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Press **Send**.

 **WARNING:** If an **Image, Sound, Video, New slide, Subject, Contact, My business card** or **Schedule** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone:

T9 predictive mode, ABC/Abc/abc manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers whilst remaining in letter modes by pressing and holding the desired key.

Camera

Taking a quick photo

Using the camera module built in your phone, you can take pictures of people. Additionally, you can send images to other people and select images as wallpaper.

- 1 Press **Menu** and select **Multimedia**, select **Camera** to open the viewfinder.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press the centre soft key to take a photo.

Video camera

Shooting a quick video


You can record and save a video clip.

- 1 Press **Menu** and select **Multimedia**, scroll down and select **Video camera** to open the viewfinder.
- 2 Point the camera lens towards the subject of the video.
- 3 Press the centre soft key to start recording.
- 4 **REC** will appear in the bottom centre of the viewfinder and a timer will show the length of your video.
- 5 To pause the video press **Pause** and resume by selecting **Resume**.
- 6 Press **Stop** to stop recording.







MP3 Player

Your LG KM380 has a built-in MP3 player so you can play all your favourite music.

Note:

- Music Play time: Up to 40hrs (when using the stereo headset)
- Actual Music play time will depend on network configuration, volume level, music contents, SD card type, usage patterns, battery and environmental conditions.
-  gracenote Music recognition technology and related data are provided by Gracenote®.

Playing a song

- 1 Press **Menu** and select **MP3 Player**.
- 2 Choose **All songs** then select the song you want to play. Press .
- 3 Press  to pause the song.
- 4 Press  to skip to the next song.
- 5 Press  to skip to the previous song.
- 6 Select **Options**, **Minimise** to hide the music player screen so that you can continue using your phone as normal while music is playing.
- 7 Select  and  to stop the music and return to the MP3 player menu.

TIP! When an MP3 track is playing on the MP3 player, if you press the MP3 short key, you can use BGM mode. In BGM (Background Music) mode MP3 can be played while other functions are being used. BGM can be stopped on the MP3 player screen.

FM radio

Your LG KM380 has an FM radio feature so you can tune into your favourite stations to listen on the move.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

Listening to the radio



- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

Note: You can listen to the radio via built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.

Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Multimedia**, then choose **Voice recorder**.
- 2 Press  to begin recording.
- 3 Select **Pause** to pause the recording.
- 4 Choose **Stop** to end the recording.
- 5 Select  to listen to the recording.

Note: You can listen to all of the voice recordings you have saved by selecting **Options** and **Album**.

My stuff

You can store any multimedia files into your phone's memory so that you have easy access to all of your images, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **My stuff**. Press **Menu** then select **My stuff** to open a list of folders.

Games and Apps

Your KM380 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press **Menu** and select **Games & Apps**.

Organiser / Tools

Using the calendar (Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Adding a memo (Menu > Organiser > Memo)

You can register your own memos here.

Setting your alarm (Menu > Tools > Alarm clock)

You can set up to 5 alarm clocks to go on at a specified time.

Using your calculator (Menu > Tools > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Using the stopwatch (Menu > Tools > Stopwatch)

This option allows you to use the function of a stopwatch.

Converting a unit (Menu > Tools > Unit converter)

This converts many measurements into a unit you want.

Adding a city to your world clock (Menu > Tools > World clock)

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world.

SIM services (Menu > Tools > SIM services)

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Browser

Accessing the web

You can launch the web browser and access the homepage of the activated profile on browser settings. You can also manually enter an URL address and access the associated web page.

- 1 Press **Menu** and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately, select **Enter address** and type in your desired URL, followed by **Connect**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Yahoo! Go



You can access Yahoo Mobile Internet Service.

To access **Yahoo! Go** services, press **Menu** and select **Browser** then **Yahoo! Go**.

TIP! You may be unable to access **Yahoo! Go** in some countries. This is dependent on Network Services.

Settings

Changing your profiles

You can quickly change your profile from the standby screen. Simply press  then the profile you would like to activate. Choose from () **General, Silent, Vibrate only, Outdoor.**

Changing your date & time (Menu > Settings > Date & Time)

You can set functions relating to the date and time.

Changing the language (Menu > Settings > Language)

You can change the language for the display texts in your phone. This change will also affect the language input mode.

Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

Changing your security settings (Menu > Settings > Security)

Change your security settings to keep your KM380 and the important information it holds protected.

- **Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with name, primary phone number, secondary number. User has to Set ATMT ON to activate the ATMT feature. Default ATMT code is "0000". ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.
- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Auto key lock** - If you activate this function, the key will be locked automatically in standby mode without requesting the action of key when flip is closed.
- **Phone lock** - Choose a security code to lock your phone, **When power on, When SIM changed or Immediately.**
- **Call barring** - Select when you would like calls to be barred.
- **Fixed dial number** - Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.
- **Change codes** - Change your **Security code, PIN1 code, PIN2 code or ATMT code.**

Using flight mode (Menu > Settings > Flight mode)

Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the Internet, send messages or use Bluetooth when **Flight mode** is switched **On**.

Power save (Menu > Settings > Power save)

If you set **Always on**, you can save the battery power when you don't use the phone. Choose to switch the power save settings **Always on, Night only or Off**.

Resetting your phone (Menu > Settings > Reset)

Use **Reset** to reset all the settings to their factory definitions. You need the security code to activate this function. The default number is "0000".

Viewing memory status (Menu > Settings > Memory status)

Your KM380 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately). You can use the memory manager to determine how much each memory is used and see how much space is available.

Changing your connectivity settings (Menu > Settings > Connectivity)

Your connectivity settings have already been set up by your network operator. If you want to change any settings, use this menu.

You can configure the network setting and data access profiles in this menu.

- **Bluetooth** - Setup your KM380 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.
- **Network** - Your KM380 connects automatically to your preferred network. To change these settings use this menu. You can also add new access points using this menu.
- **USB connection** - Choose **Data service** and synchronise your KM380 using the LG PC Suite software to copy files from your phone. If you have a memory card inserted, select **Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the KM380 removable device folder.

Note: To use the USB mass storage function, you will need to insert an external memory card in your phone.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

WARNING

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use **ONLY** specified **ORIGINAL** batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

CAUTION

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.
- Only use **ORIGINAL** accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.

- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KM380 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/Kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.669 W/Kg (10g) and when worn on the body is 0.932 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over one (1) gram of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can fail or cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Technical data

General

Product name : KM380

System : GSM 900 / DCS 1800 /
PCS 1900

Ambient Temperatures

Max : +55°C (discharging)
+45°C (charging)

Min : -10°C

Bluetooth QD ID B013827

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM380

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

29. FEB. 2008

European Standard Center
LG Electronics Logistics and Services B.V.
Vekweezoom 15, 1327 AE Almere, The Netherlands
Tel : +31-36-547-8940, Fax : +31-36-547-8794
e-mail : jacob @ lge.com


Signature of representative

