



Born to **Shine** BLACK LABEL SERIES

CE 0168

قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استنادا إلى برنامج الهاتف أو موفر الخدمة.

دليل المستخدم | KE970 |

P/N : MMBB0235827(1.5) |



Born to **Shine** BLACK LABEL SERIES

CE 0168

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

# I KE970 User Guide I

## - English



# Contents

Introduction	5	General functions	23	Browser	39
For your safety	6	Making a Call		Home	40
Guidelines for safe and efficient use	7	Answering a Call	24	Bookmarks	
KE970 features	12	Entering Text	25	Go to URL	
Parts of the phone				History	41
Display information	16	Selecting functions and options	29	Settings	
On-Screen Icons		In-call menu	30	Network profiles	
Installation	18	During a Call		Cache	
Installing the SIM card and the handset battery		Conference Calls	31	Cookies	42
Charging the Battery	20			Security certificates	
Disconnecting the charger	21	Menu Tree	34	Information	
Inserting the memory card	22	Profiles	37	Multimedia	43
Removing the memory card		General		MP3 player	
		Silent		Camera	47
		Vibrate only		Video camera	49
		Outdoor		Voice recorder	
		Headset			

---

**Call history** 51

All calls

Missed calls

Dialled calls

---

Received calls 52

Call duration

---

Call costs 53

Data information

---

**Messaging** 54

New message

Text

---

Multimedia 55

---

Email 57

---

Inbox 58

---

Email box 59

---

Drafts 60

Outbox

---

Sent 61

Listen to voicemail

Info message

---

Read 62

Topics

Templates

Text

---

Multimedia 63

---

Settings 64

Text message

Multimedia message

---

Email 65

---

Voicemail number 67

Push message

Info message

---

**Contacts** 68

Search

---

New contact 69

Speed dials

---

Groups 70

Copy all

Delete all

---

Settings 71

Information

---

**My stuff** 72

Images

---

Sounds 73

---

Videos 74

---

Documents 75

---

Others 76

---

Games & Apps 77

External memory

# Contents

<b>Tools</b>	<b>79</b>	<b>Display</b>	<b>87</b>	<b>Security</b>	<b>97</b>
Lost Mobile Track		Wallpaper		PIN code request	
Alarm clock		Backlight timer		Phone lock	
Calendar		Brightness	88	Call barring	98
<b>Calculator</b>	<b>84</b>	Home screen shortcut		Fixed dial number	99
<b>Memo</b>		Menu style		Change codes	
<b>Stop watch</b>	<b>85</b>	Dialing style		<b>Flight mode</b>	<b>100</b>
<b>Unit converter</b>		Standby text		<b>Power saving</b>	
<b>World clock</b>		Network name		<b>Reset default</b>	
<b>SIM services</b>	<b>86</b>	<b>Connectivity</b>		<b>Memory status</b>	
		Bluetooth			
<b>Settings</b>	<b>87</b>	Network	91	<b>Accessories</b>	<b>101</b>
<b>Date &amp; Time</b>		USB connection	93	<b>Technical data</b>	<b>102</b>
Set date		<b>Call</b>	<b>94</b>		
Date format		Call divert			
Set time		Answer mode	95		
Time format		Send my number			
Auto update		Call waiting	96		
<b>Languages</b>		Minute minder			
		Auto redial			
		Send DTMF			

# Introduction

Congratulations on your purchase of the advanced and compact KE970 mobile phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

# For your safety

## **Warning!**

- *Mobile Phones must be switched off at all times in aircrafts.*
- *Do not hold the phone in your hand while driving.*
- *Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.*
- *For your safety, use ONLY specified ORIGINAL batteries and chargers.*
- *Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.*
- *Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.*

## **Caution!**

- *Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.*
- *Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.*
- *Only use ORIGINAL accessories to avoid damage to your phone.*
- *All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.*
- *Batteries should be disposed of in accordance with relevant legislation.*
- *Do not dismantle the phone or battery.*
- *Risk of explosion if battery is replaced by an incorrect type.*

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KE970 has been designed to comply with applicable safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.443(stainless case) or 0.417(aluminum case) W/kg (10g) and when worn on the body is 0.245(stainless case) or 0.483(aluminum case) W/kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).

# Guidelines for safe and efficient use

## Product care and maintenance

***Warning! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.***

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's, radios or personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

- ▶ Please remove the data cable before powering on the handset.

## Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

# Guidelines for safe and efficient use

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- ▶ Do not use the phone at a refuelling point. Don't use near fuel or chemicals.

- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

## Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

## Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- ▶ Risk of explosion if battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the manufacturer's instructions.

# KE970 features

## Parts of the phone

### Front view

#### Navigation key

##### ▶ In standby mode:

-  **Briefly ↑**: List of Message
-  **Briefly ↓**: List of Profiles
-  **Briefly press**: Menu
-  **Briefly press**: List of Contacts
-  **Briefly press**: List of Favourites

##### ▶ In menu: scroll up & down

-  **Briefly press**: OK key



With the up/down scrolling navigation key, you can select menu and functions more easily.




Earpiece




LCD

- ▶ **Top:** Signal strength, battery level and various function
- ▶ **Bottom:** Soft key indications

#### Alpha numeric keys

- ▶ **In standby mode:** Input numbers to dial  
Hold down
  -  - International calls
  -  - Activate Voice mail centre menu
  -  to  - Speed dials
- ▶ **In editing mode:** Enter numbers & characters

Microphone

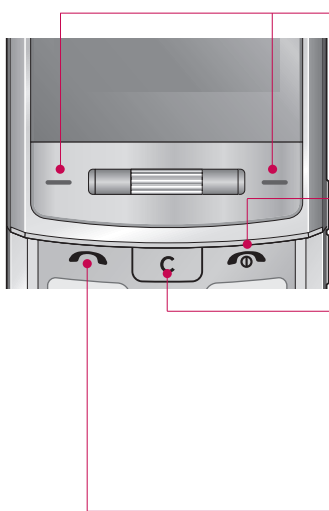**Left soft key/ Right soft key**

These keys perform the function indicated in the bottom of the display.

**End key**

- ▶ Switch on/off (hold down)
- ▶ End or reject a call.


**Clear key**

Deletes a character with each press. Hold the key down to clear all input. Use this key to go back to a previous screen.

**Send key**

- ▶ Dial a phone number and answer a call.
- ▶ **In standby mode:** shows recently dialled, received and missed calls.

# KE970 features

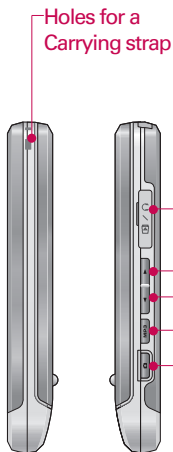

Holes for a Carrying strap

Battery Charging Connector/  
Cable connector and Ear jack

## Note

- ▶ Please ensure phone is powered on in idle mode before connecting the USB cable.

## Side keys

- ▶ **In standby mode (opened):** Volume of key tone
- ▶ **In standby mode (closed):**  
Short press - The LCD light on.
- ▶ **During a call:** volume of the earpiece

## Note

- ▶ To protect your sense of hearing while the slide is open, the maximum volume level is set to 3.


## MP3 key

Activates the MP3 player directly.

## Side camera key


Long press - Photo camera activation

## Rear view

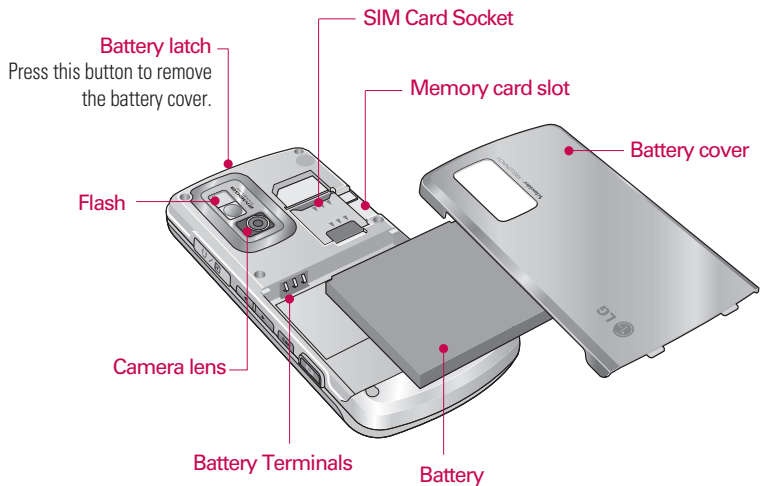

# KE970 features

## Display Information

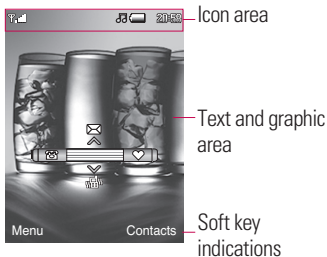







The screen displays several icons. These are described below.





## On-Screen Icons

Icon	Description
	Tells you the strength of the network signal.*

\* The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and poor audio. Please refer to this signal as an indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).

Area	Description
First line	Displays various icons.
Middle lines	Display messages, instructions and any information that you enter, such as number to be dialled.
Last line	Shows the functions currently assigned to the two soft keys.

Icon	Description
	Call is connected.
	You can use GPRS service.
	Shows that you are using a roaming service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	Vibrate only menu in profile.
	General menu in profile.
	Outdoor menu in profile.
	Silent menu in profile.
	Headset menu in profile.

Icon	Description
	Diverted call.
	Indicates that the phone is accessing WAP.
	Indicates that you are using GPRS.
	You have activated the Bluetooth menu.
<b>E</b>	Shows the EDGE service is available. Connection to the EDGE service allows you to transfer data at a speed of 200Kb/s (depending on network availability). Check with your operator for network coverage and service availability.


# Installation

## Installing the SIM card and the handset battery

Make sure the power is off before you remove the SIM card or battery.

### 1. Remove the battery.

Press and hold down the battery release button and lift off the battery cover. Turn the phone up-side down, as shown, then lift up the battery with your fingers and pull-out the battery.

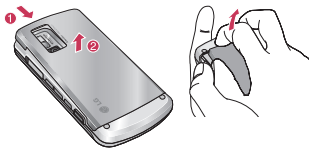

### Note


- ▶ Removing the battery from the phone when the power is on may cause the phone to malfunction.

### 2. Install the SIM card.

Insert and slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.



To insert the SIM card

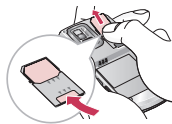

To remove the SIM card

## Note


- ▶ The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

## WARNING!

- *Do not replace or remove the SIM card while your phone is being used or turned on, or data may be lost or the SIM card might be damaged.*

### 3. Install the battery.

Insert the battery into the battery compartment as metal contacts meet in the middle of the phone. Push down the top of the battery until it snaps into place. Place the battery cover to the phone as shown.

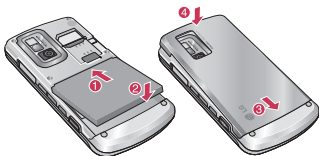

# Installation

## Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.



1. Ensure the battery is fully charged before using the phone for the first time.
2. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the side of the phone until it clicks into place.
3. Connect the other end of the travel adapter to the mains socket. Use only the charger included in the box.
4. The moving bars of battery icon will stop after charging is complete.

### CAUTION!

- *If the battery is completely discharged, the charging display will appear on the LCD approximately 1 to 1.5 minutes after connecting TA.*
- *Do not force the connector as this may damage the phone and/or the travel adapter.*
- *Insert the battery pack charger vertically to wall power outlet.*
- *If you use the battery pack charger out of your own country, use an attachment plug adaptor for the proper configuration.*
- *Do not remove your battery or the SIM card while charging.*

## WARNING!

- *Unplug the charger during lightning storms to avoid electric shock or fire.*
- *Make sure that no sharp-edged items, such as animal teeth or nails, come into contact with the battery. There is a risk of this causing a fire.*

## Disconnecting the charger


Disconnect the charger from the phone by pulling the connector, not the cord.



# Installation

## Inserting the memory card

Insert the memory card into the slot until the memory card is fully inserted into the slot, as shown in the figure below:

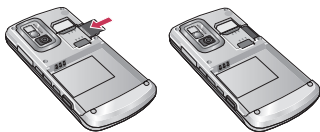

## Removing the memory card

Carefully remove the memory card out of the socket, as shown in the figure below.



### Note

- ▶ Only use memory cards that have been approved by the manufacturer. Some memory cards might not be compliant with the handset.


### Warning




*Do not replace or remove the memory card while your phone is on, or data could be lost and the memory card might be damaged.*

# General functions



## Making a Call

1. Make sure your phone is powered on.
2. Enter a phone number including the area code.



To edit a number on the display screen, simply press the  key to erase one digit at a time.

- ▶ Press and hold the  key to erase the entire number.
3. Press the  key to call.
  4. When you want to finish, press the  key.

## Making a Call by Send Key

1. Press the  key, and the most recent incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the navigation key.
3. Press the  key.

## Making International Calls

1. Press and hold the  key for the international prefix. The '+' character can be replaced with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the  key.

## Ending a Call

When you have finished a call, press the  key.

## Making a Call From the Contact list

You can store names and phone numbers dialled frequently in the SIM card as well as the phone memory known as the Contact list.

You can dial a number by simply looking up a name in the contact list.

# General functions



## Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the side keys of the phone.

In idle mode, you can adjust the key volume using the side keys.

## Answering a Call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name/photo if stored in your Address Book) is displayed.


1. Slide up and press the  key or the left soft key to answer an incoming call. If the Any Key menu option (Menu 9.5.2), has been set to any key press will answer a call except for the  key or the right soft key.

2. End the call by closing the phone or pressing the  key.

### Note

- ▶ You can answer a call while using the Address Book or other menu features. If the phone is connected to a PC via USB cable, Wireless service will be deactivated.

## Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator () on your phone's display screen.

## Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message, creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone.

### Note

- ▶ Some fields may allow only one text input mode (e.g. telephone number in address book fields).


### T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

### ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

### 123 Mode (Numbers Mode)


Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press  key until 123 mode is displayed.

# General functions

## Symbolic Mode

This mode allows you to enter special characters.

## Changing the Text Input Mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the display.
2. If you want to change modes, press . The available modes are changed.


## Using the T9 Mode



The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses.



As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary.





As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

## Note

- ▶ You can select a different T9 language from the menu option or press hold down the key . The default setting for T9 is set to disabled mode.




1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter
  - ▶ The word changes as letters are typed—ignore what's on the screen until the word is typed completely.
  - ▶ If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.

**Example:** Press     
 to type Good.

- ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.
- 2. Enter the whole word before editing or deleting any key strokes.
- 3. Complete each word with a space by pressing the key  or  key. To delete letters, press . Press and hold down  to erase the letters continuously.

## Using the ABC Mode

Use the  to  keys to enter your text.

1. Press the key labeled with the required letter:
  - ▶ Once for the first letter.
  - ▶ Twice for the second letter.
  - ▶ And so on.
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to erase the letters continuously.

# General functions

## Note

- ▶ Refer to the table below for more information on the characters available using the keys.

Key	Characters in the order display	
	Upper Case	Lower Case
	.,?!'\"1-()@/:_	.,?!'\"1-()@/:_
	ABC2ÀÂÄËÇ	abc2àâäëç
	DEF3ÉÊË	def3éêë
	GHI4ÎÏ	ghi4îï
	JKL5	jkl5
	MNO6ÑÕÖË	mno6ñõöë
	PQRS7	pqrs7
	TUV8Û	tuv8û
	WXYZ9ŴŶ	wxyz9ŵŷ
	Space 0 (long press)	Space 0 (long press)

## Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example).



Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

## Using the Symbol Mode


The Symbol Mode enables you to enter various symbols or special characters.

To enter a symbol, press the key. Use the navigation keys to select the desired symbol and press the [OK] key.

# Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft key smarked  and . Each menu and sub-menu allows you to view and alter the settings of a particular function.


The roles of the soft keys vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.

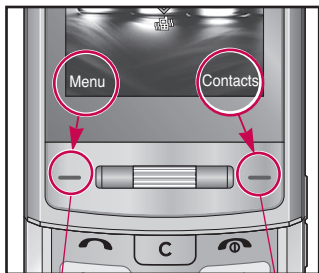

Press the left soft key to access the available Menu.

Press the right soft key to access the Contacts menu.

# In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key  [Options].


## During a Call

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.


### Making a Second Call (Network Dependent)

You can get a number you wish to dial from the Address Book to make a second call.


### Swapping Between Two Calls

To switch between two calls, press  key or the left soft key, and then select Swap Call.


### Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as Call waiting, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting (Menu 9.5.4).

If Call Waiting is on, you can put the first call on hold and answer the second, by pressing the left soft key .

### Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the  key.

## Muting the Microphone

You can mute the microphone during a call by pressing the [Mute] key. The handset can be unmuted by pressing the [Unmute]. When the handset is muted, the caller cannot hear you, but you can still hear them.

## DTMF tones while calling

To switch on DTMF tones while calling (e.g. to use the phone with an automatic switchboard) press the key [Options] followed by Send DTMF on. Select DTMF off to disable DTMF tones. DTMF tones are normally on.


## Conference Calls


The conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature. A conference call can only be set up when you have one active call and one call on hold, both calls having been answered.

Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum callers in a conference call are five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

# In-call menu

## Making a Second Call



You can make a second call while currently on a call. Enter the second number and press the .

When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  key.

## Setting Up a Conference Call

To set up a conference call, place one call on hold and while the active call is on, press the left soft key and then select the Join menu of Conference call.

## Activate the Conference Call on Hold

To activate a conference call on hold, press the  key. Alternatively press the left soft key [Options] and select Join all/Hold all calls. Other users on hold will stay connected. To return to conference call mode, press the left soft key  [Options] followed by Conference call.


## Adding Calls to the Conference Call

To add a call to an existing conference call, press the left soft key, and then select the Join menu of Conference call.

## Private Call in a Conference Call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the Private menu of Conference call to put all the other callers on hold.

## Ending a Conference Call

Currently displayed caller from a conference call can be disconnected by pressing the  key.

# Menu Tree

The menu in this phone can be displayed in 2 ways. One is by list type or secondly in grid format. Please note that menu number options are different in each view.

The default setting on the phone is set to show the menu in list type, so therefore all the menu number selections throughout the manual are shown according to that setting.

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.
- ▶ Page where you can find the feature description.

You can go to the desired menu using the left soft key [Menu], navigation keys and the [OK] key. And you can also take a shortcut by pressing the corresponding number key of desired menu after pressing the left soft key [Menu].

## 1. Profiles

1.1 General

1.2 Silent

1.3 Vibrate only

1.4 Outdoor

1.5 Headset

## 2. Browser

2.1 Home

2.2 Bookmarks

2.3 Go to URL

2.4 History

2.5 Settings

2.6 Information

## 3. Multimedia

3.1 MP3 player

3.2 Camera

3.3 Video camera

3.4 Voice recorder

#### 4. Call history

- 4.1 All calls
- 4.2 Missed calls
- 4.3 Dialed calls
- 4.4 Received calls
- 4.5 Call duration
- 4.6 Call costs
- 4.7 Data information

#### 5. Messaging

- 5.1 New message
- 5.2 Inbox
- 5.3 Email box
- 5.4 Drafts
- 5.5 Outbox
- 5.6 Sent
- 5.7 Listen to voicemail
- 5.8 Info message
- 5.9 Templates
- 5.0 Settings

#### 6. Contacts

- 6.1 Search
- 6.2 New contact
- 6.3 Speed dials
- 6.4 Groups
- 6.5 Copy all
- 6.6 Delete all
- 6.7 Settings
- 6.8 Information

# Menu Tree

## 7. My stuff

7.1 Images

7.2 Sounds

7.3 Videos

7.4 Documents

7.5 Others

7.6 Games & Apps

7.7 External memory

## 8. Tools

8.1 Lost Mobile Track

8.2 Alarm clock

8.3 Calendar

8.4 Calculator

8.5 Memo

8.6 Stop watch

8.7 Unit converter

8.8 World clock

8.9 SIM services

## 9. Settings

9.1 Date & Time

9.2 Languages

9.3 Display

9.4 Connectivity

9.5 Call

9.6 Security

9.7 Flight mode

9.8 Power saving

9.9 Reset default


9.0 Memory status

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.


There are five preset profiles: **General**, **Silent**, **Vibrate only**, **Outdoor and Headset**.

Each profile can be personalised. Press the left soft key [Menu] and select Profiles using up/down navigation keys.

## Activate (Menu 1.X.1)

1. A list of profiles is displayed.
2. In the Profiles list, scroll to the profile you want to activate and press the left soft key  [OK] or OK key.
3. Then, select Activate.

## Personalise (Menu 1.X.2)

Scroll to the desired profile in the Profile list. After pressing the left soft key  or the OK key, select Personalise.

The profile setting option opens. Set the option as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tones:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ringing tone.
- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tones:** Select the alert tone for messages.
- ▶ **Keypad tones:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Slide tones:** Allows to set the flip tone for adjusting environment.
- ▶ **Effect sound volume:** Set the volume of effect sound.

# Profiles


- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.
- ▶ **Auto answer:** This function will be activated only when your phone is connected to the handsfree kit.
  - **Off:** The phone will not answer automatically.
  - **After 5 secs:** After 5 seconds, the phone will answer automatically.
  - **After 10 secs:** After 10 seconds, the phone will answer automatically.

## Note

- ▶ All profiles cannot be renamed.

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.




Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser at any time, press the (  ) key. The phone will return to the idle menu.

## Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

### Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Key	Description
 ↑, ↓	Scrolls each line of the content area
	Returns to the previous page
	Selects options and confirms actions

## Using the WAP browser menu

There are various menu options available when surfing the Mobile Web.

### Note

- ▶ The WAP browser menus may vary, depending on your browser version.

# Browser

## Home

Menu 2.1


Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

## Bookmarks

Menu 2.2

This menu allows you to store the URL of favourite web pages for easy access at a later time.

To create a bookmark

1. Press the left soft key  [Options].
2. Select Add new and press the OK key.
3. After entering the desired URL and title, press the OK key.

After selecting a desired bookmark, the following options are available.

- ▶ **Connect:** Connects to the selected bookmark.
- ▶ **View:** You can see the selected bookmark.
- ▶ **Edit:** You can edit the URL and/or the title of the selected bookmark.
- ▶ **New bookmark:** Select this to create a new bookmark.
- ▶ **Send URL via:** Sends the selected bookmark via Text/Multimedia message and Email.

## Go to URL

Menu 2.3

You can connect directly to the site you want. After entering a specific URL, press the OK key.

## History

Menu 2.4

This menu will show the recent browsing pages.

## Settings

Menu 2.5

You can set the profile, cache and security related to internet service.

### Network profiles (Menu 2.5.1)

A profile is the network information used to connect to the Internet.

There are default profiles for some operators, stored in phone memory. It's impossible to rename default profiles.

Each profile has submenus as follows:

- ▶ **Activate:** Activates the selected profile.
- ▶ **View:** You can see the selected profile.
- ▶ **Edit:** You can edit the selected profile.
- ▶ **New profile:** You can add a new profile.
- ▶ **Reset all:** Allows you to reset all profiles.

### Cache (Menu 2.5.2)

The information or services you have accessed are saved in the cache memory of the phone.

#### Note

- ▶ A cache is a buffer memory, which is used to save data temporarily.

# Browser

## Cookies (Menu 2.5.3)

Check whether a cookie is used or not.

## Security certificates (Menu 2.5.4)

You can see the list of personal. Certificates that have been stored in your phone.

## Information

Menu 2.6

You can view the information of WAP browser version.

You can enjoy various multimedia functions on your phone such as camera, voice recorder, MP3 for your fun and convenience.

## Note

- ▶ When the status of the battery indicates low, you may not use the Camera or Multimedia function.
- ▶ While using Multimedia function, the status of the battery is changeable.

## MP3 player

Menu 3.1

The KE970 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on your phone using a compatible headset or via the internal loudspeaker.

## Note

- ▶ Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The music player supports:

- **MPEG-2 Layer III, MPEG-2.5 Layer III:** Sampling frequency up from 8KHz to 48KHz. Bit rate up to 320Kbps, stereo.
- **AAC:** ADIF, ADTS formats (Sampling frequency from 8KHz to 48KHz)
- **AAC+:** V1: (Bit rate 16~128Kbps)  
V2 : (Bit rate 16~48Kbps)  
(Sampling frequency from 8KHz to 48KHz)

# Multimedia


## Note

- ▶ KE970 doesn't support the variable bit rate of all mentioned file types. Therefore, you can't change the file from MP3 format to AAC.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mass Storage. When you connect the phone to a PC using the USB cable (supplied in the same package), this will be displayed as a removable disk through Windows Explorer. If you are using Win98 SE, you will have to install the Mass storage driver for Windows 98 on CD-ROM.


## Note

- ▶ You should copy MP3 to Sounds/MP3 folder. If you copy to another folder, you will not be able to view the MP3 files.
- ▶ The PC should run Windows 98 SE, Windows ME, Windows 2000, Windows XP operating system.

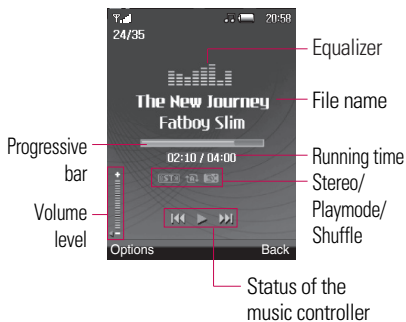

## Note

▶ In case that any invalid file is included in the playlist, an error message will pop and go back to the prior screen.

1. Press Multimedia menu, and then select MP3 player.
2. Press the left soft key  [Options] to access the following menus.

- ▶ **Pause:** You can pause the playing MP3 file.
- ▶ **View playlist:** You can select another file on the MP3 list.
- ▶ **Set as ringtone:** You can set the current music on playing MP3 file as a ringtone

### Repeat



Play all



Repeat all



Repeat one

# Multimedia

## ▶ Settings

- **Equalizer:** This menu helps you to adjust to a variety of environments when listening to music.
- **Play mode:** This menu allows to set the play mode: Repeat one, Repeat all, Play all.
- **Set shuffle:** If you select On, you can listen to the music at random.
- **Visual effect:** You can select the visual effect menus: Real spectrum, Fake. This menu allows to change the background of main LCD on playing MP3 file.

## Note


- ▶ Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

## Camera

### Menu.3.2

Using the camera module built in your phone, you can take pictures or record videos. Additionally, you can send photos to other people and select photos as wallpaper.

#### Note


- ▶ When using the camera, power consumption increases. If this icon  appears on the wallpaper, indicating low battery, recharge the battery before use.

For your convenience, rotate phone as shown below when taking picture.





#### 1 / 2 Zoom in/Zoom out

#### 3 Camera


Shutter sound or video recording sound is omitted even when setting mode, including manner mode .




#### • To take a picture

Hold down the camera  button. The camera will be ready to use and you may want to rotate the screen into a horizontal position.

- To take clear pictures, press the camera  button while holding the camera without any movement.
- Appropriately adjust distance to the object that you want take a picture of (more than 50 cm).
- Handle carefully since the camera is vulnerable to shock and use a soft cloth when cleaning the camera lens.
- Do not disassemble or modify the camera as this may lead to fire or malfunctioning.










# Multimedia




- Auto Focus function is enabled when taking a picture or sticker shot. Press the camera  button half way to adjust focus.

1. Hold down the  in standby mode.
2. Focus on the subject to capture the image, and then press the  key.
3. If you want to save it, press the  key.

## Note

- ▶ You can adjust the brightness by using the   .

- ▶ **Shot mode** [  ]: Allows you to set the shot mode from Marco, Auto focus On and Off.
- ▶ **Resolution** [  ]: Allows you to set the image size.(1600x1200), (1280x960) (640x480) and (320x240). Multishot is only available with the (320x240), (640x480) pixel resolution.
- ▶ **Quality** [  ]: Allows you to set the image quality from Normal, Fine and Super fine.
- ▶ **Flash** [  ]: Allow you to set the flash when you take a photo in dark place.
- ▶ **Self timer** [  ]: Allows you to select the delay time (Off, 3 seconds, 5 seconds, 10 seconds). Then the phone takes a photo after the specified time.
- ▶ **Save to** [  ]: You can set the space after taking a picture. (External/Phone)
- ▶ **Multi shot** [  ]: Allows to take multishot photos successively.
- ▶ **Metering** [  ]: Determines the lighting based on a little part of the subject. You can select the Centred and Combined which is to be exposed correctly.
- ▶ **Colour effect** [  ]: 4 settings are available. (Negation/Mono/Sepia/Colour)

- ▶ **White balance** [  ]: Allows you to change the settings according to the environment. (Night mode/Fluorescent/Cloudy/Incandescent/Daylight/Auto)
- ▶ **Shutter tone** [  ]: You can set the sound when taking a picture.
- ▶ **Reset settings** [  ]: Allows you to reset the settings.



### Note

- ▶ If you are using camera with slider off and want to exit from camera mode, open the slider and press End or Cancel Key

## Video camera

Menu 3.3

1. Select Video camera menu.
2. Video camera settings menu is the same with Photo camera settings, except following items:

- ▶ **Mode** [  ]: Allows you to set to send a video file through MMS or General.
- ▶ **Resolution** [  ]: You may select the following resolution: 128x96, 176x144 .

### Note

- ▶ If you are using video camera with slider off and want to exit from video camera mode, open the slider and press End or Cancel Key

## Voice recorder

Menu 3.4

You can record voice memo. The following [Options] menus are available.

- ▶ **Storage**  
You can choose Phone or External memory.
- ▶ **Recording mode**  
You can choose General mode of unlimited recording or MMS mode of recording up to 30 seconds.

# Multimedia

## Record

1. Press OK to start recording. Once recording is started, the message Recording and the counter is displayed.
2. If you want to pause or resume recording, press left soft key or OK key.
3. If you want to finish recording, press right soft key [Stop].

## Album

You can view the Sounds folder which lists all sound files saved in the memory.

### Note

- ▶ If you are recording voice with slider off and want to exit from voice recorder mode, open the slider and press End or Cancel Key

# Call history

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

## All calls

Menu 4.1

You can view all lists of outgoing or incoming calls.

## Missed calls

Menu 4.2

This option lets you view the last 50 unanswered calls. You can also:

- ▶ View the number if available and call it, or save it in the Address Book

- ▶ Enter a new name for the number and save both in the Address Book
- ▶ Send a message by this number
- ▶ Delete the call from the list

## Dialled calls

Menu 4.3

This option lets you view the last 50 outgoing calls (called or attempted). You can also:

- ▶ View the number if available and call it or save it in the Address Book
- ▶ Enter new name for the number and save both in the Address Book
- ▶ Send a message by this number
- ▶ Delete the call from the list

# Call history

## Received calls

Menu 4.4

This option lets you view the last 50 incoming calls. You can also:

- ▶ View the number if available and call it or save it in the Address Book
- ▶ Enter new name for the number and save both in the Address Book
- ▶ Send a message by this number
- ▶ Delete the call from the list

## Call duration

Menu 4.5

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call times.

The following timers are available:

- ▶ **Last call:** Length of the last call.
- ▶ **Dialled calls:** Length of the outgoing calls.
- ▶ **Received calls:** Length of the incoming calls.
- ▶ **All calls:** Total length of all calls made and incoming calls since the timer was last reset.

## Call costs

Menu 4.6

Allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need to enter PIN2 code.

## Data information

Menu 4.7

You can check the amount of data transferred over the network through the GPRS information option.

In addition, you can also view how much time you are online.

# Messaging


## New message

Menu 5.1

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Email, voice mail, as well as the network's service messages.


### Text (Menu 5.1.1)


You can write and edit text message.

1. Enter the New messages menu by pressing the left soft key  [OK].
2. If you want to write a new message, select Text.
3. To make text input easier, use T9.
4. Press [Options] to attach the followings.

### Options

▶ **Send to:** Sends text messages.

1. Enter numbers of recipient.
2. Press  ↓ key to add more recipients.

3. You can add phone numbers in the address book.
4. Press the  [Option] and then press send after entering numbers.

### ▶ Insert

- **Symbol:** You add special characters.
- **Image:** You can insert the Default graphics or graphics in My pictures that are available for short messages.
- **Sound:** You can insert sounds that are available for short messages.
- **Default images:** You can insert Animations stored.
- **Default sounds:** You can insert Sounds stored.
- **Text template:** You can use Text templates already set in the phone.

- **Contacts:** You can add phone numbers or e-mail addresses in address book.
- **My business card:** You can add your Business card to the message.
- ▶ **Save to drafts:** Stores messages in Drafts.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
- ▶ **New T9 word:** Select the New T9 word for inputting New word into the dictionary.
- ▶ **Clear text:** You can clear text while writing SMS.
- ▶ **Exit:** If you press Exit while writing a message, you can end the writing message and back to the new Message menu. The message you have written is not saved.

## Multimedia (Menu 5.1.2)

You can write and edit multimedia messages, checking message size.

1. Enter the New message menu by pressing the left soft key  [OK].
2. If you want to write a new message, select Multimedia.
3. You can create a new message or choose one of the multimedia message templates already made.

Maximum available file size, that can be inserted to MMS-message, is 300 kb.

## Options

- ▶ **Send to:** You can send multimedia messages to multiple recipients, priorities your message, and make it sent later as well.
- ▶ **Insert:** You can add Symbol, Image, Video, Sound, New slide, Text template, Contact, Business card, Others.

# Messaging

## Note

- ▶ All messages will be automatically saved in the outbox folder, even after a sending failure.

- ▶ **Preview:** You can preview multimedia messages you have created.
- ▶ **Save:** You can save multimedia messages To drafts or As templates
- ▶ **Edit subject:** Allows you to modify the multimedia message you have chosen.
- ▶ **Slide duration:** You can set the duration of slide of multimedia message.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.

- ▶ **New T9 word:** Select the New T9 word for inputting New word into the dictionary.
- ▶ **Exit:** You can get back to the Message menu.


## Note


- ▶ If you select a picture with a large file size (200K for example) on writing multimedia message, the loading duration will take around 10 seconds. Furthermore, you can't activate any keys during the loading time. After about 10 seconds, you should be able to write the message.

## Email (Menu 5.1.3)

To send/receive an email, you should set up the email account.

1. You can input up to 20 email addresses in the To and Cc field.

**Tip:** To input “@”, press the  and select “@”.

2. Key in the subject of the mail and press OK.
3. After writing an email message, press the left soft key  [Options]. You can access the following option menus.
  - ▶ **Send to:** You can edit recipients.
  - ▶ **Insert:** You can add Symbol, Text template, Contact and Signature.
  - ▶ **Attachment:** You can attach file with this menu.
  - ▶ **Preview:** You can preview the writing mail.

- ▶ **Save to drafts:** Select this to save the message in Drafts.
- ▶ **Edit subject:** You can edit the subject.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate the T9 input mode by selecting ‘T9 off’.
- ▶ **New T9 word:** Select the New T9 word menu for inputting a new word into the dictionary.
- ▶ **Clear text:** You can clear text while writing the message.
- ▶ **Exit:** If you select this while writing the message, you can exit from writing message and go back to the previous screen. The message you have written is not stored.

## Note

- ▶ For each e-mail account you may save up to 40 messages (totally 200 for five accounts). In Inbox folder you may save not more than 20 messages, in Drafts and Outbox folders - 5 messages, and in Sent folder up to 10 messages. In case Drafts Outbox or Sent folder is full, and you try to save new message to one of this folders, first saved message will be automatically deleted.
- ▶ Maximum size for one sent message is 300 kb with attachments, and maximum size for one received message is 300 kb. In case you have received message with more than 5 attachments, only 5 of them will be received. Some attachment may display incorrectly.

## Inbox

Menu 5.2


You will be alerted when you have received messages. They will be stored in Inbox.

If the phone shows 'No space for SIM message', you have to delete only SIM messages from Inbox. If the phone displays 'No space for message', you can make space of each repository as deleting messages, media and applications.

### \* SIM message

SIM message means the message exceptionally stored in SIM card. You can move this message to the phone.

For notified multimedia message, you have to wait for downloading and processing of the message.

To read a message, select one of the messages by pressing the left soft key .

- ▶ **View:** You can view the received messages.

- ▶ **Delete:** You can delete the current message.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Reply to all:** You can reply to all of the sender.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** You can call back to the sender.
- ▶ **Information:** You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- ▶ **Multi delete:** After selecting the messages you want to remove, you can delete the selected messages.
- ▶ **Delete all read:** You can delete all messages read.
- ▶ **Delete all:** You can delete all messages.

## Email box

Menu 5.3

When you access this menu, you can either connect to your remote mailbox to retrieve your new email messages, or you can view the previously retrieved email messages without logging in to the email server.

You can check the saved emails, drafts, outbox, and sent emails. In the Inbox, up to 20 emails are stored. (Outbox stores up to 5, Drafts store up to 5, Sent stores up to 10)

# Messaging

## Drafts

Menu 5.4

Using this menu, you can preset multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.

- ▶ **View:** You can see the multimedia messages.
- ▶ **Edit:** Modifies the message you choose.
- ▶ **Delete:** Deletes the message you choose.
- ▶ **Information:** You can view information about the message you choose.
- ▶ **Multi delete:** After selecting the messages you want to remove, press OK and you can delete the selected messages.
- ▶ **Delete all:** Deletes all of the messages in the folder.

## Outbox

Menu 5.5

This menu allows to view the message which is about to send or is failed sending.

After sending the message successfully, the message will be moved to sent box.

- ▶ **View:** You can view the message.
- ▶ **Delete:** You can delete the message.
- ▶ **Resend:** You can resend the selected message.
- ▶ **Edit:** Modifies the message you choose.
- ▶ **Information:** You can check information of each message.
- ▶ **Multi delete:** Select and delete the selected messages.
- ▶ **Delete all:** You can delete all messages in outbox.



## Sent

Menu 5.6

This menu allows you to view the messages which are already sent. You can check the time and the contents of message.

## Listen to voicemail

Menu 5.7

Once this menu has been selected, simply press the left soft key  [OK] to listen to voice mail. You can also hold down the  key in standby mode to listen to voice mail.

### Note

- ▶ When you receive a voice mail, your phone displays the icon and you hear an alert. Please check with your network provider for details of their service in order to configure the handset correctly.

## Info message (Dependent to network and subscription)

Menu 5.8

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices.




Each type of has the number; therefore, you can contact service provider as long as you have input the certain number for the information.

When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed.

To view the message again or not in standby mode, follow the sequence shown below;


# Messaging

## Read (Menu 5.8.1)

1. When you have received an info service message and select Read to view the message, it will be displayed on the screen. You can read another message by scrolling  ,  or  [Next].
2. The message will be shown until another message is reached.

## Topics (Menu 5.8.2)

(Dependent to network and subscription)

- ▶ **View list:** You can see Info service message numbers which you added. If you press  [Options], you can edit and delete info message category which you added.
- ▶ **Active list:** You can select info service message numbers in the active list. if you activate an info service number, you can receive messages sent from the number.

## Templates

Menu 5.9

### Text (Menu 5.9.1)

You have 6 text templates as below;

- **Please call me back.**
- **I'm late. I will be there at**
- **Where are you now?**
- **I'm on the way**
- **Urgent! Please contact.**
- **I love you**

The following options are available.

- ▶ **Edit:** Use this to write a new message or edit the selected template message from the text template list.

▶ **Send via**

- **Text message:** Use this to send the selected template message by SMS.
- **Multimedia message:** Use this to send the selected template message by MMS.
- **Email:** This menu allows you to edit, delete or add an email account.
- ▶ **Delete:** Deletes the template.
- ▶ **New template:** Use this to create new template.
- ▶ **Delete all:** Allows you to delete all multimedia messages.

### Multimedia (Menu 5.9.2)

After saving new template, you can use the following options.

- ▶ **Insert:** You can add Symbol, Image, Video, Sound, New slide, Text template, Contact, Business card and Others.
  - ▶ **Preview:** You can preview multimedia templates you wrote.
  - ▶ **Edit subject:** Allows you to modify the multimedia message you have chosen.
  - ▶ **Slide duration:** You can set the duration of slide of multimedia message.
  - ▶ **T9 languages:** Select the desired language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
  - ▶ **Exit:** Will take you back to the Message menu.
- ▶ **Save:** Allows you to save new multimedia templates you created.

## Settings

Menu 5.0

### Text message (Menu 5.0.1)

#### ▶ **Message types:**

**Text, Voice, Fax, Paging, X.400, Email, ERMES**

Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- ▶ **Validity period:** This network service allows you to set how long your messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to Yes, you can check whether your message is sent successfully.
- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.

▶ **Message centre number:** If you want to send the text message, you can receive the address of SMS centre through this menu.

▶ **Bearer setting:** You can set the bearer setting such as GSM, GPRS.

### Multimedia message (Menu 5.0.2)

- ▶ **Subject:** You can enter multimedia messages subject when this menu is on.
- ▶ **Slide duration:** Display the duration of each page when writing the message.
- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If it is set to Yes in this menu, you can check whether your message is sent successfully.

- ▶ **Read report:** You can receive the report whether the receiver read the message or not.
- ▶ **Auto download:** If you select On, you receive multimedia messages automatically. If you select Off, you receive only notification message in the inbox and then you can check this notification. If you select Home network only, you receive multimedia messages depends on Home network.
- ▶ **Network profile:** If you select multimedia message server, you can set URL for multimedia message server.
- ▶ **Permitted message type**
  - Personal:** Personal message.
  - Advertisement:** Commercial message.
  - Information:** Necessary information.

## Email (Menu 5.0.3)

### ▶ Email account

This menu allows you to edit, delete or add an email account.

- **View:** You can see the Email.
- **Set as default**
- **Edit**

**Account name:** Account name.

**Email address:** Enter the email address given to you by your service provider.

**My name:** You can make your nickname.

**Incoming mail server:** Enter the POP3 address and Port number of the that receives your email.

**User name:** Enter your email ID.

**Password:** Enter your email password.

# Messaging

**Outgoing mail server:** Enter the SMTP address and Port number of computer that sends your email.

## - Advanced settings

**Protocol type:** Choose your protocol type. (POP3/IMAP4)

**Maximum receive size:** View the Maximum size that you can receive mails.

**Save to server:** Select Yes to leave the messages on the server.

**Insert signature:** Select Yes to attach your signature to your email messages.

**Reply email address:** Email address that you can receive the reply.

**Incoming port number:** Allow you to edit POP3 port number.

**Outgoing port number:** Allow you to edit SMTP port number.

## **Outgoing mail authentication:**

when you send the mail, you can set authentication whether or not.

## **Outgoing server ID/password:**

Enter the ID and password for sending your email.

- **New account:** You can set up to 5 email accounts by selecting New account menu. Using the Edit menu, you can set the following values.
- **Delete:** Deletes the selected account from the list.
- **Delete all:** You can delete all account lists.

## ▶ **Network profile**

A profile is the network information used to connect to the Internet. There are default profiles for some operators, stored in phone memory. It's impossible to rename default profiles.

## ▶ **Signature**

You can make your signature.

### **Voicemail number (Menu 5.0.4)**

You can receive the voicemail if your network service provider supports this feature. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

### **Push message (Menu 5.0.5)**

You can set the option whether you will receive the message or not.

### **Info message (Menu 5.0.6)**

#### **▶ Receive**

**Yes:** If you select this menu, your phone will receive Info service messages.

**No:** If you select this menu, your phone will not receive Info service messages any more.

#### **▶ Alerts**

**Yes:** Your phone will beep when you have received Info service message numbers.

**No:** Your phone will not beep even though you have received info service messages.


#### **▶ Language**

You can select the language you want by pressing OK key. Then, the info service message will be shown in the language that you selected.

# Contacts


## Search

Menu 6.1

1. Select Search by press the left soft key  [OK].
2. Enter the name that you want to search.

### Note

- ▶ Instant searching is available by inputting the initial letter of the name.

3. If you want to edit, delete, copy an entry, or to add the voice to one, select left soft key  [Options].

The following menu will be displayed.

- ▶ **View:** You can view each entry in details.
- ▶ **Edit:** You can edit the name, number, group, ringtone and picture by using the navigation key.

- ▶ **New message:** After you have found the number you want, you can send a message(Text/Multimedia/Email) to the selected number.
- ▶ **Send via:** You can send the data of phone book via Text message, Multimedia message, Bluetooth or Email.
- ▶ **Delete:** You can delete an entry.
- ▶ **New contact:** After selecting the place (SIM/Phone) you want to save, you can add to the phonebook list.
- ▶ **Multi delete:** Allows you to remove a number of files selected.
- ▶ **Copy to handset/SIM:** You can copy an entry from SIM to phone or from phone to SIM.
- ▶ **Main number:** If a contact has more than one number stored, select the one that you use most often. This main number will be displayed first.






## New contact

Menu 6.2

You can add phonebook entry by using this function. Phone memory capacity is 1000 entries. SIM card memory capacity depends on the cellular service provider. The number of character is SIM dependent feature.



### Note




- ▶ Maximum stored name and number length depends on SIM-card type.

1. Select New contact by press left soft key  [OK].
2. Input a name.
3. Press  ↓, then you can input a number.
4. You can set a group for the entry by pressing  , .
5. You can set a ringtone and a photo for the entry by press left soft key  [Options].

## Speed dials

Menu 6.3

You can assign any of the keys  to  with a Name list entry. You can call directly by long pressing this key.

1. Open the phonebook first by pressing the right soft key  [Contacts] in standby mode.
2. Scroll to Speed dial, then press the left soft key  [OK].
3. If you want to add speed dial, select <empty> by pressing the left soft key  [Assign]. Then, you can search the name in phonebook.
4. After assigning the number as speed dial, you can change and delete the entry. You can also make a call or send a message to this number.

# Contacts

## Groups

Menu 6.4

You can list up to the members per each group. There are 7 groups you can make lists to.

- ▶ **View members:** Shows the group members you have selected.
- ▶ **Group ringtone:** Allows you to specify ring tone for the group members' call.
- ▶ **Group icon:** Allows you to select the icon dependent on Group.
- ▶ **Add member:** You can add group members.
- ▶ **Remove member:** You can remove the member from the Group member list. But the name and the number will be remained in phonebook.
- ▶ **Remove all members:** Allows you to delete all the members in the group.
- ▶ **Rename:** You can change a group name.

## Copy all

Menu 6.5

You can copy entries from SIM card memory to Phone memory and vice versa.

- ▶ **SIM to phone:** You can copy the entry from SIM Card to Phone memory.
- ▶ **Phone to SIM:** You can copy the entry from Phone memory to SIM Card.



## Delete all

Menu 6.6

You can delete all entries from SIM or Phone.

## Settings

Menu 6.7

1. Press the right soft  [Contacts] in standby mode.
2. Scroll to Settings, then press the left soft key  [OK].

### ▶ **Default memory**

You can set the default memory from Always ask, SIM or Handset.

### ▶ **View options**

Scroll to highlight View options, and then press the left soft key [OK].

- **Name only:** Set the phonebook list with displaying only name.
- **With picture:** Set the phonebook list with the information of character and picture.

## Information

Menu 6.8

### ▶ **Service dial numbers**

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).


### ▶ **Own numbers (SIM dependent)**

You can save and check your own number in SIM card.

### ▶ **Business card**

This option allows you to create your own business card featuring Name and an mobile phone number.

To create a new business card, press the left soft key  [New] and enter the information into the fields.

If you want to edit, delete or to send a business card, select left soft key  [options].

# My stuff

## Images

Menu 7.1

Show the list of image files at My media/Photos in Multimedia memory.

- ▶ **View:** You can see the JPG file when pressing OK key or selecting View menu of Option menus.
- ▶ **Delete:** Delete a file.
- ▶ **Set as**
  - **Full image wallpaper:** Currently selected image can be set as a wallpaper.
  - **Landscape wallpaper:** Currently selected image can be displayed horizontally as a wallpaper.
  - **Picture ID:** Currently selected image can be set as a Picture ID.
- ▶ **Send via:** Allows you to send a image through MMS/Bluetooth/Email.

## ▶ File

- **Rename:** Change the file name of selected file. You can not change the extension of file.

### Note

- ▶ You can't use the following characters \ / : \* ? " < > |

- **Move to folder:** Move the file to the selected folder.
- **Move to external memory:** Move the selected file to the Multimedia memory/external memory.

### Warning!

*If you remove the external memory during data transfer, it can seriously damage the phone.*

- **Copy to external memory:** Copy the selected file to the Multimedia memory/external memory.

## Warning!

*If you remove the external memory during data transfer, it can seriously damage the phone.*

- **Information:** Show the file information.
- ▶ **Print via Bluetooth:** Most pictures that you've taken in the camera mode and downloaded through WAP can be transmitted via Bluetooth to a printer.
- ▶ **Slide show**

You can view a slide show of the files you stored.
- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **List view:** Allows you to set the view type.

## Sounds

Menu 7.2

Show the list of MP3, MP4, AAC, M4A files at My media\Music in Multimedia memory.

- ▶ **Play:** You can play the MP3 file when pressing OK key or selecting Play menu of Option menu.
- ▶ **Set as:** Currently selected sound can be set as a Ringtone/Ringtone ID.
- ▶ **File info:** Show the file information.

## Videos

Menu 7.3

Shows the list of 3GP, 3G2 files at My media\Videos in Multimedia memory. Supported file types are 3gp files, that are encoded with MPEG4 and h.263 video-codecs and AMR audio-codec.

- ▶ **Play:** You can play the video file when pressing OK key or selecting Play menu of Option menus.
- ▶ **Delete:** Delete a file.
- ▶ **Send via:** Send the selected file to another device via Multimedia message, Bluetooth or Email.

### Note

- ▶ You may send files via Bluetooth only if they are stored in phone memory, not on memory card. To send file from external memory, please, firstly copy it to internal phone memory.
- ▶ **File:** You can save/move/copy the folder or external memory.
  - **Rename:** Change the file name of selected file.  
The maximum length of characters is 36. And you can not change the extension of file.

### **Warning!**

**You can't use the following characters \/: \*? " <> |**

- **Move to folder:** Move the selected file to the folder.
- **Move to external memory:** Move the selected file to the Multimedia memory\external memory

### **Warning!**

**If you remove the external memory during data transfer it will cause serious damage to your phone.**

- **Copy to external memory:** Copy the selected file to the Multimedia memory\external memory.
- **Information:** Shows the file information.

- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you have selected.
- ▶ **Delete all:** Delete all the files in the list.

## Documents

Menu 7.4

This menu enables you to view document files (txt, ppt, pdf, doc and excel).

You can use the following Options menu

- ▶ **View:** You can see the document file when pressing the OK key or selecting View menu of Option menus.
- ▶ **Information:** Show the file information.

# My stuff

## Others

Menu 7.5

Show the list of files in My media\Others in the Multimedia memory.

### Note

- ▶ You may send files via Bluetooth only if they are stored in the phone memory, not on the memory card. To send files from the external memory you must first copy it to the internal phone memory.

### Note

- ▶ When you connect the phone with a PC via Bluetooth, you can both send and receive files to the Music and Video folders. You can copy any file type to the Others. You can only receive files from the Photos, Sounds, and Images folders. You can only view or play files in the Others folder if the file types are supported. When connecting with a PC via USB cable you will only see the following folders in the internal memory: Images, Sounds, Videos, and Others. You can see all folders in the external memory.

## Games & Apps

Menu 7.6

In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option.

## External memory

Menu 7.7

This menu allows you to view Images, Sounds, Videos, Documents and Others in memory card. If the external memory is not available, a pop up message “Please insert external memory” is displayed.

### Note

- ▶ The SIM card must be installed in order for the phone to be recognized as a removable disk.

## New Fantastic LG

The KE970 works as a mass storage device. If you connect the USB cable, you can use the phone as a Removable Disk. You can download MP3 files, photos, videos, text files etc. this gives you fast access from the PC to phone, by just connecting the USB cable.

### Note

- ▶ MASS STORAGE function will only work when the phone is in idle mode.
- ▶ DO NOT remove the cable while you are downloading files. After you download the files, you need to click “Safely Remove Hardware” on the PC and then disconnect the cable.

## My stuff

- ▶ When you copy a file to the removable disk, you can see a message on the display “transferring”. It means MASS STORAGE is working and data is being transferred. While “transferring”, do not disconnect the cable. If you disconnect the cable while “transferring”, data will be lost or corrupted and possibly damage the phone.
- ▶ While phone in MASS storage call and message are not available or wireless service will be deactivated.

## Lost Mobile Track (LMT)

### Menu 8.1

The LMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you loose or misplace it. The moment an un-authorized user uses your phone, a SMS is triggered from your phone and the message is send to your pre-defined number. The SMS will be sent to your pre-defined numbers without the notice of the un-authorized user.

### Set LMT (Menu 8.1.1)

1. A List of tools is displayed.
2. Select Lost Mobile track
3. Select Set LMT
4. Select ON, press OK

### Change password (Menu 8.1.2)

1. A List of tools is displayed.
2. Select Lost Mobile track
3. Select CHANGE PASSWORD
4. Enter old password as well as new password

### LMT Settings (Menu 8.1.3)

1. A List of tools is displayed.
2. Select Lost Mobile track
3. Select LMT Settings
4. Enter Name , phone number one and phone number two.
5. Select Save.

When you enter menu “lost mobile Track”, a LMT code dialogue will be displayed, which needs an authenticate code to enter inside the LMT options.

### Note

▶ default LMT code is “0000”.

On top “**SET LMT**” menu is available for making LMT ON/OFF(Activate/Deactivate).

You should always activate LMT for enabling LMT settings.

Second menu is “**CHANGE PASSWORD**”, which allows user to change the authentication code for accessing Lost Mobile Track. User can change the LMT code by confirming old LMT code and entering new LMT code.

The “**LMT SETTINGS**” is for configuring your name and given mobile numbers, where In case of stolen mobile you wish to get the lost mobile SMS.(e.g friends, family members mobile numbers)


### How to use :Lost Mobile Track

- 1.Go to tools menu.
2. Select Lost Mobile track
3. Enter Default LMT security code.
4. Select ON, press OK
5. Select LMT Settings
6. Enter Name, phone number one and phone number two.
7. Select Save.

## Alarm clock

Menu 8.2

You can set the alarm clock to go on at a specified time.










1. Select On and enter the alarm time you want.
2. Select the repeat period: Once, Mon-Fri, Mon-Sat, Everyday.
3. Select the alarm tone you want and press  [Save].

## Calendar


Menu 8.3

When you enter this menu a calendar will show up. On top of the screen there are sections for date. Whenever you change the date, the calendar will be updated according to the date. And square cursor will be used to locate the certain day. If you see marked date in the calendar, it means that there is a schedule or memo that day. This function helps to remind you of your schedule and memo. The phone will sound an alarm tone if you set this for the note.


To change the day, month, and year.



Key	Description
 , 	Yearly
 , 	Monthly
 ,  , 	Weekly
 , 	Daily

# Tools

In the scheduler mode, press left soft key  [Options] as follows;

## ▶ **View**

View all schedules for the chosen day. Use  ↑, ↓ to browse through the note lists.


If you want to view the note in detail, press left soft key  [OK]. Press left soft key  [Options] to View, Delete, New schedule SMS, New schedule, Send via Text message/Multimedia message/Bluetooth/Email, Edit, Calendar, Scheduler tone, All schedules, Go to date, Multi delete and Delete all.

## ▶ **New schedule SMS**

You can add New schedule SMS for particular date/time.

## ▶ **New schedule**

Allows you to add new schedule for the chosen day. You can store up to 100 notes.


Input the subject and then press left soft key  [OK].

You enter the appropriate information in the follow section; **Time, Repeat** and **Alarm**.

## ▶ **Scheduler tone**

You can set the alarm tone of each chosen date.

## ▶ **All schedules**

View all schedules for the chosen day. Use  ↑, ↓ to browse through the note lists. If you set alarm for the note, the alarm icon is displayed.

## ▶ **Go to date**

You can go to the chosen date directly.

## ▶ **Delete all**

You can delete for the all notes.

## Schedule SMS (SSMS)

The SSMS feature of this phone provides you with the ability to send the Schedule SMS by Scheduled time and date. The moment schedule matches with the current time and date, a Schedule SMS is triggered from your phone and the message is send to your pre-defined number.

In the calendar menu, press left soft key [Options] and select All schedules and it displays following options.

### ▶ **View**

View all scheduled SMS and Calendar Schedule.

### ▶ **New schedule SMS**

Allows you to add new schedule SMS.

### ▶ **New schedule**

Allows you to add new schedule and memo for the chosen day. You can store up to 100 notes. Input the subject and then press left soft key[OK].You enter the appropriate information in the follow section; Time, Repeat and Alarm.

### ▶ **Edit**

You can Edit selected SSMS and Calendar Schedule.

### ▶ **Delete**

You can delete the selected Schedule SMS.

### ▶ **Delete all**

You can delete all Schedule SMS and calendar schedule.

# Tools

When you enter Calendar menu a Calendar is show up. Press Left Soft Key and select new schedule SMS option.




1. Select New schedule SMS
2. Select Right soft Navigation key to Switch ON/OFF SSMS
3. Enter Date, time, phone number and message.
4. Select Left Soft Key or OK key to Save.

## Calculator

Menu 8.4




This contains the standard functions such as +, -, x,  $\div$  : Addition, Subtraction, Multiplication, and Division.

Furthermore, you can use the various function of calculator such as +/-, sin, cos, tan, log, ln, exp, sqrt, deg, rad.


1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press  key to view the result.
5. To input the decimal number, press  key.
6. To end Calculator, press the right soft key  [Back].

## Memo

Menu 8.5

1. Select the Memo by pressing the left soft key  [OK].
2. If the entry is empty, press the left soft key  [New].
3. Input the memo and then press left soft key  [Options] > [Save].

### Note

- ▶ If you want to change the text input mode, press the  in order.

## Stop watch







Menu 8.6

1. Press [Start] to take time and record the lap time by pressing [Lap].
2. Press [Stop] to ascertain the record of lap time.
3. Press [Reset] to default condition.

## Unit converter

Menu 8.7

This converts any measurement into a unit you want. There are 7 types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume and Velocity.

1. You can select one of unit types by pressing  [OK] key.
2. Select the unit you want to convert by pressing  , . It's impossible to input “-” symbol in unit converter.
3. Select the standard value by using , .

## World clock

Menu 8.8

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world, using the left/right navigation keys and left soft key [Zoom in].

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

# Tools

1. Select the city corresponding to your time zone by pressing the left/right navigation keys and left soft key [Zoom in] one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press [OK] key.

## SIM services

Menu 8.9

This menu depends on SIM and the network services.

## Date & Time

Menu 9.1

You can set functions relating to the date and time.

### Set date (Menu 9.1.1)

You can enter the current date.

### Date format (Menu 9.1.2)

You can set the Date format such as YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY.

(D: Day / M: Month / Y: Year)

### Set time (Menu 9.1.3)

You can enter the current time.

### Time format (Menu 9.1.4)

Your can set the time format between 24 hours and 12 hours.

## Auto update (Menu 9.1.5)

Select On, the phone will automatically update the data and time.

## Languages

Menu 9.2

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

## Display

Menu 9.3

### Wallpaper (Menu 9.3.1)

You can select the background pictures in standby mode.

### Backlight timer (Menu 9.3.2)

You can set the light-up duration of the display.  
(Off/10 secs/20 secs/30 secs/60 secs)

# Settings


## Brightness (Menu 9.3.3)

You can set the brightness of LCD: 100%, 80%, 60%, 40%

## Home screen shortcut (Menu 9.3.4)

Selecting On displays the functionalities of 4 Navigation keys and Menu key as pictures on the middle of the idle window. (Profiles/Messaging/ Favourites/Contacts)

## Menu style (Menu 9.3.5)

Your phone provides you with Grid and List menu themes. Set the menu style by scrolling and pressing the left soft key  [OK].

## Dialing style (Menu 9.3.6)

Your phone provides you with four dialing styles. (Color style/Beads style/Digital style/Sketchbook style)

## Standby text (Menu 9.3.7)

If you select On, you can edit the text which is displayed in standby mode.

## Network name (Menu 9.3.8)

If this function is activated, network name will be displayed on LCD.

## Connectivity

Menu 9.4

### Bluetooth (Menu 9.4.1)

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires. This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

## Note

- ▶ If you use LG PC Sync via Bluetooth, you can exchange the data only within phonebook
- ▶ When you receive data from another Bluetooth device, the phone requests confirmation. After confirming the transfer, the file will be copied on to your phone.
- ▶ Depending on the file type, it will be stored in the following folders:
  - **Video (.3gp, mp4):** Videos folder
  - **Image (.bmp, gif, jpg, png):** Images folder
  - **Sound (.amr, wav, aac):** Sounds folder
  - **MP3 (.mp3):** Sounds/MP3 folder
  - **Other files (.txt, html):** Others folder

## ▶ Bluetooth on/off

You can activate or cancel the Bluetooth function.

## ▶ Device list

You can view all devices which your KE970 is already paired to. If you enter Paired devices, you access the options

- **Connect / Disconnect:** After pairing with headset or stereo headset, you should connect with those devices. Then you can use those devices.

# Settings

- **Add new:** Allows to search new Bluetooth devices and add them to your phone's list of paired devices. When you select Add new your handset will start to search for Bluetooth devices within range. Once the device you wish to pair appears on the list press the right soft key [Stop]. Scroll to the desired device and press the left soft key [Pair]. You will then be asked to enter a passcode. The passcode can be any code you wish to use (the same passcode must be used by both devices) or is one that is predetermined by the manufacturer of the device you are trying to pair with. Please check the User Manual of the device you are initiating the pair with to see if it already has a predetermined passcode in place.
  - **Rename:** Allows you to change the name of the paired Bluetooth device and how it is displayed on the handset.
  - **Set as authorised/Set as unauthorised:** Allows you to set an authorised connection between each Bluetooth device. For example if you regularly use a Bluetooth headset with your phone then setting the connection as authorised will mean the headset will automatically connect to the handset each time the headset is powered on.
  - **Remove:** Allows to delete a paired Bluetooth device.
  - **Remove all:** Allows to delete all a paired Bluetooth devices.
- ▶ **Bluetooth settings**
- **My visibility:** This indicates whether or not your handset will be visible to other Bluetooth devices.

- **My name:** You can set the name of Bluetooth device. The default name is LG KE970.
- **My address:** You can view the address of your Bluetooth device.

## Network (Menu 9.4.2)

You can select a network which will be registered either automatically or manually.

### Network selection (Menu 9.4.2.1)

Usually, the network selection is set to Automatic.

- ▶ **Automatic:** If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected "Automatic", the phone will be set to "Automatic" even though the power is off and on.
- ▶ **Manual:** The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.
- ▶ **Preferred:** You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

# Settings

## GPRS attach (Menu 9.4.2.2)

You can set GPRS attach service.

### ▶ **Power on**

If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application created the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

### ▶ **When needed**

If you select this menu, the GPRS connection is established when you connect a WAP or application service and closed when you end the WAP or application connection.

## Network profile (Menu 9.4.2.3)

### ▶ **Data connections**

- **Name:** You can type the network name.
- **Bearer:** You can set the bearer data service.  
1 Data/2 GPRS

### <Data settings>

Appears only if you select Data Settings as a Bearer/service.

- **Dial number:** Enter the telephone number to dial to access your WAP gateway.
- **User ID:** The users identity for your dial-up server (and NOT the WAP gateway).
- **Password:** The password required by your dial-up server (and NOT the WAP gateway) to identify you.
- **Call type:** Select the type of data call; Analogue or Digital (ISDN).

- **Call speed:** The speed of your data connection; 9600 or 14400 (Depends on Operator)
- **Linger time:** You need to enter timeout period.  
After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.
- **Primary server:** Input the IP address of the primary DNS server you access.
- **Secondary server:** Input the IP address of the secondary DNS server you access.

#### <GPRS settings>

The service settings are only available when GPRS is chosen as a bearer service.

- **APN:** Input the APN of the GPRS.
- **User ID:** The users identify for your APN server.
- **Password:** The password required by your APN server.

- **Primary server:** Input the IP address of the primary DNS server you access.
- **Secondary server:** Input the IP address of the secondary DNS server you access.

#### USB connection (Menu 9.4.3)

You can choose one mode of Data service and Mass storage.

When you have finished using the phone memory, click Exit and take the following steps.

#### Caution

- ▶ Before you remove the cable, it is necessary that you click Exit. Or, the integrity of transferred data is not guaranteed.


1. Click on the notification area.  
[Unplug or Eject Hardware]

# Settings

2. Select USB Mass Storage Device, click on Stop.  
The following message will appear: "The 'USB Mass Storage Device' device can now be safely removed from the system"
3. Then remove the cable.

## Call

Menu 9.5

You can set the menu relevant to a call by pressing  [Select] in the Setting menu.

### Call divert (Menu 9.5.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

#### ▶ All voice calls

Diverts voice calls unconditionally.

#### ▶ If busy

Diverts voice calls when the phone is in in-call.

#### ▶ If no reply

Diverts voice calls which you do not answer.

#### ▶ If out of reach

Diverts voice calls when the phone is switched off or out of coverage.

#### ▶ All data calls

Diverts to a number with a PC connection unconditionally.

#### ▶ All fax calls

Diverts to a number with a fax connection unconditionally.

#### ▶ Cancel all

Cancels all call divert service.

## The submenus

Call divert menus have the submenus shown below.

### - **Activate**

Activate the corresponding service.

### **To voice mailbox**

Forwards to message centre. This function is not shown at All data calls and All fax calls menus.

### **To other number**

Inputs the number for diverting.

### **To favourite number**

You can check recent 5 diverted numbers.

### - **Cancel**

Deactivate the corresponding service.

### - **View status**


View the status of the corresponding service.

## Answer mode (Menu 9.5.2)


### ▶ **Slide open**

If you select this menu, you can receive an incoming call when you open the slide.

### ▶ **Any key**

If you select this menu, you can receive a call by pressing any key except  [End] key.

### ▶ **Send key only**

If you select this menu, you can receive a call by only pressing  [Send] key.

## Send my number (Menu 9.5.3)

(network and subscription dependent)

### ▶ **Set by network**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

# Settings

## ▶ **On**

You can send your phone number to another party.

Your phone number will be shown on the receiver's phone.

## ▶ **Off**

Your phone number will not be shown.

## **Call waiting (Menu 9.5.4)**

(network dependent)

### ▶ **Activate**

If you select Activate, you can accept a waiting (receiving) call.

### ▶ **Cancel**

If you select Cancel, you cannot recognize the waiting (receiving) call.

### ▶ **View status**

Shows the status of Call waiting.

## **Minute minder (Menu 9.5.5)**

If you select On, you can check the call duration by a beep sound given every minute during a call.

## **Auto redial (Menu 9.5.6)**

### ▶ **On**

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

### ▶ **Off**

Your phone will not make any attempts to redial when the original call has not connected.

## **Send DTMF (Menu 9.5.7)**

You can send touch tones during an active call to control your voice mailbox or other automated phone services.


## Security

Menu 9.6

### PIN code request (Menu 9.6.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press  [OK].
2. Set On/Off.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.

5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

### Phone lock (Menu 9.6.2)

You can use a security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to When switch on.

If you set phone lock to When SIM changed, your phone will request security code only when you change your SIM card.

# Settings

## ▶ **Call barring (Menu 9.6.3)**

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

### ▶ **All outgoing**

The barring service for all outgoing calls.

### ▶ **Outgoing international**

The barring service for all outgoing international calls.

### ▶ **O/G international except home country**

The barring service for all international outgoing calls except home network.

### ▶ **All incoming**

The barring service for all incoming calls.

### ▶ **Incoming when abroad**

The barring service for all incoming calls when roaming.

## ▶ **Cancel all barrings**

You can cancel all barring services.

## ▶ **Change password**

You can change the password for Call Barring Service.

The submenus:

### - **Activate**

Allows to request the network to set call restriction on.

### - **Cancel**

Set the selected call restriction off.

### - **View status**

View the status whether the calls are barred or not.

## Fixed dial number (Menu 9.6.4)

### (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

#### ▶ On

You can restrict your outgoing calls to selected phone numbers.

#### ▶ Off

You can cancel fixed dialling function.

#### ▶ List view


You can view the number list saved as Fixed dial number.

## Change codes (Menu 9.6.5)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person.

You can change the access codes:

### **Security code, PIN1 code, PIN2 code.**

1. If you want to change the Security code/PIN1/ PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN/PIN2 code and verify them.

# Settings

## Flight mode

Menu 9.7

This allows you to use only the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prevented.

If you set the flight mode on, the icon will be displayed on the screen instead of the network signal icon.

- ▶ **On:** You cannot make (or receive) any calls, including emergency calls, or use other features that require network coverage
- ▶ **Off:** You can deactivate the flight mode and restart your handset to access the network.

## Power saving

Menu 9.8

If you set On, you can save the power when you don't use the phone.

## Reset default

Menu 9.9

You can initialize all factory defaults. You will need Security code to activate this function.

## Memory status


Menu 9.0

You can check free space and memory usage of each repository, Internal memory and Multimedia memory. You can go to each repository menu.

# Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

## Standard Battery



## Hands free ear microphone



## Travel Adapter

This charger allows you to charge the battery while away from home or your office.



## Data cable/CD

You can connect your phone to PC to exchange the data between them.



## Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

# Technical data

## General

**Product name:** KE970

**System:** GSM 900 / DCS 1800 / PCS 1900

## Ambient Temperatures

**Max:** +55°C

**Min:** -10°C

# Declaration of Conformity LG Electronics

## Suppliers Details

### Name

LG Electronics Inc

### Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

### Product Name

E-GSM 900 / DCS 1800 / PCS 1900 T1 Band Terminal Equipment

### Model Name

KE970

### Trade Name

LG

CE 0168

## Applicable Standards Details

### RATTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1  
EN 300 328 V 1.6.1  
EN 60950-1 : 2001  
EN 50360/EN 50361 : 2001  
EN 301 511 V9.0.2

## Supplementary Information

The conformity to above standards is verified by BABT.

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog, Kim / Director

07. Aug. 2007

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel: +31 -36-547 - 8940, e-mail: esoldm@lgs.com

  
Signature of representative













## **LG Mobile Phone Service Centers in Middle East & Africa**





## ❑ **Service for LG Mobile Phone is available in the following countries**

(List includes Only the Main Service Centers. Other area's customers can contact the Headquarter of their countries for further information)

### **Middle East Countries**

#### ❑ **13 Countries**

- UAE
- Saudi Arabia
- Qatar
- Oman
- Kuwait
- Bahrain
- Yemen
- Iran
- Iraq
- Lebanon
- Egypt
- Syria
- Jordan

### **Africa Countries**

#### ❑ **7 Countries**

- Morocco
- Tunisia
- Libya
- Algeria
- Kenya
- Nigeria
- South Africa

### **Other Countries**

#### ❑ **2 Countries**

- Turkey
- Pakistan

## Middle East Countries

UAE

Saudi Arabia

Qatar

Oman

Kuwait

Bahrain

Yemen

Iran

Iraq

Lebanon

Egypt

Syria

Jordan

# UAE

## Headquarter

- ❑ Agent Name : Jumbo Electronics Co. Ltd.
- ❑ Address : Telecommunication Division, P.O. Box 3426, Dubai, UAE
- ❑ Telephone No. : +97143367999 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97143340821
- ❑ Web Site : <http://www.jumbocorp.com>
- ❑ Email : Roby.George@jumbo.ae

## Service Centers

Area	Address	Telephone No.	Fax No.
Dubai (Karama)	Near Strand Cinema, P.O. Box 3426, Dubai	+97143362621	+97143360847
Abudhabi	Regional Service Center P.O. Box 3832,	+97126732201	+97126733930
Al Ain	Regional Service Center P.O. Box 15444	+97137542898	+97137557898
Sharjah	Regional Service Center P.O. Box 5331	+97165599725	+97165538365
Fujairah	Regional Service Center P.O. Box 868	+97192221406	+97192221828
Ras Al Khaimah	Regional Service Center P.O. Box 1054	+97172272571	+97172271881

# UAE

## Headquarter

- ❑ Agent Name : Al Sayegh Brothers Trading L.L.C
- ❑ Address : Al Sayegh Brothers Building, Muraqqabat, Deira, P.O. Box 55106, Dubai, UAE
- ❑ Telephone No. : +97142663200 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97142669964
- ❑ Web Site : [www.alsa-g.com](http://www.alsa-g.com)
- ❑ Email : [helpdesk@alsa-g.com](mailto:helpdesk@alsa-g.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Dubai	Al Sayegh Brothers Building, Muraqqabat, Deira P.O. box 55106	+97142622770	+97142669964/ +97142680340
Abu Dhabi	Lotus Tower, Airport road, P.O. Box 7993	+97124452111	+97124462040
Sharjah	Al Sayegh Brothers Main SVC Center Industrial area #6.	+97165436221	+97165437422

# UAE

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : World Trade Centre, P. O. Box 9266, Dubai UAE
- ❑ Telephone No. : 04 3318555 (LG Customer Information Center: 800 54)
- ❑ Fax No. : 04 3318855
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [atcc@axiomtelecom.com](mailto:atcc@axiomtelecom.com)

## Service Centers in UAE

Area	Address	Telephone No.	Fax No.
Dubai	Shk Zayed Road, Al Kawakeb Building, Block C, P O Box 9266, Dubai, UAE	00971 43210600	00971 43210400
Abu Dhabi	Defense Road, Block A 4, Next to Al Sultan Restaurant. Abu Dhabi, UAE	00971 26417144	00971 26417076
Sharjah	Shop no 78, Crystal Plaza, Buhaira Corniche Road , Shj UAE	00971 65751503	00971 65751404

# Saudi Arabia

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 9th Floor, Al Subaiee Tower, Abdul Aziz Highway, Al Khobar, KSA, P O Box 4742
- ❑ Telephone No. : 00966 38019000
- ❑ Fax No. : 00966 38019051
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [ksasupport@axiomtelecom.com](mailto:ksasupport@axiomtelecom.com)

## Service Centers in KSA

Area	Address	Telephone No.	Fax No.
KHOBAR	9, Al Fanar Complex, Khobar-Dammam Highway, Khobar 31952, KSA	00966 38587922	00966 38587910
RIYADH	Olaya Main Street, Nr. Al Owais Market, Riyadh, KSA	00966 12698255	00966 12698355
JEDDAH	City Plaza Centre, Price Sultan Street, Jeddah, KSA	00966 26922764	00966 26924575

# Saudi Arabia

## Headquarter

- ❑ Agent Name : AL Farida Telecom Co. Ltd. (SKY)
- ❑ Address : P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia.
- ❑ Telephone No. : +96612112345
- ❑ Fax No. : +96612112311
- ❑ Email : marwan.alshare@alhokair.com.sa

## Service Centers

Area	Address	Telephone No.	Fax No.
Riyadh	P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia	+96612112345	+96612112311

# Saudi Arabia

## Headquarter

- ❑ Agent Name : Itsalat International Co.
- ❑ Address : P.O. Box 9798, Dammam, 31423, Saudi Arabia.
- ❑ Telephone No. : +96638343000
- ❑ Fax No. : +96638334664
- ❑ Web Site : <http://www.itsalat.com>
- ❑ Email : [ashraf.hassan@itsalat.com](mailto:ashraf.hassan@itsalat.com), [headoffice@itsalat.com](mailto:headoffice@itsalat.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Jeddah	Palestine st., Soukal Jawal, Jeddah	+96626677988	+96626643618
Riyadh	Mursalat, Neat STC, Riyadh	+96614559106	+96612645766
Dammam	Malik Fahd Road	+96638411111	+96638469055

# QATAR

## Headquarter

- ❑ Agent Name : Video Home & Electronics Center
- ❑ Address : Musherib Street, P.O.Box 4668, Doha, Qatar
- ❑ Telephone No. : +9744315865
- ❑ Fax No. : +9744437876
- ❑ Web Site : <http://www.jumboqatar.com>
- ❑ Email : alexjacob@jumboqatar.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Doha	Musherib street, P.O.Box 4668, Doha, Qatar	+9744315865	+9744437876

# OMAN

## Headquarter

- ❑ Agent Name : Oman Gulf Enterprises L.L.C
- ❑ Address : P.O. Box 175, PC 117, Muscat, OMAN
- ❑ Telephone No. : +96824502866/8
- ❑ Fax No. : +96824502019
- ❑ Web Site : <http://www.otegroup.com>
- ❑ Email : [sudhirk@otegroup.com](mailto:sudhirk@otegroup.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Salalah	P.O. Box 211, PC2823, Salalah, OMAN	+96823210684	+96823210145
Sur	P.O. Box 480, PC 411, Sur, OMAN	+96825545107	+96825545107
Nizwah	P.O. Box 784, PC 611, Nizwah, OMAN	+96825412549	+96825412549
Sohar	P.O. Box 205, PC 321, Al Tarif, Sohar, OMAN	+96826843942	+96826843942

# OMAN

## Headquarter

- ❑ Agent Name : Cellucom and Partners L.L.CI
- ❑ Address : Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman
- ❑ Telephone No. : +96824835010
- ❑ Fax No. : +96824834234
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Muscat, Oman	Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman	+96824835010	+96824834234

# KUWAIT

## Headquarter

- ☐ Agent Name : Cellucom Kuwait WLL
- ☐ Address : Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait
- ☐ Telephone No. : +9655710801
- ☐ Fax No. : +9655710803
- ☐ Web Site : <http://cellucom.com>
- ☐ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Salmiya, Kuwait	Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait	+9655710801	+9655710803

# KUWAIT

## Headquarter

- ☐ Agent Name : Al Ghanim Sons Group.
- ☐ Address : First Floor,Gharabally Building, Dhajeej Area, South Farwaniya, SAFAT-13097, Kuwait.
- ☐ Telephone No. : + 965 4331709
- ☐ Fax No. : + 965 4344790
- ☐ Email : snair@alghanim-sons.com

## Service Centers

Area	Address	Telephone No.	Fax No.
South Farwaniya	First Floor,Gharabally Building,Dhajeej Area,South Farwaniya , SAFAT-13097,Kuwait	+ 965 4331709	+ 965 4344790

# BAHRAIN

## Headquarter

- ❑ Agent Name : Cellucom WLL
- ❑ Address : Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain
- ❑ Telephone No. : +97317294026
- ❑ Fax No. : +97317294046
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Manama, Bahrain	Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain	+97317294026	+97317294046

# BAHRAIN

## Headquarter

- ❑ Agent Name : Fono
- ❑ Address : Gosi Complex, Exhibition Rd, Manama, Bahrain
- ❑ Telephone No. : 00973 17312001
- ❑ Fax No. : 00973 17310884
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [fcc@almoayyedintl.com.bh](mailto:fcc@almoayyedintl.com.bh)

## Service Centers in Bahrain

Area	Address	Telephone No.	Fax No.
Bahrain	Fono, Gosi Complex, Exhibition Rd, Manama, Bahrain	00973-17312001	00973 17310884

# YEMEN

## Headquarter

- ❑ Agent Name : Al Mutarreb
- ❑ Address : Hada st. Al Mutarreb for Trading, P.O. Box-19272
- ❑ Telephone No. : +9671503240
- ❑ Fax No. : +9671500878
- ❑ Email : mutarreb@y.net.ye

## Service Centers

Area	Address	Telephone No.	Fax No.
Yemen	Hada st. Al Muttrieb for Trading P.O. Box 19272	+9671503240	+9671500878

# IRAN

## Headquarter

- ❑ Agent Name : Persian Telecom (Al Raheel General Trading Co., L.L.C.)
- ❑ Address : First floor, No.140, Ghaem Magham St., Tehran, IRAN
- ❑ Telephone No. : +982188302922/+982188827100
- ❑ Fax No. : +982188302921
- ❑ Web Site : <http://www.persiantelecomclub.com>
- ❑ Email : [bahrami@persiantelecom.ir](mailto:bahrami@persiantelecom.ir)

## Service Centers

Area	Address	Telephone No.	Fax No.
Tehran	First floor, No.140, Ghaem Magham St., Tehran, IRAN	+982188302922 +982188827100	+982188302921
Tehran	No.69&70, Ground Floor, Aladdin Trade complex, Jomhori Ave, Tehran, IRAN	+982166722675 +982166724173	+982166724173

# IRAQ

## Headquarter

- ❑ Agent Name : Al-Seera Communication Company
- ❑ Address : 14th Ramadan Road, Al-Mansour Street, Baghdad, Iraq
- ❑ Telephone No. : +9647901393615
- ❑ Fax No. : +96415427798
- ❑ Web Site : <http://www.alseera.com>
- ❑ Email : seeracom@hotmail.com, mohammed\_d\_r@hotmail.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Baghdad	14th Ramadan Road, Al Mansour Street	+9647901393615	+96415427798

# LEBANON

## Headquarter

- ❑ Agent Name : Digital technologies
- ❑ Address : Jdeidet El Metn, Beirut Lebanon
- ❑ Telephone No. : +961 01-236110
- ❑ Fax No. : +961-1-236110
- ❑ Email : digitaltechnologies@idm.net.lb

## Service Centers

Area	Address	Telephone No.	Fax No.
Beirut	Jdeidet El Metn, near Gallery Khabbaz	+961 01-236110	+961-1-236110

# EGYPT

## Headquarter

- ❑ Agent Name : Delta Communication
- ❑ Address : 39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt
- ❑ Telephone No. : +2027487100 (LG Customer Information Center: 19960)
- ❑ Fax No. : +2025201241
- ❑ Email : salahezz@delta-group.org

## Service Centers

Area	Address	Telephone No.	Fax No.
Nasar City	39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt	+2027487100	+2025201241

# EGYPT

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 8, Al Oboor Buildings, Salah Salem Street, Cairo, Egypt
- ❑ Telephone No. : 002 02 4015050/4013939
- ❑ Fax No. : 002 02
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [menon@axiomtelecom.com](mailto:menon@axiomtelecom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
AXIOM-CAIRO	3, Abdul Fida Street, Zamalik, Cairo Province, Egypt	002 02 7377881	002 02 7377882
AXIOM- ALEXANDRIA	10, Victoria Square Amanwel, Zahrat Al Kotn Building, Somooha, Alexandria, Egypt	002 02 4242529	

# SYRIA

## Headquarter

- ❑ Agent Name : ECC (Engineering Commerce Co.)
- ❑ Address : Abo Romaneh Shakib Arslan str.
- ❑ Telephone No. : +963113347720/1/3/4/5/6, +963113347465
- ❑ Fax No. : +963113333825
- ❑ Email : ecc@net.sy

## Service Centers

Area	Address	Telephone No.	Fax No.
Damascus	Kaboon – facing the bus Pullman station	+963119345	+963114537010
Aleppo	Jameilia beside Alseddeik Mosque	+963212284002	+963212122367


# JORDAN

## Headquarter

- ❑ Agent Name : 7 Global For Communication Equipments
- ❑ Address : Jordan - Amman
- ❑ Telephone No. : 00962 6 5563008
- ❑ Fax No. : 962-6-5563009
- ❑ Web Site/Email : [www.7global.mobi](http://www.7global.mobi) / [Info@7global.info](mailto:Info@7global.info)

## Service Centers

Area	Address	Telephone No.	Fax No.
Jordan	Jordan - Amman	00962 6 5518883	00962 6 5563008

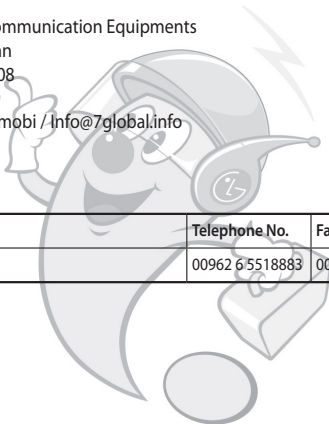

Life's  
Good



## Africa Countries

- Morocco
- Tunisia
- Libya
- Algeria
- Kenya
- Nigeria
- South Africa

# MOROCCO

## Headquarter

- ❑ Agent Name : LGEMC (LG Electronics Morocco S.A.R.L)
- ❑ Address : Immeuble 2, Zenith Millenium, Sidi Maarouf, Lotissement Attawfiq, casa, Morocco
- ❑ Telephone No. : 081005454 (LG Customer Information Center)
- ❑ Fax No. : +21222975959
- ❑ Email : abdelhamid@lge.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Cetelec	5 rue Albouhtouri casa anfa Maroc	+21222270790	+21222203748
Lineatec	105 Avenue Fal ould oumaeir Number 1, Agdal, Rabat	+21237776506	+21237671040


# TUNISIA

## Headquarter

- ❑ Agent Name : TTE (Tunisian Telecom Electric Distribution)
- ❑ Address : Tunisian telecom Distribution, 22 Rue 8600 ZI Charguia, Tunis, Tunisia
- ❑ Telephone No. : +21670838424
- ❑ Fax No. : +21670838422
- ❑ Web Site : <http://www.tte.com.tn>
- ❑ Email : f.hamdi@tte.com.tn

## Service Centers

Area	Address	Telephone No.	Fax No.
Tunis	22 Rue 8600 ZI Charguia, Tunis, Tunisia	+21670838424	+21670838422

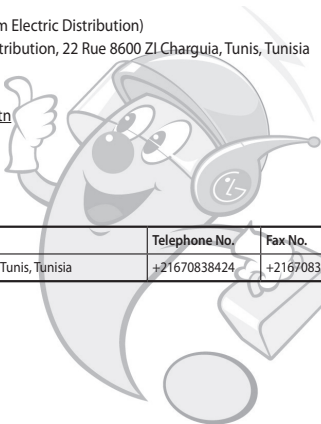

# LIBYA

## Headquarter

- ❑ Agent Name : AL MASAR the Import of Electronic Devices
- ❑ Address : Cedy Elmasri, Almadar Street Tripoli Libya
- ❑ Telephone No. : 00218-21-3600167
- ❑ Fax No. : 00218-21-3600167
- ❑ Web Site/Email : [www.massar.com.ly](http://www.massar.com.ly) / [Info@massar.com.ly](mailto:Info@massar.com.ly)

## Service Centers

Area	Address	Telephone No.	Fax No.
Tripol	Cedy Elmasri, Almadar Street Tripoli Libya	00218-21-3600167	00218-21-3600167
Tripoli	Aldhara, Al Wadan Street	+218213344333	+218213344333
Mostra	Aldees Street	+21851626294	+21851626294

# ALGERIA

## Headquarter

- ❑ Agent Name : Algerika
- ❑ Address : 409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger.
- ❑ Telephone No. : +21321917494
- ❑ Fax No. : +21321917505
- ❑ Email : [garantie@algerie-k.com](mailto:garantie@algerie-k.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Algiers	409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger	+21321917494	+21321917505

# KENYA

## Headquarter

- ❑ Agent Name : Skytel Limited
- ❑ Address : Wilson Airport, PO Box 42444, Nairobi, Kenya
- ❑ Telephone No. : +25420252240/1
- ❑ Fax No. : +25420252240
- ❑ Email : alex.kabuagi@xcom.co.ke

## Service Centers

Area	Address	Telephone No.	Fax No.
Nairobi	Wilson Airport, PO Box 42444, Nairobi, Kenya	+25420252240/1	+25420252240

# NIGERIA

## Headquarter

- ❑ Agent Name : LGEAL (LG Electronics Antwerp Logistics N.V.)
- ❑ Address : 65C, Opebi Road, Ikeja Lagos. Nigeria
- ❑ Telephone No. : +23418935454 (LG Customer Information Center)
- ❑ Fax No. : +23417936510, 4977753
- ❑ Email : cland@lge.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Lagos	65C, Opebi Road, Ikeja Lagos. Nigeria	+23418927777	+23417936510

# SOUTH AFRICA

## Headquarter

- ❑ Agent Name : Vodacare
- ❑ Address : ARC,Gound Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley,Midrand,SA.
- ❑ Telephone No. : +27115464039 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +27115464331
- ❑ Web Site : <http://www.cellucity.co.za>
- ❑ Email : [craig.gower@vodacom.co.za](mailto:craig.gower@vodacom.co.za)

## Service Centers


Area	Address	Telephone No.	Fax No.
Midrand	ARC,Gound Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley Midrand, SA	+27115464039	+27115464331

# SOUTH AFRICA

## Headquarter

- ❑ Agent Name : Combase
- ❑ Address : 44 Old Pretoria Road, Midrand, SA.
- ❑ Telephone No. : +27116558000 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +2711315 8387
- ❑ Email : [deanw@combase.co.za](mailto:deanw@combase.co.za)

## Service Centers



Area	Address	Telephone No.	Fax No.
Capetown	64-70 Edward Street, Belville, Capetown..	+27219102940	+27219103011
Durban	379 Umbilo Road, Durban	+27312060877	+27312057655
Port Elizabeth	Shop 1, Salgar House, 18 Newton Street, Newton Park.	+27413632989	+27413631787
Nelspruit	Shop G14, Nelcity Building, Cnr Paul Kruger & Louis Trichard Rds, Nelspruit	+27137554185	+27137554183
Bloemfontein	Shop 16, College Square, Nelson Mandela Road, Bloemfontein, 9300	+27514441688	+27514441922
Midrand	44 Old Pretoria Road, Midrand, SA	+27116558000	+27113158387

# SOUTH AFRICA

## Headquarter

- ❑ Agent Name : IXIA Trading 348 PTY Ltd
- ❑ Address : Block B, Lone Creek, Waterfall Park, Bekker Street, Vorna Valley, Midrand, 1685, South Africa
- ❑ Telephone No. : +27118057863 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +27866339459
- ❑ Email : david@ixia.co.za

## Service Centers

Area	Address	Telephone No.	Fax No.
Midrand	Block B, Lone Creek, Waterfall Park, Bekker Street, Vorna Valley, Midrand, 1685, South Africa	+27118057863	+27866339459
Durban	Collection arranged	+27116558118 or +270861545454	+27866340735
Cape Town	Collection arranged	+27116558118 or +270861545454	+27866340735
Port Elizabeth	Collection arranged	+27116558118 or +270861545454	+27137554183
East London	Collection arranged	+27116558118 or +270861545454	+27866340735
Newcastle	Collection arranged	+27116558118 or +270861545454	+27866340735
Polakwane	Collection arranged	+27116558118 or +270861545454	+27866340735
Bloemfontein	Collection arranged	+27116558118 or +270861545454	+27866340735
Kimberley	Collection arranged	+27116558118 or +270861545454	+27866340735

Life's  
Good



## Other Countries

- Turkey
- Pakistan

La

# TURKEY

## Headquarter

- ❑ Agent Name : Teleservice Int. Telefon
- ❑ Address : Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 İstanbul
- ❑ Telephone No. : +902165450404
- ❑ Fax No. : +902165445656
- ❑ Web Site : <http://www.teleservice.com>
- ❑ Email : [sinan.kus@teleservice.com](mailto:sinan.kus@teleservice.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Istanbul	Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 İstanbul	+902165450404	+902165445656
Ankara	Mithatpasa cad. No:31 A TR-06420 Kızılay/Ankara	+903124301222	+903124353365
Diyarbakır	Inönü Cad. 4/C Büyük Hotel Altı Da_kapı TR-21090 Diyarbakır	+904122287785	+904122288088
Izmi	Gazi Bulvarı No:90/B TR-35230 Çankaya/Izmir	+902324458600	+902324457775
Teleservice			
KVK			
SNG			
Vadox			

# PAKISTAN

## Headquarter

- ❑ Agent Name : New Allied Mobile Communication
- ❑ Address : 3/3 Ground Floor, Rabbiya Garden, M.C.H.S., Shaheed-e-Millat Road, Karachi, Pakistan.
- ❑ Telephone No. : +92214388271/74
- ❑ Fax No. : +92214388278
- ❑ Email : zpalg@yahoo.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Karachi	N-1, 4th Floor, Al -Haroon, 10 Aga Khan III Road, Karachi. 74400.	+92212729722	+92212729722
Lahore	Suite # 10, 2nd Floor Hafeez Centre Gulburg III, Lahore	+92425759157	+92425714684
Multan	352 Hithar Road Behind Hussain Agahi Road, Multan	+926145184012	+92616561456
Faisalabad	63, Gulistan Market, Street # 3, Near Taj Cinema, Railway Road, Faisalabad	+92412640655	-
Islamabad	2 / B, N.H.S.P Centre, Near Utility Store Head Office, Fazal-e-Haq Road, Blue Area	+925128282734	+92512828234



Visit us on  
<http://www.lgservice.com>  
<http://www.lgmobile.com>



# Declaration of Conformity



LG Electronics

## Supplier Details

### Name

LG Electronics Inc

### Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

### Product Name

E-GSM 900 / DCS 1800 / PCS 1800 Tri Band Terminal Equipment

### Model Name

KE970

### Trade Name

LG

CE 0168

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 480-01 v1.6.1 / EN 301 480-07 v1.3.1 / EN 301 480-17 v.1.2.1  
EN 300 328 V 1.8.1  
EN 60950-1 : 2001  
EN 50360/EN 50361 : 2001  
EN 301 511 V9.0.2

## Supplementary Information

The conformity to above standards is verified by BABT.

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog, Kim / Director

07. Aug. 2007

LG Electronics Logistics and Services B.V.  
Volkswaagweg 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36-647 - 8940, e-mail : seckim @ lge.com

  
Signature of representative

# بيانات فنية

## عامّة

اسم المنتج: KE970

النظام: GSM 900 / DCS 1800 / PCS 1900

## درجة الحرارة المحيطة


أقصى: +55°C

أدنى: -10°C

هذه القطع المساعدة حسب حاجتك من الاستعمال.



سماعات الاذن  
- تحرير اليدين



بطارية قياسية

## ملاحظة

◀ استخدم ملحقات LG الأصلية دائماً.

◀ يؤدي عدم القيام بذلك إلى إبطال الضمان.

◀ قد تختلف الملحقات من منطقة لأخرى؛ يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.



شاحن سفر

هذا الشاحن يمكنك من شحن البطارية خلال تواجدك خارج المنزل أو المكتب.



جهاز بيانات/قرص مدمج

يمكنك من توصيل جوالك إلى جهاز الكمبيوتر لتبادل المعلومات.

## وضع الطائرة

### القائمة 7.9

يسمح لك هذا الخيار باستعمال ميزات الهاتف التي لا تتطلب استخدام الشبكة اللاسلكية لدى تواجدك في الطائرة أو في الأمكنة التي يمنع فيها استخدام الشبكة اللاسلكية.

إذا قمت بتشغيل وضع الرحلات الجوية، فيظهر الرمز على الشاشة بدلاً من رمز إشارة الشبكة.

◀ قيد التشغيل: لا يمكنك إجراء المكالمات (أو تلقيها). بما فيها مكالمات الطوارئ.  
أو استخدام ميزات أخرى تتطلب تغطية الشبكة.

◀ متوقف عن التشغيل: بإمكانك إلغاء تنشيط وضع الرحلات الجوية وإعادة تشغيل الهاتف للوصول إلى الشبكة.

## توفير الطاقة

### القائمة 8.9

إذا قمت بتعيين «تشغيل»، فيمكنك توفير الطاقة عند عدم استخدام الهاتف.

## إعادة ضبط المصنع

### القائمة 9.9

لبدء كل إعدادات المصنع الافتراضية، ستحتاج إلى رمز الحماية لتنشيط هذه الوظيفة.

## حالة الذاكرة

### القائمة 0.9

بإمكانك التحقق من المساحة الحرة واستخدام الذاكرة لكل موقع تخزين في الذاكرة والذاكرة الداخلية وذاكرة الوسائط المتعددة. بإمكانك الانتقال إلى كل موقع تخزين في الذاكرة.

القوائم الفرعية:

- تنشيط

تسمح بطلب الشبكة لتشغيل تقييد  
المكالمة.

- إلغاء

ضبط إيقاف تقييد المكالمات المحددة.

- عرض الحالة

عرض الحالة سواء كانت المكالمات محظورة  
أم لا.

## رقم اتصال ثابت (الفاتمة 4.6.9) (استناداً إلى SIM)

لحظر المكالمات الصادرة على أرقام هواتف  
محددة، تتم حماية الأرقام عن طريق رمز PIN2.

◀ تشغيل

لحظر المكالمات الصادرة على أرقام هواتف  
محددة.

◀ إيقاف

إلغاء تنشيط وظيفة الاتصال المحدد.

◀ قائمة الأرقام

لعرض قائمة الأرقام التي تم حفظها كرقم  
الاتصال المحدد.

## تغيير الرموز (الفاتمة 5.6.9)

هي اختصار لعبارة رقم التعريف الشخصي  
المستخدم فقط لمنع الاستخدام غير المرخص  
به. يمكن تغيير رموز الوصول: رمز PIN1 و رمز  
PIN2 ورمز الحماية.

1. إذا رغبت في تغيير رمز الحماية رمز  
PIN1/PIN2، فأدخل الرمز الأصلي، ثم  
اضغط على [موافق].

2. أدخل رمز الحماية رمز PIN1/PIN2  
الجدد ثم أكدها.

### قفل الهاتف (القائمة 2.6.9)

يمكنك استخدام رمز الحماية لتفادي الاستخدام غير المسموح به للهاتف. عند تشغيل الهاتف. فإنه سيطلب رمز الحماية. وذلك في حالة ضبط قفل الهاتف على «عند التشغيل».

في حالة ضبط قفل الهاتف على الإعداد «عند تغيير SIM»، فسوف يطلب الهاتف رمز الحماية فقط عند تغيير بطاقة SIM.

### حظر المكالمات (القائمة 3.6.9)

تمنع خدمة حظر المكالمات الهاتف من إجراء أو تلقي فئة معينة من المكالمات. تتطلب هذه الوظيفة كلمة المرور الخاصة بحظر المكالمات. يمكن عرض القوائم الفرعية التالية.

#### ◀ كل المكالمات الصادرة

خدمة الحظر لكل المكالمات الصادرة.

#### ◀ الدولية

خدمة الحظر لكل المكالمات الدولية الصادرة.

#### ◀ الصادرة الدولية أثناء التجوال

خدمة الحظر لكل المكالمات الدولية الصادرة فيما عدا الشبكة الموجودة داخل البلد.

#### ◀ كل مكالمات واردة

خدمة الحظر لكل المكالمات الواردة.

#### ◀ الواردة أثناء التجوال

خدمة الحظر لكل المكالمات الواردة عند التجوال.

#### ◀ إلغاء الكل

لإلغاء كل خدمات الحظر.

#### ◀ تغيير كلمة المرور

لتغيير كلمة المرور لخدمة حظر المكالمات.

القائمة 6.9

اعدادات الحماية

طلب رمز PIN (القائمة 1.6.9)

من هذه القائمة يمكن ضبط الهاتف على طلب رمز PIN الخاص ببطاقة SIM عند تشغيل الهاتف. إذا تم تنشيط هذه الوظيفة، فسيطلب منك إدخال رمز PIN.

1. حدد طلب رمز PIN في قائمة ضبط الحماية، ثم اضغط على [OK].

2. تشغيل/ إيقاف تشغيل الضبط.

3. إذا أردت تغيير إعدادات الضبط، فستحتاج إلى رمز PIN عند تشغيل الهاتف.

4. إذا أدخلت رمز PIN خطأً لأكثر من 3 مرات، فسيتم قفل الهاتف. إذا كان رمز PIN محظوراً، يتم إدخال رمز PIN.

5. يمكنك إدخال رمز PUK عشر مرات كحد أقصى. إذا قمت بإدخال رمز PUK على نحو خطأً أكثر من 10 مرات، فلن يمكنك إلغاء قفل الهاتف. مما سيطلب منك الاتصال بمزود الخدمة.

إعادة الاتصال تلقائياً (القائمة 6.5.9)

تشغيل

يحاول الهاتف عند تنشيط هذه الوظيفة معاودة الاتصال تلقائياً في حالة فشل الاتصال.


إيقاف

لن يقوم هاتفك بإجراء أي محاولات لمعاودة الاتصال عند فشل الاتصال.

إرسال DTMF (القائمة 7.5.9)

يمكنك إرسال نغمات الاتصال أثناء مكالمة نشطة للتحكم في صندوق البريد الصوتي الخاص بك أو خدمات الهاتف التلقائية الأخرى.

◀ مفتاح الإرسال فقط

يمكن عند تحديد هذه القائمة، تلقي المكالمات بالضغط على مفتاح  [إرسال] فقط.

### إنتظار المكالمات (الفاتمة 4.5.9) (تعتمد على الشبكة)

◀ تنشيط

يمكن تحديد تنشيط، قبول (تلقي) مكالمة انتظار.

◀ إلغاء

لا يمكن عند تحديد إلغاء، قبول (تلقي) مكالمة انتظار.

◀ عرض الحالة

تعرض حالة مكالمة الانتظار.

### إرسال رقمي (الفاتمة 3.5.9)

(يعتمد هذا على الشبكة والاشتراك)

◀ ضبط من الشبكة

يمكن عند تحديد هذه الوظيفة إرسال رقم هاتفك بناء على خدمة الخطين مثل خط 1 أو خط 2.

◀ تشغيل

لإرسال رقم هاتفك إلى طرف آخر، سيتم عرض رقم هاتفك في هاتف المستلم.

◀ إيقاف التشغيل

لن يظهر رقم الهاتف الخاص بك.

### مذكر الدقائق (الفاتمة 5.5.9)

إذا حددت تشغيل، فسيتمكن معرفة مدة المكالمات عن طريق صدور إشارة صوتية طويلة كل دقيقة أثناء المكالمات.

## ◀ كل مكالمات البيانات

للتحويل إلى أحد الأرقام الذي يتوفر لديه إمكانية التوصل بالكمبيوتر بلا شروط.

## ◀ كل مكالمات الفاكس

التحويل إلى أحد الأرقام المتوفر لديه خدمة التوصل بالفاكس بلا شروط.

## ◀ إلغاء الكل

إلغاء كل خدمات تحويل المكالمات.

## القوائم الفرعية

تحتوي قوائم تحويل المكالمات على القوائم الفرعية الموضحة أدناه.

## - تنشيط

تنشيط الخدمة المعنية.

صندوق بريد صوتي

إرسال إلى مركز الرسائل. لا يتم عرض هذه الوظيفة في قائمتي كل مكالمات البيانات وكل مكالمات الفاكس.

## لرقم آخر

إدخال رقم للتحويل.

إلى الرقم المفصل

يمكنك التحقق من آخر خمسة أرقام محولة.

## - إلغاء

إلغاء تنشيط الخدمة المعنية.

## - عرض الحالة


عرض حالة الخدمة المعنية.

## وضع الرد (القائمة 2.5.9)

## ◀ فتح الغطاء

إذا حددت هذه القائمة، فيمكنك استلام مكالمات واردة ببساطة وذلك بفتح الغطاء.

## ◀ أي مفتاح

يمكن عن طريق تحديد هذه القائمة، تلقي المكالمات بالضغط على أي مفتاح. باستثناء المفتاح  [إنهاء].

1. انقر فوق منطقة الإعلام.

[فصل أو إخراج الجهاز]

2. حدّد جهاز USB ذات التخزين الكبير

السعة. وانقر فوق توقف.

ستظهر الرسالة التالية: «يمكن الآن إزالة

جهاز USB ذات التخزين الكبير السعة من

النظام بأمان»

3. قم بإزالة الكبل.

## تحويل المكالمات (الفاتمة 1.5.9)

تتيح خدمة تحويل المكالمات إمكانية تحويل المكالمة الصوتية ومكالمات الفاكس ومكالمات البيانات الواردة إلى رقم آخر. للحصول على التفاصيل، اتصل بمزود الخدمة.

◀ كل المكالمات

يتم تحويل المكالمات الصوتية بلا شروط.

◀ عند الانشغال

يتم تحويل المكالمات الصوتية عندما يكون الهاتف مشغولاً.

◀ عند عدم الرد

يتم تحويل المكالمات الصوتية التي لم يرد عليها.

◀ عند تعذر الوصول

تحويل المكالمات الصوتية عندما يكون الهاتف مغلقاً أو خارج نطاق الخدمة.

## اعدادات المكالمة (الفاتمة 5.9)

بإمكانك تعيين قائمة متعلقة بمكالمة بضغط

[تحديد] في قائمة الإعداد.

- الملقم الأساسي: اكتب عنوان IP لملقم DNS الأساسي الذي تقوم بالدخول إليه.
- الملقم الثانوي: اكتب عنوان IP لملقم DNS الثانوي الذي تقوم بالدخول إليه.

## وصلة USB (القائمة 3.4.9)

- يمكنك اختيار وضع واحد لخدمة البيانات ولوسيلة التخزين ذات السعة الكبيرة
- عندما تنتهي من استخدام ذاكرة الهاتف، انقر فوق إنهاء، واتبع الخطوات التالية.

### تنبيه

- ◀ قبل إزالة الكبل، من الضروري أن تنقر فوق إنهاء، وإلا فلن يكون تكامل البيانات المنقولة مضموناً.

- سرعة الاتصال: سرعة الاتصال: سرعة اتصال البيانات: 9600 أو 14400 (حسب المشغل)
  - زمن التباطؤ: إنك تحتاج لمهلة من الوقت، فبعد إدخال تلك المهلة، ستكون خدمة النقل عبر WAP غير متاحة إذا لم يتم إدخال أو نقل أي بيانات.
  - الملقم الأساسي: اكتب عنوان IP لملقم DNS الأساسي الذي تقوم بالدخول إليه.
  - الملقم الثانوي: اكتب عنوان IP لملقم DNS الثانوي الذي تقوم بالدخول إليه.
- <إعدادات GPRS>
- تتوافر إعدادات ضبط الخدمة فقط عند اختيار GPRS كخدمة حامل.
  - APN: أدخل APN الخاص بـ GPRS.
  - هوية المستخدم: معرف المستخدم ل خادم APN الخاص بك
  - كلمة المرور: يطلب خادم APN كلمة المرور الخاصة بك.

#### ضبط GPRS (القائمة 2.2.4.9)

يمكنك ضبط خدمة GPRS بناء على ظروف مختلفة.

#### ◀ تشغيل

عند تحديد هذه القائمة، يتم ألياً تسجيل الهاتف في شبكة GPRS عند تشغيل الهاتف. يمكن بدء تشغيل تطبيق طلب الاتصال الهاتفي للكمبيوتر أو WAP الذي أنشأ الاتصال بين الهاتف والشبكة ويمكن كذلك نقل البيانات. عند إنهاء عمل التطبيق، يتم إنهاء اتصال GPRS ولكن يظل التسجيل في شبكة GPRS قائماً.

#### ◀ عند الحاجة

عند تحديد هذه القائمة، يتم إنشاء اتصال GPRS عند الاتصال بخدمة WAP ويتم إنهاؤه عند إنهاء اتصال WAP.

#### وضع الشبكة (القائمة 3.2.4.9)

#### ◀ بيانات الاتصال

- الاسم: من الممكن كتابة اسم الشبكة.
- الحامل: لتعيين خدمة حامل البيانات.

#### 1 البيانات/GPRS 2/

<إعدادات البيانات>

تظهر فقط إذا حددت إعدادات البيانات كحامل / خدمة.

- هوية المستخدم: أدخل رقم الهاتف الذي سيتم الاتصال به للوصول لعبارة WAP الخاصة بك

- معرف المستخدم: هوية مستخدم خادم الاتصال (وليست عبارة WAP)

- كلمة المرور: كلمة المرور التي يطلبها خادم الاتصال (وليست عبارة WAP) لتعرفك.

- نوع المكالمات: حدد نوع مكالمات البيانات. تناظرية أو رقمية (ISDN)

◀ إعدادات بلوتوث

- إمكانية رؤيتي: يمكنك ضبط هذه الوظيفة لجعل الهاتف مرتباً على أجهزة بلوتوث الأخرى.
- اسمي: يمكنك ضبط اسم جهاز بلوتوث. الاسم الافتراضي هو LG KE970.
- عنواني: بإمكانك عرض عنوان جهاز البلوتوث الخاص بك

**الشبكة (القائمة 2.4.9)**

يمكنك تحديد الشبكة التي سيتم تسجيلها إما تلقائياً أو يدوياً.

بلوتوث (القائمة 1.2.4.9)

عادة، يكون تحديد الشبكة تلقائياً معيماً إلى تلقائياً.

◀ آلي

إذا حددت الوضع التلقائي، فسوف يبحث الهاتف تلقائياً عن الشبكة ويحددها. بمجرد أن تقوم بتحديد «تلقائياً»، سيتم ضبط الهاتف على «تلقائياً» حتى عند تشغيل الهاتف أو إيقاف تشغيله.

◀ يدوي

سوف يبحث الهاتف عن قائمة بالشبكات المتاحة ويعرضها. بعد ذلك يمكن تحديد الشبكة التي ترغب في استخدامها إذا كانت هذه الشبكة لديها اتفاق تجوال مع مشغل الشبكة المحلي لديك. يسمح لك الهاتف بتحديد شبكة أخرى إذا فشلت في الوصول إلى الشبكة المحددة.

◀ مفضل

يمكنك ضبط قائمة بالشبكات المفضلة وسيحاول الهاتف التسجيل مع أول هذه الشبكات قبل التسجيل مع أي شبكة أخرى. يتم ضبط هذه القائمة من قائمة الهاتف للشبكات المعرفة مسبقاً.

#### ◀ بلوتوث تشغيل/إيقاف

يمكنك تنشيط وظيفة بلوتوث أو إلغاؤها.

#### ◀ قائمة الأجهزة

يمكنك عرض كل الأجهزة التي اقترن بها مسبقاً KE970. في حال أدخلت أجهزة مقترنة، تتمكن من الوصول إلى الخيارات.

- اتصال/قطع الاتصال: بعد الاقتران بسماعة الرأس أو بسماعة رأس استريو. عليك الاتصال بتلك الأجهزة. وتستطيع عندئذٍ استخدامها.

- إضافة جديد: يتيح لك البحث عن أجهزة بلوتوث جديدة وإضافتها إلى قائمة الهاتف الخاصة بالأجهزة المقترنة. عند تحديد إضافة جديد، تبدأ سماعة الهاتف بالبحث عن أجهزة بلوتوث الموجودة داخل النطاق. وبمجرد ظهور الجهاز الذي ترغب في إقرانه في القائمة، اضغط على مفتاح الاختيار الأيمن [إيقاف] انتقل إلى الجهاز المطلوب واضغط على مفتاح الاختيار الأيسر [إقران] ستتم مطالبتك عندئذٍ بإدخال رمز مرور.

يمكن أن يكون رمز المرور أي رمز ترغب في استخدامه (لا بد من استخدام رمز المرور نفسه لكلي الجهازين) كما قد يكون رمزٌ حدّدته مسبقاً جهة تصنيع الجهاز الذي تحاول الاقتران به. يرجى مراجعة دليل المستخدم للجهاز الذي تحاول بدء الاقتران به، لمعرفة ما إذا كان له رمز مرور محدد مسبقاً.

- إعادة تسمية: يتيح لك تغيير اسم جهاز بلوتوث وكيفية عرضه على الهاتف.

- ضبط كمعتمد/ضبط كغير معتمد: لضبط الاتصال المعتمد بين كل أجهزة بلوتوث. على سبيل المثال، إذا كنت تستخدم سماعة رأس تدعم بلوتوث مع هاتفك على نحو منتظم، فإن ضبط الاتصال ليكون مصرحاً به سيعني أنه سيتم توصيل سماعة الرأس بشكل تلقائي بسماعة الهاتف في كل مرة يتم فيها تشغيل سماعة الرأس.

- إزالة: لحذف جهاز بلوتوث.

- إزالة الكل: لحذف كل أجهزة بلوتوث.

## التوصيل

### القائمة 4.9

#### بلوتوث (القائمة 1.4.9)

تتيح تقنية بلوتوث إمكانية اتصال أجهزة الجوال المتوافقة ووحداتها الطرفية وأجهزة الكمبيوتر الموجودة بالقرب من بعضها البعض لاسلكياً بطريقة مباشرة. يدعم هذا الهاتف إمكانية الاتصال عبر بلوتوث لاسلكياً. الأمر الذي يتيح توصيلها بسماعة الرأس المتوافقة مع تقنية بلوتوث أو ربطها من خلال تطبيقات كمبيوتر وما إليها.

#### ملاحظة

◀ عند استخدام تزامن LG مع الكمبيوتر الشخصي عبر بلوتوث تستطيع تبادل البيانات ضمن دليل الهاتف فقط.

#### ملاحظة

- ◀ عند استلام بيانات من جهاز بلوتوث آخر، يطلب الهاتف التأكيد. بعد تأكيد النقل، يتم نسخ الملف إلى الهاتف.
- ◀ ووفقاً لنوع الملف، يتم تخزينه في المجلدات التالية:
  - فيديو (3gp, .mp4): مجلد الفيديو
  - صورة (bmp, .gif, .jpg, .png): مجلد الصور
  - صوت (amr, .wav, .aac): مجلد الأصوات
  - MP3 (mp3): الأصوات/مجلد MP3
  - ملفات أخرى (txt, .html): مجلدات أخرى

### السطوع (القائمة 3.3.9)

يمكنك ضبط سطوع شاشة LCD على:  
100% و 80% و 60% و 40%

### اختصارات الشاشة الرئيسية (القائمة

4.3.9)

عند تحديد تشغيل. يتم عرض وظائف 4 مفاتيح  
تنقل ومفتاح القائمة كصور في الجزء الأوسط  
من إطار الخمول. (أنماط/إرسال الرسائل/  
المفضلات/جهات الاتصال)

### نمط القائمة (القائمة 5.3.9)

يوفر لك الهاتف سمات قائمة على شكل شبكة  
ولائحة

قم بتعيين لون القائمة عبر تمرير وضغط مفتاح  
الاختيار الأيسر [موافق].

### نمط الاتصال (القائمة 6.3.9)

يزودك الهاتف بأربعة أنماط اتصال.  
(نمط اللون / نمط الخرز / نمط الساعة  
الرقمية / نمط دفتر الرسم)

### نص وضع الاستعداد (القائمة 7.3.9)

إذا حدث تشغيل. فيمكن تحرير النص الذي يظهر  
على الشاشة في وضع الانتظار.

### اسم الشبكة (القائمة 8.3.9)

إذا كانت هذه الوظيفة منشطة، فسيظهر اسم  
الشبكة على شاشة LCD.

## تحديث تلقائي (القائمة 5.1.9)

حدد تشغيل. سيقوم الهاتف تلقائياً بتحديث البيانات والوقت.

## 2.9 القائمة اللغة

يمكنك تغيير لغة النصوص المعروضة على شاشة الهاتف. سيؤثر هذا التغيير أيضاً على وضع إدخال اللغة.

## 3.9 القائمة العرض

### خلفية الشاشة (القائمة 1.3.9)

يمكنك تحديد صور الخلفية في وضع الانتظار.

### الإضاءة الخلفية (القائمة 2.3.9)

يمكنك ضبط مدة إضاءة الشاشة الداخلية. (متوقف عن التشغيل / 10 ثوانٍ / 20 ثانية / 30 ثانية / 60 ثانية)

## القائمة 1.9 التاريخ والوقت

يمكنك ضبط الوظائف المتعلقة بالتاريخ والوقت.

### ضبط التاريخ (القائمة 1.1.9)

يمكنك إدخال التاريخ الحالي.

### صيغة التاريخ (القائمة 2.1.9)

يمكنك ضبط تنسيق التاريخ بتنسيق يوم / شهر / سنة أو بتنسيق شهر / يوم / سنة أو بتنسيق سنة / شهر / يوم.

### ضبط الوقت (القائمة 3.1.9)

يمكنك إدخال التاريخ الحالي.

### صيغة الوقت (القائمة 4.1.9)

يمكنك ضبط تنسيق الوقت إما بنظام 24 ساعة أو 12 ساعة.

## قائمة SIM

### القائمة 9.8

تعتمد هذه القائمة على خدمات SIM والشبكة.

## التوقيت العالمي **القائمة 8.8**

يمكن التحقق من الوقت الحالي لتوقيت جرينتش (GMT) وتوقيتات المدن الرئيسية حول العالم باستخدام مفاتيح التنقل لليسار/اليمين ومفتاح الاختيار الأيسر [تكبير].

تعرض الشاشة اسم المدينة والتاريخ والوقت الحاليين.

لتحديد المنطقة الزمنية التي توجد بها حالياً، اتبع ما يلي:




1. قم بتحديد المدينة الموافقة للمنطقة الزمنية الخاصة بك عبر ضغط مفاتيح التنقل الأيمن/الأيسر ومفتاح الاختيار الأيسر [تكبير] لمرة واحدة أو لعدة مرّات. يتم عرض التاريخ والوقت المحليين.



2. عند الرغبة في عرض الوقت في وضع الانتظار على الوقت المحدد، اضغط مفتاح [OK] موافق.

## محول الوحدات **القائمة 7.8**

لتحويل أي قياس إلى الوحدة التي ترغب بها، هناك 7 أنواع يمكن تحويلها إلى وحدات: العملة، منطقة، الطول، الوزن، درجة الحرارة، مستوى الصوت، سرعة الضوء.

1. لتحديد أحد أنواع الوحدات الأربعة بالضغط على مفتاح  [موافق].

2. حدد الوحدة التي تريد تحويلها بالضغط على  ،  ،  من المستحيل إدخال رمز " " في محوّل الوحدة.

3. حدد القيمة القياسية باستخدام  ،  .

## مذكرة

### العامه 5.8

1. حدد المذكرة بالضغط على مفتاح الاختيار الأيسر  [موافق].
2. إذا ما كانت فارغة قم بإضافة مذكرة جديدة بالضغط على مفتاح الاختيار الأيسر  [جديد].
3. أدخل المذكرة ثم اضغط على  [خيارات]<[حفظ].

### ملاحظة

◀ إذا أردت تغيير طريقة إدخال النص، فاضغط على  [#0] على الترتيب.

## ساعة الإيقاف

### العامه 6.8

1. اضغط [بدء] لقياس الوقت وتسجيل وقت التداخل بضغط [تداخل].
2. اضغط [توقف] للتأكد من تسجيل وقت التداخل.
3. اضغط [إعادة تعيين] لضبط الحالة الافتراضية.

## ◀ حذف الكل

تستطيع حذف كافة رسائل SMS المجدولة وجدولة التقويم.




عند دخولك إلى قائمة التقويم، يظهر تقويم. اضغط مفتاح الاختيار الأيسر وحدد خيار جدولة رسالة SMS جديدة.

1. تحديد جدولة رسالة SMS جديدة
2. حدد مفتاح التنقل الأيمن لـ «تشغيل/إيقاف تشغيل» جدولة الرسالة النصية.
3. أدخل التاريخ والوقت ورقم الهاتف والرسالة.
4. حدد مفتاح الاختيار الأيسر أو مفتاح «موافق» للحفاظ.

الحاسبة **القائمة 4.8**

تحتوي على الوظائف القياسية مثل +, -, ×, ÷, الجمع و الطرح و الضرب و القسمة :

وعلاوة على ذلك، يمكنك استخدام وظائف متعددة للحاسبة، مثل وظائف مفاتيح Sin و cos و log.

1. أدخل الأرقام باستخدام مفاتيح الأرقام.
2. استخدم مفتاح التنقل لتحديد علامة الحساب المطلوبة.
3. ثم أدخل الأرقام.
4. اضغط على المفتاح  لعرض الناتج.
5. لإدخال الرقم العشري، اضغط مفتاح .
6. لإنهاء عمل الحاسبة، اضغط على مفتاح الاختيار الأيمن  [رجوع].

#### ◀ حذف الكل

حذف كل الملاحظات.

جدولة رسالة نصية جديدة

توفر لك ميزة جدولة الرسالة النصية المتوفرة في هذا الهاتف إمكانية إرسال «رسالة SMS مجدولة» في الوقت والتاريخ المجدولين. عندما تتطابق الجدولة مع الوقت والتاريخ الحالي. يبدأ إرسال رسالة SMS مجدولة من هاتفك. فترسل الرسالة إلى الرقم المحدد مسبقاً.

في قائمة التقويم، اضغط مفتاح الاختيار الأيسر [خيارات]، وحدد كافة الجداول، فتظهر الخيارات التالية:

#### ◀ عرض

يعرض كافة رسائل SMS المجدولة وجدول التقويم.

#### ◀ جدولة رسالة نصية

يسمح لك بإضافة رسالة SMS مجدولة جديدة.

#### ◀ جدولة جديدة

يسمح لك بإضافة جدولة جديدة ومذكرة لليوم المختار. تستطيع تخزين حتى 100 ملاحظة. أدخل الموضوع ثم اضغط مفتاح الاختيار الأيسر [موافق]. تقوم بإدخال المعلومات المناسبة في القسم التالي، والوقت، والتكرار، والمنبه.

#### ◀ تحرير

تستطيع تحرير جدولة الرسالة النصية المحددة و«جدولة التقويم».

#### ◀ حذف

تستطيع حذف رسالة SMS المجدولة المحددة.

◀ جدول جديد  
يسمح لك بإضافة جدول جديد لليوم المحدد.

يمكنك حفظ ما يصل إلى 100 ملحوظة.  
أدخل الموضوع واضغط مفتاح الاختيار الأيسر  
[موافق].



ثم أدخل المعلومات الملائمة في الأجزاء  
التالية: «الوقت» و «التكرار» و «التنبيه».

◀ نغمة جدول المهام  
يمكنك ضبط نغمة المنبه لكل تاريخ تم  
اختياره.

◀ كل الجداول  
عرض الجداول كافة لليوم المحدد.  
استخدم للاستعراض في قوائم الملاحظات.  
إذا قمت بتعيين تنبيه للملاحظة، فسيتم  
عرض رمز التنبيه.

◀ انتقال إلى التاريخ  
يمكنك الانتقال مباشرة إلى التاريخ الذي تم  
اختياره.

في وضع المنظم، اضغط على مفتاح الاختيار  
الأيسر [خيارات] على النحو التالي:

◀ عرض  
عرض الجداول والمذكرات كافة لليوم المحدد.  
استخدم مفتاحي  و  للتنصف  
خلال قوائم الملاحظات. إذا قمت بتعيين  
تنبيه للملاحظة، فسيتم عرض رمز التنبيه.

إذا كنت ترغب في عرض الملاحظة بشكل  
مفصل، فاضغط على مفتاح الاختيار الأيسر  
[OK].

اضغط مفتاح الاختيار الأيسر [خيارات]  
لعرض. وحذف. جدول رسالة نصية، و جدول  
جديد، وإرسال بواسطة رسالة نصية/رسالة  
وسائط متعددة/بلوتوث/بريد إلكتروني.  
وتحرير، والتقويم، ونغمة جدول المهام، وكافة  
الجدول، والانتقال إلى تاريخ، وحذف متعدد.  
وحذف الكل.

◀ جدول رسالة نصية  
بإمكانك إضافة رسالة SMS مجدولة جديدة  
في تاريخ/وقت محدد.

## ساعة المنبه

### العمامة 2.8

يمكنك تعيين ساعة المنبه بحيث يدق في وقت محدد.

1. حدد تشغيل وأدخل وقت إطلاق التنبيه الذي تريده.

2. حدد فترة التكرار: مرة، كل يوم، الإثنين-السبت، الإثنين-الجمعة.

3. حدد نغمة التنبيه الذي تريدها واضغط على [تعيين].

## التقويم

### العمامة 3.8

عندما تدخل هذه القائمة، يتم عرض التقويم. توجد أقسام خاصة بالتاريخ في أعلى الشاشة. كما يوجد أيضاً في أسفل الشاشة أقسام للرموز (جدول المهام، ملاحظة). كلما قمت بتغيير التاريخ، سيتم تحديث التقويم وفقاً لهذا التاريخ. وسيتم استخدام مؤشر مربع الشكل لتحديد مكان اليوم المحدد. إذا رأيت شريطاً أسفل التقويم، فهذا يعني وجود مهمة أو مذكرة في ذلك اليوم. تساعد هذه الوظيفة على تذكيرك بمهامك وملاحظاتك. سيصدر الهاتف نغمة تنبيه إذا قمت بضبط هذا من أجل الملاحظة. لتغيير اليوم والشهر والسنة.

المفاتيح	الوصف
 . 	سنوي
 . 	شهري
 .  . 	اسبوعي
 . 	يومي

إنَّ «اختر تتبع الهاتف المفقود» هي لتكوين اسمك وتحديد أرقام هاتف معينة مسبقاً. حتى يتم إرسال رسالة الهاتف المحمول المفقود إليك في حال تمت سرقة (أرقام هاتف أصدقائك أو أفراد عائلتك على سبيل المثال)

كيفية استخدام: تعقب الهاتف المحمول المفقود

1. اذهب إلى قائمة «أدوات».
2. حدد «تعقب الهاتف المحمول المفقود»
3. أدخل رمز أمان LMT الافتراضي.
4. حدد «تشغيل». اضغط «موافق».
5. حدد اختر تتبع الهاتف المفقود.
6. أدخل الاسم، ورقم الهاتف الأول ورقم الهاتف الثاني.
7. حدد «حفظ».

لدى الدخول إلى قائمة «تعقب الهاتف المحمول المفقود». يظهر مربع حوار لرمز LMT. يتطلب إدخال رمز مصادق عليه للدخول إلى خيارات LMT.

### ملاحظة

رمز LMT الافتراضي هو «0000».

في أعلى قائمة «ضبط تتبع الهاتف» تتوفر إمكانية تشغيل/إيقاف تشغيل LMT (تنشيط/إلغاء تنشيط).

عليك تنشيط LMT دوماً لتمكين اختر تتبع الهاتف المفقود.

القائمة الثانية هي «تغيير كلمة المرور». وتسمح للمستخدم بتغيير رمز المصادقة للوصول إلى ميزة تعقب الهاتف المحمول المفقود. إمكان المستخدم تغيير رمز LMT عبر تأكيد رمز LMT القديم وإدخال رمز LMT الجديد.

## تغيير كلمة المرور (القائمة 2.1.8)

1. اذهب الى قائمة الادوات
2. حدد «تعقب الهاتف المحمول المفقود»
3. حدد «تغيير كلمة المرور»
4. أدخل كلمة المرور القديمة إضافةً إلى كلمة المرور الجديدة

## اعدادات التتبع

(القائمة 3.1.8)

1. اذهب الى قائمة الادوات
2. حدد «تعقب الهاتف المحمول المفقود»
3. اختر اعدادات التتبع
4. أدخل الاسم، ورقم الهاتف الأول ورقم الهاتف الثاني.
5. حدد «حفظ».

## تعقب الهاتف المحمول المفقود (LMT) (القائمة 1.8)

إن ميزة LMT في هذا الهاتف توفر لك إمكانية الحصول على نظام تعقب لمكان تواجد هاتفك المحمول في حال فقدته أو وضعته في غير مكانه. في اللحظة الذي يستخدم فيها مستخدم غير مصرح به هاتفك، يتم إرسال رسالة SMS من هاتفك إلى رقم محدد مسبقاً. يتم إرسال رسالة SMS إلى الأرقام المحددة مسبقاً من دون علم المستخدم غير المصرح به.

## ضبط تتبع الهاتف (القائمة 1.1.8)

1. اذهب الى قائمة الادوات
2. اختر تتبع الهاتف المفقود
3. اختر ضبط تتبع الهاتف
4. تحديد «تشغيل»، ضغط «موافق»

## ملاحظة

- ◀ عند نسخ ملف إلى قرص قابل للإزالة. يمكنك مشاهدة رسالة «النقل» على الشاشة. نها تعني أن وسيلة تخزين ذات سعة كبيرة تعمل وأنه يتم نقل البيانات. أثناء «النقل». لا تقم بفصل الكبل. إذا قمت بفصل الكبل أثناء «النقل». فسيتم فقدان البيانات أو تلفها ومن المحتمل أن قد تلحق ضرراً بالهاتف.
- ◀ إذا استلمت مكالمة عند الاستخدام كوسيلة تخزين ذات سعة كبيرة فسيتم رفض المكالمة. ولكن بعد إزالة الكبل ستتمكن من رؤية مكالمة لم يُرد عليها.

### ملاحظة

- ◀ ستعمل وظيفة «وسيلة تخزين ذات سعة كبيرة» فقط عندما يكون الهاتف في وضع الخمول.
- ◀ لا تنزع الكبل أثناء تنزيل ملفات. بعد تنزيل الملفات. عليك النقر فوق «إزالة الأجهزة بأمان» على الكمبيوتر ثم فصل الكبل.

### هاتف LG الجديد الرائع

يعمل الطراز KE970 كجهاز تخزين ذي سعة كبيرة. إذا قمت بتوصيل كابل USB. يمكنك استخدام القرص القابل للإزالة في هذا الهاتف.

يمكن تنزيل ملفات MP3 والصور الفوتوغرافية وملفات الفيديو والملفات النصية وما إلى ذلك عبر هذا الاتصال الذي يتسم بالسرعة الكبيرة من الكمبيوتر إلى الهاتف. جرب فقط توصيل كابل USB وستجد أن الأمر في منتهى السهولة.

## 6.7 القائمة الألعاب والتطبيقات

في هذه القائمة، يمكنك إدارة تطبيقات جافا المُثبتة في الهاتف. يمكنك تشغيل التطبيقات التي تم تنزيلها أو حذفها، أو ضبط خيار الاتصال.

## 7.7 القائمة الذاكرة الخارجية

تسمح لك هذه القائمة بعرض صور، وأصوات، ومقاطع فيديو، ومستندات، وغيرها في بطاقة الذاكرة. في حال لم تكن الذاكرة الخارجية متوفرة، يتم عرض رسالة منبثقة «يرجى إدخال ذاكرة خارجية».

### ملاحظة

◀ يجب أن تكون بطاقة SIM مركبة ليتم التعرف على الهاتف على أنه قرص قابل للإزالة.

### ملاحظة

◀ عند توصيل الهاتف بكمبيوتر عبر بلوتوث، يمكنك إرسال الملفات واستلامها في مجلد الموسيقى والفيديو. يمكنك نسخ أي نوع ملفات إلى «أخرى». يمكنك استلام الملفات فقط من مجلدات صور فوتوغرافية، وأصوات، وصور. يمكنك فقط عرض أو تشغيل الملفات الموجودة في المجلد «أخرى» إذا كانت أنواع الملفات معتمدة. عند التوصيل بكمبيوتر بواسطة كبل USB يمكنك فقط مشاهدة المجلدات التالية في الذاكرة الداخلية: الصور، والأصوات، ومقاطع الفيديو، وأخرى. يمكنك مشاهدة كافة المجلدات الموجودة في الذاكرة الخارجية.

- نسخ إلى الذاكرة الخارجية: نسخ الملف المحدد إلى ذاكرة الوسائط المتعددة/ الذاكرة الخارجية.

- معلومات: لعرض معلومات عن الملف.

◀ مجلد جديد: بإمكانك إنشاء ملف جديد.

◀ حذف متعدد: يسمح لك هذا الخيار بإزالة عدد من الملفات المحددة.

◀ حذف الكل: لحذف جميع الملفات بالقائمة.

## مستندات

### القائمة 4.7

تمكنك هذه القائمة من عرض ملفات المستند (txt و ppt و pdf و doc و excel).

يمكنك استخدام خيارات القائمة التالية.

◀ عرض: يمكنك عرض ملف مستندات عند

الضغط على مفتاح «موافق» أو بتحديد

قائمة «عرض» ضمن قوائم خيارات.

◀ معلومات: لعرض معلومات عن الملف.

## أخرى

### القائمة 5.7

إظهار قائمة بالملفات الموجودة في الوسائط/  
أخرى في ذاكرة الوسائط المتعددة.

## تحذير

لا يمكن استخدام الأحرف التالية \ : \* ?

« > < » |

- نقل إلى مجلد: نقل الملف المحدد إلى المجلد.

- نقل إلى الذاكرة الخارجية: نقل الملف المحدد إلى ذاكرة الوسائط المتعددة/الذاكرة الخارجية.

## تحذير

إذا قمت بإزالة الذاكرة الخارجية أثناء نقل البيانات، فقد يؤدي هذا الأمر إلى تلف خطير في الهاتف.

## العائمة 3.7

## مقاطع فيديو

يقوم بعرض قائمة ملفات 3GP و3G2 في الوسائط/مقاطع الفيديو في ذاكرة الوسائط المتعددة. أنواع الملفات المعتمدة فقط هي ملفات.3gp التي تم ترميزها بواسطة MPEG4 وبرامج ترميز تصويري h.263 وبرنامج ترميز صوتي AMR.

◀ تشغيل: يمكنك تشغيل لف الفيديو عند الضغط على <<موافق>> أو تحديد قائمة <<تشغيل>> على المفتاح قوائم خيارات.

◀ حذف: لحذف الملف.

◀ إرسال عبر: إرسال الملف المحدد إلى جهاز آخر عن طريق رسالة 3. أو بلوتوث. أو بريد إلكتروني.

◀ ملف: بإمكانك حفظ/نقل/نسخ الملف أو الذاكرة الخارجية.

◀ إعادة تسمية: تغيير اسم الملف المحدد. الحد الأقصى لعدد الأحرف هو 36 حرف. ولا يمكن تغيير امتداد الملف.

- نسخ إلى الذاكرة الخارجية: نسخ الملف المحدد إلى ذاكرة الوسائط المتعددة/ الذاكرة الخارجية.

### تحذير

إذا قمت بإزالة الذاكرة الخارجية أثناء نقل البيانات، فقد يؤدي هذا الأمر إلى تلف خطير في الهاتف.

- ◀ حذف متعدد: يسمح لك هذا الخيار بإزالة عدد من الملفات المحددة.
- ◀ حذف الكل: لحذف جميع الملفات بالقائمة.
- ◀ عرض قائمة: يسمح لك هذا الخيار بضبط نوع العرض.

## أصوات

### القائمة 2.7

عرض قائمة ملفات MP3 وMP4 وAAC وM4A في وسائطي/الموسيقى في ذاكرة الوسائط المتعددة.

- ◀ تشغيل: يمكن تشغيل ملف الفيديو عند الضغط على «مفتاح تشغيل» أو تحديد قائمة «تشغيل» ضمن قوائم خيارات.
- ◀ ضبط ك: يمكن تعيين الصوت المحدد كنغمة الرنين/معرّف نغمة الرنين.
- ◀ معلومات الملف: عرض معلومات الملف

- معلومات: لعرض معلومات عن الملف.
- ◀ الطباعة عبر بلوتوث: يمكن إرسال معظم الصور التي التقطتها في وضع الكاميرا وحملتها بواسطة WAP. إلى طباعة من خلال خدمة بلوتوث.
- ◀ عرض شرائح: بإمكانك عرض الملفات التي حفظتها كعرض شرائح.
- ◀ مجلد جديد: بإمكانك إنشاء ملف جديد.

## الصور

إظهار قائمة ملفات JPG في الوسائط\الصور  
في ذاكرة الوسائط المتعددة.

◀ عرض: يمكنك عرض ملف JPG عند الضغط على مفتاح « موافق » أو بتحديد قائمة « عرض » ضمن قوائم خيارات.

◀ حذف: لحذف الملف.

◀ ضبط كـ

- خلفية بصورة كاملة: يمكن ضبط الصورة المحددة حالياً كخلفية.

- خلفية أفقية: من الممكن عرض الصورة المحددة حالياً عمودياً كخلفية.

- معرّف الصورة: من الممكن عرض الصورة المحددة حالياً كمعرّف الصورة.

◀ إرسال عبر: يتيح لك هذا الخيار إرسال صورة عبر رسالة وسائط/بلوتوث/بريد إلكتروني

◀ ملف

- إعادة تسمية: تغيير اسم الملف المحدد. ولا يمكن تغيير امتداد الملف.

### ملاحظة

◀ لا يمكن استخدام الأحرف التالية \ / : \* « > |

- نقل إلى مجلد: نقل الملف المحدد إلى المجلد.

- نقل إلى الذاكرة الخارجية: نقل الملف المحدد إلى ذاكرة الوسائط المتعددة/الذاكرة الخارجية.

### تحذير

إذا قمت بإزالة الذاكرة الخارجية أثناء نقل البيانات، فقد يؤدي هذا الأمر إلى تلف خطير في الهاتف.

## الإعدادات

### 7.6 العامة

1. اضغط على [الأسماء] في وضع الانتظار.
2. انتقل إلى ضبط. ثم حدد [تحديد].
  - ضبط الذاكرة
  - بإمكانك اختيار الذاكرة الافتراضية من الطلب دائماً أو بطاقة SIM أو الهاتف
  - خيارات العرض
  - مرّر لتحديد خيارات العرض ثم اضغط مفتاح الاختيار الأيسر [موافق].
  - الاسم فقط: قائمة دليل الهاتف مع عرض الاسم فقط.
  - مع الصورة: ضبط قائمة دليل الهاتف بمعلومات من الحروف والصور.

## معلومات

### 8.6 العامة

- رقم الاتصال بالخدمة
- استخدم هذه الوظيفة للوصول إلى قائمة معيّنة من الخدمات التي يوقرها مشغل الشبكة (في حال كانت معتمدة من قبل بطاقة SIM).
- رقم هاتفي (يستند على بطاقة SIM)
- يمكنك معرفة رقمك الشخصي ومراجعته في بطاقة SIM.
- بطاقة عمل
- يتيح لك هذا الخيار إنشاء بطاقة الأعمال الخاصة بك والتي تضم الاسم ورقم الهاتف المحمول.
- لإنشاء بطاقة أعمال جديدة، اضغط على مفتاح الاختيار الأيسر [إضافة] وأدخل المعلومات في الحقول.
- إذا كنت تريد تحرير بطاقة عمل، أو حذفها، أو إرسالها، فحدّد مفتاح الاختيار الأيسر [خيارات].

## المجموعات

### 4.6 القائمة

يمكنك إعداد قائمة بأعضاء محددین لكل مجموعة. ثمة 7 مجموعات تستطيع إعداد قائمات لها.

◀ عرض الأعضاء: تعرض أعضاء المجموعة التي قمت بتحديدھا.

◀ نغمة رنين المجموعة: تسمح لك بتحديد نغمة رنين لمكالمات أعضاء المجموعة.

◀ أيقونة المجموعة: تسمح لك بتحديد الرمز الخاص بالمجموعة.

◀ إضافة عضو: لإضافة أعضاء للمجموعة.

◀ حذف عضو: لإزالة عضو من قائمة أعضاء المجموعة. إلا أن الاسم والرقم يظلان في دليل الهاتف.

◀ إزالة كافة الأعضاء: تتيح لك حذف كافة الأعضاء الموجودين في المجموعة.

◀ إعادة تسمية: لتغيير اسم المجموعة.

## نسخ الكل

### 5.6 القائمة

لنسخ الإدخالات من ذاكرة بطاقة SIM إلى ذاكرة الهاتف والعكس صحيح.

◀ SIM إلى الهاتف: يمكنك نسخ الإدخالات من بطاقة SIM إلى ذاكرة الهاتف.

◀ من الهاتف إلى SIM: يمكنك نسخ الإدخالات من ذاكرة الهاتف إلى بطاقة SIM.



## حذف الكل


### 6.6 القائمة

يمكنك حذف كافة الإدخالات من بطاقة SIM أو الهاتف.

## الاتصال السريع العاملة 3.6

تستطيع تعيين أي من المفاتيح 2 ل 9 مع إدخال في قائمة الأسماء. يمكنك الاتصال مباشرة عند الضغط على هذا المفتاح.

1. إذهب الي جهات الاتصال أولاً بالضغط على  [الأسماء] في وضع الانتظار.
2. انتقل إلى اتصال سريع. ثم حدد  [OK].

3. في حال أردت إضافة اتصال سريع. حدّد <فارغ> عبر الضغط على مفتاح الاختيار الأيسر  [تعيين]. فنتستطيع بعد ذلك البحث عن الاسم في دليل الهاتف.






4. وبعد تعيين الرقم كاتصال سريع. يمكنك تغيير الإدخال وحذفه. كما يمكنك إجراء مكالمة أو إرسال رسالة بمجرد باستخدام هذا الرقم.

## جهة اتصال جديدة العاملة 2.6

يمكنك إضافة إدخال الي دليل الهاتف عند طريق استخدام هذه الوظيفة سعة ذاكرة الهاتف تصل إلى 1000 إدخال. في حين تعتمد سعة ذاكرة بطاقة SIM على مزود الخدمة. يعتبر عدد الأحرف ميزة تعتمد على بطاقة SIM.

### ملاحظة

◀ يعتمد الحد الأقصى للأسماء المخزنة وطول الأرقام على نوع بطاقة SIM.

1. حدد جهة اتصال جديدة بضغط مفتاح الاختيار الأيسر  [موافق].
2. أدخل اسماً.
3. اضغط  ↓ ثم أدخل رقماً.
4. يمكنك تعيين مجموعة للإدخال بالضغط على  . .
5. يمكنك تعيين نغمة رنين وصورة للإدخال عبر ضغط مفتاح الاختيار الأيسر  [خيار].

## بحث

### الفائمة 1.6

1. حدّد بحث بضغط مفتاح الاختيار الأيسر  [موافق].

2. أدخل الاسم الذي تريد البحث عنه.

### ملاحظة

◀ يتوفر البحث الفوري عبر إدخال الحرف الأول من الاسم.

3. إذا كنت ترغب في تحرير إدخال أو حذفه أو نسخه، قم بتحديد مفتاح الاختيار الأيسر  [خيارات].

سيتم عرض القائمة التالية.

◀ العرض: تستطيع عرض المعلومات الخاصة بالاسم أو الرقم الذي اخترته.

◀ تحرير: تستطيع تحرير الاسم أو الرقم عبر استخدام مفتاح التنقل.

◀ رسالة جديدة: بعد العثور على الرقم المطلوب، يمكنك إرسال رسالة (نصية/ وسائل متعددة/بريد إلكتروني) إلى الرقم المحدد.

◀ إرسال عبر: بإمكانك إرسال بيانات دليل الهاتف عبر رسالة نصية أو رسالة وسائط متعددة أو الـ بلوتوث أو البريد الإلكتروني.

◀ حذف: يمكنك حذف أحد الإدخالات.

◀ جهة اتصال جديدة: وبعد تحديد مكان الحفظ (SIM/الهاتف)، بإمكانك إضافتها إلى لائحة دليل الهاتف.

◀ حذف متعدد: يسمح لك هذا الخيار بإزالة عدد من الملفات المحددة.

◀ نسخ إلى الهاتف/SIM: يمكنك نسخ أحد الإدخالات من بطاقة SIM إلى الهاتف أو العكس.

◀ الرقم الأساسي: في حال حفظ أكثر من رقم لجهة اتصال واحدة، فقم بتحديد الرقم الأكثر استخداماً. وبذلك يظهر الرقم الأساسي أولاً.

## رسائل الدفع (القائمة 5.0.5)

لضبط الخيارات على تسلم الرسالة أو عدم تسلمها.

## خدمة المعلومات (القائمة 6.0.5)

### ◀ استقبال

نعم: إذا حددت هذه القائمة، فسيستلم هاتفك رسالة خدمة معلومات الرسائل.

لا: إذا حددت هذه القائمة، فلن يتلقى هاتفك رسائل خدمة معلومات بعد ذلك.

### ◀ تنبيه

نعم: سيصدر الهاتف إشارة تنبيه صوتية عند استلامك أرقام رسائل خدمة معلومات.

لا: لن يصدر الهاتف إشارة تنبيه صوتية عند استلامك أرقام رسائل خدمة معلومات.

### ◀ اللغات

يمكنك تحديد اللغة التي تريدها بضغط مفتاح موافق. بعد ذلك، يتم عرض رسالة خدمة المعلومات باللغة التي حددتها.

## ◀ وضع الشبكة

ملف التعريف هو معلومات الشبكة المستخدمة للاتصال بالإنترنت. توجد ملفات تعريف افتراضية لبعض المشغّلين. تُخزّن في ذاكرة الهاتف. لا يمكن إعادة تسمية ملفات التعريف الافتراضية.

## ◀ توقيع

يمكنك إنشاء توقيعك.

## رقم البريد الصوتي (الفاتمة 4.0.5)

يمكنك تلقي البريد الصوتي إذا كان موفر خدمة الشبكة يدعم هذه الميزة. عند تلقي بريد صوتي جديد. يظهر الرمز على الشاشة. يرجى التحقق مع موفر خدمة الشبكة من تفاصيل خدمته لتكوين الهاتف بشكل صحيح.

رقم المنفذ الصادر: أدخل عنوان SMTP ورقم المنفذ للكمبيوتر المرسلين من بريدك الإلكتروني.

مصادقة البريد الصادر: عند إرسال البريد. تستطيع تعيين المصادقة أم لا.

معرّف/كلمة مرور ملقم الصادر: أدخل المعرّف وكلمة المرور لإرسال بريدك الإلكتروني.

- حساب جديد: يمكنك إعداد حتى 5 حسابات للبريد الإلكتروني عن طريق تحديد قائمة الحساب الجديد. من خلال استخدام قائمة التحرير، يمكنك إعداد القيم التالية.
- حذف: لحذف الحساب المحدد من القائمة.
- حذف الكل: لحذف كافة الحسابات المحددة من القائمة.

## بريد إلكتروني (القائمة 3.0.5)

### ◀ حساب البريد الإلكتروني

تتيح هذه القائمة تحرير حساب بريد إلكتروني أو حذفه أو إضافته.

- العرض: يمكنك رؤية البريد الإلكتروني.
- ضبط كافتراضي
- تحرير

اسم الحساب: اسم الحساب.

عنوان البريد الإلكتروني: أدخل عنوان البريد الإلكتروني الذي أعطاه لك مزود الخدمة.

اسمي: أدخل اسم مستخدم.

ملقم البريد الوارد: أدخل عنوان POP3 ورقم المنفذ اللذين يتلقاهما بريدك الإلكتروني.

اسم المستخدم: أدخل معرف البريد الإلكتروني الخاص بك.

كلمة المرور: أدخل كلمة المرور للبريد الإلكتروني الخاصة بك.

ملقم البريد الصادر: أدخل عنوان SMTP ورقم المنفذ للكمبيوتر المرسلين من بريدك الإلكتروني.

- إعدادات متقدمة

- نوع البروتوكول: اختر نوع البروتوكول الخاص بك.  
(POP3/IMAP4)

الحد الأقصى لحجم التلقي: إعداد حجم الملفات التي يمكن تلقيها.

حفظ في الملقم: حدد تشغيل لحفظ الملف في الملقم.

إدراج توقيع: حدد تشغيل لإضافة توقيعك في رسائل البريد الإلكتروني.

عنوان بريد الرد: يمكنك إعداد عنوان بريد الرد.

رقم المنفذ الوارد: أدخل عنوان POP3 ورقم المنفذ اللذين يتلقاهما بريدك الإلكتروني.

## رسالة وسائط متعددة (القائمة 2.0.5)

- ◀ تنزيل ألي: إذا حددت تشغيل. فستتسلم رسائل وسائط متعددة تلقائيًا. إذا حددت إيقاف، فستتسلم رسائل إعلامية فقط في البريد الوارد ومن ثم يمكنك التحقق من هذه الرسالة الإعلامية. إذا قمت باختيار شبكة اتصال منزلية فقط. فسوف تتسلم رسائل وسائط متعددة تعتمد على شبكة اتصال منزلية.
- ◀ وضع الشبكة: إذا حددت خادم الرسائل متعددة الوسائط. فسيمكنك ضبط URL لخادم هذه الرسائل.
- ◀ أنواع مسموح بها شخصي: رسالة شخصية. إعلان: رسالة إعلانية. معلومات: معلومات ضرورية.
- ◀ الرسالة وسائط متعددة (القائمة 2.0.5) الموضوع: يمكنك إدخال موضوع رسائل الوسائط المتعددة في حالة تشغيل هذه القائمة.
- ◀ مدة الشريحة: عرض مدة كل صفحة عند كتابة الرسالة.
- ◀ الأولوية: يمكنك ضبط الأولوية للرسالة التي قمت باختيارها.
- ◀ فترة الصلاحية: تسمح لك خدمة الشبكة هذه بضبط مدة حفظ الرسائل النصية في مركز الرسائل.
- ◀ تقرير التسليم: إذا تم الضبط على نعم في هذه القائمة، فسيمكنك معرفة إذا ما كان قد تم إرسال رسالتك بنجاح من عدمه.
- ◀ تقرير القراءة: تسمح لك هذه القائمة بطلب بريد تأكيد للقراءة من مستلم الرسالة.

- ◀ لغات T9: يسمح لك هذا الخيار بتحديد اللغة المطلوبة لوضع إدخال T9. كما بإمكانك إلغاء تنشيط وضع إدخال T9 عن طريق تحديد "إيقاف T9".
- ◀ إنهاء: يأخذك هذا الخيار من جديد إلى قائمة الرسالة.

## الإعدادات

### الفاتمة 0.5

#### رسالة نصية (الفاتمة 1.0.5)

- ◀ فترة الصلاحية: تسمح لك خدمة الشبكة هذه بضبط مدة حفظ الرسائل النصية في مركز الرسائل.
- ◀ تقرير التسليم: إذا ضبقت على نعم، فسيمكنك معرفة إذا ما كان قد تم إرسال رسالتك بنجاح من عدمه.
- ◀ الرد عبر نفس مركز الخدمة: عندما يتم إرسال رسالة، يتوفر للمستلم الرد عليها مع إضافة تكلفة الرد على فاتورة هاتفك.
- ◀ رقم مركز الرسائل: إذا كنت ترغب في إرسال الرسالة النصية، فيمكنك تلقي عنوان مركز SMS من خلال هذه القائمة.
- ◀ إعدادات الحامل: يمكنك تعيين إعداد الحامل مثل GSM و GPRS.

#### ◀ أنواع الرسائل:

نص وصوت وفاكس واستدعاء محلي و X400 و بريد الكتروني و ERMES

عادة ما يكون نوع الرسالة مضبوطاً على الرسائل النصية. يمكنك تحويل الرسالة النصية إلى تنسيقات أخرى. اتصل بمزود الخدمة لديك للتحقق من مدى توفر هذه الوظيفة.

## ◀ إرسال عبر

- رسالة نصية: استخدم هذا الخيار لإرسال رسالة النموذج المحددة عبر SMS

- رسالة وسائط متعددة: استخدم هذا الخيار لإرسال رسالة النموذج المحددة عبر MMS

- بريد إلكتروني: تتيح لك هذه القائمة تحرير حساب بريد إلكتروني أو حذفه أو إضافته.

◀ حذف: يسمح لك هذا الخيار بحذف النموذج.

◀ نموذج جديد: استخدم هذا الخيار لإنشاء نموذج جديد.

◀ حذف الكل: لحذف كل رسائل الوسائط المتعددة.

## الوسائط المتعددة (القائمة 2.9.5)

بعد حفظ نموذج جديد، تستطيع استخدام الخيارات التالية.

◀ حفظ: يسمح لك هذا الخيار بحفظ نماذج وسائط متعددة جديدة قمت بإنشائها.

◀ إدراج: يمكنك إضافة رمز، وصورة، ومقاطع فيديو، وصوت، وشريحة جديدة، ونموذج نص، وجهة اتصال، وبطاقات عمل وغيرها.

◀ معاينة: يسمح لك هذا الخيار بمعاينة نماذج الوسائط المتعددة التي كتبتها.

◀ تحرير الموضوع: يسمح لك هذا الخيار بتعديل رسالة الوسائط المتعددة التي اخترتها.

◀ مدة الشريحة: يسمح لك هذا الخيار بتحديد مدة شريحة رسالة الوسائط المتعددة.

## قراءة القائمة (القائمة 1.8.5)

## نماذج

### القائمة 9.5

#### النص (القائمة 1.9.5)

فيما يلي ستة نماذج:

- يرجى الاتصال مرة أخرى.
- لقد تأخرت. سأكون هناك في...
- أين أنت؟
- أنا في الطريق.
- ضروري جداً، يرجى الاتصال.
- أنا أجبك.

وكل رسالة مسودة تحتوي على الخيارات التالية.

- ◀ عرض: يمكنك رؤية نماذج وسائط متعددة.
- ◀ تحرير: استخدم هذا الخيار لكتابة نموذج نص رسالة جديد أو لتحرير نص رسالة النموذج المحددة في قائمة نماذج النص.

1. عند استلامك رسالة خدمة معلومات

وتحديد «قراءة» لعرض الرسالة. يتم عرض الرسالة على الشاشة. يمكنك قراءة رسالة أخرى من خلال التنقل [ ] . أو مفتاح [التالي] [ ] .

2. تظل الرسالة معروضة لحين استلام رسالة أخرى.

#### الموضوعات (القائمة 2.8.5)

#### (يعتمد هذا على الشبكة والاشتراك)

- ◀ عرض القائمة: يمكنك عرض أرقام رسائل خدمة المعلومات التي أضفتها. عند الضغط على [ ] [خيارات] يمكنك تحرير وحذف فئة رسالة خدمة المعلومات التي أضفتها.
- ◀ القائمة النشطة: بإمكانك تحديد أرقام رسائل خدمة المعلومات من اللائحة النشطة. إذا قمت بتنشيط رقم رسالة خدمة معلومات. فبإمكانك تلقي الرسائل التي تم إرسالها من هذا الرقم.

## خدمة المعلومات القائمة 8.5 (يعتمد هذا على الشبكة والاشتراك)

رسائل الخدمة هي رسائل نصية ترسلها الشبكة إلى GSM. وتقدم هذه الرسائل معلومات عامة. مثل تقارير الطقس وأخبار المرور والمواصلات والصيدليات وأسعار الأسهم والسندات.

ويحتوي كل نوع من أنواع هذه الرسائل على رقم. ومن ثم يمكنك الاتصال بمزود الخدمة طالما أنك أدخلت الرقم المحدد للمعلومات ذات الصلة. لكل نوع رقم؛ بالتالي تستطيع الاتصال بموفر الخدمة طالما أنك أدخلت الرقم المحدد للمعلومات. عندما تنسلم رسالة معلومات، يمكنك رؤية الرسالة المنبثقة لبيان استلامك لرسالة أو أن رسالة خدمة المعلومات قد تم عرضها مباشرة. لكل نوع رقم:

بالتالي، تستطيع الاتصال بموفر الخدمة طالما أنك أدخلت الرقم المحدد للمعلومات.

## المرسلة القائمة 6.5

تمكنتك هذه القائمة من عرض الرسائل التي تم إرسالها مسبقاً. يمكنك فحص محتويات الرسالة.

## استمع إلى رسالة صوتية

### القائمة 7.5

بمجرد تحديد هذه القائمة، اضغط على مفتاح الاختيار الأيسر [موافق] للاستماع إلى البريد الصوتي. كما يمكنك أيضاً الاستمرار في الضغط على المفتاح [1] في وضع الانتظار للاستماع إلى البريد

### ملاحظة

◀ عند استلامك لبريد صوتي، يعرض الهاتف الرمز و تسمع صوت تنبيه. يرجى الرجوع إلى مزود الخدمة للحصول على التفاصيل الخاصة بالخدمة لتهيئة الهاتف بشكل صحيح.

## مسودات

### الفئة 4.5

باستخدام هذه القائمة، يمكنك إجراء تعيين مسبق لرسائل الوسائط المتعددة الأكثر استخدامًا. تنقل خلال القائمة باستخدام مفاتيح التنقل لأعلى ولأسفل.

وكل رسالة مسودة تحتوي على الخيارات التالية.

◀ عرض: يمكنك عرض رسائل الوسائط المتعددة.

◀ تحرير: لتحرير الرسالة المختارة.

◀ حذف: حذف الرسالة المختارة.

◀ معلومات: لعرض معلومات الرسالة.

◀ حذف متعدد: بعد تحديد الرسائل التي تريد إزالتها، اضغط على موافق لحذف الرسائل المحددة.

◀ حذف الكل: لحذف كل الرسائل الموجودة في المجلد.

## صندوق الصادر

### الفئة 5.5

تتيح لك هذه القائمة عرض الرسالة التي توشك أن ترسلها و شكل إرسالها أو فشل إرسالها. بعد إرسال الرسالة بنجاح، يتم نقلها إلى قائمة صندوق الصادر.

◀ عرض: يمكنك عرض الرسالة.

◀ إرسال: يمكنك إرسال الرسالة. بعد إرسال الرسالة، يتم نقلها إلى قائمة المرسله.

◀ إعادة إرسال: يسمح لك هذا الخيار بإعادة إرسال الرسالة المحددة.

◀ تحرير: يسمح لك هذا الخيار بإجراء تعديلات على الرسالة التي اخترتها.

◀ معلومات: يمكنك فحص معلومات كل رسالة.

◀ حذف متعدد: يسمح لك هذا الخيار بتحديد الرسائل المختارة وحذفها.

◀ حذف الكل: يمكنك حذف كل الرسائل الموجودة في مسودات.

- ◀ حذف كل الرسائل المقروءة: يمكنك حذف كافة الرسائل المقروءة.
- ◀ حذف الكل: يمكنك حذف كل الرسائل.

## صندوق البريد الاللكتروني

### القائمة 3.5

عند الوصول إلى هذه القائمة، يمكنك إما الاتصال بصندوق البريد عن بُعد لجلب رسائل البريد الإلكتروني الجديدة أو يمكنك عرض الرسائل التي تم جلبها مسبقاً بدون تسجيل الدخول إلى ملقم البريد الإلكتروني.

يمكن فحص رسائل البريد الإلكتروني المحفوظة والرسائل الموجودة في المسودات وصندوق الصادر والمرسلة. يتم تخزين حتى 20 رسالة في صندوق الوارد. (يخزن صندوق الصادر حتى 5، فيما تخزن حافظة المسودات حتى 5، والمرسلة حتى 10)

- ◀ عرض: يمكنك عرض الرسائل المستلمة.
- ◀ حذف: يمكنك حذف الرسالة الحالية.
- ◀ رد: يمكنك الرد على المرسل.
- ◀ الرد على الكل: يمكنك الرد على كل المرسلين.
- ◀ تمرير: يمكنك توجيه الرسالة المحددة إلى شخص آخر.
- ◀ إعادة الاتصال: يمكنك إعادة الاتصال بالمرسل.
- ◀ معلومات: يمكنك عرض معلومات حول الرسائل المستلمة وعنوان المرسل: والموضوع (لرسائل الوسائط المتعددة فقط). وتاريخ الرسالة ووقتها. ونوع الرسالة. وحجمها.
- ◀ حذف متعدد: بعد تحديد الرسائل التي تريد إزالتها، يمكنك حذف الرسائل المحددة مرة واحدة.

## ملاحظة

◀ الحد الأقصى لحجم الرسالة المرسلة الواحدة هو 300 كيلوبايت بما فيها المرفقات، والحد الأقصى لحجم الرسالة المستلمة هو 300 كيلوبايت. في حالة استلام رسالة لها أكثر من 5 مرفقات، يتم استلام 5 مرفقات فقط منها. قد يتم عرض بعض المرفقات على نحو غير صحيح.

## صندوق الوارد العامة 2.5

يتم تنبيهك عند استلام الرسائل. وسيتم حفظها في صندوق الوارد. وفي صندوق الوارد، يمكنك تحديد كل رسالة من خلال إرشادات الرموز.

إذا عرض الهاتف "لا توجد مساحة كافية لرسائل SIM"، يجب حذف بعض رسائل SIM فقط من صندوق الوارد. وإذا عرض الهاتف "لا توجد مساحة للرسالة" فيمكنك توفير مساحة لكل مستودع من خلال حذف الرسائل و الوسائط و التطبيقات.

\* رسالة SIM

تعني رسالة SIM الرسالة المحفوظة في بطاقة SIM بشكل استثنائي.

وبالنسبة لرسائل الوسائط المتعددة التي تم الإخطار بها، يجب عليك الانتظار لحين الانتهاء من تنزيل الرسالة ومعالجتها.

لقراءة رسالة، حددها بالضغط على مفتاح الاختيار الأيسر .

## ملاحظة

- ◀ بإمكانك، لكل حساب بريد إلكتروني، حفظ حتى 40 رسالة (أي ما يعادل 200 رسالة لخمسة حسابات). في مجلد صندوق الوارد يمكن حفظ ما لا يتعدى عن 20 رسالة. ويمكن حفظ 5 رسائل في مجلدي صندوق الصادر والمسودات. كما يمكن حفظ حتى 10 رسائل في مجلد المرسلة. في حالة امتلاء مجلدي المسودات أو صندوق الصادر أو المرسلة، وإذا حاولت حفظ رسالة جديدة في أحد هذه المجلدات، فسيتم تلقائياً حذف أول رسالة محفوظة.

- ◀ المعاينة: بإمكانك معاينة البريد الإلكتروني الذي تتم كتابته.
- ◀ حفظ في المسودات: حدد هذا الخيار لحفظ الرسالة في المسودات.
- ◀ تحرير الموضوع: يمكنك تحرير الموضوع.
- ◀ لغات T9: حدد لغة وضع إدخال T9 يمكنك أيضاً إلغاء تنشيط وضع إدخال T9 من خلال تحديد إيقاف تشغيل T9.
- ◀ جديدة T9 كلمة: تحديد كلمة T9 الجديدة لإدخال الكلمة الجديدة في القاموس.
- ◀ مسح النص: تستطيع إزالة كافة الرسائل المكتوبة.
- ◀ الإنهاء: إذا ضغطت على الإنهاء أثناء كتابة رسالة، تنتهي كتابة الرسالة، وتعود إلى قائمة الرسالة. لا يتم حفظ الرسالة التي كتبته.

## ملاحظة

◀ إذا قمت بتحديد صورة حجمها كبير (مثلاً 200 كيلوبايت) عند كتابة رسالة وسائط متعددة، فستستغرق فترة التحميل حوالي 10 ثوان. علاوة على ذلك، لا يمكنك تنشيط أبة مفاتيح خلال وقت التحميل. بعد حوالي 10 ثوان، يجب أن يكون بإمكانك كتابة الرسالة.

## بريد إلكتروني (الفاتمة 3.1.5)

لإرسال/استقبال رسالة بريد إلكتروني، لا بد من إعداد حساب البريد الإلكتروني.

1. يمكن إدخال حتى 20 عنواناً للبريد الإلكتروني في الحقل الخاص بـ "إلى" و "نسخة كربونية".

تلميح: لإدخال @ اضغط على "⌨" وحدد @.

2. ادخل موضوع رسالة البريد الإلكتروني واضغط على موافق.

3. بعد كتابة رسالة البريد الإلكتروني، اضغط على مفتاح الاختيار الأيسر [خيارات]. يمكن الوصول إلى قائمة الخيارات التالية.

◀ الإرسال إلى: بإمكانك تحرير المستلمين.

◀ إدراج: بإمكانك إضافة رمز ونموذج نص وجهة اتصال وتوقيع.

◀ المرفقات: بإمكانك إرفاق ملف بهذه القائمة.

## ملاحظة

- ◀ تحرير الموضوع: يسمح لك هذا الخيار بتعديل رسالة الوسائط المتعددة التي اخترتها.
- ◀ مدة الشريحة: تستطيع تحديد مدة شريحة رسالة الوسائط المتعددة.
- ◀ لغات T9: حدد لغة وضع إدخال T9 يمكنك أيضاً إلغاء تنشيط وضع إدخال T9 من خلال تحديد إيقاف تشغيل T9.
- ◀ : تحديد كلمة T9 الجديدة لإدخال الكلمة الجديدة في القاموس.
- ◀ خروج: يمكنك الرجوع إلى قائمة الرسائل.

- ◀ إرسال: بإمكانك إرسال رسائل وسائط متعددة لعدة مستلمين وتحديد الرسالة كأولوية. كما يمكنك إرسالها لاحقاً.
- ◀ إدراج: تستطيع إضافة رمز/صورة/فيديو/صوت/صورة جديدة/فيديو جديد/صوت جديد/شريحة جديدة/ نمونج نص /جهة اتصال/بطاقة عمل وغيرها.

## ملاحظة

- ◀ يتم حفظ الرسائل آلياً في مجلد صندوق الصادر حتى بعد فشل الإرسال.

- ◀ معاينة: يمكنك معاينة رسائل الوسائط المتعددة التي قمت بإنشائها.
- ◀ حفظ: يمكنك حفظ رسائل الوسائط المتعددة إلى مسودات أو كقالب.

- صوت افتراضي: يسمح لك هذا الخيار بإدخال الأصوات المخزنة.

- نماذج نصية: يمكنك استخدام النماذج النصية الموجودة بالفعل في الهاتف.

- سجل الهاتف: يمكنك إضافة أرقام الهاتف أو عناوين البريد الإلكتروني الموجودة في دفتر العناوين.

- التوقيع: يمكنك إضافة التوقيع إلى الرسالة.

◀ حفظ في المسودات: لحفظ الرسائل في المسودات.

◀ لغات T9: حدد لغة وضع إدخال T9 يمكنك أيضاً إلغاء تنشيط وضع إدخال T9 من خلال تحديد إيقاف تشغيل T9.

◀ جديدة T9 كلمة: تحديد كلمة T9 الجديدة لإدخال الكلمة الجديدة في القاموس.

◀ مسح نص: يمكنك حذف النص عند كتابة الرسالة.

◀ خروج: إذا قمت بالضغط على «إلغاء» أثناء كتابة رسالة، فسوف يتم إرجاعك إلى قائمة الرسائل. ولن يتم كذلك حفظ الرسالة المكتوبة.

### الوسائط المتعددة (القائمة 2.1.5)

يمكنك كتابة رسائل الوسائط المتعددة وتحريرها والتحقق من حجم الرسالة.

1. إذهب قائمة الرسالة الجديدة بالضغط على مفتاح الاختيار الأيسر  [OK].

2. إذا أردت كتابة رسالة جديدة، حدّد الوسائط المتعددة.


3. يمكنك إنشاء رسالة جديدة أو اختيار واحدة من نماذج رسائل الوسائط المتعددة الموجودة بالفعل.

الحد الأقصى المسموح به لحجم الملف الذي يمكن إدراجه في رسالة رسالة وسائط هو 300 كيلوبايت.


## ملاحظة

◀ إرسال: إرسال رسائل نصية.

1. أدخل رقم المستلم.

2. اضغط على مفتاح  ↓ لإضافة مزيد من المستلمين.

3. يمكنك إضافة أرقام الهواتف الموجودة في جهات الاتصال.

4. اضغط  [خيار] ثم اضغط إرسال بعد إدخال الأرقام.

◀ إدراج

- رمز: يمكنك إضافة حروف خاصة.

- صور: يمكنك إدراج الرسومات الافتراضية أو الرسومات في «صور» المتاحة للرسائل القصيرة.

- صوت: يمكنك إدراج الأصوات المتاحة للرسائل القصيرة.

- صورة افتراضية: يسمح لك هذا الخيار بإدخال الرسوم المتحركة المخزنة.


## القائمة 1.5

## رسالة جديدة

تتضمن هذه القائمة الوظائف الخاصة ب SMS (خدمات الرسائل القصيرة) و MMS (خدمة رسائل الوسائط المتعددة) والبريد الصوتي وكذلك رسائل خدمة الشبكة.

## النص (القائمة 1.1.5)

يمكنك كتابة رسالة نصية وتحريرها.

1. إذهب الي قائمة الرسائل الجديدة بالضغط على مفتاح الاختيار الأيسر  [OK].

2. إذا أردت كتابة رسالة جديدة، حدّد النص.

3. لتسهيل إدخال النص، استخدم طريقة الإدخال T9.

4. اضغط [خيارات] لإرفاق التالي.

## عرض تكلفة المكالمة

### 6.4 الفاتمة

يتيح لك هذا الخيار فحص تكلفة آخر مكالمة وجميع المكالمات والرصيد المتبقي وإعادة ضبط موقت التكلفة. لإعادة ضبط موقت التكلفة سيُطلب منك إدخال رمز PIN2.

### 7.4 الفاتمة معلومات البيانات

يمكنك معرفة مقدار البيانات التي تم نقلها عبر الشبكة من خلال GPRS. إضافةً إلى ذلك، بإمكانك معرفة كم مضى من الوقت وأنت متصل.

## القائمة 5.4

## مدة المكالمة

يتيح لك هذا الخيار عرض مدة المكالمات الواردة والصادرة. ويمكنك كذلك إعادة ضبط موقتات المكالمات.

والموقتات المتاحة هي كالتالي:

◀ آخر مكالمة: يعرض مدة آخر مكالمة.

◀ المكالمات الصادرة: يعرض مدة المكالمات الصادرة.

◀ المكالمات المستلمة: يعرض مدة المكالمات الواردة.

◀ جميع المكالمات: يعرض مدة جميع المكالمات التي تم استلامها وإجرائها منذ آخر عملية إعادة ضبط.

## القائمة 4.4

## مكالمات واردة

يتيح لك هذا الخيار عرض آخر 50 مكالمات واردة. كما يمكنك القيام بالآتي:

◀ عرض الرقم في حالة وجوده والاتصال به أو حفظه في دفتر العناوين

◀ إدخال اسم جديد للرقم وحفظه في دفتر العناوين

◀ إرسال رسالة لهذا الرقم

◀ حذف المكالمة من القائمة

- ◀ إرسال رسالة لهذا الرقم
- ◀ حذف المكالمات من القائمة

## مكالمات صادرة القائمة 3.4

يُتيح لك هذا الخيار عرض آخر 50 مكالمات صادرة (سواء تم الاتصال بها أو كانت مجرد محاولة). كما يمكنك القيام بالآتي:

- ◀ عرض الرقم في حالة وجوده والاتصال به أو حفظه في دفتر العناوين
- ◀ إدخال اسم جديد للرقم وحفظه في جهات الاتصال
- ◀ إرسال رسالة لهذا الرقم
- ◀ حذف المكالمات من القائمة

يمكنك فحص السجل التي لم يتم الرد عليها والمكالمات الواردة والصادرة فقط في حالة دعم الشبكة خاصية تحديد هوية الخط المتصل (CLI) داخل نطاق الخدمة.

سيتم عرض الرقم والاسم (إن وجد) مع تاريخ ووقت إجراء المكالمات. يمكنك كذلك عرض أوقات الاتصال.

## كل المكالمات القائمة 1.4

يُتيح هذا الخيار عرض كل سجلات المكالمات.

## مكالمات لم يرد عليها القائمة 2.4

- يُتيح لك هذا الخيار عرض آخر 50 مكالمات لم يرد عليها. كما يمكنك القيام بالآتي:
- ◀ عرض الرقم في حالة وجوده والاتصال به أو حفظه في جهات الاتصال
  - ◀ إدخال اسم جديد للرقم وحفظه في دفتر العناوين

تسجيل صوت

1. اضغط على «موافق» لبدء التسجيل. حالما يبدأ التسجيل، تظهر رسالة جاري التسجيل والوقت المتبقي.
2. إذا رغبت بتوقيف التسجيل مؤقتاً أو استئنافه، اضغط مفتاح الاختيار الأيسر أو مفتاح موافق.
3. إذا رغبت بإنهاء التسجيل، اضغط مفتاح الاختيار الأيمن [توقف].

ألبوم

يمكنك عرض مجلد الأصوات الذي يسرد كافة الملفات الصوتية المحفوظة في الذاكرة.

- ◀ الوضع [  ]: يسمح لك هذا الخيار بالتحضير لإرسال ملف فيديو عبر MMS أو «عام». عام
- ◀ الدقة [  ]: الحجم: بإمكانك تحديد إحدى درجتي الدقة الآتيتين 128x96 و 176x144

## مسجل الصوت القائمة 4.3

بإمكانك تسجيل تذكير صوتي. تتوفر قوائم [الخيارات] التالية.


◀ تخزين


بإمكانك اختيار الهاتف أو الذاكرة الخارجية.


◀ وضع التسجيل


بإمكانك تحديد الوضع العام الذي يسمح لك بالتسجيل غير المحدد أو وضع اضغط وحدد الذي يسمح لك بالتسجيل حتى ثلاثين ثانية.


◀ الجودة [  ]: يتيح لك ضبط جودة الصورة على أي من الإعدادات قياسي ودقيق ودقيق جدًا.


◀ الفلاش [  ]: يتيح لك هذا الخيار ضبط إضاءة الفلاش عند التقاط الصور في الأماكن المظلمة.


◀ موقت التأخير [  ]: يتيح لك هذا الخيار تحديد وقت تأخير الالتقاط والإعدادات المتوافرة هي (إيقاف و 3 ثوان و 5 ثوان و 10 ثوان). يلتقط الهاتف الصورة بعد وقت التأخير المحدد.


◀ حفظ في [  ]: بإمكانك ضبط المكان بعد التقاط صورة. (خارجي/هاتف)


◀ لقطه متعددة [  ]: يتيح التقاط لقطات عديدة لصور بشكل متتابع.

◀ القياس [  ]: لتحديد الإضاءة المركزة على جزء صغير من الشيء. بإمكانك تحديد الوسط والمدمج لتعرضه للإضاءة بشكل صحيح.

◀ تأثير الألوان [  ]: تتوفر 4 إعدادات. (سالب/أحادي/بني/ألوان)

◀ توازن اللون الأبيض [  ]: يتيح لك تغيير الإعدادات حسب الأجواء المحيطة. (وضع الليل/مشع/غائم/متوهج/ضوء النهار/تلقائي)


◀ نغمة اللاقط [  ]: بإمكانك ضبط الصوت لدى التقاط صورة.


◀ إعادة تعيين الإعدادات [  ]: يسمح لك هذا الخيار بإعادة تعيين الإعدادات.

### كاميرا الفيديو القائمة 3.3

1. اختر قائمة «كاميرا الفيديو».
2. إن قائمة إعدادات كاميرا الفيديو متشابهة لإعدادات كاميرا الصور الفوتوغرافية. باستثناء العناصر التالية:

## • لالتقاط صورة


استمر بضغط زر الكاميرا  . ستجهز الكاميرا لاستخدامها وقد تود تدوير الشاشة لتصبح في موضع عامودي.

- لالتقاط صور واضحة، اضغط على زر الكاميرا  أثناء حمل الكاميرا دون أي حركة.


- قم بضبط المسافة بشكل ملائم إلى الكائن الذي ترغب في التقاط صورة له (أكثر من 50 سم).

- تعامل بعناية حيث إن الكاميرا معرضة للصددمات واستخدام قطعة قماش ناعمة عند تنظيف عدسة الكاميرا.

- لا تقم بتفكيك الكاميرا أو تعديلها حيث قد يؤدي ذلك إلى حدوث حريق أو تلف.


- يتم تمكين وظيفة ضبط البؤرة تلقائيًا عند التقاط صورة أو تصوير لاصق. اضغط على زر الكاميرا  ضغطة خفيفة لضبط البؤرة.

1. استمر بضغط  في وضع الانتظار.

2. اضبط بؤرة الكاميرا على الهدف المراد تصويره لالتقاط صورة. ثم اضغط على المفتاح .


3. إذا كنت تريد حفظها، فاضغط على المفتاح .

## ملاحظة

◀ بإمكانك ضبط السطوع باستخدام زر  ↑ ↓.

◀ وضع الالتقاط : يسمح لك هذا

الخيار بضبط وضع اللقطة من ماكرو والتركيز التلقائي المشغل والتركيز التلقائي المتوقف عن التشغيل.

◀ الدقة : يسمح لك بتحديد حجم الصورة. (1600x1200) و (1280x960) و (640x480) و (320x240).

بحسب تفضيلاتك، قم بتدوير الهاتف كما هو  
مبيت أدناه لالتقاط صورة.




- 1 / 2 تكبير/تصغير
- 3 الكاميرا

يصدر صوت الغالق أو تسجيل الفيديو صوت عند  
أي الوضع بما في ذلك الوضع الصامت .

## الكاميرا العامة 2.3

من خلال استخدام وحدة الكاميرا المدمجة  
في الهاتف، يمكنك التقاط صور للأشخاص أو  
تسجيل الفيديو. بالإضافة إلى ذلك، يمكنك  
إرسال الصور إلى أشخاص آخرين واستخدام  
الصور كخلفية.

### ملاحظة

◀ عند استخدام الكاميرا، يزداد استهلاك  
الطاقة. إذا ظهر الرمز  على  
الخلفية، إشارة إلى انخفاض طاقة  
البطارية، فقم بإعادة شحن البطارية  
قبل الاستخدام.

## الإعدادات ◀

- اكوليزر: تتيح هذه القائمة ضبط العديد من التأثيرات عند الاستماع للموسيقى.
- وضع التشغيل: تتيح هذه القائمة ضبط وضع التشغيل «تكرار واحد». «تكرار الكل». «تشغيل الكل».
- عشوائي: إذا حددت تشغيل، يمكنك الاستماع لملفات الموسيقى بشكل عشوائي.
- تأثير بصري: يمكنك تحديد قوائم التأثير المرئي: نور وارتداد وعازف القيثارة. تتيح هذه القائمة تغيير خلفية شاشة LCD الرئيسية عند تشغيل ملف MP3.

## ملاحظة

- ◀ الموسيقى لها حقوق محفوظة عالمياً ولها قوانين وطنية. من الضروري الحصول على رخصة لإعادة نسخ هذه القوانين. في بعض الدول، القوانين الوطنية تمنع النسخ الخاص. الرجاء التأكد من التشريع الوطني المطبق بما يتعلق باستخدام هذه المواد.

## ملاحظة

◀ في حالة وجود أي ملف غير صالح في قائمة التشغيل، تظهر رسالة إعلام بالخطأ وتتم العودة إلى الشاشة السابقة.

1. اضغط على قائمة وسائط متعددة. ثم حدد مشغل MP3.

2. اضغط على مفتاح الاختيار الأيسر [خيارات] للوصول إلى القوائم التالية.

◀ توقف مؤقت: بإمكانك إيقاف تشغيل ملف MP3 مؤقتاً.

◀ عرض قائمة التشغيل: بإمكانك تحديد ملف آخر من قائمة MP3.

◀ ضبط كنفمة زين: يمكنك ضبط ملف الموسيقى الحالي كنفمة زين أثناء تشغيل ملف MP3.



تكرار	
تشغيل الكل	
تكرار الكل	
تكرار واحد	

يدعم مشغل الموسيقى:

• MPEG-2.5 Layer III, MPEG-2 •  
Layer II :

تردد التسجيل من 8 كيلوهرتز إلى 48 كيلوهرتز، سرعة البت حتى 320 كيلوبايت/ثانية، استريو.

• AAC: تنسيقات ADIF و ADTS (سرعة تردد تصل إلى 48 كيلو هرتز).

• AAC+: V1: (سرعة البت 16~128 كيلوبايت/ثانية)  
V2: (سرعة البت 16~48 كيلوبايت/ثانية)

(تردد التسجيل من 8 كيلوهرتز إلى 48 كيلوهرتز)

يمكن نقل ملفات MP3 من جهاز كمبيوتر متوافق إلى ذاكرة الهاتف باستخدام ميزة ذاكرة التخزين

عند توصيل الهاتف بالكمبيوتر عبر كابل USB (المرفق في نفس العبوة). يمكنك عرض القرص القابل للإزالة من خلال Windows explorer. في حالة استخدام Win98 SE، فلا بد من تثبيت برنامج تشغيل الجهاز ذي السعة التخزينية الكبيرة لـ Windows 98 المتوفر على قرص CD.

## ملاحظة

◀ يتعين نسخ ملفات MP3 إلى مجلد اصوات/MP3. وفي حالة نسخ مجلد آخر، لن يتاح لك رؤية ملفات MP3.

لا بد أن يكون نظام التشغيل الموجود على الكمبيوتر هو Windows 98 SE أو Windows ME أو Windows XP أو Windows 2000.

## ملاحظة

◀ لا يدعم الهاتف KE970 المعدل المتغير لملف ACC ومن ثم، لا يمكنك تغيير الملف من تنسيق MP3 إلى ACC.

## العامة 1.3

## مشغل MP3

يشتمل الهاتف KE970 على مشغل MP3 مدمج يمكنك الاستمتاع بالاستماع إلى موسيقى ملفات MP3 الموجودة في ذاكرة الهاتف باستخدام سماعة رأس متوافقة أو من خلال مكبر صوت داخلي.

### ملاحظة

◀ نظرًا لصغر أبعاد مكبر الصوت، ففي بعض الأحيان قد يكون الصوت مشوشًا، ولا سيما عند تشغيله على أعلى مستوى له وعندما تكون هناك أصوات جهير كثيرة. ومن ثم، نوصي باستخدام سماعات الرأس الاستريو حتى يتسنى تقدير الجودة العالية للموسيقى التي تستمع إليها.

يمكنك الاستمتاع بوظائف الوسائط المتعددة مثل الكاميرا ومسجل الصوت وMP3 المعدة لتسليتك.

### ملاحظة

◀ عندما يكون مؤشر البطارية يشير إلى انتهاء الشحن، ربما لا تستطيع استخدام الكاميرا أو وظائف الوسائط المتعددة.

◀ عندما تكون في حالة استخدام وظائف الوسائط المتعددة، حالة البطارية تكون متغيرة وغير مستقرة.

### شهادات الأمان (الفائمة 4.5.2)

بإمكانك الاطلاع على قائمة الشهادات الشخصية المخزنة في هاتفك.

◀ حذف الكل: تسمح هذه الميزة بحذف كافة الخصائص المحددة من القائمة.

◀ إعادة تعيين الكل: يتيح لك هذا الخيار إعادة تعيين الأنماط كافة.

### الفائمة 6.2

### معلومات

يتم عرض إصدار مستعرض WAP.

### الذاكرة المؤقتة (الفائمة 2.5.2)

كافة المعلومات أو الخدمات التي اطلعت عليها يتم حفظها في الذاكرة المؤقتة للهاتف.

#### ملاحظة

◀ الذاكرة المؤقتة هي ذاكرة تخزين مؤقت تستخدم في حفظ البيانات بشكل مؤقت.

### ملفات تعريف الارتباط (الفائمة 3.5.2)

فحص ملفات التسجيل ومعرفة ما إذا كانت مستخدمة أم لا.

### أوضاع الشبكة (القائمة 1.5.2)

الوضع هو عبارة عن معلومات الشبكة المستخدمة للتوصيل بالإنترنت.

تتوفر أوضاع افتراضية لبعض المشغلين. وقد تم تخزينها في ذاكرة الهاتف. تستحيل إعادة تسمية الأوضاع الافتراضية.

ويحتوي كل ملف المعلومات على القوائم الفرعية التالية:

- ◀ تنشيط: تنشيط ملف المعلومات المحدد.
- ◀ عرض: بإمكانك مشاهدة النمط المحدد.
- ◀ تحرير: بإمكانك تحرير النمط المحدد.
- ◀ وضع جديد: يمكنك إضافة ضبط معلومات جديد.
- ◀ حذف: حذف ملف المعلومات المحدد من القائمة.

## الذهاب الى عنوان الموقع

### 3.2 القائمة

يمكنك الاتصال مباشرة بالموقع الذي تريده. بعد إدخال عنوان URL محدد. اضغط على مفتاح "موافق".

## محفوظات

### 4.2 القائمة

تظهر هذه القائمة صفحات الاستعراض الأخيرة.

## الإعدادات

### 5.2 القائمة

يمكنك ضبط الوضع والذاكرة المؤقتة وملف تعريف الارتباط والحماية المرتبطة بخدمة الإنترنت.

2. حدد "إشارات جديدة" واضغط على مفتاح "موافق".

3. بعد إدخال عنوان URL المراد وعنوانه، اضغط على مفتاح "موافق".

بعد تحديد الإشارة المرجعية المطلوبة، تتوافر الخيارات التالية.

◀ اتصال: للاتصال بالعلامة المحددة.

◀ عرض: بإمكانك مشاهدة الإشارة المرجعية المحددة.

◀ تحرير: يمكنك تحرير عنوان URL أو عنوان الإشارة المرجعية المحددة.

◀ إشارة مرجعية جديدة: حدد هذا الخيار لإنشاء إشارة مرجعية جديدة.

◀ إرسال URL عبر: بسمح لك هذا الخيار بإرسال الإشارة المرجعية عبر رسالة نصية/رسالة وسائط متعددة ورسالة بريد إلكتروني.

## ملاحظة

◀ وقد تختلف قائمة متصفح WAP باختلاف نسخة المتصفح الخاص بك.

## الصفحة الرئيسية القائمة 1.2

للاتصال بالصفحة الرئيسية، قد تكون الصفحة الرئيسية هي الموقع الذي تم تحديده في الوضع النشط. سيتم تحديدها عن طريق مزود الخدمة إذا لم تقم بتنشيط أحد الأوضاع.

## إشارات مرجعية القائمة 2.2

تسمح لك تلك القائمة بتخزين عناوين URL لصفحاتك المفضلة وذلك لتسهيل الدخول عليها في وقت لاحق.

لإنشاء إشارة مرجعية

1. اضغط على مفتاح الاختيار الأيسر [خيارات].

## المتصفح

التصفح باستخدام متصفح WAP

يمكنك تصفح الإنترنت باستخدام أي من مفاتيح الهاتف أو قائمة متصفح WAP.

باستخدام مفاتيح الهاتف

عند تصفح الإنترنت، تعمل مفاتيح الهاتف بطريقة مختلفة عن تلك في وضع الهاتف العادي.

الوصف	الرمز
التنقل بين سطور منطقة المحتويات.	↑, ↓
العودة للصفحة السابقة.	C
تحديد الخيارات وتأكيد الإجراءات.	≡

باستخدام قائمة متصفح WAP

تتاح العديد من خيارات القوائم عند تصفح الويب من خلال الجوال.

يمكنك الوصول إلى خدمات WAP المختلفة (بروتوكول التطبيق اللاسلكي) مثل المعاملات المصرفية والأخبار وتقارير الطقس ومعلومات عن الرحلات الجوية. تم تصميم هذه الخدمة خصيصاً للهواتف المحمولة ويتم صيانتها بواسطة مزودي خدمة WAP.

تأكد من توافر خدمات WAP والأسعار والتعريفات مع مشغل الشبكة الخاص بك أو مزود الخدمة الذي ترغب في استخدامه خدمته. سوف يعطيك أيضاً مزودي الخدمة إرشادات عن كيفية استخدام الخدمات الخاصة بهم.

يرجى الاتصال بـمشغل خدمة الشبكة الخاص بك لفتح حساب الإنترنت الخاص بك. لاستخدام مستعرض ويب، يجب أن تشير إلى رقم الهاتف الخاص بك عبر خيارات قائمة الرقم الشخصي. بمجرد إتمام عملية الاتصال، يتم عرض الصفحة الرئيسية. يعتمد المحتوى على مزود الخدمة. يمكنك الوصول إلى أي صفحة موقع الخاص بها.

للخروج من URL ويب عن طريق إدخال عنوان المستعرض في أي وقت . سوف يعود الهاتف إلى وضع الانتظار.

- ◀ رد تلقائي: سيتم تنشيط هذه الوظيفة فقط عندما يكون هاتفك موصلاً بسماعة الرأس أو طقم حر اليدين.
- إيقاف التشغيل: لن يرد الهاتف تلقائياً.
- بعد 5 ثوان: سيرد الهاتف تلقائياً بعد 5 ثوان.
- بعد 10 ثوان: سيرد الهاتف تلقائياً بعد 10 ثوان.

## ملاحظة

- ◀ لا يمكن إعادة تسمية أي من الأوضاع

◀ حجم صوت المفاتيح: لضبط حجم صوت المفاتيح لتناسب بيئة الاستخدام.

◀ نغمة القطعة المنزلة: يسمح لك هذا الخيار بضبط نغمة القطعة المنزلة لتناسب بيئة الاستخدام.

◀ درجة صوت التأثير الصوتي: ضبط درجة صوت التأثير الصوتي.

◀ درجة الصوت عند التشغيل/الإيقاف: ضبط درجة صوت نغمة الرنين عند تشغيل/إيقاف تشغيل الجوال

# الأوضاع

## ضبط خاص (القائمة 2.x.1)

انتقل إلى الوضع المطلوب في قائمة "الأوضاع".  
بعد الضغط على مفتاح الاختيار الأيسر   
أو مفتاح "موافق". حدد "تخصيص". يتم فتح  
خيار ضبط الوضع. اضبط الخيار على النحو  
المطلوب.

- ◀ نوع التنبيه الوارد: ضبط نوع التنبيه  
للمكالمات الواردة.
- ◀ نغمة الرنين: تحديد نغمة الرنين المطلوبة  
من القائمة.
- ◀ درجة صوت الرنين: ضبط درجة صوت نغمة  
الرنين.
- ◀ تنبيه الرسالة: ضبط نوع التنبيه للرسائل.
- ◀ نغمة الرسالة: تحديد نغمة التنبيه  
لِلرسائل.
- ◀ نغمة المفاتيح: تحديد نغمة الضغط على  
المفاتيح المطلوبة.

في قائمة الأوضاع يمكنك ضبط نغمات الجوال  
وتخصيصها لتلائم مختلف الأحداث والبيئات  
ولتلائم كذلك مجموعات المتصلين.

هناك خمسة أنماط معينة مسبقاً:  
عام، صامت، اهتزاز فقط، خارجي، سماعه  
الرأس.

يمكن تخصيص كل وضع. اضغط على مفتاح  
الاختيار الأيسر [القائمة] وحدد باستخدام  
مفاتيح التنقل لأعلى/أسفل.

## تنشيط (القائمة 1.x.1)

1. يتم عرض قائمة الأوضاع.
2. في قائمة «الأوضاع»، انتقل إلى الوضع الذي  
ترغب في تنشيطه واضغط على مفتاح  
الاختيار الأيسر  [تحديد] أو مفتاح  
"موافق".
3. ثم حدد "تنشيط".

## 7. اثنيائي

1.7 الصور
2.7 أصوات
3.7 مقاطع فيديو
4.7 مستندات
5.7 أخرى
6.7 الألعاب والتطبيقات
7.7 الذاكرة الخارجية

## 8. أدوات

1.8 تعقب الهاتف المحمول المفقود
2.8 ساعة المنبه
3.8 التقويم
4.8 الحاسبة
5.8 مذكرة
6.8 ساعة الإيقاف
7.8 محول الوحدات
8.8 التوقيت العالمي
9.8 قائمة SIM

## 9. الإعدادات

1.9 التاريخ والوقت
2.9 اللغة
3.9 العرض
4.9 التوصيل
5.9 اعدادات المكالمة
6.9 اعدادات الحماية
7.9 وضع الطائرة
8.9 توفير الطاقة
9.9 إعادة ضبط المصنع
0.9 حالة الذاكرة

#### 6. جهات الاتصال

1.6 بحث
2.6 جهة اتصال جديدة
3.6 الاتصال السريع
4.6 المجموعات
5.6 نسخ الكل
6.6 حذف الكل
7.6 الإعدادات
8.6 معلومات

#### 5. الرسائل

1.5 رسالة جديدة
2.5 صندوق الوارد
3.5 صندوق البريد الإلكتروني
4.5 مسودات
5.5 صندوق الصادر
6.5 المرسلات
7.5 استمع إلى رسالة صوتية
8.5 خدمة المعلومات
9.5 نماذج
0.5 الإعدادات

#### 4. السجل

1.4 كل المكالمات
2.4 مكالمات لم يرد عليها
3.4 مكالمات صادرة
4.4 مكالمات واردة
5.4 مدة المكالمات
6.4 عرض تكلفة المكالمات
7.4 معلومات البيانات

# سرد سلسلة القوائم

القائمة في هذا الهاتف يمكن أن تعرض على طريقتين. اما باسلوب عرض القائمة أو باسلوب عرض الشبكة. الرجاء ملاحظ أنّ ارقام القوائم مختلفة في الاسلوبين.

الاعداد الافتراضي للهاتف يعرض القائمة باسلوب عرض القائمة. لذلك كل ارقام القوائم في هذا الدليل تعرض على اساس اسلوب القائمة.

يوضح الشكل التالي سلسلة القوائم المتاحة والعناصر التي ندرج تحتها:

◀ الأرقام المخصصة لكل عنصر من عناصر القائمة

◀ الصفحة التي يمكنك العثور فيها على وصف الميزة.

يمكنك الانتقال إلى القائمة المطلوبة باستخدام مفتاح الاختيار الأيسر [القائمة]. ومفاتيح التنقل ومفتاح [موافق]. يمكن أيضاً القيام باختصار عبر ضغط مفتاح الرقم الموافق للقائمة المطلوبة بعد ضغط مفتاح الاختيار الأيسر [قائمة].

## 3. الوسائط

1.3 مشغل MP3

2.3 الكاميرا

3.3 كاميرا الفيديو

4.3 مسجل الصوت

## 2. المتصفح

1.2 الصفحة الرئيسية

2.2 اشارات مرجعية

3.2 الذهاب الى عنوان الموقع

4.2 محفوظات

5.2 الإعدادات

6.2 معلومات

## 1. الأوضاع


1.X.1 تنشيط

2.X.1 ضبط خاص


## مكالمة خاصة في مكالمة جماعية

للإجراء مكالمة خاصة مع أحد متصلي المكالمة الجماعية، اعرض رقم المتصل الذي تريد التحدث إليه مفتاح الاختيار الأيسر. حدد القائمة «خاص» من «مكالمة جماعية» على الشاشة. ثم اضغط على لتعليق مكالمات جميع المتصلين الآخرين.

## إنهاء المكالمة الجماعية مكالمة المؤتمر

يمكن إخراج المتصل الحالي من إحدى المكالمات الجماعية بالضغط على المفتاح .

### إجراء مكالمة ثانية

يمكنك إجراء مكالمة ثانية أثناء إجرائك لمكالمة بالفعل الآن. قم بإدخال الرقم الثاني واضغط على المفتاح .

عند إجراء المكالمة الثانية، توضع المكالمة الأولى قيد الانتظار تلقائياً.


يمكنك التبديل بين المكالمات، بضغط مفتاح .


### اعداد مكالمة جماعية

لإعداد مكالمة جماعية، قم بتعليق مكالمة مع استمرار المكالمة النشطة، واضغط على مفتاح الاختيار الأيسر، ثم حدد القائمة ضم الكل انضمام «المكالمة الجماعية».

### تنشيط المكالمة الجماعية

#### المعلقة


لتنشيط المكالمة الجماعية المعلقة، اضغط على المفتاح  أو اضغط على مفتاح الاختيار الأيسر [خيارات] وحدد «مكالمة جماعية»/«تعليق كل المكالمات».

سيظل المستخدمون الآخرون المعلقون متصلين. للرجوع إلى وضع المكالمة الجماعية، اضغط على مفتاح الاختيار الأيسر  [خيارات] ثم «مكالمة جماعية».

### إضافة مكالمات جديدة إلى مكالمة جماعية

لإضافة مكالمات جديدة إلى مكالمات جماعية قائمة بالفعل، اضغط على مفتاح الاختيار الأيسر ثم حدد خيار جماعية/إشراك الكل.

## رفض مكالمة واردة

يمكنك رفض مكالمة واردة دون الرد عليها وذلك بالضغط ببساطة على المفتاح .

أثناء مكالمة ما، يمكنك رفض مكالمة واردة بالضغط على المفتاح .

## كتم الصوت

يمكنك كتم الصوت أثناء المكالمة عن طريق ضغط مفتاح [صامت] يمكن إعادة الصوت باختيار [غير صامت] عندما تكون في وضع كتم الصوت. المتصل لا يستطيع سماعك، ولكن يمكنك أنت سماع المتصل.

## تشغيل نغمات DTMF أثناء الاتصال

لتشغيل نغمات DTMF أثناء الاتصال (على سبيل المثال، لاستخدام الهاتف المزود بلوحة مفاتيح تلقائية)، اضغط على المفتاح [خيارات] ثم «إرسال DTMF» - «تشغيل DTMF».

اختر «إيقاف DTMF» لتعطيل نغمات

DTMF. من الطبيعي أن تكون نغمات DTMF في وضع التشغيل.

## المكالمات الجماعية

تمنحك خدمة المكالمات الجماعية القدرة على إجراء أكثر من محادثة في نفس الوقت مع أكثر من متصل واحد. إذا كان مزود خدمة الشبكة يدعم هذه الميزة، يمكن إعداد مكالمة جماعية فقط عندما تكون لديك مكالمات نشطة وأخرى معلقة وقد تم الرد على المكالمتين.

بمجرد إعداد مكالمات جماعية، يمكن إضافة المكالمات أو قطع الاتصال بها أو الفصل بينها (أي إخراجها من المكالمات الجماعية مع استمرار اتصالك بها) بواسطة الشخص الذي قام بإعداد المكالمات الجماعية.

تتوفر جميع تلك الخيارات في قائمة المكالمات الواردة. أقصى عدد من المتصلين في المكالمات الجماعية هو خمسة متصلين. بمجرد بدء المكالمات الجماعية، تكون أنت المتحكم فيها ويتاح لك أنت فقط إمكانية إضافة المكالمات إليها.

# قائمة خلال المكالمة

هاتفك مزود بالعديد من وظائف التحكم التي يمكن استخدامها أثناء المكالمة. لاستخدام هذه الوظائف أثناء المكالمة، اضغط على مفتاح الاختيار الأيسر [خيارات].

## التبديل بين مكالمتين

للتبديل بين مكالمتين، اضغط مفتاح [↔] أو مفتاح الاختيار الأيسر. ثم حدد «تبادل المكالمات».

## أثناء المكالمة

تختلف القائمة المعروضة على شاشة الهاتف أثناء المكالمة عن القائمة الرئيسية الافتراضية عندما يكون الهاتف في وضع الاستعداد. والخيارات مشروحة أدناه.

## الرد على مكالمة واردة

للرد على مكالمة واردة عند رنين الهاتف، اضغط ببساطة على المفتاح [↔]. من الممكن أيضاً أن ينبهك الهاتف بمكالمة واردة أثناء إجراءك مكالمة في الوقت الحالي بالفعل. ستصدر نغمة في سماعة الأذن. وتوضح الشاشة وجود مكالمة ثانية قيد الانتظار.

## إجراء مكالمة ثانية

### (يعتمد على الشبكة)

يمكنك الحصول على رقم اتصال تريد طلبه من دليل الهاتف لإجراء مكالمة ثانية.

تعرف هذه الميزة باسم انتظار المكالمات.

وتتوافر فقط إذا كانت الشبكة الخاصة بك تدعمها. للحصول على تفاصيل حول كيفية تنشيط هذه الميزة أو إلغاء تنشيطها، انظر انتظار المكالمات (قائمة 4.5.9)

في حالة تشغيل وظيفة انتظار المكالمات، يمكنك تعليق المكالمة الأولى والرد على الثانية بالضغط على المفتاح [↔].

## تحديد الوظائف والخيارات



اضغط على  
مفتاح الاختيار  
الأيسر للوصول  
إلى القائمة  
المتاحة.

اضغط على  
مفتاح الاختيار  
الأيمن للوصول  
إلى قائمة جهات  
الاتصال.

يوفر الهاتف مجموعة من الوظائف التي تسمح لك بتخصيص الهاتف وفقاً لرغباتك. هذه الوظائف مرتبة في شكل قوائم رئيسية وقوائم فرعية. يمكن الوصول إليها من خلال مفاتيح الاختيار المميزة **←** و **→**. تسمح لك كل قائمة رئيسية وقائمة فرعية بعرض وتغيير إعدادات الوظائف المعينة.


تختلف أدوار مفاتيح الاختيار حسب السياق الحالي. حيث تشير العلامة الموجودة في السطر السفلي من الشاشة مباشرة فوق كل مفتاح إلى الدور الحالي.

### استخدام وضع 123 (وضع الأرقام)

يمكنك وضع الأرقام من القيام بإدخال الأرقام في نص الرسالة (رقم هاتف. على سبيل المثال).

اضغط على المفاتيح التي تمثل الأرقام المراد إدخالها على الشاشة وذلك قبل الانتقال يدوياً إلى وضع إدخال النص المناسب مرة أخرى.

### استخدام وضع الرموز

يتيح لك وضع الرموز إدخال رموز متعددة أو حروف خاصة. لإدخال رمز، اضغط على المفتاح  . استخدم مفاتيح التنقل لاختيار الرمز المطلوب واضغط على مفتاح [موافق].

## استخدم وضع ABC (الحروف)

يمكن استخدام من **2** إلى **9** من المفاتيح للقيام بإدخال النص الخاص بك.

1. اضغط على المفتاح المطبوع والذي يحمل الحرف المراد كتابته:

◀ ضغط واحدة للحرف الأول

◀ ضغطتان للحرف الثاني

◀ وعلى هذا النحو

2. لإدخال مسافة فاصلة، اضغط على المفتاح

**0** مرة واحدة فقط. لحذف أي حرف

من الحروف، اضغط على المفتاح **C**.

استمر في الضغط على مفتاح **C** لمحو

محتويات شاشة الهاتف بأكملها.

### ملاحظة

◀ برجاء الرجوع إلى الجدول التالي لمعرفة المزيد من الحروف المتوافرة باستخدام مفاتيح الأبجدية الرقمية.

المفتاح	الأحرف المتوافرة وفقاً لترتيب شاشة العرض
أحرف	
1	، . : ! " @ ١
2	ب ت ث ٢
3	أ إ ي ؤ ئ ٣
4	س ش ص ض ٤
5	ذ ز ه ٥
6	ح ج خ ٦
7	ن ه و ي ٧
8	ف ق ك ل م ٨
9	ط ظ ع غ ٩
0	مفتاح المسافة الفاصلة، .

يمكنك كذلك إضافة المزيد من الكلمات الجديدة في القاموس. وبمجرد إضافة الكلمات الجديدة، فإن الكلمة تتغير لعرض الكلمات الأكثر ترشيحاً من القاموس

### ملاحظة

يمكنك اختيار لغة T9 مختلفة من بين خيارات القائمة أو الضغط باستمرار على المفتاح **[\*]** الإعداد الافتراضي في الهاتف هو وضع تعطيل.

1. عندما يكون وضع إدخال النص التنبئي T9 قيد التشغيل، ابدأ في إدخال الكلمة عن طريق الضغط على المفاتيح من **[2]** إلى **[9]**. اضغط على مفتاح واحد لكل حرف مراد إدخاله.

تغيير الكلمة مع كل حرف يتم كتابته، تجاهل ما هو مكتوب على الشاشة حتى يتم كتابة الكلمة بالكامل.

◀ إذا ظلت الكلمة التي قمت بكتابتها غير صحيحة بعد إتمام عملية الكتابة، فقم بالضغط على مفتاح التنقل مرة واحدة أو مرتان للبحث خلال خيارات الكلمة الأخرى. مثال: اضغط على **[4]** **[6]** **[6]** **[3]** لكتابة كلمة Good.

◀ إذا فقدت الكلمة المراد كتابتها من قائمة خيارات الكلمات، فقم بالإضافة مستخدماً وضع الحروف الأبجدية ABC.

2. قم بإدخال الكلمة بأكملها قبل تحرير أو حذف أي حرف مدخل بواسطة الضغط على المفاتيح.

3. أ كمل كل كلمة بمسافة بالضغط على المفتاح أو **[0]** المفتاح **[C]**. اضغط على المفتاح **[C]**. أو اضغط باستمرار على المفتاح **[C]** لمسح الحروف بشكل مستمر.

## وضع الرموز

يتيح هذا الوضع إدخال أحرف خاصة.

## تغيير وضع إدخال النص

1. عندما تكون في حقل يتيح لك القيام بإدخال الحروف، فسوف تلاحظ مؤشر وضع إدخال النص موجوداً في الزاوية اليمنى المرتفعة من شاشة العرض LCD.
2. إذا كنت تريد تغيير الأوضاع، اضغط **#\***. لقد تغيرت الأوضاع المتوفرة.

## استخدام وضع T9

يمكنك وضع إدخال النص T9 والمعروف بالوضع التنبئي من إدخال الكلمات بكل سهولة مع أقل عدد ممكن من الضغوطات على المفاتيح. فعند الضغط على أي مفتاح من المفاتيح، يبدأ الهاتف في عرض الأحرف التي يعتقد أنك تريد كتابتها وذلك بناءً على قاموس مدمج بالهاتف.

ويقوم الوضع T9 تلقائياً بمقارنة ضغطك على المفاتيح بواسطة قاموس داخلي بالهاتف وذلك لتحديد الكلمة الصحيحة، مما يتطلب القليل جداً من قيامك بالضغط على المفاتيح أكثر من وضع الحروف الأبجدية (أ ب ج). ويطلق على هذا النص أحياناً النص التنبئي.

## وضع ABC (الحروف)

يتيح لك هذا الوضع إمكانية القيام بإدخال الحروف عن طريق الضغط على المفتاح المطبوع الذي يحمل الحرف المراد كتابته وذلك لمرة واحدة فقط أو مرتان أو ثلاث أو أربع مرات حتى يتم عرض الحرف المراد على شاشة عرض الهاتف.

## وضع 123 (وضع الأرقام)

اكتب الأرقام بواسطة ضغطة واحدة فقط لكل رقم يراد كتابته. للانتقال إلى وضع الأرقام في حقل مدخلات النص، اضغط على مفتاح **#\*** حتى يتم عرض وضع الأرقام على شاشة العرض.

## ملاحظة

◀ بإمكانك الإجابة على مكالمة أثناء استخدام دليل العناوين أو أية ميزة أخرى من القائمة. إذا كان الهاتف متصلاً بكمبيوتر بواسطة كبل USB، فسيتم رفض المكالمات الواردة. ولكن بعد فصل الهاتف عن الكمبيوتر سترى إطار المكالمات التي لم يرد عليها.

## إدخال نص

يمكنك إدخال الحروف الأبجدية الرقمية بواسطة استخدام لوحة مفاتيح الهاتف. على سبيل المثال، تخزين الأسماء في دليل الهاتف وكتابة الرسائل وإنشاء رسالة ترحيب شخصية أو إدراج الأحداث في سجل. كل ما يلزم هو إدخال نص. وتتوافر الطرق التالية الخاصة بإدخال النص في هاتفك.

## ملاحظة

◀ قد تسمح بعض الحقول بوضع إدخال نص واحد (مثل رقم الهاتف في حقول دليل العناوين).


## قوة الإشارة

إذا كنت داخل أحد المباني، فقد يؤدي اقترابك من نافذة إلى استقبال أفضل. يمكنك معرفة قوة الإشارة (T) الموجود على شاشة الهاتف.

## وسيلة T9

يتيح لك هذا الوضع إدخال الكلمات بواسطة الضغط على المفتاح ضغطة واحدة فقط لكل حرف تريد إدخاله. كل مفتاح من مفاتيح لوحة مفاتيح الهاتف مزود بأكثر من حرف واحد.

## إنهاء المكالمة

عند الانتهاء من مكالمتك، اضغط على مفتاح  الإنهاء.

## إجراء مكالمة من سجل الهاتف

يمكنك حفظ الأسماء وأرقام الهواتف التي يتم الاتصال بها بشكل SIM متكرر في بطاقة بالإضافة إلى ذاكرة الهاتف المعروفة بسجل الهاتف.

يمكنك الاتصال برقم فقط بالبحث عن اسم في سجل الهاتف.



## ضبط مستوى الصوت


أثناء المكالمة، إذا اردت تعديل مستوى الصوت للسماعة، استعمل المفاتيح الجانبية للهاتف.

في وضع الانتظار، يمكن تعديل مستوى صوت المفاتيح باستخدام المفاتيح الجانبية.

## الرد على مكالمة

عند استلام (تلقي) مكالمة، يصدر الهاتف رنيناً ويتم عرض رمز الهاتف الوامض على شاشة الهاتف. إذا تم التعرف على هوية المتصل، فسيتم عرض رقم الهاتف المتصل (أو الاسم إذا كان مخزناً في دليل الهاتف) على شاشة العرض.

1. ا دفع لأعلى واضغط زر  أو مفتاح الاختيار الأيسر للإجابة على مكالمة واردة. في حال تعيين خيار القائمة أي مفتاح (القوائم 2.5.9)، يسمح الضغط على أي مفتاح بالإجابة على مكالمة باستثناء مفتاح  أو مفتاح الاختيار الأيمن.

2. إنهاء المكالمة بالضغط على مفتاح .

## إجراء مكالمة

1. يجب التأكد من أن الهاتف قيد التشغيل.
2. قم بإدخال رقم الهاتف بما في ذلك رمز المنطقة.  
لتعديل رقم على شاشة العرض. اضغط فقط على المفتاح **C** لمسح رقم واحد كل مرة.
3. اضغط مع الاستمرار على مفتاح المسح **C** لمحو الرقم بأكمله.

3. اضغط على المفتاح **↩** للاتصال بالرقم.
4. عند الرغبة في إنهاء المكالمة، اضغط على المفتاح **☎**.

## إجراء مكالمة بواسطة مفتاح الإرسال

1. اضغط على المفتاح **↩** ليتم عرض آخر أرقام الهواتف الواردة والصادرة و التي لم يتم الرد عليها.
2. اختر الرقم المطلوب باستخدام مفتاح التنقل.
3. اضغط على المفتاح **↩**.

## إجراء مكالمة دولية

1. استمر في الضغط على المفتاح **0** لتحديد بادئة الاتصالات الدولية. تقوم علامة «+» تلقائياً بتحديد رمز الدخول الدولي.
2. قم بإدخال رمز البلد ثم رمز المنطقة ثم رقم الهاتف.
3. اضغط على **↩**.

## إزالة بطاقة الذاكرة

أزل بعناية بطاقة الذاكرة من المقبس. كما يظهر في الصورة أدناه:



### ملاحظة


◀ قم باستخدام بطاقات الذاكرة المعتمدة من جهة التصنيع فقط. من الممكن ألا تتوافق بطاقات الذاكرة والهاتف

### تحذير

لا تقم باستبدال بطاقة الذاكرة أو بإزالتها أثناء استخدام الهاتف أو عندما يكون قيد التشغيل. فذلك قد يؤدي إلى فقدان البيانات أو إلحاق الضرر بالبطاقة.

## إدخال بطاقة الذاكرة

أدخل بطاقة الذاكرة في الفتحة حتى تدخل كلياً.  
كما يظهر في الصورة أدناه:

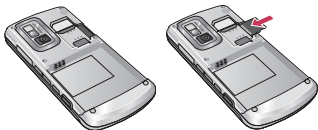

## تحذير

- انزع كابل الطاقة والشاحن من مصدر التيار الكهربائي أثناء العواصف الرعدية لتفادي حدوث صدمة كهربية أو حريق.
- تأكد من عدم ملامسة الأشياء الحادة كأسنان الحيوانات والمسامير للبطارية. فهناك خطر أن يتسبب هذا في حريق.

## فصل الشاحن

افصل الشاحن عن الهاتف بسحب الموصل.  
وليس السلك.



## شحن البطارية

قبل توصيل الشاحن الى الهاتف، يجب اولا تثبيت البطارية.



4. ستتوقف أشرطة شحن البطارية المتحركة عن الحركة بعد اكتمال عملية الشحن.

### تنبيه

- إذا كانت البطارية مفرغة بالكامل، فسيظهر عرض الشحن على شاشة LCD بعد حوالي دقيقة إلى دقيقة ونصف على توصيل شاحن السفر.
- لا تضغط بقوة على منفذ التوصيل، حيث قد يؤدي ذلك إلى تلف الهاتف أو جهاز الشحن.
- قم بإدخال شاحن البطارية عمودياً في مأخذ التيار بالحائط.
- إذا كنت تستخدم شاحن البطارية خارج بلدك، فاستخدم محول توصيل ملحق من أجل تهيئة صحيحة.
- لا تلمس بفك البطارية أو بطاقة SIM أثناء شحن الهاتف.

1. تأكد من شحن البطارية بالكامل قبل استخدام الهاتف.

2. مع الحفاظ عليالسهم في مواجهتك كما هو موضح في الشكل، ادفع القابض الخاص بمهبايء البطارية داخل المقبس الموجود في الجزء السفلي من الهاتف حتى سماع صوت نكة التثبيت.

3. صل الطرف الآخر من شاحن السفر بمقبس التيار الرئيسي. لا تستخدم سوى جهاز الشحن المرفق بعبوة الهاتف.

## 3. إدخال البطارية.

قم بإدخال البطارية في حجرتها بحيث تلتقي القطع المعدنية في وسط الهاتف. أنزل الجانب العلوي من البطارية حتى تستقر في مكانها. أغلق غطاء البطارية كما هو موضح.



### ملاحظة

◀ قد تتلف المنطقة الذهبية لبطاقة SIM بسهولة عن طريق الخدش. انتبه جيدًا لبطاقة SIM أثناء التعامل معها. اتبع الخطوات المرفقة مع بطاقة SIM.

### تحذير

- لا تقم باستبدال بطاقة SIM أو بإزالتها أثناء استخدام الهاتف أو عندما يكون قيد التشغيل فذلك قد يؤدي إلى فقدان البيانات أو إلحاق الضرر ببطاقة SIM.

## ملاحظة


◀ قد تؤدي إزالة البطارية من الهاتف وهو مشغّل إلى سوء عمله.

## إدخال بطاقة SIM والبطارية

تأكد من إيقاف تشغيل الهاتف. قبل نزع بطاقة SIM أو البطارية.


1. إزالة البطارية.

اضغط مع الاستمرار على مفتاح تحرير البطارية وحرك البطارية لأسفل وأنزع الغطاء عنها. اقلب الهاتف رأساً على عقب. كما هو موضح. ثم ارفع البطارية بأصبعك وأخرجها.

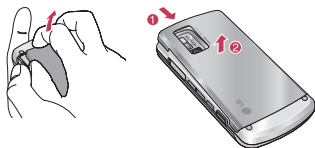

2. إدخال بطاقة SIM.

أدخل بطاقة SIM داخل الحامل المخصص لبطاقة SIM. تأكد من إدخال بطاقة SIM الذهبية الموجودة على البطاقة لأسفل. لإخراج بطاقة SIM، اضغط لأسفل برفق واسحب البطاقة في الاتجاه العكسي.

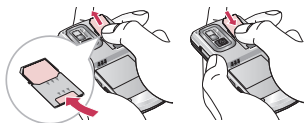

لإخراج بطاقة SIM

لإدخال بطاقة SIM

الوصف	الرمز
يشير إلى تنشيط الوضع العام.	
القائمة الخارجية في النمط.	
يشير إلى تنشيط الوضع الصامت.	
يشير إلى تنشيط وضع سماعات الرأس.	
يشير إلى إمكانية تحويل المكالمة.	
يشير إلى وصول الهاتف إلى WAP.	
يشير إلى استخدام GPRS.	
يشير إلى تنشيط قائمة بلوتوث.	
تظهر هذه الميزة أن خدمة EDGE متوفرة. يسمح لك الاتصال بخدمة EDGE بتحويل البيانات بسرعة 200 كيلو بايت/الثانية (بناءً على توفر الشبكة). تحقق من تغطية الشبكة وتوفر الخدمة مع المشغل.	E

\* قد تتغير جودة المحادثة حسب تغطية الشبكة. عندما تكون قوة الإشارة أقل من شرطتين. فقد يتقطع الصوت وتنتهي المكالمة ويكون الصوت رديئاً. يُرجى اعتبار أشرطة الشبكة مؤشراً على جودة المكالمات. عند عدم وجود أشرطة، يعني ذلك عدم وجود تغطية للشبكة: وفي هذه الحالة، لن يتسنى لك الوصول إلى الشبكة للحصول على أية خدمة الاتصال والرسائل وغيرها).

## معلومات العرض

تعرض الشاشة العديد من الرموز. وهي موضحة أدناه.

### الرموز التي تظهر على الشاشة

الوصف	الرمز
يشير إلى قوة إشارة الشبكة.*	
يشير إلى وجود مكالمات جارية.	
يشير إلى توفر خدمة GPRS.	
يوضح لك أنك تستخدم خدمة التجوال.	
يشير إلى ضبط وتشغيل المنبه.	
يشير إلى حالة شحن البطارية.	
يشير إلى استلام رسالة نصية.	
يشير إلى استلام رسالة صوتية.	
يشير إلى تعيين التنبيه بالاهتزاز.	

منطقة الرمز

منطقة النص والرسومات

إشارات مفتاحي الاختيار




قائمة

جهات الاتصال

الوصف	الرمز
يعرض مختلف الرموز.	السطر الأول
يعرض الرسائل والإرشادات وأية معلومات تقوم بإدخالها. مثل الرقم المطلوب الاتصال به.	الأسطر الوسطى
يعرض الوظائف المخصصة في الوقت الحالي لمفتاحي الاختيار.	السطر الأخير

## منظر خلفي

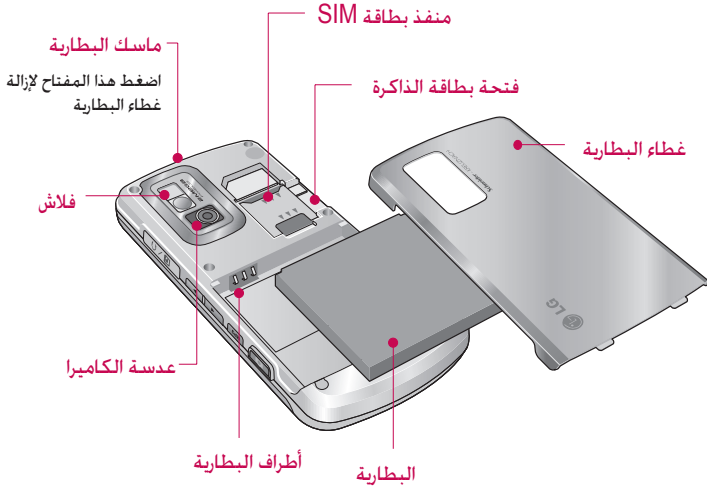

منفذ توصيل جهاز الشحن/ الكابل وسماعة الأذن

الفتحات الخاصة  
بشريط حمل  
الهاتف

### ملاحظة

◀ يرجى التأكد من تشغيل الهاتف وأنه في وضع السكون قبل توصيل كابل USB.

### المفاتيح الجانبية

- ◀ في وضع الانتظار (مفتوح): مستوى صوت نغمة المفاتيح
- ◀ في وضع الانتظار (مغلق): ضغط قصير - تضيء شاشة LCD.
- ◀ أثناء مكالمة: مستوى صوت سماعة الأذن

### ملاحظة


◀ لحماية السمع عند فتح الغطاء فان مستوى الصوت هو المستوى الثالث.

### مفتاح MP3

لتنشيط مشغل MP3 مباشرةً.

### مفتاح الكاميرا الجانبي

ضغط طويل- تنشيط كاميرا الصور

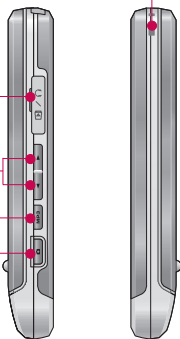

## مفتاح الاختيار

تؤدي هذه المفاتيح الوظيفية الموضحة بالجزء السفلي من الشاشة.

## مفتاح الإرسال

- ▶ الاتصال برقم هاتف والرد على المكالمات.
- ▶ في وضع الانتظار: يعرض آخر المكالمات الصادرة والمستلمة و التي لم يتم الرد عليها.

## مفتاح المسح

- ▶ حذف حرف واحد مع كل ضغطة. اضغط باستمرار المفاتيح لمسح كافة الإدخالات. استخدم هذا المفاتيح للرجوع إلى شاشة سابقة.

## مفتاح الإنهاء

- ▶ التشغيل/إيقاف التشغيل (الضغط باستمرار)
- ▶ إنهاء المكالمات أو رفضها.



# مميزات KE970

## أجزاء الهاتف

## أجزاء الهاتف



## توجيهات من أجل الاستخدام الآمن والفعال

- ◀ لا تستخدم سوى بطاريات وشاحن LG فقط. لقد تم تصميم شاحن LG ليزيد من عمر البطارية.
- ◀ لا تقم بفك حزمة البطارية أو قصر دوائرها.
- ◀ حافظ على نظافة الوصلات المعدنية الخاصة بالبطارية.
- ◀ قم باستبدال البطارية عند عدم توفيرها مستوى الأداء المطلوب. من الممكن إعادة شحن حزمة البطارية مئات المرات حتى بحين الوقت الذي يلزم استبدالها فيه.
- ◀ أعد شحن البطارية في حال عدم استخدامها لفترة زمنية طويلة لزيادة فترة القابلية للاستخدام.
- ◀ لا تعرض شاحن البطارية لضوء الشمس المباشر ولا تستخدمه في أماكن عالية الرطوبة، مثل دورات المياه.
- ◀ لا تترك البطارية في الأماكن الحارة أو الباردة، لأن ذلك قد يقلل من أدائها.
- ◀ هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- ◀ تخلص من البطاريات المستعملة وفق إرشادات الشركة المصنعة.

## الأماكن القابلة للاشتعال

- ◀ لا تستخدم الهاتف داخل محطات التزود بالوقود. ولا تستخدمه بالقرب من الوقود أو المواد الكيميائية.
- ◀ لا تقم بنقل أو تخزين الغازات أو السوائل القابلة للاشتعال أو المواد المتفجرة في مقصورة السيارة التي يوجد بها هاتفك الجوال والملحقات الخاصة به.

## على متن الطائرة

- ◀ قد تتسبب الأجهزة اللاسلكية في حدوث تداخل (تشوش) في الطائرات.
- ◀ قم بإغلاق (إيقاف تشغيل) هاتفك الجوال قبل الصعود على متن الطائرة.
- ◀ لا تستخدمه وأنت على الطائرة بدون الحصول على موافقة طاقم الطائرة.

## الأطفال

- ◀ يحفظ الهاتف في مكان آمن بعيداً عن متناول الأطفال. لأنه يشتمل على أجزاء صغيرة قد تسبب خطر الإصابة بالاختناق في حال فكها.

## مكالمات الطوارئ

قد لا تتاح مكالمات الطوارئ في شبكات الهواتف الخلوية. لذلك، لا يجب أبداً أن تعتمد فقط على الهاتف لإجراء مكالمات الطوارئ. عليك مراجعة ذلك مع مزود الخدمة المحلي لديك.

## معلومات عن البطارية والعناية بها

- ◀ لا يلزمك إفراغ شحنة البطارية بالكامل قبل إعادة الشحن. فبخلاف بقية أنظمة البطاريات الأخرى، لا يوجد أي تأثير للذاكرة من شأنه أن يضعف من أداء البطارية.

## توجيهات من أجل الاستخدام الآمن والفعال

### تجنب الضرر لاذنك

يمكن ان يحدث الضرر لاذنك إذا تعرضت إلى الصوت العالي لفترات طويلة من الوقت. لذا نوصي بأن لاتشغل او تطفئ الهاتف بالقرب من أذنك. أيضا نوصي بأن يوضع حجم صوت الموسيقى والمكالمة في مستوى معقول

### مناطق تفجير الألغام

لا تستخدم الهاتف أثناء القيام بعمليات التفجير. انتبه للحدود المسموح بها. وقم باتباع أي لوائح أو قوانين.

◀ قد تؤثر طاقة التردد اللاسلكي على بعض الأنظمة الإلكترونية في سيارتك. كمجسم الصوت (الاستريو) وتجهيزات الأمان مثلاً.

◀ إذا كانت سيارتك مزودة بوسائد هوائية، فلا تقم مسارها بتجهيزات لاسلكية مثبتة أو محمولة. فمن الممكن أن يتسبب هذا في التعرض لإصابات خطيرة نتيجة.

إذا كنت تستمع إلى الموسيقى وانت في خارج هنا وهناك، رجاء تأكد بأن حجم الصوت في مستوى معقول لكي تدرک ما يدور حولك. خصوصا عندما تحاول عبور الشارع.

- ◀ لا تنقر على الشاشة بأداة حادة. وإلا فقد يتسبب ذلك في تلف الهاتف.
- ◀ لا تعرض الهاتف للسوائل أو الرطوبة.
- ◀ إستعمل ملحقات. مثل سماعات الرأس وسماعات الاذن بحذر. تأكد من ادخال الكابلات بسلامة ولا تقوم بلمس هوائي التلفون بدون ضرورة
- ◀ استخدم الملحقات مثل السماعة بكل حرص.

## الأجهزة الإلكترونية

- ◀ جميع الهواتف الجواله قد تتعرض للتداخل (التنشوش) مما قد يؤثر في الأداء.
- ◀ لا تستخدم هاتفك الجوال بالقرب من الأجهزة الطبية دون الحصول على موافقة بذلك. تجنب وضع الهاتف فوق جهاز تنظيم ضربات القلب. كوضعه في الجيب العلوي مثلاً.

- ◀ قد تؤدي الهواتف الجواله إلى تعرض بعض الوسائل السمعية المساعدة للتنشوش.
- ◀ قد يؤثر التداخل البسيط على أجهزة التلفاز والمذياع والكمبيوتر.

## السلامة على طريق القيادة

- ◀ اطلع على القوانين واللوائح الخاصة باستخدام الهواتف الجواله في الأماكن التي تقود فيها.
- ◀ لا تستخدم الهواتف المحمولة يدويًا أثناء قيادة السيارة.
- ◀ اعط القيادة انتباهك الكامل.
- ◀ استعمل طقم الاستخدام غير اليدوي (تحرير اليدين). إذا كان ذلك متوافراً.
- ◀ توقف على جانب الطريق وقم بإيقاف السيارة قبل إجراء مكالمه أو الرد عليها وذلك إذا ما استدعت ظروف القيادة ذلك.

# توجيهات من أجل الاستخدام الآمن والفعال

- ◀ أبدا لا تضع هاتفك في فرن المايكرويف لأن ذلك سيؤدي الى انفجار البطارية
- ◀ تجنب سقوط الوحدة.
- ◀ لا تعرض هذه الوحدة للاهتزازات الميكانيكية أو الصدمات.
- ◀ قد تتعرض الطبقة الخارجية للهاتف للتلف إذا تم كسوتها بغطاء ما أو بغطاء مصنوع من الفيلين.
- ◀ استخدم قطعة قماش جافة لتنظيف سطح الوحدة الخارجي. (لا تستخدم المواد المذيبة مثل البنزين أو التتر(مخفف الطلاء) أو الكحول).
- ◀ لا تعرض هذه الوحدة للأدخنة أو الأتربة بشكل مفرط.
- ◀ لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر المواصلات، فمن الممكن أن يؤثر على المعلومات الموجودة على الأشرطة الممغنطة.

## العناية بالهاتف وصيانتته

### تحذير!

لا نستخدم سوى البطاريات والشاحن والملحقات المعتمدة للاستخدام مع موديل هذا الهاتف فقط. قد يؤدي استخدام أي أنواع أخرى غير المعتمدة إلى إبطال أي تصديق أو ضمان ينطبق على الهاتف. وقد يشكل ذلك خطرا.

- ◀ لا نغم بفك أجزاء هذه الوحدة. عندما يصبح من الضروري القيام بأعمال الإصلاح، عليك الذهاب إلى أحد فنيي الخدمة المؤهلين لذلك.
- ◀ ابتعد عن الأجهزة الكهربائية مثل أجهزة التلفزيون أو الراديو أو الكمبيوتر.
- ◀ يجب الحفاظ على الوحدة بعيداً عن مصادر الحرارة مثل أجهزة التدفئة أو أفران الطبخ.

# توجيهات من أجل الاستخدام الآمن والفعال

مستويات SAR (معدل الامتصاص النوعي) لموديلات هاتف LG المختلفة. إلا أن جميعها مصممة لنفي بالتوجيهات المتعلقة بالتعرض للموجات اللاسلكية.

◀ الحد الموصى به لمعدل الامتصاص النوعي SAR من قبل اللجنة الدولية للحماية من الإشعاع غير الأيونى (ICNIPR) يبلغ معدله 2 وات/كيلو جرام فوق عشرة (10) جرامات من النسيج البشري.

◀ الحد الأعلى لقيمته معامل الامتصاص النوعي SAR لهذا الهاتف الذي تم فحصه من قبل DSAY4 للاستخدام على الأذن هو 0.443 داخل (صندوق ستانليس ) او 0.417 داخل (صندوق المنيوم) واط/كغم (10غم) وفي حاله اهتراء الهاتف يكون 0.245 داخل (صندوق ستانليس ) او 0.483 داخل (صندوق المنيوم) واط/كغم (10غم).

## التعرض لطاقة موجات التردد اللاسلكي

معلومات حول التعرض لموجات الراديو (اللاسلكية) ومعدل الامتصاص النوعي(SAR)

لقد تم تصميم موديل الهاتف الجوال KE970 بحيث يتوافق مع شروط لسلامة السارية والخاصة بالتعرض للموجات اللاسلكية. وتعتمد هذه الشروط على التوجيهات العلمية التي تتضمن احتياطات السلامة التي تهدف إلى تأمين سلامة جميع الأشخاص بغض النظر عن أعمارهم أو مستوى صحتهم.

◀ وتستخدم توجيهات التعرض للموجات اللاسلكية وحدة قياس تعرف باسم (معدل الامتصاص النوعي) أو SAR. يتم إجراء الاختبارات على SAR (معدل الامتصاص النوعي) باستخدام أسلوب معياري مع إرسال الهاتف عند أعلى مستويات الطاقة المعتمدة في جميع حزم التردد المستخدمة

◀ على الرغم من إمكانية وجود اختلافات بين

## تحذير

- يتعين إيقاف تشغيل الهاتف في كل الأحوال على متن الطائرات.
- لا تحمل الهاتف بيدك أثناء قيادة السيارة.
- لا تستخدم الهاتف بالقرب من محطات التزود بالوقود أو المصانع الكيماوية أو في المناطق التي تجري فيها عمليات التفجير.
- لسلامتك، استخدم فقط البطاريات والشواحن الأصلية المحددة.
- لا تمسك الهاتف بيدين مبتلتين أثناء شحنه. فقد يتسبب ذلك في التعرض لصدمة كهربية أو إحداث تلف كبير بالهاتف.
- احتفظ بالهاتف في مكان آمن بعيداً عن الأطفال. حيث يحتوي الجهاز على أجزاء دقيقة قد يؤدي فصلها إلى التعرض لخطر الاختناق.

## تنبيه

- أوقف تشغيل الهاتف في أية مناطق تشترط فيها قوانين خاصة ذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات وإلا فقد يؤثر ذلك على المعدات الطبية التي تتسم بالحساسية.
- قد لا تتيح كافة الشبكات الخلوية إجراء مكالمات الطوارئ، وبالتالي ينبغي ألا تعتمد مطلقاً على الهاتف فقط لإجراء مثل هذه المكالمات.
- استخدم فقط الملحقات الأصلية لتجنب تلف الهاتف.
- قد تسبب كافة أجهزة البث اللاسلكي حدوث تشويش على الأجهزة الإلكترونية القريبة منها. فقد يؤثر التشويش الطفيف على أجهزة التليفزيون والراديو وأجهزة الكمبيوتر وما إلى ذلك.
- يجب التخلص من البطاريات وفقاً للتشريع ذي الصلة.
- لا تفك أجزاء الهاتف أو البطارية.
- هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.

## مقدمة

نهنتك على شراء الهاتف الجوال KE970 الذي يتميز بالأداء المتقدم وصغر الحجم والمصمم للعمل مع أحدث ما توصلت إليه تكنولوجيا الاتصالات.

يحتوي دليل المستخدم هذا على معلومات هامة حول استخدام وتشغيل هذا الهاتف. الرجاء قراءة جميع المعلومات الواردة بكل دقة من أجل الحصول على أفضل مستويات الأداء وتجنب إلحاق التلف بالهاتف أو سوء استعماله. إجراء أي نوع من التغييرات أو التعديلات غير المسموح بها في دليل المستخدم هذا قد يؤدي إلى إلغاء الضمان الخاص بهذا الهاتف.



102 اعدادات الحماية

طلب رمز PIN

103 قفل الهاتف

حظر المكالمات

104 رقم اتصال ثابت

تغيير الرموز

105 وضع الطائرة

توفير الطاقة

إعادة ضبط المصنع

حالة الذاكرة

102 الملحقات

107 بيانات فنية

92 العرض

خلفية الشاشة

الأضواء الخلفية

93 السطوع

اختصارات الشاشة الرئيسية

نمط القائمة

نمط الاتصال

نص وضع الاستعداد

اسم الشبكة

94 التوصيل

بلوتوث

الشبكة

96 وصلة USB

98 اعدادات المكالمات

تحويل المكالمات

100 وضع الرد

101 إرسال رقمي

إنتظار المكالمات

مذكر الدقائق

102 إعادة الاتصال تلقائياً

إرسال DTMF

83 أدوات

تعقب الهاتف المحمول

المفقود

ساعة المنبه

التقويم

89 الحاسبة

مذكرة

90 ساعة الإيقاف

محول الوحدات

التوقيت العالمي

91 قائمة SIM

92 الاعدادات

التاريخ والوقت

ضبط التاريخ

صيغة التاريخ

ضبط الوقت

صيغة الوقت

تحديث تلقائي

اللغة

72 جهات الاتصال

بحث

73 جهة اتصال جديدة

الاتصال السريع

74 المجموعات

نسخ الكل

حذف الكل

75 الإعدادات

معلومات

76 اشيائي

الصور

77 أصوات

78 مقاطع فيديو

79 مستندات

أخرى

80 الألعاب والتطبيقات

الذاكرة الخارجية

64 المرسله

استمع إلى رسالة صوتية

خدمة المعلومات

65 قراءة القائمة

الموضوعات

نماذج

النص

66 الوسائط المتعددة

67 الإعدادات

رسالة نصية

68 رسالة وسائط متعددة

69 بريد إلكتروني

70 رقم البريد الصوتي

71 رسائل الدفع

خدمة المعلومات

53 السجل

كل المكالمات

مكالمات لم يرد عليها

مكالمات صادرة

54 مكالمات واردة

مدة المكالمات

55 عرض تكلفة المكالمات

معلومات البيانات

56 الرسائل

رسالة جديدة

النص

57 الوسائط المتعددة

59 بريد إلكتروني

61 صندوق الوارد

62 صندوق البريد اللائكتروني

63 مسودات

صندوق الصادر

41	المتصفح	24	الوظائف العامة	5	مقدمة
42	الصفحة الرئيسية		إجراء مكالمة	6	سلامتك
	إشارات مرجعية	25	الرد على مكالمة		توجيهات من أجل
43	الذهاب الى عنوان الموقع	26	إدخال نص		الاستخدام الآمن والفعال
	محفوظات		تحديد الوظائف والخيارات	7	
	الإعدادات		31		
	أوضاع الشبكة		قائمة خلال المكالمة	13	مميزات KE970
44	الذاكرة المؤقتة		32		أجزاء الهاتف
	ملفات تعريف الارتباط		أثناء المكالمة	17	معلومات العرض
	شهادات الأمان		33		الرموز التي تظهر على الشاشة
	معلومات		المكالمات الجماعية		
				19	البداية
45	الوسائط		36		إدخال بطاقة SIM والبطارية
	مشغل MP3		39		شحن البطارية
49	الكاميرا		تنشيط	21	فصل الشاحن
51	كاميرا الفيديو		ضبط خاص	22	إدخال بطاقة الذاكرة
52	مسجل الصوت			23	إزالة بطاقة الذاكرة

# دليل المستخدم KE970

عربي

