



繁體中文
簡體中文
ENGLISH

KF700

KF700 使用手冊


LG ELECTRONICS INC.

MMBB0279332 (1.1) G

CE 0168

www.lgmobile.com

Bluetooth QD ID B013790

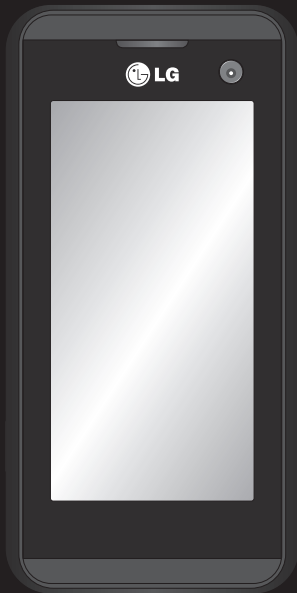

此手冊中的部份內容可能會因
手機軟件或服務供應商而有所
不同。

KF700 使用手冊

恭喜您買了 LG 先進輕巧的 KF700 手機，本手機專為利用最新的數碼流動通訊科技而設計。



妥善處理您的舊電器

- 1** 若產品資料中出現有交叉的推輪垃圾桶符號，即表示該產品受 European Directive 2002/96/EC（歐洲規程 2002/96/EC）之管制。
- 2** 所有電器及電子產品應送往政府與有關地區當局所指定的收集地點，並與都市廢物源流分開進行處理。
- 3** 妥善處理您的舊電器，會有助防止它們對環境及人體健康所造成的潛在不良影響。
- 4** 有關舊電器處理方式的詳情，請聯絡您的市政當局、廢物處理服務或購買產品的商店。

設定 01

您的備用屏幕 02

基本功能 03

自製功能 04

網絡功能 05

管理功能 06

設定 07

配件 08

內容

設定

了解您的手機	8
手機展開	9
安裝智能咭和電池	10
記憶咭	12
功能表總覽	13

您的備用屏幕

觸控屏幕提示	14
快捷鍵	15
狀態列	16

基本功能

通話	18
撥打電話或視像通話	18
透過通訊錄撥打電話	18
接聽來電和拒接來電	18
通話中選項	19
調節通話音量	19
快速撥號	20
檢視通話記錄	20
使用來電轉接	20
使用通話限制	21
變更一般通話設定	21
變更視像通話設定	22
通訊錄	23
搜尋聯絡人	23
新增聯絡人	23
聯絡人選項	23

建立群組	24
變更通訊錄設定	24
檢視資訊	25
訊息	26
發送訊息	26
輸入文字	26
T9模式	27
Abc模式	27
設定電子郵件	27
擷取電子郵件	28
透過新帳戶發送電子郵件	28
變更電子郵件設定	29
訊息資料夾	29
管理訊息	30
使用範本	30
使用情感圖示	30
變更文字訊息設定	31
變更多媒體訊息設定	31
變更其他設定	32

自製功能

相機	33
快速拍照	33
拍攝照片後	33
了解取景器	34
使用補光燈	35
調整對比度	35
使用進階設定	35

變更圖像大小.....	36	色彩轉換.....	48
選擇色調.....	37	多媒體.....	49
使用內相機.....	37	我的圖像.....	49
檢視已儲存照片.....	37	我的圖像選項功能表.....	49
檢視照片的詳情.....	38	發送照片.....	49
視像攝錄機.....	39	使用圖像.....	50
拍攝快速影片.....	39	管理圖像.....	50
錄製影片後.....	39	刪除圖像.....	50
了解取景器.....	40	移動或複製圖像.....	50
調整對比度.....	41	標記或取消標記圖像.....	51
使用進階設定.....	41	建立投影片播放.....	51
變更圖像大小.....	42	檢查記憶體狀態.....	51
選擇色調.....	42	我的聲音.....	52
使用內視像攝錄機.....	42	使用聲音.....	52
觀看已儲存影片.....	43	我的影片.....	52
照片及影片.....	44	觀看影片.....	52
檢視照片及影片.....	44	在暫停影片時使用選項.....	52
檢視影片時調節音量.....	44	發送影片片段.....	52
從影片中擷取圖像.....	44	將影片片段用作鈴聲.....	52
檢視影片或照片的詳情.....	44	使用影片選項功能表.....	53
從圖庫發送照片或影片.....	45	我的遊戲及應用程式.....	53
以投影片播放形式檢視照片.....	45	下載遊戲.....	53
將照片設定為待機圖片.....	46	玩遊戲.....	53
編輯照片.....	46	使用遊戲選項功能表.....	53
在照片中加入文字.....	47	Flash 內容.....	53
在照片中加入效果.....	47	檢視 SWF 檔案.....	54
強化照片色彩.....	47	檢視 SWF 檔案時使用選項.....	54

內容

文件	54	新增項目至待辦事項	60
傳送檔案到手機	54	發送待辦事項項目	60
檢視檔案	54	使用日期搜尋器	61
其他	55	設定鬧鐘	61
播放歌曲	55	新增備忘錄	61
建立播放列表	55	語音備忘錄	62
編輯播放列表	56	錄製聲音或語音	62
刪除播放列表	56	發送錄音	62
搜尋電台	56	使用計算機	63
重設頻道	57	新增城市至世界時鐘	63
收聽電台	57	轉換單位	63
		使用秒錶	63
網絡功能		電腦同步	64
存取網絡	58	在電腦上安裝 LG PC Suite	64
新增並存取書籤	58	連接手機和電腦	64
儲存網頁	58	備份和還原手機資訊	64
存取已儲存的網頁	58	檢視電腦上的手機檔案	64
檢視瀏覽器記錄	59	同步處理通訊錄	65
變更網頁瀏覽器設定	59	同步訊息	65
變更網頁瀏覽器設定	59	將手機用作大容量儲存裝置	65
管理功能		設定	
記事簿	60	變更屏幕設定	66
新增事件至日曆	60	個人化情景模式	66
變更預設日曆檢視	60	變更電話設定	66
		變更連接設定	67
		使用記憶體管理	67

使用藍芽發送和接收檔案.....	68
同其他藍芽裝置配對.....	69
使用藍芽耳機.....	69
配件	70
網絡服務	71
技術資料	71
指引	
安全及有效使用的指引.....	74

了解您的手機

充電器、USB線、免提插孔

提示：如要連接 USB 線，請先開機並確保連線。

快捷鍵

使用快捷撥號存取快捷功能表。您可以在**快捷撥號設定**中更改功能表次序。

鎖定/解鎖按鍵

內相機鏡頭

關閉/電源鍵



結束或拒接通話。
開啓/關閉手機。
按一下可返回備用屏幕。

清除鍵

每按一次可以刪除一個字母。
使用此鍵回到前一個畫面。

發送鍵

撥打電話號碼及接聽來電。

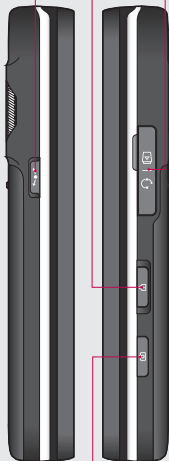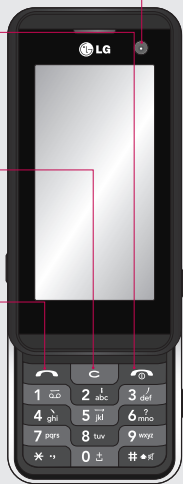

警告：手機置於口袋中時，若將較重物體置於手機上，或坐在手機上會損壞手機的 LCD 和觸控屏幕功能。

拍攝按鍵

手機展開

輪盤

在相機或視像攝錄機下進行圖像縮放操作。亦可捲動功能表。

提示：聽音樂、玩遊戲和通話時，您均可調節音量。

警告：將金屬觸片置於磁性物體附近會導致輪盤鍵出現故障。



01

02

03

04

05

06

07

08

安裝智能咭和電池




1 移除電池蓋

向下滑動電池蓋並取下。


警告：請勿使用指甲取出電池。

警告：手機開機時，不要取下電池，因為這樣會損壞手機。

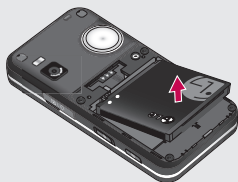

2 取出電池。


抬起電池的底邊緣，從電池儲藏格中小心翼翼地取下電池。

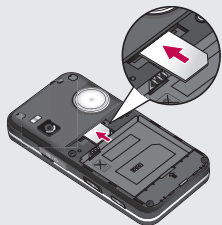

3 安裝智能咭

將智能咭滑入智能咭插槽。請確保智能咭上的金屬接觸區面向下方。要取下智能咭，請向相反方向輕輕拉出。

安裝智能咭和電池

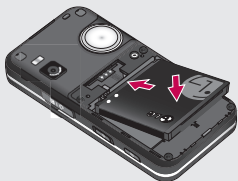


4 安裝電池

先將電池頂部頂入電池格上方邊緣。請確保電池觸點對準手機觸點。將電池的底部壓入定位。



5 更換電池蓋

向手機頂部滑入電池蓋，直到卡緊為止。

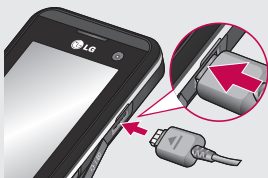

6 手機充電

拉開 KF700 側面的充電器插座蓋。插入充電器並插入電源電線插座。為您的 KF700 手機充電，直至屏幕上顯示「電池電量已滿」訊息。

01

02

03

04

05

06

07

08

記憶咭

安裝記憶咭

使用記憶咭，擴展手機可使用的記憶體空間。KF700 手機可支援高達 4GB 的記憶咭。



- 1 將記憶咭滑入頂部插槽，直到卡緊為止。確保金屬接觸區面向上方。






- 2 然後蓋上記憶咭插槽的保護蓋。


格式化記憶咭

若記憶體已格式化，則即可開始使用。若記憶咭尚未格式化，則需要執行此操作。

- 1 從備用屏幕 點按  並選擇 .
- 2 選擇**手機設定**，選擇**記憶體管理**並選擇**外置記憶體**。
- 3 點按**格式化**並輸入密碼，預設情況下，密碼設為 0000。記憶咭將完成格式化，可隨時開始使用。



- 4 若要檢視 KF700 上新格式化資料夾，請點按  並選擇 。選擇  **我的檔案**。您將看到七個資料夾：我的圖像、我的聲音、我的影片、我的遊戲及應用程式、Flash內容、文件和其他。

有關使用記憶卡的更多詳細資料，請參閱第 67 頁。


 **警告：**格式化記憶卡時，所有的內容均被刪除。如果擔心丟失記憶卡中的數據，請先進行備份。

傳輸通訊錄

將通訊錄從智能咭傳輸到手機：

- 1 從備用屏幕，點按 ，並選擇 .
- 2 選擇通訊錄並選擇**設定**，然後選擇**複製**或**移動**。
- 3 選擇**手機至智能咭** 然後**全部**或**依次序**。
- 4 點按確認以確認。

功能表總覽

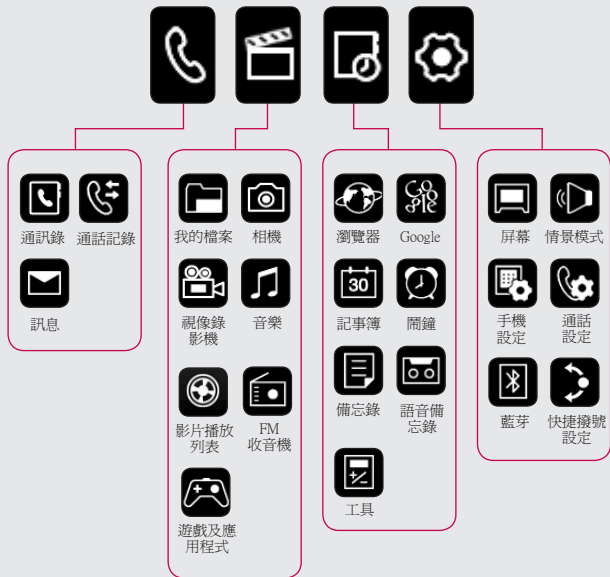

01

02

03

04

05

06

07

08

您的備用屏幕

沒有使用 KF700 時，它便會返回備用屏幕。您可從此處存取功能表選項，快速撥打電話並更改您的情景模式及很多其他內容。

觸控屏幕提示

備用屏幕亦是熟悉互動屏的好位置。

要選擇某個項目，請準確點按觸控屏上的圖示。若能識別出您所點按的選項，KF700 便會輕微震動。

- 點按互動屏幕時無需重按，只需要輕輕按中即可。
- 使用指尖點按所需的選項。小心不要按附近的任何其他鍵。
- 屏幕燈光熄滅後，按手機右側的鎖定/解鎖按鍵，可還原至備用屏幕。
- 不要用護套或護蓋蓋住手機，因為一旦互動屏幕上蓋有任何東西，它將無法正常運作。



▲ 觸控屏

快捷鍵

快捷鍵提供簡單、單觸式操作存取最常用的功能。



點按以開啓觸控屏鍵盤。您無須滑開手機便可撥出電話。要撥打視像通話，請在輸入號碼後按**視像通話標籤**。



點按以開啓您的通訊錄。通訊錄將顯示為字母列表。您亦可以新增通訊錄或編輯現有通訊錄。詳情請參閱第 23 頁。



點按以建立和發送文字訊息。詳情請參閱第 26 頁。



點按以開啓完整功能表，此功能表分為四個子功能表。點按各子功能表垂直標籤，檢視進一步選項。

對客戶的忠告

為得到更好的天線接收效果，LG 建議您按照以下圖示握住手機。



使用藍芽連線通話時，請勿用手蓋住天線區域。這樣可能會降低通話質素。

您的備用屏幕

狀態列

狀態列透過使用多種圖示，指明如訊號強度、新訊息和電池電量等情況，亦告訴您藍芽或 GPRS 是否已啟動。

下表說明可能在狀態列中看到的圖示的含義。



圖示	說明
	多項工作列表
	網絡訊號強度（列數會有變化）
	無網絡訊號
	剩餘電量
	電池無電
	新文字訊息
	新語音訊息
	訊息收件匣已滿
	發送訊息失敗
	鬧鐘已設定


圖示	說明
	正在使用標準情景模式
	正在使用戶外情景模式
	正在使用靜音情景模式
	正在使用耳機情景模式
	呼叫已轉接
	可使用 GPRS
	正在使用 EDGE
	漫遊
	已選擇飛航模式
	已啓用藍芽
	可使用 HSDPA
	可使用 3G


從狀態列變更狀態

點按狀態列中表示目前使用設定檔的圖示將會開啓狀態總結。將顯示目前時間、網絡、服務 ID、電池、手機記憶體、外置記憶體、情景模式、MP3、飛航模式及藍芽狀態。您可以設定情景模式、播放 MP3 及開啓 / 關閉飛航模式及藍芽。

使用多項工作功能




在您使用任何功能時，都可以找到多項工作  在屏幕上方。點按  以開啓「多項工作」功能表。您可從此處檢視已執行的所有應用程式並透過點按操作進行存取。

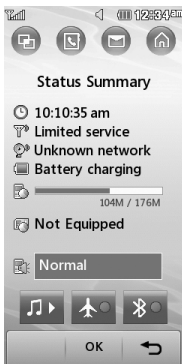
從任何應用程式，點按  並選擇功能表，以返回至功能表，而毋需結束或關閉應用程式。



通話

撥打電話或視像通話



- 1 滑開手機滑蓋。
- 2 使用鍵盤輸入號碼。
要刪除數字，請按 C 硬鍵。
- 3 點按**通話**或按  硬鍵以啟動通話。點按  以撥打視像通話。
- 4 結束通話，請按  硬鍵。


提示！ 滑蓋合上時撥出電話。點按  以開啓觸控屏鍵盤。輸入電話號碼後，按**通話**。

提示！ 若要在撥打國際電話時輸入「+」，請按住 0。


提示！ 按鎖定/解鎖按鈕，鎖定觸控屏幕，避免錯誤撥號。

透過通訊錄撥打電話

- 1 從備用屏幕，點按  以開啓通訊錄。
- 2 從清單中點按要呼叫的聯絡人，然後選擇要使用的電話號碼 (若存有多個記錄)。
- 3 您可以使用鍵盤輸入要通話聯絡人的首個字母。
- 4 點按撥打語音通話或按  硬鍵以啟動通話。

提示！ 當滑蓋合上時，點按  已開啓通訊錄。使用輪盤捲動或輸入您的聯絡人名字的首字母以跳至通訊錄的那個部分。


接聽來電和拒接來電

手機響鈴後，按  硬鍵接聽來電。按**解鎖**及**靜音**來靜音鈴聲。如果在開會時忘記將情景模式變更為「靜音」，此功能將十分有用。

提示！ 在滑蓋合上的時候接聽來電，點按**解鎖**並選擇**接受**。

提示！ 在滑蓋合上的時候拒接來電，點按**解鎖**並選擇**靜音**、然後選擇**拒絕**。

通話中選項

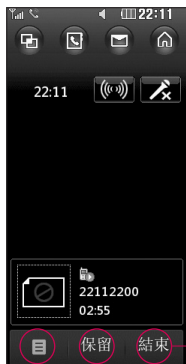

靜音 - 點按以關閉麥克風，這樣，通話對方就聽不到您的聲音。

喇叭 - 點按以開啓喇叭。

結束 - 點按以結束通話。

保留 - 點按以保留來電者。點按恢復以繼續通話。

選項 - 從下一級通話選項清單中進行選擇，包括**轉至通訊錄**和**轉至訊息**，這樣您就可以在通話中查看訊息並新增聯絡人。您也可點按**結束通話**，從此處結束通話。

調節通話音量

如要在通話中調節音量，順時針轉動手機背面的滾輪可提高音量，逆時針轉動則可降低音量。

01

02

03

04

05

06



07


08


通話功能

快速撥號

您可為常撥聯絡人指定一個快速撥號號碼。


- 1 點按 ，選擇 。
- 2 選擇通訊錄並點按快速撥號。
- 3 您的語音信箱已經設定至快速撥號 1。您無法變更。點按任何其他號碼，為其指定快速撥號聯絡人。
- 4 通訊錄將開啟。透過點按一下相應的電話號碼，選擇要將其指定給此號碼的聯絡人。

要撥打快速撥號號碼，滑開電話滑蓋並長按指定的號碼，直到聯絡人顯示在屏幕上。手機將自動撥出，而沒有必要按 。

提示！ 滑蓋關閉時，點按 。選擇您想要通話的聯絡人並按住他們的號碼。手機將自動撥出。

檢視通話記錄

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

如果您按  將顯示通話清單。屏幕上方有兩個箭頭，使您可以點按箭頭選擇通話記錄。

所有通話 - 檢視所有您撥出、已接及未接的通話清單。


已撥通話 - 檢視所有已撥出通話的清單。

已接來電 - 檢視所有已接聽來電的清單

未接來電 - 檢視所有未接來電的清單。


通話費用 - 檢視套用到已撥號碼的費用 (此服務視網絡而定，部份網絡商不支援此功能) 及所有通話的通話時間；已接和已撥。

數據用量 - 檢視所有接收和傳送的數據量 (以千字節表示)。

提示！ 從任何通話記錄點按  和刪除全部，刪除所有紀錄項目。

提示！ 點按任何單個通話記錄項目及檢視，檢視呼叫的日期、時間和長度。

使用來電轉接

- 1 點按 ，選擇  並選擇通話設定。
- 2 點按來電轉接並選擇語音通話或視像通話。

- 3 可選擇全部語音通話、線路繁忙時、無人接聽或無法接通時，然後點按**啓動**。
- 4 輸入轉駁號碼。
- 5 點按**轉駁**以啓用。

注意：轉駁電話需要收費。請聯絡網絡供應商，了解詳情。



提示！ 要關閉所有來電轉駁，請從**來電轉駁**功能表選擇**停用全部**。

使用通話限制

- 1 點按 ，選擇  再選擇**通話設定**。
- 2 點按**通話限制**並選擇**語音通話**或**視像通話**。
- 3 選擇以下五個選項的任何一個或所有：
 - 所有撥出的通話
 - 撥出的國際通話
 - 撥打本地以外的國際通話
 - 所有來電
 - 國際漫遊時來電
- 4 輸入通話限制密碼。請向您的網絡商查詢這項服務。

提示！ 從**通話設定**中選擇固定撥號號碼，開啓並編譯可從此手機呼叫的號碼清單。您需要從您的網絡商處得到一個 PIN2 碼。如果您建立了固定撥號清單，只有清單上的號碼可以從您的手機上撥出。

變更一般通話設定

- 1 點按 ，選擇  並選擇**通話設定**。
- 2 點按**通用設定**。您可從此處修改以下選項的設定：
 - 來電拒接** - 選擇**開啓**或**關閉**並選擇拒接所有通話、通訊錄、群組、無名稱記錄(不在通訊錄中的號碼)或無來電號碼。來電者 ID 的來電。
 - 發送我的號碼** - 選擇撥出通話時，是否顯示您的號碼。
 - 自動重撥** - 選擇**開啓**或**關閉**。
 - 接聽模式** - 選擇如果接聽來電：**按發送鍵**、**開啓滑蓋**或**按任何鍵**。
 - 分鐘提示** - 選擇**開啓**後，您便可在通話時聽到分鐘提示音。
 - 藍芽接聽模式** - 選擇免提，可使用藍芽耳機接聽來電，或在使用藍芽耳機時，選擇**手機**，便可透過按手機上的按鍵來接聽來電。

01

02

03

04

05

06

07

08

通話功能



儲存新號碼 - 選擇是或否。

滑蓋關閉設定 - 選擇通話中關閉滑蓋時的通話模式。選擇**結束通話**或**繼續通話**。

選擇線路 - 選擇線路1或線路2。

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

變更視像通話設定


- 1 點按 ，選擇  再選擇**通話設定**。
- 2 點按**視像通話設定**。
- 3 選擇視像通話設定。確定是否使用**私人圖像**並選擇**私人圖像**，並開啓**鏡像功能**（這樣，您便可在屏幕上看到自己）。

通訊錄




搜尋聯絡人

有兩種方法可搜尋聯絡人：




從備用屏幕

從備用屏幕，點按  以開啓通訊錄。

從主功能表

- 1 點按  並點  再選擇**通訊錄**。然後點按搜尋。
- 2 從清單中點按要呼叫的聯絡人，然後選擇要使用的電話號碼 (若存有多個記錄)。
- 3 您可以使用鍵盤輸入要通話聯絡人的首個字母以跳至那個部分。
- 4 點按**通話**或按  硬鍵以啓動通話。

新增聯絡人

- 1 點按  並點  再選擇**通訊錄**。
- 2 點按**新增**。
- 3 選擇是否將聯絡人儲存到**手機**或**智能咭**。
- 4 輸入新聯絡人的名字和姓氏。您不必同時輸入名字和姓氏，但必須輸入其中一個。
- 5 輸入號碼並點按  且您可以輸入更多號碼。
例如：您可以輸入不同的號碼，用於他們的手機、住宅、公司、傳呼機及傳真號碼。每輸入一個號碼後點按**儲存**。


- 6 您可以新增最多 2 個電子郵件地址。
- 7 將聯絡人指定給群組。您可選擇沒有**群組、家庭、朋友、同事、學校**或**重要人士**。
- 8 您也可以新增圖像、鈴聲、主頁、住宅地址、公司名稱、職位、公司地址以及備忘錄。
- 9 點按**儲存**可儲存聯絡人。

提示！ 您可為聯絡人建立自訂群組，請參閱第 24 頁的**建立群組**。

提示！ 滑蓋關閉時，點按  並輸入聯絡人號碼。點按  並選擇**儲存號碼及新增通訊錄**。

聯絡人選項

您可在檢視聯絡人時進行多項操作。以下是存取和使用功能表的方式：

- 1 開啓您要使用的聯絡人。請參閱第**23 頁**上的**搜尋聯絡人**。
- 2 按下  以開啓選項清單。在此處您可以：
編輯 - 更改聯絡人的詳細資料。
發送訊息 - 發送訊息給聯絡人。若該聯絡人有電郵地址，請選擇要發送電子郵件還是**文字訊息/多媒體訊息**。有關發送訊息的詳情，請參閱第 26 頁。

01

02

03

04

05

06

07

08

通訊錄




發送名片 - 以名片方式向他人發送聯絡人的詳細資料。選擇以**文字訊息**、**多媒體訊息**發送或使用**電子郵件**或透過**藍芽**發送。

撥打視像電話 - 向聯絡人撥打視像通話。


儲存到手機 - 選擇要複製或移動至智能咭還是手機記憶。

刪除 - 刪除聯絡人。點按是以確定。

建立群組

- 1 從備用屏幕中點按  標籤  並選擇**通訊錄**。
- 2 選擇**群組**並點按 。
- 3 選擇**新增群組**。
- 4 為您的新群組輸入名稱。
- 5 點按**儲存**。



注意：若要刪除某群組，指定給該群組的聯絡人將不會遺失。它們仍會保留在您的通訊錄中。

提示！ 透過指示到現有群組並點按  以進行編輯。選擇將聯絡人成員新增群組，新增成員，群組鈴聲，重新命名。

變更通訊錄設定

您可對通訊錄設定進行調整，以便以您喜歡的方式使用。

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

- 1 從備用屏幕中點按  然後按 。選擇**通訊錄**並選擇**設定**。
- 2 您可從此處對以下設定進行調整：
通訊錄列表設定 - 選擇檢視儲存於您的**手機**及**智能咭**中的聯絡人，還是僅檢視儲存於**手機**或**智能咭**中的聯絡人。您亦可選擇是先顯示聯絡人的名字還是姓氏。
同步處理通訊錄 - 連接到您的伺服器以同步處理通訊錄。請參閱第 65 頁的**同步處理通訊錄**。
複製 - 在手機與**智能咭**之間進行通訊錄複製。您可選擇依次序進行或同時複製全部。若選擇依次序，您需要逐一選擇要複製的每個聯絡人。
移動 - 這和**複製**一樣，但聯絡人僅會儲存於您所移動至的位置，例如，如果您將一個聯絡人從**智能咭**移動至手機，它將從**智能咭**中刪除。


通過藍芽傳送所有通訊錄 - 使用藍芽將您所有的通訊錄發送至另一裝置或電腦。

備份通訊錄 - 請參閱第 64 頁上的**備份和還原手機資訊**。

還原通訊錄 - 請參閱第 64 頁上的**備份和還原手機資訊**。

清除通訊錄資料 - 刪除您所有的通訊錄。若確定要刪除整個通訊錄，請點按**是**。

檢視資訊

- 1 從備用屏幕中點按 ●● 標籤  並選擇**通訊錄**。
- 2 選擇**資訊**。
- 3 您可以從此處檢視您的**服務撥號號碼**、**本手機號碼**、**記憶體資訊**。〈**所剩記憶空間**〉及**我的名片**。


提示！ 若尚未為自己新增名片，您可選擇**新增**，並輸入要用於聯絡的所有詳細資料。點按**儲存**以完成操作。

訊息



訊息


KF700 手機將文字訊息、多媒體訊息和電子郵件集中在同一功能表中，使用起來方便簡單。


您可以透過以下兩種方法，進入訊息中心：

- 1 從備用屏幕點按 。
- 2 從備用屏幕點按 ，並按  且選擇訊息。

發送訊息

- 1 點按  並選擇 **建立新訊息**。
- 2 選擇 **訊息** 以發送文字訊息或多媒體訊息。或者，要發送電郵，請選擇 **電子郵件**。詳情請參閱第 29 頁。
- 3 將開啓新文字訊息或電子郵件。正常編寫您的訊息。
- 4 點按  並 **附加** 以新增圖像、影片、聲音或其他資訊，包括聯絡人詳細資料。
- 5 點按 **發送**。從清單中選擇一名聯絡人並按所選擇的號碼或輸入號碼。您可以選擇多個聯絡人。


 **警告**：您將按收件者每則文字訊息 160 字元計費。


 **警告**：若向文字訊息加插了圖像、影片或聲音，它將自動轉換為多媒體訊息，而您亦需為此支付相應費用。

輸入文字

有兩種方法輸入文字：T9 模式及 Abc 模式。


要在文字輸入方法之間切換，請點按位於屏幕頂部的對應圖示。

 **T9 模式** - 點按開啓 T9 模式並選擇 T9 abc、T9 Abc、T9ABC、123。再次點按關閉 T9 預測。

 **Abc 模式** - 選擇 abc、Abc、ABC、ABC 或 123。

若要輸入空格，請點按 **0**。

要刪除字元，請使用屏幕下方的 **C** 硬鍵。

若要輸入符號，請點按  或星字鍵。

T9 模式

T9 模式使用內置字典，識別根據點按按鍵順序寫入的單字。只需點按與要輸入字母關聯的數字按鍵，且只要輸入所有字母，字典便可識別要輸入的單字。例如，按 8、3、5、3、7、4、6、6、3 可得到「telephone」。如果您所按的按鍵有不止一種選項，屏幕中將會顯示清單。觸摸屏幕選擇您想要的詞語。

如果您想要的詞語沒有顯示，點按串法並選擇新增字詞至字典。使用 Abc 模式輸入單字，而且您的單字或名稱將新增到字典中。



Abc 模式

在 Abc 模式中，您必須重複點按按鍵，從按鍵所有的選項中選擇字母。例如，要寫入「hello」，請點按 **4** 兩次、**3** 兩次、**5** 三次、**5** 又三次，然後按 **6** 三次。

設定電子郵件

縱使出門在外，您亦可使用 KF700 上的電郵功能與其他人保持聯絡。設定 POP3 或 IMAP4 電子郵件帳戶簡單方便。

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

- 1 點按 ，然後選擇**設定**。
- 2 點按**電子郵件**，然後選擇**電子郵件帳戶**。
- 3 開啓  並點按**新增**。
- 4 然後您將進入電子郵件設定精靈。根據指示並按繼續進行。您需要以下詳細資料：
 - 標題** - 為此帳戶輸入一個名稱。
 - 我的名字** - 輸入您的名稱。
 - 使用者名稱** - 輸入帳戶的用戶名稱。
 - 密碼** - 輸入帳戶的密碼。
 - 電郵地址** - 輸入帳戶的電郵地址。
 - 回覆電郵地址** - 輸入「回覆」的電郵地址。
 - 外寄郵件伺服器** - 輸入帳戶的詳細資料。
 - 內送郵件伺服器** - 輸入帳戶的詳細資料。


訊息

最大接收大小 - 選擇您的電郵大小限制，上限為 1MB。

郵箱類型 - 輸入郵箱類型，即 POP3 或 IMAP4。

儲存到伺服器 - 選擇是否將您的電郵儲存到伺服器。對於 IMAP4 帳戶，副本將得以儲存。

儲存已發送的郵件到 - 選擇儲存 IMAP4 電郵的位置。對於 POP3 帳戶，副本將儲存到手機上。

存取點 - 選擇您的互聯網接入點。按  可使用預設的接入點。

自動接收 - 選擇是否要自動提取您的新電郵。

進階設定 - 選擇是否要使用進階設定。

SMTP 連接埠號碼 - 通常，此號碼為 25。

內送郵件伺服器連接埠 - 通常，對於 POP3 帳戶，此為 110；而對於 IMAP4 帳戶則為 143。

SMTP 驗證 - 選擇外寄郵件伺服器安全設定

SMTP 使用者名稱 - 輸入 SMTP 的使用者名稱。

SMTP 密碼 - 輸入 SMTP 的密碼。


APOP 安全登入 - 選擇是否為 POP3 帳戶啟用 APOP 安全登入。IMAP4 帳戶則始終設為關閉。

現在，您的帳戶經已完成設定，並會出現於電郵資料夾的帳戶清單當中。


擷取電子郵件

您可以自動或手動檢查您的帳戶中的新郵件。請參閱「變更電子郵件設定」，了解如何自動查收。

如要手動查收：

- 1 點按  及 **設定**，再按 **電子郵件**。
- 2 點按 **擷取時間** 並選擇一個時間間隔來開啓自動提取。

透過新帳戶發送電子郵件


- 1 點按  然後選擇 **建立新訊息**。
- 2 選擇 **電子郵件**，一封新電子郵件便會隨即開啓。
- 3 輸入收件者地址，然後編寫您的訊息。點按萬字夾圖示以附加圖像、影片、聲音或其他檔案類型。
- 4 點按 **發送**，您的電子郵件便會發出。

提示！ 您可將 Word、Excel、PowerPoint 及 PDF 檔案電郵給您的 KF700，以便在外出時亦可查看。

變更電子郵件設定

您可對電郵設定進行調整，以便以您喜歡的方式使用。在設定精靈中，您可能已經輸入了此資訊的一部分。

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

- 1 點按  並開啓設定。
- 2 點按電子郵件，然後，您便可調整以下設定。
 - 允許回覆電郵** - 選擇是否允許發送「閱讀確認」訊息。
 - 要求回覆電郵** - 選擇是否要求接收「閱讀確認」訊息。
 - 擷取時隔** - 選擇 KF700 查收新電郵的頻率。
 - 轉寄與回覆時加入原始訊息** - 選擇是否加入原始訊息。
 - 包括附件** - 選擇是否加入原始附件。
 - 漫遊中自動擷取** - 選擇是否在出國時也自動接收您的訊息，還是要停止自動接收。
 - 新電子郵件通知** - 選擇是否要獲得新電郵的通知。

簽名 - 建立電郵簽名並啓用此功能。

重要性 - 選擇電郵的優先等級。

訊息資料夾

由於各資料夾的名稱相當清楚，您可輕鬆辨識用於 KF700 的資料夾結構。

收件匣 - 收到的所有訊息將置於您的收件匣中。您可從此處進行回覆、轉寄等操作，詳情請見下方說明。

郵箱 - 收到的所有訊息將置於您的郵箱中。如果您設定了不止一個電子郵件帳戶，訊息將分配至正確的帳戶。

草稿 - 若不夠時間完成訊息，您可將寫完的部份儲存於此處。

寄件匣 - 這裡是發送中的訊息之臨時存放資料夾。

已發送項目 - 所有已發送的訊息將置於您的「已發送項目」資料夾中。



我的資料夾 - 建立新個人資料夾來管理您的訊息。

訊息

管理訊息

您可使用收件匣來管理您的訊息。

提示！ 如要捲動選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。


- 1 點按 ，然後選擇**收件匣**。
- 2 點按 ，然後選擇：
 - 回覆** - 回覆所選訊息。
 - 轉寄** - 將所選訊息發送給他人。
 - 通話** - 向您的寄件者撥打語音或視像通話。
 - 刪除** - 刪除訊息。
 - 建立新訊息** - 開啓新的空白訊息或電子郵件。
 - 標記 / 取消標記** - 標記您的訊息以多重刪除或將其移動至不同的資料夾。
 - 複製及移動** - 選擇複製訊息或將其移動至不同的資料夾。
 - 篩選** - 按類型來檢視訊息。這樣可將文字訊息與多媒體訊息分開並歸為一組。
 - 訊息資訊** - 查看發送時間等其他訊息資訊。

看到**無足夠空間儲存智能卡訊息**這則訊息時，請從收件匣中刪除部份訊息。

看到**無足夠空間儲存訊息**這則訊息時，您可透過刪除訊息或已儲存的檔案來釋放空間。



使用範本

為您最常發送的 文字訊息及多媒體訊息 建立範本。您會發現手機上已存有部份範本，您可根據需要對其進行編輯。

- 1 點按 ，然後選擇**範本**。
- 2 選擇**文字範本**或**多媒體範本**。您可以點按  來新增、編輯、刪除或刪除全部文字範本，並新增、編寫多媒體訊息或編輯多媒體範本。

使用情感圖示


情感圖示令您的訊息更添生氣。您會發現手機上已存有一些常用情感圖示。

- 1 點按 ，然後選擇**情感圖示**。
- 2 點按  以**新增、編輯、刪除或刪除全部**情感圖示。

變更文字訊息設定

您的 KF700 已預先定義訊息設定，以便您可立即發送訊息。如要變更設定，請參閱下方說明以了解詳情。

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

點按 ，然後依次選擇**設定**、**文字訊息**。您可對以下各項進行變更：

文字訊息中心 - 為您的訊息中心輸入詳細資料。

發送報告 - 選擇是否要就已發送的訊息接收確認訊息。


有效時期 - 選擇訊息要在訊息中心中保留多久。

訊息類型 - 將您的文字轉換為**文字**、**語音**、**傳真**、**X.400** 或**電子郵件**。

字元編碼 - 選擇字元的編碼方式，這將影響到您的訊息大小，進而影響資料費用。

發送長文字時設為 - 選擇以**多個文字訊息** 或**一個多媒體訊息** 的方式發送。

變更多媒體訊息設定

點按 ，然後依次選擇**設定**、**多媒體訊息**。您可對以下各項進行變更：

接收模式 - 選擇**本地網絡**或**漫遊網絡**。隨後若選擇**手動**，您只會先收到 MMS 通知，以便您決定是否進行完整下載。

發送報告 - 選擇是否允許及/或要求發送報告。

閱讀回覆 - 選擇是否允許及/或發送閱讀回覆。

重要性 - 選擇**多媒體訊息** 的優先等級。

有效時期 - 選擇多媒體訊息要在訊息中心中保留多久。

投影片播放時間 - 選擇投影片在屏幕上的顯示時間。

發送時間 - 在指定時間發送您的訊息。

多媒體訊息中心 - 為您的訊息中心輸入詳細資料。

注意：有關如何變更電子郵件設定的詳情，請參閱第 29 頁。

訊息

變更其他設定

點按  並選擇**設定**，然後選擇：

視像留言信箱 - 如果您的網絡商支援此服務，您可以建立新帳戶。


留言信箱 - 您的留言信箱服務已經設定，您也可以在這裡新增新語音郵件服務。

服務訊息 - 選擇要接收還是阻止服務訊息。您亦可透過建立受信任的和不受信任的寄件者清單來設定您的訊息安全性。

資訊服務 - 選擇您的區域廣播、頻道及語言。


相機


快速拍照


- 1 輕按手機右側的  鍵。
- 2 水平握住手機，將鏡頭對準拍照對象。
- 3 輕按拍攝按鈕。
相機嘗試對焦時，屏幕中央的白色取景框將變紅。
- 4 當對焦方塊變綠，則表示相機對焦完成。
- 5 完全按下拍攝按鈕。


拍攝照片後


拍攝的照片會顯示在屏幕上。影片的名稱會顯示在屏幕的底部，五個圖示也將顯示。

 點按直接拍攝另一張照片。當前照片將會被儲存。

 點按查看相簿中的其他照片。當前照片將會被儲存。詳情請參閱第 37 頁的**檢視已儲存照片**。

 點按以訊息、電子郵件透過藍芽或Blog內容發送相片。您也可以使用藍芽列印照片。請參閱第 26 頁了解如何**發送訊息**，或參閱第 68 頁了解如何**使用藍芽發送和接收檔案**。

 點按以將剛剛拍出的照片設為待機圖片。

 點按以刪除剛剛拍攝的照片並點按**是**確認。取景器將再次出現。

01

02

03

04

05


06

07

08

相機


了解取景器

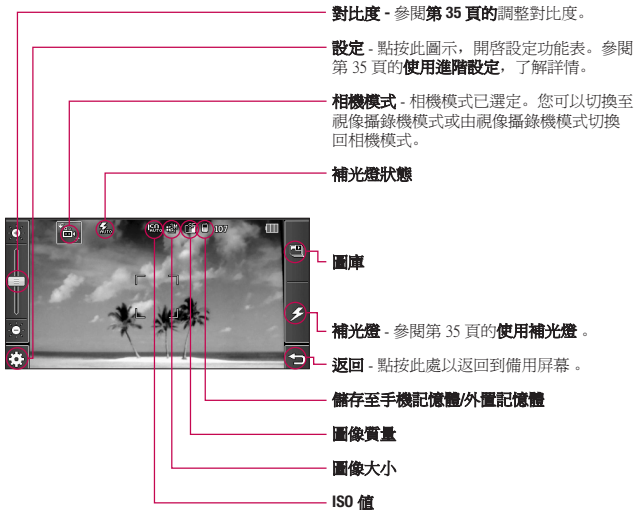



提示！ 您可以關閉所有快捷鍵選項，以獲取較清晰的取景器屏幕。只需要點按一下取景器中央。要再使選項，請再按一下屏幕。

使用補光燈

預設情況下，補光燈設定為自動，但仍存在其他選項。

- 1 從取景器中右方選擇  以進入補光燈子功能表。
- 2 存在以下四個補光燈選項：
 - 自動** - 相機會評估所需的光線，以便獲取較好的拍攝效果並在必要時，使用補光燈。
 - 拍照時** - 補光燈只有在您拍照時才會作用。
 - 常開** - 在相機模式下補光燈將永遠開啓。
 - 永遠關閉** - 相機永遠不會閃光。此選項對於節省電力將十分有用。
- 3 點按要使用的補光燈選項。
- 4 作出選擇後，補光燈功能表將自動關閉，為拍攝圖片作好準備。


調整對比度


對比度定義圖像在有光和黑暗中的區別。低對比度會將圖像顯示得較模糊，而高對比度會將圖像顯示得較清晰。將對比度指示符沿列向  滑動，對比度將降低，獲得的圖像較模糊，向  滑動，對比度將升高，獲得的圖像較清晰。


使用進階設定

從取景器，點按  以開啓所有進階設定選項。





 **圖像大小** - 變更儲存在記憶體中的圖像大小，或為聯絡人拍攝預設為適當大小的照片。請參閱第 36 頁的 **變更圖像大小**。


 **圖像質量** - 在 **特細緻**、**細緻** 及 **標準** 之間選擇。質量越細緻，圖片便越清晰，但佔用的檔案空間會增大，從而在記憶體中儲存的圖片會相應減少。


 **白平衡** - 白平衡可確保照片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從 **自動**、**白熱光**、**陽光**、**日光燈** 或 **陰天** 中進行選擇。


相機

 **色調** - 選擇色調，以應用於拍攝的照片。請參閱第 37 頁的**選擇色調**。


 **自拍器** - 自拍定時讓您設定按拍攝按鈕後的延遲時間。可供選擇的選項為：**關閉**、**3 秒**、**5 秒**或**10 秒**。當您要加入拍攝的群組照片中時，此選項十分有效。


 **夜間模式** - 選擇**關閉**或**開啟**。此模式可以在夜間拍攝出高品質的照片。


 **連環拍攝** - 相機會連續拍攝照片（三張、六張或九張），非常適用於記錄快速動作。

 **畫框拍攝** - 您可以選擇在所拍照片上套用畫框。


 **ISO** - ISO 決定相機光線感應器的敏感度。ISO 越高，相機感光性越好。此選項在光線較暗的環境下且閃光燈亦無法使用的情況下較有效。從**自動**、**ISO 100**、**ISO 200**、**ISO 400** 或 **ISO 800** 中選擇 ISO 值。

 **快門聲** - 從預設快門聲音中選擇一種。

 **轉換鏡頭** - 在 LG KF700 **對內相機及對外相機**中選擇。請參閱第 37 頁的**使用內相機**，了解詳情。

 **記憶體狀態** - 選擇是將照片儲存至手機記憶體，還是**儲存至外置記憶體**。

 **關屏幕檢視** - 選擇**關閉**或**開啟**。



 **重新設定** - 選擇是重新啓動手機至其原始相機設定。

注意：選擇新設定後，最後點按「**關閉**」以執行作出的變更。

提示！ 設定功能表會加在取景器上，這樣，當變更圖像色彩或質量的要素時，您將能夠在設定功能表後的預覽中查看到圖像變更。結束以應用任何變更前，記住點按**關閉**。



變更圖像大小

像素越高，檔案大小越大，從而佔據的記憶體空間便越多。若要使手機儲存更多的照片，請變更圖片像素，以縮小檔案大小。

- 1 從取景器中點按左下角的 。
- 2 從設定功能表，選擇 。

- 3 從以下五個數字選項 (3M : 2048x1536、2M : 1600x1200、1M : 1280x960、640x480、320x240) 選擇像素值或選擇預設值：
通訊錄 - 此選項設定相機拍攝大小最適合的照片，設為聯絡人來電時的顯示。



選擇色調


- 1 從取景器中點按左下角的 。
- 2 從設定功能表，選擇 。
- 3 可使用以下七種色調選項：**標準** (彩色)、**黑白**、**負片**、**復古**、**素描**、**曝光**、**浮雕**。
- 4 點按要使用的色調並選擇**關閉**。



提示！ 拍攝照片後，您可將照片顏色從彩色變更為黑白或復古，但您無法將黑白或復古照片變為彩色。

使用內相機




LG KF700 手機具有 640x480 的內相機，不但可用於視像通話，亦可用於拍攝照片。


- 1 要切換為向內相機，請點按  並選擇 。然後選擇**對內相機**。
- 2 幾秒鐘後，您將看到您自己顯示在取景器中。要擷取圖像，請按標準方式，按一下拍攝按鈕。

提示！ 由於向內相機沒有閃光燈或 ISO，因此其具有的設定較少。您仍可透過與使用主相機相同的方式點按 ，變更圖像大小、圖像質量、白平衡及其他設定。

- 3 拍攝照片後，系統將提供同主相機拍攝照片時可用的所有相同選項。
- 4 要返回主攝影機，請依次點按  以及 。

檢視已儲存照片

- 1 您可從相機模式和備用屏幕 中存取已儲存的照片。從取景器，您只需要選擇 。備用屏幕，您應按下 ，然後選擇 。選擇我的檔案以及**我的圖像**。
- 2 圖庫將顯示於屏幕上。

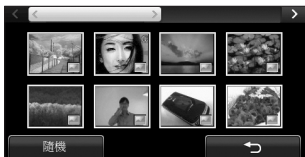

01

02

03

04

05



06

07

08

相機

檢視照片的詳情

- 1 點按一下照片並點按  出現。
- 2 照片將顯示名稱、拍攝日期、大小 (以千字節和像素表示) 及圖像類型 (如 jpeg)。
- 3 點按  以關閉詳情並檢視照片。


視像攝錄機


拍攝快速影片


- 1 長按手機右側的相機鍵。
- 2 視像攝錄機的取景器將顯示於屏幕上。
- 3 水平握住手機，將鏡頭對準拍攝對象。
- 4 按一下拍攝按鈕，開始錄製。
- 5 **REC** 及計時器將顯示於取景器底部。
- 6 要暫停影片，請點按  並透過選擇  以繼續。
- 7 點按屏幕上的  或再按一下拍攝按鈕，以停止錄製。


錄製影片後

已錄製的影片會顯示在屏幕上。影片的名稱會顯示在屏幕的底部。

 點按此鍵可立即錄製另一段影片。當前影片將會被儲存。

 點按查看相簿中的其他影片。當前影片將會被儲存。請參閱第 43 頁 **觀看已儲存影片**。

 點按以刪除剛剛錄製的視像，透過點按 **是** 予以確定。取景器將再次出現。

 點按此鍵可以訊息、電子郵件或透過藍芽或YouTube發送影片。請參閱第 26 頁了解如何 **發送訊息**，或參閱第 68 頁了解如何 **使用藍芽發送和接收檔案**。

01

02

03

04

05


06

07

08

視像攝錄機

了解取景器

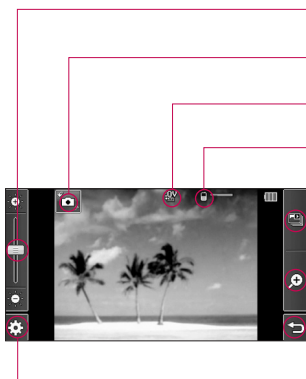

對比度 - 參閱第 41 頁的**調整對比度**。

視像攝錄機模式 - 在相機和視像攝錄機之間切換。

圖像質量 - 顯示所套用的影片品質設定。

儲存至手機記憶體/外置記憶體

圖庫

縮放 - 點按此鍵並使用滑桿縮放。或者，使用鏡頭附近突出的滾輪。



返回 - 點按此處以返回到備用屏幕。

設定 - 點按此圖示，**開啓設定功能表**。參閱第 35 頁的**使用進階設定**，了解詳情。

提示！ 您可以關閉所有快捷鍵選項，以獲取較清晰的取景器屏幕。只需要點按一下取景器中央。要再調用選項，請再按一下屏幕。

調整對比度


對比度定義圖像在有光和黑暗中的區別。低對比度會將圖像顯示得較模糊，而高對比度會將圖像顯示得較清晰。


將對比度指示符沿列向  滑動，對比度將降低，獲得的圖像較模糊，向  滑動，對比度將提高，獲得的圖像較清晰。


使用進階設定


從取景器，點按  以開啓所有進階設定選項。




 **圖像大小** - 變更視像大小以儲存於記憶體中。請參閱第 42 頁的**變更影片圖像大小**。

 **圖像質量** - 在**特細緻**、**細緻**及**標準**之間選擇。品質越細緻，則影片越清晰，佔用的檔案空間就會增加，從而使手機記憶體中儲存的影片數目減少。


 **白平衡** - 白平衡可確保影片中的任何白色顯示得真實。爲了使相機正常調整白平衡，您可能需要確定光線條件。從**自動**、**白熱光**、**陽光**、**日光燈**或**陰天**中進行選擇。


 **色調** - 選擇色調，以應用於拍攝的影片。請參閱第 42 頁的**選擇色調**。


 **長度** - 爲影片選擇標準或有限長度來配合**多媒體訊息**。

 **夜間模式** - 選擇關閉或開啓。

 **語音** - 選擇**靜音**以錄製視像，而沒有聲音。

 **轉換鏡頭** - 切換到 LG KF700 手機對內相機，以錄製自己的視像。請參閱第 42 頁的**使用內攝影機**，了解詳情。

 **記憶體狀態** - 選擇將影片儲存至**手機記憶體**，或是儲存至**外置記憶體**。



 **重新設定** - 選擇是重新啓動手機至其原始攝影機設定。


提示！ 設定功能表會加在取景器上，這樣，當變更影片色彩或質量的要素時，您將能夠在設定功能表後的預覽中查看到取景器變更。


視像攝錄機

變更影片圖像大小

像素越高，檔案越大，從而佔據的記憶體空間便越多。若要使手機儲存更多的影片，請變更圖片像素，以縮小檔案大小。



- 1 從取景器中點按左下角的 。
- 2 從設定功能表，選擇 。
- 3 從兩個選項中選擇像素值：

 **320x240** - 圖像大小較小，從而佔用的檔案空間較小。適合於節省記憶體空間。

 **176x144** - 圖像大小最小，從而佔用的檔案空間也最小。





提示！ 對於影片格式轉換軟件，請參閱隨 KF700 提供的光碟。


選擇色調

- 1 從取景器中點按左下角的 。
- 2 從設定功能表，選擇 。
- 3 可使用以下七種色調選項：**標準** (彩色)、**黑白**、**負片**、**復古**、**素描**、**曝光**及**浮雕**。
- 4 確定了選擇後點按**關閉**，您的選擇將顯示於取景器中。




使用內視像攝錄機

LG KF700 手機具有 320x240 內攝錄機，不單單用於視像通話，還用於錄製影片。

- 1 要切換為對內攝像機，請點按  並選擇 。
- 2 幾秒鐘後，您將看到您自己顯示在取景器中。要開始錄製圖像，請按一下拍攝按鈕，要停止錄製，請再按一下此按鈕。
- 3 錄製影片後，系統將提供同主相機錄製影片時可用的所有相同選項。
- 4 要返回主攝影機，請依次點按  以及 。

提示！ 您仍可透過與使用主攝影機相同的方式點按 ，變更圖像大小、圖像質量、長度、語音、白平衡、色調及其他設定。

觀看已儲存影片

- 1 從取景器，您只需要選擇 。
從備用屏幕，您應按下 ，然後選擇  並選擇**我的檔案**然後選擇**我的影片**。
- 2 圖庫將顯示於屏幕上。
- 3 點按一下要檢視的影片，使其顯示於圖庫的最前端。
- 4 再點按一下影片，可完全開啓照片。

01

02

03

04

05



06

07


08

照片及影片

檢視照片及影片

- 1 從取景器，您只需要選擇 。
- 2 圖庫將顯示於屏幕上。
- 3 點按一下要檢視的影片或照片，使其顯示於圖庫的最前端。
- 4 再點按一下照片，可完全開啓照片。
- 5 影片將自動開始播放。
要暫停播放，請點按屏幕，使其顯示選項並選擇 。




提示！ 透過點按位於屏幕底端的**標準**或**隨機**，變更照片和影片顯示於圖庫的方式。

提示！ 要刪除照片或影片，請開啓並選擇 。點按**是**以確認。

檢視影片時調節音量

若要在影片播放時調節音頻音量，點按屏幕下方的音量控制。或者，使用機身後的輪盤。



從影片中擷取圖像

- 1 選擇要從其擷取圖像的影片。
- 2 點按  以暫停要將其轉換為圖像的邊框上的影片。
- 3 點按 。
- 4 選擇**儲存**。
- 5 圖像將顯示於屏幕上，且包括其指定的圖像名稱。
- 6 點按圖像，然後按一下  以返回至圖庫。
- 7 圖像將儲存於「我的檔案」**我的圖像**資料夾中並顯示於圖庫中。您需要結束圖庫，然後重新開啓才可顯示。



警告： 若未在手機上記錄多媒體檔案，部份功能將無法正常使用。

檢視影片或照片的詳情

影片和照片一同在圖庫中分組。若在區分照片和影片時遇到麻煩，請查看詳情。例如，影片可能為 AVI 或 3GP 檔案類型，照片可能為 JPEG 或 GIF 檔案類型。

- 1 點按影片或照片，使其顯示於圖庫屏幕的最前端。然後點按  查看更多資訊。
- 2 影片或照片上將顯示其名稱、拍攝日期、大小 (以千字節和像素表示)，及是否為圖像或影片 (如 MP4/3GP 或 JPEG)。
- 3 點按  以關閉詳情並檢視影片或照片。


從圖庫發送照片或影片

- 1 點按兩下照片或影片，予以開啓。選擇影片後，按  暫停播放。
- 2 選擇  並選擇如何發送影片或照片：**訊息**、**電子郵件**和**藍芽**。
- 3 選定的訊息應用程式會開啓，這樣，您可以發送影片或照片。


注意：透過多媒體訊息發送前，照片或影片可能需要重新調整大小。部份影片太大，無法透過多媒體訊息發送，在這種情況下，請選擇其他發送選項。


以投影片播放形式檢視照片


投影片模式將以投影片播放的形式，一次一張顯示圖庫中所有照片。影片無法以投影片形式檢視。


- 1 按兩下開始投影片播放的照片，予以打開。
- 2 於左側選擇 。
- 3 投影片開始。



投影片播放有五個選項：

 點按在全屏幕模式中顯示照片。左側的列加快或減緩投影片速度。

 點按此處，以隨機次序檢視照片 (不以這些照片顯示於圖庫中的次序)。

 點按跳至下一張照片。

 點按以返回上一張照片。

 /  點按以暫停特定照片的投影片播放。再按一下繼續播放。

01

02

03

04

05


06

07

08


照片及影片

將照片設定為待機圖片

- 1 按兩下要將其設為待機圖片的照片，予以打開。
- 2 點按 。
- 3 屏幕將切換到人像模式。選擇要將其設定為待機圖片的照片部份。此區域將以實際大小顯示在屏幕上。
- 4 若對此部份滿意，則點按**設定**。



編輯照片


可對照片執行多項操作，如編輯、變更、或保持原樣。



- 1 開啓要編輯的照片，並點按  以顯示相關選項。





- 2 點按圖示，以修改照片：


 用手在照片上進行繪製。從四個選項中選擇線條的粗幼度。要變更線條色彩，請參閱  的介紹(彩色圖示將變更為選定的色彩)。


 請參閱第 47 頁的**在照片中加入文字**。

 使用印章裝飾照片。從不同印章中選擇並加到照片上。要變更標記色彩，請參閱以下  的介紹。


 在您的照片中選擇矩形區域。

 **儲存** 儲存對照片作出的變更。可選擇儲存至**原始檔案**，或儲存為**新檔案**。如果選擇**新檔案**，輸入檔案名稱。

 變更印章或線條的色彩。繪製、編寫或標記照片前，您必須選擇色彩。

 取消對照片作出的上一次編輯。

 請參閱第 47 頁的**在照片中加入效果**。

 **更多** 點按以開啓更多效果選項，包括**旋轉**和**鏡像**。同時，存在更多的進階編輯選項。請參閱第 47-48 頁的強化照片色彩及色彩轉換。

 點按以返回圖庫

在照片中加入文字

- 1 從編輯屏幕中點按 **T**。
- 2 輸入您想要的文字。
- 3 使用鍵盤輸入文字並點按**完成**。
- 4 透過點按並將其滑至目標位置，從而移動文字。

在照片中加入效果

- 1 從編輯屏幕中點按 **效果**。
- 2 選擇後，將六個選項的任何一個應用於照片：

柔和 - 沿著指示列移動標記，以軟化照片焦點。選擇**完成**以儲存變更或選擇**取消**。

光亮度 - 沿著指示列移動標記，以銳化照片焦點。選擇**完成**以儲存變更或選擇**取消**。

馬賽克 - 點按以將模糊馬賽克效果應用於照片。點按 **←** 以返回至標準照片。

色彩效果 - 將照片色彩變更為**黑白**、**復古**、**彩色負片**、**增強RGB變化**或**對比度**。若選擇**對比度**，沿列移動標記可增強或降低對比效果。

畫框 - 將畫框新增至照片。

系統會提示您允許變更圖像大小。要查看畫框類型，請選擇**是**。選定的畫框會疊加在照片上。

重新調整大小 - 點按此處可顯示大小選項。點按所需大小，變更照片大小。

- 3 要復原效果，只要點按 **←**。


提示！ 您可以新增多個效果至照片，但一次只能選擇一個色彩效果。

強化照片色彩

- 1 從編輯屏幕中點按 **更多**。
- 2 選擇**色彩強化**。
- 3 選擇照片部份。輪廓線將包括顯示於此區域內一切顏色相近之部份。例如，某人的頭髮或外衣的色彩。
- 4 點按**儲存**。
- 5 所有顏色將從照片刪除，以同為顏色強化標記的部份分離。
- 6 透過沿強度列上下滑動標記，以變更強化明暗度。
- 7 選擇**儲存**以儲存變更。



照片及影片

色彩轉換

- 1 從編輯屏幕中點按 **更多**。
- 2 選擇**色彩轉換**。
- 3 選擇照片部份。輪廓線將包括顯示於此區域內一切顏色相近之部份。例如，某人的頭髮或外衣的色彩。
- 4 點按  並選擇色彩。
- 5 點按**交換**。
- 6 為色彩強化選定的照片部份將變更為選定的色彩轉換。
- 7 選擇**儲存**以儲存變更。


多媒體

您可將任何多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖像、聲音、影片和遊戲。您亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。

要存取多媒體功能表，請依次點按  和 。點按**我的檔案**以開啓儲存所有多媒體檔案的資料夾清單。

我的圖像

我的圖像包括圖片清單，其中有預載至手機的預設圖像、下載圖像和透過手機相機拍攝的圖像。

點按 ，將檢視從縮圖圖像變更為清單。

我的圖像選項功能表

點按  以開啓選項。

為您準備的**我的圖像**中可用選項取決於選定的圖像類型。所有選項將可用於手機相機上拍攝的圖片，但僅**使用方式**、**以藍芽列印**、**排序方式**和**記憶體資訊**選項可用於預設圖像。

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

發送 - 將圖像發送給朋友。

使用方式 - 將圖像設定為特定時間顯示。

標記/取消標記 - 選擇多個檔案。

移動 - 將圖像從手機記憶體移動到記憶咭，反之亦然。

複製 - 將圖像從手機記憶體複製到記憶咭，反之亦然。

刪除 - 刪除圖像。

重新命名 - 為圖像重新命名。

建立新資料夾 - 在**我的圖像**資料夾內建立新資料夾。




播放投影片 - 開始播放投影片。

以藍芽列印 - 透過 Bluetooth® 列印圖像檔案。

排序方式 - 按特定次序排列圖像。

記憶體資訊 - 檢視記憶體狀態。

發送照片

- 1 點按 ，然後選擇 。
- 2 點按**我的檔案**，然後選擇**我的圖像**。
- 3 選擇照片並點按 。
- 4 點按**發送並從訊息、電子郵件、藍芽或Blog內容中進行選擇**。

01

02

03

04

05

06

07

08

多媒體




- 5 若選擇**訊息**或**電子郵件**，則照片會附加至訊息中，您亦可正常編寫和發送訊息。若選擇**藍芽**，手機會提示您開啓藍芽，並搜尋要向其發送圖片的裝置。

使用圖像




您可選擇用作待機圖片或屏幕保護程式的圖像，或甚至將其用於識別來電者。

- 1 點按 ，然後選擇 。
- 2 點按**我的檔案**，然後選擇**我的圖像**。
- 3 選擇一個圖像並點按 。
- 4 點按**使用方式**並選擇以下一項：
牆紙 - 為備用屏幕設定待機圖片。
撥出通電 - 設定撥出通話時所顯示的圖像。
開機 - 設定開機時所顯示的圖像。
關機 - 設定關機時所顯示的圖像。
通訊錄圖像 - 給通訊錄清單中的特定聯絡人分配一個圖像，以便在其向您致電時顯示。

管理圖像

- 1 點按 ，然後選擇 。
- 2 點按**我的檔案**，然後選擇**我的圖像**。
- 3 點按 ，然後選擇排序方式。
- 4 從**日期**、**類型**或**名稱**中進行選擇。




刪除圖像

- 1 點按 ，然後選擇 。
- 2 點按**我的檔案**，然後選擇**我的圖像**。
- 3 選擇一個圖像並點按 。
- 4 點按**刪除**，然後選擇**是**以確認。

提示！ 如要快速刪除**我的檔案**中的某個檔案，您可透過點按顯示所需檔案，然後按下 **c** 硬鍵。透過點按**是**進行確認。

移動或複製圖像

您可以在手機記憶體和記憶咭之間移動或複製圖像。若要釋放某記憶庫中的部份空間，或要確保圖像不會遺失，您便需要進行這項作業。

- 1 點按 ，然後選擇 。
- 2 點按**我的檔案**，然後選擇**我的圖像**。
- 3 選擇一個圖像並點按 。
- 4 選擇**移動**或**複製**。







標記或取消標記圖像

若要同時發送、刪除、移動、複製或藍芽打印多個圖像，您首先要識別出它們，然後以勾號進行標記。

- 1 點按 ，然後選擇 。
- 2 點按**我的檔案**，然後選擇**我的圖像**。
- 3 點按  然後選擇**標記 / 取消標記**。
- 4 每個圖像的左上角均會出現一個方塊。點按兩次圖像，方塊中會出現勾號標記此圖像。
- 5 如要取消標記某圖像，只要再次點按該圖像，其方塊中的勾號。
- 6 標記完所有對應方塊後，請按  並選擇其中一個選項。

建立投影片播放




如果要查看手機上的所有圖像，或瀏覽您擁有的內容，則可建立投影片播放，這樣就省去逐一開啓、關閉圖像的麻煩。

- 1 點按 ，然後選擇 。
- 2 點按**我的檔案**，然後選擇**我的圖像**。
- 3 點按 ，然後選擇**播放投影片**。
- 4 使用  和  以瀏覽圖像，或點按  以隨機方式顯示您的圖像。



檢查記憶體狀態

您可查看已使用的記憶體空間及所剩記憶體空間。

- 1 點按 ，然後選擇 。
- 2 點按**我的檔案**，然後選擇**我的圖像**。
- 3 點按 ，然後選擇**記憶體資訊**。
- 4 選擇**手機記憶體**或**我的記憶咭**。




注意：若您尚未插入記憶咭，您就無法選擇**我的記憶咭**。

多媒體

我的聲音

此**我的聲音**資料夾包含**下載聲音**、**語音錄製**和**預設聲音**。您可在此處管理、發送或將聲音設定為鈴聲。



使用聲音

- 1 點按 ，然後選擇 .
- 2 點按**我的檔案**，然後選擇**我的聲音**。
- 3 選擇**預設聲音**或**語音錄製**。
- 4 選擇一段聲音並點按**播放**以收聽。
- 5 點按 ，然後選擇**使用方式**。
- 6 從**話音鈴聲**、**視像鈴聲**、**訊息提示音**、**開機**、**關機**中選擇。

我的影片

我的影片資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。

觀看影片

- 1 點按 ，然後選擇 .
- 2 點按**我的檔案**，然後選擇**我的影片**。
- 3 選擇影片並點按**播放**。


提示！ 如要快速刪除「我的檔案」中的某個檔案，您可透過點按所需檔案，然後按下 **c** 硬鍵。透過點按 **是** 進行確認。

在暫停影片時使用選項

在暫停模式下點按  並從以下選項中選擇：

- 擷取** - 將暫停中的屏幕擷取為圖片。
 - 檔案資訊** - 檢視名稱、大小、日期、時間、類型、長度、尺寸、保護和版權。
 - 發送** - 透過訊息、電子郵件或通過藍芽發送影片。
 - 刪除** - 刪除影片。
- 使用方式** - 將影片用作鈴聲。

發送錄像片段

- 1 選擇影片並點按 .
- 2 點按**發送**並從**訊息**、**電子郵件**、**藍芽**或**YouTube**中進行選擇。
- 3 若選擇**訊息**或**電子郵件**，則錄像片段會附加至訊息中，您亦可正常編寫和發送訊息。若選擇**藍芽**，手機會提示您開啓藍芽，並搜尋要向其發送影片的裝置。

將錄像片段用作鈴聲

- 1 選擇影片並點按 .
- 2 點按**使用方式**然後選擇**話音鈴聲**或**視像鈴聲**。

使用影片選項功能表

從我的影片資料夾中，您可以選擇以下選項之一：

使用方式 - 將影片設為鈴聲。

發送 - 向好友發送影片。

移動 - 將影片從手機記憶體移到記憶卡，反之亦然。

複製 - 將影片段從手機記憶體複製到記憶卡，反之亦然。

刪除 - 刪除影片。

重新命名 - 重新命名影片。

標記/取消標記 - 選擇多個檔案。

建立新資料夾 - 在我的影片資料夾內建立新資料夾。



排序方式 - 按特定順序排列影片。

記憶體資訊 - 檢視記憶體狀態。

我的遊戲及應用程式



您可以將新的遊戲與應用程式下載到手機上，以使用其打發空閒時間。

下載遊戲

- 1 點按 ，然後選擇 。
- 2 點按我的檔案，然後選擇我的遊戲及應用程式。
- 3 選擇下載遊戲並點按連接。
- 4 您將會連線至有遊戲供您下載的入門網站。


提示！ 如要快速刪除「我的檔案」中的某個檔案，您可透過點按所需檔案，然後按下 **c** 硬鍵。透過點按是進行確認。

玩遊戲

- 1 點按 ，然後選擇 。
- 2 點按我的檔案，然後選擇我的遊戲及應用程式。
- 3 選擇一款遊戲並點按啟動。

使用遊戲選項功能表

在我的遊戲及應用程式資料夾中提供以下選項：

建立新資料夾 -  在我的遊戲及應用程式中建立新資料夾。

排序方式 - 按日期、大小或名稱來排序遊戲及應用程式。

記憶體管理 - 檢視記憶體狀態。

Flash 內容


Flash 內容資料夾中包含您所有的預設及已下載 SWF 檔案。

多媒體

檢視 SWF 檔案

- 1 點按 ，然後選擇 .
- 2 點按**我的檔案**，然後選擇 **Flash 內容**。
- 3 選擇檔案並點按**檢視**。

檢視 SWF 檔案時使用選項

全屏幕檢視 - 以全屏幕模式 (此模式只會在未按暫停而點按  時出現) 檢視 SWF 檔案。

靜音 - 關閉聲音。

 - 暫停或繼續播放。

作為待機圖片使用 - 您可以使用預設檔案設定待機圖片。

檔案資訊 - 檢視檔案的名稱、大小、日期、時間、類型及保護。

文件

- 1 點按 ，然後選擇 .
- 2 點按**我的檔案**然後選擇**文件**。

從文件功能表，您可檢視所有文件檔案。您可從此處檢視**我的檔案**中的 Excel、PowerPoint、Word、文字和 PDF 檔案。



傳送檔案到手機

藍芽很可能是將檔案從電腦傳送到手機的最簡易方式。您也可以通過同步使用 LG PC Suite，詳細資訊請參閱第 65 頁。

接收藍芽傳送：

- 1 確保您的手機與電腦均已開啓藍芽，並已被對方偵測到。
- 2 使用電腦，透過藍芽發送檔案。
- 3 檔案發送後，您需要按**是**予以接受。
- 4 該檔案應出現於您的**文件**或**其他資料**夾中。




檢視檔案

- 1 點按 ，然後選擇 .
- 2 點按**我的檔案**然後選擇**文件**。
- 3 選擇一個文件並點按**開啓**。







其他


其他資料夾用於儲存圖像、聲音、影片、遊戲或應用程式以外的檔案。其使用方式與**文件**資料夾相同。您可能會發現，從電腦將檔案傳送到手機時，這些檔案將出現於**其他**資料夾而不是**文件**資料夾中。若發生這種情況，您可以將其移走。

如要將檔案從其他移到文件：

- 1 點按 ，然後選擇 .
- 2 點按**我的檔案**然後選擇**其他**。
- 3 選擇檔案並點按 .
- 4 點按**移動**，標記目的地，然後再次點按**移動**。

播放歌曲



- 1 點按 ，然後選擇 .
- 2 點按**音樂**，然後選擇全部曲目。
- 3 選擇要播放的歌曲並點按**播放**。
- 4 點按  暫停歌曲。
- 5 點按  跳至下一首歌曲。
- 6 點按  跳至上一首歌曲。
- 7 點按  返回上一頁。

提示！ 要在收聽音樂時更改音量大小，點按  或使用機身後的輪盤。




建立播放列表

透過從**全部曲目**資料夾中選擇歌曲項目，從而建立自己的播放列表。

- 1 點按 ，然後選擇 .
- 2 點按**音樂**，然後按**播放列表**。
- 3 點按**新增**，輸入播放列表名稱並點按**儲存**。
- 4 所有曲目資料夾將顯示。點按要納入播放列表的所有歌曲；記號將顯示於對應的名稱旁。
- 5 點按**完成**。




多媒體

要播放播放列表，請選擇並點按**播放**。

注意：要新增第二個播放列表，請點按，然後按**新增播放列表**。

編輯播放列表

您可能需要不時新增歌曲，或從播放清單中刪除歌曲。要執行此操作時，您可編輯播放列表。

- 1 點按，然後選擇.
- 2 點按**音樂**，然後按**播放列表**。
- 3 開啓播放列表。
- 4 點按，然後選擇：

正在播放 - 播放播放列表。

新增歌曲 - 新增更多歌曲至播放列表。標記所需歌曲並點按完成。

上移/下移 - 將歌曲在清單中上下移動，以變更播放次序。

發送 - 以訊息，電子郵件或藍芽的方式發送歌曲。




從列表移除 - 從播放列表中刪除歌曲。點按**是**以確認。

標記/取消標記 - 選擇多個檔案。

使用方式 - 您可將歌曲設定為音效。

記憶體資訊 - 檢視播放列表資訊。




刪除播放列表

- 1 點按，然後選擇.
- 2 點按**音樂**，然後按**播放列表**。
- 3 點按，然後按**刪除**或**刪除全部**以刪除所有播放列表。



搜尋電台

透過手動或自動搜尋電台頻道，從而將其儲存至手機中。這些節目將儲存至特定頻道編號，如此一來，您就不需要重新搜尋。手機中可儲存 24 個頻道。




自動調諧：

- 1 點按，然後選擇.
- 2 依次點按**FM 收音機**.
- 3 點按**自動掃描**，然後選擇**是**。找到的電台將自動分配至手機中的頻道編號。



手動調諧：

- 1 點按，然後選擇.
- 2 點按**FM 收音機**。
- 3 點按要將電台儲存至的頻道編號。
- 4 使用屏幕頂端的箭嘴鍵來尋找電台。
- 5 按**設定**以儲存電台。

重設頻道

- 1 點按 ，然後選擇 .
- 2 依次點按 **FM 收音機** .
- 3 選擇**重新設定以重設**目前頻道，或選擇**重設全部**以重設所有頻道。每個頻道將返回至開始 87.5Mhz 頻率。

收聽電台



- 1 點按 ，然後選擇 .
- 2 點按 **FM 收音機**，然後點按要收聽電台的頻道編號。

提示！ 如要改善收音機的接收效果，您可延長作為收音機天線的耳機線。

網絡功能

透過用瀏覽器，您便可隨時了解到最新的新聞、天氣預報、體育賽事或交通消息等資訊。另外，瀏覽器還可讓您下載到最新的音樂、鈴聲、待機圖片及遊戲。




存取網絡

- 1 從備用屏幕，選擇 ，然後點按  並選擇**瀏覽器**。
- 2 要直接存取瀏覽器主頁，請選擇**主頁**。或者，選擇**輸入網址**並輸入所需的 URL，然後點按**連接**。

注意：連線至此服務和下載內容，需另行收費。請向網絡供應商諮詢收費詳情。


新增並存取書籤

爲了方便快捷存取喜愛的網站，您可新增書籤並儲存網頁。

- 1 從備用屏幕，選擇 ，然後點按  並選擇**瀏覽器**。
- 2 選擇**書籤**。書籤清單顯示在屏幕上。
- 3 要新增書籤，請選擇 ，然後點按**新增**。依次輸入書籤標題和連結。
- 4 點按**儲存**。此時，書籤將顯示於書籤清單中。




- 5 要存取書籤，只要點按至所需的書籤並點按**開啓**。您將連線到該網頁。

儲存網頁


- 1 按照以上所述操作，存取所需的網頁。
- 2 點按  並選擇**儲存此網頁**。
- 3 爲網頁輸入名稱，這樣，您可方便進行識別。
- 4 點按**儲存**。

提示！ 此功能表亦讓您編輯已儲存頁面標題，並刪除已儲存頁面。


存取已儲存的網頁

- 1 從備用屏幕，選擇 ，然後點按  並選擇**瀏覽器**。
- 2 選擇儲存的網頁。
- 3 選擇所需的網頁並依次點按  和**開啓**。

檢視瀏覽器記錄

- 1 從備用屏幕，選擇 **☰**，然後點按  並選擇**瀏覽器**。選擇**記錄**。
- 2 最近存取的網頁標題清單會顯示。要存取這些網頁中的一個，只要選擇所需的網頁並點按連接即可。

變更網頁瀏覽器設定

- 1 從備用屏幕，選擇 **☰**，然後點按  並選擇**瀏覽器**。選擇**設定**。
- 2 您可以選擇編輯**網絡設定**、**字元編碼**、**快取記憶**、**Cookie**、**Java Script**、**安全**，或者，您亦可選擇**重設設定**以重設所有設定。
- 3 變更設定後，選擇**確定**。

將手機用作數據機

即使無法用USB線連接，KF700 亦可用作電腦的數據機，為您提供電郵和互聯網存取功能。您可以使用 USB 線或藍芽。

使用 USB 線：

- 1 確保 LG PC Suite 已安裝於電腦上。
- 2 使用 USB 線連接 KF700 手機和電腦，並啟動 LG PC 套件軟件。

- 3 按一下電腦上的**Communication**。然後，按一下**設定**並選擇**數據機**。
- 4 選擇 **LG Mobile USB 數據機**並選擇**確定**。此時，它將顯示在屏幕上。
- 5 按一下**連接**，且您的電腦將透過 KF700 手機連接。

注意：有關使用 LG PC Suite 進行同步的詳情，請參閱第 65 頁。


使用藍芽：


- 1 確保藍芽已**開啓**，且可見於電腦和 KF700 手機。
- 2 配對電腦和 KF700 手機，以便連線時需要密碼。
- 3 使用 LG PC 套件上的**連線精靈**，建立有效的藍芽連線。
- 4 按一下電腦上的**Communication**。然後按一下**設定**。
- 5 按一下**數據機**。
- 6 選擇以**藍芽連線的標準數據機**並按一下**確定**。此時，它將顯示在屏幕上。
- 7 按一下**連接**，且您的電腦將透過 KF700 手機連接。

注意：有關藍芽的更多資訊，請參閱第 68-69 頁。



記事簿

新增事件至日曆




- 1 從備用屏幕選擇 ，然後點按  並選擇**記事簿**。選擇**日曆**。
- 2 選擇要將事件新增至的日期。
- 3 點按 ，然後新增事項。
- 4 選擇要新增**約會**、**週年紀念**或**生日**並點按**確定**。
- 5 檢查日期，並輸入開始事件的時間。
- 6 對於約會和週年紀念日，請在下方兩個時間和日期方塊中輸入完成事件的時間和日期。
- 7 若要新增主題或記錄事件，請點按**標題或位置**，並鍵入備註，然後按一下**確定**。
- 8 選擇**儲存**，則事件將儲存至日曆中。方形游標會標記已儲存事件的日期，且於事件開始時間會響鈴，以便您可以進行組織。


提示！ 您可以在日曆中設定假期。每次點按假日中的一日，然後點按  並選擇**設定假期**。每一日均為紅色。設定鬧鐘時，可選擇排除設定為假日的日期。

變更預設日曆檢視




- 1 從備用屏幕選擇 ，然後點按  並選擇**記事簿**。選擇**設定**。
- 2 點按**日曆設定**並在**預設檢視**或**每星期開始**於中選擇。
- 3 按**確認**確定您的選擇。

新增項目至待辦事項

- 1 從備用屏幕選擇 ，然後點按  並選擇**記事簿**。
- 2 選擇**待辦事項**並點按右上角的 。
- 3 為待辦事項項目設定日期，新增記錄並選擇優先等級：**高**、**中**或**低**。
- 4 透過選擇**儲存**，儲存待辦事項清單項目。

提示！ 您可透過選擇項目並點按  對其進行編輯。現在選擇**編輯**。透過選擇**儲存**，確認修改。

發送待辦事項項目

- 1 從備用屏幕依次選擇 、 和**記事簿**。選擇**待辦事項**。
- 2 選擇要分享的待辦事項項目，然後點按 。
- 3 選擇發送。您可選擇按**文字訊息**、**多媒體 訊息**、**電子郵件**或**藍芽發送**。

提示！ 您可以備份並同電腦同步日曆。請參閱第 64 頁的**電腦同步**。

使用日期搜尋器

日期搜尋器是一種方便快捷的工具，有助於您計算特定天數後的日期。例如 2007 年 10 月 10 日的 60 天後是 2007 年 12 月 9 日。非常適合標記時限。

- 1 備用屏幕選擇 **⋮**，然後點按 **📅** 並選擇**記事簿**。
- 2 選擇**日期搜尋器**。
- 3 在**由標籤**中設定所需日期。
- 4 在**之後**標籤中設定天數。
- 5 以下將顯示**預計日期**。

設定鬧鐘

- 1 從備用屏幕依次選擇 **⋮**、**📅** 和**鬧鐘**。
- 2 點按 **🕒** 設定鬧鐘。
- 3 設定鬧鐘響鈴的時間並點按設定時間。
- 4 選擇鬧鐘響鈴方式：**不重複**、**每天**、**星期一至星期五**、**星期一至星期六**、**星期六至星期日**或**假日除外**。
按**確定**。

- 5 選擇 **🔔**，為鬧鐘選擇聲音。要收聽聲音，請點按聲音，然後按**播放**。作出選擇後，點按**附加**。
- 6 新增鬧鐘備忘錄。完成輸入備忘錄後，點按**確定**。鬧鐘響鈴後，備忘錄將出現。
- 7 最後，您可將延後間隔設定為**5**、**10**、**20**、**30**分鐘、**1**小時或延後**關閉**。按**確定**以確認選擇。
- 8 設定鬧鐘後，請點按**儲存**。

注意：您最多可設定 5 個鬧鐘。

提示！ 即使您的手機關機，鬧鐘仍然會在設定時間響起。如果您點按延遲鬧鐘，5 分鐘後鬧鐘將再次響起。如果您點按**停止**，將跳出「是否開啓手機？」訊息。

新增備忘錄

- 1 從備用屏幕選擇 **⋮**，然後點按 **📅** 並選擇**備忘錄**。
- 2 點按 **📝** 新增備忘錄。
- 3 輸入備忘錄，然後按**儲存**。
- 4 下次開啓**備忘錄**應用程式時，備忘錄將會顯示在屏幕上。

提示！ 您可以編輯現有備忘錄。選擇要編輯的備忘錄並點按**編輯**。

01

02

03

04

05

06





07

08

記事簿


語音備忘錄

使用**語音備忘錄**錄製語音備忘錄或其他聲音。


- 1 點按 ，然後選擇 。
- 2 點按**語音備忘錄**並按  開始錄音或按  從以下選項中選擇：
 - 長度** - 設置錄製時間。可選選項包括 多訊體訊息、**訊息大小**、**1 分鐘** 或**無限制**。
 - 質素** - 選擇聲音質素。從特細緻、細緻或標準中進行選擇。
 - 轉至我的聲音** - 開啓**我的聲音**中的錄音資料夾。


錄製聲音或語音

- 1 點按 ，然後選擇 。
- 2 點按**語音備忘錄**。
- 3 點按  以開始錄製。
- 4 點按  以結束錄製。
- 5 點按  以收聽錄音。

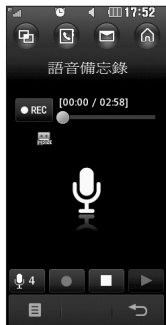




發送錄音




- 1 完成錄製後，點按 。
- 2 點按**發送**並從**訊息**、**電子郵件**或**藍芽**中進行選擇。若選擇**訊息**或**電子郵件**，則錄製會新增至訊息，且您可按正常方式進行編寫和發送。若選擇**藍芽**，則系統會提示您開啓藍芽。


注意：完成錄製後，點按  並選擇 **發送、檔案 (重新命名、檔案資訊)、刪除、使用方式** (將錄製用作鈴聲) 或 **轉至我的聲音**。

使用計算機



- 1 從備用屏幕，選擇 ，然後點按  並選擇 **工具**。
- 2 選擇 **計算機**。
- 3 使用鍵盤輸入數字。
- 4 對於簡單計算，點按您所需要的功能 (+、-、÷、x)，並在其後加 =。
- 5 對於較複雜的計算，請點按  並從 **+/-、sin、cos、tan、log、ln、exp、sqrt、deg** 或 **rad** 中選擇。

新增城市至世界時鐘



- 1 從備用屏幕，選擇 ，然後點按  並選擇 **工具**。
- 2 選擇 **世界時鐘**。
- 3 點按  圖示，然後按 **新增城市**。開始鍵入所需的城市名稱，且其將顯示於屏幕的頂端。或者，點按 **地圖**，並從地圖選擇所選城市。
- 4 點按 **選擇**，確認您的選擇。

提示！ 身處國外時，您可透過依次點按  和 **更改時區**，變更您在世界時鐘中的時區。

轉換單位

- 1 從備用屏幕，選擇 ，然後點按  並選擇 **工具**。
- 2 選擇 **單位換算器**。
- 3 選擇要轉換 **匯率、面積、長度、重量、溫度、體積** 還是 **速度**。
- 4 您現在可選擇單位，輸入要轉換的值，然後輸入要轉換至的單位。
- 5 對應值將顯示於屏幕上。

使用秒錶

- 1 從備用屏幕，選擇 ，然後點按  並選擇 **工具**。
- 2 選擇 **秒錶**。
- 3 點按 **開始** 開始使用計時器。
- 4 如果要記錄圈速，點按 **圈**。
- 5 點按 **停止** 結束計時器。
- 6 點按 **恢復** 在停止的時刻處重新啟動秒錶，或點按 **重新設定** 重新開始計時。

電腦同步

您可將電腦同手機保持同步，從而確保所有重要詳情和日期相匹配，同時作為重要資料備份，讓您完全放心。

在電腦上安裝 LG PC Suit

- 1 從備用屏幕中選擇 ，然後點按  並選擇**手機設定**。
- 2 選擇**連接**，然後選擇 **USB 連接模式**。
- 3 選擇**數據服務**並點按**選擇**。
- 4 提供的光碟 插入電腦。**LG PC Suite 安裝程式**將顯示在屏幕上。按一下 **LG PC Suite 安裝程式**。
- 5 選擇執行安裝程式時使用的語言並按一下**確定**。
- 6 遵循屏幕上的說明，完成 **LG PC Suite 安裝程式**精靈。
- 7 安裝完成後，LG PC **Suite** 圖示將顯示於桌面上。

連接手機和電腦

- 1 將 USB 線連接到手機和電腦。
- 2 連接兩下位於桌面上的 **LG PC Suite** 圖示。
- 3 按一下**連線精靈**和 **USB**。
- 4 依次按**下一步**、**下一步**和**完成**。
手機和電腦現已連接。

備份和還原手機資訊

- 1 如同以上所述，將手機連接到電腦。
- 2 按一下**備份**圖示，並選擇**備份或還原**。
- 3 標記要備份或還原的內容。選擇要將資訊備份至的位置或還原自其資訊的位置。按一下**確定**。
- 4 資訊將會備份。

檢視電腦上的手機檔案

- 1 如同以上所述，將手機連接到電腦。
- 2 按一下**內容**圖示。
- 3 所有儲存至手機上的文件、flash 內容、圖像、聲音和影片將會顯示於 LG 手機資料夾的屏幕上。

提示！ 在電腦上檢視手機的內容，有助您整理檔案、管理文件並刪除不再需要的內容。

同步處理通訊錄

- 1 將手機連接到電腦。
- 2 按一下**通訊錄**圖示。
- 3 選擇**傳輸**，然後選擇**從手機匯入**。
現在，電腦匯入並顯示儲存至 智能咭 和手機的所有聯絡人。
- 4 按一下**檔案**並選擇**儲存**。現在，您可選擇要儲存聯絡人的位置。

注意：要備份儲存至 智能咭 卡的聯絡人，請按一下位於電腦屏幕左側的智能咭 資料夾。選擇屏幕頂部的**編輯**，然後選擇**全部選擇**。在聯絡人上按滑鼠右鍵，並選擇**複製至通訊錄**。現在按一下位於屏幕左側的**手機**資料夾，顯示所有號碼。

同步訊息

- 1 將手機連接到電腦。
- 2 按一下**訊息**圖示。
- 3 所有電腦和手機訊息將顯示於屏幕的資料夾中。
- 4 使用位於屏幕頂端的工具列以編輯和重新排列訊息。

將手機用作大容量儲存裝置

只有在您已插入記憶咭的情況下，手機方用作大容量儲存裝置。

- 1 斷開電腦與手機之連接。
- 2 從備用屏幕中選擇 ，然後點按  並選擇**手機設定**。
- 3 選擇**連接**，然後選擇 **USB 連接模式**。
- 4 選擇**大容量儲存**並點按**選擇**。
- 5 將手機連接到電腦。手機將讀取：**以大型儲存裝置連接**…及**以大型儲存裝置模式連線**。傳送期間，請勿斷開連接。
- 6 所有手機檔案將自動儲存至電腦硬碟上。


注意：大型儲存裝置僅備份儲存在記憶卡，而不是手機記憶體上的內容。要傳送手機記憶體的內容 (例如，通訊錄)，您需要使用電腦同步來進行同步。

設定

在此資料夾內，您可調整各項設定，以便讓此 KF700 可彰顯您的個性。

注意：有關通話設定的詳情，請參閱第 21 頁。




變更屏幕設定

- 1 點按 ，然後選擇 .
- 2 點按**屏幕**並從以下選項中選擇：
 - 屏幕主題** - 選擇桌面、撥出通話、開機及關機的主題。
 - 時鐘和日曆** - 選擇其在屏幕上的顯示方式。
 - 背光燈** - 選擇背光燈及鍵盤的維持時間。
 - 亮度** - 調校屏幕的光亮度。
 - 手機主題** - 快速變更屏幕的整個外觀。
 - 字體** - 調整撥號字體顏色。
- 3 點按**儲存**以儲存您的設定。

個人化情景模式

您可以在備用屏幕中快速變更您的情景模式。只要點按屏幕上方目前使用的情景模式圖標。



使用設定功能表，您便可個人化每種情景模式設定。

- 1 按 ，然後選擇 .
- 2 點按**情景模式**，然後選擇您要編輯的情景模式。
- 3 點按 ，然後選擇**編輯**。
- 4 然後，您便可變更清單中的所有可用聲音和提示選項，包括**鈴聲及音量**、**訊息提示音**、**滑蓋音效**設定等。

變更電話設定

您可隨意變更 KF700，以便以最適合於您的方式使用。

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

- 1 點按 ，然後選擇 .
- 2 點按**手機設定**，然後從以下清單中進行選擇。
 - 日期和時間** - 調整您的日期和時間設定，或選擇因應旅遊或夏令時間來自動更新時間。
 - 省電模式** - 選擇切換原廠設定省電設定**開啓**或**關閉**。
 - 語言** - 變更 KF700 的顯示語言。
 - 自動按鍵鎖** - 選擇鎖定鍵盤的時間。

安全 - 調節您的安全設定，包括 PIN 碼及手機鎖。

連接 - 參閱**變更連接設定**，了解更多資訊。

觸控屏幕效果 - 變更觸控屏設定。

記憶體管理 - 參閱**使用記憶體管理**，了解更多資訊。



觸控板校準 - 重設您的屏幕以便使用。

重設設定 - 將所有設定重設為原廠設定。

手機資訊 - 檢視 KF700 手機的技術資訊。

變更連接設定

您的網絡商已經為您設定連線設定，因而，您可以立即享用您的新手機。若要變更任何設定，請使用此功能表。

點按 ，然後選擇 。點按**手機設定**，然後選擇**連接**。

網絡設定 - 您的 KF700 會自動連線至您的首選網絡。

使用此功能表可變更這些設定。

互聯網資料 - 您可以設定並檢視網絡資料。

存取點 - 您的網絡商已經為您儲存此資訊。您可以使用此功能表來新增存取點。

USB 連接模式 - 選擇**數據服務**並透過 LG PC Suite 軟件同步您的 KF700，藉此複製您手機中的檔案。有關同步的詳情，請參閱第 65 頁。

同步服務 - 有關同步的詳情，請參閱第 65 頁。

串流播放設定 - 您的網絡商已經為您儲存此資訊。若要作出變更，您可對其進行編輯。

使用記憶體管理

您的 KF700 手機具有三種可用記憶體：手機、智能咭和外置記憶咭 (您可能需要另行購買記憶咭)。

您可以使用記憶體管理確定如何使用各記憶體，且查看可用的空間。

依次點按  和 。選擇**手機設定**，然後選擇**記憶體管理**。

手機共用記憶體 - 查看 KF700 手機上可用於圖片、聲音、影片、Flash 內容、多媒體訊息、電子郵件、Java 應用程式和其他的記憶體。

手機預留記憶體 - 查看手機上可用於文字訊息、通訊錄、日曆、待辦事項、備忘錄、鬧鐘、通話記錄、書籤和其他的記憶體。

智能咭記憶體 - 查看智能咭上可用的記憶體。

設定

外置記憶體 - 檢視可用於外置記憶咭的記憶咭 (您可能需要另行購買記憶咭)。


主要儲存裝置設定 - 選擇首選儲存項目的位置。

提示！ 有關插入記憶咭的資訊，請參閱第 12 頁。

使用藍芽發送和接收檔案

藍芽是一種發送和接收檔案的好方法，因為不需要傳輸線，且連線方便快捷。您亦可連接到藍芽手機，以撥打電話和接聽來電。

發送檔案：



- 1 開啓要發送的檔案，通常為照片、影片或音樂檔案。
- 2 點按 ，然後選擇**發送**。
選擇**藍芽**。
- 3 點按**是**開啓藍芽。
- 4 KF700 手機將自動搜尋範圍內其他已啓動藍芽的裝置。
- 5 選擇要將檔案發送至的裝置並點按**選擇**。
- 6 您的檔案將會送出。

提示！ 留意進度列，確保檔案已發送。

接收檔案：

- 1 要接收檔案，藍芽必須為**開啓並可見**。參閱以下**藍芽設定變更**，了解更多詳情。
- 2 系統顯示一則訊息，提示您接受來自寄件者的檔案。點按**是**以接收檔案。
- 3 您可查看到儲存檔案的位置且選擇**檢視**檔案或**作為待機圖片使用**。檔案通常儲存到我的檔案中相關資料夾。

變更您的藍芽設定：

- 1 點按  並點按 。
- 2 依次選擇**藍芽**和**設定**。
對以下選項作出變更：
顯示我的手機 - 選擇**可見**或**隱藏**。
我的裝置名稱 - 為 LG KF700 手機輸入名稱。
支援的服務 - 根據不同服務選擇如何使用藍芽。請參閱第 59 頁的將**手機用作數據機**或**使用藍芽手機**。
遠端智能咭模式 - 選擇**開啓**或**關閉**。
我的位址 - 檢查您的藍芽位址。

同其他藍芽裝置配對

透過將 KF700 手機同其他裝置配對起來，您可設定一個密碼保護連接。這意味著配對會更安全。

- 1 檢查藍芽是否為**開啓**並**可見**。
您可在**設定**功能表中變更您的可見狀態。
- 2 點按**配對裝置**，然後選擇**新增**。
- 3 KF700 手機將搜尋裝置。
搜尋完成後，屏幕上會顯示**更新**和**新增**。
- 4 選擇要配對的裝置，點按**新增**並輸入通行碼，然後點按**確認**。
- 5 然後，手機將連接到其他裝置，且您必須在此裝置上輸入相同的通行碼。
- 6 密碼保護藍芽連線已準備就緒。

使用藍芽耳機

- 1 檢查藍芽是否為**開啓**。
- 2 遵循隨手機附帶的說明，將手機置於配對模式中並配對裝置。
- 3 點按**是**以**立即連接**。

提示！ 參閱第 21 頁，了解有關**藍芽接聽模式**的詳情，以便在連線藍芽耳機時，可以控制如何接聽來電。

配件

以下配件隨 KF700 手機一併提供。

充電器



USB 線及光碟

在 KF700 和電腦間建立連接並進行同步。



電池



使用手冊

了解更多 KF700。



立體聲耳機



注意事項

- 只可用原裝 LG 配件。
- 不使用原裝 LG 配件，保養可能失效。
- 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商查詢更多詳情。

網絡服務

本手冊所述之無線電話經認可可用於 GSM 900、DCS 1800、PCS1900 及 W-CDMA 網絡。

手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

技術資料

標準

產品名稱：KF700
系統：GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

環境溫度

最高：+55°C（放電）；+45°C（充電）
最低：-10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF700

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.6.1, ETSI EN 301 489-07 V1.3.1
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.3.1
ETSI TS 151 010-1 V7.6.0 specified by ETSI EN 301 511 V9.0.2
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-1 V2.2.1 ETSI EN 301 908-2 V2.2.1,
ETSI EN 300 328 V1.6.1

EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji/ Director

Issued Date

22.Feb. 2008

LG Electronics Inc. Amsterdam Office
Veluwezoom15, 1327 AE Almere, The Netherlands
Tel : +31 -36-547 -8940, e-mail : seokim@lge.com


Signature of representative

安全與有效使用的指引

請閱讀以下簡易的使用指引。
違反這些準則可能會發生危險或觸
犯法律。

射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。本手機型號 KF700 已為遵守無線電波暴露的應用安全要求而設計。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。
- 本型號手機由 DASY4 測試在耳邊使用的最高 SAR 值為 0.36 W/kg (10 克)。

- 採用了電氣與電子工程師學會 (IEEE) 建議 SAR 限制 (即平均 1 克組織 1.18 W/kg) 的國家/地區居民的 SAR 數據資訊。

產品護理及維修



警告

僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他種類可能使手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 請遠離電視、收音機或電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。

- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。

有效手機操作

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可能影響電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提聽筒套件，請使用免提聽筒套件。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子設備，例如立體聲音響及安全設備等。

安全與有效使用的指引

- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。


電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。

- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。



视话机软件或服务提供商而定，
本手册中的部分内容可能与您的
手机有所不同。

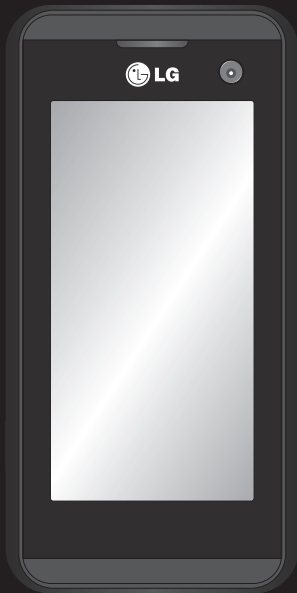

KF700 用户手册

恭喜您购买此款功能先进、外观小巧的 LG KF700 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

设定 01

待机屏幕 02

基本功能 03

高级功能 04

网络 05

管理功能 06

设置 07

配件 08

内容

设定

开始了解您的手机.....	8
打开视图.....	9
安装 USIM 卡和电池.....	10
存储卡.....	12
菜单地图.....	13

待机屏幕

触摸屏提示.....	14
快速键.....	15
状态栏.....	16
从状态栏更改状态.....	17
使用多任务功能.....	17

基本功能

通话.....	18
拨打电话或视频电话.....	18
从电话本拨打电话.....	18
接听和拒绝电话.....	18
来电选项.....	19
调节通话音量.....	19
快速拨号.....	20
查看通话记录.....	20
使用呼叫转接.....	21
使用呼叫限制.....	21
更改常用通话设置.....	21
更改视频通话设置.....	22
电话本.....	23
搜索联系人.....	23

添加新联系人.....	23
联系人选项.....	23
创建群组.....	24
更改联系人设置.....	24
查看信息.....	25
信息.....	26
发送信息.....	26
输入文本.....	26
T9 预测.....	27
Abc 手动.....	27
设置电子邮件.....	27
检索电子邮件.....	28
使用新帐户发送电子邮件.....	28
更改电子邮件设置.....	29
信息文件夹.....	29
管理信息.....	30
使用模板.....	30
使用图释.....	30
更改文本信息设置.....	31
更改多媒体信息设置.....	31
更改其它设置.....	32

高级功能

相机.....	33
快速拍照.....	33
拍照后.....	33
了解取景器.....	34
使用闪光灯.....	35

调整对比度.....	35	为照片添加效果.....	47
使用高级设置.....	35	为照片添加颜色.....	47
更改图像大小.....	36	交换照片中的颜色.....	48
选择色调.....	36	多媒体.....	49
使用内置相机.....	37	我的图像.....	49
查看保存的照片.....	37	我的图像选项菜单.....	49
查看照片详细信息.....	38	发送照片.....	49
摄像机.....	39	使用图像.....	50
快速摄像.....	39	管理图像.....	50
拍摄视频后.....	39	删除图像.....	50
了解取景器.....	40	移动或复制图像.....	50
调整对比度.....	41	标记或去除标记图像.....	50
使用高级设置.....	41	创建幻灯片.....	51
更改视频大小.....	42	查看内存状态.....	51
选择色调.....	42	我的声音.....	52
使用内置摄像机.....	42	使用声音.....	52
观看保存的视频.....	43	我的视频.....	52
照片和视频.....	44	观看视频.....	52
查看照片和视频.....	44	暂停视频时使用选项.....	52
观看视频时调节音量.....	44	发送视频剪辑.....	52
从视频中拍摄图像.....	44	将视频剪辑用作铃声.....	52
查看视频或照片的详细信息.....	44	使用视频选项菜单.....	53
从图片库发送照片或视频.....	45	我的应用程序.....	53
以幻灯片显示方式查看照片.....	45	下载游戏.....	53
将照片设为墙纸.....	46	玩游戏.....	53
编辑照片.....	46	使用游戏选项菜单.....	53
为照片添加文本.....	47	Flash 内容.....	53

内容

查看 SWF 文件.....	54	将事件添加到日历中.....	60
查看 SWF 文件时使用选项.....	54	更改默认日历视图.....	60
文档.....	54	向任务列表添加项目.....	60
将文件传输到手机.....	54	更改任务项.....	60
查看文件.....	54	使用日期计算器.....	61
其它.....	55	设置闹钟.....	61
播放歌曲.....	55	添加备忘录.....	61
创建播放列表.....	55	语音备忘录.....	62
编辑播放列表.....	56	录制声音或语音.....	62
删除播放列表.....	56	发送录音.....	62
搜索电台.....	56	使用计算器.....	63
重置频道.....	57	向世界时钟添加城市.....	63
收听收音机.....	57	换算单位.....	63
		使用秒表.....	63
网络		PC 同步.....	64
访问网页.....	58	在计算机上安装 LG PC 套件.....	64
添加并访问书签.....	58	连接手机和 PC.....	64
保存页面.....	58	备份和恢复手机信息.....	64
访问保存的页面.....	58	在 PC 上查看手机文件.....	64
查看浏览器历史记录.....	58	同步电话本.....	64
更改网络浏览器设置.....	59	同步信息.....	65
将手机用作调制解调器.....	59	将手机用作 Mass Storage 设备.....	65
管理功能		设置	
公文包.....	60	更改屏幕设置.....	66
		更改情景模式.....	66
		更改手机设置.....	66

更改连接设置.....	67
使用内存管理器.....	67
使用蓝牙发送和接收文件.....	68
与其它蓝牙设备配对.....	69
使用蓝牙耳机.....	69
附件	70
网络服务	71
技术参数	71
准则	
关于安全有效使用手机的准则....	74

开始了解您的手机

充电器、数据线、免提连接器

提示：要连接 USB 数据线，请等到手机开机并注册网络。

快捷键

使用快捷方式转盘进入快捷键菜单。您可以在**快捷键拨号设置**中更改菜单顺序。

锁定/解锁键

开机/关机。

结束/电源键

挂断或拒接来电。

开机/关机。

按一次返回



待机屏幕。

清除键

每按一下删除一个字符。使用此键返回一个屏幕。

通话键

拨号及接听来电。

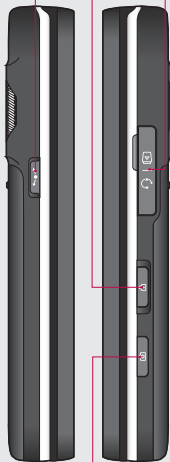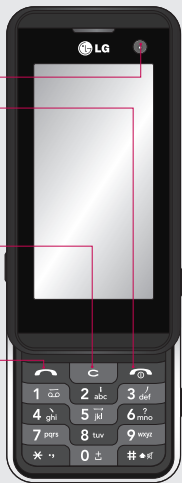

警告：在手机上放置重物或将手机卧放在口袋中可能会损坏手机的 LCD 屏幕及触摸屏的功能。

捕获按钮

打开视图

快捷方式转盘

在相机或视频模式下用于放大或缩小。
在菜单间滚动。

提示：欣赏音乐，玩游戏和通话过程中，可以用来调节音量。

警告：靠近磁体可能会导致转盘键工作不正常。



01

02

03

04

05

06

07

08

安装 USIM 卡和电池




1 卸下电池盖

将电池盖沿手机底部滑动，卸下电池盖。


警告： 不要使用指甲取出电池。

警告： 手机开机时，不要取出电池，这可能会损坏手机。

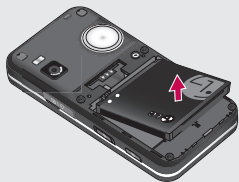

2 卸下电池


抬起电池底边，小心将电池从电池室取出。

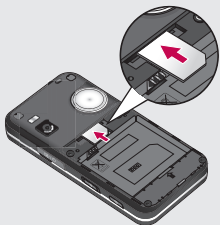

3 安装 SIM 卡


将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 SIM 卡，沿相反的方向轻推。

安装 USIM 卡和电池

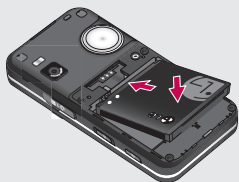

4 安装电池

先将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底部，直至电池卡入到位。

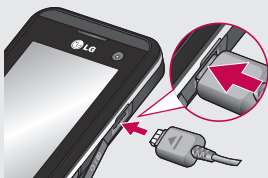

6 充电

推开 KF700 侧面的充电器插槽盖。插入充电器并插入电流插座。只要屏幕上显示“已完全充电”信息，KF700 充电才完成。



5 更换电池盖

将电池盖沿手机顶部滑动，直到卡入到位。

01

02

03

04

05

06

07

08

存储卡

安装存储卡

使用存储卡，可以扩展手机的可用存储空间。KF700 最大支持 4GB 存储卡。

- 1 取下盖子，将存储卡滑入插槽顶部，直到卡入到位。确保金色接触区域面朝上。



- 2 像前面一样替换电池盖。

格式化存储卡

如果已格式化存储卡，您可以开始使用。如果未格式化存储卡，您需要先进行格式化。

- 1 从待机屏幕点触 并选择 。
- 2 依次选择**手机设置**、**内存管理器**和**外部存储器**。
- 3 点触**格式化**，输入密码，密码默认为 0000。存储卡完成格式化，现在，您可以使用了。

- 4 要在 KF700 上查看新格式化的文件夹，请点触 并选择 。选择 **我的文档**。您将看到五个文件夹：“我的图像”、“我的声音”、“我的视频”、“我的应用程序”和“其它”。

有关使用存储卡的详细信息，请参阅第 67 页。


警告： 格式化存储卡时，所有内容将被擦除。如果您不想失去存储卡中的数据，请先备份。

传输电话本

将电话本从 SIM 卡传输到手机：

- 1 从待机屏幕点触 ，然后选择 。
- 2 依次选择**电话本**、**设置**，然后选择**复制或移动**。
- 3 选择**从手机到USIM卡**，然后选择**全部或逐个**。
- 4 点触**确定**确认。

菜单地图

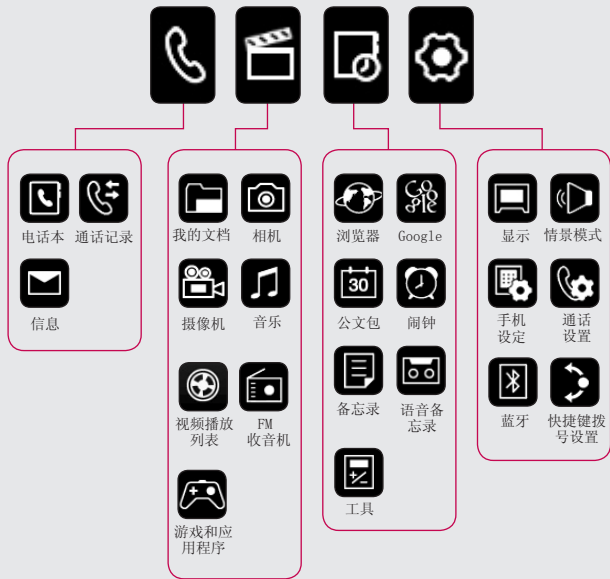

01

02

03

04

05

06

07

08

待机屏幕

不使用 KF700 时，将返回待机屏。在此，您可以访问菜单选项、快速拨打电话和更改情景模式，以及其它一些操作。

触摸屏提示

您也可以在触摸屏上熟悉使用交互式键盘。

要选择一个项目，请准确点触触摸屏上的图标。当 KF700 识别您点触的选项时，会轻微振动。

- 无需大力按，交互式键盘非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到旁边的其它键。
- 屏幕指示灯关时，按手机右侧的锁定/解锁键恢复到待机屏。
- 不要使用手机套，使用金属套可能导致交互式键盘不可用。



▲ 触摸屏

快速键

快速键使您可以一键式轻松访问常用功能。



点触以打开通话屏幕。不滑开手机即可通话。要启用视频通话，请在输入号码后按**视频通话**选项卡。



点触以打开地址簿。电话本中的联系人按字母顺序显示。您也可以创建新的联系人以及编辑现有联系人。有关详细信息，请参阅第 23 页。



点触以创建和发送短信。有关详细信息，请参阅第 26 页。



点触以打开完整菜单，该菜单被划分为四个子菜单。点触每个子菜单的垂直选项卡以查看更多选项。

客户须知

为了使天线保持最佳的灵敏度，LG 建议您按照下图所示的方式持握手机。



通话和使用蓝牙连接期间，请不要用手遮挡天线区域。这可能会降低语音质量。

待机屏幕

状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启动了蓝牙或 GPRS。

下表说明了您可能在状态栏中看到的不同图标的涵义。



图标	说明
	多任务（在子菜单中）
	网络信号强度（指示栏数不同）
	无网络信号
	剩余电量
	电池电量空
	新文本信息
	新语音信息
	收件箱已满
	收件箱已满
	已设置闹钟
	正在使用“标准”情景模式


图标	说明
	正在使用“户外”情景模式
	正在使用“静音”情景模式
	正在使用“耳机”情景模式
	呼叫被转接
	GPRS 可用
	正在使用 EDGE
	正在漫游
	已选择飞行模式
	蓝牙已启动
	HSDPA 可用
	3G 可用


从状态栏更改状态

点触状态栏中显示您当前设置的图标，此时将打开“状态摘要”。将显示当前时间、网络、服务 ID、电池电量、手机内存、外部存储器、情景模式、MP3、飞行模式和蓝牙状态。您可以设置情景模式类型、播放 MP3 和激活/停用飞行模式和蓝牙。

使用多任务功能




如果使用任意功能，您可以在顶部看到“多任务”。点触 打开“多任务”菜单。在此，您可以查看正在运行的所有应用程序，并通过一个点触操作进入该应用程序。

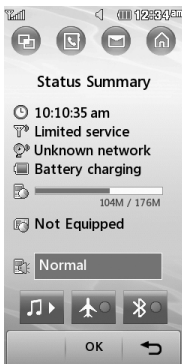
从任何应用程序点触 并选择“主屏”可以返回待机屏幕，而不退出或关闭该应用程序。



通话

拨打电话或视频电话



- 1 滑开手机。
- 2 使用键盘键入号码。
要删除一个数字，请按 C 硬键。
- 3 点触**通话**或按  硬键启动通话。点触  拨打视频通话。
- 4 要结束通话，请按  硬键。


提示! 在滑盖关闭时通话。点触  以打开触摸屏键盘。输入号码，然后按**通话**。

提示! 要输入 + 以拨打国际电话，请按住 0。

提示! 按“锁定/解锁”按钮锁定触摸屏，防止无意拨出电话。

从电话本拨打电话

- 1 从待机屏幕点触  以打开地址簿。
- 2 点触列表中您要呼叫的联系人，如果保存了多个号码，请选择您要使用的那个。
- 3 您可以使用键盘输入要呼叫的联系人的第一个字母。
- 4 点触“通话”或按  硬键启动通话。

提示! 关闭滑盖时，点触  以打开地址簿。使用侧栏滚动或键入联系人姓名的第一个字母，跳转到联系人列表中以该字母开头的部分。

接听和拒绝电话


电话铃响起时，按  硬键接听电话。

按**解锁**，然后按**静音**静音铃声。如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。

提示! 要在滑盖关闭的情况下接听来电，请点触**解锁**，然后选择**接受**。

提示! 要在滑盖关闭的情况下拒接来电，请点触**解锁**，选择**静音**，然后选择**拒接**。

通话选项

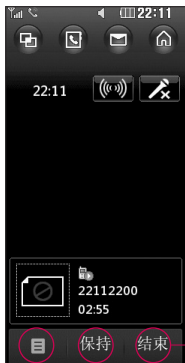

静音 - 点触以关闭麦克风，与您通话的对方将听不到您的声音。

扬声器 - 点触以打开手机扬声器。

结束 - 点触以结束通话。

保持 - 点触以保留通话。点触**恢复**继续通话。

选项 - 从列表中选择其它来电选项，包括**转到电话本**和**转到信息**，以便您在通话过程中查看信息和电话本。您可以通过点触**结束通话**来结束通话。

调节通话音量

要调节通话过程中的音量，请顺时针方向旋转转盘增大音量，或逆时针方向旋转以减小音量。

01

02

03

04

05

06



07


08


通话

快速拨号

您可以为常用联系人指定快速拨号号码。

- 1 点触 ，选择 。
- 2 选择**电话本**，然后点触**快速拨号**。
- 3 语音信箱已设为快速拨号 1。不能对此设置进行更改。点触任意其它号码，为其指定快速拨号联系人。
- 4 此时将打开您的地址簿。点触要指定到该号码的联系人电话号码一次，以选择该联系人。

要呼叫快速拨号号码，请滑开手机，按住指定的数字，直到屏幕上显示该联系人。将自动启动呼叫，无需再按 。

提示！ 滑盖关闭时，请点触 。选择您要呼叫的联系人，点触并按住其号码。将自动启动呼叫。

查看通话记录

提示！ 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

如果按 ，手机将显示通话列表。

屏幕顶部有两个箭头，用来在以下选项间滚动：

所有通话 - 查看所有已发送呼叫、已接来电和未接来电的完整列表。


已发送呼叫 - 查看所有已拨打的电话的列表。

已接来电 - 查看所有已接来电的列表。

未接来电 - 查看您没接到的所有电话的列表。



通话费用 - 查看您拨打电话所产生的费用（此服务取决于网络，某些运营商不支持此服务）、所有电话的通话时间（已接听和已拨打）。

数据量 - 查看所有已接收和发送数据的字节数（KB）。

提示！ 从通话记录中点触  和**全部删除**，可删除所有录制的项目。

提示！ 点触任意单个通话记录条目，然后点触**查看**以查看通话日期、时间和时长。



使用呼叫转接

- 1 点触 ，选择 ，然后选择**通话设置**。
- 2 点触**呼叫转移**，然后选择**语音电话**或**视频电话**。
- 3 选择转接电话的情况：转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接，然后点触**激活**。
- 4 输入您要转接的号码。
- 5 点触**转接**以激活。

备注：转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

提示！ 要关闭所有通话转接，请从**呼叫转接**菜单中选择**关闭全部**。


使用呼叫限制

- 1 点触 ，选择 ，然后选择**通话设置**。
- 2 点触**呼叫限制**，然后选择**语音电话**或**视频电话**。
- 3 选择以下五个选项中的一项或所有项：
 - 所有拨出电话
 - 拨出的国际电话
 - 国际漫游时拨打电话
 - 所有来电
 - 国际漫游时来电

- 4 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

提示！ 从**通话设置**菜单中选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。如果创建固定拨号列表，仅可从手机呼叫列表中的号码。

更改常用通话设置

- 1 点触 ，然后选择**通话设置**。
- 2 点触**通用设定**。在此，您可以修改以下设置：
 - 拒接来电** - 选择**开**或**关**，然后选择拒接所有来电、拒接来自特定群组或联系人的来电、拒接未注册号码（不再电话本中的号码）或拒接未启用来电图片的呼叫对象的电话。
 - 发送我的号码** - 选择当您呼叫对方时是否显示您的号码。
 - 自动重拨** - 选择**开**或**关**。
 - 接听模式** - 选择接听电话的方式：**仅发送键**、**滑开**或**按任意键**。
 - 分钟提示** - 选择**开**，在通话过程中每一分钟将听到一次提示音。

通话

蓝牙接听模式 - 选择**免提**可使用蓝牙耳机接听来电，或选择**手机**在使用蓝牙耳机时按手机任意键接听来电。



保存新号码 - 选择**是**或**否**。

滑盖关闭设置 - 选择在通话过程中关闭滑盖会造成什么影响。可选择**结束通话**或**继续通话**。

选择线路 - 选择线路1或线路2。

提示! 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

更改视频通话设置

- 1 点触 ，选择 ，然后选择**通话设置**。
- 2 点触**视频通话设置**。
- 3 选择视频通话的设置。确定是选择**使用个人图像**还是**选择个人图像**，然后打开**镜像**（您可以在屏幕上看到自己）。

电话本




搜索联系人

有两种方式可搜索联系人：

从待机屏幕

从待机屏幕点触  以打开地址簿。

从主菜单



- 1 点触 ，轻触  并选择**电话本**。然后点触“搜索”。
- 2 点触列表中您要呼叫的联系人，如果保存了多个号码，请选择您要使用的那个。
- 3 您可以使用键盘输入要呼叫的联系人第一个字母以跳转到该部分。
- 4 点触**通话**或按  硬键启动通话。

添加新联系人

- 1 点触 ，轻触  并选择**电话本**。
- 2 点触**添加**。
- 3 选择是将联系人保存到**手机**还是**USIM 卡**。
- 4 输入新联系人的姓氏和名称。您无需同时输入姓氏和名称，但必须输入一个。
- 5 输入号码，点触  可输入更多号码。例如，您可以输入不同的号码，包括手机、住宅电话、办公室电话、传呼机和传真。每次输入后，请点触**保存**。


- 6 随后，您最多可以添加两个电子邮件地址。
- 7 将此联系人分配到某个群组。从以下选项选择：**无群组、家人、朋友、同事、学校或重要人士**。
- 8 您还可以添加图像、铃声、主页、家庭地址、公司名称、职位、公司地址和备忘录。
- 9 点触**保存**以保存联系人。

提示！ 您可以为联系人创建自定义群组，请参阅第 24 页的**创建群组**。

提示！ 滑盖关闭时，点触  并键入联系人号码。点触 ，选择**保存号码**，然后选择**添加新名称**。

联系人选项

查看联系人时，您可以执行多项操作。以下显示如何进入并使用选项菜单：

- 1 打开您要使用的联系人。请参阅第 23 页的**搜索联系人**。
- 2 按  打开选项列表。在此，您可以：
 - 编辑** - 更改联系人的任何详细信息。
 - 发送信息** - 向联系人发送信息。如果联系人有电子邮件地址，请选择

01

02

03

04

05

06

07

08

电话本

择是发送电子邮件还是短信/彩信。有关如何发送信息的详细信息，请参阅第 26 页。




发送方式 - 将联系人的详细信息作为名片发送给其他人。选择以**文本信息**、**多媒体信息**，使用**电子邮件**还是通过**蓝牙**发送。

拨打视频电话 - 视频呼叫联系人。


保存到手机 - 选择是将联系人保存到 USIM 卡还是手机。

删除 - 删除联系人。如果确定，请点触是。

创建群组

- 1 从待机屏幕点触  和 ，然后选择**电话本**。
- 2 选择**群组**，然后点触 。
- 3 选择**新增群组**。
- 4 输入新群组的名称。
- 5 点触**保存**。



备注：如果您删除一个群组，分配至该群组的联系人不会被删除。他们仍将保留在地址簿中。

提示！ 您可以通过突出显示现有群组并点触  以编辑它。选择以通过电话本向群组添加成员，指定群组铃声、重命名群组或删除群组。

更改联系人设置

您可以调整电话本设置以使地址簿根据需要工作。

提示！ 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 从待机屏幕点触 ，然后点触 。选择**电话本**，然后选择**设置**。
- 2 在此，您可以调整以下设置：
联系人列表设置 - 选择要查看的联系人的保存位置：**手机 + USIM卡**、**仅限手机**或**仅限 USIM卡**。您还可以选择是先显示联系人的姓还是名。
同步电话本 - 连接到服务器以同步电话本。请参阅第 65 页的**同步电话本**。
复制 - 将联系人从 USIM 卡复制到手机，或从手机复制到 USIM 卡。请选择是一次复制一个还是全部复制。如果选择一次复制一个，您需要逐个选择每个联系人以进行复制。
移动 - 工作原理与**复制**相同，但是，联系人进保存在目标移动位置，例如，如果您将联系人从

USIM 卡移动到手机，那么它将从 USIM 卡内存中删除。



通过蓝牙发送所有联系人 - 使用蓝牙将所有联系人发送到其它设备或计算机。

备份电话本 - 请参阅第 76 页的**备份和恢复手机信息**。

恢复电话本 - 请参阅第 76 页的**备份和恢复手机信息**。

清空电话本 - 删除所有联系人。如果确定要清空地址簿，请点触**是**。

查看信息

- 1 从待机屏幕点触  和 ，然后选择**电话本**。
- 2 选择**信息**。
- 3 在此，您看恶意查看**服务号码、本机号码、内存信息**（剩余多少存储空间）以及**我的名片**。




提示！ 如果您为自己添加了名片，选择**添加**并输入所有您可能为其他联系人输入的详细信息。点触**保存**完成。

信息



信息


KF700 将短信、彩信和电子邮件结合到一个直观易使用的菜单中。


有两种方式进入信息中心：

- 1 从待机屏幕点触 。
- 2 从待机屏幕点触 ，然后点触  并选择“信息”。

发送信息

- 1 点触 ，然后选择**创建新信息**。
- 2 选择**信息**以发送短信或彩信。或者，选择**电子邮件**以发送电子邮件。有关详细信息，请参阅第 29 页。
- 3 此时将打开短信或电子邮件。照常撰写信息。
- 4 点触 ，然后点触**插入**以添加图像、视频、声音或其它信息，包括联系人详细信息。
- 5 点触**发送**。从列表中选择一个人，然后按**选择**或键入新号码。您可以添加多个联系人。


 **警告：** 您将按每个收件人每条文本信息 160 个字符付费。


 **警告：** 如果在短信中添加图像、视频或声音，则短信将自动转换为彩信，您需要支付相应费用。

输入文本

有两种方式可输入文本：T9 预测和 ABC 手动。

要在文本输入法之间切换，请点触屏幕顶部对应的图标。

 **T9 预测性文本、Abc 手动** - 点触以打开 T9 预测性文本，然后选择 T9 abc、T9Abc、T9ABC、123。再次点触关闭 T9 预测。

 **Abc 手动** - 选择 abc、Abc、ABC 或 123。


要输入空格，请点触 **0**。

要删除一个字符，请使用屏幕下方的 **C** 硬键。

要输入符号，请点触  或哈希键。

T9 预测

T9 模式使用内置字典，根据您点触按键的顺序识别您写入的内容。只需点触与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。例如，依次按 8、3、5、3、7、4、6、6、3 以输入“telephone”。如果对于您的按键有多个选择，屏幕上会显示一个列表。点触屏幕选择所需内容。

如果所需单词未显示，请点触  并选择**添加至自订字库**。使用 Abc 手动模式输入单词，您输入的单词或名称将被添加到词典中。

Abc 手动

在 Abc 模式中，您必须重复点触按键以从可用选项中选择。例如，要写入“hello”，需要点触两次 **4**、两次 **3**、三次 **5**，再点触三次 **5**，最后点触三次 **6**。

设置电子邮件

使用 KF700 中的电子邮件，您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件账户非常快捷。

提示! 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 点触 ，然后选择**设置**。
- 2 点触**电子邮件**，然后点触**电子邮件账户**。
- 3 打开  并点触**新增**。
- 4 随后，您将进入电子邮件设置向导。遵守提供的说明，点触“继续”继续。您需要下列详细信息：
 - 标题** - 输入账户名称。
 - 我的名称** - 输入您的名称。
 - 用户名** - 输入帐户的用户名。
 - 密码** - 输入账户密码。
 - 电子邮件地址** - 输入账户的电子邮件地址。
 - 电子邮件回复地址** - 输入“回复”电子邮件地址。
 - 发送邮件服务器** - 输入账户的详细信息。
 - 接收邮件服务器** - 输入账户的详细信息。

信息

最大接收字节数 - 选择电子邮件的大小限制，最大为 1MB。

邮箱类型 - 输入邮箱类型：POP3 或 IMAP4。

保存到服务器 - 选择是否将电子邮件保存到服务器。对于 IMAP4 账户，始终保存副本。

保存已发送邮件至 - 选择是否保存 IMAP4 电子邮件。对于 POP3 账户，副本始终保存在手机中。

接入点 - 选择 Internet 接入点。按 **+** 使用预设的接入点。

自动检索 - 选择是否自动检索新电子邮件。

高级设置 - 选择是否使用高级设置。

SMTP 端口号 - 通常为 25。

接收服务器端口 - 通常，对于 POP3 账户为 110；对于 IMAP4 账户为 143。

SMTP 认证 - 选择发送邮件服务器的安全设置。

SMTP 用户名 - 输入 SMTP 用户名。

SMTP 密码 - 输入 SMTP 密码。


APOP 安全登录 - 选择可为 POP3 账户激活 APOP 安全登录。IMAP4 账户通常设置为“关”。

现在，已经设置了您的账户，它将显示在“电子邮件”文件夹的账户列表中。


检索电子邮件

您可以自动或手动检查账户的新电子邮件。要自动查看，请参阅“更改电子邮件设置”。

手动查看：

- 1 点触  和 **设置**，然后点触 **电子邮件**。
- 2 点触 **检索间隔**，然后选择打开自动检索的间隔时间。

使用新帐户发送电子邮件

- 1 点触 ，然后选择 **新建**。
- 2 选择 **电子邮件**，此时将打开新电子邮件。
- 3 输入收件人的地址，然后写信息。点触回形针符号以附加图像、视频、声音或其它类型的文件。
- 4 点触 **发送**，您的电子邮件将被发送。

提示！ 您可以通过电子邮件将 Word、Excel、PowerPoint 和 PDF 文档发送到 KF700，以便您可以在旅途中查看它们。

更改电子邮件设置

您可以调整电子邮件设置以使电子邮件根据需要工作。在设置向导过程中，您已输入部分信息。

提示！ 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 点触 ，然后打开**设置**。
- 2 依次点触**电子邮件**和**电子邮件账户**，然后，您可以调整以下设置：
 - 允许回复电子邮件** - 选择是否允许发送“读取确认”邮件。
 - 请求回复电子邮件** - 选择是否要请求“读取确认”邮件。
 - 检索间隔** - 选择 KF700 查看新电子邮件信息的频率。
 - 转发或回复时包括信息** - 选择是否包含原始信息。
 - 包含附件** - 选择可包含原始附件。
 - 漫游时自动检索** - 选择漫游时是自动检索邮件或停止自动检索。
 - 新电子邮件通知** - 选择是否对新电子邮件进行提醒。

签名 - 创建电子邮件签名并打开此功能。

优先级 - 选择电子邮件信息的优先级级别。

信息文件夹

您可以识别 KF700 中的文件夹结果，完全无需进行说明。

收件箱 - 您接收到的所有短信和彩信将放置在收件箱中。在此，您可以进行回复、转发等操作，有关详细信息，请参阅以下内容。

邮箱 - 您接收到的所有电子邮件信息都放置在邮箱内。如果您有多个电子邮件账户，设置的信息将放置在相应账户中。

草稿箱 - 如果您来不及写完一条信息，您可以将已写信息保存在此。

发件箱 - 这是发送信息时的临时存储文件夹。

已发信息 - 您发送的所有信息将放置在“已发送的项”文件夹中。



我的文件夹 - 新建个人文件夹以管理您的信息。

信息

管理信息

您可以使用收件箱管理信息。

提示! 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。



- 1 点触 ，然后点触**收件箱**。
- 2 点触 ，然后选择：
 - 回复** - 回复选定的信息。
 - 转发** - 将选定信息发送给其他人。
 - 通话** - 向发件人拨打语音或视频电话。
 - 删除** - 删除信息。
 - 创建新信息** - 打开新的空白信息或电子邮件。
 - 标记/去除标记** - 标记多条信息或将其移至不同文件夹。
 - 复制和移动** - 选择以对信息进行备份，或将其移至不同文件夹。
 - 过滤器** - 按类型查看信息。这可以将短信和彩信分开。
 - 信息** - 查看信息的其它信息，如，发送时间。

如果看到信息**无空间接收 USIM 卡信息**，您应从收件箱中删除一些信息。

如果看到信息**无空间接收信息**，您可以删除信息或保存的文件以腾出空间。



使用模板

为您最常使用的短信和彩信创建模板。手机中已有一些模板，您可以根据需要进行编辑。

- 1 点触 ，然后选择**模板**。
- 2 选择**文本模板**或**多媒体模板**。随后，您可以点触  对文本模板执行添加、编辑、删除或全部删除操作，或对多媒体模板执行添加、写多媒体信息或编辑操作。

使用图释


使用图释，使您的信息更具趣味性。手机中已有一些常用图释。

- 1 点触  并选择**图释**。
- 2 点触  以**新增、编辑、删除或全部删除**图释。

更改文本信息设置

KF700 已预定义信息设置，因此，您可以立即发送信息。如果您要更改设置，请参阅以下内容获取详细信息。

提示！ 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

点触  并选择**设置**，然后选择**文本信息**。您可以更改：

文本信息中心 - 输入信息中心的详细信息。

状态报告 - 选择可接收信息已发送确认信息。


有效期 - 选择信息在信息中心中的最常保存时间。

信息类型 - 将文本转换为**文本**、**语音**、**传真**、**X.400** 或**电子邮件**。

字符编码 - 选择字符编码方式，这将影响信息大小并因此产生数据费用。

将长文本另发送为 - 选择是以**多条短信**或一条**彩信**发送。

更改多媒体信息设置

点触  并选择**设置**，然后选择**多媒体信息**。您可以更改：

检索模式 - 选择是**本地**还是**漫游**网络。如果选择**手动**，那么您仅会收到彩信通知，随后，您可以决定是否要完整下载该信息。

状态报告 - 选择是否允许请求状态报告。

已读回执 - 选择是否允许发送已读回执。

优先级 - 选择多媒体信息的优先级级别。

有效期 - 选择信息在信息中心中的最常保存时间。

幻灯片持续时间 - 选择幻灯片在屏幕上显示多长时间。

发送时间 - 在指定时间发送信息。

多媒体信息中心 - 输入信息中心的详细信息。

备注：有关如何更改电子邮件设置的详细信息，请参阅第 29 页。

信息

更改其它设置

点触  并选择**设置**，然后选择：

视频邮件 - 如果您的运营商支持此服务，您可以创建一个新的账户。


语音邮件 - 语音邮件服务已设置，您仍可以在此添加新的语音邮件服务。

服务信息 - 选择是接收还是阻止服务信息。您也可以通过创建可信和不可信发件人列表来设置信息安全。

信息服务 - 选择接收状态、语言和其它设置。


相机


快速拍照


- 1 按手机右侧的  键。
- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 轻按拍摄按钮。
相机尝试对焦时，屏幕中键白色的取景器框将变为红色。
- 4 对焦框变绿时，表示相机已对焦。
- 5 完全按下拍摄按钮。


拍照后


拍好的照片将显示在屏幕上。图像名称滚动显示在屏幕底部，并显示五个图标。

 点触可以立即拍摄其它照片。将保存您的当前照片。

 点触可以查看摄像册中的其它照片。将保存您的当前照片。有关**查看保存的照片**的信息，请参阅第 37 页。

 点触可以通过信息、电子邮件、蓝牙或记入发送照片。您也可以使用蓝牙打印照片。有关**发送信息**的信息，请参阅第 26 页，有关**使用蓝牙发送和接收文件的信息**，请参阅第 68 页。

 点触可以将刚刚拍摄的照片设为墙纸。

 点触可以删除您刚刚拍摄的照片，按**是**确认删除。此时将出现取景器。

01

02

03

04

05


06

07

08

相机


了解取景器

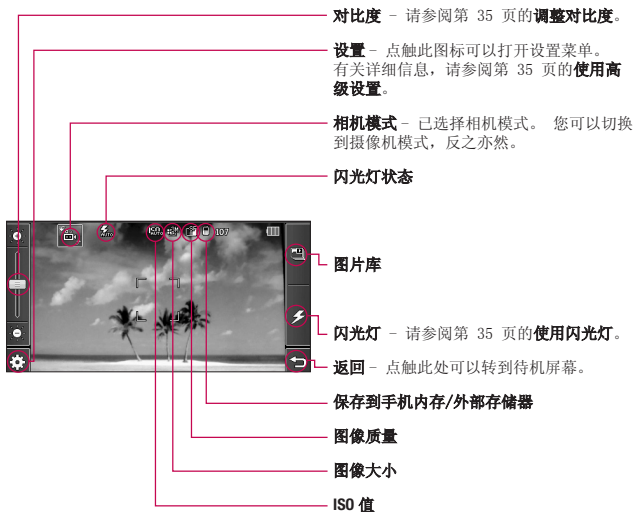

提示! 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要调用选项，请再次点触屏幕。

使用闪光灯

闪光灯默认为“自动”，此外还有其它选项。

1 选择取景器右中部的  进入闪光灯子菜单。

2 有四个闪光灯选项：

自动 - 相机将自动评估拍摄好照片所需的光照条件，并在需要时使用闪光灯。

拍照时 - 仅在拍照时出现闪光灯。



始终打开 - 在相机模式下，始终打开闪光灯。

始终关闭 - 相机从不使用闪光灯。此选项有助于节省电池电量。

3 点触您要使用的闪光灯选项。

4 选择后，闪光灯菜单将自动关闭，您就可以拍照了。


调整对比度


对比度定义图像的深浅差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。沿滚动条滑动对比度指示器， 对应对比度更低、更模糊的图像， 对应对比度更高、更清晰的图像。


使用高级设置


从取景器中点触  以打开所有高级设置选项。





 **图像大小** - 更改保存在内存中的照片大小，或预设的拍摄照片的大小，使其大小适用于电话本。请参阅第 36 页的**更改图像大小**。

 **图像质量** - 在**超精细**、**精细**和**标准**之间选择。质量越精细，照片将越清晰，同时，文件更大，这意味着内存中可存储的照片越少。


 **白平衡** - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动**、**白炽灯**、**日光**、**荧光灯**或**阴天**中选择。


 **色调** - 选择适用于您所拍摄的照片的色调。请参阅第 37 页的**选择色调**。

 **自拍器** - 自拍器允许您设置按下拍摄按钮后的延迟。从**3秒**、**5秒**或**10秒**中选择。如果照片中要包括您自己，自拍器非常有用。


 **夜间模式** - 选择**关**或**开**。此模式适用于在夜间拍摄照片。


相机


 **连拍** - 相机可以连续拍摄一系列照片（三张、六张或九张），适用于录制快速活动对象。


 **相框拍摄** - 您可以选择为拍摄的照片应用相框。


 **ISO** - ISO 确定相机的光照传感器的感光性。ISO 越高，相机感光性能越好。在较黑的光照条件下，当不能使用闪光灯时，这非常有用。从**自动**、**ISO 100**、**ISO 200**、**ISO 400**或**ISO 800**中选择 ISO 值。

 **快门声音** - 从三种快门声音中选择一种。

 **切换相机** - 切换为 LG KF700 的**内置相机**或**外相机**。有关详细信息，请参阅第 37 页的**使用内置相机**。

 **已用内存** - 选择是将照片保存到**手机内存**还是**外部存储器**。

 **广角视图** - 选择关或开。



 **重设设置** - 选择是重启手机，恢复为初始相机设置。

备注：要应用所做的更改，请始终在选择新设置后点触关闭。



提示！ 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量时，您将在设置菜单下预览到图像更改效果。退出之前，请记得点触**关闭**以应用更改。

更改图像大小

像素越高，文件越大，同时意味着将占用更多内存。如果要在手机中保存更多图片，请更改像素大小，使文件更小。

- 1 从取景器点触左下角的 。
- 2 从设置菜单中选择 。
- 3 从 5 个数字选项中选择像素值（**3M：2048x1536**、**2M：1600x1200**、**1M：1280x960**、**640x480**、**320x240**）或选择预设值：
电话本 - 将相机拍摄的照片设为可添加到手机联系人的合适大小。



选择色调


- 1 从取景器点触左下角的 。
- 2 从设置菜单中选择 。
- 3 有 6 个色调选项：**标准**（彩色）、**黑白**、**反色**、**棕褐色**、**素描**、**曝光**。
- 4 点触您要使用的色调，然后选择**关闭**。



提示! 您可以将照片从彩色更改为黑白或怀旧，但是，您不可以将黑白或怀旧照片还原为彩色。

使用内置相机




LG KF700 拥有 640x480 的内置相机，不仅可用于视频通话，还可用于拍照。


- 1 要切换到内置相机，请点触 ，然后选择 。然后选择内置相机。
- 2 几秒钟后，您将在取景器中看到您自己。要拍照，请像拍摄普通照片一样按下拍摄按钮。

提示! 内置相机下包含的设置较少，例如，它没有 Flash 或 ISO 选项。您还可以通过点触  更改图像大小、图像质量、白平衡等，方式与使用主相机相同。

- 3 拍照后，您可用的选项与使用主相机拍照后提供的选项一样。
- 4 要返回主相机，请点触  和 。

查看保存的照片

- 1 您可以通过相机模式或从待机屏幕访问保存的照片。从取景器中点触  即可。从待机屏幕中，您点触 ，然后选择 。选择**我的文档**，然后选择**我的图像**。
- 2 屏幕上将显示您的图片库。

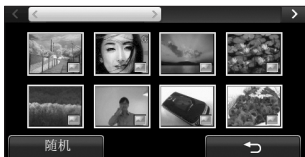

01

02

03

04

05



06

07

08

相机

查看照片详细信息

- 1 点触照片一次，然后点触  出现的图片。
- 2 照片顶部将显示名称、拍摄日期、大小（千字节和像素）以及图像类型。
- 3 点触  关闭详细信息并查看照片。

摄像机

快速摄像

- 1 按手机右侧的相机键。
- 2 点触取景器中的摄像机图标以切换到视频模式。屏幕上将显示摄像机的取景器。
- 3 水平放置相机，将镜头对准要拍摄的物体。
- 4 按拍摄按钮一次，开始录制。
- 5 **REC** 和计时器将显示在取景器底部。
- 6 要暂停视频，请点触 ，要恢复录制，请选择 。
- 7 点触屏幕上的  或再按一次拍摄按钮停止录制。

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。图像名称在屏幕底部显示，屏幕右侧将显示三个图标。



点触可以立即拍摄另一段视频。将保存您的当前视频。



点触可以查看摄像册中的其它视频剪辑。将保存您的当前视频剪辑。有关**观看保存的视频**的信息，请参阅第 43 页。



点触可以删除您刚拍摄的视频，点触**是**确认删除。此时将出现取景器。



点触可以通过信息、电子邮件、蓝牙或YouTube发送视频。有关**发送信息**的信息，请参阅第 26 页，有关**使用蓝牙发送和接收文件**的信息，请参阅第 68 页。

01

02

03

04

05

06

07

08

摄像机

了解取景器



提示！ 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要调用选项，请再次点触屏幕。

调整对比度

对比度定义图像的深浅差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。

沿滚动条滑动对比度指示器，☀️ 对应对比度更低、更模糊的图像，☀️ 对应对比度更高、更清晰的图像。

使用高级设置

从取景器中点触 ⚙️ 以打开所有高级设置选项。



📷 **图像大小** - 更改保存在内存中的视频大小。请参阅第 42 页的**更改视频大小**。

📷 **图像质量** - 在**超精细**、**精细**和**标准**之间选择。质量越精细，视频将越清晰，同时，文件更大，这意味着内存中可存储的视频越少。

📷 **白平衡** - 白平衡确保视频中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从自

动、白炽灯、日光、荧光灯或阴天中选择。

📷 **色调** - 选择适用于您所拍摄的照片的色调。请参阅第 42 页的**选择色调**。

📷 **持续时间** - 选择**标准**或限制视频以使其适应**彩信**。

📷 **夜间模式** - 选择关或开。

📷 **视频** - 选择**静音**在拍摄视频时不录制声音。

📷 **切换相机** - 切换到 LG KF700 的内置相机以为您自己录制一段视频。

有关详细信息，请参阅第 42 页的**使用内置摄像机**。

📷 **已用内存** - 选择是将视频保存到手机内存还是**外部存储器**。





📷 **重设设置** - 选择“是”重启手机，恢复为初始视频设置。

提示! 设置菜单层叠在取景器之上，因此，当您更改视频颜色或质量时，您将在设置菜单下预览到取景器更改效果。

摄像机



更改视频大小

像素越高，文件越大，同时意味着将占用更多内存。如果要在手机中保存更多视频，请更改像素大小，使文件更小。

- 1 从取景器点触左下角的 。
- 2 从设置菜单中选择 。
- 3 从 2 个选项中选择像素值：
 **320x240** - 图像较小，因此文件较小。适用于保存在内存中。
 **176x144** - 图像最小，文件最小。

提示! 有关视频格式转换软件，请查看 KF700 随附的 CD。

选择色调





- 1 从取景器点触左下角的 。
- 2 从设置菜单中选择 。
- 3 有 7 个色调选项：**标准**（彩色）、**黑白**、**反色**、**棕褐色**、**素描**、**曝光**和**浮雕**。
- 4 选择后，请点触**关闭**，所做更改将显示在取景器上。


提示! 您可以将拍

摄的视频从彩色更改为黑白或怀旧，但是，您不可以将拍摄的黑白或怀旧视频还原为彩色。




使用内置摄像机

LG KF700 拥有 320x240 的内置摄像机，不仅可用于视频通话，还可用于录制视频。

- 1 要切换到内置相机，请点触  并选择 。
- 2 几秒钟后，您将在取景器中看到您自己。要开始录制图像，请像拍摄普通照片一样按下拍摄按钮，再按一次停止录制。
- 3 拍摄视频后，您可用的选项与使用主摄像机拍摄视频后提供的选项一样。
- 4 要返回主相机，请点触  和 。

提示! 您还可以通过点触  更改视频大小、视频质量、长度、静音、白平衡、色调等，方式与使用主相机相同。

观看保存的视频

- 1 从取景器中点触  即可。从待机屏幕中，您应点触 ，然后选择  和**我的文档**，然后选择**我的视频**。
- 2 屏幕上将显示您的图片库。
- 3 点触您要查看的视频一次，将其调到图片屏幕的前方。
- 4 再次点触该视频，完全打开。

01

02

03

04

05



06

07


08

照片和视频

查看照片和视频

- 1 从取景器中点触  即可。
- 2 屏幕上将显示您的图片库。
- 3 点触您要查看的视频或照片一次，将其调到图片屏幕的前方。
- 4 再次点触该视频或照片，完全打开。
- 5 视频即开始自动播放。
要暂停播放，请点触屏幕以打开选项，然后选择 。




提示！ 通过点触屏幕底部的**标准**或**随机**更改照片和视频在图片库中的显示方式。

提示！ 要删除照片或视频，请打开它，然后选择 。点触**是**确认。

观看视频时调节音量

要在播放视频时调整音频音量，请点触屏幕底部的音量键。此外，还可以使用相机镜头旁边的转盘。

从视频中拍摄图像



- 1 选择您要从中拍摄图像的视频。
- 2 点触  以暂停您要从中拍摄照片的视频。
- 3 点触 。
- 4 选择**保存**。
- 5 屏幕上将显示图像，以及为其指定的名称。
- 6 点触图像，然后点触  返回图片库。
- 7 图像将保存在“我的文档”的**我的图像**文件夹中，并显示在图片库中。您需要退出图片库，然后重新打开以显示该图像。

警告： 如果手机中没有录制多媒体文件，某些功能可能无法使用。



查看视频或照片的详细信息

在图片库中，视频和照片分组在一起。

如果您无法区分哪些是照片，哪些是视频，请查看详细信息。例如，视频可能是 AVI 或 3GP 文件类型，而照片可能是 JPEG 或 GIF 文件类型。

- 1 点触静态视频或照片，将其调到图片屏幕的前方。然后点触  查看更多信息。
- 2 此时将显示静态视频或照片的详细信息，包括名称、拍摄日期、大小（KB 和像素），以及是图像还是视频（MP4/3GP 或 JPEG）。
- 3 点触  以关闭详细信息并查看静态视频或照片。


从图片库发送照片或视频

- 1 点触照片或视频两次以打开它。如果选择视频，请在播放时按 。
- 2 选择  并选择您要发送视频或照片的方式：**信息、电子邮件、蓝牙**。
- 3 所选信息应用程序将打开，您可以发送视频或照片。


备注：在通过彩信发送照片或视频前，可能需要调整其大小。某些视频可能太大，根本无法通过多媒体信息发送，在这种情况下，请选择其它发送选项。


以幻灯片显示方式查看照片


幻灯片模式允许以幻灯片的形式一次性显示图片库中的所有照片。无法以幻灯片模式观看视频。


- 1 点触您要开始以幻灯片放映的照片两次，以打开它。
- 2 选择左侧的 。
- 3 开始幻灯片放映。



幻灯片放映中有 5 个选项：

 点触以全屏模式显示照片。左侧的栏可以加快或减慢幻灯片放映速度。

 点触此处以随即方式查看照片（即，不以图片库中显示的时间顺序放映）。


 点触可以跳到下一张照片。

 点触可以返回上一张显示的照片。

 /  点触可以在放映到特定照片时，暂停幻灯片放映。再次点触以恢复播放。


照片和视频

将照片设为墙纸

- 1 点触您要设为墙纸的照片两次，以打开它。
- 2 点触 。
- 3 屏幕将切换到肖像模式。选择要将其设为墙纸的照片部分。此区域中的图像以实际大小显示在屏幕中。
- 4 对选择满意后，请点触**设置**。



编辑照片

您可以对照片进行多方面的更改、修饰或使其更具趣味性。



- 1 打开您要编辑的照片，点触  以显示选项。



- 2 点触图标以调整照片：


 徒手对照片进行绘制更改。通过四个选项选择线条粗细。要更改线条颜色，请参阅 （颜色图标将更改为您选择的颜色）。


 请参阅第 47 页的**为照片添加文本**。

 使用标记修饰照片。从可用的标记中进行选择，点触照片中要放置标记的位置。要更改标记的颜色，请参阅下面的 。

 选择照片的矩形区域。


保存到 保存您对照片所做的更改。选择是将更改保存在**源文件**中，还是另存为**新文件**。如果选择**新文件**，请输入文件名。

 更改标记、线条或部分文本的颜色。在绘制、写或对照片添加标记之前，您必须选择颜色。

 撤消您上次对照片进行的编辑。

 请参阅第 47 页的**为照片添加效果**。

更多 点触可以打开更多效果选项，包括**旋转**和**镜像**。此外还有一些高级编辑选项。请参阅第 48 页的**添加色调**和**交换照片中的颜色**。

 点触可以返回图片库。

为照片添加文本

- 1 从编辑屏幕点触 **T**。
- 2 输入所需字母。
- 3 使用键盘输入文本，然后点触**完成**。
- 4 通过点触文本来移动它，然后将其拖到所需位置。

为照片添加效果

- 1 从编辑屏幕点触 **效果**。
- 2 选择为照片应用 6 个选项中的任意一个：
 - 弱化** - 沿滚动条移动滑块，弱化照片对焦效果。选择**完成**以保存更改或选择**取消**。
 - 锐度** - 沿滚动条移动滑块，锐化照片对焦效果。选择**完成**以保存更改或选择**取消**。
 - 马赛克** - 点触以为照片应用马赛克效果。点触 **←** 返回正常照片。
 - 色彩效果** - 更改照片的颜色：**黑白**、**棕褐色**、**彩色负片**、**增强 RGB** 或**对比度**。如果选择**对比度**，沿滚动条移动滑块，以增强或降低对比度。
 - 相框** - 为照片添加相框。手机会提示您是否允许更改图像大

小。要查看相框类型，请选择**是**。所选相框将层叠在您的照片之上。**调整大小** - 点触此处获取大小选项。点触所需尺寸，更改照片大小。

- 3 要撤消效果，点触 **←** 即可。


提示！ 您可以为照片添加多种效果，颜色效果除外，您一次只能选择一种颜色。

为照片添加颜色

- 1 从编辑屏幕点触 **更多**。
- 2 选择**色彩**。
- 3 选择照片中的一部分。该区域中所有具有相同或类似颜色的内容周围将显示一条轨迹线。例如，某人的头发或外衣。
- 4 点触**保存**。
- 5 照片中的所有颜色都将清除，除了作颜色标记的部分。
- 6 向上或向下移动亮度栏的滑块，调整颜色亮度。
- 7 选择**保存**以保存所做的更改。



照片和视频

交换照片中的颜色

- 1 从编辑屏幕点触 **更多**。
- 2 选择**色彩交换**。
- 3 选择照片中的一部分。该区域中所有具有相同或类似颜色的内容周围将显示一条轨迹线。
例如，某人的头发或外衣。
- 4 点触 ，然后选择一种颜色。
- 5 按**切换**。
- 6 照片选定部分的颜色将更改为选定的颜色。
- 7 选择**保存**以保存所做的更改。

多媒体

您可以将任意多媒体文件存储到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

要访问“多媒体”菜单，请点触 ，然后点触 。点触**我的文档**以打开文件夹列表，该列表保存您所有的多媒体文件。

我的图像

我的图像包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

点触  将视图从缩略图更改为列表。

我的图像选项菜单

点触  查看选项。

我的图像中可用的选项取决于您选择的图像类型。对于手机相机拍摄的照片，所有选项均可用；对于默认图像，仅可使用**用作**、**通过蓝牙打印**、**排序方式**和**内存信息**选项。

提示! 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

发送 - 向朋友发送图像。

用作 - 设为在特定时间显示的图像。

标记/去除标记 - 选择多个文件。

移动 - 将图像从手机内存移到存储卡，或从存储卡移到手机内存。

复制 - 将图像从手机内存复制到存储卡，或从存储卡复制到手机内存。

删除 - 删除图像。

重命名 - 重命名图像。

新建文件夹 - 在**我的图像**文件夹中创建一个新的文件夹。

幻灯片显示 - 开始显示幻灯片。

通过蓝牙打印 - 通过 Bluetooth® 打印图像文件。

排序方式 - 按特定顺序排列图像。

内存信息 - 查看内存状态。

发送照片

1 点触 ，然后点触 。

2 点触**我的文档**，然后选择**我的图像**。

3 选择照片并点触 。

4 点触**发送**并从**信息**、**电子邮件**、**蓝牙**或**记入中**选择。

01

02

03

04

05

06

07

08

多媒体




- 5 如果选择**信息**或**电子邮件**，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将图片发送至的设备。

使用图像

您可以选择图像以用作墙纸和屏幕保护程序，或用来识别呼叫者。




- 1 点触 ，然后点触 .
- 2 点触**我的文档**，然后点触**我的图像**。
- 3 选择图像并点触 .
- 4 点触**用作**并从以下选项中选择：
墙纸 - 设为待机屏幕的墙纸。
拨出电话 - 设为在拨出电话时显示的图像。
开机 - 设为开机时显示的图像。
关机 - 设为关机时显示的图像。
联系人图像 - 将图像分配给联系人列表中的特定联系人，当其致电给您时，将显示给图片。

管理图像

- 1 点触 ，然后点触 .
- 2 点触**我的文档**，然后点触**我的图像**。
- 3 点触 ，然后选择“排序方式”。

- 4 从**日期**、**类型**或**名称**中选择。




删除图像

- 1 点触 ，然后点触 .
- 2 点触**我的文档**，然后点触**我的图像**。
- 3 选择图像并点触 .
- 4 点触**删除**，然后点触**是**确认。

提示! 要快速删除**我的文档**中的任意文件，请点触该文件一次，通过光标使其突出显示，然后按 **c** 硬键。通过点触**是**确认。

移动或复制图像

您可以在手机内存和存储卡之间移动或复制图像。您可能需要执行此操作以释放其中一个存储位置的存储空间，或保护图像不丢失。

- 1 点触 ，然后点触 .
- 2 点触**我的文档**，然后点触**我的图像**。
- 3 选择图像并点触 .
- 4 选择**移动**或**复制**。

标记或去除标记图像

如果您要一次移动、复制、发送或删除多张图像，首先，您需要通过打勾标记识别它们。

- 1 点触 ，然后点触 。
- 2 点触**我的文档**，然后点触**我的图像**。
- 3 点触 ，然后点触**标记/去除标记**。
- 4 每张图像左侧将出现一个框。点触图像两次，框中将显示一个记号以标记它。
- 5 要去除标记图像，请再次点触图像以取消勾选。
- 6 标记了所有对应的框后，按  并选择一个选项。

创建幻灯片




如果您要查看手机中的所有图像或浏览已有图像，您可以创建一个幻灯片，这样，您无需对每张图像都执行打开和关闭操作。

- 1 点触 ，然后点触 。
- 2 点触**我的文档**，然后点触**我的图像**。
- 3 点触 ，然后点触**幻灯片**。
- 4 使用  和  跳过图像或点触  以随机顺序显示图像。



查看内存状态

您可以查看已用内存和剩余可用内存。

- 1 点触 ，然后点触 。
- 2 点触**我的文档**，然后点触**我的图像**。
- 3 点触 ，然后点触**内存信息**。
- 4 选择**手机内存**或**外部存储器**。




备注：如果您没有插入存储卡，则无法选择**外部存储器**。

多媒体

我的声音

我的声音文件夹包含**默认声音**和**录音**。在此，您可以管理、发送或将声音设为铃声。



使用声音

- 1 点触 ，然后点触 。
- 2 点触**我的文档**，然后点触**我的声音**。
- 3 选择**默认声音**或**录音**。
- 4 选择一个声音，点触**播放**试听。
- 5 点触 ，然后选择**用作**。
- 6 从**语音铃声**、**视频铃声**、**信息提示音**、**开机**、**关机**中选择。

我的视频

我的视频文件夹显示下载的视频以及手机中录制的视频列表。

观看视频

- 1 点触 ，然后点触 。
- 2 点触**我的文档**，然后点触**我的视频**。
- 3 选择视频，然后点触**播放**。


提示! 要快速删除“我的文档”中的任意文件，请点触该文件一次，通过光标使其突出显示，然后按 **c** 硬键。通过点触**是**确认。

暂停视频时使用选项


在暂停模式下点触  并从以下选项中选择：

- 拍照** - 将定帧捕获为图片。
- 文件信息** - 查看名称、大小、日期、时间、类型、长度、尺寸、保护和版权等详情。
- 发送** - 通过信息、电子邮件或蓝牙发送视频。
- 删除** - 删除视频。
- 用作** - 将视频用作铃声。

发送视频剪辑

- 1 选择视频，然后点触 。
- 2 点触**发送**并从**信息**、**电子邮件**、**蓝牙**或**YouTube**中选择。
- 3 如果选择**信息**或**电子邮件**，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将视频发送至的设备。

将视频剪辑用作铃声

- 1 选择视频，然后点触 。
- 2 点触**用作**，然后从**语音铃声**或**视频铃声**中选择。

使用视频选项菜单

从**我的视频**文件夹，您可以选择以下选项：

用作 - 将视频设为铃声。

发送 - 向朋友发送视频。

移动 - 将视频剪辑从手机内存移至存储卡，或从存储卡移至手机内存。

复制 - 将视频剪辑从手机内存复制到存储卡，或从存储卡复制到手机内存。

删除 - 删除视频。

重命名 - 重命名视频。

标记/去除标记 - 选择多个文件。

新建文件夹 - 在**我的视频**文件夹中创建一个新的文件夹。



排序方式 - 按特定顺序排列视频。

内存信息 - 查看内存状态。

我的应用程序



您可以将新游戏和应用程序下载到手机中，在闲暇时为您带来乐趣。

下载游戏

- 1 点触 ，然后点触 。
- 2 点触**我的文档**，然后点触**我的应用程序**。
- 3 选择**下载游戏**，然后点触**连接**。
- 4 您将连接到可下载游戏的网络端口。

提示! 要快速删除“我的文档”中的任意文件，请点触该文件一次，通过光标使其突出显示，然后按 **c** 硬键。通过点触**是**确认。

玩游戏

- 1 点触 ，然后点触 。
- 2 点触**我的文档**，然后点触**我的应用程序**。
- 3 选择一款游戏，然后点触**启动**。

使用游戏选项菜单

从**我的应用程序**文件夹中，可以使用以下选项：

新建文件夹 -  在**我的应用程序**中创建文件夹。

排序方式 - 按**日期、大小或名称**对游戏和应用程序排序。



内存信息 - 查看内存状态。

Flash 内容

“Flash 内容”文件夹包含所有默认和下载的 SWF 文件。

多媒体


查看 SWF 文件

- 1 点触 ，然后点触 。
- 2 点触**我的文档**，然后点触 **Flash 内容**。
- 3 选择文件，然后点触**查看**。

查看 SWF 文件时使用选项

全屏视图 - 以全屏模式查看 SWF 文件（仅在点触  且非暂停模式下方可）。



静音 - 关闭声音。

 - 暂停或继续播放。

用作墙纸 - 您可以将默认文件设为墙纸。

文件信息 - 查看文件的名称、大小、日期、时间、类型和保护。

文档

- 1 点触 ，然后点触 。
- 2 点触**我的文档**，然后点触**文档**。

从“文档”菜单中，您可以查看所有文档文件。在此，您可以查看**我的文档**中的 Excel、PowerPoint、Word、文本和 PDF 文件。



将文件传输到手机

蓝牙可能是将文件从计算机传输到手机最简便的方法。您也可以通过同步数据线使用 LG PC 套件，有关详细信息，请参阅第 65 页。

使用蓝牙传输：

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用计算机发送文件。
- 3 文件发出后，您必须点触**是**在您的手机上接受它。
- 4 文件应出现在**文档**或**其它**文件夹中。




查看文件

- 1 点触 ，然后点触 。
- 2 点触**我的文档**，然后点触**文档**。
- 3 选择文档，然后点触**打开**。

其它


其它文件夹用于存储非图片、声音、视频、游戏或应用程序文件。其使用方式与**文档**文件夹相同。当您从计算机传输到手机时，您可能发现文件保存在**其它**而不是**文档**文件夹中。如果这样，您可以移动文件。

将文件从“其它”文件夹移到“文档”文件夹：

- 1 点触 ，然后点触 .
- 2 点触**我的文档**，然后点触**其它**。
- 3 选择文件，然后点触 .
- 4 点触**移动**，检查目的地，然后再次点触**移动**。

播放歌曲



- 1 点触 ，然后点触 .
- 2 点触**音乐**，然后点触**所有曲目**。
- 3 选择您要播放的歌曲，然后点触**播放**。
- 4 点触  暂停歌曲。
- 5 点触  以跳到下一首歌曲。
- 6 点触  以跳到上一首歌曲。
- 7 点触  以停止音乐并返回**音乐**菜单。

提示! 要在聆听音乐时更改音量，请点触  或使用转盘。




创建播放列表

您可以从**所有曲目**文件夹中进行选择，以创建自己的播放列表。




- 1 点触 ，然后点触 .
- 2 点触**音乐**，然后点触**播放列表**。
- 3 点触**添加**，输入播放列表名称，然后点触**保存**。
- 4 此时会显示“所有曲目”文件夹。点触所有要包含在播放列表中的歌曲；这些歌曲名称旁边将显示一个勾号。
- 5 点触**完成**。

多媒体

要播放播放列表，请选择列表，然后点触**播放**。**备注：**要另外添加一个播放列表，请点触 ，然后点触**添加新的播放列表**。

编辑播放列表

您可能随时想要向播放列表添加新歌曲或从中删除歌曲。要执行此操作，您可以编辑播放列表。

- 1 点触 ，然后点触 。
- 2 点触**音乐**，然后点触**播放列表**。
- 3 打开播放列表。
- 4 点触 ，然后选择：

立即播放 - 播放播放列表。

新增歌曲 - 将更多歌曲添加到播放列表。标记所需的歌曲，然后点触**完成**。

上移/下移 - 在列表中上移或下移歌曲，以更改播放顺序。

发送 - 以信息形式或通过蓝牙发送歌曲。




从列表删除 - 将歌曲从播放列表中删除。点触**是**确认。

标记/去除标记 - 选择多个文件。

用作 - 您可以将歌曲设为效果音。

内存信息 - 查看播放列表信息。




删除播放列表

- 1 点触 ，然后点触 。
- 2 点触**音乐**，然后点触**播放列表**。
- 3 点触 ，然后点触**删除**或**全部删除**从播放列表中删除歌曲。



搜索电台

您可以手动或自动微调手机电台以进行搜索。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您可以在手机中最多保存 24 个频道。




自动微调：

- 1 点触 ，然后点触 。
- 2 点触**FM 收音机**，然后点触 。
- 3 点触**自动微调**，然后点触**是**。手机将自动为找到的电台分配一个频道编号。



手动微调：

- 1 点触 ，然后点触 。
- 2 点触**FM 收音机**。
- 3 点触要保存电台频道编号。
- 4 使用屏幕顶部的箭头键查找电台。
- 5 按**设置**保存电台。

重设频道

- 1 点触 ，然后点触 。
- 2 点触 **FM 收音机**，然后点触 。
- 3 选择**重设**以重设当前频道，或选择**全部重设**以重设所有频道。每个频道的开始频率将返回为 87.5Mhz。

收听收音机

- 1 点触 ，然后点触 。
- 2 点触 **FM 收音机**，然后点触您要收听的电台的频道编号。



提示！

要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。

网络

轻松使用浏览器，您可以在需要时随时获取新闻、天气预报以及体育或交通信息。此外，您还可以使用浏览器下载最新音乐、铃声、墙纸和游戏。




访问网页

- 1 从待机屏幕选择 ，然后点触  并选择**浏览器**。
- 2 要直接访问浏览器主页，请选择**主页**。或者，选择**输入地址**并键入所需的 URL，然后选择**连接**。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。


添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 从待机屏幕选择 ，然后点触  并选择**浏览器**。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要添加一个新的书签，请选择  并点触**新增**。输入书签名称和 URL。
- 4 点触**保存**。现在，您添加的书签将显示在书签列表中。




- 5 要访问书签，只需滚动到所需书签，点触**打开**即可。您将连接到书签。

保存页面



- 1 如上所述，访问所需网页。
- 2 点触 ，然后选择**已保存页面**。
- 3 为网页输入一个名称，便于您轻松识别。
- 4 点触**保存**。

提示！ 使用此菜单，您可以编辑已保存页面的标题以及删除已保存页面。



访问已保存页面

- 1 从待机屏幕选择 ，然后点触  并选择**浏览器**。
- 2 选择**已保存页面**。
- 3 选择所需页面，点触 ，然后点触**打开**。

查看浏览器历史记录

- 1 从待机屏幕选择 ，然后点触  并选择“浏览器”。选择**历史记录**。
- 2 此时将显示一个您最近访问过网页的标题列表。要访问其中一个网页，只需选择所需页面，点触**连接**即可。

更改网络浏览器设置

- 1 从待机屏幕选择 ，然后点触  并选择**浏览器**。
选择**设置**。
- 2 您可以选择以编辑**网络设定、字符编码、缓存、Cookie、Java 脚本、安全性**，或者，您可以选择**重设设置**以重置所有设置。
- 3 更改设置后，请选择**确认**。

将手机用作调制解调器

KF700 可以同时用 PC 的调制解调器，使您在无法使用有线连接时仍可访问电子邮件和互联网。您可以使用 USB 数据线或蓝牙。

连接 USB 数据线：

- 1 确保 PC 上已经安装了 LG PC 套件。
- 2 使用 USB 数据线连接 KF700 和 PC，启动 LG PC 套件软件。
- 3 单击 PC 上的**通信**。然后，单击**设置**并选择**调制解调器**。
- 4 选择 **LG Mobile USB 调制解调器**，然后选择**确定**。此时将在屏幕上打开。
- 5 单击**连接**，您的 PC 将与 KF700 之间建立连接。

备注：有关使用 LG PC 套件同步的详细信息，请参阅第 65 页。

使用蓝牙：


- 1 确保已**打开**蓝牙并在 PC 和 KF700 上均可见。
- 2 配对 PC 和 KF700，以便需要通行码才能建立连接。
- 3 使用 LG PC 套件上的**连接向导**创建一个活动的蓝牙连接。
- 4 单击 PC 上的**通信**。
然后，单击**设置**。
- 5 单击**调制解调器**。
- 6 选择 **Standard Modem over Bluetooth link**，然后单击**确定**。此时将在屏幕上打开。
- 7 单击**连接**，您的 PC 将与 KF700 之间建立连接。

备注：有关蓝牙的详细信息，请参阅第 68-69 页。



公文包

将事件添加到日历中

- 1 从待机屏幕选择 ，然后点触  并选择**公文包**。选择**日历**。
- 2 选择您要添加事件的日期。
- 3 点触  以添加新事件。
- 4 选择是要添加**约会**、**周年纪念**还是**生日**，然后点触**确定**。
- 5 查看日期并输入事件开始的时间。
- 6 对于约会和周年纪念，请在下面的“时间”和“日期”框中输入事件结束的时间和日期。
- 7 如果要为事件添加主题或备注，请点触**主题**或**名称**，然后键入备注，再选择**确定**。
- 8 选择**保存**，您的事件将保存在日历中。方形光标标记已保存事件的日期，在事件开始时间会有闹钟提醒，以便您进行安排。




提示！ 您可以在日历中设置假期。一次性点触您要休假的每一天，然后点触  并选择**设置假期**。假期中的每一天都将变为红色。设置闹钟时，您可以将设为假期的日期排除在外。


更改默认日历视图

- 1 从待机屏幕选择 ，然后点触  并选择**公文包**。选择**设置**。




- 2 点触**日历设置**，然后选择**默认视图**或**周开始于**。
- 3 按**确定**确认选择。

向任务列表添加项目

- 1 从待机屏幕选择 ，然后点触  并选择**公文包**。
- 2 选择**任务**，然后点触右上角的 。
- 3 为任务项设置日期、添加备注或选择优先级：**高**、**中**或**低**。
- 4 选择**保存**以保存任务列表项。

提示！ 您可以通过选择项目并点触  来编辑该项目。现在，请选择**编辑**。选择**保存**以确认您所做的修改。



更改任务项

- 1 从待机屏幕选择 ，然后点触  并选择**公文包**。选择**任务**。
- 2 选择您要共享的任务项，然后点触 。
- 3 选择**发送**。您可以通过**文本信息**、**多媒体信息**、**电子邮件**或**蓝牙**共享任务项。


提示！ 您可以将日历备份在计算机上或与计算机同步。请参阅第 64 页上的**PC 同步**。

使用日期计算器

日期计算器是一款便捷的工具，有助于您计算特定天数后的日期。例如，10.10.2007 后的 60 天是 09.12.2007。这有助于确保不误期。

- 1 从待机屏幕选择 ，然后点触  并选择**公文包**。
- 2 选择**日期计算器**。
- 3 在**自选项卡**中，设置所需日期。
- 4 在**之后选项卡**中，设置天数。
- 5 此时会在下面显示**天**。

设置闹钟




- 1 从待机屏幕选择 ，然后点触  并选择**闹钟**。
- 2 点触  设置闹钟。
- 3 设置您希望闹钟响起的时间，然后点触**设置**。
- 4 选择您希望闹钟响起的方式：**无重复、每天、星期一至星期五、星期一至星期六、星期六至星期天或节假日除外**。按**确定**。
- 5 选择  以选择闹钟铃声。要听铃声，请点触铃声，然后选择**播放**。做出选择后，点触**选择**。
- 6 为闹钟添加备忘录。键入备忘录后，点触**确定**。闹钟响起时，会显示备忘录。

- 7 最后，您可以设置暂停间隔：**5、10、20、30 分钟、1 小时或关**。按**确定**以确认选择。
- 8 设置闹钟后，请点触**保存**。

备注：您最多可以设置 5 个闹钟。

提示！ 即使手机关机，闹钟仍将在设置的时间响起。如果点触**暂停闹钟**，15 分钟后将再次响起。如果点触**停止信息**，将弹出“开机？”。

添加备忘录





- 1 从待机屏幕选择 ，然后点触  并选择**备忘录**。
- 2 点触  添加新备忘录。
- 3 键入备忘录，然后选择**保存**。
- 4 在您下一次打开**备忘录**应用程序时，屏幕上将显示此备忘录。

提示！ 您可以编辑现有备忘录。选择您要编辑的备忘录，然后点触**编辑**。

公文包


语音备忘录

使用**语音备忘录**录制语音备忘录或其它声音。


- 1 点触 ，然后点触 。
- 2 点触**语音备忘录**，然后按  开始录音或按  选择：
长度 - 设置录音长度。从**彩信大小**、**1 分钟**或**无限制**中选择。
质量 - 选择声音质量。
从“超精细”、“精细”或“标准”中选择。
转到我的声音 - 在**我的声音**中打开“录音”文件夹。


录制声音或语音

- 1 点触 ，然后点触 。
- 2 点触**语音备忘录**。
- 3 点触  开始录音。
- 4 点触  结束录音。
- 5 点触  收听录音。

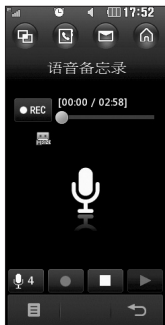




发送录音




- 1 完成录制后，请点触 。
- 2 点触发送并从**信息**、**电子邮件**或**蓝牙**中选择。如果选择**信息**或**电子邮件**，录音将被添加到信息中，您可以照常撰写或发送信息。如果选择“蓝牙”，手机可能提示您打开蓝牙。


备注：完成录音后，请点触  并从**发送、文件（重命名、文件信息）、删除、用作**（将录音用作铃声）或**转到我的声音**中选择。

使用计算器



- 1 从待机屏幕选择 ，然后点触  并选择**工具**。
- 2 选择**计算器**。
- 3 使用键盘输入数字。
- 4 对于简单计算，点触您所需的函数（+，-，÷，x），然后点触 =。
- 5 对于较复杂的计算，请点触  并从 **sin、cos、tan、log、ln、exp、sqrt、deg** 或 **rad** 中选择。

向世界时间添加城市



- 1 从待机屏幕选择 ，然后点触  并选择**工具**。
- 2 选择**世界时钟**。
- 3 点触  图标，然后选择**添加城市**。开始键入所需城市的名称时，屏幕顶部即显示该城市。或者，点触**映射**，然后从地图中选择所需城市。
- 4 点触**选择**以确认选择。

提示！ 如果出国，您可以通过点触  并选择**设置时区**以在“世界时钟”中更改时区。

换算单位

- 1 从待机屏幕选择 ，然后点触  并选择**工具**。
- 2 选择**单位换算器**。
- 3 选择要换算的内容：**币种、面积、长度、重量、温度、体积或速率**。
- 4 现在，您可以选择单位，输入要换算的初始值，然后选择要换算的目标单位。
- 5 屏幕上将显示相应的值。

使用秒表

- 1 从待机屏幕选择 ，然后点触  并选择**工具**。
- 2 选择**秒表**。
- 3 点触**开始**可启动计时器。
- 4 如果要记录时间，请点触**圈**。
- 5 点触**停止**结束计时器。
- 6 点触**继续**从您停止的时间重新开始秒表，或点触**重设**重新开始计时。

PC 同步

您可以使用手机同步 PC，以确保所有重要信息和日期匹配，同时做好备份。

在计算机上安装 LG PC 套件

- 1 从待机屏幕选择 ，然后点触  并选择**手机设置**。
- 2 选择**连接**，然后选择 **USB 连接模式**。
- 3 选择**数据服务**，然后点触**选择**。
- 4 将随附的 CD 插入 PC。此时屏幕上将显示 **LG PC 套件安装程序**。单击 **LG PC 套件安装程序**。
- 5 选择安装程序运行的语言，然后单击**确定**。
- 6 根据屏幕说明完成 **LG PC 套件安装程序** 向导。
- 7 安装完成后，桌面上将显示 **LG PC 套件图标**。

连接手机和 PC

- 1 将 USB 数据线连接到手机和 PC。
- 2 双击桌面上的 **LG PC 套件图标**。
- 3 单击**连接向导**，然后单击 **USB**。
- 4 单击**下一步**，再单击**下一步**，最后单击**完成**。现在，手机与 PC 已连接。

备份和恢复手机信息

- 1 如上所述，将手机连接到 PC。
- 2 单击**备份图标**，选择**备份**或**恢复**。
- 3 标记您要备份或恢复的内容。选择您要保存备份信息的位置，或恢复信息的位置。单击**确定**。
- 4 您的信息将备份。

在 PC 上查看手机文件

- 1 如上所述，将手机连接到 PC。
- 2 单击**内容图标**。
- 3 手机中保存的所有文档、Flash 内容、图像、声音和视频将显示在“LG 手机”文件夹屏幕中。

提示！ 在 PC 中查看手机内容有助于您排列文件、整理文档或删除不再需要的内容。

同步电话本

- 1 将手机连接到 PC。
- 2 单击**电话本图标**。
- 3 选择**传输**，然后选择**从手机导入**。PC 中将导入并显示 USIM 卡和手机中保存的所有联系人。
- 4 单击**文件**，然后选择**保存**。现在，您可以选择要保存电话本的位置。



备注：要备份保存在 USIM 卡中的电话本，请单击 PC 屏幕左侧的“SIM 卡”文件夹。选择屏幕顶部的**编辑**，然后选择**全选**。右键单击联系人，然后选择**复制到电话本**。现在，请单击屏幕左侧的**手机**文件夹，此时将显示您的所有号码。

同步信息

- 1 将手机连接到 PC。
- 2 单击**信息**图标。
- 3 所有 PC 和手机信息将显示在屏幕上的文件夹中。
- 4 使用屏幕顶部的工具栏编辑和排列信息。

将手机用作 Mass Storage 设备

只有插入存储卡时，您的手机才可以用作 Mass Storage 设备。

- 1 断开手机与 PC 的连接。
- 2 从待机屏幕选择 ，然后点触  并选择**手机设置**。
- 3 选择**连接**，然后选择**USB 连接模式**。
- 4 选择 **Mass storage**，然后点触**选择**。
- 5 将手机连接到 PC。此时手机将显

示：正作为 Mass Storage 连接...，随后将显示**已以 Mass Storage 模式连接**。传输期间不要断开连接。

- 6 所有手机文件将自动保存在 PC 硬盘中。



备注：Mass Storage 将仅备份保存在存储卡中的内容，而不备份手机内存中的内容。要传输手机内存中的内容（如，电话本），您需要使用“PC 同步”进行同步。

设置

使用此文件夹，您可以调整设置以使 KF700 更具个性化。

备注：有关通话设置的信息，请参阅第 21 页。

更改屏幕设置

- 1 点触 ，然后选择 。
- 2 点触**显示**，然后选择：

屏幕主题 - 选择主屏、拨出电话、开机和关机的主题。

时钟和日历 - 选择其在屏幕上的显示方式。

背景灯 - 选择背景灯和键盘亮起的持续时间。

亮度 - 调整屏幕亮度。

手机主题 - 快速更改屏幕整体外观。

字体 - 调整字体颜色。




- 3 点触**保存**以保存设置。

更改情景模式

您可以在待机屏幕上快速更改情景模式。

单击屏幕顶部当前情景模式的图标即可。

使用设置菜单，您可以个性化每个情景模式设置。

- 1 按 ，然后选择 。
- 2 点触**情景模式**，然后选择您要编辑的情景模式。
- 3 点触 ，然后选择**编辑**。
- 4 随后，您可以更改列表中可用的所有声音和提示选项，包括**铃声和音量**、**信息提示**、**滑盖音**设置等。

更改手机设置

您可以自由调整 KF700 的设置，使其满足您的需要。

提示！ 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 点触 ，然后选择 。
- 2 点触**手机设置**，然后从下表中选择。
 - 日期和时间** - 调整日期和时间设置，或者，选择在旅行时或针对夏令时自动更新时间。
 - 省电** - 选择**开**或**关**以开启或关闭初始的省电设置。
 - 语言** - 更改 KF700 的显示语言。
 - 自动键盘锁** - 选择键盘锁定的时间。
 - 安全性** - 调整您的安全设置，包括 PIN 码和手机锁。

连接 - 有关详细信息，请参阅**更改连接设置**。

触摸屏效果 - 更改触摸屏设置。

内存管理器 - 有关详细信息，请参阅下面的**使用内存管理器**。



触式键盘校准 - 重置屏幕以方便使用。

重设设置 - 将所有设置重置到其出厂设置。

手机信息 - 查看 KF700 的技术信息。

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

点触 ，然后点触 。点触**手机设置**，然后选择**连接**。

网络设定 - KF700 将自动连接到首选网络。

要更改这些设置，请使用此菜单。

Internet 网络设定 - 您可以设置并查看 Internet 网络设定。

接入点 - 网络运营商已保存此信息。您可以使用此菜单添加新的接入点。

USB 连接模式 - 选择**数据服务**并使用 LG PC 套件软件同步 KF700 以复

制手机中的文件。有关同步的详细信息，请参阅第 65 页。

同步服务 - 有关同步的详细信息，请参阅第 65 页。



流媒体设置 - 网络运营商已保存此信息。您可以对其进行编辑以更改。

使用内存管理器

KF700 有三种可用存储器：手机、USIM

卡和外部存储卡（您可能需要单独购买存储卡）。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

点触 ，然后点触 。选择**手机设置**，然后选择**内存管理器**。

手机公用内存 - 查看 KF700 中针对以下各项的可用内存：图片、声音、视频、Flash、彩信、电子邮件、Java 应用程序、文档及其它。

手机剩余内存 - 查看手机目前针对以下各项的可用内存：文本信息、电话本、日历、任务列表、备忘录、闹钟、通话记录、书签及其它。

USIM 卡内存 - 查看 USIM 卡的可用内存。

设置

外部存储器 - 查看外部存储卡的可用内存（您可能需要单独购买存储卡）。



主存储器设置 - 选择项目的首选保存位置。

提示! 有关**插入存储卡**的信息，请参阅第 12 页。

使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 点触  并选择**发送**。
选择**蓝牙**。
- 3 点触  以打开蓝牙。
- 4 KF700 将自动搜索范围内其它启用了蓝牙的设备。
- 5 选择您要向其发送文件的设备，然后点触**选择**。
- 6 您的文件将被发送。

提示! 注意进度栏，确保文件已发送。

接收文件：

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详细信息，请参阅下面的**更改蓝牙设置**。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。点触**是**以接收文件。
- 3 您可以查看文件的保存位置，可以选择**查看文件**或**用作墙纸**。文件通常保存在“我的文档”中的相关文件夹。

更改蓝牙设置：

- 1 点触  和 。
- 2 依次选择**蓝牙**和**设置**。
进行更改：
我的设备可见性 - 选择是**可见**还是**隐藏**。
我的设备名称 - 为您的 LG KF700 输入一个名称。
支持的服务 - 选择在其它关联服务中如何使用蓝牙。请参阅第 59 页的**将手机用作调制解调器**和下面的**使用蓝牙耳机**。
远程 SIM 卡模式 - 选择**开**或**关**。
我的地址 - 查看您的蓝牙地址。

与其它蓝牙设备配对

要将您的 KF700 与其它设备配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为**开且可见**。
您可以在**设置**菜单中更改可见性。
- 2 点触**配对设备**，然后点触**新建**。
- 3 KF700 将搜索设备。
搜索完全**刷新**时，屏幕上将显示**添加**。
- 4 选择您要与之匹配的设备，点触**添加**，输入通行码，然后点触**确定**。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

使用蓝牙耳机

- 1 查看蓝牙是否为**开**。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 点触**是**以**立即连接**。

提示！ 有关**蓝牙接听模式**的详细信息，请参阅第 22 页，以便您可以控制接听来电的方式，以及何时连接蓝牙耳机。

配件

这些配件随 KF700 提供。

充电器



USB线和光碟

在 KF700 和 電腦 间建立连接并同步。



电池



用户手册

了解更多关于 KF700 的信息。



立体声耳机



备注

- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 在不同地区提供的配件可能不同：如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

网络服务

本指南中描述的无线手机适用于 GSM 900、DCS 1800、PCS1900 和 W-CDMA 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

技术参数

标准

产品名称：KF700

系统：GSM 900 / DCS 1800
PCS 1900 / W-CDMA

外部环境

最高温度：+55° C（放电）、
+45° C（充电）

最低温度：-10° C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF700

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.6.1, ETSI EN 301 489-07 V1.3.1
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.3.1
ETSI TS 151 010-1 V7.6.0 specified by ETSI EN 301 511 V9.0.2
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-1 V2.2.1 ETSI EN 301 908-2 V2.2.1,
ETSI EN 300 328 V1.6.1

EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji/ Director

Issued Date

22.Feb. 2008

LG Electronics Inc. Amsterdam Office
Veluwezoom15, 1327 AE Almere, The Netherlands
Tel : +31 -36-547 -8940, e-mail : seokim@lge.com


Signature of representative

关于安全有效使用手机的准则

请阅读以下简单的准则。
违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

此款 KF700 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.36 W/kg (10 克)。

- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.18 W/kg，平均值超过 1g 薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告！

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。

- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能变热并引发火灾。
- 使用干布清洁手机外壳。不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 手机应在通风情况良好的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

关于安全有效使用手机的准则

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。如果性能不正确，可能导致气囊膨胀或造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 请勿在加油点或化工厂附近使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。


紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向当地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。

- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。

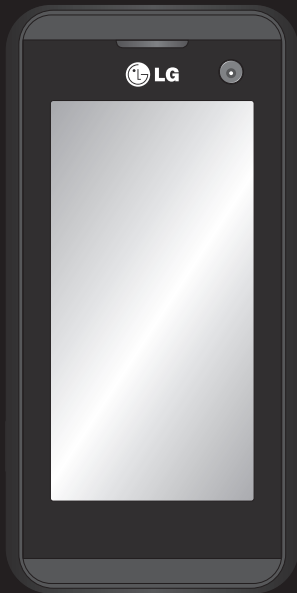

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KF700 User Guide

Congratulations on your purchase of the advanced and compact KF700 phone by LG, designed to operate with the latest digital mobile communication technology.



Disposal of your old appliance

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Set up	01
Your standby screen	02
The basics	03
Get creative	04
The web	05
Get organised	06
Settings	07
Accessories	08

Contents

Set up

Getting to know your phone	8
Open view	9
Installing the USIM and battery.....	10
Memory card	12
Menu map.....	13

Your standby screen

Touchscreen tips.....	14
The quick keys.....	15
The status bar	16

The basics

Calls	18
Making a call or video call	18
Making a call from your contacts	18
Answering and rejecting a call.....	18
In-call options.....	19
Adjusting the call volume	19
Speed dialling.....	20
Viewing your call logs	20
Using call divert.....	20
Using call barring.....	21
Changing the common call settings	21
Changing your video call settings.....	22
Contacts	23
Searching for a contact.....	23
Adding a new contact	23
Contact options	23

Creating a group.....	24
Changing your contact settings.....	24
Viewing information	25
Messaging.....	26
Sending a message	26
Entering text.....	26
T9 predictive	27
Abc manual.....	27
Setting up your email	27
Retrieving your email	28
Sending an email using your new account.....	28
Changing your email settings	29
Message folders	29
Managing your messages	30
Using templates.....	30
Using emoticons.....	30
Changing your text message settings.....	31
Changing your multimedia message settings.....	31
Changing your other settings.....	32

Get creative

Camera.....	33
Taking a quick photo.....	33
After you've taken your photo	33
Getting to know the viewfinder.....	34
Using the flash	35

Adjusting the contrast.....	35	Editing your photos.....	46
Using the advanced settings.....	35	Adding text to a photo.....	47
Changing the image size.....	36	Adding an effect to a photo.....	47
Choosing a colour tone.....	37	Adding a colour accent to a photo.....	47
Using the inner camera.....	37	Swapping the colours in a photo.....	48
Viewing your saved photos.....	37	Multimedia	49
Viewing the details of a photo.....	38	My images.....	49
Video camera	39	My images options menu.....	49
Shooting a quick video.....	39	Sending a photo.....	49
After you've shot your video.....	39	Using an image.....	50
Getting to know the viewfinder.....	40	Organising your images.....	50
Adjusting the contrast.....	41	Deleting an image.....	50
Using the advanced settings.....	41	Moving or copying an image.....	50
Changing the video image size.....	42	Marking and unmarking images.....	51
Choosing a colour tone.....	42	Creating a slide show.....	51
Using the inner video camera.....	42	Checking your memory status.....	51
Watching your saved videos.....	43	My sounds.....	52
Your photos and videos	44	Using a sound.....	52
Viewing your photos and videos.....	44	My videos.....	52
Adjusting the volume when viewing a video.....	44	Watching a video.....	52
Capturing an image from a video.....	44	Using options while video is paused.....	52
Viewing the details of a video or photo ..	44	Sending a video clip.....	52
Sending a photo or video from the gallery.....	45	Using a video clip as a ringtone.....	52
Viewing your photos as a slide show.....	45	Using the video options menu.....	53
Setting a photo as wallpaper.....	46	My games and apps.....	53
		Downloading a game.....	53
		Playing a game.....	53

Contents

Using the games options menu.....	53	Get organised	
Flash contents.....	53	Organiser	60
Viewing an SWF file.....	54	Adding an event to your calendar.....	60
Using options viewing the SWF file.....	54	Changing your default calendar view.....	60
Documents.....	54	Adding an item to your to do list.....	60
Transferring a file to your phone.....	54	Sharing a to do item.....	60
Viewing a file.....	54	Using date finder.....	61
Others.....	55	Setting your alarm.....	61
Playing a song.....	55	Adding a memo.....	61
Creating a playlist.....	55	Voice recorder.....	62
Editing a playlist.....	56	Recording a sound or voice.....	62
Deleting a playlist.....	56	Sending the voice recording.....	62
Searching for stations.....	56	Using your calculator.....	63
Resetting channels.....	57	Adding a city to your world clock.....	63
Listening to the radio.....	57	Converting a unit.....	63
		Using the stopwatch.....	63
The web		PC Sync	64
Accessing the web.....	58	Installing LG PC Suite on your computer ...	64
Adding and accessing your bookmarks.....	58	Connecting your phone and PC.....	64
Saving a page.....	58	Backing up and restoring your phone's	
Accessing a saved page.....	58	information.....	64
Viewing your browser history.....	59	Viewing your phone files on your PC.....	64
Changing the web browser settings.....	59	Synchronising your contacts.....	65
Using your phone as a modem.....	59	Synchronising your messages.....	65
		Using your phone as a mass storage	
		device.....	65

Settings

Changing your screen settings.....	66
Personalising your profiles.....	66
Changing your phone settings.....	66
Changing your connectivity settings.....	67
Using memory manager	67
Sending and receiving your files using Bluetooth.....	68
Pairing with another Bluetooth device.....	69
Using a Bluetooth headset.....	69

Accessories	70
--------------------------	----

Network service	71
------------------------------	----

Technical data	71
-----------------------------	----

Guidelines

Guidelines for safe and efficient use	74
---	----

Getting to know your phone

Charger, Cable, Handsfree connector

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.

Shortcut key

Access Shortcut menus with Shortcut dial. You can change the sequence of menus from **Shortcut dial setting**.

Lock/ Unlock key

Inner camera lens

End/Power key



Ends or rejects a call.
Turns the phone on/off.
Press once to return to the standby screen.

Clear key

Deletes a character with each press. Use this key to go back to the previous screen.

Call key

Dials a phone number and answers incoming calls.

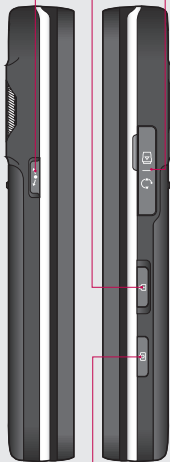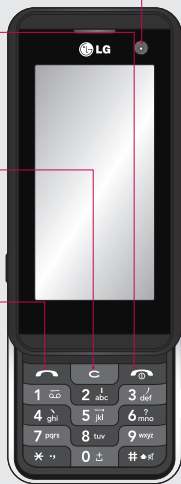

WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Capture button

Open view

Shortcut dial

Zooms in or out when in camera or video mode.
Scrolls through menus.

TIP: You can adjust the volume level when enjoying music, games and during a call.

WARNING: Close contact with a magnetic object may cause a malfunction of the wheel key.

Memory card slot

Battery cover

Battery

Flash

Camera lens

USIM Card Socket

01

02

03

04

05

06

07

08

Installing the USIM and battery




1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.


WARNING: Do not use your fingernail when removing the battery.

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

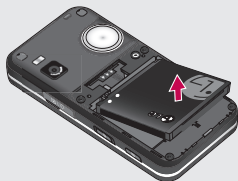

2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

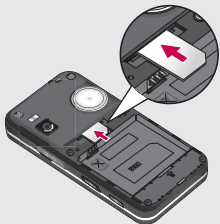


3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards.


To remove the SIM card, pull it gently in the reverse direction.

Installing the USIM and battery

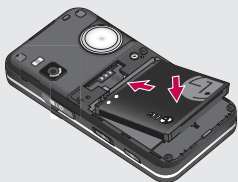

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

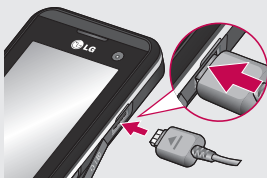

6 Charging your phone

Pull open the cover of the charger socket on the side of your KF700. Insert the charger and plug into a mains electricity socket. Your KF700 will need to be charged until a message reading Fully Charged appears on screen.



5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

01

02

03

04

05

06

07

08

Memory card

Installing a memory card

Expand the memory space available on your phone using a memory card. The KF700 will support up to a 4GB memory card.



- 1 Remove the cover then slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold contact area is facing upwards.






- 2 Replace the battery and cover as before.


Formatting the memory card

If your memory card is already formatted, you can begin using it. If your card isn't formatted you will need to do so.

- 1 From the standby screen touch  and select .
- 2 Choose **Phone settings** and select **Memory manager** and choose **External memory**.



- 3 Touch **Format** and enter the password, which is set to 0000 as the default. Your card will be formatted and ready to use.
- 4 To view the new formatted folders on your KF700 touch  and select . Choose  My stuff. You'll see five folders: My images, My sounds, My videos, My games and apps and others.

For more details on using a memory card, see page 67.


 **WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Transferring your contacts

To transfer your contacts from your SIM to your phone:

- 1 From the standby screen touch , and choose .
- 2 Select **Contacts** and choose **Settings** and select **Copy** or **Move**.
- 3 Choose **Handset to USIM** then **All together** or **One by one**.
- 4 Touch **OK** to confirm.

Menu map

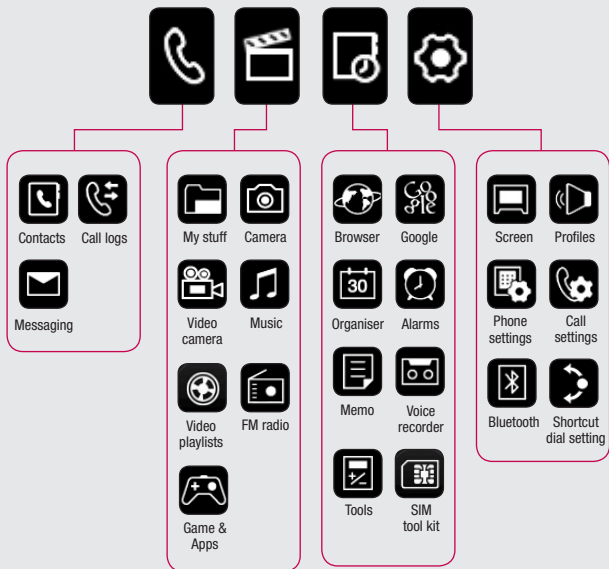

01

02

03

04

05

06

07

08

Your standby screen

Whenever your KF700 isn't in use it'll return to your standby screen. From here you can access menu options, make a quick call and change your profile - as well as many other things.

Touchscreen tips

The standby screen is also a great place to get accustomed to the InteractPad.

To select an item touch the icon on the touchscreen accurately. Your KF700 will vibrate slightly when it recognises you've touched an option.

- There's no need to press too hard, the InteractPad is sensitive enough to pick up on a light yet firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys around it.
- When the screen light is off, press the lock/unlock key on the right hand side of the phone to restore the standby screen.
- Don't cover the phone with a case or cover as the InteractPad will not work with any material covering it.



▲ Touchscreen

The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch to open the call screen. You can call without having to slide the phone open. To initiate a video call, press the **Video call** tab after inputting the number.



Touch to open your address book. Your contacts are displayed as an alphabetical list. You can also create new contacts and edit existing ones. See page 23 for details.



Touch to create and send an SMS message. See page 26 for details.



Touch to open the full menu which is separated into four sub-menus. Touch each sub-menu's vertical tab to view further options.

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as depicted in the figure below.



Please do not cover the antenna area with your hand during a call or whilst using a Bluetooth connection. It may degrade speech quality.

01

02

03

04

05

06

07











08













Your standby screen

The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.



Icon	Description
	Multitasking (In sub-menu)
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	An alarm is set


Icon	Description
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Flight mode is selected
	Bluetooth is active
	HSDPA available
	3G available

Changing your Status from the status bar

Touch the icon that represents your current setting in the status bar and the Status Summary will open. It shows the current Time, Network, Service ID, Battery, Handset memory, External Memory, Profile, MP3, Flight Mode and Bluetooth status. You can set Profile type, play MP3 and activate/deactivate Flight Mode and Bluetooth.




Using the Multitasking function


If you use any function, you can find Multitasking  on the top. Touch  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

From any application, touch  and select Home screen to return to the standby screen without exiting or closing the application.

Calls

Making a call or video call



- 1 Slide open the phone.
- 2 Key in the number using the keypad.
To delete a digit press the **C** hard key.
- 3 Touch **Call** or press the  hard key to initiate the call. Touch  to make a video call.
- 4 To end the call press the  hard key.


TIP! To call with the slide closed. Touch  to open the touchscreen keypad. Enter the number and press **Call**.

TIP! To enter + for making an international call, press and hold 0.


TIP! Press the lock/unlock button to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the standby screen touch  to open the address book.
- 2 From the list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 3 You can use the keypad to enter the first letter of the contact you want to call.
- 4 Touch **Call** or press the  hard key to initiate the call.

TIP! When the slide is closed, touch  to open your address book. Scroll using the side bar or type the first letter of your contact's name to jump to that section of your contact list.

Answering and rejecting a call

When your phone rings press the  hard key to answer the call.

Press **Unlock** then **Silent** to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

TIP! To answer a call with the slide closed touch **Unlock** and select **Accept**.

TIP! To reject a call with the slide closed touch **Unlock** and select **Silent**, then **Reject**.

In-call options



Mute - Touch to turn off the microphone so the person you are talking to cannot hear you.

Speaker - Touch to turn on the speaker phone.

End - Touch to end the call.

Hold - Touch to put a caller on hold. Touch **Resume** to continue your conversation.

Options - Choose from a list of further in-call options, including **Go to contacts** and **Go to messages** so you can check your messages and add contacts during a call. You can also end the call from here by touching **End call**.

Adjusting the call volume

To adjust the volume during a call turn the jog wheel clockwise to increase it or anti-clockwise to decrease it.

01

02

03

04

05

06

07


08


Calls

Speed dialling

You can assign a frequently-called contact to a speed dial number.


- 1 Touch , select .
- 2 Choose **Contacts** and touch **Speed dials**.
- 3 Your Voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 4 Your address book will open. Select the contact you'd like to assign to that number by touching their phone number once.

To call a speed dial number, slide open the phone and hold the assigned number until the contact appears on screen. The call will initiate automatically, there's no need to press .

TIP! When the slide is closed, touch . Select the contact you'd like to call then touch and hold their number. The call will initiate automatically.

Viewing your call logs

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

If you press  it brings up the calls lists. There are two arrows at the top of the screen which allow you to scroll between:

All calls - View the complete list of all your dialled, received and missed calls.

Dialled calls - View the list of all the numbers you have called.

Received calls - View the list of all the numbers you have received calls from.

Missed calls - View the list of all the calls you have missed.



Call charges - View the charges applied to your dialled numbers (this service is network dependant, some operators are unable to support this) and the call duration of all your calls; received and dialled.

Data volume - View the amount in kilobytes of all your received and sent data.

TIP! From any call log touch  and **Delete all** to delete all the recorded items.

TIP! Touch any single call log entry then **View** to view the date, time and duration of the call.

Using call divert

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Call divert** and choose **Voice calls** or **Video calls Deactivate all**.

- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable then touch **Activate**.
- 4 Input the number you'd like to divert to.
- 5 Touch **Divert** to activate.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.



TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Call barring** and choose **Voice calls** or **Video calls** **Deactivate all**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial numbers** from **Call settings** to turn on and compile a list of numbers which be called from your phone. You'll need your PIN2 code from your operator. If you create a fixed dial list, only the numbers in the list can be called from your phone.

Changing the common call settings

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Common setting**. From here you can amend the settings for:
 - Call reject** - Select **On** or **Off** and choose to reject all calls, those from specific groups or contacts, calls from unregistered numbers (those not in your contacts) or callers who don't have caller ID on.
 - Send my number** - Choose whether your number will be displayed when you call someone.
 - Auto redial** - Choose **On** or **Off**.
 - Answer mode** - Choose how to answer the phone: **Press send key**, **Slide up** or **Press any key**.
 - Minute minder** - Select **On** to hear a tone every minute during a call.

01

02

03

04

05

06

07

08

Calls

BT answer mode - Select **Hands-free**



to be able to answer a call using a Bluetooth headset or select **Handset** to press a key on the handset to answer a call when using a Bluetooth headset.

Save new number - Choose **Yes** or **No**.

Slide close settings - choose what happens when you close the slide during a call. Choose from **End call** or **Continue call**.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Changing your video call settings


- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Video call setting**.
- 3 Choose the settings of your video calling. Determine whether to **Use private image** and **Select private image**, and switch on the **Mirror** (so you can see yourself on screen).

Contacts




Searching for a contact

There are two ways to search for a contact:




From the standby screen

From the standby screen touch  to open the address book.

From the main menu

- 1 Touch  and tap  and select **Contacts**. Then touch Search.
- 2 From the list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 3 You can use the keypad to enter the first letter of the contact you want to call to jump to that section.
- 4 Touch **Call** or press the  hard key to initiate the call.



Adding a new contact

- 1 Touch  and tap  and select **Contacts**.
- 2 Touch **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **USIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Input the number and touch  and you can input more numbers.
For example, you can input a different number for their Mobile, Home, Office,

Pager and Fax. Touch **Save** after each one you enter.


- 6 You can then add up to two email addresses.
- 7 Assign the contact to a group. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also add an Image, Ringtone, Homepage, Home address, Company name, Job title, Company address and a Memo.
- 9 Touch **Save** to save the contact.

TIP! You can create customised groups for your contacts, see **Creating a group** on page 24.

TIP! When the slide is closed, touch  and key in the contact's number. Touch  and choose **Save number** then **New contact**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 23.
- 2 Press  to open the list of options. From here you can:
Edit - Change any of the contact's details.

01

02

03

04

05

06

07

08

Contacts

Send message - Send a message to the contact. If the contact has an email address, select whether you'd like to send an email or SMS/MMS. See page 26 for details on how to send messages.

Send business card - Send the contact's details to another person as a business card. Choose to send it as a **Text message, Multimedia message**, using **Email** or via **Bluetooth**.

Make a video call - Video call the contact.


Save to Handset - Choose to save the contact to the USIM card or handset.

Delete - Delete the contact. Touch **Yes** if you are sure.

Creating a group

- 1 From the standby screen touch  tap  and select **Contacts**.
- 2 Select **Groups** and touch .
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Save**.

Note: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

TIP! You can edit an existing group by highlighting it and touching . Choose to Add a member to the group from your contacts, assign a group ringtone, rename the group or delete a group.

Changing your contact settings

You can adapt your contact settings so that your address book works in the way you prefer.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 From the standby screen touch  then tap . Select **Contacts** and choose **Settings**.
- 2 From here you can adjust the following settings:
 - Contact list settings** - Choose whether to view contacts saved to both your **Handset & USIM, Handset** only or **USIM** only. You can also select to show the first name or last name of a contact first.
 - Synchronise contacts** - Connect to your server to synchronise your contacts. See Synchronising your contacts on page 65.

Copy - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

Move - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to, e.g. if you move a contact from your USIM to the handset it will be deleted from the USIM memory.



Send all contacts via Bluetooth - Beam all of your contacts to another device or computer using Bluetooth.

Backup contacts - See **Backing up and restoring your phone's information** on page 64.

Restore contacts - See **Backing up and restoring your phone's information** on page 64.

Clear contacts - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your address book.

Viewing information

- 1 From the standby screen touch  tap  and select **Contacts**.
- 2 Select **Information**.
- 3 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.

TIP! If you've yet to add a business card for yourself, select **Add** and enter all your details as you would for any contact. Touch **Save** to finish.

01

02

03

04

05

06

07




08

Messaging



Messaging


Your KF700 combines SMS, MMS and email into one intuitive and easy to use menu.

There are two ways to enter the messaging centre:

- 1 Touch  from the standby screen.
- 2 Touch  from the standby screen, then tap  and select **Messaging**.

Sending a message

- 1 Touch  then choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS. Or to send an email, choose **Email**. See page 29 for details.
- 3 A new SMS or email will open. Write your message as normal.
- 4 Touch  then **Insert**, to add an image, video, sound or other information, including contact details.
- 5 Touch **Send**. Choose a contact from your list and press **Select** or key in a new number. You can add multiple contacts.


 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering text

There are two ways to enter text: T9 predictive and ABC manual.

To switch between text entry methods touch the corresponding icon at the top of the screen.

 **T9 predictive text, Abc manual** - Touch to turn on T9 predictive text then select T9 abc, T9ABC, 123. Touch again to turn T9 predictive off.

 **Abc manual** - Choose abc, ABC or 123.


To enter a space touch **0**.

To delete a character use the **C** hard key below the screen.

To enter a symbol touch ***** or the hash key.

T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'. If there is more than one option for the keys you have pressed, a list will appear on the screen. Select the word you want by touching the screen.

If the word you want doesn't appear, touch  and select **Add to dictionary**. Enter the word using Abc manual mode and your word or name will be added to the dictionary.



Abc manual

In Abc mode you must touch the key repeatedly to choose a letter from the choices available on the key. For example, to write 'hello', touch **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

Setting up your email

You can stay in touch on the move using email on your KF700. It's quick and simple to set up a POP3 or IMAP4 email account.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then select **Settings**.
- 2 Touch **Email** then **Email accounts**.
- 3 Open  and touch **Add new**.
- 4 You then enter an email set up wizard. Follow the instructions and touch Continue to move on. You will need the following details:

Title - Enter a name for this account.

My name - Enter your name.

Username - Enter the account's username.

Password - Enter the account's password.

Email address - Enter the account's email address.

Reply email address - Enter the 'reply to' email address.

Outgoing mail server - Enter the account's details.

Incoming mail server - Enter the account's details.

01

02

03

04

05

06

07

08

Messaging

Maximum receive size - Choose the size limit of your emails, the maximum is 1MB.

Mailbox type - Enter the mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

Save sent mail into - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

Access point - Choose your Internet access point. Press  to use a preset access point.

Auto retrieve - Choose whether to fetch your new emails automatically.

Advanced settings - Choose whether to use the advanced settings.

SMTP port number - Normally, this will be 25.

Incoming server port - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

SMTP authentication - Choose the security settings for the outgoing mail server.

SMTP username - Enter the SMTP username.

SMTP password - Enter the SMTP password.


APOP secure login - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.


Retrieving your email

You can automatically or manually check your account for new email. See 'Change your email settings' to check automatically.

To check manually:

- 1 Touch  then **Settings**, followed by **Email**.
- 2 Touch **Retrieve interval** and choose an interval time to switch auto retrieve on.

Sending an email using your new account

- 1 Touch  then chose **Create new**.
- 2 Choose **Email** and a new email will open.
- 3 Enter the recipient's address and write your message. Touch the paperclip symbol to attach images, videos, sounds or other file types.
- 4 Touch **Send** and your email will be sent.

TIP! You can email Word, Excel, PowerPoint and PDF documents to your KF700 so you can review them on the move.

Changing your email settings

You can adapt your email settings so that it works in the way you prefer. You may have already entered some of this information during the set up wizard.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then open **Settings**.
- 2 Touch **Email** then **Email accounts** and then you can adapt the following settings:
 - Allow reply email** - Choose to allow the sending of 'read confirmation' messages.
 - Request reply email** - Choose whether to request 'read confirmation' messages.
 - Retrieve interval** - Choose how often your KF700 checks for new email messages.
 - Include message in Fwd & Reply** - Choose to include the original message or not.
 - Include attachment** - Choose to include the original attachment.
 - Auto Retrieval in Roaming** - Choose to auto retrieve your messages when abroad, or stop auto retrieval.

New Email notification - Choose whether to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Message folders

You'll recognise the folder structure used on your KF700, it's fairly self-explanatory.

Inbox - All the SMS and MMS messages you receive are placed into your inbox. From here you can reply, forward and more, see below for details.

Mailbox - All the email messages you receive are placed in your mailbox. If you have more than one email account set up messages are filed into the correct account.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you send are placed into your Sent items folder.

My folders - Create new, personal folders to manage your messages.

Templates

Emoticons

Settings

Messaging

Managing your messages

You can use your Inbox to manage your messages.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then **Inbox**.
- 2 Touch  and then choose to:
 - Reply** - Send a reply to the selected message.
 - Forward** - Send the selected message on to another person.
 - Call** - Make a Voice or Video call to the person who sent you the message.
 - Delete** - Delete the message.
 - Create new message** - Open a new, blank message or email.
 - Mark/Unmark** - Mark your messages for multiple deletion or to move them into a different folder.
 - Copy & Move** - Choose to make a copy of your message or move it to a different folder.
 - Filter** - View your message by type. This will group SMS separately from MMS.

Message info. - See additional information for the message, for example, the time it was sent.

If you see the message **No space for USIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to Add new, Edit, Delete or Delete all for Text templates, and Add new, Write multimedia message or Edit for Multimedia templates.

Using emoticons


Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Touch  then choose **Emoticons**.
- 2 Touch  to **Add new, Edit, Delete** or **Delete all** emoticons.

Changing your text message settings

Your KF700 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, see below for more information.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Settings** then **Text message**. You can make changes to:

Text message centre - Enter the details for your message centre.

Delivery report - Choose to receive confirmation that your message was delivered.


Validity period - Choose how long your message is stored at the message centre.

Message types - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **Email**.

Character encoding - Choose how your characters are encoded, this impacts the size of your message and therefore data charges.

Send long text as - Choose to send as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch  then choose **Settings** then **Multimedia message**. You can make changes to:

Retrieval mode - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on screen.

Delivery time - Deliver your message at a specific time.

Multi msg. centre - Enter the details for your message centre.

Note: See page 29 for details on how to change your email settings.

Messaging

Changing your other settings

Touch  then choose **Settings** then:

Videomail - If your operator supports this service you can create a new account.


Voicemail - Your voicemail service has already been set up although you can add new voicemail services here.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Info. service - Choose your reception status, language and other settings.


Camera


Taking a quick photo


- 1 Press the  key on the right hand side of the handset.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Slightly press the capture button. The white viewfinder box in the centre of the screen will change to red as the camera attempts to focus.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Press the capture button fully.


After you've taken your photo


Your captured photo will appear on screen. The name of the image runs along the bottom of the screen and five icons will appear.

 Touch to take another photo straightaway. Your current photo will be saved.

 Touch to look at the other photos in your album. Your current photo will be saved. See page 37 for **Viewing your saved photos**.

 Touch to send the photo as an MMS, Email or via Bluetooth. You can also print the photo using Bluetooth. See page 26 for **Sending a message**, page 68 for **Sending and receiving your files using Bluetooth**.

 Touch to set the photo you have just taken as your wallpaper.

 Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.

01

02

03

04

05


06

07

08

Camera


Getting to know the viewfinder

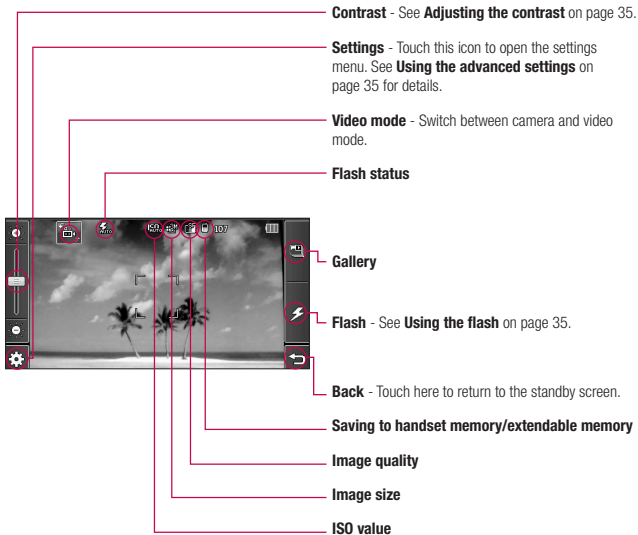



TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

Using the flash


The flash is set to Auto as a default, but there are other options.

- 1 Select  from the middle right of the viewfinder to enter the flash sub-menu.
- 2 There are four flash options:
Auto - Your camera will assess the lighting needed to take a good picture and use the flash as necessary.
When taking a picture - The flash will only come on as you take a photo.
Always on - The flash will always be on when in camera mode.
Always off - The camera will never flash. This is useful if you want to save battery power.
- 3 Touch the flash option you'd like to use.
- 4 When you've made your selection the flash menu will automatically close, ready for you to take your picture.


Adjusting the contrast


Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper. Slide the contrast indicator along the bar, towards  for a lower contrast, hazier image or towards  for a higher contrast, sharper image.


Using the advanced settings

From the viewfinder touch  to open all the advanced settings options.



 **Image size** - Change the size of the photo to save on memory space or take a picture preset to the correct size to attach to a contact. See **Changing the image size** on page 36.

 **Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be but the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

 **White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

01

02

03

04

05


06


07


08


Camera


 **Colour tone** - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour tone** on page 37.


 **Self-timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.


 **Night mode** - Choose between **Off** and **On**. In the night, this mode is useful for taking good photos.


 **Burst shot** - The camera will take a series of shots (three, six or nine), great for recording a fast paced activity.

 **Frame shot** - You can choose to apply a frame to the photo you take.

 **ISO** - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when the flash can't be used. Choose an ISO value from **Auto**, **ISO 100**, **ISO 200**, **ISO 400** or **ISO 800**.

 **Shutter sound** - Select one of the pre-set shutter sounds.

 **Swap cam** - Switch between the LG KF700's **inner camera** and **Outer camera**. See **Using the inner camera** on page 37 for details.

 **Memory in use** - Choose whether to save your photos to the **Handset memory** or to the **External memory**.

 **Wide view** - Choose between **Off** and **On**.



 **Reset settings** - Choose **Yes** to restart your phone to its original camera settings.

Note: Always touch **Close** after selecting a new setting to implement the changes you've made.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu. Remember to touch **Close** before exiting to apply any changes.



Changing the image size

The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.

- 3 Select a pixel value from the five numerical options (**3M: 2048x1536**, **2M: 1600x1200**, **1M: 1280x960**, **640x480**, **320x240**) or choose the preset: **Contacts** - This sets up the camera to take a photo the perfect size to be added to a phone contact.



Choosing a colour tone

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 There are six colour tone options, **Normal** (colour), **Black & White**, **Negative**, **Sepia**, **Sketch**, **Solarize**.
- 4 Touch the colour tone you'd like to use and select **Close**.


TIP! You can change a photo taken in colour to black and white or sepia after it's taken but you cannot change a picture taken in black and white or sepia back to colour.



Using the inner camera

Your LG KF700 has a 640x480 inner camera, not just for video calling but for taking pictures too.




- 1 To switch to the inner camera touch  then select . Then choose **Inner camera**.

- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image press the capture button as normal.

TIP! The inner camera has fewer settings as it has no flash or ISO. You can still alter the image size, image quality, white balance and more by touching  in the same way as when using the main camera.

- 3 After you've taken the photo you'll be offered all the same options as are available for an image taken with the main camera.
- 4 To return to the main camera touch  and then .

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply touch . From the standby screen you should touch , then select . Choose **My stuff** followed by **My Images**.
- 2 Your gallery will appear on screen.

01

02

03

04


05

06

07

08

Camera

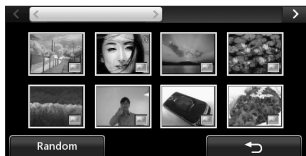




Viewing the details of a photo

- 1 Touch the photo once then touch the **i** that appears.
- 2 The photo will reveal the name, the date it was taken, the size (in kilobytes and pixels) and the image type (e.g. jpeg) on the top.
- 3 Touch **x** to close the details and view the photo.

Video camera


Shooting a quick video


- 1 Press the camera key on the right side of the phone.
- 2 Touch the video camera icon in the viewfinder to switch to video mode. The video camera's viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Press the capture button once to start recording.
- 5 **REC** and a timer will appear at the bottom of the viewfinder.
- 6 To pause the video touch  and resume by selecting .
- 7 Touch  on screen or press the capture button a second time to stop recording.


After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom of the screen together with three icons down the right side.

 Touch to shoot another video straight away. Your current video will be saved.

 Touch to look at the other video clips in your album. Your current video clip will be saved. See page 43 for **Watching your saved videos**.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to send the video as an MMS, Email or via Bluetooth. See page 26 for **Sending messages**, or page 68 for **Sending and receiving your files using Bluetooth**.

01

02

03

04

05


06

07

08

Video camera

Getting to know the viewfinder

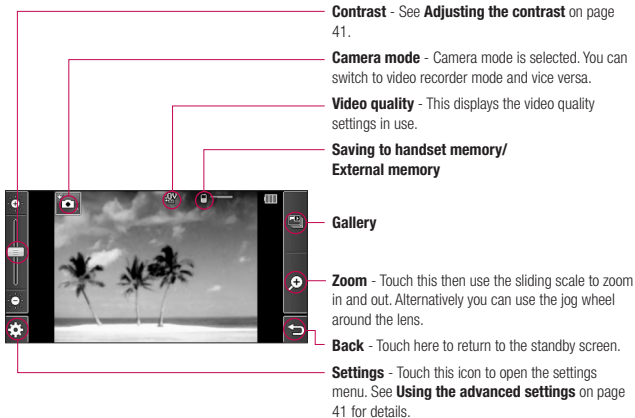

TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

Adjusting the contrast


Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.


Slide the contrast indicator along the bar, towards ☁️ for a lower contrast, hazier image, or towards ☀️ for a higher contrast, sharper image.


Using the advanced settings


From the viewfinder touch ⚙️ to open all the advanced settings options.




 **Image size** - Change the size of the video to save on memory. See **Changing the video image size** on page 42.


 **Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.


 **White balance** - The white balance ensures that any white in your video is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.


 **Colour tone** - Choose a colour tone to apply to the video you're taking. See **Choosing a colour tone** on page 42.

 **Duration** - Choose **Normal** or limit your video to fit in an **MMS**.

 **Night mode** - Choose between Off and On.

 **Voice** - Choose **Mute** to record a video without sound.

 **Swap cam** - Switch to your LG KF700's inner camera to record a video of yourself. See **Using the inner video camera** on page 42 for details.

 **Memory in use** - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

 **Reset settings** - Choose Yes to reset your phone to its original video settings.

01

02

03

04

05

06

07





08

Video camera

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the video colour or quality you'll be able to see the viewfinder change in preview behind the settings menu.


Changing the video image size

The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 Select a pixel value from the 2 options:
 **320x240** - Smaller image size, therefore smaller file size. Great for saving on memory space.
 **176x144** - Smallest image size and therefore smallest file size.

TIP! For video format conversion software, see the CD you received with your KF700.



Choosing a colour tone



- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 There are seven colour tone options, **Normal** (colour), **Black & White**, **Negative**, **Sepia**, **Sketch**, **Solarize** and **Emboss**.
- 4 When you've made your selection touch **Close** and the changes will appear in your viewfinder.


TIP! You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia back to colour.

Using the inner video camera




Your LG KF700 has a 320x240 inner camera, not just for video calling but for recording videos too.

- 1 To switch to the inner camera touch  then select .
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, press it a second time to stop recording.

- 3 After you've shot the video you'll be offered all the same options as are available for a video shot using the main camera.
- 4 To return to the main camera touch  and then .

TIP! You can still alter the video size, video quality, duration, mute, white balance, colour tone and more by touching  in the same way as when using the main camera.

Watching your saved videos

- 1 From the viewfinder, simply touch . From the standby screen you should touch , then select  and select **My stuff** and choose **My Videos**.
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery.
- 4 Touch the video a second time to open it fully.

01

02

03

04

05



06

07

08

Your photos and videos

Viewing your photos and videos

- 1 From the viewfinder, simply touch .
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo you want to view once to bring it to the front of the gallery.
- 4 Touch it a second time to open it fully.
- 5 Videos will begin to play automatically. To pause playback touch the screen to bring up the options and select .




TIP! Change the way your photos and videos are displayed in the gallery by touching **Standard** or **Random** at the bottom of the screen.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, touch the volume bars on the bottom of the screen. Alternatively, use the jog wheel next to the camera lens.



Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image.
- 3 Touch .
- 4 Select **Save**.
- 5 The image will appear on screen, with its assigned image name.
- 6 Touch the image then  to return to the gallery.
- 7 The image will be saved in the My stuff **My images** folder and appear in the gallery. You need to exit gallery and then re-open for this to appear.



WARNING: Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing the details of a video or photo

Videos and photos are grouped together in the gallery. If you have trouble telling which are photos and which are videos, check the details. For example, videos may be MP4 or 3GP file types and photos may be JPEG or GIF file types.

- 1 Touch the video still or photo to bring it to the front of the gallery screen. Then touch  to see more information.
- 2 The video still or photo will reveal its name, the date it was taken, its size (in kilobytes and pixels) and whether it's an image or a video (e.g. MP4/3GP or JPEG) on the top.
- 3 Touch  to close the details and view the video still or photo.


Sending a photo or video from the gallery

- 1 Touch a photo or video twice to open it. If you select a video, press  when it starts to play.
- 2 Select  and choose how you would like to send the video or photo: **Message**, **Email**, **Bluetooth**.
- 3 The chosen messaging application will open so you can send the video or photo.


Note: The photo or video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case choose one of the other sending options.


Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slide show. Videos cannot be viewed as a slide show.

- 1 Touch the photo you would like to begin the slide show twice to open it.
- 2 Select  on the left hand side.
- 3 The slide show will begin.


There are five options within slide show:

 Touch to display the photo in full screen mode. The bar on the left hand can increase or decrease the speed of the slide show.

 Touch here to view the photos in a random order (i.e. not the chronological order they appear in your gallery).

 Touch to skip to the next photo.

 Touch to return to the last photo shown.

 Touch to pause the slideshow on a particular photo. Touch again to resume playback.

01

02

03

04

05


06

07

08


Your photos and videos

Setting a photo as wallpaper


- 1 Touch the photo you would like to set as wallpaper twice to open it.
- 2 Touch .
- 3 The screen will switch to portrait mode. Select the portion of the photo you would like to set as wallpaper. This area will appear in actual size on screen.
- 4 When you are happy with the section touch **Set**.

Editing your photos

There are loads of great things you can do to your photos to change them, add to them or liven them up a little.



- 1 Open the photo you'd like to edit and touch  to bring up the options.




- 2 Touch the icons to adapt your photo:
 -  Draw something on your photo freehand. Select the thickness of the line from the four options. To change the colour of the line see


 below (the colour icon will change to the colour you have selected).

 See **Adding text to a photo** on page 47.

 Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be. To change the colour of a stamp see  below.


 Select a rectangular or ellipse area of your photo.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file** enter a file name.

 Change the colour of a stamp, line or some text. You must select the colour before you draw, write or stamp the photo.

 Undo the last edit you made to the photo.

 See **Adding an effect to a photo** on page 47.



 Touch to open further effect options including **Rotate** and **Mirror**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo** on page 48.

 Touch to return to the gallery.

Adding text to a photo

- 1 From the editing screen, touch **T**.
- 2 Input the letter you want.
- 3 Enter your text using the keypad and touch **Done**.
- 4 Move the text by touching it and sliding it to the place you'd like it to be.

Adding an effect to a photo


- 1 From the editing screen, touch .
- 2 Choose to apply any of the six options to the photo:
 - Soften** - Move the marker along the bar to soften the focus of the photo. Select **Done** to save the changes or choose **Cancel**.
 - Sharpen** - Move the marker along the bar to sharpen the focus of the photo. Select **Done** to save the changes or choose **Cancel**.
 - Mosaic blur** - Touch to apply a blurred mosaic effect to the photo. Touch  to return to the normal photo.
 - Colour Effect** - Change the colour of a photo to **Black and white**, **Sepia**, **Colour negative**, **Enhanced RGB** or **Contrast**. If you select **Contrast** move the marker along the bar to increase or decrease the contrast.

Frame - Add a frame to your photo.

You may be prompted to allow the image size to be changed. To see the frame types select **Yes**. The chosen frame will be superimposed over your photo.


Resize - Touch here for size options.

Touch your desired size to change the size of the photo.

- 3 To undo an effect simply touch .

TIP! You can add more than one effect to a photo, except for a colour effect of which you can only select one at a time.

Adding a colour accent to a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour Accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area that is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Touch **Save**.
- 5 All colour will be removed from the photo, apart from the section marked for colour accenting.
- 6 Alter the intensity of the accenting by sliding the marker up or down the intensity bar.

01

02

03

04

05

06

07

08

Your photos and videos

- 7 Select **Save** to save the changes.

Swapping the colours in a photo


- 1 From the editing screen, touch **More**.
- 2 Choose **Colour Swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Touch  and select a colour.
- 5 Press **Swap**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select **Save** to save the changes.

Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then . Touch **My stuff** to open a list of folders storing all of your multimedia files.

My images

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera. Touch  to change the view from thumbnail image to list.

My images options menu

Touch  for options.

The options which are available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **Print via Bluetooth**, **Sort by** and **Memory info**. options are available for default images.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Send - Send the image to a friend.

Use as - Set the image to appear at certain times.

Mark/Unmark - Select multiple files.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the phone memory to a memory card or vice versa.

Delete - Delete an image.

Rename - Rename an image.

Create new folder - Create a new folder within the **My images** folder.


Slide show - Start a slide show.

Print via Bluetooth - Print an image file via Bluetooth®.

Sort by - Sort images into a specific order.

Memory Manager - View the memory status.

Sending a photo

- 1 Touch  then .
- 2 Touch **My stuff** then choose **My images**.
- 3 Select a photo and touch .
- 4 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**.

01

02

03

04

05

06

07

08

Multimedia

- 5 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:
 - Wallpaper** - Set a wallpaper for the standby screen.
 - Outgoing call** - Set an image to appear during outgoing calls.
 - Start-up** - Set an image to appear when you switch the phone on.
 - Shut down** - Set an image to appear when you switch the phone off.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

Organising your images

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then Sort by.
- 4 Choose from **Date**, **Type** or **Name**.

Note: As well as sorting your images by category, you can also manually sort them.

Deleting an image

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Delete** then **Yes** to confirm.

TIP! To quickly delete any file in **My stuff**, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.





Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Select **Move** or **Copy**.







Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Mark/Unmark**.
- 4 A box will appear to the left of each image. Touch the image twice and a tick will appear in the box marking it.
- 5 To unmark an image, touch the image again so that the tick disappears from the box.
- 6 Once you have marked all of the appropriate boxes, press  and choose one of the options.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Slide show**.
- 4 Use the  and  to skip through the images or touch  to show your images in a random order.



Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Memory Manager**.
- 4 Choose **Handset memory** or **My memory card**.

Note: If you do not have a memory card inserted, you will not be able to select **My memory card**.

Multimedia

My sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**.

From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Touch  then .
- 2 Touch **My stuff** then **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Select a sound and touch **Play** to listen to it.
- 5 Touch  and select **Use as**.
- 6 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up**, **Shut down**.

My videos


The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch  then .
- 2 Touch **My stuff** then **My videos**.
- 3 Select a video and touch **Play**.


TIP! To quickly delete any file in My stuff, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.

Using options while video is paused

Touch  while in pause mode and choose from:

- Capture** - Capture the frozen frame as a picture.
- File info.** - View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.
- Send** - Send the video in a Message, Email, or via Bluetooth.
- Delete** - Delete the video.
- Use as** - Use the video as a ringtone.

Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message**, **Email**, **Bluetooth** or **YouTube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Using a video clip as a ringtone

- 1 Select a video and touch .
- 2 Touch **Use as** and choose from **Voice ringtone** or **Video ringtone**.

Using the video options menu

From the **My videos** folder, you can choose from the following options:

Use as - Set a video as your ringtone.

Send - Send a video to a friend.

Move - Move a video clip from the phone memory to a memory card or vice versa.

Copy - Copy a video clip from the phone memory to a memory card or vice versa.

Delete - Delete a video.

Rename - Rename a video.

Mark/Unmark - Select multiple files.

Create new folder - Create a new folder within the **My videos** folder.



Sort by - Sort videos into a specific order.

Memory info - View the memory status.

My games and apps

You can download new games and applications to your phone to help keep you amused when you have time to spare.

Downloading a game

- 1 Touch  then .
- 2 Touch **My stuff** then **My games & Apps**.
- 3 Select **Games Applications** and touch **Connect**.

- 4 You will connect to the web portal from where you can find a game to download.

TIP! To quickly delete any file in My stuff, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.

Playing a game

- 1 Touch  then .
- 2 Touch **My stuff** then **My games & Apps**.
- 3 Select a game and touch **Launch**.

Using the games options menu

From the **My Games & Apps** folder, the following options are available:

Create new folder -  Create a folder within **My Games & Apps**.

Sort by - Sort the games and applications by **Date**, **Size** or **Name**.

Memory info - View the memory status.

Flash contents


The Flash contents folder contains all of your default and downloaded SWF files.

Multimedia


Viewing an SWF file

- 1 Touch  then .
- 2 Touch **My stuff** then **Flash contents**.
- 3 Select the file and touch **View**.

Using options viewing the SWF file

Full screen view - View your SWF in full screen mode (this only appears if you touch  without pausing).

Mute - Switch the sound off.

 - Pause or resume playback.

Use as wallpaper - You can set the wallpaper with Default file.

File info. - View the name, Size, Date, Time, Type and Protection of the file.

Documents

- 1 Touch  then .
- 2 Touch **My stuff** then **Documents**.

From the Documents menu, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files in **My stuff**.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 65 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.

Viewing a file

- 1 Touch  then .
- 2 Touch **My stuff** then **Documents**.
- 3 Select a document and touch **Open**.


Others


The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To Move a file from Others to Documents:

- 1 Touch  then .
- 2 Touch **My stuff** then **Others**.
- 3 Select a file and touch .
- 4 Touch **Move**, then touch **Move** again.

Playing a song



- 1 Touch  then .
- 2 Touch **Music**, then **All tracks**.
- 3 Select the song you want to play and touch **Play**.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to stop the music and return to the **Music** menu.

TIP! To change the volume while listening to music, touch  or use the jog dial.



Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch  then .
- 2 Touch **Music**, then **Playlists**.
- 3 Touch **Add**, enter the playlist name and touch **Save**.
- 4 The All tracks folder will show. Touch all of the songs that you would like to include in your playlist; a tick will show next to their name.
- 5 Touch **Done**.

01

02

03

04

05

06

07

08



Multimedia

To play a playlist, select it and touch **Play**.

Note: To add a second playlist, touch  then **Add new playlist**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. When you want to do this, you can edit the playlist.

- 1 Touch  then .
- 2 Touch **Music**, then **Playlists**.
- 3 Open the playlist.
- 4 Touch  and select:

Now playing – Play the playlist.

Add new songs – To add more songs to the playlist. Mark the ones you want and touch **Done**.

Move up/down – Move the song up or down the list to change the playing order.

Send – Send a song as a message or via Bluetooth.


Remove from list – Remove a song from the playlist. Touch **Yes** to confirm.

Mark/Unmark – Select multiple files.

Use as – You can set the song as an effect sound.

Memory info – View the playlist information.




Deleting a playlist

- 1 Touch  then .
- 2 Touch **Music**, then **Playlists**.
- 3 Touch  then **Delete** or **Delete all** to delete all of the playlists.

Searching for stations

You can tune your phone into radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 24 channels on your phone.




To auto tune:

- 1 Touch  then .
- 2 Touch **FM radio** then .
- 3 Touch **Auto scan** then **Yes**. The stations found will automatically be allocated to a channel number in your phone.

To manually tune:

- 1 Touch  then .
- 2 Touch **FM radio**.
- 3 Touch the channel number you want to save the station to.
- 4 Use the arrow keys at the top of the screen to find your station.
- 5 Press **Set** to save that station.

Resetting channels

- 1 Touch  then .
- 2 Touch **FM radio** then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Touch  then .
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

01

02

03

04

05

06



07

08

The web

With the browser at your fingertips, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.



Accessing the web

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.


Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.




- 3 To add a new bookmark, select  and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required one and touch **Open**. You will be connected to your bookmark.

Saving a page


- 1 Access your required web page as described above.
- 2 Touch  and select **Saved pages**.
- 3 Enter a name for the web page so you can easily recognise it.
- 4 Touch **Save**.

TIP! This menu will also allow you to edit titles of saved pages, and delete saved pages.


Accessing a saved page

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and touch , followed by **Open**.

Viewing your browser history

- 1 From the standby screen select **☰**, then touch  and choose **Browser**. Select **History**.
- 2 A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select the required page and touch **Connect**.

Changing the web browser settings

- 1 From the standby screen select **☰**, then touch  and choose **Browser**. Select **Settings**.
- 2 You can choose to edit **Profiles**, **Character encoding**, **Cache**, **Cookies**, **Java script**, **Security**, or to reset all settings, select **Reset Settings**.
- 3 Once you have changed your settings, select **OK**.

Using your phone as a modem

Your KF700 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.

- 2 Connect your KF700 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KF700.

Note: For more information on synchronising using the LG PC Suite see page 65.



Using Bluetooth:


- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KF700.
- 2 Pair your PC and KF700 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KF700.

Note: For more information on Bluetooth see pages 68-69.



Organiser

Adding an event to your calendar




- 1 From the standby screen select , then touch  and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  to add new event.
- 4 Select whether you would like to add an **Appointment, Anniversary or Birthday** and touch **OK**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 7 If you would like to add a subject or a note to your event, touch **Subject or Name** and type in your note, followed by **OK**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.


TIP! You can set a holiday period in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holiday.

Changing your default calendar view




- 1 From the standby screen select , then touch  and choose **Organiser**. Select **Settings**.
- 2 Touch **Calendar settings** and choose either **Default view** or **Week starts on**.
- 3 Press **OK** to confirm your choice.

Adding an item to your to do list

- 1 From the standby screen select , then touch  and choose **Organiser**.
- 2 Select **To do** and touch  in the top right hand corner.
- 3 Set the date for the to do item, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your to do list item by selecting **Save**.

TIP! You can edit an item by selecting it, and touching . Now select **Edit**. Confirm your amends by selecting **Save**.



Sharing a to do item

- 1 From the standby screen select , then touch  and choose **Organiser**. Select **To do**.
- 2 Select the to do item you would like to share, then touch .
- 3 Select **Send**. You can choose to share your to do item by **Text message, Multimedia msg., Email** or **Bluetooth**.




TIP! You can back up and synchronise your calendar with your computer. See **PC Sync** on page 64.


Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.2007 will be 09.12.2007. This is great for keeping tabs on deadlines.

- 1 From the standby screen select , then touch  and choose **Organiser**.
- 2 Select **Date finder**.
- 3 In the **From** tab set your required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

Setting your alarm




- 1 From the standby screen select , then touch  and choose **Alarms**.
- 2 Touch  to set your alarm.
- 3 Set the time you would like the alarm to sound and touch **Set**.
- 4 Choose whether you would like your alarm to sound **Not repeated**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun** or **Except holiday**. Press **OK**.

- 5 Select  to select a sound for your alarm. To listen to sounds touch the sound, followed by **Play**. After you have made your selection, touch **Select**.
- 6 Add a memo for the alarm. Touch **OK** when you have finished typing the memo. When the alarm sounds the memo will be displayed.
- 7 Finally you can set the snooze interval at **5, 10, 20, 30** minutes, **1** hour or **off**. Press **OK** to confirm your choice.
- 8 Once you have set your alarm, touch **Save**.

Note: You can set up to 5 alarms.

TIP! Even when your phone is off, the alarm will still sound at the set time. If you touch snooze the alarm will sound again in 5 minutes. If you touch **Stop** the message 'Turn on your phone?' will pop up.

Adding a memo

- 1 From the standby screen select , then touch  and choose **Memo**.
- 2 Touch  to add a new memo.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen the next time you open the **Memo** application.

01

02

03

04

05

06

07

08

Organiser

TIP! You can edit an existing memo. Select the one you want to edit and touch **Edit**.

Voice recorder

Use your **voice recorder** to record voice memos or other sounds.

- 1 Touch  then .
- 2 Touch **Voice recorder** and press  to start recording or press  and choose from:


Duration – Set the recording duration. Choose from **MMS msg. size**, **1 min** or **No limit**.

Quality – Select the sound quality. Choose from Super Fine, Fine or Normal.


Go to my sounds – Open the Voice recordings folder in **My sounds**.


Recording a sound or voice

- 1 Touch  then .
- 2 Touch **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

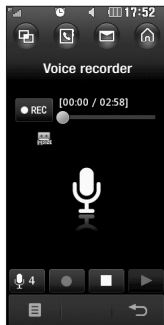




Sending the voice recording




- 1 Once you have finished recording, touch .
- 2 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.


Note: After you have finished recording, touch  and choose **Send, Files(Rename, File info.), Delete, Use as** (to use the recording as your ringtone) or **Go to my sounds**.

Using your calculator



- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Calculator**.
- 3 Use the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ÷, x), followed by =.
- 5 For more complex calculations, touch  and choose from **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad**.

Adding a city to your world clock



- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **World clock**.
- 3 Touch the  icon, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively touch **Map**, and select your chosen city from the map.
- 4 Touch **Select** to confirm your choice.

TIP! If you are abroad you can change your time zone from World Clock by touching , followed by **Set as time zone**.

Converting a unit

- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 You can now select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Using the stopwatch

- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at or touch **Reset** to begin the time again.

01

02

03

04

05

06



07

08

PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match, but also as a backup to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the standby screen select , then touch  and choose **Phone settings**.
- 2 Select **Connectivity**, then **USB connection mode**.
- 3 Select **Data Service** and touch **Select**.
- 4 Insert the supplied CD into your PC. **LG PC Suite Installer** will appear on your screen. Click on **LG PC Suite Installer**.
- 5 Select the language you would like the installer to run in and click **OK**.
- 6 Follow the instructions on screen to complete the **LG PC Suite Installer** wizard.
- 7 Once installation is complete, the **LG PC Suite Icon** will appear on your desktop.

Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite Icon** on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.

- 4 Click on **Next**, then **Next** again, then **Finish**.
Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup or Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, Flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Select **Transfer**, then **Import from mobile handset**. Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.


Note: To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Select **Edit** at the top of the screen, then **Select all**. Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen select **•••**, then touch  and choose **Phone settings**.
- 3 Select **Connectivity**, then **USB connection mode**.
- 4 Select **Mass storage** and touch **select**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.
- 6 All of your phone files will automatically be stored on to your PC hard drive.


Note: Mass Storage backs up content saved on your memory card only, not your handset memory. To transfer the content of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

Settings

Within this folder you can adapt your settings to make your KF700 personal to you.

Note: For information on call settings see page 21.




Changing your screen settings

- 1 Touch  then choose .
- 2 Touch **Screen** and then choose from:
 - Screen theme** - Choose the theme for your Home screen, Outgoing call, Start-up and Shut down.
 - Clock & calendar** - Choose how these are displayed on the screen.
 - Backlight** - Choose how long the backlight and keypad remains on for.
 - Brightness** - Adjust the screen's brightness.
 - Handset theme** - Quickly change the whole look of your screen.
 - Font** - Adjust the font colour.
- 3 Touch **Save** to save your settings.

Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the currently active profile icon at the top of your screen.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then choose .
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 Touch  and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message alerts, Slide tone** settings and more.

Changing your phone settings

Enjoy the freedom of adapting your KF700 so that it works in a way which suits you best.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then choose .
- 2 Touch **Phone settings** then choose from the list below.
 - Date & time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.
 - Power save** - Choose to switch the factory set power saving settings **On** or **Off**.
 - Languages** - Change the language of your KF700's display.
 - Auto key lock** - Choose when and how your keypad is locked.

Security - Adjust your security settings, including PIN codes and handset lock.

Connectivity - See **Changing your connectivity settings** below for more information.

Touchscreen effect - Change the touchscreen settings.

Memory manager - See **Using memory manager** below for more information.

Touchpad calibration - Reset your screen for ease of use.

Reset settings - Reset all the settings to their factory definitions.

Handset information - View the technical information for your KF700.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Touch  then . Touch **Phone settings** and select **Connectivity**.

Network settings - Your KF700 connects automatically to your preferred network.

To change these settings use this menu.

Internet profiles - You can set and view Internet profiles.

Access point - Your network operator has already saved this information. You can add new access points using this menu.

USB connection mode - Choose **Data service** and synchronise your KF700 using the LG PC Suite software to copy files from your phone. See page 65 for more information on synchronisation.

Synch service - See page 65 for more information on synchronisation.

Streaming settings - Your network operator has already saved this information. You may edit it if you'd like to make changes.

Using memory manager

Your KF700 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by . Select **Phone settings** then **Memory manager**.

Handset common memory - View the memory available on your KF700 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications, Documents and others.

Settings

Handset reserved memory - View the memory available on your handset for Text msg on the phone, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

USIM memory - View the memory available on your USIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage settings - Choose the location you prefer items to be saved to.

TIP! See page 12 for information on **inserting a memory card**.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch  and choose **Send**.
Choose **Bluetooth**.
- 3 Touch **Yes** to turn Bluetooth on.



- 4 Your KF700 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and touch **Select**.
- 6 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the relevant folder in My stuff.

Changing your Bluetooth settings:

- 1 Touch  then touch .
- 2 Choose **Bluetooth** then **Settings**.
Make your changes to:
My device visibility - Choose to be **Visible** or **Hidden**.
My device name - Enter a name for your LG KF700.

Supported services - Choose how to use Bluetooth in association with different services. See **Using your phone as a modem** on page 59 or **Using a Bluetooth headset** below.

Remote SIM mode - Choose **On** or **Off**.

My address - Check your Bluetooth address.

Pairing with another Bluetooth device

By pairing your KF700 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Paired Devices** then **New**.
- 3 Your KF700 will search for devices. When the search is completed **Refresh** and **Add** will appear on screen.
- 4 Choose the device you want to pair with, touch **Add** and enter the passcode then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 You passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Yes** to **Connect now**.

TIP! See page 22 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

Accessories

These accessories were supplied with the KF700.

Charger



Data cable and CD

Connect and synchronise your KF700 and PC.



Battery



User Guide

Learn more about your KF700.



Stereo headset



Note

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS 1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KF700

System : GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

Ambient Temperatures

Max : +55°C (discharging), +45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF700

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.6.1, ETSI EN 301 489-07 V1.3.1
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.3.1
ETSI TS 151 010-1 V7.6.0 specified by ETSI EN 301 511 V9.0.2
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-1 V2.2.1 ETSI EN 301 908-2 V2.2.1,
ETSI EN 300 328 V1.6.1

EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji/ Director

Issued Date

22.Feb. 2008

LG Electronics Inc. Amsterdam Office
Veluwezoom15, 1327 AE Almere, The Netherlands
Tel : +31 -36-547 -8940, e-mail : seokim@lge.com


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KF700 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.36 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.18 W/kg averaged over 1g of tissue.

Product care and maintenance



WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and maybe dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



Warranty Card
產品保用證

Mobile Phone
手提電話

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



Welcome to contact for detailed information
& Customer Care Centre address

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms and
conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。


IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.
Otherwise, this warranty will be voided.

重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。

Mobile Phone Warranty Policy

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LG/EHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 - (i) Handset :12 months
 - (ii) Charger : 6 months
 - (iii) Battery :6 months
 - (iv) Hand free earphone :3 months.
 - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
 - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories, etc.)
 - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
 - (5) All parts replaced within the warranty period are the property of LG/EHK. We have rights to handle those parts as necessary.
 - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
 - (7) Warranty will be voided under the following conditions, and LG/EHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alteration or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
 - (8) LG/EHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
 - (9) LG/EHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
 - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
 - (11) This warranty card is restricted within Hong Kong SAR only.
-
- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身: 12個月
 - (ii) 充電器: 6個月
 - (iii) 電池: 6個月
 - (iv) 免提耳機: 3個月
 - (2) 保修服務只適用於原裝行貨，水貨及冒牌貨均屬無效。
 - (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
 - (4) 用戶要求維修服務時，須同時出示手機。保用證及印有IMEI號碼之有效發票正本對本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
 - (5) 在保修期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
 - (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
 - (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人收取所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去、保修服務即無效。
 - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
 - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害、意外事件造成之損失概不負責。
 - (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
 - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
 - (11) 此保用證只適用於香港特別行政區範圍內。



服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜



To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號

Limited Warranty

限期保用證

To provide our best after-sales service, please complete and return this warranty card to us.
您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下專有的售後服務。

Customer Information

客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號



이 휴대폰은 한글 SMS가 지원됩니다.

* * : 최추가 # : 쌍자음

자음	버튼	자음	버튼	자음	버튼
ㄱ	①	ㄴ	④	ㄷ	⑦ → * → *
ㅋ	① → *	ㄷ	⑤	ㅌ	⑦ → #
ㆁ	① → #	ㄹ	⑤ → *	ㅍ	⑦ → * → #
ㄴ	②	ㅍ	⑤ → * → *	ㅊ	⑧
ㄷ	② → *	ㅑ	⑤ → * → #	ㅎ	⑧ → *
ㅌ	② → * → *	ㅓ	⑦		
ㅍ	② → * → #	ㅕ	⑦ → *		

모음	버튼	모음	버튼	모음	버튼
ㅏ	③	ㅗ	⑥ → ⑥ → *	ㅓ	⑥ → ③ → ⑨
ㅑ	③ → *	ㅛ	⑦	ㅕ	⑥ → ⑨
ㅓ	③ → ③	ㅜ	⑨	ㅑ	⑥ → ⑥ → ③ → ⑨
ㅕ	③ → ③ → *	ㅠ	③ → ⑨	ㅓ	⑥ → ⑥ → ⑨
ㅗ	⑥	ㅡ	③ → * → ⑨	ㅕ	⑦ → ⑨
ㅑ	⑥ → *	ㅣ	③ → ③ → ⑨		
ㅓ	⑥ → ⑥	ㅚ	③ → ③ → * → ⑨		



