



KC550 使用手冊

LG ELECTRONICS INC.

KC550

繁體中文
簡體中文
ENGLISH

CE 0168

www.lgmobile.com

MMBB0287918 (1.0) G

Bluetooth QD ID B013915



使用手機前, 請務必詳細閱讀本手冊。並小心保存本手冊, 以備日後參考之用。

KC550 使用手冊

恭喜您買了 LG 先進輕巧的 KC550 手機，本手機專為利用最新的數碼流動通訊科技而設計。

設定 01

備用屏幕 02

基本功能 03

自製功能 04

管理功能 05

網絡功能 06

設定 07

配件 08

內容

01 設定	通訊錄..... 20
了解您的手機..... 7	搜尋通訊錄..... 20
手機視圖..... 8	新增通訊錄..... 20
插入智能咭和電池..... 9	通訊錄選項..... 20
記憶咭..... 12	新增通訊錄至群組..... 21
安裝記憶咭..... 12	重新命名群組..... 21
取出記憶咭..... 12	新增圖片至通訊錄..... 21
格式化記憶咭..... 12	將通訊錄複製到智能咭..... 22
功能總覽..... 13	刪除所有通訊錄..... 22
	檢視資訊..... 22
02 備用屏幕	訊息..... 23
備用屏幕..... 14	訊息..... 23
快捷鍵..... 14	發送訊息..... 23
主功能表..... 14	輸入文字..... 24
狀態列..... 15	設定電子郵件..... 24
	使用新帳戶發送電郵..... 25
03 基本功能	訊息資料夾..... 26
通話功能..... 16	管理訊息..... 26
撥打電話..... 16	使用範本..... 27
透過通訊錄撥打電話..... 16	變更文字訊息設定..... 27
接聽來電和拒接來電..... 16	變更多媒體訊息設定..... 27
調節通話音量..... 17	變更電子郵件設定..... 28
快速撥號..... 17	變更其他設定..... 28
檢視通話記錄..... 17	
使用來電轉駁..... 18	
使用通話限制..... 18	
變更通話設定..... 19	

04 自製功能	重設頻道.....	37
相機.....	收聽收音機.....	37
快速拍照.....	語音備忘錄.....	38
拍攝照片後.....	使用語音備忘錄.....	38
了解取景器.....	錄製語音備忘錄.....	38
使用快速設定.....	發送錄音.....	38
變更圖片大小.....	Muvce 工作室.....	38
檢視已儲存照片.....	我的檔案.....	39
將相片設為牆紙或圖片來電顯示..	圖像.....	39
視像攝錄機.....	圖像選項功能表.....	39
拍攝快速影片.....	發送照片.....	40
錄製影片後.....	管理圖像.....	40
了解取景器.....	刪除圖像.....	40
使用快速設定.....	刪除多個圖像.....	40
觀看已儲存影片.....	建立投影片播放.....	40
檢視影片時調節音量.....	聲音.....	41
MP3 播放器.....	使用聲音.....	41
MP3 播放器.....	影片.....	41
將音樂傳送至手機.....	觀看影片.....	41
播放歌曲.....	在暫停影片時使用選項.....	41
播放音樂時使用選項.....	發送錄像片段.....	41
建立播放列表.....	使用影片選項目錄.....	42
播放播放列表.....	文件.....	42
編輯播放列表.....	檢視文件.....	42
刪除播放列表.....	其他.....	42
FM 收音機.....	外置記憶體.....	43
使用 FM 收音機.....	將手機用作大型儲存裝置.....	43
搜尋電台.....	傳送檔案到手機.....	43

內容

使用藍芽發送和接收檔案	44	變更網頁瀏覽器設定	51
遊戲及應用功能	45	07 設定	
遊戲及應用功能	45	設定	52
玩遊戲	45	變更您的情景模式	52
檢視應用程式	45	更改情景模式	52
變更網絡設定	45	變更您的日期及時間	52
05 管理功能		變更語言	52
記事簿	46	變更您的顯示設定	52
新增事件至日曆	46	變更安全設定	53
編輯日曆事件	46	使用飛航模式	53
分享日曆事件	46	重設手機	53
新增備忘錄	46	檢視記憶體狀態	53
工具	48	變更您的藍芽設定	54
設定鬧鐘	48	變更連線設定	54
使用計算機	48	同其他藍芽裝置配對	54
使用秒錶	48	使用藍芽耳機	55
轉換單位	48	08 配件	
新增城市至世界時間	49	配件	56
智能咕服務	49	網絡服務	57
06 網絡功能		技術資料	57
瀏覽器	50	一般	57
存取網絡	50	環境溫度	57
新增並存取書籤	50	安全及有效使用的指引	59
儲存網頁	50		
存取已儲存網頁	50		
檢視瀏覽器記錄	50		

了解您的手機



01

02

03

04

05

06

07

08

手機視圖



插入智能咭和電池


1 取下電池蓋

按電池蓋釋放鍵，然後打開電池蓋。



2 取出電池

抬起電池的下方邊緣，小心將其從電池盒中取出。

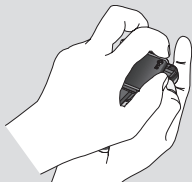

⚠ 警告：手機開機時，不要取下電池，因為這樣會損壞手機。

3 插入智能咭

將智能咭插入智能咭插槽。請確保智能咭上的金屬接觸區面向下方。要取出智能咭，請向反方向小心抽出。

01

02

03

04


05

06

07


08

插入智能喺和電池

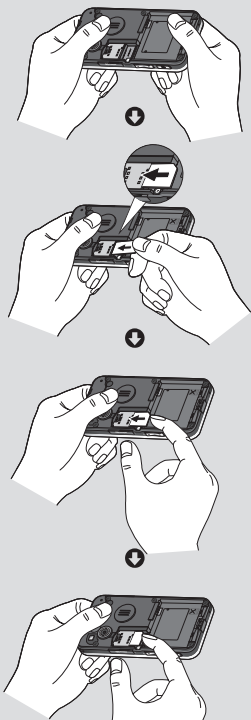


4 安裝電池

先將電池頂部頂入電池格上方邊緣。確保電池觸點對準手機觸點。將電池的底部壓入定位。

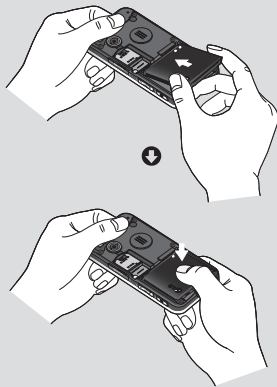

5 裝回電池蓋


將電池蓋合上，直到卡緊定位。

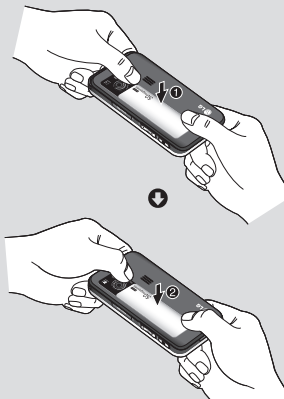

6 手機充電

滑開 KC550 側面的充電器插孔蓋。插入充電器並插入電源插座。需要對 KC550 充電，直至屏幕上顯示「電池已充滿」訊息。

警告：不要在軟設備上為手機充電。應該在通風良好的區域為手機充電。

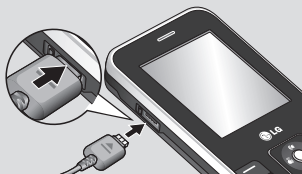

01

02

03

04

05

06

07

08


記憶咭

安裝記憶咭

您可以使用記憶咭，擴展手機可使用的記憶體空間。


提示！ 記憶咭為額外選用配件。

打開記憶咭插槽蓋，並插入記憶咭。將記憶咭滑入插槽，直到卡緊為止。請確保金屬接觸區面向上(如圖示)。

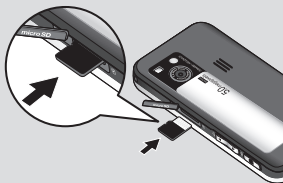

取出記憶咭

打開記憶咭插槽蓋，並按下圖所示，輕輕推動記憶咭，從而小心將其取出：

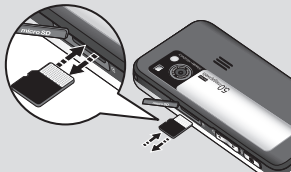

格式化記憶咭

如果您的記憶咭尚未格式化，則在開始使用前，需要將其格式化。

- 1 從備用屏幕，點按**功能表**並選擇**設定**。
- 2 選擇**記憶體狀態**並選擇**外置記憶體**。
- 3 點按**格式化**並輸入密碼，預設情況下，安全密碼設定為 0000。您的記憶咭將會格式化，可隨時使用。
- 4 要檢視 KC550 上新格式化資料夾，請點按**功能表**並選擇**我的檔案**。選擇**外置記憶體**。

警告： 格式化記憶咭時，所有的內容將會被清除。如果不想丟失記憶咭上的資料，請先進行備份。

功能總覽



遊戲及應用功能

- 1 M-toy
- 2 遊戲
- 3 應用程式式
- 4 網絡設定



通話記錄

- 1 所有通話
- 2 未接來電
- 3 已撥通話
- 4 已接來電
- 5 通話時間
- 6 通話費用
- 7 數據資訊



記事簿

- 1 日曆
- 2 備忘錄



多媒體

- 1 MP3 播放器
- 2 相機
- 3 視像攝錄機
- 4 FM 收音機
- 5 語音備忘錄
- 6 Muvee 工作室



訊息

- 1 新訊息
 - 2 收件匣
 - 3 電郵郵箱
 - 4 草稿
 - 5 寄件匣
 - 6 已發送
 - 7 收聽留言
- 訊息
- 8 資訊廣播
 - 9 常用範本
 - 0 設定



我的檔案

- 1 圖像
- 2 聲音
- 3 影片
- 4 文件
- 5 其他
- 6 外置記憶體



情景模式

- 1 標準
- 2 靜音
- 3 震動
- 4 戶外
- 5 耳機



通訊錄

- 1 搜尋
- 2 新增通訊錄
- 3 快速撥號
- 4 群組
- 5 複製全部
- 6 刪除全部
- 7 設定
- 8 資訊



工具

- 1 鬧鐘
- 2 計算機
- 3 秒錶
- 4 單位轉換器
- 5 世界時間
- 6 智能咭服務



瀏覽器

- 1 主頁
- 2 書籤
- 3 輸入網址
- 4 記錄
- 5 已儲存網頁
- 6 設定
- 7 資訊



連接

- 1 藍芽
- 2 網絡
- 3 USB 連接
模式
- 4 電視輸出



設定

- 1 日期及時間
- 2 語言
- 3 顯示
- 4 通話
- 5 安全
- 6 飛航模式
- 7 重設
- 8 記憶體狀態

01

02

03

04

05

06

07


08


設定


備用屏幕


快捷鍵

快捷鍵提供簡單、單觸式操作存取最常用的功能。

 輕按開啓訊息編輯器，長按開啓收件匣。

 選擇以開啓您的MP3 播放器。

 爲手機選擇情景模式。

 選擇以開啓最愛功能表。

主功能表

主功能表提供十二個功能表選項。要開啓主功能表，請執行以下操作：

- 1 選擇**功能表**。
- 2 主功能表將出現在屏幕上。
- 3 當所需選項被正方形指示到時，點按中心鍵**確定**以開啓。

對客戶的忠告

爲了讓天線得到更佳接收，LG 建議您按照以下圖示握住手機。



通話中或使用藍芽連線時，請勿用手蓋住天線區域。這樣會引起干擾，降低通話質素。

狀態列

狀態列透過使用多種圖示，指明如訊號強度、新訊息和電池壽命等情況，亦告訴您藍芽是否已啓動。

下表說明可能在狀態列中看到的圖示的含義。

圖示	說明
	網絡訊號強度 (列數目將有所變化)
	無網絡訊號
	可使用 GPRS
	EDGE 可用
	已啓用飛航模式
	呼叫已轉接
	漫遊服務
	藍芽已啓用
	已連接 WAP 服務
	鬧鐘已設定
	日程表

圖示	說明
	新訊息
	新語音訊息
	正在使用一般情景模式
	正在使用靜音情景模式
	正在使用震動情景模式
	正在使用戶外情景模式
	正在使用耳機情景模式
	剩餘電量
	電池已耗盡

01

02

03

04

05


06

07

08


通話功能

撥打電話


- 1 使用鍵盤輸入號碼。要刪除數字，請按下 。
- 2 點按  開始通話。
- 3 要結束通話，請按  或按結束。

提示！ 若要在撥打國際電話時輸入「+」，請按住 0。


透過通訊錄撥打電話

- 1 滑開手機。
- 2 選擇 **通訊錄** 以開啓通訊錄。
- 3 使用鍵盤輸入要通話聯絡人的首個字母。
- 4 點按  開始通話。

接聽來電和拒接來電

手機響鈴後，點按接聽或點按  接聽來電。

手機響鈴時，選擇靜音，使鈴聲靜音。如果在開會時忘記將情景模式變更爲靜音，此方法十分有效。

按  或按拒接以拒接來電。

提示！ 您可變更手機上的設定，從而採用不同的方式接聽來電。

點按 **功能表**，選擇 **設定** 並選擇 **通話**。選擇 **接聽模式** 並從「**滑蓋開啓**」、「**按任何鍵**」或「**按發送鍵**」中選擇。


調節通話音量

要在通話中調節音量大小，可按手機右側的音量鍵。

快速撥號

您可為常撥聯絡人指定一個快速撥號號碼。

- 1 選擇**通訊錄**，然後選擇**快速撥號**。
- 2 您的留言會設定到快速撥號 1，您無法變更此設定。按**配置**，選擇任何其他號碼。
- 3 通訊錄將開啓。使用方向鍵選擇要指定給此號碼的聯絡人，然後點按**確定**。

要撥打快速撥號號碼，請按住指定的號碼，直到聯絡人電話顯示在屏幕上。通話將自動開始；無需點按。

檢視通話記錄

按**功能表**，選擇**通話記錄**。選擇要檢視的對象：

所有通話 - 檢視所有已撥、已接和未接來電的完整清單。

未接來電 - 檢視所有未接來電的清單。

已撥通話 - 檢視所有已撥出通話的清單。

已接來電 - 檢視所有已接聽號碼的清單。

通話時間 - 檢視通話時間詳情，包括已接來電和已撥通話。

通話費用 - 檢視套用至上一次通話或所有通話的費用。此服務取決於網絡，部份網絡商無法支援此項服務。

數據資訊 - 檢視所有已接收和已發送的數據量（以千字節表示）。

提示！ 從任何通話記錄，選擇**選項**和**刪除**以刪除所選或全部記錄項目。

提示！ 使用方向鍵，選擇任何單個通話項目，檢視通話的日期和時間。要檢視通話時間，請點按**檢視**。

01

02

03

04

05

06

07

08

通話功能

使用來電轉駁

- 1 選擇**功能表**，選擇**設定**並選擇**通話**。
- 2 選擇**來電轉駁**。
- 3 可選擇所有語音通話、線路繁忙時、無人接聽時、無網絡或關機時、所有數據通話、所有傳真通話。
- 4 選擇**啟用**並選擇是否轉駁至留言信箱號碼、其他號碼或常用號碼。
- 5 輸入您的轉駁號碼，或選擇**搜尋**瀏覽轉駁號碼的通訊錄。

注意：轉駁電話需要收費。請聯絡網絡供應商，了解詳情。

提示！ 要關閉所有來電轉駁，請從**來電轉駁**功能表中選擇**取消全部**。

使用通話限制

- 1 選擇**功能表**，選擇**設定**並選擇**通話**。
- 2 選擇**通話限制**。
- 3 選擇以下七個選項的任何一個或所有：
 - 所有撥出通話**
 - 國際撥號**
 - 本國以外的國際撥號**
 - 所有來電**
 - 國際漫遊時來電**
 - 取消所有限制通話**
 - 更改密碼**
- 4 選擇**啟用**並輸入通話限制密碼。請向您的網絡商查詢這項服務。

提示！ 從**通話**功能表中選擇**固定撥號號碼**，開啓並編譯可從此手機呼叫的號碼清單。您需要從您的網絡商處得到一個PIN2碼。僅固定撥號清單中包含的號碼可從手機呼叫。

變更通話設定

1 選擇**功能表**，選擇**設定**並選擇**通話**。

2 您可從此處修改以下選項的設定：

來電轉駁 - 選擇是否轉駁您的來電。

通話限制 - 選擇何時限制通話。

固定撥號號碼 - 選擇可從您的手機呼叫的號碼清單。

按聽模式 - 選擇是使用滑蓋開啓、按任何鍵或按發送鍵來接聽來電。

發送我的號碼 - 選擇撥出通話時，是否顯示您的號碼。

來電等候 - 有來電等候時，手機會提示您。

分鐘提示 - 選擇**開啓**後，您便可在通話時聽到分鐘提示音。

自動重撥 - 選擇**開啓**或**關閉**。

發送 DTMF - 選擇**開啓**或**關閉**。

01

02

03

04

05

06

07

08

通訊錄

搜尋通訊錄

- 1 選擇**通訊錄**並選擇**搜尋**，從**功能表**屏幕選擇**通訊錄**，或從備用屏幕點按通訊錄。
- 2 使用鍵盤輸入要通話聯絡人的首個字母。
- 3 要選擇聯絡人及其不同的號碼，請使用方向鍵。

新增通訊錄

- 1 選擇**通訊錄**並選擇**新增通訊錄**。
- 2 選擇是否在**手機**或**智能咭**上儲存新通訊錄。
- 3 輸入在欄位中提供的所有資訊，並選擇**儲存**。

或者，使用輕微更快捷的方法...

- 1 輸入要在備用屏幕上儲存的號碼並選擇**選項**。
- 2 選擇**儲存**或**更新現有通訊錄**。
- 3 根據以上操作，輸入相關資訊，然後點按**儲存**。

注意：當要儲存聯絡人電郵地址時，請按 **✕** 輸入符號，並使用方向鍵選擇，直到您看到 @。

通訊錄選項

您可在檢視通訊錄時進行多項操作。以下是存取和使用選項功能表的方式：

- 1 開啓您要使用的通訊錄。參閱以上的**搜尋**。
- 2 選擇**選項**開啓選項清單。

在此處您可以：

編輯 - 變更任何聯絡人的詳細資料。

新訊息 - 找到所需號碼後，您即可向選定聯絡人發送訊息。如果聯絡人具有電郵地址，選擇您是否要發送**訊息**或**電郵**。

發送方式 - 以名片方式向他人發送聯絡人的詳細資料。選擇以**文字訊息**、**多媒體訊息**發送，或透過**藍芽**或**電郵**發送。

刪除 - 刪除聯絡人。確定後，選擇**是**。

新增通訊錄 - 您可新增至通訊錄列表。

多方刪除 - 標記要刪除的多個聯絡人。

複製至智能咭/手機 - 選擇要複製到智能咭還是手機（視您起初儲存聯絡人的位置而定）。

主要號碼 - 如果同一聯絡人有多個號碼，請選擇首選顯示哪個號碼。

新增通訊錄至群組

您可將聯絡人儲存至群組中，從而將工作同事和家庭成員分開（例如）。手機上存在很多已設定好的群組，包括**家庭、朋友、同事、貴賓、群組1**和**群組2**。

- 1 選擇**通訊錄**並選擇**群組**。
- 2 選擇到要將聯絡人新增至的群組，並按**檢視**，然後選擇**加入**。
- 3 您的通訊錄將開啓。點按到要將其新增至群組中的任何聯絡人，並點按 ，然後選擇**完成**。
- 4 確定後，選擇**是**。

提示！ 您可為群組指定鈴聲或圖示。選擇要為其指定鈴聲或圖示的群組，並選擇**選項**及所需的項目。

重新命名群組

您可重新命名任何群組，以符合您的生活方式要求。

- 1 選擇**通訊錄**並選擇**群組**。
- 2 選擇要為其重新命名的群組。
- 3 選擇**選項**，再選取**重新命名**，並輸入您的新群組名稱。
- 4 選擇**儲存**。

注意：您只能將通訊錄指定到群組中，或將圖片新增至已儲存在手機（不是智能咭）記憶體中的通訊錄。

新增圖片至通訊錄

您可變更通訊錄列表的外觀，使其包含圖片。

- 1 選擇**通訊錄**並選擇**設定**。
- 2 選擇**檢視選項**並選擇**附圖片**。
- 3 然後返回通訊錄，並選取要將圖片新增至其中的聯絡人。
- 4 選擇**選項**並選擇**編輯**。

01

02

03

04

05

06

07

08

通訊錄

- 5 向下按至圖片部分。選擇**選擇**或**新圖像**。選擇**選擇**後，您可選擇已儲存至手機記憶體中的圖像。選擇**新圖像**後，您的相機取景器將會開啓，開啓鏡頭蓋後，您可為聯絡人拍照。(只適用於存在手機的通訊錄)
- 6 選擇**儲存**。

將通訊錄複製到智能咭

您可選擇在手機和智能咭之間複製通訊錄。

- 1 選擇**通訊錄**，並選擇**複製全部**。
- 2 選擇從**智能咭**至**手機**或**手機**至**智能咭**複製通訊錄。
- 3 選擇保留原始記錄，或刪除原始號碼。
- 4 確定後，選擇**是**。

刪除所有通訊錄

- 1 選擇**通訊錄**，並選擇**刪除全部**。
- 2 選擇從**智能咭**或**手機**中刪除通訊錄。
- 3 確定後，選擇**是**。
- 4 輸入密碼，預設情況下，密碼設定為 0000。然後點按**確定**。

檢視資訊

選擇**通訊錄**並選擇**資訊**。您可從此處檢視您的**服務撥號號碼**、**本手機號碼**和您的**名片**。

提示！ 如果您尚未建立名片，**名片**屏幕將為您提供建立名片的選項。選擇**新增**，並輸入要提供的詳情。選擇**儲存**。

訊息


訊息

KC550 包含與 SMS（文字訊息服務）、MMS（多媒體訊息服務）和電郵及藍芽訊息相關的功能。只需點按**功能表**並選擇**訊息**。

發送訊息

- 1 按**功能表**，選擇**訊息**並選擇**新訊息**。
- 2 選擇**訊息**以發送文字訊息或多媒體訊息。（如果要發送**電郵**，請參閱第 25~26 頁，如果要使用**藍芽**發送資料，請參閱第 44 頁。）
- 3 新訊息編輯器將開啓。
訊息編輯器將文字訊息和多媒體訊息集合在同一個功能表中，可輕鬆在文字訊息模式和多媒體訊息模式之間切換。訊息編輯器的預設設定為文字訊息模式。
- 4 使用 T9 模式或 Abc 模式輸入您的訊息。參閱第 24 頁的**輸入文字**，了解如何在不同的文字輸入模式之間切換。

- 5 選擇**選項**並選擇**附加**，您可新增圖像、聲音、影片、符號、文字範本、情感圖示、名稱和號碼、新增投影片、標題或更多（通訊錄/我的名片/日程表）。
- 6 按中心鍵發送給。
- 7 輸入手機號碼或點按**選項**並選擇**通訊錄**開啓通訊錄清單。您可以選擇多個通訊錄。
- 8 選擇**發送**。

 **警告：**若向訊息編輯器加插了**圖像、聲音、影片、投影片或標題**，它將自動轉換為多媒體訊息模式，而您亦需為此支付相應費用。

01

02

03

04

05

06

07

08

訊息

輸入文字

使用手機鍵盤，您可輸入英數字元。例如，在通訊錄中儲存名稱、編寫訊息和在日曆中建立排程事件，都需要輸入文字。手機中提供以下可用的文字輸入方式：T9 模式、ABC 模式和 123 模式。

注意：部份欄位只可使用一種文字輸入模式（例如通訊錄欄位中的電話號碼）。

要在文字輸入欄位中開啓 T9 模式，請選擇**選項**，選擇設定 T9 並選擇開啓。開啓 T9 後，透過按 **⌘** 您可切換文字輸入模式。您會發現文字輸入模式指示符顯示在顯示屏右上角。

要在文字輸入欄位中輸入符號，請按 **☑** 鍵並選擇符號，然後選擇**確定**。

按 **0** 可在每個單字後加入空格。

要刪除某個字元，請點按 **C** 鍵。

T9 模式

T9 模式使用內置字典，識別根據點按按鍵順序寫入的單字。只需點按與要輸入字母關聯的數字按鍵，且只要輸入所有字母，字典便可識別要輸入的單字。

如果所需的單字沒有出現，請點按拼寫並選擇新 T9 文字，然後您可使用

ABC 模式輸入單字。您的單字將會新增至字典中。

注意：透過點按**選項**並選擇**編輯語言**，您可選擇不同語言。

ABC 模式

在 ABC 模式中，您可能需要重複點按按鍵，才能輸入某個字母。例如，要寫入「hello」，請按 **4** 兩次、**3** 兩次、**5** 三次、**5** 又三次，然後按 **6** 三次。

123 模式

只要按一次按鍵即可輸入一個數字。您亦可透過按住所需按鍵在字母模式下加入數字。

設定電子郵件

縱使出門在外，您亦可使用 KC550 上的電郵功能與其他人保持聯絡。設定 POP3 或 IMAP4 電郵帳戶快捷方便。

- 1 按**功能表**，選擇**訊息**並選擇**設定**。
- 2 依次選擇**電郵**和**電郵帳戶**。
- 3 選擇**新增**。
- 4 您現在可選擇帳戶的工作方式：
帳戶名稱 - 爲此帳戶輸入名稱。
電郵地址 - 輸入帳戶電郵地址。
我的手機名稱 - 輸入您的名稱。

內送郵件伺服器 - 輸入帳戶的詳細適用於。

用戶名稱 - 輸入帳戶用戶名稱。

密碼 - 輸入帳戶密碼。

外寄郵件伺服器 - 輸入帳戶的詳細資料。

外寄郵件核證 - 選擇開啓或關閉。

外寄伺服器名稱 - 輸入帳戶的詳細資料。

外寄伺服器密碼 - 輸入帳戶的詳細資料。

要輸入以下資訊，請點按**選項**並選擇**進階設定**。

協定類型 - 選擇郵箱類型：POP3 或 IMAP4。

最大接收大小 - 選擇您的電郵大小限制，上限為 300KB。

儲存至伺服器 - 選擇是否將您的電郵儲存到伺服器。對於 IMAP4 帳戶，副本將得以儲存。

儲存已發送郵件至 - 選擇是否將您的電郵儲存到手機（僅適用於 IMAP4）。

附加名片 - 選擇是否在電郵中自動附加名片。

回覆電郵地址 - 輸入「回覆」的電郵地址。

內送埠號碼 - 通常，對於 POP3 帳戶，此為 110；而對於 IMAP4 帳戶則為 143。

外寄埠號碼 - 通常為 25。

自動擷取 - 選擇以自動接收您的電郵。

擷取下載 - 選擇**僅頁首、頁首及內容**（僅適用於 IMAP4）或**全部**。

現在，您的帳戶經已完成設定，並會出現於電郵資料夾的帳戶清單當中。

使用新帳戶發送電郵

若要發送/接收電郵，您必須建立一個電郵帳戶（詳情請參閱第 24~25 頁）。

- 1 選擇**功能表**，選擇**訊息**並選擇**新訊息**。
- 2 選擇**電郵**，則系統會開啓一封新電郵。
- 3 寫上主題，然後點按**確定**。
- 4 使用 T9 模式或 Abc 模式輸入您的訊息。參閱第 24 頁的**輸入文字**，了解如何在不同的文字輸入模式之間切換。
- 5 選擇**選項**並選擇**附加**，您可選擇要新增的附件。：圖像、聲音、影片、文件、通訊錄、我的名片和日程表。

01

02

03

04

05

06

07

08

訊息

- 6 選擇發送給，並輸入收件者地址，或點按**選項**，選擇**通訊錄**以開啓您的通訊錄清單。

- 7 按發送，系統將發送您的電郵。

訊息資料夾

按功能表，選擇**訊息**。由於各資料夾的名稱相當清楚，您可辨識用於 KC550 的資料夾結構。

收件匣 - 收到的所有訊息將置於您的收件匣中。您可從此處進行回覆、轉寄等操作，詳情請見下方說明。

電郵郵箱 - 包含所有電郵訊息。選擇要使用的帳戶，並點按**擷取**。KC550 便會連線至您的電郵帳戶並提取您的新訊息。

草稿 - 若不夠時間完成訊息，您可將寫完的部份儲存於此處。

寄件匣 - 這裡是發送中的訊息之臨時存放資料夾。

已發送 - 所有已發送的訊息將置於您的「已發送」資料夾中。

收聽留言訊息 - 您可存取留言信箱（若網絡提供此服務）。收到新留言時，相應符號會在備用屏幕上顯示。


資訊廣播 - 從網絡商接收到的所有資訊訊息和更新。

常用範本 - 已編寫好的有用訊息清單，以便快速回覆。

設定 - 可設定訊息中不同功能。

管理訊息

您可使用**收件匣**來管理您的訊息。

- 1 按**功能表**，選擇**訊息**並選擇**收件匣**。或者，更快捷的方式是，點按備用屏幕上的 。
- 2 選擇**選項**，然後選擇以：

刪除 - 刪除選定的訊息。

回覆 - 回覆所選訊息。

轉寄 - 將所選訊息發送給他人。

回覆通話 - 向您的寄件者致電。

資訊 - 檢視訊息的詳情，例如，訊息發送時間。

複製/移動 - 您可選擇複製或移動訊息，選擇複製或移動所選訊息至智能咭或手機。

多方刪除 - 刪除所選訊息。

刪除全部已讀訊息 - 所有已開啓的訊息將被刪除。

刪除全部 - 您可選擇刪除文字訊息或所有訊息。

看到**無足夠空間儲存智能咭訊息**這則訊息時，請從收件匣中刪除部份訊息。

看到**無足夠空間儲存訊息**這則訊息時，您可透過刪除訊息或已儲存的檔案來釋放空間。

使用範本

您可為經常發送的**文字**和**多媒體**訊息建立範本。您會發現手機上已存有部份範本，您可根據需要對其進行編輯。

- 1 選擇**功能表**，選擇**訊息**並選擇**常用範本**。
- 2 選擇**文字**或**多媒體**訊息。然後，您可選擇**選項**並選擇**編輯**以變更現有範本，或選擇**選項**新增**範本**或**刪除**範本。
- 3 要發送範本，請選擇要發送的範本，並選擇**選項**及**發送方式**。
- 4 選擇發送範本的方式：**訊息**、**藍芽**訊息或**電郵**。
- 5 於通訊錄選擇聯絡人，並點按**發送**。

變更文字訊息設定

您的 KC550 已預先定義訊息設定，以便您可立即發送訊息。

如果要變更此設定，可使用**設定**選項來完成。

選擇功能表，選擇**訊息**，然後選擇

設定和**文字**訊息。您可對以下各項進行變更：

訊息類型 - 將文字轉換為語音、傳真、傳呼、X.400 電郵或ERMES。

有效期 - 選擇訊息要在訊息中心中保留多久。

發送報告 - 選擇是否要就已發送的訊息接收確認訊息。

經同一訊息中心回覆 - 訊息發送後，系統允許收件人回覆並將回覆成本納入您的電話帳單中。

訊息中心號碼 - 為您的訊息中心輸入詳細資料。

字元編碼 - 選擇編碼字元的方式。這將影響到您的訊息大小，進而影響數據費用。

發送長文字為：當在訊息欄位中輸入的文字長度超過 2 頁時，選擇是以**多樣文字**訊息還是**多媒體**訊息來發送訊息。

載送設定 - 選擇是否透過首選 GSM 或首選GPRS 發送訊息。

變更多媒體訊息設定

您的 KC550 已預先定義訊息設定，以便您可立即發送訊息。

如果要變更此設定，可使用**設定**選項來完成。

01

02

03

04

05

06

07

08

訊息

選擇功能表，選擇**訊息**，然後選擇**設定**和**多媒體訊息**。

您可對以下各項進行變更：

投影片播放時間 - 選擇投影片在屏幕上的顯示時間。

重要性 - 選擇多媒體的優先等級。

有效期 - 選擇訊息要在訊息中心中保留多久。

發送報告 - 選擇是否要求報告或允許報告。

讀取報告 - 選擇是否要求報告或允許報告。

自動下載 - 選擇自動或手動下載多媒體訊息，具體取決於您是在本地網絡或漫遊網絡。

網絡設定 - 為發送多媒體訊息選擇網絡商特定的網絡設定檔。

允許訊息類型 - 選擇允許的多媒體訊息類型。

變更電子郵件設定

您可對電郵設定進行調整，以便符合您的使用習慣。

1 選擇功能表，選擇**訊息**並選擇**設定**。

2 選擇**電郵** 這樣您可對以下設定進行調整：

電郵帳戶 - 您可設定電郵帳戶。

接入點 - 您可設定電郵接入點。

擷取間隔 - 選擇 KC550 查收新電郵的頻率。

名片 - 建立電郵名片並啓用此功能。

變更其他設定

選擇功能表，選擇**訊息**並選擇**設定**，然後：

留言信箱號碼 - 您的留言號碼儲存於此處。聯網絡商，了解他們提供服務的更多詳情。

服務信息 - 您可在此處關閉服務訊息，這意味著收到訊息後，訊息不會被直接在手機中，而僅在您檢查是否有新訊息時才會出現在手機中。

資訊廣播 - 選擇資訊訊息的接收、提示和語言。

儲存文字訊息 - 您可選擇手機記憶或外置記憶體。

相機

快速拍照


- 1 按手機右側的相機鍵，並開啓鏡頭蓋，相機取景器將顯示在屏幕上。
- 2 水平握住手機，將鏡頭對準拍照對象。
- 3 半按住手機右側的相機鍵。對焦方塊會顯示在取景器屏幕的中央，定位手機，這樣您可在對焦方塊中看到拍照對象。當對焦方塊變綠，則表示相機對焦完成。
- 4 選擇中心鍵，或完全按下相機鍵拍照。


注意：您亦可從備用屏幕存取相機功能表。點按**功能表**並選擇多媒體，並選擇相機以開啓取景器。


拍攝照片後


您的拍攝照片會顯示在屏幕上。圖像的名稱顯示在屏幕底部，您可在屏幕右側看到六個選項。

刪除 - 選擇以刪除剛拍攝的相片，並透過按**是**確認。取景器將再次出現。

 **新圖像** - 選擇此鍵可直接拍攝另一張照片。當前相片將會被儲存。

 **設為** - 選擇此鍵可開啓一個子功能表，從而可將圖像設為**牆紙**或**圖片來電顯示**。


 **發送方式** - 選擇此鍵可以**多媒體訊息**或**電郵**來發送相片。參閱第 23 頁，了解發送訊息。

 **影集** - 選擇以查看專輯中的其他相片。當前相片將會被儲存。參閱第 31 頁，了解**檢視已儲存相片**的更多資訊。

確定 - 選擇此鍵可直接拍攝另一張照片。當前相片將會被儲存。

了解取景器

注意：您可使用手機右側的音量鍵，調整縮放比例。

提示！ 使用相機時，耗電量會增加。如果出現  圖示，則表示電池電量過低，應在使用前為手機再充電。

01

02

03

04

05

06

07

08

相機

使用快速設定

按選項以變更設定。

自拍時計 - 自拍時計讓您設定按拍攝按鈕後的延遲時間。可供選擇的選項為：關閉、3 秒、5 秒或 10 秒。當您要加入拍攝的群組照片中時，此選項十分有效。

拍攝對焦模式 - 此功能可讓您自動快速而連貫地拍攝9張照片，特別適用於拍攝移動物體或體育賽事。

白平衡 - 白平衡可確保照片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從以下選項中選擇：自動、日光、白熱光、陰天或日光燈。

色彩效果 - 從以下四種色調選項中選擇：關閉（標準/色彩）、深褐色、黑白或底片。

EV 對比度定義圖像在有光和黑暗中的區別。低對比度會將圖像顯示得較模糊，而高對比度會將圖像顯示得較清晰。

解像度 - 請參閱第 31 頁的**變更圖像大小**，了解更多詳情。

質量 - 在**正常**、**細緻**和**特細緻**之間選擇。質量越細緻，圖片便越清晰，但佔用的檔案空間會增大，從而在記憶體中儲存的照片會相應減少。

自動對焦 - 開啟或關閉自動對焦。您的相機可自動調整焦距，只需按一下相機鍵，即可拍出清晰細膩的圖片。

快門音效 - 從三種快門聲音中選擇一種或關閉聲音。

ISO - 可選擇自動、ISO 800、ISO 400、ISO 200、ISO 100、ISO 80。

儲存至 - 選擇是將照片儲存至手機，還是儲存至外置記憶體。

重設設定 - 選擇是重設手機至其原始相機設定。

變更圖片大小

您可變更相片大小，以節省記憶體空間。像素越高，檔案大小越大，從而佔用的記憶體空間便越多。若要使手機儲存更多的照片，請變更像素數目，以縮小檔案大小。

- 1 選擇選項，並從工具列上選擇**解像度**。
- 2 從以下六個數字選項中選擇
像素值：320X240、640X480、
1280X960、1600X1200、
2048X1536、2560X1920。
- 3 選擇要使用的大小選項，並點按**確定**以執行變更。

檢視已儲存照片

- 1 您可從相機模式和備用屏幕中存取已儲存的相片。從取景器中，從相機模式中的取景器，橫向手機，按右方向鍵，檢視影集。從備用屏幕，您應點按**功能表**，然後選擇**我的檔案和圖像**。
- 2 圖庫將顯示於屏幕上。
- 3 使用方向鍵選擇要檢視的相片，並點按**檢視**予以放大。

將相片設為牆紙或圖片來電顯示

從圖片庫，使用方向鍵，選擇圖像並點按**設為**，將選定的圖像用作其中一個聯絡人的**牆紙**或**圖片來電顯示**。

注意：圖片來電顯示僅能新增至儲存至手機，而不是智能咭的通訊錄。

01

02

03

04

05

06

07

08

視像攝錄機

拍攝快速影片


- 1 按手機右側的相機鍵，相機的取景器將顯示在屏幕上。
- 2 選擇影片。視像攝錄機的取景器將顯示於屏幕上。
- 3 將鏡頭對準拍攝對象。
- 4 按住手機右側的相機鍵，開始錄製。
- 5 REC 將顯示在取景器的下方中央，計時器將顯示拍攝影片的長度。
- 6 要暫停影片，請選擇**暫停**，透過選擇**繼續**以繼續。
- 7 選擇**停止**停止錄製。


注意：您亦可從備用屏幕存取**視像攝錄機**。點按**功能表**並選擇**多媒體**，向下點按，並選擇**視像攝錄機**以開啓攝錄機。


錄製影片後


影片的名稱顯示在屏幕底部，您可在屏幕右側看到顯示的六個選項。

刪除 - 點按以刪除剛錄製的影片，並透過按是確認。取景器將再次出現。

 **新增影片** - 選擇此鍵直接錄製另外一個影片。當前影片將會被儲存。

 **播放** - 選擇此鍵播放剛錄製的影片。

 **發送方式** - 選擇此鍵可以**多媒體訊息**或**電郵**來發送影片。參閱第 23 頁，了解**發送訊息**。

 **影集** - 選擇以查看影集中的其他影片。當前影片將會被儲存。請參閱第 33 頁，了解**觀看已儲存的影片**的更多資訊。

確定 - 選擇此鍵直接錄製另外一個影片。當前影片將會被儲存。

了解取景器

注意：您可使用手機右側的音量鍵，調整縮放比例。

使用快速設定

按選項以變更設定。

模式 - 要錄製透過多媒體訊息發送的影片，請選擇**多媒體訊息**。

色彩效果 - 從以下四種色調選項中選擇：**關閉**（標準/色彩）、**深褐色**、**黑白**或**底片**。

亮度 - 亮度定義圖像在有光和黑暗中的區別。低亮度會將圖像顯示得較模糊，而高亮度會將圖像顯示得較清晰。按方向鍵，以調教亮度。

解像度 - 若要使手機儲存更多的影片，請變更像素數目，以縮小檔案大小。在四個選項間選擇以用於影片：176 x 144、320 x 240、640 x 480 或 720 x 480。

質量 - 在特細緻、細緻及正常之間選擇。

儲存至 - 選擇是將影片儲存至手機，還是儲存至外置記憶體。

補光燈 - **開啓**或**關閉**補光燈。預設情況下，補光燈設為**關閉**，以節省電力。結束時，系統將返回至預設**關閉**設定。

白平衡 - 白平衡可確保影片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從以下選項中選擇：自動、日光、白熱光、陰天、日光燈或夜間模式。

影集 - 可檢視您的影片。

重設設定 - 選擇是重設手機至其原始相機設定。

觀看已儲存影片

- 1 您可從視像攝錄機模式或備用屏幕中存取已儲存的影片。從取景器，按選項 - 影集即可。從備用屏幕，您應點按**功能表**，然後選擇**我的檔案和影片**。
- 2 影集將顯示於屏幕上。
- 3 使用方向鍵選擇要檢視的影片，並點按中心鍵觀看影片。

檢視影片時調節音量

要在播放影片時調節影片聲音的音量，使用手機右側的音量鍵即可。

01

02

03

04

05

06

07

08

MP3 播放器

MP3 播放器

LG KC550 具有內置的 MP3 播放器，這樣，您可播放所有喜愛的音樂。

要存取 MP3 播放器，請點按**功能表**，並依次選擇**多媒體**和**MP3 播放器**。從此處您可存取：

所有歌曲 - 包含手機上具有的所有歌曲。

我的播放列表 - 包含建立的任何播放列表，以及進行列表、**最近歌曲**和**最愛歌曲**。

演出者 - 按演出者瀏覽音樂收藏。

專輯 - 按專輯瀏覽音樂收藏。

類型 - 按曲目類別瀏覽音樂收藏。

設定 - 調節音樂設定。

將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或同步纜線。使用藍芽傳送：

- 1 確保兩個裝置均開啓藍芽，且彼此可看見對方。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 檔案發送後，您需要按**是**予以接受。

- 4 檔案將出現在**所有歌曲**中。

播放歌曲

- 1 按功能表並選擇**多媒體**，然後選擇**MP3 播放器**。
- 2 選擇要播放的音樂。選擇 **▶**。
- 3 選擇 **⏸** 暫停歌曲。
- 4 選擇 **⏭** 以跳至下一首歌曲。
- 5 選擇 **⏮** 以跳至上一首歌曲。
- 6 選擇 **⏹** 停止音樂，並返回上一頁功能表。

提示！ 要在聽音樂時調節音量大小，可使用手機右側的音量鍵。

提示！ 當 MP3 曲目在 MP3 播放器上播放時，按最少化，您可使用備用屏幕模式。在備用屏幕模式中，您可以在使用其他功能的同時播放 MP3。

播放音樂時使用選項

選擇**選項**並從以下選項中選擇：

最少化 - 隱藏音樂播放器屏幕，這樣，您可在播放音樂的同時，繼續按正常方式使用手機。

檢視播放列表 - 查看目前的播放列表。

新增到播放列表 - 將目前曲目新增到播放列表。

設為 - 將目前曲目設為鈴聲或訊息提示音。

資訊 - 您可檢視目前正聆聽的 MP3 檔案的相關資訊。

設定 - 變更調諧器或播放模式或設定隨機開啓以優化音樂效果。

建立播放列表

透過從**所有歌曲**資料夾中選擇一系列歌曲，您可建立自己的播放列表。

- 1 按功能表並選擇**多媒體**。
- 2 選擇 **MP3 播放器**，然後選擇**我的播放列表**。
- 3 按選項並選擇**新增播放列表**，輸入播放列表名稱並點按**儲存**。

4 **新增播放列表**資料夾將顯示。透過選擇至要將其納入至播放列表的歌曲，並點按 選擇所有歌曲。

5 選擇**儲存**儲存播放列表。

播放播放列表

1 按功能表並選擇**多媒體**。

2 選擇 **MP3 播放器**，然後選擇**我的播放列表**。

3 選擇要播放的播放列表，並選擇**檢視**，然後選擇 ▶。

編輯播放列表

您可能需要不時新增歌曲，或從播放列表中刪除歌曲。

若要整理播放列表，您可使用**選項**功能表進行編輯。

- 1 按功能表並選擇**多媒體**。
- 2 選擇 **MP3 播放器**，然後選擇**我的播放列表**。
- 3 點按至要編輯的播放列表，並點按**檢視**，然後選擇**選項**。選擇以下選項之一：

加入 - 使用此選項，您可新增歌曲至播放列表。

01

02

03

04

05

06

07

08

MP3 播放器

刪除 - 從播放列表中移除歌曲。
選擇**是**確認。

上移/下移 - 您可以上移或下移項目。

多項移除 - 從播放列表中刪除選定的多首歌曲。

刪除全部 - 從播放列表中移除所有歌曲。

資訊 - 檢視播放列表資訊。

刪除播放列表

- 1 按功能表並選擇**多媒體**。
- 2 選擇 **MP3 播放器**，然後選擇**我的播放列表**。
- 3 點按至要刪除的播放列表，並選擇**選項**。
- 4 選擇**刪除全部**並選擇**是**以確認。

注意：

由於數碼權限管理 (DRM) 系統的存在，從互聯網下載或透過多媒體訊息接收到的部分媒體項目可能具有一個存取時使用的「購買權限」功能表。您可從擁有內容權限的網站獲取購買權限的密鑰。

音樂版權受國際公約及國內版權法的保護。需要取得授權或許才可以複寫或複製音樂。在部份國家，國家法禁止私人複製受版權保護的材料。請檢查適用國家關於使用此類材料的國家法律。

FM 收音機

使用 FM 收音機

LG KC550 具有 FM 收音機功能，這樣，您可在外出旅途中調諧至最愛電台，收聽節目。

注意：您需要插入耳機才可收聽收音機。將插頭插入耳機插孔中（即為將充電器插入的相同插孔）。

搜尋電台

透過手動或自動搜尋電台節目，將其保留到手機中。這些節目將儲存至特定頻道編號，如此以來，您就不需要重新調諧。手機中可儲存 12 個頻道。

如要自動調諧：

- 1 按功能表並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 點按**選項**並選擇**自動選取頻道**，然後選擇**是**。
- 3 找到電台後，KC550 會詢問您是否儲存此電台。如果要儲存此頻道，請選擇**是**，否則，選擇**否**。選擇儲存的任何電台將自動分配到手機中的頻道號中。

如要手動調諧：

- 1 按功能表並選擇**多媒體**，然後選擇**FM 收音機**。

- 2 選擇要儲存電台的頻道號，並選擇**編輯**。
- 3 要進入電台，您可使用方向鍵搜尋頻率，或使用鍵盤輸入頻率，然後選擇**儲存**。

注意：您亦可編輯已儲存至頻道號中的電台。

提示！如要改善收音機的接收效果，您可延長作為收音機天線的耳機線。

重設頻道

- 1 按功能表並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 點按**選項**並選擇**重設頻道**。選擇**是**確認重設。每個頻道將返回至開始 87.5Mhz 頻率。

收聽收音機



- 1 按功能表並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 選擇要收聽電台的頻道號。

語音備忘錄

使用語音備忘錄

使用**語音備忘錄**錄製語音備忘錄或其他聲音。

錄製語音備忘錄

- 1 按功能表並選擇**多媒體**，然後選擇**語音備忘錄**。
- 2 按  開始錄製。
- 3 選擇**暫停**暫停錄製。
- 4 選擇**停止**結束錄製。
- 5 選擇  收聽錄製聲音。

注意：透過選擇**選項**和**影集**，您可收聽已儲存的所有錄音。

發送錄音

- 1 完成錄音後，點按**選項**。
- 2 選擇**發送方式**並從**多媒體訊息**、**藍芽**或**電郵**中選擇。若選擇**多媒體訊息**或**電郵**，錄製會新增至訊息中，您可按正常方式編寫和發送。若選擇**藍芽**，則系統會提示您開啓藍芽。

提示！ 如果計劃以訊息方式發送錄影，開始錄製前，請點按**選項**並選擇**錄製模式**，然後選擇**多媒體訊息**。這可確保錄音適合訊息。

Muvve 工作室

Muvve 工作室可讓您建立配有音樂的圖像幻燈片放映。

我的檔案

您可將多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖像、聲音、影片和文件。您亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。

所有的多媒體檔案將儲存在**我的檔案**中。點按**功能表**，然後選擇**我的檔案**，以開啓資料夾清單。

圖像

圖像包括預載至手機上的預設圖像資料夾、預設 flash 檔案和透過手機相機拍攝的圖像。

圖像選項功能表

圖像中可用的選項取決於選取的圖像類型。所有選項均可用於手機相機上拍攝的圖片。僅「檢視」、「設為牆紙」、「檔案資訊」、「投影片播放」、「排序方式」和「縮圖/列表檢視」選項可用於預設圖像。

在**圖像**資料夾中，點按**選項**顯示您的選項清單。

刪除 - 刪除選定的圖像。

設為 - 將選定圖像設定為**牆紙**或**圖片來電**顯示。

發送方式 - 透過**多媒體訊息**、**藍芽**或**電郵**，將所選圖像發送給朋友。

注意：透過多媒體訊息發送前，圖像可能需要重新調整大小。

編輯圖像 - 您可編輯圖像。

檔案 - 您可重新命名，製造動畫或檢視所選圖像的資訊（名稱、大小、日期、時間、解像度、類型和版權）。如果您已插入外置記憶咭，則會顯示兩個附加選項：**移動至外置記憶體**和**複製至外置記憶體**。

列印透過 - 透過藍芽或 Pictbridge 列印圖像檔案。

投影片播放 - 參閱第 40 頁，了解建立投影片的更多資訊。

新增資料夾 - 在主要圖像資料夾內建立新增資料夾。

標示/取消標記 - 選擇要刪除、複製、移動的多個圖像。

刪除全部 - 刪除圖像資料夾中的所有照片。

排序方式 - 按**日期**、**類型**或**名稱**，安排圖像。

列表檢視/縮圖檢視 - 變更檢視照片的方式。

01

02

03

04

05

06

07

08

我的檔案

發送照片

- 1 按功能表，然後選擇**我的檔案**。
- 2 選擇**圖像**。
- 3 選擇相片，然後選擇**選項**。
- 4 選擇**發送方式**並從**多媒體訊息**、**藍芽**或**電郵**中選擇。
- 5 若選擇**多媒體訊息**或**電郵**，則您的照片將附加至訊息中，您可按正常方式編寫和發送訊息。若選擇**藍芽**，手機會提示您開啓藍芽，並搜尋要向其發送圖片的裝置。

管理圖像

- 1 按功能表，然後選擇**我的檔案**。
- 2 選擇**圖像**。
- 3 選擇**選項**，然後選擇**排序方式**。
- 4 從**日期**、**類型**或**名稱**中選擇。

刪除圖像

- 1 點按**功能表**，然後選擇**我的檔案**。
- 2 選擇**圖像**。
- 3 選擇圖像，並點按**選項**。
- 4 選擇**刪除**。

刪除多個圖像

- 1 按功能表，然後選擇**我的檔案**。
- 2 選擇**圖像**。
- 3 選擇**選項**並選擇**標示/取消標示**和**刪除**。
- 4 每個圖像上將顯示一個方塊。選擇每個圖像，並點按中心鍵確定予以標示。如要取消標示某圖像，再次點按**中心鍵確定**，以便勾號從方塊中消失。
- 5 一旦您已標示所有合適的方塊，請選擇完成並確認要刪除所有已標示的圖像。

建立投影片播放

若要查看手機上的所有圖像，或瀏覽所擁有的內容，您可建立投影片，而毋需開啓和關閉每個圖像。

- 1 按功能表，然後選擇**我的檔案**。
- 2 選擇**圖像**。
- 3 選擇要開始投影片播放的相片，並選擇**選項**。
- 4 選擇**投影片播放**，即可開始播放。
- 5 點按**暫停**以暫停投影片播放，點按**退出**結束投影片播放，並返回到**圖像**資料夾。

投影片播放期間選擇**選項**，將顯示更多選項：

檢視 - 在**完整圖像**和**全螢幕**之間選擇。選擇**橫向圖像**，變更圖像的方向。

重複開啓/關閉 - 決定是否要重複播放投影片。

聲音

聲音資料夾包含預設的聲音、您的錄音以及您下載的聲音檔案。您可在此處管理、發送或將聲音設定為鈴聲。

使用聲音

- 1 按功能表，然後選擇**我的檔案**。
- 2 點按並選擇**聲音**。
- 3 選擇**預設聲音**或從錄音檔案清單中選擇。
- 4 選擇聲音，並點按中心軟鍵收聽。
- 5 點按**選項**，選擇**設為**並從**鈴聲**、**個人來電鈴聲**或**訊息提示音**中選擇。

影片

影片資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。

觀看影片

- 1 按功能表，然後選擇**我的檔案**。
- 2 點按並選擇**影片**。
- 3 選擇影片並點按 **▶**。

在暫停影片時使用選項

選擇**選項**後，播放影片將處於暫停模式，且您可從以下選項中選擇：

刪除 - 刪除影片。

發送方式 - 透過**多媒體訊息**、**藍芽**或**電郵**，將所選影片發送給朋友。

資訊 - 檢視所選檔案的名稱、大小、日期、時間、類型及版權的詳細資訊。

發送錄像片段

- 1 按功能表，然後選擇**我的檔案**。
- 2 點按並選擇**影片**。
- 3 選擇所需的錄像片段，然後點按**選項**。
- 4 按發送方式並從**多媒體訊息**、**藍芽**或**電郵**中選擇。
- 5 若選擇**多媒體訊息**或**電郵**，則錄像片段會附加至訊息中，您亦可正常編寫和發送訊息。若選擇**藍芽**，手機會提示您開啓藍芽，並搜尋要向其發送影片的裝置。

01

02

03

04

05

06

07

08

我的檔案

注意：透過多媒體訊息發送前，影片可能需要重新調整大小。部份影片太大，無法透過多媒體訊息發送。

使用影片選項目錄

在**影片**資料夾中，點按**選項**顯示以下選項清單。

刪除 - 刪除選定的影片。

發送方式 - 透過**多媒體訊息**、**電郵**或**藍芽**，將所選影片發送給朋友。

檔案 - 重新命名影片，檢視相關資訊（名稱、大小、日期、時間、類型和版權）。如果您已插入外置記憶咭，則會顯示兩個附加選項：**移動至外置記憶體**和**複製至外置記憶體**。

新增資料夾 - 在主要影片資料夾內建立新增資料夾。

標示/取消標示 - 點按**刪除**前，選擇多個錄像片段。

刪除全部 - 刪除**影片**資料夾中的所有短片。

排序方式 - 按**日期**、**類型**或**名稱**，安排影片。

自動重複播放 - 您可以設定播放模式：**關閉**、**重複一次**和**重複全部**。

列表/縮圖檢視 - 您可以變更檢視模式。

文件

從**文件**功能表，您可檢視所有文件檔案。您可從此處檢視 Excel、Powerpoint、Word、Text 及 PDF 檔案。

檢視文件

- 1 按功能表，然後選擇**我的檔案**。
- 2 選擇**文件**。
- 3 選擇一個文件，並點按**檢視**。

其他

顯示內置記憶體和外置記憶體中**其他**資料夾的檔案列表。在多媒體記憶中。

您可能發現，從電腦將檔案傳送到手機時，這些檔案將出現於**其他**資料夾而不是**文件**資料夾中。若發生這種情況，您可以將其移走。

如要將檔案從**其他**移到**文件**：

- 1 按功能表，然後選擇**我的檔案及其他**。
- 2 選擇一個檔案，並點按**選項**。

- 按檔案 - **移動至手機記憶體**，然後再次點按是以確定。

外置記憶體

若插入記憶咭，則將顯示為**我的檔案**中的一個資料夾。外置記憶體資料夾將分為另外五個資料夾：圖像、聲音、影片、文件和其他。每個資料夾將包含此類型的所有檔案，這些檔案儲存至記憶咭中，而不是手機上。

將手機用作大型儲存裝置

KC550 手機可用作大型儲存裝置，如同 USB 記憶棒。此功能非常適合將檔案從電腦移至手機。插入記憶咭後，以**大型儲存裝置**連接時，它將顯示為電腦上的兩個磁碟機。手機記憶體和外置記憶體。

- 按功能表，然後選擇**連接**。
- 選擇 **USB 連接模式**。
- 點按到**大容量儲存**並點按**確定**。
- 將 USB 線較小的一端插入至 KC550 手機邊緣的 USB 插孔。將較大的一端插入電腦的 USB 連接埠。

- 卸除式磁碟資料夾將自動在電腦上開啓，如果您已插入記憶咭，則顯示兩個資料夾，顯示手機或記憶咭上的所有資料夾。
- 將圖像、影片、音樂或文件拖放到相應的資料夾中。
- 按一下桌面工具列中的**安全地移除硬體**圖示，安全移除您的手機。
- 要存取如圖像等檔案時，點按**功能表**，然後依次選擇**我的檔案**、**外置記憶體**和**圖像**。所有剛傳輸的圖像將包含在此檔案中。

傳送檔案到手機

您亦可以使用藍芽，將檔案從電腦傳送至手機。

- 確保您的手機與電腦均已開啓藍芽，並已被對方偵測到。
- 使用電腦，透過藍芽發送檔案。
- 檔案發送後，您需要按是予以接受。
- 檔案將儲存至合適的資料夾，具體取決於檔案的類型。因此，例如，圖片將儲存至**圖像**資料夾中，音樂將儲存至**聲音**資料夾中。如果手機無法確認檔案類型，檔案將被儲存至**其他**資料夾中。

01

02

03

04

05

06

07

08

我的檔案

注意：使用藍芽發送的檔案將被儲存至手機記憶體中。

使用藍芽發送和接收檔案

藍芽是一種發送和接收檔案的好方法，因為不需要USB線，且連線方便快捷。您亦可連接藍芽到手機，以撥打電話和接聽來電。

開始同藍芽分享檔案前，您需要將您的裝置同其他藍芽裝置配對起來。有關配對裝置的更多詳情，請參閱第 54 頁的**同其他藍芽裝置配對**。

要開啓藍芽，請執行以下操作：

- 1 按功能表並選擇**連接**，然後選擇**藍芽**。
- 2 選擇**藍芽開啓/關閉**並選擇**開啓**。
- 3 選擇**關閉**關閉藍芽。

發送檔案：

- 1 開啓要發送的檔案，通常為照片、影片或音樂檔案。
- 2 選擇**選項**並選擇**發送方式**，然後選擇**藍芽**。
- 3 如果尚未啓用，選擇**是**開啓藍芽。
- 4 您可以搜尋更多已啓動的藍芽裝置。

- 5 選擇要將檔案發送至的裝置並點按**發送**。

接收檔案：

- 1 要接收檔案，藍芽必須為**開啓**並**可見**。參閱第 54 頁的**變更藍芽設定**，了解更多資訊。
- 2 系統顯示一則訊息，提示您接受來自寄件者的檔案。選擇**是**接收檔案。

提示！ 留意進度列，確保檔案已發送。

注意事項

Bluetooth® 字標和徽標屬 Bluetooth SIG, Inc. 所有，且 LG Electronics 使用任何此類標記均獲得許可。其他商標和交易名稱為他們各自所有者的商標和交易名稱。

遊戲及應用功能

遊戲及應用功能

KC550 手機提供有預載遊戲，可讓您在休閒時娛樂。如果您選擇下載任何其他遊戲或應用功能，下載的遊戲或應用功能將儲存在此資料夾中。

玩遊戲

- 1 按功能表並選擇**遊戲及應用功能**。
- 2 選擇**遊戲**。
- 3 選擇要播放的遊戲，並選擇**播放**。

檢視應用程式

使用**應用程式**功能表，您可管理安裝在手機上的 Java 應用程式。您亦可刪除已下載的應用功能。

- 1 按功能表並選擇**遊戲及應用功能**。
- 2 選擇**應用程式**。
- 3 檢視並管理擁有的任何應用功能。

變更網絡設定

要下載遊戲，您可設定數值，使用**網絡設定**，連接到網絡。

- 1 按功能表並選擇**遊戲及應用功能**。
- 2 選擇**網絡設定**。
- 3 您可檢視或新增網絡設定。

01

02

03

04

05

06

07

08

記事簿

新增事件至日曆

- 1 從備用屏幕，按功能表，然後依次選擇**記事簿**和**日曆**。
- 2 選擇要將事件新增至的日期。透過使用方向鍵，按至所需的日期，透過選擇選項。
- 3 選擇新增日程表，輸入開始事件的時間。使用方向鍵向下按，並輸入事件的結束時間。
- 4 再次向下按，並選擇是否要為事件設定**鬧鐘**。向左或向右按，查看可用的選項。您可設定鬧鐘在事件的開始時間響鈴，或事件開始前設定的時間期間響鈴，以便提醒您事件即將發生。
- 5 向下按，並為事件輸入標題。使用鍵盤輸入字母和數字。
- 6 再次向下按，選擇事件是一次性關閉，或是一次、**每天**、**每星期**、**每月**或**每年**重複。如果事件重複，您亦可向下按，為事件何時將徹底停止輸入**到期日期**。
- 7 選擇**儲存**，則事件將儲存至日曆中。一個方形游標將標示任何事件儲存至的日期。

編輯日曆事件

- 1 從備用屏幕，按功能表，然後依次選擇**記事簿**和**日曆**。
- 2 選擇**選項**並選擇**所有日程表**，查看所有事件清單。選擇要編輯的事件，並選擇**檢視**。或者，在行事曆中選擇事件日期，並選擇**檢視**。
- 3 選擇**編輯**，並按到要變更的事件詳細資料。作出修改，並按**儲存**以儲存已編輯的事件。

注意：透過選擇以檢視事件，然後選擇**選項**和**刪除**，您可從日曆中刪除事件。

分享日曆事件

- 1 從備用屏幕，按功能表，然後依次選擇**記事簿**和**日曆**。
- 2 選擇要分享的事件並選擇**選項**。
- 3 選擇**發送方式**並從**文字訊息**、**多媒體訊息**、**藍芽**或**電郵**中選擇。

新增備忘錄

- 1 從備用屏幕，按功能表，然後依次選擇**記事簿**和**備忘錄**。
- 2 選擇**新增**並鍵入您的備忘錄。
- 3 選擇**儲存**。

- 4 下次開啓備忘錄應用程式時，備忘錄將會顯示在屏幕上。

提示！ 您可以編輯現有備忘錄。選擇要編輯的備忘錄，然後點按**選項**並選擇**編輯**。

01

02

03

04

05

06

07

08

工具

設定鬧鐘

- 1 從備用屏幕，按功能表，然後選擇**工具及鬧鐘**。
- 2 選擇**新增**。
- 3 向下按，並輸入想要鬧鐘響鈴的時間。
- 4 選擇指明鬧鐘鬧鈴的重複類型：一次、**每天**、**星期一至星期五**、**星期一至星期六**、**星期六至星期日**，或是**選擇日子**。
- 5 向下按並選擇是否要鬧鐘：**依據情境模式**、**永遠響鈴**或**永遠震動**。
- 6 向下點按選擇鬧鐘提示音。選擇**聲音**選項以選擇新聲音。
- 7 向下點按，並為鬧鐘輸入標題，或使用建議的名稱。
- 8 選擇**儲存**。

注意：您最多可設定 5 個鬧鐘。

使用計算機

- 1 從備用屏幕，按功能表，然後選擇**工具及計算機**。
- 2 按數字鍵，輸入數字。
- 3 對於簡單計算，按所需的功能 (+, -, ×, ÷)，然後按 =。

- 4 對於更複雜的計算，請選擇**功能**以選擇相應的指令。
- 5 選擇**清除**清除屏幕，開始新的計算。

使用秒錶

- 1 從備用屏幕，按功能表，然後選擇**工具及秒錶**。
- 2 選擇**開始**開始使用計時器。
- 3 如果要記錄圈速，請選擇以圈計。
- 4 選擇**停止**結束計時器。
- 5 選擇**繼續**，在上次停止的時刻處重新啟動秒錶或選擇**重設**重新開始計時。

轉換單位

- 1 從備用屏幕，按功能表，然後選擇**工具及單位轉換器**。
- 2 選擇是否要轉換貨幣、面積、長度、重量、溫度、體積或速度。
- 3 從要輸入的單位中選擇。使用方向鍵，選擇單位，並輸入單位數量。
- 4 向下按至單位換算方塊，並選擇要轉換至的單位量度。轉換將自動顯示在以下的行中。

新增城市至世界時間

- 1 從備用屏幕，按功能表，然後選擇**工具**及**世界時間**。
- 2 使用方向鍵，瀏覽地球儀並選擇洲。
- 3 選擇**放大**放大某個區域，並從此區域中選擇城市。
- 4 按確定並選擇**是**。

智能咭服務

此功能取決於智能咭和網絡服務。

如果智能咭支援 SAT（即 SIM 應用程式工具集）服務，本功能表將出現智能咭上儲存之網絡商服務名稱。

01

02

03

04

05

06

07

08

瀏覽器

使用瀏覽器，您可隨時獲取最新新聞和天氣預報以及體育或交通資訊。另外，瀏覽器還可讓您下載到最新的音樂、鈴聲、待機圖片及遊戲。

存取網絡

- 1 按功能表並選擇**瀏覽器**。
- 2 要直接存取瀏覽器主頁，請選擇**主頁**。或者，選擇**輸入網址**並鍵入所需的網址，然後點按連接。

注意：連線至此服務和下載內容，需另行收費。請向網絡供應商諮詢資料費用。

新增並存取書籤

為了方便快捷存取喜愛的網站，您可新增書籤並儲存網頁。

- 1 按功能表並選擇**瀏覽器**。
- 2 選擇**書籤**。屏幕上會顯示一個書籤清單。
- 3 要新增書籤，請選擇**選項**並選擇**新書籤**。依次輸入書籤名稱和網址。
- 4 按儲存。您的書籤會立即出現在書籤清單中。
- 5 要存取書籤，只需要點按到所需的書籤，並點按**連接**。您將會連往書籤標記的網頁。

儲存網頁

- 1 按照以上所述操作，存取所需的網頁。
- 2 選擇**選項**並點按到**儲存**，然後選擇**此網頁**。
- 3 選擇**確定**。

存取已儲存網頁

- 1 按功能表並選擇**瀏覽器**。
- 2 選擇**已儲存網頁**。
- 3 選擇所需的頁面，並點按**開啓**。

提示！ 此功能表亦允許您刪除已儲存頁面。

檢視瀏覽器記錄

- 1 按功能表並選擇**瀏覽器**。
- 2 選擇**記錄**並選擇**確定**。
- 3 最近存取的網頁標題清單會顯示。要存取其中的一個網頁，請點按到所需的頁面，並點按**連接**。

變更網頁瀏覽器設定

- 1 按功能表並選擇**瀏覽器**。
- 2 選擇**設定**。
- 3 您可選擇瀏覽互聯網時，手機處理、顯示和使用資訊的方式。您可在網絡設定、屏幕設定模式、暫存記憶、Cookies、安全認證、顯示圖像、Javascript 和儲存位置內修改設定。
- 4 變更設定後，選擇**確定**。

01

02

03

04

05

06

07


08

設定

在此資料夾內，您可調整各項設定，以便讓此 KC550 可彰顯您的個性。

注意：有關通話設定的詳情，請參閱第 19 頁。

變更您的情景模式

您可以從備用屏幕快速變更您的情景模式。只需要點按 ，然後選擇要啓用的情景模式。從以下選項中選擇：標準、靜音、震動、戶外。

更改情景模式

您可更改每個情景模式設定。

- 1 按功能表並選擇**情景模式**。
- 2 選擇所需的情景模式，並選擇**更改**。
- 3 對於靜音和震動情景模式，您不可作更改。對於其他情景模式，您可變更清單中可用的所有聲音和提示選項。
(請參閱手機，了解更多詳情。)

變更您的日期及時間

您可設定與日期和時間相關的功能。

- 1 按功能表並選擇**設定**。
- 2 選擇**日期及時間**，並從以下清單中選擇：

設定日期 - 您可輸入目前的日期。

日期格式 - 您可設定日期格式。

設定時間 - 您可輸入目前的時間。

時間格式 - 您可設定時間格式：24 小時或 12 小時。

自動更新 - 選擇**開啓**後，手機將自動更新日期和時間。

變更語言

進入**設定**和**語言**，變更手機中任何文字的語言。任何變更亦將改變語言輸入模式。

變更您的顯示設定

- 1 按功能表並選擇**設定**。
- 2 選擇**顯示**並從以下選項中選擇：

牆紙 - 選擇出現在屏幕顯示上的牆紙。

時鐘 - 選擇是否讓日期和時間顯示於備用屏幕上。

背景燈時計 - 選擇背景燈的維持時間。

提示！ 背景燈開啓時間越長，耗費的電量就越多，這樣，手機充電將更頻繁。

亮度 - 調校屏幕的亮度。

功能導向捷徑 - 當圖像在備用屏幕的中間時，選擇開啓會顯示 4 個導覽鍵及功能表的功能。

字體大小 - 變更以下選項的字型大小：功能表、撥號中和訊息。

主題 - 快速變更屏幕的整個外觀。

功能表風格 - 在格子檢視與列表檢視之間變換功能表檢視。

撥號字體式樣 - 調整鍵入手機號碼時的字型樣式。

備用歡迎辭 - 選擇後，將訊息新增至備用屏幕中。

網絡名稱 - 選擇開啓或關閉以顯示或隱藏網絡名稱。

變更安全設定

變更安全設定，保護 KC550 和手機中重要資訊的安全。

- 1 按功能表並選擇**設定**。
- 2 選擇安全並從以下清單中選擇：

手機遺失追蹤 - 可設定手機遺失追蹤。

PIN 碼要求 - 選擇開啓手機時，需要輸入密碼。

手機鎖 - 在以下狀態下選擇安全密碼鎖定您的手機：**在開機時、智能咭更換時或立即**。

更改密碼 - 變更您的**安全密碼、PIN1 碼、PIN2碼**或手機遺失追蹤密碼。

使用飛航模式

使用此功能，**開啓**或**關閉**飛航模式。**開啓飛航模式**後，您將無法撥打電話，連接到互聯網，發送訊息或使用藍芽。

重設手機

使用**重設**，將所有設定重設為原廠定義。您需要安全密碼，才能啓用此功能。

檢視記憶體狀態

KC550 手機具有三種可用記憶體：手機、智能咭和外置記憶體（您可能需要另行購買記憶咭）。

您可以使用記憶體狀態查看可用的空間。

01

02

03

04

05

06

07

08

設定

按**功能表**並選擇**設定**。選擇**記憶體狀態**，您將看到 KC550 中記憶體的目前狀態（一般、預留、智能咕和外置記憶體）。

提示！ 有關安裝記憶咕的資訊，請參閱第 12 頁。

變更您的藍芽設定

- 1 按**功能表**並選擇**連接**，然後選擇**藍芽**。
- 2 選擇**藍芽設定**。對以下選項作出變更：

顯示我的手機 - 選擇向其他裝置顯示或隱藏您的裝置。

我的手機名稱 - 為 KC550 手機輸入名稱。

我的藍芽位址 - 檢視您的藍芽位址。

變更連線設定

您的網絡商已經為您設定連線設定，因而，您可以立即享用您的新手機。若要變更任何設定，請使用此功能表。

按**功能表**並選擇**連接**。您可從以下選項中選擇：

藍芽 - 設定 KC550 以使用藍芽。您可調整是否向其他裝置顯示您的手機，或搜尋手機已配對的裝置。

網絡 - 您的 KC550 會自動連線至您的首選網絡。使用此功能表可變更這些設定。您亦可以使用此功能表來新增接入點。

USB 連接模式 - 選擇**數據服務**並透過 LG PC Suite 軟件同步您的 KC550，藉此複製您手機中的檔案。若您已插入記憶咕，選擇**大容量儲存**，可將手機用作 USB 記憶棒。連接電腦，並將檔案拖放至 KC550 可移除裝置資料夾。

同其他藍芽裝置配對

透過將 KC550 手機同其他裝置配對起來，您可設定一個密碼保護連接。這意味著配對會更安全。

- 1 檢查藍芽是否為**開啓**並**顯示**。透過選擇**顯示我的手機**，然後選擇**顯示**，您可在**藍芽設定**功能表中變更您的裝置的可見性。
- 2 從藍芽功能表中選擇**裝置列表**，然後選擇**新增**。

- 3 您的 KC550 手機將搜尋裝置。完成搜尋後，**配對**和**更新**將顯示在屏幕上。
- 4 選擇要配對的裝置，並選擇**配對**，然後輸入密碼，並選擇**確定**。
- 5 然後，手機將連接到其他裝置，且您必須在此裝置上輸入相同的密碼。
- 6 密碼保護藍芽連線已準備就緒。

使用藍芽耳機

- 1 檢查藍芽是否為**開啓**並**顯示**。
- 2 遵循隨耳機附帶的說明，將手機置於配對模式中並配對裝置。
- 3 KC550 手機將自動切換到耳機情景模式。您亦可連接藍芽到手機，以接聽來電。

01

02

03

04

05

06

07

08

配件


以下配件隨 KC550 手機一併提供。有不同的配件供您的手機使用。您可以根據您的個人通訊要求選擇這些選項。

旅行充電器



USB線及光碟

連接並同步您的 KC550 和電腦。



標準電池



使用手冊

了解更多 KC550。

立體聲耳機



注意事項

- 只可用原裝 LG 配件。不使用原裝 LG 配件，保養可能失效。
- 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商查詢更多詳情。

網絡服務

本手冊所述之無線電話經認可可用於 GSM 900, DCS 1800 及 PCS 1900 網絡。

手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

技術資料

一般

產品名稱：KC550

系統：GSM 900 / DCS 1800 / PCS 1900

環境溫度

最高：+55°C (放電)

+45°C (充電)

最低：-10°C

01

02

03

04

05

06

07

08

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KC550

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 60950-1: 2001
EN 50369/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V 1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36-547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name Issued Date

Seung Hyoun, Ji / Director 18. March. 2008

Signature of representative

安全及有效使用的指引

請閱讀以下簡易的使用準則。違反這些準則可能會發生危險或觸犯法律。詳細資訊刊於本用戶手冊的正文部份。

無線電波暴露準則

無線電波暴露及比吸收率 (SAR) 資訊

本手機型號 KC550 已為遵守無線電波暴露的應用安全要求而設計。此要求根據包括專為確保任何年齡、任何健康狀況的所有人士安全而設的安全極限的科學指引。

- 無線電波暴露指引的度量單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均十 (10) 克組織 2 W/Kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.348 W/Kg (10g)，攜帶於身上時則為 0.665 W/Kg (10g)。

- 採用了電氣與電子工程師學會 (IEEE) 建議 SAR 限制 (即平均一 (1) 克組織 1.6 W/Kg) 的國家/地區居民的 SAR 數據資訊 (如美國、加拿大、澳洲及臺灣)。

產品護理及維修

警告！

- 僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他種類可能使手機的認可或保養失效，並可能引致危險。
- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
 - 遠離電子裝置，如電視、無線電或個人電腦。
 - 裝置需遠離發熱來源，如散熱器或烹調器具。
 - 切勿將手機放入微波爐中，這會導致電池爆炸。
 - 請勿摔落手機。
 - 請勿讓此裝置遭機械震動或電擊。
 - 如在特別環境的要求下，請關閉手機。如請勿在未得到批准下在醫療儀器附近使用您的手機。

安全及有效使用的指引

- 請勿以潮濕的雙手對充電中的手機進行操作。
- 這可能會引致觸電或造成手機嚴重損壞。
- 請勿使用刺鼻的化學物品（如酒精、苯、稀釋劑等等）或清潔劑來清潔手機。這可能會有失火的危險。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 小心使用如耳機與聽筒一類的配件。確保纜線安全捲起，如無必要，切勿觸及天線。
- 開機前，請拔除數據線。

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上（即您的胸口袋）。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

馬路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提聽筒套件，請使用免提聽筒套件。
- 若有駕駛條例限制，請駛離馬路並停泊好汽車後再撥打或接聽電話。
- RF 能量可能影響您的汽車內某些電子系統，如汽車立體音響裝置、安全設備。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。有可能因使用不當而造成嚴重損傷。

如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在過馬路時尤為必要。

避免損害聽力

如果長時間以較大音量收聽，可能會對聽覺造成損害。因此我們建議您不要在耳邊開啓或關閉手機。我們亦建議將音樂及通話音量設定至合適水平。

玻璃零件

您的 KC550 手機有部分零件為玻璃質料。當手機掉落地面或是受到相當程度的撞擊時，玻璃質料的鏡面可能會破裂。千萬不要以手接觸或嘗試移除玻璃碎片，應立即停止使用手機，並盡快到 LG 授權的維修中心更換該破碎的玻璃鏡面。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。請勿在燃料或化學物質旁使用。
- 請勿在車內擺放手機和配件的位置，運送或儲藏易燃氣體、液體或爆炸物。

在飛機

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

安全及有效使用的指引

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
 - 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
 - 請勿拆解電池組或造成電池組短路。
 - 請保持電池組的金屬接點清潔。
 - 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
 - 如果電池很久沒有使用來擴展其用量，需重充電池。
 - 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
 - 請勿把電池放置在熱或冷的地方，這可損害電池效能。
 - 若使用類型不當的電池，則有發生爆炸的危險。
 - 請根據製造商的指示來處理廢棄電池。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
 - 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。



视话机软件或服务提供商而定，
本手册中的部分内容可能与您的
手机有所不同。

KC550 用户手册

恭喜您购买此款功能先进、外观小巧的 LG KC550 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

设定 01

待机屏幕 02

基本功能 03

高级功能 04

管理功能 05

浏览器 06

设置 07

配件 08

内容

01 设定	电话本..... 20
开始了解您的手机..... 7	搜索联系人..... 20
打开视图..... 8	添加新联系人..... 20
安装 SIM 卡和电池..... 9	联系人选项..... 20
存储卡..... 12	将联系人添加到群组..... 21
安装存储卡..... 12	重命名群组..... 21
取出存储卡..... 12	为联系人添加图片..... 21
格式化存储卡..... 12	将电话本复制到 SIM 卡..... 22
菜单地图..... 13	删除所有联系人..... 22
02 待机屏幕	查看信息..... 22
待机屏幕..... 14	信息..... 23
快速键..... 14	信息..... 23
主菜单..... 14	发送信息..... 23
状态栏..... 15	输入文本..... 24
03 基本功能	设置电子邮件..... 25
通话..... 16	使用新帐户发送电子邮件..... 26
拨打电话..... 16	信息文件夹..... 26
从电话本拨打电话..... 16	管理信息..... 27
接听和拒绝电话..... 16	使用模板..... 27
调节呼叫音量..... 17	更改文本信息设置..... 28
快速拨号..... 17	更改多媒体信息设置..... 28
查看通话记录..... 17	更改电子邮件设置..... 29
使用呼叫转接..... 18	更改其它设置..... 29
使用呼叫限制..... 18	04 高级功能
更改通话设置..... 18	照相机..... 30
	快速拍照..... 30

20	拍照后.....	30	录音机.....	41
20	了解取景器.....	31	使用录音机.....	41
20	使用快速设置.....	31	录制语音备忘录.....	41
20	使用闪光灯.....	32	发送录音.....	41
21	更改图像大小.....	32	影片制作室.....	41
21	查看保存的照片.....	32	我的文档.....	42
21	将照片设为墙纸或图像 ID.....	33	图像.....	42
22	录像机.....	34	图像选项菜单.....	42
22	快速摄像.....	34	发送图片.....	43
22	拍摄视频后.....	34	管理图像.....	43
23	了解取景器.....	35	删除图像.....	43
23	使用快速设置.....	35	删除多个图像.....	43
23	观看保存的视频.....	36	创建幻灯片.....	44
24	观看视频时调节音量.....	36	声音.....	44
25	MP3 播放机.....	37	使用声音.....	44
26	MP3 播放机.....	37	视频.....	44
26	将音乐传输到手机.....	37	观看视频.....	44
27	播放歌曲.....	37	发送视频剪辑.....	45
27	播放音乐时使用选项.....	37	视频选项菜单.....	45
28	创建播放列表.....	38	文件.....	46
28	播放播放列表.....	38	查看文件.....	46
29	编辑播放列表.....	38	其它.....	46
29	删除播放列表.....	39	外部储存器.....	46
30	FM 收音机.....	40	将手机用作大容量存储设备.....	47
30	使用 FM 收音机.....	40	将文件传输到手机.....	47
30	搜索电台.....	40	使用蓝牙发送和接收文件.....	47
	重设频道.....	40	游戏和应用程序.....	49
	收听收音机.....	40	游戏和应用程序.....	49

内容

玩游戏.....	49	07 设置	
查看应用程序.....	49	设置.....	56
更改网络设定.....	49	更改情景模式.....	56
		个性化情景模式.....	56
		更改日期和时间.....	56
		更改语言.....	56
		更改显示设置.....	56
		更改保密设置.....	57
		使用飞行模式.....	57
		重设手机.....	58
		查看内存状态.....	58
		更改蓝牙设置.....	58
		更改连接设置.....	58
		与其它蓝牙设备配对.....	59
		使用蓝牙耳机.....	59
05 管理功能		08 配件	
公文包.....	50	配件.....	60
将事件添加到日程表中.....	50	网络服务.....	61
编辑日历事件.....	50	技术参数.....	61
共享日历事件.....	51	标准.....	61
添加备忘录.....	51	外部环境.....	61
工具.....	52		
设置闹钟.....	52	关于安全有效使用手机的准则....	63
使用计算器.....	52		
使用秒表.....	52		
换算单位.....	52		
向世界时间添加城市.....	53		
SIM 卡服务.....	53		
06 浏览器			
浏览器.....	54		
访问网页.....	54		
添加并访问书签.....	54		
保存页面.....	54		
访问保存的页面.....	54		
查看浏览器网页浏览记录.....	55		
更改网络浏览器设置.....	55		

开始了解您的手机

主屏

清除键 

每按一下删除一个字符。使用此键返回上一屏幕。

通话键 


拨打电话号码并接听来电。

充电器、数据线、
免提连接器

存储卡
插槽

音量键

相机/MP3
播放器键

结束/电源键 

挂断或拒接来电。

开机/关机。

使用此菜单将返回待机屏。

01

02

03

04

05

06


07

08

设定

7

打开视图

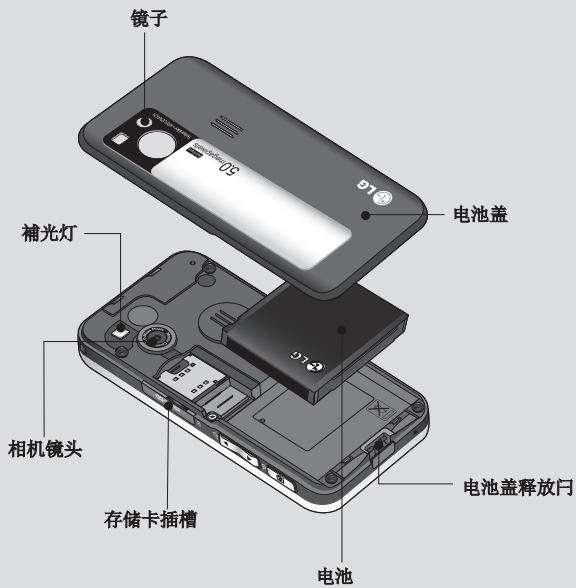

安装 SIM 卡和电池


1 卸下电池盖

按电池盖释放门。将电池盖沿手机底部滑动，卸下电池盖。



2 取出电池

抬起电池底边，小心将电池从电池室取出。

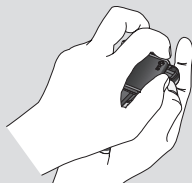

警告：手机开机时，不要取出电池，这可能会损坏手机。

3 安装 SIM 卡

打开 SIM 卡弹夹。将 SIM 卡插入 SIM 卡弹夹，反方向滑入。确保卡的金色接触区域面朝下。要取出 SIM 卡，沿相反的方向轻推。

01

02

03

04


05

06

07


08

安装 SIM 卡和电池

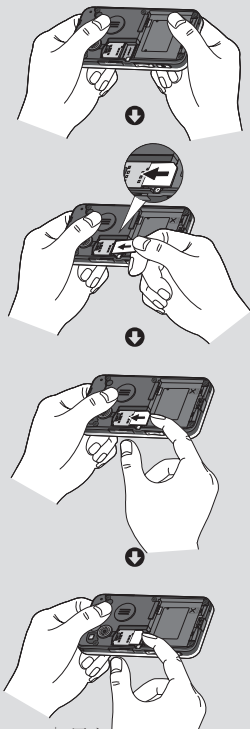


4 安装电池

先将电池顶端插入电池室顶部。
请确保电池触点与手机端子对齐。
向下按电池底部，直至电池卡入
到位。

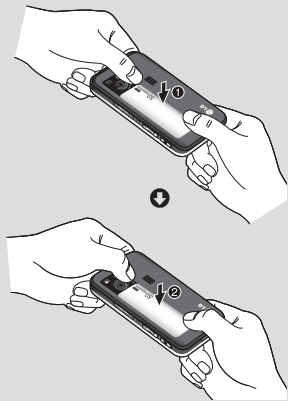

5 更换电池盖

将电池盖沿手机顶部滑动，直到卡入到位。

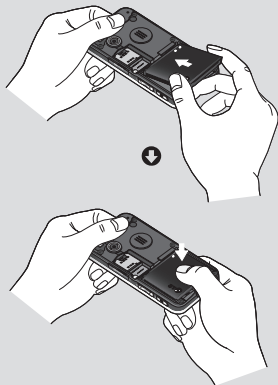

6 充电

推开 KC550 侧面的充电器插槽盖。插入充电器并插入电流插座。只要屏幕上显示“已完全充电”信息，KC550 充电才完成。

警告：如果手机置于柔软物体之上，请不要充电。应将手机放在完全通风的位置充电。



01

02

03

04

05

06

07

08


存储卡

安装存储卡

使用存储卡，可以扩展手机的可用存储空间。KC550 最大支持 2GB 存储卡。


提示！ 存储卡是可选配件。

打开滑盖，插入存储卡。将存储卡滑入插槽顶部，直到卡入到位。确保金色接触区域面朝上。

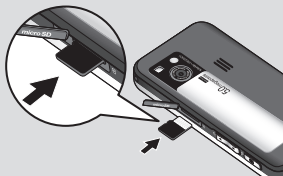

取出存储卡

如下图所示，轻推以打开滑盖，小心取出存储卡。

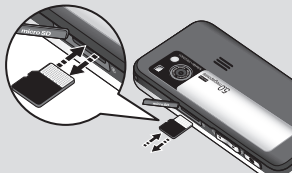

格式化存储卡

如果尚未格式化存储卡，您需要先格式化才可以开始使用。

- 1 从待机屏幕点触**菜单**，然后选择**设置**。
- 2 选择**内存状态**，然后选择**外部存储器**。
- 3 点触**格式化**，输入保安密码，密码默认为 0000。存储卡完成格式化，现在，您可以使用了。
- 4 要在 KC550 上查看新格式化的文件夹，请点触**菜单**，然后选择**我的文档**。选择**外部存储器**。

警告： 格式化卡时，所有内容将被擦除。如果不想失去存储卡中的数据，请先备份。

菜单地图



游戏和应用程序

- 1 M-toy
- 2 游戏
- 3 应用程序
- 4 网络设置文件



通话记录

- 1 所有通话
- 2 未接来电
- 3 发电
- 4 已接来电
- 5 通话时间
- 6 通话费
- 7 数据资料



日程表

- 1 日程表
- 2 备忘录



多媒体

- 1 MP3播放机
- 2 照相机
- 3 录像机
- 4 FM收音机
- 5 录音机
- 6 Muvee工作室



信息

- 1 新信息
- 2 收件箱
- 3 电子邮件箱
- 4 草稿箱
- 5 发件箱
- 6 已发信息
- 7 收听语音邮件
- 8 小区广播信息
- 9 模板
- 0 设置



我的文档

- 1 图像
- 2 声音
- 3 视频
- 4 文件
- 5 其它
- 6 外部储存器



情景模式

- 1 普通
- 2 静音
- 3 仅振动
- 4 大声
- 5 耳机



电话本

- 1 搜索
- 2 新联系人
- 3 快速拨号
- 4 群组
- 5 全部复制
- 6 全部删除
- 7 设置
- 8 资料



工具

- 1 闹钟
- 2 计算器
- 3 秒表
- 4 单位对换器
- 5 世界时钟
- 6 SIM卡服务



浏览器

- 1 主页
- 2 书签
- 3 输入网址
- 4 网页浏览记录
- 5 已保存的页面
- 6 设置
- 7 资料



连接性

- 1 蓝牙
- 2 网络
- 3 USB连接
- 4 电视输出



设置

- 1 日期和时间
- 2 语言
- 3 显示
- 4 拨电
- 5 保安设置
- 6 飞行模式
- 7 重设
- 8 内存状态

01

02

03

04

05

06


07


08


待机屏幕

快速键

快速键使您可以一键式轻松访问常用功能。

 选择可打开收件箱。要打开信息编辑器，请点触并按住按键。

 选择以打开播放机。

 选择以选择手机的声音情景模式。

 选择以打开收藏夹菜单。

主菜单

主菜单提供 12 个菜单选项。

打开主菜单：

- 1 选择**菜单**。
- 2 主菜单将出现在屏幕上。
- 3 突出显示您需要的选项时，点触**确定**打开。

客户须知

为了使天线保持最佳的灵敏度，LG 建议您按照下图所示的方式持握手机。



通话和使用蓝牙连接期间，请不要用手遮挡天线区域。 否则可能产生干扰，降低通话质量。

状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启用了蓝牙。

下表说明了您可能在状态栏中看到的不同图标的涵义。

图标	说明
	网络信号强度 (指示栏数不同)
	无网络信号
	GPRS 可用
	EDGE 可用
	飞行模式已激活
	呼叫被转接
	漫游服务
	蓝牙已激活
	WAP 服务已连接
	闹钟已设置
	日程表
	新信息

图标	说明
	新语音信息
	正在使用“普通”情景模式
	正在使用“静音”情景模式
	正在使用“振动”情景模式
	正在使用“户外”情景模式
	正在使用“耳机”情景模式
	剩余电量
	电池电量空

01

02

03

04

05




06

07

08



通话

拨打电话


- 1 使用键盘键入号码。要删除一个数字，请按 。
- 2 按  开始通话。
- 3 要结束通话，请滑动手机右侧的  然后按是。

提示! 要输入 + 以拨打国际电话，请按住 **0**。

从电话本拨打电话

- 1 翻开手机或向下按住手机侧面的相机键，以显示触式键盘菜单。
- 2 选择 ，以打开电话本。
- 3 使用键盘输入您要呼叫的联系人第一个字母。
- 4 点触通话或点触  开始通话。

接听和拒绝电话

电话响后，点触接受或点触  应答来电。

电话响后，打开手机或按相机键激活触式键盘，然后选择静音以静音。如果您在开会时忘记将情景模式更改为静音，这非常有帮助。

向手机底部滑动 ，或点触拒绝拒接来电。

提示! 您可以更改手机上的设置以不同方式接听来电。

点触**菜单**，选择**设置**，然后选择**拨电**。选择**接听模式**，从**滑开滑盖**、**任意键**或**仅接受键**中选择。


调节呼叫音量

要调节通话过程中的音量，请按手机左侧的音量键。

快速拨号

您可以为经常呼叫的联系人分配快速拨号号码。

- 1 按**电话簿**，然后选择**快速拨号**。
- 2 语音信箱设为快速拨号 1 且无法更改。使用触式键盘箭头并点触**分配**，或通过按硬键数字来选择任意其它数字。
- 3 此时将打开您的地址簿。使用触式键盘箭头选择您要指定为该数字的联系人，然后点触**确定**。

要呼叫快速拨号号码，按住指定的数字，直到屏幕上显示该联系人。将自动启动呼叫，无需再点触 。

查看通话记录

按**菜单**，选择**通话记录**。选择以查看：

所有通话 - 查看所有拨出电话、已接来电和未接来电的完整列表。

未接来电 - 查看您没接到的所有电话的列表。

发电 - 查看所有已拨打的电话的列表。

已接来电 - 查看打给您的所有电话的列表。

通话时间 - 查看通话时长的详细信息，包括已接来电和已发送呼叫。

通话费 - 查看“最后通话”或“所有通话”的相关费用。此服务取决于网络，某些运营商不支持此服务。

数据资料 - 查看所有已接收和发送数据的字节数 (KB)。

提示! 从任意通话记录中选择**选项**，然后选择**删除**删除选定的或所有录制项。

01

02

03

04

05

06

07

08

通话

使用呼叫转移

- 1 选择**菜单**，选择**设置**，然后选择**拨电**。
- 2 选择**呼叫转移**。
- 3 选择转接电话的情况：转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。
- 4 选择**激活**，然后选择是要转接到语音邮箱、其它号码还是常用号码。
- 5 输入转接号码或选择搜索浏览转接号码的联系人。

使用呼叫限制

- 1 选择**菜单**，选择**设置**，然后选择**拨电**。
- 2 选择**呼叫阻截**。
- 3 选择以下七个选项中的一项或所有项：
 - 所有拨电
 - 国际电话
 - 主国以外的国际漫游拨电
 - 所有来电
 - 国际漫游时的来电
 - 取消所有阻截
 - 更改密码

更改通话设置

- 1 选择**菜单**，选择**设置**，然后选择**拨电**。
- 2 在此，您可以修改以下设置：
 - 呼叫转移** - 选择是否要转接呼叫。转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

提示! 要关闭所有通话转移，请从**呼叫转移**菜单中选择**关闭取消**。

- 呼叫阻截** - 选择何时限制呼叫。选择**激活**，然后输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

- 固定拨号号码** - 选择可从此手机拨出的号码列表。

提示! 从**通话**菜单中选择**号码列表**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的PIN2 码。仅可以使用手机拨打此号码列表中的号码。

接听模式 - 选择是使用接受键、任意键接听电话还是滑开手机时接听电话。

发送本机号码 - 选择当您呼叫对方时是否显示您的号码。

来电连接等待 - 有等待呼叫时会收到通知。

分钟提示 - 选择**打开**，在通话过程中每一分钟将听到一次提示音。

自动重拨 - 选择**开或关**。

发送双音多频 - 选择**开或关**。

01

02

03

04

05


06

07

08

电话本

搜索联系人


- 1 选择**电话本**，选择**搜索**，或从**菜单**屏幕选择**电话本**或从待机屏幕选择 。
- 2 使用键盘输入您要呼叫的联系人的第一个字母。
- 3 要在联系人及其不同电话号码间滚动，请使用触式键盘箭头。

添加新联系人

- 1 选择**电话本**，然后选择**添加**。
- 2 选择是将新联系人保存到**手机**还是**SIM 卡**。
- 3 在提供的字段中输入所有信息，然后选择**保存**。

或者，使用更快捷的方式…

- 1 在待机屏幕上输入要保存的号码，然后选择**选项**。
- 2 选择**保存**或**添加到现有联系人**。
- 3 输入以上相关信息，然后点触**保存**。

备注：保存联系人的电子邮件地址时，按  输入符号，使用触式键盘箭头滚动，直到看到 @。

联系人选项

查看联系人时，您可以执行多项操作。以下显示如何进入并使用“选项”菜单：

- 1 打开您要使用的联系人。请参阅上面的**新联系人**。
- 2 选择**选项**以打开选项列表。

在此，您可以：

修改 - 更改联系人的任何详细信息。

新信息 - 向联系人发送信息。如果联系人有电子邮件地址，请选择是发送信息还是电子邮件。

发送方式 - 将联系人的详细信息作为名片发送给其他人。选择发送方式：作为文本信息、作为多媒体信息、通过蓝牙还是通过电子邮件。

删除 - 删除联系人。如果确定，请选择**是**。

新联系人 - 添加新联系人。

多项删除 - 标记多个联系人以删除。

复制至 SIM 卡/手机 - 选择是移动到或复制到 SIM 卡还是手机（取决于联系人的初始保存位置）。

主要号码 - 如果列出多个号码，选择联系人的首选号码。

将联系人添加到群组

您可以将联系人保存到群组，例如，将工作同事和家人分开。手机中已设置多个群组，包括：**家人、朋友、同事、重要人士、群组 1 和群组 2**。

- 1 选择**电话本**，然后选择**群组**。
- 2 滚动到您要添加联系人的群组，点击**查看**，然后选择**添加**。
- 3 将打开您的电话本。滚动到您要添加到群组的联系人，点击 ，然后选择**完成**。
- 4 如果确定，请选择**确定**。

提示！ 您可以为群组指定来电铃声或图标。选择您要为其指定来电铃声或图标的群组，选择**选项**，然后选择所需项目。

重命名群组

您可以重命名群组以满足您的要求。

- 1 选择**电话本**，然后选择**群组**。
- 2 选择您要重命名的群组。

3 点触**选项**，选择**重命名**，然后输入新群组名称。

4 选择**保存**。

备注：您仅可以将联系人分配到群组或向联系人添加保存在手机内存（不是 SIM 卡）中的图片。

为联系人添加图片

您可以为联系人添加图片，更改联系人在地址簿中的显示方式。

- 1 选择**电话本**，然后选择**设置**。
- 2 选择**查看选项**，然后选择**图片显示**。
- 3 然后返回地址簿，选择您要为其添加图片的联系人。
- 4 点触**选项**，然后选择**修改**。
- 5 向下滚动到**图片**部分。点触**选项**，然后选择**图像或新图像**。如果选择**图像**，您可以选择保存在内部存储器中的图像。如果选择**新图像**，将打开照相机取景器，以便您为联系人拍照。
- 6 选择**保存**。

01

02

03

04

05

06

07

08

电话本

将电话本复制到 SIM 卡

您也可以选择将联系人从 SIM 卡复制到手机，或从手机复制到 SIM 卡。

- 1 选择**电话本**，然后选择**全部复制**。
- 2 选择复制联系人：**SIM 卡至手机**或**手机至 SIM 卡**。
- 3 选择是保存还是删除原始记录。
- 4 如果确定，请选择**是**。

删除所有联系人

- 1 选择**电话本**，然后选择**全部删除**。
- 2 选择是从 **SIM 卡**还是**手机**删除联系人。
- 3 如果确定，请选择**是**。
- 4 输入保安密码，密码默认为 0000，然后点触**确定**。

查看信息

选择**电话本**，然后选择**资料**。在此，您可以查看**服务拨号号码、本机号码**和**名片**。

提示! 如果您尚未创建名片，名片屏幕将为您提供创建名片的选项。选择**新建**，输入所需联系人的详细信息。选择**保存**。

信息


信息

KC550 包含与短信（短信服务）、多媒体信息（多媒体信息服务）、电子邮件，以及网络服务消息相关的功能。点触**菜单**，然后选择**信息**即可。

发送信息

- 1 按**菜单**，选择**信息**，然后选择**新信息**。
- 2 选择**信息**以发送短信或多媒体信息。（如果要发送**电子邮件**，请参阅第 27~28 页，要使用**蓝牙**发送内容，请参阅第 49~50 页。）
- 3 此时将打开新信息编辑器。信息编辑器是一款直观易用的工具，它将短信和彩信组合在一起，可在短信模式和彩信模式间轻松切换。信息编辑器的默认设置为短信模式。
- 4 使用 T9 预测模式或 Abc 手动模式输入信息。请参阅第 26 页的**输入文本**，查看如何在不同的文本输入模式间切换。

- 5 选择**选项**，然后选择**插入**以添加**图像、声音、视频、符号、文本模板、图释、姓名和号码、新幻灯片、主题**或**更多（联系人/我的名片/日程表）**。
- 6 按中心键发送至。
- 7 输入电话号码，或点触**选项**并选择**电话本**以打开联系人列表。您可以添加多个联系人。
- 8 选择**发送**。

 **警告：**如果在信息编辑器中添加了**图像、视频、视频、新幻灯片或主题**，将自动转换到彩信模式，您将需要支付相应的费用。

01

02

03

04

05

06

07

08

信息

输入文本

您可以使用手机键盘输入字母数字字符。例如，在电话本中存储姓名、写短信、在日程表中安排事件等，都需要输入文本。手机中可以使用以下文本输入法：T9 预测模式、ABC 手动模式和 123 模式。

备注：某些字段可能只允许以一种文本输入模式输入（如在地址簿字段输入电话号码）。

要在文本输入字段中打开 T9 模式，请选择**选项**，然后依次选择**设置 T9**和**开**。打开 T9 后，您可以通过按 **#*0** 在文本输入模式间切换。您会注意到，在显示屏右上角显示文本输入模式指示符。

要在文本输入字段中输入符号，请按 ***#** 键，选择一个符号，然后选择**确定**。

按 **0** 以空格结束每个单词。

要删除字符，请点触 **C** 键。

T9 预测模式

T9 预测模式使用内置字典，根据您的按键的顺序识别您写入的内容。只需按与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。

如果所需单词没有出现，请点触**选项**，选择**新建T9单词**，然后使用 ABC 手动模式输入单词。您的单词将添加到词典中。

备注：您可以通过点触**选项**，然后选择**编写语言**选择不同的 T9 语言。

ABC 手动模式

在 ABC 手动模式中，要输入一个字母，您可能需要反复按键。例如，要写入“hello”，需要按两次 **4**、两次 **3**、三次 **5**，再按三次 **5**，最后按三次 **6**。

123 模式

以每个数字一次击键的方式输入数字。在字母模式下，通过按住相应按键，也可以输入数字。

设置电子邮件

使用 KC550 中的电子邮件，您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件账户非常快。

- 1 按**菜单**，选择**信息**，然后选择**设置**。
- 2 选择**电子邮件**，然后选择**电子邮件账户**。
- 3 点触**新建**。
- 4 现在，您可以选择帐户工作方式：
帐户名称 - 输入此帐户的名称。
电子邮件地址 - 输入帐户的电子邮件地址。
我的名称 - 输入您的名称。
接收邮件服务器 - 输入帐户的详细信息。
用户名 - 输入帐户的用户名。
密码 - 输入帐户密码。
发送邮件服务器 - 输入帐户的详细信息。
发送邮件鉴定 - 选择“开”或“关”。
发送邮件服务器 ID - 输入帐户的详细信息。
发送邮件服务器密码 - 输入帐户的详细信息。

要输入以下信息，请点触**选项**，然后选择**先进设置**。

协议类型 - 选择邮箱类型：POP3 或 IMAP4。

最大接收大小 - 选择电子邮件的大小限制，最大为 300KB。

保存至服务器 - 选择是否将电子邮件保存到服务器。对于 IMAP4 账户，始终保存副本。

保存已发送邮件至 - 选择是否将电子邮件保存到服务器（仅适用于 IMAP4）。

插入签名 - 选择是否自动在电子邮件中插入签名。

回复电子邮件地址 - 输入“回复”电子邮件地址。

接收端口号 - 通常，对于 POP3 账户为 110；对于 IMAP4 账户为 143。

发送端口号 - 通常为 25。

自动检索 - 选择以自动检索您的电子邮件。

检索下载 - 选择**仅标题**、**标题 + 正文**（仅适用于 IMAP4）或**全部**。

现在，已经设置了您的账户，它将显示在“电子邮件”文件夹的账户列表中。

01

02

03

04

05

06

07

08

信息

使用新帐户发送电子邮件

要发送/接收电子邮件，您应先设置电子邮件帐户（请参阅第 27 页）。

- 1 选择**菜单**，选择**信息**，然后选择**新信息**。
- 2 选择**电子邮件**，此时将打开新电子邮件。
- 3 写主题，然后点触**确定**。
- 4 使用 T9 预测模式或 ABC 手动模式输入信息。请参阅第 26 页的**输入文本**，查看如何在不同的文本输入模式间切换。
- 5 选择**选项**，然后选择附件以添加：**图像、声音、视频、文档、联系人、我的名片和日程表**。
- 6 按**发送**，输入收件人地址或点触**选项**，然后选择**电话本**以打开联系人列表。
- 7 按**发送**，您的电子邮件将被发送。

信息文件夹

按**菜单**，然后选择**信息**。您可以识别 KC550 中的文件夹结果，完全无需进行说明。

收件箱 - 您接收到的所有信息将放置在收件箱中。在此，您可以进行回复、转发等操作，有关详细信息，请参阅以下内容。

电子邮件箱 - 包含您的所有电子邮件信息。选择您要使用的账户，然后点触**检索**。KC550 将连接到您的电子邮件账户并检索新邮件。

草稿箱 - 如果您来不及写完一条信息，您可以将已写信息保存在此。

发件箱 - 这是发送信息时的临时存储文件夹。

已发信息 - 您发送的所有信息将放置在“已发信息”文件夹中。


收听语音邮件 - 您可以访问语音邮箱（如果网络提供）。当收到新的语音信息时，待机屏幕上显示相应符号。

小区广播信息 - 接收自运营商的所有小区广播和更新。

模板 - 一个已撰写好的有用信息列表，用于快速回复。

管理信息

您可以使用**收件箱**管理信息。

1 按**菜单**，选择**信息**，然后选择**收件箱**。或者，您可以使用快捷方式：在待机屏幕上点触 。

2 选择**选项**，然后选择：

删除 - 删除选定的信息。

回复 - 回复选定的信息。

转发 - 将选定信息发送给其他人。

回复电话 - 向发件人拨打电话。

信息 - 查看有关信息的详细信息，例如，发送时间。

复制/移动 - 您可以选择复制或移动信息。选择可将选定信息复制或移动到 SIM 卡或手机。

多项删除 - 删除选定的信息。

删除已读 - 将删除所有打开的信息。

全部删除 - 您可以选择删除所有信息或仅删除文本信息。

如果看到信息**无空间接收 SIM 卡信息**，您应从收件箱中删除一些信息。

如果看到信息**无空间接收信息**，您可以删除信息或保存的文件以腾出空间。

使用模板

为您最常使用的文本信息和多媒体信息创建模板。手机中已存在多个模板，您可以根据需要进行编辑。

1 按**菜单**，选择**信息**，然后选择**模板**。

2 选择**文本**或**多媒体**。随后，您可以点触**选项**，然后选择**修改**更改现有模板；或选择**选项**以添加新模板或删除模板。

3 要发送模板，请选择您要发送的模板，点触**选项**，然后选择**发送方式**。

4 选择您要发送模板的方式：信息、蓝牙信息或电子邮件。

5 选择一个联系人，然后点触**发送**。

01

02

03

04

05

06

07

08

信息

更改文本信息设置

KC550 已预定义信息设置，因此，您可以立即发送信息。

如果要更改设置，可以使用**设置**选项执行此操作。

按**菜单**，选择**信息**，然后选择**设置**和**文本信息**。您可以更改：

信息类型 - 将文本转换为语音、传真、传呼、X.400、电子邮件或ERMES。

有效期 - 选择信息在信息中心中的最常保存时间。

状态报告 - 选择可接收信息已发送确认信息。

回复计费 - 选择对回复信息收件人计费。

短信中心 - 输入信息中心的详细信息。

字符编码 - 选择字符编码方式。这将影响信息大小并因此产生数据费用。

将长文本另发送为 - 当您在信息字段中输入的文本超过 2 页时，请选择是以短信还是彩信方式发送信息。

载体设定 - 选择是通过 GSM 还是 GPRS 发送信息。

更改多媒体信息设置

KC550 已预定义信息设置，因此，您可以立即发送信息。

如果要更改设置，可以使用**设置**选项执行此操作。

按**菜单**，选择**信息**，然后选择**设置**和**多媒体信息**。

您可以更改：

幻灯片持续时间 - 选择幻灯片在屏幕上显示多长时间。

优先级 - 选择多媒体信息的优先级别。

有效期 - 选择信息在信息中心中的最常保存时间。

状态报告 - 选择是否允许请求状态报告。

已读回执 - 选择是否允许发送已读报告。

自动下载 - 选择是自动还是手动下载多媒体信息，取决于您是在当地还是漫游。

网络设定 - 选择特定于网络设定的运营商以发送多媒体信息。

许可信息类型 - 选择允许的多媒体信息类型。

更改电子邮件设置

您可以调整电子邮件设置以满足您的个人需要。

- 1 按**菜单**，选择**信息**，然后选择**设置**。
- 2 点触**电子邮件**，然后，您可以调整以下设置：

电子邮件账户 - 您可以设置电子邮件帐户。

接入点 - 您可以设置电子邮件接入点。

索取的间隔时间 - 选择 KC550 检查新电子邮件信息的频率。

签名 - 创建电子邮件签名并打开此功能。

更改其它设置

按**菜单**，选择**信息和设置**，然后选择：

语音邮件中心号码 - 您的语音邮件中心号码保存在此。有关其提供的服务的详细信息，请联系您的网络运营商。

服务信息 - 如果您的网络服务提供商支持此功能，则可接收语音邮件。当新语音邮件到达时，屏幕上显示相应符号。请与您的网络服务提供商联系，了解有关其服务的详细信息，以便对您的手机进行相应配置。

小区广播信息 - 选择小区广播的接收状态、信息提示和语言。

保存文本信息 - 选择要将文本信息保存到手机内存还是外部存储器。

01

02

03

04

05

06

07

08

照相机

快速拍照


- 1 打开滑盖，向下按住手机右侧的相机键，屏幕上将显示照相机取景器。
- 2 水平放置照相机，将镜头对准要拍摄的物体。
- 3 半按手机右侧的相机键。取景器屏幕的中间会出现一个对焦框，使用相机定位，以便在对焦框中看到要拍摄的物品。对焦框变绿时，表示照相机已对焦。
- 4 选择中软键或完全按下相机键以拍照。


备注：您也可以从待机屏幕进入照相机菜单。点触**菜单**，选择**多媒体**，向下滚动并选择**照相机**以打开取景器。


拍照后


拍好的照片将显示在屏幕上。图像名称在屏幕底部显示，屏幕右侧将显示 6 个选项。

删除 - 选择以删除您刚拍摄的照片，点触是确认删除。此时将出现取景器。

 **新图像** - 选择可以立即拍摄另一张照片。将保存您的当前照片。

 **设置为** - 选择可以打开一个子菜单，您可以在此菜单中将图像设为**墙纸**或**图像 ID**。


 **发送方式** - 选择以**多媒体信息**或**电子邮件**形式发送照片。

 **相册** - 选择可以查看像册中的其它照片。将保存您的当前照片。

确定 - 选择可以立即拍摄另一张照片。将保存您的当前照片。

了解取景器

备注：您可以使用手机左侧的音量键调节缩放。

提示：使用照相机时，耗电量增加。如果显示  图标，表示电池电量低，请在使用前充电。

使用快速设置

按选项可变更。

自拍计时器 - 自拍器允许您设置按下拍摄按钮后的延迟。从 3 秒、5 秒或 10 秒中选择。。如果照片中要包括您自己，自拍器非常有用。

拍摄模式 - 可选择单拍或连拍。

白平衡 - 白平衡确保照片中的白色显示真实。要正确调整照相机的白平衡，您需要确定光照条件。从**自动**、**夜间模式**、**日光**、**白炽**、**阴天**、**荧光**效果中选择。

色彩效果 - 从四个色彩效果选项中选择：**关**（标准/彩色）、**棕褐色**、**单色**（黑白）或**反色**。

曝光值 - 曝光值的深浅差别。曝光值低的图像显示模糊，而曝光值高的图像则显示更为清晰。

解析度 - 请参阅第 35 页的**更改图像大小**。

品质 - 在**普通**、**精细**和**超精细**之间切换。质量越精细，照片将越清晰，同时，文件更大，这意味着内存中可存储的照片越少。

自动对焦 - 将自动对焦设为“开”或“关”。按相机键，相机将自动调整对焦，以获得更清晰锐利的图像。

快门音 - 从三种快门声音中选择一种或将声音切换为关。

ISO - 可选择自动、ISO800、ISO400、ISO200、ISO100、ISO80。

保存至 - 选择是将照片保存在内部存储器还是外部存储器中。

恢复初始设置 - 选择是**重置手机**，恢复为原始照相机设置。

01

02

03

04

05

06


07

08

照相机

使用闪光灯

闪光灯默认为**关**，此外还有其它选项。

1 选择方向键以  进入闪光灯子菜单。

2 有四个闪光灯选项：

关 - 相机没有闪光灯。此选项有助于节省电池电量。

开 - 当您在黑暗场所拍照时，可将闪光灯设为开。

自动 - 相机将自动评估拍摄好照片所需的光照条件，并在需要时使用闪光灯。

消除红眼 - 取景时，闪光灯保持打开，当您拍照时，照相机将再次闪光以消除红眼。

3 选择您要使用的闪光灯选项。

4 选择后，闪光灯菜单将自动关闭，您就可以拍照了。

5 取景器中的闪光灯图标将根据您设置的新闪光灯模式而更改。

备注：无论您何时退出照相机，闪光灯设置将自动转为默认**关**模式。

更改图像大小

您可以更改照片大小以保存在存储空间中。像素越高，文件越大，同时意味着将占用更多内存。如果要在手机中保存更多图片，请更改像素大小，使文件更小。

1 按**选项**，从工具栏中选择**解析度**。

2 从 5 个数值选项中选择像素值 (320X240, 640X480, 1280X960, 1600X1200, 2048X1536)。

3 选择您要使用的尺寸选项，点触**确定**实施您所做的更改。

备注：缩放功能因照相机设定的解析度而有所不同。例如，如果照相机解析度设置为最高，则您将不能缩放。

查看保存的照片

1 您可以通过照相机模式或从待机屏幕访问保存的照片。从取景器中轻触**相册**。从待机屏幕中点触**菜单**，然后选择**我的文档和图像**。

2 屏幕上将显示您的图片库。

3 使用箭头选择您要查看的照片，然后点触**查看放大**。

将照片设为墙纸或图像 ID

使用触式键盘上的箭头，从图片库中选择一个图像，然后点触**设置为**将选定图像设为**墙纸**或联系人的**图像 ID**。

备注：图像 ID 仅可添加到手机（不是 SIM 卡）中保存的联系人中。

01

02

03

04

05

06

07

08

录像机

快速摄像


- 1 打开滑盖，向下按住手机右侧的相机键，屏幕上将显示照相机取景器。
- 2 点触**选项**，然后选择**录像机**。屏幕上将显示摄像机的取景器。
- 3 将相机镜头对准要拍摄的物体。
- 4 半按手机右侧的相机键开始录制。
- 5 **REC** 出现在取景器的左下角，计时器将显示视频长度。
- 6 要暂停视频，请点触**暂停**，要恢复录制，请选择**继续**。
- 7 选择**停止**可以停止录制。


备注：您也可以从待机屏幕进入**录像机**菜单。点触**菜单**，选择**多媒体**，向下滚动并选择**录像机**以打开取景器。


拍摄视频后


视频名称在屏幕底部显示，屏幕右侧将显示 6 个选项。

删除 - 选择以删除您刚录制的视频，点触“是”确认。此时将出现取景器。

 **新视频** - 选择可以立即拍摄另一段视频。将保存您的当前视频。

 **播放** - 选择可播放已录制的视频。

 **发送方式** - 选择以**多媒体信息**或**电子邮件**形式发送视频。

 **相册** - 选择可以查看相册中的其它视频剪辑。将保存您的当前视频剪辑。

确定 - 选择可以立即拍摄另一段视频。将保存您的当前视频。

了解取景器

打开取景器时，您会看到屏幕上显示以下图标。

使用快速设置

选择“<”箭头可以打开快速设置选项。这包括适用于录制视频的各种选项。

模式 - 要录制作多媒体信息发送的视频，请选择**多媒体信息**。

色彩效果 - 从四个色彩效果选项中选择：**关**（标准/彩色）、**棕褐色**、**单色**（黑白）或**反色**。

亮度 - 对比度定义图像的深浅差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。点触“<”、“>”箭头，沿滚动条滑动对比度指示器，“-”对应对比度更低、更模糊的图像，“+”对应对比度更高、更清晰的图像。

解析度 - 如果要在手机中保存更多视频，请更改像素大小，使文件更小。有两个选项可供视频选择：**320x240**或**176x144**。

品质 - 超精细、精细、标准。

保存至 - 选择是将视频剪辑保存在内部存储器还是外部存储器中。

闪光灯 - 将闪光灯设为**开**或**关**。闪光灯默认设为**关**，以节省电量。退出录像机时，将返回默认的**关**设置。

白平衡 - 白平衡确保视频中的白色显示真实。要正确调整录像机的白平衡，您需要确定光照条件。从**自动**、**日光**、**白炽**、**阴天**、**荧光效果**、**夜间模式**中选择。

相册 - 您可检视相册。

恢复初始设置 - 选择是重设手机，恢复为初始摄像机设置。

01

02

03

04

05

06

07

08

录像机

观看保存的视频

- 1 您可以从摄像机模式或待机屏幕访问保存的视频。从取景器中轻触**相册**。从待机屏幕中点触**菜单**，然后选择**我的文档和视频**。
- 2 屏幕上将显示您的图片库。
- 3 使用箭头键选择要观看的视频，然后点触中软键观看。

观看视频时调节音量

要在播放视频时调整音频音量，请使用手机左侧的音量键。

MP3 播放机

MP3 播放机

LG KC550 拥有内置的音乐播放器，因此，您可以播放所有喜爱的音乐。要访问音乐播放器，请点触**菜单**，选择**多媒体**，然后选择 **MP3 播放机**。在此，您可以访问：

所有歌曲 - 包含手机中的所有歌曲。

我的播放列表 - 包含您创建的播放列表，以及特殊播放列表、最近播放的歌曲和喜爱的歌曲。

作者 - 按艺术家浏览音乐集合。

相册 - 按专辑浏览音乐集合。

类别 - 按流派浏览音乐集合。

设置 - 调整音乐设置。

将音乐传输到手机






将音乐传输到手机的最轻松的方法是通过蓝牙或同步数据线。使用蓝牙传输：

- 1 请确保双方设备都已打开蓝牙，对方可见。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。

3 文件发出后，您必须点触**是**在您的手机上接受它。

4 文件将显示在**所有歌曲**中。

播放歌曲

- 1 按**菜单**，选择**多媒体**，然后选择 **MP3播放机**。
- 2 选择要播放的歌曲。选择 。
- 3 选择  暂停歌曲。
- 4 选择  以跳到下一首歌曲。
- 5 选择  以跳到上一首歌曲。
- 6 选择  以停止音乐并返回MP3播放机菜单。

提示! 要在聆听音乐时更改音量，请使用手机侧面的音量键。

播放音乐时使用选项

选择**选项**，然后从下列内容中选择：

最小化 - 隐藏音乐播放器屏幕，这样，在音乐播放时，您可以像往常一样使用手机。

查看播放列表 - 查看您当前正在聆听的播放列表。

01

02

03

04

05

06

07

08

MP3 播放机

添加到播放列表 - 将当前曲目添加到播放列表。

设定为 - 将当前曲目设为铃声。

资料 - 您可以查看有关正在收听的 MP3 文件的详细信息。


设置 - 更改均衡器或播放模式或打开设定随机播放以调节音乐效果。

创建播放列表

您可以从**全部歌曲**文件夹中进行选择，以创建自己的播放列表。

- 1 按**菜单**，然后选择**多媒体**。
- 2 选择**MP3 播放机**，然后选择**我的播放列表**。
- 3 按选项，选择**新建播放列表**，输入播放列表名称，然后点触**保存**。
- 4 此时将显示**新建播放列表**文件夹。选择要包括在播放列表中的所有歌曲；滚动到这些歌曲，然后点触 。
- 5 选择**保存**存储播放列表。

播放播放列表

- 1 按**菜单**，然后选择**多媒体**。
- 2 选择 **MP3 播放机**，然后选择**我的播放列表**。
- 3 选择要播放的播放列表，点触**查看**，然后选择 。

编辑播放列表

您可能随时想要向播放列表添加新歌曲或从中删除歌曲。如果要管理播放列表，您可以使用“选项”菜单编辑。

- 1 按**菜单**，然后选择**多媒体**。
- 2 选择 **MP3 播放机**，然后选择**我的播放列表**。
- 3 滚动到您要编辑的播放列表，点触**查看**，然后选择**选项**从以下选项选择：

添加 - 使用此选项，您可以向播放列表添加歌曲。

删除 - 从播放列表中删除歌曲。选择“是”确认。

删除多个 - 从播放列表中删除选定的歌曲。

全部删除 - 从播放列表中删除所有歌曲。

信息 - 查看播放列表信息。

删除播放列表

- 1 按**菜单**，然后选择**多媒体**。
- 2 选择**MP3播放机**，然后选择**我的播放列表**。
- 3 滚动到您要删除的播放列表，然后点**触选项**。
- 4 选择**全部删除**，然后选择**是**确认。

提示! 如果您在 MP3 播放器正在播放 MP3 曲目时按 MP3 短键，或点**触选项**并选择**最小化**，就可以使用 BGM 模式。在 BGM（背景音乐）模式中，您可以在使用其它功能时同时播放 MP3。BGM 可以在 MP3 播放器屏幕上停止。

备注:

由于安装了数字版权管理 (DRM) 系统，您从互联网下载或通过多媒体信息接收的某些媒体内容可能包含一个“购买权限”菜单，购买后方可访问。您可以从对内容具有所有权的网站获取购买版权的键。

音乐的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。请查看有关使用此材料的适用国家的国家立法。

01

02

03

04

05

06

07

08

FM 收音机

使用 FM 收音机

LG KC550 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

备注：要收听收音机，您需要插入耳机。将耳机插入耳机插槽（与插入充电器的插槽相同）。

搜索电台

您可以手动或自动微调电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您可以在手机中最多保存 12 个频道。

自动微调：

- 1 按**菜单**，选择**多媒体**，然后选择**FM 收音机**。
- 2 点触**选项**，然后选择**自动微调**，然后选择**是**。
- 3 每次找到一个电台时，KC550 将询问您是否保存。如果要保存该频道，请选择**是**，否则，请选择**否**。手机将自动为您选择要保存的电台分配一个频道编号。

手动微调：

- 1 按**菜单**，选择**多媒体**，然后选择**FM 收音机**。

- 2 选择您要保存电台的频道编号，然后选择**编辑**。

- 3 要进入电台，您可以使用触式键盘箭头搜索，也可以使用键盘输入频率，然后选择**保存**。

备注：您也可以编辑保存在频道编号中的电台。

提示！ 要提高接收质量，请伸展耳机线，它具有收音机天线的功能。

重设频道

- 1 按**菜单**，选择**多媒体**，然后选择**FM 收音机**。
- 2 点触**选项**，然后选择**重设频道**。选择**是**确认重设。每个频道的开始频率将返回为 87.5Mhz。

收听收音机



- 1 按**菜单**，选择**多媒体**，然后选择**FM 收音机**。
 - 2 选择您要收听的电台的频道编号。
- 备注：**您可以通过内置扬声器收听收音机。点触**选项**，选择**收听方式**，然后选择**扬声器**。

录音机

使用录音机

使用**录音机**录制语音备忘录或其它声音。

录制语音备忘录

- 1 按**菜单**，选择**多媒体**，然后选择**录音机**。
- 2 按  开始录音。
- 3 选择**暂停**暂停录音。
- 4 选择**保存**结束录音。
- 5 选择  收听录音。

备注：选择**选项**，然后选择**声音**可以收听保存的所有语音备忘录。

发送录音

- 1 完成录音后，请点触**选项**。
- 2 选择**发送方式**，然后从**多媒体信息**、**蓝牙**或**电子邮件**中选择。如果选择**信息**或**电子邮件**，录音将被添加到信息中，您可以照常撰写或发送信息。如果选择**蓝牙**，手机可能提示您打开蓝牙。

提示！ 如果要将录音作为信息发送，开始录音前，请点触**选项**，选择**录音模式**，然后选择**彩信**。此操作将确保录音适合作为信息发送。

影片制作室

影片制作室可让您建立配有音乐的图像幻灯片放映。

01

02

03

04

05

06

07

08

我的文档

您可以将任意多媒体文件存储到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

所有多媒体文件保存在**我的文档**中。点触**菜单**，然后选择**我的文档**以打开文件夹列表。

图像

图像包含一个文件夹，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。在**图像**文件夹中，点触**选项**以显示选项列表。**图像**中可用的选项取决于您选择的图像类型。对于使用手机相机拍摄的照片，所有选项均可用。

图像选项菜单

图像中可用的选项取决于您选择的图像类型。对于使用手机相机拍摄的照片，所有选项均可用。对于默认图像，以下选项可用：查看、设置方式、文件信息、幻灯片放映、排序方式和列表视图/缩略图视图。

删除 - 删除选定的图像。

设置方式 - 将选定图像设为墙纸或图像 ID。

设定为 - 将选多媒体信息、蓝牙或电子邮件向朋友发送选定的图像。

备注：在通过多媒体信息发送图像前，可能需要调整其大小。

修改图像 - 您可修改图像。

文件 - 编辑、重命名、制作动画或查看选定图像的信息（名称、大小、日期、分辨率、类型和版权所有）。如果插入了外部储存器，将另外显示两个选项：移动到外存卡和复制到外存卡。

打印方式 - 通过蓝牙或 Pictbridge 打印图像文件。

幻灯片放映 - 请参阅第 45 页的“创建幻灯片”。

新文件夹 - 在主图像文件夹中创建一个新文件夹。

标记/取消标记 - 选择多个要删除的图像。

全部删除 - 删除“图像”文件夹中的所有图片。

排序方式 - 按日期、类型或名称排列图像。

列表视图/缩略图视图 - 更改您查看图片的方式。

发送图片

- 1 按**菜单**，然后选择**我的文档**。
- 2 选择**图像**。
- 3 选择图片并选择**选项**。
- 4 选择**发送方式**，然后从**多媒体信息**、**蓝牙**或**电子邮件**中选择。
- 5 如果选择**多媒体信息**或**电子邮件**，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将图片发送至的设备。

管理图像

- 1 按**菜单**，然后选择**我的文档**。
- 2 选择**图像**。
- 3 选择**选项**，然后选择**排列方式**。
- 4 从**日期**、**类型**或**名称**中选择。

删除图像

- 1 按**菜单**，然后选择**我的文档**。
- 2 选择**图像**。
- 3 选择图像并点触**选项**。
- 4 选择**删除**。

删除多个图像

- 1 按**菜单**，然后选择**我的文档**。
- 2 选择**图像**。
- 3 依次选择**选项**、**标记/取消标记**和**删除**。
- 4 在每个图像旁边会显示一个框。选择每个图像，然后点触 进行标记。要取消标记图像，请再次点触 以取消框中的勾选。或者，您可以选择**选项**，然后选择**全部标记**或**取消所有标记**。
- 5 标记了所有对应的框后，选择**删除**并确认您要删除所有标记的图像。

01

02

03

04

05

06

07

08

我的文档

创建幻灯片

如果您要查看手机中的所有图像或浏览已有图像，您可以创建一个幻灯片，这样，您无需对每张图像都执行打开和关闭操作。

- 1 按**菜单**，然后选择**我的文档**。
- 2 滚动并选择**图像**。
- 3 选择您要开始幻灯片放映的照片，然后点触**选项**。
- 4 选择**幻灯片放映**，放映即开始。
- 5 按**暂停**暂停幻灯片放映，点触**退出**结束幻灯片放映并返回**图像**文件夹。
- 6 在幻灯片放映过程中选择**选项**会显示更多选项：


查看 - 在**完整图像**和**全屏**之间选择。选择**横向**更改图像方向。

重复开/关 - 确定是否重复幻灯片放映。

声音

声音文件夹中包含**默认声音**、录音以及下载的声音文件。在此，您可以管理、发送或将声音设为铃声。

使用声音

- 1 按**菜单**，然后选择**我的文档**。
- 2 滚动并选择**声音**。
- 3 选择**默认声音**或从录音文件列表中选择。
- 4 选择声音，然后点触  以收听。
- 5 选择**选项**，选择**设置方式**，然后从**铃声类型**、**铃声编号**和**信息提示音**中选择。

视频

视频文件夹显示已下载的视频以及手机中录制的视频列表。在“视频”文件夹中，点触选项以显示选项列表。

观看视频

- 1 按**菜单**，然后选择**我的文档**。
- 2 滚动并选择**视频**。
- 3 选择视频，然后点触**播放**。
- 4 播放视频之前，您可以通过从**选项**菜单中选择**自动播放下一曲**来设置播放模式。从以下选项选择：

关 - 播放选定的文件。

重复一次 - 播放列表中的所有文件一次。

全部重复 - 反复播放列表中的所有文件。

5 选择**选项**将暂停正在播放的视频，您可以从以下选项选择：

删除 - 删除视频。

发送方式 - 通过多媒体信息、蓝牙或电子邮件向朋友发送选定的视频。

资料 - 查看选定文件的名称、大小、日期、时间、类型和版权详细信息。

发送视频剪辑

- 1 按**菜单**，然后选择**我的文档**。
- 2 滚动并选择**视频**。
- 3 选择所需视频剪辑，然后点触**选项**。
- 4 按**发送方式**，然后从**多媒体信息**、**蓝牙**或**电子邮件**中选择。
- 5 如果选择**信息**或**电子邮件**，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将视频发送至的设备。

备注：在通过多媒体信息发送视频前，可能需要调整其大小。某些视频可能太大，根本无法通过彩信发送。

视频选项菜单

在**视频**文件夹中，点触**选项**以显示下列选项列表。

删除 - 删除选定的视频。

发送方式 - 通过多媒体信息、电子邮件或蓝牙向朋友发送选定的视频。

文件 - 重命名视频、将视频移动到其它文件夹或查看资料（名称、大小、日期、分辨率、类型和版权所有）。如果插入了外部储存器，将另外显示两个选项：移动到外存卡和复制到外存卡。

新文件夹 - 在主视频文件夹中创建一个新文件夹。

标记/取消标记 - 选择多个视频剪辑，然后点触**删除**。

全部删除 - 删除“视频”文件夹中的所有剪辑。

排序方式 - 按日期、类型或名称排列视频。

01

02

03

04

05

06

07

08

我的文档

自动播放下一个 - 可设置播放模式：关、重复一次和全部重复。

- **关**：播放选定的文件。
- **重复一次**：播放列表中的所有文件一次。
- **全部重复**：反复播放列表中的所有文件。

列表视图/缩略图视图 - 更改您查看视频的方式。

文件

从**文件**菜单中，您可以查看所有文件。在此，您可以查看 Excel、PowerPoint、Word、文本和 PDF 文件。

查看文件

- 1 按**菜单**，然后选择**我的文档**。
- 2 选择**文件**。
- 3 选择**文件**，然后点触**查看**。

其它

从**选项**菜单中，您可以查看未保存在**图像、声音、视频或文件**文件夹中的文件。

当您从计算机传输到手机时，您可能发现文件保存在**其它**而不是**文档**文件夹中。如果这样，您可以移动文件。

将文件从**其它**文件夹移到**文件**文件夹：

- 1 按**菜单**，选择**我的文档**，然后选择**其它**。
- 2 选择文件并点触**选项**。
- 3 按**移动**，然后再次点触**移动**。

外部储存器

如果您已插入存储卡，它将显示为**我的文档**中的一个文件夹。您的**外部储存器**文件夹将分为五个文件夹：**图像、声音、视频、文件和其它**。每个文件夹将包含该类型下所有保存在存储卡而不是手机中的文件。

将手机用作大容量存储设备

KC550 可以用作 Mass Storage 设备，和 USB 记忆棒一样。要将文件从计算机移到手机时，这是一个好方法。如果已插入存储卡，作为**大容量存储设备**连接时，将在计算机上显示两个驱动器。

- 1 按**菜单**，然后选择**连接性**。
- 2 选择 **USB 连接**。
- 3 滚动到**大容量存储设备**，然后点触**确定**。
- 4 将 USB 数据线的较小端插入 KC550 一端的接口。将较大端插入计算机的 USB 端口。
- 5 此时将自动打开计算机上的可移动磁盘（如果已插入存储卡，则为两个），其中显示手机或存储卡上的所有文件夹。
- 6 将您的图像、视频、音乐或文档拖放至正确文件夹。
- 7 通过单击桌面工具栏上的**安全移除硬件**图标，安全移除您的手机。
- 8 当您访问文件时，如图像，请点触**菜单**，然后依次选择**我的文档**、**外部存储设备**和**图像**。此文件中将包含所有您传送的图像。

将文件传输到手机

您也可以使用蓝牙将文件从计算机传送到手机。

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用计算机发送文件。
- 3 文件发出后，您必须点触**是**在您的手机上接受它。
- 4 文件将根据其类型保存在相应文件夹。例如，照片将保存在**图像**文件夹，音乐将保存在**声音**文件夹。如果手机无法识别文件类型，文件将保存在**其它**文件夹。

备注：使用蓝牙发送的文件将保存在内部存储器中。

使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

开始使用蓝牙共享文件之前，您需要将您的设备与其它蓝牙设备配对。有关配对设备的详细信息，请参阅第 54 页的**与其它蓝牙设备配对**。

01

02

03

04

05

06

07

08

我的文档

打开蓝牙：

- 1 按**菜单**，选择**连接性**，然后选择**蓝牙**。
- 2 选择**蓝牙开/关**，然后选择**开**。
- 3 选择**关**以关闭蓝牙。

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 依次选择**选项**、**发送方式**，然后选择**蓝牙**。
- 3 如果尚未激活，请选择**是**打开蓝牙。
- 4 KC550 将自动搜索范围内其它启用了蓝牙的设备。
- 5 选择您要向其发送文件的设备，然后点触**发送**。

接收文件：

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详细信息，请参阅第 53 页的**更改蓝牙设置**。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。选择**是**以接收文件。

提示！ 注意进度栏，确保文件已发送。

备注

Bluetooth® 字体标记及徽标由 Bluetooth SIG, Inc. 所有，LG Electronics 对此类标记的使用已得到授权。其它商标和产品名称是其各自所有者的商标。

游戏和应用程序

游戏和应用程序

KC550 中预安装了多款游戏，供您在闲暇时娱乐。如果选择要下载其它游戏或应用程序，它们将保存到此文件夹中。

玩游戏

- 1 按**菜单**，然后选择**游戏和应用程序**。
- 2 选择**游戏**。
- 3 选择您要玩的游戏，然后选择**玩游戏**。

查看应用程序

使用**应用程序**菜单，您可以管理安装在手机上的 Java 应用程序。您还可以删除下载的应用程序。

- 1 按**菜单**，然后选择**游戏和应用程序**。
- 2 选择**应用程序**。
- 3 查看并管理应用程序。

更改网络设定

要下载游戏，您可以使用**网络设定**设置值以连接网络。

- 1 按**菜单**，然后选择**游戏和应用程序**。
- 2 选择**网络设定**。
- 3 您可以添加并编辑新网络设定。

01

02

03

04

05

06

07

08

公文包

将事件添加到日程表中

- 1 点触**菜单**选择**公文包**，然后选择**日程表**。
- 2 选择您要添加事件的日期。您可以通过以下方式选择日期：使用触式键盘箭头滚动到日期；或选择**选项**，然后手动输入日期。

备注：如果您已在日历中保存了事件，要为事件输入日期，在点触**选项**后，请选择**转到日期**。

- 3 选择**新建**，输入所需的事件开始时间和结束时间。
- 4 选择是否要为事件设置**闹钟**。您可以将闹钟设为在事件开始时停止，或在事件开始前的特定时期内停止，以提醒您该事件即将开始。
- 5 输入事件**主题**。使用键盘键入字母和数字。
- 6 再次向下滚动，选择事件是一次性事件，还是以**一次、每日、每周、每月或每年**为间隔重复。如果事件为重复事件，您还可以向下滚动以输入**截止日期**，事件将在该日期完全停止。

- 7 选择**保存**，您的事件将保存在日程表中。对于保存了事件的日期，将以方形光标标记。

编辑日历事件

- 1 从待机屏幕点触**菜单**，选择**公文包**，然后选择**日历**。
- 2 选择**选项**，然后选择所有日程表以查看所有事件列表。滚动到您要编辑的事件，然后选择**查看**。或者，在日历中选择事件发生的日期，然后选择**查看**。
- 3 选择**编辑**，然后滚动到您要更改的事件详细资料。进行修改，然后点触**保存**以存储编辑过的事件。

备注：您可以从日历中删除事件：选择事件以查看，然后依次点触**选项**和**删除**。

共享日历事件

- 1 从待机屏幕点触**菜单**，选择**公文包**，然后选择**日历**。
- 2 选择要共享的事件，然后选择**选项**。
- 3 选择发送方式，从**文本信息**、**多媒体信息**、**蓝牙**或**电子邮件**中选择。

添加备忘录

- 1 点触**菜单**选择**公文包**，然后选择**备忘录**。
- 2 选择**新建**，键入您的备忘录。
- 3 选择**保存**。
- 4 在您下一次打开备忘录应用程序时，屏幕上将显示此备忘录。

提示！ 您可以编辑现有备忘录。选择要编辑的备忘录，点触**选项**，然后选择**编辑**。

01

02

03

04

05

06

07

08

工具

设置闹钟

- 1 点触**菜单**，选择**工具**，然后选择**闹钟**。
- 2 选择**新建**。
- 3 输入所需闹钟时间。
- 4 选择重复类型以说明闹钟的响铃方式：**一次**、**每天**、**周一 - 周五**、**周一 - 周六**、**周六 - 周日**或**选择周日**。
- 5 为闹钟选择与**情景模式**相同、**始终响铃**或**始终振动**。
- 6 选择**声音**以选择新声音。
- 7 为闹钟输入名称或保留建议的名称。
- 8 选择**保存**。

备注：您最多可以设置 5 个闹钟。

使用计算器

- 1 点触**菜单**，选择**工具**，然后选择**计算器**。
- 2 按数字键以输入数字。
- 3 对于简单计算，点触您所需的函数 (+, -, ×, ÷)，然后点触 =。
- 4 对于更复杂的计算，请选择**函数**以选择一个命令。

- 5 选择**清除**清除屏幕，以开始一个新计算。

使用秒表

- 1 点触**菜单**，选择**工具**，然后选择**秒表**。
- 2 选择**启动**可启动计时器。
- 3 如果要记录时间，请选择**记录**。
- 4 选择**停止**结束计时器。
- 5 选择**继续**从您停止的时间重新开始秒表，或选择**重置**重新开始计时。

换算单位

- 1 点触**菜单**，选择**工具**，然后选择**单位对换器**。
- 2 选择要换算的内容：**币种**、**面积**、**长度**、**重量**、**温度**、**体积**或**速度**。
- 3 选择您要输入的测量单位。左右滚动可以选择单位，然后向下滚动以选择单位量。
- 4 选择您要换算的单位测量值。在下面的行中将自动显示换算值。

向世界时间添加城市

- 1 点触**菜单**，选择**工具**，然后选择**世界时钟**。
- 2 从上下左右四个方向在全球范围内导航，然后选择一个洲。
- 3 选择**放大**以放大一个区域，然后选择该区域中的城市。
- 4 按**确定**，然后选择**是**。

SIM 卡服务

此功能视 SIM 卡和网络服务而定。

如果 SIM 卡支持 SAT（即，SIM 卡应用程序套件）服务，则此菜单将是 SIM 卡上存储的运营商特定服务的名称。

01

02

03

04

05

06

07

08

浏览器

轻松使用浏览器，您可以在需要时随时获取新闻、天气预报以及体育或交通信息。此外，您还可以使用浏览器下载最新音乐、铃声、墙纸和游戏。

访问网页

- 1 按**菜单**，然后选择**浏览器**。
- 2 要直接访问浏览器主页，请选择**主页**。或者，选择**输入网址**并键入所需的 URL，然选择**连接**。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 按**菜单**，然后选择**浏览器**。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要添加一个书签，请选择**选项**，然后选择**新书签**。输入书签名称和 URL。
- 4 点触**保存**。现在，您添加的书签将显示在书签列表中。

- 5 要访问书签，只需滚动到所需书签，点触**连接**即可。您将被连接到书签页面。

保存页面

- 1 如上所述，访问所需网页。
- 2 选择**选项**，滚动到**保存**，然后选择**此页**。
- 3 选择**确定**。

访问保存的页面

- 1 按**菜单**，然后选择**浏览器**。
- 2 选择**保存的页面**。
- 3 选择所需页面，然后点触**打开**。

提示！ 使用此菜单，您还可以删除已保存的页面。

查看浏览器网页浏览记录

- 1 按**菜单**，然后选择**浏览器**。
- 2 选择**网页浏览记录**，然后选择**确定**。
- 3 此时将显示一个您最近访问过网页的标题列表。要访问其中一个网页，请滚动到所需页面，然后点触**连接**。

更改网络浏览器设置

- 1 按**菜单**，然后选择**浏览器**。
- 2 选择**设置**。
- 3 您可以选择浏览互联网时手机的处理方式、显示方式以及信息使用方式。您可以修改以下设置：**网络设定**、**透视图模式**、**缓存**、**Cookie**、**安全证书**、**显示图像**、**Java 脚本**和**保存位置**。
- 4 更改设置后，请选择**确认**。

01

02

03

04

05

06

07


08

设置

使用此文件夹，您可以调整设置以使 KC550 更具个性化。

备注：有关通话设置的信息，请参阅第 20 页。

更改情景模式

您可以在待机屏幕上快速更改情景模式。点触 ，然后点触您要激活的情景模式。从**标准**、**静音**、**仅振动**、**大声**和**耳机**中选择。

个性化情景模式

您可以个性化每种情景模式。

- 1 按**菜单**，然后选择**情景模式**。
- 2 选择所需情景模式，然后选择**个性化**。
- 3 对于**静音**和**仅振动**情景模式，您可以调整振动强度。对于其它情景模式，您可以更改列表中可用的所有声音和提示选项。（有关详细信息，请参考您的手机。）

更改日期和时间

您可以设置与日期和时间相关的功能。

- 1 按**菜单**，然后选择**设置**。
- 2 选择**日期和时间**，然后从以下列表中选择：

设置日期 - 您可以输入当前日期。

日期格式 - 您可以设置日期格式。

设置时间 - 您可以输入当前时间。

时间格式 - 您可以将时间格式设为 24 小时制或 12 小时制。

自动更新 - 选择开，手机将自动更新日期和时间。

更改语言

转到**设置**，选择**语言**以更改手机中任意文本的语言。此更改还将改变语言输入模式。

更改显示设置

- 1 按**菜单**，然后选择**设置**。
- 2 选择**显示**，然后从以下选项中选择：
 - 墙纸** - 选择要显示在屏幕上的墙纸。

时钟 - 选择以在待机屏幕上显示时间和日期。

背景灯时间 - 选择背景灯显示的持续时间。

提示! 背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。

亮度 - 调整屏幕亮度。

主屏快捷键 - 如图所示，选择“开”将在待机屏幕中间以图片形式显示 4 个导航键和菜单的快捷键。

字体大小 - 更改以下内容的字体大小：菜单、拨号和信息。

主题 - 快速更改屏幕整体外观。

菜单样式 - 将菜单视图从网格视图更改为列表视图，反之亦然。

菜单字体 - 调整字体类型。

拨号字体样式 - 调整您键入电话号码时显示的字体样式。

问候语 - 选择待机屏幕上的显示信息。

网络名称 - 选择是显示还是隐藏网络名称。

更改保密设置

更改保密设置以保护 KC550 及重要信息。

1 按**菜单**，然后选择**设置**。

2 选择**保安设置**，然后从列表中选择下列内容：

设置PIN码 - 选择开机时要请求的PIN 码。

手机锁 - 为以下选项选择安全码以锁定手机：**开机时**、**更换 SIM 卡时**或**立即**。

更改密码 - 更改您的**安全码**、**PIN1 码**或**PIN2 码**。

使用飞行模式

使用此功能，将飞行模式设为**开**或**关**。**飞行模式**被设为**开**时，您将无法拨打电话、连接互联网、发送信息或使用蓝牙。

01

02

03

04

05

06

07

08

设置

重设手机

使用**重设**将所有设置重置到其出厂设置。要启动此功能，您需要安全密码。

查看内存状态

KC550 有三种可用存储器：手机、SIM 卡和外部存储卡（您可能需要单独购买存储卡）。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

点触**菜单**，然后选择**设置**。选择**内存状态**，您将看到 KC550 中内存的当前状态（公用、预留、SIM 卡和外部存储器）。

提示! 有关**插入存储卡**的信息，请参阅第 12 页。

更改蓝牙设置

- 1 按**菜单**，选择**连接性**，然后选择**蓝牙**。
- 2 选择**蓝牙设置**。进行更改：

是否可见 - 选择是向其他人**显示**还是**隐藏**您的设备。

我的名称 - 为您的 KC550 输入一个名称。

我的地址 - 查看您的蓝牙地址。

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

按**菜单**，然后选择**连接**。选项包括：

蓝牙 - 设置 KC550 以使用蓝牙。您可以调整对其它设备的可见性，或搜索您可以与之配对的设备。

网络 - KC550 将自动连接到首选网络。要更改这些设置，请使用此菜单。您也可以使用此菜单添加新的接入点。

USB 连接 - 选择**数据服务**并使用 LG PC 套件软件同步 KC550 以复制手机中的文件。如果您已插入内存卡，请选择**大容量存储器**，以与插入 USB 记忆棒时使用手机的相同方式来使用手机。连接计算机，将文件拖放到 KC550 可移动设备文件夹。有关详细信息，请参阅第 47~48 页。

与其它蓝牙设备配对

要将您的 KC550 与其它设备匹配，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为**开且可见**。您可以在**蓝牙设置**菜单中更改可见性：选择**是否可见**，然后选择**可见**。
- 2 从蓝牙菜单中选择**设备列表**，然后选择**新建**。
- 3 KC550 将搜索设备。搜索完全**匹配**时，屏幕上将显示**刷新**。
- 4 选择您要与之配对的设备，选择**配对**，输入通行码，然后选择**确定**。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

使用蓝牙耳机

- 1 查看蓝牙是否为**开且可见**。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 KC550 将自动切换到“耳机”情景模式。

01

02

03

04

05

06

07

08

配件

这些配件随 KC550 提供。

充电器



数据线和 CD

在 KC550 和 PC 间建立连接并同步。



电池



用户手册

了解更多关于 KC550 的信息。

立体声耳机



备注

- 务必使用正品 LG 配件。否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

网络服务

本指南中描述的无线手机适用于 GSM 900、DCS 1800 和 PCS1900 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

技术参数

标准

产品名称: KC550

系统: GSM 900 / DCS 1800 /
PCS 1900

外部环境

最高温度: +55° C (放电)
+45° C (充电)

最低温度: -10° C

01

02

03

04

05

06

07

08

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KC550

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V 1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 -36-547-8940, Fax : +31-36-547-8794
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. March. 2008

Signature of representative

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息

此款 KC550 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为 2 W/Kg，平均值超过十 (10) 克薄纸。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.348 W/Kg (10克)，戴在身体上时，其值为 0.665 W/Kg (10克)。

- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/Kg，平均值超过一 (1) 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告!

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 如在特别环境的要求下，请关闭手机。如：请勿在未得到批准下在医疗仪器附近使用您的手机。
- 请勿以潮湿的双手对充电中的手机进行操作。

关于安全有效使用手机的准则

- 这可能会引致触电或造成手机严重损坏。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 切勿在柔软家具上为手机充电。
- 手机应在通风良好的环境中充电。
- 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。

- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正在进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向当地的服务提供商核准。

关于安全有效使用手机的准则

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
 - 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
 - 不要拆解电池组或将其短路。
 - 保持电池组的金属触点清洁。
 - 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
 - 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
 - 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
 - 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
 - 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
 - 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
 - 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。

English

■ KC550 ■ User Guide

Congratulations on your purchase of the advanced and compact KC550 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

01 SET UP		
Getting to know your phone	6	
Open view	7	
Installing the SIM and battery	8	
Memory card	11	
Installing a memory card	11	
Removing the memory card	11	
Formatting the memory card	11	
Menu map	12	
02 YOUR STANDBY SCREEN		
Your standby screen	13	
The quick keys	13	
The main menu	13	
The status bar	14	
03 THE BASICS		
Calls	15	
Making a call	15	
Making a call from your contacts	15	
Answering and rejecting a call	15	
Adjusting the call volume	16	
Speed dialling	16	
Viewing your call logs	16	
Using call divert	17	
Using call barring	17	
Changing the call settings	18	
Contacts	19	
Searching for a contact	19	
Adding a new contact	19	
Contact options	19	
Adding a contact to a group	20	
Renaming a group	20	
Adding a picture to a contact	20	
Copying your contacts to your SIM	21	
Deleting all your contacts	21	
Viewing information	21	
Messaging	22	
Messaging	22	
Sending a message	22	
Entering text	23	
Setting up your email	24	
Sending an email using your new account	25	
Message folders	25	
Managing your messages	26	
Using templates	26	
Changing your text message settings	27	
Changing your multimedia message settings	27	
Changing your email settings	28	
Changing your other settings	28	

04 GET CREATIVE		FM radio	39
Camera	29	Using the FM radio	39
Taking a quick photo.....	29	Searching for stations	39
After you've taken your photo.....	29	Resetting channels	39
Getting to know the viewfinder.....	30	Listening to the radio	39
Using the quick settings.....	30	Voice recorder	40
Using the flash	31	Using the voice recorder	40
Changing the image size.....	31	Recording your voice memo	40
Viewing your saved photos	32	Sending a voice recording.....	40
Setting a photo as Wallpaper		Using the muvee studio	40
or Picture ID.....	32	My stuff	41
Video camera	33	Images.....	41
Shooting a quick video.....	33	Images options menu.....	41
After you've shot your video	33	Sending a photo	42
Getting to know the viewfinder.....	34	Organising your images	42
Using the quick settings.....	34	Deleting an image	42
Watching your saved videos	35	Deleting multiple images.....	42
Adjusting the volume when		Creating a slide show.....	43
viewing a video.....	35	Sounds	43
MP3 player	36	Using a sound	43
MP3 player	36	Videos	43
Transferring music onto your phone.....	36	Watching a video.....	43
Playing a song.....	36	Using options while video is paused	44
Using options while playing music.....	36	Sending a video clip.....	44
Creating a playlist.....	37	Video options menu	44
Playing a playlist.....	37	Documents.....	45
Editing a playlist	37	Viewing a document	45
Deleting a playlist	38	Others	45

Contents

External memory	45	06 BROWSER	
Using your phone as a mass storage device.....	45	Browser	53
Transferring a file to your phone	46	Accessing the web.....	53
Sending and receiving your files using Bluetooth	47	Adding and accessing your bookmarks.....	53
Games and Apps	48	Saving a page	54
Games and Apps	48	Accessing a saved page.....	54
Playing a game.....	48	Viewing your browser history	54
Viewing applications	48	Changing the web browser settings	54
Changing the network profile.....	48	07 SETTINGS	
M-Toy	48	Settings	55
05 GET ORGANISED		Changing your profiles	55
Organiser	49	Personalising your profiles.....	55
Adding an event to your calendar	49	Changing your date & time.....	55
Editing a calendar event.....	49	Changing the language	55
Sharing a calendar event.....	50	Changing your display settings	55
Adding a memo	50	Changing your security settings	56
Tools	51	Using flight mode.....	56
Setting your alarm	51	Resetting your phone	57
Using your calculator	51	Viewing memory status.....	57
Using the stopwatch	51	Changing your Bluetooth settings.....	57
Converting a unit	52	Changing your connectivity settings	57
Adding a city to your world clock	52	Pairing with another Bluetooth device	58
SIM services.....	52	Using a Bluetooth headset.....	58

08 ACCESSORIES

Accessories 59

Network service..... 60

Technical data 60


 General 60

 Ambient Temperatures 60

Guidelines for safe and efficient use 62

Getting to know your phone

Main screen

Clear key 

Deletes a character with each press. Use this key to go back to the previous screen.

Call key 

Dials a phone number and answers incoming calls.




Charger, cable, handsfree connector



Memory card slot

Volume key


Camera

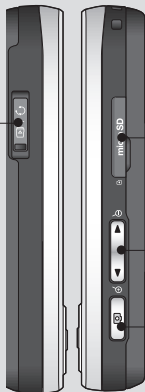

End/Power key 

Ends or rejects a call.
Turns the phone on/off.
Returns to the standby screen when you use the menu.

Open view

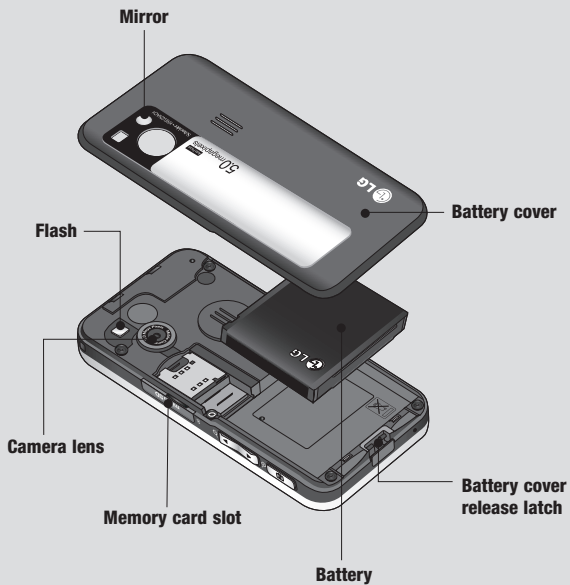

01

02

03

04

05

06

07

08

Installing the SIM and battery


1 Remove the battery cover

Press the battery cover release latch. The battery cover should lift off easily.



2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

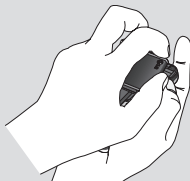


⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the SIM card


Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.

⚠ WARNING: Do not insert the SIM card when the slide is open, as this may damage your phone and SIM card.

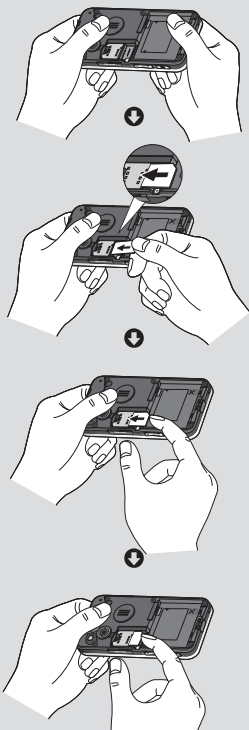

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

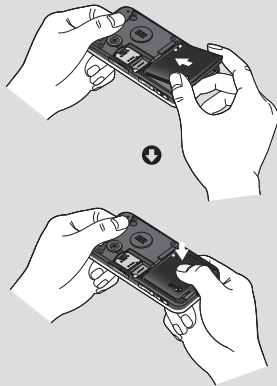

01

02

03

04

05

06


07

08

Installing the SIM and battery

5 Replace the battery cover


Slide the battery cover towards the top of the phone until it clicks into place.

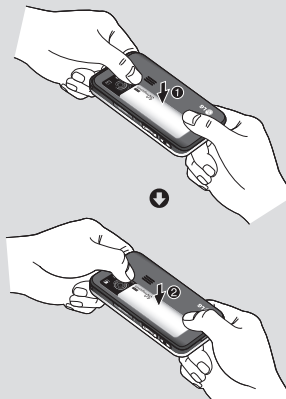

6 Charging your phone

Pull open the cover of the charger socket on the side of your KC550. Insert the charger and plug into a mains electricity socket. Your KC550 will need to be charged until a message reading Fully Charged appears on screen.

⚠ WARNING: Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.

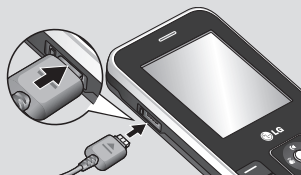


Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card. The KC550 will support a memory card of up to 2 GB.


TIP! A memory card is an optional accessory.

Open the slide covering the memory card slot. Slide the memory card into the slot, until it clicks into place. Make sure that the gold contact area is facing downwards.

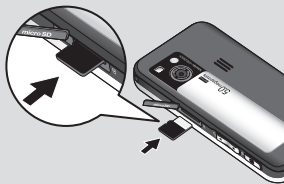

Removing the memory card

Open the slide and carefully remove the memory card by gently pushing it as shown in the following diagram:

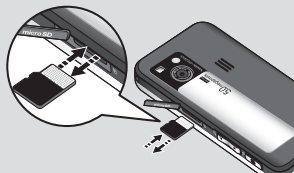

Formatting the memory card

If your memory card is not already formatted, you will need to do so before you can begin using it.

- 1 From the standby screen press **Menu** and select **Settings**.
- 2 Choose **Memory status** and select **External memory**.
- 3 Do **Format** and enter the password, which is set to 0000 as default. Your card will be formatted and ready to use.
- 4 To view the new formatted folders on your KC550 press **Menu** and select **My stuff**. Choose **External memory**.

⚠ WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

01

02

03

04

05

06

07

08

Menu map



Games & Apps

- 1 M-toy
- 2 Games
- 3 Applications
- 4 Network profile



Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



Organiser

- 1 Calendar
- 2 Memo



Multimedia

- 1 MP3 player
- 2 Camera
- 3 Video camera
- 4 FM radio
- 5 Voice recorder
- 6 Muvee studio



Messaging

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Drafts
- 5 Outbox
- 6 Sent
- 7 Listen to voicemail
- 8 Info message
- 9 Templates
- 0 Settings



My stuff

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Documents
- 5 Others
- 6 External memory



Profiles

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



Tools

- 1 Alarm clock
- 2 Calculator
- 3 Stopwatch
- 4 Unit converter
- 5 World clock
- 6 SIM services



Browser

- 1 Home
- 2 Bookmarks
- 3 Enter address
- 4 History
- 5 Saved pages
- 6 Settings
- 7 Information



Connectivity

- 1 Bluetooth
- 2 Network
- 3 USB connection
- 4 TV out







Settings

- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Call
- 5 Security
- 6 Flight mode
- 7 Reset
- 8 Memory status

Your standby screen

The quick keys

The quick keys provide easy, one-press access to your most used functions.

-  Select to open your message editor.
-  Select to choose a sound profile for your phone.
-  Select to open the favourites menu.
-  Select to play MP3 file.

The main menu

The main menu provides twelve menu options. To open the main menu:

- 1 Select **Menu**.
- 2 The main menu will appear on the screen.
- 3 When the option you require is highlighted, select **OK** to open.

01

02

03

04

05

06

07

08

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as shown in the figure below.













Please do not cover the antenna area with your hand during a call or when using a Bluetooth connection. It may interfere and degrade signal quality.











Your standby screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth is active.




Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	GPRS available
	EDGE available
	Flight mode is activated
	Calls are diverted
	Roaming service
	Bluetooth® is activated
	WAP service is connected
	An alarm is set

Icon	Description
	Schedule
	New message
	New voice message
	General profile in use
	Silent profile in use
	Vibrate profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty


Calls

Making a call


- 1 Key in the number using the keypad. To delete a digit press .
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold **0**.

Making a call from your contacts

- 1 Select **Contacts** from the Standby screen & then select Search.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 Select **Call** or press  to initiate the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways.

Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Slide open**, **Any key** or **Send key only**.

01

02

03

04

05

06

07

08

Calls


Adjusting the call volume

To adjust the volume during a call, press the volume key on the right hand side of your phone.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Contacts**, then select **Speed dials**.
- 2 Your voicemail is set to speed dial 1 and you cannot change this. Select any other number either by using the navigation key arrows and selecting **Assign** or by pressing the hard key number.
- 3 Your address book will open. Select the contact you'd like to assign to that number using the navigation arrows, then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically; there's no need to press .

Viewing your call logs

Press **Menu**, select **Call history**. Choose to view:

All calls - View a complete list of all your dialled, received and missed calls.

Missed calls - View a list of any calls you have missed.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Call duration - View details of how long you have spent on your calls; received and dialled.

Call costs - View the charges applied to your Last call or All calls. This service is network dependent, some operators are unable to support this.

Data information - View the amount of all your received and sent data in bytes.

TIP! From any call log select **Options** and choose **Delete** to delete selected or all of the recorded items.

TIP! Using the navigation key arrows, highlight any single call entry to view the date and time of the call. To view the call duration select **View**.

Using call divert

- 1 Select **Menu**, select **Settings** and choose **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no reply, when you are out of reach, all data calls or all fax calls.
- 4 Choose **Activate** and select whether to divert to voicemail, another number or your favourite number.
- 5 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Cancel all** from the **Call divert** menu.

Using call barring

- 1 Select **Menu**, select **Settings** and choose **Call**.
- 2 Select **Call barring**.
- 3 Choose any or all of the seven options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international except home country**
 - All incoming**
 - Incoming when abroad**
 - Cancel all barrings**
 - Change password**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** from the **Call** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

01

02

03

04

05

06

07

08

Calls

Changing the call settings

1 Select **Menu**, select **Settings** and choose **Call**.

2 From here you can amend the settings for:

Call divert - Choose whether to divert your calls.

Call barring - Select which calls you would like to be barred.

Fixed dial number - Choose a list of numbers that can be called from your phone.

Answer mode - Choose whether to answer the phone using the send key, any key or by sliding your handset open.

Send my number - Choose whether your number will be displayed when you call someone.

Call waiting - Be alerted when you have a call waiting.

Minute minder - Select **On** to hear a tone every minute during a call.

Auto redial - Choose **On** or **Off**.

Send DTMF tones - Choose **On** or **Off**.

Contacts

Searching for a contact

- 1 Select **Contacts** from the standby screen, and choose **Search**.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 To scroll through the contacts and their different numbers use the navigation arrows.

Adding a new contact

- 1 Select **Contacts** and choose **New contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

Or, using the slightly quicker method...

- 1 Enter the number you wish to store on the standby screen and select **Options**.
- 2 Choose **Save** or **Add to existing contact**.
- 3 Enter the relevant information as above and select **Save**.

Note: When you are storing a contact's email address, press ***..*** to enter a symbol and scroll with the navigation arrows until you see **@**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the Options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** above.
- 2 Select **Options** to open the list of options.

From here you can:

Edit - Change any of the contact's details.

New message - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

Send via - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Bluetooth** or by **Email**.

Delete - Delete the contact. Select **Yes** if you are sure.

New contact - Add a new contact.

Multi delete - Mark multiple contacts to delete.

01

02

03

04

05

06

07

08

Contacts

Copy to SIM/phone - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleague**, **VIP**, **Group1** and **Group2** already set up on the phone.

- 1 Select **Contacts** and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **View** then select **Add**.
- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and press , then select **Done**.
- 4 Select **Yes** if you are sure.

TIP! You can assign a ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to and select **Options** and choose an item you want.

Renaming a group

You can rename any of the groups to fit your lifestyle.

- 1 Select **Contacts** and choose **Groups**.
- 2 Select a group you want to rename.
- 3 Choose **Options**, select **Rename** and enter your new group name.
- 4 Select **Save**.

Note: You can only assign a contact to a group or add a picture to a contact that is saved in your phone (not SIM) memory.

Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 Select **Contacts** and choose **Settings**.
- 2 Select **View options** and choose **With picture**.
- 3 Then return to the address book and select the contact you want to add a picture to.
- 4 Choose **Options** and select **Edit**.

- 5 Scroll down to the **Photo** section and select **Edit**. Choose **Options** and select **Images** or **New image**. If you select **Images**, you can choose an image that is saved in your phone memory. If you select **New image**, your camera viewfinder will open, so you can take a picture of your contact.
- 6 Select **Save**.

Copying your contacts to your SIM

You can also choose to copy your contacts from your SIM to your handset or from your handset to your SIM.

- 1 Select **Contacts** and choose **Copy All**.
- 2 Select to copy the contacts from **SIM to phone** or **Phone to SIM**.
- 3 Choose whether to **Keep original** or **Delete original**.
- 4 Select **Yes** if you are sure.

Deleting all your contacts

- 1 Select **Contacts** and choose **Delete all**.
- 2 Select to delete contacts from **SIM** or **Phone**.
- 3 Select **Yes** if you are sure.

- 4 Enter the password, which is set to 0000 as default, and select **OK**.

Viewing information

Select **Contacts** and choose **Information**. From here you can view your **Service dial numbers**, your **Own numbers** and your **Business card**.

TIP! If you haven't yet created a business card, the **Business card** screen will give you the option to create one. Select **New** and enter your details as you would for any contact. Choose **Save**.

01

02

03

04

05

06

07

08

Messaging

Messaging

Your KC550 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) and email, as well as the network's service messages. Simply press

Menu and select **Messaging**.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **Message** to send an SMS or MMS. (If you want to send an **Email** see page 24-25 or if you want to send something using **Bluetooth**, see page 47.)
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using either the T9 predictive mode or Abc manual mode. See **Entering text** on page 23 to see how to switch between the different text entry modes.

- 5 Select **Options** and choose **Insert** to add an **Image, Sound, Video, Symbol, Text template, Emoticon, Name & Number, New slide, Subject** or **More (Contact/My business card/Schedule)**.
- 6 Press the centre key **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Select **Send**.



WARNING: If an **Image, Sound, Video, New slide** or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

To turn on T9 mode in the text entry field, choose **Options**, select **Set T9** and choose **On**. With T9 on, you can switch text input mode by pressing **#*0**. You will notice the text input mode indicator in the upper right corner of the display.

To input a symbol in the text entry field, press the ***0*** key and select a symbol, then select **OK**.

Complete each word with a space by pressing **0**.

To delete a character, press **C** key.

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press **8, 3, 5, 3, 7, 4, 6, 6, 3** to write 'telephone'.

If the word you want doesn't appear, select **Options** and select **New T9 word**, then you can enter the word using ABC manual mode. Your word will be added to the dictionary.

Note: You can select a different T9 language by pressing **Options** and select **Writing language**.

ABC manual mode

In ABC manual mode you may need to press the key repeatedly to enter a letter. For example, to write 'hello', press **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

123 mode

Type numbers using one keystroke per number. You can also add numbers whilst in letter modes by pressing and holding the desired key.

01

02

03

04

05

06

07

08

Messaging

Setting up your email

You can stay in press on the move using email on your KC550. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu**, select **Messaging** and choose **Settings**.
- 2 Select **Email** then **Email account**.
- 3 Select **New**.
- 4 You can now choose how your account works:
 - Account name** - Enter a name for this account.
 - Email address** - Enter the account email address.
 - My name** - Enter your name.
 - Incoming mail server** - Enter the account details.
 - User name** - Enter the account user name.
 - Password** - Enter the account password.
 - Outgoing mail server** - Enter the account details.
 - Outgoing mail authentication** - Select on or off.
 - Outgoing server ID** - Enter the account details.
 - Outgoing server password** - Enter the account details.

To enter the following information, choose **Options** and select **Advanced settings**.

Protocol type - Select the mailbox type, POP3 or IMAP4.

Maximum receive size - Choose the size limit of your emails, the maximum is 300KB.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

APOP secure login - Choose whether to save your emails to the server of the phone (only for IMAP4).

Insert signature - Choose whether to automatically insert a signature in your emails.

Reply email address - Enter the "reply to" email address.

Incoming port number - Normally, this is 110 for POP3 and 143 for IMAP4 accounts.

Outgoing port number - Normally this is 25.

Auto retrieving - Select to automatically retrieve your emails.

Retrieve download - Select **Headers only**, **Headers + body** (only for IMAP4) or **All**.

Now your account is set up, it will appear in the list of accounts in your Email folder.

Sending an email using your new account

To send/receive an email, you should set up an email account (see page 24).

- 1 Select **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **Email** and a new email will open.
- 3 Write a subject then press OK.
- 4 Enter your message using T9 predictive mode or ABC manual mode. See **Entering text** on page 23 to see how to switch between the different text entry modes.
- 5 Select **Options** and choose an attachment to add: **Image, Sound, Video, Document, Contact, My business card** or **Schedule**.
- 6 Press **Send** and enter the recipient's address or press **Options** and select **Contacts** to open your contacts list.
- 7 Press **Send** and your email will be sent.

Message folders

Press **Menu**, select **Messaging**. The folder structure used on your KC550 is fairly self-explanatory.

Inbox - All the messages you receive are placed into your Inbox. From here you can reply, forward and more, see below for details.

Email box - Contains all your email messages. Select the account you want to use then select **Retrieve**. Your KC550 will connect to your email account and retrieve your new messages.

Drafts - If you don't have time to finish writing a message, you can save what you have done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent - All the messages you send are placed into your Sent folder.

Listen to voicemail - You can access your voicemail box (if provided by your network). When a new voice message is received, the symbol will be displayed on the standby screen.

Info message - All info messages and updates received from your operator.

Templates - A list of useful messages, already written for a quick reply.

01

02

03

04

05

06


07

08

Messaging

Managing your messages

You can use your **Inbox** to manage your messages.

- 1 Press **Menu**, select **Messaging** and choose **Inbox**. Or, a quicker way is to select  on the standby screen.
- 2 Select **Options** and then choose to:
 - Delete** - Delete the selected message.
 - Reply** - Send a reply to the selected message.
 - Forward** - Send the selected message on to another person.
 - Return call** - Call the person who sent you the message.
 - Information** - View the details of a message, for example, the time it was sent.
 - Copy/Move** - Choose to copy or move the selected message to the SIM card or phone.
 - Multi delete** - Delete selected messages.
 - Delete all read** - All opened messages will be deleted.
 - Delete all** - Delete text messages, multimedia messages or all messages.

If you see the message **No space for SIM message**, you should delete some messages from your inbox.

If you see the message **No space for messages**, you can delete either messages or saved files to create space.

Using templates

You can create templates for the **Text** and **Multimedia** messages you send most frequently. There are some templates already on your phone, which can be edited if you wish.

- 1 Press **Menu**, select **Messaging** and choose **Templates**.
- 2 Choose **Text** or **Multimedia**. You can then select **Options** and choose **Edit** to change existing templates, to add **New template** or to **Delete** templates.
- 3 To send a template, select the one you want to send, choose **Options** and select **Send via**.
- 4 Choose how you would like to send the template; as a **Message**, **Bluetooth message** or **Email**.
- 5 Select a contact and select **Send**.

Changing your text message settings

Your KC550 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do this using the **Settings** options.

Press **Menu**, select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

Message types - Convert your text into Voice, Fax, Paging, X.400, Email or ERMES.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Reply charging - Choose to be billed for your message recipient's reply.

Message centre number - Enter the details for your message centre.

Character encoding - Choose how your characters are encoded. This impacts the size of your message and therefore data charges.

Send long text as - Choose whether to send your message as SMS or MMS when you enter a text longer than 2 pages in the message field.

Bearer setting - Choose whether to send your messages via GSM or GPRS.

Changing your multimedia message settings

Your KC550 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do so using the **Settings** options.

Press **Menu**, select **Messaging**, then choose **Settings** and **Multimedia message**.

You can make changes to:

Slide duration - Choose how long your slides appear on screen.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to allow and/or request a delivery report.

01

02

03

04

05

06

07

08

Messaging

Read report - Choose to allow and/or Request a read report.

Auto download - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

Network profile - Select an operator specific network profile for sending multimedia messages.

Permitted message type - Select which type of multimedia messages to allow.

Changing your email settings

You can adapt your email settings to your own preferences.

- 1 Press **Menu**, select **Messaging** and choose **Settings**.
- 2 Select **Email** then you can adapt the following settings:

Email account - You can set up an email account.

Access point - You can set the email access point.

Retrieve interval - Choose how often your KC550 checks for new email messages.

Signature - Create an email signature and switch this feature on.

Changing your other settings

Press **Menu**, select **Messaging**, choose **Settings** then:

Voicemail number - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.

Service message - Here you can switch off service message, which means your messages will no longer be pushed directly to your device as they are received, only when you check for new messages.

Info message - Choose the reception status, alerts and language of your info messages.

Save text message - Choose whether to save your text messages to the phone memory or to the external memory.

Camera

Taking a quick photo

- 1 Open the lens cover and hold the camera key down on the right side of the handset. The camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press the camera key halfway. A focus box will appear in the centre of the viewfinder screen. Position the phone so you can see the subject of your photo in the focus box. When the focus box turns green, the camera has focused on your subject.
- 4 Press the centre soft key or press the camera key all the way down to take a photo.

Note: You can also access the camera menu from the standby screen. press **Menu** and select **Multimedia**, scroll down to and select **Camera** to open the viewfinder.

After you've taken your photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen and you will see six options displayed on the right side of the screen.

Delete - Delete the photo you have just taken and confirm by pressing **Yes**. The viewfinder will reappear.



New image - Take another photo straightaway. Your current photo will be saved.



Set as - Select to open a sub menu to set your image as **Wallpaper** or **Picture ID**.



Send via - Select to send the photo as a **Multimedia message** or **Email**. See page 22 for **Sending a message**.



Album - Select to look at the other photos in your album. Your current photo will be saved. See page 32 for **Viewing your saved photos**.

OK - Select to take another photo straightaway. Your current photo will be saved.

01

02

03

04

05

06


07

08

Camera

Getting to know the viewfinder

Note: You can adjust the zoom using the volume key on the left side of the phone. The zoom function is only available when the resolution is set to 640 x 480 or below. See **Changing the image size** on page 31 for details.

TIP! When using the camera, power consumption increases. If  icon appears indicating low battery, recharge the battery before use.

Using the quick settings

Select **Options** to access the quick settings options. These include various options for taking photos.

Self timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from 3 seconds, 5 seconds or 10 seconds. Great for that group photo you want to be part of.

Continuous shot - This enables you to take up to 9 shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

White balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy** or **Fluorescent**.

Colour effect - Choose from four colour tone options: Off (normal/colour), Sepia, Mono (black and white) or Negative.

EV - Turn macro mode on if you are taking a picture very close to the image subject.

Resolution - See **Changing the image size** on page 31.

Quality - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality the sharper a photo will be but the file size will increase as a result, which means you will be able to store fewer photos in your memory.

Auto focus - Turn Auto focus On or Off. Your camera can automatically adjust the focus for a clear, sharp image with a single press of the camera button.

Shutter tone - Select one of the three shutter sounds.


ISO - Set the ISO to Auto, ISO 800, ISO 400, ISO200, ISO 100 or ISO 80.

Save to - Choose whether to save your photos to the phone memory or to the external memory.

Reset settings - Choose **Yes** to reset your phone to its original camera settings.

Using the flash

The flash is set to **Off** as default, but there are other options.

1 Select  on the navigation key.

2 There are four flash options:

Off - The camera will not flash. This is useful if you want to save battery power.

Auto - Your camera will assess the lighting needed to take a good picture and use the flash as necessary.

Always on - Set the flash to on when you are taking a photo in a dark place.

When Taking - The flash will remain on as you compose your picture and flash again as you take the photo in order to reduce red eye.

3 Select the flash option you'd like to use.

4 When you have made your selection the flash menu will automatically close, ready for you to take your picture.

5 The flash icon in the viewfinder will change according to your new flash mode.

Note: When you exit the camera, the flash setting will revert to the default **Auto** mode.

Changing the image size

You can change the size of the photo to save memory space. The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

1 Press **Options** and select **Resolution** from the toolbar.

2 Select a pixel value from the six numerical options (320X240, 640X480, 1280X960, 1600X1200, 2048X1536, 2560X1920).

3 Press **OK** to implement your changes.

Note: The zoom function varies depending on the resolution the camera is set to. The zoom function is only available when the resolution is set to 640 x 480 or below.

01

02

03

04

05


06

07

08

Camera

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply select  on the navigation key. From the standby screen you should select **Menu**, then select **My stuff** and **Images**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the photo you want to view and select **View** to enlarge it.

Setting a photo as Wallpaper or Picture ID

From your image gallery, use the navigation keys to select an image and choose **Options** and **Set as** to use the selected image as **Wallpaper** or **Picture ID** for one of your contacts.

Note: Picture ID can only be added to contacts saved to your phone, not your SIM.

Video camera

Shooting a quick video


- 1 Open the lens cover and hold the camera key down on the right side of the handset. The camera's viewfinder will appear on screen.
- 2 Choose **Video** on the top right corner of the screen. The video camera's viewfinder will appear on screen.
- 3 Point the camera lens towards the subject of the video.
- 4 Press the camera key on the right side of the handset to start recording.
- 5 **REC** will appear in the bottom left corner of the viewfinder and a timer will show the length of your video.
- 6 To pause the video select **Pause** and resume by selecting **Resume**.
- 7 Select **Stop** to stop recording.


Note: You can also access the **Video camera** from the standby screen. Select **Menu** and select **Multimedia**, scroll down and select **Video camera** to open the viewfinder.

After you've shot your video


The name of the video runs along the bottom of the screen and six options will be displayed on the right side of the screen.

Delete - Delete the video you have just recorded and confirm by selecting Yes. The viewfinder will reappear.

 **New video** - Select to shoot another video straight away. Your current video will be saved.

 **Play** - Select to play the video you have just recorded.

 **Send via** - Select to send the video as a **Multimedia message** or **Email**. See page 22 for **Sending a message**.

 **Album** - Select to look at the other video clips in your album. Your current video clip will be saved. See page 35 for **Watching your saved videos**.

OK - Select to record another video straight away. Your current video will be saved.

01

02

03

04

05

06

07

08

Video camera

Getting to know the viewfinder

Note: You can adjust the zoom using the volume key on the left side of the phone.

Using the quick settings

Select **Options** to access the quick settings options. These include various options for recording videos.

Mode - To record a video you want to send in a multimedia message, select **MMS**.

Colour effect - Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Mono** (black and white) or **Negative**.

Brightness - Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper. Use the navigation keys to slide the contrast indicator along the bar, towards - for a lower contrast, hazier image or towards + for a higher contrast, sharper image.

Resolution - If you want to fit more videos onto your phone you can alter the pixel number to make the file size smaller. Choose between four options for your video, 176X144, 320X240, 640X480, 720X480.

Quality - Super fine/ Fine/ Normal.

Save to - Choose whether to save your video clip to the phone memory or to the external memory.

Flash - Turn the flash **On** or **Off**. The flash is set to **Off** as default, saving battery power. Whenever you exit the camera it will return to the default **Off** setting.

White balance - The white balance ensures that any white in your video is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy**, **Fluorescent** or **Night mode**.

Album - View all of your images.

Reset settings - Choose **Yes** to reset your phone to it's original video camera settings.

Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the Options menu select **Album**. From the standby screen you should press **Menu**, then select **My stuff** and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the video you want to view and press the centre soft key to watch it.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the volume keys on the right side of the handset.

01

02

03

04

05

06


07

08

MP3 player

MP3 player

Your LG KC550 has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, press  from the standby screen, or select **Menu** and select **Multimedia** then **MP3 player**. From here you have access to:

All songs - Contains all of the songs you have on your phone.

My playlist - Contains any playlists you have created as well as **On the go**, **Recent songs** and **Favourite songs**.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Settings - Adjust your music settings.






Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.

- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

Playing a song

- 1 Press **Menu** and select **Multimedia**, then choose **MP3 player**, or press  from the standby screen.
- 2 Choose **All songs** then select the song you want to play. Select .
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select  to stop the music and return to the MP3 player menu.

TIP! To change the volume while listening to music, use the volume keys on the side of your phone.

Using options while playing music

Select **Options** and choose from:

Minimise - Hide the music player screen so that you can continue using your phone as normal while music is playing.

View playlist - Look at the playlist you are currently listening to.

Add to playlist - Adds the current track to a playlist.

Set as - Set the current track as your **Ringtone** or **Message tone**.

Information - You can view information about the MP3 file you are listening to.

Settings - Change the Shuffle, Repeat, or Equalizer settings.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Press **Options** and select **New playlist**, enter the playlist name and press **Save**.
- 4 The **New playlist** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting .
- 5 Select **Save** to store the playlist.

Playing a playlist

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Select the playlist you would like to play and select **View**, then select **▶**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

If you want to organise your playlists, you can edit them using the **Options** menu.

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to edit and select **View**, then select **Options**. Choose from:

Add - You can add songs to the playlist using this option.

Remove - Remove a song from the playlist. Select **Yes** to confirm.

Multi remove - Delete selected songs from the playlist.

01

02

03

04

05

06

07

08

MP3 player

Remove all - Remove all of the songs from the playlist.

Information - View the playlist information.

Deleting a playlist

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete all** and select **Yes** to confirm.

Note:

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

FM radio

Using the FM radio

Your LG KC550 has an FM radio feature so you can tune into your favourite stations to listen on the move.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 12 channels in your phone.

To auto tune:

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and choose **Auto scan** then select **Yes**.
- 3 Each time a station is found, your KC550 will ask if you want to save it. Select **Yes** if you want to store the channel and **No** if you don't. Any stations you choose to save will automatically be allocated to a channel number in your phone.

To manually tune:

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select a channel number that you want to save a station to and choose **Edit**.
- 3 To enter your station, use the navigation keys to search or enter the frequency using the keypad, then select **Save**.

Note: You can also edit the stations you have saved in a channel number.

TIP! To improve the reception extend the headset cord, which functions as the radio antenna.

Resetting channels

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and select **Reset channels**. Choose **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

Note: You can listen to the radio via a built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.

01

02

03

04

05

06

07



08

Voice recorder

Using the voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Multimedia**, then choose **Voice recorder**.
- 2 Press  to begin recording.
- 3 Select **Pause** to pause the recording.
- 4 Choose **Stop** to end the recording.
- 5 Select  to listen to the recording.

Note: You can listen to all of the voice recordings you have saved by selecting **Album**.

Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

TIP! If you plan to send your recording as a message, before you start recording, select **Options**, select **Recording mode** and choose **MMS**. This will ensure that the recording fits into a message.

Using the muvee studio

The Muvee studio allows you to create an image slide show combined with music.

- 1 Press **Menu** and select **Multimedia**, then choose **Muvee studio**.
- 2 Choose the music track that you would like to use.
- 3 Mark the images that you would like to use in your slide show, and choose **Done**.
- 4 The new muvee will begin to play. To save your slide show press **Save**.

Note: You can use the Options menu to choose where to save your slide show (Phone or External memory), the duration mode (General or MMS) and the play order (Random or Sequential).

My stuff

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

All your multimedia files will be saved in **My stuff**. Select **Menu** then select **My stuff** to open a list of folders.

Images

Images contains a folder of default images and default flash files pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera. Only the **View**, **Set as**, **File info**, **Slide show**, **Sort by** and **List view / Thumbnail view** options are available for default images.

In the **Images** folder, select **Options** to bring up your list of options.

Delete - Delete the selected image.

Set as - Set the selected image as your **Wallpaper** or as a **Picture ID**.

Send via - Send the selected image to a friend via **Multimedia message**, **Bluetooth** or **Email**.

Note: The image may need to be resized before it can be sent by MMS.

File - Rename, make animation or view the information (Name, Size, Date, Time, Resolution, Type and Copyright) of the selected image. If you have an external memory card inserted two additional options will show: **Move to external memory** and **Copy to external memory**.

Print via - Print an image file via **Bluetooth** or **Pictbridge**.

Slide show - See **Creating a slide show** on page 43.

New folder - Create a new folder within the main Images folder.

Mark/Unmark - Select more than one image to delete.

Delete all - Delete all the photos in your Images folder.

01

02

03

04

05

06

07

08

My stuff

Sort by - Arrange your images by **Date**, **Type** or **Name**.

List view / Thumbnail view - Change the way you view your photos.

Sending a photo

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**.
- 5 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Organising your images

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** then select **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

Deleting an image

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select an image and press **Options**.
- 4 Select **Delete**.

Deleting multiple images

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** and select **Mark/Unmark** and **Delete**.
- 4 A box will appear next to each image. Select each image and select to mark it. To unmark an image, select again so that the tick disappears from the box. Or, you can select **Options** then choose **Mark all** or **Unmark all**.
- 5 Once you have marked all of the appropriate boxes, select **Delete** and confirm you want to delete all of the marked images.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select the photo you would like to begin the slide show and select **Options**.
- 4 Choose **Slide show** and it will begin.
- 5 Press **Pause** to pause the slide show and **Quit** to end the slide show and return to the **Images** folder.

Selecting **Options** during the slide show presents further options:

View - Choose between **Full image** and **Full screen**. Select **Landscape** to change the orientation of the image.

Repeat on / off - Decide whether you want the slide show on repeat or not.

Sounds

The **Sounds** folder contains the **Default sounds**, your voice recordings and sound files downloaded by you. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Sounds**.
- 3 Select **Default sounds** or choose from the list of voice recording files.
- 4 Select a sound and press ► to listen to it.
- 5 Select **Options**, select **Set as** and choose from **Ringtone**, **Ringtone ID** and **Message tone**.

Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select a video and press ►.

01

02

03

04

05

06

07

08

My stuff

Using options while video is paused

By selecting **Options**, the video you are playing will be in pause mode and you can choose from:

Delete - Delete the video.

Send via - Send the video to a friend via **Multimedia message, Bluetooth** or **Email**.

Information - View the Name, Size, Date, Time, Type and Copyright details of the selected file.

Sending a video clip

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select the video clip you want and press **Options**.
- 4 Press **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 5 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Note: The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all.

Video options menu

In the **Videos** folder, press **Options** to bring up the following list of options.

Delete - Delete the selected video.

Send via - Send the selected video to a friend via **Multimedia message, Email** or **Bluetooth**.

File - Rename the video or view the information (Name, Size, Date, Time, Type and Copyright). If you have an external memory card inserted two additional options will show:

Move to external memory and **Copy to external memory**.

New folder - Create a new folder within the main Videos folder.

Mark/Unmark - Select more than one video clip before selecting **Delete**.

Delete all - Delete all the clips in your Videos folder.

Sort by - Arrange your videos by **Date, Type** or **Name**.

Auto next play - Allows to set the play mode: **Off**, **Repeat once** and **Repeat all**.

- **Off**: Plays the selected file.
- **Repeat once**: Plays all files in a list once.
- **Repeat all**: Continues to play all files in a list repeatedly.

List view / Thumbnail view - Change the way you view your videos.

Documents

From the **Documents** menu, you can view Excel, PowerPoint, Word, Text and PDF files.

Viewing a document

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Documents**.
- 3 Select a document and press **View**.

Others

From the **Others** menu, you can view the files which are not saved in the Images, Sounds, Videos or Documents folders.

You may find that when you transfer files from your computer to your phone, they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To move a file from **Others** to **Documents**:

- 1 Press **Menu**, then select **My stuff** followed by **Others**.
- 2 Select a file and select **Options**.
- 3 Press **Move**, then select **Move** again.

External memory

If you've inserted a memory card it will be displayed as a folder within **My stuff**. Your external memory folder will be divided into five further folders: **Images**, **Sounds**, **Videos**, **Documents** and **Others**. Each folder will contain all the files of that type which are saved to your memory card rather than your handset.

Using your phone as a mass storage device

Your KC550 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. If you've inserted a memory card, when connecting as **Mass storage**, the phone will be displayed as two drives on your computer: the handset memory and external memory.

01

02

03

04

05

06

07

08

My stuff

- 1 Press **Menu**, select **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and select **OK**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the KC550. Plug the larger end into the USB port of your computer.
- 5 A removable disk folder will open automatically on your computer, two if you have a memory card inserted, showing all the folders on your phone or memory card.
- 6 Drag and drop your images, videos, music or documents into the correct folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.
- 8 When you want to then access a file, for example an image, press **Menu**, then select **My stuff** followed by **External memory** then **Images**. All the images you transfer will be contained in this file.

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on its type. So for example, photographs will be saved in the **Images** folder and music in the **Sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

Note: Files sent using Bluetooth will be saved to the phone memory.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device** on page 58.

To switch Bluetooth on:

- 1 Press **Menu** and select **Connectivity**, then choose **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.

- 4 Your KC550 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to then pair the selected device and select **Send**.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** on page 57 for more information.
- 2 A message will prompt you to accept the file from the sender. select **Yes** to receive the file.

TIP! Keep an eye on the progress bar to make sure your file is sent.

Note The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

01

02

03

04

05

06

07

08

Games and Apps

Games and Apps

Your KC550 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Playing a game

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Games**.
- 3 Choose the game you want to play and select **Play**.

Viewing applications

You can manage the Java applications installed in your phone by using the **Applications** menu. You can also delete downloaded applications.

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Applications**.
- 3 View and manage any applications you have.

Changing the network profile

To download a game, you can set the value to connect to the network using **Network profile**.

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Network profile**.
- 3 You can add and edit a new network profile.

M-Toy

You can enjoy six default games including: **Dart, Homerun Derby, Magic Ball, Hammer, Maze, Fishing**.

About - View the information for a game.

Setting - Set the sound and vibration when activating a game.

Reset data - Reset all settings.

Exit - End a game.

Organiser

Adding an event to your calendar

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **New** and scroll down to enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 5 Scroll down and enter a **Subject** for the event. Use the keypad to type letters and numbers.
- 6 Scroll down once more to select whether the event is occurring **Once** or repeated at **Daily**, **Weekly**, **Monthly** or **Yearly** intervals. If the event is repeated, you can

also scroll down to enter an **Expiration date** for when the events will stop completely.

- 7 Select **Save** and your event will be saved in the calendar. A square cursor will mark the days that any events have been saved to.

Editing a calendar event

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Choose **Options** and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and select **View**. Alternatively select the day of the event in the calendar and select **View**.
- 3 Select **Edit** and scroll to the event detail you want to change. Make your modifications and select **Save** to store the edited event.

Note: You can delete an event from your calendar by selecting to view the event and then pressing **Options** and **Delete**.

01

02

03

04

05

06

07

08

Organiser

Sharing a calendar event

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Select the event you would like to share and choose **Options**.
- 3 Choose **Send via** and select from **Text message**, **Multimedia message**, **Bluetooth** or **Email**.

Adding a memo

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Memo**.
- 2 Select **New** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on screen the next time you open the memo application.

TIP! You can edit an existing memo. Select the one you want to edit, press **Options** and select **Edit**.

Tools

Setting your alarm

- 1 From the standby screen press **Menu**, and select **Tools**, then **Alarm clock**.
- 2 Select **New**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun**, or **Choose weekday**.
- 5 Scroll down and choose whether you would like the alarm to **Always sound**, **Always vibrate** or **Follow profile**.
- 6 Scroll down to choose the alarm tone. Choose **Sounds** to select a new sound.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.
- 8 Select **Save**.

Note: You can set up to 5 alarms.

Using your calculator

- 1 From the standby screen press **Menu**, and select **Tools**, then **Calculator**.
- 2 Press the numeric keys to input numbers.

- 3 For simple calculations, select the function you require (+, -, ×, ÷), followed by =.
- 4 For more complex calculations, select **Function** to select a command.
- 5 Select **Clear** to clear the screen and start a new calculation.

Using the stopwatch

- 1 From the standby screen press **Menu**, and select **Tools**, then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. The duration of an individual lap time (up to 20 times) can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

01

02

03

04

05

06

07

08

Tools

Converting a unit

- 1 From the standby screen press **Menu**, and select **Tools**, then **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Scroll up to choose from the unit of measurement you want to enter. Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

Adding a city to your world clock

- 1 From the standby screen press **Menu**, and select **Tools**, then **World clock**.
- 2 Scroll up, down, left or right to navigate the globe and choose a continent.
- 3 Select **Zoom in** to zoom into an area and choose from the cities in that area.
- 4 Press **OK**.

SIM services

This feature depends on SIM and the network services.

In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Browser

With a browser at the tip of your fingers, you can get up to date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 Press **Menu** and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately, select **Enter address** and type in your desired URL, followed by **Connect**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Press **Menu** and select **Browser**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Options** and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Press **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select **Connect**. You will be connected to your bookmarked page.

01

02

03

04

05

06

07

08

Browser

Saving a page

- 1 Access your required web page as described on page 53.
- 2 Choose **Options** and scroll to **Save**, select **This page**.
- 3 Select **OK**.

Accessing a saved page

- 1 Press **Menu** and select **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and press **Open**.

TIP! This menu will also allow you to delete saved pages.

Viewing your browser history

- 1 Press **Menu** and select **Browser**.
- 2 Select **History** and select **OK**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and select **Connect**.

Changing the web browser settings


- 1 Press **Menu** and select **Browser**.
- 2 Select **Settings**.
- 3 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Network profiles**, **Rendering mode**, **Cache**, **Cookies**, **Security certificates**, **Show image**, **JavaScript** and **Storage location**.
- 4 Once you have changed your settings, select **OK**.

Settings

Within this folder you can adapt your settings to make your KC550 personal to you.

Note: For information on call settings see page 18.

Changing your profiles

You can quickly change your profile from the standby screen. Simply press  then the profile you would like to activate. Choose from **General**, **Silent**, **Vibrate only**, and **Outdoor**.

Personalising your profiles

You can personalise each profile setting.

- 1 Press **Menu** and select **Profiles**.
- 2 Choose the profile you want and select **Personalise**.
- 3 For the **Silent** and **Vibrate only** profiles, you can adapt the activate. For the other profiles, you can change all of the sounds and alert options available in the list. (Please refer to your handset for details.)

Changing your date & time

You can set functions relating to the date and time.

- 1 Press **Menu** and select **Settings**.
- 2 Select **Date & Time** and choose from the list below:

Set date - You can enter the current date.

Date format - You can set the date format. (YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY)

Set time - You can enter the current time.

Time format - You can set the time format to either 24 hours or 12 hours.

Auto update - Select **On**, the phone will automatically update the date and time.

Changing the language

Go to **Settings** and **Languages** to change the language for any text in your phone. Any change will also alter the language input mode.

Changing your display settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Display** and choose from:

Wallpaper - Choose a wallpaper to appear on your screen display.

Clocks - Choose to have the time and date visible on your standby screen. Choose from No date & time or Normal.

Backlight timer - Choose how long the backlight remains on for.

01

02

03

04

05

06

07

08

Settings

TIP! The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Brightness - Use the navigation keys to adjust the brightness. Choose from 40%, 60%, 80% or 100%, then select OK to save your change.

Home screen shortcut - Select **On** to display the shortcuts of 4 menus as pictures on the middle of the standby screen.

Font size - Change the font size of the following : **Menu, Dialling** and **Messaging**.

Theme - Quickly change the whole look of your screen.

Menu style - Change the menu view from **Grid view** to **List view**.

Main font style - Adjust the font type.

Dialling font style - Adjust the font style for when you are dialling a phone number.

Standby text - Choose to add a message to your standby screen.

Network name - Choose to show or hide the network name.

Changing your security settings

Change your security settings to keep your KC550 and the important information it holds protected.

- 1 Press **Menu** and select **Settings**.
- 2 Select **Security** and choose from the list below:

Anti Theft Mobile Tracker - Set ATMT On/Off and Numbers for ATMT.

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Phone lock - Choose a security code to lock your phone **When power on, When SIM changed** or **Immediately**.

Change codes - Change your **Security code, PIN1 code** or **PIN2 code & ATMT code**.

Using flight mode

Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the internet, send messages or use Bluetooth when **Flight mode** is switched **On**.

Resetting your phone

Use **Reset** to reset all the settings to their factory definitions. You need the security code to activate this function.

Viewing memory status

Your KC550 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Menu** and select **Settings**. Choose **Memory status** and you will then see the current status of the memories (Common, Reserved, SIM card and External memory) in your KC550.

TIP! See page 11 for information on **inserting a memory card**.

Changing your Bluetooth settings

- 1 Press **Menu** and select **Connectivity**, then choose **Bluetooth**.
- 2 Choose **Bluetooth settings**. Make your changes to:

My visibility - Choose whether to **Show** or **Hide** your device to others.

My name - Enter a name for your KC550.

My address - View your Bluetooth address.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Press **Menu** and select **Connectivity**. Your options are:

Bluetooth - Set up your KC550 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

Network - Your KC550 connects automatically to your preferred network. To change these settings use this menu. You can also add new access points using this menu.

01

02

03

04

05

06

07

08

Settings

USB connection - Choose **Data service** and synchronise your KC550 using the LG PC Suite software to copy files from your phone.

If you have a memory card inserted, select **Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the KC550 removable device folder. See pages 45~47 for further details.

Pairing with another Bluetooth device

By pairing your KC550 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**.
You can change your visibility in the **Bluetooth settings** menu, by selecting **My visibility**, then **Show**.
- 2 Select **Device list** from the Bluetooth menu and choose **New**.
- 3 Your KC550 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Pair** and enter a passcode then choose **OK**.

- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your KC550 will then automatically connect to your Bluetooth headset and switch to headset profile.

Accessories

These accessories were supplied with your KC550.

Charger



Data cable and CD

Connect and synchronise your KC550 and PC.



Battery



User Guide

Learn more about your KC550.

Stereo headset



Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

01

02

03

04

05

06

07

08

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800 and PCS1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KC550

System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KC550

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 60950-1 : 2001
EN 50360/EN 60361 : 2001
EN 301 511 V9.0.2
EN 300 328 V 1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. March. 2008


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KC550 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.348 W/kg (10g) and when worn on the body is 0.665 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

- Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
 - Keep away from electrical appliances such as TVs, radios, and personal computers.

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient Use

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the airbag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.


Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



Warranty Card
產品保用證

Mobile Phone
手提電話

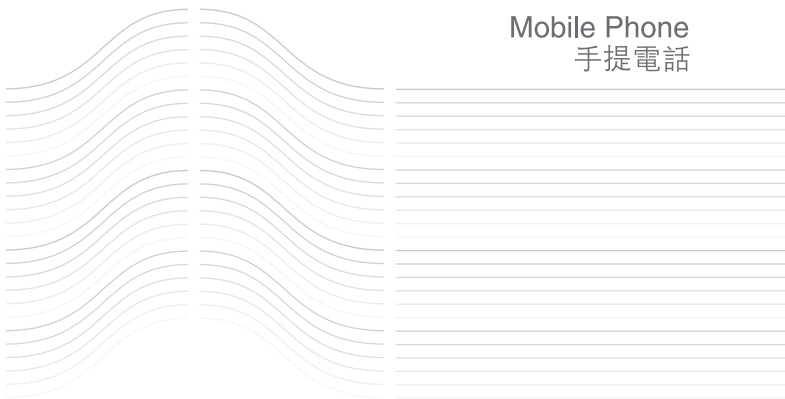

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



**Welcome to contact for detailed information
& Customer Care Centre address**

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

**Thank you for your purchase of LG Electronics product under the terms and
conditions listed on this warranty card.**

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

**IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.
Otherwise, this warranty will be voided.**

重要事項：顧客請保留此保用證和購買發票，並需在檢查/維修時出示，否則保用無效。

Mobile Phone Warranty Policy

HK Area
香港地區

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 - (i) Handset :12 months
 - (ii) Charger :6 months
 - (iii) Battery :6 months
 - (iv) Hand free earphone :3 months.
 - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
 - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories, etc.)
 - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
 - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle these parts as necessary.
 - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
 - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer :
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alteration or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
 - (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
 - (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
 - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
 - (11) This warranty card is restricted within Hong Kong SAR only.
- (1) 本公司為客戶提供保用期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(自購買日起計)
 - (i) 機身: 12個月
 - (ii) 充電器: 6個月
 - (iii) 電池: 6個月
 - (iv) 充電耳機: 3個月
 - (2) 保用服務只適用於原廠行貨，水貨及非原廠均屬無效。
 - (3) 此保用只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
 - (4) 用戶要求維修服務時，須同時帶同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保用服務無效。客戶須自行維修費用。
 - (5) 在保用期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作任何處理。
 - (6) 手機內存資料有可能因維修而遺失，請顧客自行保存。
 - (7) 若下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人索償所有的維修費用。
 - (i) 手機曾作非許可之維修、不適當的安裝、更改，或黏貼於其上的維修貼紙遭受損壞、磨破、除去，保用證即失效。
 - (ii) 手機曾被錯誤使用、錯誤處理、濫用使用、直接或間接意外火災、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成之損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保用證即失效。
 - (iv) 擅自修改本保用證的內容。
 - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害、意外事件造成之損失概不負責。
 - (9) 本保用證的發出及終止均屬本公司所有，就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
 - (10) 本公司將不負責由於產品損壞可直接或間接引致之任何損失。
 - (11) 此保用證只適用於香港特別行政區範圍內。



服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜



To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號



Limited Warranty

限期保用證

To provide our best after-sales service, please complete and return this warranty card to us. 您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下專有的售後服務。

Customer Information

客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號



