



www.lgmobile.com

P/N : MMBB0324401 (1.0)



GB210

ข้อมูลบางอย่างในคู่มือเล่มนี้
อาจแตกต่างจากโทรศัพท์ของคุณ
ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์
หรือผู้ให้บริการของคุณ

CE 0168

ไทย
ENGLISH



Bluetooth QD ID B014921

GB210 คู่มือการใช้ - ไทย

คู่มือนี้จะช่วยให้คุณทำความรู้จักโทรศัพท์มือถือใหม่ของคุณ. ซึ่งจะให้คำอธิบายที่เป็นประโยชน์ของคุณสมบัติต่างๆ ในโทรศัพท์ของคุณ
ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ



เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หูฟัง

หน้าจอหลัก

ปุ่มเลือก (ปุ่มเลือกซ้าย / ปุ่มเลือกขวา)


ปุ่มทั้ง 2 นี้จะทำงานตามฟังก์ชันที่ปรากฏที่ด้านล่างของหน้าจอ

ปุ่มโทร

เพื่อโทรออกและรับสายเรียกเขา

ปุ่มลบ

ลบตัวอักษรครั้งละหนึ่งตัวเมื่อกดปุ่มในแต่ละครั้งใช้ปุ่มนี้เพื่อกลับ

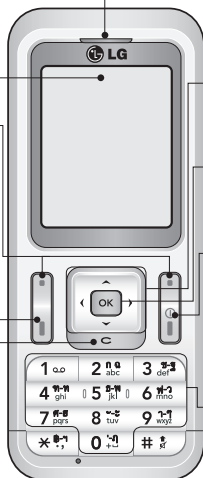

ปุ่มนาฬิกา
เลื่อนขึ้นและลง

ปุ่มยืนยัน / ปุ่มตกลง
เลือกตัวเลือกเมนูและ
ยืนยันการดำเนินการ

ปุ่มวางสาย/เปิดปิดเครื่อง
วางสายหรือปฏิเสธสาย
เรียกเขา.
เปิด/ปิดโทรศัพท์ .
กดหนึ่งครั้งเพื่อกลับ
สู่หน้าจอสแตนด์บาย

ปุ่มตัวเลขและตัวอักษร
ในโหมดสแตนด์บาย:
ป้อนหมายเลขเพื่อโทร
ออก กดค้าง ในโหมดแก้ไข:
ป้อนตัวเลขและตัวอักษร



หมายเหตุ: ล็อคปุ่มอัดโน้มนัด


ฟังก์ชันการป้องกันแป้นกดจะทำงานโดยอัตโนมัติ เพื่อประหยัดพลังงานแบตเตอรี่และป้องกันการใช้งานโทรศัพท์โดยไม่ได้ตั้งใจ

ในการปิดการป้องกันแป้นกด ให้กดปุ่มเลือกซ้าย **ปลดล็อค** และกดปุ่มเลือกขวา **ใช่**

หากคุณต้องการเปลี่ยนการตั้งค่าของฟังก์ชันนี้ ให้กด **เมนู > การตั้งค่า > ระบบป้องกัน** และเลือก **ล็อคปุ่มอัดโน้มนัด**
เลือก **'ปิด'** หรือตั้งค่าระยะเวลาก่อน **ล็อคปุ่มอัดโน้มนัด**

การลดหน่วยความจำ

เปิดฝาปิดการลดหน่วยความจำขึ้น และใส่การ์ด micro SD โดยให้พื้นที่หน้าสัมผัสสีทองคว่ำลง
ปิดฝาปิดการลดหน่วยความจำจนเข้าที่
ในการถอดการลดหน่วยความจำ ให้ดันที่การ์ดเบาๆ ดังแสดงในภาพ

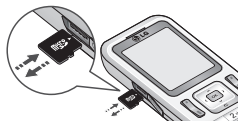

หมายเหตุ: การลดหน่วยความจำเป็นอุปกรณ์เสริม

การฟอร์แมตการลดหน่วยความจำ
จากหน้าจอแสดงอันดับขาย ให้กดปุ่ม **เมนู** แล้วเลือก **ตั้งค่า**

เลือก **สถานะความจำ** แล้วเลือก **หน่วยความจำภายนอก** เลือก **ฟอร์แมต** แล้วยืนยันการเลือกของคุณ

คำเตือน: เมื่อคุณฟอร์แมตการลดหน่วยความจำ ข้อมูลทั้งหมดจะถูกลบออก หากคุณไม่ต้องการให้ข้อมูลในการลดหน่วยความจำหายไป ให้สำรองข้อมูลไว้ก่อน

การใส่ซิมการ์ดและการชาร์จแบตเตอรี่

ใส่ซิมการ์ด

เมื่อคุณสมัครขอใช้บริการเครือข่ายโทรศัพท์เคลื่อนที่ คุณจะได้รับซิมการ์ดปลั๊กอิน พร้อมรายละเอียดการสมัครขอรับบริการ เช่น PIN ของคุณ, บริการเสริมที่มีให้เลือกใช้ได้ และอื่นๆ

ข้อสำคัญ! > ซิมการ์ดปลั๊กอินและขั้วสัมผัสอาจชำรุดเสียหายได้ง่าย หากถูกขูดขีดหรือหักงอ ดังนั้น จึงควรใช้งาน ใส่หรือถอดการ์ดด้วยความระมัดระวัง เก็บซิมการ์ดทั้งหมดให้พ้นมือ เด็กเล็ก

ภาพประกอบ

1 ถอด ฝาปิดแบตเตอรี่





2 ถอดแบตเตอรี่ออก

3 ใส่ซิมการ์ด และใส่แบตเตอรี่

4 ใส่แบตเตอรี่

5 ปิดฝาปิดแบตเตอรี่

6 ชาร์จแบตเตอรี่

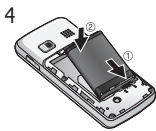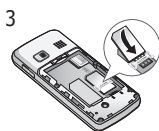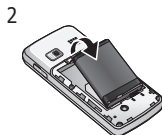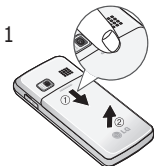

คำเตือน: ห้ามถอดแบตเตอรี่ขณะที่ เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

แผนผังเมนู



เกมส์ & อื่นๆ

- 1 เกมส์
- 2 แอปพลิเคชัน
- 3 โปรไฟล์เครือข่าย



ข้อมูลการโทร

- 1 ทุกสาย
- 2 สายไม่ได้รับ
- 3 สายโทรออก
- 4 สายที่ได้รับ
- 5 เวลาโทร
- 6 ค่าโทร
- 7 รายละเอียดข้อมูล



สมุดบันทึก

- 1 ปฏิทิน
- 2 บันทึก
- 3 สิ่งที่ต้องทำ



มัลติมีเดีย

- 1 เครื่องเล่น MP3
- 2 กล้องถ่ายรูป
- 3 กล้องถ่ายวีดีโอ
- 4 วิทยุ FM
- 5 บันทึกเสียง



ข้อความ

- 1 ข้อความใหม่
- 2 ถัดเขา
- 3 กลองบลูทูธ
- 4 ร่าง
- 5 ถัดออก
- 6 ส่งแล้ว
- 7 ฟังข้อความเสียง
- 8 บริการข้อมูล
- 9 ข้อความอัตโนมัติ
- 0 การตั้งค่า



เพิ่มส่วนตัว

- 1 รูปภาพ
- 2 เสียง
- 3 วิดีโอ
- 4 อื่นๆ
- 5 หน่วยความจำภายนอก



รูปแบบเสียง

- 1 ปกติ
- 2 เงียบ
- 3 สั้นอย่างเดียว
- 4 นอกอาคาร
- 5 ชุดหูฟัง



รายชื่อ

- 1 ค้นหา
- 2 รายชื่อใหม่
- 3 โทรด่วน
- 4 กลุ่ม
- 5 คัดลอกทั้งหมด
- 6 ลบทั้งหมด
- 7 การตั้งค่า
- 8 ข้อมูล



เครื่องมือ

- 1 ตั้งปลุก
- 2 เครื่องคิดเลข
- 3 นาฬิกาจับเวลา
- 4 ตัวแปลงหน่วย
- 5 เวลาทั่วโลก
- 6 บริการซิม*
- * คุณลบซิมนี้ขึ้นอยู่กับซิมการ์ด และการให้บริการเครือข่าย



เบราว์เซอร์

- 1 โสม
- 2 Google Search
- 3 บุคมาร์ค
- 4 ไปที่ URL
- 5 ประวัติ
- 6 บันทึกเพจ
- 7 การตั้งค่า
- 8 ข้อมูล



การเชื่อมต่อ

- 1 บลูทูธ
- 2 เครือข่าย
- 3 การเชื่อมต่อ USB



การตั้งค่า

- 1 วันที่และเวลา
- 2 ภาษา
- 3 หน้าจอ
- 4 ปุ่มลัด
- 5 โทร
- 6 ระบบมองเห็น
- 7 โหมด Flight
- 8 ประหยัดพลังงาน
- 9 รีเซ็ต
- 0 สถานะความจำ

การโทร

การโทรออก




- 1 ป้อนหมายเลขโดยใช้ปุ่มกด หากต้องการลบที่ละหมายเลข กด 

- 2 กดปุ่มส่งเพื่อเริ่มการโทรออก
- 3 หากต้องการวางสาย ให้กดปุ่มวางสาย

เคล็ดลับ! ในการป้อน + เมื่อโทรออกต่างประเทศ ให้กดปุ่ม 0 ค้างไว้.

เคล็ดลับ! ในการปรับระดับเสียงระหว่างใช้สาย ให้ใช้  และ 

การโทรออกโดยใช้รายชื่อ

- 1 กดปุ่ม  เพื่อเปิดสมุดแอดเดรส
- 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยใช้ปุ่มกด ตัวอย่างเช่น หากต้องการโทรไปที่บ้าน ให้กด 6 สามครั้ง
- 3 หากต้องการเลื่อนรายชื่อและหมายเลขต่างๆ ให้  และ 
- 4 กดปุ่มส่งเพื่อเริ่มการโทรออก

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้กด 'ยอมรับ' หรือกดปุ่ม ส่ง เพื่อรับสาย ขณะโทรศัพท์ของคุณมีเสียงเรียกเข้า ให้คุณเลือก เจียบ เพื่อปิดเสียงเรียกเข้า วิธีนี้เป็นวิธีที่ดี หากคุณเลื่อมเปลี่ยนรูปแบบเป็น เจียบ เมื่ออยู่ในห้องประชุม กดปุ่มวางสายหรือ 'ปฏิเสธ' เพื่อปฏิเสธสายเรียกเข้า

หมายเหตุ: สายเรียกเข้าที่ปฏิเสธจะปรากฏในรายการ 'สายที่ไม่ได้รับ'

การใช้ลำโพง

ระหว่างการใช้อย่าง คุณสามารถใช้ลำโพงได้โดยกดปุ่มตกลง และคุณสามารถใช้เครื่องเป็นแบบแฮนด์ฟรีได้ หากใช้งานลำโพง ให้กดปุ่มตกลงอีกครั้งเพื่อกลับไปใช้โหมดการสนทนาของเครื่องตามปกติ

การดูบันทึกการโทร

คุณสามารถดูบันทึกของสายที่ไม่ได้รับสายที่รับ และสายโทรออกได้ หากว่าเครือข่าย

สนับสนุนการแสดงผลหมายเลขโทรเข้า (Calling Line Identification: CLI)

ในพื้นที่ให้บริการ หมายเลขและชื่อ (หากมีอยู่) จะปรากฏขึ้นพร้อมกัน วันที่และ เวลาที่มีการโทรนั้น

และคุณยังสามารถดู ระยะเวลาที่คุณโทรได้ด้วย กดปุ่ม **เมนู** เลือก

ขอมูลการโทร

การเปลี่ยนแปลงการตั้งค่าการโทร

คุณสามารถตั้งค่าเมนูที่เกี่ยวข้องกับการ โทรได้ กดปุ่ม **เมนู** เลือก **ตั้งค่า** แล้วเลือก **โทร**

- **การโอนสาย** - เลือกว่าจะโอนสายของคุณหรือไม่
- **ป้องกันการโทร** - เลือกเวลาที่คุณต้องการให้ป้องกันการโทร
- **เบอร์โทรที่กำหนด** - เลือกหมายเลขที่สามารถโทรออกจากโทรศัพท์ของคุณได้




โทรศัพท์ได้ คุณจะต้องใช้รหัส **PIN2** จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการ หมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

- **รูปแบบการรับสาย** - เลือกว่าจะรับสายโดยใช้ปุ่มรับสาย ปุ่มใดๆ หรือโดยการเลื่อนเปิดเครื่อง
- **ส่งหมายเลขตัวเอง** - เลือกว่าจะแสดงผลหมายเลขของคุณเมื่อคุณโทรออกหรือไม่ (ขึ้นอยู่กับผู้ให้บริการเครือข่าย)
- **สายเรียกซ้อน** - แจ้งเตือนให้ทราบเมื่อมีสายเรียกซ้อน
- **เตือนทุกนาที** - เลือก **เปิด** เพื่อฟังเสียงเตือนทุกนาทีในระหว่างที่ใช้สาย
- **โทรซ้ำอัตโนมัติ** - เลือก **เปิด** หรือ **ปิด**
- **ส่งโทร DTMF** - เลือก **เปิด** หรือ **ปิด**

รายชื่อ

การค้นหารายชื่อ



คุณสามารถค้นหารายชื่อในสมุดโทรศัพท์ได้

- 1 กดปุ่ม **รายชื่อ** แล้วเลือก **ค้นหา** เลือก **รายชื่อ** จากหน้าจอ **เมนู** หรือกดปุ่ม  จากหน้าจอสแตนด์บาย
- 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณ ต้องการโทรออกโดยใช้ปุ่มกด ตัวอย่างเช่น หากต้องการโทรไปที่บ้าน ให้กด 6 สามครั้ง
- 3 หากต้องการเลื่อนดูรายชื่อและหมายเลขที่ต่างกัน ใช้  และ 

การเพิ่มรายชื่อใหม่

คุณสามารถเพิ่มรายการในสมุดโทรศัพท์ได้โดยใช้เมนูนี้

- 1 กดปุ่ม **รายชื่อ** แล้วเลือก **รายชื่อใหม่**
- 2 เลือกว่าจะจัดเก็บรายชื่อติดต่อใหม่ของคุณบนโทรศัพท์ หรือซิมการ์ด
- 3 ป้อนข้อมูลที่เกี่ยวข้องของตามด้านบนและกดปุ่ม **บันทึก**

หมายเหตุ: ขณะที่คุณจัดเก็บอีเมลแอดเดรสของรายชื่อ ให้กด  เพื่อป้อนสัญลักษณ์ และเลื่อนโดยใช้  และ  จนกระทั่งคุณเห็น @

ข้อความ

โทรศัพท์ GB210 ของคุณประกอบด้วยฟังก์ชันที่เกี่ยวกับ SMS (Short Message Service), MMS (Multimedia Message Service), บลูทูธ

การส่งข้อความ

- 1 กดปุ่ม **เมนู** เลือก **ข้อความ** แล้วเลือก **ข้อความใหม่**
- 2 เลือก **ข้อความ** เพื่อส่ง SMS หรือ MMS
- 3 เอดีเตอร์ข้อความใหม่จะเปิดขึ้น เอดีเตอร์ข้อความจะรวม SMS และ MMS เข้าด้วยกันเพื่อให้ใช้งานและสลับระหว่างโหมด SMS และโหมด MMS ได้อย่างง่ายดาย โหมดเริ่มต้นของเอดีเตอร์ข้อความ คือโหมด SMS
- 4 ป้อนข้อความของคุณโดยใช้ระบบช่วยสะกดคำ T9 หรือการป้อนตัวอักษรด้วยตนเอง

คุณสามารถสลับโหมดการป้อนข้อความได้โดยกด **[#*]**

5 กดปุ่ม **ตัวเลือก** แล้วเลือก **แทรก** เพื่อแทรก **ภาพ, เสียง, สัญลักษณ์, รูปแบบข้อความ, อีโมติคอน, ชื่อและเบอร์, สไลด์ใหม่, หัวเรื่อง** หรืออื่นๆ (รายชื่อ/นามบัตร/นัดหมาย/บันทึก/สิ่งที่ต้องทำ).

6 กด **ตัวเลือก** และเลือก **ส่งไปที่**

7 ป้อนหมายเลขโทรศัพท์หรือกดปุ่ม **ตัวเลือก** และเลือก **รายชื่อ** เพื่อเปิดรายชื่อติดต่อ
คุณสามารถเพิ่มรายชื่อติดต่อหลายรายการได้

8 กดปุ่ม **ปุ่มยืนยัน**

เคล็ดลับ! คุณสามารถเลือกประเภทข้อความของคุณเป็น SMS หรือ MMS เมื่อคุณป้อนข้อความที่มีความยาวเกินกว่า 1 หนาในฟิลด์ข้อความ หากคุณต้องการเปลี่ยนประเภทของข้อความที่จะส่งให้กด **เมนู > ข้อความ > การตั้งค่า > ข้อความตัวอักษร** และเลือก **ส่งข้อความยาวเป็น**

คำเตือน: หากมีการแทรก ภาพ, เสียง, วิดีโอ, สไลด์ใหม่ หรือ หัวเรื่องลงในเอดีเตอร์ข้อความ การส่งข้อความจะถูกแปลงเป็นโหมด MMS และคุณจะถูกเรียกเก็บค่าบริการในอัตราดังกล่าว

ข้อความบลูทูธ

ในการส่ง/รับข้อความผ่านบลูทูธ คุณต้องเปิดบลูทูธ

กล่องบลูทูธ

ข้อความทั้งหมดที่คุณรับผ่านบลูทูธจะอยู่ในแถบข้อความของบลูทูธของคุณ ซึ่งคุณสามารถอ่าน ตอบกลับ และส่งต่อข้อความของคุณได้

การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษร ได้โดยใช้ปุ่มกดของโทรศัพท์ ตัวอย่างเช่น การบันทึกชื่อในรายชื่อ การเขียนข้อความ และการสร้างตาราง
นัดหมายในปฏิทินล้วนแต่ต้องใช้การป้อนข้อความทั้งสิ้น ในเครื่องมีวิธีป้อนข้อความให้เลือกใช้ได้ดังนี้ระบบช่วยสะกด คำ T9, การป้อนตัวอักษรด้วยตนเอง และโหมด 123

หมายเหตุ: เอดีเตอร์บางที่อาจใช้โหมดป้อนข้อความได้โหมดเดียว (เช่น หมายเลขโทรศัพท์ในเอดีเตอร์สมุดแอดเดรส)

ระบบช่วยสะกดคำ T9

ระบบช่วยสะกดคำ T9 จะใช้พจนานุกรมภายในเครื่อง เพื่อรับรู้อำนาจที่คุณเขียนตามลำดับการกดปุ่ม เพียงกดปุ่มปุ่มตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณจะป้อน พจนานุกรมจะรับรู้ได้ถึงคำศัพท์เมื่อคุณป้อนตัวอักษรครบทุกตัวแล้ว

โหมดการป้อนตัวอักษรด้วยตนเอง

โหมดนี้ให้คุณป้อนตัวอักษร โดยการกดปุ่มที่มีตัวอักษรที่ต้องการหนึ่งครั้ง สองครั้ง สามครั้ง หรือสี่ครั้งจนกระทั่งตัวอักษรที่ต้องการปรากฏขึ้น





โหมด 123

ป้อนตัวเลขต่างๆ โดยกดปุ่มเพียงครั้งเดียวต่อตัวเลขหนึ่งตัว คุณสามารถเพิ่มตัวเลขได้ แม้ขณะที่ยังคงอยู่ในโหมดตัวอักษร โดยกดปุ่มตัวเลขที่ต้องการค้างไว้

เครื่องเล่น MP3

LG GB210 มีเครื่องเล่น MP3 ภายในตัว ที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้

การเล่นเพลง

- 1 กดปุ่ม **เมนู** แล้วเลือก **มัลติมีเดีย** จากนั้นเลือก **เครื่องเล่น MP3**
- 2 เลือกเพลงที่คุณต้องการเล่น กดปุ่ม 
- 3 กดปุ่ม **ปุ่มยืนยัน** เพื่อหยุดเล่นเพลงชั่วคราว
- 4 กดปุ่ม  เพื่อข้ามไปยังเพลงถัดไป
- 5 กดปุ่ม  เพื่อข้ามไปยังเพลงก่อนหน้า
- 6 กดปุ่ม **ปุ่มยืนยัน**,  เพื่อหยุดเล่นเพลง และกลับไปเมนูเพลง

เคล็ดลับ! ในการเปลี่ยนระดับเสียงระหว่างฟังเพลง ให้ใช้  และ 

เคล็ดลับ! เมื่อเล่นเพลง MP3 ด้วยเครื่องเล่น MP3 คุณสามารถใช้โหมด BGM ได้ขณะที่ใช้งานฟังก์ชันอื่นๆ อยู่ได้

กล้องถ่ายรูป

การถ่ายภาพด้วย

ด้วยการใช้กล้องถ่ายรูปที่อยู่ในตัวโทรศัพท์ คุณสามารถถ่ายภาพบุคคลได้ นอกจากนี้ คุณยังสามารถส่งภาพถ่ายไปให้บุคคลอื่นๆ และเลือกภาพถ่ายเป็นภาพพื้นหลัง

- 1 กดปุ่ม **เมนู** แล้วเลือก **มัลติมีเดีย** เลื่อนลงไปเพื่อเลือก **กล้องถ่ายรูป** เพื่อเปิดช่องมองภาพ
- 2 ให้ถือโทรศัพท์ใน และหันเลนส์ไปทางสิ่งที่ต้องการถ่าย
- 3 กดปุ่มเลือกตรงกลางเพื่อถ่ายภาพ

กล้องวิดีโอ

การถ่ายวิดีโอด้วย

คุณสามารถบันทึกและจัดเก็บไฟล์วิดีโอได้

- 1 กดปุ่ม **เมนู** แล้วเลือก **มัลติมีเดีย** เลื่อนลงไปแล้วเลือก **กล้องวิดีโอ** เพื่อเปิดช่องมองภาพ
- 2 กดปุ่ม **ตัวเลือก** แล้วเลือก **กล้องวิดีโอ** ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 กดปุ่มเลือกตรงกลางเพื่อเริ่มการบันทึก
- 4 **REC** จะปรากฏขึ้นในมุมซ้ายด้านล่างของช่องมองภาพ และตัวตั้งเวลาจะแสดงระยะเวลาของวิดีโอของคุณ
- 5 กดปุ่ม **หยุด** เพื่อหยุดการบันทึก

วิทยุ FM

LG GB210 มีคุณสมบัติวิทยุ FM ดังนั้นคุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

หมายเหตุ: คุณจะต้องเสียบชุดหูฟังเพื่อรับฟังวิทยุ เสียบปลั๊กเข้ากับช่องเสียบที่ตัวเครื่อง (เป็นช่องเสียบเดียวกับที่ใช้สำหรับชาร์จ)

การฟังวิทยุ

1 กดปุ่ม **เมนู** แล้วเลือก **มีลติมีเดีย** จากนั้นเลือก **วิทยุ FM**

2 เลือกหมายเลขช่องของสถานีที่คุณต้องการฟัง

เคล็ดลับ! ในการเปลี่ยนระดับเสียงระหว่างการฟังวิทยุ ให้ใช้  และ 

หมายเหตุ: คุณสามารถฟังวิทยุผ่านทางลำโพงในตัวเครื่องได้ กด **ตัวเลือก** เลือก **ฟังทาง** และเลือก **ลำโพง**

เครื่องบันทึกเสียง

ใช้ **เครื่องบันทึกเสียง** เพื่อบันทึกเสียงเตือนความจำหรือเสียงอื่นๆ

1 กดปุ่ม **เมนู** แล้วเลือก **มีลติมีเดีย** จากนั้นเลือก **บันทึกเสียง**

2 กดปุ่ม **ปุ่มยืนยัน** เพื่อเริ่มบันทึก

3 กดปุ่ม **หยุด** เพื่อจบการบันทึก

4 กด **'ตัวเลือก'** และเลือก **'เล่น'** เพื่อฟังบันทึกเสียงเตือนความจำ.

เคล็ดลับ! คุณสามารถฟังการบันทึกเสียงทั้งหมดที่คุณบันทึกไว้ได้โดยการเลือก **ตัวเลือก** และ **อัลบั้ม**

เพิ่มข้อมูล

คุณสามารถจัดเก็บไฟล์มีลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์

ไฟล์มีลติมีเดียของคุณทั้งหมดจะบันทึกอยู่ใน **แฟ้มข้อมูล** กดปุ่ม **เมนู** แล้วเลือก **แฟ้มข้อมูล** เพื่อเปิดรายการไฟล์เดอร์

เกมส์&แอปฯ

โทรศัพท์ GB210 มีมาให้พร้อมทั้งเกมส์เพื่อช่วยให้คุณได้เพลิดเพลินในยามว่างหากคุณเลือก

ดาวน์โหลดเกมส์หรือแอปพลิเคชัน
เพิ่มเติม ไฟล์เหล่านั้นจะถูกบันทึกลงใน
โฟลเดอร์นี้
กดปุ่ม **เมนู** แล้วเลือก **เกมส์&แอปฯ**

สมุดบันทึก/เครื่องมือ

ปฏิทิน

(เมนู > สมุดบันทึก > ปฏิทิน)

คุณสามารถดูตารางนัดหมายรายเดือน
เคอร์เซอร์จะอยู่ที่วันที่ปัจจุบัน และวันที่
ถึงทะเบียนจะมีการทำเครื่องหมาย

การเพิ่มบันทึก

(เมนู > สมุดบันทึก > บันทึก)

คุณสามารถบันทึกการช่วยจำได้

การเพิ่มรายการลงในสิ่งที่ต้องทำ

(เมนู > สมุดบันทึก > สิ่งที่ต้องทำ)

คุณสามารถดู แก้ไข และเพิ่มงานที่จะทำ

การตั้งเวลาปลุก

(เมนู > เครื่องมือ > ตั้งปลุก)

คุณสามารถตั้งปลุกได้ถึง 5 รายการ

การใช้เครื่องคิดเลข

(เมนู > เครื่องมือ > เครื่องคิดเลข)

โมดูลการคำนวณช่วยให้คุณใช้งาน
ฟังก์ชันการคำนวณขั้นต้น เช่น การบวก
การลบ การคูณ และการหาร และฟังก์ชัน
วิทยาศาสตร์บางอย่าง

การใช้นาฬิกาจับเวลา

(เมนู > เครื่องมือ > นาฬิกาจับเวลา)

นาฬิกาจับเวลา ทำหน้าที่เป็นนาฬิกาจับ
เวลาที่เรามักพบเห็น และใช้เป็นประจำ
ในชีวิตประจำวัน

การแปลงหน่วย

(เมนู > เครื่องมือ > ตัวแปลงหน่วย)

ใช้แปลงหน่วยวัดให้เป็นหน่วยที่คุณต้อง
การ ประเภทของหน่วยวัดที่สามารถ
แปลงเป็นหน่วยต่างๆ ได้นั้นมีอยู่ 7
ประเภท: สกุลเงิน, พื้นที่, ความยาว,
น้ำหนัก, อุณหภูมิ, ปริมาตร และ ความเร็ว

การเลือกเมืองลงในเวลาทั่วโลก

(เมนู > เครื่องมือ > เวลาทั่วโลก)

การเพิ่มเมืองในเวลาทั่วโลกและ
คุณสามารถตรวจสอบเวลาปัจจุบัน
ของGreenwich Mean Time (GMT)
และเมืองหลักทั่วโลกได้

บริการซิม

(เมนู > เครื่องมือ > บริการซิม)

คุณสมบัตินี้ขึ้นอยู่กับซิมการ์ดและการให้บริการของเครือข่ายในกรณีที่ใช้ซิมการ์ดสนับสนุนบริการ SAT (เช่น SIM Application Toolkit) เมนูนี้จะ เป็นชื่อบริการของผู้ให้บริการซึ่ง จัดเก็บไว้ในซิมการ์ด

เบราว์เซอร์

การเข้าเว็บไซต์

ใช้สำหรับเชื่อมต่อกับโฮมเพจ โฮมเพจอาจเป็นไซต์ ที่ได้ ระบุไว้ในรูปแบบ ที่มีการใช้งาน ซึ่งอาจกำหนดไว้โดย ผู้ให้บริการระบบหากคุณไม่ได้ กำหนดไว้ในรูปแบบที่มีการใช้งาน เมนูนี้ช่วยให้คุณจัดเก็บ URL ของเว็บเพจที่ คุณชื่นชอบได้ เพื่อให้ คุณสามารถเชื่อมต่อไปยังเว็บไซต์ที่คุณต้องการได้ โดยตรง หลังจากป้อน URL ที่ต้องการแล้ว ให้กดปุ่ม ตกลง เมนูนี้จะ แสดงเพจต่างๆที่เบราร์สไว้ ล่าสุด

1 กดปุ่ม เมนู แล้วเลือก เบราร์เซออร์

2 ในการเข้าถึงโฮมเพจของเบราร์เซออร์ โดยตรง ให้เลือก เบอร์มัน หรือเลือก ป้อนแอดเดรส จากไปที่ URL

หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

Google Search

หากต้องการเข้าใช้บริการของ Google Search ให้กดปุ่ม เมนู แล้วเลือก เบราร์เซออร์ จากนั้นเลือก Google Search

หมายเหตุ: คุณอาจไม่สามารถเข้าใช้ Google Search ได้ในบางประเทศ ทั้งนี้ขึ้นกับ บริการเครือข่าย

การเชื่อมต่อ

การเปลี่ยนการตั้งค่าการ เชื่อมต่อ (เมนู > การเชื่อมต่อ)

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้นคุณจึงสามารถเปลี่ยนแปลงกับโทรศัพท์ใหม่ของคุณได้ทันทีหากคุณต้องการเปลี่ยนแปลงการตั้งค่า ให้ใช้เมนูนี้ คุณสามารถกำหนดการตั้งค่าเครือข่ายและโปรไฟล์การเข้าใช้ข้อมูลได้ในเมนูนี้

- **บลูทูธ** - ตั้งค่าโทรศัพท์ GB210 ของคุณให้ใช้บลูทูธ คุณสามารถปรับการมองเห็นของคุณที่มีต่ออุปกรณ์อื่นหรือค้นหาอุปกรณ์ที่โทรศัพท์ของคุณจับคู่ด้วย
- **เครือข่าย** - โทรศัพท์ GB210 จะเชื่อมต่อกับเครือข่ายที่ต้องการได้โดยอัตโนมัติ ในการเปลี่ยนการตั้งค่าเหล่านี้ ให้ใช้เมนูนี้ คุณสามารถเพิ่มจุดเชื่อมต่อใหม่โดยใช้เมนูนี้ได้
- **การเชื่อมต่อ USB** - เลือก **เชื่อมต่อข้อมูล** และซิงโครไนซ์โทรศัพท์ GB210 โดยใช้ซอฟต์แวร์ LG PC Suite เพื่อคัดลอกไฟล์จากโทรศัพท์

หากคุณมีการดหน่วยความจำเสียบอยู่ ให้เลือก **ที่เก็บข้อมูล** เพื่อใช้โทรศัพท์ของคุณในรูปแบบเดียวกับที่คุณใช้อุปกรณ์หน่วยความจำ USB เชื่อมต่อเครื่องคอมพิวเตอร์ของคุณ และลากแล้ววางไฟล์ไปที่โฟลเดอร์ของอุปกรณ์ที่ถอดออกได้ของโทรศัพท์ GB210 โปรดดู

หมายเหตุ: ในการใช้ฟังก์ชันที่เก็บข้อมูล USB คุณจะต้องเสียบการดหน่วยความจำภายนอกในโทรศัพท์

การเปลี่ยนการตั้งค่าบลูทูธ

- 1 กดปุ่ม **เมนู** แล้วเลือก **ตั้งค่า** แล้วเลือก **การเชื่อมต่อ** ตัวเลือกของคุณได้แก่ จากนั้นเลือก **บลูทูธ**
- 2 เลือก **การตั้งค่า** ทำการเปลี่ยนแปลง:
 - **การมองเห็นเครื่องอื่น** - เลือกว่าจะแสดง หรือ **ซ่อน** อุปกรณ์ของคุณต่อผู้อื่น
 - **ชื่อของฉัน** - ป้อนชื่อโทรศัพท์ GB210 ของคุณ
 - **แอดเดรสส่วนตัว** - ดูแอดเดรสบลูทูธ
 - **ที่เก็บข้อมูล** - เลือกตำแหน่งเริ่มต้นที่คุณต้องการบันทึกรายการ

การจับคู่กับอุปกรณ์บลูทูธอื่น

โดยการจับคู่โทรศัพท์ GB210 กับอุปกรณ์อื่น คุณสามารถกำหนด รหัสผ่านเพื่อป้องกันการเชื่อมต่อได้ ซึ่งหมายความว่าอุปกรณ์ที่จับคู่ด้วยก็จะปลอดภัยมากขึ้น

1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการมองเห็นใน **เมนู การตั้งค่าบลูทูธ** โดยการเลือก **การมองเห็นเครื่องของฉัน** จากนั้นเลือก **แสดง**

2 เลือก **รายการอุปกรณ์** จากเมนูบลูทูธ และเลือก **สร้าง**

3 โทรศัพท์ GB210 จะค้นหาอุปกรณ์ เมื่อการค้นหาเสร็จสมบูรณ์ **จับคู่** และ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ

4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย เลือก **จับคู่** และป้อนรหัสผ่าน จากนั้นเลือก **ตกลง**

5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นซึ่งคุณควรป้อนรหัสผ่านเดียวกัน

6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

รูปแบบเสียง

การเปลี่ยนแปลงรูปแบบของคุณ (เมนู > รูปแบบเสียง)

คุณสามารถเปลี่ยนรูปแบบจากหน้าจอแสดงระดับเสียงของคุณได้อย่างรวดเร็วเพียงกดปุ่ม | < | แล้วเลือกรูปแบบที่คุณต้องการเปิดใช้ เลือก ปกติ, เงียบ, สันนิบาเดียว นอกอาคาร และ ชุดหูฟัง

การตั้งค่า

การเปลี่ยนวันที่และเวลา

(เมนู > การตั้งค่า > วันที่และเวลา)
คุณสามารถตั้งค่าฟังก์ชันเกี่ยวกับวันที่และเวลาได้

การเปลี่ยนภาษา

(เมนู > การตั้งค่า > ภาษา)

คุณสามารถเปลี่ยนภาษาของข้อความที่ใช้แสดงบนโทรศัพท์ของคุณ การตั้งค่าเปลี่ยนแปลงนี้มีผลต่อโหมดภาษาด้วย คุณสามารถเปลี่ยนการตั้งค่าของการแสดงหน้าจอโทรศัพท์ได้

การเปลี่ยนการตั้งค่าการ แสดงผล

(เมนู > การตั้งค่า > หน้าจอ)

คุณสามารถเปลี่ยนการตั้งค่าของการ
แสดงหน้าจอโทรศัพท์ได้

การเปลี่ยนแปลงการตั้งค่าปุ่มลัด

(เมนู > การตั้งค่า > ปุ่มลัด)

คุณสามารถเปลี่ยนปุ่มลัดของปุ่มนาฬิกา
4 ปุ่มได้

การเปลี่ยนการตั้งค่าความ ปลอดภัย

เปลี่ยนการตั้งค่าความปลอดภัยของคุณ
เพื่อป้องกันโทรศัพท์ GB210 และข้อมูล
ที่สำคัญของคุณ

- **เปิดทำงาน PIN** - เลือกรหัส PIN
ที่เครื่องจะขอให้คุณป้อนรหัสเมื่อคุณ
เปิดเครื่อง
- **ล็อคปุ่มอัตโนมัติ** -
ถ้าคุณเปิดใช้ฟังก์ชันนี้ ปุ่มกดจะถูกล็อค
โดยอัตโนมัติในโหมดสแตนด์บายโดย
ไม่ต้องกดปุ่มใดๆ

- **ล็อคเครื่อง** - เลือกรหัสความปลอดภัย
เพื่อล็อคโทรศัพท์ของคุณ
**เมื่อเปิดเครื่อง, เมื่อเปลี่ยนซิม หรือ
ทันที**
- **ล็อคแอปพลิเคชัน** - คุณสามารถตั้ง
ค่าล็อคแอปพลิเคชันเพื่อป้องกันการ
ใช้งานภาพในหน่วยความจำเครื่อง
ปฏิทิน บันทึก และ สิ่งที่ต้องทำ
โดยไม่ได้รับอนุญาตซึ่งคุณจะต้อง
ใช้รหัสป้องกัน
- **การแจ้งเครื่องหาย(ATMT)-** เมื่อ
โทรศัพท์ของคุณถูกขโมย เครื่องจะส่ง
SMS ไปยังหมายเลขที่กำหนดไว้โดย
เจ้าของที่แท้จริงผู้ใช้ต้องกำหนดการ
ตั้งค่า ATMT ด้วยชื่อหมายเลขโทรศัพท์
หลัก และหมายเลขโทรศัพท์รอง
รหัส ATMT ดีฟอลต์ คือ "0000"
ATMT SMS จะมีข้อมูลเกี่ยวกับ
IMEI ของโทรศัพท์ที่ถูกขโมย
และหมายเลขของคุณ
ที่กำลังใช้เครื่องดังกล่าว

- **เปลี่ยนรหัส - เปลี่ยน รหัสป้องกัน รหัส PIN** (รายการเมนูนี้จะปรากฏขึ้น หากตั้งค่าค่าของรหัส PIN เป็น เปิด) รหัส PIN2 หรือ รหัส ATMT

การใช้โหมด Flight

(เมนู > การตั้งค่า > โหมด Flight)

ใช้ฟังก์ชันนี้เพื่อ เปิด หรือ ปิด โหมด Flight คุณจะไม่สามารถโทรออก, คุณไม่สามารถโทรออก เชื่อมต่ออินเทอร์เน็ต ส่งข้อความได้ เมื่อโหมด Flight เปิด อยู่

หมายเหตุ: สามารถ เปิด บลูทูธใน โหมด Flight ได้โดยการเลือกตัวเลือก

ประหยัดพลังงาน

(เมนู > การตั้งค่า > ประหยัดพลังงาน)

หากคุณตั้งค่า เปิดเสมอ คุณสามารถประหยัดพลังงานแบตเตอรี่ได้ ในขณะที่ไม่ได้ใช้โทรศัพท์ เลือกเพื่อสลับการตั้งค่าประหยัดพลังงาน เปิดเสมอ, เฉพาะกลางคืน หรือ ปิด

การรีเซ็ตโทรศัพท์ของคุณ

(เมนู > การตั้งค่า > รีเซ็ต)

ใช้ รีเซ็ต เพื่อรีเซ็ตการตั้งค่าทั้งหมดเป็นค่าที่ตั้งมาจากโรงงาน คุณต้องใส่รหัสป้องกันเพื่อใช้งานฟังก์ชันนี้ รหัส ดีฟอลด์คือ "0000"

การดูสถานะหน่วยความจำ

(เมนู > การตั้งค่า > สถานะความจำ)

GB210 ของคุณมีหน่วยความจำให้เลือกสามแบบ: โทรศัพท์, ซิมการ์ด และหน่วยความจำภายนอก (คุณอาจต้องซื้อการ์ดหน่วยความจำแยกต่างหาก) คุณสามารถใช้ตัวจัดการหน่วยความจำในการกำหนดว่าในแต่ละหน่วยความจำใช้หน่วยความจำไปเท่าใด และดูว่ามีพื้นที่ว่างเหลือเท่าใด

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้
การไม่ปฏิบัติตามคำแนะนำเหล่านี้
อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น GB210 นี้ได้รับ การออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณ

ที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ไชอยู่

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่น จะได้รับการออกแบบให้ อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.972 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.39 วัตต์/กก. (10 กรัม)

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ

- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ ที่ยอมรับขอจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื่อง 1 กรัม

การดูแลและการบำรุงรักษา เครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จแบตเตอรี่ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ ที่ไม่ผ่านการรับรองดังกล่าวอาจทำให้การรับ ร้องหรือ การรับประกันของเครื่องสั้น สดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจซ่อม
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อนหรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสัมผัสเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ

- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟไหม้ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์(อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้แบตเตอรี่กรดหรือแบตเตอรี่โดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น

- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาต หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ

- ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเขาข้างทาง แลวงจรถูกก่อน โทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณเช่น วิทยุติด รถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น

- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลมซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะอยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณนอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน

- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จแบตเตอรี่นี้ต่างจากแบตเตอรี่อื่น เนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ

- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้งหากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรงหรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ

ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์ : GB210

ระบบ : GSM 900 / DCS 1800

อุณหภูมิแวดล้อม

สูงสุด : +55°C (discharging)
+45°C (charging)

ต่ำสุด : -10°C

Bluetooth QD ID B014921

ศูนย์บริการ LG โดย บริษัท แอลจี อิเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน
เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน
แขวงบุคคลไฉ เขตธนบุรี กรุงเทพฯ
10600

วันและเวลาทำการ : จันทร์-ศุกร์,
08:00 - 17:40น.

Call center : 0-2878-5757

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 Dual band Terminal Equipment

Model Name

GB210

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.2.1
EN 301 511 V9.0.2
EN 50360/EN 50361.2001
EN 60950-1.2001
EN 300328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Watton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number: 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, J / Director

Issued Date

6 Jan. 2009

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel: +31 - 36 - 547 - 8940, Fax: +31 - 36 - 547 - 8974
e-mail : jacob @ lge.com

Signature of representative

GB210 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Getting to know your phone

Earpiece

Display screen

Soft keys


Each of these keys performs the functions indicated by the text on the display immediately above them.

Send key

You can dial a phone number and answer incoming calls.

Clear Key

Deletes a character with each press. Use this key to go back to the previous screen.

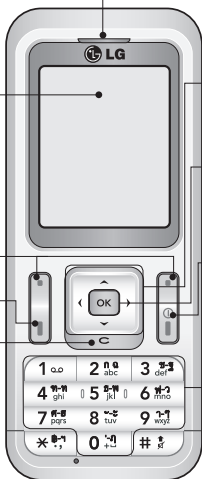

Navigation keys

Use for quick access to phone functions.

OK key


Selects menu options and confirms actions.

End/Power key

Allows you to power the phone on or off, end calls, or return to Standby Mode.

Alphanumeric keys

These keys are used to dial a number in standby mode and to enter numbers or characters in edit mode.

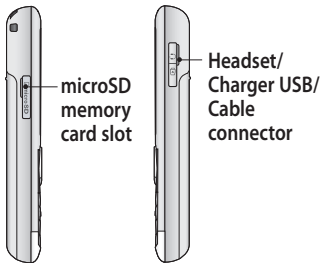

Note: Auto key lock


To prevent unintended operation of your phone, the keypad protection function is automatically enabled. To disable keypad protection, press the left soft key **Unlock** and then press the right soft key **Yes**.

If you want to change the setting of this function, press **Menu > Settings > Security**, and choose **Auto key lock**. Select **'Off'** or set the amount of time before Auto key locks.

Installing a memory card

Lift the memory card cover and insert a micro SD card with the golden contact area facing downwards. Close the memory card cover so that it clicks shut.

To remove a memory card, gently push it as shown in the diagram.

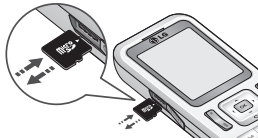

Note: A memory card is an optional accessory.

Formatting the memory card

Press **Menu** and select **Settings**. Choose **Memory status**, select **External memory** and press **Format**.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Installing the SIM Card and Charging the Battery


Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! › The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert the battery
- 5 Close the battery cover
- 6 Charge your battery

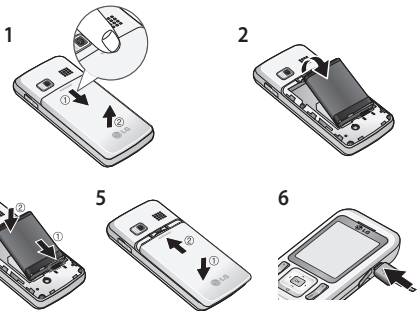

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Menu map

Games & Apps

- 1 Games
- 2 Applications
- 3 Network profiles

Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information

Organizer

- 1 Calendar
- 2 Memo
- 3 To do

Multimedia

- 1 MP3 player
- 2 Camera
- 3 Video camera
- 4 FM radio
- 5 Voice recorder

Messaging

- 1 New message
- 2 Inbox
- 3 Bluetooth box
- 4 Drafts
- 5 Outbox
- 6 Sent
- 7 Listen to voicemail
- 8 Info messages
- 9 Templates
- 0 Settings

My stuff

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Others
- 5 External memory

Profiles

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset

Contacts

- 1 Search
- 2 New contact
- 3 Speed dial
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information

Tools

- 1 Alarm clock
 - 2 Calculator
 - 3 Stopwatch
 - 4 Unit converter
 - 5 World clock
 - 6 SIM services*
- * This feature depends on SIM and the network services.

Browser

- 1 Home
- 2 Google Search
- 3 Bookmarks
- 4 Enter address
- 5 History
- 6 Saved pages
- 7 Settings
- 8 Information

Connectivity

- 1 Bluetooth
- 2 Network
- 3 USB connection

Settings

- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Shortcut
- 5 Call
- 6 Security
- 7 Flight mode
- 8 Power save
- 9 Reset
- 0 Memory status

Calls

Making a call





1 Key in the number using the keypad. To delete a digit press




2 Press Send key to initiate the call.

3 To end the call, press End key.



TIP! To enter + when making an international call, press and hold 0.

TIP! To adjust the volume during a call, use   and  .

Making a call from your contacts

1 Press  to open the address book.

2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press 6 three times.

3 To scroll through the contacts and their different numbers use  and .

4 Press Send key to initiate the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press Send key to answer the call.

While your phone is ringing, select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting. Press End key or **Reject** to reject the incoming call.

Note: The rejected call will appear under Missed Call list.

Using the speakerphone

During a call, you can activate speakerphone by pressing OK key and you can use the handset in hands-free.

If the speakerphone is active, press OK key again to resume normal handset conversation mode.

Viewing your call logs

You can check the record of missed, received, and dialled calls only if the network supports the Calling

Line Identification (CLI) within the service area. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call durations. Press **Menu**, select **Call history**.

Changing the call settings


You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call**.



- **Call divert** - Choose whether to divert your calls.
- **Call barring** – Select when you would like calls to be barred.
- **Fixed dial number** – Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.
- **Answer mode** - Choose whether to answer the phone using any key or send key only.

- **Send my number** - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)
- **Call waiting** - Be alerted when you have a call waiting. (Depends on your network provider.)
- **Minute minder** - Select **On** to hear a tone every minute during a call.
- **Auto redial** - Choose **On** or **Off**.
- **Send DTMF tones** - Choose **On** or **Off**.

Contacts




Searching for a contact

- 1 Press **Contacts** and choose **Search**, select **Contacts** from the **Menu** screen or press  from the standby screen.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, press 6 three times. Then press **Search**.

- 3 To scroll through the contacts and their different numbers use  and .

Adding a new contact


- 1 Press **Contacts** and choose **New contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

Note: When you are storing a contact's email address, press  to enter a symbol and scroll with  and  until you see @.

Messaging

Your GB210 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) and Bluetooth, as well as the network's service messages.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between SMS mode and MMS mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using either the T9 predictive mode or Abc manual mode. You can switch text input mode by pressing .
- 5 Press **Options** and choose **Insert** to add an **Image**, **Sound**, **Video**, **Symbol**, **Text template**, **Emoticon**, **Name & Number**, **New slide**, **Subject** or **More (Contact/My business card/Schedule/Memo/To do)**.
- 6 Press **Options** and choose **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.

8 Press OK key.

TIP! You can select your message type as SMS or MMS when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, press **Menu > Messaging > Settings > Text message**, and choose **Send long text as**.

WARNING: If an Image, Sound, Video, New slide or Subject is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Bluetooth message

To send/receive the message via Bluetooth, you should switch on the Bluetooth.

Bluetooth box

All messages you receive via Bluetooth are placed into your Bluetooth Inbox. Here you can read, reply to and forward your messages.

Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

MP3 player

Your GB210 has a built-in MP3 player so you can play all your favourite music.

Playing a song

- 1 Press **Menu** and select **Multimedia**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Press OK (▶) key.
- 3 While music is playing, press OK key to pause the song.
- 4 Press ▶▶ to skip to the next song.
- 5 Press ◀◀ to skip to the previous song.
- 6 While music is playing, press OK key and select ◻◻ to stop the music and return to the MP3 player menu.

TIP! To change the volume while listening to music, use ◻◻ and ◻◻.

TIP! When an MP3 track is playing on the MP3 player, if you press ◻◻, you can use BGM mode. In BGM (Background Music) mode, MP3 can be played while other functions are being used. BGM can be stopped on the MP3 player screen.

Camera

Taking a quick photo

Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

- 1 Press **Menu** and select **Multimedia**, select **Camera** to open the viewfinder.
- 2 Holding the phone vertically, point the lens towards the subject of the photo.
- 3 Press OK key to take a photo.

Video camera

Shooting a quick video

You can record and save a video clip.

- 1 Press **Menu** and select **Multimedia**, scroll down and select **Video camera** to open the viewfinder.
- 2 Point the camera lens towards the subject of the video.
- 3 Press **OK** key to start recording.
- 4 **REC** will appear in the viewfinder and a timer will show the length of your video.
- 5 Press **Stop** to stop recording.



FM radio

Your GB210 has an FM radio feature so you can tune into your favourite stations to listen on the move.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

Listening to the radio

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

TIP! To change the volume while listening to the radio, use  and .

TIP! You can listen to the radio via built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.

Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Multimedia**, then choose **Voice recorder**.
- 2 Press **OK** key to begin recording.
- 3 Choose **Stop** to end the recording.
- 4 Press **Options** and choose **Play** to listen to the voice memo.

TIP! You can listen to all of the voice recordings you have saved by selecting **Options** and **Album**.

My stuff

You can store any multimedia files into your phone's memory so that you have easy access to all of your images, sounds, videos, others and games.

You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **My stuff**. Press **Menu** then select **My stuff** to open a list of folders.

Games and Apps

Your GB210 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press **Menu** and select **Games & Apps**.

Organizer / Tools

Using the calendar

(**Menu** > **Organizer** > **Calendar**)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Adding a memo

(**Menu** > **Organizer** > **Memo**)

You can register your own memos here.

Adding an item to your to do list

(**Menu** > **Organizer** > **To do**)

You can view, edit and add tasks to do.

Setting your alarm

(**Menu** > **Tools** > **Alarm clock**)

You can set up to 5 alarm clocks to go off at a specified time.

Using your calculator

(**Menu > Tools > Calculator**)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Using the stopwatch

(**Menu > Tools > Stopwatch**)

This option allows you to use the function of a stopwatch.

Converting a unit

(**Menu > Tools > Unit converter**)

This converts many measurements into a unit you want.

Adding a city to your world clock

(**Menu > Tools > World clock**)

You can add a required city to the list of world clock. You can also check the current time of Greenwich Mean Time (GMT) and major cities around the world.

SIM services

(**Menu > Tools > SIM services**)

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Browser

Accessing the browser

You can launch the wap browser and access the homepage of the activated profile on browser settings. You can also manually enter an URL address and access the associated wap page.

- 1 Press **Menu** and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately, select **Enter address** and type in your desired URL.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Google Search

You can access Google Mobile Internet Service. To access Google Search services, press **Menu** and select **Browser** then **Google Search**.

Note: This is dependent on Network Services. You may be unable to access **Google Search** in some countries.

Connectivity

Changing your connectivity settings (**Menu** > **Connectivity**)

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from switch on. If you want to change any settings, use this menu. You can configure the network setting and data access profiles in this menu.

- **Bluetooth** - Setup your GB210 for Bluetooth® use. You can adapt your visibility to other devices or search through devices your phone is paired with.
 - **Network** - Your GB210 connects automatically to your preferred network. To change these settings use this menu. You can also add new access points using this menu.
 - **USB connection** - Choose **Data service** and synchronise your GB210 using the LG PC Suite software to copy files from your phone. If you have a memory card inserted, select **Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the GB210 removable device folder.
- Note:** To use the USB mass storage function, you will need to insert an external memory card in your phone.

Changing your Bluetooth settings

- 1 Press **Menu** and select **Connectivity**. Choose **Bluetooth**.
- 2 Choose **Bluetooth settings**. Make your changes to:
 - **My visibility** - Choose whether to **Show** or **Hide** your device to others.
 - **My name** - Enter a name for your LG GB210.
 - **My address** - View your Bluetooth address.
 - **Primary storage** - Choose the default location you prefer items to be saved to.

Note: To use the primary storage function, you will need to insert an external memory card in your phone.

Pairing with another Bluetooth device

By pairing your GB210 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth settings**

- menu, by selecting **My visibility**, then **Show**.
- 2 Select **Device list** from the **Bluetooth** menu and choose **New**.
- 3 Your GB210 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Pair** and enter the passcode then choose OK key.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Profiles

Changing your profiles (Menu > Profiles)

You can quickly change your profile from the standby screen. Simply press **|** < **|** then the profile you would like to activate. Choose from **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.

Settings

Changing your date & time

(Menu > Settings > Date & Time)

You can set functions relating to the date and time.

Changing the language

(Menu > Settings > Languages)

You can change the language for the display texts in your phone. This change will also affect the language input mode.

Changing your display settings

(Menu > Settings > Display)

You can change the settings for the phone display.

Changing your shortcuts settings

(Menu > Settings > Shortcuts)

You can change the shortcuts of 4 navigation keys.

Changing your security settings

(Menu > Settings > Security)

Change your security settings to

keep your GB210 and the important information it holds protected.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Auto key lock** - If you activate this function, the key will be locked automatically in standby mode without requesting the action of key.
- **Phone lock** - Choose a security code to lock your phone, **When power on, When SIM changed or Immediately.**
- **Application lock** - You can set the application lock to avoid unauthorized use of Images in phone memory, Calendar, Memo and To do. You will need a security code.
- **Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT

on, and configure the ATMT settings with name, primary number and secondary number. Default ATMT code is "0000."

ATMT SMS will contain information about the stolen phone IMEI, current location (captured as per Cell Broadcast message) & number of the person who is using that handset.

- **Change codes** - Change your **Security code**, **PIN code** (This menu item will appear if PIN code request is set to On), **PIN2 code** or **ATMT code**.

Using flight mode

(**Menu > Settings > Flight mode**)

Use this function to switch the flight mode On or Off. You will not be able to make calls, connect to the Internet, send messages when Flight mode is switched On.

Note: Bluetooth can be turned On in Flight mode by manually selecting the option.

Power save

(**Menu > Settings > Power save**)

If you set Always on, you can save the battery power. Choose to switch the power save settings **Always on**, **Night only** or **Off**.

Resetting your phone

(**Menu > Settings > Reset**)

Use **Reset** to reset all the settings to their factory definitions. You need the security code to activate this function. The default number is "0000".

Viewing memory status

(**Menu > Settings > Memory status**)

Your GB210 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately). You can use the memory manager to determine how each memory is used and see how much space is available.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GB210 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest

certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.972 W/kg (10g) and when worn on the body is 1.39 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Guidelines for safe and efficient use (Continued)

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

Guidelines for safe and efficient use (Continued)

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

Guidelines for safe and efficient use (Continued)

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.

Guidelines for safe and efficient use (Continued)

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children.

It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

Guidelines for safe and efficient use (Continued)

- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Technical data

General

Product name : GB210
System : GSM 900 /
DCS 1800

Ambient Temperatures

Max : +55°C (discharging)
+45°C (charging)

Min : -10°C

Bluetooth QD ID B014921

LG Service Center

by LG Electronics (Thailand)
Co. Ltd.

72/127 Somdetprachaw
Taksin Rd., Bookalo,
Thonburi, Bangkok 10600

Working day : Mon-Fri,
08:00 - 17:40

Call center : 0-2878-5757

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 Dual band Terminal Equipment

Model Name

GB210

Trade Name

LG

C E 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.2.1

EN 301 511 V9.0.2

EN 50360/EN 50361.2001

EN 60950-1.2001

EN 300328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

European Standard Center

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1527 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8974
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyun, Ji / Director 6 Jan. 2009

Signature of representative

