



ไทย  
ENGLISH



## KM380T

ข้อมูลบางอย่างในคู่มือเล่มนี้  
อาจแตกต่างจากโทรศัพท์ ของคุณ  
ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์  
หรือผู้ให้บริการของคุณ



[www.lgmobile.com](http://www.lgmobile.com)

P/N : MMBB0288402 (1.0)

CE0168

Bluetooth QD ID B013827

# | KM380T | คู่มือการใช้

คู่มือนี้จะช่วยให้คุณทำความรู้จักโทรศัพท์มือถือรุ่นใหม่ของคุณ  
โปรดดูข้อมูลเพิ่มเติมในคู่มือผู้ใช้ในแผ่นซีดีที่ใหม่มาด้วย  
ข้อมูลบางอย่างในคู่มือเล่มนี้ อาจแตกต่างจากโทรศัพท์ของคุณ  
ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์ หรือผู้ให้บริการของคุณ



# สารบัญ

<b>เริ่มทำความรู้จักกับโทรศัพท์ของคุณ</b>	<b>3</b>	<b>วิทยุ FM</b>	<b>13</b>
<b>การใส่ซิมและแบตเตอรี่ / การดหน่วยความจำ</b>	<b>5</b>	<b>เครื่องบันทึกเสียง</b>	
<b>แผนผังเมน</b>	<b>6</b>	<b>เพิ่มข้อมูล</b>	<b>14</b>
<b>การโทร</b>	<b>7</b>	<b>เกมส์&amp;แอปฯ</b>	
การโทรออก		<b>อแอกในเซอร์ / เครื่องมือ</b>	
การโทรออกโดยใช้รายชื่อ		<b>เบราว์เซอร์</b>	<b>15</b>
การรับสายและการปฏิเสธสาย เรียกเข้า		<b>การตั้งค่า</b>	<b>16</b>
การดูบันทึกการโทร	8	การเปลี่ยนแปลงรูปแบบของคุณ	
การเปลี่ยนแปลงการตั้งค่าการโทร		การเปลี่ยนวันที่และเวลา	
<b>รายชื่อ</b>		การเปลี่ยนภาษา	
การค้นหารายชื่อ		การเปลี่ยนการตั้งค่าการ แสดงผล	
การเพิ่มรายชื่อใหม่		การเปลี่ยนการตั้งค่าความ ปลอดภัย	17
<b>ข้อความ</b>	<b>9</b>	การใช้โหมด Flight	
การส่งข้อความ		ประหยัดพลังงาน	
การป้อนข้อความ	10	การรีเซ็ตโทรศัพท์ของคุณ	18
<b>กล้องถ่ายรูป</b>	<b>11</b>	การดูสถานะหน่วยความจำ	
<b>กล้องวิดีโอ</b>		การเปลี่ยนการตั้งค่าการ เชื่อมต่อ	
<b>เครื่องเล่น MP3</b>	<b>12</b>	<b>คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่าง มีประสิทธิภาพ</b>	<b>19</b>
		<b>ข้อมูลทางเทคนิค</b>	<b>26</b>

# เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หูฟัง

หน้าจอหลัก

ปุ่มเลือก (ปุ่มเลือกซ้าย / ปุ่มเลือกขวา)

ปุ่มทั้ง 2 นี้จะทำงานตามฟังก์ชันที่ปรากฏที่ด้านล่างของหน้าจอ

ปุ่มยืนยัน / ปุ่มตกลง  
เลือกตัวเลือกเมนูและยืนยันการดำเนินการ

ปุ่มโทร


เพื่อโทรออกและรับสายเรียกเข้า



ปุ่มนาฬิกา  
เลื่อนขึ้นและลง

ปุ่มลบ/ปุ่มวางสาย  
ลบตัวอักษรครั้งละหนึ่งตัวเมื่อกดปุ่มในแต่ละครั้ง  
ใช้ปุ่มนี้เพื่อกลับไปหน้าจอที่แล้ว วางสายหรือปฏิเสธสายเรียกเข้า (กดค้าง)

ปุ่มตัวเลขและตัวอักษร  
ในโหมดสแตนด์บาย:  
ป้อนหมายเลขเพื่อโทรออก กดค้าง ในโหมดแก้ไข:  
ป้อนตัวเลขและตัวอักษร

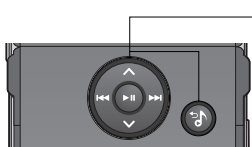

### เครื่องเล่น MP3

เมื่อปิดโทรศัพท์คุณสามารถเข้าใช้เมนู MP3 และเล่นเพลงได้โดยใช้ปุ่ม

เลือกไฟล์เพลงโดยใช้ และ แล้วกดปุ่ม

### ขณะเล่นเพลง:

- กดปุ่ม เพื่อหยุดเล่นเพลงชั่วคราว
- กดปุ่ม เพื่อข้ามไปยังเพลงก่อนหน้า
- กดปุ่ม เพื่อข้ามไปยังเพลงถัดไป
- กดปุ่ม , เพื่อหยุดเล่นเพลง และกลับไปเมนูเพลง



ปุ่มล็อค/ปลดล็อค

ปุ่มปรับระดับเสียง

ช่องเสียบการ์ดหน่วยความจำ



หูฟัง

ช่องเสียบอุปกรณ์ชาร์จ, สายเคเบิล, แขนงพีริ

เครื่องเล่น MP3

เปิดปิดเครื่อง  
เปิด/ปิดโทรศัพท์ (กดค้าง)

หมายเหตุ: ชุดหูฟังที่สองสามารถใช้สำหรับฟังเสียง (MP3) เท่านั้น (เมื่อเสียบชุดหูฟังที่สอง จะโทรออกไม่ได้เมื่อใช้ชุดหูฟังแบบใช้สาย)

# การใส่ซิมและแบตเตอรี่ / การัดหน่วยความจำ


1 กดฝาปิดแบตเตอรี่




2 กดแบตเตอรี่ออก



3 ใส่ซิมการ์ด

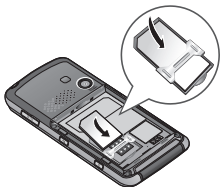

4 ใส่แบตเตอรี่

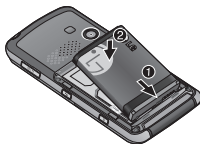

5 ใส่ฝาปิดแบตเตอรี่กลับคืน

6 การชาร์จโทรศัพท์



การใส่การ์ดหน่วยความจำ



# แผนผังเมนู



## เกมส์&แอปฯ

- 1 เกมส์
- 2 แอปพลิเคชัน
- 3 โพรไฟล์เครือข่าย



## ข้อมูลการโทร

- 1 ทุกสาย
- 2 สายไม่ได้รับ
- 3 สายโทรออก
- 4 สายที่ได้รับ
- 5 เวลาโทร
- 6 ค่าโทร
- 7 รายละเอียดข้อมูล



## ออลแกในเซอร์

- 1 ปฏิทิน
- 2 บันทึก



## มีเดียมีเดีย

- 1 กล้องถ่ายรูป
- 2 กล้องวิดีโอ
- 3 วิทยุ FM
- 4 เครื่องบันทึกเสียง



## ข้อความ

- 1 ข้อความใหม่
- 2 ถัดเข้า
- 3 อีเมลบล็อกซ์
- 4 ร่าง
- 5 ถัดออก
- 6 ส่ง
- 7 ฟังข้อความเสียง
- 8 บริการข้อมูล
- 9 ข้อความอัตโนมัติ
- 0 ตั้งค่า



## แฟ้มข้อมูล

- 1 ภาพ
- 2 เสียง
- 3 วิดีโอ
- 4 เอกสาร
- 5 อื่นๆ
- 6 หน่วยความจำภายนอก



## รูปแบบเสียง

- 1 ทั่วไป
- 2 เงียบ
- 3 เฉพาะสัน
- 4 นอกรอบอาคาร
- 5 ชุดหูฟัง



## รายชื่อ

- 1 ค้นหา
- 2 รายชื่อใหม่
- 3 โทรด่วน
- 4 กลุ่ม
- 5 ตัดออกทั้งหมด
- 6 ลบทั้งหมด
- 7 ตั้งค่า
- 8 ข้อมูล



## เครื่องมือ

- 1 นาฬิกาปลุก
- 2 เครื่องคิดเลข
- 3 นาฬิกาจับเวลา
- 4 ตัวแปลงหน่วย
- 5 เวลาทั่วโลก
- 6 บริการซิม



## เบราว์เซอร์

- 1 โยม
- 2 Yahoo! Go
- 3 บุคคาร์ด
- 4 ป้อนแอดเดรส
- 5 ประวัติ
- 6 บันทึกเพจ
- 7 ตั้งค่า
- 8 ข้อมูล



## เครื่องเล่น MP3

- 1 ทุกเพลง
- 2 รายการเพลง
- 3 ศิลปิน
- 4 อัลบั้ม
- 5 แนวเพลง
- 6 สลับเปลี่ยนเพลงทั้งหมด






## ตั้งค่า

- 1 วันที่ & เวลา
- 2 ภาษา
- 3 หน้าจอ
- 4 การเชื่อมต่อ
- 5 การโทร
- 6 ระบบป้องกัน
- 7 โหมด Flight
- 8 ประหยัดพลังงาน
- 9 รีเซ็ต
- 0 สถานะความจำ





# การโทร

## การโทรออก

- 1 ป้อนหมายเลขโดยใช้ปุ่มกด หากต้องการลบที่ละหมายเลข กด 
- 2 กดปุ่ม  เพื่อเริ่มการโทรออก
- 3 หากต้องการวางสาย ให้กดปุ่ม 


**เคล็ดลับ!** ในการป้อน + เมื่อโทรออกต่างประเทศ ให้กดปุ่ม **0** ดังไว้

## การโทรออกโดยใช้รายชื่อ

- 1 แตะ  เพื่อเปิดสมุดแอดเดรส
- 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยใช้ปุ่มกด ตัวอย่างเช่น หากต้องการโทรไปที่ **บ้าน** ให้กด **6** สามครั้ง
- 3 หากต้องการเลื่อนดูรายชื่อและหมายเลขต่างๆ ใช้  และ 
- 4 กดปุ่ม  เพื่อเริ่มการโทรออก

## การรับสายและการปฏิเสธสาย เรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่ม **ยอมรับ** หรือแตะ  เพื่อรับสาย

ขณะโทรศัพท์ของคุณมีเสียงเรียกเข้า ให้เปิดตัวเครื่อง หรือกดปุ่มกล้องถ่ายรูป และเลือก **เจียม** เพื่อปิดเสียงเรียกเข้า วิธีนี้เป็นวิธีที่ดี หากคุณเล็งเปลี่ยนรูปแบบเป็น **เจียม** เมื่ออยู่ในห้องประชุม กดปุ่ม  เพื่อปฏิเสธสายเรียกเข้า

**เคล็ดลับ!** คุณสามารถเปลี่ยนการตั้งค่าบน โทรศัพท์เพื่อรับสายในวิธีที่แตกต่างกัน กดปุ่ม **เมนู** เลือก **ตั้งค่า** แล้วเลือก **การโทร** เลือก **โหมดตอบรับ** และเลือกจาก **เปิดฝ่าพิ้ง**, **ปุ่มใดๆ** หรือ **เฉพาะปุ่มรับสาย**

## การดูบันทึกการโทร

คุณสามารถดูบันทึกของสายที่ไม่ได้รับ สายที่รับ และสายโทรออกได้ หากว่า เครื่องข่ายสนับสนุนการแสดงผลหมายเลขโทรเข้า (Calling Line Identification: CLI) ในพื้นที่ให้บริการหมายเลขและชื่อ (หากมีอยู่) จะปรากฏขึ้นพร้อมกับวันที่และ เวลาที่มีการโทรนั้น และคุณยังสามารถดู ระยะเวลาที่คุณ โทรได้ด้วย กดปุ่ม **เมนู เลือก ข้อมูลการโทร**




## การเปลี่ยนแปลงการตั้งค่าการโทร

คุณสามารถตั้งค่าเมนูที่เกี่ยวข้องกับการ โทรได้ กดปุ่ม **เมนู เลือก ตั้งค่า** แล้วเลือก **การโทร**

## รายชื่อ

### การค้นหารายชื่อ




คุณสามารถค้นหารายชื่อในสมุด โทรศัพท์ได้

- 1 กดปุ่ม **รายชื่อ** แล้วเลือก **ค้นหา** เลือก **รายชื่อ** จากหน้าจอ **เมนู** หรือกดปุ่ม  จากหน้าจอแสดงต้นฉบับ
- 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยใช้ปุ่มกด ตัวอย่างเช่น หากต้องการโทรไปที่ **บ้าน** ให้กด **5** สามครั้ง
- 3 หากต้องการเลื่อนดูรายชื่อและหมายเลขที่ต่างกัน ใช้  และ 

### การเพิ่มรายชื่อใหม่

คุณสามารถเพิ่มรายการในสมุดโทรศัพท์ได้โดยใช้เมนูนี้

- 1 กดปุ่ม **รายชื่อ** แล้วเลือก **รายชื่อใหม่**
- 2 เลือกว่าจะจัดเก็บรายชื่อติดต่อใหม่ ของคุณบน**โทรศัพท์หรือซิมการ์ด**
- 3 ป้อนข้อมูลทั้งหมดที่คุณมีในฟิลด์ที่ใหม่ แล้วเลือก **บันทึก**

**หมายเหตุ:** ขณะที่คุณจัดเก็บอีเมล แอดเดรสของรายชื่อ ให้กด  เพื่อป้อนสัญลักษณ์ และเลื่อนโดยใช้  และ  จนกระทั่งคุณเห็น @

# ข้อความ


โทรศัพท์ KM380T ของคุณประกอบด้วย ฟังก์ชันที่เกี่ยวข้องกับ SMS (Short Message Service), MMS (Multimedia Message Service), อีเมล, บลูทูธ

## การส่งข้อความ

- 1 กดปุ่ม **เมนู** เลือก **ข้อความ** แล้วเลือก **ข้อความใหม่**
- 2 เลือก **ข้อความ** เพื่อส่ง SMS หรือ MMS
- 3 เติเตอร์ข้อความใหม่จะเปิดขึ้น เติเตอร์ข้อความจะรวม SMS และ MMS เข้าด้วยกันเพื่อให้ใช้งาน และ สลับระหว่างโหมด SMS และโหมด MMS ได้อย่างง่ายดาย โหมดเริ่มต้น ของเติเตอร์ข้อความ คือโหมด SMS
- 4 ป้อนข้อความของคุณโดยใช้ระบบ ช่วยสะกดคำ T9 หรือการป้อนตัวอักษร ด้วยตนเอง

**เคล็ดลับ!** คุณสามารถเลือกประเภทข้อความของคุณเป็น SMS หรือ MMS เมื่อคุณป้อนข้อความที่มีความยาวเกินกว่า 2 หน้าในฟิลด์ข้อความ

- 5 กดปุ่ม **ตัวเลือก** แล้วเลือก **แทรก** เพื่อแทรกภาพ, เสียง, วิดีโอ, สัญลักษณ์, ข้อความอัตโนมัติ, อีโมติคอน, ชื่อ & เบอร์, สไลด์ใหม่, หัวเรื่อง หรืออื่นๆ (รายชื่อ/นามบัตร/นัดหมาย)
- 6 กดปุ่ม **ส่งไปที่**
- 7 ป้อนหมายเลขโทรศัพท์หรือกดปุ่ม **ตัวเลือก** และเลือก **รายชื่อ** เพื่อเปิดรายชื่อติดต่อ คุณสามารถเพิ่มรายชื่อติดต่อหลายรายการได้
- 8 กดปุ่ม **ส่ง**

 **คำเตือน:** หากมีการแทรก ภาพ, เสียง, วิดีโอ, สไลด์ใหม่ หรือ หัวเรื่อง ลงในเติเตอร์ข้อความ การส่งข้อความจะ ถูกแปลงเป็นโหมด MMS และคุณจะถูก เรียกเก็บค่าบริการในอัตราดังกล่าว

## การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษร ได้โดยใช้ปุ่มกดของโทรศัพท์ ตัวอย่างเช่น การบันทึกชื่อในรายชื่อ การเขียนข้อความ และการสร้างตาราง นัดหมายในปฏิทินล้วนแต่ต้องใช้การป้อน ข้อความทั้งสิ้น ในเครื่องมีวิธีป้อนข้อความให้เลือกใช้ได้ดังนี้ระบบช่วยสะกด คำ T9, การป้อนตัวอักษรด้วยตนเอง และโหมด 123

**หมายเหตุ:** ฟิลด์บางฟิลด์อาจใช้โหมด ป้อนข้อความได้โหมดเดียว (เช่น หมายเลขโทรศัพท์ในฟิลด์สมุดแอดเดรส)

### ระบบช่วยสะกดคำ T9

ระบบช่วยสะกดคำ T9 จะใช้พจนานุกรม ภายในเครื่อง เพื่อรับรู้คำศัพท์ที่คุณเขียนตามลำดับการกดปุ่ม เพียงกดปุ่มปุ่มตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณจะป้อน พจนานุกรมจะรับรู้ได้ถึงคำศัพท์ เมื่อคุณป้อนตัวอักษรครบทุกตัวแล้ว

### โหมดการป้อนตัวอักษรด้วยตนเอง

โหมดนี้ให้คุณป้อนตัวอักษร โดยการกด ปุ่มที่มีตัวอักษรที่ต้องการหนึ่งครั้ง สองครั้ง สามครั้ง หรือสี่ครั้งจนกระทั่งตัวอักษรที่ต้องการปรากฏขึ้น

### โหมด 123

ป้อนตัวเลขต่างๆ โดยกดปุ่มเพียง ครั้งเดียวต่อตัวเลขหนึ่งตัว คุณสามารถเพิ่มตัวเลขได้ แม้ขณะที่ยังคงอยู่ในโหมดตัวอักษร โดยกดปุ่มตัวเลขที่ต้องการค้างไว้

# กล้องถ่ายรูป

## การถ่ายภาพด้วย

ด้วยการใช้กล้องถ่ายรูปที่อยู่ในตัว โทรศัพท์ คุณสามารถถ่ายภาพบุคคล ได้ นอกจากนี้คุณยังสามารถส่งภาพ ถ่ายไปให้บุคคลอื่นๆ และเลือกภาพ ถ่ายเป็นภาพพื้นหลัง

- 1 กดปุ่ม เมนู แล้วเลือก มัลติมีเดีย เลื่อนลงไปเพื่อเลือก กล้องถ่ายรูป เพื่อเปิดช่องมองภาพ
- 2 ให้ถือโทรศัพท์ในแนวนอน และหัน เลนส์ไปทางสิ่งที่ต้องการถ่าย
- 3 กดปุ่มเลือกตรงกลางเพื่อถ่ายภาพ

## กล้องวิดีโอ

### การถ่ายวิดีโอด้วย


คุณสามารถบันทึกและจัดเก็บไฟล์ วิดีโอได้

- 1 กดปุ่ม เมนู แล้วเลือก มัลติมีเดีย เลื่อนลงไปแล้วเลือก กล้องวิดีโอ เพื่อเปิดช่องมองภาพ
- 2 กดปุ่ม ตัวเลือก แล้วเลือก กล้องวิดีโอ ช่องมองภาพของกล้อง วิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 กดปุ่มเลือกตรงกลางเพื่อเริ่มการบันทึก
- 4 **REC** จะปรากฏขึ้นในมุมซ้ายด้านล่าง ของช่องมองภาพ และตัวตั้งเวลาจะ แสดงระยะเวลาของวิดีโอของคุณ
- 5 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้กดปุ่ม พัก และเริ่มบันทึกต่อโดย เลือก ต่อ
- 6 กดปุ่ม หยุด เพื่อหยุดการบันทึก


# เครื่องเล่น MP3

LG KM380T มีเครื่องเล่น MP3 ภายในตัวให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้

## หมายเหตุ:

- เวลาเล่นเพลง: มากกว่า 50 ชั่วโมง (เมื่อใช้ชุดหูฟังสเตอริโอ)
- เวลาเล่นเพลงจริงจะขึ้นอยู่กับ การ กำหนดค่าเครื่องช่วย, ระดับเสียง, ข้อมูลเพลง, ประเภทการ์ด SD, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม
-  Gracenote® เป็นผู้เสนอเทคโนโลยีการจดจำเพลง (Music recognition technology) และข้อมูลที่เกี่ยวข้อง

## การเล่นเพลง

- 1 กดปุ่ม **เมนู** แล้วเลือก **เครื่องเล่น MP3**
- 2 เลือกเพลงที่คุณต้องการเล่น กดปุ่ม **▶**
- 3 กดปุ่ม **||** เพื่อหยุดเล่นเพลงชั่วคราว
- 4 กดปุ่ม **▶▶** เพื่อข้ามไปยังเพลงถัดไป
- 5 กดปุ่ม **◀◀** เพื่อข้ามไปยังเพลงก่อนหน้า
- 6 เลือก **ตัวเลือก**, **ย่อ** เพื่อซ่อนหน้าจอ เครื่องเล่นเพลง เพื่อให้คุณสามารถใช้ งานโทรศัพท์ต่อไปได้ตามปกติขณะเล่นเพลง
- 7 กดปุ่ม **||**,  เพื่อหยุดเล่นเพลง และกลับไปเมนูเพลง

**เคล็ดลับ!** เมื่อเล่นเพลง MP3 ด้วยเครื่องเล่น MP3 คุณสามารถใช้โหมด BGM ได้หากคุณกดปุ่ม MP3 ครู่หนึ่ง ในโหมด BGM คุณสามารถเล่นเพลง MP3 ขณะที่ใช้งานฟังก์ชันอื่นๆ อยู่ได้ คุณสามารถหยุด BGM บนหน้าจอเครื่องเล่น MP3 ได้

# วิทยุ FM

LG KM380T มีคุณสมบัติวิทยุ FM ดังนั้น คุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

**หมายเหตุ:** คุณจะต้องเสียบชุดหูฟัง เพื่อรับฟังวิทยุ เสียบปลั๊กเข้ากับช่อง เสียบที่ตัวเครื่อง (เป็นช่องเสียบเดียวกับที่ใช้สำหรับชาร์จ)

## การฟังวิทยุ

- 1 กดปุ่ม **เมนู** แล้วเลือก **มีลติมีเดีย** จากนั้นเลือก **วิทยุ FM**
- 2 เลือกหมายเลขช่องของสถานีที่คุณ ต้องการฟัง

หมายเหตุ: คุณสามารถฟังวิทยุผ่านทางลำโพงในตัวเครื่องได้ กด ตัวเลือก เลือก ฟังทาง และเลือก ลำโพง

## เครื่องบันทึกเสียง

ใช้ **เครื่องบันทึกเสียง** เพื่อบันทึกเสียง เดือนความจำหรือเสียงอื่นๆ

### การบันทึกเสียงเดือนของคุณ

- 1 กดปุ่ม **เมนู** แล้วเลือก **มีลติมีเดีย** จากนั้นเลือก **เครื่องบันทึกเสียง**
- 2 กดปุ่ม **●** เพื่อเริ่มบันทึก
- 3 เลือก **พัก** เพื่อหยุดการบันทึกชั่วคราว
- 4 เลือก **บันทึก** เพื่อสิ้นสุดการบันทึก เสียง
- 5 เลือก **▶** เพื่อฟังการบันทึก

**หมายเหตุ:** คุณสามารถฟังการบันทึก เสียงทั้งหมดที่คุณบันทึกไว้ได้โดยการ เลือก **ตัวเลือก** และ **อัลบั้ม**

## เพิ่มข้อมูล

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้ การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์ไฟล์มัลติมีเดียของคุณทั้งหมดจะบันทึกอยู่ใน **เพิ่มข้อมูล** กดปุ่ม **เมนู** แล้วเลือก **เพิ่มข้อมูล** เพื่อเปิดรายการโพลเดอ์

## เกมส์&แอปฯ

โทรศัพท์ KM380T มีมาให้พร้อมทั้งเกมส์ เพื่อช่วยให้คุณได้เพลิดเพลินในยามว่าง หากคุณเลือกดาวน์โหลดเกมส์หรือแอป พลิคชั่นเพิ่มเติม ไฟล์เหล่านั้นจะถูกบันทึกลงในโพลเดอ์นี้ กดปุ่ม **เมนู** แล้วเลือก **เกมส์&แอปฯ**

## ออแกไนเซอร์ / เครื่องมือ

**ปฏิทิน** ( **เมนู** > **ออแกไนเซอร์** > **ปฏิทิน** )

คุณสามารถดูตารางนัดหมายรายเดือน เคอร์เซอร์จะอยู่ที่วันที่ปัจจุบัน และวันที่ลงทะเบียนจะมีการทำเครื่องหมาย

**การเพิ่มบันทึก** ( **เมนู** > **ออแกไนเซอร์** > **บันทึก** )

คุณสามารถบันทึกรายการช่วยจำได้

**การตั้งเวลาปลุก** ( **เมนู** > **เครื่องมือ** > **นาฬิกาปลุก** )

คุณสามารถตั้งปลุกได้ถึง 5 รายการ

## **การใช้เครื่องคิดเลข ( เมน > เครื่องมือ > เครื่องคิดเลข )**

โมดูลการคำนวณช่วยให้คุณใช้งาน ฟังก์ชันการคำนวณขั้นต้น เช่น การบวก การลบ การคูณ และการหาร และฟังก์ชันวิทยาศาสตร์บางอย่าง

## **การใช้นาฬิกาจับเวลา ( เมน > เครื่องมือ > นาฬิกาจับเวลา )**

นาฬิกาจับเวลา ทำหน้าที่เป็นนาฬิกาจับ เวลาที่เรามักพบเห็น และ ใช้เป็นประจำ ในชีวิตประจำวัน

## **การแปลงหน่วย ( เมน > เครื่องมือ > ตัวแปลงหน่วย )**

ใช้แปลงหน่วยวัดให้เป็นหน่วยที่คุณต้องการ ประเภทของหน่วยวัดที่สามารถ แปลงเป็นหน่วยต่างๆ ได้นั้นมีอยู่ 7 ประเภท: สกุลเงิน, พื้นที่, ความยาว, น้ำหนัก, อุณหภูมิ, ปริมาตร และ ความเร็ว

## **การเลือกเมืองลงในเวลาทั่วโลก ( เมน > เครื่องมือ > เวลาทั่วโลก )**

ช่วยให้คุณตรวจสอบเวลาปัจจุบันในโซน เวลาหรือประเทศอื่นได้

## **บริการซิม ( เมน > เครื่องมือ > บริการซิม )**

คุณสมบัตินี้ขึ้นอยู่กับซิมการ์ดและการให้บริการของเครือข่าย ในกรณีที่ซิมการ์ดสนับสนุนบริการ SAT (เช่น SIM Application Toolkit) เมนูนี้จะเป็นการบริการของผู้ให้บริการซึ่ง จัดเก็บไว้ในซิมการ์ด

# **เบราว์เซอร์**

## **การเข้าใช้เว็บไซต์**

ใช้สำหรับเชื่อมต่อกับโฮมเพจ โฮมเพจอาจเป็นไซต์ ที่ได้ ระบุไว้ในรูปแบบ ที่มีการใช้งาน ซึ่งอาจกำหนด ไว้โดย ผู้ให้บริการ ระบบ หากคุณไม่ได้กำหนดไว้ในรูปแบบที่มีการใช้งาน เมนูนี้ช่วยให้คุณจัดเก็บ URL ของเว็บเพจที่ คุณชื่นชอบได้ เพื่อให้ คุณสามารถเชื่อมต่อไปยัง เว็บไซต์ที่คุณต้องการได้ โดยตรง หลังจากป้อน URL ที่ต้องการแล้ว ให้กดปุ่ม ตกลง เมนูนี้จะ แสดงเพจต่างๆที่เบราวส์ไว้ ล่าสุด

- 1 กดปุ่ม **เมนู** แล้วเลือก **เบร่าว์เซอร์**
- 2 ในการเข้าถึงโฮมเพจของเบร่าว์เซอร์ โดยตรง ให้เลือก **โฮม** หรือเลือก **ป้อนแอดเดรส** จากนั้นพิมพ์ URL ที่คุณต้องการ แล้วเลือก **โหลด**

**หมายเหตุ:** ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้น เมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าบริการจ่ายกับผู้ให้บริการเครือข่ายของคุณ


## Yahoo! Go

หากต้องการเข้าใช้บริการของ **Yahoo! Go** ให้กดปุ่ม **เมนู** แล้วเลือก **เบร่าว์เซอร์** จากนั้นเลือก **Yahoo! Go**

**เคล็ดลับ!** คุณอาจไม่สามารถเข้าใช้ **Yahoo! Go** ได้ในบางประเทศ ทั้งนี้ขึ้นกับบริการเครือข่าย

## การตั้งค่า

### การเปลี่ยนแปลงรูปแบบของคุณ

คุณสามารถเปลี่ยนรูปแบบจากหน้าจอ สแตนด์บายของคุณได้อย่างรวดเร็ว เพียงกดปุ่ม  แล้วเลือกรูปแบบที่ คุณต้องการเปิดใช้ เลือก ทั่วไป, เจียบ, เฉพาะสัน, นอกอาคาร และ ชุดหูฟัง

### การเปลี่ยนวันที่และเวลา (เมนู > ตั้งค่า > วันที่ & เวลา)

คุณสามารถตั้งค่าฟังก์ชันเกี่ยวกับวันที่ และเวลาได้

### การเปลี่ยนภาษา (เมนู > ตั้งค่า > ภาษา)

คุณสามารถเปลี่ยนภาษาของข้อความที่ ใช้แสดงบนโทรศัพท์ของคุณ การตั้งค่า เปลี่ยนแปลงนี้มีผลต่อโหมดภาษาด้วย คุณสามารถเปลี่ยนการตั้งค่าของการ แสดงหน้าจอโทรศัพท์ได้

### การเปลี่ยนการตั้งค่าการ แสดงผล (เมนู > ตั้งค่า > หน้าจอ)

คุณสามารถเปลี่ยนการตั้งค่าของการ แสดงหน้าจอโทรศัพท์ได้

## การเปลี่ยนการตั้งค่าความ ปลอดภัย ( เมน > ตั้งค่า > ระบบป้องกัน )

เปลี่ยนการตั้งค่าความปลอดภัย ของคุณเพื่อป้องกันโทรศัพท์ KM380T และข้อมูลที่สำคัญของคุณ

- **แจ้งเครื่องหาย(ATMT)** - เมื่อโทรศัพท์ของคุณถูกขโมย เครื่องจะส่ง SMS ไปยังหมายเลขที่กำหนดไว้โดยเจ้าของที่แท้จริง ผู้ใช้ต้องกำหนดการตั้งค่า ATMT ด้วยชื่อ หมายเลขโทรศัพท์หลัก หมายเลขรอง รหัส ATMT ดีพอลด์ คือ "0000" ATMT SMS จะมีข้อความเกี่ยวกับ IMEI ของโทรศัพท์ที่ถูกขโมย ตำแหน่งปัจจุบัน และหมายเลขของคุณคนที่กำลังใช้ เครื่องดังกล่าว
- **คำขอรหัส PIN** - เลือกรหัส PIN ที่เครื่องจะขอให้คุณป้อนรหัสเมื่อคุณ เปิดเครื่อง
- **ล็อคปุ่มฮัตในมัต** - ถ้าคุณเปิดใช้ฟังก์ชันนี้ ปุ่มกดจะถูกล็อค โดยฮัตโนมัตในโหมดสแตนด์บาย โดยไม่ต้องกดปุ่มใด ๆ
- **ล็อคเครื่อง** - เลือกรหัสความปลอดภัยเพื่อล็อคโทรศัพท์ของคุณ **เมื่อเปิดเครื่อง, เมื่อเปลี่ยนซิม หรือ ทันที**
- **ป้องกันการโทร** - เลือกเวลาที่คุณ ต้องการให้ป้องกันการโทร
- **กำหนดเบอร์โทรออก** - เลือกหมายเลขที่สามารถโทรออกจากโทรศัพท์ของคุณได้ โทรศัพท์ได้ คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการ หมายเลขโทรออกที่กำหนดเท่า นั้นที่สามารถโทรออกจากโทรศัพท์ได้
- **เปลี่ยนรหัส** - เปลี่ยน รหัสป้องกัน, รหัส PIN1 หรือ รหัส PIN2

## การใช้โหมด Flight ( เมน > ตั้งค่า > โหมด Flight )

ใช้ฟังก์ชันนี้เพื่อ **เปิด** หรือ **ปิด** โหมด Flight คุณจะไม่สามารถโทรออก, เชื่อมต่ออินเทอร์เน็ต, ส่งข้อความ หรือใช้บลูทูธได้เมื่อ **โหมด Flight เปิด** อยู่

## ประหยัดพลังงาน ( เมน > ตั้งค่า > ประหยัดพลังงาน )

หากคุณตั้งค่า เปิดเสมอ คุณสามารถประหยัดพลังงานแบตเตอรี่ได้ในขณะที่ไม่ได้ใช้โทรศัพท์ เลือกเพื่อสลับการตั้งค่าประหยัดพลังงาน เปิดเสมอ, เฉพาะกลางคืน หรือ ปิด

## การรีเซ็ตโทรศัพท์ของคุณ ( เมิน > ตั้งค่า > รีเซ็ต )

ใช้ **รีเซ็ต** เพื่อรีเซ็ตการตั้งค่าทั้งหมดเป็น ค่าที่ตั้งมาจากโรงงาน คุณต้องใช้รหัส ป้องกันเพื่อใช้งานฟังก์ชันนี้ รหัส ดีฟอลต์ คือ "0000"

## การดูสถานะหน่วยความจำ ( เมิน > ตั้งค่า > สถานะความจำ )

KM380T ของคุณมีหน่วยความจำให้ เลือกสามแบบ: โทรศัพท์, ซิมการ์ด และหน่วยความจำภายนอก (คุณอาจต้องซื้อการ์ดหน่วยความจำแยกต่างหาก) คุณสามารถใช้ตัวจัดการหน่วยความจำ ในการกำหนดว่าในแต่ละหน่วยความจำ ใช้ หน่วยความจำไปเท่าใด และดูว่ามีพื้นที่ว่างเหลือเท่าใด

## การเปลี่ยนการตั้งค่าการ เชื่อมต่อ ( เมิน > ตั้งค่า > การเชื่อมต่อ )

การตั้งค่าการเชื่อมต่อจะได้รับการตั้ง ค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้น คุณจึงสามารถผลิต เพลินกับโทรศัพท์ ใหม่ของคุณได้ทันทีหากคุณต้องการ เปลี่ยนแปลงการตั้งค่า ให้ใช้เมนูนี้

คุณสามารถกำหนดการตั้งค่าเครือข่าย และโปรไฟล์การเข้าใช้ข้อมูลได้ในเมนูนี้

- **บลูทูธ** - ตั้งค่าโทรศัพท์ KM380T ของคุณให้ใช้บลูทูธ คุณสามารถปรับการมองเห็นของคุณที่มีต่ออุปกรณ์อื่นหรือค้นหาอุปกรณ์ที่โทรศัพท์ของคุณจับคู่ด้วย
- **เครือข่าย** - โทรศัพท์ KM380T จะเชื่อมต่อกับเครือข่ายที่ต้องการได้โดยอัตโนมัติ ในการเปลี่ยนการตั้งค่าเหล่านี้ ให้ใช้เมนูนี้ คุณสามารถเพิ่มจุดเชื่อมต่อ ใหม่โดยใช้เมนูนี้ได้
- **การเชื่อมต่อ USB** - เลือก **เชื่อมต่อข้อมูล**และซิงโครไนซ์โทรศัพท์ KM380T โดยใช้ซอฟต์แวร์ LG PC Suite เพื่อคัดลอกไฟล์จากโทรศัพท์ หากคุณมีการ์ดหน่วยความจำเสียบอยู่ ให้เลือก **ที่เก็บข้อมูล** เพื่อใช้โทรศัพท์ ของคุณในรูปแบบเดียวกับที่คุณใช้ อุปกรณ์หน่วยความจำ USB เชื่อมต่อเครื่องคอมพิวเตอร์ของคุณ และลากแล้ววาง ไฟล์ไปที่โฟลเดอร์ของอุปกรณ์ที่ถอด ออกได้ของโทรศัพท์ KM380T

**หมายเหตุ:** ในการใช้ฟังก์ชันที่เก็บข้อมูล USB คุณจะต้องเสียบการ์ดหน่วยความจำภายนอกในโทรศัพท์

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้ อาจทำให้เกิดอันตรายหรือผิดกฎหมาย ข้อมูลโดยละเอียดเพิ่มเติมได้อธิบาย อยู่ในคู่มือเล่มนี้

## คำเตือน

- ควรปิดโทรศัพท์เคลื่อนที่ทุกครั้งที่อยู่ บนเครื่องบิน
- ห้ามถือโทรศัพท์ในขณะที่ขับรถ
- ไม่ควรใช้เครื่องใกล้สถานีบริการน้ำมัน คลังน้ำมัน โรงงานเคมี หรือบริเวณที่มี การปฏิบัติงานที่เกี่ยวข้องกับการระเบิด
- เพื่อความปลอดภัยของคุณ โปรดใช้ แด่แบตเตอรี่และแท่นชาร์จของแท้ ที่กำหนดให้เท่านั้น
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก  
ขณะ กำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้า ดูดหรือทำให้โทร ศัพท์ชำรุดเสียหายได้
- เก็บโทรศัพท์ในที่ปลอดภัยและห่าง จากมือ เด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำ ใส่ปาก

## ข้อควรระวัง!

- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับ พิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อ การทำงาน ของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- การโทรฉุกเฉินอาจไม่สามารถใช้กับ เครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมด ได้ จึงไม่ควรใช้โทรศัพท์เคลื่อนที่ ของคุณ เพียงอย่างเดียวในกรณี โทรฉุกเฉิน
- เพื่อหลีกเลี่ยงความเสียหายที่อาจ เกิดขึ้นโปรดใช้แต่อุปกรณ์เสริมที่ เป็นของแท้ เท่านั้น

- เครื่องส่งสัญญาณวิทยุทุกชนิดสามารถ ส่งคลื่นรบกวนอุปกรณ์อิเล็กทรอนิกส์ต่างๆ ที่อยู่ใกล้เคียง ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับกรบกวนบ้างเล็กน้อย
- ควรทิ้งแบตเตอรี่ตามวิธีที่กฎหมาย กำหนด
- ห้ามถอดแยกเครื่องโทรศัพท์หรือ แบตเตอรี่
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูก ต้อง อาจทำให้เกิดการระเบิดได้

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้ อาจทำให้เกิดอันตรายหรือ ผิดกฎหมาย ข้อมูลโดยละเอียดเพิ่มเติมได้อธิบาย อยู่ในคู่มือเล่มนี้

## การรับพลังงานคลื่นความถี่วิทยุ

### ข้อมูลเกี่ยวกับการรับพลังงานคลื่น ความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น KM380T นี้ ได้รับ การออกแบบตรงตามข้อกำหนด เรื่องความปลอดภัยในการใช้งานอื่น เกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทาง วิทยาศาสตร์ที่ รวมถึงการกำหนดค่า เพื่อไว้ ทั้งนี้เพื่อความปลอดภัยของ ทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงาน คลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้ วิธีการที่ได้มาตรฐาน โดยให้เครื่อง โทรศัพท์ส่งสัญญาณที่แรงที่สุดและ มีการ รับรองขนาดสัญญาณแล้ว โดยการส่ง สัญญาณดังกล่าวได้กระทำ ในทุกย่าน ความถี่ที่โทรศัพท์ใช้อยู่
- แม้ว่าจะระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่น จะได้รับการออกแบบให้อยู่ ภายในข้อ กำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ย ตามเนื้อเยื่อหนัก (10) กรัม

- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASy4 ขณะถือแนบกับหูคือ 0.700 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.766 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ใน ประเทศ/ พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื่องเยื่อหนึ่ง (1) กรัม (ตัวอย่างเช่น สหรัฐอเมริกา แคนาดา ออสเตรเลีย และไต้หวัน)

## การดูแลและการบำรุงรักษา เครื่องโทรศัพท์

### คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จแบตเตอรี่ และ อุปกรณ์เสริมที่ผ่านการรับรอง ให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ ที่ไม่ผ่านการรับรองดังกล่าวอาจทำให้การ รับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทร ศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความ รู้เมื่อจำเป็นต่อมึงมีการตรวจซ่อม
- ควรวางให้ห่างจากอุปกรณ์เครื่อง ใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ หรือเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่ง ความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- และไม่ควรวางเครื่องโทรศัพท์ไว้ใน เตาอบไมโครเวฟ เพราะอาจทำให้ แบตเตอรี่ระเบิดได้
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ ที่มีการสั่นสะเทือนหรือการกระแทก
- สารเคลือบบนตัวเครื่องโทรศัพท์อาจ หลุดลอกได้ หากหมุดด้วยวัสดุหรือสิ่งๆ ที่ ทำจากไวนิล
- ห้ามใช้สารเคมีที่มีฤทธิ์รุนแรง (เช่น แอลกอฮอล์, เบนซิน, ทินเนอร์ เป็นต้น) หรือสารซักฟอกทำความสะอาด สะอาดเครื่องโทรศัพท์ เพราะอาจ ทำให้เกิดเพลิงไหม้ได้
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ ที่มีฝุ่นหรือควันมากเกินไป

- อย่าวางโทรศัพท์ใกล้บัตรเครดิต หรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูล ในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะ อาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของ เหลลหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟังและชุดหูฟัง ด้วยความระมัดระวัง ตรวจสอบให้แน่ใจว่าเก็บสายเคเบิลอย่างปลอดภัยแล้ว และอย่าแตะเสาอากาศโดยไม่จำเป็น
- โปรดถอดสายเคเบิลข้อมูลก่อนเปิด เครื่อง

### **อุปกรณ์อิเล็กทรอนิกส์**

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่ง คลื่นรบกวนได้ ทำให้มีผลต่อการทำงาน ของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาต เสียก่อน หลีกเลี่ยงการวางโทรศัพท์ เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ (เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น)
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่อง ช่วยฟังได้
- ดังนั้น โทรศัพท์น วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการ รบกวนบ้างเล็กน้อย

### **ความปลอดภัยบนท้องถนน**

ตรวจสอบกฎหมายและระเบียบข้อบังคับ ว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ใน พื้นที่ที่คุณขับขี่ ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัด ระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี

- ขับเข้าข้างทาง แล้วจอดรถก่อนโทร ออกหรือรับสาย หากสภาพการขับช้ำ ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผล กระทบต่อระบบอิเล็กทรอนิกส์บาง ชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ หรืออุปกรณ์เพื่อความปลอดภัย
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์เพกพาแบบไร้สาย ซึ่งขัดขวางการทำงานของถุงลมเพราะ อาจทำให้คุณได้รับบาดเจ็บรุนแรง เนื่องจากการทำงานผิดปกติของถุง ลมนิรภัยได้

หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่ เหมาะสม เพื่อให้คุณยังสามารถได้ยิน เสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่ง เมื่อกำลังจะข้ามถนน

### **หลีกเลี่ยงการทำลายความ สามารถในการได้ยิน**

ความสามารถในการได้ยินอาจถูกทำลาย ได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิด หรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลง และระดับเสียง สายสนทนาไว้ในระดับที่เหมาะสม

### **บริเวณที่ทำให้เกิดระเบิดได้**

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมี การระเบิดต่างๆ ให้ปฏิบัติตามข้อห้าม อย่างเคร่งครัด และทำตามข้อกำหนด หรือกฎเกณฑ์ต่างๆ

### **บริเวณที่อาจเกิดการระเบิดได้**

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลว ที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรือ อุปกรณ์เสริมต่างๆ ของคุณ

## บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่น รบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อน ขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นโดยไม่ได้รับการอนุญาตจาก พนักงานประจำเครื่องเสียก่อน

## เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจาก มือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่ง อาจทำอันตรายหาก เด็กนำใส่ปาก

## การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับ เครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์เคลื่อนที่ของคุณ เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

## ข้อมูลเกี่ยวกับแบตเตอรี่และ การดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่น เนื่องจากไม่มี Memory Effect ประสิทธิภาพของ แบตเตอรี่จึงไม่ ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ สัดวงจร
- รักษาความสะอาดของหน้าสัมผัส แบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อ ประสิทธิภาพการใช้งานลดต่ำลงจนถึง ระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้ สามารถชาร์จใหม่ได้หลายร้อยครั้งจน กว่าจำเป็นจะต้องเปลี่ยนก่อนใหม่ ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน

- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตใน การทิ้งแบตเตอรี่ที่ใช้แล้ว
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้า เสียบทุกครั้งหลังจากแบตเตอรี่โทร ศัพท์เต็มแล้วเพื่อลดการใช้พลังงาน สิ้นเปลืองของอุปกรณ์ชาร์จ

# ข้อมูลทางเทคนิค

## ทั่วไป

ชื่อผลิตภัณฑ์ : KM380T  
ระบบ : GSM 900 / DCS 1800 /  
PCS 1900

## อุณหภูมิแวดล้อม

สูงสุด : +55°C (คายประจุ)  
+45°C (ขณะชาร์จ)

ต่ำสุด : -10°C

## Bluetooth QD ID B013827

## ศูนย์บริการ LG โดย

บริษัท แอจจี อีเลคทรอนิกส์  
(ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน  
เลขที่ 72/127

ถ. สมเด็จพระเจ้าตากสิน  
แขวงบุคคลโล เขตธนบุรี  
กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ - ศุกร์,  
เสาร์ที่ 2 และ 4 ของเดือน  
08:00 - 17:00น.

Call center : 0-2878-5757

## Declaration of Conformity



### Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM380T

Trade Name

LG

# CE0168

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1  
EN 300 328 V 1.6.1  
EN 60950-1 : 2001  
EN 50360/EN 50361 : 2001  
EN 301 511 V9.0.2

### Supplementary Information

The conformity to above standards is verified by BABT.

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyun, Ji / Director

Issued Date

14. April. 2008

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31-36-547-8940, Fax : +31-36-547-8794  
e-mail : jacob@lgs.com

Signature of representative

# | KM380T | User Guide

This guide will help you understand your new mobile phone.

For more details, please refer to the user guide in the supplied CD.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



# Contents

<b>Getting to know your phone</b>	<b>3</b>	<b>FM radio</b>	<b>13</b>
<b>Installing the SIM and battery / Memory card</b>	<b>5</b>	<b>Voice recorder</b>	
<b>Menu map</b>	<b>6</b>	<b>My stuff</b>	<b>14</b>
<b>Calls</b>	<b>7</b>	<b>Games and Apps Organiser / Tools</b>	
Making a call		<b>Browser</b>	<b>15</b>
Making a call from your contacts		<b>Settings</b>	<b>16</b>
Answering and rejecting a call		Changing your profiles	
Viewing your call logs	8	Changing your date & time	
Changing the call settings		Changing the language	
<b>Contacts</b>		Changing your display settings	
Searching for a contact		Changing your security settings	
Adding a new contact		Using flight mode	17
<b>Messaging</b>	<b>9</b>	Power save	
Sending a message		Resetting your phone	18
Entering text	10	Viewing memory status	
<b>Camera</b>	<b>11</b>	Changing your connectivity settings	
<b>Video camera</b>		<b>Guidelines for safe and efficient use</b>	<b>19</b>
<b>MP3 Player</b>	<b>12</b>	<b>Technical data</b>	<b>25</b>

# Getting to know your phone

**Earpiece**

**Main screen**

**Soft keys**

Performs the function indicated at the bottom of the display.

**Confirm key**

Selects menu options and confirms actions.

**Call key**

Dials a phone number and answers incoming calls.

**Navigation keys**

Use for quick access to phone functions.


**Clear/End Key**

Deletes a character with each press. Use this key to go back to the previous screen.  
Ends or rejects a call.


**Alpha numeric keys**




These keys are used to dial a number in standby mode or to enter numbers or characters in edit mode.

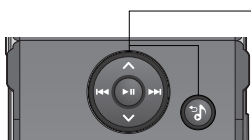








### MP3 Player keys

When the flip is closed, you can access the MP3 player menu and play the music file by using .

From the list select the music file by using  and , then press  key.

### While playing music:

- Press  to pause the song.
- Press  to skip to the previous song.
- Press  to skip to the next song.
- Press ,  to stop the music and return to the music menu.



Lock/Unlock key

Volume key

Micro SD memory card slot



Second headset connector

Headset/Charger/  
USB Cable connector

MP3 player key

Power key

Turns the phone on/off.  
(hold down)

**Note:** Second headset can be used for listening sounds(MP3) only.

(When the second headset is inserted, phone call is not available with wired headset.)

# Installing the SIM and battery / Memory card


1 Remove the battery cover.




2 Remove the battery.



3 Install the SIM card.

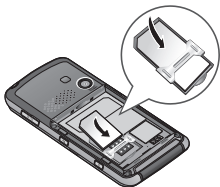

4 Install the battery.

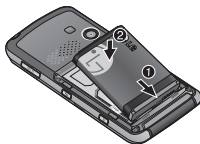

5 Replace the battery cover.

6 Charging your phone.



Installing a memory card



# Menu map



## Games & Apps

- 1 Games
- 2 Applications
- 3 Network profiles



## Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



## Organiser

- 1 Calendar
- 2 Memo



## Multimedia

- 1 Camera
- 2 Video camera
- 3 FM radio
- 4 Voice recorder



## Messaging

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Drafts
- 5 Outbox
- 6 Sent
- 7 Listen to voicemail
- 8 Info messages
- 9 Templates
- 0 Settings



## My stuff

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Documents
- 5 Others
- 6 External memory



## Profiles

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



## Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



## Tools

- 1 Alarm clock
- 2 Calculator
- 3 Stopwatch
- 4 Unit converter
- 5 World clock
- 6 SIM services



## Browser

- 1 Home
- 2 Yahoo! Go
- 3 Bookmarks
- 4 Enter address
- 5 History
- 6 Saved pages
- 7 Settings
- 8 Information



## MP3 player

- 1 All songs
- 2 My playlist
- 3 Artists
- 4 Albums
- 5 Genres
- 6 Shuffle all songs






## Settings

- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Connectivity
- 5 Call
- 6 Security
- 7 Flight mode
- 8 Power save
- 9 Reset
- 0 Memory status





# Calls

## Making a call

- 1 Key in the number using the keypad. To delete a digit press .
- 2 Press  to initiate the call.
- 3 To end the call, press .

**TIP!** To enter + when making an international call, press and hold 0.


## Making a call from your contacts

- 1 Press  (home screen short cut is on) to open the address book.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, to find the contact - Office, press 6 three times.
- 3 To scroll through the contacts and their different numbers use  and .
- 4 Press  to initiate the call.

## Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing, select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or **Reject** to reject the incoming call.

**TIP!** You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Flip open**, **Any key** or **Send key only**.

## Viewing your call logs

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call durations. Press **Menu**, select **Call history**.




## Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call**.

# Contacts

## Searching for a contact




You can search for a contact in your contacts.

- 1 Press **Contacts** and choose **Search**, select **Contacts** from the **Menu** screen or press  from the standby screen.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, to find the contact - Office, press **6** three times.
- 3 To scroll through the contacts and their different numbers use  and .

## Adding a new contact

You can add a new contact in your contacts.

- 1 Press **Contacts** and choose **New contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

**Note:** When you are storing a contact's email address, press  to enter a symbol and scroll with  and  until you see @.

# Messaging


Your KM380T includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), email and Bluetooth, as well as the network's service messages.

## Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between SMS mode and MMS mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using either the T9 predictive mode or Abc manual mode.

**TIP!** You can select your message type as SMS or MMS when you enter a text longer than 2 pages in the message field.

- 5 Press **Options** and choose **Insert** to add an **Image, Sound, Video, Symbol, Text template, Emoticon, Name & Number, New slide, Subject** or **More (Contact/My business card/Schedule)**.
- 6 Press **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Press **Send**.

 **WARNING:** If an **Image, Sound, Video, New slide** or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

## Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC/Abc/abc manual mode and 123 mode.

**Note:** Some fields may allow only one text input mode (e.g. telephone number in address book fields).

### T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

### ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

### 123 mode

Type numbers using one keystroke per number. You can also add numbers whilst remaining in letter modes by pressing and holding the desired key.

# Camera

## Taking a quick photo

Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

- 1 Press **Menu** and select **Multimedia**, select **Camera** to open the viewfinder.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press the centre soft key to take a photo.

## Video camera

### Shooting a quick video


You can record and save a video clip.

- 1 Press **Menu** and select **Multimedia**, scroll down and select **Video camera** to open the viewfinder.
- 2 Point the camera lens towards the subject of the video.
- 3 Press the centre soft key to start recording.
- 4 **REC** will appear in the bottom center of the viewfinder and a timer will show the length of your video.
- 5 To pause the video press **Pause** and resume by selecting **Resume**.
- 6 Press **Stop** to stop recording.







# MP3 Player

Your LG KM380T has a built-in MP3 player so you can play all your favourite music.

## Note:

- Music Play time: Up to 50hrs (when using the stereo headset)
- Actual Music play time will depend on network configuration, volume level, music contents, SD card type, usage patterns, battery and environmental conditions.
-  Music recognition technology and related data are provided by Gracenote®.

## Playing a song

- 1 Press **Menu** and select **MP3 Player**.
- 2 Choose **All songs** then select the song you want to play. Press .
- 3 Press  to pause the song.
- 4 Press  to skip to the next song.
- 5 Press  to skip to the previous song.
- 6 Select **Options**, **Minimize** to hide the music player screen so that you can continue using your phone as normal while music is playing.
- 7 Select  and  to stop the music and return to the MP3 player menu.

**TIP!** When an MP3 track is playing on the MP3 player, if you press the MP3 short key, you can use BGM mode. In BGM (Background Music) mode MP3 can be played while other functions are being used. BGM can be stopped on the MP3 player screen.

## FM radio

Your LG KM380T has an FM radio feature so you can tune into your favourite stations to listen on the move.

**Note:** You will need to insert your headset in order to listen to the radio. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

### Listening to the radio



- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

**Note:** You can listen to the radio via built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.

## Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

### Recording your voice memo

- 1 Press **Menu** and select **Multimedia**, then choose **Voice recorder**.
- 2 Press  to begin recording.
- 3 Select **Pause** to pause the recording.
- 4 Choose **Stop** to end the recording.
- 5 Select  to listen to the recording.

**Note:** You can listen to all of the voice recordings you have saved by selecting **Options** and **Album**.

## My stuff

You can store any multimedia files into your phone's memory so that you have easy access to all of your images, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **My stuff**. Press **Menu** then select **My stuff** to open a list of folders.

## Games and Apps

Your KM380T comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press **Menu** and select **Games & Apps**.

## Organiser / Tools

**Using the calendar** ( Menu > Organiser > Calendar )

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

**Adding a memo** ( Menu > Organiser > Memo )

You can register your own memos here.

**Setting your alarm** ( Menu > Tools > Alarm clock )

You can set up to 5 alarm clocks to go on at a specified time.

**Using your calculator** ( Menu > Tools > Calculator )

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

## Using the stopwatch ( Menu > Tools > Stopwatch )

This option allows you to use the function of a stopwatch.

## Converting a unit ( Menu > Tools > Unit converter )

This converts many measurements into a unit you want.

## Adding a city to your world clock ( Menu > Tools > World clock )

You can check the current time of major cities around the world.

## SIM services ( Menu > Tools > SIM services )

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

# Browser

## Accessing the web

You can launch the web browser and access the homepage of the activated profile on browser settings. You can also manually enter an URL address and access the associated web page.

- 1 Press **Menu** and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately, select **Enter address** and type in your desired URL, followed by **Connect**.

**Note:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Yahoo! Go



You can access Yahoo Mobile Internet Service.

To access Yahoo! Go services, press **Menu** and select **Browser** then **Yahoo! Go**.

**TIP!** You may be unable to access **Yahoo! Go** in some countries. This is dependent on Network Services.

## Settings

### Changing your profiles

You can quickly change your profile from the standby screen. Simply press  () then the profile you would like to activate. Choose from **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.

### Changing your date & time ( Menu > Settings > Date & Time )

You can set functions relating to the date and time.

### Changing the language ( Menu > Settings > Language )

You can change the language for the display texts in your phone. This change will also affect the language input mode.

### Changing your display settings ( Menu > Settings > Display )

You can change the settings for the phone display.

### Changing your security settings ( Menu > Settings > Security )

Change your security settings to keep your KM380T and the important information it holds protected.

- **Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with name, primary phone number, secondary number. User has to Set ATMT ON to activate the ATMT feature. Default ATMT code is "0000". ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.
- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Auto key lock** - If you activate this function, the key will be locked automatically in standby mode without requesting the action of key when flip is closed.
- **Phone lock** - Choose a security code to lock your phone, **When power on, When SIM changed or Immediately.**
- **Call barring** - Select when you would like calls to be barred.
- **Fixed dial number** - Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.
- **Change codes** - Change your **Security code, PIN1 code, PIN2 code and ATMT code.**

### Using flight mode ( Menu > Settings > Flight mode )

Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the Internet, send messages or use Bluetooth when **Flight mode** is switched **On**.

### Power save ( Menu > Settings > Power save )

If you set **Always on**, you can save the battery power when you don't use the phone. Choose to switch the power save settings **Always on, Night only** or **Off**.

## Resetting your phone ( Menu > Settings > Reset )

Use **Reset** to reset all the settings to their factory definitions. You need the security code to activate this function. The default number is "0000".

## Viewing memory status ( Menu > Settings > Memory status )

Your KM380T has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately). You can use the memory manager to determine how each memory is used and see how much space is available.

## Changing your connectivity settings ( Menu > Settings > Connectivity )

Your connectivity settings have already been set up by your network operator. If you want to change any settings, use this menu.

You can configure the network setting and data access profiles in this menu.

- **Bluetooth** - Setup your KM380T for Bluetooth® use. You can adapt your visibility to other devices or search through devices your phone is paired with.
- **Network** - Your KM380T connects automatically to your preferred network. To change these settings use this menu. You can also add new access points using this menu.
- **USB connection** - Choose **Data service** and synchronise your KM380T using the LG PC Suite software to copy files from your phone. If you have a memory card inserted, select **Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the KM380T removable device folder.

**Note:** To use the USB mass storage function, you will need to insert an external memory card in your phone.

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

## **WARNING**

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

## **CAUTION**

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.

- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.

## **Exposure to radio frequency energy**

### **Radio wave exposure and Specific Absorption Rate (SAR) information**

This mobile phone model KM380T has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/Kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.700 W/Kg (10g) and when worn on the body is 0.766 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over one (1) gram of tissue.

## Product care and maintenance

### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not press the antenna unnecessarily.

## **Efficient phone operation**

### **Electronics devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### **Road safety**

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can fail or cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## **Potentially explosive atmospheres**

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

## **In aircraft**

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

## **Children**

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- Dispose of used batteries according to the manufacturer's instructions.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

# Technical data

## General

Product name : KM380T  
System : GSM 900 / DCS 1800 /  
PCS 1900

## Ambient Temperatures

Max : +55°C (discharging)  
+45°C (charging)

Min : -10°C

## Bluetooth QD ID B013827

**"LG Service Center" by  
LG Electronics (Thailand) Co. Ltd.**

72/127 Somdetprachaw Taksin Rd.,  
Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Fri and  
Sat 2nd, 4th 08:00 - 17:00

Call center : 0-2878-5757

## Declaration of Conformity



### Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM380T

Trade Name

LG

# CE0168

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1  
EN 300 328 V 1.6.1  
EN 60950-1 : 2001  
EN 50360/EN 50361 : 2001  
EN 301 511 V9.0.2

### Supplementary Information

The conformity to above standards is verified by BABT.

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

14. April. 2008

European Standard Center  
LG Electronics Logistics and Services B.V.  
Vekweezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31-36-547-8940, Fax : +31-36-547-8794  
e-mail : jacob @ lge.com

  
Signature of representative









