



KF700 คู่มือการใช้

LG ELECTRONICS INC.

KF700


ไทย
ENGLISH

MMBB0279339 (1.1) H

CE 0168

www.lgmobile.com

Bluetooth QD ID B013790

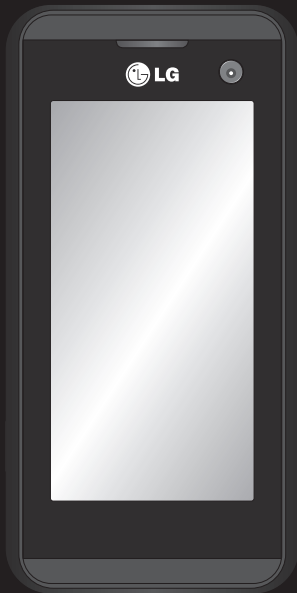

ข้อมูลบางอย่างในคู่มือเล่มนี้
อาจแตกต่างจากโทรศัพท์ของคุณ
ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์
หรือผู้ให้บริการของคุณ

คู่มือการใช้ **KF700**

ขอแสดงความยินดีที่คุณซื้อโทร
ศัพท์เคลื่อนที่รุ่น KF700 ของ LG
ที่ทันสมัยมีขนาดกะทัดรัด ออกแบบให้
ทำงานด้วยการใช้เทคโนโลยีการสื่อสาร
เคลื่อนที่แบบดิจิทัลใหม่ล่าสุด

ตั้งค่า	01
หน้าจอสแตนด์บาย	02
การทำงานพื้นฐาน	03
เริ่มต้นงานสร้างสรรค์	04
เว็บไซต์	05
เริ่มต้นการจัดการ	06
ตั้งค่า	07
อุปกรณ์เสริม	08

สารบัญ

ตั้งค่า

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ	8
ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ	9
การใส่ USIM และแบตเตอรี่	10
การตรวจหน่วยความจำ	12
แผนผังเมนู	13

หน้าจอสแตนด์บาย

เคล็ดลับสำหรับทัชสกรีน	14
ปุ่มด่วน	15
แถบสถานะ	16

การทำงานพื้นฐาน

การโทร	18
การโทรออกหรือการสนทนาทางวิดีโอ	18
การโทรออกโดยใช้รายชื่อ	18
การรับสายและการปฏิเสธสายเรียกเข้า	18
ตัวเลือกต่างๆ ระหว่างใช้สาย	19
การปรับระดับเสียงสนทนา	19
โทรด่วน	20
การดูบันทึกการโทร	20
การใช้การโอนสาย	21
การใช้การป้องกันการโทร	21
การเปลี่ยนการตั้งค่าการโทรทั่วไป	21
การเปลี่ยนการตั้งค่าการสนทนาทางวิดีโอ	22

รายชื่อ	23
การค้นหารายชื่อ	23
การเพิ่มรายชื่อใหม่	23
ตัวเลือกต่างๆ ของรายชื่อ	24
การสร้างกลุ่ม	24
การเปลี่ยนการตั้งค่าของรายชื่อ	24
การดูข้อมูล	25
ส่งข้อความ	26
การส่งข้อความ	26
การป้อนข้อความ	26
ระบบช่วยสะกดคำ T9	27
การป้อนตัวอักษรด้วยตนเอง	27
การตั้งค่าอีเมล	27
การดึงข้อมูลอีเมล	28
การส่งอีเมลโดยใช้แอคเคาท์ใหม่	29
การเปลี่ยนการตั้งค่าอีเมล	29
โพลเดออร์ข้อความ	30
การจัดการข้อความ	30
การใช้ข้อความอัตโนมัติ	31
การใช้อิโมติคอน	31
การเปลี่ยนการตั้งค่าข้อความตัวอักษร	31
การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย	32
การเปลี่ยนการตั้งค่าอื่นๆ	32

เริ่มต้นงานสร้างสรรค์

กล้อง	33	การดูรายละเอียดของวิดีโอหรือภาพ ถ่าย	44
การถ่ายภาพด้วย	33	การส่งภาพถ่ายหรือวิดีโอจากคลังภาพ	45
หลังจากที่ถ่ายภาพแล้ว	33	การดูภาพถ่ายแบบภาพสไลด์.....	45
ทำความเข้าใจกับช่องมองภาพ	34	การตั้งค่าภาพถ่ายเป็นภาพพื้นหลัง..	46
การใช้แฟลช	35	การแก้ไขภาพถ่าย.....	46
การปรับความเข้ม	35	การเพิ่มข้อความลงในภาพถ่าย.....	47
การใช้การตั้งค่าขั้นสูง	35	การเพิ่มเอฟเฟกต์ลงในภาพถ่าย	47
การเปลี่ยนขนาดภาพ	37	การเน้นสีในภาพถ่าย.....	47
การเลือกโทนสี	37	การสลัสีในภาพถ่าย.....	48
การใช้กล้องถ่ายรูปตัวใน.....	37	มัลติมีเดีย	49
การดูภาพถ่ายที่บันทึกไว้	38	ภาพ	49
การดูรายละเอียดของภาพถ่าย	38	เมนูตัวเลือกภาพส่วนตัว.....	49
กล้องวิดีโอ.....	39	การส่งภาพถ่าย.....	50
การถ่ายวิดีโอด้วย.....	39	การใช้รูปภาพ.....	50
หลังจากที่ถ่ายวิดีโอแล้ว	39	การจัดการรูปภาพ.....	50
ทำความเข้าใจกับช่องมองภาพ	40	การลบรูปภาพ	50
การปรับความเข้ม	41	การย้ายหรือคัดลอกรูปภาพ	51
การใช้การตั้งค่าขั้นสูง	41	การเลือกหรือยกเลิกการเลือก รูปภาพ	51
การเปลี่ยนขนาดของภาพวิดีโอ	42	การสร้างภาพสไลด์	51
การเลือกโทนสี.....	42	การตรวจสอบสถานะหน่วยความจำ	52
การใช้กล้องถ่ายวิดีโอตัวใน	42	เสียงส่วนตัว	52
การดูวิดีโอที่บันทึกไว้.....	43	การใช้เสียง.....	52
ภาพถ่ายและวิดีโอ	44	วิดีโอ	52
การดูภาพถ่ายและวิดีโอ.....	44	การดูวิดีโอ.....	52
การปรับระดับเสียงขณะดูวิดีโอ	44		
การบันทึกภาพจากวิดีโอ.....	44		

สารบัญ

การใช้ตัวเลือกขณะหยุดวิดีโอ	52	การเพิ่มและการใช้บุ๊กมาร์ค	58
การส่งวิดีโอคลิป	53	การบันทึกเพลง	58
การใช้วิดีโอคลิปเป็นเสียงเรียกเข้า ..	53	การเข้าใช้เพลงที่บันทึกไว้	58
การใช้เมนูตัวเลือกของวิดีโอ	53	การดูประวัติข้อมูลเบรราเซอร์	59
เกมส์และแอปฯ	53	การเปลี่ยนการตั้งค่าเว็บเบรราเซอร์	59
การเล่นเกมส์	54	การใช้โทรศัพท์เป็นโมเด็ม	59
การใช้เมนูตัวเลือกของเกมส์	54	เริ่มต้นการจัดการ	
แฟลชคอนเทนท์	54	สมุดบันทึก	61
การดูไฟล์ SWF	54	การเพิ่มเหตุการณ์ลงในปฏิทิน	61
การใช้ตัวเลือกในการดูไฟล์ SWF	54	การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน	61
เอกสาร	55	การเพิ่มรายการลงในสิ่งที่ต้องทำ	62
การโอนไฟล์ไปที่โทรศัพท์	55	การใช้ตัวค้นหาวินาที	62
การดูไฟล์	55	การตั้งเวลาปลุก	62
อื่นๆ	55	การเพิ่มบันทึก	63
การเล่นเพลง	55	เครื่องบันทึกเสียง	63
การสร้างรายการเพลง	56	การบันทึกเสียงหรือเสียงพูด	63
การแก้ไขรายการเพลง	56	การส่งรายการบันทึกเสียง	64
การลบรายการเพลง	57	การใช้เครื่องคิดเลข	64
การค้นหาสถานี	57	การใส่ชื่อเมืองลงในเวลาทั่วโลก	64
การรีเซตสถานี	57	การแปลงหน่วย	64
การฟังวิทยุ	57	การใช้นาฬิกาจับเวลา	65
เว็บไซต์		PC Sync	66
การเข้าใช้เว็บไซต์	58	การติดตั้ง LG PC Suite	

ลงในคอมพิวเตอร์	66
การเชื่อมต่อโทรศัพท์เข้ากับ คอมพิวเตอร์	66
การสำรองข้อมูลและการเรียกคืนข้อมูล ของโทรศัพท์	66
การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์	67
การซิงโครไนซ์รายชื่อ	67
การซิงโครไนซ์ข้อความ	67
การใช้โทรศัพท์เป็นอุปกรณ์เก็บข้อมูล	68

ตั้งค่า

การเปลี่ยนการตั้งค่าหน้าจอ	69
การปรับแต่งรูปแบบของคุณ	69
การเปลี่ยนการตั้งค่าโทรศัพท์	69
การเปลี่ยนการตั้งค่าการเชื่อมต่อ	70
การใช้ตัวจัดการหน่วยความจำ	71
การส่งและการรับไฟล์โดยใช้บลูทูธ....	71
การจับคู่กับอุปกรณ์บลูทูธอื่น	72
การใช้ชุดหูฟังบลูทูธ.....	73
อุปกรณ์เสริม.....	74

บริการของเครือข่าย.....	75
ข้อมูลทางเทคนิค.....	75

คำแนะนำ

คำแนะนำเพื่อความปลอดภัยและการใช้ งานอย่างมีประสิทธิภาพ	78
---	----

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ช่องเสียบอุปกรณ์ชาร์จ, สายเคเบิล, แสนด์ฟรี

เคล็ดลับ: ในการเชื่อมต่อสาย USB ให้อาจนโทรศัพท์เปิดเครื่องและลงทะเบียนกับเครือข่ายแล้ว

ปุ่มล็อค/
ปลดล็อค

ปุ่มลัด

เข้าใช้เมนูปุ่มลัดด้วยปุ่มลัด คุณสามารถเปลี่ยนลำดับของเมนูได้จาก การตั้งค่าปุ่มลัด

เลนส์กล้องถ่ายรูปตัวใน

ปุ่มวางสาย/
เปิดปิดเครื่อง



วางสายหรือปฏิเสธสายเรียกเข้า เปิด/ปิดโทรศัพท์ กดหนึ่งครั้งเพื่อกลับสู่หน้าจอสแตนด์บาย

ปุ่มลบ C

ลบตัวอักษรครึ่งละหนึ่งตัวเมื่อ กดปุ่มในแต่ละครั้งใช้ปุ่ม นี้เพื่อกลับไปที่หน้าจอที่แล้ว

ปุ่มโทรออก/รับสาย

โทรออก และรับ สาย

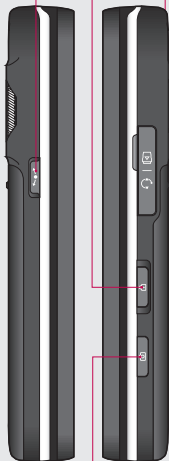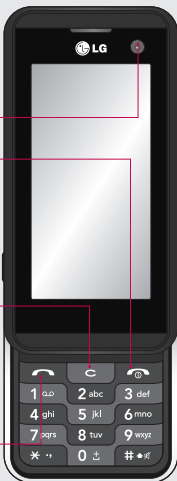

คำเตือน: การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์ หรือการนั่งทับเมื่อใส่ไว้ในกระเป๋าอาจทำให้จอ LCD ของโทรศัพท์ และการทำงานของทัชสกรีนเสียหายได้

ปุ่มถ่ายภาพ

ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ

ปุ่มลัดโทรออก

ชุมเข้าหรือชุมออก เมื่ออยู่ในโหมดคล้องถ่าย
รูปหรือกล้องวิดีโอ เลื่อนดูเมนู

เคล็ดลับ: คุณสามารถปรับระดับเสียงเมื่อฟัง
เพลง เล่นเกม และระหว่างการใช้สาย

คำเตือน: การวางวัตถุที่เป็นสื่อแม่เหล็ก
ใกล้กับผิวสัมผัสอาจทำให้ปุ่มหมุน
ทำงานผิดพลาดได้

ช่องเสียบการ์ด
หน่วยความจำ

แฟลช

เลนส์กล้อง

ช่องเสียบ
USIM การ์ด

ฝาปิดแบตเตอรี่

แบตเตอรี่

01

02

03

04

05

06

07

08

การใส่ USIM และแบตเตอรี่




1 ถอดฝาปิดแบตเตอรี่

เลื่อนฝาปิดแบตเตอรี่ไปทางด้านหลังโทรศัพท์ และถอดฝาปิดแบตเตอรี่ออก


⚠ คำเตือน: อย่าใช้เล็บในการถอดแบตเตอรี่ออก

⚠ คำเตือน: ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

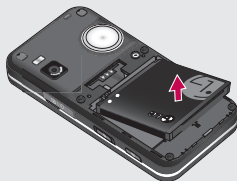

2 ถอดแบตเตอรี่ออก


จัดด้านล่างของแบตเตอรี่และถอดแบตเตอรี่ออกจากช่องใส่แบตเตอรี่อย่างระมัดระวัง

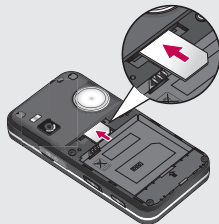

3 ใส่ซิมการ์ด

แล้วเลื่อนซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลงในการถอดซิมการ์ด ให้ค่อยๆ ดึงการ์ดออกมาในทิศทางตรงข้ามกับตอนใส่

การใส่ USIM และแบตเตอรี่

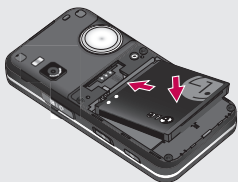


4 ใส่แบตเตอรี่

ใส่แบตเตอรี่ โดยให้ด้านบนของแบตเตอรี่สอดลงไปทางด้านบนของช่องใส่แบตเตอรี่ก่อน
ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วในโทรศัพท์ จากนั้นกดด้านล่างของแบตเตอรี่ให้แน่นเข้าที่



5 ใส่ฝาปิดแบตเตอรี่กลับคืน

เลื่อนฝาปิดแบตเตอรี่ไปทางด้านบนของเครื่องให้แน่นเข้าที่

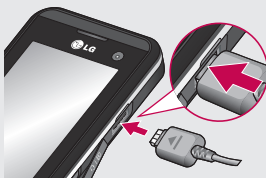

6 การชาร์จโทรศัพท์

ดึงเพื่อเปิดฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านข้างของโทรศัพท์ KF700 และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ คุณจะต้องชาร์จโทรศัพท์ KF700 จนกว่าจะปรากฏข้อความว่าแบตเตอรี่เต็ม บนหน้าจอ

01

02

03

04

05

06

07


08

การลดหน่วยความจำ

การใส่การ์ดหน่วยความจำ

เพิ่มพื้นที่หน่วยความจำบนโทรศัพท์ได้ โดยการใช้การ์ดหน่วยความจำ โทรศัพท์ KF700 สามารถรองรับการ์ดหน่วยความจำภายนอกได้

- 1 ถอดฝาปิดแล้วเสียบการ์ดหน่วยความจำเข้าไปในช่องเสียบที่ด้านบนให้แน่น เข้าที่ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของ khay ชื่นแล้ว

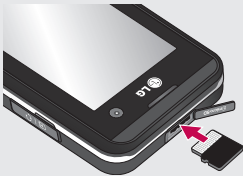

- 2 ใส่แบตเตอรี่และฝาปิดกลับคืน

การฟอร์แมตการ์ดหน่วยความจำ

หากได้มีการฟอร์แมตการ์ดหน่วยความจำแล้ว คุณสามารถเริ่มใช้การ์ดหน่วยความจำนั้นได้ หากยังไม่ได้ฟอร์แมตการ์ด คุณต้องทำการฟอร์แมตก่อน

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **⋮** แล้วเลือก
- 2 เลือก **ตั้งค่าโทรศัพท์** และเลือก **สถานะความจำ** และเลือก **หน่วยความจำการ์ด**

- 3 และที่ **ฟอร์แมต** และป้อนรหัสผ่าน ซึ่งได้รับการตั้งค่าเริ่มต้นเป็น "0000" การกดของคุณจะได้รับการฟอร์แมต และพร้อมสำหรับการใช้งาน
- 4 หากต้องการดูไฟล์เดอรัที่ได้รับการฟอร์แมตใหม่ในโทรศัพท์ KF700 ให้แตะที่ **⋮** แล้วเลือก เลือก **เพิ่มข้อมูล** คุณจะเห็น 6 ไฟล์เดอรั ซึ่งประกอบด้วย ภาพ, เสียงส่วนตัว, วิดีโอ, เกมส์&แอปฯ, แพลชคอนเทนท์, เอกสาร และอื่นๆ สำหรับรายละเอียดเพิ่มเติมเกี่ยวกับการใช้การ์ดหน่วยความจำ โปรดดูที่หน้า 68


⚠ คำเตือน: เมื่อคุณฟอร์แมตการ์ดหน่วยความจำ ข้อมูลทั้งหมดจะถูกลบออก หากคุณไม่ ต้องการให้ข้อมูลในการ์ดหน่วยความจำหายไป ให้สำรองข้อมูลไว้ก่อน

การโอนรายชื่อ

ในการโอนรายชื่อจากซิมการ์ดไปยังโทรศัพท์:

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **⋮** แล้วเลือก
- 2 เลือก **รายชื่อ** และเลือก **ตั้งค่า** และเลือก **คัดลอก** หรือ **ย้าย**
- 3 เลือก **เครื่องไปยัง USIM** และ **พร้อมกันทั้งหมด** หรือ **ที่ละรายการ**
- 4 และที่ **ตกลง** เพื่อยืนยัน

แผนผังเมนู

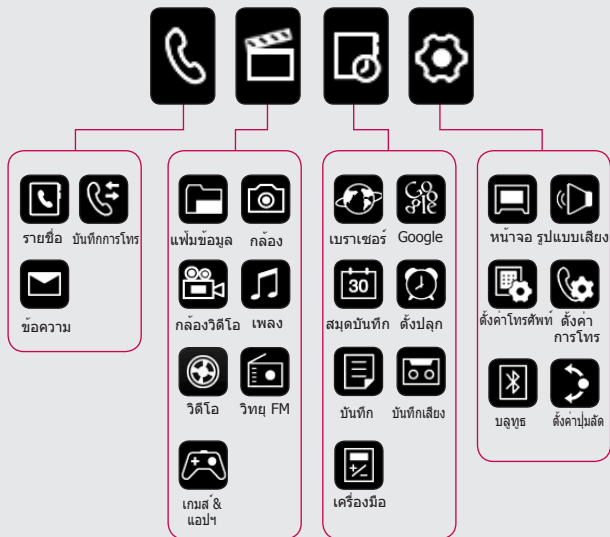

01

02

03

04

05

06

07

08

หน้าจอสแตนด์บาย

เมื่อไม่มีการใช้งานโทรศัพท์ KF700 เครื่องจะกลับเข้าสู่หน้าจอสแตนด์บายจากหน้าจอนี้ คุณสามารถเข้าใช้งานตัวเลือกเมนูต่างๆ, โทรออกแบบด่วน เปลี่ยนรูปแบบเสียง และอื่นๆ ได้อีกมากมาย

เคล็ดลับสำหรับทัชสกรีน

หน้าจอสแตนด์บายยังเป็นที่ดีเยี่ยมที่จะช่วยฝึกให้คุณเคยชินกับ InteractPad ได้ ในการเลือกรายการ ให้แตะที่ไอคอนบนทัชสกรีนอย่างถูกต้อง โทรศัพท์ KF700 จะสั่นเล็กน้อย เมื่อคุณแตะที่ตัวเลือกใดๆ


- คุณไม่จำเป็นต้องออกแรงกดมาก InteractPad จะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ รอบข้าง
- เมื่อไฟหน้าจอดับลง ให้กดปุ่มล็อค/ปลดล็อคที่ด้านขวามือของโทรศัพท์ เพื่อกลับไปยังหน้าจอสแตนด์บาย
- ห้ามปิดคลุมโทรศัพท์ด้วยซองหรือปลอก เนื่องจาก InteractPad จะไม่ทำงานหากมีวัตถุใดๆ ปิดคลุมอยู่





▲ ทัชสกรีน


ปุ่มด้าน

ปุ่มด้านจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ใช้ง่ายได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว

 **แตะเพื่อเปิดหน้าจอโทรออก** คุณสามารถโทรออกได้โดยไม่ต้องเปิดฝาเลื่อนโทรศัพท์ ในการเริ่มการสนทนาทางวิดีโอ ให้กดที่ **สนทนาทางวิดีโอ** หลังจากป้อนหมายเลข

 **แตะเพื่อเปิดสมุดแอดเดรส** รายชื่อจะแสดงตามลำดับตัวอักษร คุณยังสามารถสร้างรายชื่อใหม่และแก้ไขรายชื่อที่มีอยู่ได้
โปรดดูรายละเอียดที่หน้า 23

 **แตะเพื่อสร้างและส่งข้อความ SMS**
โปรดดูรายละเอียดในหน้า 26

 **แตะเพื่อเปิดเมนูแบบเต็ม**
โดยจะแยกออกเป็นเมนูย่อย 4 เมนูย่อย และที่แท็บแนวตั้งของเมนูย่อยแต่ละเมนู เพื่อดูตัวเลือกต่างๆ

คำแนะนำสำหรับลูกค้า

เพื่อการรับสัญญาณที่ดียิ่งขึ้น LG ขอแนะนำให้คุณถือโทรศัพท์ตามตัวอย่างที่แสดงไว้ในภาพด้านล่าง



โปรดอย่าให้มือของคุณบดบังบริเวณเสาอากาศระหว่างการโทรออกหรือขณะการใช้การเชื่อมต่อ บลูทูธ เนื่องจากอาจทำให้คุณภาพของเสียงลดลง

หน้าจอสแตนด์บาย

แถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูล เช่น ระดับความแรงของสัญญาณ, ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีการใช้งาน บลูทูธ หรือ GPRS อยู่หรือไม่

ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน คำอธิบาย



การทำงานหลายอย่าง (ในเมนูย่อย)



ความแรงของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป)



ไม่มีสัญญาณเครือข่าย



พลังงานแบตเตอรี่ที่เหลืออยู่



แบตเตอรี่หมด



ข้อความตัวอักษรใหม่



ข้อความเสียงใหม่



ข้อความในถาดเข้าเต็ม



ส่งข้อความไม่ได้



ตั้งปลุก

ไอคอน คำอธิบาย



ใช้รูปแบบปกติอยู่



ใช้รูปแบบนอกอาคารอยู่



ใช้รูปแบบเงียบอยู่



ใช้รูปแบบชุดหูฟังอยู่



โอนสายเรียกเข้า



ใช้ GPRS ได้



ใช้ EDGE อยู่



โรมมิ่ง



เลือกโหมด Flight



ใช้งาน บลูทูธ



ใช้ HSDPA ได้





ใช้ 3G ได้


การเปลี่ยนสถานะจากแถบสถานะ
แตะที่ไอคอนซึ่งแสดงการตั้งค่าปัจจุบัน
ของคุณในแถบสถานะ
และสรุปสถานะจะเปิดขึ้น


โดยจะแสดงเวลาปัจจุบัน, เครือข่าย, ID
บริการ, แบตเตอรี่, หน่วยความจำเครื่อง,
หน่วยความจำภายนอก, รูปแบบ, MP3,
โหมด Flight และสถานะ บลูทูธ
คุณสามารถตั้งค่าประเภทรูปแบบ, เล่น
MP3 และเปิด/ปิดโหมด Flight Mode
และ บลูทูธ ได้

การใช้ฟังก์ชันการทำงานหลายอย่าง

หากคุณใช้ฟังก์ชัน คุณสามารถค้นหา
การทำงานหลายอย่าง  ได้ที่ด้านบน
แตะที่  เพื่อเปิดเมนู

การทำงานหลายอย่าง จากเมนูนี้ คุณ
สามารถดูแอปพลิเคชันทั้งหมดที่รันอยู่
และเข้าใช้งานได้ด้วยการกดปุ่มเดียว

จากแอปพลิเคชันต่างๆ ให้แตะที่ 
และเลือกหน้าจอหลักเพื่อกลับเข้าสู่หน้า
จอสแตนด์บาย โดยไม่ต้องออกจากหรือ
ปิดแอปพลิเคชันนั้น

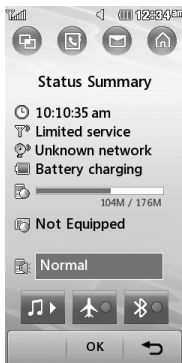

01

02

03

04

05




06


07

08

การโทร

การโทรออกหรือการสนทนาทางวิดีโอ


- 1 เลื่อนเปิดโทรศัพท์
- 2 ป้อนหมายเลขโดยใช้ปุ่มกดในการลบตัวเลข ให้กดปุ่ม C
- 3 แตะที่ การโทร หรือกดปุ่ม  เพื่อเริ่มการโทรออก แตะที่  เพื่อทำการสนทนาทางวิดีโอ
- 4 ในการวางสาย ให้กดปุ่ม 


เคล็ดลับ! ในการโทรโดยปิดฝาโล่ แตะที่  เพื่อเปิดปุ่มสแตมป์ ป้อนหมายเลขและกด การโทร


เคล็ดลับ! ในการป้อน + เพื่อโทรออกต่างประเทศ กดปุ่ม 0 ค้างไว้

เคล็ดลับ! กดปุ่มล็อค/ปลดล็อค เพื่อล๊อคทัชสกรีน เพื่อป้องกันการโทรออกโดยไม่ได้ตั้งใจ

การโทรออกโดยใช้รายชื่อ

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่  เพื่อเปิดสมุดที่อยู่
- 2 จากรายการนี้ ให้แตะที่รายชื่อที่ต้องการโทรหา แล้วเลือกหมายเลขที่จะใช้ หากมีการบันทึกไว้มากกว่าหนึ่งหมายเลข

- 3 คุณสามารถใช้ปุ่มเพื่อป้อนอักขระตัวแรกของรายชื่อที่คุณต้องการโทรออก
- 4 แตะที่ การโทร หรือกดปุ่ม  เพื่อเริ่มการโทรออก

เคล็ดลับ! เมื่อปิดฝาโล่ ให้แตะที่  เพื่อเปิดสมุดที่อยู่ เลื่อนโดยใช้แถบเลื่อนหรือพิมพ์ตัวอักษรแรกของชื่อผู้ติดต่อเพื่อข้ามไปยังส่วนนั้นของรายชื่อ

การรับสายและการปฏิเสธสายเรียกเข้า


เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่ม  เพื่อรับสาย

กด **ปลดล็อค** และ **เงียบ** เพื่อปิดเสียงเรียกเข้า วิธีนี้เป็นวิธีที่ดีหากคุณลืมเปลี่ยนรูปแบบเป็น เงียบเมื่ออยู่ในห้องประชุม

เคล็ดลับ! ในการรับสายโดยปิดฝาโล่ ให้แตะที่ **ปลดล็อค** และเลือก **ยอมรับ**

เคล็ดลับ! ในการปฏิเสธสายโดยปิดฝาโล่ ให้แตะที่ **ปลดล็อค** และเลือก **เงียบ** และ **ปฏิเสธ**

ตัวเลือกต่างๆ ระหว่างใช้สาย

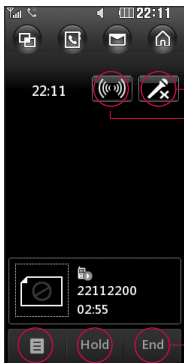

ปิดเสียง - แตะเพื่อปิดไมโครโฟน ดังนั้นบุคคลที่กำลังคุยสายอยู่จะไม่สามารถไม่ได้ยินเสียงคุณ

ลำโพง - แตะที่เพื่อเปิดลำโพง

วางสาย - แตะเพื่อวางสาย

พัก - แตะเพื่อพักสาย แตะที่ ทำต่อเพื่อสนทนาต่อ

ตัวเลือก - เลือกจากรายการตัวเลือกต่างๆ ระหว่างใช้สาย รวมถึง **ไปที่รายชื่อ** และ **ไปที่ข้อความ** ดังนั้นคุณสามารถตรวจสอบข้อความและเพิ่มรายชื่อระหว่างโทรออกได้ นอกจากนี้ คุณยังสามารถวางสายได้โดยการแตะที่ **วางสาย**

การปรับระดับเสียงสนทนา

ในการปรับระดับเสียงระหว่างสนทนา ให้หมุนปุ่มหมุนตามเข็มนาฬิกา เพื่อเพิ่มระดับเสียง หรือหมุนทวนเข็มนาฬิกาเพื่อลดระดับเสียง

01

02

03

04

05

06



07


08

การโทร


โทรด่วน

คุณสามารถกำหนดรายชื่อที่โทรออกบ่อย เป็นหมายเลขโทรด่วนได้

- 1 แตะที่  เลือก 
- 2 เลือก รายชื่อ และแตะที่ โทรด่วน
- 3 วอยซ์เมลได้รับการกำหนดให้อยู่ที่ หมายเลขโทรด่วน 1 และ 2 ซึ่งคุณไม่สามารถเปลี่ยนแปลงได้แตะที่หมายเลขอื่นๆ เพื่อกำหนดรายชื่อสำหรับโทรด่วน
- 4 สมุดที่อยู่จะเปิดขึ้น เลือกรายชื่อที่คุณต้องการกำหนดให้กับหมายเลขนั้น โดยการแตะที่หมายเลขโทรศัพท์หนึ่งครั้ง

ในการโทรออกหมายเลขโทรด่วน ให้เลื่อนเปิดโทรศัพท์และกดหมายเลขที่กำหนดค้างไว้จนกว่ารายชื่อจะปรากฏขึ้นบนหน้าจอ เครื่องจะทำการโทรออกโดยอัตโนมัติ โดยไม่ต้องกด 

เคล็ดลับ! เมื่อปิดฝาslide ให้แตะที่

 เลือกรายชื่อที่คุณต้องการโทร และแตะที่หมายเลขค้างไว้ เครื่องจะทำการโทรออกโดยอัตโนมัติ

การดูบันทึกการโทร

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

หากคุณกด 

เครื่องจะแสดงรายการโทร มีเครื่องหมายลูกศรสองอันอยู่ที่ด้านบนของหน้าจอซึ่งให้คุณสามารถเลื่อนระหว่าง:

ทุกสาย - ดูรายการสายที่คุณโทรออก, ได้รับ และไม่ได้รับทั้งหมด


สายโทรออก - ดูรายการหมายเลขที่คุณโทรออกทั้งหมด

สายที่ได้รับ - ดูรายการหมายเลขที่คุณรับสายทั้งหมด

สายไม่ได้รับ - ดูรายการสายที่คุณไม่ได้รับทั้งหมด



ค่าโทร - ดูค่าใช้จ่ายที่คิดตามที่คุณโทรออก (บริการนี้ขึ้นอยู่กับระบบเครือข่าย ผู้ให้บริการบางรายอาจไม่สนับสนุนบริการนี้) และเวลาโทรทั้งหมด ทั้งที่ได้รับและโทรออก

ปริมาณข้อมูล - ดูจำนวนข้อมูลที่คุณได้รับและส่งทั้งหมดเป็นกิโลไบต์

เคล็ดลับ! จากบันทึกการโทร ให้แตะที่  และ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด



เคล็ดลับ! แตะที่รายการบันทึกการโทร รายการหนึ่งและ **ดู** เพื่อดูวันที่, เวลา และระยะเวลาในการโทร

การใช้การโอนสาย

- 1 แตะที่  เลือก  แล้วเลือก **ตั้งค่าการโทร**
- 2 แตะที่ **การโอนสาย** และเลือก **โทรด้วยเสียง** หรือ **สนทนาทางวิดีโอ**
- 3 เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดต่อไม่ได้ และแตะที่ **เปิดใช้**
- 4 ป้อนหมายเลขที่คุณต้องการให้โอนสายไป
- 5 แตะที่ **โอนสาย** เพื่อเปิดใช้งาน
หมายเหตุ: คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

เคล็ดลับ! ในการปิดการโอนสายทั้งหมด ให้เลือก **เลิกใช้ทั้งหมด** จากเมนู **การโอนสาย**



การใช้การป้องกันการโทร

- 1 แตะที่  เลือก  แล้วเลือก **ตั้งค่าการโทร**
- 2 แตะที่ **ป้องกันการโทร** และเลือก **โทรด้วยเสียง** หรือ **สนทนาทางวิดีโอ**

- 3 เลือกตัวเลือกใดตัวเลือกหนึ่ง หรือเลือกทั้ง 5 ตัวเลือกนี้:
โทรออกทั้งหมด
สายโทรออกต่างประเทศ
สายโทรออกต่างประเทศ ยกเว้นประเทศแม่
สายเรียกเข้าทั้งหมด
สายเข้าเมื่ออยู่ต่างประเทศ
- 4 ป้อนรหัสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการระบบเครือข่ายของคุณเกี่ยวกับบริการนี้

เคล็ดลับ! เลือก กำหนดเบอร์โทรออก จาก **ตั้งค่าการโทร** เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย หากคุณสร้างรายการหมายเลขโทรออกที่กำหนด เฉพาะหมายเลขในรายการเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

การเปลี่ยนการตั้งค่าการโทรทั่วไป

- 1 แตะที่  เลือก  และเลือก **ตั้งค่าการโทร**
- 2 แตะที่ **ตั้งค่าทั่วไป** จากหน้าจอนี้ คุณสามารถแก้ไขการตั้งค่าของ:
ปฏิเสธการรับสาย - เลือก **เปิด** หรือ **ปิด** และเลือกปฏิเสธทุกสาย, จากกลุ่ม หรือรายชื่อที่ระบุไว้, สายจากหมายเลข

01

02

03

04

05

06

07

08

การโทร

เลขที่ไม่รู้จัก (ไม่มีอยู่ในรายชื่อของคุณ) หรือผู้โทรที่ไม่ได้เปิด ID ผู้โทรส่งเบอร์ของฉัน - เลือกว่าจะแสดงหมายเลขของคุณเมื่อคุณโทรออกหรือไม่

โทรซ้ำอัตโนมัติ - เลือก เปิด หรือ ปิด

โหมดตอบรับ - เลือกวิธีรับสาย: กดปุ่มส่ง, เลื่อนขึ้น หรือ กดปุ่มใดๆ
เดือนทุกนาที - เลือกเปิด ปิด เพื่อฟังเสียงเดือนทุกนาทีในระหว่างที่ใช้สาย



โหมดตอบรับ BT - เลือก แชนด์ฟรี เพื่อให้สามารถรับสายได้ในระหว่างที่ใช้งานชุดหูฟัง บลูทูธ หรือเลือกตัวเครื่อง เพื่อรับสายโดยกดปุ่มบนตัวเครื่องขณะใช้ชุดหูฟัง บลูทูธ
บันทึกหมายเลขใหม่ - เลือก ใช่ หรือ ไม่

การตั้งค่าการปิดสไลด์ - เลือกสิ่งที่จะเกิดขึ้นเมื่อคุณปิดสไลด์ระหว่างการที่ใช้สาย เลือกจาก วางสาย หรือ ดำเนินการโทรต่อ

การตั้งค่าการปิดสไลด์ - เลือกวางสาย หรือ ดำเนินการโทรต่อ

เคล็ดลับ! ในการเลือดยุทธการตัวเลือกให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

การเปลี่ยนการตั้งค่าการสนทนาทางวิดีโอ


- 1 แตะที่  เลือก  และเลือก **ตั้งค่าการโทร**
- 2 แตะที่ **การตั้งค่าการสนทนาทางวิดีโอ**
- 3 เลือกการตั้งค่าสำหรับการสนทนาทางวิดีโอ กำหนดว่าจะ **ใช้ภาพส่วนตัว** และ **เลือกภาพส่วนตัว** และ **เปิดกระจก** (คุณสามารถมองเห็นตัวเองบนหน้าจอได้)

รายชื่อ




การค้นหารายชื่อ

คุณสามารถค้นหารายชื่อได้ 2 วิธี:



จากหน้าจอสแตนด์บาย


จากหน้าจอสแตนด์บาย ให้แตะที่  เพื่อเปิดสมุดที่อยู่

จากเมนูหลัก



- 1 แตะที่  และแตะ  และเลือก **รายชื่อ** และแตะ **ค้นหา**
- 2 จากรายการนี้ ให้แตะที่รายชื่อที่ต้องการโทรหา แล้วเลือกหมายเลขที่จะใช้ หากมีการบันทึกไว้มากกว่าหนึ่งหมายเลข
- 3 คุณสามารถใช้ปุ่มเพื่อป้อนอักขระตัวแรกของรายชื่อที่คุณต้องการโทรออก เพื่อข้ามไปยังส่วนนั้น
- 4 แตะที่ **การโทร** หรือกดปุ่ม  เพื่อเริ่มการโทรออก

การเพิ่มรายชื่อใหม่

- 1 แตะที่  และแตะ  และเลือก **รายชื่อ**
- 2 แตะที่ **เพิ่มใหม่**
- 3 เลือกว่าจะบันทึกรายชื่อไปยัง **ตัวเครื่อง** หรือ **USIM**
- 4 ป้อนชื่อและนามสกุลของรายชื่อติดต่อใหม่ คุณไม่จำเป็นต้องป้อนทั้งสองรายการ แต่คุณต้องป้อนรายการใดรายการหนึ่ง

- 5 ป้อนหมายเลขและแตะที่  และคุณสามารถป้อนหมายเลขเพิ่มเติมได้ ตัวอย่างเช่น คุณสามารถป้อนหมายเลขอื่นสำหรับโทรศัพท์มือถือ, บ้าน, ออฟฟิศ, เพจเจอร์ และแฟกซ์ แตะที่ **บันทึก** หลังจากคุณป้อนแต่ละรายการ
- 6 คุณสามารถเพิ่มอีเมลแอดเดรสได้สองรายการ
- 7 กำหนดรายชื่อให้กับกลุ่ม เลือกจาก **ไม่มีกลุ่ม, ครอบครัว, เพื่อน, เพื่อนร่วมงาน, โรงเรียน หรือ VIP**
- 8 คุณสามารถเพิ่มรูปภาพ, เสียงเรียกเข้า, โหม่งเพลง, ที่อยู่บ้าน, ชื่อบริษัท, ตำแหน่งงาน, ที่อยู่บริษัท และ **บันทึก** ได้
- 9 แตะที่ **บันทึก** เพื่อบันทึกรายชื่อ

เคล็ดลับ! คุณสามารถสร้างกลุ่มที่กำหนดเองสำหรับรายชื่อของคุณได้ โปรดดูที่ **การสร้างกลุ่ม** ในหน้า 24

เคล็ดลับ! เมื่อปิดฟาสต์ โหลด ให้แตะที่  และป้อนหมายเลขของรายชื่อ และ  และเลือก **บันทึกหมายเลข** และ **รายชื่อใหม่**

01

02

03

04

05

06


07

08



รายชื่อ

ตัวเลือกต่างๆ ของรายชื่อ


ในเมนูนี้ คุณสามารถใช้ฟังก์ชันต่างๆ ได้มากมายขณะที่ดูรายชื่อ ขั้นตอนต่อไปนี้จะแสดงวิธีการเข้าถึงและใช้งานเมนูตัวเลือกต่างๆ

- 1 เปิดรายชื่อที่คุณต้องการใช้ โปรดดูที่ **การค้นหารายชื่อ** ในหน้า 23
- 2 กด  เพื่อเปิดรายการตัวเลือก จากขั้นตอนนี้ คุณจะสามารรถ:
 - แก้ไข** - เปลี่ยนแปลงรายละเอียดของรายชื่อติดต่อ
 - ส่งข้อความ** - ส่งข้อความไปยังรายชื่อติดต่อ หากรายชื่อติดต้อมีอีเมล แอดเดรส ให้เลือกว่าคุณจะส่งข้อความ เป็นอีเมลหรือ SMS/MMS โปรดดูรายละเอียดเกี่ยวกับวิธีการส่งข้อความที่หน้า 26
 - ส่งนามบัตร** - ส่งรายละเอียดของรายชื่อไปยังบุคคลอื่นเป็นนามบัตรเลือกเพื่อส่งเป็น **ข้อความตัวอักษร**, **ข้อความมัลติมีเดีย**, โดยใช้ **อีเมล** หรือทาง **บลูทูธ**
 - ต่อสายวิดีโอ** - สนทนาทางวิดีโอกับรายชื่อที่ต้องการ
 - บันทึกไปที่เครื่อง** - เลือกเพื่อบันทึกรายชื่อไปยัง USIM การ์ดหรือตัวเครื่อง
 - ลบ** - ลบรายชื่อ และที่ **ใช่** เมื่อคุณแน่ใจ

การสร้างกลุ่ม

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่  และเลือก **รายชื่อ**
- 2 เลือก **กลุ่ม** แล้วแตะที่ 
- 3 เลือก **เพิ่มกลุ่มใหม่**
- 4 ป้อนชื่อสำหรับกลุ่มใหม่ของคุณ
- 5 แตะที่ **บันทึก**



หมายเหตุ: หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะไม่หายไป แต่ยังคงอยู่ในสมุดโทรศัพท์

เคล็ดลับ! คุณสามารถแก้ไขกลุ่มที่มีอยู่ได้โดยการเลื่อนแถบไปที่กลุ่มที่ต้องการ แล้วแตะที่  เลือกเพื่อเพิ่มสมาชิกในกลุ่ม จากรายชื่อของคุณ, กำหนดเสียงเรียกเข้าแบบกลุ่ม, เปลี่ยนชื่อกลุ่ม หรือลบกลุ่ม

การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถปรับการตั้งค่ารายชื่อเพื่อให้เหมาะกับการทำงานของสมุดรายชื่อในแบบที่คุณต้องการได้

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่  และแตะ  เลือก **รายชื่อ** และเลือก **ตั้งค่า**

- 2 จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าต่อไปนี้:
- การตั้งค่ารายชื่อ** - เลือกว่าจะดูรายชื่อที่บันทึกไว้ทั้งใน **ตัวเครื่อง & USIM**, **ตัวเครื่อง** เท่านั้น หรือ **USIM** เท่านั้น นอกจากนี้ คุณยังสามารถเลือกว่าจะแสดงชื่อหรือนามสกุลของรายชื่อติดต่อขึ้นก่อนก็ได้
- ซิงโครไนซ์รายชื่อ** - เชื่อมต่อไปยังเซิร์ฟเวอร์ของคุณ เพื่อซิงโครไนซ์รายชื่อต่างๆ โปรดดูที่ **การซิงโครไนซ์รายชื่อ** ในหน้า 66
- คัดลอก** - คัดลอกรายชื่อจาก USIM ไปยังตัวเครื่อง หรือจากตัวเครื่องไปยัง USIM เลือกว่าจะคัดลอกที่ละรายการหรือทั้งหมดในครั้งเดียว หากคุณเลือกดำเนินการที่ละรายการ คุณจะต้องเลือกรายชื่อที่จะคัดลอกที่ละรายชื่อ
- ย้าย** - ตัวเลือกนี้ทำงานในลักษณะเดียวกับตัวเลือก **คัดลอก** แต่เครื่องจะบันทึกเฉพาะรายชื่อในตำแหน่งที่คุณย้ายไปเท่านั้น เช่น หากคุณย้ายรายชื่อจาก USIM ไปยังตัวเครื่อง รายชื่อนั้นจะถูกลบออกจากหน่วยความจำ USIM
- ส่งทุกรายชื่อผ่าน บลูทูธ** - ส่งรายชื่อทั้งหมดไปยังอุปกรณ์อื่นหรือคอมพิวเตอร์โดยใช้ บลูทูธ

สำรองข้อมูลรายชื่อ - โปรดดูที่ **การสำรองข้อมูลและการเรียกคืนข้อมูลในโทรศัพท์** ในหน้า 66

เรียกคืนรายชื่อ - โปรดดูที่ **การสำรองข้อมูลและการเรียกคืนข้อมูลในโทรศัพท์การสำรองข้อมูลและการเรียกคืนข้อมูลในโทรศัพท์** ในหน้า 66

ลบรายชื่อ - ลบรายชื่อของคุณทั้งหมด แต่ที่ **ใช่** หากคุณต้องการล้างสมุดที่อยู่ของคุณ

การดูข้อมูล

- 1 จากหน้าจอแสดงแถบนำ ให้แตะที่ **☹** และ **☰** และเลือก **ผู้ติดต่อ**
- 2 เลือก **ข้อมูล**
- 3 จากขั้นตอนนี้ คุณจะสามารถดู **เบอร์บริการ**, **เบอร์ส่วนตัว**, **ข้อมูลหน่วยความจำ** (จำนวนพื้นที่หน่วยความจำที่เหลืออยู่) และ **นามบัตรส่วนตัว** ของคุณได้

เคล็ดลับ! หากคุณยังไม่ได้เพิ่มนามบัตรของคุณเอง เลือก **เพิ่ม** แล้วป้อนรายละเอียดทั้งหมดที่คุณต้องการส่งให้รายชื่อติดต่อ และที่ บันทึก เพื่อดำเนินการให้เสร็จสิ้น

01

02

03

04

05

06

07




08

ส่งข้อความ


ส่งข้อความ


โทรศัพท์ KF700 ของคุณได้ผสมผสาน SMS, MMS และอีเมลไว้ในเครื่องเดียว และเมนูที่ใช้งานง่าย

คุณสามารถเข้าสู่ศูนย์ข้อความได้ 2 วิธี ดังนี้:

- 1 และที่  จากหน้าจอแสดงต้นแบบ
- 2 และที่  จากหน้าจอแสดงต้นแบบ และแตะ  และเลือก ข้อความ

การส่งข้อความ


- 1 และที่  และเลือก **ข้อความใหม่**
- 2 เลือก **ข้อความ** เพื่อส่ง SMS หรือ MMS หรือหากต้องการส่งอีเมล เลือก **อีเมล** โปรดดูรายละเอียดในหน้า 29
- 3 SMS หรืออีเมลใหม่จะเปิดขึ้น เขียนข้อความตามปกติ
- 4 และ  และ **แทรก** เพื่อเพิ่มรูปภาพ, วิดีโอ, เสียง หรือข้อมูลอื่นๆ รวมทั้งรายละเอียดรายชื่อ
- 5 และที่ **ส่ง** เลือกรายชื่อจากรายการ และกด **เลือก** หรือป้อนหมายเลขใหม่ คุณสามารถเพิ่มรายชื่อติดต่อหลายรายการได้

 **คำเตือน:** หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะถูกแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

การป้อนข้อความ


คุณสามารถป้อนข้อความได้ 2 วิธีดังนี้: ระบบช่วยสะกดคำ T9 และการป้อนตัวอักษรด้วยตนเอง

ในการเปลี่ยนระหว่างวิธีการป้อนข้อความแต่ละวิธี ให้แตะที่ไอคอนที่เกี่ยวข้องที่ด้านบนของหน้าจอ

 **ระบบช่วยสะกดคำ T9, การป้อนตัวอักษรด้วยตนเอง** - แตะเพื่อเปิดระบบช่วยสะกดคำ T9 และเลือก T9 ไทย, T9ABC, T9abc, 123 และอีกครั้งเพื่อปิดระบบช่วยสะกดคำ T9

 **การป้อนตัวอักษรด้วยตนเอง** - เลือก ไทย, abc, ABC หรือ 123


ในการลบตัวอักษร ให้ใช้ปุ่ม **C** ที่ด้านล่างหน้าจอ

ในการป้อนสัญลักษณ์ ให้แตะที่  หรือปุ่มเครื่องหมาย *

ระบบช่วยสะกดคำ T9

โหมด T9 จะใช้พจนานุกรมภายในเครื่องเพื่อรู้คำศัพท์ที่คุณเขียนตามลำดับการกดปุ่ม เพียงแตะที่ปุ่มตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณจะป้อน พจนานุกรมจะรับรู้ได้ถึงคำศัพท์ เมื่อคุณป้อนตัวอักษรครบทุกตัวแล้ว เช่น กด

4, 4, 7, 7, 5 เพื่อเขียนคำว่า 'ทดสอบ'
หากมีตัวเหลือมากกว่าหนึ่งสำหรับปุ่ม
ที่คุณกดรายการจะปรากฏขึ้นบนหน้าจอ
เลือกค่าที่คุณต้องการโดยการแตะที่
หน้าจอ

หากค่าที่คุณต้องการไม่ปรากฏขึ้น
ให้แตะที่  และเลือก

เพิ่มในพจนานุกรม ป้อนคำศัพท์
โดยใช้โหมดการป้อนตัวอักษรด้วยตนเอง
แล้วคำศัพท์หรือชื่อดังกล่าวจะเพิ่มเข้าไป
ในพจนานุกรม



การป้อนตัวอักษรด้วยตนเอง

ในโหมดการป้อนตัวอักษรด้วยตนเอง
คุณต้องแตะปุ่มซ้ำๆ เพื่อเลือกตัวอักษร
จากตัวเลือกที่มีอยู่บนปุ่ม ตัวอย่างเช่น
ในการเขียนคำว่า 'ด่วน' ให้แตะ 4 สีครึ่ง,
0 หนึ่งครั้ง, 6 เจ็ดครั้ง, 5 สองครั้ง

การตั้งค่าอีเมล

คุณสามารถติดต่อสื่อสารระหว่างการเดิน
ทางได้โดยใช้อีเมลบนโทรศัพท์ KF700
ของคุณ ซึ่งสามารถตั้งค่าอีเมลแอดเดสส์
แบบ POP3 หรือ IMAP4 ได้อย่างรวดเร็ว
และง่ายดาย

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือก
ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้ว
เลื่อนหน้าจอขึ้น รายการต่างๆ
จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

- 1 แตะที่  จากนั้นเลือก **ตั้งค่า**
- 2 แตะที่ **อีเมล** แล้วเลือก **อีเมลแอดเดสส์**
- 3 เปิด  และแตะที่ **เพิ่มใหม่**
- 4 คุณจะเข้าสู่วิธีการตั้งค่า
อีเมล ทำตามคำแนะนำและแตะที่
ดำเนินการต่อ เพื่อไปต่อ คุณต้องมี
รายละเอียดต่อไปนี้:
ชื่อ - ป้อนชื่อของแอดเดสส์นี้
ชื่อของจีน - ป้อนชื่อของคุณ
ชื่อผู้ใช้ - ป้อนชื่อผู้ใช้ของแอดเดสส์
รหัสผ่าน - ป้อนรหัสผ่าน
ของแอดเดสส์
อีเมลแอดเดสส์ - ป้อนอีเมลของ
แอดเดสส์
อีเมลแอดเดสส์ในการตอบกลับ -
ป้อนอีเมลแอดเดสส์เพื่อใช้ 'ตอบกลับ'
เซิร์ฟเวอร์เมลขาออก - ป้อนราย
ละเอียดของแอดเดสส์
เซิร์ฟเวอร์เมลขาเข้า - ป้อนรายละเอียด
ของแอดเดสส์
ขนาดการรับสูงสุด - เลือกขนาดที่จำ
กััดไว้ของอีเมล ขนาดการรับสูงสุดคือ
300KB

01

02

03

04

05

06

07

08

ส่งข้อความ

ประเภทเมลล์บอกซ์ -

ป้อนประเภทเมลล์บอกซ์ POP3 หรือ IMAP4

บันทึกในเซิร์ฟเวอร์ - เลือกว่าจะบันทึกอีเมลไว้ในเซิร์ฟเวอร์หรือไม่ เครื่องจะบันทึกสำเนาของแอคเคาท์แบบ IMAP4 ไว้เสมอ

บันทึกเมลล์ที่ส่งไว้ใน - เลือกที่จะบันทึกอีเมลแบบ IMAP4 เครื่องจะบันทึกสำเนาของแอคเคาท์แบบ POP3 ไว้ในโทรศัพท์เสมอ

จุดเชื่อมต่อ - เลือกจุดเชื่อมต่ออินเทอร์เน็ต กด  เพื่อใช้จุดเชื่อมต่อที่ตั้งไว้

ดึงข้อมูลอัตโนมัติ - เลือกว่าจะดึงอีเมลใหม่โดยอัตโนมัติหรือไม่

การตั้งค่าขั้นสูง - เลือกว่าจะใช้การตั้งค่าขั้นสูงหรือไม่

หมายเลขพอร์ต SMTP - โดยทั่วไปหมายเลขนี้ คือ 25

พอร์ตเซิร์ฟเวอร์ขาเข้า - โดยทั่วไป หมายเลขนี้ คือ 110 สำหรับแอคเคาท์แบบ POP3 และ 143 สำหรับแอคเคาท์แบบ IMAP4

การตรวจสอบสิทธิ์ SMTP - เลือกการตั้งค่าความปลอดภัยของเซิร์ฟเวอร์เมลล์ขาออก

ชื่อผู้ใช้ SMTP - ป้อนชื่อผู้ใช้ SMTP
รหัสผ่าน SMTP - ป้อนรหัสผ่าน

SMTP


ล็อกอินเพื่อความปลอดภัย APOP - เลือกเพื่อเปิดใช้งานล็อกอินเพื่อความปลอดภัย APOP สำหรับแอคเคาท์แบบ POP3 สำหรับแอคเคาท์แบบ IMAP4 จะตั้งค่าเป็นปิดการใช้งานเสมอ

ในตอนี้ คุณได้กำหนดค่าให้กับแอคเคาท์เรียบร้อยแล้ว ซึ่งแอคเคาท์นี้จะปรากฏอยู่ในรายการแอคเคาท์ในโฟลเดอร์ อีเมลล์


การดึงข้อมูลอีเมลล์

คุณสามารถตรวจสอบอีเมลล์ใหม่ในแอคเคาท์ของคุณแบบอัตโนมัติหรือด้วยตนเองได้ โปรดดูที่ 'การเปลี่ยนการตั้งค่าอีเมลล์' เพื่อตรวจสอบแบบอัตโนมัติ

ในการตรวจสอบด้วยตนเอง:

1. แตะที่  และ **ตั้งค่า** แล้วตามด้วย **อีเมลล์**
2. แตะที่ **รอบเวลาการเรียกดู** และเลือกรอบเวลาเพื่อเปิดการเรียกข้อมูลอัตโนมัติ

การส่งอีเมลล์โดยใช้แอคเคาท์ใหม่

1. แตะที่  และเลือก **สร้างใหม่**
2. เลือก **อีเมลล์** และอีเมลล์ใหม่จะเปิดขึ้น
3. ป้อนแอคเดรสรูรับและเขียนข้อความของคุณ แตะที่สัญลักษณ์คลิก

หมิ่นกระดาษเพื่อแบบรูปภาพ, วิดีโอ หรือไฟล์ประเภทอื่นๆ


4 และที่ ส่ง แล้วอีเมลจะถูกส่งออกไป

เคล็ดลับ! คุณสามารถอีเมลเอกสาร Word, Excel, PowerPoint และ PDF ไปที่โทรศัพท์ KF700 ดังนั้นคุณสามารถตรวจสอบเอกสารระหว่างเดินทางได้

การเปลี่ยนการตั้งค่าอีเมล

คุณสามารถเปลี่ยนแปลงการตั้งค่าอีเมลเพื่อให้เป็นในแบบที่คุณต้องการได้ คุณอาจป้อนข้อมูลนี้ไว้แล้วบางส่วนในระหว่างวิชาการตั้งค่า

เคล็ดลับ! ในการเลื่อนรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

- 1 และที่  และเปิด ตั้งค่า
- 2 และที่ อีเมล และ อีเมลแอดเดสซ จากนั้น คุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:
ตอบกลับอีเมลได้ - เลือกเพื่อให้ส่งข้อความ 'ยืนยันการอ่าน'

ร้องขอการตอบกลับอีเมล

- เลือกว่าต้องการข้อความ 'ยืนยันการอ่าน' หรือไม่
- รอบเวลาการเรียกดู** - เลือกความถี่ที่จะให้โทรศัพท์ KF700 ตรวจสอบข้อความอีเมลใหม่
- ประกอบด้วยข้อความในการส่งต่อ & ตอบกลับ** - เลือกเพื่อแสดงข้อความต้นฉบับหรือไม่
- รวมสิ่งที่แนบ** - เลือกเพื่อแสดงสิ่งที่แนบต้นฉบับ
- เรียกอัตโนมัติในการโรมมิ่ง** - เลือกเพื่อดึงข้อมูลข้อความโดยอัตโนมัติเมื่อคุณอยู่ต่างประเทศ หรือหยุดการดึงข้อมูลอัตโนมัติ
- การแจ้งอีเมลใหม่** - เลือกว่าจะแจ้งเตือนอีเมลใหม่หรือไม่
- ลายเซ็น** - สร้างลายเซ็นในอีเมล และเปิดคุณสมบัตินี้
- ความสำคัญ** - เลือกระดับความสำคัญของข้อความอีเมล

ไฟล์เดอรัข้อความ

คุณจะได้รับรู้ถึงโครงสร้างไฟล์เดอรัที่ใช้ในโทรศัพท์ KF700 ได้ เนื่องจากไฟล์เดอรัต่างๆ มีโครงสร้างที่เข้าใจง่าย

ถอดเข้า - ข้อความ SMS และ MMS ทั้งหมดที่คุณได้รับจะอยู่ในถอดเข้า

01

02

03

04

05

06

07

08

ส่งข้อความ

จากที่นี่ คุณสามารถตอบกลับ, ส่งต่อ และดำเนินการอื่นๆ ได้ โปรดดูรายละเอียดที่ด้านล่างนี้

เมลล์บอกซ์ - ข้อความอีเมลทั้งหมดที่คุณได้รับจะอยู่ในเมลล์บอกซ์ หากคุณตั้งค่าอีเมลแอคเคาท์มากกว่าหนึ่ง ข้อความจะถูกจัดตามแอคเคาท์ที่ถูกต้อง

ร่าง - หากคุณยังเขียนข้อความไม่เสร็จ คุณสามารถบันทึกสิ่งที่คุณเขียนไว้ที่นี่ได้

ถาดออก - โฟลเดอร์นี้เป็นโฟลเดอร์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป

รายการที่ส่ง - ข้อความทั้งหมดที่คุณส่งออกไปจะอยู่ในโฟลเดอร์รายการที่ส่ง

โฟลเดอร์ส่วนตัว - สร้างโฟลเดอร์ส่วนตัวใหม่เพื่อจัดการข้อความ

การจัดการข้อความ

คุณสามารถใช้ถาดเข้าในการจัดการข้อความของคุณได้

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

1 แตะที่  และ ถาดเข้า

2 แตะที่  จากนั้นเลือกเพื่อ:

ตอบกลับ - ส่งข้อความตอบกลับไปยังข้อความที่เลือก

ส่งต่อ - ส่งข้อความที่เลือกไปยังบุคคลอื่น

การโทร - โทรออกหรือสนทนาทางวิดีโอกับบุคคลที่ส่งข้อความมา

ลบ - ลบข้อความ

ข้อความใหม่ - เปิดข้อความหรืออีเมลเปล่าใหม่

เลือก/ไม่เลือก - เลือกข้อความ

สำหรับการลบหลายรายการ หรือเพื่อย้ายไปยังโฟลเดอร์อื่น

คัดลอก&ย้าย - เลือกเพื่อคัดลอกข้อความหรือย้ายไปยังโฟลเดอร์อื่น

ฟิลเตอร์ - ดูข้อความตามประเภท ซึ่งจะแบ่งกลุ่ม SMS แยกจาก MMS

ข้อมูลข้อความ - ดูข้อมูลเพิ่มเติมของข้อความ ตัวอย่างเช่นเวลาที่ส่งมา

หากมีข้อความ **ไม่มีที่ว่างสำหรับ**

ข้อความ USIM ปรากฏขึ้น คุณควรลบข้อความบางข้อความในถาดเข้าออก

หากมีข้อความ **ไม่มีที่ว่างสำหรับข้อความ** คุณสามารถลบข้อความหรือไฟล์ที่บันทึกออกได้ เพื่อสร้างพื้นที่



การใช้ข้อความอัตโนมัติ

สร้างข้อความอัตโนมัติสำหรับข้อความ SMS และ MMS ที่คุณส่งบ่อยๆ คุณจะพบว่ามีข้อความอัตโนมัติบางข้อความในโทรศัพท์ของคุณแล้ว ซึ่งคุณสามารถแก้ไขข้อความเหล่านั้นได้ หากต้องการ

- 1 แตะที่  แล้วเลือกข้อความอัตโนมัติ
- 2 เลือก **SMSอัตโนมัติ** หรือ **MMSอัตโนมัติ** คุณสามารถแตะ  เพื่อเพิ่มใหม่, แก้ไข, ลบ หรือลบทั้งหมด

การใช้อิโมติคอน

ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้อิโมติคอน คุณจะพบว่ามีอิโมติคอนที่ใช้กันทั่วไปในโทรศัพท์ของคุณแล้ว


- 1 แตะที่  และเลือก อิโมติคอน
- 2 แตะที่  เพื่อ เพิ่มใหม่, แก้ไข, ลบ หรือ ลบทั้งหมด

การเปลี่ยนการตั้งค่าข้อความตัวอักษร

การตั้งค่าข้อความของโทรศัพท์ KF700 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที

หากคุณต้องการเปลี่ยนแปลงการตั้งค่าโปรดดูข้อมูลเพิ่มเติมที่ด้านล่างนี้

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือกให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

- แตะที่  และเลือก **ตั้งค่า** และ **ข้อความตัวอักษร** คุณสามารถเปลี่ยนแปลง:
 - ศูนย์ข้อความตัวอักษร** - ป้อนรายละเอียดของศูนย์ข้อความ
 - รายงานผลการส่ง** - เลือกเพื่อรับการยืนยันว่าข้อความได้ส่งออกไปแล้ว
 - ช่วงที่มีผลใช้** - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ
 - ชนิดข้อความ** - แปลงข้อความเป็นข้อความ, เสียง, แฟกซ์, **X.400** หรืออีเมล
 - การเข้ารหัสอักษร** - เลือกวิธีเข้ารหัสตัวอักษร ซึ่งจะส่งผลต่อขนาดของข้อความ จึงอาจมีค่าใช้จ่ายด้านข้อมูลด้วย
 - ส่งข้อความแบบยาว** - เลือกเพื่อส่งเป็นหลาย SMS หรือเป็น MMS
- การเปลี่ยนการตั้งค่าข้อความ**
- มัลติมีเดีย**

แตะที่  และเลือก **ตั้งค่า**

ส่งข้อความ

และ **ข้อความมัลติมีเดีย**
คุณสามารถเปลี่ยนแปลง:

โหมดการเรียกข้อมูล - เลือกเครือข่ายหลัก หรือ โรมมิ่ง หากคุณเลือกกำหนดเอง คุณจะได้รับเฉพาะข้อความแจ้ง MMS และคุณสามารถตัดสินใจว่าจะดาวน์โหลดแบบเต็มหรือไม่

รายงานผลการส่ง - เลือกเพื่อให้ส่งและ/หรือต้องการรายงานผลการส่ง

อ่านข้อความตอบกลับ
- เลือกเพื่อใหม่และ/
หรือส่งการตอบกลับการอ่าน

ระดับความสำคัญ - เลือกระดับความสำคัญของ MMS

ช่วงที่มีผลใช้ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

ระยะเวลาสไลด์ - เลือกระยะเวลาที่จะให้สไลด์ปรากฏบนหน้าจอ

เวลาส่ง - ส่งข้อความในเวลาที่เหมาะสม
ศูนย์ MMS - ป้อนรายละเอียดของศูนย์ข้อความ

หมายเหตุ: โปรดดูรายละเอียดเกี่ยวกับวิธีการเปลี่ยนการตั้งค่าอีเมลในหน้า 29

การเปลี่ยนการตั้งค่าอื่นๆ
แตะที่  และเลือก ตั้งค่า เลือก:

วีดีโอเมล - หากผู้ให้บริการของคุณสนับสนุนบริการนี้ คุณสามารถสร้างแอดเดสส์ใหม่ได้


วอยซ์เมล - บริการวอยซ์เมลของคุณได้รับการตั้งค่าไว้แล้ว แต่คุณสามารถเพิ่มบริการวอยซ์เมลใหม่ได้ที่

ข้อความบริการ - เลือกเพื่อรับหรือบล็อกข้อความบริการ คุณยังสามารถกำหนดความปลอดภัยของข้อความได้ โดยการสร้างรายการผู้ส่งที่เชื่อถือได้ และเชื่อถือไม่ได้

บริการข้อมูล - เลือกสถานะการรับ, ภาษา และการตั้งค่าอื่นๆ

กล้อง


การถ่ายภาพด้วย


- 1 กดปุ่ม  ที่ด้านขวาของตัวเครื่อง
- 2 ให้ถือโทรศัพท์ในแนวนอน และหันเลนส์ไปทางสิ่งที่ต้องการถ่าย
- 3 กดปุ่มถ่ายภาพลงเล็กน้อย กล้องช่องมองภาพสีขาวที่กึ่งกลางหน้าจอจะเปลี่ยนเป็นสีแดงในขณะที่กล้องพยายามโฟกัส
- 4 เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 5 กดปุ่มถ่ายภาพลงจนสุด


หลังจากที่ถ่ายภาพแล้ว


ภาพที่ถ่ายจะปรากฏบนหน้าจอ ชื่อของ


ภาพจะอยู่ที่ด้านล่างของหน้าจอ และไอคอน 5 อันจะปรากฏขึ้น

 และเพื่อถ่ายภาพอื่นๆ ทันที โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้

 และเพื่อดูภาพถ่ายอื่นๆ ในอัลบั้มของคุณ โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้ โปรดดูที่หน้า 38 สำหรับการดูภาพถ่ายที่บันทึกไว้

 และเพื่อส่งภาพถ่ายเป็น MMS, อีเมล หรือทาง บลูทูธ คุณสามารถพิมพ์ภาพถ่ายโดยใช้ บลูทูธ โปรดดูที่หน้า 26 สำหรับการส่งข้อความ, หน้า 71 สำหรับการส่งและการรับไฟล์โดยใช้ บลูทูธ

 และเพื่อกำหนดให้ภาพที่เพิ่งถ่ายเป็นภาพพื้นหลัง

 และเพื่อลบภาพที่เพิ่งถ่ายไว้ และยืนยันด้วยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

01

02

03

04

05


06

07

08

การใช้แฟลช

ค่าเริ่มต้นของแฟลชคือ อัตโนมัต แต่คุณสามารถตั้งค่าด้วยตัวเลือกอื่นได้

- 1 เลือก  จากกึ่งกลางด้านขวาของช่องมองภาพเพื่อเข้าสู่เมนูย่อยแฟลช
- 2 มีตัวเลือกแฟลชให้เลือก 4 ตัวเลือกคือ:

อัตโนมัติ - กล้องของคุณจะประเมินความต้องการแสงเพื่อให้ได้ภาพที่ดีและใช้แฟลชเท่าที่จำเป็น


เมื่อถ่ายภาพ - จะเปิดแฟลชเมื่อคุณถ่ายภาพเท่านั้น


เปิดเสมอ - จะเปิดแฟลชเสมอเมื่ออยู่ในโหมดกล้องถ่ายรูป

ปิดเสมอ - กล้องจะไม่ใช้แฟลชเลย
ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่

- 3 คุณต้องการประหยัดพลังงานแบตเตอรี่
- 4 และที่ตัวเลือกแฟลชที่คุณต้องการใช้
- 4 เมื่อคุณเลือกตัวเลือกแล้ว เมนูแฟลชจะปิดเองอัตโนมัติ และกล้องก็พร้อมสำหรับการถ่ายภาพแล้ว

การปรับความเข้ม


ความเข้มเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืดในภาพ ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมัว ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า เลื่อนตัวบ่งชี้ความเข้มตามแถบไปทางด้าน  เพื่อให้ได้ภาพที่มีความ


เข้มลดลงและมัวมากขึ้น หรือไปทางด้าน  เพื่อให้ได้ภาพที่มีความเข้มสูงขึ้นและคมชัดยิ่งขึ้น


การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะที่  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด




 **ขนาดภาพ** - เปลี่ยนขนาดของภาพเพื่อบันทึกในพื้นที่หน่วยความจำ หรือถ่ายภาพแบบที่กำหนดขนาดไว้ถูกต้องเพื่อแนบกับรายชื่อ โปรดดูที่ **การเปลี่ยนขนาดภาพ** ในหน้า 37


 **คุณภาพของภาพ** - เลือกระหว่าง **ละเอียดมาก**, **ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของภาพถ่ายก็มากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่งหมายความว่า你能จะการจัดเก็บภาพถ่ายในหน่วยความจำได้น้อยลง


 **สมดุลแสง** - สมดุลแสงจะช่วยให้

กล้อง


คุณมั่นใจได้ว่าแสงขาวที่ปรากฏในภาพ จะสวยสมจริง เพื่อให้กล้องของคุณปรับ ความสมดุลแสงได้อย่างถูกต้อง คุณอาจ จำเป็นต้องกำหนดสภาวะแสงก่อน เลือกจาก **อัตโนมัติ, หลอดไฟ, แสงอาทิตย์, ฟลูออเรสเซนต์ หรือ มืดครึ้ม**


 **โทนสี** - เลือกโทนสีเพื่อใช้กับภาพ ที่คุณกำลังถ่าย
โปรดดูที่ **การเลือกโทนสี** ในหน้า 37

 **ตั้งเวลาถ่าย** - ตั้งเวลาถ่ายให้คุณ สามารถตั้งเวลาหน่วงหลังจากที่กดปุ่ม ถ่ายภาพแล้วได้ ให้เลือกจาก **3 วินาที, 5 วินาที หรือ 10 วินาที** ซึ่งเหมาะ สำหรับการถ่ายภาพกลุ่มที่คุณต้องการ เป็นส่วนหนึ่งในกลุ่มด้วย


 **โหมดกลางคืน** - เลือกระหว่าง **ปิด** และ **เปิด** โหมดนี้ใช้สำหรับถ่ายภาพ ในตอนกลางคืน


 **ถ่ายภาพต่อเนื่อง** - กล้องจะถ่ายภาพเป็นชุด (3, 6 หรือ 9) เหมาะสำหรับการบันทึกกิจกรรมที่รวดเร็ว


 **ภาพเฟรม** - คุณสามารถเลือกใช้ เฟรมกับภาพที่คุณถ่ายได้

 **ISO ISO** - ISO กำหนดความไวของเซน เซอร์ไฟในกล้อง ISO ที่มากขึ้น ความไว ของกล้องก็มากขึ้นเท่านั้น ซึ่งจะเป็นประโยชน์สำหรับสภาพแวดล้อมที่มืดในขณะที่ ไม่ได้ใช้งานแฟลช เลือกค่า ISO จาก

อัตโนมัติ, ISO 100, ISO 200, ISO 400 หรือ ISO 800

 **เสียงชัตเตอร์** - เลือกเสียงชัตเตอร์ จากเสียงชัตเตอร์ที่ตั้งไว้ล่วงหน้า

 **สลับกัล้อง** - สลับระหว่าง **กล้อง ตัวในและกล้องตัวนอก**ของ LG KF700 โปรดดูรายละเอียดเพิ่มเติมที่ **การใช้กล้องถ่ายรูปตัวใน** ในหน้า 37

 **หน่วยความจำที่ใช้** - เลือกว่าจะ บันทึกภาพถ่าย หน่วยความจำเครื่อง หรือที่ **หน่วยความจำการ์ด**

 **มุมมองด้านกว้าง** - เลือกระหว่าง **ปิด** และ **เปิด**



 **รีเซ็ตการตั้งค่า** - เลือก **ใช่** เพื่อ รีเซ็ตการตั้งค่าของคุณไปเป็นการ ตั้งค่าดั้งเดิมของกล้อง

หมายเหตุ: ตะที่ **ปิด** ทุกครั้งหลังการ เลือกการตั้งค่าใหม่เพื่อใช้การเปลี่ยนแปลงที่คุณเลือก



เคล็ดลับ! เมื่คุณตั้งค่าช้อนหับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบด้านสีหรือคุณภาพของภาพ คุณจะสามารกเห็นการเปลี่ยนแปลงภาพในการดูตัวอย่างด้านหลังเมื่คุณตั้งค่า อยู่ลิมตะที่ **ปิด** ก่อนที่จะออกจากทำงานเพื่อใช้การเปลี่ยนแปลง

การเปลี่ยนขนาดภาพ

จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งอีกนัยหนึ่งก็คือ การใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บรูปภาพในโทรศัพท์ให้มากขึ้น คุณสามารถแก้ไขจำนวนพิกเซลเพื่อให้ไฟล์มีขนาดเล็กลงได้

- 1 จากช่องมองภาพ ให้แตะที่  ในมุมซ้ายด้านล่าง
- 2 เลือก  จากเมนูตั้งค่า
- 3 เลือกค่าพิกเซลจากตัวเลือก 5 ตัวเลือก (3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240) หรือเลือกค่าที่ตั้งไว้ล่วงหน้า:
รายชื่อ - ตัวเลือกนี้จะเป็นการกำหนดให้กล้องถ่ายภาพในขนาดที่เหมาะสมกับการใส่เข้าไปในรายชื่อในโทรศัพท์



การเลือกโทนสี


- 1 จากช่องมองภาพ ให้แตะที่  ในมุมซ้ายด้านล่าง
- 2 เลือก  จากเมนูตั้งค่า
- 3 โทนสีมีตัวเลือกทั้งหมด 6 ตัวเลือก ดังนี้ ปกติ (สี), ขาวดำ, เนกาทีฟ, ซีเปีย, สเก็ทซ์, โซลาไรซ์
- 4 แตะที่โทนสีที่คุณต้องการใช้ แล้วเลือก ปิด



เคล็ดลับ! คุณสามารถเปลี่ยนภาพที่ถ่ายไว้สีเป็นขาวดำหรือซีเปียได้หลังจากบันทึกภาพ แต่คุณจะเปลี่ยนภาพที่ถ่ายไว้เป็นขาวดำหรือซีเปียกลับเป็นภาพสีไม่ได้

การใช้กล้องถ่ายรูปตัวใน

LG KF700 มีกล้องถ่ายภาพตัวในขนาด 640x480 ซึ่งไม่เพียงใช้สำหรับการสนทนาทางวิดีโอเท่านั้น แต่ยังใช้สำหรับการถ่ายภาพด้วย




- 1 ในการสลับไปยังกล้องถ่ายรูปตัวใน แตะที่  และเลือก  และเลือก **กล้องถ่ายรูปตัวใน**
- 2 หลังจากผ่านไปสักครู่ คุณจะเห็นภาพตัวคุณเองอยู่ในช่องมองภาพในการถ่ายภาพ ให้กดปุ่มถ่ายภาพตามปกติ


เคล็ดลับ! กล้องถ่ายรูปตัวในมีการตั้งค่าที่น้อยกว่า กล่าวคือ ไม่มีแฟลช และ ISO คุณยังคงสามารถแก้ไขขนาดภาพ คุณภาพของภาพ ความสมดุลแสง และอื่นๆได้ด้วยการแตะ  ในวิธีเดียวกับขณะใช้กล้องหลัก

- 3 หลังจากที่คุณถ่ายภาพแล้ว เครื่องจะแสดงตัวเลือกเดิมทั้งหมด เช่นเดียวกับที่ใช้สำหรับการถ่ายภาพด้วยกล้องหลัก
- 4 ในการกลับไปยังกล้องถ่ายรูปหลัก แตะที่  และ 



กล้อง

การดูภาพถ่ายที่บันทึกไว้

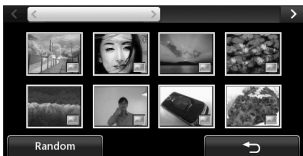- 1 คุณสามารถเข้าดูภาพถ่ายที่บันทึกไว้ได้จากภายในโหมดกล้องถ่ายรูปและจากหน้าจอสแตนด์บาย จากช่องมองภาพ เพียงแตะที่  จากหน้าจอสแตนด์บาย คุณควรแตะที่  และเลือก  เลือก เพิ่มข้อมูล แล้วตามด้วย ภาพส่วนตัว
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ






การดูรายละเอียดของภาพถ่าย

- 1 แตะที่ภาพถ่ายหนึ่งครั้ง และแตะที่  ที่ปรากฏขึ้น
- 2 ภาพถ่ายจะแสดงชื่อ, วันที่ที่ถ่าย, ขนาด (กิโลไบต์และพิกเซล) และประเภทรูปภาพ (เช่น jpeg) ที่ด้านบน
- 3 แตะที่  เพื่อปิดรายละเอียดและดูภาพถ่าย


กล้องวิดีโอ


การถ่ายวิดีโอด้วย


- 1 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์
- 2 แตะไอคอนกล้องวิดีโอในช่องมองภาพเพื่อสลับไปยังโหมดวิดีโอ ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 ให้ถือโทรศัพท์ในแนวนอน และหันไปทางสิ่งที่จะถ่าย
- 4 กดปุ่มถ่ายภาพหนึ่งครั้งเพื่อเริ่มการบันทึก
- 5 **REC** และเวลาจะปรากฏขึ้นที่ด้านล่างของช่องมองภาพ
- 6 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  และเริ่มบันทึกต่อโดยเลือก 
- 7 แตะที่  บนหน้าจอ หรือกดปุ่มถ่ายภาพซ้ำอีกครั้งเพื่อหยุดการบันทึก


หลังจากที่ถ่ายวิดีโอแล้ว

ภาพนิ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ ชื่อของภาพจะวิ่งไปตามด้านล่างของหน้าจอ พร้อมกับมีไอคอน 3 ไอคอนเรียงอยู่ทางด้านขวามือ

 แตะเพื่อถ่ายภาพวิดีโออื่นต่อ โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้

 แตะเพื่อดูวิดีโอคลิปอื่นๆ ในอัลบั้มของคุณ โดยที่วิดีโอคลิปปัจจุบันของคุณจะได้รับการบันทึกไว้ โปรดดูที่หน้า 43 สำหรับการดูวิดีโอที่บันทึกไว้

 แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

 แตะเพื่อส่งวิดีโอเป็น MMS, อีเมล หรือทาง บลูทูธ โปรดดูที่หน้า 26 สำหรับการส่งข้อความ หรือหน้า 71 สำหรับการส่งและการรับไฟล์โดยใช้

01

02

03



04


05

06




07

08

- หลังจากที่คุณถ่ายภาพวิดีโอแล้ว เครื่องจะแสดงตัวเลือกเดิมทั้งหมด เช่นเดียวกับที่ใช้สำหรับการถ่ายวิดีโอด้วยกล้องหลัก
- ในการกลับไปยังกล้องถ่ายรูปหลัก และที่  และ 

เคล็ดลับ! คุณยังคงสามารถแก้ไขขนาดวิดีโอ, คุณภาพของวิดีโอ, ระยะเวลา, ปิดเสียง, สมดุลแสง, โทนสี และอื่นๆ ได้ด้วยการแตะ  ในวิธีเดียวกับขณะใช้กล้องหลัก

การดูวิดีโอที่บันทึกไว้

- จากช่องมองภาพ เพียงแตะที่  จากหน้าจอสแตนด์บาย คุณควรแตะที่  และเลือก  และเลือก **เพิ่มข้อมูล** และเลือก **วิดีโอ**
- คลังภาพของคุณจะปรากฏบนหน้าจอ
- แตะที่วิดีโอที่คุณต้องการดูหนึ่งครั้ง เพื่อแสดงวิดีโอที่ด้านหน้าสุดของคลังภาพ
- แตะที่วิดีโออีกครั้งเพื่อเปิดทั้งไฟล์

01

02

03


04

05


06

07

08

- 2 ภาพนิ่งของวิดีโอหรือภาพถ่ายจะแสดงชื่อไฟล์ วันที่ที่ถ่าย ขนาด (กิโลไบต์และพิกเซล) ตลอดจนแสดงให้เห็นว่าเป็นไฟล์ภาพหรือไฟล์วิดีโอ (เช่น MP4/3GP หรือ JPEG) ทางด้านบน
- 3 และที่  เพื่อปิดรายละเอียดและดูภาพนิ่งของวิดีโอหรือภาพถ่าย


การส่งภาพถ่ายหรือวิดีโอจากคลังภาพ

- 1 และที่ภาพถ่ายหรือวิดีโอสองครั้งเพื่อเปิด หากคุณเลือกวิดีโอ ให้กด **||** เมื่อเริ่มเล่น
- 2 เลือก  และเลือกวิธีที่คุณต้องการส่งวิดีโอหรือภาพถ่ายของคุณ ดังนี้: **ข้อความ, อีเมล, บลูทูธ**
- 3 แอปพลิเคชันข้อความที่เลือกจะเปิดขึ้น เพื่อให้คุณสามารถส่งวิดีโอหรือภาพถ่ายได้


หมายเหตุ: อาจจำเป็นต้องลดขนาดภาพถ่ายหรือวิดีโอก่อนที่จะสามารถส่งทาง MMS ได้ วิดีโอบางไฟล์อาจมีขนาดใหญ่เกินกว่าที่จะส่งทาง MMS ในกรณีดังกล่าว ให้เลือกตัวเลือกใดตัวเลือกหนึ่งต่อไปนี้


การดูภาพถ่ายแบบภาพสไลด์

โหมดภาพสไลด์จะแสดงภาพถ่ายทั้งหมดในคลังภาพของคุณพร้อมกันเป็นภาพสไลด์ วิดีโอไม่สามารถดูเป็นแบบภาพสไลด์ได้

- 1 และที่ภาพถ่ายที่คุณต้องการเริ่มเล่นภาพสไลด์ 2 ครั้งเพื่อเปิด
- 2 เลือก  ทางด้านบนซ้ายมือ
- 3 ภาพสไลด์จะเริ่มต้น



ภายในภาพสไลด์มีตัวเลือก 5 ตัวเลือกดังนี้:

 และเพื่อแสดงภาพถ่ายในโหมดเต็มหน้าจอ แถบทางด้านซ้ายมือสามารถเพิ่มหรือลดความเร็วของภาพสไลด์

 และที่นี้เพื่อดูภาพถ่ายตามลำดับการสุ่ม (เช่น ไม่ได้เรียงตามลำดับที่แสดงในคลังภาพ)

 และเพื่อข้ามไปยังภาพถ่ายถัดไป

 และเพื่อกลับไปที่ภาพถ่ายที่แสดงล่าสุด

 /  และเพื่อหยุดภาพสไลด์ชั่วคราวที่ภาพใดภาพหนึ่ง และอีกครั้งเพื่อเริ่มเล่นต่อ

01

02

03

04

05


06

07

08

ภาพถ่ายและวิดีโอ

การตั้งค่าภาพถ่ายเป็นภาพพื้นหลัง

- 1 แตะที่ภาพถ่ายที่คุณต้องการตั้งค่าเป็นภาพพื้นหลัง 2 ครั้งเพื่อเปิด
- 2 แตะที่ 
- 3 หน้าจอจะสลับไปเป็นโหมดแนวตั้ง เลือกส่วนของภาพถ่ายที่คุณต้องการตั้งค่าเป็นภาพพื้นหลัง พื้นที่นี้จะปรากฏเป็นขนาดตามจริงบนหน้าจอ
- 4 เมื่อคุณพอใจกับส่วนนี้แล้ว ให้แตะที่ **ตั้งค่า**



การแก้ไขภาพถ่าย


มีคุณสมบัติยอดเยี่ยมมากมายที่คุณสามารถใช้ในการเปลี่ยนแปลงภาพถ่าย เพิ่มภาพถ่าย หรือทำให้มีชีวิตชีวขึ้นเล็กน้อย



- 1 เปิดภาพถ่ายที่คุณต้องการแก้ไขและแตะที่  เพื่อแสดงตัวเลือก




- 2 แตะที่ไอคอนเพื่อปรับภาพถ่ายของคุณ:


 วาดลายเส้นบนภาพถ่ายของคุณด้วยมือเปล่า เลือกความหนาของเส้นจาก 4 ตัวเลือก ในการเปลี่ยนสีของเส้น โปรดดูที่  ทางด้านล่าง (ไอคอนสีจะเปลี่ยนเป็นสีที่คุณเลือกไว้)

 โปรดดูที่ **การเพิ่มข้อความลงในภาพถ่าย** ในหน้า 47

 ดกแต่งภาพถ่ายของคุณด้วยสแตมป์ เลือกจากสแตมป์ต่างๆ ที่มีอยู่แล้วและบริเวณภาพถ่ายที่คุณต้องการวาง ในการเปลี่ยนสีของสแตมป์ โปรดดูที่  ทางด้านล่าง

 เลือกพื้นที่สีเหลี่ยม

 บันทึกการเปลี่ยนแปลงที่คุณทำไว้ในภาพถ่ายของคุณ เลือกเพื่อบันทึกการเปลี่ยนแปลงทับ **ไฟล์ต้นฉบับ** หรือเป็น **ไฟล์ใหม่** หากคุณเลือก **ไฟล์ใหม่** ให้ป้อนชื่อไฟล์

 เปลี่ยนสีของสแตมป์ เส้นหรือบางข้อความ คุณต้องเลือกสีก่อนที่จะลงมือวาด เขียนหรือติดสแตมป์บนภาพถ่าย

 เลิกทำการแก้ไขล่าสุดที่คุณทำไว้ในภาพถ่าย

 โปรดดูที่ **การเพิ่มเอฟเฟกต์ลงในภาพถ่าย** ในหน้า 47

 **More** แตะเพื่อเปิดตัวเลือกเอฟเฟกต์



เพิ่มเติม ได้แก่ หมุน และ กระจก นอกจากนี้ ยังมีตัวเลือกการแก้ไขขั้นสูงเพิ่มเติมอีก โปรดดูที่ การเน้นสี และการสลบสีในภาพถ่าย ในหน้า 48

 และเพื่อกลับไปคัลงภาพ

การเพิ่มข้อความลงในภาพถ่าย


- 1 จากหน้าจอแก้ไข ให้แตะที่ **T**
- 2 ป้อนตัวอักษรที่คุณต้องการ
- 3 ป้อนข้อความโดยใช้ปุ่มกด และแตะที่ **เสร็จ**
- 4 เลื่อนข้อความโดยแตะที่ข้อความแล้วเลื่อนไปยังบริเวณที่คุณต้องการวาง

การเพิ่มเอฟเฟกต์ลงในภาพถ่าย

- 1 จากหน้าจอแก้ไข ให้แตะที่ 
- 2 เลือกเพื่อใช้ตัวเลือกใดตัวเลือกหนึ่งจาก 6 ตัวเลือกกับภาพถ่าย:
อ่อนลง - เลื่อนเครื่องหมายไปตามแถบเพื่อทำให้โฟกัสของภาพดูนุ่มนวลขึ้น เลือก **เสร็จ** เพื่อบันทึกการเปลี่ยนแปลง หรือเลือก **ยกเลิก**
คมชัด - เลื่อนเครื่องหมายบนแถบเพื่อทำให้โฟกัสของภาพดูคมชัดขึ้น เลือก **เสร็จ** เพื่อบันทึกการเปลี่ยนแปลง หรือเลือก **ยกเลิก**
ลวดลายแบบโมเสก - แตะเพื่อใช้เอฟเฟกต์ลวดลายแบบโมเสกกับภาพถ่าย และที่  เพื่อกลับไปภาพปกติ

เอฟเฟกต์สี - เปลี่ยนสีของภาพเป็น **ขาวดำ**, **ซีเปีย**, **สีเนกาทีฟ**, **RGB** **ประสิทธิภาพสูง** หรือ **ความเข้ม** หากคุณเลือก **ความเข้ม** ให้เลื่อนเครื่องหมายไปตามแถบเพื่อปรับเพิ่มหรือลดความเข้ม

เฟรม - ใส่เฟรมให้กับภาพถ่าย เครื่องจะแสดงข้อความให้คุณทราบ ว่าขนาดของภาพจะเปลี่ยนแปลงไป ในการดูประเภทเฟรม ให้เลือก **ใช้** เฟรมที่เลือกจะซ้อนทับอยู่บนภาพถ่าย **ปรับขนาด** - แตะที่นี่เพื่อดูตัวเลือกของขนาด และขนาดที่คุณต้องการ เพื่อเปลี่ยนขนาดของภาพถ่าย

- 3 ในกรเลือกทำเอฟเฟกต์ เพียงแค่แตะที่ 

เคล็ดลับ! คุณสามารถเพิ่มเอฟเฟกต์มากกว่าหนึ่งเอฟเฟกต์ลงในภาพถ่ายได้ นอกจากเอฟเฟกต์สีที่คุณสามารถเลือกได้แค่ครั้งเดียวเท่านั้น

การเน้นสีในภาพถ่าย

- 1 จากหน้าจอแก้ไข ให้แตะที่ **More**
- 2 เลือก **เน้นสี**
- 3 เลือกส่วนหนึ่งส่วนใดของภาพ รอยเส้นจะปรากฏรอบสิ่งต่างๆ ในบริเวณนั้นที่มีสีเหมือนกัน หรือคล้ายคลึงกัน ตัวอย่างเช่น สีผม หรือสีของเสื้อ
- 4 แตะที่ **บันทึก**

01

02

03

04

05



06

07


08

มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์

ในการเข้าใช้งานเมนูมัลติมีเดีย ให้แตะที่  และ  แตะที่ **แฟ้มข้อมูล** เพื่อเปิดรายการโฟลเดอร์ที่จัดเก็บไฟล์มัลติมีเดียทั้งหมด

ภาพ

ภาพ ประกอบด้วยรายการรูปภาพ รวมถึงภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์ แตะที่  เพื่อเปลี่ยนมุมมองจากภาพขนาดย่อเป็นรายการ

เมนูตัวเลือกภาพส่วนตัว

แตะ  สำหรับตัวเลือก

ตัวเลือกที่มีอยู่ใน **ภาพส่วนตัว** จะขึ้นอยู่กับประเภทรูปภาพที่คุณเลือก ตัวเลือกทั้งหมดจะใช้ได้กับภาพที่คุณถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์ ส่วนตัวเลือก **ใช้เป็น**, **พิมพ์ผ่าน บลูทูธ**, **เรียงตาม** และ **ข้อมูลหน่วยความจำ** จะมีสำหรับภาพเริ่มต้นเท่านั้น

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

ส่ง - ส่งภาพไปยังเพื่อน

ใช้เป็น - กำหนดภาพเพื่อแสดงในเวลาที่ต้องการ

เลือก/ไม่เลือก -

เลือกไฟล์หลายไฟล์

ย้าย - ย้ายรูปภาพจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำ หรือย้ายจากการดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์

คัดลอก - คัดลอกรูปภาพจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำ หรือคัดลอกจากการดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์

ลบ - ลบภาพ

แก้ไข - แก้ไขชื่อภาพ

สร้างโฟลเดอร์ใหม่ - สร้างโฟลเดอร์ใหม่ภายในโฟลเดอร์ **ภาพส่วนตัว**

ภาพสไลด์ - เริ่มต้นภาพสไลด์

พิมพ์ผ่าน บลูทูธ - พิมพ์ไฟล์ภาพผ่าน Bluetooth®

เรียงตาม - เรียงภาพตามลำดับที่ระบุไว้

ข้อมูลหน่วยความจำ - ดูสถานะหน่วยความจำ

01

02

03

04

05




06

07

08




มัลติมีเดีย

การส่งภาพถ่าย

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ **เพิ่มข้อมูล** แล้วเลือก **ภาพ**
- 3 เลือกภาพถ่าย แล้วแตะที่ 
- 4 แตะที่ **ส่ง** แล้วเลือกจาก **ข้อความ**, **อีเมล** หรือ **บลูทูธ**
- 5 หากคุณเลือก **ข้อความ** หรือ **อีเมล** ภาพถ่ายจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ และโทรศัพท์จะค้นหาลูกปรกรณ์ที่จะส่งภาพไป

การใช้รูปภาพ




คุณสามารถเลือกรูปภาพเพื่อใช้เป็นภาพพื้นหลังและภาพพิกหน้าจอ หรือใช้เพื่อระบุผู้โทรเข้าได้

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ **เพิ่มข้อมูล** แล้วเลือก **ภาพ**
- 3 เลือกภาพแล้วแตะที่ 
- 4 แตะที่ **ใช้เป็น** แล้วเลือกจาก:
ภาพพื้นหลัง - กำหนดเป็นภาพพื้นหลังของหน้าจอสแตนด์บาย
สายโทรออก - กำหนดให้ภาพปรากฏขึ้นระหว่างการโทรออก
การเปิดเครื่อง - กำหนดให้ภาพปรากฏขึ้นเมื่อเปิดเครื่อง

การปิดเครื่อง - กำหนดให้ภาพปรากฏขึ้นเมื่อปิดเครื่อง

ภาพรายชื่อ - กำหนดภาพให้กับบุคคลใดบุคคลหนึ่งในรายชื่อ เพื่อให้ภาพนั้นปรากฏขึ้นเมื่อบุคคลนั้นโทรมา

การจัดการรูปภาพ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ **เพิ่มข้อมูล** แล้วเลือก **ภาพ**
- 3 แตะที่  แล้วเลือก **เรียงลำดับตาม**
- 4 เลือกจาก **วันที่**, **ประเภท** หรือ **ชื่อ**

หมายเหตุ: แม้ว่าเราจะเรียงลำดับภาพตามชนิด คุณยังสามารถเรียงลำดับด้วยตนเองได้

การลบรูปภาพ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ **เพิ่มข้อมูล** แล้วเลือก **ภาพ**
- 3 เลือกภาพแล้วแตะที่ 
- 4 แตะที่ **ลบ** แล้วเลือก **ใช่** เพื่อยืนยัน

เคล็ดลับ! ในการลบไฟล์ใน **เพิ่มข้อมูล** อย่างรวดเร็ว ให้แตะที่ไฟล์ที่ต้องการหนึ่งครั้ง เพื่อเน้นไฟล์ด้วยเคอร์เซอร์ แล้วกดปุ่ม **c** ยืนยันโดยการแตะที่ **ใช่**

การย้ายหรือคัดลอกรูปภาพ





คุณสามารถย้ายหรือคัดลอกรูปภาพระหว่างหน่วยความจำของโทรศัพท์กับ

การลดหน่วยความจำได้ เพื่อเป็นการเพิ่มพื้นที่หน่วยความจำในหน่วยความจำใด หน่วยความจำหนึ่ง หรือเพื่อป้องกันภาพมิให้สูญหาย

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ **เพิ่มข้อมูล** แล้วเลือก **ภาพ**
- 3 เลือกภาพแล้วแตะที่ 
- 4 เลือก **ย้าย** หรือ **ตัดลอก**







การเลือกหรือยกเลิกการเลือกรูปภาพ

หากคุณต้องการย้าย คัดลอก ส่ง หรือลบภาพต่างๆ ในครั้งเดียว ก่อนอื่นคุณต้องระบุภาพที่ต้องการโดยการเลือกด้วยเครื่องหมาย

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ **เพิ่มข้อมูล** แล้วเลือก **ภาพ**
- 3 แตะที่  แล้วเลือก **เลือก/ไม่เลือก**
- 4 จะมีช่องปรากฏขึ้นที่ด้านซ้ายของแต่ละภาพ ให้แตะที่ภาพสองครั้ง และเครื่องหมายจะปรากฏขึ้นในช่องทำเครื่องหมาย
- 5 ในการยกเลิกการเลือกภาพ ให้แตะที่ภาพอีกครั้ง เพื่อลบเครื่องหมายออกจากช่อง
- 6 เมื่อคุณทำเครื่องหมายที่ช่องต่างๆ ตามต้องการแล้ว ให้กดที่  และเลือกตัวเลือกใดตัวเลือกหนึ่ง

การสร้างภาพสไลด์

หากคุณต้องการดูภาพทั้งหมดบนโทรศัพท์ หรือดูภาพที่มีอย่างรวดเร็ว คุณสามารถสร้างภาพสไลด์เพื่อประหยัดเวลาในการเปิดและปิดภาพแต่ละภาพ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ **เพิ่มข้อมูล** แล้วเลือก **ภาพ**
- 3 แตะที่  แล้วเลือก **ภาพสไลด์**
- 4 ใช้  และ  เพื่อข้ามไปยังภาพต่างๆ หรือแตะที่  เพื่อแสดงลำดับภาพแบบสุ่ม



01

02

03

04

05


06

07


08

ใช่เป็น - ทีวีดีโอเป็นเสียงเรียกเข้า

การส่งวิดีโอคลิป

- 1 เลือกวิดีโอ แล้วแตะที่ 
- 2 แตะที่ **ส่ง** แล้วเลือกจาก **ข้อความ**, **อีเมล** หรือ **บลูทูธ**
- 3 หากคุณเลือก **ข้อความ** หรือ **อีเมล** วิดีโอคลิปจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิด บลูทูธ และโทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งวิดีโอไปให้

การใช้วิดีโอคลิปเป็นเสียงเรียกเข้า

- 1 เลือกวิดีโอ แล้วแตะที่ 
- 2 แตะที่ **ใช่เป็น** และเลือกจาก **เสียงเรียกเข้าแบบเสียง** หรือ **เสียงเรียกเข้าแบบวิดีโอ**

การใช้เมนูตัวเลือกของวิดีโอ

จากโฟลเดอร์ **วิดีโอ** คุณสามารถเลือกจากตัวเลือกต่อไปนี้ได้:

ใช่เป็น - กำหนดให้วิดีโอเป็นเสียงเรียกเข้า

ส่ง - ส่งวิดีโอไปยังเพื่อน

ย้าย - ย้ายวิดีโอคลิปจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำหรือย้ายจากการ์ดหน่วยความจำไปที่

หน่วยความจำของโทรศัพท์

ตัดลอก - ตัดลอกวิดีโอคลิปจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำ หรือตัดลอกจากการ์ดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์
ลบ - ลบวิดีโอ

แก้ไข - เปลี่ยนชื่อวิดีโอ

เลือก/ไม่เลือก - เลือกไฟล์หลายไฟล์
สร้างโฟลเดอร์ใหม่ - สร้างโฟลเดอร์ใหม่ภายในโฟลเดอร์ **วิดีโอของฉัน**

เรียงตาม - เรียงวิดีโอตามลำดับที่ระบุไว้
ข้อมูลหน่วยความจำ - ดูสถานะหน่วยความจำ

เกมส์และแอปฯ

เคล็ดลับ! ในการลบไฟล์ในเมนูส่วนตัวอย่างรวดเร็ว ให้แตะที่ไฟล์ที่ต้องการหนึ่งครั้ง เพื่อเน้นไฟล์ด้วยเคอร์เซอร์ แล้วกดปุ่ม **c** ยืนยันโดยการแตะที่ **ใช่**

การเล่นเกมส์

- 1 แตะที่  แล้วเลือก 

01

02

03

04

05


06

07

08

- 1 ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธ ที่โทรศัพท์และคอมพิวเตอร์ และทั้งคู่ต่างมองเห็นกันแล้ว
- 2 ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏอยู่ในโฟลเดอร์ **เอกสาร** หรือ **อื่นๆ**

การดูไฟล์

- 1 แตะที่ **⋮** แล้วเลือก 
- 2 แตะที่ **เพิ่มข้อมูล** แล้วเลือก **เอกสาร**
- 3 เลือกเอกสาร และแตะที่ **เปิด**


อื่นๆ

โฟลเดอร์ **อื่นๆ** ใช้สำหรับจัดเก็บไฟล์ประเภทอื่นๆ ที่ไม่ใช่รูปภาพ, เสียง, วิดีโอ, เกมส์ หรือแอปพลิเคชัน ซึ่งมีวิธีใช้เดียว




กับโฟลเดอร์ **เอกสาร** คุณจะพบว่าเมื่อคุณโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ ไฟล์เหล่านั้นจะปรากฏอยู่ในโฟลเดอร์ **อื่นๆ** มากกว่าจะปรากฏในโฟลเดอร์ **เอกสาร** หากเป็นเช่นนั้น คุณสามารถย้ายไฟล์เหล่านั้นได้

ในการย้ายไฟล์จากโฟลเดอร์ **อื่นๆ** ไปที่โฟลเดอร์ **เอกสาร**:

- 1 แตะที่ **⋮** แล้วเลือก 
- 2 แตะที่ **เพิ่มข้อมูล** แล้วเลือก **อื่นๆ**

- 3 เลือกไฟล์ แล้วแตะที่ 
- 4 แตะที่ **ย้าย** เลือกปลายทาง และแตะที่ **ย้าย** อีกครั้ง

การเล่นเพลง

- 1 แตะที่ **⋮** แล้วเลือก 
- 2 แตะที่ **เพลง** และ **ทุกแทร็ค**
- 3 เลือกเพลงที่ต้องการเล่น และแตะที่ **เล่น**
- 4 แตะที่  เพื่อหยุดเล่นเพลงชั่วคราว
- 5 แตะที่  เพื่อข้ามไปยังเพลงถัดไป
- 6 แตะที่  เพื่อข้ามไปยังเพลงก่อนหน้า
- 7 แตะที่  เพื่อหยุดเล่นเพลง และกลับไปที่เมนู **เพลง**

เคล็ดลับ! ในการเปลี่ยนระดับเสียงระหว่างฟังเพลง ให้แตะที่  หรือใช้ปุ่มหมุน

01

02

03

04

05

06

07

08




ใช้ เพื่อยืนยัน

เลือก/ไม่เลือก –
เลือกไฟล์หลายไฟล์

ใช้เป็น – คุณสามารถกำหนดให้
เพลงเป็นเสียงเอฟเฟกต์ได้

ข้อมูลหน่วยความจำ –
ดูข้อมูลรายการเพลง



การลบรายการเพลง

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ เพลง และ รายการเพลง
- 3 แตะที่  และ ลบ หรือ ลบทั้งหมด
เพื่อลบรายการเพลงทั้งหมด


การค้นหาสถานี

คุณสามารถตั้งสถานีวิทยุไว้ในโทรศัพท์
ได้ โดยการค้นหาด้วยตนเองหรือโดย
อัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้
ในหมายเลขของสถานีที่ระบุไว้ ดังนั้น
คุณ จึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก
คุณสามารถบันทึกได้สูงสุด 24 ช่อง
สถานีในโทรศัพท์ของคุณ

ในการปรับตั้งอัตโนมัติ:

- 1 แตะที่  แล้ว เลือก 
- 2 แตะที่ วิทยุ FM และ 
- 3 แตะที่ สแกนอัตโนมัติ และ ใช้
สถานีที่พบจะถูกกำหนดไว้ใน
หมายเลขของสถานีในโทรศัพท์
โดยอัตโนมัติ

ในการปรับตั้งด้วยตนเอง:

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ วิทยุ FM
- 3 แตะที่หมายเลขช่องสถานีที่คุณ
ต้องการบันทึกสถานี
- 4 ใช้ปุ่มลูกศรที่ด้านบนของหน้าจอ
เพื่อค้นหาสถานี
- 5 กด **ตั้งค่า** เพื่อบันทึกสถานีนั้น

การรีเซ็ตสถานี

- 1 แตะที่  แล้ว เลือก 
- 2 แตะที่ วิทยุ FM และ 
- 3 เลือก รีเซ็ต เพื่อรีเซ็ตช่องสถานี
ปัจจุบัน หรือเลือก รีเซ็ตทั้งหมด
เพื่อรีเซ็ตของสถานีทั้งหมด ช่อง
สถานีแต่ละช่องจะกลับไปความถี่
เริ่มต้นที่ 87.5Mhz

การฟังวิทยุ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ วิทยุ FM แล้วแตะที่หมายเลข
ช่องสถานีที่คุณต้องการฟัง

เคล็ดลับ! ในการเพิ่มประสิทธิภาพการรับ
สัญญาณวิทยุ ให้ยึดสายชุดหูฟังซึ่งทำ
หน้าที่เป็นเสาอากาศวิทยุ

01

02

03

04

05

06



07

08

เว็บไซต์



เพียงใช้เบราว์เซอร์และปลายนิ้วสัมผัส คุณก็จะสามารถหันต่อข่าวสารและพยากรณ์อากาศได้ ตลอดจนถึงข้อมูลเกี่ยวกับกีฬาหรือการจราจรได้ทุกเมื่อที่คุณต้องการ นอกจากนี้ เบราเซอร์ยังช่วยให้คุณสามารถดาวน์โหลดเพลงเสียงเรียกเข้า ภาพพื้นหลังและเกมส์ใหม่ล่าสุดได้

การเข้าใช้เว็บไซต์


- 1 จากหน้าจอสแตนด์บาย ให้เลือก  และแตะที่  และเลือก **เบราว์เซอร์**
- 2 ในการเข้าถึงโฮมเพจของเบราว์เซอร์โดยตรง ให้เลือก **หน้าหลัก** หรือเลือก **ป้อนแอดเดรส** จากนั้นพิมพ์ URL ที่คุณต้องการ แล้วเลือก **เชื่อมต่อ**
หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การเพิ่มและการใช้บุคมาร์ค


เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุคมาร์คและบันทึกเว็บเพจได้

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  และแตะที่  และเลือก **เบราว์เซอร์**
- 2 เลือก **บุคมาร์ค** รายการบุคมาร์คของ

คุณจะปรากฏขึ้นบนหน้าจอ




- 3 ในการเพิ่มบุคมาร์คใหม่ ให้เลือก  แล้วแตะที่ **เพิ่มใหม่** ป้อนชื่อสำหรับบุคมาร์ค แล้วตามด้วยป้อน URL
- 4 และที่ **บันทึก** บุคมาร์คของคุณจะปรากฏขึ้นในรายการบุคมาร์ค
- 5 ในการเข้าใช้งานบุคมาร์ค เพียงเลื่อนไปที่บุคมาร์ค แล้วแตะที่ **เปิด** เครื่องจะเชื่อมต่อเข้ากับ บุคมาร์คของคุณ

การบันทึกเพจ


- 1 เข้าถึงเว็บเพจที่ต้องการตามที่อธิบายไว้ข้างต้น
- 2 แตะที่  และเลือก **เพจที่บันทึก**
- 3 ป้อนชื่อสำหรับเว็บเพจเพื่อให้ง่ายต่อการจดจำ
- 4 แตะที่ **บันทึก**

เคล็ดลับ! เมนูนี้จะช่วยให้คุณ
สามารถแก้ไขชื่อของเพจที่บันทึกไว้
และลบเพจที่บันทึกไว้ได้


การเข้าใช้เพจที่บันทึกไว้

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  และแตะที่  และเลือก **เบราว์เซอร์**
- 2 เลือก **เพจที่บันทึก**
- 3 เลือกเพจที่ต้องการ แล้วแตะที่  และตามด้วย **เปิด**

การดูประวัติข้อมูลเบราเซอร์

- 1 จากหน้าจอสแตนด์บาย ให้เลือก **☰** และแตะที่  และเลือก **เบราเซอร์** เลือก **ประวัติ**
- 2 รายชื่อเว็บเพจที่คุณเข้าใช้ล่าสุดจะปรากฏขึ้น ในการเข้าใช้เพจใดเพจหนึ่ง ให้เลือกเพจที่ต้องการ แล้วแตะที่ **เชื่อมต่อ**

การเปลี่ยนการตั้งค่าเว็บเบราว์เซอร์

- 1 จากหน้าจอสแตนด์บาย ให้เลือก **☰** และแตะที่  และเลือก **เบราเซอร์** เลือก **ตั้งค่า**
- 2 คุณสามารถเลือกเพื่อแก้ไข **โปรไฟล์**, **การเข้ารหัสตัวอักษร**, **แคช**, **คุกกี้**, **Java script**, **ความปลอดภัย** หรือเพื่อรีเซ็ตการตั้งค่าทั้งหมด โดยเลือก **รีเซ็ตการตั้งค่า**
- 3 เมื่อคุณเปลี่ยนแปลงการตั้งค่าของคุณ ให้เลือก **ตกลง**

การใช้โทรศัพท์เป็นโมเด็ม

โทรศัพท์ KF700 ของคุณสามารถทำหน้าที่เป็นโมเด็มของเครื่องคอมพิวเตอร์ได้ จึงทำให้คุณสามารถส่งอีเมลและเข้าถึงอินเทอร์เน็ตได้ แม้ในเวลาที่คุณไม่ได้เชื่อมต่อโดยใช้สาย โดยคุณสามารถใช้สาย USB หรือบลูทูธ ก็ได้

การใช้สาย USB:

- 1 ตรวจสอบให้แน่ใจว่าคุณได้ติดตั้ง LG PC Suite บนเครื่องคอมพิวเตอร์ของคุณแล้ว
- 2 เชื่อมต่อ KF700 เข้ากับคอมพิวเตอร์ของคุณด้วยสาย USB แล้วเริ่มซอฟต์แวร์ LG PC Suite
- 3 คลิกที่ **Communication** บนคอมพิวเตอร์ของคุณ จากนั้นคลิกที่ **Settings** และเลือก **Modem**
- 4 เลือก **LG Mobile USB Modem** และเลือก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
- 5 คลิกที่ **Connect** และเครื่องคอมพิวเตอร์ของคุณจะเชื่อมต่ออินเทอร์เน็ตผ่านโทรศัพท์ KF700 ของคุณ

หมายเหตุ: สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการซิงโครไนซ์โดยใช้ LG PC Suite โปรดดูที่หน้า 66

การใช้ บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าได้ตั้งค่าบลูทูธ เป็น **เปิด** และ **มองเห็นได้** ทั้งเครื่องพีซีและโทรศัพท์ KF700
- 2 จับคู่เครื่องคอมพิวเตอร์ของคุณและ KF700 เพื่อให้ต้องระบุรหัสผ่านสำหรับการเชื่อมต่อ
- 3 ใช้ **Connection wizard** ใน LG PC Suite เพื่อ การเชื่อมต่อ บลูทูธ ที่ใช้

01

02

03

04

05

06

07

08


เว็บไซต์


- 4 คลิกที่ **Communication**
บนคอมพิวเตอร์ของคุณ
จากนั้นคลิก **Setting**
- 5 คลิกที่ **Modem**
- 6 เลือก **Standard Modem over Bluetooth link** แล้วคลิก **OK**
จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
- 7 คลิกที่ **Connect**
และเครื่องคอมพิวเตอร์
ของคุณจะเชื่อมต่ออินเทอร์เน็ต
ผ่านโทรศัพท์ KF700 ของคุณ

หมายเหตุ: โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับ ที่หน้า 66-68


สมุดบันทึก

การเพิ่มเหตุการณ์ลงในปฏิทิน



- 1 จากหน้าจอสแตนด์บาย ให้เลือก **⋮** และแตะที่  และเลือก **อวกาศในเซอร์** เลือก **ปฏิทิน**
- 2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
- 3 แตะที่  เพื่อเพิ่มเหตุการณ์ใหม่
- 4 เลือกว่าคุณจะเพิ่ม **นัดหมาย**, **วันครบรอบ** หรือ **วันเกิด** และแตะที่ **ตกลง**
- 5 ตรวจสอบวันที่และป้อนเวลาให้เหตุการณ์เริ่ม
- 6 สำหรับการนัดหมายและวันครบรอบ ให้ป้อนเวลาและวันที่ที่เหตุการณ์สิ้นสุดในช่วงเวลาและวันที่ด้านล่างทั้งสองช่อง
- 7 หากคุณต้องการเพิ่มชื่อเรื่องหรือหมายเหตุในเหตุการณ์ ให้แตะที่ **ชื่อเรื่อง** หรือ **ชื่อ** และพิมพ์หมายเหตุ ตามด้วย **ตกลง**
- 8 เลือก **บันทึก** และเหตุการณ์ของคุณจะบันทึกอยู่ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมายกรอบสี่เหลี่ยมกำกับอยู่และเสียงกริ่งจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์ เพื่อให้คุณไม่พลาดกำหนดต่างๆ

เคล็ดลับ! คุณสามารถกำหนดช่วงวันหยุดในปฏิทินได้ และที่วันแต่ละวันที่เป็นวันหยุดของคุณ แล้วแตะที่  และเลือก **ตั้งวันหยุด** วันเหล่านั้นจะมีเงาสีแดงแสดงอยู่ เมื่อคุณตั้งปลุก คุณสามารถเลือกที่จะเจาะวันที่กำหนดเป็นวันหยุดได้

การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน

- 1 จากหน้าจอสแตนด์บาย ให้เลือก **⋮** และแตะที่  และเลือก **สมุดบันทึก** เลือก **ตั้งค่า**
- 2 แตะที่ **ตั้งปฏิทิน** และเลือก **มุมมองเริ่มต้น** หรือ **สัปดาห์เริ่มเมื่อ**
- 3 กด **ตกลง** เพื่อยืนยันการเลือกของคุณ

การเพิ่มรายการลงในสิ่งที่ต้องทำ

- 1 จากหน้าจอสแตนด์บาย ให้เลือก **⋮** และแตะที่  และเลือก **อวกาศในเซอร์**
- 2 เลือก **สิ่งที่ต้องทำ** และแตะที่  ที่มุมบนด้านขวามือ
- 3 กำหนดวันที่ของรายการที่ต้องทำ เพิ่มหมายเหตุ และเลือกลำดับความสำคัญ: **สูง**, **ปานกลาง** หรือ **ต่ำ**
- 4 บันทึกรายการสิ่งที่ต้องทำโดยเลือกที่ **บันทึก**

01

02

03

04


05

06




07

08

สมุดบันทึก

เคล็ดลับ! คุณสามารถแก้ไขรายการได้ โดยการเลือกรายการที่ต้องทำ แล้วแตะที่  เลือก **แก้ไข** และยืนยันการแก้ไขโดยการเลือก **บันทึก**



การแบ่งปันรายการที่ต้องทำ

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  และ  และเลือก **ออกในเซอ** เลือก **สิ่งที่ต้องทำ**
- 2 เลือกรายการที่ต้องการที่ต้องการแบ่งปัน แล้วแตะที่ 
- 3 เลือก **ส่ง** คุณสามารถเลือกแบ่งปันรายการที่ต้องทำ เป็น **ข้อความตัวอักษร**, **ข้อความมัลติมีเดีย**, **อีเมล** หรือ **บลูทูธ**





เคล็ดลับ! คุณสามารถสำรองข้อมูลและซิงโครไนซ์ปฏิทินของคุณกับคอมพิวเตอร์ได้ โปรดดูที่ **PC Sync** ในหน้า 66

การใช้ตัวค้นหาวรรณที่

ตัวค้นหาวรรณที่เป็นเครื่องมืออำนวยความสะดวกที่ช่วยให้คุณสามารถคำนวณวันหลังจากที่ผ่านมาแล้วหลายวันได้ ตัวอย่างเช่น 60 วันจากวันที่10.10.2007 คือ วันที่ 09.12.2007 ซึ่งเหมาะสำหรับการรอคอยวันที่ครบกำหนด

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  และแตะที่  และเลือก **ออกในเซอ**
- 2 เลือก **ตัวค้นหาวรรณที่**
- 3 ในแท็บ **จาก** ให้กำหนดวันที่ที่ต้องการ
- 4 ในแท็บ **หลังจาก** ให้กำหนดจำนวนวัน
- 5 วันที่เป้าหมาย จะปรากฏขึ้นด้านล่าง

การตั้งเวลาปลุก



- 1 จากหน้าจอสแตนด์บาย ให้เลือก  และ  และเลือก **ตั้งปลุก**
- 2 แตะที่  เพื่อตั้งค่าการเตือน
- 3 กำหนดเวลาที่ต้องการให้ส่งเสียงปลุกแล้วแตะที่ **ตั้งค่า**
- 4 เลือกว่าคุณต้องการให้ส่งเสียงปลุก **ครั้งเดียว**, **ทุกวัน**, **จ - ศ**, **จ - ส**, **ส - อา** หรือ **ยกเว้นวันหยุด** กด **ตกลง**
- 5 เลือก  เพื่อเลือกเสียงสำหรับการปลุก ในการฟังเสียง ให้แตะที่เสียง แล้วตามด้วย **เล่น** หลังจากที่ได้เลือกได้แล้ว ให้แตะที่ **เลือก**
- 6 เพิ่มบันทึกสำหรับการปลุก แตะที่ **ตกลง** เมื่อคุณเพิ่มบันทึกเสร็จแล้ว เมื่อเสียงปลุกดัง เครื่องจะแสดงบันทึกขึ้นมา
- 7 สุดท้าย คุณสามารถกำหนดรอบเวลาในการเลือกปลุกเป็น **5, 10, 20, 30** นาที, **1 ชั่วโมง** หรือ **ปิด** กด **ตกลง** เพื่อยืนยันการเลือกของคุณ

8 เมื่อคุณตั้งปลุกเสร็จแล้ว ให้แตะที่ **บันทึก**

หมายเหตุ: คุณสามารถตั้งปลุกได้ถึง 5 รายการ

เคล็ดลับ! แม้โทรศัพท์จะปิดอยู่ เครื่องจะส่งเสียงเตือนตามเวลาที่ตั้งไว้ หากคุณแตะเลื่อนเวลาปลุก เครื่องจะส่งเสียงเตือนอีกครั้งในอีก 5 นาที หากคุณแตะที่ **หยุดข้อความ** 'เปิดโทรศัพท์?' จะปรากฏขึ้น

การเพิ่มบันทึก

- 1 จากหน้าจอแสดงต้นแบบ ให้เลือก **⋮** และแตะ  และเลือก **บันทึก**
- 2 แตะที่  เพื่อเพิ่มบันทึกใหม่
- 3 พิมพ์บันทึก แล้วตามด้วย **บันทึก**
- 4 บันทึกของคุณจะปรากฏขึ้นบนหน้าจอ เมื่อคุณเปิดแอปพลิเคชัน **บันทึก** ในครั้งถัดไป

เคล็ดลับ! คุณสามารถแก้ไขบันทึกที่มีอยู่ได้ ให้เลือกบันทึกที่ต้องการแก้ไข แล้วแตะที่ **แก้ไข**

เครื่องบันทึกเสียง

ใช้ **เครื่องบันทึกเสียง** เพื่อบันทึกเสียงเตือนความจำหรือเสียงอื่นๆ

- 1 แตะที่ **⋮** แล้วเลือก 
- 2 แตะที่ **บันทึกเสียง** และกด 

เพื่อเริ่มบันทึกเสียง หรือกด 

และเลือกจาก:

ระยะเวลา –

กำหนดระยะเวลาในการบันทึก





เลือกจาก **ขนาดข้อความ MMS, 1 นาที** หรือ **ไม่จำกัด**


คุณภาพ – เลือกคุณภาพของเสียง

เลือกจาก **ละเอียดมาก, ละเอียด** หรือ **ปกติ**

ไปที่เสียงส่วนตัว – เปิดโฟลเดอร์รายการบันทึกเสียงใน **เสียงส่วนตัว**

การบันทึกเสียงหรือเสียงพูด

- 1 แตะที่ **⋮** แล้วเลือก 
- 2 แตะที่ **บันทึกเสียง**
- 3 แตะที่  เพื่อเริ่มบันทึก
- 4 แตะที่  เพื่อจบการบันทึก
- 5 แตะที่  เพื่อฟังรายการที่บันทึก

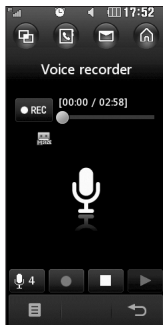

01

02

03

04

05



06


07

08




สมุดบันทึก

การส่งรายการบันทึกเสียง




- 1 เมื่อคุณบันทึกเสียงเสร็จแล้ว ให้แตะที่ 
- 2 แตะที่  แล้วเลือกจาก **ข้อความ** **อีเมล** หรือ **บลูทูธ** หากคุณเลือก **ข้อความ** หรือ **อีเมล** รายการที่บันทึกจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ


หมายเหตุ: หลังจากที่คุณบันทึกเสียงเสร็จแล้ว ให้แตะที่  และเลือก **ส่งไฟล์** (แก้ไขชื่อ, ข้อมูลไฟล์), **ลบ**, **ใช้เป็น** (เพื่อใช้เป็นเสียงเรียกเข้า) หรือ **ไปที่เสียง**

การใช้เครื่องคิดเลข



- 1 จากหน้าจอสแตนด์บาย ให้เลือก  และแตะที่  และเลือก **เครื่องมือ**
- 2 เลือก **เครื่องคิดเลข**
- 3 ใช้ปุ่มในการป้อนตัวเลข
- 4 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, ÷, x) แล้วตามด้วย =
- 5 สำหรับการคำนวณแบบซับซ้อน ให้แตะที่  และเลือกจาก **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** หรือ **rad**

การใส่ชื่อเมืองลงในเวลาทั่วโลก

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  และแตะที่  และเลือก **เครื่องมือ**
- 2 เลือก **เวลาทั่วโลก**
- 3 แตะที่ไอคอน  แล้วทำตามด้วย **เพิ่มเมือง** เริ่มพิมพ์ชื่อเมืองที่คุณต้องการ และชื่อนั้นจะปรากฏที่ด้านบนของหน้าจอ หรือแตะที่ **แผนที่** และเลือกเมืองที่เลือกไว้จากแผนที่
- 4 แตะที่ **เลือก** เพื่อยืนยันการเลือกของคุณ

เคล็ดลับ! หากคุณไปต่างประเทศ คุณสามารถเปลี่ยนโซนเวลาจากเวลาทั่วโลกได้ โดยการแตะที่  แล้วทำตามด้วย **ตั้งเป็นโซนเวลา**

การแปลงหน่วย

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  และแตะที่  และเลือก **เครื่องมือ**
- 2 เลือก **ตัวแปลงหน่วย**
- 3 เลือกว่าคุณจะแปลง **สกุลเงิน**, **พื้นที่**, **ความยาว**, **น้ำหนัก**, **อุณหภูมิ**, **ปริมาตร** หรือ **ความเร็ว**
- 4 คุณสามารถเลือกหน่วย และป้อนค่าที่คุณต้องการแปลง แล้วทำตามด้วยหน่วยที่คุณต้องการแปลงเป็น
- 5 ค่าผลลัพธ์ที่เกี่ยวข้องของกันจะปรากฏขึ้นบนหน้าจอ

การใช้นาฬิกาจับเวลา

- 1 จากหน้าจอแสดงอันดับบาย ให้เลือก **⋮** และแตะที่ **🕒** และเลือก **เครื่องมือ**
- 2 เลือก **นาฬิกาจับเวลา**
- 3 แตะที่ **เริ่ม** เพื่อเริ่มเริ่มต้นตัวตั้งเวลา
- 4 แตะที่ **รอบ** หากคุณต้องการบันทึก รอบเวลา
- 5 แตะที่ **หยุด** เพื่อหยุดตัวตั้งเวลา
- 6 แตะที่ **ต่อ** เพื่อเริ่มนาฬิกาจับเวลาใหม่ ต่อจากเวลาที่หยุดไว้ **รีเซ็ต** เพื่อ เริ่มต้นเวลาใหม่อีกครั้ง

01

02

03

04

05

06



07

08

PC Sync

คุณสามารถซิงโครไนซ์คอมพิวเตอร์กับโทรศัพท์ของคุณ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน รวมทั้งยังเป็นการสำรองข้อมูลที่ช่วยให้คุณจำได้อย่างง่ายดายอีกด้วย

การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  จากนั้นเลือก **ตั้งค่าโทรศัพท์**
- 2 เลือก **การเชื่อมต่อ** และ **โหมดการเชื่อมต่อ USB**
- 3 เลือก **บริการข้อมูล** แล้วแตะที่ **เลือก**
- 4 ใส่แผ่นซีดีที่ให้มาด้วยในเครื่องคอมพิวเตอร์ **LG PC Suite Installer** จะปรากฏขึ้นบนหน้าจอ คลิกที่ **LG PC Suite Installer**
- 5 เลือกภาษาที่ต้องการใช้ในการติดตั้ง แล้วคลิกที่ **OK**
- 6 ปฏิบัติตามคำแนะนำบนหน้าจอ เพื่อทำให้วีราร์ด **LG PC Suite Installer** เสร็จสมบูรณ์
- 7 เมื่อติดตั้งเสร็จเรียบร้อยแล้ว ไอคอน **LG PC Suite** จะปรากฏขึ้นบนเดสก์ทอป

การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

- 1 เชื่อมสาย USB ที่โทรศัพท์และคอมพิวเตอร์ของคุณ
- 2 ดับเบิลคลิกที่ **LG PC Suite** บนเดสก์ทอปของคุณ
- 3 คลิกที่ **Connection Wizard** แล้วคลิก **USB**
- 4 คลิกที่ **Next** แล้วคลิก **Next** อีกครั้ง จากนั้นคลิก **Finish** โทรศัพท์และคอมพิวเตอร์ของคุณเชื่อมต่อกันเรียบร้อยแล้ว

การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **Backup** แล้วเลือก **Backup** หรือ **Restore**
- 3 เลือกเนื้อหาที่คุณต้องการสำรองข้อมูลหรือเรียกคืน เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือเรียกคืนข้อมูล คลิก **OK**
- 4 ระบบจะสำรองข้อมูลของคุณ

การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **Contents**
- 3 เอกสารทั้งหมด, ข้อมูล Flash, ภาพ, เสียง และวิดีโอ ซึ่งคุณบันทึกไว้ในโทรศัพท์ของคุณจะปรากฏบนหน้าจอในโฟลเดอร์ LG Phone

เคล็ดลับ! การดูเนื้อหาของโทรศัพท์บนเครื่องคอมพิวเตอร์จะช่วยให้คุณบริหารจัดการเรียงไฟล์ จัดการเอกสาร และลบเนื้อหาที่คุณไม่ต้องการใช้อีกต่อไปได้

การซิงโครไนซ์รายชื่อ

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์
- 2 คลิกที่ไอคอน **Contacts**
- 3 เลือก **Transfer** แล้วเลือก **Import from mobile handset** เครื่องคอมพิวเตอร์ของคุณจะอิมพอร์ตและแสดงรายชื่อทั้งหมดที่บันทึกไว้ในการ์ด USIM และโทรศัพท์
- 4 คลิกที่ **File** แล้วเลือก **Save** จากนั้นคุณสามารถเลือกตำแหน่งที่คุณต้องการบันทึกรายชื่อ

หมายเหตุ: ในการสำรองข้อมูลรายชื่อที่บันทึกไว้ใน USIM การ์ด ให้คลิกที่โฟลเดอร์ SIM Card ทางด้านซ้ายมือของหน้าจอคอมพิวเตอร์ เลือก **Edit** ที่ด้านบนสุดของหน้าจอ แล้วเลือก **Select All** คลิกขวาที่รายชื่อของคุณ แล้วเลือก **Copy to contact** จากนั้นคลิกที่โฟลเดอร์ **Handset** ทางด้านซ้ายมือของหน้าจอและหมายเลขทั้งหมดจะปรากฏขึ้น

การซิงโครไนซ์ข้อความ

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์
- 2 คลิกที่ไอคอน **Messages**
- 3 ข้อความในเครื่องคอมพิวเตอร์และโทรศัพท์ของคุณจะปรากฏขึ้นในโฟลเดอร์บนหน้าจอ
- 4 ใช้แถบเครื่องมือด้านบนสุดของหน้าจอเพื่อแก้ไขและจัดเรียงข้อความ

01

02

03

04

05

06



07

08

PC Sync

การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล

โทรศัพท์ของคุณสามารถใช้เป็นอุปกรณ์เก็บข้อมูลได้ หากคุณมีการ์ดหน่วยความจำติดตั้งไว้

- 1 เลิกการเชื่อมต่อเครื่องโทรศัพท์ของคุณออกจากเครื่องคอมพิวเตอร์
- 2 จากหน้าจอสถานะดูบาย ให้เลือก  และแตะ  และเลือก **ตั้งค่าโทรศัพท์**
- 3 เลือก **การเชื่อมต่อ** และ **โหมดการเชื่อมต่อ USB**
- 4 เลือก **ที่เก็บข้อมูล** และแตะที่ **เลือก**
- 5 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี โทรศัพท์ของคุณจะแสดงข้อความ:
กำลังเชื่อมต่อเป็นที่เก็บข้อมูล... แล้วตามด้วยเชื่อมต่อเป็นโหมดที่เก็บข้อมูลแล้ว อย่ายกเลิกการเชื่อมต่อระหว่างการถ่ายโอนข้อมูล
- 6 ไฟล์ทั้งหมดในโทรศัพท์ของคุณจะได้รับการจัดเก็บไปยังฮาร์ดดิสก์ของเครื่องคอมพิวเตอร์โดยอัตโนมัติ


หมายเหตุ: ที่เก็บข้อมูลจะสำรองข้อมูลเนื้อหาที่บันทึกไว้ในการ์ดหน่วยความจำเท่านั้น โดยไม่บันทึกในหน่วยความจำเครื่อง ในการถ่ายโอนเนื้อหาของหน่วยความจำเครื่อง (เช่น รายชื่อ) คุณจำเป็นต้องซิงโครไนซ์โดยใช้ PC Sync

ตั้งค่า

ภายในโฟลเดอร์นี้ คุณสามารถปรับการตั้งค่าเพื่อให้โทรศัพท์ KF700 ตอบสนองการทำงานในแบบของคุณได้

หมายเหตุ: โปรดดูข้อมูลเกี่ยวกับการตั้งค่าการโทรได้ที่หน้า 18

การเปลี่ยนการตั้งค่าหน้าจอ

- 1 แตะที่ **⋮** แล้วเลือก 
- 2 แตะที่ **หน้าจอ** และเลือกจาก:
ธีมหน้าจอ - เลือกธีมสำหรับหน้าจอหลัก, โทรออก, การเปิดเครื่อง และการปิดเครื่อง

นาฬิกา & ปฏิทิน -

เลือกวิธีการแสดงบนหน้าจอ

ไฟหน้าจอ - เลือกระยะเวลาการทำงานของแบ็คไลท์และปุ่มกด

ความสว่าง -

ปรับความสว่างของหน้าจอ

ธีมเครื่อง - เปลี่ยนรูปโฉมทั้งหน้าจอของคุณได้อย่างรวดเร็ว



แบบอักษร - ปรับสีแบบอักษร

- 3 แตะที่ **บันทึก** เพื่อบันทึกการตั้งค่าของคุณ

การปรับแต่งรูปแบบของคุณ

คุณสามารถเปลี่ยนรูปแบบบนหน้าจอ สแตนด์บายของคุณได้อย่างรวดเร็ว เพียงแตะที่ไอคอนรูปแบบที่ใช้งานในปัจจุบันทางด้านบนของหน้าจอ


คุณสามารถใช้เมนูการตั้งค่าในการปรับแต่งการตั้งค่ารูปแบบแต่ละรายการได้

- 1 กด **⋮** แล้วเลือก 
- 2 แตะที่ **รูปแบบเสียง** และเลือกรูปแบบที่คุณต้องการแก้ไข
- 3 แตะที่  แล้วเลือก **แก้ไข**
- 4 จากนั้น คุณสามารถเปลี่ยนตัวเลือกเสียงและการเตือนทั้งหมดที่มีอยู่ในรายการได้ รวมทั้ง **เสียงเรียกเข้า** และ **ระดับเสียง**, **เสียงเตือนข้อความ**, **เสียงสไลด์** เป็นต้น

การเปลี่ยนการตั้งค่าโทรศัพท์

เพลิดเพลินไปกับอิสระแห่งการปรับเปลี่ยนการทำงานของโทรศัพท์ KF700 เพื่อให้ตอบรับกับรูปแบบการทำงานของคุณให้มากที่สุด

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

- 1 แตะที่ **⋮** แล้วเลือก 
- 2 แตะที่ **ตั้งค่าโทรศัพท์** แล้วเลือกจากรายการทางด้านล่าง
วันที่ & เวลา - ปรับการตั้งค่าวันที่และเวลาของคุณ หรือเลือกให้ เครื่องอัปเดตเวลาอัตโนมัติเมื่อคุณเดินทางหรือ

01

02

03

04

05

06

07

08

ตั้งค่า

สำหรับการปรับเวลาตามฤดูกาล
ประหยัดพลังงาน - เลือก เปิด หรือ
ปิด การตั้งค่าประหยัดพลังงาน
ที่ตั้งมาจากโรงงาน

ภาษา -

เปลี่ยนภาษาบนจอแสดงผลของ
KF700 ของคุณ

ลือคปุมอัดโนมัติ - เลือกเวลาและ
วิธีลือคปุมกด

ความปลอดภัย - ปรับการตั้งค่าการ
รักษาความปลอดภัย ได้แก่ รหัส PIN
และลือคเครื่อง

การเชื่อมต่อ -

โปรดดูข้อมูลเพิ่มเติมที่ **การเปลี่ยน
การตั้งค่าการเชื่อมต่อ** ในหน้าถัดไป
เอฟเฟกต์ทัชสกรีน - เปลี่ยนการตั้งค่า
ทัชสกรีน

สถานะความจำ - โปรดดูข้อมูลเพิ่มเติม
ที่ การใช้ตัวจัดการหน่วยความจำ
ที่ด้านล่าง

การปรับเทียบทัชแพด - รีเซ็ตหน้า
จอเพื่อให้ง่ายต่อการใช้งาน

รีเซ็ตการตั้งค่า - รีเซ็ตการตั้งค่าทั้ง
หมดเป็นค่าที่ตั้งมาจากโรงงาน
ข้อมูลเครื่อง - ดูข้อมูลทางด้าน
เทคนิคของโทรศัพท์ KF700

การเปลี่ยนการตั้งค่าการ เชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่า
มาจากผู้ให้บริการระบบแล้ว ดังนั้น คุณ
จึงสามารถเพลิดเพลินกับโทรศัพท์ใหม่
ของคุณได้ทันที หากคุณต้องการเปลี่ยน
แปลงการตั้งค่า ให้ใช้เมนูนี้

แตะที่ **⋮** แล้วเลือก **⚙️** และที่
ตั้งค่าโทรศัพท์ และเลือก **การเชื่อมต่อ**

การตั้งค่าเครือข่าย - โทรศัพท์ KF700
จะเชื่อมต่อกับเครือข่ายที่ต้องการได้โดย
อัตโนมัติ ในการเปลี่ยนการตั้งค่าเหล่านี้
ให้ใช้เมนูนี้

โปรไฟล์อินเทอร์เน็ต - คุณสามารถตั้ง
ค่าและดูโปรไฟล์อินเทอร์เน็ตได้

จุดเชื่อมต่อ - ผู้ให้บริการระบบได้บันทึก
ข้อมูลนี้แล้ว คุณสามารถเพิ่มจุดเชื่อมต่อ
ใหม่โดยใช้เมนูนี้ได้

โหมดการเชื่อมต่อ USB - เลือก
บริการข้อมูล และซิงโครไนซ์โทรศัพท์
KF700 โดยใช้ซอฟต์แวร์ LG PC Suite
เพื่อตัดลือกไฟลงจากโทรศัพท์ โปรดดู
ข้อมูลเพิ่มเติมเกี่ยวกับการซิงโครไนซ์
ที่หน้า 66


บริการซิงค์ - โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับการ
ซิงโครไนซ์ที่หน้า 66

การตั้งค่าสตรีมมิ่ง - ผู้ให้บริการระบบ
ได้บันทึกข้อมูลนี้แล้ว คุณสามารถ
แก้ไขได้หากต้องการ

การใช้ตัวจัดการหน่วยความจำ

KF700 ของคุณมีหน่วยความจำให้เลือกสามแบบ: โทรศัพท์, USIM การ์ด และหน่วยความจำภายนอก (คุณอาจต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

คุณสามารถใช้ตัวจัดการหน่วยความจำในการกำหนดว่าในแต่ละหน่วยความจำใช้หน่วยความจำไปเท่าใด และดูว่ามีพื้นที่ว่างเหลือเท่าใด

แตะที่ **⋮** แล้วตามด้วย  เลือก **ตั้งค่าโทรศัพท์** และ **สถานะความจำหน่วยความจำทั่วไปของเครื่อง** - ดูหน่วยความจำที่มีในโทรศัพท์ KF700 สำหรับรูปภาพ, เสียง, วิดีโอ, Flash, MMS, Email, แอปพลิเคชัน Java, เอกสาร และอื่นๆ

หน่วยความจำสำรองของเครื่อง - ดูหน่วยความจำที่มีในเครื่องสำหรับข้อความตัวอักษรในโทรศัพท์, รายชื่อ, ปฏิทิน, สิ่งที่ต้องทำ, บันทึก, การปลุก, ข้อมูลการโทร, บุคมาเรค และรายการเบ็ดเตล็ดอื่นๆ

หน่วยความจำ USIM - ดูหน่วยความจำที่มีใน USIM การ์ด

หน่วยความจำการ์ด - ดูหน่วยความจำที่มีในการ์ดหน่วยความจำภายนอก (คุณต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)


การตั้งค่าที่จัดเก็บหลัก - เลือกตำแหน่งในการบันทึกไฟล์ที่ต้องการ

เคล็ดลับ! โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับการใส่การ์ดหน่วยความจำ ที่หน้า 12

การส่งและการรับไฟล์โดย Bluetooth

บลูทูธเป็นวิธีการส่งและรับไฟล์ที่ดีโดยไม่จำเป็นต้องต่อสาย ซึ่งสามารถเชื่อมต่อได้อย่างรวดเร็วและง่ายดาย คุณยังสามารถเชื่อมต่อกับชุดหูฟังบลูทูธเพื่อโทรออกและรับสายได้

ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ หรือเพลง
- 2 แตะที่  แล้วเลือก **ส่ง** เลือก **บลูทูธ**
- 3 แตะที่ **ใช่** เพื่อเปิด บลูทูธ
- 4 โทรศัพท์ KF700 จะค้นหาอุปกรณ์ที่ใช้บลูทูธอื่นๆ ภายในรัศมีนั้น โดยอัตโนมัติ
- 5 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไปแล้วแตะที่ **เลือก**
- 6 ไฟล์ของคุณจะถูกส่งออกไป

เคล็ดลับ! คอยเฝ้าดูแถบแสดงความคิดเห็นเพื่อให้แน่ใจว่าไฟล์ของคุณถูกส่งแล้ว

01

02

03

04

05

06

07


08

ตั้งค่า

ในการรับไฟล์:

- 1 ในการรับไฟล์ คุณต้องตั้งค่า บลูทูธ เป็น **เปิด** และ **มองเห็นได้** โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับ **การเปลี่ยนการตั้งค่า บลูทูธ** ที่ด้านล่าง
- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และที่ **ใช่** เพื่อรับไฟล์
- 3 คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว และคุณสามารถเลือกเพื่อ **ดู** ไฟล์หรือ **ใช่** เป็นภาพพื้นหลัง ได้ โดยปกติ ไฟล์จะบันทึกไว้ในโฟลเดอร์ที่เกี่ยวข้องกันใน แฟ้มข้อมูล

การเปลี่ยนการตั้งค่าบลูทูธ:

- 1 แตะที่ **⋮** และแตะที่ 
 - 2 เลือก **บลูทูธ** แล้วเลือก **ตั้งค่า** ทำการเปลี่ยนแปลง:
 - การมองเห็นอุปกรณ์** - เลือกว่าจะมองเห็นได้ หรือ **ซ่อน**
 - ชื่ออุปกรณ์** - ป้อนชื่อของโทรศัพท์ LG KF700
 - บริการที่สนับสนุน** - เลือกวิธีใช้บลูทูธ ที่เกี่ยวข้องกับบริการอื่นๆ โปรดดูที่ **การใช้โทรศัพท์เป็นโมเด็ม** ในหน้า 59 หรือ **การใช้ชุดหูฟังบลูทูธ** ที่ด้านล่าง
 - โหมดซิมรีโมท** - เลือก **เปิด** หรือ **ปิด**
- แอดเดรสส่วนตัว -

ตรวจสอบแอดเดรส บลูทูธ

การจับคู่กับอุปกรณ์บลูทูธอื่น

โดยการจับคู่โทรศัพท์ KF700 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อใด ซึ่งหมายความว่าอุปกรณ์ที่จับคู่ด้วยก็จะปลอดภัยมากขึ้น

- 1 ตรวจสอบว่าได้ตั้งค่า บลูทูธ เป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู **ตั้งค่า**
- 2 แตะที่ **อุปกรณ์ที่จับคู่** แล้วเลือก **ใหม่**
- 3 โทรศัพท์ KF700 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ **รีเฟรช** และ **เพิ่ม** จะปรากฏขึ้นบนหน้าจอ
- 4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย แตะที่ **เพิ่ม** และป้อนรหัสผ่าน และแตะที่ **ตกลง**
- 5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นซึ่งคุณควรป้อนรหัสผ่านเดียวกัน
- 6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

การใช้ชุดหูฟังบลูทูธ

- 1 ตรวจสอบว่าได้ตั้งค่า บลูทูธ เป็น เปิด
- 2 ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ
- 3 แตะที่ **ใช่** เพื่อ **เชื่อมต่อทันที**

เคล็ดลับ! โปรดดูรายละเอียดเกี่ยวกับโหมดตอบรับ BT ที่หน้า 22 เพื่อที่คุณจะสามารถควบคุมวิธีการตอบรับสายเมื่อมีการเชื่อมต่อชุดหูฟัง บลูทูธ

01

02

03

04

05

06

07

08

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ KF700

แท่นชาร์จ



แบตเตอรี่



ชุดหูฟังสเตอริโอ



สายเคเบิลข้อมูลและซิงดี

เชื่อมต่อและซิงโครไนซ์โทรศัพท์ KF700 เข้ากับ PC



คู่มือการใช้

เรียนรู้เพิ่มเติมเกี่ยวกับโทรศัพท์ KF700 ของคุณ



หมายเหตุ

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

บริการของเครือข่าย

โทรศัพท์ไร้สายที่อธิบายไว้ในคู่มือนี้ได้รับการรับรองให้ใช้ในระบบเครือข่าย GSM 900, DCS 1800, PCS 1900 และ W-CDMA

คุณสมบัติต่างๆ ที่กล่าวถึงในคู่มือนี้เรียกว่า บริการเสริมจากระบบเครือข่าย ซึ่งเป็นบริการพิเศษที่คุณขอเปิดใช้บริการได้จาก ผู้ให้บริการของคุณ ก่อนที่คุณจะสามารถใช้คุณสมบัติต่างๆ ของบริการเสริมจากระบบเครือข่ายเหล่านี้ คุณต้องสมัครขอรับบริการผ่านทางผู้ให้บริการ และขอคำแนะนำในการใช้จากผู้ให้บริการด้วย

ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์ : KF700
ระบบ: GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

อุณหภูมิแวดล้อม

สูงสุด : +55°C (คายประจุ), +45°C
(ขณะชาร์จ)
ต่ำสุด : -10°C

ศูนย์บริการ LG โดย บริษัท แอจจี อีเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน
เลขที่ 72/127
ถ. สมเด็จพระเจ้าตากสิน แขวงบวศโล
เขตธนบุรี กรุงเทพฯ 10600
วันและเวลาการ : จันทร์-ศุกร์, เสาร์ที่ 2
และ 4 ของเดือน 08:00 - 17:00 น.
Call center : 0-2878-5757

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF700

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.6.1, ETSI EN 301 489-07 V1.3.1
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.3.1
ETSI TS 151 010-1 V7.6.0 specified by ETSI EN 301 511 V9.0.2
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-1 V2.2.1 ETSI EN 301 908-2 V2.2.1,
ETSI EN 300 328 V1.6.1

EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji/ Director

Issued Date

22.Feb. 2008

LG Electronics Inc. Amsterdam Office
Veluwezoom15, 1327 AE Almere, The Netherlands
Tel : +31 -36-547 -8940, e-mail : seokim@lge.com


Signature of representative

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์
ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อ
จำเป็นต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่อง
ใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ
และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่ง
ความร้อน เช่น เครื่องระบายความร้อน
หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มี
การสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อ
บังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น
ห้ามใช้โทรศัพท์ในโรงพยาบาล
เนื่องจากอาจมีผลต่อการทำงานของ
อุปกรณ์ทางการแพทย์ที่ไวต่อ
สัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก
ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจ
ถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์
ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ
เนื่องจากโทรศัพท์อาจร้อนและทำให้
ติดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายใน
นอกเครื่องโทรศัพท์
(อย่าใช้สารละลาย เช่น เบนซิน
ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิว
อ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการ
ถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่มีฝน
หรือครันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิต
หรือบัตรโดยสารที่มีแถบแม่เหล็ก
เพราะอาจทำความเสียหายต่อข้อมูล
ในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอกด้วยวัตถุมีคม เพราะ
อาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของ
เหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง
ด้วยความระมัดระวัง อย่าแตะต้องเสา
อากาศโดยไม่จำเป็น

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้อสาย ซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความ สามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามชนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน


การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียว ในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ

- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG
- Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ

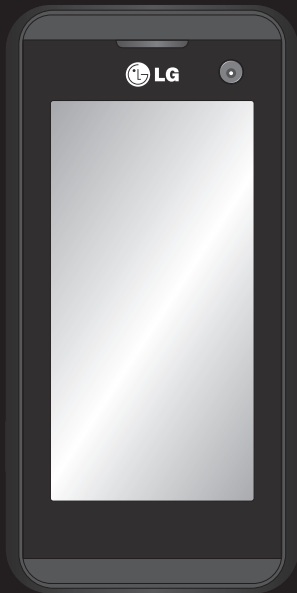

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KF700 User Guide

Congratulations on your purchase of the advanced and compact KF700 phone by LG, designed to operate with the latest digital mobile communication technology.

Set up	01
Your standby screen	02
The basics	03
Get creative	04
The web	05
Get organised	06
Settings	07
Accessories	08

Contents

Set up

Getting to know your phone	8
Open view	9
Installing the USIM and battery.....	10
Memory card	12
Menu map.....	13

Your standby screen

Touchscreen tips.....	14
The quick keys.....	15
The status bar	16

The basics

Calls	18
Making a call or video call	18
Making a call from your contacts	18
Answering and rejecting a call.....	18
In-call options.....	19
Adjusting the call volume	19
Speed dialling.....	20
Viewing your call logs	20
Using call divert.....	20
Using call barring.....	21
Changing the common call settings	21
Changing your video call settings.....	22
Contacts	23
Searching for a contact.....	23
Adding a new contact	23
Contact options	23

Creating a group.....	24
Changing your contact settings.....	24
Viewing information	25
Messaging	26
Sending a message	26
Entering text.....	26
T9 predictive	27
Abc manual.....	27
Setting up your email	27
Retrieving your email	28
Sending an email using your new account.....	28
Changing your email settings	29
Message folders	29
Managing your messages	30
Using templates.....	30
Using emoticons.....	30
Changing your text message settings.....	31
Changing your multimedia message settings.....	31
Changing your other settings.....	32

Get creative

Camera	33
Taking a quick photo.....	33
After you've taken your photo	33
Getting to know the viewfinder.....	34
Using the flash	35

Adjusting the contrast.....	35	Editing your photos.....	46
Using the advanced settings.....	35	Adding text to a photo.....	47
Changing the image size.....	36	Adding an effect to a photo.....	47
Choosing a colour tone.....	37	Adding a colour accent to a photo.....	47
Using the inner camera.....	37	Swapping the colours in a photo.....	48
Viewing your saved photos.....	37	Multimedia	49
Viewing the details of a photo.....	38	My images.....	49
Video camera	39	My images options menu.....	49
Shooting a quick video.....	39	Sending a photo.....	49
After you've shot your video.....	39	Using an image.....	50
Getting to know the viewfinder.....	40	Organising your images.....	50
Adjusting the contrast.....	41	Deleting an image.....	50
Using the advanced settings.....	41	Moving or copying an image.....	50
Changing the video image size.....	42	Marking and unmarking images.....	51
Choosing a colour tone.....	42	Creating a slide show.....	51
Using the inner video camera.....	42	Checking your memory status.....	51
Watching your saved videos.....	43	My sounds.....	52
Your photos and videos	44	Using a sound.....	52
Viewing your photos and videos.....	44	My videos.....	52
Adjusting the volume when viewing a video.....	44	Watching a video.....	52
Capturing an image from a video.....	44	Using options while video is paused.....	52
Viewing the details of a video or photo ..	44	Sending a video clip.....	52
Sending a photo or video from the gallery.....	45	Using a video clip as a ringtone.....	52
Viewing your photos as a slide show.....	45	Using the video options menu.....	53
Setting a photo as wallpaper.....	46	My games and apps.....	53
		Downloading a game.....	53
		Playing a game.....	53

Contents

Using the games options menu.....	53	Get organised	
Flash contents.....	53	Organiser	60
Viewing an SWF file.....	54	Adding an event to your calendar.....	60
Using options viewing the SWF file.....	54	Changing your default calendar view.....	60
Transferring a file to your phone.....	54	Adding an item to your to do list.....	60
Viewing a file.....	54	Sharing a to do item.....	60
Playing a song.....	54	Using date finder.....	61
Creating a playlist.....	55	Setting your alarm.....	61
Editing a playlist.....	55	Adding a memo.....	61
Deleting a playlist.....	56	Voice recorder.....	62
Searching for stations.....	56	Recording a sound or voice.....	62
Resetting channels.....	56	Sending the voice recording.....	62
Listening to the radio.....	56	Using your calculator.....	63
		Adding a city to your world clock.....	63
The web		Converting a unit.....	63
Accessing the web.....	57	Using the stopwatch.....	63
Adding and accessing your bookmarks.....	57	PC Sync	64
Saving a page.....	57	Installing LG PC Suite on your computer ...	64
Accessing a saved page.....	57	Connecting your phone and PC.....	64
Viewing your browser history.....	58	Backing up and restoring your phone's	
Changing the web browser settings.....	58	information.....	64
Using your phone as a modem.....	58	Viewing your phone files on your PC.....	64
Access to Google Service.....	59	Synchronising your contacts.....	65
		Synchronising your messages.....	65
		Using your phone as a mass storage	
		device.....	65

Settings

Changing your screen settings.....	66
Personalising your profiles.....	66
Changing your phone settings.....	66
Changing your connectivity settings.....	67
Using memory manager	67
Sending and receiving your files using Bluetooth.....	68
Pairing with another Bluetooth device.....	69
Using a Bluetooth headset.....	69

Accessories	70
--------------------------	----

Network service	71
------------------------------	----

Technical data	71
-----------------------------	----

Guidelines

Guidelines for safe and efficient use	74
---	----

Getting to know your phone

Charger, Cable, Handsfree connector

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.

Inner camera lens

End/Power key

Ends or rejects a call.
Turns the phone on/off.
Press once to return to the standby screen.

Clear key



Deletes a character with each press.

Call key

Dials a phone number and answers incoming calls.

OK key

Lock/ Unlock key

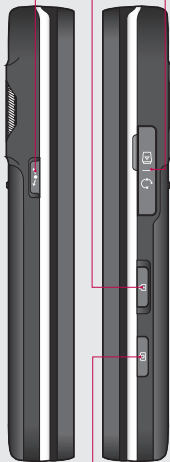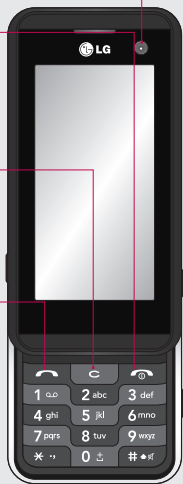

WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Capture button

Open view

Shortcut dial

Zooms in or out when in camera or video mode.
Scrolls through menus.

TIP: You can adjust the volume level when enjoying music, games and during a call.

WARNING: Close contact with a magnetic object may cause a malfunction of the wheel key.

Memory card slot

Battery cover

Battery

Flash

Camera lens

USIM Card Socket

01

02

03

04

05

06

07

08

Installing the USIM and battery




1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.


WARNING: Do not use your fingernail when removing the battery.

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

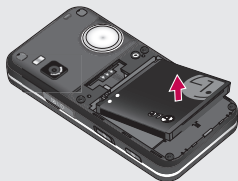

2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

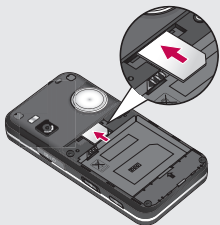


3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards.


To remove the SIM card, pull it gently in the reverse direction.

Installing the USIM and battery

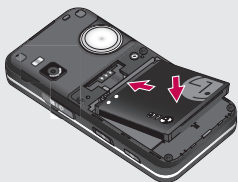

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

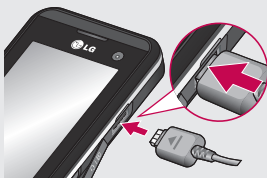

6 Charging your phone

Pull open the cover of the charger socket on the side of your KF700. Insert the charger and plug into a mains electricity socket. Your KF700 will need to be charged until a message reading Fully Charged appears on screen.



5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

01

02

03

04

05

06

07

08

Memory card

Installing a memory card

Expand the memory space available on your phone using a memory card. The KF700 will support up to a 4GB memory card.



- 1 Remove the cover then slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold contact area is facing upwards.



- 2 Replace the battery and cover as before.


Formatting the memory card

If your memory card is already formatted, you can begin using it. If your card isn't formatted you will need to do so.

- 1 From the standby screen touch , and select .
- 2 Choose **Phone settings** and select **Memory manager** and choose **External memory**.



- 3 Touch **Format** and enter the password, which is set to 0000 as the default. Your card will be formatted and ready to use.
- 4 Inside **my stuff** select **my memory card**. You'll see five folders: **My images**, **My sounds**, **My videos**, **My games and apps** and others.

For more details on using a memory card, see page 67.


 **WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Transferring your contacts

To transfer your contacts from your SIM to your phone:

- 1 From the standby screen touch , and choose .
- 2 Select **Contacts** and choose **Settings** and select **Copy** or **Move**.
- 3 Choose **Handset to USIM** then **All together** or **One by one**.
- 4 Touch **OK** to confirm.

Menu map

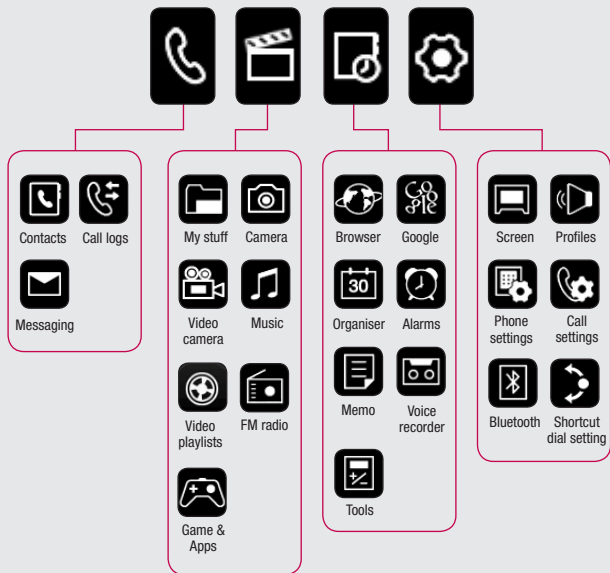

01

02

03

04

05

06

07

08

Your standby screen

Whenever your KF700 isn't in use it'll return to your standby screen. From here you can access menu options, make a quick call and change your profile - as well as many other things.

Touchscreen tips

The standby screen is also a great place to get accustomed to the InteractPad.

To select an item touch the icon on the touchscreen accurately. Your KF700 will vibrate slightly when it recognises you've touched an option.

- There's no need to press too hard, the InteractPad is sensitive enough to pick up on a light yet firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys around it.
- When the screen light is off, press the lock/unlock key on the right hand side of the phone to restore the standby screen.
- Don't cover the phone with a case or cover as the InteractPad will not work with any material covering it.



▲ Touchscreen

The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch to open the call screen. You can call without having to slide the phone open. To initiate a video call, press the **Video call** tab after inputting the number.



Touch to open your address book. Your contacts are displayed as an alphabetical list. You can also create new contacts and edit existing ones. See page 23 for details.



Touch to create and send an SMS message. See page 26 for details.



Touch to open the full menu which is separated into four sub-menus. Touch each sub-menu's vertical tab to view further options.

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as depicted in the figure below.



Please do not cover the antenna area with your hand during a call or whilst using a Bluetooth connection. It may degrade speech quality.

01

02

03

04

05

06

07











08













Your standby screen

The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.



Icon	Description
	Multitasking (In sub-menu)
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	An alarm is set


Icon	Description
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Flight mode is selected
	Bluetooth is active
	HSDPA available
	3G available


Changing your Status from the status bar

Touch the icon that represents your current setting in the status bar and the Status Summary will open. It shows the current Time, Network, Service ID, Battery, Handset memory, External Memory, Profile, MP3, Flight Mode and Bluetooth status. You can set Profile type, play MP3 and activate/deactivate Flight Mode and Bluetooth.

Using the Multitasking function

If you use any function, you can find Multitasking  on the top. Touch  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

From any application, touch  and select Home screen to return to the stand by screen without exiting or exiting all application.

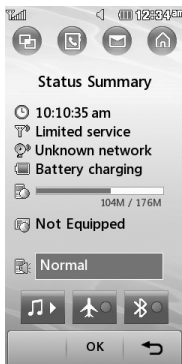

01

02

03

04

05




06


07

08

Calls

Making a call or video call



- 1 Slide open the phone.
- 2 Key in the number using the keypad.
To delete a digit press the C hard key.
- 3 Touch **Call** or press the  hard key to initiate the call. Touch  to make a video call.
- 4 To end the call press the  hard key.


TIP! To call with the slide closed. Touch  to open the touchscreen keypad. Enter the number and press **Call**.

TIP! To enter + for making an international call, press and hold 0.


TIP! Press the lock/unlock button to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the standby screen touch  to open the address book.
- 2 From the list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 3 You can use the keypad to enter the first letter of the contact you want to call.
- 4 Touch **Call** or press the  hard key to initiate the call.

TIP! When the slide is closed, touch  to open your address book. Scroll using the side bar or type the first letter of your contact's name to jump to that section of your contact list.

Answering and rejecting a call

When your phone rings press the  hard key to answer the call.

Press **Unlock** then **Silent** to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

TIP! To answer a call with the slide closed touch **Unlock** and select **Accept**.

TIP! To reject a call with the slide closed touch **Unlock** and select **Silent**, then **Reject**.

In-call options



Mute - Touch to turn off the microphone so the person you are talking to cannot hear you.

Speaker - Touch to turn on the speaker phone.

End - Touch to end the call.

Hold - Touch to put a caller on hold. Touch **Resume** to continue your conversation.

Options - Choose from a list of further in-call options, including **Go to contacts** and **Go to messages** so you can check your messages and add contacts during a call. You can also end the call from here by touching **End call**.

Adjusting the call volume

To adjust the volume during a call turn the jog wheel clockwise to increase it or anti-clockwise to decrease it.

01

02

03

04

05

06



07


08


Calls

Speed dialling

You can assign a frequently-called contact to a speed dial number.


- 1 Touch , select .
- 2 Choose **Contacts** and touch **Speed dials**.
- 3 Your Voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 4 Your address book will open. Select the contact you'd like to assign to that number by touching their phone number once.

To call a speed dial number, slide open the phone and hold the assigned number until the contact appears on screen. The call will initiate automatically, there's no need to press .

TIP! When the slide is closed, touch . Select the contact you'd like to call then touch and hold their number. The call will initiate automatically.

Viewing your call logs

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

If you press  it brings up the calls lists. There are two arrows at the top of the screen which allow you to scroll between:

All calls - View the complete list of all your dialled, received and missed calls.

Dialled calls - View the list of all the numbers you have called.

Received calls - View the list of all the numbers you have received calls from.

Missed calls - View the list of all the calls you have missed.



Call charges - View the charges applied to your dialled numbers (this service is network dependant, some operators are unable to support this) and the call duration of all your calls; received and dialled.

Data volume - View the amount in kilobytes of all your received and sent data.

TIP! From any call log touch  and **Delete all** to delete all the recorded items.

TIP! Touch any single call log entry then **View** to view the date, time and duration of the call.

Using call divert

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Call divert** and choose **Voice calls** or **Video calls Deactivate all**.

- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable then touch **Activate**.
- 4 Input the number you'd like to divert to.
- 5 Touch **Divert** to activate.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.


TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Call barring** and choose **Voice calls** or **Video calls** **Deactivate all**.
- 3 Choose any or all of the five options:
All outgoing
Outgoing international
Outgoing international calls except home country
All incoming
Incoming when abroad
- 4 Enter the call barring password.
Please check with your network operator for this service.

TIP! Select **Fixed dial numbers** from **Call settings** to turn on and compile a list of numbers which be called from your phone. You'll need your PIN2 code from your operator. If you create a fixed dial list, only the numbers in the list can be called from your phone.

Changing the common call settings

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Common setting**. From here you can amend the settings for:
Call reject - Select **On** or **Off** and choose to reject all calls, those from specific groups or contacts, calls from unregistered numbers (those not in your contacts) or callers who don't have caller ID on.
Send my number - Choose whether your number will be displayed when you call someone.
Auto redial - Choose **On** or **Off**.
Answer mode - Choose how to answer the phone: **Press send key**, **Slide up** or **Press any key**.
Minute minder - Select **On** to hear a tone every minute during a call.

01

02

03

04

05

06

07

08

Calls

BT answer mode - Select **Hands-free**



to be able to answer a call using a Bluetooth headset or select **Handset** to press a key on the handset to answer a call when using a Bluetooth headset.

Save new number - Choose **Yes** or **No**.

Slide close settings - choose what happens when you close the slide during a call. Choose from **End call** or **Continue call**.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Changing your video call settings


- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Video call setting**.
- 3 Choose the settings of your video calling. Determine whether to **Use private image** and **Select private image**, and switch on the **Mirror** (so you can see yourself on screen).

Contacts




Searching for a contact

There are two ways to search for a contact:




From the standby screen

From the standby screen touch  to open the address book.

From the main menu

- 1 Touch  and tap  and select **Contacts**. Then touch Search.
- 2 From the list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 3 You can use the keypad to enter the first letter of the contact you want to call to jump to that section.
- 4 Touch **Call** or press the  hard key to initiate the call.



Adding a new contact

- 1 Touch  and tap  and select **Contacts**.
- 2 Touch **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **USIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Input the number and touch  and you can input more numbers.
For example, you can input a different

number for their Mobile, Home, Office, Pager and Fax.


- 6 You can then add up to two email addresses.
- 7 Assign the contact to a group. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also add an Image, Ringtone, Homepage, Home address, Company name, Job title, Company address and a Memo.
- 9 Touch **Save** to save the contact.

TIP! You can create customised groups for your contacts, see **Creating a group** on page 24.

TIP! When the slide is closed, touch  and key in the contact's number. Touch  and choose **Save number** then **New contact**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 23.
- 2 Press  to open the list of options. From here you can:
Edit - Change any of the contact's details.

01

02

03

04

05

06

07

08

Contacts

Send message - Send a message to the contact. If the contact has an email address, select whether you'd like to send an email or SMS/MMS. See page 26 for details on how to send messages.

Send business card - Send the contact's details to another person as a business card. Choose to send it as a **Text message, Multimedia message**, using **Email** or via **Bluetooth**.

Make a video call - Video call the contact.


Save to USIM/Handset - Choose to save the contact to the USIM card or handset.

Delete - Delete the contact. Touch **Yes** if you are sure.

Creating a group

- 1 From the standby screen touch  tap  and select **Contacts**.
- 2 Select **Groups** and touch .
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Save**.



Note: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

TIP! You can edit an existing group by highlighting it and touching . Choose to Add a member to the group from your contacts, assign a group ringtone, rename the group or delete a group.

Changing your contact settings

You can adapt your contact settings so that your address book works in the way you prefer.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 From the standby screen touch  then tap . Select **Contacts** and choose **Settings**.
- 2 From here you can adjust the following settings:
Contact list settings - Choose whether to view contacts saved to both your **Handset & USIM, Handset** only or **USIM** only. You can also select to show the first name or last name of a contact first.

Copy - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

Move - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to, e.g. if you move a contact from your USIM to the handset it will be deleted from the USIM memory.



Send all contacts via Bluetooth - Beam all of your contacts to another device or computer using Bluetooth.

Backup contacts - See **Backing up and restoring your phone's information** on page 64.

Restore contacts - See **Backing up and restoring your phone's information** on page 64.

Clear contacts - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your address book.

Viewing information

- 1 From the standby screen touch  tap  and select **Contacts**.
- 2 Select **Information**.
- 3 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.

TIP! If you've yet to add a business card for yourself, select **Add** and enter all your details as you would for any contact. Touch **Save** to finish.

01

02

03

04

05

06

07




08

Messaging



Messaging


Your KF700 combines SMS, MMS and email into one intuitive and easy to use menu.

There are two ways to enter the messaging centre:

- 1 Touch  from the standby screen.
- 2 Touch  from the standby screen, then tap  and select **Messaging**.

Sending a message

- 1 Touch  then choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS. Or to send an email, choose **Email**. See page 29 for details.
- 3 A new SMS or email will open. Write your message as normal.
- 4 Touch  then **Insert**, to add an image, video, sound or other information, including contact details.
- 5 Touch **Send**. Choose a contact from your list and press **Select** or key in a new number. You can add multiple contacts.


 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering text

There are two ways to enter text: T9 predictive and ABC manual.

To switch between text entry methods touch the corresponding icon at the top of the screen.

 **T9 predictive text, Abc manual** - Touch to turn on T9 predictive text then select T9 abc, T9ABC, 123. Touch again to turn T9 predictive off.

 **Abc manual** - Choose abc, ABC or 123.


To enter a space touch **0**.

To delete a character use the **C** hard key below the screen.

To enter a symbol touch **★** key.

T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'. If there is more than one option for the keys you have pressed, a list will appear on the screen. Select the word you want by touching the screen.

If the word you want doesn't appear, touch  and select **Add to dictionary**. Enter the word using Abc manual mode and your word or name will be added to the dictionary.



Abc manual

In Abc mode you must touch the key repeatedly to choose a letter from the choices available on the key. For example, to write 'hello', touch **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

Setting up your email

You can stay in touch on the move using email on your KF700. It's quick and simple to set up a POP3 or IMAP4 email account.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then select **Settings**.
- 2 Touch **Email** then **Email accounts**.
- 3 Open  and touch **Add new**.
- 4 You then enter an email set up wizard. Follow the instructions and touch Continue to move on. You will need the following details:

Title - Enter a name for this account.

My name - Enter your name.

Username - Enter the account's username.

Password - Enter the account's password.

Email address - Enter the account's email address.

Reply email address - Enter the 'reply to' email address.

01

02

03

04

05

06

07

08

Messaging

Maximum receive size - Choose the size limit of your emails, the maximum is 1MB.

Mailbox type - Enter the mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

Save sent mail into - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

Access point - Choose your Internet access point. Touch access point to use a preset access point .

Auto retrieve - Choose whether to fetch your new emails automatically.

Advanced settings - Choose whether to use the advanced settings.

SMTP port number - Normally, this will be 25.

Incoming server port - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

SMTP authentication - Choose the security settings for the outgoing mail server.

SMTP username - Enter the SMTP username.

SMTP password - Enter the SMTP password.


APOP secure login - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.


Retrieving your email

You can automatically or manually check your account for new email. See 'Change your email settings' to check automatically.

To check manually:

- 1 Touch  then **Settings**, followed by **Email**.
- 2 Touch **Retrieve interval** and choose an interval time to switch auto retrieve on.

Sending an email using your new account

- 1 Touch  then chose **Create new**.
- 2 Choose **Email** and a new email will open.
- 3 Enter the recipient's address and write your message. Touch the paperclip symbol to attach images, videos, sounds or other file types.
- 4 Touch **Send** and your email will be sent.

TIP! You can email Word, Excel, PowerPoint and PDF documents to your KF700 so you can review them on the move.

Changing your email settings

You can adapt your email settings so that it works in the way you prefer. You may have already entered some of this information during the set up wizard.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then open **Settings**.
- 2 Touch **Email** then you can adapt the following settings :
 - Allow reply email** - Choose to allow the sending of 'read confirmation' messages.
 - Request reply email** - Choose whether to request 'read confirmation' messages.
 - Retrieve interval** - Choose how often your KF700 checks for new email messages.
 - Include message in Fwd & Reply** - Choose to include the original message or not.
 - Include attachment** - Choose to include the original attachment.
 - Auto Retrieval in Roaming** - Choose to auto retrieve your messages when abroad, or stop auto retrieval.

New Email notification - Choose whether to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Message folders

You'll recognise the folder structure used on your KF700, it's fairly self-explanatory.

Inbox - All the SMS and MMS messages you receive are placed into your inbox. From here you can reply, forward and more, see below for details.

Mailbox - All the email messages you receive are placed in your mailbox. If you have more than one email account set up messages are filed into the correct account.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you send are placed into your Sent items folder.

My folders - Create new, personal folders to manage your messages.

Templates

Emoticons

Settings

Messaging

Managing your messages

You can use your Inbox to manage your messages.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then **Inbox**.
- 2 Touch  and then choose to:
 - Reply** - Send a reply to the selected message.
 - Forward** - Send the selected message on to another person.
 - Call** - Make a Voice or Video call to the person who sent you the message.
 - Delete** - Delete the message.
 - Create new message** - Open a new, blank message or email.
 - Mark/Unmark** - Mark your messages for multiple deletion or to move them into a different folder.
 - Copy & Move** - Choose to make a copy of your message or move it to a different folder.
 - Filter** - View your message by type. This will group SMS separately from MMS.

Message info. - See additional information for the message, for example, the time it was sent.

If you see the message **No space for USIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to Add new, Edit, Delete or Delete all for Text templates, and Add new, Write multimedia message or Edit for Multimedia templates.

Using emoticons


Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Touch  then choose **Emoticons**.
- 2 Touch  to **Add new, Edit, Delete** or **Delete all** emoticons.

Changing your text message settings

Your KF700 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, see below for more information.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Settings** then **Text message**. You can make changes to:

Text message centre - Enter the details for your message centre.

Delivery report - Choose to receive confirmation that your message was delivered.


Validity period - Choose how long your message is stored at the message centre.

Message types - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **Email**.

Character encoding - Choose how your characters are encoded, this impacts the size of your message and therefore data charges.

Send long text as - Choose to send as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch  then choose **Settings** then **Multimedia message**. You can make changes to:

Retrieval mode - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on screen.

Delivery time - Deliver your message at a specific time.

Multi msg. centre - Enter the details for your message centre.

Note: See page 29 for details on how to change your email settings.

Messaging

Changing your other settings

Touch  then choose **Settings** then:

Videomail - If your operator supports this service you can create a new account.


Voicemail - Your voicemail service has already been set up although you can add new voicemail services here.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Info. service - Choose your reception status, language and other settings.


Camera


Taking a quick photo


- 1 Press the  key on the right hand side of the handset.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Slightly press the capture button. The white viewfinder box in the centre of the screen will change to red as the camera attempts to focus.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Press the capture button fully.


After you've taken your photo


Your captured photo will appear on screen. The name of the image runs along the bottom of the screen and five icons will appear.

 Touch to take another photo straightaway. Your current photo will be saved.

 Touch to look at the other photos in your album. Your current photo will be saved. See page 37 for **Viewing your saved photos**.

 Touch to send the photo as an MMS, Email or via Bluetooth. You can also print the photo using Bluetooth. See page 26 for **Sending a message**, page 68 for **Sending and receiving your files using Bluetooth**.

 Touch to set the photo you have just taken as your wallpaper.

 Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.

01

02

03

04

05


06

07

08

Camera


Getting to know the viewfinder

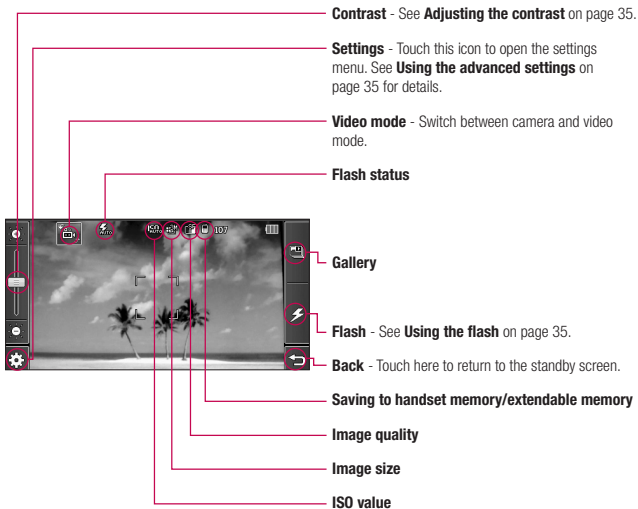



TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

Using the flash


The flash is set to Auto as a default, but there are other options.

- 1 Select  from the middle right of the viewfinder to enter the flash sub-menu.
- 2 There are four flash options:
Auto - Your camera will assess the lighting needed to take a good picture and use the flash as necessary.
When taking a picture - The flash will only come on as you take a photo.
Always on - The flash will always be on when in camera mode.
Always off - The camera will never flash. This is useful if you want to save battery power.
- 3 Touch the flash option you'd like to use.
- 4 When you've made your selection the flash menu will automatically close, ready for you to take your picture.


Adjusting the contrast


Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper. Slide the contrast indicator along the bar, towards  for a lower contrast, hazier image or towards  for a higher contrast, sharper image.


Using the advanced settings

From the viewfinder touch  to open all the advanced settings options.



 **Image size** - Change the size of the photo to save on memory space or take a picture preset to the correct size to attach to a contact. See **Changing the image size** on page 36.

 **Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be but the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

 **White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

01

02

03

04

05


06


07


08


Camera


 **Colour tone** - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour tone** on page 37.


 **Self-timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.


 **Night mode** - Choose between **Off** and **On**. In the night, this mode is useful for taking good photos.


 **Burst shot** - The camera will take a series of shots (three, six or nine), great for recording a fast paced activity.


 **Frame shot** - You can choose to apply a frame to the photo you take.

 **ISO** - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when the flash can't be used. Choose an ISO value from **Auto**, **ISO 100**, **ISO 200**, **ISO 400** or **ISO 800**.

 **Shutter sound** - Select one of the pre-set shutter sounds.

 **Swap cam** - Switch between the LG KF700's **inner camera** and **Outer camera**. See **Using the inner camera** on page 37 for details.

 **Memory in use** - Choose whether to save your photos to the **Handset memory** or to the **External memory**.

 **Wide view** - Choose between **Off** and **On**.



 **Reset settings** - Choose **Yes** to reset your phone to its original camera settings.

Note: Always touch **Close** after selecting a new setting to implement the changes you've made.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu. Remember to touch **Close** before exiting to apply any changes.


Changing the image size

The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.

- 3 Select a pixel value from the five numerical options (**3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) or choose the preset: **Contacts** - This sets up the camera to take a photo the perfect size to be added to a phone contact.



Choosing a colour tone

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 There are seven colour tone options, **Normal(colour), Black & White, Negative, Sepia, Sketch, Solarize, Emboss.**
- 4 Touch the colour tone you'd like to use and select **Close**.


TIP! You can change a photo taken in colour to black and white or sepia after it's taken but you cannot change a picture taken in black and white or sepia back to colour.



Using the inner camera

Your LG KF700 has a 640x480 inner camera, not just for video calling but for taking pictures too.




- 1 To switch to the inner camera touch  then select . Then choose **Inner camera**.

- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image press the capture button as normal.

TIP! The inner camera has fewer settings as it has no flash or ISO. You can still alter the image size, image quality, white balance and more by touching  in the same way as when using the main camera.

- 3 After you've taken the photo you'll be offered all the same options as are available for an image taken with the main camera.
- 4 To return to the main camera touch  and then .

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply touch . From the standby screen you should touch , then select . Choose **My stuff** followed by **My Images**.
- 2 Your gallery will appear on screen.

Camera






Viewing the details of a photo

- 1 Touch the photo once then touch the **i** that appears.
- 2 The photo will reveal the name, the date it was taken, the size (in kilobytes and pixels) and the image type (e.g. jpeg) on the top.
- 3 Touch **x** to close the details and view the photo.


Video camera


Shooting a quick video


- 1 Press the camera key on the right side of the phone.
- 2 Touch the video camera icon in the viewfinder to switch to video mode. The video camera's viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Press the capture button once to start recording.
- 5 **REC** and a timer will appear at the bottom of the viewfinder.
- 6 To pause the video touch  and resume by selecting .
- 7 Touch  on screen or press the capture button a second time to stop recording.


After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom of the screen together with three icons down the right side.

 Touch to shoot another video straight away. Your current video will be saved.

 Touch to look at the other video clips in your album. Your current video clip will be saved. See page 43 for **Watching your saved videos**.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to send the video as an MMS, Email or via Bluetooth. See page 26 for **Sending messages**, or page 68 for **Sending and receiving your files using Bluetooth**.

01

02

03

04

05


06

07

08

Video camera

Getting to know the viewfinder

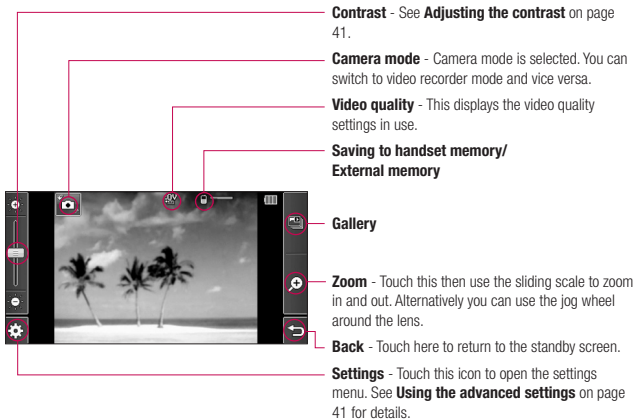

TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

Adjusting the contrast


Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.


Slide the contrast indicator along the bar, towards ☀️ for a lower contrast, hazier image, or towards 🌑 for a higher contrast, sharper image.


Using the advanced settings


From the viewfinder touch ⚙️ to open all the advanced settings options.




 **Image size** - Change the size of the video to save on memory. See **Changing the video image size** on page 42.


 **Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.


 **White balance** - The white balance ensures that any white in your video is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.


 **Colour tone** - Choose a colour tone to apply to the video you're taking. See **Choosing a colour tone** on page 42.

 **Duration** - Choose **Normal** or limit your video to fit in an **MMS**.

 **Night mode** - Choose between Off and On.

 **Voice** - Choose **Mute** to record a video without sound.

 **Swap cam** - Switch to your LG KF700's inner camera to record a video of yourself. See **Using the inner video camera** on page 42 for details.

 **Memory in use** - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

 **Reset settings** - Choose Yes to reset your phone to its original video settings.

01

02

03

04

05

06

07





08

Video camera

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the video colour or quality you'll be able to see the viewfinder change in preview behind the settings menu.

Changing the video image size

The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 Select a pixel value from the 2 options:
 **320x240** - Smaller image size, therefore smaller file size. Great for saving on memory space.
 **176x144** - Smallest image size and therefore smallest file size.

TIP! For video format conversion software, see the CD you received with your KF700.



Choosing a colour tone



- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 There are seven colour tone options, **Normal** (colour), **Black & White**, **Negative**, **Sepia**, **Sketch**, **Solarize** and **Emboss**.
- 4 When you've made your selection touch **Close** and the changes will appear in your viewfinder.


TIP! You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia back to colour.

Using the inner video camera




Your LG KF700 has a 320x240 inner camera, not just for video calling but for recording videos too.

- 1 To switch to the inner camera touch  then select .
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, press it a second time to stop recording.

- 3 After you've shot the video you'll be offered all the same options as are available for a video shot using the main camera.
- 4 To return to the main camera touch  and then .

TIP! You can still alter the video size, video quality, duration, mute, white balance, colour tone and more by touching  in the same way as when using the main camera.

Watching your saved videos

- 1 From the viewfinder, simply touch . From the standby screen you should touch , then select  and select **My stuff** and choose **My Videos**.
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery.
- 4 Touch the video a second time to open it fully.

01

02

03

04

05



06

07

08

Your photos and videos

Viewing your photos and videos

- 1 From the viewfinder, simply touch .
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo you want to view once to bring it to the front of the gallery.
- 4 Touch it a second time to open it fully.
- 5 Videos will begin to play automatically. To pause playback touch the screen to bring up the options and select .




TIP! Change the way your photos and videos are displayed in the gallery by touching **Standard** or **Random** at the bottom of the screen.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, touch the volume bars on the bottom of the screen. Alternatively, use the jog wheel next to the camera lens.



Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image.
- 3 Touch .
- 4 The image will appear on screen, with its assigned image name.
- 5 Select **Save**.
- 6 Touch the image then  to return to the gallery.
- 7 The image will be saved in the My stuff **My images** folder and appear in the gallery. You need to exit gallery and then re-open for this to appear.



WARNING: Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing the details of a video or photo

Videos and photos are grouped together in the gallery. If you have trouble telling which are photos and which are videos, check the details. For example, videos may be AVI or 3GP file types and photos may be JPEG or GIF file types.

- 1 Touch the video still or photo to bring it to the front of the gallery screen. Then touch  to see more information.
- 2 The video still or photo will reveal its name, the date it was taken, its size (in kilobytes and pixels) and whether it's an image or a video (e.g. MP4/3GP or JPEG) on the top.
- 3 Touch  to close the details and view the video still or photo.


Sending a photo or video from the gallery

- 1 Touch a photo or video twice to open it. If you select a video, press  when it starts to play.
- 2 Select  and choose how you would like to send the video or photo: **Message**, **Email**, **Bluetooth**.
- 3 The chosen messaging application will open so you can send the video or photo.


Note: The photo or video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case choose one of the other sending options.


Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slide show. Videos cannot be viewed as a slide show.

- 1 Touch the photo you would like to begin the slide show twice to open it.
- 2 Select  on the left hand side.
- 3 The slide show will begin.


There are five options within slide show:

 Touch to display the photo in full screen mode. The bar on the left hand can increase or decrease the speed of the slide show.

 Touch here to view the photos in a random order (i.e. not the chronological order they appear in your gallery).

 Touch to view fast.

 Touch to view slow.

 Touch to pause the slideshow on a particular photo. Touch again to resume playback.

01

02

03

04

05


06

07

08


Your photos and videos

Setting a photo as wallpaper


- 1 Touch the photo you would like to set as wallpaper twice to open it.
- 2 Touch .
- 3 The screen will switch to portrait mode. Select the portion of the photo you would like to set as wallpaper. This area will appear in actual size on screen.
- 4 When you are happy with the section touch **Set**.

Editing your photos

There are loads of great things you can do to your photos to change them, add to them or liven them up a little.


- 1 Open the photo you'd like to edit and touch  to bring up the options.





- 2 Touch the icons to adapt your photo:
 -  Draw something on your photo freehand. Select the thickness of the line from the four options. To change the colour of the line see


 below (the colour icon will change to the colour you have selected).

 See **Adding text to a photo** on page 47.

 Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be. To change the colour of a stamp see  below.


 Select a rectangular or ellipse area of your photo.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file** enter a file name.

 Change the colour of a stamp, line or some text. You must select the colour before you draw, write or stamp the photo.

 Undo the last edit you made to the photo.

 See **Adding an effect to a photo** on page 47.



 Touch to open further effect options including **Rotate** and **Mirror**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo** on page 48.

 Touch to return to the gallery.

Adding text to a photo

- 1 From the editing screen, touch **T**.
- 2 Input the letter you want.
- 3 Enter your text using the keypad and touch **Done**.
- 4 Move the text by touching it and sliding it to the place you'd like it to be.

Adding an effect to a photo


- 1 From the editing screen, touch .
- 2 Choose to apply any of the six options to the photo:
 - Soften** - Move the marker along the bar to soften the focus of the photo. Select **Done** to save the changes or choose **Cancel**.
 - Sharpen** - Move the marker along the bar to sharpen the focus of the photo. Select **Done** to save the changes or choose **Cancel**.
 - Mosaic blur** - Touch to apply a blurred mosaic effect to the photo. Touch  to return to the normal photo.
 - Colour Effect** - Change the colour of a photo to **Black and white**, **Sepia**, **Colour negative**, **Enhanced RGB** or **Contrast**. If you select **Contrast** move the marker along the bar to increase or decrease the contrast.

Frame - Add a frame to your photo.

You may be prompted to allow the image size to be changed. To see the frame types select **Yes**. The chosen frame will be superimposed over your photo.

Resize - Touch here for size options.

Touch your desired size to change the size of the photo.

- 3 To undo an effect simply touch .

TIP! You can add more than one effect to a photo, except for a colour effect of which you can only select one at a time.

Adding a colour accent to a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour Accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area that is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Touch **Save**.
- 5 All colour will be removed from the photo, apart from the section marked for colour accenting.
- 6 Alter the intensity of the accenting by sliding the marker up or down the intensity bar.

01

02

03

04

05

06


07

08

Your photos and videos

- 7 Select **Save** to save the changes.

Swapping the colours in a photo


- 1 From the editing screen, touch **More**.
- 2 Choose **Colour Swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Touch  and select a colour.
- 5 Press **Swap**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select **Save** to save the changes.

Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then . Touch **My stuff** to open a list of folders storing all of your multimedia files.

My images

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera. Touch  to change the view from thumbnail image to list.

My images options menu

Touch  for options.

The options which are available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **Print via Bluetooth**, **Sort by** and **Memory info**. options are available for default images.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Send - Send the image to a friend.

Use as - Set the image to appear at certain times.

Mark/Unmark - Select multiple files.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the phone memory to a memory card or vice versa.

Delete - Delete an image.

Rename - Rename an image.

Create new folder - Create a new folder within the **My images** folder.


Slide show - Start a slide show.

Print via Bluetooth - Print an image file via Bluetooth®.

Sort by - Sort images into a specific order.

Memory Manager - View the memory status.

Sending a photo

- 1 Touch  then .
- 2 Touch **My stuff** then choose **My images**.
- 3 Select a photo and touch .
- 4 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**.

01

02

03

04

05

06

07

08

Multimedia

- 5 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Using an image

You can choose images to use as wallpapers or even to identify a caller.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:
 - Wallpaper** - Set a wallpaper for the standby screen.
 - Outgoing call** - Set an image to appear during outgoing calls.
 - Start-up** - Set an image to appear when you switch the phone on.
 - Shut down** - Set an image to appear when you switch the phone off.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

Organising your images

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then Sort by.
- 4 Choose from **Date**, **Type** or **Name**.

Note: As well as sorting your images by category, you can also manually sort them.

Deleting an image

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Delete** then **Yes** to confirm.

TIP! To quickly delete any file in **My stuff**, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.





Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Select **Move** or **Copy**.





Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Mark/Unmark**.
- 4 A box will appear to the left of each image. Touch the image twice and a tick will appear in the box marking it.
- 5 To unmark an image, touch the image again so that the tick disappears from the box.
- 6 Once you have marked all of the appropriate boxes, press  and choose one of the options.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Slide show**.
- 4 Use the  and  to skip through the images or touch  to show your images in a random order.



Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Memory Manager**.
- 4 Choose **Handset memory** or **My memory card**.

Note: If you do not have a memory card inserted, you will not be able to select **My memory card**.

Multimedia

My sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**.

From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Touch  then .
- 2 Touch **My stuff** then **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Select a sound and touch **Play** to listen to it.
- 5 Touch  and select **Use as**.
- 6 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up**, **Shut down**.

My videos


The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch  then .
- 2 Touch **My stuff** then **My videos**.
- 3 Select a video and touch **Play**.


TIP! To quickly delete any file in My stuff, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.

Using options while video is paused

Touch  while in pause mode and choose from:

- Capture** - Capture the frozen frame as a picture.
- File info.** - View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.
- Send** - Send the video in a Message, Email, or via Bluetooth.
- Delete** - Delete the video.
- Use as** - Use the video as a ringtone.

Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message**, **Email**, **Bluetooth** or **YouTube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Using a video clip as a ringtone

- 1 Select a video and touch .
- 2 Touch **Use as** and choose from **Voice ringtone** or **Video ringtone**.

Using the video options menu

From the **My videos** folder, you can choose from the following options:

Use as - Set a video as your ringtone.

Send - Send a video to a friend.

Move - Move a video clip from the phone memory to a memory card or vice versa.

Copy - Copy a video clip from the phone memory to a memory card or vice versa.

Delete - Delete a video.

Rename - Rename a video.

Mark/Unmark - Select multiple files.

Create new folder - Create a new folder within the **My videos** folder.

Sort by - Sort videos into a specific order.

Memory manager - View the memory status.

My games and apps

You can download new games and applications to your phone to help keep you amused when you have time to spare.

Downloading a game

- 1 Touch  then .
- 2 Touch **My stuff** then **My games & Apps**.
- 3 Open Games folder, select **Download games** and touch **Connect**.

- 4 You will connect to the web portal from where you can find a game to download.

TIP! To quickly delete any file in My stuff, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.

Playing a game

- 1 Touch  then .
- 2 Touch **My stuff** then **My games & Apps**.
- 3 Select a game and touch **Launch**.

Using the games options menu

From the **My Games & Apps** folder, the following options are available:

Create new folder -  Create a folder within **My Games & Apps**.

Sort by - Sort the games and applications by **Date**, **Size** or **Name**.

Memory manager - View the memory status.

Flash contents


The Flash contents folder contains all of your default and downloaded SWF files.

Multimedia



Viewing an SWF file

- 1 Touch  then .
- 2 Touch **My stuff** then **Flash contents**.
- 3 Select the file and touch **View**.

Using options viewing the SWF file

Full screen view - View your SWF in full screen mode (this only appears if you touch  without pausing).

Mute - Switch the sound off.

 /  - Pause or resume playback.

Use as wallpaper - You can set the wallpaper with Default file.

File info. - View the name, Size, Date, Time, Type and Protection of the file.

Documents

- 1 Touch  then .
- 2 Touch **My stuff** then **Documents**.

From the Documents menu, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files in **My stuff**.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 65 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.



Viewing a file

- 1 Touch  then .
- 2 Touch **My stuff** then **Documents**.
- 3 Select a document and touch **Open**.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appears in the others folder rather than the Documents folder. If this happens you can move them.

To Move a file from Others to Documents :


- 1 Touch  then .
- 2 Touch **My stuff** then **Others**.
- 3 Select a file and touch .

- 4 Touch **Move**, check the destination, then touch **Move** again.

Playing a song

- 1 Touch then .
- 2 Touch **Music**, then **All tracks**.
- 3 Select the song you want to play and touch **Play**.
- 4 Touch to pause the song.
- 5 Touch to skip to the next song.
- 6 Touch to skip to the previous song.
- 7 Touch to return to the **Music** menu.

TIP! To change the volume while listening to music, touch or use the jog dial.

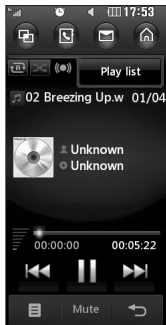

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch then .
- 2 Touch **Music**, then **Playlists**.
- 3 Touch **Add**, enter the playlist name and touch **Save**.
- 4 The All tracks folder will show. Touch all of the songs that you would like to include in your playlist; a tick will show next to their name.
- 5 Touch **Done**.

To play a playlist, select it and touch **Play**.

Note: To add a second playlist, touch then **Add new playlist**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. When you want to do this, you can edit the playlist.

- 1 Touch then .
- 2 Touch **Music**, then **Playlists**.
- 3 Open the playlist.
- 4 Touch and select:

Now playing – Play the playlist.

Add new songs – To add more songs to the playlist. Mark the ones you want and touch **Done**.

Multimedia

Move up/down – Move the song up or down the list to change the playing order.

Send – Send a song as a message or via Bluetooth.

Remove from list – Remove a song from the playlist. Touch **Yes** to confirm.

Mark/Unmark – Select multiple files.

Use as – You can set the song as an effect sound.

Memory info. – View the memory status.

Deleting a playlist

- 1 Touch then .
- 2 Touch **Music**, then **Playlists**.
- 3 Touch then **Delete** or **Delete all** to delete all of the playlists.

Searching for stations

You can tune your phone into radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 24 channels on your phone.

To auto tune:

- 1 Touch then .
- 2 Touch **FM radio** then .

- 3 Touch **Auto scan** then **Yes**. The stations found will automatically be allocated to a channel number in your phone.

To manually tune:

- 1 Touch then .
- 2 Touch **FM radio**.
- 3 Touch the channel number you want to save the station to.
- 4 Use the arrow keys at the top of the screen to find your station.
- 5 Press **Set** to save that station.

Resetting channels

- 1 Touch then .
- 2 Touch **FM radio** then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio



- 1 Touch then .
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

The web

With the browser at your fingertips, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.



Accessing the web

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.


Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.




- 3 To add a new bookmark, select  and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required one and touch **Open**. You will be connected to your bookmark.

Saving a page

- 1 Access your required web page as described above.
- 2 Touch  and select **Saved pages**.
- 3 Enter a name for the web page so you can easily recognise it.
- 4 Touch **Save**.

TIP! This menu will also allow you to edit titles of saved pages, and delete saved pages.

Accessing a saved page

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and touch , followed by **Open**.

01

02

03

04

05



06

07



08

The web

Viewing your browser history

- 1 From the standby screen select , then touch  and choose **Browser**. Select **History**.
- 2 A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select the required page and touch **Connect**.

Changing the web browser settings

- 1 From the standby screen select , then touch  and choose **Browser**. Select **Settings**.
- 2 You can choose to edit **Profiles**, **Character encoding**, **Cache**, **Cookies**, **Java script**, **Security**, or to reset all settings, select **Reset Settings**.
- 3 Once you have changed your settings, select **OK**.

Using your phone as a modem

Your KF700 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KF700 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KF700.

Note: For more information on synchronising using the LG PC Suite see page 65.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KF700.
- 2 Pair your PC and KF700 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.

- 7 Click **Connect** and your PC will connect through your KF700.

Note: For more information on Bluetooth see pages 68-69.

Access to Google Service

You can launch google services in this application. Select to Start the Google Service of selected list item Scroll to the Google Service items list and press OK.

- 1 **Search:** Google Mobile Web Search allows you to search for websites that are specifically designed for mobile phones and devices.
- 2 **Mail:** The Gmail for mobile application is a downloadable Java application, offering the best possible Gmail experience for supported mobile devices. To download, visit <http://gmail.com/app> from your mobile browser.
- 3 **Maps:** You can access maps from your mobile devices.
- 4 **Blogger:** You can manage your account and share your blog. It is available to upload a picture and video.
- 5 **YouTube:** You can watch videos on YouTube Mobile from your mobile device. You may want to contact your carrier for more information about the availability of data streaming on your mobile device.



Organiser

Adding an event to your calendar




- 1 From the standby screen select , then touch  and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Add new event** option to add new event.
- 4 Select whether you would like to add an **Appointment, Anniversary** or **Birthday** and touch **OK**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 7 If you would like to add a subject or a note to your event, touch **Subject** or **Name** and type in your note, followed by **OK**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.


TIP! You can set a holiday period in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holiday.

Changing your default calendar view




- 1 From the standby screen select , then touch  and choose **Organiser**. Select **Settings**.
- 2 Touch **Calendar settings** and choose either **Default view** or **Week starts on**.
- 3 Press **OK** to confirm your choice.

Adding an item to your to do list

- 1 From the standby screen select , then touch  and choose **Organiser**.
- 2 Select **To do** and touch  in the top right hand corner.
- 3 Set the date for the to do item, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your to do list item by selecting **Save**.

TIP! You can edit an item by selecting it, and touching . Now select **Edit**. Confirm your amends by selecting **Save**.



Sharing a to do item

- 1 From the standby screen select , then touch  and choose **Organiser**. Select **To do**.
- 2 Select the to do item you would like to share, then touch .
- 3 Select **Send**. You can choose to share your to do item by **Text message, Multimedia msg., Email** or **Bluetooth**.




TIP! You can back up and synchronise your calendar with your computer. See **PC Sync** on page 64.


Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.2007 will be 09.12.2007. This is great for keeping tabs on deadlines.

- 1 From the standby screen select , then touch  and choose **Organiser**.
- 2 Select **Date finder**.
- 3 In the **From** tab set your required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

Setting your alarm




- 1 From the standby screen select , then touch  and choose **Alarms**.
- 2 Touch  to set your alarm.
- 3 Set the time you would like the alarm to sound and touch **Set**.
- 4 Choose whether you would like your alarm to sound **Not repeated**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun** or **Except holiday**. Press **OK**.

- 5 Select  to select a sound for your alarm. To listen to sounds touch the sound, followed by **Play**. After you have made your selection, touch **Select**.
- 6 Add a memo for the alarm. Touch **OK** when you have finished typing the memo. When the alarm sounds the memo will be displayed.
- 7 Finally you can set the snooze interval at **5, 10, 20, 30** minutes, **1** hour or **off**. Press **OK** to confirm your choice.
- 8 Once you have set your alarm, touch **Save**.

Note: You can set up to 5 alarms.

TIP! Even when your phone is off, the alarm will still sound at the set time. If you touch snooze the alarm will sound again in 5 minutes. If you touch **Stop** the message 'Turn on your phone?' will pop up.

Adding a memo

- 1 From the standby screen select , then touch  and choose **Memo**.
- 2 Touch  to add a new memo.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen the next time you open the **Memo** application.

01

02

03

04

05

06

07

08

Organiser

TIP! You can edit an existing memo. Select the one you want to edit and touch **Edit**.

Voice recorder

Use your **voice recorder** to record voice memos or other sounds.

- 1 Touch  then .
- 2 Touch **Voice recorder** and press  to start recording or press  and choose from:


Duration – Set the recording duration. Choose from **MMS msg. size, 1 min** or **No limit**.

Quality – Select the sound quality. Choose from Super Fine, Fine or Normal.


Go to my sounds – Open the Voice recordings folder in **My sounds**.


Recording a sound or voice

- 1 Touch  then .
- 2 Touch **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

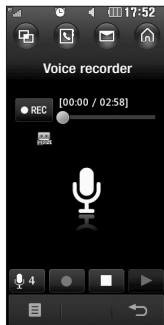




Sending the voice recording




- 1 Once you have finished recording, touch .
- 2 Touch **Send** and choose from **Message, Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

Note: After you have finished recording, touch  and choose **Send, Files(Rename, File info.), Delete, Use as** (to use the recording as your ringtone) or **Go to my sounds**.

Using your calculator



- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Calculator**.
- 3 Use the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ÷, x), followed by =.
- 5 For more complex calculations, touch  and choose from **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad**.

Adding a city to your world clock



- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **World clock**.
- 3 Touch the  icon, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively touch **Map**, and select your chosen city from the map.
- 4 Touch **Select** to confirm your choice.

TIP! If you are abroad you can change your time zone from World Clock by touching , followed by **Set as time zone**.

Converting a unit

- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 You can now select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Using the stopwatch

- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at or touch **Reset** to begin the time again.

01

02

03

04

05

06



07

08

PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match, but also as a backup to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the standby screen select , then touch  and choose **Phone settings**.
- 2 Select **Connectivity**, then **USB connection mode**.
- 3 Select **Data Service** and touch **Select**.
- 4 Insert the supplied CD into your PC. **LG PC Suite Installer** will appear on your screen. Click on **LG PC Suite Installer**.
- 5 Select the language you would like the installer to run in and click **OK**.
- 6 Follow the instructions on screen to complete the **LG PC Suite Installer** wizard.
- 7 Once installation is complete, the LG PC **Suite Icon** will appear on your desktop.

Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite Icon** on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.

- 4 Click on **Next**, then **Next** again, then **Finish**.
Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup or Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, Flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Select **Transfer**, then **Import from mobile handset**. Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.


Note: To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Select **Edit** at the top of the screen, then **Select all**. Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen select **•••**, then touch  and choose **Phone settings**.
- 3 Select **Connectivity**, then **USB connection mode**.
- 4 Select **Mass storage** and touch **select**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.
- 6 All of your phone files will automatically be stored on to your PC hard drive.

Note: Mass Storage backs up content saved on your memory card only, not your handset memory. To transfer the content of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

Settings

Within this folder you can adapt your settings to make your KF700 personal to you.

Note: For information on call settings see page 21.




Changing your screen settings

- 1 Touch  then choose .
- 2 Touch **Screen** and then choose from:
 - Screen theme** - Choose the theme for your Home screen, Outgoing call, Start-up and Shut down.
 - Clock & calendar** - Choose how these are displayed on the screen.
 - Backlight** - Choose how long the backlight and keypad remains on for.
 - Brightness** - Adjust the screen's brightness.
 - Handset theme** - Quickly change the whole look of your screen.
 - Font** - Adjust the font colour.
- 3 Touch **Save** to save your settings.

Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the currently active profile icon at the top of your screen.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then choose .
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 Touch  and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message alerts, Slide tone** settings and more.

Changing your phone settings

Enjoy the freedom of adapting your KF700 so that it works in a way which suits you best.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then choose .
- 2 Touch **Phone settings** then choose from the list below.
 - Date & time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.
 - Power save** - Choose to switch the factory set power saving settings **On** or **Off**.
 - Languages** - Change the language of your KF700's display.
 - Auto key lock** - Choose when and how your keypad is locked.

Security - Adjust your security settings, including PIN codes and handset lock.

Connectivity - See **Changing your connectivity settings** below for more information.

Touchscreen effect - Change the touchscreen settings.

Memory manager - See **Using memory manager** below for more information.

Touchpad calibration - Reset your screen for ease of use.

Reset settings - Reset all the settings to their factory definitions.

Handset information - View the technical information for your KF700.

Access point - Your network operator has already saved this information. You can add new access points using this menu.

USB connection mode - Choose **Data service** and synchronise your KF700 using the LG PC Suite software to copy files from your phone. See page 65 for more information on synchronisation.

Synch service - See page 65 for more information on synchronisation.

Streaming settings - Your network operator has already saved this information. You may edit it if you'd like to make changes.

Using memory manager

Your KF700 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by . Select **Phone settings** then **Memory manager**.

Handset common memory - View the memory available on your KF700 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications, Documents and others.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Touch  then . Touch **Phone settings** and select **Connectivity**.

Network settings - Your KF700 connects automatically to your preferred network.

To change these settings use this menu.

Internet profiles - You can set and view Internet profiles.

Settings

Handset reserved memory - View the memory available on your handset for Text msg on the phone, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

USIM memory - View the memory available on your USIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage settings - Choose the location you prefer items to be saved to.

TIP! See page 12 for information on **inserting a memory card**.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch  and choose **Send**.
Choose **Bluetooth**.
- 3 Touch **Yes** to turn Bluetooth on.



- 4 Your KF700 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and touch **Select**.
- 6 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the relevant folder in My stuff.

Changing your Bluetooth settings:

- 1 Touch  then touch .
- 2 Choose **Bluetooth** then **Settings**.
Make your changes to:
My device visibility - Choose to be **Visible** or **Hidden**.
My device name - Enter a name for your LG KF700.

Supported services - Choose how to use Bluetooth in association with different services. See **Using your phone as a modem** on page 59 or **Using a Bluetooth headset** below.

Remote SIM mode - Choose **On** or **Off**.

My address - Check your Bluetooth address.

Pairing with another Bluetooth device

By pairing your KF700 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Paired Devices** then **New**.
- 3 Your KF700 will search for devices. When the search is completed **Refresh** and **Add** will appear on screen.
- 4 Choose the device you want to pair with, touch **Add** and enter the passcode then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 You passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Yes** to **Connect now**.

TIP! See page 22 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

Accessories

These accessories were supplied with the KF700.

Charger



Data cable and CD

Connect and synchronise your KF700 and PC.



Battery



User Guide

Learn more about your KF700.



Stereo headset



Note

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS 1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

"LG Service Center" by LG Electronics
(Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd., Bookalo,
Thonburi, Bangkok 10600

Working day : Mon-Fri and Sat 2nd, 4th
08:00 - 17:00

Call center : 0-2878-5757

Technical data

General

Product name : KF700

System : GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

Ambient Temperatures

Max : +55°C (discharging), +45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF700

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.6.1, ETSI EN 301 489-07 V1.3.1
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.3.1
ETSI TS 151 010-1 V7.6.0 specified by ETSI EN 301 511 V9.0.2
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-1 V2.2.1 ETSI EN 301 908-2 V2.2.1,
ETSI EN 300 328 V1.6.1

EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji/ Director

Issued Date

22.Feb. 2008

LG Electronics Inc. Amsterdam Office
Veluwezoom15, 1327 AE Almere, The Netherlands
Tel : +31 -36-547 -8940, e-mail : seokim@lge.com


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KF700 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.36 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.18 W/kg averaged over 1g of tissue.

Product care and maintenance



WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and maybe dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



ใบอนุญาตเลขที่ ปน.(ต)/2117 ปณจ.โพธิ์โพรง
ถ้าฝากส่งในประเทศไม่ต้องพนักตราไปรษณียากร



บริษัท แอลจีมีตรอีเลคทรอนิคส์ จำกัด

75 /1-3 อาคารริชมอนด์ สุขุมวิท 26

แขวงคลองตัน เขตคลองเตย

กรุงเทพฯ 10110



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : _____ บัตรรับประกันเลขที่ : _____
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน
นับจากวันที่ซื้อ
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): _____ เลขเครื่อง : _____
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : _____
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : _____
(อังกฤษ) : _____

วัน เดือน ปี เกิด : _____ เพศ : _____
(Date of Birth) (Gender)

ที่อยู่ : _____
(Address)

อาชีพ : _____ โทรศัพท์ : _____ E-mail : _____
(Occupation) (Telephone No.)

ชื่อจากร้าน : _____
(Dealer's Name)

ที่อยู่ร้าน : _____
(Dealer's Address)

ประทับตราร้านค้า



Digital Mobile

สำหรับส่งคืนบริษัท
P/N: MCDF0001117(1.0)

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)



www.lg.co.th

ศูนย์บริการลูกค้า
Customer Information Center: 0-2204-1888 or
1-800-**L G L G L G** ทรูสมาร์ท
5 4 5 4 5 4

บริษัท แอลจีมีโทรอิเล็กทรอนิกส์ จำกัด
75/2 อาคารริชมอนด์ ถ.สุขุมวิท 26 แขวงคลองเตย กรุงเทพฯ 10110
ศูนย์บริการข้อมูล โทร 0-2204-1888 แฟกซ์ 0-2260-8810

LG Mitr Electronics Co.,Ltd.
75/2 Richmond Bldg., Sukumvit 26, Klong-Toey, Bangkok 10110
Customer Information Center Tel. 0-2204-1888 Fax. 0-2260-8810

เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น

(This warranty is valid only in Thailand)

- 1) บัตรรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ หรือมอบบัตรรับประกันที่ใส่ชื่อความสมบูรณ์เท่านั้น
- 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบ หรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่อง ผลิตวิธี บริษัทฯ อินดีชอมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย
- 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.
- 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts.

เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับการแต่งตั้ง
- 2) การใช้ผลิตภัณฑ์ที่ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย
- 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้, พัดน้ำ, ใช้กระแสไฟฟ้าผิดปกติและอุบัติเหตุอื่น ๆ ที่มนุษย์ไม่สามารถควบคุมได้
- 1) If repair are not undertaken by LG Service Center or Authorize Service Center.
- 2) Damage to accessory due to misuse.
- 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control.

ศูนย์บริการสุรนิวท 26 : 75/2 อาคารริชมอนด์ ถ.สุรนิวท 26 แขวงคลองเตย กรุงเทพฯ 10110 โทร. 0-2260-8787 แฟกซ์ 0-2260-8810

ศูนย์บริการอ้อมน้อย : 84 หมู่ 12 อ.เทพารักษ์ ข. 120 อ.กระทุ่มแบน จ.สมุทรสาคร 74130 โทร. 0-2431-0010 แฟกซ์ 0-2810-3378

ศูนย์บริการเชียงใหม่ : 250/5 - 6 อ.เชียงใหม่-ลำปาง ต.ป่าตัน อ.เมือง จ.เชียงใหม่ 50300 โทร. 0-5321-5823 แฟกซ์ 0-5341-2231

ศูนย์บริการพิษณุโลก : 210/9 -10 -11 อ.มิตรภาพ ต.ในเมือง อ.เมือง จ.พิษณุโลก 65000 โทร. 0-5528-0508 แฟกซ์ 0-5528-0509

ศูนย์บริการอุดรธานี : 304 หมู่ 4 อ.เมืองบ้านม่วง ต.หนองขอนกว้าง อ.เมือง จ.อุดรธานี 41000 โทร. 0-4224-9562 แฟกซ์ 0-4220-4757

ศูนย์บริการหาดใหญ่ : ห้อง 4-5 อาคารเพรสซิเด็นท์แมนชั่น 10/1 อ.ประชาธิปไตย อ.หาดใหญ่ จ.สงขลา 90110 โทร.0-7435-2275 แฟกซ์ 0-7422-5476

ศูนย์บริการนครราชสีมา : 1630/1-2 อ.มิตรภาพ ต.ในเมือง อ.เมือง จ.นครราชสีมา 30000 โทร. 0-4424-7304 แฟกซ์ 0-4424-7305

