



繁體中文  
簡體中文  
ENGLISH

**KF310**

KF310 使用手冊

LG ELECTRONICS INC.

MMBB0300314 (1.0)

CE 0168

[www.lgmobile.com](http://www.lgmobile.com)

Bluetooth QD ID B013987

繁體中文

## ■ KF310 ■ 使用手冊

本文件為 LG KF310 3G 視像手機之使用手冊。  
LG Electronics 保留本文件的所有權利。未經 LG  
Electronics 公司同意，嚴禁複製、修改和分發本  
文件。



# 目錄

保護您的安全	6	遊戲及應用程式	26
安全及有效使用的指引	7	我的遊戲及應用程式 設定	
KF310 功能	10	通話	27
手機部份		視像通話撥號	
開始使用	14	通話記錄	
安裝智能咭和電池		所有通話	
電池充電	16	撥出通話	
中斷充電器連接	17	已接來電	
如何使用 microSD 記憶咭		未接來電	
記憶咭格式化	18	通話時間	
開啓/關閉手機		數據用量	
一般功能	20	通話費用	
撥打及接聽電話		來電轉駁	28
接聽電話	21	通話限制	
輸入文字	22	固定撥號號碼	29
功能表功能總覽	24	來電等候	
		通用設定	
		視像通話設定	30

---

**記事簿** 31

日曆

待辦事項

備忘錄

---

**保密備忘錄** 32

日期搜尋器

設定

日曆

透過藍芽傳送所有行程表辦事項

備份日程表與待辦事項

還原日程表與待辦事項

記憶體資訊

清除全部

---

**多媒體** 33

相機

---

**視像攝錄機** 34

---

**音樂** 36

最近播放

全部曲目

演出者

專輯

類型

播放列表

隨機播放曲目

語音備忘錄

---

**訊息** 38

建立新訊息

訊息

---

電子郵件 39

---

收件匣 40

郵箱

---

草稿 41

寄件匣

---

已發送項目 42

我的資料夾

常用範本

文字範本

多媒體範本

情感圖示

---

設定 43

文字訊息

多媒體訊息

---

電子郵件 44

視像留言信箱

留言信箱

---

服務訊息 45

資訊服務

# 目錄

我的檔案	46	透過藍芽傳送所有通訊錄	52
我的圖像		備份通訊錄	
我的聲音	47	還原通訊錄	
我的影片		清除通訊錄資料	
我的遊戲及應用程式	48	記憶體資訊	
其他			
我的記憶咭		工具	53
		快速功能表	
Yahoo	49	鬧鐘	
		計算機	
通訊錄	50	秒錶	54
新增		單位轉換器	
搜尋		世界時間	
快速撥號		智能咭服務(視乎不同網絡商)	
群組			
服務撥號號碼	51	瀏覽器	55
本手機號碼		主頁	
我的名片		輸入網址	
設定		書籤	
通訊錄列表設定		RSS 讀取裝置	
同步聯絡人		儲存的網頁	
複製		記錄	
移動		設定	
		網絡設定	
		外觀設定	

---

快取記憶 56

Cookies  
安全  
重設設定

---

**連接** 57

**藍芽**

---

伺服器同步 58

---

USB 連線模式 59

---

**設定** 60

**情景模式**

**手機**

自動按鍵鎖  
語言

省電模式

手機資訊

**屏幕**

屏幕主題

---

功能表風格 61

字體

背光燈

手機主題

問候語訊息

**日期及時間**

---

**網絡** 62

選擇網絡

網絡模式

首選列表

**互聯網設定**

**存取點**

---

分組數據連線

---

**安全** 63

---

**記憶體管理** 64

手機共用記憶體

手機預留記憶體

智能咭記憶體

外置記憶體

---

主要儲存裝置設定 65

**串流播放設定**

**重設設定**

---

**配件** 66

---

**技術資料** 67



# 保護您的安全

請閱讀以下簡易的使用準則。違反這些準則可能會發生危險或觸犯法律。詳情將於本手冊中提供。

## 警告！

- 在飛機上必須始終關閉手機。
- 駕車時請勿手持手機。
- 請勿在加油站、燃料庫、化工廠或爆破工程附近使用您的手機。
- 僅請使用原裝的電池與充電器，以策安全。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

## 注意！

- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。
- 僅請使用原裝配件，以免損壞手機。
- 所有無線電收發器均有可能干擾附近的電子裝置。輕微干擾可影響電視、收音機、個人電腦等。
- 請根據相關法例來處理棄置的電池。
- 請勿拆開手機或電池。

# 安全及有效使用的指引

請閱讀以下簡易的使用準則。違反這些準則可能會發生危險或觸犯法律。詳細資訊刊於本用戶手冊的正文部份。

## 無線電波暴露準則

### 無線電波暴露及比較收率 (SAR) 資訊

本手機型號 KF310 已為遵守無線電波暴露的應用安全要求而設計。此要求根據包括專為確保任何年齡、任何健康狀況的所有人士安全而設的安全極限的科學指引。

- ▶ 無線電波暴露指引的度量單位叫作比較收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- ▶ 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- ▶ 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均十 (10) 克組織 2 W/Kg。
- ▶ 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.562 W/Kg (10g)，攜帶於身上時則為 1.31 W/Kg (10g)。
- ▶ 採用了電氣與電子工程師學會 (IEEE) 建議 SAR 限制 (即平均一 (1) 克組織 1.6 W/Kg) 的國家/地區居民的 SAR 數據資訊 (如美國、加拿大、澳洲及臺灣)。

## 產品護理及維修

### 警告！

僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他種類可能使手機的認可或保養失效，並可能引致危險。

- ▶ 請請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- ▶ 遠離電子裝置，如電視、無線電或個人電腦。
- ▶ 裝置需遠離發熱來源，如散熱器或烹調器具。
- ▶ 切勿將手機放入微波爐中，這會導致電池爆炸。
- ▶ 請勿掉落手機。
- ▶ 請勿讓此裝置遭機械震動或電擊。
- ▶ 如在特別環境的要求下，請關閉手機。如：請勿在未得到批准下在醫療儀器附近使用您的手機。
- ▶ 請勿以潮濕的雙手對充電中的手機進行操作。
- ▶ 這可能會引致觸電或造成手機嚴重損壞。
- ▶ 請勿使用刺激的化學物品 (如酒精、苯、稀釋劑等等) 或清潔劑來清潔手機。這可能有失火的危險。
- ▶ 切勿在柔軟家具上為手機充電。
- ▶ 手機應在通風良好的環境中充電。
- ▶ 請勿讓此裝置接觸過多煙或塵埃。

## 安全及有效使用的指引

- ▶ 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
  - ▶ 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
  - ▶ 請勿將手機暴露於液體或濕氣中。
  - ▶ 小心使用如耳機與聽筒一類的配件。確保纜線安全捲起，如無必要，切勿觸及天線。
  - ▶ 開機前，請拔除數據線。
  - ▶ RF 能量可能影響您的汽車內某些電子系統，如汽車立體音響裝置、安全設備。
  - ▶ 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。有可能因使用不當而造成嚴重損傷。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在過馬路時尤為必要。

### 電子裝置

所有手機都可能因為受到干擾而影響效能。

- ▶ 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上（即您的胸口袋）。
- ▶ 手機可能影響到某些助聽器。
- ▶ 輕微干擾可影響電視、收音機、個人電腦等。

### 馬路安全

檢查您駕駛時地區使用手機的法例及規則。

- ▶ 駕駛時請勿使用手提手機。
- ▶ 請專心一致駕駛。
- ▶ 如有免提聽筒套件，請使用免提聽筒套件。
- ▶ 若有駕駛條例限制，請駛離馬路並停泊好汽車後再撥打或接聽電話。

### 避免損害聽力

如果長時間以較大音量收聽，可能會對聽覺造成損害。因此我們建議您不要在耳邊開啓或關閉手機。我們亦建議將音樂及通話音量設定至合適水平。

### 玻璃零件

您的 KF310 手機有部分零件為玻璃質料。當手機掉落地面或是受到相當程度的撞擊時，玻璃質料的鏡面可能會破裂。千萬不要以手接觸或嘗試移除玻璃碎片，應立即停止使用手機，並盡快到 LG 授權的維修中心更換該破碎的玻璃鏡面。

### 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸氣壓

- ▶ 請勿在燃料補給點使用手機。請勿在燃料或化學物質旁使用。
- ▶ 請勿在車內擺放手機和配件的位置，運送或儲藏易燃氣體、液體或爆炸物。

## 在飛機

無線裝置可引致飛機干擾。

- ▶ 登機前，請先關掉手機。
- ▶ 未經地勤人員批准，請勿在陸上使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽嚥危險。

## 緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

## 電池資料及保護

- ▶ 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- ▶ 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- ▶ 請勿拆解電池組或造成電池組短路。
- ▶ 請保持電池組的金屬接點清潔。
- ▶ 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- ▶ 如果電池很久沒有使用來擴展其用量，需重充電池。
- ▶ 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- ▶ 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- ▶ 若使用類型不當的電池，則有發生爆炸的危險。
- ▶ 請根據製造商的指示來處理廢棄電池。
- ▶ 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- ▶ 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。

# KF310 功能

## 手機部份

### 手機展開





**左軟鍵/右軟鍵**

執行顯示在屏幕底部的功能。

**通話結束鍵**

- ▶ 可結束通話。
- ▶ 啟用功能表時，按此鍵可返回備用模式。

**清除鍵**


可刪除字母。

**發送鍵**


- ▶ 撥打電話號碼及接聽電話。
- ▶ 在備用模式下：顯示已撥電話、已接來電及未接來電的記錄。

## KF310 功能


手機右側

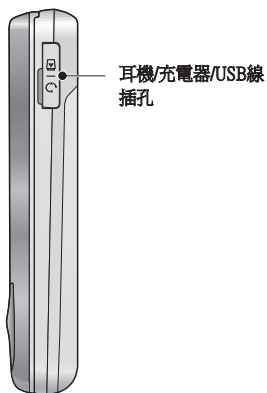

手機左側

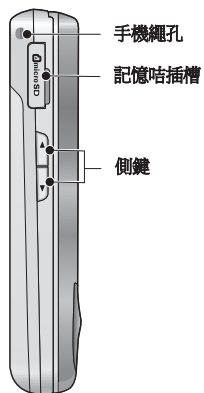

## 手機背面

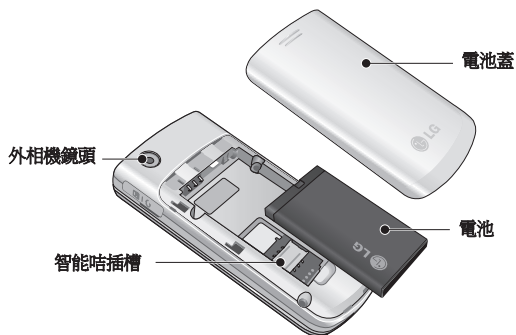


# 開始使用


## 安裝智能咭和電池

### 1. 安裝智能咭。

您的智能咭包含您的電話號碼、服務詳情及通訊錄，必須插入到手機中。如果取出智能咭，您的手機在重新插入一張有效的智能咭之前將無法使用（緊急通話除外）。在插入和取出智能咭之前，請確保先中斷手機與充電器和其他配件的連接。將智能咭滑入智能咭插槽。確保智能咭正確插入，且金屬接觸區面向下方。要取出智能咭，請輕輕壓下並向反方向抽出。

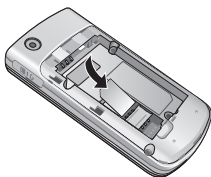

插入智能咭

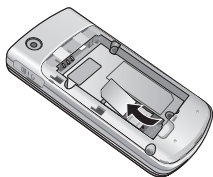


取出智能咭

### 注意事項

- ▶ 智能咭的金屬接點很容易刮損。處理智能咭時要加倍小心。請遵循隨智能咭提供的說明進行操作。
- ▶ 請在取出電池後插入智能咭。

## 2. 安裝電池。


向上滑入電池蓋，直至聽到「啪」的一聲，表示已固定。

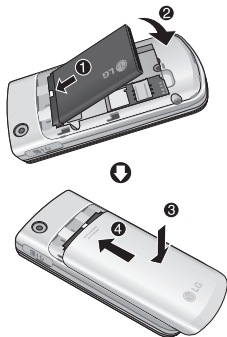

## 3. 取出電池。

關閉手機電源。（若仍處於開機狀態，您儲存的電話號碼和訊息可能會遺失。）

向下推動電池蓋。

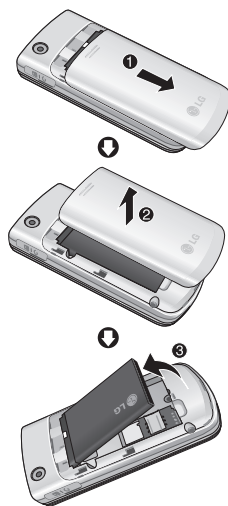

## 開始使用

### 電池充電

將旅行充電器連接到手機之前，您必須先裝入電池。



1. 如圖所示，以您面向的箭頭方向將電池充電器的插頭插入到手機右側的插孔，直至其固定。
2. 將旅行充電器的另一端連接到電源插座。



### 注意事項

- ▶ 請僅使用隨包裝盒提供的充電器。

3. 充電完成時，電池圖示上的電量顯示列會停止。
4. 首次使用手機前，請確保電池電量已經充滿。

### 注意！


- 不要強行拉扯連接頭，因為這樣會損壞手機和/或旅行充電器。
- 若您是在其他國家/地區使用電池組充電器，請使用符合當地規格的轉接頭配件。
- 充電時，不要取出電池或智能喏。

### 警告！

- 如遇上雷暴，請拔下電線和充電器，以防觸電或失火。
- 請勿讓動物牙齒、指甲等尖銳物與電池發生接觸。這可能有失火的危險。

## 中斷充電器連接

如下圖所示，中斷旅行充電器與手機的連接。

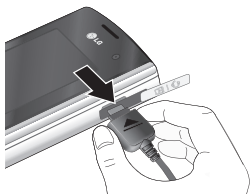

## 〈如何插入 microSD 記憶咭〉

1. 關閉手機電源。在開機時插入或取出 microSD 可能會損壞儲存在記憶咭中的檔案。
2. 打開保護 microSD 插槽的保護蓋。




## 如何使用 microSD 記憶咭



〈MicroSD 記憶咭〉

3. 將記憶咭插入到插槽中。金屬接觸區必須向上。切勿用力推入 microSD。若無法順利將其插入，則表示您可能插錯方向或是插槽中存在異物。
4. 插入後，推動記憶咭直至聽到卡嗒聲，表示 microSD 已正確就位。

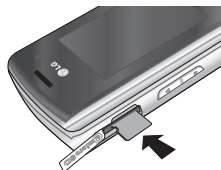

開始使用

## 開始使用


5. 蓋上插槽保護蓋。
6. 要取出記憶咭，請先關機，然後打開保護蓋，推動 microSD 以將其彈出。此時，小心地抽出記憶咭。

### 注意：

- ▶ 請避免在電量較低時使用記憶咭。
- ▶ 在記憶咭寫入資料時，請等到操作完成後再取出記憶咭。
- ▶ 記憶咭的設計僅能以一個方向插入到手機中。
- ▶ 請勿折彎記憶咭或將其強行插入到插槽中。
- ▶ 請勿插入 microSD 格式以外的其他記憶咭。
- ▶ 若 microSD 曾以 FAT32 格式化，請使用 FAT16 再次格式化 microSD。

有關 microSD 的更多資訊，請參閱記憶咭的使用手冊。


## 記憶咭格式化

開始使用記憶咭前，需要對其格式化。插入記憶咭後，請選擇功能表 → 設定 → 記憶體管理 → 外置記憶體，然後按左軟鍵 。


此操作僅應在首次插入記憶咭時進行。格式化期間，手機會為不同的資料類型建立不同的資料夾。

## 開啓/關閉手機


### 開機

確保您的智能咭已插入到手機中，且電池已充電。按住  直至打開手機電源。若將 PIN 碼要求設為開啓，請輸入隨智能咭提供的智能咭 PIN 碼。

## 關機

按住  直至關閉手機電源。關機時可能會出現幾秒鐘的延遲。請勿在此期間再次開機。





## 緊急通話功能

右軟鍵是由屏幕上的「非活動緊急通話」表示。您可按右軟鍵或使用數字鍵撥打緊急電話號碼，然後按  來撥打緊急通話。





## 一般功能

### 撥打及接聽電話

#### 撥打語音通話



1. 輸入包括完整區域代碼的號碼。
  - ▶ 要刪除數字，請按  鍵。
  - 使用通訊錄的功能  鍵。
2. 按  可撥打電話。
3. 按  或合上手機可結束通話。

#### 透過通話記錄撥打電話

1. 在備用模式下，按  可顯示最近的所有通話。
2. 透過  /  可選擇所需號碼。
3. 按  可撥打該號碼。


### 撥打視像通話

如果您和另一方均處於 3G 覆蓋範圍中，您便可撥打或接聽視像通話。要撥打/接聽視像通話，請執行如下操作。

1. 使用按鍵輸入手機號碼或從撥出通話或已接來電列表中選擇號碼。
  - ▶ 要更正錯誤，短按  可刪除上一個數字，或按住  則刪除所有數字。
2. 如果您想使用免提耳機，請確保已插入耳機。
3. 要啟用視像功能，請按左軟鍵 [選項] 並選擇 **視像通話撥號**。
  - ▶ 系統會通知您：在撥打視像通話前，您需要關閉其他應用程式。




#### 注意事項

- ▶ 接通視像通話可能需要一些時間。請耐心等待。連線時間也取決於對方接聽電話的速度。連線視像通話時，您將看到自己的圖像；對方接聽電話後，他們的圖像便會顯示在屏幕上。



4. 根據需要調校相機位置。
5. 按  或合上手機可結束通話。

## 透過「通訊錄」撥打語音/視像通話

撥打「通訊錄」中儲存的號碼十分方便。

1. 按  可存取通訊錄列表。
2. 選擇要致電的聯絡人。
3. 按  可撥打語音通話。按左軟鍵並選擇 **視像通話撥號** 以撥打視像通話。
4. 按  可結束通話。

## 撥打國際電話




1. 按住  可代替國際地區號碼。「+」字元加在國際地區號碼的前頭。
2. 輸入國家代碼、區域代碼和電話號碼。
3. 按  。

## 接聽電話

接到來電時，手機會響起鈴聲並在屏幕上顯示閃動的手機圖示。若手機可識別出來電者，則會顯示來電者的電話號碼（或儲存在「通訊錄」中的姓名）。

1. 打開滑蓋可接聽來電。（視乎不同接聽模式）

### 注意事項

- ▶ 要拒接來電，請按  或連按兩下右軟鍵。
- ▶ 若將 **接聽模式** 設為 **按發送鍵**（功能表 2.0.4），您便可在滑開滑蓋後按  來接聽來電。
- ▶ 若將接聽模式設為按任何鍵，則按  或右軟鍵以外的任何鍵都可接聽來電。

## 一般功能

2. 合上手機或按  則可結束通話。

### 注意事項

- ▶ 您可於接聽來電同時使用通訊錄的功能。
- ▶ 來電時，您可透過按右軟鍵來使鈴聲靜音。

### 啓用靜音模式的捷徑

開機後，您可透過長按#啓動「靜音」模式。


### 訊號強度

您可透過手機屏幕上的訊號指示符查看訊號強度。訊號強度可能會隨時變化，尤其是在建築物中時。靠近窗口時可能會提升接收效果。

## 輸入文字

您可使用鍵盤輸入英數字元。例如，儲存通訊錄名稱、編寫訊息、建立個人問候訊息或在日曆中建立事項，都需要輸入文字。

### 變更文字輸入模式

1. 遇到可輸入字元的字段時，屏幕的右上角會出現一個文字輸入模式指示符。
2. 若開啓了英文字典模式(T9模式)，您便可透過  在 T9Abc、T9ABC、123 或 T9abc 等模式之間切換。若選擇Abc模式，可切換的模式則變爲 Abc、ABC、123 及 abc。

### 使用英文字典模式(T9模式)

使用英文字典模式(T9模式)，您可以最少的按鍵次數輕鬆輸入字詞。每次按鍵，手機都會根據其內置字典預測您會輸入的字詞。而顯示的字詞亦會隨著新增的字母不斷變化，從字典中找出最貼近的候選字詞。

## 使用 ABC 模式

使用 **[2-9]** 至 **[9-]** 可輸入您的文字。

1. 按下印有所需字母的按鍵：
  - ▶ 按一下選擇第一個字母。
  - ▶ 按兩下選擇第二個字母。
  - ▶ 如此類推。
2. 要插入空格，請按一下 **[0-]**。要刪除文字，請按 **[\*]**。

## 使用 123 (數字) 模式

使用 123 模式，您便可在訊息中輸入數字（如電話號碼）。按下所需數字對應的按鍵，然後再手動切換回相應的文字輸入模式。

## 使用符號模式

使用符號模式，您便可輸入各種不同的符號或特殊字元。要輸入符合，請選擇 **選項** → **附加** → **符號**。使用導覽鍵和數字鍵來選擇所需符號，然後按 **[OK]**。

# 功能表功能總覽

您可以在備用屏幕中按 **OK** 來啓動功能表。移至所需項目並按 **OK** 即可進入子功能表。

在主功能表中，您還可以透過按相應的數字鍵（如下所示）直接進入某個子功能表。主功能表由以下上級功能表及子功能表構成：

<b>1. 遊戲及應用程式</b>	<b>3. 記事簿</b>	<b>5. 訊息</b>
1.1 我的遊戲及應用程式	3.1 日曆	5.1 建立新訊息
1.2 設定	3.2 待辦事項	5.2 收件匣
<b>2. 通話</b>	3.3 備忘錄	5.3 郵箱
2.1 視像通話撥號	3.4 保密備忘錄	5.4 草稿
2.2 通話記錄	3.5 日期搜尋器	5.5 寄件匣
2.3 通話時間	3.6 設定	5.6 已發送項目
2.4 數據用量	<b>4. 多媒體</b>	5.7 我的資料夾
2.5 通話費用	4.1 相機	5.8 常用範本
2.6 來電轉駁	4.2 視像攝錄機	5.9 情感圖示
2.7 通話限制	4.3 音樂	5.0 設定
2.8 固定撥號號碼	4.4 語音備忘錄	
2.9 來電等候		
2.0 通用設定		
2.* 視像通話設定		

<b>6. 我的檔案</b>
6.1 我的圖像
6.2 我的聲音
6.3 我的影片
6.4 我的遊戲及應用程式
6.5 其他
6.6 我的記憶咭
<b>7. Yahoo</b>
7.1 Yahoo!Go
<b>8. 通訊錄</b>
8.1 新增
8.2 搜尋
8.3 快速撥號
8.4 群組
8.5 服務撥號號碼
8.6 本手機號碼
8.7 我的名片
8.8 設定

<b>9. 工具</b>
9.1 快速功能表
9.2 鬧鐘
9.3 計算機
9.4 秒錶
9.5 單位轉換器
9.6 世界時間
9.7 智能咭服務(視乎不同網絡商)
<b>*. 瀏覽器</b>
*.1 主頁
*.2 輸入網址
*.3 書籤
*.4 RSS 讀取裝置
*.5 儲存的網頁
*.6 記錄
*.7 設定

<b>0. 連接</b>
0.1 藍芽
0.2 伺服器同步
0.3 USB 連線模式
<b>#. 設定</b>
#.1 情景模式
#.2 手機
#.3. 屏幕
#.4 日期及時間
#.5 網絡
#.6 互聯網設定
#.7 存取點
#.8 分組數據連線
#.9 安全
#.0 記憶體管理
#* 串流播放設定
#.# 重設設定

# 遊戲及應用程式 [功能表 1]

## 我的遊戲及應用程式

### 功能表 1.1

您可以在此功能表中輕鬆使用遊戲及應用程式。預設的資料夾取決於網絡商或所在的國家或地區。請注意，使用網上服務可能需要另行收費。

## 設定

### 功能表 1.2

- **網絡設定**：可查看網絡設定和新增設定。
- **憑證列表**：可查看使用 Java 應用程式的憑證列表。

## 通話 [功能表 2]

### 視像通話撥號

功能表 2.1

您可在此功能表中撥打視像通話。詳情請參閱第 20 頁。

### 通話記錄

功能表 2.2

#### 所有通話 (功能表 2.2.1)

可檢視撥出、已接和未接電話的記錄。對於從記錄中選取的號碼，您可撥打電話或發送訊息。亦可將號碼儲存到「通訊錄」中。

#### 撥出通話 (功能表 2.2.2)

可檢視已撥電話記錄、撥打電話、發送訊息，以及將號碼保存到通訊錄中。

#### 已接來電 (功能表 2.2.3)

可檢視已接電話記錄、撥打電話、發送訊息，以及將號碼保存到通訊錄中。

#### 未接來電 (功能表 2.2.4)

可檢視未接電話記錄、撥打電話、發送訊息，以及將號碼保存到通訊錄中。

### 通話時間

功能表 2.3

您可以按類型檢視通話時間。按左軟鍵 [選項] 可選擇清除或清除全部。清除需要您提供安全密碼。

### 數據用量

功能表 2.4

可檢查已接收、已傳送及所有數據用量。按左軟鍵可選擇清除全部，或選定數據用量類型的清除。清除操作需要您提供安全密碼。

### 通話費用

功能表 2.5

1. 此功能可顯示最後通話及所有通話的通話費用。
2. 要進行編輯，請按OK鍵 [編輯] 並輸入 PIN2 碼。
3. 您可以在「設定通話費用」中選擇單位取決於您的設定、智能咭及網絡商，通話時會顯示通話費用。
4. 在「設定」上限設定中，選擇「開啓」可設定費用上限。設定費用限制後，若通話費用達到上限，將無法撥出電話。

## 通話

### 來電轉駁

功能表 2.6

提供語音和視像通話的來電轉駁功能表。

#### 1. 啓動來電轉駁時

您可以直接輸入要轉駁來電的號碼，或從電話簿中搜尋。若按 [確定]，手機將會在您輸入號碼後發送請求到您的服務供應商。等候網絡的結果時，屏幕上會出現要求訊息。

#### 2. 已設定來電轉駁時

檢視已設定的來電轉駁列表。等候網絡的結果時，屏幕上會出現要求訊息。

#### 3. 選項功能表

啓動「全部語音通話」功能表後，選擇功能表底部的選項功能表可顯示「停用全部」功能表。

若選擇了「停用」功能表，已在網絡上註冊的來電轉駁號碼便會在使用者確認後刪除。

### 通話限制

功能表 2.7

提供語音和視像通話的通話限制功能表。

該功能表包括「語音通話」、「視像通話」和「停用全部」。語音和視像通話包括以下子功能表。

「通話限制」功能表由所有撥出通話、國際通話撥號、本地以外的國際撥號、所有來電以及國際漫遊時來電子功能表組成。

通話限制功能表可限制指定撥號或拒接。

### 語音和視像通話

1. 若要啓用限制服務，請按「啓動」並輸入限制密碼。手機將請求網絡啓用限制服務並接收操作結果。從網絡上接收結果後，該結果將會顯示。

2. 選擇「選項」功能表後，它即可啓用「停用」、「停用全部」、「檢視狀態」及「更改密碼」功能表即會出現。「停用」功能表可在輸入使用者的限制密碼後停用限制服務。「停用全部」功能表則可在輸入使用者的限制密碼後，停用在網絡上設定的全部限制服務。

「檢視狀態」功能表可讓使用者檢視目前的網絡設定。選擇「檢視狀態」功能表可顯示請求訊息，並在得到網絡回應時顯示操作結果。「更改密碼」功能表可讓使用者變更目前的限制密碼。

#### 停用全部

輸入限制密碼後可停用。

## 固定撥號號碼

功能表 2.8

#### ▶ 開啓/關閉

- **開啓**：選擇是否啓用固定撥號號碼。該設定需要進行 PIN2 核証。
- **關閉**：選擇是否關閉固定撥號號碼。

## 來電等候

功能表 2.9

啓用等候服務。選擇此項會顯示要求訊息。在網絡作出回應時，操作結果會顯示於手機上。

## 通用設定

功能表 2.0

### 來電拒接

您可以設定是否拒接來電。

### 發送我的號碼

- ▶ **按網絡設定**：以服務供應商指定的預設設定進行設定。
- ▶ **開啓**：設為在撥出通話時發送本機號碼。
- ▶ **關閉**：設為在撥出通話時不發送本機號碼。

### 自動重撥

可設定通話嘗試失敗時的自動重撥功能。

### 接聽模式


可設定接聽模式。您可以在**按發送鍵**、**開啓滑蓋**及**按任何鍵**之間進行選擇。

### 分鐘提示

決定是否在通話時每過一分鐘就響一次分鐘提示音。

## 通話

### 藍芽接聽模式

- ▶ **免提：**可在啓用藍芽時使用藍芽耳機來接聽電話。
- ▶ **手機：**如果按下手機上的  來接聽電話，則可用手機接聽電話。

### 儲存新號碼

如果某電話號碼尚未儲存於電話簿中，您便可在結束通話時使用此功能表儲存該號碼。

### 滑蓋關閉設定

您可以設定是否要在滑蓋合上時結束通話。

### 選擇線路（取決於智能咭）

取決於智能咭是否支援雙線路服務，您可以選擇所需線路。

### 視像通話設定

功能表 2\*

您可以設定進行視像通話時的屏幕顯示。

- ▶ **使用私人圖像：**決定是否顯示私人圖像。
- ▶ **選擇私人圖像：**選擇要顯示的私人圖像。
- ▶ **鏡像：**選擇是否啓動鏡像效果。
  - **開啓：**顯示方向對調的圖像。
  - **關閉：**顯示原來的圖像。

## 記事簿 [功能表 3]












### 日曆

#### 功能表 3.1

#### 事項的查詢和搜尋

##### 1. 按月參考

您可以按月份查看自己的事項。選擇此功能表時，游標會位於目前的日期上。

游標所處日期儲存的事項會以藍色方塊表示。按捷徑鍵  可移至上一年，按  可移至下一年，按  則可移至今日。按  或  可移至上個月，按  或  可移至下個月。您可以使用  /  /  /  移至所需日期。

##### 2. 詳細參考

您可以參考詳細日程表，當中包括由使用者設定的日程表之全部內容。

#### 新增事項

您可以新增事項。您可以設定開始日期、結束日期、開始時間、結束時間、標題、位置、鬧鐘、重複。

#### 刪除所有日程表

您可以使用此功能刪除已儲存的所有日程表內容。

#### 設定和清除假期

您可以設定或清除使用者的假期。按下左軟鍵 [選項] 並選擇「設定假期」。選定日期將變為紅色。

要清除假期，請按左軟鍵 [選項] 並選擇「清除假期」。

#### 事項通知

如果使用者設定了鬧鐘設定，指定的鬧鐘將會響起。如果通知時間早於事項開始時間，您可以再次設定鬧鐘。

#### 待辦事項

#### 功能表 3.2

您可以檢視、編輯和新增要做的工作。這些工作會按時間順序顯示。工作是否完成會以不同的方式顯示。

#### 備忘錄

#### 功能表 3.3

使用備忘錄管理功能，您可以檢視和管理已儲存的備忘錄內容及新增備忘錄。

## 記事簿

### 保密備忘錄

功能表 3.4

您可以編寫保密備忘錄以保護個人私隱。使用此功能表需要輸入安全密碼。

### 日期搜尋器

功能表 3.5

您可以查看離某事件發生還有多少日或某事件已經過去多少日。

### 設定

功能表 3.6

#### 日曆 (功能表 3.6.1)

您可以設定檢視日曆的設定。

- ▶ **預設檢視：**您可以設定檢視日曆的預設值：每月檢視或每星期檢視
- ▶ **每星期開始時間：**1AM、2AM、3AM、4AM、5AM、6AM、7AM、8AM、9AM、10AM、11AM、12PM
- ▶ **每星期開始於：**您可以設定一週開始於哪一日：星期日、星期一

#### 透過藍芽傳送所有行程表辦事項 (功能表 3.6.2)

您可以使用藍芽功能，將手機中的所有日曆及/或待辦事項資料發送給其他手機。

### 備份日程表與待辦事項

(功能表 3.6.3)

您可以在插入外置記憶體時，為儲存在手機中的日曆或待辦事項建立備份檔案。

### 還原日程表與待辦事項

(功能表 3.6.4)

您可以在插入外置記憶體時，重新設定日曆或工作的備份檔案。

### 記憶體資訊 (功能表 3.6.5)

您可以檢視與日曆、工作、備忘錄及保密備忘錄相關的可用記憶體資訊。

### 清除全部 (功能表 3.6.6)

您可以刪除與日曆、待辦事項、備忘錄及保密備忘錄相關的所有資料。

## 多媒體 [功能表 4]

### 相機


功能表 4.1

使用此應用程式，您便可拍攝靜態圖片。您可以按所需大小拍攝照片，然後將其用於通訊錄照片、牆紙及更多其他普通用途。拍攝後，您便可透過訊息、電子郵件或藍芽發送該照片。


1. 按左軟鍵存取**選項**，並按以下方式設定所需模式。


▶ 使用  /  在選項功能表之間移動。


▶ 使用  /  選擇所需值並透過  確認選擇。

功能表	說明
轉至	開啓「我的圖像」資料夾並以縮圖顯示現有圖片。 您可以使用  來檢視圖片。您也可以透過訊息、電子郵件或藍芽將選定圖片發送到其他手機。
大小	1600x1200、1280x960、640x480、320x240、牆紙、176x144、通訊錄
質素	特細緻、細緻、標準
連環拍攝	1張、3張、6張、9張（注意：可連拍的張數取決於照片大小。）
亮度	從 -2.0 到 2.0，以 0.5 為間隔。 級別越高，屏幕越亮。
白平衡	您可以根據天氣調節照片背景的色彩。自動、日光、陰天、照明燈、室內
夜間模式	選擇「開啓」可得到更好的夜間拍攝效果。

## 多媒體

功能表	說明
畫框拍攝	拍照時，您可套用 10 種畫框效果中的一種。（僅可以牆紙大小提供）
計時器	您可以延遲相繼的快門時間。 無、3 秒、5 秒、10 秒。  會在啟用了計時器時出現。
效果	無、黑白、負片、復古
聲音	選擇所需快門聲音。
記憶體	選擇要使用的記憶體，手機或外置。
鏡像	選擇「開啓」可啓用鏡像效果。
轉換鏡頭	透過切換鏡頭，您可以啓用內部或外部相機。
預覽屏幕	選擇所需預覽方式，完整圖像或全屏幕。

2. 完成所有設定後，按右軟鍵 [關閉]。
3. 將鏡頭對準要拍攝的對象，然後按 。

4. 按  以儲存照片。這樣，照片便會儲存在「我的檔案」的「我的圖像」資料夾中。






### 注意事項

- ▶ 按右軟鍵 [返回] 可返回預覽模式。

## 視像攝錄機

### 功能表 4.2

使用此應用程式，您便可錄製錄像片段。您可以在此功能表中播放和觀賞已儲存的影片檔案。錄製後，您便可透過訊息、電子郵件或藍芽發送該錄像片段。

1. 按左軟鍵存取選項，並按以下方式設定所需模式。
  - ▶ 使用  /  在選項功能表之間移動。
  - ▶ 使用  /  選擇所需值並透過  確認選擇。

功能表	說明
轉至	開啟「我的影片」資料夾並以縮圖顯示現有影片。您可以使用 <b>[OK]</b> 來檢視影片，也可以透過訊息、電子郵件或藍芽將選定影片發送到其他手機。
大小	176x144、128x96
質素	特細緻、細緻、標準
亮度	從 - 2.0 到 2.0，以 0.5 為間隔。級別越高，屏幕越亮。
白平衡	您可以根據天氣調節影片背景の色調。自動、日光、陰天、照明燈、室內
夜間模式	選擇「開啟」可得到更好的夜間拍攝效果。
效果	無、黑白、負片、復古
長度	選擇所需錄影時間。多媒體訊息、30 秒、1 分鐘、2 分鐘、5 分鐘、60 分鐘。
記憶體	選擇要使用的記憶體，手機或外置。
鏡像	選擇「開啟」可啓用鏡像效果。
語音	決定是否錄製聲音。
轉換鏡頭	透過切換鏡頭，您可以啓用內部或外部攝錄機。

- 完成所有設定後，按右軟鍵 [關閉]。
- 將鏡頭對準要拍攝的對象並按 **[OK]** 開始錄影。  
然後，按 **[OK]** 可停止錄影。  
▶ 您可以透過左軟鍵 [暫停] 來暫停錄製。
- 按 **[OK]** 可儲存錄像片段。這樣，錄像片段便會儲存在「我的檔案」的「我的影片」資料夾中。

### 注意事項

- ▶ 按右軟鍵 [返回] 可返回預覽模式。

## 多媒體

### 音樂

功能表 4.3

#### 最近播放 (功能表 4.3.1)

您可以重新播放最近在「我的音樂」中收聽的音樂。

#### 全部曲目 (功能表 4.3.2)

您可以檢視儲存在手機/外置記憶體中的所有音樂檔案。

#### 演出者 (功能表 4.3.3)

您可以按演出者檢視和播放已儲存的音樂。

#### 專輯 (功能表 4.3.4)

您可以按專輯檢視和播放已儲存的音樂。

#### 類型 (功能表 4.3.5)

您可以按類型檢視和播放已儲存的音樂。

#### 播放列表 (功能表 4.3.6)













您可以從「全部曲目」功能表列表中選擇曲目，建立自己的播放列表。

#### 隨機播放曲目 (功能表 4.3.7)

若要連續與隨機地播放音樂，請選擇此選項。

### 語音備忘錄

功能表 4.4

- 錄音前，按左軟鍵 [選項] 以顯示選項快顯功能表。
- 使用  /  移至所需功能表項並按 。
- 長度**：可將錄音持續時間設為多媒體訊息大小、30 秒、1 分鐘或無限制（視乎記憶體）。  
**質素**：可從特細緻、細緻、標準之間選擇錄音質素。  
**記憶體使用裝置**：選擇將錄音儲存至手機記憶體，或是儲存至外置記憶體。  
**轉至我的聲音**：開啓「我的聲音」中的「錄音記錄」資料夾。
- 按  開始錄音。開始錄音時，錄製時間會出現於屏幕上。要取消錄音，請按「返回」。
- 完成錄音後，按  可停止。錄製的檔案會自動儲存在「我的檔案」的「錄音記錄」資料夾中。若再次按下 ，您便可開始錄製新語音。
- 錄音後，按左軟鍵可選擇各種不同的選項。
- 使用  /  選擇所需功能表，然後按 。
- 播放**：可播放語音。
- 發送**：可使用  /  選擇訊息、電子郵件及藍芽之一來發送已錄製的檔案，然後按 。

- ▶ **檔案**：可重新命名及檢視檔案資訊。
  - ▶ **刪除**：選擇此功能表可刪除已錄製的檔案。
  - ▶ **轉至我的聲音**：開啓「我的聲音」中的「錄音記錄」資料夾。
7. 按右軟鍵可關閉子功能表快顯視窗。

# 訊息 [功能表 5]

## 建立新訊息

### 功能表 5.1

#### 訊息 (功能表 5.1.1)

您可以編寫和編輯一條組合了文字、圖像、影片和聲音的訊息。

1. 在訊息欄位中輸入您的訊息。

#### 訊息欄位中的選項功能表

▶ **附加**：可執行以下動作：

1. **圖像**：可插入圖像。（現有圖像/拍照）
2. **影片**：可插入錄像片段。（現有影片/錄製影片）
3. **聲音**：可插入一段聲音檔案。（現有聲音/錄製聲音）
4. **符號**：可插入符號。輸入相應的數字鍵後，請按 **OK**。
5. **常用範本**：可插入儲存在手機上的文字範本。選擇範本後，請按 **OK**。選定範本將插入到「訊息」視窗中。
6. **情感圖示**：可在編寫訊息時插入情感圖示。

7. **名稱及號碼**：在通訊錄中搜尋名稱和號碼後，可插入該記錄。

8. **新增投影片**：選擇此項可新增投影片。

9. **標題**：選擇此項可插入標題。

0. **更多**：選擇此項可新增名片、日程表、備忘錄、待辦事項及我的名片。

▶ **儲存至草稿**：選擇此項可將訊息儲存至草稿。

▶ **輸入法模式**：選擇所需字典模式。

▶ **寫入語言**：可選擇編寫訊息的語言。

▶ **新增字詞至字典**：可將字彙新增至字詞。

2. 按右軟鍵 [返回] 可結束功能表，或在設定子功能表後轉到上一功能表。

3. 按OK鍵 [發送] 可插入收件者地址。填入最少一個收件者後，按確認鍵 [發送] 發送訊息。該訊息會自動儲存到「已發送項目」資料夾中。若訊息尚未發送，則會保留在「寄件匣」中，且狀態為失敗。

## 電子郵件 (功能表 5.1.2)

若要發送/接收電子郵件，您必須設定電子郵件帳戶。

1. 在「收件者」、「抄本」或「密件抄送」欄位中輸入電子郵件地址。您可以透過 **OK** 搜尋通訊錄。

### 注意事項

- ▶ 在 Cc (抄本) 欄位中輸入要轉寄電子郵件的參照電子郵件地址。
  - ▶ 在 Bcc (密件抄送) 欄位中輸入要轉寄電子郵件的隱藏參照電子郵件地址 (不透露轉寄資訊)。
  - ▶ 僅有效的電子郵件地址可用於收件者 (To)、抄本 (Cc) 及密件抄送 (BCC) 欄位。指定電子郵件地址後，另一個可指定另一電子郵件地址的欄位將會出現。您最多可在收件者和抄本地址欄位中指定 20 個收件者，在密件抄送地址欄位中指定 10 個收件者。
2. 將游標移至「標題」欄位並輸入標題。
  3. 將游標移至訊息欄位，您便可輸入訊息的內容。

4. 透過左軟鍵 [選項] 使用以下功能。

- ▶ **附加**：選擇此功能表可插入特殊字元、常用範本及通訊錄。另外，您亦可附加多媒體檔案 (圖片、影片及聲音)。
  - ▶ **搜尋通訊錄**：選擇此功能表可插入已儲存在通訊錄中的電子郵件地址。(僅在游標位於「收件者/抄本/密件抄送」欄位時，於「選項」功能表中顯示。)
  - ▶ **最近使用的**：可使用最近一次發送的電子郵件地址。
  - ▶ **儲存至草稿**：選擇此功能表可將訊息儲存至草稿。
  - ▶ **檢視附件**：顯示附加的檔案。(此項僅在已附加檔案的情況下才可使用。)
  - ▶ **移除**：刪除附件檔案。(此項僅在已附加檔案的情況下才可使用。)
  - ▶ **輸入法模式**：選擇所需字典模式。
  - ▶ **新增字詞至字典**：可將新字彙新增至字詞。
  - ▶ **編寫語言**：可變更編寫語言。
  - ▶ **設定郵件重要性**：可設定要發送電子郵件的重要性。
5. 編寫完電子郵件後，按 **OK** 可發送電子郵件。

# 訊息

## 收件匣

### 功能表 5.2

1. 您可以檢視收到的訊息。選擇一條訊息並按 **OK** 即可檢視該訊息。
2. 您可以透過 **◀/▶** 檢視上一條或下一條訊息。
3. 要檢視多媒體訊息（通知），請在訊息通知檢視屏幕中選擇「擷取」。該檔案即會開始傳輸，傳輸完成後您便可檢視檔案。

### 注意事項

不支援多媒體訊息（通知）及 WAP Push 訊息。

- ▶ **轉寄**：轉寄選定電子郵件訊息給其他人。
- ▶ **擷取（僅限 POP3）**：擷取新的電子郵件訊息。
- ▶ **複製（僅限 IMAP）**：複製選定電子郵件。
- ▶ **搜尋**：搜尋所需電子郵件。
- ▶ **刪除**：刪除電子郵件。
- ▶ **從伺服器刪除（僅限 POP3）**：從伺服器刪除訊息或電子郵件。
- ▶ **訊息同步（僅限 IMAP）**：同步要擷取電子郵件伺服器的電子郵件。
- ▶ **建立新訊息**：建立訊息、電子郵件或語音訊息。
- ▶ **標記/取消標記**：使用標記/取消標記選項進行多重刪除。
- ▶ **設為已讀取/未讀取**：可將選定電子郵件設為已讀取或未讀取。
- ▶ **排序方式**：可根據特定條件排序電子郵件。
- ▶ **刪去（僅限 IMAP）**：移除選定電子郵件資料。
- ▶ **訊息資訊**：訊息的簡要資訊，包括大小、類型、日期、時間及檔名。

## 郵箱

### 功能表 5.3

1. 選擇一個電子郵件帳戶並按 **OK** 可檢視接收到的電子郵件列表。
2. 在電子郵件列表中，您可以透過左軟鍵 [選項] 使用以下功能。
  - ▶ **回覆**：為選定電子郵件建立回覆。

## 草稿

### 功能表 5.4

您可以檢視已儲存的訊息。選擇一條訊息並按 **OK** 即可編輯該訊息。

您可以透過左軟鍵 [選項] 使用以下功能。

- ▶ **發送**：發送選定訊息。
- ▶ **通話**：可撥打電話或視像通話。
- ▶ **刪除**：刪除選定的訊息。
- ▶ **建立新訊息**：可編寫新的訊息或電子郵件。
- ▶ **標記 / 取消標記**：可選擇一條或多條訊息進行多重刪除。
- ▶ **篩選**：按選定訊息類型顯示訊息。
- ▶ **訊息資訊**：可查看訊息的類型、標題、收件者和日期。

## 寄件匣

### 功能表 5.5

「寄件匣」是待發訊息的臨時儲存位置。發送失敗的訊息也置於「寄件匣」中。例如，若未正確設定電子郵件帳戶，電子郵件將會存放於「寄件匣」中。

1. 選擇訊息。
2. 您可以透過左軟鍵 [選項] 使用以下功能。

### [對於發送中/等候中的訊息]

- ▶ **取消發送**：可停止發送/等候狀態。
- ▶ **建立新訊息**：可編寫新的訊息或電子郵件。
- ▶ **訊息資訊**：可查看訊息的類型、標題、收件者和日期。

### [對於失敗的訊息]

- ▶ **重新發送**：重新發送選定訊息。
- ▶ **刪除**：刪除目前的訊息。
- ▶ **儲存到草稿**：可將訊息發送至草稿。
- ▶ **建立新訊息**：可編寫新的訊息或電子郵件。
- ▶ **訊息資訊**：可查看訊息的類型、標題、收件者和日期。

## 訊息

### 已發送項目 功能表 5.6

顯示已發送的訊息（訊息/電子郵件）。

#### [選項]

- ▶ **轉寄**：轉寄選定訊息。
- ▶ **通話**：可撥打語音或視像通話。
- ▶ **刪除**：刪除選定的訊息。
- ▶ **建立新訊息**：可編寫新訊息。
- ▶ **標記 / 取消標記**：可選擇一條或多條訊息進行多重刪除。
- ▶ **複製及移動**：若為文字訊息，您可以將訊息複製到智能咭或移至「我的資料夾」/智能咭。
- ▶ **篩選**：按選定訊息類型顯示訊息。
- ▶ **訊息資訊**：可查看訊息資訊和報告資訊。

### 我的資料夾 功能表 5.7

您可以將收件匣或寄件備份中的訊息移至「我的資料夾」，並在之後將「我的資料夾」中的訊息移至原來的訊息匣中。

### 常用範本 功能表 5.8

#### 文字範本 (功能表 5.8.1)

您可以透過左軟鍵 [選項] 新增、編輯和刪除常用字句。

#### 注意事項

取決於您的服務供應商，手機中可能會預先儲存一些有用的字句。

#### 多媒體範本 (功能表 5.8.2)

您可以在多媒體訊息新增、編寫和檢視可用範本。預設情況下，會儲存五種範本（「生日」、「歡迎辭」、「假期」、「感謝」和「對不起」）。

### 情感圖示 功能表 5.9

您可以新增、編輯和刪除情感圖示。您可以在編寫訊息時插入喜歡的情感圖示。按下確認鍵即可檢視該圖示。

## 設定

### 功能表 5.0

#### 文字訊息 (功能表 5.0.1)

您可以設定與文字訊息相關的選項。

1. **文字訊息中心**：輸入文字訊息中心的地址。
2. **發送報告**：啓用此選項即可驗證您的訊息是否發送成功。
3. **有效時期**：此網絡服務可設定文字訊息在訊息中心儲存多久。
4. **訊息類型**：文字、語音、傳真、X.400、電子郵件  
通常，訊息類型會設為「文字」。您可將文字轉換為備用格式。請聯絡服務供應商，看其是否提供這項功能。
5. **字元編碼**：自動/預設字母表/Unicode。
  - ▶ **自動**：使用半形字元編寫的訊息通常以預設字母 (GSM7) 編碼。使用全形字元編寫的訊息則自動以 Unicode (UCS2) 編碼。
  - ▶ **預設字母表**：全形字元訊息亦會以半形字元編碼。請注意，有重音符號的全形字元可能會轉換為沒有重音符號的半形字元。
  - ▶ **Unicode**：以全形編碼的訊息。請注意，您可能需要為此支付雙倍費用。
6. **發送長文字時設為**：將長文字訊息選為多個文字訊息或多媒體訊息。

#### 多媒體訊息 (功能表 5.0.2)

您可以設定與多媒體訊息相關的選項。

1. **接收模式**：可分別使用本地網絡和漫遊網絡來設定接收模式。如果選擇**自動**，您會自動接收到多媒體訊息。如果選擇**手動**，則僅可在收件匣中接收通知訊息，然後再決定是否下載多媒體訊息。
2. **發送報告**：可決定是否要求收件者發送確認郵件，以及是否允許發送確認郵件給寄件者。
  - ▶ **要求報告**：決定是否要求多媒體訊息的發送確認郵件。
  - ▶ **允許報告**：決定是否針對發送確認郵件要求允許發送發送確認郵件。
3. **回覆報告**：可決定是否要求收件者發送閱讀確認郵件，以及是否允許發送閱讀確認郵件給寄件者。
  - ▶ **要求回覆**：決定是否要求多媒體訊息的閱讀確認郵件。
  - ▶ **允許回覆**：決定是否針對閱讀確認郵件要求允許發送閱讀確認郵件。
4. **重要性**：可選擇訊息的重要性（最低優先、正常優先、最高優先）。
5. **有效時期**：可在傳輸多媒體訊息時設定訊息的有效時期。該訊息僅會在設定的有效期間儲存在多媒體訊息伺服器中。

## 訊息

6. **投影片播放時間**：可在編寫訊息時設定每頁的放映時間。
7. **發送時間**：可設定將訊息發送給收件者的時間。多媒體訊息中心將在該發送時間後發送訊息。
8. **多媒體訊息中心**：可設定發送多媒體訊息的網絡資訊，如 MMSC 及互聯網設定。

### 電子郵件 (功能表 5.0.3)

您可以設定接收和傳輸電子郵件的設定。

1. **電子郵件帳戶**：可建立或設定包含電子郵件伺服器和使用者的 ID 的電子郵件帳戶。
2. **允許回覆電郵**：決定是否針對閱讀確認郵件要求允許發送閱讀確認郵件。
3. **要求回覆電郵**：決定是否要求閱讀確認郵件。
4. **擷取時隔**：可設定從內送郵件伺服器自動擷取電子郵件的擷取間隔。請注意，使用擷取間隔功能可能要另行收費。
5. **轉寄及回覆時加入原始訊息**：決定是否在轉寄或回覆訊息中加入接收時的原始訊息。

6. **包括附件**：決定是否在轉寄訊息中加入附件檔案。
7. **在漫遊時自動擷取**：進入漫遊地區時自動擷取電子郵件帳戶。
8. **新電子郵件通知**：新電子郵件到達時可收到通知資訊。
9. **簽名**：可設定加插到電子郵件結尾處的文字簽名。設定好的簽名字會隨電子郵件發送時自動或手動加插到結尾處。
0. **重要性**：可選擇電子郵件的重要性（最低優先、正常優先、最高優先）。

### 視像留言信箱 (功能表 5.0.4)

您可以設定視像留言信箱。

### 留言信箱 (功能表 5.0.5)

您可以設定留言信箱。

### 服務訊息 (功能表 5.0.6)

您可以設定服務訊息等選項設定。

- ▶ **訊息接收**：若設為「開啓」，則會擷取所有服務訊息。
- ▶ **服務安全**：可控制與服務訊息相關的總體接收選項。

### 資訊服務 (功能表 5.0.7)

- ▶ **區域廣播**：您可以設定接收狀態。
- ▶ **頻道**：您可編輯或新增頻道。
- ▶ **語言**：可透過  選擇所需語言。然後，資訊服務訊息將以您選定的語言顯示。

# 我的檔案 [功能表 6]

## 我的圖像

### 功能表 6.1

圖片資料夾由下載網上圖片的內建連結及預設的圖像共同構成。

使用手機拍攝的照片會儲存到圖片資料夾中，您可以建立新的資料夾來管理這些圖片。

選中某檔案後，您可以透過左軟鍵(選項)來顯示以下選項。(不適用於預設圖像)

▶ **發送**：可透過訊息、電子郵件或藍芽發送選定的圖像

#### ▶ 使用方式

- **牆紙**：可將某圖像設為桌面主題。
- **通訊錄圖像**：可將圖片指定到通訊錄。在他們來電或在您致電給他們時，您便會看到此圖片。
- **開機**：可將某圖像設為開機屏幕主題。
- **關機**：可將某圖像設為關機圖像。
- ▶ **移動**：可將檔案移至記憶體。
- ▶ **複製**：可將檔案複製到記憶體。
- ▶ **刪除**：刪除選定的圖像。
- ▶ **標記 / 取消標記**：使用標記功能，您可發送、刪除、移動和複製多個檔案。

#### ▶ 檔案

- **重新命名**：可重新命名圖像。
- **編輯**：可編輯圖像。

#### 注意事項

▶ 編輯功能表不會顯示在預設的圖像資料夾中。

- **檔案資訊**：可顯示選定圖像檔案的資訊。

▶ **建立新資料夾**：可在目前選定的資料夾中建立新資料夾。

▶ **播放投影片**：可以投影片放映形式檢視圖像。

▶ **排序方式**：可按日期、類型或名稱來排序檔案。

▶ **列表檢視/多格子檢視**：可以列表檢視或多格子檢視方式來檢視圖像。

▶ **記憶體管理**：可檢視記憶體狀態（手機記憶體或外置記憶體）。

## 我的聲音

### 功能表 6.2

聲音資料夾由下載鈴聲和音樂的內建連結，以及包含預設聲音和錄音的資料夾共同構成。您可在此處管理、發送或將聲音設定為鈴聲。

選中某檔案後，您可以透過左軟鍵[選項]來顯示以下選項。(不適用於預設聲音)

- ▶ **發送**：可透過訊息、電子郵件或藍芽發送選定的聲音。
- ▶ **使用方式**
  - **話音鈴聲**：可將聲音檔案設為來電的鈴聲。
  - **視像鈴聲**：可將聲音檔案設為視像通話的鈴聲。
  - **訊息提示音**：可將聲音檔案設為新的訊息提示音。
  - **開機**：可將聲音檔案設為開機提示音。
  - **關機**：可將聲音檔案設為關機提示音。
- ▶ **移動**：可將檔案移至記憶體。
- ▶ **複製**：可將檔案複製到記憶體。
- ▶ **刪除**：刪除選定的聲音。
- ▶ **標記/取消標記**：使用標記功能，您可發送、刪除、移動和複製多個檔案。
- ▶ **檔案**
  - **重新命名**：可重新命名聲音。
  - **檔案資訊**：可顯示選定聲音檔案的資訊。
- ▶ **建立新資料夾**：可建立新的資料夾。

- ▶ **排序方式**：可按日期、類型或名稱來排序檔案。
- ▶ **記憶體管理**：可檢視記憶體狀態(手機記憶體或外置記憶體)。

## 我的影片

### 功能表 6.3

您可在此處管理或發送下載或拍攝的錄像片段。





若按 **[OK]**，則可啓用錄像片段。

透過影片列表中的左軟鍵 [選項] 可使用以下功能。

- ▶ **發送**：可透過訊息、電子郵件或藍芽發送選定的錄像片段。
- ▶ **使用方式**：可將影片檔案設為話音鈴聲或視像鈴聲。
- ▶ **移動**：可將檔案移至手機記憶體或外置記憶體中。
- ▶ **複製**：可將檔案複製到手機記憶體或外置記憶體中。
- ▶ **刪除**：刪除選定的影片。
- ▶ **標記/取消標記**：使用標記功能，您可發送、刪除、移動和複製多個檔案。
- ▶ **檔案**
  - **重新命名**：可重新命名影片。
  - **檔案資訊**：可顯示選定影片檔案的資訊。
- ▶ **建立新資料夾**：可建立新的資料夾。
- ▶ **排序方式**：可按日期、類型或名稱來排序檔案。
- ▶ **列表檢視/多格子檢視**：可以列表檢視或多格子檢視方式來檢視圖像。

## 我的檔案

- ▶ **記憶體狀態：**顯示記憶體狀態（手機記憶體或外置記憶體）。

您可以使用多格子檢視影片。影片檔案會以縮圖形式顯示於列表中。您可以使用     來選擇所需的影片。選擇所需的影片並選擇「播放」以檢視錄製的影片。

- ▶ **橫向檢視：**可以橫向檢視影片。

### 注意事項

- ▶ 您也可以透過  以橫向檢視影片。

- ▶ **靜音/取消靜音：**開啓/關閉聲音。
- ▶ **拍攝：**可將暫停的屏幕儲存為圖像檔案（僅可在暫停模式中進行）。
- ▶ **重複：**可設定重複選項（關閉/1張/全部）。
- ▶ **檔案資訊：**可查看播放中檔案的資訊。
- ▶ **發送：**可透過訊息、電子郵件或藍芽發送影片。
- ▶ **刪除：**刪除選定的影片。
- ▶ **使用方式：**可將影片檔案設為話音鈴聲或視像鈴聲。此功能表將隨選定檔案的類型發生變化。

## 我的遊戲及應用程式

### 功能表 6.4

您可以在此功能表中輕鬆使用遊戲及應用程式。預設的資料夾取決於網絡商或所在的國家或地區。請注意，使用網上服務可能需要另行收費。

## 其他

### 功能表 6.5

圖片、聲音、影片、遊戲及應用程式以外的其他檔案會儲存在此資料夾中。

## 我的記憶咭

### 功能表 6.6

若選購了外置的 microSD 記憶咭，您便可管理更多內容。請參閱 17 頁和 18 頁的如何使用 microSD 記憶咭章節，了解如何插入和取出記憶咭。您可以如同手機一樣管理內容。

## Yahoo [功能表 7]

您可以存取 Yahoo 流動互聯網服務。

- ▶ **oneSearch**：您可以搜尋即時答覆。
- ▶ **電子郵件**：顯示您的電子郵件帳戶。
- ▶ **天氣**：顯示全球各地的目前天氣和天氣預報。檢視所儲存城市的天氣摘要。選擇「開啓」，即會顯示多個城市的詳盡天氣預報資訊。
- ▶ **本地和地圖**：搜尋和瀏覽本地地址、餐廳、酒吧、酒店等。
- ▶ **內容讀取裝置**：提供多姿多彩的內容：新聞、財經、娛樂和體育
- ▶ **日曆和通訊錄**：即使出門在外，您也可以存取您的約會和所有通訊錄詳情。日曆中的約會和事件也會顯示在「今日」檢視中。

- ▶ **Flicker**：「Flicker」工具讓您即使出門在外也可以共享和維護您的照片。使用者登入 Flicker 後，便可以查看 Flicker 和通訊錄的所有照片。

### 注意事項

- ▶ 由於網絡服務問題，某些國家/地區可能無法存取 Yahoo! Go 服務。

# 通訊錄 [功能表 8]

## 新增

### 功能表 8.1

您可以註冊新增通訊錄地址。  
您可以輸入新增通訊錄的名稱、其他電話號碼和電子郵件地址。也可以將通訊錄指定給群組，包括圖像，指定特定的鈴聲，甚至為通訊錄輸入備忘錄。  
其他可用的欄位包括主頁、住宅地址、公司名稱、職位及公司地址。  
您可以根據記憶體的使用量輸入和管理多個通訊錄的地址。

## 搜尋

### 功能表 8.2

執行通訊錄地址的搜尋功能。預設狀況下，搜尋操作會根據名字執行。目前的搜尋方式和找到的結果會顯示於「搜尋」視窗中。您可以向選定的電話號碼致電或發送訊息。通訊錄搜尋可根據名稱進行搜尋。

## 注意事項

在「設定」功能表中，您可以更改通訊錄列表的顯示。

## 快速撥號

### 功能表 8.3

使用此功能表，您可以管理快速撥號。快速撥號可設定為 2-9 之間的數字。您可以為特定通訊錄記錄多達 5 不同的號碼，您可將不同電話配置到快速撥號。

## 群組

### 功能表 8.4

使用此功能表，您可以管理群組資訊（只適用於存於手機的通訊錄）。您可以新增、編輯和刪除群組（不適用於預設群組）。若尚未為某個號碼指定鈴聲，則在該號碼來電時會響起指定給其群組的群組鈴聲。

## 服務撥號號碼

功能表 8.5

您可檢視由服務供應商指定的「服務撥號號碼」(SDN) 列表 (如果受智能咭支援)。此類號碼包括緊急電話、電話號碼查詢和留言信箱號碼。選擇服務號碼後,按該號碼即可撥打服務電話。

## 本手機號碼

功能表 8.6

可顯示智能咭中的手機號碼。您可以儲存智能咭目前使用的本手機號碼。

## 我的名片

功能表 8.7

您可以透過「新增」建立自己的名片。輸入名稱、號碼、電子郵件及圖像後,您可以將其用做發送訊息的名片。

## 設定

功能表 8.8

### 通訊錄列表設定 (功能表 8.8.1)

- ▶ **通訊錄檢視**: 選擇要顯示的連絡人資訊 (來自手機記憶體、來自智能咭還是同時來自兩者)。「手機及智能咭」為預設設定。
- ▶ **名稱顯示**: 可依名稱設定顯示順序。
- ▶ **顯示圖片**: 選擇是否顯示圖片。

### 同步聯絡人 (菜單 8.8.2)

您可將電話簿內容直接傳送到伺服器。

### 注意

- ▶ 該服務並不可用於所有國家。請聯絡您的網絡商,了解更多資訊。

### 複製 (功能表 8.8.3)

您可以在手機記憶體和智能咭記憶體之間複製通訊錄資料。您可以複製全部記錄,或依次序複製選定的記錄。

### 移動 (功能表 8.8.4)

您可以在手機記憶體和智能咭之間移動通訊錄資料。您可以移動全部項目,或逐個移動選定的項目。

## 通訊錄

### 透過藍芽傳送所有通訊錄

(功能表 8.8.5)

您可以透過藍芽將手機中的所有通訊錄資料發送到其他手機。

### 備份通訊錄 (功能表 8.8.6)

您可以透過 vCard 形式將手機中的所有電話簿資料儲存到外置記憶咭中。

### 還原通訊錄 (功能表 8.8.7)

您可以透過 vCard 形式將儲存在外置記憶咭中的所有電話簿資料還原到手機記憶體。

### 清除通訊錄資料 (功能表 8.8.8)

清除所有連絡人資訊。您可以刪除手機記憶體和智慧咭中的所有通訊錄。

### 記憶體資訊 (功能表 8.8.9)

您可以在此功能表中了解通訊錄記憶體的狀態。

## 工具 [功能表 9]


### 快選功能表


#### 功能表 9.1

您可以指定要儲存在「快選功能表」中的功能。如果將常用功能儲存在「快選功能表」中，則只需要按對應的按鍵，即可快速啓用此功能。


### 鬧鐘

#### 功能表 9.2

如果您設定鬧鐘，則  會顯示在指示符列中。指定的鬧鐘會在設定的時刻響鈴。

按  可停止響鈴，鬧鐘亦隨即解除。按左軟鍵 [延後] 並選擇延後間隔。鬧鐘響鈴將會停止，並在選定延後時間後恢復響鬧。您最多可以設定 5 個鬧鐘。

1. 請根據需要，在鬧鐘列表中選擇要設定的鬧鐘。如果沒有鬧鐘，請按 [新增] 以新增鬧鐘。
2. **設定時間/關閉**：透過開關鬧鐘選項或選擇響鬧時間，設定或取消鬧鐘。
3. **輸入響鬧時間**：透過指定小時和分鐘，輸入所需的響鬧時間。如果手機採用 12 小時的時間格式，則可選擇「AM」或「PM」。

4. **選擇重複模式**：使用  選擇所需重複模式，或按 [列表] 從列表中選擇所需的模式。
5. **選擇鈴聲**：透過按 [編輯] 開啓列表，選擇要在鬧鐘時間響鬧的鈴聲。
6. **輸入備忘錄**：輸入鬧鐘名稱。
7. **延後**：可設定鬧鐘的延後時隔。
8. 完成鬧鐘設定後，請按完成以儲存。

#### 注意事項

- ▶ 即使手機已關閉，鬧鈴仍會響鈴。

### 計算機

#### 功能表 9.3

計算器模組可讓您執行基本的算術功能（如加、減、乘、除）以及一些科學計算功能。（sin、cos、tan、log、ln、exp、sqrt、deg、rad）

## 工具

### 秒錶 功能表 9.4

此功能表可讓您記錄某事件所經歷的時間。

### 單位轉換器 功能表 9.5

透過此功能表，使用者可轉換匯率、面積、長度、重量、溫度、體積和速度。

### 世界時間 功能表 9.6

世界時間功能可提供世界主要城市的時間資訊。

### 智能咭服務 (視乎不同網絡商) 功能表 9.7

取決於您的智能咭上是否擁有 SAT 支援服務（即智能咭應用程式工具組），此功能表（功能表 9.7）可能有所不同。如果智能咭支援 SAT 服務，則此功能表的名稱將是儲存在智能咭上由網絡商服務指定的名稱，例如「特殊」。在此情況下，請參閱智能咭所提供的資訊，以便了解有關如何使用相關選項的更多資訊。

# 瀏覽器 [功能表 \*]

## 主頁

功能表 \*1

您可以啟動網頁瀏覽器，並在瀏覽器設定上存取已啟用設定檔的主頁。

## 輸入網址

功能表 \*2

您可以手動輸入網址並存取相關網頁。

## 書籤

功能表 \*3

您可以儲存最常存取或喜歡的網址/網頁。可在書籤上執行發送、新增、編輯、標記/取消標記或刪除操作。手機內有預設網址已儲存為書籤。

## RSS 讀取裝置

功能表 \*4

RSS 讀取裝置可提供更新自手機註冊網站的新聞。您可以透過 RSS 讀取裝置閱讀這些檔案，該讀取裝置可接收來自手機註冊網站的新聞，並以簡易的方式向您提供。

## 儲存的網頁

功能表 \*5

本手機可將屏幕上的網頁儲存為離線檔案。

## 記錄

功能表 \*6

您可檢視曾經連線過的頁面之列表。

## 設定

功能表 \*7

您可以變更瀏覽器連線和顯示的設定。

### 網絡設定 (功能表 \*7.1)

按 可選擇適合的網絡設定。這樣做可啓動使用瀏覽器的網絡設定。

### 外觀設定 (功能表 \*7.2)

▶ **字元編碼**  
可設定瀏覽器的預設字元。

▶ **捲動控制**  
選擇捲動線路數目讓您可以設定快速捲動。在功能表中選擇 1 行、2 行或 3 行。

▶ **顯示圖像**  
可讓您開啓或關閉瀏覽時的圖像顯示。

### 注意事項

▶ 啓用此功能會延遲圖像顯示直至傳輸完成為止。停用此功能會避免瀏覽器從伺服器下載圖像，因而加快傳輸速度。

▶ **Java 編寫語**  
選擇開啓或關閉 Java 編寫語。

## 瀏覽器

### 快取記憶 (功能表 \*7.3)

啓用快取記憶可讓您將存取過的網頁儲存到手機中。若網頁經已在快取記憶模式儲存，則會大大提高隨後瀏覽同一網頁時的網頁載入速度。

### Cookies (功能表 \*7.4)

啓用 Cookies 可讓您儲存伺服器發送的 Cookies。停用此功能會阻止 Cookies 儲存到您的手機中。

### 安全 (功能表 \*7.5)

#### 憑證列表

您可從此列表檢視憑證。

#### 節段清除

使用此選項，可清除安全 (WTLS/TLS) 作業階段資料。

### 重設設定 (功能表 \*7.6)

選擇此選項，可將您的手機恢復為原廠設定。

## 連接 [功能表 0]

### 藍芽

#### 功能表 0.1

藍芽連線。

本手機採用內置藍芽無線技術，可讓您將手機無線連線到其他藍芽裝置，如免提裝置、電腦、PDA 或其他手機。

例如，您可以透過無線藍芽免提裝置通話或發送圖片。

#### 注意事項

- ▶ 我們建議，手機和藍芽裝置之間的距離不要超過 10 米。如果您的手機和其他藍芽裝置之間沒有固體物件，連線效果將會提高。

#### 1. 開始使用

- 功能表 → 連接 → 藍芽 → 開啓/關閉

要使用藍芽功能，您必須首先將其開啓。

#### 2. 設定藍芽設定

- 功能表 → 連接 → 藍芽 → 設定
- 顯示我的手機：將「顯示我的手機」設定為「可見」，這樣，當其他裝置搜尋藍芽裝置時，便可偵測到您的手機。如果您選擇「隱藏」，當其他裝置搜尋藍芽裝置時，便無法偵測到您的手機。

- 我的裝置名稱：您可命名或重新命名您的手機在其他裝置上顯示的名稱。僅當「顯示我的手機」設為「可見」時，您的手機名稱才能顯示在其他裝置上。
- 支援的服務：您可檢視受此藍芽手機支援的裝置列表，如耳機和免提。
- 我的位址：您可檢查藍芽的位址。

#### 注意事項

- ▶ 當使用者在手機上使用藍芽裝置時，手機可能存在安全風險。因此，我們建議在設定或裝置配對後，將藍芽的可見狀態設為「隱藏」。不論透過何款藍芽配對裝置接收文件，在檢查寄件者詳細資料後，您可選擇接受或拒絕連線。

#### 3. 搜尋並配對新裝置

##### <搜尋新裝置>

您可以依照以下功能表順序，搜尋新裝置。

- 功能表 → 連接 → 藍芽 → 搜尋新裝置

## 連接

### <配對裝置>

1. 要搜尋配對的藍芽裝置，請按「新增」。
2. 屏幕會顯示「正搜尋裝置」。您可搜尋到 10 米範圍內的藍芽裝置。
3. 找到藍芽裝置後，這些裝置會列於屏幕上。如果找不到藍芽裝置，系統會詢問您是否需要重新搜尋。

### 4. 配對程序

- 按 **OK**。屏幕上會顯示要求您輸入密碼的視窗。
- 建立密碼（由 1 至 16 數位組成）後，其他裝置的使用者必須輸入配對密碼。其他設備的使用者必須知道密碼才可進行驗證。

### <刪除裝置>

1. 從配對裝置屏幕上選擇要刪除的裝置。
2. 您可以透過按「刪除」鍵或選擇選項 > 刪除來刪除裝置。要刪除所有配對裝置，請選擇選項 > 刪除全部。

### <使用藍芽傳輸資料>

1. 要將資料從您的手機傳輸到其他藍芽裝置上，請首先選擇儲存目標資料的應用程式。例如，將「我的檔案」中的資料發送到其他裝置，請選擇功能表 → 我的檔案 → 我的圖像 / 我的聲音 / 我的影片 / 其他 / 外置記憶體 → 選擇要傳輸的資料 → 發送 → 藍芽

### 2. 傳輸資料

- 1) 顯示找到的已配對裝置。如果所需裝置不在列表中，請選擇 [更多裝置]。
- 2) 從屏幕上顯示的裝置中選擇用於接收資料的裝置，並按 **OK**。
- 3) 如果對方在回答 [連線要求] 時選擇 [是]，資料就會進行傳輸。

## 伺服器同步

功能表 0.2

### 注意事項

- ▶ 此服務並不可用於所有國家/地區。有關詳情，請聯絡您的網絡商。

如果網絡商支援同步服務，則此服務功能將經由無線網絡同步手機中的資料與伺服器上的資料，如通訊錄、日曆、待辦事項及備忘錄。

## USB 連線模式

### 功能表 0.3

您可以啓用手機的 USB 連接模式，以用於多種用途。

如果要使用 USB 記憶咭之類的「大容量儲存」功能，請在此功能表中選擇「大容量儲存」。「大容量儲存」只適用於外置記憶咭。

如果您使用 PC suite 應用程式之類的「數據服務」，請在此功能表中選擇「數據服務」。

# 設定 [功能表 #]

## 情景模式

功能表 #.1

您可選擇來電的鈴聲或震動效果，並根據情景模式，設定鈴聲、按鍵音和音效的聲音和音量。

## 手機

功能表 #.2

### 自動按鍵鎖 (功能表 #.2.1)

啓用此功能後，滑蓋合上時間達到預定義時間後，即會自動鎖定。

### 語言 (功能表 #.2.2)

選擇顯示語言。您可以選擇自動語言選項，以將顯示語言變更為智能咕的支援語言。

### 省電模式 (功能表 #.2.3)

啓用此功能表，有助於在不使用手機時節省電量。

### 手機資訊 (功能表 #.2.4)

此功能可顯示智能咕的電話號碼、手機的型號名稱和軟件版本。

## 屏幕

功能表 #.3

此功能表可讓您對屏幕的顯示選項及功能表的所有圖形介面進行個人化設定。

### 屏幕主題 (功能表 #.3.1)

您可以設定顯示在主屏上的屏幕主題。

### 桌面

- ▶ **牆紙**：可選擇顯示於主屏上的圖像。
- ▶ **主屏幕使用狀態**：可在主屏幕上選擇使用桌面聚合器功能表。
- ▶ **顯示項目**：可選擇顯示於屏幕上的項目類型：時鐘、時鐘 + 按鍵指南、兩地時鐘、按鍵指南、沒有顯示、日曆 + 時鐘或日曆
- ▶ **時鐘類型**：可選擇時鐘類型。

### 開機

您可以選擇手機開機時顯示的圖像。

### 關機

您可以選擇手機關機時顯示的圖像。

### 功能表風格 (功能表 #3.2)

您可以從格子風格和列表樣式中選擇所需的**功能表樣式**。

### 字體 (功能表 #3.3)

透過 **[<]/[>]**，您可以設定撥號字體大小和撥號字體顏色。

### 背光燈 (功能表 #3.4)

您可以分別設定屏幕的背光燈長度 and 亮度以及按鍵的背光燈持續時間。

### 手機主題 (功能表 #3.5)

您可以設定手機主題：白色或黑色

### 間候語訊息 (功能表 #3.6)

您可以插入在開機時顯示的訊息。

## 日期及時間 功能表 #4

儘管目前的時間可在手機註冊到網絡時自動設定，使用者仍可透過此功能表直接設定時間及日期。使用者設定的時間僅在手機開機時有效。

### 時間

1. 從日期及時間列表中選擇時間項目，然後按 **[OK]**。
2. 使用導覽鍵移至所需的欄位：小時、分鐘或上午/下午欄位。（選擇的時間格式為 12 小時制時）
3. 使用數字鍵輸入小時和分鐘。
4. 使用 **[<]/[>]** 選擇時間格式。
5. 向下選擇小時指示格式，即關閉、布穀鳥鳴鐘及敲鳴鐘聲。
6. 按完成以設定時間。

### 日期

1. 從日期及時間列表中選擇日期項目，然後按 **[OK]**。
2. 使用 **[<]/[>]** 選擇。
3. 使用數字鍵輸入年月日。
4. 按完成以設定日期。

### 自動更新日期/時間

當「自動更新」設定為「開啓」時，時間和日期會隨著目前時區而更新。如果選取「首先確認」，則在自動更新前，會首先確認時間和日期更新。

### 夏令時間

選擇是否啓用夏令時間功能。您可以將選取的本地城市夏令時差設定為 1 小時或 2 小時。

# 設定

## 網絡

### 功能表 #.5

#### 選擇網絡 (功能表 #.5.1)

在自動和手動間選擇。

- ▶ **自動：**自動搜尋網絡並將手機註冊到網絡。推薦使用這種方式以便獲得最佳的服務和質素。
- ▶ **手動：**目前所有可用的 2G (GSM) 和 3G (UMTS) 網絡都會顯示，您可以從中選擇要註冊的網絡。如果網絡註冊失敗，則網絡列表會再次顯示，您可以選擇其他網絡進行註冊。

#### 注意事項

- ▶ 處於手動模式下的手機遺失網絡連線時，備用屏幕上將會顯示快顯訊息，讓您可以選擇可用的網絡。

#### 網絡模式 (功能表 #.5.2)

在選擇網絡功能表中搜尋網絡時，您可以設定要搜尋的網絡類型。

#### 首選列表 (功能表 #.5.3)

如果網絡在自動搜尋，您則可新增要連線的首選網絡。而且，可使用以下選項。

## 互聯網設定

### 功能表 #.6

此功能表可顯示互聯網設定。您可以透過「新增」功能表新增網絡設定。但是，您不可刪除或編輯預設的設定（這些設定因國家/地區而不同）。

## 存取點

### 功能表 #.7

此功能表可顯示存取點列表。透過「新增」功能表，您可新增存取點。但是，視乎國家的不同，您可能無法刪除或編輯預設設定。

## 分組數據連線

### 功能表 #.8

若選擇了「可使用時」功能表，在開機的情況下，手機會自動註冊 GPRS 網絡。若選擇「需要時」功能表，手機則會在連線到 WAP 或應用程式服務時才建立 GPRS 連線，並在結束 WAP 或應用程式連線時中斷。

## 安全

### 功能表 #.9

#### PIN碼要求

若將此設為「開啓」，則在您每次開機時，都會要求輸入 PIN 碼。

#### 注意事項

- ▶ 在 PIN 碼輸入視窗中按右軟鍵可返回上一步驟。
- ▶ 3 次錯誤輸入 PIN 碼，PIN 碼即會失效。此時，您需要輸入 PUK（PIN 解鎖鍵）碼才可重新設定 PIN 碼。
- ▶ 您最多可輸入 10 次 PUK 碼。（注意：如果您 10 次都輸入錯誤的 PUK 碼，智能咭將會被鎖定且必須更換。）
- ▶ 如果網絡商設定無法停用 PIN 碼要求，您將無法選擇此功能表項目。

## 手機鎖

您可以鎖定手機。我們提供了以下 4 種鎖定功能。

**在開機時：**一旦開機，手機即被鎖定。

**在智能咭更換時：**手機會在更換智能咭時鎖定。

**立即：**立即鎖定手機。

**無：**停用手機鎖定功能。您需要輸入安全密碼才可確認該選擇。

- ▶ 要解除鎖定手機，您需要輸入安全密碼。

#### 更改密碼

您可以更改 PIN 碼、PIN2 碼和安全密碼。

#### PIN 碼

PIN 碼是個人識別號碼的縮寫，用於限制他人在未經授權的情況下使用手機。

## 設定

### PIN2 碼

PIN2 碼是個人識別號碼 2 的縮寫，同 PIN 碼一樣，用於限制手機的非授權使用。PIN2 碼變更程序同 PIN 碼相同。3 次錯誤輸入 PIN2 碼，PIN2 碼即會失效。此時，您需要輸入 PUK2 碼才能再次使用 PIN2 碼。同 PUK1 碼一樣，您最多可輸入 10 次 PUK2 碼。10 次錯誤輸入 PUK2 碼，PIN2 碼即會失效。

### 安全密碼

安全密碼用於變更手機密碼。與 PIN 碼和 PIN2 碼不同，安全密碼沒有輸入次數上限。

## 記憶體管理

功能表 #.0

### 手機共用記憶體 (功能表 #.0.1)

此功能可顯示手機用戶記憶體的狀態。因為此功能會掃描整個檔案系統以進行統計，因此需要幾分鐘時間。

### 手機預留記憶體 (功能表 #.0.2)

此功能可顯示用戶預留記憶體的狀態。常見內容包括文字訊息、通訊錄、日曆、待辦事項、備忘錄、鬧鐘、通話記錄和書籤。而且，它能以一個清晰的示意圖顯示每個項目的實際量與總量的對比。

### 智能咭記憶體 (功能表 #.0.3)

此功能可顯示智能咭用戶記憶體的狀態。

### 外置記憶體 (功能表 #.0.4)

此功能可顯示外置記憶咭用戶記憶體的狀態。此功能可顯示使用中 and 可用記憶體的使用狀態。

## 主要儲存裝置設定

(功能表 #.0.5)

您可選擇下載檔案的儲存體：手機記憶體或外置記憶體。(需插入記憶咭)

## 串流播放設定 功能表 #.\*

若要設定不同的網絡設定來播放串流內容，您可以設定不同的網絡設定。

## 重設設定 功能表 ##

選擇此選項可將您的手機重設為預設設定。您必須輸入安全密碼。

# 配件

有不同的配件供您的手機使用。您可以根據您的個人通訊要求選擇這些選項。

## 旅行充電器

此充電器讓您在遠離住所或辦公室時亦可為電池充電。



## 免提耳機



## 標準電池



### 注意事項

- ▶ 只可用原裝 LG 配件。
- ▶ 不使用原裝 LG 配件，保養可能失效。
- ▶ 所配配件因地區而異：請向我們的地區服務公司或代理商查詢更多詳情。

# 技術資料

標準

產品名稱：KF310

系統：GSM900/DCS1800/PCS 1900/  
WCDMA

淨重：67.5g (不含電池)

環境溫度

最高：+55°C (平時) / +45°C (充電時)

最低：-10°C

Declaration of Conformity		LG Electronics	
<b>Supplier Details</b>			
Name: LG Electronics Inc			
Address: LG Electronics Inc, LG Nam Tunnel 25, Yuseong-dong, Yongsu-gu, Seoul, Korea, 150-721			
<b>Product Details</b>			
Product Name: GSM900/PCS 1800/PCS 1900/WCDMA Terminal Equipment			
Model Name: KF310			
Trade Name: LG		CE 0168	
<b>Applicable Standards Details</b>			
SAR/TE Standard: 1825/3C			
EMC/RF Standard: CE 0168, EN301 489-01 V1.2.1, EN301 489-02 V1.2.1, EN301 489-03 V1.2.1, EN301 489-04 V1.2.1, EN301 489-05 V1.2.1, EN301 489-06 V1.2.1, EN301 489-07 V1.2.1, EN301 489-08 V1.2.1, EN301 489-09 V1.2.1, EN301 489-10 V1.2.1, EN301 489-11 V1.2.1, EN301 489-12 V1.2.1, EN301 489-13 V1.2.1, EN301 489-14 V1.2.1, EN301 489-15 V1.2.1, EN301 489-16 V1.2.1, EN301 489-17 V1.2.1, EN301 489-18 V1.2.1, EN301 489-19 V1.2.1, EN301 489-20 V1.2.1, EN301 489-21 V1.2.1, EN301 489-22 V1.2.1, EN301 489-23 V1.2.1, EN301 489-24 V1.2.1, EN301 489-25 V1.2.1, EN301 489-26 V1.2.1, EN301 489-27 V1.2.1, EN301 489-28 V1.2.1, EN301 489-29 V1.2.1, EN301 489-30 V1.2.1, EN301 489-31 V1.2.1, EN301 489-32 V1.2.1, EN301 489-33 V1.2.1, EN301 489-34 V1.2.1, EN301 489-35 V1.2.1, EN301 489-36 V1.2.1, EN301 489-37 V1.2.1, EN301 489-38 V1.2.1, EN301 489-39 V1.2.1, EN301 489-40 V1.2.1, EN301 489-41 V1.2.1, EN301 489-42 V1.2.1, EN301 489-43 V1.2.1, EN301 489-44 V1.2.1, EN301 489-45 V1.2.1, EN301 489-46 V1.2.1, EN301 489-47 V1.2.1, EN301 489-48 V1.2.1, EN301 489-49 V1.2.1, EN301 489-50 V1.2.1, EN301 489-51 V1.2.1, EN301 489-52 V1.2.1, EN301 489-53 V1.2.1, EN301 489-54 V1.2.1, EN301 489-55 V1.2.1, EN301 489-56 V1.2.1, EN301 489-57 V1.2.1, EN301 489-58 V1.2.1, EN301 489-59 V1.2.1, EN301 489-60 V1.2.1, EN301 489-61 V1.2.1, EN301 489-62 V1.2.1, EN301 489-63 V1.2.1, EN301 489-64 V1.2.1, EN301 489-65 V1.2.1, EN301 489-66 V1.2.1, EN301 489-67 V1.2.1, EN301 489-68 V1.2.1, EN301 489-69 V1.2.1, EN301 489-70 V1.2.1, EN301 489-71 V1.2.1, EN301 489-72 V1.2.1, EN301 489-73 V1.2.1, EN301 489-74 V1.2.1, EN301 489-75 V1.2.1, EN301 489-76 V1.2.1, EN301 489-77 V1.2.1, EN301 489-78 V1.2.1, EN301 489-79 V1.2.1, EN301 489-80 V1.2.1, EN301 489-81 V1.2.1, EN301 489-82 V1.2.1, EN301 489-83 V1.2.1, EN301 489-84 V1.2.1, EN301 489-85 V1.2.1, EN301 489-86 V1.2.1, EN301 489-87 V1.2.1, EN301 489-88 V1.2.1, EN301 489-89 V1.2.1, EN301 489-90 V1.2.1, EN301 489-91 V1.2.1, EN301 489-92 V1.2.1, EN301 489-93 V1.2.1, EN301 489-94 V1.2.1, EN301 489-95 V1.2.1, EN301 489-96 V1.2.1, EN301 489-97 V1.2.1, EN301 489-98 V1.2.1, EN301 489-99 V1.2.1, EN301 489-100 V1.2.1			
<b>Declaration</b>			
I hereby declare under our sole responsibility that the product mentioned above is in full conformity with the above mentioned standards and conditions.		Name: <u>Seung-Hwan Ah/Seung</u>	Issue Date: <u>21 Mar, 2008</u>
LG Electronics Inc., Amstelveen Office Meesdreef 16, 1077 XZ Amstelveen, The Netherlands Tel: +31-20-547-5540, e-mail: ce0168@lge.com		Signature of representative	



简体中文

## ■ KF310 ■ 用户手册

本文档是 3G 视频手机 LG KF310 的用户手册。  
LG Electronics 保留对此文档的所有权利。未经  
LG Electronics 同意，不得复制、修改和散发本文  
档。



# 目录

为了您的安全	6	游戏与应用程序	26
关于安全有效使用手机的准则	7	我的应用程序 设置	
KF310 功能	10	通话	27
手机部件		拨打视频电话	
使用入门	14	通话记录	
安装 USIM 卡和电池		所有通话	
为电池充电	16	拨出电话	
断开充电器	17	已接来电	
如何使用 microSD 存储卡		未接来电	
存储卡格式化	18	通话时间 数据量	
开机/关机		通话费用	
常规功能	20	呼叫转接	28
拨打电话和接听电话		呼叫限制	
接听电话	21	固定拨号	29
输入文本	22	呼叫等待	
		常用设置	
菜单功能概览	24	视频通话设置	30

**管理器** 31

**日历**

**任务**

**备忘录**

**私人备忘录** 32

**日期计算器**

**设置**

日历

通过蓝牙发送所有日程表和任务

备份日历和任务

恢复日历和任务

内存信息

全部清除

**多媒体** 33

**相机**

**摄像机** 34

**音乐** 36

最近播放

所有曲目

艺术家

专辑

流派

播放列表

随机曲目

**语音备忘录**

**信息** 38

**创建新信息**

信息

电子邮件 39

**收件箱** 40

**邮箱**

**草稿箱** 41

**发件箱**

**已发送** 42

**我的文件夹**

**模板**

文本模板

多媒体模板

**图释**

**设置** 43

文本信息

多媒体信息

电子邮件 44

语音邮件

语音邮件

服务信息 45

小区服务

# 目录

我的文档	46	备份电话本	52
我的图像		恢复电话本	
我的声音	47	清空电话本	
我的视频		内存信息	
我的应用程序	48		
其它		工具	53
外部存储器		快速菜单	
		闹钟	
Yahoo	49	计算器	
		秒表	54
电话本	50	换算器	
新增		世界时间	
搜索		STK ( USIM 服务 )	
快速拨号			
群组		浏览器	55
服务号码		主页	
本机号码	51	输入地址	
我的名片		RSS 阅卡器	
设置		保存的网页	
联系人列表设置		历史记录	
同步电话本		设置	
复制		情景模式	
通过蓝牙发送所有联系人		外观设置	
移动		缓存	56
		Cookie	
		安全性	
		重设置	

---

**连接** 57

**蓝牙**

---

**服务器同步** 58

**USB 连接模式**

---

**设置** 59

**情景模式**

**手机**

自动键盘锁

语言

省电模式

手机信息

**屏幕**

屏幕主题

---

菜单样式 60

字体

背景灯

手机方案

问候语信息

**日期和时间**

---

**网络** 61

选择网络

网络模式

首选列表

**Internet 网络设定**

**接入点**

---

**分组数据连接** 62

**安全性**

---

**内存管理器** 63

手机公用内存

手机剩余内存

USIM 卡内存

外部存储器

主存储器设置

**流媒体设置**

**重置设置**

---

**配件** 64

---

**技术参数** 65

# 为了您的安全

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

## 警告！

- 在飞机上请务必关闭手机。
- 驾驶时请勿持握手机。
- 请勿在加油站、加油点、化工厂或爆破区附近使用手机。
- 为了您的安全，请仅使用指定的原装电池和充电器。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 警告！

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。
- 并非在所有手机网络中均可使用紧急电话。因此，您不应依赖于手机的紧急电话功能。
- 仅使用原装配件，以免损坏您的手机。
- 所有的无线电发射器都有对近距离内的电子干扰的危险。微弱的干扰可能会影响电视、收音机、个人计算机等。
- 应按照相关条例处置电池。
- 请勿拆卸手机或电池。

# 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

## 暴露在射频能量之下

### 无线电波暴露和“特定吸收率” (SAR) 信息

此款 KF310 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- ▶ 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频段中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- ▶ 不同的 LG 手机型号可能有不同的 SAR 等级，但它们均符合相关的无线电波暴露准则。
- ▶ 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为  $2 \text{ W/Kg}$ ，平均值超过十 (10) 克薄纸。
- ▶ 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为  $0.562 \text{ W/Kg}$  (10克)，戴在身体上时，其值为  $1.31 \text{ W/Kg}$  (10克)。
- ▶ 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为  $1.6 \text{ W/Kg}$ ，平均值超过一 (1) 克薄纸。此 SAR 数据适用于各个国家/地区的居民。

## 产品保养和维护

### 警告！

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- ▶ 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- ▶ 远离诸如电视、收音机或个人计算机之类的电器。
- ▶ 远离诸如暖气片或炉灶之类的热源。
- ▶ 小心不要让手机摔落。
- ▶ 不要让手机受到机械振动或撞击。
- ▶ 如在特别环境的要求下，请关闭手机。如：请勿在未得到批准下在医疗仪器附近使用您的手机。
- ▶ 请勿以潮湿的双手对充电中的手机进行操作。
- ▶ 这可能会引致触电或造成手机严重损坏。
- ▶ 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- ▶ 切勿在柔软家具上为手机充电。
- ▶ 手机应在通风良好的环境中充电。
- ▶ 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂）。
- ▶ 不要在烟雾或灰尘过多的环境中使用或存放手机。

## 关于安全有效使用手机的准则

- ▶ 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- ▶ 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- ▶ 不要将手机暴露在液体或潮气中。
- ▶ 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

### 有效的手机操作

#### 电子设备

- 所有手机都可能受到干扰，这种干扰会对性能造成影响。
- ▶ 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
  - ▶ 手机可能会对某些助听器造成干扰。
  - ▶ 微弱的干扰可能会影响电视、收音机、个人计算机等。

### 行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- ▶ 不要在驾驶时使用手持式手机。
- ▶ 将注意力完全集中在驾驶上。
- ▶ 如果有免提装置，请使用免提装置。
- ▶ 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- ▶ 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- ▶ 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

### 防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

### 爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- ▶ 不要在加油站内使用手机。不要在靠近燃料或化学制品处使用手机。
- ▶ 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

## 在飞机上

无线设备可能对飞机造成干扰。

- ▶ 登机前，请关机。
- ▶ 未经机务人员允许，不得在地面上使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向当地的服务提供商核准。

## 电池信息及保养

- ▶ 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- ▶ 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- ▶ 不要拆解电池组或将其短路。
- ▶ 保持电池组的金属触点清洁。
- ▶ 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- ▶ 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- ▶ 不要将电池充电器暴露在直射阳光下，也不要置于诸如浴室之类的高温环境中使用。
- ▶ 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- ▶ 如果用不适当的电池进行替换，可能会有爆炸危险。
- ▶ 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- ▶ 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- ▶ 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。

# KF310 功能

## 手机部件

### 打开视图





#### **左软键/右软键**

执行显示屏底部所示的功能。

#### **呼叫结束键**

- ▶ 您可以结束呼叫。
- ▶ 在激活菜单时按此键，您可以返回待机屏幕。

#### **清除键**


您可以删除字母或返回上一个菜单。

#### **发送键**


- ▶ 拨打电话号码或接听来电。
- ▶ 在待机模式下：显示已拨电话、已接来电和未接来电的通话记录。

## KF310 功能


右视图

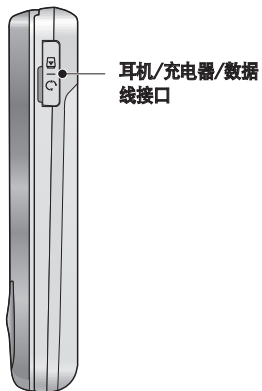

左视图

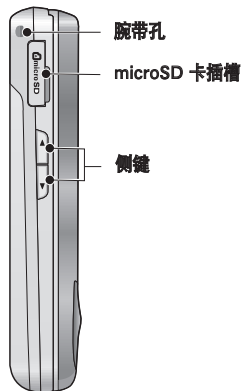

## 背视图

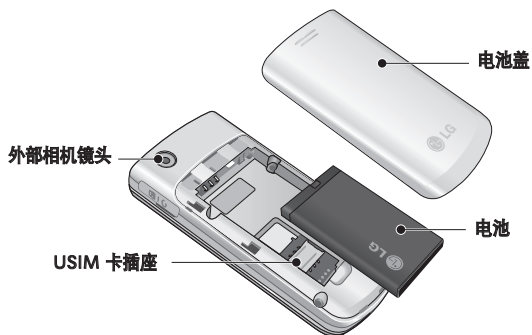


# 使用入门


## 安装 USIM 卡和电池

### 1. 安装 USIM 卡。

USIM 卡包含手机号码、服务详细资料 and 联系信息，因此必须插入手机。取出 USIM 卡之后，手机将无法使用（紧急呼叫除外），直到插入一个有效的 USIM 卡。插入或取出 USIM 卡之前，请始终断开手机与充电器和其它附件的连接。将 USIM 卡滑进 USIM 卡弹夹中。确保 USIM 卡以正确方式插入并且卡上的金色接触区域面朝下。要取出 USIM 卡，轻轻将卡向下按并反向推出。

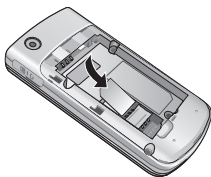

插入 USIM 卡

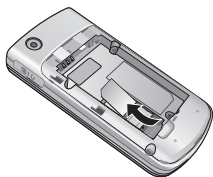


取出 USIM 卡

### 备注

- ▶ USIM 卡的金属触点很容易因刮擦而损坏。操作时请对 USIM 卡多加注意。遵守随 USIM 卡提供的说明。
- ▶ 取出电池后，插入 USIM 卡。


## 2. 安装电池。

向上滑入电池，直到其卡入到位。

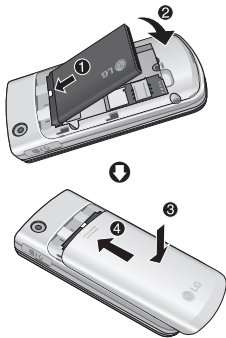

## 3. 卸下电池。


关机。（如果保持开机状态，您可能会丢失保存的电话号码和信息。）  
按住电池释放按钮，将电池滑下。

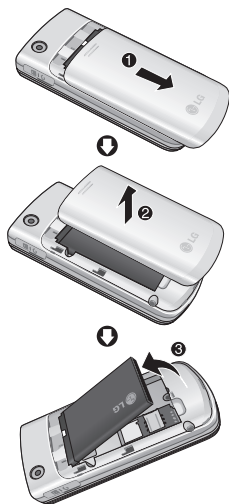

## 使用入门

### 为电池充电

在将旅行充电器连接至手机前，您必须先安装电池。

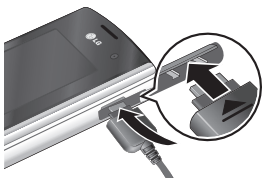

1. 如图所示，箭头面朝上，将电源适配器的插头推入手机右侧的插座，直到卡入到位。
2. 将旅行充电器的另一端连接到电源插座。



#### 备注

▶ 请仅使用包装盒随附的充电器。

3. 充电结束后，电池图标上的移动条停止。
4. 使用手机之前，请确保电池已完全充电。

#### 警告！


- 不要强行插拔接头。这可能会损坏手机和（或）旅行充电器。
- 如果在国外使用电池组充电器，务必使用附属的适配插头进行适当的配置。
- 不要在充电过程中取出电池或 USIM 卡。

#### 警告！

- 在发生雷电时，务必拔掉电线和充电器，以免遭受电击或发生火灾。
- 确保没有细尖的物体，如动物牙齿、指甲等进入手机内触碰电池。这可能引发火灾。

## 断开充电器

如下图所示，将旅行充电器从手机上断开。

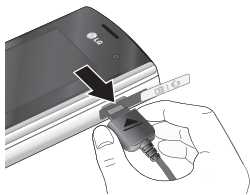

## <如何插入 microSD 存储卡>

1. 关机。在手机开机时插入或取出 microSD 卡会损坏保存在存储卡中的文件。
2. 掀开保护 microSD 插槽的塑料盖。



## 如何使用 microSD 存储卡




<MicroSD 存储卡>

3. 将存储卡插入插槽。金属触点必须与 microSD 的背部接触。不要太用力地推入 microSD。如果不能轻松地将其插入插槽，则您可能是插入方式出错或是插槽内有异物。

## 使用入门

- 插入后，向前推入存储卡，直到听到咔的一声，这意味着 microSD 卡已被正确锁定。

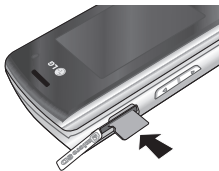

- 关闭插槽塑料保护。
- 要取出存储卡，请关机后打开插槽保护，然后将 microSD 退出以解除锁定。小心取出存储卡。

### 注意：

- ▶ 电池电量低时避免使用闪存。
- ▶ 写入存储卡时，请在写入操作完成后再次取出存储卡。
- ▶ 存储卡在设计时即采取仅以一个方向轻松插入到位。
- ▶ 不要折弯存储卡或强行将其插入插槽。
- ▶ 除 microSD 卡外，不要插入其它任何类型的存储卡。
- ▶ 如果已使用 FAT32 格式化 microSD 卡，请再使用 FAT16 格式化 microSD 卡一次。

有关 microSD 卡的详细信息，请参阅存储卡说明指南。

## 存储卡格式化

开始使用存储卡之前，您必须先对其进行格式化。插入存储卡后，请选择菜单 → 设置 → 内存管理器 → 外部存储器，然后按左软键 [←]。


此操作仅应在第一次插入存储卡时完成。格式化期间，手机将为不同的数据类型创建不同的文件夹。

## 开机/关机


### 开机

确保在手机中插入 USIM 卡并装入已充电的电池。按住 [电源] 直至开机。当 PIN 码请求设置为开时，请输入随 USIM 卡提供的 USIM PIN 码。数秒钟后，手机即可完成网络注册。

## 关机

按住  直至关机。关机时可能会出现几秒钟的延迟。在此期间，不要再次开机。

## 紧急呼叫功能

屏幕上的右软键显示为“停用/紧急呼叫”。按右软键或使用数字键键入所需的紧急呼叫号码，然后按  键拨打紧急电话。

# 常规功能

## 拨打电话和接听电话

### 拨打语音电话

1. 输入电话号码，包括完整区号。
  - ▶ 要删除一个数字，请按 **[C]** 键。
  - ▶ 要删除所有数字，请长按 **[C]** 键。
2. 按 **[☎]** 拨打电话。
3. 按 **[☎]** 或闭合翻盖结束通话。

### 从通话记录拨打电话

1. 在待机模式下，按 **[☎]**，屏幕上将显示最后的来电、去电和未接来电。
2. 使用 **[☺]** / **[☹]** 选择所需号码。
3. 按 **[☎]** 呼叫号码。

## 拨打视频电话

当您及对方都在 3G 覆盖区时，您可以拨打并接听视频电话。要拨打/接听视频电话，请执行以下操作。

1. 使用键盘输入电话号码，或者从呼入/呼出列表选择电话号码。
  - ▶ 要更正错误，请短按 **[C]** 删除输入的最后一个数字，或者长按 **[C]** 删除所有数字。
2. 若不想使用扬声器，请确保将耳机插入。
3. 要启用视频功能，请按左软键[选项]，然后选择**拨打视频电话**。
  - ▶ 要拨打视频电话，系统将通知您需要关闭其它应用程序。




### 备注

- ▶ 视频电话可能需要一定时间进行连接。请耐心等待。连接时间也取决于对方接听电话的速度。在视频电话连接过程中，您会看到自己的图像；在对方接听后，屏幕将显示其图像。



4. 请根据需要调整相机位置。
5. 按 **[☎]** 或闭合翻盖结束通话。

## 从电话本拨打语音/视频电话

拨打在电话本中存有号码的联系人的电话非常方便。

1. 按  访问联系人列表。
2. 滚动到联系人并拨打电话。
3. 按  拨打视频电话。按左软键并选择**拨打视频电话**。
4. 按  结束呼叫。

## 拨打国际电话




1. 长按  输入国际前缀。“+”字符可作为国际接入码前缀。
2. 输入国家代码、地区代码和电话号码。
3. 按 。

## 接听电话

当接收到电话时，手机响铃并且屏幕上出现闪烁的电话图标。如果可以识别致电者，则会显示该致电者的电话号码（或保存在电话本中的姓名）。

1. 打开滑盖即可接听来电。

### 备注

- ▶ 要拒绝来电，请按  或右软键两次。
- ▶ 如果**接听模式**设置为**仅发送键**（菜单 2.0.4），您可以在打开滑盖后按  接听来电。
- ▶ 如果接听模式设置为“按任意键”，除了  键，按任何键都将接听来电。

2. 要结束通话，请关闭翻盖或按 。

### 备注

- ▶ 在使用电话本或其它菜单功能时，您也可以接听来电。
- ▶ 您可以通过长按音量右软键，在来电时静音。

## 常规功能

### 激活振动模式的快捷方式

开机后，长按  可激活振动模式。


### 信号强度

您可以通过手机 LCD 屏幕上的信号指示符检查信号强度。信号强度会有所差别，尤其是在建筑物内。移到窗口附近可以改进接收质量。

### 输入文本

您可以使用键盘输入字母数字字符。例如，在电话本中存储姓名、写短信、创建个人问候语或者在日历中安排事件等，都需要输入文本。



### 更改文本输入模式



1. 当处于允许输入字符的区域中时，在 LCD 屏幕的右上角可以看到文本输入模式指示符。
2. 如果 T9 开启，您可以通过按  将模式更改为 T9Abc、T9ABC、123 和 T9abc。如果 T9 关闭，模式将更改为 Abc、ABC、123 和 abc。

### 使用 T9 模式

T9 预测性文本输入模式允许您以最少的按键次数输入单词。当您按每个按键时，手机开始显示它根据内置词典认为正确的字符。当添加新单词时，手机将从词典中选择可能性最大的单词。

### 使用 ABC 模式

使用  至  输入文本。

1. 按标示为所需字母的按键：
  - ▶ 按一次输入第一个字母。
  - ▶ 按两次输入第二个字母。
  - ▶ 依次类推。
2. 要插入空格，按  一次。要删除字母，请按 。

### 使用123（数字）模式

使用 123 模式，您可以在信息中输入数字（例如电话号码）。按与所需数字对应的按键，然后手动切换回适当的文本输入模式。

### 使用符号模式

使用符号模式，您可以输入各种符号或特殊字符。要输入符号，请选择**选项** → **插入** → **符号**。使用导航键和数字键选择所需的符号，然后按 **OK**。

# 菜单功能概览

您可以通过按待机屏幕中的 **[OK]** 启动菜单。移至所需项目并按 **[OK]** 进入子菜单。您也可以直接按对应的数字键（如下所示），从主菜单进入子菜单。主菜单包含以下顶层菜单和子菜单。

## 1. 游戏和应用程序

1.1 我的应用程序

1.2 设置

## 2. 通话

2.1 拨打视频电话

2.2 通话记录

2.3 通话时间

2.4 数据量

2.5 通话费用

2.6 呼叫转接

2.7 呼叫限制

2.8 固定拨号

2.9 呼叫等待

2.0 常用设置

2.\* 视频通话设置

## 3. 管理器

3.1 日历

3.2 任务

3.3 备忘录

3.4 私人备忘录

3.5 日期计算器

3.6 设置

## 4. 多媒体

4.1 相机

4.2 摄像机

4.3 音乐

4.4 语音备忘录

## 5. 信息

5.1 创建新信息

5.2 收件箱

5.3 邮箱

5.4 草稿箱

5.5 发件箱

5.6 已发送

5.7 我的文件夹

5.8 模板

5.9 图释

5.0 设置

<b>6. 我的文档</b>
6.1 我的图像
6.2 我的声音
6.3 我的视频
6.4 我的应用程序
6.5 其它
6.6 外部存储器
<b>7. Yahoo</b>
7.1 Yahoo!Go
<b>8. 电话本</b>
8.1 新增
8.2 搜索
8.3 快速拨号
8.4 群组
8.5 服务号码
8.6 本机号码
8.7 我的名片
8.8 设置

<b>9. 工具</b>
9.1 快速菜单
9.2 闹钟
9.3 计算器
9.4 秒表
9.5 换算器
9.6 世界时间
9.7 STK ( USIM 服务 )
<b>*. 浏览器</b>
*.1 主页
*.2 输入地址
*.3 书签
*.4 RSS 读卡器
*.5 保存的网页
*.6 历史记录
*.7 设置

<b>0. 连接</b>
0.1 蓝牙
0.2 服务器同步
0.3 USB 连接模式
<b>#. 设置</b>
#.1 情景模式
#.2 手机
#.3. 显示
#.4 日期和时间
#.5 网络
#.6 Internet 网络设定
#.7 接入点
#.8 分组数据连接
#.9 安全性
#.0 内存管理器
#.* 流媒体设置
#.# 重设设置

# 游戏与应用程序 [菜单 1]

## 我的应用程序 菜单 1.1

在此菜单中，您可以轻松下载游戏和其它应用程序。此菜单可能包含两个文件夹，可能不包含任何文件夹，或者包含“游戏和应用程序”文件夹。默认文件夹取决于运营商或国家/地区。每个文件夹都有一个内置的链接，用于下载游戏或应用程序。请注意，使用在线服务时可能会产生额外费用。您可以使用左软键 [选项] 创建文件夹。

## 设置 菜单 1.2

- **情景模式：**您可以查看情景模式并添加新的情景模式。
- **证书列表：**您可以查看使用 Java 应用程序的证书列表

## 通话 [菜单 2]

### 拨打视频电话

菜单 2.1

在此菜单中，您可以拨打视频电话。有关详细信息，请参阅第 20 页。

### 通话记录

菜单 2.2

#### 所有通话 (菜单 2.2.1)

此菜单允许您查看未接来电、已接来电、和拨出电话记录。您可以拨打电话或者发送信息到从通话记录中选定的号码中。您也可以将号码保存到电话本中。

#### 拨出电话 (菜单 2.2.2)

使您能够查看拨出电话的记录、拨打电话、发送信息以及将号码保存到电话本中。

#### 已接来电 (菜单 2.2.3)

使您能够查看来电记录、拨打电话、发送信息以及将号码保存到电话本中。

#### 未接来电 (菜单 2.2.4)

使您能够查看未接来电记录、拨打电话、发送信息以及将号码保存到电话本中。

### 通话时间

菜单 2.3

您可以按类型查看通话时间。按左软键 [选项] 选择部分初始化还是全部初始化。初始化要求您提供安全密码。

### 数据量

菜单 2.4

允许您查看发送、接收和传输所有数据的首量。按左软键选择全部初始化，或所选音量类型初始化。初始化要求您提供安全密码。

### 通话费用

菜单 2.5

1. 此功能将显示“上一次通话”及“所有通话”的费用。
2. 要编辑，请按中间键 [编辑]，然后输入 PIN2 码。
3. 您可以在设置通话费用中选择单位或货币。通话过程中显示通话费用，具体取决于设置、USIM 卡和运营商。
4. 在“设置限制”配置中，选择开以配置费用限制。配置完费用限制后，如果通话费用达到该限额，用户将不能继续拨打电话。

## 通话

### 呼叫转接

菜单 2.6

为语音和视频通话提供了“呼叫转接”菜单。

#### 1. 不存在呼叫转接时

您可以直接输入一个转接号码，或在电话本中搜索。如果按 [转接]，输入号码后，手机将给服务提供商发送一个请求。在等待网络处理结果的过程中，屏幕上将会出现请求信息和动画。

#### 2. 已设置呼叫转接时

查看已设置的呼叫转接列表。在等待网络处理结果的过程中，屏幕上将会出现请求信息和动画。

#### 3. “选项”菜单

在激活“所有语音来电”后，如果选择菜单底部的“选项”菜单，屏幕上将显示“停用”、“全部停用”、“查看状态”以及“清除列表”菜单。

“查看状态”菜单将显示网络设置。如果您选择此菜单，屏幕上将出现请求信息和动画。然后，在收到网络发送的信息之后，屏幕上将显示网络设置。如果您选择“停用”菜单，用户确认后，在网络中注册的呼叫转接号码将被删除。“清除列表”菜单将删除所有转接号码列表。

### 呼叫限制

菜单 2.7

为语音和视频通话提供了“呼叫限制”菜单。

菜单包括“语音电话”、“视频电话”和“全部停用”。“语音电话”和“视频电话”包括以下子菜单。

“呼叫限制”菜单包括：所有拨出电话、拨出国际电话、国际漫游时拨打电话、所有来电和国际漫游时来电子菜单。

“所有拨出电话”菜单限制拨打所有电话；“拨打国际电话”限制拨打国际电话；“国际漫游时拨打电话”限制拨打除本国 PLMN 以外的电话。“所有来电”拒接所有来电；“国际漫游时来电”拒接在漫游时收到的来电。

### 语音和视频通话

1. 如果要激活限制服务，按“确定”键，然后输入限制密码，手机将请求网络激活限制服务并接受操作结果。收到来自网络的结果后，将显示该结果。

2. 如果选择“选项”菜单，则将激活“拨出电话”菜单。从最下面的菜单上的软菜单中选择选项菜单。此时将出现“停用”、“全部停用”、“查看状态”和“更改密码”菜单。“停用”菜单将在用户输入限制密码后停用限制服务。“全部停用”菜单将在用户输入限制密码后停用在网络内配置的所有限制服务。

“查看状态”菜单允许用户查看当前网络配置。如果选择“查看状态”菜单，屏幕上将显示请求信息和动画。网络应答后，操作结果将显示在屏幕上。“更改密码”菜单允许用户更改当前的限制密码。

#### **全部停用**

您可以选择是否要全部停用。

## **固定拨号**

**菜单 2.8**

#### **▶ 打开/关闭**

- **开:** 选择是否激活 FDN。需要进行 PIN2 码认证。
- **关:** 选择是否激活 FDN。需要进行 PIN2 码认证。

## **呼叫等待**

**菜单 2.9**

激活等待服务。如果选择此项目，屏幕上将显示请求信息和动画。网络应答后，操作结果将显示在屏幕上。

## **常用设置**

**菜单 2.0**

### **拒接来电**

您可以设置是否要拒接来电。

### **发送本机号码**

- ▶ **通过网络设置:** 使用服务提供商确定的默认设置进行配置。
- ▶ **开:** 配置为在拨出电话时发送我的电话号码。
- ▶ **关:** 配置为在拨出电话时不发送我的电话号码。

### **自动重拨**

允许您在呼叫尝试失败时设置自动重拨功能。

### **接听模式**


允许您设置接听方式。您可以选择：**仅发送键、滑开手机以及按任意键。**

### **分钟提示音**

确定在开机状态下是否每隔 1 分钟响 1 分钟的提示音。

## 通话

### BT 接听模式

- ▶ **免提：**连接蓝牙后，您可以使用蓝牙耳机接听电话。
- ▶ **手机：**如果按手机上的  接听电话，您可以通过手机讲电话。如果按蓝牙耳机键接听电话，您可以使用蓝牙耳机讲电话。这是初始接听模式。接听电话过程中，您可以从手机转到耳机，或从耳机转到手机。

### 保存新号码

在此菜单中，您可以在结束通话时保存电话号码（如果该号码未保存在电话本中）。

### 滑盖关闭设置

滑下滑盖时，您可以选择设置为是否结束通话。

### 选择线路（视 SIM 卡情况而定）

根据您的 SIM 卡是否支持 2 线路服务，您可以选择所需的线路。

## 视频通话设置

菜单 2.\*

您可以设置拨打/接收视频电话的屏幕显示。

- ▶ **使用个人图片：**确定是否要显示个人图像。
- ▶ **选择个人图像：**选择要显示的个人图像。
- ▶ **镜像：**选择是否要激活镜像效果。
  - **开：**以与原图像翻转的形式显示图像。
  - **关：**按原样显示图像。

# 管理器 [菜单 3]










## 日历

### 菜单 3.1

#### 日程表查询和搜索

##### 1. 按月参考

您可以按月查看日程表。选择此菜单时，光标位于当前日期上。

为光标所定位日期保存的日程表显示为灰色框。按快捷键  移到上一年，按快捷键  移到下一年，按快捷键  移到今天。按  或  移到上个月，按  或  移到下个月。您可以使用  /  移动日期。

##### 2. 详细参考

您可以参考详细的日程表，也就是用用户配置的日程表的全部内容。

#### 添加新事件

您可以添加事件。您可以配置开始时间、结束时间、内容、事件类型、重复和日程表闹钟。

#### 删除所有日程表

您可以使用此功能删除所有保存的日程表内容。

#### 设置和取消假期

您可以设置或取消用户假期。按左软键 [选项]，然后选择设置假期。选定日期将以红色显示。

要取消假期，按左软键 [选项]，然后选择清除假期。

#### 日程表通知

如果用户已配置闹钟设置，则指定的闹铃将会响起。如果通知时间早于预定的起始时间，您可以重新设置闹钟。

## 任务

### 菜单 3.2

您可以查看、编辑和添加要执行的任务。任务按时间顺序显示。已完成任务或未完成任务的显示方式不同。

## 备忘录

### 菜单 3.3

使用备忘录管理功能。您可以查看和管理保存的备忘录内容，也可以添加新备忘录。

## 管理器

### 私人备忘录

菜单 3.4

您可以撰写私人备忘录以保护自己的隐私。您可以使用此菜单输入安全密码。

### 日期计算器

菜单 3.5

您可以注册名称和日期，如生日。您可以查看距离某事件发生还剩多少天，或某事件已过去多少天。

### 设置

菜单 3.6

#### 日历 (菜单 3.6.1)

您可以对配置进行设置以查看日历。

- ▶ **默认视图:** 您可以设置查看日历的默认值: 月视图、周视图
- ▶ **周开始时间:** 1AM、2AM、3AM、4AM、5AM、6AM、7AM、8AM、9AM、10AM、11AM、12PM
- ▶ **周开始日期:** 您可以设置周开始的默认日期: 周六、周一

### 通过蓝牙发送所有日程表和任务 (菜单 3.6.2)

使用蓝牙，您可以将日历和/任务列表中的所有数据，从手机发送到其它手机。

### 备份日历和任务 (菜单 3.6.3)

当您插入外部存储器时，可以为保存在手机中的日历或任务列表创建备份文件。

### 恢复日历和任务 (菜单 3.6.4)

插入外部存储器时，您可以恢复日历或任务的备份文件。

### 内存信息 (菜单 3.6.5)

您可以查看有关日历、任务、备忘录和私人备忘录的可用内存的相关信息。

### 全部清除 (菜单 3.6.6)

您可以删除与日历、任务、备忘录和私人备忘录有关的所有数据。






## 多媒体 [菜单 4]


### 相机

#### 菜单 4.1


此应用程序使您能够拍摄静止照片。您可以拍摄所需尺寸的照片，并将它用作联系人照片、主屏及其它更一般的用途。拍摄后，可以通过信息、电子邮件或蓝牙发送照片。



1. 按左软键访问**选项**并设置所需环境，如下所示：

- ▶ 使用  /  在选项菜单间移动。
- ▶ 使用  /  选择所需值，然后使用  确认选择。

菜单	描述
转到	此时将启动“图片”文件夹，并以缩略图形式显示现有照片。您可以通过按  查看图片。您还可以通过信息、电子邮件或蓝牙将选定视频发送给其他人。
大小	1600x1200、1280x960、640x480、320x240、墙纸、176x144、电话本
质量	超精细、精细、标准
连拍	一张、三张、六张、九张（备注：可用连拍数取决于相片大小。）
亮度	从 2.0 至 2.0，增量为 0.5。级别越高，屏幕越亮。
白平衡	您可以根据天气调节背景照片的颜色。自动、日光、阴天、照明、室内
夜间模式	选择“开”，在夜晚您可以拍摄出更好的照片。

## 多媒体

菜单	描述
选景	拍照时，您可以在 10 种相框中进行选择。（仅适用于墙纸大小）
定时器	您可以延迟相机的快门时间。 无、3 秒、5 秒、10 秒激活定时器时，将显示  。
效果	无、黑白、反色、棕褐色
声音	选择所需的快门声音。
内存	选择所需的存储位置：手机内存或外部存储器。
镜像	选择“开”，您可以激活镜像效果。
切换相机	您可以切换到相机以激活内部或外部相机。
预览屏幕	选择所需的预览模式：完整图像或全屏。

2. 完成所有设置后，按右软键 [关闭]。
3. 将相机对准要拍摄的物体，然后按 。
4. 按  保存图片。照片将保存在“我的文件”中的“图片”文件夹中。

### 备注






- ▶ 按右软键 [返回] 返回到上一个模式而不保存照片。


## 摄像机

### 菜单 4.2




此应用程序使您能够录制视频剪辑。在此菜单中，您可以选择同时播放并观看保存的视频文件。录制后，视频剪辑可以通过信息、电子邮件或蓝牙进行发送。

1. 按左软键访问选项并设置所需环境，如下所示：

- ▶ 使用  /  在选项菜单间移动。
- ▶ 使用  /  选择所需值，然后使用  确认选择。

菜单	描述
转到	此时将启动“视频”文件夹，并以缩略图形式显示现有视频。您可以通过按  查看视频。您还可以通过信息、电子邮件或蓝牙将选定视频发送给其他人。
大小	176x144、128x96
质量	超精细、精细、标准
亮度	从 2.0 至 2.0，增量为 0.5。级别越高，屏幕越亮。
白平衡	您可以根据天气调节背景视频的颜色。自动、日光、阴天、照明、室内

菜单	描述
夜间模式	选择“开”，在夜晚您可以拍摄出更好的视频。
效果	无、黑白、反色、棕褐色
时长	选择所需的录制时间。彩信、30 秒、1 分钟、2 分钟、5 分钟、60 分钟
内存	为手机或外部存储器选择所需内存。
镜像	选择开，您可以激活镜像效果。
语音	决定是否要录制声音。
切换相机	您可以切换到相机以激活内部或外部相机。

2. 完成所有设置后，按右软键 [关闭]。
3. 将相机对准要录制的物体，然后按  开始录制。  
按  停止录制。
- ▶ 按左软键 [暂停] 可以停止录制。
4. 按  保存视频剪辑。视频将保存在“我的文件”中的“视频”文件夹中。

### 备注

- ▶ 按右软键 [返回] 返回到上一个模式而不保存视频剪辑。

## 多媒体

### 音乐

#### 菜单 4.3

#### 最近播放 (菜单 4.3.1)

在“我的音乐”中，您可以重播最近听过的音乐。

#### 所有曲目 (菜单 4.3.2)

您可以在手机/外部存储器中查看整个音乐文件。

#### 艺术家 (菜单 4.3.3)

您可以按艺术家查看并播放存储的音乐。

#### 专辑 (菜单 4.3.4)

您可以按专辑查看并播放存储的音乐。

#### 流派 (菜单 4.3.5)

您可以按流派查看并播放存储的音乐。

#### 播放列表 (菜单 4.3.6)



您可以从“所有曲目”菜单列表中选择曲目以创建您自己的播放列表。


#### 随机曲目 (菜单 4.3.7)



如果要持续且随机播放音乐，请选择此选项。

### 语音备忘录

#### 菜单 4.4

1. 按左软键 [选项] 以在录音前显示选项弹出菜单。
2. 使用  / ，然后按 **OK** 移动到所需菜单项。
  - ▶ **时长**：您可以将录音的持续时间设置为多媒体大小、30 秒或 1 分钟。
  - ▶ **质量**：您可以从“超精细”、“精细”和“标准”中选择录音质量。
  - ▶ **已用内存** - 选择是将录音保存到手机内存还是外部存储器。
  - ▶ **转到我的声音**：打开“声音”中的“录音”文件夹。
3. 按 **OK** 开始录音。开始录音后，录制时间将显示在 LCD 屏幕上。要取消录音，请按“返回”。
4. 结束录音时，按 **OK** 退出。录制的文件将自动保存在“我的文件”的“录音”文件夹中。如果再次按 **OK**，您可以开始录制新语音。
5. 录音完成后，按左软键选择不同的选项。

6. 使用  / ，然后按 **OK** 选择所需菜单。

- ▶ **播放:** 您可以播放语音。
  - ▶ **发送:** 要发送录音文件，请使用  / ，按 **OK** 从“信息”、“电子邮件”和“蓝牙”中选择。
  - ▶ **文件:** 您可以更改文件名并查看文件信息。
  - ▶ **删除:** 选择此菜单以删除录制的文件。
  - ▶ **转到我的声音:** 打开“我的文件”中的“录音”文件夹。
7. 按右软键关闭子菜单弹出窗口。

# 信息 [菜单 5]

## 创建新信息

### 菜单 5.1

#### 信息 (菜单 5.1.1)

您可以撰写并编辑包含文本、图像、视频和音频的信息。

1. 在“信息”字段中输入您的信息。

#### “信息”字段中的选项菜单

▶ **插入:** 您可以执行以下操作:

1. **图像:** 您可以插入图像。(现有图像/拍照)
2. **视频:** 您可以插入视频剪辑。(每个幻灯片一个视频剪辑)
3. **声音:** 您可以插入声音文件。(每个幻灯片一个声音)
4. **符号:** 您可以插入符号。输入相应的数字键后, 按 **[OK]**。
5. **模板:** 您可以插入手机中保存的文本模板。选择模板后, 按 **[OK]**。选定的模板将被插入到“信息”窗口中。
6. **图释:** 您可以在编写信息时插入图释。
7. **姓名和号码:** 在电话本中搜索姓名和号码后, 您可以插入条目。
8. **添加新幻灯片:** 选择此选项创建新的幻灯片。
9. **主题:** 选择此选项以插入主题。
0. **更多:** 选择此选项以添加名片、日程表、备忘录、任务和我的名片。

▶ **保存到草稿箱:** 选择此菜单以将邮件保存到草稿箱中。

▶ **输入法:** 选择所需的电子词典模式。

▶ **编写语言:** 您可以选择编写信息的语言。

▶ **添加至T9词典:** 您可以将单词添加到T9词典。

2. 按右软键 [返回] 以退出菜单, 或在设置子菜单后返回上一个菜单。
3. 按中键 [发送] 插入收件人地址。至少填写一个收件人字段后, 按确认键 [发送] 以发送信息。信息将自动保存到“已发送”文件夹。如果消息未发送出去, 它将被保存在发件箱中并标记为失败状态。

## 电子邮件 (菜单 5.1.2)

要发送/接收电子邮件, 您应先设置电子邮件帐户。

1. 在“收件人”、“抄送”、“密件抄送”字段中输入收件人的电子邮件地址。您可以按 **OK** 搜索联系人。

### 备注

- ▶ 在“抄送”字段中输入参考电子邮件地址, 以转发电子邮件。
- ▶ 在“密件抄送”字段中输入隐藏的参考电子邮件地址, 以转发电子邮件 (不转发邮件信息)。
- ▶ 对于收件人 (“收件人”)、参考地址 (“抄送”) 和隐藏的参考地址 (“密件抄送”) 字段, 仅可输入有效的电子邮件地址。当指定一个电子邮件地址后, 将会出现另一个字段, 您可以从中指定其它地址。您最多可以为“收件人”和“抄送”地址字段指定 20 个收件人, 为“密件抄送”地址字段指定 10 个收件人。

2. 将光标移到“主题”字段, 然后键入主题。
3. 您可以通过将光标移到“信息”字段来输入信息内容。
4. 使用左软键 [选项], 您可以使用以下功能。
  - ▶ **插入:** 选择此菜单插入特殊符号、模板和电话本。此外, 还可以附加多媒体文件 (图片、视频和声音)。

- ▶ **搜索联系人:** 选择此菜单插入保存在电话本中的电子邮件地址。(仅在光标定位在“发件人”/“抄送”/“密件抄送”字段时, 才显示在“选项”菜单中。)
  - ▶ **最近使用:** 您可以使用最近发送的电子邮件地址。
  - ▶ **保存到草稿箱:** 选择此菜单以将邮件保存到草稿箱中。
  - ▶ **查看附件:** 显示附加的文件。(仅在附件了文件时, 此项方可用。)
  - ▶ **删除:** 删除附件。(仅在附件了文件时, 此项方可用。)
  - ▶ **输入法:** 选择所需的电子词典模式。
  - ▶ **添加至T9词典:** 您可以将新单词添加到词典。
  - ▶ **编写语言:** 您可以更改编写语言。
  - ▶ **设置邮件优先级:** 您可以配置要发送的电子邮件的优先级。
5. 编写完电子邮件后, 按 **OK** 发送电子邮件。

## 信息

### 收件箱

#### 菜单 5.2

1. 您可以查看已接收的信息。选择一条信息，然后按 **OK** 查看信息。
2. 您可以使用 **◀/▶** 查看上一条或下一条信息。
3. 要查看多媒体信息（通知），请选择信息通知查看屏幕中的检索。这样文件即会被传送，您可以在收到信息后查看文件。

#### 备注

不支持彩信（通知）和 WAP Push 信息

- ▶ **搜索**：搜索您要查找的电子邮件。
- ▶ **删除**：删除电子邮件。
- ▶ **从服务器删除（仅 POP3）**：从服务器删除信息或电子邮件。
- ▶ **信息同步（仅 IMAP）**：同步电子邮件以检索电子邮件服务器。
- ▶ **创建新信息**：创建信息、电子邮件或语音邮件。
- ▶ **标记/取消标记**：使用标记/取消标记选项以删除多个内容。
- ▶ **设为已读/未读**：您可以将选定电子邮件设为已读或未读。
- ▶ **排序方式**：您可以根据条件对电子邮件进行排序。
- ▶ **彻底删除（仅 IMAP）**：删除选定的电子邮件数据。
- ▶ **信息**：有关信息的简短消息，例如：大小、类型、日期、时间和文件名。

### 邮箱

#### 菜单 5.3

1. 选择一个电子邮件账户，然后按 **OK** 查看收到的电子邮件列表。
2. 在电子邮件列表中，使用左软键（选项），您可以使用以下功能。
  - ▶ **回复**：为选定的电子邮件创建回复内容。
  - ▶ **转发**：将选定的电子邮件信息转发给他人。
  - ▶ **检索（仅 POP3）**：检索新的电子邮件信息。
  - ▶ **复制至（仅 IMAP）**：复制选定的电子邮件。

## 草稿箱

### 菜单 5.4

您可以查看保存的信息。选择一条信息，然后按 **[OK]** 编辑信息。

使用左软键 [选项]，您可以使用以下功能。

- ▶ **发送**：发送选定的信息。
- ▶ **删除**：删除选定的信息。
- ▶ **创建新信息**：您可以撰写新信息或电子邮件。
- ▶ **标记/取消标记**：您可以选择一个或多个信息以执行“删除多个”操作。
- ▶ **过滤器**：按所需的信息类型显示信息。
- ▶ **信息**：您可以查看信息类型、日期和时间。

## 发件箱

### 菜单 5.5

发件箱是等待发送信息的临时存储处。发送失败的信息也将位于发件箱中。例如，如果电子邮件账户配置不正确，那么电子邮件将被保存在发件箱中。

1. 选择信息。
2. 使用左软键 [选项]，您可以使用以下功能。

### [适用于发送/等待信息]

- ▶ **取消发送**：您可以停止发送/等待状态。
- ▶ **通话**：您可以拨打语音电话或视频电话。
- ▶ **创建新信息**：您可以撰写新信息或电子邮件。
- ▶ **信息**：您可以查看信息类型、日期、时间、大小及其保存位置。

### [适用于发送失败的信息]

- ▶ **重新发送**：重新发送选定的信息。
- ▶ **保存到草稿箱**：您可以将信息发送到草稿箱。
- ▶ **通话**：您可以拨打语音电话或视频电话。
- ▶ **删除**：删除当前信息。
- ▶ **创建新信息**：您可以撰写新信息或电子邮件。
- ▶ **信息**：您可以查看信息类型、日期和时间。

## 信息

### 已发送

菜单 5.6

显示您发送的信息（信息/电子邮件）。

#### [选项]

- ▶ **回复:** 创建对发件人或选定信息所有收件人的回复。
- ▶ **转发:** 转发选定的信息。
- ▶ **通话:** 您可以拨打语音电话或视频电话。
- ▶ **删除:** 删除选定的信息。
- ▶ **创建新信息:** 您可以撰写新信息。
- ▶ **标记/取消标记:** 您可以选择一个或多个信息以执行“删除多个”操作。
- ▶ **复制并移动:** 对于短信，您可以将信息复制到 USIM 卡，或移动到我的文件夹/USIM 卡
- ▶ **过滤器:** 按所需的信息类型显示信息。
- ▶ **信息:** 您可以查看信息类型、日期和时间。

### 我的文件夹

菜单 5.7

您可以将“收件箱”或“已发信息”中的信息移至“我的文件夹”，然后，将“我的文件夹”中的信息移至初始信箱。

### 模板

菜单 5.8

#### 文本模板（菜单 5.8.1）

您可以使用左软键 [选项] 添加、编辑和删除经常使用的有用短语。

#### 备注

根据服务提供商的不同，手机中将默认保存一些常用短语。

#### 多媒体模板（菜单 5.8.2）

您可以在创建多媒体信息时创建、编辑和查看可用的模板。本手机预设保存 5 种类型的模板（生日、问候、假期、感谢、道歉）。

### 图释

菜单 5.9

您可以添加、编辑和删除图释。您可以在写信息时插入所需图释。如果按确认键，您可以查看图标。

## 设置

### 菜单 5.0

#### 文本信息 (菜单 5.0.1)

您可以配置与选项相关的文本信息。

1. **文本信息中心:** 输入文本信息中心的地址。
2. **状态报告:** 启用此选项, 您可以验证信息是否已成功发送。
3. **有效期:** 此网络服务允许您设置信息在信息中心的保存时间。
4. **信息类型:** 文本、语音、传真、X.400、电子邮件  
通常, 信息类型设置为“文本”。您可以将文本信息转换为其它形式。请与服务供应商联系以了解是否提供此功能。
5. **字符编码: 自动/默认字母表/Unicode。**
  - ▶ **自动:** 使用单字节字符的信息通常以默认字母表(GSM7) 编码。使用双字节字符的信息自动以 unicode(UCS2) 编码。
  - ▶ **默认字母表:** 对于使用双字节字符的信息, 仍以单字节编码。请注意, 带音调的双字节字符将被转换成不带音调的单字节字符。
  - ▶ **Unicode:** 信息以双字节编码。请注意, 收费可能加倍。
6. **将长文本另发送为:** 选择以多条短信或彩信选择长文本信息。

#### 多媒体信息 (菜单 5.0.2)

您可以配置与选项相关的多媒体信息。

1. **检索模式:** 您可以分别使用本地网络和漫游网络设置检索模式。如果选择**自动**, 将自动检索多媒体信息。如果选择**手动**, 那么您仅会在收件箱中收到一条通知信息, 随后, 您可以决定是否要下载该多媒体信息。
2. **状态报告:** 此菜单使您能够确定是否向收件人请求发送确认邮件, 以及是否允许向发件人发送送达确认邮件。
  - ▶ **请求报告:** 确定是否为多媒体信息请求发送确认邮件。
  - ▶ **允许报告:** 确定是否允许为发送确认邮件请求发送送达确认邮件。
3. **已读回执:** 此菜单使您能够确定是否向收件人请求读取确认邮件, 以及是否允许向发件人发送读取确认邮件。
  - ▶ **请求回执:** 确定是否为多媒体信息请求读取确认邮件。
  - ▶ **允许回执:** 确定是否允许为阅读确认邮件请求发送读取确认邮件。
4. **优先级:** 您可以选择信息优先级(低、中或高)。
5. **有效期:** 允许您在传输多媒体信息时配置信息的有效期。此信息只在配置好的有效期内保存在多媒体服务器中。

## 信息

6. **幻灯片持续时间**：此菜单使您能够在创建信息时配置每个页面的持续时间。
7. **发送时间**：对发送给收件人的信息配置发送时间。多媒体信息中心将在到达发送时间后发送信息。
8. **多媒体信息中心**：允许您配置网络信息（如 MMSC 和 Internet 网络设定），以发送多媒体信息。
6. **包括附件**：确定在转发信息时是否要包含附件。
7. **漫游时自动检索**：在漫游区域时自动检索电子邮件帐户。
8. **新电邮通知**：在新电子邮件到达时接收通知信息。
9. **签名**：您可以配置签名文本以附加在电子邮件的末尾。在发送电子邮件时，配置的签名文本将自动或手动附加在电子邮件的末尾。

### 电子邮件（菜单 5.0.3）

您可以配置设置以接收和传输电子邮件。

1. **电子邮件帐户**：您可以创建或配置电子邮件帐户，包括电子邮件服务器和用户 ID。
2. **允许回复电子邮件**：确定是否允许为阅读确认邮件请求发送读取确认邮件。
3. **请求回复电子邮件**：确定是否为多媒体信息请求读取确认邮件。
4. **检索间隔**：您可以配置检索间隔以从邮件接收服务器中自动检索电子邮件。请注意，使用检索间隔功能时可能会产生附加费用。
5. **在转发和回复中包含信息**：确定在转发或回复信息时是否包含原始信息。

0. **优先级**：您可以选择电子邮件的优先级（低、中或高）。

### 语音邮件（菜单 5.0.4）

您可以发送或接收带视频文件的邮件。

### 语音邮件（菜单 5.0.5）

您可以发送或接收带语音文件的邮件。

## 服务信息 (菜单 5.0.6)

您可以配置选项设置, 如 Push(SI/SL) 信息。

- ▶ **信息接收:** 如果设置为“开”, 将接收所有服务信息。
- ▶ **服务安全性:** 您可以设置有关 Push (SI/SL) 信息的所有接收选项。

## 小区服务 (菜单 5.0.7)

- ▶ **手机广播:** 您可以设置接收状态。
- ▶ **频道:** 您可以添加或修改频道。
- ▶ **语言:** 通过按 **[OK]**, 您可以选择所需语言。随后, 小区广播信息将以您选定的语言显示。

# 我的文档 [菜单 6]

## 我的图像

### 菜单 6.1

“图片”文件夹由用于从 Internet 下载图片的嵌入式链接和默认图像组成。相机拍摄的照片存储在“图片”文件夹中，您也可以创建新的文件夹管理它们。

选定一个文件后，按左软键 [选项] 将出现以下选项：

- ▶ **发送：**您可以通过信息、电子邮件或蓝牙发送选定的图像。
- ▶ **用作**
  - **墙纸：**您可以将图像设为主屏主题。
  - **联系人图像：**为联系人指定图片。当其致电时，您将看到此图片。
  - **开机：**您可以将图像设为开机屏幕主题。
  - **关机：**您可以将图像设为关机图像。
- ▶ **移动：**使文件能够移到其它文件夹。
- ▶ **复制：**将文件复制到其它文件夹。
- ▶ **删除：**删除所选图像。
- ▶ **标记/取消标记：**使用“标记”功能，您可以发送、删除、移动和复制多个文件。

### ▶ 文件

- **重命名：**您可以重命名图像。
- **编辑：**允许编辑图像。

### 备注

- ▶ 在默认图像文件夹中不显示编辑菜单。

- **文件信息：**显示关于所选图像文件的信息。
- ▶ **新建文件夹：**您可以在当前选定的文件夹内创建一个新文件夹。
- ▶ **幻灯片显示：**您可以以幻灯片放映形式查看图像。
- ▶ **排序方式：**您可以按日期、文件类型或名称对文件进行排序。
- ▶ **列表视图/网格视图：**您可以以列表视图或网格视图查看图像。
- ▶ **内存管理器：**您可以查看存储器状态（手机或外部存储卡）。

## 我的声音

菜单 6.2

“声音”文件夹由用于下载铃声和音乐的嵌入式链接和包含默认声音和录音的文件夹组成。在此，您可以管理、发送或将声音设为铃声。

选定一个文件后，按左软键 [选项] 将出现以下选项：

- ▶ **发送：**您可以通过信息、电子邮件或蓝牙发送选定的声音。
- ▶ **用作**
  - **来电铃声：**您可以将声音文件设为语音来电铃声。
  - **视频铃声：**您可以将声音文件设为视频来电铃声。
  - **信息提示音：**您可以将声音文件设为新信息提示音。
  - **开机：**您可以将声音文件设为开机提示音。
  - **关机：**您可以将声音文件设为关机提示音。
- ▶ **文件信息：**显示关于所选声音文件的信息。
- ▶ **排序方式：**您可以按日期、文件类型或名称对文件进行排序。
- ▶ **内存管理器：**您可以查看存储器状态（手机或外部存储器卡）。

## 我的视频





菜单 6.3

在此，您可以管理或发送下载的或拍摄的视频剪辑。

如果按 **[OK]**，您可以激活视频文件。使用视频列表中的左软键 [选项]，您可以使用以下选项。


- ▶ **发送：**您可以通过信息、电子邮件或蓝牙发送选定的视频剪辑。
- ▶ **用作：**您可以将视频文件设为语音铃声或视频铃声。
- ▶ **移动：**将文件移至手机内存或外部存储器。
- ▶ **复制：**将文件复制到手机内存或外部存储器。
- ▶ **删除：**删除选定的视频。
- ▶ **标记/取消标记：**使用“标记”功能，您可以发送、删除、移动和复制多个文件。
- ▶ **文件**
  - **重命名：**您可以重命名视频。
  - **文件信息：**显示关于所选视频文件的信息。
- ▶ **新建文件夹：**您可以新建一个文件夹。
- ▶ **排序方式：**您可以按名称、日期或文件类型对文件进行排序。
- ▶ **列表视图/网格视图：**您可以以列表视图或网格视图查看图像。
- ▶ **内存状态：**显示内存状态（手机或外部存储器卡）。

## 我的文档

您可以使用视频播放器观看视频。视频文件以缩略图的形式显示在列表中。您可以使用  /  /  /  选择所需视频。选择所需的视频，然后选择“播放”以观看所录制的视频。

- ▶ **风景视图：**您可以以风景视图模式查看视频。

### 备注

- ▶ 通过按  键，您还可以以宽视图模式查看视频。

- ▶ **静音/取消静音 -** 打开或关闭声音。
- ▶ **拍摄：**您可以将暂停屏幕上的内容保存为图像文件（仅适用于“暂停”模式）。
- ▶ **重复：**您可以设置重复选项（关/一张/全部）。
- ▶ **文件信息：**您可以查看有关正在播放的文件的信息。
- ▶ **发送：**您可以通过信息、电子邮件或蓝牙发送视频。
- ▶ **删除：**删除选定的视频。
- ▶ **用作：**您可以将视频文件用作语音铃声或视频铃声。此菜单将根据所选类型而不同。

## 我的应用程序

菜单 6.4

在此菜单中，您可以轻松下载游戏和其它应用程序。此菜单可能包含两个文件夹，可能不包含任何文件夹，或者包含“游戏和应用程序”文件夹。默认文件夹取决于运营商或国家/地区。每个文件夹都有一个内置的链接，用于下载游戏或应用程序。请注意，使用在线服务时可能会产生额外费用。您可以使用左软键 [选项] 创建文件夹。

## 其它

菜单 6.5

除图片、声音、视频、游戏和应用程序以外的其它文件都保存在此文件夹。

## 外部存储器

菜单 6.6

如果购买可选的外部 microSD 存储卡，则您可以管理更多内容。请参阅第 17 和 18 页“如何使用 microSD 存储卡”部分，了解如何插入和取出存储卡。您可以管理相关内容，操作与手机相同。

## Yahoo [菜单 7]

您可以访问 Yahoo Mobile 网际网络服务。

- ▶ **oneSearch:** 您可以搜索即时答案。
- ▶ **电子邮件:** 显示您的电子邮件帐户。
- ▶ **天气:** 显示全球各地的当前条件和天气预报。查看您所保存城市的天气摘要。选择“打开”，将显示多个城市的详细天气预报。
- ▶ **本地地图:** 搜索并浏览本地地址、旅馆、酒吧、酒店及其它。
- ▶ **内容阅读器:** 提供各种不同的内容：新闻、财经、娱乐和体育
- ▶ **日历和地址簿:** 您可以在旅行中查看您的约会和所有联系人的详细资料。日历中的约会和事件还将显示在“今天”视图中。

- ▶ **Flickr:** Flickr 小工具允许您在旅行中共享并维护照片。如果用户注册了 Flickr，您可以查看 Flickr 的所有照片和您的联系人信息。

### 备注

- ▶ 某些国家或地区无法访问 Yahoo! Go 服务，具体取决于网络服务。

# 电话本 [菜单 8]

## 新增

### 菜单 8.1

您可以注册新的联系人通讯信息。您可以输入新联系人的姓名、不同电话号码和电子邮件地址。您也可以将联系人分配给群组，包括图像或个人形象；为联系人分配特定铃声以及输入备忘录。

其它可用字段包括：主页 URL、住宅地址、公司名称、职务和公司地址。

根据内存使用情况，您可以输入和管理联系人通讯信息。

## 搜索

### 菜单 8.2

执行联系人通讯信息搜索功能。默认情况下，搜索操作按名字执行。当前搜索方法和找到的结果显示在“搜索”窗口中。您可以向所选电话号码打电话或发送信息。可根据电话号码或群组信息执行联系人搜索。

### 备注

在“设置”菜单中，可根据名字执行搜索操作。

## 快速拨号

### 菜单 8.3

使用此菜单，您可以管理快速拨号。可在 2~9 间对快速拨号进行配置。您可以为特定联系人地址分配任何不超过 5 位数的快速拨号号码，可以为同一个联系人地址分配多个快速拨号。

## 群组

### 菜单 8.4

使用此菜单，您可以管理群组信息（存储在手机和 USIM 卡中的信息）。您可以添加、编辑和删除群组。如果没有为某个号码指定铃声，则其来电铃声为所属群组所分配的铃声。

## 服务号码

### 菜单 8.5

您可以查看由您的服务提供商分配的服务号码 (SDN)（如果 USIM 卡支持）。此类号码包括紧急电话、查号台和语音邮件号码。选择服务号码后，按 Ⓞ 呼叫服务。

## 本机号码

菜单 8.6

允许在 USIM 卡中您的电话号码。您可以在 USIM 卡中保存正在使用的本机号码。

## 我的名片

菜单 8.7

您可以通过选择“我的名片”和“添加”来创建自己的名片。输入姓名、号码、电子邮件和图像后，您可以在发送信息时将其用作名片。

## 设置

菜单 8.8

### 联系人列表设置 (菜单 8.8.1)

- ▶ **查看电话本：**选择要显示的联系人信息（从手机内存、USIM 卡内存或二者）。所有设置为默认设置。
- ▶ **名称显示：**您可以按姓名设置显示顺序。
- ▶ **显示图片：**选择是否显示图片。

## 同步电话本 (菜单 8.8.2)

您可以直接将电话本内容发送到服务器。

### 备注

- ▶ 此服务并非适用于所有国家/地区。有关详细信息，请与您的服务提供商联系。

## 复制 (菜单 8.8.3)

您可以将联系人从手机内存复制到 USIM 卡或从 USIM 卡复制到手机内存。您可以一次复制所有项目。

## 通过蓝牙发送所有联系人

(菜单 8.8.4)

使用蓝牙，您可以将手机中存储的所有电话本数据发送到其它手机。

## 移动 (菜单 8.8.5)

您可以将联系人从手机内存发送到 USIM 卡或从 USIM 卡发送到手机内存。您可以一次移动所有项目或选定的项目。

## 电话本

### **备份电话本** (菜单 8.8.6)

通过名片，您可以将手机中的所有电话本数据保存到外部存储器中。

### **恢复电话本** (菜单 8.8.7)

通过名片，您可以将外部存储器中的所有电话本数据恢复到手机内存中。

### **清空电话本** (菜单 8.8.8)

清除所有联系人信息。您可以删除保存在手机内存和USIM 卡中的所有联系人信息。

### **内存信息** (菜单 8.8.9)

您可以检查此菜单中的电话本状态。

## 工具 [菜单 9]

### 快速菜单

#### 菜单 9.1

您可以指定要保存在快捷菜单中的功能。如果将最常用的功能保存在快速菜单中，您只需按键即可快速启动这些功能。

### 闹钟

#### 菜单 9.2

如果您设置了闹钟，☺ 将出现在指示符栏中。指定的闹钟将在预定时间响起。

按 **OK** 停止闹钟，此时闹钟设置被取消。按左软键 [暂停] 并选择暂停间隔。闹钟停止并在暂停持续时间后恢复。您可以配置 5 个闹钟。

1. 在闹钟中选择要配置的闹钟。如果没有闹钟，请按左软键 [添加]，添加新的闹钟。
2. **设置/取消闹钟**：使用用于指定是否打开闹钟的选项或者通过选择闹钟时间来设置或取消闹钟。
3. **输入闹钟时间**：通过指定“小时”和“分钟”值来输入所需的闹钟时间。如果手机设置为 12 小时制格式，请选择“AM”或“PM”。
4. **选择重复模式**：使用 **[C]/[D]** 或通过按左软键 [列表] 从列表中选择所需重复模式。
5. **选择铃声**：通过按左软键 [编辑] 打开列表并从中选择闹钟铃声。
6. **输入备忘录**：输入闹钟名称。

7. **暂停**：您可以设置闹钟休眠持续时间。
8. 指定完闹钟后，按中间键 [保存]。

#### 备注

▶ 即使关机，闹钟设置仍然有效。

### 计算器

#### 菜单 9.3

计算器模式允许您执行基本的数学运算，例如加法、减法、乘法和除法；以及一些科学计算函数。（正弦函数、余弦函数、正切函数、对数、自然对数、指数、幂次方、角度值、弧度值）

## 工具

### 秒表

菜单 9.4

可用此菜单记录事件所用时间。

### 换算器

菜单 9.5

使用此菜单，用户可以换算币种、面积、长度、重量、温度、体积和速度。

### 世界时间

菜单 9.6

世界时间功能提供世界各地主要城市的时间信息。

### STK (USIM 服务) 菜单 9.7

此菜单 (菜单 9.7) 根据 USIM 卡是否提供了 SAT 支持服务 (如 USIM 卡应用程序工具包) 而不同。

如果 USIM 卡支持 SAT 服务，此菜单将是 USIM 卡上存储的运营商特定服务的名称，例如，“特殊”。有关如何使用相关选项的信息，请参考上述情况中 USIM 卡提供的信息。

# 浏览器 [菜单 \*]

## 主页

菜单 \*1

您可以启动网络浏览器并访问在“浏览器设置”中激活的网络设置的主页。

## 输入地址

菜单 \*2

您可以手动输入 URL 地址并访问相关网页。

## 书签

菜单 \*3

您可以保存经常访问的或喜爱的 URL/网页。可对书签执行发送、添加、编辑、标记/取消标记或删除操作。部分预先配置的 URL 被保存为书签。

## RSS 阅卡器

菜单 \*4

RSS 阅卡器提供来自手机中注册网址的新闻更新并以简易方式提供。

## 保存的网页

菜单 \*5

本手机可将显示屏上的页面保存为脱机文件。最多可以保存 20 个网页。

## 历史记录

菜单 \*6

您可以查看已连接的页面列表。

## 设置

菜单 \*7

您可以更改浏览器连接和显示的设置。

### 情景模式 (菜单 \*7.1)

按 @ 选择相应的网络设定。这将激活网络设定以启动浏览器。

### 外观设置 (菜单 \*7.2)

#### ▶ 字符编码

设置浏览器默认字符。

#### ▶ 滚动控制

允许您通过选择要滚动的行数来设置滚动速度。选择菜单: 1 行、2 行或 3 行。

#### ▶ 显示图像

允许您在浏览过程中启用或禁用图像显示。

# 浏览器

## 备注

- ▶ 启用此功能将在传输完成之前延时显示图像。禁用此功能将阻止浏览器从服务器下载图像，以实现更快的传输。

## ▶ Java 脚本

选择将 JavaScript 设置为开或关。

## 缓存 (菜单 \*7.3)

启用“缓存”将允许您将访问过的页面保存到手机上。一旦页面存储于缓存中，那么在您以后浏览该页面时，其加载速度将大大提高。

## Cookie (菜单 \*7.4)

启用 Cookie 将允许您保存发自服务器的 cookie。禁用此功能将阻止 cookie 存储到您的手机中。

## 安全性 (菜单 \*7.5)

### 证书列表

用户可以查看列表中的证书。

### 清除会话

使用此选项可清除安全 (WTLS/ TLS) 会话数据。

### 重置设置 (菜单 \*7.6)

选择以将手机重新设置为默认浏览器设置。

## 连接 [菜单 0]

### 蓝牙

#### 菜单 0.1

#### 蓝牙连接

您的手机具有内置蓝牙无线技术。因此，您可以将手机无线连接至其它蓝牙设备上，例如免提、电脑、PDA 或其它电话。

您可以通过无线蓝牙免提电话进行通话，或者通过手机无线上网。您也可以交换名片、日历项目和图片。

#### 备注

- ▶ 建议将手机和与之联系的蓝牙设备保持在 10 米的范围内。如果您的手机与蓝牙设备间不存在固体对象，则连接质量会提高。

#### 1. 使用入门

· 菜单 → 连接 → 蓝牙 → 打开/关闭

要使用蓝牙功能，您必须先将蓝牙设置为打开。

#### 2. 配置蓝牙设置

· 菜单 → 连接 → 蓝牙 → 设置

- **我的设备可见性：**将 [我的设备可见性] 设置为 [可见]，以便其它设备在搜索蓝牙设备时可以检测到您的手机。如果您选择 [隐藏]，其它设备在搜索蓝牙设备时将无法检测到您的手机。

- **我的设备名称：**您可以对您的手机出现在其它设备上的名称进行命名或重命名。只有在 [我的设备可见性] 设置为 [可见] 时，您的手机名称才会显示在其它设备上。

- **支持的服务：**您可以查看设备列表，如启用了蓝牙的手机所支持的耳机和免提套件。

- **我的地址：**您可以查看蓝牙地址。

#### 备注

- ▶ 用户使用手机中的蓝牙设备时，不能保证手机安全。因此，建议在进行配置或设备配对后，将蓝牙可见性设为隐藏。对于没有进行设备配对而通过蓝牙传入的文件，您可以在检查发件人详细信息后选择接收或拒绝连接。

#### 3. 搜索并配对新设备

##### <正在搜索新设备>

如下菜单所示，您可以搜索新设备。

· 菜单 → 连接 → 蓝牙 → 搜索新设备

##### <正在配对设备>

1. 要搜索蓝牙设备以配对，请添加新设备。
2. 此时屏幕上将显示：正在搜索设备。将找到 10 米以内的蓝牙设备。
3. 如果找到蓝牙设备，这些设备将列在屏幕上。如果没有找到任何蓝牙设备，系统将询问您是否要重新搜索。

## 连接

### 4. 配对过程

- 按 **[OK]**。此时屏幕上将出现一个窗口，要求输入您的密码。
- 在创建完密码（1 - 16 位）之后，对方设备的用户必须输入此密码才能配对。对方设备的用户必须提前知道密码，以便通过认证。

#### <正在删除设备>

1. 从配对设备屏幕中选择要删除的设备。
2. 您可以通过按“删除”键或者选择“选项”>“删除”来删除设备。要删除所有配对设备，请选择“选项”>“全部删除”。

#### <正在使用蓝牙传输数据>

1. 要将您手机上的数据传输到另一个蓝牙设备上，请先选择用于保存目标数据的应用程序。例如，要将“我的文件”中的数据发送至另一个设备，请选择“菜单”→“我的文档”→“我的图像”/“我的声音”/“我的视频”/“其它”/“外部存储器”→选择要传输的数据→“发送”→“蓝牙”。

### 2. 传输数据

- 1) 显示找到的配对设备。如果列表中没有所需设备，请选择 **[刷新]**。
- 2) 选择要通过屏幕上的设备向其传输数据的设备，然后按 **[OK]**。
- 3) 对于 **[要求连接]**，如果对方选择 **[是]**，数据将被传输出去。

## 服务器同步

菜单 0.2

### 备注

- ▶ 此服务并非适用于所有国家/地区。有关详细信息，请与您的服务提供商联系。

如果您的网络运营商支持同步服务，则此服务功能可以通过无线网络使手机中的数据与服务器的数据（如电话本、日历、任务和备忘录）保持同步。

## USB 连接模式

菜单 0.3

您可以激活手机的 USB 连接模式并用于多个方面。

如果您使用诸如 USB 内存卡的存储器功能，请在此菜单中选择“存储器”。存储器仅可用于外部存储卡。

如果您使用诸如 PC 套件应用程序的数据服务，请在此菜单中选择“数据服务”。

# 设置 [菜单 #]

## 情景模式

菜单 #.1

您可以根据情景模式选择来电铃声或振动、配置铃声的声音和音量、按键音以及音效。

## 手机

菜单 #.2

### 自动键盘锁 (菜单 #.2.1)

如果激活此功能，在滑盖闭合后，手机将在预定义的延迟时间之后自动锁定。

### 语言 (菜单 #.2.2)

选择显示语言。您可以选择“自动”语言选项，将显示语言更改为 USIM 卡支持的语言。

### 省电模式 (菜单 #.2.3)

当您不使用手机时，可以激活此菜单以省电。

### 手机信息 (菜单 #.2.4)

此功能将显示手机的 USIM 卡电话号码、型号和软件版本。

## 屏幕

菜单 #.3

此菜单允许您自定义屏幕和菜单的整个图形界面的显示选项。

### 屏幕主题 (菜单 #.3.1)

您可以设置要在主屏上显示的屏幕主题。

### 主屏

- ▶ **墙纸:** 您可以设置要在主屏上显示的图像。
- ▶ **使用主屏:** 您可以选择使用主屏幕上的“主屏聚合器”菜单。
- ▶ **显示项目:** 您可以选择要在屏幕上显示的项目：时钟、时钟和按键指南、双时钟、按键指南、隐藏、日历及时钟，或日历
- ▶ **时钟类型:** 您可以选择时钟类型。

### 开机

您可以选择要在开机时显示的图像。

### 关机

您可以选择要在关机时显示的图像。

## 设置

### 菜单样式 (菜单 #.3.2)

您可以选择所需的菜单样式：网格样式以及逐个样式。

### 字体 (菜单 #.3.3)

您可以使用  $\langle \square / \square \rangle$  设置拨号字体以及拨号字体颜色。

### 背景灯 (菜单 #.3.4)

您可以分别设置主屏和键盘的背景灯持续时间及亮度。

### 手机方案 (菜单 #.3.5)

您可以设置手机方案：黑色或白色。

### 问候语信息 (菜单 #.3.6)

您可以插入在开机时显示的信息。

## 日期和时间 菜单 #.4

尽管手机注册到网络时会自动配置当前时间，用户可以使用此菜单直接配置时间和日期。用户配置的时间仅在手机开机时有效。

### 时间

1. 从“时间和日期”列表中选择“时间”项，然后按  $\langle \square \rangle$ 。
2. 使用导航键移到所需字段：“小时”、“分钟”或“AM”/“PM”字段。（当您选择“12小时”作为“时间格式”时）
3. 使用数字键输入小时和分钟。

4. 使用  $\langle \square / \square \rangle$  选择时间格式。
5. 向下滚动，选择小时指示格式，即，关闭、布谷鸟报时或敲钟报时。
6. 按中软键  $\langle \square \rangle$  使用指定值设置时间。

### 日期

1. 从“日期和时间”列表中选择“日期”项，然后按  $\langle \square \rangle$ 。
2. 使用  $\langle \square / \square \rangle$  选择日期格式。
3. 使用数字键输入日、月和年。
4. 按中软键  $\langle \square \rangle$  使用指定值设置日期。

### 自动更新日期/时间

当“自动更新”设为“开”时，手机会根据当前时区自动更新时间和日期。如果选择了“先确认”，那么在自动更新之前会先进行确认。

### 夏令时

选择是否激活夏令时功能。您可以设置选定的当地城市的夏令时时差：1小时或2小时。

## 网络

菜单 #.5

### 选择网络 (菜单 #.5.1)

选择自动还是手动。

- ▶ **自动:** 此功能可自动搜索网络并向网络注册手机。为了得到最佳的服务和质量, 建议选择此设置。
- ▶ **手动:** 所有当前 2G (GSM) 和 3G (UMTS) 网络将会显示在屏幕上, 您可以从中选择一个注册。如果网络注册失败, 则屏幕上会重新列出网络列表, 您可以选择另外一个进行注册。

#### 备注

- ▶ 在手动模式下, 如果手机失去网络, 待机屏幕上会弹出一条信息, 其中显示所有可供选择的网络。

### 网络模式 (菜单 #.5.2)

您可以在“选择网络”菜单中设置网络类型, 以搜索何时搜索网络。

### 首选列表 (菜单 #.5.3)

如果自动搜索网络, 您可以添加要连接的首选网络。以下选项可用:

## Internet 网络设定 菜单 #.6

此菜单显示 Internet 网络设定。您可以使用“选项”菜单新建、删除或编辑网络设定。但是, 根据国家/地区不同, 可能无法删除或编辑默认配置。

## 接入点

菜单 #.7

此菜单将显示接入点列表。您可以使用“选项”菜单新建、删除或编辑网络设定。但是根据国家/地区不同, 您可能无法删除或编辑默认配置。

## 设置

### 分组数据连接

菜单 #.8

如果选择“可用时”菜单，则在开机时，手机会自动注册到 GPRS 网络。如果选择“需要时”，则会在连接 WAP 或应用程序服务时建立起 GPRS 连接，并在断开 WAP 或应用程序连接后结束。

### 安全性

菜单 #.9

#### PIN 码请求

如果此选项设为“开”，那么在您每次开机时，会要求您输入 PIN 码。

#### 备注

- ▶ 要返回上一步骤，请在 PIN 码输入窗口中按右软键。
- ▶ 如果 3 次输入的 PIN 码均不正确也会导致 PIN 码失效。在这种情况下，您必须输入 PUK (PIN 解锁密码) 码，然后重新配置 PIN 码。
- ▶ 您可输入 PUK 码的最多次数为 10。(备注：如果您 10 次输入的 PUK 码均不正确，USIM 卡将锁定，必须更换。)
- ▶ 如果根据运营商设置无法禁用 PIN 码请求，那么您将无法选择此菜单项。

### 手机锁

您可以锁定手机。本手机提供了以下 4 个锁定功能。

**开机时：**开机时锁定手机。

**如果更换 USIM 卡：**如果更换了手机的 USIM 卡，将锁定手机。

**立即：**立即锁定手机。

**无：**停用锁定功能。您需要输入安全密码以确认所作的选择。

▶ 要解锁手机，您需要输入安全密码。

### 更改密码

您可以更改 PIN 码、PIN2 码和手机密码。

#### PIN 码

PIN 是 Personal Identification Number (个人识别码) 的缩写，用于限制未认证用户的使用权限。

## PIN2 码

PIN2 是 Personal Identification Number 2 (个人识别码 2) 的缩写, 用于限制未认证用户的使用权限, 与 PIN 类似。PIN2 码的更改过程与 PIN 码的更改过程相同。如果 3 次输入的 PIN2 码均不正确将会导致 PIN2 码失效。在这种情况下, 您必须输入 PUK2 码才能重新使用 PIN2 码。您可输入 PUK2 码的最多次数为 10, 和 PUK1 码一样。如果 10 次输入的 PUK2 码均不正确也会导致 PIN2 码失效。

## 安全码

安全码用于更改手机密码。尝试输入安全码的最多次数限制与 PIN 码和 PIN2 码不同。

## 内存管理器

菜单 #.0

### 手机公用内存 (菜单 #.0.1)

此功能显示手机中用户内存的状态。由于此功能会扫描整个文件系统以进行统计, 因此可能要几秒钟的时间。

### 手机剩余内存 (菜单 #.0.2)

此功能显示用户预留内存的状态。常见内容指电话本、日历、任务、备忘录、闹钟、通话记录和书签。它可以通过图示形式清楚地说明每个项目实际使用内存占总内存的百分比。

## USIM 卡内存 (菜单 #.0.3)

此功能显示 USIM 卡用户内存的状态。

## 外部存储器 (菜单 #.0.4)

此功能显示外部存储卡用户内存的状态。此功能将显示已用内存和可用内存的统计数据。

## 主存储器设置 (菜单 #.0.5)

您可以选择保存下载文件的存储位置: 手机内存或外部存储器。

## 流媒体设置

菜单 #.\*

您可以设置不同的网络设定以播放流媒体内容。

## 重设置

菜单 #.#

选择此选项将手机重新设置为默认配置。您必须输入安全码。

# 配件

有多种配件适用于您的手机。您可以根据个人的通信要求选择这些配件。

## 旅行适配器

此充电器允许您在离开家或公司的时候可以对电池进行充电。



## 免提耳机



## 标准电池



### 备注

- ▶ 务必使用原装 LG 配件。
- ▶ 否则可能导致保修失效。
- ▶ 不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。





English

## ■ KF310 ■ USER GUIDE

This document is the user guide for the LG KF310 3G Video Mobile Phone. All rights for this document are reserved by LG Electronics. Copying, modifying and distributing this document without the consent of LG Electronics are prohibited.



# Table of Contents

<b>For Your Safety</b>	<b>6</b>	<b>Games &amp; Apps</b>	<b>28</b>
<b>Guidelines for Safe and Efficient Use</b>	<b>7</b>	My games & apps Settings	
<b>KF310 Features</b>	<b>12</b>	<b>Calling</b>	<b>29</b>
Parts of the phone		Make video call	
<b>Getting Started</b>	<b>16</b>	Call logs	
Installing the USIM card and battery		All calls	
Charging the Battery	18	Dialled calls	
Disconnecting the charger	19	Received calls	
How to use a microSD memory card		Missed calls	
Memory card formatting	20	Call durations	
Turning Handset ON/OFF		Data volume	
<b>General Functions</b>	<b>22</b>	Call costs	
Making and answering calls		Call divert	30
Answering a call	23	Call barring	
Entering text	24	Fixed dial numbers	31
<b>Overview of Menu Functions</b>	<b>26</b>	Call waiting	
		Common setting	
		Video call setting	32
		<b>Organiser</b>	<b>33</b>
		Calendar	
		To do	
		Memo	

---

**Secret memo** 34

**Date finder**

**Settings**

Calendar

Send all calendar & to do via Bluetooth

Backup calendar & To do

Restore calendar & To do

Memory info.

Clear all

---

**Multimedia** 35

**Camera**

---

**Video camera** 36

---

**Music** 38

Recently played

All tracks

Artists

Albums

Genres

Playlists

Shuffle tracks

---

**Voice recorder** 39

---

**Messaging** 40

**Create new message**

Message

---

Email 41

---

**Inbox** 42

**Mailbox**

---

**Drafts** 43

**Outbox**

**Sent items**

---

**My folders** 44

**Templates**

Text templates

Multimedia templates

**Emoticons**

**Settings**

Text message

---

Multimedia message 45

---

Email 46

---

Videomail 47

Voicemail

Service message

Info. service

## Table of Contents

<b>My stuff</b>	<b>48</b>	Move	54
My images		Send all contacts via Bluetooth	
My sounds		Backup contacts	
My videos	<b>49</b>	Restore contacts	
My games & apps	<b>50</b>	Clear contacts	
Others		Memory info.	
My memory card			
<b>Yahoo</b>	<b>51</b>	<b>Tools</b>	<b>55</b>
		Quick menu	
		Alarms	
		Calculator	
<b>Contacts</b>	<b>52</b>	Stopwatch	56
Add new		Converter	
Search		World time	
Speed dials		STK(USIM service)	
Groups			
Service dial numbers	<b>53</b>	<b>Browser</b>	<b>57</b>
Own number		Home	
My business card		Enter address	
Settings		Bookmarks	
Contact list settings		RSS reader	
Synchronise contact		Saved pages	
Copy		History	
		Settings	

Profiles	57	Menu style	63
Appearance settings		Font	
Cache	58	Backlight	
Cookies		Handset theme	
Security		Greeting message	
Reset settings		<b>Date &amp; Time</b>	
<b>Connectivity</b>	<b>59</b>	<b>Network</b>	<b>64</b>
<b>Bluetooth</b>		Select Network	
Server sync	61	Network mode	
USB connection mode		Preferred lists	
<b>Settings</b>	<b>62</b>	<b>Internet profiles</b>	
Profiles		<b>Access points</b>	
Phone		Packet Data Conn.	65
Auto key lock		<b>Security</b>	
Language		<b>Memory manager</b>	<b>67</b>
Power save		Handset common memory	
Handset info.		Handset reserved memory	
<b>Screen</b>		USIM memory	
Screen theme		External memory	
		Primary storage setting	
		<b>streaming settings</b>	
		<b>Reset settings</b>	
		<b>Accessories</b>	<b>68</b>
		<b>Technical data</b>	<b>69</b>

# For Your Safety

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

## WARNING!

- Mobile Phones must be switched off at all times in aircrafts.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.

## CAUTION!

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.

# Guidelines for Safe and Efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KF310 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- ▶ The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.562 W/Kg (10g), and when worn on the body is 1.31 W/Kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### WARNING!

- Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

## Guidelines for Safe and Efficient Use

- ▶ Keep away from electrical appliances such as TVs, radios, and personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- ▶ Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- ▶ Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- ▶ Do not charge the phone when it is on soft furnishings.
- ▶ The phone should be charged in a well ventilated area.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

▶ When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- ▶ If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Guidelines for Safe and Efficient Use

### Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point.
- ▶ Do not use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn your mobile phone off before boarding any aircraft.
- ▶ Do not use it on the ground without permission from the crew.

### Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

### Battery information and care


- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.


- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- ▶ There is risk of explosion if the battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- ▶ If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- ▶ Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

# KF310 Features

## Parts of the phone

### Open view

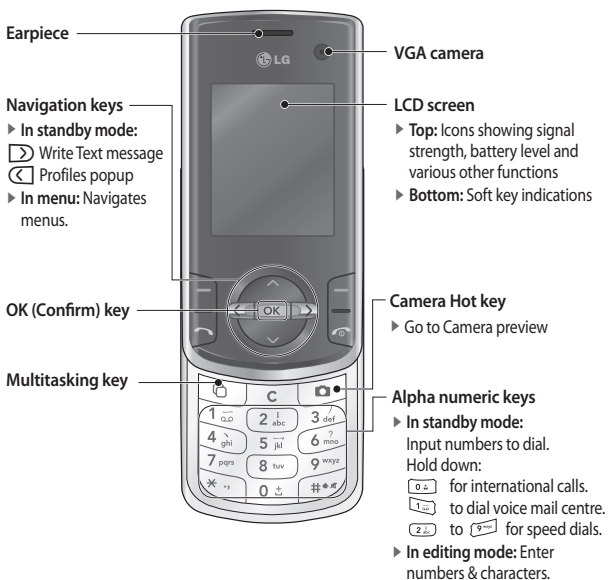

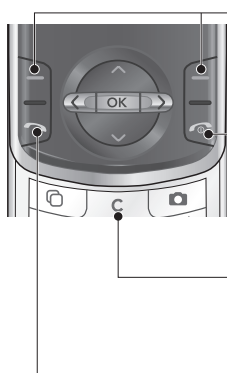

**Left soft key/ Right soft key**

Performs the function indicated at the bottom of the display.

**Call End key**

- ▶ You can end a call.
- ▶ You can go back to standby mode by pressing this key when activating the menu.

**Clear key**


You can delete a letter.

**Send key**


- ▶ Dials a phone number and answers a call.
- ▶ In standby mode: Shows a history of calls made, received, and missed.

## KF310 Features


Right side view

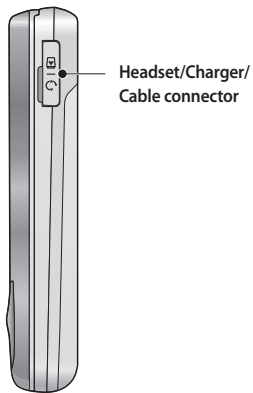

Left side view

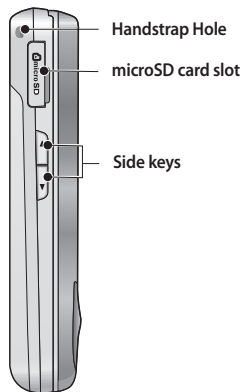

## Rear view

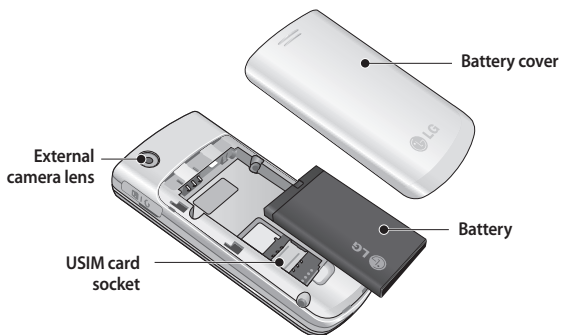


# Getting Started

## Installing the USIM card and battery

### 1. Installing the USIM card.


Your USIM card contains your phone number, service details and contacts and must be inserted into your handset. If your USIM card is removed then your handset becomes unusable (except for emergency calls) until a valid one is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your USIM card. Slide the USIM card into the USIM card holder. Make sure that the USIM card is properly inserted and the gold contact area on the card is facing downwards. To remove the USIM card, press down lightly and pull it in the reverse direction.

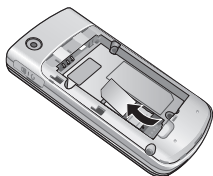

To remove the USIM card

### Note


- ▶ The metal contact of the USIM card can easily be damaged by scratches. Pay special attention to the USIM card while handling. Follow the instructions supplied with the USIM card.
- ▶ After removing the battery, insert USIM card.

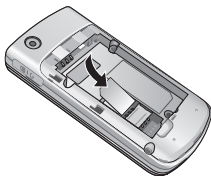

To insert the USIM card

## 2. Installing the battery.


Slide the battery upwards until it snaps back into place.

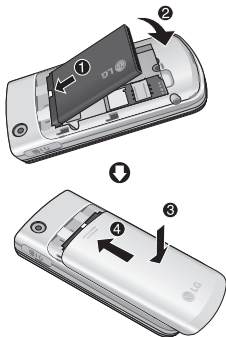

## 3. To remove the battery.

Turn the power off. (If the power is left on, there is a chance you could lose the stored telephone numbers and messages.)

Press and hold down the battery release button and slide the battery down.

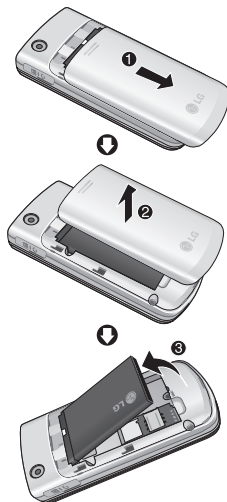

## Getting Started

### Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.



1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the right side of the phone until it clicks into place.
2. Connect the other end of the travel adapter to the mains socket.



#### Note

- Only use the charger included in the box.

3. The moving bars on the battery icon will stop after charging is complete.
4. Ensure the battery is fully charged before using the phone for the first time.

#### CAUTION!


- Do not force the connector as this may damage the phone and/or the travel adapter.
- If you use the battery pack charger when abroad, use an attachment plug adaptor for the proper configuration.
- Do not remove your battery or the USIM card while charging.

#### WARNING!

- *Unplug the power cord and charger during lightning storms to avoid electric shock or fire.*
- *Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery. This may cause a fire.*

## Disconnecting the charger

Disconnect the travel adapter from the phone as shown in the diagram below.

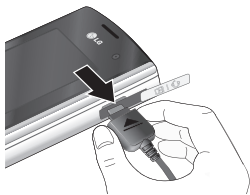

1. Turn the phone off. Inserting or removing the microSD when the phone is on may damage the files stored in the memory card.
2. Lift the plastic cover which protects the microSD slot.




## How to use a microSD memory card



<MicroSD memory card>  
<How to insert a microSD memory card>

3. Insert the memory card into the slot. The gold contacts must be kept on the back of the microSD. Don't push the microSD too much. If it doesn't go into the slot easily, you may be trying to insert it in the wrong way or there could be a foreign object in the slot.
4. Once inserted, push the memory card until you hear a Click, meaning that the microSD has been correctly engaged.

## Getting Started

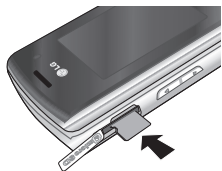


5. Close the plastic slot protection.
6. To remove the memory card, turn the phone off, open the slot protection and push the microSD to unlock it. Carefully extract the memory card.

### Attention:

- ▶ Avoid using the Flash Memory Card when the battery is low.
- ▶ When writing to the card, wait for the operation to complete before removing the card.
- ▶ The card is designed to fit easily into the system one way only.
- ▶ Do not bend the card or force it into the slot.
- ▶ Do not insert any memory cards other than those made by microSD.
- ▶ If the microSD has been formatted using FAT32, format the microSD using FAT16 again.

For more information on the microSD, please refer to the memory card instruction manual.


## Memory card formatting

Before you start to use the memory card you have to format it. After you insert the memory card, select **Menu** → **Settings** → **Memory manager** → **External memory**, then press  the left soft key.

This operation should only be done when you insert the memory card for the first time. During formatting various folders will be created for different data types.


## Turning Handset ON/OFF

### Turning your handset on


Ensure that your USIM card is in your handset and the battery is charged. Press and hold  until the power comes on. Enter the USIM PIN code that was supplied with your USIM card if the **PIN code request** is set to **On**.

After a few seconds you will be registered on the network.

## Turning your handset off

Press and hold  until the power goes off. There may be a few seconds delay while the handset powers down. Do not turn the handset on again during this time.





## Emergency call function

The right soft key is represented by "Inactive/ Emergency call" on the screen. Press the right soft key or dial your emergency number using the number keys, and then press  to make an emergency call.





# General Functions

## Making and answering calls

### Making a voice call



1. Enter the number including the full area code.
  - ▶ To delete a digit press  key.
  - ▶ To delete all digits press and hold  key.
2. Press  to make the call.
3. Press  to finish the call, or slide.

### Making a call from the call logs

1. In standby mode, press  and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using  / .
3. Press  to call the number.


## Making a video call

You can make and receive video calls when both you and the other person have 3G coverage. To make/answer a video call, do the following.

1. Input the phone number using the keypad, or select the phone number from the calls made/received lists.
  - ▶ To correct mistakes, press  briefly to delete the last number, or press and hold  to delete all numbers.
2. If you do not want to use the speakerphone, ensure you have the headset plugged in.
3. To start the video function, press the left soft key [Options] and select **Make video call**.
  - ▶ You will be notified that you will need to close other applications to make the video call.




### Note

- ▶ The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.



4. Adjust the camera position if necessary.
5. Press  to finish the call, or closing the slide.

### Making a voice/video call from Contacts

It is easy to call anyone whose number you have stored in your Contacts.

1. Press  to access the contacts list.
2. Scroll to the contact to make a call.
3. Press  to make a voice call. Press the left soft key and select **Make video call** to make a video call.
4. Press  to finish the call.

### Making international calls




1. Press  for the international prefix. The '+' character prefixes the international access code.
2. Enter the country code, area code, and the phone number.
3. Press .

## Answering a call


When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Contacts) is displayed.

1. Open the slider to answer an incoming call.

#### Note

- ▶ To reject an incoming call, press  or the right soft key twice.
- ▶ If you set **Answer mode** as **Press send** key (Menu 2.0.4), you can answer the call by pressing  after opening the slider.
- ▶ If the answer mode is set to **Press any** key, any key will answer a call except for .


## General Functions

2. End the call by closing the slide or pressing .

### Note

- ▶ You can answer a call while using the Contacts or other menu features.
- ▶ You can mute the ringtone when a call comes in by pressing the right soft key.

### Shortcut to activate silent mode

You can activate the silent only mode by pressing and holding down  after opening the slide.

### Signal strength


You can check the strength of your signal by the signal indicator on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving close to a window may improve reception.

## Entering text

You can enter alphanumeric characters using the keypad.

For example, storing names in Contacts, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

### Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the LCD screen.
2. If T9 is on, you can change the mode to T9Abc, T9ABC, 123, T9abc by pressing . When T9 is off, the mode will be changed to Abc, ABC, 123, abc.

### Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the handset begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

## Using the ABC Mode

Use **[2..]** to **[9=]** to enter your text.

1. Press the key labelled with the required letter:
  - ▶ Once for the first letter.
  - ▶ Twice for the second letter.
  - ▶ And so on.

2. To insert a space, press **[0=]** once. To delete letters, press **[C]**.

Refer to the following table for more information on the characters available using the alphanumeric keys.

## Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a message (a telephone number, for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

## Using the symbol mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert** → **Symbols**. Use the navigation and numeric keys to select the desired symbol and press **[OK]**.

# Overview of Menu Functions

You can launch a menu by pressing **[OK]** in the idle screen. Move to the desired item and press **[OK]** to go into the sub menu.

From the main menu you can also go into a submenu by directly pressing the corresponding numeric key as follows. The main menu consists of the following top menus and sub menus.

## 1. Games & Apps

1.1 My games & apps

1.2 Settings

## 2. Calling

2.1 Make video call

2.2 Call logs

2.3 Call durations

2.4 Data volume

2.5 Call costs

2.6 Call divert

2.7 Call barring

2.8 Fixed dial Numbers

2.9 Call waiting

2.0 Common settings

2.\* Video call setting

## 3. Organiser

3.1 Calendar

3.2 To do

3.3 Memo

3.4 Secret memo

3.5 Date finder

3.6 Settings

## 4. Multimedia

4.1 Camera

4.2 Video camera

4.3 Music

4.4 Voice recorder

## 5. Messaging

5.1 Create new message

5.2 Inbox

5.3 Mailbox

5.4 Drafts

5.5 Outbox

5.6 Sent items

5.7 My folders

5.8 Templates

5.9 Emoticons

5.0 Settings

<b>6. My stuff</b>
6.1 My images
6.2 My sounds
6.3 My videos
6.4 My games & apps
6.5 Others
6.6 My memory card
<b>7. Yahoo</b>
7.1 Yahoo!Go
<b>8. Contacts</b>
8.1 Add new
8.2 Search
8.3 Speed dials
8.4 Groups
8.5 Service dial numbers
8.6 Own number
8.7 My business card
8.8 Settings

<b>9. Tools</b>
9.1 Quick menu
9.2 Alarms
9.3 Calculator
9.4 Stopwatch
9.5 Converter
9.6 World time
9.7 STK(USIM service)
<b>*. Browser</b>
*.1 Home
*.2 Enter address
*.3 Bookmarks
*.4 RSS reader
*.5 Saved pages
*.6 History
*.7 Settings

<b>0. Connectivity</b>
0.1 Bluetooth
0.2 Server sync
0.3 USB connection mode
<b>#. Settings</b>
#.1 Profiles
#.2 Phone
#.3. Screen
#.4 Date & Time
#.5 Network
#.6 Internet profiles
#.7 Access points
#.8 Packet data conn.
#.9 Security
#.0 Memory manager
#.* Streaming setting
#.# Reset settings

# Games & Apps [Menu 1]

## My games & apps Menu 1.1

You can easily download games and other applications in this menu. It may have two folders, no folders at all, or Games and Applications. The default folder can be dependent on the operator/country. Each folder has an embedded link for downloading games or applications. Please note that additional costs may be incurred when using online services.

## Settings Menu 1.2

- **profile:** You can see profile and add new profile.
- **Certificates list:** You can see the certification list for using java application

## Calling [Menu 2]

### Make video call Menu 2.1

You can make a video phone call in this menu. For details, refer to page 22 to 23.

### Call logs Menu 2.2

#### All calls (Menu 2.2.1)

Allows you to view the missed, received, and dialled call records. You can make a call, or send a message to the number you have selected from the records. You can also save the number in Contacts.

#### Dialled calls (Menu 2.2.2)

Allows you to view dialled call records, make a call, send a message, and save the number in Contacts.

#### Received calls (Menu 2.2.3)

Allows you to view received call records, make a call, send a message, and save the number in Contacts.

#### Missed calls (Menu 2.2.4)

Allows you to view missed call records, make a call, send a message, and save the number in Contacts.

### Call durations Menu 2.3

You can view call time by types. Press the left soft key [Options] to initialize call duration values. Initialization will require your Security code.

### Data volume Menu 2.4

Allows you to check the sent, received and all data volume transferred. Press the left soft key to initialize Data volume values. Initialisation will require your Security code.

### Call costs Menu 2.5

1. This function displays the call costs of the Last call and All calls.
2. To edit, press the centre key [Edit] and enter the PIN2 code.
3. You can select either Units or Currency in Set call cost. Depending on your settings, USIM and operator, the call cost is displayed during a call.
4. In the Set limit configuration, select On to configure the cost limit. When a cost limit is configured, and the call costs reach the limit, making a call will not be allowed.

# Calling

## Call divert

Menu 2.6

Call divert menus for voice and video calls are provided.

### 1. When no call divers exist

You can input the number to divert a call directly or search for it in phonebook. If you press [OK], the phone will send the request to your service provider after entering the number. While waiting for the result from the network, a Requesting message and animation appears.

### 2. When call divers are already set

View a list of the call divers already set up. While waiting for the result from the network, a Requesting message and animation appears.

### 3. Option menu

After activating All voice calls menu, select the Options menu at the bottom of the menus to display the Deactivate, Deactivate all, View status and clear list menus.

The View status menu shows the settings on the network. If you select this menu, Requesting message and animation appear. Then the network settings are displayed when the information is received from the network. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Clear list menu will delete all divert number list.

## Call barring

Menu 2.7

Call barring menus for Voice and Video calls are provided.

The menu consists of Voice calls, Video calls and Deactivate all. The Voice calls and Video calls menus have the following submenus.

The Call barring menu consists of All outgoing, Outgoing international, Outgoing international calls except home country, All incoming and Incoming when abroad submenus.

The All outgoing menu bars dialling all outgoing calls, the Outgoing international menu bars dialling outgoing international calls, and the Outgoing international calls except home country menu bars dialling outgoing international calls except for the Home PLMN country. All incoming rejects all incoming calls and the Incoming when abroad menu rejects incoming calls when roaming.

## Voice and Video calls

1. If you want to activate barring service, press ok and then input the barring password. The Phone will request the network to activate barring service and receive the result of the operation. After receive the result from the network, the result is displayed.

2. When the Options menu is selected, it activates the Outgoing calls menu. Select the Options menu from the soft menus on the lowest menu. Then Deactivate, Deactivate all, View status and Change password menus appear. The Deactivate menu deactivates the barring service after the user's Barring password is entered. The Deactivate all menu deactivates all barring services configured in the network after the user's Barring password has been entered.

The View status menu enables users to view the current network configuration. Selecting View status menu displays the Requesting message with animation and the result of the operation when the network answers. Change password menu enables users to change the current barring password.

#### **Deactivate all**

You can select to deactivate all or not.

## **Fixed dial numbers** Menu 2.8

### ▶ **Turn on/ Turn off**

- **On:** Select whether to activate FDN or not. PIN2 authentication is required.
- **Off:** Select whether to activate FDN or not. PIN2 authentication is required.

## **Call waiting** Menu 2.9

Activates waiting service. Selecting this item, displays Requesting message and animation. When the network answers, the result of the operation is displayed.

## **Common setting** Menu 2.0

### **Call reject**

You can set whether to reject incoming calls.

### **Send my number**

- ▶ **Set by network:** Configures with the default settings determined by the service provider.
- ▶ **On:** Configures to send my phone number when making an outgoing call.
- ▶ **Off:** Configures not to send my phone number when making an outgoing call.

## Calling

### Auto redial

Allows you to set the auto redial function when a call attempt has failed.


### Answer mode

Allows you to set the answering method. You can choose between **Press send key**, **Slide up** and **Press any key**.

### Minute minder

Determines whether to sound a 1 minute tone every 1 minute when you are on the phone.

### BT answer mode

- ▶ **Hands-free:** You can answer a call using the Bluetooth headset, when the Bluetooth is connected.
- ▶ **Handset:** If you press  on the handset to answer a call, you can talk on the handset. If you press the Bluetooth headset key to answer a call, you can talk using the Bluetooth headset. This is the initial answer mode selection. And while talking, you can switch from handset to headset or from headset to handset.

### Save new number

In this menu, you can save the phone number when ending a call if the phone number is not saved in a phonebook.

### Slide close setting

When the slide is down, you can set the call is ended or not.

### Select line (SIM dependent)

Depending on the support or not of 2 line services on your SIM card, you can select the line you wants.

### Video call setting Menu 2.\*

You can set the screen display when making /receiving a video call.

- ▶ **Use private image:** Determine whether to show the private image or not.
- ▶ **Select private image:** Select the still image to be displayed.
- ▶ **Mirror:** Select to activate the mirror effect or not.
  - **On:** Displays the image flipped side to side.
  - **Off:** Displays the image as it is.

# Organiser [Menu 3]


## Calendar


Menu 3.1



### Schedule inquiry and search


#### 1. Reference by Months



You can check out your schedule by months. when you select this menu, the cursor is on the current date.

The schedule saved for the date where the cursor is located is represented by a blue colored arrow on the top left corner of box. Pressing the shortcut key  moves to the previous year and pressing




 move to the next year and pressing

 moves to today. Pressing  or

 moves to the previous month, and

 or  moves to the next month.

You can move the date using  /

 /  / .

#### 2. Detailed reference

You can refer to a detailed schedule, that is the whole contents of the schedule configured by the user.

### Add new event

You can add an event. You can configure the start date, end date, start time, end time, contents, type of event, repetition, alarm of the schedule.

### Delete all schedules

You can delete all saved schedule contents using function.

### Set up and release holiday

You can set up or release user holidays. Press the left soft key [Options] and select Set holiday. The selected date will be displayed in red.

To release the holiday, press the left soft key [Options] and select Clear holiday.

### Schedule notification

If the user has configured the alarm setting, the specified alarm sound will ring. If the notification time is before the schedule start time, you can set up the alarm again.

## To do

Menu 3.2

You can view, edit and add tasks to do. Tasks are displayed in time order. Tasks that have been completed or not completed are displayed in different ways.

## Memo

Menu 3.3

Using the memo management function, you can view and manage saved memo contents, and add new memo.

# Organiser

## Secret memo

Menu 3.4

You can write the private memo to protect your privacy. You enter the security code to use this menu.

## Date finder

Menu 3.5

You can check how many days remain before an event occurs or how many days have passed since an event.

## Settings

Menu 3.6

### Calendar (Menu 3.6.1)

You can set the configurations to view the calendar.

- ▶ **Default view:** You can set the default value to view a calendar; Month view, Week view
- ▶ **Week start time:** 1AM, 2AM, 3AM, 4AM, 5AM, 6AM, 7AM, 8AM, 9AM, 10AM, 11AM, 12PM
- ▶ **Week starts on:** You can set the default day to start a week; Sunday, Monday

## Send all calendar & to do via Bluetooth (Menu 3.6.2)

You can send all the data in your calendar and/or to do list from your phone to other phones by using Bluetooth.

## Backup calendar & To do (Menu 3.6.3)

(Menu 3.6.3)

You can create the backup files of the calendar or to do list saved in the phone when you insert an external memory.

## Restore calendar & To do (Menu 3.6.4)

(Menu 3.6.4)

You can reset the backup files of calendar or tasks when you insert an external memory.

## Memory info. (Menu 3.6.5)

You can view the information of available memory regarding Calendar, Tasks, Memo and Secret memo.

## Clear all (Menu 3.6.6)

You can delete all data regarding Calendar, Tasks, Memo and Secret memo.






# Multimedia [Menu 4]


## Camera

### Menu 4.1


This application enables you to take a still picture. You can take a picture in the size you want, and use it for the address book photo, home screen and other more general purposes. Once taken, the picture can be sent by Message, Email or Bluetooth.

1. Press the left soft key to access **Options** and set the desired environment as follows.

- ▶ Move between the options menus with  / .
- ▶ Select the desired value with  /  and confirm the selection with .

Menu	Description
Go to	The Pictures folder is launched and displays existing pictures as thumbnails. You can view pictures by pressing  . You can also send the selected picture to another party via Message, Email, or Bluetooth.
Size	1600x1200, 1280x960, 640x480, 320X240, Wallpaper, 176x144, Contacts
Quality	Super fine, Fine, Standard
Burst shot	One, Three, Six, Nine (Note: Available Burst shot depends on the size.)
Brightness	From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen.
White balance	You can adjust the tone of the background photo according to the weather. Auto, Daylight, Cloudy, Illuminate, Indoors
Night mode	You can take better pictures at night by selecting On.

## Multimedia

Menu	Description
Frame Shot	You can apply one of 10 frame effects when taking a picture. (available only in case of Wallpaper size)
Timer	You can delay the camera shutter time. None, 3 secs, 5 secs, 10 secs.  is shown when the timer is activated.
Effect	None, Black & White, Negative, Sepia
Sound	Select the desired shutter sound.
Memory	Select the desired memory in use, either in use Handset or External.
Mirror	You can activate the mirror effect by selecting On.
Swap cam	You can switch the camera to activate either the Internal or the External camera.
Preview screen	Select the desired preview method, either Full image or Full screen.

2. After finishing all the settings, press the right soft key [Close].
3. Focus the camera on what you want to take and press **[OK]**.
4. Press **[OK]** to save the picture. It is saved in the My images folder of My Stuff



### Note




- ▶ Press the right soft key [Back] to go back to the preview mode.


## Video camera Menu 4.2

This application enables you to record a video clip. You can play and watch a saved video file in this menu. Once recorded, a video clip can be sent by Message, Email or Bluetooth.

1. Press the left soft key to access Options and set the desired environment as follows.

▶ Move between the options menus with  / .

▶ Select the desired value with  /  and confirm the selection with .

Menu	Description
Go to	The Videos folder is launched and displays existing videos as thumbnails. You can view videos by pressing  . You can also send the selected video to another party via Message, Email or Bluetooth.
Size	176x144, 128x96
Quality	Super fine, Fine, Standard
Brightness	From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen.
White balance	You can adjust the tone of the background video according to the weather. Auto, Daylight, Cloudy, Illuminate, Indoors

Menu	Description
Night mode	You can take better shots at night by selecting On.
Effect	None, Black & White, Negative, Sepia
Duration	Select the desired recording time. MMS, 30 sec., 1 mins, 2 mins, 5 mins, 60 mins.
Memory	Select the desired memory, either Handset or External.
Mirror	You can activate the mirror effect by selecting On.
Voice	Decide whether to record the sound or not.
Swap cam	You can switch the camera to activate either the Internal or the External.

## Multimedia

2. After finishing all the settings, press the right soft key [Close].
3. Focus the camera on what to record and press **[OK]** to start recording. And press **[OK]** to stop recording.
  - ▶ You can pause the recording by pressing the left soft key [Pause].
4. Press **[OK]** to save the video clip. It is saved in the My videos of My stuff.

### Note

- ▶ Press the right soft key [Back] to go back to the preview mode without saving the video clip.

## Music

### Menu 4.3

#### Recently played (Menu 4.3.1)

You can replay the music which you recently listened to in "My music".

#### All tracks (Menu 4.3.2)

You can view all the music files stored in the phone/external memory.

#### Artists (Menu 4.3.3)

You can view and play music sorted by Artists.

#### Albums (Menu 4.3.4)

You can view and play music sorted by Albums.

#### Genres (Menu 4.3.5)

You can view and play music sorted by Genres.

#### Playlists (Menu 4.3.6)













You can create your own playlists by choosing tracks from the All tracks menu list.

#### Shuffle tracks (Menu 4.3.7)

If you want to play the music continuously and randomly, select this option.

## Voice recorder

### Menu 4.4

1. Press the left soft key [Option] to display the option pop up menu before recording.
2. Move to the desired menu item using / and press .
- ▶ **Duration:** You can set the recording duration to MMS msg. size, 30 secs., 1 min, or No limit.
- ▶ **Quality:** You can select a recording quality from Super fine, Fine, and Normal.
- ▶ **Memory in use:** Choose whether to save your voice recordings to the Handset memory or to the External memory.
- ▶ **Go to my sounds:** Opens the Voice recordings folder in Sounds.
3. Pressing  starts recording. When a recording is started, the recording time appears on the LCD. To cancel the recording, press the Back.
4. When you finish the recording, press  to exit. The recorded file is automatically saved in the My sound in My stuff. If you press  again, you can start recording new voice.
5. Press the left soft key to select the various options after the voice recording.
6. Select the desired menu using / and press .
- ▶ **Play:** You can play the voice.
- ▶ **Send:** To send the recorded file choose one from Message, Email and Bluetooth using / and press .
- ▶ **File:** You can change the name of a file and view the file information.
- ▶ **Delete:** Select this menu to delete a recorded file.
- ▶ **Go to my sounds:** Opens the Voice recordings folder in My Files.
7. Press the right soft key to close the sub-menu popup window.

# Messaging [Menu 5]

## Create new message

### Menu 5.1

#### Message (Menu 5.1.1)

You can write and edit a message containing a combination of text, image, video and audio.

1. Enter your message in the Message field.

#### Option menus in Message field

▶ **Insert:** You can perform the following actions:

1. **Image:** You can insert an image. (Existing image/Take picture)
2. **Video:** You can insert a video clip. (One video clip per slide)
3. **Sound:** You can insert a sound file. (One sound per slide)
4. **Symbols:** You can insert symbols. After entering the corresponding number keys, press **[OK]**.
5. **Template:** You can insert a text template saved on the phone. After selecting a template, press **[OK]**. The selected template is inserted into the Message window.
6. **Emoticon:** You can insert an emoticon on writing a message.

7. **Name & Number:** After searching the name and the number in phonebook, you can insert the entry.

8. **New slide:** Select this to add a new slide.

9. **Subject:** Select this to insert a subject.

0. **More:** Select this to add a Business card, Schedule, Memo, To do, and My business card.

▶ **Save to drafts:** Select this to save the message to drafts.

▶ **Input method:** Select the desired dictionary mode.

▶ **Writing language:** You can select the language for writing a message.

▶ **Add to dictionary:** You can add a word to the dictionary.

2. Press the right soft key [Back] to exit the menu or go to previous menu after setting submenus.

3. Press the center key [Send] to insert recipients address. After filling at least one recipient fields, press the confirmation key [Send] to send the message. The message will automatically be saved in the Sent Items folder. If the message has not been sent, it will remain in the Outbox with a failed status.

## Email (Menu 5.1.2)

To send/receive an Email, you should set up the Email account.

1. Enter the Email addresses of the recipients in the To, Cc, Bcc fields. You can search the Contacts by pressing **[OK]**.

### Note

- ▶ Enter the reference Email address to forward the Email in Cc(Carbon copy) field.
- ▶ Enter a hidden reference Email address to forward the Email without forwarding information in Bcc(Blind Carbon Copy) field.
- ▶ Only valid Email addresses are allowed for the recipient (To), reference address (Cc) and hidden reference address (BCC) fields. When an Email address has been specified, another field where you can specify another address appears. You can specify up to 20 recipients for the To and Cc address fields and 10 recipients for the BCC address field.

2. Move the cursor to the Subject field and key in the subject.
3. You can enter the message contents by moving the cursor to the Message field.

4. Use the following functions by using the left soft key [Options].

- ▶ **Insert:** Select this menu to insert special characters, templates, and contacts. It is also possible to attach multimedia files (pictures, videos and sounds).
  - ▶ **Search contacts:** Select this menu to insert Email addresses saved in Contacts. (Only shown in Option menu when cursor is located in To/Cc/Bcc fields.)
  - ▶ **Recently used:** You can use the latest Email address you sent.
  - ▶ **Save to drafts:** Select this menu to save the message in Drafts.
  - ▶ **View attachment:** Shows the attached files. (This item is only available when some files have been attached.)
  - ▶ **Remove:** Deletes the attachment file. (This item is only available when the files are already attached.)
  - ▶ **Input method:** Select the desired dictionary mode.
  - ▶ **Add to dictionary:** You can add a new word to the dictionary.
  - ▶ **Writing language:** You can change the writing language.
  - ▶ **Set mail priority:** You can configure the priority of the Email you wish to send.
5. When you have finished writing an Email, press **[OK]** to send the Email.

# Messaging

## Inbox

### Menu 5.2

1. You can view received messages. Select a message and then press **OK** to view the message.
2. You can view the previous or next message by using **◀**/**▶**.
3. To view a multimedia message (Notification), select Retrieve in the message notification view screen. The file is then transmitted, and you can view the file when the transmission is complete.

#### Note

Not supported for multimedia message (Notification) and WAP push messages.

- ▶ **Forward:** Forwards the selected Email message to others.
- ▶ **Retrieve (POP3 only):** Retrieves new Email messages.
- ▶ **Copy to (IMAP only):** Copies the selected email.
- ▶ **Search:** Searches for the Email you want to find.
- ▶ **Delete:** Deletes the Email.
- ▶ **Delete from server (POP3 only):** Deletes the message or Email from server.
- ▶ **Message synchronisation (IMAP only):** Synchronises Email to retrieve Email server.
- ▶ **Create new message:** Creates a Message, Email or Voice message.
- ▶ **Mark/Unmark:** Use mark/unmark option for multiple deletion.
- ▶ **Set as read/unread:** You can set the selected Email to read or unread.
- ▶ **Sort by:** You can sort Email according to the conditions.
- ▶ **Expunge (IMAP only):** Removes the selected Email data.
- ▶ **Message info.:** Brief information on the message including size, type, date, time and filenames.

## Mailbox

### Menu 5.3

1. Select an Email account and then press **OK** to view the received Email list.
2. In Email list, you can use the following functions by using the left soft key [Options].
  - ▶ **Reply:** Creates a reply to the selected Email.

## Drafts

### Menu 5.4

You can view saved messages. Select a message and then press **OK** to edit the message.

You can use the following functions by using the left soft key [Options].

- ▶ **Send:** Sends the selected message.
- ▶ **Call:** You can make a voice call or a video call.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Message info.:** You can check the message type, date and time.

## Outbox

### Menu 5.5

The Outbox is a temporary storage place for messages waiting to be sent. Failed messages are also placed in Outbox. For example, Emails will be placed in Outbox if the Email account is not correctly configured.

1. Select a message.
2. You can use the following functions by using the left soft key [Options].

### [For sending / waiting messages]

- ▶ **Cancel sending:** You can stop sending/ waiting status.
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Message info.:** Message information: You can check the message type, date, time, size and where it's saved.

### [For a failed message]

- ▶ **Resend:** Resends the selected message.
- ▶ **Save to drafts:** You can send the message to drafts.
- ▶ **Delete:** Deletes the current message.
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Message info.:** You can check the message type, date and time.

## Sent items

### Menu 5.6

Shows the messages you sent (Message/Email).

### [Options]

- ▶ **Forward:** Forwards the selected message.
- ▶ **Call:** You can make a voice call or a video call.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Create new message:** You can write a new message.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.

# Messaging

- ▶ **Copy&Move:** In case of SMS, you can copy the message into USIM or move the message into my folders/ USIM
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Message info.:** You can check the message type, date and time.

## My folders

Menu 5.7

You can move messages existed in Inbox or Sent messages into My folders, and then you can move those messages existed in My folders into the original message box.

## Templates

Menu 5.8

### Text templates (Menu 5.8.1)

You can add, edit, and delete frequently used useful phrases using the left soft key [Options].

#### Note

Depending on your service provider, useful phrases are saved as a default.

## Multimedia templates

(Menu 5.8.2)

You can create, edit and view available templates when creating multimedia messages. Five types of template (Birthday, Greeting, Holiday, Thanks, Sorry) are saved by default.

## Emoticons

Menu 5.9

You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message. If you press confirmation key, you can view the icon.

## Settings

Menu 5.0

### Text message (Menu 5.0.1)

You can configure text message related options.

1. **Text message centre:** Input the address of the Text message centre.
2. **Delivery report:** By enabling this option, you can verify whether your message has been sent successfully.
3. **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.

4. **Message types:** Text, Voice, Fax, X.400, Email  
Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.
5. **Character encoding: Auto/ Default alphabet /Unicode.**
  - ▶ **Auto:** Message with single byte character is normally encoded in Default alphabet(GSM7). Message with double-byte character is automatically encoded in unicode(UCS2).
  - ▶ **Default alphabet:** Message with even double byte character is encoded in single byte. Please note that double byte characters with accent may be converted into single byte character without accent.
  - ▶ **Unicode:** Message is encoded in double byte. Please note that you may be charged double.
6. **Send long text as:** Select a long text message as Multiple SMS or MMS.

## Multimedia message

(Menu 5.0.2)

You can configure Multimedia message related options.

1. **Retrieval mode:** You can set the retrieval mode using Home network and Roaming network respectively. If you select **Automatic**, you will receive multimedia messages automatically. If you select **Manual**, you will only receive a notification message in the inbox and then you can decide whether to download multimedia messages or not.
2. **Delivery report:** Allows you to determine whether to request a delivery confirmation mail to a recipient, and whether to allow sending a delivery confirmation mail to a sender.
- ▶ **Request report:** Determines whether to request a delivery confirmation mail for a Multimedia message.
- ▶ **Allow report:** Determines whether to allow sending a delivery confirmation mail for a delivery confirmation mail request.
3. **Read reply:** Allows you to determine whether to request a read confirmation mail to a recipient, and whether to allow sending a read confirmation mail to a sender.

## Messaging

- ▶ **Request reply:** Determines whether to request a read confirmation mail for a Multimedia message.
- ▶ **Allow reply:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
- 4. **Priority:** You can select the priority level of the messages (Low, Normal and High).
- 5. **Validity period:** Allows you to configure the term of validity for a message when transmitting a multimedia message. The message would be saved in the multimedia message server only for the configured term.
- 6. **Slide duration:** Allows you to configure the duration of each page when writing a message.
- 7. **Delivery time:** Configures the delivery time of message to the recipient. The Multimedia message centre will deliver the message after the delivery time.
- 8. **Multimedia msg. centre:** Allows you to configure network information such as the MMSC and the Internet profile, to send a multimedia message.

### Email (Menu 5.0.3)

You can configure settings for receiving and transmitting emails.

1. **Email accounts:** You can create or configure an Email account including the Email server and user ID.
2. **Allow reply Email:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
3. **Request reply Email:** Determines whether to request a read confirmation mail.
4. **Retrieve interval:** You can configure Retrieve interval to retrieve emails automatically from the incoming mail server. Please note that additional charges may be incurred using the Retrieve interval feature.
5. **Include message in Fwd. & Reply:** Determines whether to include the original message when you forward the message or reply to it.
6. **Include attachment:** Determines whether to include the attachment file when you forward the message.
7. **Auto retrieval in Roaming:** Retrieves Email account automatically when you move in roaming area.

8. **New email notification:** Receives the notification information when arriving new Email.
9. **Signature:** You can configure a text signature to be attached to the end of an Email. The configured signature text is automatically or manually attached to the end of the Email when it is sent.
0. **Priority:** You can select the priority level of Emails (Low, Normal and High).

#### **Videomail** (Menu 5.0.4)

You can send or receive the mail with a video file.

#### **Voice mail** (Menu 5.0.5)

You can send or receive the mail with a voice file.

#### **Service message** (Menu 5.0.6)

You can configure the option settings such as Push(SI/SL) messages.

- ▶ **Service message:** If you set On, all service messages will be received.
- ▶ **Service security:** You can manipulate the overall receipt options related to Push (SI/SL) messages.

#### **Info. service** (Menu 5.0.7)

- ▶ **Cell broadcast:** You can set the reception status.
- ▶ **Channels:** You can add or modify the channels.
- ▶ **Languages:** You can select the language you want by pressing [OK]. Then, the info service message will be shown in the language that you have selected.

# My stuff [Menu 6]

## My images

### Menu 6.1

The My images consists of embedded links for downloading pictures through the Internet and Default images.

Pictures taken using the camera are stored in the My images and you can create new folders to manage them.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Send:** You can send the selected image via Message, Email or Bluetooth.
- ▶ **Use as**
  - **Wallpaper:** You can set an image as the home screen theme.
  - **Contacts image:** Assign a picture to a contact. You will see this picture when they are calling or you are dialling them.
  - **Start-up:** You can set an image as the start up screen theme.
  - **Shut down:** You can set an image as the shut down image.
- ▶ **Move:** Enables the file to be moved to another folder.
- ▶ **Copy:** Copies the file to another folder.
- ▶ **Delete:** Deletes the selected image.
- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.

### ▶ File

- **Rename:** You can rename the image.
- **Edit:** Enables the image to be edited.

### Note

- ▶ The edit menu is not displayed in the default images folder.

- **File info.:** Shows information on the selected image file.
- ▶ **Create new folder:** You can create a new folder within the folder currently selected.
- ▶ **Slide show:** You can view the images as a slide show.
- ▶ **Sort by:** You can sort the files by date, file type or name.
- ▶ **List view/Grid view:** You can view the images as a List view or a Grid view.
- ▶ **Memory manager:** You can view the memory status (handset or external memory card).

## My sounds

### Menu 6.2

The Sounds folder consists of embedded links for downloading ringtones and music as well as folders containing the Default sounds and Voice recordings. Here you can manage, send or set sounds as ringtones.


When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Send:** You can send the selected sound via Message, Email or Bluetooth.
- ▶ **Use as**
  - **Voice ringtone:** You can set the sound file as a ringtone for incoming calls.
  - **Video ringtone:** You can set the sound file as a ringtone for incoming video calls.
  - **Message tone:** You can set the sound file as a new message alert.
  - **Start-up:** You can set the sound file as your start up tone.
  - **Shut down:** You can set the sound file as your shut down tone.
- ▶ **File info.:** Shows the information on the selected sound file.
- ▶ **Sort by:** You can sort the files by date, file type or name.
- ▶ **Memory manager:** You can view the memory status (handset or external memory card).

## My videos





### Menu 6.3

Here you can manage or send downloaded or captured videos clips.

If you press , you can activate the video file.

The following are available using the left soft key [Options] in the Video list.


- ▶ **Send:** You can send the selected video clip via Message, Email or Bluetooth.
- ▶ **Use as:** You can set the video file as voice ringtone or video ringtone.
- ▶ **Move:** Moves the file into handset memory or external memory.
- ▶ **Copy:** Copies the file in handset memory or external memory.
- ▶ **Delete:** Deletes the selected video.
- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
- ▶ **File**
  - **Rename:** You can rename the video.
  - **File info.:** Shows information on the selected video file.
- ▶ **Create new folder:** You can create a new folder.
- ▶ **Sort by:** You can sort files by name, date, or file type.
- ▶ **List view/Grid view:** You can view the images as a List view or Grid view.
- ▶ **Memory manager:** Displays the memory status (handset or external memory card).

You can view a video using the video player. Video files are displayed in the list as thumbnails. You can select a desired video by using the  /  /  / . Select a desired video and select Play to view the recorded video.

## My stuff

- ▶ **Landscape view:** You can view the video in wide view mode.

### Note

- ▶ You can also view the video in wide view mode by pressing .
- ▶ **Mute/Unmute:** Switch the sound on/off.
- ▶ **Capture:** You can save what is on the paused screen as an image file (only possible in Pause mode).
- ▶ **Repeat:** You can set the repeat option (Off/One/All).
- ▶ **File info:** You can check information on files being played.
- ▶ **Send:** You can send the video via Message, Email or Bluetooth.
- ▶ **Delete:** Deletes the selected video.
- ▶ **Use as:** You can set the video file as a voice ringtone or video ringtone. This menu will change and is dependent upon the type of file selected.

## My games & apps Menu 6.4

You can easily download games and other applications in this menu. It may have two folders, no folders at all, or Games and Applications. The default folder can be dependent on the operator/country. Each folder has an embedded link for downloading games or applications. Please note that additional cost may be incurred when using online services.

## Others Menu 6.5

Other files except pictures, sounds, videos, games & applications are stored in this folder.

## My memory card Menu 6.6

If you purchase an optional external microSD memory card, you can manage more content. Refer to the section how to use a microSD memory card on page 19 and 20 to learn how to insert and remove the memory card.

You can manage content as you do on your phone.

## Yahoo [Menu 7]

You can access Yahoo Mobile Internet Service.

- ▶ **oneSearch:** You can search for instant answers.
- ▶ **Email:** Shows your email account.
- ▶ **Weather:** Shows current conditions and forecasts for various locations worldwide. View the weather summary for your saved cities. Selecting Open, a detailed weather forecast for several cities.
- ▶ **Local & Maps:** Searching and browsing for local addresses, restaurants, bar, hotels and more.
- ▶ **Content readers:** Offer the variety of different contents: News, Finance, Entertainment and Sports
- ▶ **Calendar and Address Book:** You can access your appointments and all contact details on the go. Appointments and events from the calendar are also included in the Today view.

- ▶ **Flickr:** The Flickr widget allows you to share and maintain your photos on the go. When a user is signed up for Flickr you can see all photos of Flickr and your contacts.

### Note

- ▶ Some of countries are unable to access Yahoo! Go Service cause of network service.
- ▶ The services serviced by Yahoo depend on each service provider.

# Contacts [Menu 8]

## Add new

Menu 8.1

You can register a new contact address. You can enter the name, different phone numbers and Email addresses of a new contact. You can also assign the contact to groups, include an image or avatar, assign a specific ringtone and even enter a memo for the contact.

Other available fields include Home page URL, Home address, Company name, Job title and company address.

You can enter and manage contact addresses depending on the memory usage.

### Note

In Settings menu, the search operation can be performed based on the last name.

## Speed dials

Menu 8.3

Using this menu you can manage speed dials. Speed dials are configured between 2-9. You can register speed dials for a specific contact address up to 5 different numbers, and a contact address may have multiple speed dials.

## Search

Menu 8.2

Performs the contact address search function. The search operation is performed based on a first name as a default. The current search method and results found are displayed in the Search window. You can make a phone call or send a message to the selected phone number. A Contacts search can be performed based on the phone number or group information.

## Groups

Menu 8.4

Using this menu you can manage group information (both stored in the Handset and the USIM). You can add, edit and delete groups. When a ringtone for a number is not specified, a call from the number sounds the group ringtone assigned to the number for the group.

## Service dial numbers

Menu 8.5

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include emergency, directory enquiries and voice mail numbers. After selecting a service number, press to dial the service.

## Own number

Menu 8.6

Allows you to display your phone number in the USIM card. You can save own numbers being used in the USIM card.

## My business card

Menu 8.7

You can create your own business card by pressing the center key. After making a new business card, you can use it as a business card when sending the message.

## Settings

Menu 8.8

### Contact list settings (Menu 8.8.1)

- ▶ **View contacts from:** Select which contact information shall be displayed (from handset memory, from USIM card or both). All is the default setting.
- ▶ **Name display:** You can set the display order by name.
- ▶ **Show picture:** Select whether to display picture or not.

### Synchronise contact (Menu 8.8.2)

You can send the contents of phonebook to the server directly.

#### Note

This service is not available in all countries. Please contact your service provider for further information.

### Copy (Menu 8.8.3)

You can copy contacts from the phone memory to the USIM or from the USIM to the phone memory. You can copy all or selected entries at a time.

# Contacts

## **Move** (Menu 8.8.4)

You can move contacts from the phone memory to the USIM or from the USIM to the phone memory. You can move all or selected items at a time.

## **Send all contacts via Bluetooth** (Menu 8.8.5)

You can send all phonebook data in handset to other handset by using Bluetooth.

## **Backup contacts** (Menu 8.8.6)

You can save all the phonebook data in the handset to an external memory card by the form of vcard.

## **Restore contacts** (Menu 8.8.7)

You can restore all the phonebook data in an external memory card to the phone memory by the form of vcard.

## **Clear contacts** (Menu 8.8.8)

Clears all contact information. You can delete all contacts in the mobile phone memory as well as on the USIM card.

## **Memory info.** (Menu 8.8.9)

You can check the status of contacts memory in this menu.

## Tools [Menu 9]


### Quick menu

Menu 9.1

You can specify functions to save in the Quick menu. If you save the functions frequently used in the Quick menu, you can quickly start the functions simply by pressing key.


### Alarms

Menu 9.2

If you set the alarm, the  appears on the indicator bar. The specified alarm sounds at the scheduled time.

Press **OK** to stop the alarm, and the alarm is released. Press the left soft key [Snooze] and choose the snooze interval. The alarm sound stops and resumes after the selected Snooze duration. You can configure up to 5 alarms.

1. Select your desired alarm to configure in the alarm list. If there is no alarm, press the Center Key [Add] to add a new alarm.
2. **Set/Cancel alarm:** Set or cancel the alarm using the options for specifying whether the alarm is on or by choosing the alarm time.
3. **Input alarm time:** Input your desired alarm time by specifying Hour and Minute. Choose either 'AM' or 'PM' which is visible if 12 hour format is specified for the phone.

4. **Select repeat mode:** Select the desired repeat mode using  or select the desired one from the list by pressing Center Key [List].
5. **Select bell:** Select the bell to ring at the alarm time opening the list by pressing Center Key [Edit].
6. **Input memo:** Input alarm name.
7. **Snooze:** You can set the snooze duration for the alarm.

#### Note

- ▶ The alarm will go on even when the phone is switched off.

### Calculator

Menu 9.3

The calculator module allows you to perform basic arithmetic functions such as addition, subtraction, multiplication, and division as well as some scientific functions. (sin, cos, tan, log, ln, exp, sqrt, deg, rad)

## Tools

### **Stopwatch** Menu 9.4

This menu allows you to record the elapsed time of an event.

### **Converter** Menu 9.5

Using this menu, users can convert Currency, Surface, Length, Weight, Temperature, Volume and Velocity.

### **World time** Menu 9.6

The World time function provides time information on major cities worldwide.

### **STK(USIM service)** Menu 9.7

Depending on whether you have SAT support services or not (i.e. USIM Application Toolkit) on the USIM card, this menu (Menu 9.7) may be different.

If the USIM card supports SAT services, this menu will be the operator-specific service name stored on the USIM card, for instance "Special". Please refer in that case to the information provided with your USIM card for further information on how to use the related options.

# Browser [Menu \*]

## Home

Menu \*.1

You can launch the web browser and access the homepage of the activated profile on Browser settings.

## Enter address

Menu \*.2

You can manually enter a URL address and access the associated web page.

## Bookmarks

Menu \*.3

You can store frequently accessed or favourite URLs/Pages. Send, Add new, Edit, Mark/Unmark or Delete operations can be performed on Bookmarks. Several preconfigured URLs are stored as bookmarks.

## RSS reader

Menu \*.4

RSS reader provide news updates from websites registered in phone You read these files in Rss reader, which collects news from registered wabsites registered in your phone and provides it to you in a simple form.

## Saved pages

Menu \*.5

The phone can save the page on display as an offline file. Up to 20 pages can be saved.

## History

Menu \*.6

You can view the list of the pages you've already connected.

## Settings

Menu \*.7

You can change the settings for browser connectivity and display.

### Profiles (Menu \*.7.1)

Select the appropriate profile by pressing . This will activate the profile to initiate the browser launch.

### Appearance settings (Menu \*.7.2)

- ▶ **Character encoding**  
Sets the browser default character.
- ▶ **Scrolling control**  
Allows you to set the scroll speed by selecting the number of lines to scroll. Select from the menu either 1 line, 2 lines or 3 lines.
- ▶ **Show image**  
Allows you to enable or disable the image display during browsing.

## Browser

### Note

- ▶ Enabling this function will delay displaying images until the completion of transmission. Disabling this function will prevent the browser from downloading images from the server, thus allowing faster transmission.

### ▶ Java script

Select whether to turn JavaScript On or Off.

### Cache (Menu \*.7.3)

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in the Cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

### Cookies (Menu \*.7.4)

Enabling Cookie allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

### Security (Menu \*.7.5)

#### Certificates list

Certificates can be viewed from the list.

#### Session clear

Secure (WTLS/TLS) session data can be cleared using this option.

#### Reset settings (Menu \*.7.6)

Select this to reset your phone to its default browser configuration.

# Connectivity [Menu 0]

## Bluetooth

### Menu 0.1

#### Bluetooth connection

Your phone has built-in Bluetooth wireless technology which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a handsfree, PC, PDA or other phones.

You can, for example, have a conversation via a cordless Bluetooth handsfree or browse the Internet, wirelessly connected via a mobile phone. You can also exchange, for example, business cards, calendar items and pictures.

#### Note

- ▶ We recommend that your phone and the Bluetooth device you are communicating with be within a range of 10 meters. The connection may be improved if there are no solid objects between your phone and the other Bluetooth device.

#### 1. Getting started

- Menu → Connectivity → Bluetooth → Turn on/off

To use the Bluetooth function, you must first set **Turn on**.

#### 2. Configuring Bluetooth settings

- Menu → Connectivity → Bluetooth → Settings

- **My device visibility:** Set [My handset's visibility] to [Visible] so that other devices can detect your phone when they are searching for a Bluetooth device. If you select [Hidden], other devices will not be able to detect your phone when they are searching for a Bluetooth device.

- **My device name:** You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when [My handset's visibility] is set to [Visible].

- **Supported services:** You can view the list of devices such as headsets and handsfree kits supported by this Bluetooth enabled phone.

- **My address:** You can check the address of Bluetooth.

#### Note

- ▶ When user uses Bluetooth Device in the handset, the security of the handset is at risk. Therefore, we recommend that Bluetooth visibility be set to Hidden after configuration or device pairing. For incoming files via Bluetooth regardless of paired devices, you can choose to accept or reject the connection, after checking the sender details.

## Connectivity

### 3. Search and pair new device

#### <Searching new device>

You can search new device as following menu.

• **Menu** → **Connectivity** → **Bluetooth** → **Search new device**

#### <Pairing devices>

1. To search for a Bluetooth device to pair, press **New**.
2. Screen shows Searching for devices. Bluetooth devices within a range of 10m will be found.
3. If Bluetooth devices are found, these devices are listed on the screen. If no Bluetooth device is found, you will be asked if you want to search again.

#### 4. Pairing procedure

- Press **[OK]**. A window will appear on the screen asking you to enter your password.
- After creating a password (of 1 to 16 digits), the user of the other device must enter the password for pairing. The user of the other device must know the password in advance for authentication.

#### <Deleting devices>

1. Select a device to delete from the Paired devices screen.
2. You can delete a device by selecting **Options** > **Delete**. To delete all paired devices, select **Options** > **Delete All**.

#### <Transmitting data using Bluetooth>

1. To transmit data from your phone to another Bluetooth device, first select the application where the target data is saved. For example, to send data in the **My Files** to another device, select **Menu** → **My stuff** → **My images / My Sounds / My Videos/ Others / External memory** → **Select data to transmit** → **Send** → **Bluetooth**
2. **Transmitting data**
  - 1) Paired device found is displayed. If the desired device does not exist in the list, select **[Refresh]**.
  - 2) Select the device to which you want to transmit data from the devices on the screen and press **[OK]**.
  - 3) If the other party selects **[Yes]** for **[Connection request]**, the data is transmitted.

## Server sync

Menu 0.2

### Note

- ▶ This service is not available in all countries. Please contact your service provider for further information.

If Sync service is supported by your network operator, this service function synchronizes the data in a phone and the data on a server such as Contacts, Calendar, To do, and Memo via a wireless network.

## USB connection mode Menu 0.3

You can activate USB connection mode of your phone for several usages.

If you use Mass storage function like USB memory card, select Mass storage in this menu. Mass storage is available for only external memory card.

If you use Data service such as PC suite application, select Data service in this menu.

# Settings [Menu #]

## Profiles

Menu #.1

You can select ringtone or vibration for an incoming call and configure the sound and volume of the ringtone, key tone, and sound effect, according to a profile.

## Phone

Menu #.2

### Auto key lock (Menu #.2.1)

If you activate this function, the keypad will be locked automatically after predefined delay time when the slide is closed.

### Language (Menu #.2.2)

Select the display language. You can select Automatic language option to change display language to the USIM card supported language.

### Power save (Menu #.2.3)

When you don't use a phone, you can save the power activating this menu.

### Handset info. (Menu #.2.4)

This functions shows the USIM card telephone number, model name and software version of the mobile phone.

## Screen

Menu #.3

This menu allows you to personalise the display options of the screens and of the menus entire graphic interface.

### Screen theme (Menu #.3.1)

You can set the screen theme to be displayed on the main screen.

### Home screen

- ▶ **Wallpaper:** You can select an image to be displayed on the main screen.
- ▶ **Display items:** You can select which items to display on the screen: Clock, Clock + Key guide, Dual clock, Key guide, Do not show, Calendar + Clock or Calendar
- ▶ **Clock type:** You can select the type of clock.

### Start up

You can select the image to be displayed while the phone is being switched on.

### Shut down

You can select the image to be displayed while the phone is being switched off.

### Menu style (Menu #.3.2)

You can select the desired menu style from Grid style and List Style.

### Font (Menu #.3.3)

You can set the dialling font size and dialling font colour using **[<] / [>]**.

### Backlight (Menu #.3.4)

You can set the backlight duration and the brightness on the Home screen and the duration on the Keypad individually.

### Handset theme (Menu #.3.5)

You can set the theme of handset: White or Black

### Greeting message (Menu #.3.6)

You can insert the message when switching on the phone.

## Date & Time

### Menu #.4

Although the current time is automatically configured when the phone is registered to the network, users can configure the time and date directly using this menu. The time configured by the user is valid only while the phone is turned on.

### Time

1. Select the Time item from the Date & time list, and then press Done.
2. Move to your desired field, Hour, Minute, or am/pm field using the navigation keys. (When you have selected 12 hour as Time format)
3. Enter Hour, and Minutes using the number keys.
4. Select the time format using **[<] / [>]**.
5. Scroll down to select the hour indicator format i.e. Off, Cuckoo clock or Chime bell.
6. Press the Right soft key to set the time with the specified value.

### Date

1. Select the Date item from the Date & time list, and then press Done.
2. Select the date format using **[<] / [>]**.
3. Enter Day, Month and Year using the number keys.
4. Press the Right soft key to set the date with the specified value.

### Auto update date/time

When Auto Update is configured to On, the time and date are automatically updated according to the current time zone. If Confirm first is selected, the time and date update is confirmed before it is updated automatically.

## Daylight saving

Select whether to activate the daylight saving function or not. You can set the Summer time difference of selected home city for 1 hour or 2 hours.

## Network

Menu #.5

### Select Network (Menu #.5.1)

Select between Automatic and Manual.

- ▶ **Automatic:** Automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.
- ▶ **Manual:** All the currently 2G(GSM) and 3G(UMTS) available networks are shown and you can select one of them for registration. If the registration of the network has failed, the network lists are listed again and you can select any other one for registration.

#### Note

- ▶ When your handset lose the network in manual mode, the popup message to select the available network will be shown in the Idle screen.

## Network mode (Menu #.5.2)

You can set a type of network to search for when networks are searched in the Select network menu.

## Preferred lists (Menu #.5.3)

If the network is searching automatically, you can add a preferable network to be connected to.

## Internet profiles

Menu #.6

This menu shows the Internet profiles. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

## Access points

Menu #.7

This menu shows the access point list. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

## Packet Data Conn. Menu #.8

If you select 'When available' menu, the phone is automatically registered to a GPRS network when you switch the phone on. But you select "When needed", the GPRS connection is established when you connect a WAP or application service and closed when you end the WAP or applicaion connection.

## Security Menu #.9

### PIN code request

When this is set to On, you are requested to enter your PIN each time you switch the phone on.

### Note

- ▶ Press the right soft key in the PIN code entry window to return to the previous step.
- ▶ 3 incorrect PIN code entries would invalidate the PIN code. And you have to enter the PUK (PIN Unblock Key) code to configure the PIN code again.
- ▶ The maximum number of times you may enter the PUK code is 10. (Note: If you enter an incorrect PUK code 10 times, the USIM card will be blocked and must be replaced.)
- ▶ If the PIN code request cannot be disabled by operator settings, you will not be able to choose this menu item.

### Handset lock

You can lock your phone. The following 4 lock functions are available.

**When Switched On:** Locks the handset whenever the handset is switched on.

**When SIM Changed:** Locks the handset when the phone's USIM card has been changed.

**Immediately:** Locks the handset immediately.

**None:** Deactivates the lock function. You are requested to enter the security code to confirm the selection.

- ▶ To unlock the handset, you need to enter the security code.

### Change codes

You can change the PIN, PIN2, and the mobile phone password.

#### PIN code

PIN is the abbreviation for Personal Identification Number, and is used to restrict use by an unauthorised user.

#### PIN2 code

PIN2 is the abbreviation for Personal Identification Number 2, and is used to restrict use by unauthorised users as with the PIN. The PIN2 code change procedure is the same as the one for the PIN code. 3 incorrect PIN2 code entries would invalidate the PIN2 code. In this case, you have to enter the PUK2 code in order to use the PIN2 code again. The maximum number of times you may try to enter the PUK2 code is 10, like PUK1. 10 incorrect PUK2 code entries would invalidate the PIN2 code.

#### Security code

The security code is used to change the mobile phone password. The maximum number of attempts to enter the security code is not limited as it is with PIN and PIN2.

## Memory manager Menu #.0

### Handset common memory

(Menu #.0.1)

This function shows the status of the user memory of the mobile phone. Since this function scans the overall file system for statistics, a few seconds are required.

### Handset reserved memory

(Menu #.0.2)

This function shows the status of the User reserved memory. The usual contents are Text msg, Contacts, Calendar, To do, Memo, Alarms, Call history, and Bookmarks. And it gives a clear illustration of the actual amount compared with the total amount for each item.

### USIM memory (Menu #.0.3)

This function shows the status of the USIM card user memory.

### External memory (Menu #.0.4)

This function shows the status of the External card user memory. This function displays the In-use and free memory usage statistics.

## Primary storage setting

(Menu #.0.5)

You can select the storage to download the file: Handset memory or External memory.

## Streaming settings Menu #.\*

If you want to set different network setting to play streaming content, you can set different network settings.

## Reset settings

Menu #.#

Select this to reset your phone to its default configuration. You are requested to enter the security code.

# Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

## Travel Adapter

This charger allows you to charge the battery while away from home or your office.



## Stereo headset



## Standard Battery



### Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do so may invalidate your warranty.
- ▶ Accessories may vary in different regions; please check with our regional service company or agent for further information.








Warranty Card  
產品保用證

Mobile Phone  
手提電話

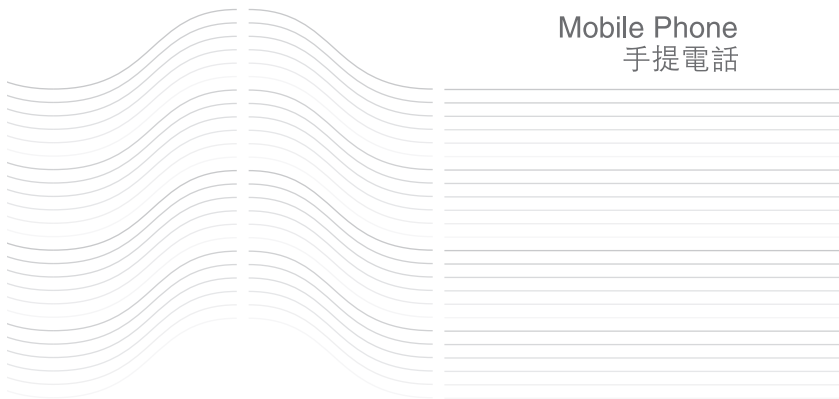

## Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



Welcome to contact for detailed information  
& Customer Care Centre address

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

**IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered. Otherwise, this warranty will be voided.**

重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。

## Mobile Phone Warranty Policy

### 手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
    - (i) Handset :12 months (ii) Charger : 6 months
    - (iii) Battery :6 months (iv) Hand free earphone :3 months.
  - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
  - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display antenna, and accessories, etc.)
  - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
  - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle these parts as necessary.
  - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
  - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
    - (i) Product has been tampered with or undergone unauthorized repair by third parties, including installation, alteration or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
    - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
    - (iii) The IMEI number sticker on this product has been erased or modified.
    - (iv) The content of warranty policy has been modified without authorization.
  - (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
  - (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
  - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
  - (11) This warranty card is restricted within Hong Kong SAR only.
- (1) 本公司為客戶提供保用條款如下，只適用於香港購買之手機，並不包括促銷活動之贈品(由購買日起計)
    - (i) 機身 :12個月 (ii) 充電器 :6個月
    - (iii) 電池 :6個月 (iv) 免提耳機 :3個月
  - (2) 保用服務只適用於原裝行貨，水貨及冒牌貨均屬無效。
  - (3) 此保用只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
  - (4) 用家需妥善保管機件，並向原廠或經銷商購買。保用證及印有IMEI號碼之有效發票正本對本公司指定之維修中心進行維修，否則保用服務無效。客戶須備存維修費用。
  - (5) 在保用期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
  - (6) 手機內存資料有可能因維修而遺失，請顧客自行保存。
  - (7) 若下列情況下本保用證將自動失效，本公司有權拒絕維修手機或向客人要求所有的維修費用。
    - (i) 手機曾作未許可之維修、不適當的安裝、更改，或黏貼於其上的維修貼紙遭受損毀、撕破、除去，保用服務即無效。
    - (ii) 手機曾被錯誤使用、錯誤處理、濫用使用，直接或間接暴露於火、液體、火災、腐蝕、地震、戰爭、暴亂或天然災害所造成的損壞。
    - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保用服務即無效。
    - (iv) 擅自修改本保用證的內容。
  - (8) 本公司將對任何於使用、維修或運送時引致之系統損壞及資料遺失，或因天然災害、意外事件造成之損失概不負責。
  - (9) 本保用證的發出及終止權均屬本公司所有，就不明的情況或個案，經審裁處，本公司有權發出或終止本保用證。
  - (10) 本公司將不負責由於產品損壞而導致或間接引致之任何損失。
  - (11) 此保用證只適用於香港特別行政區範圍內。



## 服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_



To:

LG Electronics HK Ltd.  
North Point Post Office Box No.54509  
香港北角郵政信箱54509號



## Limited Warranty

### 限期保用證

To provide our best after-sales service, please complete and return this warranty card to us. 您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下專有的售後服務。

### Customer Information

#### 客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號













