



KOSELO อยุ่ฉาการใ้

LG ELECTRONICS INC.

KC550

ไทย
ENGLISH

CE 0168
www.lgmobile.com

MMBB0292016 (1.0) G

Bluetooth QD ID B013915



ข้อมูลบางอย่างในคู่มือเล่มนี้
อาจแตกต่างจากโทรศัพท์ ของคุณ
ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์
หรือผู้ให้บริการของคุณ

คู่มือการใช้ KC550

ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น KC550 ของ LG ที่ทันสมัยมีขนาดกะทัดรัด ออกแบบให้ทำงานด้วยการใช้เทคโนโลยีการสื่อสารเคลื่อนที่แบบดิจิตอลใหม่ล่าสุด

ตั้งค่า 01

หน้าจอสแตนด์บาย 02

การทำงานพื้นฐาน 03

เริ่มต้นงานสร้างสรรค์ 04

เริ่มต้นการจัดการ 05

เบราวเซอร์ 06

ตั้งค่า 07

อุปกรณ์เสริม 08

สารบัญ

01	ตั้งค่า		
	เริ่มทำความรู้จักกับโทรศัพท์ของคุณ..	8	
	ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ..	9	
	การใส่ซิมและแบตเตอรี่.....	10	
	การตั้งค่าหน่วยความจำ	13	
	การใส่การ์ดหน่วยความจำ	13	
	การถอดการ์ดหน่วยความจำ.....	13	
	การฟอร์แมตการ์ดหน่วยความจำ.....	13	
	แผนผังเมนู.....	14	
02	หน้าจอสแตนด์บาย		
	หน้าจอสแตนด์บาย.....	15	
	ปุ่มด่วน	15	
	เมนูหลัก.....	15	
	แถบสถานะ	16	
03	การทำงานพื้นฐาน		
	การโทร	17	
	การโทรออก.....	17	
	การโทรออกโดยใช้รายชื่อ.....	17	
	การรับสายและการปฏิเสธสาย		
	โทรด่วน	17	
	การปรับระดับเสียงสนทนา.....	18	
	โทรด่วน	18	
	การดูบันทึกการโทร	18	
	การใช้การโอนสาย	19	
	การใช้การจำกัดการโทร.....	19	
	การเปลี่ยนแปลงการตั้งค่า.การโทร .	20	
	รายชื่อ	21	
	การค้นหารายชื่อ	21	
	การเพิ่มรายชื่อใหม่	21	
	ตัวเลือกต่างๆ ของรายชื่อ.....	21	
	การเพิ่มรายชื่อให้กับกลุ่ม	22	
	การเปลี่ยนชื่อกลุ่ม	22	
	การเพิ่มรูปภาพให้กับรายชื่อ	22	
	การตัดลอกรายชื่อไปยังซิม	23	
	การลบรายชื่อทั้งหมด.....	23	
	การดูข้อมูล	23	
	ข้อความ.....	24	
	ข้อความ.....	24	
	การส่งข้อความ	24	
	การป้อนข้อความ.....	25	
	การตั้งค่าอีเมล.....	26	
	การส่งอีเมล	27	
	โพลเดอร์ข้อความ	27	
	การจัดการข้อความ.....	28	
	การใช้ข้อความอัตโนมัติ	28	
	การเปลี่ยนการตั้งค่าข้อความ		
	ตัวอักษร	29	
	การเปลี่ยนการตั้งค่าข้อความ		
	มัลติมีเดีย.....	30	
	การเปลี่ยนการตั้งค่าอีเมล	30	
	การเปลี่ยนการตั้งค่าอื่นๆ.....	31	

1
21
21
21
22
22
22
23
23
23
24
24
24
25
26
27
27
28
28
29
30
30
31

04 เริ่มต้นงานสร้างสรรค์	
กล้องถ่ายรูป..... 32	
การถ่ายภาพด้วย..... 32	
หลังจากที่ถ่ายภาพแล้ว 32	
ทำความเข้าใจกับช่องมองภาพ 33	
การเปลี่ยนขนาดภาพ 34	
การถ่ายภาพถ่ายที่บันทึกไว้ 35	
การตั้งค่าภาพถ่ายเป็นภาพพื้น หลัง หรือ ID ภาพ..... 35	
กล้องวิดีโอ..... 36	
การถ่ายวิดีโอด้วย..... 36	
หลังจากที่ถ่ายวิดีโอแล้ว 36	
ทำความเข้าใจกับช่องมองภาพ 37	
การดูวิดีโอที่บันทึกไว้..... 38	
การปรับระดับเสียงขณะดูวิดีโอ 38	
เครื่องเล่น MP3..... 39	
เครื่องเล่น MP3 39	
การโอนเพลงไปยังโทรศัพท์..... 39	
การเล่นเพลง..... 39	
การใช้ตัวเลือกขณะเล่นเพลง 40	
การสร้างรายการเพลง 40	
การเล่นรายการเพลง..... 40	
การแก้ไขรายการเพลง 40	
การลบรายการเพลง..... 41	

วิทยุ FM..... 42	
การใช้วิทยุ FM 42	
การค้นหาสถานี 42	
การรีเซ็ตสถานี..... 42	
การฟังวิทยุ 42	
เครื่องบันทึกเสียง..... 43	
การใช้เครื่องบันทึกเสียง 43	
การบันทึกเสียงเตือนของคุณ 43	
การส่งการบันทึกเสียง 43	
Muvee studio..... 43	
เพิ่มข้อมูล 44	
ภาพ 44	
เมนูตัวเลือกสำหรับภาพ..... 44	
การส่งภาพถ่าย..... 45	
การจัดการรูปภาพ..... 45	
การลบรูปภาพ 45	
การลบหลายภาพ 45	
การสร้างภาพสไลด์ 46	
เสียง 46	
การใช้เสียง..... 46	
วิดีโอ..... 46	
การดูวิดีโอ..... 46	
การใช้ตัวเลือกขณะหยุดวิดีโอ ชั่วคราว..... 47	
การส่งวิดีโอคลิป 47	
การใช้เมนูตัวเลือกของวิดีโอ..... 47	

สารบัญ

เอกสาร.....	48	06 เบลราว์เซอร์	
การดูเอกสาร.....	48	เบลราว์เซอร์.....	56
อื่นๆ	48	การเข้าใช้เว็บไซต์.....	56
หน่วยความจำนอก.....	48	การเพิ่มและการใช้บัตรเครดิต	56
การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล.....	48	การบันทึกเพลง	57
การโอนไฟล์ไปที่โทรศัพท์	49	การเข้าใช้เพลงที่บันทึกไว้	57
การส่งและการรับไฟล์โดยใช้บลูทูธ. 50		การดูประวัติข้อมูลเบลราว์เซอร์.....	57
เกมส์&แอปฯ.....	51	การเปลี่ยนการตั้งค่าเว็บเบลราว์เซอร์.....	57
เกมส์&แอปฯ.....	51		
การเล่นเกมส์.....	51	07 ตั้งค่า	
การดูแอปพลิเคชัน	51	การตั้งค่า	58
การเปลี่ยนแปลงโปรไฟล์ เครือข่าย. 51		การเปลี่ยนแปลงรูปแบบของคุณ	58
		การปรับแต่งรูปแบบของคุณ.....	58
		การเปลี่ยนวันที่และเวลา.....	58
		การเปลี่ยนภาษา.....	58
05 เริ่มต้นการจัดการ		การเปลี่ยนการตั้งค่าการ แสดงผล... 58	
อแอกไนเซอร์	52	การเปลี่ยนการตั้งค่าความปลอดภัย.....	59
การเพิ่มเหตุการณ์ลงในปฏิทิน.....	52	ปลอดภัย.....	59
การแก้ไขเหตุการณ์ในปฏิทิน	52	การใช้โหมด Flight	60
การแบ่งปันเหตุการณ์ในปฏิทิน	53	การรีเซ็ตโทรศัพท์ของคุณ	60
การเพิ่มบันทึก	53	การดูสถานะหน่วยความจำ	60
เครื่องมือ.....	54	การเปลี่ยนการตั้งค่าบลูทูธ	60
การตั้งเวลาปลุก.....	54	การเปลี่ยนการตั้งค่าการ เชื่อมต่อ ... 61	
การใช้เครื่องคิดเลข	54	การจับคู่กับอุปกรณ์บลูทูธอื่น	61
การใช้นาฬิกาจับเวลา.....	54	การใช้ชุดหูฟังบลูทูธ.....	62
การแปลงหน่วย	55		
การเลือกเมืองลงในเวลาทั่วโลก	55		
บริการซิม	55		

08 อุปกรณ์เสริม

อุปกรณ์เสริม 63

บริการของเครือข่าย 64

ข้อมูลทางเทคนิค 64

ทั่วไป 64

อุณหภูมิต่อลม 64


**คำแนะนำเพื่อความปลอดภัยและการ
ใช้งานอย่างมีประสิทธิภาพ 66**

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หน้าจอหลัก


ปุ่มลบ **C**

ลบตัวอักษรครึ่ง
ละหนึ่งตัวเมื่อกด
ปุ่มในแต่ละครั้ง
ใช้ปุ่มนี้เพื่อกลับ
ไปหน้าจอที่แล้ว

ปุ่มโทร 
เพื่อโทรออกและ
รับสายเรียกเข้า



ช่องเสียบอุปกรณ์ชาร์จ,
สายเคเบิล, แสตนด์พีรี

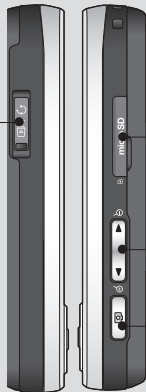

ช่องเสียบ
การ์ด
หน่วยความจำ


ปุ่มปรับ
ระดับเสียง

ปุ่มกล้อง
ถ่ายรูป

ปุ่มวางสาย/เปิดปิดเครื่อง 

เลื่อนปุ่มวางสาย/เปิดปิดเครื่องไป
ทางด้านล่างของโทรศัพท์
วางสายหรือปฏิเสธสายเรียกเข้า
เปิด/ปิดโทรศัพท์
กลับไปยังหน้าจอสแตนด์บายเมื่อ
คุณใช้เมนู

ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ

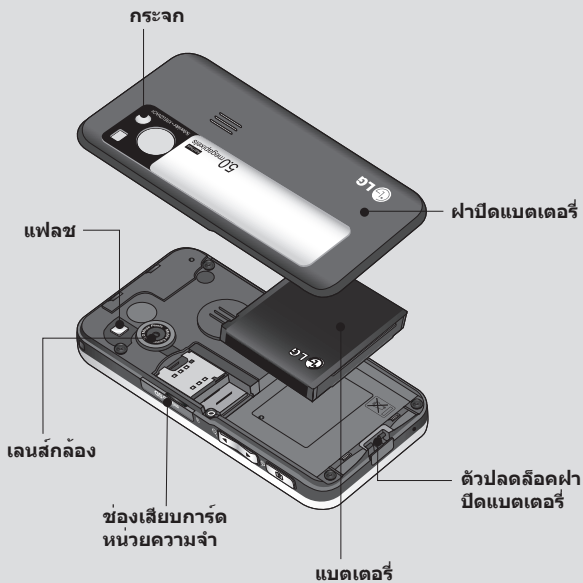

01

02

03

04

05

06

07

08

การใส่ซิมและแบตเตอรี่


1 ถอดฝาปิดแบตเตอรี่

กดตัวปลดล็อกฝาปิดแบตเตอรี่ เลื่อนฝาปิดแบตเตอรี่ไปทางด้านล่างของโทรศัพท์ และถอดฝาปิดแบตเตอรี่ออก



2 ถอดแบตเตอรี่ออก

จัดด้านล่างของแบตเตอรี่และถอดแบตเตอรี่ออกจากช่องใส่แบตเตอรี่อย่างระมัดระวัง

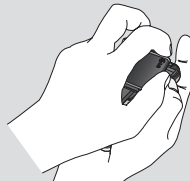


⚠ คำเตือน: ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

3 ใส่ซิมการ์ด


ดึงช่องใส่ซิมการ์ดให้เปิดออก เลื่อนซิมการ์ดเข้าไปในช่องใส่ซิมการ์ดแล้วเลื่อนช่องใส่ซิมการ์ดกลับเข้าไป โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง ในการถอดซิมการ์ด ให้ค่อยๆ ดึงการ์ดออกมาในทิศทางตรงข้ามกับตอนใส่

⚠ คำเตือน: อย่าใส่ซิมการ์ดในขณะที่ฝาเลื่อนเปิดอยู่เพราะอาจทำให้โทรศัพท์และซิมการ์ดของคุณเสียหายได้

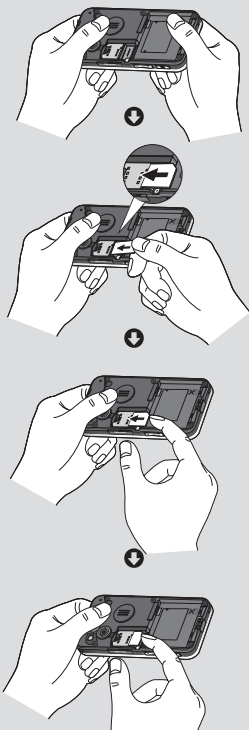

4 ใส่แบตเตอรี่

ใส่แบตเตอรี่ โดยให้ด้านบนของแบตเตอรี่สอดลงไปที่ด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วในโทรศัพท์ จากนั้น กดด้านล่างของแบตเตอรี่ให้แน่นเข้าที่

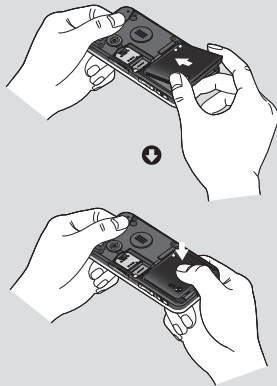

01

02

03

04

05


06

07

08


การใส่ซิมและแบตเตอรี่

5 ใส่ฝาปิดแบตเตอรี่กลับคืน
เลื่อนฝาปิดแบตเตอรี่ไปทางด้านบน
ของเครื่องให้แน่นเข้าที่

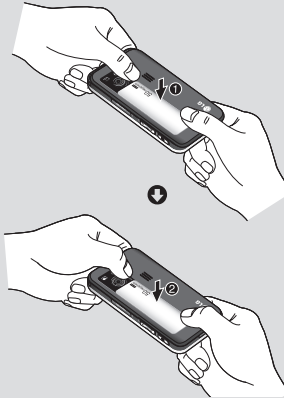

6 การชาร์จโทรศัพท์
ดึงเพื่อเปิดฝาปิดช่องเสียบอุปกรณ์
ชาร์จที่ด้านหลังของโทรศัพท์
KC550 และเสียบปลั๊กไฟเข้ากับเต้า
เสียบไฟ คุณจะต้องชาร์จโทรศัพท์
KC550 จนกว่าจะปรากฏข้อความว่า
แบตเตอรี่เต็ม บนหน้าจอ

⚠ คำเตือน: อย่าชาร์จโทรศัพท์โดยวาง
ไว้บนพื้นผิวอ่อนนุ่ม ควรชาร์จโทรศัพท์ใน
บริเวณที่มีการถ่ายเทอากาศดี

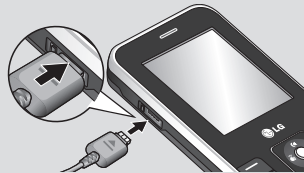


การรีดหน่วยความจำ

การใส่การ์ดหน่วยความจำ

คุณสามารถเพิ่มพื้นที่หน่วยความจำบนโทรศัพท์ได้โดยการใส่การ์ดหน่วยความจำโทรศัพท์ KC550 สามารถรองรับการ์ดหน่วยความจำสูงสุดไม่เกิน 2 กิกะไบต์


เคล็ดลับ! การ์ดหน่วยความจำเป็นอุปกรณ์เสริม

เปิดฝาเลื่อนแล้วเสียบการ์ดหน่วยความจำเข้าไป เสียบการ์ดหน่วยความจำเข้าไปในช่องเสียบที่ด้านบนให้แน่นเข้าที่ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

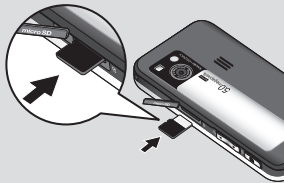

การถอดการ์ดหน่วยความจำ

เปิดฝาเลื่อนแล้วเอาการ์ดหน่วยความจำออกโดยกดที่การ์ดเบาๆ ดังแสดงในภาพต่อไปนี้:

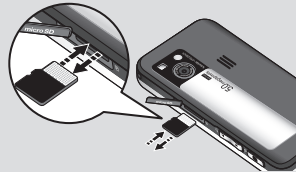

การฟอร์แมตการ์ดหน่วยความจำ

หากการ์ดหน่วยความจำของคุณยังไม่ได้อฟอร์แมต คุณจะต้องฟอร์แมตการ์ดก่อนจึงจะสามารถเริ่มใช้งานได้

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** แล้วเลือก **ตั้งค่า**
- 2 เลือก **สถานะความจำ** แล้วเลือก **หน่วยความจำภายนอก**
- 3 แตะที่ **ฟอร์แมต** และป้อนรหัสผ่านซึ่งได้รับการตั้งค่าเริ่มต้นเป็น 0000 การ์ดของคุณจะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน
- 4 หากต้องการดูไฟล์เดอริทีที่เพิ่งฟอร์แมตใหม่บน KC550 ให้แตะที่ **เมนู** แล้วเลือก **แฟ้มข้อมูล** เลือก **หน่วยความจำภายนอก**

⚠ คำเตือน: เมื่อคุณฟอร์แมตการ์ดหน่วยความจำ ข้อมูลทั้งหมดจะถูกลบออก หากคุณไม่ต้องการให้ข้อมูลในการรีดหน่วยความจำหายไป ให้สำรองข้อมูลไว้ก่อน

01

02

03

04

05

06

07

08

แผนผังเมนู



เกมส์&แอปฯ

- 1 M-toy
- 2 เกมส์
- 3 แอปพลิเคชัน
- 4 โปรไฟล์เครือข่าย



ข้อมูลการโทร

- 1 ทุกสาย
- 2 สายไม่ได้รับ
- 3 สายโทรออก
- 4 สายที่ได้รับ
- 5 เวลาโทร
- 6 ค่าโทร
- 7 รายละเอียดข้อมูล



ออลไทม์เซอร์

- 1 ปฏิทิน
- 2 บันทึก



มัลติมีเดีย

- 1 เครื่องเล่น MP3
- 2 กล้องถ่ายรูป
- 3 กล้องวิดีโอ
- 4 วิทยุ FM
- 5 เครื่องบันทึกเสียง
- 6 Muvee studio



ข้อความ

- 1 ข้อความใหม่
- 2 ถัดเข้า
- 3 อีเมลบล็อกซ์
- 4 ร่าง
- 5 ถัดออก
- 6 ส่ง
- 7 ฟังข้อความเสียง
- 8 บริการข้อมูล
- 9 ข้อความอัตโนมัติ
- 0 ตั้งค่า



แฟ้มข้อมูล

- 1 ภาพ
- 2 เสียง
- 3 วิดีโอ
- 4 เอกสาร
- 5 อื่นๆ
- 6 หน่วยงานภายนอก



รูปแบบเสียง

- 1 ทั่วไป
- 2 เจียบ
- 3 เฉพาะสัน
- 4 นอกอาคาร
- 5 ชุดหูฟัง



รายชื่อ

- 1 ค้นหา
- 2 รายชื่อใหม่
- 3 โทรด่วน
- 4 กลุ่ม
- 5 คัดลอกทั้งหมด
- 6 ลบทั้งหมด
- 7 ตั้งค่า
- 8 ข้อมูล



เครื่องมือ

- 1 นาฬิกาปลุก
- 2 เครื่องคิดเลข
- 3 นาฬิกาจับเวลา
- 4 ตัวแปลงหน่วย
- 5 เวลาทั่วโลก
- 6 บริการซิม



เบอร์รายชื่อ

- 1 โยม
- 2 บุคมาาร์ค
- 3 ปอนแอดเดรส
- 4 ประวัติ
- 5 บันทึกเพลง
- 6 ตั้งค่า
- 7 ข้อมูล



การเชื่อมต่อ

- 1 บลูทูธ
- 2 เครือข่าย
- 3 การเชื่อมต่อ USB
- 4 TV out



ตั้งค่า

- 1 วันที่ & เวลา
- 2 ภาษา
- 3 หน้าจอ
- 4 การโทร
- 5 ระบบป้องกัน
- 6 โหมด Flight
- 7 รีเซ็ต
- 8 สถานะความจำ

หน้าจอสแตนด์บาย

ปุ่มด้าน

ปุ่มด้านจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ซับซ้อนได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว

✉ และหนึ่งครั้งเพื่อเปิดดูข้อความของคุณในถาดเข้า คุณสามารถสร้าง SMS หรือ MMS ใหม่ได้ให้และปุ่มนี้ค้างไว้

🎵 และเพื่อค้นหารายชื่อ รายชื่อจะแสดงตามลำดับตัวอักษร คุณยังสามารถสร้างรายชื่อใหม่และแก้ไขรายชื่อที่มีอยู่ได้

🔊 และเพื่อเลือกรูปแบบเสียงให้กับโทรศัพท์ของคุณ

♡ และเพื่อเปิดเมนูโปรด

เมนูหลัก

เมนูหลักจะมีตัวเลือกเมนูต่างๆ 12 เมนู ในการเปิดเมนูหลัก:

- 1 และที่ **เมนู**
- 2 เมนูหลักจะปรากฏบนหน้าจอ
- 3 เมื่อตัวเลือกที่คุณต้องการถูกเลือกให้แตะที่ **ตกลง** เพื่อเปิด

01

02

03

04

05

06

07

08

คำแนะนำสำหรับลูกค้า

เพื่อการรับสัญญาณที่ดีที่สุด LG ขอแนะนำให้คุณถือโทรศัพท์ตามตัวอย่างที่แสดงไว้ในภาพด้านล่าง



โปรดอย่าให้มือของคุณบดบังบริเวณเสาอากาศระหว่างการโทรออกหรือขณะการใช้การเชื่อมต่อบลูทูธ เพราะอาจรบกวนและทำให้คุณภาพของเสียงลดลง

หน้าจอสแตนด์บาย

แถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูล เช่น ระดับความแรงของสัญญาณ, ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีการใช้งานลู่ทออยู่หรือไม่





ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	คำอธิบาย
	ความแรงของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป)
	ไม่มีสัญญาณเครือข่าย
	ใช้ GPRS ได้
	ใช้ EDGE ได้
	เปิดใช้โหมด Flight
	โอนสายเรียกเข้า
	บริการโรมมิ่ง
	เปิดใช้บลูทูธ
	มีการเชื่อมต่อบริการ WAP
	ตั้งปลุกแล้ว
	นัดหมาย

ไอคอน	คำอธิบาย
	ข้อความใหม่
	ข้อความเสียงใหม่
	ใช้รูปแบบทั่วไปอยู่
	ใช้รูปแบบเสียงอยู่
	ใช้รูปแบบสันอยู่
	ใช้รูปแบบนอกอาคารอยู่
	ใช้รูปแบบชุดหูฟังอยู่
	พลังงานแบตเตอรี่ที่เหลืออยู่
	แบตเตอรี่หมด



การโทร

การโทรออก

- 1 ป้อนหมายเลขโดยใช้ปุ่มกด หากต้องการลบที่ละหมายเลข กด 
- 2 และ  เพื่อเริ่มการโทรออก
- 3 หากต้องการวางสาย ให้เลื่อน  ที่ด้านขวาของเครื่องโทรศัพท์ และที่  เมื่อคุณแน่ใจ

เคล็ดลับ! ในการป้อน + เมื่อโทรออกต่างประเทศ ให้กดปุ่ม 0 ค้างไว้


การโทรออกโดยใช้รายชื่อ

- 1 เปิดเมนูหัชแพดโดยการเลื่อนเปิดตัวเครื่อง หรือกดปุ่มกล้องถ่ายรูปที่ด้านข้างของตัวเครื่องค้างไว้
- 2 และ  เพื่อเปิดสมุดแอดเดรส
- 3 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยใช้ปุ่มกด ตัวอย่างเช่น หากต้องการโทรไปที่บ้าน ให้กด 5 สามครั้ง
- 4 และ  เพื่อเริ่มการโทรออก

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้แตะที่  ยอมรับ หรือแตะ  เพื่อรับสาย

ขณะโทรศัพท์ของคุณมีเสียงเรียกเข้า ให้เปิดใช้หัชแพดโดยเปิดตัวเครื่องหรือกดปุ่มกล้องถ่ายรูป จากนั้นเลือก **เจียบ** เพื่อปิดเสียงเรียกเข้า วิธีนี้เป็นวิธีที่ดี หากคุณเลื่อมเปลี่ยนรูปแบบเป็น **เจียบ** เมื่ออยู่ในห้องประชุม

เลื่อน  ไปทางด้านล่างของโทรศัพท์ หรือแตะที่ **ปฏิเสธ** เพื่อปฏิเสธสายที่เรียกเข้า

เคล็ดลับ! คุณสามารถเปลี่ยนการตั้งค่าบนโทรศัพท์เพื่อรับสายในวิธีที่แตกต่างกัน และที่ **เมนู** เลือก **ตั้งค่า** แล้วเลือก **การโทร** เลือก **โหมดตอบรับ** และเลือกจาก **เปิดสไลด์**, **ปุ่มใดๆ** หรือ **ปุ่มรับสายเท่านั้น**

01

02

03

04

05

06

07

08

การโทร


การปรับระดับเสียงสนทนา

หากต้องการปรับระดับเสียงระหว่างการ
ใช้สาย ให้กดปุ่มปรับระดับเสียงที่ด้าน
ซ้ายมือของโทรศัพท์

โทรด่วน

คุณสามารถกำหนดหมายเลขโทรด่วนให้
กับรายชื่อที่คุณโทรหาบ่อยๆ ได้

- 1 และที่ **รายชื่อ** จากนั้นเลือก **โทรด่วน**
- 2 ข้อความเสียงของคุณได้รับการกำ
หนดให้อยู่ที่หมายเลขโทรด่วน 1
ซึ่งคุณไม่สามารถเปลี่ยนแปลงได้
เลือกหมายเลขอื่นโดยการกดลูก
ศรบนทัชแพดและแตะที่ **กำหนด**
หรือเลือกโดยการกดปุ่มตัวเลข
- 3 สมุดแอ็ดเดรสจะเปิดขึ้น เลือกรายชื่อ
ที่คุณต้องการกำหนดให้กับหมายเลข
นั้นโดยใช้ลูกศรบนทัชแพด แล้วแตะที่
ตกลง

ในการโทรออกหมายเลขโทรด่วน
ให้กดหมายเลขที่กำหนดค้างไว้จน
กว่ารายชื่อจะปรากฏขึ้นบนหน้าจอ
เครื่องจะทำการโทรออกโดยอัตโนมัติ
โดยไม่ต้องแตะที่ 

การดับบันทึกการโทร

แตะที่ **เมนู** เลือก **ข้อมูลการโทร**
เลือกเพื่อดู:

ทุกสาย - ดูรายการที่คุณโทรออก, ได้รับ
และไม่ได้รับทั้งหมด

สายไม่ได้รับ - ดูรายการสายที่คุณไม่
ได้รับ

สายโทรออก - ดูรายการหมายเลขที่คุณ
โทรออกทั้งหมด

สายที่ได้รับ - ดูรายการหมายเลขที่โทร
เข้ามาหาคุณทั้งหมด

เวลาโทร - ดูรายละเอียดของระยะเวลาที่
คุณใช้ในการโทร ทั้งรับเข้าและโทรออก

ค่าโทร - ดูค่าโทรที่เรียกเก็บจากการโทร
ครั้งล่าสุดหรือการโทรทั้งหมดของคุณ
บริการนี้ขึ้นอยู่กับเครือข่าย ผู้ให้บริการ
บางรายอาจไม่ให้การสนับสนุนบริการนี้
รายละเอียดข้อมูล - ดูจำนวนข้อมูลที่
คุณได้รับและส่งทั้งหมดเป็นไบต์

เคล็ดลับ! จากบันทึกการโทร เลือก
ตัวเลือก และเลือก **ลบ** เพื่อลบรายการที่
บันทึกไว้ที่เลือก หรือรายการที่บันทึก
ไว้ทั้งหมด

เคล็ดลับ! ใช้ลูกศรบนทัชแพดเพื่อเลื่อนแถบสีไปที่รายการโทรรายการใดรายการหนึ่งเพื่อดูวันที่และเวลาโทร หากต้องการดูระยะเวลาการโทร ให้แตะที่ **ดู**

การใช้การโอนสาย

- 1 แตะที่ **เมนู** เลือก **ตั้งค่า** แล้วเลือก **การโทร**
- 2 เลือก **การโอนสาย**
- 3 เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดตอไม่ได้
- 4 เลือก **เปิดใช้** และเลือกว่าจะโอนสายไปยังข้อความเสียง หมายเลขอื่น หรือหมายเลขที่ช่วยของคุณ
- 5 ป้อนหมายเลขการโอนของคุณ หรือเลือก **ค้นหา** เพื่อเบร่าส์ รายชื่อ เพื่อกำหนดเป็นหมายเลขการโอน

หมายเหตุ: คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

เคล็ดลับ! ในการปิดการโอนสายทั้งหมด ให้เลือก **ยกเลิกทั้งหมด** จากเมนู **การโอนสาย**

การใช้การจำกัดการโทร

- 1 แตะที่ **เมนู** เลือก **ตั้งค่า** แล้วเลือก **การโทร**
- 2 เลือก **ป้องกันการโทร**
- 3 เลือกตัวเลือกใดตัวเลือกหนึ่ง หรือเลือกทั้งเจ็ดตัวเลือกนี้:
โทรออกทั้งหมด
สายโทรออกต่างประเทศ
ต่างประเทศ ยกเว้นในประเทศ
สายเรียกเข้าทั้งหมด
สายเข้าเมื่ออยู่ต่างประเทศ
ยกเลิกป้องกันการโทรทั้งหมด
เปลี่ยนรหัสผ่าน
- 4 เลือก **เปิดใช้** และป้อนรหัสป้องกัน โปรดตรวจสอบกับผู้ให้บริการระบบเครือข่ายของคุณเกี่ยวกับบริการนี้

เคล็ดลับ! เลือก **กำหนดเบอร์โทรออก** จากเมนู **การโทร** เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากรหัสพีซีได้ คุณจะต้องใส่รหัส PIN2 จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากรหัสพีซีได้

01

02

03

04

05

06

07

08

การโทร

การเปลี่ยนแปลงการตั้งค่าการโทร

- 1 แตะที่ **เมนู เลือก ตั้งค่า** แล้วเลือก **การโทร**
- 2 จากหน้าจอนี้ คุณสามารถแก้ไขการตั้งค่าของ:

การโอนสาย - เลือกว่าจะโอนสายของคุณหรือไม่

ป้องกันการโทร - เลือกเวลาที่คุณต้องการให้ป้องกันการโทร

กำหนดเบอร์โทรออก - เลือกหมายเลขที่สามารถโทรออกจากโทรศัพท์ของคุณได้

โหมดตอบรับ - เลือกว่าจะรับสายโดยใช้ปุ่มรับสาย ปุ่มใดๆ หรือโดยการเลื่อนเปิดเครื่อง

ส่งหมายเลขตัวเอง - เลือกว่าจะแสดงหมายเลขของคุณเมื่อคุณโทรออกหรือไม่

สายเรียกซ้อน - แจ้งเตือนให้ทราบเมื่อมีสายเรียกซ้อน


เดือนทุกนาที - เลือก **เปิด** เพื่อฟังเสียงเดือนทุกนาทีในระหว่างที่ใช้สาย

โทรซ้ำอัตโนมัติ - เลือก **เปิด** หรือ **ปิด**

ส่งโทน DTMF - เลือก **เปิด** หรือ **ปิด**

รายชื่อ

การค้นหารายชื่อ


- 1 แตะที่ **รายชื่อ** แล้วเลือก **ค้นหา** เลือก **รายชื่อ** จากหน้าจอ **เมนู** หรือแตะที่  จากหน้าจอสแตนด์บาย
- 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยใช้ปุ่มกดตัวอย่างเช่น หากต้องการโทรไปที่บ้าน ให้กด **5** สามครั้ง
- 3 หากต้องการเลื่อนดูรายชื่อและหมายเลขที่ต่างกัน ให้ใช้ลูกศรบนทัชแพด

การเพิ่มรายชื่อใหม่

- 1 แตะที่ **รายชื่อ** แล้วเลือก **รายชื่อใหม่**
- 2 เลือกว่าจะจัดเก็บรายชื่อติดต่อใหม่ของคุณบน **โทรศัพท์** หรือ **ซิมการ์ด**
- 3 ป้อนข้อมูลทั้งหมดที่คุณมีในฟิลด์ที่ให้มา แล้วเลือก **บันทึก**

หรือ ใช้วิธีที่เร็วขึ้นโดย...

- 1 ป้อนหมายเลขที่คุณต้องการจัดเก็บที่หน้าจอสแตนด์บาย แล้วเลือก **ตัวเลือก**
- 2 เลือก **บันทึก** หรือ **เพิ่มในรายชื่อที่มีอยู่**
- 3 ป้อนข้อมูลที่เกี่ยวข้องตามด้านบนและแตะที่ **บันทึก**

หมายเหตุ: ขณะที่คุณจัดเก็บอีเมลแอดเดรสของรายชื่อ ให้กด  เพื่อป้อนสัญลักษณ์ แล้วใช้ลูกศรบนทัชแพดเลื่อนหน้าจอจนกระทั่งคุณเห็น @

ตัวเลือกต่างๆ ของรายชื่อ

ในเมนูนี้ คุณสามารถใช้ฟังก์ชันต่างๆ ได้มากมายขณะที่ดูรายชื่อ ขึ้นตอนต่อไปนี้จะแสดงวิธีการเข้าถึงและใช้งานเมนูตัวเลือก:

1 เปิดรายชื่อที่คุณต้องการใช้ โปรดดูที่ **การค้นหารายชื่อ** ที่ด้านบน

2 แตะที่ **ตัวเลือก** เพื่อเปิดรายการตัวเลือก

จากขั้นตอนนี้ คุณจะสามารถ:

แก้ไข - เปลี่ยนแปลงรายละเอียดของรายชื่อติดต่อ

ข้อความใหม่ - ส่งข้อความไปยังรายชื่อติดต่อ หากรายชื่อติดต้อมีอีเมลแอดเดรส ให้เลือกว่าคุณจะส่ง **ข้อความ** หรือ **อีเมล**

ส่งทาง - ส่งรายละเอียดของรายชื่อติดต่อไปยังบุคคลอื่นในรูปแบบนามบัตร เลือกเพื่อส่งเป็น **ข้อความตัวอักษร**, **ข้อความมีลติมีเดีย**, **ทางบลูทูธ** หรือ **โดยอีเมล**

ลบ - ลบรายชื่อ แตะที่ **ใช้** เมื่อคุณแน่ใจ

01

02

03

04

05

06

07

08

รายชื่อ

รายชื่อใหม่ - เพิ่มรายชื่อใหม่

ลบมัลลิต - เลือกหลายรายชื่อเพื่อลบ

คัดลอกไปยังซิม/โทรศัพท์

- เลือกย้ายหรือคัดลอกไปยังซิมการ์ดหรือตัวเครื่อง (ขึ้นอยู่กับตำแหน่งที่คุณบันทึกรายชื่อตั้งแต่เริ่มแรก)

หมายเลขหลัก (บันทึกในโทรศัพท์)

- หากมีมากกว่าหนึ่งหมายเลข ให้เลือกหมายเลขที่ต้องการใช้สำหรับรายชื่อ

การเพิ่มรายชื่อให้กับกลุ่ม

คุณสามารถบันทึกรายชื่อต่างๆ ไว้ในกลุ่ม เช่น แยกกลุ่มเพื่อนร่วมงานและครอบครัวออกจากกัน มีกลุ่มที่ได้รับการตั้งค่าไว้ในเครื่องอยู่แล้วจำนวนหนึ่ง ได้แก่ **ครอบครัว, เพื่อน, เพื่อนร่วมงาน, รีโอพี, กลุ่ม1 และ กลุ่ม2**

1 และที่ **รายชื่อ** แล้วเลือก **กลุ่ม**

2 เลื่อนไปยังกลุ่มที่คุณต้องการเพิ่มรายชื่อลงไป แล้วแตะที่ **ดู** แล้วเลือก **เพิ่ม**

3 รายชื่อของคุณจะเปิดขึ้น เลื่อนไปยังรายชื่อใดๆ ที่คุณต้องการเพิ่มลงในกลุ่ม แล้วแตะที่ จากนั้นเลือก **เสร็จ**

4 และที่ **ใช่** เมื่อคุณแน่ใจ

เคล็ดลับ! คุณสามารถกำหนดเสียงเรียกเข้าหรือไอคอนให้กับกลุ่มได้ เลือกกลุ่มที่คุณต้องการกำหนดเสียงเรียกเข้าหรือไอคอน และเลือก **ตัวเลือก** แล้วเลือกการที่คุณต้องการ

การเปลี่ยนชื่อกลุ่ม

คุณสามารถเปลี่ยนชื่อกลุ่มต่างๆ เพื่อให้เหมาะกับไลฟ์สไตล์ของคุณได้

1 และที่ **รายชื่อ** แล้วเลือก **กลุ่ม**

2 เลือกกลุ่มที่คุณต้องการแก้ไขชื่อ

3 เลือก **ตัวเลือก** เลือก **แก้ไข** และป้อนชื่อกลุ่มใหม่

4 เลือก **บันทึก**

หมายเหตุ: คุณสามารถกำหนดรายชื่อเป็นกลุ่ม หรือเพิ่มรูปภาพได้เฉพาะกับรายชื่อที่บันทึกลงในหน่วยความจำโทรศัพท์ (ไม่ใช่ซิม)

การเพิ่มรูปภาพให้กับรายชื่อ

คุณสามารถเปลี่ยนลักษณะที่ปรากฏของรายชื่อของคุณในสมุดโทรศัพท์เพื่อให้มีรูปภาพได้

1 และที่ **รายชื่อ** แล้วเลือก **ตั้งค่า**

2 เลือก **ดูตัวเลือก** แล้วเลือก **พร้อมภาพ**

- 3 จากนั้นกลับไปที่สุดโทรศัพท์และเลือกรายชื่อที่คุณต้องการเพิ่มรูปภาพ
- 4 เลือก **ตัวเลือก** แล้วเลือก **แก้ไข**
- 5 เลื่อนลงไปในส่วน **รูปภาพ** เลือก **ตัวเลือก** แล้วเลือก **ภาพ** หรือ **ภาพใหม่** หากคุณเลือก **ภาพ** คุณสามารถเลือกภาพที่บันทึกไว้ในหน่วยความจำโทรศัพท์ของคุณได้ หากคุณเลือก **ภาพใหม่** ช่องมองภาพของกล้องถ่ายรูปจะเปิดขึ้นเพื่อให้คุณถ่ายรูปบุคคลในรายชื่อของคุณ
- 6 เลือก **บันทึก**

การคัดลอกรายชื่อไปยังซิม

คุณสามารถเลือกคัดลอกรายชื่อจากซิมไปยังเครื่องโทรศัพท์ หรือจากเครื่องโทรศัพท์ไปยังซิมของคุณได้

- 1 แตะที่ **รายชื่อ** แล้วเลือก **คัดลอกทั้งหมด**
- 2 เลือกเพื่อคัดลอกรายชื่อจาก **ซิมไปเครื่อง** หรือ **เครื่องไปซิม**
- 3 เลือกว่าจะเก็บรายชื่อต้นฉบับไว้หรือลบทิ้ง
- 4 แตะที่ **ใช่** เมื่อคุณแน่ใจ

การลบรายชื่อทั้งหมด

- 1 แตะที่ **รายชื่อ** แล้วเลือก **ลบทั้งหมด**
- 2 เลือกเพื่อลบรายชื่อจาก **ซิม** หรือ **โทรศัพท์**
- 3 เลือก **ใช่** เมื่อคุณแน่ใจ
- 4 และป้อนรหัสผ่าน ซึ่งได้รับการตั้งค่าเริ่มต้นเป็น 0000 การ์ดของคุณจะได้รับการฟอร์แมต เลือก **ตกลง**

การดูข้อมูล

แตะที่ **รายชื่อ** แล้วเลือก **ข้อมูล** จากขั้นตอนนี้ คุณจะสามารถดู **เบอร์บริการ**, **เบอร์ส่วนตัว** และ **นามบัตร** ของคุณได้

เคล็ดลับ! หากคุณยังไม่ได้สร้างนามบัตรหน้าจอ **นามบัตร** จะมีตัวเลือกในการสร้างให้กับคุณ เลือก **สร้าง** และป้อนรายละเอียดที่คุณต้องการสำหรับรายชื่อใดๆ เลือก **บันทึก**

- 01
- 02
- 03
- 04
- 05
- 06
- 07
- 08

ข้อความ

ข้อความ

โทรศัพท์ KC550 ของคุณประกอบด้วยฟังก์ชันที่เกี่ยวกับ SMS (Short Message Service), MMS (Multimedia Message Service), อีเมล รวมทั้งข้อความบริการของเครือข่าย เพียงแตะที่ **เมนู** แล้วเลือก **ข้อความ**

การส่งข้อความ

- 1 แตะที่ **เมนู** เลือก **ข้อความ** แล้วเลือก **ข้อความใหม่**
- 2 เลือก **ข้อความ** เพื่อส่ง SMS หรือ MMS (หากคุณต้องการส่ง **อีเมล** โปรดดูที่หน้า 28~29 หรือหากคุณต้องการส่งข้อมูลโดยใช้ **บลูทูธ** โปรดดูที่หน้า 52)
- 3 เดีเดิเตอร์ข้อความใหม่จะเปิดขึ้น เดีเดิเตอร์ข้อความจะรวม SMS และ MMS เข้าด้วยกันเพื่อให้ใช้งานและสลับระหว่างโหมด SMS และโหมด MMS ได้อย่างง่ายดาย โหมดเริ่มต้นของเดีเดิเตอร์ข้อความ คือโหมด SMS
- 4 ป้อนข้อความของคุณโดยใช้ระบบช่วยสะกดคำ T9 หรือการป้อนตัวอักษรด้วยตนเอง โปรดดูวิธีการสลับระหว่างโหมดการป้อนข้อความแบบต่างๆ จาก **การป้อนข้อความ** ที่หน้า 27

- 5 แตะที่ **ตัวเลือก** แล้วเลือก **แทรก** เพื่อแทรกภาพ, เสียง, วิดีโอ, สัญลักษณ์, ข้อความอัตโนมัติ, อีโมติคอน, ข้อ & เบอร์, สไลด์ใหม่, หัวเรื่อง หรืออื่นๆ (รายชื่อ/นามบัตร/นัดหมาย)

6 แตะที่ **ส่งไปที่**

- 7 ป้อนหมายเลขโทรศัพท์หรือแตะที่ **ตัวเลือก** และเลือก **รายชื่อ** เพื่อเปิดรายชื่อติดต่อ คุณสามารถเพิ่มรายชื่อติดต่อหลายรายการได้

8 แตะที่ **ส่ง**



คำเตือน: หากมีการแทรก ภาพ, เสียง, วิดีโอ, สไลด์ใหม่ หรือ หัวเรื่องลงในเดีเดิเตอร์ข้อความ การส่งข้อความจะถูกแปลงเป็นโหมด MMS และคุณจะถูกเรียกเก็บค่าบริการในอัตราดังกล่าว

การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษรได้โดยใช้ปุ่มกดของโทรศัพท์ ตัวอย่างเช่น การบันทึกชื่อในรายชื่อ การเขียนข้อความ และการสร้างตารางนัดหมายในปฏิทินล้วนแต่ต้องใช้การป้อนข้อความทั้งสิ้น ในเครื่องมีวิธีป้อนข้อความให้เลือกใช้ได้ดังนี้ระบบช่วยสะกดคำ T9, การป้อนตัวอักษรด้วยตนเอง และโหมด 123

หมายเหตุ: ฟิลด์บางฟิลด์อาจใช้โหมดป้อนข้อความได้โหมดเดียว (เช่น หมายเลขโทรศัพท์ในฟิลด์สมุดแอดเดรส)

หากต้องการเปิดระบบช่วยสะกดคำ T9 ในฟิลด์การป้อนข้อความ ให้เลือก **ตัวเลือก** เลือก **ภาษาของ T9** แล้วเลือก **เปิด** เมื่อระบบช่วยสะกดคำ T9 เปิดอยู่ คุณสามารถสลับโหมดการป้อนข้อความได้โดยการกดปุ่ม **#*0** คุณจะเห็นสัญลักษณ์บอกโหมดการป้อนข้อความที่มุมบนขวาของหน้าจอ

หากต้องการป้อนสัญลักษณ์ลงในฟิลด์การป้อนข้อความ ให้กดปุ่ม ***#*** แล้วเลือกสัญลักษณ์ จากนั้นเลือก **ตกลง** เมื่อสิ้นสุดการป้อนค่าหนึ่งค่า ให้เว้นวรรคโดยกด **1**

หากต้องการลบตัวอักษร ให้แตะที่ปุ่ม

C

ระบบช่วยสะกดคำ T9

ระบบช่วยสะกดคำ T9 จะใช้พจนานุกรมภายในเครื่อง เพื่อรับรู้อำนาจที่คุณเขียนตามลำดับการกดปุ่ม เพียงแตะที่ปุ่มตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณจะป้อน พจนานุกรมจะรับรู้ได้ถึงคำศัพท์ เมื่อคุณป้อนตัวอักษรครบทุกตัวแล้ว ตัวอย่างเช่น กด **4, 4, 7, 7, 5** เพื่อเขียนคำว่า 'ทดสอบ'

หมายเหตุ: คุณสามารถเลือกภาษา T9 ภาษาอื่นได้โดยแตะที่ **ตัวเลือก** แล้วเลือก **ภาษาที่ต่างๆของ T9**

โหมดการป้อนตัวอักษรด้วยตนเอง

ในโหมดการป้อนตัวอักษรด้วยตนเอง คุณอาจจำเป็นต้องแตะที่ปุ่มซ้ำๆ เพื่อป้อนตัวอักษร ตัวอย่างเช่น ในการเขียนคำว่า 'เรา' ให้กด **9** สามครั้ง, **6** ห้าครั้ง, **9** หนึ่งครั้ง

โหมด 123

ป้อนตัวเลขต่างๆ โดยกดปุ่มเพียงครั้งเดียวต่อตัวเลขหนึ่งตัว คุณสามารถเพิ่มตัวเลขได้ แม้ขณะที่ยังคงอยู่ในโหมดตัวอักษร โดยกดปุ่มตัวเลขที่ต้องการค้างไว้

01

02

03

04

05

06

07

08

ข้อความ

การตั้งค่าอีเมล

คุณสามารถติดต่อสื่อสารระหว่างการเดินทางได้โดยใช้อีเมลบนโทรศัพท์ KC550 ของคุณ ซึ่งสามารถตั้งค่าอีเมลแอดเดสส์แบบ POP3 หรือ IMAP4 ได้อย่างรวดเร็วและง่ายดาย

- 1 แตะที่ **เมนู เลือก ข้อความ แล้วเลือกตั้งค่า**
- 2 เลือก **อีเมล แล้วเลือกอีเมลแอดเดสส์**
- 3 แตะที่ **สร้าง**
- 4 คุณสามารถเลือกวิธีการทำงานของแอดเดสส์ได้ดังนี้
ชื่อแอดเดสส์ - ป้อนชื่อสำหรับแอดเดสส์นี้
อีเมลแอดเดสส์ - ป้อนอีเมลแอดเดสส์ของแอดเดสส์
ชื่อของคุณ
เซิร์ฟเวอร์เมลล์ขาเข้า - ป้อนรายละเอียดของแอดเดสส์
ชื่อผู้ใช้ - ป้อนชื่อผู้ใช้แอดเดสส์
รหัสผ่าน - ป้อนรหัสผ่านของแอดเดสส์
เซิร์ฟเวอร์เมลล์ที่ส่งออก - ป้อนรายละเอียดของแอดเดสส์
ตรวจสอบสิทธิ์เมลล์ที่ส่งออก - เลือกเปิดหรือปิด

ID เซิร์ฟเวอร์ขาออก - ป้อนรายละเอียดของแอดเดสส์

รหัสผ่านเซิร์ฟเวอร์ขาออก - ป้อนรายละเอียดของแอดเดสส์

หากต้องการป้อนข้อมูลต่อไปนี้อย่างรวดเร็ว ให้แตะที่ **ตัวเลือก** แล้วเลือก **ตั้งค่าขั้นสูง**

ประเภทโปรโตคอล - เลือกประเภทเมลล์บอกซ์ POP3 หรือ IMAP4

ขนาดการรับสูงสุด - เลือกขนาดที่จำกัดไว้ของอีเมล ขนาดการรับสูงสุดคือ 300KB

บันทึกในเซิร์ฟเวอร์ - เลือกว่าจะบันทึกอีเมลไว้ในเซิร์ฟเวอร์หรือไม่ เครื่องจะบันทึกสำเนาของแอดเดสส์แบบ IMAP4 ไว้เสมอ

บันทึกเมลล์ที่ส่งไปยัง - เลือกว่าจะบันทึกอีเมลไว้ในเซิร์ฟเวอร์ของโทรศัพท์หรือไม่ (เฉพาะ IMAP4)

แทรกลายเซ็น - เลือกว่าจะแทรกลายเซ็นในอีเมลของคุณโดยอัตโนมัติหรือไม่

อีเมลแอดเดสส์ที่ตอบกลับ - ป้อนอีเมลแอดเดสส์เพื่อใช้ "ตอบกลับ" หมายเลขเซิร์ฟเวอร์ขาเข้า - โดยทั่วไปหมายเลขนี้ คือ 110 สำหรับ POP3 และ 143 สำหรับแอดเดสส์แบบ IMAP4

หมายเลขพอร์ตที่ส่งออก -
หมายเลขพอร์ตปกติคือ 25
รับอัตโนมัติ - เลือกเพื่อรับอีเมลโดย
อัตโนมัติ
กำลังดาวน์โหลด - เลือก
เซตเดอร์ท่านั้น, เซตเดอร์ + บอดี้
(เฉพาะ IMAP4) หรือ ทั้งหมด

ในตอนนี คุณได้กำหนดค่าให้กับแอค
เคาท์เรียบร้อยแล้ว ซึ่งแอคเคาท์นี้จะ
ปรากฏอยู่ในรายการแอคเคาท์ในโพล
เดอร์ อีเมล

การส่งอีเมล

หากต้องการส่ง/รับอีเมล คุณควรตั้งค่า
อีเมลแอคเคาท์

- 1 แดะที่ เมนู เลือก **ข้อความ** แล้วเลือก
ข้อความใหม่
- 2 เลือก **อีเมล** และอีเมลใหม่จะเปิดขึ้น
- 3 เขียนหัวเรื่อง แล้วแดะที่ ตกลง
- 4 ป้อนข้อความของคุณโดยใช้ระบบช่วย
สะกดคำ T9 หรือ โหมดการป้อนตัว
อักษรด้วยตนเอง โปรดดูวิธีการสลับระ
หว่างโหมดการป้อนข้อความแบบต่างๆ
จาก **การป้อนข้อความ** ที่หน้า 27
- 5 แดะที่ ตัวเลือก แล้วเลือกสิ่งที่แนบที่
จะเพิ่ม: ภาพ, เสียง, วิดีโอ, เอกสาร,
รายชื่อ, นามบัตร และนัดหมาย

- 6 แดะที่ ส่ง แล้วป้อนแอคเดรสของผู้รับ
หรือแดะที่ **ตัวเลือก** แล้วเลือก
รายชื่อ เพื่อเปิดรายชื่อของคุณ
- 7 แดะที่ ส่ง แล้วอีเมลจะถูกส่งออกไป

โพลเดอร์ข้อความ

แดะที่ **เมนู** เลือก **ข้อความ** คุณจะรับรู้
ถึงโครงสร้างโพลเดอร์ที่ใช้ในโทรศัพท์
KC550 ได้ เนื่องจากโพลเดอร์ต่างๆ
มีโครงสร้างที่เข้าใจง่าย

ภาคเข้า - ข้อความทั้งหมดที่คุณ
ได้รับจะอยู่ในภาคเข้า จากที่นี้
คุณสามารถตอบกลับ, ส่งต่อ
และดำเนินการอื่นๆ ได้ โปรดดูราย
ละเอียดที่ด้านล่างนี้

เมลบ็อกซ์ - มีข้อความอีเมลของคุณ
ทั้งหมด เลือกแอคเคาท์ที่คุณต้องการใช้
แล้วแดะที่ **เรียกดู** โทรศัพท์ KC550
ของคุณจะเชื่อมต่อกับอีเมลแอคเคาท์
และดึงข้อมูลข้อความใหม่ให้คุณ

ร่าง - หากคุณยังเขียนข้อความไม่เสร็จ
คุณสามารถบันทึกสิ่งที่คุณเขียนไว้ที่นี่ได้

ภาคออก - โพลเดอร์นี้เป็นโพลเดอร์
จัดเก็บแบบชั่วคราวขณะที่กำลังส่งขอ
ความออกไป

ส่ง - ข้อความทั้งหมดที่ส่งออกไปจะอยู่ในโพลเดอร์ส่ง

01

02

03

04


05

06

07

08

ข้อความ


ฟังข้อความเสียง - คุณสามารถเข้าไปยังศูนย์ฝากข้อความเสียงของคุณได้ (หากเครือข่ายของคุณให้บริการ) เมื่อคุณได้รับข้อความเสียงข้อความใหม่ สัญลักษณ์  จะปรากฏขึ้นบนหน้าจอสแตนด์บาย

บริการข้อมูล - บริการข้อมูลและอัปเดตทั้งหมดที่ได้รับจากผู้ให้บริการ

ข้อความอัตโนมัติ - รายการข้อความที่เป็นประโยชน์ ที่ได้เขียนไว้แล้วสำหรับการตอบกลับแบบรวดเร็ว

การจัดการข้อความ

คุณสามารถใช้ **กดเข้า** ในการจัดการข้อความของคุณได้

1 **แตะที่ เมนู เลือก ข้อความ แล้วเลือก กดเข้า** หรือวิธีลัดคือการแตะ  บนหน้าจอสแตนด์บายค้างไว้ แล้วเลือก **ดู**

2 **เลือก ตัวเลือก แล้วเลือก:**

ลบ - ลบข้อความที่เลือก

ตอบ - ส่งข้อความตอบกลับไปยังข้อความที่เลือก

ส่งต่อ - ส่งข้อความที่เลือกไปยังบุคคลอื่น

โทรกลับ - โทรออกไปยังบุคคลที่ส่งข้อความ

ข้อมูล - ดูรายละเอียดของข้อความ ตัวอย่างเช่น เวลาที่ส่ง

คัดลอก/ย้าย - คุณสามารถเลือกที่จะคัดลอกหรือย้ายข้อความที่เลือกไปยังซิมการ์ดหรือโทรศัพท์ได้

ลบมัลติ - ลบข้อความต่างๆ ที่เลือกไว้

ลบที่อ่านทั้งหมด - ข้อความที่เปิดแล้วทั้งหมดจะถูกลบ

ลบทั้งหมด - คุณสามารถเลือกที่จะลบข้อความทั้งหมดหรือลบเฉพาะข้อความตัวอักษรก็ได้

หากมีข้อความ **ไม่มีที่ว่างสำหรับข้อความในซิมการ์ด** ปรากฏขึ้น คุณควรลบข้อความบางข้อความในถาดเข้าออก

หากมีข้อความ **ไม่มีที่ว่างสำหรับข้อความ** คุณสามารถลบข้อความหรือไฟล์ที่บันทึกออกได้ เพื่อสร้างพื้นที่

การใช้ข้อความอัตโนมัติ

คุณสามารถสร้างข้อความอัตโนมัติสำหรับ **ข้อความตัวอักษร** และ **ข้อความมัลติมีเดีย** ที่คุณส่งบ่อยๆ ได้ มีข้อความอัตโนมัติอยู่ในโทรศัพท์ของคุณอยู่แล้ว ซึ่งคุณสามารถแก้ไขได้หากต้องการ

1 **แตะที่ เมนู เลือก ข้อความ แล้วเลือก ข้อความอัตโนมัติ**

2 เลือก **ข้อความตัวอักษร** หรือ **มีลติมีเดีย** จากนั้น คุณสามารถเลือก **ตัวเลือก** และเลือก **แก้ไข** เพื่อเปลี่ยนแปลงข้อความอัตโนมัติ ที่มีอยู่ หรือเลือก **ตัวเลือก** เพื่อเพิ่มข้อความอัตโนมัติใหม่ หรือเพื่อลบข้อความอัตโนมัติ

3 ในการส่งข้อความอัตโนมัติ ให้เลือกข้อความอัตโนมัติที่คุณต้องการส่ง เลือก **ตัวเลือก** และเลือก **ส่งทาง**

4 เลือกวิธีที่คุณต้องการส่งข้อความอัตโนมัติ โดยส่งเป็น **ข้อความ**, **ข้อความบลูทูธ** หรือ **อีเมลล์**

5 เลือกรายชื่อแล้วแตะที่ **ส่ง**

การเปลี่ยนการตั้งค่าข้อความตัวอักษร

การตั้งค่าข้อความของโทรศัพท์ KC550 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่า คุณสามารถทำได้โดยใช้ตัวเลือก **ตั้งค่า** และที่ **เมนู** เลือก **ข้อความ** แล้วเลือก **ตั้งค่า** และ **ข้อความตัวอักษร** คุณสามารถเปลี่ยนแปลง:

ชนิดข้อความ - แปลงข้อความตัวอักษรเป็น เสียง, แฟกซ์, เพลงจิง, X.400, อีเมลล์ หรือ ERMES

ช่วงที่มีผลใช้ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

รายงานผลการส่ง - เลือกเพื่อรับการยืนยันว่าข้อความได้ส่งออกไปแล้ว

ค่าบริการตอบกลับ - เลือกทำให้คิดค่าใช้จ่ายกับคุณสำหรับการตอบกลับข้อความของผู้รับ

เบอร์ศูนย์ข้อความ - ป้อนรายละเอียดของศูนย์รับฝากข้อความ

การเข้ารหัสตัวอักษร - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความและค่าบริการส่งข้อความของคุณ

ส่งข้อความแบบยาวเป็น - เลือกว่าจะส่งข้อความของคุณเป็น SMS หรือ MMS เมื่อคุณป้อนข้อความที่มีความยาวเกินกว่า 2 หนาในฟิลด์ข้อความ

ตั้งค่า Bearer - เลือกว่าจะส่งข้อความของคุณทาง GSM หรือ GPRS

- 01
- 02
- 03
- 04
- 05
- 06
- 07
- 08

ข้อความ

การเปลี่ยนการตั้งค่าข้อความ มัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ KC550 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่า คุณสามารถทำได้โดยใช้ตัวเลือก **ตั้งค่า** และที่ **เมนู** เลือก **ข้อความ** แล้วเลือก **ตั้งค่า** และ **ข้อความมัลติมีเดีย**

คุณสามารถเปลี่ยนแปลง:

ระยะเวลาสไลด์ - เลือกระยะเวลาที่จะให้สไลด์ปรากฏบนหน้าจอ

ระดับความสำคัญ - เลือกระดับความสำคัญของข้อความมัลติมีเดีย

ช่วงที่มีผลใช้ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

รายงานผลการส่ง - เลือกเพื่อให้ส่งและ/หรือต้องการรายงานผลการส่ง

รายงานการอ่าน - เลือกเพื่อให้มีและ/หรือส่งรายงานการอ่าน

ดาวน์โหลดอัตโนมัติ - เลือกเพื่อดาวน์โหลดข้อความมัลติมีเดียโดยอัตโนมัติหรือด้วยตัวเอง ขึ้นอยู่กับว่าคุณใช้เครือข่ายหลักหรือโรมมิ่ง

โปรไฟล์เครือข่าย - เลือกโปรไฟล์เครือข่ายของผู้ให้บริการรายใดรายหนึ่งสำหรับการส่งข้อความมัลติมีเดีย

ประเภทข้อความที่อนุญาต - เลือกประเภทข้อความมัลติมีเดียที่จะอนุญาต

การเปลี่ยนการตั้งค่าอีเมล

คุณสามารถเปลี่ยนแปลงการตั้งค่าอีเมลให้เป็นค่าที่คุณกำหนดเองได้

1 **แตะที่** **เมนู** เลือก **ข้อความ** แล้วเลือก **ตั้งค่า**

2 เลือก **อีเมล** ซึ่งคุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:

อีเมลแอดเดสส์ - คุณสามารถตั้งค่าอีเมลแอดเดสส์

จุดเชื่อมต่อ - คุณสามารถตั้งค่าจุดเชื่อมต่อของอีเมลได้

รอบเวลาการเรียกดู - เลือกความถี่ที่จะให้โทรศัพท์ KC550 ตรวจสอบข้อความอีเมลใหม่

ลายเซ็น - สร้างลายเซ็นในอีเมลและเปิดคุณสมบัตินี้

การเปลี่ยนการตั้งค่าอื่นๆ

แตะที่ **เมนู เลือก ข้อความ เลือก ตั้งค่า** จากนั้นเลือก:

ศูนย์ข้อความเสียง - หมายเลขข้อความเสียงของคุณจัดเก็บไว้ที่นี่ ติดต่อให้ผู้ให้บริการระบบเครือข่ายของคุณสำหรับข้อมูลเพิ่มเติมเกี่ยวกับบริการที่มีให้

ข้อความบริการ - คุณสามารถปิดข้อความบริการได้ที่นี่ ซึ่งหมายความว่าข้อความของคุณจะไม่ถูก Push ไปยังอุปกรณ์ของคุณโดยตรงเมื่อคุณได้รับความ แต่จะถูก Push เมื่อคุณตรวจสอบข้อความใหม่

บริการข้อมูล - เลือกสถานะการรับการเตือน และภาษาของบริการข้อมูล

บันทึกข้อความอักษร - คุณสามารถเลือกที่เก็บข้อความได้จากเมนูนี้

01

02

03

04

05

06

07

08

กล้องถ่ายรูป

การถ่ายภาพด้วย


- 1 เปิดสไลด์ กดปุ่มกล้องถ่ายรูปที่ด้านขวาของตัวเครื่องค้างไว้ และช่องมองภาพของกล้องถ่ายรูปจะปรากฏขึ้นบนหน้าจอ
- 2 ให้ถือโทรศัพท์ในแนวนอน และหันเลนส์ไปทางสิ่งที่ต้องการถ่าย
- 3 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของตัวเครื่องครึ่งหนึ่ง ช่องโฟกัสจะปรากฏขึ้นที่ตรงกลางของหน้าจอ ช่องมองภาพ ให้จัดตำแหน่งโทรศัพท์ทจนคุณเห็นวัตถุที่จะถ่ายอยู่ในช่องโฟกัส เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 4 กดปุ่มเลือกตรงกลางหรือกดปุ่มกล้องถ่ายรูปลงจนสุดเพื่อถ่ายรูป


หมายเหตุ: คุณยังสามารถเข้าใช้เมนูกล้องถ่ายรูปได้จากหน้าจอสแตนด์บาย และที่ **เมนู** แล้วเลือก **มัลติมีเดีย** เลื่อนลงไปเพื่อเลือก **กล้องถ่ายรูป** เพื่อเปิดช่องมองภาพ


หลังจากที่ถ่ายภาพแล้ว


ภาพที่ถ่ายจะปรากฏบนหน้าจอ ชื่อภาพจะวิ่งที่ด้านล่างของหน้าจอ และคุณจะเห็นตัวเลือกหกข้อแสดงอยู่ที่ด้านขวาของหน้าจอ

ลบ - และเพื่อลบรูปภาพที่คุณเพิ่งถ่าย และยืนยันโดยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

 **ภาพใหม่** - และเพื่อถ่ายอีกภาพหนึ่งทันที โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้

 **ตั้งเป็น** - และเพื่อเปิดเมนูย่อยเพื่อตั้งค่าภาพของคุณเป็น **พื้นหลัง** หรือ **ID ภาพ**

 **ส่งทาง** - และเพื่อส่งรูปภาพเป็น **ข้อความ** **มัลติมีเดีย** หรือ **อีเมล** โปรดดูที่หน้า 26 สำหรับการส่งข้อความ

 **อัลบั้ม** - และเพื่อดูรูปภาพอื่นๆ ในอัลบั้มของคุณ โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้ โปรดดูหน้า 36 สำหรับการดูภาพถ่ายที่บันทึกไว้

ตกลง - และเพื่อถ่ายอีกภาพหนึ่งทันที โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้

ทำความเข้าใจกับช่องมองภาพ

หมายเหตุ: คุณสามารถปรับการซูมโดยใช้ปุ่มปรับระดับเสียงที่ด้านซ้ายของโทรศัพท์ ฟังก์ชันซูมจะใช้ได้เฉพาะเมื่อตั้งค่าความละเอียดเป็น 640 x 480 หรือต่ำกว่า โปรดดูรายละเอียดที่

การเปลี่ยนขนาดภาพ ในหน้า 37

เคล็ดลับ! ในขณะที่ใช้งานกล้องถ่ายรูป โทรศัพท์จะใช้พลังงานมากขึ้น หากไอคอน ปรากฏขึ้นเพื่อแสดงว่าแบตเตอรี่เหลือน้อย ให้ชาร์จแบตเตอรี่ก่อนใช้งาน

เวลาหน่วง - ใช้เพื่อตั้งเวลาในการถ่ายภาพ เวลาที่ตั้งไว้เป็นเวลาที่จะถ่ายหลังจากกดชัตเตอร์

โหมดชัตต - สามารถเลือกจำนวนชัตตในการถ่ายได้สูงสุดถึง 9 ชัตต เหมาะสำหรับถ่ายภาพเคลื่อนไหว.

สมดุลแสง - สมดุลแสงจะช่วยให้มั่นใจได้ว่าแสงขาวที่ปรากฏในภาพจะสวยงามจริง เพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน เลือกจากโหมดอัตโนมัติ, แสงแดด, หลอดไฟ, มิตรครีမ် หรือ ฟลูออเรสเซนซ์หรือกลางแจ้ง

เอฟเฟกต์สี - มีโทนสีให้เลือก 4 แบบ: ปัด (ปกติ/สี), ซีเปีย, โมโน (ขาวดำ) หรือ เนกาทีฟ.

EV - เปิดโหมด มาโคร ถ้าคุณถ่ายในระยะใกล้.

ความละเอียด - โปรดดูที่ **การเปลี่ยนขนาดภาพ** ในหน้า 37

01

02

03

04

05

06

07

08

กล้องถ่ายรูป

คุณภาพ - เลือกระหว่าง **ปกติ**, **ละเอียด** และ **ละเอียดมาก** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของภาพถ่ายก็มากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่งหมายความว่า คุณจะไม่สามารถจัดเก็บภาพถ่ายในหน่วยความจำได้น้อยลง

ลดการสั่น - เลือก **เปิด** เพื่อช่วยในการถ่ายภาพในกรณีที่มีมือไม่นิ่ง

โฟกัสอัตโนมัติ - เปิดหรือปิดโฟกัสอัตโนมัติ กล้องถ่ายรูปของคุณสามารถปรับโฟกัสเพื่อให้ได้ภาพที่คมชัดยิ่งขึ้นโดยอัตโนมัติ โดยกดปุ่มกล้องถ่ายรูปเพียงแคครั้งเดียว

หน้าจอจอกริต - คุณสามารถตั้งค่าเส้นแนวบนหน้าจอของมองภาพของคุณได้ เลือก **ปิด**, **อย่างง่าย** หรือ **สามส่วน**

ISO - มีค่าให้เลือก ISO อัตโนมัติ, ISO 800, ISO 400, ISO200, ISO 100 หรือ ISO 80.

บันทึกใน - เลือกว่าจะบันทึกรูปภาพของคุณไว้ในหน่วยความจำโทรศัพท์หรือในหน่วยความจำภายนอก

รีเซ็ตการตั้งค่า - เลือก **ใช่** เพื่อรีเซ็ตโทรศัพท์ของคุณไปเป็นการตั้งค่าดั้งเดิมของกล้อง

การเปลี่ยนขนาดภาพ

คุณสามารถเปลี่ยนขนาดของรูปภาพเพื่อประหยัดพื้นที่หน่วยความจำ จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งอีกนัยหนึ่งก็คือการใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บรูปภาพในโทรศัพท์ให้มากขึ้น คุณสามารถแก้ไขจำนวนพิกเซลเพื่อทำให้ไฟล์มีขนาดเล็กลงได้

- 1 **แตะที่ ตัวเลือก แล้วเลือก ความละเอียด** จากแถบเครื่องมือ
- 2 **เลือกค่าพิกเซลจากตัวเลือกหัวตัวเลือก** (320X240, 640X480, 1280X960, 1600X1200, 2048X1536)
- 3 **เลือกตัวเลือกขนาดที่คุณต้องการใช้ และแตะที่ ตกลง** เพื่อใช้การเปลี่ยนแปลงที่คุณเลือก

การดูภาพถ่ายที่บันทึกไว้

- 1 คุณสามารถเข้าดูภาพถ่ายที่บันทึกไว้ได้จากภายในโหมดกล้องถ่ายภาพ และจากหน้าจอสแตนด์บาย จากช่องมองภาพ เพียงแตะที่ **อัลบั้ม** จากหน้าจอสแตนด์บาย คุณควรแตะที่ **เมนู** แล้วเลือก **เพิ่มข้อมูล** และ **ภาพ**
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 ใช้ลูกศรเพื่อเลือกรูปภาพที่คุณต้องการดู และแตะที่ **ดู** เพื่อขยายภาพ

การตั้งค่าภาพถ่ายเป็นภาพพื้นหลัง หรือ ID ภาพ

จากคลังภาพของคุณ ใช้ลูกศรบนทัชแพดเพื่อเลือกภาพ และแตะที่ **ตั้งเป็น** เพื่อใช้ภาพที่เลือกเป็น **พื้นหลัง** หรือ **ID ภาพ** สำหรับรายชื่อของคุณหนึ่งรายชื่อ

หมายเหตุ: สามารถเพิ่ม ID ภาพลงในรายชื่อที่บันทึกอยู่ในเครื่องเท่านั้น ไม่ใช่ในซิม

01

02

03

04

05

06

07

08

กล้องวิดีโอ

การถ่ายวิดีโอผ่าน


- 1 เปิดสไลด์ กดปุ่มกล้องถ่ายรูปที่ด้านขวาของตัวเครื่องค้างไว้ และช่องมองภาพของกล้องถ่ายรูปจะปรากฏขึ้นบนหน้าจอ
- 2 และที่ **ตัวเลือก** แล้วเลือก **กล้องวิดีโอ** ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 หันเลนส์ไปทางวัตถุที่ต้องการถ่าย
- 4 กดปุ่มกล้องถ่ายรูปที่ด้านขวามือของตัวเครื่องเครื่องเพื่อเริ่มต้นการบันทึก
- 5 **REC** จะปรากฏขึ้นในมุมซ้ายด้านล่างของช่องมองภาพ และตัวตั้งเวลาจะแสดงระยะเวลาของวิดีโอของคุณ
- 6 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่ **พัก** และเริ่มบันทึกต่อโดยเลือก **ต่อ**
- 7 และที่ **หยุด** เพื่อหยุดการบันทึก


หมายเหตุ: คุณยังสามารถเข้าใช้ **กล้องวิดีโอ** ได้จากหน้าจอสแตนด์บาย และที่ **เมนู** แล้วเลือก **มีลดีมีเดีย** เลื่อนลงไปแล้วเลือก **กล้องวิดีโอ** เพื่อเปิดช่องมองภาพ


หลังจากที่ถ่ายวิดีโอแล้ว


ชื่อวิดีโอจะวิ่งที่ด้านล่างของหน้าจอ และตัวเลือกกดตัวเลือกจะแสดงขึ้นที่ด้านบน ขวาของหน้าจอ

ลบ - และเพื่อลบวิดีโอที่คุณเพิ่งบันทึกและยืนยันโดยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

 **วิดีโอใหม่** - และเพื่อบันทึกวิดีโอใหม่ทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้

 **เล่น** - และเพื่อเล่นวิดีโอที่คุณเพิ่งบันทึก

 **ส่งทาง** - และเพื่อส่งวิดีโอเป็น **ข้อความมีลดีมีเดีย** หรือ **อีเมล** โปรดดูหน้าที่ 26 สำหรับการส่งข้อความ

 **อัลบั้ม** - และเพื่อดูวิดีโอคลิปอื่นๆ ในอัลบั้มของคุณ โดยที่วิดีโอคลิปปัจจุบันของคุณจะได้รับการบันทึกไว้ โปรดดูหน้าที่ 40 สำหรับการดูวิดีโอที่บันทึกไว้

ตกลง - และเพื่อบันทึกวิดีโอเรื่องอื่นทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้

ทำความเข้าใจกับช่องมองภาพ คุณสามารถตั้งค่าต่างๆได้ดังนี้

โหมด - ในการถ่ายวิดีโอที่คุณต้องการส่งในข้อความมีลดีมีเดีย ให้เลือก **MMS**

เอฟเฟกต์สี - เลือกจากตัวเลือก โทนสีสีตัวเลือกดังนี้: **ปิด** (ปกติ/สี), **ซีเปีย**, **โมโน** (ขาวดำ) หรือ **เนกาทีฟ**

ค่าการรับแสง - ความเข้มเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืดในภาพ ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมัว ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า แต่ที่ลูกศร < และ > แล้วเลือกตัวบ่งชี้ความเข้มตามแถบไปทางด้าน - เพื่อให้ได้ภาพที่มีความเข้มนวลลงและมัวมากขึ้น หรือไปทางด้าน + เพื่อให้ได้ภาพที่มีความเข้มสูงขึ้นและคมชัดยิ่งขึ้น

ความละเอียด - หากคุณต้องการเก็บวิดีโอลงในโทรศัพท์ของคุณให้มากขึ้น คุณสามารถแก้ไขจำนวนพิกเซลเพื่อให้ไฟล์มีขนาดเล็กลงได้ เลือกตัวเลือก **320 x 240** หรือ **176 x 144** สำหรับวิดีโอของคุณ

คุณภาพ- ละเอียดยมาก/ ละเอียด/ ปกติ
บันทึกใน - เลือกว่าจะบันทึกวิดีโอคลิปของคุณไว้ในหน่วยความจำโทรศัพท์หรือในหน่วยความจำภายนอก

แฟลช - **เปิด** หรือ **ปิด** แฟลช
ค่าเริ่มต้นของแฟลช คือ **ปิด** เพื่อประหยัดพลังงานแบตเตอรี่ เมื่อใดก็ตามที่คุณออกจากเมนูกล้องถ่ายรูป ค่าจะกลับคืนเป็นการตั้งค่าเริ่มต้นคือ **ปิด**

สมดุลแสง - สมดุลแสงจะช่วยให้คุณมั่นใจได้ว่าแสงขาวที่ปรากฏในวิดีโอจะสวยสมจริง เพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน เลือกจากโหมดอัตโนมัติ, แสงแดด, หลอดไฟ, มืดครึ้ม, ฟลูออเรสเซนต์หรือกลางคืน

อัลบั้ม - เปิดอัลบั้ม.

รีเซ็ตการตั้งค่า - เลือก **ใช่** เพื่อรีเซ็ตโทรศัพท์ของคุณไปเป็นการตั้งค่าดั้งเดิมของวิดีโอ

01

02

03

04

05

06

07

08

กล่องวิดีโอ

การดูวิดีโอที่บันทึกไว้

- 1 คุณสามารถเข้าดูวิดีโอที่บันทึกไว้ได้จากภายในโหมดกล่องวิดีโอ หรือจากหน้าจอสแตนด์บายจากช่องมองภาพ เพียงแตะที่ **อัลบั้ม** จากหน้าจอสแตนด์บาย คุณควรแตะที่ **เมนู** แล้วเลือก **แฟ้มข้อมูล** และ **วิดีโอ**
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 ใช้ปุ่มลูกศรเพื่อเลือกวิดีโอที่คุณต้องการดู และแตะที่ปุ่มเลือกตรงกลางเพื่อดูวิดีโอ

การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะเล่น ให้ใช้ปุ่มปรับระดับเสียงที่ด้านซ้ายมือของเครื่องโทรศัพท์

เครื่องเล่น MP3

เครื่องเล่น MP3

LG KC550 มีเครื่องเล่น MP3 ภายในตัว ที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้

หากต้องการเข้าใช้เครื่องเล่น MP3

ให้แตะที่ **เมนู** แล้วเลือก **มีลติมีเดีย**

จากนั้นเลือก **เครื่องเล่น MP3**

หรือคุณสามารถเข้าใช้เครื่องเล่น MP3 ได้โดยการกดปุ่มเครื่องเล่น MP3 ที่ด้านขวาของตัวเครื่องเบาๆ จากขั้นตอนนี้ คุณสามารถเข้าใช้งาน:

ทุกเพลง - ประกอบด้วยเพลงทั้งหมดที่มีในโทรศัพท์

รายการเพลงส่วนตัว - ประกอบด้วยรายการเพลงที่คุณสร้างไว้ รวมถึง **รายการ OTL, เพลงล่าสุด และ เพลงที่ชอบ**

ศิลปิน - เบลาส์ดูรายการเพลงที่เก็บไว้ตามศิลปิน

อัลบั้ม - เบลาส์ดูรายการเพลงที่เก็บไว้ตามอัลบั้ม

แนวเพลง - เบลาส์ดูรายการเพลงที่เก็บไว้ตามแนวเพลง

ตั้งค่า - ปรับการตั้งค่าเพลง

การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธ หรือสายสำหรับซิงโครไนซ์ ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และต่างมองเห็นกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์ แล้วเลือกเพื่อส่งทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์ควรปรากฏอยู่ใน **ทุกเพลง**

การเล่นเพลง

- 1 แตะที่ **เมนู** แล้วเลือก **มีลติมีเดีย** แล้วเลือก **เครื่องเล่น MP3**
- 2 เลือกเพลงที่คุณต้องการเล่น แตะที่ ▶
- 3 แตะที่ || เพื่อหยุดเล่นเพลงชั่วคราว
- 4 แตะที่ ►► เพื่อข้ามไปยังเพลงถัดไป
- 5 แตะที่ ◀◀ เพื่อข้ามไปยังเพลงก่อนหน้า
- 6 เลื่อน **c** เพื่อหยุดเล่นเพลง และกลับไปเมนูเพลง

01

02

03

04

05

06

07

08

เครื่องเล่น MP3

เคล็ดลับ! หากต้องการเปลี่ยนระดับเสียง ในขณะที่ฟังเพลง ให้ใช้ปุ่มปรับระดับเสียงตามข้างโทรศัพท์

การใช้ตัวเลือกขณะเล่นเพลง

เลือก **ตัวเลือก** และเลือก:

เล่นแบ็คกราว์น - ขอนหน้าจอเครื่องเล่นเพลง เพื่อให้คุณสามารถใช้งานโทรศัพท์ต่อไปได้ตามปกติขณะเล่นเพลง

ดูรายการเพลง - ดูรายการเพลงที่คุณกำลังฟังอยู่

เพิ่มในรายการเพลง - เพิ่มเพลงปัจจุบันลงในรายการเพลง

ตั้งเป็นเสียงเรียกเข้า - ตั้งเพลงปัจจุบันเป็นเสียงเรียกเข้า

ข้อมูล - คุณสามารถดูข้อมูลเกี่ยวกับไฟล์ MP3 ที่คุณกำลังฟังอยู่ได้

ตั้งค่า - เปลี่ยน **อีควอไลเซอร์** หรือ **โหมดการเล่น** หรือ **ตั้งการสับเปลี่ยน** เพื่อปรับค่าการเล่นเพลง

การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณเองได้โดยการเลือกเพลงจากโพลเดอ์ทุกเพลง

1 แตะที่ **เมนู** แล้วเลือก **มีลติมีเดีย**

2 เลือก **เครื่องเล่น MP3** แล้วเลือก **รายการเพลงส่วนตัว**

3 แตะที่ **ตัวเลือก** แล้วเลือก **รายการเพลงใหม่** ป้อนชื่อรายการเพลงแล้วแตะที่ **บันทึก**

4 โพลเดอ์ **รายการเพลงใหม่** จะปรากฏขึ้น เลือกเพลงทั้งหมดที่คุณต้องการใส่ไว้ในรายการเพลงโดยเลื่อนไปที่เพลงที่คุณต้องการ แล้วแตะที่ จะมีเครื่องหมายปรากฏอยู่ข้างชื่อเพลงเหล่านั้น หากคุณเพิ่มเพลงที่ไม่ต้องการโดยไม่ได้ตั้งใจ ให้เลือกเพลงนั้น แล้วแตะ อีกครั้งเพื่อลบเครื่องหมายออก

5 แตะที่ **บันทึก** เพื่อจัดเก็บรายการเพลง

การเล่นรายการเพลง

1 แตะที่ **เมนู** แล้วเลือก **มีลติมีเดีย**

2 เลือก **เครื่องเล่น MP3** แล้วเลือก **รายการเพลงส่วนตัว**

3 เลือกรายการเพลงที่คุณต้องการเล่นแล้วแตะที่ **ดู** และเลือก ▶

การแก้ไขรายการเพลง

ในบางครั้ง คุณอาจต้องการเพิ่มเพลงหรือลบเพลงออกจากรายการเพลง

หากคุณต้องการจัดเรียงรายการเพลงของคุณ คุณสามารถแก้ไขได้โดยใช้เมนู **ตัวเลือก**

- 1 แตะที่ **เมนู** แล้วเลือก **มีลดีมีเดีย**
- 2 เลือก **เครื่องเล่น MP3** แล้วเลือก **รายการเพลงส่วนตัว**
- 3 เลื่อนไปที่รายการเพลงที่คุณต้องการแก้ไข แล้วแตะที่ **ดู** แล้วเลือก **ตัวเลือก** เลือก:

เพิ่ม - คุณสามารถเพิ่มเพลงลงในรายการเพลงโดยใช้ตัวเลือกนี้

ลบ - ลบเพลงออกจากรายการเพลงเลือก **ใช่** เพื่อยืนยัน

ลบมีลดี - ลบเพลงที่เลือกออกจากรายการเพลง

ลบทั้งหมด - ลบเพลงทั้งหมดออกจากรายการเพลง

ข้อมูล - ดูข้อมูลรายการเพลง

การลบรายการเพลง

- 1 แตะที่ **เมนู** แล้วเลือก **มีลดีมีเดีย**
- 2 เลือก **เครื่องเล่น MP3** แล้วเลือก **รายการเพลงส่วนตัว**
- 3 เลื่อนไปที่รายการเพลงที่คุณต้องการลบ แล้วแตะที่ **ตัวเลือก**
- 4 เลือก **ลบทั้งหมด** แล้วเลือก **ใช่** เพื่อยืนยัน

หมายเหตุ:

ผลลัพธ์ของระบบจัดการสิทธิ์ดิจิทัล (DRM) มีเดียบางรายการที่คุณดาวน์โหลดจากอินเทอร์เน็ตหรือได้รับจาก MMS อาจมีเมนู "ส่งข้อสิทธิ์" เพื่อเข้าใช้มีเดียเหล่านั้น คุณสามารถครอบครองคีย์ที่จะส่งข้อสิทธิ์จากเว็บไซต์ที่เป็นเจ้าของสิทธิ์ในเนื้อหานั้น

เพลงได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้สิทธิ์ในการทำซ้ำ หรือคัดลอกเพลงในกฎหมายของบางประเทศมีข้อห้ามในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง โปรดตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ เมื่อเล่นเพลง MP3 ด้วยเครื่องเล่น MP3 คุณสามารถใช้โหมด BGM ได้หากคุณกดปุ่ม MP3 ครึ่งหนึ่งในโหมด BGM คุณสามารถเล่นเพลง MP3 ขณะที่ใช้งานฟังก์ชันอื่นๆ อยู่ได้ คุณสามารถหยุด BGM บนหน้าจาวงเครื่องเล่น MP3 ได้

01

02

03

04

05

06

07

08

วิทยุ FM

การใช้วิทยุ FM

LG KC550 มีคุณสมบัติวิทยุ FM ดังนั้นคุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

หมายเหตุ: คุณจะต้องเสียบชุดหูฟังเพื่อรับฟังวิทยุ เสียบปลั๊กเข้ากับช่องเสียบที่ตัวเครื่อง (เป็นช่องเสียบเดียวกับที่ใช้สำหรับชาร์จ)

การค้นหาสถานี

คุณสามารถตั้งสถานีวิทยุไว้ในโทรศัพท์ได้ โดยการค้นหาด้วยตนเองหรือโดยอัตโนมัติ สถานีเหล่านี้จะถูกบันทึกไว้ในหมายเลขช่องสถานีที่ระบุไว้ ดังนั้นคุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก คุณสามารถบันทึกได้สูงสุด 12 ช่องสถานีในโทรศัพท์ของคุณ

ในการปรับตั้งอัตโนมัติ:

- 1 **แตะที่ เมนู แล้วเลือก มัลติมีเดีย** จากนั้นเลือก **วิทยุ FM**
- 2 เลือก **ตัวเลือก** เลือก **สแกนอัตโนมัติ** แล้วเลือก **ใช่**
- 3 แต่ละครั้งที่พบสถานี โทรศัพท์ KC550 จะถามคุณว่าคุณต้องการบันทึกหรือไม่ เลือก **ใช่** หากคุณต้องการจัดเก็บช่องและ **ไม่** หากคุณไม่ต้องการสถานีที่คุณเลือกบันทึกจะถูกกำหนดไว้ในหมายเลขช่องสถานีในโทรศัพท์โดยอัตโนมัติ

LG KC550 | คู่มือการใช้

ในการปรับตั้งด้วยตนเอง:

- 1 **แตะที่ เมนู แล้วเลือก มัลติมีเดีย** จากนั้นเลือก **วิทยุ FM**
- 2 เลือกหมายเลขช่องสถานีที่ต้องการบันทึกสถานีไว้ และเลือก **แก้ไข**
- 3 หากต้องการป้อนสถานี คุณสามารถใช้ลูกศรบนทัชแพดในการค้นหาหรือคุณสามารถป้อนความถี่โดยใช้ปุ่มกด จากนั้นเลือก **บันทึก**

หมายเหตุ: คุณยังสามารถแก้ไขสถานีที่คุณบันทึกไว้แล้วในหมายเลขช่องได้

เคล็ดลับ! ในการเพิ่มประสิทธิภาพการรับสัญญาณ ให้ยึดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ

การรีเซ็ตสถานี

- 1 **แตะที่ เมนู แล้วเลือก มัลติมีเดีย** จากนั้นเลือก **วิทยุ FM**
- 2 เลือก **ตัวเลือก** แล้วเลือก **รีเซ็ตช่อง** เลือก **ใช่** เพื่อยืนยันการรีเซ็ต ช่องสถานีแต่ละช่องจะกลับไปความถี่เริ่มต้น 87.5Mhz

การฟังวิทยุ

- 1 **แตะที่ เมนู แล้วเลือก มัลติมีเดีย** จากนั้นเลือก **วิทยุ FM**
- 2 เลือกหมายเลขช่องของสถานีที่คุณต้องการฟัง

เครื่องบันทึกเสียง

การใช้เครื่องบันทึกเสียง

ใช้ เครื่องบันทึกเสียง เพื่อบันทึกเสียง
เตือนความจำหรือเสียงอื่นๆ

การบันทึกเสียงเตือนของคุณ

- 1 แตะที่ **เมนู** แล้วเลือก **มีลดีมีเดีย**
จากนั้นเลือก **เครื่องบันทึกเสียง**
- 2 แตะที่ **●** เพื่อเริ่มบันทึก
- 3 เลือก **พัก** เพื่อหยุดการบันทึกชั่วคราว
- 4 เลือก **บันทึก** เพื่อสิ้นสุดการบันทึก
เสียง
- 5 เลือก **▶** เพื่อฟังการบันทึก

หมายเหตุ: คุณสามารถฟังการบันทึก
เสียงทั้งหมดที่คุณบันทึกไว้ได้โดยการ
เลือก **ตัวเลือก** และ **อัลบั้ม**

การส่งการบันทึกเสียง

- 1 เมื่อคุณบันทึกเสียงเสร็จแล้ว ให้เลือก
ตัวเลือก
- 2 เลือก **ส่งทาง** แล้วเลือกจาก
ข้อความมีลดีมีเดีย, **บลูทูธ** หรือ
อีเมล หากคุณเลือก **ข้อความ** หรือ
อีเมล รายการที่บันทึกจะแนบไปกับ
ข้อความ และคุณสามารถเขียนและ
ส่งข้อความได้ตามปกติ หากคุณเลือก
บลูทูธ เครื่องจะแสดงข้อความให้คุณ
เปิดบลูทูธ

เคล็ดลับ! หากคุณต้องการส่งการบันทึก
ของคุณเป็นข้อความ ก่อนที่จะเริ่ม
บันทึกบันทึก ให้แตะที่ **ตัวเลือก** เลือก
โหมดการบันทึก แล้วเลือก **MMS** ซึ่งจะ
ทำให้แน่ใจว่าการบันทึกจะพอดีกับข้อความ

Muvee studio

ด้วย Muvee studio
คุณสามารถสร้างภาพสไลด์
พร้อมเสียงเพลงได้
(แบบเพลงที่กำหนดมาให้)

01

02

03

04

05

06

07

08

แฟ้มข้อมูล

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์

ไฟล์มัลติมีเดียของคุณทั้งหมดจะบันทึกอยู่ใน **แฟ้มข้อมูล** และที่เมนู แล้วเลือก **แฟ้มข้อมูล** เพื่อเปิดรายการโฟลเดอร์

ภาพ

ภาพ ประกอบด้วยโฟลเดอร์ของภาพ เริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า, ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

เมนูตัวเลือกสำหรับภาพ

ตัวเลือกที่มีอยู่ใน **ภาพ** จะขึ้นอยู่กับประเภทรูปภาพที่คุณเลือก ตัวเลือกทั้งหมดจะใช้ได้กับรูปภาพที่คุณถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์ สำหรับภาพเริ่มต้นจะใช้ได้เฉพาะตัวเลือก ดู, ตั้งเป็น, ข้อมูลไฟล์, ภาพสไลด์, **เรียงลำดับตาม** และ **ภาพขนาดย่อ/รายการ**

ในโฟลเดอร์ **ภาพ** ให้เลือก **ตัวเลือก** เพื่อแสดงรายการตัวเลือก

ลบ - ลบภาพที่เลือก

ตั้งเป็น - ตั้งค่าภาพที่เลือกเป็น **พื้นหลัง** หรือตั้งเป็น **ID ภาพ** ได้

ส่งทาง - ส่งภาพที่เลือกให้กับเพื่อนผ่านทาง **ข้อความมัลติมีเดีย**, **บลูทูธ** หรือ **อีเมล**

หมายเหตุ: อาจจำเป็นต้องลดขนาดภาพก่อนที่จะสามารถส่งทาง MMS ได้

ไฟล์: แก๊ไช, แก๊ชือ หรือดูข้อมูล (ชื่อ, ขนาด, วันที่, ความละเอียด, ประเภท และลิขสิทธิ์) ของภาพที่เลือก หากคุณมีการดหน่วยความจำติดตั้งไว้ จะมีตัวเลือกเพิ่มเติมปรากฏขึ้นสองรายการ คือ **ย้ายไปที่หน่วยความจำภายนอก** และ **คัดลอกไปยังหน่วยความจำภายนอก**

พิมพ์ผ่าน - พิมพ์ไฟล์ภาพผ่าน บลูทูธ หรือ Pictbridge

ภาพสไลด์ - โปรดดูการสร้างภาพสไลด์ในหน้า 48

โฟลเดอร์ใหม่ - สร้างโฟลเดอร์ใหม่ภายในโฟลเดอร์ภาพหลัก

หลายรายการ - เลือกภาพมากกว่าหนึ่งภาพเพื่อลบ

ลบทั้งหมด - ลบภาพทั้งหมดในโฟลเดอร์ภาพของคุณ

เรียงลำดับตาม - เรียงภาพของคุณตาม **วันที่**, **ประเภท** หรือ **ชื่อ**

รายการ / ภาพขนาดย่อ - เปลี่ยนวิธีการแสดงภาพถ่ายของคุณ

การส่งภาพถ่าย

- 1 **แตะที่ เมนู แล้วเลือก เพิ่มข้อมูล**
- 2 **เลือก ภาพ**
- 3 **เลือกรูปภาพ และเลือก ตัวเลือก**
- 4 **เลือก ส่งทาง แล้วเลือก ข้อความมีลติมีเดีย, บลูทูธ หรือ อีเมล**
- 5 **หากคุณเลือก ข้อความมีลติมีเดีย หรือ อีเมล ภาพถ่ายจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก บลูทูธ เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ และโทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งภาพไป**

การจัดการรูปภาพ

- 1 **แตะที่ เมนู แล้วเลือก เพิ่มข้อมูล**
- 2 **เลือก ภาพ**
- 3 **เลือก ตัวเลือก แล้วเลือก เรียงลำดับตาม**
- 4 **เลือกจาก วันที่, ประเภท หรือ ชื่อ**

การลบรูปภาพ

- 1 **แตะที่ เมนู แล้วเลือก เพิ่มข้อมูล**
- 2 **เลือก ภาพ**
- 3 **เลือกภาพและเลือก ตัวเลือก**
- 4 **เลือก ลบ**

การลบหลายภาพ

- 1 **แตะที่ เมนู แล้วเลือก เพิ่มข้อมูล**
- 2 **เลือก ภาพ**
- 3 **เลือก ตัวเลือก และเลือก หลายรายการ และ ลบ**
- 4 **จะมีช่องปรากฏขึ้นที่ด้านข้างภาพแต่ละภาพ เลือกแต่ละภาพและแตะที่ เพื่อเลือกภาพ ในการยกเลิกการเลือกภาพ ให้แตะที่ อีกครั้ง เพื่อลบเครื่องหมายออกจากช่อง**
- 5 **เมื่อคุณทำเครื่องหมายที่ช่องต่างๆ ตามต้องการแล้ว ให้เลือก ลบ และยืนยันว่าคุณต้องการลบภาพที่เลือกไว้ทั้งหมด**

01

02

03

04

05

06

07

08

แฟ้มข้อมูล

การสร้างภาพสไลด์

หากคุณต้องการดูภาพทั้งหมดบน
โทรทัศน์ หรือดูภาพที่มีอย่างรวดเร็ว
คุณสามารถสร้างภาพสไลด์เพื่อประหยัด
เวลาในการเปิดและปิดภาพแต่ละภาพ

1 **แตะที่ เมนู แล้วเลือก แฟ้มข้อมูล**

2 **เลือก ภาพ**

3 **เลือกภาพถ่ายที่คุณต้องการเริ่มเล่น
ภาพสไลด์ และแตะที่ ตัวเลือก**

4 **เลือก ภาพสไลด์** จากนั้นภาพสไลด์
จะเริ่มต้น

5 **แตะที่ พัก** เพื่อหยุดภาพสไลด์ชั่วคราว
และ **ออก** เพื่อสิ้นสุดการแสดงผลภาพ
สไลด์และกลับไปโฟลเดอร์ ภาพ

เมื่อคุณเลือก **ตัวเลือก** ในระหว่างที่
แสดงภาพสไลด์จะปรากฏตัวเลือกเพิ่ม
เติมดังนี้:

ดู - เลือกระหว่าง **ภาพเต็ม** และ
เต็มหน้าจอ เลือก **ทิวทัศน์** เพื่อเปลี่ยน
แนวตำแหน่งของภาพ

เปิด/ ปิดหน้าซ้ำ - เลือกว่าคุณต้องการ
แสดงภาพสไลด์แบบวนซ้ำหรือไม่

เสียง

โพลเดอร์ เสียง ประกอบด้วย
เสียงเริ่มต้น, การบันทึกเสียงของคุณ
และไฟล์เสียงที่คุณดาวน์โหลด

การใช้เสียง

1 **แตะที่ เมนู แล้วเลือก แฟ้มข้อมูล**

2 **เลื่อนไปที่ภาพและเลือก เสียง**

3 **เลือก เสียงเริ่มต้น** หรือเลือกจากราย
การไฟล์บันทึกเสียง

4 **เลือกเสียงและแตะที่ปุ่มเลือกตรงกลาง
เพื่อฟังเสียง**

5 **แตะที่ ตัวเลือก** เลือก **ตั้งเป็น**
แล้วเลือก เสียงเรียกเข้า และ **ID**
เสียงเรียกเข้า เสียงข้อความ

วิดีโอ

โพลเดอร์ **วิดีโอ** จะแสดงรายการวิดีโอ
ที่ดาวน์โหลด และวิดีโอที่ได้บันทึกไว้
ในโทรทัศน์

การดูวิดีโอ

1 **แตะที่ เมนู แล้วเลือก แฟ้มข้อมูล**

2 **เลื่อนไปที่และเลือก วิดีโอ**

3 **เลือกวิดีโอ แล้วแตะที่ ►**

การใช้ตัวเลือกขณะหยุดวิดีโอชั่วคราว

ด้วยการเลือก **ตัวเลือก** วิดีโอที่คุณกำลังเล่นจะอยู่ในโหมดพักและคุณสามารถเลือกจาก:

ส่งทาง - ส่งวิดีโอให้กับเพื่อนผ่านทาง **ข้อความ** มี **ลิตมีเดีย**, **บลูทูธ** หรือ **อีเมล**
ข้อมูล - ดูชื่อ ขนาด วันที่ เวลา ประเภท และรายละเอียดลิขสิทธิ์ของไฟล์ที่เลือก

การส่งวิดีโอคลิก

- 1 แตะที่ **เมนู** แล้วเลือก **แฟ้มข้อมูล**
- 2 เลื่อนไปที่และเลือก **วิดีโอ**
- 3 เลือกวิดีโอคลิกที่คุณต้องการและแตะที่ **ตัวเลือก**
- 4 แตะที่ **ส่งทาง** แล้วเลือก **ข้อความ** มี **ลิตมีเดีย**, **บลูทูธ** หรือ **อีเมล**
- 5 หากคุณเลือก **ข้อความ** หรือ **อีเมล** วิดีโอคลิกจะแนบไปกับข้อความและคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ และโทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งวิดีโอไปให้

หมายเหตุ: อาจจำเป็นต้องลดขนาดวิดีโอก่อนจึงจะสามารถส่งทาง MMS ได้ วิดีโอบางเรื่องอาจมีขนาดใหญ่จนไม่สามารถส่งทาง MMS ได้

การใช้เมนูตัวเลือกของวิดีโอ

ในโพลเดอร์ **วิดีโอ** ให้แตะที่ **ตัวเลือก** เพื่อแสดงรายการตัวเลือกต่อไปนี้

ลบ - ลบวิดีโอที่เลือก

ไฟล์ - แก่ชื่อวิดีโอ, ย้ายไปยังโพลเดอร์อื่น หรือดูข้อมูล (ชื่อ, ขนาด, วันที่, ความละเอียด, ประเภท และลิขสิทธิ์) หากคุณติดตั้งการตั้งค่าหน่วยความจำภายนอกไว้ จะมีตัวเลือกเพิ่มเติมปรากฏขึ้นสองรายการ คือ **ย้ายไปที่หน่วยความจำภายนอก** และ **คัดลอกไปยังหน่วยความจำภายนอก**

โพลเดอร์ใหม่ - สร้างโพลเดอร์ใหม่ภายในโพลเดอร์วิดีโอหลัก

ลบมีลิต- เลือกวิดีโอคลิกมากกว่าหนึ่งรายการก่อนแตะที่ **ลบ**

ลบทั้งหมด - ลบคลิกทั้งหมดในโพลเดอร์ **วิดีโอ** ของคุณ

ส่งทาง - ส่งวิดีโอที่เลือกให้กับเพื่อนผ่านทาง **ข้อความ** มี **ลิตมีเดีย**, **อีเมล** หรือ **บลูทูธ**

01

02

03

04

05

06

07

08

แฟ้มข้อมูล

เรียงลำดับตาม -
เรียงภาพวิดีโอของคุณตาม วันที่,
ประเภท หรือ ชื่อ

เล่นรายการต่อไปอัตโนมัติ -
ให้คุณตั้งค่าโหมดการเล่นได้ดังนี้: ปิด,
ซ้ำครั้งเดียว และ ซ้ำทั้งหมด

รายการ / ภาพขนาดย่อ - เปลี่ยนวิธี
การแสดงผลภาพวิดีโอของคุณ

เอกสาร

จากเมนู **เอกสาร** คุณสามารถดูไฟล์
เอกสารทั้งหมดได้ จากขั้นตอนนี้
คุณสามารถดูไฟล์ Excel,
Powerpoint, Word, ข้อความ และ
PDF ได้

การดูเอกสาร

- 1 แตะที่ **เมนู** แล้วเลือก **แฟ้มข้อมูล**
- 2 เลือก **เอกสาร**
- 3 เลือกเอกสาร และแตะที่ **ดู**

อื่นๆ

ไฟล์เอกสาร **อื่นๆ** ใช้สำหรับจัดเก็บไฟล์ประเภท
อื่นๆ ที่ไม่ใช่รูปภาพ, เสียง หรือวิดีโอ
ซึ่งมีวิธีใช้เดียวกับไฟล์เอกสาร
คุณจะพบว่าเมื่อคุณโอนไฟล์จาก
คอมพิวเตอร์ไปที่โทรศัพท์ **ไฟล์**
เหล่านั้นจะปรากฏอยู่ในไฟล์เอกสาร **อื่นๆ**

มากกว่าจะปรากฏในไฟล์เอกสาร
หากเป็นเช่นนั้น คุณสามารถย้ายไฟล์
เหล่านั้นได้

ในการย้ายไฟล์จากไฟล์เอกสาร **อื่นๆ**
ไปที่ไฟล์เอกสาร:

- 1 แตะที่ **เมนู** แล้วเลือก **แฟ้มข้อมูล**
ตามด้วย **อื่นๆ**
- 2 เลือกไฟล์แล้วแตะที่ **ตัวเลือก**
- 3 แตะที่ **ย้าย** แล้วแตะที่ **ย้าย อีกครั้ง**

หน่วยความจำนอก

หากคุณใส่การ์ดหน่วยความจำ หน้าจอ
จะแสดงเป็นไฟล์เอกสารใน **แฟ้มข้อมูล**
ไฟล์เอกสารหน่วยความจำภายนอกจะถูก
แบ่งเพิ่มเติมเป็น 5 ไฟล์เอกสาร: ภาพ,
เสียง, วิดีโอ, เอกสาร และอื่นๆ แต่ละไฟล์
เอกสารจะมีไฟล์ทั้งหมดของประเภทนั้นๆ
ซึ่งบันทึกในการจัดหน่วยความจำแทนการ
บันทึกในเครื่อง

การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล

โทรศัพท์ KC550 สามารถใช้เป็นอุปกรณ์
เก็บข้อมูลได้ เหมือนกับอุปกรณ์หน่วย
ความจำ USB ซึ่งเป็นวิธีการที่ดีที่สุดในการ
ย้ายไฟล์จากคอมพิวเตอร์ของคุณ
ไปยัง โทรศัพท์ หากคุณใส่การ์ดหน่วย
ความจำ อยู่ เมื่อเชื่อมต่อเป็น

ที่เก็บข้อมูล จะแสดงเป็นสองไดรฟ์บนคอมพิวเตอร์ของคุณ หน่วยความจำในตัวเครื่องและหน่วยความจำภายนอก

- 1 แตะที่ **เมนู** เลือก **การเชื่อมต่อ**
- 2 เลือก **การเชื่อมต่อ USB**
- 3 เลื่อนไปที่ **ที่เก็บข้อมูล** และเลือก **ตกลง**
- 4 เสียบปลายด้านที่เล็กกว่าของสายเคเบิล USB เข้าไปในช่องเสียบสายเคเบิล USB ที่ขอบของโทรศัพท์ KC550 เสียบปลายด้านที่ใหญ่กว่าเข้าไปในพอร์ต USB ของคอมพิวเตอร์
- 5 โฟลเดอร์ดีสก์แบบถอดออกได้จะเปิดขึ้นโดยอัตโนมัติบนคอมพิวเตอร์ของคุณ 2 ไดรฟ์หากคุณมีการ์ดหน่วยความจำเสียบอยู่ ซึ่งจะแสดงโฟลเดอร์ทั้งหมดในโทรศัพท์หรือการ์ดหน่วยความจำของคุณ
- 6 ลากแล้ววางภาพ, วิดีโอ, เพลง หรือเอกสาร ลงในโฟลเดอร์ที่ต้องการ
- 7 ปลอดภัยการเชื่อมต่อโทรศัพท์ของคุณอย่างปลอดภัย โดยการคลิกที่ไอคอน **Safely remove hardware (เอาฮาร์ดแวร์ออกอย่างปลอดภัย)** ในแถบเครื่องมือของเดสก์ท็อป

- 8 จากนั้นเมื่อคุณต้องการเข้าใช้ไฟล์ ตัวอย่างเช่น ภาพ ให้แตะที่ **เมนู** แล้วเลือก **เพิ่มข้อมูล** ตามด้วย **หน่วยความจำภายนอก** จากนั้นเลือก **ภาพ** ภาพทั้งหมดที่คุณเพิ่งถ่ายโอนจะอยู่ในไฟล์นี้

การโอนไฟล์ไปที่โทรศัพท์

คุณยังสามารถถ่ายโอนไฟล์จากคอมพิวเตอร์ไปยังโทรศัพท์โดยใช้บลูทูธได้

- 1 ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธที่โทรศัพท์และคอมพิวเตอร์ และทั้งคู่ต่างมองเห็นกันแล้ว
- 2 ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมขึ้นอยู่กับประเภทของไฟล์ ตัวอย่างเช่น ภาพถ่ายจะถูกบันทึกในโฟลเดอร์ **ภาพ** และเพลงจะถูกบันทึกในโฟลเดอร์ **เสียง** หากโทรศัพท์ของคุณไม่สามารถระบุประเภทไฟล์ได้ ไฟล์จะถูกบันทึกในโฟลเดอร์ **อื่นๆ**

หมายเหตุ: ไฟล์ที่ส่งโดยใช้บลูทูธจะถูกบันทึกไว้ในหน่วยความจำของโทรศัพท์

01

02

03

04

05

06

07

08

แฟ้มข้อมูล

การส่งและการรับไฟล์โดยใช้บลูทูธ

บลูทูธเป็นวิธีในการส่งและรับไฟล์ที่ดี โดยไม่จำเป็นต้องต่อสาย ซึ่งสามารถเชื่อมต่อได้อย่างรวดเร็วและง่ายดาย คุณยังสามารถเชื่อมต่อกับชุดหูฟังบลูทูธเพื่อโทรออกและรับสายได้

ก่อนที่คุณจะสามารถเริ่มต้นการการแบ่งปันไฟล์ด้วยบลูทูธ คุณต้องจับคู่อุปกรณ์ของคุณเข้ากับอุปกรณ์บลูทูธอื่นก่อน สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการจับคู่อุปกรณ์ โปรดดูที่ **การจับคู่กับอุปกรณ์บลูทูธอื่น** ที่หน้า 63

ในการเปิดบลูทูธ:

- 1 และที่ **เมนู** แล้วเลือก **การเชื่อมต่อ** จากนั้นเลือก **บลูทูธ**
- 2 เลือก **เปิด/ปิดบลูทูธ** และเลือก **เปิด**
- 3 เลือก **ปิด** เพื่อปิดบลูทูธ

ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ หรือเพลง
- 2 เลือก **ตัวเลือก** และเลือก **ส่งทาง** จากนั้นเลือก **บลูทูธ**
- 3 เลือก **ใช่** เพื่อเปิดบลูทูธหากยังไม่ได้เปิดใช้งาน

- 4 โทรศัพท์ KC550 จะค้นหาอุปกรณ์ที่ใช้บลูทูธอื่นๆ ภายในรัศมีนั้นโดยอัตโนมัติ
- 5 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป แล้วเลือก **ส่ง**

ในการรับไฟล์:

- 1 ในการรับไฟล์ คุณต้องตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** โปรดดูข้อมูลเพิ่มเติมที่ **การเปลี่ยนการตั้งค่าบลูทูธ** ที่หน้า 62
- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง เลือก **ใช่** เพื่อรับไฟล์

เคล็ดลับ! คอยเฝ้าดูแถบแสดงความคืบหน้าเพื่อให้แน่ใจว่าไฟล์ของคุณถูกส่งแล้ว

หมายเหตุ
เครื่องหมาย Bluetooth® และโลโก้ต่างๆ เป็นสมบัติของ Bluetooth SIG, Inc. และการใช้เครื่องหมายเหล่านั้นโดย LG Electronics อยู่ภายใต้การอนุญาต เครื่องหมายการค้าและชื่อทางการค้าอื่นๆ เป็นสมบัติของเจ้าของเครื่องหมายการค้า และชื่อทางการค้าอื่นๆ

เกมส์&แอปฯ

เกมส์&แอปฯ

โทรศัพท์ KC550 มีมาให้พร้อมกับเกมส์ เพื่อช่วยให้คุณได้เพลิดเพลินในยามว่าง หากคุณเลือกดาวน์โหลดเกมส์หรือแอปพลิเคชันเพิ่มเติม ไฟล์เหล่านั้นจะถูกบันทึกลงในโฟลเดอร์นี้

การเล่นเกมส์

- 1 ดแตะที่ **เมนู** แล้วเลือก **เกมส์&แอปฯ**
- 2 เลือก **เกมส์**
- 3 เลือกเกมส์ที่คุณต้องการเล่น แล้วเลือก **เล่น**

การดูแอปพลิเคชัน

คุณสามารถจัดการแอปพลิเคชัน Java ที่ติดตั้งในโทรศัพท์ของคุณได้โดยใช้ **เมนู แอปพลิเคชัน** และคุณยังสามารถลบแอปพลิเคชันที่ดาวน์โหลดมาได้

- 1 ดแตะที่ **เมนู** แล้วเลือก **เกมส์&แอปฯ**
- 2 เลือก **แอปพลิเคชัน**
- 3 ดูและจัดการแอปพลิเคชันใดๆ ที่คุณมี

การเปลี่ยนแปลงโปรไฟล์ เครือข่าย

หากต้องการดาวน์โหลดเกมส์ คุณสามารถตั้งค่าให้เชื่อมต่อกับเครือข่ายโดยใช้ **โปรไฟล์เครือข่าย** ได้

- 1 ดแตะที่ **เมนู** แล้วเลือก **เกมส์&แอปฯ**
- 2 เลือก **โปรไฟล์เครือข่าย**
- 3 คุณสามารถเพิ่มและแก้ไขโปรไฟล์เครือข่ายใหม่ได้

01

02

03

04

05

06

07

08

ออกแกลงในเซอร์

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** แล้วเลือก **ออกแกลงในเซอร์** จากนั้นเลือก **ปฏิทิน**
- 2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์ คุณสามารถเลือกวันที่โดยการเลื่อนไปยังวันที่โดยใช้ลูกศรบนทัชแพด หรือโดยการเลือก **ตัวเลือก** และป้อนวันที่ด้วยตนเอง
- 3 เลือก **สร้าง** แล้วป้อนเวลาที่คุณต้องการเริ่มเหตุการณ์ของคุณ เลื่อนลงโดยใช้ลูกศรบนทัชแพดและป้อนเวลาสิ้นสุดให้กับเหตุการณ์ของคุณ
- 4 เลื่อนลงอีกครั้งและเลือกว่าคุณต้องการตั้ง **เตือน** ให้กับเหตุการณ์ของคุณหรือไม่ เลื่อนไปทางซ้ายหรือขวาเพื่อดูตัวเลือกต่างๆ ที่มีอยู่ คุณสามารถตั้งให้ส่งเสียงเตือนเมื่อถึงเวลาเริ่มเหตุการณ์หรือตั้งระยะเวลาก่อนที่เหตุการณ์จะเริ่มขึ้นเพื่อนเตือนให้ทราบถึงเหตุการณ์ที่กำลังจะเริ่มขึ้น
- 5 เลื่อนลงและป้อนชื่อ **เรื่อง** ให้กับเหตุการณ์ โดยใช้ปุ่มกดในการพิมพ์ตัวอักษรและตัวเลข

- 6 เลื่อนลงอีกครั้งเพื่อกำหนดว่าเป็นเหตุการณ์ที่เกิดขึ้นเพียงครั้งเดียวหรือเกิดขึ้นซ้ำ **ทีเดียว, ทุกวัน, ทุกสัปดาห์, ทุกเดือน** หรือ **รายปี** หากเป็นเหตุการณ์ที่เกิดขึ้นซ้ำ คุณสามารถเลื่อนลงเพื่อป้อน **วันที่หมดอายุ** เพื่อสิ้นสุดเหตุการณ์ได้
- 7 เลือก **บันทึก** และเหตุการณ์ของคุณจะบันทึกอยู่ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเคอร์เซอร์รูปลีเหลี่ยมกำกับอยู่

การแก้ไขเหตุการณ์ในปฏิทิน

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** แล้วเลือก **ออกแกลงในเซอร์** จากนั้นเลือก **ปฏิทิน**
- 2 เลือก **ตัวเลือก** และเลือก **นัดหมายทั้งหมด** เพื่อดูรายการเหตุการณ์ทั้งหมดของคุณ เลื่อนไปที่เหตุการณ์ที่คุณต้องการแก้ไขและเลือก **ดู** หรือเลือกวันที่เกิดเหตุการณ์ในปฏิทินและเลือก **ดู**
- 3 เลือก **แก้ไข** และเลื่อนไปที่รายละเอียดเหตุการณ์ที่คุณต้องการเปลี่ยนแปลง ทำการเปลี่ยนแปลงและแตะที่ **บันทึก** เพื่อจัดเก็บเหตุการณ์ที่แก้ไขนั้น

หมายเหตุ: คุณสามารถลบเหตุการณ์
ออกจากปฏิทินของคุณโดยการเลือก
เพื่อดู เหตุการณ์ แล้วแตะที่ **ตัวเลือก**
และ **ลบ**

การแบ่งปันเหตุการณ์ในปฏิทิน

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่
เมนู แล้วเลือก **ออกแอกในเซอร์**
จากนั้นเลือก **ปฏิทิน**
- 2 เลือกเหตุการณ์ที่คุณต้องการแบ่งปัน
และเลือก **ตัวเลือก**
- 3 เลือก **ส่งทาง** และเลือก
ข้อความตัวอักษร,
ข้อความมัลติมีเดีย, **บลูทูธ** หรือ
อีเมล

การเพิ่มบันทึก

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่
เมนู แล้วเลือก **ออกแอกในเซอร์**
จากนั้นเลือก **บันทึก**
- 2 เลือก **สร้าง** และพิมพ์บันทึกของคุณ
- 3 แตะที่ **บันทึก**
- 4 บันทึกของคุณจะปรากฏขึ้นบนหน้า
จอ เมื่อคุณเปิดแอปพลิเคชัน **บันทึก**
ในครั้งถัดไป

เคล็ดลับ! คุณสามารถแก้ไขบันทึกที่มีอยู่
ได้ เลือกบันทึกที่คุณต้องการแก้ไข แตะที่
ตัวเลือก แล้วเลือก **แก้ไข**

01

02

03

04

05

06

07

08

เครื่องมือ

การตั้งเวลาปลุก

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** แล้วเลือก **เครื่องมือ** จากนั้นเลือก **นาฬิกาปลุก**
- 2 เลือก **สร้าง**
- 3 เลื่อนลงและป้อนเวลาที่คุณต้องการให้ส่งเสียงปลุก
- 4 เลือกประเภทการปลุกซ้ำเพื่อระบุว่าคุณต้องการจะให้นาฬิกาปลุกดังที่เดียว, ทุกวัน, จ. - ศ., จ. - ส., ส. - อา. หรือ เลือกวันทำงาน
- 5 เลื่อนลงและเลือกว่าคุณต้องการให้ปลุกโดยใช้ค่าตามรูปแบบเสียง, แบบเสียง หรือ แบบสั้น
- 6 เลื่อนลงเพื่อเลือกเสียงปลุก เลือกเสียง เพื่อเลือกเสียงใหม่
- 7 เลื่อนลงและป้อนชื่อการปลุกหรือใช้ชื่อที่แนะนำ
- 8 แตะที่ **บันทึก**

หมายเหตุ: คุณสามารถตั้งปลุกได้ถึง 5 รายการ

การใช้เครื่องคิดเลข

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** แล้วเลือก **เครื่องมือ** จากนั้นเลือก **เครื่องคิดเลข**

- 2 กดที่ปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, ×, ÷) แล้วตามด้วย =
- 4 สำหรับการคำนวณแบบซับซ้อน ให้เลือก **ฟังก์ชัน** เพื่อเลือกคำสั่ง
- 5 เลือก **ลบ** เพื่อลบหน้าจอเพื่อเริ่มการคำนวณใหม่

การใช้นาฬิกาจับเวลา

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** แล้วเลือก **เครื่องมือ** จากนั้นเลือก **นาฬิกาจับเวลา**
- 2 เลือก **เริ่ม** เพื่อเริ่มต้นตัวตั้งเวลา
- 3 เลือก **รอบ** หากคุณต้องการบันทึกรอบเวลา
- 4 เลือก **หยุด** เพื่อหยุดตัวตั้งเวลา
- 5 เลือก **ต่อ** เพื่อเริ่มนาฬิกาจับเวลาใหม่ต่อจากเวลาที่คุณหยุดไว้ หรือเลือก **รีเซ็ต** เพื่อเริ่มนับเวลาใหม่อีกครั้ง

การแปลงหน่วย

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** แล้วเลือก **เครื่องมือ** จากนั้นเลือก **ตัวแปลงหน่วย**
- 2 เลือกว่าคุณจะทำแปลง สกุลเงิน พื้นที่ ความยาว น้ำหนัก อุณหภูมิ ปริมาตร หรือ ความเร็ว
- 3 เลื่อนขึ้นเพื่อเลือกจากหน่วยวัดที่คุณต้องการป้อน เลื่อนไปทางซ้ายหรือขวาเพื่อเลือกหน่วย จากนั้นเลื่อนลงและป้อนจำนวนหน่วย
- 4 เลื่อนลงไปที่บ็อกซ์ตัวแปลงหน่วย และเลือกหน่วยวัดที่คุณต้องการแปลงไปเป็น การแปลงค่าจะแสดงอยู่ที่ด้านล่างโดยอัตโนมัติ

การเลือกเมืองลงในเวลาทั่วโลก

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** แล้วเลือก **เครื่องมือ** จากนั้นเลือก **เวลาทั่วโลก**
- 2 เลื่อนขึ้น, ลง, ซ้าย หรือขวา เพื่อเลื่อนไปยังส่วนต่างๆ ของโลกและเลือกทวีป
- 3 เลือก **ซูมเข้า** เพื่อซูมลงไปในพื้นที่ และเลือกจากเมืองต่างๆที่อยู่ในพื้นที่นั้น
- 4 แตะที่ **ตกลง** แล้วเลือก **ใช่**

บริการซิม

คุณสมบัตินี้ขึ้นอยู่กับซิมการ์ดและการให้บริการของเครือข่าย

ในกรณีที่ซิมการ์ดสนับสนุนบริการ SAT (เช่น SIM Application Toolkit) เมนูนี้จะเป็นชื่อบริการของผู้ให้บริการซึ่งจัดเก็บไว้ในซิมการ์ด

01

02

03

04

05

06

07

08

เบราวเซอร์

เพียงใช้เบราวเซอร์และปลายนิ้วสัมผัส คุณก็จะสามารถค้นหาข่าวสารและพยากรณ์อากาศได้ ตลอดจนข้อมูลเกี่ยวกับกีฬาหรือการจราจรได้ทุกเมื่อที่คุณต้องการ นอกจากนี้ เบราวเซอร์ยังช่วยให้คุณสามารถดาวน์โหลดเพลง เสียงเรียกเข้า ภาพพื้นหลัง และเกมส์ใหม่ล่าสุดได้

การใช้เว็บไซต์

- 1 **แตะที่ เมนู แล้วเลือก เบราวเซอร์**
- 2 ในการเข้าถึงโฮมเพจของเบราวเซอร์โดยตรง ให้เลือก **โฮม** หรือเลือก **ป้อนแอดเดรส** จากนั้นพิมพ์ URL ที่คุณต้องการ แล้วเลือก **โหลด**

หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การเพิ่มและการใช้บุ๊คมาร์ค

เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุ๊คมาร์คและบันทึกเว็บเพจได้

- 1 **แตะที่ เมนู แล้วเลือก เบราวเซอร์**
- 2 เลือก **บุ๊คมาร์ค** รายการบุ๊คมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ
- 3 ในการเพิ่มบุ๊คมาร์คใหม่ ให้เลือก **ตัวเลือก** และเลือก **บุ๊คมาร์คใหม่** ป้อนชื่อสำหรับบุ๊คมาร์ค แล้วตามด้วยป้อน URL
- 4 **แตะที่ บันทึก** บุ๊คมาร์คของคุณจะปรากฏขึ้นในรายการบุ๊คมาร์ค
- 5 ในการเข้าใช้งานบุ๊คมาร์ค เพียงเลื่อนไปที่บุ๊คมาร์คที่ต้องการ แล้วแตะที่ **โหลด** เครื่องจะเชื่อมต่อเข้ากับเพจที่คุณบุ๊คมาร์คไว้

การบันทึกเพจ

- 1 เข้าถึงเว็บเพจที่ต้องการตามที่อธิบายไว้ข้างต้น
- 2 เลือก **ตัวเลือก** และเลื่อนไปที่ **บันทึกเลือก** หน้านี้
- 3 เลือก **ตกลง**

การแก้ไขเพจที่บันทึกไว้

- 1 แตะที่ **เมนู** แล้วเลือก **เบราวเซอร์**
- 2 เลือก **บันทึกเพจ**
- 3 เลือกเพจที่ต้องการ แล้วแตะที่ **โหลด**

เคล็ดลับ! เมนูนี้ยังช่วยให้คุณลบเพจที่บันทึกไว้ได้

การดูประวัติข้อมูลเบราวเซอร์

- 1 แตะที่ **เมนู** แล้วเลือก **เบราวเซอร์**
- 2 เลือก **ประวัติ** แล้วเลือก **ตกลง**
- 3 รายชื่อเว็บเพจที่คุณแก้ไขล่าสุดจะปรากฏขึ้น ในการแก้ไขเพจใดเพจหนึ่ง ให้เลือกเพจที่ต้องการ แล้วแตะที่ **โหลด**

การเปลี่ยนการตั้งค่าเว็บเบราวเซอร์

- 1 แตะที่ **เมนู** แล้วเลือก **เบราวเซอร์**
- 2 เลือก **ตั้งค่า**
- 3 คุณสามารถเลือกวิธีที่จะให้โทรศัพท์มือถือจัดการ, แสดง และใช้ข้อมูลเมื่อเบราวส์อินเทอร์เน็ต คุณสามารถแก้ไขการตั้งค่าภายใน โพรไฟล์เครือข่าย, โหมดตั้งค่า, แคช, คุกกี้, ใ้รับรองการป้องกัน, แสดงภาพ, Java script และ ตำแหน่งที่จัดเก็บ
- 4 เมื่อคุณเปลี่ยนแปลงการตั้งค่าของคุณ ให้เลือก **ตกลง**

01

02

03

04

05

06

07

08

การตั้งค่า

ภายในโฟลเดอร์นี้ คุณจะสามารถปรับการตั้งค่าเพื่อให้โทรศัพท์ KC550 ตอบสนองการทำงานในแบบของคุณได้

หมายเหตุ: โปรดดูข้อมูลเกี่ยวกับการตั้งค่าการโทรใต้ที่หน้า 22

การเปลี่ยนแปลงรูปแบบของคุณ

คุณสามารถเปลี่ยนรูปแบบจากหน้าจอแสดงหน้าของคุณได้อย่างรวดเร็ว เพียงแตะที่ แล้วเลือกรูปแบบที่คุณต้องการเปิดใช้ เลือก ทั่วไป, เจียม, เฉพาะสั้น, นอกอาคาร และ ชุดหูฟัง

การปรับแต่งรูปแบบของคุณ

คุณสามารถปรับแต่งการตั้งค่ารูปแบบได้

- 1 แตะที่ **เมนู** แล้วเลือก **รูปแบบเสียง**
- 2 เลือกรูปแบบที่คุณต้องการ แล้วเลือก **ปรับแต่ง**
- 3 สำหรับรูปแบบ **เจียม** และ **สั้นอย่างเดียว** คุณสามารถปรับการสั้นได้ สำหรับรูปแบบอื่นๆ คุณสามารถเปลี่ยนตัวเลือกเสียงและการเตือนทั้งหมดที่มีอยู่ในรายการได้ (โปรดดูรายละเอียดจากตัวเครื่องของคุณ)

การเปลี่ยนวันที่และเวลา

คุณสามารถตั้งค่าฟังก์ชันเกี่ยวกับวันที่และเวลาได้

- 1 แตะที่ **เมนู** แล้วเลือก **ตั้งค่า**
- 2 เลือก **วันที่ & เวลา** แล้วเลือกจากรายการด้านล่าง:

ตั้งวันที่ - คุณสามารถบอวันที่ปัจจุบัน

รูปแบบวันที่ - คุณสามารถตั้งค่ารูปแบบวันที่

ตั้งเวลา - คุณสามารถบอเวลาปัจจุบัน

รูปแบบเวลา - คุณสามารถตั้งค่ารูปแบบเวลาให้เป็นแบบ 24 ชม. หรือ 12 ชม.

อัปเดตอัตโนมัติ - เลือก **เปิด** โทรศัพท์ จะอัปเดตวันที่และเวลาโดยอัตโนมัติ

การเปลี่ยนภาษา

ไปที่ **ตั้งค่า** และ **ภาษา** เพื่อเปลี่ยนภาษาสำหรับข้อความใดๆ ในโทรศัพท์ของคุณ การเปลี่ยนแปลงใดๆ จะเปลี่ยนแปลงโหมดป้อนภาษาด้วย

การเปลี่ยนการตั้งค่าการแสดงผล

- 1 แตะที่ **เมนู** แล้วเลือก **ตั้งค่า**
- 2 เลือก **หน้าจอ** แล้วเลือก:

พื้นหลัง - เลือกภาพพื้นหลังที่จะให้ปรากฏบนหน้าจอของคุณ

นาฬิกา - เลือกเพื่อแสดงเวลาและวันที่บนหน้าจอสแตนด์บาย

เวลาไฟหน้าจอ - เลือกระยะเวลาการทำงานของแบ็คไลท์

เคล็ดลับ! การเปิดแบ็คไลท์เป็นเวลานานจะทำให้สิ้นเปลืองพลังงานแบตเตอรี่มากยิ่งขึ้น และคุณอาจจำเป็นต้องชาร์จโทรศัพท์ของคุณบ่อยยิ่งขึ้นด้วย

การควบคุมแสง - ปรับความสว่างของหน้าจอ เมื่อคุณตั้งค่าการควบคุมอัตโนมัติ เป็น เปิด ความสว่างของจอ LCD จะถูกปรับโดยอัตโนมัติโดยเซ็นเซอร์ ALC ซึ่งมีมากับโทรศัพท์ของคุณ

เมื่อคุณตั้งค่า ความสว่างอัตโนมัติ เป็น อัตโนมัติ ความสว่างของ LCD จะถูกปรับโดยอัตโนมัติโดยเซ็นเซอร์ ALC (Auto Luminance Control) ซึ่งมีมากับโทรศัพท์ของคุณ และลูกศร < และ > เพื่อปรับช่วงการควบคุมของความสว่างอัตโนมัติ เป็น สูงสุด, ปกติ หรือ ต่ำสุด

ขีดคั่นหน้าจอหลัก - เปลี่ยนขีดคั่นหน้าจอสแตนด์บายของคุณ

ขนาดตัวอักษร - เปลี่ยนขนาดตัวอักษรของสิ่งต่อไปนี้: เมนู, การโทร และข้อความ

ธีม - เปลี่ยนรูปแบบทั้งหน้าจอของคุณได้อย่างรวดเร็ว

รูปแบบเมนู - เปลี่ยนมุมมองเมนูจากมุมมองกริด เป็น มุมมองรายการ หรือสลับกัน

แบบตัวอักษร - ปรับประเภทตัวอักษร

แบบตัวเลขโทร - ปรับรูปแบบตัวอักษรสำหรับเวลาที่คุณพิมพ์เบอร์โทร

ข้อความสแตนด์บาย - เลือกเพื่อเพิ่มข้อความลงในหน้าจอสแตนด์บายของคุณ

ชื่อเครือข่าย - เลือกเพื่อแสดงหรือซ่อนชื่อเครือข่าย

การเปลี่ยนการตั้งค่าความปลอดภัย

เปลี่ยนการตั้งค่าความปลอดภัยของคุณเพื่อป้องกันโทรศัพท์ KC550 และข้อมูลที่สำคัญของคุณ

1 แตะที่ **เมนู** แล้วเลือก **ตั้งค่า**

2 เลือก **ระบบป้องกัน** แล้วเลือกจากรายการดังนี้:

01

02

03

04

05

06

07

08

การตั้งค่า

คำขอรหัส PIN - เลือกรหัส PIN ที่เครื่องจะขอให้คุณป้อนรหัสเมื่อคุณเปิดเครื่อง

ล็อคเครื่อง - เลือกรหัสความปลอดภัยเพื่อล็อคโทรศัพท์ของคุณเมื่อเปิดเครื่อง, เมื่อเปลี่ยนซิม หรือทันที

ล็อคปุ่มสัมผัส - เลือกเพื่อล็อคทัชแพด

แจ้งเครื่องหาย(ATMT) - เปิดใช้งานการแจ้งเครื่องหาย

เปลี่ยนรหัส - เปลี่ยน รหัสป้องกัน, รหัส PIN1 หรือ รหัส PIN2

การใช้โหมด Flight

ใช้ฟังก์ชันนี้เพื่อ **เปิด** หรือ **ปิด** โหมด Flight คุณจะไม่สามารถโทรออก, เชื่อมต่ออินเทอร์เน็ต, ส่งข้อความหรือใช้บลูทูธได้เมื่อ **โหมด Flight** เปิด อยู่

การรีเซ็ตโทรศัพท์ของคุณ

ใช้ **รีเซ็ต** เพื่อรีเซ็ตการตั้งค่าทั้งหมดเป็นค่าที่ตั้งมาจากโรงงาน คุณต้องใช้รหัสป้องกันเพื่อใช้งานฟังก์ชันนี้

การดูสถานะหน่วยความจำ

KC550 ของคุณมีหน่วยความจำให้เลือกสามแบบ: โทรศัพท์, ซิมการ์ด

และหน่วยความจำภายนอก (คุณอาจต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

คุณสามารถใช้ตัวจัดการหน่วยความจำในการกำหนดว่าในแต่ละหน่วยความจำใช้ หน่วยความจำไปเท่าใด และดูว่ามีพื้นที่ว่างเหลือเท่าใด

แตะที่ **เมนู** แล้วเลือก **ตั้งค่า** เลือก **สถานะหน่วยความจำ** แล้วคุณ จะเห็นสถานะปัจจุบันของหน่วยความจำ (ปกติ, จองแล้ว, ซิมการ์ด และหน่วยความจำภายนอก) ใน KC550 ของคุณ

เคล็ดลับ! โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับ การใส่การ์ดหน่วยความจำ ที่หน้า 13

การเปลี่ยนการตั้งค่าบลูทูธ

- 1 แตะที่ **เมนู** แล้วเลือก **การเชื่อมต่อ** จากนั้นเลือก **บลูทูธ**
- 2 เลือก **การตั้งค่าบลูทูธ** ทำการเปลี่ยนแปลง:

การมองเห็นเครื่องอื่น - เลือกว่าจะ **แสดง** หรือ **ซ่อน** อุปกรณ์ของคุณต่อผู้อื่น

ชื่อของฉัน - ป้อนชื่อโทรศัพท์ KC550 ของคุณ

แอแดเรสส่วนตัว - ดูแอแดเรสบลูทูธ

การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้นคุณจึงสามารถผลิตเพลนกับโทรศัพท์ใหม่ของคุณได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่า ให้ใช้เมนูนี้ และที่ **เมนู** แล้วเลือก **การเชื่อมต่อ** ตัวเลือกของคุณได้แก่:

บลูทูธ - ตั้งค่าโทรศัพท์ KC550 ของคุณให้ใช้บลูทูธ คุณสามารถปรับการมองเห็นของคุณที่มีต่ออุปกรณ์อื่นหรือค้นหาอุปกรณ์ที่โทรศัพท์ของคุณจับคู่ด้วย

เครือข่าย - โทรศัพท์ KC550 จะเชื่อมต่อกับเครือข่ายที่ต้องการได้โดยอัตโนมัติ ในการเปลี่ยนการตั้งค่าเหล่านี้ ให้ใช้เมนูนี้ คุณสามารถเพิ่มจุดเชื่อมต่อใหม่โดยใช้เมนูนี้ได้

การเชื่อมต่อ USB - เลือก **เชื่อมต่อข้อมูล** และซิงโครไนซ์โทรศัพท์ KC550 โดยใช้ซอฟต์แวร์ LG PC Suite เพื่อคัดลอกไฟล์จากโทรศัพท์ หากคุณมีการหน่วยความจำเสียอยู่ ให้เลือก **ที่เก็บข้อมูล** เพื่อใช้โทรศัพท์ของคุณในรูปแบบเดียวกับที่คุณใช้อุปกรณ์หน่วยความจำ USB เชื่อมต่อเครื่องคอมพิวเตอร์ของคุณ และลากแล้ววาง

ไฟล์ไปที่โฟลเดอร์ของอุปกรณ์ที่ถอดออกได้ของโทรศัพท์ KC550 โปรดดูรายละเอียดเพิ่มเติมที่หน้า 50~51

การจับคู่กับอุปกรณ์บลูทูธอื่น

โดยการจับคู่โทรศัพท์ KC550 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้ ซึ่งหมายความว่าอุปกรณ์ที่จับคู่ด้วยจะปลอดภัยมากขึ้น

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการมองเห็นใน **เมนูการตั้งค่าบลูทูธ** โดยการเลือก **การมองเห็นเครื่องของฉัน** จากนั้นเลือก **แสดง**
- 2 เลือก **รายการอุปกรณ์** จากเมนูบลูทูธและเลือก **สร้าง**
- 3 โทรศัพท์ KC550 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ **จับคู่** และ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ
- 4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย เลือก **จับคู่** และป้อนรหัสผ่าน จากนั้นเลือก **ตกลง**
- 5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นซึ่งคุณควรป้อนรหัสผ่านเดียวกัน
- 6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

01

02

03

04

05

06

07

08

การตั้งค่า

การใช้ชุดหูฟังบลูทูธ

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้**
- 2 ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ
- 3 โทรศัพท์ KC550 จะเปลี่ยนเป็นรูปแบบชุดหูฟังโดยอัตโนมัติ บลูทูธเป็นวิธีในการส่งและรับไฟล์ที่ดี โดยไม่จำเป็นต้องต่อสาย ซึ่งสามารถเชื่อมต่อได้อย่างรวดเร็วและง่ายดาย คุณยังสามารถเชื่อมต่อกับชุดหูฟังบลูทูธเพื่อโทรออกและรับสายได้

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ KC550 ของคุณ คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการสื่อสารส่วนตัวของคุณ

อะแดปเตอร์สำหรับชาร์จแบตเตอรี่



แบตเตอรี่มาตรฐาน



ชุดหูฟังสเตอริโอ



สายเคเบิลข้อมูลและซึดีเชื่อมต่อและซิงโครไนซ์โทรศัพท์ KC550 เข้ากับ PC



คู่มือการใช้

เรียนรู้เพิ่มเติมเกี่ยวกับโทรศัพท์ KC550 ของคุณ

หมายเหตุ

- ใช้แค่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

01

02

03

04

05

06

07

08

บริการของเครือข่าย

โทรศัพท์ไร้สายที่อธิบายไว้ในคู่มือนี้ได้รับการรับรองให้ใช้ในระบบเครือข่าย GSM 900 และ DCS 1800, PCS 1900 คุณสมบัตินี้ต่างๆ ที่กล่าวถึงในคู่มือนี้เรียกว่า บริการเสริมจากระบบเครือข่าย ซึ่งเป็นบริการพิเศษที่คุณขอเปิดใช้บริการได้จากผู้ให้บริการของคุณ ก่อนที่คุณจะสามารถใช้คุณสมบัตินี้ต่างๆ ของบริการเสริมจากระบบเครือข่ายเหล่านี้ คุณต้องสมัครขอรับบริการผ่านทางผู้ให้บริการ และขอคำแนะนำในการใช้จากผู้ให้บริการด้วย

ศูนย์บริการ LG โดย บริษัท แอจจี อีเลคทรอนิกส์ (ประเทศไทย)

จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127

ถ. สมเด็จพระเจ้าตากสิน

แขวงมดคโล เขตธนบุรี

กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ -ศุกร์,

เสาร์ที่ 2 และ 4 ของเดือน

08:00 - 17:00น.

Call center : 0-2878-5757

ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์ : KC550

ระบบ : GSM 900 / DCS 1800 /
PCS 1900

อุณหภูมิแวดล้อม

สูงสุด : +55°C (คายประจุ)
+45°C (ขณะชาร์จ)

ต่ำสุด : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KC550

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 60950-1 : 2001
EN 50360/EN 60361 : 2001
EN 301 511 V9.0.2
EN 300 328 V 1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. March. 2008


Signature of representative

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย ข้อมูลโดยละเอียดเพิ่มเติมได้อธิบายอยู่ในคู่มือเล่มนี้

การรับพลังงานคลื่นความถี่วิทยุ ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น KC550 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่า เพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ไดมาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการ รับรองขนาดสัญญาณแล้ว โดยการส่ง สัญญาณดังกล่าวได้กระทำในทุกย่าน ความถี่ที่โทรศัพท์ใช้อยู่

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกคน จะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก (10) กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.348 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.665 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/ พื้นที่ที่ยอมรับข้อกำหนด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อหนึ่ง (1) กรัม (ตัวอย่างเช่น สหรัฐอเมริกา แคนาดา ออสเตรเลีย และไต้หวัน)

การดูแลและการบำรุงรักษา เครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จแบตเตอรี่ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ ที่ไม่ผ่านการรับรองดังกล่าวอาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์สนั วิทยุ หรือเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- และไม่ควรวางเครื่องโทรศัพท์ไว้ในเดอบนไม้ไคร์เวฟ เพราะอาจทำให้แบตเตอรี่ระเบิดได้
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก

- ปิดโทรศัพท์ในที่ตั้งห้ามทุกครั้งเช่นในโรงพยาบาล เพราะอาจมีผลต่ออุปกรณ์ทางการแพทย์ได้
- ไม่ควรถือโทรศัพท์ขณะที่มีมือเปียก ขณะกำลังชาร์จไฟ เพราะอาจเกิดไฟดูด หรือทำให้อุปกรณ์เสียหายได้
- ไม่ควรชาร์จโทรศัพท์ในบริเวณที่ติดไฟง่าย ควรชาร์จในที่ที่มีการระบายอากาศที่ดี
- ห้ามใช้สารเคมีที่มีฤทธิ์รุนแรง (เช่น แอลกอฮอล์, เบนซิน, ทินเนอร์ เป็นต้น) หรือสารซักฟอกทำความสะอาดเครื่องโทรศัพท์ เพราะอาจทำให้เกิดเพลิงไหม้ได้
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอกด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ใช้อุปกรณ์เสริม เช่น หูฟังและชุดหูฟังด้วยความระมัดระวัง ตรวจสอบให้แน่ใจว่าเก็บสายเคเบิลอย่างปลอดภัยแล้วและอย่าแตะเสาอากาศโดยไม่จำเป็น
- โปรดถอดสายเคเบิลขอมูลก่อนเปิดเครื่อง

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ (เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น)
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์หรืออุปกรณ์เพื่อความปลอดภัย
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์เพกพาแบบไรสายซึ่งขัดขวางการทำงานของถุงลมเพราะอาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้

หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอกโปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่อกำลังจะข้ามถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลาาน

ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

กระจก

วัสดุบางส่วนของเครื่องทำจากกระจก ดังนั้นอาจเกิดความเสียหายได้ถ้ากระแทกกับ พื้นหรือ วัสดุอื่นที่แข็ง ,หากเกิดการแตกของกระจกควรระมัดระวังในการสัมผัส

ผู้สควรนำไปเปลี่ยนที่ศูนย์บริการโดยทันที

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นโดยไม่ได้รับการอนุญาตจากพนักงาน ประจำเครื่องเสียก่อน

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์เคลื่อนที่ของคุณเพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคอยประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่ อื่น เนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ ตอยลง

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่ ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KC550 User Guide

Congratulations on your purchase of the advanced and compact KC550 phone by LG, designed to operate with the latest digital mobile communication technology.

SET UP **01**

YOUR STANDBY SCREEN **02**

THE BASICS **03**

GET CREATIVE **04**

GET ORGANISED **05**

BROWSER **06**

SETTINGS **07**

ACCESSORIES **08**

Contents

01 SET UP	
Getting to know your phone	8
Open view	9
Installing the SIM and battery	10
Memory card	13
Installing a memory card	13
Removing the memory card	13
Formatting the memory card	13
Menu map	14
02 YOUR STANDBY SCREEN	
Your standby screen	15
The quick keys	15
The main menu	15
The status bar	16
03 THE BASICS	
Calls	17
Making a call	17
Making a call from your contacts	17
Answering and rejecting a call	17
Adjusting the call volume	18
Speed dialling	18
Viewing your call logs	18
Using call divert	19
Using call barring	19
Changing the call settings	20
Contacts	21
Searching for a contact	21
Adding a new contact	21
Contact options	21
Adding a contact to a group	22
Renaming a group	22
Adding a picture to a contact	22
Copying your contacts to your SIM	23
Deleting all your contacts	23
Viewing information	23
Messaging	24
Messaging	24
Sending a message	24
Entering text	25
Setting up your email	26
Sending an email using your new account	27
Message folders	27
Managing your messages	28
Using templates	28
Changing your text message settings	29
Changing your multimedia message settings	29
Changing your email settings	30
Changing your other settings	30

04 GET CREATIVE	FM radio	41
Camera	Using the FM radio	41
Taking a quick photo	Searching for stations	41
After you've taken your photo	Resetting channels	41
Getting to know the viewfinder	Listening to the radio	41
Using the quick settings	Voice recorder	42
Using the flash	Using the voice recorder	42
Changing the image size	Recording your voice memo	42
Viewing your saved photos	Sending a voice recording	42
Setting a photo as Wallpaper	Using the muvee studio	42
or Picture ID	My stuff	43
Video camera	Images	43
Shooting a quick video	Images options menu	43
After you've shot your video	Sending a photo	44
Getting to know the viewfinder	Organising your images	44
Using the quick settings	Deleting an image	44
Watching your saved videos	Deleting multiple images	44
Adjusting the volume when	Creating a slide show	45
viewing a video	Sounds	45
MP3 player	Using a sound	45
MP3 player	Videos	45
Transferring music onto your phone	Watching a video	45
Playing a song	Using options while video is paused	46
Using options while playing music	Sending a video clip	46
Creating a playlist	Video options menu	46
Playing a playlist	Documents	47
Editing a playlist	Viewing a document	47
Deleting a playlist	Others	47

Contents

External memory	47	06 BROWSER	
Using your phone as a mass storage device.....	47	Browser	55
Transferring a file to your phone	48	Accessing the web.....	55
Sending and receiving your files using Bluetooth	49	Adding and accessing your bookmarks.....	55
Games and Apps	50	Saving a page	56
Games and Apps	50	Accessing a saved page.....	56
Playing a game.....	50	Viewing your browser history	56
Viewing applications	50	Changing the web browser settings	56
Changing the network profile.....	50	07 SETTINGS	
M-Toy	50	Settings	57
05 GET ORGANISED		Changing your profiles	57
Organiser	51	Personalising your profiles.....	57
Adding an event to your calendar	51	Changing your date & time.....	57
Editing a calendar event.....	51	Changing the language	57
Sharing a calendar event.....	52	Changing your display settings	57
Adding a memo	52	Changing your security settings	58
Tools	53	Using flight mode.....	58
Setting your alarm	53	Resetting your phone	59
Using your calculator	53	Viewing memory status.....	59
Using the stopwatch	53	Changing your Bluetooth settings.....	59
Converting a unit	54	Changing your connectivity settings	59
Adding a city to your world clock	54	Pairing with another Bluetooth device	60
SIM services.....	54	Using a Bluetooth headset.....	60

08 ACCESSORIES

Accessories 61

Network service..... 62

Technical data 62


 General 62

 Ambient Temperatures 62

Guidelines for safe and efficient use 64

Getting to know your phone

Main screen

Clear key 


Deletes a character with each press. Use this key to go back to the previous screen.

Call key 

Dials a phone number and answers incoming calls.



Charger, cable, handsfree connector

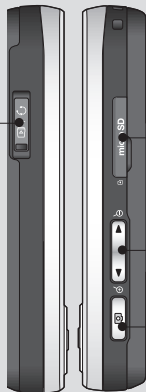

Memory card slot


Volume key

Camera

End/Power key 

Ends or rejects a call.
Turns the phone on/off.
Returns to the standby screen when you use the menu.

Open view

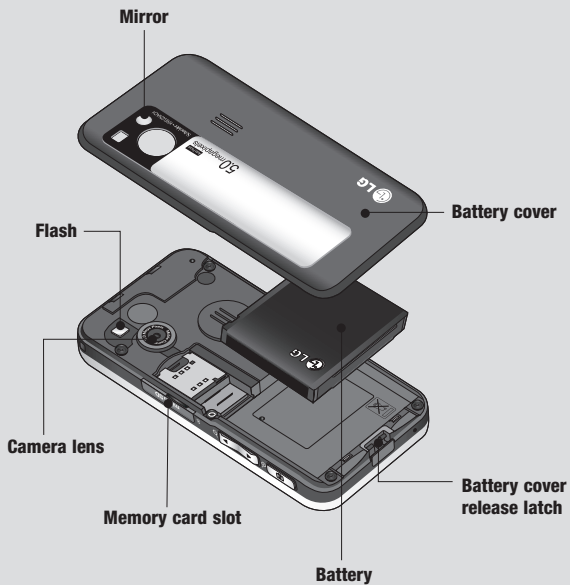

01

02

03

04

05

06

07

08

Installing the SIM and battery


1 Remove the battery cover

Press the battery cover release latch. The battery cover should lift off easily.



2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

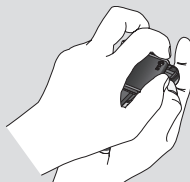


⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the SIM card


Pull the SIM card holder open. Slide the SIM card into the SIM card holder and slide the card holder backward. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.

⚠ WARNING: Do not insert the SIM card when the slide is open, as this may damage your phone and SIM card.

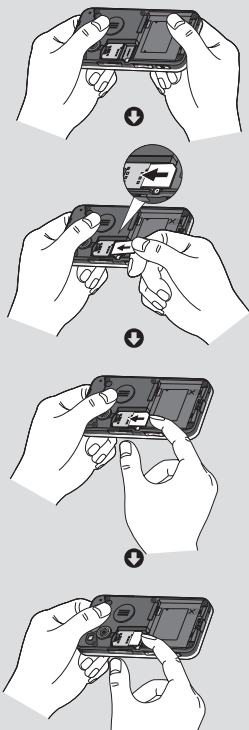

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

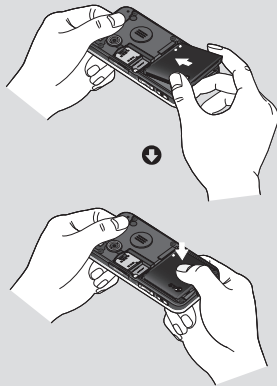

01

02

03

04

05

06


07

08

Installing the SIM and battery

5 Replace the battery cover


Slide the battery cover towards the top of the phone until it clicks into place.

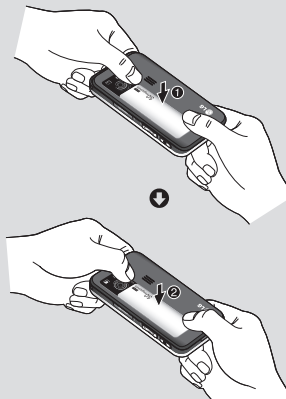

6 Charging your phone

Pull open the cover of the charger socket on the side of your KC550. Insert the charger and plug into a mains electricity socket. Your KC550 will need to be charged until a message reading Fully Charged appears on screen.

⚠ WARNING: Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.

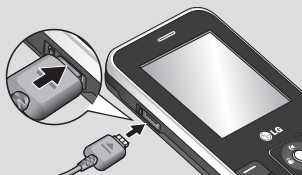


Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card. The KC550 will support a memory card of up to 2 GB.


TIP! A memory card is an optional accessory.

Open the slide covering the memory card slot. Slide the memory card into the slot, until it clicks into place. Make sure that the gold contact area is facing downwards.

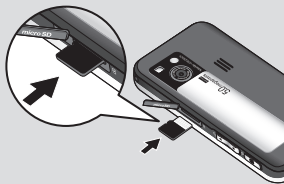

Removing the memory card

Open the slide and carefully remove the memory card by gently pushing it as shown in the following diagram:

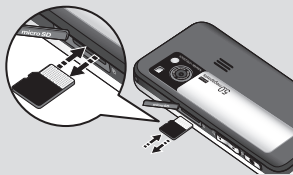

Formatting the memory card

If your memory card is not already formatted, you will need to do so before you can begin using it.

- 1 From the standby screen press **Menu** and select **Settings**.
- 2 Choose **Memory status** and select **External memory**.
- 3 Touch **Format** and enter the password, which is set to 0000 as default. Your card will be formatted and ready to use.
- 4 To view the new formatted folders on your KC550 press **Menu** and select **My stuff**. Choose **External memory**.

⚠ WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

01

02

03

04

05

06

07

08

Menu map



Games & Apps

- 1 M-toy
- 2 Games
- 3 Applications
- 4 Network profile



Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



Organiser

- 1 Calendar
- 2 Memo



Multimedia

- 1 MP3 player
- 2 Camera
- 3 Video camera
- 4 FM radio
- 5 Voice recorder
- 6 Muvee studio



Messaging

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Drafts
- 5 Outbox
- 6 Sent
- 7 Listen to voicemail
- 8 Info message
- 9 Templates
- 0 Settings



My stuff

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Documents
- 5 Others
- 6 External memory



Profiles

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



Tools

- 1 Alarm clock
- 2 Calculator
- 3 Stopwatch
- 4 Unit converter
- 5 World clock
- 6 SIM services



Browser

- 1 Home
- 2 Bookmarks
- 3 Enter address
- 4 History
- 5 Saved pages
- 6 Settings
- 7 Information



Connectivity

- 1 Bluetooth
- 2 Network
- 3 USB connection
- 4 TV out







Settings

- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Call
- 5 Security
- 6 Flight mode
- 7 Reset
- 8 Memory status

Your standby screen

The quick keys

The quick keys provide easy, one-touch access to your most used functions.

-  Select to open the inbox. To open your message editor, touch and hold the key.
-  Select to choose a sound profile for your phone.
-  Select to open the favourites menu.
-  Select to play MP3 file.

The main menu

The main menu provides twelve menu options. To open the main menu:

- 1 Select **Menu**.
- 2 The main menu will appear on the screen.
- 3 When the option you require is highlighted, select **OK** to open.

01

02

03

04

05

06

07

08

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as shown in the figure below.














Please do not cover the antenna area with your hand during a call or when using a Bluetooth connection. It may interfere and degrade signal quality.










Your standby screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth is active.




Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	GPRS available
	EDGE available
	Flight mode is activated
	Calls are diverted
	Roaming service
	Bluetooth® is activated
	WAP service is connected
	An alarm is set
	Schedule

Icon	Description
	New message
	New voice message
	General profile in use
	Silent profile in use
	Vibrate profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty


Calls

Making a call


- 1 Key in the number using the keypad. To delete a digit press .
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold **0**.

Making a call from your contacts

- 1 Select **Contacts** from the Standby screen.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 Select **Call** or press  to initiate the call.

Answering and rejecting a call

When your phone rings, touch **Accept** or press  to answer the call.

While your phone is ringing, press the camera key, then select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Slide open**, **Any key** or **Send key only**.

01

02

03

04

05

06

07

08

Calls


Adjusting the call volume

To adjust the volume during a call, press the volume key on the right hand side of your phone.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Contacts**, then select **Speed dials**.
- 2 Your voicemail is set to speed dial 1 and you cannot change this. Select any other number either by using the navigation key arrows and selecting **Assign** or by pressing the hard key number.
- 3 Your address book will open. Select the contact you'd like to assign to that number using the navigation arrows, then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically; there's no need to press .

Viewing your call logs

Press **Menu**, select **Call history**. Choose to view:

All calls - View a complete list of all your dialled, received and missed calls.

Missed calls - View a list of any calls you have missed.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Call duration - View details of how long you have spent on your calls; received and dialled.

Call costs - View the charges applied to your Last call or All calls. This service is network dependent, some operators are unable to support this.

Data information - View the amount of all your received and sent data in kilobytes.

TIP! From any call log select **Options** and choose **Delete** to delete selected or all of the recorded items.

TIP! Using the navigation key arrows, highlight any single call entry to view the date and time of the call. To view the call duration select **View**.

Using call divert

- 1 Select **Menu**, select **Settings** and choose **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no reply, when you are out of reach, all data calls or all fax calls.
- 4 Choose **Activate** and select whether to divert to voicemail, another number or your favourite number.
- 5 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Cancel all** from the **Call divert** menu.

Using call barring

- 1 Select **Menu**, select **Settings** and choose **Call**.
- 2 Select **Call barring**.
- 3 Choose any or all of the seven options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international except home country**
 - All incoming**
 - Incoming when abroad**
 - Cancel all barrings**
 - Change password**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** from the **Call** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

01

02

03

04

05

06

07

08

Calls

Changing the call settings

1 Select **Menu**, select **Settings** and choose **Call**.

2 From here you can amend the settings for:

Call divert - Choose whether to divert your calls.

Call barring - Select which calls you would like to be barred.

Fixed dial number - Choose a list of numbers that can be called from your phone.

Answer mode - Choose whether to answer the phone using the send key, any key or by sliding your handset open.

Send my number - Choose whether your number will be displayed when you call someone.

Call waiting - Be alerted when you have a call waiting.

Minute minder - Select **On** to hear a tone every minute during a call.

Auto redial - Choose **On** or **Off**.

Send DTMF tones - Choose **On** or **Off**.

Contacts

Searching for a contact

- 1 Select **Contacts** from the standby screen, and choose **Search**.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 To scroll through the contacts and their different numbers use the navigation arrows.

Adding a new contact

- 1 Select **Contacts** and choose **New contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

Or, using the slightly quicker method...

- 1 Enter the number you wish to store on the standby screen and select **Options**.
- 2 Choose **Save** or **Add to existing contact**.
- 3 Enter the relevant information as above and select **Save**.

Note: When you are storing a contact's email address, press ***:*** to enter a symbol and scroll with the navigation arrows until you see **@**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the Options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** above.
- 2 Select **Options** to open the list of options.

From here you can:

Edit - Change any of the contact's details.

New message - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

Send via - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Bluetooth** or by **Email**.

Delete - Delete the contact. Select **Yes** if you are sure.

New contact - Add a new contact.

Multi delete - Mark multiple contacts to delete.

01

02

03

04

05

06

07

08

Contacts

Copy to SIM/phone - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleague**, **VIP**, **Group1** and **Group2** already set up on the phone.

- 1 Select **Contacts** and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **View** then select **Add**.
- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and press , then select **Done**.
- 4 Select **Yes** if you are sure.

TIP! You can assign a ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to and select **Options** and choose an item you want.

Renaming a group

You can rename any of the groups to fit your lifestyle.

- 1 Select **Contacts** and choose **Groups**.
- 2 Select a group you want to rename.
- 3 Choose **Options**, select **Rename** and enter your new group name.
- 4 Select **Save**.

Note: You can only assign a contact to a group or add a picture to a contact that is saved in your phone (not SIM) memory.

Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 Select **Contacts** and choose **Settings**.
- 2 Select **View options** and choose **With picture**.
- 3 Then return to the address book and select the contact you want to add a picture to.
- 4 Choose **Options** and select **Edit**.

- 5 Scroll down to the **Photo** section and select **Edit**. Choose **Options** and select **Images** or **New image**. If you select **Images**, you can choose an image that is saved in your phone memory. If you select **New image**, your camera viewfinder will open, so you can take a picture of your contact.
- 6 Select **Save**.

Copying your contacts to your SIM

You can also choose to copy your contacts from your SIM to your handset or from your handset to your SIM.

- 1 Select **Contacts** and choose **Copy All**.
- 2 Select to copy the contacts from **SIM to phone** or **Phone to SIM**.
- 3 Choose whether to **Keep original** or **Delete original**.
- 4 Select **Yes** if you are sure.

Deleting all your contacts

- 1 Select **Contacts** and choose **Delete all**.
- 2 Select to delete contacts from **SIM** or **Phone**.
- 3 Select **Yes** if you are sure.

- 4 Enter the password, which is set to 0000 as default, and select **OK**.

Viewing information

Select **Contacts** and choose **Information**. From here you can view your **Service dial numbers**, your **Own numbers** and your **Business card**.

TIP! If you haven't yet created a business card, the **Business card** screen will give you the option to create one. Select **New** and enter your details as you would for any contact. Choose **Save**.

01

02

03

04

05

06

07

08

Messaging

Messaging

Your KC550 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) and email, as well as the network's service messages. Simply press

Menu and select **Messaging**.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **Message** to send an SMS or MMS. (If you want to send an **Email** see page 26-27 or if you want to send something using **Bluetooth**, see page 49.)
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using either the T9 predictive mode or Abc manual mode. See **Entering text** on page 25 to see how to switch between the different text entry modes.

- 5 Select **Options** and choose **Insert** to add an **Image, Sound, Video, Symbol, Text template, Emoticon, Name & Number, New slide, Subject** or **More (Contact/My business card/Schedule)**.
- 6 Press the centre key **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Select **Send**.



WARNING: If an **Image, Sound, Video, New slide** or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

To turn on T9 mode in the text entry field, choose **Options**, select **Set T9** and choose **On**. With T9 on, you can switch text input mode by pressing **#*#**. You will notice the text input mode indicator in the upper right corner of the display.

To input a symbol in the text entry field, press the ***#** key and select a symbol, then select **OK**.

Complete each word with a space by pressing **0**.

To delete a character, press **C** key.

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press **8, 3, 5, 3, 7, 4, 6, 6, 3** to write 'telephone'.

If the word you want doesn't appear, select **Options** and select **New T9 word**, then you can enter the word using ABC manual mode. Your word will be added to the dictionary.

Note: You can select a different T9 language by pressing **Options** and select **Writing language**.

ABC manual mode

In ABC manual mode you may need to press the key repeatedly to enter a letter. For example, to write 'hello', press **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

123 mode

Type numbers using one keystroke per number. You can also add numbers whilst in letter modes by pressing and holding the desired key.

01

02

03

04

05

06

07

08

Messaging

Setting up your email

You can stay in touch on the move using email on your KC550. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu**, select **Messaging** and choose **Settings**.
- 2 Select **Email** then **Email account**.
- 3 Select **New**.
- 4 You can now choose how your account works:
 - Account name** - Enter a name for this account.
 - Email address** - Enter the account email address.
 - My name** - Enter your name.
 - Incoming mail server** - Enter the account details.
 - User name** - Enter the account user name.
 - Password** - Enter the account password.
 - Outgoing mail server** - Enter the account details.
 - Outgoing mail authentication** - Select on or off.
 - Outgoing server ID** - Enter the account details.
 - Outgoing server password** - Enter the account details.

To enter the following information, choose **Options** and select **Advanced settings**.

Protocol type - Select the mailbox type, POP3 or IMAP4.

Maximum receive size - Choose the size limit of your emails, the maximum is 300KB.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

APOP secure login - Choose whether to save your emails to the server of the phone (only for IMAP4).

Insert signature - Choose whether to automatically insert a signature in your emails.

Reply email address - Enter the "reply to" email address.

Incoming port number - Normally, this is 110 for POP3 and 143 for IMAP4 accounts.

Outgoing port number - Normally this is 25.

Auto retrieving - Select to automatically retrieve your emails.

Retrieve download - Select **Headers only**, **Headers + body** (only for IMAP4) or **All**.

Now your account is set up, it will appear in the list of accounts in your Email folder.

Sending an email using your new account

To send/receive an email, you should set up an email account (see page 26).

- 1 Select **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **Email** and a new email will open.
- 3 Write a subject then touch OK.
- 4 Enter your message using T9 predictive mode or ABC manual mode. See **Entering text** on page 25 to see how to switch between the different text entry modes.
- 5 Select **Options** and choose an attachment to add: **Image, Sound, Video, Document, Contact, My business card** or **Schedule**.
- 6 Press **Send** and enter the recipient's address or touch **Options** and select **Contacts** to open your contacts list.
- 7 Press **Send** and your email will be sent.

Message folders

Press **Menu**, select **Messaging**. The folder structure used on your KC550 is fairly self-explanatory.

Inbox - All the messages you receive are placed into your Inbox. From here you can reply, forward and more, see below for details.

Email box - Contains all your email messages. Select the account you want to use then select **Retrieve**. Your KC550 will connect to your email account and retrieve your new messages.

Drafts - If you don't have time to finish writing a message, you can save what you have done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent - All the messages you send are placed into your Sent folder.

Listen to voicemail - You can access your voicemail box (if provided by your network). When a new voice message is received, the symbol will be displayed on the standby screen.

Info message - All info messages and updates received from your operator.

Templates - A list of useful messages, already written for a quick reply.

01

02

03

04

05

06


07

08

Messaging

Managing your messages

You can use your **Inbox** to manage your messages.

- 1 Press **Menu**, select **Messaging** and choose **Inbox**. Or, a quicker way is to select  on the standby screen.
- 2 Select **Options** and then choose to:
 - Delete** - Delete the selected message.
 - Reply** - Send a reply to the selected message.
 - Forward** - Send the selected message on to another person.
 - Return call** - Call the person who sent you the message.
 - Information** - View the details of a message, for example, the time it was sent.
 - Copy/Move** - Choose to copy or move the selected message to the SIM card or phone.
 - Multi delete** - Delete selected messages.
 - Delete all read** - All opened messages will be deleted.
 - Delete all** - Delete text messages, multimedia messages or all messages.

If you see the message **No space for SIM message**, you should delete some messages from your inbox.

If you see the message **No space for messages**, you can delete either messages or saved files to create space.

Using templates

You can create templates for the **Text** and **Multimedia** messages you send most frequently. There are some templates already on your phone, which can be edited if you wish.

- 1 Press **Menu**, select **Messaging** and choose **Templates**.
- 2 Choose **Text** or **Multimedia**. You can then select **Options** and choose **Edit** to change existing templates, to add **New template** or to **Delete** templates.
- 3 To send a template, select the one you want to send, choose **Options** and select **Send via**.
- 4 Choose how you would like to send the template; as a **Message**, **Bluetooth message** or **Email**.
- 5 Select a contact and select **Send**.

Changing your text message settings

Your KC550 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do this using the **Settings** options.

Press **Menu**, select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

Message types - Convert your text into Voice, Fax, Paging, X.400, Email or ERMES.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Reply charging - Choose to be billed for your message recipient's reply.

Message centre number - Enter the details for your message centre.

Character encoding - Choose how your characters are encoded. This impacts the size of your message and therefore data charges.

Send long text as - Choose whether to send your message as SMS or MMS when you enter a text longer than 2 pages in the message field.

Bearer setting - Choose whether to send your messages via GSM or GPRS.

Changing your multimedia message settings

Your KC550 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do so using the **Settings** options.

Press **Menu**, select **Messaging**, then choose **Settings** and **Multimedia message**.

You can make changes to:

Slide duration - Choose how long your slides appear on screen.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to allow and/or request a delivery report.

01

02

03

04

05

06

07

08

Messaging

Read report - Choose to allow and/or send a read report.

Auto download - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

Network profile - Select an operator specific network profile for sending multimedia messages.

Permitted message type - Select which type of multimedia messages to allow.

Changing your email settings

You can adapt your email settings to your own preferences.

- 1 Press **Menu**, select **Messaging** and choose **Settings**.
- 2 Select **Email** then you can adapt the following settings:

Email account - You can set up an email account.

Access point - You can set the email access point.

Retrieve interval - Choose how often your KC550 checks for new email messages.

Signature - Create an email signature and switch this feature on.

Changing your other settings

Press **Menu**, select **Messaging**, choose **Settings** then:

Voicemail number - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.

Service message - Here you can switch off service message, which means your messages will no longer be pushed directly to your device as they are received, only when you check for new messages.

Info message - Choose the reception status, alerts and language of your info messages.

Save text message - Choose whether to save your text messages to the phone memory or to the external memory.

Camera

Taking a quick photo

- 1 Open the lens cover and hold the camera key down on the right side of the handset. The camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press the camera key halfway. A focus box will appear in the centre of the viewfinder screen. Position the phone so you can see the subject of your photo in the focus box. When the focus box turns green, the camera has focused on your subject.
- 4 Press the centre soft key or press the camera key all the way down to take a photo.

Note: You can also access the camera menu from the standby screen. Touch **Menu** and select **Multimedia**, scroll down to and select **Camera** to open the viewfinder.

After you've taken your photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen and you will see six options displayed on the right side of the screen.

Delete - Delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.



New image - Take another photo straightaway. Your current photo will be saved.



Set as - Select to open a sub menu to set your image as **Wallpaper** or **Picture ID**.



Send via - Select to send the photo as a **Multimedia message** or **Email**. See page 24 for **Sending a message**.



Album - Select to look at the other photos in your album. Your current photo will be saved. See page 34 for **Viewing your saved photos**.

OK - Select to take another photo straightaway. Your current photo will be saved.

01

02

03

04

05

06


07

08

Camera

Getting to know the viewfinder

Note: You can adjust the zoom using the volume key on the left side of the phone. The zoom function is only available when the resolution is set to 640 x 480 or below. See **Changing the image size** on page 33 for details.

TIP! When using the camera, power consumption increases. If  icon appears indicating low battery, recharge the battery before use.

Using the quick settings

Select **Options** to access the quick settings options. These include various options for taking photos.

Self timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from 3 seconds, 5 seconds or 10 seconds. Great for that group photo you want to be part of.

Continuous shot - This enables you to take up to 9 shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

White balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Night mode**, **Daylight**, **Incandescent**, **Cloudy** or **Fluorescent**.

Colour effect - Choose from four colour tone options: Off (normal/colour), Sepia, Mono (black and white) or Negative.

EV - Turn macro mode on if you are taking a picture very close to the image subject.

Resolution - See **Changing the image size** on page 33.

Quality - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality the sharper a photo will be but the file size will increase as a result, which means you will be able to store fewer photos in your memory.

Auto focus - Turn Auto focus On or Off. Your camera can automatically adjust the focus for a clear, sharp image with a single press of the camera button.

Shutter tone - Select one of the three shutter sounds.


ISO - Set the ISO to Auto, ISO 800, ISO 400, ISO200, ISO 100 or ISO 80.

Save to - Choose whether to save your photos to the phone memory or to the external memory.

Reset settings - Choose **Yes** to reset your phone to its original camera settings.

Using the flash

The flash is set to **Off** as default, but there are other options.

- 1 Select  on the navigation key.
- 2 There are four flash options:

Off - The camera will not flash. This is useful if you want to save battery power.

Auto - Your camera will assess the lighting needed to take a good picture and use the flash as necessary.

Always on - Set the flash to on when you are taking a photo in a dark place.

Red eye reduction - The flash will remain on as you compose your picture and flash again as you take the photo in order to reduce red eye.

3 Select the flash option you'd like to use.

4 When you have made your selection the flash menu will automatically close, ready for you to take your picture.

5 The flash icon in the viewfinder will change according to your new flash mode.

Note: When you exit the camera, the flash setting will revert to the default **Off** mode.

Changing the image size

You can change the size of the photo to save memory space. The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 Press **Options** and select **Resolution** from the toolbar.
- 2 Select a pixel value from the six numerical options (320X240, 640X480, 1280X960, 1600X1200, 2048X1536, 2560X1920).
- 3 Press **OK** to implement your changes.

Note: The zoom function varies depending on the resolution the camera is set to. The zoom function is only available when the resolution is set to 640 x 480 or below.

01

02

03

04

05


06

07

08

Camera

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply select  on the navigation key. From the standby screen you should select **Menu**, then select **My stuff** and **Images**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the photo you want to view and select **View** to enlarge it.

Setting a photo as Wallpaper or Picture ID

From your image gallery, use the navigation keys to select an image and choose **Options** and **Set as** to use the selected image as **Wallpaper** or **Picture ID** for one of your contacts.

Note: Picture ID can only be added to contacts saved to your phone, not your SIM.

Video camera

Shooting a quick video


- 1 Open the lens cover and hold the camera key down on the right side of the handset. The camera's viewfinder will appear on screen.
- 2 Choose **Video** on the top right corner of the screen. The video camera's viewfinder will appear on screen.
- 3 Point the camera lens towards the subject of the video.
- 4 Press the camera key on the right side of the handset to start recording.
- 5 **REC** will appear in the bottom left corner of the viewfinder and a timer will show the length of your video.
- 6 To pause the video select **Pause** and resume by selecting **Resume**.
- 7 Select **Stop** to stop recording.


Note: You can also access the **Video camera** from the standby screen. Select **Menu** and select **Multimedia**, scroll down and select **Video camera** to open the viewfinder.

After you've shot your video


The name of the video runs along the bottom of the screen and six options will be displayed on the right side of the screen.

Delete - Delete the video you have just recorded and confirm by selecting Yes. The viewfinder will reappear.

 **New video** - Select to shoot another video straight away. Your current video will be saved.

 **Play** - Select to play the video you have just recorded.

 **Send via** - Select to send the video as a **Multimedia message** or **Email**. See page 24 for **Sending a message**.

 **Album** - Select to look at the other video clips in your album. Your current video clip will be saved. See page 37 for **Watching your saved videos**.

OK - Select to record another video straight away. Your current video will be saved.

01

02

03

04

05

06

07

08

Video camera

Getting to know the viewfinder

Note: You can adjust the zoom using the volume key on the left side of the phone.

Using the quick settings

Select **Options** to access the quick settings options. These include various options for recording videos.

Mode - To record a video you want to send in a multimedia message, select **MMS**.

Colour effect - Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Mono** (black and white) or **Negative**.

Brightness - Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper. Use the navigation keys to slide the contrast indicator along the bar, towards - for a lower contrast, hazier image or towards + for a higher contrast, sharper image.

Resolution - If you want to fit more videos onto your phone you can alter the pixel number to make the file size smaller. Choose between four options for your video, 176X144, 320X240, 640X480, 720X480.

Quality - Super fine/ Fine/ Normal.

Save to - Choose whether to save your video clip to the phone memory or to the external memory.

Flash - Turn the flash **On** or **Off**. The flash is set to **Off** as default, saving battery power. Whenever you exit the camera it will return to the default **Off** setting.

White balance - The white balance ensures that any white in your video is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy**, **Fluorescent** or **Night mode**.

Album - View all of your images.

Reset settings - Choose **Yes** to reset your phone to it's original video camera settings.

Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the Options menu select **Album**. From the standby screen you should touch **Menu**, then select **My stuff** and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the video you want to view and touch the centre soft key to watch it.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the volume keys on the right side of the handset.

01

02

03

04

05

06


07

08

MP3 player

MP3 player

Your LG KC550 has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, press  from the standby screen, or select **Menu** and select **Multimedia** then **MP3 player**. From here you have access to:

All songs - Contains all of the songs you have on your phone.

My playlist - Contains any playlists you have created as well as **On the go**, **Recent songs** and **Favourite songs**.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Settings - Adjust your music settings.







Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.

- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

Playing a song

- 1 Press **Menu** and select **Multimedia**, then choose **MP3 player**, or press  from the standby screen.
- 2 Choose **All songs** then select the song you want to play. Select .
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select  to stop the music and return to the MP3 player menu.

TIP! To change the volume while listening to music, use the volume keys on the side of your phone.

Using options while playing music

Select **Options** and choose from:

Minimise - Hide the music player screen so that you can continue using your phone as normal while music is playing.

View playlist - Look at the playlist you are currently listening to.

Add to playlist - Adds the current track to a playlist.

Set as - Set the current track as your **Ringtone** or **Message tone**.

Information - You can view information about the MP3 file you are listening to.

Settings - Change the Shuffle, Repeat, or Equalizer settings.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Press **Options** and select **New playlist**, enter the playlist name and press **Save**.
- 4 The **New playlist** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting .
- 5 Select **Save** to store the playlist.

Playing a playlist

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Select the playlist you would like to play and select **View**, then select **▶**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

If you want to organise your playlists, you can edit them using the **Options** menu.

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to edit and select **View**, then select **Options**. Choose from:

Add - You can add songs to the playlist using this option.

Remove - Remove a song from the playlist. Select **Yes** to confirm.

Multi remove - Delete selected songs from the playlist.

01

02

03

04

05

06

07

08

MP3 player

Remove all - Remove all of the songs from the playlist.

Information - View the playlist information.

Deleting a playlist

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete all** and select **Yes** to confirm.

Note:

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

FM radio

Using the FM radio

Your LG KC550 has an FM radio feature so you can tune into your favourite stations to listen on the move.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 12 channels in your phone.

To auto tune:

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and choose **Auto scan** then select **Yes**.
- 3 Each time a station is found, your KC550 will ask if you want to save it. Select **Yes** if you want to store the channel and **No** if you don't. Any stations you choose to save will automatically be allocated to a channel number in your phone.

To manually tune:

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select a channel number that you want to save a station to and choose **Edit**.
- 3 To enter your station, use the navigation keys to search or enter the frequency using the keypad, then select **Save**.

Note: You can also edit the stations you have saved in a channel number.

TIP! To improve the reception extend the headset cord, which functions as the radio antenna.

Resetting channels

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and select **Reset channels**. Choose **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

Note: You can listen to the radio via a built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.

01

02

03

04

05

06

07



08

Voice recorder

Using the voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Multimedia**, then choose **Voice recorder**.
- 2 Press  to begin recording.
- 3 Select **Pause** to pause the recording.
- 4 Choose **Stop** to end the recording.
- 5 Select  to listen to the recording.

Note: You can listen to all of the voice recordings you have saved by selecting **Album**.

Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

TIP! If you plan to send your recording as a message, before you start recording, select **Options**, select **Recording mode** and choose **MMS**. This will ensure that the recording fits into a message.

Using the muvee studio

The Muvee studio allows you to create an image slide show combined with music.

- 1 Press **Menu** and select **Multimedia**, then choose **Muvee studio**.
- 2 Choose the music track that you would like to use.
- 3 Mark the images that you would like to use in your slide show, and choose **Done**.
- 4 The new muvee will begin to play. To save your slide show press **Save**.

Note: You can use the Options menu to choose where to save your slide show (Phone or External memory), the duration mode (General or MMS) and the play order (Random or Sequential).

My stuff

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

All your multimedia files will be saved in **My stuff**. Select **Menu** then select **My stuff** to open a list of folders.

Images

Images contains a folder of default images and default flash files pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera. Only the **View**, **Set as**, **File info**, **Slide show**, **Sort by** and **List view / Thumbnail view** options are available for default images.

In the **Images** folder, select **Options** to bring up your list of options.

Delete - Delete the selected image.

Set as - Set the selected image as your **Wallpaper** or as a **Picture ID**.

Send via - Send the selected image to a friend via **Multimedia message**, **Bluetooth** or **Email**.

Note: The image may need to be resized before it can be sent by MMS.

File - Rename, make animation or view the information (Name, Size, Date, Time, Resolution, Type and Copyright) of the selected image. If you have an external memory card inserted two additional options will show: **Move to external memory** and **Copy to external memory**.

Print via - Print an image file via **Bluetooth** or **Pictbridge**.

Slide show - See **Creating a slide show** on page 45.

New folder - Create a new folder within the main Images folder.

Mark/Unmark - Select more than one image to delete.

Delete all - Delete all the photos in your Images folder.

01

02

03

04

05

06

07

08

My stuff

Sort by - Arrange your images by **Date**, **Type** or **Name**.

List view / Thumbnail view - Change the way you view your photos.

Sending a photo

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**.
- 5 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Organising your images

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** then select **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

Deleting an image

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select an image and press **Options**.
- 4 Select **Delete**.

Deleting multiple images

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** and select **Mark/Unmark** and **Delete**.
- 4 A box will appear next to each image. Select each image and select to mark it. To unmark an image, select again so that the tick disappears from the box. Or, you can select **Options** then choose **Mark all** or **Unmark all**.
- 5 Once you have marked all of the appropriate boxes, select **Delete** and confirm you want to delete all of the marked images.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select the photo you would like to begin the slide show and select **Options**.
- 4 Choose **Slide show** and it will begin.
- 5 Press **Pause** to pause the slide show and **Quit** to end the slide show and return to the **Images** folder.

Selecting **Options** during the slide show presents further options:

View - Choose between **Full image** and **Full screen**. Select **Landscape** to change the orientation of the image.

Repeat on / off - Decide whether you want the slide show on repeat or not.

Sounds

The **Sounds** folder contains the **Default sounds**, your voice recordings and sound files downloaded by you. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Sounds**.
- 3 Select **Default sounds** or choose from the list of voice recording files.
- 4 Select a sound and press ► to listen to it.
- 5 Select **Options**, select **Set as** and choose from **Ringtone**, **Ringtone ID** and **Message tone**.

Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select a video and press ►.

01

02

03

04

05

06

07

08

My stuff

Using options while video is paused

By selecting **Options**, the video you are playing will be in pause mode and you can choose from:

Delete - Delete the video.

Send via - Send the video to a friend via **Multimedia message, Bluetooth** or **Email**.

Information - View the Name, Size, Date, Time, Type and Copyright details of the selected file.

Sending a video clip

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select the video clip you want and press **Options**.
- 4 Press **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 5 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Note: The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all.

Video options menu

In the **Videos** folder, press **Options** to bring up the following list of options.

Delete - Delete the selected video.

Send via - Send the selected video to a friend via **Multimedia message, Email** or **Bluetooth**.

File - Rename the video or view the information (Name, Size, Date, Time, Type and Copyright). If you have an external memory card inserted two additional options will show:

Move to external memory and **Copy to external memory**.

New folder - Create a new folder within the main Videos folder.

Mark/Unmark - Select more than one video clip before selecting **Delete**.

Delete all - Delete all the clips in your Videos folder.

Sort by - Arrange your videos by **Date, Type** or **Name**.

Auto next play - Allows to set the play mode: **Off**, **Repeat once** and **Repeat all**.

- **Off**: Plays the selected file.
- **Repeat once**: Plays all files in a list once.
- **Repeat all**: Continues to play all files in a list repeatedly.

List view / Thumbnail view - Change the way you view your videos.

Documents

From the **Documents** menu, you can view Excel, PowerPoint, Word, Text and PDF files.

Viewing a document

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Documents**.
- 3 Select a document and press **View**.

Others

From the **Others** menu, you can view the files which are not saved in the Images, Sounds, Videos or Documents folders.

You may find that when you transfer files from your computer to your phone, they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To move a file from **Others** to **Documents**:

- 1 Press **Menu**, then select **My stuff** followed by **Others**.
- 2 Select a file and select **Options**.
- 3 Press **Move**, then select **Move** again.

External memory

If you've inserted a memory card it will be displayed as a folder within **My stuff**. Your external memory folder will be divided into five further folders: **Images**, **Sounds**, **Videos**, **Documents** and **Others**. Each folder will contain all the files of that type which are saved to your memory card rather than your handset.

Using your phone as a mass storage device

Your KC550 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. If you've inserted a memory card, when connecting as **Mass storage**, the phone will be displayed as two drives on your computer: the handset memory and external memory.

01

02

03

04

05

06

07

08

My stuff

- 1 Press **Menu**, select **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and select **OK**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the KC550. Plug the larger end into the USB port of your computer.
- 5 A removable disk folder will open automatically on your computer, two if you have a memory card inserted, showing all the folders on your phone or memory card.
- 6 Drag and drop your images, videos, music or documents into the correct folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.
- 8 When you want to then access a file, for example an image, press **Menu**, then select **My stuff** followed by **External memory** then **Images**. All the images you transfer will be contained in this file.

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on its type. So for example, photographs will be saved in the **Images** folder and music in the **Sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

Note: Files sent using Bluetooth will be saved to the phone memory.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device** on page 60.

To switch Bluetooth on:

- 1 Press **Menu** and select **Connectivity**, then choose **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.

- 4 Your KC550 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **Send**.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** on page 59 for more information.
- 2 A message will prompt you to accept the file from the sender, select **Yes** to receive the file.

TIP! Keep an eye on the progress bar to make sure your file is sent.

Note The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

01

02

03

04

05

06

07

08

Games and Apps

Games and Apps

Your KC550 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Playing a game

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Games**.
- 3 Choose the game you want to play and select **Play**.

Viewing applications

You can manage the Java applications installed in your phone by using the **Applications** menu. You can also delete downloaded applications.

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Applications**.
- 3 View and manage any applications you have.

Changing the network profile

To download a game, you can set the value to connect to the network using **Network profile**.

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Network profile**.
- 3 You can add and edit a new network profile.

M-Toy

You can enjoy six default games including: **Dart, Homerun Derby, Magic Ball, Hammer, Maze, Fishing**.

About - View the information for a game.

Setting - Set the sound and vibration when activating a game.

Reset data - Reset all settings.

Exit - End a game.

Organiser

Adding an event to your calendar

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **New** and scroll down to enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 5 Scroll down and enter a **Subject** for the event. Use the keypad to type letters and numbers.
- 6 Scroll down once more to select whether the event is occurring **Once** or repeated at **Daily**, **Weekly**, **Monthly** or **Yearly** intervals. If the event is repeated, you can

also scroll down to enter an **Expiration date** for when the events will stop completely.

- 7 Select **Save** and your event will be saved in the calendar. A square cursor will mark the days that any events have been saved to.

Editing a calendar event

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Choose **Options** and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and select **View**. Alternatively select the day of the event in the calendar and select **View**.
- 3 Select **Edit** and scroll to the event detail you want to change. Make your modifications and select **Save** to store the edited event.

Note: You can delete an event from your calendar by selecting to view the event and then pressing **Options** and **Delete**.

01

02

03

04

05

06

07

08

Organiser

Sharing a calendar event

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Select the event you would like to share and choose **Options**.
- 3 Choose **Send via** and select from **Text message**, **Multimedia message**, **Bluetooth** or **Email**.

Adding a memo

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Memo**.
- 2 Select **New** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on screen the next time you open the memo application.

TIP! You can edit an existing memo. Select the one you want to edit, press **Options** and select **Edit**.

Tools

Setting your alarm

- 1 From the standby screen press **Menu**, and select **Tools**, then **Alarm clock**.
- 2 Select **New**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun**, or **Choose weekday**.
- 5 Scroll down and choose whether you would like the alarm to **Always sound**, **Always vibrate** or **Follow profile**.
- 6 Scroll down to choose the alarm tone. Choose **Sounds** to select a new sound.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.
- 8 Select **Save**.

Note: You can set up to 5 alarms.

Using your calculator

- 1 From the standby screen press **Menu**, and select **Tools**, then **Calculator**.
- 2 Press the numeric keys to input numbers.

- 3 For simple calculations, select the function you require (+, -, ×, ÷), followed by =.
- 4 For more complex calculations, select **Function** to select a command.
- 5 Select **Clear** to clear the screen and start a new calculation.

Using the stopwatch

- 1 From the standby screen press **Menu**, and select **Tools**, then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. The duration of an individual lap time (up to 20 times) can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

01

02

03

04

05

06

07

08

Tools

Converting a unit

- 1 From the standby screen press **Menu**, and select **Tools**, then **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Scroll up to choose from the unit of measurement you want to enter. Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

Adding a city to your world clock

- 1 From the standby screen press **Menu**, and select **Tools**, then **World clock**.
- 2 Scroll up, down, left or right to navigate the globe and choose a continent.
- 3 Select **Zoom in** to zoom into an area and choose from the cities in that area.
- 4 Press **OK**.

SIM services

This feature depends on SIM and the network services.

In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Browser

With a browser at the tip of your fingers, you can get up to date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 Press **Menu** and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately, select **Enter address** and type in your desired URL, followed by **Connect**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Press **Menu** and select **Browser**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Options** and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Press **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select **Connect**. You will be connected to your bookmarked page.

01

02

03

04

05

06

07

08

Browser

Saving a page

- 1 Access your required web page as described on page 55.
- 2 Choose **Options** and scroll to **Save**, select **This page**.
- 3 Select **OK**.

Accessing a saved page

- 1 Press **Menu** and select **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and press **Open**.

TIP! This menu will also allow you to delete saved pages.

Viewing your browser history

- 1 Press **Menu** and select **Browser**.
- 2 Select **History** and select **OK**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and select **Connect**.

Changing the web browser settings

- 1 Press **Menu** and select **Browser**.
- 2 Select **Settings**.
- 3 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Network profiles**, **Rendering mode**, **Cache**, **Cookies**, **Security certificates**, **Show image**, **JavaScript** and **Storage location**.
- 4 Once you have changed your settings, select **OK**.

Settings

Within this folder you can adapt your settings to make your KC550 personal to you.

Note: For information on call settings see page 20.

Changing your profiles

You can quickly change your profile from the standby screen. Simply press  then the profile you would like to activate. Choose from **General**, **Silent**, **Vibrate only**, and **Outdoor**.

Personalising your profiles

You can personalise each profile setting.

- 1 Press **Menu** and select **Profiles**.
- 2 Choose the profile you want and select **Personalise**.
- 3 For the **Silent** and **Vibrate only** profiles, you can adapt the vibration. For the other profiles, you can change all of the sounds and alert options available in the list. (Please refer to your handset for details.)

Changing your date & time

You can set functions relating to the date and time.

- 1 Press **Menu** and select **Settings**.
- 2 Select **Date & Time** and choose from the list below:

Set date - You can enter the current date.

Date format - You can set the date format. (YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY)

Set time - You can enter the current time.

Time format - You can set the time format to either 24 hours or 12 hours.

Auto update - Select **On**, the phone will automatically update the date and time.

Changing the language

Go to **Settings** and **Languages** to change the language for any text in your phone. Any change will also alter the language input mode.

Changing your display settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Display** and choose from:

Wallpaper - Choose a wallpaper to appear on your screen display.

Clocks - Choose to have the time and date visible on your standby screen. Choose from No date & time or Normal.

Backlight timer - Choose how long the backlight remains on for.

01

02

03

04

05

06

07

08

Settings

TIP! The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Brightness - Use the navigation keys to adjust the brightness. Choose from 40%, 60%, 80% or 100%, then select OK to save your change.

Home screen shortcut - Select **On** to display the shortcuts of 4 menus as pictures on the middle of the standby screen.

Font size - Change the font size of the following : **Menu, Dialling** and **Messaging**.

Theme - Quickly change the whole look of your screen.

Menu style - Change the menu view from **Grid view** to **List view**.

Main font style - Adjust the font type.

Dialling font style - Adjust the font style for when you are dialling a phone number.

Standby text - Choose to add a message to your standby screen.

Network name - Choose to show or hide the network name.

Changing your security settings

Change your security settings to keep your KC550 and the important information it holds protected.

- 1 Press **Menu** and select **Settings**.
- 2 Select **Security** and choose from the list below:

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Phone lock - Choose a security code to lock your phone **When power on, When SIM changed** or **Immediately**.

Change codes - Change your **Security code, PIN1 code** or **PIN2 code**.

Using flight mode

Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the internet, send messages or use Bluetooth when **Flight mode** is switched **On**.

Resetting your phone

Use **Reset** to reset all the settings to their factory definitions. You need the security code to activate this function.

Viewing memory status

Your KC550 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Menu** and select **Settings**. Choose **Memory status** and you will then see the current status of the memories (Common, Reserved, SIM card and External memory) in your KC550.

TIP! See page 13 for information on **inserting a memory card**.

Changing your Bluetooth settings

- 1 Press **Menu** and select **Connectivity**, then choose **Bluetooth**.
- 2 Choose **Bluetooth settings**. Make your changes to:

My visibility - Choose whether to **Show** or **Hide** your device to others.

My name - Enter a name for your KC550.

My address - View your Bluetooth address.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Press **Menu** and select **Connectivity**. Your options are:

Bluetooth - Set up your KC550 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

Network - Your KC550 connects automatically to your preferred network. To change these settings use this menu. You can also add new access points using this menu.

01

02

03

04

05

06

07

08

Settings

USB connection - Choose **Data service** and synchronise your KC550 using the LG PC Suite software to copy files from your phone.

If you have a memory card inserted, select **Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the KC550 removable device folder. See pages 47~49 for further details.

Pairing with another Bluetooth device

By pairing your KC550 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**.
You can change your visibility in the **Bluetooth settings** menu, by selecting **My visibility**, then **Show**.
- 2 Select **Device list** from the Bluetooth menu and choose **New**.
- 3 Your KC550 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Pair** and enter a passcode then choose **OK**.

- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your KC550 will then automatically connect to your Bluetooth headset and switch to headset profile.

Accessories

These accessories were supplied with your KC550.

Charger



Data cable and CD

Connect and synchronise your KC550 and PC.



Battery



User Guide

Learn more about your KC550.

Stereo headset



Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

01

02

03

04

05

06

07

08

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800 and PCS1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

“LG Service Center” by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw

**Taksin Rd.,
Bookalo, Thonburi, Bangkok 10600**

**Working day : Mon-Fri and
Sat 2nd, 4th 08:00 - 17:00**

Call center : 0-2878-5757

Technical data

General

Product name : KC550

System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KC550

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 60950-1 : 2001
EN 50360/EN 60361 : 2001
EN 301 511 V9.0.2
EN 300 328 V 1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. March. 2008


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KC550 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.348 W/kg (10g) and when worn on the body is 0.665 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

- Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
 - Keep away from electrical appliances such as TVs, radios, and personal computers.

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient Use

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the airbag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



 **LG Mitr Electronics**

บริการธุรกิจตอบรับ

ใบอนุญาตเลขที่ บณ.(ต)/2117 ปณจ.ไพระโชนง
ถ้าฝากส่งในประเทศไม่ต้องผูกตราไปรษณียากร



บริษัท แอลจีมีตรอิเล็กทรอนิกส์ จำกัด

75 /1-3 อาคารริชมอนด์ สุขุมวิท 26

แขวงคลองตัน เขตคลองเตย

กรุงเทพฯ 10110



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน
นับจากวันที่ซื้อ
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)

ที่อยู่ร้าน :
(Dealer's Address)

ประทับตราร้านค้า



Digital Mobile

สำหรับส่งคืนบริษัท

P/N: MCDF0001117(1.0)

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)



www.lge.co.th

ศูนย์บริการข้อมูล

Customer Information Center 0-2204-1888

1-800- LG LG โทรฟรี

5 4 5 4 5 4

บริษัท แอลจีอิเล็กทรอนิคส์ จำกัด

75/2 อาคารวีรวัฒน์ 26 แขวงคลองเตย กรุงเทพฯ 10110

ศูนย์บริการข้อมูล โทร 0-2204-1888 แฟกซ์ 0-2260-8810

LG Mitr Electronics Co.,Ltd.

75/2 Richmond Bldg., Sukumvit 26, Klong-Toey, Bangkok 10110

Customer Information Center Tel. 0-2204-1888 Fax. 0-2260-8810

เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น

(This warranty is valid only in Thailand)

- 1) บัณฑิตรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น
- 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบหรือความผิดพลาดในการผลิต โดยมิได้เกิดจากการ ใช้เครื่องจักรวิธี บริษัทยา ยินดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย
- 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.
- 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts.

เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับแต่งตั้ง
- 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย
- 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้, ฟ้าผ่า, ไข่กระแตกไฟฟ้าลัดประเภทและอุบัติเหตุอื่นที่มนุษย์ไม่สามารถควบคุมได้
- 1) If repair are not undertaken by LG Service Center or Authorize Service Center.
- 2) Damage to accessory due to misuse.
- 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control.

ศูนย์บริการสุพุมวิท 26 : 75/2 อาคารริชมอนด์ ถ.สุพุมวิท 26 แขวงคลองเตย กรุงเทพฯ 10110 โทร. 0-2260-8787 แฟกซ์ 0-2260-8810

ศูนย์บริการอ้อยน้อย : 84 หมู่ 12 อ.เพชรเกษม ข. 120 อ.กระทุ่มแบน จ.สมุทรสาคร 74130 โทร. 0-2431-0010 แฟกซ์ 0-2810-3378

ศูนย์บริการเชียงใหม่ : 250/5 - 6 ถ.เชียงใหม่-ลำปาง ต.ป่าตัน อ.เมือง จ.เชียงใหม่ 50300 โทร. 0-5321-5823 แฟกซ์ 0-5341-2231

ศูนย์บริการพิษณุโลก : 210/9 -10 -11 ถ.มิตรภาพ ต.ในเมือง อ.เมือง จ.พิษณุโลก 65000 โทร. 0-5528-0508 แฟกซ์ 0-5528-0509

ศูนย์บริการอุดรธานี : 304 หมู่ 4 ถ.เมืองบ้านม่วง ต.หนองขอนกว้าง อ.เมือง จ.อุดรธานี 41000 โทร. 0-4224-9562 แฟกซ์ 0-4220-4757

ศูนย์บริการหาดใหญ่ : ห้อง 4-5 อาคารเพรสลิเด็นท์แมนชั่น 10/1 ประชาธิปัตย์1 อ.หาดใหญ่ จ.สงขลา 90110 โทร.0-7435-2275 แฟกซ์ 0-7422-5476

ศูนย์บริการนครราชสีมา : 1630/1-2 ถ.มิตรภาพ ต.ในเมือง อ.เมือง จ.นครราชสีมา 30000 โทร. 0-4424-7304 แฟกซ์ 0-4424-7305

