



KC550 用户手册

简体中文
ENGLISH
BAHASA MELAYU

KC550

LG ELECTRONICS INC.

MMBB0292014 (1.0) G

CE 0168

www.lgmobile.com

Bluetooth QD ID B013915

简体中文

■ KC550 ■ 用户手册

恭喜您购买此款功能先进、外观小巧的 LG KC550 手机。它采用了最新的数字移动通信技术，为您提供便利的操作。

备注

视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。

内容

01 设定	电话簿..... 17
了解您的手机..... 5	搜索..... 17
打开视图..... 6	新联系人..... 17
安装 SIM 卡和电池..... 7	联系人选项..... 17
储存卡..... 10	将联系人添加到群组..... 18
安装储存卡..... 10	为群组重命名..... 18
拔出储存卡..... 10	为联系人添加图片..... 18
将储存卡格式化..... 10	将电话簿复制到 SIM 卡..... 19
菜单地图..... 11	删除所有联系人..... 19
	查看资料..... 19
02 待机屏幕	信息..... 20
待机屏幕..... 12	信息..... 20
快速键..... 12	发送信息..... 20
主菜单..... 12	输入文本..... 20
状态栏..... 13	设立电子邮件..... 21
	使用新帐户发送电子邮件..... 22
03 基本功能	信息文件夹..... 23
通话..... 14	管理信息..... 23
拨电..... 14	使用模板..... 24
从电话簿拨电..... 14	更改文本信息设置..... 24
接听和拒绝通话..... 14	更改多媒体信息设置..... 24
调整通话音量..... 14	更改电子邮件设置..... 25
快速拨号..... 14	更改其它设置..... 25
查看通话记录..... 15	
使用呼叫转移..... 15	04 高级功能
使用呼叫拦截..... 15	照相机..... 26
更改通话设置..... 16	快速拍照..... 26
	拍照后..... 26

17	了解取景器.....	27	录音机.....	36
17	使用快速设置.....	27	使用录音机.....	36
17	使用闪光灯.....	28	录制语音备忘录.....	36
17	更改图像大小.....	28	发送录音.....	36
18	查看保存的照片.....	29	使用 Muvee 工作室.....	36
18	设定照片为墙纸或图像 ID.....	29	我的文档.....	37
18	录像机.....	30	图像.....	37
19	快速录像.....	30	图像选项菜单.....	37
19	录像后.....	30	发送照片.....	38
19	了解取景器.....	30	管理图像.....	38
20	使用快速设置.....	30	删除图像.....	38
20	观看保存的视频.....	31	删除多个图像.....	38
20	观看视频时调整音量.....	31	创建幻灯片.....	38
20	MP3 播放机.....	32	声音.....	39
21	MP3 播放机.....	32	使用声音.....	39
22	将音乐传输到手机.....	32	视频.....	39
23	播放歌曲.....	32	观看视频.....	39
23	播放音乐时使用选项.....	32	视频暂停时使用选项.....	39
24	创建播放列表.....	33	发送视频剪辑.....	40
24	播放播放列表.....	33	视频选项菜单.....	40
24	编辑播放列表.....	33	文件.....	40
25	删除播放列表.....	34	查看文件.....	41
25	FM 收音机.....	35	其它.....	41
26	使用 FM 收音机.....	35	外部储存卡.....	41
26	搜索电台.....	35	将手机用作批量储存器.....	41
26	重新设定频道.....	35	将文件传输到手机.....	42
26	收听收音机.....	35	使用蓝牙发送和接收文件.....	42

内容

游戏和应用程序	44	查看浏览记录.....	48
游戏和应用程序.....	44	更改网络浏览器设置.....	48
玩游戏.....	44	07 设置	
查看应用程序.....	44	设置	49
更改网络设置.....	44	更改情景模式.....	49
M-Toy.....	44	将情景模式个性化.....	49
05 管理功能		更改日期和时间.....	49
记事本	45	更改语言.....	49
将事件添加到日历.....	45	更改显示设置.....	50
修改日历事件.....	45	更改保安设置.....	50
共享日历事件.....	45	使用航行模式.....	51
添加备忘录.....	46	重新设置手机.....	51
工具.....	46	查看储存器状态.....	51
设置闹钟.....	46	更改蓝牙设置.....	51
使用计算器.....	46	更改连接设置.....	51
使用秒表.....	46	与其它蓝牙装置配对.....	52
对换单位.....	47	使用蓝牙耳机.....	52
添加城市到世界时间.....	47	08 配件	
SIM 卡服务.....	47	配件	53
06 浏览器		网络服务	54
浏览器	48	技术数据	54
访问网页.....	48	标准.....	54
添加并访问书签.....	48	外部环境.....	54
保存页面.....	48	关于安全有效使用手机的准则	56
访问保存的页面.....	48		

了解您的手机

主屏


清除键 

每按一下删除一个字符。使用此键返回上一屏幕。

通话键 

拨打电话号码并接听来电。

充电器、数据电缆、
免提连接器

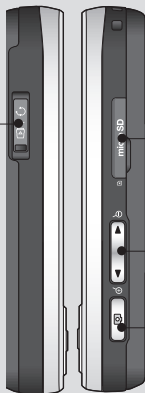

储存卡
插槽

音量键

照相机

结束/电源键 

向下滑动手机结束/电源键。
结束或拒接来电。
开机/关机。
使用此菜单将返回待机屏。

01

02

03

04

05

06

07

08

设置

5

打开视图



安装 SIM 卡和电池


1 卸下电池盖

按电池盖释放门，将电池盖举起。



2 取出电池

抬起电池底边，小心将电池从电池室取出。

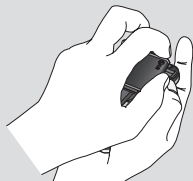

警告：手机开机时，不要取出电池，这可能会损坏手机。

3 安装 SIM 卡

将 SIM 卡插入 SIM 卡夹。确保卡的金色接触区域面朝下。要取出 SIM 卡，沿相反的方向轻推。

警告：滑盖打开时请不要插入 SIM 卡，否则可能损坏手机和 SIM 卡。

01

02

03

04


05

06

07


08

安装 SIM 卡和电池

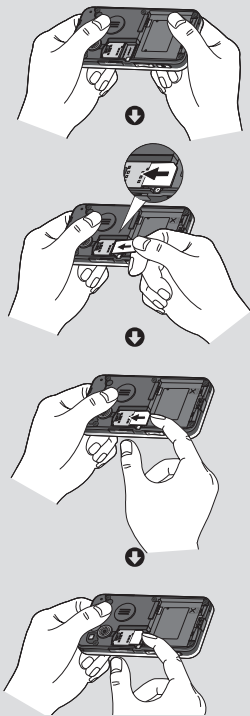


4 安装电池

先将电池顶端插入电池室顶部。
请确保电池触点与手机端子对齐。
向下按电池底部，直至电池卡入
到位。

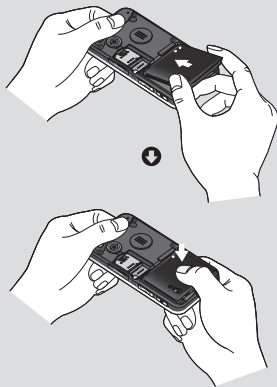

5 更换电池盖


将电池盖沿手机顶部滑动，直到卡入到位。

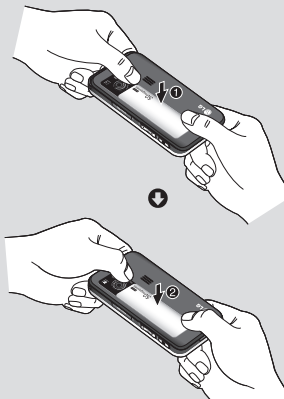

6 充电

推开 KC550 侧面的充电器插槽盖。插入充电器并插入电流插座。只要屏幕上显示“已完全充电”信息，KC550 充电才完成。

警告：如果手机置于柔软物体之上，请不要充电。应将手机放在完全通风的位置充电。

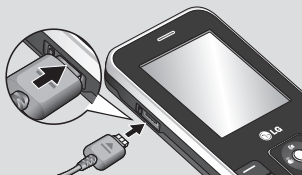

01

02

03

04

05

06

07

08


储存卡

安装储存卡

使用储存卡，可以扩展手机的可用储存空间。KC550 最大支持 2GB 储存卡。


提示！ 储存卡是可选配件。

打开滑盖，插入储存卡。将储存卡滑入插槽顶部，直到卡入到位。确保金色接触区域面朝下。

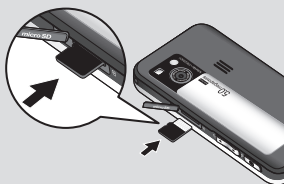

拔出储存卡

如下图所示，轻推以打开滑盖，小心取出储存卡。

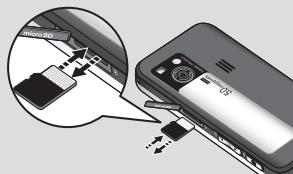

将储存卡格式化

如果尚未将储存卡格式化，您需要先格式化才可以开始使用。

- 1 从待机屏幕选择菜单，然后选择**设置**。
- 2 选择**存储器状态**，然后选择**外部储存卡**。
- 3 选择**格式化**，输入密码，密码默认为 0000。储存卡完成格式化，现在，您可以使用了。
- 4 要在 KC550 上查看新格式化的文件夹，请选择**菜单**，然后选择**我的文档**。选择**外部储存卡**。

警告： 将卡格式化时，所有内容将被擦除。如果不想失去储存卡中的数据，请先备份。

菜单地图



游戏和应用程序

- 1 M-toy
- 2 游戏
- 3 应用程序
- 4 网络设置文件



通话记录

- 1 所有通话
- 2 未接来电
- 3 拨电
- 4 已接来电
- 5 通话时间
- 6 通话费用
- 7 数据资料



记事本

- 1 日历
- 2 备忘录



多媒体

- 1 MP3 播放机
- 2 照相机
- 3 录像机
- 4 FM 收音机
- 5 录音机
- 6 影片制作室



信息

- 1 新信息
- 2 收件箱
- 3 电子邮箱
- 4 草稿箱
- 5 发件箱
- 6 已发送
- 7 收听语音邮件
- 8 小区广播信息
- 9 模板
- 0 设置



我的文档

- 1 图像
- 2 声音
- 3 视频
- 4 文件
- 5 其它
- 6 外部存储卡



情景模式

- 1 通用
- 2 静音
- 3 仅振动
- 4 户外
- 5 耳机



电话簿

- 1 搜索
- 2 新联系人
- 3 快速拨号
- 4 群组
- 5 全部复制
- 6 全部删除
- 7 设置
- 8 资料



工具

- 1 闹钟
- 2 计算器
- 3 秒表
- 4 单位对换器
- 5 世界时钟
- 6 SIM 卡服务



浏览器

- 1 主页
- 2 书签
- 3 输入网址
- 4 网页浏览记录
- 5 已保存的页面
- 6 设置
- 7 资料



连接性

- 1 蓝牙
- 2 网络
- 3 USB 连接
- 4 电视输出



设置

- 1 日期和时间
- 2 语言
- 3 显示
- 4 呼叫
- 5 保安设置
- 6 航行模式
- 7 重新设置
- 8 存储器状态

01

02

03

04

05

06

07

08

待机屏幕

快速键

快速键使您可以一键式轻松访问常用功能。



选择以打开信息编辑器。您可以创建新的文本信息或多媒体信息。



选择以播放 MP3 文件。



选择以选择手机的声音情景模式。



选择以打开收藏夹菜单。

主菜单

主菜单提供 12 个菜单选项。打开主菜单：

- 1 选择**菜单**。
- 2 主菜单将出现在屏幕上。
- 3 突出显示您需要的选项时，选择**确定**以打开。

客户须知

为了使天线保持最佳的灵敏度，LG 建议您按照下图所示的方式持握手机。



通话和使用蓝牙连接期间，请不要用手遮挡天线区域。否则可能产生干扰，降低通话质量。

状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等资料，以及告知您是否启用了蓝牙。

下表描述了您可能在状态栏中看到的不同图标的涵义。

图标	描述
	网络信号强度 (指示栏数不同)
	无网络信号
	GPRS 可用
	EDGE 可用
	已启动航行模式
	呼叫被转接
	漫游服务
	已启动蓝牙
	已连接 WAP 服务
	已设定闹钟
	日程表

图标	描述
	新信息
	新语音信息
	正在使用“通用”情景模式
	正在使用“静音”情景模式
	正在使用“仅振动”情景模式
	正在使用“户外”情景模式
	正在使用“耳机”情景模式
	剩余电量
	电池电量空

01

02

03

04

05

06

07

08


通话

拨电


- 1 使用键盘输入号码。要删除一个数字，请按 。
- 2 按  开始通话。
- 3 要结束通话，请按 。

提示! 要输入 + 以拨打国际电话，请按住 **0**。

从电话簿拨电

- 1 在待机屏幕，选择电话簿，然后搜索。
- 2 使用键盘输入您要呼叫的联系人的第一个字母。
- 3 按  开始通话。

接听和拒绝通话

电话响时，选择接受或选择  接听来电。

按 ，或选择拒绝以拒接来电。

提示! 您可以更改手机上的设置以不同方式接听来电。

选择**菜单**，选择**设置**，然后选择**呼叫**。选择**接听模式**，从**滑开滑盖**、**按任何键**或**仅用发送键**中选择。


调整通话音量

要调节通话过程中的音量，请按手机左侧的音量键。

快速拨号

您可以为经常呼叫的联系分配快速拨号号码。

- 1 按**电话簿**，然后选择**快速拨号**。
- 2 语音信箱设为快速拨号 1 且无法更改。使用导航键并选择分配，或通过按数字键选择其它数字。
- 3 此时将打开您的地址簿。使用导航键选择您想分配为该数字的联系人，然后选择确定。

要呼叫快速拨号号码，按住分配的数字，直到屏幕上显示该联系人。将自动启动呼叫，无需再按 。

查看通话记录

按**菜单**，选择**通话记录**。选择以查看：

所有通话 - 查看所有拨电、已接来电和未接来电的完整列表。

未接来电 - 查看您没接到的所有通话的列表。

拨电 - 查看所有已拨打的号码的列表。

已接来电 - 查看打给您的所有号码的列表。

通话时间 - 查看通话时长的详细资料，包括已接来电和已拨电。

通话费 - 查看“最后通话”或“所有通话”的相关费用。此服务取决于网络，某些运营商不支持此服务。

数据资料 - 查看所有已接收和发送数据的字节数 (KB)。

提示! 从任意通话记录中选择**选项**，然后选择**删除**删除选定的或所有录制项目。

使用呼叫转移

- 1 按**菜单**，选择**设置**，然后选择**呼叫**。
- 2 选择**呼叫转移**。
- 3 选择转移通话的情况：所有语音通话、无法接听时，无人接听时或无法接通时。
- 4 选择**启动**，然后选择转移至语音邮箱、其它号码或常用号码。
- 5 输入转移号码或从电话簿搜索并选择转接号码。

使用呼叫拦截

- 1 按**菜单**，选择**设置**，然后选择**呼叫**。
- 2 选择**呼叫拦截**。
- 3 选择以下七个选项中的一项或所有项：
 - 所有拨电**
 - 国际拨电**
 - 主国以外的国际漫游拨电**
 - 所有来电**
 - 国际漫游时的来电**
 - 取消所有拦截**
 - 更改密码**

01

02

03

04

05

06

07

08

通话

更改通话设置

1 按**菜单**，选择**设置**，然后选择**呼叫**。

2 在此，您可以修改以下设置：

呼叫转移 - 选择是否要转移呼叫。转接通话会产生相应费用。有关详情，请联系您的网络提供商。要关闭所有通话转接，请从呼叫转移菜单中选择全部取消。

呼叫拦截 - 选择何时限制呼叫。选择启动，然后输入拦截密码。请与您的网络运营商联系，了解有关此服务的资料。

固定拨号号码 - 选择可从此手机拨出的号码列表。

提示！ 从**通话**菜单中选择**固定拨号号码**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。仅可以使用手机拨打此号码列表中的号码。

接听模式 - 选择是使用发送键、任何键还是滑开手机时接听电话。

发送本机号码 - 选择当您呼叫对方时是否显示您的号码。

呼叫等待 - 有等待呼叫时会收到通知。

分钟提示 - 选择**打开**，在通话过程中每一分钟将听到一次提示音。

自动重拨 - 选择**开**或**关**。

发送双音多频音 - 选择**开**或**关**。

电话簿

搜索

- 1 从菜单屏幕或从待机屏幕选择电话簿，然后选择搜索。
- 2 使用键盘输入您要呼叫的联系的第一个字母。
- 3 要在联系人及其不同电话号码间移动，请使用导航键。

新联系人

- 1 从菜单屏幕或从待机屏幕选择电话簿，然后选择添加。
- 2 选择将新联系人保存到**手机**还是**SIM 卡**。
- 3 在提供的字段中输入所有资料，然后选择**保存**。

或者，使用更快捷的方式…

- 1 在待机屏幕上输入要保存的号码，然后选择**选项**。
- 2 选择**保存**或**添加至现有联系人**。
- 3 输入以上相关资料，然后选择**保存**。

备注：保存联系人的电子邮件地址时，按 *** **** 输入符号，使用导航键移动，直到看到 @。

联系人选项

查看联系人时，您可以执行多项操作。以下显示如何进入并使用“选项”菜单：

- 1 打开您要使用的联系人。请参阅上面的搜索。
- 2 选择**选项**以打开选项列表。

在此，您可以：

修改 - 更改联系人的任何详细资料。

新信息 - 向联系人发送信息。如果联系人有电子邮件地址，请选择是发送信息还是电邮。

发送方式 - 将联系人的资料作为名片发送给其他人。选择发送方式：作为文本信息、多媒体信息、蓝牙或电邮。

删除 - 删除联系人。如果确定，请选择**是**。

新联系人 - 添加新联系人。

多项删除 - 标记多个联系人以删除。

01

02

03

04

05

06

07

08

电话簿

复制至 SIM 卡/手机 - 选择是移动到复制到 SIM 卡还是手机（取决于联系人的初始保存位置）。

将联系人添加到群组

您可以将联系人保存到群组，例如，将工作同事和家人分开。手机中已设定多个群组，包括：**家人、朋友、同事、重要人士、群组 1 和群组 2**。

- 1 选择**电话簿**，然后选择**群组**。
- 2 移动到您要添加联系人的群组，选择**查看**，然后选择**添加**。
- 3 将打开您的电话本。移动到您要添加到群组的联系人，选择 ，然后选择**完成**。
- 4 如果确定，请选择是。

提示！ 您可以为群组指定来电铃声或图标。选择您要为其指定来电铃声或图标的群组，选择**选项**，然后选择所需项目。

为群组重命名

您可以为群组重命名以满足您的要求。

- 1 选择**电话簿**，然后选择**群组**。
- 2 选择您要重命名的群组。
- 3 选择**选项**，选择**重命名**，然后输入新群组名称。
- 4 选择**保存**。

备注：您仅可以将联系人分配到群组或为联系人添加保存在手机内存（不是 SIM 卡）中的图片。

为联系人添加图片

您可以为联系人添加图片，更改联系人在电话簿中的显示方式。

- 1 选择**电话簿**，然后选择**设置**。
- 2 选择**查看选项**，然后选择**附加图片**。
- 3 然后返回电话簿，选择您要为其添加图片的联系人。
- 4 选择**选项**，然后选择**修改**。
- 5 向下移动到**图片**部分。选择**选项**，然后选择**选择或新图像**。如果选择**选择**，您可以选择保存在手机内存的图像。如果选择**新图像**，将打开照相机取景器，以便您为联系人拍照。

6 选择**保存**。

将电话簿复制到 SIM 卡

您也可以选择将电话簿从 SIM 卡复制到手机，或从手机复制到 SIM 卡。

- 1 选择**电话簿**，然后选择**全部复制**。
- 2 选择复制电话簿：**SIM 卡至手机**或**手机至 SIM 卡**。
- 3 选择保留还是删除原始记录。
- 4 如果确定，请选择**是**。

删除所有联系人

- 1 选择**电话簿**，然后选择**全部删除**。
- 2 选择从 SIM 卡或手机删除联系人。
- 3 如果确定，请选择**是**。
- 4 输入密码，密码默认为 0000，然后选择确定。

查看资料

选择**电话簿**，然后选择**信息**。在此，您可以查看**服务拨号号码**、**本机号码**和**名片**。

提示！ 如果您尚未创建名片，**名片**屏幕将为您提供创建名片的选项。选择**新建**，输入所需的详细资料。选择**保存**。

01

02

03

04

05

06

07

08

信息

信息

KC550 包含与短信（文本信息服务）、彩信（多媒体信息服务）、电子邮件，以及网络服务信息相关的功能。按菜单，然后选择**信息**即可。


发送信息

- 1 按**菜单**，选择**信息**，然后选择**新信息**。
- 2 选择**信息**以发送文本或多媒体信息。（如果要发送**电子邮件**，请参阅第 21~22 页，要使用**蓝牙**发送内容，请参阅第 42 页。）
- 3 此时将打开新信息编辑器。
信息编辑器是一款直观易用的工具，它将短信和彩信组合在一起，可在短信模式和彩信模式间轻松切换。信息编辑器的默认设置为短信模式。
- 4 使用 T9 预测模式或 abc 手动模式输入信息。请参阅同页的**输入文本**，查看如何在不同的文本输入模式间切换。
- 5 选择**选项**，然后选择**插入**以添加**图像、声音、视频、符号、文本模板、情绪图标、姓名和号码、新幻灯片、主题**或**更多（联系人/我的名片/日程表）**。

6 按中键**发送至**。

7 输入电话号码，或选择**选项**并选择**电话簿或近期列表**以打开联系人列表。您可以添加多个联系人。


8 选择**发送**。

 **警告：**如果在信息编辑器中添加了**图像、声音、视频、新幻灯片或主题**，将自动转换到彩信模式，您将需要支付相应的费用。

输入文本

您可以使用手机键盘输入字母数字字符。例如，在电话簿中储存姓名、编写短信、在日历中创建日程表等，都需要输入文本。手机中可以使用以下文本输入法：T9 预测模式、ABC 手动模式和 123 模式。

备注：某些字段可能只允许一种文本输入模式（如在地址簿字段输入电话号码）。

要在文本输入字段中打开 T9 模式，请选择**选项**，然后选择设定 T9 和开。打开 T9 后，您可以通过按  在文本输入模式间转换。您会注意到，显示在显示屏右上角的文本输入模式指示符。

要在文本输入字段中输入符号，请按 **☰** 键，选择一个符号，然后选择**确定**。

按 **0** 以空格结束每个单词。

要删除字符，请按 **C** 键。

T9 预测模式

T9 预测模式使用内置字典，根据您按键的顺序辨认您写入的内容。只需按与您要输入的字母关联的数字键即可，输入所有字母后，字典将辨认您输入的内容。

如果所需单词没有出现，请按选项，选择**拼写**，然后使用 ABC 手动模式输入单词，再选择保存。您的单词将添加到字典中。

备注：您可以通过选择**选项**，然后选择**编写语言**选择不同的 T9 语言。

ABC 手动模式

在 ABC 手动模式中，要输入一个字母，您可能需要反复按键。例如，要写入“hello”，需要按两次 **4**、两次 **3**、三次 **5**，再按三次 **5**，最后按三次 **6**。

123 模式

以每个数字一次按键的方式输入数字。在字母模式下，通过按住相应按键，也可以输入数字。

设立电子邮件

使用 KC550 中的电子邮件，您可以在旅途中随时与他人保持联系。设立 POP3 或 IMAP4 电子邮件帐户简单快捷。

1 按**菜单**，选择**信息**，然后选择**设置**。

2 选择**电邮**，然后选择**电邮帐户**。

3 选择**新建**。

4 现在，您可以选择帐户操作方式：

帐户名称 - 输入此帐户的名称。

电邮地址 - 输入帐户的电子邮件地址。

我的名称 - 输入您的名称。

接收邮件服务器 - 输入帐户的详细资料。

用户名 - 输入帐户的用户名。

密码 - 输入帐户密码。

发件服务器 - 输入帐户的详细资料。

发件鉴定 - 选

择“开”或“关”。

01

02

03

04

05

06

07

08

信息

发送服务器 ID - 输入帐户的详细资料。

发送服务器密码 - 输入帐户的详细资料。

要输入以下资料，请选择选项，然后选择**先进设置**。

协议类型 - 选择邮箱类型：POP3 或 IMAP4。

最大接收大小 - 选择电子邮件的大小限制，最大为 300KB。

保存至服务器 - 选择是否将电子邮件保存到服务器。对于 IMAP4 帐户，始终保存备份。

保存已发送邮件至 - 选择是否将电子邮件保存到服务器（仅适用于 IMAP4）。

插入签名 - 选择是否自动在电子邮件中插入签名。

回复电邮地址 - 输入“回复至”电子邮件地址。

接收端口号 - 通常，对于 POP3 帐户为 110；对于 IMAP4 帐户为 143。

发送端口号 - 通常为 25。

自动索取 - 选择自动索取您的电子邮件。

索取下载 - 选择**仅标题、标题 + 正文**（仅适用于 IMAP4）或**全部**。

现在，已经设立了您的帐户，它将显示在“电邮”文件夹的帐户列表中。

使用新帐户发送电子邮件

要发送/接收电子邮件，您应先设立电子邮件帐户（请参阅第 21 页）。

- 1 选择**菜单**，选择**信息**，然后选择**新信息**。
- 2 选择电邮，此时将打开新电子邮件。
- 3 写主题，然后选择**确定**。
- 4 使用 T9 预测模式或 ABC 手动模式输入信息。请参阅第 20 页的**输入文本**，查看如何在不同的文本输入模式间转换。
- 5 选择**选项**，然后选择附件以添加：**图像、声音、视频、文档、联系人、我的名片和日程表**。
- 6 按**发送**，输入收件人地址或选择**选项**，然后选择**电话簿**以打开联系人列表。
- 7 按**发送**，您的电子邮件将被发送。

信息文件夹

按**菜单**，然后选择**信息**。您可以辨认KC550 中的文件夹，完全无需进行说明。

收件箱 - 您接收到的所有信息将放置在收件箱中。在此，您可以进行回复、转发等操作，有关详情，请参阅以下内容。

电邮箱 - 包含您的所有电子邮件。选择您要使用的帐户，然后选择索取。KC550 将连接到您的电子邮件帐户并索取新邮件。

草稿箱 - 如果您来不及写完一条信息，您可以将信息保存在此。

发件箱 - 这是发送信息时的临时存储文件夹。

已发送 - 您发送的所有信息将放置在“已发送”文件夹中。


收听语音邮件 - 您可以访问语音邮箱（如果网络提供）。当收到新的语音信息时，待机屏幕上将显示相应符号。

小区广播信息 - 接收自运营商的所有小区广播信息和更新。

模板 - 先写好的有用信息列表，用于快速回复。

管理信息

您可以使用**收件箱**管理信息。

1 按**菜单**，选择**信息**，然后选择**收件箱**。或者，您可以使用快捷方式：在待机屏幕上按  键。

2 选择**选项**，然后选择：

删除 - 删除选定的信息。

回复 - 回复选定的信息。

转发 - 将选定信息发送给其他人。

以电话回复 - 拨电给发件人。

资料 - 查看有关信息的详细资料，例如，发送时间。

复制/移动 - 您可以选择复制或移动信息。选择可将选择的信息复制或移动到 SIM 卡或手机。

多项删除 - 删除选择的信息。

删除所有已读的 - 将删除所有已阅读的信息。

全部删除 - 您可以选择删除所有信息或仅删除文本信息。

如果看到信息无 SIM 卡信息储存空间，您应从收件箱中删除一些信息。

如果看到信息无信息储存空间，您可以删除信息或保存的文件以腾出空间。

01

02

03

04

05

06

07

08

信息

使用模板

为您最常使用的文本信息和多媒体信息创建模板。手机中已存有多个模板，您可以根据需要进行修改。

- 1 选择**菜单**，选择**信息**，然后选择**模板**。
- 2 选择**文本**或**多媒体**。随后，您可以选择**选项**，然后选择**修改**更改现有模板；或选择**选项**以添加新模板或删除模板。
- 3 要发送模板，请选择您要发送的模板，选择**选项**，然后选择**发送方式**。
- 4 选择您要发送模板的方式：信息、蓝牙信息或电邮。
- 5 选择一个联系人，然后选择**发送**。

更改文本信息设置

KC550 信息设置已预定，因此，您可以立即发送信息。

如果要更改设置，可以使用**设置**选项执行此操作。

按**菜单**，选择**信息**，然后选择**设置**和**文本信息**。您可以更改：

信息类型 - 将文本转换为语音、传真、传呼、X.400、电子邮件或ERMES。

有效期 - 选择信息在信息中心中的最常保存时间。

发送报告 - 选择可接收信息已发送确认信息。

回复计费 - 选择对回复信息收件人计费。

信息中心号码 - 输入信息中心的号码。

字符编码 - 选择字符编码方式。这将影响信息大小并因此产生数据费用。

发送长文本为 - 当您在信息字段中输入的文本超过 2 页时，请选择是以短信还是彩信方式发送信息。

载体设定 - 选择是通过 GSM 还是 GPRS 发送信息。

更改多媒体信息设置

KC550 信息设置已预定，因此，您可以立即发送信息。

如果要更改设置，可以使用**设置**选项执行此操作。

按**菜单**，选择**信息**，然后选择**设置**和**多媒体信息**。

您可以更改：

幻灯片放映时间 - 选择幻灯片在屏幕上将显示多长时间。

优先级 - 选择多媒体信息的优先级级别。

有效期 - 选择信息在信息中心中的最常保存时间。

发送报告 - 选择是否允许要求发送报告。

阅读报告 - 选择是否允许发送已读报告。

自动下载 - 选择是自动还是手动下载多媒体信息，取决于您是在当地还是漫游。

网络设置文件 - 选择运营商特定网络设置文件以发送多媒体信息。

允许的信息类型 - 选择允许的多媒体信息类型。

更改电子邮件设置

您可以调整电子邮件设置以满足您的个人需要。

- 1 按**菜单**，选择**信息**，然后选择**设置**。
- 2 选择**电邮**，然后，您可以调整以下设置：

电邮帐户 - 您可以设置电子邮件帐户。

接入点 - 您可以设置电子邮件接入点。

索取的间隔时间 - 选择 KC550 检查新电子邮件的频率。

签名 - 创建电子邮件签名并打开此功能。

更改其它设置

按**菜单**，选择**信息**和**设置**，然后选择：

语音邮件中心号码 - 您的语音邮件中心号码保存在此。有关其提供的服务的详细资料，请联系您的网络运营商。

服务信息 - 您可以关闭服务信息。信息不会在接收时，被直接推入手机，而只在您检查新信息时。

小区广播信息 - 选择小区广播的接收状态、信息提示和语言。

保存文本信息 - 选择要将文本信息保存到手机内存还是外部储存卡。

01

02

03

04

05

06

07

08

照相机

快速拍照


- 1 打开相机镜头盖，按住手机右侧的相机键，屏幕上将显示照相机取景器。
- 2 水平放置照相机，将镜头对准要拍摄的物体。
- 3 半按手机右侧的相机键。取景器屏幕的中间会出现一个对焦框，调整照相机位置，将对焦框对准要拍摄的物品。对焦框变绿时，表示照相机已对焦。
- 4 按中软键或完全按下相机键以拍照。


备注：您也可以从待机屏幕进入照相机菜单。按菜单，选择**多媒体**，向下移动并选择**照相机**以打开取景器。


拍照后


拍好的照片将显示在屏幕上。图像名称在屏幕底部显示，屏幕右侧将显示 6 个选项。

删除 - 选择以删除您刚拍摄的照片，选择是确认删除。取景器将出现。

 **新图像** - 选择可以立即拍摄另一张照片。将保存您的当前照片。

 **设定为** - 选择可以打开一个子菜单，您可以选择将图像设定为**墙纸**或**图像 ID**。


 **发送方式** - 选择以**多媒体信息**或电邮形式发送照片。

 **相册** - 选择可以查看相册中的其它照片。将保存您的当前照片。

确定 - 选择可以立即拍摄另一张照片。将保存您的当前照片。

了解取景器

备注：您可以使用手机左侧的音量键调整缩放。缩放功能仅在 640 x 480 解析度或更低时可用。有关详情，请参阅第 28 页的**更改图像大小**。

提示！ 使用照相机时，耗电量增加。如果显示  图标，表示电池电量低，请在使用前充电。

使用快速设置

选择选项可打开快速设置选项。这包括适用于拍照的各种选项。

自拍计时器 - 自拍计时器允许您设定按相机键后的延时。可选择 3, 5 或 10 秒。适合拍摄群组照用途。

连拍 - 能自动迅速地拍摄高达 9 张照片，适合拍摄移动性物体和运动场地使用。

白平衡 - 白平衡确保照片中的白色显示真实。要正确调整照相机的白平衡，您需要确定光照条件。从**自动、日光、白炽、阴天、荧光效果**中选择。

色彩效果 - 从四个色彩效果选项中选择：**关**（正常/彩色），**棕褐色**，**单色**（黑白）或**反色**。

曝光值 - 如果拍摄近距离图像物体，请启用**超微距**拍摄模式。

解析度 - 请参阅第 28 页的**更改图像大小**。

品质 - **普通**、**精细**和**超精细**之间转换。品质越精细，照片将越清晰，同时，文件更大，这意味着内存可储存的照片越少。

自动对焦 - 将自动对焦设为“开”或“关”。按相机键，相机将自动调整对焦，以获得更清晰锐利的图像。

快门音 - 从三种快门声音中选择一种。

ISO - 设定 ISO 为自动 ISO 800, ISO 400, ISO 200, ISO 100 或 ISO 80。

保存至 - 选择是将照片保存在手机内存或外部储存卡。

恢复初始设置 - 选择是**以**重新设置手机，恢复为原始照相机设置。

01

02

03

04

05

06


07

08

照相机

使用闪光灯

闪光灯默认为**关**，此外还有其它选项。

1 选择导航键上的  进入闪光灯子菜单。

2 有四个闪光灯选项：

关 - 相机没有闪光灯。此选项有助于节省电池电量。

总是开 - 当您在黑暗场所拍照时，可将闪光灯设定为开。

自动 - 相机将自动评估拍摄好照片所需的光照条件，并在需要时使用闪光灯。

拍摄时 - 仅在拍摄时使用闪光灯

3 选择您要使用的闪光灯选项。

4 选择后，闪光灯菜单将自动关闭，您就可以拍照了。

5 取景器中的闪光灯图标将根据您设置的新闪光灯模式而更改。

备注：当您退出照相机，闪光灯设置将自动转为默认**关**模式。

更改图像大小

您可以更改照片大小以节省储存空间。像素越高，文件越大，同时意味着将占用更多内存。如果要在手机内保存更多图片，您可以更改像素大小，使文件更小。

1 按**选项**，从工具栏中选择**解析度**。

2 从 6 个数值选项中选择像素值
(320x240, 640x480, 1280x960,
1600x1200, 2048x1536,
2560x1920)。

3 选择您要使用的像素，选择确定。

备注：缩放功能因照相机设定的解析度而有所不同。缩放功能仅能使用于 640x480 以下的解析度。

查看保存的照片

- 1 您可以通过照相机模式或从待机屏幕访问保存的照片。从取景器中选择相册。从待机屏幕中按菜单，然后选择**我的文档**和**图像**。
- 2 屏幕上将显示您的图片库。
- 3 使用导航键选择您要查看的照片，然后按**查看**放大。

设定照片为墙纸或图像 ID

使用导航键，从图片库中选择一个图像，然后选择**设定为**将选定图像设定为墙纸或联系人的**图像 ID**。

备注：图像 ID 仅可添加到手机（不是 SIM 卡）中保存的联系人。

01

02

03

04

05

06

07

08

录像机

快速录像

- 1 打开相机镜头盖，按住手机右侧的相机键，屏幕上将显示照相机取景器。
- 2 选择录像机。屏幕上将显示摄像机的取景器。
- 3 将相机镜头对准要拍摄的物体。
- 4 按手机右侧的相机键开始录制。
- 5 **REC** 出现在取景器的下方，计时器将显示视频长度。
- 6 要暂停视频，请选择**暂停**，要恢复录制，请选择**继续**。
- 7 选择**停止**可以停止录制。

备注：您也可以从待机屏幕进入**录像机**功能。选择**菜单**，选择**多媒体**，向下移动并选择**录像机**以打开取景器。

录像后

视频名称在屏幕底部显示，屏幕右侧将显示 6 个选项。

删除 - 选择以删除您刚录制的视频，选择“是”确认。此时将出现取景器。

📷 新视频 - 选择可以立即拍摄另一段视频。将保存您的当前视频。

▶ 播放 - 选择可播放已录制的视频。

✉ 发送方式 - 选择以**多媒体信息**或电邮形式发送视频。

📁 相册 - 选择可以查看相册中的其它视频剪辑。将保存您的当前视频剪辑。

确定 - 选择选项

了解取景器

备注：您可使用手机右侧的音量键，调整缩放。

使用快速设置

选择**选项**以打开快速设置选项。这包括适用于录制视频的各种选项。

模式 - 要录制作为多媒体信息发送的视频，请选择**多媒体信息**。


色彩效果 - 从四个色彩效果选项中选择：**关**、**棕褐色**、**单色**（黑白）或**反色**。

亮度 - 对比度定义图像的深浅差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。使用导航键，沿滚动条移动对比度指示器，“-”对应对比度更低、更模糊的图像，“+”对应对比度更高、更清晰的图像。

解析度 - 如果要在手机中保存更多视频，请更改像素大小，使文件更小。有四个选项可供视频选择：176X144，320X240，640X480 或 720X480。

品质 - 超精细、精细、普通

保存至 - 选择将视频剪辑保存至手机内存或外部储存卡。

 **闪光灯** - 将闪光灯设定为**开**或**关**。闪光灯默认设定为**关**，以节省电量。退出录像机时，将返回默认的**关**设置。

WB **白平衡** - 白平衡确保视频中的白色显示真实。要正确调整录像机的白平衡，您需要确定光照条件。从**自动**、**日光**、**白炽**、**阴天**、**荧光效果**、**夜间模式**中选择。

相册 - 查看您所有的图像

恢复初始设置 - 选择**是**重新设置手机，恢复为初始录像机设置。

观看保存的视频

- 1 您可以从录像机模式或待机屏幕访问保存的视频。从取景器中选择相册。从待机屏幕中按菜单，然后选择**我的文档和视频**。
- 2 屏幕上将显示您的图片库。
- 3 使用导航键选择要观看的视频，然后按中软键观看。

观看视频时调整音量

要在播放视频时调整音频音量，请使用手机右侧的音量键。

01

02

03

04

05

06

07

08

MP3 播放机

MP3 播放机

LG KC550 拥有内置的 MP3 播放机，因此，您可以播放所有喜爱的音乐。要访问 MP3 播放机，请按**菜单**，选择**多媒体**，然后选择**MP3 播放机**。或者，您可以通过按 MP3 播放机快捷键进入 MP3 播放机。

您可访问：

所有歌曲 - 包含手机里的所有歌曲。

我的播放列表 - 包含所有您创建的播放列表，和流动时，近期播方和喜爱的歌曲。

歌手/艺人 - 按歌手/艺人浏览您的音乐合集。

专辑 - 按专辑浏览您的音乐合集。

风格 - 按风格浏览您的音乐合集。

设置 - 调整您的音乐设置。






将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或同步数据电缆。使用蓝牙传输：

- 1 请确保双方装置都已打开蓝牙，对方可见。

- 2 选择另一个装置上的音乐文件，选择通过蓝牙发送。
- 3 文件发出后，您必须选择**是**在您的手机上接受它。
- 4 文件将显示在**所有歌曲**中。

播放歌曲

- 1 按**菜单**，选择**多媒体**，然后选择**MP3播放机和所有歌曲**。
- 2 选择要播放的歌曲。选择 。
- 3 选择  暂停歌曲。
- 4 选择  以跳到下一首歌曲。
- 5 选择  以跳到上一首歌曲。
- 6 选择  以停止音乐并返回所有歌曲菜单。

提示! 要在聆听音乐时更改音量，请使用手机侧面的音量键。

播放音乐时使用选项

选择**选项**，然后从下列内容中选择：

最小化 - 隐藏 MP3 播放机屏幕，这样，在音乐播放时，您可以像往常一样使用手机。

查看播放列表 - 查看您当前正在聆听的播放列表。

添加到播放列表 - 将当前曲目添加到播放列表。

设定为 - 将当前曲目设定为铃声或信息提示音。

资料 - 您可以查看有关正在收听的MP3文件的详细资料。


设置 - 更改均衡器或播放模式或打开设定随机播放以调节音乐效果。

创建播放列表

您可以从**所有歌曲**文件夹中进行选择，以创建自己的播放列表。

- 1 按**菜单**，然后选择**多媒体**。
- 2 选择 **MP3 播放机**，然后选择**我的播放列表**。
- 3 按**选项**，选择**选项**，然后**新日程表播放列表**，输入播放列表名称，然后按**保存**。
- 4 此时将显示**新建播放列表**文件夹。选择要包括在播放列表中的所有歌曲：移动到这些歌曲，然后选择 。
- 5 选择保存以存储播放列表。

播放播放列表

- 1 按**菜单**，然后选择**多媒体**。
- 2 选择 **MP3 播放机**，然后选择**我的播放列表**。
- 3 选择要播放的播放列表，选择**查看**，然后选择 。

编辑播放列表

您可能随时想要向播放列表添加新歌曲或从中删除歌曲。如果要管理播放列表，您可以使用“选项”菜单编辑。

- 1 按**菜单**，然后选择**多媒体**。
- 2 选择 **MP3 播放机**，然后选择**我的播放列表**。
- 3 移动到您要修改的播放列表，选择**查看**，然后选择**选项**从以下选项选择：

添加 - 使用此选项，您可以向播放列表添加歌曲。

删除 - 从播放列表中删除歌曲。选择“是”确认。

01

02

03

04

05

06

07

08

MP3 播放机

多项删除 - 从播放列表中删除选定的歌曲。

全部删除 - 从播放列表中删除所有歌曲。

资料 - 查看播放列表信息。

删除播放列表

- 1 按**菜单**，然后选择**多媒体**。
- 2 选择 **MP3播放机**，然后选择**我的播放列表**。
- 3 移动到您要删除的播放列表，然后选择**选项**。
- 4 选择**全部删除**，然后选择**是**确认。

备注：

由于安装了数字版权管理（DRM）系统，您从互联网下载或通过多媒体信息接收的某些媒体内容可能包含一个“购买权限”菜单，购买后方可访问。您可以从对内容具有所有权的网站获取购买版权的键。

音乐的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。请查看有关使用此材料的适用国家的国家立法。

FM 收音机

使用 FM 收音机

LG KC550 拥有 FM 收音机功能，以便您转到喜爱的电台收听无线广播。

备注：要收听收音机，您需要插入耳机。将耳机插入耳机插槽（与插入充电器的插槽相同）。

搜索电台

您可以手动或自动微调电台。搜索后，它们将保存至特定频道编号，这样，您就不用重复进行微调。您可以在手机中最多保存 12 个频道。

自动微调：

- 1 按**菜单**，选择**多媒体**，然后选择**FM 收音机**。
- 2 选择**选项**，然后选择**自动微调**，然后选择**是**。
- 3 每次找到一个电台时，KC550 将询问您是否保存。如果要保存该频道，请选择**是**，否则，请选择**否**。手机将自动为您选择要保存的电台分配一个频道编号。

手动微调：

- 1 按**菜单**，选择**多媒体**，然后选择**FM 收音机**。
- 2 选择您要保存电台的频道编号，然后选择**修改**。

- 3 要进入电台，您可以使用导航键搜索，也可以使用键盘输入频率，然后选择**保存**。

备注：您也可以修改保存在频道编号中的电台。

提示！ 要提高接收品质，请伸展耳机线，它具有收音机天线的功能。

重新设定频道

- 1 按**菜单**，选择**多媒体**，然后选择**FM 收音机**。
- 2 选择**选项**，然后选择**重设频道**。选择**是**确认重设。每个频道的开始频率将返回为 87.5Mhz。

收听收音机

- 1 按**菜单**，选择**多媒体**，然后选择**FM 收音机**。

- 2 选择您要收听的电台的频道编号。

备注：您可以通过内置扬声器收听收音机。选择**选项**，选择**收听方式**，然后选择**扬声器**。

01

02

03

04

05

06

07



08

录音机

使用录音机

使用录音机录制语音备忘录或其它声音。

录制语音备忘录

- 1 按**菜单**，选择**多媒体**，然后选择**录音机**。
- 2 按  开始录音。
- 3 选择**暂停**暂停录音。
- 4 选择**停止**结束录音。
- 5 选择  收听录音。

备注：选择**选项**，然后选择**声音**可以收听保存的所有语音备忘录。

提示！ 如果要将录音作为信息发送，开始录音前，请选择**选项**，选择**录音模式**，然后选择**多媒体信息**。此操作将确保录音适合作为信息发送。

提示！ 如果要将录音作为信息发送，开始录音前，请选择**选项**，选择**录音模式**，然后选择**多媒体信息**。此操作将确保录音适合作为信息发送。

使用 Muvee 工作室

- 1 按**菜单**，选择**多媒体**，然后选择**影片制作室**。
- 2 选择您想使用的曲目样式。
- 3 标记您想使用在幻灯片里的图像，并选择**完成**。
- 4 新影片开始播放。按**保存**以保存您的幻灯片。

备注：您可使用选项菜单，选择幻灯片保存位置（手机/外部储存卡），持续时间模式（普通/多媒体信息）和播放顺序（按顺序/随机）。

发送录音

- 1 完成录音后，请选择**选项**。
- 2 选择**发送方式**，然后从**多媒体信息**、**蓝牙**或**电邮**中选择。如果选择**信息**或**电邮**，录音将被添加到信息中，您可以照常撰写或发送信息。如果选择**蓝牙**，手机可能提示您打开蓝牙。

我的文档

您可以将任意多媒体文件储存在手机内存中，这样，您可以轻松使用所有图片、声音、视频和游戏。您也可以将文件保存到储存卡中。使用储存卡的优点是：您可以释放手机内存的储存空间。

所有多媒体文件保存在**我的文档**中。选择**菜单**，然后选择**我的文档**以打开文件夹列表。

图像

图像包含一个文件夹，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。在**图像**文件夹中，选择**选项**以显示选项列表。**图像**中可用的选项取决于您选择的图像类型。对于使用手机相机拍摄的照片，所有选项均可用。

图像选项菜单

图像中可用的选项取决于您选择的图像类型。对于使用手机相机拍摄的照片，所有选项均可用。对于默认图像，以下选项可用：查看、设定为、文件资料、幻灯片放映、排序方式和列表视图/缩略图视图。

删除 - 删除选定的图像。

设定为 - 将选定图像设定为墙纸或图像 ID。

发送方式 - 将选多媒体信息、蓝牙或电子邮件向朋友发送选定的图像。

备注：在通过多媒体信息发送图像前，可能需要调整其大小。

修改图像 - 您可修改图像。

文件 - 重命名、制作动画或查看选定图像的资料（名称、大小、日期、分辨率、类型和版权所有）。如果插入了外部储存器，将另外显示两个选项：移动至外部储存卡和复制至外部储存卡。

打印方式 - 通过蓝牙或 Pictbridge 打印图像文件。

幻灯片放映 - 请参阅第 38 页的“创建幻灯片”。

新文件夹 - 在主图像文件夹中创建一个新文件夹。

标记/取消标记 - 选择多个要删除的图像。

全部删除 - 删除“图像”文件夹中的所有图片。

排序方式 - 按日期、类型或名称排列图像。

列表视图/缩略图视图 - 更改您查看图片的方式。

01

02

03

04

05

06

07

08

我的文档

发送照片

- 1 选择**菜单**，然后选择**我的文档**。
- 2 移动并选择**图像**。
- 3 选择图片并选择**选项**。
- 4 选择**发送方式**，然后从**多媒体信息**、**蓝牙**或**电邮**中选择。
- 5 如果选择**多媒体信息**或**电邮**，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将图片发送至的装置。

管理图像

- 1 按**菜单**，然后选择**我的文档**。
- 2 选择**图像**。
- 3 选择**选项**，然后选择**排列方式**。
- 4 从**日期**、**类型**或**名称**中选择。

删除图像

- 1 按**菜单**，然后选择**我的文档**。
- 2 选择**图像**。
- 3 选择图像并选择**选项**。
- 4 选择**删除**。

删除多个图像

- 1 按**菜单**，然后选择**我的文档**。
- 2 选择**图像**。
- 3 依次选择**选项**、**标记/取消标记**和**删除**。
- 4 在每个图像旁边会显示一个框。选择每个图像，然后选择 进行标记。要取消标记图像，请再次选择 以取消框中的勾选。或者，您可以选择**选项**，然后选择**全部标记**或**取消所有标记**。
- 5 标记了所有对应的框后，选择**删除**并确认您要删除所有标记的图像。

创建幻灯片

如果您要查看手机中的所有图像或浏览已存有的图像，您可以创建一个幻灯片，这样，您无需对每张图像都执行打开和关闭操作。

- 1 按**菜单**，然后选择**我的文档**。
- 2 移动并选择**图像**。
- 3 选择您要开始放映幻灯片的照片，然后选择**选项**。
- 4 选择**幻灯片放映**，放映即开始。
- 5 按**暂停**暂停幻灯片放映，选择**退出**结束幻灯片放映并返回**图像**文件夹。

6 在幻灯片放映过程中选择**选项**会显示更多选项：


查看 - 在**完整图像**和**全屏**之间选择。选择**横向**更改图像方向。

重复开/关 - 确定是否重复幻灯片放映。

声音

声音文件夹中包含**默认声音**、录音以及下载的声音文件。在此，您可以管理、发送或将声音设定为铃声。


使用声音

- 1 按**菜单**，然后选择**我的文档**。
- 2 移动并选择**声音**。
- 3 选择**默认声音**或从录音文件列表中选择。
- 4 选择声音，然后选择  以收听。
- 5 选择**选项**，选择**设定为**，然后从**铃声、铃声编号和信息提示音**中选择。

视频

视频文件夹显示已下载的视频以及手机中录制的视频列表。在“**视频**”文件夹中，选择选项以显示选项列表。

观看视频

- 1 按**菜单**，然后选择**我的文档**。
- 2 移动并选择**视频**。
- 3 选择视频，然后选择  。
- 4 播放视频之前，您可以通过从**选项**菜单中选择**自动播放下一曲**来设定播放模式。从以下选项选择：

关 - 播放选定的文件。

重复一次 - 播放列表中的所有文件一次。

全部重复 - 反复播放列表中的所有文件。

视频暂停时使用选项

选择选项将暂停正在播放的视频，您可以从以下选项选择：

删除 - 删除视频。

发送方式 - 通过多媒体资料、蓝牙或电邮向朋友发送选定的视频。

信息 - 查看选定文件的名称、大小、日期、时间、类型和版权详细资料。

通过转动手机，您可以更改观看视频的方式。

01

02

03

04

05

06

07

08

我的文档

发送视频剪辑

- 1 按**菜单**，然后选择**我的文档**。
- 2 移动并选择**视频**。
- 3 选择所需视频剪辑，然后选择**选项**。
- 4 按**发送方式**，然后从**多媒体信息、蓝牙或电邮**中选择。
- 5 如果选择**多媒体信息**或**电邮**，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将视频发送至的装置。

备注：在通过多媒体信息发送视频前，可能需要调整其大小。某些视频可能太大，根本无法通过多媒体信息发送。

视频选项菜单

在**视频**文件夹中，选择**选项**以显示下列选项列表。

删除 - 删除选定的视频。

发送方式 - 通过多媒体信息、电子邮件或蓝牙向朋友发送选定的视频。

文件 - 重命名视频、将视频移动到其它文件夹或查看资料（名称、大小、日期、分辨率、类型和版权所

有）。如果插入了外部储存器，将另外显示两个选项：移动到外存卡和复制到外存卡。

新文件夹 - 在主视频文件夹中创建一个新文件夹。

标记/取消标记 - 选择多个视频剪辑，然后选择**删除**。

全部删除 - 删除“视频”文件夹中的所有剪辑。

排序方式 - 按日期、类型或名称排列视频。

自动播放下一个 - 可设置播放模式：关、重复一次和全部重复。

- **关：**播放选定的文件。
- **重复一次：**播放列表中的所有文件一次。
- **全部重复：**反复播放列表中的所有文件。

列表视图/缩略图视图 - 更改您查看视频的方式。

文件

从**文档**菜单中，您可以查看所有 Excel、PowerPoint、Word、文本和 PDF 文件。

查看文件

- 1 按**菜单**，然后选择**我的文档**。
- 2 选择**文件**。
- 3 选择**文件**，然后选择**查看**。

其它

其它文件夹用于存储非图片、声音或视频文件。其使用方式与**文档**文件夹相同。

当您从电脑传输到手机时，您可能发现文件保存在**其它**而不是**文件文件夹**中。如果这样，您可以移动文件。

将文件从**其它**文件夹移到**文件**文件夹：

- 1 按**菜单**，选择**我的文档**，然后选择**其它**。
- 2 选择文件并选择**选项**。
- 3 按**移动**，然后再次选择**移动**。

外部储存卡

如果您已插入储存卡，它将显示为**我的文档**中的一个文件夹。您的外部储存卡文件夹将分为五个文件夹：**图像**、**声音**、**视频**、**文件**和**其它**。每个文件夹将包含该类型下所有保存在储存卡而不是手机中的文件。

将手机用作批量储存器

KC550 可以用作批量储存装置，和 USB 记忆棒一样。要将文件从电脑移动到手机时，这是一个好方法。如果已插入储存卡，作为**批量储存连接**连接时，将在电脑上显示为两个驱动器：手机内存和外部储存器。

- 1 按**菜单**，然后选择**连接**。
- 2 选择 **USB 连接**。
- 3 移动到批量储存，然后选择**确定**。
- 4 将 USB 数据电缆的较小端插入 KC550 一端的接口。将较大端插入电脑的 USB 端口。
- 5 此时将自动打开电脑上的可移动磁盘（如果已插入储存卡，则为两个），其中显示手机或储存卡上的所有文件夹。
- 6 将您的图像、视频、音乐或文件拖放到正确文件夹。
- 7 通过单击电脑工具栏上的**安全移除硬件**图标，安全移除您的手机。
- 8 当您访问文件时，如图像，请选择**菜单**，然后依次选择**我的文档**、**外部储存卡**和**图像**。此文件中将包含所有您传送的图像。

01

02

03

04

05

06

07

08

我的文档

将文件传输到手机

您也可以使用蓝牙将文件从电脑传送到手机。

- 1 请确保手机和电脑都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用电脑发送文件。
- 3 文件发出后，您必须选择**是**在您的手机上接受它。
- 4 文件将根据其类型保存到相应文件夹。例如，照片将保存在**图像**文件夹，音乐将保存在**声音**文件夹。
如果手机无法辨认文件类型，文件将保存在**其它**文件夹。

备注：使用蓝牙发送的文件将保存在手机内存里。

使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

开始使用蓝牙共享文件之前，您需要将您的装置与其它蓝牙装置配对。有关配对装置的详情，请参阅第 52 页的**与其它蓝牙装置配对**。

打开蓝牙：

- 1 按**菜单**，选择**连接**，然后选择**蓝牙**。
- 2 选择**蓝牙开/关**，然后选择**开**。
- 3 选择**关**以关闭蓝牙。

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 依次选择**选项**、**发送方式**，然后选择**蓝牙**。
- 3 如果尚未启用蓝牙，请选择**是**打开蓝牙。
- 4 KC550 将自动搜索范围内其它启用了蓝牙的装置。
- 5 选择您要向其发送文件的设备，然后选择**发送**。

接收文件：

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详情，请参阅第 51 页的**更改蓝牙设置**。
- 2 手机会提示您，是否接收来自其他发件人的文件。选择**是**以接收文件。

提示！ 注意进度栏，确保文件已发送。

备注

Bluetooth® 字体标记及徽标由 Bluetooth SIG, Inc. 所有，LG Electronics 对此类标记的使用已得到授权。其它商标和产品名称是其各自所有者的商标。

01

02

03

04

05

06

07

08

游戏和应用程序

游戏和应用程序

KC550 中预安装了多款游戏，供您在闲暇时娱乐。如果选择要下载其它游戏或应用程序，它们将保存到此文件夹中。

玩游戏

- 1 按**菜单**，然后选择**游戏和应用程序**。
- 2 选择**游戏**。
- 3 选择您要玩的游戏，然后选择**玩游戏**。

查看应用程序

使用**应用程序**菜单，您可以管理安装在手机上的 Java 应用程序。您还可以删除下载的应用程序。

- 1 按**菜单**，然后选择**游戏和应用程序**。
- 2 选择**应用程序**。
- 3 查看并管理应用程序。

更改网络设置

要下载游戏，您可以使用网络设置文件连接网络。

- 1 按**菜单**，然后选择**游戏和应用程序**。
- 2 选择网络设置文件。
- 3 您可以添加并编辑新网络设定。

M-Toy

记事本

将事件添加到日历

- 1 从待机屏幕，按菜单选择记事本，然后选择日历。
- 2 选择您要添加事件的日期。您可以通过以下方式选择日期：使用导航键移动到日期；或选择**选项**，然后手动输入日期。
- 3 选择**选项**，然后**新日程表**，输入所需的事件开始时间和结束时间。
- 4 选择是否要为事件设置**闹钟**。您可以将闹钟设为在事件开始时停止，或在事件开始前的特定时间内停止，以提醒您该事件即将开始。
- 5 输入事件**主题**。使用键盘输入字母和数字。
- 6 再次向下移动，选择事件是一次性事件，还是以每天、每周、每月或每年为间隔重复。如果事件为重复事件，您还可以向下移动以输入**截止日期**，事件将在该日期完全停止。
- 7 选择**保存**，您的事件将保存在日程表中。对于保存了事件的日期，将以方形光标标记。

编辑日历事件

- 1 从待机屏幕选择**菜单**，选择记事本，然后选择**日历**。
- 2 选择**选项**，然后选择所有日程表以查看所有事件列表。滚动到您要编辑的事件，然后选择**查看**。或者，在日历中选择事件发生的日期，然后选择**查看**。
- 3 选择**修改**，然后移动到您要更改的事件详细资料。进行修改，然后选择**保存**以保存修改过的事件。

备注：您可以从日历中删除事件：选择事件以查看，然后依次选择**选项**和**删除**。

共享日历事件

- 1 从待机屏幕选择**菜单**，选择**记事本**，然后选择**日历**。
- 2 选择要共享的事件，然后选择**选项**。
- 3 选择发送方式，从**文本信息**、**多媒体信息**、**蓝牙**或**电邮**中选择。

01

02

03

04

05

06

07

08

记事本

添加备忘录

- 1 按**菜单**选择**公文包**，然后选择**备忘录**。
- 2 选择**选项**，然后备忘录，输入您的备忘录。
- 3 选择**保存**。
- 4 在您下一次打开备忘录应用程序时，屏幕上将显示此备忘录。

提示! 您可以编辑现有备忘录。选择要编辑的备忘录，选择**选项**，然后选择**编辑**。

工具

设置闹钟

- 1 按**菜单**，选择**工具**，然后选择**闹钟**。
- 2 选择**新建**。
- 3 输入所需闹钟时间。
- 4 选择重复类型以说明闹钟的响铃方式：**一次**、**每天**、**周一至周五**、**周一至六**、**周六至日**或**选择周日**。
- 5 为闹钟选择**跟随设置文件**、**每次响铃**或**每次振动类型**。

- 6 向下移动以选择闹钟提示音。选择声音以选择新声音。
- 7 为闹钟输入名称或保留建议的名称。
- 8 选择**保存**。

备注: 您最多可以设置 5 个闹钟。

使用计算器

- 1 选择**菜单**，选择**工具**，然后选择**计算器**。
- 2 按数字键以输入数字。
- 3 对于简单计算，选择您所需的函数 (+, -, ×, ÷)，然后按 =。
- 4 对于更复杂的计算，请选择**函数**以选择一个命令。
- 5 选择**清除**清除屏幕，以开始一个新计算。

使用秒表

- 1 按**菜单**，选择**工具**，然后选择**秒表**。
- 2 选择**开始**可启动秒表。
- 3 如果要记录时间，请选择**圈数**。
- 4 选择**停止**结束秒表。
- 5 选择**继续**从您停止的时间重新开始秒表，或选择**重新设置**重新开始计时。

01

02

03

04

05

06

07

08

对换单位

- 1 按**菜单**，选择**工具**，然后选择**单位对换器**。
- 2 选择要换算的内容：**货币、面积、长度、重量、温度、面积/容量或速度**。
- 3 选择您要输入的测量单位。左右滚动可以选择单位，然后向下移动以选择单位量。
- 4 选择您要换算的单位测量值。在下面的行中将自动显示换算值。

添加城市到世界时间

- 1 按**菜单**，选择**工具**，然后选择**世界时钟**。
- 2 从上下左右四个方向在全球范围内导航，然后选择一个洲。
- 3 选择**放大**以放大一个区域，然后选择该区域中的城市。
- 4 按**确定**，然后选择**是**。

SIM 卡服务

此功能视 SIM 卡和网络服务而定。

如果 SIM 卡支持 SAT（即，SIM 卡应用程序套件）服务，则此菜单将是 SIM 卡上储存的运营商特定服务的名称。

浏览器

访问网页

- 1 按**菜单**，然后选择**浏览器**。
- 2 要直接访问浏览器主页，请选择**主页**。或者，选择**输入网址**并输入所需的网址，然后选择**连接**。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 按**菜单**，然后选择**浏览器**。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要添加一个书签，请选择**选项**，然后选择**新书签**。输入书签名称和网址。
- 4 选择**保存**。现在，您添加的书签将显示在书签列表中。
- 5 要访问书签，只需移动到所需书签，选择**连接**即可。您将被连接到书签页面。

保存页面

- 1 如上所述，访问所需网页。
- 2 选择**选项**，移动到**保存**，然后选择**此页**。

- 3 选择**确定**。

访问保存的页面

- 1 按**菜单**，然后选择**浏览器**。
- 2 选择**已保存的页面**。
- 3 选择所需页面，然后选择**打开**。

提示！ 使用此菜单，您还可以删除已保存的页面。

查看浏览记录

- 1 按**菜单**，然后选择**浏览器**。
- 2 选择**网络浏览记录**，然后选择**确定**。
- 3 此时将显示一个您最近访问过网页的标题列表。要访问其中一个网页，移动到所需页面，然后选择**连接**。

更改网络浏览器设置


- 1 按**菜单**，然后选择**浏览器**。
- 2 选择**设置**。
- 3 您可以选择浏览互联网时手机的处理方式、显示方式以及资料使用方式。您可以修改以下设置：**网络设置文件、提供模式、缓存、Cookies、保安证书、显示图像、Javascript 和储存位置**。
- 4 更改设置后，请选择**确定**。

设置

使用此文件夹，您可以调整设置以使 KC550 更具个性化。

备注：有关通话设置的信息，请参阅第 15 页。

更改情景模式

您可以在待机屏幕上快速更改情景模式。按 ，然后选择您要启动的情景模式。从**通用、静音、仅振动、户外和耳机**中选择。

将情景模式个性化

您可以个性化每种情景模式。

- 1 按**菜单**，然后选择**情景模式**。
- 2 选择所需情景模式，然后选择**个性化**。
- 3 对于**静音**和**仅振动**情景模式，您可以调整振动强度。对于其它情景模式，您可以更改列表中可用的所有声音和提示选项。（有关详情，请参考您的手机。）

更改日期和时间

您可以设置与日期和时间相关的功能。

1 按**菜单**，然后选择**设置**。

2 选择**日期和时间**，然后从以下列表中选择：

设定日期 - 您可以输入当前日期。

日期格式 - 您可以设置日期格式。

设定时间 - 您可以输入当前时间。

时间格式 - 您可以将时间格式设为 24 小时制或 12 小时制。

自动更新 - 选择**开**，手机将自动更新日期和时间。

更改语言

转到**设置**，选择**语言**以更改手机中显示文本的语言。此更改还将改变语言输入模式。

01

02

03

04

05

06

07

08

设置

更改显示设置

- 1 按**菜单**，然后选择**设置**。
- 2 选择**显示**，然后从以下选项中选择：
 - 墙纸** - 选择要显示在屏幕上的墙纸。
 - 时钟** - 选择以在待机屏幕上显示时间和日期。
 - 背景灯计时器** - 选择背景灯显示的持续时间。

提示! 背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。

亮度 - 调整屏幕亮度。默认亮度为100%。使用左右导航键，调整亮度为40%、60%、80%或100%。

主屏快捷键 - 选择“开”，您可以在待机屏幕中设置4个快捷键。快捷键使您可以一键式轻松访问常用功能。

字体大小 - 更改以下内容的字体大小：菜单、拨号和信息。

主题 - 快速更改屏幕整体外观。

菜单样式 - 将菜单视图从格式视图更改为列表视图，反之亦然。

拨号的字体样式 - 调整您键入电话号码时显示的字体样式。

待机文本 - 选择待机屏幕上的显示文本。

网络名称 - 选择是显示还是隐藏网络名称。

更改保安设置

更改保密设置以保护 KC550 及重要信息。

- 1 按**菜单**，然后选择**设置**。
- 2 选择**保安设置**，然后从列表中选择下列内容：

防盗手机追踪器 - 设置手机被盗用时的警惕信息。

PIN 码要求 - 选择开机时要求的 PIN 码。

手机锁 - 为以下选项输入保安密码以锁住手机：**开机时**、**更换 SIM 卡时**或**立即**。

更改密码 - 更改您的**保安密码**、**PIN1码**、**PIN2 码**或**防盗追踪密码**。

使用航行模式

使用此功能，将航行模式设为**开**或**关**。**航行模式**被设为**开**时，您将无法拨打电话、连接互联网、发送信息或使用蓝牙。

重新设置手机

使用重新设置将所有设置恢复到其出厂设置。要启动此功能，您需要保管密码。

查看储存器状态

KC550 有三种可用储存器：手机、SIM 卡和外部储存卡（您可能需要单独购买储存卡）。

您可以使用储存管理器确定每种储存器的使用方式以及查看可用空间。

选择**菜单**，然后选择**设置**。选择储存器状态，您将看到 KC550 中内存的当前状态（公用的、预留的、SIM 卡和外部储存卡）。

提示！ 有关插入储存卡的详情，请参阅第 10 页。

更改蓝牙设置

1 按**菜单**，选择**连接性**，然后选择**蓝牙**。

2 选择**蓝牙设置**。进行更改：

本机的可寻度 - 选择向其他人显示还是隐藏您的装置。

我的名称 - 为您的 KC550 输入一个名称。

我的地址 - 查看您的蓝牙地址。

更改连接设置

网络运营商已为您设定连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

按**菜单**，然后选择**连接性**。选项包括：

蓝牙 - 设置 KC550 以使用蓝牙。您可以调整对其它装置的可寻度，或搜索您可以配对的装置。

网络 - KC550 将自动连接到首选网络。要更改这些设置，请使用此菜单。您也可以使用此菜单添加新的接入点。

01

02

03

04

05

06

07

08

设置

USB 连接 - 选择**数据服务**并使用 LG PC 套件软件同步 KC550 以复制手机中的文件。如果您已插入储存卡，请选择批量储存，以使用 USB 记忆棒的相同方式来使用手机。连接电脑，将文件拖放到 KC550 可移动装置文件夹。有关详情，请参阅第 37 页。

与其它蓝牙装置配对

要将您的 KC550 与其它装置配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为**开且显示**。您可以在**蓝牙设置**菜单中更改可寻度：选择**本机的可寻度**，然后选择**显示**。
- 2 从蓝牙菜单中选择**装置列表**，然后选择**新建**。
- 3 KC550 将搜索装置。搜索完成时，屏幕上将显示找到的装置。
- 4 选择您要配对的装置，选择**配对**，输入通行码，然后选择**确定**。
- 5 随后，您的手机将连接到其它装置，您可以在该装置上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

使用蓝牙耳机

- 1 查看蓝牙是否为**开且显示**。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对装置。
- 3 KC550 将自动切换到“耳机”情景模式。您也可以连接蓝牙耳机拨打和接听电话。

配件

这些配件随 KC550 提供。

充电器



数据电缆和 CD

在 KC550 和 PC 间建立连接并同步。



电池



用户手册

了解更多关于 KC550 的资料。

立体声耳机



备注

- 务必使用正品 LG 配件。否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

01

02

03

04

05

06

07

08

网络服务

本指南中描述的无线手机适用于 GSM 900、DCS 1800 和 PCS 1900 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

技术数据

标准

产品名称: KC550

系统: GSM 900 / DCS 1800 /
PCS 1900

外部环境

最高温度: +55° C (放电)、
+45° C (充电)

最低温度: -10° C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri. Band Terminal Equipment

Model Name

KC550

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V 1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


Name

Issued Date

Seung Hyoun, Ji / Director

18, March, 2008

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel: +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com


Signature of representative

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息

此款 KC550 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为 2W/kg，平均值超过十 (10) 克薄纸。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.348 W/kg (10克)，戴在身体上时，其值为 0.665 W/kg (10克)。

- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过一 (1) 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告！

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机掉落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手

机，因为它可能影响敏感的医疗装置。

- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应在通风条件好的位置对手机进行充电。
- 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。

- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。

关于安全有效使用手机的准则

- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

玻璃零件

手机的部分零件由玻璃制成。当手机掉在坚硬的表层或受到重大的撞击时，玻璃可能破裂。若玻璃破裂，请勿碰触或尝试取出。立即停止使用手机，直到授权服务供应商更换玻璃。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线装置可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的

紧急呼叫功能。请向当地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。

不要象处理家用废物一样处理电池。

- 请按制造商的说明处置用过的电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。



English

■ KC550 ■ User Guide

Congratulations on your purchase of the advanced and compact KC550 phone by LG, designed to operate with the latest digital mobile communication technology.

Note

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Contents

01 SET UP		Contacts	19
Getting to know your phone	6	Searching for a contact	19
Open view	7	Adding a new contact	19
Installing the SIM and battery	8	Contact options	19
Memory card	11	Adding a contact to a group	20
Installing a memory card	11	Renaming a group	20
Removing the memory card	11	Adding a picture to a contact	20
Formatting the memory card	11	Copying your contacts to your SIM	21
Menu map	12	Deleting all your contacts	21
		Viewing information	21
02 YOUR STANDBY SCREEN		Messaging	22
Your standby screen	13	Messaging	22
The quick keys	13	Sending a message	22
The main menu	13	Entering text	23
The status bar	14	Setting up your email	24
		Sending an email using your new	
03 THE BASICS		account	25
Calls	15	Message folders	25
Making a call	15	Managing your messages	26
Making a call from your contacts	15	Using templates	26
Answering and rejecting a call	15	Changing your text message settings	27
Adjusting the call volume	16	Changing your multimedia message	
Speed dialling	16	settings	27
Viewing your call logs	16	Changing your email settings	28
Using call divert	17	Changing your other settings	28
Using call barring	17		
Changing the call settings	18		

04 GET CREATIVE		FM radio	39
Camera	29	Using the FM radio	39
Taking a quick photo.....	29	Searching for stations	39
After you've taken your photo.....	29	Resetting channels	39
Getting to know the viewfinder.....	30	Listening to the radio	39
Using the quick settings.....	30	Voice recorder	40
Using the flash	31	Using the voice recorder	40
Changing the image size.....	31	Recording your voice memo	40
Viewing your saved photos	32	Sending a voice recording.....	40
Setting a photo as Wallpaper		Using the muvee studio	40
or Picture ID.....	32	My stuff	41
Video camera	33	Images.....	41
Shooting a quick video.....	33	Images options menu.....	41
After you've shot your video	33	Sending a photo	42
Getting to know the viewfinder.....	34	Organising your images	42
Using the quick settings	34	Deleting an image	42
Watching your saved videos	35	Deleting multiple images.....	42
Adjusting the volume when		Creating a slide show.....	43
viewing a video.....	35	Sounds	43
MP3 player	36	Using a sound	43
MP3 player	36	Videos	43
Transferring music onto your phone.....	36	Watching a video	43
Playing a song.....	36	Using options while video is paused	44
Using options while playing music.....	36	Sending a video clip.....	44
Creating a playlist.....	37	Video options menu	44
Playing a playlist.....	37	Documents.....	45
Editing a playlist	37	Viewing a document	45
Deleting a playlist	38	Others	45

Contents

External memory	45	06 BROWSER	
Using your phone as a mass storage device.....	45	Browser	53
Transferring a file to your phone	46	Accessing the web.....	53
Sending and receiving your files using Bluetooth	47	Google	53
Games and Apps	48	Adding and accessing your bookmarks.....	53
Games and Apps	48	Saving a page	54
Playing a game.....	48	Accessing a saved page.....	54
Viewing applications	48	Viewing your browser history	54
Changing the network profile.....	48	Changing the web browser settings	54
M-Toy	48	07 SETTINGS	
05 GET ORGANISED		Settings	55
Organiser	49	Changing your profiles	55
Adding an event to your calendar	49	Personalising your profiles.....	55
Editing a calendar event.....	49	Changing your date & time.....	55
Sharing a calendar event.....	50	Changing the language	55
Adding a memo	50	Changing your display settings	55
Tools	51	Changing your security settings	56
Setting your alarm	51	Using flight mode.....	56
Using your calculator	51	Resetting your phone	57
Using the stopwatch	51	Viewing memory status.....	57
Converting a unit	52	Changing your Bluetooth settings.....	57
Adding a city to your world clock	52	Changing your connectivity settings	57
SIM services.....	52	Pairing with another Bluetooth device	58
		Using a Bluetooth headset.....	58

08 ACCESSORIES

Accessories 59

Network service..... 60

Technical data 60

 General 60

 Ambient Temperatures 60

Guidelines for safe and efficient use 62

Getting to know your phone

Main screen

Clear key 


Deletes a character with each press. Use this key to go back to the previous screen.

Call key 

Dials a phone number and answers incoming calls.



Charger, cable, handsfree connector

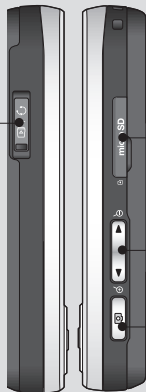

Memory card slot


Volume key

Camera

End/Power key 

Ends or rejects a call.
Turns the phone on/off.
Returns to the standby screen when you use the menu.

Open view

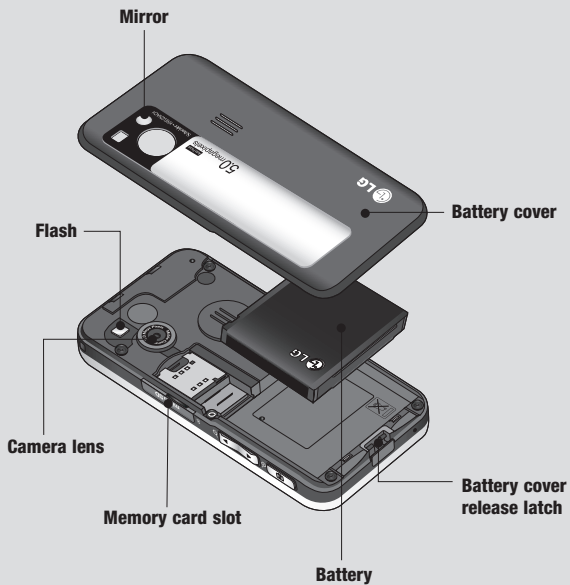

01

02

03

04

05

06

07

08

Installing the SIM and battery


1 Remove the battery cover

Press the battery cover release latch. The battery cover should lift off easily.



2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

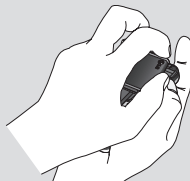


⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the SIM card


Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.

⚠ WARNING: Do not insert the SIM card when the slide is open, as this may damage your phone and SIM card.

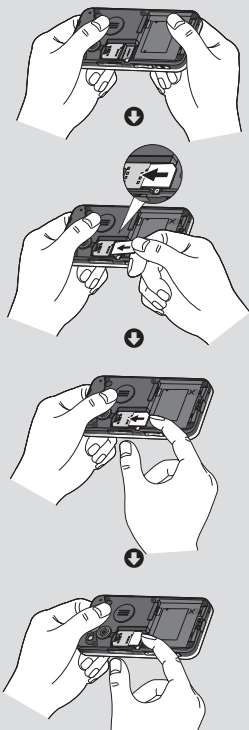

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

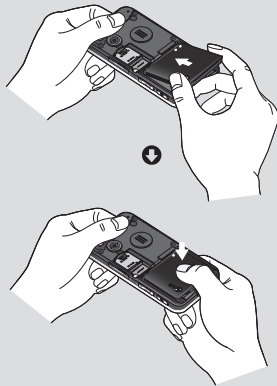

01

02

03

04

05

06


07

08

Installing the SIM and battery

5 Replace the battery cover


Slide the battery cover towards the top of the phone until it clicks into place.

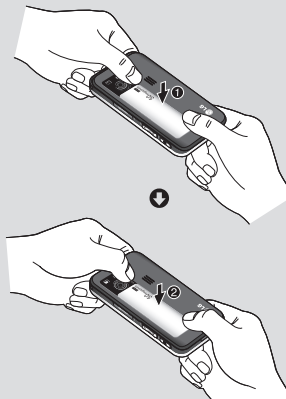

6 Charging your phone

Pull open the cover of the charger socket on the side of your KC550. Insert the charger and plug into a mains electricity socket. Your KC550 will need to be charged until a message reading Fully Charged appears on screen.

⚠ WARNING: Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.

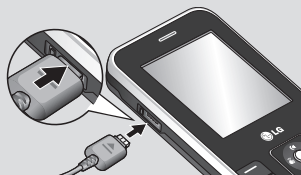


Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card. The KC550 will support a memory card of up to 2 GB.


TIP! A memory card is an optional accessory.

Open the slide covering the memory card slot. Slide the memory card into the slot, until it clicks into place. Make sure that the gold contact area is facing downwards.

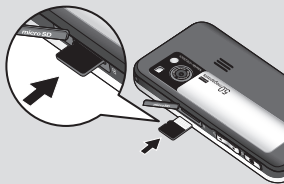

Removing the memory card

Open the slide and carefully remove the memory card by gently pushing it as shown in the following diagram:

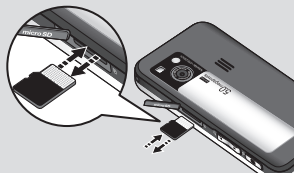

Formatting the memory card

If your memory card is not already formatted, you will need to do so before you can begin using it.

- 1 From the standby screen press **Menu** and select **Settings**.
- 2 Choose **Memory status** and select **External memory**.
- 3 Do **Format** and enter the password, which is set to 0000 as default. Your card will be formatted and ready to use.
- 4 To view the new formatted folders on your KC550 press **Menu** and select **My stuff**. Choose **External memory**.

⚠ WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

01

02

03

04

05

06

07

08

Menu map



Games & Apps

- 1 M-toy
- 2 Games
- 3 Applications
- 4 Network profile



Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



Organiser

- 1 Calendar
- 2 Memo



Multimedia

- 1 MP3 player
- 2 Camera
- 3 Video camera
- 4 FM radio
- 5 Voice recorder
- 6 Muvee studio



Messaging

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Drafts
- 5 Outbox
- 6 Sent
- 7 Listen to voicemail
- 8 Info message
- 9 Templates
- 0 Settings



My stuff

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Documents
- 5 Others
- 6 External memory



Profiles

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



Tools

- 1 Alarm clock
- 2 Calculator
- 3 Stopwatch
- 4 Unit converter
- 5 World clock
- 6 SIM services



Browser

- 1 Home
- 2 Bookmarks
- 3 Enter address
- 4 History
- 5 Saved pages
- 6 Settings
- 7 Information



Connectivity

- 1 Bluetooth
- 2 Network
- 3 USB connection
- 4 TV out







Settings

- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Call
- 5 Security
- 6 Flight mode
- 7 Reset
- 8 Memory status

Your standby screen

The quick keys

The quick keys provide easy, one-press access to your most used functions.

-  Select to open your message editor.
-  Select to choose a sound profile for your phone.
-  Select to open the favourites menu.
-  Select to play MP3 file.

The main menu

The main menu provides twelve menu options. To open the main menu:

- 1 Select **Menu**.
- 2 The main menu will appear on the screen.
- 3 When the option you require is highlighted, select **OK** to open.

01

02

03

04

05

06

07

08

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as shown in the figure below.

O



X













Please do not cover the antenna area with your hand during a call or when using a Bluetooth connection. It may interfere and degrade signal quality.











Your standby screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth is active.




Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	GPRS available
	EDGE available
	Flight mode is activated
	Calls are diverted
	Roaming service
	Bluetooth® is activated
	WAP service is connected
	An alarm is set

Icon	Description
	Schedule
	New message
	New voice message
	General profile in use
	Silent profile in use
	Vibrate profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty


Calls

Making a call


- 1 Key in the number using the keypad. To delete a digit press .
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold **0**.

Making a call from your contacts

- 1 Select **Contacts** from the Standby screen & then select Search.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 Select **Call** or press  to initiate the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways.

Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Slide open**, **Any key** or **Send key only**.

01

02

03

04

05

06

07

08

Calls


Adjusting the call volume

To adjust the volume during a call, press the volume key on the right hand side of your phone.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Contacts**, then select **Speed dials**.
- 2 Your voicemail is set to speed dial 1 and you cannot change this. Select any other number either by using the navigation key arrows and selecting **Assign** or by pressing the hard key number.
- 3 Your address book will open. Select the contact you'd like to assign to that number using the navigation arrows, then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically; there's no need to press .

Viewing your call logs

Press **Menu**, select **Call history**. Choose to view:

All calls - View a complete list of all your dialled, received and missed calls.

Missed calls - View a list of any calls you have missed.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Call duration - View details of how long you have spent on your calls; received and dialled.

Call costs - View the charges applied to your Last call or All calls. This service is network dependent, some operators are unable to support this.

Data information - View the amount of all your received and sent data in kilobytes.

TIP! From any call log select **Options** and choose **Delete** to delete selected or all of the recorded items.

TIP! Using the navigation key arrows, highlight any single call entry to view the date and time of the call. To view the call duration select **View**.

Using call divert

- 1 Select **Menu**, select **Settings** and choose **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no reply, when you are out of reach, all data calls or all fax calls.
- 4 Choose **Activate** and select whether to divert to voicemail, another number or your favourite number.
- 5 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Cancel all** from the **Call divert** menu.

Using call barring

- 1 Select **Menu**, select **Settings** and choose **Call**.
- 2 Select **Call barring**.
- 3 Choose any or all of the seven options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international except home country**
 - All incoming**
 - Incoming when abroad**
 - Cancel all barrings**
 - Change password**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** from the **Call** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

01

02

03

04

05

06

07

08

Calls

Changing the call settings

1 Select **Menu**, select **Settings** and choose **Call**.

2 From here you can amend the settings for:

Call divert - Choose whether to divert your calls.

Call barring - Select which calls you would like to be barred.

Fixed dial number - Choose a list of numbers that can be called from your phone.

Answer mode - Choose whether to answer the phone using the send key, any key or by sliding your handset open.

Send my number - Choose whether your number will be displayed when you call someone.

Call waiting - Be alerted when you have a call waiting.

Minute minder - Select **On** to hear a tone every minute during a call.

Auto redial - Choose **On** or **Off**.

Send DTMF tones - Choose **On** or **Off**.

Contacts

Searching for a contact

- 1 Select **Contacts** from the standby screen, and choose **Search**.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 To scroll through the contacts and their different numbers use the navigation arrows.

Adding a new contact

- 1 Select **Contacts** and choose **New contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

Or, using the slightly quicker method...

- 1 Enter the number you wish to store on the standby screen and select **Options**.
- 2 Choose **Save** or **Add to existing contact**.
- 3 Enter the relevant information as above and select **Save**.

Note: When you are storing a contact's email address, press ***..*** to enter a symbol and scroll with the navigation arrows until you see **@**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the Options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** above.
- 2 Select **Options** to open the list of options.

From here you can:

Edit - Change any of the contact's details.

New message - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

Send via - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Bluetooth** or by **Email**.

Delete - Delete the contact. Select **Yes** if you are sure.

New contact - Add a new contact.

Multi delete - Mark multiple contacts to delete.

01

02

03

04

05

06

07

08

Contacts

Copy to SIM/phone - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleague**, **VIP**, **Group1** and **Group2** already set up on the phone.

- 1 Select **Contacts** and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **View** then select **Add**.
- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and press , then select **Done**.
- 4 Select **Yes** if you are sure.

TIP! You can assign a ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to and select **Options** and choose an item you want.

Renaming a group

You can rename any of the groups to fit your lifestyle.

- 1 Select **Contacts** and choose **Groups**.
- 2 Select a group you want to rename.
- 3 Choose **Options**, select **Rename** and enter your new group name.
- 4 Select **Save**.

Note: You can only assign a contact to a group or add a picture to a contact that is saved in your phone (not SIM) memory.

Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 Select **Contacts** and choose **Settings**.
- 2 Select **View options** and choose **With picture**.
- 3 Then return to the address book and select the contact you want to add a picture to.
- 4 Choose **Options** and select **Edit**.

- 5 Scroll down to the **Photo** section and select **Edit**. Choose **Options** and select **Images** or **New image**. If you select **Images**, you can choose an image that is saved in your phone memory. If you select **New image**, your camera viewfinder will open, so you can take a picture of your contact.
- 6 Select **Save**.

Copying your contacts to your SIM

You can also choose to copy your contacts from your SIM to your handset or from your handset to your SIM.

- 1 Select **Contacts** and choose **Copy All**.
- 2 Select to copy the contacts from **SIM to phone** or **Phone to SIM**.
- 3 Choose whether to **Keep original** or **Delete original**.
- 4 Select **Yes** if you are sure.

Deleting all your contacts

- 1 Select **Contacts** and choose **Delete all**.
- 2 Select to delete contacts from **SIM** or **Phone**.
- 3 Select **Yes** if you are sure.

- 4 Enter the password, which is set to 0000 as default, and select **OK**.

Viewing information

Select **Contacts** and choose **Information**. From here you can view your **Service dial numbers**, your **Own numbers** and your **Business card**.

TIP! If you haven't yet created a business card, the **Business card** screen will give you the option to create one. Select **New** and enter your details as you would for any contact. Choose **Save**.

01

02

03

04

05

06

07

08

Messaging

Messaging

Your KC550 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) and email, as well as the network's service messages. Simply press

Menu and select **Messaging**.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **Message** to send an SMS or MMS. (If you want to send an **Email** see page 24-25 or if you want to send something using **Bluetooth**, see page 47.)
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using either the T9 predictive mode or Abc manual mode. See **Entering text** on page 23 to see how to switch between the different text entry modes.

- 5 Select **Options** and choose **Insert** to add an **Image, Sound, Video, Symbol, Text template, Emoticon, Name & Number, New slide, Subject** or **More (Contact/My business card/Schedule)**.
- 6 Press the centre key **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Select **Send**.



WARNING: If an **Image, Sound, Video, New slide** or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

To turn on T9 mode in the text entry field, choose **Options**, select **Set T9** and choose **On**. With T9 on, you can switch text input mode by pressing **# * 0**. You will notice the text input mode indicator in the upper right corner of the display.

To input a symbol in the text entry field, press the *** 0** key and select a symbol, then select **OK**.

Complete each word with a space by pressing **0**.

To delete a character, press **C** key.

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press **8, 3, 5, 3, 7, 4, 6, 6, 3** to write 'telephone'.

If the word you want doesn't appear, select **Options** and select **New T9 word**, then you can enter the word using ABC manual mode. Your word will be added to the dictionary.

Note: You can select a different T9 language by pressing **Options** and select **Writing language**.

ABC manual mode

In ABC manual mode you may need to press the key repeatedly to enter a letter. For example, to write 'hello', press **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

123 mode

Type numbers using one keystroke per number. You can also add numbers whilst in letter modes by pressing and holding the desired key.

01

02

03

04

05

06

07

08

Messaging

Setting up your email

You can stay in press on the move using email on your KC550. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu**, select **Messaging** and choose **Settings**.
- 2 Select **Email** then **Email account**.
- 3 Select **New**.
- 4 You can now choose how your account works:
 - Account name** - Enter a name for this account.
 - Email address** - Enter the account email address.
 - My name** - Enter your name.
 - Incoming mail server** - Enter the account details.
 - User name** - Enter the account user name.
 - Password** - Enter the account password.
 - Outgoing mail server** - Enter the account details.
 - Outgoing mail authentication** - Select on or off.
 - Outgoing server ID** - Enter the account details.
 - Outgoing server password** - Enter the account details.

To enter the following information, choose **Options** and select **Advanced settings**.

- Protocol type** - Select the mailbox type, POP3 or IMAP4.
- Maximum receive size** - Choose the size limit of your emails, the maximum is 300KB.
- Save to server** - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.
- APOP secure login** - Choose whether to save your emails to the server of the phone (only for IMAP4).
- Insert signature** - Choose whether to automatically insert a signature in your emails.
- Reply email address** - Enter the "reply to" email address.
- Incoming port number** - Normally, this is 110 for POP3 and 143 for IMAP4 accounts.
- Outgoing port number** - Normally this is 25.
- Auto retrieving** - Select to automatically retrieve your emails.
- Retrieve download** - Select **Headers only**, **Headers + body** (only for IMAP4) or **All**.

Now your account is set up, it will appear in the list of accounts in your Email folder.

Sending an email using your new account

To send/receive an email, you should set up an email account (see page 24).

- 1 Select **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **Email** and a new email will open.
- 3 Write a subject then press OK.
- 4 Enter your message using T9 predictive mode or ABC manual mode. See **Entering text** on page 23 to see how to switch between the different text entry modes.
- 5 Select **Options** and choose an attachment to add: **Image, Sound, Video, Document, Contact, My business card** or **Schedule**.
- 6 Press **Send** and enter the recipient's address or press **Options** and select **Contacts** to open your contacts list.
- 7 Press **Send** and your email will be sent.

Message folders

Press **Menu**, select **Messaging**. The folder structure used on your KC550 is fairly self-explanatory.

Inbox - All the messages you receive are placed into your Inbox. From here you can reply, forward and more, see below for details.

Email box - Contains all your email messages. Select the account you want to use then select **Retrieve**. Your KC550 will connect to your email account and retrieve your new messages.

Drafts - If you don't have time to finish writing a message, you can save what you have done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent - All the messages you send are placed into your Sent folder.

Listen to voicemail - You can access your voicemail box (if provided by your network). When a new voice message is received, the symbol will be displayed on the standby screen.

Info message - All info messages and updates received from your operator.

Templates - A list of useful messages, already written for a quick reply.

01

02

03

04

05

06


07

08

Messaging

Managing your messages

You can use your **Inbox** to manage your messages.

- 1 Press **Menu**, select **Messaging** and choose **Inbox**. Or, a quicker way is to select  on the standby screen.
- 2 Select **Options** and then choose to:
 - Delete** - Delete the selected message.
 - Reply** - Send a reply to the selected message.
 - Forward** - Send the selected message on to another person.
 - Return call** - Call the person who sent you the message.
 - Information** - View the details of a message, for example, the time it was sent.
 - Copy/Move** - Choose to copy or move the selected message to the SIM card or phone.
 - Multi delete** - Delete selected messages.
 - Delete all read** - All opened messages will be deleted.
 - Delete all** - Delete text messages, multimedia messages or all messages.

If you see the message **No space for SIM message**, you should delete some messages from your inbox.

If you see the message **No space for messages**, you can delete either messages or saved files to create space.

Using templates

You can create templates for the **Text** and **Multimedia** messages you send most frequently. There are some templates already on your phone, which can be edited if you wish.

- 1 Press **Menu**, select **Messaging** and choose **Templates**.
- 2 Choose **Text** or **Multimedia**. You can then select **Options** and choose **Edit** to change existing templates, to add **New template** or to **Delete** templates.
- 3 To send a template, select the one you want to send, choose **Options** and select **Send via**.
- 4 Choose how you would like to send the template; as a **Message**, **Bluetooth message** or **Email**.
- 5 Select a contact and select **Send**.

Changing your text message settings

Your KC550 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do this using the **Settings** options.

Press **Menu**, select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

Message types - Convert your text into Voice, Fax, Paging, X.400, Email or ERMES.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Reply charging - Choose to be billed for your message recipient's reply.

Message centre number - Enter the details for your message centre.

Character encoding - Choose how your characters are encoded. This impacts the size of your message and therefore data charges.

Send long text as - Choose whether to send your message as SMS or MMS when you enter a text longer than 2 pages in the message field.

Bearer setting - Choose whether to send your messages via GSM or GPRS.

Changing your multimedia message settings

Your KC550 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do so using the **Settings** options.

Press **Menu**, select **Messaging**, then choose **Settings** and **Multimedia message**.

You can make changes to:

Slide duration - Choose how long your slides appear on screen.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to allow and/or request a delivery report.

01

02

03

04

05

06

07

08

Messaging

Read report - Choose to allow and/or Request a read report.

Auto download - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

Network profile - Select an operator specific network profile for sending multimedia messages.

Permitted message type - Select which type of multimedia messages to allow.

Changing your email settings

You can adapt your email settings to your own preferences.

- 1 Press **Menu**, select **Messaging** and choose **Settings**.
- 2 Select **Email** then you can adapt the following settings:

Email account - You can set up an email account.

Access point - You can set the email access point.

Retrieve interval - Choose how often your KC550 checks for new email messages.

Signature - Create an email signature and switch this feature on.

Changing your other settings

Press **Menu**, select **Messaging**, choose **Settings** then:

Voicemail number - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.

Service message - Here you can switch off service message, which means your messages will no longer be pushed directly to your device as they are received, only when you check for new messages.

Info message - Choose the reception status, alerts and language of your info messages.

Save text message - Choose whether to save your text messages to the phone memory or to the external memory.

Camera

Taking a quick photo

- 1 Open the lens cover and hold the camera key down on the right side of the handset. The camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press the camera key halfway. A focus box will appear in the centre of the viewfinder screen. Position the phone so you can see the subject of your photo in the focus box. When the focus box turns green, the camera has focused on your subject.
- 4 Press the centre soft key or press the camera key all the way down to take a photo.

Note: You can also access the camera menu from the standby screen. press **Menu** and select **Multimedia**, scroll down to and select **Camera** to open the viewfinder.

After you've taken your photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen and you will see six options displayed on the right side of the screen.

Delete - Delete the photo you have just taken and confirm by pressing **Yes**. The viewfinder will reappear.



New image - Take another photo straightaway. Your current photo will be saved.



Set as - Select to open a sub menu to set your image as **Wallpaper** or **Picture ID**.



Send via - Select to send the photo as a **Multimedia message** or **Email**. See page 22 for **Sending a message**.



Album - Select to look at the other photos in your album. Your current photo will be saved. See page 32 for **Viewing your saved photos**.

OK - Select to take another photo straightaway. Your current photo will be saved.

01

02

03

04

05

06


07

08

Camera

Getting to know the viewfinder

Note: You can adjust the zoom using the volume key on the left side of the phone. The zoom function is only available when the resolution is set to 640 x 480 or below. See **Changing the image size** on page 31 for details.

TIP! When using the camera, power consumption increases. If  icon appears indicating low battery, recharge the battery before use.

Using the quick settings

Select **Options** to access the quick settings options. These include various options for taking photos.

Self timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from 3 seconds, 5 seconds or 10 seconds. Great for that group photo you want to be part of.

Continuous shot - This enables you to take up to 9 shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

White balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy** or **Fluorescent**.

Colour effect - Choose from four colour tone options: Off (normal/colour), Sepia, Mono (black and white) or Negative.

EV - Turn macro mode on if you are taking a picture very close to the image subject.

Resolution - See **Changing the image size** on page 31.

Quality - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality the sharper a photo will be but the file size will increase as a result, which means you will be able to store fewer photos in your memory.

Auto focus - Turn Auto focus On or Off. Your camera can automatically adjust the focus for a clear, sharp image with a single press of the camera button.

Shutter tone - Select one of the three shutter sounds.


ISO - Set the ISO to Auto, ISO 800, ISO 400, ISO200, ISO 100 or ISO 80.

Save to - Choose whether to save your photos to the phone memory or to the external memory.

Reset settings - Choose **Yes** to reset your phone to its original camera settings.

Using the flash

The flash is set to **Off** as default, but there are other options.

- 1 Select  on the navigation key.
- 2 There are four flash options:

Off - The camera will not flash. This is useful if you want to save battery power.

Auto - Your camera will assess the lighting needed to take a good picture and use the flash as necessary.

Always on - Set the flash to on when you are taking a photo in a dark place.

When Taking - The flash will remain on as you compose your picture and flash again as you take the photo in order to reduce red eye.

3 Select the flash option you'd like to use.

4 When you have made your selection the flash menu will automatically close, ready for you to take your picture.

5 The flash icon in the viewfinder will change according to your new flash mode.

Note: When you exit the camera, the flash setting will revert to the default **Auto** mode.

Changing the image size

You can change the size of the photo to save memory space. The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 Press **Options** and select **Resolution** from the toolbar.
- 2 Select a pixel value from the six numerical options (320X240, 640X480, 1280X960, 1600X1200, 2048X1536, 2560X1920).
- 3 Press **OK** to implement your changes.

Note: The zoom function varies depending on the resolution the camera is set to. The zoom function is only available when the resolution is set to 640 x 480 or below.

01

02

03

04

05


06

07

08

Camera

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply select  on the navigation key. From the standby screen you should select **Menu**, then select **My stuff** and **Images**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the photo you want to view and select **View** to enlarge it.

Setting a photo as Wallpaper or Picture ID

From your image gallery, use the navigation keys to select an image and choose **Options** and **Set as** to use the selected image as **Wallpaper** or **Picture ID** for one of your contacts.

Note: Picture ID can only be added to contacts saved to your phone, not your SIM.

Video camera

Shooting a quick video


- 1 Open the lens cover and hold the camera key down on the right side of the handset. The camera's viewfinder will appear on screen.
- 2 Choose **Video** on the top right corner of the screen. The video camera's viewfinder will appear on screen.
- 3 Point the camera lens towards the subject of the video.
- 4 Press the camera key on the right side of the handset to start recording.
- 5 **REC** will appear in the bottom left corner of the viewfinder and a timer will show the length of your video.
- 6 To pause the video select **Pause** and resume by selecting **Resume**.
- 7 Select **Stop** to stop recording.


Note: You can also access the **Video camera** from the standby screen. Select **Menu** and select **Multimedia**, scroll down and select **Video camera** to open the viewfinder.

After you've shot your video


The name of the video runs along the bottom of the screen and six options will be displayed on the right side of the screen.

Delete - Delete the video you have just recorded and confirm by selecting Yes. The viewfinder will reappear.

 **New video** - Select to shoot another video straight away. Your current video will be saved.

 **Play** - Select to play the video you have just recorded.

 **Send via** - Select to send the video as a **Multimedia message** or **Email**. See page 22 for **Sending a message**.

 **Album** - Select to look at the other video clips in your album. Your current video clip will be saved. See page 35 for **Watching your saved videos**.

OK - Select to record another video straight away. Your current video will be saved.

01

02

03

04

05

06

07

08

Video camera

Getting to know the viewfinder

Note: You can adjust the zoom using the volume key on the left side of the phone.

Using the quick settings

Select **Options** to access the quick settings options. These include various options for recording videos.

Mode - To record a video you want to send in a multimedia message, select **MMS**.

Colour effect - Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Mono** (black and white) or **Negative**.

Brightness - Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper. Use the navigation keys to slide the contrast indicator along the bar, towards - for a lower contrast, hazier image or towards + for a higher contrast, sharper image.

Resolution - If you want to fit more videos onto your phone you can alter the pixel number to make the file size smaller. Choose between four options for your video, 176X144, 320X240, 640X480, 720X480.

Quality - Super fine/ Fine/ Normal.

Save to - Choose whether to save your video clip to the phone memory or to the external memory.

Flash - Turn the flash **On** or **Off**. The flash is set to **Off** as default, saving battery power. Whenever you exit the camera it will return to the default **Off** setting.

White balance - The white balance ensures that any white in your video is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy**, **Fluorescent** or **Night mode**.

Album - View all of your images.

Reset settings - Choose **Yes** to reset your phone to its original video camera settings.

Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the Options menu select **Album**. From the standby screen you should press **Menu**, then select **My stuff** and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the video you want to view and press the centre soft key to watch it.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the volume keys on the right side of the handset.

01

02

03

04

05

06


07

08

MP3 player

MP3 player

Your LG KC550 has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, press  from the standby screen, or select **Menu** and select **Multimedia** then **MP3 player**. From here you have access to:

All songs - Contains all of the songs you have on your phone.

My playlist - Contains any playlists you have created as well as **On the go**, **Recent songs** and **Favourite songs**.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Settings - Adjust your music settings.







Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.

- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

Playing a song

- 1 Press **Menu** and select **Multimedia**, then choose **MP3 player**, or press  from the standby screen.
- 2 Choose **All songs** then select the song you want to play. Select .
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select  to stop the music and return to the MP3 player menu.

TIP! To change the volume while listening to music, use the volume keys on the side of your phone.

Using options while playing music

Select **Options** and choose from:

Minimise - Hide the music player screen so that you can continue using your phone as normal while music is playing.

View playlist - Look at the playlist you are currently listening to.

Add to playlist - Adds the current track to a playlist.

Set as - Set the current track as your **Ringtone** or **Message tone**.

Information - You can view information about the MP3 file you are listening to.

Settings - Change the Shuffle, Repeat, or Equalizer settings.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Press **Options** and select **New playlist**, enter the playlist name and press **Save**.
- 4 The **New playlist** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting .
- 5 Select **Save** to store the playlist.

Playing a playlist

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Select the playlist you would like to play and select **View**, then select **▶**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

If you want to organise your playlists, you can edit them using the **Options** menu.

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to edit and select **View**, then select **Options**. Choose from:

Add - You can add songs to the playlist using this option.

Remove - Remove a song from the playlist. Select **Yes** to confirm.

Multi remove - Delete selected songs from the playlist.

01

02

03

04

05

06

07

08

MP3 player

Remove all - Remove all of the songs from the playlist.

Information - View the playlist information.

Deleting a playlist

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete all** and select **Yes** to confirm.

Note:

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

FM radio

Using the FM radio

Your LG KC550 has an FM radio feature so you can tune into your favourite stations to listen on the move.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 12 channels in your phone.

To auto tune:

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and choose **Auto scan** then select **Yes**.
- 3 Each time a station is found, your KC550 will ask if you want to save it. Select **Yes** if you want to store the channel and **No** if you don't. Any stations you choose to save will automatically be allocated to a channel number in your phone.

To manually tune:

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select a channel number that you want to save a station to and choose **Edit**.
- 3 To enter your station, use the navigation keys to search or enter the frequency using the keypad, then select **Save**.

Note: You can also edit the stations you have saved in a channel number.

TIP! To improve the reception extend the headset cord, which functions as the radio antenna.

Resetting channels

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and select **Reset channels**. Choose **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

Note: You can listen to the radio via a built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.

01

02

03

04

05

06

07



08

Voice recorder

Using the voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Multimedia**, then choose **Voice recorder**.
- 2 Press  to begin recording.
- 3 Select **Pause** to pause the recording.
- 4 Choose **Stop** to end the recording.
- 5 Select  to listen to the recording.

Note: You can listen to all of the voice recordings you have saved by selecting **Album**.

Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

TIP! If you plan to send your recording as a message, before you start recording, select **Options**, select **Recording mode** and choose **MMS**. This will ensure that the recording fits into a message.

Using the muvee studio

The Muvee studio allows you to create an image slide show combined with music.

- 1 Press **Menu** and select **Multimedia**, then choose **Muvee studio**.
- 2 Choose the music track that you would like to use.
- 3 Mark the images that you would like to use in your slide show, and choose **Done**.
- 4 The new muvee will begin to play. To save your slide show press **Save**.

Note: You can use the Options menu to choose where to save your slide show (Phone or External memory), the duration mode (General or MMS) and the play order (Random or Sequential).

My stuff

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

All your multimedia files will be saved in **My stuff**. Select **Menu** then select **My stuff** to open a list of folders.

Images

Images contains a folder of default images and default flash files pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera. Only the **View**, **Set as**, **File info**, **Slide show**, **Sort by** and **List view / Thumbnail view** options are available for default images.

In the **Images** folder, select **Options** to bring up your list of options.

Delete - Delete the selected image.

Set as - Set the selected image as your **Wallpaper** or as a **Picture ID**.

Send via - Send the selected image to a friend via **Multimedia message**, **Bluetooth** or **Email**.

Note: The image may need to be resized before it can be sent by MMS.

File - Rename, make animation or view the information (Name, Size, Date, Time, Resolution, Type and Copyright) of the selected image. If you have an external memory card inserted two additional options will show: **Move to external memory** and **Copy to external memory**.

Print via - Print an image file via **Bluetooth** or **Pictbridge**.

Slide show - See **Creating a slide show** on page 43.

New folder - Create a new folder within the main Images folder.

Mark/Unmark - Select more than one image to delete.

Delete all - Delete all the photos in your Images folder.

01

02

03

04

05

06

07

08

My stuff

Sort by - Arrange your images by **Date**, **Type** or **Name**.

List view / Thumbnail view - Change the way you view your photos.

Sending a photo

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**.
- 5 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Organising your images

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** then select **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

Deleting an image

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select an image and press **Options**.
- 4 Select **Delete**.

Deleting multiple images

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** and select **Mark/Unmark** and **Delete**.
- 4 A box will appear next to each image. Select each image and select to mark it. To unmark an image, select again so that the tick disappears from the box. Or, you can select **Options** then choose **Mark all** or **Unmark all**.
- 5 Once you have marked all of the appropriate boxes, select **Delete** and confirm you want to delete all of the marked images.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select the photo you would like to begin the slide show and select **Options**.
- 4 Choose **Slide show** and it will begin.
- 5 Press **Pause** to pause the slide show and **Quit** to end the slide show and return to the **Images** folder.

Selecting **Options** during the slide show presents further options:

View - Choose between **Full image** and **Full screen**. Select **Landscape** to change the orientation of the image.

Repeat on / off - Decide whether you want the slide show on repeat or not.

Sounds

The **Sounds** folder contains the **Default sounds**, your voice recordings and sound files downloaded by you. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Sounds**.
- 3 Select **Default sounds** or choose from the list of voice recording files.
- 4 Select a sound and press ► to listen to it.
- 5 Select **Options**, select **Set as** and choose from **Ringtone**, **Ringtone ID** and **Message tone**.

Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select a video and press ►.

01

02

03

04

05

06

07

08

My stuff

Using options while video is paused

By selecting **Options**, the video you are playing will be in pause mode and you can choose from:

Delete - Delete the video.

Send via - Send the video to a friend via **Multimedia message, Bluetooth** or **Email**.

Information - View the Name, Size, Date, Time, Type and Copyright details of the selected file.

Sending a video clip

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select the video clip you want and press **Options**.
- 4 Press **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 5 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Note: The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all.

Video options menu

In the **Videos** folder, press **Options** to bring up the following list of options.

Delete - Delete the selected video.

Send via - Send the selected video to a friend via **Multimedia message, Email** or **Bluetooth**.

File - Rename the video or view the information (Name, Size, Date, Time, Type and Copyright). If you have an external memory card inserted two additional options will show:

Move to external memory and **Copy to external memory**.

New folder - Create a new folder within the main Videos folder.

Mark/Unmark - Select more than one video clip before selecting **Delete**.

Delete all - Delete all the clips in your Videos folder.

Sort by - Arrange your videos by **Date, Type** or **Name**.

Auto next play - Allows to set the play mode: **Off**, **Repeat once** and **Repeat all**.

- **Off**: Plays the selected file.
- **Repeat once**: Plays all files in a list once.
- **Repeat all**: Continues to play all files in a list repeatedly.

List view / Thumbnail view - Change the way you view your videos.

Documents

From the **Documents** menu, you can view Excel, PowerPoint, Word, Text and PDF files.

Viewing a document

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Documents**.
- 3 Select a document and press **View**.

Others

From the **Others** menu, you can view the files which are not saved in the Images, Sounds, Videos or Documents folders.

You may find that when you transfer files from your computer to your phone, they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To move a file from **Others** to **Documents**:

- 1 Press **Menu**, then select **My stuff** followed by **Others**.
- 2 Select a file and select **Options**.
- 3 Press **Move**, then select **Move** again.

External memory

If you've inserted a memory card it will be displayed as a folder within **My stuff**. Your external memory folder will be divided into five further folders: **Images**, **Sounds**, **Videos**, **Documents** and **Others**. Each folder will contain all the files of that type which are saved to your memory card rather than your handset.

Using your phone as a mass storage device

Your KC550 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. If you've inserted a memory card, when connecting as **Mass storage**, the phone will be displayed as two drives on your computer: the handset memory and external memory.

01

02

03

04

05

06

07

08

My stuff

- 1 Press **Menu**, select **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and select **OK**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the KC550. Plug the larger end into the USB port of your computer.
- 5 A removable disk folder will open automatically on your computer, two if you have a memory card inserted, showing all the folders on your phone or memory card.
- 6 Drag and drop your images, videos, music or documents into the correct folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.
- 8 When you want to then access a file, for example an image, press **Menu**, then select **My stuff** followed by **External memory** then **Images**. All the images you transfer will be contained in this file.

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on its type. So for example, photographs will be saved in the **Images** folder and music in the **Sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

Note: Files sent using Bluetooth will be saved to the phone memory.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device** on page 58.

To switch Bluetooth on:

- 1 Press **Menu** and select **Connectivity**, then choose **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.

- 4 Your KC550 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to then pair the selected device and select **Send**.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** on page 57 for more information.
- 2 A message will prompt you to accept the file from the sender. select **Yes** to receive the file.

TIP! Keep an eye on the progress bar to make sure your file is sent.

Note The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

01

02

03

04

05

06

07

08

Games and Apps

Games and Apps

Your KC550 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Playing a game

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Games**.
- 3 Choose the game you want to play and select **Play**.

Viewing applications

You can manage the Java applications installed in your phone by using the **Applications** menu. You can also delete downloaded applications.

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Applications**.
- 3 View and manage any applications you have.

Changing the network profile

To download a game, you can set the value to connect to the network using **Network profile**.

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Network profile**.
- 3 You can add and edit a new network profile.

M-Toy

You can enjoy six default games including: **Dart, Homerun Derby, Magic Ball, Hammer, Maze, Fishing**.

About - View the information for a game.

Setting - Set the sound and vibration when activating a game.

Reset data - Reset all settings.

Exit - End a game.

Organiser

Adding an event to your calendar

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **New** and scroll down to enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 5 Scroll down and enter a **Subject** for the event. Use the keypad to type letters and numbers.
- 6 Scroll down once more to select whether the event is occurring **Once** or repeated at **Daily**, **Weekly**, **Monthly** or **Yearly** intervals. If the event is repeated, you can

also scroll down to enter an **Expiration date** for when the events will stop completely.

- 7 Select **Save** and your event will be saved in the calendar. A square cursor will mark the days that any events have been saved to.

Editing a calendar event

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Choose **Options** and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and select **View**. Alternatively select the day of the event in the calendar and select **View**.
- 3 Select **Edit** and scroll to the event detail you want to change. Make your modifications and select **Save** to store the edited event.

Note: You can delete an event from your calendar by selecting to view the event and then pressing **Options** and **Delete**.

01

02

03

04

05

06

07

08

Organiser

Sharing a calendar event

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Select the event you would like to share and choose **Options**.
- 3 Choose **Send via** and select from **Text message**, **Multimedia message**, **Bluetooth** or **Email**.

Adding a memo

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Memo**.
- 2 Select **New** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on screen the next time you open the memo application.

TIP! You can edit an existing memo. Select the one you want to edit, press **Options** and select **Edit**.

Tools

Setting your alarm

- 1 From the standby screen press **Menu**, and select **Tools**, then **Alarm clock**.
- 2 Select **New**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun**, or **Choose weekday**.
- 5 Scroll down and choose whether you would like the alarm to **Always sound**, **Always vibrate** or **Follow profile**.
- 6 Scroll down to choose the alarm tone. Choose **Sounds** to select a new sound.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.
- 8 Select **Save**.

Note: You can set up to 5 alarms.

Using your calculator

- 1 From the standby screen press **Menu**, and select **Tools**, then **Calculator**.
- 2 Press the numeric keys to input numbers.

- 3 For simple calculations, select the function you require (+, -, ×, ÷), followed by =.
- 4 For more complex calculations, select **Function** to select a command.
- 5 Select **Clear** to clear the screen and start a new calculation.

Using the stopwatch

- 1 From the standby screen press **Menu**, and select **Tools**, then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. The duration of an individual lap time (up to 20 times) can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

01

02

03

04

05

06

07

08

Tools

Converting a unit

- 1 From the standby screen press **Menu**, and select **Tools**, then **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Scroll up to choose from the unit of measurement you want to enter. Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

Adding a city to your world clock

- 1 From the standby screen press **Menu**, and select **Tools**, then **World clock**.
- 2 Scroll up, down, left or right to navigate the globe and choose a continent.
- 3 Select **Zoom in** to zoom into an area and choose from the cities in that area.
- 4 Press **OK**.

SIM services

This feature depends on SIM and the network services.

In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Browser

With a browser at the tip of your fingers, you can get up to date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 Press **Menu** and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately, select **Enter address** and type in your desired URL, followed by **Connect**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Google

To access Google services, press **Menu** and select **Browser** then **Google**.

TIP! You may be unable to access Google in some countries. This is dependent on Network Services.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Press **Menu** and select **Browser**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Options** and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Press **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select **Connect**. You will be connected to your bookmarked page.

01

02

03

04

05

06

07

08

Browser

Saving a page

- 1 Access your required web page as described on page 53.
- 2 Choose **Options** and scroll to **Save**, select **This page**.
- 3 Select **OK**.

Accessing a saved page

- 1 Press **Menu** and select **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and press **Open**.

TIP! This menu will also allow you to delete saved pages.

Viewing your browser history

- 1 Press **Menu** and select **Browser**.
- 2 Select **History** and select **OK**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and select **Connect**.

Changing the web browser settings


- 1 Press **Menu** and select **Browser**.
- 2 Select **Settings**.
- 3 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Network profiles**, **Rendering mode**, **Cache**, **Cookies**, **Security certificates**, **Show image**, **JavaScript** and **Storage location**.
- 4 Once you have changed your settings, select **OK**.

Settings

Within this folder you can adapt your settings to make your KC550 personal to you.

Note: For information on call settings see page 18.

Changing your profiles

You can quickly change your profile from the standby screen. Simply press  then the profile you would like to activate. Choose from **General**, **Silent**, **Vibrate only**, and **Outdoor**.

Personalising your profiles

You can personalise each profile setting.

- 1 Press **Menu** and select **Profiles**.
- 2 Choose the profile you want and select **Personalise**.
- 3 For the **Silent** and **Vibrate only** profiles, you can adapt the activate. For the other profiles, you can change all of the sounds and alert options available in the list. (Please refer to your handset for details.)

Changing your date & time

You can set functions relating to the date and time.

- 1 Press **Menu** and select **Settings**.
- 2 Select **Date & Time** and choose from the list below:

Set date - You can enter the current date.

Date format - You can set the date format. (YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY)

Set time - You can enter the current time.

Time format - You can set the time format to either 24 hours or 12 hours.

Auto update - Select **On**, the phone will automatically update the date and time.

Changing the language

Go to **Settings** and **Languages** to change the language for any text in your phone. Any change will also alter the language input mode.

Changing your display settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Display** and choose from:

Wallpaper - Choose a wallpaper to appear on your screen display.

Clocks - Choose to have the time and date visible on your standby screen. Choose from No date & time or Normal.

Backlight timer - Choose how long the backlight remains on for.

01

02

03

04

05

06

07

08

Settings

TIP! The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Brightness - Use the navigation keys to adjust the brightness. Choose from 40%, 60%, 80% or 100%, then select OK to save your change.

Home screen shortcut - Select **On** to display the shortcuts of 4 menus as pictures on the middle of the standby screen.

Font size - Change the font size of the following : **Menu, Dialling** and **Messaging**.

Theme - Quickly change the whole look of your screen.

Menu style - Change the menu view from **Grid view** to **List view**.

Main font style - Adjust the font type.

Dialling font style - Adjust the font style for when you are dialling a phone number.

Standby text - Choose to add a message to your standby screen.

Network name - Choose to show or hide the network name.

Changing your security settings

Change your security settings to keep your KC550 and the important information it holds protected.

- 1 Press **Menu** and select **Settings**.
- 2 Select **Security** and choose from the list below:

Anti Theft Mobile Tracker - Set ATMT On/Off and Numbers for ATMT.

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Phone lock - Choose a security code to lock your phone **When power on, When SIM changed** or **Immediately**.

Change codes - Change your **Security code, PIN1 code** or **PIN2 code & ATMT code**.

Using flight mode

Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the internet, send messages or use Bluetooth when **Flight mode** is switched **On**.

Resetting your phone

Use **Reset** to reset all the settings to their factory definitions. You need the security code to activate this function.

Viewing memory status

Your KC550 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Menu** and select **Settings**. Choose **Memory status** and you will then see the current status of the memories (Common, Reserved, SIM card and External memory) in your KC550.

TIP! See page 11 for information on **inserting a memory card**.

Changing your Bluetooth settings

- 1 Press **Menu** and select **Connectivity**, then choose **Bluetooth**.
- 2 Choose **Bluetooth settings**. Make your changes to:

My visibility - Choose whether to **Show** or **Hide** your device to others.

My name - Enter a name for your KC550.

My address - View your Bluetooth address.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Press **Menu** and select **Connectivity**. Your options are:

Bluetooth - Set up your KC550 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

Network - Your KC550 connects automatically to your preferred network. To change these settings use this menu. You can also add new access points using this menu.

01

02

03

04

05

06

07

08

Settings

USB connection - Choose **Data service** and synchronise your KC550 using the LG PC Suite software to copy files from your phone.

If you have a memory card inserted, select **Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the KC550 removable device folder. See pages 45~47 for further details.

Pairing with another Bluetooth device

By pairing your KC550 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**.
You can change your visibility in the **Bluetooth settings** menu, by selecting **My visibility**, then **Show**.
- 2 Select **Device list** from the Bluetooth menu and choose **New**.
- 3 Your KC550 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Pair** and enter a passcode then choose **OK**.

- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your KC550 will then automatically connect to your Bluetooth headset and switch to headset profile.

Accessories

These accessories were supplied with your KC550.

Charger



Data cable and CD

Connect and synchronise your KC550 and PC.



Battery



User Guide

Learn more about your KC550.

Stereo headset



Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

01

02

03

04

05

06

07

08

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800 and PCS1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KC550

System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KC550

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 60950-1 : 2001
EN 50360/EN 60361 : 2001
EN 301 511 V9.0.2
EN 300 328 V 1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. March. 2008


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KC550 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.348 W/kg (10g) and when worn on the body is 0.665 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

- Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
 - Keep away from electrical appliances such as TVs, radios, and personal computers.

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient Use

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the airbag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



Bahasa Melayu

■ KC550 ■ Panduan Pengguna

Tahniah kerana membeli telefon KC550 LG yang canggih dan kompak, yang direka bentuk dengan teknologi komunikasi digital mudah alih yang terkini.

Nota

Sesetengah kandungan dalam manual ini mungkin berbeza daripada telefon anda bergantung pada perisian telefon atau pembekal khidmat anda.

Kandungan

01 PERSEDIAAN			
Mengenal telefon anda.....	5	Menambah kenalan ke kumpulan	17
Paparan terbuka	6	Menyalin kenalan anda ke SIM	18
Memasang SIM dan bateri	7	Memadam semua kenalan anda.....	18
Kad memori.....	10	Memapar maklumat.....	18
Memasang kad memori	10	Mesej	19
Mengeluarkan kad memori.....	10	Mesej	19
Memformat kad memori.....	10	Menghantar mesej.....	19
Peta menu	11	Memasukkan teks	19
		Menyediakan e-mel anda.....	21
02 SKRIN SIAP SEDIA ANDA		Menghantar e-mel menggunakan	
Skrin siap sedia anda.....	12	akaun baru anda	22
Kunci pantas.....	12	Folder mesej	22
Menu utama.....	12	Menguruskan mesej anda	23
Bar status	13	Menukar tetapan mesej teks anda	24
		Menukar tetapan mesej	
03 ASAS		multimedia anda.....	24
Panggilan.....	14	Menukar tetapan e-mel anda	25
Membuat panggilan.....	14	Menukar tetapan mesej yang lain	25
Membuat panggilan dari kenalan anda....	14		
Menjawab dan menolak panggilan.....	14	04 JADI KREATIF	
Melaraskan kelantangan panggilan.....	14	Kamera.....	26
Dailan cepat.....	15	Menangkap foto pantas	26
Melihat log panggilan anda	15	Selepas anda mengambil foto	26
Menukar tetapan panggilan.....	16	Mendapat maklumat lanjut mengenai	
Kenalan	17	pencari pandangan.....	27
Mencari kenalan.....	17	Menggunakan tetapan pantas	27
Menambah kenalan baru	17	Menggunakan Flash	28
		Menukar saiz imej	29

7	Melihat foto yang disimpan	29	Bahan saya	37
8	Menetapkan foto sebagai Kertas hias		Imej.....	37
8	dinding atau ID gambar.....	29	Menghantar foto.....	37
8	Kamera Video	30	Membuat pertunjukan slaid.....	37
9	Menangkap video pantas	30	Bunyi	38
9	Setelah anda menangkap video	30	Menggunakan bunyi	38
9	Mendapat maklumat lanjut mengenai		Video	38
9	pencari pandangan.....	31	Menonton video.....	38
1	Menggunakan tetapan pantas	31	Menghantar klip video.....	39
2	Melihat video anda yang disimpan	32	Dokumen	39
2	Melaraskan kelantangan apabila		Lain-lain	39
2	melihat video.....	32	Memori luar	39
3	Pemain MP3	33	Gunakan telefon anda sebagai peranti	
4	Pemain MP3	33	Penyimpanan massa.....	39
4	Memindahkan muzik pada telefon anda ..	33	Memindahkan fail kepada telefon anda ...	40
4	Memainkan lagu.....	33	Menghantar dan menerima fail anda	
5	Menggunakan pilihan sambil		menggunakan Bluetooth	41
5	memainkan muzik	33	Permainan dan Aplikasi	42
5	Membuat senarai main	34	Permainan dan Aplikasi.....	42
6	Radio FM	35	Memainkan permainan	42
6	Menggunakan Radio FM	35	Melihat aplikasi	42
6	Mencari stesen.....	35	Menukar profil rangkaian	42
7	Perakam suara	36		
7	Menggunakan perakam suara	36		
7	Merakam memo suara.....	36		
9	Studio Muvee	36		

Kandungan

05 JADI TERSUSUN

Pengurus/Alatan	43
Menambah peristiwa pada kalender anda	43
Menambah memo	43
Menetapkan penggera anda	44
Menggunakan kalkulator anda	44
Gunakan jam randik	44
Menukar unit	45
Menambah bandar pada jam dunia anda	45
Perkhidmatan SIM	45

06 PELAYAR

Pelayar	46
Mengakses web	46
Menambah dan mengakses penanda buku anda	46
Menyimpan halaman	46
Mengakses halaman disimpan	46
Melihat sejarah pelayar anda	47
Menukar tetapan pelayar web	47

07 TETAPAN

Tetapan	48
Menukar profil anda	48
Memperibadikan profil anda	48
Menukar tarikh dan masa anda	48
Menukar bahasa	48
Menukar tetapan paparan anda	49
Tukarkan tetapan keselamatan anda	50
Menggunakan mod penerbangan	50
Menetapkan semula telefon anda	50
Melihat status memori	50
Menukar tetapan Bluetooth anda	51
Menukar tetapan kesambungan anda	51
Pasangankan dengan peranti Bluetooth lain	52
Menggunakan alat dengar Bluetooth	52

08 AKSESORI

Aksesori	53
Perkhidmatan rangkaian	54
Data teknikal	54
Umum	54
Suhu Ambien	54


Garis panduan untuk penggunaan selamat dan efisien	56
---	----

Mengenalinya telepon anda

Skrin utama

Kekunci kosongkan 


Memadam aksara dengan setiap tekanan. Guna kekunci ini untuk kembali ke skrin sebelumnya.

Kekunci panggil 

Dail nombor telefon dan jawab panggilan masuk.



Pengecas, Kabel, Penyambung alat bebas tangan

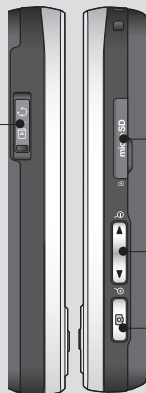

Slot kad memori

Kekunci Volum

Kekunci main Kamera

Kekunci Tamat/Kuasa 

Gelangsarkan kekunci Tamat/Kuasa ke arah bawah telefon. Tamatkan atau tolak panggilan. Hidupkan/Matikan telefon. Kembali ke skrin siap sedia apabila anda menggunakan menu.

01

02

03

04


05

06

07

08

Paparan terbuka

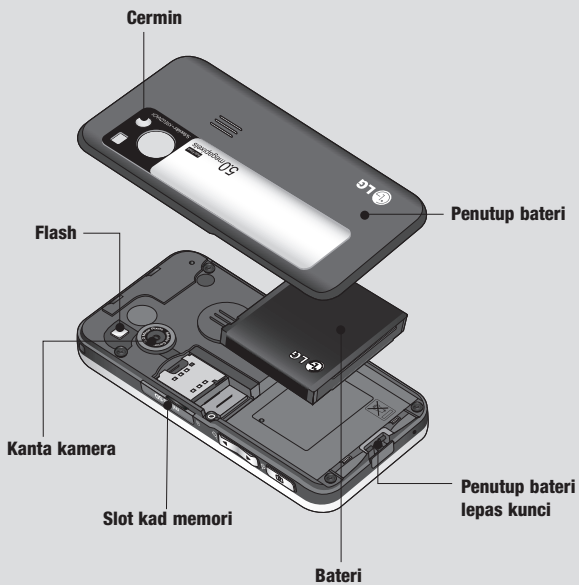

Memasang SIM dan bateri


1 Tanggalkan penutup bateri

Tekan penutup kunci pelepas bateri.
Lungsurkan penutup bateri ke bahagian bawah dan ke arah luar dari telefon.



2 Keluarkan bateri

Umpil hujung bawah bateri dan keluarkan ia dengan cermat daripada ruang bateri.

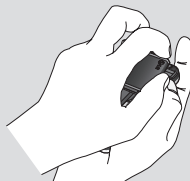

AMARAN: Jangan keluarkan bateri semasa telefon dihidupkan, ia mungkin akan merosakkan telefon.

3 Pasang kad SIM

Tarik pemegang kad SIM terbuka.
Gelangskan kad SIM ke dalam pemegang kad SIM dan gelangskan pemegang kad ke belakang. Pastikan kawasan sesentuh emas pada kad menghala ke bawah. Untuk membuang kad SIM, tarik ia dengan lembut dalam arah bertentangan.

AMARAN: Jangan masukkan kad SIM apabila gelangsar terbuka, kerana ia boleh merosakkan telefon anda dan kad SIM.

01

02

03

04


05

06

07


08

Memasang SIM dan baterai

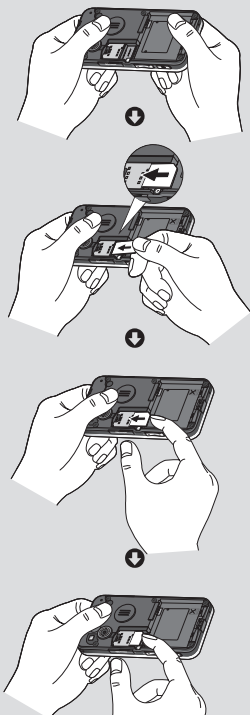


4 Memasang baterai

Masukkan bagian atas baterai terlebih dahulu ke pinggir atas petak baterai. Pastikan sesentuh baterai sejajar dengan terminal pada telepon. Tekan bagian bawah baterai ke bawah sehingga ia klip pada tempatnya.

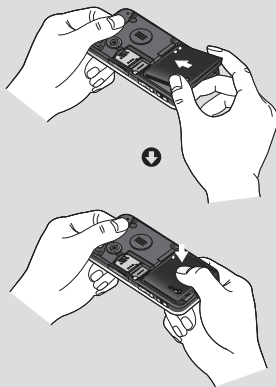

5 Letak semula penutup bateri


Lungsurkan penutup bateri ke arah atas telefon sehingga ia klik pada tempatnya.

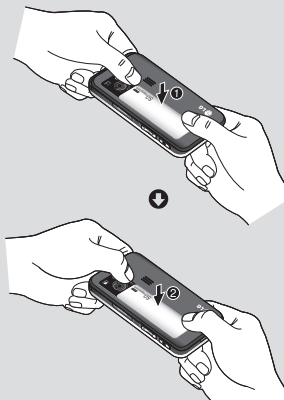

6 Mengecas telefon anda

Tarik keluar penutup soket pengecas pada sisi KC550 anda. Masukkan pengecas dan palamkan ia ke soket elektrik utama. KC550 anda perlu dicas sehingga mesej memberitahu Telah Dicas Sepenuh muncul pada skrin.

AMARAN: Jangan caj telefon semasa ia berada pada perabot lembut. Telefon harus dicas di kawasan pengalihan udara yang baik.

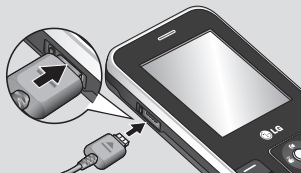

01

02

03

04

05

06

07

08


Kad memori

Memasang kad memori

Anda boleh besarkan ruang memori yang tersedia pada telefon anda dengan menggunakan kad memori. KC550 akan menyokong kad memori sehingga 2 GB.


PETUA! Kad memori adalah aksesori pilihan.

Buka slaid dan masukkan kad memori. Lungsurkan kad memori ke slot pada bahagian atas, hingga ia klik pada tempatnya. Pastikan kawasan sesentuh emas menghala ke atas.

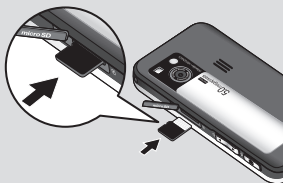

Mengeluarkan kad memori

Buka slaid dan keluarkan kad memori berhati-hati dengan tolaknya dengan perlahan-lahan seperti yang ditunjukkan dalam diagram berikut:

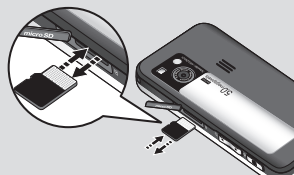

Memformat kad memori

Jika kad memori anda belum diformat, anda perlu formatkannya sebelum anda boleh mula menggunakannya.

- 1 Daripada **Menu** skrin siap sedia sentuh dan pilih **Tetapan**.
- 2 Pilih **Status memori** dan pilih **Memori luaran**.
- 3 Sentuh **Format** dan masukkan kata laluan tersebut, yang di setkan kepada 0000 sebagai lalai. Kad anda akan diformatkan dan sedia digunakan.
- 4 Untuk paparkan folder terformat yang baru pada KC550 anda sentuh **Menu** dan pilih **Bahan saya**. Pilih **Memori Luaran**.

⚠ AMARAN: Apabila anda memformat kad memori anda, semua kandungan akan di padam. Jika anda tidak mahu kehilangan data pada kad memori anda, buat sandaran terlebih dahulu.

Peta menu



Permainan & Aplikasi

- 1 M-toy
- 2 Permainan
- 3 Aplikasi
- 4 Profil Rangkaian



Rekod Pgljn

- 1 Semua panggilan
- 2 Pgljn tak dijawab
- 3 Panggilan didail
- 4 Panggilan diterima
- 5 Tempoh panggilan
- 6 Kos panggilan
- 7 Maklumat data



Pengurus

- 1 Kalendar
- 2 Memo



Multimedia

- 1 Pemain MP3
- 2 Kamera
- 3 Kamera Video
- 4 Radio FM
- 5 Perakam suara
- 6 Studio Muvee



Mesej

- 1 Mesej baru
- 2 Peti masuk
- 3 Peti e-mel
- 4 Draf
- 5 Peti keluar
- 6 Dihantar
- 7 Dengar mel suara
- 8 Mesej maklumat
- 9 Templat
- 0 Tetapan



Bahan saya

- 1 Imej
- 2 Bunyi
- 3 Video
- 4 Dokumen
- 5 Lain-lain
- 6 Memori Luaran



Profil

- 1 Umum
- 2 Senyap
- 3 Getar sahaja
- 4 Kuat
- 5 Alat Dengar



Kenalan

- 1 Cari
- 2 Kenalan baru
- 3 Dail cepat
- 4 Kumpulan
- 5 Salin semua
- 6 Padam semua
- 7 Tetapan
- 8 Maklumat



Alatan

- 1 Jam penggera
- 2 Kalkulator
- 3 Jam randik
- 4 Penukar unfit
- 5 Jam dunia
- 6 Perkhidmatan SIM



Pelayar

- 1 Rumah
- 2 Penanda Buku
- 3 Masukkan Alamat
- 4 Sejarah
- 5 Laman disimpan
- 6 Tetapan
- 7 Maklumat



Kesambungan

- 1 Bluetooth
- 2 Rangkaian
- 3 Sambungan USB
- 4 TV keluar



Tetapan

- 1 Tarikh & Masa
- 2 Bahasa
- 3 Paparan
- 4 Panggil
- 5 Keselamatan
- 6 Mod penerbangan
- 7 Reset
- 8 Status memori

01

02

03

04

05

06





07

08

Skrin siap sedia anda

Kekunci pantas

Kekunci pantas menyediakan akses mudah, seperti dibawah.

-  Untuk membuka editor mesej anda.
-  Untuk membuka pemain MP3.
-  Pilih untuk memilih profil bunyi untuk telefon anda.
-  Pilih untuk membuka menu kegemaran.

Menu utama

Menu utama menyediakan dua belas menu pilihan. Sentuh untuk membuka menu utama:

- 1 Pilih **Menu**.
- 2 Menu utama akan muncul pada skrin.
- 3 Apabila pilihan yang anda perlukan dibulatkan, pilih **OK** untuk buka.

Nasihat kepada pelanggan

Supaya dapat membolehkan sensitiviti antena LG mencadangkan anda supaya memegang telefon bimbit seperti yang digambarkan dalam rajah dibawah.




















Jangan lindungi kawasan antena dengan tangan anda semasa panggilan dan menggunakan sambungan bluetooth. Ia mungkin mengganggu dan merendahkan kualiti bunyi.

Bar status

Bar status dengan menggunakan pelbagai ikon menunjukkan perkara seperti kekuatan isyarat, mesej baru dan hayat bateri dan di samping memberitahu sama ada Bluetooth telah aktif.

Di bawah adalah jadual yang menjelaskan makna ikon yang anda akan lihat dalam bar status.

Ikon	Gambaran
	Kekuatan isyarat rangkaian (bilangan bar mungkin berbeza)
	Tiasa isyarat rangkaian
	GPRS tersedia
	EDGE tersedia
	Mod penerbangan diaktifkan
	Panggilan dialihkan
	Perkhidmatan perayauan
	Bluetooth diaktifkan
	Perkhidmatan WAP disambungkan
	Penggera ditetapkan

Ikon	Gambaran
	Jadual
	Mesej baru
	Mesej suara baru
	Profil umum digunakan
	Profil senyap digunakan
	Profil getaran digunakan
	Profil kuat digunakan
	Profil alat dengar digunakan
	Baki hayat bateri
	Bateri kosong

01

02

03

04

05




06

07

08


Panggilan

Membuat panggilan

- 1 Masukkan nombor menggunakan pad kekunci. Untuk memadan digit tekan .
- 2 Pilih  untuk mulakan panggilan.
- 3 Untuk menamatkan panggilan, slaid  ke sebelah kanan telefon, pilih **Ya** jika anda pasti.


PETUA! Untuk masukkan + untuk membuat panggilan antarabangsa, tekan dan tahan **0**.

Membuat panggilan dari kenalan anda

- 1 Pilih Kenalan di Skrin siap sedia untuk membuka menu Kenalan.
- 2 Dengan menggunakan pad kekunci, masukkan huruf pertama kenalan yang anda hendak panggil. Contohnya, bagi 'Office', tekan **6** tiga kali.
- 3 Pilih **Panggil** atau sentuh  untuk memulakan panggilan.

Menjawab dan menolak panggilan

Apabila telefon anda berdering, sentuh **Terima** atau sentuh  untuk menjawab panggilan.

Gelangsarkan  ke arah bawah telefon atau sentuh **Tolak** untuk menolak panggilan masuk.

PETUA! Anda boleh mengubah tetapan pada telefon anda untuk menjawab panggilan dengan pelbagai cara yang berlainan.

Menu **Sentuh**, pilih **Tetapan** dan pilih **Panggil**. Pilih **Mod jawab** dan pilih dari **Luncur buka**, **Mana-mana kekunci** atau **Hanya kekunci terima**.


Melaraskan kelantangan panggilan

Untuk selaraskan kelantangan semasa panggilan, tekan kekunci kelantangan pada sisi kanan telefon anda.

Dailan cepat

Anda boleh berikan nombor dailan pantas pada kenalan anda dengan kerap.

- 1 Pilih **Kenalan**, kemudian pilih **Dail cepat**.
- 2 Mel suara anda ditetapkan ke dailan pantas 1 dan anda tidak boleh menukarnya. Pilih sebarang nombor sama ada dengan menggunakan anak panah pad sentuh dan tekan **Berikan** atau dengan menekan nombor kekunci teguh.
- 3 Alamat anda akan dibuka kemudian. Pilih kenalan yang anda hendak berikan ke nombor tersebut menggunakan anak panah pad sentuh kemudian pilih **OK**.

Untuk memanggil nombor dailan cepat, tekan dan tahan nombor yang diberikan sehingga kenalan muncul pada skrin. Panggilan akan menjemput secara automatik; tidak perlu untuk menekan .

Melihat log panggilan anda

Pilih **Menu**, pilih **Rekod Pgnl**. Pilih untuk melihat:

Semua panggilan - Lihat senarai lengkap bagi semua panggilan anda yang didail, diterima dan tidak dijawab.

Pgnl tidak dijawab - Memaparkan senarai sebarang panggilan yang anda tidak jawab.

Panggilan didail - Lihat senarai semua nombor yang telah anda dail.

Panggilan diterima - Lihat senarai semua nombor yang telah memanggil anda.

Tempoh panggilan - Memaparkan butiran berapa lama anda telah menghabiskan masa untuk panggilan; menerima panggilan dan mendail nombor.

Kos panggilan - Memaparkan bayaran yang dikenakan terhadap Panggilan terakhir atau Semua panggilan anda. Perkhidmatan ini bergantung kepada rangkaian, sesetengah operator tidak boleh menyokong perkhidmatan ini.

Maklumat data - Memaparkan jumlah data yang anda terima dan hantar dalam kilobait.

PETUA! Dari sebarang log panggilan pilih **Opsyen** dan pilih **Padam** untuk memadam item yang dipilih atau semua item yang dirakam.

01

02

03

04

05

06

07

08

Panggilan

Menukar tetapan panggilan

- 1 Pilih **Menu**, pilih **Tetapan** dan pilih **Panggil**.
- 2 Dari sini anda boleh mengubah tetapan untuk:

Alihan panggilan – Pilih sama ada untuk alih panggilan anda. Bayaran dikenakan untuk mengalihkan panggilan. Sila hubungi pembekal rangkaian anda untuk maklumat lanjut.

PETUA! Untuk matikan semua sekatan panggilan, pilih **Batal semua** daripada menu **Sekatan panggilan**.

Sekatan panggilan - Pilih apabila anda hendak panggilan disekat. Pilih **Aktifkan** dan masukkan kata laluan sekatan panggilan. Sila semak dengan operator rangkaian anda untuk perkhidmatan ini.

Nombor dailan tetap- Pilih senarai nombor yang boleh dipanggil dari telefon anda.

PETUA! Pilih **Nombor dail tetap** daripada menu **Panggilan** untuk hidupan dan menyusun senarai nombor yang boleh dipanggil daripada telefon anda. Anda memerlukan kod PIN2 daripada operator anda. Hanya nombor yang termasuk dalam senarai dail tetap boleh dipanggil daripada telefon anda.

Mod jawab – Pilih sama ada untuk menjawab telefon menggunakan kekunci terima, sebarang kekunci atau dengan meluncurkan membuka alat dengar anda.

Hantar nombor saya – Pilih sama ada nombor anda akan dipaparkan apabila anda memanggil seseorang.

Panggilan menunggu – Diberi amaran apabila anda mempunyai panggilan menunggu.

Penjaga minit - Pilih **Hidupkan** untuk mendengar nada setiap minit semasa panggilan.

Dail semua auto - Pilih **Hidupkan** atau **Matikan**.

Hantar nada DTMF - Pilih **Hidupkan** atau **Matikan**.

Kenalan

Mencari kenalan

- 1 Pilih **Kenalan** dan pilih **Cari**, pilih **Kenalan** dari skrin **Menu**.
- 2 Dengan menggunakan pad kekunci, masukkan huruf pertama kenalan yang anda hendak panggil. Sebagai contoh, untuk 'Office', tekan **6** tiga kali.
- 3 Untuk menatal melalui kenalan dan nombor mereka yang berbeza gunakan anak panah pad sentuh.


Menambah kenalan baru

- 1 Pilih **Kenalan** dan pilih **Kenalan baru**.
- 2 Pilih sama ada untuk menyimpan kenalan baru anda pada **Telefon** atau kad **SIM** anda.
- 3 Masukkan semua maklumat yang anda ada di dalam medan yang disediakan dan pilih **Simpan**.

Atau menggunakan cara yang lebih cepat...


- 1 Masukkan nombor yang anda hendak simpan pada skrin siap sedia dan pilih **Pilihan**.
- 2 Pilih **Simpan** atau **Tambah pada kenalan sedia ada**.

- 3 Masukkan maklumat yang relevan seperti di atas dan sentuh **Simpan**.

Nota: Untuk menyimpan alamat e-mel kenalan, tekan  untuk memasukkan simbol dan tatal dengan anak panah pad sentuh sehingga anda nampak @.

Menambah kenalan ke kumpulan

Anda boleh menyimpan kenalan anda ke dalam kumpulan, sebagai contoh, mengasingkan rakan sekerja dan keluarga. Terdapat beberapa kumpulan termasuk **Keluarga**, **Rakan**, **Rakan sekerja**, **VIP**, **Kumpulan1** dan **Kumpulan2** yang telah tersedia pada telefon anda.

- 1 Pilih **Kenalan** dan pilih **Kumpulan**.
- 2 Tatal kepada kumpulan yang anda hendak menambah kenalan dan sentuh **Paparkan** kemudian pilih **Tambah**.
- 3 Kenalan anda akan dibuka. Tatal kepada sebarang kenalan yang anda hendak tambah kepada kumpulan dan sentuh , kemudian pilih **Selesai**.
- 4 Pilih **Ya** jika anda pasti.

PETUA! Anda boleh berikan nada dering atau ikon kepada kumpulan. Pilih kumpulan yang ingin anda berikan nada dering atau ikon, pilih **Pilihan** dan pilih item yang anda mahu.

01

02

03

04

05

06

07

08

Kenalan

Menyalin kenalan anda ke SIM

Anda juga boleh memilih untuk menyalin kenalan dari SIM ke telefon bimbit anda atau dari telefon bimbit ke SIM anda.

- 1 Pilih **Kenalan** dan pilih **Salin Semua**.
- 2 Pilih untuk menyalin kenalan dari **SIM ke Telefon** atau **Telefon ke SIM**.
- 3 Pilih sama ada untuk menyimpan rakaman asal atau memadamnya.
- 4 Pilih **Ya** jika anda pasti.

Memadam semua kenalan anda

- 1 Pilih **Kenalan** dan pilih **Padam semua**.
- 2 Pilih untuk padam kenalan dari **SIM** atau **Telefon**.
- 3 Pilih **Ya** jika anda pasti.
- 4 Masukkan kata laluan tersebut, yang di setkan kepada 0000 sebagai lalai. Pilih **OK**.

Memapar maklumat

Pilih **Kenalan** dan pilih **Maklumat**. Dari sini anda boleh melihat **Nombor dail perkhidmatan, Nombor sendiri** dan **Kad niaga**.

PETUA! Jika anda belum membuat kad niaga, skrin **Kad Niaga** akan memberi anda pilihan untuk mencipta. Pilih **Baru** dan masukkan butiran anda yang anda mahukan untuk sebarang kenalan. Pilih **Simpan**.

Mesej

Mesej

KC550 anda termasuk fungsi berkaitan dengan SMS (Perkhidmatan Mesej Pendek), MMS (Perkhidmatan Mesej Multimedia) dan e-mel, juga mesej perkhidmatan rangkaian. Hanya sentuh **Menu** dan pilih **Mesej**.

Menghantar mesej

- 1 Tekan **Menu**, pilih **Mesej** dan pilih **Mesej baru**.
- 2 Pilih **Mesej** untuk menghantar SMS atau MMS. (Jika anda hendak menghantar **E-mel** lihat halaman 21~22 atau jika anda hendak menghantar sesuatu menggunakan **Bluetooth**, lihat halaman 41~42.)
- 3 Mesej baru akan terbuka. Editor Mesej menggabungkan SMS dan MMS ke dalam satu intuitif dan mudah untuk menukar antara mod SMS dan mod MMS. Tetapan lalai editor mesej adalah mod SMS.
- 4 Masukkan mesej anda menggunakan sama ada mod ramalan T9 atau mod manual Abc. Lihat **Memasukkan teks** pada halaman 20 untuk melihat bagaimana untuk menukar antara mod kemasukan teks berbeza.

- 5 Pilih **Pilihan** dan pilih **Masuk** untuk menambah **Imej, Bunyi, Video, Simbol, Templat teks, Emoticon, Nama & Nombor, Slaid baru, Subjek** atau **Lagi (Kenalan/Kad perniagaan saya/ Jadual)**.
- 6 Tekan **Hantar ke** untuk menghantar.
- 7 Masukkan nombor telefon atau sentuh **Pilihan** dan pilih **Kenalan** untuk membuka senarai kenalan anda. Anda boleh tambah berbilang kenalan.
- 8 Pilih **Hantar**.



AMARAN: Jika **Imej, Bunyi, Video, Slaid baru** atau **Subjek** ditambah ke editor mesej, ia akan ditukarkan secara automatik ke mod MMS dan anda akan dicitaj sewajarnya.

Memasukkan teks

Anda boleh memasukkan aksara abjad angka dengan menggunakan pad kekunci telefon. Contohnya, menyimpan nama dalam Kenalan, menulis mesej dan membuat penjadualan peristiwa dalam kalendar semuanya memerlukan teks dimasukkan. Kaedah input teks yang berikut tersedia dalam telefon: Mod ramalan T9, Mod manual ABC dan Mod 123.

01

02

03

04

05

06

07

08

Mesej

Nota: Sesetengah medan mungkin hanya membenarkan satu mod input teks (cthnya nombor telefon dalam medan buku alamat).

Untuk hidupkan mod T9 dalam medan kemasukan teks, pilih **Pilihan**, pilih **Bahasa T9** dan pilih **Hidupkan**. Apabila T9 hidup, anda boleh tukarkan mod input teks dengan menekan **# #0**. Anda akan perhatikan penunjuk mod input teks di sudut kanan atas paparan.

Untuk input simbol dalam medan kemasukan teks, tekan kekunci *** *0** dan pilih simbol, kemudian tekan **OK**.

Lengkapkan setiap perkataan dengan ruang dengan menekan **0**.

Untuk memadam aksara, sentuh kekunci **c** .

Mod Ramalan T9

Mod T9 menggunakan kamus terbina dalam untuk mengenal pasti perkataan yang anda tulis berdasarkan kepada urutan kekunci yang anda tekan. Hanya tekan kekunci nombor yang berkaitan dengan huruf yang anda hendak masukkan dan kamus akan mengenalpasti perkataan tersebut apabila

semua perkataan dimasukkan. Sebagai contoh, tekan **8, 3, 5, 3, 7, 4, 6, 6, 3** untuk menulis 'telephone'.

Nota: Anda boleh pilih bahasa T9 yang berbeza dengan menyentuh **Pilihan** dan pilih **Bahasa T9**.

Mod manual ABC

Dalam mod manual ABC anda mungkin perlu menekan kekunci secara berulang untuk masukkan huruf. Sebagai contoh, untuk menulis 'hello', tekan **4** dua kali, **3** dua kali, **5** tiga kali, **5** tiga kali sekali lagi, kemudian **6** tiga kali.

Mod 123

Taip nombor menggunakan satu strok kekunci bagi setiap nombor. Anda juga boleh tambah nombor semasa huruf yang ada dalam mod huruf dengan menekan dan menahan kekunci diingini.

Menyediakan e-mel anda

Anda boleh menghantar e-mel semasa anda mengembara dengan KC550 anda. Ia adalah mudah dan pantas untuk menteaapkan akaun e-mel POP3 atau IMAP4.

- 1 Tekan **Menu**, pilih **Mesej** dan pilih **Tetapan**.
- 2 Pilih **E-mel** kemudian **Akaun e-mel**.
- 3 Pilih **Baru**.
- 4 Anda kini boleh memilih bagaimana akaun anda berfungsi
Nama akaun - Masukkan nama bagi akaun ini.
Alamat E-mel - Masukkan alamat e-mel akaun.
Nama saya - Masukkan nama anda
Pelayan mel masuk - Masukkan butiran akaun.
Nama pengguna - Masukkan nama pengguna akaun.
Kata laluan - Masukkan kata laluan akaun.
Pelayan mel masuk - Masukkan butiran akaun.
Pengesahan mel keluar - Pilih hidup atau mati.
ID pelayan keluar - Masukkan butiran akaun.

Kata laluan pelayan keluar - Masukkan butiran akaun.

Untuk memasukkan maklumat berikut, sentuh **Pilihan** dan pilih **Tetapan lanjutan**.

Jenis protokol- Pilih jenis peti mel, POP3 atau IMAP4.

Saiz penerimaan maksimum - Pilih had saiz e-mel anda, maksimum adalah 300KB.

Simpan pada pelayan - Pilih sama ada untuk menyimpan e-mel anda ke pelayan. Untuk akaun IMAP4 salinan sentiasa disimpan.

Simpan e-mel yang dihantar ke dalam - Pilih sama ada untuk menyimpan e-mel anda ke pelayan telefon (hanya untuk IMAP4).

Masukkan tanda tangan - Pilih sama ada untuk memasukkan tanda tangan secara automatik dalam e-mel anda

Balas alamat e-mel- Masukkan alamat e-mel "balas ke" .

Nombor port masuk - Lazimnya, ini adalah 110 untuk POP3 dan 143 untuk akaun IMAP4.

Nombor port keluar - Biasanya ini adalah 25.

01

02

03

04

05

06

07

08

Mesej

Ambil semula auto - Pilih untuk mendapatkan e-mel anda secara automatik.

Ambil semula muat turun - Pilih **Pengepala sahaja, Pengepala+ badan**(hanya untuk IMAP4) atau **Semua**.

Sekarang akaun anda sudah disediakan, ia akan muncul dalam senarai akaun dalam folder E-mel anda.

Menghantar e-mel menggunakan akaun baru anda

Untuk menghantar/menerima e-mel, anda perlu menetapkan akaun e-mel (lihat halaman 21~22).

- 1 Pilih **Menu**, pilih **Mesej** dan pilih **Mesej baru**.
- 2 Pilih **E-mel** dan e-mel baru akan terbuka.
- 3 Tulis tajuk kemudian sentu **OK**.
- 4 Masukkan mesej anda menggunakan mod ramalan T9 atau mod manual ABC. Lihat **Memasukkan teks** pada halaman 23 untuk melihat bagaimana untuk menukar antara mod kemasukan teks berbeza.
- 5 Pilih **Pilihan** dan pilih lampiran untuk menambah: **Imej, Bunyi, Video, Dokumen, Kenalan, Kad perniagaan saya** dan **Jadual**.

6 Tekan **Hantar** dan masukkan alamat penerima dan sentuh **Pilihan** dan pilih **Kenalan** untuk membuka senarai kenalan anda.

7 Tekan **Hantar** dan e-mel anda akan dihantar.

Folder mesej

Tekan **Menu**, pilih **Mesej**. Anda akan mengenali struktur folder yang digunakan pada KC550 anda, ia jelas dengan sendiri.

Peti masuk - Semua mesej yang anda terima dimasukkan ke dalam peti masuk anda. Dari sini anda boleh membalas, kirim semula dan banyak lagi, lihat di bawah untuk butiran lanjut.

Peti e-mel - Mengandungi semua mesej e-mel anda. Pilih akaun yang hendak anda gunakan kemudian pilih **Dapatkan semula**. KC550 anda akan sambung ke akaun e-mel anda dan dapat semula mesej baru anda.

Draf - Jika anda tidak mempunyai masa untuk menghabiskan menulis mesej, anda boleh simpan apa yang telah anda tulis di sini.

Peti keluar - Ini adalah folder penyimpanan sementara apabila mesej sedang dihantar.

Dihantar - Semua mesej yang anda hantar dimasukkan ke dalam folder Dihantar anda.


Dengar mel suara - Anda boleh mengakses peti mel suara anda (jika disediakan oleh pembekal khidmat anda). Apabila mesej suara baru diterima, simbol akan dipaparkan pada skrin siap sedia.

Mesej maklumat - Semua maklumat mesej dan kemas kini diterima dari operator anda

Templat - Senarai mesej yang berguna yang telah ditulis untuk balasan yang cepat.

Menguruskan mesej anda

Anda boleh menggunakan **Peti masuk** anda untuk menguruskan mesej anda.

- 1 Tekan **Menu**, pilih **Mesej** dan pilih **Tetapan**. Atau, cara pantas adalah dengan menekan  pada skrin siap sedia.
- 2 Pilih **Pilihan** dan kemudian pilih untuk:
 - Padam** - Padam mesej yang dipilih.
 - Balas** - Hantar balasan ke mesej yang dipilih.
 - Kirim semula** - Hantar mesej yang dipilih kepada orang lain.

Panggilan balik - Panggil individu yang menghantar mesej kepada anda.

Maklumat - Papar butiran mesej, sebagai contoh masa mesej dihantar.

Salin/Alihkan- Anda boleh memilih untuk menyalin atau mengalihkan mesej Pilih untuk menyalin atau alihkan mesej yang dipilih ke kad SIM atau telefon.

Berbilang Padam - Padam mesej yang dipilih.

Padam semua dibaca - Semua mesej yang dibuka akan dipadam.

Padam semua- Anda boleh memilih untuk memadam semua mesej atau hanya mesej teks.

Jika anda melihat mesej **Tiada ruang untuk mesej SIM** anda perlu memadam beberapa mesej dari peti masuk anda.

Jika anda melihat mesej **Tiada ruang untuk mesej** anda boleh memadam sama ada mesej atau fail yang disimpan untuk mewujudkan ruang.

01

02

03

04

05

06

07

08

Mesej

Menukar tetapan mesej teks anda

Tetapan mesej KC550 anda dipratetap supaya anda boleh menghantar mesej dengan segera.

Jika anda hendak menukar tetapan, anda boleh melakukannya dengan menggunakan pilihan **Tetapan**.

Tekan **Menu**, pilih **Mesej**, kemudian pilih **Tetapan** dan **Mesej teks**. Anda boleh membuat perubahan pada:

Jenis mesej - Menukar teks anda menjadi Suara, Faks, Mengeluli, E-mel X.400 atau ERMES.

Tempoh Kesahan - Pilih tempoh masa mesej anda disimpan di pusat mesej.

Laporan penghantaran - Pilih untuk menerima pengesahan bahawa mesej anda telah dihantar.

Bayaran balas - Pilih untuk dikenakan bayaran untuk balasan penerima mesej anda.

Nombor pusat mesej - Masukkan butiran untuk pusat mesej anda.

Pengekodan aksara - Pilih bagaimana aksara anda dikodkan. Ia memberi kesan saiz mesej anda dan oleh itu caj data.

Hantar teks panjang sebagai - Pilih sama ada untuk menghantar mesej sebagai SMS atau MMS apabila anda memasukkan teks panjang daripada 2 halaman dalam medan mesej.

Tetapan pembawa - Pilih sama ada untuk menghantar mesej anda melalui GSM atau GPRS.

Menukar tetapan mesej multimedia anda

Tetapan mesej KC550 anda dipratetap supaya anda boleh menghantar mesej dengan segera.

Jika anda hendak menukar tetapan, anda boleh melakukannya dengan menggunakan pilihan **Tetapan**.

Tekan **Menu**, pilih **Mesej**, kemudian pilih **Tetapan** dan **Mesej multimedia**.

Anda boleh membuat perubahan pada:

Tempoh slaid - Pilih berapa lama slaid anda muncul pada skrin.

Keutamaan - Pilih tahap keutamaan mesej multimedia anda.

Tempoh Kesahan - Pilih tempoh masa mesej anda disimpan di pusat mesej.

Laporan penghantaran - Pilih untuk membenarkan dan/atau meminta laporan penghantaran.

Baca laporan - Pilih untuk membenarkan dan/atau menghantar laporan.

Muat turun auto - Pilih memuat turun mesej multimedia secara automatik atau secara manual bergantung kepada sama ada anda berada di rumah atau berada dalam perayauan.

Profil rangkaian - Pilih profil rangkaian khusus operator untuk menghantar mesej multimedia.

Jenis mesej yang dibenarkan - Pilih jenis mana mesej multimedia untuk dibenarkan.

Menukar tetapan e-mel anda

Anda boleh menyesuaikan tetapan e-mel anda ke keutamaan anda.

- 1 Tekan **Menu**, pilih **Mesej** dan pilih **Tetapan**.
- 2 Pilih **E-mel** dan anda boleh menyesuaikan tetapan berikut:

Akaun e-mel - Anda boleh menetapkan akaun e-mel.

Pusat akses - Anda boleh menetapkan pusat akses e-mel.

Ambil rehat - Pilih berapa kerap KC550 anda menyemak untuk mesej e-mel baru.

Tandatangan - Membuat tandatangan e-mel dan hidupkan ciri ini.

Menukar tetapan mesej yang lain

Tekan **Menu**, pilih **Mesej** dan pilih **Tetapan**.

Nombor mel suara - Nombor mel suara anda disimpan di sini. Hubungi operator rangkaian anda untuk mendapatkan maklumat lanjut tentang perkhidmatan yang disediakan.

Mesej perkhidmatan - Di sini anda boleh mematikan mesej Tekan, yang bermaksud mesej anda tidak lagi ditekan secara langsung pada peranti anda semasa ia diterima, apabila anda memeriksa untuk mesej baru sahaja.

Mesej maklumat - Pilih status penerimaan, amaran dan bahasa mesej maklumat anda.

Simpan mesej teks - Pilih sama ada untuk menyimpan mesej teks anda ke memori telefon atau ke memori luaran.

01

02

03

04

05

06

07

08

Kamera

Menangkap foto pantas

- 1 Buka slaid, menahan kekunci kamera ke bawah pada bahagian kanan telefon dan pencari pandangan kamera akan muncul pada skrin.
- 2 Pegang telefon secara mendatar, halakan lensa ke arah subjek foto.
- 3 Tekan kekunci kamera pada bahagian kanan telefon separuh. Peti fokus akan muncul pada pusat pencari pemandang skrin, letakkan telefon supaya anda dapat melihat subjek foto anda dalam kotak fokus. Apabila peti fokus bertukar menjadi hijau, kamera telah memfokus pada subjek anda.
- 4 Pilih kekunci lembut tengah atau tekan kekunci kamera ke arah bawah untuk mengambil gambar.

Nota: Anda juga boleh mengakses menu kamera daripada skrin siap sedia. Sentuh **Menu** dan pilih **Multimedia**, tatal ke bawah dan pilih **Kamera** untuk membuka pencari pandangan.

Selepas anda mengambil foto

Foto tangkapan anda akan muncul pada skrin. Nama imej dipaparkan di bahagian bawah skrin dan anda dapat melihat enam pilihan dipaparkan pada bahagian kanan skrin.

Padam - Pilih untuk memadam foto yang anda baru ambil dan sahkan dengan menekan **Ya**. Pencari pandangan akan muncul semula.



Imej baru - Pilih untuk mengambil foto lain dengan segera. Foto semasa anda akan disimpan.



Set sebagai - Pilih untuk membuka menu sub untuk menetapkan imej anda sebagai **Kertas hias dinding** atau **ID gambar**.



Hantar melalui - Pilih untuk menghantar foto sebagai **Mesej multimedia** atau **E-mel**.




Album - Pilih untuk melihat foto lain dalam album anda. Foto semasa anda akan disimpan.

OK - Pilih untuk mengambil foto lain dengan segera. Foto semasa anda akan disimpan.

Mendapat maklumat lanjut mengenai pencari pandangan

Apabila anda buka pencari pandangan, anda dapat melihat ikon berikut dipaparkan pada skrin.

Nota: Anda boleh melaraskan zum menggunakan kekunci kelantangan pada sisi kiri telefon. Fungsi zum hanya tersedia apabila resolusi ditetapkan pada 640x480 atau di bawah. Lihat **Menukar saiz imej** pada halaman 29 untuk butiran.

PETUA! Apabila menggunakan kamera, penggunaan kuasa bertambah. Jika ikon  muncul menunjukkan bateri lemah, cas semula bateri sebelum menggunakan.

Menggunakan tetapan pantas

Tekan Pilihan.

Pemasa ken diri - Untuk set pemasa selepas butang ditekan. Pilih antara 3, 5 & 10 saat.

Mod mengambil - Pilih antara Gambar tunggal & Syot berbilang.

Syot berbilang - M enangkap sehingga 9 gambar berterusan secara automatik.

Imbangan putih - Imbangan putih memastikan bahawa mana-mana warna putih dalam video anda adalah realistik. Untuk menyelaraskan imbangan putih pada kamera anda dengan betul, anda perlu menentukan keadaan cahaya. Pilih dari **Auto, Siang hari, Inkandesesn, Berawan** atau **Floresen**.

Efek warna - P ilih antara Off, Sepia, Mono atau Negatif.

EV - Menetapkan tahap kecerahan skrin kamera.

Resolusi - Lihat **Menukar saiz imej** pada halaman 29.

Kualiti - Pilih antara **Normal, Halus** dan **Sangat Halus**. Lebih halus kualiti lebih tajam gambar yang akan diperolehi tetapi sebagai hasilnya saiz fail akan meningkat yang bermaksud anda boleh menyimpan foto yang lebih sedikit dalam memori anda.

Fokus Auto - Hidupkan atau Matikan Fokus auto. Kamera anda boleh melaraskan fokus secara automatik untuk imej jelas dan tajam dengan tekanan tunggal butang kamera.

Nada pengatup - Pilih salah satu daripada tiga bunyi pengatup atau matikan bunyi.

01

02

03

04

05

06

07

08

Kamera


ISO - Untuk menetapkan ISO ke Auto, ISO 800, ISO 400, ISO200, ISO 100 or ISO 80.

Simpan ke- Pilih sama ada untuk menyimpan foto anda ke memori telefon atau ke memori luaran.

Tetap semula tetapan – Pilih **Ya** untuk memulakan semula telefon anda pada tetapan kamera asalnya.

Menggunakan flash

Denyar ditetapkan **Off** secara lalai, tetapi terdapat pilihan lain.

- 1 Pilih  dari sudut kiri sebelah atas pencari pandangan untuk memasuki sub-menu denyar.
- 2 Terdapat empat pilihan Flash:

Off- Flash tidak akan menyala. Ini berguna jika anda hendak menjimat kuasa bateri.

On selalu- Tetapkan Flash pada hidup apabila anda mengambil gambar di tempat gelap.

Auto - Kamera anda akan menilai pencahayaan yang diperlukan untuk mengambil gambar yang baik dan menggunakan Flash sebagaimana diperlukan.

Apabila mengambil - Flash akan kekal hidup semasa anda mengubah gambar anda dan Flash kembali semasa anda mengambil foto untuk mengurangkan mata merah.

- 3 Pilih pilihan Flash yang anda hendak guna.
- 4 Apabila anda telah membuat pilihan menu Flash akan tutup secara automatik, sedia untuk anda mengambil gambar anda.
- 5 Ikon Flash dalam pencari pandangan akan tukar mengikut mod Flash anda yang baru.

Nota: Apabila anda keluar daripada kamera, tetapan Flash akan ditukar kembali ke mod **Off** lalai.

Menukar saiz imej

Anda boleh menukar saiz foto untuk menyimpan ruang memori. Pikel yang tinggi, saiz fail yang besar akan memerlukan ruang yang banyak pada memori anda. Jika anda hendak memuatkan lebih banyak gambar pada telefon anda, anda boleh mengubah nombor piksel untuk mengecilkan saiz fail.

- 1 Tekan **Pilihan** dan pilih **Resolusi** dari bar alat.
- 2 Pilih nilai piksel dari lima pilihan bernombor (320x240, 640x480, 1280x960, 1600x1200, 2048x1540, 2560x1924).
- 3 Pilih pilihan saiz yang anda hendak gunakan dan sentuh **OK** untuk melaksanakan perubahan anda.

Nota: Fungsi zum berbeza bergantung pada resolusi kamera di ditetapkan. Sebagai contoh, jika resolusi kamera ditetapkan pada tetapan tinggi, anda tidak boleh mengezum.

Melihat foto yang disimpan

- 1 Anda boleh akses foto yang disimpan anda dari mod kamera dan dari skrin siap sedia. Dari pencari pandangan, pilih **Album**. Dari skrin siap sedia anda perlu menyentuh **Menu**, dan pilih **Bahan saya** dan **Imej**.
- 2 Galeri anda akan muncul pada skrin.
- 3 Gunakan anak panah untuk memilih foto yang hendak anda lihat dan sentuh **Lihat** untuk membesarkannya.

Menetapkan foto sebagai Kertas hias dinding atau ID gambar

Dari galeri imej anda, gunakan anak panah pada pad sentuh untuk memilih imej dan sentuh **Set sebagai** untuk menggunakan imej yang dipilih sebagai **Kertas hias dinding** atau **ID gambar** untuk salah satu kenalan anda.

Nota: ID gambar hanya boleh ditambah pada kenalan yang disimpan pada telefon anda bukan SIM.

01

02

03

04

05

06

07

08

Kamera Video

Menangkap video pantas


- 1 Buka slaid, menahan kekunci kamera ke bawah pada bahagian kanan telefon dan pencari pandangan kamera akan muncul pada skrin.
- 2 Pilih **Kamera Video**. Pencari pandangan kamera video akan muncul pada skrin.
- 3 Tujukan lensa kamera ke arah subjek video.
- 4 Tekan kekunci kamera pada sisi kanan telefon bimbit untuk mula merakam.
- 5 **REC** akan muncul pada bahagian bawah sudut kiri pencari pandangan dan pemasa akan menunjukkan panjang video anda.
- 6 Untuk menjeda video pilih **Jeda** dan sambung dengan memilih **Sambung**.
- 7 Sentuh **Henti** untuk berhenti merakam.


Nota: Anda juga boleh mengakses **Kamera Video** dari skrin siap sedia. Sentuh **Menu** dan pilih **Multimedia**, tatal ke bawah dan pilih **Kamera Video** untuk membuka pencari pandangan.


Setelah anda menangkap video


Nama video dipaparkan di bawah skrin dan enam pilihan akan dipaparkan pada bahagian kanan skrin.

Padam - Sentuh video yang baru sahaja anda rakam dan sahkan dengan menekan Ya. Pencari pandangan akan muncul semula.

 **Video baru** - Sentuh untuk merakam video lain dengan segera. Video semasa anda akan disimpan.

 **Main** - Sentuh main untuk memainkan video yang baru anda rakam.

 **Hantar melalui** - Sentuh untuk menghantar video sebagai **Mesej multimedia** atau **E-mel**.

 **Album** - Sentuh untuk melihat klip video lain dalam album anda. Video semasa anda akan disimpan.

OK - Sentuh untuk merakam video lagi dengan segera. Video semasa anda akan disimpan.

Mendapat maklumat lanjut mengenai pencari pandangan

Nota: Anda boleh melaraskan zum menggunakan kekunci kelantangan pada sisi kiri telefon.

Menggunakan tetapan pantas

Tekan Pilihan untuk Tetapan Kamera video.

Mod - Untuk merakam video yang hendak anda hantar dalam mesej multimedia, pilih **MMS**.

Kesan warna - Pilih dari empat pilihan ton warna: **Off** (normal/warna), **Sepia**, **Mono** (hitam dan putih) atau **Negatif**.

Kecerahan - Kontras menentukan perbezaan antara cerah dan gelap dalam sesuatu imej. Imej berkontras rendah akan kelihatan kabur, manakala imej berkontras tinggi akan kelihatan lebih jelas. Sentuh anak panah < dan > dan gelangarkan penunjuk kontras di sekeliling bar, ke arah - untuk kontras yang lebih rendah, imej lebih kabur atau ke arah + untuk kontras tinggi, imej lebih tajam.

Resolusi – Jika anda hendak memuatkan lebih banyak video pada telefon anda, anda boleh mengubah nombor piksel untuk mengecilkan saiz fail. Pilih antara dua pilihan untuk video anda, **176x144** atau **320x240**, **640x480** atau **720x480**.

Kualiti - Sangat halus/ Halus/ Normal

Simpan ke - Pilih sama ada untuk menyimpan klip video anda ke memori telefon atau ke memori luaran.

Flash - **On** atau **Off** denyar. Denyar ditetapkan untuk **Off** sebagai lalai, menjimatkan kuasa bateri default. Apabila anda keluar kamera, ia akan kembali pada tetapan **Off** lalai.

Imbangan putih -Imbangan putih memastikan sebarang putih dalam video anda adalah realistik. Untuk menyelaraskan imbangan putih pada kamera anda dengan betul, anda perlu menentukan keadaan cahaya. Pilih daripada **Auto**, **Cahaya siang**, **Inkandesen**, **Berawan**, **Floresen** atau **Mod malam**.

Album - Lihat semua imej.

Set semula tetapan - Pilih **Ya** untuk menetap semula telefon anda ke tetapan kamera video asal.

01

02

03

04

05

06

07

08

Kamera Video

Melihat video anda yang disimpan

- 1 Anda boleh akses video yang disimpan anda sama ada dari dalam mod kamera video atau dari skrin siap sedia. Dari pencari pandangan, pilih Album. Dari skrin siap sedia anda perlu menyentuh **Menu**, kemudian memilih **Bahan saya** dan **Video**.
- 2 Galeri anda akan muncul pada skrin.
- 3 Gunakan kekunci anak panah untuk memilih video yang anda hendak lihat dan sentuh kekunci lembut pusat untuk melihatnya.

Melaraskan kelantangan apabila melihat video

Untuk selaraskan kelantangan audio pada video semasa video dimainkan, gunakan kekunci pada sisi kiri telefon bimbit.

Pemain MP3

Pemain MP3

LG KC550 anda telah dibina dengan pemain MP3 agar anda boleh mendengar semua lagu kegemaran anda.






Untuk mengakses pemain MP3, sentuh **Menu** dan pilih **Multimedia** kemudian **Pemain MP3**.

Memindahkan muzik pada telefon anda

Cara paling mudah untuk memindahkan muzik pada telefon anda adalah melalui Bluetooth atau kabel bergerak. Untuk memindahkan mengguna Bluetooth:

- 1 Untuk pastikan kedua-dua peranti menghidupkan Bluetooth dan kelihatan pada satu sama lain.
- 2 Pilih fail muzik pada peranti yang lain dan pilih untuk menghantarkannya melalui Bluetooth.
- 3 Apabila fail dihantar anda perlu menerimanya pada telefon anda dengan menyentuh **Ya**.
- 4 Fail perlu muncul dalam **Semua lagu**.

Memainkan lagu

- 1 Tekan **Menu** dan pilih **Multimedia**, kemudian pilih **Pemain MP3**.
- 2 Pilih lagu yang hendak anda main. sentuh .
- 3 Pilih  untuk menjedakan lagu.
- 4 Pilih  untuk melangkau ke lagu seterusnya.
- 5 Pilih  untuk melangkau ke lagu sebelumnya.
- 6 Pilih  untuk menghentikan muzik dan kembali ke menu Pemain MP3.

PETUA! Untuk menukar kelantangan sambil mendengar muzik, gunakan kekunci kelantangan pada sisi telefon anda.

Menggunakan pilihan sambil memainkan muzik

Pilih **Pilihan** dan pilih dari:

Minimum - Sembunyikan skrin pemain muzik supaya anda boleh terus menggunakan telefon anda seperti biasa apabila muzik sedang dimainkan.

Lihat senarai main - Lihat senarai main yang anda sedang dengar.

01

02

03

04

05

06

07

08

Pemain MP3

Tambah pada senarai main- Tambah senarai semasa pada senarai main.

Set sebagai - Tetapkan trek semasa sebagai nada mesej anda.

Maklumat - Anda dapat melihat maklumat tentang fail MP3 yang anda dengar.

Tetapan - Tukar Penyama atau Mod main atau Tetapkan Gerakan untuk mengadun muzik.

Membuat senarai main

Anda boleh membuat senarai main anda sendiri dengan memilih pilihan lagu dari folder **Semua lagu**.

- 1 Tekan **Menu** dan pilih **Multimedia**.
- 2 Pilih **Pemain MP3**, kemudian pilih **Senarai main saya**.
- 3 Tekan **Pilihan** dan pilih **Senarai Main**, masukkan nama senarai baru dan sentuh **Simpan**.
- 4 Folder **Senarai Main Baru** akan dipamerkan. Pilih semua lagu yang hendak anda masukkan dalam senarai main dengan skrol dan menyentuh .
- 5 Pilih **Simpan** untuk menyimpan senarai main.

PETUA! Apabila trek MP3 dimainkan pada pemain MP3, jika anda tekan kekunci ringkas atau sentuh **Pilihan** dan pilih **Minimum** anda boleh menggunakan mod BGM. Dalam mod BGM (Muzik Latar belakang) MP3 boleh dimainkan semasa fungsi lain sedang digunakan. BGM boleh dihentikan pada skrin pemain MP3.

Nota:

Sebagai hasil sistem Digital Rights Management (DRM), beberapa iem media yang anda muat turun daripada Internet atau terima melalui MMS mungkin mempunyai menu "Purchase right" untuk mengaksesskannya. Anda boleh peroleh kunci untuk membeli hak tersebut daripada laman web yang memiliki hak ke atas kandungan itu.

Muzik dilindungi hak cipta dalam perjanjian antarabangsa dan undang-undang hak cipta nasional. Anda perlu mendapatkan kebenaran atau lesen mengeluarkan semula atau menyalin muzik mungkin didapatkan.. Dalam sesetengah negara undang-undang nasionalnya melarang penyalinan peribadi bahan hak cipta. Sila periksa perundangan nasional negara yang berkaitan mengenai penggunaan bahan seumpama ini.

Radio FM

Menggunakan Radio FM

LG KC550 anda mempunyai ciri radio FM supaya anda boleh nada stesen kegemaran untuk didengari semasa mengembara.

Nota: Anda perlu memasukkan fon kepala anda untuk mendengar radio. Masukkan plag ke dalam soket alat dengar (ini adalah soket sama yang anda plag pengecas anda).

Mencari stesen

Anda boleh menalai stesen radio ke dalam telefon anda dengan mencari stesen tersebut secara manual atau automatik. Ia akan disimpan ke dalam nombor saluran spesifik nombor dan anda tidak perlu untuk menala semula. Anda boleh simpan sehingga 12 saluran dalam telefon anda.

Untuk menala secara automatik:

- 1 Tekan **Menu** dan pilih **Multimedia**, kemudian pilih **Radio FM**.
- 2 Pilih **Philihan** dan **Imbas auto** kemudian **Ya**.

- 3 Setiap kali stesen dijumpai, KC550 anda akan bertanya sama ada anda mahu menyimpannya. Pilih **Ya** jika anda mahu simpan saluran itu dan **Tidak** jika tidak mahu. Sebarang stesen yang anda pilih untuk disimpan akan ditempatkan ke dalam nombor saluran pada telefon anda secara automatik.

Untuk menala secara manual:

- 1 Tekan **Menu** dan pilih **Multimedia**, kemudian pilih **Radio FM**.
- 2 Pilih nombor saluran yang anda mahu untuk simpan stesen dan pilih **Edit**.
- 3 Untuk memasukkan stesen anda, anda boleh menggunakan anak panah pad sentuh untuk mencari atau anda boleh masukkan frekuensi menggunakan pad kekuncikemudian pilih **Simpan**.

Nota: Anda juga boleh mengedit stesen yang telah anda simpankan dalam nombor saluran.

PETUA! Untuk meningkatkan penerimaan radio, panjangkan kord set kepala yang berfungsi sebagai antena radio.

01

02

03

04

05

06

07



08

Perakam suara

Menggunakan perakam suara

Gunakan **Perakam suara** anda untuk merakam memo suara atau bunyi yang lain.

Merakam memo suara anda

- 1 Tekan **Menu** dan pilih **Multimedia**, kemudian pilih **Perakam suara**.
- 2 Tekan  untuk memulakan rakaman.
- 3 Pilih **Jeda** untuk menjeda rakaman.
- 4 Pilih **Simpan** untuk menamatkan rakaman.
- 5 Pilih  untuk mendengar pada rakaman.

Nota: Anda boleh mendengar semua rakaman suara yang ada dengan memilih **Pilihan** dan **Album**.

PETUA! Jika anda rancang untuk menghantar perakaman anda sebagai mesej, sebelum memulakan rakaman, sentuh **Pilihan**, pilih **Mod perakaman** dan pilih **MMS**. Ia akan memastikan bahawa perakaman sesuai dalam mesej.

Studio Muvee

Studio Muvee membenarkan anda membuat imej pertunjukkan slaid yang digabungkan dengan muzik.

Bahan saya

Anda boleh menyimpan sebarang fail multimedia ke dalam memori telefon anda supaya anda mempunyai akses mudah pada semua gambar, bunyi, video, dan permainan. Anda juga boleh menyimpan fail pada kad memori anda. Kelebihan menggunakan kad memori adalah anda boleh mengosongkan ruang pada memori telefon anda.

Semua fail multimedia anda akan disimpan dalam **Bahan Saya**. Sentuh **Menu** kemudian pilih **Bahan saya** untuk membuka senarai folder.

Imej

Imej mengandungi folder imej lalai yang dipamuat pada telefon anda, imej yang dimuat turun oleh anda dan imej yang diambil oleh kamera telefon anda. Dalam folder **imej**, pilih **Pilihan** untuk mengeluarkan senarai pilihan anda. Pilihan yang tersedia pada anda dalam **Imej** bergantung pada jenis imej yang anda pilih. Semua pilihan akan tersedia untuk gambar yang anda ambil pada kamera telefon.

Menghantar foto

- 1 Sentuh **Menu** kemudian pilih **Bahan saya**.
- 2 Pilih **Imej**.
- 3 Pilih foto dan pilih **Pilihan**.

4 Pilih **Hantar melalui** dan pilih daripada **Mesej multimedia, Bluetooth** atau **E-mel**.

5 Jika anda memilih **Mesej multimedia** atau **E-mel**, foto anda akan dilampirkan ke mesej dan anda boleh menulis dan menghantar mesej seperti biasa. Jika anda pilih **Bluetooth**, anda akan digesa untuk menghidupkan Bluetooth dan telefon anda akan mencari peranti untuk menghantar gambar kepada.

Membuat pertunjukan slaid

Jika anda mahu melihat semua imej dalam telefon anda atau mengimbas yang anda sudah ada, anda boleh membuat gambar slaid untuk memudahkan anda daripada terpaksa membuka dan menutup setiap imej individu.

- 1 Sentuh **Menu** kemudian pilih **Bahan saya**.
- 2 Pilih **Imej**.
- 3 Pilih foto yang anda ingin untuk memulakan tayangan slaid dan pilih **Pilihan**.
- 4 Pilih **Tayangan slaid** dan ia akan bermula.
- 5 Sentuh **Jeda** untuk menjedakan gambar slaid dan **Henti** untuk menamatkan persembahan slaid dan kembali ke folder **Imej**.

01

02

03

04

05

06

07

08

Bahan saya

6 Memilih **Pilihan** semasa tayangan slaid memberikan pilihan tambahan:

Lihat - Pilih antara **Imej penuh** dan **Skrin Penuh**. Pilih **Landskap** untuk menukar orientasi imej.

Ulang hidup / mati - Tentukan sama ada anda mahu persembahan slaid diulang atau tidak.

Bunyi

Folder **Bunyi** mengandungi **Bunyi lalai**, perakaman suara anda dan fail bunyi dimuat turun oleh anda. Dari sini anda boleh uruskan, hantar atau tetapkan bunyi sebagai nada dering.

Menggunakan bunyi

- 1 Tekan **Menu** kemudian pilih **Bahan saya**.
- 2 Tatal dan pilih **Bunyi**.
- 3 Pilih **Bunyi Lalai** atau pilih dari senarai fail rakaman suara.
- 4 Pilih bunyi dan sentuh kekunci lembut tengah untuk mendengar padanya.
- 5 Sentuh **Pilihan**, pilih **Tetapkan sebagai** dan pilih dari **Nada dering**, **ID nada dering** dan **Nada mesej**.

Video

Folder **Video** saya menunjukkan senarai video yang dimuat turun dan video yang telah anda rakam dalam telefon. Dalam folder imej, pilih **Pilihan** untuk mengeluarkan senarai pilihan anda.

Menonton video

- 1 Tekan **Menu** kemudian pilih **Bahan saya**.
- 2 Tatal dan pilih **Video**.
- 3 Pilih video dan sentuh **Main**.
- 4 Sebelum memainkan video, anda boleh menetapkan mod main dengan memilih **Main auto seterusnya** dari menu **Pilihan**. pilih dari:

Mati -Memainkan fail yang dipilih.

Ulang sekali - Memainkan semua fail dalam senarai sekali.

Ulang semula - Teruskan main semua fail dalam senarai secara berulang.

- 5 Dengan memilih **Pilihan**, video yang anda mainkan akan berada dalam mod jeda dan anda boleh pilih dari:

Padam - Padam video.

Hantar melalui - Hantar video kepada rakan melalui mesej Multimedia, Bluetooth atau E-mel.

Maklumat - Lihat nama, saiz, tarikh, masa, jenis dan butiran hak cipta fail yang dipilih.

Menghantar klip video

- 1 Tekan **Menu** kemudian pilih **Bahan saya**.
- 2 Tatal ke dan pilih **Video**.
- 3 Pilih klip video yang anda hendak dan sentuh **Pilihan**.
- 4 Sentuh **Hantar menerusi** dan pilih dari **Mesej multimedia, Bluetooth** atau **E-mel**.
- 5 Jika anda memilih **Mesej** atau **E-mel**, video klip anda akan dilampirkan pada mesej dan anda boleh tulis dan hantar mesej sebagai normal. Jika anda memilih **Bluetooth**, anda akan digesa untuk menghidupkan Bluetooth dan telefon anda akan mencari peranti untuk menghantar video.

Nota: Video perlu disaizkan kembali sebelum ia boleh dihantar oleh MMS. Beberapa video mungkin terlalu besar untuk dihantar oleh MMS.

Dokumen

Dari menu **Dokumen**, anda boleh melihat semua fail dokumen. Dari sini anda boleh melihat fail Excel, PowerPoint, Word, Text dan PDF.

Lain-lain

Folder **Lain** digunakan untuk menyimpan fail yang bukan gambar, bunyi atau video. Ia digunakan dengan cara yang sama sebagai folder **Dokumen**.

Anda mungkin mendapati bahawa apabila anda memindahkan fail dari komputer anda ke telefon yang ia muncul dalam folder **Lain** daripada folder **Dokumen**. Jika ia berlaku, anda boleh menggerakkannya.

Memori luar

Jika anda telah masukkan kad memori ia akan dipaparkan sebagai folder dalam **Bahan saya**. Folder memori luaran anda akan dibahagikan kepada lima folder lagi: **Imej, Bunyi, Video, Dokumen** dan **Lain-lain**. Setiap folder akan mengandungi semua jenis fail yang disimpan kepada kad memori anda daripada telefon bimbit anda.

Gunakan telefon anda sebagai peranti Penyimpanan massa

KC550 anda boleh digunakan sebagai peranti Penyimpanan massa, seperti USB stick. Ini adalah cara terbaik pindahkan fail anda daripada komputer ke telefon anda. Jika anda telah memasukkan kad memori, apabila menyambung sebagai **Penyimpanan**

01

02

03

04

05

06

07

08

Bahan saya

massa, ia akan dipaparkan sebagai dua pemacu pada komputer anda: memori telefon bimbis dan memori luaran telefon anda.

- 1 Tekan **Menu**, pilih **Kesambungan**.
- 2 Pilih **Sambungan USB**.
- 3 Tatal ke **Penyimpanan massa** dan pilih **OK**.
- 4 Masukkan hujung yang kecil kabel USB ke dalam penyambung kabel USB di hujung KC550. Pasangkan hujung yang besar ke dalam USB port komputer anda.
- 5 Folder cakera boleh tanggal akan dibuka secara automatik, jika anda telah memasukkan kad memori, tunjukkan semua folder pada telefon anda atau kad memori.
- 6 Seret dan putuskan imej anda, video, muzik atau lain-lain dalam folder yang betul.
- 7 Keluarkan dengan selamat telefon anda dengan klik pada ikon **Keluarkan perkakasan dengan selamat** pada bar alat komputer anda.

- 8 Apabila anda hendak mengakses fail, sebagai contoh imej, sentuh **Menu**, kemudian pilih **Bahan saya** diikuti dengan **Memori luaran** kemudian **Imej**. Semua imej yang anda baru pindahkan akan terkandung dalam fail ini.

Memindahkan fail kepada telefon anda

Anda juga boleh memindahkan fail daripada komputer kepada telefon anda melalui Bluetooth.

- 1 Pastikan telefon dan komputer anda menghidupkan Bluetooth dan kelihatan pada satu sama lain.
- 2 Gunakan komputer anda untuk menghantar fail melalui Bluetooth.
- 3 Apabila fail dihantar anda perlu menerimanya pada telefon anda dengan menyentuh **Ya**.
- 4 Fail akan disimpan dalam folder yang sesuai bergantung kepada jenisnya. Jadi sebagai contoh, fotografi akan disimpan dalam folder **Imej** dan muzik disimpan dalam folder **Bunyi**. Jika telefon anda tidak boleh menggesa jenis fail, fail itu akan disimpan di dalam folder **Lain-lain**.

Nota: Fail dihantar menggunakan Bluetooth akan disimpan dalam memori telefon.

Menghantar dan menerima fail anda menggunakan Bluetooth

Bluetooth adalah cara yang mudah untuk menghantar dan menerima fail kerana tiada wayar diperlukan dan sambungan pantas dan mudah. Anda juga menyambung pada alat dengar Bluetooth untuk membuat dan menerima panggilan.

Sebelum anda mula berkongsi fail melalui Bluetooth, anda perlu pasang peranti anda dengan peranti Bluetooth yang lain. Untuk maklumat tentang peranti perpasangan, lihat **Perpasangan dengan peranti Bluetooth lain** pada halaman 56.

Untuk hidupkan Bluetooth:

- 1 Tekan **Menu** dan pilih **Kesambungan**, kemudian pilih **Bluetooth**.
- 2 Pilih **Hidup/mati Bluetooth** dan pilih **Hidup**.
- 3 Pilih **Mati** untuk matikan Bluetooth.

Untuk menghantar fail:

- 1 Buka fail yang anda hendak hantar, biasanya fail foto, video atau muzik.

2 Pilih **Opsyen** dan pilih **Hantar melalui**, kemudian **Bluetooth**.

3 Pilih **Ya** untuk hidupkan Bluetooth jika sekiranya ia tidak diaktifkan.

4 KC550 anda secara automatik akan mencari peranti Bluetooth yang teal didayakan dalam jarak.

5 Pilih peranti yang ingin anda hantar fail dan pilih **Hantar**.

Untuk menerima fail:

1 Untuk menerima fail Bluetooth anda perlu **Hidup** dan **Kelihatan**. Lihat **Menukar tetapan Bluetooth anda** pada halaman 52 untuk maklumat lanjut.

2 Mesej akan gesa anda untuk menerima fail dari penghantar. Pilih **Ya** untuk menerima fail.

PETUA! Perhatikan bar kemajuan untuk memastikan fail anda dihantar.

Nota

Tanda dan logo Bluetooth® dimiliki oleh Bluetooth SIG, Inc. dan sebarang penggunaan tanda berikut oleh LG Electronics adalah dibawah lesen. Tanda dagangan dan nama dagangan lain adalah pemilik yang berasingan.

01

02

03

04

05

06

07

08

Permainan dan Aplikasi

Permainan dan Aplikasi

KC550 anda didatangi dengan masukan permainan terdahulu untuk mengembirakan anda apabila anda ada masa terluang. Jika anda pilih untuk memuat turun sebarang permainan atau aplikasi tambahan ia akan disimpan dalam folder ini.

Memainkan permainan

- 1 Tekan **Menu** dan pilih **Permainan & Aplikasi**.
- 2 Pilih **Permainan**.
- 3 Pilih permainan yang hendak anda main dan pilih **Main**.

Melihat aplikasi

Anda boleh menguruskan aplikasi Java yang dipasangkan dalam telefon anda menggunakan menu **Aplikasi** . Anda boleh memadamkan aplikasi yang dimuat turun.

- 1 Tekan **Menu** dan pilih **Permainan & Aplikasi**.
- 2 Pilih **Aplikasi**.
- 3 Lihat dan uruskan sebarang aplikasi yang anda ada.

Menukar profil rangkaian

Untuk memuat turun permainan, anda boleh menetapkan nilai untuk menyambung ke rangkaian menggunakan **Profil Rangkaian**.

- 1 Tekan **Menu** dan pilih **Permainan & Aplikasi**.
- 2 Pilih **Profil Rangkaian**.
- 3 Anda boleh menambah dan mengedit profil rangkaian baru.

Pengurus/Alatan

Menambah peristiwa pada kalender anda

- 1 Sentuh **Menu**, dan pilih **Organizer**, kemudian **Kalendar**.
- 2 Pilih tarikh yang anda ingin tambah peristiwa kepadanya. Anda boleh memilih tarikh sama ada dengan menatal kepadanya menggunakan anak panah pad sentuh atau dengan memilih **Opsyen** dan masukkan tarikh secara manual.
- 3 Pilih **Baru** dan masukkan masa yang anda hendak peristiwa anda memulakan dan masa tamat peristiwa anda.
- 4 Pilih sama ada anda hendak menetapkan **Penggera** untuk kejadian. Anda boleh menetapkan penggera supaya berbunyi pada masa permulaan peristiwa atau pada tempoh masa yang ditetapkan sebelum peristiwa bermula untuk mengingatkan anda peristiwa tersebut akan datang.
- 5 Masukkan **Subjek** untuk peristiwa. Gunakan papan kekunci untuk menaip huruf dan nombor.

- 6 Pilih sama ada kejadian adalah sekali sahaja atau jika ia hendak diulang sebanyak **Sekali**, **Setiap hari**, **Setiap minggu**, **Setiap bulan** atau **Setiap tahun** selang masa. Jika peristiwa berulang, anda boleh juga menatal ke bawah untuk memasukkan **Tarikh tamat tempoh** untuk masa bagi peristiwa berhenti sepenuhnya.
- 7 Pilih **Simpan** dan peristiwa anda akan disimpan dalam kalendar. Kursor berbentuk empat segi akan menanda hari di mana peristiwa telah disimpan padanya.

Menambah memo

- 1 Sentuh **Menu**, dan pilih **Organizer**, kemudian **Memo**.
- 2 Pilih **Baru** dan taipkan memo anda.
- 3 Pilih **Simpan**.
- 4 Memo anda akan muncul pada skrin apabila anda membuka aplikasi memo pada kali seterusnya.

PETUA! Anda boleh mengedit memo yang sudah wujud. Pilih satu yang hendak anda edit, sentuh **Pilihan** dan pilih **Edit**.

01

02

03

04

05

06

07

08

Pengurus/Alatan

Menetapkan penggera anda

- 1 Sentuh **Menu**, dan pilih **Alatan**, kemudian **Jam penggera**.
- 2 Pilih **Baru**.
- 3 Masukkan masa yang anda hendak penggera berbunyi.
- 4 Pilih jenis yang berulang untuk menentukan sama ada anda hendak penggera anda berbunyi **Sekali, Setiap hari, Setiap Isnin - Jum, Isnin - Sabtu, Sabtu - Ahad**, atau **Pilih Isnin hingga Jumaat**.
- 5 Pilih sama ada anda hendak penggera untuk **Mengikut profil, Sentiasa berbunyi** atau **Sentiasa bergetar**.
- 6 Pilih **Bunyi** untuk memilih bunyi baru.
- 7 Masukkan nama untuk penggera atau simpan nama yang dicadangkan.
- 8 Pilih **Simpan**.

Nota:Anda boleh menyediakan sehingga 5 penggera.

Menggunakan kalkulator anda

- 1 Sentuh **Menu**, dan pilih **Alatan**, kemudian **Kalkulator**.
- 2 Tekan kekunci angka untuk input nombor.
- 3 Untuk pengiraan yang mudah, sentuh fungsi yang anda perlu (+, -, ×, ÷), diikuti dengan =.
- 4 Untuk pengiraan yang lebih kompleks, pilih **Fungsi** untuk memilih arahan.
- 5 Pilih **Kosongkan** untuk mengosongkan skrin dan memulakan pengiraan baru.

Gunakan jam randik

- 1 Sentuh **Menu**, dan pilih **Alatan**, kemudian **Jam randik**.
- 2 Pilih **Mulakan** untuk memulakan pemasa.
- 3 Pilih **Pusingan** jika anda hendak merekod masa pusingan.
- 4 Pilih **Berhenti** untuk menamatkan pemasa.
- 5 Pilih **Sambung** untuk memulakan semula jam randik pada masa anda memberhentikannya atau pilih **Tetap semula** untuk memulakan masa sekali lagi.

Menukar unit

- 1 Sentuh **Menu**, dan pilih **Alatan**, kemudian **Penukar unit**.
- 2 Pilih sama ada anda hendak menukar **Mata wang, Kawasan, Panjang, Berat, Suhu, Kelantangan** atau **Halaju**.
- 3 Pilih dari unit pengukuran yang anda hendak masukkan. Tatal ke kiri dan kanan untuk pilih unit, dan tatal ke bawah dan masukkan kuantiti unit.
- 4 Pilih unit pengukuran yang anda hendak tukarkan. Penukaran akan ditunjukkan secara automatik pada garisan di bawah.

Menambah bandar pada jam dunia anda

- 1 Sentuh **Menu**, dan pilih **Alatan**, kemudian **Jam dunia**.
- 2 Tatal ke atas, bawah, kiri atau kanan untuk menavigasi glob dan memilih benua.
- 3 Pilih **Zum masuk** untuk mengezum ke kawasan dan pilih dari bandar yang berada di dalam kawasan tersebut.
- 4 Pilih **OK** dan pilih **Ya**.

Perkhidmatan SIM

Ciri ini bergantung kepada SIM dan perkhidmatan rangkaian.

Jika kad SIM menyokong perkhidmatan SAT(yakni. Kit Alat Aplikasi SIM), menu ini akan menjadi nama perkhidmatan tertentu operator yang disimpan pada kad SIM.

01

02

03

04

05

06

07

08

Pelayar

Mengakses web

- 1 Pilih **Menu** dan pilih **Pelayar**.
- 2 Untuk mengakses laman utama Pelayar secara langsung, pilih **Rumah**. Secara alternatif pilih **Masukkan Alamat** dan taip URL yang anda ingini, diikuti oleh **Sambung**.

Nota: Kos tambahan dikenakan apabila menyambung pada perkhidmatan ini dan memuat turun kandungan. Semak caj data dengan pembekal rangkaian anda.

Menambah dan mengakses penanda buku anda

Untuk akses mudah dan cepat pada laman web kegemaran anda, anda boleh tambah penanda buku dan simpan halaman web.

- 1 Tekan **Menu** dan pilih **Pelayar**.
- 2 Pilih **Penanda Buku**. Senarai penanda buku anda akan muncul pada skrin.
- 3 Untuk menambah penanda buku baru, pilih **Pilihan** dan pilih **Penanda Buku Baru**. Masukkan nama untuk penanda buku anda diikuti dengan URL.

- 4 Tekan **Simpan**. Penanda buku anda akan muncul dalam senarai penanda buku sekarang.
- 5 Untuk mengakses penanda buku hanya tatal pada penanda buku yang diperlukan dan sentuh **Buka**. Anda akan disambungkan kepada halaman yang ditanda penanda buku anda.

Menyimpan halaman

- 1 Akses laman web yang anda perlukan seperti yang digambarkan di atas.
- 2 Pilih **Pilihan** dan tatal kepada **Simpan**, pilih Halaman ini.
- 3 Pilih **OK**.

Mengakses halaman disimpan

- 1 Tekan **Menu** dan pilih **Pelayar**.
- 2 Pilih **Laman disimpan**.
- 3 Pilih halaman yang diperlukan dan sentuh **Buka**.

PETUA! Menu ini akan membolehkan anda memadam halaman yang disimpan.

Melihat sejarah pelayar anda

- 1 Tekan **Menu** dan pilih **Pelayar**.
- 2 Pilih **Sejarah** dan pilih **OK**.
- 3 Senarai tajuk laman web yang anda akses baru-baru ini akan dipaparkan. Untuk mengakses salah satu halaman ini, tatal ke yang diperlukan dan sentuh **Sambung**.

Menukar tetapan pelayar web

- 1 Tekan **Menu** dan pilih **Pelayar**.
- 2 Pilih **Tetapan**.
- 3 Anda boleh pilih cara mengendalikan mudah alih anda, papar dan menggunakan maklumat apabila menyemak imbas internet. Anda boleh mengubah tetapan dalam **Profil Rangkaian, Mod rendering, Cache, Cookie, Sijil sekuriti, Tunjuk imej, Skrip Java** dan **Lokasi Penyimpanan**.
- 4 Sebaik sahaja anda ubah tetapan anda, pilih **OK**.

01

02

03

04

05

06

07


08

Tetapan

Dalam folder ini anda boleh menyesuaikan tetapan anda untuk menjadikan KC550 anda peribadi untuk anda.

Nota: Untuk maklumat berkenaan tetapan panggilan lihat halaman 18–19.

Menukar profil anda

Anda boleh menukar profil anda dengan pantas pada skrin siap sedia. Hanya sentuh  kemudian profil yang hendak anda aktifkan. Pilih dari **Umum**, **Senyap**, **Getar sahaja**, **Kuat** dan **Alat Dengar**.

Memperibadikan profil anda

Anda boleh memperibadikan setiap tetapan profil.

- 1 Tekan **Menu** dan pilih **Profil**.
- 2 Pilih profil yang anda hendak dan pilih **Peribadikan**.
- 3 Bagi profil **Senyap** dan **Getar sahaja**, anda boleh sesuaikan getaran. Untuk profil lain, anda boleh menukar semua bunyi kan pilihan isyarat yang tersedia dalam senarai. (Sila rujuk pada telefon bimbit anda untuk butiran.)

Menukar tarikh dan masa anda

Anda boleh menetapkan fungsi yang berkaitan dengan tarikh dan masa.

- 1 Tekan **Menu** dan pilih **Tetapan**.
- 2 Pilih **Tarikh & Masa** dan pilih dari senarai di bawah:

Tetapkan tarikh - Anda boleh memasukkan tarikh semasa.

Format tarikh - Anda boleh menetapkan format tarikh.

Tetapkan Masa - Anda boleh memasukkan masa semasa.

Format masa - Anda boleh menetapkan format masa pada 24 jam atau 12 jam.

Kemaskini Auto- Pilih **Hidupkan**, telefon akan mengemaskini secara automatik tarikh dan masa.

Menukar bahasa

Pergi ke **Tetapan** dan **Bahasa** untuk menukar bahasa sebarang teks dalam telefon anda. Sebarang perubahan akan mengubah mod input bahasa.

Menukar tetapan paparan anda

1 Tekan **Menu** dan pilih **Tetapan**.

2 Pilih **Paparan** dan pilih daripada:

Kertas hias dinding - Pilih kertas hias dinding untuk muncul pada paparan skrin anda.

Jam - Pilih untuk mempunyai masa dan tarikh kelihatan pada skrin siap sedia anda.

Pemasa lampu latar - Pilih berapa lama lampu latar akan kekal.

PETUA! Lebih lama lampu latar dihidupkan, lebih banyak kuasa bateri digunakan dan anda mungkin perlu untuk cas telefon anda lebih kerap.

Pintasan skrin utama - Pilih Hidup untuk memaparkan pintasan kekunci navigasi 4 dan menu seperti gambar di tengah-tengah skrin siap sedia.

Saiz Huruf - Ubah saiz fon berikut: Menu, Dailan dan Mesej.

Tema - Anda boleh mengubah keseluruhan rupa skrin anda dengan pantas.

Gaya menu - Tukar paparan menu daripada Pameran grid kepada Pameran senarai atau sebaliknya.

Stail huruf utama - Laraskan jenis fon.

Gaya huruf dail - Laraskan gaya fon semasa anda menaip nombor telefon.

Teks sedia - Pilih untuk tambah mesej pada skrin siap sedia anda.

Nama rangkaian - Pilih untuk papar atau sembunyi nama rangkaian.

01

02

03

04

05

06

07

08

Tetapan

Tukarkan tetapan keselamatan anda

Tukarkan tetapan keselamatan anda untuk melindungi KC550 anda dan maklumat penting.

- 1 Tekan **Menu** dan pilih **Tetapan**.
- 2 Pilih **Keselamatan** dan pilih dari senarai di bawah:

Pemintaan kod PIN - Pilih kod PIN yang diperlukan apabila anda menghidupkan telefon anda.

Kunci telefon - Pilih kod keselamatan untuk mengunci telefon anda, **Apabila kuasa hidup, Apabila SIM ditukar** atau **Segera**.

Pengesan anti curi telefon- Pilih untuk mengunci pad sentuh.

Tukar kod - Tukar **Kod keselamatan anda, kod PIN1** atau **kod PIN2**.

Menggunakan mod penerbangan

Gunakan fungsi ini untuk menukar ke mod penerbangan **On** atau **Off**. Anda tidak akan boleh membuat panggilan, sambung kepada Internet, hantar mesej atau menggunakan Bluetooth apabila **Mod penerbangan** di **Off**.

Menetapkan semula telefon anda

Gunakan **Reset** untuk menetapkan semula tetapan pada definisi kilang mereka. Anda memerlukan Kod keselamatan untuk mengaktifkan fungsi ini.

Melihat status memori

KC550 anda mempunyai tiga memori tersedia: telefon, Kad SIM dan kad memori luaran (anda mungkin perlu membeli

Anda boleh menggunakan pengurus memori untuk menentukan berapa banyak memori digunakan dan lihat berapa banyak ruang tersedia.

Tekan **Menu** dan pilih **Tetapan**. Pilih **Status memori** dan anda dapat melihat status semasa memori (Lazim, Dikhaskan, Kad SIM dan Memori luaran) dalam KC550 anda.

PETUA! Lihat halaman 10 untuk maklumat berkenaan **memasukkan kad memori**.

Menukar tetapan Bluetooth anda

- 1 Tekan **Menu** dan pilih **Kesambungan**, kemudian pilih **Bluetooth**.
- 2 Pilih **Tetapan Bluetooth**. Buat perubahan anda pada:

Keterlihatan saya - pilih sama ada untuk **Ya** atau **Tidak** peranti anda daripada peranti lain.

Nama saya - Masukkan nama bagi KC550 anda.

Alamat saya - Tukar alamat Bluetooth anda.

Menukar tetapan kesambungan anda

Tetapan sambungan telah ditetapkan oleh operator rangkaian anda, jadi anda boleh nikmati telefon baru anda dari mati. Jika anda hendak mengubah sebarang tetapan, gunakan menu ini.

Tekan **Menu** dan pilih **Kesambungan**. Pilihan anda ialah:

Bluetooth - Sediakan KC550 anda untuk kegunaan Bluetooth. Anda boleh menyesuaikan kelihatan anda pada peranti lain atau mencari pada peranti yang diperpasangkan dengan telefon anda.

Rangkaian - KC550 anda menyambung secara automatik kepada rangkaian yang anda mahu. Untuk mengubah tetapan ini gunakan menu ini. Anda juga boleh tambah pusat akses yang baru menggunakan menu ini.

Sambungan USB - Pilih **perkhidmatan data** dan segerakkan KC550 anda menggunakan perisian LG PC Suite untuk menyalin fail dari telefon anda. Jika anda telah masukkan kad memori pilih **Penyimpanan massa** untuk gunakan telefon anda dengan cara yang sama seperti anda gunakan USB stick. Sambungkan komputer anda, seret dan putuskan fail kepada folder peranti boleh tanggal KC550. Lihat halaman 41~42 untuk butiran lanjut.

01

02

03

04

05

06

07

08

Tetapan

Pasangankan dengan peranti Bluetooth lain

Dengan pasangankan KC550 anda dan peranti lain, anda boleh menetapkan sambungan kod laluan terlindung. Ini bermakna pasangan anda lebih terjamin.

- 1 Semak Bluetooth anda **On** dan Kelihatan(**Ya**). Anda boleh menukar keterlihatan anda dalam menu **Tetapan Bluetooth**, dengan memilih **Keterlihatan saya**, kemudian **Ya**.
- 2 Pilih **Senarai peranti** daripada menu Bluetooth dan pilih **Baru**.
- 3 KC550 anda akan mencari peranti. Setelah pencarian selesai **Pasangan** dan **Muatkan semula** akan muncul pada skrin.
- 4 Pilih peranti yang ingin anda pasangankan, pilih **Pasangan** dan masukkan kod laluan dan tekan **OK**.
- 5 Telefon anda kemudian akan menyambung pada peranti yang lain, yang mana anda perlu memasukkan kod laluan yang sama.
- 6 Sambungan kod laluan terlindung Bluetooth anda sudah sedia.

Menggunakan alat dengar Bluetooth

- 1 Semak Bluetooth anda **On** dan Kelihatan(**Ya**).
- 2 Ikuti arahan yang datang dengan alat dengar anda dan pasangankan peranti anda.
- 3 KC550 anda secara automatik akan ditukar kepada profil Alat dengar. Anda juga menyambung pada alat dengar Bluetooth untuk membuat dan menerima panggilan.

Aksesori

Aksesori ini dibekalkan dengan KC550 anda.

Pengecas



Bateri



Alat dengar Stereo



Kabel data dan CD

Sambung dan segerakkan KC550 dan PC anda.



Panduan Pengguna

Ketahui lanjut tentang KC550 anda.

Nota

- Sentiasa guna aksesori tulen LG. Kegagalan berbuat demikian mungkin membatalkan waranti anda.
- Aksesori mungkin berlainan di wilayah yang berlainan; sila semak dengan syarikat atau agen perkhidmatan wilayah anda untuk pertanyaan lanjut.

01

02

03

04

05

06

07

08

Perkhidmatan rangkaian Data teknikal

Telefon wayarles digambarkan dalam panduan ini diluluskan untuk digunakan pada rangkaian GSM 900, DCS 1800 dan PCS 1900.

Beberapa ciri yang dimasukkan dalam panduan ini disebut Perkhidmatan Rangkaian. Ini adalah perkhidmatan khas yang anda boleh aturkan melalui pembekal khidmat wayarles anda. Sebelum anda boleh mengambil kesempatan untuk mana-mana Perkhidmatan Rangkaian ini, anda perlu melanggannya melalui pembekal khidmat anda dan dapatkan arahan untuk penggunaannya dari pembekal khidmat anda.

Umum

Nama produk : KC550

Sistem : GSM 900 / DCS 1800 / PCS 1900

Suhu Ambien

Maks : +55°C (menyahcas)

+45°C (mengecas)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KC550

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 60950-1 : 2001
EN 50360/EN 60361 : 2001
EN 301 511 V9.0.2
EN 300 328 V 1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. March. 2008


Signature of representative

Garis panduan untuk penggunaan selamat dan efisien

Sila baca garis panduan yang mudah ini. Tidak mengikut garis panduan ini mungkin berbahaya atau tidak sah. Maklumat terperinci lanjut diberi dalam manual ini.

Pendedahan kepada tenaga frekuensi radio

Maklumat Pendedahan kepada gelombang radio dan Kadar Penyerapan Khusus (SAR)

Telefon mudah alih model KC550 telah direka bentuk untuk mematuhi keperluan keselamatan boleh guna bagi pendedahan kepada gelombang radio. Keperluan ini adalah berdasarkan garis panduan saintifik yang termasuk margin keselamatan yang bertujuan memastikan keselamatan bagi semua orang, tidak kira umur atau tahap kesihatan.

- Garis panduan bagi pendedahan kepada gelombang radio menggunakan unit ukuran yang disebut sebagai Kadar Penyerapan Khusus, atau SAR. Ujian-ujian bagi SAR dijalankan menggunakan kaedah yang dipiawaikan dengan telefon memancarkan pada aras kuasa diperakui yang tertinggi dalam semua jalur frekuensi.

- Walaupun terdapat perbezaan antara tahap SAR pelbagai model telefon LG, ia semua direka bentuk untuk memenuhi garis panduan relevan bagi pendedahan kepada gelombang radio.
- Had SAR yang disyorkan oleh Suruhanjaya Antarabangsa mengenai Perlindungan Sinaran Bukan-Ion (Commission on Non-Ionizing Radiation Protection) (ICNIRP), iaitu 2 W/Kg dipuratakan ke atas sepuluh (10) gram tisu.
- Nilai SAR yang tertinggi untuk telefon model ini yang diuji oleh DASY4 untuk penggunaan pada telinga ialah 0.348 W/Kg (10g) dan apabila dipakai pada badan ialah 0.665 W/Kg (10g).
- Maklumat SAR bagi penduduk di negara/kawasan yang telah mengambil had SAR yang disyorkan oleh Institut Jurutera Elektrik dan Elektronik (Institute of Electrical and Electronics Engineers) (IEEE), iaitu 1.6 W/Kg dipuratakan ke atas satu (1) gram tisu.

Penjagaan dan penyelenggaraan produk

AMARAN

Gunakan hanya bateri, pengecas dan aksesori yang diluluskan untuk penggunaan khusus bagi model telefon ini. Penggunaan sebarang jenis lain boleh mentaksahkan sebarang kelulusan atau waranti yang berkaitan dengan telefon ini, dan mungkin merbahaya.

- Jangan buka unit ini. Bawanya ke juruteknik perkhidmatan yang kelayakan apabila kerja pembaikan diperlukan.
- Jauhkan dari perkakas elektrik seperti TV, radio, dan komputer peribadi.
- Unit ini hendaklah dijauhkan daripada sumber haba seperti radiator atau dapur.
- Jangan jatuhkan.
- Jangan biarkan unit ini didedahkan pada getaran atau kejutan mekanikal.
- Off telefon ditempat larangan telefon bimbit. Jangan gunakan telefon di dalam hospital kerana mungkin mengganggu peralatan hospital.
- Jangan sentuh telefon dengan tangan yang lembab semasa telefon sedang dicas. Kemungkinan akan terjadi renjatan elektrik atau telefon akan rosak.
- Jangan cas di kawasan berhampiran bahan mudah terbakar kerana telefon akan menjadi panas dan boleh menyebabkan kebakaran.
- Gunakan kain yang kering untuk membersihkan bahagian luar unit ini. (Jangan gunakan pelarut solvent seperti benzena, pencair atau alkohol.)
- Jangan cas telefon di atas perabot yang lembut.
- Cas telefon di kawasan yang mempunyai pengudaraan yang baik.
- Jangan dedahkan unit ini kepada asap atau habuk yang berlebihan.
- Jangan simpan telefon di sebelah kad kredit atau tiket pengangkutan; ia boleh menjejaskan maklumat pada jalur magnetik.
- Jangan ketik skrin dengan objek yang tajam; ia boleh merosakkan telefon.
- Jangan dedahkan telefon kepada cecair atau kelembapan.
- Guna aksesori seperti fon telinga dengan berhati-hati. Jangan sentuh antenna jika tidak perlu.

Garis panduan untuk penggunaan selamat dan efisien

Pengendalian telefon yang efisien

Peranti elektronik

Semua telefon mudah alih mungkin mendapat gangguan, yang boleh menjejaskan prestasi.

- Jangan gunakan telefon mudah alih anda berhampiran kelengkapan perubatan tanpa meminta kebenaran. Elakkan daripada meletakkan telefon di atas perentak jantung iaitu dalam poket dada anda.
- Sesetengah alat bantuan pendengaran mungkin diganggu oleh telefon mudah alih.
- Gangguan yang sedikit boleh menjejaskan TV, radio, PC, dan sebagainya.

Keselamatan di jalan raya

Periksa undang-undang dan peraturan mengenai penggunaan telefon mudah alih di kawasan anda memandu.

- Jangan gunakan telefon pegang tangan semasa memandu.
- Beri perhatian penuh kepada pemanduan anda.
- Gunakan kit bebas tangan, jika tersedia.
- Keluar dari jalan raya dan letak kereta sebelum membuat atau menjawab panggilan jika keadaan pemanduan memerlukan anda berbuat demikian.

- Tenaga RF mungkin menjejaskan sesetengah sistem elektronik dalam kenderaan anda seperti stereo kereta dan kelengkapan keselamatan.
- Apabila kenderaan anda dilengkapi beg udara, jangan halangnya dengan kelengkapan wayarles yang dipasang atau yang mudah alih. Ia mungkin tidak berfungsi atau menyebabkan kecederaan serius disebabkan prestasi yang tidak betul.

Jika anda mendengar muzik ketika bergerak dan berjalan, sila pastikan bahawa kelantangannya berada pada paras yang berpatutan agar anda sedar akan keadaan di sekeliling anda. Ini ialah terutamanya semasa berdekatan dengan jalan.

Elakkan kerosakan kepada pendengaran anda

Kerosakan kepada pendengaran anda boleh berlaku jika anda terdedah kepada bunyi yang kuat untuk tempoh yang lama. Kami dengan ini mengesyorkan anda tidak menghidupkan atau mematikan telefon bimbit yang berhampiran dengan telinga anda. Kami juga menyarankan bahawa kelantangan muzik dan panggilan ditetapkan pada paras yang berpatutan.

Bahagian Kaca

Sebahagian dari peranti telefon anda diperbuat dari kaca. Kaca ini akan retak atau pecah jika telefon anda terjatuh ke atas permukaan yang keras atau menerima impak yang kuat. Jika kaca retak atau pecah, dinasihatkan supaya tidak memegang atau cuba untuk membuangnya. Sila berhenti menggunakan telefon anda sehingga kaca yang retak atau pecah telah digantikan oleh agen yang dilantik.

Kawasan letupan

Jangan gunakan telefon di mana peletupan sedang dijalankan. Perhatikan sekatan, dan patuhi sebarang peraturan atau undang-undang.

Suasana berpotensi letupan

- Jangan gunakan telefon anda di tempat pengisian minyak. Jangan gunakan berhampiran bahan bakar atau bahan kimia.
- Jangan angkut atau simpan gas atau cecair mudah terbakar, atau bahan letupan di dalam petak simpanan kenderaan anda, yang mengandungi telefon bimbit anda dan aksesori-aksesorinya..

Dalam kapal terbang

Peranti-peranti wayarles boleh menyebabkan gangguan di dalam pesawat.

- Matikan telefon mudah alih anda sebelum menaiki apa-apa kapal terbang.
- Jangan menggunakannya apabila mendarat di lapangan terbang tanpa izin anak kapal .

Kanak-kanak

Simpan telefon di tempat yang selamat jauh dari capaian kanak-kanak kecil. Ia termasuk bahagian-bahagian yang kecil yang, jika tertanggal mungkin menyebabkan bahaya tercekik.

Panggilan kecemasan

Panggilan kecemasan mungkin tidak tersedia di bawah semua rangkaian mudah alih. Oleh itu, anda tidak seharusnya bergantung pada mana-mana telefon untuk panggilan kecemasan. Periksa dengan pembekal khidmat tempatan anda .

Maklumat dan penjagaan bateri

- Anda tidak perlu menyahcaskan bateri anda sepenuhnya sebelum mengecas semula. Tidak seperti sistem bateri yang lain, tiada kesan memori yang boleh menjejaskan prestasi bateri.

Garis panduan untuk penggunaan selamat dan efisien

- Gunakan hanya bateri dan pengecas LG. Pengecas LG direka bentuk untuk memaksimumkan hayat bateri.
- Jangan buka atau litar pintaskan pek bateri.
- Pastikan sentuhan logam pada bateri sentiasa bersih.
- Gantikan bateri apabila ia tidak lagi memberi prestasi yang boleh diterima. Pek bateri boleh dicas semula beratus-ratus kali sehingga ia perlu digantikan.
- Cas semula bateri jika ia tidak digunakan buat tempoh masa yang lama untuk memaksimumkan kebolehgunaan.
- Jangan dedahkan pengecas bateri kepada cahaya matahari langsung atau gunakannya pada kelembapan yang tinggi, seperti di bilik air.
- Jangan biarkan bateri di tempat yang panas atau sejuk, ini mungkin menjejaskan prestasi bateri.
- Terdapat risiko letupan jika bateri digantikan dengan jenis yang salah.
- Lupuskan bateri yang telah digunakan mengikut arahan pengilang. Sila kitar semula apabila boleh. Janga lupuskan sebagai sampah rumah tangga.
- Jika anda hendak menggantikan bateri, bawa ia ke pusat servis LG Electronics atau penjual yang disahkan untuk mendapatkan bantuan.
- Sentiasa tanggalkan pengecas dari soket dinding selepas telefon dicas sepenuhnya untuk menjimatkan kuasa pengecas daripada penggunaan yang tidak diperlukan.



LIMITED WARRANTY CARD

 LG ELECTRONICS SINGAPORE PTE LTD

To benefit from the limited warranty, the customer is advised to read LG Electronics Singapore Pte Ltd Limited Warranty terms together with the Important and Care & Maintenance sections provided in the User's Manual.

Limited Warranty

LG Electronics Singapore Pte Ltd warrants that LG Mobile Phones ("LG") cellular products and/or genuine LG accessories ("Product") are free from defects in material and workmanship, according to the following terms and conditions:

1. The limited warranty for the mobile phone product, data products and all genuine LG accessories (except battery packs) extends for the first twelve (12) months beginning on the date of purchase of the Product.
free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
2. The limited warranty for genuine LG battery packs extends for the first six (6) months beginning on the date of purchase of Product.
6. Repaired Product will be warranted for the balance of the original warranty period.
3. The limited warranty extends only to the original purchaser ("Customer") of the Product. It is not assignable or transferable to any subsequent purchaser/end user.
7. Upon request from LG Electronics Singapore Pte Ltd or authorized service centre, the Customer must provide purchase receipt or other information to prove the date and place of purchase.
4. The limited warranty extends to only Product purchased in Singapore and distributed by LG Electronics Singapore Pte Ltd.
8. WHAT THIS WARRANTY DOES NOT COVER:
(1) Defects or damages resulting from use of the product in other than its normal and customary manner.
(2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG Electronics Singapore Pte Ltd, including damage caused by dropping, blown fuses, spills of food or liquid.
(3) Breakage or damage to antennas
(4) Defects or malfunctions of the Product not notified by customer during the warranty period.
5. During the limited warranty period, LG Electronics Singapore Pte Ltd or its authorized service centres will repair or replace, at LG Electronics Singapore Pte Ltd option, any defective Products or parts thereof with new or factory rebuilt replacement items, and return the Product to the Customer in working condition. Customer will not be required to pay for either parts or labor in repairing or replacing the Product provided such defects are covered under the terms and conditions of this limited warranty card. All replaced parts, boards and equipment shall become property of LG Electronics Singapore Pte Ltd. The external housing and cosmetic parts shall be

(5) Products which have had the serial number or IMEI number removed or tampered with.

(6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.

(7) Damage resulting from use of non-LG approved accessories.

(8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

(9) Products operated outside published maximum ratings.

(10) Products used or obtained in a rental program.

(11) Consumables (such as fuses).

(12) The defect or damage was caused by defective function of the cellular system or by inadequate signal reception by external antenna.

(13) The Product was used with or connected to accessory not supplied by LG, not fit for use with LG mobile phones or used in other than its intended use.

(14) The battery was short circuited or seals of the battery enclosure or cells are broken or show evidence of tampering or the battery was used in equipment other than its intended use.

9. CONDITIONS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS SINGAPORE PTE LTD SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

10. LG Electronics Singapore Pte Ltd neither assumes nor authorizes any authorized service centre or any person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty.

11. All warranty information, product features and specifications are subject to change without notice.

Customer's Copy**LIMITED WARRANTY CARD**

● LG Mobile Phone Customer Care Centre:
3 Leng Kee Road Singapore 159087
Tel: (65) 6512-0557
Web : www.lge.com.sg
Operating hours
Mon - Fri : 8:30am - 5:30pm
Sat : 8:30am - 2:00pm

The customer must produce this Limited Warranty Card and the original proof of purchase when sending in the LG mobile phone to LG Mobile Phone Customer Care Centre for repair. In the event that either of these documents is not produced, service charges together with the payment for any parts being replaced are applicable and the Customer will be charged accordingly.

Model No.	Owner's Name	
IMEI No.	Address	Contact No
Serial No.		(H)
Date of Purchase	Authorized Dealer's Stamp	
Handphone No.		
Remarks	For limited warranty provided by LG to be valid, the Dealer's stamp must be endorsed on this card	

Please
Affix
Stamp
Here

 **LG Mobile Phone Customer Center**

3 Leng Kee Road
Singapore 159087

Tel : 65120577
Fax : 64795598

LG Electronics Singapore Pte Ltd's copy

LIMITED WARRANTY CARD

Please fill up the following and mail back to LG Electronics Singapore Pte Ltd within 7 days from date of purchase to validate the limited warranty for your LG mobile phone.

Model No.	Owner's Name	
IMEI No.	Address	Contact No (H)
Serial No.		(O)
Date of Purchase	Authorized Dealer's Stamp <small>For limited warranty provided by LG to be valid, the Dealer's stamp must be endorsed on this card</small>	
Handphone No.		
Remarks		



LIMITED WARRANTY CARD

 LG Electronics (M) Sdn Bhd

To benefit from the limited warranty, the customer is advised to read LG Electronics (M) Sdn Bhd Limited Warranty terms together with the Important and Care & Maintenance sections provided in the User's Manual.

Limited Warranty

LG Electronics (M) Sdn Bhd warrants that LG Mobile Phones ("LG LG") cellular products and/or genuine LG accessories ("Product") are free from defects in material and workmanship, according to the following terms and conditions:

1. The limited warranty for the mobile phone product, data products and all genuine LG accessories (except battery packs) extends for the first twelve (12) months beginning on the date of purchase of the Product.
free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
2. The limited warranty for genuine LG battery packs extends for the first six (6) months beginning on the date of purchase of Product.
6. Repaired Product will be warranted for the balance of the original warranty period.
3. The limited warranty extends only to the original purchaser ("Customer") of the Product. It is not assignable or transferable to any subsequent purchaser/end user.
7. Upon request from LG Electronics (M) Sdn Bhd or authorized service centre, the Customer must provide purchase receipt or other information to prove the date and place of purchase.
4. The limited warranty extends to only Product purchased in Malaysia and distributed by Authorized distributors.
8. WHAT THIS WARRANTY DOES NOT COVER:
(1) Defects or damages resulting from use of the product in other than its normal and customary manner.
(2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG Electronics (M) Sdn Bhd, including damage caused by dropping, blown fuses, spills of food or liquid.
(3) Breakage or damage to antennas
(4) Defects or malfunctions of the Product not notified by customer during the warranty period.
5. During the limited warranty period, LG Electronics (M) Sdn Bhd or its authorized service centres will repair or replace, at LG Electronics (M) Sdn Bhd option, any defective Products or parts thereof with new or factory rebuilt replacement items, and return the Product to the Customer in working condition. Customer will not be required to pay for either parts or labor in repairing or replacing the Product provided such defects are covered under the terms and conditions of this limited warranty card. All replaced parts, boards and equipment shall become property of LG Electronics (M) Sdn Bhd. The external housing and cosmetic parts shall be

(5) Products which have had the serial number or IMEI number removed or tampered with.

(6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.

(7) Damage resulting from use of non-LG approved accessories.

(8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

(9) Products operated outside published maximum ratings.

(10) Products used or obtained in a rental program.

(11) Consumables (such as fuses).

(12) The defect or damage was caused by defective function of the cellular system or by inadequate signal reception by external antenna.

(13) The Product was used with or connected to accessory not supplied by LG, not fit for use with LG mobile phones or used in other than its intended use.

(14) The battery was short circuited or seals of the battery enclosure or cells are broken or show evidence of tampering or the battery was used in equipment other than its intended use.

9. CONDITIONS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS (M) SDN BHD SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

10. LG Electronics (M) Sdn Bhd neither assumes nor authorizes any authorized service centre or any person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty.

11. All warranty information, product features and specifications are subject to change without notice.

Customer's Copy

● LG Electronics (M) Sdn Bhd (50566-U)
 Level 1 & 2, Kelana Brem Tower 2,
 Jalan Stadium SS 7/15, 47301 Kelana Jaya,
 Selangor Darul Ehsan, Malaysia.
 LG Customer Care Line : 1800-822-822
 Opening Hours: 9.00am to 6.00pm (Mon-Fri)

LIMITED WARRANTY CARD

The customer must produce this Limited Warranty Card and the original proof of purchase when sending in the LG mobile phone to LG Mobile Phone Customer Care Centre for repair. In the event that either of these documents is not produced, service charges together with the payment for any parts being replaced are applicable and the Customer will be charged accordingly.

Model No.	Owner's Name	
IMEI No.	Address	Contact No
Serial No.		(H)
Date of Purchase	Authorized Dealer's Stamp	
Handphone No.		
Remarks	For limited warranty provided by LG to be valid, the Dealer's stamp must be endorsed on this card	

Authorized Service Centre - Hello Service Centre

Headquarter Level 1 & 2, Kelana Brem Tower 2, Jalan Stadium SS7/15, 47301 Kelana Jaya, Selangor	Penang Branch 82A, Jalan Air Hitam, 11500 Penang	Johore Baharu Branch 217, Taman Johor Raya, 81100 Johor Baru, Johor.	Malacca Branch No. 661, Grid Floor, Jalan Melaka Raya 8, Taman Melaka Raya, 75000 Malacca.	Penang Branch 2-A Brown Road, Penang.	
Ipoh Branch No. 8, Medan Ipoh 4, Medan Baru Ipoh, 31400 Ipoh, Perak	Malacca Branch 357A & 357A-1, Puringgi Centre, Taman Puringgi Jaya, 75400 Malacca.	Kuantan Branch A-265, Jalan Puth, 20200 Kuantan, Pahang	Kuantan Branch No. 8-200, Trm Besarah Ris, Jln Besarah, 25000 Kuantan, Pahang.	Ipoh Branch No. 26A, Pejabat GreenTown 1, Pusat Pentapangan GreenTown, 33450 Ipoh, Perak	J.Baharu Branch 32A, Jln Denda 17, Trm Johor Jaya, 81100 Johore Baharu, Johor.
Sabah Branch Lot 7, Grid 1 1 st Floor, (DBKX Shop No 5-0 & 5-1), Blok B Transis Centre, Off Ring Road, 88450 Kota Kinabalu, Sabah.	Sarawak Branch Lot 9625, Grid 1 1 st Floor, Section 64, K.T.L.D, Jalan Pending, 69400 Kuching, Sarawak.	K.Kinabalu Branch Suite 1 & 6 E11, 6 th Floor, CTR Tower, No 1, Jln Centre Point, 88000 K. Kinabalu.	Kuching Branch Lot 2096, No 242, Grid Floor, Twin Tower Centre, 2 Mile, Rock Road, 93200 Kuching.		

Please
Affix
Stamp
Here



LG Electronics (M) Sdn Bhd (50566-U)

Level 1 & 2, Kelana Brem Tower 2, Jalan Stadium SS 7/15,
47301 Kelana Jaya, Selangor Darul Ehsan, Malaysia.

Tel : 603-7491 2888 Fax: 603-7491 9209

LG Electronics (M) Sdn Bhd

LIMITED WARRANTY CARD

Please fill up the following and mail back to LG Electronics (M) Sdn Bhd within 7 days from date of purchase to validate the limited warranty for your LG mobile phone.

Model No.	Owner's Name	
IMEI No.	Address	Contact No (H)
Serial No.		(O)
Date of Purchase	Authorized Dealer's Stamp	
Handphone No.		
Remarks		

For limited warranty provided by LG to be valid, the Dealer's stamp must be endorsed on this card

