

CE 0168 ⓘ

P/N : MMB0321306 (1.0) G

LG ELECTRONICS INC.

KC910 คู่มือการใช้

KC910 คู่มือการใช้



ไทย
ENGLISH

Bluetooth QD ID B014448



ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ

คู่มือการใช้ **KC910**



ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น
KC910 ของ LG ที่ทันสมัยมีขนาดกะทัดรัด ออก
แบบให้ทำงานด้วยการใช้เทคโนโลยีการสื่อสาร
เคลื่อนที่แบบดิจิตอลใหม่ล่าสุด



การทิ้งผลิตภัณฑ์เก่า

- 1 สัญลักษณ์รูปถังขยะแบบมีล้อพร้อมเครื่องหมายกากบาทขีดฆ่าที่
มาพร้อมผลิตภัณฑ์ หมายความว่าผลิตภัณฑ์นั้นอยู่ภายใต้
ข้อกำหนดของ European Directive 2002/96/EC
- 2 ผลิตภัณฑ์อิเล็กทรอนิกส์และทางไฟฟ้าทั้งหมดต้องจัดทิ้งแยก
จากขยะเทศบาล โดยจัดทิ้งในพื้นที่จัดเก็บที่ระบุไว้โดยเฉพาะ
โดยรัฐหรือเจ้าหน้าที่ในพื้นที่
- 3 การทิ้งผลิตภัณฑ์เก่าอย่างถูกต้องจะช่วยปกป้องผลกระทบในเชิง
ลบต่อสิ่งแวดล้อมและสุขภาพ
- 4 สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการทิ้งผลิตภัณฑ์เก่าของคุณ โปรด
ติดต่อเจ้าหน้าที่ในพื้นที่ของคุณ ฝ่ายบริการด้านการจัดเก็บขยะ
หรือร้านค้าที่คุณซื้อผลิตภัณฑ์นั้น

การติดตั้ง	01
หน้าจอลหลักของคุณ	02
การทำงานพื้นฐาน	03
เริ่มต้นงานสร้างสรรค์	04
เริ่มต้นการจัดการ	05
เว็บไซต์	06
การตั้งค่า	07
อุปกรณ์เสริม	08

สารบัญ

การติดตั้ง

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ .. 8
ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ. 10
การใส่ USIM และแบตเตอรี่ 11
การตรวจความจำ 14
แผนผังเมนู..... 16

หน้าจอหลักของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส 17
ปุ่มดวน 18
แถบสถานะ..... 19
การเปลี่ยนสถานะจากแถบสถานะ 20
การใช้ฟังก์ชันการทำงานหลายอย่าง 20

การทำงานพื้นฐาน

การโทร 21
การโทรออกหรือการสนทนาทางวิดีโอ 21
การโทรออกโดยใช้รายชื่อ 21
การรับสายและการปฏิเสธสายเรียกเข้า 22
ตัวเลือกต่างๆ ระหว่างใช้สาย 23
การปรับระดับเสียงสนทนา..... 24
โทรดวน 24
การใช้สายที่สอง..... 24
การบีต DTMF 25
การดูบันทึกการโทร 25
การใช้การโอนสาย 26
การใช้การป้องกันการโทร 26
การเปลี่ยนการตั้งค่าการโทรทั่วไป ... 27

การเปลี่ยนการตั้งค่าการสนทนาทางวิดีโอ 28
รายชื่อ..... 29
การค้นหารายชื่อ 29
การเพิ่มรายชื่อใหม่ 29
ตัวเลือกต่างๆ ของรายชื่อ..... 30
การสร้างกลุ่ม 31
การเปลี่ยนการตั้งค่าของรายชื่อ..... 31
การดูข้อมูล 33
ข้อความ 34
ข้อความ..... 34
การส่งข้อความ 34
การป้อนข้อความ..... 35
ระบบช่วยสะกดคำ T9 35
การป้อนตัวอักษรด้วยตนเอง 35
แป้นพิมพ์ 36
การจดจำลายมือ 36
การตั้งค่าอีเมล 39
การตั้งขอมูลอีเมล 41
การส่งอีเมลโดยใช้แอคเคาท์ใหม่ 41
การเปลี่ยนการตั้งค่าอีเมล 42
โฟลเดอร์ข้อความ 43
การจัดการข้อความ..... 43
การใช้ข้อความอัตโนมัติ 44
การใช้อีโมติคอน..... 44
การเปลี่ยนการตั้งค่าข้อความตัวอักษร 44
การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย 45
การเปลี่ยนการตั้งค่าอื่นๆ..... 46

เริ่มต้นงานสร้างสรรค์

กล้องถ่ายรูป	47
การถ่ายภาพคววน	47
หลังจากที่ถ่ายภาพแล้ว	48
ทำความเข้าใจกับช่องมองภาพ	49
การใช้แฟลช	50
การเลือกโหมดชัตเตอร์	50
การปรับการรับแสง	51
การถ่ายภาพต่อเนื่อง	51
การถ่ายภาพพาโนรามา	52
การใช้การตั้งค่าขั้นสูง	52
การตั้งค่าคู่มืออย่าง	52
การตั้งค่าอื่นๆ	53
การเปลี่ยนขนาดภาพ	55
การเลือกเอฟเฟกต์สี	55
การใช้กล้องถ่ายรูปภายใน	56
การดูรูปภาพที่บันทึกไว้	56
กล้องวิดีโอ	57
การถ่ายวิดีโอคววน	57
หลังจากที่ถ่ายวิดีโอแล้ว	58
ทำความเข้าใจกับช่องมองภาพ	59
การปรับการรับแสง	60
การใช้การตั้งค่าขั้นสูง	60
การเปลี่ยนขนาดของภาพวิดีโอ	61
การเลือกโหมดสี	62
การใช้กล้องถ่ายวิดีโอตัวใน	62
การดูวิดีโอที่บันทึกไว้	63
การดูวิดีโอบนโทรทัศน์	63

รูปภาพและวิดีโอ	64
การดูรูปภาพและวิดีโอ	64
การใช้การชมขณะดูวิดีโอหรือ ภาพถ่าย	64
การปรับระดับเสียงขณะดูวิดีโอ	64
การบันทึกภาพจากวิดีโอ	65
การดูรูปภาพแบบภาพสไลด์	65
การตั้งค่ารูปภาพเป็นพื้นหลัง	66
การแก้ไขรูปภาพ	66
การเพิ่มข้อความลงในรูปภาพ	67
การเพิ่มเอฟเฟกต์ลงในรูปภาพ	68
การปรับรูปภาพ	69
การแปลงรูปภาพ	69
การเน้นสีในรูปภาพ	69
การสลับสีในรูปภาพ	70
การแก้ไขวิดีโอ	70
การตัดความยาวของวิดีโอ	70
การรวมวิดีโอสองเรื่องเข้าด้วยกัน	71
การรวมรูปภาพเข้ากับวิดีโอ	71
การเพิ่มข้อความลงในวิดีโอ	71
การซ่อนรูปภาพ	72
การใส่รายการบันทึกเสียง	72
การใส่वादแทร็คลงในวิดีโอ	73
การเปลี่ยนความเร็วของวิดีโอ	73
การใส่เอฟเฟกต์การเคลื่อนไหว	74
มัลติมีเดีย	76
รูปภาพ	76
เมนูตัวเลือกภาพส่วนตัว	76

สารบัญ

การส่งรูปภาพ.....	77
การใช้รูปภาพ.....	77
การแก้ไขภาพของคุณ.....	78
การพิมพ์ภาพ.....	78
การย้ายหรือคัดลอกรูปภาพ.....	78
การสร้างภาพสไลด์.....	79
การตรวจสอบสถานะหน่วยความจำ ..	79
เสียง.....	79
การใช้เสียง.....	79
วิดีโอ.....	80
การใช้ตัวเลือกขณะหยุดวิดีโอชั่วคราว	80
การส่งวิดีโอคลิป.....	80
เกมส์และแอปพลิเคชัน.....	81
การดาวน์โหลดเกมส์.....	81
การเล่นเกมส์.....	81
การใช้เมนูตัวเลือกของเกมส์.....	81
แฟลชคอนเทนท.....	82
การดูไฟล์ SWF/ SVG.....	82
การใช้ตัวเลือกในการดูไฟล์ SWF/ SVG.....	82
เอกสาร.....	82
การดูไฟล์.....	82
การโอนไฟล์ไปที่โทรศัพท์.....	83
อื่นๆ.....	83
เพลง.....	85
การโอนเพลงไปยังโทรศัพท์.....	85
การเล่นเพลง.....	86
การใช้ตัวเลือกขณะเล่นเพลง.....	87

การสร้างรายการเพลง.....	87
การแก้ไขรายการเพลง.....	88
การลบรายการเพลง.....	88
การใช้วิทยุ.....	88
การคนหาสถานี.....	89
การรีเซ็ตสถานี.....	89
การฟังวิทยุ.....	89

เริ่มต้นการจัดการ

สมุดบันทึก.....	90
การเพิ่มเหตุการณ์ลงในปฏิทิน.....	90
การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน.....	90
การเพิ่มรายการลงในสิ่งที่ต้องทำ.....	91
การแบ่งปันสิ่งที่ต้องทำ.....	91
การใช้ตัวค้นหาวันที่.....	91
การตั้งเวลาปลุก.....	92
การเพิ่มบันทึก.....	92
บันทึกเสียง.....	93
การบันทึกเสียงหรือเสียงพูด.....	93
การส่งรายการบันทึกเสียง.....	93
การใช้เครื่องคิดเลข.....	94
การแปลงหน่วย.....	94
การใส่รายชื่อกาจับเวลา.....	94
การใส่ชื่อเมืองลงในเวลาทั่วโลก.....	95
เพื่อนจ้อกจ๊ก.....	95
PC Sync.....	96
การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์.....	96

การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์	96
การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์	97
การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์	97
การซิงโครไนซ์รายชื่อ	97
การซิงโครไนซ์ข้อความ	98
การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล	98
การลงทะเบียน Divx VOD	99

เว็บไซต์

เบราว์เซอร์	100
การเข้าใช้เว็บไซต์	100
การเพิ่มและการใช้บุ๊กมาร์ค	100
การใช้ RSS reader	101
การบันทึกเพจ	101
การเข้าใช้เพจที่บันทึกไว้	102
การดูประวัติข้อมูลเบราว์เซอร์	102
การเปลี่ยนการตั้งค่าเว็บเบราว์เซอร์	102
การใช้โทรศัพท์เป็นโมเด็ม	102

การตั้งค่า

การเปลี่ยนการตั้งค่าหน้าจอ	104
การปรับแต่งรูปแบบของคุณ	104
การเปลี่ยนการตั้งค่าโทรศัพท์	105
การเปลี่ยนการตั้งค่าสัมผัส	106
การเปลี่ยนการตั้งค่าการเชื่อมต่อ	106
การใช้ตัวจัดการหน่วยความจำ	108

การใช้โหมด Flight	109
การส่งและการรับไฟล์โดยใช้อุปกรณ์	109
การจับคู่กับอุปกรณ์บลูทูธอื่น	110
การใช้ชุดหูฟังบลูทูธ	111
Wifi	112

อุปกรณ์เสริม

บริการของเครือข่าย

ข้อมูลทางเทคนิค

คำแนะนำ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ	116
การแก้ปัญหา	122

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

เลนส์กล้องถ่ายรูปภายใน

เซนเซอร์รับสัญญาณ


ปุ่มวางสาย/เปิดปิดเครื่อง

วางสายหรือปฏิเสธสายเรียกเข้า
เปิด/ปิดโทรศัพท์ กดหนึ่งครั้งเพื่อ
กลับสู่หน้าจอหลัก

ปุ่มการทำงานหลายงาน

ปุ่มโทรออก/รับสาย

เพื่อโทรออกและรับสาย
เรียกเข้า

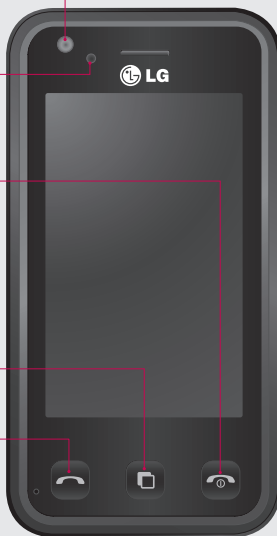

คำเตือน: การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์
หรือการนั่งทับเมื่อใส่ไว้ในกระเป๋าอาจงอจอ LCD
ของโทรศัพท์ และการทำงานของหน้าจอสัมผัสเสียหายได้



ช่องเสียบอุปกรณ์ชาร์จ,
สายเคเบิล, แสนด์ฟรี

เคล็ดลับ:

ในการเชื่อมต่อสาย
USB ให้รอจนโทร
ศัพท์เปิดเครื่องและ
ลงทะเบียนกับเครือ
ข่ายแล้ว

ช่องเสียบการ์ดหน่วย
ความจำ **Micro SD**



ปุ่มด้านข้าง

- เมื่อหน้าจอไม่ใช้งาน:
ระดับเสียงปุ่ม
- ระหว่างการใช้สาย:
ปรับระดับเสียงลำโพง
- ขณะเล่นแทร็ค **BGM**:
ควบคุมระดับเสียงต่อเนื่อง

ปุ่มลัด/ ปลดลัด
(ปุ่มการป้องกันภาพสั่น
ไหวในกล้องถ่ายรูป)

ปุ่มถ่ายภาพ

01

02

03

04


05

06

07

08

ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ

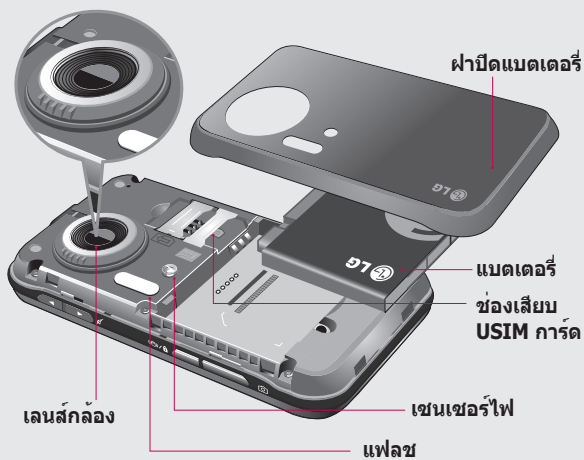

การใส่ USIM และแบตเตอรี่

1 กดฝาปิดแบตเตอรี่

กดปุ่มคล้ายลิ้นคแบตเตอรี่ที่ด้านบนของโทรศัพท์ค้างไว้ แล้วดึงฝาปิดแบตเตอรี่ขึ้น



2 ถอดแบตเตอรี่ออก

กดด้านบนของแบตเตอรี่และยกแบตเตอรี่ออกจากช่องใส่แบตเตอรี่



คำเตือน: อย่าใช้เล็บในการถอดแบตเตอรี่ออก

คำเตือน: ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

01

02

03

04

05

06


07

08

การใส่ USIM และแบตเตอรี่

3 การใส่ USIM การ์ด

เลื่อน USIM การ์ดเข้าไปในช่องใส่ USIM การ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง ในการถอด USIM การ์ด ให้ค่อยๆ ดึงการ์ดออกมาในทิศทางตรงข้ามกับตอนใส่

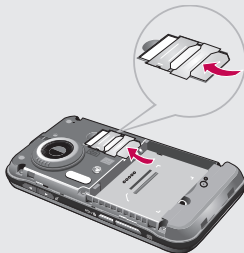


4 ใส่แบตเตอรี่

ใส่แบตเตอรี่ โดยให้ด้านบนของแบตเตอรี่สอดลงไปทางด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วในโทรศัพท์ จากนั้น กดด้านล่างของแบตเตอรี่ให้แน่นเข้าที่



5 การชาร์จโทรศัพท์

เปิดฝาปิดช่องเสียบอุปกรณ์
ชาร์จที่ด้านหลังของโทรศัพท์
KC910 ออก เสียบอุปกรณ์ชาร์จ
และเสียบปลั๊กไฟเข้ากับเต้าเสียบ
ไฟ คุณจะต้องชาร์จโทรศัพท์
KC910 จนกว่าจะปรากฏข้อความว่า
“แบตเตอรี่เต็มแล้ว” บนหน้าจอ

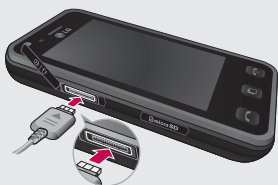

01

02

03

04

05

06

07

08


การลดหน่วยความจำ

การใส่การ์ดหน่วยความจำ

คุณสามารถเพิ่มพื้นที่หน่วยความจำบนโทรศัพท์ได้โดยใช้การ์ดหน่วยความจำ

หมายเหตุ: การ์ดหน่วยความจำเป็นอุปกรณ์เสริม

- 1 เปิดฝาปิดการ์ดหน่วยความจำ
- 2 เลื่อนการ์ดหน่วยความจำเข้าไปในช่องเสียบที่ด้านบนให้แน่นเข้าที่ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

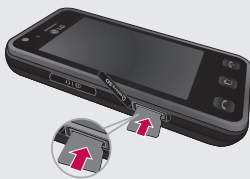

- 3 ปิดฝาปิดการ์ดหน่วยความจำ

การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากการดังยังไม่ได้ฟอร์แมต คุณต้องทำการฟอร์แมตก่อนจึงจะสามารถเริ่มใช้งานได้

- 1 จากหน้าจอหลัก ให้เลือก **⋮** และแตะที่ **ตั้งค่า** และเลือก **ตั้งค่าโทรศัพท์**
- 2 แตะที่ **สถานะความจำ** แล้วเลือก **หน่วยความจำการ์ด**
- 3 แตะที่ **ฟอร์แมต** แล้วยืนยันการเลือกของคุณ
- 4 ใส่รหัสผ่าน หากมีการกำหนดไว้ จากนั้นการกดของคุณจะได้รับการฟอร์แมต และพร้อมสำหรับการใช้งาน

เคล็ดลับ! ในการเปลี่ยนแปลงทางที่จัดเก็บเริ่มต้น ให้เปิด ตัวจัดการหน่วยความจำ จากเมนู **ตั้งค่าโทรศัพท์** แล้วเลือก **การตั้งค่าที่เก็บหลัก**

หมายเหตุ: หากการ์ดหน่วยความจำของคุณมีข้อมูลอยู่ใน โฟลเดอร์ที่ถูกลบโดยอัตโนมัติ ตัวอย่างเช่น วีดีโอจะเก็บไว้ในโฟลเดอร์วีดีโอ

การโอนรายชื่อ

ในการโอนรายชื่อจาก USIM ไปยังโทรศัพท์:

- 1** จากแท็บ ติดต่อสื่อสาร เลือก รายชื่อ และเลือก การตั้งค่ารายชื่อ
- 2** แตะที่ คัดลอก
- 3** เลือก เครื่องไปยัง USIM แล้วแตะที่ เสร็จ
- 4** เลือก เลือกทั้งหมด หรือเลือกทีละชื่อ แล้วแตะที่ ตกลง

01

02

03

04

05

06

07

08

แผนผังเมนู

แตะที่  ในหน้าจอหลักเพื่อเปิด **เมนูบนสุด** จากชั้นตอนนี้ คุณสามารถเข้าใช้เมนูต่างๆ ได้ดังนี้: **ติดต่อสื่อสาร, ความบันเทิง, ยุทิลิตี้ และ ตั้งค่า**



ติดต่อสื่อสาร



โทรออก



โทรด่วน



รายชื่อ



ข้อมูลการโทร



ข้อความใหม่



อีเมลใหม่



ข้อความ



ความบันเทิง



คลังภาพ



แฟ้มข้อมูล



กล้องถ่ายรูป



กล้องวิดีโอ



Muvee Studio



เพลง



วิทยุ FM



เกมส์&แอปฯ



ยุทิลิตี้



เบราว์เซอร์



Google



สมุดบันทึก



ตั้งปลุก



บันทึก



บันทึกเสียง



เครื่องมือ



ตั้งค่า



รูปแบบเสียง



หน้าจอ



ตั้งค่าโทรศัพท์



ตั้งค่าการโทร



การตั้งค่าสัมผัส



การเชื่อมต่อ



บลูทูธ



Wi-Fi

หน้าจอหลักของคุณ

เมื่อไม่มีการใช้งานโทรศัพท์ KC910 เครื่องจะกลับเข้าสู่หน้าจอหลัก จากหน้าจอนี้ คุณสามารถเข้าใช้งาน ตัวเลือกเมนูต่างๆ, โทรออกแบบด่วน และดูสถานะของโทรศัพท์ และอื่นๆ ได้อีกมากมาย

เคล็ดลับสำหรับหน้าจอสัมผัส


หน้าจอหลักยังเป็นที่ที่ดียเยี่ยมที่จะช่วยฝึกให้คุณเคยชินกับหน้าจอสัมผัสได้

ในการเลือกรายการ ให้แตะที่ไอคอนอย่างถูกต้อง โทรศัพท์ KC910 จะสั่นเล็กน้อย เมื่อคุณแตะที่ตัวเลือกใดๆ

ในการเลื่อนดูรายการต่างๆ ให้แตะที่รายการสุดท้ายที่มองเห็นได้ แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

- คุณไม่จำเป็นต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้นิ้วปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ

- เมื่อไฟหน้าจอดับลง ให้กดปุ่มปลดล็อค/ล็อคที่ด้านขวามือค้างไว้เพื่อกลับไปยังหน้าจอหลัก
- ห้ามปิดคลุมโทรศัพท์ด้วยซองหรือปลอก เนื่องจากหน้าจอสัมผัสจะไม่ทำงานหากมีวัตถุใดๆ ปิดคลุมอยู่
- เมื่อคุณแตะที่ **W** Widget สำหรับโทรศัพท์มือถือจะปรากฏขึ้น คุณสามารถลาก แล้วคลิก รายการที่คุณต้องการได้ทันที

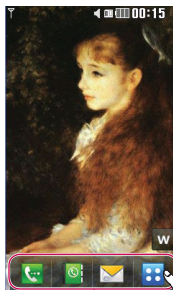

ปุ่มด่วน

01

02

03

04

05

06

07


08


หน้าจอลูกข่ายของคุณ

ปุ่มด่วน

ปุ่มด่วนบนหน้าจอลูกข่ายจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ซับซ้อนได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



และเพื่อเปิดปุ่มสัมผัสสำหรับใช้โทรออก ป้อนหมายเลข เหมือนกับการใช้ปุ่มกดทั่วไป แล้วแตะที่ **การโทร** หรือกดปุ่ม 

ในการเริ่มการสนทนาทางวิดีโอด้วยหมายเลข ใ้กด  หลังจากป้อนหมายเลขแล้ว และเลือก **ต่อสายวิดีโอ** โปรดดูรายละเอียดที่หน้า 21



และเพื่อเปิดรายชื่อ ในการค้นหาหมายเลขที่คุณต้องการโทร ให้ป้อนชื่อของรายชื่อโดยใช้ปุ่มสัมผัส คุณยังสามารถสร้างรายชื่อใหม่และแก้ไขรายชื่อที่มีอยู่ได้

โปรดดูรายละเอียดที่หน้า 30



และเพื่อเข้าใช้เมนูตัวเลือกข้อความ จากชั้นตอนนี้ คุณสามารถสร้าง SMS ใหม่ได้ โปรดดูรายละเอียดที่หน้า 34



และเพื่อเปิดเมนูบนสุดแบบเต็ม โดยจะแยกออกเป็นเมนูย่อย 4 เมนูย่อย แตะที่แท็บแนวตั้งเพื่อดูตัวเลือกต่างๆ

แถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูล เช่น ระดับความแรงของสัญญาณ, ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีการใช้งานบลูทูธ หรือ GPRS อยู่หรือไม่ ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	คำอธิบาย
	การทำงานหลายอย่าง
	ความแรงของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป)
	ไม่มีสัญญาณเครือข่าย
	พลังงานแบตเตอรี่ที่เหลืออยู่
	แบตเตอรี่หมด
	ข้อความตัวอักษรใหม่
	ข้อความเสียงใหม่

ไอคอน	คำอธิบาย
	ข้อความในถาดเข้าเต็ม
	การส่งข้อความล้มเหลว
	ตั้งปลุกแล้ว
	ใช้รูปแบบปกติอยู่
	ใช้รูปแบบนอกอาคารอยู่
	ใช้รูปแบบเขียนอยู่
	ใช้รูปแบบซดหูฟังอยู่
	โอนสายเรียกเข้า
	ใช้ EDGE อยู่
	โรมมิ่ง
	เปิดใช้โหมด Flight
	ใช้งานบลูทูธ
	เปิดใช้ Wifi
	เปิดใช้ GPS (จีโอแท็ก, Jogging buddy)

01

02

03

04

05

06


07

08

หน้าจอหลักของคุณ

การเปลี่ยนสถานะจากแถบสถานะ


แตะที่ไอคอนแสดงสถานะปัจจุบัน ซึ่งแสดงการตั้งค่าปัจจุบันในแถบสถานะเพื่อเปิดสรุปสถานะ โดยจะแสดงเวลาปัจจุบัน, เครือข่าย, SVC ID, แบตเตอรี่, หน่วยความจำเครื่อง, หน่วยความจำภายนอก, รูปแบบเสียง, MP3, บลูทูธ และสถานะ Wifi คุณสามารถกำหนดประเภทรูปแบบเสียงเล่น/หยุดชั่วคราว MP3 และเปิด/ปิดการทำงานบลูทูธและ Wifi

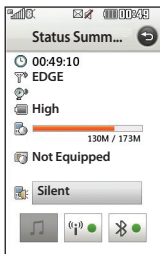

การใช้ฟังก์ชันการทำงานหลายอย่าง

กดปุ่มมัลติทาสกิ้งเพื่อเปิดเมนูมัลติทาสกิ้ง จากเมนูนี้ คุณสามารถดูแอปพลิเคชันทั้งหมดที่รันอยู่ และเขาใช้งานได้ด้วยการกดปุ่มเดียว

จากแอปพลิเคชันต่างๆ ให้กดปุ่มมัลติทาสกิ้ง และเลือกหน้าจอหลักเพื่อกลับเข้าสู่หน้าจอหลัก โดยไม่ต้องออกจากหรือปิดแอปพลิเคชันนั้น

เมื่อคุณกำลังรันแอปพลิเคชันไว้ที่พื้นหลัง (เช่น เกมส์หรือวิทยุ FM) ไอคอน 

จะปรากฏขึ้นในแถบสถานะ

เมื่อคุณกดปุ่มนี้จากหน้าจอหลัก คุณสามารถดูเมนูปุ่มลัดสำหรับฟังก์ชันที่ใช้งานได้ทั่วไป รวมถึง **ข้อความใหม่** และ **ตั้งปลุก**


การโทร

การโทรออกหรือการสนทนาทางวิดีโอ

- 1 แตะที่  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกดในการลบตัวเลข ให้กดปุ่มลบ
- 3 กดปุ่ม  เพื่อเริ่มการโทรออก
- 4 ในการวางสาย ให้กดปุ่ม 


เคล็ดลับ! ในการป้อน + เพื่อโทรออกต่างประเทศ ให้แตะที่ * สองครั้ง


เคล็ดลับ! กดปุ่มล๊อค/ปลดล๊อคที่ด้านขวาของตัวเครื่องเพื่อล๊อคหน้าจอสัมผัสเพื่อป้องกันการโทรออกโดยไม่ได้ตั้งใจ

เคล็ดลับ! ในการเปิดปุ่มกดขึ้นระหว่างการโทรออก ให้กดปุ่ม 

เคล็ดลับ! คุณสามารถดอสายวิดีโอ, ส่งข้อความ, บันทึกหมายเลข หรือคนหารายชื่อ โดยการแตะที่ 

การโทรออกโดยใช้รายชื่อ

- 1 จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด รายชื่อ
- 2 แตะที่ ชื่อ และป้อนตัวอักษร 2-3 ตัวแรกของรายชื่อที่คุณต้องการโทรหา
- 3 จากรายการที่ฟลิตเออร์นี้ ให้แตะที่รายชื่อที่ต้องการโทรหา แล้วเลือกหมายเลขที่จะใช้ หากมีการบันทึกไว้มากกว่าหนึ่งหมายเลข
- 4 แตะที่ การโทร

เคล็ดลับ! กด  และคุณสามารถเลือกจาก เพิ่มรายชื่อ, ส่งข้อความ, ลบ, โทรด่วน, นามบัตร และ คนหาตามกลุ่ม

01

02

03

04


05

06

07



08

การโทร


เคล็ดลับ! คุณสามารถค้นหารายชื่อได้จากหน้าจอโทรออก และที่  และเลือก **ค้นหารายชื่อ** เลือกดูรายชื่อ หรือป้อนตัวอักษรสองสามตัวแรกของชื่อเพื่อฟิลเตอร์รายการ

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่ม  เพื่อรับสาย

และที่  เพื่อปิดเสียงกริ่ง วิธีนี้เป็นวิธีที่ดี หากคุณเลื่อมเปลี่ยนรูปแบบเป็น เงียบ เมื่ออยู่ในห้องประชุม กดปุ่ม  เพื่อปฏิเสธสายเรียกเข้า


ตัวเลือกต่างๆ ระหว่างใช้สาย

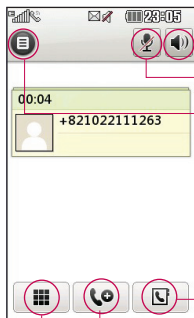


ลำโพง - และที่ 
เพื่อเปิดลำโพง

ปิดเสียง - และที่ 
เพื่อปิดไมโครโฟน ดังนั้นบุคคลที่
กำลังคุยสายอยู่จะไม่ได้ยินเสียงคุณ

ตัวเลือก - เลือกจากรายการตัว
เลือกต่างๆ ระหว่างใช้สาย รวมถึง
สร้างบันทึกใหม่ และ ไปที่ข้อความ
ดังนั้น คุณสามารถตรวจสอบข้อ
ความและเพิ่มรายชื่อระหว่างโทร
ออกได้ นอกจากนี้ คุณยังสามารถ
วางสายได้โดยการแตะที่ วางสาย

 - เลือกเพื่อค้นหารายชื่อระหว่าง
การใช้สาย

 - เลือกเพื่อเพิ่มบุคคลอื่นในการ
สนทนา

 - และเพื่อเปิดปุ่มตัวเลขสำหรับ
การนำเว็ทเมนูด้วยตัวเลือกแบบตัว
เลข ตัวอย่างเช่น การโทรไปยังศูนย์
บริการหรือการบริการทางโทรศัพท์
อัตโนมัติต่างๆ

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือกต่างๆ หรือรายชื่อให้แตะที่รายการสุดท้ายที่มองเห็นได้ แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นาได้

01

02

03

04

05

06

07

08


การโทร

การปรับระดับเสียงสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้อยู่ ให้ใช้ปุ่มขึ้นและลงทางด้านขวาของโทรศัพท์

โทรด่วน





คุณสามารถกำหนดรายชื่อที่โทรออกบ่อยเป็นหมายเลขโทรด่วนได้

- 1 จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด รายชื่อ
- 2 แตะที่ **โทรด่วน**
- 3 ข้อความเสียงได้รับการกำหนดให้อยู่ที่หมายเลขโทรด่วน 1 ซึ่งคุณไม่สามารถเปลี่ยนแปลงได้ แตะที่หมายเลขอื่นๆ เพื่อกำหนดรายชื่อสำหรับโทรด่วน
- 4 รายชื่อของคุณจะเปิดขึ้น เลือก รายชื่อที่คุณต้องการกำหนดให้กับหมายเลขนั้น โดยการแตะที่หมายเลขโทรศัพท์หนึ่งครั้ง

ในการโทรออกหมายเลขโทรด่วน ให้แตะที่  จากหน้าจอหลัก จากนั้นกดหมายเลขที่กำหนดค้างไว้จนกว่ารายชื่อจะปรากฏขึ้นบนหน้าจอ

เครื่องจะทำการโทรออกโดยอัตโนมัติโดยไม่ต้องกด **Call**

การใช้สายที่สอง


- 1 ในระหว่างการโทรสายแรก ให้แตะที่  แล้วเลือกหมายเลขที่คุณต้องการโทรออก
- 2 ป้อนหมายเลข หรือค้นหารายชื่อ (โปรดดูรายละเอียดที่ **การโทรออก** ในหน้า 21)
- 3 กด  เพื่อต่อสาย
- 4 สายสนทนาทั้งสองสายจะแสดงอยู่บนหน้าจอการโทรออก สายสนทนาแรกจะล็อคและพักสายคู่สนทนา
- 5 ในการสลับสาย ให้แตะที่  และเลือก **สลับสาย** หรือกดหมายเลขที่พักสายไว้
- 6 ในการวางสายใดสายหนึ่ง หรือวางสายทั้งสองสาย ให้กด  และเลือก **วางสาย** แล้วตามด้วย **ทั้งหมด, พัก** หรือ **ใช้งาน**

เคล็ดลับ! คุณสามารถรวมสายเข้าด้วยกันได้โดยการเลือก **รวม** แล้วเลือก **รวม** ควรตรวจสอบว่าผู้ให้บริการเครือข่ายสนับสนุนการประชุมสายนี้

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การปิด DTMF


DTMF ทำให้คุณสามารถใช้คำสั่งตัวเลขในการนำเกิดเมนูภายในการโทรอัตโนมัติได้ โดย DTMF จะเปิดตามค่าเริ่มต้น

ในการปิดการทำงานระหว่างใช้สาย (เช่น การกดตัวเลข) ให้แตะที่  และเลือก **ปิด DTMF**

เคล็ดลับ!

ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้าจอลงไป รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

การดับบันทึกการโทร

แตะที่  และเลือก **ติดต่อสื่อสาร** และแตะที่ **ขอมูลการโทร** เลือกเพื่อดู:


ทุกสาย - ดูรายการที่โทรออก, ได้รับ และไม่ได้รับทั้งหมด

สายโทรออก - ดูรายการหมายเลขที่คุณโทรออกทั้งหมด

สายที่ได้รับ - ดูรายการหมายเลขที่โทรเข้ามาหาคุณทั้งหมด

สายไม่ได้รับ - ดูรายการสายที่คุณไม่ได้รับทั้งหมด

เคล็ดลับ!

จากบันทึกการโทร ให้แตะที่  และ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

เคล็ดลับ!

แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่, เวลา และระยะเวลาในการโทร

01

02

03

04

05


06

07

08

การโทร


การใช้การโอนสาย

- 1 แตะที่  เลือก **ตั้งค่า** แล้วเลือก **ตั้งค่าการโทร**
- 2 แตะที่ **โอนสาย** และเลือก **สนทนาทางวิดีโอ หรือ โทรด้วยเสียง**
- 3 เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่วาง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดตอไม่ได้
- 4 บอหนหมายเลขที่คุณต้องการให้โอนสายไป
- 5 แตะที่ **คำขอ** เพื่อเปิดใช้งาน
หมายเหตุ: คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

เคล็ดลับ!


ในการปิดการโอนสายทั้งหมด ให้เลือก **เลิกใช้ทั้งหมด** จากเมนู **การโอนสาย**

การใช้การป้องกันการโทร

- 1 แตะที่  เลือก **ตั้งค่า** แล้วเลือก **ตั้งค่าการโทร**
- 2 แตะที่ **ป้องกันการโทร** และเลือก **สนทนาทางวิดีโอ หรือ โทรด้วยเสียง**
- 3 เลือกตัวเลือกใดตัวเลือกหนึ่ง หรือเลือกทั้ง 6 ตัวเลือกนี้: **โทรออกทั้งหมด**, **สายโทรออกต่างประเทศ**, **สายโทรออกต่างประเทศ ยกเว้นประเทศแม่**, **สายเรียกเข้าทั้งหมด**, **สายเข้าเมื่ออยู่ต่างประเทศ**
- 4 บอन्हสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการระบบเครือข่ายของคุณเกี่ยวกับบริการนี้

เคล็ดลับ! เลือกกำหนดเบอร์โทรออกเพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

การเปลี่ยนการตั้งค่าการโทรทั่วไป

1. แตะที่  เลือก **ตั้งค่า** แล้วเลือก **ตั้งค่าการโทร**
2. แตะที่ **ตั้งค่าทั่วไป** จากหน้าจอนี้ คุณสามารถแก้ไขการตั้งค่าของ:
 - ปฏิเสธการรับสาย** - เลื่อนสวิตช์ไปทางซ้ายเพื่อเลื่อนแถบไปที่ปฏิเสธรายการ คุณสามารถแตะที่กล่องข้อความเพื่อเลือกจากทุกสาย รายชื่อ หรือกลุ่มที่ระบุไว้หรือจากหมายเลขที่ไม่รู้จัก (ไม่มีอยู่ในรายชื่อของคุณ) แตะที่ **บันทึก** เพื่อเปลี่ยนการตั้งค่า

ส่งหมายเลขตัวเอง - เลือกว่าจะแสดงหมายเลขของคุณเมื่อคุณโทรออกหรือไม่

โทรซ้ำอัตโนมัติ - เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

โหมดตอบรับ - เลือกว่าจะรับสายโดยใช้ปุ่ม **ส่ง** หรือปุ่มใดๆ

เดือนทุกนาที - เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** การฟังเสียงเดือนทุกนาทีระหว่างการใช้สาย

โหมดตอบรับ BT - เลือก **แฮนด์ฟรี** เพื่อให้สามารถรับสายได้ในระหว่างใช้งานชุดหูฟังบลูทูธหรือเลือก **ตัวเครื่อง** เพื่อรับสายโดยกดปุ่มบนตัวเครื่อง

บันทึกหมายเลขใหม่ - เลือก **ใช่** เพื่อบันทึกหมายเลขใหม่

เคล็ดลับ!

ในการเลื่อนดูรายการตัวเลือกให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้นรายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

01

02

03

04

05


06

07

08

การโทร

การเปลี่ยนการตั้งค่า การสนทนาทางวิดีโอ

- 1 แตะที่  เลือก **ตั้งค่า** และเลือก **ตั้งค่าสนทนาวิดีโอ**
- 2 เลือกการตั้งค่าสำหรับการสนทนาทางวิดีโอ เลือกว่าจะใช้รูปส่วนตัวแล้วเลือกรูป หรือเปิดกระจก เพื่อให้มองเห็นตัวคุณเองบนหน้าจอเมื่อโทรแบบสนทนาทางวิดีโอ


รายชื่อ

การค้นหารายชื่อ

คุณสามารถค้นหารายชื่อได้ 2 วิธี:

จากหน้าจอหลัก

- 1 จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด รายชื่อ แตะที่ ชื่อ และ ป้อนชื่อของรายชื่อโดยใช้ปุ่มกด
- 2 แตะที่ **Call** หรือกดปุ่ม  เพื่อเริ่มการโทรออก

เคล็ดลับ! คุณสามารถค้นหาตามกลุ่มได้โดยการแตะที่  แล้วเลือก **ค้นหาตามกลุ่ม** ซึ่งจะเป็นการแสดงรายการกลุ่มทั้งหมดของคุณ

จากเมนูหลัก


- 1 แตะที่  เลือก **ติดต่อสื่อสาร**
- 2 แตะที่ **รายชื่อ** และ **ค้นหา**

เคล็ดลับ! ปุ่มกดตัวอักษรจะปรากฏขึ้นเมื่อคุณแตะที่ ชื่อ

เคล็ดลับ! ในการเลื่อนดูรายชื่อ ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นมาใหม่มองเห็นรายการอื่นๆ ได้

การเพิ่มรายชื่อใหม่

- 1 จากหน้าจอหลัก ให้แตะที่  แล้วเลือก **เพิ่มรายชื่อ**
- 2 เลือกว่าจะบันทึกรายชื่อไปยัง **ตัวเครื่อง** หรือ **USIM**
- 3 ป้อนชื่อและนามสกุลของรายชื่อใหม่ คุณไม่จำเป็นต้องป้อนทั้งสองรายการ แต่คุณต้องป้อนรายการใดรายการหนึ่ง

เคล็ดลับ! เมื่อคุณพิมพ์ชื่อแล้ว ให้กด  เพื่อแก้ไขข้อมูลส่วนอื่นๆ ของรายชื่อ

- 4 ป้อนหมายเลขที่ต่างกันสูงสุด 5 หมายเลข แล้วระบุประเภทให้กับแต่ละหมายเลข โดยเลือกจาก **เบอร์มือถือ**, **โฮม**, **ออฟฟิศ**, **เบอร์เพจเจอร์**, **แฟกซ์**, **VT** และ **ทั่วไป**

01

02

03

04

05

06

07

08


รายชื่อ

- 5 เพิ่มอีเมลแอดเดรส
- 6 กำหนดรายชื่อให้กับกลุ่มอย่างน้อยหนึ่งกลุ่ม เลือกจาก **ไม่มีกลุ่ม, ครอบครัว, เพื่อน, เพื่อนร่วมงาน, โรงเรียน หรือ วิไอพี**
- 7 คุณสามารถเพิ่ม เสียงเรียกเข้า, วันเกิด, วันครบรอบ, โสมเพจ, ที่อยู่บ้าน, ชื่อบริษัท, ชื่องาน, ที่อยู่บริษัท และ บันทึกรายชื่อ
- 8 แตะที่ **บันทึก** เพื่อบันทึกรายชื่อ

เคล็ดลับ! คุณสามารถสร้างกลุ่มที่กำหนดเองสำหรับรายชื่อของคุณได้ โปรดดูที่ การสร้างกลุ่ม ในหน้า 31

ตัวเลือกต่างๆ ของรายชื่อ

คุณสามารถใช้ฟังก์ชันต่างๆ ได้มากมายขณะที่ดูรายชื่อ ขั้นตอนต่อไปนี้จะแสดงวิธีการเข้าถึงและใช้งานเมนูตัวเลือกต่างๆ:



- 1 เปิดรายชื่อที่คุณต้องการใช้ โปรดดูที่ การค้นหารายชื่อ ในหน้า 29
- 2 คุณสามารถโทรออก หรือส่งข้อความได้โดยตรงจากขั้นตอนนี้
- 3 กด  เพื่อเปิดรายการตัวเลือกจากขั้นตอนนี้ คุณจะ สามารถ:
 - ต่อสายสนทนาทางวิดีโอ** - สนทนาทางวิดีโอกับรายชื่อที่ต้องการ
 - แก้ไข** - เปลี่ยนแปลงรายละเอียดของรายชื่อ
 - ลบ** - ลบรายชื่อ แตะที่ **ใช้** เมื่อคุณแน่ใจ
 - คัดลอกหรือย้ายไปยังUSIM/เครื่อง** - เลือกย้ายหรือคัดลอกไปยัง USIM การ์ดหรือตัวเครื่อง (ขึ้นอยู่กับตำแหน่งที่คุณบันทึกรายชื่อตั้งแต่เริ่มแรก)

ส่งนามบัตร - ส่งรายละเอียดของรายชื่อไปยังบุคคลอื่นเป็นนามบัตรเลือกเพื่อส่งเป็น ข้อความตัวอักษร, ข้อความมัลติมีเดีย, อีเมล หรือผ่านบลูทูธ


เคล็ดลับ! ข้อความ

- ส่งข้อความไปยังรายชื่อโปรดดูรายละเอียดเกี่ยวกับวิธีการส่งข้อความที่หน้า 34

การสร้างกลุ่ม

- 1 จากหน้าจอหลัก ให้แตะที่  และเลือกแท็บ **ติดต่อสื่อสาร** แตะที่ **รายชื่อ** และเลือก **กลุ่ม**
- 2 แตะที่ 
- 3 เลือก **เพิ่มกลุ่ม**
- 4 ป้อนชื่อสำหรับกลุ่มใหม่ของคุณ
- 5 แตะที่ **บันทึก**

หมายเหตุ: หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะหายไป แต่ยังคงอยู่ในรายชื่อ

เคล็ดลับ! คุณสามารถแก้ไขกลุ่มที่มีอยู่ได้โดยการเลื่อนแถบไปที่กลุ่มที่ต้องการ แล้วแตะที่  เลือกเพื่อเพิ่มรายชื่อ, เปลี่ยนชื่อกลุ่ม, ลบกลุ่ม, เพิ่มสมาชิก หรือกำหนดเสียงเรียกเข้ากลุ่ม

การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถปรับการตั้งค่ารายชื่อเพื่อให้เหมาะกับรายชื่อในแบบที่คุณต้องการได้

เคล็ดลับ!

ในการเลือกรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

01

02

03

04

05

06


07

08

รายชื่อ

- 1 จากแท็บ ติดต่อสื่อสาร และที่รายชื่อ และเลือก การตั้งค่ารายชื่อ
- 2 จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าต่อไปนี้:

การตั้งค่ารายชื่อ - เลือกว่าจะดูรายชื่อที่บันทึกไว้ทั้งใน ตัวเครื่อง & USIM, เฉพาะตัวเครื่อง หรือ เฉพาะ USIM

นอกจากนี้ คุณยังสามารถเลือกที่จะแสดงชื่อหรือนามสกุลของรายชื่อขึ้นก่อนก็ได้ คุณสามารถแสดงต่อสายสนทนา, ต่อสายวิดีโอ หรือ ส่งข้อความ ด้วยปุ่มคำสั่งวงวนได้ในรายชื่อ ให้แตะที่ 

เพื่อโทรออกโดยตรง คุณสามารถเปลี่ยนการตั้งค่านี้ (ต่อสายสนทนา/ ต่อสายวิดีโอ/ ส่งข้อความ/ ออโต้แสดง)

ซิงโครไนซ์รายชื่อ -

เชื่อมต่อไปยังเซิร์ฟเวอร์ของคุณเพื่อซิงโครไนซ์รายชื่อต่างๆ โปรดดูที่การซิงโครไนซ์รายชื่อในหน้า 97

คัดลอก - คัดลอกรายชื่อจาก USIM ไปยังตัวเครื่อง หรือจากตัวเครื่องไปยัง USIM เลือกว่าจะคัดลอกที่ละรายการหรือทั้งหมดในครั้งเดียว หากคุณเลือกดำเนินการที่ละรายการ คุณจะต้องเลือกรายชื่อที่จะคัดลอกที่ละรายชื่อ

ย้าย - ตัวเลือกนี้ทำงานในลักษณะเดียวกับตัวเลือก คัดลอก แต่เครื่องจะบันทึกเฉพาะรายชื่อในตำแหน่งที่คุณย้ายไปเท่านั้นหากคุณย้ายรายชื่อจาก USIM ไปยังตัวเครื่องรายชื่อนั้นจะถูกลบออกจากหน่วยความจำ USIM

ส่งทุกรายชื่อผ่านบลูทูธ - ส่งรายชื่อทั้งหมดไปยังอุปกรณ์อื่นโดยใช้บลูทูธ เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธหากคุณเลือกตัวเลือกนี้

สำรองข้อมูลรายชื่อ - โปรดดูที่การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์ในหน้า 97

เรียกคืนรายชื่อ - โปรดดูที่การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์ในหน้า 97

ลบรายชื่อ -

ลบรายชื่อของคุณทั้งหมด และที่ใช้ หากคุณต้องการล้างรายชื่อของคุณ

การดูข้อมูล

- 1 จากแท็บ **ติดต่อสื่อสาร** และที่ **รายชื่อ** และ **ข้อมูล**
- 2 จากขั้นตอนนี้ คุณจะสมารถดู **เบอร์บริการ**, **เบอร์ส่วนตัว**, **ข้อมูลหน่วยความจำ** (จำนวนพื้นที่หน่วยความจำที่เหลืออยู่) และ **นามบัตร** ของคุณได้

เคล็ดลับ! หากคุณยังไม่ได้เพิ่มนามบัตรของคุณเอง เลือก **นามบัตร** แล้วป้อนรายละเอียดทั้งหมดที่คุณต้องการส่งให้รายชื่อ และที่ **บันทึก** เพื่อดำเนินการให้เสร็จสิ้น

01

02

03

04

05

06



07

08


ข้อความ

ข้อความ


โทรศัพท์ KC910 ของคุณได้ผสมผสาน SMS, MMS และอีเมลไว้ในเครื่องเดียว และเมนูที่ใช้ง่าย คุณสามารถเข้าสู่ศูนย์ข้อความได้ 2 วิธี ดังนี้:


- 1 จากเมนูหลัก แตะที่  หรือแตะที่  แล้วเลือก **ติดต่อสื่อสาร** และเลือก **ข้อความใหม่**

การส่งข้อความ

- 1 แตะที่  แล้วแตะ **สร้างใหม่** เพื่อเปิดข้อความเปล่า
- 2 จากขั้นตอนนี้ คุณสามารถส่ง SMS หรือ MMS ได้ ในการส่งอีเมล ให้เลือก **อีเมลใหม่** ในแท็บ **ติดต่อสื่อสาร** โปรดดูรายละเอียดที่หน้า 41
- 3 แตะที่ **แทรก** เพื่อเพิ่มภาพ, วิดีโอ, เสียง, สไลด์ใหม่, หัวเรื่อง หรืออื่นๆ (นามบัตร, ปฏิทิน, บันทึก, งาน หรือนามบัตรส่วนตัว)

- 5 แตะที่ **ส่ง**: ที่ด้านบนของหน้าจอ เพื่อป้อนหมายเลขโทรศัพท์ของผู้รับ หรือแตะไอคอนการค้นหา เพื่อเปิดรายชื่อ คุณสามารถเพิ่มรายชื่อหลายรายการได้ เมื่อคุณดำเนินการเสร็จแล้ว ให้แตะที่ **ส่ง**

 **คำเตือน:** การส่งข้อความให้กับผู้รับแต่ละรายจะคิดค่าใช้จ่ายที่ 160 ตัวอักษรต่อหนึ่งข้อความตัวอักษร(ภาษาอังกฤษ)

 **คำเตือน:** หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะถูกแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น


เคล็ดลับ! ตอบกลับแบบรวดเร็ว - ส่งการตอบ กลับไปยังข้อความที่เลือกได้ทันทีโดยใช้ข้อความอัตโนมัติ


การป้อนข้อความ

คุณสามารถป้อนข้อความได้ 5 วิธีดังนี้:


ปุ่มกด, คีย์บอร์ด, เขียนมือ-สกรีน, เขียนมือ-บ็อกซ์, เขียนมือ-ดับเบิลบ็อกซ์


และที่หน้าจอหนึ่งครั้ง
แป้นพิมพ์จะปรากฏขึ้น

 และเพื่อเปิดระบบป้อนข้อความแบบช่วยสะกดคำ T9


 คุณสามารถเปลี่ยนภาษาที่ใช้เขียนได้

 และเพื่อเปลี่ยนระหว่างปุ่มกดตัวเลข, สัญลักษณ์ และข้อความ

ใช้  เพื่อเลื่อนดูประเภทแป้นพิมพ์แบบต่างๆ ในโหมดป้อนข้อความแต่ละโหมด (ตัวอย่างเช่น ตัวพิมพ์ใหญ่หรือตัวพิมพ์เล็ก)

ในการเว้นวรรค ให้แตะที่ 

ระบบช่วยสะกดคำ T9

ในโหมด T9 สัญลักษณ์  จะปรากฏขึ้น

โหมด T9 จะใช้พจนานุกรมภายในเครื่อง เพื่อรับรู้คำศัพท์ที่คุณเขียนตามลำดับการกดปุ่ม เพียงแตะที่ปุ่มตัวเลขที่สัมพันธ์กับตัวอักษร


ที่คุณจะป้อน พจนานุกรมจะคาดคะเนได้ถึงคำศัพท์ที่คุณต้องการใช้ ตัวอย่างเช่น กด 8, 3, 5, 3, 7, 4, 6, 6, 3 เพื่อเขียนคำว่า 'telephone' หากคำศัพท์ที่คุณต้องการไม่ปรากฏขึ้น ให้แตะที่ **สะกด** หากคุณแตะที่ **สะกด** คุณสามารถป้อนคำศัพท์โดยใช้โหมดการป้อนตัวอักษรด้วยตนเองแล้วคำศัพท์หรือข้อดังกล่าวจะเพิ่มเข้าไปในพจนานุกรม

เคล็ดลับ!

เพียงแตะที่ตัวอักษรต่างๆ เพื่อเขียนข้อความ แล้วกด:

 เพื่อเปลี่ยนเป็นตัวพิมพ์ใหญ่
 เพื่อเว้นวรรค

การป้อนตัวอักษรด้วยตนเอง

ในโหมดการป้อนตัวอักษรด้วยตนเอง สัญลักษณ์  จะปรากฏขึ้น ในโหมดการป้อนตัวอักษรด้วยตนเอง คุณต้องแตะที่ปุ่มซ้ำๆ เพื่อป้อนตัวอักษร ตัวอย่างเช่น ในการเขียนคำว่า 'hello' ให้แตะ 4 สองครั้ง, 3 สองครั้ง, 5 สามครั้ง, 5 สามครั้ง อีกครั้งหนึ่ง แล้ว 6 สามครั้ง

01

02

03

04

05

06

07

08

ข้อความ

แป้นพิมพ์

ในโหมดคีย์บอร์ดหน้าจอจะพลิกด้านเป็นแนวนอน และแป้นพิมพ์แบบเต็มจะปรากฏขึ้นบนหน้าจอเพียงแต่ที่ตัวอักษรต่างๆ เพื่อเขียนข้อความแล้วกด:

▲ เพื่อเปลี่ยนเป็นตัวพิมพ์ใหญ่

▬ เพื่อเว้นวรรค

เคล็ดลับ! หากคุณหมุนโทรศัพท์ในแนวนอนในโหมดข้อความ โทรศัพท์จะเปิดแป้นพิมพ์โดยอัตโนมัติ

เคล็ดลับ! โหมดแป้นพิมพ์จะคาดคะเนและแสดงสิ่งคิดว่าที่คุณจะพิมพ์ต่อไป คำศัพท์เหล่านี้จะคาดคะเนมาจากประโยคที่คุณเคยพิมพ์มาก่อน หากคุณไม่ต้องการใช้คำศัพท์ที่แนะนำ ให้พิมพ์คำศัพท์ใหม่ต่อไป หากต้องการใช้คำศัพท์ที่แนะนำนั้น ให้กด Space Bar เพื่อยืนยันคำศัพท์นั้น

การจดจำลายมือ

ในโหมดการจดจำลายมือ คุณเพียงแค่วาดบนหน้าจอ และโทรศัพท์ KC910 จะแปลงลายมือของคุณเป็นข้อความ เลือก **หน้าจอ** หรือ **บ็อกซ์** ขึ้นอยู่กับมุมมองที่คุณชื่นชอบ (เขียนมือ-สกรีน, เขียนมือ-บ็อกซ์, เขียนมือ-ดับเบิลบ็อกซ์)

เขียนมือ-สกรีนให้คุณป้อนตัวอักษรอย่างต่อเนื่องบนเต็มหน้าจอ
เขียนมือ-บ็อกซ์ให้คุณป้อนตัวอักษรทีละตัว โดยมีพื้นที่แยกกันสำหรับป้อนสัญลักษณ์, ตัวเลข และตัวอักษร
เขียนมือ-ดับเบิลบ็อกซ์ มีสองบ็อกซ์สำหรับป้อนตัวอักษรสลับกันเพื่อให้คุณป้อนตัวอักษรได้อย่างต่อเนื่อง

⚠ คำเตือน:

การใช้สไตลัสในโหมดนี้จะทำให้คุณทำงานได้ง่ายขึ้น โปรดค่อยๆ แตะสไตลัสที่หน้าจอเพื่อป้องกันหน้าจอเสียหาย

การจดจำลายมือจะแปลการเคลื่อนไหวของสไตลัสเป็นตัวอักษร, ตัวเลขหรืออักขระอื่นๆ และจะแสดงอักขระเหล่านี้เป็นข้อความ คุณสามารถใช้การจดจำลายมือได้เมื่อป้อนข้อความเท่านั้น

หมายเหตุ: คุณสามารถเขียนตัวอักษรส่วนใหญ่ได้โดยใช้ลักษณะการลากเส้นแบบต่างๆ โปรดดูที่ตารางด้านล่าง ลูกศรจะเลือกกว่าตัวอักษรเป็นตัวพิมพ์ใหญ่หรือพิมพ์เล็ก ไม่ใช่สไตล์การเขียน

ตัวอักษร

หากคุณเลือกโหมดอักษรตัวพิมพ์ใหญ่ (ABC) ตัวอักษรที่คุณพิมพ์จะป้อนเป็นอักษรตัวพิมพ์ใหญ่แม้ว่าคุณจะเขียนเป็นอักษรตัวพิมพ์เล็กก็ตาม และกลับกันได้อีกด้วย

ตัวอักษร	การลากเส้น
A	๑ A' ๒ ๒'
B	๑ B' ๒ ๒'
C	๑ C' ๒
D	๑ D' ๒ d' d
E	๑ E' ๒ e' e

ตัวอักษร	การลากเส้น
F	๑ F' ๒ f' f
G	๑ G' ๒ g' g
H	๑ H' ๒ h' h
I	๑ I' ๒ i' i
J	๑ J' ๒ j' j
K	๑ K' ๒ k' k
L	๑ L' ๒ l'
M	๑ M' ๒ m' m
N	๑ N' ๒ n' n
O	๑ O' ๒ o' o
P	๑ P' ๒ p' p
Q	๑ Q' ๒ q' q
R	๑ R' ๒ r' r
S	๑ S' ๒ s'
T	๑ T' ๒ t' t
U	๑ U' ๒ u' u
V	๑ V' ๒ v' v
W	๑ W' ๒ w' w
X	๑ X' ๒ x' x
Y	๑ Y' ๒ y' y
Z	๑ Z' ๒ z' z
ß	๑ ß'

01

02

03

04

05





06

07

08

ข้อความ

เครื่องหมายพิเศษ

เครื่องหมาย	การลากเส้น
Space	
Backspace	
Enter	
การสลับโหมดข้อความ	

เครื่องหมายวรรคตอน

เครื่องหมาย	การลากเส้น
มหัพภาค	•
แอด @	@

หมายเหตุ: เริ่มการลากเส้นแต่ละครั้งที่จุด

ตัวเลข

แตะที่  เพื่อสลับจากการป้อนข้อความเป็นการป้อนตัวเลข

ตัวเลข	การลากเส้น
0	0 0
1	1 1 1 1 1
2	2 2 2
3	3 3
4	4 4 4 4

5	5 5 5 5
6	6
7	7 7 7 7
8	8 8 8 8
9	9 9 9 9

ตัวอักษรที่ใช้สำหรับเน้นเสียง

เขียนอักขระตามที่อธิบายไว้ข้างต้น จากนั้นเขียนเครื่องหมายเน้นเสียงเหนือตัวอักษรที่ป้อน สำหรับตัวอักษรอื่นๆ เช่น ö และ ñ ให้ทำตามหลักการเดียวกัน



เกรฟ		
อะคิวด์		
เซอร์คัมเฟล็กซ์		
ทิลดี		
ริง		
เดียเรอซิส		
เซดิลลา		

การตั้งค่าอีเมล

คุณสามารถติดต่อสื่อสารระหว่างการเดินทางได้โดยใช้อีเมลบนโทรศัพท์ KC910 ซึ่งคุณสามารถกำหนดอีเมลแอดเดสของแอดเดสแบบ POP3 หรือ IMAP4 ได้อย่างรวดเร็วและง่ายดาย

เคล็ดลับ!

ในการเลือกรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้นรายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

- 1 แตะที่  จากหน้าจอหลัก และแตะที่ 
- 2 เลือก การตั้งค่าอีเมล แล้วเลือก แอดเดสที่อีเมล
- 3 แตะที่ รายชื่อใหม่
- 4 คุณสามารถเลือกวิธีการทำงานของแอดเดสที่ได้ดังนี้
ชื่อ - ป้อนชื่อสำหรับแอดเดสที่นี่
ชื่อของฉัน - ป้อนชื่อของคุณ

ชื่อผู้ใช้ - ป้อนชื่อผู้ใช้ของแอดเดส

รหัสผ่าน -

ป้อนรหัสผ่านของแอดเดส

อีเมลแอดเดส - ป้อนอีเมลแอดเดสของแอดเดส

อีเมลที่ตอบกลับ - ป้อนอีเมลแอดเดสเพื่อใช้ 'ตอบกลับ'

เซิร์ฟเวอร์เมลล์ขาออก - แอดเดสเซิร์ฟเวอร์อีเมลล์ขาออก

เซิร์ฟเวอร์เมลล์ขาเข้า - แอดเดสเซิร์ฟเวอร์อีเมลล์ขาเข้า

ขนาดการรับสูงสุด -

เลือกขนาดที่จำกัดไว้ของอีเมล
ขนาดการรับสูงสุดคือ 1MB

ประเภทเมลล์บ็อกซ์ -

ป้อนประเภทเมลล์บ็อกซ์ POP3 หรือ IMAP4

บันทึกในเซิร์ฟเวอร์ - เลือกว่าจะบันทึกอีเมลไว้ในเซิร์ฟเวอร์หรือไม่
เครื่องจะบันทึกสำเนาของแอดเดสแบบ IMAP4 ไว้เสมอ

01

02

03

04

05

06

07

08

ข้อความ

บันทึกเมลที่ส่งไว้ใน - เลือกว่าจะบันทึกอีเมลที่ส่ง (เมื่อตั้งค่าประเภทเมลล์บอกซ์เป็น IMAP4) หรือไม่ เมื่อประเภทเมลล์บอกซ์เป็น POP3 เมลที่ส่งจะถูกบันทึกไว้ในตัวเครื่อง

รับเฉพาะรายการใหม่ - เลือกว่าจะไม่สนใจอีเมลที่ดาวน์โหลดแล้วก่อนหน้านี้หรือไม่

จุดเชื่อมต่อ - เลือกจุดเชื่อมต่ออินเทอร์เน็ต

อีเมลที่จะรับ - เลือกวิธีดาวน์โหลดอีเมล เลือกจากเฉพาะส่วนหัวหรือทั้งหมดรวมเนื้อความสำหรับ POP3, เฉพาะส่วนหัว, ส่วนหัว + เนื้อความ หรือทั้งหมดสำหรับ IMAP4

ดาวน์โหลดอัตโนมัติ - เลือกว่าจะดึงอีเมลใหม่โดยอัตโนมัติหรือไม่

การตั้งค่าขั้นสูง - เลือกว่าจะใช้การตั้งค่าขั้นสูงหรือไม่

หมายเลขพอร์ต SMTP - โดยทั่วไป หมายเลขนี้ คือ 25

SMTP TLS/SSL - เลือกว่าจะใช้ TLS/SSL สำหรับเซิร์ฟเวอร์ขาออกหรือไม่

พอร์ตเซิร์ฟเวอร์ขาเข้า - โดยทั่วไป หมายเลขนี้ คือ 110 สำหรับแอดเคาท์แบบ POP3 และ 143 สำหรับแอดเคาท์แบบ IMAP4

TLS/SSL ขาเข้า - เลือกว่าจะใช้ TLS/SSL สำหรับเซิร์ฟเวอร์ขาเข้าหรือไม่

ตรวจสอบสิทธิ์ SMTP - เลือกการ ตั้งค่าความปลอดภัยของเซิร์ฟเวอร์เมลล์ขาออก

ชื่อผู้ใช้ SMTP - ป้อนชื่อผู้ใช้ SMTP

รหัสผ่าน SMTP - ป้อนรหัสผ่าน SMTP

ล็อกอินที่ปลอดภัย APOP

- เลือกเพื่อเปิดใช้งานล็อกอิน
เพื่อความปลอดภัย APOP

สำหรับแอคเคาท์แบบ POP3

สำหรับแอคเคาท์แบบ IMAP4

จะตั้งค่าเป็นปิดการใช้งานเสมอ

ในตอนนี้ คุณได้กำหนดค่าให้กับแอค
เคาท์เรียบร้อยแล้ว ซึ่งแอคเคาท์นี้
จะปรากฏอยู่ในรายการแอคเคาท์ใน
โฟลเดอร์ อีเมล

การตั้งข้อมูลอีเมล

คุณสามารถตรวจสอบอีเมลใหม่

ในแอคเคาท์ของคุณแบบอัตโนมัติหรือ ด้วยตนเองได้ โปรดดูที่

การเปลี่ยนการตั้งค่าอีเมล ในหน้า

42 เพื่อตรวจสอบแบบอัตโนมัติ

ในการตรวจสอบด้วยตนเอง:

1. เลือก **การตั้งค่า** > **การตั้งค่า**

2. เลือก **การตั้งค่า** > **การตั้งค่า**

3. เลือก **การตั้งค่า** > **การตั้งค่า**

4. เลือก **การตั้งค่า** > **การตั้งค่า**

5. เลือก **การตั้งค่า**

6. เลือก **การตั้งค่า**

7. เลือก **การตั้งค่า**

8. เลือก **การตั้งค่า**

9. เลือก **การตั้งค่า**

10. เลือก **การตั้งค่า**

การส่งอีเมลโดยใช้แอค

เคาท์ใหม่

1. แตะที่  ในเมนู ติดต่อสื่อสาร
และเลือก **สร้างใหม่**

2. คุณสามารถป้อนแอดเดรส
ผู้รับและเขียนข้อความของคุณได้
นอกจากนี้

คุณยังสามารถแนบภาพ วิดีโอ
เสียง หรือไฟล์ประเภทอื่นได้

3. แตะที่ **ส่ง**
แล้วอีเมลจะถูกส่งออกไป

เคล็ดลับ!

คุณสามารถอัปโหลดเอกสาร
Word, Excel, PowerPoint
และ PDF ไปที่โทรศัพท์ KC910
เพื่อให้คุณสามารถตรวจสอบเอกสาร
ระหว่างเดินทางได้

01

02

03

04

05

06

07

08



ข้อความ

การเปลี่ยนการตั้งค่าอีเมล

คุณสามารถเปลี่ยนแปลงการตั้งค่าอีเมลให้เป็นในแบบที่คุณต้องการได้

เคล็ดลับ!

ในการเลือดยุทธการตัวเลือกให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้นรายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

- 1 แตะที่  จากหน้าจอหลัก และแตะที่ 
- 2 เลือก การตั้งค่าอีเมล
- 3 คุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:
 - แอคเคาท์อีเมล** - จัดการแอคเคาท์อีเมลของคุณ
 - ตอบกลับอีเมลได้** - เลือกเพื่อให้อ่านข้อความยืนยันการอ่านได้
 - ร้องขอการตอบกลับอีเมล** - เลือกว่าต้องการข้อความ 'ยืนยันการอ่าน' หรือไม่
 - รอบเวลาการเรียกดู** - เลือกความถี่ที่จะให้โทรศัพท์ KC910

ตรวจสอบข้อความอีเมลใหม่
จำนวนที่รับ - เลือกจำนวนอีเมลที่ดึงข้อมูลในหนึ่งครั้ง

รวมข้อความต้นฉบับ - เลือกเพื่อรวมข้อความต้นฉบับในการตอบกลับ

รวมสิ่งที่แนบ - เลือกเพื่อรวมสิ่งที่แนบต้นฉบับในการตอบกลับ

เรียกอัตโนมัติในการโรมมิ่ง - เลือกว่าจะดึงข้อความโดยอัตโนมัติเมื่อคุณอยู่ต่างประเทศ (โรมมิ่ง) หรือไม่

การแจ้งเตือนอีเมลใหม่ - เลือกว่าจะแจ้งเตือนอีเมลใหม่หรือไม่
ลายเซ็น - สร้างลายเซ็นในอีเมลและเปิดคุณสมบัตินี้

ระดับความสำคัญ - เลือกระดับความสำคัญของข้อความอีเมล

ขนาดเมลที่ส่ง - เลือกขนาดของอีเมลที่คุณจะส่ง

โฟลเดอร์ข้อความ

คุณจะได้รับถึงโครงสร้างโฟลเดอร์ที่ใช้ในโทรศัพท์ KC910 ได้ เนื่องจากโฟลเดอร์ต่างๆ มีโครงสร้างที่เข้าใจง่าย

ข้อความใหม่ - เปิดข้อความเปล่าใหม่

ถัดเข้า - ข้อความทั้งหมดที่คุณได้รับจะอยู่ในถัดเข้า

จากเมนูนี้คุณสามารถดู ลบ และดำเนินการอื่นๆ ได้ โปรดดูรายละเอียดเพิ่มเติมที่ **การจัดการข้อความ** ด้านล่างนี้

อีเมล - อีเมลทั้งหมดที่คุณได้รับในโทรศัพท์ KC910 จะอยู่ในเมลบ็อกซ์

โฟลเดอร์ส่วนตัว - สร้างโฟลเดอร์เพื่อจัดเก็บข้อความ

ร่าง - หากคุณยังเขียนข้อความไม่เสร็จ คุณสามารถบันทึกสิ่งที่คุณเขียนไว้ที่นี่ได้

ถัดออก - โฟลเดอร์นี้เป็นโฟลเดอร์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป

รายการที่ส่ง - ข้อความที่คุณส่งจะ

อยู่ในโฟลเดอร์นี้

ข้อความอัตโนมัติ - ใช้รายการข้อความตัวอักษรและมัลติมีเดียอัตโนมัติที่ใช้กันทั่วไป

อีเมลติดคอน - เพิ่มและแทรกอีเมลติดคอนสำหรับข้อความของคุณ

ตั้งค่าข้อความ - เปลี่ยนแปลงการตั้งค่าของข้อความตัวอักษรและมัลติมีเดีย

การจัดการข้อความ

คุณสามารถใช้ ถัดเข้า ในการจัดการข้อความของคุณได้

เคล็ดลับ!

ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้นรายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

1 แตะที่  แล้วแตะ ถัดเข้า

2 แตะที่  จากนั้นเลือกเพื่อ:

ลบ - ลบข้อความที่เลือก

ข้อความใหม่ - เปิดข้อความเปล่าใหม่

01

02

03

04

05

06

07

08

ข้อความ

ย้ายไปที่โฟลเดอร์ส่วนตัว - ย้ายข้อความที่เลือกไปที่โฟลเดอร์ส่วนตัว

ค้นหา - ค้นหาข้อความโดยใช้วันที่หรือหมายเลขโทรศัพท์



ฟิลเตอร์ - ดูข้อความตามประเภท ซึ่งจะแบ่งกลุ่ม SMS แยกจาก MMS

ลบทั้งหมด - ลบข้อความทั้งหมด
หากมีข้อความ **ไม่มีที่ว่างสำหรับข้อความ USIM** ปรากฏขึ้น คุณควรลบข้อความบางข้อความในถาดเข้าออก

หากมีข้อความ **ไม่มีที่ว่างสำหรับข้อความ** คุณสามารถลบข้อความหรือไฟล์ที่บันทึกออกได้ เพื่อสร้างพื้นที่

การใช้ข้อความอัตโนมัติ

สร้างข้อความอัตโนมัติสำหรับข้อความ SMS และ MMS ที่คุณส่งบ่อยๆ คุณจะพบว่าข้อความอัตโนมัติบางข้อความในโทรศัพท์ของคุณแล้ว ซึ่งคุณสามารถแก้ไขข้อความเหล่านั้นได้หากต้องการ

- 1 แตะที่  แล้วเลือก **ข้อความอัตโนมัติ**
- 2 เลือก **SMS อัตโนมัติ** หรือ **MMS อัตโนมัติ** คุณสามารถแตะที่  เพื่อ **เพิ่มใหม่, แก้ไข, ลบ** หรือ **ลบทั้งหมด** สำหรับข้อความอัตโนมัติในการแก้ไขข้อความ ให้เลือกข้อความ ทำการแก้ไขแล้วแตะที่ **บันทึก**

การใช้อีโมติคอน

ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้อีโมติคอน คุณจะพบว่ามีอีโมติคอนที่ซิงค์ทั่วไปในโทรศัพท์ของคุณแล้ว

- 1 แตะที่  แล้วเลือก **อีโมติคอน**
- 2 แตะที่ **รายชื่อใหม่** หรือแตะที่  เพื่อ **ลบ** หรือ **ลบทั้งหมด** สำหรับอีโมติคอน

การเปลี่ยนการตั้งค่าข้อความตัวอักษร

การตั้งค่าข้อความของโทรศัพท์ KC910 จะได้รับการกำหนดค่าไว้ล่วงหน้า

หน้าแล้ว ดังนั้น คุณสามารถส่งข้อความโต้ทันที คุณสามารถเปลี่ยนแปลงการตั้งค่าได้ในแบบที่คุณต้องการ

เคล็ดลับ!

ในการเลือดยารายการตัวเลือกให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้นรายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

แตะที่  แล้วเลือก **การตั้งค่าการส่งข้อความ**

และ **ข้อความตัวอักษร** คุณสามารถเปลี่ยนแปลง:

ศูนย์ข้อความตัวอักษร - ป้อนรายละเอียดของศูนย์ข้อความ

รายงานผลการส่ง - เลื่อนสวิตช์ไปทางซ้ายเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว


ช่วงที่มีผลใช้ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

ชนิดข้อความ - เปลี่ยนข้อความตัวอักษรเป็น **เสียง**, **แฟกซ์**, **X.400** หรือ **อีเมล**

การเข้ารหัสตัวอักษร - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความและค่าบริการส่งข้อความของคุณ

การส่งข้อความยาว - เลือกเพื่อส่งข้อความยาวเป็นหลาย SMS หรือเป็น MMS

การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ KC910 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความโต้ทันที คุณสามารถเปลี่ยนแปลงการตั้งค่าได้ในแบบที่คุณต้องการแตะที่ 

แล้วเลือก **ตั้งค่าข้อความ** และ **ข้อความมัลติมีเดีย** คุณสามารถเปลี่ยนแปลง:

โหมดการเรียกข้อมูล - เลือก **โสม** หรือ **เครือข่ายโรมมิ่ง** หากคุณเลือกกำหนดเอง คุณจะได้รับเฉพาะข้อความแจ้ง MMS และคุณสามารถตัดสินใจว่าจะดาวน์โหลดแบบเต็มหรือไม่

01

02

03

04

05

06

07

08

ข้อความ

รายงานผลการส่ง - เลือกเพื่อให้ส่งหรือต้องการรายงานผลการส่ง

อ่านข้อความตอบรับ - เลือกเพื่อใหม่หรือส่งการตอบกลับการอ่าน

ระดับความสำคัญ - เลือกระดับความสำคัญของ MMS

ช่วงที่มีผลใช้ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

ระยะเวลาสไลด์ - เลือกระยะเวลาที่จะให้สไลด์ปรากฏบนหน้าจอ


เวลาส่ง - เลือกระยะเวลาก่อนส่งแต่ละข้อความ

ศูนย์ MMS - ป้อนรายละเอียดของศูนย์ข้อความ

การเปลี่ยนการตั้งค่าอื่นๆ

แตะที่  และเลือก

ตั้งค่าข้อความ แล้วเลือก:

ข้อความเสียง - แตะที่ **รายชื่อใหม่** หรือ  เพื่อเพิ่มบริการข้อความเสียงใหม่ ติดต่อที่ผู้ให้บริการระบบเครือข่ายของคุณสำหรับข้อมูลเพิ่มเติมเกี่ยวกับบริการที่มีให้

บริการข้อมูล - เลือกสถานะการรับ, ภาษา และการตั้งค่าอื่นๆ


ข้อความบริการ - เลือกเพื่อรับหรือบล็อกข้อความบริการ คุณยังสามารถกำหนดความปลอดภัยของข้อความได้โดยการสร้างรายการผู้ส่งที่เชื่อถือได้และเชื่อถือไม่ได้

กล้องถ่ายรูป

การถ่ายภาพด้วย

เคล็ดลับ!

เลนส์กล้องถ่ายรูป จะมีฝาปิดอยู่ ให้หมุนเปิดฝาปิดเพื่อใช้กล้อง และเปิดช่องมองภาพอย่างรวดเร็ว

- 1 กดปุ่ม  ที่ด้านขวาของโทรศัพท์
- 2 เครื่องจะแสดงข้อความให้คุณเปิดฝาครอบเลนส์ ช่องมองภาพจะปรากฏขึ้นบนหน้าจอ
- 3 ให้ถือโทรศัพท์ในแนวนอน และหันเลนส์ไปทางสิ่งที่ต้องการถ่าย
- 4 กดปุ่มถ่ายภาพลงเล็กน้อย ช่องโฟกัสจะปรากฏขึ้นที่กึ่งกลางของหน้าจอช่องมองภาพ
- 5 จัดตำแหน่งโทรศัพท์เพื่อให้คุณสามารถมองเห็นสิ่งที่จะถ่ายในช่องโฟกัส
- 6 เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 7 กดปุ่มถ่ายภาพลงจนสุด

เคล็ดลับ! ถ่ายภาพแบบสัมผัส

คุณสามารถถ่ายภาพโดยการแตะที่หน้าจอได้ด้วย หลังจากเลือกวัตถุด้วยการแตะ คุณจะเห็นวัตถุในช่องโฟกัส เมื่อช่องโฟกัสเปลี่ยนเป็นสีเขียว คุณสามารถถ่ายภาพได้โดยยกนิ้วออกจากหน้าจอ

เคล็ดลับ! การติดตามหน้า

ตรวจจับและโฟกัสใบหน้าของมนุษย์โดยอัตโนมัติเพื่อช่วยให้คุณถ่ายภาพได้คมชัด

01

02

03

04

05


06


07

08


กล้องถ่ายรูป

หลังจากที่ถ่ายภาพแล้ว
ภาพที่ถ่ายจะปรากฏบนหน้าจอ
ชื่อของภาพจะวิ่งไปตามด้านล่าง
ของหน้าจอ พร้อมกับมีไอคอน 5
ไอคอนเรียงอยู่ทางด้านขวามือ

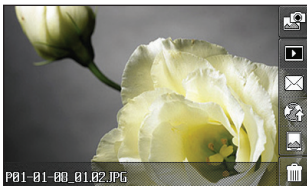


 และเพื่อถ่ายภาพอื่นๆ ทันที
โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้


 และเพื่อดูคลังภาพของรูปภาพ
ที่บันทึกไว้

 และเพื่อส่งรูปภาพเป็น
ข้อความ, อีเมล, บลูทูธ
หรือไปสการ์ด โปรดดูที่หน้า 34
สำหรับการส่งข้อความ และหน้า 109
สำหรับการส่งและการรับไฟล์โดย
ใช้บลูทูธ

 และเพื่อตั้งรูปภาพที่คุณถ่าย
เป็นพื้นหลัง

 และเพื่อลบรูปภาพที่เพิ่งถ่ายไว้
และยืนยันด้วยการแตะที่ **ใช่** ช่อง
มองภาพจะปรากฏขึ้นอีกครั้ง

ทำความรู้จักกับช่องมองภาพ

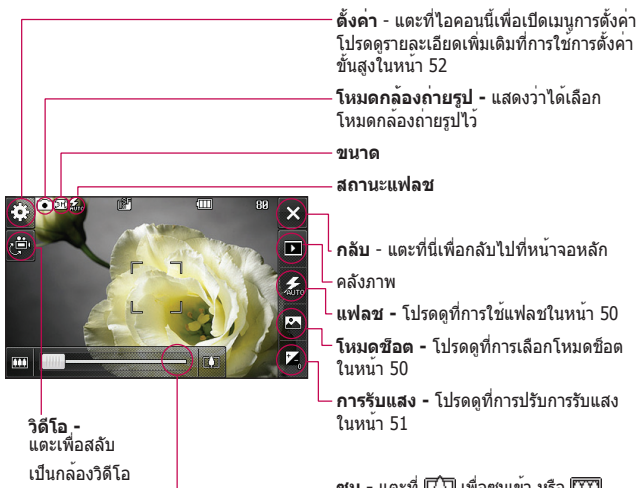

วิดีโอ -
แตะเพื่อสลับ
เป็นกล้องวิดีโอ

ตั้งค่า - แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
โปรดดูรายละเอียดเพิ่มเติมที่การใช้การตั้งค่า
ขั้นสูงในหน้า 52

โหมดกล้องถ่ายรูป - แสดงว่าได้เลือก
โหมดกล้องถ่ายรูปไว้

ขนาด

สถานะแฟลช

กลับ - แตะที่นี่เพื่อกลับไปหน้าจอหลัก
คลังภาพ

แฟลช - โปรดดูที่การใช้แฟลชในหน้า 50

โหมดชัตเตอร์ - โปรดดูที่การเลือกโหมดชัตเตอร์
ในหน้า 50

การรับแสง - โปรดดูที่การปรับการรับแสง
ในหน้า 51

ซูม - แตะที่ เพื่อซูมเข้า หรือ เพื่อซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้

เคล็ดลับ! คุณสามารถปิดตัวเลือกปุ่ม
ลัดเพื่อใหหน้าจอช่องมองภาพโล่งขึ้น
ได้ เพียงแตะที่กึ่งกลางของช่องมองภาพ
หนึ่งครั้ง ในการเรียกใช้งานตัวเลือกใหม่
ให้แตะที่หน้าจออีกครั้ง

01

02

03

04

05

06


07

08

กล้องถ่ายรูป

การใช้แฟลช


ค่าเริ่มต้นของแฟลช คือ อัตโนมัติ แต่คุณสามารถตั้งค่าด้วยตัวเลือกอื่นได้

- 1 เลือก  จากด้านขวาของช่องมองภาพเพื่อเข้าสู่เมนูย่อยแฟลช
- 2 มีตัวเลือกแฟลชให้เลือก 3 ตัวเลือก คือ:
 - อัตโนมัติ** - กล้องของคุณจะประเมินความต้องการแสงเพื่อให้ได้ภาพที่ดี และใช้แฟลชเท่าที่จำเป็น
 - ลดตาแดง** - กล้องจะยิงแฟลชสองครั้งเพื่อลดตาแดง
 - ปิดเสมอ** - กล้องจะไม่ใช้แฟลชเลย ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการประหยัดพลังงานแบตเตอรี่


3 เมื่อคุณแตะที่ตัวเลือกที่คุณต้องการใช้แล้วเมนูแฟลชจะปิดเองอัตโนมัติ และกล้องก็พร้อมสำหรับการถ่ายภาพแล้ว

4 ไอคอนสถานะแฟลชในช่องมองภาพจะเปลี่ยนไปตามโหมดแฟลชใหม่ของคุณ

การเลือกโหมดชัตเตอร์

- 1 แตะที่  เพื่อเปิดโหมดชัตเตอร์ที่มีอยู่
- 2 เลือกจากตัวเลือกต่างๆ 7 ตัวเลือกต่อไปนี้:

ชัตเตอร์ปกติ - ตัวเลือกนี้เป็นประเภทการถ่ายภาพเริ่มต้น ซึ่งใช้สำหรับการถ่ายภาพแบบปกติ เช่นเดียวกับที่อธิบายในการถ่ายภาพดวง

ถ่ายภาพยิ้ม - ประเภทการถ่ายภาพนี้เหมาะสำหรับการถ่ายภาพบุคคล เล็งไปที่บุคคลและกด  จากนั้นเครื่องจะถ่ายภาพโดยอัตโนมัติเมื่อยิ้ม

ถ่ายภาพสวยงาม - ตัวเลือกนี้ทำให้คุณถ่ายภาพใบหน้าของบุคคลได้ชัดเจนและสว่างสดใส เหมาะอย่างยิ่งเมื่อคุณถ่ายภาพระยะใกล้

ถ่ายภาพอาร์ต - เลือกเอฟเฟกต์ภาพแบบต่างๆ (ต้นฉบับ, ขาวดำ, ร้อน, เย็น)

ข้อต่อเนื่อง - ตัวเลือกนี้ทำให้คุณสามารถถ่ายภาพต่อเนื่องอย่างรวดเร็วได้ถึง 7 ข้อต่อโดยอัตโนมัติ โปรดดูรายละเอียดเพิ่มเติมที่การถ่ายภาพต่อเนื่องในหน้า 51



พาโนรามา - ประเภทการถ่ายภาพนี้เหมาะสำหรับการถ่ายภาพกลุ่มคนขนาดใหญ่หรือถ่ายภาพวิวแบบพาโนรามา โปรดดูรายละเอียดเพิ่มเติมในหน้า 52

เฟรมข้อต่อ - เลือกจากหนึ่งในเฟรมภาพสนุกๆที่จะแปลงโลมเพื่อนของคุณหรือแค่ตกแต่งภาพบริเวณ โดยรอบก็ได้

การปรับการรับแสง

การรับแสงเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืดในภาพ ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมืด ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า

1 แตะที่ 


2 เลื่อนตัวบ่งชี้ความเข้มตามแถบไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงลดลงและมืดมากขึ้น หรือไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงสูงขึ้นและคมชัดยิ่งขึ้น

การถ่ายภาพต่อเนื่อง

1 แตะที่  เพื่อเปิดประเภทการถ่ายภาพที่มีอยู่ และเลือกข้อต่อเนื่อง

2 จัดให้วัตถุอยู่ในช่องมองภาพแล้วกดปุ่มถ่ายภาพเหมือนกับการถ่ายภาพปกติ

3 กล้องจะถ่ายภาพต่อเนื่อง 7 ข้อต่อ และแสดงภาพแรกพร้อมด้วยภาพขนาดย่อ 7 ภาพที่ด้านซ้ายมือของหน้าจอล

4 เมื่อคุณเลื่อนแถบไปที่รูปภาพที่คุณต้องการเก็บแล้ว ให้แตะที่  คุณสามารถบันทึกรูปภาพได้มากกว่าหนึ่งภาพ

01

02

03

04

05

06


07

08

กล้องถ่ายรูป

การถ่ายภาพพาโนรามา

ถ่ายภาพวิถีชีวิตในแบบที่เป็นด้วยภาพพาโนรามา กล้องจะถ่ายภาพ 3 ภาพในแนวเดียวกัน และรวมกันเข้าเป็นภาพมุมกว้างภาพเดียว

- 1 **แตะที่  เพื่อเปิดประเภทการถ่ายภาพที่มีอยู่ และเลือกถ่ายภาพพาโนรามา**
- 2 **ถ่ายภาพแรกตามปกติ** เงามทางด้านขวามือของภาพจะปรากฏในช่องมองภาพ
- 3 **เมื่อถ่ายภาพที่สองและสามแล้ว** เรียงภาพเงาของภาพก่อนหน้าเข้ากับภาพในช่องมองภาพ
- 4 **ในคลังเก็บภาพ** รูปภาพจะถูกบันทึกไว้เป็นภาพสามภาพแยกกัน และเป็นภาพพาโนรามาหนึ่งภาพ

หมายเหตุ:

เนื่องจากขนาดของภาพ ภาพพาโนรามาที่แสดงมุมมองคลังภาพจะมีลักษณะค่อนข้างมืดสัดส่วน ให้แตะที่ภาพสองครั้งเพื่อดูภาพอย่างถูกต้อง

การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะที่  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

การตั้งค่าดูตัวอย่าง

ขนาด - เปลี่ยนขนาดของภาพเพื่อบันทึกในพื้นที่หน่วยความจำ หรือถ่ายภาพแบบที่กำหนดขนาดไว้ถูกต้องสำหรับรายชื่อ โปรดดูที่การเปลี่ยนขนาดภาพในหน้า 55

โหมดถ่ายภาพ - ตั้งค่ากล้องถ่ายรูปเพื่อปรับให้เข้ากับสภาพแวดล้อม เลือกจากอัตโนมัติ, รูปคน, ทิวทัศน์, กลางคืน, ชายหาด และกีฬา

เอฟเฟกต์สี - เลือกโทนสีเพื่อใช้กับภาพที่คุณถ่าย โปรดดูที่การเลือกเอฟเฟกต์สีในหน้า 55

การตรวจสอบการกะพริบตา

- ตัวเลือกนี้ทำให้กล้องหยุดถ่ายภาพได้เมื่อตรวจพบการกะพริบตา

ความสมดุลแสง - เลือกจากอัตโนมัติ, หลอดไฟ, แสงอาทิตย์, ฟลูออเรสเซนต์ หรือ มืดครึ้ม

มาโคร - เปิดเพื่อถ่ายภาพระยะใกล้
ตั้งเวลาถ่ายภาพ - การตั้งเวลา
ถ่ายภาพให้คุณสามารถตั้งเวลา
หน่วงหลังจากที่กดปุ่มถ่ายภาพ
แล้วได้ ให้เลือกจาก ปิด, 3 วินาที, 5
วินาที หรือ 10 วินาที ซึ่งเหมาะสา
หรับการถ่ายภาพกลุ่มที่คุณต้องการ
เป็นส่วนหนึ่งในกลุ่มด้วย

ISO - กำหนดความไวของเซนเซอร์
แสงในกล้อง ISO ที่มากขึ้น ความไว
ของกล้องก็มากขึ้นเท่านั้น ซึ่งจะเป็น
ประโยชน์สำหรับสภาพแวดล้อมที่มีด
ในขณะที่ไม่ได้ใช้งาน
แฟลช เลือกค่า ISO จาก อัตโนมัติ,
ISO 100, ISO 200, ISO 400, ISO
800 หรือ ISO1600

คุณภาพ - เลือกระหว่าง
ละเอียดมาก, ละเอียด และ ปกติ
คุณภาพที่ละเอียดมากขึ้นเท่าใด
ความคมชัดของรูปภาพก็มากขึ้นเท่า
นั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย
ซึ่งหมายความว่า คุณจะสามารถจัด
เก็บรูปภาพในหน่วยความจำได
น้อยลง

การชดเชยแสงด้านหลัง - เมื่อ
คุณถ่ายภาพโดยมีแสงสว่างด้านหลัง
วัตถุอาจปรากฏเป็นสีดำ
เปิดฟังก์ชันนี้เพื่อชดเชยแสง
วัตถุในรูปภาพจะสว่างขึ้น

กล้องภายใน/กล้องภายนอก -
สำหรับการถ่ายภาพตนเอง ให้สลับ
เป็นกล้องภายในของ LG KC910
โปรดดูรายละเอียดเพิ่มเติมที่
การใช้กล้องถ่ายรูปภายใน ในหน้า
56

01

02

03

04

05

06

07

08

กล้องถ่ายรูป

การตั้งค่าอื่นๆ

หน่วยความจำ - เลือกว่าจะบันทึกรูปภาพที่หน่วยความจำเครื่องหรือที่หน่วยความจำภายนอก

จีโอแท็ก - เลือกเพื่อเปิดข้อมูล EXIF สำหรับรูปภาพเพื่อเขียนข้อมูล GPS

ซูม - เลือกซูมจาก 4X, 8X หรือ 16X

การป้องกันภาพสั่นไหว - ทำให้คุณถ่ายภาพได้โดยกล้องไม่สั่น

โฟกัส - เลือกวิธีการโฟกัสของกล้อง เลือกจาก อัตโนมัติ, กำหนดเอง หรือการติดตามหน้า

เสียงชัตเตอร์ - เลือกเสียงชัตเตอร์ เสียงใดเสียงหนึ่งจากสามเสียง

หน้าจอกрид - เลือกจาก ปิด, 4 ส่วน หรือ 9 ส่วน

รีเซ็ตการตั้งค่า - รีเซ็ตการตั้งค่ากล้องถ่ายรูปทั้งหมด

เคล็ดลับ! เมื่อคุณออกจากกล้องถ่ายรูป การตั้งค่าทั้งหมดของคุณจะกลับสู่ค่าเริ่มต้นยกเว้นขนาดภาพและคุณภาพของภาพ สำหรับการตั้งค่าที่ไม่ใช่ค่าเริ่มต้น การตั้งค่าของคุณจะถูกรีเซ็ตตัวอย่างเช่น โทนสีและ ISO ตรวจสอบค่าเหล่านี้ ก่อนที่คุณจะถ่ายภาพครั้งถัดไป

เคล็ดลับ! เมนูการตั้งค่า ซ่อนทัບอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบด้านสีหรือคุณภาพของภาพ คุณจะสามารภเห็นการเปลี่ยนแปลงภาพในการดูตัวอย่างด้านหลังเมนูการตั้งค่า

การเปลี่ยนขนาดภาพ


จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งอีกนัยหนึ่งก็คือ การใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บรูปภาพในโทรศัพท์ให้มากขึ้น คุณสามารถแก้ไขจำนวนพิกเซลเพื่อให้ไฟล์มีขนาดเล็กลงได้

- 1 จากช่องมองภาพ ให้แตะที่  ในมุมซ้ายด้านบน
- 2 เลือก **ขนาด** จากเมนูตัวอย่าง
- 3 เลือกค่าพิกเซลจากตัวเลือกหกตัวเลือก (**8M: 3264 X 2448, 5M: 2592x1944, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**)

หรือเลือกค่าที่ตั้งไว้ล่วงหน้า:

รายชื่อ - ตัวเลือกนี้จะเป็นการกำหนดให้กล้องถ่ายภาพในขนาดที่เหมาะสมกับการเพิ่มในรายชื่อในโทรศัพท์

การเลือกเอฟเฟกต์สี

- 1 จากช่องมองภาพ ให้แตะที่  ในมุมซ้ายด้านบน
- 2 เลือก **เอฟเฟกต์สี** จากเมนูตัวอย่าง
- 3 ตัวเลือกโทนสีมีห้าตัวเลือกดังนี้: **ปิด, ขาวดำ, เนกาทีฟ, สีซีเปีย** หรือ **แบบ Posterize**
- 4 เมื่อคุณเลือกแล้ว สามารถปิดเมนูโทนสีได้โดยการเลือกไอคอนย้อนกลับ และกล้องก็พร้อมสำหรับการถ่ายภาพแล้ว

เคล็ดลับ! คุณสามารถเปลี่ยนรูปภาพที่ถ่ายไว้สีเป็นขาวดำหรือซีเปียได้ หลังจากบันทึกภาพ แต่คุณจะไม่เปลี่ยนรูปภาพที่ถ่ายไว้เป็นขาวดำหรือซีเปียกลับเป็นภาพสีไม่ได้

01

02

03

04

05

06

07

08


กล้องถ่ายรูป

การใช้กล้องถ่ายรูปภายใน


LG KC910

มีกล้องถ่ายภาพตัวในขนาด 640x480


ซึ่งไม่เพียงใช้สำหรับการสนทนาทางวิดีโอเท่านั้น แต่ยังใช้สำหรับการถ่ายภาพด้วย

- 1 ในการสลับไปยังกล้องถ่ายรูปภายใน ให้แตะที่  แล้วเลือก **กล้องภายใน** จากเมนู ดูตัวอย่าง
- 2 หลังจากผ่านไปสักครู่ คุณจะเห็นภาพตัวคุณเองอยู่ในช่องมองภาพ ในการถ่ายภาพ ให้กดปุ่มถ่ายภาพตามปกติ

3 หลังจากที่คุณถ่ายภาพแล้ว เครื่องจะแสดงตัวเลือกทั้งหมดเหมือนกับในการถ่ายภาพด้วยกล้องหลัก


4 ในการกลับไปยังกล้องหลัก ให้แตะที่  แล้วเลือก **กล้องภายนอก** จากเมนู ดูตัวอย่าง **การดูรูปภาพที่บันทึกไว้**

1 คุณสามารถเข้าดูรูปภาพที่บันทึกจากภายในโหมดกล้องถ่ายรูปได้ เพียงแตะที่  คลังภาพ จะปรากฏบนจอ

เคล็ดลับ! กล้องถ่ายรูปตัวในการตั้งค่าที่น้อยกว่ากล่าวคือ ไม่มีแฟลช และ ISO คุณยังสามารถเปลี่ยนขนาดภาพ, โหมดถ่ายภาพ, เอกเฟกตส์, คุณภาพของภาพ, ความสมดุลแสง และตั้งเวลาถ่ายภาพได้โดยแตะที่  แบบเดียวกับที่ใช้กล้องหลัก

กล้องวิดีโอ


การถ่ายวิดีโอด้วย

- 1 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์ค้างไว้
- 2 หรือแตะที่  ในช่องมองภาพในโหมดกล้องถ่ายรูปเพื่อสลับเป็นโหมดวิดีโอ

เคล็ดลับ!

เปิดกล้องวิดีโออย่างรวดเร็ว
โดยกดปุ่มกล้องถ่ายรูปค้างไว้

- 3 ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 4 ให้ถือโทรศัพท์ในแนวนอนและหันไปทางสิ่งที่จะถ่าย
- 5 กดปุ่มถ่ายภาพหนึ่งครั้งเพื่อเริ่มการบันทึก
- 6 **Rec** จะปรากฏขึ้นที่ด้านบนของช่องมองภาพ และตัวตั้งเวลาทางด้านล่างเพื่อแสดงระยะเวลาของวิดีโอของคุณ
- 7 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  แล้วเริ่มบันทึกต่อโดยเลือก 

- 8 แตะที่  บนหน้าจอ หรือกดปุ่มถ่ายภาพซ้ำอีกครั้งเพื่อหยุดการบันทึก

01

02

03

04

05

06

07


08

กล้องวิดีโอ


หลังจากที่ถ่ายวิดีโอแล้ว

ภาพนิ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ ชื่อของวิดีโอจะแสดงอยู่ที่ด้านล่างของหน้าจอ พร้อมกับมีไอคอน 5 ไอคอนเรียงอยู่ทางด้านขวามือ




 และเพื่อถ่ายภาพวิดีโออื่นต่อ โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้

 และเพื่อเล่นวิดีโอ


 และเพื่อส่งวิดีโอเป็นข้อความ , ทางอีเมล หรือทางบลูทูธ โปรดดูที่หน้า 34 สำหรับ การส่งข้อความ หรือหน้า 109 สำหรับ การส่งและการรับไฟล์ โดยใช้บลูทูธ

 และเพื่ออัปโหลดไปยัง Blog แอคเคาท์ของคุณ

 และเพื่อดูคลังภาพของวิดีโอ และรูปภาพที่บันทึกไว้

 และเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะที่ **ใช่** ของมุมมองภาพจะปรากฏขึ้นอีกครั้ง

ทำความรู้จักกับช่องมองภาพ

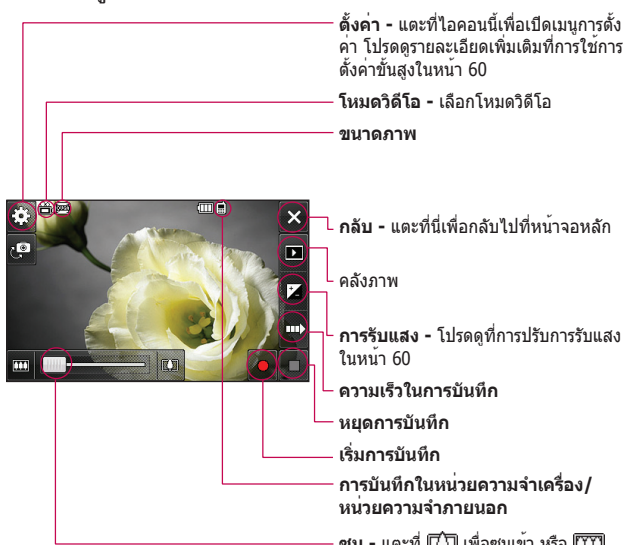

เคล็ดลับ! คุณสามารถปิดตัวเลือกปุ่มลัดเพื่อให้อินโฟของช่องมองภาพโลจิ่งขึ้นได้ เพียงแตะที่กึ่งกลางของช่องมองภาพหนึ่งครั้ง ในการเรียกใช้งานตัวเลือกใหม่ให้แตะที่หน้าจออีกครั้ง

01

02

03

04

05

06

07



08

กล้องวิดีโอ

การปรับการรับแสง

การรับแสงเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืดในภาพ ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมัว ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า

1 แตะที่ 

2 เลื่อนตัวบ่งชี้การรับแสงตามแถบไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงลดลงและมัวมากขึ้น หรือไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงสูงขึ้นและคมชัดยิ่งขึ้น

การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะที่ **ตั้งค่า** เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

การตั้งค่าดูตัวอย่าง

ขนาดวิดีโอ - เปลี่ยนขนาดของวิดีโอเพื่อบันทึกลงในพื้นที่หน่วยความจำ โปรดดูที่ **การเปลี่ยนขนาดของภาพวิดีโอ** ในหน้า 61

โหมดถ่ายภาพ - เลือกจาก **อัตโนมัติ** หรือ **กลางคืน**

เอฟเฟกต์สี - เลือกโทนสีเพื่อใช้กับวิดีโอที่คุณกำลังถ่าย โปรดดูที่ **การเลือกโทนสี** ในหน้า 62

ความสมดุลแสง - ความสมดุลแสงจะช่วยให้มั่นใจได้ว่าแสงขาวที่ปรากฏในวิดีโอจะสวยงามจริง เพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน เลือกจาก **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** หรือ **มิดครีม**

คุณภาพ - เลือกระหว่าง **ละเอียดมาก**, **ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของวิดีโอก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่งหมายความว่า คุณจะสามารถจัดเก็บวิดีโอในหน่วยความจำของเครื่องได้น้อยลง

ระยะเวลา - ตั้งค่าจำกัดระยะเวลาสำหรับวิดีโอของคุณ เลือกจาก **ไม่จำกัด** หรือ **MMS** เพื่อจำกัดขนาดที่สามารถส่งวิดีโอเป็น MMS ได้

เคล็ดลับ!

หากคุณเลือกระยะเวลาแบบ MMS ลองเลือกคุณภาพของภาพที่ต่ำลง เพื่อการถ่ายภาพวิดีโอที่ยาวนานขึ้น

กล้องภายใน/กล้องภายนอก - สลับไปที่กล้องตัวในของ LG KC910 เพื่อบันทึกภาพวิดีโอตัวคุณเอง โปรดดูรายละเอียดเพิ่มเติมที่ **การใช้กล้องถ่ายวิดีโอตัวใน** ในหน้า 62

การตั้งค่าอื่นๆ

หน่วยความจำ - เลือกว่าจะบันทึกวิดีโอที่ความจำเครื่องหรือที่หน่วยความจำภายนอก

เสียง - เลือก ปิดเสียง เพื่อบันทึกวิดีโอโดยไม่มีเสียง


ไมโครโฟนไร้เสียงรบกวน - เปิด สำหรับคุณภาพเสียงระดับสูง

ซูม - เลือกซูมจาก 4X, 8X หรือ 16X


รีเซ็ตการตั้งค่า - รีเซ็ตการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด


การเปลี่ยนขนาดของภาพวิดีโอ

จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งอีกนัยหนึ่งก็คือ การใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บวิดีโอลงในโทรศัพท์ของคุณให้มากขึ้น คุณสามารถแก้ไขจำนวนพิกเซลเพื่อให้ไฟล์มีขนาดเล็กลงได้

- 1 จากช่องมองภาพ ให้แตะที่  ในมุมซ้ายด้านบน
- 2 เลือก **ขนาดวิดีโอ** จากเมนู ดูตัวอย่าง
- 3 เลือกค่าพิกเซลจาก 5 ตัวเลือกดังนี้:

 **640x384(W)** - ตัวเลือกหน้าต่างที่มีคุณภาพสูงที่สุด

 **400x240(W)** - ตัวเลือกนี้เป็นแบบหน้าต่างกว้างเช่นกัน แต่มีความละเอียดน้อยกว่า

 **640x480** - VGA ขนาดมาตรฐาน

01

02

03

04

05

06

07

08

กล้องวิดีโอ



320x240

- ขนาดภาพเล็กลง ขนาดไฟล์จึงเล็กลงด้วยเหมาะสำหรับการประหยัดพื้นที่หน่วยความจำ



176x144

- ขนาดภาพเล็กที่สุด ขนาดไฟล์จึงเล็กที่สุดด้วย

- 4** แตะที่ไอคอนย้อนกลับเพื่อกลับไปที่ยังไม่บันทึก



คำเตือน: ซอฟต์แวร์ตัดต่อที่ยอดเยี่ยมบน LG KC910 สามารถทำงานร่วมกับวิดีโอทุกประเภท ยกเว้น 640X384 และ 640x480 ห้ามบันทึกด้วยรูปแบบนี้ หากต้องการตัดต่อวิดีโอของคุณ

เคล็ดลับ! โปรดดูข้อมูลเกี่ยวกับซอฟต์แวร์การแปลงรูปแบบวิดีโอได้ในแผ่นซีดีที่คุณได้รับมาพร้อมกับ KC910

การเลือกโทนสี


- 1 จากช่องมองภาพ ให้แตะที่ ในเมนูซ้ายด้านบน
- 2 เลือก **เอกเฟกต์สี** จากเมนู ดูตัวอย่าง
- 3 ตัวเลือกโทนสีมีห้าตัวเลือกดังนี้ **ปิด (สี), ขาวดำ, เนกาทีฟ, สีซีเปีย, แบบ Posterize**
- 4 แตะที่โทนสีที่คุณต้องการใช้

เคล็ดลับ! คุณสามารถเปลี่ยนภาพวิดีโอจากสีเป็นขาวดำหรือซีเปียได้ หลังจากบันทึกภาพ แต่คุณจะไม่เปลี่ยนภาพวิดีโอขาวดำหรือซีเปียกลับเป็นภาพสีไม่ได้

การใช้กล้องถ่ายวิดีโอตัวใน


LG KC910 มีกล้องถ่ายวิดีโอตัวในขนาด 320x240ซึ่งไม่เพียงใช้สำหรับการสนทนาทางวิดีโอเท่านั้น แต่ยังสามารถบันทึกภาพวิดีโอได้ด้วย

- 1 ในการสลับไปยังกล้องถ่ายรูปรายใน ให้แตะที่ แล้วเลือก **กล้องภายใน** จากเมนู ดูตัวอย่าง

- 2 หลังจากผ่านไปสักครู่ คุณจะเห็นภาพตัวคุณเองอยู่ในช่องมองภาพ ในการเริ่มบันทึกภาพ ให้กดปุ่มถ่ายภาพตามปกติอีกครั้งเพื่อหยุดการบันทึก
- 3 หลังจากที่คุณถ่ายภาพวิดีโอแล้ว เครื่องจะแสดงตัวเลือกทั้งหมด เหมือนกับการถ่ายวิดีโอด้วยกล้องหลัก
- 4 ในการกลับไปยังกล้องถ่ายรูปหลัก ให้แตะที่  แล้วแตะกล้องภายนอก

เคล็ดลับ! คุณยังสามารถเปลี่ยนขนาดภาพ, โหมดถ่ายภาพ, เอกเฟกต์สี, ความสมดุลแสง และคุณภาพได้โดยแตะที่ **ตั้งค่า** แบบเดียวกับที่ใช้กล้องหลัก


การดูวิดีโอที่บันทึกไว้

- 1 ในช่องมองภาพ ให้แตะที่ 
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะที่วิดีโอที่คุณต้องการดูหนึ่งครั้ง เพื่อแสดงวิดีโอที่ด้านหน้าสุดของคลังภาพซึ่งจะเริ่มเล่นโดยอัตโนมัติ

การดูวิดีโอบนโทรศัพท์

เชื่อมต่อ KC910 เข้ากับโทรศัพท์ของคุณด้วยสายเคเบิลเอาต์พุตสำหรับโทรศัพท์

หมายเหตุ: สายเคเบิลเอาต์พุตสำหรับโทรศัพท์มีวางจำหน่ายแยกต่างหาก

 **คำเตือน:** รูปแบบทั้งหมด ยกเว้น 320x240 และ 176x144 สามารถทำงานร่วมกันได้กับการดูภาพวิดีโอบนโทรศัพท์

01

02

03

04

05


06


07

08


รูปภาพและวิดีโอ

การดูรูปภาพและวิดีโอ

- 1 แตะที่  บนหน้าจอตัวอย่างในกล้องถ่ายรูป
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะที่วิดีโอหรือรูปภาพเพื่อเปิดทั้งไฟล์

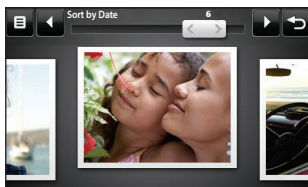

เคล็ดลับ! กดปุ่มไปทางซ้ายหรือทางขวาเพื่อดูรูปภาพหรือวิดีโออื่น

เคล็ดลับ! ในการลบรูปภาพหรือวิดีโอ ให้เปิดไฟล์นั้นๆ แล้วเลือก  แตะที่ **ใช่** เพื่อยืนยัน



การใช้การซูมขณะดูวิดีโอหรือภาพถ่าย

ในการซูมภาพเข้า ให้กด **+** ซ้ำๆ ในการซูมภาพออก ให้กด **-** ใช้ภาพขนาดย่อทางมุมล่างด้านขวาในการเลื่อนพื้นที่โฟกัส

การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะเล่น ให้แตะที่แถบระดับเสียงที่ด้านซ้ายมือของหน้าจอ หรือใช้ปุ่มระดับเสียงที่ด้านข้างของโทรศัพท์

การบันทึกภาพจากวิดีโอ

- 1 เลือกวิดีโอที่คุณต้องการบันทึกภาพมา
- 2แตะที่ **||** เพื่อหยุดภาพวิดีโอบนเฟรมที่คุณต้องการแปลงเป็นรูปภาพไว้ชั่วคราว เลือก  จากด้านบนขวาของหน้าจอ
- 3 เลือก **บันทึก**
- 4 รูปถ่ายจะปรากฏบนหน้าจอพร้อมกับชื่อภาพที่กำหนดให้
- 5แตะที่ภาพ แล้ว  เพื่อกลับไปที่คุณภาพ
- 6 เครื่องจะจัดเก็บรูปภาพไว้ในโฟลเดอร์ส่วนตัวและจะอยู่ในคลังภาพคุณจำเป็นต้องออกจากคลังภาพและเปิดอีกครั้งเพื่อให้ภาพปรากฏ

คำเตือน:

บางฟังก์ชันอาจทำงานไม่ถูกต้องหากไม่ได้บันทึกไฟล์มัลติมีเดียด้วยโทรศัพท์

การดुरुรูปภาพแบบภาพสไลด์

โหมดภาพสไลด์จะแสดงรูปภาพทั้งหมดในคลังภาพของคุณพร้อมกันเป็นภาพสไลด์ วิดีโอไม่สามารถดูเป็นแบบภาพสไลด์ได้

- 1แตะที่รูปภาพที่คุณต้องการเริ่มเล่นภาพสไลด์เพื่อเปิด
- 2 เลือก 
- 3 ภาพสไลด์จะเริ่มต้น



01

02

03

04

05

06

07

08

รูปภาพและวิดีโอ

ภายในภาพสไลด์มีตัวเลือกต่างๆ ดังนี้:



แตะเพื่อข้ามรูปภาพ



แตะเพื่อหยุดภาพสไลด์ชั่วคราวที่ภาพใดภาพหนึ่ง





แตะอีกครั้งเพื่อเริ่มเล่นต่อ




แตะเพื่อเพิ่มหรือลดความเร็วของภาพสไลด์

การตั้งค่ารูปภาพเป็นพื้นหลัง

- 1 แตะที่รูปภาพที่คุณต้องการตั้งค่าเป็นพื้นหลัง 2 ครั้งเพื่อเปิด
- 2 แตะที่หน้าจอเพื่อเปิดเมนูตัวเลือก
- 3 แตะที่ 
- 4 หน้าจอจะสลับไปเป็นโหมดแนวตั้ง คุณสามารถซูมเข้าและออกในรูปภาพ และย้ายส่วนที่ครอบโดยใช้ภาพขนาดย่อที่ด้านล่างของหน้าจอได้
- 5 เมื่อคุณพอใจกับรูปภาพนี้แล้ว ให้แตะที่ 

การแก้ไขรูปภาพ

มีคุณสมบัติยอดเยี่ยมมากมายที่คุณสามารถใช้ในการเปลี่ยนแปลงรูปภาพ เพิ่มหรือทำใหม่ชีวิตชีวาขึ้นเล็กน้อย

- 1 เปิดรูปภาพที่คุณต้องการแก้ไขและแตะที่  เพื่อแสดงตัวเลือก
- 2 แตะที่ไอคอนเพื่อปรับรูปภาพของคุณ:




ครีปรูปภาพของคุณ เลือกพื้นที่การครีปรูปภาพแบบสี่เหลี่ยมหรือวงกลม แล้วเลื่อนนิ้วของคุณไปตามหน้าจอเพื่อเลือกพื้นที่





วาดลายเส้นบนรูปภาพของคุณด้วยมือ เลือกความหนาของเส้นจาก 4 ตัวเลือก และเลือกสีที่คุณต้องการ



T เขียนข้อความบนรูปภาพ โปรดดูที่ การเพิ่มข้อความลงในรูปภาพ ในหน้า 67


 ตกแต่งรูปภาพของคุณด้วยสแตมป์ เลือกจากสแตมป์ต่างๆ ที่มีอยู่ แล้วแตะบริเวณรูปภาพที่คุณต้องการวาง

 ลบการแก้ไขที่คุณเพิ่มไว้ในรูปภาพของคุณ คุณสามารถเลือกขนาดของยางลบที่คุณจะใช้ได้

 บันทึกการเปลี่ยนแปลงที่คุณทำไว้ในรูปภาพของคุณ เลือกเพื่อบันทึกการเปลี่ยนแปลงทับ **ไฟล์ต้นฉบับ** หรือบันทึกเป็น **ไฟล์ใหม่** หากคุณเลือก **ไฟล์ใหม่** ให้ป้อนชื่อไฟล์

 เลิกทำ **เอฟเฟกต์** หรือการแก้ไขล่าสุดที่คุณทำไว้ในรูปภาพ

 โปรดดูที่ **การเพิ่มเอฟเฟกต์ลงในรูปภาพ** ในหน้า 68

 แตะเพื่อเปิดตัวเลือกเอฟเฟกต์เพิ่มเติม ได้แก่ หมุน นอกจากนี้ยังมีตัวเลือกการแก้ไขขั้นสูงเพิ่มเติมอีก โปรดดูที่ **การแปลงรูปภาพ, การเน้นสี และ การสลับสี** ใน

รูปภาพ ในหน้า 70

 แตะเพื่อกลับไปที่คุณภาพ



การเพิ่มข้อความลงในรูปภาพ

- 1 จากหน้าจอลำดับแรก ให้แตะที่ **T**
- 2 เลือก **ลายเซ็น** เพื่อเพิ่มข้อความแบบไม่มีกรอบหรือเลือกรูปทรงลูกโป่งแสดงคำพูด
- 3 ป้อนข้อความโดยใช้ปุ่มกด และแตะที่ **เสร็จ**
- 4 เส้นข้อความโดยแตะที่ข้อความแล้วเลื่อนไปยังบริเวณที่คุณต้องการวาง

01

02

03

04

05



06

07

08

รูปภาพและวิดีโอ

การเพิ่มเอฟเฟกต์ลงในภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ 
- 2 เลือกเพื่อใช้ตัวเลือกใดตัวเลือกหนึ่งจาก 18 ตัวเลือกกับรูปภาพ
 - ตกแต่งใบหน้า** - ตรวจสอบใบหน้าในรูปภาพอัตโนมัติและทำให้ใบหน้าสว่างขึ้น
 - เนกาทีฟสี** - เอฟเฟกต์เนกาทีฟสี
 - ขาวดำ** - เอฟเฟกต์สีขาวดำ
 - สีซีเปีย** - เอฟเฟกต์สีซีเปีย
 - เบลอ** - ใช้เอฟเฟกต์เบลอ
 - คมชัด** - เลื่อนเครื่องหมายบนแถบเพื่อให้โฟกัสของภาพดูคมชัดขึ้น เลือกไอคอน ดกลงเพื่อใช้ค่าการเปลี่ยนแปลงหรือเลือก  เพื่อยกเลิก
 - เบลอ** - แตะเพื่อใช้เอฟเฟกต์ฟิชเชิลเบลอกับรูปภาพ
 - สีน้ำมัน** - เอฟเฟกต์สีน้ำมัน
 - สเก็ตซ์** - ใช้เอฟเฟกต์เพื่อทำให้ภาพดูเหมือนภาพสเก็ตซ์
 - พิมพ์นูน** - เอฟเฟกต์พิมพ์นูน

โซลาไลซ์ - เปลี่ยนเอฟเฟกต์การรับแสง

แสงจ้า - เอฟเฟกต์ความคมชัดและความสว่าง

แสงจันทร์ - เปลี่ยนแสงให้ดูเหมือนแสงจันทร์

แอนติค - เอฟเฟกต์รูปภาพเก่า

เรื่องแสง - เอฟเฟกต์การใช้ลำแสง



การดูน - เอฟเฟกต์การดูน

สีน้ำ - ทำรูปภาพให้ดูเหมือนภาพวาดสีน้ำ

- 3 ในการเลือกทำเอฟเฟกต์เพียงแค่แตะที่ 


เคล็ดลับ! คุณสามารถเพิ่มเอฟเฟกต์ได้มากกว่าหนึ่งเอฟเฟกต์ในรูปภาพ


ครีโพรภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ 
- 2 เลือกรูปร่างที่คุณต้องการใช้ครีโพรภาพ
- 3 ลากกรอบไปที่พื้นที่ที่คุณต้องการครีโพร
- 4 เมื่อคุณพอใจกับการเลือกแล้ว ให้แตะที่ 


การแปลงรูปภาพ

การแปลงรูปภาพเหมาะสำหรับการเปลี่ยนสีหน้าของเพื่อนคุณ หรือเพียงแคใช้เอฟเฟกต์งานศิลปะเพื่อตัดแปลงรูปภาพก็ได้

- 1 จากหน้าจอแก้ไข ให้แตะที่ 
- 2 เลือก **รูปร่าง** และเครื่องหมายกากบาท 4 อันจะปรากฏขึ้นบนรูปภาพ
- 3 ย้ายเครื่องหมายไปในภาพเพื่อแสดงพื้นที่ที่คุณจะแปลงภาพ ตัวอย่างเช่น หากคุณต้องการแปลงภาพบริเวณหน้า ให้วางเครื่องหมายกากบาทที่มุมด้านนอกของดวงตาแต่ละข้างและมุมปากแต่ละข้าง

- 4 เลือกแบบหน้าที่คุณต้องการจะแปลง
- 5 เลือก  เพื่อบันทึกการเปลี่ยนแปลง

การเน้นสีในรูปภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ 
- 2 เลือก **เน้นสี**
- 3 เลือกส่วนหนึ่งส่วนใดของภาพ รอยเส้นจะปรากฏรอบสิ่งต่างๆ ในบริเวณนั้นมีสีเหมือนกัน หรือคล้ายคลึงกัน ตัวอย่างเช่น ผมหรือเสื้อ
- 4 ปรับความหนักเบาในการเน้นโดยแตะที่  และเลื่อนเครื่องหมายในแถบความหนักเบาขึ้นหรือลง
- 5 แตะที่ **ตกลง**

01

02

03

04


05

06




07

08

รูปภาพและวิดีโอ

- 6 สี่ทั้งหมดจะหายไปจากรูปภาพหายไปจากบริเวณที่ทำเครื่องหมายสำหรับการเน้นสีไว้
- 7 เลือก  เพื่อบันทึกการเปลี่ยนแปลง

การสลับสีในรูปภาพ


- 1 จากหน้าจอแก้ไข ให้แตะที่ 
- 2 เลือก **เปลี่ยนสี**
- 3 เลือกส่วนหนึ่งส่วนใดของภาพ รอยเส้นจะปรากฏรอบสิ่งต่างๆ ในบริเวณนั้นมีสีเหมือนกันหรือคล้ายคลึงกัน ตัวอย่างเช่น ผมหรือเสื้อ
- 4 แตะที่  และเลือกสี
- 5 กด **ตกลง**
- 6 ส่วนของรูปภาพที่เลือกไว้สำหรับการเน้นสีจะเปลี่ยนเป็นสีที่เลือกไว้แทน
- 7 เลือก  เพื่อบันทึกการเปลี่ยนแปลง

การแก้ไขวิดีโอ

คุณสมบัติแก้ไขภาพจะสามารถใช้ได้กับวิดีโอทุกประเภท ยกเว้น 640x384 และ 640x480 ห้ามบันทึกด้วยรูปแบบนี้ หากคุณต้องการตัดต่อวิดีโอของคุณ

การตัดความยาวของวิดีโอ


- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก  และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Trim**
- 3 แตะที่  และทำเครื่องหมายที่จุดเริ่มต้นและจุดสิ้นสุดใหม่โดยใช้ 
- 4 แตะที่  เพื่อให้แน่ใจว่าคุณชอบการตัดต่อใหม่นี้
- 5 แตะที่  หรือแตะที่  เพื่อกลับไปที่คุณภาพและยกเลิกการเปลี่ยนแปลง

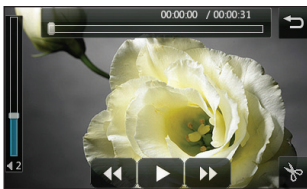

การรวมวิดีโอสองเรื่องเข้าด้วยกัน

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Video merge**
- 3 โฟลเดอร์ วิดีโอส่วนตัว จะเปิดขึ้น เลือกวิดีโอที่คุณต้องการรวม
- 4 แตะและเลือกรูปภาพเพื่อรวมเข้าที่ตอนท้ายหรือตอนเริ่มต้นของวิดีโอ

5 แตะที่  เพื่อเลือกวิธีการรวมวิดีโอเข้าด้วยกัน: **ปิด, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve,** แบ่ง หรือ **รูปทรงเพชร**

- 6 กด  แล้วตามด้วย **ใช้** เพื่อบันทึกวิดีโอที่รวมกันใหม่นี้ เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 7 ทำซ้ำขั้นตอนเหล่านี้เพื่อรวมวิดีโอเรื่องอื่นๆ

การรวมรูปภาพเข้ากับวิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Image merge**
- 3 โฟลเดอร์ ภาพส่วนตัว จะเปิดขึ้น เลือกรูปภาพที่คุณต้องการรวมเข้ากับวิดีโอ แตะและที่ **เลือก**

01

02

03

04

05

06

07



08

รูปภาพและวิดีโอ




- 4 แตะและเลื่อนรูปภาพเพื่อรวมเข้าที่ตอนท้ายหรือตอนเริ่มต้นของวิดีโอ
- 5 แตะที่  เพื่อเลือกวิธีการรวมรูปภาพและวิดีโอเข้าด้วยกัน: **ปิด, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve**, แมง หรือรูปทรงเพชร
- 6 กด **บันทึก** แล้วตามด้วย **ใช้** เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 7 ทำซ้ำขั้นตอนเหล่านี้เพื่อรวมรูปภาพอื่นๆ

การเพิ่มข้อความลงในวิดีโอ





- 1 เปิดวิดีโอที่คุณต้องการแก้ไขแล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Text overlay**
- 3 ป้อนข้อความโดยใช้ปุ่มกดแล้วเลือก **บันทึก**

- 4 แตะที่  และเลือกว่าเมื่อใดที่ต้องการให้ข้อความปรากฏขึ้นโดยใช้ 
- 5 แตะที่บริเวณหน้าจอที่คุณต้องการให้ข้อความปรากฏขึ้น



- 6 แตะที่  เพื่อเลือกว่าเมื่อใดที่ต้องการให้ข้อความหายไป
- 7 แตะที่  เพื่อให้แน่ใจว่าคุณชอบการซ่อนข้อความนี้
- 8 แตะที่  แล้วตามด้วย **ใช้** เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 9 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มข้อความอื่นๆ

การซ่อนรูปภาพ

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก  และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Image overlay**
- 3 โฟลเดอร์ ภาพส่วนตัว จะเปิดขึ้น เลือกรูปภาพที่คุณต้องการซ่อนบนวิดีโอ
- 4 แตะที่  และเลือกว่าเมื่อใดที่ต้องการให้รูปภาพปรากฏขึ้น โดยใช้ 
- 5 เลือกบริเวณหน้าจอที่คุณต้องการให้รูปภาพปรากฏขึ้น
หากรูปภาพมีขนาดใหญ่มากเกินไป ภาพอาจซ่อนทับทั้งหน้าจอ ซึ่งอาจไม่ใช่เพียงบริเวณที่เลือกได้
- 6 แตะที่  เพื่อเลือกว่าเมื่อใดที่ต้องการให้ภาพหายไป
- 7 แตะที่  เพื่อให้แน่ใจว่าคุณชอบการซ่อนรูปภาพนี้

8 แตะที่  แล้วตามด้วย **ใช้** เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่

9 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มรูปภาพอื่นๆ

การใส่การบันทึกเสียง

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก  และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Voice recording**
- 3 คุณภาพของเสียงต้นฉบับอาจได้รับผลกระทบจากการใส่การบันทึกเสียงได้ แตะที่ **ใช้** เพื่อดำเนินการต่อ
- 4 แตะที่  เพื่อดูวิดีโอ เมื่อถึงตอนที่ต้องการบันทึกเสียง ให้กด 

01

02

03

04


05



06

07


08

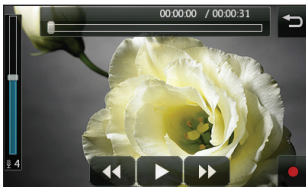รูปภาพและวิดีโอ



- กด เพื่อหยุดการบันทึกและเล่น
- แตะที่  เพื่อให้แน่ใจว่าคุณพอใจกับการบันทึกเสียงนี้
- แตะที่  แล้วตามด้วย **ใช่** เพื่อบันทึก เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มการบันทึกเสียงอื่นๆ ลงในวิดีโอ


การใส่ซาวด์แทร็คลงในวิดีโอ

- เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- เลือก  แล้วเลือก **Audio dubbing**
- โพลเดอร์ เสียงส่วนตัว จะเปิดขึ้น


เลือกแทร็คที่คุณต้องการเพิ่มในวิดีโอ

- เสียงต้นฉบับในวิดีโอจะถูกลบออกและที่ **ใช่** เพื่อดำเนินการต่อ
- หากเสียงสั้นกว่าวิดีโอ ให้เลือกว่าจะเล่น **ครั้งเดียว** หรือเล่น **ซ้ำ**
- เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่

การเปลี่ยนความเร็วของวิดีโอ

- เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- เลือก  แล้วเลือก **สเกลเวลา**
- เลือกตัวเลือกความเร็วตัวเลือกใดตัวเลือกหนึ่งจากสี่ตัวเลือกนี้: x4, x2, x1/4, x1/2.
- เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่

การใส่เอฟเฟกต์การเคลื่อนไหว

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  และเลือก Dimming Effect
- 3 เลือกเพื่อบันทึกที่ไฟลด์นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 4 วิดีโอของคุณจะมีการเฟดเข้าที่ตอนเริ่มต้นและเฟดออกที่ตอนจบ

01

02

03

04

05

06

07

08

มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้การ์ดหน่วยความจำคือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์

ในการเข้าใช้งานเมนูมัลติมีเดียให้แตะที่  แล้วเลือก

ความบันเทิง แตะที่ **แฟ้มข้อมูล** เพื่อเปิดรายการโฟลเดอร์ที่จัดเก็บไฟล์มัลติมีเดียทั้งหมด

รูปภาพ

ภาพส่วนตัว

ประกอบด้วยรายการรูปภาพ รวมถึงภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

เมนูตัวเลือกภาพส่วนตัว

ตัวเลือกที่มีอยู่ใน **ภาพส่วนตัว** จะขึ้นอยู่กับประเภทรูปภาพที่คุณเลือกตัวเลือกทั้งหมดจะใช้ได้กับภาพที่คุณถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์ ส่วนตัวเลือก **ใช่เป็น**, **พิมพ์**, **เรียงตาม** และ **สถานะความจำ** จะมีสำหรับภาพเริ่มต้นเท่านั้น

เคล็ดลับ! เมื่อดูรูปภาพให้หมุนโทรศัพท์ในแนวนอนเพื่อเรียกตัวเลือกเพิ่มเติมทางด้านขวาของหน้าจอ เลือกจาก **ส่ง**, **อัปโหลด**, **ตั้งเป็นหน้าจอหลัก**, **แก้ไข** และ **ลบ**

ส่ง - ส่งภาพให้เพื่อน

แก้ไข - แก้ไขภาพ

ย้าย - ย้ายรูปภาพจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำหรือย้ายจากการ์ดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์


คัดลอก - คัดลอกรูปภาพจากหน้าจอของโทรศัพท์ไปที่การ์ดความจำหรือคัดลอกจากการดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์
ใช้เป็น - เลือกจากธีมหน้าจอ, ภาพรายชื่อ, สายเรียกเข้า, สายโทรออก, ภาพเปิดหรือปิดเครื่อง
แก้ไข - เปลี่ยนชื่อภาพ

Smart Light - เปลี่ยนแสงของรูปภาพเพื่อปรับปรุงโดยอัตโนมัติ

พิมพ์ - พิมพ์ภาพที่เลือกโดยใช้เครื่องพิมพ์ที่สนับสนุนโดยใช้ Pictbridge หรือบลูทูธ

ภาพสไลด์ - ดูภาพเป็นภาพสไลด์
ข้อมูลไฟล์ - ดูข้อมูลไฟล์


การส่งรูปภาพ

- 1 แตะที่  แล้วเลือก **ความบันเทิง**
- 2 แตะที่ **เพิ่มข้อมูล** แล้วแตะ **ภาพส่วนตัว**
- 3 เลือกรูปภาพที่คุณต้องการส่งและแตะที่ **ส่ง** เลือกจาก **ข้อความ**, **อีเมล** หรือ **บลูทูธ**

- 4 หากคุณเลือก **ข้อความ** หรือ **อีเมล** รูปภาพจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธและโทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งภาพไป

การใช้รูปภาพ

คุณสามารถเลือกรูปภาพเพื่อใช้เป็นพื้นหลังและภาพพิกหน้าจอหรือใช้เพื่อระบุผู้โทรเข้าได้

- 1 แตะที่  แล้วเลือก **ความบันเทิง**
- 2 แตะที่ **เพิ่มข้อมูล** แล้วแตะ **ภาพส่วนตัว**
- 3 เลือกภาพแล้วแตะที่ 
- 4 แตะที่ **ใช้เป็น** แล้วเลือกจาก: **ธีมหน้าจอ** - กำหนดพื้นหลังสำหรับหน้าจอหลัก **ภาพรายชื่อ** - กำหนดภาพให้กับบุคคลใดบุคคลหนึ่งในรายชื่อ เพื่อให้ภาพนั้นปรากฏขึ้นเมื่อบุคคลนั้นโทรมา

01

02

03

04

05

06

07

08

มัลติมีเดีย

สายเรียกเข้า - กำหนดให้ภาพปรากฏขึ้นระหว่างมีสายเรียกเข้า

สายโทรออก - กำหนดให้ภาพปรากฏขึ้นระหว่างการโทรออก

เปิด - กำหนดให้ภาพปรากฏขึ้นเมื่อเปิดเครื่อง

ปิด - กำหนดให้ภาพปรากฏขึ้นเมื่อปิดเครื่อง

การแก้ไขภาพของคุณ

ภาพที่มีแสงน้อยสามารถปรับได้โดยไม่ทำให้คุณภาพของรูปภาพลดลง

- 1 แตะที่  แล้วเลือก **ความมันเท็ง**
- 2 แตะที่ **เพิ่มข้อมูล** แล้วแตะ **ภาพส่วนตัว**
- 3 เลือกภาพ และแตะที่  แล้วแตะที่ **Smart Light**
- 4 แสงจะเปลี่ยนโดยอัตโนมัติ และคุณจะมีตัวเลือกในการบันทึกภาพใหม่

การพิมพ์ภาพ

- 1 แตะที่  แล้วเลือก **ความมันเท็ง**

- 2 แตะที่ **เพิ่มข้อมูล** แล้วแตะ **ภาพส่วนตัว**

- 3 เลือกภาพแล้วแตะที่ 


- 4 แตะที่ **พิมพ์** แล้วเลือก **ระหว่างบลูทูธ และ PictBridge**

เคล็ดลับ!

คุณสามารถพิมพ์ผ่านบลูทูธหรือโดยเชื่อมต่อกับเครื่องพิมพ์ PictBridge ได้



การย้ายหรือคัดลอกรูปภาพ

คุณสามารถย้ายหรือคัดลอกรูปภาพระหว่างหน่วยความจำของโทรศัพท์กับการ์ดหน่วยความจำได้ เพื่อเป็นการเพิ่มพื้นที่หน่วยความจำในหน่วยความจำใดหน่วยความจำหนึ่งหรือเพื่อป้องกันภาพมิให้สูญหาย

- 1 แตะที่  แล้วเลือก **ความมันเท็ง**
- 2 แตะที่ **เพิ่มข้อมูล** แล้วแตะ **ภาพส่วนตัว**
- 3 เลือกภาพแล้วแตะที่ 
- 4 เลือก **ย้าย** หรือ **คัดลอก**



การสร้างภาพสไลด์

หากคุณต้องการดูภาพทั้งหมดบนโทรศัพท์ คุณสามารถสร้างภาพสไลด์เพื่อประหยัดเวลาในการเปิดและปิดภาพแต่ละภาพ

- 1 แตะที่  แล้วเลือก **ความบันเทิง**
- 2 แตะที่ **เพิ่มข้อมูล** แล้วแตะ **ภาพส่วนตัว**
- 3 แตะที่  แล้วเลือก **ภาพสไลด์**

การตรวจสอบสถานะหน่วยความจำ

คุณสามารถตรวจสอบจำนวนพื้นที่หน่วยความจำที่ใช้ไปและจำนวนที่เหลืออยู่ที่สามารถใช้ได้


- 1 แตะที่  แล้วเลือก **ความบันเทิง**
- 2 แตะที่ **เพิ่มข้อมูล** แล้วแตะ **ภาพส่วนตัว**
- 3 แตะที่  แล้วเลือก **สถานะความจำ**
- 4 เลือก **ความจำเครื่อง** หรือ **หน่วยความจำการ์ด**

หมายเหตุ: หากคุณไม่ได้ใส่การ์ดหน่วยความจำไว้ คุณจะเลือกหน่วยความจำการ์ด ไม่ได้

เสียง

โพลเดอร์ เสียงส่วนตัว ประกอบด้วยเสียงที่ดาวน์โหลด, เสียงเริ่มต้น และ การบันทึกเสียง จากชั้นตอนนี้ คุณสามารถจัดการ ส่ง หรือ กำหนดเสียงเป็นเสียงเรียกเข้าได้

การใช้เสียง

- 1 แตะที่  แล้วเลือก **ความบันเทิง**
- 2 แตะที่ **เพิ่มข้อมูล** แล้วแตะ **เสียงส่วนตัว**
- 3 เลือก **เสียงเริ่มต้น** หรือ **การบันทึกเสียง**
- 4 เลือกเสียงและเสียงจะเริ่มเล่น
- 5 แตะที่  แล้วเลือก **ใช้เป็น**
- 6 เลือกจาก **เสียงเรียกเข้าแบบเสียง, เสียงเรียกเข้าแบบวิดีโอ, เสียงข้อความ, การเปิดเครื่อง**

01

02

03

04

05

06


07

08

มัลติมีเดีย


วิดีโอ

โพลเดอร์ วิดีโอส่วนตัว
จะแสดงรายการวิดีโอที่ดาวน์โหลด
และวิดีโอที่ได้บันทึกไว้ในโทรศัพท์
การดูวิดีโอ

- 1 แตะที่  แล้วเลือก
ความบันเทิง
- 2 แตะที่ **เพิ่มข้อมูล** แล้วแตะ
วิดีโอส่วนตัว
- 3 เลือกวิดีโอเพื่อเล่น

เคล็ดลับ! KC910 สนับสนุนการ
เล่นวิดีโอทั้งรูปแบบ DivX และ
Xvid เพื่อความหลากหลายของ
เนื้อหาที่ดียิ่งขึ้น โปรดดูรายละเอียด
เพิ่มเติมที่หน้า 99

การใช้ตัวเลือกขณะหยุด วิดีโอชั่วคราว

แตะที่  ขณะที่อยู่ในโหมด
หยุดชั่วคราว และเลือกจาก:
ถ่ายภาพ - ถ่ายเฟรมที่นิ่ง
อยู่เป็นรูปภาพ

ส่ง - ส่งวิดีโอในข้อความ, อีเมล
หรือผ่านบลูทูธ


ลบ - ลบวิดีโอ

ใช้เป็น - ทำให้ตั้งค่าเสียงเรียกเข้า
แบบเสียงหรือเสียงเรียกเข้าแบบวิดีโอ
ได้ (ซึ่งสามารถจำกัดตามขนาดเฟรม
วิดีโอได้)

แก้ไข - คุณสามารถแก้ไขชื่อไฟล์ได้
ข้อมูลไฟล์ - ดูรายละเอียดของชื่อ
ขนาด วันที่ เวลา ประเภท ระยะเวลา
ขนาด ป้องกันไฟล์ และลิขสิทธิ์

หมายเหตุ: สายเคเบิลเอาต์พุตสำหรับ
โทรทัศน์มีวางจำหน่ายแยกต่างหาก

การส่งวิดีโอคลิก


- 1 เลือกวิดีโอ แล้วแตะที่ 
- 2 แตะที่ **ส่ง** แล้วเลือกจาก **ข้อความ**,
อีเมล หรือ **บลูทูธ**
- 3 หากคุณเลือก **ข้อความ** หรือ **อีเมล**
วิดีโอคลิกจะแนบไปกับข้อความ
และคุณจะสามารถเขียนและส่งข้อความ
ได้ตามปกติ หากคุณเลือก
บลูทูธ เครื่องจะแสดงข้อความ
ให้คุณเปิดบลูทูธและโทรศัพท์จะ

ค้นหาอุปกรณ์ที่จะส่งวิดีโอไปให้

เกมส์และแอปพลิเคชัน

คุณสามารถดาวน์โหลดเกมส์และแอปพลิเคชันใหม่ในโทรศัพท์ได้ เพื่อช่วยให้คุณได้เพลิดเพลินในยามว่าง


การดาวน์โหลดเกมส์

- 1 แตะที่  แล้วเลือก **ความบันเทิง**
- 2 แตะที่ **เกมส์&แอปฯ** แล้วแตะ **เกมส์ & แอปฯ** และ **เกมส์**
- 3 เลือก **ดาวน์โหลดเกมส์**
- 4 คุณจะเชื่อมต่อกับเว็บพอร์ทัล เพื่อค้นหาเกมส์ที่จะดาวน์โหลด

เคล็ดลับ!

ในการลบไฟล์ในแฟ้มข้อมูล ให้แตะที่  แล้วแตะ **ลบ**

การเล่นเกมส์

- 1 แตะที่  แล้วเลือก **ความบันเทิง**
- 2 แตะที่ **เกมส์&แอปฯ** แล้วแตะ **เกมส์ & แอปฯ** และ **เกมส์**
- 3 เลือกและแตะที่เกมส์เพื่อเริ่มเล่น

การใช้เมนูตัวเลือกของเกมส์

จากโพลเดอร์เกมส์&แอปฯ จะมีตัวเลือกต่างๆ ต่อไปนี้:

สร้างโพลเดอร์ใหม่ – สร้างโพลเดอร์ภายใน **เกมส์&แอปฯ**

เรียงตาม - เรียงลำดับเกมส์และแอปพลิเคชันตาม **วันที่, ขนาด** หรือ **ชื่อ**

สถานะความจำ - ดูสถานะหน่วยความจำ

ข้อมูลไฟล์ - ดูข้อมูลเกมส์

01

02

03

04

05

06

07


08

มัลติมีเดีย

แฟลชคอนเทนท์

โพลเดอร์แฟลชคอนเทนท์ประกอบด้วยไฟล์ SWF เริ่มต้นและที่ดาว์นโหลดทั้งหมด

การดูไฟล์ SWF/ SVG

- 1 **แตะที่  แล้วเลือกความบันเทิง**
- 2 **แตะที่ **แฟ้มข้อมูล** แล้วเลือกแฟลชคอนเทนท์**
- 3 **เลือกไฟล์ที่คุณต้องการดู**

การใช้ตัวเลือกในการดูไฟล์ SWF/ SVG


แตะที่  แล้วเลือก:

- ปิดเสียง** - ปิดเสียง
- ส่ง** - ส่งไฟล์เป็น **ข้อความ**, **อีเมล** หรือผ่าน **บลูทูธ**
- พื้นหลัง** - ตั้งไฟล์เป็นพื้นหลัง
- ข้อมูลไฟล์** - ดูชื่อ, ขนาด, วันที่, เวลา, ประเภท และการป้องกันของไฟล์

เอกสาร

จากเอกสารในแฟ้มข้อมูล คุณสามารถดูไฟล์เอกสารทั้งหมดได้จากขั้นตอนนี้ คุณสามารถดูไฟล์ Excel, Powerpoint, Word, ข้อความ และ pdf ได้

การดูไฟล์

- 1 **แตะที่  แล้วเลือกความบันเทิง**
- 2 **แตะที่ **แฟ้มข้อมูล** แล้วแตะเอกสาร**
- 3 **เลือกเอกสาร และแตะที่ **ดู****

การโอนไฟล์ไปที่โทรศัพท์

บลูทูธ คือวิธีการที่ง่ายที่สุดในการโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ คุณยังสามารถใช้ LG PC Suite ผ่านทางสายสำหรับซิงโครไนซ์ได้

โปรดดูรายละเอียดในหน้า 106



ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธที่โทรศัพท์และคอมพิวเตอร์ และทั้งคู่ต่างมองเห็นกันแล้ว
- 2 ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏอยู่ในโฟลเดอร์ **เอกสาร** หรือ **อื่นๆ**

อื่นๆ

โฟลเดอร์ **อื่นๆ** ใช้สำหรับจัดเก็บไฟล์ประเภทอื่นๆ ที่ไม่ใช่รูปภาพ เสียง วิดีโอ เกมส์ หรือแอปพลิเคชัน

ซึ่งมีวิธีใช้เดียวกับโฟลเดอร์ **เอกสาร** คุณจะพบว่าเมื่อคุณโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ ไฟล์เหล่านั้นจะปรากฏอยู่ในโฟลเดอร์ **อื่นๆ** มากกว่าจะปรากฏในโฟลเดอร์ **เอกสาร** หากเป็นเช่นนั้น คุณสามารถย้ายไฟล์เหล่านั้นได้ในการย้ายไฟล์จากโฟลเดอร์ **อื่นๆ** ไปที่โฟลเดอร์ **เอกสาร**:

- 1 แตะที่  แล้วเลือก **ความบันเทิง**
- 2 แตะที่ **แฟ้มข้อมูล** แล้วเลือก **อื่นๆ**
- 3 เลือกไฟล์ แล้วแตะที่ 
- 4 แตะที่ **ย้าย** แล้วแตะที่ **ย้ายอีกครั้ง**

01

02

03

04

05





06


07

08

มัลติมีเดีย

การสร้างภาพยนตร์

- 1 แตะที่  แล้วเลือกความบันเทิง
- 2 แตะที่ **Muvee Studio**
- 3 แตะที่  เพื่อใส่รูปภาพและที่ภาพที่ต้องการ แล้วเลือกแทรก
- 4 แตะที่แท็บสไลด์ทางด้านบนเพื่อเลือกสไลด์ภาพยนตร์
- 5 แตะที่แท็บเสียงทางด้านล่างของหน้าจอเพื่อเปลี่ยนเสียง เช่น การบันทึกเสียง
- 6 แตะที่ปุ่ม เล่น เพื่อดูภาพยนตร์ที่คุณสร้าง
- 7 แตะที่  แล้วแตะลำดับการเล่น เพื่อเปลี่ยนลำดับ
- 8 แตะที่  แล้วเลือกบันทึกโลเคชัน เพื่อเลือกสถานที่ที่ต้องการบันทึกภาพยนตร์ และแตะที่ ระยะเวลา เพื่อเลือกไทม์ไลน์ที่ยาวและสั้น
- 9 ในการบันทึกภาพยนตร์ให้กดปุ่มเล่น แล้วแตะที่ไอคอนบันทึกที่มุมบนซ้าย

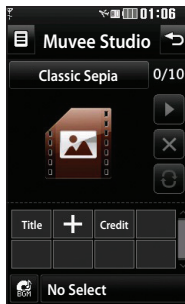

เพลง

LG KC910 มีเครื่องเล่นเพลงภายในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้

ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะที่  แล้วเลือก

ความบันเทิง จากนั้นเลือก **เพลง** จากขั้นตอนนี้ คุณสามารถเข้าใช้งานโพลีเดอต่าง ๆ ดังนี้:

เล่นล่าสุด - คุณสามารถดูรายการที่เล่นล่าสุดได้

ทุกแทริค - ประกอบด้วยเพลงทั้งหมดที่มีในโทรศัพท์

ศิลปิน - เบลาส์ดูรายการเพลงที่เก็บไว้ตามศิลปิน

อัลบั้ม - เบลาส์ดูรายการเพลงที่เก็บไว้ตามอัลบั้ม

แนวเพลง - เบลาส์ดูรายการเพลงที่เก็บไว้ตามแนวเพลง

รายการ - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

สับเปลี่ยนแทริค - คุณสามารถฟังเพลงโดยให้เครื่องสุ่มเล่นได้

การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธ หรือสายสำหรับซิงโครไนซ์

คุณยังสามารถใช้ LG PC Suite ได้ โปรดดูรายละเอียดในหน้า 106 ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และต่างมองเห็นกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์ แล้วเลือกเพื่อส่งทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏขึ้นใน **เพลง > ทุกแทริค**

01

02

03

04

05

06


07

08

มัลติมีเดีย

การเล่นเพลง

- 1 แตะที่  แล้วเลือก **ความบันเทิง**
- 2 แตะที่ **เพลง** แล้วแตะ **เพลงส่วนตัว** และ **ทุกแทร็ค**
- 3 เลือกเพลงที่ต้องการเล่น และแตะที่ **เล่น**
- 4 แตะที่  เพื่อหยุดเล่นเพลงชั่วคราว
- 5 แตะที่  เพื่อข้ามไปยังเพลงถัดไป
- 6 แตะที่  เพื่อข้ามไปยังเพลงก่อนหน้า
- 7 แตะที่  เพื่อกลับไปเมนูเพลง

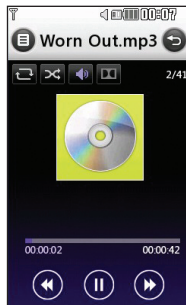

เคล็ดลับ! KC910 คือโทรศัพท์รุ่นแรกของโลกที่ใช้ Dolby Mobile สำหรับเพลงให้คุณภาพเสียงระดับ Dolby ในโทรศัพท์มือถือของคุณ

การใช้ตัวเลือกขณะเล่นเพลง

แตะที่  แล้วเลือก:

ย่อ - ทำให้หน้าจอเครื่องเล่นเพลงหายไป เพื่อให้คุณสามารถใช้งานโทรศัพท์ต่อไปได้ตามปกติ

การแสดงผล - เลือกวิซวลเอฟเฟกต์เพิ่มในรายการเพลง - เพิ่มแทร็คลงในรายการเพลงของคุณ

ข้อมูลไฟล์ - ดูข้อมูลต่างๆ ได้แก่ ชื่อ, ขนาด, วันที่, เวลา, ประเภท, ระยะเวลา, ป้องกันไฟล์ และลิขสิทธิ์ของเพลง

ส่ง - ส่งเพลงเป็นข้อความหรือผ่านบลูทูธ

ลบ - ลบเพลง

ใช้เป็น - ใช้เพลงเป็นเสียงเรียกเข้าแบบเสียง เสียงเรียกเข้าแบบวีดีโอ เสียงข้อความ การเปิดเครื่อง หรือการปิดเครื่องอย่างใดอย่างหนึ่ง

เคล็ดลับ! ในการเปลี่ยนระดับเสียงระหว่างฟังเพลง ให้แตะที่



การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณเองได้โดยการเลือกเพลงจากโพลเดอร์ **ทุกแทร็ค**

1 แตะที่  แล้วเลือก **ความบันเทิง**

2 แตะที่ **เพลง** แล้วแตะ **เพลงส่วนตัว** และ **รายการ**

3 แตะที่ **เพิ่มรายการเพลงใหม่** ป้อนชื่อรายการเพลงใหม่ และแตะที่ **บันทึก**

4 โพลเดอร์ทุกแทร็คจะปรากฏขึ้น แตะที่เพลงทั้งหมดที่คุณต้องการใส่ไว้ในรายการเพลง จะมีเครื่องหมายปรากฏอยู่ข้างชื่อเพลงเหล่านั้น

5 แตะที่ **เสร็จ**

ในการเล่นรายการเพลง ให้เลือกรายการที่ต้องการ แล้วแตะที่ **เล่น**

หมายเหตุ:

ในการเพิ่มรายการเพลงอีกรายการ ให้แตะที่  แล้วแตะ **เพิ่มรายการเพลงใหม่**

01

02

03

04

05

06




07

08

มัลติมีเดีย

การแก้ไขรายการเพลง



ในบางครั้ง คุณอาจต้องการเพิ่มเพลงหรือลบเพลงออกจากรายการเพลง เมื่อคุณต้องการเพิ่มหรือลบเพลง คุณสามารถแก้ไขรายการเพลงได้

- 1 **แตะที่  แล้วเลือก ความบันเทิง**
- 2 **แตะที่ เพลง แล้วแตะ เพลงส่วนตัว และ รายการ**
- 3 **เลือกรายการเพลง**
- 4 **แตะที่  แล้วเลือก:**
 - เพิ่มเพลงใหม่** – เพื่อเพิ่มเพลงใหม่ในรายการเพลงเลือกเพลงที่ต้องการ แล้วแตะที่ เสร็จ
 - เลื่อนลง** – ย้ายเพลงลงเพื่อเปลี่ยนแปลงลำดับการเล่น
 - เปลี่ยนลำดับรายการ** - เปลี่ยนลำดับการเล่นของรายการเพลง
 - ส่ง** – ส่งเพลงเป็นข้อความหรือผ่านบลูทูธ
 - ลบออกจากรายการ** – ลบเพลงออกจากรายการเพลง แตะที่  เพื่อยืนยัน

ข้อมูลหน่วยความจำ - ดูสถานะหน่วยความจำ

ลบทั้งหมด - ลบทุกแทร็คจากรายการเพลง

การลบรายการเพลง

- 1 **แตะที่  แล้วเลือก ความบันเทิง**
- 2 **แตะที่ เพลง แล้วแตะ เพลงส่วนตัว และ รายการ**
- 3 **แตะที่  แล้วเลือก ลบ หรือ ลบทั้งหมด เพื่อลบรายการเพลงทั้งหมด**

การใช้วิทยุ

LG KC910 มีคุณสมบัติวิทยุ FM ดังนั้น คุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา



หมายเหตุ: คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุเสียบหูฟังเข้าในช่องเสียบหูฟัง (ช่องเสียบเดียวกับช่องเสียบอุปกรณ์ชาร์จ)

การค้นหาสถานี

คุณสามารถตั้งสถานีวิทยุไว้ในโทรศัพท์ได้ โดยการค้นหาด้วยตนเองหรือโดยอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก คุณสามารถบันทึกได้สูงสุด 50 ของสถานีในโทรศัพท์ของคุณ

ในการปรับตั้งอัตโนมัติ:

- 1 **แตะที่**  แล้วเลือก **ความบันเทิง**
- 2 **แตะที่** **วิทยุ FM** แล้วเลือก 
- 3 **แตะที่** **สแกนอัตโนมัติ** แล้วเลือก **ใช่** สถานีที่พบจะถูกกำหนดไว้ในหมายเลขของสถานีในโทรศัพท์โดยอัตโนมัติ

หมายเหตุ: คุณยังสามารถค้นหาสถานีด้วยตนเองได้โดยใช้  และ  ที่แสดงอยู่ถัดจากความถี่วิทยุ

การรีเซ็ตสถานี

- 1 **แตะที่**  แล้วเลือก **ความบันเทิง**
- 2 **แตะที่** **วิทยุ FM** แล้วเลือก 
- 3 **เลือก** **รีเซ็ต** เพื่อรีเซ็ตของสถานีปัจจุบัน หรือเลือก **รีเซ็ตทั้งหมด** เพื่อรีเซ็ตของสถานีทั้งหมด ของสถานีแต่ละช่องจะกลับไปความถี่เริ่มต้น 87.5Mhz

การฟังวิทยุ

- 1 **แตะที่**  แล้วเลือก **ความบันเทิง**
- 2 **แตะที่** **วิทยุ FM** แล้วแตะที่หมายเลขของสถานีที่คุณต้องการฟัง

เคล็ดลับ! ในการเพิ่มประสิทธิภาพการรับสัญญาณวิทยุ ให้ยึดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ

01

02

03

04

05



06

07


08

สมุดบันทึก

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **สมุดบันทึก** เลือก **ปฏิทิน**
- 2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
- 3 แตะที่  แล้วแตะ **เพิ่มเหตุการณ์**
- 4 แตะที่ **ประเภท** แล้วเลือกจาก **นัดหมาย**, **วันครบรอบ** หรือ **วันเกิด** ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่ม
- 5 สำหรับการนัดหมายและวันครบรอบ ให้ป้อนเวลาและวันที่ที่เหตุการณ์สิ้นสุดในระยะเวลาและวันที่ด้านล่างทั้งสองช่อง
- 6 หากคุณต้องการใส่หัวเรื่องหรือบันทึกในเหตุการณ์ของคุณ ให้แตะที่ **บันทึก** แล้วพิมพ์ในบันทึกของคุณ
- 7 ตั้งค่า **เตือน** และ **ซ้ำ**
- 8 เลือก **บันทึก** และเหตุการณ์ของคุณจะบันทึกอยู่ในปฏิทิน วันที่ที่มีก

ารบันทึกเหตุการณ์ไว้จะมีเครื่องหมายกรอบสี่เหลี่ยมสีกำกับอยู่ และเสียงกริ่งจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์ เพื่อให้คุณไม่พลาดกำหนดต่างๆ

เคล็ดลับ! คุณสามารถกำหนดวันหยุดในปฏิทินได้ แตะที่วันแต่ละวันที่เป็นวันหยุดของคุณ แล้วแตะที่  และเลือก **ตั้งวันหยุด** วันเหล่านั้นจะมีเงาสีเขียวแสดงอยู่



การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน

- 1 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **สมุดบันทึก** เลือก **การตั้งค่าออกแบในเซอร์**
- 2 แตะที่ **ตั้งค่าปฏิทิน** และเลือก **มุมมองเดือน** หรือ **มุมมองสัปดาห์**
- 3 ตั้งค่า **สัปดาห์เริ่มต้นเมื่อ**
- 4 แตะที่ **บันทึก** เพื่อยืนยันการเลือกของคุณ

การเพิ่มรายการลงในสิ่งที่ต้องทำ

- 1 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **สมุดบันทึก**
- 2 เลือก **สิ่งที่ต้องทำ** และแตะที่ **เพิ่มสิ่งที่ต้องทำ**
- 3 กำหนดวันที่ของงาน เพิ่มบันทึก และเลือกลำดับความสำคัญ: **สูง**, **กลาง** หรือ **ต่ำ**
- 4 บันทึกงานโดยเลือก **บันทึก**


การแบ่งปันสิ่งที่ต้องทำ

- 1 จากหน้าจอหลัก ให้เลือก  แล้วเลือก **ยูทิลิตี้** และเลือก **สมุดบันทึก** เลือก **สิ่งที่ต้องทำ**
- 2 เลือกงานที่คุณต้องการแบ่งปัน แล้วแตะที่ 
- 3 เลือก **ส่ง** คุณสามารถเลือกแบ่งปันรายการที่ต้องทำเป็น **ข้อความตัวอักษร**, **ข้อความมีลัดมีเดีย**, **อีเมล** หรือ **บลูทูธ**

เคล็ดลับ! คุณสามารถสำรองข้อมูลและซิงโครไนซ์ปฏิทินของคุณกับคอมพิวเตอร์ได้ โปรดดูที่ PC Sync ในหน้า 96

การใช้ตัวค้นหาวັນที่

ตัวค้นหาวันที่เป็นเครื่องมืออำนวยความสะดวกที่ช่วยให้คุณคำนวณวันหลังจากที่ผ่านมาแล้วหลายวันได้ ตัวอย่างเช่น 60 วันจากวันที่ 10.10.07 คือวันที่ 09.12.2007 ซึ่งเหมาะสำหรับการจัดการวันที่ครบกกำหนด

- 1 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **สมุดบันทึก**
- 2 เลือก **ตัวค้นหาวันที่**
- 3 ในแท็บ **จาก** ให้กำหนดวันที่ต้องการ
- 4 ในแท็บ **หลัง** ให้กำหนดจำนวนวัน
- 5 วันที่เป้าหมาย จะปรากฏขึ้นด้านล่าง

01

02

03

04

05



06

07

08

สมุดบันทึก


การตั้งเวลาปลุก

- 1 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **ตั้งปลุก**
- 2 แตะที่ **รายชื่อใหม่**
- 3 กำหนดเวลาที่ต้องการให้ส่งเสียงปลุก แล้วแตะที่ **บันทึก**
- 4 เลือกว่าคุณต้องการให้ส่งเสียงปลุกซ้ำ ทุกวัน, จันทร์ - ศุกร์, จันทร์ - เสาร์, เสาร์ - อาทิตย์, ยกเว้นวันหยุด หรือ เลือกวันใดคอนจะบ่งชี้วันที่คุณเลือก
- 5 เลือก **ตั้งการเตือน** เพื่อเลือกประเภทการปลุก
- 6 แตะที่ **ตั้งค่าเสียงกริ่งเตือน** แล้วเลือกเสียงกริ่ง ในการฟังเสียง ให้แตะที่เสียง แล้วตามด้วย 
- 7 เพิ่มบันทึกสำหรับการปลุก
- 8 สุดท้าย คุณสามารถกำหนดรอบเวลาในการเลื่อนปลุกเป็น 5, 10, 20, 30 นาที, 1 ชั่วโมง หรือ ปิด
- 9 เมื่อคุณตั้งปลุกเสร็จแล้ว ให้แตะที่ **บันทึก**

- 10 ในการปิดการปลุกคุณสามารถเลือกเลื่อนหรือหยุดได้
หมายเหตุ: คุณสามารถตั้งปลุกได้ถึง 5 รายการ

เคล็ดลับ! แตะที่ **เปิด/ปิด** ทางด้านขวาของการตั้งปลุก

การเพิ่มบันทึก

- 1 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **บันทึก**
- 2 แตะที่ **เพิ่มบันทึก**
- 3 พิมพ์บันทึก แล้วตามด้วย **บันทึก**
- 4 บันทึกของคุณจะปรากฏขึ้นบนหน้าจอ เมื่อคุณเปิดแอปฟลิเคชัน **บันทึก** ในครั้งถัดไป

เคล็ดลับ! คุณสามารถแก้ไขบันทึกที่มีอยู่ได้เลือกบันทึกที่ต้องการแก้ไขแล้วพิมพ์การเปลี่ยนแปลงของคุณ

บันทึกเสียง

ใช้ เครื่องบันทึกเสียง เพื่อบันทึกเสียงเตือนความจำหรือเสียงอื่นๆ

- 1 แตะที่  แล้วเลือก **ยูทิลิตี้**
- 2 แตะที่ **บันทึกเสียง** แล้วเลือก  จากนั้นเลือกจาก:


ระยะเวลา – กำหนดระยะเวลาในการบันทึก เลือกจาก **ขนาดMMS, 1 นาที** หรือ **ไม่จำกัด**

คุณภาพ – เลือกคุณภาพของเสียง เลือกจาก **ละเอียดมาก, ละเอียด** หรือ **ปกติ**


ไปที่เสียง – เปิดโฟลเดอร์การบันทึกเสียงใน **เสียงส่วนตัว**

การบันทึกเสียงหรือเสียงพูด

- 1 แตะที่  แล้วเลือก **ยูทิลิตี้**
- 2 แตะที่ **บันทึกเสียง**
- 3 แตะที่  เพื่อเริ่มบันทึก
- 4 แตะที่  เพื่อจบการบันทึก
- 5 แตะที่  เพื่อฟังรายการที่บันทึก

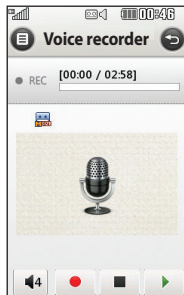

การส่งรายการบันทึกเสียง

- 1 เมื่อคุณบันทึกเสียงเสร็จแล้ว ให้แตะที่ 
- 2 แตะที่ **ส่ง** แล้วเลือกจาก **ข้อความ, อีเมล** หรือ **บลูทูธ** หากคุณเลือก **ข้อความ** หรือ **อีเมล** รายการที่บันทึกจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ

01

02

03

04


05

06



07

08


สมุดบันทึก

หมายเหตุ: หลังจากที่บ้านทีกเสียงเสร็จแล้ว ให้แตะที่  และเลือก **ส่ง, โฟล์, ลบ, ไขเป็น** (เพื่อไขเป็นเสียงเรียกเข้า), **ระยะเวลา, คุณภาพ** หรือ **ไปที่เสียง**

การใช้เครื่องคิดเลข


- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **เครื่องมือ**
- 2 เลือก **เครื่องคิดเลข**
- 3 แตะที่ปุ่มตัวเลขเพื่อป้อนตัวเลข
- 4 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x, ÷) แล้วตามด้วย =
- 5 สำหรับการคำนวณแบบซับซ้อน ให้แตะที่  และเลือกจาก **sin, cos, tan, log, ln, exp, sqrt, deg** หรือ **rad** ฯลฯ..

การแปลงหน่วย



- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **เครื่องมือ**
- 2 เลือก **ตัวแปลงหน่วย**

- 3 เลือกว่าคุณจะแปลง **สกุลเงิน, พื้นที่, ความยาว, น้ำหนัก, อุณหภูมิ, ปริมาตร** หรือ **ความเร็ว**
- 4 จากนั้น คุณสามารถเลือกหน่วยและป้อนค่าที่คุณต้องการแปลงแล้วตามด้วยหน่วยที่คุณต้องการแปลงเป็น
- 5 ค่าผลลัพธ์ที่เกี่ยวข้องของกันจะปรากฏขึ้นบนหน้าจอ

การใช้นาฬิกาจับเวลา


- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **เครื่องมือ**
- 2 เลือก **นาฬิกาจับเวลา**
- 3 แตะที่ **เริ่ม** เพื่อเริ่มต้นตัวจับเวลา
- 4 แตะที่ **รอบ** หากคุณต้องการบันทึกรอบเวลา
- 5 แตะที่ **หยุด** เพื่อหยุดตัวจับเวลา
- 6 แตะที่ **ต่อ** เพื่อเริ่มนาฬิกาจับเวลาใหม่ต่อจากเวลาที่หยุดไว้ **รีเซ็ต** เพื่อเริ่มต้นเวลาใหม่อีกครั้ง


การใส่ชื่อเมืองลงในเวลาทั่วโลก


- 1 จากหน้าจอแสดงแถบขยาย ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **เครื่องมือ**
- 2 เลือก **เวลาโลก**
- 3 แตะที่ไอคอน  แล้วตามด้วย **เพิ่มเมือง** เริ่มพิมพ์ชื่อเมืองที่คุณต้องการ และชื่อนั้นจะปรากฏที่ด้านบนของหน้าจอ
- 4 แตะที่เมืองเพื่อเลือก และเพิ่มในรายการเวลาทั่วโลก

Jogging buddy


เมื่อเดิน, วิ่ง หรือจ็อกกิ้ง KC910 จะแสดงข้อมูลระดับวินาทีของระยะทางและเวลา และเก็บบันทึกการออกกำลังกายของคุณโดยใช้เทคโนโลยี GPS ขั้นสูง


- 1 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **เครื่องมือ**
- 2 เลือก **Jogging buddy**


- 3 แตะที่ << >> เพื่อตั้งระยะทางหรือเวลาของการจ็อกกิ้ง
- 4 คุณสามารถเปิดหรือปิดเสียงบี๊ฟได้
- 5 หลังจากเชื่อมต่อ GPS ปุ่มเริ่มจะสว่างขึ้น แตะที่  เพิ่มเริ่ม

 - ปุ่มรีเซ็ต

เสียงบี๊ฟ - เมื่อผ่านช่วงของการตั้งค่าระยะทางหรือเวลา โทรศัพท์จะส่งเสียงบี๊ฟ

 - ปุ่มเริ่ม

 - ปุ่มพัก

 - ปุ่มหยุด

01

02

03

04

05

06

07

08

PC Sync

คุณสามารถซิงโครไนซ์คอมพิวเตอร์กับโทรศัพท์ของคุณ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน รวมทั้งยังเป็นการสำรองข้อมูลไฟล์ที่ช่วยให้คุณสบายใจได้

การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

- 1 จากหน้าจอหลัก ให้กดและเลือก **การเชื่อมต่อ**
- 2 เลือกโหมด **การเชื่อมต่อ USB** และคลิก **ตกลง**
เพลง - โหมดซิงค์เพลง
อื่นๆ - โหมดบริการข้อมูล
- 3 ใส่แผ่นซีดีที่ให้มาด้วยในเครื่องคอมพิวเตอร์ คลิก **LG PC Suite Installer** ซึ่งจะปรากฏที่หน้าจอของคุณ
- 4 เลือกภาษาที่ต้องการใช้ในการติดตั้ง แล้วคลิกที่ **OK**
- 5 ปฏิบัติตามคำแนะนำบนหน้าจอเพื่อทำให้อินเทอร์เฟซ LG PC Suite Installer เสร็จสมบูรณ์

- 6 เมื่อติดตั้งเสร็จเรียบร้อยแล้ว ไอคอน **LG PC Suite** จะปรากฏขึ้นบนเดสก์ทอป

การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

- 1 เชื่อมสาย USB ที่โทรศัพท์และคอมพิวเตอร์ของคุณ
- 2 ดับเบิลคลิกที่ไอคอน **LG PC Suite** บนเดสก์ทอปของคุณ
- 3 คลิกที่ **Connection Wizard** แล้วคลิก **USB**
- 4 คลิกที่ **Next** แล้วคลิก **Next** อีกครั้ง จากนั้นคลิก **Finish** โทรศัพท์และคอมพิวเตอร์ของคุณเชื่อมต่อกันเรียบร้อยแล้ว

การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **Backup** แล้วเลือก **Backup** หรือ **Restore**
- 3 เลือกสำรองข้อมูล **Contents Data** หรือ **Phonebook/Schedule/ToDo/Memo Data** เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือเรียกคืนข้อมูล คลิก **OK**
- 4 ระบบจะสำรองข้อมูลของคุณ

การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **Contents**
- 3 เอกสารทั้งหมด, แฟลชคอนเทนต์, ภาพ, เสียง และวิดีโอ ซึ่งคุณบันทึกไว้ในโทรศัพท์ของคุณ

คุณจะปรากฏบนหน้าจอในโฟลเดอร์ LG Phone

เคล็ดลับ! การดูเนื้อหาของโทรศัพท์บนเครื่องคอมพิวเตอร์จะช่วยให้คุณสามารถจัดเรียงไฟล์จัดการเอกสาร และลบเนื้อหาที่คุณไม่ต้องการใช้อีกต่อไปได้

การซิงโครไนซ์รายชื่อ

- 1 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี
 - 2 คลิกที่ไอคอน **Contacts**
 - 3 เครื่องคอมพิวเตอร์ของคุณจะพิมพ์และแสดงรายชื่อทั้งหมดที่บันทึกไว้ในการ์ด USIM และโทรศัพท์
 - 4 คลิกที่ **File** แล้วเลือก **Save** จากนั้น คุณสามารถเลือกตำแหน่งที่คุณต้องการบันทึกรายชื่อ
- หมายเหตุ:** ในการสำรองข้อมูลรายชื่อที่บันทึกไว้ใน USIM การ์ด ให้คลิกที่โฟลเดอร์ SIM Card ทางด้านซ้ายมือของหน้าจอคอมพิวเตอร์ คลิกขวาที่รายชื่อ

01

02

03

04

05

06

07

08

PC Sync

และเลือก Select all แล้วเลือก Copy หรือ Move to phone memory คลิกขวาที่รายชื่อของคุณ แล้วเลือก Copy to contact จากนั้นคลิกที่โฟลเดอร์ Handset ทางด้านซ้ายมือของหน้าจอและหมายเลขทั้งหมดจะปรากฏขึ้น

การซิงโครไนซ์ข้อความ

- 1 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี
- 2 คลิกที่ไอคอน **Messages**
- 3 ข้อความในเครื่องคอมพิวเตอร์และโทรศัพท์ของคุณจะปรากฏขึ้นในโฟลเดอร์บนหน้าจอ
- 4 ใช้แถบเครื่องมือด้านบนสุดของหน้าจอเพื่อแก้ไขและจัดเรียงข้อความ

การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล

โทรศัพท์ของคุณสามารถใช้เป็นอุปกรณ์เก็บข้อมูลได้ หากคุณมีการตั้งค่าหน่วยความจำติดตั้งไว้

- 1 เลิกการเชื่อมต่อเครื่องโทรศัพท์ของคุณออกจากเครื่องคอมพิวเตอร์
- 2 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ตั้งค่า**
- 3 เลือก **การเชื่อมต่อ** แล้วเลือก **โหมด การเชื่อมต่อ USB**
- 4 แตะที่ **ที่เก็บข้อมูล**
- 5 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี โทรศัพท์ของคุณจะแสดงข้อความ: **Connecting as Mass Storage...** แล้วตามด้วย **Connected as Mass Storage Mode** อย่ายกเลิกการเชื่อมต่อระหว่างการถ่ายโอนข้อมูล
- 6 โฟลเดอร์ดีสก์แบบถอดออกได้จะเปิดขึ้นโดยอัตโนมัติบนคอมพิวเตอร์ของคุณ 2 ไดรฟ์หาก

คุณมีการดหน่วยความจำเสียอยู่ ซึ่งจะแสดง โพลเดอร์ทั้งหมดใน โทรศัพท์หรือการดหน่วยความจำของคุณ

หมายเหตุ: คุณต้องถอดสายเชื่อมต่อของโทรศัพท์ออกจากคอมพิวเตอร์ของคุณเพื่อเริ่มใช้ที่เก็บข้อมูล

หมายเหตุ: ที่เก็บข้อมูลจะสำรองข้อมูลเนื้อหาที่บันทึกไว้ในการ์ดหน่วยความจำเท่านั้น โดยไม่บันทึกในหน่วยความจำเครื่อง ในกรณีถ่ายโอนเนื้อหาของหน่วยความจำเครื่อง(เช่น รายชื่อ) คุณจำเป็นต้องซิงโครไนซ์โดยใช้ PC Sync

การลงทะเบียน Divx VOD

ติดตั้งตัวแปลง DivX ซึ่งมีให้มาในแผ่นซีดีเดียวกับซอฟต์แวร์ PC Sync เมื่อติดตั้งแล้ว ให้เลือก DivX จาก Program Files บนเครื่องพีซี จากนั้นเลือกตัวแปลง DivX แล้วตามด้วย Converter

ซึ่งจะเป็นการเปิดแอปพลิเคชัน Converter ใช้ลูกศรในแอปพลิเคชันเพื่อเปลี่ยนรูปแบบการแปลงเป็น

Mobile หากคุณคลิกขวาที่ช่องแอปพลิเคชัน แล้วเลือก Preferences คุณสามารถเปลี่ยนตำแหน่งที่บันทึกไฟล์ที่แปลงแล้วได้

เมื่อคุณพร้อมสำหรับการแปลงไฟล์แล้ว เพียงลากแล้ววางไฟล์ลงในแอปพลิเคชันเพื่อการวิเคราะห์ เริ่มต้น ซึ่งในการทำตามขั้นตอนนี้ คุณจะต้องเลือก Convert เพื่อเริ่มกระบวนการ เมื่อขั้นตอนเสร็จสิ้น ป๊อปอัพ Conversion complete จะปรากฏขึ้น จากนั้นไฟล์ที่แปลงแล้วจะสามารถถ่ายโอนไปยังโทรศัพท์ของคุณได้ โดยใช้ฟังก์ชันที่เก็บข้อมูล (โปรดดูรายละเอียดที่หน้า 99) หรืออัปโหลดเนื้อหาโดยใช้ซอฟต์แวร์ PC Sync (โปรดดูรายละเอียดที่หน้า 97)

01

02

03

04

05

06

07


08

เว็บไซต์

เบราวเซอร์

เบราวเซอร์ช่วยให้คุณเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ไม่ว่าจะอยู่ที่ไหนหรือกำลังทำอะไร

การเข้าใช้เว็บไซต์

- 1 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ ยูทิลิตี้ และเลือก เบราวเซอร์
- 2 ในการเข้าถึงโฮมเพจของเบราวเซอร์โดยตรง ให้เลือก โฮม หรือเลือก ไปยัง URL จากนั้นพิมพ์ URL ที่คุณต้องการ แล้วเลือก เชื่อมต่อ

หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การเพิ่มและการใช้บุ๊กมาร์ค


เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุ๊กมาร์คและบันทึกเว็บเพจได้

- 1 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ ยูทิลิตี้ และเลือก เบราวเซอร์
- 2 เลือก บัญมาร์ค รายการบุ๊กมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ
- 3 ในการเพิ่มบุ๊กมาร์คใหม่ ให้เลือก  แล้วแตะที่ รายชื่อใหม่ ป้อนชื่อสำหรับบุ๊กมาร์ค แล้วตามด้วยป้อน URL
- 4 แตะที่ บันทึก บัญมาร์คของคุณจะปรากฏขึ้นในรายการบุ๊กมาร์ค
- 5 ในการเข้าใช้งานบุ๊กมาร์ค เพียงแตะที่บุ๊กมาร์ค แล้วแตะที่ เชื่อมต่อ เครื่องจะเชื่อมต่อเข้ากับบุ๊กมาร์คของคุณ

การใช้ RSS reader

RSS (Really Simple Syndication) เป็นกลุ่มรูปแบบ Web Feed ที่ใช้เพื่อเผยแพร่เนื้อหาที่ได้รับการอัปเดตเป็นประจำ เช่น รายการใน Blog, หัวข้อข่าว หรือ Podcast เอกสาร RSS ที่เรียกว่า Feed, Web Feed หรือ Channel จะมีสรุปเนื้อหาหรือข้อความเต็มจากเว็บที่เกี่ยวข้อง RSS ช่วยให้ทุกคนสามารถติดตามความเคลื่อนไหวของเว็บไซต์ที่คุณชื่นชอบด้วยระบบอัตโนมัติที่สะดวกกว่าการเฝ้าดูด้วยตนเอง ผู้ใช้สมัครใช้บริการ Feed โดยป้อนลิงค์ของ Feed ลงใน Reader หรือคลิกที่ไอคอน RSS ในเบราว์เซอร์ที่เปิดขั้นตอนการสมัครใช้บริการ Reader จะตรวจดู Feed ที่ผู้ใช้สมัครใช้บริการเป็นประจำเพื่อดูเนื้อหาใหม่และดาวน์โหลดการอัปเดตต่างๆ ที่พบ

การบันทึกเพจ

- 1 เข้าถึงเว็บเพจตามที่อยู่ข้างต้น
- 2 และที่  แล้วเลือก บันทึกเพจนี้
- 3 ป้อนชื่อสำหรับเว็บเพจเพื่อให้ง่ายต่อการจดจำ
- 4 และที่ บันทึก

เคล็ดลับ! เมนูนี้จะช่วยให้คุณสามารถแก้ไขชื่อของเพจที่คุณบันทึกไว้ ป้องกันหรือไม่ป้องกันบันทึกเดือนความจำบนหน้าจอ รวมถึงลบเพจที่บันทึกไว้ได้

01

02

03

04

05

06


07

08

เว็บไซต์

การเข้าใช้เพจที่บันทึกไว้

1 จากหน้าจอหลัก ให้เลือก

 แล้วแตะที่ ยูทิลิตี้ และเลือก เบราวี่เซอร์

2 เลือก เพจที่บันทึก

3 เลือกเพจที่คุณต้องการดูและเพจจะเปิดขึ้น

การดูประวัติข้อมูลเบราวี่เซอร์

1 จากหน้าจอหลัก ให้เลือก

แล้วแตะที่ ยูทิลิตี้ และเลือก เบราวี่เซอร์ เลือก ประวัติ

2 เว็บบเพจที่คุณเข้าใช้ล่าสุดจะปรากฏขึ้น ในการเข้าใช้เพจใดเพจหนึ่ง ให้เลือกเพจที่ต้องการ แล้วแตะที่ เชื่อมต่อ

การเปลี่ยนการตั้งค่าเว็บเบราวี่เซอร์

1 จากหน้าจอหลัก ให้เลือก

แล้วแตะที่ ยูทิลิตี้ และเลือก เบราวี่เซอร์ เลือก การตั้งค่าเบราวี่เซอร์

2 คุณสามารถเลือกแก้ไข โพรไฟล์, การตั้งค่าลักษณะ, แคช, คูกี้, ระบบป้องกัน หรือ รีเซ็ตการตั้งค่า

3 คุณสามารถเปิดหรือปิดการตั้งค่าเหล่านี้ได้ง่ายๆ โดยการแตะที่ไอคอนสวิตช์

การใช้โทรศัพท์เป็นโมเด็ม

โทรศัพท์ KC910 ของคุณสามารถทำหน้าที่เป็นโมเด็มของเครื่องคอมพิวเตอร์ได้ จึงทำให้คุณสามารถส่งอีเมลและเข้าถึงอินเทอร์เน็ตได้ แม้ในเวลาที่คุณไม่ได้เชื่อมต่อโดยใช้สาย โดยคุณสามารถใช้สาย USB หรือบลูทูธก็ได้

การใช้สาย USB:

- 1 ตรวจสอบให้แน่ใจว่าคุณได้ติดตั้ง LG PC Suite บนเครื่องคอมพิวเตอร์ของคุณแล้ว
- 2 เชื่อมต่อ KC910 เข้ากับคอมพิวเตอร์ของคุณด้วยสาย USB แล้วเริ่มซอฟต์แวร์ LG PC Suite
- 3 คลิกที่ Communication บนคอมพิวเตอร์ของคุณ จากนั้นคลิกที่ Settings และเลือก Modem
- 4 เลือก LG Mobile USB Modem และเลือก OK จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
- 5 คลิกที่ Connect และเครื่องคอมพิวเตอร์ของคุณจะเชื่อมต่ออินเทอร์เน็ตผ่านโทรศัพท์ KC910 ของคุณ

หมายเหตุ: สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการซิงโครไนซ์โดยใช้ LG PC Suite โปรดดูที่หน้า 96

การใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าได้ตั้งค่าบลูทูธเป็น เปิด และมองเห็นได้ทั้งเครื่องพีซีและโทรศัพท์ KC910
- 2 จับคู่เครื่องคอมพิวเตอร์ของคุณและ KC910 เพื่อให้ต้องระบุรหัสผ่านสำหรับการเชื่อมต่อ
- 3 ใช้ Connection wizard ใน LG PC Suite เพื่อสร้างการเชื่อมต่อบลูทูธที่ใช้งาน
- 4 คลิกที่ Communication บนคอมพิวเตอร์ของคุณ จากนั้นคลิก Setting
- 5 คลิกที่ **Modem**
- 6 เลือก **Standard Modem over บลูทูธ link** แล้วคลิก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
- 7 คลิกที่ **Connect** และเครื่องคอมพิวเตอร์ของคุณจะเชื่อมต่ออินเทอร์เน็ตผ่านโทรศัพท์ KC910 ของคุณ

หมายเหตุ: โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับบลูทูธได้ที่หน้า 110

01

02

03

04

05

06

07


08

การตั้งค่า

ภายในโฟลเดอร์นี้ คุณสามารถปรับการตั้งค่าเพื่อให้โทรศัพท์ KC910 ตอบสนองการทำงานในแบบของคุณ

หมายเหตุ: โปรดดูข้อมูลเกี่ยวกับการตั้งค่าการโทรได้ที่หน้า 27

การเปลี่ยนการตั้งค่าหน้าจอ

- 1 **แตะที่  แล้วเลือก ตั้งค่า**
- 2 **แตะที่ หน้าจอ แล้วเลือกจาก:**
 - พื้นหลัง** - เลือกธีมสำหรับหน้าจอหลัก
 - โทรออก** - ปรับขนาดตัวเลขและสี
 - ไฟหน้าจอ** - เลือกระยะเวลาการทำงานของแบ็คไลท์
 - หมายเหตุ:** การเปิดแบ็คไลท์เป็นเวลานานจะทำให้สิ้นเปลืองพลังงาน แบตเตอรี่มากยิ่งขึ้น และคุณอาจจำเป็นต้องชาร์จโทรศัพท์ของคุณบ่อยยิ่งขึ้นด้วย
 - แบบอักษร** - ปรับขนาดแบบอักษร
 - ความสว่าง** - ปรับความสว่างของหน้าจอ
 - ธีม** - เปลี่ยนรูปโฉมทั้งหน้าจอของคุณได้อย่างรวดเร็ว

รีเซ็ตเมนูหลัก - ในกรณีรีเซ็ตเมนูหลัก ให้แตะที่ **ใช่**


ข้อความต้อนรับ - เลือกเปิดหรือปิด และป้อนข้อความต้อนรับ เลือกภาพสำหรับสายเรียกเข้า, สายโทรออก, การเปิดเครื่อง และการปิดเครื่อง

- 3 **แตะที่ บันทึก** เพื่อบันทึกการตั้งค่า

การปรับแต่งรูปแบบของคุณ

คุณสามารถเปลี่ยนรูปแบบบนหน้าจอหลักของคุณได้อย่างรวดเร็ว เพียงแตะที่ไอคอนสรุปลักษณะทางด้านบน แล้วแตะที่เห็นรูปแบบเสียง

คุณสามารถใช้เมนูการตั้งค่าในการปรับแต่งการตั้งค่ารูปแบบแต่ละรายการได้


- 1 **กด  แล้วเลือก ตั้งค่า**
- 2 **แตะที่ รูปแบบเสียง แล้วเลือกรูปแบบเสียงที่คุณต้องการแก้ไข**

- 3** จากนั้น คุณจะสามารเปลี่ยนตัวเลือกเสียง และการเตือนทั้งหมดที่มีอยู่ในรายการได้ รวมทั้งเสียงเรียกเข้าแบบเสียง/แบบวิดีโอ และ ระดับเสียง, แบบเตือนข้อความ และอื่นๆ

การเปลี่ยนการตั้งค่าโทรศัพท์

เพลิดเพลินกับอิสระในการปรับการทำงานของโทรศัพท์ KC910 ในแบบที่คุณต้องการได้

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

- 1** แตะที่  แล้วเลือก **ตั้งค่า**
 - 2** แตะที่ **ตั้งค่าโทรศัพท์** แล้วเลือกจากรายการทางด้านล่าง
- วันที่ & เวลา** - ปรับการตั้งค่าวันที่และเวลาของคุณ หรือเลือกให้เครื่องอัปเดตเวลาอัตโนมัติเมื่อคุณ

เดินทางหรือสำหรับการปรับเวลาตามฤดูกาล

ประหยัดพลังงาน - เลือกเพื่อสลับการตั้งค่าประหยัดพลังงานที่ตั้งมาจากโรงงานเป็น เปิด, ปิด และ อัตโนมัติ

ภาษา - เปลี่ยนภาษาบนจอแสดงผลของ KC910 ของคุณ

ล็อคปุ่มอัตโนมัติ - ล็อคปุ่มกดอัตโนมัติในหน้าจอหลัก

ระบบป้องกัน - ปรับการตั้งค่าการรักษาความปลอดภัย ได้แก่ รหัส PIN และล็อคเครื่อง

สถานะความจำ - โปรดดูข้อมูลเพิ่มเติมที่ การใช้ตัวจัดการหน่วยความจำ ในหน้า 108

รีเซ็ตการตั้งค่า - รีเซ็ตการตั้งค่าทั้งหมดเป็นค่าที่ตั้งมาจากโรงงาน

ข้อมูล - ดูข้อมูลทางด้านเทคนิคของโทรศัพท์ KC910

01

02

03

04

05

06

07

08

การตั้งค่า

การเปลี่ยนการตั้งค่าสัมผัส

แตะที่  แล้วเลือก **ตั้งค่า**

แตะที่ **การตั้งค่าสัมผัส**

ในการรีเซ็ตปุ่มสัมผัส

และทำให้ไวง่ายขึ้น เลือก

Touchpad calibration

และแตะที่เครื่องหมาย บันทึกการตั้งค่าเมื่อคุณพอใจแล้ว

แตะที่  แล้วเลือก **ตั้งค่า** เลือก

การตั้งค่าสัมผัส และเลือก

เอฟเฟกต์ทัชสกรีน เมนูนี้ทำให้คุณ

รีเซ็ตแตะที่ **ประเภท, โทน** และ **สี**

การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้นคุณจึงสามารถเพลิบเลินกับโทรศัพท์ใหม่ของคุณได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่าให้ใช้เมนูนี้

แตะที่  แล้วเลือก **ตั้งค่า** และที่ **การเชื่อมต่อ**

การตั้งค่าเครือข่าย - โทรศัพท์ KC910 จะเชื่อมต่อกับเครือข่ายที่ต้องการได้โดยอัตโนมัติ ในการเปลี่ยนการตั้งค่าเหล่านี้ ให้ใช้ตัวเลือกนี้ **โปรไฟล์อินเทอร์เน็ต**

จุดเชื่อมต่อ - ผู้ให้บริการระบบได้บันทึกข้อมูลนี้แล้ว คุณสามารถเพิ่มจุดเชื่อมต่อใหม่โดยใช้เมนูนี้ได้

ประเภท GPS - เลือก **GPS** แบบช่วยเหลือ หรือ **สแตนด์อะโลน**

GPS

- เทคโนโลยี GPS ใช้ข้อมูลจากดาวเทียมที่โคจรรอบโลกเพื่อค้นหาตำแหน่ง
- เครื่องรับจะประมาณระยะทางไปถึงดาวเทียม GPS ตามระยะเวลาที่สัญญาณมาเครื่องรับ จากนั้นใช้ข้อมูลดังกล่าวเพื่อระบุตำแหน่ง
- ซึ่งอาจใช้เวลาตั้งแต่สองสามวินาทีไปจนถึงหลายนาที
- Assisted GPS(A-GPS) ในโทรศัพท์รุ่นนี้จะใช้รับข้อมูลช่วยเหลือด่านตำแหน่งผ่านการเชื่อมต่อข้อมูลแพคเกจ
- ข้อมูลช่วยเหลือนจะได้รับจากเซิร์ฟเวอร์บริการเฉพาะเมื่อจำเป็นเท่านั้น
- ถ่ายภาพจากสถานที่ที่คุณอยู่ และแท็กรูปภาพด้วยข้อมูลเกี่ยวกับตำแหน่งของคุณ

หมายเหตุ : บริการ GPS มีความผิดพลาดที่ยอมรับได้ และไม่สามารถทำงานในอาคารหรือใต้ดินได้

โหมดการเชื่อมต่อ USB -
ซิงโครไนซ์โทรศัพท์ KC910 โดยใช้ซอฟต์แวร์ LG PC Suite เพื่อคัดลอกไฟล์จากโทรศัพท์ โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับการซิงโครไนซ์ที่หน้า 96

หากคุณใช้ซิงค์เพลงกับ Windows Media Player ให้เลือกซิงค์เพลงในเมนูนี้ ซิงค์เพลงใช้ได้เฉพาะกับข้อมูลเพลงเท่านั้น หากต้องการซิงโครไนซ์กับหน่วยความจำภายนอก คุณสามารถใช้ 'หน่วยความจำภายนอก' เป็นที่เก็บหลัก หากต้องการซิงโครไนซ์กับหน่วยความจำภายใน คุณสามารถใช้ 'หน่วยความจำภายใน' เป็นที่เก็บหลัก

บริการ Synch - ฟังก์ชันการซิงค์เซิร์ฟเวอร์จะซิงโครไนซ์ข้อมูลในโทรศัพท์กับข้อมูลในเซิร์ฟเวอร์ เช่น ข้อมูลที่อยู่ของรายชื่อรายการนัดหมาย รายการสิ่งที่ต้องทำ และรายการบันทึกโดยผ่านเครือข่ายไร้สาย

01

02

03

04

05

06

07

08

การตั้งค่า

การตั้งค่าสตรีมมิ่ง - ผู้ให้บริการระบบไดบันทึกรุ่นนี้แล้ว คุณสามารถแก้ไขได้หากต้องการ


TV out - เลือก **PAL** หรือ **NTSC** สำหรับการเชื่อมต่อโทรทัศน์ KC910 เข้ากับโทรทัศน์

หมายเหตุ: สายเคเบิลเอาต์พุตสำหรับโทรทัศน์มีวางจำหน่ายแยกต่างหาก

การตั้งค่า Java - ใช้ตั้งค่าโปรไฟล์การลงทะเบียน **Divx VOD**

การใช้ตัวจัดการหน่วยความจำ

KC910 ของคุณมีหน่วยความจำให้เลือกสามแบบ: โทรศัพท์, USIM การ์ดและการ์ดหน่วยความจำภายนอก (คุณอาจต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

คุณสามารถใช้ตัวจัดการหน่วยความจำในการกำหนดว่าในแต่ละหน่วยความจำใช้หน่วยความจำไปเท่าใด และควรมีพื้นที่ว่างเหลือเท่าใด และที่  แล้วตามด้วย **ตั้งค่า**

เลือก **ตั้งค่าโทรศัพท์** แล้วเลือก **สถานะความจำ**

ความจำเครื่อง -

ดูหน่วยความจำที่มีในโทรศัพท์ KC910 สำหรับรูปภาพ, เสียง, วิดีโอ, แฟลช, MMS, อีเมล, แอปพลิเคชัน Java และอื่นๆ

ความจำสำรอง - ดูหน่วยความจำที่มีในเครื่องสำหรับ SMS, รายชื่อ, ปฏิทิน, สิ่งที่ต้องทำ, บันทึก, เดือน, ข้อมูลการโทร, บุคมาร์ค และรายการเบ็ดเตล็ดอื่นๆ


ความจำ USIM -

ดูหน่วยความจำที่มีใน USIM การ์ด **หน่วยความจำการ์ด** - ดูหน่วยความจำที่มีในการ์ดหน่วยความจำภายนอก (คุณต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

การตั้งค่าที่เก็บหลัก - เลือกตำแหน่งในการบันทึกรายการที่ต้องการ

เคล็ดลับ! โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับการใส่การ์ดหน่วยความจำที่หน้า 14


การใช้โหมด Flight

เปิดโหมด Flight โดยการเลือก  แล้วเลือก **ตั้งค่า** และที่ **รูปแบบเสียง** และเลือก **โหมด Flight** ในโหมด Flight คุณจะไม่สามารถโทรออก เชื่อมต่ออินเทอร์เน็ต ส่งข้อความ หรือใช้ บลูทูธ ได้

การส่งและการรับไฟล์โดยใช้บลูทูธ

บลูทูธเป็นวิธีในการส่งและรับไฟล์ที่ดีที่สุดโดยไม่จำเป็นต้องต่อสาย ซึ่งสามารถเชื่อมต่อได้อย่างรวดเร็วและง่ายดาย คุณยังสามารถเชื่อมต่อกับชุดหูฟังบลูทูธเพื่อโทรออกและรับสายได้

ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์รูปภาพ, วิดีโอ หรือ เพลง
- 2 และที่  แล้วเลือก **ส่ง** เลือก **บลูทูธ**

- 3 และที่ **ใช่** เพื่อเปิดบลูทูธ
- 4 หากคุณจับคู่อุปกรณ์บลูทูธแล้ว โทรศัพท์ KC910 จะไม่ค้นหาอุปกรณ์บลูทูธอื่นโดยอัตโนมัติ หากคุณยังไม่จับคู่อุปกรณ์บลูทูธ โทรศัพท์ KC910 จะค้นหาอุปกรณ์อื่นๆ ที่ใช้บลูทูธภายในรัศมีนั้น
- 5 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป แล้วแตะที่ **เลือก**
- 6 ไฟล์ของคุณจะถูกส่งออกไป

เคล็ดลับ! คอยเฝ้าดูแถบแสดงความคิดเห็นเพื่อให้แน่ใจว่าไฟล์ของคุณถูกส่งแล้ว

ในการรับไฟล์:

- 1 ในการรับไฟล์ คุณต้องตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับการเปลี่ยนการตั้งค่าบลูทูธที่ด้านล่าง
- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และที่ **ใช่** เพื่อรับไฟล์

01

02

03

04

05

06

07

08

การตั้งค่า

- 3** คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว และคุณสามารถเลือกเพื่อดูไฟล์หรือใช้เป็นภาพพื้นหลังได้ โดยทั่วไป ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมในแฟ้มข้อมูล

การเปลี่ยนการตั้งค่าบลูทูธ:

- 1** แตะที่  และเลือก **ตั้งค่า**

- 2** เลือก **บลูทูธ** แล้วแตะที่  จากนั้นเลือก **ตั้งค่า**

ทำการเปลี่ยนแปลง:

การมองเห็นเครื่อง - เลือกเป็นมองเห็นได้ หรือซ่อน หรือแสดง 1 นาที

ชื่อเครื่องของฉัน - ป้อนชื่อโทรศัพท์ KC910 ของคุณ

บริการที่รองรับ - เลือกวิธีใช้บลูทูธที่เกี่ยวข้องกับบริการอื่นๆ โปรดดูที่ใช้โทรศัพท์เป็นโมเด็มในหน้า 103 หรือการใช้ชุดหูฟังบลูทูธในหน้า 111

แอดเดรสส่วนตัว - แสดงแอดเดรสบลูทูธ

การจับคู่กับอุปกรณ์บลูทูธอื่น

โดยการจับคู่โทรศัพท์ KC910 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้ ซึ่งหมายความว่าอุปกรณ์ที่จับคู่ด้วยก็จะปลอดภัยมากขึ้น

- 1** ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้**, คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู **ตั้งค่า**
- 2** แตะที่ **ค้นหา**
- 3** โทรศัพท์ KC910 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ
- 4** เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่าน จากนั้นให้แตะที่ **ตกลง**
- 5** โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นซึ่งคุณควรป้อนรหัสผ่านเดียวกัน

- 6** การเชื่อมต่อบลูทูธของคุณแบบ
ป้องกันด้วยรหัสผ่านพร้อมใช้
งานแล้ว

การใช้ชุดหูฟังบลูทูธ

- 1** ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น
เปิด และ มองเห็นได้
- 2** ปฏิบัติตามคำแนะนำที่แนบมา
พร้อมกับชุดหูฟัง เพื่อตั้งค่าชุด
หูฟังให้อยู่ในโหมดการจับคู่
และจับคู่กับโทรศัพท์ของคุณ
- 3** แตะที่ **ถามเสมอ** หรือ
อนุญาตโดยไม่ถาม และแตะที่
ใช่ เพื่อเชื่อมต่อทันที โทรศัพท์
KC910 จะสลับเป็นรูปแบบชุดหู
ฟังโดยอัตโนมัติ

เคล็ดลับ! โปรดดูรายละเอียดเกี่ยวกับ โหมดตอบรับ BT ที่หน้า 27 เพื่อที่คุณจะได้สามารถควบคุมวิธีการรับสาย เมื่อมีการเชื่อมต่อชุดหูฟังบลูทูธ

01

02

03

04

05

06

07

08

Wifi

Wireless Manager
ให้คุณจัดการการเชื่อมต่อ
Wi-Fi Internet และ บลูทูธ
ในเครื่องของคุณ โดยให้โทรศัพท์
เชื่อมต่อเครือข่ายไร้สายในท้องถิ่น
หรือเขาใช้อินเทอร์เน็ตแบบไร้สาย
Wi-Fi เร็วกว่าและมีช่วงกว้างกว่า
เทคโนโลยีไร้สาย บลูทูธ

NOTE: KC910 สนับสนุนการเข้ารหัส
WEP, WPA-PSK/2 ไม่ใช่การเข้ารหัส
EAP, WPS ถ้าผู้ให้บริการ Wi-Fi หรือ
ผู้ดูแลระบบเครือข่ายของคุณตั้งค่า
การเข้ารหัสสำหรับการรักษาความ
ปลอดภัยไว้ คุณต้องป้อนรหัสในหน้า
ต่างป้อนรหัส หากไม่ได้มีการตั้งค่าการ
เข้ารหัสไว้ หน้าต่างป้อนรหัสจะไม่
ปรากฏขึ้น หาก你不ทราบรหัส
คุณต้องขอรหัสจากผู้ให้บริการ Wi-Fi
หรือผู้ดูแลระบบเครือข่ายของคุณ

การอัปเดตซอฟต์แวร์

โปรแกรมอัปเดตซอฟต์แวร์โทร
ศัพท์มือถือ LG

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการติด
ตั้งและการใช้โปรแกรมนี้ โปรดไปที่
<http://update.lgmobile.com>

คุณสมบัตินี้ให้คุณอัปเดตซอฟต์แวร์
ของคุณเป็นเวอร์ชันล่าสุดได้อย่าง
รวดเร็วและสะดวกบนอินเทอร์เน็ตโดย
ไม่ต้องไปที่ศูนย์บริการของเรา

เนื่องจากโปรแกรมอัปเดตซอฟต์แวร์
โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการ
การระหว่างกระบวนการอัปเดต โปรด
ตรวจสอบคำแนะนำและหมายเหตุที่
ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการ
ต่อไป โปรดทราบว่าการถอดสาย
การสื่อสารข้อมูล USB หรือแบตเตอรี่
ระหว่างการอัปเดตอาจทำให้โทร
ศัพท์ชำรุดเสียหายได้ เนื่องจากผู้
ผลิตจะไม่รับผิดชอบต่อการสูญเสีย
ข้อมูลระหว่างกระบวนการอัปเดต
คุณควรจัดข้อมูลสำคัญเก็บไว้ก่อน

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ KC910 ของคุณ
อุปกรณ์ชาร์จ



แบตเตอรี่



ปากกาและสายคล้อง
สำหรับพกพา



ชุดหูฟังสเตอริโอ



สายเคเบิลข้อมูลและซีดี
เชื่อมต่อและซิงโครไนซ์
โทรศัพท์ KC910
เข้ากับพีซี



คู่มือการใช้

เรียนรู้เพิ่มเติมเกี่ยวกับโทร
ศัพท์ KC910 ของคุณ



คู่มือการใช้ KC910

01

02

03

04

05

06

07

08

หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

บริการของเครือข่าย

โทรศัพท์ไร้สายที่อธิบายไว้ในคู่มือนี้ ได้รับการรับรองให้ใช้ในระบบเครือข่าย GSM และ W-CDMA คุณสมบัติต่างๆ ที่กล่าวถึงในคู่มือนี้ เรียกว่า บริการเสริมจากระบบเครือข่าย ซึ่งเป็นบริการพิเศษที่คุณขอเปิดใช้บริการได้จากผู้ให้บริการของคุณ ก่อนที่คุณจะสามารถใช้คุณสมบัติต่างๆ ของบริการเสริมจากระบบเครือข่ายเหล่านี้ คุณต้องสมัครขอรับบริการผ่านทางผู้ให้บริการ และขอคำแนะนำในการใช้จากผู้ให้บริการด้วย

การลงทะเบียน Divx VOD

สร้างรหัสการลงทะเบียน DivX VOD ไปที่ <<http://vod.divx.com/>> เพื่อลงทะเบียนและการสนับสนุนทางเทคนิค

ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์ : KC910
ระบบ : GSM / W-CDMA

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ)
+45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

ศูนย์บริการ LG โดย บริษัท แอลจี อิเลคทรอนิกส์ (ประเทศไทย) จำกัด
ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน
แขวงบวรนิวาส เขตธนบุรี กรุงเทพฯ 10600
วันและเวลาทำการ : จันทร์-ศุกร์,
08:00 - 17:40น.
Call center : 0-2878-5757

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM/ W-CDMA Terminal Equipment

Model Name

KC910

Trade Name

LG

CE 0168



Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director 29.Aug. 2008

Signature of representative

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, e-mail : seokim @ lge.com

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้ อาจทำให้เกิดอันตรายหรือผิดปกติ

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น KC910 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการทำงานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณ

ที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASy4 ขณะถือแนบกับหูคือ 0.590 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.492 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR

ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื่องเยื่อ 1 กรัม

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จแบตเตอรี่ และอุปกรณ์เสริมที่ผ่านการรับรองให้เข้ากับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆที่ไม่ผ่านการรับรองดังกล่าวอาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์

- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้ติดไฟซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์(อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ

- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟังด้วยความระมัดระวังอย่าแตะต้องเสาอากาศโดยไม่จำเป็น

การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาต หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อเป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ

- มีสมาธิในการขับซี้ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับซี้ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์เพกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงานหรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัสหรือพยายามดึงออก ให้หยุดใช้โทรศัพท์ทันทีกว่าจะส่วนที่เป็นแก้วนี้ได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน

- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง

- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหาบางประการ แต่คุณสามารถแก้ไขปัญหาที่คุณพบบางอย่างได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดของซิมการ์ด	ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือคุณอาจใส่ซิมการ์ดไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่ได้เชื่อมต่อกับระบบเครือข่าย	สัญญาณอ่อน อยู่นอกพื้นที่บริการของระบบเครือข่าย GSM	ย้ายไปบริเวณที่ใกล้หน้าต่างหรือที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการ
รหัสไม่ตรงกัน	เมื่อคุณต้องการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสนั้นอีกครั้ง รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	ติดต่อผู้ให้บริการ
ตั้งค่าฟังก์ชันไม่ได้	ผู้ให้บริการไม่สนับสนุนหรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข มีการใส่ซิมการ์ดอันใหม่ถึงขีดจำกัดการโทรของคุณแล้ว	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยรหัส PIN 2

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดเครื่องเบาเกินไป แบตเตอรี่หมด	กดปุ่มเปิด/ปิดเป็นเวลาอย่างน้อยสองวินาที ชาร์จแบตเตอรี่ ตรวจสอบสถานะแสดงการชาร์จบนหน้าจอ
	ข้อสัมผัสแบตเตอรี่สกปรก	ทำความสะอาดข้อสัมผัส
ข้อผิดพลาดเกี่ยวกับการชาร์จ	แบตเตอรี่หมด โดยสิ้นเชิง อุณหภูมิสูงหรือต่ำเกินไป	ชาร์จแบตเตอรี่ ตรวจสอบดูให้แน่ใจว่าอยู่ในอุณหภูมิแวดล้อมที่เหมาะสม รอสักครู่ จากนั้นชาร์จแบตเตอรี่อีกครั้ง
	มีปัญหาที่ข้อสัมผัส	ตรวจสอบกระแสไฟฟ้าและการเชื่อมต่อกับโทรศัพท์ ตรวจสอบข้อสัมผัสแบตเตอรี่ ทำความสะอาดหากจำเป็น
	ไม่มีกระแสไฟฟ้า	เสียบปลั๊กเข้ากับเต้าเสียบอื่น หรือตรวจสอบกระแสไฟฟ้า
	เครื่องชาร์จชำรุด	หากเครื่องชาร์จไม่เริ่มทำงาน ให้เปลี่ยนเครื่องชาร์จใหม่
	ใช้เครื่องชาร์จไม่ถูกต้อง	ใช้ปลั๊กกรูเสียบของแท้ของ LG เท่านั้น
	แบตเตอรี่ชำรุด	เปลี่ยนแบตเตอรี่
สัญญาณเครือข่ายขาดหายไป	สัญญาณอ่อนเกินไป	การเชื่อมต่อกับผู้ให้บริการอื่น เป็นไปโดยอัตโนมัติ
หมายเลขโทรศัพท์ใช้โทรศัพท์โทรออกไม่ได้	กำลังใช้งานฟังก์ชันกักหนดยอดหมายเลขโทรออก	ตรวจสอบการตั้งค่า



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KC910 User Guide



Congratulations on your purchase of the advanced and compact KC910 phone by LG, designed to operate with the latest digital mobile communication technology.

Set up	01
Your home screen	02
The basics	03
Get creative	04
Get organised	05
The web	06
Settings	07
Accessories	08

Contents

Set up

Getting to know your phone	8
Open view	10
Installing the USIM and battery	11
Memory card	14
Menu map	16

Your home screen

Touch screen tips	17
The quick keys	18
The status bar	19
Changing your status from the status bar	20
Using the Multitasking function	20

The basics

Calls	21
Making a call or video call	21
Making a call from your contacts	21
Answering and rejecting a call	22
In-call options	23
Adjusting the call volume	24
Speed dialling	24
Making a second call	24
Turning off DTMF	25
Viewing your call logs	25
Using call divert	26
Using call barring	26

Changing the common call setting	27
Changing your video call settings	28
Contacts	29
Searching for a contact	29
Adding a new contact	29
Contact options	30
Creating a group	31
Changing your contact settings	31
Viewing information	33
Messaging	34
Messaging	34
Sending a message	34
Entering text	35
T9 predictive	35
Abc manual	35
Keyboard	36
Handwriting recognition	36
Setting up your email	39
Retrieving your email	41
Sending an email using your new account	41
Changing your email settings	42
Message folders	43
Managing your messages	43
Using templates	44
Using emoticons	44
Changing your text message settings	44

Changing your multimedia message settings.....	45	Changing the video image size.....	61
Changing your other settings.....	46	Choosing a colour tone.....	62
Get creative		Using the inner video camera.....	62
Camera	47	Watching your saved videos	63
Taking a quick photo	47	Watching your videos on your TV	63
After you've taken your photo.....	48	Your photos and videos	64
Getting to know the viewfinder.....	49	Viewing your photos and videos.....	64
Using the flash.....	50	Using zoom when viewing a video or photo	64
Choosing a shot mode	50	Adjusting the volume when viewing a video	64
Adjusting the exposure.....	51	Capturing an image from a video	65
Taking a continuous shot	51	Viewing your photos as a slide show.....	65
Taking a panoramic shot	52	Setting a photo as wallpaper	66
Using the advanced settings.....	52	Editing your photos.....	66
Preview settings.....	52	Adding text to a photo.....	67
Other settings.....	53	Adding an effect to a photo	68
Changing the image size.....	55	Crop a photo	69
Choosing a colour effect.....	55	Morphing a photo.....	69
Using the inner camera.....	56	Adding a colour accent to a photo	69
Viewing your saved photos	56	Swapping the colours in a photo	70
Video camera	57	Editing your videos.....	70
Shooting a quick video	57	Trimming the length of your video...70	
After you've shot your video	58	Merging two videos together.....	71
Getting to know the viewfinder.....	59	Merging a photo with a video	71
Adjusting the exposure.....	60	Adding text to a video	72
Using the advanced settings.....	60	Overlaying a photo	73
Preview settings.....	60		
Other settings.....	61		

Contents

Adding a voice recording	73	Transferring a file to your phone	83
Adding a soundtrack to your video ..	74	Others	83
Changing the speed of your video ..	74	Music	85
Adding a dimming effect	75	Transferring music onto your phone	85
Multimedia	76	Playing a song	86
Pictures	76	Using options while playing music...	86
My images options menu	76	Creating a playlist	87
Sending a photo	77	Editing a playlist	87
Using an image	77	Deleting a playlist	88
Marking up your images	78	Using the radio	88
Printing an image	78	Searching for stations	88
Moving or copying an image	78	Resetting channels	89
Creating a slide show	79	Listening to the radio	89
Checking your memory status	79		
Sounds	79	Get organised	
Using a sound	79	Organiser	90
Videos	80	Adding an event to your calendar	90
Using options while video is paused	80	Changing your default calendar	
Sending a video clip	80	view	90
Games and Applications	81	Adding an item to your To do list	91
Playing a game	81	Sharing a To do task	91
Using the games options menu	81	Using date finder	91
Flash contents	82	Setting your alarm	92
Viewing an SWF/ SVG file	82	Adding a memo	92
Using options viewing the SWF/ SVG		Voice recorder	93
file	82	Recording a sound or voice	93
Documents	82	Sending the voice recording	93
Viewing a file	82	Using your calculator	94

Converting a unit.....	94	Using your phone as a modem.....	102
Using the stopwatch.....	94	Settings	
Adding a city to your world time.....	95	Changing your screen settings.....	104
Jogging Buddy.....	95	Personalising your profiles.....	104
PC Sync.....	96	Changing your phone settings.....	105
Installing LG PC Suite on your computer.....	96	Changing your touch settings.....	106
Connecting your phone and PC.....	97	Changing your connectivity settings.....	106
Backing up and restoring your phone's information.....	97	Using memory manager.....	108
Viewing your phone files on your PC.....	97	Using flight mode.....	109
Synchronising your contacts.....	97	Sending and receiving your files using Bluetooth.....	109
Synchronising your messages.....	98	Pairing with another Bluetooth device.....	110
Using your phone as a mass storage device.....	98	Using a Bluetooth headset.....	111
DivX Converter.....	99	Wifi.....	112
The web		Accessories.....	113
Browser.....	100	Network service.....	114
Accessing the web.....	100	Technical data.....	114
Adding and accessing your bookmarks.....	100	Guidelines	
Using RSS reader.....	101	Guidelines for safe and efficient use.....	116
Saving a page.....	101	Trouble Shooting.....	122
Accessing a saved page.....	102		
Viewing your browser history.....	102		
Changing the web browser settings.....	102		

Getting to know your phone

Inner camera lens

Proximity Sensor


End/Power key

Ends or rejects a call.
Turns the phone on/off.
Press once to return to
the home screen.

Multitasking key

Call key

Dials a phone number and
answers incoming calls.

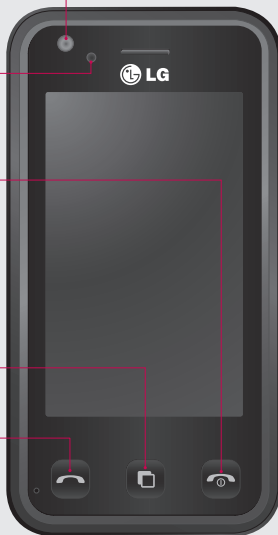

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.



Charger, Cable, Handsfree connector

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.

Micro SD memory card socket



Side keys

- **When the screen is idle:** volume of key tone.
- **During a call:** volume of the earpiece.
- **When playing a BGM track:** controls volume continuously.

Lock/ Unlock key (image stabilization key in camera)

Capture button

01

02

03

04


05

06

07

08

Open view

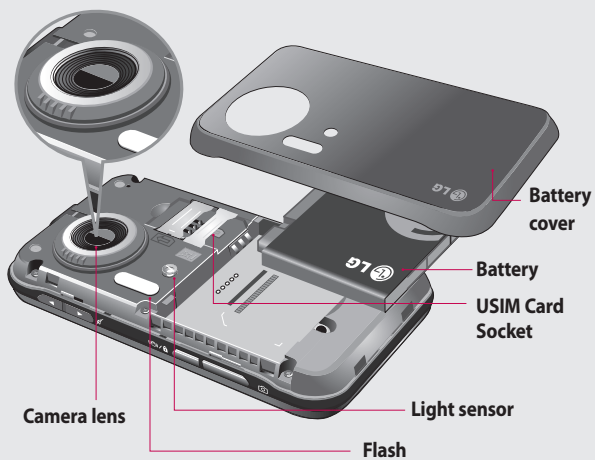

Installing the USIM and battery

1 Remove the battery cover

Press and hold down the battery release button at the top of the phone and lift off the battery cover.



⚠ WARNING: Do not use your fingernail when removing the battery.

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

2 Remove the battery

Hold the top edge of the battery and lift it from the battery compartment.



01

02

03

04

05

06


07

08

Installing the USIM and battery

3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the Golden contact Area on the card is facing downwards. To remove the USIM card, pull it gently in the opposite direction.

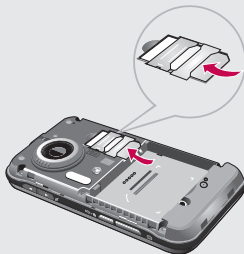


4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the Battery Until it clicks into place.



5 Charging your phone

Open up the cover of the charger socket on the side of your KC910. Insert the charger and plug into a mains electricity socket. Your KC910 will need to be charged until a message reading "Battery full" appears on screen.

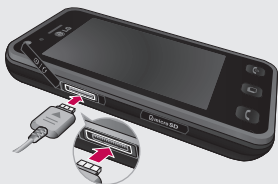

01

02

03

04

05

06

07

08


Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card. The KC910 will support up to a 8GB memory card.

NOTE: A memory card is an optional accessory.


- 1 Open the memory card cover.
- 2 Slide the memory card into the slot, until it clicks into place. Make sure that the gold contact area is facing downwards.

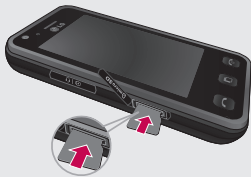

- 3 Close the memory card cover.

Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen select  then touch **Settings** and choose **Phone settings**.
- 2 Touch **Memory manager** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

TIP! To change your default storage destination, open Memory manager from the Phone settings menu and select Primary storage settings.

NOTE: If your memory card has existing content on, it will automatically be filed in the correct folder, for example, videos will be stored in the My Videos folder.

Transferring your contacts

To transfer your contacts from your USIM to your phone:

- 1 From the Communicate tab, select **Contacts** and choose **Contact settings**.
- 2 Touch **Copy**.
- 3 Choose **USIM to Handset**.
- 4 Choose **Select all** or choose names one by one and touch **Done**.

01

02

03

04


05

06

07

08

Menu map

Touch  in the home screen to open a **Top menu**. From here you can access further menus: **Communicate**, **Entertainment**, **Utilities** and **Settings**.



Communicate



Dialling



Speed dials



Contacts



Call history



New message



New Email



Messaging



Entertainment



Gallery



My stuff



Camera



Video camera



Muvee Studio



Music



FM radio



Games & apps



Utilities



Browser



Google



Organiser



Alarms



Memo



Voice recorder



Tools



USIM Services



Settings



Profiles



Screen settings



Phone settings



Call settings



Touch settings



Connectivity



Bluetooth



Wi-Fi

Your home screen

Whenever your KC910 is not in use it will return to your home screen. From here you can access all menu options, make a quick call and view the status of your phone - as well as many other things.

Touch screen tips

The home screen is also a great place to get accustomed to the touch screen.


To select an item, touch the icon accurately. Your KC910 will vibrate slightly when it recognises you've touched an option.

To scroll through lists, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- There's no need to press too hard, the touchscreen is sensitive enough to pick up on a light yet firm touch.
- Use the tip of your finger to touch the option you require. Be careful

not to touch any other keys.

- When the screen light is off, press and hold the Unlock/Lock key on the left hand side to restore the home screen.
- Don't cover the phone with a case or cover as the touch screen will not work with any material covering it.
- When you touch **W** the mobile widget shows up. You can drag and click what you need right away.

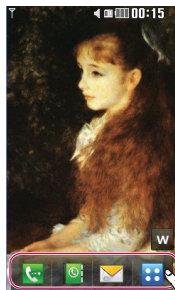

Quick keys

01

02

03

04

05

06

07


08


Your home screen

The quick keys

The quick keys on your home screen provide easy, one-touch access to your most used functions.



Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Call** or press the  hard key.

To initiate a video call with the number, press  after inputting the number and choose **Make Video call**. See page 21 for details.



Touch to open your contacts. To search for the number you want to call. Enter the name of the contact using the touchpad. You can also create new contacts and edit existing ones. See page 30 for details.



Touch to access the Messaging options menu. From here you can create a new SMS. See page 34 for details.


























Touch to open the full Top menu which is separated into four sub-menus. Touch the vertical tabs to view further options.

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	An alarm is set

Icon	Description
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	Wifi connected
	GPS on (Geo-tagging, Jogging buddy)
	Memory card Inserted
	Browser Connected

01

02

03

04

05

06


07

08

Your home screen

Changing your status from the status bar


Touch the current status icon that represents your current setting in the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3, Bluetooth and Wifi status. You can set Profile type, play/pause MP3 and activate/deactivate Bluetooth and Wifi.

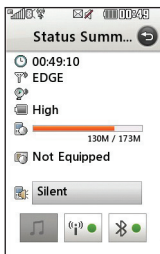

Using the Multitasking function

Press the multitasking hard key to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.




From any application, press the Multitasking key and select Home screen to return to the home screen without exiting or closing the application.


When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

When you press this key from the home screen, you can view a short cut menu to some commonly used functions, including **New message** and **Alarms**.


Calls


Making a call or video call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad. To delete a digit press the clear key.
- 3 Touch the  hard key to initiate the call.
- 4 To end the call press the  hard key.


TIP! To enter + for making an international call, touch  twice.


TIP! Press the lock/unlock button on the right side of the handset to lock the touchscreen to prevent calls being made by mistake.

TIP! To bring up the keypad during a call, touch the  key.

TIP! You can **Make video call**, **Send message**, **Save number** or **Search contacts** by tapping .

Making a call from your contacts

- 1 From the home screen touch  to open Contacts.
- 2 Touch Name and enter the first few letters of the contact you would like to call.
- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Touch **Call**.

TIP! Press  and you can choose from **Add contact**, **Send message**, **Delete**, **Speed dials**, **My business card** and **Search by group**.

01

02

03

04


05

06


07


08



Calls

TIP! You can search your contacts from the call screen. Touch  in right lower column of screen Scroll through your contacts or enter the first few letters of a name to filter the list.

Answering and rejecting a call

When your phone rings press the  hard key to answer the call.

Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

Press the  hard key to reject an incoming call or touch  on the screen.



Calls


Adjusting the call volume


To adjust the volume during a call, use the up and down button on the right side of the phone.

Speed dialling





You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen touch  to open Contacts.
- 2 Touch  and choose **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 4 Your contacts will open. Select the contact you'd like to assign to that number by touching the phone number once.

To call a speed dial number, touch  from the home screen then press and hold the assigned number until the contact appears on screen.

The call will initiate automatically, there's no need to press .

Making a second call


- 1 During your initial call, touch  and select the number you want to call.
- 2 Dial the number or search your contacts (see **Making a call** on page 21 for details).
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.
- 6 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

TIP! You can combine your calls by touching “Join icon”. Check that your network provider supports conference calling.

NOTE: You will be charged for each call you make.


Turning off DTMF

DTMF allows you to use numerical commands to navigate menus within automated calls. DTMF is switched on as default.

To turn it off during a call (to make a note of a number for example) touch  and select DTMF off.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Viewing your call logs

Touch  and select **Communicate** and tap **Call history**.


Choose to view:

All calls - View a complete list of all dialled, received and missed calls.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Missed calls - View a list of all the calls you have missed.

TIP! From any call log touch  and **Delete all** to delete all the recorded items.

TIP! Touch any single call log entry to view the date, time and duration of the call.

01

02

03

04

05


06

07

08

Calls

Using call divert

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Call divert** and choose **Video calls** and/or **Voice calls**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.


TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Call barring** and choose **Video calls** and/or **Voice calls**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Changing the common call setting

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Common settings**. From here you can amend the settings for:
 - Call reject** - Slide the switch left to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers, No caller Id (those not in your contacts). Touch **Save** to change the setting.
 - Send my number** - Choose whether your number will be displayed when you call someone.
 - Auto redial** - Slide the switch left for **On** or right for **Off**.
 - Answer mode** - Choose whether to answer the phone using the send key or any key.

Minute minder - Slide the switch left to **On** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

01

02

03

04

05


06

07

08

Calls

Changing your video call settings



- 1 Touch , select **Settings**, select **Call settings** and choose **Video call settings**.
- 2 Choose the settings for your video calling. Determine whether to Use private picture and select one, and/or switch on the mirror to see yourself on screen when making a video call. Switch on the mirror to show the mirror effect on the video caller screen


Contacts

Searching for a contact

There are two ways to search for a contact:

From the home screen

- 1 From the home screen touch  to open Contacts. Touch Name and enter the name of the contact using the key pad.
- 2 Touch **Call** or the  hard key to initiate the call.

TIP! You can search by group by touching  and selecting **Search by group**. This will bring up a list of all your groups.


From the main menu


- 1 Touch , select **Communicate**.
- 2 Touch **Contacts** and **Search**.

TIP! The alphabetical keypad is displayed once you tap Name.

TIP! To scroll through your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Adding a new contact

- 1 From the home screen touch  then select **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **USIM**.
- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.

TIP! Once you have typed in a name, press  to edit the rest of the information for your contact.

- 4 Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**.

01

02

03

04

05

06

07

08


Contacts

- 5 Add an email address.
- 6 Assign the contact to one or more groups. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 7 You can also add a **Ringtone, Birthday, Anniversary, Homepage, Home address, Company name, Job title, Company address** and a **Memo**.
- 8 Touch **Save** to save the contact.

TIP! You can create customised groups for your contacts, see **Creating a group** on page 32.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 29.
- 2 You can call or send a message directly from here.
- 3 Press  to open the list of options. From here you can:
 - Make a video call** - Video call the contact.
 - Edit** - Change any of the contact's details.
 - Delete** - Delete the contact. Touch **Yes** if you are sure.
 - Copy or Move to USIM/Handset** - Choose to move or copy to the USIM card or handset (depending on where you originally saved the contact).


Send business card - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, **Email** or via **Bluetooth**.

TIP! Message - Send a message to the contact. See page 34 for details on how to send messages.

Creating a group

- 1 From the home screen touch  and select the **Communicate** tab. Touch **Contacts** and select **Groups**.
- 2 Touch .
- 3 Select **Add group**.
- 4 Enter a name for your new group.
- 5 Select **Add a Ringtone** and choose.
- 6 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

TIP! You can edit an existing group by highlighting it and touching . Choose to Add contacts, Rename the group, Delete a group, Add members or assign a Group ringtone.

Changing your contact settings

You can adapt your contact settings so that your Contacts suits your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

01

02

03

04

05

06

07


08

Contacts

1 From the Communicate tab touch **Contacts** and select **Contacts settings**.

2 From here you can adjust the following settings:

Contact list settings - Choose whether to view contacts saved to both your **Handset & USIM**, **Handset** only or **USIM** only.

You can also choose to show the first name or last name of a contact first. You can display with quick command key among Make voice call, Make video call or Send a message. In contact list touch  to call directly. You can change this setting. (Make voice call/ Make video call/ Send message/ Do not display)

Synchronise contacts - Connect to your server to synchronise your contacts. See **Synchronising your contacts** on page 107.

Copy - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

Move - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So, if you move a contact from the USIM to the handset it will be deleted from the USIM memory.

Send all contacts via Bluetooth - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - See **Backing up and restoring your phone's information** on page 97.

Restore contacts - See **Backing up and restoring your phone's information** on page 97.

Clear contacts - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your contacts.

Viewing information

- 1 From the Communicate tab touch **Contacts** and **Information**.
- 2 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info.** (how much memory space you've got left) and **My business card**.

TIP! If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

01

02

03

04

05

06

07



08

Messaging


Messaging

Your KC910 combines SMS, MMS and email into one intuitive and easy to use menu.


There are two ways to enter the messaging centre:


- 1 From the home screen, touch  or touch  , then select **Communicate** and choose **New message**.

Sending a message

- 1 Touch  then **Create new message**.
- 2 From here you can choose **Message** to send an SMS or MMS, or choose Email to send an email. See page 41 for details.
- 3 Touch **Insert** to add an image, video, sound, template, emoticon, Name & number, New Slide, Subject, Document or more (Business card, Schedule, Memo, To Do, My business card, Others)

- 4 Touch Recipient to enter the recipient's number, or touch the search icon to open your contacts. You can add multiple contacts. When you are finished, touch **Send**.

 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.


TIP! Quick reply - Send a reply promptly to the selected message using a template.


Entering text


There are five ways to enter text: Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.

Tap the screen once, then the keyboard shows up.

 Touch to turn on T9 predictive text.


 You can change the writing languages.

 Tap to change between the numbers, symbols and texts keypads.

Use  to scroll through the different text entry mode (for example, capitals or lowercase).

To enter a space touch .

T9 predictive



In T9 mode you will see .

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key


associated with the letter you want to enter, and the dictionary will predict the word you want to use. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

If the word you want doesn't appear, touch **Spell**. If you touch **Spell** you can then enter the word using Abc manual mode and your word or name will be added to the dictionary.

TIP! Simply touch each letter to write your message and press:

 to switch to upper case
 to add a space

Abc manual

In Abc mode you will see .

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

01

02

03

04

05

06

07


08

Messaging

Keyboard

In Keyboard mode the screen flips to landscape and a full keyboard appears on screen.

Simply touch each letter to write your message and press:

 to switch to upper case

TIP! If you turn the phone to landscape in messaging mode, the phone will automatically bring up the Keyboard.

TIP! Keyboard mode predicts and shows what it thinks you will type next. These words are predicted based on the sentences you have typed in so far. If you do not wish to use the suggested words, keep typing in new words.


Handwriting recognition

In Handwriting mode you simply write on the screen and your KC910 will convert your handwriting into your message. Select **Screen** or **Box** depending on your preferred view. (Handwriting- Screen, Handwriting-Box, Handwriting-Double Box.)

Handwriting-Screen enables you to input one letters continuously on the full screen.

Handwriting-Box enables you to input a letter at a time. There is a separate area to input symbols, numbers and letters.

Handwriting-Double Box has two boxes to input letters alternately so you can input letters continuously.

 **WARNING:** You may find it easier to use a stylus in this mode, please remember to press lightly to protect your screen from damage.

Handwriting recognition translates stylus gestures into letters, numbers or other character, and displays these characters as text. Handwriting recognition is only active where text can be entered.

Note: Most letters can be written using different stroke styles. See the tables below. The arrow selects whether the letter is upper or lower case, not the style of writing.

Alphabet

If you select capital letter mode (ABC), letters you type will be inserted as capital letters even if you write in small letters, and vice versa.

Letter	Strokes
A	A A' a a'
B	B B b b'
C	C C
D	D D d d'
E	E E e E'
F	F F f F'
G	G G g G'

Letter	Strokes
H	H H h h'
I	I I i i'
J	J J j j'
K	K K k k'
L	L L l l'
M	M M m m'
N	N N n n'
O	O O o o'
P	P P p p'
Q	Q Q q q'
R	R R r r'
S	S S s
T	T T t t'
U	U U u u'
V	V V v v'
W	W W w w'
X	X X x x'
Y	Y Y y y'
Z	Z Z z z'
ß	ß

01

02

03

04

05





06

07



08

Messaging

Accented characters


Accent	Strokes
Space	
Backspace	
Enter	
Switching the text mode	





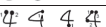
Punctuation marks



Mark	Strokes
Full stop	
At @	

Note: Start each stroke at the dot.

Numbers





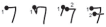









Touch  to switch from text entry to number entry.

Number	Strokes
0	
1	
2	
3	
4	

5	
6	
7	
8	
9	

Accented letters


Write the character as described above, then write the accent above the entered letter. Other such characters, for example, ö and ü, follow the same principle.

grave		
acute		
circumflex		
tilde		
ring		
dieresis		
cedilla		

Setting up your email

You can stay in touch on the move using email on your KC910. It's quick and simple to set up a POP3 or IMAP4 email account.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  from the home screen, and touch **Messaging**.
- 2 Select **Message settings** then **Email**.
- 3 Select **Email accounts** then touch **Add new**.
- 4 You can now choose how your account works:
Username - Enter the account's username.
Password - Enter the account's password.

Email address - Enter the account email address.

Reply email address - Enter the 'reply to' email address.

Outgoing mail server - Enter the outgoing email server address

Incoming mail server - Enter the incoming email server address

Maximum receive size - Choose the size limit of your emails, the maximum is 2MB.

Mailbox type - Enter the mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

01

02

03

04

05

06

07

08

Messaging

Save sent mail into - Select whether to save sent emails (when the mailbox type is set to IMAP4). When the mailbox type is POP3, sent mails are always saved into handset.

Retrieve only new - Choose whether to discard emails already downloaded.

Access point - Choose your Internet access point.

Email to retrieve - Choose the way to download emails. Choose from Header only or All including body for POP3, header only, header + body, or all for IMAP4.

Auto retrieve - Choose whether to retrieve your new emails automatically.

Advanced settings - Choose whether to use the advanced settings.

SMTP port number - Normally, this will be 25.

SMTP TLS/SSL - Choose whether to use TLS/SSL for outgoing server.

Incoming server port - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

Incoming TLS/SSL - Choose whether to use TLS/SSL for incoming server.

SMTP authentication - Choose the security settings for the outgoing mail server

SMTP Username - Enter the SMTP username.

SMTP Password - Enter the SMTP password.



APOP secure login - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.


Retrieving your email

You can automatically or manually check your account for new emails. See **Change your email settings** on page 42 to check automatically.

To check manually:

- 1 Touch  then **Messaging**.
- 2 Select **Mailbox**.
- 3 Touch the account you want to use then .
- 4 Choose **Retrieve** and your KC910 will connect to your email account and retrieve your new messages.

Sending an email using your new account

- 1 Touch  in the Communicate menu to open a new blank message.
- 2 You can enter the recipient's address and write your message. You can also attach images, videos, sounds or other file types.
- 3 Touch **Send** and your email will be sent.

TIP! You can upload Word, Excel, PowerPoint and PDF documents to your KC910 so you can review them on the move.

01

02

03

04

05

06

07


08

Messaging

Changing your email settings

You can change your email settings according to your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  from the home screen, and choose **Messaging** and **Message settings**.
- 2 Select **Email**.
- 3 You can adapt the following settings:
 - Email accounts** - Manage your email accounts.
 - Allow reply Email** - Choose to allow the sending of read confirmation messages.
 - Request reply Email** - Choose whether to request read confirmation messages.
 - Retrieve interval** - Choose how

often your KC910 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at one time.

Include message in Fwd and Reply - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in Roaming - Choose whether to retrieve your messages automatically when abroad (roaming).

New email notification - Choose whether to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Mail sending size - Choose the size of email you send.

Message folders

You'll recognise the folder structure used on your KC910, which is fairly self-explanatory.

Create new message - Open a new blank message.

Inbox - All the messages you received are placed into your inbox. From here you can view, delete and do more, see **Managing your messages** below for details.

Mailbox - All the emails you receive on your KC910 will be placed in your mailbox.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - Messages you send are placed in this folder.

My Folders - Create folders to store your messages.

Templates - Use a list of commonly used text and multimedia message templates.



Emoticons - Add and insert emoticons for your messages.

Message settings - Change the settings for your text and multimedia messages.

Managing your messages

You can use your Inbox to manage your messages.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then **Inbox**.
- 2 Touch  and then choose to:
 - Delete** - Delete marked messages.
 - Create new message** - Open a new blank message.

01

02

03

04

05

06

07

08

Messaging

Move to My folders - Move the marked messages to My folders.

Search - Search the messages using a date and /or a phone number.

Filter - View your message by type. This will group SMS separately from MMS.



Delete all - Delete all of the messages.

If you see the message **No space for USIM messages** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.



Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to **Add template**, **Delete** or **Delete all** templates. To edit a message just select it, make your changes and touch **Save**.

Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.


- 1 Touch  then choose **Emoticons**.
- 2 Touch **Add new**, or touch , **Delete** or **Delete all** emoticons.

Changing your text message settings

Your KC910 message settings are pre-defined so that you can send messages immediately. These settings can be changed according

to your preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Messaging settings** and **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Voice**, **Fax**, **X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send

long messages as Multiple SMS or as MMS.

Changing your multimedia message settings

Your KC910 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch  then choose **Message settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose **Home** or **Roaming network**. If you then choose Manual you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

01

02

03

04

05

06

07

08

Messaging

Priority - Choose the priority level of your MMS.


Validity period - Choose how long your message is stored at the message centre.


Slide duration - Choose how long your slides appear on screen.


Delivery time - Choose how long before a message is delivered.

Multi msg centre - Enter the details of your message centre.

Changing your other settings

Touch , choose **Message settings** then:

Videomail - Touch **Add new** or  to add a new Videomail service. Contact your network operator for more information on the service they provide.

Voicemail - Touch **Add new** or  to add a new Voicemail service. Contact your network operator for more information on the service they provide.


Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Info. service - Choose your reception status, language and other settings.

Camera

Taking a quick photo

TIP! The camera lens has its own cover. Twist the cover open to use the camera and quickly open the viewfinder.

- 1 Press the  key on the right side of the phone.
- 2 You will be prompted to open the lens cover. The viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Slightly press the capture button, a focus box will appear in the centre of the viewfinder screen.
- 5 Position the phone so you can see the subject of your photo in the focus box.
- 6 When the focus box turns green, the camera has focused on your subject.
- 7 Press the capture button fully.

TIP! Touch Shot

You can take a photo by touching screen also. After selecting an object with touch, you can see the subject in the focus box. When the focus box turns green you can take a photo simply by removing their finger from the screen.

TIP! Face Tracking

Automatically detects and focuses on human faces to help you to take clear Pictures.

01

02

03

04

05

06


07


08


Camera


After you've taken your photo


Your captured photo will appear on screen. The name of the image runs along the bottom of the screen together with six icons down the right side.

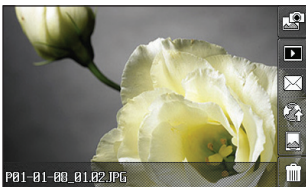



 Touch to take another photo straightaway. Your current photo will be saved.

 Touch to view a gallery of saved photos.


 Touch to send the photo as a **Message, Email, or Bluetooth**. See page 34 for Sending a message, and page 109 for Sending and receiving your files using Bluetooth.

 Touch to upload to your Blogger account.

 Touch to set the picture you have taken as Wallpaper.

 Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.

Getting to know the viewfinder

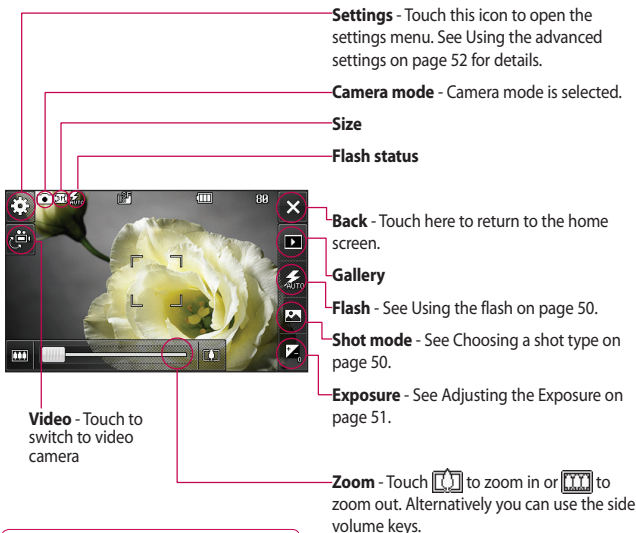


TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

- 01
- 02
- 03
- 04**
- 05
- 06
- 07
- 08



Camera

Using the flash

The flash is set to auto as default, but there are other options.

- 1 Select  from the right side of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
Auto - Your camera will assess the lighting needed to take a good picture and use the flash as necessary.
Red-eye reduction - The camera will flash twice in order to reduce red eye.
Always off - The camera will never flash. This is useful if you want to save battery power.
- 3 When you touch the option you want to use the flash menu will automatically close, ready for you to take your picture.
- 4 The flash status icon in the viewfinder will change according to your new flash mode.

Choosing a shot mode

- 1 Touch  to open the available shot mode.
- 2 Choose from seven options:
Normal shot - This is the default shot type, the photo will be taken in the normal way, as outlined in taking a quick photo.
Smile shot - This shot type is great for taking a photo of people. Focus on the subject and press  then the photo will be taken automatically when it smile.
Beauty shot - This enables you to take a photo of person's face clearly and brightly. Especially useful when you are close up.
Art shot - Choose different picture effects. (Original, Black&White, Warm, Cold.)

Continuous shot - This enables you to take seven shots automatically in very quick succession. See **Taking a continuous shot** on page 51 for details.



Panorama - This shot type is great for taking a photo of a large group of people or for capturing a panoramic view. See **Taking a panoramic shot** on page 52 for more details.

Frame shot - Choose from one of the fun frames to transform your friend or just decorate their surroundings.



Adjusting the exposure

Exposure defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

1 Touch .

2 Slide the contrast indicator along the bar, towards  for a lower exposure, hazier image or towards  for a higher exposure, sharper image.

Taking a continuous shot

- 1 Touch  to open the available shot types and select Continuous shot.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera will take seven shots in quick succession and display the first with seven thumbnails shown on the left side of the screen.
- 4 Once you have highlighted the image you want to keep, touch . You will be given a chance to save more than one of the images.

01

02

03

04

05

06


07

08

Camera


Taking a panoramic shot

Capture life as it appears using a panoramic shot. The camera will let you take three photos, all aligned, and combine them into one wide angle image.

- 1 Touch  to open the available shot types and select **Panorama shot**.
- 2 Take the first photo as normal. A ghosted version of the right side of the image will appear in the viewfinder.
- 3 When you take the second and third photo, line the ghost of the previous image up with the image in the viewfinder.
- 4 In the photo gallery, the photos will be saved as one panoramic image.

NOTE: Due to the image size the panoramic photo will appear slightly distorted in the Gallery view. Touch it twice to view it properly.

Using the advanced settings

From the viewfinder touch  to open all the advanced settings options.

Preview settings

Size - Change the size of the photo to save on memory space or take a picture preset to the correct size for contact. See **Changing the image size** on page 55.

Scene mode - Set the camera to adjust to the environment. Choose from **Auto, Portrait, Landscape, Night, Beach** and **Sport**.

Colour Effect - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour effect** on page 55.

Blink detection - This enables the camera to stop taking a photo when it detects the blink of an eye.

White balance - Choose from Auto, Incandescent, Sunny, Fluorescent or Cloudy.

Macro - Switch on to take close up shots.

Self-timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from **Off, 3 seconds, 5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

ISO - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when the flash can't be used. Choose an ISO value

from **Auto, ISO 100, ISO 200, ISO 400, ISO 800** or **ISO1600**.

Quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

Back light compensation - when you take a photo with a bright background, the subject may appear dark. Turn this function ON to compensate for this. The subject of the photo will be brighter.

Inner/Outer Camera - For self portraits, switch to the LG KC910's inner camera. See **Using the inner camera** on page 55 for details.

Other settings

Memory - Choose whether to save your photos to the Handset memory or to the External memory.

01

02

03

04

05

06

07

08

Camera

Geo-Tagging - Choose to switch on the EXIF information for the photo to write GPS information.

Zoom - Choose zoom from 4X, 8X or 16X.

Image stabilization - Enables you to take a photo without camera instability or shake.

Focus - Select the way the camera will focus. Choose from Auto, Manual or Face tracking.

Shutter sound - Select one of the three shutter sounds or no sound.

Grid screen - Choose from Off, Simple cross or Trisection.


Reset settings - Reset all the camera settings.

TIP! When you exit the camera all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example colour tone and ISO. Check them before you shoot your next photo.


TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu.

Changing the image size

The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Size** from the Preview menu.
- 3 Select a pixel value from the six numerical options (**8M: 3264 X 2448, 5M: 2592x1944, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) or choose the preset: **Contacts** - This sets the camera to take a photo the perfect size to be added to a phone contact.

Choosing a colour effect

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options: **Off, Black & White, Negative, Sepia** or **Posterize**.
- 4 When you've made your selection the colour tone menu can be closed by selecting the back icon, ready for you to take your picture.

TIP! You can change a photo taken in colour to black and white or sepia after it's taken, but you cannot change a picture taken in black and white or sepia back to colour.

01

02

03

04

05

06


07


08

Camera


Using the inner camera

Your LG KC910 has a 640x480 inner camera, not just for video calling but for taking pictures too.


- 1 To switch to the inner camera touch  then select **Inner Camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image press the capture button as normal.

TIP! The inner camera has fewer settings as it has no flash or ISO. You can still alter the image size, scene mode, colour effect, image quality, white balance and set the self-timer by touching  in the same way as when using the main camera.

- 3 After you've taken the photo you'll be offered all the same options available for an image taken with the main camera.


- 4 To return to the main camera touch  and then select **Outer Camera** from the Preview menu.

Viewing your saved photos




- 1 You can access your saved photo's from within the camera mode. Simply touch  and your gallery will appear on screen.

Video camera

Shooting a quick video

- 1 Press and hold the camera key on the right side of the phone.
- 2 Alternatively, touch  in the view finder in camera mode to switch to video mode.

TIP! Quickly open the video camera by pressing and holding the camera key.

- 3 The video camera's viewfinder will appear on screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 **Rec** will appear at the top of the viewfinder and a timer at the bottom showing the length of your video.
- 7 To pause the video touch  and resume by selecting .
- 8 Touch  on the screen or press the capture button a second time to stop recording.

01

02

03

04

05

06

07


08

Video camera


After you've shot your video


A still image representing your captured video will appear on screen. The name of the video runs along the bottom of the screen together with six icons down the right side.





 Touch to shoot another video straight away. Your current video will be saved.

 Touch to play the video.


 Touch to send the video as a message, by **Email** or by **Bluetooth**. See page 34 for **Sending a message**, or page 109 for **Sending and receiving your files using Bluetooth**.

 Touch to upload to your youtube account.

 Touch to view a gallery of saved videos and pictures.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

Getting to know the viewfinder

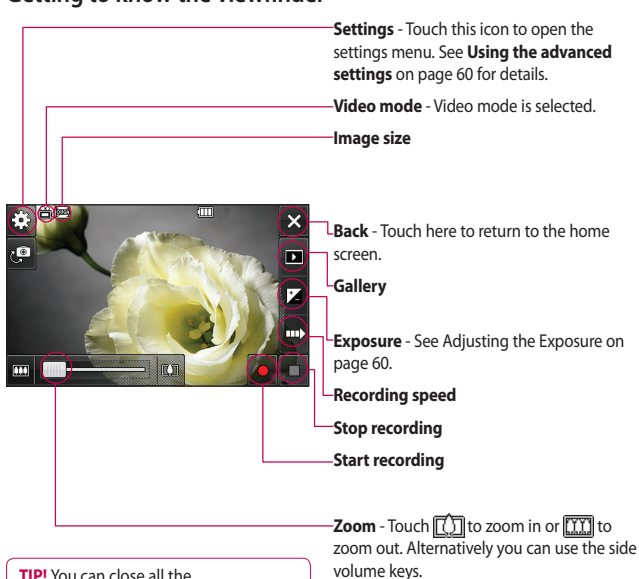

TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

01

02

03

04

05

06




07

08

Video camera

Adjusting the exposure

Exposure defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, towards  for a lower exposure, hazier image, or towards  for a higher contrast, sharper image.

Using the advanced settings

From the viewfinder touch **Settings** to open all the advanced settings options.

Preview settings

Video size - Change the size of the video to save on memory space. See **Changing the video image size** on page 61.

Scene mode - Choose from Auto or Night.

Colour Effect - Choose a colour tone to apply to the video you're taking. See **Choosing a colour tone** on page 62.

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

Quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality the sharper a video will be. The file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose from **Normal**, or **MMS** to limit the size to be able to send the video as an MMS.

TIP! If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.

Inner/Outer camera - Switch to your LG KC910's inner camera to record a video of yourself. See **Using the inner video camera** on page 62 for details.

Other settings

Memory - Choose whether to save your videos to the Handset memory or to the External memory.


Voice - Choose Mute to record a video without sound.


Zoom - Choose zoom from 4X, 8X or 16X.


Reset settings - Reset all the video camera settings.

Changing the video image size

The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select a pixel value from the five options:

 **640x384(W)** - The highest quality widescreen option.

 **400x240(W)** - This is also widescreen, but of a lower resolution.

 **640x480** - Standard sized VGA.

01

02

03

04


05


06

07


08

Video camera

 **320x240** - Smaller image size, therefore smaller file size. Great for saving on memory space.


 **176x144** - Smallest image size and therefore smallest file size.

- 4 Touch the back icon to return to the viewfinder.

 **WARNING:** The great editing software on your LG KC910 is compatible with all video types except 640X384 and 640x480. Don't record in this format if you plan to edit your video.

TIP! For video format conversion software, see the CD you received with your KC910.


Choosing a colour tone

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options, **Off** (colour), **Black & White**, **Negative**, **Sepia**, **Posterize**.
- 4 Touch the colour tone you'd like to use.

TIP! You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia back to colour.

Using the inner video camera


Your LG KC910 has a 320x240 inner camera, not just for video calling but for recording videos too.

- 1 To switch to the inner camera touch  then select **Inner Camera** from the Preview menu.

- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, press a second time to stop recording.
- 3 After you've shot the video you'll be offered all the same options available for a video shot using the main camera.
- 4 To return to the main camera touch  and then **Outer Camera**.

TIP! You can still alter the image size, scene mode, colour effect, white balance and quality by touching **Settings** in the same way as when using the main camera.

Watching your saved videos


- 1 In the viewfinder touch .
- 2 Your gallery will appear on screen.

- 3 Touch the video you want to view once to bring it to the front of the gallery. It will automatically begin to play.

Watching your videos on your TV

Connect your KC910 to your TV using the TV output cable. During video playback, select options, from drop down menu select TV Out. This will allow you to play the video on your TV.

NOTE: The TV output cable is available for purchase separately. If in Option menu TV Out function is not present, please note that the video file you are playing is not compatible with TV Out.

 **WARNING:** All formats except 320x240 and 176x144 are compatible with watching on TV.

01

02

03

04

05


06


07

08


Your photos and videos

Viewing your photos and videos

- 1 Touch  on your camera preview screen.
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo to open it fully.

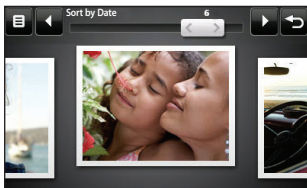

TIP! Flick left or right to view other photos or videos.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.



Using zoom when viewing a video or photo


To zoom in press **+** repeatedly. To zoom out press **-**. Use the thumbnail in the bottom right corner to move the focus area.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video while it is playing, touch the volume bar on the left side of the screen. Alternatively, use the volume keys on the side of the phone.


Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch **||** to pause the video on the frame you'd like to convert to an image. Select  from the right side of the screen.
- 3 The image will appear on screen, with its assigned image name.
- 4 Select **SAVE**.
- 5 Touch the image then  to return to the gallery.
- 6 The image will be saved in My Images and appear in the gallery. You need to exit the gallery and then re-open it for this to appear.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.

- 1 Touch the photo you would like to begin the slideshow to open it.
- 2 Select .
- 3 The slideshow will begin.



01

02

03

04

05

06

07

08

Your photos and videos

There are options within slideshows:



Touch to skip photos.



Touch to pause the slideshow on a particular photo.





Touch again to resume playback.




Touch to increase or decrease the speed of the slideshow.

Setting a photo as wallpaper

- 1 Touch the photo you would like to set as wallpaper twice to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch  .
- 4 The screen will switch to portrait mode. You can zoom in and out on the picture and move the cropped section using a thumbnail at the bottom of the screen.
- 5 When you are happy with the picture touch .

Editing your photos

There are loads of great things you can do to your photos to change them, add to them or liven them up a little.

- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to adapt your photo:




Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.




Draw something on your photo freehand. Select the thickness of the line from the four options and the colour you would like use.





Put writing on the picture. See **Adding text to a photo** on page 67.


 Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be.

 Erase the editing you have added to the picture. You can choose the size of eraser that you use.


 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file** enter a file name.


 Undo the last **Effect** or edit you made to the photo.

 See **Adding an effect to a photo** on page 68.

 Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Morphing a**

photo, Adding a colour accent and Swapping the colours in a photo on page 69.

 It helps to adjust the picture taken using Auto color, brightness etc.

 Touch to return to the gallery.



Adding text to a photo

- 1 From the editing screen, touch **T**.
- 2 Select **Signature** to add unframed text or choose one of the speech bubble shapes.
- 3 Enter your text using the keypad

01

02

03

04

05

06

07


08

Your photos and videos

and touch **Done**.

- 4 Move the text by touching it and sliding it to the place you'd like it to be.

Adding an effect to a photo

- 1 From the editing screen, touch  .

- 2 Choose to apply any of the eighteen options to the photo

Face beautify - Automatically detect a face in the image and brighten it up.

Tunnel effect - Make your picture look like it has been taken using an old Lomo film camera!


Colour negative - Colour negative effect.

Black and white - Black and white colour effect.

Sepia - Sepia effect.

Blur - Apply a blurred effect.

Sharpen - Move the marker along the bar to sharpen the focus of

the photo. Select the **OK** icon to apply the changes or choose  to cancel.

Mosaic blur - Touch to apply a blurred pixelated effect to the photo.

Oil painting - Oil painting effect.

Sketch - Apply an effect to make the picture look like a sketch.

Emboss - Emboss effect.

Solarize - Change the effect of exposure to the light.

Vivid - An effect of clearness and brilliance.


Moonlight - Change the light to look like moonlight.

Antique - An old photo effect.

Glow - A light beam effect.



Cartoon - A cartoon effect.

Water color - Make the picture look like a water colour painting.

- 3 To undo an effect simply touch  .


TIP! You can add more than one effect to a photo.

Crop a photo


- 1 From the editing screen touch .
- 2 Choose the shape you would like to use to crop the picture.
- 3 Drag the box over the area you would like to crop.
- 4 When you are happy with your selection, touch .

Morphing a photo



Morphing a photo is great for changing the facial expressions of friends, or just for distorting a photo for artistic effect.

- 1 From the editing screen touch .
- 2 Choose **Morphing** and four crosses will appear on the photo.
- 3 Move the crosses around the photo so they are on the parts

you'd like to morph. For example, if you are morphing a face, place a cross on the outside corner of each eye and one each side of the lips.

- 4 Select a face to represent how you'd like to morph the photo.
- 5 Select  to save the changes.

Adding a colour accent to a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or jumper.
- 4 Alter the intensity of the accenting by touching  and then sliding the marker up or down the intensity bar.

01

02

03

04


05

06


07

08

Your photos and videos

- 5 Touch **OK**.
- 6 All colour will be removed from the photo, apart from the section marked for colour accenting.
- 7 Select  to save the changes.

Swapping the colours in a photo







- 1 From the editing screen, touch .
- 2 Choose **Colour swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or jumper.
- 4 Touch  and select a colour.
- 5 Press **OK** twice.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select  to save the changes.

Editing your videos

The editing features are available for all video types except 640X384 and 640x480.

Don't record in these formats if you plan to edit your video.

Trimming the length of your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Trim**.
- 3 Touch  and mark the new start and end points using .
- 4 Touch  to ensure you are happy with the new cut.
- 5 Touch  or, alternatively, touch  to return to the gallery and discard the changes.



Merging two videos together

- 1 Open the video you'd like to edit, select and touch the screen to bring up the options.
- 2 Select and choose **Video merge**.
- 3 The My videos folder will open. Choose the video you would like to merge.
- 4 Touch to choose how the videos merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Split** or **Shape diamond**.

- 5 Press followed by **Yes** to save the new merged video. Choose to save over the original file or as a new file.
- 6 Repeat these steps to merge more videos.

Merging a photo with a video

- 1 Open the video you'd like to edit, select and touch the screen to bring up the options.
- 2 Select and choose **Image merge**.
- 3 The My images folder will open. Choose the photo you would like to merge into your video and touch **Select**.

01

02

03

04


05

06



07



08


Your photos and videos




- 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch  to choose how the photo and video merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Split or Shape diamond.**
- 6 Press **Save** followed by **Yes**. Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more photos.

Adding text to a video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Text overlay**.
- 3 Enter your text using the keypad and select **Save**.

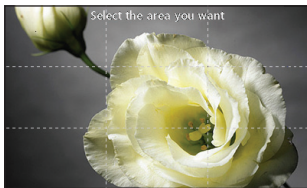
- 4 Touch  and mark when you'd like the text to appear using .
- 5 Touch the area of the screen you'd like the text to appear in.





- 6 Touch  to mark when you'd like the text to disappear.
- 7 Touch  to ensure you are happy with the text overlay.
- 8 Touch  followed by **Yes**. Choose to save over the original file or as a new file.
- 9 Repeat these steps to add more text.

Overlaying a photo

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Image overlay**.
- 3 The My images folder will open. Choose the photo you would like to overlay your video.
- 4 Touch  and mark when you'd like the photo to appear using .
- 5 Touch the area of the screen you'd like the photo to appear in. If the photo is too big it will overlay the whole screen, not just the area selected.
- 6 Touch  to mark when you'd like the photo to disappear.
- 7 Touch  to ensure you are happy with the photo overlay.

- 8 Touch  followed by **Yes**. Choose to save over the original file or as a new file.
- 9 Repeat these steps to add more photos.

Adding a voice recording

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Voice recording**.
- 3 The quality of the original audio will be affected by adding a voice recording. Touch **Yes** to continue.
- 4 Touch  to view your video. When you get to the part you'd like to record your voice over, press .

01

02

03

04

05




06

07



08

Your photos and videos





- 1 Press  to stop recording and playback.
- 2 Touch  to ensure you are happy with the voice recording.
- 3 Touch  followed by **Yes** to save. Choose to save over the original file or as a new file.
- 4 Repeat these steps to add more voice recordings to the video.

Adding a soundtrack to your video



- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Audio dubbing**.

- 3 The My sounds folder will open. Choose the track you would like to add to your video.
- 4 The original audio of your video will be erased. Touch **Yes** to continue.
- 5 If the audio is shorter than the video choose whether to play **Once** or to **Repeat** it.
- 6 Choose to save over the original file or as a new file.

Changing the speed of your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Time scaling**.
- 3 Select one of the four speed options: **x4**, **x2**, **x1/4**, **x1/2**.
- 4 Choose to save over the original file or as a new file.

Adding a dimming effect

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Dimming Effect**.
- 3 Choose to save over the original file or as a new file.
- 4 Your video will now fade in at the start and fade out at the end.

01

02

03

04

05

06

07

08

Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then **Entertainment**. Touch **My stuff** to open a list of folders storing all of your multimedia files.

Pictures

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

My images options menu

The options which are available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as, Print, Sort by** and **Memory Info** options are available for default images.

TIP! When looking at a picture, turn the phone to landscape to bring up further options on the right side of the screen. Choose from send, upload, set as homescreen, edit and delete.

Send - Send the image to a friend.

Edit - Edit the image.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the

phone memory to a memory card or vice versa.

Use as - Choose from Main screen theme, Contacts image, Incoming call, Outgoing call, Switch on or off image.

Rename - Rename an image.


Smart Light - Change the lighting of your picture to improve it automatically.

Print - Print the selected image using a printer supported by Pictbridge or Bluetooth.

Slide show - View your images as a slide show.

File info. - View the file information.



Sending a photo

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select the picture you want to send, and touch **Send**. Choose from **Message**, **Email**, **Bluetooth**, or **Blog this**.

- 4 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:

Wallpaper - Set a wallpaper for the home screen.

Contacts image - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

01

02

03

04

05

06

07

08

Multimedia

Incoming call - Set an image to appear during incoming calls.

Outgoing call - Set an image to appear during outgoing calls.

Start-up - Set an image to appear when you switch the phone on.



Shut down - Set an image to appear when you switch the phone off.

Marking up your images

A low-light photo can be adjusted without lowering the quality of the picture.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch  then touch **Smart Light**.
- 4 The light will automatically be changed, and you will have an option to save the new image.



Printing an image

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

TIP! You can to print via bluetooth or by connecting to a PictBridge printer.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Select **Move** or **Copy**.



Creating a slide show

If you want to look at all of the images on your phone, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images** and choose an image.
- 3 Touch  then **Slide show**.

Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Memory Info**.
- 4 Choose **Handset memory** or **External memory**.

NOTE: If you do not have a memory card inserted, you will not be able to select External memory.

Sounds

The **My sounds** folder contains the **Downloaded sounds**, **Voice recordings** and **Default sounds**.

From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Select a sound and and it will begin to play.
- 5 Touch  and select **Use as**.
- 6 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up** or **Shut down**.

01

02

03

04

05

06

07


08

Multimedia

Videos


The **My videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **My videos**.
- 3 Select a video to play.

TIP! KC910 supports both DivX & Xvid video format playback to ensure greater content availability. Refer to page 99 in detail.

Using options while video is paused

Touch  while in pause mode and choose from:

- Capture** - Capture the frozen frame as a picture.
- Send** - Send the video in a message, email, via Bluetooth or you tube.
- Delete** - Delete the video.


Use as - Enables to set Voice ringtone or Video ringtone. (This can be limited by Video frame size.)

Edit - You can edit the file name.

File info. - View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.

NOTE: The TV output cable is available for purchase separately.


Sending a video clip


- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message, Email, Bluetooth** or **Youtube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Games and Applications

You can download new games and applications to your phone to keep you amused when you have time to spare.


Downloading a game

- 1 Touch  then **Entertainment**.
- 2 Touch **Games and Applications** > **My Games And Applications** > **Games** > **Download Games**.
- 3 Select **Download games**.
- 4 You will connect to the web portal where you can find a games to download.

TIP! To delete any file in My stuff, touch  then **Delete**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Playing a game

- 1 Touch  then **Entertainment**.
- 2 Touch **Games & Applications**, then **M-Toy**.
- 3 Choose and touch a game to launch.

Using the games options menu

From the Games & apps folder, the following options are available:

Create new folder – Create a folder within **Games & apps**.

Sort by - Sort the games and applications by **Date**, **Size** or **Name**.

Memory manager - View the memory status.

File info - View the game information.

01

02

03

04

05

06

07


08

Multimedia

Flash contents

The Flash contents folder contains all of your default and downloaded SWF files.

Viewing an SWF/ SVG file

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Flash contents**.
- 3 Select the file to view.

Using options viewing the SWF/ SVG file

Touch  and choose from:

Mute - Switch the sound off.


Send - Send the file as a **Message**, **Email** or via **Bluetooth**.

File info. - View the Name, Size, Date, Time, Type and Protection of the file.

Documents

From Documents in My stuff, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files.

Viewing a file

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Documents**.
- 3 Select a document and touch **View**.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 107 for details.


To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** or **My Images** folder.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To move a file from Others to Documents:

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Others**.
- 3 Select a file and touch .
- 4 Touch **Move**, then touch **Move** again.

01

02

03

04

05





06


07

08


Multimedia

Creating a movie

- 1 Touch  then **Entertainment**.
- 2 Touch **Muvee Studio**.
- 3 Touch  to add an image. Touch the images you want to include then select **Insert**.
- 4 Touch the style tab across the top to choose a movie style.
- 5 Touch the sound tab at the bottom of the screen to change the sound, such as a voice recording.
- 6 Touch the **Play** button to see what you've created.
- 7 Touch  then **Play Order** to change the order.
- 8 Touch  then **Save Location** to choose where to save the movie, and touch **Duration** to choose between long and short.
- 9 To save your movie, press play and then touch the save icon in the top left corner.

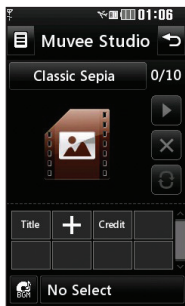

Music

Your LG KC910 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then **Entertainment** and **Music**. From here you can access a number of folders:

Recently played - You can see the list recently played.

All tracks - Contains all of the songs you have on your phone.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains any playlists you have created.

Shuffle tracks - You can listen to the music randomly.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite, see page 107 for details. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

01

02

03

04

05






06


07

08

Multimedia


Playing a song

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **All tracks**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return.

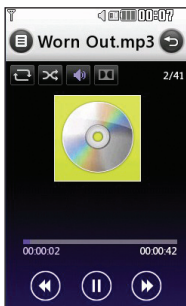

TIP! KC910 is the first worldwide handset to apply Dolby Mobile for music, Providing trademark Dolby sound quality to your mobile phone.

Using options while playing music

Touch  and choose from:

Minimize - Make the music player screen disappear so that you can continue using your phone as normal.

Go to my music - Return to the Music menu.

Visualization - Select a visual effect.
Add to playlist - Add the track to one of your playlists.

Send - Send the song as a message, via Bluetooth or EMAIL.

Delete - Delete the song.

Use as - Use the song as a Voice ringtone, Video ringtone, Message tone, Start-up or Shut down.

File info. - View information including the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

TIP! To change the volume while listening to music, touch




Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.



- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Touch **Add New playlist**, enter the playlist name and touch **Save**.
- 4 The All tracks folder will show. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 5 Touch **Done**.

To play a playlist, select it and touch Play.

NOTE: To add a second playlist, touch  then Add new playlist.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. When you want to do this, you can edit the playlist.

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Select the playlist.
- 4 Touch  and select:

Add new songs - To add more songs to the playlist. Mark the ones you want and touch **Done**.

Change list order - Change the playing order of the playlist.

01

02

03

04

05

06

07

08

Multimedia



Send – Send a song as a message or via Bluetooth.

Remove from list – Remove a song from the playlist. Touch **Yes** to confirm.

Memory info. - View the memory status.

Remove all - Remove all tracks from the playlist.

Deleting a playlist

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Touch  then **Delete** or **Delete all** to delete all of the playlists.

Using the radio



Your LG KC910 has an FM radio, so you can tune into your favourite stations and listen to them on the move.

NOTE: You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).



Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone.



To auto tune:

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then .


- 3 Touch **Auto scan** then **Yes**. The stations found will automatically be allocated to channel numbers in your phone.

NOTE: You can also manually tune into a station by using  and  displayed next to the radio frequency.

Resetting channels

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

01

02

03

04

05

06

07


08

Organiser


Adding an event to your calendar

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.
Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you would like your event to begin.
- 5 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 6 If you would like to add a subject or a note to your event, touch **Note** and type in your note.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square


colour cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

TIP! You can set a holiday in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**. Each day will be shaded red.



Changing your default calendar view

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**. Select **Organiser settings**.
- 2 Touch **Calendar settings** and choose either **Month view** or **Week view**.
- 3 Set **week starts on**.
- 4 Press **Save** to confirm your choice.

Adding an item to your To do list

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.
- 2 Select **To do** and touch **Add to do**.
- 3 Set the date for the task, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your task by selecting **Save**.

Sharing a To do task


- 1 From the home screen select , then **Utilities** and choose **Organiser**. Select **To do**.
- 2 Select the task you would like to share, then touch .
- 3 Select **Send**. You can choose to share your to do item by **Text message, Multimedia msg., Email** or **Bluetooth**.

TIP! You can back up and synchronise your calendar with your computer. See PC Sync on page 96.

Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

This is great for keeping tabs on deadlines.

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.
- 2 Select **Date finder**.
- 3 In the **From** tab set your required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

01

02

03

04

05



06

07

08

Organiser


Setting your alarm

- 1 From the home screen select  then touch **Utilities** and choose **Alarms**.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound and touch **Save**.
- 4 Choose whether you would like your alarm to Not repeated, Daily, Mon-Fri, Mon-Sat, Sat-Sun, Except holiday, Choose weekday options are there in phone under Repeat. The icons indicate the weekday you select.
- 5 Select **Alarm type** to select a type for your alarm.
- 6 To change your alarm sound, touch the Alarm bell box and select a new sound. To preview press .
- 7 Add a memo for the alarm.
- 8 Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.

- 9 Once you have set your alarm, touch **Save**.
- 10 To power off the alarm, you can choose snooze or stop.
NOTE: You can set up to 5 alarms.

TIP! Touch on/off icon on the right hand side of the alarm.



Adding a memo

- 1 From the home screen select  then touch **Utilities** and choose **Memo**.
- 2 Touch **Add memo**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.

TIP! You can edit an existing memo. Select the one you want to edit and type your changes.

Voice recorder

Use your voice recorder to record voice memos or other sounds.





- 1 Touch  then **Utilities**.
- 2 Touch **Voice recorder** then  and choose from:


Duration – Set the recording duration. Choose from **No limit**, **MMS msg. size** or **1 min**.

Quality – Select the sound quality. Choose from Super Fine, Fine or Normal.


Go to my sounds – Open the Voice recordings folder in **My sounds**.


Recording a sound or voice

- 1 Touch  then **Utilities**.
- 2 Touch **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

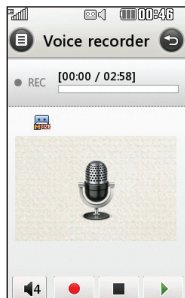

Sending the voice recording

- 1 Once you have finished recording, touch .
- 2 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

NOTE: After you have finished recording, touch  and choose

01

02

03

04

05

06



07

08


Organiser

Send, Files, Delete, Use as (to use the recording as your ringtone), **Duration, Quality, or Go to my sounds.**

Using your calculator

- 1 From the home screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Calculator**.
- 3 Touch the numeric keys to input numbers.
- 4 For simple calculations, touch the function you require (+, -, x, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad** etc..

Converting a unit


- 1 From the home screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Converter**.

- 3 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Adding a city to your world time


- 1 From the home screen select  then touch **Utilities** and choose **Tools**.
- 2 Select **World clock**.
- 3 Touch the  icon, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen.
- 4 Touch the city to select it, and it will be added to your World time list.


Using the stopwatch

- 1 From the home screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

Jogging Buddy

Whether walking, running or jogging, KC910 provides up-to-the-second information including distance and time, and keeps an exercise log for you by using advanced GPS technology.

- 1 From the home screen select , then touch **Utilities** and choose **Tools**.

- 2 Select **Jogging buddy**.
- 3 Touch << >> to set Distance or Time for your jog.
- 4 You can switch Regular beep on or off.
- 5 Once GPS is connected, the start button will light up. Touch  to start.

 - Reset button

Regular beep - The phone beeps at distance or time intervals to help you keep track without having to keep looking at the screen.

 - Start button

 - Pause button

 - Stop button

01

02

03

04

05

06

07


08

PC Sync

Always ask mode

If you set the “Always ask mode” as default, the phone will always prompt you to select a type of USB connection mode each time you connect the phone to a PC via the data cable. If you disable the “Always ask mode”, the connection mode will be the one you have manually set in Menu - Settings - Connectivity - USB Mode and one of the options Internet, Mass Storage or PC Suite. You can synchronise your PC with your phone to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the home screen select  then select **Settings** and choose **Connectivity**.
- 2 Select **USB connection** mode and select **PC suite**.
- 3 Insert the supplied CD into your PC. Click on the LG PC Suite Installer which will appear on your screen.
- 4 Select the language you would like the installer to run in and click **OK**.
- 5 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 6 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.
- 4 Click on **Next**, then **Next** again, then **Finish**. Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose to back up **Contents Data** and/or **Phonebook/Schedule/ToDo/Memo Data**. Select the location you would like to backup information to, or restore information from. Click **OK**.

- 4 Your information will be backed up.

Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contact** icon.
- 3 Your PC will now import and display all contacts saved to your USIM card and handset.

01

02

03

04

05

06

07

08

PC Sync

- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

NOTE: To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Right click on one of your contacts and choose **Select all**, then **Copy** or **Move to phone memory**.

Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your USIM and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the home screen select  , then touch **Settings** .
- 3 Select **Connectivity**, then **USB connection** mode.
- 4 Touch **Mass storage**.
- 5 Connect your phone to your PC. Your phone will read: **Connected**. Do not disconnect during transfer.
- 6 A removable disk folder will open automatically on your computer, two if you have a memory card inserted, showing all the folders on your phone or memory card.

NOTE: Your phone must be unplugged from your PC to initiate Mass Storage.

NOTE: Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the content of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

DivX Converter

Install the DivX converter which is supplied on the same CD as the PC Sync software. DivX will convert media files on your PC to a format that enables you to upload and view them on your phone.

Once installed select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select

Preferences, you can change the location of where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is finished a Conversion complete pop up will be displayed.

The converted file can now be transferred to your phone, using the Mass Storage functionality (see page 98 for details) or Upload contents using the PC Sync software (see page 97 for details).

01

02

03

04

05

06

07


08

The web

Browser

Browser gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 From the home screen select  then touch **Utilities** and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks


For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the home screen select , then touch **Utilities** and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark and then touch connect. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites in an automated manner that is easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Saving a page

- 1 Access a webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

01

02

03

04

05


06

07


08

The web

Accessing a saved page

- 1 From the home screen select  then touch **Utilities** and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select the page you would like to view and it will open.

Viewing your browser history

- 1 From the home screen select  then touch **Utilities** and choose **Browser**. Select **History**.
- 2 The web page you have accessed recently will be displayed. To access one of these pages, simply select the item required.

Changing the web browser settings

- 1 From the home screen select  then touch **Utilities** and choose **Browser**. Select **Browser Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **security**, or **Reset Settings**.
- 3 You can simply set these to on or off by touching the switch icon except **Profiles**.

Using your phone as a modem

Your KC910 can double as a modem for your PC, giving you email and internet access. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KC910 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Internet Kit** on your PC.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KC910.

NOTE: For more information on synchronising using the LG PC Suite see page 96 or refer to Help Menu in PC Sync software if you need further information.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KC910.
- 2 Pair your PC and KC910 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KC910.

NOTE: For more information on Bluetooth see page 110.

01

02

03

04

05

06

07


08

Settings

Within this folder you can adapt your settings to make your KC910 personal to you.

NOTE: For information on call settings see page 27.

Changing your screen settings

- 1 Touch  then choose **Settings**.
- 2 Touch **Screen settings** and then choose from:

Wallpaper - Choose the theme for your home screen.

Dialling - Adjust the number size and colour.

Font - Adjust the font size.

Backlight - Choose how long the backlight remains on for.

NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Brightness - Adjust the screen brightness.

Theme - Quickly change the whole look of your screen.

Greeting message - Choose on or off and fill in the greeting message.

Choose an image for **Incoming calls**, **Outgoing calls**, **Start-up** and **Shut-down**.


Reset main menu - To reset the main menu, touch **Yes**.

- 3 Touch **Save** to save your settings.

Personalising your profiles

You can quickly change your profile on the home screen. Simply touch the status summary icon on the top and touch the profile tab.

Using the settings menu you can personalise each profile setting.


- 1 Press  and then choose **Settings**.
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options available

in the list, including your **Voice/ Video ringtone** and **Volume, Message alerts** and more.

Changing your phone settings

Enjoy the freedom of adapting how your KC910 works to your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then choose **Settings**.
- 2 Touch **Phone settings** then choose from the list below.

Date & Time - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.

Power save - Choose to switch the factory set power saving settings **On, Off** and **Auto**.

Languages - Change the language of your KC910's display.

Auto key lock - Lock the keypad automatically in home screen.

Security - Adjust your security settings, including PIN codes and handset lock. (The default security code is 0000)

Memory manager - See **Using memory manager** on page 108 for more information.

Reset settings - Reset all the settings to their factory definitions.

Information - View the technical information for your KC910.

01

02

03

04

05


06

07

08


Settings

Changing your touch settings

Touch  then **Settings**. Choose **Touch settings**. To reset the touchpad and make it easier to use, select **Touchpad calibration** and touch the crosses. Save the settings when you are happy with them. Select **Touchscreen effect** to reset touch **Type**, **Tone** and **Vibration**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the start. If you want to change any settings, use this menu.

Touch  then **Settings**. Touch **Connectivity**.

Network settings - Your KC910 connects automatically to your preferred network. To change these settings use this option.

Internet profiles - Set the profiles for connecting to the internet.

Access point - Your network operator has already saved this information. You can add new access points using this menu.

Packet Data Connection - You can set when needed or available.

GPS type - Choose either **Assisted GPS** or **Stand alone**.

GPS

- GPS technology uses information from earth-orbiting satellites to find locations.
- A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach it, then uses that information to identify its location.
- It may take from a couple of seconds to several minutes.
- Assisted GPS(A-GPS) on this mobile is used to retrieve location assistance data over packet data connection.
- The assistance data is retrieved from the Service server only when you needed.
- Take pictures of where you are and have the pictures tagged with information about your location.

Note : Use of GPS Receiver requires an application that may not be included in software provided by your service provider.

Note : GPS service has an error tolerance and it is unable to work in buildings or underground.

USB connection mode -

Synchronise your KC910 using the LG PC Suite software to copy files from your phone. See page 96 for more information on synchronisation.

If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is available for only music contents. If you want to synchronize with external memory, you can use 'Mass storage.'

TV out - Choose **PAL** or **NTSC** for connecting your KC910 to a TV.

NOTE: The TV output cable is available for purchase separately.

Server Sync - The Server sync function synchronises the data in a phone and the data on a server such as contact address information, schedule items, to do items and memo items via a wireless network.

01

02

03

04

05

06

07

08

Settings

Streaming settings - Your network operator has already saved this information. You may edit it if you'd like to make changes.


Java settings - Allows you to set Profiles.

Divx VOD registration: Generate a DivX VOD registration code.

Please visit <http://vod.divx.com/> for registration and technical support.

Using memory manager

Your KC910 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately). You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by **Settings**. Select **Phone settings** then **Memory Manager**.

Handset common memory - View the memory available on your KC910 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.


USIM memory - View the memory available on your USIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage settings - Choose the location you prefer items to be saved to.

TIP! See page 14 for information on **Installing a memory card**.

Using flight mode


Turn on flight mode by selecting  then **Settings**. Touch **Profiles** and choose **Flight mode**.

Flight mode will not allow you to make calls, connect to the Internet, send messages or use Bluetooth.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch  and choose **Send**. Choose **Bluetooth**.
- 3 Touch **Yes** to turn Bluetooth on.
- 4 If you have already paired the Bluetooth device, your KC910

will not automatically search for other Bluetooth devices. If not, your KC910 will search for other Bluetooth enabled devices within range.

- 5 Choose the device you want to send the file to.
- 6 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.

01

02

03

04

05

06



07

08

Settings

- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your My stuff.

Changing your bluebooth settings:

- 1 Touch  and choose **Settings**.
- 2 Choose **Bluetooth** then touch  and choose **Settings**.
Make your changes to:
 - My device visibility** - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.
 - My device name** - Enter a name for your KC910.
 - Supported services** - Choose how to use Bluetooth in association with different services. See **Using your phone as a modem** on page 103 or **Using a Bluetooth headset** on page 111.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your KC910 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your KC910 will search for devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.

- 6 You passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Ask always** or **Allow without ask** and touch **Yes** to Connect now. Your KC910 will automatically switch to Headset profile.

TIP! See page 27 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

01

02

03

04

05

06

07

08

Wifi

Wi-Fi allows the phone to connect to local wireless networks, or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology.

NOTE: KC910 supports WEP, WPA-PSK/2 encryption not EAP, WPS encryption. If your Wi-Fi service provider or network administrator sets the encryption for network security, you should fill in the key in the pop-up window. If the encryption is not set, this pop-up window is not shown. If you don't know the key, you need to ask for it from your Wi-Fi service provider or network administrator.

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to upgrade

your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are available to use with your KC910.

Charger



Battery



Stylus and carry strap



Stereo headset



Data cable and CD

Connect and synchronise your KC910 and PC.



User Guide

Learn more about your KC910.



01

02

03

04

05

06

07

08

NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with your retailer or contact LG on 1800 638 080.

Network service

The wireless phone described in this guide is approved for use on the GSM and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

“LG Service Center”

by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd., Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Fri and Sat 2nd, 4th 08:00 - 17:40

Call center : 0-2878-5757

Technical data

General

Product name : KC910

System : GSM / W-CDMA

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM/ W-CDMA Terminal Equipment

Model Name

KC910

Trade Name

LG

CE 0168



Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director 29.Aug. 2008

Signature of representative

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, e-mail : seokim @ lge.com

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model KC910 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used

frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.590 W/kg (10g) and when worn on the body is 0.492 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

Guidelines for safe and efficient use

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronic devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.

- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Guidelines for safe and efficient use

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

Message	Possible causes	Possible Corrective measures
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly Battery empty Battery contacts dirty	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean contacts.

Message	Possible causes	Possible Corrective measures
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No mains voltage	Plug in to a different socket or check voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :



<http://th.lge.com>

ศูนย์บริการลูกค้า

Customer Information Center 0-2878-5757 or

1-800- LG LG LG 5 4 5 4 5 4 โทรสาร

บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด

75/81 อาคารซิเมนต์ ชั้น 22 สุขุมวิท 26 คลองตัน
คลองเตย กรุงเทพฯ 10110

ศูนย์บริการลูกค้า โทร 0-2878-5757 แฟกซ์ 0-2466-0250

LG Electronic (Thailand) CO., Ltd

75/81 Richmond Bldg. 22nd FL, Sukumvit 26,

Klongton, Klongtoey Bangkok 10110

Customer Information Center

Tel 0-2878-5757 Fax. 0-2466-0250



ใบอนุญาตเลขที่ ปณ.(ต)/2117 ปณจ.ไพระไซนง
ถ้าฝากส่งในประเทศไม่ต้องผูกตราไปรษณียากร



บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

75/81 อาคารริมนอนด์ ชั้น 22 สุขุมวิท 26

แขวงคลองตัน เขตคลองเตย

กรุงเทพฯ 10110

เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น

(This warranty is valid only in Thailand)

- 1) บัควARRANTY 1 ปี นับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใส่ชื่อคุณสมบูรณ์เท่านั้น
- 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบหรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่องคิดวิธี บริษัทฯ อันดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย
- 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.
- 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts.

เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับบริการแต่งตั้ง
- 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย
- 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้, ฟ้าผ่า, ใช้น้ำกระแฉ่ำฟ้าผิดประเภทและอุบัติเหตุอื่นๆที่มนุษย์ไม่สามารถควบคุมได้
- 1) If repair are not undertaken by LG Service Center or Authorize Service Center.
- 2) Damage to accessory due to misuse.
- 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control.

ศูนย์บริการสากล (สำนักงานใหญ่): เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงมุดคโล เขตธนบุรี กรุงเทพฯ 10600 โทร 0-2878-5757 แฟกซ์ 0-2466-0250
ศูนย์บริการศูนย์ฯ : เลขที่ 75/2 อาคารริชมอนด์ สุขุมวิท 26 แขวงคลองตัน เขตคลองเตย กรุงเทพฯ 10110 โทร 0-2204-8889 แฟกซ์ 0-2260-8729
ศูนย์บริการเชียงใหม่: เลขที่ 250/5-6 ถ.เชียงใหม่-ลำปาง ต.ป่าตัน อ.เมือง จ.เชียงใหม่ 50300 โทร 0-5321-5823 แฟกซ์ 0-5341-2231
ศูนย์บริการพิษณุโลก: เลขที่ 210/9-11 ถ.มิตรภาพ ต.โพธิ์ทอง อ.เมือง จ.พิษณุโลก 65000 โทร 0-5528-0508 แฟกซ์ 0-5528-0509
ศูนย์บริการพินาศ: เลขที่ 42/95-96 ม.9 ต.สุมนวิท ต.หนองปรือ อ.บางละมุง จ.ชลบุรี 20150 โทร 0-3848-8557 แฟกซ์ 0-3848-8578
ศูนย์บริการนครราชสีมา: เลขที่ 551/29-31 ถ.มิตรภาพ ต.โพธิ์ทอง อ.เมือง จ.นครราชสีมา 30000 โทร 0-4424-7304 แฟกซ์ 0-4424-7305
ศูนย์บริการหาดใหญ่: เลขที่ 291,291/1 ถ.นิพัทธ์ สงครามท่า 1 ต.หาดใหญ่ อ.สงขลา 90110 โทร 0-7423-1391 แฟกซ์ 0-7422-5476
ศูนย์บริการภูเก็ต: เลขที่ 74/252 ถ.พหลโยธิน ต.ตลาดเหนือ อ.เมือง จ.ภูเก็ต 83000 โทร 0-7624-8535 แฟกซ์ 0-7624-8536
ศูนย์บริการอุตรดิตถ์: เลขที่ 119/1-2 ม.14 ต.บดโดย ต.หนองแขง อ.เมือง จ.อุตรดิตถ์ 41000 โทร 0-4220-4757 แฟกซ์ 0-4232-2877



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน
นับจากวันที่ซื้อ
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)

ที่อยู่ร้าน :
(Dealer's Address)

ประทับตราร้านค้า

