



عربي  
ENGLISH

GD330  
دليل المستخدم

عربي  
ENGLISH



CE 0168

[www.lgmobile.com](http://www.lgmobile.com)

دليل المستخدم **GD330**

MMBB0334315 (1.1)

LG Electronics Inc.

**GD330 USER GUIDE**

MMBB0334315 (1.1)

CE 0168

[www.lgmobile.com](http://www.lgmobile.com)

Bluetooth QD ID B014734



Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

## GD330 User Guide

# Contents

<b>Guidelines for safe and efficient use ..</b>	<b>6</b>
<b>Getting to know your phone.....</b>	<b>11</b>
<b>Installing the SIM and battery.....</b>	<b>13</b>
<b>Memory card.....</b>	<b>15</b>
<b>Menu map .....</b>	<b>16</b>
<b>Your standby screen.....</b>	<b>18</b>
Touch pad .....	18
The status bar .....	19
<b>Calls.....</b>	<b>20</b>
Making a voice call .....	20
Making a voice call from Contacts ..	20
Making international calls.....	20
Answering and rejecting a call.....	20
Speed dialling.....	21
Making a second call .....	21
Viewing your call logs.....	22
Using call divert .....	22
Using call barring.....	23
Using fixed dial number.....	23
Using call waiting.....	23
Changing the common call settings.	24
<b>Contacts .....</b>	<b>25</b>
Searching for a contact.....	25
Adding a new contact .....	25
Contact options .....	26
Creating a group.....	27
Using service dial numbers .....	27
Viewing your own number.....	27
Creating a business card.....	27
Changing your contact settings .....	28
<b>Messaging.....</b>	<b>29</b>
Messaging .....	29
Sending a message .....	29
Entering text.....	30
T9 predictive mode.....	30
ABC manual mode.....	31
123 mode .....	31
Setting up your email .....	31
Retrieving your email .....	34
Sending an email using your new account.....	34
Message folders .....	34
Managing your messages .....	35

Using templates.....	35	<b>Video camera .....</b>	<b>43</b>
Using emoticons.....	36	Shooting a quick video.....	43
Changing your text message settings .....	36	After you've shot your video .....	43
Changing your multimedia message settings.....	37	Using the quick settings.....	43
Changing your email settings .....	37	Using the advanced settings.....	44
Changing your other settings.....	38	Watching your saved videos.....	44
<b>Camera.....</b>	<b>40</b>	<b>Multimedia .....</b>	<b>45</b>
Taking a quick photo.....	40	Music.....	45
After you've taken your photo.....	40	Playing a song.....	45
Using the quick settings.....	40	Using options while playing music ..	45
Using the advanced settings.....	41	Creating a playlist .....	46
Adjusting the brightness.....	41	Editing a playlist.....	46
Choosing a shot mode.....	41	Deleting a playlist .....	47
Changing the image size.....	42	Listening to the radio .....	47
Viewing your saved photos.....	42	Searching for stations.....	47
Setting a photo as a wallpaper or contact image.....	42	Editing the channels.....	48
		Resetting channels .....	48
		Using the voice recorder .....	49
		Sending the voice recording.....	49

# Contents

<b>My stuff</b> .....	<b>50</b>	Flash contents .....	57
Images .....	50	Others .....	57
My images option menus .....	50	My memory card .....	57
Sending a photo .....	51	Internal memory explorer .....	57
Using an image .....	51	<b>Organiser</b> .....	<b>58</b>
Organising your images .....	51	Adding an event to your calendar ....	58
Deleting an image .....	52	Changing your default calendar view	58
Moving or copying an image .....	52	Adding an item to your to do list .....	58
Marking and unmarking images .....	52	Sharing a to do item .....	59
Checking your memory status .....	53	Adding a memo .....	59
Sounds .....	53	Adding a secret memo .....	59
Using a sound .....	53	Using the date finder .....	59
Videos .....	53	Settings .....	60
Watching a video .....	53	<b>Tools</b> .....	<b>61</b>
Using options while watching a video	54	Adding your quick menu .....	61
Sending a video clip .....	54	Setting your alarm .....	61
Using the video options menu .....	54	Using your calculator .....	61
My games & apps .....	55	Using the stopwatch .....	62
Playing a game .....	55	Converting a unit .....	62
Viewing applications .....	56	Adding a city to your world time .....	62
Changing the network profile .....	56		
Installing a Java game & application	56		

<b>Browser</b> .....	<b>63</b>	<b>Settings</b> .....	<b>69</b>
Accessing the web.....	63	Changing your profiles .....	69
Google .....	63	Using flight mode.....	69
Adding and accessing your bookmarks .....	63	Changing your phone settings .....	69
Saving a page.....	64	Changing your screen settings .....	70
Accessing a saved page.....	64	Using Date & Time .....	70
Viewing your browser history.....	64	Changing security settings .....	70
Using RSS reader.....	65	Using memory manager.....	71
Changing the web browser settings.	65	Changing your other settings.....	72
<b>Connectivity</b> .....	<b>66</b>	<b>Accessories</b> .....	<b>73</b>
Sending and receiving your files using Bluetooth.....	66	<b>Network service</b> .....	<b>74</b>
Pairing with another Bluetooth device .....	67	<b>Technical data</b> .....	<b>74</b>
Using a Bluetooth headset.....	67	<b>TROUBLESHOOTING</b> .....	<b>76</b>
Using your phone as a mass storage device .....	68		

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information  
This mobile phone model GD330 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/Kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.467 W/Kg (10g) and when worn on the body is 0.842 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over 1g of tissue.

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

## Guidelines for safe and efficient use

- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

### Efficient phone operation

#### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

### **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

### **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### **Potentially explosive atmospheres**

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### **In aircraft**

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

### **Children**

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### **Emergency calls**

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Guidelines for safe and efficient use

### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

## Getting to know your phone

### Main LCD

- **Top:** Signal strength, battery level and various functions.
- **Bottom:** Soft key indications.

### Left soft key/ Right soft key

Performs the function indicated at the bottom of the display.

### Multitasking key

Opens the multitasking menu.

### Send key

Dials a phone number and answers incoming calls.

### End/Power key

Ends or rejects a call. Turns the phone on/off. Press once to return to the standby screen.



### ALC (Auto Luminance Control) Sensor

Automatically adjusts screen brightness according to ambient brightness.

### Navigation Keys


- **In standby mode:**
  - Quick menu
  - Contacts list
  - Messaging
  - Profile

- **In menu:** Navigates between menus.

### Clear key

- When you write characters: Clears a character each time it is pressed.
- When the screen is idle: Plays music you have listened to recently. If the file does not exist in your phone, the notice message displays on your screen.

## Getting to know your phone

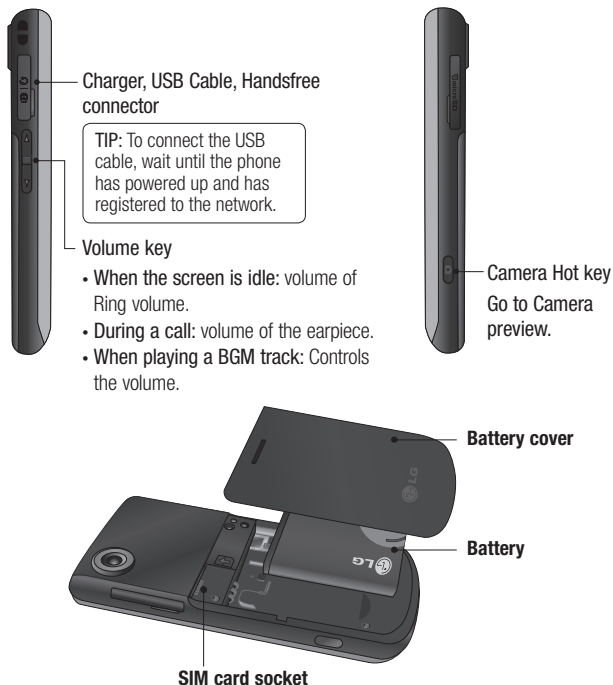

## Installing the SIM and battery

### 1 Remove the battery cover

Press the battery cover release latch. Slide the battery cover towards the bottom of the phone and away from it.



### 2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.




**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

### 3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold colour contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

**⚠ WARNING:** Do not replace or remove the SIM card while your phone is being used or turned on, or data may be lost or the SIM card might be damaged.

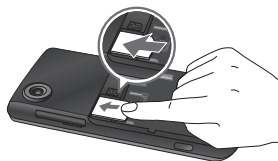

## Installing the SIM and battery

### 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



### 5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

### 6 Charging your phone

Pull open the cover of the charger socket on the side of your GD330. Insert the charger and plug into a main electricity socket. Your GD330 will need to be charged until a message reading "Battery full" appears on screen.



## Memory card

### Installing a memory card

You can expand the memory available on your phone using a memory card.

**TIP:** A memory card is an optional accessory.

- 1 Lift the memory card cover and insert a micro SD card with the gold colour contact area facing downwards. Close the memory card cover so that it clicks shut.



### Formatting the memory card

If your memory card is already formatted, you can begin using it straight away. If your card isn't formatted, you will need to do so.

- 1 From the standby screen press **OK** then select **Settings**.
- 2 Select **Memory manager** then choose **External memory**.
- 3 Select **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

**NOTE:** The default security code is set to '0000'.

**TIP!** To change your default storage destination, open **Memory manager** from the Settings menu and select **Primary storage setting**.

**NOTE:** If your memory card has existing content it will automatically be filed in the correct folder, for example, videos will be stored in the **My videos** folder.

## Menu map



### Games & Apps

1. My games & apps
2. Racing Time2
3. Settings



### Calling

1. Call logs
2. Call durations
3. Data volume
4. Call costs
5. Call divert
6. Call barring
7. Fixed dial numbers
8. Call waiting
9. Common setting



### Organiser

1. Calendar
2. To do
3. Memo
4. Secret memo
5. Date finder
6. Settings



### Multimedia

1. Camera
2. Video camera
3. Music
4. FM radio
5. Voice recorder



### Messaging

1. Create new message
2. Inbox
3. Mailbox
4. Drafts
5. Outbox
6. Sent items
7. My folders
8. Templates
9. Emoticons
0. Settings



### My stuff

1. My images
2. My sounds
3. My videos
4. My games & apps
5. Flash contents
6. Others
7. My memory card
8. Internal memory explore



## Google



## Contacts

1. Add new
2. Search
3. Speed dials
4. Groups
5. Service dial numbers
6. Own number
7. My business card
8. Settings



## Tools

1. Quick menu
  2. Alarms
  3. Calculator
  4. Stopwatch
  5. Converter
  6. World time
  7. SIM service\*
- \*This feature depends on SIM and the network services.



## Browser

1. Home
2. Enter address
3. Bookmarks
4. RSS reader
5. Saved pages
6. History
7. Settings



## Connectivity

1. Bluetooth
2. USB connection mode



## Settings

1. Profiles
2. Phone
3. Screen
4. Date & Time
5. Network
6. Internet profile
7. Access points
8. Packet data conn.
9. Security
0. Memory manager
- \*. Reset settings

## Your standby screen

From here you can access menu options, make a quick call and change your profile - as well as many other things.

### Touch pad

The touch pad below the screen can be used as left/right soft key to navigate you through your phone menus.


















- There's no need to press too hard as the touch pad is sensitive enough to pick up on a light touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.



## The status bar





The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Battery empty
	New text message
	New email
	An alarm is set
	Normal profile in use
	Silent profile in use
	External memory
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Bluetooth is active
	Calls are rejected
	BGM Music playing




## Calls

### Making a voice call



- 1 Enter the number including the full area code.  
To delete a digit press .  
To delete all digits press and hold .
- 2 Press  to make the call.
- 3 Press  or close the handset to finish the call.

### Making a voice call from Contacts

It's easy to call anyone whose number you have stored in your Contacts.

- 1 Press  to access the contacts list from the standby screen.
- 2 Select the contact to make a call.
- 3 Press  to make a voice call.
- 4 Press  to finish the call.

### Making international calls

- 1 Press and hold  for the international prefix. The '+' character prefixes the international access code.
- 2 Enter the country code, area code, and the phone number.
- 3 Press .

### Answering and rejecting a call


When your phone rings press the  to answer the call.

Touch **Silent** to mute the ringing. This is great if you've forgotten to change your profile to **Silent** for a meeting!



Press  to reject the incoming call.

## Speed dialling



You can assign a frequently-called contact to a speed dial number.

- 1 From the standby screen, press  and select **Contacts**.
- 2 Select **Speed dials**.
- 3 Your Voicemail is set to speed dial  
1. Select any other number to assign it to a speed dial contact.
- 4 Your address book will open. Select the contact you'd like to assign to that number.

To call a speed dial number:

- Press the assigned number then press  or .
- Press and hold the assigned number until the contact appears on screen.

## Making a second call

- 1 During your initial call, press , then **Options**, and select **Add new call**.
- 2 Dial the number or search your contacts.
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 Select **Swap** to change between the calls.
- 6 To end one or both calls select **Options** then **End** followed by **All** or **Active**.

**NOTE:** You will be charged for each call you make.

## Calls

### Viewing your call logs

From the standby screen, press **OK** and select **Calling** then **Call logs**. Choose to view:

**All calls** - View a complete list of all of your dialled, received and missed calls.

**Dialled calls** - View a list of all the numbers you have called.

**Received calls** - View a list of all the numbers that you have received.

**Missed calls** - View a list of all the calls you have missed.

**TIP!** From any calls list, touch the left soft key and select **Delete all** to delete all the recorded items.

From the standby screen, press **OK** and select **Calling**.

You can also choose to view:

**Call durations** - View the duration of all your dialled and received calls.

**Data volume** - View the amount in kilobytes of all your received and sent data.

**Call costs** - View the charges applied to your dialled numbers (this service is network-dependant. Some operators are unable to support it).

### Using call divert

- 1 From the standby screen, press **OK** and then select **Calling**.
- 2 Select **Call divert**.
- 3 Choose when to divert all calls; when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Select **Divert**.

**NOTE:** Charges may be incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose **Deactivate all**.

### Using call barring

- 1 From the standby screen, press **OK** and select **Calling**.
- 2 Select **Call barring**.
- 3 Choose any or all of the options:
  - All outgoing
  - Outgoing international
  - Outgoing international calls except home country
  - All incoming
  - Incoming when abroad
  - Deactivate all
- 4 Enter the call barring password. Please check with your network operator for this service.

### Using fixed dial number

- 1 From the standby screen, press **OK** and select **Calling**.
- 2 Select **Fixed dial numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

### Using call waiting

- 1 From the standby screen, press **OK** and select **Calling**.
- 2 Select **Call waiting** to activate call waiting service.  
If call waiting is activated, the handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

## Calls

You can put the first call on hold and answer the second call. (This feature is only available if your network supports it.)

### Changing the common call settings

- 1 From the standby screen, press **OK** and then select **Calling**.
- 2 Select **Common setting**. From here you can amend the settings for:

**Call reject** - Select **On** or **Off** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.

**Send my number** - Choose whether your number will be displayed when you call someone. (This feature is only available if your network supports it.)

**Auto redial** - Choose **On** or **Off**.

**Answer mode** - Choose whether to answer the phone by pressing the **send** key, by pressing any key, or by opening the flip.

**Minute minder** - Select **On** to hear a tone every minute during a call.

**BT answer mode** - Choose how to answer a call when using a Bluetooth headset. Select **Hands-free** or **handset**.

**Save new number** - Saves numbers you use that aren't already stored in **Contacts**.


**Slide close setting** - Set whether or not a call is ended upon closing the slide.

# Contacts

## Searching for a contact

There are two ways to search for a contact:

### From the standby screen


- 1 From the standby screen, press  to open the address book.
- 2 Press the number key corresponding to the first letter of the contact you'd like to view. So, for 'Home' press 4 (GHI) twice.

Or, using the slightly quicker method...


- 1 Enter the number you wish to search on the standby screen and select **Options**.
- 2 Choose **Search contacts** in option menu.

**TIP!** You can search by group by Touching **Options** and selecting **Search by**, and then selecting **Group**. This will bring up a list of all your groups.

## From the main menu

- 1 From the standby screen, press  and select **Contacts**.
- 2 Select **Search** and enter the first few letters of the contact you'd like to find using the keypad.
- 3 Your address book will bring up a list of the contacts corresponding to the letters you've entered.

## Adding a new contact

- 1 From the standby screen, press  and select **Contacts**.
- 2 Select **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **SIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Enter all the information you have in the fields provided and select **Done**.

## Contacts

Or, using the slightly quicker method...

- 1 Enter the number you wish to store on the standby screen and select **Options**.
- 2 Select **Save number** and choose **New contact** or **Update contact**.
- 3 Enter the relevant information as above and select **Done**.

### Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use.
- 2 Touch the left soft key to open the list of options.  
From here you can:
  - Send message** - Send a message or an email to the contact.

**Send business card** - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia msg**, **Email** or via **Bluetooth**.

**Make call** - Call the contact.

**Add new contact** - You can add a new contact.

**Edit** - You can edit the contact.

**Add to group** - Add a contact to a group.

**Mark/Unmark** - Mark/unmark your contacts for multiple selection.

**Search by** - You can search the entry by number or group.


**Save to SIM/ Handset** - Choose to move or copy to the SIM card or handset (depending on where you originally saved the contact).

**Delete** - Delete the contact.

**Text input** - You can set the text input method.

**Speed dials** - You can assign this contact to a speed dial number


## Creating a group

- 1 From the standby screen, press  and select **Contacts**.
- 2 Select **Groups** and choose **Options**.
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Done**.

**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

**TIP!** You can edit an existing group by highlighting it and selecting **Options**. Choose to **Add a member** to the group from your contacts, assign a **Group ringtone**, **Rename** the group or **Delete** the group.

## Using service dial numbers

You can view the list of Service Dial Numbers (SDN) assigned by your service provider (if supported by the SIM card). Such numbers include emergency, directory enquiries and voicemail numbers. After selecting a service number, press  to dial that service.

## Viewing your own number

Select **Own number** in the Contacts menu to view your number.

## Creating a business card

You can create your own business card by selecting **My business card**, then **Add**. Enter your name, number, email address and image.

## Contacts

### Changing your contact settings

You can adapt your contact settings so that your address book works according to your preferences.

- 1 From the standby screen, press **OK** and select **Contacts**.
- 2 Select **Settings**. From here you can adjust the following settings:

**Contact list settings** - Choose whether to view contacts saved to both your **Handset and SIM**, **Handset only** or **SIM only**. You can also select to show the first name or last name of a contact first, and to show a contact picture.

**Copy** - Copy your contacts from your SIM to your handset or from your handset to your SIM. Choose to do this one by one, or all together.

**Move** - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to. If you move a contact from the SIM to the handset it will be deleted from the SIM memory.

**Send all contacts via Bluetooth** - Send all contacts information to another handset by Bluetooth.

**Back up contacts** - You can save all the phonebook data in the handset to an external memory card by the form of vcard.

**Restore contacts** - You can restore all the phonebook data in an external memory card to the phone memory by the form of vcard.

**Clear contacts** - Delete all your contacts.

**Memory info.** - You can check how much memory you've got left on your handset or your SIM.

# Messaging

## Messaging

Your GD330 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), and Email, as well as the network's service messages.

## Sending a message


- 1 From the standby screen, press **OK**, select **Messaging** and choose **Create new message**.
- 2 Choose **Message** to send SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between SMS mode and MMS mode. The default setting of the message editor is SMS mode.

- 4 Enter your message using either the T9 predictive mode or Abc manual mode.

**TIP!** You can select your message type as SMS or MMS when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, see **Send long text** as menu from **Changing your text message settings**.

- 5 Touch **Options** and choose **Insert** to add an **Image, Video, Sound, Symbols, Template, Emoticon, Name & Number, New slide, Subject** or **More** (Business card/Schedule/Memo/To do/My business card).
- 6 Press **Send**.
- 7 Search your contact list or press the number key to enter the phone number.
- 8 Press **Send**.

## Messaging


 **WARNING:** If an Image, Sound, Video, New slide, Subject, Business card, Schedule Memo, To do or My business card is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

### Entering text


You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text.

The following text input methods are available in the phone: T9 predictive mode, ABC/Abc/abc manual mode and 123 mode.

**Note:** Some fields may allow only one text input mode (e.g. telephone number in address book fields).

To turn on T9 mode in the text entry field, choose **Options**, select **Input method** and choose **T9 mode**. With T9 on, you can switch text input mode by pressing . You will notice the text input mode indicator in the upper right corner of the display.


To input a symbol in the text entry field, press the  key and select a symbol, then select .

Complete each word with a space by pressing .

To delete a character, press .

### T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

**NOTE:** The  key is used to change predictive words of dictionary in T9 mode.

If the word you want doesn't appear, press **Options** and select **Add to dictionary**, then you can enter the word using ABC manual mode. Your word will be added to the dictionary.

**Note:** You can select a different T9 language by pressing **Options** and select **Writing language**.

### ABC manual mode


This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

### 123 mode

Type numbers using one keystroke per number. You can also add numbers whilst remaining in letter modes by pressing and holding the desired key.

## Setting up your email

You can stay in touch on the move using email on your GD330. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 From the standby screen, press  and select **Messaging** and then select **Settings**.
- 2 Select **Email**, then **Email accounts**.
- 3 If no email account is set, you can set up an email account by using email set-up wizard.

**Email address/Password** - Enter your email address and password.

**Username** - Enter the account user ID.

**Mailbox type** - Select the internet protocol type used to transfer your email, IMAP4 or POP3.

**Incoming server** - Enter the IP address or host name of your incoming (POP3 or IMAP4) mail server.

## Messaging

**Outgoing server** - Enter the IP address or host name of your outgoing (SMTP) mail server.

**SMTP authentication** - Choose to activate the security setting for the outgoing mail server.

If SMTP authentication is on, outgoing server requires user name and password when you send e-mail.

**SMTP username/SMTP Password** - Enter your email address and password from your email provider. (If SMTP authentication is on)

**Account name** - Enter the mailbox name by which you would like to refer to this account.

- 4 After entering the email account, select **OK** to save. Now your account is set up, it will appear in the list of accounts in your Email folder.
- 5 Using the Edit menu of Options, you can edit the setting values.

**Title** - Enter a name for this account.

**My name** - Enter your name.

**Username** - Enter the account username.

**Password** - Enter the account password.

**Email address** - Enter the account email address.

**Reply email address** - Enter the 'reply to' email address.

**Outgoing mail server** - Enter the account details.

**Incoming mail server** - Enter the account details.

**Maximum receive size** - Choose the size limit of your emails, the maximum is 1MB.

**Mailbox type** - Enter the mailbox type, POP3 or IMAP4.

**Save to server** - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

**Save sent mail into** - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

**Access point** - Choose your Internet access point.

**Retrieve mode** - Select Headers only or All.

**Auto retrieve** - Choose whether to fetch your new emails automatically.

**Advanced settings** - Choose whether to use the advanced settings.

**SMTP port number** - Normally, this will be 25.

**Outgoing uses SSL** - Choose whether to use SSL for incoming server.

**Incoming server port** - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

**Incoming use SSL** - Choose whether to use SSL for incoming server.

**SMTP authentication** - Choose the security settings for the outgoing mail server.

**SMTP Username** - Enter your email address from your email provider.(If SMTP authentication is On)

**SMTP Password** - Enter your email address password from your email provider.(If SMTP authentication is On)

**APOP secure login** - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

# Messaging

## Retrieving your email

You can automatically or manually check your account for new email. See 'Changing your email settings' to check automatically.

To check manually:

- 1 From the standby screen, press **OK** and select **Messaging** then **Mailbox**.
- 2 Select the account you want to use.
- 3 Choose **Open** and the phone will connect to your email account and retrieve your new messages.

## Sending an email using your new account

- 1 From the standby screen, press **OK** and select **Messaging**, then choose **Create new message**.
- 2 Choose **Email** and a new email will open.
- 3 Use **Options** to enter the recipient's address and to write your message. Use **Insert** to attach images, videos, sounds or other file types.

- 4 Select **Send** and your email will be sent.

## Message folders

**Inbox** - All the messages you receive are placed into your inbox. Here you can read, reply to and forward your messages.

**Mailbox** - All emails you receive are placed into your Mailbox.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here.

**Outbox** - This is a temporary storage folder for messages that are being sent.

**Sent items** - All the messages you send are placed into your Sent items folder.

**My folders** - You can move messages existed in Inbox or Sent messages into My folders, and then you can move those messages existed in My folders into the original message box.

## Managing your messages

- 1 From the standby screen, press **OK** and select **Messaging** then **Inbox**.
- 2 Select **Options** and then choose to:

**Reply** - Send a reply to the selected message.

**Forward** - Send the selected message on to another person.

**Make call** - Call the person who sent you the message.

**Save number** - Save sender's address to the contact.

**Delete** - Delete the message.

**Create new message** - Open a new, blank message or email.

**Mark/Unmark** - Mark/Unmark your messages for multiple deletion.

**Copy & Move** - Copy or move the message to your phone, SIM or My folders.

**Filter** - View your message by type. This will group SMS separately from MMS.

**Message info.** - See additional information for the message, including the time it was sent.

If you see the message **No space for SIM message** you should delete some messages stored in SIM memory.

If you see the message **No space for messages** you can delete messages to create space.

## Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, and you can edit these if you wish.

- 1 From the standby screen, press **OK** and select **Messaging** then choose **Templates**.

## Messaging

- 2 Choose **Text templates** or **Multimedia templates**. You can then select **Options to Add new templates**.

### Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 From the standby screen, press **OK** and select **Messaging** then choose **Emoticons**.
- 2 Select **Options to Add new, Edit, Delete** or **Delete all emoticons**.

### Changing your text message settings

Your GD330 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

From the standby screen, press **OK** and select **Messaging**, then choose **Settings**, then **Text message**. You can make changes to:

**Text message centre** - Enter the details for your message centre.

**Delivery report** - Choose to receive confirmation that your message was delivered.

**Validity period** - Choose how long your message is stored at the message centre.

**Message types** - Convert your text into **Voice, Fax, X.400** or **Email**.

**Character encoding** - Choose how the characters in your messages are encoded, this impacts the size of your message and therefore data charges.

**Send long text as** - Choose whether to send your message as **Multiple SMS** or **MMS** when you enter a text longer than 1 page in the message field.

## Changing your multimedia message settings

Your GD330 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

From the standby screen, press **OK** and select **Messaging**, then choose **Settings**, then **Multimedia message**.

You can make changes to:

**Retrieval mode** - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether or not to download them in full.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read reply** - Choose to allow and/or send a read reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose your default slide duration time for composing MMS.

**Creation mode** - Choose your message mode.

**Delivery time** - Deliver your message at a specific time.

**Multimedia msg centre** - Enter the details for your message centre.

## Changing your email settings

You can adapt your email settings so that it works according to your preferences.

## Messaging

From the standby screen, press **OK** and select **Messaging** then choose **Settings**, then select **Email** and then you can adapt the following settings:

**Email account** - You can set up an email account.

**Allow reply email** - Choose to allow the sending of 'read confirmation' messages.

**Request reply email** - Choose whether to request 'read confirmation' messages.

**Retrieve interval** - Choose how often your GD330 checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at any one time.

**Include message in Fwd & Reply** - Choose whether or not to include the original message.

**Include attachment** - Choose whether or not to include the original attachment.

### **Auto Retrieval in Roaming** -

Choose whether or not to automatically retrieve your messages when roaming.

**New email notification** - Choose whether or not to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

### **Changing your other settings**

From the standby screen, press **OK** and select **Messaging**, choose **Settings** then:

**Voicemail** - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.



**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

**Info. service** - Choose your reception status, language and other settings.

**Save text message** - Choose whether to save your text messages to the phone memory or to the external memory.

## Camera





### Taking a quick photo


- 1 Press  to open the viewfinder.
- 2 Focus the camera on what you want to take.
- 3 Press  to take a photo.

### After you've taken your photo

Your captured photo will appear on the screen. After taking a picture, you can check the menu as follows:

**Options** - You can change the name of the image or edit the image file.

-  **Album** - View the pictures you have taken in your Album.
-  **Send** - Send the photo as MMS, Email or via Bluetooth.
-  **New** - Take another photo straight away. Your current photo will be saved.
-  **Use as** - Use the image as wallpaper, as a Contact image, or in your Start-up or Shut down screen.

 **Delete** - Delete the photo you have just taken. The viewfinder will reappear.

**Back** - Go back to previous menu.

### Using the quick settings

From the viewfinder use the navigation key and select the options you would like to use.

**Album** - Choose to look at the other images in your album.

**Video** - Choose to switch from Camera to Video camera mode.

**Capture** - Allows you to take a picture.

**Brightness** - Set the brightness of the image in the viewfinder of the camera.

**Timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from 3 seconds, 5 seconds or 10 seconds. Great for a group photo that you want to be part of too!

## Using the advanced settings

From the viewfinder select **Settings**.

**Image size** - Change the size of the photo.

**Colour effect** - Choose a colour tone to apply to the photo you're taking.

**White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

**Night mode** - You can take better pictures at night by selecting **On**.

**Shot mode** - Choose from **Normal** or **Burst shot**.

**Image quality** - Controls the quality of image.

**Memory in use** - Choose whether to save your photos to the **Handset** memory or to the **External** memory.

**Hide icons** - Hide the icons to the side of the viewfinder.

## Adjusting the brightness

Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Select **Brightness** in the quick settings.
- 2 Slide the contrast indicator along the bar, towards “-” for a lower contrast, hazier image or towards “+” for a higher contrast, sharper image.

## Choosing a shot mode

- 1 Select **Shot mode** in **Settings** to view the available shot modes.
- 2 Choose from the options:

**Normal** - This is the default shot type. The photo will be taken in the normal way.

## Camera

**Burst shot** - This enables you to take three/six/nine shots automatically in very quick succession.

### Changing the image size

The more pixels, the larger the file size, which in turn means they will take up more of your memory. If you want to fit more pictures on your phone or memory card you can alter the number of pixels to make the file size smaller.

- 1 Select **Image size** in **Settings**.
- 2 Select a pixel value from the numerical options: **1600X1200**, **1280X960**, **640X480**, **320X240**, **contact**.
- 3 Select the size option you'd like to use and press **Select** to implement your changes. The settings menu will automatically close, ready for you to take your picture.

### Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the **Album**.
- 2 Your album will appear on the screen.
- 3 Select the photo to open it fully.


### Setting a photo as a wallpaper or contact image

From your image album, select an image and **Use as** to use the image as a wallpaper, Contact image, Start up image, or Shut down image.

**NOTE:** Contact images can only be added to contacts saved to your phone, not your SIM.

## Video camera

### Shooting a quick video

- 1 Move the camera mode switch to  and press **OK**. The video camera's viewfinder will appear on screen.
- 2 Focus the camera on what to record.
- 3 Press **OK** once to start recording.
- 4 **REC** will appear at the bottom of the viewfinder. Press **OK** again to stop recording.

### After you've shot your video

A still image representing your captured video will appear on screen.

After recording a video clip, you can check the menu as follow:

**Options** - You can change the name of the video clip.



**Album** - View your video album.



**Play** - Play the file.



**New** - Press to shoot another video straight away. Your current video will be saved.



**Send** - Send the video as MMS, as an Email or via Bluetooth.



**Delete** - Delete the video you have just made. The viewfinder will reappear.

**Back** - Go back to previous menu.

### Using the quick settings

From the viewfinder use the navigation key and select the options you would like to use.

**Album** - Choose to look at the other videos in your album.

**Camera** - Choose to switch from Video camera to Camera mode.

**Rec** - Allows you to record a video.

**Brightness** - Contrast defines the difference between light and dark in an Video.

## Video camera

### Using the advanced settings

From the viewfinder select **Settings**.

**Size** - Change the size of the video.

**Colour effect** - Choose an effect tone to apply to the video you're making.

**White Balance** - The white balance ensures that any white in your photos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions.

Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

**Quality** - Controls the quality of video.

**Duration** - Select the maximum length of the recording.

**Memory in use** - Choose whether to save your videos to the **Handset** memory or to the **External** memory.

**Hide icons** - Hide the icons to the side of the viewfinder.

**Voice** - Choose **Mute** to record a video without sound.

**NOTE:** Always press select after selecting a new setting to implement the changes you've made.

### Watching your saved videos

- 1 You can access your saved videos from within the video camera mode and from the Album. Your album will appear on screen.
- 2 Select the video to open it fully.

# Multimedia

## Music

Your GD330 has a built-in music player so you can play all your favourite tracks. To access the music player, select **Music** from the Multimedia menu. From here you can access a number of folders:

**Recently played** - Listen to the songs you have played recently.

**All tracks** - Contains all of the songs you have on your phone.

**Playlists** - Contains any playlists you have created.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Shuffle tracks** - Listen to your music in a random order.

## Playing a song

- 1 From the standby screen, press **OK** and select Multimedia. From here select **Music** and then choose **All tracks**.
- 2 Select the song you want to play and choose **Play**.
- 3 Press **OK** to pause the song.
- 4 Press **▶** to skip to the next song.
- 5 Press **◀** to skip to the previous song.

## Using options while playing music

Select **Options** and choose from:

**Minimise** - Make the music player screen disappear so that you can continue using your phone as normal.

**Go to my music** - Go to the music menu.

**Repeat** - Select to repeat the selected track, repeat off and repeat all.

**Shuffle** - Listen to your music in a random order.

## Multimedia

**Equalizer** - Select different pre-defined equalizer.

**Visualization** - Select the visual effects.

**Listen via headset** - Listen to the selected music using bluetooth headset. (Bluetooth headset should support MP3 playback)

**Add to playlist** - Add the file to a playlist.

**File info.** - View brief details about the file.

**Send** - Send the song as a message, email, or via Bluetooth.

**Use as** - Use the song as one of your ringtone, message tone, start-up or shut down tone.

### Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 From the standby screen, press **OK** and select **Multimedia** then **Music**, choose **playlist**.

- 2 Select **Add**, enter the playlist name and press **OK** to save.

- 3 The All tracks folder will be displayed. Select all of the songs that you would like to include in your playlist; a tick will show next to the file name.

To play a playlist, select it and choose **Play**.

**NOTE:** To add a second playlist, select **Options** then **Add new playlist**.

### Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

- 1 From the standby screen, press **OK** and select **Multimedia** then **Music**, choose **Playlists**.

- 2 Select the playlist.

- 3 Select **Options**.

**Add new songs** - Add more songs to the playlist. Mark the ones you want and select **Done**.

**Send** - Send a song as a message or via Bluetooth.

**Remove from list** - Remove a song from the playlist.


**Mark/Unmark** - Select multiple files.

**Use as** - Use the song as one of your ringtone, message tone, start-up or shut down tone.

**File info.** - View the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.


**Memory manager** - You can view the current status of memory.

### **Deleting a playlist**

- 1 From the standby screen, press  and select **Multimedia** then **Music**, choose **Playlists**.
- 2 Select **Options** then **Delete** or **Delete all** to delete all of the playlists.

### **Listening to the radio**

Your GD330 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

From the standby screen, press  and select **Multimedia** then **FM radio**, enter the channel number of the station you would like to listen to.

**NOTE:** You need to insert your headphones to listen to the radio. Insert them into the same socket as your charger.

### **Searching for stations**

You can tune radio stations by searching for them either manually or automatically. They will be saved to specific channel numbers so you don't have to keep re-tuning.



## Multimedia

To auto tune:

- 1 From the standby screen, press **OK** and select **Multimedia** then **FM radio**, choose **Options**.
- 2 Select **Auto scan**. The stations found will automatically be allocated to a channel number.

To manually tune:

- 1 From the standby screen, press **OK** and select **Multimedia** then **FM radio**.
- 2 Enter the station frequency you would like to save to.
- 3 Select **Set** and then select the channel to save.

**NOTE:** You can also manually tune into a station by using  and  displayed next to the radio frequency.

## Editing the channels

You may want to move the stations to another channel so that the ones you listen to most frequently are easier to access.

- 1 From the standby screen, press **OK**, select **Multimedia** then **FM radio**, choose **Options**.
- 2 Select **Channel list** and select the channel you want to change.
- 3 Either select a station from one of the other channels, or manually tune the channel into the frequency you want.

You can edit each channel by highlighting it and pressing **Options**:

**Rename** - Rename the channel.

**Replace** - Set new frequency for the selected channel.

## Resetting channels

- 1 From the standby screen, press **OK** and select **Multimedia** then **FM radio**, choose **Options**.

- 2 Select **Channel list**, then **Options**.
- 3 Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels.

**TIP!** To improve the radio reception, extend the headset cord, which functions as the radio antenna.

## Using the voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1 From the standby screen, press **OK** and select **Multimedia**.
- 2 Select **Voice recorder** then options and choose from:

**Duration** - Set the recording duration. Choose from **MMS msg. size, 30 secs, 1 min** or **No limit**.

**Quality** - Select the sound quality. Choose from **Super Fine, Fine** or **Normal**.

**Memory in use** - Select phone memory or external memory.

**Go to Voice recordings** - Open the Voice recordings folder in **My sounds**.

- 3 Select **OK** to begin recording.
- 4 Select **Stop** to end recording.
- 5 Select **Play** in the options menu to listen to your recording.

## Sending the voice recording

- 1 Once you have finished recording, select options.
- 2 Select **Send** and choose from **Message, Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

**NOTE:** After you have finished recording, select **Options** and choose **Play, Send, File, Delete, Use as** (to use the recording as your ringtone) or **Go to Voice recordings**.

## My stuff

You can store any multimedia files on your phone's memory in My stuff so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

### Images

**My images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

### My images option menus

The options available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures.

**Send** - Send the image to a friend.

**Use as** - Set the image to appear on your phone at certain times.

**Move** - Move an image from the phone memory to a memory card or vice versa.

**Copy** - Copy an image from the phone memory to a memory card or vice versa.

**Delete** - Delete an image.

**Mark/Unmark** - Select multiple files.

**Edit image** - You can edit the selected image.

**Print via Bluetooth** - Print an image via Bluetooth®.

**File** - Change the name or view the information for the file.

**Create new folder** - Create a new folder within the My Image folder.

**Slide show** - Start a slide show.

**Sort by** - Sort images into a specified order.

**Grid view/List view** - View each image in grid or list type.

**Memory manager** - View the memory status.

## Sending a photo

- 1 From the standby screen, press **OK** and select **My stuff** then choose **My images**.
- 2 Select the photo you want to send and press **Options**.
- 3 Select **Send** and choose from **Message, Email, or Bluetooth**.
- 4 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

## Using an image

You can choose images to use as wallpaper, Contacts image, start up/shut down image.

- 1 From the standby screen, press **OK** and select **My stuff** then **My Images**.

- 2 Select the image and press **Options**.
- 3 Select **Use as** and choose from:  
**Wallpaper** - Set a wallpaper for the standby screen.  
**Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.  
**Start-up** - Set an image to appear when you switch the phone on.  
**Shut down** - Set an image to appear when you switch the phone off.

## Organising your images

- 1 From the standby screen, press **OK** and select **My stuff**, then **My images**.
- 2 Select **Options**, then **Sort by**.
- 3 Choose from **Date, Type** or **Name**.

## My stuff

### Deleting an image

- 1 From the standby screen, press **OK** and select **My stuff**, then **My images**.
- 2 Select the image you want to delete and choose **Options**.
- 3 Select **Delete**, then **Yes** to confirm.

**TIP!** To quickly delete any file in Image, highlight it with the cursor and press the **C2** key.

### Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 From the standby screen, press **OK** and select **My stuff** then **My images**.
- 2 Select an image and select **Options**.
- 3 Select **Move** or **Copy**.

### Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 From the standby screen, press **OK** and select **My stuff** then **My images**.
- 2 Select **Options** then **Mark/Unmark**.
- 3 A box will appear to the right bottom of each image. If you select an image, a tick will appear in the box marking it.
- 4 To unmark an image, select the image again so that the tick disappears from the box.
- 5 Once you have marked all of the appropriate images, choose one of the options to apply to all of them.

## Checking your memory status

You can check to see how much of your memory you have used and how much you have remaining.

- 1 From the standby screen, press **OK** and select **My stuff**, then **My images**.
- 2 Select **Options**, then **Memory manager**.
- 3 Choose **Handset memory** or **External memory**.

**NOTE:** If you do not have a memory card inserted, you will not be able to select External memory.

## Sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

## Using a sound

- 1 From the standby screen, press **OK** and select **My stuff**, then **My sounds**.
- 2 Select **Default sounds** or **Voice recordings**.
- 3 Select a sound and press **Play** to listen to it.
- 4 Select **Options** and **Use as**.
- 5 Choose from **Voice ringtone**, **Message tone**, **Start-up** and **Shut down**.

## Videos

The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

## Watching a video


- 1 From the standby screen, press **OK** and select **My stuff** then **My videos**.
- 2 Select a video and press **Play**.

## My stuff

### Using options while watching a video

Select **Options** while watching a video and choose from:

**Landscape view** - View the video file in full shot.

**NOTE:** You can switch to landscape view & landscape view to normal view using  key, while viewing video.

**Mute/Unmute** - Switch the sound on/off.

**Capture** - You can save what is on the paused screen as an image file. (This option is only available while video is paused.)

**Repeat** - Select Off, One or All.

**File info.** - View brief details about the file.

**Send** - Send the video in a message, email or via Bluetooth.

### Sending a video clip

- 1 Select a video and press **Options**.
- 2 Select **Send** and choose from **Message, Email** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

### Using the video options menu

From the **My videos** folder, you can choose from the following options:

**Send** - Send a video to a friend.

**Move** - Move a video clip from the phone memory to a memory card or vice versa.

**Copy** - Copy a video clip from the phone memory to a memory card or vice versa.

**Delete** - Delete a video.

**Mark/Unmark** - Select multiple files.

**File** - Edit the file name and view its information.

**Create new folder** - Create a new folder within the My videos folder.

**Sort by** - Sort videos into a specific order.

**Grid view/List view** - View the options menu by grid or list type.

**Memory manager** - View the memory status.

## **My games & apps**

You can download games and applications to your phone to keep you amused when you have time to spare.

If you download a game from the network, you will need to install the downloaded game in your phone before enjoying the game.

## **Playing a game**

- 1 From the standby screen, press **OK** and select Games & apps.
- 2 Select My games & apps, and then select Games.
- 3 Select a game and press Launch. Using the games options menu From the Games and Applications folders, the following options are available:

**Create new folder** - Create a folder within the games and applications menu.

**Sort by** - Sort the games and applications by Date, Size or Name.

**File info.** - Show the information about selected game

**Memory manager** - View the memory status.

## My stuff

### Viewing applications

You can manage the Java applications installed in your phone by using the Applications menu. You can also delete downloaded applications.

- 1 From the standby screen, press **OK** and select Games & apps.
- 2 Select My games & apps and choose Applications.
- 3 View and manage any applications you have.

### Changing the network profile

To download a game, you can set the value to connect to the network using Settings.

- 1 From the standby screen, press **OK** and select Games & apps.
- 2 Select Settings.

- 3 From here you can:

**Profiles** - You can see profile and add new profile.

**Certificates list** - You can see the certification list for using Java application.

### Installing a Java game & application

Depending on the service provider, all Java based programs such as Java games can be downloaded and run on your phone. You can transfer Java program files from a compatible PC to the memory in your phone using the Bluetooth, USB Mass storage or External memory. The Java program files are in .jad or .jar format.

If you save the Java program files in your phone, you should install the files before using a Java game or application first.

To install a Java game & application:

- 1 From the standby screen, press **OK** and select My stuff, then choose Others or My memory card (if external memory is inserted).
- 2 Select the file (\*.jad or \*.jar) you want to install and press Install.

NOTE: The .jad file should contain its own .jar file.

- 3 Once installed, the Java program can be viewed in the Games or Applications menu where you can select, execute, or delete.

**TIP!** You can also download Java MIDlet in your phone by using the WAP (Wireless Application Protocol) services. Please note that additional costs may be incurred when using online services.

## Flash contents

The Flash contents folder contains all of your default and downloaded flash contents.

## Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications.

## My memory card

If you purchase an optional external microSD memory card, you can manage more content.

## Internal memory explorer

Using this menu, you can easily explore contents of your phone. When you select this menu, you can see Flash contents, Picture, Others, Playlists, Sound, and Videos.

## Organiser

### Adding an event to your calendar

- 1 From the standby screen, press **OK** and choose **Organiser** then select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Options** and then choose **Add new event**.
- 4 Select whether you would like to add an **Appointment**, **Anniversary** or **Birthday** and select **Done**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower time and date boxes.
- 7 Select **Done** and your event will be saved in the calendar. A cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

**TIP!** You can set a holiday in your calendar. Select each day you are on holiday one at a time, then choose **Options** and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holidays.

### Changing your default calendar view

- 1 From the standby screen, press **OK** and choose **Organiser** then select **Settings**.
- 2 Select **Calendar** and choose either **Month view** or **Week view**.
- 3 Press **Done** to confirm your choice.

### Adding an item to your to do list

- 1 From the standby screen, press **OK** and choose **Organiser**.
- 2 Select **To do** and select **Add**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your to do list item by selecting **Done**.

**TIP!** You can edit an item by selecting it, pressing **Options** and **Edit**. Confirm your amends by selecting **Done**.

## Sharing a to do item

- 1 From the standby screen, press **OK** and choose **Organiser** then select **To do**.
- 2 Select the to do item you would like to share, then select **Options**.
- 3 Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg**, **Email** or **Bluetooth**.

## Adding a memo

- 1 From the standby screen, press **OK** and choose **Organiser** then select **Memo**.
- 2 Select **Add**.
- 3 Type your memo, followed by **Save**.

- 4 Your memo will appear on screen next time you open the **Memo** application.

**TIP!** You can edit an existing memo. Select the one you want to edit and select **Edit**.

## Adding a secret memo

You can write the private memo to protect your privacy in Secret memo menu. You enter the security code to use this menu.

## Using the date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 02.10.2009 will be 01.12.2009 This is great for keeping tabs on deadlines.

# Organiser

## Settings

**Calendar** - You can set the configurations to view the calendar.

**Send all schedules & to do via Bluetooth** - You can send all the data in your calendar and/or to do list from your phone to other phones by using Bluetooth.

**Backup calendar & To do** - You can create the backup files of the calendar or to do list saved in the phone when you insert an external memory.

**Restore calendar & To do** - You can reset the backup files of calendar or tasks when you insert an external memory.

**Memory info.** - You can view the information of available memory regarding Calendar, To do, Memo and Secret memo.

**Clear all** - You can delete all data regarding Calendar, To do, Memo and Secret memo.

## Tools

### Adding your quick menu

The Quick menu provides easy access to your most used functions. You can add your favorite menu to the list of Quick menu.

### Setting your alarm

- 1 From the standby screen, press **OK** and choose **Tools** then select **Alarms**.
- 2 Select **Options** and press **Add new**.
- 3 Set the time you would like the alarm to sound.
- 4 Choose whether you would like your alarm to sound daily, Mon-fri, Mon-sat, Sat-Wed, Sat-Thu, Sun-Thu, Sat-Sun, Except holiday, Choose weekday, or Not repeated
- 5 Select  and **Edit** to select a sound for your alarm.
- 6 Add a memo for the alarm and select **Done** when you have finished typing. When the alarm sounds the memo will be displayed.

- 7 Finally, you can set the snooze interval at 5, 10, 20 or 30 mins, 1 hour or off.
- 8 Once you have set your alarm, select **Done**.

**NOTE:** You can set up to 5 alarms.

The alarm will be alerted on even if the phone is switched off.

### Using your calculator

- 1 From the standby screen, press **OK** and choose **Tools** then select **Calculator**.
- 2 Select the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, x, ÷), followed by =.
- 4 For more complex calculations, select **Options** to select a command.
- 5 Select **C<sup>A</sup>** to delete a character press and hold **C<sup>A</sup>** to clear completely and start a new calculation.

## Tools

### Using the stopwatch

- 1 From the standby screen, press **OK** and choose **Tools** then select **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. The duration of an individual lap time (up to 20 times) can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to begin the time again.

### Converting a unit

- 1 From the standby screen, press **OK** and choose **Tools** then select **Converter**.
- 2 Choose whether you would like to convert **Currency**, **Surface**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.

- 3 You can now select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 4 The corresponding value will appear on the screen.

### Adding a city to your world time

- 1 From the standby screen, press **OK** and choose **Tools** then select **World time**.
- 2 Select **Options**, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively choose **Map**, and select your chosen city from the map.
- 3 Press **Select** to confirm your choice.

**TIP!** If you are abroad, you can change your time zone from **World time** by selecting **Options**, followed by **Change time zone**. Choose your required city as above.

## Browser

With a browser at the tip of your fingers, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

### Accessing the web

- 1 From the standby screen, press **OK** and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**.  
Alternatively, select **Enter address** and type in your desired URL, followed by **Open**.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

### Google

To access Google services, press **OK** and select **Google**.

**NOTE:** You may be unable to access Google in some countries. This is dependent on network services.

### Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen, press **OK** and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To create a new folder, select **Options** and choose **Create new folder**. Enter the name of your bookmark folder.

## Browser

- 4 To add a new bookmark, select **Options** and press **Add new**. Enter a name for your bookmark followed by the URL.
- 5 Select **Done**. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark, simply scroll to it and select **Open**.

### Saving a page

- 1 Access your required webpage as described above.
- 2 Select **Options**, **Save items**, then **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Select **Save**.

**TIP!** This menu will also allow you to edit titles of saved pages and delete saved pages.

### Accessing a saved page

- 1 From the standby screen, press **OK** and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select **Open** to connect to the saved page.

### Viewing your browser history

- 1 From the standby screen, press **OK** and choose **Browser**, then select **History**.
- 2 A list of web page titles you have accessed recently will be displayed.
- 3 To access one of these pages, simply select the required page and press **Open**.

## Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a **feed**, **web feed**, or **channel**, contains either a summary of content from an associated web site or the full text.

## Changing the web browser settings

- 1 From the standby screen, press **OK** and choose **Browser** then select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or **Reset Settings**.
- 3 Once you have changed your settings, press **Select**.

## Connectivity

### Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

#### To send a file:

- 1 Open the file you want to send.
- 2 Select **Options** and choose **Send**. Choose **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on.
- 4 Your GD330 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and choose **Select** to send the file.
- 6 Your file will be sent.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

#### To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file. Files will usually be saved to the relevant folder in **My stuff**.

#### Changing your Bluetooth settings:

- 1 Press **OK** in the standby screen, and choose **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:

**My device visibility** - Choose to be Visible, Visible for 1 min or Hidden.

**My device name** - Enter a name for your GD330.

**Supported services** - View the profile supported by GD330.

**My address** - View your Bluetooth device address.

### Pairing with another Bluetooth device

By pairing your GD330 and another device, you can set up a passcode-protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Select **Paired devices**, then press **New**.
- 3 Your GD330 will search for devices. If devices are found, **Refresh** and **Add** will appear on screen.

- 4 Choose the device you want to pair with and enter a passcode then press **Add**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode-protected Bluetooth connection is now ready.

### Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Select **Yes to Connect now**. Your GD330 will automatically switch to Headset profile.

## Connectivity

### Using your phone as a mass storage device

Your phone can be used as a mass storage device.


- 1 Disconnect your phone from your PC.
- 2 Press **OK** in the standby screen.
- 3 Select **Connectivity**, then **USB connection mode**.
- 4 Highlight **Mass storage** and press **Select**.
- 5 Connect your phone to your PC.  
Your phone will read:  
"Connected" with Mass storage as title.  
Do not disconnect during transfer.

**NOTE:** After selecting mass storage your phone must be reconnected to your PC to initiate Mass Storage.


# Settings

## Changing your profiles



Within this folder you can adapt your settings to personalise your GD330.

You can quickly change your profile on the standby screen. Simply press  then the profile you would like to activate.

Using the settings menu you can personalise each profile setting.

- 1 From the standby screen, press  and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit.
- 3 Select **Options** and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ring tone** and **Volume**, **Message alerts** and more.

## Using flight mode


Turn on flight mode by pressing  in standby screen, and then select **Settings** and **Profiles**. Select **Flight mode** and press  to activate.

Flight mode will not allow you to make calls, connect to the internet, send messages or use Bluetooth.

**NOTE:** Bluetooth can be turned On in Flight mode by manually selecting the option.

## Changing your phone settings

Enjoy the freedom of adapting your GD330 so that it works in a way that suits you.

- 1 From the standby screen, press  and select **Settings**.
- 2 Select **Phone** and choose from the list below.

**Touchpad vibration** - Change the setting of touchpad to a vibration.

**Languages** - Change the language of for your GD330's display.

**Power save** - Choose to switch the power saving settings **On** or **Off**.

**Information** - View the technical information for your GD330.

# Settings

## Changing your screen settings

- 1 From the standby screen, press **OK** and select **Settings**.
- 2 Select **Screen** and then choose from:

**Screen theme** - Choose the theme for your standby screen or start-up, shut down the phone.

**Menu style** - Choose the style used to display menus.

**Dialling** - Set the display used when making a call.

**Font** - Adjust the font.

**Backlight** - Choose how long the backlight remains on for.

**NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Handset theme** - Quickly change the whole look of your screen.

**Greeting message** - Enter the greeting message used when the phone is switched on.

- 3 Choose **Select** to save your settings.

## Using Date & Time

- 1 From the standby screen, press **OK** and select **Settings**.
- 2 Select **Date & Time**.

Adjust your date and time settings or choose to automatically update the time when you travel or for daylight saving.

## Changing security settings

- 1 From the standby screen, press **OK** and select **Settings**.
- 2 Select **Security** then choose from:

**PIN code request** - Set the phone to ask for the PIN code of your SIM card when switching on the phone.

**Handset lock** - Set the phone lock to avoid unauthorised use. You will need a security code.

**Change codes** - Change the codes: PIN / PIN2 / Security code / ATMT code.

**NOTE:** Security code

The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Reset settings menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorized use of the phone. The security code default setting can be modified from the Security > Change codes.

**Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with name, primary phone and secondary number. Default ATMT code is "0000."

ATMT SMS will contain information about the stolen phone IMEI, current location (captured as perCell Broadcast message) & number of the person who is using that handset.

### **Using memory manager**

Your GD330 has three memories available: the phone, the SIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

## Settings

Press **OK** in standby screen. Select **Settings** then **Memory Manager**.

**Handset common memory** - View the memory available on your GD330 for images, sounds, videos, flash, MMS, applications, java and others.

**Handset reserved memory** - View the memory available on your handset for SMS, contacts, calendar items, to do list, memos, alarms, call history, bookmarks and miscellaneous items.

**SIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage setting** - choose Handset memory or External memory.

### Changing your other settings

**Network** - Your GD330 connects automatically to your preferred network. To change these settings, use this menu.

**Internet profiles** - Set the profiles to connect to the internet.

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Packet data conn.** - Set the packet data connection.

**Reset settings** - Select this to reset your phone to its default configuration. You are requested to enter the security code.

## Accessories

There are various accessories for your mobile phone. These are detailed below.

### Charger



### Data cable and CD

Connect and synchronise your GD330 and PC.



### Battery



### User Guide

Learn more about your GD330.

### Stereo headset



#### Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquires.

## Network service

The wireless phone described in this guide is approved for use on the GSM 850, GSM 900, DCS 1800 and PCS 1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

**Product name:** GD330

**System:** GSM 850 / GSM 900 /  
DCS 1800 / PCS 1900

### Ambient Temperatures

**Max:** +55°C (discharging),  
+45°C (charging)

**Min:** -10°C

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

GSM 850/ GSM 900/ DCS 1800/ PCS 1900 Quad Band Terminal Equipment

Model Name

GD330

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1  
EN 300 328 V 1.7.1  
EN 60950-1 : 2001  
EN 50360/EN 50361 : 2001  
EN 301 511 V9.0.2

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Wotton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoum, Ji / Director

Issued Date

16, Dec, 2008

European Standard Center

LG Electronics Logistics and Services B.V.

Veluwezoom 15, 1327 AE Almere, The Netherlands

Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794

e-mail : jacob@lge.com

Signature of representative

## TROUBLESHOOTING

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

MESSAGE	POSSIBLE CAUSES	POSSIBLE CORRECTIVE MEASURES
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly Battery empty Battery contacts dirty	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean contacts.

MESSAGE	POSSIBLE CAUSES	POSSIBLE CORRECTIVE MEASURES
Charging error	<p>Battery totally empty</p> <p>Temperature out of range</p> <p>Contact problem</p> <p>No mains voltage</p> <p>Charger defective</p> <p>Wrong charger</p> <p>Battery defective</p>	<p>Charge battery. Make sure the ambient temperature is right, wait for a while, and then charge again.</p> <p>Check power supply and connection to the phone.</p> <p>Check the battery contacts, clean them if necessary.</p> <p>Plug in to a different socket or check voltage.</p> <p>If the charger does not warm up, replace it.</p> <p>Only use original LG accessories.</p> <p>Replace battery.</p>
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.
LCD Dimming	Low battery When the battery is empty, the LCD screen will be dimming to reduce the power supply.	Recharge the battery.













الرسالة	الأسباب المحتملة	تدابير تصحيحية ممكنة
يتعدّر تشغيل الهاتف	ضغط مفتاح التشغيل / إيقاف التشغيل لبرهة قصيرة جداً البطارية فارغة ملامسات البطارية متسخة	اضغط مفتاح التشغيل/ إيقاف التشغيل لثانيتين على الأقل. اشحن البطارية، تخلص مؤشر الشحن في شاشة العرض. تخلص مؤشر الشحن في شاشة العرض.
خطأ في الشحن	البطارية فارغة بالكامل درجة الحرارة خارج النطاق مشكلة في الاتصال لا فولتية للخطوط الرئيسية الشاحن فيه خلل الشاحن غير مناسب البطارية فيها خلل	اشحن البطارية. تأكد من أن درجة الحرارة المحيطة جيدة، وانتظر قليلاً. ثم حاول الشحن مرة أخرى. دقق في وحدة التزويد بالطاقة والاتصال بالهاتف، دقق في ملامسات البطارية. وقم بتنظيفها إذا اقتضى الأمر. قد بالتوصيل بمقبس خر أو دقق في الفولتية. استخدم ملحقات LG الأصلية فقط. استبدل البطارية.
الهاتف ينقطع عن الشبكة	الإشارة ضعيفة جداً	إعادة الإتصال بموفر خدمة اخر تتم تلقائياً.
الرقم غير مسموح به	وظيفة رقم الاتصال المحدد قيد التشغيل.	تحقق من الإعدادات.
بطارية ضعيفة	عندما تكون البطارية فارغة، تخفت شاشة LCD لتخفيض التزويد بالطاقة.	قم بإعادة شحن البطارية.

## استكشاف الأخطاء وإصلاحها

يسرد هذا الفصل بعض المشاكل التي قد تصادفها أثناء استخدام الهاتف. بعض المشاكل يتطلب منك الاتصال بموفر الخدمة. ولكن معظم المشاكل التي تواجهها تكون سهلة بحيث يمكنك تصحيحها بنفسك.

الرسالة	الأسباب المحتملة	تدابير تصحيحية ممكنة
SIM خطأ	لا يوجد بطاقة SIM في الهاتف أو ربما قد أدخلتها بشكل غير صحيح.	تأكد من إدخال بطاقة SIM بطريقة صحيحة.
لا يوجد اتصال بالشبكة	الإشارة ضعيفة خارج شبكة GSM	تأكد من إدخال بطاقة SIM بطريقة صحيحة. دقق في خريطة التغطية التي يزودك بها موفر الخدمة
لا تتطابق الرموز	عندما ترغب في تغيير رمز حماية، عليك تأكيد الرمز الجديد وذلك بإدخاله مرة أخرى. عدم تطابق الرمزين اللذين أدخلتهما.	اتصل بموفر الخدمة.
يتعذر تعيين الوظيفة	غير معتمد من قبل موفر الخدمة أو التسجيل مطلوب.	اتصل بموفر الخدمة.
المكالمات غير متوفرة	خطأ في الطلب بطاقة SIM جديدة، تم بلوغ الحد الخاص برسوم المكالمات	شبكة جديدة غير مصرح لها. دقق في القيود الجديدة. اتصل بموفر الخدمة أو أعد تعيين الحد بواسطة PIN.

# Declaration of Conformity



LG Electronics

## Suppliers Details

### Name

LG Electronics Inc

### Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850/ GSM 900/ DCS 1800/ PCS 1900 Quad Band Terminal Equipment

### Model Name

GD330

### Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1,6,1 / EN 301 489-07 v1,2,1 / EN 301 489-17 v,1,2,1  
EN 300 328 V 1,7,1  
EN 60950-1 : 2001  
EN 50360/EN 50361 : 2001  
EN 301 511 V9,0,2

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob@lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

16, Dec. 2008

Signature of representative

## خدمة الشبكة

## عام

اسم المنتج: GD330

النظام: GSM 900 / GSM 850 DCS  
1800 / PCS 1900

درجات الحرارة المحيطة

القصى: 55 + درجة مئوية (تفريغ).  
45 + درجة مئوية (شحن)

الدنيا: 10 - درجة مئوية

تمت الموافقة على استخدام الهاتف اللاسلكي. الذي جاء وصفه في هذا الدليل. على شبكات GSM 900, GSM 850 و DCS 1800 . و PCS 1900 هناك عدد من الميزات المضمّنة في هذا الدليل وتسمى خدمات الشبكة، هذه الخدمات عبارة عن خدمات خاصة يمكنك الحصول عليها عبر موافر

خدمة اللاسلكية. قبل أن تتمكن من الاستفادة من أي خدمة من خدمات الشبكة هذه، عليك الاشتراك فيها عبر موافر الخدمة والحصول على الإرشادات المتعلقة باستخدامها والتي يزودك بها موافر الخدمة.

## الملحقات

هناك ملحقات مختلفة لهاتفك المحمول. ويمكنك تحديد هذه الخيارات وفقاً لمتطلباتك الشخصية المتعلقة بالاتصال.



**كبل البيانات  
وقرص مضغوط**  
وصّل الهاتف  
GD330 وقم  
بمزامنته مع  
الكمبيوتر.



**الشاحن**



**البطارية**

**دليل المستخدم**  
تعلم المزيد حول  
GD330.

### ملاحظة

- استخدم ملحقات LG الأصلية دائماً. يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى؛ يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.



**سماعة رأس  
استريو**

## الاعدادات

**الذاكرة الخارجية** - عرض الذاكرة المتوفرة في بطاقة الذاكرة الخارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

**تخزين أساسي** - اختر ذاكرة الهاتف أو الذاكرة الخارجية.

### تغيير الاعدادات الأخرى

**الشبكة** - يتصل الهاتف GD330 تلقائياً بشبكتك المفضلة، لتغيير هذه الضبط، استخدم هذه القائمة.

**وضع انترنت** - تعيين الأوضاع للاتصال بإنترنت.

**نقاط وصول** - قام مشغّل الشبكة بحفظ هذه المعلومات مسبقاً، يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

**حزم البيانات** - حزم البيانات.

**اعادة ضبط الاعدادات** - حدّد هذا الخيار لإعادة تعيين هاتفك على تكوينه الافتراضي. مطلوب منك إدخال رمز الحماية.

اضغط على **OK** في شاشة وضع الانتظار. حدد الاعدادات ثم إدارة الذاكرة. ذاكرة الهاتف الشائعة - عرض الذاكرة المتوفرة في الهاتف GD330 للصور، والأصوات، والفيديو، والفلش، و MMS، والبريد الإلكتروني، وتطبيقات جافا وغير ذلك.

ذاكرة الهاتف المحجوزة - عرض الذاكرة المتوفرة في الهاتف لرسائل الرسائل النصية، والأسماء، والتقويم، وقائمة المهام، والمذكرة، والمنبه، ومحفوظات المكالمات، والإشارات المرجعية وعناصر متفرقة.

ذاكرة SIM - عرض الذاكرة المتوفرة في بطاقة SIM.

2 حدد الحماية واختر من القائمة أدناه.

**PIN طلب رمز** - تعيين الهاتف بحيث يطالب برمز PIN الخاص ببطاقة SIM عند تشغيل الهاتف.

**قفل سماعَة الرأس** - تعيين قفل الهاتف لتجنّب الاستخدام غير المصرّح به. ستحتاج إلى رمز حماية.

تغيير الرموز - قم بتغيير الرموز: رمز PIN / رمز PIN2 / رمز الحماية / رمز ATMT.

ملاحظة: رمز الحماية

يحمي رمز الحماية الهاتف من الاستخدام غير المصرّح به. وقد تم تعيين رمز الحماية الافتراضي إلى '0000' ورمز الحماية مطلوب لحذف كافة إدخلالات الهاتف وتنشيط قائمة "إعادة تعيين الضوابط". كما أن رمز الحماية مطلوب لتمكين وظيفة قفل الهاتف أو تعطيلها لمنع الاستخدام غير المصرّح به للهاتف. ويمكن تعديل الضبط الافتراضي لرمز الحماية من الحماية < تغيير الرموز.

تتبع الهاتف ضد السرقة - عند سرقة الهاتف. يرسل الهاتف رسالة SMS إلى الأرقام المحددة من قِبل المالك الحقيقي. لتنشيط ميزة ATMT. يتوجب عليك تعيين تشغيل ATMT وتكوين ضوابط ATMT عبر إدخال الاسم ورقم الهاتف الأساسي ورقم الهاتف الثانوي. رمز ATMT الافتراضي هو "0000".

ستحتوي رسالة ATMT على معلومات حول الهاتف المسروق IMEI وموقعه الحالي (تم التقاطه بفضل رسالة بث خلوي) ورقم هاتف الشخص الذي يستخدمه.

### استخدام إدارة الذاكرة

تتوفر في ثلاثة أنواع من الذاكرة: الهاتف. وبطاقة SIM وبطاقة ذاكرة خارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

ويمكنك استخدام إدارة الذاكرة لتحديد طريقة استخدام كل نوع من أنواع الذاكرة والمساحة المتوفرة.

## الاعدادات

**ملاحظة:** يقدر ما تطول الفترة التي تكون خلالها الإضاءة الخلفية قيد التشغيل. يقدر ما يتم استخدام طاقة البطارية وقد تحتاج إلى شحن هاتفك بشكل متكرر أكثر.

**سمة الهاتف** - تغيير مظهر الشاشة بأكمله بشكل سريع.

**رسالة ترحيب** - إدخال رسالة الترحيب عند تشغيل الهاتف.

**3** اختر تحديد لحفظ الضبط.

### استخدام التاريخ والوقت

**1** من شاشة وضع الانتظار اضغط على **OK** وحدد اعدادات الهاتف.

**2** اضغط التاريخ والوقت.

نظّم ضبط التاريخ والوقت أو اختر تحديث الوقت بشكل تلقائي عند السفر أو للتوقيت الصيفي.

### تغيير ضبط الحماية

**1** من شاشة وضع الانتظار اضغط على **OK** وحدد اعدادات الهاتف.

اللغات - اختر لغة شاشة الهاتف GD330.

توفير الطاقة - اختر تشغيل أو إيقاف تشغيل ضبط توفير الطاقة.

معلومات الهاتف - عرض معلومات GD330 التقنية.

### تغيير ضبط الشاشة

**1** من شاشة وضع الانتظار اضغط على **OK** وحدد الاعدادات.

**2** حدد الاعدادات الشاشة ثم اختر من:

**سمة الشاشة** - اختر سمة شاشة وضع الانتظار أو المكالمات الصادرة.

**نمط القائمة** - اختر النمط المستخدم لعرض القوائم.

**اتصال** - إعداد الشاشة عند إجراء مكالمة.


**خط** - ضبط لون الخط.

**إضاءة خلفية** - اختر الفترة التي تبقى خلالها الإضاءة الخلفية قيد التشغيل.

## الاعدادات

### تغيير الأوضاع

باستطاعتك تكييف الضبط ضمن هذه الحافظة لإضفاء طابع شخصي على الهاتف GD330.

يمكنك أن تقوم بسرعة بتغيير نمطك على شاشة وضع الانتظار، ما عليك إلا لمس  ثم النمط الذي ترغب في تنشيطه.

يمكنك تخصيص كل ضبط النمط باستخدام قائمة الاعدادات.

1 من شاشة وضع الانتظار اضغط على **OK**.

2 حدد الاعدادات ثم اختر الأوضاع ثم اختر وضع الصوت الذي تريد تعديله.

3 حدد خيارات واختر تعديل.

4 يمكنك حينئذ تغيير كل خيارات الأصوات والتنبيهات المتوفرة في القائمة. بما فيها ضبط نغمة الرنين ومستوى الصوت. وتنبيهات الرسائل. وصوت الشاشة والمزيد من الضبط الأخرى.

### استخدام وضع الرحلات الجوية

شغل وضع الرحلات الجوية بالضغط على **OK** في شاشة وضع الانتظار. ثم حدد الاعدادات واختر الأوضاع ثم حدد وضع الرحلات الجوية واضغط على **OK** لتنشيطه.

لن يسمح لك وضع الرحلات الجوية بإجراء مكالمات، أو الاتصال بالإنترنت، أو إرسال الرسائل أو استخدام بلوتوث.

**ملاحظة:** يمكن تشغيل بلوتوث في وضع الرحلات الجوية عبر تحديد الخيار يدويا.

### تغيير اعدادات الهاتف

تمتّع بحرية تكييف الهاتف GD330 بحيث يعمل وفق الطريقة التي تناسبك.

1 من شاشة وضع الانتظار اضغط على **OK** و حدد اعدادات الهاتف.

2 اضغط **هاتف** واختر من القائمة أدناه.

اهتزاز لوحة اللمس- قم بتغيير اعدادات لوحة اللمس الى الاهتزاز.

## التوصيل

**5** واصل الهاتف بالكمبيوتر. سيقراً هاتفك؛ يتم الآن التوصيل كوسيلة تخزين ذات سعة كبيرة... يتبعه تم التوصيل كوسيلة تخزين ذات سعة كبيرة. لا تفصل الهاتف أثناء عملية النقل.

**ملاحظة:** يجب أن يكون هاتفك مفصلاً عن الكمبيوتر لبدء عملية التخزين ذات السعة الكبيرة.

الخدمات المعتمدة - ابحث عن النمط الذي يعتمده الهاتف GD330.

عنواني - البحث عن عنوان جهاز بلوتوث .

### الاقتران بجهاز بلوتوث آخر

عند إجراء اقتران لهاتف GD330 وجهاز آخر. يمكنك إعداد اتصال محمي برمز مرور. وهذا يعني أن الاقتران أصبح آمناً أكثر.

1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً. يمكنك تغيير الرؤية في قائمة الإعدادات.

2 حدد أجهزة مقترنة ثم جديد.

3 يبحث الهاتف GD330 عن الأجهزة. عند اكتمال عملية البحث، يظهر تحديث وإضافة على الشاشة.

4 اختر الجهاز الذي تريد إجراء الاقتران به وأدخل رمز المرور ثم اضغط إضافة.

5 يتصل هاتفك حينئذٍ بالجهاز الآخر. حيث عليك إدخال رمز المرور نفسه.

6 لقد أصبح اتصال بلوتوث المحمي برمز مرور آمناً الآن.

### استخدام سماعة رأس بلوتوث

1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً.

2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.

3 حدد نعم من أجل الاتصال الآن. يقوم الهاتف GD330 بالتبديل تلقائياً إلى نمط سماعة الرأس.

### استخدام الهاتف كوسيلة تخزين ذات سعة كبيرة

يمكنك استخدام هاتفك كجهاز تخزين ذات سعة كبيرة.

1 افصل الهاتف عن الكمبيوتر.

2 اضغط على **OK**.

3 حدد التوصيل. ثم وضع اتصال USB.

4 قم بتمييز وسيلة تخزين ذات سعة كبيرة اضغط تحديد.

## التوصيل

تلميح! راقب شريط التقدم لكي تتأكد من إرسال الملف.

### إرسال الملفات واستلامها باستخدام بلوتوث

يعتبر بلوتوث طريقة جيدة لإرسال الملفات وتلقيها إذ لا حاجة إلى أسلاك ويكون الاتصال سريعاً وسهلاً. كما يمكنك الاتصالات بسماعات رأس بلوتوث لإجراء مكالمات وتلقيها.

#### إرسال ملف:

- 1 افتح الملف الذي تريد إرساله. وهو عادة عبارة عن صورة، أو مقطع فيديو أو ملف موسيقي.
- 2 حدد خيارات واختر إرسال. اختر بلوتوث .
- 3 حدد نعم لتشغيل بلوتوث .
- 4 سيبحث الهاتف GD330 تلقائياً عن أجهزة بلوتوث أخرى تم تمكينها ضمن النطاق.

- 5 اختر الجهاز الذي تريد إرسال الملف إليه واختر تحديد لإرسال الملف.
- 6 يتم إرسال ملفك.

#### لاستلام ملف:

- 1 لاستلام ملفات. يجب أن يكون بلوتوث في وضع التشغيل ومرئياً. انظر تغيير ضبط بلوتوث أدناه للحصول على مزيد من المعلومات.
- 2 تظهر رسالة تطالبك بقبول الملف من المرسل. حدد نعم لاستلام الملف.
- 3 ستشاهد الموقع الذي تم حفظ الملف فيه ويمكنك أن تختار عرض الملف أو استخدامه كخلفية. يتم عادة حفظ الملفات في الحافظة المناسبة في ملفاتي.

#### تغيير ضبط بلوتوث:

- 1 اضغط على **OK** في شاشة وضع الانتظار. واختر التوصيل.
- 2 اختر بلوتوث ثم ضبط. أدخل تغييراتك على:  
إمكانية رؤية جهازي - اختر أن يكون الجهاز مرئياً. أو مرئياً لدقيقة أو مخفياً.  
اسم الجهاز - أدخل اسماً للهاتف GD330.

## تغيير ضبط متصفح ويب

- 1 من شاشة وضع الانتظار اضغط على **OK** واختر المتصفح. حدد الاعدادات المتصفح.
- 2 يمكنك أن تختار تعديل الأوضاع أو ضبط المظهر أو ذاكرة التخزين المؤقت أو ملفات تعريف الارتباط أو الأمان أو إعادة تعيين الضبط.
- 3 عندما تنتهي من تغيير الضبط. اضغط تحديث.

## المتصفح

### حفظ صفحة

- 1 انتقل إلى صفحة ويب المطلوبة كما تم وصفه أعلاه.
- 2 حدد خيارات وحدد حفظ عناصر حفظ هذه الصفحة.
- 3 أدخل اسماً لصفحة ويب بحيث يمكنك التعرف عليها بسهولة.
- 4 حدد حفظ.

تلميح! ستسمح لك أيضاً هذه القائمة بتعديل عناوين الصفحات المحفوظة، وحماية شاشة المذكرة أو إلغاء حمايتها، وحذف الصفحات المحفوظة.

### عرض محفوظات المتصفح

- 1 من شاشة وضع الانتظار اضغط على **OK** واختر المتصفح. ثم حدد محفوظات.
- 2 فتظهر المحفوظات البصرية. حدد خيارات وحدد إضافة إلى الإشارة المرجعية. لإضافة الصفحة الحالية إلى إشاراتك المرجعية.
- 3 حدد خيارات وحدد محفوظات القائمة. لعرض قائمة بعناوين صفحات ويب التي قمت بزيارتها مؤخراً.

### استخدام قارئ RSS

إنّ RSS أو توزيع المحتوى والتطبيقات عبارة عن مجموعة من أشكال تغذية ويب يتم استخدامها لنشر محتوى يتكرر تحديثه مثل إدخال المدونات أو عناوين الأخبار أو البث الصوتي على ويب podcasts . ويحتوي مستند RSS . والذي يسمى تغذية. أو تغذية ويب. أو قناة. على ملخص محتوى من موقع ويب مرتبط أو على النص الكامل.

### الوصول إلى صفحة محفوظة

- 1 من شاشة وضع الانتظار اضغط على **OK** واختر المتصفح.
- 2 حدد صفحات محفوظة.
- 3 حدد فتح للاتصال بالصفحة المحفوظة.

## المتصفح

**ملاحظة:** في Google تلميح! قد لا يكون الوصول إلى بعض البلدان ممكناً. وهذا يتوقف على خدمات الشبكة.

### إضافة إشارات مرجعية والوصول إليها

لكي تتمكّن من الوصول إلى مواقعك المفضلة على ويب بشكل سريع وسهل. يمكنك إضافة إشارات مرجعية وحفظ صفحات ويب.

- 1 من شاشة وضع الانتظار اضغط على **OK** واختر المتصفح نشط.
- 2 حدد إشارات مرجعية. تظهر قائمة بالإشارات المرجعية على الشاشة.
- 3 لإنشاء حافظّة جديدة. حدد خيارات واختر إنشاء حافظّة جديدة. أدخل اسم حافظّة الإشارات المرجعية.
- 4 لإضافة إشارة مرجعية جديدة. حدد خيارات اضغط إضافة جديد. أدخل اسماً للإشارة المرجعية. يتبعه URL.
- 5 حدد تم. تظهر إشارتك المرجعية في قائمة الإشارات المرجعية.
- 6 للوصول إلى الإشارة المرجعية ما عليك إلا التمرير وصولاً إليها وتحديد فتح.

مع وجود المتصفح في متناول يدك. يمكنك الحصول على آخر الأخبار وتوقعات الطقس وكذلك معلومات تتعلق بالرياضة أو حركة السير كلما احتجت إليها. بالإضافة إلى ذلك. يسمح لك المتصفح بتنزيل أحدث الموسيقى. ونغمات الرنين. والخلفيات والألعاب.

### الوصول إلى ويب

- 1 من شاشة وضع الانتظار اضغط على **OK** واختر المتصفح.
  - 2 للوصول مباشرة إلى شاشة المتصفح الرئيسية. حدد المتصفح. كطريقة بديله. حدد إدخال العنوان واكتب عنوان URL المطلوب. يليه فتح.
- ملاحظة: يتم فرض رسم إضافي عند الاتصال بهذه الخدمة وتنزيل المحتوى. للحصول على تفاصيل تتعلق بالرسم على البيانات. عليك الاتصال بموفر الشبكة.

## Google

الضغط **OK** وحدد Google للوصول إلى خدمات Google.

## الأدوات

### استخدام ساعة الإيقاف

- 1 من شاشة وضع الانتظار اضغط على **OK** و اختر المنسق وأدوات. حدد ساعة الإيقاف.
- 2 حدد بدء لتشغيل المؤقت.
- 3 اختر التداخل إذا أردت تسجيل وقت التداخل.
- 4 حدد إيقاف لإيقاف تشغيل المؤقت.
- 5 اختر استئناف لإعادة تشغيل ساعة الإيقاف في الوقت الذي توقفت فيه أو حدد إعادة ضبط لإعادة بدء التوقيت من جديد.

### تحويل وحدة

- 1 من شاشة وضع الانتظار اضغط على **OK** و اختر المنسق وأدوات. حدد المحوّل.
- 2 اختر ما إذا كنت ترغب في تحويل العملة، أو المساحة، أو الطول، أو الوزن، أو درجة الحرارة، أو الحجم أو السرعة.
- 3 يمكنك الآن تحديد الوحدة وإدخال القيمة التي تريد التحويل منها. تتبعها الوحدة التي تريد التحويل إليها.
- 4 تظهر القيمة المناسبة على الشاشة.

### إضافة مدينة إلى ساعتك العالمية

- 1 من شاشة وضع الانتظار اضغط على **OK** و اختر المنسق وأدوات. حدد الساعة العالمية.
- 2 حدد خيارات، ثم إضافة مدينة. ابدأ بكتابة اسم المدينة التي تريدها وسيظهر الاسم في أعلى الشاشة. كطريقة بديلة، اختر خريطة، وحدد المدينة المطلوبة من الخريطة.
- 3 اضغط على تحديد لتأكيد خيارك.

**تلميح!** إذا كنت مسافراً فيمكنك تغيير منطقتك الزمنية بتحديد خيارات. ثم تغيير المدينة الحالية. اختر المدينة المطلوبة كما هو أعلاه، اضغط تحديد.

## الادوات

### إضافة القائمة السريعة

توفر القائمة السريعة وِصُولاً سهلاً إلى أكثر الوظائف استخداماً. بإمكانك إضافة القائمة المفضلة إلى لائحة القائمة السريعة.

### تعيين المنبّه

1 من شاشة وضع الانتظار اضغط على **OK** واختر أدوات تنبيهات.

2 حدد التاريخ الذي تريد إضافة حدث إليه.

3 حدد وقتاً تريد فيه أن يقوم المنبّه بإصدار صوت.

4 اختر ما إذا كنت تريد أن يرن المنبه يوميا. أو من الاثنين إلى الجمعة. أو من الاثنين إلى السبت. أو من السبت إلى الأربعاء. أو من السبت إلى الخميس. أو من الأحد إلى الخميس. أو من السبت إلى الأحد. أو باستثناء أيام العطل. أو اختر يوم الأسبوع. أو لا تكرر.

5 حدد  وتعديل لتحديد صوت للمنبّه.

6 أضف مذكرة إلى المنبّه وحدد "تم" عندما تنتهي من الكتابة. عندما يصدر المنبه صوتاً ستظهر المذكرة.

7 يمكنك أخيراً تعيين فترة انتظار من 5 دقائق، أو 10 دقائق، أو 20 دقيقة، أو 30 دقيقة، أو ساعة واحدة أو إيقاف.

8 بعد أن تنتهي من إعداد المنبّه. حدد تم. ملاحظة: يمكنك إعداد 5 تنبيهات كحد أقصى.

يصدر المنبّه تنبيهاً حتى لو كان الهاتف متوقفاً عن التشغيل.

### استخدام الحاسبة

1 من شاشة وضع الانتظار اضغط على **OK** واختر المنسق وأدوات. حدد الحاسبة.

2 حدد المفاتيح الرقمية لإدخال الأرقام.

3 بالنسبة إلى الحسابات البسيطة. حدد الوظيفة التي تطلبها) +، -، و X، و ÷ (، يليها =.

4 بالنسبة إلى الحسابات الأكثر تعقيداً. حدد وظيفة لتحديد أمر.

5 قم بتحديد **C<sup>o</sup>** لحذف حرف أو اضغط باستمرار على **C<sup>o</sup>** وأبدأ عملية حسابية جديدة.

## المنسق

### الإعدادات

**التقويم** - يمكنك تعيين التكوينات لعرض التقويم.

**إرسال الجداول وقائمة المهام عبر Bluetooth** - يمكنك إرسال كل البيانات الموجودة في التقويم و/أو قائمة المهام من هاتفك إلى هواتف أخرى باستخدام Bluetooth.

**نسخ احتياطي للتقويم والمهام** - يمكنك إنشاء ملفات النسخة الاحتياطية للتقويم أو قائمة المهام المحفوظة في الهاتف عندما تقوم بإدراج ذاكرة خارجية.

**استعادة التقويم والمهام** - يمكنك إعادة تعيين ملفات النسخة الاحتياطية للتقويم أو المهام عندما تقوم بإدراج ذاكرة خارجية.

**معلومات الذاكرة** - يمكنك عرض معلومات الذاكرة المتوفرة في ما يتعلق بالتقويم، والمهام، والمذكرة والمذكرة السرية.

**مسح الكل** - يمكنك حذف كل البيانات المتعلقة بالتقويم، والمهام، والمذكرة والمذكرة السرية.

- 4 احفظ عنصر قائمة المهام بتحديد تم. تظهر مذكرك على الشاشة في المرة التالية التي تقوم فيها بفتح تطبيق المذكرة.

تلميح! يمكنك تعديل مذكرة موجودة، حدد المذكرة التي تريد تعديلها وحدد تعديل.

تلميح! يمكنك تعديل عنصر وذلك بتحديدك ولمس خيارات وتعديل. أكد على التعديلات التي قمت بها وذلك بتحديد حفظ.

## المشاركة في عنصر في المهام

- 1 من شاشة وضع الانتظار اضغط على **OK** و اختر المنسق. حدد المهام.
- 2 حدد عنصر المهام الذي تريد المشاركة فيه. ثم حدد خيارات.
- 3 حدد إرسال. يمكنك أن تختار المشاركة في عنصر المهام بواسطة رسالة نصية، أو رسالة وسائط متعددة، أو بريد إلكتروني أو بلوتوث .

## إضافة مذكرة

- 1 من شاشة وضع الانتظار اضغط على **OK** و اختر المنسق مذكرة.
- 2 في حال عدم وجود مذكرات موجودة. حدد إضافة.
- 3 اكتب المذكرة. يتبعها حفظ.

## إضافة مذكرة سرية

يمكنك كتابة مذكرة خاصة لحماية خصوصيتك في قائمة المذكرة السرية. قم بإدخال رمز الحماية لاستخدام هذه القائمة.

## استخدام الباحث عن التاريخ

الباحث عن التاريخ هو أداة سهلة تساعدك على احتساب تاريخ الأيام القليلة المقبلة. مثلاً بعد 60 يوماً من تاريخ 02.10.2009 سيكون التاريخ 01.12.2009. إنها أداة مثالية لوضع علامات على المواعيد المحددة.

## المنسق

### إضافة حدث إلى التقويم

- 1 من شاشة وضع الانتظار اضغط على **OK** و اختر المنسق. حدد التقويم.
- 2 حدد التاريخ الذي تريد إضافة حدث إليه.
- 3 حدد خيارات ثم اختر إضافة حدث جديد.
- 4 حدد ما إذا كنت ترغب في إضافة موعد. أو ذكرى سنوية أو عيد ميلاد وحدد تم.
- 5 تحقق من التاريخ وأدخل الوقت الذي تريد أن يبدأ عنده الحدث.
- 6 بالنسبة إلى المواعيد ومناسبات الذكرى السنوية أدخل تاريخ ووقت انتهاء الحدث في المربعين السفليين للتاريخ والوقت.
- 7 حدد تم فيتم حفظ الحدث في التقويم. يقوم رأس مؤشر مربع الشكل بتحديد اليوم الذي تم حفظ أية أحداث فيه وسيرن جرس في وقت البدء المعين للحدث. بحيث يمكنك أن تحافظ على تنظيم أوقاتك.

**تلميح!** يمكنك تعيين العطلة في تقويمك. حدد على حدة كل يوم ستكون فيه في عطلة. ثم اختر خيارات وحدد تعيين أيام العطل. سيتم تظليل كل يوم باللون الأحمر. عندما يحين وقت تعيين تنبيه. يمكنك أن تختار استثناء الأيام المعيّنة كأيام العطل.

### تغيير عرض التقويم الافتراضي

- 1 من شاشة وضع الانتظار اضغط على **OK** و اختر المنسق. حدد الإعدادات.
- 2 حدد التقويم اضغط خيارات واختر عرض الشهر أو عرض الأسبوع.
- 3 اضغط على موافق لتأكيد خيارك.

### إضافة عنصر إلى قائمة المهام

- 1 من شاشة وضع الانتظار اضغط على **OK** واختر المنسق.
- 2 حدد المهام وحدد إضافة.
- 3 عيّن تاريخ عنصر المهمة. وأضف الملاحظات وحدد مستوى للأولوية: عالية، أو متوسطة أو منخفضة.

باستخدام هذه القائمة، يمكنك بسهولة استكشاف محتويات جهازك. عند اختيار هذه القائمة، ستجد محتويات فلاش، صور، أخرى، قوائم التشغيل، أصوات و فيديو.

**تلميح!** ويمكنك أيضاً تحميل جافا MIDlet على هاتفك باستخدام خدمات برتوكول التطبيقات اللاسلكية أو ما يعرف بخدمات WAP. يرجى الملاحظة أنه قد تترتب عليك تكاليف إضافية عند استخدام خدمات على الإنترنت.

### محتويات الفلاش

تحتوي حافظة محتويات الفلاش على كل محتويات الفلاش الافتراضية وتلك التي قمت بتنزيلها.

### أخرى

تستخدم الحافظة أخرى لتخزين ملفات ليست عبارة عن صور، أو أصوات، أو مقاطع فيديو، أو ألعاب أو تطبيقات.

### بطاقة الذاكرة الخاصة بي

إذا قمت بشراء بطاقة ذاكرة خارجية microSD اختيارية، فيمكنك إدارة المزيد من المحتويات.

## الاستوديو

### عرض التطبيقات

المثبتة على هاتفك جافا يمكنك إدارة تطبيقات باستخدام قائمة تطبيقات. كما يمكنك حذف التطبيقات التي تم تنزيلها.

**1** في شاشة وضع الانتظار، اضغط على **OK** وحدد الألعاب والتطبيقات.

**2** اضغط على الألعاب وتطبيقات وحدد التطبيقات.

**3** قم بعرض وإدارة التطبيقات المتوفرة لديك.

### تغيير نمط الشبكة

لتنزيل لعبة، يمكنك تعيين القيمة للاتصال بالإنترنت باستخدام نمط الشبكة.

**1** في شاشة وضع الانتظار، اضغط على **OK** وحدد الألعاب والتطبيقات.

**2** حدد إعدادات المتصفح.

**3** من هنا يمكنك:

أوضاع - يمكنك رؤية النمط وإضافة نمط جديد.

قائمة الشهادات - يمكنك رؤية قائمة الشهادة الخاصة باستخدام تطبيق جافا.

### جاري تثبيت لعبة جافا وتطبيقها

استناداً إلى موافق الخدمة، إن البرامج كافة التي تستند إلى جافا بشأن ألعاب جافا يمكن تحميلها وتشغيلها على الهاتف. يمكنك نقل ملفات برنامج جافا من كمبيوتر متوافق إلى ذاكرة هاتفك مستخدماً بلوتوث، أو جهاز USB ذات تخزين كبير السعة، أو ذاكرة خارجية. إن تنسيق ملفات برنامج جافا هو jad، أو .

إذا قمت بحفظ ملفات برنامج جافا في هاتفك، فيجدر بك أولاً تثبيت الملفات قبل استخدام لعبة جافا أو تطبيقها.

### لتثبيت لعبة جافا وتطبيقها:

**1** في شاشة وضع الانتظار، اضغط على موافق وحدد أشيائي، ثم اختر غير ذلك أو بطاقة الذاكرة (إذا كانت الذاكرة الخارجية مدرجة).

**2** حدد الملف (\*jad أو \*.jar) الذي تود تثبيته ثم اضغط على تثبيت.

**ملاحظة:** ينبغي أن يحتوي ملف jad على ملف jar الخاص به.

**3** حالما يتم تثبيت برنامج جافا، يمكن عرضه في قائمة ألعاب أو تطبيقات حيث يمكنك إجراء عمليات تحديد أو تنفيذ أو حذف.

ملف - تعديل اسم الملف وعرض معلوماته.

إنشاء حافظه جديدة - إنشاء حافظه جديدة ضمن حافظه ملفات الفيديو.

فرز حسب - فرز ملفات الفيديو في ترتيب معين.

عرض الشبكة / عرض اللائحه - عرض قائمه خيارات حسب نوع عرض الشبكة أو عرض اللائحه.

مدير الذاكره - عرض حالة الذاكره.

### الألعاب والتطبيقات

يمكنك تنزيل ألعاب وتطبيقات إلى هاتفك تساهم في تسليتك عندما يكون لديك بعض الوقت للقيام بذلك.

إذا قمت بتنزيل لعبة من الشبكة، فستحتاج إلى تثبيت اللعبة التي قمت بتنزيلها في هاتفك قبل أن تتمكن من اللعب.

### الألعاب

1 في شاشة وضع الانتظار، اضغط على **OK** وحدد الألعاب والتطبيقات.

2 حدد ألعابي وتطبيقاتي، ثم حدد ألعاب.

3 حدد لعبةً واضغط على بدء التشغيل.

#### استخدام قائمة خيارات الألعاب

من حافظتي الألعاب والتطبيقات، تتوفر الخيارات التالية:

إنشاء حافظه جديدة - إنشاء حافظه ضمن قائمه "ألعاب وتطبيقات".

فرز حسب - فرز الألعاب والتطبيقات حسب التاريخ، أو الحجم أو الاسم.

معلومات الملف - عرض المعلومات المتعلقة باللعبة المحددة


إدارة الذاكره - قم بعرض حالة الذاكره.

## الاستوديو

### استخدام الخيارات أثناء مشاهدة ملف الفيديو

حدّد خيارات أثناء مشاهدة ملف فيديو واختر من:

عرض أفقي - عرض الفيديو في لقطة كاملة.

ملاحظة: يمكنك التبديل إلى العرض الأفقي ومن العرض الأفقي إلى العرض العادي باستخدام مفتاح . وذلك أثناء عرض الفيديو.

كنم/إزالة الكتم - تشغيل/إيقاف الصوت.

التقاط - يمكنك حفظ ما يظهر على الشاشة المتوقفة مؤقتًا كملف صورة. (يتوفر هذا الخيار فقط حين يكون الفيديو متوقفًا مؤقتًا.)

تكرار - حدد إيقاف التشغيل. أو واحد أو الكل.

معلومات الملف - عرض تفاصيل الاسم، والحجم، والتاريخ، والوقت، والنوع، والمدة، والأبعاد، والحماية وحقوق النشر.

إرسال - إرسال الفيديو في رسالة أو بريد إلكتروني أو عبر بلوتوث.

### إرسال فيديو كليب

1 حدد فيديو وحدد خيارات.

2 حدد إرسال واختر من ضمن رسالة، أو بريد إلكتروني أو بلوتوث.

3 إذا اخترت رسالة أو بريد إلكتروني، فسيتم إرفاق الفيديو كليب بالرسالة ويمكنك كتابة الرسالة وإرسالها كالمعتاد. أما إذا اخترت بلوتوث فستطالب بتشغيل بلوتوث وسيبحث الهاتف عن جهاز لإرسال الفيديو إليه.

### استخدام قائمة خيارات الفيديو

من حافظة مقاطع الفيديو، يمكنك التحديد من ضمن الخيارات التالية:

إرسال - إرسال فيديو إلى صديق.

نقل - نقل فيديو كليب من ذاكرة الهاتف إلى بطاقة ذاكرة أو العكس بالعكس.

نسخ - نسخ فيديو كليب من ذاكرة الهاتف إلى بطاقة ذاكرة أو العكس بالعكس.

حذف - حذف الفيديو.

تحديد/إلغاء تحديد - تحديد ملفات متعددة.

## التحقق من حالة الذاكرة

يمكنك التحقق من حالة الذاكرة لمعرفة المساحة التي استخدمتها والمساحة المتبقية للاستخدام.

1 من شاشة وضع الانتظار اضغط على **OK** و حدد الاستوديو ثم حافظه الصور.

2 حدد خيارات ثم مدير الذاكرة.

3 اختر ذاكرة الهاتف أو ذاكرة خارجية.

ملاحظة: إذا لم تتوفر لديك بطاقة ذاكرة مدخلة في الهاتف، فلن تتمكن من تحديد ذاكرة خارجية.

## الأصوات

تحتوي حافظه الأصوات على الأصوات الافتراضية والتسجيلات الصوتية، ومن هنا يمكنك إدارة الأصوات، أو إرسالها أو تعيينها كنغمات رنين.

## استخدام صوت

1 من شاشة وضع الانتظار اضغط على **OK** و حدد الاستوديو ثم أصوات.

2 حدد الأصوات الافتراضية أو التسجيلات الصوتية.

3 حدد صوتا وحدد تشغيل للاستماع إليه.

4 حدد خيارات وحدد استخدام ك

5 اختر من ضمن نغمة رنين الصوت

ونغمة رنين الفيديو ونغمة رنين

الرسالة وصوت بدء التشغيل وصوت

يقفاف التشغيل.

## ملفات الفيديو

تعرض حافظه مقاطع الفيديو قائمة بملفات الفيديو التي تم تنزيلها إلى هاتفك وملفات الفيديو التي قمت بتسجيلها على هاتفك.

## مشاهدة فيديو

1 من شاشة وضع الانتظار اضغط على **OK** و حدد الاستوديو ثم حافظه مقاطع الفيديو.

2 حدد فيديو واضغط على تشغيل.

## الاستوديو

### حذف صورة

- 1 من شاشة وضع الانتظار اضغط على **OK** و حدد الاستوديو ثم حافظه الصور.
- 2 حدد الصورة التي تريد حذفها واختر خيارات.
- 3 حدد حذف ثم نعم للتأكيد.

تلميح! لكي تقوم بسرعة بحذف أي ملف في "ملفاتي"، حدده مرة واحدة بحيث يتم تمييزه بواسطة رأس المؤشر واضغط على مفتاح المشغل **CF**. أكد العملية بتحديد نعم.

### نقل صورة أو نسخها

يمكنك نقل صورة أو نسخها بين ذاكرة الهاتف وبطاقة الذاكرة، ويمكنك القيام بذلك إما لتحرير بعض المساحة في إحدى وحدات الذاكرة أو لمنع فقدان الصور.

- 1 من شاشة وضع الانتظار اضغط على **OK** و حدد الاستوديو ثم حافظه الصور.
- 2 حدد صورة وحدد خيارات.
- 3 حدد نقل أو نسخ.

### تحديد صور وإلغاء تحديدها

إذا أردت نقل عدة صور في الوقت نفسه، أو نسخها، أو إرسالها أو حذفها، فعليك أولاً تعريفها وذلك بتحديدتها من خلال وضع علامة اختيار عليها.

- 1 من شاشة وضع الانتظار اضغط على **OK** و حدد الاستوديو ثم حافظه الصور.
- 2 حدد خيارات ثم تحديد/إلغاء تحديد.
- 3 تظهر خانة في الجانب الأيمن السفلي من كل صورة، إذا حددت صورة، فستظهر علامة في الخانة لتحديدها.
- 4 لإلغاء تحديد صورة، حدد الصورة مرة أخرى بحيث تختفي علامة الاختيار من الخانة.
- 5 بعد الانتهاء من تحديد كل الصور المناسبة، اختر أحد الخيارات لتطبيقه على كل الصور.

## إرسال صورة

- 1 اضغط **OK** وحدد ألعاب الاستوديو اضغط للصورة.
- 2 حدد الصورة التي تريد إرسالها اضغط خيارات.
- 3 حدد إرسال واختر من ضمن رسالة أو بريد إلكتروني أو بلوتوث .
- 4 إذا اخترت رسالة أو بريد إلكتروني، فسيتم إرفاق صورتك بالرسالة ويمكنك كتابة الرسالة وإرسالها بشكل عادي. إذا اخترت بلوتوث فستطالب بتشغيل بلوتوث وسيبحث الهاتف عن جهاز لإرسال الصورة إليه.

## استخدام صورة

- يمكنك اختيار الصور لاستخدامها كخلفية، أو صورة جهات اتصال أو صورة بدء التشغيل/إيقاف التشغيل.
- 1 من شاشة وضع الانتظار اضغط على **OK** وحدد الاستوديو ثم حافظه الصور.
  - 2 حدد الصورة ثم اضغط خيارات.
  - 3 حدد استخدام ك واختر من ضمن:

خلفية - تعيين خلفية لشاشة وضع الانتظار.

صورة للاسماء - تعيين صورة إلى شخص معين في قائمة الاسماء المتوفرة لديك بحيث تظهر صورته عند اتصاله بك.

صورة بدء التشغيل - تعيين صورة بحيث تظهر عند تشغيل الهاتف.

صورة إيقاف التشغيل - تعيين صورة بحيث تظهر عند إيقاف تشغيل الهاتف.

## تنظيم الصور

- 1 من شاشة وضع الانتظار اضغط على **OK** وحدد الاستوديو ثم حافظه الصور.
- 2 حدد خيارات ثم فرز حسب.
- 3 اختر من ضمن التاريخ، أو النوع أو الاسم.

## الاستوديو

**نسخ -** نسخ صورة من ذاكرة الهاتف إلى بطاقة ذاكرة أو العكس بالعكس.

**حذف -** حذف صورة.

**تحديد/إلغاء تحديد -** تحديد ملفات متعددة.

**تحرير صورة -** يمكنك تعديل الصورة المحددة.

**طباعة بواسطة البلوتوث -** طباعة بواسطة طباعة ملف صورة بواسطة بلوتوث .

**ملف -** تغيير اسم الملف أو عرض معلوماته.

**إنشاء حافظة جديدة -** إنشاء حافظة جديدة ضمن حافظة ملفات الفيديو.

**عرض شرائح -** بدء عرض شرائح.

**فرز حسب -** فرز الصور في ترتيب معين.

**عرض الشبكة/ عرض اللائحة -** مشاهدة كل صورة في نوع عرض الشبكة أو عرض اللائحة.

**مدير الذاكرة -** عرض حالة الذاكرة.

يمكنك تخزين أية ملفات وسائط متعددة في ذاكرة الهاتف في الاستوديو بحيث يتوفر لديك الوصول السهل إلى كل الصور والأصوات، وملفات الفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة، الفائدة من استخدام بطاقة الذاكرة هي أنها تسمح لك بتحرير مساحة على ذاكرة الهاتف.

### صور

تحتوي حافظة الصور على قائمة بالصور تتضمن الصور الافتراضية المحملة مسبقاً في هاتفك. وصوراً قمت أنت بتنزيلها وصوراً تم التقاطها على كاميرا الهاتف.

### خيارات قائمة حافظة الصور

تتوقف الخيارات المتوفرة لك في الصور على نوع الصورة التي حددتها، ستتوفر لك الخيارات للصور.

**إرسال -** إرسال الصورة إلى صديق.

**استخدام ك -** تعيين الصورة بحيث تظهر على هاتفك في أوقات معينة.

**نقل -** نقل صورة من ذاكرة الهاتف إلى بطاقة ذاكرة أو العكس بالعكس.

2 حدد قائمة القنوات ثم خيارات.

3 اختر إعادة تعيين لإعادة تعيين القناة الحالية أو اختر إعادة تعيين كافة القنوات لإعادة تعيين كافة القنوات.

تلميح! لتحسين استقبال الراديو. قم بتمديد سلك سماعة الرأس الذي يعمل كهوائي الراديو.

الذاكرة المستخدمة - تحقق من حالة كل أنواع الذاكرة الحالية.

الانتقال إلى حافظَة الأصوات - فتح حافظَة التسجيلات الصوتية في حافظَة الأصوات.

3 حدد **OK** لبدء التسجيل.

4 حدد إيقاف لإنهاء التسجيل.

5 حدد تشغيل في "خيارات" للاستماع إلى تسجيلك.

## إرسال التسجيل الصوتي

1 حين تنتهي من التسجيل. حدد "خيارات".

2 حدد إرسال واختر من ضمن رسالة أو بريد إلكتروني أو بلوتوث . إذا اخترت رسالة أو بريد إلكتروني. فستتم إضافة التسجيل إلى الرسالة ويمكنك كتابة الرسالة وإرسالها بشكل عادي. إذا اخترت بلوتوث . فستتم مطالبتك بتشغيل بلوتوث .

ملاحظة: بعد أن تنتهي من التسجيل. حدد خيارات واختر تشغيل. وإرسال. وملف. وحذف. واستخدام ك (لاستخدام التسجيل كنغمة رنين) والانتقال إلى حافظَة الأصوات.

## استخدام مسجّل الصوت

استخدم مسجّل الصوت لتسجيل مذكرات صوتية أو أصوات أخرى.

1 من شاشة وضع الانتظار اضغط على **OK** وحدد الوسائط. حدد وسائط متعددة.

2 حدد مسجّل الصوت ثم "خيارات" واختر من ضمن:

المدة - تعيين مدة التسجيل. اختر من ضمن حجم رسالة MMS . أو 30 ثانية. أو دقيقة واحدة أو بلا تحديد.

الجودة - حدد جودة الصوت.

اختر من ضمن دقيقة جداً. أو دقيقة أو عادية.

## الوسائط المتعددة

### البحث عن محطات



يمكنك ضبط محطات الراديو وذلك بالبحث عنها إما يدوياً أو تلقائياً. وسيتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن تعود بحاجة إلى إعادة ضبطها. للضبط تلقائياً:

- 1 من شاشة وضع الانتظار اضغط على **OK** وحدد الوسائط. حدد راديو FM ثم خيارات.
- 2 حدد تفحص تلقائياً ثم نعم، سيتم تلقائياً تخصيص رقم قناة للمحطات التي يتم العثور عليها.

### للضبط يدوياً:

- 1 في شاشة وضع الانتظار، اضغط على **OK** وحدد وسائط متعددة ثم حدد راديو FM.
- 2 أدخل تردد المحطة التي تود الحفظ فيها.

- 3 حدد تعيين ثم حدد القناة للحفظ.

**ملاحظة:** يمكنك أيضاً أن تضبط إحدى المحطات يدوياً باستخدام  و  الذي يظهر إلى جانب تردد الراديو.

### تعديل القنوات

قد ترغب في نقل المحطات إلى قناة أخرى بحيث يصبح الوصول أكثر سهولة إلى تلك التي تستمع إليها بشكل متكرر.

- 1 من شاشة وضع الانتظار اضغط على **OK** وحدد الوسائط. حدد راديو FM ثم خيارات.

- 2 حدد قائمة القنوات وحدد القناة التي تريد تغييرها.

- 3 حدد محطة من إحدى القنوات الأخرى. أو اضبط القناة يدوياً وفق التردد الذي تريده.

ويمكنك تعديل كل قناة وذلك بتمييزها ولمس خيارات:

- إعادة تسمية - إعادة تسمية القناة.
- استبدال - تعيين تردد جديد للقناة المحددة.

### إعادة تعيين القنوات

- 1 من شاشة وضع الانتظار اضغط على **OK** وحدد الوسائط. حدد راديو FM ثم خيارات.

1 من شاشة وضع الانتظار اضغط على **OK** وحدد الوسائط. حدد موسيقي، ثم قوائم التشغيل.

2 حدد قائمة التشغيل.

3 حدد خيارات وحدد.

**إضافة أغان جديدة** - لإضافة المزيد من الأغاني إلى قائمة التشغيل. حدد الأغاني التي تريد إضافتها وحدد تم.

**إرسال** - إرسال الأغنية كرسالة أو عبر بلوتوث

**إزالة من القائمة** - إزالة أغنية من قائمة التشغيل. حدد نعم للتأكيد.

**تحديد/إلغاء تحديد** - تحديد ملفات متعددة.

**استخدام ك** - يمكنك تعيين الأغنية كتأثير

**معلومات الملف** - عرض الاسم والحجم والتاريخ والوقت والنوع والمدة والحماية وحقوق النشر الخاصة بالأغنية.

**مدير الذاكرة** - عرض حالة الذاكرة.

## حذف قائمة التشغيل

1 من شاشة وضع الانتظار اضغط على **OK** وحدد الوسائط. حدد موسيقي، ثم قوائم التشغيل.

2 حدد خيارات ثم حذف أو حذف الكل لحذف كل قوائم التشغيل.

## الاستماع إلى الراديو

تتوفر في طراز الهاتف LG GD330 ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة للاستماع إليها أثناء التنقل.

من شاشة وضع الانتظار اضغط على **OK** وحدد الوسائط. حدد راديو FM ثم أدخل رقم قناة المحطة التي تريد الاستماع إليها.

**ملاحظة:** ستحتاج إلى إدخال سماعات الرأس لكي تتمكن من الاستماع إلى الراديو. أدخل سماعات الرأس في المأخذ المخصص لها وهو نفسه مأخذ الشاحن.

## الوسائط المتعددة

عشوائي - الاستماع إلى الموسيقى  
بترتيب عشوائي.

المعادل - حدد معادلاً تم تحديده مسبقاً  
مختلفاً.

إضافة إلى قائمة التشغيل - إضافة  
الملف إلى قائمة التشغيل.

الاستماع عبر سماعة الرأس - استمع  
إلى الموسيقى المحددة مستخدماً  
سماعة رأس بلوتوث. (يجب أن تعتمد  
سماعة رأس بلوتوث تشغيل MP3)

إضافة إلى قائمة التشغيل - أضف  
الملف إلى قائمة تشغيل.

معلومات الملف - عرض اسم الأغنية.  
وحجمها.

إرسال - إرسال الأغنية كرسالة أو عبر  
بلوتوث

استخدام ك - استخدم الأغنية كإحدى  
نغمات الرنين. أو نغمات الرسالة. أو نغمات  
بدء التشغيل أو إيقاف التشغيل.

### إنشاء قائمة تشغيل

يمكنك إنشاء قوائم التشغيل الخاصة بك  
وذلك بإنشاء مجموعة مختارة من الأغاني  
من حافظة كل المسارات.

1 من شاشة وضع الانتظار اضغط على  
OK وحدد الوسائط. حدد موسيقى.  
ثم قوائم التشغيل.

2 حدد إضافة، وأدخل اسم قائمة  
التشغيل واضغط على OK حفظ.

3 فتظهر حافظة كل المسارات. حدد  
كافة الأغاني التي تريد تضمينها في  
قائمة التشغيل. فتظهر علامة اختيار  
إلى جانب اسم الملف.

لتشغيل قائمة تشغيل. حددها واختر  
تشغيل.

ملاحظة: لإضافة قائمة تشغيل ثانية.  
حدد خيارات ثم إضافة قائمة تشغيل  
جديدة.

### تعديل قائمة تشغيل

قد ترغب. من وقت إلى آخر. في إضافة أغان  
جديدة أو حذف أغان من قائمة التشغيل.  
عندما ترغب في القيام بذلك. يمكنك  
تعديل قائمة التشغيل.

## الوسائط المتعددة

### الموسيقى

- 1 من شاشة وضع الانتظار اضغط على **OK** وحدد الوسائط. حدد موسيقى ثم **كل المسارات**.
  - 2 حدد الأغنية التي تريد تشغيلها واختر **تشغيل**.
  - 3 اضغط على **OK** لإيقاف تشغيل الأغنية مؤقتاً.
  - 4 اضغط **▶** للانتقال إلى الأغنية التالية.
  - 5 اضغط **◀** للانتقال إلى الأغنية السابقة.
- استخدام الخيارات أثناء تشغيل الموسيقى**
- حدد خيارات واختر من ضمن:
- تصغير** - جعل شاشة مشغل الموسيقى تختفي بحيث يمكنك متابعة استخدام الهاتف بشكل عادي.
  - الانتقال إلى الموسيقى** - انتقل إلى قائمة الموسيقى.
  - تكرار** - حدد لتكرار المسار المحدد. وإيقاف تشغيل التكرار وتكرار الكل.
- يكون مشغل MP3 مضمناً في الهاتف LG GD330 بحيث يمكنك تشغيل كل أنواع الموسيقى المفضلة لديك. للوصول إلى مشغل الموسيقى. حدد موسيقى من القائمة الرئيسية.
- من هنا يمكنك الوصول إلى عدد من الحافظات:
- تم تشغيلها مؤخراً - استمع إلى الأغاني التي قمت بتشغيلها مؤخراً.
  - كافة المسارات** - تحتوي على كل الأغاني الموجودة في هاتفك.
  - الفنانون** - يمكنك استعراض مجموعتك الموسيقية حسب الفنان.
  - الألبومات** - يمكنك استعراض مجموعتك الموسيقية حسب الألبوم.
  - الأنواع** - يمكنك استعراض مجموعتك الموسيقية حسب النوع.
  - قوائم التشغيل** - تحتوي على أي قائمة تشغيل أنشأتها.
  - مزج المسارات** - الاستماع إلى الموسيقى بترتيب عشوائي.

## كاميرا الفيديو

**السطوع** - يعرّف التباين الفرق بين الألوان الفاتحة والداكنة في صورة ما.

### استخدام الضبط المتقدمة

من محدد المنظر حدد **الاعدادات**، وافتح الضبط المتقدمة في الخيارات "الأخرى".

**الحجم** - غير حجم الفيديو لتوفير مساحة في الذاكرة.

**تأثير** - اختر لون التأثيرات التي تريد تطبيقها على الصورة التي تلتقطها.

**توازن اللون الأبيض** - يضمن توازن اللون الأبيض ظهور أي لون أبيض في الفيديو كواقعي. لكي تتمكن الكاميرا من ضبط توازن اللون الأبيض بشكل صحيح قد تحتاج إلى تحديد شروط الإضاءة.

**الجودة** - يسمح بالتحكم بجودة ملف الفيديو.

**المدة** - حدّد الطول الأقصى المسموح به للتسجيل.

**الذاكرة المستخدمة** - اختر ما إذا كنت تريد حفظ ملفات الفيديو في ذاكرة الهاتف أو في الذاكرة الخارجية.

**إخفاء رموز** - عيّن الكاميرا بحيث تقوم بإخفاء الرموز تلقائياً على جانب محدد المنظر.

**الصوت** - اختر "كتم" لتسجيل فيديو بدون صوت.

**ملاحظة: اضغط** "حفظ" دائماً بعد تحديد ضبط جديد لتطبيق التغييرات التي قمت بها.


### مشاهدة ملفات الفيديو المحفوظة

**1** يمكنك الوصول إلى مقاطع الفيديو المحفوظة من ضمن وضع الكاميرا ومن شاشة وضع الانتظار. من محدد المنظر اضغط **البوم** من شاشة وضع الانتظار عليك لمس **OK**، ثم حدد أشياء ومقاطع الفيديو.

**2** حدد الفيديو مرة ثانية لفتحه بشكل كامل.


## كاميرا الفيديو

### التقاط فيديو سريع

1 حرّك مفتاح وضع الكاميرا إلى  .  
فيظهر محدد المنظر في كاميرا الفيديو على الشاشة.

2 قم بتركيز الكاميرا لتسجيل المشاهد التي تريد.

3 اضغط على زر الالتقاط مرة واحدة لبدء التسجيل.

4 يظهر تسجيل في أسفل محدد المنظر. اضغط  لإيقاف التسجيل.


### بعد الانتهاء من التقاط الفيديو


ستظهر على الشاشة صورة ثابتة تمثل الفيديو الملتقط.


بعد تسجيل فيديو كليب، يمكنك التحقق من القائمة كما يلي:


الخيارات - يمكنك تغيير اسم ملف الفيديو.

 ألبوم - شاهد ألبوم الفيديو.

 تشغيل - شغل الملف.

 فيديو جديد - اضغط لالتقاط فيديو آخر على الفور، وسيتم حفظ الفيديو الحالي.

 إرسال - أرسل الفيديو كرسالة MMS . أو بريد إلكتروني أو عبر بلوتوث .

 حذف - احذف الفيديو الذي قمت بالتقاطه الآن وأكد ما تريد القيام به وذلك بلمس نعم، يظهر محدد المنظر من جديد.

رجوع - انتقل إلى القائمة السابقة.

### استخدام الضبط السريع

من محدد المنظر، استخدم مفتاح التنقل وحدد الخيارات التي تود استخدامها.

ألبوم - اضغط للنظر إلى كليات الفيديو الأخرى في الألبوم، سيتم حفظ الفيديو الكليب الحالي.

الكاميرا - اختر للتبديل إلى وضع الكاميرا.

تسجيل - يمكنك تسجيل فيديو كليب.

## الكاميرا

### اختيار وضع الالتقاط

**1** حدّد وضع اللقطة في ضبط لعرض أوضاع اللقطات المتوفرة.

**2** اختر من ضمن الخيارات التالية:

لقطة عادية - هذا هو نوع اللقطة الافتراضي. سيتم التقاط الصورة بالطريقة العادية.

لقطات متلاحقة - يمكنك هذا الخيار من أخذ تسع لقطات تلقائياً بطريقة متتابعة سريعة.

### تغيير حجم الصورة

بقدر ما يكون عدد عناصر البكسل كبيراً. بقدر ما يكون حجم الملف أكبر، وهذا يعني أن الملف سيشغل مساحة أكبر في الذاكرة. إذا أردت أن يستوعب هاتفك أو بطاقة الذاكرة المزيد من الصور، فيمكنك تعديل عدد عناصر البكسل لجعل الملف أصغر حجماً.

**1** حدّد حجم الصورة في الضبط.

**2** حدد قيمة بكسل من ضمن الخيارات الرقمية الستة، **1600x1200**، **1280x960**، **640x480**، **320x240**.

**3** حدد خيار الحجم الذي تريد استخدامه ثم اضغط تحديد لتطبيق التغييرات التي أدخلتها. فتغلق قائمة الإعدادات تلقائياً، وتصبح جاهزة لتمكينك من التقاط الصور.

### عرض الصور المحفوظة

**1** يمكنك الوصول إلى صورك المحفوظة من ضمن وضع الكاميرا ومن الألبوم الموجود في أعلى قائمة الرموز.

**2** يظهر الألبوم على الشاشة.

**3** حدد الصورة مرة ثانية لفتحها بشكل كامل.

### تعيين صورة كإشاشة رئيسية أو صورة جهة اتصال

في ألبوم الصور، حدد صورة وحدد استخدام كإستخدام الصورة كخلفية، أو صورة جهة اتصال، أو صورة بدء التشغيل أو صورة إيقاف التشغيل.

ملاحظة: يمكن إضافة صور الأسماء إلى الأسماء المحفوظة في هاتفك فقط. وليس في بطاقة SIM.

**المؤقت الذاتي** - يسمح لك المؤقت الذاتي بتعيين فترة تأخير بعد ضغط زر الالتقاط. اختر من ضمن 3 ثوانٍ أو 5 ثوانٍ أو 10 ثوانٍ. يُعتبر هذا الأمر جيداً لالتقاط صورة لمجموعة تريد أن تكون أيضاً جزءاً منها!

### **استخدام الضبط المتقدمة**

من محدد المنظر حدد الاعدادات.

**الحجم** - غير حجم الصورة لتوفير مساحة في الذاكرة أو التقاط صورة لجهة اتصال ما تكون

معينة مسبقاً للحجم الصحيح.

**تأثير** - اختر درجة اللون التي تريد تطبيقها على الصورة التي تلتقطها.

**توازن اللون الأبيض** - يضمن توازن الأبيض ظهور أي لون أبيض في الصورة كواقعي. لكي تتمكن الكاميرا من ضبط توازن اللون الأبيض بشكل صحيح قد تحتاج إلى تحديد شروط الإضاءة. اختر من ضمن تلقائي أو ضوء النهار أو غائم أو مضيء أو داخلي.

**الوضع الليلي** - يمكنك التقاط صور أكثر جودة في الليل عن طريق تحديد تشغيل.

**وضع اللقطة** - اختر من ضمن لقطات عادية أو لقطات متلاحقة.

**جودة الصورة** - التحكم بجودة الصورة.

**الذاكرة المستخدمة** - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو في الذاكرة الخارجية.

**إخفاء الرموز** - حدد ما إذا كنت تريد إخفاء الرموز تلقائياً على جانب محدد المنظر.


### **ضبط السطوع**


يعرّف التباين الفرق بين الألوان الفاتحة والداكنة في صورة ما. فتظهر الصورة ذات التباين المنخفض ضبابية، بينما تظهر الصورة ذات التباين العالي أكثر دقة ووضوحاً.

#### **1 حدد السطوع في ضبط.**

**2** ادفع مؤشر التباين عبر الشريط. نحو '-' للحصول على تباين منخفض. وصورة ضبابية أو نحو '+' للحصول على تباين أعلى. وصورة أوضح.

## الكاميرا

 **استخدام ك-** استخدم الصورة كخلفية أو كصورة جهة اتصال أو في شاشة بدء التشغيل أو إيقاف التشغيل.

 **حذف -** احذف الصورة التي قمت بالتقاطها وأكد رغبتك في تنفيذ عملية الحذف بالنقر فوق نعم. يظهر محدد المنظر من جديد.

رجوع - انتقل إلى القائمة السابقة.

### استخدام الضبط السريع

استخدم مفتاح التنقل وحدد الخيارات التي تود استخدامها.


**ألبوم -** ألبوم اضغط للنظر إلى الصور الأخرى في الألبوم.

**كاميرا فيديو -** اختر للتبديل من وضع الصورة إلى وضع كاميرا الفيديو.


**التقاط -** يسمح لك بالتقاط صورة.

**السطوع -** عيّن تباين الصورة في محدد المنظر التابع للكاميرا.

### التقاط صورة سريعة

**1** اضغط على مفتاح الكاميرا  لفتح محدد المنظر.

**2** قم بتركيز الكاميرا لاتخاذ الصورة التي تريد.


**3** اضغط على مفتاح الكاميرا  لالتقاط صورة.


### بعد التقاط الصورة

تظهر الصورة الملتقطة على الشاشة. ويظهر اسم الصورة عبر أسفل الشاشة. وستشاهد ستة خيارات تكون معروضة في الجانب الأيمن من الشاشة.

**الخيارات -** يمكنك تغيير اسم الصورة أو تعديل ملف الصورة.

 **ألبوم -** شاهد الصور التي التقطتها في ألبومك.

 **إرسال -** أرسل الصورة كرسالة MMS، أو بريد إلكتروني أو عبر بلوتوث .

 **صورة جديدة -** التقط صورة أخرى على الفور. وسيتم حفظ صورتك الحالية.

تضمين المرفق - اختر لتضمين المرفق الأصلي.

استرداد تلقائي أثناء التجوال -

اختر لاسترداد رسائلك أثناء وجودك في الخارج، أو إيقاف الاسترداد التلقائي.

إعلام ببريد إلكتروني جديد - اختر ما إذا كان يجب تنبيهك عند وصول رسائل بريد إلكتروني جديدة.

التوقيع - أنشيء توقيعاً على البريد الإلكتروني وشغل هذه الميزة.

الأولوية - اختر مستوى الأولوية لرسائل البريد الإلكتروني.

### تغيير الإعدادات الأخرى

من شاشة وضع الانتظار اضغط على **OK** و حدد رسائل. واختر الإعدادات ثم:

رقم البريد الصوتي - يتم تخزين رقم بريدك الصوتي هنا. اتصل بمشغل الشبكة للحصول على مزيد من المعلومات حول الخدمة التي يقدمها.

رسالة الخدمة - اختر استلام أو حظر رسائل الخدمة. كما يمكنك تعيين حماية الرسالة وذلك بإنشاء قوائم مرسلين موثوق بهم وغير موثوق بهم.

خدمة المعلومات - اختر حالة الاستلام واللغة. وضبط أخرى.

نسخة احتياطية للرسائل - يمكنك نسخ الرسائل النصية الموجودة على ذاكرة الهاتف الى نسخة احتياطية على شكل ملف نص يحفظ في مجلد (أخرى)

## الرسائل

متعددة. يمكنك إدخال تغييرات على:

**وضع الاسترداد** - اختر شبكة محلية أو جواله. إذا اخترت فيما بعد يدوي فستلقى إعلام برسائل MMS فقط ويمكنك حينئذ أن تقرر ما إذا كنت ترغب في تنزيلها بشكل كامل.

**تقرير الاستلام** - اختر للسماح و/أو طلب تقرير استلام.

**إشعار بقراءة الرسالة** - اختر للسماح و/أو إرسال إشعار بقاء الرسالة.

**الأولية** - اختر مستوى أولوية رسالة MMS.

**مدة الصلاحية** - اختر فترة تخزين رسالتك في مركز الرسائل.

**مدة التنشيط** - اختر مدة ظهور الشرائح على الشاشة.

**وضع الإنشاء** - اختر وضع الرسائل.

**وقت الاستلام** - تسليم رسالتك في وقت محدد.

**مركز الرسائل النصية المتعددة** - أدخل تفاصيل مركز الرسائل.

### تغيير اعدادات البريد الإلكتروني

يمكنك تكييف إعدادات البريد الإلكتروني بحيث يعمل وفقاً لتفضيلاتك.

من شاشة وضع الانتظار اضغط على **OK** وحدد رسائل ثم افتح ضبط الرسائل.

حدد بريد إلكتروني ويمكنك من ثم تكييف الضبط التالية:

**حساب البريد الإلكتروني** - يمكنك إعداد حساب بريد إلكتروني.

**السماح بعنوان الرد** - اختر للسماح بإرسال رسائل "تأكيد القراءة".

**طلب عنوان الرد** - اختر ما إذا كان يجب طلب رسائل "تأكيد القراءة".

**الفترة الزمنية للاسترداد** - اختر مدى تكرار قيام الهاتف GD330 بالتحقق من وجود رسائل بريد إلكتروني جديدة.

**تضمين الرسالة في الإرسال والرد** - اختر تضمين الرسالة الأصلية أو عدم تضمينها.

## استخدام الرموز التعبيرية

يمكنك إضفاء الحيوية على رسائلك من خلال استخدام الرموز التعبيرية، وستجد على الهاتف بعض الرموز التعبيرية الشائعة الاستخدام.

1 من شاشة وضع الانتظار اضغط على **OK** و حدد رسائل ثم اختر رموز تعبيرية.

2 حدد "خيارات" لتنفيذ إجراءات تتعلق بالرموز التعبيرية مثل إضافة جديد، أو تعديل، أو حذف أو حذف الكل.

## تغيير ضبط الرسائل النصية

تكون ضبط الرسائل في الهاتف GD330 معرّفة مسبقاً بحيث يمكنك إرسال الرسائل على الفور، وإذا رغبت في تغيير الضبط، فيمكنك القيام بذلك على الشكل التالي.

من شاشة وضع الانتظار اضغط على **OK** و حدد رسائل ثم اختر ضبط الرسائل ثم رسالة نصية.

يمكنك إدخال تغييرات على:

رقم مركز الرسائل - أدخل تفاصيل مركز الرسائل.

تقرير الاستلام - اختر تلقي تأكيد باستلام رسالتك.

مدة الصلاحية - اختر فترة تخزين رسالتك في مركز الرسائل.

أنواع الرسائل - تحويل النص إلى صوت، أو فاكس، أو **X.400** أو بريد إلكتروني.

ترميز الحروف - اختر طريقة ترميز الحروف في رسائلك، ويؤثر هذا الأمر على حجم رسائلك وبالتالي على رسوم البيانات.

إرسال النص الطويل ك - اختر الإرسال ك رسائل الرسائل النصية متعددة أو كرسالة MMS.

## تغيير ضبط رسائل الوسائط المتعدده

تكون ضبط الرسائل في الهاتف GD330 معرّفة مسبقاً بحيث يمكنك إرسال الرسائل على الفور، وإذا رغبت في تغيير الضبط، فيمكنك القيام بذلك على الشكل التالي.

من شاشة وضع الانتظار اضغط على **OK** و حدد رسائل ثم اختر ضبط الرسائل ثم رسالة وسائط

## الرسائل

### إدارة الرسائل

1 من شاشة وضع الانتظار اضغط على **OK** و حدد رسائل ثم صندوق الوارد.

2 حدد "خيارات" ثم اختر القيام بما يلي:  
رد - إرسال رد على الرسالة المحددة.  
إرسال - إرسال الرسالة المحددة إلى شخص آخر.

مكالمة - إجراء مكالمة صوتية أو مكالمة فيديو مع الشخص الذي أرسل لك الرسالة.

حفظ رقم - تحفظ عنوان المرسل في الأسماء.

حذف - حذف الرسالة.

إنشاء رسالة جديدة - فتح رسالة جديدة فارغة أو بريد إلكتروني جديد وفارغ.

تحديد/إلغاء تحديد - وضع علامة على رسائلك للحذف المتعدد.

نسخ ونقل - نسخ الرسائل أو نقلها إلى الهاتف أو بطاقة SIM أو حافظاتي.

مرشح - عرض الرسالة حسب النوع. يؤدي ذلك إلى تجميع رسائل الرسائل النصية بشكل منفصل عن رسائل MMS.

معلومات الرسالة - انظر معلومات إضافية تتعلق بالرسالة. هذه المعلومات تشمل وقت إرسالها وتقرير الاستلام وتقرير القراءة.

إذا شاهدت الرسالة لا توجد مساحة لرسالة SIM. فهذا يعني أنه عليك حذف بعض الرسائل المخزنة في ذاكرة SIM.

إذا شاهدت الرسالة لا توجد مساحة كافية للرسائل يمكنك حذف إما الرسائل أو الملفات المحفوظة لتوفير مساحة.

### استخدام النماذج

يمكنك إنشاء النماذج لرسائل الرسائل النصية و MMS التي ترسلها بشكل متكرر. وستعثر على بعض النماذج الموجودة مسبقاً على هاتفك. ويمكنك تعديل هذه النماذج إذا رغبت في ذلك.

1 من شاشة وضع الانتظار اضغط على **OK** و حدد رسائل ثم اختر النماذج.

2 اختر نماذج نصية أو نماذج وسائط متعددة. ثم يمكنك تحديد خيارات لإضافة نماذج جديدة.

## استرداد بريدك الإلكتروني

يمكنك أن تتحقق من وجود بريد إلكتروني جديد في حسابك تلقائياً أو يدوياً. انظر "تغيير ضبط البريد الإلكتروني" للتحقق تلقائياً.

### للتحقق يدوياً:

- 1 من شاشة وضع الانتظار اضغط على **OK** و حدد رسائل ثم صندوق البريد.
- 2 حدد الحساب الذي تريد استخدامه.
- 3 اختر استرداد فيتصل هاتفك بحساب البريد الإلكتروني ويسترد رسائلك الجديدة.

## إرسال بريد إلكتروني باستخدام حسابك الجديد

- 1 من شاشة وضع الانتظار اضغط على **OK** و حدد رسائل ثم اختر إنشاء جديد.
- 2 اختر بريد إلكتروني فيفتح بريد إلكتروني جديد.
- 3 استخدم علامات التبويب وخيارات الإدخال عنوان المستلم وكتابة رسالتك. استخدم إدراج لإرفاق صور أو ملفات فيديو أو أصوات أو أنواع ملفات أخرى.

## 4 حدد إرسال فيتم إرسال بريدك الإلكتروني.

### حافظات الرسائل

**صندوق الوارد** - توضع في صندوق الوارد كل الرسائل التي تستلمها. من هنا يمكنك الرد. وإعادة التوجيه والكثير غير ذلك. انظر أدناه للحصول على التفاصيل.

**صندوق البريد** - توضع في صندوق البريد كل رسائل البريد الإلكتروني التي تستلمها

**المسودات** - إذا لم يكن لديك الوقت الكافي لانتهاه من كتابة رسالة. فيمكنك أن تحفظ هنا ما قمت به حتى اللحظة.

**صندوق الصادر** - عبارة عن حافظة تخزين مؤقت للرسائل فيما يكون إرسالها جارياً.

**المرسلة** - توضع كل الرسائل التي ترسلها في حافظة العناصر المرسلة.

**حافظتي** - يمكنك نقل الرسائل الموجودة في صندوق الوارد أو الرسائل المرسلة إلى حافظاتي. ثم نقل هذه الرسائل الموجودة في حافظاتي إلى صندوق الرسائل الأصلي.

## الرسائل

رقم منفذ الوارد - هذا الرقم هو عادة 110 لحسابات POP3 و 143 لحسابات IMAP4.

**SMTP مصادقة** - اختر ضبط الحماية لخدم البريد الصادر.

الوارد يستخدم **SSL** - اختر ما إذا كنت ترغب في استخدام SSL لخدم الوارد.

**SMTP مصادقة** - اختر ضوابط الحماية لخدم البريد الصادر.

اسم مستخدم **SMTP** - أدخل عنوان البريد الإلكتروني الخاص بك من موفر البريد الإلكتروني. (إذا كانت مصادقة SMTP قيد التشغيل)

**كلمة مرور SMTP** - أدخل كلمة المرور الخاصة بعنوان بريدك الإلكتروني من موفر البريد الإلكتروني. (إذا كانت مصادقة SMTP قيد التشغيل)

**APOP** تسجيل دخول آمن ل- اختر لتنشيط تسجيل دخول آمن ل APOP لحساب POP3. تكون حسابات IMAP4 دوماً معيّنة إلى إيقاف.

حفظ في خادم - رسائل البريد الإلكتروني في خادم. بالنسبة إلى حسابات IMAP4 يتم دوماً حفظ النسخ.

حفظ البريد المرسل في - اختر المكان الذي تريد حفظ البريد الإلكتروني لحسابات IMAP4. بالنسبة إلى حسابات POP3 يتم دوماً حفظ النسخ في الهاتف.

نقطة الوصول - اختر نقطة الوصول إلى إنترنت.

استرداد تلقائي - حدد هذا الخيار لاسترداد رسائل البريد الإلكتروني تلقائياً.

ضوابط متقدمة - اختر ما إذا كنت ترغب في استخدام الضوابط المتقدمة.

رقم منفذ **SMTP** - يكون هذا الرقم عادة 25.

الصادر يستخدم **SSL** - اختر ما إذا كنت ترغب في استخدام SSL لخدم الوارد.

- 5** باستخدام قائمة تعديل في خيارات. يمكنك تعديل قيم الضبط.
- العنوان** - أدخل اسماً لهذا الحساب.
- اسمي** - أدخل اسمك.
- اسم المستخدم** - أدخل اسم مستخدم الحساب.
- كلمة المرور** - أدخل كلمة مرور الحساب.
- عنوان البريد الإلكتروني** - أدخل عنوان البريد الإلكتروني لهذا الحساب.
- عنوان بريد الرد** - أدخل عنوان البريد الإلكتروني "الرد على".
- ملقم البريد الصادر** - أدخل تفاصيل الحساب.
- خادم البريد الوارد** - أدخل تفاصيل الحساب.
- الحد الأقصى لحجم الاستلام** - رسائل البريد الإلكتروني. الحجم الأقصى هو 1MB كيلو بايت.
- نوع صندوق البريد** - أدخل نوع صندوق البريد أو POP3 أو IMAP4.
- مركز خدمة الصادر** - أدخل عنوان IP أو اسم المضيف لخادم البريد الصادر (SMTP).
- مصادقة SMTP** - قم باختيار تنشيط ضبط الحماية لخادم البريد الصادر.
- إذا كانت مصادقة SMTP قيد التشغيل، يطالبك خادم الصادر باسم مستخدم وكلمة مرور لدى قيامك بإرسال بريد إلكتروني.
- اسم مستخدم SMTP/كلمة مرور** - قم بإدخال عنوان بريدك الإلكتروني وكلمة المرور من موثر البريد الإلكتروني. (إذا كانت مصادقة SMTP قيد التشغيل)
- اسم الحساب** - قم بإدخال اسم صندوق البريد الذي تود الإشارة إليه في الحساب.
- 4** بعد إدخال حساب البريد الإلكتروني، حدد موافق للحفظ.
- لقد تم إعداد حسابك الآن. وسيظهر في قائمة الحسابات في حافظة البريد الإلكتروني.

## الرسائل

### إعداد البريد الإلكتروني

بإمكانك البقاء على تواصل أثناء التنقل وذلك باستخدام البريد الإلكتروني في الهاتف GD330. فعملية إعداد حساب بريد إلكتروني POP3 أو IMAP4 هي عملية بسيطة وسهلة.

1 من شاشة وضع الانتظار اضغط على **OK** و حدد رسائل ثم حدد الاعدادات الرسائل.

2 حدد بريد إلكتروني ثم حدد حسابات البريد الإلكتروني.

3 في حال عدم تعيين حساب بريد إلكتروني، يمكنك إعداد حساب مستخدماً معالج إعداد البريد الإلكتروني.

عنوان البريد الإلكتروني/كلمة المرور - قم بإدخال عنوان بريدك الإلكتروني وكلمة المرور.

اسم المستخدم - قم بإدخال معرف مستخدم الحساب.

نوع صندوق البريد - قم بتحديد نوع بروتوكول إنترنت المستخدم لنقل البريد الإلكتروني. أو IMAP4 أو POP3.

مركز خدمة الوارد - أدخل عنوان IP أو اسم المضيف لخادم البريد الوارد (IMAP4 أو POP3).

**ملاحظة:** يمكنك استخدام المفتاح لتغيير كلمات القاموس التكهنية في وضع T9.

إذا لم تظهر الكلمة المطلوبة، فالمرس خياراً وحده إضافة إلى القاموس ثم يمكنك إدخال الكلمة باستخدام اليدوي. تضاف كلمتك إلى القاموس. ABC وضع.

ملاحظة: يمكنك تحديد لغة T9 مختلفة وذلك بلمس خيارات وتحديد لغة الكتابة.

### وضع ABC اليدوي

يتيح لك هذا الوضع إمكانية القيام بإدخال الحروف عن طريق الضغط على المفتاح المطبوع الذي يحمل الحرف المراد كتابته وذلك لمرة واحدة فقط أو مرتان أو ثلاث أو أربع مرات حتى يتم عرض الحرف المراد على شاشة عرض الهاتف.

### 123 وضع

اكتب الأرقام وذلك باستخدام ضغطة واحدة لكل رقم. يمكنك أيضاً إضافة أرقام مع البقاء في أوضاع الأحرف وذلك بالضغط باستمرار على المفتاح المطلوب.

لتشغيل وضع T9 في حقل إدخال النص. حدد خيارات، وحدد تعيين T9 واختر تشغيل. عندما يكون وضع T9 قيد التشغيل، يمكنك تبديل وضع إدخال النص وذلك بضغط **↵**. وستلاحظ مؤشر وضع إدخال النص في الزاوية اليمنى العليا من الشاشة.

لإدخال رمز في حقل إدخال النص. اضغط المفتاح **☰** وحدد رمزاً، ثم حدد **OK**.

أكمل كل كلمة بمسافة وذلك بضغط **⏏**.

لحذف حرف. اضغط المفتاح **C#**.

### وضع T9 التنبؤي

يستخدم وضع T9 التكهني قاموساً مضمناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسلات المفاتيح التي تضغط عليها. ما عليك إلا ضغط مفتاح الرقم المقترن بالحرف الذي تريد إدخاله. وسيتعرف القاموس على الكلمة فور أن يتم إدخال كل الأحرف.

**⚠ تحذير:** تحذير: إذا تمت إضافة صورة، أو صوت، أو فيديو، أو شريحة جديدة أو موضوع إلى محرر الرسائل، فسيتم تلقائياً تحويل العنصر المضافة إلى وضع رسالة وسائط متعددة و سوف تحاسب على هذه الرسالة حسب تعريفه بلدك لرسالة الوسائط المتعددة.

### إدخال النص

يمكنك إدخال الأحرف الأبجدية والرقمية باستخدام

لوحة المفاتيح على الهاتف. فتخزين الأسماء في

الأسماء، وكتابة رسالة، وإنشاء أحداث

مجدولة في التقويم كلها عمليات تتطلب إدخال

النص. وتتوفر أساليب إدخال النص التالية في T9 الهاتف: وضع ABC/Abc/abc التكهني، ووضع ووضع اليدوي. 123.

**ملاحظة:** قد تسمح بعض الحقول بوضع إدخال نص واحد فقط (مثل رقم الهاتف في حقول دفتر العناوين).

## الرسائل

### الرسائل

وظائف متعلقة بخدمة GD330 يتضمّن الهاتف خدمة الرسائل القصيرة، وخدمة الرسائل النصية المتعددة، والبريد الإلكتروني، وكذلك رسائل خدمة الشبكة، ما عليك إلا لمس قائمة وتحديد رسائل.

### إرسال رسالة

1 من شاشة وضع الانتظار اضغط على **OK** و حدد رسائل ثم اختر إنشاء رسالة جديدة.

2 إذا اخترت "رسالة"، فستفتح رسالة الرسائل النصية الجديدة.

3 يفتح محرر رسائل جديدة، يجمع محرر الرسائل ما بين رسالة قصيرة ورسالة وسائط متعددة ضمن واجهة بديهية واحدة سهلة الاستخدام للتبديل بين وضع رسالة قصيرة ووضع رسالة وسائط متعددة، الضبط الافتراضي لمحرر الرسائل هو وضع رسالة قصيرة.

### 4 أدخل رسالتك باستخدام وضع T9 التكهني أو وضع ABC اليدوي.

تلميح! يمكنك تحديد نوع الرسالة كرسالة قصيرة أو رسالة وسائط متعددة عندما تقوم بإدخال نص يتجاوز طوله طول صفحتين في حقل الرسالة، إذا أردت تغيير نوع الرسالة التي تود إرسالها، فراجع في الصفحة 34 القائمة إرسال النص الطويل كـ في تغيير ضوابط الرسائل النصية.

5 المس خيارات وحدّد إدراج لإضافة صورة أو فيديو أو صوت أو رموز أو نموذج أو رموز تعبيرية أو الاسم والرقم أو الشريحة الجديدة أو الموضوع أو المزيد (بطاقة عمل/جدول/مذكرة/المهام/بطاقة العمل الخاصة بي).

6 اضغط إرسال.

7 ابحث في قائمة الأسماء أو اضغط مفتاح الرقم لإدخال رقم الهاتف.

8 اضغط إرسال.

**مسح الاسماء - مسح كل الاسماء**  
المتوفرة لديك. المس نعم إذا كنت تريد  
بالتأكيد مسح دفتر عناوينك.

**معلومات الذاكرة - يمكنك التحقق من**  
كمية مساحة الذاكرة المتوفرة على  
الهاتف أو على بطاقة SIM.

## الاسماء

### إنشاء بطاقة عمل

يمكنك إنشاء بطاقة عمل خاصة بك وذلك بتحديد "بطاقة العمل الخاصة بي" و"إضافة". بعد إدخال الاسم والرقم والبريد الإلكتروني والصورة، يمكنك استخدام هذه البطاقة كبطاقة عمل عند إرسال رسالة.

### تغيير اعدادات الاسماء

يمكنك تكييف اعدادات الاسماء بحيث يعمل دفتر عناوينك وفقاً لتفضيلاتك.

**1** في شاشة وضع الانتظار، اضغط على **OK** وحدد الاسماء.

**2** حدد اعدادات، من هنا يمكنك تنظيم الاعدادات التالية:

اعدادات قائمة الاسماء - اختر ما إذا كنت ترغب في عرض الاسماء في الهاتف وبطاقة SIM أو الهاتف فقط أو بطاقة SIM فقط. كما يمكنك أن تختار إظهار اسم جهة الاتصال الأول أو الاسم الأخير أولاً، وإظهار صورة جهة الاتصال.

نسخ - نسخ الاسماء من بطاقة SIM إلى الهاتف أو من الهاتف إلى بطاقة SIM. ويمكنك أن تختار بين نسخ الاسماء الواحدة بد الأخرى أو نسخ الكل معاً.

نقل - يعمل هذا الأمر بالطريقة نفسها التي يعمل بها الأمر نسخ. غير أن جهة الاتصال ستحفظ فقط في الموقع الذي تم نقلها إليه. إذا نقلت جهة اتصال من بطاقة SIM إلى الهاتف فسيتم حذفها من ذاكرة بطاقة SIM.


إرسال كافة الاسماء عبر ملاحظه - يرسل هذا الأمر معلومات كافة الاسماء إلى هاتف آخر عبر ملاحظه.

إجراء نسخ احتياطي للاسماء - يمكنك حفظ كل بيانات دليل الهاتف الموجودة في الهاتف في بطاقة ذاكرة خارجية على شكل .vcard.

استعادة الاسماء - يمكنك استعادة كل بيانات دليل الهاتف الموجودة في بطاقة ذاكرة خارجية إلى ذاكرة الهاتف على شكل .vcard.

**تلميح!** يمكنك تعديل مجموعة موجودة عبر تحديدها واختيار خيارات. اختر إضافة عضو إلى المجموعة من الاسماء المتوفرة لديك. أو قم بتعيين نقطة رنين للمجموعة. أو أعد تسمية المجموعة أو احذف مجموعة.

### استخدام أرقام الاتصال بالخدمة

يمكنك عرض قائمة أرقام الاتصال بالخدمة (SDN) التي تم تعيينها من قبل موفر الخدمة لديك (إذا كانت معتمدة من قبل بطاقة SIM). وتتضمن (USIM) كانت معتمدة من قبل بطاقة هذه الأرقام أرقام الطوارئ واستعلامات الدليل والبريد الصوتي. بعد تحديد رقم خدمة، اضغط على  لطلب الخدمة.

### عرض رقمك الخاص

يسمح لك بعرض رقمك الخاص في بطاقة SIM.

**حذف** - حذف جهة الاتصال.

**إدخال نص** - يمكنك تعيين أسلوب إدخال النص.

**الاتصالات السريعة** - يمكنك تعيين جهة الاتصال هذه إلى رقم اتصال سريع.

### إنشاء مجموعة

- 1 في شاشة وضع الانتظار، اضغط على **OK** وحدد الاسماء.
  - 2 حدد مجموعات واختر خيارات.
  - 3 حدد إضافة مجموعة جديدة.
  - 4 أدخل اسماً للمجموعة الجديدة.
  - 5 المس تم.
- ملاحظة:** إذا قمت بحذف مجموعة، فلن تفقد الاسماء التي كان قد تم تعيينها إلى تلك المجموعة. بل ستبقى موجودة في دفتر عناوينك.

## الاسماء

أو باستخدام الطريقة الأسرع بعض الشيء...

- 1 أدخل الرقم الذي ترغب في تخزينه على شاشة وضع الانتظار وحدد خيارات.
- 2 حدد حفظ الرقم واختر جهة اتصال جديدة أو تحديث جهة الاتصال.
- 3 أدخل المعلومات المناسبة كما جاء أعلاه وحدد تم.

### خيارات الاسماء

هناك العديد من الأمور التي يمكنك القيام بها عند عرض جهة اتصال. إليك الطريقة التي تتيح لك الوصول إلى قائمة الخيارات واستخدامها:


- 1 افتح جهة الاتصال التي تريد استخدامها.
  - 2 المس مفتاح الاختيار الأيسر لفتح قائمة الخيارات. من هنا يمكنك:
- إرسال رسالة** - إرسال رسالة أو بريد إلكتروني إلى جهة الاتصال.
- إرسال بطاقة عمل** - إرسال تفاصيل تتعلق بجهة الاتصال إلى شخص آخر كبطاقة عمل. اختر إرسال بطاقة العمل كرسالة نصية. أو رسالة وسائط متعددة. أو بريد إلكتروني أو عبر ملاحظته.
- إجراء مكالمة صوتية** - اتصل بجهة الاتصال.
- إضافة جهة اتصال جديدة** - يمكنك إضافة جهة اتصال جديدة.
- تعديل** - يمكنك تعديل جهة الاتصال.
- إضافة إلى مجموعة** - قم بإضافة جهة اتصال إلى مجموعة.
- تحديد/إلغاء تحديد** - قم بتحديد/إلغاء تحديد الاسماء لاختيار متعدد.
- بحث بحسب** - يمكنك البحث عن الإدخال بحسب الرقم أو المجموعة.
- حفظ في SIM / الهاتف** - اختر ما إذا كنت تريد إجراء عملية نسخ أو نقل إلى بطاقة SIM أو الهاتف (يتوقف هذا على الموقع الأصلي حيث قمت بحفظ جهة الاتصال).

## الاسماء

### البحث عن جهة اتصال

هناك طريقتان للبحث عن جهة اتصال:

#### من شاشة وضع الانتظار

1 في شاشة وضع الانتظار. اضغط على  لفتح دفتر العناوين.


2 حدد الحرف المطابق للحرف الأول في الاسم الذي ترغب في مشاهدته. وهكذا بالنسبة إلى 'Home'، حدد E-H. أو، باستخدام الطريقة الأسرع بعض الشيء...

1 أدخل الرقم الذي ترغب في البحث عنه على شاشة وضع الانتظار وحدد خيارات.

2 اختر البحث عن جهات اتصال في قائمة الخيارات.

تلميح! يمكنك البحث بحسب المجموعة عبر لمس خيارات وتحديد بحث بحسب. ثم تحديد المجموعة. ويؤدي هذا الأمر إلى إحصار قائمة بكل المجموعات لديك.

### من القائمة الرئيسية

1 في شاشة وضع الانتظار. اضغط على  وحدد الاسماء.

2 حدد بحث وأدخل بعض الأحرف الأولى من جهة الاتصال الذي ترغب في العثور عليها باستخدام لوحة المفاتيح.

3 سيقوم دفتر عناوينك بإحضار قائمة بالاسماء المطابقة للأحرف التي أدخلتها.

### إضافة جهة اتصال جديدة

1 اضغط على وحدد الاسماء.

2 حدد إضافة جديد.

3 اختر ما إذا كنت تريد حفظ جهة الاتصال في الهاتف أو SIM.

4 أدخل الاسمين الأول والأخير لجهة الاتصال الجديدة. من غير الضروري إدخال الاسمين. ولكن يجب عليك إدخال أحدهما.

5 أدخل كل المعلومات الموجودة في الحقول المتوفرة وحدد تم.

## المكالمات

**وضع رد البلوتوث -** حدد لا يدوي لكي تتمكن من الرد على مكالمة باستخدام سماعة رأس ملاحظه أو حدد سماعة رأس للضغط على مفتاح موجود على الهاتف للرد على مكالمة عند استخدام سماعة رأس ملاحظه. حفظ رقم جديد حدد نعم لحفظ الرقم الجديد.

**حفظ رقم جديد -** حدد نعم لحفظ الرقم الجديد.

**اعداد إغلاق القطعة المنزلة -** قم بتعيين ما إذا كنت تريد إنهاء الاتصال أم لا عبر إغلاق الغطاء المنزلق.

**رفض المكالمة -** حدد تشغيل أو إيقاف واختر رفض كل المكالمات، أو المكالمات الواردة من مجموعات أو جهات اتصال معيّنة، أو من أرقام غير مسجلة (تلك الأرقام غير المضمّنة في الأسماء أو بدون معرف المتصل).

**إرسال رقمي -** اختر ما إذا كنت ترغب في أن يظهر رقمك عند اتصالك بأحدهم. (توفر هذه الميزة فقط إذا كانت معتمدة من قبل الشبكة التي تستخدمها.)

**معاودة الاتصال التلقائي -** اختر تشغيل أو إيقاف تشغيل.

**وضع الرد -** اختر ما إذا كنت تريد الرد على الهاتف باستخدام مفتاح الإرسال أو أي مفتاح أو بفتح القطعة المنزلة للهاتف.

**منبهه الدقائق -** حدد تشغيل لسماع نغمة بعد مرور كل دقيقة خلال فترة إجراء المكالمة.

## كل الصادر

المكالمات الدولية الصادرة عدا بلد الاصل

صادر دولي ما عدا بلد الاصل

كل الوارد

الغاء كل الحظر

إلغاء تنشيط الكل

4 أدخل كلمة مرور حظر المكالمات. تحقق من توفر الخدمة مع مشغل الشبكة.

استخدام رقم اتصال محدد

1 من شاشة وضع الانتظار اضغط على **OK** وحدد الاتصال.

2 حدد ارقام الاتصال الثابت من القائمة اتصال لتنشغيل وتجميع قائمة بالأرقام التي يمكن طلبها من هاتفك. من مشغل PIN ستحتاج إلى الحصول على رمز 2 الشبكة. وحدها الأرقام المضمّنة في قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها من هاتفك.

## استخدام انتظار المكالمات

1 من شاشة وضع الانتظار اضغط على **OK** وحدد الاتصال.

2 حدد انتظار المكالمات لتنشيط خدمة انتظار المكالمات. إذا تم تنشيط خدمة انتظار المكالمات، فستنبيهك سماعة الهاتف بمكالمة واردة أثناء إجراء مكالمة. ترن نغمة في سماعة الأذن. وتظهر المكالمة الثانية قيد الانتظار على شاشة العرض.

يمكنك وضع المكالمة الأولى قيد الانتظار والإجابة على المكالمة الثانية. (تتوفر هذه الميزة فقط إذا كانت معتمدة من قبل الشبكة التي تستخدمها.)

## تغيير ضبط المكالمات العام

1 من شاشة وضع الانتظار اضغط على **OK** وحدد الاتصال.

2 حدد إعدادات عامة. من هنا يمكنك تعديل ضبط الخيارات التالية:

## المكالمات

مكالمات مستلمة - عرض قائمة بكل الأرقام التي اتصلت بك.

مكالمات لم يرد عليها - عرض قائمة بكل المكالمات التي لم ترد عليها.

تلميح! من أي قائمة مكالمات اضغط مفتاح الاختيار الأيسر وحذف الكل لحذف كل العناصر المسجلة.

من شاشة وضع الانتظار اضغط على **OK** وحدد الاتصال.

كما يمكنك اختيار عرض:

مدة المكالمة - عرض مدة كل المكالمات التي طلبتها وتلك التي استلمتها.

حجم البيانات - عرض كمية البيانات التي استلمتها وأرسلتها بالكيلو بايت.

تكاليف المكالمة - عرض الرسوم المطبقة على الأرقام التي طلبتها (هذه الخدمة تعتمد على الشبكة، فبعض مشغلي الشبكات غير قادرين على دعم هذه الخدمة).

### استخدام تحويل المكالمات

1 من شاشة وضع الانتظار اضغط على **OK** . وحدد الاتصال.

2 حدد تحويل المكالمات.

3 اختر ما إذا كنت تريد أن يتم تحويل كل المكالمات. عندما يكون الخط مشغولاً، أو عند عدم الرد أو عندما لا يكون الوصول إليك ممكناً.

4 أدخل الرقم الذي ترغب في أن يتم التحويل إليه.

5 حدد تنشيط للتنشيط.

ملاحظة: يتم فرض رسوم على تحويل المكالمات. يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.

تلميح! لإيقاف تشغيل تحويل كل المكالمات. اختر إلغاء تنشيط الكل.

### استخدام حظر المكالمات

1 من شاشة وضع الانتظار اضغط على **OK** وحدد الاتصال.

2 حدد حظر المكالمات.

3 حدد خياراً من ضمن الخيارات الستة أو كلها:

## الاتصال السريع

يمكنك تعيين رقم اتصال سريع لجهة اتصال تتصل فيها بشكل متكرر.

1 من شاشة وضع الانتظار اضغط على **OK** وحدد الأسماء.


2 حدد الاتصال السريع.

3 يتم مسبقاً تعيين بريدك الصوتي إلى رقم الاتصال السريع أ ولا يمكنك تغيير ذلك.

حدد أي رقم آخر لتعيينه كرقم اتصال سريع لجهة اتصال.

4 يفتح دفتر العناوين. حدد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم وذلك بلمس رقم هاتفها مرة واحدة.

لطلب رقم اتصال سريع:

• اضغط على الرقم الذي قمت بتعيينه إلى جهة اتصال ثم اضغط على مفتاح الإرسال  أو **OK**.

• اضغط باستمرار على الرقم الذي قمت بتعيينه إلى جهة اتصال حتى تظهر جهة الاتصال على الشاشة.

## إجراء مكالمة ثانية

1 خلال المكالمة الأولية، اضغط **OK** وخيارات ومن ثم حدد إضافة مكالمة جديدة.

2 اطلب الرقم أو ابحث في الأسماء.

3 اضغط على  لتوصيل المكالمة.

4 يتم عرض المكالمتين معاً على شاشة المكالمة، ويتم إقفال المكالمة الأولية وبوضع المتصل في حالة الانتظار.

5 حدد تبديل للتبديل بين المكالمتين.

6 لإنهاء إحدى المكالمتين أو كلاهما حدد خيارات إنهاء يلي ذلك الكل أو نشطة.

ملاحظة: سيُفرض عليك رسم مقابل كل مكالمة تجربها.

## عرض سجلات المكالمات

من شاشة وضع الانتظار، اضغط **OK** وحدد الاتصال ثم سجلات المكالمات، اختر عرض ما يلي:





كل المكالمات - عرض قائمة كاملة تتضمن كل الأرقام التي طلبتها.

واستلمتها ولم ترد عليها.

مكالمات صادرة عرض قائمة بكل الأرقام التي طلبتها.

## المكالمات

### إجراء مكالمة صوتية



- 1 أدخل رقم هاتف شاملاً رمز المنطقة بالكامل.  
لحذف رقم اضغط على .  
لحذف كافة الأرقام اضغط باستمرار على .
- 2 اضغط على  لإجراء مكالمة.
- 3 اضغط على  أو أغلق الهاتف لإنهاء المكالمة.

### إجراء مكالمة من الأسماء


من السهل الاتصال بأي شخص قمت بتخزين رقمه في الأسماء في هاتفك.

- 1 اضغط  لفتح دفتر العناوين.
- 2 قم بالتمرير إلى جهة الاتصال لإجراء مكالمة.
- 3 اضغط المفاتيح  لبدء المكالمة.
- 4 لإنهاء المكالمة. اضغط المفاتيح .

### إجراء مكالمات دولية

- 1 اضغط باستمرار على  لإضافة البادئة الدولية. فيضع الحرف "+" رمز الوصول الدولي في المقدمة.
- 2 أدخل رمز البلد. ورمز المنطقة ورقم الهاتف.
- 3 اضغط على .

### الرد على مكالمة ورفضها

- عندما يرنّ هاتفك اضغط على مفتاح المشغل  للإجابة على المكالمة. اضغط على مفتاح الاختيار الأيمن لكتّم صوت الرنين.
- المس صامت لكتّم صوت الرنين. يُعتبر هذا الأمر جيداً إذا كنت قد نسيت تغيير نمط الهاتف إلى "صامت" أثناء حضور اجتماع ما.
- اضغط على مفتاح الاختيار الأيمن لرفض المكالمة الواردة.

## شريط الحالة

يشير شريط الحالة، باستخدام رموز مختلفة، إلى أشياء مثل قوة الإشارة، ورسائل جديدة وفترة عمل البطارية كما يعلمك ما إذا كانت تقنية ملاحظه أو خدمة GPRS نشطة.

يفسر الجدول التالي معنى الرموز التي من المحتمل أن تشاهدها على شريط الحالة.

الوصف	الرمز	الوصف	الرمز
الذاكرة الخارجية		تعدد المهام	
المكالمات محوَّلة		قوة إشارة الشبكة (يختلف عدد الأشرطة)	
GPRS متوفر		إشارة الشبكة غير متوفرة	
EDGE قيد الاستخدام		البطارية فارغة	
التجوال		رسالة نصية جديدة	
بلوتوث نشط		بريد إلكتروني جديد	
تم رفض المكالمات		تم تعيين تنبيه	
تشغيل الموسيقى الخلفية BGM		النمط "عادي" قيد الاستخدام	
		النمط "صامت" قيد الاستخدام	

## شاشة وضع الانتظار

ومن هنا يمكنك الوصول إلى خيارات القوائم. وإجراء مكالمة سريعة وتغيير الوضع. كما يمكنك القيام بالعديد من الأمور الأخرى.

### لوحة اللمس

يمكن استخدام لوحة اللمس الموجودة في أسفل الشاشة كزر اختيار أيسر/أيمن للتنقل عبر قوائم هاتفك.

- لا حاجة إلى الضغط بقوة. فشاشة اللمس حساسة بشكل كافٍ يتيح لها التعرف على لمسة خفيفة.
- استخدم رأس إصبعك لللمس الخيار المطلوب. احتسب من عدم لمس أي مفاتيح أخرى.



### الاسماء

1. إضافة جديد
2. بحث
3. الاتصال السريع
4. المجموعات
5. أرقام الاتصال بالخدمة
6. رقمي
7. بطاقة العمل
8. الإعدادات



### Google

1. بحث



### المتصفح

1. الصفحة الرئيسية
2. إدخال العنوان
3. العلامات
4. قارئ RSS
5. الصفحات المحفوظة
6. سجل
7. الإعدادات



### الأدوات

1. القائمة السريعة
  2. تنبيهات
  3. الحاسبة
  4. ساعة إيقاف
  5. محول
  6. التوقيت العالمي
  7. خدمة SIM
- \* هذه الميزة تعتمد على SIM وخدمات الشبكة.



### الإعدادات

1. الأوضاع
  2. هاتف
  3. الشاشة
  4. التاريخ والوقت
  5. الشبكة
  6. وضع إنترنت
  7. نقاط الوصول
  8. حزم البيانات
  9. الحماية
  0. مدير الذاكرة
- \* إعادة ضبط الإعدادات



### التوصيل

1. البلوتوث
2. وضع اتصال USB



## خريطة القوائم



### الاتصال

1. سجلات المكالمات
2. مدة المكالمات
3. حجم البيانات
4. تكاليف المكالمات
5. تحويل المكالمات
6. حظر المكالمات
7. أرقام الاتصال الثابت
8. انتظار المكالمات
9. إعدادات عامة



### ألعاب وتطبيقات

1. الألعاب وتطبيقات
2. وقت السياق
3. الإعدادات



### الوسائط

1. الكاميرا
2. كاميرا الفيديو
3. موسيقى
4. راديو FM
5. مسجل الصوت



### المنسق

1. التقويم
2. المهام
3. مذكرة
4. مذكرة سرية
5. محدد التاريخ
6. الإعدادات



### الاستوديو

1. الصور
2. أصواتي
3. الفيديو
4. ألعاب وتطبيقات
5. محتويات فلاش
6. أخرى
7. بطاقة الذاكرة



### الرسائل

1. إنشاء رسالة جديدة
2. صندوق الوارد
3. صندوق البريد
4. المسودات
5. صندوق الصادر
6. المرسلات
7. حافظاتي
8. النماذج
9. رموز تعبيرية
0. الإعدادات

## بطاقة الذاكرة

### تركيب بطاقة ذاكرة

يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة.

تلميح: بطاقة الذاكرة هي عبارة عن ملحق اختياري.

- 1 حرّك بطاقة الذاكرة إلى داخل الفتحة الموجودة في الأعلى، حتى تستقر في مكانها. تأكد من كون ناحية الموصّلات الذهبية موجهة نحو الأسفل..



### تهيئة بطاقة الذاكرة

إذا كانت بطاقة الذاكرة مهيأة، فيمكنك البدء باستخدامها. أما إذا لم تكن البطاقة مهيأة فعليك تهيئتها.

- 1 من شاشة وضع الانتظار اضغط على **OK** حدد الإعدادات واختر إعدادات الهاتف.

- 2 حدد مدير الذاكرة ثم اختر ذاكرة خارجية.

- 3 اضغط التهيئة ثم أكد خيارك.

- 4 أدخل كلمة المرور. إذا كان قد تم تعيينها. فتتم تهيئة بطاقتك وتصبح جاهزة للاستخدام.

**ملاحظة:** تم تعيين رمز الحماية الافتراضي إلى '0000'.

تلميح! لتغيير وجهة التخزين الافتراضية. افتح مدير الذاكرة من قائمة الإعدادات الهاتف وحدد الإعدادات التخزين الأساسي.

**ملاحظة:** إذا تضمّنت بطاقة الذاكرة محتوى موجوداً، فسيتم تصنيفه بشكل تلقائي في الحافظة الصحيحة، فسيتم مثلاً تخزين ملفات الفيديو في حافظة مقاطع الفيديو.

## تركيب بطاقة SIM والبطارية

### 4 تركيب البطارية

أدخل أولاً الجهة العليا للبطارية في الحافة العليا لحجرة البطارية. تأكد من محاذاة موصلات البطارية مع الأطراف الموجودة على الهاتف. اضغط جهة البطارية السفلى إلى الأسفل حتى تستقر في مكانها.



### 5 إعادة غطاء البطارية إلى مكانه

حرك غطاء البطارية باتجاه أعلى الهاتف حتى يستقر في مكانه.

### 6 شحن الهاتف

حرك إلى الخلف غطاء مقبس الشاحن الموجود على جانب الهاتف GD330. أدخل الشاحن وقم بتوصيله بمقبس كهربائي رئيسي. يجب أن يتم شحن الهاتف GD330 حتى تظهر رسالة على الشاشة تفيد بشحن الهاتف بالكامل.



## تركيب بطاقة SIM والبطارية

### 1 نزع غطاء البطارية

ضغظ على مزلاج تحرير غطاء البطارية.  
حرّك غطاء البطارية باتجاه أسفل  
الهاتف وبعيدا عنه.



### 2 إخراج البطارية


ارفع الحافة السفلى للبطارية وقم  
بإخراجها بتأنٍ من حجرتها.



### 3 تركيب بطاقة SIM



ادفع بطاقة SIM إلى داخل حاملها.  
تأكد من كون ناحية الموصّلات الذهبية  
الموجودة على البطاقة موجهة نحو  
الأسفل. لإخراج بطاقة SIM، اسحبها  
بلطف في الاتجاه العكسي.

**تحذير:** لا تقم باستبدال بطاقة SIM  
أو إزالتها أثناء استخدام الهاتف أو عندما  
يكون قيد التشغيل فذلك قد يؤدي إلى فقدان  
البيانات أو إلحاق الضرر ببطاقة SIM.

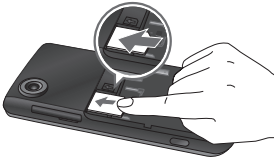

**تحذير:** لا تخرج البطارية عندما يكون  
الهاتف قيد التشغيل. إذ قد يؤدي ذلك إلى  
إلحاق الضرر بالهاتف.

## التعرّف على هاتفك

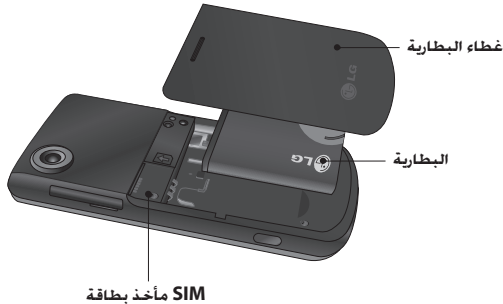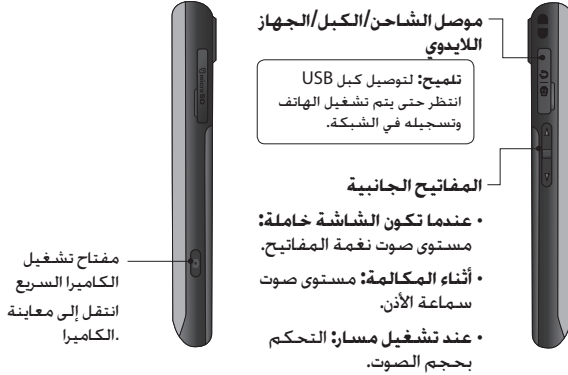

## التعرّف على هاتفك



## إرشادات استخدام آمن وفعال

- ◀ استخدم بطاريات وشواحن LG فقط.
- ◀ فشواحن LG مصمّمة لإطالة فترة عمل البطارية.
- ◀ لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- ◀ حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
- ◀ استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- ◀ أعد شحن البطارية إذا توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- ◀ لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- ◀ لا تترك البطارية في الأماكن الساخنة أو الباردة، فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- ◀ هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- ◀ تخلص من البطاريات المستعملة وفق إرشادات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلص منها كمهملات منزلية.
- ◀ تخلص من البطاريات المستعملة وفق إرشادات الشركة المصنّعة.
- ◀ إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- ◀ قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.

## الاجزاء الزجاجيه

بعض الاجزاء في جهازك الموبايل مصنوعه من الزجاج . وهذا الزجاج معرض للكسر في حاله وقوعه على سطح صلب او تعرض لتأثير ضغط خارجي . في حاله تحطم الزجاج . لا تلمس او تحاول ازالته. توقف عن استخدام جهاز الموبايل لحين استبدال الزجاج من قبل الجبهه المرخصه لصيانه الجهاز.

## في الطائرة

باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.  
◀ أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.  
◀ لا تستعمله على الأرض دون الحصول على إذن من قبل طاقم الطائرة.

## الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

## مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن كافة شبكات الهاتف المحمول. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ. تحقق من ذلك مع موفر الخدمات المحلي.

## معلومات حول البطارية والعناية بها

◀ لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى. لا يوجد تأثير للذاكرة يستطيع تخفيض أداء البطارية.

## منطقة تَجْبِير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود واتبع أية أنظمة أو قوانين.

## مناطق تتسم أجواؤها بالقابلية للانفجار

◀ لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود. لا تستخدمه بالقرب من الوقود أو المواد الكيميائية.  
◀ لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال. أو المتفجرات في حجرة السيارة التي تحتوي على الهاتف المحمول وملحقاته.

## إرشادات استخدام آمن وفعال

- ◀ تشغيل الهاتف بطريقة فعالة  
الأجهزة الإلكترونية  
قد تتعرض كل الهواتف المحمولة  
للتشويش. مما قد يؤثر على أداؤها.
- ◀ لا تستخدم الهاتف المحمول بالقرب  
من الأجهزة الطبية دون طلب الإنع  
للقيام بذلك. تجنب وضع الهاتف على  
أجهزة ضبط النبض. أي الجيب على  
مستوى الصدر.
- ◀ قد تسبب بعض الهواتف المحمولة  
الإزعاج للأدوات المساعدة للسمع.
- ◀ قد يؤثر الحد الأدنى من التشويش على  
أجهزة التلفزيون. والراديو. والكمبيوتر  
الشخصي.
- السلامة على الطرقات**  
تحقق من القوانين والأنظمة المتعلقة  
باستخدام الهواتف المحمولة في المناطق  
أثناء القيادة.
- ◀ لا تستخدم هاتفاً محمولاً باليد أثناء  
القيادة.
- ◀ عليك دوماً تركيز كامل الانتباه على  
القيادة.
- ◀ استخدم مجموعة أدوات لا يدوية. إذا  
كانت متوفرة.
- ◀ توقّف عند جانب الطريق قبل إجراء  
مكالمة أو الإجابة على المكالمة إذا  
كانت ظروف القيادة تستدعي ذلك.
- ◀ قد تؤثر طاقة التردد اللاسلكي على  
بعض الأنظمة الإلكترونية في محرك  
السيارة مثل معدات الستيريو في  
السيارة أو معدات السلامة.
- ◀ عندما تكون المركبة مزودة بكيس  
هوائي. عليك عدم إعاقة عمله بواسطة  
تجهيزات لاسلكية مثبتة أو محمولة.  
فقد يتسبب ذلك بتعطله أو بإصابات  
خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء  
تنقلك فتأكد من كون مستوى الصوت  
معقولاً بحيث تكون مدركاً لما يحيط بك.  
هذا الأمر يعتبر ملزماً خاصة بالقرب من  
الطرقات.
- تجنّب إلحاق الضرر بالسمع**  
قد يلحق الضرر بسمعك إذا كنت تتعرض  
لأصوات عالية لفترات وقت طويلة.  
ونوصي بالتالي بالأتي تقوم بتشغيل الهاتف  
أو إيقافه بالقرب من أذنك. كما نوصي  
بتعيين مستوى صوت معقول للموسيقى  
والمكالمات.

## العناية بالمنتج وصيانته



تحذير

استخدم فقط البطاريات والشواحن والملحقات الموافق على استخدامها لطراز الهاتف المعين هذا. فاستخدام أي أنواع أخرى قد يجعل أي كفالة أو موافقة تنطبق على الهاتف غير صالحة، وقد يكون خطيرا.

◀ لا تحاول فك تجميع هذه الوحدة، اعمل على نقلها إلى تقني صيانة مؤهل عندما تكون بحاجة إلى عمل لإصلاحها.

◀ ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.

◀ يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.

◀ لا تسقط الهاتف.

◀ لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.

◀ قم بإيقاف تشغيل الهاتف في المناطق التي تتطلب تعليمات خاصة، على سبيل المثال، لا تستعمل هاتفك في المستشفيات مما قد يؤثر على الأجهزة الطبية الحساسة.

◀ لا تحمل الهاتف بأيدي مبلولة بينما يقوم بالشحن، قد يسبب بصدمة كهربائية ويؤدي إلى اتلاف الهاتف.

◀ لا تشحن الهاتف قرب مادة قابلة للإشتعال حيث من الممكن ان ترتفع حرارة الهاتف و يؤدي الى خطر الحريق.

◀ استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج، (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).

◀ لا تشحن الهاتف عندما يكون على الأثاث اللين.

◀ يجب ان تشحن الهاتف في منطقة جيدة التهوية.

◀ لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.

◀ لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل: فياستطاعته أن يؤثر على المعلومات الموجودة على الأشرطة المعدنية.

◀ لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

◀ لا تعرّض الهاتف للسوائل أو الرطوبة.

◀ استخدم الملحقات كسماعات الأذن مثلا بحذر، لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

## إرشادات استخدام آمن وفعال

◀ وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هواتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.

◀ حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين Commission on Non-Ionizing Radiation Protection (ICNIRP) هو 2 واط/كغ وهو حد مسمّم على نحو متناسب إلى 10 غرامات من النسيج العضوي للأطراف.

◀ أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختياره بواسطة DASY4 للاستخدام على الأذن تعادل 0.467 واط/كيلوجرام (10 غرام) وعند الحمل على الجسد تكون 0.842 واط/كيلوجرام (10 غرام).

◀ معلومات بيانات SAR للمقيمين في بلدان/مناطق تبني حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين Electrical and Electronics Engineers (IEEE) هو 1.6 واط/كغ كمتوسط لكل غرام واحد (1) من النسيج (مثلاً الولايات المتحدة الأمريكية وكندا وأستراليا وتايوان).

يرجى قراءة هذه الإرشادات البسيطة. قد يكون عدم التقيد بهذه الإرشادات أمراً خطيراً أو غير قانوني. يوفر هذا الدليل المزيد من المعلومات التفصيلية.

التعرض لطاقة التردد اللاسلكي  
معلومات حول التعرض للموجات اللاسلكية  
ومعدل الامتصاص المحدد (SAR)

لقد تم تصميم طراز الهاتف المحمول GD330 هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق المتعلقة بالتعرض للموجات اللاسلكية. ويستند هذا المطلب إلى إرشادات علمية تتضمّن هوامش سلامة مصمّمة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.

◀ تستخدم إرشادات التعرض للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد، أو SAR. وتجري اختبارات SAR باستخدام أساليب تعتمد على المقاييس فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كافة نطاقات التردد التي تم اختبارها.

70..... تغيير ضبط الشاشة.

70..... استخدام التاريخ والوقت.

70..... تغيير ضبط الحماية.

71..... استخدام إدارة الذاكرة.

72..... تغيير الاعدادات الأخرى.

**73**..... الملحقات

**74**..... خدمة الشبكة / عام

**76**..... استكشاف الأخطاء وإصلاحها.

# المحتوى

61	الادوات	53	التحقق من حالة الذاكرة
61	إضافة القائمة السريعة	53	الأصوات
61	تعيين المنبه	53	استخدام صوت
61	استخدام الحاسبة	53	ملفات الفيديو
62	استخدام ساعة الايقاف	53	مشاهدة فيديو
62	تحويل وحدة	53	استخدام الخيارات أثناء مشاهدة
62	إضافة مدينة إلى ساعتك العالمية	54	ملف الفيديو
63	الوصول إلى ويب	54	إرسال فيديو كليب
63	Google	54	استخدام قائمة خيارات الفيديو
63	إضافة إشارات مرجعية والوصول إليها	55	الألعاب والتطبيقات
64	المتصفح	55	الاعباب
64	حفظ صفحة	56	عرض التطبيقات
64	الوصول إلى صفحة محفوظة	56	تغيير نمط الشبكة
64	عرض محفوظات المتصفح	56	جاري تثبيت لعبة جافا وتطبيقها
64	استخدام قارئ RSS	57	محتويات الفلاش
65	تغيير ضبط متصفح ويب	57	أخرى
66	التوصيل	57	بطاقة الذاكرة الخاصة بي
66	إرسال الملفات واستلامها باستخدام بلوتوث	58	المنسق
67	الاقتران بجهاز بلوتوث آخر	58	إضافة حدث إلى التقويم
67	استخدام سماعة رأس بلوتوث	58	تغيير عرض التقويم الافتراضي
67	استخدام الهاتف كوسيلة تخزين ذات سعة كبيرة	58	إضافة عنصر إلى قائمة المهام
67		59	المشاركة في عنصر في المهام
69	الاعدادات	59	إضافة مذكرة
69	تغيير الأوضاع	59	إضافة مذكرة سرية
69	استخدام وضع الرحلات الجوية	59	استخدام الباحث عن التاريخ
69	تغيير اعدادات الهاتف	60	الإعدادات

45	الموسيقى	37	استخدام الرموز التعبيرية
45	تشغيل أغنية	37	تغيير ضبط الرسائل النصية
	استخدام الخيارات أثناء تشغيل		تغيير ضبط رسائل الوسائط
45	الموسيقى	37	المتعدده
46	إنشاء قائمة تشغيل	38	تغيير اعدادات البريد الإلكتروني
46	تعديل قائمة تشغيل	39	تغيير الاعدادات الأخرى
47	حذف قائمة التشغيل	40	الكاميرا
47	الاستماع إلى الراديو	40	النقاط صورة سريعة
48	البحث عن محطات	40	بعد التقاط الصورة
48	تعديل القنوات	40	استخدام الضبط السريع
48	إعادة تعيين القنوات	41	استخدام الضبط المتقدمة
49	استخدام مسجل الصوت	41	ضبط السطوع
49	إرسال التسجيل الصوتي	42	اختيار وضع الالتقاط
50	الاستوديو	42	تغيير حجم الصورة
50	صور	42	عرض الصور المحفوظة
50	خيارات قائمة حافظة الصور	42	تعيين صورة كشاشة رئيسية أو
51	إرسال صورة	42	صورة جهة اتصال
51	استخدام صورة	43	كاميرا الفيديو
51	تنظيم الصور	43	النقاط فيديو سريع
52	حذف صورة	43	بعد الانتهاء من التقاط الفيديو
52	نقل صورة أو نسخها	43	استخدام الضبط السريع
52	تحديد صور وإلغاء تحديدها	44	استخدام الضبط المتقدمة
		44	مشاهدة ملفات الفيديو المحفوظة

# المحتوى

25	الاسماء.....	6	إرشادات استخدام آمن وفعال.....
25	البحث عن جهة اتصال.....	11	التعريف على هاتفك.....
25	من القائمة الرئيسية.....	13	تركيب بطاقة SIM والبطارية.....
25	إضافة جهة اتصال جديدة.....	15	بطاقة الذاكرة.....
26	خيارات الاسماء.....	15	تركيب بطاقة ذاكرة.....
27	إنشاء مجموعة.....	15	تهيئة بطاقة الذاكرة.....
27	استخدام أرقام الاتصال بالخدمة.....	16	خريطة القوائم.....
27	عرض رقمك الخاص.....	18	شاشة وضع الانتظار.....
28	إنشاء بطاقة عمل.....	18	لوحة اللمس.....
28	تغيير اعدادات الاسماء.....	19	شريط الحالة.....
30	الرسائل.....	20	المكالمات.....
30	الرسائل.....	20	إجراء مكالمة صوتية.....
30	إرسال رسالة.....	20	إجراء مكالمة من الاسماء.....
31	إدخال النص.....	20	إجراء مكالمات دولية.....
31	وضع T9 التنبؤي.....	20	الرد على مكالمة ورفضها.....
32	وضع ABC اليدوي.....	21	الاتصال السريع.....
32	123 وضع.....	21	إجراء مكالمة ثانية.....
32	إعداد البريد الإلكتروني.....	21	عرض سجلات المكالمات.....
	إرسال بريد إلكتروني باستخدام.....	22	استخدام تحويل المكالمات.....
35	حسابك الجديد.....	22	استخدام حظر المكالمات.....
35	حافظات الرسائل.....	23	استخدام رقم اتصال محدد.....
36	إدارة الرسائل.....	23	استخدام انتظار المكالمات.....
36	استخدام النماذج.....	23	تغيير ضبط المكالمات العام.....



قد تختلف بعض المحتويات الموجودة في  
هذا الدليل عن هاتفك وذلك استناداً إلى  
إصدار برنامج الهاتف أو  
موفر الخدمة.

## GD330 دليل المستخدم