



عربي
ENGLISH

دليل المستخدم
KP500

ENGLISH
عربي



CE 0168

www.lgmobile.com

P/N : MMBB0307436 (1.1) W

دليل المستخدم
KP500

LG ELECTRONICS INC.

KP500 User Guide

CE 0168

www.lgmobile.com

P/N : MMBB0307436 (1.1) W



عربي
ENGLISH

دليل المستخدم
KP500

ENGLISH
عربي



CE 0168

www.lgmobile.com

P/N : MMBB0307436 (1.1) WR

دليل المستخدم
KP500

LG ELECTRONICS INC.

KP500 User Guide

CE 0168

www.lgmobile.com

P/N : MMBB0307436 (1.1) WR

Bluetooth QD ID B014534



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



KP500 User Guide

Congratulations on your purchase of the advanced and compact KP500 phone by LG, designed to operate with the latest digital mobile communication technology.

Set up	01
Your standby screen	02
The basics	03
Get creative	04
Get organised	05
The web	06
Settings	07
Accessories	08

Contents

Using your phone as Music Syncp

Getting to know your phone	8
Open view	10
Installing the USIM and battery	11
Memory card	13
Menu map	14

Your standby screen

Touch screen tips	15
-------------------------	----

The basics

Calls	20
Making a call	20
Making a call from your contacts	20
Answering and rejecting a call	20
In-call options	21
Speed dialling	22
Making a second call	22
Turning off DTMF	22
Viewing your call logs	22
Using call divert	23
Using call barring	23

Changing the common call setting	24
Contacts	25
Searching for a contact	25
Adding a new contact	25
Creating a group	26
Changing your contact settings	26
Viewing information	27
Messaging	28
Messaging	28
Sending a message	28
Entering text	28
T9 predictive	29
Abc manual	29
Keyboard	29
Handwriting recognition	29
Setting up your email	30
Retrieving your email	30
Sending an email using your new account	30
Changing your email settings	31
Message folders	31
Changing your text message settings ..	32
Changing your multimedia message	

settings	32	Your photos and videos	42
Changing your other settings.....	33	Viewing your photos and videos.....	42
Get creative		Capturing an image from a video	42
Camera	34	Viewing your photos as a slide show....	42
Taking a quick photo	34	Setting a photo as wallpaper.....	43
After you've taken your photo	34	Editing your photos.....	43
Getting to know the viewfinder	35	Adding text to a photo.....	43
Choosing a shot type.....	36	Adding an effect to a photo	44
Adjusting the exposure	36	Multimedia.....	45
Using the advanced settings	36	Pictures	45
Changing the image size.....	37	Sending a photo.....	45
Choosing a colour effect	37	Using an image	45
Viewing your saved photos	37	Printing an image.....	46
Video camera	38	Moving or copying an image.....	46
Shooting a quick video	38	Sounds	46
After you've shot your video.....	38	Using a sound.....	47
Getting to know the viewfinder	39	Videos.....	47
Adjusting the Exposure.....	40	Editing a video clip.....	46
Using the advanced settings	40	Sending a video clip.....	47
Changing the video image size	41	Games and Applications	47
Choosing a colour tone.....	41	Installing a game/application via	
Watching your saved videos	41	local install.....	48
		Playing a game.....	48

Contents

Documents.....	48	Using your calculator.....	54
Transferring a file to your phone.....	48	Converting a unit.....	54
Viewing a file.....	49	Using the stopwatch.....	54
Others.....	49	Adding a city to your worldtime.....	55
Creating a movie.....	49	PC Sync.....	56
Music.....	49	Installing LG PC Suite on your computer.....	56
Transferring music onto your phone....	50	Connecting your phone and PC.....	56
Playing a song.....	50	Backing up and restoring your phone's information.....	56
Creating a playlist.....	50	Viewing your phone files on your PC... 57	
Using the radio.....	51	Synchronising your contacts.....	57
Searching for stations.....	51	Synchronising your messages.....	57
Resetting channels.....	51	Using your phone as Music Sync device.....	57

Get organised

Organiser.....	52
Adding an event to your calendar.....	52
Adding an item to your to do list.....	52
Adding a memo.....	52
Using date finder.....	52
Setting your alarm.....	53
Adding a memo with drawing panel....	53
Voice recorder.....	53
Recording a sound or voice.....	54

The web

Browser.....	59
Accessing the web.....	59
Adding and accessing your bookmarks.....	59
Using RSS reader.....	59
Saving a page.....	60

Accessing a saved page	60
Viewing your browser history.....	60
Changing the web browser settings.....	60
Using your phone as a modem.....	60

Settings

Personalising your profiles	62
Changing your screen settings	62
Changing your phone settings	62
Changing your connectivity settings....	63
Using memory manager.....	64
Sending and receiving your files using Bluetooth	65
Pairing with another Bluetooth device	66
Using a Bluetooth headset	66

Accessories 67

Network service 68

Technical data..... 68

Guidelines

Guidelines for safe and efficient use	70
---	----

Getting to know your phone


End/Power key

Ends or rejects a call.
Turns the phone on/off.
Press once to return to the standby screen.

Multitasking key

Call key

Dials a phone number and answers incoming calls.

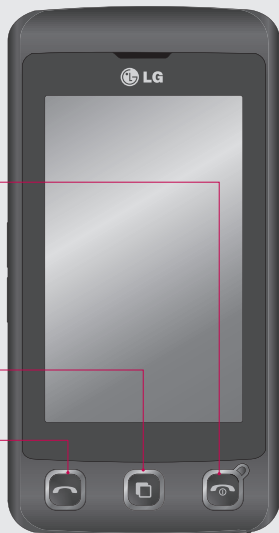

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.



Charger, Cable, Handsfree connector

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.

Side keys

- **When the screen is idle:** volume of key tone.
- **During a call:** volume of the earpiece.
- **When playing a BGM track**
 - **Short press:** controls the volume.



Micro SD memory card socket

Lock/Unlock key

Capture button

Stylus

01

02

03

04


05

06

07

08


Open view

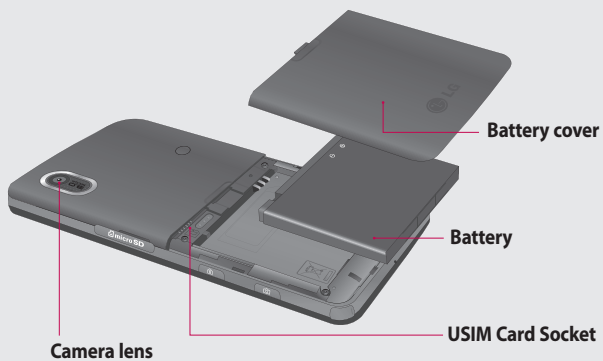

Installing the USIM and battery

1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.

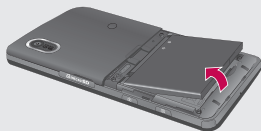

2 Remove the battery

Using the cut-out at the bottom lift it from the battery compartment.



⚠ WARNING: Do not use your fingernail when removing the battery.

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

01

02

03

04

05

06


07

08

Installing the USIM and battery


3 Install the USIM card

Slide the USIM card into the USIM card holder making sure that the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the opposite direction.

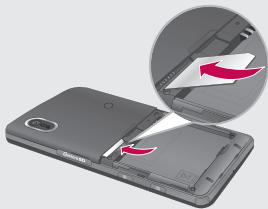

5 Charging your phone

Lift and twist the charger socket cover on the side of your KP500. Insert the charger and plug it into a mains electricity socket. Your KP500 needs to be charged until "Battery full" appears on screen.

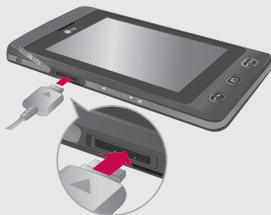


Memory card

Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

NOTE: A memory card is an optional accessory.

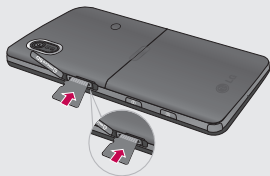

- 1 Open the memory card slot cover on the right hand edge of the phone.
- 2 Slide the memory card into the slot until it clicks into place.



- 3 Replace the cover.

Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.

- 1 From the standby screen select , then touch  and choose **Phone settings**.
- 2 Touch **Memory manager** then chose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will then be formatted and ready to use.

NOTE: If your memory card already has content, it will automatically be filed in the correct folder; for example, videos will be stored in the My Videos folder.

01

02

03

04


05

06

07

08

Menu map

Touch  in the standby screen to open a **Top menu**. From here you can access further menus: **Communicate**, **Entertainment**, **Utilities** and **Settings**.



Communicate

- Dialling
- Speed dials
- Contacts
- Call history
- New message
- New Email
- Messaging



Entertainment

- Gallery
- My stuff
- Camera
- Video camera
- Muvee studio
- Music
- FM radio
- Games & Apps



Utilities

- Browser
- Organizer
- Alarms
- Voice recorder
- Drawing Panel
- Tools
- Sim Tool Kit



Settings

- Profiles
- Screen settings
- Phone settings
- Call settings
- Touch settings
- Bluetooth
- Connectivity

Your standby screen

Whenever your KP500 is not in use it will return to your home screen. From here you can access all the menu options, make a quick call and view the status of your phone as well as many other things.


Touch screen tips

The home screen is also a great place to get accustomed to the touch screen.

To select an item, touch the icon accurately. Your KP500 will vibrate slightly when it recognises you've touched an option. (depends on your touch settings)

To scroll through lists, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- There's no need to press too hard, the touchscreen is sensitive enough to pick up on a light, yet firm, touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other options around it.
- When the screen back light is off, press the Unlock/Lock key on the right hand side to bring back the home screen.

- Don't cover the phone with a case or cover. The touchscreen won't work with any material covering it.
- There are two types of idle screen. Flick left or right to change your idle screen types on the standby screen.
 - 1 Widget idle** - When you touch , the mobile widget panel appears.
 - 2 Speed dial idle** - When you touch , the speed dial list appears. You can drag and click what you need right away in both idle types.

01

02

03

04

05

06

07

08

Your standby screen

Widget idle




Quick keys



Mobile widget

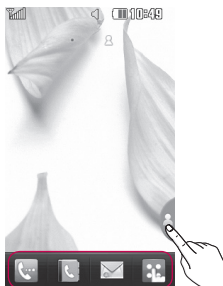

Speed dial idle





Speed dial list


The quick keys

The quick keys provide easy, one-touch access to your most used functions.

 Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Calls** or press the  hard key.

 Touch to open your address book. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones. See page 25 for details.

 Touch to access the Messaging options menu. From here you can create a new SMS or MMS, or view your message folder. See page 28 for details.

 Touch to open the full Top menu which is divided into four vertical sub-menus. Touch each sub-menu's tab to view further options.

01

02

03

04

05

06

07











08















Your standby screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.


Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed


Icon	Description
	An alarm is set
	Customised Profile in use
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enable to use

Changing your Status from the status bar

Touch the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3 and Bluetooth status. Here you can set Profile type, play/pause MP3 and activate/deactivate Bluetooth.

Using the Multitasking function

Press the multitasking hard key  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

01

02

03

04

05





06

07

08

Calls




Making a call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
To delete a digit touch the clear key.
- 3 Press the  Hard key or touch  to initiate the call.
- 4 To end the call press the  hard key.



TIP! To enter + for making an international call, press and hold


 .



Making a call from your contacts

- 1 From the standby screen touch  to open the address book.
- 2 Enter the first few letters of the contact you would like to call.
- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Press the  Hard key or touch  to initiate the call.


Answering and rejecting a call

When your phone rings press the  hard key or touch  to answer the call.


Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.


Press the  hard or touch  to reject an incoming call.

In-call options

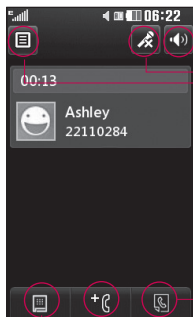



TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.


01 **Speaker** - Touch  to turn on the speaker phone.

02 **Mute** - Touch  to turn off the microphone so the person you are talking to cannot hear you.

03 **Options** - Choose from a list of further in-call options, including **Go to messages**, so you can check your messages, Go to contacts to add or search contacts during a call. You can also end the call from here by touching **End call**.

04  - Choose to search your contacts during a call.

05  - Choose to add another person to the call.

06  - Choose to open a numerical keypad for navigating menus with numbered options. For example, when dialling call centres or other automated telephone services.

01

02

03

04

05

06




07

08




Calls


Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the standby screen touch  and select  and tap .
- 2 Your Voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your address book will open. Select the contact you'd like to assign to that number by touching their phone number once. To find a contact tap the search field box and enter the first letter of the name of the contact required.

Making a second call

- 1 During your initial call, touch  and select the number you want to call.
- 2 Dial the number or search your contacts (see **Making a call** on page 20 for details).
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.


- 6 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

TIP! You can combine your calls by selecting **Accept** then **Join**. Check that your network provider supports conference calling.

NOTE: You will be charged for each call you make.

Turning off DTMF

DTMF allows you to use numerical commands to navigate menus within automated calls. DTMF is switched on as default.

To turn it off during a call (to make a note of a number for example) touch  and select **DTMF off**.




Viewing your call logs

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch , and select  and tap .

TIP! Touch any single call log entry to view the date, time and duration of the call.

Using call divert

- 1 Touch , select  and choose .
- 2 Touch **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch , select  and choose .
- 2 Touch **Call barring**.
- 3 Choose any or all of the six options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
 - Deactivate all**
- 4 Enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

01

02

03

04

05




06

07

08

Calls

Changing the common call setting

- 1 Touch , select  and choose .
- 2 Touch **Common setting**. From here you can amend the settings for:

Call reject - Slide the switch to **On** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts). Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for **On** or right for **Off**.

Answer mode - Choose whether to answer the phone using the send key or any key.

Minute minder - Slide the switch left to **On** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.




Save new number - Select **Yes** to save a new number.

Contacts




Searching for a contact

There are two ways to search for a contact:

From the standby screen


- 1 From the standby screen touch  to open the address book. Select the contact from the list that you want to make a call.
- 2 Touch  or press the  hard key to initiate the call.

From the main menu

- 1 Touch , select .
- 2 Touch .
- 3 You see a list of contacts, typing in the first letter of a contact's name will jump the menu to that alphabetical area of the list.

TIP! The alphabetical keypad is displayed once you tap the blank square.

Adding a new contact

- 1 From the standby screen touch  and touch **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager**, **Fax** and **General**. When you have finished, touch **Close**.
- 5 Add an email address.
- 6 Assign the contact to one or more groups. Choose from **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address** and a **Memo**.
- 8 Touch **Save** to save the contact.

01

02

03

04

05





06

07

08

Contacts

Creating a group




- 1 Touch  and select .
- 2 Touch  then **Groups**.
- 3 Touch .
- 4 Select **Add group**.
- 5 Enter a name for your new group.
You can also assign a ringtone to the group.
- 6 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

Changing your contact settings

You can adapt your contact settings so that your address book suits your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 From the standby screen touch  and select .
- 2 Touch  and select **Settings**.
- 3 From here you can adjust the following settings:

Contact list settings - Choose whether to view contacts saved to both your **Handset & USIM**, **Handset** only or **USIM** only

You can also choose to show the first name or last name of a contact first.

Copy - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

Move - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So if you move a contact from the USIM to the handset it will be deleted from the USIM memory.

Send all contacts via Bluetooth




- Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - See **Backing up and restoring your phone's information** on page 56.

Restore contacts - See **Backing up and restoring your phone's information** on page 56.

Clear contacts - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your address book.

Viewing information

- 1 From the standby screen touch  and select .
- 2 Touch  and select **Information**.
- 3 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.

TIP! If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

01

02

03

04

05

06

07





08

Messaging





Messaging


Your KP500 combines SMS, MMS and email into one intuitive and easy to use menu.


There are two ways to enter the messaging centre:

- 1 Touch  from the standby screen.
- 2 Touch  from the standby screen, then select  and choose .

Sending a message

- 1 Touch  to open a blank message.
- 2 From here you can send an SMS or MMS. To send an email, touch  from the standby screen, then select  and . See page 30 for details.
- 3 Touch **Insert**, to add an image, video, sound or template.
- 4 Touch **To(1)** at the top of the screen to enter the recipient's number, or touch the search icon to open your address book. You can add multiple contacts. Touch **Send** when ready.

 **WARNING:** You will be charged per 1 page text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.


Entering text


There are five ways to enter text:


Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.


You can chose your input method by tapping  and **Input method**.

Tap the screen once, the keyboard appears.


 Touch to turn on T9 predictive text.

 You can choose writing languages.

 Tap to change numbers, symbols and text keypad.

Use  to scroll through the different keyboard types in each text entry mode (for example, capitals or lowercase).

T9 predictive

In T9 mode you will see .

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

Abc manual


In Abc mode you will see .

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

Keyboard

In Keyboard mode the screen flips to landscape and a full keyboard appears on screen.

Simply touch each letter to write your message and press:

 to switch to upper case

Handwriting recognition

In Handwriting mode you simply write on the screen and your KP500 will convert your handwriting into your message. Select **Screen** or **Box** depending on your preferred view.

TIP! You may find it easier to use the stylus in this mode, please remember to press lightly to protect your screen from damage.

Handwriting recognition translates stylus gestures into letters, numbers or other character, and displays these characters as text. Handwriting recognition is only active where text can be entered.

01

02

03

04

05

06




07

08

Messaging

Setting up your email





You can stay in touch on the move using email on your KP500. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Touch  then tap .
- 2 Select  then scroll menu to **Settings**.
- 3 Touch **Email** then **Email accounts**.
- 4 Touch **New Account**.
- 5 Setup Wizard will help you set up your email settings.
- 6 You can check and edit settings by selecting the account in the list. You can also check the additional settings that were filled in automatically when you created the account.
- 7 You can change your default email account by touching **Activate**.

Retrieving your email

You can automatically or manually check your account for new emails. See 'Changing your email settings' on page 30 to check automatically.

To check manually:




- 1 Touch  then select  and .
- 2 Touch **Mailbox**.
- 3 Touch the account you want to use then .
- 4 Choose **Retrieve** and your KP500 will connect to your email account and retrieve your new messages.

Sending an email using your new account

- 1 Touch **New Email** in the **Communicate** menu and a new email will open.
- 2 You can enter the recipient's address and write your message. You can also attach images, videos, sounds or other file types.
- 3 Touch **Send** and your email will be sent.

Changing your email settings

You can change your email settings according to your own preferences.

- 1 Touch  then select  and .
- 2 Touch **Settings** and **Email** and then you can adapt the following settings:

Allow reply Email - Choose to allow the sending of 'read, confirmation' messages.

Request reply Email - Choose whether to request read confirmation messages.

Retrieve interval - Choose how often your KP500 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Include message in Fwd & Reply - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto Retrieval in Roaming -

Choose whether to retrieve your messages automatically when abroad (roaming).

New email notification - Choose whether to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Message folders

You'll recognise the folder structure used on your KP500, which is fairly self-explanatory.

Inbox - All the messages you receive are placed into your inbox From here you can view, delete and more, see **Managing your messages** below for details.

Mailbox - All the emails you receive on your KP500 will be placed in your mailbox.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

01

02

03

04

05

06

07

08

Messaging

Outbox - This is a temporary storage folder while messages are being sent.


Sent items - All the messages you have sent are placed in this folder.

My Folders - Create folders to store your messages.

Changing your text message settings

Your KP500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Settings** on the **Communicate** menu. Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as Multiple SMS or as MMS.

Changing your multimedia message settings

Your KP500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch , select  then . Choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose **Home** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read report - Choose to allow and/or request a reply report.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.


Slide duration - Choose how long your slides appear on screen.


Creation mode - Choose your message mode.

Delivery time - Choose how long before a message is delivered.

Multi msg centre - Enter the details of your message centre.

Changing your other settings

Touch  , choose **Settings** on the **Communicate** menu then:

Voicemail - Touch  to add a new Voicemail service. Contact your network operator for more information on the service they provide.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Info service - Choose your reception status, language and other settings.

01

02

03

04

05



06

07

08

Camera

Taking a quick photo

- 1 Press the  key on the right side of the phone briefly.
- 2 The viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Position the phone so you can see the subject of your photo in the preview screen.
- 5 When the camera has focused on your subject, either press the  on the side of the phone firmly or press the red box on the lower right of the screen to take the photo.

After you've taken your photo

Your captured photo will appear on screen. The name of the image runs along the bottom of the screen together with six icons down the right side.



Touch to move to your gallery.



Touch to send the photo as a message, e-mail or Bluetooth. See page 28 for Sending a message, and page 65 for Sending and receiving your files using Bluetooth.



Touch to edit the photo.



Touch to set the picture you have taken as Wallpaper.




Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.



Touch to take another photo straightaway. Your current photo will be saved.


Getting to know the viewfinder

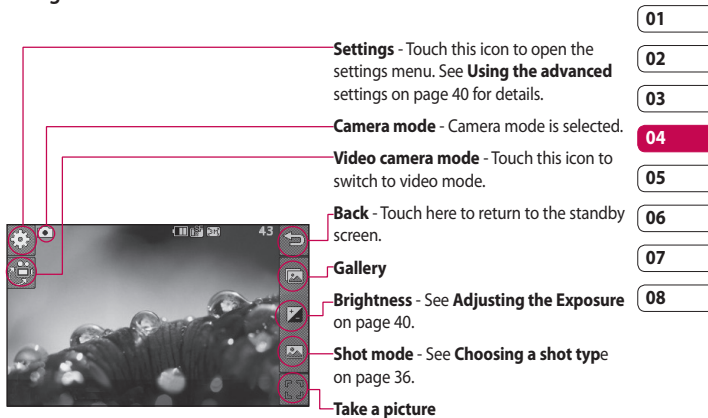

TIP! You can bring up the options by tapping the screen. They auto turn off after a few seconds.


Camera

Choosing a shot type


- 1 Touch  to open the available shot types.
- 2 Choose from two options:
 - Normal shot** - This is the default shot type, the photo will be taken in the normal way, as outlined in taking a quick photo.
 - Burst shot** - This enables you to take 3/6/9 shots automatically in very quick succession.

Adjusting the exposure

Exposure defines the difference between light and dark (contrast) in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch  .
- 2 Slide the contrast indicator along the bar - left for a lower exposure, hazier image or right for a higher exposure, sharper image.

Using the advanced settings

From the viewfinder touch  to open all the advanced settings options.

Preview settings

Size - Change the size of the photo to save on memory space or take a picture

preset to the correct size for contact. See **Changing the image size** on page 37.

Colour Effect - Choose a colour tone to apply to the photo you're taking. See Choosing a colour effect on page 37.

White balance - Choose from Auto, Incandescent, Sunny, Fluorescent or Cloudy.

Night mode - Useful to use at dark place.

Self-timer - The self-timer allows you to set a delay after the capture button is pressed before the camera takes the picture. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

View mode - Choose from Full screen or Full image. In Full screen some clipping of the image may occur.

Other settings

Memory - Choose whether to save your photos to the Handset memory or to the External memory.

Shutter sound - Select one of the three shutter sounds.


Grid screen - Choose from Off, Simple cross or Trisection

Reset settings - Reset all the camera settings.


TIP! When you exit the camera all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example colour tone. Check them before you shoot your next photo.

Changing the image size

The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.


- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Size** from the Preview menu.
- 3 Select a pixel value from the six numerical options (**3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 400x240(W), 320x240**)

Choosing a colour effect

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options: **Off, Black & White, Negative** or **Sepia**.

TIP! You can change a photo taken in colour to black and white or sepia after it's taken, but you cannot change a picture taken in black and white or sepia back to colour.

Viewing your saved photos

- 1 You can access your saved photo's from within the camera mode. Simply touch  and your gallery will appear on screen.

01

02

03

04

05






06

07

08


Video camera


Shooting a quick video

- 1 Press the camera key on the right side of the phone.
- 2 On the Camera preview mode touch the Video camera icon  in the viewfinder to switch to video mode. The video camera's viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Press the capture button once to start recording. Or press the red dot  at the bottom right of the screen.
- 5 **Rec** will appear at the top of the viewfinder and a timer at the bottom showing the length of your video.
- 6 To pause the video touch  and resume by selecting .
- 7 Touch  on screen or press the capture button a second time to stop recording.


After you've shot your video


A still image representing your captured video will appear on screen. The name of the video runs along the bottom of the screen together with six icons down the right side.

 Touch to play the video.


 Touch to send the video as a **Message or Email** or by **Bluetooth**. See page 28 for **Sending messages**, or page 65 for **Sending and receiving your files using Bluetooth**.

 Touch to edit the video.


 Touch to view a gallery of saved videos and images.

 Touch to delete the video you have just captured and confirm by touching

Yes. The viewfinder will reappear.

 Touch to shoot another video straight away. Your current video will be saved.

Getting to know the viewfinder

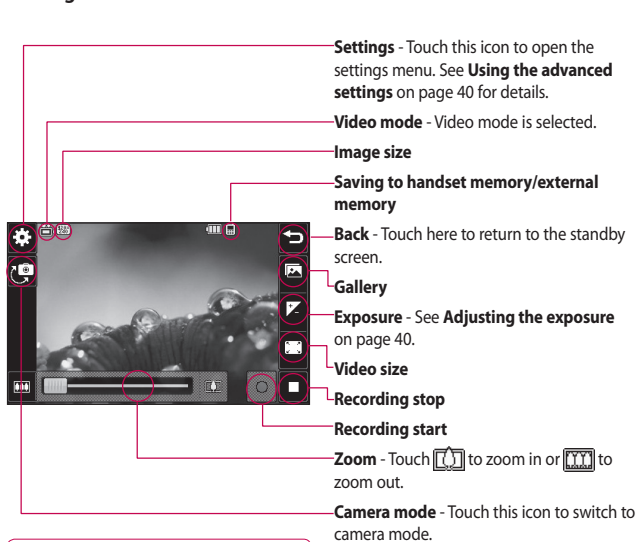


TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

Video camera

Adjusting the Exposure

Exposure defines the difference between light and dark (contrast) in an video. A low contrast video will appear foggy, whereas a high contrast video will appear much sharper.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, left for a lower exposure, hazier video, or right for a higher contrast, sharper video.

Using the advanced settings

From the viewfinder touch **Settings** to open all the advanced settings options.

Preview settings

Video size - Change the size of the video to save on memory space. See **Changing the video image size** on page 41.

Colour Effect - Choose a colour tone to apply to the video you're taking. See **Choosing a colour tone** on page 41.

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

Set time - Set a duration limit for your video. Choose from **No limit**, or **MMS** to limit the size so that you can send the video as an MMS.

View mode - Choose from Full screen or Full image. In Full screen some clipping of the image may occur.

TIP! If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.

Other settings


Memory - Choose whether to save your videos to the **Handset memory** or to the **External memory**.


Voice - Choose Mute to record a video without sound.


Reset settings - Reset all the video camera settings.

Changing the video image size

The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select a pixel value from the two options:


 **320x240** - Smaller image size, therefore smaller file size. Up to 24 fps are available for video play back, up to 12 fps are available for video recording.

 **176x144** - Smallest image size and therefore smallest file size. Up to 15 fps are available for video play back.


- 4 Select the size option you'd like to use.

TIP! For video format conversion software, see the CD you received with your KP500.

Choosing a colour tone

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the settings menu.
- 3 There are four colour tone options, **Off** (Normal), **Black & White**, **Negative**, **Sepia**.
- 4 Touch the colour tone you'd like to use.

Watching your saved videos

- 1 In the viewfinder touch .
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery.
- 4 Touch the video a second time to open it fully.

01

02

03

04

05




06

07

08




Your photos and videos

Viewing your photos and videos

- 1 Touch  on your camera preview screen.
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo twice to open it fully.
- 4 To play the video touch . To pause playback touch .

TIP! Flick left or right to view other photos or videos.

Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch the right side of the screen to open the options menu.
- 3 From the options menu select .
- 4 The image will appear on screen, with its assigned image name.
- 5 Touch the image then  to return to the gallery.
- 6 The image will be saved in your Media Album folder and appear in the gallery. You need to exit the gallery and then re-open it for this to appear.

⚠ WARNING: Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.


- 1 Touch the photo you would like to begin the slideshow twice to open it.


- 2 Select .


- 3 The slideshow will begin.

There are options within slideshows:


 Touch to show random.

 Touch to pause the slideshow on a particular photo.

 Touch again to resume playback.


 Touch to increase or decrease the speed of the slideshow.


Setting a photo as wallpaper


- 1 Touch the photo you would like to set as wallpaper twice to open it. Turn the phone to landscape.
- 2 Touch the right side of the screen to open the options menu.
- 3 Touch .
- 4 The screen will switch to portrait mode. You can then change the size of the picture.
- 5 When you are happy with the picture touch **Set**.

Editing your photos


There are loads of great things you can do to your photos to change them, add to them or liven them up a little.

- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to adapt your photo:

 Crop your photo and move your finger across the screen to select the area.


 Draw something on your photo freehand. Select the thickness of the line from the four options and the colour you would like to use.


T Put writing on the picture. See **Adding text to a photo** on page 44.

 Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be.

 Erase whatever you draw.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file** enter a file name.

 Undo the last **Effect** or edit you made to the photo.

 Touch to open further effect options.

 You can adjust the selected photo.

 Touch to return to the gallery.

01

02

03

04

05

06

07


08

Your photos and videos

Adding text to a photo

- 1 From the editing screen, touch **T**.
- 2 Select **Signature** to add unframed text or choose one of the speech bubble shapes.
- 3 Enter your text using the keypad and touch **Save**.
- 4 Move the text by touching it and sliding it to the place you'd like it to be.

Adding an effect to a photo

- 1 From the editing screen, touch .
- 2 Choose to apply any of the six options to the photo:

Face beautify - Automatically detect a face in the image and brighten it up.


Tunnel effect - Lomo camera effect.

Colour negative - Colour negative effect.

Black and white - Black and white colour effect.

Sepia - Sepia effect.

Blur - Apply a blurred effect.

Sharpen - Move the marker along the bar to sharpen the focus of the photo. Select **OK** icon to apply the changes or choose  to cancel.

Mosaic blur - Touch to apply a blurred mosaic effect to the photo.

Oil painting - Oil painting effect.

Sketch - Apply an effect to make the picture look like a sketch.

Emboss - Emboss effect.

Solarize - Change the effect of exposure to the light

Vivid - An effect of clearness and brilliance.


Moonlight - Change the light to look like moonlight.

Antique - An old image effect.

Glow - A light beam effect.



Cartoon - A cartoon effect.

Water color - A water color effect.

- 3 To undo an effect simply touch **Undo** .


Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.





To access the Multimedia menu, touch  then . Touch  to open a list of folders storing all of your multimedia files.

Pictures

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.





Touch  to change the view from thumbnail view to list view.

Sending a photo

- 1 Touch  then .
- 2 Touch  then choose **My images**.
- 3 Touch  **Send** and choose from **Message, Email** or **Bluetooth**.
- 4 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, Bluetooth will be turned on automatically and your phone will search for a device to send the picture.

Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Touch  then .
- 2 Touch  then **My images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:
Wallpaper - Set a wallpaper for the standby screen.
Contacts image - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.

01

02

03

04

05

06

07


08

Multimedia

Start-up image - Set an image to appear when you switch the phone on.

Power off image - Set an image to appear when you switch the phone off.





Printing an image

- 1 Touch  then .
- 2 Touch  then **My images**.
- 3 Select an image and touch .
- 4 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

TIP! You can print via bluetooth or by connecting to a PictBridge compatible printer.

Moving or copying an image





You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then .
- 2 Touch  then **My images**.
- 3 Touch  and select **Move** or **Copy**.
- 4 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

Sounds

The **My sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.




Using a sound

- 1 Touch  then .
- 2 Touch  then **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Select a sound and it will begin to play.
- 5 Touch  and select **Use as**.
- 6 Choose from **Ringtone**, **Message tone**, **Start-up** or **Shut down**.


Videos

The **My videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch  then .
- 2 Touch  then **My videos**.
- 3 Select a video to play.

Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, Bluetooth turns on automatically and your phone will search for a device to send the video.

Games and Applications

You can install new games and applications to your phone to keep you amused when you have time to spare.

01

02

03

04

05




06

07

08




Multimedia

Installing a game/application via local install

- 1 Touch  then .
- 2 Touch  and **Others** or **My memory card** if external memory is inserted.
- 3 Select the file(*.jad or *.jar) to install and press **Install** command. An application will be installed.

NOTE: The jad should contain its own jar.

Playing a game

- 1 Touch  then .
- 2 Touch  and **My games & Apps**.
- 3 Open the Games folder and choose and touch a game to launch.

Documents

From the Documents menu, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and PDF files.




Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 56 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others folder**.

Viewing a file

- 1 Touch  then .
- 2 Touch  then **Documents**.
- 3 Select a document and touch **View**.





Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder.






If this happens you can move them.

To move a file from **Others** to




Documents:

- 1 Touch  then .
- 2 Touch  then **Others**.
- 3 Select a file and touch .
- 4 Touch **Move**, choose the destination folder from the list by touching the arrow icon. The screen will display **Moved** when the transfer is complete.

Creating a movie

- 1 Touch  then .
- 2 Touch  (Muvee studio).
- 3 Touch  to add an image. Checkbox images you want to include then select **Insert**.
- 4 Touch style tab to choose a Muvee style.
- 5 Touch **Default sound** to change the sound.
- 6 Touch  to see what you've created.
- 7 Touch  then **Order** to make an order.
- 8 Touch  then **Save Location** to choose where to save the movie.

Music

Your LG KP500 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then  then . From here you can access a number of folders:

Recently played - View all of the songs you have played recently.

All tracks - Contains all of the songs you have on your phone.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

01

02

03

04

05

06

07

08

Multimedia

Genres - Browse through your music collection by genre.

Playlists - Contains all playlists you have created.

Shuffle tracks - Play your tracks in a random order.








Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite, see page 56 for details. To transfer using Bluetooth:




- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch  then .
- 2 Touch , then **All tracks**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch  then .
- 2 Touch , then **Playlists**.
- 3 Touch **Add new playlist**, enter the playlist name and touch **Save**.
- 4 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 5 Touch **Save**.

Using the radio





Your LG KP500 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

NOTE: You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

Searching for stations





You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone. You must first attach the headset to the phone as this acts as the antenna.

To auto tune:

- 1 Touch  then .
- 2 Touch  then .
- 3 Touch Auto scan. Then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using ◀ and ▶ displayed next to the radio frequency. If you press and hold ◀ and ▶, the stations will be automatically found.

Resetting channels

- 1 Touch  then .
- 2 Touch  then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

01

02

03

04

05



06

07




08

Organiser




Adding an event to your calendar

- 1 From the standby screen select , then touch  and choose . Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add new event**.
- 4 Touch **Category** then choose from **Appointment, Anniversary or Birthday**.
Check the date and enter the time you would like your event to begin.
- 5 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 6 If you would like to add a subject or a note to your event, touch **Note** and type in your note, followed by **Save**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

Adding an item to your to do list

- 1 From the standby screen select , then touch  and choose .
- 2 Select **To do** and touch **Add To do**.
- 3 Set the date for the to do item, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your to do list item by selecting **Save**.

Adding a memo

- 1 From the standby screen select , then touch  and choose . Select **Memo**.
- 2 Touch **Add memo**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.

Using date finder



Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

This is great for keeping tabs on deadlines.

- 1 From the standby screen select , then touch  and choose .
- 2 Select **Date finder**.

- In the **From** tab set your required date.
- In the **After** tab set the number of days.
- The **Target date** will be shown below.





Setting your alarm

- From the standby screen select , then touch  and choose .
- Touch **Add alarm**.
- Set the time you would like the alarm to sound and touch **Save**.
- Choose whether you would like your alarm to repeat **Once, Daily, Mon - Fri, Mon - Sat, Sat - Sun, Except holiday or Choose weekday**. The icons indicate the weekday you select.
- Select **Alarm type** to select a type for your alarm.
- Touch alarm tone then choose **Default sounds** or **Voice recordings** folder to find sounds. To listen to sounds touch the sound, followed by .
- Add a memo for the alarm. Touch **Save** when you have finished typing the memo.
- Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.

- Once you have set your alarm, touch **Save**.
NOTE: You can set up to 5 alarms.





TIP! Touch on/off icon on the right hand side of the alarm to set.

Adding a memo with drawing panel

- From the standby screen select , then touch  and choose .
- Touch **Add Drawing**.
- Draw your memo on the touch screen LCD followed by .
- Your memo will appear on screen next time you open the **Drawing Panel** application.

Voice recorder

Use your voice recorder to record voice memos or other sounds.

- Touch  then .
- Touch  then  and **Settings** choose from:
Duration – Set the recording duration. Choose from **No limit, MMS message size or 1 minute**.

01

02

03

04

05

06

07

08

Organiser

Quality – Select the sound quality. Choose from Super Fine, Fine or Normal.

Recording a sound or voice

- 1 Touch then .
- 2 Touch .
- 3 Touch to begin recording.
- 4 Touch to end recording.
- 5 Touch to listen to your recording.

Using your calculator

- 1 From the standby screen select , then touch and choose .
- 2 Select **Calculator**.
- 3 Touch the numeric keys to input numbers.
- 4 For simple calculations, touch the function you require (+, -, *, /), followed by =.
- 5 For more complex calculations, touch and choose from **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad** etc..





Converting a unit

- 1 From the standby screen select , then touch and choose .
- 2 Select **Converter**.
- 3 Choose whether you would like to convert **Currency, Surface, Weight, Length, Temperature, Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Using the stopwatch

- 1 From the standby screen select , then touch and choose .
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

Adding a city to your world time

- 1 From the standby screen select , then touch  and choose .
- 2 Select **World time**.
- 3 Touch the , followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen.

01

02

03

04

05

06




07

08

PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match, and also to backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the standby screen press  and select  and choose .
- 2 Select **USB connection mode** and choose.

Mass storage

PC suite

Music sync

- 3 Insert the supplied CD into your PC. Click on the **LG PC Suite Installer** which will appear on your screen.
- 4 Select the language you would like the installer to run in and click **OK**.
- 5 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 6 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.
- 4 Click on **Next**, then **Next** again, then **Finish**.
Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up or restored.

Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the **Contents** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

NOTE: To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen.

Right-click your contacts and then Select all.

Right-click at the same position and select Copy to contact. Now click on the Handset folder on the left of your screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

Using your phone as Music Sync device

Your Phone can be used as Music Sync device to Sync Music Files only.

Music Sync can be done using Windows Media Player 10 / 11 and supports both Handset Memory and External Memory Card.

01

02

03

04




05

06

07

08

PC Sync




- 1 Disconnect your phone from your PC.
- 2 From the standby screen select  , then touch .
- 3 Select  and then **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Music Sync ...** followed by **Disconnect Cable to Stop Music Sync**.

The web

Browser

Browser gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.



Accessing the web

- 1 From the standby screen select , then touch  and choose .
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen select , then touch  and choose .
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.

- 3 To add a new bookmark, select  and touch **Add Bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark and then touch **Connect**. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites in an automated manner that is easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

01

02

03

04

05


06

07

08




The web

Saving a page




- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.




Accessing a saved page

- 1 From the standby screen select , then touch  and choose .
- 2 Select **Saved pages**.
- 3 Select the required page and it will open.

Viewing your browser history

- 1 From the standby screen select , then touch  and choose . Select **History**.
- 2 A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select the required page.

Changing the web browser settings

- 1 From the standby screen select , then touch  and choose . Select **Settings**.
- 2 You can choose to edit **Profiles, Appearance settings, Cache, Cookies, Security**, or to reset all settings, select **Reset Settings**.

Using your phone as a modem

Your KP500 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KP500 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Internet Kit** on your PC. Then click **New** button and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Write the Profile that can connect to the Internet and save the values.

- 6** The profile that you create will appear on your PC screen. Select it and click **Connect**.

Your PC will connect through your KP500.

NOTE: For more information on synchronising using the LG PC Suite see page 56.

Using Bluetooth:

- 1** Ensure Bluetooth is switched **On** and **Visible** for both your PC and KP500.
- 2** Pair your PC and KP500 so that a passcode is required for connection.
- 3** Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4** Click **Internet Kit** on your PC. Then click **New** button.
- 5** Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 6** Write the Profile that can connect to the Internet and save the values.

- 7** The profile that you create will appear on your PC screen. Select it and click **Connect**.

Your PC will connect through your KP500.

NOTE: For more information on Bluetooth see page 65.

01

02

03

04

05

06

07

08

Settings



Within this folder you can adapt your settings to make your KP500 personal to you.

NOTE: For information on call settings see page 24.




Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the status summary bar on the top and touch the profile tab.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then choose .
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options available in the list, including your **Voice Ring tone** and **Volume, Message alerts** settings and more.

Changing your screen settings

- 1 Touch  then choose .
- 2 Touch  and then choose from:
 - Wallpaper** - Choose the theme for your standby screen.
 - Top Menu** - Choose the style of the top menu.

Dialling - Adjust the number size and colour.

Font - Adjust the font size.

Backlight - Choose how long the backlight remains ON.

NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Brightness - Adjust the screen brightness.

Greeting message - Choose on or off and fill in the greeting message.



Start-up/Shut down - Choose the theme for your start-up/shut down screen.

- 2 Touch **Save** to save your settings.

Changing your phone settings


Enjoy the freedom of adapting how your KP500 works to your own style.


TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then choose .
- 2 Touch  then choose from the list below.
 - Date and time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.
 - Power save** - Choose to switch the factory set power saving settings **On** or **Off**.
 - Languages** - Change the language of your KP500's display.
 - Auto key lock** - Lock the keypad automatically in standby screen.
 - Security** - Adjust your security settings, including PIN codes and handset lock.
 - Memory manager** - See **Using memory manager** on page 64 for more information.
 - Reset settings** - Reset all the settings to their factory definitions.
 - Handset information** - View the technical information for your KP500.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Touch  then .

Select .

Network settings

Select Network - If you set to **Automatic**, KP500 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you set to **Manual** all the currently available networks are shown and you can select one of them for registration. If the registration of the network has failed, the network lists are listed again and you can select any other one for registration.

NOTE: When your handset loses the network in manual mode, the popup message to select the available network will be shown on the Idle screen.

01

02

03

04

05

06

07

08

Settings

Preferred lists - If the network is searching automatically, you can add a preferred network to be connected to.

Internet profiles - This menu shows the Internet profiles. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

USB connection mode - Choose Data service and synchronise your KP500 using the LG PC Suite software to copy files from your phone. See page 56 for more information on synchronisation. If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is only available for music content.

Using memory manager

Your KP500 has three memories available: the phone, the SIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by . Select  then **Memory Manager**.

Handset common memory - View the memory available on your KP500 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

SIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage settings - Choose the location you prefer items to be saved to.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to receive calls.

To send a file:





- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the Bluetooth device, your KP500 will not automatically search for other Bluetooth devices. If not, your KP500 will search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to and touch **Select**.
- 5 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See Changing your Bluetooth settings on the right for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your Media Album.

Changing your bluebooth settings:

- 1 Touch  and choose .
- 2 Choose  then touch  and choose **Settings**.

Make your changes to:

My device visibility - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your KP500.

Supported services - Choose how to use Bluetooth in association with different services. See **Using your phone as a modem** on page 60 or **Using a Bluetooth headset** on page 66.

01

02

03

04

05

06

07

08

Settings

Remote SIM Mode - Turn on or off.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your KP500 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your KP500 will search for devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.

5 Your phone will then connect to the other device, on which you should enter the same passcode.

6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your KP500 will automatically switch to Headset profile.

Accessories

These accessories are supplied with KP500.

Charger




Data cable and CD



Connect and synchronise your KP500 and PC.

Battery



User Guide

Learn more about your KP500.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquires.

Protection Film

⚠ WARNING:
When the protection film is attached on touch window, touch sensitivity might be decreased.



01

02

03

04

05

06

07

08

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, GSM 850 and, PCS 1900 network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KP500

System : GSM 900 / DCS 1800 / GSM 850 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900 Quad Band Terminal Equipment

Model Name

KP500, KP500Q, KP570, KP570Q

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V 1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

1, September, 2008


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information This mobile phone model KP500 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.

- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.990 W/kg (10g) and when worn on the body is 1.26 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.

- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.

- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Guidelines for safe and efficient use

- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your

mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

رسالة	الأسباب المحتملة	تدابير تصحيحية ممكنة
	البطارية فارغة بالكامل	اشحن البطارية.
	درجة الحرارة خارج النطاق	تأكد من أن درجة الحرارة المحيطة جيدة، وانتظر قليلاً، ثم حاول الشحن مرةً أخرى.
خطأ في الشحن	مشكلة في الاتصال	دقق في وحدة التزويد بالطاقة والاتصال بالهاتف. دقق في ملامسات البطارية. وقم بتنظيفها إذا اقتضى الأمر.
	لا فولتية للخطوط الرئيسية	قد بالتوصيل بمقبس آخر أو دقق في الفولتية.
	الشاحن فيه خلل	إذا لم يسخن الشاحن، فقم باستبداله.
	الشاحن غير مناسب	استخدم ملحقات LG الأصلية فقط.
	البطارية فيها خلل	استبدل البطارية.
الهاتف ينقطع عن الشبكة	الإشارة ضعيفة جداً	نتم إعادة الاتصال بموفر خدمة آخر تلقائياً.
الرقم غير مسموح به	وظيفة رقم الاتصال المحدد قيد التشغيل.	تحقق من الإعدادات.

استكشاف الأخطاء وإصلاحها

يسرد هذا الفصل بعض المشاكل التي قد تصادفها أثناء استخدام الهاتف. بعض المشاكل تتطلب منك الاتصال بموفر الخدمة، ولكن معظم المشاكل التي تواجهها تكون سهلةً وبالتالي يمكنك تصحيحها بنفسك.

رسالة	الأسباب المحتملة	تدابير تصحيحية ممكنة
خطأ SIM	لا يوجد بطاقة SIM في الهاتف أو ربما قد أدخلتها بشكل غير صحيح.	تأكد من إدخال بطاقة SIM بطريقة صحيحة.
لا يوجد اتصال بالشبكة	الإشارة ضعيفة خارج شبكة GSM	انتقل نحو الأعلى إلى نافذة أو مكان مفتوح. تحقق من خريطة التغطية التي يزودك بها موفر الخدمة.
لا تتطابق الرموز	عندما ترغب في تغيير رمز حماية، عليك تأكيد الرمز الجديد وذلك بإدخاله مرة أخرى، عدم تطابق الرمزین اللذين أدخلتهما.	اتصل بموفر الخدمة.
يتعدّر تعيين الوظيفة	غير معتمد من قبل موفر الخدمة أو التسجيل مطلوب.	اتصل بموفر الخدمة.
المكالمات غير متوفرة	خطأ في اتصال تم إدراج بطاقة SIM جديدة، تم بلوغ الحد الخاص برسوم المكالمات	شبكة جديدة غير مصرّح لها. تحقق من القيود الجديدة. اتصل بموفر الخدمة أو أعد تعيين الحد بواسطة PIN 2.
يتعدّر تشغيل الهاتف	اضغط مفتاح التشغيل/إيقاف التشغيل لبرهة قصيرة جداً البطارية فارغة ملامسات البطارية متسخة	اضغط مفتاح التشغيل/إيقاف التشغيل لثانيتين على الأقل. اشحن البطارية. تفحص مؤشر الشحن في شاشة العرض. نظف الملامسات.

- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلص منها كمهملات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- نعتد فترة عمل البطارية الفعلية على تكوين الشبكة وضوابط المنتج والأنماط المستخدمة والبطارية والأوضاع البيئية.

توجيهات لاستخدام آمن وفعال

- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض دون الحصول على إذن من قبل طاقم الطائرة.

أطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن كل شبكات الهاتف المحمول. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ؛ تحقق من ذلك مع موفر الخدمات المحلي لديك.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصّلات المعدنية الموجودة على البطارية.

تجنّب إلحاق الضرر بسمعك

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك. ونوصي بالتالي بالآتي:
بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بتعيين مستوى صوت معقول للموسيقى والمكالمات.

القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية. في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته. توقف عن استخدام الجهاز المحمول إلى أن يتم استبداله من قِبل موفر خدمة معتمد.

منطقة تفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية، التزم بالقيود، واتبع الأنظمة أو القوانين.

مناطق تتسبب أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

في الطائرة

باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.

- الهاتف على أجهزة ضبط النبض، مثلاً في الحبس على مستوى الصدر.
- قد تسبب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون، والراديو، والكمبيوتر الشخصي.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لايدوية، إذا كانت متوفرة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة، فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك، هذا الأمر يعتبر ملزماً خاصةً بالقرب من الطرقات.

- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنه جارياً، فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة فماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر، لا تلمس الهوائي من دون وجود سبب يدعوك إلى ذلك.

تشغيل فَعَال للهاتف

الأجهزة الإلكترونية

- قد تعرّض كل الهواتف المحمولة للتشويش، ما قد يؤثر على أداؤها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية بدون طلب الإذن للقيام بذلك، تجنّب وضع

توجيهات لاستخدام آمن وفعال

يرجى قراءة هذه الإرشادات البسيطة، عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

التعرض لطاقة التردد اللاسلكي

معلومات حول التعرض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR). لقد تم تصميم طراز الهاتف المحمول KP500 هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق المتعلقة بالتعرض للموجات اللاسلكية، وتستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص. من دون أخذ العمر والصحة بعين الاعتبار.

• نستخدم توجيهات التعرض للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد، أو SAR، وتجرى اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كل نطاقات التردد التي تم اختبارها.

• وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.

• حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين (ICNIRP) هو 2 واط/كغ وهو حد مقسم على نحو متناسب إلى 10 غرامات من النسيج.

• أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختياره بواسطة DASY4 للاستخدام على الأذن تعادل 0.990 واط/كيلوجرام (10 غرام) وعند الحمل على الجسد تكون 1.26 واط/كيلوجرام (10 غرام).

• معلومات بيانات SAR للمقيمين في بلدان/

LG KP500 | دليل المستخدم

مناطق تبتني حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) هو 1.6 واط/كغ كمتوسط لكل غرام واحد (1) من النسيج.

العناية بالمنتج وصيانه

⚠ تحذير

استخدم فقط البطاريات والشواحن والملحقات الموافق على استخدامها لطراز الهاتف المعين هذا. إن استخدام أي أنواع أخرى قد يجعل أي كفاءة أو موافقة تنطبق على الهاتف غير صالحة، وقد يكون خطيراً.

- لا تقم بتفكيك الوحدة، اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة بعيدة عن الأجهزة الإلكترونية مثل أجهزة التلفزيون والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالب بذلك، على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900 Quad Band Terminal Equipment

Model Name

KP500, KP500Q, KP570, KP570Q

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V 1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

1, September, 2008

Signature of representative

خدمة الشبكة

البيانات التقنية

عام

اسم المنتج: KP500

النظام : GSM 900 / DCS 1800 / GSM 850
/ PCS 1900

درجات الحرارة المحيطة

الحد الأقصى : +55 درجة مئوية (تفريغ).

+45 درجة مئوية (شحن)

الدنيا: -10 درجة مئوية

تمت الموافقة على استخدام الهاتف اللاسلكي الذي جاء وصفه في هذا الدليل. على شبكة GSM 900. و DCS 1800 و GSM 850 و PCS 1900.

وهناك عدد من الميزات المضمّنة في هذا الدليل وتسمى خدمات الشبكة. هذه الخدمات عبارة عن خدمات خاصة يمكنك الحصول عليها عبر موفر خدمة اللاسلكية. قبل أن تتمكن من الاستفادة من أي خدمة من خدمات الشبكة. عليك الاشتراك فيها عبر موفر الخدمة والحصول على الإرشادات المتعلقة باستخدامها والتي يزودك بها موفر الخدمة.

الملحقات

يتم تزويدك بهذه الملحقات مع الهاتف KP500.

01

02

03

04

05

06

07

08




كابل البيانات
والقرص المضغوط
للبينات

قم بتوصيل
الهاتف KP500
وقم بمزامنته مع
الكمبيوتر.



الشاحن



البطارية



سماعة رأس
استريو



دليل المستخدم
اعرف المزيد حول
KP500.

دليل المستخدم KP500

فيلم الحماية



⚠ تحذير: عندما يكون
فيلم الحماية موصولاً
بإطار اللمس، قد تنخفض
حساسية اللمس.

ملاحظة:

- استخدم ملحقات LG الأصلية دائماً.
- يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى؛ يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.

الإعدادات

- عنواني - عرض عنوان بلوتوث.
- 5 يتصل هاتفك حينئذٍ بالجهاز الآخر. حيث عليك إدخال رمز المرور نفسه.
- 6 لقد أصبح اتصال بلوتوث المحمي برمز مرور آمناً الآن.
- استخدام سماعة رأس بلوتوث
- 1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً.
- 2 انزع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.
- 3 المس السؤال قبل الاتصال أو الاتصال دوماً والمس نعم للاتصال الآن. يقوم الهاتف KP500 بالتبديل تلقائياً إلى وضع سماعة الرأس.
- الاقتران بجهاز بلوتوث آخر
عند إجراء اقتران لهاتف KP500 بجهاز آخر يمكنك تعيين اتصال محمي برمز مرور. وهذا يعني أن الاقتران أصبح آمناً أكثر.
- 1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً. يمكنك تغيير الرؤية في قائمة إعدادات.
- 2 المس بحث.
- 3 يبحث الهاتف KP500 عن الأجهزة. عند اكتمال عملية البحث. يظهر تحديث على الشاشة.
- 4 اختر الجهاز الذي تريد الاقتران به وأدخل رمز المرور. ثم المس موافق.

إعدادات الحفظ الأساسي - اختر الموقع الذي تفضل حفظ العناصر فيه.

إرسال الملفات واستلامها باستخدام بلوتوث يعتبر بلوتوث طريقة جيدة لإرسال الملفات وتلقيها إذ لا حاجة إلى أسلاك ويكون الاتصال سريعاً وسهلاً. كما يمكنك الاتصال بسماعات رأس بلوتوث لإجراء مكالمات وتلقيها.

إرسال ملف:

1 افتح الملف الذي تريد إرساله. وهو عادةً عبارة عن صورة، أو فيديو أو ملف موسيقى.

2 اختر إرسال.
اختر بلوتوث.

3 إذا قمت مسبقاً بإقران جهاز بلوتوث، فلن يقوم KP500 بالبحث تلقائياً عن أجهزة بلوتوث أخرى. سيبحث الهاتف KP500 تلقائياً عن أجهزة بلوتوث أخرى تم تمكينها ضمن النطاق.

4 اختر الجهاز الذي تريد إرسال الملف إليه والمسح عليه.

5 سينم إرسال ملفك.

تلميح! راقب شريط التقدم لكي تتأكد من إرسال الملف.

لاستلام ملف:

1 لاستلام ملفات، يجب أن يكون بلوتوث في وضع التشغيل وهربياً. انظر تغيير إعدادات بلوتوث على اليمين للحصول على مزيد من المعلومات.

2 تظهر رسالة تطالبك بقبول الملف من المرسل. المس نعم لاستلام الملف.

3 ستشاهد الموقع الذي تم حفظ الملف فيه ويمكنك أن تختار عرض الملف أو استخدامه كخلفية. يتم عادةً حفظ الملفات في الحافظة المناسبة في ألبوم الوسائط.

تغيير إعدادات بلوتوث:

1 المس  واختر .

2 اختر  ثم المس  ثم اختر إعدادات.

أدخل تغييراتك علي:

إمكانية رؤية جهازي - اختر أن يكون الجهاز مرئياً أو مخفياً أو مرئياً لـ 1 دقيقة.

اسم الجهاز - أدخل اسماً للهاتف KP500.

الخدمات المعتمدة - اختر الطريقة التي تريدها لاستخدام بلوتوث مع مختلف الخدمات. انظر استخدام الهاتف كمودم في الصفحة 60 أو استخدام سماعة رأس بلوتوث في الصفحة 66.
وضع SIM عن بُعد - تشغيل أو إيقاف تشغيل.

01

02

03

04

05

06

07

08

الإعدادات




خدمة المزامنة - تقوم وظيفة مزامنة الخادم بمزامنة البيانات الموجودة في هاتف والبيانات الموجودة على خادم بشأن معلومات عناوين الأسماء وعناصر الجدول وعناصر المهام وعناصر المذكرة وذلك عبر شبكة لاسلكية.

إعدادات التشغيل - لقد قام مشغل الشبكة بحفظ هذه المعلومات مسبقاً، يمكنك أن تقوم بتعديلها إذا ما رغبت في إدخال تغييرات عليه.

استخدام إدارة الذاكرة

تتوفر في KP500 ثلاثة أنواع من الذاكرة: الهاتف. وبطاقة SIM وبطاقة ذاكرة خارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

ويمكنك استخدام إدارة الذاكرة لتحديد طريقة استخدام كل نوع من أنواع الذاكرة والمساحة المتوفرة.

المس  يتبعه  . حدد  ثم مدير الذاكرة.

الذاكرة العامة للهاتف - عرض الذاكرة المتوفرة في KP500 للصور والأصوات، الفيديو، الفلاش، ووسائل متعددة، البريد الإلكتروني، وتطبيقات Java وغير ذلك.

ذاكرة الهاتف المحجوزة - عرض الذاكرة المتوفرة في الهاتف لرسائل نصية، والأسماء، والتقويم، وقائمة المهام، والمذكرة، والمنتبه، وسجلات المكالمات، والإشارات المرجعية وعناصر متفرقة.

ذاكرة SIM - عرض الذاكرة المتوفرة في بطاقة SIM. الذاكرة الخارجية - عرض الذاكرة المتوفرة في بطاقة الذاكرة الخارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

القوائم المفضلة - إذا كانت الشبكة تجري بحثاً تلقائياً، فيمكنك أن تضيف الشبكة المفضلة التي تريد الاتصال بها.

أوضاع الإنترنت - تظهر هذه القائمة أوضاع الإنترنت، يمكنك إنشاء أوضاع جديدة أو تعديلها باستخدام قائمة الخيار، إلا أن حذف أو تعديل التكوينات الافتراضية يتوقف على متغيرات الدولة.

نقاط وصول - قام مشغل الشبكة بحفظ هذه المعلومات مسبقاً، يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

اتصال بيانات الرزمة - اختر الوقت الذي تريد أن يتصل فيه هاتفك بشبكة حزم البيانات.

وضع اتصال USB - اختر خدمة البيانات وقم بمزامنة هاتف KP500 باستخدام البرنامج LG PC Suite لنسخ الملفات من الهاتف. انظر الصفحة 56 للحصول على مزيد من المعلومات حول المزامنة. إذا كنت تستخدم مزامنة الموسيقى مع Windows Media Player، حدد مزامنة الموسيقى في هذه القائمة. مزامنة الموسيقى متوفرة لمحتويات الموسيقى.

تغيير إعدادات التوصيل

تم مسبقاً إعداد إعدادات التوصيل بواسطة مشغّل الشبكة. بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد منذ البداية، إذا أردت تغيير أي ضابط من الإعدادات. استخدم هذه القائمة.

المس  ثم  حدد .


إعدادات الشبكة

تحديد الشبكة - إذا قمت بالتعيين إلى تلقائي، فسيبحث KP500 تلقائياً عن الشبكة ويسجل الجهاز على الشبكة، ننصح بهذا الأمر للحصول على خدمة وجودة أفضل.

إذا قمت بالتعيين إلى يدوي، فستظهر كل الشبكات المتوفرة حالياً ويمكنك تحديد واحدة منها للتسجيل، إذا فشل تسجيل الشبكة، فسيتم سرد قوائم الشبكة مجدداً ويمكنك تحديد أي قائمة تريد للتسجيل.

ملاحظة: عندما يفقد هاتفك الاتصال بالشبكة في الوضع اليدوي، ستظهر الرسالة المنبثقة في شاشة الانتظار لتحديد الشبكة المتاحة.

1 المس  ثم اختر .

2 المس  ثم اختر من القائمة أدناه. التاريخ والوقت - اضبط التاريخ والوقت أو اختر تحديث الوقت بشكل تلقائي عند السفر أو للتوقيت الصيفي.

توفير الطاقة - اختر تشغيل أو إيقاف تشغيل إعدادات توفير الطاقة في الشركة المصنعة.

اللغات - غيّر لغة شاشة الهاتف KP500.

قفل المفاتيح التلقائي - قم بإقفال لوحة المفاتيح تلقائياً في شاشة وضع الانتظار.

الحماية - ضبط الحماية، وهذا يشمل رموز PIN، وقفل الهاتف.

مدير الذاكرة - انظر استخدام مدير الذاكرة في الصفحة 64 للحصول على مزيد من المعلومات، إعادة تعيين الضبط - إعادة تعيين كل الإعدادات وفق تعريفات الشركة المصنعة.

معلومات الهاتف - عرض معلومات KP500 التقنية.

01

02

03

04

05

06

07

08

الإعدادات


باستطاعتك تكييف الإعدادات ضمن هذه الحافظة لإضفاء طابع شخصي على الهاتف KP500. ملاحظة: للحصول على معلومات حول إعدادات المكالمات انظر الصفحة 24.

تخصيص الأوضاع

يمكنك أن تقوم بسرعة بتغيير وضع ك على شاشة وضع الانتظار. ما عليك سوى لمس شريط ملخص الحالة في الأعلى ولمس علامة تبويب الوضع . يمكنك تخصيص كل إعدادات الوضع باستخدام قائمة الإعدادات.

- 1 اضغط على  ثم اختر .
- 2 المس أوضاع ثم اختر الوضع الذي تريد تعديله.
- 3 يمكنك عندها تغيير كل خيارات الأصوات والتنبيهات المتوفرة في القائمة. بما في ذلك إعدادات نغمة رنين الصوت. ومستوى الصوت. وتنبيهات الرسائل وغيرها.

تغيير إعدادات الشاشة

- 1 المس  ثم اختر .
- 2 المس  ثم اختر من: خلفية الشاشة - اختر سمة شاشة وضع الانتظار. القائمة العلوية - اختر وضع القائمة العلوية.

الاتصال - قم بضبط حجم الرقم ولونه.

خط - قم بضبط حجم الخط.

إضاءة خلفية - اختر الفترة التي تبقى خلالها الإضاءة الخلفية قيد التشغيل.

ملاحظة: بقدر ما تطول الفترة التي تكون خلالها الإضاءة الخلفية قيد التشغيل. بقدر ما يتم استخدام طاقة البطارية وقد تحتاج إلى شحن هاتفك بشكل متكرر أكثر.

السطوع - قم بضبط سطوع الشاشة.

رسالة ترحيب - اختر تشغيل أو إيقاف تشغيل وقم بملء رسالة الترحيب.

بدء التشغيل/إيقاف التشغيل - اختر سمة شاشة بدء التشغيل/إيقاف التشغيل.

2 المس حفظ لحفظ الإعدادات.

تغيير إعدادات الهاتف

تمتّع بحرية تكييف كيفية عمل KP500 مع أسلوبك الخاص.

تلميح! للتصير عبر قائمة الخيارات. المس العنصر المرئي الأخير وقم بتصير إصبعك إلى أعلى الشاشة. ستتحرك القائمة نحو الأعلى بحيث يصبح عدد أكبر من العناصر مرئياً.

01

02

03

04

05

06

07

08

7 سيظهر الوضع الذي أنشأته على الشاشة. حده وانقر فوق اتصال. سيتصل الكمبيوتر من خلال KP500.


ملاحظة: للحصول على مزيد من المعلومات حول بلوتوث انظر الصفحة 65.

ملاحظة: للحصول على مزيد من المعلومات حول إجراء المزامنة باستخدام LG PC Suite انظر الصفحة 56.

استخدام بلوتوث:




- 1** تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً بالنسبة إلى الكمبيوتر والهاتف KP500.
- 2** قم بإقران الكمبيوتر و KP500 بحيث يكون رمز المرور مطلوباً للاتصال.
- 3** استخدم معالج الاتصال على LG PC Suite لإنشاء اتصال بلوتوث نشط.
- 4** انقر فوق مجموعة الإنترنت على الكمبيوتر. ثم انقر فوق زر جديد.
- 5** اختر مودم USB لمحمول LG وحدد موافق. يظهر الآن على الشاشة.
- 6** اكتب الوضع الذي يجعلك تتصل بالإنترنت واحفظ القيم.

حفظ صفحة




- 1 انتقل إلى صفحة ويب المطلوبة كما تم وصفه أعلاه.
- 2 المس  وحدد حفظ هذه الصفحة.
- 3 أدخل اسماً لصفحة ويب بحيث يمكنك التعرف عليها بسهولة.
- 4 المس حفظ.

تلميح! ستسمح لك أيضاً هذه القائمة بتعديل عناوين الصفحات المحفوظة. وحماية شاشة المذكرة أو إلغاء حمايتها، وحذف الصفحات المحفوظة.

الوصول إلى صفحة محفوظة

- 1 من شاشة وضع الانتظار حدد  . ثم المس  واختبر .
- 2 حدد صفحات محفوظة.
- 3 حدد الصفحة المطلوبة افتتح.




عرض محفوظات المتصفح

- 1 من شاشة وضع الانتظار حدد  . ثم المس  واختبر  . حدد الإعدادات.
 - 2 يمكنك أن تختار تعديل الأوضاع أو إعدادات المظهر أو ذاكرة الحفظ المؤقت. أو ملفات تعريف الارتباط. أو الحماية. أو إعادة تعيين كل الإعدادات. حدد إعادة تعيين الإعدادات.
- استخدام الهاتف كمودم
- بإمكان وظيفة الهاتف KP500 أن تكون مضاعفة إذ باستطاعته أن يعمل كمودم للكمبيوتر. ما يوفر لك الوصول إلى البريد الإلكتروني والإنترنت حتى عندما لا يكون باستطاعتك الاتصال باستخدام الأسلاك. ويمكنك استخدام إما كابل USB أو بلوتوث.
- استخدام كابل USB:**
- 1 تأكد من تثبيت LG PC Suite على الكمبيوتر.
 - 2 قم بتوصيل الهاتف KP500 والكمبيوتر باستخدام كابل USB وابدأ بتشغيل البرنامج LG PC Suite.
 - 3 انقر فوق مجموعة الإنترنت على الكمبيوتر. ثم انقر فوق زر جديد وحدد مودم.
 - 4 اختر مودم USB لمحمول LG وحدد موافق. يظهر الآن على الشاشة.
 - 5 اكتب الوضع الذي يجعلك تتصل بالإنترنت واحفظ القيم.
 - 6 سيظهر الوضع الذي أنشأته على الشاشة. حدده وانقر فوق اتصال.
- سيتمصل الكمبيوتر من خلال KP500.

المتصفح

يملك المتصفح عالمياً سريعاً وكاملاً من الألعاب. والموسيقى والأخبار والرياضة والترفيه ويقوم بتحميل المزيد مباشرة إلى هاتفك المحمول. حيثما كنت ومهما كنت تفعل.

الوصول إلى ويب




1 من شاشة وضع الانتظار حدد . ثم المس  واختر .

2 للوصول مباشرة إلى شاشة المتصفح الرئيسية. حدد الشاشة الرئيسية. كطريقة بديلة. حدد إدخال العنوان واكتب عنوان URL المطلوب. يتبعه اتصال.



ملاحظة: يتم فرض رسم إضافي عند الاتصال بهذه الخدمة وتنزيل المحتوى. للحصول على تفاصيل تتعلق بالرسوم على البيانات، عليك الاتصال بموفر الشبكة.

إضافة إشارات مرجعية والوصول إليها

لكي تتمكن من الوصول إلى مواقعك المفضلة على ويب بشكل سريع وسهل. يمكنك إضافة إشارات مرجعية وحفظ صفحات ويب.

1 من شاشة وضع الانتظار حدد . ثم المس  واختر .

2 حدد إشارات مرجعية. تظهر قائمة بالإشارات المرجعية على الشاشة.

3 لإضافة إشارة مرجعية جديدة. حدد  والمس . أضف إشارة مرجعية. أدخل اسماً للإشارة المرجعية. يتبعه URL.

4 المس حفظ. تظهر إشاراتك المرجعية الآن في قائمة الإشارات المرجعية.

5 للوصول إلى الإشارة المرجعية ما عليك إلا لمس الإشارة المرجعية ولمس توصيل. سيتم توصيلك بالإشارة المرجعية.

استخدام قارئ RSS

إن RSS أو توزيع المحتوى والتطبيقات عبارة عن مجموعة من أشكال تغذية ويب يتم استخدامها لنشر محتوى يتكرر تحديثه مثل إدخال المدونات أو عناوين الأخبار أو البث الصوتي على ويب podcasts. ويحتوي مستند RSS، والذي يسمى تغذية، أو تغذية ويب، أو قناة. على ملخص محتوى من موقع ويب مرتبط أو على النص الكامل. ويفضل تغذية RSS سينمك الأشخاص من الاحتفاظ بمواقعهم المفضلة على ويب بطريقة مؤتمتة تعتبر أسهل من التدقيق في تلك المواقع يدوياً.

وباستطاعة المستخدم أن يشترك في قناة عبر إدخال ارتباط القناة في القارئ أو بالنقر فوق رمز RSS في متصفح يبدأ عملية الاشتراك، ويتحقق القارئ من القنوات التي اشترك فيها المستخدم بشكل دوري بحثاً عن محتوى جديد. ويقوم بتنزيل أي تحديثات يعثر عليها.

01

02

03

04

05

06

07

08

مزامنة الكمبيوتر الشخصي

- 1 افصل الهاتف عن الكمبيوتر.
- 2 من شاشة وضع الانتظار حدد  ، ثم المس .
- 3 حدد  ثم وضع اتصال USB.
- 4 المس تزامن الموسيقى.
- 5 قم بتوصيل الهاتف بالكمبيوتر. سيقراً هاتفك:
الاتصال كوضع التزامن مع الموسيقى ... يتبعها
فصل الكابيل لإيقاف تزامن الموسيقى.

01

ملاحظة: لإجراء نسخ احتياطي للأسماء المحفوظة في بطاقة USIM، انقر فوق حافظة بطاقة SIM في الجانب الأيسر من شاشة الكمبيوتر، حدد تعديل في أعلى الشاشة، ثم تحديد الكل.

02

انقر بزر الماوس الأيمن فوق الأسماء وحدد نسخ إلى جهة اتصال. انقر الآن فوق حافظة الهاتف إلى يسار الشاشة فتظهر كل الأرقام.

03

04

05

مزامنة الرسائل

1 قم بتوصيل الهاتف بالكمبيوتر.

2 انقر فوق رمز الرسائل.

3 تظهر كل رسائل الكمبيوتر والهاتف في الحافظات على الشاشة.

4 استخدم شريط الأدوات في أعلى الشاشة لتعديل الرسائل وإعادة ترتيبها.

06

07

08

استخدام الهاتف كجهاز تزامن الموسيقى يمكنك أن تستخدم هاتفك كجهاز تزامن الموسيقى لملفات تزامن الموسيقى فقط.

يمكنك مزامنة الموسيقى باستخدام Windows Media Player 10 / 11 وتزامن الموسيقى يعتمد ذاكرة الهاتف وبطاقة ذاكرة خارجية.

عرض ملفات الهاتف على الكمبيوتر

1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه سابقاً.

2 انقر فوق رمز المحتويات.

3 تظهر على الشاشة في حافظة هاتف LG كل المستندات، ومحتويات الفلاش، والصور، والأصوات وملفات الفيديو التي حفظتها في الهاتف.

تلميح! يساعدك عرض محتويات الهاتف على الكمبيوتر على ترتيب الملفات، وتنظيم المستندات وإزالة المحتويات التي لم تعد بحاجة إليها.

مزامنة الأسماء

1 قم بتوصيل الهاتف بالكمبيوتر.

2 انقر فوق رمز الأسماء.

3 سيقوم الكمبيوتر الآن باستيراد وعرض كل الأسماء المحفوظة في بطاقة USIM والهاتف.

4 انقر فوق ملف وحدد حفظ. يمكنك الآن تحديد الموقع حيث تريد حفظ الأسماء.

مزامنة الكمبيوتر الشخصي

يمكنك مزامنة الكمبيوتر مع الهاتف للتأكد من تطابق كل التفاصيل والتواريخ الهامة. ولكن أيضاً لإجراء نسخة احتياطية لملفاتك تساعدك على الاطمئنان.

تثبيت LG PC Suite على الكمبيوتر

1 من شاشة وضع الانتظار اضغط على  وحدد واختر .

2 حدد وضع اتصال USB واختر.

وسيلة تخزين ذات سعة كبيرة

PC Suite

تزامن الموسيقى

3 أدخل القرص المضغوط الذي تم تزويده به في الكمبيوتر. انقر فوق مثبت LG PC Suite الذي يظهر على الشاشة.

4 حدد اللغة التي تريد أن يتم تشغيل المثبت بواسطتها وانقر فوق موافق.

5 اتبع الإرشادات التي تظهر على الشاشة لإكمال معالج مثبت LG PC Suite.

6 عند اكتمال عملية التثبيت. يظهر رمز LG PC Suite على سطح المكتب.

توصيل الهاتف والكمبيوتر

1 توصيل كابل USB بهاتفك والكمبيوتر.

2 انقر نقرًا مزدوجاً فوق رمز LG PC Suite على سطح المكتب.

3 انقر فوق معالج التوصيل. ثم فوق USB.

4 انقر فوق التالي. ثم التالي مرة أخرى. ثم إنهاء. أصبح الآن هاتفك والكمبيوتر متصلين ببعضهما.

إجراء نسخ احتياطي لمعلومات الهاتف

واستعادتها




1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه أعلاه.

2 انقر فوق الرمز نسخ احتياطي وحدد نسخ احتياطي أو استعادة.


3 حدد المحتويات التي ترغب في إجراء نسخ احتياطي لها أو استعادتها. حدد الموقع حيث تريد إجراء نسخ احتياطي للمعلومات. أو استعادة المعلومات منه. انقر فوق موافق.

4 سيتم إجراء نسخ احتياطي للمعلومات أو استعادتها.

إضافة مدينة إلى ساعتك العالمية

1 من شاشة وضع الانتظار حدد  . ثم المس  واختر .

2 حدد الساعة العالمية.

3 المس  يتبعه إضافة مدينة. ابدأ بكتابة اسم المدينة التي تريدها وسيظهر الاسم في أعلى الشاشة.

01

02

03

04

05

06

07

08

المنسق

الجودة - حدد جودة الصوت. اختر من ضمن دقيقة جداً، أو دقيقة، أو عادية.

تسجيل ملف صوتي أو صوت

1 المس ثم .

2 المس .

3 المس لبدء التسجيل.

4 المس لإنهاء التسجيل.

5 المس للاستماع إلى تسجيلك.

استخدام الحاسبة

1 من شاشة وضع الانتظار حدد . ثم المس واختر .

2 حدد الحاسبة.

3 المس المفاتيح الرقمية لإدخال الأرقام.

4 بالنسبة إلى العمليات الحسابية البسيطة، المس الوظيفة المطلوبة (+, -, *, /). يتبعها =.

5 بالنسبة إلى العمليات الحسابية الأكثر تعقيداً.

المس واختر من ضمن sin، أو cos، أو tan.

أو log، أو ln، أو exp، أو sqrt، أو deg، أو rad.

إلخ..

تحويل وحدة

1 من شاشة وضع الانتظار حدد . ثم المس واختر .

2 حدد المحوّل.

3 اختر ما إذا كنت ترغب في تحويل العملة، أو المساحة، أو الوزن، أو الطول، أو درجة الحرارة، أو الحجم أو السرعة.

4 يمكنك الآن تحديد الوحدة وإدخال القيمة التي تريد التحويل منها. تتبعها الوحدة التي تريد التحويل إليها.

5 تظهر القيمة المناسبة على الشاشة.

استخدام ساعة إيقاف

1 من شاشة وضع الانتظار حدد . ثم المس واختر .

2 حدد ساعة إيقاف.





3 المس بدء لبدء تشغيل المؤقت.

4 المس دورة إذا أردت تسجيل وقت الدورة.

5 المس إيقاف لإيقاف تشغيل المؤقت.

6 المس استئناف لإعادة تشغيل ساعة إيقاف في الوقت الذي توقفت فيه أو المس إعادة التعيين لإعادة بدء التوقيت من جديد.





تعيين المنبه

- 1 من شاشة وضع الانتظار حدد  . ثم المس  واختر .
- 2 المس إضافة منبه.
- 3 عيّن الوقت الذي تريد أن يبدأ فيه المنبه بالرنين والمس حفظ.
- 4 اختر ما إذا كنت ترغب في أن يرن المنبه مرّةً، أو يوميًا، أو من الاثنين إلى الجمعة، أو من الاثنين إلى السبت، أو من السبت إلى الأحد. باستثناء أيام العطل أو اختر أيام الأسبوع. تفسير الرموز إلى يوم الأسبوع الذي اخترته.
- 5 حدد نوع المنبه لتحديد نوع المنبه.
- 6 المس نغمة المنبه ثم اختر الأصوات الافتراضية أو حافظه تسجيلات الأصوات لإيجاد مقاطع الأصوات. للاستماع إلى الأصوات المس الصوت. يتبعه .
- 7 إضافة مذكرة إلى المنبه. المس حفظ عندما تنتهي من كتابة المذكرة.
- 8 يمكنك أخيراً تعيين فترة انتظار من 5 دقائق. أو 10 دقائق. أو 20 دقيقة. أو 30 دقيقة. أو ساعة واحدة أو إيقاف.

9 بعد انتهائك من تعيين المنبه. المس حفظ. ملاحظة: يمكنك إعداد 5 التنبيهات كحد أقصى.

تلميح! المس رمز التشغيل/إيقاف التشغيل الموجود في الجانب الأيمن من المنبه الذي تريد تعيينه.

إضافة مذكرة بواسطة لوحة الرسم

- 1 من شاشة وضع الانتظار حدد  . ثم المس  واختر .
- 2 المس إضافة رسم.
- 3 أرسم مذكرتك على شاشة اللمس LCD يتبعها .
- 4 تظهر مذكرتك على الشاشة في المرة التالية التي تقوم فيها بفتح تطبيق لوحة الرسم.

مسجّل الصوت

استخدم مسجّل الصوت لتسجيل مذكرات صوتية أو أصوات أخرى.

- 1 المس  ثم .
- 2 المس  ثم  أو إعدادات اختر من بين:
الحد - تعيين مدة التسجيل. اختر من ضمن بلا تحديد. أو حجم رسالة وسائط متعددة أو 1 دقيقة.

01

02

03

04

05




06

07

08

المنسق

إضافة حدث إلى التقويم

1 من شاشة وضع الانتظار حدد  . ثم المس  واختر  .
حدد التقويم.

2 حدد التاريخ الذي تريد إضافة حدث إليه.

3 المس  ثم إضافة حدث جديد.

4 المس فئة ثم اختر من ضمن موعد. أو ذكرى أو عيد ميلاد.

تحقق من التاريخ وأدخل الوقت الذي تريد أن يبدأ عنده الحدث.




5 بالنسبة إلى المواعيد ومناسبات الذكرى السنوية أدخل تاريخ ووقت انتهاء الحدث في المرعيين السفليين للتاريخ والوقت.

6 إذا كنت ترغب في إضافة موضوع أو ملاحظة إلى الحدث. المس ملاحظة وكتب ملاحظتك بتبعها حفظ.

7 عين منيه وتكرار.

8 حدد حفظ فيتم حفظ الحدث في التقويم. يقوم رأس مؤشر مربع الشكل بتحديد اليوم الذي تم حفظ أي أحداث فيه وسيرن جرس في وقت البدء المعين للحدث. بحيث يمكنك أن تحافظ على تنظيم أوقاتك.

إضافة عنصر إلى قائمة المهام




1 من شاشة وضع الانتظار حدد  . ثم المس  واختر  .

2 حدد المهام ثم المس إضافة مهام.

3 عيّن تاريخ عنصر المهمة. وأضف الملاحظات وحدد مستوى الأولوية: عالية. أو متوسطة أو منخفضة.

4 احفظ عنصر قائمة المهام وذلك بتحديد حفظ.

إضافة مذكرة

1 من شاشة وضع الانتظار حدد  . ثم المس  واختر  .

2 المس إضافة مذكرة.




3 اكتب المذكرة. بتبعها حفظ.

4 تظهر مذكرك على الشاشة في المرة التالية التي تقوم فيها بفتح تطبيق المذكرة.

استخدام الباحث عن التاريخ

الباحث عن التاريخ هو أداة سهلة تساعدك على احتساب تاريخ الأيام القليلة المقبلة. مثلاً بعد 60 يوماً من التاريخ 10.10.07 سيكون التاريخ 09.12.2007.

إنها أداة مثالية لوضع علامات على المواعيد المحددة.

1 من شاشة وضع الانتظار حدد  . ثم المس  واختر  .

2 حدد الباحث عن التاريخ.

3 في التويب من قم بتعيين التاريخ المطلوب.

4 في التويب بعد قم بتعيين عدد الأيام.

5 يظهر التاريخ الهدف أدناه.

استخدام الراديو

تتوفر في طراز الهاتف LG KP500 ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة للاستماع إليها أثناء التنقل.





ملاحظة: ستحتاج إلى إدراج سماعات الرأس لكي تتمكن من الاستماع إلى الراديو. قم بإدراج سماعات الرأس في المقبس المخصص لها (هذا المقبس هو نفسه المقبس الذي تقوم بتوصيل الشاحن فيه).

البحث عن محطات





يمكنك ضبط محطات الراديو في هاتفك وذلك بالبحث عنها إما يدوياً أو تلقائياً، وسيتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن تعود بحاجة إلى إعادة ضبطها. ويمكنك حفظ ما يصل إلى 50 قناة في هاتفك، ينبغي بك أولاً أن توصل سماعة الرأس بالهاتف إذ إنها تعمل كهوائي.

للضبط تلقائياً:

- 1 المس  ثم .
- 2 المس  ثم .
- 3 المس تفحص تلقائياً، فيتم تلقائياً العثور على المحطات وتخصيصها إلى قناة في هاتفك.

ملاحظة: يمكنك أيضاً ضبط إحدى المحطات يدوياً باستخدام  و  الذي يظهر إلى جانب تردد الراديو، إذا ضغطت باستمرار  و  فسيتم العثور على المحطات تلقائياً.

إعادة تعيين القنوات

- 1 المس  ثم .
- 2 المس  ثم .
- 3 اختر إعادة تعيين لإعادة تعيين القناة الحالية أو اختر إعادة تعيين الكل لإعادة تعيين كل القنوات. تعود كل قناة إلى التردد 87.5 ميغا هرتز وهو تردد البداية.

01

02

03

04

05

06

07

08

الوسائط المتعددة

قوائم التشغيل - تحتوي على كل قوائم التشغيل التي أنشأتها.

مزج المسارات - شقّل المسارات بترتيب عشوائي.

نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر بلوتوث أو كابل المزامنة.

كما يمكنك استخدام LG PC Suite. انظر الصفحة 56 للحصول على التفاصيل. للنقل باستخدام بلوتوث:

1 تأكد من تشغيل بلوتوث على الجهازين ومن كونهما مرتبين بالنسبة إلى بعضهما البعض.


2 حدد ملف الموسيقى على الجهاز الآخر واختر إرساله عبر بلوتوث.

3 عندما يصبح الملف جاهزاً للإرسال، يجب أن تقبله على هاتفك بالضغط على نعم.

4 يجب أن يظهر الملف في موسيقى < كل المسارات.


تشغيل أغنية

1 المس  ثم .


2 المس ، ثم كل المسارات.

3 حدد الأغنية التي تريد تشغيلها.

4 المس  لإيقاف الأغنية مؤقتاً.

5 المس  للتجاوز إلى الأغنية التالية.

6 المس  للتجاوز إلى الأغنية السابقة.

7 المس  للعودة إلى قائمة الموسيقى.

إنشاء قائمة تشغيل

يمكنك إنشاء قوائم التشغيل الخاصة بك وذلك بإنشاء مجموعة مختارة من الأغاني منحافظة كل المسارات.

1 المس  ثم .

2 المس ، ثم قوائم التشغيل.

3 المس إضافة قائمة تشغيل جديدة، وأدخل اسم قائمة التشغيل والمس حفظ.

4 تعرضحافظة كل المسارات كل الأغاني الموجودة على هاتفك، المس كل الأغاني التي تريد تضمينها في قائمة التشغيل. فتظهر علامة إلى جانب اسم كل أغنية.

5 المس حفظ.

عرض ملف

- 1 المس  ثم .
- 2 المس  ثم مستندات.
- 3 حدد مستنداً والمس عرض.

أخرى

تُستخدم حافظة أخرى لحفظ ملفات ليست عبارة عن صور أو أصوات. أو ملفات فيديو أو ألعاب. أو تطبيقات. وهي تُستخدم بالطريقة نفسها التي يتم بها استخدام حافظة المستندات. وقد تجد أن الملفات تظهر في حافظة أخرى عوضاً عن ظهورها في حافظة المستندات وهذا عندما تنقلها من الكمبيوتر إلى هاتفك.



إذا حدث مثل هذا الأمر فيمكنك نقلها. لنقل ملف من حافظة أخرى إلى حافظة المستندات:

- 1 المس  ثم .
- 2 المس  ثم أخرى.
- 3 حدد ملفاً والمس .
- 4 المس نقل. اختر الحافظة المطلوبة من القائمة بواسطة لمس رمز السهم. ستعرض الشاشة تم النقل عندما تكتمل عملية النقل.

إنشاء فيلم

- 1 المس  ثم .
- 2 المس  (استوديو الأفلام).
- 3 المس  لإضافة صورة. ضع علامة في خانة الاختيار بجانب الصور التي تريد تضمينها ثم حدد إدراج.
- 4 المس علامة نيوب الوضع لتختار وضع الأفلام.
- 5 المس الصوت الافتراضي لتغيير الصوت.
- 6 المس  لمشاهدة ما أنشأته.
- 7 المس  ثم طلب لتطلب أمراً ما.
- 8 المس  ثم حفظ الموقع لاختيار الموقع الذي تريد حفظ الفيلم فيه.

الموسيقى

يكون مشغل الموسيقى مضمناً في الهاتف LG KP500 بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك، للوصول إلى مشغل الموسيقى. المس  ثم . من هنا يمكنك الوصول إلى عدد من الحافظات:

تم تشغيلها مؤخراً - قم بعرض كل الأغاني التي قمت بتشغيلها مؤخراً.

كل المسارات - يحتوي على كل الأغاني الموجودة في هاتفك.

الفنانون - لعرض مجموعتك الموسيقية حسب الفنان.

الألبومات - لعرض مجموعتك الموسيقية حسب الألبوم.

الأنواع - لعرض مجموعتك الموسيقية حسب النوع.

01

02

03

04

05

06

07

08

الوسائط المتعددة

مستندات

من قائمة مستندات. يمكنك عرض كل ملفات المستندات. من هنا يمكنك عرض ملفات Excel، و PowerPoint، و Word، و Text، و PDF.

نقل ملف إلى هاتفك

تُعتبر تقنية بلوتوث الطريقة الأكثر سهولة على الأرجح لنقل ملف من الكمبيوتر إلى هاتفك. كما يمكنك استخدام LG PC Suite عبر كابل المزامنة. انظر الصفحة 56 للحصول على التفاصيل.

للنقل باستخدام بلوتوث:

- 1 تأكد من تشغيل بلوتوث على الهاتف والكمبيوتر ومن كونهما مرتبطين ببعضهما بالنسبة إلى بعض.
- 2 استخدم الكمبيوتر لإرسال الملف عبر بلوتوث.
- 3 عندما يُرسل الملف إليك سيترتب عليك قبوله على الهاتف وذلك بلمس نعم.
- 4 يجب أن يظهر الملف في حافظة المستندات أو حافظات أخرى.

تثبيت لعبة/تطبيق بواسطة التثبيت

المحلي

- 1 المس ثم .
- 2 المس وأخرى أو بطاقة الذاكرة إذا كانت الذاكرة الخارجية مدرجة.
- 3 حدد الملف (jad.* أو jar.*) الذي تود تثبيته ثم اضغط على أمر تثبيت. سيتم تثبيت تطبيق. ملاحظة: ينبغي أن يحتوي ملف jad على ملف jar الخاص به.

لعب لعبة

- 1 المس ثم .
- 2 المس والألعاب والتطبيقات.
- 3 افتح حافظة الألعاب واختر لعبةً والمسها لتشغيلها.

01

02

03

04


05

06

07

08

إرسال فيديو كليب

- 1 حدد فيديو والمس 
- 2 المس إرسال واختر من ضمن رسالة. أو بريد إلكتروني أو بلوتوث.
- 3 إذا اخترت رسالة أو بريد إلكتروني. فسيتم إرفاق الفيديو كليب بالرسالة ويمكنك كتابة الرسالة وإرسالها كالمعتاد. إذا اخترت بلوتوث. فسيتم تشغيل بلوتوث تلقائياً وسيبحث هاتفك عن جهاز ليرسل الفيديو إليه.

الألعاب والتطبيقات

يمكنك تثبيت ألعاب وتطبيقات جديدة إلى هاتفك لمساعدتك على التسلية عندما يكون لديك بعض الوقت للقيام بذلك.

استخدام صوت

- 1 المس  ثم .
- 2 المس  ثم أصواتي.
- 3 حدد الأصوات الافتراضية أو التسجيلات الصوتية.
- 4 حدد صوت وسيبدأ تشغيله.
- 5 المس  وحدد استخدام كـ.
- 6 اختر من بين نغمة الرنين. أو نغمة الرسالة. أو بدء التشغيل. أو إيقاف التشغيل.

ملفات الفيديو

تعرض قائمة ملفات الفيديو خاصتي قائمة بملفات الفيديو التي تم تنزيلها إلى هاتفك وملفات الفيديو التي قمت بتسجيلها على هاتفك.

مشاهدة فيديو

- 1 المس  ثم .
- 2 المس  ثم مقاطع الفيديو.
- 3 حدد فيديو ليتم تشغيله.

الوسائط المتعددة

نقل صورة أو نسخها
يمكنك نقل صورة أو نسخها بين ذاكرة الهاتف
وبطاقة الذاكرة. ويمكنك القيام بذلك إما لتحرير
بعض المساحة في إحدى وحدات الذاكرة أو لمنع
فقدان الصور.

- 1 المس  ثم .
- 2 المس  ثم اختر صوري.
- 3 المس  وحدد نقل أو نسخ.
- 4 يمكنك تحديد/إلغاء تحديد الصور بواسطة
الضغط عليها بالتتابع. حدد الصورة التي تريد أن
تنقلها أو تنسخها والمس نسخ/نقل.

أصوات

تحتوي حافظه أصواتي على الأصوات التي تم تنزيلها
وعلى الأصوات الافتراضية والتسجيلات الصوتية.
ومن هنا يمكنك إدارة الأصوات، أو إرسالها، أو تعيينها
كنغمات رنين.

صورة بدء التشغيل - قم بتعيين صورة بحيث
تظهر عند تشغيل الهاتف.
صورة إيقاف التشغيل - قم بتعيين صورة بحيث
تظهر عند إيقاف تشغيل الهاتف.




طباعة صورة

- 1 المس  ثم .
- 2 المس  ثم صوري.
- 3 حدد صورة والمس .
- 4 المس طباعة ثم اختر بين بلوتوث و
PictBridge.

تلميح! يمكنك الطباعة عبر بلوتوث أو عبر
الاتصال بطابعة PictBridge متوافقة.


الوسائط المتعددة

يمكنك تخزين أي ملفات وسائط متعددة في ذاكرة الهاتف بحيث يتوفر لديك الوصول السهل إلى كل الصور والأصوات وملفات الفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة، الفائدة من استخدام بطاقة الذاكرة هي أنها تسمح لك بتحرير مساحة على ذاكرة الهاتف.



للوصول إلى قائمة الوسائط المتعددة، المس  ثم . المس  لفتح قائمة الحافظات التي تحفظ كل ملفات الوسائط المتعددة.

صور

يحتوي بصوري على قائمة بالصور تتضمن الصور الافتراضية التي تم تنزيلها مسبقاً في هاتفك. وصوراً قمت أنت بتنزيلها وصوراً تم التقاطها بكاميرا الهاتف.

المس  لتغيير العرض من عرض الصور المصغرة إلى عرض قائمة.

إرسال صورة

- 1 المس  ثم .
- 2 المس  ثم اختر بصوري.
- 3 المس  لإرسال واختر من ضمن رسالة، أو بريد إلكتروني، أو بلوتوث.
- 4 إذا اخترت رسالة أو بريد إلكتروني، فسيتم إرفاق صورتك بالرسالة ويمكنك كتابة الرسالة وإرسالها بشكل عادي، إذا اخترت بلوتوث، فسيتم تشغيل بلوتوث تلقائياً وسيبحث هاتفك عن جهاز ليرسل الصورة إليه.

استخدام صورة

- يمكنك اختيار الصور لاستخدامها كخلفيات للشاشة وكشاشات توقف أو حتى لتعريف المتصل.
- 1 المس  ثم .
 - 2 المس  ثم اختر بصوري.
 - 3 حدد صورة والمس .
 - 4 المس استخدام كـ واختر من ضمن:

خلفية - تعيين خلفية للشاشة وضع الانتظار.
صور الأسماء - قم بتعيين صورة إلى شخص معين في قائمة الأسماء المتوفرة لديك بحيث تظهر صورته عند اتصاله بك.

01

02

03

04

05

06

07

08

الصور وملفات الفيديو

إضافة نص إلى صورة

1 في شاشة التعديل **T** المس .

2 حدد **توقيع** لإضافة نص بدون إطار أو اختر أحد الأشكال الفعّالة للكلام.

3 أدخل النص باستخدام لوحة المفاتيح والمس **حفظ**.

4 حرّك النص وذلك بلمسه ودفعه إلى المكان حيث ترغب بأن يكون.

إضافة تأثير إلى صورة

1 في شاشة التعديل  المس .

2 اختر تطبيق أي خيار من الخيارات الستة على الصورة:

تجميل الوجه - يكشف تلقائياً وجهاً في الصورة ويجعله ساطعاً.

تأثير النفق - تأثير الكاميرا لومو.

لون سالب - تأثير لون سالب.

أسود وأبيض - تأثير الألوان أسود وأبيض.

بني داكن - تأثير بني داكن.

غير واضح - تطبيق تأثير غير واضح.

زيادة التركيز - حرّك العلامة على طول الشريط

لزيادة التركيز على الصورة. حدد رمز موافق

لتطبيق التغييرات أو اختر  للإلغاء.

غشاوة فسيفسائية - المس لتطبيق تأثير

فسيفسائي ذي غشاوة على الصورة.

رسم بالزيت - تأثير الرسم بالزيت.

التخطيط - تطبيق تأثير لتبدو الصورة كخطيطة.

زخرفة - تأثير زخرفة.

التشمّس - تغيير تأثير التباين للضوء

زاهية - تأثير يعثّ الوضوح والإشراق.


ضوء القمر - تغيير الضوء ليبدو كضوء القمر.

معقّق - تأثير صورة قديمة.

توهج - تأثير شعاع ضوء.

رسوم متحركة - تأثير رسوم متحركة.


ألوان مائية - تأثير ألوان مائية.

3 للترجع عن أحد التأثيرات، ما عليك إلا لمس **تراجع** 


01

T ضع كتاباً على الصورة. انظر إضافة نص إلى صورة في الصفحة 44.


02

 قم بتزيين صورتك بواسطة الطوابيع. اختر من ضمن مختلف الطوابيع المتوفرة والمس الصورة حينما رغبت في وضع هذه الطوابيع.


03

 امسح ما ترسمه.


05

 حفظ التغييرات التي أدخلتها على الصور. حدد لحفظ التغييرات فوق الملف الأصلي. أو كملف جديد. إذا حددت ملف جديد فأدخل اسم ملف.

06


 التراجع عن التأثير الأخير أو التعديل الذي أدخلته على الصورة.

07


 المس لفتح المزيد من خيارات التأثير بما فيها الاستدارة. هناك أيضاً المزيد من خيارات التعديل المتقدمة. انظر تغيير الحجم والتشكيل وتوكيد الألوان وإضافة الصور. إلخ.

08

 انظر إضافة تأثير إلى صورة في الصفحة 44.


 المس للعودة إلى الاستوديو.


تعين صورة كخلفية الشاشة


- 1 المس الصورة التي ترغب في تعيينها كخلفية الشاشة لفتحها. حوّل الهاتف إلى العرض الأفقي.
- 2 المس الجانب الأيمن من الشاشة لفتح قائمة الخيارات.
- 3 المس .
- 4 تنتقل الشاشة إلى الوضع العمودي. يمكنك عندها تغيير حجم الصورة.
- 5 إذا كانت الصورة توافق متطلباتك، فالمس **تعين**.

تعديل الصور

هناك الكثير من الأشياء الرائعة التي يمكنك تطبيقها على صورتك لتغييرها. أو الإضافة إليها. أو إضفاء بعض الحيوية إليها.


- 1 افتح الصورة التي ترغب في تعديلها والمس  لإحضار الخيارات.
- 2 المس الرموز لتكبير صورتك:

 اقتصاص الصورة. اختر منطقة اقتصاص مربعة أو دائرية وحرك إصبعك عبر الشاشة لتحديد المنطقة.

 ارسم شيئاً على الشكل الحر لصورتك. حدد سماكة الخط من ضمن الخيارات الأربعة واللون الذي تود استخدامه.


الصور وملفات الفيديو

عرض الصور وملفات الفيديو

1  المس على شاشة المعاينة الخاصة بالكاميرا.

2 يظهر الاستوديو على الشاشة.


3 المس الفيديو أو الصورة مرتين لفتحهما كلياً.

4 لتشغيل الفيديو المس  . لإيقاف التشغيل مؤقتاً المس  .

تنميح! انقر إلى اليمين أو إلى اليسار لعرض صور أخرى أو ملفات فيديو أخرى.

التقاط صورة من فيديو

1 حدد الفيديو الذي تريد التقاط صورة منه.

2  المس لإيقاف الفيديو مؤقتاً على الإطار الذي تريد تحويله إلى صورة والمس الجانب الأيمن من الشاشة لفتح قائمة الخيارات.

3 من قائمة الخيارات حدد  .

4 تظهر الصورة على الشاشة مع اسم الصورة المعين لها.

5 المس الصورة ثم  للعودة إلى الاستوديو.

6 تحفظ الصورة في حافظة ألبوم الوسائط وتظهر في الاستوديو. ستحتاج إلى الخروج من الاستوديو ثم إعادة فتحه لكي تظهر الصورة.

⚠ تحذير: قد لا تعمل بعض الوظائف بشكل صحيح إذا لم يكن ملف الوسائط المتعددة مسجلاً في الهاتف.

مشاهدة الصور كعرض شرائح

يُظهر عرض الشرائح كل الصور الموجودة في الاستوديو كل صورة على حدة كعرض شرائح. ولا يمكن عرض مقاطع الفيديو كعرض شرائح.

1 المس مرتين الصورة التي تريد أن تبدأ عرض الشرائح لفتحها.

2 تحديد  .


3 يبدأ عرض الشرائح.

هناك خيارات ضمن عرض الشرائح:

 المس لعرض عشوائي.

 المس لإيقاف عرض الشرائح مؤقتاً على صورة معينة.

 المس مجدداً لاستئناف التشغيل.

 المس لزيادة سرعة عرض الشرائح أو إتقاص سرعته.


تغيير حجم صورة الفيديو


يقدر ما يكون عدد عناصر البكسل كبيراً. يقدر ما يكون حجم الملف أكبر. وهذا يعني أن الملف سيحتل مساحة أكبر في الذاكرة. إذا أردت أن يستوعب هاتفك المزيد من ملفات الفيديو، فيمكنك تعديل عدد عناصر البكسل لجعل الملف أصغر حجماً.

1 في محدد المنظر المس  في الزاوية العلوية اليسرى.

2 حدد حجم الفيديو في قائمة المعاينة.

3 حدد قيمة يكسل من الخيارات الثلاثة:

 **320x240** - حجم صورة أصغر. وبالتالي حجم ملف أصغر. يتوفر حتى 24 إطاراً في الثانية لإعادة تشغيل الفيديو. وحتى 12 إطاراً في الثانية لتسجيل الفيديو.

 **176x144** - حجم صورة أصغر. وبالتالي حجم ملف أصغر. يتوفر حتى 15 إطاراً في الثانية لإعادة تشغيل الفيديو.

4 المس خيار الحجم الذي ترغب في استخدامه.

تلميح! بالنسبة إلى برنامج حوّل التنسيق. راجع القرص المضغوط الذي يصحب KP500.

اختيار درجة اللون

1 في محدد المنظر المس  في الزاوية العلوية اليسرى.

2 حدد تأثير الألوان من قائمة الإعدادات.

3 هناك خمسة خيارات لدرجة اللون: لا لون (عادي)، أو أسود وأبيض. أو سالب. أو بني داكن.

4 المس درجة اللون التي ترغب في استخدامها.

تلميح! يمكنك تغيير فيديو تم التقاطه بالألوان إلى الأسود والأبيض أو البني الداكن بعد التقاطه. غير أنه لا يمكنك تغيير فيديو تم التقاطه بالأسود والأبيض أو البني الداكن إلى الألوان.

مشاهدة ملفات الفيديو المحفوظة

1 في محدد المنظر المس .

2 يظهر الاستوديو على الشاشة.

3 المس الفيديو الذي تريد عرضه مرة واحدة لإحضاره إلى مقدمة الاستوديو.

4 المس الفيديو مرة ثانية لفتحته بشكل كامل.

01

02

03

04

05

06

07

08

كاميرا فيديو

ضبط التباين

يعرّف التباين الفرق بين الألوان الفاتحة والداكنة (التباين) في فيديو ما. يظهر الفيديو ذو التباين المنخفض ضبابيًا، بينما يظهر الفيديو ذو التباين العالي أكثر دقةً ووضوحًا.

1 المس +

2 ادفع مؤشر التباين عبر الشريط. نحو اليسار للحصول على تباين منخفض. وفيديو ضبابي. أو نحو اليمين للحصول على تباين أعلى وصورة أوضح.

الجودة - اختر من ضمن دقيق جداً، ودقيق وعادي. بقدر ما تكون الجودة دقيقة بقدر ما يكون الفيديو واضح المعالم ولكن حجم الملف سيكون أكبر نتيجة لذلك، مما يعني أنه سيكون باستطاعتك حفظ عدد أقل من ملفات الفيديو في الذاكرة.

تعيين الوقت - قم بتعيين حد لمدة الفيديو. اختر بلا تحديد. أو **وسائط متعددة** لتحديد الحجم لتتمكن من إرسال الفيديو كرسالة وسائط متعددة.

وضع العرض - اختر بين ملء الشاشة وصورة كاملة. قد تكون الصورة مقطّعة قليلاً في ملء الشاشة.

تلميح! إذا اخترت مدة وسائط متعددة، فحاول اختيار جودة أقل للصورة لتمكينك من التقاط فيديو أطول.

إعدادات أخرى

الذاكرة - اختر ما إذا كنت تريد حفظ ملفات الفيديو في ذاكرة الهاتف أو في الذاكرة الخارجية.

الصوت - اختر كنتم لتسجيل فيديو بدون صوت.

إعادة تعيين الإعدادات - قم بإعادة تعيين إعدادات كاميرا الفيديو كافةً.

استخدام الإعدادات المتقدمة

في محدد المنظر المس الإعدادات لفتح كل خيارات الإعدادات المتقدمة.

إعدادات المعاينة

حجم الفيديو - غير حجم الفيديو لتوفير مساحة في الذاكرة. انظر تغيير حجم صورة الفيديو على الصفحة 41.

تأثير الألوان - اختر درجة اللون التي تريد تطبيقها على الفيديو الذي تلتقطه. انظر اختيار درجة اللون على الصفحة 41.

توازن اللون الأبيض - بضمن توازن الأبيض ظهور أي لون أبيض في الفيديو كواقعي. لكي تتمكن الكاميرا من ضبط توازن اللون الأبيض بشكل صحيح. قد تحتاج إلى تحديد شروط الإضاءة. اختر من ضمن تلقائي. أو متوهج. أو مشمس. أو فلوريسنت. أو غائم.

التعرّف على محدد المنظر

01

02

03

04

05

06

07

08

الإعدادات - المس هذا الرمز لفتح قائمة الإعدادات.
انظر استخدام الإعدادات المتقدمة في الصفحة 40
للحصول على التفاصيل.

وضع الفيديو - وضع الفيديو محدد.

حجم الصورة

حفظ في ذاكرة الهاتف/الذاكرة الخارجية

رجوع - المس هنا للعودة إلى شاشة وضع الانتظار.

الاستوديو

التيابن - انظر ضبط التيابن في الصفحة 40.


حجم الفيديو

إيقاف التسجيل

تشغيل التسجيل

التكبير/التصغير - المس  للتكبير أو  للتصغير.

وضع الكاميرا - المس هذا الرمز للانتقال إلى وضع الكاميرا.

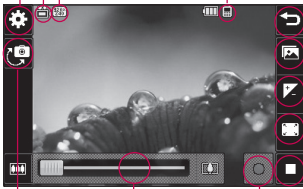



تلميح! يمكنك إغلاق كل خيارات القائمة المختصرة للحصول على شاشة أوضح لمحدد المنظر. ما عليك إلا لمس وسط محدد المنظر مرة واحدة. لاستدعاء الخيارات لمس الشاشة مرة أخرى.

كاميرا فيديو

التقاط فيديو سريع

- 1 اضغط على مفتاح الكاميرا الموجود في الجانب الأيمن من الهاتف.
- 2 في وضع المعاينة الخاص بالكاميرا، المس رمز كاميرا الفيديو  في الباحث عن العرض لتنقل إلى وضع الفيديو، سيظهر محدد المنظر في كاميرا الفيديو على الشاشة.
- 3 مع حمل الهاتف أفقياً، صوّب العدسة باتجاه موضوع الفيديو.
- 4 اضغط على زر الالتقاط مرة واحدة لبدء التسجيل. أو اضغط على النقطة الحمراء  في الجانب الأيمن السفلي من الشاشة.
- 5 يظهر **REC** في أعلى محدد المنظر ويظهر مؤقتاً في الأسفل لعرض طول الفيديو.
- 6 لإيقاف الفيديو مؤقتاً المس  وللاستئناف حدد .
- 7 المس  على الشاشة أو اضغط على زر الالتقاط مرة ثانية لإيقاف التسجيل.

بعد الانتهاء من التقاط الفيديو

- ستظهر على الشاشة صورة ثابتة تمثل الفيديو الملتقط، ويمتد اسم الصورة عبر أسفل الشاشة مع سعة رموز في الجانب الأيمن السفلي.
- المس لتشغيل الفيديو 
- المس لإرسال الفيديو كرسالة أو بريد إلكتروني  أو بواسطة بلوتوث. انظر الصفحة 28 لمعرفة كيفية إرسال الرسائل. أو الصفحة 65 لمعرفة كيفية إرسال الملفات واستلامها باستخدام بلوتوث.
- المس لتعديل الفيديو. 
- المس لعرض معرض من الصور وملفات الفيديو المحفوظة. 
- المس لحذف الفيديو الذي قمت لتوك بالتقاطه  وأكد بلمس نعم. يظهر محدد المنظر من جديد.
- المس لالتقاط فيديو آخر على الفور، وسيتم حفظ الفيديو الحالي. 

صوت الغالق - حدد خياراً من ضمن خيارات صوت الغالق الثلاثة.

شاشة الشبكة - اختر من ضمن إيقاف تشغيل، أو تقاطع بسيط، أو ثلاثية الأقسام

إعادة تعيين الإعدادات - قم بإعادة تعيين إعدادات الكاميرا كافة.

تلميح! عندما تنهي تشغيل الكاميرا، تعود كل الإعدادات إلى وضعها الافتراضي باستثناء حجم الصورة وجودتها. ستحتاج كل الإعدادات غير الافتراضية المطلوبة إلى إعادة التعيين. كدرجة اللون مثلا. خقق منها قبل التقاط صورتك التالية.

تغيير حجم الصورة

بقدر ما يكون عدد عناصر البكسل كبيراً، بقدر ما يكون حجم الملف أكبر. وهذا يعني أن الملف سيحتل مساحة أكبر في الذاكرة. إذا أردت أن يستوعب هاتفك المزيد من الصور، فيمكنك تعديل عدد عناصر البكسل لجعل الملف أصغر حجماً.

1 في محدد المنظر المس  في الزاوية العلوية اليسرى.

2 حدد حجم في قائمة المعاينة.

3 حدد قيمة بكسل من ضمن الخيارات
الرقمية الخمسة (3M: 2048x1536)
1M: 1280x960 2M: 1600x1200
أو 480x640 (W) 400x240 (320x240) أو
اختر التعيين المسبق:

جهة اتصال - يؤدي هذا الخيار إلى تعيين الكاميرا لالتقاط صورة وفق الحجم المثالي الذي يمكن إضافته إلى جهة اتصال محفوظة في الهاتف.

اختيار تأثير اللون


1 في محدد المنظر المس  في الزاوية العلوية اليسرى.

2 حدد تأثير الألوان من قائمة المعاينة.

3 هناك خمسة خيارات لدرجة اللون: لا لون، أو أسود وأبيض، أو سالب، أو بني داكن.

تلميح! يمكنك تغيير صورة تم التقاطها بالألوان إلى الأسود والأبيض أو البني الداكن بعد التقاطها. غير أنه لا يمكنك تغيير صورة تم التقاطها بالأسود والأبيض أو البني الداكن إلى صورة ملونة.

عرض الصور المحفوظة

1 يمكنك الوصول إلى الصور المحفوظة من ضمن وضع الكاميرا، ما عليك سوى لمس  وسيظهر الاستوديو على الشاشة.

01

02

03

04

05

06

07

08

الكاميرا

اختيار نوع اللقطة

1 المس  لفتح أنواع اللقطات المتوفرة.

2 اختر من بين خيارين:

لقطة عادية - هذا هو نوع اللقطة الافتراضي. حيث يتم التقاط الصورة بالطريقة العادية، كما تم توضيحه في التقاط صورة سريعة.

لقطة متلاحقة - يمكنك هذا الخيار من أخذ 3/6/9 لقطات تلقائياً بطريقة متتابعة وسريعة.

ضبط التباين

يعرّف التباين الفرق بين الألوان الفاتحة والداكنة (التباين) في صورة ما. فتظهر الصورة ذات التباين المنخفض ضبابية، بينما تظهر الصورة ذات التباين العالي أكثر دقة ووضوحاً.

1 المس .

2 قم بتمرير مؤشر التباين عبر الشريط - يساراً للحصول على تباين منخفض. وصورة ضبابية أو يميناً للحصول على تباين أعلى وصورة أوضح.

تأثير الألوان - اختر درجة اللون التي تريد تطبيقها على الصورة التي تلتقطها. انظر اختيار تأثير الألوان في الصفحة 37.

توازن اللون الأبيض - اختر من ضمن تلقائي، أو متوهج، أو مشمس، أو فلوريسنت، أو غائم.

وضع الليل - مفيد للاستخدام في مكان مظلم.

المؤقت الذاتي - يسمح لك المؤقت الذاتي بتعيين فترة تأخير بعد ضغط زر الالتقاط قبل أن تلتقط الكاميرا الصورة. اختر من ضمن 3 ثوان، أو 5 ثوان أو 10 ثوان. يُعتبر هذا الأمر جيداً لصورة المجموعة التي تريد أن تكون جزءاً منها.

الجودة - اختر من ضمن دقيق جداً، دقيق و عادي. بقدر ما تكون الجودة دقيقة بقدر ما تكون الصورة واضحة المعالم ولكن حجم الملف سيكون أكبر. أي أنك ستتمكن من تخزين عدد أقل من الصور في الذاكرة.

وضع العرض - اختر بين ملء الشاشة وصورة كاملة. قد تكون الصورة مفتوحة قليلاً في ملء الشاشة.

إعدادات أخرى

الذاكرة - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو في الذاكرة الخارجية.

استخدام الإعدادات المتقدمة


من محدد المنظر المس  لفتح كل خيارات الإعدادات المتقدمة.

إعدادات المعاينة

الحجم - غير حجم الصورة لتوفير مساحة في الذاكرة أو التقاط صورة لجهة اتصال ما تكون معينة مسبقاً للحجم الصحيح. انظر تغيير حجم الصورة في الصفحة 37.

التعرّف على محدد المنظر

- 01
- 02
- 03
- 04**
- 05
- 06
- 07
- 08

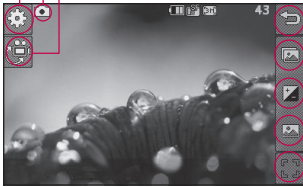

الإعدادات - المس هذا الرمز لفتح قائمة الإعدادات.
انظر استخدام الإعدادات المتقدمة في الصفحة 40
للحصول على التفاصيل.

وضع الكاميرا - وضع الكاميرا محدد.

وضع كاميرا فيديو - المس هذا الرمز للانتقال إلى
وضع الفيديو.

رجوع - المس هنا للعودة إلى شاشة وضع الانتظار.

الاستوديو

السطوع - انظر ضبط التباين في الصفحة 40.

نوع اللقطة - انظر اختيار نوع اللقطة في الصفحة
36.

النقط صورة







تلميح! يمكنك أن تحضر الخيارات بواسطة لمس
الشاشة، وهي تتوقف عن التشغيل تلقائيًا بعد
بضع ثوانٍ.

الكاميرا

التقاط صورة سريعة

- 1 اضغط  لفترة قصيرة على المفتاح الموجود على الجانب الأيمن من الهاتف.
سيظهر محدد المنظر على الشاشة.
- 2 مع الإمساك بالهاتف أفقياً، صوّب العدسة باتجاه موضوع الصورة.
- 3 ضع الهاتف بحيث يمكنك مشاهدة موضوع الصورة في معاينة الشاشة.
- 4 عندما تركز الكاميرا على موضوع الصورة، إمّا اضغط على  الموجود على جانب الهاتف بقوة أو اضغط على الخانة الحمراء الموجودة على الجانب الأيمن السفلي من الشاشة لتلتقط الصورة.

بعد التقاط الصورة

- تظهر الصورة الملتقطة على الشاشة، ويمتد اسم الصورة عبر أسفل الشاشة مع ستة رموز في الجانب الأيمن السفلي.
-  المس لنتقل إلى الاستوديو.
-  المس لترسل الصورة كرسالة، أو بريد إلكتروني، أو بلوتوث. انظر الصفحة 28 لإرسال رسالة، والصفحة 65 لإرسال الملفات واستلامها باستخدام بلوتوث.
-  المس لتعديل الصورة.
-  المس لتعيين الصورة التي قمت بالتقاطها كخلفية.
-  المس لحذف الصورة التي التقطتها للتو وأكد بلمس نعم، يظهر محدد المنظر من جديد.
-  المس لالتقاط صورة أخرى على الفور، وسيتم حفظ صورتك الحالية.

تغيير الإعدادات الأخرى

01

المس ✉️ واختر إعدادات في قائمة الاتصال ثم:

02

بريد صوتي - المس 📧 لإضافة خدمة بريد صوتي جديدة. اتصل بمشغل الشبكة للحصول على مزيد من المعلومات حول الخدمة التي يقدمها.

03

رسالة الخدمة - اختر استلام أو حظر رسائل الخدمة، كما يمكنك تعيين حماية الرسالة وذلك بإنشاء قوائم مرسلين موثوق بهم وغير موثوق بهم.

05

خدمة المعلومات - اختر حالة الاستلام، واللغة.

06

وإعدادات أخرى.

07

08

وضع الاسترداد - اختر شبكة محلية أو شبكة جوال، إذا اخترت يدوي فستتلقي إعلام برسائل وسائط متعددة فقط ويمكنك حينئذٍ أن تقرر ما إذا كنت ترغب في تنزيلها بشكل كامل.

تقرير الاستلام - اختر السماح و/أو طلب تقرير استلام.

تقرير القراءة - اختر السماح و/أو طلب تقرير رد الأولوية - اختر مستوى أولوية رسالة وسائط متعددة.

مدة الصلاحية - اختر فترة حفظ رسالتك في مركز الرسائل.

مدة الشريحة - اختيار مدة ظهور الشرائح على الشاشة.

وضع الإنشاء - اختر وضع الرسائل.

وقت الاستلام - اختيار المدة قبل استلام كل رسالة.

مركز الرسائل المتعددة - إدخال تفاصيل مركز الرسائل.

الرسائل

صندوق الصادر - عبارة عن حافظة لحفظ الرسائل مؤقتًا فيما يكون إرسالها جارٍ.

العناصر المرسلّة - يتم وضع كل الرسائل التي أرسلتها في هذه الحافظة.


حافظاتي - إنشاء حافظات لحفظ رسائلك.

تغيير إعدادات الرسائل النصية

تكون إعدادات الرسائل في الهاتف KP500 معرّفة مسبقًا بحيث يمكنك إرسال الرسائل على الفور.

يمكن تغيير هذه الإعدادات بحسب تفضيلاتك.

تلميح! للتمرير عبر قائمة الخيارات، المس العنصر المرئي الأخير وقم بتمرير إصبعك إلى أعلى الشاشة. ستتحرك القائمة نحو الأعلى بحيث يصبح عدد أكبر من العناصر مرئيًا.

المس  ثم اختر إعدادات في قائمة اتصال. حدد رسالة نصية. يمكنك إدخال تغييرات على:

مركز الرسائل النصية - أدخل تفاصيل مركز الرسائل.

تقرير استلام - مرر المفتاح إلى اليسار لاستلام تأكيد بأنه تم تسليم رسائلك.

مدة الصلاحية - اختر فترة تخزين رسائلك في مركز الرسائل.

أنواع الرسائل - تحويل النص إلى نص أو صوت أو فاكس أو X.400 أو بريد إلكتروني.

ترميز الحروف - اختر طريقة ترميز الحروف. ويؤثر هذا الأمر على حجم رسائلك وبالتالي على رسوم البيانات. إرسال النص الطويل ك- اختيار إرسال النص الطويل كرسائل نصية متعددة أو كرسالة وسائط متعددة.

تغيير إعدادات رسائل الوسائط المتعددة

تكون إعدادات الرسائل في الهاتف KP500 معرّفة مسبقًا بحيث يمكنك إرسال الرسائل على الفور.

يمكن تغيير هذه الإعدادات بحسب تفضيلاتك.

المس  . حدد  ثم  . اختر إعدادات ورسالة وسائط متعددة. يمكنك إدخال تغييرات على:

01

استرداد تلقائي أثناء التجوال - اختر ما إذا كنت ترغب في استرداد رسائلك تلقائياً أثناء تواجدك في الخارج (التجوال).

02

إعلام ببريد إلكتروني جديد - اختر ما إذا كان يجب تنبيهك عند وصول رسائل بريد إلكتروني جديدة.

03

التوقيع - أنشئ توقيعاً على البريد الإلكتروني وشغل هذه الميزة.

04

الأولوية - اختر مستوى الأولوية لرسائل البريد الإلكتروني.

05

06

07

حافظات الرسائل
ستتعرف على بنية الحافظة المستخدمة في الهاتف KP500، والتي تفسر نفسها بنفسها.

08




صندوق الوارد - يتم وضع كل الرسائل التي تردك في صندوق الوارد، من هنا يمكنك عرض وحذف وأكثر من ذلك. انظر إدارة الرسائل أدناه للحصول على التفاصيل.

صندوق البريد - سيتم وضع كل رسائل البريد الإلكتروني التي تنلقها على KP500 في صندوق البريد لديك.

مسودات - إذا لم يكن لديك الوقت الكافي للانتهاء من كتابة رسالة، فيمكنك أن تحفظ هنا ما قمت به حتى اللحظة.

تغيير إعدادات البريد الإلكتروني

يمكنك تغيير إعدادات البريد الإلكتروني وفق تفضيلاتك الخاصة.

1 المس  ثم حدد  و .

2 المس إعدادات و بريد إلكتروني ثم يمكنك تكييف الإعدادات التالية:

السماح بالرد على البريد الإلكتروني - اختر السماح بإرسال رسائل "تأكيد القراءة".

طلب الرد على البريد الإلكتروني - اختر ما إذا كان يجب طلب رسائل تأكيد القراءة.

الفواصل الزمنية للاسترداد - اختر مدى تكرار قيام KP500 بالتحقق من وجود رسائل بريد إلكتروني جديدة.

استرداد القيمة - اختر عدد رسائل البريد الإلكتروني التي تود استردادها في المرة الواحدة.

تضمين الرسالة في إعادة التوجيه والرد - اختر تضمين الرسالة الأصلية في ردك.


تضمين المرفق - اختر تضمين المرفق الأصلي في أي رد.

الرسائل

إعداد البريد الإلكتروني

يمكنك أن تبقى على تواصل أثناء التنقل من خلال استخدام البريد الإلكتروني على الهاتف KP500. فعملية إعداد حساب بريد إلكتروني POP3 أو IMAP4 تُعتبر عملية بسيطة وسهلة.

1 المس  ثم اضغط على .

2 حدد  ثم مرر القائمة إلى إعدادات.

3 المس بريد إلكتروني ثم حسابات البريد الإلكتروني.

4 المس حساب جديد.

5 سيساعدك معالج الإعداد على إعداد إعدادات بريدك الإلكتروني.




6 يمكنك التحقق من الإعدادات وتعديلها بواسطة تحديد حساب في القائمة، كما يمكنك التحقق من الإعدادات الإضافية التي تمت تعبئتها تلقائياً عندما أنشأت الحساب.

7 يمكنك أن تغيّر حساب البريد الإلكتروني الافتراضي بواسطة لمس تنشيط.


استرداد بريدك الإلكتروني

يمكنك أن تتحقق من وجود رسائل بريد إلكتروني جديدة في حسابك تلقائياً أو يدوياً. انظر "تغيير إعدادات البريد الإلكتروني" في الصفحة 30 للتحقق التلقائي.

للتحقق يدوياً:

1 المس  ثم حدد  و .

2 المس صندوق البريد.

3 المس الحساب الذي تريد استخدامه ثم .

4 اختر استرداد فيتصل هاتفك KP500 بحساب بريدك الإلكتروني ويسترد رسائلك الجديدة.

إرسال بريد إلكتروني باستخدام حسابك الجديد

1 المس البريد الإلكتروني الجديد في قائمة اتصال فيفتح بريد إلكتروني جديد.

2 يمكنك إدخال عنوان المستلم وتدوين رسالتك. يمكنك أيضاً إرفاق صور أو ملفات فيديو أو أصوات أو أنواع ملفات أخرى.

3 المس إرسال فيتم إرسال البريد الإلكتروني.

T9 التنبؤي

في وضع T9 ستري **T9** .

يستخدم وضع T9 قاموساً مضمناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسل المفاتيح التي تلمسها. ما عليك إلا لمس مفتاح الرقم المقترن بالحرف الذي تريد إدخاله، وسيتوقع القاموس الكلمة التي تود استخدامها.

اضغط مثلاً 3 8 3 5 3 7 4 6 3 لكتابة "telephone".


دليل Abc

في وضع Abc ستري **T9** .

في وضع Abc عليك لمس المفتاح بشكل متكرر لإدخال حرف. فلكتابه كلمة "hello"، مثلاً المس 4 مرتين. و3 مرتين. و5 ثلاث مرات، و5 ثلاث مرات مجدداً، ثم 6 ثلاث مرات.

لوحة المفاتيح

في وضع لوحة المفاتيح تنقلب الشاشة إلى الوضع الأفقي وتظهر لوحة مفاتيح كاملة على الشاشة. ما عليك إلا لمس كل حرف لكتابة رسالتك واضغط على:

 للتبديل إلى الأحرف الكبيرة

التعريف على الكتابة اليدوية

في وضع الكتابة اليدوية ما عليك إلا أن تكتب على الشاشة وسيقوم KP500 بتحويل كتابتك اليدوية إلى رسالتك. حدد شاشة أو صندوق وفق طريقة العرض المفضلة لديك.

تلميح! قد تجد أنه من الأسهل استخدام إبرة الفونوغراف في هذا الوضع. يرجى أن نتذكر أنه عليك الضغط بشكل خفيف وذلك لحماية الشاشة من أي ضرر قد يلحق بها.

يترجم التعرف على الكتابة اليدوية حركات القلم إلى أحرف. أو أرقام أو أحرف أخرى. ثم يعرض هذه الأحرف على شكل نص. يكون التعرف على الكتابة اليدوية نشطاً فقط حيث يمكن إدخال نص.

01

02

03

04

05

06

07

08

الرسائل

الرسائل

يجمع الهاتف KP500 ميزات إرسال رسائل نصية. و وسائط متعددة والبريد الإلكتروني في قائمة واحدة و بديهية وسهلة الاستخدام.

هناك طريقتان لدخول مركز الرسائل:

- 1 المس ✉ من شاشة وضع الانتظار.
- 2 المس 📧 من شاشة وضع الانتظار. ثم حدد واختر .

إرسال رسالة

- 1 المس ✉ لفتح رسالة فارغة.
- 2 من هنا يمكنك إرسال رسائل نصية أو وسائط متعددة. لإرسال بريد الكتروني. المس 📧 من شاشة وضع الانتظار، ثم حدد 📧 و 📧 . انظر الصفحة 30 للحصول على التفاصيل.
- 3 المس إدراج. لإضافة صورة. أو فيديو. أو صوت. أو نموذج.
- 4 المس الى 1 في أعلى الشاشة لإدخال رقم المستلم. أو المس رمز البحث لفتح دفتر العناوين. يمكنك إضافة عدة الأسماء. المس إرسال عندما تصبح جاهزًا.

⚠ تحذير: إذا تمت إضافة صورة. أو فيديو. أو صوت إلى رسالة نصية فسيتم تحويلها تلقائياً إلى وسائط متعددة وسيُفرض رسم عليك وفقاً لذلك.

إدخال النص

هناك خمس طرق لإدخال نص:

لوحة المفاتيح. وشاشة الكتابة اليدوية. و صندوق الكتابة اليدوية. و صندوق الكتابة اليدوية المزدوج.

يمكنك أن تختار أسلوب الإدخال بواسطة الضغط على 📄 وأسلوب الإدخال.

اضغط على الشاشة مرة واحدة فقط تظهر لوحة المفاتيح.

🔑 T9 المس لبدء تشغيل نص T9 التنبؤي.

🌐 بإمكانك اختيار لغات الكتابة.

🔢 123 اضغط لتغيير الأرقام والرموز ولوحة مفاتيح النص.

استخدم ⬆ للتبديل عبر مختلف أنواع لوحات المفاتيح في كل وضع من أوضاع إدخال النص (مثلاً. الأحرف الكبيرة أو الأحرف الصغيرة).

⚠ تحذير: سيتم فرض رسم عليك لكل رسالة نصية تتألف من صفحة واحدة لكل شخص تُرسل الرسالة إليه.

عرض المعلومات

- 1 من شاشة وضع الانتظار المسح وحدد .
- 2 المسح وحدد معلومات.
- 3 من هنا يمكنك عرض أرقام الاتصال بالخدمة، ورقمك الخاص، ومعلومات الذاكرة، (مساحة الذاكرة المتبقية لديك) بالإضافة إلى بطاقة العمل الخاصة بي.

تلميح! إذا كنت بحاجة إلى إضافة بطاقة عمل لنفسك، فحدد بطاقة العمل الخاصة بي وأدخل كل التفاصيل المتعلقة بك كما لو كان الأمر يتعلق بأي جهة اتصال أخرى. المسح حفظ للانتهاء.

نقل - يعمل هذا الأمر بالطريقة نفسها التي يعمل بها النسخ. غير أن جهة الاتصال ستُحفظ فقط في الموقع الذي تم نقلها إليه. لذا، إذا نقلت جهة اتصال من بطاقة USIM إلى الهاتف فسيتم حذفها من ذاكرة بطاقة USIM.

إرسال كل الأسماء عبر بلوتوث - أرسل كل الأسماء إلى جهاز آخر باستخدام بلوتوث. ستتم مطالبتك ببدء تشغيل بلوتوث إذا قمت بتحديد هذا الخيار.

نسخ احتياطي للأسماء - انظر إجراء نسخ احتياطي لمعلومات الهاتف واستعادتها في الصفحة 56.

استعادة الأسماء - انظر إجراء نسخ احتياطي لمعلومات الهاتف واستعادتها في الصفحة 56.

مسح الأسماء - مسح كل الأسماء المتوفرة لديك. المسح نعم إذا كنت تريد بالتأكيد مسح دفتر عناوينك.

01

02

03

04

05

06

07

08

الأسماء

- 1 من شاشة وضع الانتظار المس  وحدد .
 - 2 المس  وحدد إعدادات.
 - 3 من هنا يمكنك تنظيم الإعدادات التالية:
إعدادات قائمة الأسماء - اختر ما إذا كنت ترغب في عرض الأسماء المحفوظة في الهاتف وبطاقة USIM. أو الهاتف فقط أو بطاقة USIM فقط
كما يمكنك أن تختار عرض اسم جهة الاتصال الأول أو الأخير أولاً.
- نسخ - نسخ الأسماء من بطاقة USIM إلى الهاتف أو من الهاتف إلى بطاقة USIM. اختر القيام بنسخ كل جهة اتصال على حدة، أو نسخ كل الجهات دفعة واحدة، إذا اخترت نسخ كل جهة على حدة، فستحتاج إلى تحديد كل جهة لنسخ الأسماء الواحدة بعد الأخرى.

إنشاء مجموعة

- 1 المس  وحدد .
- 2 المس  ثم المجموعات.
- 3 المس .
- 4 حدد إضافة مجموعة.
- 5 أدخل اسماً للمجموعة الجديدة، يمكنك أيضاً أن تحدد نجمة رنين خاصة بالمجموعة.
- 6 المس حفظ.

ملاحظة: إذا قمت بحذف مجموعة، فلن تفقد الأسماء التي كان قد تم تعيينها إلى تلك المجموعة، بل ستبقى موجودة في دفتر عناوينك.

تغيير إعدادات الأسماء

يمكنك تكييف إعدادات الأسماء بحيث يتناسب دفتر العناوين لديك مع تفضيلاتك.


تلميح! للتصغير عبر قائمة الخيارات، المس العنصر المرئي الأخير وقم بتمرير إصبعك إلى أعلى الشاشة. ستنحرك القائمة نحو الأعلى بحيث يصبح عدد أكبر من العناصر مرئياً.



الأسماء

البحث عن جهة اتصال

هناك طريقتان للبحث عن جهة اتصال:

من شاشة وضع الانتظار

1 من شاشة وضع الانتظار المس  لفتح دفتر العناوين، حدد من القائمة جهة الاتصال التي تريد الاتصال بها.

2 المس  أو اضغط على مفتاح المشغل  لبدء المكالمة.

من القائمة الرئيسية


1 المس  وحدد .

2 المس .

3 ستشاهد قائمة بالأسماء، وعندما تكتب الحرف الأول من اسم جهة الاتصال، تنتقل اللانحة إلى منطقة الجهات التي تبدأ بهذا الحرف في القائمة.

تلميح! يتم عرض لوحة المفاتيح الأبجدية حالما تقوم بالضغط على المربع الفارغ.

إضافة جهة اتصال جديدة

1 من شاشة وضع الانتظار المس  والمس إضافة جهة اتصال.

2 اختر ما إذا كنت تريد حفظ جهة الاتصال في الهاتف أو SIM.

3 أدخل الاسم الأول والأخير لجهة الاتصال الجديدة. من غير الضروري إدخال الاسمين، ولكن يجب عليك إدخال أحدهما.

4 يمكنك أن تدخل حتى خمسة أرقام مختلفة لجهة اتصال واحدة، بتميز كل إدخال بنوع معين مسبقاً خاص بـ المحمول والمنزل والمكتب وجهاز الاستدعاء والفاكس وعام، عندما تنتهي.

المس إغلاق.

5 أضف عنوان بريد إلكتروني.

6 قم بتعيين جهة الاتصال في مجموعة أو أكثر، اختر من ضمن بلا مجموعة، أو عائلة، أو أصدقاء، أو زملاء، أو مدرسة، أو أشخاص مهمون جداً.

7 كما يمكنك أيضاً إضافة نغمة رنين، وعيد ميلاد، وذكرى، وصفحة رئيسية، وعنوان منزل، واسم شركة، وهنئة، وعنوان شركة، ومذكرة.

8 المس حفظ لحفظ جهة الاتصال.

01

02

03

04

05

06

07

08

المكالمات

وضع الرد بلوتوث - حدد لا يدوي لتتمكّن من الرد على مكالمة باستخدام سماعة رأس بلوتوث. أو حدد هاتف للضغط على مفتاح موجود على الهاتف للرد على مكالمة. **حفظ رقم جديد** - حدد نعم لحفظ رقم جديد.

تغيير ضبط المكالمات العام

- 1 **المس** . وحدد  واختر  .
- 2 **المس ضبط عام**. من هنا يمكنك تعديل إعدادات الخيارات التالية:

رفض المكالمة - مرر المفتاح لبدء التشغيل لتحديد قائمة الرفض. يمكنك لمس مربع النص للاختيار من كل المكالمات. أو من الأسماء معيّنة أو مجموعات. أو من أرقام غير مسجلة (تلك الأرقام غير الموجودة في الأسماء). المس حفظ لتغيير الضبط.

إرسال رقمي - اختر ما إذا كنت ترغب في أن يظهر رقمك عند اتصالك بأحدهم.

معاودة الاتصال التلقائي - مرر المفتاح إلى اليسار لبدء التشغيل أو إلى اليمين لإيقاف التشغيل.

وضع الرد - اختر ما إذا كنت تريد الرد على الهاتف باستخدام مفتاح الإرسال أو أي مفتاح.

منبه الدقائق - مرر المفتاح إلى اليسار لبدء تشغيل سماع نغمة كل دقيقة خلال فترة المكالمة.

المس ٥٥ وحدد ٥٦ واضغط على ٥٧ .

تلميح! المس أي إدخال لسجل مكاملة واحدة
لعرض تاريخ المكاملة، ووقتها، ومدتها.

استخدام تحويل المكالمات

1 المس ٥٥ . وحدد ٥٦ واختر ٥٧ .

2 المس تحويل المكالمات.

3 اختر ما إذا كنت تريد أن يتم تحويل كل المكالمات.
عندما يكون الخط مشغولاً، أو عند عدم الرد، أو
عندما لا يكون الوصول إليك ممكناً.

4 أدخل الرقم الذي ترغب في أن يتم التحويل إليه.

5 المس طلب للتنشيط.

ملاحظة: يتم فرض رسوم على تحويل المكالمات.
يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.

تلميح! لإيقاف تشغيل كل عمليات تحويل
المكالمات، اختر إلغاء تنشيط الكل من قائمة
تحويل المكالمات.

استخدام حظر المكالمات

1 المس ٥٥ . وحدد ٥٦ واختر ٥٧ .

2 المس حظر المكالمات.

3 اختر أي خيار من الخيارات الستة:
كل الصادر

المكالمات الدولية الصادرة

المكالمات الدولية الصادرة باستثناء المحلية

كل الوارد

الواردة عند السفر

إلغاء تنشيط الكل

4 أدخل كلمة مرور حظر المكالمات. تحقق من توفر
الخدمة مع مشغل الشبكة.

تلميح! اختر رقم اتصال محدد لتنشيط

وجميع قائمة بالأرقام التي يمكن الاتصال بها من
هاتفك. ستحتاج إلى الحصول على رمز PIN2
من مشغل الشبكة، وحدها الأرقام المضمنة في
قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها
من هاتفك.

01

02

03

04

05

06




07

08

المكالمات

الاتصال السريع


يمكنك تعيين جهة اتصال تطلبها بشكل متكرر إلى رقم اتصال سريع.

1 من شاشة وضع الانتظار المس  وحدد  واضغط .

2 يتم مسبقاً تعيين بريدك الصوتي إلى رقم الاتصال السريع 1. ولا يمكنك تغيير ذلك. المس أي رقم آخر لتعيينه كجهة اتصال سريع.

3 يفتح دفتر العناوين. حدد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم وذلك بلمس رقم هاتفها مرة واحدة. للبحث عن جهة اتصال. اضغط على خانة حقل البحث وأدخل الحرف الأول من اسم جهة الاتصال المطلوبة.


إجراء مكالمة ثانية


1 خلال المكالمة الأولية. المس  وحدد الرقم الذي تود الاتصال به.

2 اطلب الرقم أو ابحث في الأسماء (انظر إجراء مكالمة في الصفحة 20 للحصول على التفاصيل).

3 اضغط على  لتوصيل المكالمة.

4 يتم عرض المكالمتين معاً على شاشة المكالمة. ويتم إفعال المكالمة الأولية ويوضع المتصل في حالة الانتظار.

5 للتبديل بين المكالمات. المس  ثم اختر تبادل المكالمات أو اضغط على رقم المكالمة قيد الانتظار.

6 لإنهاء إحدى المكالمتين أو كليهما. اضغط على  ثم حدد إنهاء يتبعها الكل. أو قيد الانتظار. أو نشط.

تلميح! يمكنك دمج مكالماتك عبر تحديد قبول ثم انضمام. خذ ق من اعتماد مشغل الشبكة للمكالمات الجماعية.

ملاحظة: سيُفرض عليك رسم مقابل كل مكالمة تجريها.

إيقاف تشغيل DTMF

يسمح لك DTMF باستخدام الأوامر الرقمية للتنقل عبر القوائم ضمن المكالمات المؤتمنة. يكون DTMF قيد التشغيل كأعداد افتراضي.

لإيقاف تشغيل DTMF أثناء مكالمة (لتسجيل ملاحظة حول رقم مئلاً) المس  ثم حدد إيقاف تشغيل DTMF.


عرض سجلات المكالمات

تلميح! للتمرير عبر قائمة الخيارات. المس العنصر المرئي الأخير وقم بتمرير إصبعك إلى أعلى الشاشة. ستتحرك القائمة نحو الأعلى بحيث يصبح عدد أكبر من العناصر مرئياً.

خيارات أثناء المكالمة

- 01
- 02
- 03
- 04
- 05
- 06
- 07
- 08

الأساسيات

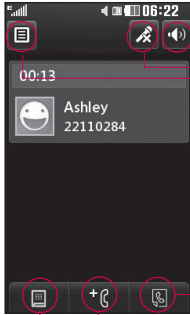

مكبر الصوت - المس (🔊) لبدء تشغيل مكبر صوت الهاتف.

كتم - المس (🔇) لإيقاف تشغيل الميكروفون بحيث لا يتمكن الشخص الذي تتكلم معه من سماعك.

خيارات - اختر من ضمن قائمة من الخيارات الإضافية التي تتوفر لك أثناء المكالمة. وهي تشمل الانتقال إلى الرسائل بحيث يمكنك التحقق من رسائلك. والانتقال إلى الأسماء لإضافة الأسماء أو البحث عنها أثناء إجراء المكالمة. كما يمكنك إنهاء المكالمة من هنا وذلك بلمس إنهاء المكالمة.

🔍 - اختر للبحث في الأسماء أثناء إجراء مكالمة.






+👤 - اختر لإضافة شخص آخر إلى المكالمة.

📄 - اختر لفتح لوحة مفاتيح رقمية للتنقل عبر القوائم بواسطة خيارات مرقمة. مثلاً عند طلب مراكز الاتصال أو خدمات هاتف مؤتمنة أخرى.




تنميح! للتمرير عبر قائمة خيارات أو قائمة الأسماء المس العنصر الأخير المرئي وقم بتمرير إصبعك إلى أعلى الشاشة، فتنحرك القائمة نحو الأعلى وتحصل على المزيد من العناصر المرئية.

المكالمات






إجراء مكالمة

- 1 المس  لفتح لوحة المفاتيح.
 - 2 أدخل الرقم باستخدام لوحة المفاتيح. لحذف رقم المس مفتاح المسح.
 - 3 اضغط على مفتاح المشغل  أو المس  لبدء المكالمة.
 - 4 لإنهاء المكالمة. اضغط على مفتاح المشغل .
- تلميح!** لإدخال + لإجراء مكالمة دولية، اضغط باستمرار .

إجراء مكالمة من الأسماء

- 1 من شاشة وضع الانتظار المس  لفتح دفتر العناوين.
- 2 أدخل الأحرف القليلة الأولى من جهة الاتصال التي ترغب في الاتصال بها.
- 3 في القائمة التي تمت تصفيتها. المس جهة الاتصال التي ترغب في الاتصال بها وحدد الرقم الذي تريد استخدامه إذا توفر لديك أكثر من رقم واحد محفوظ.
- 4 اضغط على مفتاح المشغل  أو المس  لبدء المكالمة.


الرد على مكالمة ورفضها


- عندما يرن هاتفك اضغط على مفتاح المشغل  أو المس  للرد على المكالمة.
- اضغط  لكتم الرنين. يُعتبر هذا الأمر جيداً إذا كنت قد نسيت تغيير وضع الهاتف إلى "صامت" أثناء حضور اجتماع ما.
- اضغط على مفتاح المشغل  أو المس  لرفض مكالمة واردة.

تغيير الحالة من شريط الحالة

المس شريط الحالة لفتح ملخص الحالة. يعرض الوقت الحالي والشبكة ومعرّف الخدمة والبطارية وذاكرة الهاتف والذاكرة الخارجية وملف التعريف وMP3 وحالة بلوتوث. يمكنك تعيين نوع ملف التعريف. وتشغيل/ إيقاف تشغيل MP3 مؤقتًا. وتنشيط/إلغاء تنشيط بلوتوث.

استخدام وظيفة تعدد المهام

اضغط على مفتاح المشغل الخاص بتعدد المهام  لفتح قائمة تعدد المهام. يمكنك من هنا عرض كل التطبيقات الجاري تشغيلها والوصول إليها بواسطة لمسة واحدة.

عند وجود تطبيق يجري تشغيله في الخلفية (لعبة أو راديو FM مثلًا)  يظهر في شريط الحالة.

01

02

03

04

05

06

07

08

شاشة وضع الانتظار

الوصف	الرمز
الوضع مخصص قيد الاستخدام	
الوضع عادي قيد الاستخدام	
الوضع خارجي قيد الاستخدام	
الوضع صامت قيد الاستخدام	
الوضع سماعة الرأس قيد الاستخدام	
المكالمات محوّل	
EDGE قيد الاستخدام	
النجوال	
وضع الرحلات الجوية قيد التشغيل	
بلوتوث نشط	
تشغيل الموسيقى الخلفية	
إيقاف مؤقت لـ الموسيقى الخلفية	
تم تمكين بطاقة الذاكرة لاستخدامها	

شريط الحالة

يستخدم شريط الحالة رموزاً مختلفة للإشارة إلى أمور مثل قوة الإشارة، والرسائل الجديدة وفترة عمل البطارية، وكذلك لإعلامك ما إذا كان بلوتوث أو GPRS نشطاً.

يفسر الجدول التالي معنى الرموز التي قد تشاهدها على شريط الحالة.

الوصف	الرمز
تعدد المهام	
قوة إشارة الشبكة (يختلف عدد الأشرطة)	
إشارة الشبكة غير متوفرة	
فترة العمل المتبقية للبطارية	
البطارية فارغة	
رسالة نصية جديدة	
رسالة صوتية جديدة	
صندوق الوارد للرسائل ممتلئ	
فشل إرسال الرسالة	
فشل إرسال رسالة الوسائط المتعددة	
تم تعيين منبه	

المفاتيح السريعة

توفر المفاتيح السريعة وصولاً سهلاً بمجرد لمسة واحدة إلى أكثر الوظائف استخداماً.

01

02

03

المس لفتح دفتر العناوين. للبحث عن الرقم الذي تريد الاتصال به. أدخل اسم جهة الاتصال في أعلى الشاشة مستخدماً لوحة اللمس. كما يمكنك إنشاء الأسماء جديدة وتعديل الأسماء موجودة. انظر الصفحة 25 للحصول على التفاصيل.



04

05

06

07

08

المس لإحضار لوحة اتصال بواسطة اللمس لإجراء مكالمة أدخل الرقم كما لو كنت تستخدم لوحة مفاتيح عادية ثم المس **مكالمات** أو اضغط على مفتاح المشغل.



المس لفتح القائمة العلوية الكاملة التي تنقسم إلى أربع قوائم فرعية عمودية. المس التثبيت لكل قائمة فرعية لمشاهدة المزيد من الخيارات.



المس للوصول إلى قائمة خيارات المراسلات. من هنا يمكنك إنشاء رسالة نصية أو وسائط متعددة جديدة. أو عرض حافظه الرسائل. انظر الصفحة 28 للحصول على التفاصيل.



شاشة وضع الانتظار

عنصر واجهة الاستخدام في وضع الإنتظار



عنصر واجهة الاستخدام المتحرك



مفاتيح سريعة

اتصال سريع في وضع الإنتظار



قائمة الاتصال السريع



شاشة وضع الانتظار

عندما لا يكون الهاتف KP500 قيد الاستخدام فسيعود إلى الشاشة الرئيسية، ومن هنا يمكنك الوصول إلى كل خيارات القوائم، وإجراء مكالمة سريعة وعرض حالة الهاتف، بالإضافة إلى عدة أمور أخرى.

تلمیحات شاشة التلمس

تُعتبر الشاشة الرئيسية أيضاً مكاناً جيداً لكي تعتاد على شاشة التلمس.

لتحديد عنصر التلمس بدقة، سيهتز الهاتف KP500 بعض الشيء عندما يتعرّف على لمسك لخيار ما.

للتمرير عبر القوائم التلمس العنصر الأخير المرئي وقم بتمرير إصبعك إلى أعلى الشاشة، ستتحرك القائمة نحو الأعلى بحيث يصبح عدد أكبر من العناصر مرئياً.

• لا حاجة إلى الضغط بقوة فشاشة التلمس حساسة بشكل كافٍ بتيح لها التعرّف على لمسة خفيفة ولكن ثابتة.


• استخدم رأس إصبعك للتلمس الخبار المطلوب، احترس من عدم لمس أي مفاتيح أخرى حوله.

• عندما يكون ضوء الشاشة الخلفي متوقفاً عن التشغيل، اضغط على مفتاح إقفال/فتح في الجانب الأيمن من الهاتف لاستعادة الشاشة الرئيسية.


• لا تضع غطاءً أو غلافاً خارجياً على الهاتف، لن تعمل شاشة التلمس عند تغطيتها بأي مادة.

• هناك نوعان من شاشة الإنتظار، انقر إلى اليسار أو إلى اليمين لتغيير نوع شاشة الإنتظار الموجودة على شاشة وضع الانتظار.

1 عنصر واجهة الاستخدام في وضع الإنتظار

- عندما تلمس ، تظهر لوحة عنصر واجهة الاستخدام المتحرك

2 اتصال سريع في وضع الإنتظار - عندما تلمس

، تظهر قائمة الاتصال السريع، يمكنك أن تقوم بسحب وإفلات ما تحتاج إليه فوراً في كلا نوعي الإنتظار.

01

02

03

04


05

06

07

08

خريطة القوائم

المس  على شاشة وضع الانتظار لفتح قائمة علوية. من هنا يمكنك الوصول إلى المزيد من الخيارات: اتصال، وترفيه، وأدوات مساعدة، وإعدادات.

ترفيه

-  الترفيه
-  الاستوديو
-  أثيري
-  الكاميرا
-  كاميرا فيديو
-  استوديو الأفلام
-  الموسيقى
-  راديو FM
-  ألعاب وتطبيقات

اتصال

-  اتصال
-  اتصال
-  الاتصالات السريعة
-  الأسماء
-  سجلات المكالمات
-  رسالة جديدة
-  بريد الكتروني جديد
-  الرسائل

إعدادات

-  إعدادات
-  الأوضاع
-  إعدادات الشاشة
-  إعدادات الهاتف
-  إعدادات المكالمات
-  إعدادات اللمس
-  بلوتوث
-  التوصيل

أدوات مساعدة


-  أدوات مساعدة
-  المتصفح
-  المنسق
-  التنبيهات
-  مسجل الصوت
-  لوحة الرسم
-  الأدوات
-  مجموعة أدوات Sim

بطاقة الذاكرة

تثبيت بطاقة ذاكرة

يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة MicroSD. يعتمد الهاتف على بطاقة ذاكرة تصل سعتها إلى 8 غيغا بايت. ملاحظة: بطاقة الذاكرة هي عبارة عن ملحق اختياري.

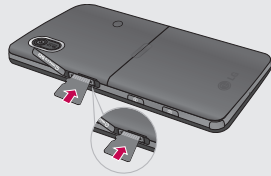

- 1 افتح غطاء فتحة بطاقة الذاكرة الموجود على حافة الهاتف اليمنى.
- 2 حرّك بطاقة الذاكرة إلى داخل الفتحة، حتى تستقر في مكانها.



- 3 قم باستبدال الغطاء.

تهيئة بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهيأة أصلاً. إذا لم تكن بطاقة الذاكرة مهيأة، فعليك تهيئتها قبل أن تبدأ باستخدامها.

- 1 من شاشة وضع الانتظار حدد ، ثم المس  واختر إعدادات الهاتف.
 - 2 المس إدارة الذاكرة ثم اختر ذاكرة خارجية.
 - 3 المس تهيئة ثم أكد خيارك.
 - 4 أدخل كلمة المرور، إذا كان قد تم تعيينها، فتنم تهيئة بطاقتك وتصبح جاهزة للاستخدام.
- ملاحظة: إذا تضرّبت بطاقة الذاكرة محتوى موجوداً، فسيتم تصنيفه بشكل تلقائي في الحافظة الصحيحة. فسيتم مثلاً تخزين ملفات الفيديو في حافظة مقاطع الفيديو.

01

02

03

04

05

06


07

08

تثبيت بطاقة USIM والبطارية

5 شحن الهاتف

ارفع غطاء مقبس الشاحن الموجود على جانب KP500 بلِّقه. قم بإدراج الشاحن وبتوصيله بمقبس كهربائي رئيسي. يجب أن يتم شحن الهاتف KP500 حتى تظهر رسالة على الشاشة تفيد بشحن الهاتف بالكامل.

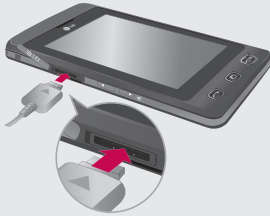


3 تثبيت بطاقة USIM

ادفع بطاقة USIM إلى داخل حاملها وتأكد من كون ناحية الموصلات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. لإخراج بطاقة USIM، اسحبها بلطف في الاتجاه العكسي.



4 تثبيت البطارية


قم أولاً بإدراج الجهة العليا للبطارية في الحافة العليا لحجرة البطارية. تأكد من محاذاة موصلات البطارية مع الأطراف الموجودة على الهاتف. اضغط جهة البطارية السفلى إلى الأسفل حتى تستقر في مكانها.

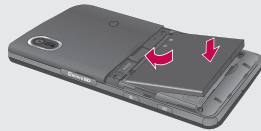

تثبيت بطاقة USIM والبطارية

1 نزع غطاء البطارية

حرك غطاء البطارية نحو أسفل الهاتف وبعيداً عنه.

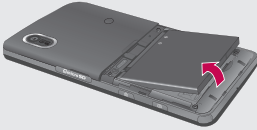

2 إخراج البطارية

بواسطة الفتحة الموجودة في الأسفل. ارفع البطارية من حجرتها.



01

02

03

04

05

06


07

08

⚠ تحذير: لا تستخدم أطرافك عند إخراج البطارية.

⚠ تحذير: لا تخرج البطارية عندما يكون الهاتف قيد التشغيل، إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

نظرة على الهاتف وهو مفتوح

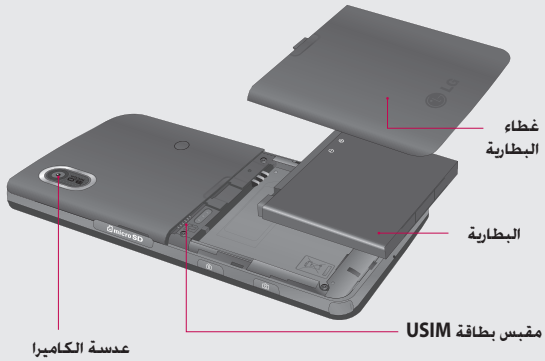

01

02

03

04

05

06

07

08

مقبس بطاقة الذاكرة SD
المصغرة

مفتاح الإقفال/الفتح

زر الالتقاط

القلم



موصل الشاحن، الكابل، الجهاز اللابديوي


تلميح: لتوصيل كابل USB، انتظر
حتى يتم تشغيل الهاتف وتسجيله
في الشبكة.



المفاتيح الجانبية

- عندما تكون الشاشة في وضع الإنتظار: مستوى صوت نغمة المفاتيح.
- أثناء المكالمة: مستوى صوت سماعة الأذن.
- عند تشغيل مسار الموسيقى الخلفية - ضغطة قصيرة: التحكم بمستوى الصوت.

التعرّف على هاتفك

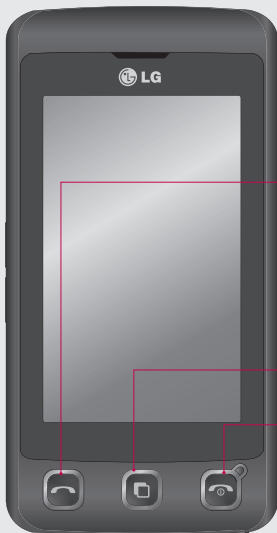

مفتاح الاتصال
طلب رقم هاتف والإجابة
على مكالمات واردة.

مفتاح تعدد المهام

مفتاح التشغيل/إيقاف التشغيل
إنهاء مكالمة أو رفضها.
تشغيل/إيقاف تشغيل الهاتف.
اضغط مرةً واحدةً للعودة إلى شاشة
وضع الانتظار.

⚠ تحذير: قد يؤدي وضع شيء ثقيل الوزن على الهاتف أو الجلوس عليه عند وجوده في جيبك إلى إلحاق ضرر بوظيفة شاشة LCD وشاشة اللمس.

- 64..... استخدام إدارة الذاكرة.
- 65..... إرسال الملفات واستلامها باستخدام بلوتوث.
- 66..... الاقتران بجهاز بلوتوث آخر.
- 66..... استخدام سماعة رأس بلوتوث.

67..... الملحقات

68..... خدمة الشبكة

68..... البيانات التقنية

التوجيهات

- 70..... توجيهات لاستخدام آمن وفعال.
- 74..... استكشاف الأخطاء وإصلاحها.

المحتويات

56	توصيل الهاتف والكمبيوتر.....	50	نقل الموسيقى إلى الهاتف.....
	إجراء نسخ احتياطي لمعلومات الهاتف	50	تشغيل أغنية.....
56	واستعادتها.....	50	إنشاء قائمة تشغيل.....
57	عرض ملفات الهاتف على الكمبيوتر.....	51	استخدام الراديو.....
57	مزامنة الأسماء.....	51	البحث عن محطات.....
57	مزامنة الرسائل.....	51	إعادة تعيين القنوات.....
57	استخدام الهاتف كجهاز تزامن الموسيقى.....		

كن منظماً

	ويب	52	المنسق.....
59	المنصفح.....	52	إضافة حدث إلى التقويم.....
59	الوصول إلى ويب.....	52	إضافة عنصر إلى قائمة المهام.....
59	إضافة إشارات مرجعية والوصول إليها.....	52	إضافة مذكرة.....
59	استخدام قارئ RSS.....	52	استخدام الباحث عن التاريخ.....
60	حفظ صفحة.....	53	تعيين المنبه.....
60	الوصول إلى صفحة محفوظة.....	53	إضافة مذكرة بواسطة لوحة الرسم.....
60	عرض محفوظات المتصفح.....	53	مسجل الصوت.....
60	تغيير إعدادات متصفح ويب.....	54	تسجيل ملف صوتي أو صوت.....
60	استخدام الهاتف كمودم.....	54	استخدام الحاسبة.....

الإعدادات

62	تخصيص الأوضاع.....	54	استخدام ساعة الإيقاف.....
62	تغيير إعدادات الشاشة.....	55	إضافة مدينة إلى ساعتك العالمية.....
62	تغيير إعدادات الهاتف.....	56	مزامنة الكمبيوتر الشخصي.....
63	تغيير إعدادات التوصيل.....	56	تنصيب LG PC Suite على الكمبيوتر.....

42	الصور وملفات الفيديو	33	تغيير الإعدادات الأخرى
42	مشاهدة الصور كعرض شرائح		
43	تعيين صورة كخلفية الشاشة		
43	تعديل الصور		
44	إضافة نص إلى صورة	34	الكاميرا
44	إضافة تأثير إلى صورة	34	التقاط صورة سريعة
		34	بعد التقاط الصورة
45	الوسائط المتعددة	35	التعرّف على محدد المنظر
45	صور	36	اختيار نوع اللقطة
45	إرسال صورة	36	ضبط التباين
45	استخدام صورة	36	استخدام الإعدادات المتقدمة
46	طباعة صورة	37	تغيير حجم الصورة
46	نقل صورة أو نسخها	37	اختيار تأثير اللون
46	أصوات	37	عرض الصور المحفوظة
47	استخدام صوت		
47	ملفات الفيديو	38	كاميرا فيديو
47	إرسال فيديو كليب	38	التقاط فيديو سريع
47	الألعاب والتطبيقات	38	بعد الانتهاء من التقاط الفيديو
48	تنصيب لعبة/تطبيق بواسطة التنصيب المحلي	39	التعرّف على محدد المنظر
48	لعبة لعبة	40	ضبط التباين
48	مستندات	40	استخدام الإعدادات المتقدمة
48	نقل ملف إلى هاتفك	41	تغيير حجم صورة الفيديو
49	عرض ملف	41	اختيار درجة اللون
49	أخرى	41	مشاهدة ملفات الفيديو المحفوظة
49	إنشاء فيلم	42	عرض الصور وملفات الفيديو
		42	التقاط صورة من فيديو

كن مبدعاً

المحتويات

23	استخدام تحويل المكالمات	الإعداد
23	استخدام حظر المكالمات	
24	تغيير ضبط المكالمات العام	8
25	الأسماء	10
25	البحث عن جهة اتصال	11
25	إضافة جهة اتصال جديدة	12
26	إنشاء مجموعة	13
26	تغيير إعدادات الأسماء	14
27	عرض المعلومات	
28	الرسائل	
28	الرسائل	
28	إرسال رسالة	شاشة وضع الانتظار
28	إدخال النص	15
29	T9 التنبؤي	
29	دليل ABC	الأساسيات
29	لوحة المفاتيح	20
29	التعرّف على الكتابة اليدوية	20
30	إعداد البريد الإلكتروني	20
30	استرداد بريدك الإلكتروني	20
30	إرسال بريد إلكتروني باستخدام حسابك الجديد	21
31	تغيير إعدادات البريد الإلكتروني	22
31	حافظات الرسائل	22
32	تغيير إعدادات الرسائل النصية	22
32	تغيير إعدادات رسائل الوسائط المتعددة	22

01 الإعداد

02 شاشة وضع الانتظار

03 الأساسيات

04 كن مبدعاً

05 كن منظماً

06 ويب

07 الإعدادات

08 الملحقات

تهانينا لشرائك الهاتف المتقدم والصغير الحجم KP500
من LG، والمصمّم للعمل مع تقنية الاتصال الرقمي الأحدث
للهواتف المحمولة.



قد تختلف بعض المحتويات الموجودة في هذا الدليل
عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موافر
الخدمة.

دليل المستخدم KP500