

GD510 คู่มือการใช้

Life's Good...
when it's green



GD510 คู่มือการใช้



Green features
of this manual



This manual is used 35% of recycled paper and printed with soy inks.

CE0168

www.lgmobile.com

P/N : MMBB0356756 (1.0)

LG ELECTRONICS INC.

ไ ท ย
ENGLISH

Bluetooth QD ID B015736



ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่าง
จากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์
ของโทรศัพท์หรือผู้ให้บริการของคุณ

คู่มือการใช้ GD510

ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น
GD510 ของ LG ซึ่งทันสมัยและมีขนาดกะทัดรัด
ออกแบบให้ทำงานด้วยการใช้เทคโนโลยีการสื่อ
สารเคลื่อนที่แบบดิจิทัลใหม่ล่าสุด

สารบัญ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ ..	6	รายชื่อ ..	22
ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ ..	7	การค้นหารายชื่อ ..	22
การใส่ซิมและแบตเตอรี่ ..	8	การเพิ่มรายชื่อใหม่ ..	22
การชาร์จโทรศัพท์ ..	9	การสร้างกลุ่ม ..	22
การดหน่วยความจำ ..	10	การเปลี่ยนการตั้งค่าของรายชื่อ ..	23
แผนผังเมนู ..	11	การดูข้อมูล ..	23
การใช้หน้าจอสัมผัส ..	12	ข้อความ ..	24
เคล็ดลับสำหรับหน้าจอสัมผัส ..	12	การส่งข้อความ ..	24
ควบคุมหน้าจอสัมผัส ..	12	การป้อนข้อความ ..	24
หน้าจอหลักของคุณ ..	13	โหมด T9 ..	24
ปุ่มด่วน ..	14	การจดจำลายมือ ..	25
แถบสถานะ ..	15	การตั้งค่าอีเมล ..	25
การโทร ..	17	การดึงข้อมูลอีเมลของคุณ ..	25
การโทรออก ..	17	การส่งอีเมลโดยใช้แอคเคาท์ใหม่ ..	25
การโทรออกโดยใช้รายชื่อ ..	17	การเปลี่ยนการตั้งค่าอีเมล ..	25
การรับสายและการปฏิเสธ		โฟลเดอร์ข้อความ ..	26
สายเรียกเข้า ..	17	การเปลี่ยนการตั้งค่าข้อความ	
ตัวเลือกต่างๆ ระหว่างใช้สาย ..	18	ตัวอักษร ..	26
โทรด่วน ..	19	การเปลี่ยนการตั้งค่าข้อความ	
การใช้สายที่สอง ..	19	มัลติมีเดีย ..	27
การดูบันทึกการโทร ..	19	การเปลี่ยนการตั้งค่าอื่นๆ ..	27
การใช้การโอนสาย ..	20	กล้อง ..	28
การใช้การป้องกันการโทร ..	20	ทำความรู้จักกับช่องมองภาพ ..	28
การเปลี่ยนการตั้งค่าการโทรทั่วไป ..	21	การถ่ายภาพด่วน ..	29
		ภายหลังการถ่ายรูป ..	29

สารบัญ

การใช้การตั้งค่าขั้นสูง	30	การเล่นเกมส์	39
กล้องวิดีโอ	31	เอกสาร	39
ทำความเข้าใจกับช่องมองภาพ	31	การโอนไฟล์ไปที่โทรศัพท์	39
การถ่ายวิดีโอด้วย	32	อื่นๆ	39
หลังจากถ่ายวิดีโอ	32	สร้างหนัง	39
การใช้การตั้งค่าขั้นสูง	33	การสร้างภาพยนตร์	39
รูปภาพและวิดีโอ	34	เพลง	40
การดูรูปภาพและวิดีโอ	34	การโอนเพลงไปยังโทรศัพท์	40
การบันทึกภาพจากวิดีโอ	34	การเล่นเพลง	40
การดูรูปภาพแบบภาพสไลด์	34	การสร้างรายการเพลง	41
การตั้งค่ารูปภาพเป็นพื้นหลัง	35	วิทยุ FM	41
การแก้ไขรูปภาพ	35	การค้นหาสถานี	41
การเพิ่มเอฟเฟกต์ลงในรูปภาพ	36	การรีเซ็ตสถานี	41
มัลติมีเดีย	37	สมุดบันทึก	42
รูปภาพ	37	การเพิ่มเหตุการณ์ลงในปฏิทิน	42
การส่งรูปภาพ	37	การเพิ่มรายการลงในสิ่งที่ต้องทำ ...	42
การใช้รูปภาพ	37	การใช้ตัวค้นหาวันที่	42
การพิมพ์ภาพ	37	การเพิ่มบันทึก	43
การย้ายหรือคัดลอกรูปภาพ	38	การตั้งเวลาการปลุก	43
เสียง	38	การเพิ่มบันทึกด้วยการวาด	43
การใช้เสียง	38	บันทึกเสียง	44
วิดีโอ	38	การบันทึกเสียงหรือเสียงพูด	44
การดูวิดีโอ	38	การใช้เครื่องหมายคิดเลข	44
การส่งวิดีโอคลิป	38	การแปลงหน่วย	44
เกมส์&แอปฯ	38	การเพิ่มเมืองในเวลาทั่วโลก	45
		การเข้าหน้าฬิกาจับเวลา	45

PC ชิงค์.....	46	การเปลี่ยนการตั้งค่าหน้าจอ	51
การติดตั้ง LG PC Suite		การเปลี่ยนการตั้งค่าโทรศัพท์.....	51
ลงในคอมพิวเตอร์.....	46	การเปลี่ยนการตั้งค่าการเชื่อมต่อ....	52
การเชื่อมต่อโทรศัพท์เข้ากับ		การใช้ตัวจัดการหน่วยความจำ.....	53
คอมพิวเตอร์.....	46	การส่งและการรับไฟล์โดย	
การสำรองข้อมูลและการเรียก		ใช้บลูทูธ.....	53
คืนข้อมูลของโทรศัพท์.....	46	การเปลี่ยนการตั้งค่าบลูทูธ:	54
การดูไฟล์ในโทรศัพท์บน		การจับคู่กับอุปกรณ์บลูทูธอื่น.....	54
คอมพิวเตอร์.....	46	การใช้ชุดหูฟังบลูทูธ	55
การซิงโครไนซ์รายชื่อ.....	47	การอัปเดตซอฟต์แวร์	55
การซิงโครไนซ์ข้อความ	47	อุปกรณ์เสริม.....	56
การใช้โทรศัพท์เป็น		ข้อมูลทางเทคนิค.....	57
อุปกรณ์ซิงค์เพลง	47	คำแนะนำเพื่อความปลอดภัย	
เว็บไซต์.....	48	และการทำงานอย่างมีประสิทธิภาพ...	59
การเข้าใช้เว็บไซต์	48		
การเพิ่มและการใช้บุ๊กมาร์ค.....	48		
การใช้ RSS reader.....	48		
การบันทึกเพจ.....	49		
การเข้าใช้เพจที่บ้านที่กไว.....	49		
การดูประวัติข้อมูลเบราว์เซอร์	49		
การเปลี่ยนการตั้งค่าเว็บ			
เบราว์เซอร์.....	49		
การใช้โทรศัพท์เป็นโมเด็ม.....	49		
ตั้งค่า.....	51		
การปรับแต่งรูปแบบเสียงของคุณ.....	51		

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



ปุ่มสมาร์ท

- รับและวางสาย
- ไปที่หน้าจอหลักโดยตรง



ปุ่มเปิด/ปิดเครื่อง/ปุ่มล็อค

- กดค้างไว้เพื่อเปิด/ปิดโทรศัพท์
- กดครู่หนึ่งเพื่อเปิด/ปิดหน้าจอ



ปุ่มด้านข้าง

- เมื่อหน้าจออยู่ที่หน้าจอหลัก: ระดับเสียงเรียกเข้าและเสียงปุ่ม
- ระหว่างการใช้สาย: ระดับเสียงหูฟัง

การชาร์จ สายเคเบิล และช่องเสียบแอสต์รี




ปุ่มกล้อง/ปุ่มมัลติทาสกิ้ง

- กดค้างเพื่อใช้งานกล้อง
- กดชั่วคราวเพื่อใช้มัลติทาสกิ้ง

⚠ คำเตือน: การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์ หรือการนั่งทับเมื่อใส่ไว้ในกระเป๋าอาจทำให้จอ LCD ของโทรศัพท์ และการทำงาน of หน้าจอสัมผัสเสียหายได้


ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ

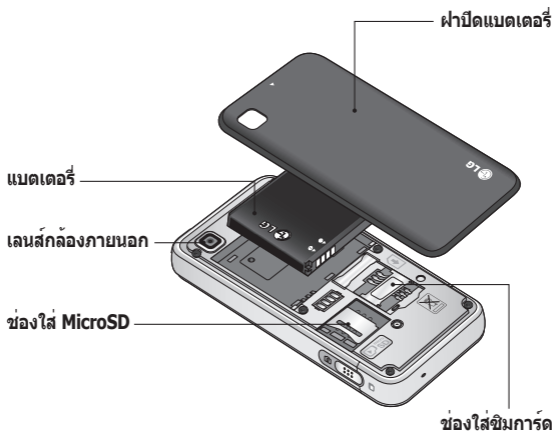

การใส่ซิมและแบตเตอรี่

1 ถอดฝาปิดแบตเตอรี่

เลื่อนฝาปิดแบตเตอรี่
ไปทางด้านล่างของโทรศัพท์
และถอดฝาปิดแบตเตอรี่ออก

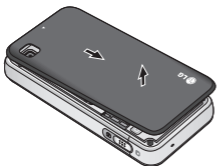


⚠ คำเตือน: อย่าใช้เล็บในการถอดแบตเตอรี่ออก

⚠ คำเตือน: ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้


2 ใส่ซิมการ์ด

สไลด์ซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด ตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองบนการ์ดคว่ำลง ตรวจสอบว่าได้ถอดแบตเตอรี่ออกจากโทรศัพท์แล้วก่อนใส่ซิมการ์ด ในการถอดซิมการ์ดให้ค่อยๆ ดึงซิมการ์ดออกมา

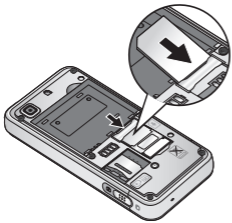

3 ใส่แบตเตอรี่

ใส่แบตเตอรี่โดยให้ด้านซ้ายของแบตเตอรี่ลงไปที่ด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วของโทรศัพท์ จากนั้น กดด้านขวาของแบตเตอรี่ให้แน่นเข้าที่

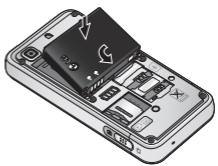

การชาร์จโทรศัพท์

ถอดฝาปิดช่องเสียบอุปกรณ์ชาร์จที่
ด้านหลังของโทรศัพท์ GD510 ออก
เชื่อมต่ออะแดปเตอร์สำหรับชาร์จ
แบตเตอรี่ (เครื่องชาร์จ) และสายเคเบิล
USB ที่มีให้ เชื่อมต่อสาย USB กับโทร
ศัพท์และเสียบปลั๊กไฟเข้ากับเต้าเสียบ
ไฟ คุณจะต้องชาร์จโทรศัพท์ GD510
จนกว่าข้อความ "แบตเตอรี่เต็มแล้ว"
จะปรากฏขึ้นบนหน้าจอ

หมายเหตุ: แบตเตอรี่ต้องชาร์จจน
เต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้
งานของแบตเตอรี่ ไม่ต้องสนใจข้อความ
"แบตเตอรี่เต็มแล้ว" ที่ปรากฏครั้งแรก
และชาร์จแบตเตอรี่ทิ้งไว้ตลอดคืน





การดหน่วยความจำ

การใส่การ์ดหน่วยความจำ

คุณสามารถเพิ่มพื้นที่หน่วยความจำบนโทรศัพท์ได้โดยการใช้การ์ดหน่วยความจำ microSD

หมายเหตุ: การ์ดหน่วยความจำเป็นอุปกรณ์เสริม

- 1 ถอดฝาปิดแบตเตอรี่
- 2 ดันช่องใส่การ์ด microSD เพื่อปลดล็อก
- 3 เปิดช่อง

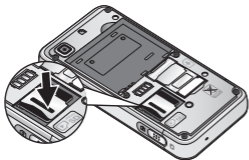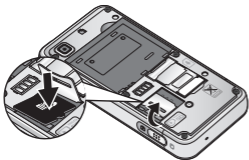

- 4 ใส่การ์ด microSD ในช่องใส่การ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

- 5 ปิดแล้วดันช่องเพื่อล็อก

- 6 ใส่ฝาปิดกลับคืน

การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้อฟอร์แมต คุณจำเป็นต้องฟอร์แมตการ์ดหน่วยความจำก่อน คุณจึงจะสามารถเริ่มต้นใช้งานการ์ดได้

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้น **ตั้งค่าโทรศัพท์** ในแท็บ **ตั้งค่า**

- 2 แตะ **ข้อมูลความจำ** แล้วเลือก **ความจำการ์ด**

- 3 แตะที่ **ฟอร์แมต** แล้วยืนยันการเลือกของคุณ








- 4 ใส่รหัสผ่าน หากมีการกำหนดไว้ การดของคุณจะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน

หมายเหตุ: หากมีข้อมูลอยู่ในการ์ดหน่วยความจำของคุณ โครงสร้างไฟล์เดออร์อาจจะแตกต่างไปจากเดิมภายหลังการฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก






แผนผังเมนู

แตะที่  ในหน้าจอหลักเพื่อเปิด **เมนูบนสุด** จากชั้นตอนนี้ คุณสามารถเข้าใช้เมนูต่างๆ โดยการเลื่อนไปที่ไอคอน: การติดต่อ, ความบันเทิง, ยูทิลิตี้ และ ตั้งค่า









การติดต่อ

-  รายชื่อ
-  ข้อมูลโทร
-  ข้อความ
-  อีเมล
-  โทรออก
-  ค้นหาชื่อ
-  โทรด่วน
-  เขียนข้อความ







ความบันเทิง

-  กล้อง
-  คลังภาพ
-  เพิ่มข้อมูล
-  เพลง
-  เกมส์&แอปฯ
-  วิทยุ FM
-  วิดีโอ
-  สร้างหนัง

ยูทิลิตี้

-  เบร่าว์เซอร์
-  Google search
-  ตั้งปลุก
-  สมุดบันทึก
-  บันทึก
-  บันทึกเสียง
-  เครื่องมือ
-  การวาด

ตั้งค่า

-  โปรไฟล์
-  ตั้งค่าจอ
-  โทรศัพท์
-  การโทร
-  บลูทูธ
-  สัมผัส
-  เชื่อมต่อ
-  ข้อความ

การใช้หน้าจอสัมผัส

เคล็ดลับสำหรับหน้าจอสัมผัส

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ
- เมื่อไม่มีการใช้งานโทรศัพท์ GD510 เครื่องจะกลับไปล็อคหน้าจอ

ควบคุมหน้าจอสัมผัส

การควบคุมบนหน้าจอสัมผัสของ GD510 สามารถเปลี่ยนแปลงได้ขึ้นอยู่กับงานที่คุณกำลังทำ

การเปิดแอปพลิเคชัน

ในการเปิดแอปพลิเคชันใดก็ตาม เพียงแตะที่ไอคอนนั้น

การเลื่อนหา

ลากจากด้านหนึ่งไปยังอีกด้านหนึ่งเพื่อเลื่อนในหน้าจอบางหน้าจอ เช่น รายการข้อมูลการโทร คุณสามารถเลื่อนขึ้นหรือลงได้อีกด้วย




หน้าจอหลักของคุณ

คุณสามารถลากและคลิกสิ่งที่คุณต้องการได้ในหน้าจอหลักทุกประเภท


ใช้งาน




หน้าจอหลัก Widget

- เมื่อคุณแตะ  ที่ด้านล่างขวาของหน้าจอ แผง Widget สำหรับโทรศัพท์มือถือจะปรากฏขึ้น เมื่อคุณลงทะเบียน Widget โดยการลาก Widget จะถูกสร้างขึ้นในจุดที่ถูกลาก


ใช้งาน

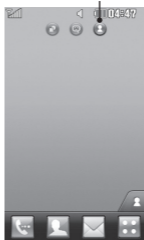

หน้าจอหลักโทรด่วน -

เมื่อคุณแตะ  รายการโทรด่วนจะปรากฏขึ้น คุณสามารถโทร ส่งข้อความ หรือแก้ไขรายชื่อได้โดยตรง ในหน้าจอหลักนี้

ใช้งาน

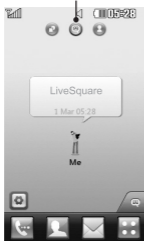

หน้าจอหลัก Livesquare - ในหน้าจอ Livesquare คุณสามารถโทรและส่งข้อความไปยังหมายเลขที่กำหนด ให้กับการดู ในการใช้การโทร การส่งข้อความ หรือรายชื่อ ให้เลือกการดู และเลือกไอคอน **ปุ่มด่วน** ที่คุณต้องการใช้

เคล็ดลับ! เมนูสำหรับผู้ใช้งานแบ่งเป็นหน้าจอหลัก 3 ประเภท ในการสลับระหว่างหน้าจอหลักต่างๆ เพียงลากนิ้วบนหน้าจอจากซ้ายไปขวาหรือขวาไปซ้ายอย่างรวดเร็ว

หน้าจอหลักของคุณ

ปุ่มด่วน

ปุ่มด่วนบนหน้าจอหลักจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ใช้อยู่ได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



แตะเพื่อเปิดปุ่มสัมผัสสำหรับ
ใช้โทรออก



แตะเพื่อเปิด **รายชื่อ**
ในการค้นหาหมายเลข
ที่คุณต้องการโทร ให้อนชื่อ
ที่คานบนของหน้าจอโดยใช้
ปุ่มสัมผัส คุณยังสามารถ
สร้างรายชื่อใหม่และแก้ไข
รายชื่อที่มีอยู่ได้



แตะเพื่อเข้าใช้เมนู **ข้อความ**
คุณสามารถสร้าง SMS หรือ
MMS ใหม่ หรือดูข้อความใน
โฟลเดอร์ข้อความได้



แตะเพื่อเปิด **เมนูบนสุด** ทั้ง
หมดที่แบ่งออกเป็นสี่หมวด

แถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูล เช่น ระดับความแรงของสัญญาณ, ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีการใช้งานบลูทูธหรือ GPRS อยู่หรือไม่

ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	รายละเอียด
	มัลติทาสกิ้ง
	ความแรงของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป)
	ไม่มีสัญญาณเครือข่าย
	พลังงานแบตเตอรี่ที่เหลืออยู่
	แบตเตอรี่หมด
	ข้อความตัวอักษรใหม่
	ข้อความเสียงใหม่
	ข้อความในถาดเข้าเต็ม
	การส่งข้อความล้มเหลว

ไอคอน	รายละเอียด
	การส่งข้อความมัลติมีเดียล้มเหลว
	ตั้งปลุกแล้ว
	ใช้งานรูปแบบเสียงที่ปรับแต่งเอง (หมายเลขในไอคอนอาจแตกต่างกัน)
	ใช้รูปแบบปกติอยู่
	ใช้รูปแบบนอกอาคารอยู่
	ใช้รูปแบบเงียบอยู่
	ใช้ชุดหูฟังอยู่
	โอนสายเรียกเข้า
	ใช้ EDGE อยู่
	โรมมิ่ง
	เปิดใช้โหมด Flight
	ใช้งานบลูทูธ
	เล่น BGM
	หยุด BGM ชั่วครว
	การ์ดหน่วยความจำเปิดใช้งาน

หน้าจอหลักของคุณ


การเปลี่ยนสถานะจาก

แถบสถานะ

แตะที่ตรงกลางของแถบสถานะเพื่อเปิด
สรุปสถานะ โดยจะแสดงเวลาปัจจุบัน,
เครือข่าย, SVC ID, แบตเตอรี่,
หน่วยความจำเครื่อง,
หน่วยความจำภายนอก, รูปแบบเสียง,
MP3 และสถานะบลูทูธ คุณสามารถ
ารถกำหนดประเภทรูปแบบเสียง
เล่น/หยุดชั่วคราว MP3s และเปิด/
ปิดการทำงานบลูทูธ

การใช้งานฟังก์ชันมัลติทา

สกิ้ง


กดปุ่มมัลติทาสกิ้ง  เพื่อเปิดเมนู
มัลติทาสกิ้ง จากเมนูนี้ คุณสามารถดู
แอปพลิเคชันทั้งหมดที่รันอยู่ และเขา
ใช้งานได้ด้วยการกดปุ่มเดียว

เมื่อคุณกำลังรันแอปพลิเคชันไว้ที่พื้น
หลัง (เช่น เกมส์ หรือวิทยุ FM) ไอคอน

 จะปรากฏขึ้นในแถบสถานะ

การโทร



การโทรออก

- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกด
- 3 แตะที่  เพื่อเริ่มการโทรออก
- 4 ในการวางสาย ให้กดปุ่มสมารท์

เคล็ดลับ! ในการป้อน +
เพื่อโทรออกต่างประเทศ กดปุ่ม
 คางไว้



เคล็ดลับ! กดปุ่มเปิดปิดเพื่อล๊อค
หน้าจอสัมผัสเพื่อป้องกันการโทร
ออกโดยไม่ตั้งใจ

การโทรออกโดยใช้รายชื่อ

- 1 จากหน้าจอหลัก ให้แตะที่ 
เพื่อเปิด รายชื่อ
- 2 แตะที่กล่องฟิลด์ชื่อที่ด้านบนของ
หน้าจอ และป้อนตัวอักษรสองสาม
ตัวแรกของรายชื่อที่ต้องการโทร
โดยใช้ปุ่มกด
- 3 จากรายการที่ฟیلเตอร์นี้
ให้แตะที่ไอคอนโทร ถัดจาก
รายชื่อที่ต้องการโทร หมายเลข
เริ่มต้นจะถูก ใช้ในการโทร หาก
รายชื่อนั้นมีหมายเลขมากกว่าหนึ่ง
หมายเลข
- 4 หรือ คุณอาจแตะที่ชื่อและเลือก
หมายเลขที่จะใช้ หากรายชื่อนั้นมี
หมายเลขมากกว่าหนึ่งหมายเลข
คุณอาจแตะที่  เพื่อโทรโดยใช้
หมายเลขเริ่มต้นก็ได้

การรับสายและการปฏิเสธ

สายเรียกเข้า


เมื่อโทรศัพท์ดังขึ้น ให้แตะที่ปุ่มสมารท์
เพื่อรับสายในการปิดเสียงเรียกเข้า
ให้เลื่อนฝาปิดขึ้น ซึ่งจะปลดล๊อคโทร
ศัพท์หากล๊อคอยู่ จากนั้นแตะที่
 วิธีนี้เป็นวิธีที่มีประโยชน์
หากคุณเลื่อมเปลี่ยนรูปแบบเสียงเป็น เงียบ
เมื่ออยู่ในห้องประชุม แตะที่ 
เพื่อปฏิเสธสายเรียกเข้า

การโทร

ตัวเลือกต่างๆ ระหว่างใช้สาย



พัก - แตะที่  เพื่อพักสาย


ปิดเสียง - แตะที่  เพื่อปิดไมโครโฟน
ดังนั้นบุคคลที่กำลังคุยสายอยู่จะไม่ได้ยินเสียงคุณ

ลำโพง - แตะที่  เพื่อเปิดลำโพง

ตัวเลือก - แตะที่  เพื่อแสดงรายการ
ตัวเลือกต่างๆ ระหว่างใช้สาย

แตะที่  เพื่อค้นหารายชื่อในระหว่างการโทร

แตะที่  เพื่อเพิ่มบุคคลอื่นในการสนทนา

แตะที่  เพื่อเปิดปุ่มตัวเลขสำหรับการโทรสายที่สอง
ฟังก์ชันนี้ให้คุณนาฬิกาเกิดเมนูด้วยตัวเลือกหมายเลขเมื่อ
คุณโทรอัตโนมัติ เช่น ศูนย์บริการ





เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือกต่างๆ หรือรายชื่อ ให้แตะที่รายการสุดท้ายที่มองเห็นได้ แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

โทรด่วน

คุณสามารถกำหนดรายชื่อที่โทรออก
บ่อยเป็นหมายเลขโทรด่วนได้

- 1 เลือก **รายชื่อ** ในแท็บการติดต่อ
และเลือก **โทรด่วน**
- 2 ข้อความเสียงได้รับการกำหนด
ให้อยู่ที่หมายเลขโทรด่วน 1
ซึ่งคุณไม่สามารถเปลี่ยนแปลงได้
และที่หมายเลขอื่นๆ เพื่อกำหนดรายชื่อ
สำหรับโทรด่วน
- 3 **รายชื่อ** ของคุณจะเปิดขึ้น เลือกรายชื่อ
ที่คุณต้องการกำหนดให้กับหมายเลขนั้น
โดยการแตะที่หมายเลขโทรศัพท์หนึ่งครั้ง
ในการค้นหารายชื่อ ให้แตะที่กล่องฟิลด์ชื่อ และป้อนตัว
อักษรแรกของชื่อที่ต้องการ

การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะที่  และพิมพ์หมายเลขที่คุณต้องการโทรออก
- 2 แตะที่  เพื่อโทรออก
- 3 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อกและพักสายคู่สนทนา
- 4 ในการสลับสาย ให้แตะที่  หรือกดหมายเลขที่พักสายไว้
- 5 ในการวางสายใดสายหนึ่งหรือวางสายทั้งสองสาย ให้กด  และเลือก **วางสาย** แล้วตามด้วย **ทั้งหมด**, **พัก** หรือ **ใช้งาน**

เคล็ดลับ! แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่, เวลา และระยะเวลาในการโทร

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การดูบันทึกการโทร

แตะที่ **ข้อมูลโทร** ในแท็บการติดต่อ

เคล็ดลับ! แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่, เวลา และระยะเวลาในการโทร

การโทร

การใช้การโอนสาย

- 1 แตะที่ **ตั้งค่าการโทร** ในแท็บตั้งค่า
 - 2 แตะที่ **การโอนสาย**
 - 3 เลือกว่าจะโอนสายเรียกเข้าทั้งหมด, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดคอไม่ได้
 - 4 ป้อนหมายเลขที่คุณต้องการโอนสาย
 - 5 แตะที่ **คำขอ** เพื่อเปิดใช้งาน
- หมายเหตุ:** คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

เคล็ดลับ!

ในการปิดการโอนสายทั้งหมด ให้เลือก **เลิกใช้ทั้งหมด** จากเมนูการโอนสาย

การใช้การป้องกันการโทร

- 1 แตะที่ **ตั้งค่าการโทร** ในแท็บตั้งค่า
- 2 แตะที่ **ป้องกันการโทร**
- 3 เลือกตัวเลือกใดตัวเลือกหนึ่งหรือเลือกทั้ง 6 ตัวเลือกนี้:
โทรออกทั้งหมด
โทรออกต่างประเทศ
โทรออกต่างประเทศ ยกเว้นประเทศแม่
สายเข้าทั้งหมด
สายเข้าเมื่ออยู่ตปท.
เลิกใช้ทั้งหมด
- 4 ป้อนรหัสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

เคล็ดลับ!

เลือก **กำหนดเบอร์โทรออก** จากตัวเลือก **ตั้งค่าการโทร** เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรจากโทรศัพท์ของคุณ. คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

การเปลี่ยนการตั้งค่า การโทรทั่วไป

- 1 แตะที่ **ตั้งค่าการโทร** ในแท็บตั้งค่า
- 2 เลื่อนแล้วแตะที่ **การตั้งค่าทั่วไป**
จากหน้าจอนี้ คุณสามารถปรับการ
ตั้งค่าของ:

ปฏิเสธการรับสาย -

เลื่อนสวิตช์ไปที่ **เปิด** เพื่อเลื่อนแถบ
ไปที่ปฏิเสธรายการ
คุณสามารถแตะที่กล่องข้อความ
เพื่อเลือกจากทุกสาย
รายชื่อหรือกลุ่ม หรือจากหมายเลข
ที่ไม่ได้ลงทะเบียน (ไม่มีอยู่ในรายชื่อ
ของคุณ) หรือไม่มีขอมูลผู้โทร แตะที่
บันทึก เพื่อเปลี่ยนการตั้งค่า

ส่งหมายเลขตัวเอง - เลือกว่าจะ
แสดงหมายเลขของคุณเมื่อคุณโทร
ออกหรือไม่

โทรเข้าอัตโนมัติ -

เลื่อนสวิตช์ไปทางซ้าย
เพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

โหมดตอบรับ - เลือกว่าจะรับสาย
โดยไข่ม่ม ส่ง หรือปุ่มใดๆ

เตือนทุกนาที - เลื่อนสวิตช์ไปทาง
ซ้ายเพื่อ **เปิด** ฟังเสียงเตือนทุกนาที
ระหว่างการไข่ม่ม

โหมดตอบรับ BT - เลือก **แฮนด์ฟรี**
เพื่อให้สามารถรับสายได้ในระหว่าง
ใช้งานชุดหูฟังบลูทูธ หรือเลือก

ตัวเครื่อง เพื่อรับสายโดยกดปุ่ม
บนตัวเครื่อง

บันทึกเบอร์ใหม่ - เลือก **ใช่**
เพื่อบันทึกหมายเลขใหม่

รายชื่อ

การค้นหารายชื่อ

คุณสามารถค้นหารายชื่อได้ 2 วิธี:

- 1 และที่ **รายชื่อ** ในแท็บการติดต่อ
- 2 และที่ **ค้นหา**
- 3 คุณจะเห็นรายชื่อ การพิมพ์ตัวอักษรแรกของชื่อในฟิลด์ชื่อจะทำให้เมนูขยับไปที่พื้นที่ของรายชื่อตามตัวอักษรนั้น

เคล็ดลับ! ปุ่มกดตัวอักษรจะปรากฏขึ้นเมื่อคุณแตะที่ฟิลด์ชื่อ


การเพิ่มรายชื่อใหม่

- 1 และที่ **รายชื่อ** ในแท็บการติดต่อ และแตะที่ **เพิ่มรายชื่อ**
- 2 เลือกว่าจะบันทึกรายชื่อไปยัง **ตัวเครื่อง** หรือ **SIM**
- 3 ป้อนชื่อและนามสกุล
- 4 คุณสามารถป้อนหมายเลขที่แตกต่างกันได้สูงสุด 5 หมายเลขต่อหนึ่งรายชื่อ แต่ละรายการจะมีประเภทที่ตั้งล่วงหน้า **เบอร์มือถือ, โสม, ออฟฟิศ, เบอร์เพจเจอร์ และ แฟกซ์**
- 5 เพิ่มอีเมลแอดเดรส คุณสามารถป้อนอีเมลแอดเดรสที่แตกต่างกันได้สูงสุด 2 อีเมลต่อหนึ่งรายชื่อ
- 6 กำหนดรายชื่อให้กับกลุ่มหนึ่งกลุ่มหรือมากกว่า คุณสามารถกำหนดกลุ่มที่แตกต่างกันได้สูงสุดสาม

กลุ่มต่อหนึ่งรายชื่อ เลือกระหว่าง **ไม่มีกลุ่ม, ครอบครัว, เพื่อน, เพื่อนร่วมงาน, โรงเรียน หรือ วิไอพี**

- 7 คุณยังสามารถเพิ่ม **เสียงเรียกเข้า, วันเกิด, วันครบรอบ, โสมเพจ, ที่อยู่บ้าน, ชื่อบริษัท, ชื่องาน, ที่อยู่บริษัท, บันทึกลง และ Livecon** ได้ด้วย
- 8 และที่ **บันทึก** เพื่อบันทึกรายชื่อ

การสร้างกลุ่ม

- 1 และที่ **รายชื่อ** ในแท็บการติดต่อ และแตะที่ **กลุ่ม**
- 2 และที่ **เพิ่มกลุ่ม** หรือแตะที่  และเลือก **เพิ่มกลุ่ม**
- 3 ป้อนชื่อสำหรับกลุ่มใหม่ของคุณ คุณสามารถกำหนดเสียงเรียกเข้าให้กับกลุ่มได้
- 4 และที่ **บันทึก**

หมายเหตุ: หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะไม่หายไป แต่ยังคงอยู่ใน **รายชื่อ**

การเปลี่ยนการตั้งค่าของ รายชื่อ

คุณสามารถปรับการตั้งค่ารายชื่อเพื่อ
ให้ตรงกับ **รายชื่อ**
ในแบบที่คุณต้องการได้

- 1 **แตะที่ รายชื่อ** ในแท็บการติดต่อ
และแตะที่ **ตั้งค่า**
- 2 จากหน้าจอนี้ คุณสามารถปรับการ
ตั้งค่าต่อไปนี้:

การตั้งค่ารายชื่อ - ปรับการตั้งค่า
ตำแหน่งรายชื่อ, การแสดงชื่อ
และ ปุ่มคำสั่งวน

คัดลอก - คัดลอกรายชื่อจากซิมไป
ยังตัวเครื่อง หรือจากตัวเครื่องไปยัง
ซิมของคุณได้ คุณสามารถเลือกที่จะ
รายชื่อหรือทั้งหมดในครั้งเดียว

ย้าย - ตัวเลือกนี้ทำงานในลักษณะ
เดียวกับ คัดลอก แต่จะบันทึกเฉพาะ
รายชื่อในตำแหน่งที่คุณย้ายไป
เท่านั้น

ส่งทุกรายชื่อผ่านบลูทูธ - ส่งรายชื่อ
ทั้งหมดไปยังอุปกรณ์อื่นโดยใช้
บลูทูธ เครื่องจะแสดงขอความให้คุณ
เปิดบลูทูธหากคุณเลือกตัวเลือกนี้

สำรองข้อมูลรายชื่อ - โปรดดูที่
การสำรองข้อมูลและการเรียกคืน
ข้อมูลของโทรศัพท์

เรียกคืนรายชื่อ - โปรดดูที่
การสำรองข้อมูลและการเรียกคืน

ข้อมูลของโทรศัพท์

ลบรายชื่อ -

ลบรายชื่อของคุณทั้งหมด
เลือกระหว่าง **ตัวเครื่อง** และ **SIM**
และแตะที่ **ใช่** หากคุณต้องการลบ
รายชื่อของคุณทั้งหมด

การดูข้อมูล

- 1 **แตะที่ รายชื่อ** ในแท็บการติดต่อ
และแตะที่ **ข้อมูล**
- 2 จากขั้นตอนนี้ คุณจะสามารดู
เบอร์บริการ, เบอร์ส่วนตัว,
ข้อมูลความจำ
(แสดงหน่วยความจำที่ใช้) และ
นามบัตร ของคุณได้


เคล็ดลับ! ในการเพิ่มนามบัตร
ของคุณเอง ให้เลือก **นามบัตร**
และป้อนรายละเอียดที่คุณต้องการ
สำหรับ รายชื่อใดๆ และที่ **บันทึก**
เพื่อดำเนินการให้เสร็จสิ้น


ข้อความ

ข้อความ

โทรศัพท์ GD510 ของคุณได้ผสมผสาน SMS และ MMS ไว้ในเครื่องเดียว และมีเมนูที่ใช้งานง่าย

การส่งข้อความ


- 1 แตะที่ **ข้อความ** ในแท็บการติดต่อ และแตะที่ **เขียนข้อความ** เพื่อเริ่มเขียนข้อความใหม่
- 2 แตะที่ **แทรก** เพื่อเพิ่มภาพ วิดีโอ เสียง รูปแบบอัตโนมัติและอื่นๆ
- 3 แตะที่ **ผู้รับ** ที่ด้านล่างของหน้าจอ เพื่อป้อนผู้รับ จากนั้นป้อนหมายเลข หรือแตะที่  เพื่อเลือกรายชื่อ คุณสามารถเพิ่มรายชื่อหลายรายการได้
- 4 แตะที่ **ส่ง** เมื่อพร้อม

 **คำเตือน:** หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะแปลง เป็น MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น

การป้อนข้อความ

คุณสามารถป้อนข้อความได้ 5 วิธีดังนี้: **ปุ่มกด, คีย์บอร์ด, เขียนมือ-สกรีน, เขียนมือ-บ็อกซ์, เขียนมือ-ดับเบิลบ็อกซ์**

คุณสามารถเลือกวิธีป้อนข้อมูลได้โดยแตะที่  และ **วิธีป้อนข้อมูล**

แตะ  เพื่อเปิดโหมด T9 ไอคอนนี้จะแสดงเฉพาะเมื่อคุณเลือก **ปุ่มกด** เป็นวิธีป้อนข้อมูล

แตะที่  เพื่อเลือกภาษาเขียน

แตะที่  เพื่อเปลี่ยนระหว่างตัวเลข สัญลักษณ์ และการป้อนข้อความ

ใช้ปุ่ม **Shift** เพื่อเปลี่ยนระหว่างการป้อนตัวพิมพ์ใหญ่หรือพิมพ์เล็ก

โหมด T9


โหมด T9 ใช้พจนานุกรมภายในเครื่องเพื่อรับรู้คำศัพท์ที่คุณเขียนตามลำดับปุ่มที่แตะ ซึ่งจะคาดคะเนคำศัพท์ที่คุณป้อนและแนะนำคำศัพท์อื่นๆ

การจดจำลายมือ

ในโหมด การจดจำลายมือ
คุณจะใช้บนหน้าจอและ GD510 ของ
คุณจะแปลงลายมือของคุณเป็นข้อความ
เลือก **เขียนมือ-สกรีน** หรือ **เขียนมือ-
บ็อกซ์** ตามมุมมองที่คุณต้องการ

การตั้งค่าอีเมล

แตะที่ **อีเมล** ในแท็บการติดต่อ
ถ้าไม่ได้ตั้งค่าอีเมลแอดเดสส์ ให้เริ่ม
วิธีการการตั้งค่าอีเมลและดำเนินการ
จนเสร็จสิ้น

คุณสามารถตรวจสอบและแก้ไขการตั้งค่า
ได้โดยเลือก  นอกจากนี้ คุณยัง
ตรวจสอบการตั้งค่าเพิ่มเติมซึ่งมีข้อมูล
โดยอัตโนมัติเมื่อคุณสร้างแอดเดสส์

การดึงข้อมูลอีเมลของคุณ


คุณสามารถตรวจสอบอีเมลใหม่ในแอด
เดสส์ของคุณแบบอัตโนมัติหรือด้วยตนเอง
ได้ ในการตรวจสอบด้วยตนเอง:

- 1 แตะที่ **อีเมล** ในแท็บ การติดต่อ
- 2 แตะที่แอดเดสส์ที่คุณต้องการใช้

การส่งอีเมลโดยใช้แอด เดสส์ใหม่

- 1 แตะที่ **อีเมลใหม่**
และอีเมลใหม่จะเปิดขึ้น
- 2 ป้อนข้อความ
- 3 แตะที่ **ส่ง** แล้วอีเมลจะถูกส่งออกไป

การเปลี่ยนการตั้งค่าอีเมล

- 1 แตะที่ **อีเมล** ในแท็บการติดต่อ
- 2 แตะที่  และเลือก **ตั้งค่าอีเมล**
ซึ่งคุณสามารถเปลี่ยนแปลงการตั้งค่า
คาตอไปนี้ได้:
แอดเดสส์อีเมล
อีเมลที่ต้องการ

ตอบกลับอีเมลได้ - เลือกเพื่อให้ส่ง
ข้อความยืนยันการอ่านได้

ร้องขอการตอบกลับอีเมล
- เลือกว่าต้องการขอความยืนยันการ
อ่านหรือไม่

รอบเวลาการเรียกดู - เลือกความถี่
ที่จะให้โทรศัพท์ GD510
ตรวจสอบข้อความอีเมลใหม่

จำนวนที่รับ - เลือกจำนวนอีเมล
ที่ดึงข้อมูลในหนึ่งครั้ง

รวมข้อความ - เลือกเพื่อรวม
ข้อความต้นฉบับในการตอบกลับ

รวมสิ่งที่แนบ - เลือกเพื่อรวมสิ่ง
ที่แนบต้นฉบับในการตอบกลับ

ข้อความ

เรียกอัตโนมัติในการโรมมิ่ง - เลือกว่าจะดึงข้อความโดยอัตโนมัติเมื่อคุณอยู่ต่างประเทศ (โรมมิ่ง) หรือไม่

แจ้งเตือนอีเมลใหม่ - เลือกว่าจะแจ้งเตือนอีเมลใหม่หรือไม่

ลายเซ็น - เลือก **เปิด** คุณสมบัตินี้และสร้างลายเซ็นอีเมล

ระดับความสำคัญ - เลือกระดับความสำคัญของข้อความอีเมล

ขนาดการส่งเมล - ตั้งค่าขนาดภาพที่ใหญ่ที่สุดที่สามารถส่งได้

ตัวนับอีเมล - ป้อนวันที่ที่ต้องการคุณสามารถตรวจสอบอีเมลที่ส่งในระหว่างช่วงเวลานั้นได้

โพลเดอร์ข้อความ

ในเมนูการส่งข้อความมีห้าโพลเดอร์
ถัดเข้า - ข้อความทั้งหมดที่คุณได้รับจะอยู่ในถัดเข้า

ร่าง - หากคุณยังเขียนข้อความไม่เสร็จคุณสามารถบันทึกสิ่งที่คุณเขียนไว้ในโพลเดอร์นี้ได้

ถัดออก - โพลเดอร์นี้เป็นโพลเดอร์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป

รายการที่ส่ง - ข้อความทั้งหมดที่คุณส่งจะอยู่ในโพลเดอร์นี้

โพลเดอร์ส่วนตัว - สร้างโพลเดอร์เพื่อจัดเก็บข้อความ

การเปลี่ยนการตั้งค่า

ข้อความตัวอักษร

และที่ **ข้อความ**

ในแท็บการติดต่อ และแตะที่ **ตั้งค่า** เลือก **ข้อความตัวอักษร** คุณสามารถเปลี่ยนแปลง:

ศูนย์ข้อความตัวอักษร - ป้อนรายละเอียดของศูนย์ข้อความ

รายงานผลการส่ง - เลื่อนสวิตช์ไปทางซ้ายเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว

อายุข้อความ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

ชนิดข้อความ -

แปลงข้อความตัวอักษรเป็น **ตัวอักษร**, **เสียง**, **แฟกซ์**, **X.400** หรือ **อีเมล**

การเข้ารหัสตัวอักษร - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความและค่าบริการส่งข้อความของคุณ

การส่งข้อความยาว - เลือกเพื่อส่งข้อความยาวแบบ เป็นหลาย SMS หรือเป็น MMS

การเปลี่ยนการตั้งค่า

ข้อความมัลติมีเดีย

และที่ **ข้อความ** ในแท็บการติดต่อ

เลื่อนและเลือก **ตั้งค่า**

และ **ข้อความมัลติมีเดีย**

คุณสามารถเปลี่ยนแปลง:

โหมดเรียกข้อมูล - เลือกระหว่าง

เครือข่ายหลัก หรือ **เครือข่ายโรมมิ่ง**

หากคุณเลือก **กำหนดเอง** คุณจะได้รับ

เฉพาะข้อความแจ้ง MMS และคุณสามารถ

กดตัดสินใจว่าจะดาวน์โหลดแบบเต็มหรือไม่

รายงานผลการส่ง

- เลือกเพื่อให้อ่านและ/

หรือขอรายงานผลการส่ง

อ่านข้อความตอบรับ-

เลือกเพื่อให้อ่านและ/หรือขอการตอบกลับ

ระดับความสำคัญ -

เลือกระดับความสำคัญของ MMS

อายุข้อความ - เลือกระยะเวลาที่จัดเก็บ

ข้อความไว้ในศูนย์ข้อความ

ระยะเวลาสไลด์ - เลือกระยะเวลาที่จะ

ให้สไลด์ปรากฏบนหน้าจอ

โหมดการสร้าง - เลือกโหมดข้อความ

เวลาส่ง - เลือกระยะเวลาในการรอ

ก่อนส่งข้อความ


ศูนย์ MMS - เลือกหนึ่งศูนย์จากรายการ

หรือเพิ่มศูนย์ข้อความใหม่

การเปลี่ยนการตั้งค่าอื่นๆ

และที่ **ข้อความ** ในแท็บการติดต่อ

และและที่ **ตั้งค่า**

ข้อความเสียง - และที่  เพื่อเพิ่ม

บริการข้อความเสียงใหม่ ติดต่อผู้ให้

บริการเครือข่ายของคุณสำหรับข้อมูล

เพิ่มเติมเกี่ยวกับบริการที่มีให้

ข้อความบริการ - เลือกเพื่อรับหรือ

บล็อกข้อความบริการ คุณยังสามารถ

กำหนดความปลอดภัยของข้อความได้

โดยการสร้างรายการผู้ส่งที่เชื่อถือ

ได้และเชื่อถือไม่ได้ในตัวเลือก

ความปลอดภัย

ตัวนับข้อความ - เลือกเพื่อตั้งค่าระยะเวลา

เวลาในการนับข้อความ


บริการข้อมูล - เลือกว่าจะเปิด/

ปิดข้อความจากระบบ และเลือกของ

สัญญาณและภาษา

กล้อง

ทำความรู้จักกับช่องมองภาพ



การรับแสง - ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมัว ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า

ซูม - ซูมเข้าหรือซูมออก ฟังก์ชันนี้เปิดใช้ได้ขึ้นอยู่กับขนาดภาพที่คุณถ่าย

ย้อนกลับ

การถ่ายภาพ

โหมดวิดีโอ - เลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ

คลังภาพ - คุณสามารถเข้าดูรูปถ่ายที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูป เพียงแตะและคลังภาพของคุณจะปรากฏบนหน้าจอ




ตั้งค่า - แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า โปรดดูที่ **การใช้การตั้งค่าขั้นสูง**

โหมดมุมมอง - เลือกระหว่างเต็มหน้าจอหรือภาพเต็ม

ชัตเตอร์เนื่อง - ตัวเลือกนี้ทำให้คุณสามารถถ่ายภาพต่อเนื่องอย่างรวดเร็วได้ถึง 3/6/9 ชัตตโดยอัตโนมัติ

เคล็ดลับ! คุณสามารถเปิดตัวเลือกได้โดยแตะที่หน้าจอลง ซึ่งจะปิดอัตโนมัติหลังจากสองสามวินาที

การถ่ายภาพด่วน


- 1 กดปุ่ม  ที่ด้านขวาของโทรศัพท์
- 2 เมื่อกดปุ่มโฟกัสที่วัตถุแล้ว ให้แตะ  ที่ตรงกลางด้านขวาของหน้าจอ เพื่อถ่ายภาพ คุณสามารถกดปุ่ม  ที่ด้านข้างโทรศัพท์ได้ด้วย

เคล็ดลับ!

ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลื่อนไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางขวาของช่องมองภาพขึ้น/ลง


ภายหลังการถ่ายรูป

ภาพที่ถ่ายจะปรากฏบนหน้าจอ ชื่อของภาพจะวิ่งที่ด้านล่างของหน้าจอ

 แตะเพื่อส่งรูปภาพเป็น ข้อความ, อีเมล หรือผ่านทางบลูทูธ

 แตะเพื่อตั้งค่าภาพหน้าจอหลัก

 แตะเพื่อแก้ไขภาพ

 แตะเพื่อลบภาพที่เพิ่งถ่ายและยืนยันการลบโดยแตะ **ใช่** ข้อความ "ลบแล้ว" จะปรากฏขึ้น

 แตะเพื่อย้ายไปที่คลังภาพ



กล้อง

การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

ขนาด - เปลี่ยนขนาดของภาพเพื่อบันทึกในพื้นที่หน่วยความจำ หรือถ่ายภาพแบบที่กำหนดขนาดไว้ถูกต้องสำหรับรายชื่อ เลือกค่าพิกเซลจากตัวเลือกหกตัวเลือก: **3M (2048x1536)**, **2M (1600x1200)**, **1M (1280x960)**, **VGA (640x480)**, **หน้าจอหลัก (WQVGA)**, **QVGA (320x240)**

เอฟเฟกต์สี - เลือกโทนสีเพื่อใช้กับภาพที่คุณถ่าย โทนมืดตัวเลือกทั้งหมด 4 ตัวเลือก: **ปิด**, **ขาวดำ**, **เนกาทีฟ** หรือ **ซีเปีย**

ความสมดุลแสง - เลือกระหว่าง **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** หรือ **มิดครีမ်**

โหมดกลางคืน - ใช้สำหรับการถ่ายภาพในที่มืด

ตั้งเวลาถ่ายภาพ - ตัวตั้งเวลาทำให้คุณสามารถตั้งช่วงเวลาหน่วงหลังจากที่กดปุ่มถ่ายภาพ ให้เลือกจาก **3 วินาที**, **5 วินาที** หรือ **10 วินาที** ซึ่งเหมาะสำหรับการถ่ายภาพกลุ่มที่คุณต้องการเป็นส่วนหนึ่งในกลุ่มด้วย

คุณภาพ - เลือกระหว่าง **ละเอียดมาก**, **ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของภาพถ่าย

ก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่ง

หมายความว่า คุณจะสามารถจัดเก็บรูปภาพในหน่วยความจำได้น้อยลง

หน่วยความจำ - เลือกว่าจะบันทึกรูปภาพที่หน่วยความจำเครื่อง หรือที่หน่วยความจำภายนอก

แสดงภาพที่ถ่าย - เลือกเพื่อดูภาพด้วยตัวเลือกต่างๆ หลังจากถ่ายภาพ

ซ่อนไอคอน - เลือกซ่อนไอคอนตั้งค่ากล้องถ่ายรูปเองหรือโดยอัตโนมัติ


เสียงชัตเตอร์ - เลือกเสียงชัตเตอร์เสียงใดเสียงหนึ่งจากสามเสียง

หน้าจอกด - เลือกระหว่าง **ปิด**, **4 ส่วน** หรือ **9 ส่วน**

รีเซ็ตการตั้งค่า - รีเซ็ตการตั้งค่ากล้องถ่ายรูปทั้งหมด

กล้องวิดีโอ

ทำความรู้จักกับช่องมองภาพ

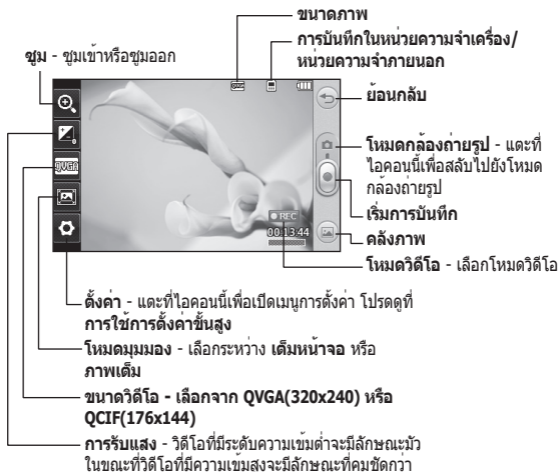







เคล็ดลับ! คุณสามารถปิดตัวเลือก Shortcut เพื่อให้หน้าจอช่องมองภาพโล่งขึ้นได้ เพียงแตะที่กึ่งกลางของช่องมองภาพหนึ่งครั้งในการเรียกใช้งานตัวเลือกใหม่ ให้แตะที่หน้าจออีกครั้ง

กล้องวิดีโอ

การถ่ายวิดีโอด้วย

- 1 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์เป็นเวลาสองสามวินาที

เคล็ดลับ! ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลื่อนไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางขวาของช่องมองภาพขึ้น/ลง

- 2 ให้อือโทรศัพท์ในแนวนอน และหันไปทางสิ่งที่จะถ่าย
- 3 กดปุ่มกล้องถ่ายรูป  ที่โทรศัพท์หนึ่งครั้งเพื่อเริ่มการบันทึก หรือแตะที่จุดสีแดง 
- 4 **Rec** จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพและตัวตั้งเวลาทางด้านล่าง เพื่อแสดงระยะเวลาของวิดีโอของคุณ
- 5 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  แล้วเริ่มบันทึกต่อโดยเลือก 
- 6 แตะที่  บนหน้าจอหรือกด  ซ้ำอีกครั้งเพื่อหยุดการบันทึก

หลังจากถ่ายวิดีโอ


ภาพนิ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ ชื่อของวิดีโอจะแสดงอยู่ที่ด้านล่างของหน้าจอ พร้อมกับมีไอคอน 7 ไอคอนเรียงอยู่ทางด้านซ้ายและขวา

 แตะเพื่อเล่นวิดีโอ


 แตะเพื่อส่งวิดีโอเป็น

ข้อความหรืออีเมล หรือทาง บลูทูธ หรือ YouTube

 แตะเพื่อแก้ไขวิดีโอ

 แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

แตะที่  เพื่อถ่ายวิดีโออื่นต่อ

 แตะเพื่อดูคลังภาพของวิดีโอ และภาพที่บันทึกไว้



การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะ **ตั้งค่า** เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

เอฟเฟกต์สี - เลือกโทนสีเพื่อใช้กับวิดีโอใหม่ **ปิด**, **ขาวดำ**, **เนกาทีฟ**, **ซีเปีย**

ความสมดุลแสง - ความสมดุลแสงจะช่วยให้มั่นใจได้ว่าแสงขาวที่ปรากฏในวิดีโอจะสวยสมจริง เพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน เลือกจาก **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** หรือ **มิตร**

คุณภาพ - เลือกระหว่าง **ละเอียดมาก**, **ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของภาพวิดีโอก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ดังนั้นคุณสามารถจัดเก็บวิดีโอในหน่วย ความจำได้น้อยลง

ระยะเวลา - ตั้งระยะเวลาจำกัดสำหรับวิดีโอ เลือกว่าจะส่งวิดีโอเป็น MMS หรือไม่

เคล็ดลับ!

หากคุณเลือกระยะเวลาแบบ MMS การเลือกคุณภาพของภาพที่ต่ำลง จะช่วยให้คุณถ่ายภาพวิดีโอได้ยาวนานขึ้น

หน่วยความจำ - เลือกว่าจะบันทึกวิดีโอไปยัง **ความจำเครื่อง** หรือไปยัง **ความจำการ์ด**




เสียง - เลือกว่าจะบันทึกวิดีโอพร้อมเสียงหรือไม่

ซ่อนไอคอน - เลือกซ่อนไอคอนตั้งค่ากล้องถ่ายรูปเองหรือโดยอัตโนมัติ

รีเซ็ตการตั้งค่า - รีเซ็ตการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด





รูปภาพและวิดีโอ

การดูรูปภาพและวิดีโอ

- 1 แตะที่ **คลังภาพ** ในแท็บความบันเทิง หรือแตะที่  บนหน้าจอตัวอย่าง ในกล่องถ่ายรูป คุณสามารถตรวจสอบภาพและวิดีโอของคุณได้
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะที่วิดีโอหรือรูปภาพเพื่อเปิดทั้งไฟล์
- 4 ในการเล่นวิดีโอ แตะที่  ในการหยุดเล่นชั่วคราว ให้แตะที่ 

เคล็ดลับ! กดปุ่มไปทางซ้ายหรือทางขวาเพื่อดูรูปหรือวิดีโออื่น

การบันทึกภาพจากวิดีโอ

- 1 เลือกวิดีโอที่คุณต้องการบันทึกภาพมา
- 2 แตะที่  เพื่อหยุดภาพวิดีโอบนเฟรมที่คุณต้องการแปลงเป็นรูปภาพไว้ชั่วคราว แล้วแตะที่ด้านบนซ้ายของหน้าจอเพื่อเปิดเมนู 
- 3 จากเมนูตัวเลือก เลือก 
- 4 ภาพจะปรากฏบนหน้าจอพร้อมกับชื่อภาพ
- 5 แตะที่  เพื่อกลับไปวิดีโอ
- 6 ภาพจะถูกบันทึกไว้ในโฟลเดอร์ **แฟ้มข้อมูล** และจะปรากฏในคลังภาพ

คำเตือน:


บางฟังก์ชันอาจทำงานไม่ถูกต้องหากไม่ได้บันทึกไฟล์มัลติมีเดียด้วยโทรศัพท์

การดูรูปภาพแบบภาพสไลด์

โหมดภาพสไลด์จะแสดงรูปภาพทั้งหมดในคลังภาพของคุณพร้อมกันเป็นภาพสไลด์ วิดีโอไม่สามารถดูเป็นแบบภาพสไลด์ได้

- 1 แตะที่  ใน **คลังภาพ** แล้วเลื่อนและเลือก **ภาพสไลด์**


- 2 ภาพสไลด์จะเริ่มต้น

ภายในภาพสไลด์มีตัวเลือกต่างๆ ดังนี้:
แตะที่  เพื่อย้อนกลับ



 แตะเพื่อหยุดภาพสไลด์ชั่วคราวที่ภาพใดภาพหนึ่ง

 แตะอีกครั้งเพื่อเริ่มเล่นต่อ





 แตะเพื่อแสดงสไลด์ซูม


 แตะเพื่อเพิ่มหรือลดความเร็วของภาพสไลด์


การตั้งค่ารูปภาพเป็นพื้นหลัง

- 1 แตะที่ **คลังภาพ**
ในแท็บความบันเทิง
- 2 แตะที่รูปภาพที่คุณต้องการตั้งค่า
เป็นพื้นหลัง
- 3 แตะที่หน้าจอเพื่อเปิดเมนู
- 4 แตะ 
- 5 คุณสามารถเปลี่ยนขนาดของรูปภาพ
ได้ด้วย 
- 6 เมื่อคุณพอใจกับรูปภาพนี้แล้ว
ให้แตะที่ **ตั้งค่า**
- 7 เลือกจากตัวเลือกที่ต้องการเปลี่ยน:
ทั้งหมด, **Widget**, **โทรดวน**


การแก้ไขรูปภาพ

- 1 เปิดรูปภาพที่คุณต้องการแก้ไขและ
แตะที่  เพื่อแสดงตัวเลือก
- 2 แตะที่ไอคอนเพื่อปรับรูปภาพ
ของคุณ:
 เลื่อนนิ้วของคุณไปตามหน้าจอ
เพื่อเลือกพื้นที่
 วาดลายเส้นบนรูปภาพด้วย
มือ เลือกความหนาของเส้นจาก 4
ตัวเลือก จากนั้นเลือกสีที่คุณต้องการ
การใช้
 เพิ่มตัวหนังสือบนรูปภาพ



 ตกแต่งรูปภาพของคุณด้วย
สแตมป์ เลือกจากสแตมป์และสีต่างๆ
แล้วแตะภาพของคุณในจุดที่ต้อง
การวาง

 ลบสิ่งที่คุณวาด คุณสามารถ
เลือกขนาดของยางลบได้ด้วย

 แตะเพื่อกลับไปที่คุณภาพ

 บันทึกการเปลี่ยนแปลงที่คุณ
ทำไว้ในรูปภาพของคุณ เลือก
เพื่อบันทึกการเปลี่ยนแปลงที่
ไฟล์ต้นฉบับ หรือเป็น **ไฟล์ใหม่**
หากคุณเลือก **ไฟล์ใหม่**
ให้ป้อนชื่อไฟล์

 เลิกทำเอฟเฟกต์ หรือการ
แก้ไขล่าสุดที่คุณทำไว้ในรูปภาพ


 แตะเพื่อเปิดตัวเลือกฟิลเตอร์
 คุณสามารถปรับภาพที่เลือก



รูปภาพและวิดีโอ

การเพิ่มเอฟเฟกต์

ลงในรูปภาพ

1 จากหน้าจอแก้ไข ให้แตะที่ 

2 เลือกเพื่อใช้ตัวเลือกใดตัวเลือกหนึ่งกับภาพ:

ตกแต่งใบหน้า - ตรวจสอบใบหน้าในรูปภาพอัตโนมัติและทำให้ใบหน้าสว่างขึ้น


เอฟเฟกต์อิมุงค์ -
เอฟเฟกต์คัลเลอร์โม

เนกาทีฟสี - เอฟเฟกต์เนกาทีฟสี

ขาวดำ - เอฟเฟกต์สีขาวดำ

สีซีเปีย - ให้เอฟเฟกต์สีซีเปีย

เบลอ - ให้เอฟเฟกต์เบลอ

คมชัด - เลื่อนเครื่องหมายบนแถบเพื่อทำให้โฟกัสของภาพดูคมชัดขึ้น
เลือกไอคอน **ตกลง** เพื่อใช้การเปลี่ยนแปลงหรือเลือก  เพื่อยกเลิก

เบลอ - แตะเพื่อใช้เอฟเฟกต์โมเสกเบลอกับรูปภาพ

สีน้ำมัน - ให้เอฟเฟกซ์ภาพสีน้ำมัน

สเก็ตซ์ - ใช้เอฟเฟกต์เพื่อทำให้ภาพดูเหมือนเป็นภาพสเก็ตซ์

พิมพ์นูน - ให้เอฟเฟกต์ภาพพิมพ์นูน

โซล่าไลซ์ - เปลี่ยนเอฟเฟกต์การรับแสง

แสงจ้า - ให้เอฟเฟกต์ความคมชัดและความสว่าง

แสงจันทร์ - เปลี่ยนแสงให้ดูเหมือนแสงจันทร์

แอนดิด - ให้เอฟเฟกต์ภาพเก่า

เรืองแสง -
ให้เอฟเฟกต์การใช้ลำแสง

การดูน - ให้เอฟเฟกต์การดูน

สีน้ำ - ให้เอฟเฟกต์ภาพสีน้ำ

3 ในการเลือกทำเอฟเฟกต์เพียงแคแตะที่ **เลือกทำ** 

มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ การใช้การ์ดหน่วยความจำทำให้คุณเพิ่มพื้นที่ในหน่วยความจำของโทรศัพท์ได้ คุณสามารถค้นหาไฟล์เหล่านี้ในเมนู **เพิ่มข้อมูล** ในแท็บความบันเทิง

รูปภาพ


ภาพ ประกอบด้วยรายการรูปภาพ รวมถึงภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

การส่งรูปภาพ


- 1 **แตะที่ เพิ่มข้อมูล**
ในแท็บความบันเทิง และเลือก **ภาพ**
เลือกภาพที่ต้องการ
- 2 **แตะที่ ส่ง** และเลือกจาก
ข้อความมัลติมีเดีย, อีเมล, บลูทูธ
และ **Blogger**

การใช้รูปภาพ

คุณสามารถเลือกรูปภาพเพื่อใช้เป็นพื้นหลังและลือคหน้าจอหรือใช้เพื่อระบุผู้โทรเขาได้

- 1 **แตะที่ เพิ่มข้อมูล**
ในแท็บความบันเทิง และเลือก **ภาพ**
เลือกภาพที่ต้องการ และแตะที่ 
- 2 **แตะที่ ใช้เป็น** และเลือกจาก:
ภาพหน้าจอหลัก - กำหนดพื้นหลังสำหรับหน้าจอหลัก
ภาพลือคหน้าจอ - กำหนดพื้นหลังสำหรับภาพลือคหน้าจอ
ภาพรายชื่อ - กำหนดภาพให้กับบุคคลใดบุคคลหนึ่งในรายชื่อ เพื่อให้ภาพนั้นปรากฏขึ้นเมื่อบุคคลนั้นโทรมา
ภาพเปิดเครื่อง - กำหนดให้ภาพปรากฏขึ้นเมื่อเปิดเครื่อง
ภาพปิดเครื่อง - กำหนดให้ภาพปรากฏขึ้นเมื่อปิดเครื่อง

การพิมพ์ภาพ

- 1 **แตะที่ เพิ่มข้อมูล**
ในแท็บความบันเทิง และเลือก **ภาพ**
เลือกภาพที่ต้องการ และแตะที่ 
- 2 **แตะที่ พิมพ์** แล้วเลือกระหว่าง **บลูทูธ** และ **PictBridge**

เคล็ดลับ!

คุณสามารถพิมพ์ผ่านบลูทูธ หรือโดยเชื่อมต่อกับเครื่องพิมพ์ที่เข้าร่วมกับ PictBridge ได้

มัลติมีเดีย

การย้ายหรือคัดลอกรูปภาพ

คุณสามารถย้ายหรือคัดลอกรูปภาพระหว่างหน่วยความจำของโทรศัพท์กับการ์ดหน่วยความจำได้ เพื่อเป็นการเพิ่มพื้นที่หน่วยความจำในหน่วยความจำใดหน่วยความจำหนึ่ง หรือเพื่อป้องกันภาพมิให้สูญหาย

1 แตะที่ **เพิ่มข้อมูล**

ในแท็บความบันเทิง เลือก **ภาพ** และแตะที่ 

2 เลือก **ย้าย** หรือ **คัดลอก**

3 คุณสามารถเลือก/ไม่เลือกภาพได้โดยแตะที่ภาพ เลือกภาพที่คุณต้องการย้ายหรือคัดลอกและแตะที่ **คัดลอก/ย้าย**

เสียง

เสียง ประกอบด้วยรายการเสียงได้แก่ เสียงที่ดาวน์โหลด, เสียงเริ่มต้น และเสียงบันทึก จากขั้นตอนนี้ คุณสามารถจัดการ ส่ง หรือกำหนดเสียงเป็นเสียงเรียกเขาได้

การใช้เสียง

1 แตะที่ **เพิ่มข้อมูล**

ในแท็บความบันเทิง และเลือก **เสียง**

2 เลือกเสียงที่ต้องการ จากนั้นข้อความยืนยันจะปรากฏขึ้น

3 แตะที่ **ใช่** ซึ่งจะเริ่มเล่น

4 แตะที่  แล้วเลือก **ใช่เป็น**

5 เลือกระหว่าง **เสียงเรียกเข้า, เสียงข้อความ, ปิดเครื่อง และ ปิดเครื่อง**

วิดีโอ

วิดีโอ แสดงรายชื่อวิดีโอที่ดาวน์โหลดและวิดีโอที่คุณบันทึกไว้ในโทรศัพท์ของคุณ

การดูวิดีโอ

1 แตะที่ **เพิ่มข้อมูล** ในแท็บความบันเทิงและเลือกวิดีโอ

2 เลือกวิดีโอที่จะเล่น

การส่งวิดีโอคลิป

1 เลือกวิดีโอ

2 แตะที่  จากนั้น **ส่ง** และเลือกระหว่าง **ข้อความ, อีเมล, บลูทูธ และ YouTube**

เกมส์&แอปฯ

คุณสามารถติดตั้งเกมส์และแอปพลิเคชันใหม่ๆ บนโทรศัพท์ของคุณ เพื่อเพื่อช่วยให้คุณได้เพลิดเพลินในยามว่างคุณสามารถเขาใช้งานได้โดยใช้เมนู **เกมส์&แอปฯ** ในแท็บความบันเทิง

การเล่นเกมส์

- 1 แตะที่ **เกมส์&แอปฯ** ในแท็บความบันเทิง
- 2 เลือก **เกมส์** แล้วเลือกเกมส์เพื่อเปิดใช้งาน

เอกสาร

คุณสามารถดูไฟล์เอกสารทั้งหมดของคุณได้จากเมนู **เอกสาร** ใน **แฟ้มข้อมูล** จากขั้นตอนนี้ คุณจะสามารถดูไฟล์ Excel, Powerpoint, Word, ขอความ และ PDF ได้

การโอนไฟล์ไปที่โทรศัพท์

บลูทูธคือวิธีการที่ง่ายที่สุดในการโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ คุณยังสามารถใช้ LG PC Suite ผ่านทางสายสำหรับซิงค์ของคุณ

ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธที่โทรศัพท์และคอมพิวเตอร์ และทั้งคู่ต่างมองเห็นกันแล้ว
- 2 ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏเป็นค่าเริ่มต้นใน **รูปภาพของฉัน** แท็บที่สองใน **แฟ้มข้อมูล** คุณอาจมองข้ามไฟล์ถ้าโฟลเดอร์เต็ม

อื่นๆ

อื่นๆ ประกอบด้วยรายการไฟล์ที่ไม่ใช่ภาพ เสียง วิดีโอ เอกสาร เกมส์หรือแอปพลิเคชัน

สร้างหนังสือ

คุณสามารถสร้างมีวสิควิดีโอ

การสร้างภาพยนตร์

- 1 เลื่อนและแตะที่ **สร้างหนังสือ** ในแท็บความบันเทิง
- 2 แตะที่ **+** เพื่อใส่รูปภาพ และที่ช่องทำเครื่องหมายของภาพที่คุณต้องการใส่ แล้วเลือก **แทรก**
- 3 แตะที่แท็บรูปแบบเพื่อเลือก **Muvee Style** รูปแบบเริ่มต้นคือ **Classic Sepia**
- 4 แตะที่ **เสียงเริ่มต้น** เพื่อเปลี่ยนเสียง
- 5 แตะที่ **▶** เพื่อดูภาพยนตร์ที่คุณสร้าง
- 6 แตะที่ **📺** แล้วแตะ **ลำดับการเล่น** เพื่อสร้างลำดับ คุณสามารถเลือกสลับหรือตามลำดับ
- 7 แตะที่ **📺** แล้วเลือก **บันทึกใน** เพื่อเลือกจุดที่จะบันทึกภาพยนตร์

มัลติมีเดีย

เพลง

โทรศัพท์ LG GD510 ของคุณมีเครื่องเล่นเพลงในตัว เพื่อให้คุณเล่นเพลงที่ชื่นชอบทั้งหมด ในการเข้าใช้เครื่องเล่นเพลง ให้แตะที่ **เพลง** ในแท็บความบันเทิง จากขั้นตอนนี้ คุณสามารถเข้าใช้งานโพลเดอรร่างๆ ดังนี้:

หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลงจะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้รับสิทธิ์ในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีข้อยกเว้นในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์โปรดตรวจสอบขอมติขอบังคับของแต่ละประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

เล่นล่าสุด - เล่นเพลงที่คุณเล่นล่าสุด
ทุกแทร็ค - มีเพลงทั้งหมดที่คุณมีในโทรศัพท์ทุกเวเนเพลงเริ่มต้นที่โหลดล่วงหน้า

ศิลปิน - รายการเพลงที่เก็บไว้ตามศิลปิน

อัลบั้ม - รายการเพลงที่เก็บไว้ตามอัลบั้ม

แนวเพลง - รายการเพลงที่เก็บไว้ตามแนวเพลง

รายการเพลง - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

สับเปลี่ยนแทร็ค - เล่นแทร็คในลำดับสุ่ม





การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธหรือสายสำหรับซิงโครไนซ์

คุณยังสามารถใช้ LG PC Suite ได้ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และเชื่อมต่อกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์ แล้วเลือกเพื่อส่งทางบลูทูธ
- 3 เมื่อไฟล์พร้อมที่จะส่งแล้ว คุณยอมรับไฟล์ที่โทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏขึ้นใน **เพลง > ทุกแทร็ค**

การเล่นเพลง

- 1 แตะที่ **เพลง** ในแท็บความบันเทิง
- 2 เลือกโพลเดอรรใดโพลเดอรรหนึ่งและเพลงที่คุณต้องการเล่น
- 3 แตะ  เพื่อหยุดเล่นเพลงชั่วคราว
- 4 แตะที่  เพื่อข้ามไปที่เพลงถัดไป
- 5 แตะที่  เพื่อย้อนไปที่เพลงก่อนหน้า
- 6 แตะที่  เพื่อกลับไปเมนูเพลง คุณอาจแตะมากกว่าหนึ่งครั้งเพื่อกลับไปเมนู

การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณได้โดยเลือกเพลงจากโพลเดอร์

รายการ

- 1 **แตะที่ เพลง** ในแท็บความบันเทิง
- 2 **แตะที่ รายการ** จากนั้น **เพิ่มรายการเพลงใหม่**
ป้อนชื่อรายการเพลง และแตะที่ **บันทึก**
- 3 **โพลเดอร์ ทุกแทร็ค** จะแสดงทุกเพลงในโทรศัพท์ของคุณ และที่เพลงทั้งหมดที่คุณต้องการใส่ไว้ในรายการเพลง จะมีเครื่องหมายปรากฏอยู่ข้างชื่อเพลงเหล่านั้น
- 4 **แตะที่ เสร็จ**

วิทยุ FM

โทรศัพท์ LG GD510 มีคุณสมบัติวิทยุ FM ดังนั้น คุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

หมายเหตุ: คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟัง (ช่องเสียบเดียวกับช่องเสียบอุปกรณ์ชาร์จ)

การค้นหาสถานี

คุณสามารถใช้โทรศัพท์ค้นหาสถานีวิทยุได้ โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขช่องสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้อง

สถานีใหม่อีก คุณต้องต่อชุดหูฟังกับโทรศัพท์ก่อนเนื่องจากชุดหูฟังจะทำหน้าที่เป็นเสาอากาศวิทยุ

ในการปรับตั้งอัตโนมัติ:

- 1 **เลื่อนแล้วแตะที่ วิทยุ FM**
ในแท็บความบันเทิง แล้วแตะที่ 
- 2 **แตะที่ สแกนอัตโนมัติ**
ขอความยินยอมจะปรากฏขึ้น **เลือกใช่** เครื่องจะค้นหาสถานีวิทยุที่มีอยู่โดยอัตโนมัติ และกำหนดไว้ที่ช่องสถานีในโทรศัพท์


หมายเหตุ: คุณยังสามารถค้นหาสถานีด้วยตนเองได้ด้วยการใช้ ◀ และ ▶ แสดงที่ตรงกลางหน้าจอ หากคุณกด ◀ และ ▶ ค้างไว้ จะเป็นการค้นหาสถานีโดยอัตโนมัติ

การรีเซ็ตสถานี

- 1 **เลื่อนแล้วแตะที่ วิทยุ FM**
ในแท็บความบันเทิง แล้วแตะที่ 
- 2 **เลือก รีเซ็ตสถานี** เพื่อรีเซ็ตช่องสถานีปัจจุบัน หรือเลือก **รีเซ็ตทุกสถานี** เพื่อรีเซ็ตช่องสถานีทั้งหมด **ช่อง**
สถานีแต่ละช่องจะกลับไปความถี่เริ่มต้น 87.5Mhz

สมุดบันทึก

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 แตะที่ **สมุดบันทึก** ในแท็บยูทิลิตี้ และเลือก **ปฏิทิน**
- 2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
- 3 แตะที่  แล้วแตะ **เพิ่มเหตุการณ์**
- 4 แตะที่ **ประเภท** แล้วเลือกจาก **นัดหมาย**, **วันครบรอบ** หรือ **วันเกิด**
- 5 ใส่ **หัวข้อ**
- 6 ตรวจสอบและป้อนวันที่และเวลาที่อยากให้เหตุการณ์นั้นเริ่มต้น สำหรับ **การนัดหมาย** และ **วันครบรอบ** ให้ป้อนเวลาและวันที่ที่เหตุการณ์สิ้นสุดในช่องเวลาและวันที่ด้านล่างทั้งสองช่อง ป้อนสถานที่หากเป็น **การนัดหมาย**
- 7 ตั้งค่า **เตือน** และ **ซ้ำ**
- 8 เลือก **บันทึก** และเหตุการณ์ของคุณจะบันทึกอยู่ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมายกรอบสี่เหลี่ยมกำกับอยู่ และเสียงกริ่งจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์เพื่อให้คุณไม่พลาดกำหนดต่างๆ

การเพิ่มรายการลงในสิ่งที่ต้องทำ

- 1 แตะที่ **สมุดบันทึก** ในแท็บยูทิลิตี้
- 2 เลือก **สิ่งที่ต้องทำ** และแตะที่ **เพิ่มสิ่งที่ต้องทำ**
- 3 กำหนดวันที่ของงาน เพิ่มบันทึก และเลือกลำดับความสำคัญ: **สูง**, **กลาง** หรือ **ต่ำ**
- 4 บันทึกงานโดยเลือก **บันทึก**

การใช้ตัวค้นหาวันที่


ตัวค้นหาวันที่ เป็นเครื่องมืออำนวยความสะดวกที่ช่วยให้คุณสามารถคำนวณวันหลังจากที่ผ่านไปมาแล้วหลายวันได้ ตัวอย่างเช่น 60 วันจากวันที่ 10.10.07 คือวันที่ 09.12.2007

- 1 แตะที่ **สมุดบันทึก** ในแท็บยูทิลิตี้
- 2 เลือก **ตัวค้นหาวันที่**
- 3 กำหนดวันที่ที่ต้องการในแท็บ **จาก**
- 4 ตั้งค่าจำนวนวันในแท็บ **หลัง**
- 5 **วันที่เป้าหมาย** จะปรากฏขึ้นด้านล่าง

การเพิ่มบันทึก

- 1 แตะที่ **บันทึก** ในแท็บยูทิลิตี้
- 2 แตะที่ **เพิ่มบันทึก**
- 3 ป้อนบันทึกของคุณ แล้วแตะที่ **บันทึก**
- 4 บันทึกของคุณจะปรากฏขึ้นบนหน้าจอในแอปพลิเคชัน **บันทึก**

การตั้งเวลาการปลุก

- 1 แตะที่ **ตั้งปลุก** ในแท็บยูทิลิตี้
การปลุก Widget
จะปรากฏในรายการเป็นค่าเริ่มต้นและไม่สามารถลบออกได้
- 2 แตะที่ **เพิ่มการปลุก**
- 3 กำหนดเวลาที่ต้องการให้ส่งเสียงปลุกในกล่องฟิลด์ **เวลา**
- 4 เลือกวิธีที่คุณต้องการให้ปลุกซ้ำในกล่อง **ซ้ำ: ไม่ทำซ้ำ, ทุกวัน, จ. ~ ศ., จ. ~ ส., ส. ~ อา., ยกเว้นวันหยุด หรือ เลือกวัน** ไอคอนจะบ่งชี้วันที่คุณเลือก
- 5 เลือก **รูปแบบเสียงปลุก** เพื่อเลือกประเภทการเตือนที่ต้องการ
- 6 เลือก **เสียงกริ่งปลุก** และเลือกเสียงจากโฟลเดอร์ในการฟังเสียง
แตะที่เสียงแล้วตามด้วย 


7 เพิ่มบันทึกสำหรับการตั้งปลุกในกล่อง **บันทึก**

- 8 จากนั้นคุณสามารถกำหนดช่วงการเลื่อนปลุกเป็น 5, 10, 20 หรือ 30 นาที, 1 ชั่วโมง หรือปิด
- 9 เมื่อคุณตั้งปลุกเสร็จแล้ว ให้แตะที่ **บันทึก**

หมายเหตุ: คุณสามารถตั้งปลุกได้ถึง 5 รายการรวม **การปลุก Widget**

เคล็ดลับ! เลื่อน **เปิด/ปิด** เพื่อตั้งปลุก

การเพิ่มบันทึกด้วยการวาด

- 1 เลื่อนแล้วแตะที่ **การวาด** ในแท็บยูทิลิตี้
- 2 แตะที่ **เพิ่มภาพวาด**
- 3 วาดบันทึกลงบนหน้าจอสัมผัส LCD แล้วตามด้วย 
- 4 แตะที่ **ใช่** บันทึกของคุณจะปรากฏบนหน้าจอในแอปพลิเคชัน **การวาด**

สมุดบันทึก

บันทึกเสียง

ใช้เครื่องบันทึกเสียง เพื่อบันทึกเสียงเตือนความจำหรือไฟล์เสียงอื่นๆ

แตะที่ **บันทึกเสียง** ในแท็บยูทิลิตี้แล้วเลือก  และ **ตั้งค่า** เพื่อเปลี่ยนการตั้งค่า:





ระยะเวลา -

กำหนดระยะเวลาในการบันทึกเลือกกระหว่าง **ไม่จำกัด**, **ขนาด MMS** หรือ **1 นาที**


คุณภาพ - เลือกคุณภาพเสียงเลือกจาก **ละเอียดมาก**, **ละเอียด** หรือ **ปกติ**

ความจำที่ใช้ - เลือกตำแหน่งที่จะบันทึกไฟล์เสียง เลือกกระหว่างหน่วยความจำภายนอกและหน่วยความจำเครื่อง

การบันทึกเสียงหรือเสียงพูด

- 1 แตะที่  เพื่อเริ่มการบันทึก
- 2 แตะที่  เพื่อหยุดการบันทึก
- 3 แตะที่  เพื่อจบการบันทึก
- 4 แตะที่  เพื่อฟังรายการที่บันทึก



การใช้เครื่องคิดเลข

- 1 แตะที่ **เครื่องมือ** ในแท็บยูทิลิตี้
- 2 เลือก **เครื่องคิดเลข**
- 3 แตะที่ปุ่มกดโดยใช้ปุ่มกดเพื่อป้อนหมายเลข
- 4 สำหรับการคำนวณอย่างง่ายให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, ×, ÷) แล้วตามด้วย =
- 5 สำหรับการคำนวณแบบซับซ้อนให้แตะที่  แล้วเลือกกระหว่าง **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** หรือ **rad** และอื่นๆ

การแปลงหน่วย

- 1 แตะที่ **เครื่องมือ** ในแท็บยูทิลิตี้
- 2 เลือก **ตัวแปลงหน่วย**
- 3 เลือกว่าคุณต้องการแปลง **สกุลเงิน**, **พื้นที่ผิว**, **ความยาว**, **น้ำหนัก**, **อุณหภูมิ**, **ปริมาตร** หรือ **ความเร็ว**
- 4 จากนั้น คุณสามารถเลือกหน่วยและป้อนค่าที่คุณต้องการแปลง แล้วตามด้วยหน่วยที่คุณต้องการแปลงเป็น
- 5 ค่าผลลัพธ์ที่เกี่ยวข้องของกันจะปรากฏขึ้นบนหน้าจอ

การเพิ่มเมืองในเวลาทั่วโลก

- 1 แตะที่ **เครื่องมือ** ในแท็บยูทิลิตี้
- 2 เลือก **เวลาโลก**
- 3 แตะที่  ตามด้วย **เพิ่มเมือง**
- 4 เลื่อนลูกโลก แตะที่จุดที่คุณต้องการ และเลือกเมืองในแผนที่
- 5 หรือแตะที่  และพิมพ์ชื่อเมืองที่คุณต้องการในกล่องฟิลดค้นหา

การใช้นาฬิกาจับเวลา


- 1 แตะที่ **เครื่องมือ** ในแท็บยูทิลิตี้
- 2 เลือก **นาฬิกาจับเวลา**
- 3 แตะที่ **เริ่มต้น** ที่ด้านล่างของหน้าจอ เพื่อเริ่มตั้งเวลา
- 4 แตะที่ **รอบ** หากคุณต้องการ บันทึกกรอบเวลา
- 5 แตะที่ **หยุด** เพื่อหยุดตัวจับเวลา
- 6 แตะที่ **ต่อ** เพื่อเริ่มนาฬิกาจับเวลา ใหม่ต่อจากเวลาที่หยุดไว้ **รีเซ็ต** เพื่อเริ่มต้นเวลาใหม่อีกครั้ง

PC ซิงค์


คุณสามารถซิงค์โครนในซ์คอมพิวเตอร์กับโทรศัพท์ของคุณ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน และยังสามารถสำรองข้อมูลไฟล์ที่ช่วยให้คุณสบายใจได้

การติดตั้ง LG PC Suite

ลงในคอมพิวเตอร์

- 1 จากหน้าจอหลัก ให้กด  และเลือก **การเชื่อมต่อ** ในแท็บการตั้งค่า
- 2 เลือก **โหมดเชื่อมต่อ USB** และแตะที่ **PC Suite**
- 3 เชื่อมต่อตัวเครื่องและ PC โดยใช้สาย USB และรอสักครู่ ขอความคำแนะนำการติดตั้งจะปรากฏขึ้น
- 4 ปฏิบัติตามคำแนะนำบนหน้าจอ เพื่อให้ไวัซาร์ด LG PC Suite Installer เสร็จสมบูรณ์
- 5 เมื่อติดตั้งเสร็จเรียบร้อยแล้ว ไอคอน LG PC Suite จะปรากฏขึ้นบนเดสก์ทอป

การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

- 1 จากหน้าจอหลัก ให้กด  และเลือก **การเชื่อมต่อ** ในแท็บการตั้งค่า

- 2 เลือก **โหมดการเชื่อมต่อ USB**
- 3 แตะที่ **PC Suite**
- 4 เชื่อมต่อตัวเครื่องและ PC โดยใช้สาย USB และรอสักครู่ PC Suite จะทำงานโดยอัตโนมัติ

การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **สำรอง** แล้วเลือก **สำรองข้อมูล** หรือ **เรียกคืน**
- 3 ทำเครื่องหมายที่เนื้อหาที่คุณต้องการสำรองหรือเรียกคืน เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือเรียกคืนข้อมูล คลิกไอคอน **เริ่ม**
- 4 ข้อมูลของคุณจะได้รับการสำรองหรือเรียกคืน

การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 ให้คลิกไอคอน **Manage Files**
- 3 เอกสารทั้งหมด, แฟลชคอนเทนท์, ภาพ, เสียง และวิดีโอ ซึ่งคุณบันทึกไว้ในโทรศัพท์ของคุณจะปรากฏบนดานขวาของหน้าจอ

เคล็ดลับ! การดูเนื้อหาของโทรศัพท์บนคอมพิวเตอร์จะช่วยให้คุณสามารถจัดเรียงไฟล์ จัดการเอกสาร และลบเนื้อหาที่คุณไม่ต้องการใช้อีกต่อไปได้

การซิงโครไนซ์รายชื่อ

- 1 เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
- 2 คลิกที่ไอคอน **Manage Contacts**
- 3 เครื่องคอมพิวเตอร์ของคุณจะอิมพอร์ตและแสดงรายชื่อทั้งหมดที่บันทึกไว้ในซิมการ์ดและโทรศัพท์
- 4 คลิกที่ **File** แล้วเลือก **Save** ขณะนี้คุณสามารถเลือกเป้าหมายและตำแหน่งที่คุณต้องการบันทึกรายชื่อ

หมายเหตุ: ในการสำรองข้อมูลรายชื่อที่บันทึกไว้ในซิมการ์ด ให้คลิกที่โฟลเดอร์ซิมการ์ดทางด้านซ้ายมือของหน้าจอคอมพิวเตอร์

คลิกขวาที่รายชื่อของคุณ แล้วเลือก **Select All**

คลิกขวาที่ตำแหน่งเดียวกันและเลือก **Copy to Phone Memory** จากนั้นคลิกที่โฟลเดอร์ตัวเครื่องทางด้านซ้ายมือของหน้าจอและหมายเลขทั้งหมดจะปรากฏขึ้น


การซิงโครไนซ์ข้อความ

- 1 เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
- 2 คลิกที่ไอคอน **Messages**
- 3 ข้อความทั้งหมดในโทรศัพท์จะปรากฏขึ้นในโฟลเดอร์บนหน้าจอ
- 4 คลิกที่ชื่อคอลัมน์เพื่อจัดข้อความตาม **Sender, Contents** และ **Received date**

การใช้โทรศัพท์เป็น

อุปกรณ์ซิงค์เพลง

คุณสามารถใช้โทรศัพท์เป็นอุปกรณ์ซิงค์เพลงในการซิงค์ไฟล์เพลงเท่านั้น คุณสามารถซิงค์เพลงได้โดยใช้ Windows Media Player 10/11 และสนับสนุนทั้งหน่วยความจำเครื่องและหน่วยความจำภายนอก

- 1 เลิกการเชื่อมต่อเครื่องโทรศัพท์ของคุณออกจากเครื่องคอมพิวเตอร์
- 2 จากหน้าจอหลัก เลือก  แล้วเลือก **การเชื่อมต่อ** ในแท็บตั้งค่า
- 3 เลือก **โหมดการเชื่อมต่อ USB**
- 4 และที่ **ซิงค์เพลง**
- 5 เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ โทรศัพท์ของคุณจะแสดงข้อความ: **เชื่อมต่อ**

เว็บไซต์

การเข้าใช้เว็บไซต์

- 1 แดะที่ เบราวเซอร์ ในแท็บยูทิลิตี้
- 2 ในการไปยังหน้าจอหลักของเบราวเซอร์ ให้เลือก โสม หรือ เล็กไปยัง URL และพิมพ์ URL แล้วตามด้วย เชื่อมต่อ

หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ใช้บริการเครือข่ายของคุณ

การเพิ่มและการใช้บุ๊กมาร์ค

เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุ๊กมาร์คและบันทึกเว็บเพจได้


- 1 แดะที่ เบราวเซอร์ ในแท็บยูทิลิตี้
- 2 เลือก **บุ๊กมาร์ค** รายการบุ๊กมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ
- 3 เพื่อเพิ่มบุ๊กมาร์คใหม่ ให้แดะที่ **เพิ่มบุ๊กมาร์ค** ป้อนชื่อสำหรับบุ๊กมาร์คแล้วตามด้วยป้อน URL ในกล่องฟิลด์ที่ตรงกัน
- 4 แดะที่ **บันทึก** บัญชีของคุณจะปรากฏขึ้นในรายการบุ๊กมาร์ค

- 5 ในการเข้าใช้งานบุ๊กมาร์ค เพียงแดะที่ไอคอนเชื่อมต่อถัดจากบุ๊กมาร์ค หรือแดะที่ชื่อบุ๊กมาร์คแล้วแดะที่ **เชื่อมต่อ** เครื่องจะเชื่อมต่อไปกับบุ๊กมาร์คของคุณ

การใช้ RSS reader

RSS (Really Simple Syndication) เป็นกลุ่มรูปแบบ Web Feed ที่ใช้เพื่อเผยแพร่เนื้อหาที่ได้รับการอัปเดตเป็นประจำ เช่น รายการใน Blog, หัวข้อข่าว หรือ Podcast เอกสาร RSS ที่เรียกว่า Feed, Web Feed หรือ Channel จะมีสรุปเนื้อหาหรือข้อความเต็มจากเว็บไซต์ที่เกี่ยวข้อง RSS ช่วยให้ทุกคนสามารถติดตามความเคลื่อนไหวของเว็บไซต์ที่ตนชื่นชอบได้เสมอ ด้วยระบบอัตโนมัติที่สะดวกกว่าการเฝ้าดูด้วยตนเอง ผู้ใช้สมัครใช้บริการ Feed โดยป้อนลิงค์ของ Feed ลงใน Reader หรือคลิกที่ไอคอน RSS ในเบราวเซอร์ที่เปิดขั้นตอนการสมัครใช้บริการ Reader จะตรวจดู Feed ที่ผู้ใช้สมัครใช้บริการเป็นประจำเพื่อดูเนื้อหาใหม่ และดาวน์โหลดการอัปเดตต่างๆ ที่พบ

การบันทึกเพจ

- 1 เข้าถึงเว็บเพจที่ต้องการตามที่อธิบายไว้ข้างต้น
- 2 และที่  แล้วเลือก บันทึกเพจนี้
- 3 ป้อนชื่อสำหรับเว็บเพจเพื่อให้ง่ายต่อการจดจำ
- 4 และที่ บันทึก

การเข้าใช้เพจที่บันทึกไว้

และที่ เบราวเซอร์ ในแท็บยูทิลิตี้ และเลือก เพจที่บันทึก คุณสามารถดูเพจที่บันทึกได้ที่นี้

การดูประวัติข้อมูลเบราวเซอร์

และที่ เบราวเซอร์ ในแท็บยูทิลิตี้ และเลือก ประวัติ

การเปลี่ยนการตั้งค่าเว็บ

เบราวเซอร์

และที่ เบราวเซอร์ ในแท็บยูทิลิตี้ และเลือก ตั้งค่า

คุณสามารถเลือกแก้ไขการตั้งค่า โปรไฟล์, การตั้งค่าลักษณะ, แคช, คุกกี้ หรือ ระบบป้องกัน

การใช้โทรศัพท์เป็นโมเด็ม

GD510 ของคุณสามารถทำหน้าที่เป็นโมเด็มของเครื่องคอมพิวเตอร์ได้ จึงทำให้คุณสามารถส่งอีเมลและเข้าถึงอินเทอร์เน็ตได้ แม้ในเวลาที่คุณไม่ได้เชื่อมต่อโดยสาย โดยคุณสามารถใช้สาย USB หรือบลูทูธก็ได้

การใช้สายเคเบิล USB:

- 1 ตรวจสอบให้แน่ใจว่าคุณได้ติดตั้ง LG PC Suite บนเครื่องคอมพิวเตอร์ของคุณแล้ว
- 2 เชื่อมต่อ GD510 เข้ากับคอมพิวเตอร์ของคุณด้วยสาย USB ตามวิธีข้างต้น แล้วเริ่มซอฟต์แวร์ LG PC Suite
- 3 คลิก **InternetKit** บนเครื่องคอมพิวเตอร์ แล้วคลิกปุ่ม **New** และเลือก **Modem**
- 4 เลือก **LG Mobile USB Modem** และเลือก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
- 5 เขียนโปรไฟล์ที่สามารถเชื่อมต่อกับอินเทอร์เน็ต และบันทึกค่า
- 6 โปรไฟล์ที่คุณสร้างจะปรากฏขึ้นในหน้าจอคอมพิวเตอร์ เลือกและคลิก **Connect**
คอมพิวเตอร์จะเชื่อมต่อผ่าน GD510 ของคุณ

หมายเหตุ: สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการซิงโครไนซ์โดยใช้ LG PC Suite

เว็บไซต์

การใช้อินเทอร์เน็ต:

- 1 ตรวจสอบให้แน่ใจว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** ทั้งคอมพิวเตอร์และโทรศัพท์ GD510
- 2 จับคู่เครื่องคอมพิวเตอร์ของคุณและ GD510 เพื่อให้ต้องระบุรหัสผ่านสำหรับการเชื่อมต่อ
- 3 ใช้ **Connection wizard** ใน LG PC Suite เพื่อสร้างการเชื่อมต่อบลูทูธ
- 4 คลิก **Internet Kit** บนเครื่องคอมพิวเตอร์ แล้วคลิกปุ่ม **New**
- 5 เลือก **LG Mobile USB Modem** และเลือก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
- 6 เขียนโปรไฟล์ที่สามารถเชื่อมต่อกับอินเทอร์เน็ต และบันทึกค่า
- 7 โปรไฟล์ที่คุณสร้างจะปรากฏขึ้นในหน้าจอคอมพิวเตอร์ เลือกและคลิก **Connect**
คอมพิวเตอร์จะเชื่อมต่อผ่าน GD510 ของคุณ

ตั้งค่า

การปรับแต่งรูปแบบเสียง ของคุณ

คุณสามารถเปลี่ยนรูปแบบเสียงบนหน้าจอหลักของคุณได้อย่างรวดเร็ว
คุณสามารถกำหนดการตั้งค่าโปรไฟล์
แต่ละโปรไฟล์โดยใช้เมนูตั้งค่า

- 1 **แตะที่ โปรไฟล์** ในแท็บตั้งค่า
- 2 **เลือกรูปแบบเสียง** ที่คุณต้องการ
แก้ไข
- 3 **คุณจะสามารถเปลี่ยนตัวเลือกเสียง**
และการเตือนทั้งหมดที่มีอยู่ในรายการได้ รวมทั้งการตั้งค่า
เสียงเรียกเข้า และ ระดับเสียง,
เสียงข้อความ และอื่นๆ

การเปลี่ยนการตั้งค่าหน้าจอ และที่ ตั้งค่าจอ ในแท็บการตั้งค่า การตั้งค่าหน้าจอ

พื้นหลัง - เลือกธีมสำหรับหน้าจอ
หลักหรือล็อคหน้าจอ

Livesquare - แตะที่ปุ่ม

Livesquare guide

เพื่อตรวจสอบการทำงาน

ธีมเครื่อง - เลือกธีมสำหรับเมนู
คุณยังสามารถปรับขนาดและรูปแบบ
ตัวอักษรได้ด้วย

เมนูหลัก -

เลือกสไลด์ของเมนูบนสุด

เลือกกระหวาง **Zigzag**

หรือ **Scrolling**

หมายเหตุ: การเปิดไฟหน้าจอเป็น
เวลานานจะทำให้สิ้นเปลืองพลังงาน
แบตเตอรี่มากยิ่งขึ้น ซึ่งอาจส่งผลให้
จำเป็นต้องชาร์จโทรศัพท์บ่อย
ครั้งมากขึ้น

การโทร - ปรับสีตัวเลข

ความสว่าง -

ปรับความสว่างของหน้าจอ

ข้อความต้อนรับ - เลือก **เปิด** หรือ
ปิด และป้อนข้อความต้อนรับใน
ฟิลด์ข้อความตัวอักษร

เปิดเครื่อง/ปิดเครื่อง - เลือก
ธีมสำหรับหน้าจอการเปิดเครื่อง/
การปิดเครื่อง

การเปลี่ยนการตั้งค่าโทรศัพท์

เพลิดเพลินกับอิสระในการปรับ
การทำงานของโทรศัพท์ GD510
ในแบบที่คุณต้องการได้

และที่ **ตั้งค่าโทรศัพท์** ในแท็บ
การตั้งค่า แล้วเลือกจากรายการด้านล่าง
ตั้งค่าโทรศัพท์

วันที่ & เวลา - ปรับการตั้งค่าวันที่
และเวลาของคุณ หรือเลือกอัปเดต
เวลาอัตโนมัติหรือใช้ตัวเลือกการปรับ
เวลาตามฤดูกาล

ประหยัดพลังงาน - เลือกการตั้งค่า
ประหยัดพลังงานที่ตั้งมาจากโรงงาน
เป็นเปิด/ปิด หรือเฉพาะกลางคืน

ตั้งค่า

ภาษา - เปลี่ยนภาษาบนจอแสดงผล
โทรศัพท์ GD510 ของคุณ

ปิดเสียงเคลื่อนไหว -
ตั้งค่าโทรศัพท์ GD510 ของคุณให้
ปิดเสียงหรือเลื่อนโดยคว้าเครื่องลง
เมื่อได้มีเสียงเรียกเขา

ล็อคปุ่มอัดโนมิตี - ล็อคปุ่มกด
อัดโนมิตีในหน้าจอหลัก

ระบบป้องกัน - ปรับการตั้ง
การระบบป้องกัน ได้แก่ รหัส PIN
และล็อคเครื่อง

ข้อมูลความจำ - ดู
การใช้ตัวจัดการหน่วยความจำ
สำหรับข้อมูลเพิ่มเติม

รีเซ็ตการตั้งค่า - เรียกคืนการตั้ง
ค่าทั้งหมดให้กลับเป็นค่าที่ตั้งจาก
โรงงาน

ข้อมูล - เลือก **วิธีใช้** เพื่อดูข้อมูล
ทางด้านเทคนิคของโทรศัพท์
GD510 และคุณสามารถอัปเดต
ซอฟต์แวร์ด้วย **ข้อมูลเครื่อง**

การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่า
มาจากผู้ให้บริการระบบแล้ว ดังนั้น คุณ
จึงสนุกกับโทรศัพท์ใหม่ของคุณได้ทันที
ในการเปลี่ยนการตั้งค่าใดๆ ให้ใช้เมนูนี้:
แตะที่ **การเชื่อมต่อ** ในแท็บตั้งค่า

การตั้งค่าเครือข่าย

เลือกเครือข่าย - หากคุณเลือก
อัตโนมัติ โทรศัพท์ GD510 จะค้น
หาเครือข่ายและลงทะเบียนเครื่องใน
เครือข่ายโดยอัตโนมัติ ขอแนะนำให้
ใช้เพื่อบริการและคุณภาพที่ดีที่สุด
ถ้าคุณเลือก **กำหนดเอง** เครือข่าย
ทั้งหมดที่มีอยู่ในขณะนั้นจะปรากฏขึ้น
และคุณสามารถเลือกลงทะเบียนใน
เครือข่ายใดเครือข่ายหนึ่งได้

รายการที่ต้องการ - คุณสามารถ
เพิ่มเครือข่ายที่ต้องการเชื่อมต่อได้
ถ้าเครือข่ายกำลังค้นหาโดยอัตโนมัติ
ให้เลือกหนึ่งเครือข่ายจากรายชื่อ
เครือข่าย หากไม่มี ให้เพิ่มเครือข่าย
ใหม่ที่กำหนดเอง

โปรไฟล์อินเทอร์เน็ต - เมนูนี้แสดง
โปรไฟล์อินเทอร์เน็ต คุณไม่สามารถลบ
หรือแก้ไขการกำหนดค่าเริ่มต้นที่ขึ้นอยู่กับ
แต่ละประเทศ

จุดเชื่อมต่อ - ผู้ให้บริการระบบได้บันทึก
ข้อมูลนี้แล้ว คุณสามารถเพิ่มจุดเชื่อมต่อ
ใหม่โดยใช้เมนูนี้ได้

การเชื่อมต่อข้อมูลแพ็คเกจ - เลือก
กวางจะให้โทรศัพท์ของคุณเชื่อมต่อกับ
เครือข่ายข้อมูลแพ็คเกจเมื่อใด

โหมดการเชื่อมต่อ USB - เลือก
เชื่อมต่อ PC Sync จากตัวเลือก
และซิงโครไนซ์โทรศัพท์ GD510
โดยใช้ซอฟต์แวร์ LG PC Suite เพื่อ

คัดลอกไฟล์จากโทรศัพท์
ดูที่ **PC ชิงค์** สำหรับข้อมูลเพิ่มเติม
เกี่ยวกับการซิงโครไนซ์ ถ้าคุณใช้
ซิงค์เพลง กับ Windows Media
Player ให้เลือก **ซิงค์เพลง** ในเมนูนี้
ซิงค์เพลง ใช้ได้เฉพาะกับ
ข้อมูลเพลงเท่านั้น

การใช้ตัวจัดการหน่วย

ความจำ

โทรศัพท์ GD510 มีหน่วยความจำให้
เลือกสามแบบ: โทรศัพท์, ซิมการ์ด
และหน่วยความจำภายนอก

คุณสามารถใช้ตัวจัดการหน่วยความจำ
เพื่อดูว่าในแต่ละหน่วยความจำใช้หน่วย
ความจำไปเท่าใด และดูว่ามีพื้นที่ว่าง
เหลือเท่าใด

และที่ **ตั้งค่าโทรศัพท์** ในแท็บตั้งค่า
จากนั้น **ข้อมูลความจำ**

ความจำเครื่อง - ดูหน่วยความจำที่มีใน
โทรศัพท์ GD510 สำหรับรูปภาพ, เสียง,
วิดีโอ, MMS, อีเมล, แอปพลิเคชัน Java
และอื่นๆ

ความจำสำรอง - ดูหน่วยความจำ
ที่มีในเครื่องสำหรับ SMS, รายชื่อ,
ปฏิทิน, สิ่งที่ต้องทำ, บันทึก,
เตือน, ข้อมูลการโทร, บุคมาลด
และรายการเบ็ดเตล็ดอื่นๆ

ความจำซิม - ดูหน่วยความจำที่มีใน
ซิมการ์ด

ความจำการ์ด - ดูหน่วยความจำที่มีใน
การดูหน่วยความจำภายนอก (คุณต้อง
ซื้อการ์ดหน่วยความจำแยกต่างหาก)

ตั้งค่าที่เก็บหลัก - เลือกตำแหน่งที่คุณ
ต้องการบันทึกรายการระหว่างความจำ
เครื่อง และหน่วยความจำภายนอก

การส่งและการรับไฟล์โดย ใช้บลูทูธ

ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง
โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ
หรือเพลง
- 2 เลือก **ส่ง**
เลือก **บลูทูธ**
- 3 หากคุณจับคู่อุปกรณ์ **บลูทูธ**
แล้ว โทรศัพท์ GD510
จะไม่ค้นหาอุปกรณ์ **บลูทูธ**
อื่นโดยอัตโนมัติ หากคุณยังไม่จับ
คู่อุปกรณ์บลูทูธ โทรศัพท์ GD510
จะค้นหาอุปกรณ์อื่นๆ ที่ใช้ **บลูทูธ**
ภายในรัศมี
- 4 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป
- 5 ไฟล์ของคุณจะถูกส่งออกไป

เคล็ดลับ! ตรวจสอบแถบแสดง
ความคืบหน้าเพื่อให้แน่ใจว่าไฟล์
ของคุณถูกส่งแล้ว

ตั้งค่า

ในการรับไฟล์:

1 ในการรับไฟล์

คุณต้องตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** โปรดดูข้อมูลเพิ่มเติมที่ **การเปลี่ยนการตั้งค่าบลูทูธ** ด้านล่าง


2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และที่ **ใช่** เพื่อรับไฟล์

3 คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว สำหรับไฟล์ภาพ

คุณสามารถเลือก ดู ไฟล์หรือ **ใช่** เป็นพื้นหลัง โดยทั่วไป ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมใน **แฟ้มข้อมูล**

การเปลี่ยนการตั้งค่าบลูทูธ:

แตะที่ **บลูทูธ** ในแท็บตั้งค่า และเลือก

 และเลือก **ตั้งค่า**

ทำการเปลี่ยนแปลง:

การมองเห็นเครื่อง - เลือกเป็น **มองเห็นได้**, **ซ่อน** หรือ **แสดง**

1 นาที

ชื่อเครื่องของฉัน -

ป้อนชื่อสำหรับโทรศัพท์ GD510 ของคุณ

บริการที่รองรับ - เลือกวิธีใช้บลูทูธร่วมกับบริการอื่นๆ

โหมดซิมรีโมท - เพื่อเปิดหรือปิด

แอคเดรสส่วนตัว -
แสดงแอคเดรสบลูทูธ

การจับคู่กับอุปกรณ์บลูทูธอื่น

ในการจับคู่โทรศัพท์ GD510

กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้

1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู **ตั้งค่า**

2 แตะที่ **ค้นหา**

3 โทรศัพท์ GD510 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ

4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วยและป้อนรหัสผ่าน จากนั้นให้แตะที่ **ตกลง**

5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่น ซึ่งคุณจำเป็นต้องป้อนรหัสผ่านเดียวกัน

6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

การใช้ชุดหูฟังบลูทูธ

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น เปิด และ มองเห็นได้
- 2 ปฏิบัติตามคำแนะนำที่แนบมาพร้อม กับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ ในโหมดการจับคู่ และจับคู่กับ โทรศัพท์ของคุณ
- 3 แตะที่ **ถามก่อนทำการเชื่อมต่อ** หรือ **ให้เชื่อมต่อเสมอ** และแตะที่ **ใช่** เพื่อเชื่อมต่อทันที โทรศัพท์ GD510 จะเปลี่ยนเป็นรูปแบบชุดหูฟัง โดยอัตโนมัติ

การอัปเดตซอฟต์แวร์

โปรแกรมอัปเดตซอฟต์แวร์ โทรศัพท์มือถือ LG

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการติดตั้ง และการใช้โปรแกรมนี้ โปรดไปที่ <http://update.lgmobile.com> คุณ สมบัตินี้จะช่วยให้คุณอัปเดตซอฟต์แวร์ ของคุณเป็นเวอร์ชันล่าสุดอย่างรวดเร็ว และสะดวกผ่านอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการของเรา เนื่องจาก โปรแกรมอัปเดตซอฟต์แวร์โทรศัพท์มือถือ ต้องการให้ผู้ใช้ดำเนินการอัปเดต อย่างระมัดระวัง โปรดตรวจสอบคำแนะนำ และหมายเหตุที่ปรากฏขึ้นในแต่ละ ขั้นตอนก่อนดำเนินการต่อไป โปรด ทราบว่าการถอดสายการสื่อสารข้อมูล USB หรือแบตเตอรี่ระหว่างการอัปเดต

อาจทำให้โทรศัพท์ชำรุดเสียหายได้ เนื่องจากผู้ผลิตจะไม่รับผิดชอบต่อการ สูญเสียข้อมูลระหว่างกระบวนการ อัปเดต คุณควรบันทึกข้อมูลสำคัญ เก็บไว้ก่อน

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ GD510

อุปกรณ์ชาร์จ



สายเคเบิลข้อมูล



แบตเตอรี่



ชุดหูฟังสเตอริโอ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์ : GD510

ระบบ : GSM 850 / E-GSM 900 /
DCS 1800 / PCS 1900

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ)

+45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

**ศูนย์บริการ LG โดย บริษัท แอลจี
อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด
ศูนย์ซ่อมสำนักงานใหญ่ตากสิน**

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน
แขวงบวรบุรี เขตธนบุรี กรุงเทพฯ 10600
วันและเวลาทำการ : จันทร์-อาทิตย์,
07:00 - 19:00น.
Call center : 0-2878-5757

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD510

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360:2001/EN62209-1:2006
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31-36-547-8940, Fax : +31-36-547-8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

02. Sep. 2009


Signature of representative

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น GD510 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคนโดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุในหน่วยวัตต์ที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ไปตามมาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แม้ว่าจะระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection

(ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม

- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 1.29 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.08 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับขอจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่น ๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคที่มีความรู้เมื่อจำเป็นตองมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์มือถือ วิทยุ และเครื่องคอมพิวเตอร์

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อนหรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบ่งชี้พิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาลเนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่มีฝุ่นหรือควันมากเกินไป

- อย่าวางโทรศัพท์ใกล้แบตเตอรี่กรดหรือแบตเตอรี่โดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟังด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

การใช้งานอย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาต เสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์น วิทยู เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไรสาย ซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่นอก โปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นเวลานาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตก ได้หากโทรศัพท์ ตกลงบนพื้นแข็ง หรือถูกกระแทกหากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าจะส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามขอห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามชนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

- อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้
- ให้ปิดโทรศัพท์ก่อนขึ้นเครื่องบิน
 - อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียว ในกรณีโทรฉุกเฉิน โปรดตรวจสอบกับคู่มือบริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรงหรืออยู่ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง

- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิต ในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับ การกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



GD510 User Guide

Congratulations on your purchase of the advanced and compact GD510 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Getting to know your phone	6	Contacts.....	22
Open view	7	Searching for a contact.....	22
Installing the SIM and battery	8	Adding a new contact.....	22
Charging your phone.....	9	Creating a group	22
Memory card.....	10	Changing your contact settings.....	23
Menu map.....	11	Viewing information.....	23
Using your touch screen.....	12	Messaging.....	24
Touch screen tips	12	Sending a message	24
Control the touch screen	12	Entering text.....	24
Your home screen	13	T9 mode	24
The quick keys.....	14	Handwriting recognition	25
The status bar	15	Setting up your email.....	25
Calls	17	Retrieving your emails	25
Making a call.....	17	Sending an email using your new	
Making a call from your contacts... 17		account.....	25
Answering and rejecting a call..... 17		Changing your email settings	25
In-call options	18	Message folders.....	26
Speed dialling	19	Changing your text message	
Making a second call	19	settings.....	26
Viewing your call logs	19	Changing your multimedia message	
Using call divert.....	20	settings.....	27
Using call barring.....	20	Changing your other settings	27
Changing the common call		Camera	28
setting.....	21	Getting to know the viewfinder	28
		Taking a quick photo	29

Contents

After taking a photo.....	29	Sending a video clip	38
Using the advanced settings.....	30	Games & Apps	39
Video camera	31	Playing a game	39
Getting to know the viewfinder	31	Documents	39
Making a quick video	32	Transferring a file to your phone....	39
After making a video	32	Others	39
Using the advanced settings.....	33	Muvee studio	39
Your photos and videos	34	Creating a movie.....	39
Viewing your photos and videos ...	34	Music	40
Capturing an image from a video..	34	Transferring music onto your	
Viewing your photos as a slide		phone.....	40
show	34	Playing a song.....	40
Setting a photo as wallpaper.....	35	Creating a playlist	41
Editing your photos	35	FM Radio	41
Adding an effect to a photo.....	36	Searching for stations	41
Multimedia.....	37	Resetting channels.....	41
Pictures	37	Organiser	42
Sending a photo.....	37	Adding an event to your calendar.	42
Using an image.....	37	Adding an item to your to do list...	42
Printing an image	38	Using date finder	42
Moving or copying an image	38	Adding a memo.....	43
Sounds.....	38	Setting your alarm.....	43
Using a sound	38	Adding a memo with the drawing	
Videos	38	panel	43
Watching a video	38	Voice recorder	44
		Recording a sound or voice	44

Using your calculator	44	Using your phone as a modem.....	49
Converting a unit	44	Settings	51
Adding a city to your World clock..	45	Personalising your profiles	51
Using the stopwatch	45	Changing your screen settings	51
PC Sync.....	46	Changing your phone settings.....	51
Installing LG PC Suite on your		Changing your connectivity	
computer	46	settings.....	52
Connecting your phone and PC.....	46	Using memory manager	53
Backing up and restoring the		Sending and receiving your files	
information on your phone	46	using Bluetooth.....	53
Viewing phone files on your PC.....	46	Changing your Bluetooth	
Synchronising your contacts	47	settings:.....	54
Synchronising your messages	47	Pairing with another Bluetooth	
Using your phone as a Music Sync		device.....	54
device	47	Using a Bluetooth headset.....	55
The web	48	Software Upgrade	55
Accessing the web	48	Accessories	56
Adding and accessing your		Technical data.....	57
bookmarks	48	Guidelines for safe and efficient use.	59
Using RSS reader	48		
Saving a page	49		
Accessing a saved page	49		
Viewing your browser history	49		
Changing the web browser			
settings.....	49		

Getting to know your phone




Smart key

- Accepts and ends a call.
- Goes to home screen directly.



Power/Lock key

- Long press for power on/off.
- Short press to turn on/off the screen.



Side keys

- **When the screen is at the Home screen:** Ring tone and key tone volume.
- **During a call:** Earpiece volume.

Charger, cable and handsfree connector




Camera/Multi-tasking key

- Long press to use the camera.
- Short press to use multi-tasking.

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Open view

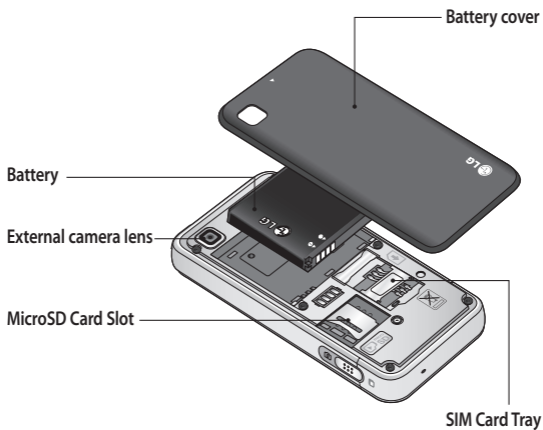

Installing the SIM and battery

1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.




⚠ WARNING: Do not use your fingernail to remove the battery.

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

2 Install the SIM card


Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it gently outwards.

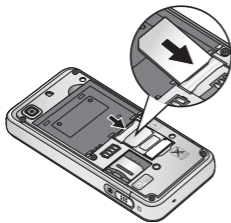

3 Install the battery

Insert the left side of the battery into the top edge of the battery compartment first.

Ensure that the battery contacts align with the phone's terminals. Press the right side of the battery until down it clicks into place.

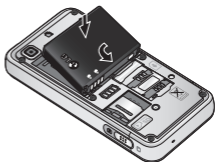

Charging your phone

Remove the charger socket cover on the side of your GD510. Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable into the phone and plug it into a power socket. Your GD510 must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight.





Memory card

Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

NOTE: A memory card is an optional accessory.

- 1 Remove the battery cover.
- 2 Push the microSD card slot to release lock.
- 3 Flip up the slot.

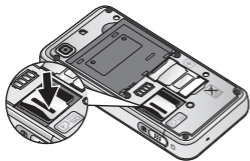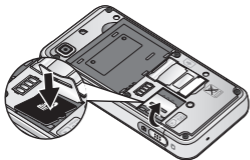


- 4 Put the microSD card on the card tray. Make sure the gold colour contact area is facing downwards.

- 5 Flip down then push the slot to lock.
- 6 Replace the cover.


Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.

- 1 From the Home screen select , then **Phone settings** in **SETTINGS** tab.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.









NOTE: If there is existing content on your memory card, the folder structure may be different after formatting since all files will have been deleted.

Menu map









Touch  in the Home screen to open a **Top menu**. From here you can access further menus by scrolling through the icons:

COMMUNICATION, ENTERTAINMENT, UTILITIES and SETTINGS.









COMMUNICATION

-  Contacts
-  Recent history
-  Messaging
-  E-mail
-  Dialling
-  Contact search
-  Speed dials
-  New message









ENTERTAINMENT

-  Camera
-  Gallery
-  My stuff
-  Music
-  Games & Apps
-  FM radio
-  Video camera
-  Muvvee studio

UTILITIES

-  Browser
-  Google search
-  Alarms
-  Organiser
-  Memo
-  Voice recorder
-  Tools
-  Drawing panel

SETTINGS

-  Profiles
-  Screen settings
-  Phone settings
-  Call settings
-  Bluetooth
-  Touch settings
-  Connectivity
-  Message settings

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GD510 is not in use, it will return to the lock screen.

Control the touch screen

The controls on the GD510 touch screen change dynamically depending on the task you are carrying out.



Opening Applications

To open any application, simply touch its icon.

Scrolling

Drag from side to side to scroll.

On some screens, such as the call history list, you can also scroll up or down.

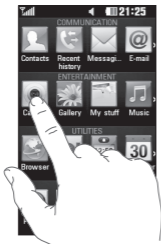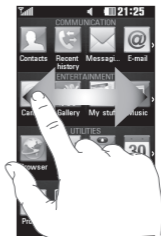


Your home screen

You can drag and click what you need right away in all home screen types.



Widget home screen - When you touch  on the bottom right of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot where it was dropped.

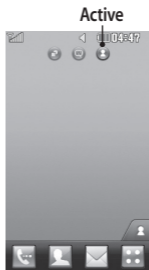

Speed dial home screen - When you touch , the speed dial list appears. You can call, send a message or edit the contact directly in this home screen.



Livesquare home screen - On the Livesquare screen, You can easily make a call and send a message to the number allocated to an avatar. To use the call, messaging or contacts function, select an avatar and choose the **Quick key** icon you want to use.

TIP! The User Interface is based on three types of Homescreen. To swap between the home screens just wipe quickly over the display from left to right, or from right to left.

Your home screen

The quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** menu. From here you can create a new SMS or MMS, or view your message folder.



























Touch to open the full **Top menu** which is divided into four categories.

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed


Icon	Description
	An alarm is set
	Customised Profile in use (The number in the icon will vary)
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enabled for use


Your home screen

Changing your Status from the status bar

Touch the centre of the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3s and Bluetooth status. Here you can set the Profile type, play/pause MP3s and activate/deactivate Bluetooth.



Using the Multi-tasking function


Press the multi-tasking hard key  to open the Multitasking menu. From here you can view all the applications that are running and access them with one touch.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

Calls



Making a call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.
- 4 To end the call, press the Smart key.

TIP! To enter + for making an international call, press and hold  .


TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.


Answering and rejecting a call

When your phone rings, touch the Smart key to answer the call.


To mute the ringing, slide up the cover. This will unlock the phone if it is locked, then tap  . This is useful if you forgot to change your profile to Silent for a meeting.


Calls

In-call options

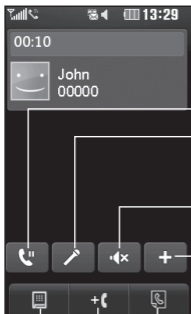



Hold - Touch  to put a call on hold.


Mute - Touch  to turn off the microphone so the person you are talking to cannot hear you.

Speaker - Touch  to turn the speaker phone on.

Options - Touch  to bring up a list of further in-call options.

Touch  to search your contacts during a call.

Touch  to add another person to the call.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.





TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Contacts** in the **COMMUNICATION** tab and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your **Contacts** will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the Name field box and enter the first letter of the name of the contact required.

Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Touch  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

TIP! Touch any single call log entry to view the date, time and duration of the call.

NOTE: You will be charged for each call you make.

Viewing your call logs

Touch **Recent history** in the **COMMUNICATION** tab.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Calls

Using call divert

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all voice calls, when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Enter the number you want to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call barring**.
- 3 Choose any or all of the six options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
 - Deactivate all**
- 4 Enter the call barring password. Please check with your network operator about this service.

TIP! Select **Fixed dial numbers** from the **Call settings** options to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Changing the common call setting

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Scroll and touch **Common settings**. From here you can adjust the settings for:

Call reject - Slide the switch to **ON** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Answer mode - Choose whether to answer the phone using the send key or any key.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select

Handset to press a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

Contacts

Searching for a contact

There are two ways to search for a contact:

- 1 Touch **Contacts** in the **COMMUNICATION** tab.
- 2 Touch **Search**.
- 3 You see a list of contacts. Typing in the first letter of a contact's name in the **Name** field will jump the menu to that alphabetical area of the list.


TIP! The alphabetical keypad is displayed once you tap the **Name** field.

Adding a new contact

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager** and **Fax**.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Memo** and **Livecon**.
- 8 Touch **Save** to save the contact.

Creating a group

- 1 Touch **Contacts** in the **COMMUNICATION** tab. And touch **Groups**.
- 2 Touch **Add group** or touch  and select **Add group**.
- 3 Enter a name for your new group. You can also assign a ringtone to the group.
- 4 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your **Contacts**.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Settings**.
- 2 From here, you can adjust the following settings:
 - Contact list settings** – Adjust the **Contacts location**, **Name display** and **Quick command key** settings.
 - Copy** - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time, or all at once.
 - Move** - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to.
 - Send all contacts via Bluetooth** - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.
 - Backup contacts** - See **Backing up and restoring the information on your phone**.

Restore contacts - See **Backing up and restoring the information on your phone**.

Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to wipe your contacts.

Viewing information

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Information**.
- 2 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (showing your memory usage) and **My business card**.

TIP! To add your own business card, select **My business card** and enter your details as you would for any contact. Touch **Save** to finish.


Messaging

Messaging

Your GD510 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messaging** in the COMMUNICATION tab. And touch **New message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.


Entering text


There are five ways to enter text:

Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.


Handwriting recognition

In Handwriting mode you simply write on the screen and your GD510 will convert your handwriting into your message. Select **Handwriting-Screen** or **Handwriting-Box** according to your preferred view.

Setting up your email

Touch **E-mail** in the COMMUNICATION tab.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

Retrieving your emails


You can automatically or manually check your account for new emails. To check manually:

- 1 Touch **E-mail** in the COMMUNICATION tab.
- 2 Touch the account you want to use .

Sending an email using your new account

- 1 Touch **New e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send** and your email will be sent.

Changing your email settings

- 1 Touch **E-mail** in the COMMUNICATION tab.
- 2 Touch  and select **E-mail settings** and then you can adapt the following settings:

E-mail accounts

Preferred e-mail

Allow reply e-mail - Choose to allow the sending of read confirmation messages.

Request reply e-mail - Choose whether to request read confirmation messages.

Retrieve interval - Choose how often your GD510 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Messaging

Include message in Fwd. & Reply

- Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in roaming - Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification - Choose whether to be alerted to new emails.

Signature - Switch this feature **ON** and create an email signature.

Priority - Choose the priority level of your email messages.

Mail sending size - Set the maximum size of sending mail.

E-mail counter - Input the date you want. You can check emails you sent during that period.

Message folders

There are five folders in Messaging menu.

Inbox - All the messages you receive are placed into your inbox.

Drafts - If you do not finish writing a

message, you can save what you have done in this folder.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you have sent are placed in this folder.

My folders - Create folders to store your messages.

Changing your text message settings

Touch **Messaging** in the **COMMUNICATION** tab and touch **Settings**. Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an MMS.

Changing your multimedia message settings

Touch **Messaging** in the **COMMUNICATION** tab. Scroll and choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**.

If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read reply - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.


Creation mode - Choose your message mode.

Delivery time - Choose how long to wait before a message is delivered.

Multi msg centre - Choose one from the list or add a new message centre.

Changing your other settings

Touch **Messaging** in the **COMMUNICATION** tab. And touch **Settings**.

Voicemail - Touch  to add a new Voicemail service. Contact your network operator for more information about the service they provide.


Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

Message counter - Choose to set period for counting messages.

Info. service - Choose whether to turn Cell broadcast on/off and select your channels and languages.




Camera

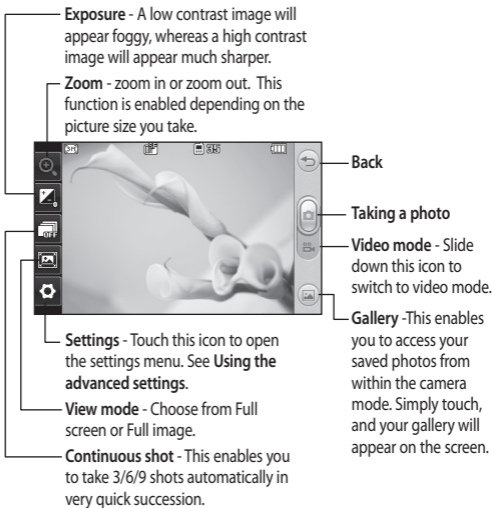Getting to know the viewfinder



TIP! You can bring up the options by tapping the screen. They automatically turn off after a few seconds.






Taking a quick photo

- 1 Press the  key on the right side of the phone.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo. You can also press the  key on the side of the phone firmly.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo


Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen.

-  Touch to send the photo as a message, email or via Bluetooth.
-  Touch to set a Home screen image.
-  Touch to edit the photo.
-  Touch to delete the photo you have just taken and confirm by touching **Yes**. The “Deleted” message appears.
-  Touch to move to your gallery.



Camera

Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Size - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the six numerical options: **3M (2048x1536)**, **2M (1600x1200)**, **1M (1280x960)**, **VGA (640x480)**, **Home screen (WQVGA)**, **QVGA (320x240)**.

Colour Effect - Choose a colour tone to apply to the photo you're taking. There are four colour tone options: **Off**, **Black & White**, **Negative** or **Sepia**.

White balance - Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

Night mode - Useful to use in dark places.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for the group photo you want to be part of.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

Memory - Choose whether to save your photos to the Handset memory or to the External memory.

Show captured image - Choose to view the picture with options after taking a photo.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.


Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from **Off**, **Simple cross** or **Trisection**.

Reset settings - Reset all the camera settings.

Video camera

Getting to know the viewfinder

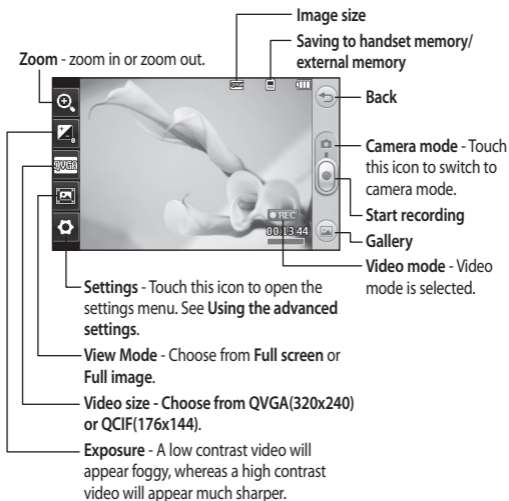







TIP! You can close all shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options, touch the screen again.

Video camera

Making a quick video



- 1 Press the camera key on the right side of the phone for a few seconds.


TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.


- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the camera key  on the phone once to start recording. Or touch the red dot .
- 4 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the  a second time to stop recording.


After making a video


A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with seven icons down the left and right sides .

-  Touch to play the video.
-  Touch to send the video as a **Message or Email** or by **Bluetooth** or **YouTube**.

-  Touch to edit the video.

-  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

Touch  to shoot another video straight away.

-  Touch to view a gallery of saved videos and images.



Using the advanced settings

From the viewfinder, touch **Settings** to open all the advanced settings options.

Colour Effect - Choose a colour tone to use on your new video. **Off, Black & White, Negative, Sepia.**

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy.**

Quality - Choose between **Super fine, Fine** and **Normal.** The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a time limit for your video. Choose whether or not to send the video as an MMS.

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

Memory - Choose whether to save your videos to the Handset memory or to the External memory.




Voice - Choose whether or not to record a video with sound.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.

Reset settings - Reset all the video camera settings.





Your photos and videos

Viewing your photos and videos


- 1 Touch **Gallery** in the ENTERTAINMENT tab. Or Touch  on your camera preview screen. You can check your pictures and videos.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.
- 4 To play the video touch . To pause playback touch .

TIP! Flick left or right to view other photos or videos.

Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch the upper left side of the screen to open the  menu.
- 3 From the options menu select .
- 4 The image will appear on the screen, with its image name.
- 5 Touch  to return to the video.


- 6 The image will be saved in your **My stuff** folder and appear in the gallery.





 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show



Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.

- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.





There are options within slideshows: Touch  to go back.


-  Touch to pause the slideshow on a particular photo.
-  Touch again to resume playback.
-  Touch to show random.
-  Touch to increase or decrease the speed of the slideshow.


Setting a photo as wallpaper

- 1 Touch **Gallery** in the ENTERTAINMENT tab.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch the screen to open the menu.
- 4 Touch .
- 5 You can change the size of the picture with .
- 6 When you are happy with the picture touch **Set**.
- 7 Choose from the options what you want to change: **All**, **Widget**, **Speed dial**.


Editing your photos


- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to alter your photo:
 -  Move your finger across the screen to select the area.
 -  Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.
 -  Add writing to the picture.


 Decorate your photo with stamps. Choose from the different stamps and colours and touch your photo where you want to place them.


 Erase whatever you draw. You can also select the eraser size.


 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.

 Undo the last effect or edit you made to the photo.

 Touch to open the Filter options.

 You can adjust the selected photo.

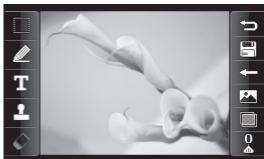

Your photos and videos

Adding an effect to a photo

- 1 From the editing screen, touch



- 2 Choose to apply any of the options to the photo:

Face beautify - Automatically detect a face in the image and brighten it up.


Tunnel effect - Lomo camera effect.

Colour negative - Colour negative effect.

Black and white - Black and white colour effect.

Sepia - Give a Sepia effect.

Blur - Give a blurred effect.

Sharpen - Move the marker along the bar to sharpen the focus of the photo. Select **OK** icon to apply the changes or choose  to cancel.

Mosaic blur - Touch to apply a blurred mosaic effect to the photo.

Oil painting - Give an Oil painting effect.

Sketch - Apply an effect that makes the picture look like a sketch.

Emboss - Give an Emboss effect.

Solarize - Change the effect of exposure to the light.

Vivid - Give an effect of clearness and brilliance.

Moonlight - Change the light to look like moonlight.

Antique - Give an old-looking effect.

Glow - Give a light beam effect.

Cartoon - Give a cartoon effect.

Water color - Give a watercolour effect.

- 3 To undo an effect simply touch

Undo  .

Multimedia

You can store any multimedia files on your phone's memory so that you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free space in your phone's memory. You can find these files in the menu **My stuff** in the ENTERTAINMENT tab.

NOTE: The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

Pictures

Images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Sending a photo


1 Touch **My stuff** in the

ENTERTAINMENT tab and select **Images**. Select the picture you want.

2 Touch **Send** and choose from **Multimedia message, Email, Bluetooth** and **Blogger**.

Using an image

You can choose images to use as wallpapers and the lock screen or even to identify a caller.

1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .

2 Touch **Use as** and choose from:

Homescreen image - Set a wallpaper for the home screen.

Lock screen image - Set a wallpaper for the lock screen.


Contacts image - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.

Start up image - Set an image to appear when you switch the phone on.

Shut down image - Set an image to appear when you switch the phone off.

Multimedia


Printing an image

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

TIP! You can print via bluetooth or by connecting to a PictBridge compatible printer.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free some space in one of the memory banks or to safeguard your images from being lost.


- 1 Touch **My stuff** in the ENTERTAINMENT tab, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

Sounds

The **Sounds** contains a list of sounds including the downloaded sounds,

default sounds and voice recordings. From here you can manage or send sounds or set them as a ringtone.

Using a sound

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Sounds**.
- 2 Select a sound you want and a confirmation message appears.
- 3 Touch **Yes**. It will begin to play.
- 4 Touch  and select **Use as**.
- 5 Choose from **Ringtone**, **Message tone**, **Start-up** and **Shut down**.


Videos

The **Videos** shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Videos**.
- 2 Select a video to play.

Sending a video clip

- 1 Select a video.
- 2 Touch  then **Send** and choose from **Message**, **Email**, **Bluetooth** and **YouTube**.

Games & Apps

You can install new games and applications on your phone to keep you amused when you have spare time.

You can also access this using the menu **Games & Apps** in the ENTERTAINMENT tab.

Playing a game

- 1 Touch **Games & Apps** in the ENTERTAINMENT tab.
- 2 Select **Games**, then choose a game to launch.

Documents

From the **Documents** menu in **My stuff**, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **My folder** as a default, the second tab in **My stuff**. You may overlook the file if the folder is full.

Others

The **Others** contains a list of the files which are not pictures, sounds, videos, documents, games or applications.




Muvee studio

You can create a music video.

Creating a movie

- 1 Scroll and touch **Muvee studio** in the ENTERTAINMENT tab.
- 2 Touch **+** to add an image. Tap the checkbox for the images you want to include, then select **Insert**.
- 3 Touch the style tab to choose a Muvee style. The default style is **Classic Sepia**.

Multimedia

- 4 Touch **Default sound** to change the sound.
- 5 Touch  to see what you've created.
- 6 Touch  then **Play order** to create an order. You can make it random or sequential.
- 7 Touch  then **Save Location** to choose where to save the movie.

Music

Your LG GD510 has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music** in the ENTERTAINMENT tab. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

All tracks - Contains all the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.




Transferring music onto your phone


The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Select one of the folders and the song you want to play.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.
- 5 Touch  to go back to the previous song.

- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

- 1 Touch **Music** in the **ENTERTAINMENT** tab.
- 2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.
- 3 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 4 Touch **Done**.

FM Radio


Your LG GD510 has an FM radio feature so you can tune into your favourite stations to listen on the move.





NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

Searching for stations


You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

- 1 Scroll and touch **FM radio** in the **ENTERTAINMENT** tab, then .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.


NOTE: You can also manually tune into a station by using  and  displayed in the centre of the screen. If you press and hold  and , the stations will be automatically found.

Resetting channels

- 1 Scroll and touch **FM radio** in the **ENTERTAINMENT** tab, then .
- 2 Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Organiser

Adding an event to your calendar

- 1 Touch **Organiser** in the UTILITIES tab and select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
- 5 Enter **Subject**.
- 6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

Adding an item to your to do list

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **To do** and touch **Add to do**.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

Using date finder


Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Date finder**.
- 3 Set the required date in the **From** tab.
- 4 Set the number of days in the **After** tab.
- 5 The **Target date** will be shown below.

Adding a memo

- 1 Touch **Memo** in the UTILITIES tab.
- 2 Touch **Add memo**.
- 3 Type your memo, then touch **Save**.
- 4 Your memo will then appear on the screen in the **Memo** application.

Setting your alarm


- 1 Touch **Alarms** in the UTILITIES tab.
Widget alarm should appear in the list as default and you can not delete it.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound in the **Time** field box.
- 4 Choose how you would like your alarm to repeat in the **Repeat** box: **Not repeated**, **Daily**, **Mon ~ Fri**, **Mon ~ Sat**, **Sat ~ Sun**, **Except holiday** or **Choose weekday**.
The icons then indicate the weekday you select.
- 5 Select **Alarm type** to select the type of alarm you want.
- 6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds, touch the sound, followed by .

- 7 Add a memo for the alarm in the **Memo** box.
- 8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

NOTE: You can set up to 5 alarms including **Widget alarm**.

TIP! Slide the switch **ON/OFF** to the alarm to set it.


Adding a memo with the drawing panel

- 1 Scroll and touch **Drawing Panel** in the UTILITIES tab .
- 2 Touch **Add drawing**.
- 3 Draw your memo on the touch screen LCD followed by .
- 4 Touch **Yes**, then your memo will appear on the screen in the **Drawing Panel** application.

Organiser

Voice recorder

Use your voice recorder to record voice memos or other audio files.





Touch **Voice recorder** in the UTILITIES tab and select , then **Settings** to change Settings:

Duration – Set the recording duration. Choose from **No limit**, **MMS msg. size** or **1 min.**


Quality – Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

Memory in use – Select where to save the audio files. Choose between **External memory** and **Handset memory**.

Recording a sound or voice

- 1 Touch  to begin recording.
- 2 Touch  to pause recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.



Using your calculator

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.

Converting a unit

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency**, **Surface**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Adding a city to your World clock

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **World clock**.
- 3 Touch the , followed by **Add city**.
- 4 Scroll the globe, touch the area you want and choose the city on the map.
- 5 Or touch the  and type the name of the city you require in the search field box.


Using the stopwatch

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Stopwatch**.
- 3 Touch **Start** on the bottom of the screen to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.


PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait for a while. PC Suite runs automatically.

Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to, or restore information from. Click **Start** icon.
- 4 Your information will be backed up or restored.

Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the **Manage Files** icon.
- 3 All the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the right side of the screen.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content that you no longer need.

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Manage Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your SIM card and handset.
- 4 Click on **File** and select **Save**. You can now select the target and where you want to save your contacts to.

NOTE: To backup contacts saved to your SIM card, click on the SIM card folder on the left side of your PC screen.

Right-click your contacts and then **Select All**.


Right-click at the same position and select **Copy to Phone Memory**. Now click on the handset folder on the left side of the screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the screen.
- 4 Click the title of the columns to rearrange messages sorted by **Sender, Contents and Received date**.

Using your phone as a Music Sync device

Your Phone can be used as a Music Sync device for Sync Music Files only. Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the Home screen select , then select **Connectivity** on the **SETTINGS** tab.
- 3 Select **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect the phone to your PC. Your phone will read: **Connected**.

The web

Accessing the web

- 1 Touch the **Browser** in UTILITIES tab.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.


- 1 Touch **Browser** in the UTILITIES tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **Add bookmark**. Enter a name for your bookmark followed by the URL in the corresponding field box.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.

- 5 To access the bookmark simply touch the **Connect** icon next to the bookmark or touch the bookmark title and then touch **Connect**. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Saving a page

- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

Accessing a saved page

Touch **Browser** in the UTILITIES tab. And select **Saved pages**. You can view the saved pages here.

Viewing your browser history

Touch **Browser** in the UTILITIES tab. And select **History**.

Changing the web browser settings

Touch **Browser** in the UTILITIES tab. And select **Settings**.

You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies** or **Security** settings.

Using your phone as a modem

Your GD510 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GD510 and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click **InternetKit** on your PC. Then click **New** button and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Write the Profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GD510.

The web

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and GD510.
- 2 Pair your PC and GD510 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **New** button.
- 5 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 6 Write the Profile that can connect to the Internet and save the values.
- 7 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GD510.

Settings

Personalising your profiles

You can quickly change your profile on the Home screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles** in the SETTINGS tab.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message tone** settings and more.

Changing your screen settings

Touch **Screen settings** in SETTINGS tab.

Screen settings

Wallpaper - Choose the theme for your home screen or lock screen.

Livesquare - Touch **Livesquare guide** to check its functions.

Handset theme - Choose the theme for menus. You can also adjust the font size and style.

Top menu - Choose the style of the top menu, choose either **Zigzag** or **Scrolling**.

Dialling - Adjust the number colour.

NOTE: The longer the backlight is on, the more battery power is used. This may result in your needing to charge your phone more often.

Brightness - Adjust the screen brightness.

Greeting message - Choose **ON** or **OFF** and fill in the greeting message in the text field.

Start-up/Shut down - Choose the theme for your start-up/shut down screen.

Changing your phone settings

Enjoy the freedom of adapting how your GD510 works for your own style.

Touch **Phone settings** in the SETTINGS tab, then choose from the list below.

Phone settings

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Choose to switch the factory set power saving settings on/off or Night only.

Settings

Languages - Change the language of your GD510's display.

Motion silent - Make the GD510 go into the mute or snooze settings by flipping it over when it is ringing.

Auto keylock - Lock the keypad automatically in the Home screen.

Security - Adjust your security settings, including PIN codes and handset lock.

Memory info - See **Using memory manager** for more information.

Reset settings - Restores all settings to their factory defaults.

Information - Select **Help** to view the technical information for your GD510. And you can upgrade software with **Handset information**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu:

Touch **Connectivity** in the **SETTINGS** tab.

Network settings

Select network - If you select **Automatic**, the GD510 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

Preferred lists - You can add a preferred network to connect to. If the network is searching automatically, simply choose one from the network list and if not, add a new network manually.

Internet profiles - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

USB connection mode - Choose a Data service from the options and synchronise your GD510 using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use Music sync with Windows Media Player, select **Music sync** in this menu. **Music sync** is only available for music content.

Using memory manager

Your GD510 has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is been used and see how much space is available.

Touch **Phone settings** in the **SETTINGS** tab, then **Memory info**.

Handset common memory - View the memory available on your GD510 for Pictures, Sounds, Videos, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

SIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - Choose the location you prefer items to be saved to between Handset and External memory.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GD510 will not automatically search for other **Bluetooth** devices. If not, your GD510 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.

Settings


5 Your file will be sent.

TIP! Check the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings:

Touch **Bluetooth** in the **SETTINGS** tab. And select  and choose **Settings**.

Make your changes to:

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your GD510.

Supported services - Select how to use Bluetooth in association with different services.

Remote SIM Mode - Turn on or off.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your GD510 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GD510 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your GD510 will automatically switch to Headset profile.

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>. This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data

communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are supplied with the GD510.

Charger



Data cable



Battery



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

General

Product name : GD510

System : GSM 850 / E-GSM 900 /
DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)

Min : -10°C

“LG Service Center”

by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd.,
Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Sun 07:00 - 19:00

Call center : 0-2878-5757

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD510

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360:2001/EN62209-1:2006
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31-36-547-8940, Fax : +31-36-547-8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

02. Sep. 2009

Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GD510 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on

Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.

- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.29 W/kg (10 g) and when worn on the body is 1.08 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.

Guidelines for safe and efficient use

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.

- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.

Guidelines for safe and efficient use

- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable

performance. The battery pack maybe recharged hundreds of times until it needs replacing.

- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : _____ บัตรรับประกันเลขที่ : _____
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): _____ เลขเครื่อง : _____
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : _____
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : _____
(อังกฤษ) : _____

วัน เดือน ปี เกิด : _____ เพศ : _____
(Date of Birth) (Gender)

ที่อยู่ : _____
(Address)

อาชีพ : _____ โทรศัพท์ : _____ E-mail : _____
(Occupation) (Telephone No.)

ชื่อจากร้าน : _____
(Dealer's Name)

ศูนย์บริการข้อมูล

Customer Information Center 0-2878-5757 or

1-800-

LG L G L G
5 4 5 4 5 4

โทรฟรี

www.lge.co.th

บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด

75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26 คลองตัน
คลองเตย กรุงเทพฯ 10110

ศูนย์บริการข้อมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

LG Electronic (Thailand) CO., Ltd

75/81 Richmond Bldg, 22nd FL, Sukumvit 26,
Klongton, Klongtoey Bangkok 10110

Customer Information Center
Tel. 0-2878-5757 Fax. 0-2466-0250

 **LG Electronics (Thailand)**

ใบอนุญาตเลขที่ ปณ.(ต)/2117 ปณจ. พระโขนง
ถ้าฝากส่งในประเทศไม่ต้องพนักตราไปรษณียากร



บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

72/127 ถนนสมเด็จพระเจ้าตากสิน
แขวงบुकคิโล เขตธนบุรี
กรุงเทพฯ 10600

เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น
(This warranty is valid only in Thailand)

- | | |
|--|---|
| 1) บัตรรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น | 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely. |
| 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบหรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่องมือ บริษัทฯ อินตีส่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย | 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts. |

เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- | | |
|---|--|
| 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับการแต่งตั้ง | 1) If repair are not undertaken by LG Service Center or Authorize Service Center. |
| 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย | 2) Damage to accessory due to misuse. |
| 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้, ไฟฟ้า, ใช้กระแสไฟฟ้าผิดประเภทและอุบัติเหตุอื่น ๆ ที่มนุษย์ไม่สามารถควบคุมได้ | 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control. |

ศูนย์บริการลูกค้า (สำนักงานใหญ่) : เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงมวกเหล็ก เขตธนาบุรี กรุงเทพฯ 10600

โทร : 0-2878-5757

แฟกซ์ : 0-2466-0250



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน
นับจากวันที่ซื้อ
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)

ที่อยู่ร้าน :
(Dealer's Address)

ประทับตราร้านค้า

