



عربي  
ENGLISH

دليل المستخدم  
KF750

ENGLISH  
عربي



CE 0168

[www.lgmobile.com](http://www.lgmobile.com)

دليل المستخدم  
KF750

P/N : MMBB0291401 (1.3) H

LG Electronics Inc.

KF750 User Guide

P/N : MMBB0291401 (1.3) H

CE 0168

[www.lgmobile.com](http://www.lgmobile.com)

Bluetooth QD ID B013855



قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وهذا يتوقف على برنامج الهاتف أو موقر الخدمة.

## KF750 دليل المستخدم

تهانينا لشرائك هاتف KF750 المتقدم والصغير من  
LG، والمصمّم للعمل مع التكنولوجيا الرقمية الأحدث  
لاتصالات الهواتف المحمولة.

01 الإعداد

02 شاشة وضع الانتظار

03 الأساسيات

04 الإبداع

05 التنسيق

06 الويب

07 الإعدادات

08 الملحقات

## المحتويات

### التوجيهات

- 29..... البحث عن جهة اتصال
- 29..... إضافة جهة اتصال جديدة
- 30..... خيارات الاسماء

### الإعداد

- 30..... إنشاء مجموعة
- 31..... استخدام أرقام الاتصال بالخدمة
- 31..... عرض رقمك الخاص
- 31..... إنشاء بطاقة عمل
- 31..... تغيير اعدادات الاسماء

### الرسائل

- 33..... الرسائل
- 33..... إرسال رسالة
- 33..... إدخال النص
- 34..... T9 تكهني
- 34..... دليل ABC

- 34..... إعداد البريد الإلكتروني
- 35..... استرداد بريدك الإلكتروني
- إرسال بريد إلكتروني باستخدام حسابك الجديد
- 35..... تغيير اعدادات البريد الإلكتروني

- 35..... تغيير اعدادات البريد الإلكتروني
- 36..... حافظات الرسائل
- 37..... إدارة الرسائل
- 37..... استخدام النماذج
- 38..... استخدام الرموز التعبيرية
- 38..... تغيير اعدادات الرسائل النصية
- 38..... تغيير اعدادات الرسائل النصية
- 39..... تغيير الاعدادات الأخرى

- 8..... توجيهات لاستخدام أمن وفعال

### الإعداد

- 14..... التعرف على هاتفك
- 16..... تركيب بطاقة USIM والبطارية
- 18..... بطاقة الذاكرة
- 20..... خريطة القوائم

### شاشة وضع الانتظار

- 22..... شاشة وضع الانتظار
- 22..... ملاحظات شاشة اللمس
- 23..... شريط الحالة

### الأساسيات

- 24..... المكالمات
- 24..... إجراء مكالمة صوتية
- 24..... إجراء مكالمة فيديو
- 24..... إجراء مكالمة صوتية/فيديو من الاسماء
- 25..... إجراء مكالمات دولية
- 25..... الرد على مكالمة ورفضها
- 25..... الاتصال السريع
- 25..... إجراء مكالمة ثانية
- 26..... نغمات DTMF
- 26..... عرض سجلات المكالمات
- 27..... استخدام خويل المكالمات
- 27..... استخدام حظر المكالمات
- 27..... تغيير اعداد المكالمات العام
- 28..... تغيير اعداد مكالمة الفيديو
- 29..... الاسماء

## الإبداع

- عرض الصور وملفات الفيديو.....51
- اعداد مستوى الصوت عند عرض فيديو.....51
- التقاط صورة من فيديو.....51
- إرسال صورة أو فيديو من الألبوم.....52
- مشاهدة الصور كعرض شرائح.....53
- تعيين صورة كشاشة رئيسية.....53
- تعديل الصور.....53
- إضافة تأثير إلى صورة.....54
- تغيير شكل صورة.....54
- تطبيق الضوء الكشاف على صورة.....54
- تعديل ملفات الفيديو.....55
- تشذيب طول الفيديو.....55
- دمج ملفي فيديو معاً.....55
- دمج صورة بفيديو.....55
- إضافة نص إلى فيديو.....56
- إنشاء طبقة من صورة.....56
- إضافة تسجيل صوتي.....57
- إضافة مسار صوتي إلى الفيديو.....57
- تغيير سرعة الفيديو.....57
- إضافة تأثير خافت.....58
- التنسيق**
- الوسائط المتعددة.....59
- صور.....59
- خيارات قائمة الصور.....59
- إرسال صورة.....60
- استخدام صورة.....60
- تنظيم الصور.....60
- حذف صورة.....60
- الكاميرا.....40
- التقاط صورة سريعة.....40
- بعد التقاط الصورة.....40
- استخدام الفلاش.....41
- اعداد السطوع.....41
- اختيار وضع الالتقاط.....42
- استخدام وضع اللفظات المتلاحقة.....42
- استخدام وضع اللقطة بإطار.....42
- أخذ لقطة بانورامية.....43
- استخدام الاعدادات المتقدمة.....43
- تغيير حجم الصورة.....45
- اختيار درجة اللون.....45
- عرض الصور المحفوظة.....46
- تعيين صورة كشاشة رئيسية أو صورة جهة اتصال.....46
- كاميرا الفيديو.....47
- التقاط فيديو سريع.....47
- بعد الانتهاء من التقاط الفيديو.....47
- اعداد السطوع.....47
- استخدام الاعدادات المتقدمة.....47
- تغيير حجم صورة الفيديو.....49
- اختيار لون التأثيرات.....49
- مشاهدة ملفات الفيديو المحفوظة.....50
- الصور وملفات الفيديو.....51
- تعديل الصور في قائمة خيارات في ألبوم الصور.....51
- تعديل ملفات الفيديو في قائمة خيارات في ألبوم ملفات الفيديو.....51

68.....	نقل الموسيقى إلى الهاتف	61.....	نقل صورة أو نسخها
68.....	تشغيل أغنية	61.....	تعديل صورة
68.....	استخدام الخيارات أثناء تشغيل الموسيقى	61.....	خد يد صور وإلغاء خديدها
69.....	إنشاء قائمة تشغيل	61.....	إنشاء عرض شرائح
69.....	تعديل قائمة تشغيل	62.....	التحقق من حالة الذاكرة
69.....	حذف قائمة التشغيل	62.....	الأصوات
70.....	استخدام الراديو	62.....	استخدام صوت
70.....	البحث عن محطات	62.....	ملفات الفيديو
71.....	تعديل القنوات	62.....	مشاهدة فيديو
71.....	إعادة تعيين القنوات	62.....	استخدام خيارات بينما الفيديو متوقف مؤقتاً
71.....	الاستماع إلى الراديو	63.....	إرسال فيديو كليب
72.....	استخدام مسجل الصوت	63.....	استخدام فيديو كليب كنغمة رنين
72.....	تسجيل ملف صوتي أو صوت	63.....	استخدام قائمة خيارات الفيديو
72.....	إرسال التسجيل الصوتي	64.....	الأدوات
73.....	المنسّق	64.....	الاستمتاع بقائمة M-Toy
73.....	إضافة حدث إلى التقويم	64.....	تنزيل لعبة أو تطبيق
73.....	تغيير عرض التقويم الافتراضي	65.....	لعبة
73.....	إضافة عنصر إلى قائمة المهام	65.....	استخدام قائمة خيارات الألعاب
73.....	المشاركة في عنصر في المهام	65.....	محتويات الفلاش
74.....	إضافة مذكرة	65.....	عرض ملف SWF/SVG
74.....	تعيين المنبه	65.....	استخدام خيارات عرض الملف SWF/SVG
75.....	استخدام الحاسبة	65.....	مستندات
75.....	استخدام ساعة الإيقاف	66.....	نقل ملف إلى الهاتف
75.....	تحويل وحدة	66.....	عرض ملف
75.....	إضافة مدينة إلى ساعتك العالمية	66.....	أخرى
76.....	مزامنة الكمبيوتر الشخصي	67.....	صانع الأفلام
76.....	تثبيت LG PC Suite على الكمبيوتر	67.....	إنشاء فيلم
76.....	توصيل الهاتف والكمبيوتر	67.....	الموسيقى
	إجراء نسخ احتياطي لمعلومات الهاتف		

85.....	الاعدادات	76.....	واستعاتنها
85.....	تغيير اعدادات الشاشة	77.....	عرض ملفات الهاتف على الكمبيوتر
85.....	تخصيص الاوضاع	77.....	مزامنة الاسماء
86.....	تغيير اعدادات الهاتف	77.....	مزامنة الرسائل
86.....	استخدام التاريخ والوقت	77.....	مزامنة الموسيقى
86.....	تغيير الاعدادات الأخرى		استخدام الهاتف كوسيلة تخزين ذات سعة كبيرة
87.....	تغيير اعدادات الحماية	78.....	كبيرة
87.....	استخدام إدارة الذاكرة	78.....	رمز PIN لاتصال DivX
87.....	استخدام وضع الرحلات الجوية		
88.....	الملحقات		
89.....	خدمة الشبكة	79.....	الويب
89.....	بيانات تقنية	79.....	للمتصفح
		79.....	الوصول إلى ويب
		79.....	إضافة إشارات مرجعية والوصول إليها
		79.....	حفظ صفحة
		80.....	الوصول إلى صفحة محفوظة
		80.....	عرض محفوظات المتصفح
		80.....	استخدام قارئ RSS
		80.....	إضافة القناة
		81.....	تحديث قارئ RSS
		81.....	تغيير اعدادات مستعرض ويب
		82.....	الويب
		82.....	استخدام الهاتف كمودم
		82.....	استخدام ملاحظه
			إرسال الملفات واستلامها باستخدام ملاحظه
		84.....	الاقتران بجهاز ملاحظه آخر
		84.....	استخدام سماعة رأس ملاحظه

## توجيهات لاستخدام أمن وفعال

يرجى قراءة هذه التوجيهات البسيطة. فعدم التقيد بهذه التوجيهات قد يكون خطيراً أو غير قانوني.

### التعرّض لطاقة التردد اللاسلكي

يتفد هذا الجهاز بالتوجيهات الدولية حول التعرّض للموجات اللاسلكية.

إن جهازك المحمول عبارة عن جهاز إرسال واستقبال راديوي. وقد تمّ تصميمه وتصنيعه لكي لا يتجاوز قيود التعرّض للترددات اللاسلكية التي توصي بها الإرشادات الدولية كاللجنة الدولية للوقاية من خطر الإشعاعات غير المؤينة (ICNIRP). وتشكّل هذه القيود جزءاً من التوجيهات الشاملة وتحدّد مستويات طاقة الترددات اللاسلكية المسموح أن يتعرّض لها عامّة الناس. لقد تمّ تطوير التوجيهات من قبل منظمات علمية مستقلة من خلال تقييم منظم وصارم للدراسات العلمية. وتتضمّن الإرشادات هامش أمان أساسي تمّ تصميمه لضمان سلامة جميع الأشخاص بغضّ النظر عن عمرهم وظروفهم الصحية.

إنّ معيار التعرّض لأجهزة المحمول يستخدم وحدة قياس تُعرف باسم معدّل الامتصاص المحدد أو SAR. يبلغ حدّ SAR المنصوص عليه في التوجيهات الدولية 2.0 واط/كغ\*. لقد جرت الاختبارات على معدّل الامتصاص المحدد باستخدام مواضع التشغيل القياسية في حين كان الجهاز يقوم بالإرسال بأعلى مستوى معتمد من الطاقة في كافة نطاقات التردد التي جرى فيها الاختبار. وعلى الرغم من أنّ معدّل الامتصاص المحدد قد تمّ تحديده عند أعلى مستوى معتمد من الطاقة إلا أنّ SAR الحالي للجهاز خلال تشغيله قد يصل إلى أقلّ بكثير من الحدّ الأقصى. ومرةً ذلك إلى أنّ الجهاز مصمّم للتشغيل بمستويات طاقة متعدّدة لإتاحة استخدام الطاقة المطلوبة فقط لبلوغ الشبكة. وبشكل عام، بقدر ما تكون قريباً من المحطة الرئيسية بقدر ما يكون إخراج طاقة الجهاز منخفضاً قبل أن طرح أي طراز جديد من الهواتف للبيع. ينبغي إظهار مطابقته للتوجيه الأوروبي الخاص بالراديو والأجهزة الطرفية للاتصالات اللاسلكية (R&TTE). وينطوي هذا التوجيه، كأحد المتطلبات الأساسية، على حماية صحة وسلامة المستخدم بالإضافة إلى أي شخص آخر.

للحصول على المعلومات حول معدل الامتصاص للمحدد SAR في مناطق أخرى. يرجى العودة إلى قسم معلومات المنتج على الموقع الإلكتروني التالي [www.lgmobile.com](http://www.lgmobile.com).

### العناية بالمنتج وصيانتة

#### تحذير

استخدم فقط البطاريات والشواحن والملحقات الموافق على استخدامها لطراز الهاتف المعين هذا. فاستخدام أي أنواع أخرى قد يجعل أي كفالة أو موافقة تنطبق على الهاتف غير صالحة. وقد يكون خطيراً.

- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.

وقد بلغ الحد الأقصى لمعدل الامتصاص النوعي لهذا الجهاز عندما جرى اختباره لاستخدامه على الأذن 0.5 واط/كلغ.

يتقيد هذا الجهاز بإرشادات التعرض للتردد اللاسلكي عند استخدامه في موضع عادي مقابل الأذن أو عند وضعه على مسافة 1.5 سم على الأقل بعيداً عن الجسم. عند استخدام علبة أو مشبك للحزام أو حاملة لتشغيل الجهاز أثناء وضعه على الجسم، يجب ألا تحتوي على أي معدن ويجب وضع المنتج على بعد 1.5 سم على الأقل من جسمك. ومن أجل إرسال ملفات البيانات أو الرسائل، يتطلب هذا الجهاز اتصالاً نوعياً عالي الجودة بالشبكة. في بعض الحالات، يجوز أن يتم تأخير إرسال ملفات البيانات أو الرسائل إلى أن يصبح هذا الاتصال متاحاً. احرص على اتباع التعليمات المتعلقة بالمسافات الفاصلة المشار إليها أعلاه إلى أن يتم اكتمال الإرسال. يبلغ الحد الأقصى لمعدل الامتصاص المحدد لهذا الجهاز عندما جرى اختباره لاستخدامه على الجسم 0.755 واط/كلغ.

\* يبلغ حد SAR للأجهزة المحمولة المستخدمة من قبل العامة معدل 2.0 واط/كيلوغرام على ما يتجاوز عشرة غرامات من أنسجة الجسم. تتضمن التوجيهات هامش سلامة أساسي لضمان حماية إضافية لعامة الناس وتحسباً لأي تغييرات قد تطرأ على القياسات. تختلف قيمة معدل الامتصاص المحدد باختلاف المتطلبات الوطنية لإرسال التقارير ونطاق الشبكة.

## توجيهات لاستخدام آمن وفعال

- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر. لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

### تشغيل الهاتف بطريقة فعالة

#### الأجهزة الإلكترونية

- قد تعرّض كل الهواتف المحمولة للتشويش. مما قد يؤثر على أدائها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. تجنّب وضع الهاتف على أجهزة اعداد النبض. مثلاً في الجيب على مستوى الصدر.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون. والراديو. والكمبيوتر الشخصي.

- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالبك بذلك. على سبيل المثال. لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنه جارياً. فقد يتسبّب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.

## السلامة على الطرقات

تحقق من القوانين والأنظمة المتعلقة باستخدام

الهواتف المحمولة في المناطق أثناء القيادة.

• لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.

• عليك دوماً تركيز كامل الانتباه على القيادة.

• استخدم مجموعة أدوات لا يدوية. إذا كانت

متوفرة.

• توقّف عند جانب الطريق قبل إجراء مكالمة أو

الإجابة على المكالمة إذا كانت ظروف القيادة

تستدعي ذلك.

• قد تؤثر طاقة التردد اللاسلكي على بعض الأنظمة

الإلكترونية في محرك السيارة مثل معدات

الاستيريو في السيارة أو معدات السلامة.

• عندما تكون المركبة مزودة بكييس هوائي. عليك

عدم إعاقة عمله بواسطة تجهيزات لاسلكية

مثبتة أو محمولة. فقد يحول دون فتح الكيس

الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب

أداء غير صحيح.

• إذا كنت تستمع إلى الموسيقى أثناء تنقلك.

فتأكد من كون مستوى الصوت معقولاً بحيث

تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملزماً

خاصة بالقرب من الطرقات.

## تجنّب إلحاق الضرر بالسمع

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت

طويلة إلى إلحاق الضرر بسمعك. ونوصي بالتالي بالأ

تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً

من أذنك. كما نوصي بتعيين مستوى صوت معقول

للموسيقى والمكالمات.

## منطقة تفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات

التفجير جارية. التزم بالقيود. واتبع الأنظمة أو

القوانين.

مناطق تتّسم أجواؤها بالقابلية للانفجار

• لا تستخدم الهاتف في نقطة إعادة التزويد

بالوقود.

• لا تستخدم الهاتف بالقرب من الوقود أو المواد

الكيميائية.

• لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال.

أو المتفجرات في حجرة السيارة التي تحتوي على

الهاتف المحمول وملحقاته.

## توجيهات لاستخدام آمن وفعال

### في الطائرة

- معلومات حول البطارية والعناية بها
- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها، وبخلاف أنظمة البطاريات الأخرى. ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط، فشواحن LG مصمّمة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض دون الحصول على إذن من قبل طاقم الطائرة.

### الأطفال

- ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

### مكالمات الطوارئ

- قد لا تكون مكالمات الطوارئ متوفرة ضمن كافة شبكات الهاتف المحمول. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ؛ تحقق من ذلك مع موفر الخدمات المحلي لديك.

- لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلص من البطاريات المستعملة وفق إرشادات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً، لا تخلص منها كمهمات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- تعتمد فترة عمل البطارية الفعالية على تكوين الشبكة وضوابط المنتج والأنماط المستخدمة والبطارية والأوضاع البيئية.



01

02

03

04

05

06

07

08

موصل الشاحن/الكبل/الجهاز اللايودي

**ملاحظة:** لتوصيل كبل USB،  
انتظر حتى يتم تشغيل الهاتف  
وتسجيله في الشبكة.

المفاتيح الجانبية

- عندما تكون الشاشة خاملة: مستوى صوت نغمة المفاتيح.
- أثناء المكالمات: مستوى صوت سماعة الأذن.

• عند تشغيل مسار **BGM**

- ضغطة قصيرة: التحكم بحجم الصوت.
- ضغطة طويلة: الانتقال إلى ملف الموسيقى التالي أو ملف الموسيقى السابق.

زر شاشة اللمس: تحويل شاشة LCD إلى شاشة لمس للوصول إلى ملفاتك.

فتح قائمة تعدد المهام

زر الالتقاط

عدسات الكاميرا الخارجية

مأخذ بطاقة USIM

غطاء البطارية

الفلأش



مأخذ بطاقة الذاكرة  
SD المصغرة

البطارية



مزلاج تحرير البطارية

اضغط على هذا الزر لإخراج البطارية.

## تركيب بطاقة USIM والبطارية

### 1 نزع غطاء البطارية

اضغط باستمرار على زر تحرير البطارية الموجود في أعلى الهاتف وارفع غطاء البطارية.

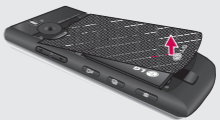

### 2 إخراج البطارية

أمسك بالحافة العليا للبطارية وارفعها لإخراجها من حجرتها باستخدام غطاء البطارية.



**⚠ تحذير:** لا تخرج البطارية عندما يكون الهاتف قيد التشغيل. إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

### 3 تركيب بطاقة USIM

ادفع بطاقة USIM إلى داخل حاملها. تأكد من كون ناحية الموصلات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. لإخراج بطاقة USIM، اسحبها بلطف في الاتجاه العكسي.



**⚠ تحذير:** لا تستخدم أطرافك عند إخراج البطارية.


#### 4 تركيب البطارية

أدخل أولاً الجهة العليا للبطارية في الحافة العليا لحجرة البطارية. تأكد من محاذاة موصلات البطارية مع الأطراف الموجودة على الهاتف. اضغط جهة البطارية السفلى إلى الأسفل حتى تستقر في مكانها.



#### 5 شحن الهاتف

حرك إلى الخلف غطاء مقبس الشاحن الموجود على جانب الهاتف KF750. أدخل الشاحن وقم بتوصيله بمقبس كهربائي رئيسي. يجب أن يتم شحن الهاتف KF750 حتى تظهر رسالة على الشاشة تفيد بشحن الهاتف بالكامل.

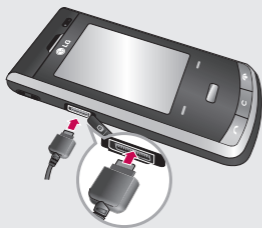

ملاحظة: يجب إدخال شاحن الهاتف في الهاتف كما هو موضح فقط.

## بطاقة الذاكرة

### تركيب بطاقة ذاكرة

يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة، يعتمد الهاتف KF750 بطاقة ذاكرة تصل سعتها إلى 4 غيغا بايت.

**ملاحظة:** بطاقة الذاكرة هي عبارة عن ملحق اختياري.


- 1 انزع غطاء البطارية كما ورد في السابق.
- 2 حرّك بطاقة الذاكرة إلى داخل الفتحة الموجودة في الأعلى. حتى تستقر في مكانها. تأكد من كون ناحية الموصّلات الذهبية موجهة نحو الأسفل.



- 3 أعد غطاء البطارية إلى مكانه كما ورد في السابق.

### تهيئة بطاقة الذاكرة

إذا كانت بطاقة الذاكرة مهيأة، فيمكنك البدء باستخدامها، أما إذا لم تكن البطاقة مهيأة فعليك تهيئتها.


- 1 من شاشة وضع الانتظار اضغط على  من إعدادات واختر إعدادات الهاتف.
- 2 حدد مدير الذاكرة ثم اختر ذاكرة خارجية.
- 3 المس التهيئة ثم أكد خيارك.
- 4 أدخل كلمة المرور، إذا كان قد تم تعيينها. فتمت تهيئة بطاقتك وتصبح جاهزة للاستخدام.

**ملاحظة!** لتغيير وجهة التخزين الافتراضية. افتح مدير الذاكرة من قائمة إعدادات الهاتف وحدد إعدادات التخزين الأساسي.

**ملاحظة:** إذا تضمّنت بطاقة الذاكرة محتوى موجوداً، فسيتم تصنيفه بشكل تلقائي في الحافظة الصحيحة. فسيتم مثلاً تخزين ملفات الفيديو في حافظة مقاطع الفيديو.

## نقل الاسماء

لنقل الاسماء من بطاقة **USIM** إلى هاتفك:

**1** من شاشة وضع الانتظار حدد  ثم اختر الاسماء.

**2** حدد اعدادات الاسماء ثم نسّخ.

**3** اختر الهاتف إلى **USIM** والمس تم.

**4** اختر الكل معاً أو الواحد تلو الآخر والمس تم.

01

02

03

04

05

06

07

08

## اتصال



- 1 إجراء مكالمة فيديو
- 2 سجلات المكالمات
- 3 مدة المكالمة
- 4 حجم البيانات
- 5 تكاليف المكالمات
- 6 تحويل المكالمات
- 7 حظر المكالمات
- 8 أرقام الاتصال الثابتة
- 9 انتظار المكالمة
- 0 اعداد عام
- # اعداد مكالمة الفيديو

## ألعاب وتطبيقات



- M-Toy 1
- 2 الادوات
- 3 الاعدادات

## الوسائط المتعددة



- 1 وسائط اللمس
- 2 الكاميرا
- 3 كاميرا الفيديو
- 4 الموسيقى
- 5 راديو FM
- 6 مسجل الصوت
- 7 محرر المحتوى
- 8 صانع الأفلام

## المنسق



- 1 التقويم
- 2 المهام
- 3 المذكرة
- 4 مذكرة سريعة
- 5 الباحث عن التاريخ
- 6 اعدادات

## اشيائي



- 1 الصور
- 2 حافظه الأصوات
- 3 حافظه مقاطع الفيديو
- 4 ألعاب وتطبيقات
- 5 محتويات Flash
- 6 المستندات
- 7 أخرى
- 8 ذاكرة خارجية

## الرسائل



- 1 إنشاء رسالة جديدة
- 2 صندوق الوارد
- 3 صندوق البريد
- 4 مسودات
- 5 صندوق الصادر
- 6 العناصر المرسله
- 7 حافظاتي
- 8 نماذج
- 9 رموز تعبيرية
- 0 اعدادات

01

02

03

04

05

06

07

08

**الاسماء**

- 1 إضافة جديد
- 2 بحث
- 3 اتصالات سريعة
- 4 مجموعات
- 5 أرقام الاتصال بالخدمة
- 6 رقم خاص
- 7 بطاقة العمل الخاصة بي
- 8 الاعدادات

**Google**

- 1 بحث
- 2 بريد
- 3 خرائط
- 4 كاتب المذونة
- 5 YouTube
- 6 محفوظات محملة

**المتصفح**

- 1 الصفحة الرئيسية
- 2 إدخال عنوان
- 3 الإشارات المرجعية
- 4 قارئ RSS
- 5 الصفحات المحفوظة
- 6 المحفوظات
- 7 الاعدادات

**الادوات**

- 1 قائمة سريعة
- 2 التنبيهات
- 3 الحاسبة
- 4 ساعة الأيقاف
- 5 المحوّل
- 6 الساعة العالمية
- 7 خدمة USIM

**الاعدادات**

- 1 الأوضاع
- 2 الهاتف
- 3 الشاشة
- 4 التاريخ والوقت
- 5 الشبكة
- 6 وضع إنترنت
- 7 نقاط الوصول
- 8 اتصال ببيانات الرزمة
- 9 الحماية
- 0 مدير الذاكرة
- # اعدادات الدفع
- \* إعادة تعيين الاعدادات

**إمكانية الاتصال**

- 1 ملاحظه
- 2 مزامنة الخادم
- 3 وضع اتصال USB
- 4 مخرج التلفزيون
- 5 رمز PIN لاتصال DivX



## شاشة وضع الانتظار

**ملاحظة!** استخدم لوحة اللمس للوصول بسرعة وسهولة إلى الموسيقى والصور والألعاب والكتب الإلكترونية والراديو.



لوحة اللمس

ملاحظة: عندما يكون ضوء الشاشة متوقفاً عن التشغيل، اضغط على مفتاح الكاميرا الموجود في الجانب الأيمن من الهاتف لاستعادة شاشة وضع الانتظار.

عندما لا يكون الهاتف KF750 قيد الاستخدام فسيعود إلى شاشة وضع الانتظار. ومن هنا يمكنك الوصول إلى خيارات القوائم، وإجراء مكالمات سريعة وتغيير الوضع. كما يمكنك القيام بالعديد من الأمور الأخرى.

### ملاحظات شاشة اللمس

إذا قمت بالضغط على ، فستبدل الشاشة تلقائياً إلى لوحة مفاتيح شاشة اللمس التفاعلية.

اضغط باستمرار على مفتاح شاشة اللمس من شاشة وضع الانتظار للدخول إلى قائمة أخرى للوسائط المتعددة.

لتحديد عنصر المس الرمز الموجود على شاشة اللمس بدقة، فيهتز الهاتف KF750 بعض الشيء عندما يتعرّف على لمسك لخيار ما.

- لا حاجة إلى الضغط بقوة، فشاشة اللمس حساسة بشكل كافٍ بتيح لها التعرف على لمسة خفيفة.
- استخدم رأس إصبعك لللمس الخيار المطلوب. احترس من عدم لمس أي مفاتيح أخرى.
- لا تضع غطاءً أو غلافاً خارجياً على الهاتف إذ أن شاشة اللمس لن تعمل مع وجود أي مواد تغطيه.
- للخروج من شاشة اللمس، المس رمز الصفحة الرئيسية في أعلى الزاوية اليمنى مرة واحدة، فيعود الهاتف إلى شاشة الانتظار الرئيسية.
- يمكن استخدام لوحة اللمس الموجودة في أسفل الشاشة كلوحة أسهم رباعية الاتجاهات للتنقل عبر قوائم الهاتف.

01	الوصف	الرمز
02	تم تعيين تنبيه	
03	الوضع "عادي" قيد الاستخدام	
04	الوضع "صامت" قيد الاستخدام	
05	الذاكرة الخارجية	
06	المكالمات محوطة	
07	GPRS متوفر	
08	EDGE قيد الاستخدام	
	التجوال	
	ملاحظه نشط	
	تم رفض المكالمات	
	3G متوفر	

### نصيحة إلى العميل

للسماح بحساسية أفضل للهوائي تفتح LG بأن تحمل الهاتف كما هو موضح أدناه.



يرجى عدم تغطية منطقة الهوائي بيدك أثناء المكالمات أو عند استخدام اتصال ملاحظه. فقد يؤدي هذا الأمر إلى تخفيض جودة الإشارة.

### شريط الحالة


يشير شريط الحالة، باستخدام رموز مختلفة، إلى أشياء مثل قوة الإشارة، ورسائل جديدة وفترة عمل البطارية كما يعلمك ما إذا كانت تقنية ملاحظه أو خدمة GPRS نشطة.

يفسر الجدول التالي معنى الرموز التي من المحتمل أن تشاهدها على شريط الحالة.

الوصف	الرمز
تعدد المهام	
قوة إشارة الشبكة (يختلف عدد الأشرطة)	
إشارة الشبكة غير متوفرة	
البطارية فارغة	
رسالة نصية جديدة	
بريد إلكتروني جديد	

- 3** لبدء تشغيل وظيفة الفيديو، اضغط على مفتاح الاختيار الأيسر [خيارات] وحدد مكالمة فيديو. سيتم إعلامك بالحاجة إلى إغلاق التطبيقات الأخرى لإجراء مكالمة الفيديو.
- ملاحظة:** قد تستغرق عملية الاتصال لإجراء مكالمة الفيديو بعض الوقت، يرجى الانتظار. وسيعتمد وقت الاتصال أيضاً على السرعة التي يرد بها الطرف الآخر على المكالمة. أثناء إجراء الاتصال لإجراء مكالمة الفيديو، ستري صورتك؛ وبعد أن يجيب الطرف الآخر، ستظهر صورته على الشاشة.

- 4** اضغط موضع الكاميرا إذا دعت الحاجة.

- 5** اضغط على  لإنهاء المكالمة أو أغلق السماعة.



### إجراء مكالمة صوتية/فيديو من الأسماء

من السهل الاتصال بأي شخص قمت بتخزين رقمه في الأسماء في هاتفك.

- 1** المس مفتاح الاختيار الأيمن للوصول إلى قائمة الأسماء.

- 2** قم بالتمرير إلى جهة الاتصال لإجراء مكالمة.

### إجراء مكالمة صوتية

- 1** أدخل رقم هاتف شاملاً رمز المنطقة بالكامل. لحذف رقم اضغط على **C**.
- لحذف كافة الأرقام اضغط باستمرار على **C**.
- 2** اضغط على  لإجراء مكالمة.
- 3** اضغط على  أو أغلق الهاتف لإنهاء المكالمة.

### إجراء مكالمة فيديو

- يمكنك إجراء مكالمة فيديو في منطقة خدمة تغطيتها شبكة من الجيل الثالث إذا توفر للمستخدم الذي تريد الاتصال به هاتف فيديو من الجيل الثالث في منطقة خدمة تغطيتها شبكة من الجيل الثالث. كما يمكنك استلام مكالمة فيديو لإجراء/ للرد على مكالمة فيديو. قم بما يلي.

- 1** أدخل رقم الهاتف باستخدام لوحة المفاتيح، أو حدد رقم الهاتف من قوائم المكالمات التي تم إجراؤها/استلامها.

لتصحيح الأخطاء، اضغط على **C** لبرهة قصيرة لحذف الرقم الأخير. أو اضغط باستمرار على **C** لحذف كافة الأرقام.

- 2** إذا لم ترغب في استخدام مكبر الصوت، فتأكد من توصيل سماعة الرأس.

01

02

03

04

05

06

07

08

### الاتصال السريع

يمكنك تعيين جهة اتصال تطلبها بشكل متكرر إلى رقم اتصال سريع.


1 اضغط على  وحدد الاسماء.

2 حدد اتصالات سريعة.

3 يتم مسبقاً تعيين بريدك الصوتي إلى رقم الاتصال السريع 1 ولا يمكنك تغيير ذلك. حدد أي رقم آخر لتعيينه كرقم اتصال سريع لجهة اتصال.

4 يفتح دفتر العناوين. حدد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم وذلك بلمس رقم هاتفها مرة واحدة.

للاتصال برقم اتصال سريع:

1 اضغط على الرقم الذي قمت بتعيينه إلى جهة اتصال ثم اضغط على مفتاح الإرسال . أو


2 اضغط باستمرار على الرقم الذي قمت بتعيينه إلى جهة اتصال حتى تظهر جهة الاتصال على الشاشة.

### إجراء مكالمة ثانية

1 خلال المكالمة الأولية. المس مفتاح الاختيار الأيسر وحدد إضافة مكالمة جديدة.

2 اطلب الرقم أو ابحث في الاسماء (انظر الصفحة 26 للحصول على تفاصيل حول كيفية إجراء مكالمة من الاسماء).


3 اضغط على  لتوصيل المكالمة.

3 اضغط على  لإجراء مكالمة صوتية.


اضغط على مفتاح الاختيار الأيسر وحدد إجراء مكالمة فيديو لإجراء مكالمة فيديو.

4 اضغط على  لإنهاء المكالمة.


### إجراء مكالمات دولية

1 اضغط باستمرار على  لإضافة البادئة الدولية. فيضع الحرف "+" رمز الوصول الدولي في المقدمة.

2 أدخل رمز البلد. ورمز المنطقة ورقم الهاتف.

3 اضغط على .

### الرد على مكالمة ورفضها

عندما يرن هاتفك اضغط على مفتاح المشغل  للإجابة على المكالمة.


اضغط على مفتاح الاختيار الأيسر لكنم صوت الرنين.

يُعتبر هذا الأمر جيداً إذا كنت قد نسيت تغيير نمط الهاتف إلى "صامت" أثناء حضور اجتماع ما.

اضغط على مفتاح الاختيار الأيمن لرفض المكالمة الواردة.

**مكالمات مستلمة - عرض قائمة بكل الأرقام التي**  
اتصلت بك.

**مكالمات لم يرد عليها - عرض قائمة بكل**  
المكالمات التي لم ترد عليها.

اضغط على . وحدد اتصال.  
من "اتصال". يمكنك أيضاً أن تختار عرض ما يلي:  
**مدة المكالمة - عرض مدة كل المكالمات التي**  
طلبتها وتلك التي استلمتها.

**حجم البيانات - عرض كمية البيانات التي**  
استلمتها وأرسلتها بالكيلو بايت.

**تكاليف المكالمات - عرض الرسوم المطبقة**  
على الأرقام التي طلبتها (هذه الخدمة تعتمد على  
الشبكة. فبعض مشغلي الشبكات غير قادرين على  
دعم هذه الخدمة).

**ملاحظة!** من أي قائمة مكالمات المس مفتاح  
الاختيار الأيسر وحذف الكل لحذف كل العناصر  
المسجلة.

**4** يتم عرض المكالمات معاً على شاشة  
المكالمة. ويتم إقفال المكالمة الأولية ويوضع  
المتصل في حالة الانتظار.

**5** حدد تبديل للتبديل بين المكالمات.


**6** لإنهاء إحدى المكالماتين أو كلاهما حدد خيارات  
→ إنهاء يلي ذلك الكل أو نشطة.

**ملاحظة:** سيُفرض عليك رسم مقابل كل مكالمة  
تجريها.

### نغمات DTMF

يسمح لك DTMF باستخدام الأوامر الرقمية  
للتنقل ضمن القوائم ضمن الرسائل المؤتمتة.  
يكون DTMF قيد التشغيل كإعداد افتراضي.

### عرض سجلات المكالمات

اضغط على . وحدد اتصال → سجلات  
المكالمات.

اختر عرض ما يلي:

**كل المكالمات - عرض قائمة كاملة تتضمن كل**  
الأرقام التي طلبتها. واستلمتها ولم ترد عليها.

**مكالمات صادرة - عرض قائمة بكل الأرقام التي**  
طلبتها.

01

كل الوارد

الواردة عند السفر

02

4 أدخل كلمة مرور حظر المكالمات. تحقق من توفر الخدمة مع مشغل الشبكة.

03

**ملاحظته!** حدد رقم اتصال محدد لتنشغيل

وجميع قائمة بالأرقام التي يمكن الاتصال بها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 من مشغل الشبكة. عند التنشغيل. وحدها الأرقام المضمنة في قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها من هاتفك.

04

05

06

07

08

**تغيير اعداد المكالمات العام**

1 اضغط على  . وحدد اتصال.

2 حدد اعداد عام. من هنا يمكنك تعديل اعدادات الخيارات التالية:

رفض المكالمات - حدد تشغيل أو إيقاف واختر رفض كل المكالمات. أو المكالمات الواردة من مجموعات أو جهات اتصال معينة. أو من أرقام غير مسجلة (تلك الأرقام غير المضمنة في الاسماء أو بدون معرف المتصل).

إرسال رقمي - اختر ما إذا كنت ترغب في أن يظهر رقمك عند اتصالك بأحدهم.

**استخدام تحويل المكالمات**

1 اضغط على  . وحدد اتصال.

2 حدد تحويل المكالمات واختر مكالمات صوتية و/أو مكالمات الفيديو.

3 اختر ما إذا كنت تريد أن يتم تحويل كل المكالمات. عندما يكون الخط مشغولاً. أو عند عدم الرد أو عندما لا يكون الوصول إليك ممكناً. أدخل الرقم الذي ترغب في أن يتم التحويل إليه. حدد تنشيط للتنشيط.

ملاحظة: يتم فرض رسوم على تحويل المكالمات. يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.

**ملاحظته!** لإيقاف تشغيل تحويل كل المكالمات. اختر إلغاء تنشيط الكل.

**استخدام حظر المكالمات**

1 اضغط على  . وحدد اتصال.

2 حدد حظر المكالمات واختر مكالمات صوتية و/أو مكالمات الفيديو.

3 اختر أي خيار من الخيارات الستة:  
كل الصادر

المكالمات الدولية الصادرة

المكالمات الدولية الصادرة باستثناء المحلية

- تغيير اعداد مكالمة الفيديو**
- 1 اضغط على  . وحدد اتصال.
  - 2 حدد اعداد مكالمة الفيديو.
  - 3 حدد ما إذا كنت تريد استخدام صورة خاصة وحدد صورة و/أو شغل المرآة (بحيث يمكنك مشاهدة نفسك على الشاشة).
- معاودة الاتصال التلقائي - اختر تشغيل أو إيقاف تشغيل.**
- وضع الرد -** اختر ما إذا كنت تريد الرد على الهاتف باستخدام مفتاح الإرسال أو أي مفتاح أو بفتح القطعة المنزلفة للهاتف.
- منبه الدقائق -** حدد تشغيل لسماع نغمة بعد مرور كل دقيقة خلال فترة إجراء المكالمة.
- وضع الرد BT -** حدد لا يدوي لكي تتمكن من الرد على مكالمة باستخدام سماعة رأس ملاحظه أو حدد سماعة رأس للضغط على مفتاح موجود على الهاتف للرد على مكالمة عند استخدام سماعة رأس ملاحظه.
- حفظ رقم جديد -** حدد نعم لحفظ الرقم الجديد.
- اعداد إغلاق القطعة المنزلفة -** حدد إنهاء المكالمة لكي تتمكن من قطع الاتصال بالمكالمة أثناء إغلاق القطعة المنزلفة.

### البحث عن جهة اتصال

هناك طريقتان للبحث عن جهة اتصال:

من شاشة وضع الانتظار

1 من شاشة وضع الانتظار المس مفتاح الاختيار الأيمن لفتح دفتر العناوين.

2 حدد الحرف المطابق للحرف الأول في الاسم الذي ترغب في مشاهدته، وهكذا بالنسبة إلى 'Home'، حدد 'E-H'.

**ملاحظه!** يمكنك البحث حسب المجموعة وذلك بلمس مفتاح الاختيار الأيمن وتحديد البحث بحسب المجموعة. ويؤدي هذا الأمر إلى إحضار قائمة بكل المجموعات لديك.

### من القائمة الرئيسية

1 حدد الاسماء.

2 حدد بحث وأدخل بعض الأحرف الأولى من جهة الاتصال الذي ترغب في العثور عليها باستخدام لوحة المفاتيح.

3 سيقوم دفتر عناوينك بإحضار قائمة بجهات الاتصال المطابقة للأحرف التي أدخلتها.

### إضافة جهة اتصال جديدة

1 اضغط على  وحدد الاسماء.

2 حدد إضافة جديد.

3 اختر ما إذا كنت تريد حفظ جهة الاتصال في الهاتف أو USIM.

4 أدخل الاسمين الأول والأخير لجهة الاتصال الجديدة. من غير الضروري إدخال الاسمين. ولكن يجب عليك إدخال أحدهما.

5 أدخل أرقاماً قد يصل عددها إلى خمسة وقيم بتعيين نوع لكل منها. اختر من ضمن المحمول والمنزل والمكتب والنداء الآلي، وفاكس، و VT وعام. المس موافق.

6 أضف عنواني بريد إلكتروني كحد أقصى.

7 عيّن جهة الاتصال إلى مجموعة. اختر من ضمن بلا مجموعة، أو العائلة، أو الأصدقاء، أو الزملاء، أو المدرسة أو الأشخاص المهمون جداً.

8 كما يمكنك إضافة صفحة رئيسية، وعنوان المنزل، واسم الشركة، ولقب وظيفي، وعنوان الشركة ومذكرة.

**ملاحظه!** يمكنك إنشاء مجموعات مخصصة لجهات اتصال. انظر إنشاء مجموعة أدناه.

## خيارات الاسماء

هناك العديد من الأمور التي يمكنك القيام بها عند عرض جهة اتصال. إليك الطريقة التي تتيح لك الوصول إلى قائمة الخيارات واستخدامها:

**1** افتح جهة الاتصال التي تريد استخدامها. انظر البحث عن جهة اتصال على الصفحة 29.

**2** اضغط على مفتاح الاختيار الأيسر لفتح قائمة الخيارات.

من هنا يمكنك:

تعديل - تغيير أي من تفاصيل جهة الاتصال.

إرسال رسالة - إرسال رسالة أو بريد إلكتروني إلى جهة الاتصال. انظر الصفحة 33 للحصول على تفاصيل حول كيفية إرسال الرسائل.

إرسال بطاقة عمل - إرسال تفاصيل تتعلق بجهة الاتصال إلى شخص آخر كبطاقة عمل. اختر إرسال بطاقة العمل كرسالة نصية. أو رسالة وسائط متعددة. أو بريد إلكتروني أو عبر ملاحظته.

إجراء مكالمة صوتية - اتصل بجهة الاتصال. إجراء مكالمة فيديو - اتصل بجهة الاتصال من خلال الفيديو.

حفظ في **USIM/الهاتف** - اختر ما إذا كنت تريد إجراء عملية نسخ أو نقل إلى بطاقة USIM أو الهاتف (يتوقف هذا على الموقع الأصلي حيث قمت بحفظ جهة الاتصال).

حذف - حذف جهة الاتصال. المس نعم إذا كنت متأكدًا.

## إنشاء مجموعة

**1** اضغط على  وحدد الاسماء.

**2** حدد مجموعات والمس مفتاح الاختيار الأيسر.

**3** حدد إضافة مجموعة جديدة.

**4** أدخل اسمًا للمجموعة الجديدة.

**5** المس تم.


**ملاحظة:** إذا قمت بحذف مجموعة. فلن تفقد

الاسماء التي كان قد تم تعيينها إلى تلك

المجموعة. بل ستبقى موجودة في دفتر عناوينك.

**ملاحظه!** يمكنك تعديل مجموعة موجودة وذلك بتمييزها ولس مفتاح الاختيار الأيسر. اختر إضافة عضو إلى المجموعة من الاسماء المتوفرة لديك. أو قم بتعيين نغمة رنين للمجموعة. أو أعد تسمية المجموعة أو احذف مجموعة.

## استخدام أرقام الاتصال بالخدمة

يمكنك عرض قائمة أرقام الاتصال بالخدمة (SDN) التي تمّ تعيينها من قبل موفرّ الخدمة لديك (إذا كانت معتمدة من قبل بطاقة USIM). وتتضمّن هذه الأرقام أرقام الطوارئ واستعلامات الدليل والبريد الصوتي. بعد تحديد رقم خدمة، اضغط على  لطلب الخدمة.

## عرض رقمك الخاص

يسمح لك بعرض رقمك الخاص في بطاقة USIM.

## إنشاء بطاقة عمل

يمكنك إنشاء بطاقة عمل خاصة بك وذلك بتحديد "بطاقة العمل الخاصة بي" و "إضافة". بعد إدخال الاسم والرقم والبريد الإلكتروني والصورة، يمكنك استخدام هذه البطاقة كبطاقة عمل عند إرسال رسالة.

## تغيير اعدادات الاسماء

يمكنك تكييف اعدادات الاسماء بحيث يعمل دفتر عناوينك وفقاً لتفضيلاتك.

1 اضغط على  وحدد الاسماء.

2 حدد اعدادات. من هنا يمكنك تنظيم الاعدادات التالية:

اعدادات قائمة الاسماء - اختر ما إذا كنت ترغب في عرض الاسماء في الهاتف وبطاقة USIM أو الهاتف فقط أو بطاقة USIM فقط. كما يمكنك أن تختار إظهار اسم جهة الاتصال الأول أو الاسم الأخير أولاً. وإظهار صورة جهة الاتصال.

مزامنة الاسماء - اتصل بالخادم لمزامنة الاسماء. انظر مزامنة الاسماء على الصفحة 77.

نسخ - نسخ الاسماء من بطاقة USIM إلى الهاتف أو من الهاتف إلى بطاقة USIM. ويمكنك أن تختار بين نسخ الاسماء الواحدة بد الأخرى أو نسخ الكل معاً.

نقل - يعمل هذا الأمر بالطريقة نفسها التي يعمل بها الأمر نسخ. غير أن جهة الاتصال ستُحفظ فقط في الموقع الذي تم نقلها إليه. إذا نقلت جهة اتصال من بطاقة USIM إلى الهاتف فسيتم حذفها من ذاكرة بطاقة USIM.

إرسال كافة الاسماء عبر ملاحظه - يرسل هذا الأمر معلومات كافة الاسماء إلى هاتف آخر عبر ملاحظه.

01

02

03

04

05

06

07

08

نسخ احتياطي لجهات الاتصال - انظر إجراء  
نسخ احتياطي لمعلومات الهاتف واستعادتها  
على الصفحة 76.

استعادة الاسماء - انظر إجراء نسخ احتياطي  
لمعلومات الهاتف واستعادتها على الصفحة  
76.


مسح الاسماء - مسح كل الاسماء المتوفرة  
لديك. المس نعم إذا كنت تريد بالتأكيد مسح  
دفتر عناوينك.

معلومات الذاكرة - يمكنك التحقق من كمية  
مساحة الذاكرة المتوفرة على الهاتف أو على  
بطاقة USIM.

## الرسائل

يجمع الهاتف KF750 ميزات إرسال رسائل رساله قصيره، ورساله وسائط والبريد الإلكتروني في قائمه واحدة بديهيه وسهله الاستخدام.

## إرسال رسالة

- 1 حدد رسائل ثم اختر إنشاء رسالة جديدة.
- 2 اختر رسالة لإرسال رسالة رساله قصيره أو رساله وسائط. أو لإرسال بريد إلكتروني. اختر بريد إلكتروني. انظر الصفحة 35 للحصول على التفاصيل.
- 3 إذا اخترت "رسالة"، فستفتح رسالة رساله قصيره جديدة.
- 4 حدد خيارات ثم إدراج. لإضافة صورة أو فيديو أو صوت أو موضوع.
- 5 اضغط على  إرسال. أدخل رقم الهاتف أو حدد الاسماء لفتح قائمة الاسماء. يمكنك إضافة عدة جهات اتصال.


**⚠ تحذير:** سيتم فرض رسم عليك مقابل كل رسالة نصية تتألف من 160 حرفاً لكل شخص تُرسل الرسالة إليه.

**⚠ تحذير:** إذا تمت إضافة صورة، أو فيديو أو صوت إلى رسالة رساله قصيره فسيتم تحويلها تلقائياً إلى رساله وسائط وسيُفرض رسم عليك مقابل ذلك.

## إدخال النص


هناك طريقتان لإدخال النص:

T9 تكهني ودليل ABC.

للتبديل بين أسلوبَي إدخال النص اضغط باستمرار على المفتاح  عند وجود رسالة فارغة مفتوحة.

نص T9 التكهني - شغّل نص T9 التكهني ثم حدد T9 abc أو T9 ABC أو 123.

دليل ABC - اختر ABC أو 123.

للتبديل بين الأحرف الكبيرة، والأحرف الصغيرة وأحرف العنوان اضغط على .

لحذف حرف استخدم مفتاح المشغل C في أسفل الشاشة.

لإدخال رمز حدد خيارات وإدراج.

### T9 تكهني

يستخدم وضع T9 قاموساً مضمناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسل المفاتيح التي تلمسها. ما عليك إلا لمس الرقم المرتبط بالحرف الذي تريد إدخاله. فيتعرّف القاموس على الكلمة فور أن يتم إدخال كل الأحرف. اضغط مثلاً على 8 و3 و5 و3 و7 و4 و6 و3 لكتابة 'telephone'.

### دليل ABC

في وضع ABC، عليك ضغط المفتاح بشكل متكرر لإدخال حرف. فلكتابة الكلمة hello، اضغط 4 مرتين، و3 مرتين، و5 ثلاث مرات، و5 ثلاث مرات أخرى. ثم 6 ثلاث مرات.

### إعداد البريد الإلكتروني

يمكنك أن تبقى على تواصل أثناء التنقل من خلال استخدام البريد الإلكتروني على الهاتف KF750. فعملية إعداد حساب بريد إلكتروني POP3 أو IMAP4 تعتبر عملية بسيطة وسهلة.

- 1 حدد رسائل ثم حدد اعدادات.
- 2 حدد بريد إلكتروني ثم حدد حسابات البريد الإلكتروني.
- 3 يمكنك أن تختار الآن كيفية عمل حسابك:

**العنوان** - أدخل اسماً لهذا الحساب.

اسمي - أدخل اسمك.

اسم المستخدم - أدخل اسم مستخدم الحساب.

كلمة المرور - أدخل كلمة مرور الحساب.

عنوان البريد الإلكتروني - أدخل عنوان البريد الإلكتروني للحساب.

عنوان بريد الرد - أدخل عنوان البريد الإلكتروني 'رد على'.

خادم البريد الصادر - أدخل تفاصيل الحساب.

خادم البريد الوارد - أدخل تفاصيل الحساب.

الحد الأقصى لحجم الاستلام - اختر حد

الحجم لرسائل بريدك الإلكتروني. الحجم

الأقصى هو ميغا بايت واحد.

نوع صندوق البريد - أدخل نوع صندوق البريد أو POP3 أو IMAP4.

حفظ في خادم - اختر ما إذا كنت تريد حفظ رسائل البريد الإلكتروني في خادم. بالنسبة إلى حسابات IMAP4 يتم دوماً حفظ النسخ.

حفظ البريد المرسل في - اختر المكان الذي تريد حفظ البريد الإلكتروني لحسابات IMAP4. بالنسبة إلى حسابات POP3 يتم دوماً حفظ النسخ في الهاتف.

## استرداد بريدك الإلكتروني

يمكنك أن تتحقق من وجود بريد إلكتروني جديد في حسابك تلقائياً أو يدوياً. انظر "تغيير اعدادات البريد الإلكتروني" للتحقق تلقائياً.  
للتحقق يدوياً:

1 حدد رسائل ثم صندوق البريد.

2 حدد الحساب الذي تريد استخدامه.

3 اختر استرداد فيتصل هاتفك بحساب البريد الإلكتروني ويسترد رسائلك الجديدة.

## إرسال بريد إلكتروني باستخدام حسابك الجديد

1 حدد رسائل ثم اختر إنشاء جديد.

2 اختر بريد إلكتروني فيفتح بريد إلكتروني جديد.

3 استخدم علامات التبويب وخيارات لإدخال عنوان المستلم وكتابة رسالتك. استخدم إدراج لإرفاق صور أو ملفات فيديو أو أصوات أو أنواع ملفات أخرى.

4 حدد إرسال فيتم إرسال بريدك الإلكتروني.

**ملاحظه!** باستطاعتك أن ترسل مستندات Word, Excel, PowerPoint, PDF بالبريد الإلكتروني إلى الهاتف KF750 بحيث يمكنك مراجعتها أثناء التنقل.

## تغيير اعدادات البريد الإلكتروني

يمكنك تكييف اعدادات البريد الإلكتروني بحيث يعمل وفقاً لتفضيلاتك.

1 حدد رسائل ثم افتح اعدادات.

نقطة الوصول - اختر نقطة الوصول إلى إنترنت.

استرداد تلقائي - اختر ما إذا كنت ترغب في إحضار رسائل البريد الإلكتروني الجديدة تلقائياً.  
اعدادات متقدمة - اختر ما إذا كنت ترغب في استخدام الاعدادات المتقدمة.

رقم منفذ SMTP - يكون هذا الرقم عادة 25.

منفذ خادم الوارد - يكون هذا الرقم عادة 110 لحسابات POP3 و143 لحسابات IMAP4.

مصادقة SMTP - اختر اعدادات الحماية لخادم البريد الصادر.

اسم مستخدم SMTP - أدخل اسم مستخدم SMTP.

كلمة مرور SMTP - أدخل كلمة مرور SMTP.

تسجيل دخول آمن لـ APOP - اختر لتنشيط تسجيل دخول آمن لـ APOP لحساب POP3.  
تكون حسابات IMAP4 دوماً معيّنة إلى إيقاف.

لقد تم إعداد حسابك الآن. وسيظهر في قائمة الحسابات في حافظة البريد الإلكتروني.

**2** حدد بريد إلكتروني ويمكنك من ثمّ تكييف الإعدادات التالية:

**السماح بعنوان الرد - اختر للسماح بإرسال رسائل "تأكيد القراءة".**

**طلب عنوان الرد - اختر ما إذا كان يجب طلب رسائل "تأكيد القراءة".**

**الفترة الزمنية للاسترداد - اختر مدى تكرار قيام الهاتف KF750 بالتحقق من وجود رسائل بريد إلكتروني جديدة.**

**تضمين الرسالة في إعادة التوجيه والرد - اختر تضمين الرسالة الأصلية أو عدم تضمينها. تضمين المرفق - اختر لتضمين المرفق الأصلي.**

**استرداد تلقائي أثناء التجوال - اختر لاسترداد رسائلك أثناء وجودك في الخارج. أو إيقاف الاسترداد التلقائي.**

**إعلام ببريد إلكتروني جديد - اختر ما إذا كان يجب تنبيهك عند وصول رسائل بريد إلكتروني جديدة.**

**التوقيع - أنشئ توقيعاً على البريد الإلكتروني وشغل هذه الميزة.**

**الأولوية - اختر مستوى الأولوية لرسائل البريد الإلكتروني.**

### حافظات الرسائل

إنّ حافظة الرسائل المستخدمة في الهاتف KM500 تفسر نفسها بنفسها بطريقة معقولة.

**صندوق الوارد -** توضع في صندوق الوارد كل الرسائل التي تستلمها. من هنا يمكنك الرد. وإعادة التوجيه والكثير غير ذلك. انظر أدناه للحصول على التفاصيل.

**صندوق البريد -** توضع في صندوق البريد كل رسائل البريد الإلكتروني التي تستلمها.

**مسودات -** إذا لم يكن لديك الوقت الكافي للانتهاء من كتابة رسالة، فيمكنك أن تحفظ هنا ما قمت به حتى اللحظة.

**صندوق الصادر -** عبارة عن حافظة تخزين مؤقت للرسائل فيما يكون إرسالها جارياً.

**العناصر المرسلّة -** توضع كل الرسائل التي ترسلها في حافظة العناصر المرسلّة.

**حافظتي -** يمكنك إدارة الرسائل في هذه الحافظة.

## إدارة الرسائل

يمكنك استخدام صندوق الوارد لإدارة رسائلك.

**1** حدد رسائل ثم صندوق الوارد.

**2** حدد "خيارات" ثم اختر القيام بما يلي:

رد - إرسال رد على الرسالة المحددة.

إعادة إرسال - إرسال الرسالة المحددة إلى شخص آخر.

مكالمة - إجراء مكالمة صوتية أو مكالمة فيديو مع الشخص الذي أرسل لك الرسالة.

حذف - حذف الرسالة.

إنشاء رسالة جديدة - فتح رسالة جديدة فارغة أو بريد إلكتروني جديد وفارغ.

تحديد/إلغاء تحديد - وضع علامة على رسائلك للحذف المتعدد.

نسخ ونقل - نسخ الرسائل أو نقلها إلى الهاتف أو بطاقة USIM أو حافظاتي.

ترشيح - عرض الرسالة حسب النوع. يؤدي ذلك إلى تجميع رسائل رساله قصيره بشكل منفصل عن رسائل رساله وسائط.

معلومات الرسالة - انظر معلومات إضافية تتعلق بالرسالة. هذه المعلومات تشمل وقت إرسالها وتقرير الاستلام وتقرير القراءة.

إذا شاهدت الرسالة لا توجد مساحة لرسالة

**USIM** فهذا يعني أنه عليك حذف بعض الرسائل من صندوق الوارد.

إذا شاهدت الرسالة لا توجد مساحة كافية

للمراسل فيمكنك حذف إما الرسائل أو الملفات المحفوظة لتوفير مساحة.

## استخدام النماذج

يمكنك إنشاء النماذج لرسائل رساله قصيره

ورساله وسائط التي ترسلها بشكل متكرر. وستعثر على بعض النماذج الموجودة مسبقاً على هاتفك.

ويمكنك تعديل هذه النماذج إذا رغبت في ذلك.

**1** حدد رسائل ثم اختر نماذج.

**2** اختر نماذج نصية أو نماذج وسائط متعددة.

يمكنك حينئذٍ تحديد "خيارات" لتنفيذ إجراءات

تتعلق بالنماذج مثل إضافة جديد، أو تعديل، أو

حذف أو حذف الكل.

01

02

03

04

05

06

07

08

### استخدام الرموز التعبيرية

يمكنك إضفاء الحيوية على رسائلك من خلال استخدام الرموز التعبيرية. وستجد على الهاتف بعض الرموز التعبيرية الشائعة الاستخدام.

**1** حدد رسائل ثم اختر رموز تعبيرية.

**2** حدد "خيارات" لتنفيذ إجراءات تتعلق بالرموز التعبيرية مثل إضافة جديد، أو تعديل، أو حذف أو حذف الكل.

### تغيير اعدادات الرسائل الوسائط

تكون اعدادات الرسائل في الهاتف KF750 معرّفة مسبقاً بحيث يمكنك إرسال الرسائل على الفور. وإذا رغبت في تغيير الاعدادات، فيمكنك القيام بذلك على الشكل التالي.

حدد رسائل ثم اختر اعدادات ثم رسالة نصية. يمكنك إدخال تغييرات على:

رقم مركز الرسائل - أدخل تفاصيل مركز الرسائل.  
تقرير الاستلام - اختر تلقي تأكيد باستلام رسالتك.  
مدة الصلاحية - اختر فترة تخزين رسالتك في مركز الرسائل.

أنواع الرسائل - تحويل النص إلى صوت، أو فاكس، أو X.400 أو بريد إلكتروني.

ترميز الحروف - اختر طريقة ترميز الحروف في رسائلك. ويؤثر هذا الأمر على حجم رسائلك وبالتالي على رسوم البيانات.

إرسال النص الطويل ك- اختر الإرسال ك- رسائل رساله قصيره متعددة أو كرسالة رساله وسائط. تكون اعدادات الرسائل في الهاتف KF750 معرّفة مسبقاً بحيث يمكنك إرسال الرسائل على الفور. وإذا رغبت في تغيير الاعدادات، فيمكنك القيام بذلك على الشكل التالي.

حدد رسائل ثم اختر اعدادات ثم رسالة وسائط متعددة. يمكنك إدخال تغييرات على:

وضع الاسترداد - اختر شبكة محلية أو جواله. إذا اخترت فيما بعد يدوي فستتلقى إعلام برسائل رساله وسائط فقط ويمكنك حينئذٍ أن تقرّر ما إذا كنت ترغب في تنزيلها بشكل كامل.  
تقرير الاستلام - اختر للسماح و/أو طلب تقرير استلام.

01

إشعار بقراءة الرسالة - اختر للسماح و/أو إرسال إشعار بقرء الرسالة.

02

الألوية - اختر مستوى أولوية رسالة رساله وسائط. مدة الصلاحية - اختر فترة تخزين رسالتك في مركز الرسائل.

04

مدة الشريحة - اختر مدة ظهور الشرائح على الشاشة.

05

وقت الاستلام - تسليم رسالتك في وقت محدد.

06

مركز رسائل الوسائط المتعددة - أدخل تفاصيل مركز الرسائل.

07

### تغيير الاعدادات الأخرى

08

حدد رسائل. واختر اعدادات ثم:

خدمة المعلومات - اختر حالة الاستلام، واللغة، وضوابط أخرى.

رسالة الخدمة - اختر استلام أو حظر رسائل الخدمة. كما يمكنك تعيين حماية الرسالة وذلك بإنشاء قوائم مرسلين موثوق بهم وغير موثوق بهم.

## الكاميرا



### التقاط صورة سريعة

- 1 اضغط على المفتاح الموجود في الجانب الأيمن من الهاتف فيظهر محدد المنظر التابع للكاميرا على الشاشة.
- 2 مع الإمساك بالهاتف أفقياً. صوّب العدسة باتجاه موضوع الصورة.
- 3 اضغط برفق على زر الالتقاط فيظهر صندوق البؤرة في وسط شاشة محدد المنظر.
- 4 ضع الهاتف بطريقة يمكنك فيها مشاهدة موضوع الصورة في صندوق البؤرة.
- 5 عندما يتحوّل لون صندوق البؤرة إلى اللون الأخضر، فهذا يعني أن الكاميرا تركز على موضوع الصورة.
- 6 اضغط زر الالتقاط بشكل كامل.

### بعد التقاط الصورة

تظهر الصورة الملتقطة على الشاشة، ويمتد اسم الصورة عبر أسفل الشاشة مع خمسة رموز تحت الجانب الأيمن.

انتقل إلى القائمة السابقة. Back

شاهد الصور التي التقطتها في الألبوم.

أرسل الصورة كرسالة نصية . أو بريد

إلكتروني أو عبر ملاحظه او ارسال الى المدونه.  
انظر الصفحة 33 لمعرفة كيفية إرسال رسالة.  
والصفحة 82 لمعرفة كيفية إرسال الملفات  
واستلامها باستخدام البلوتوث.

التقط صورة أخرى على الفور. وسيتم حفظ صورتك الحالية.


استخدم الصورة كخلفية أو كصورة  
جهة اتصال أو في شاشة بدء التشغيل أو إيقاف  
التشغيل.

احذف الصورة التي قيمت بالتقاطها وأد  
رغبتك في تنفيذ عملية الحذف بالنقر فوق نعم.  
يظهر محدد المنظر من جديد.

**ملاحظة!** في وضع الكاميرا حدد الرمز  
"تشغيل" لفتح ألبوم الصور. انظر الصفحة  
46. عرض الصور المحفوظة. للحصول على  
التفاصيل.

## استخدام الفلاش

يتم تعيين الفلاش بحيث يكون متوقفاً عن التشغيل بشكل افتراضي. ولكن هناك خيارات أخرى.

**1** حدد  من الزاوية العليا اليمنى من محدد المنظر للدخول إلى قائمة الفلاش الفرعية.

**2** هناك ثلاثة خيارات للفلاش:

تشغيل دائم - ستقوم الكاميرا بتقييم الإضاءة المطلوبة لالتقاط صورة جيدة وستستخدم الفلاش كما تقتضي الحاجة.

عند الالتقاط - يضيء فلاش الكاميرا مرتين من أجل التخفيف من العين الحمراء.

إيقاف - لن يضيء فلاش الكاميرا أبداً. ويُعتبر هذا الأمر مفيداً إذا ما رغبت في توفير طاقة البطارية.

**3** المس خيار الفلاش الذي ترغب في استخدامه.

**4** عندما تجري تحديده، تنغلق قائمة الفلاش تلقائياً. وتكون جاهزة لتسمح لك بالتقاط الصورة.


**5** يتغيّر رمز الفلاش الموجود على محدد المنظر وفقاً للوضع الجديد الذي عيّنته للفلاش.


**ملاحظة:** عند الخروج من الكاميرا، سيعود اعداد الفلاش إلى وضع الإيقاف. وستحتاج إلى إعادة تشغيل الفلاش إذا كنت ما تزال بحاجة إليه عند إعادة فتح الكاميرا.

## اعداد السطوع

يُعرف التباين الفرق بين الألوان الفاتحة والداكنة في صورة ما. فتظهر الصورة ذات التباين المنخفض ضبابية. بينما تظهر الصورة ذات التباين العالي أكثر دقة ووضوحاً.

**1** حدد السطوع في اعدادات.

**2** ادفع مؤشر التباين عبر الشريط. نحو 

للحصول على تباين منخفض. وصورة ضبابية أو نحو  للحصول على تباين أعلى. وصورة أوضح.

01

02

03

04

05

06

07

08

## اختيار وضع الالتقاط

- 1 حدد اعدادات لفتح وضع الالتقاط المتوفر.
- 2 اختر من ضمن الخيارات الأربعة:

**لقطة عادية** - هذا هو نوع اللقطة الافتراضي حيث يتم التقاط الصورة بالطريقة العادية. كما تم توضيحه في التقاط صورة سريعة على الصفحة 40.

**لقطات متلاحقة** - يمكنك هذا الخيار من أخذ تسع لقطات تلقائياً بطريقة متتابعة سريعة. انظر استخدام وضع اللقطات المتلاحقة أدناه للحصول على التفاصيل.

**لقطة بإطار** - اختر إطار مرح من ضمن إطارات المرح التي تسمح لك بتحويل صديق إلى قرصان أو تزيين محيطه فقط.

**بانورامية** - يعتبر نوع اللقطة هذا جيداً لالتقاط صورة لمجموعة كبيرة من الأشخاص أو لالتقاط مشهد بانورامي. انظر أخذ لقطة بانورامية على الصفحة 43 للحصول على تفاصيل إضافية.

## استخدام وضع اللقطات المتلاحقة

يُعتبر وضع اللقطات المتلاحقة جيداً لالتقاط صور كائنات متحركة أو في الأحداث الرياضية.

### 1 حدد لقطات متلاحقة.

2 حدد مكان موضوع الصورة في محدد المنظر واضغط على زر الالتقاط كما تفعل لالتقاط صورة عادية.

3 تأخذ الكاميرا تسع لقطات بطريقة متتابعة سريعة وتعرض اللقطة الأولى مع ثمانية صور مصغرة في الجانب الأيسر من الشاشة.

4 حدد اللقطة التي تريد الاحتفاظ بها وذلك بتحديد الصورة المصغرة مرة واحدة لعرضها والمس حفظ لحفظها.

5 تظهر علامة إلى جانب الصورة المصغرة. حدد حفظ للإنهاء.

## استخدام وضع اللقطة بإطار

يمكنك استخدام اللقطة بإطار لتحويل صديق لك إلى قرصان أو فقط لتزيين محيطه بإطار.

### 1 حدد قائمة لقطة بإطار.

2 حدد مكان الموضوع في إطار المرح واضغط على زر الالتقاط.

3 احفظ الصورة بتحديد حفظ.

## أخذ لقطة بانورامية

التقط صوراً من الحياة تماماً كما تظهر باستخدام لقطة بانورامية. تتيح لك الكاميرا التقاط ثلاث صور. كلها متحاذية. ودمجها ضمن صورة كبيرة بحيث يتحوّل عرض الزاوية الواسعة إلى صورة بانورامية.

**1** حدد بانورامية.

**2** التقط الصورة الأولى كما تقوم بذلك عادة. تظهر

نسخة رمادية عن الجانب الأيمن للصورة في محدد المنظر.

**3** عندما تلتقط الصورتين الثانية والثالثة. قم

بمحاذاة النسخة الرمادية للصورة السابقة مع الصورة التالية في محدد المنظر.

**4** في ألبوم الصور. سيتم حفظ الصور كثلاث صور منفصلة وصورة بانورامية واحدة.

ملاحظة: ستظهر الصورة البانورامية مشوهة بعض الشيء في عرض الألبوم وذلك بسبب حجم الصورة.

## استخدام الإعدادات المتقدمة

من محدد المنظر حدد إعدادات. وافتح كل الخيارات "الأخرى" للضوابط المتقدمة.

**الحجم** - غيّر حجم الصورة لتوفير مساحة في

الذاكرة أو التقاط صورة لجهة اتصال ما تكون

معيّنة مسبقاً للحجم الصحيح. انظر تغيير حجم الصورة على الصفحة 45.

**وضع المشاهد** - يمكنك إعداد الكاميرا بحيث

تناسب مع بيئة الاستخدام. اختر من ضمن تلقائي.

وعمودي وأفقي. والليل. وشاطئ. ورياضة. وحفلة.

**السطوع** - عيّن تباين الصورة في محدد المنظر التابع للكاميرا.

**تأثير** - اختر درجة اللون التي تريد تطبيقها على الصورة التي تلتقطها. انظر اختيار درجة اللون على الصفحة 45.

**توازن اللون الأبيض** - يضمن توازن الأبيض ظهور

أي لون أبيض في الصورة كواقعي. لكي تتمكّن

الكاميرا من إعداد توازن اللون الأبيض بشكل صحيح

قد تحتاج إلى تحديد شروط الإضاءة. اختر من ضمن

تلقائي أو ضوء النهار أو غائم أو مضيء أو داخلي.

01

02

03

04

05

06

07

08

من محدد المنظر حدد اعدادات. وافتح كل خيارات المعاينة للضوابط المتقدمة.

الذاكرة المستخدمة - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو في الذاكرة الخارجية.

إخفاء الرموز - حدد ما إذا كنت تريد إخفاء الرموز تلقائياً على جانب محدد المنظر.

تركيز تلقائي - حدد طريقة التركيز.

صوت - حدد صوتاً من ضمن أصوات الغالق الثلاثة.

ملاحظة: المس حفظ دائماً بعد تحديد اعداد جديد لتطبيق التغييرات التي قمت بها.

**ملاحظته!** عندما تنهي تشغيل الكاميرا، تعود كل الاعدادات إلى وضعها الافتراضي. باستثناء حجم الصورة وجودتها. وستحتاج كل الاعدادات غير الافتراضية المطلوبة إلى إعادة التعيين، مثلاً درجة اللون وISO. دقق فيها قبل التقاط صورتك التالية.

**ملاحظته!** تقع قائمة الاعدادات فوق محدد المنظر. وستتمكّن بالتالي من مشاهدة التغييرات المدخلة في الصورة في المعاينة خلف قائمة الاعدادات عندما تقوم بتغيير عناصر ألوان الصورة أو وجودتها. تذكر أنه عليك تحديد حفظ قبل الإنهاء لتطبيق أي تغييرات قمت بها.

المؤقت الذاتي - يسمح لك المؤقت الذاتي بتعيين فترة تأخير بعد ضغط زر الالتقاط. اختر من ضمن 3 ثوان، أو 5 ثوان أو 10 ثوان. يُعتبر هذا الأمر جيداً لالتقاط صورة لمجموعة تريد أن تكون أيضاً جزءاً منها!

وضع اللقطة - انظر الصفحة 42.

ISO - يحدد ISO حساسية جهاز استشعار الضوء في الكاميرا. بقدر ما تكون قيمة ISO عالية، بقدر ما تكون الكاميرا حساسة للضوء. ويُعتبر هذا الأمر مفيداً في الحالات الداكنة عندما لا يكون استخدام الفلاش ممكناً. اختر قيمة ISO من ISO 50، أو ISO 100، أو ISO 200، أو ISO 400 أو ISO 800.

الجودة - غير حجم الصورة لتوفير مساحة في الذاكرة أو التقاط صورة لجهة اتصال ما تكون معيّنة مسبقاً للحجم الصحيح. انظر تغيير حجم الصورة على الصفحة 45.

الماكرو - يسمح لك وضع الماكرو بالنقاط صور قريبة جداً. إذا حاولت أخذ لقطة عن قرب ولكن صندوق البؤرة بقي أحمر اللون، فحاول تشغيل وضع الماكرو.

## تغيير حجم الصورة

بقدر ما يكون عدد عناصر البكسل كبيراً، بقدر ما يكون حجم الملف أكبر. وهذا يعني أن الملف سيحتل مساحة أكبر في الذاكرة. إذا أردت أن يستوعب هاتفك أو بطاقة الذاكرة المزيد من الصور، فيمكنك تعديل عدد عناصر البكسل لجعل الملف أصغر حجماً.

1 من محدد المنظر حدد اعدادات في الزاوية اليسرى السفلى.

2 حدد الحجم.

3 حدد قيمة بكسل من ضمن الخيارات الرقمية

الستة (5M: 2592x1944 أو 3M:

2M: 1600x1200 أو 2048x1536

أو 1M: 1280x960 أو 640x480

أو 320x240) أو اختر الضبط المعين مسبقاً:

جهة اتصال - يؤدي هذا الخيار إلى إعداد الكاميرا لالتقاط صورة وفق الحجم المثالي الذي يمكن إضافته إلى جهة اتصال محفوظة في الهاتف.

4 حدد خيار الحجم الذي تريد استخدامه ثم المس تحديد لتطبيق التغييرات التي أدخلتها. فتُغلق قائمة الاعدادات تلقائياً، وتصبح جاهزة لتمكينك من التقاط الصور.

## اختيار درجة اللون

1 من محدد المنظر حدد اعدادات في الزاوية اليسرى السفلى.

2 حدد تأثير.

3 هناك 12 خياراً لدرجات الألوان: بلا، أو أسود

وأبيض، أو سالب، أو بني داكن، أو أزرق، أو زخرفة.

أو تخطيط، أو مائل إلى البنفسجي، مزرق، أو

أحادي اللون، أو خريطة مجانية، أو معتدلة.

4 المس درجة اللون التي ترغب في استخدامها واختر تحديد.

5 عندما تجري تحديداك، تنغلق قائمة درجة اللون تلقائياً، وتكون جاهزة لتسمح لك بالتقاط الصورة.

**ملاحظة!** يمكنك تغيير صورة تم التقاطها

بالألوان إلى الأسود والأبيض أو البني الداكن

غير أنه لا يمكنك تغيير صورة تم التقاطها

بالأسود والأبيض أو البني الداكن إلى صورة

ملونة.

01

02

03

04

05

06

07

08

## عرض الصور المحفوظة

- 1 يمكنك الوصول إلى صورك المحفوظة من ضمن وضع الكاميرا ومن الألبوم الموجود في أعلى قائمة الرموز.
- 2 يظهر الألبوم على الشاشة.
- 3 حدد الصورة التي تريد مشاهدتها لإحضارها إلى مقدمة الألبوم.
- 4 حدد الصورة مرة ثانية لفتحها بشكل كامل.

## تعيين صورة كشاشة رئيسية أو صورة جهة اتصال


من ألبوم الصور. حدد صورة وحدد استخدام كـ لاستخدام الصورة كشاشة رئيسية أو صورة جهة اتصال.

ملاحظة: يمكن إضافة صور الاسماء إلى الاسماء المحفوظة في هاتفك فقط. وليس في بطاقة .SIM.

**ملاحظة!** باستطاعتك أيضاً الوصول إلى الصور باستخدام شاشة اللمس. اضغط على مفتاح الاختيار الأيسر الموجود في الجانب الأيمن من الهاتف واللمس الرمز صورة. ويمكنك حينئذٍ التمرير عبر الصور من خلال لمس الشاشة.

## كاميرا الفيديو

### التقاط فيديو سريع

- 1 حرك مفتاح وضع الكاميرا إلى . فيظهر محدد المنظر في كاميرا الفيديو على الشاشة.
- 2 مع حمل الهاتف أفقياً. صوّب العدسة باتجاه موضوع الفيديو.
- 3 اضغط على زر الالتقاط مرة واحدة لبدء التسجيل.
- 4 يظهر تسجيل في أسفل محدد المنظر.


### بعد الانتهاء من التقاط الفيديو

ستظهر على الشاشة صورة ثابتة تمثل الفيديو الملتقط. ويمتد اسم الصورة عبر أسفل الشاشة مع خمسة رموز تحت الجانب الأيمن.

 شاهد ألبوم الفيديو.


 شغل الملف.

 سجل الصورة المتحركة مرة أخرى.

 أرسل الفيديو كرسالة رساله وسائط . أو بريد إلكتروني أو عبر ملاحظه او You Tube.

انظر الصفحة 33 لمعرفة كيفية إرسال رسالة.

أو الصفحة 82 لمعرفة كيفية إرسال الملفات واستلامها باستخدام ملاحظه.


 احذف الفيديو الذي قمت بالتقاطه الآن وأكد ما تريد القيام به وذلك بلمس نعم. يظهر محدد المنظر من جديد.


**ملاحظه!** حدد رمز الألبوم لفتح اليوم الفيديو. انظر عرض الصور وملفات الفيديو على الصفحة 51 للحصول على مزيد من التفاصيل.

### اعداد السطوع

يعرف التباين الفرق بين الألوان الفاتحة والداكنة في صورة ما. فتظهر الصورة ذات التباين المنخفض ضبابية. بينما تظهر الصورة ذات التباين العالي أكثر دقة ووضوحاً.

1 حدد 

2 ادفع مؤشر التباين عبر الشريط. نحو 

للحصول على تباين منخفض. وصورة ضبابية أو نحو  للحصول على تباين أعلى. وصورة أوضح.

### استخدام الاعدادات المتقدمة

من محدد المنظر حدد اعدادات. وافتح الاعدادات المتقدمة في الخيارات "الأخرى".

الحجم - غير حجم الفيديو لتوفير مساحة في الذاكرة. انظر تغيير حجم صورة الفيديو أدناه.

01

02

03

04

05

06

07

08

## كاميرا الفيديو

من محدد المنظر حدد اعدادات. وافتح خيارات المعاينة للضوابط المتقدمة.

الذاكرة المستخدمة - اختر ما إذا كنت تريد حفظ ملفات الفيديو في ذاكرة الهاتف أو في الذاكرة الخارجية.

إخفاء رموز - عيّن الكاميرا بحيث تقوم بإخفاء الرموز تلقائياً على جانب محدد المنظر.

الصوت - اختر "كتم" لتسجيل فيديو بدون صوت.

ملاحظة: المس "حفظ" دائماً بعد تحديد اعداد جديد لتطبيق التغييرات التي قمت بها.

**ملاحظة!** عندما تنهي عمل كاميرا الفيديو تعود كافة الاعدادات إلى وضعها الافتراضي. باستثناء حجم الصورة وجودتها. وستحتاج كل الاعدادات غير الافتراضية المطلوبة إلى إعادة التعيين. مثلاً توازن الضوء الأبيض ودرجة اللون. خُقق منها قبل التقاط الفيديو التالي.

وضع المشهد - إعداد الصورة بحيث تناسب مع بيئة الاستخدام. اختر من ضمن تلقائي، وعمودي، وأفقي، والليل، وشاطئ، ورياضة، وحفلة.

تأثير - اختر لون التأثيرات التي تريد تطبيقها على الصورة التي تلتقطها. انظر اختيار لون التأثيرات على الصفحة 49.

توازن اللون الأبيض - يضمن توازن اللون الأبيض ظهور أي لون أبيض في الفيديو كواقعي. لكي تتمكن الكاميرا من اعداد توازن اللون الأبيض بشكل صحيح قد تحتاج إلى تحديد شروط الإضاءة.

اختر من ضمن تلقائي، أو ساطع، أو مشمس، أو فلورسنت أو غائم.

تسجيل خاص - تسجيل الصورة المتحركة بتعيين النوع المتعدد.

الجودة - غيّر حجم الصورة لتوفير مساحة في الذاكرة أو التقاط صورة لجهة اتصال ما تكون معيّنة مسبقاً للحجم الصحيح. انظر تغيير حجم الصورة على الصفحة 45.

نغمة الغالق - حدد صوتاً من ضمن أصوات الغالق الثلاثة.

**⚠️ تحذير:** يتوافق برنامج التعديل الجيد المتوفر على LG KF750 مع كل أنواع ملفات الفيديو باستثناء 640x480. لا تقم بالتسجيل في هذا التنسيق إذا كنت تخطط لتعديل الفيديو.

### اختيار لون التأثيرات

- 1 حدد اعدادات واختر تأثير.
- 2 هناك 12 خياراً لدرجات الألوان: إيقاف، أو أسود وأبيض، أو سالب، أو بني داكن، أو أزرق، أو زخرفة، أو تخطيط، أو مائل إلى البنفسجي، مزرق، أو أحادي اللون. أو خريطة مجانية، أو معتدلة.
- 3 المس درجة اللون التي ترغب في استخدامها وحدد تحديد.
- 4 عندما تجري تحديده، تنغلق قائمة درجة اللون تلقائياً، وتكون جاهزة لتسمح لك بالتقاط الفيديو.

**ملاحظه!** يمكنك تغيير فيديو تم التقاطه بالألوان إلى الأسود والأبيض أو البني الداكن بعد التقاطه، غير أنه لا يمكنك تغيير فيديو تم التقاطه بالأسود والأبيض أو البني الداكن إلى الألوان.

### تغيير حجم صورة الفيديو

بقدر ما يكون عدد عناصر البكسل كبيراً، بقدر ما يكون حجم الملف أكبر. وهذا يعني أن الملف سيحتل مساحة أكبر في الذاكرة، إذا أردت أن يستوعب هاتفك المزيد من ملفات الفيديو. فيمكنك تعديل عدد عناصر البكسل لجعل الملف أصغر حجماً.

- 1 حدد حجم من قائمة الاعدادات.
  - 2 حدد قيمة بكسل من الخيارات الأربعة: 640x480(W) - خيار الشاشة العريضة الأعلى من حيث الجودة. 320x240 - حجم صورة أصغر، وبالتالي حجم ملف أصغر. يُعتبر جيداً لتوفير مساحة في الذاكرة. 176x144 - أصغر حجم للصورة وبالتالي أصغر حجم للملف. 16:9 العرض - خيار الشاشة العريضة.
  - 3 حدد خيار الحجم الذي ترغب في استعماله والمس حفظ لتطبيق التغييرات التي قمت بها، تنغلق قائمة الاعدادات تلقائياً، وتكون جاهزة لتسمح لك بالتقاط الفيديو.
- ملاحظة:** عندما تعرض ملفات الفيديو، تكون سرعة التشغيل بمعدل 30 إطاراً في الثانية، باستثناء 120 إطاراً في الثانية حيث تكون سرعة التشغيل بمعدل 30 إطاراً في الثانية.

## كاميرا الفيديو

### مشاهدة ملفات الفيديو المحفوظة

- 1 حدد رمز الألبوم. يظهر الألبوم على الشاشة.
- 2 حدد الفيديو الذي تريد عرضه مرة واحدة لإحضاره إلى مقدمة الألبوم.
- 3 حدد الفيديو مرة ثانية لفتحه بشكل كامل.

## الصور وملفات الفيديو

### تعديل الصور في قائمة خيارات في ألبوم الصور

يمكنك عرض الصور وتعديلها باستخدام قائمة "خيارات" في ألبوم الصور.

عرض - عرض الصورة.

إرسال - إرسال الصورة إلى صديق.

حذف - حذف الصورة.

استخدام ك - تعيين الصورة ك شاشة رئيسية /

صورة جهة اتصال / صورة بدء التشغيل أو إيقاف التشغيل.

إعادة تسمية - إعادة تسمية الصورة.

تعديل - تعديل الصورة.

طباعة - طباعة ملف صورة عبر PictBridge أو ملاحظه.

عرض التاريخ - تعيين خيار عرض التاريخ.

### تعديل ملفات الفيديو في قائمة خيارات في ألبوم ملفات الفيديو

يمكنك عرض الصور وتعديلها باستخدام قائمة "خيارات" في ألبوم ملفات الفيديو.

تشغيل - تشغيل الفيديو.

إرسال - إرسال الفيديو إلى صديق.

حذف - حذف الفيديو.

استخدام ك - تعيين الفيديو كغمة رنين.

إعادة تسمية - إعادة تسمية الفيديو.

تعديل - تعديل الفيديو.

عرض التاريخ - تعيين خيار عرض التاريخ.

### عرض الصور وملفات الفيديو

1 بعد التقاط الصورة أو الفيديو. حدد ألبوم.

2 يظهر الألبوم على الشاشة.

3 حدد الصورة أو الفيديو الذي تريد عرضه مرة واحدة لإحضاره إلى مقدمة الألبوم.

4 حدده مرة أخرى لفتحه بالكامل.

5 يبدأ تشغيل ملفات الفيديو تلقائياً. لإيقاف التشغيل مؤقتاً حدد .

**ملاحظه!** يمكنك إعادة تسمية فيديو أو صورة.

حدد الصورة أو الفيديو. ثم حدد خيارات واختر حذف. حدد نعم للتأكيد.

### اعداد مستوى الصوت عند عرض فيديو

لضبط مستوى الصوت عند تشغيل فيديو عندما


لا تعمل الشاشة على الهاتف في وضع الفيديو

- يرجى التحقق. بشكل بديل. استخدم مفتاح

السهم للأعلى أو للأسفل على لوحة اللمس.

### التقاط صورة من فيديو

1 حدد الفيديو الذي تريد التقاط صورة منه.

2 اضغط على  لإيقاف الفيديو مؤقتاً على

الإطار الذي تريد تحويله إلى صورة والمس الجانب

الأيمن من الشاشة لفتح قائمة الخيارات.

3 من قائمة "خيارات" حدد التقاط.

4 تظهر الصورة على الشاشة مع اسم الصورة

المعين لها.

01

02

03

04

05

06

07

08


## الصور وملفات الفيديو

5 حدد موافق.

6 حدد رجوع للعودة إلى الألبوم.

7 تُحفظ الصورة في حافظة "ملفاتي" وتظهر في الألبوم. ستحتاج إلى الخروج من الألبوم ثم إعادة فتحه لكي تظهر الصورة.

### إرسال صورة أو فيديو من الألبوم

1 حدد صورة أو فيديو مرتين لفتحه. إذا حددت فيديو، فاضغط على  عندما يبدأ تشغيله.

**ملاحظة!** يمكنك إعادة تسمية فيديو أو صورة. حدد الصورة أو الفيديو. ثم حدد خيارات واختر ملف - إعادة التسمية. أدخل اسماً جديداً للصورة أو الفيديو.

**⚠ تحذير:** قد لا تعمل بعض الوظائف بشكل صحيح إذا لم يكن ملف الوسائط المتعددة مسجلاً في الهاتف.

2 حدد مفتاح الاختيار الأيسر لفتح قائمة "خيارات".

3 حدد إرسال واختر الطريقة التي تريد من خلالها إرسال الفيديو أو الصورة: رسالة، أو بريد إلكتروني أو ملاحظته.

4 يفتح تطبيق المراسلات المختار بحيث يمكنك إرسال الفيديو أو الصورة.

ملاحظة: قد يحتاج الفيديو أو الصورة إلى تغيير الحجم قبل أن يمكن إرساله بواسطة رسالة وسائط. فقد تكون بعض ملفات الفيديو ذات حجم كبير جداً لكي يتم إرسالها بواسطة رسالة وسائط. وفي مثل هذه الحالة عليك تحديد أحد خيارات الإرسال الأخرى.

## مشاهدة الصور كعرض شرائح

يُظهر وضع عرض الشرائح كل الصور الموجودة في الألبوم كل صورة على حدة كعرض شرائح. ولا يمكن عرض ملفات الفيديو كعرض شرائح.

**1** اختر الصورة التي تريد بدء عرض الشرائح بها والمسها مرتين لفتحها.

**2** حدد مفتاح الاختيار الأيسر لفتح قائمة "خيارات".

**3** حدد عرض شرائح فيبدأ العرض.

## تعيين صورة ك شاشة رئيسية

**1** حدد الصورة التي ترغب في تعيينها كخلفية للشاشة لفتحها.

**2** حدد مفتاح الاختيار الأيسر لفتح قائمة "خيارات".

**3** حدد استخدام ك - شاشة رئيسية.


## تعديل الصور


هناك الكثير من الأشياء الرائعة التي يمكنك تطبيقها على صورك لتغييرها. أو الإضافة إليها أو إضفاء بعض الحيوية إليها.

**1** افتح الصورة التي ترغب في تعديلها وحدد خيارات.


**2** حدد تعديل.

**3** حدد رمزاً لتكييف صورتك:


 تدوير الصورة إلى اليسار أو إلى اليمين.

 تغيير حجم الصورة.


 إدراج رمز في الصورة.


 اقتصاص الصورة إلى 640X480 أو 320X240 أو 176X146.

 تشويه الصورة.

 تغيير درجة اللون في الصورة إلى أسود وأبيض. أو بني داكن أو لون سالب.

 تغيير إطار أو إضافته إلى الصورة.

 عكس الصورة إلى صورة معكوسة.

 تغيير الصورة باستخدام تغيير الشكل. أو مرآة المرشح أو الضوء الكشاف.

01

02

03

04

05

06

07

08

## الصور وملفات الفيديو

### إضافة تأثير إلى صورة

1 من شاشة التعديل. حدد "تأثير خاص" أو "تأثير الإطارات".

2 اختر تطبيق أي خيار من الخيارين التاليين على الصورة:

تأثير خاص - تغيير لون الصورة إلى أسود وأبيض، أو بني داكن أو لون سالب.

تأثير الإطارات - إضافة إطار إلى الصورة. حدد نوع الإطار المطلوب. حدد موافق بحيث يظهر الإطار المختار موضوعاً فوق صورتك.

3 للتراجع عن تأثير ما عليك إلا تحديد تراجع.

**ملاحظة!** يمكنك استخدام أكثر من تأثير واحد على صورة. باستثناء تأثير الألوان.

2 إذا لم يتم الكشف عن الوجه في الصورة. فستظهر الرسالة المنبثقة "لم يتم الكشف عن الوجه" ويتم إلغاء تأثير تغيير الشكل.

3 إذا تم الكشف عن الوجه، فسيتم تطبيق تأثير تغيير الشكل الأول على الصورة.

4 حدد نمط تغيير الشكل الذي تريد استخدامه على الصورة.

5 حدد مدى قوة تغيير الشكل.

6 حدد موافق لتطبيق التغييرات.

### تطبيق الضوء الكشاف على صورة

1 حدد الموقع المطلوب على الصورة.

2 حدد حجم الضوء الكشاف.

3 حدد موافق لتطبيق التغييرات.

**ملاحظة!** استخدم مرآة المرح لنسخ الجانب الأيسر من الصورة على الجانب الأيمن لإنشاء صورة مرحة.

**ملاحظة!** يمكنك التراجع عن أكثر من تأثير واحد ثم تطبيقه على صورة. باستثناء تغيير الحجم. إذا سبق أن تم تطبيق أي تأثير آخر قبل تطبيق تأثير تغيير الحجم، فسيتم حفظ التأثير المطبق حالياً وتأثير تغيير الحجم. وسيتم حينئذٍ إعادة تعيين عدد عمليات التراجع.

### تغيير شكل صورة

يُعتبر تغيير شكل الصورة أمراً رائعاً لتغيير تعابير وجوه الأصدقاء، أو فقط لتشويه صورة بهدف الحصول على تأثير فني.

1 من شاشة التعديل حدد المزيد ثم حدد تغيير الشكل.

## تعديل ملفات الفيديو

تتوفر ميزات التعديل لكل أنواع الفيديو باستثناء 640x480. لا تقوم بالتسجيل في هذا التنسيق إذا كنت تخطط لتعديل الفيديو.

## تشذيب طول الفيديو

1 اختر الفيديو الذي ترغب في تعديله، والمس خيارات.

2 حدد تعديل واختر تشذيب.

3 حدد بدء وإنهاء لوضع علامة على نقطتي البداية والنهاية الجديدتين.

## دمج ملفي فيديو معاً

1 اختر الفيديو الذي ترغب في تعديله، وحدد خيارات.

2 حدد تعديل واختر دمج الفيديو.

3 تفتح حاوية ملفات الفيديو. اختر الفيديو الذي تريد دمجه واختر تحديد.

4 حدد تأثير لاختيار طريقة دمج ملفات الفيديو معاً: بلا، أو تلاشي، أو تسليط تكبير/تصغير، أو بيضاوي، أو إظهار، أو إخفاء، أو رقعة الداما أو حل.

5 اضغط على  لحفظ ملف الفيديو الجديد المدمج. اختر الحفظ فوق الملف الأصلي أو كملف جديد.

6 كرر هذه الخطوات لدمج المزيد من ملفات الفيديو.

## دمج صورة بفيديو

1 اختر الفيديو الذي ترغب في تعديله، وحدد خيارات.

2 حدد تعديل واختر دمج الصور.

3 تفتح الصور. اختر الصورة التي تريد دمجها بالفيديو واختر تحديده.

4 حدد الصورة التي تريد دمجها وادفعها إلى نهاية الفيديو أو بدايته.

5 حدد تأثير لاختيار طريقة دمج الصورة والفيديو معاً: بلا، أو تلاشي، أو تسليط تكبير/تصغير، أو بيضاوي، أو إظهار، أو إخفاء، أو رقعة الداما أو حل.

6 اضغط على . اختر الحفظ فوق الملف الأصلي أو كملف جديد.

7 كرر هذه الخطوات لدمج المزيد من الصور.

01

02

03

04

05

06

07

08

## الصور وملفات الفيديو

### إضافة نص إلى فيديو

1 اختر الفيديو الذي ترغب في تعديله. وحدد

خيارات.

2 حدد تعديل واختر طبقة النص.

3 أدخل النص باستخدام لوحة المفاتيح وحدد

حفظ.

4 حدد بدء وضع علامة على المكان حيث تريد

ظهور النص.

5 حدد ناحية الشاشة التي تريد ظهور النص فيها.

6 حدد إلغاء لوضع علامة على المكان حيث تريد

اختفاء النص.

7 حدد حفظ لحفظه. اختر الحفظ فوق الملف

الأصلي أو كملف جديد.

8 كرر هذه الخطوات لإضافة المزيد من النص.

### إنشاء طبقة من صورة

1 اختر الفيديو الذي ترغب في تعديله. وحدد

خيارات.

2 حدد تعديل واختر طبقة النص.

3 تفتح الصور. اختر الصورة التي تريد أن تغطي

الفيديو واختر تحديد.

4 حدد بدء وضع علامة على المكان حيث تريد

ظهور الصورة.

5 حدد ناحية الشاشة التي تريد ظهور الصورة

فيها. إذا كانت الصورة كبيرة جداً فقد تغطي

الشاشة بأكملها. وليس فقط المنطقة

المحددة.

6 حدد إلغاء لوضع علامة على المكان حيث تريد

اختفاء الصورة.

7 حدد حفظ لحفظه. اختر الحفظ فوق الملف

الأصلي أو كملف جديد.

8 كرر هذه الخطوات لإضافة المزيد من الصور.

## إضافة تسجيل صوتي

1 اختر الفيديو الذي ترغب في تعديله. وحدد

خيارات.

2 حدد تعديل واختر تسجيل صوتي. ستأثر جودة

الصوت الأصلي عند إضافة تسجيل صوتي.

3 حدد نعم للمتابعة.

4 اضغط على تشغيل لعرض الفيديو. عندما تصل

إلى الجزء الذي ترغب في تسجيل صوتك فوجه.

اضغط على توقف مؤقت.

5 اضغط على إنهاء لإيقاف التسجيل والتشغيل.

6 حدد حفظ بليبه نعم للحفظ. اختر الحفظ فوق

الملف الأصلي أو كملف جديد.

7 كرر هذه الخطوات لإضافة المزيد من

التسجيلات الصوتية إلى الفيديو.

## إضافة مسار صوتي إلى الفيديو

1 اختر الفيديو الذي ترغب في تعديله. وحدد

خيارات.

2 حدد تعديل واختر دبلجة الصوت.

3 افتح حافظة الأصوات. اختر المسار الذي تريد

إضافته إلى الفيديو والمس تحديد.

4 سيتم محو تسجيل الصوت الأصلي من الفيديو.

5 إذا كان الصوت أقصر من الفيديو فاختر ما إذا

كنت ترغب في تشغيله مرة واحدة أو تكراره.

6 اختر الحفظ فوق الملف الأصلي أو كملف جديد.

## تغيير سرعة الفيديو

1 اختر الفيديو الذي ترغب في تعديله. وحدد

خيارات.

2 حدد تعديل واختر قياس الوقت.

3 حدد خياراً من ضمن خيارات السرعة الأربعة: 4x

أو 2x أو 1/4 x أو 1/2 x.

4 اختر الحفظ فوق الملف الأصلي أو كملف جديد.

01

02

03

04

05


06

07

08

## الصور وملفات الفيديو

### إضافة تأثير خافت

- 1 افتح الفيديو الذي ترغب في تعديله، وحدد  ثم حدد خيارات.
- 2 حدد تعديل واختر تأثير خافت.
- 3 اختر الحفظ فوق الملف الأصلي أو كملف جديد.
- 4 يظهر الفيديو في البداية بشكل تدريجي ويتلاشى في النهاية.

## الوسائط المتعددة

يمكنك تخزين أية ملفات وسائط متعددة في ذاكرة الهاتف في شبائني بحيث يتوفر لديك الوصول السهل إلى كل الصور والأصوات وملفات الفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. الفائدة من استخدام بطاقة الذاكرة هي أنها تسمح لك بتحرير مساحة على ذاكرة الهاتف.

### صور

تحتوي الصور على قائمة بالصور تتضمن الصور الافتراضية المحملة مسبقاً في هاتفك. وصوراً قمت أنت بتنزيلها وصوراً تم التقاطها على كاميرا الهاتف.

### خيارات قائمة الصور

تتوقف الخيارات المتوفرة لك في الصور على نوع الصورة التي حددتها. ستتوفر كل الخيارات بالنسبة للصور التي التقطتها على كاميرا الهاتف. أما الخيارات التالية استخدام كم. وطباعة، وفرز حسب عرض الشبكة (لائحة) ومدير الذاكرة فستتوفر للصور الافتراضية فقط.

إرسال - إرسال الصورة إلى صديق.

استخدام ك - تعيين الصورة بحيث تظهر على هاتفك في أوقات معينة.

نقل - نقل صورة من ذاكرة الهاتف إلى بطاقة ذاكرة أو العكس بالعكس.

نسخ - نسخ صورة من ذاكرة الهاتف إلى بطاقة ذاكرة أو العكس بالعكس.

حذف - حذف صورة.

تحديد/إلغاء تحديد - تحديد ملفات متعددة.

طباعة عبر - طباعة صورة بواسطة PictBridge أو ملاحظه.

ملف - تغيير اسم الملف أو عرض معلوماته.

عرض شرائح - بدء عرض شرائح.

ترتيب حسب - فرز الصور في ترتيب معين.

عرض الشبكة/ عرض اللائحة - مشاهدة كل صورة في نوع عرض الشبكة أو عرض اللائحة.

مدير الذاكرة - عرض حالة الذاكرة.

01

02

03

04

05

06

07

08

## الوسائط المتعددة

### إرسال صورة

- 1 حدد أشيائي ثم اختر الصور.
- 2 حدد الصورة التي تريد إرسالها والمس خيارات.
- 3 حدد إرسال واختر من ضمن رسالة أو بريد إلكتروني أو ملاحظه.
- 4 إذا اخترت رسالة أو بريد إلكتروني. فسيتم إرفاق صورتك بالرسالة وبمكث كتابة الرسالة وإرسالها بشكل عادي. إذا اخترت ملاحظه. فسُتطلب بتشغيل ملاحظه وسيبحث الهاتف عن جهاز لإرسال الصورة إليه.

### استخدام صورة

يمكنك اختيار الصور لاستخدامها كخلفيات للشاشة وكشاشات توقف أو حتى لتعريف المتصل.

**ملاحظه!** لكي تقوم بسرعة بحذف أي ملف في "ملفاتي". حدده مرة واحدة بحيث يتم تمييزه بواسطة رأس المؤشر واضغط على مفتاح المشغل C. أكد العملية بتحديد نعم.

- 1 حدد أشيائي ثم الصور.
- 2 حدد الصورة ثم المس خيارات.
- 3 حدد استخدام كـ واختر من ضمن:
  - خلفية - تعيين خلفية لشاشة وضع الانتظار.
  - مكالمة صادرة - تعيين صورة بحيث تظهر أثناء المكالمات الصادرة.
  - صورة لجهات الاتصال - تعيين صورة إلى شخص معين في قائمة الاسماء المتوفرة لديك بحيث تظهر صورته عند اتصاله بك.
  - صورة بدء التشغيل - تعيين صورة بحيث تظهر عند تشغيل الهاتف.
  - صورة إيقاف التشغيل - تعيين صورة بحيث تظهر عند إيقاف تشغيل الهاتف.

## نقل صورة أو نسخها

يمكنك نقل صورة أو نسخها بين ذاكرة الهاتف وبطاقة الذاكرة، ويمكنك القيام بذلك إما لتحرير بعض المساحة في إحدى وحدات الذاكرة أو لمنع فقدان الصور.

**1** حدد اشيائي ثم الصور.

**2** حدد صورة وحدد خيارات.

**3** حدد نقل أو نسخ.

## تعديل صورة

يمكنك تعديل الصورة باستخدام قائمة خيارات.

**1** حدد قائمة وسائط متعددة.

**2** حدد محرر المحتوى.

**3** حدد محرر الصورة واختر من ضمن عدة خيارات.

انظر الصفحة 53 للحصول على التفاصيل.

## تحديد صور وإلغاء تحديدها

إذا أردت نقل عدة صور في الوقت نفسه، أو نسخها، أو إرسالها أو حذفها، فعليك أولاً تعريفها وذلك بتحديدتها من خلال وضع علامة اختيار عليها.

**1** حدد اشيائي ثم الصور.

**2** حدد خيارات ثم تحديد/إلغاء تحديد.

**3** تظهر خانة إلى يسار كل صورة، إذا حددت صورة فستظهر علامة اختيار في الخانة لتحديدها.

**4** لإلغاء تحديد صورة، حدد الصورة مرة أخرى بحيث تختفي علامة الاختيار من الخانة.

**5** بعد الانتهاء من تحديد كل الصور المناسبة.

اختر أحد الخيارات لتطبيقه على كل الصور.

## إنشاء عرض شرائح

إذا أردت مشاهدة كل الصور الموجودة على الهاتف أو ترحيب ما لديك، فيمكنك إنشاء عرض شرائح يوفر عليك عملية فتح كل صورة وإغلاقها بشكل فردي.

**1** حدد اشيائي ثم الصور.

**2** حدد خيارات ثم عرض شرائح.

01

02

03

04

05

06

07

08

### التحقق من حالة الذاكرة

يمكنك التحقق من حالة الذاكرة لمعرفة المساحة التي استخدمتها والمساحة المتبقية للاستخدام.

**1** حدد اشيائي ثم الصور.

**2** حدد خيارات ثم مدير الذاكرة.

**3** اختر ذاكرة الهاتف أو ذاكرة خارجية.

**ملاحظة:** إذا لم تتوفر لديك بطاقة ذاكرة مدخلة في الهاتف، فلن تتمكن من تحديد ذاكرة خارجية.

### الأصوات

تحتوي حافظة الأصوات على الأصوات الافتراضية والتسجيلات الصوتية. ومن هنا يمكنك إدارة الأصوات، أو إرسالها أو تعيينها كنعيمات رنين.

### استخدام صوت

**1** حدد اشيائي ثم أصوات.

**2** حدد الأصوات الافتراضية أو التسجيلات الصوتية.

**3** حدد صوتاً وحدد تشغيل للاستماع إليه.

**4** حدد خيارات وحدد استخدام كـ.

**5** اختر من ضمن نغمة رنين الصوت ونغمة رنين الفيديو ونغمة رنين الرسالة وصوت بدء التشغيل وصوت إيقاف التشغيل.

### ملفات الفيديو

تعرض حافظة مقاطع الفيديو قائمة بملفات الفيديو التي تم تنزيلها إلى هاتفك وملفات الفيديو التي قمت بتسجيلها على هاتفك.

### مشاهدة فيديو

**1** حدد اشيائي ثم حافظة مقاطع الفيديو.

**2** حدد فيديو واضغط على تشغيل.

**ملاحظته!** لكي تقوم بسرعة بحذف أي ملف في "ملفاتي"، اضغط عليه مرة واحدة بحيث يتم تمييزه بواسطة رأس المؤشر واضغط على مفتاح المشغل. **C** أكد العملية بتحديد نعم.

## استخدام خيارات بينما الفيديو متوقف مؤقتًا

حدد خيارات أثناء تشغيل وضع التوقف المؤقت واختر من ضمن:

عرض أفقي - عرض الفيديو في لقطة كاملة.

كتم/إزالة الكتم - تشغيل/إيقاف الصوت.

التقاط - التقاط الإطار المجدد كصورة.

تكرار - تكرار ملف الفيديو.

معلومات الملف - عرض تفاصيل الاسم، والحجم،

والتاريخ، والوقت، والنوع، والمدة، والأبعاد، والحماية

وحقوق النشر.

إرسال - إرسال الفيديو في رسالة أو بريد إلكتروني

أو عبر البلوتوث.

حذف - حذف الفيديو.

استخدام ك- استخدام كنغمة رنين الصوت/  
الفيديو

## إرسال فيديو كليب

1 حدد فيديو وحدد خيارات.

2 حدد إرسال واختر من ضمن رسالة، أو بريد

إلكتروني أو ملاحظه.

3 إذا اخترت رسالة أو بريد إلكتروني، فسيتم إرفاق

الفيديو كليب بالرسالة ويمكنك كتابة الرسالة

وإرسالها كالمعتاد. أما إذا اخترت البلوتوث،

فستطالب بتشغيل ملاحظه وسيبحث الهاتف

عن جهاز لإرسال الفيديو إليه.

## استخدام فيديو كليب كنغمة رنين

1 حدد فيديو وحدد خيارات.

2 حدد استخدام ك- واختر من ضمن نغمة رنين

الصوت أو نغمة رنين الفيديو.

## استخدام قائمة خيارات الفيديو

من حافظة مقاطع الفيديو. يمكنك التحديد من

ضمن الخيارات التالية:

إرسال - إرسال فيديو إلى صديق.

استخدام ك- - تعيين فيديو كنغمة رنين.

نقل - نقل فيديو كليب من ذاكرة الهاتف إلى بطاقة

ذاكرة أو العكس بالعكس.

01

02

03

04

05

06

07

08

نسخ - نسخ فيديو كليب من ذاكرة الهاتف إلى بطاقة ذاكرة أو العكس بالعكس.

حذف - حذف الفيديو.

تحديد/إلغاء تحديد - تحديد ملفات متعددة.

ملف - تعديل اسم الملف وعرض معلوماته.

إنشاء حافظه جديدة - إنشاء حافظه جديدة ضمن حافظه ملفات الفيديو.

ترتيب حسب - فرز ملفات الفيديو في ترتيب معين.

عرض الشبكة/ عرض اللائحة - عرض قائمة

خيارات حسب نوع عرض الشبكة أو عرض اللائحة.

مدير الذاكرة - عرض حالة الذاكرة.

### الادوات

يمكنك تنزيل ألعاب وتطبيقات إلى هاتفك تساهم

في تسليتك عندما يكون لديك بعض الوقت

للقيام بذلك.

### الاستمتاع بقائمة M-Toy

يمكنك الاستمتاع بسنة ألعاب افتراضية تشمل:

**Magic Ball, Homerun Derby, Dart, Fishing, Maze, Hammer.**

حول - عرض معلومات حول اللعبة.

اعداد - تعيين الصوت والاهتزاز عند تنشيط لعبة.

إعادة تعيين البيانات - إعادة تعيين كل الاعدادات.

إنهاء - إنهاء لعبة.

### تنزيل لعبة أو تطبيق

**1** حدد قائمة ألعاب للألعاب وقائمة تطبيقات للتطبيقات.

**2** حدد تنزيل ألعاب / تطبيقات واضغط على اتصال.

**3** ستتصل بمدخل ويب الذي يمكنك البحث منه عن لعبة لتنزيلها.

**ملاحظه!** لكي تقوم بسرعة بحذف أي ملف

في "ملفاتي" المسه مرة واحدة بحيث يتم

تمييزه بواسطة رأس المؤشر واضغط على

مفتاح المشغل **C** . أكد العملية بالضغط

على نعم.

## لعب لعبة

1 حدد قائمة ألعاب.

2 حدد لعبة والمس تشغيل.

## عرض ملف SWF/SVG

1 حدد ملفاتي ثم محتويات الفلاش.

2 حدد الملف واضغط على تشغيل.

## استخدام قائمة خيارات الألعاب

من حافظتي الادوات. تتوفر الخيارات التالية:


إنشاء حافظة جديدة - إنشاء حافظة ضمن قائمة "الألعاب وتطبيقات".

ترتيب حسب - فرز الادوات حسب التاريخ، أو الحجم أو الاسم.

مدير الذاكرة - عرض حالة الذاكرة.

**ملاحظه!** باستطاعتك أيضاً الوصول إلى

الألعاب باستخدام شاشة اللمس. اضغط على

المفتاح  الموجود في الجانب الأيمن من

الهاتف والمس الرمز ألعاب. ويمكنك حينئذٍ

الوصول إلى الألعاب من خلال لمس الشاشة.

## محتويات الفلاش

تحتوي حافظة محتويات الفلاش على كل محتويات

الفلاش الافتراضية وتلك التي قمت بتنزيلها.

## استخدام خيارات عرض الملف / SWF SVG

حدد خيارات أثناء تشغيل وضع التوقف المؤقت واختار من ضمن:

تشغيل/توقف مؤقت - إيقاف التشغيل مؤقتاً أو استئنافه.

عرض ملء الشاشة/ عرض أفقي -

عرض الملف SWF/SVG في وضع عرض ملء

الشاشة أو العرض الأفقي (يظهر هذا الخيار فقط عند تحديد خيارات دون توقف مؤقت).

كتم/إزالة الكتم - تشغيل/إيقاف الصوت.

استخدام كخلفية - تعيين الملف كخلفية.

معلومات الملف - عرض اسم الملف. وحجمه.

وتاريخه. ووقته. ونوعه وحمايته.

## مستندات

من قائمة مستندات. يمكنك عرض كل ملفات

المستندات. من هنا يمكنك عرض ملفات Excel. و

PowerPoint، Word، Text، و pdf.

01

02

03

04

05

06

07

08

### نقل ملف إلى الهاتف

تُعتبر تقنية ملاحظه الطريقة الأكثر سهولة على الأرجح لنقل ملف من الكمبيوتر إلى هاتفك. كما يمكنك استخدام LG PC Suite عبر كبل المزامنة. انظر الصفحة 76 للحصول على التفاصيل.

لنقل باستخدام ملاحظه:

- 1 تأكد من تشغيل ملاحظه على الهاتف والكمبيوتر ومن كونهما مرتبطين بالنسبة إلى بعضهما البعض.
- 2 استخدم الكمبيوتر لإرسال الملف عبر ملاحظه.
- 3 عندما يتم إرسال الملف سيترتب عليك قبوله على الهاتف وذلك بتحديد موافق.
- 4 يجب أن يظهر الملف في حافظة المستندات أو أخرى.

### عرض ملف

- 1 حدد أشيائي ثم مستندات.
- 2 حدد مستنداً واختر عرض.

### أخرى


تُستخدم الحافظة أخرى لتخزين ملفات ليس عبارة عن صور، أو أصوات، أو ملفات فيديو، أو ألعاب أو تطبيقات، وهي تُستخدم بالطريقة نفسها التي يتم بها استخدام حافظة المستندات. وقد تجد أن الملفات تظهر في حافظة أخرى عوضاً عن ظهورها في حافظة المستندات وهذا عندما تنقلها من الكمبيوتر إلى هاتفك. إذا حدث مثل هذا الأمر فيمكنك نقلها.

لنقل ملف من الحافظة أخرى إلى حافظة المستندات:

- 1 حدد ملفاتي ثم أخرى.
- 2 حدد ملفاً ثم خيارات.
- 3 حدد نقل.

## صانع الأفلام

يسمح لك صانع الأفلام بإنشاء عرض شرائح للصور تضاف الموسيقى إليه.

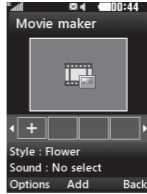

## إنشاء فيلم

1 انتقل إلى الوسائط المتعدده وحدد صانع الأفلام.

2 حدد **+** لإضافة صورة. اختر الصور التي تريد تضمينها ثم حدد تم في خيارات.

3 حدد قائمة نمط لاختيار نمط للفيلم. حدد من ضمن:

زهرة

قمر

طاووس

4 حدد تشغيل لمشاهدة ما أنشأته.

## الموسيقى

يكون مشغل MP3 مضمناً في الهاتف LG KF750 بحيث يمكنك تشغيل كل أنواع الموسيقى المفضلة لديك. للوصول إلى مشغل الموسيقى. حدد موسيقى من القائمة الرئيسية. من هنا يمكنك الوصول إلى عدد من الحافظات: تم تشغيلها مؤخراً - عرض كل الأغاني التي قمت بتشغيلها مؤخراً.

الموسيقى - كل أنواع الموسيقى:

كافة المسارات - تحتوي على كل الأغاني الموجودة في هاتفك.

الفنانون - يمكنك استعراض مجموعتك الموسيقية حسب الفنان.

الألبومات - يمكنك استعراض مجموعتك الموسيقية حسب الألبوم.

الأنواع - يمكنك استعراض مجموعتك الموسيقية حسب النوع.

قوائم التشغيل - تحتوي على أي قائمة تشغيل أنشأتها.

عشوائيات المسارات - الاستماع إلى الموسيقى بترتيب عشوائي.

01

02

03

04

05

06

07




08

### نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر ملاحظه أو كبل المزامنة. كما يمكنك استخدام LG PC Suite. انظر الصفحة 76 للحصول على التفاصيل. للنقل باستخدام ملاحظه:

- 1 تأكد من تشغيل ملاحظه على الجهازين ومن كونهما مرئيين بالنسبة إلى بعضهما البعض.
- 2 حدد ملف الموسيقى على الجهاز الآخر واختر إرساله عبر ملاحظه.
- 3 عندما يتم إرسال الملف سيترتب عليك قبوله على الهاتف وذلك بلمس موافق.
- 4 يجب أن يظهر الملف في الموسيقى → كل المسارات.

### تشغيل أغنية

- 1 حدد الموسيقى. ثم كل المسارات.
- 2 حدد الأغنية التي تريد تشغيلها واختر تشغيل.
- 3 اضغط على  لإيقاف تشغيل الأغنية مؤقتاً.
- 4 المس  (يمين) للانتقال إلى الأغنية التالية.
- 5 المس  (يسار) للانتقال إلى الأغنية السابقة.

### استخدام الخيارات أثناء تشغيل

#### الموسيقى

حدد خيارات واختر من ضمن:

تصغير - جعل شاشة مشغل الموسيقى تختفي بحيث يمكنك متابعة استخدام الهاتف بشكل عادي.

الانتقال إلى الموسيقى - نقل الملف إلى الموسيقى.

تكرار - تكرار المسار المحدد.

عشوائي - الاستماع إلى الموسيقى بترتيب عشوائي.

الأكواليزر - تعيين قائمة الأكواليزر.

المرئيات - حدد التأثيرات المرئية.

إضافة إلى قائمة التشغيل - إضافة الملف إلى قائمة التشغيل.

معلومات الملف - عرض اسم الأغنية، وحجمها، وتاريخها، ووقتها، ومدتها، وحماية وحقوق النشر الخاصة بها.

إرسال - إرسال الأغنية كرسالة أو عبر ملاحظه.

حذف - حذف الأغنية.

استخدام كـ - استخدام الأغنية كإحدى نغمات الرنين.

## إنشاء قائمة تشغيل

يمكنك إنشاء قوائم التشغيل الخاصة بك وذلك بإنشاء مجموعة مختارة من الأغاني من حاوية كل المسارات.

**1** حدد الموسيقى. ثم قوائم التشغيل.

**2** حدد إضافة، وأدخل اسم قائمة التشغيل واضغط على  حفظ.

**3** فتظهر حاوية كل المسارات. حدد كافة الأغاني التي تريد تضمينها في قائمة التشغيل. فتظهر علامة اختيار إلى جانب اسم الملف.

لتشغيل قائمة تشغيل. حددها واختر تشغيل.

ملاحظة: لإضافة قائمة تشغيل ثانية. حدد خيارات ثم إضافة قائمة تشغيل جديدة.

## تعديل قائمة تشغيل

قد ترغب. من وقت إلى آخر. في إضافة أغاني جديدة أو حذف أغاني من قائمة التشغيل. عندما ترغب في القيام بذلك. يمكنك تعديل قائمة التشغيل.

**1** حدد الموسيقى. ثم قوائم التشغيل.

**2** حدد قائمة التشغيل.

**3** حدد خيارات وحدد:

إضافة أغاني جديدة - لإضافة المزيد من الأغاني إلى قائمة التشغيل. حدد الأغاني التي تريد إضافتها وحدد تم.

تحريك للأعلى/للأسفل - حرّك الأغنية للأعلى أو للأسفل في القائمة لتغيير ترتيب التشغيل.

إرسال - إرسال الأغنية كرسالة أو عبر البلوتوث.

إزالة من القائمة - إزالة أغنية من قائمة التشغيل. حدد نعم للتأكيد.

تحديد/إلغاء تحديد - تحديد ملفات متعددة.

استخدام ك - يمكنك تعيين الأغنية كتأثير صوتي.

## حذف قائمة التشغيل

**1** حدد الموسيقى. ثم قوائم التشغيل.

**2** حدد خيارات ثم حذف أو حذف الكل لحذف كل قوائم التشغيل.

01

02

03

04

05

06

07

08

## الوسائط المتعددة

### استخدام الراديو

تتوفر في طراز الهاتف LG KF750 ميزة راديو FM بحيث يمكنك اعداد محطاتك المفضلة للاستماع إليها أثناء التنقل.

**ملاحظة:** ستحتاج إلى إدخال سماعات الرأس لكي تتمكن من الاستماع إلى الراديو. أدخل سماعات الرأس في المأخذ المخصص لها وهو نفسه مأخذ الشاحن.

### البحث عن محطات

يمكنك اعداد محطات الراديو وذلك بالبحث عنها إما يدوياً أو تلقائياً. وسيتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن تعود بحاجة إلى إعادة ضبطها. ويمكنك حفظ ما يصل إلى 50 قناة في هاتفك.

### للضبط تلقائياً:

**1** من الوسائط المتعددة حدد راديو FM ثم خيارات.

**2** حدد تفحص تلقائي ثم نعم. سيتم تلقائياً تخصيص رقم قناة للمحطات التي يتم العثور عليها.

**ملاحظة!** باستطاعتك الوصول إلى الموسيقى باستخدام شاشة اللمس. اضغط على مفتاح الكاميرا الموجود في الجانب الأيمن من الهاتف واختر رمز الراديو أو الموسيقى. ويمكنك حينئذٍ التمرير عبر ملفات الموسيقى أو وظائف الراديو من خلال لمس الشاشة.

### للضبط يدوياً:

**1** حدد راديو FM ثم خيارات.

**2** حدد قائمة القنوات واختر رقم القناة الذي تريد حفظ المحطة إليه.

**3** أدخل تردد المحطة والمس تحديد لحفظه.

**ملاحظة:** يمكنك أيضاً أن تضبط إحدى المحطات يدوياً باستخدام  (يسار) و  (يمين) الذي يظهر إلى جانب تردد الراديو.

## تعديل القنوات

قد ترغب في نقل المحطات إلى قناة أخرى بحيث يصبح الوصول أكثر سهولة إلى تلك التي تستمع إليها بشكل متكرر.

**1** حدد راديو FM ثم خيارات.

**2** حدد قائمة القنوات وحدد القناة التي تريد تغييرها.

**3** حدد محطة من إحدى القنوات الأخرى. أو اضبط القناة يدوياً وفق التردد الذي تريده. ويمكنك تعديل كل قناة وذلك بتمييزها ولمس خيارات:

إعادة تسمية - إعادة تسمية القناة.

استبدال - تعيين تردد جديد للقناة المحددة.

إعادة تعيين القناة - إعادة تعيين القناة.

إعادة تعيين كافة القنوات - إعادة تعيين كافة القنوات.

## إعادة تعيين القنوات

**1** حدد راديو FM ثم خيارات.

**2** حدد قائمة القنوات ثم خيارات.

**3** اختر إعادة تعيين لإعادة تعيين القناة الحالية أو اختر إعادة تعيين كافة القنوات لإعادة تعيين كافة القنوات. تعود كل قناة إلى التردد 87.5 ميغا هرتز وهو تردد البداية.

**ملاحظته!** لتحسين استقبال الراديو. قم بتمديد سلك سماعة الرأس الذي يعمل كهوائي الراديو.

## الاستماع إلى الراديو

حدد راديو FM ثم أدخل رقم قناة المحطة التي تريد الاستماع إليها.

**ملاحظته!** لتحسين استقبال الراديو. قم بتمديد سلك سماعة الرأس الذي يعمل كهوائي الراديو.

01

02

03

04

05

06

07

08

### استخدام مسجّل الصوت

استخدم مسجّل الصوت لتسجيل مذكرات صوتية أو أصوات أخرى.

1 حدد وسائط متعددة.

2 حدد مسجّل الصوت ثم "خيارات" واختر من ضمن:

المدة - تعيين مدة التسجيل.

اختر من ضمن حجم رسالة رساله وسائط، أو 30 ثانية، أو دقيقة واحدة أو بلا تحديد.

الجودة - حدد جودة الصوت.

اختر من ضمن دقيقة جداً، أو دقيقة أو عادية.

الذاكرة المستخدمة - تحقق من حالة كل أنواع الذاكرة الحالية.

الانتقال إلى حافظة الأصوات - فتح حافظة

التسجيلات الصوتية في حافظة الأصوات.

### تسجيل ملف صوتي أو صوت

1 حدد وسائط متعددة.

2 حدد مسجّل الصوت.

3 حدد تسجيل لبدء التسجيل.

4 حدد إيقاف لإنهاء التسجيل.

5 حدد تشغيل في "خيارات" للاستماع إلى تسجيلك.

### إرسال التسجيل الصوتي

1 حين تنتهي من التسجيل. حدد "خيارات".

2 حدد إرسال واختر من ضمن رسالة أو بريد

إلكتروني أو البلوتوث، إذا اخترت رسالة أو بريد

إلكتروني. فستتم إضافة التسجيل إلى الرسالة

ويمكنك كتابة الرسالة وإرسالها بشكل عادي.

إذا اخترت ملاحظه. فستتم مطالبتك بتشغيل البلوتوث.

ملاحظة: بعد أن تنتهي من التسجيل. حدد خيارات

واختر تشغيل وإرسال. وملف. وحذف. واستخدام

كـ (لاستخدام التسجيل كنغمة رنين) والانتقال

إلى حافظة الأصوات.

## إضافة حدث إلى التقويم

- 1 من شاشة وضع الانتظار اضغط على واختر المنسق. حدد التقويم.
- 2 حدد التاريخ الذي تريد إضافة حدث إليه.
- 3 حدد خيارات ثم إضافة حدث جديد.
- 4 حدد ما إذا كنت ترغب في إضافة موعد، أو ذكرى سنوية أو عيد ميلاد وحدد تم.
- 5 تحقق من التاريخ وأدخل الوقت الذي تريد أن يبدأ عنده الحدث.
- 6 بالنسبة إلى المواعيد ومناسبات الذكرى السنوية أدخل تاريخ ووقت انتهاء الحدث في المرعيين السفليين للتاريخ والوقت.
- 7 إذا كنت ترغب في إضافة موضوع أو ملاحظة إلى الحدث. المس الموضوع أو الاسم واكتب ملاحظتك.
- 8 حدد تم فيتم حفظ الحدث في التقويم. يقوم رأس مؤشر مربع الشكل بتحديد اليوم الذي تم حفظ أية أحداث فيه وسيرن جرس في وقت البدء المعين للحدث. بحيث يمكنك أن تحافظ على تنظيم أوقانتك.

## ملاحظه! يمكنك تعيين العطلة في تقويمك.

حدد على حدة كل يوم ستكون فيه في عطلة. ثم اختر خيارات وحدد تعيين أيام العطل. سيتم تظليل كل يوم باللون الأحمر. عندما يحين وقت تعيين تنبيه. يمكنك أن تختار استثناء الأيام المعينة كأيام العطل.

## تغيير عرض التقويم الافتراضي

- 1 من شاشة وضع الانتظار اضغط على واختر المنسق. حدد اعدادات.
- 2 حدد التقويم والمس خيارات واختر عرض الشهر أو عرض الأسبوع.
- 3 اضغط على موافق لتأكيد خيارك.

## إضافة عنصر إلى قائمة المهام



- 1 من شاشة وضع الانتظار اضغط على واختر المنسق.
- 2 حدد المهام وحدد إضافة.
- 3 عيّّن تاريخ عنصر المهمة. وأضف الملاحظات وحدد مستوى للأولوية: عالية، أو متوسطة أو منخفضة.
- 4 احفظ عنصر قائمة المهام بتحديد تم.

**ملاحظه!** يمكنك تعديل عنصر وذلك بتحديدته ولس خيارات وتعديل. أكد على التعديلات التي قمت بها وذلك بتحديد حفظ.

## المشاركة في عنصر في المهام

- 1 من شاشة وضع الانتظار اضغط على واختر المنسق. حدد المهام.
- 2 حدد عنصر المهام الذي تريد المشاركة فيه. ثم حدد خيارات.


### تعيين المنبّه

- 1 من شاشة وضع الانتظار اضغط على  واختر أدوات - تنبيهات.  
حدد خيارات والمس إضافة جديد.
- 2 حدد وقتاً تريد فيه أن يقوم المنبّه بإصدار صوت.
- 3 اختر ما إذا كنت ترغب في أن يرن المنبّه مرة واحدة، أو يومياً، أو الاثنين الجمعة أو الاثنين السبت أو الأحد-الخميس أو باستثناء أيام العطل.
- 4 حدد  وتعديل لتحديد صوت للمنبّه. للاستماع إلى الأصوات حدد الصوت، والمس تشغيل.
- 5 أضف مذكرة إلى المنبّه وحدد "تم" عندما تنتهي من الكتابة، عندما يصدر المنبّه صوتاً ستظهر المذكرة.
- 6 يمكنك أخيراً تعيين فترة انتظار من 5 دقائق، أو 10 دقائق، أو 20 دقيقة، أو 30 دقيقة، أو ساعة واحدة أو إيقاف.
- 7 بعد أن تنتهي من إعداد المنبّه، حدد تم.
- 8 ملاحظة: يمكنك إعداد 5 تنبيهات كحد أقصى.

- 3 حدد إرسال. يمكنك أن تختار المشاركة في عنصر المهام بواسطة رسالة نصية، أو رسالة وسائط متعددة، أو بريد إلكتروني أو ملاحظه.

**ملاحظة!** يمكنك إجراء نسخ احتياطي للتقويم ومزامنته مع الكمبيوتر. انظر مزامنة الكمبيوتر الشخصي على الصفحة 77.

### إضافة مذكرة

- 1 من شاشة وضع الانتظار اضغط على  واختر المنسق - المذكرة.
  - 2 في حال عدم وجود مذكرات موجودة، حدد إضافة.
  - 3 اكتب المذكرة، يتبعها حفظ.
  - 4 تظهر مذكرك على الشاشة في المرة التالية التي تقوم فيها بفتح تطبيق المذكرة.
- ملاحظة!** يمكنك تعديل مذكرة موجودة، حدد المذكرة التي تريد تعديلها وحدد تعديل.

## استخدام الحاسبة

- 1 من شاشة وضع الانتظار اضغط على  واختر أدوات. حدد الحاسبة.
- 2 حدد المفاتيح الرقمية لإدخال الأرقام.
- 3 بالنسبة إلى الحسابات البسيطة. حدد الوظيفة التي تطلبها (+، -، X، و /). يليها =.
- 4 بالنسبة إلى العمليات الحسابية الأكثر تعقيداً. حدد خيارات واختر من ضمن +/ - أو sin أو cos أو tan أو log أو ln أو exp أو sqrt أو deg أو rad.

## استخدام ساعة الإيقاف

- 1 من شاشة وضع الانتظار اضغط على  واختر أدوات. حدد ساعة الإيقاف.
- 2 حدد بدء لبدء تشغيل المؤقت.
- 3 حدد إيقاف لإيقاف تشغيل المؤقت.
- 4 حدد دورة لقياس كل مدة دورة.
- 5 لإعادة تشغيل ساعة الإيقاف حدد استئناف.
- 6 حدد إعادة تعيين للعودة إلى الصفر.

## تحويل وحدة

- 1 من شاشة وضع الانتظار اضغط على  واختر أدوات. حدد المحوّل.
- 2 اختر ما إذا كنت ترغب في تحويل العملة، أو المساحة، أو الطول، أو الوزن، أو درجة الحرارة، أو الحجم أو السرعة.
- 3 يمكنك الآن تحديد الوحدة وإدخال القيمة التي تريد التحويل منها. تتبعها الوحدة التي تريد التحويل إليها.
- 4 تظهر القيمة المناسبة على الشاشة.

## إضافة مدينة إلى ساعتك العالمية

- 1 من شاشة وضع الانتظار اضغط على  واختر أدوات. حدد الساعة العالمية.
- 2 حدد خيارات. ثم إضافة مدينة. ابدأ بكتابة اسم المدينة التي تريدها وسيظهر الاسم في أعلى الشاشة. كطريقة بديلة. اختر خريطة. وحدد المدينة المطلوبة من الخريطة.
- 3 اضغط على تحديد لتأكيد خيارك.

**ملاحظة!** إذا كنت مسافراً فيمكنك تغيير منطقتك الزمنية بتحديد خيارات، ثم تغيير المدينة الحالية. اختر المدينة المطلوبة كما هو أعلاه. والمس تحديد.

01

02

03

04

05

06


07

08

## مزامنة الكمبيوتر الشخصي

يمكنك مزامنة الكمبيوتر مع الهاتف للتأكد من تطابق كل التفاصيل والتواريخ الهامة. ولكن أيضاً لإجراء نسخة احتياطية تساعدك على الاطمئنان.

### تثبيت LG PC Suite على الكمبيوتر

1 من شاشة وضع الانتظار اضغط على  واختر اعدادات الهاتف.

2 حدد إمكانية الاتصال. ثم وضع اتصال USB.

3 حدد وضع اتصال USB وانقر فوق موافق.

الموسيقى - وضع مزامنة الموسيقى.

أخرى - وضع خدمة البيانات.

4 أدخل القرص المضغوط الذي تم تزويده به في الكمبيوتر. انقر فوق مثبت LG PC Suite الذي يظهر على الشاشة.

5 حدد اللغة التي تريد أن يتم تشغيل المثبت بواسطتها وانقر فوق موافق.

6 اتبع الإرشادات التي تظهر على الشاشة لإكمال معالج مثبت LG PC Suite.

7 عند اكتمال عملية التثبيت. يظهر رمز LG PC Suite على سطح المكتب.

### توصيل الهاتف والكمبيوتر

1 توصيل كبل USB بهاتفك والكمبيوتر.

2 انقر نقرًا مزدوجاً فوق رمز LG PC Suite على سطح المكتب.

3 انقر فوق معالج التوصيل. ثم فوق USB.

4 انقر فوق التالي. ثم التالي مرة أخرى. ثم إنهاء. أصبح الآن هاتفك والكمبيوتر متصلين ببعضهما.

### إجراء نسخ احتياطي لمعلومات الهاتف واستعادتها

1 وصل الهاتف بالكمبيوتر كما تم توضيحه أعلاه.

2 انقر فوق الرمز نسخ احتياطي وحدد نسخ احتياطي أو استعادة.

3 حدد المحتويات التي ترغب في إجراء نسخ احتياطي لها أو استعادتها. حدد الموقع حيث تريد إجراء نسخ احتياطي للمعلومات. أو استعادة المعلومات منه. انقر فوق موافق.

4 سيتم إجراء نسخ احتياطي للمعلومات.

## مزامنة الكمبيوتر الشخصي

### عرض ملفات الهاتف على الكمبيوتر

- 1 وصل الهاتف بالكمبيوتر كما تم توضيحه أعلاه.
- 2 انقر فوق رمز المحتويات.
- 3 تظهر على الشاشة في حافظة هاتف LG كل المستندات، ومحتويات الفلاش، والصور، والأصوات وملفات الفيديو التي حفظتها في الهاتف.

**ملاحظة!** يساعدك عرض محتويات الهاتف على الكمبيوتر على ترتيب الملفات، وتنظيم المستندات وإزالة المحتويات التي لم تعد بحاجة إليها.

### مزامنة الاسماء

- 1 وصل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز الاسماء.
- 3 حدد نقل، ثم استيراد من الهاتف المحمول.
- 4 انقر فوق ملف وحدد حفظ. يمكنك الآن تحديد الموقع حيث تريد حفظ الاسماء.

ملاحظة: لإجراء نسخ احتياطي لجهاز الاتصال المحفوظة في بطاقة USIM، انقر فوق حافظة بطاقة SIM في الجانب الأيسر من شاشة الكمبيوتر، حدد تعديل في أعلى الشاشة، ثم تحديد الكل. انقر بزر الماوس الأيمن فوق الاسماء وحدد نسخ إلى جهة اتصال. انقر الآن فوق حافظة الهاتف إلى يسار الشاشة فتظهر كل الأرقام.

### مزامنة الرسائل

- 1 وصل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز الرسائل.
- 3 تظهر كل رسائل الكمبيوتر والهاتف في الحافظات على الشاشة.
- 4 استخدم شريط الأدوات في أعلى الشاشة لتعديل الرسائل وإعادة ترتيبها.

### مزامنة الموسيقى

- 1 وصل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز الموسيقى.
- 3 تظهر على الشاشة في الموسيقى ملفات الموسيقى التي قمت بحفظها.

01

02

03

04

05

06

07

08

## مزامنة الكمبيوتر الشخصي

**ملاحظة:** تقوم عملية التخزين ذات السعة الكبيرة بإجراء نسخ احتياطي للمحتوى المحفوظ في بطاقة الذاكرة فقط، وليس في ذاكرة الهاتف. لنقل محتوى ذاكرة الهاتف (مثلاً الأسماء) ستحتاج إلى إجراء المزامنة باستخدام مزامنة الكمبيوتر الشخصي.

### رمز PIN لاتصال DivX

قم بتثبيت DivX converter الذي يتم تزويده به على القرص المضغوط نفسه حيث برنامج مزامنة الكمبيوتر الشخصي PC Sync.

عند تثبيت DivX، حدده من Program Files على الكمبيوتر، ثم DivX converter يتبعه Converter.

يؤدي هذا إلى فتح التطبيق Converter، استخدم الأسماء في التطبيق لتغيير تنسيق التحويل إلى Mobile. إذا نقرت فوق خانة التطبيق بزر الماوس الأيمن وحددت Preferences، فيمكنك تغيير الموقع الذي تم حفظ الملفات المحولة فيه.

وعندما تصبح جاهزاً لتحويل الملفات، ما عليك إلا سحبها وإفلاتها في التطبيق، وستحتاج بعد ذلك إلى تحديد Convert لكي تبدأ العملية. عندما تنتهي العملية يظهر إطار منبثق لإعلامك باكتمال عملية التحويل. لقد أصبح من الممكن الآن نقل الملف المحوّل إلى الهاتف. باستخدام وظيفة التخزين ذات السعة الكبيرة (انظر صفحة 78 للحصول على التفاصيل) أو التحميل باستخدام برنامج مزامنة الكمبيوتر الشخصي PC Sync (انظر الصفحة 76 للحصول على التفاصيل).

**ملاحظة:** يجب تلبية الشروط التالية لكي تتمكن من استخدام الموسيقى.

- Windows XP Service Pack 2 أو إصدار أعلى.
- Windows Media Player 11 أو إصدار أعلى.
- يجب أن يكون وضع اتصال USB نشطاً ووضع مزامنة الموسيقى قيد التشغيل.

### استخدام الهاتف كوسيلة تخزين ذات سعة كبيرة

يمكنك استخدام هاتفك كجهاز تخزين ذي سعة كبيرة فقط إذا توفرت لديك بطاقة ذاكرة خارجية تم إدخالها.

- 1 افصل الهاتف عن الكمبيوتر.
- 2 من شاشة وضع الانتظار اضغط على  واختر إعدادات.
- 3 حدد إمكانية الاتصال. ثم وضع اتصال USB.
- 4 قم بتمييز وسيلة تخزين ذات سعة كبيرة والمس تحديد.
- 5 وصل الهاتف بالكمبيوتر. سيقراً هاتفك: يتم الآن التوصيل كوسيلة تخزين ذات سعة كبيرة... يتبعه تم التوصيل كوسيلة تخزين ذات سعة كبيرة. لا تفصل الهاتف أثناء عملية النقل.
- 6 سيتم تلقائياً تخزين كل ملفات الهاتف على القرص الثابت للكمبيوتر.

**ملاحظة:** يجب أن يكون هاتفك مفصلاً عن الكمبيوتر لبدء عملية التخزين ذات السعة الكبيرة.

**3** لإنشاء حافظة جديدة. حدد خيارات واختر إنشاء حافظة جديدة. أدخل اسم حافظة الإشارات المرجعية.

**4** لإضافة إشارة مرجعية جديدة. حدد خيارات والمس إضافة جديد. أدخل اسماً للإشارة المرجعية. يتبعه URL.

**5** حدد تم. تظهر إشارتك المرجعية في قائمة الإشارات المرجعية.

**6** للوصول إلى الإشارة المرجعية ما عليك إلا التمرير وصولاً إليها وتحديد فتح.

### حفظ صفحة

**1** انتقل إلى صفحة ويب المطلوبة كما تم وصفه أعلاه.

**2** حدد خيارات وحدد حفظ عناصر - حفظ هذه الصفحة.


**3** أدخل اسماً لصفحة ويب بحيث يمكنك التعرف عليها بسهولة.

**4** حدد حفظ.

**ملاحظة!** ستسمح لك أيضاً هذه القائمة بتعديل عناوين الصفحات المحفوظة. وحماية شاشة المذكرة أو إلغاء حمايتها. وحذف الصفحات المحفوظة.

مع وجود المتصفح في متناول يدك. يمكنك الحصول على آخر الأخبار وتوقعات الطقس وكذلك معلومات تتعلق بالرياضة أو حركة السير كلما احتجت إليها. بالإضافة إلى ذلك، يسمح لك المتصفح بتنزيل أحدث الموسيقى. ونغمات الرنين. والخلفيات والألعاب.

### الوصول إلى ويب


**1** من شاشة وضع الانتظار اضغط على  واختر المتصفح.

**2** للوصول مباشرة إلى شاشة المتصفح الرئيسية. حدد المتصفح. كطريقة بديله. حدد إدخال العنوان وكتب عنوان URL المطلوب. يليه فتح.

**ملاحظة:** يتم فرض رسم إضافي عند الاتصال بهذه الخدمة وتنزيل المحتوى. للحصول على تفاصيل تتعلق بالرسوم على البيانات. عليك الاتصال بموفر الشبكة.

### إضافة إشارات مرجعية والوصول إليها

لكي تتمكن من الوصول إلى مواقعك المفضلة على ويب بشكل سريع وسهل. يمكنك إضافة إشارات مرجعية وحفظ صفحات ويب.

**1** من شاشة وضع الانتظار اضغط على  واختر **02** نشط.

**2** حدد إشارات مرجعية. تظهر قائمة بالإشارات المرجعية على الشاشة.

## استخدام قارئ RSS

إنّ RSS أو توزيع المحتوى والتطبيقات عبارة عن مجموعة من أشكال تغذية ويب يتم استخدامها لنشر محتوى يتكرر تحديثه مثل إدخالات المدونات أو عناوين الأخبار أو البث الصوتي على ويب podcasts. ويحتوي مستند RSS، والذي يسمى تغذية، أو تغذية ويب، أو قناة، على ملخص محتوى من موقع ويب مرتبط أو على النص الكامل.


وبفضل تغذية RSS سيتمكّن الأشخاص من الاحتفاظ بمواقعهم المفضلة على ويب بطريقة مؤتمتة تعتبر أسهل من التدقيق في تلك المواقع يدوياً.

وباستطاعة المستخدم أن يشترك في قناة عبر إدخال ارتباط القناة في القارئ أو بالنقر فوق رمز RSS في مستعرض يبدأ عملية الاشتراك. ويتحقق القارئ من القنوات التي اشترك فيها المستخدم بشكل دوري بحثاً عن محتوى جديد. ويقوم بتنزيل أية تحديثات يعثر عليها.


## إضافة القناة

يمكنك إدخال القناة بنفسك مباشرة: المتصفح → قارئ RSS → خيارات → إضافة جديد أو يمكنك النقر فوق ارتباط القناة بتحديد الرمز RSS في صفحة ويب.

## الوصول إلى صفحة محفوظة

- 1 من شاشة وضع الانتظار اضغط على  واختر المتصفح.
- 2 حدد صفحات محفوظة.
- 3 حدد فتح للاتصال بالصفحة المحفوظة.


## عرض محفوظات المتصفح

- 1 من شاشة وضع الانتظار اضغط على  واختر المتصفح، ثم حدد محفوظات.
- 2 فتظهر المحفوظات البصرية. حدد خيارات وحدد إضافة إلى الإشارة المرجعية. لإضافة الصفحة الحالية إلى إشاراتك المرجعية.
- 3 حدد خيارات وحدد محفوظات القائمة، لعرض قائمة بعناوين صفحات ويب التي قمت بزيارتها مؤخراً.
- 4 للوصول إلى إحدى هذه الصفحات، ما عليك إلا تحديد الصفحة المطلوبة ولمس فتح.

## تحديث قارئ RSS

- 1 يمكنك تحديد تحديث أو تحديث كل الخيارات.
- 2 إذا أردت تحديثه تلقائياً، حدد تحديث الجدول.

### تغيير اعدادات مستعرض ويب

- 1 من شاشة وضع الانتظار اضغط على  واختر المتصفح. حدد اعدادات المتصفح.
- 2 يمكنك أن تختار تعديل الاوضاع أو اعدادات المظهر أو ذاكرة التخزين المؤقت أو ملفات تعريف الارتباط أو الأمان أو إعادة تعيين الاعدادات.
- 3 عندما تنتهي من تغيير الاعدادات، المس تحديث.

01

02

03

04

05

06

07

08

## استخدام الهاتف كمودم

بإمكان وظيفة الهاتف KF750 أن تكون مضاعفة إذ باستطاعته أن يعمل كمودم للكمبيوتر. مما يوفر لك الوصول إلى البريد الإلكتروني وإنترنت حتى عندما لا يكون باستطاعتك الاتصال باستخدام الأسلاك، ويمكنك استخدام إما كبل USB أو ملاحظه.

## استخدام كبل USB:

- 1 تأكد من تثبيت LG PC Suite على الكمبيوتر.
- 2 وصل الهاتف KF750 والكمبيوتر باستخدام كبل USB وابدأ تشغيل البرنامج LG PC Suite.
- 3 انقر فوق اتصال على الكمبيوتر. ثم انقر فوق الإعدادات وحدد مودم.
- 4 اختر مودم USB لمحمول LG وحدد موافق. يظهر الآن على الشاشة.
- 5 انقر فوق اتصال فيتصل الكمبيوتر من خلال KF750.

ملاحظة: للحصول على مزيد من المعلومات حول إجراء المزامنة باستخدام LG PC Suite انظر الصفحة 76.

## استخدام ملاحظه

- 1 تأكد من كون ملاحظه في وضع التشغيل ومن كونه مرئياً بالنسبة إلى الكمبيوتر والهاتف KF750.
- 2 اقرن الكمبيوتر وKF750 بحيث يكون رمز المرور مطلوباً للاتصال.
- 3 استخدم معالج الاتصال على LG PC Suite لإنشاء اتصال ملاحظه نشط.
- 4 انقر فوق اتصال على الكمبيوتر. ثم انقر فوق اعدادات.
- 5 انقر فوق مودم.
- 6 اختر مودم قياسي على ارتباط ملاحظه وانقر فوق موافق. يظهر الآن على الشاشة.
- 7 انقر فوق اتصال فيتصل الكمبيوتر من خلال KF750.

## إرسال الملفات واستلامها باستخدام ملاحظه

يعتبر ملاحظه طريقة جيدة لإرسال الملفات وتلقيها إذ لا حاجة إلى أسلاك ويكون الاتصال سريعاً وسهلاً. كما يمكنك الاتصال بسماعات رأس ملاحظه لإجراء مكالمات وتلقيها.

### لإرسال ملف:

- 1 افتح الملف الذي تريد إرساله. وهو عادة عبارة عن صورة، أو مقطع فيديو أو ملف موسيقى.
- 2 حدد خيارات واختر إرسال. اختر ملاحظته.
- 3 حدد نعم لتشغيل ملاحظته.
- 4 سيبحث الهاتف KF750 تلقائياً عن أجهزة ملاحظته أخرى تم تمكينها ضمن النطاق.
- 5 اختر الجهاز الذي تريد إرسال الملف إليه واختر تحديد لإرسال الملف.
- 6 يتم إرسال ملفك.


**ملاحظة!** راقب شريط التقدم لكي تتأكد من إرسال الملف.

### لاستلام ملف:

- 1 لاستلام ملفات. يجب أن يكون ملاحظته في وضع التشغيل ومرئياً. انظر تغيير اعدادات ملاحظته أدناه للحصول على مزيد من المعلومات.
- 2 تظهر رسالة تطالبك بقبول الملف من المرسل. حدد نعم لاستلام الملف.

3 ستشاهد الموقع الذي تم حفظ الملف فيه ويمكنك أن تختار عرض الملف أو استخدامه كخلفية. يتم عادةً حفظ الملفات في الحافظة المناسبة في ملفاتي.

### تغيير اعدادات Bluebooth:

- 1 اضغط على  في شاشة وضع الانتظار. واختر إمكانية الاتصال.
- 2 اختر ملاحظته ثم اعدادات. أدخل تغييراتك على:
  - إمكانية رؤية جهازي - اختر أن يكون الجهاز مرئياً، أو مرئياً لدقيقة أو مخفياً.
  - اسم الجهاز - أدخل اسماً للهاتف KF750.
  - الخدمات المعتمدة - ابحث عن الوضع الذي يعتمده الهاتف KF750. انظر استخدام الهاتف كمودم على الصفحة 84 أو استخدام سماعة رأس ملاحظته أدناه.
  - عنواني - البحث عن عنوان جهاز ملاحظته.

01

02

03

04

05

06

07

08

### استخدام سماعة رأس ملاحظه

- 1 تأكد من كون ملاحظه في وضع التشغيل ومن كونه مرئياً.
- 2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.
- 3 حدد نعم من أجل الاتصال الآن. يقوم الهاتف KF750 بالتبديل تلقائياً إلى نمط سماعة الرأس.

**ملاحظه!** انظر الصفحة 28 للحصول على تفاصيل حول وضع الرد BT بحيث يمكنك التحكم بكيفية الإجابة على المكالمات عندما تكون سماعة الرأس ملاحظه متصله.

### الاقتران بجهاز ملاحظه آخر


عند إجراء اقتران لهاتف KF750 وجهاز آخر. يمكنك إعداد اتصال محمي برمز مرور. وهذا يعني أن الاقتران أصبح آمناً أكثر.

- 1 تأكد من كون ملاحظه في وضع التشغيل ومن كونه مرئياً. يمكنك تغيير الرؤية في قائمة اعدادات.
- 2 حدد أجهزة مقترنة ثم جديد.
- 3 يبحث الهاتف KF750 عن الأجهزة. عند اكتمال عملية البحث. يظهر تحديث وإضافة على الشاشة.
- 4 اختر الجهاز الذي تريد إجراء الاقتران به وأدخل رمز المرور ثم المس إضافة.
- 5 يتصل هاتفك حينئذٍ بالجهاز الآخر. حيث عليك إدخال رمز المرور نفسه.
- 6 لقد أصبح اتصال ملاحظه المحمي برمز مرور آمناً الآن.

باستطاعتك تكييف الاعدادات ضمن هذه الحافظة لإضفاء طابع شخصي على الهاتف KF750.

**ملاحظة:** للحصول على معلومات حول اعدادات المكالمات انظر الصفحة 28.

### تغيير اعدادات الشاشة

**1** من شاشة وضع الانتظار اضغط على  وحدد اعدادات.

**2** حدد اعدادات الشاشة ثم اختر من:

سمة الشاشة - اختر سمة شاشة الرئيسيه أو المكالمات الصادرة.

نمط القائمة - اختر الوضع المستخدم لعرض القوائم.

اتصال - إعداد الشاشة عند إجراء مكالمة.

خط - اعداد لون الخط.

إضاءة خلفية - اختر الفترة التي تبقى خلالها الإضاءة الخلفية قيد التشغيل.

**ملاحظة:** بقدر ما تطول الفترة التي تكون خلالها الإضاءة الخلفية قيد التشغيل، بقدر ما يتم استخدام طاقة البطارية وقد تحتاج إلى شحن هاتفك بشكل متكرر أكثر.

سمة الهاتف - تغيير مظهر الشاشة بأكمله بشكل سريع.

رسالة ترحيب - إدخال رسالة الترحيب عند تشغيل الهاتف.

**3** اختر تحديد لحفظ الاعدادات.

### تخصيص الاوضاع

يمكنك أن تقوم بسرعة بتغيير نمطك على شاشة وضع الانتظار. ما عليك إلا لمس رمز الوضع النشط حالياً في الزاوية اليمنى العليا.

يمكنك تخصيص كل اعدادات الوضع باستخدام قائمة الاعدادات.

**1** من شاشة وضع الانتظار اضغط على .

**2** حدد وضع ثم اختر الوضع الذي تريد تعديله. يمكنك تعديل التنبيه في الوضع الصامت.

**3** حدد خيارات واختر تعديل.

**4** يمكنك حينئذ تغيير كل خيارات الأصوات والتنبيهات المتوفرة في القائمة، بما فيها اعدادات نغمة الرنين ومستوى الصوت.

وتنبيهات الرسائل، وصوت الشاشة والمزيد من الاعدادات الأخرى.

### تغيير اعدادات الهاتف

تمتّع بحرية تكييف الهاتف KF750 بحيث يعمل وفق الطريقة التي تناسبك.

**ملاحظة!** للتمرير عبر قائمة خيارات، المس العنصر الأخير المرئي وقم بإزلاق إصبعك إلى أعلى الشاشة. فتتحرك القائمة نحو الأعلى وتُحسّل على المزيد من العناصر المرئية.

1 من شاشة وضع الانتظار اضغط على .

2 حدد اعدادات الهاتف ثم اختر من القائمة أدناه. قفل المفاتيح التلقائي - إقفال لوحة المفاتيح تلقائياً في شاشة وضع الانتظار وتعيين الوقت.

اهتزاز لوحة اللمس - تشغيل اهتزاز لوحة اللمس أو إيقافه.

تأثير شاشة اللمس - تعيين نغمة التأثيرات عند لمس الشاشة.

اللغات - اختر لغة شاشة الهاتف KF750.

توفير الطاقة - اختر تشغيل أو إيقاف تشغيل اعدادات توفير الطاقة.

معلومات الهاتف - عرض معلومات KF750 التقنية.

### استخدام التاريخ والوقت

التاريخ والوقت - نظم اعدادات التاريخ والوقت أو اختر تحديث الوقت بشكل تلقائي عند السفر أو للتوقيت الصيفي.

### تغيير الاعدادات الأخرى

يتم مسبقاً تعيين اعدادات إمكانية الاتصال بواسطة مشغل الشبكة، بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد منذ البداية. إذا أردت تغيير أي ضابط من الاعدادات، استخدم هذه القائمة.

الشبكة - يتصل الهاتف KF750 تلقائياً بشبكتك المفضلة. لتغيير هذه الاعدادات، استخدم هذه القائمة.

وضع إنترنت - تعيين الأوضاع للاتصال بإنترنت.

نقاط وصول - قام مشغل الشبكة بحفظ هذه المعلومات مسبقاً. يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

01

ذاكرة الهاتف المحجوزة - عرض الذاكرة المتوفرة في الهاتف لرسائل رساله قصيره، وجهات الاتصال، والتقويم، وقائمة المهام والمذكرة، والمنبه.

02

ومحفوظات المكالمات، والإشارات المرجعية وعناصر متفرقة.

03

ذاكرة USIM - عرض الذاكرة المتوفرة في بطاقة USIM.

04

الذاكرة الخارجية - عرض الذاكرة المتوفرة في بطاقة الذاكرة الخارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

05

06

اعداد التخزين الأساسي - اختر ذاكرة الهاتف أو الذاكرة الخارجية.

07

08

**ملاحظة!** انظر الصفحة 18 للحصول على معلومات حول تركيب بطاقة ذاكرة.

استخدام وضع الرحلات الجوية

شغل وضع الرحلات الجوية بالضغط على

في شاشة وضع الانتظار، ثم حدد اعدادات

- وضع حدد وضع الرحلات الجوية واضغط على

لتنشيطه.

لن يسمح لك وضع الرحلات الجوية بإجراء

مكالمات، أو الاتصال بالإنترنت، أو إرسال الرسائل أو استخدام ملاحظه

اتصال بيانات الرزمة - تعيين اتصال بيانات الرزمة.

تغيير اعدادات الحماية

طلب رمز PIN - تعيين الهاتف بحيث يطالب برمز PIN الخاص ببطاقة SIM عند تشغيل الهاتف.

قفل سماعة الرأس - تعيين قفل الهاتف لتجنب الاستخدام غير المصرح به. ستحتاج إلى رمز حماية.

تغيير الرموز - تغيير الرموز: PIN / PIN2 / رمز الحماية.

استخدام إدارة الذاكرة

تتوفر في KF750 ثلاثة أنواع من الذاكرة: الهاتف، وبطاقة USIM وبطاقة ذاكرة خارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

ويمكنك استخدام إدارة الذاكرة لتحديد طريقة استخدام كل نوع من أنواع الذاكرة والمساحة المتوفرة.

اضغط على في شاشة وضع الانتظار، حدد اعدادات ثم إدارة الذاكرة.

ذاكرة الهاتف العامة - عرض الذاكرة المتوفرة في الهاتف KF750 للصوت، والأصوات، والفيديو، والفلاش، ورساله وسائط، والبريد الإلكتروني، وتطبيقات Java وغير ذلك.

تم تزويدك بهذه الملحقات مع الهاتف KF750.



كبل البيانات والقرص  
المضغوط للبيانات  
وَصَل الهاتف KF750  
وقم بمزامنته مع  
الكمبيوتر.



الشاحن

دليل المستخدم  
تعلم المزيد حول  
KF750.



البطارية

### ملاحظة:

- استخدم ملحقات LG الأصلية دائماً.
- فقد يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى؛ يرجى مراجعة شركة الخدمة الإقليمية أو وكيل الخدمة الإقليمية لمزيد من الاستفسارات.



سماعة رأس  
استيريو

## خدمة الشبكة

## بيانات تقنية

لقد تمت الموافقة على استخدام الهاتف اللاسلكي، الذي جاء وصفه في هذا الدليل، على شبكة GSM 900، وDCS 1800، وPCS 1900 وW-CDMA.

وهناك عدد من الميزات المضمّنة في هذا الدليل وتسمى خدمات الشبكة، هذه الخدمات عبارة عن خدمات خاصة يمكنك الحصول عليها عبر موفر خدمة اللاسلكية، وقبل أن تتمكّن من الاستفادة من أي خدمة من خدمات الشبكة هذه، عليك الاشتراك فيها عبر موفر الخدمة والحصول على الإرشادات المتعلقة باستخدامها والتي يزودك بها موفر الخدمة.

عام

اسم المنتج: KF750

النظام: GSM 900 / DCS 1800 / PCS 1900 / W-CDMA

درجات الحرارة المحيطة

القصى: +55 درجة مئوية (تفريغ)، +45 درجة مئوية (شحن)

ال الدنيا: -10 درجة مئوية

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF750

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.6.1  
EN 50360/EN 50361:2001  
EN 60950-1 : 2001

## Supplementary Information

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director 21.Mar. 2008

Signature of representative

LG Electronics Inc. Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

## **KF750** User Guide

Congratulations on your purchase of the advanced and compact KF750 phone by LG, designed to operate with the latest digital mobile communication technology.

Setup	01
Your standby screen	02
The basics	03
Get creative	04
Get organised	05
The web	06
Settings	07
Accessories	08

# Contents

## Setup

Getting to know your phone .....	8
Installing the USIM and battery .....	10
Memory card.....	12
Menu map.....	14

## Your standby screen

Touch screen tips.....	16
The status bar .....	17

## The basics

Calls .....	18
Making a voice call .....	18
Making a video call.....	18
Making a voice/video call from Contacts.....	18
Making international calls.....	19
Answering and rejecting a call.....	19
Speed dialling.....	19
Making a second call.....	19
DTMF tones .....	20
Viewing your call logs.....	20
Using call divert .....	20
Using call barring .....	21
Changing the common call settings .....	21
Changing your video call settings .....	22
Contacts.....	23
Searching for a contact.....	23
Adding a new contact .....	23
Contact options .....	24

Creating a group.....	24
Using service dial numbers .....	25
Viewing your own number.....	25
Creating a business card.....	25
Changing your contact settings .....	25
Messaging.....	27
Messaging.....	27
Sending a message .....	27
Entering text .....	27
T9 predictive .....	27
Abc manual .....	28
Setting up your email .....	28
Retrieving your email .....	29
Sending an email using your new account .....	29
Changing your email settings ...	29
Message folders.....	30
Managing your messages.....	30
Using templates.....	31
Using emoticons.....	31
Changing your text message settings .....	31
Changing your multimedia message settings.....	32
Changing your other settings....	32

## Get creative

Camera .....	33
Taking a quick photo .....	33
After you've taken your photo .....	33
Using the flash.....	34

Adjusting the brightness.....	34	Adding an effect to a photo.....	44
Choosing a shot mode.....	34	Morphing a photo.....	44
Using continuous shot mode ....	35	Spotlighting a photo .....	45
Using a frame shot mode.....	35	Editing your videos.....	45
Taking a panoramic shot .....	35	Trimming the length of your video.....	45
Using the advanced settings ....	36	Merging two videos together....	45
Changing the image size.....	37	Merging a photo with a video .....	46
Choosing a colour tone.....	37	Adding text to a video.....	46
Viewing your saved photos.....	38	Overlaying a photo.....	46
Setting a photo as a wallpaper or contact image .....	38	Adding a voice recording.....	47
Video camera .....	39	Adding a soundtrack to your video .....	47
Shooting a quick video .....	39	Changing the speed of your video .....	48
After you've shot your video.....	39	Adding a dimming effect .....	48
Adjusting the brightness.....	39	Multimedia.....	49
Using the advanced settings ....	39	Images.....	49
Changing the video size .....	40	My images option menus .....	49
Choosing an effect tone .....	41	Sending a photo.....	49
Watching your saved videos.....	41	Using an image .....	50
Your photos and videos .....	42	Organising your images .....	50
Editing photo album options ....	42	Deleting an image .....	50
Editing video album options ....	42	Moving or copying an image.....	50
Adjusting the volume when viewing a video.....	42	Editing an image .....	51
Capturing an image from a video .....	42	Marking and unmarking images.....	51
Sending a photo or video from the album .....	43	Checking your memory status .....	51
Viewing your photos as a slide show .....	43	Sounds .....	51
Setting a photo as a wallpaper .....	43	Using a sound.....	51
Editing your photos.....	44	Videos.....	52

# Contents

Watching a video.....	52	Searching for stations.....	58
Using options while video is paused.....	52	Editing the channels .....	58
Sending a video clip.....	52	Resetting channels .....	58
Using a video clip as a ringtone.....	52	Listening to the radio .....	59
Using the video options menu.....	52	Using voice recorder .....	59
Games and Applications.....	53	Sending the voice recording.....	59
M-Toy menu .....	53		
Playing a game.....	53	<b>Get organised</b>	
Using the games options menu.....	53	Organiser .....	60
Flash contents .....	54	Adding an event to your calendar .....	60
Viewing an SWF/SVG file .....	54	Changing your default calendar view .....	60
Using options viewing the SWF/SVG file.....	54	Adding an item to your to do list.....	60
Documents .....	54	Sharing a to do item.....	61
Transferring a file to your phone .....	54	Adding a memo .....	61
Viewing a file.....	55	Tools .....	62
Others.....	55	Setting your alarm .....	62
Movie maker .....	55	Using your calculator.....	62
Creating a movie .....	55	Using the stopwatch .....	62
Music.....	55	Converting a unit .....	63
Playing a song .....	56	Adding a city to your world time .....	63
Using options while playing music .....	56	PC Sync.....	64
Creating a playlist.....	56	Installing LG PC Suite on your computer .....	64
Editing a playlist .....	57	Connecting your phone and PC.....	64
Deleting a playlist .....	57	Backing up and restoring your phone's information.....	64
Using the radio.....	57	Viewing your phone files on your PC .....	65

Synchronising your contacts .....	65	<b>Settings</b>	
Synchronising your messages.....	65	Changing your screen settings.....	74
Synchronising your music.....	65	Personalising your profiles.....	74
Using your phone as a mass storage device.....	66	Changing your phone settings.....	75
PIN for DivX connection .....	66	Using Date & Time.....	75
<b>The web</b>		Changing your other settings.....	75
Browser .....	68	Changing security settings .....	76
Accessing the web.....	68	Using memory manager.....	76
Adding and accessing your bookmarks.....	68	Using flight mode.....	76
Saving a page .....	69	<b>Accessories.....</b>	<b>77</b>
Accessing a saved page .....	69	<b>Network service .....</b>	<b>78</b>
Viewing your browser history .....	69	<b>Technical data .....</b>	<b>78</b>
Using RSS reader .....	69	<b>Guidelines</b>	
Adding the Feed.....	70	Guidelines for safe and efficient use .....	80
Updating the RSS reader .....	70		
Changing the web browser settings .....	70		
The web .....	71		
Using your phone as a modem .....	71		
Using Bluetooth.....	71		
Sending and receiving your files using Bluetooth .....	72		
Pairing with another Bluetooth device .....	73		
Using a Bluetooth headset .....	73		

# Getting to know your phone




**Charger, USB Cable,  
Handsfree connector**

**TIP:** To connect the USB cable, wait until the phone has powered up and has registered to the network.

**Side keys**

- **When the screen is idle:** volume of ring tone.
- **During a call:** volume of the earpiece.
- **When playing a BGM track**
  - **Short press:** controls the volume.
  - **Long press:** move to the next or previous music file.
- **Touch screen button:** turn the LCD into a touch screen to access your files.
- **Opens the multitasking menu**
- **Capture button**

**External camera lens**

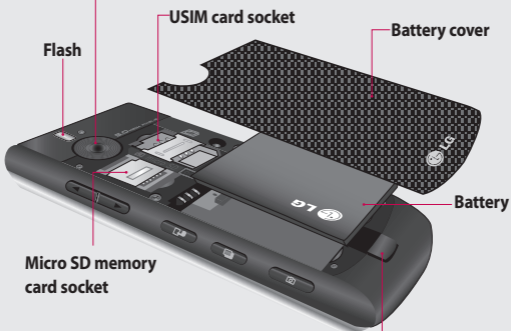

**Battery release latch**

Press this button to remove the battery.

01

02

03

04

05

06



07

08

# Installing the USIM and battery

## 1 Remove the battery cover

Press and hold down the battery release button at the top of the phone and lift off the battery cover.



## 2 Remove the battery

Hold the top edge of the battery and lift it from the battery compartment using the battery cover.



**⚠ WARNING:** Do not use your fingernail when removing the battery.

**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the reverse direction.




#### 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



#### 5 Charging your phone

Slide back the cover of the charger socket on the side of your KF750. Insert the charger (with the arrow to the back of the handset) and plug into a mains electricity socket. Your KF750 will need to be charged until a message reading "Battery full" appears on screen.

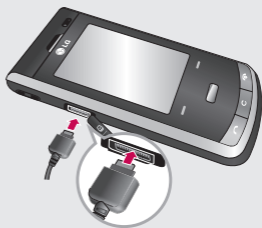

01

02

03

04

05

06

07

08

# Memory card

## Installing a memory card

You can expand the memory available on your phone using a memory card. The KF750 will support up to a 4GB memory card.

**TIP:** A memory card is an optional accessory.


- 1 Remove the battery cover as before.
- 2 Lift the memory card cover and insert a micro SD card with the gold contact area facing downwards. Close the memory card cover so that it clicks shut.



- 3 Replace the battery cover.

## Formatting the memory card

If your memory card is already formatted, you can begin using it straight away. If your card isn't formatted, you will need to do so.

- 1 From the standby screen press  then select **Settings**.
- 2 Select **Memory manager** then choose **External memory**.
- 3 Select **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

**TIP!** To change your default storage destination, open **Memory manager** from the Phone settings menu and select **Primary storage settings**.

**NOTE:** If your memory card has existing content it will automatically be filed in the correct folder, for example, videos will be stored in the My Videos folder.

01

02

03

04

05

06

07

08

# Menu map



## Games & apps

- 1 M-Toy
- 2 My games & apps
- 3 Settings



## Calling

- 1 Make video call
- 2 Call logs
- 3 Call durations
- 4 Data volume
- 5 Call costs
- 6 Call divert
- 7 Call barring
- 8 Fixed dial numbers
- 9 Call waiting
- 0 Common settings
- \* Video call settings



## Organiser

- 1 Calendar
- 2 To do
- 3 Memo
- 4 Secret memo
- 5 Date finder
- 6 Settings



## Multimedia

- 1 Touch media
- 2 Camera
- 3 Video camera
- 4 Music
- 5 FM radio
- 6 Voice recorder
- 7 Media editor
- 8 Movie maker



## Messaging

- 1 Create new message
- 2 Inbox
- 3 Mailbox
- 4 Drafts
- 5 Outbox
- 6 Sent items
- 7 My folders
- 8 Templates
- 9 Emoticons
- 0 Settings



## My stuff

- 1 My images
- 2 My sounds
- 3 My videos
- 4 Games & Apps
- 5 Flash contents
- 6 Documents
- 7 Others
- 8 My memory card



## Google

- 1 Search
- 2 Mail
- 3 Maps
- 4 Blogger
- 5 You Tube
- 6 Upload History



## Contacts

- 1 Add new
- 2 Search
- 3 Speed dials
- 4 Groups
- 5 Service dial numbers
- 6 Own number
- 7 My business card
- 8 Settings



## Tools

- 1 Quick menu
- 2 Alarms
- 3 Calculator
- 4 Stopwatch
- 5 Converter
- 6 World time
- 7 SIM service



## Browser

- 1 Home
- 2 Enter address
- 3 Bookmarks
- 4 RSS reader
- 5 Saved pages
- 6 History
- 7 Settings



## Connectivity

- 1 Bluetooth
- 2 Server sync
- 3 USB connection mode
- 4 TV out
- 5 PIN for DivX connection



## Settings

- 1 Profiles
- 2 Phone
- 3 Screen
- 4 Date & Time
- 5 Network
- 6 Internet profile
- 7 Access points
- 8 Packet data conn.
- 9 Security
- 0 Memory manager
- \* Streaming settings
- # Reset settings

01

02

03

04

05

06

07

08

## Your standby screen

Whenever your KF750 isn't in use it will return to your standby screen. From here you can access menu options, make a quick call and change your profile - as well as many other things.

### Touch screen tips

If you press the touch screen button on the right-hand side of the phone the screen will switch to an interactive touch screen keypad.

Press and hold the touch screen button from the standby screen to enter a further multimedia menu.

To select an item, touch the icon on the touch screen. Your KF750 will vibrate slightly when it recognises that you've touched an option.

- There's no need to press too hard as the touchscreen is sensitive enough to pick up on a light touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Don't cover the phone with a case or cover, as the touch screen will not work with any material covering it.

- The touch pad below the screen can be used as a four way arrow pad to navigate you through the phone menus.

**TIP!** Use the touch screen for fast and easy access to your music, Photo, M-Toy, Document and FM radio.



Touch pad

**NOTE:** When the screen light goes off, you can press the camera key on the right hand side of the phone to restore the standby screen.

### Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as shown below.



Please do not cover the antenna area with your hand during a call or when using a Bluetooth connection. It may reduce signal quality.

## The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Battery empty

Icon	Description
	New text message
	New email
	An alarm is set
	Normal profile in use
	Silent profile in use
	External memory
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Bluetooth is active
	Calls are rejected
	3G available

01

02

03

04

05



06

07

08

# Calls

## Making a voice call


- 1 Enter the number including the full area code.  
To delete a digit press **C**.  
To delete all digits press and hold **C**.
- 2 Press  to make the call.
- 3 Press  or close the handset to finish the call.

## Making a video call

You can make a video call in a 3G-covered service area if the user you are calling also has a 3G video phone in a 3G-covered service area. You can also receive video calls. To make a video call, do the following.



- 1 Enter the phone number, as before.
- 2 If you do not want to use the speakerphone, ensure you have the headset plugged in.
- 3 To start the video function, press the left soft key **Options** and select **Make video call**. You will be notified that you will need to close other applications to make the video call.

**NOTE:** The video call may take some time to connect. Please be patient. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.


- 4 Adjust the camera position if necessary.
- 5 Press  to finish the call, or close the handset.

## Making a voice/video call from Contacts


It's easy to call anyone whose number you have stored in your Contacts.

- 1 Press the down key on the navigation touch pad to access the contacts list.
- 2 Scroll to the contact to make a call.
- 3 Press  to make a voice call. Press the left soft key and select **Make video call** to make a video call.
- 4 Press  to finish the call.

## Making international calls

- 1 Press and hold **0 +** for the international prefix. The '+' character prefixes the international access code.
- 2 Enter the country code, area code, and the phone number.
- 3 Press .

## Answering and rejecting a call


When your phone rings press the  hard key to answer the call.

Press **Silent** to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting!

Press the **End** key to reject the incoming call.



## Speed dialling

You can assign a frequently-called contact to a speed dial number.


- 1 Press  and select **Contacts**.
- 2 Select **Speed dials**.
- 3 Your Voicemail is set to speed dial 1. Select any other number to assign it to a speed dial contact.

- 4 Your address book will open. Select the contact you'd like to assign to that number.

To call a speed dial number:

- 1 Press the assigned number then press the send key , or .
- 2 Press and hold the assigned number until the contact appears on screen.

## Making a second call

- 1 During your initial call, press **OK**, then **Options**, and select **Add new call**.
- 2 Dial the number or search your contacts (see page 18 for details on how to make a call from Contacts).
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 Select **Swap** to change between the calls.
- 6 To end one or both calls select **Options** → **End** followed by **All** or **Active**.

**NOTE:** You will be charged for each call you make.

01

02

03

04

05

06

07


08

# Calls

## DTMF tones

DTMF allows you to use numerical commands to navigate menus within automated messages. DTMF is switched on as default.

## Viewing your call logs

Press , then select **Calling** → **Call logs**.


Choose to view:

**All calls** - View a complete list of all of your dialled, received and missed calls.

**Dialled calls** - View a list of all the numbers you have called.

**Received calls** - View a list of all the numbers that have called you.

**Missed calls** - View a list of all the calls you have missed.

Press , select **Calling**.

Before Calling you can also choose to view:


**Call durations** - View the duration of all your sent and received calls.

**Data volume** - View the amount in kilobytes of all your received and sent data.

**Call costs** - View the charges applied to your dialled numbers (this service is network-dependant. Some operators are unable to support it).

**TIP!** From any calls list, touch the left soft key and **Delete All** to delete all the recorded items.

## Using call divert

- 1 Press , then select **Calling**.
- 2 Select **Call divert** and choose **Voice calls** and/or **Video calls**.
- 3 Choose when to divert all calls; when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Select **Activate**.

**NOTE:** Charges may be incurred for diverting calls. Please contact your network provider for details.


**TIP!** To turn off all call diverts, choose **Deactivate all**.

## Using call barring

- 1 Press , select **Calling**.
- 2 Select **Call barring** and choose **Voice calls** and/or **Video calls**.
- 3 Choose any or all of the five options:
  - All outgoing**
  - Outgoing international**
  - Outgoing international calls except home country**
  - All incoming**
  - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

**TIP!** Select **Fixed dial number** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

## Changing the common call settings

- 1 Press , then select **Calling**.
- 2 Select **Common settings**. From here you can amend the settings for:
  - Call reject** - Select **On** or **Off** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.
  - Send my number** - Choose whether your number will be displayed when you call someone.
  - Auto redial** - Choose **On** or **Off**.
  - Answer mode** - Choose whether to answer the phone by pressing the **Send** key, by pressing any key, or by opening the slide.
  - Minute minder** - Select **On** to hear a tone every minute during a call.
  - BT answer mode** - Choose how to answer a call when using a Bluetooth headset. Select **Handsfree** or **handset**.

01

02

03

04

05

06

07

08


# Calls

**Save new number** - Saves numbers you use that aren't already stored in Contacts.

**Slide close setting** - Select **End call** to be able to disconnect a call by closing the slide.

**Voice clarity**- Select **Yes** to listen to the voice clearly.

## Changing your video call settings

- 1 Press , then select **Calling**.
- 2 Select **Video call settings**.
- 3 Determine whether to **Use private picture** and/or, switch on the **Mirror**.

# Contacts

## Searching for a contact

There are two ways to search for a contact:

### From the standby screen


- 1 From the standby screen touch the down key on the touch pad to open the address book.
- 2 Press the number key corresponding to the first letter of the contact you'd like to view. So, for 'Home' press **4** (GHI) twice.

**TIP!** You can search by group by touching the left soft key and selecting **Search by group**. This will bring up a list of all your groups.

### From the main menu

- 1 Select **Contacts**.
- 2 Select **Search** and enter the first few letters of the contact you'd like to find using the keypad.
- 3 Your address book will bring up a list of the contacts corresponding to the letters you've entered.

## Adding a new contact

- 1 Press  and select **Contacts**.
- 2 Select **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **USIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**.
- 6 Add up to two email addresses.
- 7 You can assign the contact to a group. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also add a **Homepage, Home address, Company name, Job title, Company address** and a **Memo**.

**TIP!** You can create customised groups for your contacts. See **Creating a group** on page 24.

01

02

03

04

05

06

07

08

# Contacts

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 23.
- 2 Press the left soft key to open the list of options.

From here you can:

**Send message** - Send a message or an email to the contact. See page 27 for details on how to send messages.

**Send business card** - Send the contact's details to another person as a business card. Choose to send as a **Text message, Multimedia msg, Email** or via **Bluetooth**.

**Make voice call** - Call the contact.

**Make video call** - Make a video call to the contact.

**Edit** - You can edit the contact.

**Mark/Unmark** - Mark your contacts for multiple selection.


**Search by** - You can search the entry by number or group.

**Save to USIM/ Handset** - Choose to move or copy to the USIM card or handset (depending on where you originally saved the contact).

**Delete** - Delete the contact.

**Text input** - You can set the text input method.


## Creating a group

- 1 Press  and select **Contacts**.
- 2 Select **Groups** and touch the left soft key.
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Done**.

**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

**TIP!** You can edit an existing group by highlighting it and touching the left soft key. Choose to **Add a member** to the group from your contacts, assign a **Group ringtone, Rename** the group or **Delete** the group.

## Using service dial numbers

You can view the list of Service Dial Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include emergency, directory enquiries and voicemail numbers. After selecting a service number, press  to dial that service.

## Viewing your own number


Select **Own number** in the Contacts menu to view your number.

## Creating a business card

You can create your own business card by selecting **My business card**, then **Add**. Enter your name, number, email address and image.

## Changing your contact settings

You can adapt your contact settings so that your address book works according to your preferences.

- 1 Press  and select **Contacts**.
- 2 Select **Settings**. From here you can adjust the following settings:

**Contact list settings** - Choose whether to view contacts saved to both your **Handset & USIM**, **Handset only** or **USIM only**. You can also select to show the first name or last name of a contact first, and to show a contact picture.

**Synchronise contacts** - Connect to your server to synchronise your contacts. See **Synchronising your contacts** on page 65.

**Copy** - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one by one, or all together.

**Move** - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to. If you move a contact from the USIM to the handset it will be deleted from the USIM memory.

**Send all contacts via Bluetooth** - Send all contacts information to another handset by Bluetooth.

**Back up contacts** - See **Backing up and restoring your phone's information** on page 64.

01

02

03

04

05

06

07

08

# Contacts

**Restore contacts** - See **Backing up and restoring your phone's information** on page 64.

**Clear contacts** - Delete all your contacts.


**Memory info.** - You can check how much memory you've got left on your handset or your USIM.


# Messaging


## Messaging

Your KF750 combines SMS, MMS and email into one intuitive and easy to use menu.

## Sending a message


- 1 Select **Messaging** then choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS. A new SMS will open.
- 3 Select **Options**, then **Insert**, to add an image, video, sound or subject.
- 4 Press  **Send**. Enter the phone number or select **Contacts** to open your contacts list. You can add multiple contacts.


 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.

## Entering text

There are two ways to enter text: T9 predictive and Abc manual.

To switch between text entry methods, press and hold the  key when you have a blank message open.

To change between upper, lower and title case press the  key.

To delete a character use the  hard key below the screen.

To enter a symbol select **Options** and **Insert**.

## T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

01

02

03

04

05

06

07

08

# Messaging

## Abc manual

In Abc mode you must press the key repeatedly to enter a letter. For example, to write 'hello', press **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

## Setting up your email

You can stay in touch on the move using email on your KF750. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Select **Messaging** then select **Settings**.
- 2 Select **Email**, then **Email accounts**.
- 3 You can now choose how your account works:
  - Title** - Enter a name for this account.
  - My name** - Enter your name.
  - Username** - Enter the account username.
  - Password** - Enter the account password.
  - Email address** - Enter the account email address.
  - Reply email address** - Enter the 'reply to' email address.

**Outgoing mail server** - Enter the account details.

**Incoming mail server** - Enter the account details.

**Maximum receive size** - Choose the size limit of your emails, the maximum is 1MB.

**Mailbox type** - Enter the mailbox type, POP3 or IMAP4.

**Save to server** - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

**Save sent mail into** - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

**Access point** - Choose your Internet access point.

**Auto retrieve** - Choose whether to fetch your new emails automatically.

**Advanced settings** - Choose whether to use the advanced settings.

**Incoming server port** - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

**SMTP authentication** - Choose the security settings for the outgoing mail server.

**APOP secure login** - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.

## Retrieving your email

You can automatically or manually check your account for new email. See 'Changing your email settings' to check automatically.

To check manually:

- 1 Select **Messaging** then **Mailbox**.
- 2 Select the account you want to use.
- 3 Choose **Retrieve** and the phone will connect to your email account and retrieve your new messages.

## Sending an email using your new account

- 1 Select **Messaging**, then choose **Create new message**.
- 2 Choose **Email** and a new email will open.

- 3 Use **Options** to enter the recipient's address and to write your message. Use **Insert** to attach images, videos, sounds or other file types.
- 4 Select **Send** and your email will be sent.

**TIP!** You can email Word, Excel, Power Point and PDF documents to your KF750 so you can review them on the move.

## Changing your email settings

You can adapt your email settings so that it works according to your preferences.

- 1 Select **Messaging** then open **Settings**.
- 2 Select **Email** and then you can adapt the following settings:
  - Allow reply email** - Choose to allow the sending of 'read confirmation' messages.
  - Request reply email** - Choose whether to request 'read confirmation' messages.
  - Retrieve interval** - Choose how often your KF750 checks for new email messages.

01

02

03

04

05

06

07

08

# Messaging

## **Include message in Fwd & Reply** -

Choose whether or not to include the original message.

**Include attachment** - Choose whether or not to include the original attachment.

## **Auto Retrieval in Roaming** -

Choose whether or not to automatically retrieve your messages when abroad.

**New email notification** - Choose whether or not to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

## Message folders

**Inbox** - All the messages you receive are placed into your inbox. Here you can read, reply to and forward your messages.

**Mailbox** - All emails you receive are placed into your Mailbox.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here.

**Outbox** - This is a temporary storage folder for messages that are being sent.

**Sent items** - All the messages you send are placed into your Sent items folder.

## Managing your messages

**1** Select **Messaging** then **Inbox**.

**2** Select Options and then choose to:

**Reply** - Send a reply to the selected message.

**Forward** - Send the selected message on to another person.

**Call** - Call the person who sent you the message.

**Delete** - Delete the message.

**Create new message** - Open a new, blank message or email.

**Mark/Unmark** - Mark your messages for multiple deletion.

**Copy & Move** - Copy or move the message to your phone, USIM or My folders.

**Filter** - View your message by type. This will group SMS separately from MMS.

**Message info.** - See additional information for the message, including the time it was sent.

If you see the message **No space for USIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

## Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, and you can edit these if you wish.

- 1 Select **Messaging** then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then select Options to **Add new, Edit, Delete** or **Delete all** templates.

## Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Select **Messaging** then choose **Emoticons**.
- 2 Select Options to **Add new, Edit, Delete** or **Delete all** emoticons.

## Changing your text message settings

Your KF750 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

Select **Messaging**, then choose **Settings**, then **Text message**. You can make changes to:

**Text message centre** - Enter the details for your message centre.

**Delivery report** - Choose to receive confirmation that your message was delivered.

**Validity period** - Choose how long your message is stored at the message centre.

**Message types** - Convert your text into **Voice, Fax, X.400** or **Email**.

**Character encoding** - Choose how the characters in your messages are encoded, this impacts the size of your message and therefore data charges.

01

02

03

04

05

06

07

08

# Messaging

**Send long text as** - Choose to send as **Multiple SMS** or as an **MMS**.

## Changing your multimedia message settings

Your KF750 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

Select **Messaging**, then choose **Settings**, then **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether or not to download them in full.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read reply** - Choose to allow and/or send a read reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on screen.

**Delivery time** - Deliver your message at a specific time.

**Multi msg. centre** - Enter the details for your message centre.

## Changing your other settings

Select **Messaging**, choose **Settings** then:

**Info. service** - Choose your reception status, language and other settings.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.


# Camera

## Taking a quick photo






- 1 Press and hold the capture button on the right-hand side of the handset and the camera's viewfinder will appear on the screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Slightly depress the capture button and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the subject of your photo in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button fully.
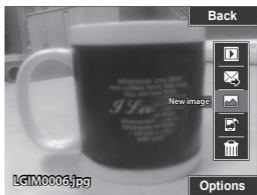
## After you've taken your photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen together with five icons down the right side.



**Back** Go back to previous menu.

-  View the pictures you have taken in your Album.
-  Send the photo as an MMS, Email, via Bluetooth or Blog This. See page 27 for **Sending a message**, page 72 for **Sending and receiving your files using Bluetooth**.
-  Take another photo straight away. Your current photo will be saved.
-  Use the image as wallpaper, as a Contact image, or in your Start-up or Shut down screen.
-  Delete the photo you have just taken. The viewfinder will reappear.

**TIP!** In camera mode select the Play icon to open the photo album. See page 38, **Viewing your saved photos**, for details.

01

02

03

04

05

06


07

08

# Camera

## Using the flash



Flash is set to Auto by default, but there are other options.

- 1 Select  from the top right corner of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
  - On** - Your camera will always flash when taking a picture.
  - Auto** - Your camera will assess whether or not the flash is necessary for a good picture.
  - Off** - The camera will never flash. This is useful if you want to save battery power. Select the flash option you'd like to use.
- 3 When you've made your selection the flash menu will automatically close, ready for you to take your picture, and the flash icon in the viewfinder will change according to your chosen flash mode.

**NOTE:** Whenever you exit the camera, the flash setting will revert to Auto mode. You'll need to switch the flash back on if you still need it when you reopen the camera.

## Adjusting the brightness

Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Select **Brightness** in **Settings**.
- 2 Slide the contrast indicator along the bar, towards  for a lower contrast, hazier image or towards  for a higher contrast, sharper image.

## Choosing a shot mode

- 1 Select **Settings** to view the available shot modes.
- 2 Choose from the five options:
  - Normal** - This is the default shot type. The photo will be taken in the normal way, as outlined in **Taking a quick photo** on page 33.
  - Continuous shot** - This enables you to take nine shots - automatically in very quick succession. See **Using continuous shot mode** below for details.
  - Frame shot** - Choose from one of the fun frames to transform your friend into a pirate or just to

decorate their surroundings.

**Panorama** - This shot type is great for taking a photo of a large group of people or for capturing a panoramic view. See **Taking a panoramic shot** below for more details.

**Music video shot** - This shot type allows to take a shot with music or voice.

## Using continuous shot mode

Continuous shot mode is great for taking photos of moving objects or at sporting events.

- 1 Select **Continuous shot**.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera will take nine shots in quick succession and display the first with eight thumbnails on the screen.
- 4 Select the shot you want to keep by selecting the thumbnail.

## Using a frame shot mode

Frame shot can be used to transform your friend into a pirate, or just to decorate their surroundings with a frame.

- 1 Select **Frame shot** menu.
- 2 Position the subject in the fun frame and press the capture button.
- 3 Save the image by selecting **Save**.

## Taking a panoramic shot

Capture life as it appears using panoramic shot. The camera will let you take three photos, all aligned, and combine them into one image so that your wide angle view becomes a panoramic photo.

- 1 Select **Panorama**.
- 2 Take the first photo as normal. A ghosted version of the right side of the image will appear in the viewfinder.
- 3 When you take the second and third photos, line the ghost of the previous image up with the next image in the viewfinder.
- 4 In phone photos are saved as a one panoramic image only.

01

02

03

04

05

06

07

08

# Camera

**NOTE:** Due to the image size the panoramic photo will appear slightly distorted in the Album view.

## Using the advanced settings

From the viewfinder select **Settings**.

**Size** - Change the size of the photo. See **Changing the image size** on page 37.

**Scene mode** - Set the the camera to adjust for the environment. Choose from **Auto, Portrait, Landscape, Night, Beach, Sports, and Party**.

**Brightness** - Set the brightness of the image in the viewfinder of the camera.

**Effect** - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour tone** on page 37.

**White Balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Daylight, Cloudy, Illuminate** and **Indoors**.

**Timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds, 5 seconds** or **10 seconds**. Great for a group photo that you want to be part of too!

**Shot mode** - See page 34.

**ISO** - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be to light. This is useful in darker conditions when the flash can't be used. Choose an ISO value from **Auto, ISO 100, ISO 200, ISO 400** or **ISO 800**.

**Quality** - Super fine/ Fine /Normal

**Memory in use** - Choose whether to save your photos to the **Handset** memory or to the **External** memory.

**Hide icons** - Hide the icons to the side of the viewfinder.

**Focus mode** - Set the camera to focus automatically.

**Sound** - Select one of three different shutter sounds.

**NOTE:** Always select **Save** after selecting a new setting to implement the changes you've made.

**TIP!** When you exit the camera, all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example, colour tone and ISO. Check them before you take your next photo.

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you'll be able to see the image change in preview behind the settings menu. Remember to select **Save** before exiting to apply any changes.

## Changing the image size

The more pixels, the larger the file size, which in turn means they will take up more of your memory. If you want to fit more pictures on your phone or memory card you can alter the number of pixels to make the file size smaller.

- 1 From the viewfinder select **Settings** in the bottom left corner.
- 2 Select **Size**.
- 3 Select a pixel value from the six numerical options (**5M: 2592x1944, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) or choose the preset:  
**Contact** - This sets the camera to take a photo the perfect size to be added to a phone contact.
- 4 Select the size option you'd like to use and press **Select** to implement your changes. The settings menu will automatically close, ready for you to take your picture.

## Choosing a colour tone

- 1 From the viewfinder, select **Settings**.
- 2 Select **Effect**.
- 3 There are twelve colour tone options: **Off, Black & White, Negative, Sepia, Blue, Emboss, Sketch, Purplish, Bluish, Monochrome, Edgemap, or Posterize**.
- 4 Choose the colour tone you'd like to use and press **Select**.

01

02

03

04

05

06

07

08

# Camera

- 5 When you've made your selection, the colour tone menu will automatically close, ready for you to take your picture.

**TIP!** You can change a photo taken in colour to black and white or sepia, taken but you cannot change a picture taken in black and white or sepia back to colour.

## Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the Album at the top of the icon menu.
- 2 Your album will appear on the screen.
- 3 Highlight the photo you want to view to bring it to the front of the album.
- 4 Select the photo to open it fully.

## Setting a photo as a wallpaper or contact image


From your image album, select an image and **Use as** to use the image as a wallpaper or contact image.

**NOTE:** Contact images can only be added to contacts saved to your phone, not your SIM.

**TIP!** You can also access your photos using the touch screen. Press and hold the touch screen button on the right-hand side of the phone and touch the **Photo** icon. You can then scroll through your pictures by touching the screen.





# Video camera


## Shooting a quick video

- 1 Move the camera mode switch to  and press the centre button. The video camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the capture button once to start recording.
- 4 **REC** will appear at the bottom of the viewfinder. Press the capture button again to stop recording.

## After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom of the screen together with five icons down the right side.




-  View your video album.
-  Play the file.
-  New video is played.
-  Send the video as an MMS, as an Email, via Bluetooth or YouTube. See page 27 for **Sending a message**, or page 72 for **Sending and receiving your files using Bluetooth**.

 Delete the video you have just made. The viewfinder will reappear.

**TIP!** Select the album icon to open the video album. See **Watching your saved videos** on page 41 for details.

## Adjusting the brightness

Contrast defines the difference between light and dark in an Video. A low contrast Video will appear foggy, whereas a high contrast Video will appear much sharper.

- 1 Select .
- 2 Slide the contrast indicator along the bar, towards  for a lower contrast, hazier Video, or towards  for a higher contrast, sharper Video.

## Using the advanced settings

From the viewfinder select **Settings**.

**Size** - Change the size of the video. See **Changing the video size** on page 40.

**Scene mode** - Set the Video for adjusting the environment. Choose from **Auto**, **Portrait**, **Landscape**, **Night**, **Beach**, **Sports**, and **Party**.

01

02

03

04

05

06

07

08

## Video camera

**Effect** - Choose an effect tone to apply to the video you're making. See **Choosing an effect tone** on page 41.

**White Balance** - The white balance ensures that any white in your Videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Indoors**, **Illuminate** and **Cloudy**.

**Music video shot** - This shot type allows to take a shot with music or voice.

**Recording speed** - Record the video using **Normal**, **Slow video**, **Fast video**.

**Duration** - Select the maximum length of the recording.

**Memory in use** - Choose whether to save your videos to the **Handset** memory or to the **External** memory.

**Hide icons** - Hide the icons to the side of the viewfinder.

**Voice** - Choose **Mute** to record a video without sound.

**NOTE:** Always touch **Save** after selecting a new setting to implement the changes you've made.

**TIP!** When you exit the video camera all your settings will return to default, except Video Size & Video Quality. Any non-default settings you require will need to be reset, for example colour tone and white balance. Check them before you shoot your next video.

### Changing the video size

The more pixels, the larger the file size, which in turn means they will take up more memory. If you want to fit more videos onto your phone you can alter the number of pixels to make the file size smaller.

- 1 Select **Size** from the settings menu.
- 2 Select a pixel value from the four options:

**640x480(W)** - The highest quality wide screen option.

**320x240** - Smaller Video size, therefore smaller file size. Great for saving on memory space.

**176x144** - Smallest Video size and therefore a smaller file size.

**16:9 Wide** - Wide screen option.

- 3 Select the size option you'd like to use and press **Save** to implement your changes. The settings menu will automatically close, ready for you to shoot your video.

**NOTE:** When you view your videos, playback speed is 30 frames per second, with the exception of 120 fps where playback is at 15 frames per second.



**WARNING:** The great editing software on your LG KF750 is compatible with all video types except 640x480. Don't record in this format if you plan to edit your video.

## Choosing an effect tone

- 1 Select **Settings** and choose **Effect**.
- 2 There are twelve colour tone options: **Off, Black & White, Negative, Sepia, Blue, Emboss, Sketch, Purplish, Bluish, Monochrome, Edgemap** and **Posterize**.
- 3 Choose the colour tone you'd like to use and press **Select**.

- 4 When you've made your selection, the colour tone menu will automatically close, ready for you to shoot your video.

**TIP!** You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia to colour.

## Watching your saved videos

- 1 Select the album icon. Your album will appear on screen.
- 2 Highlight the video you want to view to bring it to the front of the album.
- 3 Select the video to open it fully.

01

02

03

04

05

06

07

08

# Your photos and videos

## Editing photo album options

You can view and edit your images using the Options menu in the photo album.

**View** - View the image.

**Send** - Send the image to a friend.

**Delete** - Delete the image.

**Use as** - Set the image as a wallpaper/ contacts image/start-up or shut down image.

**Slide show** - Set the image as a slide show.

**Edit** - Edit the image.

**Print** - Print an image file via PictBridge or Bluetooth.

## Editing video album options

You can view and edit your videos using the Options menu in the video album.

**Play** - Play the video.

**Send** - Send the video to a friend.

**Delete** - Delete the video.

**Use as** - Set the video as a ringtone.

**Rename** - Rename the video.


**Edit** - Edit the video.

**TIP!** You can easily delete a photo or video. Select the photo or video, then select **Options** and choose **Delete**.


## Adjusting the volume when viewing a video

To adjust the volume of the audio on a video, use up and down on the touch pad.


## Capturing an image from a video

- 1 Play the video you would like to capture an image from.
- 2 Press  to pause the video on the frame you'd like to convert to an image and open the options menu.
- 3 From the options menu select **Capture**.
- 4 The image will appear on the screen with its assigned image name.
- 5 Select **OK**.
- 6 Select **Delete** to return to the album.

- 7 The image will be saved in the My files folder and will appear in the album (You need to exit the album and then re-open for this to appear).

 **WARNING:** Some functions may not work properly if the multimedia file has not been recorded on the phone.

## Sending a photo or video from the album

- 1 Select a photo or video to open it. If you select a video, press  when it starts to play.
- 2 Select the left soft key to open the options menu.
- 3 Select **Send** and choose how you would like to send the video or photo: **Message**, **Email** or **Bluetooth**.
- 4 The chosen messaging application will open so you can send the video or photo.

**NOTE:** The photo or video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case you can choose one of the other sending options.

## Viewing your photos as a slide show

Slide show mode will show all the photos in your album one at a time as a slide show.

- 1 Select the photo you would like to begin the slide show.
- 2 Press the left soft key to open the Options menu.
- 3 Select **Slide show** and it will begin.

## Setting a photo as a wallpaper

- 1 Select the photo you would like to set as a wallpaper.
- 2 Select the left soft key to open the Options menu.
- 3 Select **Use as - Wallpaper**.

01

02

03

04

05

06










07

08

# Your photos and videos

## Editing your photos

There are loads of great things you can do to your photos to change them, add to them or liven them up a little.

- 1 Open the photo you'd like to edit and select **Options**.
- 2 Select **Edit**.
- 3 Select an icon to adapt your photo:
  -  Rotate the image left or right.
  -  Change the size of the photo.
  -  Insert an icon to the image.
  -  Clip the image to 640X480, 320X240, 176X146.
  -  Distort the image.
  -  Change the colour tone to Black and white, Sepia, or Colour negative.
  -  Change or add a frame to the image.
  -  Reverse the picture to a mirror image.
  -  Change the image using morphing, fun mirror, or spotlight.

## Adding an effect to a photo

- 1 From the editing screen, select **Special effect** or **Frame effect**.

- 2 Choose to apply any of the two options to the photo:

**Special effect** - Change the colour of a photo to **Black and white**, **Sepia** or **Colour Negative**.

**Frame effect** - Add a frame to your photo. Select the desired frame type. Select **OK** to have the chosen frame superimposed over your photo.

- 3 To undo an effect simply select **Undo**.

**TIP!** You can use more than one effect on a photo, except for a colour effect.

## Morphing a photo

Morphing a photo is great for changing the facial expressions of friends, or just for distorting a photo for artistic effect.

- 1 From the editing screen select **More** and then **Morphing**.
- 2 If the face in the picture is not detected, a pop up message **Face is not detected** will be displayed and the morphing effect will be cancelled.

- 3 If the face is detected the first morphing style will be applied to the picture.
- 4 Select the morphing style you would like to use on the photo.
- 5 Select the intensity of morphing.
- 6 Select **OK** to apply the changes.

### Spotlighting a photo

- 1 Select the desired location on the image.
- 2 Select the size of spotlight.
- 3 Select **OK** to apply the changes.

**TIP!** Use the Fun mirror to copy the left side of the image over the right side to make fun pictures.

**TIP!** You can undo more than one effect on a photo, except for a resize. If any effect is already applied before the resize effect, the applied and resize effects will be saved. The undo count will then be reset.

### Editing your videos

Editing features are available for all video types except 640x480. Don't record in this format if you plan to edit your video.

### Trimming the length of your video

- 1 Choose the video you'd like to edit, and touch **Options**.
- 2 Select **Edit** and choose **Trim**.
- 3 Select **Start** and **End** to mark the new start and end points.

### Merging two videos together

- 1 Choose the first video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Video merge**.
- 3 The My videos folder will open. Choose the video you would like to merge to and choose **Select**.
- 4 Select **Effect** to choose how the videos merge together: **None**, **Fade out**, **Pan zoom**, **Oval**, **Uncover**, **Blind**, **Checker board** or **Dissolve**.

01

02

03

04


05

06


07

08

# Your photos and videos

- 5 Press  to save the new merged video. Choose to save over the original file or as a new file.
- 6 Repeat these steps to merge more videos.

## Merging a photo with a video

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Image merge**.
- 3 The My images folder will open. Choose the photo you would like to merge into your video and choose **Select**.
- 4 Select and slide the photo to merge it to the end or the beginning of the video.
- 5 Select **Effect** to choose how the photo and video merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board** or **Dissolve**.
- 6 Press . Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more photos.

## Adding text to a video

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Text overlay**.
- 3 Enter your text using the keypad and press **Save**.
- 4 Press **Start** and mark when you'd like the text to appear.
- 5 Select the area of the screen you'd like the text to appear in.
- 6 Select **OK** to mark when you'd like the text to disappear.
- 7 Select **Save** to save it. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more text.

## Overlaying a photo

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Image overlay**.

- 3 The My images folder will open. Choose the photo you would like to overlay your video and choose **Select**.
- 4 Select **Start** and mark when you'd like the photo to appear.
- 5 Select the area of the screen you'd like the photo to appear in. If the photo is too big it will overlay the whole screen, not just the area selected.
- 6 Select **OK** to mark when you'd like the photo to disappear.
- 7 Select **Save** to save it. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more photos.

### Adding a voice recording

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **Edit** and choose **Voice recording**. The quality of the original audio will be affected by adding a voice recording.
- 3 Select **Yes** to continue.
- 4 Press **Play** to view your video. When you get to the part you'd like to record your voice over, press **Pause**.
- 5 Press **End** to stop recording.
- 6 Select **Save** followed by **Yes** to save. Choose to save over the original file or as a new file.
- 7 Repeat these steps to add more voice recordings to the video.

### Adding a soundtrack to your video

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **Edit** and choose **Audio dubbing**.
- 3 The My sounds folder will open. Choose the track you would like to add to your video and press **Select**.
- 4 The original audio recording of your video will be erased.
- 5 If the audio is shorter than the video choose whether to play **Once** or to **Repeat** it.
- 6 Choose to save over the original file or as a new file.

01

02

03

04

05

06

07


08

# Your photos and videos

## Changing the speed of your video

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **Edit** and choose **Time scaling**.
- 3 Select one of the four speed options: **x4**, **x2**, **x1/4**, **x1/2**.
- 4 Choose to save over the original file or as a new file.

## Adding a dimming effect

- 1 Open the video you'd like to edit, select  and select **Options**.
- 2 Select **Edit** and choose **Dimming effect**.
- 3 Choose to save over the original file or as a new file.
- 4 Your video will now fade in at the start and fade out at the end.

# Multimedia

You can store any multimedia files on your phone's memory in My stuff so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

## Images

**My images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

## My images option menus

The options available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **Sort by Grid (List) view** and **Memory manager** options are available for default images.

**Send** - Send the image to a friend.

**Use as** - Set the image to appear on your phone at certain times.

**Move** - Move an image from the phone memory to a memory card or vice versa.

**Copy** - Copy an image from the phone memory to a memory card or vice versa.

**Delete** - Delete an image.

**Mark/Unmark** - Select multiple files.

**Print** - Print an image via PictBridge or Bluetooth®.

**File** - Change the name or view the information for the file.

**Slide show** - Start a slide show.

**Sort by** - Sort images into a specified order.

**Grid view/ List view** - View each image in grid or list type.

**Memory manager** - View the memory status.

## Sending a photo

- 1 Select **My stuff** then choose **My images**.
- 2 Select the photo you want to send and press **Options**.

01

02

03

04

05

06

07

08

# Multimedia

- 3 Select **Send** and choose from **Message, Email, Bluetooth** or **Blog**.
- 4 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

## Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Select **My stuff** then **My Images**.
- 2 Select the image and touch **Options**.
- 3 Select **Use as** and choose from:
  - Wallpaper** - Set a wallpaper for the standby screen.
  - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.
  - Start up image** - Set an image to appear when you switch the phone on.

**Shut down image** - Set an image to appear when you switch the phone off.

## Organising your images

- 1 Select **My stuff**, then **My images**.
- 2 Select **Options**, then **Sort by**.
- 3 Choose from **Date, Type** or **Name**.

## Deleting an image

- 1 Select **My stuff**, then **My images**.
- 2 Select the image you want to delete and choose **Options**.
- 3 Select **Delete**, then **Yes** to confirm.

**TIP!** To quickly delete any file in My files, highlight it with the cursor and press the **C** key.

## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Select **My stuff** then **My images**.
- 2 Select an image and select **Options**.
- 3 Select **Move** or **Copy**.

## Editing an image

You can edit the image using the **Options** menu.

- 1 Select **Multimedia** menu.
- 2 Select **Media editor**.
- 3 Select **Image** editor and choose from several options. See page 44 for details.

## Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 Select **My stuff** then **My images**.
- 2 Select **Options** then **Mark/Unmark**.
- 3 A box will appear to the left of each image. If you select an image, a tick will appear in the box marking it.
- 4 To unmark an image, select the image again so that the tick disappears from the box.

- 5 Once you have marked all of the appropriate images, choose one of the options to apply to all of them.

## Checking your memory status

You can check to see how much of your memory you have used and how much you have remaining.

- 1 Select **My stuff**, then **My images**.
- 2 Select **Options**, then **Memory manager**.
- 3 Choose **Handset memory** or **External memory**.

**NOTE:** If you do not have a memory card inserted, you will not be able to select External memory.

## Sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

## Using a sound

- 1 Select **My stuff**, then **My sounds**.
- 2 Select **Default sounds** or **Voice recordings**.

01

02

03

04

05

06

07

08

# Multimedia

- 3 Select a sound and press **Play** to listen to it.
- 4 Select **Options** and **Use as**.
- 5 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up sound** and **Shut down sound**.

## Videos

The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Select **My stuff** then **My videos**.
- 2 Select a video and press **Play**.

## Using options while video is paused

Select **Options** while in pause mode and choose from:

**Landscape view** - View the video file in full shot.

**Mute/ Unmute** - Switch the sound on/off.

**Capture** - Capture the frozen frame as a picture.

**Repeat** - Repeat the video file.

**File info.** - View brief details about the file.

**Send** - Send the video in a message, email or via Bluetooth.

**Delete** - Delete the video.

**Use as** - Use as a voice/video ringtone.

## Sending a video clip

- 1 Select a video and press **Options**.
- 2 Select **Send** and choose from **Message**, **Email** or **Bluetooth**, **You Tube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

## Using a video clip as a ringtone

- 1 Select a video and select **Options**.
- 2 Select **Use as** and choose from **Voice ringtone** or **Video ringtone**.

## Using the video options menu

From the **My videos** folder, you can choose from the following options:

**Send** - Send a video to a friend.

**Use as** - Set a video as your ringtone.

**Move** - Move a video clip from the phone memory to a memory card or vice versa.

**Copy** - Copy a video clip from the phone memory to a memory card or vice versa.

**Delete** - Delete a video.

**Mark/Unmark** - Select multiple files.

**File** - Edit the file name and view its information.

**Create new folder** - Create a new folder within the My videos folder.

**Sort by** - Sort videos into a specific order.

**Grid view/ List view** - View the options menu by grid or list type.

**Memory manager** - View the memory status.

## Games and Applications

You can download games and applications to your phone to keep you amused when you have time to spare.

## M-Toy menu

You can enjoy six default games:

**Dart, Homerun Derby, Magic Ball, Hammer, Maze and Fishing.**

**About** - View the information for a game.

**Setting** - Set the sound and vibration when activating a game.

**Reset data** - Reset all settings.

**Exit** - Leave the M-Toy menu.

## Playing a game

1 Select **Games** menu.

2 Select a game and touch **Launch**.

## Using the games options menu

From the Games and Applications folders, the following options are available:

**Create new folder** - Create a folder within the games and applications menu.

**Sort by** - Sort the games and applications by **Date, Size** or **Name**.

**Memory manager** - View the memory status.

01

02

03

04


05

06

07

08

# Multimedia

**TIP!** You can also access these games using the touch screen. Press and hold the  touch screen button on the right-hand side of the phone and touch the **M-Toy** icon.

## Flash contents

The Flash contents folder contains all of your default and downloaded flash contents.

### Viewing an SWF/SVG file

- 1 Select **My Stuff**, then **Flash contents**.
- 2 Select the file and press **Play**.

### Using options viewing the SWF/SVG file

Select **Options** while in pause mode and choose from:

**Play/Pause** - Pause or resume playback.

**Full screen/ Landscape view** -

View your SWF/SVG in full screen or landscape view mode (this only appears if you select **Options** without pausing).

**Mute/Unmute** - Switch the sound on/off.

**Use as wallpaper** - Set the SWF/SVG file as a wallpaper.

**File info.** - View brief details about the file.

## Documents

From the Documents menu, you can view Excel, Powerpoint, Word, text and pdf files.

### Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable. See page 64 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by selecting **OK**.
- 4 The file should appear in your **Documents** or **Others** folder.

## Viewing a file

- 1 Select **My stuff**, then **Documents**.
- 2 Select a document and choose **View**.

## Others


The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens, you can move them.

To move a file from Others to Documents:

- 1 Select **My Stuff** then **Others**.
- 2 Select a file and choose **Options**.
- 3 Select **Move**.

## Movie maker

The Movie maker allows you to create an image slide show combined with music.

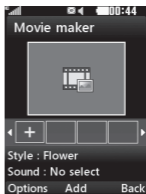

## Creating a movie

- 1 Go to **Multimedia** and select **Movie maker**.
- 2 Select **+** to add an image. Choose the images you want to include then select **Done**.
- 3 Select **Style** menu to choose a movie style.
- 4 Select **Play** to see what you've created.

## Music

Your LG KF750 has a built-in music player so you can play all your favourite tracks. To access the music player, select **Music** from the Multimedia menu. From here you can access a number of folders:

**Recently played** - View all of the songs you have played recently.

01

02

03

04

05

06

07

08

# Multimedia

**All tracks** - Contains all of the songs you have on your phone.

**Artists** - Browse through your music collection by artist.




**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains any playlists you have created.

**Shuffle tracks** - Listen to your music in a random order.

## Playing a song

- 1 Select **My music**, then **All tracks**.
- 2 Select the song you want to play and choose **Play**.
- 3 Press  to pause the song.
- 4 Touch  (right) to skip to the next song.
- 5 Touch  (left) to skip to the previous song.

## Using options while playing music

Select **Options** and choose from:

**Minimise** - Make the music player screen disappear so that you can continue using your phone as normal.

**Go to my music** - Move the Cursor to the My music folder.

**Repeat** - Repeat the selected track.

**Shuffle** - Listen to your music in a random order.

**Equaliser** - Set the equaliser menu.

**Visualisation** - Select the visual effects.

**Add to playlist** - Add the file to a playlist.

**File info.** - View brief details about the file.


**Send** - Send the song as a message or via Bluetooth.

**Delete** - Delete the song.

**Use as** - Use the song as one of your ringtones.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Select **My music**, then **Playlists**.
- 2 Select **Add**, enter the playlist name and press  **Save**.
- 3 The All tracks folder will be displayed. Select all of the songs that you would like to include in your playlist; a tick will show next to the file name.

To play a playlist, select it and choose **Play**.

**NOTE:** To add a second playlist, select **Options** then **Add new playlist**.

### Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

- 1 Select **My music**, then **Playlists**.
- 2 Select the playlist.
- 3 Select **Options**.

**Add new songs** – Add more songs to the playlist. Mark the ones you want and select **Done**.

**File info.** - View the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

**Send** – Send a song as a message or via Bluetooth.

**Remove from list** – Remove a song from the playlist.

**Mark/Unmark** – Select multiple files.

**Use as** – You can set the song as an effect sound.

**Memory manager** - You can view the current status of memory.

### Deleting a playlist

- 1 Select **My music**, then **Playlists**.
- 2 Select **Options** then **Delete** or **Delete all** to delete all of the playlists.

### Using the radio

Your LG KF750 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

**NOTE:** You need to insert your headphones to listen to the radio. Insert them into the same socket as your charger.

01

02

03

04

05

06

07

08

# Multimedia

## Searching for stations

You can tune radio stations by searching for them either manually or automatically. They will be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone.

### To auto tune:



- 1 From **Music** select **FM radio** then **Options**.
- 2 Select **Auto scan**. The stations found will automatically be allocated to a channel number.

**TIP!** You can access music using the touch screen. Press and hold the touch screen button on the right-hand side of the phone and choose the **FM Radio** or **Music** icon. You can then scroll through and select your music files or the radio functions by touching the screen.

### To manually tune:

- 1 Select **FM radio** then **Options**.
- 2 Select **Channel list** and choose the channel number you want to save the station to.

- 3 Enter the station frequency and touch **Select** to save.

**NOTE:** You can also manually tune into a station by using  (left) and  (right) displayed next to the radio frequency.

## Editing the channels

You may want to move the stations to another channel so that the ones you listen to most frequently are easier to access.

- 1 Select **FM radio** then **Options**.
- 2 Select **Channel list** and select the channel you want to change.
- 3 Either select a station from one of the other channels, or manually tune the channel into the frequency you want.

You can edit each channel by highlighting it and touching **Options**:

**Rename** - Rename the channel.

**Replace** - Set new frequency for the selected channel.

## Resetting channels

- 1 Select **FM radio**, then **Options**.
- 2 Select **Channel list**, then **Options**.

- 3** Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

**TIP!** To improve the radio reception, extend the headset cord, which functions as the radio antenna.

### Listening to the radio

Select **FM radio**, then enter the channel number of the station you would like to listen to.

### Using voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1** Select **Multimedia**.
- 2** Select **Voice recorder** then options and choose from:

**Duration** – Set the recording duration.

Choose from **MMS msg. size, 30 secs, 1 min** or **No limit**.

**Quality** – Select the sound quality. Choose from **Super Fine, Fine** or **Normal**.

**Memory in use** - Check the current status of each memory.

**Go to Voice recordings** – Open the Voice recordings folder in **My sounds**.

- 3** Select **Rec.** to begin recording.
- 4** Select **Stop** to end recording.
- 5** Select **Play** in the options menu to listen to your recording.

### Sending the voice recording

- 1** Once you have finished recording, select options.
- 2** Select **Send** and choose from **Message, Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

**NOTE:** After you have finished recording, select **Options** and choose **Play, Send, File, Delete, Use as** (to use the recording as your ringtone) or **Go to Voice recordings**.

01

02

03

04

05


06

07

08


# Organiser

## Adding an event to your calendar


- 1 From the standby screen, press  and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Options** then **Add new event**.
- 4 Select whether you would like to add an **Appointment**, **Anniversary** or **Birthday** and select **Done**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower time and date boxes.
- 7 If you would like to add a subject or a note to your event, touch **Subject** or **Name** and type in your note.
- 8 Select **Done** and your event will be saved in the calendar. A cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

**TIP!** You can set a holiday in your calendar. Select each day you are on holiday one at a time, then choose **Options** and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holidays.

## Changing your default calendar view


- 1 From the standby screen press  and choose **Organiser**. Select **Settings**.
- 2 Select **Calendar** and choose either **Month view** or **Week view**.
- 3 Press **Done** to confirm your choice.

## Adding an item to your to do list

- 1 From the standby screen press  and choose **Organiser**.
- 2 Select **To do** and select **Add**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your to do list item by selecting **Done**.


**TIP!** You can edit an item by selecting it, touching **Options** and **Edit**. Confirm your amendments by selecting **Save**.

## Sharing a to do item

- 1 From the standby screen press  and choose **Organiser**. Select **To do**.
- 2 Select the to do item you would like to share, then select **Options**.
- 3 Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg**, **Email** or **Bluetooth**.

**TIP!** You can back up and synchronise your calendar with your computer. See PC Sync on page 64.

## Adding a memo

- 1 From the standby screen press  and choose **Organiser - Memo**.
- 2 Select **Add**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.

**TIP!** You can edit an existing memo. Select the one you want to edit and select **Edit**.

01

02

03

04

05



06

07

08


# Tools

## Setting your alarm


- 1 From the standby screen press  and choose **Tools** then **Alarms**.
- 2 Select **Options** and touch **Add new**.
- 3 Set the time you would like the alarm to sound.
- 4 Choose whether you would like your alarm to sound **Once, Daily, Mon-Fri, Mon-Sat, Sat-Sun, Sat-Wed, Sat-Thu, Sun-Thu** or **Except Holiday**.
- 5 Select  and **Edit** to select a sound for your alarm. To listen to sounds select the sound, and touch **Play**.
- 6 Add a memo for the alarm and select **Done** when you have finished typing. When the alarm sounds the memo will be displayed.
- 7 Finally, you can set the snooze interval at **5, 10, 20** or **30 mins, 1 hour** or **off**.
- 8 Once you have set your alarm, select **Done**.

**NOTE:** You can set up to 5 alarms. The alarm will be alerted on even if the phone is switched off.


## Using your calculator

- 1 From the standby screen, press  and choose **Tools**. Select **Calculator**.
- 2 Select the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, x, ÷), followed by =.
- 4 For more complex calculations, select **Options** and choose from +/-, **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad**.


## Using the stopwatch

- 1 From the standby screen, press  and choose **Tools**. Select **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Select **Stop** to stop the timer.
- 4 Select **Lap** to measure each lap time.
- 5 To restart stopwatch, select **Resume**.
- 6 Select **Reset** to return to zero.

## Converting a unit

- 1 From the standby screen, press  and choose **Tools**. Select **Converter**.
- 2 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 You can now select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 4 The corresponding value will appear on the screen.

## Adding a city to your world time

- 1 From the standby screen, press  and choose **Tools**. Select **World time**.
- 2 Select **Options**, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively choose **Map**, and select your chosen city from the map.
- 3 Press **Select** to confirm your choice.

**TIP!** If you are abroad, you can change your time zone from World time by selecting **Options**, followed by **Change current city**. Choose your required city as above.

01

02

03

04

05

06


07

08

## PC Sync

You can synchronise your PC with your phone to make sure all your important details and data match, and also as a backup to put your mind at ease.

### Installing LG PC Suite on your computer

- 1 From the standby screen press  and choose **Connectivity**.
- 2 Select **USB connection mode** and click **OK**.  
**Music** - Music Sync mode.  
**Others** - Data Service mode.
- 3 Insert the supplied CD into your PC. Click on the **LG PC Suite Installer** which will appear on your screen.
- 4 Select the language you would like the installer to run in and click **OK**.
- 5 Follow the instructions on the screen to complete the **LG PC Suite Installer wizard**.
- 6 Once installation is complete, the **LG PC Suite icon** will appear on your desktop.

### Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite Icon** on your desktop.
- 3 Click on **Connection Wizard** and **USB**.
- 4 Click on **Next**, then **Next** again, and **Finish**. Your phone and PC are now connected.

### Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

## Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

## Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Select **Transfer**, then **Import from mobile handset**. Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

**NOTE:** To backup contacts saved to your USIM card, click on the SIM card folder on your PC screen. Select **Edit** at the top of the screen, then **Select all**. Right-click your contacts and select **Copy to contacts**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

## Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

## Synchronising your music

- 1 Connect your phone to your PC.
- 2 Click on the **Music** icon.
- 3 The music files you have saved will be displayed on the screen in the Music folder.

01

02

03

04

05

06

07

08

## PC Sync

**NOTE:** The following conditions must be met.

- Windows XP Service Pack 2 or higher.
- Windows Media Player 11 or higher.
- USB Connection mode should be active and Music Sync mode should be on.

### Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen, press .
- 3 Select **Connectivity**, then **USB connection mode**.
- 4 Highlight **Mass storage** and press **Select**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.

- 6 All of your phone files will automatically be stored onto your PC hard drive.

**NOTE:** Your phone must be unplugged from your PC to initiate Mass Storage.

**NOTE:** Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the contents of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

### PIN for DivX connection

Install the DivX converter which is supplied on the same CD as the PC Sync software.

Once installed select DivX from the Program Files on your PC, then DivX converter followed by Converter.

This will open the Converter application. Use the arrows in the application to change the conversion format to Mobile. If you right-click on the application box and select Preferences, you can change the location that the converted files are saved in.

Once you are ready to convert your files, simply drag and drop the files into the application. You will need then to select Convert for the process to begin. When the process is finished a "Conversion complete" pop up will be displayed. The converted file can now be transferred to your phone using the Mass Storage functionality (see page 66 for details) or uploaded using the PC Sync software (see page 64 for details).

### **Using TV out**

Choose PAL or NTSC for connecting your KF750 to a TV.

01

02

03

04

05

06


07

08

# Browser

With a browser at the tip of your fingers, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.


## Accessing the web

- 1 From the standby screen, press  and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**.  
Alternatively, select **Enter address** and type in your desired URL, followed by **Open**.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.


- 1 From the standby screen press  and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To create a new folder, select **Options** and choose **Create new folder**. Enter the name of your bookmark folder.
- 4 To add a new bookmark, select **Options** and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 5 Select **Done**. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark, simply scroll to it and select **Open**.

## Saving a page


- 1 Access your required webpage as described above.
- 2 Select **Options**, **Save items**, then **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Select **Save**.

**TIP!** This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

## Accessing a saved page

- 1 From the standby screen press  and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select **Open** to connect to the saved page.

## Viewing your browser history

- 1 From the standby screen press  and choose **Browser**, and then select **History**.
- 2 **Visual history** will be displayed. Select **Options** and select **List history**, to show a list of web page titles you have accessed recently.
- 3 To access one of these pages, simply select the required page and touch **Open**.

## Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a **feed**, **web feed**, or **channel**, contains either a summary of content from an associated web site or the full text.

RSS makes it possible for people to keep up with their favorite web sites in an automated manner that is easier than checking them manually.

01

02

03

04

05

06

07

08

# Browser

The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.


## Adding the Feed

You can input the feed directly yourself: **Browser** → **RSS reader** → **Options** → **Add new** or you can click the feed link by selecting the RSS icon in the webpage.

## Updating the RSS reader

- 1 You can select **Update** or **Update all Options**.
- 2 If you want to update it automatically, select **Update schedule**.

## Changing the web browser settings

- 1 From the standby screen press  and choose **Browser**. Select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or **Reset Settings**.
- 3 Once you have changed your settings, touch **Select**.

# The web

## Using your phone as a modem

Your KF750 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

### Using the USB cable:

- 1 Ensure you have LG PC Suite installed on your PC.
- 2 Connect your KF750 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KF750.

**NOTE:** For more information on synchronising using LG PC Suite see page 64.

## Using Bluetooth

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KF750.
- 2 Pair your PC and KF750 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Settings**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KF750.

01

02

03

04

05

06

07

08

## The web

### Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

#### To send a file:

- 1 Open the file you want to send.
- 2 Select Options and choose **Send**. Choose **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on.
- 4 Your KF750 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and choose **Select** to send the file.
- 6 Your file will be sent.


**TIP!** Keep an eye on the progress bar to make sure your file is sent.

#### To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.

- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file. Files will usually be saved to the relevant folder in My Stuff.

#### Changing your Bluetooth settings:

- 1 Press  in the standby screen, and choose **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:

**My device visibility** - Choose to be Visible, Visible for 1 min or Hidden.

**My device name** - Enter a name for your KF750.

**Supported services** - Search for the profile supported by KF750. See

**Using your phone as a modem** on page 71 or **Using a Bluetooth headset** on page 73.

**My address** - Search your Bluetooth device address.

## Pairing with another Bluetooth device

By pairing your KF750 and another device, you can set up a passcode-protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Select **Paired devices, Options**, then **Add new device**.
- 3 Your KF750 will search for devices. If devices are found, **Refresh** and **Add** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode then press **Add**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode-protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Select **Yes** to **Connect now**. Your KF750 will automatically switch to Headset profile.

01

02

03

04

05

06

07


08

# Settings

Within this folder you can adapt your settings to personalise your KF750.

**NOTE:** For information on call settings see page 21.

## Changing your screen settings

- 1 From the standby screen, press  and select **Settings**.
  - 2 Select **Screen** and then choose from:
    - Screen theme** - Choose the theme for your Home Screen, start Up, Shut down the phone.
    - Menu style** - Choose the style used to display menus.
    - Dialling** - Set the display used when making a call.
    - Font** - Adjust the font.
    - Backlight** - Choose how long the backlight remains on for.
- NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.
- Image quality enhancement** - Chosed the menu to enhance the quality of the selected image.

**Handset theme** - Quickly change the whole look of your screen.


**Greeting message**- Enter the greeting message used when the phone is switched on.

- 3 Choose **Select** to save your settings.

## Personalising your profiles


You can quickly change your profile on the standby screen. Simply touch the currently active profile icon.

Using the settings menu you can personalise each profile setting.

- 1 From the standby screen, press  and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit. You cannot edit the **Silent** profile. You can edit the Alert By option of your silent profile.
- 3 Select **Options** and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ring tone** and **Volume, Message alerts** and more.

## Changing your phone settings

Enjoy the freedom of adapting your KF750 so that it works in a way that suits you.

- 1 From the standby screen, press .
- 2 Select **Settings**, then **Phone**, and choose from the list below.
  - Auto key lock** - Lock the keypad automatically in the standby screen.
  - Touchpad** - Turn the touchpad vibration **On** or **Off**.
  - Touchscreen effect** - Set the effect tone used when touching the screen.
  - Languages** - Change the language of for your KF750's display.
  - Power save** - Choose to switch the power saving settings **On** or **Off**.
  - Information** - View the technical information for your KF750.

## Using Date & Time

**Date & Time** - Adjust your date and time settings or choose to automatically update the time when you travel or for daylight saving.

## Changing your other settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. If you want to change any settings, use this menu.

**Network** - Your KF750 connects automatically to your preferred network. To change these settings, use this menu.

**Internet profiles** - Set the profiles to connect to the internet.

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Packet data conn** - Set the packet data connection.

01

02

03

04

05

06

07

08

# Settings

## Changing security settings

**PIN code request** - Set the phone to ask for the PIN code of your SIM card when switching on the phone.

**Handset lock** - Set the phone lock to avoid unauthorised use. You will need a security code.

**Change codes** - Change the codes: PIN/ PIN2/ Security code.

## Using memory manager

Your KF750 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Press  in standby screen. Select **Settings** then **Memory Manager**.

**Handset Common memory** - View the memory available on your KF750 for images, sounds, videos, flash, MMS, applications, java and others.

**Handset reserved memory** - View the memory available on your handset for SMS, contacts, calendar items, to do list, memos, alarms, call history, bookmarks and miscellaneous items.



**USIM memory** - View the memory available on your USIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage setting** - choose Handset memory or External memory.

**TIP!** See page 12 for information on **Installing a memory card**.

## Using flight mode

Turn on flight mode by pressing  in standby screen, and then select **Settings** and **Profiles**. Select **Flight mode** and press  to activate.

Flight mode will not allow you to make calls, connect to the internet, send messages or use Bluetooth.

# Accessories

These accessories were supplied with KF750.

## Charger



## USB cable and CD

Connect and synchronise your KF750 and PC.



## Battery



## User Guide

Learn more about your KF750.

## Stereo headset



## NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

## Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS 1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

Product name : KF750

System : GSM 900 / DCS 1800 /  
PCS 1900 / W-CDMA

### Ambient Temperatures

Max : +55°C (discharging), +45°C  
(charging)

Min : -10°C

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF750

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.6.1  
EN 50360/EN 50361:2001  
EN 60950-1 : 2001

## Supplementary Information

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

21.Mar, 2008

LG Electronics Inc, Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

Signature of representative

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information This mobile phone model KF750 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.5 W/kg (10g) and when worn on the body is 0.755 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

# Guidelines for safe and efficient use

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.

## Guidelines for safe and efficient use

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.



## **LG Mobile Phone Service Centers in Middle East & Africa**

## **Service for LG Mobile Phone is available in the following countries**

(List includes Only the Main Service Centers. Other area's customers can contact the Head-quarter of their countries for further information)

### **Middle East Countries**

#### **14 Countries**

UAE  
Saudi Arabia  
Qatar  
Oman  
Kuwait  
Bahrain  
Yemen  
Iran  
Iraq  
Syria  
Lebanon  
Jordan  
Palestine  
Egypt

### **Africa Countries**

#### **7 Countries**

Morocco  
Tunisia  
Libya  
Algeria  
Kenya  
Nigeria  
South Africa

### **Other Countries**

#### **3 Countries**

Turkey  
Pakistan  
Georgia



## Middle East Countries

- |                                       |                                    |
|---------------------------------------|------------------------------------|
| UAE <input type="checkbox"/>          | Iran <input type="checkbox"/>      |
| Saudi Arabia <input type="checkbox"/> | Iraq <input type="checkbox"/>      |
| Qatar <input type="checkbox"/>        | Syria <input type="checkbox"/>     |
| Oman <input type="checkbox"/>         | Lebanon <input type="checkbox"/>   |
| Kuwait <input type="checkbox"/>       | Jordan <input type="checkbox"/>    |
| Bahrain <input type="checkbox"/>      | Palestine <input type="checkbox"/> |
| Yemen <input type="checkbox"/>        | Egypt <input type="checkbox"/>     |
- Life is Good

# UAE

## Headquarter

- ❑ Agent Name : Jumbo Electronics Co. Ltd.
- ❑ Address : Telecommunication Division, P.O. Box 3426, Dubai, UAE
- ❑ Telephone No. : +97143367999 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97143340821
- ❑ Web Site : <http://www.jumbocorp.com>
- ❑ Email : Roby.George@jumbo.ae

## Service Centers

Area	Address	Telephone No.	Fax No.
Dubai (Karama)	Near Strand Cinema, P.O. Box 3426, Dubai	+97143362621	+97143360847
Abudhabi	Regional Service Center P.O. Box 3832,	+97126732201	+97126733930
Al Ain	Regional Service Center P.O. Box 15444	+97137542898	+97137557898
Sharjah	Regional Service Center P.O. Box 5331	+97165599725	+97165538365
Fujairah	Regional Service Center P.O. Box 868	+97192221406	+97192221828
Ras Al Khaimah	Regional Service Center P.O. Box 1054	+97172272571	+97172271881

# UAE

## Headquarter

- ❑ Agent Name : Al Sayegh Brothers Trading L.L.C
- ❑ Address : Al Sayegh Brothers Building, Muraqqabat, Deira, P.O. Box 55106, Dubai, UAE
- ❑ Telephone No. : +97142663200 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97142669964
- ❑ Web Site : [www.alsa-g.com](http://www.alsa-g.com)
- ❑ Email : [helpdesk@alsa-g.com](mailto:helpdesk@alsa-g.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Dubai	Al Sayegh Brothers Building, Muraqqabat, Deira P.O. box 55106	+97142622770	+97142669964/ +97142680340
Abu Dhabi	Lotus Tower, Airport road, P.O. Box 7993	+97124452111	+97124462040
Sharjah	Al Sayegh Brothers Main SVC Center Industrial area #6.	+97165436221	+97165437422

# UAE

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : World Trade Centre, P. O. Box 9266, Dubai UAE
- ❑ Telephone No. : 04 3318555 (LG Customer Information Center: 800 54)
- ❑ Fax No. : 04 3318855
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [atcc@axiomtelecom.com](mailto:atcc@axiomtelecom.com)

## Service Centers in UAE

Area	Address	Telephone No.	Fax No.
Dubai	Shk Zayed Road, Al Kawakeb Building, Block C, P O Box 9266, Dubai, UAE	00971 43210600	00971 43210400
Abu Dhabi	Defense Road, Block A 4, Next to Al Sultan Restaurant. Abu Dhabi, UAE	00971 26417144	00971 26417076
Sharjah	Shop no 78, Crystal Plaza, Buhaira Corniche Road , Shj UAE	00971 65751503	00971 65751404

# SAUDI ARABIA

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 9th Floor, Al Subaiee Tower, Abdul Aziz Highway, Al Khobar, KSA, P O Box 4742
- ❑ Telephone No. : 00966 38019000
- ❑ Fax No. : 00966 38019051
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [ksasupport@axiomtelecom.com](mailto:ksasupport@axiomtelecom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
KHOBAR	9, Al Fanar Complex, Khobar-Dammam Highway, Khobar 31952, KSA	00966 38587922	00966 38587910
RIYADH	Olaya Main Street, Nr. Al Owais Market, Riyadh, KSA	00966 12698255	00966 12698355
JEDDAH	City Plaza Centre, Price Sultan Street, Jeddah, KSA	00966 26922764	00966 26924575

# SAUDI ARABIA

## Headquarter

- ❑ Agent Name : AL Farida Telecom Co. Ltd. (SKY)
- ❑ Address : P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia.
- ❑ Telephone No. : +96612112345
- ❑ Fax No. : +96612112311
- ❑ Email : marwan.alshare@alhokair.com.sa

## Service Centers

Area	Address	Telephone No.	Fax No.
Riyadh	P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia	+96612112345	+96612112311

# SAUDI ARABIA

## Headquarter

- ❑ Agent Name : Itsalat International Co.
- ❑ Address : P.O. Box 9798, Dammam, 31423, Saudi Arabia.
- ❑ Telephone No. : +96638343000
- ❑ Fax No. : +96638334664
- ❑ Web Site : <http://www.itsalat.com>
- ❑ Email : ashraf.hassan@itsalat.com, headoffice@itsalat.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Jeddah	Palestine st., Soukal Jawal, Jeddah	+96626677988	+96626643618
Riyadh	Mursalat, Neat STC, Riyadh	+96614559106	+96612645766
Dammam	Malik Fahd Road	+96638411111	+96638469055

# SAUDI ARABIA

## Headquarter

- ❑ Agent Name : LINGO-CARE
- ❑ Address : SARA CELLUCOM CO. LTD., CELLUCOM MALL, TAHLIA STREET, OPP BUGSHAN HOSPITAL, NEAR DHL, JEDDAH 21429 – KSA, P.O Box # 36832
- ❑ Telephone No. : +966 2 6689275
- ❑ Mobile No. : +966-542472709 (Kabir), +966- 554700308 (Saqib)
- ❑ Fax No. : +966 2 6689276
- ❑ Web Site/Email : [kabir.ahmed@sab-holding.com](mailto:kabir.ahmed@sab-holding.com), [muhammad.saqib@lingo-retail.com](mailto:muhammad.saqib@lingo-retail.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Jeddah	Tahlia Street, Opp Bugshan hospital	+966 2 6689275	+966 2 6689276
Riyadh	Mursalat	+966 1 4536784	+966 1 4549548

# QATAR

## Headquarter

- ❑ Agent Name : Video Home & Electronics Center
- ❑ Address : Musherib Street, P.O.Box 4668, Doha, Qatar
- ❑ Telephone No. : +9744315865
- ❑ Fax No. : +9744437876
- ❑ Web Site : <http://www.jumboqatar.com>
- ❑ Email : alexjacob@jumboqatar.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Doha	Musherib street, P.O.Box 4668, Doha, Qatar	+9744315865	+9744437876

# OMAN

## Headquarter

- ❑ Agent Name : Oman Gulf Enterprises L.L.C
- ❑ Address : P.O. Box 175, PC 117, Muscat, OMAN
- ❑ Telephone No. : +96824502866/8
- ❑ Fax No. : +96824502019
- ❑ Web Site : <http://www.otegroup.com>
- ❑ Email : [sudhirk@otegroup.com](mailto:sudhirk@otegroup.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Salalah	P.O. Box 211, PC2823, Salalah, OMAN	+96823210684	+96823210145
Sur	P.O. Box 480, PC 411, Sur, OMAN	+96825545107	+96825545107
Nizwah	P.O. Box 784, PC 611, Nizwah, OMAN	+96825412549	+96825412549
Sohar	P.O. Box 205, PC 321, Al Tarif, Sohar, OMAN	+96826843942	+96826843942

# OMAN

## Headquarter

- ❑ Agent Name : Cellucom and Partners L.L.CI
- ❑ Address : Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman
- ❑ Telephone No. : +96824835010
- ❑ Fax No. : +96824834234
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Muscat, Oman	Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman	+96824835010	+96824834234

# OMAN

## Headquarter

- ❑ Agent Name : Areej Business Systems Co.L.L.C.
- ❑ Address : P.O Box:1714,Ruwi- Postal Code-112, Sultanate of Oman
- ❑ Telephone No. : 968 24492333
- ❑ Fax No. : 968 24492669
- ❑ Web Site/Email : omzest.com/areej2@omantel.net.om

## Service Centers

Area	Address	Telephone No.	Fax No.
Al-Ghobra	Areej Business Systems Co.L.L.C. P.O Box:1714,Ruwi- Postal Code-112,Sultanate of Oman	968 24494747	968 24494747

# KUWAIT

## Headquarter

- ❑ Agent Name : Cellucom Kuwait WLL
- ❑ Address : Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait
- ❑ Telephone No. : +9655710801
- ❑ Fax No. : +9655710803
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : [info@cellucom.com](mailto:info@cellucom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
Salmiya, Kuwait	Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait	+9655710801	+9655710803

# KUWAIT

## Headquarter

- ❑ Agent Name : Al Ghanim Sons Group.
- ❑ Address : First Floor,Gharabally Building, Dhajeej Area, South Farwaniya, SAFAT-13097, Kuwait.
- ❑ Telephone No. : + 965 4331709
- ❑ Fax No. : + 965 4344790
- ❑ Email : snair@alghanim-sons.com

## Service Centers

Area	Address	Telephone No.	Fax No.
South Farwaniya	First Floor,Gharabally Building,Dhajeej Area,South Farwaniya , SAFAT-13097,Kuwait	+ 965 4331709	+ 965 4344790

# BAHRAIN

## Headquarter

- ❑ Agent Name : Cellucom WLL
- ❑ Address : Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain
- ❑ Telephone No. : +97317294026
- ❑ Fax No. : +97317294046
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : info@cellucom.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Manama, Bahrain	Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain	+97317294026	+97317294046

# BAHRAIN

## Headquarter

- ❑ Agent Name : Fono
- ❑ Address : Gosi Complex, Exhibition Rd, Manama, Bahrain
- ❑ Telephone No. : 00973 17312001
- ❑ Fax No. : 00973 17310884
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [fcc@almoayyedintl.com.bh](mailto:fcc@almoayyedintl.com.bh)

## Service Centers in Bahrain

Area	Address	Telephone No.	Fax No.
Bahrain	Fono, Gosi Complex, Exhibition Rd, Manama, Bahrain	00973 17312001	00973 17310884

# BAHRAIN

## Headquarter

- ❑ Agent Name : FAKHRO ELECTRONICS
- ❑ Address : P.O. BOX 39, EXHIBITIONS AVENUE, MANAMA, KINGDOM OF BAHRAIN
- ❑ Telephone No. : +973 17299992
- ❑ Fax No. : +973 17290003
- ❑ Web Site/Email : [www.fakhro.com](http://www.fakhro.com) / [fakhroel@batelco.com.bh](mailto:fakhroel@batelco.com.bh)

## Service Centers in Bahrain

Area	Address	Telephone No.	Fax No.
Manama	GOSI Complex Exhibitions Avenue	+973 17311099	+973 17311699

# YEMEN

## Headquarter

- ❑ Agent Name : Al Mutarreb
- ❑ Address : Hada st.Al Mutarreb for Trading, P.O. Box-19272
- ❑ Telephone No. : +9671503240
- ❑ Fax No. : +9671500878
- ❑ Email : mutarreb@y.net.ye

## Service Centers

Area	Address	Telephone No.	Fax No.
Yemen	Hada st. Al Muttrieb for Trading P.O. Box 19272	+9671503240	+9671500878

# IRAN

## Headquarter

- ❑ Agent Name : Persian Telecom (Al Raheel General Trading Co., L.L.C.)
- ❑ Address : First florr, No.140, Ghaem Magham St., Tehran, IRAN
- ❑ Telephone No. : +982188302922/+982188827100
- ❑ Fax No. : +982188302921
- ❑ Web Site : <http://www.persiantelecomclub.com>
- ❑ Email : [bahrami@persiantelecom.ir](mailto:bahrami@persiantelecom.ir)

## Service Centers

Area	Address	Telephone No.	Fax No.
Tehran	First florr, No.140, Ghaem Magham St., Tehran, IRAN	+982188302922 +982188827100	+982188302921
Tehran	No.69&70, Ground Floor, Aladdin Trade complex, Jomhori Ave, Tehran, IRAN	+982166722675 +982166724173	+982166724173

# IRAQ

## Headquarter

- ❑ Agent Name : Al-Seera Communication
- ❑ Address : Baghdad, Al.mansoor, 14Ramdan
- ❑ Telephone No. : +964-1-5438615, +964-77-065-07773
- ❑ Fax No. :
- ❑ Email : hawler1974@yahoo.com, ammar\_sadik@hotmail.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Arbeil	Kotra Al.Saleam	+964-75-045-68308	

# IRAQ

## Headquarter

- ❑ Agent Name : Maraj Al-Bahrain for communication
- ❑ Address : Iraq Baghdad, Karada Dakhil Abo Eklam Alfaraj Building
- ❑ Telephone No. : +964-79-019-06000
- ❑ Fax No. : +964-1-719-7327
- ❑ Email : ricoh5131@yahoo.com / www.marajalbahrain.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Baghdad	Al-Karrada Dakhil abo eklam, AlFarag Building	+964-78-072-00600	+964-17-197-327
Basra	Al-Jazaer, 14th July St.	+964-78-102-10333/ +964-78-102-10444	

# SYRIA

## Headquarter

- ❑ Agent Name : Sons of Zouheir Ghreiwaty Group
- ❑ Address : Damascus - Abu Romaneh Shakib Arslan Str.
- ❑ Telephone No. : +963-11-333-3825
- ❑ Fax No. : +963-11-333-3529
- ❑ Email : [ecc@net.sy](mailto:ecc@net.sy)

## Service Centers

Area	Address	Telephone No.	Fax No.
Damascus	LG Showroom - Al Malki	+963-11-333-3825	+963-11-333-3529
Damascus	LG Showroom - Mokhayam al Yarmouk	+963-11-636-3303	+963-11-636-3303
Aleppo	Ajmelia Square beside alseddeik Mosque	+963-21-228-4002	+963-21-228-4002

# LEBANON

## Headquarter

- ❑ Agent Name : CLASS
- ❑ Address : Mar Elias Street -Jishi Center
- ❑ Telephone No. : +961-1-704-888
- ❑ Fax No. : +961-1-704-391
- ❑ Email : [class@dm.net.lb](mailto:class@dm.net.lb)

## Service Centers

Area	Address	Telephone No.	Fax No.
Beirut	Mar Elias Street -Jishi Center	+961-1-704-888	+961-1-704-391

# LEBANON

## Headquarter

- ❑ Agent Name : Digital Technologies SARL
- ❑ Address : Bauchrieh 306 Jdeideh Sin El Fil Blvd.
- ❑ Telephone No. : +961-1-236-110
- ❑ Fax No. : +961-1-254-723
- ❑ Email : [lgmobile@digitaltechnologies.com.lb](mailto:lgmobile@digitaltechnologies.com.lb)

## Service Centers

Area	Address	Telephone No.	Fax No.
Bauchrieh	Fawara Street, Santa Maria Bldg.	+961-1-246-666	+961-1-874-401

# JORDAN

## Headquarter

- ❑ Agent Name : 7GLOBAL for Communication Equipments
- ❑ Address : Amman, Al-Gardens Street, Al Asad Complex Building No. 37
- ❑ Telephone No. : +962-6-556-3008 (LG Customer Information Center : 0800-22-154)
- ❑ Fax No. : +962-6-556-3009
- ❑ Email : [Hani@7global.info](mailto:Hani@7global.info)

## Service Centers

Area	Address	Telephone No.	Fax No.
Amman	Al-Gardens Street, Al Asad Complex Building No. 37	+962-6-551-8883, +962-79-915-1515	+962-6-556-3009

# PALESTINE

## Headquarter

- ❑ Agent Name : Bcell
- ❑ Address : P.O.Box 3917, Ramallah
- ❑ Telephone No. : +970-2-298-1108
- ❑ Fax No. : +970-2-296-4167
- ❑ Email : rtantawi@bci.ps, ttaha@bci.ps

## Service Centers

Area	Address	Telephone No.	Fax No.
Ramallah	P.O.Box 3917, Ramallah	+970-2-298-8108	+970-2-296-4167

# EGYPT

## Headquarter

- ❑ Agent Name : Delta Communication
- ❑ Address : 39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt
- ❑ Telephone No. : +2027487100 (LG Customer Information Center: 19960)
- ❑ Fax No. : +2025201241
- ❑ Email : salahezz@delta-group.org

## Service Centers

Area	Address	Telephone No.	Fax No.
Nasar City	39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt	+2027487100	+2025201241

# EGYPT

## Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 8, Al Oboor Buildings, Salah Salem Street, Cairo, Egypt
- ❑ Telephone No. : 002 02 4015050/4013939
- ❑ Fax No. : 002 02
- ❑ Web Site : [www.axiomtelecom.com](http://www.axiomtelecom.com)
- ❑ Email : [menon@axiomtelecom.com](mailto:menon@axiomtelecom.com)

## Service Centers

Area	Address	Telephone No.	Fax No.
AXIOM-CAIRO	3, Abdul Fida Street, Zamalik, Cairo Province, Egypt	002 02 7377881	002 02 7377882
AXIOM- ALEXANDRIA	10, Victoria Square Amanwel, Zahrat Al Kotn Building, Somooha, Alexandria, Egypt	002 02 4242529	



## Africa Countries

- Morocco
- Tunisia
- Libya
- Algeria
- Kenya
- Nigeria
- South Africa

Life is Good

# MOROCCO

## Headquarter

- ❑ Agent Name : LGEMC (LG Electronics Morocco S.A.R.L)
- ❑ Address : Immeuble 2, Zenith Millenium, Sidi Maarouf, Lotissement Attawfiq, casa, Morocco
- ❑ Telephone No. : 081005454 (LG Customer Information Center)
- ❑ Fax No. : +21222975959
- ❑ Email : abdelhamid@lge.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Cetelec	5 rue Albouhtouri casa anfa Maroc	+21222270790	+21222203748
Lineatec	105 Avenue Fal ould oumaeir Number 1, Agdal, Rabat	+21237776506	+21237671040

# TUNISIA

## Headquarter

- ❑ Agent Name : TTE (Tunisian Telecom Electric Distribution)
- ❑ Address : Tunisian telecom Distribution, 22 Rue 8600 ZI Charguia, Tunis, Tunisia
- ❑ Telephone No. : +21670838424
- ❑ Fax No. : +21670838422
- ❑ Web Site : <http://www.tte.com.tn>
- ❑ Email : f.hamdi@tte.com.tn

## Service Centers

Area	Address	Telephone No.	Fax No.
Tunis	22 Rue 8600 ZI Charguia, Tunis, Tunisia	+21670838424	+21670838422

# LIBYA

## Headquarter

- ❑ Agent Name : AL MASAR the Import of Electronic Devices
- ❑ Address : Cedy Elmasri, Almadar Street Tripoli Libya
- ❑ Telephone No. : 00218-21-3600167
- ❑ Fax No. : 00218-21-3600167
- ❑ Web Site/Email : [www.massar.com.ly](http://www.massar.com.ly) / [Info@massar.com.ly](mailto:Info@massar.com.ly)

## Service Centers

Area	Address	Telephone No.	Fax No.
Tripol	Cedy Elmasri, Almadar Street Tripoli Libya	00218-21-3600167	00218-21-3600167

# ALGERIA

## Headquarter

- ❑ Agent Name : Algerika
- ❑ Address : 409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger.
- ❑ Telephone No. : +21321917494
- ❑ Fax No. : +21321917505
- ❑ Email : garantie@algerie-k.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Algiers	409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger	+21321917494	+21321917505

# KENYA

## Headquarter

- ☐ Agent Name : Skytel Limited
- ☐ Address : Wilson Airport, PO Box 42444, Nairobi, Kenya
- ☐ Telephone No. : +25420252240/1
- ☐ Fax No. : +25420252240
- ☐ Email : alex.kabuagi@xcom.co.ke

## Service Centers

Area	Address	Telephone No.	Fax No.
Nairobi	Wilson Airport, PO Box 42444, Nairobi, Kenya	+25420252240/1	+25420252240

# NIGERIA

## Headquarter

- ❑ Agent Name : LGEAL (LG Electronics Antwerp Logistics N.V.)
- ❑ Address : 65C, Opebi Road, Ikeja Lagos. Nigeria
- ❑ Telephone No. : +23418935454 (LG Customer Information Center)
- ❑ Fax No. : +23417936510, 4977753
- ❑ Email : cland@lge.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Lagos	65C, Opebi Road, Ikeja Lagos. Nigeria	+23418927777	+23417936510

# SOUTH AFRICA

## Headquarter

- ❑ Agent Name : Vodacare
- ❑ Address : ARC,Gound Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley,Midrand,SA.
- ❑ Telephone No. : +27115464039 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +27115464331
- ❑ Web Site : <http://www.cellucity.co.za>
- ❑ Email : [craig.gower@vodacom.co.za](mailto:craig.gower@vodacom.co.za)

## Service Centers

Area	Address	Telephone No.	Fax No.
Midrand	ARC,Gound Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley Midrand, SA	+27115464039	+27115464331

# SOUTH AFRICA

## Headquarter

- ❑ Agent Name : Combase
- ❑ Address : 44 Old Pretoria Road, Midrand, SA.
- ❑ Telephone No. : +27116558000 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +2711315 8387
- ❑ Email : [deanw@combase.co.za](mailto:deanw@combase.co.za)

## Service Centers

Area	Address	Telephone No.	Fax No.
Capetown	64-70 Edward Street, Belville, Capetown..	+27219102940	+27219103011
Durban	379 Umbilo Road, Durban	+27312060877	+27312057655
Port Elizabeth	Shop 1, Salgar House, 18 Newton Street, Newton Park.	+27413632989	+27413631787
Nelspruit	Shop G14, Nelcity Building, Cnr Paul Kruger & Louis Trichard Rds, Nelspruit	+27137554185	+27137554183
Bloemfontein	Shop 16, College Square, Nelson Mandela Road, Bloemfontein, 9300	+27514441688	+27514441922
Midrand	44 Old Pretoria Road, Midrand, SA	+27116558000	+27113158387

# SOUTH AFRICA

## Headquarter

- ❑ Agent Name : IXIA Trading 348 PTY Ltd
- ❑ Address : Block B, Lone Creek, Waterfall Park, Bekker Street, Vorna Valley, Midrand, 1685, South Africa
- ❑ Telephone No. : +27118057863 (LG Customer Information Center : 0861545454)
- ❑ Fax No. : +27866339459
- ❑ Email : david@ixia.co.za

## Service Centers

Area	Address	Telephone No.	Fax No.
Midrand	Block B, Lone Creek, Waterfall Park, Bekker Street, Vorna Valley, Midrand, 1685, South Africa	+27118057863	+27866339459



## Other Countries

- Turkey
- Pakistan
- Georgia

Life's Good

# TURKEY

## Headquarter

- ❑ Agent Name : Teleservice Int. Telefon
- ❑ Address : Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 Istanbul
- ❑ Telephone No. : +902165450404
- ❑ Fax No. : +902165445656
- ❑ Web Site : <http://www.teleservice.com>
- ❑ Email : sinan.kus@teleservice.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Istanbul	Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 Istanbul	+902165450404	+902165445656
Ankara	Mithatpasa cad. No:31 A TR-06420 Kızılay/Ankara	+903124301222	+903124353365
Diyarbakır	İnönü Cad. 4/C Büyük Hotel Altı Da_kapı TR-21090 Diyarbakır	+904122287785	+904122288088
Izmi	Gazi Bulvarı No:90/B TR-35230 Çankaya/Izmir	+902324458600	+902324457775
Teleservice			
KVK			
SNG			
Vadox			

# PAKISTAN

## Headquarter

- ❑ Agent Name : New Allied Mobile Communication
- ❑ Address : 3/3 Ground Floor, Rabbiya Garden, M.C.H.S., Shaheed-e-Millat Road, Karachi, Pakistan.
- ❑ Telephone No. : +92214388271/74
- ❑ Fax No. : +92214388278
- ❑ Email : zpalg@yahoo.com

## Service Centers

Area	Address	Telephone No.	Fax No.
Karachi	N-1, 4th Floor, Al -Haroon, 10 Aga Khan III Road, Karachi. 74400.	+92212729722	+92212729722
Lahore	Suite # 10, 2nd Floor Hafeez Centre Gulburg III, Lahore	+92425759157	+92425714684
Multan	352 Hithar Road Behind Hussain Agahi Road, Multan	+926145184012	+92616561456
Faisalabad	63, Gulistan Market, Street # 3, Near Taj Cinema, Railway Road, Faisalabad	+92412640655	-
Islamabad	2 / B, N.H.S.P Centre, Near Utility Store Head Office, Fazal-e-Haq Road, Blue Area	+925128282734	+92512828234

# GEORGIA

## Headquarter

- ☐ Agent Name : AMERITECH L.L.C (Aray Georgia)
- ☐ Address : Tbilisi, Mukhadze st. 24
- ☐ Telephone No. : +995 32 22 37 24
- ☐ Fax No. : +995 32 22 37 24
- ☐ Email : [www.araytomorrow.ge](http://www.araytomorrow.ge) / [ameritech@ameritech.ge](mailto:ameritech@ameritech.ge)

## Service Centers

Area	Address	Telephone No.	Fax No.
GEORGIA	13/15 I.Khvichia str., Tbilisi, 0162.Georgia	+99532 313252	+99532 223724

**Visit us on**

**<http://www.lgservice.com>**

**<http://www.lgmobile.com>**