



คู่มือการใช้  
KP500

LG ELECTRONICS INC.

คู่มือการใช้  
KP500

ไทย  
ENGLISH

CE 0168

[www.lgmobile.com](http://www.lgmobile.com)

P/N : MMBB0307404 (1.2) W

CE 0168

[www.lgmobile.com](http://www.lgmobile.com)

P/N : MMBB0307404 (1.2)

LG ELECTRONICS INC.

คู่มือการใช้  
KP500

คู่มือการใช้  
KP500



ไทย  
ENGLISH

Bluetooth QD ID B014534



ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ

## คู่มือการใช้ **KP500**

ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น  
KP500 ของ LG ที่ทันสมัยมีขนาดกะทัดรัด  
ออกแบบให้ทำงานด้วยการใช้เทคโนโลยีการสื่อสาร  
เคลื่อนที่แบบดิจิตอลใหม่ล่าสุด

การติดตั้ง	01
หน้าจอแสดงแดชบอร์ด	02
การทำงานพื้นฐาน	03
เริ่มต้นงานสร้างสรรค์	04
เริ่มต้นการจัดการ	05
เว็บไซต์	06
การตั้งค่า	07
อุปกรณ์เสริม	08

# สารบัญ

## การติดตั้ง

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ .. 8
ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ. 10
การใส่ USIM และแบตเตอรี่ ..... 11
การลดหน่วยความจำ ..... 14
แผนผังเมนู..... 16

## หน้าจอสแตนด์บาย

เคล็ดลับสำหรับหน้าจอสัมผัส ..... 17
-------------------------------------

## การทำงานพื้นฐาน

การโทร ..... 22
การโทรออก..... 22
การโทรออกโดยใช้รายชื่อ ..... 23
การรับสายและการปฏิเสธสาย
เรียกเขา..... 23
ตัวเลือกต่างๆ ระหว่างใช้สาย ..... 24
การปรับระดับเสียงสนทนา..... 25
โทรด่วน ..... 25
การใช้สายที่สอง..... 25
การปิด DTMF ..... 26
การดับบันทึกการโทร..... 26
การใช้การโอนสาย ..... 27
การเปลี่ยนการตั้งค่าการโทรทั่วไป ... 28
รายชื่อ..... 30
การคนหารายชื่อ ..... 30
การเพิ่มรายชื่อใหม่..... 30
ตัวเลือกต่างๆ ของรายชื่อ..... 31
การสร้างกลุ่ม ..... 32

การเปลี่ยนการตั้งค่าของรายชื่อ..... 32
การดูข้อมูล..... 34
ข้อความ ..... 35
ข้อความ..... 35
การส่งข้อความ ..... 35
การป้อนข้อความ..... 36
ระบบช่วยสะกดคำ T9 ..... 36
การป้อนตัวอักษรด้วยตนเอง ..... 36
แป้นพิมพ์ ..... 37
การจดจำลายมือ ..... 37
การตั้งค่าอีเมล ..... 40
การตั้งขอมูลอีเมล ..... 42
การส่งอีเมลโดยใช้แอคเคาท์ใหม่ .... 43
การเปลี่ยนการตั้งค่าอีเมล ..... 43
โฟลเดอร์ข้อความ ..... 44
การจัดการข้อความ..... 45
การใช้ข้อความอัตโนมัติ ..... 46
การใช้อีโมติคอน ..... 47
การเปลี่ยนการตั้งค่าข้อความ
ตัวอักษร ..... 47
การเปลี่ยนการตั้งค่าข้อความ
มัลติมีเดีย ..... 48
การเปลี่ยนการตั้งค่าอื่นๆ..... 49

## เริ่มต้นงานสร้างสรรค์

กล้องถ่ายรูป ..... 50
การถ่ายภาพด่วน ..... 50
หลังจากที่ถ่ายภาพแล้ว ..... 50

ทำความเข้าใจกับช่องมองภาพ .....	51	การเน้นสีในรูปภาพ.....	70
การเลือกประเภทการถ่ายภาพ .....	52	การสลับสีในรูปภาพ.....	70
การปรับการรับแสง .....	52	การตัดความยาวของวิดีโอ.....	71
การใช้โหมดถ่ายภาพต่อเนื่อง .....	53	การรวมวิดีโอสองเรื่องเข้าด้วยกัน.....	71
การใช้การตั้งค่าขั้นสูง .....	53	การรวมรูปภาพเข้ากับวิดีโอ .....	72
การเปลี่ยนขนาดภาพ .....	55	การเพิ่มข้อความลงในวิดีโอ.....	72
การเลือกเอฟเฟกต์สี.....	55	การซ่อนรูปภาพ .....	73
การดูรูปภาพที่บันทึกไว้ .....	56	การใส่รายการบันทึกเสียง .....	74
กล้องวิดีโอ.....	57	การใส่ชาวดแทรกลงในวิดีโอ.....	75
การถ่ายวิดีโอตอน .....	57	การเปลี่ยนความเร็วของวิดีโอ .....	75
หลังจากที่ถ่ายวิดีโอแล้ว .....	58	มีลิตีมีเดีย .....	76
ทำความเข้าใจกับช่องมองภาพ .....	59	รูปภาพ .....	76
การปรับการรับแสง .....	60	เมนูตัวเลือกของภาพส่วนตัว .....	76
การใช้การตั้งค่าขั้นสูง .....	60	การส่งรูปภาพ.....	77
การเปลี่ยนขนาดของภาพวิดีโอ .....	62	การใช้รูปภาพ.....	78
การเลือกโทนสี.....	62	การพิมพ์ภาพ .....	78
การดูวิดีโอที่บันทึกไว้ .....	63	การย้ายหรือคัดลอกรูปภาพ .....	78
รูปภาพและวิดีโอ .....	64	การสร้างภาพสไลด์ .....	79
การดูรูปภาพและวิดีโอ.....	64	เสียง .....	79
การใช้การประชุมขณะดูรูปภาพ .....	64	การใช้เสียง.....	79
การปรับระดับเสียงขณะดูวิดีโอ .....	64	วิดีโอ .....	79
การบันทึกภาพจากวิดีโอ.....	65	การใช้ตัวเลือกขณะหยุดวิดีโอ	
การดูรูปภาพแบบภาพสไลด์ .....	65	ชั่วคราว .....	80
การตั้งค่ารูปภาพเป็นพื้นหลัง.....	66	การส่งวิดีโอคลิบ.....	80
การแก้ไขรูปภาพ.....	66	การใช้เมนูตัวเลือกของวิดีโอ.....	81
การเพิ่มข้อความลงในรูปภาพ.....	67	เกมส์และแอปพลิเคชัน .....	81
การเพิ่มเอฟเฟกต์ลงในรูปภาพ .....	68	การติดตั้งเกมส์/แอปพลิเคชัน	
การแปลงรูปภาพ.....	69	ผ่านการติดตั้งภายในเครื่อง .....	81

## สารบัญ

การเล่นเกมส์.....	82	การเพิ่มบันทึกด้วยพาดูการวาด .....	94
การใช้เมนูตัวเลือกของเกมส์.....	82	บันทึกเสียง.....	94
เอกสาร.....	82	การบันทึกเสียงหรือเสียงพูด .....	95
การโอนไฟล์ไปที่โทรศัพท์.....	83	การส่งรายการบันทึกเสียง .....	95
การดูไฟล์.....	83	การใช้เครื่องคิดเลข.....	96
อื่นๆ .....	83	การแปลงหน่วย .....	96
การสร้างภาพยนตร์.....	84	การใช้นาฬิกาจับเวลา .....	96
เพลง.....	85	การใส่ชื่อเมืองลงในเวลาทั่วโลก.....	97
การโอนเพลงไปยังโทรศัพท์.....	85	PC Sync.....	98
การเล่นเพลง.....	86	การติดตั้ง LG PC Suite	
การใช้ตัวเลือกขณะเล่นเพลง .....	86	ลงในคอมพิวเตอร์ .....	98
การสร้างรายการเพลง .....	87	การเชื่อมต่อโทรศัพท์เข้ากับ	
การแก้ไขรายการเพลง .....	87	คอมพิวเตอร์ .....	98
การลบรายการเพลง.....	88	การสำรองข้อมูลและการเรียกคืน	
การใช้วิทยุ .....	88	ข้อมูลของโทรศัพท์ .....	99
การคนหาสถานี .....	88	การดูไฟล์ในโทรศัพท์บน	
การรีเซ็ตสถานี .....	89	คอมพิวเตอร์ .....	99
การฟังวิทยุ.....	89	การซิงโครไนซ์รายชื่อ.....	100
<b>เริ่มต้นการจัดการ</b>		การซิงโครไนซ์ข้อความ.....	100
สมุดบันทึก .....	90	การใช้โทรศัพท์ของคุณเป็น	
การเพิ่มเหตุการณ์ลงในปฏิทิน.....	90	อุปกรณ์เก็บข้อมูล .....	100
การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน .	91	การใช้โทรศัพท์เป็นอุปกรณ์	
การเพิ่มรายการลงในสิ่งที่ต้องทำ.....	91	ซิงค์เพลง.....	101
การแบ่งบันรายการที่ต้องทำ .....	92	<b>เว็บไซต์</b>	
การเพิ่มบันทึก .....	92	เบราว์เซอร์ .....	102
การใช้ตัวค้นหาวันที่.....	93	การเข้าใช้เว็บไซต์.....	102
การตั้งเวลาปลุก.....	93	การเพิ่มและการใช้บุ๊กมาร์ค .....	102

การใช้ RSS reader .....	103
การบันทึกเพลง .....	103
การเข้าใช้เพลงที่บันทึกไว้ .....	103
การดูประวัติข้อมูลเบราว์เซอร์.....	104
การเปลี่ยนการตั้งค่าเว็บเบราว์เซอร์ .	104
การใช้โทรศัพท์เป็นโมเด็ม .....	104

## การตั้งค่า

การปรับแต่งรูปแบบของคุณ.....	106
การเปลี่ยนการตั้งค่าหน้าจอ.....	106
การเปลี่ยนการตั้งค่าโทรศัพท์ .....	107
การเปลี่ยนการตั้งค่าการเชื่อมต่อ ....	108
การใช้ตัวจัดการหน่วยความจำ .....	110
การส่งและการรับไฟล์โดยใช้อินเทอร์เน็ต.....	111
การจับคู่กับอุปกรณ์บลูทูธอื่น .....	112
การใช้ชุดหูฟังบลูทูธ.....	113

## อุปกรณ์เสริม..... 114

## บริการของเครือข่าย ..... 115

## ข้อมูลทางเทคนิค ..... 115

## คำแนะนำ

คำแนะนำเพื่อความปลอดภัยและ	
การใช้งานอย่างมีประสิทธิภาพ.....	117
การแก้ปัญหา.....	123

## เริ่มทำความรู้จักกับโทรศัพท์ของคุณ


### ปุ่มวางสาย/เปิดปิดเครื่อง

วางสายหรือปฏิเสธสายเรียกเข้า  
เปิด/ปิดโทรศัพท์ กดหนึ่งครั้งเพื่อ  
กลับสู่หน้าจอสแตนด์บาย

### ปุ่มการทำงานหลายงาน

### ปุ่มโทรออก/รับสาย

เพื่อโทรออกและรับสาย  
เรียกเข้า

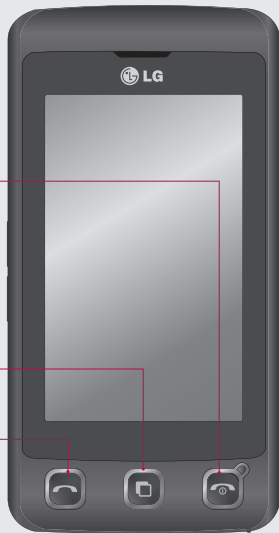

**⚠ คำเตือน:** การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์  
หรือการนั่งทับเมื่อใส่ไว้ในกระเป๋าอาจทำให้จอ LCD  
ของโทรศัพท์ และการทำงานของหน้าจอสัมผัสเสียหายได้



ช่องเสียบอุปกรณ์ชาร์จ,  
สายเคเบิล, แสนด์ฟรี

**เคล็ดลับ:**

ในการเชื่อมต่อสาย USB  
ให้รอจนโทรศัพท์เปิด  
เครื่องและลงทะเบีย่นกับ  
เครือข่ายแล้ว

ปุ่มด้านข้าง

- เมื่อหน้าจอไม่ใช้งาน:  
ระดับเสียงปุ่ม
- ระหว่างการใช้สาย:  
ปรับระดับเสียงลำโพง
- ขณะเล่นแทร็ค BGM  
- กดสั้นๆ:  
ควบคุมระดับเสียง



ช่องเสียบการ์ดหน่วย  
ความจำ Micro SD

ปุ่มล๊อค/ปลดล๊อค

ปุ่มถ่ายภาพ

สไลด์ส

01

02

03

04


05

06

07

08

## ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ

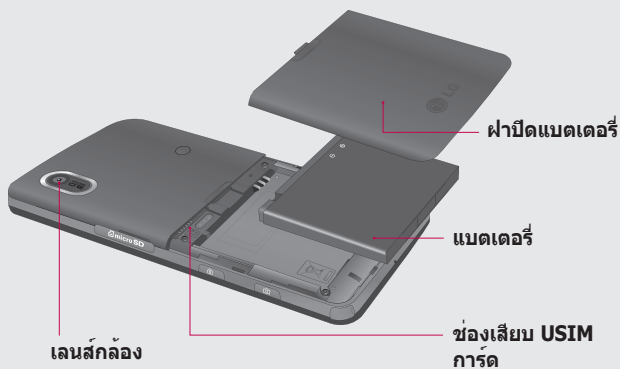

# การใส่ USIM และแบตเตอรี่


## 1 ถอดฝาปิดแบตเตอรี่

เลื่อนฝาปิดแบตเตอรี่ไปทางด้านล่างของโทรศัพท์ และถอดฝาปิดแบตเตอรี่ออก



## 2 ถอดแบตเตอรี่ออก

ยกแบตเตอรี่ขึ้นจากช่องใส่แบตเตอรี่โดยใช้รอยตัดที่ด้านล่าง

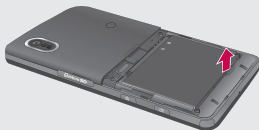

01

02

03

04

05

06

07

08


**คำเตือน:** อย่าใช้เล็บในการถอดแบตเตอรี่ออก

**คำเตือน:** ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

## การใส่ USIM และแบตเตอรี่

### 3 การใส่ USIM การ์ด

เลื่อน USIM การ์ดเข้าไปในช่องใส่ USIM การ์ด ตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองบนการ์ดคว่ำลงในการถอด USIM การ์ด ให้ค่อยๆ ดึงการออกมาในทิศทางตรงข้ามกับตอนใส่

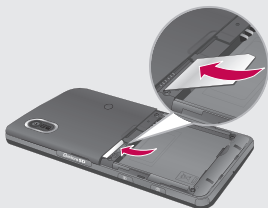


### 4 ใส่แบตเตอรี่

ใส่แบตเตอรี่ โดยให้ด้านบนของแบตเตอรี่สอดลงไปทางด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วในโทรศัพท์ จากนั้น กดด้านล่างของแบตเตอรี่ให้แน่นเข้าที่



## 5 การชาร์จโทรศัพท์

ยกและหมุนฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านหลังของโทรศัพท์ KP500 ออก เสียบอุปกรณ์ชาร์จและเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ คุณจะต้องชาร์จโทรศัพท์ KP500 จนกว่าจะปรากฏข้อความว่า "แบตเตอรี่เต็มแล้ว" บนหน้าจอ

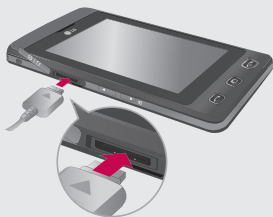

01

02

03

04

05

06

07

08


## การลดหน่วยความจำ

### การใส่การ์ดหน่วยความจำ

คุณสามารถเพิ่มพื้นที่หน่วยความจำบนโทรศัพท์ได้โดยใช้การ์ดหน่วยความจำ MicroSD โทรศัพท์ KP500 สามารถรองรับการ์ดหน่วยความจำสูงที่สุดไม่เกิน 8 กิกะไบต์

**หมายเหตุ:** การ์ดหน่วยความจำเป็นอุปกรณ์เสริม

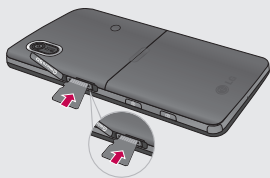

- 1 เปิดฝาปิดช่องเสียบการ์ดหน่วยความจำที่ขอบด้านขวามือของโทรศัพท์
- 2 เลื่อนการ์ดหน่วยความจำเข้าไปในช่องเสียบให้แน่นเข้าที่ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง



- 3 ใส่ฝาปิดกลับคืน

### การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากการติดตั้งไม่ได้ฟอร์แมต คุณต้องทำการฟอร์แมตก่อนจึงจะสามารถเริ่มใช้งานได้


- 1 จากหน้าจอสแตนด์บาย ให้เลือก  และแตะ  และเลือกตั้งค่าโทรศัพท์
- 2 แตะที่ สถานะความจำ แล้วเลือกหน่วยความจำการ์ด
- 3 แตะที่ ฟอร์แมต แล้วยืนยันการเลือกของคุณ
- 4 ใส่รหัสผ่าน หากมีการกำหนดไว้ และการติดตั้งของคุณจะได้รับการฟอร์แมต และพร้อมสำหรับการใช้งาน

**เคล็ดลับ!** ในการเปลี่ยนแปลงทางที่จัดเก็บเริ่มต้น ให้เปิดตัวจัดการหน่วยความจำ จากเมนูตั้งค่าโทรศัพท์ แล้วเลือกการตั้งค่าที่เก็บหลัก

**หมายเหตุ:** หากการ์ดหน่วยความจำของคุณมีข้อมูลอยู่ภายในแล้ว ข้อมูลต่างๆ จะถูกกำหนดให้อยู่ในโฟลเดอร์ที่ถูกต้องโดยอัตโนมัติ ตัวอย่างเช่น วิดีโอจะเก็บไว้ในโฟลเดอร์วิดีโอ

## การโอนรายชื่อ

ในการโอนรายชื่อจาก USIM ไปยังโทรศัพท์:

- 1 จากแท็บ ติดต่อสื่อสาร เลือก  และเลือก ตั้งค่า
- 2 แตะที่ คัดลอก
- 3 เลือก เครื่องไปยังซิม แล้วแตะที่ เสร็จ
- 4 เลือก เลือกทั้งหมด หรือเลือกที่ละชื่อ แล้วแตะที่ ตกลง

01

02

03

04


05

06

07

08

## แผนผังเมนู

แตะที่  ในหน้าจอสแตนด์บายเพื่อเปิด **เมนูบนสุด** จากชั้นตอนนี้ คุณสามารถ  
รถเข้าใช้เมนูต่างๆ ได้ดังนี้: **ติดต่อสื่อสาร, ความบันเทิง, ยูทิลิตี้ และ ตั้งค่า**



### ติดต่อสื่อสาร

- โทรออก
- โทรด่วน
- รายชื่อ
- ข้อมูลการโทร
- ข้อความใหม่
- อีเมลใหม่
- ข้อความ



### ความบันเทิง

- คลังภาพ
- แฟ้มข้อมูล
- กล้องถ่ายรูป
- กล้องวิดีโอ
- Muvee studio
- เพลง
- วิทยุ FM
- เกมส์&แอปฯ



### ยูทิลิตี้

- เบราว์เซอร์
- สมุดบันทึก
- ตั้งปลุก
- บันทึกเสียง
- พาดูการวาด
- เครื่องมือ
- Sim Tool Kit



### ตั้งค่า

- รูปแบบเสียง
- การตั้งค่าหน้าจอ
- ตั้งค่าโทรศัพท์
- ตั้งค่าการโทร
- การตั้งค่าสัมผัส
- บลูทูธ
- การเชื่อมต่อ

## หน้าจอสแตนด์บาย

เมื่อไม่มีการใช้งานโทรศัพท์ KP500 เครื่องจะกลับเข้าสู่หน้าจอหลัก จากหน้าจอนี้ คุณสามารถเข้าใช้งาน ตัวเลือกเมนูต่างๆ, โทรออกแบบด่วน และคุณสมบัติของโทรศัพท์ และอื่นๆ ได้อีกมากมาย

### เคล็ดลับสำหรับหน้าจอสัมผัส



หน้าจอหลักยังเป็นที่ที่ดี ที่จะช่วยฝึกให้คุณเคยชินกับหน้าจอสัมผัสได้

ในการเลือกรายการ ให้แตะที่ไอคอนอย่างถูกต้อง โทรศัพท์ KP500 จะสั่นเล็กน้อย เมื่อคุณแตะที่ตัวเลือกใดๆ

ในการเลื่อนดูรายการต่างๆ ให้แตะที่รายการสุดท้ายที่มองเห็นได้ แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

- คุณไม่จำเป็นต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแนบนอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนตัวเลือกอื่นๆ รอบข้าง

- เมื่อไฟหน้าจอดับลง ให้กดปุ่มปลดล็อค/ล็อคที่ด้านขวามือเพื่อกลับไปยังหน้าจอหลัก
- ห้ามปิดคลุมโทรศัพท์ด้วยของหรือปก หน้าจอสัมผัสจะไม่ทำงานหากมีวัตถุใดๆ ปิดคลุมอยู่
- หน้าจอเมื่อไม่ได้ใช้งานมี 2 ประเภท. เลื่อนไปทางซ้ายหรือทางขวาเพื่อเปลี่ยนประเภทหน้าจอเมื่อไม่ได้ใช้งานในหน้าจอสแตนด์บาย

- 1 Widget เมื่อไม่ได้ใช้งาน** - เมื่อคุณแตะที่  พาเนล Widget สำหรับโทรศัพท์มือถือจะปรากฏขึ้น
- 2 โทรด่วนเมื่อไม่ได้ใช้งาน** - เมื่อคุณแตะที่  รายการโทรด่วนจะปรากฏขึ้น คุณสามารถลากและคลิกสิ่งที่คุณต้องการได้ในหน้าจอเมื่อไม่ได้ใช้งานทั้ง 2 ประเภท

01

02

03

04

05

06

07

08

# หน้าจอสแตนด์บาย

## Widget เมื่อไม่ได้ใช้งาน




ปุ่มด่วน



Widget สำหรับโทรศัพท์มือถือ

## โทรด่วนเมื่อไม่ได้ใช้งาน

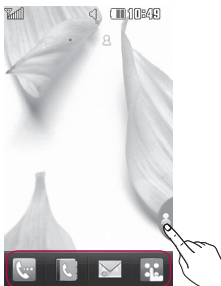


รายการโทรด่วน

## ปุ่มด่วน

ปุ่มด่วนจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ใช้บ่อยได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



แตะเพื่อเปิดปุ่มสัมผัสสำหรับใช้โทรออก ป้อนหมายเลขเหมือนกับการใช้ปุ่มกดทั่วไป แล้วแตะที่ **สาย** หรือกดปุ่ม 



แตะเพื่อเปิดสมุดแอดเดรส ในการค้นหาหมายเลขที่คุณต้องการโทร ให้ป้อนชื่อที่ด้านบนของหน้าจอโดยใช้ปุ่มสัมผัส คุณยังสามารถสร้างรายชื่อใหม่ และแก้ไขรายชื่อที่มีอยู่ได้ โปรดดูรายละเอียดที่หน้า 31



แตะเพื่อเข้าใช้เมนูตัวเลือกข้อความ คุณสามารถสร้าง SMS หรือ MMS ใหม่ หรือดูข้อความในโฟลเดอร์ข้อความได้ โปรดดูรายละเอียดที่หน้า 36



แตะเพื่อเปิดเมนูบนสุดแบบเต็ม โดยจะแบ่งเป็นเมนูย่อยแนวตั้ง 4 เมนู แตะที่แท็บของเมนูย่อยแต่ละเมนูเพื่อดูตัวเลือกต่างๆ

01

02

03

04

05

06

07

08

## หน้าจอสถานะบาย

### แถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูล เช่น ระดับความแรงของสัญญาณ, ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีการใช้งานบลูทูธหรือ GPRS อยู่หรือไม่


ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	คำอธิบาย
	การทำงานหลายอย่าง
	ความแรงของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป)
	ไม่มีสัญญาณเครือข่าย
	พลังงานแบตเตอรี่ที่เหลืออยู่
	แบตเตอรี่หมด
	ข้อความตัวอักษรใหม่
	ข้อความเสียงใหม่



ไอคอน	คำอธิบาย
	ข้อความในถาดเข้าเต็ม
	การส่งข้อความล้มเหลว
	ตั้งปลุกแล้ว
	ใช้รูปแบบปรับแต่งอยู่
	ใช้รูปแบบปกติอยู่
	ใช้รูปแบบนอกอาคารอยู่
	ใช้รูปแบบเขียนอยู่
	ใช้รูปแบบชุดหูฟังอยู่
	โอนสายเรียกเข้า
	ใช้ EDGE อยู่
	โรมมิ่ง
	เปิดใช้โหมด Flight
	ใช้งานบลูทูธ
	เล่น BGM
	หยุด BGM

## การเปลี่ยนสถานะจากแถบสถานะ

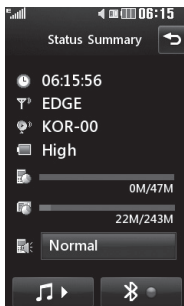แตะที่แถบสถานะเพื่อเปิดสรุปสถานะ โดยจะแสดงเวลาปัจจุบัน, เครือข่าย, SVC ID, แบตเตอรี่, หน่วยความจำเครื่อง, หน่วยความจำภายนอก, รูปแบบเสียง, MP3 และสถานะบลูทูธ คุณสามารถกำหนดประเภทรูปแบบเสียง เล่น/หยุดชั่วคราว MP3 และเปิด/ปิดการทำงานบลูทูธ



## การใช้ฟังก์ชันการทำงานหลายอย่าง

กดปุ่มมัลติทาสกิ้ง  เพื่อเปิดเมนู มัลติทาสกิ้ง จากเมนูนี้ คุณสามารถดูแอปพลิเคชันทั้งหมดที่รันอยู่ และเขาใช้งานได้ด้วยการกดปุ่มเดียว เมื่อคุณกำลังรันแอปพลิเคชันไว้ที่พื้นหลัง (เช่น เกมส์ หรือวิทยุ FM) ไอคอน  จะปรากฏขึ้นในแถบสถานะ

01

02

03

04

05




06


07


08


## การโทร

### การโทรออก

- 1 แตะที่  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกดเพื่อลบตัวเลข ให้แตะที่ปุ่มลบ
- 3 กดปุ่ม  เพื่อเริ่มการโทรออก
- 4 ในการวางสาย ให้กดปุ่ม 

**เคล็ดลับ!** ในการป้อน + เพื่อโทรออกต่างประเทศ กดปุ่ม  ค้างไว้




**เคล็ดลับ!** กดปุ่มล็อค/ปลดล็อค  เพื่อล็อคหน้าจอสัมผัส เพื่อป้องกันการโทรออกโดยไม่ได้ตั้งใจ


**เคล็ดลับ!** ในการเปิดปุ่มกดขึ้นระหว่างการใช้สาย ให้กดปุ่ม 

**เคล็ดลับ!** แตะเพื่อปลดล็อค คุณสามารถปลดล็อคได้โดยแตะที่ปุ่มค้างไว้จนหน้าจอสามารถใช้งานได้ หรือกดปุ่มปลดล็อค 






**เคล็ดลับ!** คุณสามารถส่งข้อความและค้นหารายชื่อได้โดยแตะที่ 

## การโทรออกโดยใช้รายชื่อ

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่  เพื่อเปิดสมุดแอดเดรส
- 2 ป้อนตัวอักษร 2-3 ตัวแรกของรายชื่อที่คุณต้องการโทรหา
- 3 จากรายการที่ฟลิตอร์นี้ ให้แตะที่รายชื่อที่ต้องการโทรหา แล้วเลือกหมายเลขที่จะใช้ หากมีการบันทึกไว้มากกว่าหนึ่งหมายเลข
- 4 กดปุ่ม  หรือแตะที่  เพื่อโทรออก

**เคล็ดลับ!** คุณสามารถค้นหารายชื่อได้จากหน้าจอโทรออก แตะที่  แล้วเลือก **ไปที่รายชื่อ** เลื่อนดูรายชื่อ หรือป้อนตัวเลขสองสามตัวแรกของหมายเลขเพื่อฟลิตอร์รายการ

## การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่ม  หรือแตะที่  เพื่อรับสาย แตะที่  เพื่อปิดเสียงกริ่ง วิธีนี้เป็นวิธีที่ดี หากคุณเลื่อมเปลี่ยนรูปแบบเป็น เงียบ เมื่ออยู่ในห้องประชุม กดปุ่ม  หรือแตะที่  เพื่อปฏิเสธสายเรียกเข้า

01

02

03

04

05


06


07

08

# การโทร

## ตัวเลือกต่างๆ ระหว่างใช้สาย

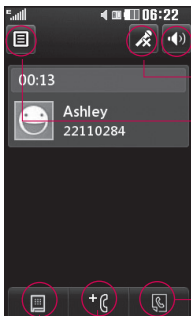


**ลำโพง** - แตะที่  เพื่อเปิดลำโพง

**ปิดเสียง** - แตะที่  เพื่อปิดไมโครโฟน ดังนั้นบุคคลที่กำลังคุยสายอยู่จะไม่ได้ยินเสียงคุณ

**ตัวเลือก** - เลือกจากรายการตัวเลือกต่างๆ ระหว่างใช้สาย รวมถึง **ไปที่ขอความช่วยเหลือ** ดังนั้นคุณสามารถตรวจสอบขอความช่วยเหลือไปที่รายชื่อเพื่อเพิ่มหรือค้นหารายชื่อระหว่างการใช้สายได้ นอกจากนี้คุณยังสามารถวางสายได้โดยการแตะที่ **วางสาย**

 - เลือกเพื่อค้นหารายชื่อระหว่างการใช้สาย

**+ ** - เลือกเพื่อเพิ่มบุคคลอื่นในการสนทนา

 - เลือกเพื่อเปิดปุ่มตัวเลขสำหรับการนำเมนูด้วยตัวเลือกแบบตัวเลข ตัวอย่างเช่น การโทรไปยังศูนย์บริการหรือการบริการทางโทรศัพท์อัตโนมัติต่างๆ




**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือกต่างๆ หรือรายชื่อให้แตะที่รายการสุดท้ายที่มองเห็นได้ แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

## การปรับระดับเสียงสนทนา





หากต้องการปรับระดับเสียงระหว่างการ  
การใช้สาย ให้ไข่มุมขึ้นและลงที่ขอบ  
ด้านซ้ายของโทรศัพท์

## โทรด่วน

คุณสามารถกำหนดรายชื่อที่โทรออก  
บ่อยเป็นหมายเลขโทรด่วนได้

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่  และเลือก  และแตะที่ 
- 2 วอยซ์เมลล์ได้รับการกำหนดให้อยู่ที่หมายเลขโทรด่วน 1 ซึ่งคุณไม่สามารถเปลี่ยนแปลงได้ แตะที่หมายเลขอื่นๆ เพื่อกำหนดรายชื่อสำหรับโทรด่วน
- 3 สมุดแอดเดรสจะเปิดขึ้น เลือกรายชื่อที่คุณต้องการกำหนดให้กับหมายเลขนั้น โดยการแตะที่หมายเลขโทรศัพท์หนึ่งครั้งในการค้นหารายชื่อ ให้แตะที่กล่องฟิลด์ค้นหา และป้อนตัวอักษรแรกของชื่อที่ต้องการ

## การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะที่  แล้วเลือกหมายเลขที่คุณต้องการโทรออก
- 2 ป้อนหมายเลข หรือค้นหารายชื่อ (โปรดดูรายละเอียดที่ **การโทรออก** ในหน้า 23)
- 3 กด  เพื่อต่อสาย
- 4 สายสนทนาทั้งสองสายจะแสดงอยู่บนหน้าจอการโทรออก สายสนทนาแรกจะล็อกและพักสายคู่สนทนา
- 5 ในการสลับสาย ให้แตะที่  และเลือก **สลับสาย** หรือกดหมายเลขที่พักสายไว้
- 6 ในการวางสายใดสายหนึ่ง หรือวางสายทั้งสองสาย ให้กด  และเลือก **วางสาย** แล้วตามด้วย **ทั้งหมด**, **พัก** หรือ **ใช้งาน**

01

02

03

04

05

06

07

08


## การโทร

**เคล็ดลับ!** คุณสามารถรวมสายเข้าด้วยกันได้โดยการเลือก **ยอมรับ** จากนั้นเลือก **รวม** ควรตรวจสอบว่าผู้ให้บริการเครือข่ายสนับสนุนการประชุมสายนี้

**หมายเหตุ:** คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

### การปิด DTMF

DTMF ทำให้คุณสามารถใช้คำสั่งตัวเลขในการนำเกตเมนูภายในการโทรอัตโนมัติได้ โดย DTMF จะเปิดตามค่าเริ่มต้น

ในการปิดการทำงานระหว่างใช้สาย (เช่น การกดตัวเลข) ให้แตะที่  และเลือก **ปิด DTMF**

## การดูบันทึกการโทร

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

แตะที่  และเลือก  และแตะที่ 

เลือกเพื่อดู:


**ทั้งหมด** - ดูรายการที่คุณโทรออก, ได้รับ และไม่ได้รับทั้งหมด

**โทรออก**  - ดูรายการหมายเลขที่คุณโทรออกทั้งหมด

**ที่รับ**  - ดูรายการหมายเลขที่โทรเข้ามาหาคุณทั้งหมด

**เบอร์ที่ไม่ได้รับ**  - ดูรายการสายที่คุณไม่ได้รับทั้งหมด




### เคล็ดลับ!

จากบันทึกการโทร ให้แตะที่  และ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

### เคล็ดลับ!

แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่, เวลา และระยะเวลาในการโทร

## การใช้การโอนสาย

- 1 แตะที่  เลือก  และเลือก 
- 2 แตะที่ **การโอนสาย**
- 3 เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดต่อไม่ได้
- 4 ป้อนหมายเลขที่คุณต้องการให้โอนสายไป
- 5 แตะที่ **คำขอ** เพื่อเปิดใช้งาน

**หมายเหตุ:** คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

### เคล็ดลับ!

ในการปิดการโอนสายทั้งหมด ให้เลือก **เลิกใช้ทั้งหมด** จากเมนู **การโอนสาย**

## การใช้การป้องกันการโทร

- 1 แตะที่  เลือก  และเลือก 
- 2 แตะที่ **ป้องกันการโทร**
- 3 เลือกตัวเลือกใดตัวเลือกหนึ่งหรือเลือกทั้ง 6 ตัวเลือกนี้:  
**โทรออกทั้งหมด**  
**สายโทรออกต่างประเทศ**  
**สายโทรออกต่างประเทศ ยกเว้นประเทศแม่**  
**สายเรียกเข้าทั้งหมด**  
**สายเข้าเมื่ออยู่ต่างประเทศ**

01

02

03

04

05

06

07



08

## การโทร

- 4 ป้อนรหัสผ่านสำหรับจำกัดการโทรโปรดตรวจสอบกับผู้ให้บริการระบบเครือข่ายของคุณเกี่ยวกับบริการนี้

**เคล็ดลับ!** เลือก **กำหนดเบอร์โทรออก** เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

## การเปลี่ยนการตั้งค่าการโทรทั่วไป

- 1 แตะที่  เลือก **ตั้งค่า** และเลือก 

- 2 แตะที่ **ตั้งค่าทั่วไป** จากหน้าจอนี้ คุณสามารถแก้ไขการตั้งค่าของ:

### ปฏิเสธการรับสาย

- เลื่อนสวิตช์ไปที่ **เปิด** เพื่อเลื่อนแถบไปที่ ปฏิเสธรายการ คุณสามารถแตะที่กล่องข้อความเพื่อเลือกจากทุกสาย รายชื่อหรือกลุ่มที่ระบุไว้ หรือจากหมายเลขที่ไม่รู้จัก (ไม่มีอยู่ในรายชื่อของคุณ) แตะที่ **บันทึก** เพื่อเปลี่ยนการตั้งค่า

**ส่งหมายเลขตัวเอง** - เลือกว่าจะแสดงหมายเลขของคุณเมื่อคุณโทรออกหรือไม่

**โทรซ้ำอัตโนมัติ** - เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

**โหมดตอบรับ** - เลือกว่าจะรับสายโดยใช้ปุ่ม **ส่ง** หรือปุ่ม **ดู**

เดือนทุกนาที - เลื่อนสวิตช์ไปทาง  
ซ้ายเพื่อ เปิด การฟังเสียงเดือนทุก  
นาทีระหว่างการใช้สาย

**โหมดตอบรับ BT** - เลือก  
แฮนด์ฟรี เพื่อให้สามารถรับสายได้  
ในระหว่างใช้งานชุดหูฟังบลูทูธ  
หรือเลือก ตัวเครื่อง เพื่อรับสาย  
โดยกดปุ่มบนตัวเครื่อง

**บันทึกหมายเลขใหม่** - เลือก ใช้  
เพื่อบันทึกหมายเลขใหม่

**เคล็ดลับ!** ในการเลื่อนดูราย  
การตัวเลือก ให้แตะที่รายการสุด  
ท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้า  
จอขึ้น รายการต่างๆ จะเลื่อนขึ้น  
ทำให้มองเห็นรายการอื่นๆ ได้

01

02

03

04

05

06



07

08




## รายชื่อ

### การค้นหารายชื่อ

คุณสามารถค้นหารายชื่อได้ 2 วิธี:  
จากหน้าจอสแตนด์บาย

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่  เพื่อเปิดสมุดแอดเดรส เลือกกรายชื่อจากรายการที่คุณต้องการโทร
- 2 แตะที่ **สาย** หรือกดปุ่ม  เพื่อเริ่มการโทรออก


### จากเมนูหลัก

- 1 แตะที่  เลือก 
- 2 แตะที่ 
- 3 คุณจะเห็นรายชื่อ การพิมพ์ตัวอักษรแรกของชื่อจะทำให้เมนูข้ามไปที่พื้นที่ของรายชื่อตามตัวอักษรนั้น

**เคล็ดลับ!** ปุ่มกดตัวอักษรจะปรากฏขึ้นเมื่อคุณแตะที่สี่เหลี่ยมว่าง

**เคล็ดลับ!** ในการเลื่อนดูรายชื่อ ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

### การเพิ่มรายชื่อใหม่


- 1 จากหน้าจอสแตนด์บาย ให้แตะที่  และแตะ **เพิ่มรายชื่อ**
- 2 เลือกว่าจะบันทึกกรายชื่อไปยัง **ตัวเครื่อง** หรือ **USIM**
- 3 ป้อนชื่อและนามสกุลของรายชื่อใหม่ คุณไม่จำเป็นต้องป้อนทั้งสองรายการ แต่คุณต้องป้อนรายการใดรายการหนึ่ง

- 4 คุณสามารถป้อนหมายเลขที่แตกต่างกันได้สูงสุด 5 หมายเลขต่อหนึ่งรายชื่อ แต่ละรายการจะมีประเภทที่ตั้งล่วงหน้า **เบอร์มือถือ, โสม, ออฟฟิศ, เบอร์เพจเจอร์, แฟกซ์ และ ทัวไป** เมื่อคุณป้อนเสร็จแล้ว ให้แตะที่ **ปิด**
- 5 เพิ่มอีเมลแอดเดรส
- 6 กำหนดรายชื่อให้กับกลุ่มอย่างน้อยหนึ่งกลุ่ม เลือกจาก **ไม่มีกลุ่ม, ครอบครัว, เพื่อน, เพื่อนร่วมงาน, โรงเรียน หรือ วิไอพี**
- 7 คุณสามารถเพิ่ม **เสียงเรียกเข้า, วันเกิด, วันครบรอบ, โสมเพจ, ที่อยู่บ้าน, ชื่อบริษัท, ชื่องาน, ที่อยู่บริษัท และ บันทึทิก**
- 8 แตะที่ **บันทึทิก** เพื่อบันทึกรายชื่อ

**เคล็ดลับ!** คุณสามารถสร้างกลุ่มที่กำหนดเองสำหรับรายชื่อของคุณได้ โปรดดูที่ **การสร้างกลุ่ม** ในหน้า 33

## ตัวเลือกต่างๆ ของรายชื่อ

คุณสามารถใช้ฟังก์ชันต่างๆ ได้มากมายขณะที่ดูรายชื่อ ขั้นตอนต่อไปนี้จะแสดงวิธีการเข้าถึงและใช้งานเมนูตัวเลือกต่างๆ:

- 1 เปิดรายชื่อที่คุณต้องการใช้ โปรดดูที่ **การค้นหารายชื่อ** ในหน้า 31
- 2 คุณสามารถโทรออก หรือส่งข้อความได้โดยตรงจากขั้นตอนนี้
- 3 กด  เพื่อเปิดรายการตัวเลือก **แก้ไข** - เปลี่ยนแปลงรายละเอียดของรายชื่อ  
**ลบ** - ลบรายชื่อ แตะที่ **ใช้** เมื่อคุณแน่ใจ  
**คัดลอกหรือย้ายไปยังUSIM/เครื่อง** - เลือกย้ายหรือคัดลอกไปยัง USIM การ์ดหรือตัวเครื่อง (ขึ้นอยู่กับตำแหน่งที่คุณบันทึกรายชื่อดังแต่เริ่มแรก)

01

02

03

04

05

06

07




08

## รายชื่อ


**ส่งนามบัตร** - ส่งรายละเอียดของรายชื่อไปยังบุคคลอื่นเป็นนามบัตรเลือกเพื่อส่งเป็น ข้อความตัวอักษร, ข้อความมัลติมีเดีย, อีเมล หรือผ่านบลูทูธ

**เคล็ดลับ!** **ส่งข้อความ** - ส่งข้อความไปยังรายชื่อหากรายชื่อมีอีเมลแอดเดรสให้เลือกกว่าคุณ จะส่งข้อความเป็นอีเมลหรือ SMS/MMS โปรดดูรายละเอียดเกี่ยวกับวิธีการส่งข้อความที่หน้า 36

### การสร้างกลุ่ม

- 1 แตะที่  และเลือก 
- 2 แตะที่ **รายชื่อ** แล้วเลือก **กลุ่ม**
- 3 แตะที่ 
- 4 เลือก **เพิ่มกลุ่ม**
- 5 ป้อนชื่อสำหรับกลุ่มใหม่ของคุณ คุณสามารถกำหนดเสียงเรียกเข้าให้กับกลุ่มได้
- 6 แตะที่ **บันทึก**



**หมายเหตุ:** หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะหายไป แต่ยังคงอยู่ในสมุดแอดเดรส

**เคล็ดลับ!** คุณสามารถแก้ไขกลุ่มที่มีอยู่ได้โดยการเลื่อนแถบไปที่กลุ่มที่ต้องการ แล้วแตะที่  เลือก **เพิ่มสมาชิก** ในกลุ่มจากรายชื่อของคุณ, กำหนดกลุ่มเสียงเรียกเข้า, เปลี่ยนชื่อกลุ่ม หรือลบกลุ่ม

### การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถปรับการตั้งค่ารายชื่อเพื่อให้เหมาะกับสมุดแอดเดรสในแบบที่คุณต้องการได้

**เคล็ดลับ!** ในการเลือกรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่  และเลือก 
- 2 แตะที่ **รายชื่อ** และเลือก **ตั้งค่า**
- 3 จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าต่อไปนี้:

**การตั้งค่ารายชื่อ** - เลือกว่าจะดูรายชื่อที่บันทึกไว้ทั้งใน ตัวเครื่อง & USIM, เฉพาะตัวเครื่อง หรือ เฉพาะ USIM

นอกจากนี้ คุณยังสามารถเลือกที่จะแสดงชื่อหรือนามสกุลของรายชื่อขึ้นก่อนก็ได้

**ซิงโครไนซ์รายชื่อ** - เชื่อมต่อไปยังเซิร์ฟเวอร์ของคุณ เพื่อซิงโครไนซ์รายชื่อต่างๆ โปรดดูที่การซิงโครไนซ์รายชื่อในหน้า 107

**คัดลอก** - คัดลอกรายชื่อจาก USIM ไปยังตัวเครื่อง หรือจากตัวเครื่องไปยัง USIM เลือกว่าจะคัดลอกทีละรายการหรือทั้งหมดในครั้งเดียว หากคุณเลือกดำเนินการทีละรายการ คุณจะต้องเลือกรายชื่อที่จะคัดลอกทีละรายชื่อ


**ย้าย** - ตัวเลือกนี้ทำงานในลักษณะเดียวกับตัวเลือก คัดลอก แต่เครื่องจะบันทึกเฉพาะรายชื่อในตำแหน่งที่คุณย้ายไปเท่านั้น หากคุณย้ายรายชื่อจาก USIM ไปยังตัวเครื่อง รายชื่อนั้นจะถูกลบออกจากหน่วยความจำ USIM

#### **ส่งทุกรายชื่อผ่านบลูทูธ**

- ส่งรายชื่อทั้งหมดไปยังอุปกรณ์อื่นโดยใช้บลูทูธ เครื่องจะแสดงความให้คุณเปิดบลูทูธหากคุณเลือกตัวเลือกนี้

**สำรองข้อมูลรายชื่อ** - โปรดดูที่การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์ในหน้า 106

**เรียกคืนรายชื่อ** - โปรดดูที่การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์ในหน้า 106

**ลบรายชื่อ** - ลบรายชื่อของคุณทั้งหมดแตะที่  หากคุณต้องการล้างสมุดแอดเดรสของคุณ

01

02

03

04

05



06

07

08

# รายชื่อ

## การดูข้อมูล

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่  และเลือก 
- 2 แตะที่ **รายชื่อ** และเลือก **ข้อมูล**
- 3 จากขั้นตอนนี้ คุณจะสามารดู **เบอร์บริการ, เบอร์ส่วนตัว, ข้อมูลหน่วยความจำ** (จำนวนพื้นที่หน่วยความจำที่เหลืออยู่) และ **นามบัตร** ของคุณได้

**เคล็ดลับ!** หากคุณยังไม่ได้เพิ่มนามบัตรของคุณเอง เลือก **นามบัตร** แล้วป้อนรายละเอียดทั้งหมดที่คุณต้องการส่งให้รายชื่อแตะที่ **บันทึก** เพื่อดำเนินการให้เสร็จสิ้น

# ข้อความ

## ข้อความ





โทรศัพท์ KP500

ของคุณได้ผสมผสาน SMS, MMS และอีเมลไว้ในเครื่องเดียว และเมนูที่ใช้งานง่าย

คุณสามารถเข้าสู่ศูนย์ข้อความได้ 2 วิธี ดังนี้:

- 1 แตะที่  จากหน้าจอสแตนด์บาย
- 2 แตะที่  จากหน้าจอสแตนด์บาย แล้วเลือก  และเลือก 

## การส่งข้อความ

- 1 แตะที่  เพื่อเปิดข้อความเปล่า
- 2 จากขั้นตอนนี้ คุณสามารถส่ง SMS หรือ MMS ได้ ในการส่งอีเมล ให้แตะที่  จากหน้าจอสแตนด์บาย แล้วเลือก  และ  โปรดดูรายละเอียดที่หน้า 40
- 3 แตะที่ **แทรก** เพื่อเพิ่ม ภาพ, วิดีโอ, เสียง หรือข้อความอัตโนมัติ

- 4 แตะ **ถึง** ที่ด้านบนสุดของหน้าจอ เพื่อป้อนหมายเลขโทรศัพท์ของผู้รับ หรือแตะไอคอนการค้นหาเพื่อเปิดสมุดแอดเดรส คุณสามารถเพิ่มรายชื่อหลายรายการได้ และที่ **ส่ง** เมื่อพร้อม

### คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะถูกแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น

### เคล็ดลับ!

ตอบกลับแบบรวดเร็ว - ส่งการตอบกลับไปยังข้อความที่เลือกได้ทันทีโดยใช้ข้อความอัตโนมัติ

01

02

03

04

05

06

07

08

## ข้อความ


### การป้อนข้อความ

คุณสามารถป้อนข้อความได้ 5 วิธีดังนี้:

ปุ่มกด, คีย์บอร์ด, เขียนมือ-สกรีน, เขียนมือ-บ็อกซ์, เขียนมือ-ดับเบิลบ็อกซ์


คุณสามารถเลือกวิธีป้อนข้อมูลได้โดยแตะที่  และ **วิธีป้อนข้อมูล**

แตะที่หน้าจอหนึ่งครั้ง  
แป้นพิมพ์จะปรากฏขึ้น


 และเพื่อเปิดระบบป้อนข้อความแบบช่วยสะกดคำ T9

 คุณสามารถเลือกภาษาที่ใช้เขียนได้

 และเพื่อเปลี่ยนปุ่มกดตัวเลข, สัญลักษณ์ และข้อความ

ใช้  เพื่อเลื่อนดูประเภทแป้นพิมพ์แบบต่างๆ ในโหมดป้อนข้อความแต่ละโหมด (ตัวอย่างเช่น ตัวพิมพ์ใหญ่หรือตัวพิมพ์เล็ก)

### ระบบช่วยสะกดคำ T9

ในโหมด T9 สัญลักษณ์  จะปรากฏขึ้น

โหมด T9 จะใช้พจนานุกรมภายในเครื่อง เพื่อรับรู้คำศัพท์ที่คุณเขียนตามลำดับการกดปุ่ม เพียงแตะที่ปุ่มตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณจะป้อน พจนานุกรมจะคาดคะเนได้ถึงคำศัพท์ที่คุณต้องการใช้

ตัวอย่างเช่น กด 8, 3, 5, 3, 7, 4, 6, 6, 3 เพื่อเขียนคำว่า 'telephone'


### การป้อนตัวอักษรด้วยตนเอง


ในโหมดการป้อนตัวอักษรด้วยตนเอง สัญลักษณ์  จะปรากฏขึ้น

ในโหมดการป้อนตัวอักษรด้วยตนเอง คุณต้องแตะที่ปุ่มซ้ำๆ

เพื่อป้อนตัวอักษร ตัวอย่างเช่น ในการเขียนคำว่า 'hello' ให้แตะ 4 สองครั้ง, 3 สองครั้ง, 5 สามครั้ง, 5 สามครั้ง อีกครั้งหนึ่ง แล้ว 6 สามครั้ง

## แป้นพิมพ์

ในโหมดคีย์บอร์ด หน้าจอจะพลิกด้านเป็นแนวนอน และแป้นพิมพ์แบบเต็มจะปรากฏขึ้นบนหน้าจอ เพียงแตะที่ตัวอักษรต่างๆ เพื่อเขียนข้อความ แล้วกด  เพื่อเปลี่ยนเป็นตัวพิมพ์ใหญ่

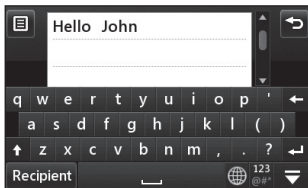

**เคล็ดลับ!** โหมดแป้นพิมพ์จะคาดคะเนและแสดงสิ่งที่คุณจะพิมพ์ต่อไป คำศัพท์เหล่านี้จะคาดคะเนมาจากประโยคที่คุณเคยพิมพ์มาก่อน หากคุณไม่ต้องการใช้คำศัพท์ที่แนะนำ ให้พิมพ์คำศัพท์ใหม่ต่อไป หากคุณต้องการใช้คำศัพท์ที่แนะนำนั้น ให้กด Space Bar เพื่อยืนยันคำศัพท์นั้น

## การจดจำลายมือ

ในโหมดเขียนมือ คุณเพียงแค่เขียนบนหน้าจอ และโทรศัพท์ KP500 จะแปลงลายมือของคุณเป็นข้อความ เลือกหน้าจอ หรือ บ็อกซ์ ขึ้นอยู่กับมุมมองที่คุณต้องการ

01

02

03

04

05

06

07

08

## ข้อความ

**เคล็ดลับ!** การใช้สไตลส์  
ในโหมดนี้จะทำให้คุณทำงาน  
ได้ง่ายขึ้น โปรดค่อยๆ  
แตะสไตลส์ที่หน้าจอ เพื่อป้องกัน  
หน้าจอเสียหาย

การจดจำลายมือจะแปลการเคลื่อนไหวของสไตลส์เป็นตัวอักษร, ตัวเลขหรืออักขระอื่นๆ และจะแสดงอักขระเหล่านี้เป็นข้อความ คุณสามารถใช้การจดจำลายมือได้เมื่อป้อนข้อความเท่านั้น

**หมายเหตุ:** คุณสามารถเขียนตัวอักษรส่วนใหญ่ได้โดยใช้ลักษณะการลากเส้นแบบต่างๆ โปรดดูที่ตารางด้านล่าง ตำแหน่งบนหน้าจอจะเป็นตัวกำหนดตัวพิมพ์ไม่ใช้สไตลส์

## ตัวอักษร

หากคุณเลือกโหมดอักษรตัวพิมพ์ใหญ่ (ABC) ตัวอักษรที่คุณพิมพ์จะป้อนเป็นอักษรตัวพิมพ์ใหญ่แม้ว่าคุณจะเขียนเป็นอักษรตัวพิมพ์เล็กก็ตาม และกลับกันได้อีกด้วย

ตัวอักษร	การลากเส้น
A	๐ ๑ ๒ ๓
B	๔ ๕ ๖ ๗
C	๘ ๙
D	๑๐ ๑๑ ๑๒ ๑๓
E	๑๔ ๑๕ ๑๖ ๑๗
F	๑๘ ๑๙ ๒๐ ๒๑
G	๒๒ ๒๓ ๒๔ ๒๕
H	๒๖ ๒๗ ๒๘ ๒๙
I	๓๐ ๓๑ ๓๒ ๓๓
J	๓๔ ๓๕ ๓๖ ๓๗
K	๓๘ ๓๙ ๔๐ ๔๑
L	๔๒ ๔๓ ๔๔

ตัวอักษร	การลากเส้น
M	M M M M
N	N N N N
O	O O O O
P	P P P P
Q	Q Q Q Q
R	R R R R
S	S S S S
T	T T T T
U	U U U U
V	V V V V
W	W W W W
X	X X X X
Y	Y Y Y Y
Z	Z Z Z Z
B	B B B B

## ตัวเลข

ตัวเลขจะเขียนเหนือลูกศร

ตัวเลข	การลากเส้น
0	0 0
1	1 1 1 1
2	2 2 2
3	3 3 3
4	4 4 4 4
5	5 5 5 5
6	6 6 6 6
7	7 7 7 7
8	8 8 8 8
9	9 9 9 9

01

02

03

04

05

06

07




08

## ข้อความ

### การตั้งค่าอีเมล

คุณสามารถติดต่อสื่อสารระหว่างการเดินทางได้โดยใช้อีเมลบนโทรศัพท์ KP500 ซึ่งคุณสามารถกำหนดอีเมลแอดเดสแบบ POP3 หรือ IMAP4 ได้อย่างรวดเร็วและง่ายดาย

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

- 1 แตะที่  แล้วแตะที่ 
- 2 เลือก  แล้วเลื่อนเมนูไปที่ **ตั้งค่า** แล้วแตะที่ **ตั้งค่า**
- 3 แตะที่ **อีเมล** แล้วเลือก **แอดเดสที่อีเมล**
- 4 แตะที่ **แอดเดสใหม่**
- 5 วิศวกรตั้งค่าจะช่วยให้คุณตั้งค่าอีเมล

**อีเมลแอดเดรส** - ป้อนอีเมลแอดเดรสของคุณ

**รหัสผ่าน** - ป้อนรหัสผ่านของแอดเดส

**ชื่อผู้ใช้** - ป้อน ID ผู้ใช้แอดเดสของคุณที่ได้จากผู้ให้บริการอีเมล

**ประเภทเมลบ็อกซ์** - เลือกประเภทโปรโตคอลอินเทอร์เน็ตที่ใช้ในการถ่ายโอนอีเมล IMAP4 หรือ POP3

**เซิร์ฟเวอร์เมลขาเข้า** - ป้อนชื่อเซิร์ฟเวอร์เมลขาเข้า (POP3 หรือ IMAP4) หรือ IP แอดเดรส

**เซิร์ฟเวอร์เมลที่ส่งออก** - ป้อนชื่อเซิร์ฟเวอร์เมลขาออก (SMTP) หรือ IP แอดเดรส ซึ่งอาจเป็นเซิร์ฟเวอร์เดียวกับเซิร์ฟเวอร์เมลขาเข้า

**ตรวจสอบสิทธิ์ SMTP** - เปิดการตรวจสอบสิทธิ์ SMTP หากเซิร์ฟเวอร์ขาออกต้องการชื่อผู้ใช้และรหัสผ่านในการส่งอีเมล

**ข้อบัญญัติ** - ป้อนชื่อเมล็บบอกซ์ที่คุณต้องการให้ปรากฏเป็นข้อบัญญัติของเมล็บบอกซ์

ในตอนนี คุณได้กำหนดค่าให้กับแอคเคาท์เรียบร้อยแล้ว ซึ่งแอคเคาท์นี้จะปรากฏอยู่ในรายการแอคเคาท์ในโฟลเดอร์ อีเมล

**6** คุณสามารถตรวจสอบและแก้ไขการตั้งค่าได้โดยเลือกแอคเคาท์ในรายการ นอกจากนี้ คุณยังสามารถตรวจสอบการตั้งค่าเพิ่มเติมซึ่งมีข้อมูลโดยอัตโนมัติเมื่อคุณสร้างแอคเคาท์

**อีเมลที่ตอบกลับ** - ป้อนอีเมลแอดเดรสเพื่อใช้ 'ตอบกลับ'

**ขนาดการรับสูงสุด** - เลือกขนาดที่จำกัดไว้ของอีเมลขนาดการรับสูงสุดคือ 1MB

**บันทึกเมลที่ส่งไว้ใน** - เลือกว่าจะบันทึกอีเมลที่ส่ง (ตัวเลือกเมื่อตั้งค่าประเภทเมล็บบอกซ์เป็น IMAP4) หรือไม่ เมื่อประเภทเมล็บบอกซ์เป็น POP3 เมลที่ส่งจะถูกบันทึกไว้ในตัวเครื่อง

**จุดเชื่อมต่อ** - เลือกจุดเชื่อมต่ออินเทอร์เน็ต

**ดาวน์โหลดอัตโนมัติ** - เลือกว่าจะดึงอีเมลใหม่โดยอัตโนมัติหรือไม่

**การตั้งค่าขั้นสูง** - เลือกว่าจะใช้การตั้งค่าขั้นสูงหรือไม่

**หมายเลขพอร์ต SMTP** - โดยทั่วไป หมายเลขนี้ คือ 25

**SMTP TLS/SSL** - เลือกว่าจะใช้ SSL สำหรับเซิร์ฟเวอร์ขาออกหรือไม่

**พอร์ตเซิร์ฟเวอร์ขาเข้า** - โดยทั่วไป หมายเลขนี้ คือ 110 สำหรับแอคเคาท์แบบ POP3 และ 143 สำหรับแอคเคาท์แบบ IMAP4

01

02

03

04

05

06

07

08

## ข้อความ

**TLS/SSL ขาเข้า** - เลือกว่าจะใช้ SSL สำหรับเซิร์ฟเวอร์ขาเข้าหรือไม่

**ชื่อผู้ใช้ SMTP** - ป้อนชื่อผู้ใช้ SMTP

**รหัสผ่าน SMTP** - ป้อนรหัสผ่าน SMTP

**ล็อกอินที่ปลอดภัย APOP** - เลือกเพื่อเปิดใช้งานล็อกอินเพื่อความปลอดภัย APOP สำหรับแอคเคาท์แบบ POP3 สำหรับแอคเคาท์แบบ IMAP4 จะตั้งค่าเป็นปิดการใช้งานเสมอ

- 7 คุณสามารถเปลี่ยนอีเมลแอคเคาท์ดีฟอลต์ได้โดยแตะที่ **เปิดใช้**

## การดึงข้อมูลอีเมล

คุณสามารถตรวจสอบอีเมลใหม่ในแอคเคาท์ของคุณแบบอัตโนมัติหรือด้วยตนเองได้ โปรดดูที่ 'การเปลี่ยนการตั้งค่าอีเมล' ในหน้า 45 เพื่อตรวจสอบแบบอัตโนมัติในการตรวจสอบด้วยตนเอง:

- 1 แตะที่  แล้วเลือก  และ **ข้อความ**
- 2 แตะที่ **เนลล์บอกซ์**
- 3 แตะที่แอคเคาท์ที่คุณต้องการใช้ แล้วเลือก 
- 4 เลือก **เรียกดู** และโทรศัพท์ KP500 จะเชื่อมต่อกับอีเมลแอคเคาท์ และดึงข้อมูลข้อความใหม่ของคุณ

## การส่งอีเมลโดยใช้แอคเคาท์ใหม่

- 1 แตะที่ **อีเมลใหม่** ในเมนู **ติดต่อสื่อสาร** และอีเมลใหม่จะเปิดขึ้น
- 2 คุณสามารถป้อนแอตเดรสผู้รับและเขียนข้อความของคุณได้ นอกจากนี้คุณยังสามารถแนบภาพ วิดีโอ เสียง หรือไฟล์ประเภทอื่นได้
- 3 แตะที่ **ส่ง** แล้วอีเมลจะถูกส่งออกไป



### เคล็ดลับ!

คุณสามารถอัปโหลดเอกสาร Word, Excel, PowerPoint และ PDF ไปที่โทรศัพท์ KP500 เพื่อให้คุณสามารถตรวจดูเอกสารระหว่างเดินทางได้

## การเปลี่ยนการตั้งค่าอีเมล

คุณสามารถเปลี่ยนแปลงการตั้งค่าอีเมลให้เป็นในแบบที่คุณต้องการได้

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นมาใหม่มองเห็นรายการอื่นๆ ได้

- 1 แตะที่  แล้วเลือก  และ **ข้อความ**
- 2 แตะที่ **ตั้งค่า** และ **อีเมล** ซึ่งคุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:

**ตอบกลับอีเมลได้** - เลือกเพื่อให้ส่งข้อความ 'อ่าน, การยืนยัน'  
**ร้องขอการตอบกลับอีเมล** - เลือกว่าต้องการข้อความ 'ยืนยันการอ่าน' หรือไม่

01

02

03

04

05

06

07

08

## ข้อความ

**รอบเวลาการเรียกดู** - เลือกความถี่ที่จะให้โทรศัพท์ KP500

ตรวจสอบข้อความอีเมลใหม่

**จำนวนที่รับ** - เลือกจำนวนอีเมลที่ดึงข้อมูลในหนึ่งครั้ง

**รวมข้อความ** - เลือกเพื่อรวมข้อความต้นฉบับในการตอบกลับ

**รวมสิ่งที่แนบ** - เลือกเพื่อรวมสิ่งที่แนบต้นฉบับในการตอบกลับ

**เรียกอัตโนมัติในการโรมมิ่ง**

- เลือกว่าจะดึงข้อความโดยอัตโนมัติเมื่อคุณอยู่ต่างประเทศ (โรมมิ่ง) หรือไม่

**เคล็ดลับ!** ค่าใช้จ่ายสำหรับการดึงข้อมูลอีเมลอาจจะสูงขึ้นเมื่อโรมมิ่ง ให้ตรวจสอบกับผู้ให้บริการเครือข่าย

**การแจ้งเตือนอีเมลใหม่** - เลือกว่าจะแจ้งเตือนอีเมลใหม่หรือไม่

**ลายเซ็น** - สร้างลายเซ็นในอีเมลและเปิดคุณสมบัตินี้

**ระดับความสำคัญ** - เลือกระดับความสำคัญของข้อความอีเมล

## โฟลเดอร์ข้อความ

คุณจะได้รับถึงโครงสร้างโฟลเดอร์ที่ใช้ในโทรศัพท์ KP500

ได้เนื่องจากโฟลเดอร์ต่างๆมีโครงสร้างที่เข้าใจง่าย

**ภาคเข้า** - ข้อความทั้งหมดที่คุณได้รับจะอยู่ในภาคเข้า

จากเมนูนี้คุณสามารถดู ลบ

และดำเนินการอื่นๆ ได้ โปรดดูรายละเอียดเพิ่มเติมที่ **การจัดการข้อความ**

ด้านล่างนี้

**เมลล์บ็อกซ์** - อีเมลทั้งหมดที่คุณได้รับในโทรศัพท์ KP500

จะอยู่ในเมลล์บ็อกซ์

**ร่าง** - หากคุณยังเขียนข้อความไม่เสร็จ คุณสามารถบันทึกสิ่งที่คุณเขียนไว้ที่นี้ได้

**ถอดออก** - โฟลเดอร์นี้เป็นโฟลเดอร์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป

**รายการที่ส่ง** - ข้อความทั้งหมดที่คุณส่งจะอยู่ในโฟลเดอร์นี้

**โฟลเดอร์ส่วนตัว** - สร้างโฟลเดอร์เพื่อจัดเก็บข้อความ

## การจัดการข้อความ

คุณสามารถใช้ ถัดเข้า ในการจัดการข้อความของคุณได้

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้าจอลง รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

1 แตะที่  แล้วเลือก  และ **ข้อความ**

2 เลือก **ถัดเข้า**

3 แตะที่  จากนั้นเลือกเพื่อ:

**ลบ** - ลบข้อความที่เลือก

**ข้อความใหม่** - เปิดข้อความหรืออีเมลเปล่าใหม่

**ย้ายไปที่โฟลเดอร์ส่วนตัว** - ย้ายข้อความที่เลือกไปที่โฟลเดอร์ส่วนตัว

01

02

03

04

05

06

07

08

## ข้อความ

**ฟิลเตอร์** - ดูข้อความตามประเภท  
ซึ่งจะแบ่งกลุ่ม SMS แยกจาก  
MMS

**ลบทั้งหมด** -

**ลบข้อความทั้งหมด**

หากมีข้อความ **ไม่มีที่ว่างสำหรับ  
ข้อความใน USIM** ปรากฏขึ้น  
คุณควรลบข้อความบางข้อความใน  
USIM

หากมีข้อความ

**ไม่มีที่ว่างสำหรับข้อความ**

ปรากฏขึ้น คุณควรลบข้อความบาง  
ข้อความเพื่อเพิ่มพื้นที่หน่วยความจำ



## การใช้ข้อความอัตโนมัติ

สร้างข้อความอัตโนมัติสำหรับข้อความ SMS และ MMS ที่คุณส่งบ่อยๆ  
คุณจะพบว่าข้อความอัตโนมัติบาง  
ข้อความในโทรศัพท์ของคุณแล้ว ซึ่ง  
คุณสามารถแก้ไขข้อความเหล่านั้นได้  
หากต้องการ

- 1 แตะที่  แล้วเลือก  
**ข้อความอัตโนมัติ** ในเมนู  
**ติดต่อสื่อสาร**
- 2 เลือก **SMS อัตโนมัติ** หรือ **MMS  
อัตโนมัติ** คุณสามารถแตะที่  
 เพื่อ **รายชื่อใหม่,**  
**ลบ** หรือ **ลบทั้งหมด**  
สำหรับข้อความอัตโนมัติ
- 3 แตะที่ **เพิ่มข้อความอัตโนมัติ**  
เพื่อสร้างข้อความอัตโนมัติใหม่
- 4 คุณสามารถดูข้อความอัตโนมัติ  
ได้โดยเลือกข้อความอัตโนมัติใน  
รายการ และแก้ไขโดยแตะที่หน้า  
จอเพื่อดู

## การใช้อีโมติคอน


ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้อีโมติคอน คุณจะพบว่าอีโมติคอนที่ใช้กันทั่วไปในโทรศัพท์ของคุณแล้ว

- 1 แตะที่  แล้วเลือก **อีโมติคอน** ในเมนู **ติดต่อสื่อสาร**
- 2 แตะที่  เพื่อ **รายชื่อใหม่, ลบ หรือ ลบทั้งหมด** สำหรับอีโมติคอน

## การเปลี่ยนการตั้งค่าข้อความตัวอักษร

การตั้งค่าข้อความของโทรศัพท์ KP500 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนแปลงการตั้งค่านี้ได้ในแบบที่คุณต้องการ

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

- 1 แตะที่  แล้วเลือก **ตั้งค่า** ในเมนู **ติดต่อสื่อสาร**
- 2 เลือก **ข้อความตัวอักษร** คุณสามารถเปลี่ยนแปลง:
  - ศูนย์ข้อความตัวอักษร** - ป้อนรายละเอียดของศูนย์ข้อความ
  - รายงานผลการส่ง** - เลื่อนสวิตช์ไปทางซ้ายเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว
  - ช่วงที่มีผลใช้** - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ
  - ชนิดข้อความ** - เปลี่ยนข้อความตัวอักษรเป็น **เสียง, แฟกซ์, X.400 หรือ อีเมล**

01

02

03

04

05

06

07

08

## ข้อความ

**ถอดรหัสอักษร** - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความและค่าบริการส่งข้อความของคุณ

**การส่งข้อความยาว** - เลือกเพื่อส่งข้อความยาวเป็นหลาย SMS หรือเป็น MMS

### การเปลี่ยนการตั้งค่าข้อความ มีลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ KP500 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนแปลงการตั้งค่านี้ได้ในรูปแบบที่คุณต้องการ

แตะที่  เลือก 

แล้วเลือก  เลือก **ตั้งค่า**

และ **ข้อความมีลติมีเดีย**

คุณสามารถเปลี่ยนแปลง:

**โหมดการเรียกข้อมูล** - เลือก **โรมมิ่ง** หรือ **เครือข่ายโรมมิ่ง** หากคุณเลือกกำหนดเอง คุณจะได้รับเฉพาะข้อความแจ้ง MMS และคุณสามารถตัดสินใจว่าจะดาวน์โหลดแบบเต็มหรือไม่

**รายงานผลการส่ง** - เลือกเพื่อให้ส่งและ/หรือต้องการรายงานผลการส่ง

**รายงานการอ่าน** - เลือกเพื่อให้ส่งและ/หรือต้องการรายงานการอ่าน

**ระดับความสำคัญ** - เลือกระดับความสำคัญของ MMS

**ช่วงที่มีผลใช้** - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

**ระยะเวลาสไลด์** - เลือกระยะเวลาที่จะให้สไลด์ปรากฏบนหน้าจอ


**โหมดการสร้าง** - เลือกโหมดข้อความ

**เวลาส่ง** - เลือกระยะเวลาก่อนส่งแต่ละข้อความ

**ศูนย์ MMS** - บอกรายละเอียดของศูนย์ข้อความ

## การเปลี่ยนการตั้งค่าอื่นๆ

แตะที่  แล้วเลือก **ตั้งค่า** ในเมนู **ติดต่อสื่อสาร** จากนั้น:

**ข้อความเสียง** - แตะที่  เพื่อเพิ่มบริการข้อความเสียงใหม่ ติดต่อที่ผู้ให้บริการระบบเครือข่ายของคุณสำหรับข้อมูลเพิ่มเติมเกี่ยวกับบริการที่มีให้

**ข้อความบริการ** - เลือกเพื่อรับหรือบล็อกข้อความบริการ คุณยังสามารถกำหนดความปลอดภัยของข้อความได้โดยการสร้างรายการผู้ส่งที่เชื่อถือได้และเชื่อถือไม่ได้

**บริการข้อมูล** - เลือกสถานะการรับ, ภาษา และการตั้งค่าอื่นๆ

01

02

03

04

05



06

07

08

# กล้องถ่ายรูป







## การถ่ายภาพด่วน

- 1 กดปุ่ม  ที่ด้านขวาของโทรศัพท์
- 2 ช่องมองภาพจะปรากฏขึ้นบนหน้าจอ
- 3 ให้ถือโทรศัพท์ในแนวนอน และหันเลนส์ไปทางสิ่งที่ต้องการถ่าย
- 4 จัดตำแหน่งโทรศัพท์เพื่อให้คุณสามารถมองเห็นสิ่งที่จะถ่ายในหน้าจอตัวอย่าง
- 5 เมื่อกล้องจับโฟกัสที่วัตถุแล้ว ให้กด  ที่ด้านข้างของโทรศัพท์ หรือกดกล้องสีเหลี่ยมสีแดงที่มุมขวากลางของหน้าจอเพื่อถ่ายภาพ


## หลังจากที่ถ่ายภาพแล้ว

ภาพที่ถ่ายจะปรากฏบนหน้าจอ ชื่อของภาพจะวิ่งไปตามด้านล่างของหน้าจอ พร้อมกับมีไอคอน 6 ไอคอนเรียงอยู่ทางด้านขวามือ



-  และเพื่อย้ายไปที่คลังภาพ
-  และเพื่อส่งรูปภาพเป็นข้อความ อีเมล หรือบลูทูธ โปรดดูที่หน้า 36 สำหรับการส่งข้อความ และหน้า 121 สำหรับการส่งและการรับไฟล์โดยใช้บลูทูธ
-  และเพื่อแก้ไขภาพ
-  และเพื่อตั้งรูปภาพที่คุณถ่ายเป็นพื้นหลัง
-  และเพื่อลบรูปภาพที่เพิ่งถ่ายไว้ และยืนยันด้วยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง
-  และเพื่อถ่ายภาพอื่นๆ ทันที โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้

## ทำความรู้จักกับช่องมองภาพ

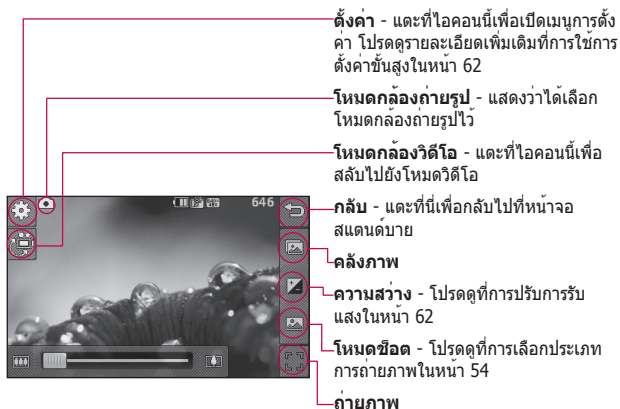

**เคล็ดลับ!** คุณสามารถเปิดตัวเลือกได้โดยแตะที่หน้าจอ ซึ่งจะปิดอัตโนมัติหลังจากสองสามวินาที

01

02

03

04

05


06

07

08


## กล้องถ่ายรูป

### การเลือกประเภทการถ่ายภาพ

- 1 แตะที่  เพื่อเปิดประเภทการถ่ายภาพที่มีอยู่
- 2 เลือกจาก 2 ตัวเลือกต่อไปนี้:
  - ช็อตปกติ** - ตัวเลือกนี้เป็นประเภทการถ่ายภาพเริ่มต้น ซึ่งใช้สำหรับการถ่ายภาพแบบปกติ เช่นเดียวกับที่อธิบายในการถ่ายภาพด้วย **ภาพถ่ายต่อเนื่อง** - ตัวเลือกนี้ทำให้คุณสามารถถ่ายภาพต่อเนื่องอย่างรวดเร็วได้ถึง 3,6 และ 9 ช็อตโดยอัตโนมัติ


### การปรับการรับแสง

การรับแสงเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืด (ความเข้ม) ในภาพ ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมืด ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า

- 1 แตะที่ 
- 2 เลื่อนตัวบ่งชี้ความเข้มตามแถบ - ขยายเพื่อให้ได้ภาพที่มีการรับแสงลดลงและมีวามากขึ้น หรือขยายเพื่อให้ได้ภาพที่มีการรับแสงสูงขึ้นและคมชัดยิ่งขึ้น


## การใช้โหมดถ่ายภาพต่อเนื่อง

โหมดถ่ายภาพต่อเนื่องเหมาะสำหรับการถ่ายภาพเคลื่อนไหวหรือภาพกีฬา

- 1.แตะที่  เพื่อเปิดประเภทการถ่ายภาพที่มีอยู่ และเลือก **ถ่ายภาพต่อเนื่อง**
- 2.เลือกจำนวนช็อตที่คุณต้องการถ่ายภาพต่อเนื่อง
- 3.จัดให้วัตถุอยู่ในช่องมองภาพ แล้วกดปุ่มถ่ายภาพเหมือนกับการถ่ายภาพปกติ
- 4.กล้องจะถ่ายภาพ 3,6 และ 9 ภาพต่อเนื่องกันอย่างรวดเร็ว

## การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะที่  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

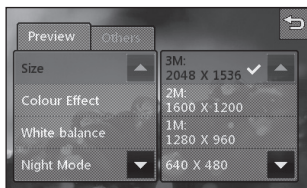

### การตั้งค่าดูตัวอย่าง

**ขนาด** - เปลี่ยนขนาดของภาพเพื่อบันทึกในพื้นที่หน่วยความจำ หรือถ่ายภาพแบบที่กำหนดขนาดไว้ถูกต้องสำหรับรายชื่อ โปรดดูที่การเปลี่ยนขนาดภาพในหน้า 57

**เอฟเฟกต์สี** - เลือกโทนสีเพื่อใช้กับภาพที่คุณถ่าย โปรดดูที่การเลือกเอฟเฟกต์สีในหน้า 57

01

02

03

04

05

06

07

08

## กล้องถ่ายรูป

**ความสมดุลแสง** - เลือกจาก  
อัตโนมัติ, หลอดไฟ, แสงอาทิตย์,  
ฟลูออเรสเซนต์ หรือ มืดครึ้ม

**ตั้งเวลาถ่ายภาพ** - ตั้งตั้งเวลาทำให้  
คุณสามารถตั้งช่วงเวลาหนึ่งหลัง  
จากที่กดปุ่มถ่ายภาพก่อนที่กล้องจะ  
ถ่ายภาพได้ ให้เลือกจาก 3 วินาที,  
5 วินาที หรือ 10 วินาที ซึ่งเหมาะสำ  
หรับการถ่ายภาพกลุ่มที่คุณต้องการ  
เป็นส่วนหนึ่งในกลุ่มด้วย

**คุณภาพ** - เลือกระหว่าง  
ละเอียดมาก, ละเอียด และ ปกติ คุณ  
ภาพที่ละเอียดมากขึ้นเท่าใด ความ  
คมชัดของภาพถ่ายก็จะมากขึ้นเท่านั้น  
แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่ง  
หมายความว่า คุณจะสามารถจัดเก็บ  
รูปภาพในหน่วยความจำได้น้อยลง

**โหมดมุมมอง** - เลือก เติมหน้าจอ  
หรือ ภาพเต็ม ในเติมหน้าจอ  
อาจมีการตัดภาพบางส่วนออก

**การตั้งค่าอื่นๆ**

**หน่วยความจำ** - เลือกว่าจะบันทึก  
รูปภาพที่หน่วยความจำเครื่อง  
หรือที่หน่วยความจำภายนอก

**เสียงชัตเตอร์** - เลือกเสียงชัตเตอร์  
เสียงใดเสียงหนึ่งจากสามเสียง

**หน้าจอกรีด** - เลือกจาก ปิด, 4 ส่วน  
หรือ 9 ส่วน


**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่า  
กล้องถ่ายรูปทั้งหมด

**เคล็ดลับ!** เมื่อคุณออกจากกล้อง  
ถ่ายรูปการตั้งค่าทั้งหมดของคุณ  
จะกลับสู่ค่าเริ่มต้น ยกเว้นขนาด  
ภาพและคุณภาพของภาพสำหรับ  
การตั้งค่าที่ไม่ใช่ค่าเริ่มต้น การตั้ง  
ค่าของคุณจะถูกรีเซ็ต ตัวอย่างเช่น  
โทนสี ตรวจสอบค่าเหล่านี้  
ก่อนที่คุณจะถ่ายภาพครั้งถัดไป

**เคล็ดลับ!** เมนูการตั้งค่า  
ซ่อนทับอยู่บนช่องมองภาพ  
ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบ  
ด้านสีหรือคุณภาพของภาพ คุณจะ  
สามารถเห็นการเปลี่ยนแปลงภาพ  
ในการดูตัวอย่างด้านหลังเมนูการ  
ตั้งค่า

## การเปลี่ยนขนาดภาพ


จำนวนพิกเซลยิ่งมากขึ้นเท่าใด  
ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น  
ซึ่งอีกนัยหนึ่งก็คือ การใช้เนื้อที่หน่วย  
ความจำมากขึ้น หากคุณต้องการเก็บ  
รูปภาพในโทรศัพท์ให้มากขึ้น คุณส่า  
สามารถแก้ไขจำนวนพิกเซลเพื่อทำให้  
ไฟล์มีขนาดเล็กลงได้

- 1 จากช่องมองภาพ ให้แตะที่  ในมุมซ้ายด้านบน
- 2 เลือก **ขนาด** จากเมนูดูตัวอย่าง

- 3 เลือกค่าพิกเซลจากตัวเลือกห้าตัว  
เลือก (3M: 2048x1536, 2M:  
1600x1200, 1M: 1280x960,  
640x480, 400\*240(W),  
320x240) หรือเลือกค่าที่ตั้งไว้  
ล่วงหน้า:

**รายชื่อ** - ตัวเลือกนี้จะเป็นการ  
กำหนดให้กล้องถ่ายภาพใน  
ขนาดที่เหมาะสมกับการเพิ่มใน  
รายชื่อในโทรศัพท์

## การเลือกเอฟเฟกต์สี

- 1 จากช่องมองภาพ ให้แตะที่  ในมุมซ้ายด้านบน
- 2 เลือก **เอฟเฟกต์สี** จากเมนูดูตัวอย่าง
- 3 ตัวเลือกโทนสีมีห้าตัวเลือกดังนี้ : **ปิด, ขาวดำ, เนกาทีฟ หรือ สีซีเปีย**
- 4 เมื่อคุณเลือกโทนสีแล้ว และกล้องก็พร้อมสำหรับการถ่ายภาพแล้ว

01

02

03

04

05

06


07

08

## กล้องถ่ายรูป


**เคล็ดลับ!** คุณสามารถเปลี่ยนรูปภาพที่ถ่ายไว้สีเป็นขาวดำหรือซีเปียได้หลังจากบันทึกภาพ แต่คุณจะเปลี่ยนรูปภาพที่ถ่ายไว้เป็นขาวดำหรือซีเปียกลับเป็นภาพสีไม่ได้




### การดูรูปภาพที่บันทึกไว้

- 1 คุณสามารถเข้าดูรูปภาพที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูปได้ เพียงแตะที่  และคลังภาพของคุณจะปรากฏบนหน้าจอ

# กล้องวิดีโอ

## การถ่ายวิดีโอด้วย

- 1 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์
- 2 ในโหมดดุดตัวอย่างในกล้องถ่ายรูปแตะที่ไอคอนกล้องถ่ายรูป  ในช่องมองภาพเพื่อสลับไปยังโหมดวิดีโอ ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 ให้ถือโทรศัพท์ในแนวนอนและหันไปทางสิ่งที่จะถ่าย
- 4 กดปุ่มถ่ายภาพหนึ่งครั้งเพื่อเริ่มการบันทึก หรือกดจุดสีแดงที่มุมขวากลางของหน้าจอ

- 5 **Rec** จะปรากฏขึ้นที่ด้านบนของช่องมองภาพ และตัวตั้งเวลาทางด้านล่างเพื่อแสดงระยะเวลาของวิดีโอของคุณ
- 6 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  แล้วเริ่มบันทึกต่อโดยเลือก 
- 7 แตะที่  บนหน้าจอ หรือกดปุ่มถ่ายภาพซ้ำอีกครั้งเพื่อหยุดการบันทึก

01

02

03

04

05

06


07

08


## กล้องวิดีโอ

### หลังจากที่ถ่ายวิดีโอแล้ว

ภาพนิ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ ชื่อของวิดีโอจะแสดงอยู่ที่ด้านล่างของหน้าจอ พร้อมกับมีไอคอน 5 ไอคอนเรียงอยู่ทางด้านขวามือ

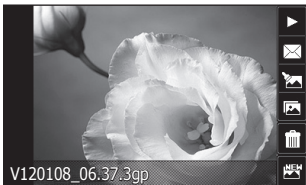



 และเพื่อเล่นวิดีโอ

 และเพื่อส่งวิดีโอเป็น ข้อความ หรือ อีเมล หรือส่งโดยใช้บลูทูธ โปรดดูที่หน้า 36 สำหรับการส่งข้อความ หรือหน้า 121 สำหรับ การส่งและการรับไฟล์โดยใช้บลูทูธ


 และเพื่อแก้ไขภาพวิดีโอ

 และเพื่อดูลงภาพวิดีโอที่บันทึกไว้

 และเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

 และเพื่อถ่ายภาพวิดีโออื่นต่อ โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้

## ทำความรู้จักกับช่องมองภาพ

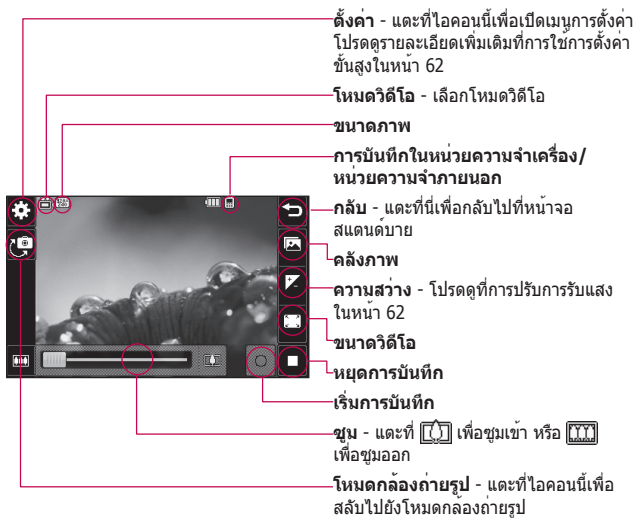


**เคล็ดลับ!** คุณสามารถปิดตัวเลือกปุ่มลัดเพื่อให้หน้าจอช่องมองภาพโล่งขึ้นได้ เพียงแตะที่กึ่งกลางของช่องมองภาพหนึ่งครั้ง ในการเรียกใช้งานตัวเลือกใหม่ให้แตะที่หน้าจออีกครั้ง

## กล้องวิดีโอ

### การปรับการรับแสง

การรับแสงเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืด (ความเข้ม) ในภาพ ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมืด ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า

- 1 แตะที่ 
- 2 เลื่อนตัวบ่งชี้การรับแสงตามแถบซ้ายเพื่อให้ได้ภาพที่มีการรับแสงลดลงและมืดมากขึ้น หรือขวาเพื่อให้ได้ภาพที่มีการรับแสงสูงขึ้นและคมชัดยิ่งขึ้น

### การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะที่ **ตั้งค่า** เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด



### การตั้งค่าตัวอย่าง

**ขนาดวิดีโอ** - เปลี่ยนขนาดของวิดีโอเพื่อบันทึกลงในพื้นที่หน่วยความจำโปรดดูที่ การเปลี่ยนขนาดของภาพวิดีโอ ในหน้า 64

**เอฟเฟกต์สี** - เลือกโทนสีเพื่อใช้กับวิดีโอที่คุณกำลังถ่าย โปรดดูที่ การเลือกโทนสี ในหน้า 65

**ความสมดุลแสง** - ความสมดุลแสง จะช่วยให้มั่นใจได้ว่าแสงขาวที่ปรากฏในวิดีโอจะสวยสมจริง เพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน เลือจาก **อัตโนมัติ, หลอดไฟ, แสงอาทิตย์, ฟลูออเรสเซนต์ หรือ นีออน**

**คุณภาพ** - เลือกระหว่าง **ละเอียดมาก, ละเอียด และ ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของวิดีโอก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่งหมายความว่า你能สามารถจัดเก็บวิดีโอในหน่วยความจำของเครื่องได้น้อยลง

**ระยะเวลา** - ตั้งค่าจำกัดระยะเวลาสำหรับวิดีโอของคุณ เลือจาก **ไม่จำกัด หรือ MMS** เพื่อจำกัดขนาดที่คุณสามารถส่งวิดีโอเป็น MMS ได้

#### **เคล็ดลับ!**

หากคุณเลือกระยะเวลาแบบ MMS ลองเลือกคุณภาพของภาพที่ต่ำลงเพื่อการถ่ายภาพวิดีโอที่ยาวนานขึ้น

#### **การตั้งค่าอื่นๆ**

**หน่วยความจำ** - เลือกว่าจะบันทึกวิดีโอที่ **ความจำเครื่อง หรือ หน่วยความจำการ์ด**

**เสียง** - เลือก **ปิดเสียง** เพื่อบันทึกวิดีโอโดยไม่มีเสียง

**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด

01

02

03

04

05

06



07

08

## กล่องวิดีโอ


### การเปลี่ยนขนาดของภาพวิดีโอ

จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งอีกนัยหนึ่งก็คือ การใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บวิดีโอลงในโทรศัพท์ของคุณให้มากขึ้น คุณสามารถแก้ไขจำนวนพิกเซลเพื่อให้ไฟล์มีขนาดเล็กลงได้

- 1 จากช่องมองภาพ ให้แตะที่  ในมุมซ้ายด้านบน
- 2 เลือก **ขนาดวิดีโอ** จากเมนูตัวอย่าง
- 3 เลือกค่าพิกเซลจาก 2 ตัวเลือกต่อไปนี้:
  -  **320x240** - ขนาดภาพเล็ก ขนาดไฟล์จึงเล็กด้วย
  -  **176x144** - ขนาดภาพเล็กที่สุด ขนาดไฟล์จึงเล็กที่สุดด้วย
- 4 เลือกที่ตัวเลือกขนาดที่คุณต้องการใช้


**เคล็ดลับ!** โปรดดูข้อมูลเกี่ยวกับซอฟต์แวร์การแปลงรูปแบบวิดีโอได้ในแผนชีตที่คุณได้รับมาพร้อมกับ KP500

### การเลือกโทนสี

- 1 จากช่องมองภาพ ให้แตะที่  ในมุมซ้ายด้านบน
- 2 เลือก **เอฟเฟกต์สี** จากเมนูตั้งค่า
- 3 ตัวเลือกโทนสีมีห้าตัวเลือกดังนี้ **ปิด** (ปกติ), **ขาวดำ**, **เนกาทีฟ**, **สีซีเปีย**
- 4 แตะที่โทนสีที่คุณต้องการใช้

**เคล็ดลับ!** คุณสามารถเปลี่ยนภาพวิดีโอจากสีเป็นขาวดำหรือซีเปียได้ หลังจากบันทึกภาพ แต่คุณจะเปลี่ยนภาพวิดีโอขาวดำหรือซีเปียกลับเป็นภาพสีไม่ได้

## การดูวิดีโอที่บันทึกไว้

- 1 ในช่องมองภาพ ให้แตะที่ 
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะที่วิดีโอที่คุณต้องการดูหนึ่งครั้ง เพื่อแสดงวิดีโอที่ด้านหน้าสุดของคลังภาพ
- 4 แตะที่วิดีโออีกครั้งเพื่อเปิดทั้งไฟล์

01

02

03

04

05



06


07

08




## การบันทึกภาพจากวิดีโอ

- 1 เลือกวิดีโอที่คุณต้องการบันทึกภาพมา
- 2 แตะที่ **||** เพื่อหยุดภาพวิดีโอบนเฟรมที่คุณต้องการแปลงเป็นรูปภาพไว้ชั่วคราว แล้วแตะที่ด้านขวาของหน้าจอเพื่อเปิดเมนูตัวเลือก
- 3 จากเมนูตัวเลือก เลือก 
- 4 รูปภาพจะปรากฏบนหน้าจอพร้อมกับชื่อภาพที่กำหนดให้
- 5 แตะที่ภาพ แล้ว  เพื่อกลับไปที่คลังภาพ
- 6 ภาพจะถูกบันทึกไว้ในโฟลเดอร์อัลบั้มมีเดีย และจะอยู่ในคลังภาพคุณจำเป็นต้องออกจากคลังภาพและเปิดอีกครั้งเพื่อให้ภาพปรากฏ

 **คำเตือน:** บางฟังก์ชันอาจทำงานไม่ถูกต้องหากไม่ได้บันทึกไฟล์ด้วยโทรศัพท์

## การดูรูปภาพแบบภาพสไลด์

โหมดภาพสไลด์จะแสดงรูปภาพทั้งหมดในคลังภาพของคุณพร้อมกันเป็นภาพสไลด์ วิดีโอไม่สามารถดูเป็นแบบภาพสไลด์ได้

- 1 แตะที่รูปภาพที่คุณต้องการเริ่มเล่นภาพสไลด์ 2 ครั้งเพื่อเปิด
- 2 เลือก 
- 3 ภาพสไลด์จะเริ่มต้น



01

02

03

04

05

06

07

08

## รูปภาพและวิดีโอ

ภายในภาพสไลด์มีตัวเลือกต่างๆ ดังนี้:



และเพื่อข้ามไปยังภาพถ่ายถัดไป



และเพื่อหยุดภาพสไลด์ชั่วคราวที่ภาพใดภาพหนึ่ง



และอีกครั้งเพื่อเริ่มเล่นต่อ




และเพื่อเพิ่มหรือลดความเร็วของภาพสไลด์

### การตั้งค่ารูปภาพเป็นพื้นหลัง

- 1 แตะที่รูปภาพที่คุณต้องการตั้งค่าเป็นพื้นหลังหมุนโทรศัพท์ในแนวอน
- 2 แตะที่หน้าจอด้านขวามือเพื่อเปิดเมนูตัวเลือก
- 3 แตะที่ 
- 4 หน้าจอจะสลับไปเป็นโหมดแนวตั้ง คุณสามารถเปลี่ยนขนาดของรูปภาพได้
- 5 เมื่อคุณพอใจกับรูปภาพนี้แล้ว ให้แตะที่ **ตั้งค่า**

### การแก้ไขรูปภาพ

มีคุณสมบัติยอดเยี่ยมมากมายที่คุณสามารถใช้ในการเปลี่ยนแปลงรูปภาพเพิ่มหรือทำให้มีชีวิตชีวาขึ้นเล็กน้อย

- 1 เปิดรูปภาพที่คุณต้องการแก้ไข และแตะที่  เพื่อแสดงตัวเลือก
- 2 แตะที่ไอคอนเพื่อปรับรูปภาพของคุณ:




หรือปรับรูปภาพของคุณ เลือกพื้นที่การครอบภาพแบบสี่เหลี่ยมหรือวงกลม แล้วเลื่อนนิ้วของคุณไปตามหน้าจอเพื่อเลือกพื้นที่




วาดลายเส้นบนรูปภาพของคุณด้วยมือ เลือกความหนาของเส้นจาก 4 ตัวเลือก และเลือกสีที่คุณต้องการ


**T** เขียนข้อความบนรูปภาพโปรดดูที่ **การเพิ่มข้อความลงในรูปภาพ** ในหน้า 70

 ตกแต่งรูปภาพของคุณด้วย  
สแตมป์ เลือกจากสแตมป์ต่างๆ  
ที่มีอยู่ แล้วแตะบริเวณรูปภาพที่คุณ  
ต้องการวาง

 ลบลายเส้นที่วาด

 บันทึกการเปลี่ยนแปลง  
ที่คุณทำไว้ในรูปภาพของคุณ  
เลือกเพื่อบันทึกการเปลี่ยนแปลง  
ทับ **ไฟล์ต้นฉบับ** หรือบันทึกเป็น  
**ไฟล์ใหม่** หากคุณเลือก  
**ไฟล์ใหม่** ให้ป้อนชื่อไฟล์

 เลิกทำ **เอฟเฟกต์** หรือการ  
แก้ไขล่าสุดที่คุณทำไว้ในรูปภาพ

 แตะเพื่อเปิดตัวเลือกเอฟ  
เฟกต์เพิ่มเติม ได้แก่ หมุน  
นอกจากนี้ ยังมีตัวเลือกการแก้ไข  
ขั้นสูงเพิ่มเติมอีก โปรดดูที่  
**ย่อขยาย, รูปร่าง, เน้นสี,**  
**เพิ่มภาพ** ฯลฯ

 โปรดดูที่ การเพิ่มเอฟเฟกต์  
ลงในรูปภาพ ในหน้า 71



 แตะเพื่อกลับไปทีดล้งภาพ

## การเพิ่มข้อความลงใน รูปภาพ

- 1 จากหน้าจอกแก้ไข ให้แตะที่ **T**
- 2 เลือก **ลายเซ็น** เพื่อเพิ่มข้อความ  
แบบไม่มีกรอบหรือเลือกรูปทรงลูก  
โป่งแสดงคำพูด
- 3 ป้อนข้อความโดยใช้ปุ่มกด  
และแตะที่ **เสร็จ**
- 4 เลื่อนข้อความโดยแตะที่ข้อความ  
แล้วเลื่อนไปยังบริเวณที่คุณต้องการวาง

01

02

03

04

05



06

07

08

## รูปภาพและวิดีโอ

### การเพิ่มเอฟเฟกต์ลงในรูปภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ 
- 2 เลือกเพื่อใช้ตัวเลือกใดตัวเลือกหนึ่งจาก 6 ตัวเลือกกับรูปภาพ:
  - ตกแต่งใบหน้า** - ตรวจสอบใบหน้าในรูปภาพอัตโนมัติและทำให้ใบหน้าสว่างขึ้น
  - โลโม** - เอฟเฟกต์กล้องโลโม
  - เนกาทีฟสี** - เอฟเฟกต์เนกาทีฟสี
  - ขาวดำ** - เอฟเฟกต์สีขาวดำ
  - สีซีเปีย** - เอฟเฟกต์สีซีเปีย
  - เบลอ** - ใช้เอฟเฟกต์เบลอ
  - คมชัด** - เลื่อนเครื่องหมายบนแถบเพื่อทำให้โฟกัสของภาพดูคมชัดขึ้น เลือกไอคอน **ตกลง** เพื่อใช้ค่าการเปลี่ยนแปลง หรือเลือก  เพื่อยกเลิก

**เบลอ** - แตะเพื่อใช้เอฟเฟกต์โมเสกเบลอกับรูปภาพ

**สีน้ำมัน** - เอฟเฟกต์สีน้ำมัน

**สเก็ทซ์** - ใช้เอฟเฟกต์เพื่อทำให้ภาพดูเหมือนเป็นภาพสเก็ทซ์

**พิมพ์นูน** - เอฟเฟกต์พิมพ์นูน

**โซลาร์ไลซ์** - เปลี่ยนเอฟเฟกต์การรับแสง

**แสงจ้า** - เอฟเฟกต์ความคมชัดและความสว่าง

**แสงจันทร์** - เปลี่ยนแสงให้ดูเหมือนแสงจันทร์

**แอนติค** - เอฟเฟกต์รูปภาพเก่า

**เรื่องแสง** - เอฟเฟกต์การใช้ลำแสง

**การดูน** - เอฟเฟกต์การดูน


**สีน้ำ** - เอฟเฟกต์สีน้ำ

### 3 ในการเลิกทำเอฟเฟกต์ เพียงแค่นำที่ เลิกทำ

**เคล็ดลับ!** คุณสามารถเพิ่ม  
เอฟเฟกต์ได้มากกว่าหนึ่งเอฟเฟกต์  
ในรูปภาพ ยกเว้นเอฟเฟกต์สี

### การแปลงรูปภาพ

การแปลงรูปภาพเหมาะสำหรับการ  
เปลี่ยนสีหน้าของเพื่อนคุณ หรือเพียง  
แค่ใช้เอฟเฟกต์งานศิลปะเพื่อตัด  
แปลงรูปภาพก็ได้

- 1 จากหน้าจอกำเริบ ให้แตะที่ 
- 2 เลือก **รูปร่าง** และเครื่องหมาย  
กากบาท 4 อันจะปรากฏขึ้น  
บนรูปภาพ

- 3 ย้ายเครื่องหมายไปในภาพ  
เพื่อแสดงพื้นที่ที่คุณจะแปลงภาพ  
ตัวอย่างเช่น หากคุณต้องการ  
แปลงภาพบริเวณหน้า ใหวาง  
เครื่องหมายกากบาทที่มุมด้าน  
นอกของดวงตาแต่ละข้างและมุม  
ปากแต่ละข้าง

- 4 เลือกแบบหน้าที่คุณต้องการจะ  
แปลง

- 5 เลือก **ตกลง** เพื่อบันทึกการ  
เปลี่ยนแปลง

01

02

03

04

05


06

07


08

## รูปภาพและวิดีโอ





### การเน้นสีในรูปภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ 
- 2 เลือก **เน้นสี**
- 3 เลือกส่วนหนึ่งส่วนใดของภาพ รอยเส้นจะปรากฏรอบสิ่งต่างๆ ในบริเวณนั้นที่มีสีเหมือนกัน หรือคล้ายคลึงกัน ตัวอย่างเช่น สีผม หรือสีของเสื้อ
- 4 แตะที่ **ตกลง**
- 5 สีทั้งหมดจะหายไปจากรูปภาพ หายไปจากบริเวณที่ทำเครื่องหมายสำหรับการเน้นสีไว้
- 6 ปรับความหนักเบาในการเน้น โดยการเลื่อนเครื่องหมายในแถบความหนักเบาขึ้นหรือลง
- 7 เลือก **บันทึก** เพื่อบันทึกการเปลี่ยนแปลง

### การสลับสีในรูปภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ 
- 2 เลือก **เปลี่ยนสี**
- 3 เลือกส่วนหนึ่งส่วนใดของภาพ รอยเส้นจะปรากฏรอบสิ่งต่างๆ ในบริเวณนั้นที่มีสีเหมือนกัน หรือคล้ายคลึงกัน ตัวอย่างเช่น สีผม หรือสีของเสื้อ
- 4 เลือกสี
- 5 กด **ตกลง**
- 6 ส่วนของรูปภาพที่เลือกไว้สำหรับการเน้นสีจะเปลี่ยนเป็นสีที่เลือกไว้แทน
- 7 เลือก **บันทึก** เพื่อบันทึกการเปลี่ยนแปลง

## การตัดความยาวของวิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Trim**
- 3 แตะที่  และทำเครื่องหมายที่จุดเริ่มต้นและจุดสิ้นสุดใหม่ โดยใช้ 
- 4 แตะที่ **เล่นที่ครีอป** เพื่อให้แน่ใจว่าคุณชอบการตัดแต่งใหม่นี้
- 5 แตะที่ **บันทึก** หรือแตะที่  เพื่อกลับไปที่คุณภาพและยกเลิกการเปลี่ยนแปลง



## การรวมวิดีโอสองเรื่องเข้าด้วยกัน

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Video merge**
- 3 โฟลเดอร์ **เพิ่มข้อมูล** จะเปิดขึ้น ให้เลือก วิดีโอส่วนตัว หรือ การตัดความจำ (ถ้ามี) เลือกวิดีโอที่คุณต้องการรวม แล้วแตะที่ **เลือก**
- 4 แตะและเลื่อนรูปภาพเพื่อรวมเข้าที่ตอนท้ายหรือตอนเริ่มต้นของวิดีโอ
- 5 แตะที่ **เอฟเฟกต์** เพื่อเลือกวิธีการรวมวิดีโอเข้าด้วยกัน: **ปิด, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Split** หรือ **Shape diamond**

01

02

03

04

05

06

07

08

## รูปภาพและวิดีโอ




- กด **บันทึก** แล้วตามด้วย **ไข** เพื่อบันทึกวิดีโอที่รวมกันใหม่นี้ เลือกเพื่อบันทึกทับไฟล์ต้นฉบับ หรือบันทึกเป็นไฟล์ใหม่
- ทำซ้ำขั้นตอนเหล่านี้เพื่อรวมวิดีโอเรื่องอื่นๆ

### การรวมรูปภาพเข้ากับวิดีโอ

- เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- เลือก  แล้วเลือก **Image merge**
- โฟลเดอร์ **แฟ้มข้อมูล** จะเปิดขึ้น ให้เลือก **ภาพส่วนตัว** หรือ **การดัดความจำ (ถ้ามี)** เลือกรูปภาพที่คุณต้องการรวมเข้ากับวิดีโอ แล้วแตะที่ **เลือก**
- แตะและเลือกรูปภาพเพื่อรวมเข้าที่ตอนท้ายหรือตอนเริ่มต้นของวิดีโอ


- แตะที่ **เอฟเฟกต์** เพื่อเลือกวิธีการรวมรูปภาพและวิดีโอเข้าด้วยกัน: **ปิด, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Slit** หรือ **Shape diamond**
- กด **บันทึก** แล้วตามด้วย **ไข** เลือกเพื่อบันทึกทับไฟล์ต้นฉบับ หรือบันทึกเป็นไฟล์ใหม่
- ทำซ้ำขั้นตอนเหล่านี้เพื่อรวมรูปภาพอื่นๆ

### การเพิ่มข้อความลงในวิดีโอ





- เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- เลือก  แล้วเลือก **Text overlay**
- ป้อนข้อความโดยไขปุ่มกดแล้วเลือก **เสร็จ**
- แตะที่  และเลือกเวลาที่ต้องการให้ข้อความปรากฏขึ้น โดยไข 

## 5 และที่บริเวณหน้าจอบที่คุณต้องการให้ข้อความปรากฏขึ้น



- 6 และที่  เพื่อเลือกว่าเมื่อใดที่ต้องการให้ข้อความหายไป
- 7 และที่ **ดูตัวอย่าง** เพื่อให้แน่ใจว่าคุณชอบการซ่อนข้อความนี้
- 8 และที่ **บันทึก** แล้วตามด้วย **ใช่** เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 9 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มข้อความอื่นๆ

## การซ่อนรูปภาพ

- 1 เบ็ดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอบเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Image overlay**
- 3 โฟลเดอร์ **เพิ่มข้อมูล** จะเปิดขึ้น ให้เลือก **ภาพส่วนตัว** หรือ **การตัดความจำ (ถ้ามี)** เลือกรูปภาพที่คุณต้องการซ่อนบนวิดีโอ แล้วแตะที่ **เลือก**
- 4 และที่  และเลือกว่าเมื่อใดที่ต้องการให้รูปภาพปรากฏขึ้น โดยใช้ 
- 5 เลือกบริเวณหน้าจอบที่คุณต้องการให้รูปภาพปรากฏขึ้น หากรูปภาพมีขนาดใหญ่มากเกินไป อาจอาจซ่อนทับทั้งหน้าจอบ ซึ่งอาจไม่ใช่เพียงบริเวณที่เลือกได้
- 6 และที่  เพื่อเลือกว่าเมื่อใดที่ต้องการให้ภาพหายไป
- 7 และที่ **ดูตัวอย่าง** เพื่อให้แน่ใจว่าคุณชอบการซ่อนรูปภาพนี้

01

02

03

04

05

06


07

08

## รูปภาพและวิดีโอ

- 8 แตะที่ **บันทึก** แล้วตามด้วย **ใช่** เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 9 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มรูปภาพอื่นๆ

### การใส่รายการบันทึกเสียง

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Voice recording**
- 3 คุณภาพของเสียงต้นฉบับอาจได้รับผลกระทบจากการใส่การบันทึกเสียงได้ แตะที่ **ใช่** เพื่อดำเนินการต่อ
- 4 แตะที่  เพื่อดูวิดีโอ เมื่อถึงตอนที่ต้องการบันทึกเสียง ให้กด 




- 5 กด  หรือ  เพื่อหยุดการบันทึกและเล่น
- 6 แตะที่ **ดูตัวอย่าง** เพื่อให้แน่ใจว่าคุณชอบการบันทึกเสียงนี้
- 7 แตะที่ **บันทึก** แล้วตามด้วย **ใช่** เพื่อบันทึก เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 8 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มการบันทึกเสียงอื่นๆ ลงในวิดีโอ

## การใส่ซาวด์แทร็คลงในวิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
- 2 เลือก  แล้วเลือก **Audio dubbing**
- 3 โฟลเดอร์ **แฟ้มข้อมูล** จะเปิดขึ้น ให้เลือก **เสียงส่วนตัว** หรือ **การดัดความจำ (ถ้ามี)** เลือกแทร็คที่คุณต้องการเพิ่มในวิดีโอ แล้วแตะที่ **เลือก**
- 4 เสียงต้นฉบับในวิดีโอจะถูกลบออก และที่ **ใช่** เพื่อดำเนินการต่อ
- 5 หากเสียงสั้นกว่าวิดีโอ ให้เลือกที่จะเล่น **ครั้งเดียว** หรือเล่น **ซ้ำ**
- 6 เลือกเพื่อบันทึกที่ไฟล์ต้นฉบับ หรือบันทึกเป็นไฟล์ใหม่

## การเปลี่ยนความเร็วของวิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก **||** และแตะที่หน้าจอเพื่อเปิดตัวเลือกต่างๆ
  - 2 เลือก  แล้วเลือก **เวลา**
  - 3 เลือกตัวเลือกความเร็วตัวเลือกใดตัวเลือกหนึ่งจากสี่ตัวเลือกนี้: **x4**, **x2**, **x1/4**, **x1/2**.
  - 4 เลือกเพื่อบันทึกที่ไฟล์ต้นฉบับ หรือบันทึกเป็นไฟล์ใหม่
- หมายเหตุ:** คุณสามารถแก้ไขได้เฉพาะไฟล์วิดีโอ 3gp เท่านั้น

01

02

03

04

05

06

07

08

## มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใจงานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์

ในการใช้งานเมนูมัลติมีเดีย ให้แตะที่  แล้วเลือก  แตะที่  เพื่อเปิดรายการโฟลเดอร์ที่จัดเก็บไฟล์มัลติมีเดียทั้งหมด

### รูปภาพ

#### ภาพส่วนตัว

ประกอบด้วยรายการรูปภาพ รวมถึงภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

แตะที่  เพื่อเปลี่ยนมุมมองจากภาพขนาดย่อเป็นรายการ

#### เมนูตัวเลือกของภาพส่วนตัว

ตัวเลือกที่มีอยู่ใน ภาพส่วนตัว จะขึ้นอยู่กับประเภทรูปภาพที่คุณเลือก ตัวเลือกทั้งหมดจะใช้ได้กับภาพที่คุณถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์ ส่วนตัวเลือก **เรียงตาม, มุมมองรายการ, ข้อมูลโฟลเดอร์** และ **สถานะความจำ** จะมีสำหรับภาพเริ่มต้นเท่านั้น

**ส่ง** - ส่งภาพให้เพื่อน

**ย้าย** - ย้ายรูปภาพจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำหรือย้ายจากการ์ดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์

**คัดลอก** - คัดลอกรูปภาพจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำ หรือคัดลอกจากการ์ดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์

**ลบ** - ลบภาพ

**แก้ไข** - เปลี่ยนชื่อภาพ

**พิมพ์** - พิมพ์รูปภาพที่เลือกโดยใช้  
เครื่องพิมพ์

**สร้างโฟลเดอร์ใหม่** - สร้างโฟลเดอร์  
ใหม่ภายในโฟลเดอร์ ภาพส่วนตัว

**ภาพสไลด์** - เริ่มต้นภาพสไลด์

**มุมมองรายการ/มุมมองกริด**  
- มุมมองกริดเป็นมุมมองรายการ  
หรือสลับกัน

**ข้อมูลโฟลเดอร์** - ดูรายละเอียดชื่อ,  
ขนาด, วันที่ของโฟลเดอร์ และ  
จำนวนไฟล์และโฟลเดอร์ย่อยใน  
โฟลเดอร์

**สถานะความจำ** - ดูสถานะหน่วย  
ความจำ

**ลบทั้งหมด** - ลบภาพทั้งหมด

## การส่งรูปภาพ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **ภาพส่วนตัว**
- 3 แตะที่  **ส่ง** และเลือกจาก  
**ข้อความ**, **อีเมล** หรือ  
**ข้อมูลบลูทูธ**
- 4 หากคุณเลือก  
**ข้อความ** หรือ **อีเมล**  
รูปภาพจะแนบไปกับข้อความ  
และคุณสามารถเขียนและส่งข้อความ  
ได้ตามปกติ หากคุณเลือก  
**บลูทูธ** เครื่องจะแสดงข้อความให้  
คุณเปิดบลูทูธ และโทรศัพท์จะค้น  
หาอุปกรณ์ที่จะส่งภาพไป

01

02

03

04

05

06

07

08

## มัลติมีเดีย

### การใช้รูปภาพ

คุณสามารถเลือกรูปภาพเพื่อใช้เป็นพื้นหลังและภาพปกหน้าจอ หรือใช้เพื่อระบุผู้โทรเข้าได้

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **ภาพส่วนตัว**
- 3 เลือกภาพแล้วแตะที่ 
- 4 แตะที่ **ใช้เป็น** แล้วเลือกจาก:  
**พื้นหลัง** - ตั้งเป็นพื้นหลังของหน้าจอสแตนด์บาย  
**ภาพรายชื่อ** - กำหนดภาพให้กับบุคคลใดบุคคลหนึ่งในรายชื่อ เพื่อให้ภาพนั้นปรากฏขึ้นเมื่อบุคคลนั้นโทรมา  
**ภาพเริ่มต้น** - กำหนดให้ภาพปรากฏขึ้นเมื่อเปิดเครื่องปิด - กำหนดให้ภาพปรากฏขึ้นเมื่อปิดเครื่อง

### การพิมพ์ภาพ





- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **ภาพส่วนตัว**
- 3 เลือกภาพแล้วแตะที่ 
- 4 แตะที่ **พิมพ์** แล้วเลือกกระหว่าง **บลูทูธ** และ **PictBridge**

#### เคล็ดลับ!

คุณสามารถพิมพ์ผ่านบลูทูธหรือโดยเชื่อมต่อกับเครื่องพิมพ์ที่ใช้ร่วมกับ PictBridge ได้

### การย้ายหรือคัดลอกรูปภาพ

คุณสามารถย้ายหรือคัดลอกรูปภาพระหว่างหน่วยความจำของโทรศัพท์กับการ์ดหน่วยความจำได้ เพื่อเป็นการเพิ่มพื้นที่หน่วยความจำในหน่วยความจำใดหน่วยความจำหนึ่ง หรือเพื่อป้องกันภาพมิให้สูญหาย

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **ภาพส่วนตัว**
- 3 แตะที่  และเลือก **ย้าย** หรือ **คัดลอก**

- 4 คุณสามารถเลือก/ไม่เลือกภาพได้ โดยแตะที่ภาพ เลือกภาพที่คุณต้องการย้ายหรือคัดลอกและแตะที่ **คัดลอก/ย้าย**

### การสร้างภาพสไลด์





หากคุณต้องการดูภาพทั้งหมดบน โทรศัพท์ คุณสามารถสร้างภาพสไลด์ เพื่อประหยัดเวลาในการเปิดและปิด ภาพแต่ละภาพ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **ภาพส่วนตัว**
- 3 เลือกภาพเริ่มต้นสำหรับภาพสไลด์
- 4 แตะที่  แล้วเลือก **ภาพสไลด์**

### เสียง

โพลเดอร์ **เสียงส่วนตัว** ประกอบด้วย เสียงที่ดาวน์โหลด, **เสียงเริ่มต้น** และ **การบันทึกเสียง** จากขั้นตอนนี้ คุณสามารถจัดการ ส่ง หรือกำหนด เสียงเป็นเสียงเรียกเข้าได้


### การใช้เสียง

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **เสียงส่วนตัว**
- 3 เลือก **เสียงเริ่มต้น** หรือ **การบันทึกเสียง**
- 4 เลือกเสียงและเสียงจะเริ่มเล่น
- 5 แตะที่  แล้วเลือก **ใช้เป็น**
- 6 เลือกจาก **เสียงเรียกเข้า, เสียงเรียกเข้าแบบวิดีโอ, เสียงข้อความ, การเปิดเครื่อง** หรือ **การปิดเครื่อง**

### วิดีโอ

โพลเดอร์ **วิดีโอส่วนตัว** จะแสดงรายการ วิดีโอที่ดาวน์โหลด และวิดีโอที่ ได้บันทึกไว้ในโทรศัพท์

### การดูวิดีโอ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **วิดีโอส่วนตัว**
- 3 เลือกวิดีโอเพื่อเล่น

01

02

03

04

05

06

07

08

## มัลติมีเดีย

### การใช้ตัวเลือกขณะหยุด วิดีโอชั่วคราว

แตะที่  ในขณะที่อยู่ในโหมดหยุด  
ชั่วคราว และเลือกจาก:

**ถ่ายภาพ** - ถ่ายเฟรมที่นิ่งอยู่เป็น  
รูปภาพ

**Video editor** - แก้ไขวิดีโอ


**ส่ง** - ส่งวิดีโอในข้อความหรือทาง  
บลูทูธ

**ลบ** - ลบวิดีโอ

**ใช้เป็น** - เสียงเรียกเข้าแบบเสียงหรือ  
แบบวิดีโอ

**ข้อมูลไฟล์** - ดูรายละเอียดของชื่อ  
ขนาด วันที่ เวลา ประเภท ระยะเวลา  
ขนาด ป้องกันไฟล์ และลิขสิทธิ์

### การส่งวิดีโอคลิป

- 1 เลือกวิดีโอ แล้วแตะที่ 
- 2 แตะที่ **ส่ง** แล้วเลือกจาก  
**ข้อความ**, **อีเมล** หรือ **บลูทูธ**
- 3 หากคุณเลือก **ข้อความ** หรือ  
**อีเมล** วิดีโอคลิปจะแนบไปกับข้อ  
ความ และคุณสามารถเขียน  
และส่งข้อความได้ตามปกติ  
หากคุณเลือก **บลูทูธ** เครื่องจะ  
แสดงข้อความให้คุณเปิดบลูทูธ  
และโทรศัพท์จะค้นหาอุปกรณ์ที่  
จะส่งวิดีโอไปให้

## การใช้เมนูตัวเลือกของวิดีโอ

จากโฟลเดอร์ **วิดีโอส่วนตัว** คุณสามารถเลือกจากตัวเลือกต่อไปนี้ได้:

**ส่ง** - ส่งวิดีโอไปยังเพื่อน

**ย้าย** - ย้ายวิดีโอคลิปจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำ หรือย้ายจากการ์ดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์

**คัดลอก** - คัดลอกวิดีโอคลิปจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำ หรือคัดลอกจากการ์ดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์

**ลบ** - ลบวิดีโอ

**แก้ไข** - แก้ไขชื่อวิดีโอ

**สร้างโฟลเดอร์ใหม่** - สร้างโฟลเดอร์ใหม่ในโฟลเดอร์ **วิดีโอส่วนตัว**

**เรียงตาม** - เรียงวิดีโอตามลำดับวันที่ประเภท หรือชื่อ

**มุมมองรายการ/มุมมองกริด**  
- มุมมองกริดเป็นมุมมองรายการหรือสลับกัน

**ข้อมูลโฟลเดอร์** - ดูรายละเอียดชื่อ, ขนาด, วันที่ของโฟลเดอร์ และจำนวนไฟล์และโฟลเดอร์ย่อยในโฟลเดอร์



**สถานะความจำ** - ดูสถานะหน่วยความจำ

**ลบทั้งหมด** - ลบวิดีโอทั้งหมด

## เกมส์และแอปพลิเคชัน

คุณสามารถติดตั้งเกมส์และแอปพลิเคชันใหม่ในโทรศัพท์ได้ เพื่อช่วยให้คุณได้เพลิดเพลินในยามว่าง

## การติดตั้งเกมส์/แอปพลิเคชันผ่านการติดตั้งภายในเครื่อง

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  และเลือก **อื่นๆ** หรือ **การ์ดความจำ** หากคุณใส่หน่วยความจำภายนอก
- 3 เลือกไฟล์ (\*.jad หรือ \*.jar) ที่คุณต้องการติดตั้ง และกดคำสั่ง **ติดตั้ง** แอปพลิเคชันจะถูกติดตั้ง  
**หมายเหตุ:** ไฟล์ **jad** ครมมีไฟล์ **jar** อยู่ภายใน

01

02

03

04

05

06

07

08

## มัลติมีเดีย

### การเล่นเกมส์

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  และ **เกมส์ & แอปฯ**
- 3 เปิดโฟลเดอร์เกมส์ และเลือกและแตะที่เกมส์เพื่อเริ่ม

### การใช้เมนูตัวเลือกของเกมส์

จากโฟลเดอร์ **เกมส์** ตัวเลือกต่อไปนี้ จะใช้ได้เมื่อคุณแตะที่  :

**ลบ** - ลบไฟล์

#### สร้างโฟลเดอร์ใหม่

- สร้างโฟลเดอร์ใหม่ภายใน **เกมส์ & แอปฯ**

**แก้ไข** - เปลี่ยนชื่อไฟล์

**ย้าย** - ย้ายไฟล์จากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำหรือจากการดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์

**ข้อมูลไฟล์** - ดูรายละเอียดชื่อ, ขนาด, วันที่, เวลา, ประเภท, ระยะเวลา, ขนาดมิติ, การป้องกัน และลิขสิทธิ์

**เรียงตาม** - เรียงเกมส์และแอปพลิเคชันตาม **วันที่, ขนาด** หรือ **ชื่อ** **ตั้งคาสี**

**สถานะความจำ** - ดูสถานะหน่วยความจำ

**ลบทั้งหมด** - ลบไฟล์ทั้งหมด

### เอกสาร

จากเมนู **เอกสาร** คุณสามารถดูไฟล์เอกสารทั้งหมดได้ จากขั้นตอนนี้คุณสามารถดูไฟล์ **Excel, Powerpoint, Word, ข้อความ** และ **pdf** ได้




## การโอนไฟล์ไปที่โทรศัพท์

บลูทูธคือวิธีการที่ง่ายที่สุดในการโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ คุณยังสามารถใช้ LG PC Suite ผ่านทางสายสำหรับซิงโครไนซ์ได้ โปรดดูรายละเอียดในหน้า 105

ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธที่โทรศัพท์และคอมพิวเตอร์ และทั้งคู่ต่างมองเห็นกันแล้ว
- 2 ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏอยู่ในโฟลเดอร์ **เอกสาร** หรือ **อื่นๆ**

## การดูไฟล์

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **เอกสาร**
- 3 เลือกเอกสาร และแตะที่ **ดู**

## อื่นๆ

โฟลเดอร์ **อื่นๆ** ใช้สำหรับจัดเก็บไฟล์ประเภทอื่นๆ ที่ไม่ใช่รูปภาพ เสียง วิดีโอ เกมส์ หรือแอปพลิเคชัน ซึ่งมีวิธีใช้เดียวกับโฟลเดอร์ **เอกสาร** คุณจะพบว่าเมื่อคุณโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ ไฟล์เหล่านั้นจะปรากฏอยู่ในโฟลเดอร์ **อื่นๆ** มากกว่าจะปรากฏในโฟลเดอร์ **เอกสาร**

หากเป็นเช่นนั้น คุณสามารถย้ายไฟล์เหล่านั้นได้

ในการย้ายไฟล์จาก **อื่นๆ** ไปที่ **เอกสาร**:

01

02

03

04





05

06

07


08

## มัลติมีเดีย

- 1 **แตะที่**  แล้วเลือก 
- 2 **แตะที่**  แล้วเลือก **อื่นๆ**
- 3 **เลือกไฟล์** แล้วแตะที่ 
- 4 **แตะที่ ย้าย** เลือกไฟล์เดอรัปลายทางจากรายการโดยแตะที่ไอคอนลูกศร หน้าจอจะแสดง **ย้าย** เมื่อการถ่ายโอนเสร็จสมบูรณ์




### การสร้างภาพยนตร์

- 1 **แตะที่**  แล้วเลือก 
- 2 **แตะที่**  (Muvee studio)
- 3 **แตะที่**  เพื่อใส่รูปภาพทำเครื่องหมายภาพที่คุณต้องการแล้วเลือก **แทรก**
- 4 **แตะที่** แท็บสไตล์เพื่อเลือก Muvee style
- 5 **แตะที่**  เพื่อเปลี่ยนเสียง
- 6 **แตะที่**  เพื่อดูภาพยนตร์ที่คุณสร้าง
- 7 **แตะที่**  แล้วเลือก **ลำดับ** เพื่อจัดลำดับ

- 8 **แตะที่**  แล้วเลือก **บันทึกโลเคชัน** เพื่อเลือกสถานที่ที่ต้องการบันทึกภาพยนตร์และแตะที่ **ระยะเวลา** เพื่อเลือกไทม์ระหว่างยาวและสั้น



## เพลง

LG KP500 มีเครื่องเล่นเพลงในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะที่  แล้วเลือก  แล้วเลือก  จากขั้นตอนนี้ คุณสามารถเข้าใช้งานโพลีโคเดอร์ต่างๆ ดังนี้:

**เล่นล่าสุด** - ดูเพลงที่เล่นล่าสุดทั้งหมด

**ทุกแทร็ค** - ประกอบด้วยเพลงทั้งหมดที่มีในโทรศัพท์

**ศิลปิน** - เบรอสต์รายการเพลงที่เก็บไว้ตามศิลปิน

**อัลบั้ม** - เบรอสต์รายการเพลงที่เก็บไว้ตามอัลบั้ม

**แนวเพลง** - เบรอสต์รายการเพลงที่เก็บไว้ตามแนวเพลง

**รายการ** - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

**สับเปลี่ยนแทร็ค** - เล่นแทร็คแบบสุ่มลำดับ

## การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธ หรือสายสำหรับซิงโครไนซ์

คุณยังสามารถใช้ LG PC Suite ได้ โปรดดูรายละเอียดในหน้า 105 ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และต่างมองเห็นกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์ แล้วเลือกเพื่อส่งทางบลูทูธ
- 3 เมื่อไฟล์พร้อมที่จะส่งแล้ว คุณยอมรับไฟล์ที่โทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏขึ้นใน **เพลง > ทุกแทร็ค**

01

02

03

04

05

06


07

08

## มัลติมีเดีย

### การเล่นเพลง

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **ทุกแทร็ค**
- 3 เลือกเพลงที่คุณต้องการเล่น
- 4 แตะที่  เพื่อหยุดเล่นเพลงชั่วคราว
- 5 แตะที่  เพื่อข้ามไปยังเพลงถัดไป
- 6 แตะที่  เพื่อข้ามไปยังเพลงก่อนหน้า
- 7 แตะที่  เพื่อกลับไปเมนูเพลง

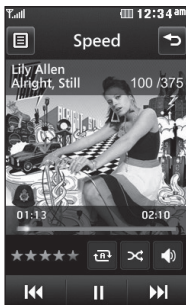

### การใช้ตัวเลือกขณะเล่นเพลง

แตะที่  แล้วเลือก:

**ย่อ** - ทำให้หน้าจอเครื่องเล่นเพลงหายไป เพื่อให้คุณสามารถใช้งานโทรศัพท์ต่อไปได้ตามปกติ




**ข้อมูลไฟล์** - ดูข้อมูลต่างๆ ได้แก่ ชื่อ, ขนาด, วันที่, เวลา, ประเภท, ระยะเวลา, ป้องกันไฟล์ และลิขสิทธิ์ของเพลง

**ส่ง** - ส่งเพลงเป็นข้อความหรือผ่านบลูทูธ

**ใช้เป็น** - ใช้เพลงเป็นเสียงเรียกเข้าแบบเสียง, เสียงเรียกเข้าแบบวิดีโอ, เสียงข้อความ การเปิดเครื่อง หรือการปิดเครื่อง

## การสร้างรายการเพลง





คุณสามารถสร้างรายการเพลงของคุณเองได้โดยการเลือกเพลงจากโพลเดอร์ **ทุกแทร็ค**

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **รายการ**
- 3 แตะที่ **เพิ่มรายการเพลงใหม่** ป้อนชื่อรายการเพลง และแตะที่ **บันทึก**
- 4 โพลเดอร์ **ทุกแทร็ค** จะแสดงเพลงทั้งหมดในโทรศัพท์ แตะที่เพลงทั้งหมดที่คุณต้องการใส่ไว้ในรายการเพลง จะมีเครื่องหมายปรากฏอยู่ข้างชื่อเพลงเหล่านั้น
- 5 แตะที่ **เสร็จ**

ในการเล่นรายการเพลง ให้เลือกรายการเพลง และแตะที่ **เล่น**

## การแก้ไขรายการเพลง

ในบางครั้ง คุณอาจต้องการเพิ่มเพลงหรือลบเพลงออกจากรายการเพลง เมื่อคุณต้องการเพิ่มหรือลบเพลง คุณสามารถแก้ไขรายการเพลงได้

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก **รายการ**
- 3 เลือกรายการเพลง
- 4 แตะที่  แล้วเลือก:

**เพิ่มเพลงใหม่** – เพื่อเพิ่มเพลงใหม่ในรายการเพลง เลือกเพลงที่ต้องการ แล้วแตะที่ **เสร็จ**

**เปลี่ยนลำดับรายการ** – เปลี่ยนลำดับการเล่นของรายการเพลง **ส่ง** – ส่งเพลงเป็นข้อความหรือผ่านบลูทูธ

**ลบออกจากรายการ** – ลบเพลงออกจากรายการเพลง แตะที่ **ใช้** เพื่อยืนยัน

01

02

03

04

05

06

07



08

## มัลติมีเดีย

**สถานะความจำ** - ดูสถานะหน่วยความจำ

**ลบทั้งหมด** - ลบทุกแทร็คจากรายการเพลง

### การลบรายการเพลง

- 1 แตะที่  แล้วเลือก **ความบันเทิง**
- 2 แตะที่ **เพลง** แล้วเลือก **รายการ**
- 3 แตะที่  แล้วเลือก **ลบ** หรือ **ลบทั้งหมด** เพื่อลบรายการเพลงทั้งหมด

### การใช้วิทยุ

LG KP500 มีคุณสมบัตินิเทศวิทยุ FM ดังนั้น คุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา





**หมายเหตุ:** คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟัง (ช่องเสียบเดียวกับช่องเสียบอุปกรณ์ชาร์จ)

### การค้นหาสถานี

คุณสามารถตั้งสถานีวิทยุไว้ในโทรศัพท์ได้ โดยการค้นหาด้วยตนเองหรือโดยอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก

คุณสามารถบันทึกได้สูงสุด 50 ช่องสถานีในโทรศัพท์ของคุณ คุณต้องต่อชุดหูฟังกับโทรศัพท์ก่อนเนื่องจากชุดหูฟังจะทำหน้าที่เป็นเสาอากาศ

#### ในการปรับตั้งอัตโนมัติ:

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก 
- 3 แตะที่ **สแกนอัตโนมัติ** จากนั้นจะเครื่องค้นหาสถานีโดยอัตโนมัติและกำหนดไว้ที่ช่องสถานีในโทรศัพท์

**หมายเหตุ:** คุณยังสามารถค้นหาสถานีด้วยตนเองได้โดยใช้

◀ และ ▶ ที่แสดงอยู่ถัดจากความถี่วิทยุ หากคุณกด ◀ และ ▶ ค้างไว้ จะเป็นการค้นหาสถานีโดยอัตโนมัติ


## การรีเซ็ตสถานี

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก 
- 3 เลือก **รีเซ็ต** เพื่อรีเซ็ตของสถานีปัจจุบัน หรือเลือก **รีเซ็ตทั้งหมด** เพื่อรีเซ็ตของสถานีทั้งหมดของสถานีแต่ละช่องจะกลับไปความถี่เริ่มต้น 87.5Mhz

## การฟังวิทยุ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วแตะที่หมายเลขของสถานีที่คุณต้องการฟัง

**เคล็ดลับ!** ในการเพิ่มประสิทธิภาพการรับสัญญาณวิทยุให้ยึดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ

คุณสามารถย่อหน้าต่างและฟังวิทยุด้วย BMG โดยแตะที่ .

01

02

03

04

05

06

07


08

## สมุดบันทึก




### การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 จากหน้าจอแสดงคำแนะนำ ให้เลือก  แล้วแตะที่  และเลือก  เลือก ปฏิทิน
- 2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
- 3 แตะที่  แล้วเลือก **เพิ่มการนัดหมายใหม่**
- 4 แตะที่ **ประเภท** แล้วเลือกจาก **นัดหมาย, วันครบรอบ** หรือ **วันเกิด**  
ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่ม
- 5 สำหรับการนัดหมายและวันครบรอบ ให้ป้อนเวลาและวันที่ที่เหตุการณ์สิ้นสุดในช่วงเวลาและวันที่ด้านล่างทั้งสองช่อง




- 6 หากคุณต้องการใส่หัวเรื่อง หรือ บันทึกในเหตุการณ์ของคุณให้แตะที่ **บันทึก** แล้วพิมพ์ในบันทึกของคุณ แล้วตามด้วย **บันทึก**
- 7 ตั้งค่า **เตือน** และ **ซ้ำ**
- 8 เลือก **บันทึก** และเหตุการณ์ของคุณจะบันทึกอยู่ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมายกรอบสี่เหลี่ยมกำกับอยู่ และเสียงกริ่งจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์ เพื่อให้คุณไม่พลาดกำหนดต่างๆ

**เคล็ดลับ!** คุณสามารถกำหนดวันหยุดในปฏิทินได้ แตะที่วันแต่ละวันที่เป็นวันหยุดของคุณ แล้วแตะที่  และเลือก **ตั้งวันหยุด**

## การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก  เลือก **ตั้งค่า**
- 2 แตะที่ **ตั้งค่าปฏิทิน** และเลือก **แสดงรายเดือน** หรือ **มุมมองสัปดาห์**
- 3 **ตั้งค่า สัปดาห์เริ่มต้นเมื่อ**
- 4 แตะที่ **บันทึก** เพื่อยืนยันการเลือกของคุณ

## การเพิ่มรายการลงในสิ่งที่ต้องทำ

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก  **2** เลือก **สิ่งที่ต้องทำ** และแตะที่ **เพิ่มการนัดหมายใหม่**
- 3 กำหนดวันที่ของรายการที่ต้องทำ เพิ่มหมายเหตุ และเลือกลำดับความสำคัญ: **สูง, กลาง หรือ ต่ำ**
- 4 **บันทึก** รายการสิ่งที่ต้องทำโดยเลือกที่ **บันทึก**

**เคล็ดลับ!** คุณสามารถแก้ไขรายการได้โดยเลือกรายการและแตะที่ **แก้ไข** แล้วป้อน และยืนยันการแก้ไขโดยการเลือก **บันทึก**

01

02

03

04

05





06

07

08




## สมุดบันทึก

### การแบ่งปันรายการที่ต้องทำ

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วเลือก  และเลือก  เลือก **สิ่งที่ต้องทำ**
- 2 เลือกรายการที่ต้องการที่ต้องการแบ่งปัน แล้วแตะที่ 
- 3 เลือก **ส่ง** คุณสามารถเลือกแบ่งปันรายการที่ต้องทำ เป็น **ข้อความตัวอักษร**, **ข้อความมีลติมีเดีย**, **อีเมล** หรือ **บลูทูธ**

**เคล็ดลับ!** คุณสามารถสำรองข้อมูลและซิงโครไนซ์ปฏิทินของคุณกับคอมพิวเตอร์ได้ โปรดดูที่ PC Sync ในหน้า 105




### การเพิ่มบันทึก

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก  เลือก **บันทึก**
- 2 แตะ แล้วเลือก **เพิ่มบันทึกใหม่**
- 3 พิมพ์บันทึก แล้วตามด้วย **บันทึก**
- 4 บันทึกของคุณจะปรากฏขึ้นบนหน้าจอ เมื่อคุณเปิดแอปพลิเคชัน **บันทึก** ในครั้งถัดไป





**เคล็ดลับ!** คุณสามารถแก้ไขบันทึกที่มีอยู่ได้ เลือกบันทึกที่ต้องการแก้ไข แล้วพิมพ์การเปลี่ยนแปลงของคุณ

## การใช้ตัวค้นหารวันที่

ตัวค้นหารวันที่เป็นเครื่องมืออำนวยความสะดวกที่ช่วยให้คุณสามารถคำนวณวันหลังจากที่ผ่านไปมาแล้วหลายวันได้ ตัวอย่างเช่น 60 วันจากวันที่ 10.10.07 คือวันที่ 09.12.2007 ซึ่งเหมาะสำหรับการจัดการวันที่ครบกำหนด

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 เลือก **ตัวค้นหารวันที่**
- 3 ในแท็บ **จาก** ให้กำหนดวันที่ต้องการ
- 4 ในแท็บ **หลัง** ให้กำหนดจำนวนวัน
- 5 **วันที่เป้าหมาย** จะปรากฏขึ้นด้านล่าง

## การตั้งเวลาปลุก

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 แตะที่ **เพิ่มการปลุก**
- 3 กำหนดเวลาที่ต้องการให้ส่งเสียงปลุก แล้วแตะที่ **บันทึก**
- 4 เลือกว่าคุณต้องการให้ส่งเสียงปลุกซ้ำ **ทุกวัน, จันทร์ - ศุกร์, จันทร์ - เสาร์, เสาร์ - อาทิตย์, ยกเว้นวันหยุด หรือ เลือกวัน** ไอคอนจะบ่งชี้วันที่คุณเลือก
- 5 เลือก **เสียงปลุก** เพื่อเลือกประเภทการปลุก
- 6 แตะที่ **เสียงเตือน** แล้วเลือกโพลเดอร์ **เสียงเริ่มต้น** หรือ **การบันทึกเสียง** เพื่อค้นหาเสียง ในการฟังเสียง ให้แตะที่เสียง แล้วตามด้วย 
- 7 เพิ่มบันทึกสำหรับการปลุก แตะที่ **บันทึก** เมื่อคุณเพิ่มบันทึกเสร็จแล้ว

01

02

03

04

05

06

07

08

## สมุดบันทึก





- 8 สดท้าย คุณสามารถกำหนดรอบเวลาในการเลื่อนปลุกเป็น 5, 10, 20, 30 นาที, 1 ชั่วโมง หรือ ปิด
- 9 เมื่อคุณตั้งปลุกเสร็จแล้ว ให้แตะที่บันทึก

หมายเหตุ:

คุณสามารถตั้งปลุกได้ถึง 5 รายการ

**เคล็ดลับ!** แตะที่ไอคอนเปิด/ปิดทางด้านขวาของการตั้งปลุกเพื่อตั้งค่า

## การเพิ่มบันทึกด้วยพาดการวาด

- 1 จากหน้าจอสดแนนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 แตะที่ เพิ่มภาพวาด
- 3 วาดบันทึกลงบนหน้าจอสัมผัส LCD แล้วตามด้วย 
- 4 บันทึกของคุณจะปรากฏขึ้นบนหน้าจอ เมื่อคุณเปิดแอปพลิเคชันพาดการวาด ในครั้งถัดไป

## บันทึกเสียง

ใช้ เครื่องบันทึกเสียง เพื่อบันทึกเสียงเตือนความจำหรือเสียงอื่นๆ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือก  และตั้งค่า เลือกลงจาก:


**ระยะเวลา** – กำหนดระยะเวลาในการบันทึก เลือกลงจาก ไม่จำกัด, ขนาดข้อความ MMS หรือ 1 นาที

**คุณภาพ** – เลือกคุณภาพของเสียง เลือกลงจาก ละเอียดมาก, ละเอียด หรือ ปกติ



**ความจำที่ใช้** – เลือกตำแหน่งที่จะบันทึกไฟล์บันทึกเสียง

## การบันทึกเสียงหรือเสียงพูด

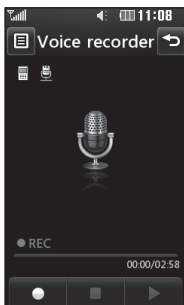- 1 แตะที่  แล้วเลือก 
- 2 แตะที่ 
- 3 แตะที่  เพื่อเริ่มบันทึก
- 4 แตะที่  เพื่อจบการบันทึก
- 5 แตะที่  เพื่อฟังรายการที่บันทึก



## การส่งรายการบันทึกเสียง

- 1 เมื่อคุณบันทึกเสียงเสร็จแล้ว ให้แตะที่ 
  - 2 แตะที่ **ส่งทาง** และเลือกจาก **ข้อความ**, **อีเมล** หรือ **บลูทูธ** หากคุณเลือก **ข้อความ** หรือ **อีเมล** รายการที่บันทึกจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ
- หมายเหตุ:** หลังจากที่คุณบันทึกเสียงเสร็จแล้ว ให้แตะที่  แล้วเลือก **ส่งทาง**, **ไฟล์**, **ลบ**, **ใช่** เป็น (เพื่อ **ใช่** เป็นเสียงเรียกเข้า) **ตั้งค่า** หรือ **ไปที่เสียง**

01

02

03

04

05





06

07




08

## สมุดบันทึก

### การใช้เครื่องคิดเลข

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 เลือก เครื่องคิดเลข
- 3 แตะที่ปุ่มตัวเลขเพื่อป้อนตัวเลข
- 4 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, \*, /) แล้วตามด้วย =
- 5 สำหรับการคำนวณแบบซับซ้อน ให้แตะที่  และเลือกจาก **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** หรือ **rad** ฯลฯ..

### การแปลงหน่วย





- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 เลือก ตัวแปลงหน่วย
- 3 เลือกว่าคุณจะแปลง **สกุลเงิน**, **พื้นที่**, **น้ำหนัก**, **ความยาว**, **อุณหภูมิ**, **ปริมาตร** หรือ **ความเร็ว**

- 4 จากนั้น คุณสามารถเลือกหน่วย และป้อนค่าที่คุณต้องการแปลง แล้วตามด้วยหน่วยที่คุณต้องการแปลงเป็น
- 5 ค่าผลลัพธ์ที่เกี่ยวข้องกันจะปรากฏขึ้นบนหน้าจอ

### การใช้นาฬิกาจับเวลา

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 เลือก นาฬิกาจับเวลา
- 3 แตะที่ **เริ่ม** เพื่อเริ่มต้นตัวจับเวลา
- 4 แตะที่ **Lap** หากคุณต้องการบันทึกกรอบเวลา
- 5 แตะที่ **หยุด** เพื่อหยุดตัวจับเวลา
- 6 แตะที่ **ต่อ** เพื่อเริ่มนาฬิกาจับเวลาใหม่ต่อจากเวลาที่หยุดไว้ **รีเซ็ต** เพื่อเริ่มต้นเวลาใหม่อีกครั้ง

## การใส่ชื่อเมืองลงในเวลา ทั่วโลก

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 เลือก เวลาทั่วโลก
- 3 แตะที่  แล้วตามด้วย เพิ่มเมือง  
เริ่มพิมพ์ชื่อเมืองที่คุณต้องการ  
และชื่อนั้นจะปรากฏที่ด้านบน  
ของหน้าจอ

01

02

03

04

05

06

07

08

## PC Sync

คุณสามารถซิงโครไนซ์คอมพิวเตอร์กับโทรศัพท์ของคุณ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน รวมทั้งยังเป็นการสำรองข้อมูลไฟล์ที่ช่วยให้คุณสบายใจได้

### การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

- 1 จากหน้าจอสแตนด์บาย ให้กด  และเลือก  และเลือก 
- 2 เลือก โหมดการเชื่อมต่อ USB และเลือก ที่เก็บข้อมูล **PC suite** **ซิงค์เพลง** **PictBridge**
- 3 ใส่แผ่นซีดีที่ให้มาด้วยในเครื่องคอมพิวเตอร์ คลิก **LG PC Suite Installer** ซึ่งจะปรากฏที่หน้าจอของคุณ
- 4 เลือกภาษาที่ต้องการใช้ในการติดตั้ง แล้วคลิกที่ **OK**

- 5 ปฏิบัติตามคำแนะนำบนหน้าจอ เพื่อให้วีซาร์ด LG PC Suite Installer เสร็จสมบูรณ์
- 6 เมื่อติดตั้งเสร็จเรียบร้อยแล้ว ไอคอน LG PC Suite จะปรากฏขึ้นบนเดสก์ทอป

### การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

- 1 เชื่อมสาย USB ที่โทรศัพท์และคอมพิวเตอร์ของคุณ
- 2 ดับเบิลคลิกที่ไอคอน **LG PC Suite** บนเดสก์ทอปของคุณ
- 3 คลิกที่ **Connection Wizard** แล้วคลิก **USB**
- 4 คลิกที่ **Next** แล้วคลิก **Next** อีกครั้ง จากนั้นคลิก **Finish** โทรศัพท์และคอมพิวเตอร์ของคุณจะเชื่อมต่อกันเรียบร้อยแล้ว

## การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **Backup** แล้วเลือก **Backup** หรือ **Restore**
- 3 เลือกเนื้อหาที่คุณต้องการสำรองข้อมูลหรือเรียกคืน เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือเรียกคืนข้อมูล คลิก **OK**
- 4 ข้อมูลของคุณจะได้รับการสำรองหรือเรียกคืน

## การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **Contents**
- 3 เอกสารทั้งหมด, แฟลชคอนเทนท์, ภาพ, เสียง และวิดีโอ ซึ่งคุณบันทึกไว้ในโทรศัพท์ของคุณจะปรากฏบนหน้าจอในโฟลเดอร์ LG Phone

**เคล็ดลับ!** การดูเนื้อหาของโทรศัพท์บนเครื่องคอมพิวเตอร์จะช่วยให้คุณบริหารจัดการเรียงไฟล์จัดการเอกสาร และลบเนื้อหาที่คุณไม่ต้องการใช้อีกต่อไปได้

01

02

03

04

05

06

07

08

## PC Sync

### การซิงโครไนซ์รายชื่อ

- 1 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี
- 2 คลิกที่ไอคอน **Contacts**
- 3 เครื่องคอมพิวเตอร์ของคุณจะอิมพอร์ตและแสดงรายชื่อทั้งหมดที่บันทึกไว้ในการ์ด USIM และโทรศัพท์
- 4 คลิกที่ **File** แล้วเลือก **Save** จากนั้น คุณสามารถเลือกตำแหน่งที่คุณต้องการบันทึกรายชื่อ




หมายเหตุ: ในการสำรองข้อมูลรายชื่อที่บันทึกไว้ใน **USIM** การ์ด ให้คลิกที่โฟลเดอร์ **SIM Card** ทางด้านซ้ายมือของหน้าจอคอมพิวเตอร์ เลือก **Edit** ที่ด้านบนสุดของหน้าจอ แล้วเลือก **Select All** คลิกขวาที่รายชื่อของคุณ แล้วเลือก **Copy to contact** จากนั้นคลิกที่โฟลเดอร์ **Handset** ทางด้านซ้ายมือของหน้าจอและหมายเลขทั้งหมดจะปรากฏขึ้น

### การซิงโครไนซ์ข้อความ

- 1 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี
- 2 คลิกที่ไอคอน **Messages**
- 3 ข้อความในเครื่องคอมพิวเตอร์และโทรศัพท์ของคุณจะปรากฏขึ้นในโฟลเดอร์บนหน้าจอ
- 4 ใช้แถบเครื่องมือด้านบนสุดของหน้าจอเพื่อแก้ไขและจัดเรียงข้อความ

### การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล

คุณสามารถใช้โทรศัพท์เป็นอุปกรณ์เก็บข้อมูลได้


- 1 เลือกรการเชื่อมต่อเครื่องโทรศัพท์ของคุณออกจากเครื่องคอมพิวเตอร์
- 2 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่ 
- 3 เลือก  แล้วเลือก **โหมดการเชื่อมต่อ USB**
- 4 แตะที่ **ที่เก็บข้อมูล**

- 5** ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี โทรศัพท์ของคุณจะแสดงข้อความ: **Connecting as Mass Storage...** แล้วตามด้วย **Connected as Mass Storage Mode** อย่ายกเลิกการเชื่อมต่อระหว่างการถ่ายโอนข้อมูล
- 6** ไฟล์ทั้งหมดในโทรศัพท์ของคุณ จะได้รับการจัดเก็บไปยังฮาร์ดดิสก์ของเครื่องคอมพิวเตอร์โดยอัตโนมัติ

**หมายเหตุ:** คุณต้องถอดสายเชื่อมต่อของโทรศัพท์ออกจากคอมพิวเตอร์ของคุณเพื่อเริ่มใช้ที่เก็บข้อมูล

## การใช้โทรศัพท์เป็นอุปกรณ์ซิงค์เพลง

คุณสามารถใช้โทรศัพท์เป็นอุปกรณ์ซิงค์เพลงเพื่อซิงค์ไฟล์เพลงเท่านั้น คุณสามารถซิงค์เพลงได้โดยใช้ Windows Media Player 10 / 11 และสนับสนุนทั้งหน่วยความจำเครื่องและการ์ดหน่วยความจำภายนอก

- 1 เลิกการเชื่อมต่อเครื่องโทรศัพท์ของคุณออกจากเครื่องคอมพิวเตอร์
- 2 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่ 
- 3 เลือก  แล้วเลือก **โหมดการเชื่อมต่อ USB**
- 4 แตะที่ **ซิงค์เพลง**
- 5 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี โทรศัพท์ของคุณจะแสดงข้อความ: **กำลังเชื่อมต่อเป็นโหมดซิงค์เพลง...** แล้วตามด้วย **เลิกเชื่อมต่อสายเคเบิลเพื่อหยุดการซิงค์เพลง**

01

02

03

04

05

06

07




08

## เว็บไซต์

### เบราว์เซอร์

เบราว์เซอร์ช่วยให้คุณเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ไม่ว่าจะอยู่ที่ไหนหรือกำลังทำอะไร





### การเข้าใช้เว็บไซต์

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 ในการเข้าถึงโฮมเพจของเบราว์เซอร์โดยตรง ให้เลือก โฮม หรือเลือก ไปยัง URL จากนั้นพิมพ์ URL ที่คุณต้องการ แล้วเลือก เชื่อมต่อ

**หมายเหตุ:** ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

### การเพิ่มและการใช้บุ๊กมาร์ค


เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุ๊กมาร์คและบันทึกเว็บเพจได้

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 เลือก บัญคอร์ด รายการบุ๊กมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ
- 3 ในการเพิ่มบุ๊กมาร์คใหม่ ให้เลือก  แล้วแตะที่ รายชื่อใหม่ ป้อนชื่อสำหรับบุ๊กมาร์ค แล้วตามด้วยป้อน URL
- 4 แตะที่ บันทึก บัญคอร์ดของคุณจะปรากฏขึ้นในรายการบุ๊กมาร์ค
- 5 ในการเข้าใช้งานบุ๊กมาร์ค เพียงแตะที่บุ๊กมาร์ค แล้วแตะที่ เชื่อมต่อ เครื่องจะเชื่อมต่อเข้ากับบุ๊กมาร์คของคุณ

## การใช้ RSS reader




RSS (Really Simple Syndication) เป็นกลุ่มรูปแบบ Web Feed ที่ใช้เพื่อเผยแพร่เนื้อหาที่ได้รับการอัปเดตเป็นประจำ เช่น รายการใน Blog, หัวข้อข่าว หรือ Podcast เอกสาร RSS ที่เรียกว่า Feed, Web Feed หรือ Channel จะมีสรุปเนื้อหาหรือข้อความเต็มจากเว็บที่เกี่ยวข้อง RSS ช่วยให้ทุกคนสามารถติดตามความเคลื่อนไหวของเว็บไซต์ที่คุณชื่นชอบด้วยระบบอัตโนมัติที่สะดวกกว่าการเฝ้าดูด้วยตนเอง ผู้ใช้สมัครใช้บริการ Feed โดยป้อนลิงค์ของ Feed ลงใน Reader หรือคลิกที่ไอคอน RSS ในเบราว์เซอร์ที่เปิดขั้นตอนการสมัครใช้บริการ Reader จะตรวจดู Feed ที่ผู้ใช้สมัครใช้บริการเป็นประจำเพื่อหาเนื้อหาใหม่ และดาวน์โหลดการอัปเดตต่างๆ ที่พบ

## การบันทึกเพจ

- 1 เข้าถึงเว็บเพจที่ต้องการตามที่อธิบายไว้ข้างต้น
- 2 แตะที่  แล้วเลือก บันทึกเพจนี้
- 3 ป้อนชื่อสำหรับเว็บเพจเพื่อให้ง่ายต่อการจดจำ
- 4 แตะที่ บันทึก

**เคล็ดลับ!** เมนูนี้จะช่วยให้คุณสามารถแก้ไขชื่อของเพจที่คุณบันทึกไว้ ป้องกันหรือไม่ป้องกันบันทึกเดือนความจำบนหน้าจอ รวมถึงลบเพจที่บันทึกไว้ได้

## การเข้าใช้เพจที่บันทึกไว้

- 1 จากหน้าจอแสดงคำแนะนำ ให้เลือก  แตะที่  และเลือก 
- 2 เลือก เพจที่บันทึก
- 3 เลือกเพจที่ต้องการ และเพจนั้นจะเปิดขึ้น

01

02

03

04

05




06

07




08

## เว็บไซต์

### การดูประวัติข้อมูลเบราว์เซอร์

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก  เลือก ประวัติ
- 2 รายชื่อเว็บเพจที่คุณเข้าใช้ล่าสุด จะปรากฏขึ้น ในการเข้าใช้เพจใดเพจหนึ่ง ให้เลือกเพจที่ต้องการ แล้วแตะที่ เชื่อมต่อ

### การเปลี่ยนการตั้งค่าเว็บเบราว์เซอร์

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก  เลือก ตั้งค่า
- 2 คุณสามารถเลือกเพื่อแก้ไข โปรไฟล์, การตั้งค่าลักษณะ, แคช, คุกกี้, ระบบป้องกัน หรือเพื่อรีเซ็ตการตั้งค่าทั้งหมด โดยเลือก รีเซ็ตการตั้งค่า
- 3 คุณสามารถตั้งค่าเหล่านี้เป็น O หรือ O ได้โดยแตะที่ไอคอน

### การใช้โทรศัพท์เป็นโมเด็ม

โทรศัพท์ KP500 ของคุณสามารถทำหน้าที่เป็นโมเด็มของเครื่องคอมพิวเตอร์ได้ จึงทำให้คุณสามารถส่งอีเมลและเข้าถึงอินเทอร์เน็ตได้ แม้ในเวลาที่คุณไม่ได้เชื่อมต่อโดยใช้สาย โดยคุณสามารถใช้สาย USB หรือบลูทูธก็ได้

การใช้สาย USB:

- 1 ตรวจสอบให้แน่ใจว่าคุณได้ติดตั้ง LG PC Suite บนเครื่องคอมพิวเตอร์ของคุณแล้ว
- 2 เชื่อมต่อ KP500 เข้ากับคอมพิวเตอร์ของคุณด้วยสาย USB แล้วเริ่มซอฟต์แวร์ LG PC Suite
- 3 คลิก Internet Kit บนเครื่องคอมพิวเตอร์ แล้วคลิกปุ่ม New และเลือก Modem
- 4 เลือก LG Mobile USB Modem และเลือก OK จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ

**5** เขียนโปรไฟล์ที่สามารถเชื่อมต่อกับอินเทอร์เน็ต และบันทึกค่า

**6** โปรไฟล์ที่คุณสร้างจะปรากฏขึ้นในหน้าจอคอมพิวเตอร์ เลือกและคลิก Connect คอมพิวเตอร์จะเชื่อมต่อผ่าน KP500 ของคุณ

**หมายเหตุ:** สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการซิงโครไนซ์โดยใช้ LG PC Suite โปรดดูที่หน้า 106

การใช้บลูทูธ:

**1** ตรวจสอบให้แน่ใจว่าได้ตั้งค่าบลูทูธเป็น เปิด และมองเห็นได้ทั้งเครื่องพีซีและโทรศัพท์ KP500

**2** จับคู่เครื่องคอมพิวเตอร์ของคุณ และ KP500 เพื่อให้ต้องระบุรหัสผ่านสำหรับการเชื่อมต่อ

**3** ใช้ Connection wizard ใน LG PC Suite เพื่อสร้างการเชื่อมต่อบลูทูธที่ใช้งาน

**4** คลิก Internet Kit บนเครื่องคอมพิวเตอร์ แล้วคลิกปุ่ม New

**5** เลือก LG Mobile USB Modem และเลือก OK จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ

**6** เขียนโปรไฟล์ที่สามารถเชื่อมต่อกับอินเทอร์เน็ต และบันทึกค่า

**7** โปรไฟล์ที่คุณสร้างจะปรากฏขึ้นในหน้าจอคอมพิวเตอร์ เลือกและคลิก Connect คอมพิวเตอร์จะเชื่อมต่อผ่าน KP500 ของคุณ

**หมายเหตุ:** โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับบลูทูธได้ที่หน้า 121

01

02

03

04

05

06

07

08

## การตั้งค่า

ภายในโพลเดอร์นี้ คุณสามารถปรับการตั้งค่าเพื่อให้โทรศัพท์ KP500 ตอบสนองการทำงานในแบบของคุณได้




**หมายเหตุ:** โปรดดูข้อมูลเกี่ยวกับการตั้งค่าการโทรได้ที่หน้า 30

### การปรับแต่งรูปแบบของคุณ

คุณสามารถเปลี่ยนรูปแบบบนหน้าจอ สแตนด์บายของคุณได้อย่างรวดเร็ว เพียงแตะที่แถบสรุปสถานะทางด้านบน แล้วแตะที่แท็บรูปแบบเสียง คุณสามารถใช้เมนูการตั้งค่าในการปรับแต่งการตั้งค่ารูปแบบแต่ละรายการได้

- 1 กด  แล้วเลือก 
- 2 แตะที่ **รูปแบบเสียง** แล้วเลือกรูปแบบเสียงที่คุณต้องการแก้ไข
- 3 จากนั้น คุณสามารถเปลี่ยนตัวเลือกเสียง และการเตือนทั้งหมดที่มีอยู่ในรายการได้ รวมทั้ง **เสียงเรียกเข้าแบบเสียง** และ **ระดับเสียง** การตั้งค่า **แบบเตือนข้อความ** และอื่นๆ

### การเปลี่ยนการตั้งค่าหน้าจอ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือกจาก:
  - พื้นหลัง** - เลือกธีมสำหรับหน้าจอ สแตนด์บาย
  - เมนูบนสุด** - เลือกสไตลของเมนูบนสุด
  - การโทร** - ปรับขนาดตัวเลขและสี
  - แบบอักษร** - ปรับรูปแบบและขนาดของแบบอักษร
  - ไฟหน้าจอ** - เลือกระยะเวลาการทำงานของแบ็คไลท์
  - หมายเหตุ:** การเปิดแบ็คไลท์เป็นเวลานานจะทำให้สิ้นเปลืองพลังงานแบตเตอรี่มากขึ้น และคุณอาจจำเป็นต้องชาร์จโทรศัพท์ของคุณบ่อยยิ่งขึ้นด้วย

**ความสว่าง** - ปรับความสว่าง  
ของหน้าจอ

**ธีมเครื่อง** - เปลี่ยนรูปโฉมทั้งหมด  
ของคุณได้อย่างรวดเร็ว

**ข้อความต้อนรับ**

- เลือกเปิดหรือปิด  
และป้อนข้อความต้อนรับ

**การเปิดเครื่อง/การปิดเครื่อง** -  
เลือกธีมสำหรับหน้าจอการเปิด  
เครื่อง/การปิดเครื่อง


**2** แตะที่ **บันทึก**  
เพื่อบันทึกการตั้งค่า

## การเปลี่ยนการตั้งค่า โทรศัพท์

เพลิดเพลินกับอิสระในการปรับการ  
ทำงานของโทรศัพท์ KP500  
ในแบบที่คุณต้องการได้

**เคล็ดลับ!** ในการเลื่อนดูรายการ  
ตัวเลือก ให้แตะที่รายการสุดท้าย  
ที่มองเห็น แล้วใช้นิ้วเลื่อนหน้า  
จอขึ้น รายการต่างๆ จะเลื่อนขึ้น  
ทำให้มองเห็นรายการอื่นๆ ได้

**1** แตะที่  แล้วเลือก 

**2** แตะที่  แล้วเลือกจากรายการ  
ทางด้านล่าง

**วันที่และเวลา** - ปรับการตั้งค่าวันที่  
และเวลาของคุณ หรือเลือกให้  
เครื่องอัปเดตเวลาอัตโนมัติเมื่อคุณ  
เดินทางหรือสำหรับการปรับเวลา  
ตามฤดูกาล

**ประหยัดพลังงาน** - เลือกเพื่อ  
เปิด หรือ ปิด การตั้งค่าประหยัด  
พลังงานที่ตั้งมาจากโรงงาน

**ภาษา** - เปลี่ยนภาษาบน  
จอแสดงผลของ KP500 ของคุณ

**ล๊อคปุ่มอัตโนมัติ** - ล๊อคปุ่มกดอัตโนมัติ  
ในหน้าจอสแตนด์บาย

**ระบบป้องกัน** - ปรับการตั้งค่า  
การรักษาความปลอดภัย ได้แก่  
รหัส PIN และล๊อคเครื่อง

01

02

03

04

05

06

07

08

## การตั้งค่า

**สถานะความจำ** - โปรดดูข้อมูลเพิ่มเติมที่การใช้ตัวจัดการหน่วยความจำในหน้า 120

**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่าทั้งหมดเป็นค่าที่ตั้งมาจากโรงงาน

**ข้อมูลเครื่อง** - ดูข้อมูลทางด้านเทคนิคของโทรศัพท์ KP500

## การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้นคุณจึงสามารถเปลี่ยนกับโทรศัพท์ใหม่ของคุณได้ทันที หากต้องการเปลี่ยนแปลงการตั้งค่าให้ใช้เมนูนี้

แตะที่  แล้วเลือก   
เลือก 

## การตั้งค่าเครือข่าย

**เลือกเครือข่าย** - หากคุณกำหนดเป็นอัตโนมัติ โทรศัพท์ KP500 จะค้นหาเครือข่ายและลงทะเบียนเครื่องในเครือข่ายโดยอัตโนมัติ ขอแนะนำให้ใช้เพื่อบริการและคุณภาพที่ดีที่สุด

หากคุณกำหนดเป็นกำหนดเองเครือข่าย ทั้งหมดที่มีอยู่ในขณะนั้นจะปรากฏขึ้น และคุณสามารถเลือกลงทะเบียนในเครือข่ายใดเครือข่ายหนึ่งได้ หากไม่สามารถลงทะเบียนในเครือข่ายใด รายชื่อเครือข่ายจะปรากฏขึ้นอีกครั้ง คุณสามารถเลือกลงทะเบียนในเครือข่ายอื่นได้อีก

**หมายเหตุ:** เมื่อโทรศัพท์ของคุณไม่มีเครือข่ายในโหมดกำหนดเองข้อความบอปป้าให้เลือกเครือข่ายที่มีอยู่จะปรากฏขึ้นในหน้าจอเมื่อไม่ได้ใช้งาน

**รายการที่ต้องการ** - ถ้าเครือข่าย  
ทำการค้นหาโดยอัตโนมัติ  
คุณสามารถเพิ่มเครือข่ายที่ต้อง  
การเชื่อมต่อได้ ตัวเลือกที่คุณเลือก  
ใช้ได้มีดังนี้

**โปรไฟล์อินเทอร์เน็ต** - เมนูนี้แสดง  
โปรไฟล์อินเทอร์เน็ต คุณสามารถ  
สร้างโปรไฟล์ใหม่ ลบหรือแก้ไขโปร  
ไฟล์โดยใช้เมนูตัวเลือกอย่างไรก็ตาม  
คุณไม่สามารถลบหรือแก้ไขการ  
กำหนดค่าเริ่มต้นที่ขึ้นอยู่กับแต่ละ  
ประเทศ

**จุดเชื่อมต่อ** - ผู้ให้บริการระบบได้นับ  
ที่กข้อมูลนี้แล้ว คุณสามารถเพิ่มจุด  
เชื่อมต่อใหม่โดยใช้เมนูนี้ได้

**การเชื่อมต่อข้อมูลแพ็คเกจ** -  
เลือกว่าจะให้โทรศัพท์ของคุณเชื่อม  
ต่อกับเครือข่ายข้อมูลแพ็คเกจเมื่อใด

## **โหมดการเชื่อมต่อ USB**

- เลือก เชื่อมต่อ PC Sync  
และซิงโครไนซ์โทรศัพท์ KP500  
โดยใช้ซอฟต์แวร์ LG PC Suite  
เพื่อคัดลอกไฟล์จากโทรศัพท์ โปรด  
ดูข้อมูลเพิ่มเติมเกี่ยวกับการ  
ซิงโครไนซ์ที่หน้า 105  
หากคุณใช้ซิงค์เพลงกับ Windows  
Media Player ให้เลือกซิงค์เพลงใน  
เมนูนี้ ซิงค์เพลงใช้ได้เฉพาะกับข้อมูล  
เพลงเท่านั้น

**บริการ Synch** - ฟังก์ชันการซิงค์  
เซิร์ฟเวอร์จะซิงโครไนซ์ข้อมูลใน  
โทรศัพท์กับข้อมูลในเซิร์ฟเวอร์  
เช่น ข้อมูลที่อยู่ของรายชื่อ  
รายการนัดหมาย รายการสิ่งที่ต้องทำ  
และรายการบันทึกโดยผ่านเครือ  
ข่ายไร้สาย

**การตั้งค่าสตรีมมิ่ง** - ผู้ให้บริการ  
ระบบได้นับที่กข้อมูลนี้แล้ว คุณ  
สามารถแก้ไขได้หากต้องการ

01

02

03

04

05

06

07

08

## การตั้งค่า

### การใช้ตัวจัดการหน่วย ความจำ

KP500 ของคุณมีหน่วยความจำให้  
เลือกสามแบบ: โทรศัพท์, USIM  
การ์ด และการดหน่วยความจำภาย  
นอก (คุณอาจต้องซื้อการ์ดหน่วย  
ความจำแยกต่างหาก)

คุณสามารถใช้ตัวจัดการหน่วยความ  
จำในการกำหนดว่าในแต่ละหน่วย  
ความจำใช้หน่วยความจำไปเท่าใด  
และควรมีพื้นที่ว่างเหลือเท่าใด

แตะที่  แล้วตามด้วย  เลือก  
 แล้วเลือก **สถานะความจำ**

**ความจำเครื่อง** - ดูหน่วยความจำที่  
มีในโทรศัพท์ KP500 สำหรับรูปภาพ,  
เสียง, วิดีโอ, แฟลช, MMS, อีเมล,  
แอปพลิเคชัน Java และอื่นๆ

**ความจำสำรอง** - ดูหน่วยความจำ  
ที่มีในเครื่องสำหรับ SMS, รายชื่อ,  
ปฏิทิน, สิ่งที่ต้องทำ, บันทึก,  
เดือน, ข้อมูลการโทร, บุคมารค  
และรายการเบ็ดเตล็ดอื่นๆ

**ความจำซิม** - ดูหน่วยความจำที่มี  
ในซิมการ์ด

**หน่วยความจำการ์ด** - ดูหน่วยความ  
จำที่มีในการดหน่วยความจำภายนอก  
(คุณต้องซื้อการ์ดหน่วยความจำแยก  
ต่างหาก)

**การตั้งค่าที่เก็บหลัก** - เลือกค่า  
แห่งในการบันทึกรายการที่ต้องการ

**เคล็ดลับ!** โปรดดูข้อมูลเพิ่มเติม  
เกี่ยวกับการใส่การ์ดหน่วยความ  
จำที่หน้า 14

## การส่งและการรับไฟล์โดย ใช้บลูทูธ

บลูทูธเป็นวิธีในการส่งและรับไฟล์ที่ดี โดยไม่จำเป็นต้องต่อสาย ซึ่งสามารถเชื่อมต่อได้อย่างรวดเร็วและง่ายดาย คุณยังสามารถเชื่อมต่อกับชุดหูฟังบลูทูธเพื่อโทรออกและรับสายได้

### ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์รูปภาพ, วิดีโอ หรือเพลง
- 2 เลือก **ส่ง** เลือก **บลูทูธ**
- 3 หากคุณจับคู่อุปกรณ์บลูทูธแล้ว โทรศัพท์ KP500 จะไม่ค้นหาอุปกรณ์บลูทูธอื่นโดย อัตโนมัติ หากคุณยังไม่จับคู่อุปกรณ์บลูทูธ โทรศัพท์ KP500 จะค้นหาอุปกรณ์อื่นๆ ที่ใช้บลูทูธภายในรัศมีนั้น
- 4 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป แล้วแตะที่ **เลือก**
- 5 ไฟล์ของคุณจะถูกส่งออกไป

**เคล็ดลับ!** คอยเฝ้าดูแถบแสดงความคืบหน้าเพื่อให้แน่ใจว่าไฟล์ของคุณถูกส่งแล้ว

### ในการรับไฟล์:

- 1 ในการรับไฟล์ คุณต้องตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับการเปลี่ยนการตั้งค่าบลูทูธทางด้านขวา
- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และที่ **ใช่** เพื่อรับไฟล์
- 3 คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว และคุณสามารถเลือกเพื่อดู ไฟล์หรือ **ใช้**เป็นภาพพื้นหลังได้ โดยทั่วไป ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมในอัลบั้มมีเดีย

01

02

03

04

05





06

07

08

## การตั้งค่า

การเปลี่ยนการตั้งค่าบลูทูธ:

- 1 แตะที่  และเลือก 
- 2 เลือก  แล้วแตะที่  และเลือก **ตั้งค่า**

ทำการเปลี่ยนแปลง:

**การมองเห็นเครื่อง** - เลือกเป็นมองเห็นได้ หรือซ่อน หรือแสดง 1 นาที

**ชื่อเครื่องของฉัน** - ป้อนชื่อโทรศัพท์ KP500 ของคุณ

**บริการที่รองรับ** - เลือกวิธีใช้บลูทูธที่เกี่ยวข้องกับบริการอื่นๆ

โปรดดูที่ใช้โทรศัพท์เป็นโมเด็มในหน้า 113 หรือการใช้ชุดหูฟังบลูทูธในหน้า 123

**โหมดซิมระยะไกล** - เปิดหรือปิด

**แอดเดรสส่วนตัว** - แสดงแอดเดรสบลูทูธ

## การจับคู่กับอุปกรณ์บลูทูธอื่น

โดยการจับคู่โทรศัพท์ KP500 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้ ซึ่งหมายความว่าอุปกรณ์ที่จับคู่ด้วยก็จะปลอดภัยมากขึ้น

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู **ตั้งค่า**
- 2 แตะที่ **ค้นหา**
- 3 โทรศัพท์ KP500 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ
- 4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่านจากนั้นให้แตะที่ **ตกลง**
- 5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นซึ่งคุณควรป้อนรหัสผ่านเดียวกัน
- 6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

## การใช้ชุดหูฟังบลูทูธ

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้**
- 2 ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ
- 3 แต่ที่ **ถ้ามก่อนทำการเชื่อมต่อ** หรือ **ให้เชื่อมต่อเสมอ** และแต่ที่ **ใช้** เพื่อเชื่อมต่อทันที โทรศัพท์ KP500 จะเปลี่ยนเป็นรูปแบบชุดหูฟังโดยอัตโนมัติ

**เคล็ดลับ!** โปรดดูรายละเอียดเกี่ยวกับโหมดตอบรับ BT ที่หน้า 29 เพื่อที่คุณจะได้สามารถควบคุมวิธีการรับสาย เมื่อมีการเชื่อมต่อชุดหูฟังบลูทูธ

01

02

03

04

05

06

07

08

# อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ KP500 ของคุณ


อุปกรณ์ชาร์จ



สายเคเบิลข้อมูลและซึ่ดี  
เชื่อมต่อและซิงโครไนซ์โทร  
ศัพท์ KP500 เข้ากับพีซี



แบตเตอรี่



ชุดหูฟังสเตอริโอ



คู่มือการใช้  
เรียนรู้เพิ่มเติมเกี่ยวกับ  
โทรศัพท์ KP500 ของคุณ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเรา ในกรณีที่มีข้อสอบถามเพิ่มเติม

**⚠ คำเตือน:** เมื่อติดฟิล์มป้องกันบนหน้าจอสัมผัส ความไวต่อการสัมผัสอาจลดลง

## บริการของเครือข่าย

โทรศัพท์ไร้สายที่อธิบายไว้ในคู่มือนี้ ได้รับการรับรองให้ใช้ในระบบเครือข่าย GSM 900, DCS 1800, GSM 850 และ PCS1900

คุณสมบัติต่างๆ ที่กล่าวถึงในคู่มือนี้ เรียกว่า บริการเสริมจากระบบเครือข่าย ซึ่งเป็นบริการพิเศษที่คุณขอเปิดใช้บริการได้จากผู้ให้บริการของคุณ ก่อนที่คุณจะสามารถใช้คุณสมบัติต่างๆ ของบริการเสริมจากระบบเครือข่ายเหล่านี้ คุณต้องสมัครขอรับบริการผ่านทางผู้ให้บริการ และขอคำแนะนำในการใช้จากผู้ให้บริการด้วย

## ข้อมูลทางเทคนิค

### ทั่วไป

ชื่อผลิตภัณฑ์ : KP500

ระบบ : GSM 900 / DCS 1800 / GSM 850 / PCS 1900

### อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ)  
+45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

01

02

03

04

05

06

07

08

**ศูนย์บริการ LG โดย บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด**

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน แขวงบคคโกล เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์-ศุกร์, 08:00 - 17:40น.

Call center : 0-2878-5757

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900 Quad Band Terminal Equipment

Model Name

KP500, KP500Q, KP570, KP570Q

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1  
EN 60950-1 : 2001  
EN 50360/EN 50361 : 2001  
EN 301 511 V9.0.2  
EN 300 328 V 1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Seung Hyouon, Ji / Director

Issued Date

1, September, 2008

  
Signature of representative

## คำแนะนำเพื่อความปลอดภัยและการทำงาน อย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้ อาจทำให้เกิดอันตรายหรือผิดปกติ

### การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น KP500 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการทำงานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม

## คำแนะนำเพื่อความปลอดภัยและการทำงาน อย่างมีประสิทธิภาพ

- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.990 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.26 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื่องเยื่อ 1 กรัม

### การดูแลและการบำรุงรักษา เครื่องโทรศัพท์

#### คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จแบตเตอรี่ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ ที่ไม่ผ่านการรับรองดังกล่าวอาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจซ่อม
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อนเช่นเครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบ่งชี้พิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียกขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้

- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจรอนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์(อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น

- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

## การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

### อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาต หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อเป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

## คำแนะนำเพื่อความปลอดภัยและการทำงาน อย่างมีประสิทธิภาพ

### ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้อาจช่วยให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณเช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์แพกพาแบบไรสายซึ่งขัดขวางการทำงานของถุงลมซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุง

### ลมนิรภัยได้

- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

### หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

### ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัสหรือพยายามดึงออก ให้หยุดใช้โทรศัพท์ทันทีจนกว่าจะส่วนที่เป็นแก้วนี้จะได้

รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับ  
การแต่งตั้ง

**บริเวณที่ทำให้เกิดระเบิดได้**  
ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่าง  
มีการระเบิดต่างๆ ให้ปฏิบัติตามข้อ  
ห้ามอย่างเคร่งครัด และทำตามข้อ  
กำหนดหรือกฎเกณฑ์ต่างๆ

**บริเวณที่อาจเกิดการระเบิด  
ได้**

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมัน  
เชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อ  
เพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของ  
เหลวที่ติดไฟง่าย หรือระเบิดได้ใน  
ห้องโดยสารของรถ ซึ่งคุณใช้เก็บ  
โทรศัพท์หรืออุปกรณ์เสริมต่างๆ  
ของคุณ

**บนเครื่องบิน**

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่น  
รบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณ  
ก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่  
พื้นก่อนได้รับการอนุญาตจากพนักงาน  
ประจำเครื่อง

**เด็ก**

เก็บโทรศัพท์ในที่ปลอดภัยและห่าง  
จากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็ก  
ซึ่งอาจทำอันตรายหากเด็กนำ  
ใส่ปาก

**การโทรฉุกเฉิน**

การโทรฉุกเฉินอาจไม่สามารถใช้กับ  
เครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมด  
ได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่าง  
เดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบ  
กับผู้ให้บริการในพื้นที่ของคุณ

**ข้อมูลเกี่ยวกับแบตเตอรี่และ  
การดูแลรักษา**

- คุณไม่จำเป็นต้องคายประจุแบบ  
เดอริออกจนหมดก่อนเริ่มการชาร์จ  
แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่น  
เนื่องจากไม่มี Memory Effect

## คำแนะนำเพื่อความปลอดภัยและการทำงาน อย่างมีประสิทธิภาพ

- ประสิทธิภาพของแบตเตอรี่จึงไม่  
ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่อง  
ชาร์จของ LG เท่านั้น  
เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการ  
ออกแบบมาเพื่อยืดอายุการใช้งาน  
ของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบต  
เตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัส  
แบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที  
เมื่อประสิทธิภาพการใช้งานลดต่ำ  
ลงจนถึงระดับที่ไม่อาจใช้งานได้  
แบตเตอรี่นี้สามารถชาร์จใหม่ได้  
หลายร้อยครั้งจนกว่าจะจำเป็นต้อง  
เปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่  
ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลา  
การใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดน  
แสงแดดโดยตรง หรือใช้ในสภาพที่  
มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพ  
อากาศที่ร้อนหรือเย็น เพราะประ  
สิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูก  
ต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิต  
ในการทิ้งแบตเตอรี่ที่ใช้แล้ว  
โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้ง  
เป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่  
โปรดนำไปที่จุดบริการหรือตัวแทน  
จำหน่ายที่ได้รับการแต่งตั้งจาก LG  
Electronics ที่ใกล้ที่สุดเพื่อขอ  
ความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้า  
เสียบทุกครั้งหลังจากแบตเตอรี่โท  
ร์คัทเต็มแล้วเพื่อลดการใช้พลังงาน  
สิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะ  
ขึ้นอยู่กับกำหนดค่าเครี  
อข่าย, การตั้งค่าผลิตภัณฑ์,  
รูปแบบการใช้, แบตเตอรี่  
และสภาพแวดล้อม

## การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหาบางประการ แต่คุณสามารถแก้ไขปัญหาที่คุณพบบางอย่างได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดของซิมการ์ด	ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือคุณอาจใส่ซิมการ์ดไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่ได้เชื่อมต่อกับระบบเครือข่าย	สัญญาณอ่อน อยู่นอกพื้นที่บริการของระบบเครือข่าย GSM	ย้ายไปบริเวณที่ใกล้หน้าต่างหรือที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการ
รหัสไม่ตรงกัน	เมื่อคุณต้องการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสนั้นอีกครั้ง รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	ติดต่อผู้ให้บริการ
ตั้งค่าฟังก์ชันไม่ได้	ผู้ให้บริการไม่สนับสนุนหรือดองลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข มีการใส่ซิมการ์ดอันใหม่ ถึงขีดจำกัดการโทรของคุณแล้ว	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาตตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยใช้รหัส PIN 2
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดเครื่องมากเกินไป แบตเตอรี่หมด ขั้วสัมผัสแบตเตอรี่สกปรก	กดปุ่มเปิด/ปิดเป็นเวลาอย่างน้อยสองวินาที ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์แสดงการชาร์จบนหน้าจอ ทำความสะอาดขั้วสัมผัส

## การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดเกี่ยวกับการชาร์จ	แบตเตอรี่หมดโดยสิ้นเชิง	ชาร์จแบตเตอรี่
	อุณหภูมิสูงหรือต่ำเกินไป	ตรวจสอบให้แน่ใจว่าอยู่ในอุณหภูมิแวดล้อมที่เหมาะสม รอสักครู่ จากนั้นชาร์จแบตเตอรี่อีกครั้ง
	มีปัญหาที่ขั้วสัมผัส	ตรวจสอบกระแสไฟฟ้าและการเชื่อมต่อกับโทรศัพท์
	ไม่มีกระแสไฟฟ้า	ตรวจสอบขั้วสัมผัสแบตเตอรี่ ทำความสะอาดหากจำเป็น
	เครื่องชาร์จชำรุด	เสียบปลั๊กเข้ากับเต้าเสียบอื่น หรือตรวจสอบกระแสไฟฟ้า
	ใช้เครื่องชาร์จไม่ถูกต้อง	หากเครื่องชาร์จไม่เริ่มทำงาน ให้เปลี่ยนเครื่องชาร์จใหม่
	แบตเตอรี่ชำรุด	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น เปลี่ยนแบตเตอรี่
สัญญาณเครือข่ายขาดหายไป	สัญญาณอ่อนเกินไป	การเชื่อมต่อกับผู้ให้บริการอื่น เป็นไปโดยอัตโนมัติ
หมายเลขโทรศัพท์ที่ใช้โทรออกไม่ได้	กำลังใช้งานฟังก์ชันกำหนดหมายเลขโทรออก	ตรวจสอบการตั้งค่า



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



## KP500 User Guide

Congratulations on your purchase of the advanced and compact KP500 phone by LG, designed to operate with the latest digital mobile communication technology.

Set up **01**

Your standby screen **02**

The basics **03**

Get creative **04**

Get organised **05**

The web **06**

Settings **07**

Accessories **08**

# Contents

## Set up

Getting to know your phone .....	8
Open view .....	10
Installing the USIM and battery .....	11
Memory card .....	14
Menu map .....	16

## Your standby screen

Touch screen tips .....	17
-------------------------	----

## The basics

Calls .....	22
Making a call .....	22
Making a call from your contacts .....	23
Answering and rejecting a call .....	23
In-call options .....	24
Adjusting the call volume .....	25
Speed dialling .....	25
Making a second call .....	25
Turning off DTMF .....	26
Viewing your call logs .....	26
Using call divert .....	27
Using call barring .....	27
Changing the common call setting .....	28
Contacts .....	30
Searching for a contact .....	30
Adding a new contact .....	30
Contact options .....	31
Creating a group .....	32

Changing your contact settings .....	33
Viewing information .....	34
Messaging .....	35
Messaging .....	35
Sending a message .....	35
Entering text .....	36
T9 predictive .....	36
Abc manual .....	37
Keyboard .....	37
Handwriting recognition .....	38
Setting up your email .....	40
Retrieving your email .....	43
Sending an email using your new account .....	43
Changing your email settings .....	44
Message folders .....	45
Managing your messages .....	46
Using templates .....	47
Using emoticons .....	47
Changing your text message settings .....	48
Changing your multimedia message settings .....	49
Changing your other settings .....	50

## Get creative

Camera .....	51
Taking a quick photo .....	51

After you've taken your photo.....	51	Adding text to a photo.....	69
Getting to know the viewfinder.....	52	Adding an effect to a photo.....	70
Choosing a shot type.....	53	Morphing a photo.....	71
Adjusting the exposure.....	53	Adding a colour accent to a photo ..	72
Using continuous shot mode.....	54	Swapping the colours in a photo .....	72
Using the advanced settings.....	54	Trimming the length of your video...	73
Changing the image size.....	56	Merging two videos together.....	73
Choosing a colour effect.....	56	Merging a photo with a video .....	74
Viewing your saved photos.....	57	Adding text to a video.....	75
<b>Video camera.....</b>	<b>58</b>	Overlaying a photo.....	76
Shooting a quick video .....	58	Adding a voice recording.....	76
After you've shot your video .....	59	Adding a soundtrack to your video..	77
Getting to know the viewfinder.....	60	Changing the speed of your video ..	78
Adjusting the Exposure.....	61	<b>Multimedia.....</b>	<b>79</b>
Using the advanced settings.....	61	Pictures.....	79
Changing the video image size.....	63	My images option menus.....	79
Choosing a colour tone.....	63	Sending a photo.....	80
Watching your saved videos .....	64	Using an image .....	81
<b>Your photos and videos .....</b>	<b>65</b>	Printing an image.....	81
Viewing your photos and videos.....	65	Moving or copying an image.....	82
Using zoom when viewing a photo..	65	Creating a slide show.....	82
Adjusting the volume when		Sounds .....	82
viewing a video.....	65	Using a sound.....	83
Capturing an image from a video .....	66	Videos.....	83
Viewing your photos as a slide		Using options while video is paused	83
show.....	66	Editing a video clip .....	84
Setting a photo as wallpaper .....	67	Sending a video clip.....	84
Editing your photos.....	68	Using the video options menu.....	85

# Contents

Games and Applications .....	85	Sharing a to do item .....	96
Installing a game/application via local install .....	86	Adding a memo .....	96
Playing a game .....	86	Using date finder .....	97
Using the games options menu.....	86	Setting your alarm .....	97
Documents .....	87	Adding a memo with drawing panel .....	98
Transferring a file to your phone .....	87	Voice recorder .....	98
Viewing a file.....	87	Recording a sound or voice.....	99
Others.....	88	Sending the voice recording.....	99
Creating a movie .....	88	Using your calculator.....	100
Music.....	89	Converting a unit.....	100
Transferring music onto your phone	90	Using the stopwatch .....	101
Playing a song .....	90	Adding a city to your world time....	101
Using options while playing music..	91	PC Sync.....	102
Creating a playlist.....	91	Installing LG PC Suite on your computer .....	102
Editing a playlist.....	92	Connecting your phone and PC.....	102
Deleting a playlist.....	92	Backing up and restoring your phone's information .....	103
Using the radio.....	92	Viewing your phone files on your PC .....	103
Searching for stations .....	93	Synchronising your contacts.....	104
Resetting channels .....	93	Synchronising your messages .....	104
Listening to the radio.....	93	Using your phone as a mass storage device .....	105
<b>Get organised</b>		Using your phone as Music	
Organiser .....	94	Sync device.....	105
Adding an event to your calendar .....	94		
Changing your default calendar view .....	95		
Adding an item to your to do list.....	95		

## The web

Browser .....	106
Accessing the web .....	106
Adding and accessing your bookmarks .....	106
Using RSS reader .....	107
Saving a page .....	107
Accessing a saved page .....	108
Viewing your browser history .....	108
Changing the web browser settings .....	108
Using your phone as a modem .....	109

## Settings

Personalising your profiles .....	111
Changing your screen settings .....	111
Changing your phone settings .....	112
Changing your connectivity settings .....	113
Using memory manager .....	115
Sending and receiving your files using Bluetooth .....	116
Pairing with another Bluetooth device .....	117
Using a Bluetooth headset .....	118

Accessories .....	119
-------------------	-----

Network service .....	120
-----------------------	-----

Technical data .....	120
----------------------	-----

## Guidelines

Guidelines for safe and efficient use .....	122
Trouble Shooting .....	128

## Getting to know your phone


### End/Power key

Ends or rejects a call.  
Turns the phone on/off.  
Press once to return to  
the standby screen.

### Multitasking key

### Call key

Dials a phone number and  
answers incoming calls.

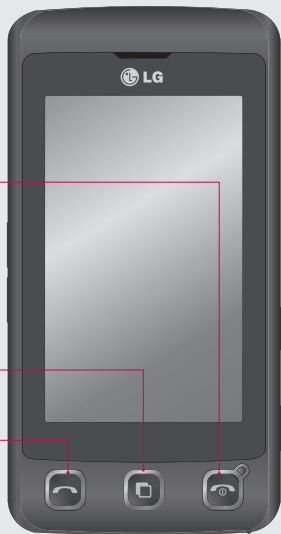

**⚠ WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.



### Charger, Cable, Handsfree connector

**TIP:** To connect the USB cable, wait until the phone has powered up and has registered to the network.

### Side keys

- **When the screen is idle:** volume of key tone.
- **During a call:** volume of the earpiece.
- **When playing a BGM track**
  - **Short press:** controls the volume.



Micro SD memory card socket

Lock/Unlock key

Capture button

Stylus

01

02

03

04


05

06

07

08


## Open view

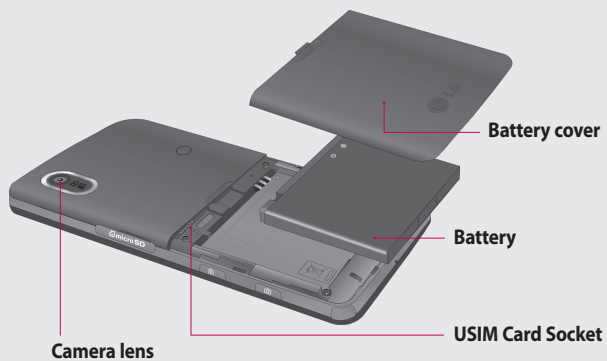

# Installing the USIM and battery

## 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.

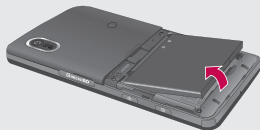

## 2 Remove the battery

Using the cut-out at the bottom lift it from the battery compartment.



**⚠ WARNING:** Do not use your fingernail when removing the battery.

**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

01

02

03

04

05

06


07

08

## Installing the USIM and battery

### 3 Install the USIM card

Slide the USIM card into the USIM card holder making sure that the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the opposite direction.

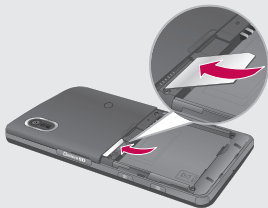


### 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clicks into place.



## 5 Charging your phone

Lift and twist the charger socket cover of the on the side of your KP500. Insert the charger and plug it into a mains electricity socket. Your KP500 needs to be charged until "Battery full" appears on screen.

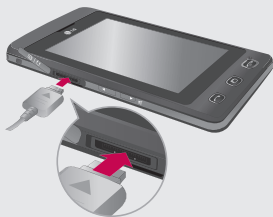

01

02

03

04

05

06

07

08


## Memory card

### Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card. The KP500 will support up to a 8GB memory card.

**NOTE:** A memory card is an optional accessory.

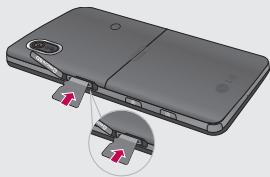

- 1 Open the memory card slot cover on the right hand edge of the phone.
- 2 Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.



- 3 Replace the cover.

### Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.


- 1 From the standby screen select , then touch  and choose **Phone settings**.
- 2 Touch **Memory manager** then chose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will then be formatted and ready to use.

**TIP!** To change your default storage destination, open Memory manager from the Phone settings menu and select Primary storage settings.

**NOTE:** If your memory card already has content, it will automatically be filed in the correct folder; for example, videos will be stored in the My Videos folder.

## Transferring your contacts

To transfer your contacts from your USIM to your phone:

- 1 From the Communicate tab, select  and choose **Settings**.
- 2 Touch **Copy**.
- 3 Choose **Handset to SIM**.
- 4 Choose **all** or choose names one by one and touch **Copy**.

01

02

03

04


05

06

07

08

## Menu map

Touch  in the standby screen to open a **Top menu**. From here you can access further menus: **Communicate**, **Entertainment**, **Utilities** and **Settings**.



### Communicate

- Dialling
- Speed dials
- Contacts
- Call history
- New message
- New Email
- Messaging



### Entertainment

- Gallery
- My stuff
- Camera
- Video camera
- Muvee studio
- Music
- FM radio
- Games & Apps



### Utilities

- Browser
- Organizer
- Alarms
- Voice recorder
- Drawing Panel
- Tools
- Sim Tool Kit



### Settings

- Profiles
- Screen settings
- Phone settings
- Call settings
- Touch settings
- Bluetooth
- Connectivity

## Your standby screen

Whenever your KP500 is not in use it will return to your home screen. From here you can access all the menu options, make a quick call and view the status of your phone as well as many other things.


### Touch screen tips


The home screen is also a great place to get accustomed to the touch screen.

To select an item, touch the icon accurately. Your KP500 will vibrate slightly when it recognises you've touched an option.

To scroll through lists, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- There's no need to press too hard, the touchscreen is sensitive enough to pick up on a light, yet firm, touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other options around it.
- When the screen back light is off, press the Unlock/Lock key on the right hand side to bring back the home screen.
- Don't cover the phone with a case or cover. The touchscreen won't work with any material covering it.
- There are two types of idle screen. Flick left or right to change your idle screen types on the standby screen.

**1 Widget idle** - When you touch  , the mobile widget panel appears.

**2 Speed dial idle** - When you touch  , the speed dial list appears. You can drag and click what you need right away in both idle types.

01

02

03

04

05

06

07

08

# Your standby screen

## Widget idle




Quick keys



Mobile widget

## Speed dial idle

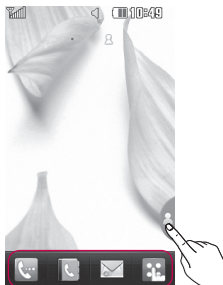


Speed dial list

## The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Calls** or press the  hard key.



Touch to open your address book. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones. See page 30 for details.



Touch to access the Messaging options menu. From here you can create a new SMS or MMS, or view your message folder. See page 35 for details.



Touch to open the full Top menu which is divided into four vertical sub-menus. Touch each sub-menu's tab to view further options.

01

02

03

04

05

06

07






08















## Your standby screen

### The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.


Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full


Icon	Description
	Message sending failed
	An alarm is set
	Customised Profile in use
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause


## Changing your Status from the status bar

Touch the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3 and Bluetooth status. Here you can set Profile type, play/pause MP3 and activate/deactivate Bluetooth.

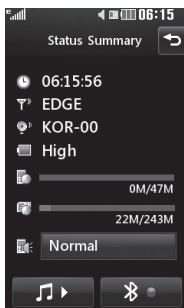

## Using the Multitasking function

Press the multitasking hard key  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

01

02

03

04

05




06


07


08


# Calls


## Making a call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad. To delete a digit touch the clear key.
- 3 Press the  hard key to initiate the call.
- 4 To end the call press the  hard key.

**TIP!** To enter + for making an international call, press and hold .




**TIP!** Press the lock/unlock hard key  to lock the touchscreen to prevent calls being made by mistake.

**TIP!** To bring up the keypad during a call, press the .



**TIP!** Touch to unlock. You can unlock by touching the button for a while until the screen is able to work or press the Unlock hard key .




**TIP!** You can send a message and search contacts by tapping .

## Making a call from your contacts

- 1 From the standby screen touch  to open the address book.
- 2 Enter the first few letters of the contact you would like to call.
- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Press the  Hard key or touch  to incoming the call

## Answering and rejecting a call

When your phone rings press the  hard key or touch  to answer the call.

Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting. Press the  hard or  touch to reject an incoming call.

01

02

03

04

05


06


07


08

# Calls


## In-call options

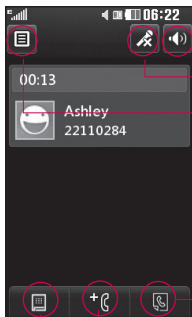



**Speaker** - Touch  to turn on the speaker phone.

**Mute** - Touch  to turn off the microphone so the person you are talking to cannot hear you.

**Options** - Choose from a list of further in-call options, including **Go to messages**, so you can check your messages, Go to contacts to add or search contacts during a call. You can also end the call from here by touching **End call**.

 - Choose to search your contacts during a call.

+  - Choose to add another person to the call.

 - Choose to open a numerical keypad for navigating menus with numbered options. For example, when dialling call centres or other automated telephone services.




**TIP!** To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.

## Adjusting the call volume





To adjust the volume during a call, use the up and down button on the left edge of the phone.

## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the standby screen touch  and select  and tap .
- 2 Your Voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your address book will open. Select the contact you'd like to assign to that number by touching their phone number once. To find a contact tap the search field box and enter the first letter of the name of the contact required.

## Making a second call

- 1 During your initial call, touch  and select the number you want to call.
- 2 Dial the number or search your contacts (see **Making a call** on page 22 for details).
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.
- 6 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

01

02

03

04

05

06

07

08


# Calls

**TIP!** You can combine your calls by selecting **Accept** then **Join**. Check that your network provider supports conference calling.

**NOTE:** You will be charged for each call you make.




## Turning off DTMF

DTMF allows you to use numerical commands to navigate menus within automated calls. DTMF is switched on as default.

To turn it off during a call (to make a note of a number for example) touch  and select **DTMF off**.


## Viewing your call logs


**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.


Touch  and select  and tap .

Choose to view:

**All** - View a complete list of all your dialled, received and missed calls.

**Dialled**  - View a list of all the numbers you have called.




**Received**  - View a list of all the numbers that have called you.

**Missed**  - View a list of all the calls you have missed.

**TIP!** From any call log touch  and **Delete all** to delete all the recorded items.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.




## Using call divert

- 1 Touch , select  and choose .
- 2 Touch **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Touch **Request** to activate.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

## Using call barring

- 1 Touch , select  and choose .
- 2 Touch **Call barring**.
- 3 Choose any or all of the six options:

**All outgoing**  
**Outgoing international**  
**Outgoing international calls**  
**except home country**  
**All incoming**  
**Incoming when abroad**  
**Deactivate all**

01

02

03

04

05

06

07




08

## Calls

- 4 Enter the call barring password. Please check with your network operator for this service.

**TIP!** Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

### Changing the common call setting

- 1 Touch , select  and choose .
- 2 Touch **Common settings**. From here you can amend the settings for:

**Call reject** - Slide the switch to **On** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts). Touch **Save** to change the setting.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Slide the switch left for **On** or right for **Off**.

**Answer mode** - Choose whether to answer the phone using the send key or any key.

**Minute minder** - Slide the switch left to **On** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

**Save new number** - Select **Yes** to save a new number.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

01

02

03

04

05

06

07




08

# Contacts




## Searching for a contact

There are two ways to search for a contact:

### From the standby screen

- 1 From the standby screen touch  to open the address book. Select the contact from the list that you want to make a call.
- 2 Touch  or press the  hard key to initiate the call.


### From the main menu

- 1 Touch , select .
- 2 Touch  and select **Search**.
- 3 You see a list of contacts, typing in the first letter of a contact's name will jump the menu to that alphabetical area of the list.

**TIP!** The alphabetical keypad is displayed once you tap the blank square.

**TIP!** To scroll through your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

## Adding a new contact


- 1 From the standby screen touch  and touch **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.

- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile, Home, Office, Pager, Fax, and General**. When you have finished, touch **Close**.
- 5 Add an email address.
- 6 Assign the contact to one or more groups. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 7 You can also add a **Ringtone, Birthday, Anniversary, Homepage, Home address, Company name, Job title, Company address** and a **Memo**.
- 8 Touch **Save** to save the contact.

**TIP!** You can create customised groups for your contacts, see **Creating a group** on page 32.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 30.
- 2 You can call or send a message directly from here.
- 3 Press  to open the list of options.

**Edit** - Change any of the contact's details.

**Delete** - Delete the contact. Touch **Yes** if you are sure.

**Copy or Move to USIM/Handset** - Choose to move or copy to the USIM card or handset (depending on where you originally saved the contact).

01

02

03

04

05

06

07





08

## Contacts


**Send business card** - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, **Email** or via **Bluetooth**.

**TIP! Send message** - Send a message to the contact. If the contact has an email address, select whether you'd like to send an email or SMS/MMS. See page 35 for details on how to send messages.

### Creating a group

- 1 Touch  and select .
- 2 Touch  then **Groups**.
- 3 Touch .
- 4 Select **Add group**.
- 5 Enter a name for your new group. You can also assign a ringtone to the group.
- 6 Touch **Save**.




**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

**TIP!** You can edit an existing group by highlighting it and touching . Choose **Add members** to the group from your contacts, assign a Group ringtone, Rename the group or Delete a group.

## Changing your contact settings

You can adapt your contact settings so that your address book suits your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 From the standby screen touch  and select .
- 2 Touch  and select **Settings**.
- 3 From here you can adjust the following settings:

**Contact list settings** - Choose whether to view contacts saved to both your **Handset & USIM**, **Handset** only or **USIM** only  
You can also choose to show the first name or last name of a contact first.

**Copy** - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

**Move** - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So if you move a contact from the USIM to the handset it will be deleted from the USIM memory.

01

02

03

04

05

06

07

08

# Contacts

## Send all contacts via Bluetooth




- Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

## Backup and Restore contacts

- Backup and restore contacts to the Memory Card.

**Clear contacts** - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your address book.

## Viewing information

- 1 From the standby screen touch  and select .
- 2 Touch  and select **Information**.
- 3 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.





**TIP!** If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

# Messaging





## Messaging

Your KP500 combines SMS, MMS and email into one intuitive and easy to use menu.


There are two ways to enter the messaging centre:


- 1 Touch  from the standby screen.
- 2 Touch  from the standby screen, then select  and choose .

## Sending a message

- 1 Touch  to open a blank message.
- 2 From here you can send an SMS or MMS. To send an email, touch  from the standby screen, then select  and . See page 40 for details.
- 3 Touch **Insert**, to add an image, video, sound or template.

- 4 Touch **T0(1)** at the top of the screen to enter the recipient's number, or touch the search icon to open your address book. You can add multiple contacts. Touch **Send** when ready.

 **WARNING:** You will be charged per 1 page text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.

**TIP!** Quick reply - Send a reply promptly to the selected message using a template.

01

02

03

04

05

06

07

08

# Messaging


## Entering text


There are five ways to enter text:


Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.


You can choose your input method by tapping  and **Input method**.

Tap the screen once, the keyboard appears.


 Touch to turn on T9 predictive text.

 You can choose writing languages.

 Tap to change numbers, symbols and text keypad.

Use  to scroll through the different keyboard types in each text entry mode (for example, capitals or lowercase).


## T9 predictive

In T9 mode you will see .

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

## Abc manual


In Abc mode you will see .


In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

## Keyboard

In Keyboard mode the screen flips to landscape and a full keyboard appears on screen.

Simply touch each letter to write your message and press:

 to switch to upper case

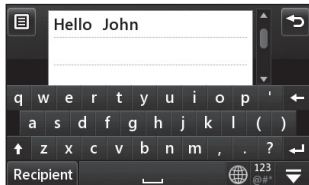

**TIP!** Keyboard mode predicts and shows what you will type in next. These words are predicted based on the sentences you have typed in so far. If you do not wish to use the suggested words, keep typing in new words. If you wish to use the suggested words, press the space bar to confirm them.

01

02

03

04

05

06

07

08

# Messaging

## Handwriting recognition

In Handwriting mode you simply write on the screen and your KP500 will convert your handwriting into your message. Select **Screen** or **Box** depending on your preferred view.

**TIP!** You may find it easier to use the stylus in this mode, please remember to press lightly to protect your screen from damage.

Handwriting recognition translates stylus gestures into letters, numbers or other character, and displays these characters as text. Handwriting recognition is only active where text can be entered.

**Note:** Most letters can be written using different stroke styles. See the tables below. The position on the screen decides case, not the style.

## Alphabet

If you select capital letter mode (ABC), letters you type will be inserted as capital letters even if you write in small letters, and vice versa.

Letter	Strokes
A	A A' a a'
B	B B b b'
C	c c'
D	D D d d'
E	E E e e'
F	F F f f'
G	G G g g'
H	H H h h'
I	I I i i'
J	J J j j'
K	K K k k'
L	L l l'

Letter	Strokes
M	M M m m
N	N N n n
O	O O o o
P	P P p p
Q	Q Q q q
R	R R r
S	S s
T	T T t t
U	U u u
V	V v
W	W w w
X	X x
Y	Y y y y
Z	Z z
ß	ß

## Numbers

Numbers are written above the arrow.

Number	Strokes
0	0 0
1	1 1 1 1 1
2	2 2 2
3	3 3
4	4 4 4 4
5	5 5 5 5
6	6
7	7 7 7 7
8	8 8 8 8
9	9 9 9 9

01

02

03

04

05

06

07




08

# Messaging

## Setting up your email

You can stay in touch on the move using email on your KP500. It's quick and simple to set up a POP3 or IMAP4 email account.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then tap .
- 2 Select  then scroll menu to **Settings**.
- 3 Touch **Email** then **Email accounts**.
- 4 Touch **Add Account**.
- 5 Setup Wizard will help you set up your email settings.

**Email address** - Enter your email address.

**Password** - Enter the account password.

**Username** - Enter your account user ID as supplied by your email provider.

**Mailbox type** - Select the internet protocol type used to transfer your email, IMAP4 or POP3.

**Incoming server** - Enter your incoming (POP3 or IMAP4) mail server name or IP address.

**Outgoing server** - Enter your outgoing(SMTP) mail server name or IP address. This may be the same server as for incoming mail.

**SMTP authentication** - Turn on SMTP authentication if the outgoing server requires user name and password to send email.

**Account name** - Enter the mailbox name that you wish to appear as the account name for the Mailbox.

Now your account is set up, it will appear in the list of accounts in your Email folder.

**6** You can check and edit settings by selecting the account in the list. You can also check the additional settings that were filled in automatically when you created the account.

**Reply email address** - Enter the 'reply to' email address.

**Maximum receive size** - Choose the size limit of your emails, the maximum is 1MB.

**Save sent mail into** - Select whether to save sent emails (an option when the mailbox type is set to IMAP4). When the mailbox type is POP3, sent mails are always saved into handset.

01

02

03

04

05

06

07

08

## Messaging

**Access points** - Choose your Internet access point.

**Auto retrieve** - Choose whether to retrieve your new emails automatically.

**Advanced settings** - Choose whether to use the advanced settings.

**SMTP port number** - Normally, this will be 25.

**SMTP TLS/SSL** - Choose whether to use SSL for outgoing server.

**Incoming server port** - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

**Incoming TLS/SSL** - Choose whether to use SSL for incoming server.

**SMTP Username** - Enter the SMTP username.

**SMTP Password** - Enter the SMTP password.





**APOP secure login** - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

- 7** You can change your default email account by touching **Activate**.

## Retrieving your email

You can automatically or manually check your account for new emails. See 'Changing your email settings' on page 44 to check automatically.

To check manually:

- 1 Touch  then select  and .
- 2 Touch **Mailbox**.
- 3 Touch the account you want to use then .
- 4 Choose **Retrieve** and your KP500 will connect to your email account and retrieve your new messages.

## Sending an email using your new account

- 1 Touch **New Email** in the **Communicate** menu and a new email will open.
- 2 You can enter the recipient's address and write your message. You can also attach images, videos, sounds or other file types.
- 3 Touch **Send** and your email will be sent.

**TIP!** You can upload Word, Excel, PowerPoint and PDF documents to your KP500 so you can review them on the move.

01

02

03

04

05

06

07




08

# Messaging

## Changing your email settings

You can change your email settings according to your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then select  and .
- 2 Touch **Settings** and **Email** and then you can adapt the following settings:

**Allow reply Email** - Choose to allow the sending of 'read, confirmation' messages.

**Request reply Email** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your KP500 checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at any one time.

**Include message in Fwd & Reply** - Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

**Auto Retrieval in Roaming** - Choose whether to retrieve your messages automatically when abroad (roaming).

**TIP!** Costs for retrieving email may be higher when roaming. Check with your network supplier.

**New email notification** - Choose whether to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

## Message folders

You'll recognise the folder structure used on your KP500, which is fairly self-explanatory.

**Inbox** - All the messages you receive are placed into your inbox. From here you can view, delete and more, see **Managing your messages** below for details.

**Mailbox** - All the emails you receive on your KP500 will be placed in your mailbox.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent items** - All the messages you have sent are placed in this folder.

**My Folders** - Create folders to store your messages.

01

02

03

04

05

06

07





08

# Messaging

## Managing your messages

You can use your Inbox to manage your messages.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then select  and .
- 2 Select **Inbox**.
- 3 Touch  and then choose to:
  - Delete** - Delete marked messages.
  - Create new message** - Open a new blank message or email.
  - Move to My folders** - Move the marked messages to My folders.

**Filter** - View your message by type. This will group SMS separately from MMS.

**Delete all** - Delete all of the messages.

If you see the message **No space for USIM messages** you should delete some messages on the USIM.

If you see the message **No space for messages** you should delete some messages to free up memory space.



## Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates** on the **Communicate** menu.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to **Add new**, **Delete** or **Delete all** templates.
- 3 Touch **Add template** to create a new template.
- 4 You can view the template by selecting it on the list and edit it by touching on the view screen.

## Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Touch  then choose **Emoticons** on the **Communicate** menu.
- 2 Touch  to **Add new**, **Delete** or **Delete all** emoticons.

01

02

03

04

05

06

07


08

# Messaging

## Changing your text message settings

Your KP500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Settings** on the **Communicate** menu. Select **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.




**Message types** - Convert your text into **Text, Voice, Fax, X.400** or **Email**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long text as** - Choose to send long messages as Multiple SMS or as MMS.

## Changing your multimedia message settings

Your KP500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch , select  then . Chose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose **Home** or **Roaming network**. If you then choose Manual you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read report** - Choose to allow and/or request a reply report.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on screen.

**Creation mode** - Choose your message mode.

**Delivery time** - Choose how long before a message is delivered.

**Multi msg centre** - Enter the details of your message centre.

01

02

03

04

05


06


07

08

# Messaging

## Changing your other settings

Touch , choose **Settings** on the **Communicate** menu then:



**Voicemail** - Touch  to add a new Voicemail service. Contact your network operator for more information on the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

**Info service** - Choose your reception status, language and other settings.


# Camera

## Taking a quick photo

- 1 Press the  key on the right side of the phone briefly.
- 2 The viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Position the phone so you can see the subject of your photo in the preview screen.
- 5 When the camera has focused on your subject, either press the  on the side of the phone firmly or press the red box on the lower right of the screen to take the photo.

## After you've taken your photo

Your captured photo will appear on screen. The name of the image runs along the bottom of the screen together with six icons down the right side.

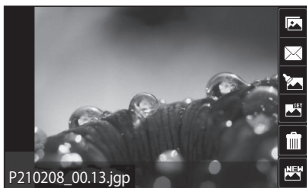

-  Touch to move to your gallery.
-  Touch to send the photo as a message, e-mail or Bluetooth. See page 35 for Sending a message, and page 116 for Sending and receiving your files using Bluetooth.
-  Touch to edit the photo.
-  Touch to set the picture you have taken as Wallpaper.
-  Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to take another photo straightaway. Your current photo will be saved.

01

02

03

04

05


06

07

08

# Camera


## Getting to know the viewfinder

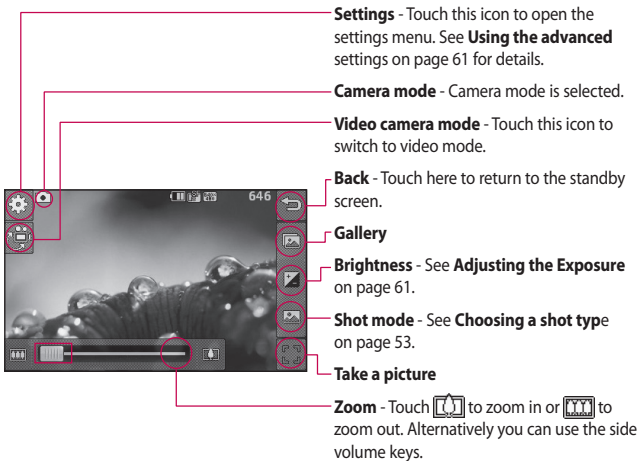

**TIP!** You can bring up the options by tapping the screen. They auto turn off after a few seconds.

**NOTE:** Image size should be 640\*480/  
400\*240/ 320\*240 to use zoom.

## Choosing a shot type

1 Touch  to open the available shot types.


2 Choose from two options:

**Normal shot** - This is the default shot type, the photo will be taken in the normal way, as outlined in taking a quick photo.

**Burst shot** - This enables you to take 3/6/9 shots automatically in very quick succession.

## Adjusting the exposure

Exposure defines the difference between light and dark (contrast) in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

1 Touch .

2 Slide the contrast indicator along the bar - left for a lower exposure, hazier image or right for a higher exposure, sharper image.

01

02

03

04

05

06


07

08


## Camera


### Using continuous shot mode

Continuous shot mode is great for taking photos of moving objects or at sporting events.

- 1 Touch  to open the available shot types and select **Burst shot**.
- 2 Select the shot count that you would like to take continuously.
- 3 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 4 The camera will take 3/6/9 pictures in quick sequence.

### Using the advanced settings

From the viewfinder touch  to open all the advanced settings options.

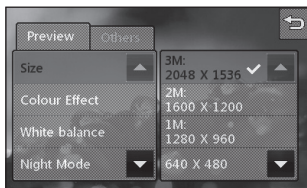

#### Preview settings

**Size** - Change the size of the photo to save on memory space or take a picture preset to the correct size for contact. See **Changing the image size** on page 56.

**Colour Effect** - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour effect** on page 56.

**White balance** - Choose from Auto, Incandescent, Sunny, Fluorescent or Cloudy.

**Night mode** - Useful to use at dark place.

**Self-timer** - The self-timer allows you to set a delay after the capture button is pressed before the camera takes the picture. Choose from **3 seconds, 5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

**Quality** - Choose between **Super fine, Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

**View mode** - Choose from Full screen or Full image. In Full screen some clipping of the image may occur.

## Other settings

**Memory** - Choose whether to save your photos to the Handset memory or to the External memory.

**Shutter sound** - Select one of the three shutter sounds.

**Grid screen** - Choose from Off, Simple cross or Trisection

**Reset settings** - Reset all the camera settings.

**TIP!** When you exit the camera all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example colour tone. Check them before you shoot your next photo.

01

02

03

04

05

06

07


08

# Camera

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu.

## Changing the image size


The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Size** from the Preview menu.

- 3 Select a pixel value from the five numerical options (**3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 400\*240(W), 320x240**) or choose the preset:


**Contacts** - This sets the camera to take a photo the perfect size to be added to a phone contact.

## Choosing a colour effect

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options: **Off, Black & White, Negative** or, **Sepia**.
- 4 When you've made your selection the colour tone menu will automatically close, ready for you to take your picture.

**TIP!** You can change a photo taken in colour to black and white or sepia after it's taken, but you cannot change a picture taken in black and white or sepia back to colour.

## Viewing your saved photos

- 1 You can access your saved photo's from within the camera mode. Simply touch  and your gallery will appear on screen.

01

02

03

04

05





06

07

08


## Video camera


### Shooting a quick video


- 1 Press the camera key on the right side of the phone.
- 2 On the Camera preview mode touch the camera icon  in the view finder to switch to video mode. The video camera's viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Press the capture button once to start recording. Or press the red dot at the bottom right of the screen.
- 5 **Rec** will appear at the top of the viewfinder and a timer at the bottom showing the length of your video.
- 6 To pause the video touch  and resume by selecting .
- 7 Touch  on screen or press the capture button a second time to stop recording.


## After you've shot your video


A still image representing your captured video will appear on screen. The name of the video runs along the bottom of the screen together with five icons down the right side .

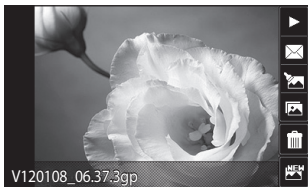



 Touch to play the video.

 Touch to send the video as an **Message or Email** or by **Bluetooth**. See page 35 for **Sending messages**, or page 116 for **Sending and receiving your files using Bluetooth**.

 Touch to edit the video.

 Touch to view a gallery of saved videos .

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video straight away. Your current video will be saved.

01

02

03

04

05


06

07

08

# Video camera


## Getting to know the viewfinder

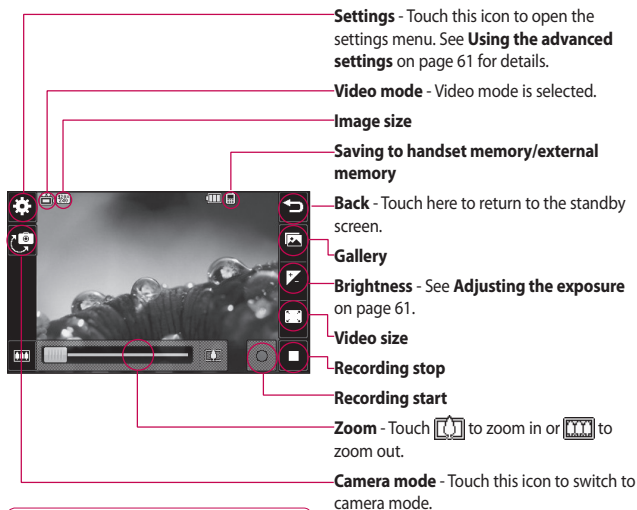

**TIP!** You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.


## Adjusting the Exposure

Exposure defines the difference between light and dark (contrast) in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, left for a lower exposure, hazier image, or right for a higher contrast, sharper image.

## Using the advanced settings

From the viewfinder touch **Settings** to open all the advanced settings options.

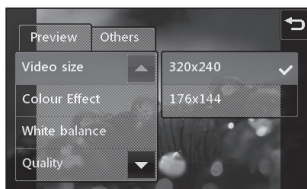

01

02

03

04

05

06

07

08

### Preview settings

**Video size** - Change the size of the video to save on memory space. See **Changing the video image size** on page 63.

**Colour Effect** - Choose a colour tone to apply to the video you're taking. See **Choosing a colour tone** on page 63.

## Video camera

**White balance** - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

**Quality** - Choose between **Super fine, Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

**Set time** - Set a duration limit for your video. Choose from **No limit**, or **MMS** to limit the size so that you can send the video as an MMS.

**View mode** - Choose from Full screen or Full image. In Full screen some clipping of the image may occur.

**TIP!** If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.

### Other settings

**Memory** - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

**Voice** - Choose Mute to record a video without sound.

**Reset settings** - Reset all the video camera settings.

## Changing the video image size


The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select a pixel value from the two options:  
 **320x240** - Large image size, therefore larger file size. Up to 24 fps are available for video play back, up to 12 fps are available for video recording.  
 **176x144** - Small image size and therefore smaller file size. Up to 15 fps are available for video play back.

- 4 Select the size option you'd like to use.

**TIP!** For video format conversion software, see the CD you received with your KP500.

## Choosing a colour tone

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the settings menu.
- 3 There are five colour tone options, **Off** (Normal), **Black & White**, **Negative**, **Sepia**.
- 4 Touch the colour tone you'd like to use.

**TIP!** You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia back to colour.

01

02

03

04

05


06

07

08




## Video camera


### Watching your saved videos

- 1 In the viewfinder touch .
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery.
- 4 Touch the video a second time to open it fully.


# Your photos and videos

## Viewing your photos and videos

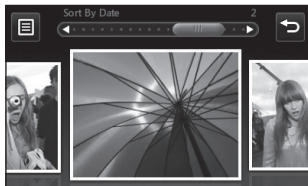

- 1 Touch  on your camera preview screen.
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo twice to open it fully.
- 4 To play the video touch . To pause playback touch .



**TIP!** Flick left or right to view other photos or videos.

**TIP!** To delete a photo or video, open it and select . Touch **Yes** to confirm.

## Using zoom when viewing a photo

To zoom in press  repeatedly. To zoom out press . Use the thumbnail in the bottom right corner to move the focus area.

## Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, slide the marker up and down the volume bar on the left side of the screen.

01

02

03

04

05



06


07

08

## Your photos and videos


### Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch **||** to pause the video on the frame you'd like to convert to an image and touch the right side of the screen to open the options menu.
- 3 From the options menu select .
- 4 The image will appear on screen, with its assigned image name.
- 5 Touch the image then  to return to the gallery.
- 6 The image will be saved in your Media Album folder and appear in the gallery. You need to exit the gallery and then re-open it for this to appear.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

### Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.

- 1 Touch the photo you would like to begin the slideshow open it.
- 2 Select .
- 3 The slideshow will begin.



There are options within slideshows:



Touch to skip to the next photo.



Touch to pause the slideshow on a particular photo.




Touch again to resume playback.



Touch to increase or decrease the speed of the slideshow.

## Setting a photo as wallpaper

- 1 Touch the photo you would like to set as wallpaper twice to open it. Turn the phone to landscape.
- 2 Touch the right side of the screen to open the options menu.
- 3 Touch .
- 4 The screen will switch to portrait mode. You can then change the size of the picture.
- 5 When you are happy with the picture touch **Set**.

01

02

03

04

05

06


07

08


## Your photos and videos


### Editing your photos


There are loads of great things you can do to your photos to change them, add to them or liven them up a little.


1 Open the photo you'd like to edit and touch  to bring up the options.


2 Touch the icons to adapt your photo:


 Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.


 Draw something on your photo freehand. Select the thickness of the line from the four options and the colour you would like use.


 Put writing on the picture. See **Adding text to a photo** on page 69.

 Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be.

 Erase line that you draw.


 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file** enter a file name.

 Undo the last **Effect** or edit you made to the photo.

 Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Resize, Morphing, Colour Accent, Add images** etc.

 See **Adding an effect to a photo** on page 70.



 Touch to return to the gallery.

## Adding text to a photo

- 1 From the editing screen, touch **T**.
- 2 Select **Signature** to add unframed text or choose one of the speech bubble shapes.
- 3 Enter your text using the keypad and touch **Save**.
- 4 Move the text by touching it and sliding it to the place you'd like it to be.

01

02

03

04

05

06

07

08

## Your photos and videos

### Adding an effect to a photo

- 1 From the editing screen, touch



- 2 Choose to apply any of the six options to the photo:

**Face beautify** - Automatically detect a face in the image and brighten it up.

**Tunnel effect** - Lomo camera effect.

**Colour negative** - Colour negative effect.

**Black and white** - Black and white colour effect.

**Sepia** - Sepia effect.

**Blur** - Apply a blurred effect.

**Sharpen** - Move the marker along the bar to sharpen the focus of the photo. Select **OK** icon to apply the changes or choose to cancel.

**Mosaic blur** - Touch to apply a blurred mosaic effect to the photo.

**Oil painting** - Oil painting effect.

**Sketch** - Apply an effect to make the picture look like a sketch.

**Emboss** - Emboss effect.

**Solarize** - Change the effect of exposure to the light

**Vivid** - An effect of clearness and brilliance.

**Moonlight** - Change the light to look like moonlight.

**Antique** - An old image effect.

**Glow** - A light beam effect.

**Cartoon** - A cartoon effect.


**Water color** - A water color effect.

- 3** To undo an effect simply touch **Undo**.

**TIP!** You can add more than one effect to a photo, except for a colour effect.

### Morphing a photo

Morphing a photo is great for changing the facial expressions of friends, or just for distorting a photo for artistic effect.

- 1** From the editing screen touch .
- 2** Choose **Morphing** and four crosses will appear on the photo.

- 3** Move the crosses around the photo so they are on the part you'd like to morph. For example, if you are morphing a face, place a cross on the outside corner of each eye and one each side of the lips.
- 4** Select a face to represent how you'd like to morph the photo.
- 5** Select **OK** to save the changes.

01

02

03

04

05

06

07

08

## Your photos and videos

### Adding a colour accent to a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour Accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Touch **OK**.
- 5 All colour will be removed from the photo, apart from the section marked for colour accenting.
- 6 Alter the intensity of the accenting by sliding the marker up or down the intensity bar.
- 7 Select **Save** to save the changes.

### Swapping the colours in a photo


- 1 From the editing screen, touch .
- 2 Choose **Colour swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Select a colour.
- 5 Press **OK**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select **Save** to save the changes.

## Trimming the length of your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Trim**.
- 3 Touch  and mark the new start and end points using .
- 4 Touch **Play cropped** to ensure you are happy with the new cut.
- 5 Touch **Save** or, alternatively, touch  to return to the gallery and discard the changes.



## Merging two videos together

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Video merge**.
- 3 The **My stuff** folder will open, select either **My Videos** or **My memory card** (if fitted). Choose the video you would like to merge and touch **Select**.
- 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch **Effect** to choose how the videos merge together: **None**, **Pan zoom**, **Oval**, **Uncover**, **Blind**, **Checker board**, **Dissolve**, **Split** or **Shape diamond**.

01

02

03

04

05

06

07

08





## Your photos and videos

- 6 Press **Save** followed by **Yes** to save the new merged video. Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more videos.


### Merging a photo with a video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
  - 2 Select  and choose **Image merge**.
  - 3 The **My stuff** folder will open select either **My Images** or **My memory card** (if fitted). Choose the photo you would like to merge into your video and touch **Select**.
  - 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch **Effect** to choose how the photo and video merge together: **None, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Split** or **Shape diamon**.
  - 6 Press **Save** followed by **Yes**. Choose to save over the original file or as a new file.
  - 7 Repeat these steps to merge more photos.

## Adding text to a video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Text overlay**.
- 3 Enter your text using the keypad and select **Done**.
- 4 Touch  and mark when you'd like the text to appear using .
- 5 Touch the area of the screen you'd like the text to appear in.



- 6 Touch  to mark when you'd like the text to disappear.
- 7 Touch **Preview** to ensure you are happy with the text overlay.
- 8 Touch **Save** followed by **Yes**. Choose to save over the original file or as a new file.
- 9 Repeat these steps to add more text.

01

02

03

04

05

06

07

08



## Your photos and videos



### Overlaying a photo

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Image overlay**.
- 3 The **My stuff** folder will open select either **My images** or **My memory card** (if fitted). Choose the photo you would like to overlay your video and touch **Select**.
- 4 Touch  and mark when you'd like the photo to appear using .
- 5 Touch the area of the screen you'd like the photo to appear in. If the photo is too big it will overlay the whole screen, not just the area selected.



- 6 Touch  to mark when you'd like the photo to disappear.
- 7 Touch **Preview** to ensure you are happy with the photo overlay.
- 8 Touch **Save** followed by **Yes**. Choose to save over the original file or as a new file.
- 9 Repeat these steps to add more photos.

### Adding a voice recording



- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Voice recording**.
- 3 The quality of the original audio will be affected by adding a voice recording. Touch **Yes** to continue.

- 4 Touch  to view your video. When you get to the part you'd like to record your voice over, press .



- 5 Press  or  to stop recording and playback.
- 6 Touch **Preview** to ensure you are happy with the voice recording.
- 7 Touch **Save** followed by **Yes** to save. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more voice recordings to the video.

## Adding a soundtrack to your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Audio dubbing**.
- 3 The **My stuff** folder will open select either **My sounds** or **My memory card** (if fitted). Choose the track you would like to add to your video and touch **Select**.
- 4 The original audio of your video will be erased. Touch **Yes** to continue.
- 5 If the audio is shorter than the video choose whether to play **Once** or to **Repeat** it.
- 6 Choose to save over the original file or as a new file.

01

02

03

04

05



06

07

08

## Your photos and videos



### Changing the speed of your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Time scaling**.
- 3 Select one of the four speed options: **x4, x2, x1/4, x1/2**.
- 4 Choose to save over the original file or as a new file.

**NOTE:** Only 3gp Video file can be edited.


## Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then . Touch  to open a list of folders storing all of your multimedia files.

### Pictures

**My images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Touch  to change the view from thumbnail image to list.

### My images option menus

The options which are available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Sort by, List View, Folder info.** and **Memory manager** options are available for default images.

01

02

03

04

05

06

07

08

## Multimedia

**Send** - Send the image to a friend.

**Move** - Move an image from the phone memory to a memory card or vice versa.

**Copy** - Copy an image from the phone memory to a memory card or vice versa.

**Delete** - Delete an image.

**Rename** - Rename an image.

**Print** - Print the selected image using a printer.

**Create new folder** - Create a new folder within the My images folder.

**Slide show** - Start a slide show.

**List/Grid view** - Grid view to List view or vice versa.

**Folder info.** - View the Name, Size, Date details of the folder and number of files and sub-folders inside the folder.

**Memory manager** - View the memory status.





**Delete all** - Delete all of your images.

### Sending a photo

- 1 Touch  then .
- 2 Touch  then choose **My images**.
- 3 Touch  **Send** and choose from **Message, Email** or **Bluetooth**.
- 4 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

## Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Touch  then .
- 2 Touch  then **My images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:





**Wallpaper** - Set a wallpaper for the standby screen.

**Contacts image** - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.

**Start-up image** - Set an image to appear when you switch the phone on.

**Power off image** - Set an image to appear when you switch the phone off.

## Printing an image

- 1 Touch  then .
- 2 Touch  then **My images**.
- 3 Select an image and touch .
- 4 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

**TIP!** You can to print via bluetooth or by connecting to a PictBridge compatible printer.

01

02

03

04

05

06





07

08

## Multimedia





### Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then .
- 2 Touch  then **My images**.
- 3 Touch  and select **Move** or **Copy**.
- 4 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

### Creating a slide show





If you want to look at all of the images on your phone, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then .
- 2 Touch  then **My images**.
- 3 Choose a start image for your slide show.
- 4 Touch  then **Slide show**.

### Sounds

The **My sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.




## Using a sound

- 1 Touch  then .
- 2 Touch  then **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Select a sound and it will begin to play.
- 5 Touch  and select **Use as**.
- 6 Choose from **Ringtone**, **Message tone**, **Start-up** or **Shut down**.


## Videos

The **My videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch  then .
- 2 Touch  then **My videos**.
- 3 Select a video to play.

## Using options while video is paused

Touch  while in pause mode and choose from:

- Capture** - Capture the frozen frame as a picture.
- Send** - Send the video in a message or via Bluetooth.
- Delete** - Delete the video.
- Edit** - Edit the video.
- File info.** - View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.

01

02

03

04

05

06



07

08

## Multimedia

### Editing a video clip

While your video is being played and is in pause mode you can choose from a number of options to edit the video clip.

- 1 Select a video and touch **Play**.
- 2 Touch  then .
- 3 Touch **Video editor** and choose from:

**Trim** - Cut the video down to only the part you want.

**Video merge** - Merge the video with another video clip.

**Image merge** - Merge the video with an image from your Images folder.

**Text overlay** - Add text to the video.

**Image overlay** - Add an image to the video.

**Audio dubbing** - Choose to add sound from the **Defaults folder** or from your own **Voice recordings**.

### Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message, Email** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

## Using the video options menu

From the **My videos** folder, you can choose from the following options:

**Send** - Send a video to a friend.

**Move** - Move a video clip from the phone memory to a memory card or vice versa.

**Copy** - Copy a video clip from the phone memory to a memory card or vice versa.

**Delete** - Delete a video.

**Rename** - Rename a video.

**Create new folder** - Create a new folder within the **My videos** folder.

**Sort by** - Sort videos into order by Date, Type or Name.

**List/Grid view** - Grid view to List view or vice versa.

**Folder info** - View the Name, Size, Date details of the folder and number of files and sub-folders inside the folder.

**Memory manager** - View the memory status.

**Delete all** - Delete all videos.

## Games and Applications

You can install new games and applications to your phone to keep you amused when you have time to spare.

01

02

03

04

05




06

07

08




## Multimedia

### Installing a game/application via local install


- 1 Touch  then .
- 2 Touch  and **Others** or **My memory card** if external memory is inserted.
- 3 Select the file(\*.jad or \*.jar) to install and press **Install** command. An application will be installed.

**NOTE:** The jad should contain its own jar.

### Playing a game

- 1 Touch  then .
- 2 Touch  **My games & apps**.
- 3 Open the Games folder and choose and touch a game to launch.

### Using the games options menu

From the **Games** folder, the following options are available when you touch :

**Delete** – Delete a file.

**Create new folder** – Create a folder within **My games & Apps**.

**Rename** – Rename a file.

**Move** – Move a file from the phone memory to a memory card or vice versa.

**File info.** – View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.

**Sort by** - Sort the games and applications by **Date, Size or Name**.

**Memory manager** - View the memory status.

**Delete all** - Delete all files.

## Documents

From the Documents menu, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files.




## Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 102 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others folder**.

## Viewing a file

- 1 Touch  then .
- 2 Touch  then **Documents**.
- 3 Select a document and touch **View**.

01

02

03

04

05

06

07





08

# Multimedia







## Others


The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To move a file from **Others** to **Documents**:

- 1 Touch  then .
- 2 Touch  then **Others**.
- 3 Select a file and touch .
- 4 Touch **Move**, choose the destination folder from the list by touching the arrow icon. The screen will display **Moved** when the transfer is complete.




## Creating a movie

- 1 Touch  then .
- 2 Touch  (Muvee studio).
- 3 Touch  to add an image. Checkbox images you want to include then select **Insert**.
- 4 Touch style tab to choose a Muvee style.
- 5 Touch  to change the sound.
- 6 Touch  to see what you've created.
- 7 Touch  then **Order** to make an order.

- 8 Touch  then **Save Location** to choose where to save the movie.



## Music

Your LG KP500 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then  then . From here you can access a number of folders:

**Recently played** - View all of the songs you have played recently.

**All tracks** - Contains all of the songs you have on your phone.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains any playlists you have created.

**Shuffle tracks** - Play your tracks in a random order.

01

02

03

04

05

06

07

08

## Multimedia







### Transferring music onto your phone


The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite, see page 102 for details. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

### Playing a song

- 1 Touch  then .
- 2 Touch , then **All tracks**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

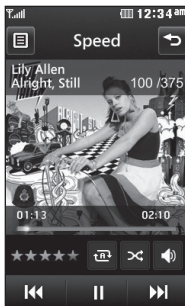

## Using options while playing music

Touch  and choose from:

**Minimise** - Make the music player screen disappear so that you can continue using your phone as normal.

**File info.** - View information including the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

**Send** - Send the song as a message or via Bluetooth.

**Use as** - Use the song as Ringtone, Message tone, Start-up or Shut down.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch  then .
- 2 Touch , then **Playlists**.
- 3 Touch **Add new playlist**, enter the playlist name and touch **Save**.
- 4 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 5 Touch **Done**.

01

02

03

04

05

06





07

08

# Multimedia

## Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. When you want to do this, you can edit the playlist.

- 1 Touch  then .
- 2 Touch , then **Playlists**.
- 3 Select the playlist.
- 4 Touch  and select:



**Add new songs** – To add more songs to the playlist. Mark the ones you want and touch **Done**.

**Remove** – Remove a song from the playlist. Touch **Yes** to confirm.

**Memory status** - View the memory status.

**Remove all** - Remove all tracks from the playlist.

## Deleting a playlist

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Touch  then **Delete** or **Delete all** to delete all of the playlists.

## Using the radio





Your LG KP500 has an FM radio feature so you can tune into your favourite stations to listen to on the move.





**NOTE:** You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

## Searching for stations





You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone. You must first attach the headset to the phone as this acts as the antenna.

### To auto tune:




- 1 Touch  then .
- 2 Touch  then .
- 3 Touch Auto scan. Then the stations will be automatically found and allocated to a channel in your phone.

**NOTE:** You can also manually tune into a station by using  and  displayed next to the radio frequency. If you press and hold  and , the stations will be automatically found.


## Resetting channels

- 1 Touch  then .
- 2 Touch  then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

## Listening to the radio

- 1 Touch  then .
- 2 Touch  then touch the channel number of the station you would like to listen to.

**TIP!** To improve the radio reception, extend the headset cord, which functions as the radio antenna.

You can minimize the screen and listen the BGM Radio by tapping .

01

02

03

04

05

06

07


08

# Organiser




## Adding an event to your calendar

- 1 From the standby screen select , then touch  and choose . Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment, Anniversary** or **Birthday**.  
Check the date and enter the time you would like your event to begin.
- 5 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.



- 6 If you would like to add a subject or a note to your event, touch **Note** and type in your note, followed by **Save**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

**TIP!** You can set a holiday in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**.

## Changing your default calendar view

- 1 From the standby screen select , then touch  and choose . Select **Settings**.
- 2 Touch **Calendar** and choose either **Monthly view** or **Week view**.
- 3 Set **week starts on**.
- 4 Touch **Save** to confirm your choice.

## Adding an item to your to do list

- 1 From the standby screen select , then touch  and choose .
- 2 Select **To do** and touch **Add to do**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your to do list item by selecting **Save**.

**TIP!** You can edit a item by selecting it, and touch the tab and input. Confirm your amends by selecting **Save**.

01

02

03

04

05





06

07

08




# Organiser

## Sharing a to do item

- 1 From the standby screen select , then  and choose . Select **To do**.
- 2 Select the to do item you would like to share, then touch .
- 3 Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg.**, **Email** or **Bluetooth**.

**TIP!** You can back up and synchronise your calendar with your computer. See PC Sync on page 102.

## Adding a memo




- 1 From the standby screen select , then touch  and choose . Select **Memo**.
- 2 Touch **Add memo**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.

**TIP!** You can edit an existing memo. Select the one you want to edit and type your changes.





## Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

This is great for keeping tabs on deadlines.

- 1 From the standby screen select , then touch  and choose .
- 2 Select **Date finder**.
- 3 In the **From** tab set your required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

## Setting your alarm

- 1 From the standby screen select , then touch  and choose .
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound and touch **Save**.
- 4 Choose whether you would like your alarm to repeat **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun**, **Except holiday** or **Choose weekday**.  
The icons indicate the weekday you select.
- 5 Select **Alarm type** to select a type for your alarm.
- 6 Touch **Set alarm bell** then choose **Default sounds** or **Voice recordings** folder to find sounds. To listen to sounds touch the sound, followed by .

01

02

03

04

05

06

07

08





## Organiser

- 7 Add a memo for the alarm. Touch **Save** when you have finished typing the memo.
- 8 Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

**NOTE:** You can set up to 5 alarms.





**TIP!** Touch on/off icon on the right hand side of the alarm to set.

## Adding a memo with drawing panel

- 1 From the standby screen select , then touch  and choose .
- 2 Touch **Add drawing**.
- 3 Draw your memo on the touch screen LCD followed by .
- 4 Your memo will appear on screen next time you open the **Drawing Panel** application.

## Voice recorder







Use your voice recorder to record voice memos or other sounds.


- 1 Touch  then .
- 2 Touch  then  and **Settings** choose from:

**Duration** – Set the recording duration. Choose from **No limit**, **MMS msg. size** or **1 minute**.


**Quality** – Select the sound quality. Choose from Super Fine, Fine or Normal.


## Recording a sound or voice

- 1 Touch  then .
- 2 Touch .
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

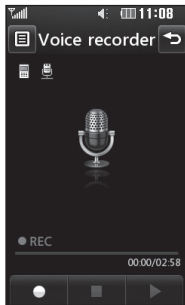

## Sending the voice recording

- 1 Once you have finished recording, touch .
- 2 Touch **Send via** and choose from **Message, Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

**NOTE:** After you have finished recording, touch  and choose **Send via, File, Delete, Use as** (to use the recording as your ringtone) **Settings** or **Go to my sounds**.

01

02

03

04

05





06

07




08

# Organiser




## Using your calculator

- 1 From the standby screen select , then touch  and choose .
- 2 Select **Calculator**.
- 3 Touch the numeric keys to input numbers.
- 4 For simple calculations, touch the function you require (+, -, \*, /), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc..





## Converting a unit

- 1 From the standby screen select , then touch  and choose .
- 2 Select **Converter**.
- 3 Choose whether you would like to convert **Currency**, **Surface**, **Weight**, **Length**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

## Using the stopwatch

- 1 From the standby screen select , then touch  and choose .
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

## Adding a city to your world time

- 1 From the standby screen select , then touch  and choose .
- 2 Select **World time**.
- 3 Touch the , followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen.

01

02

03

04

05

06




07

08

## PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match, and also to backup your files to put your mind at ease.

### Installing LG PC Suite on your computer

- 1 From the standby screen press  and select  and choose .
- 2 Select **USB connection mode** and choose.
  - PC internet**
  - Mass storage**
  - PC suite**
  - Music sync**
  - Always ask**
- 3 Insert the supplied CD into your PC. Click on the **LG PC Suite Installer** which will appear on your screen.

- 4 Select the language you would like the installer to run in and click **OK**.
- 5 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 6 Once installation is complete, the LG PC Suite icon will appear on your desktop.

### Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.
- 4 Click on **Next**, then **Next** again, then **Finish**.  
Your phone and PC are now connected.

## Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up or restored.

## Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the **Contents** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

01

02

03

04

05

06

07

08

## PC Sync

### Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.




**NOTE:** To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Select **Edit** at the top of the screen, then **Select all**. Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

### Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

## Using your phone as a mass storage device

Your phone can be used as a mass storage device.




- 1 Disconnect your phone from your PC.
- 2 From the standby screen select , then touch .
- 3 Select , then **USB connection mode**.
- 4 Touch **Mass storage**.
- 5 Connect your phone to your PC. Your phone will read: **Connected**.
- 6 All of your phone files will automatically be stored onto your PC hard drive.

**NOTE:** Your phone must be unplugged from your PC to initiate Mass Storage.

## Using your phone as Music Sync device

Your Phone can be used as Music Sync device to Sync Music Files only.

Music Sync can be done using Windows Media Player 10 / 11 and supports both Handset Memory and External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen select , then touch .
- 3 Select  and then **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Music Sync ...** followed by **Disconnect Cable to Stop Music Sync**.

01

02

03

04

05

06

07




08

# The web

## Browser

**Browser** gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.




## Accessing the web

- 1 From the standby screen select , then touch  and choose .
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Adding and accessing your bookmarks


For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen select , then touch  and choose .
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark and then touch **Connect**. You will be connected to your bookmark.

## Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites in an automated manner that is easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

## Saving a page

- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

**TIP!** This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

01

02

03

04

05




06

07




08

## The web




### Accessing a saved page

- 1 From the standby screen select , then touch  and choose .
- 2 Select **Saved pages**.
- 3 Select the required page and it will open.

### Viewing your browser history

- 1 From the standby screen select , then touch  and choose .  
Select **History**.
- 2 A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select the required page.

### Changing the web browser settings

- 1 From the standby screen select , then touch  and choose .  
Select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or to reset all settings, select **Reset Settings**.

## Using your phone as a modem

Your KP500 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

### Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KP500 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Internet Kit** on your PC. Then click **New** button and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.

5 Write the Profile that can connect to the Internet and save the values.

6 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your KP500.

**NOTE:** For more information on synchronising using the LG PC Suite see page 103.

### Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KP500.
- 2 Pair your PC and KP500 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **New** button.

01

02

03

04

05

06

07

08

## The web

- 5 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 6 Write the Profile that can connect to the Internet and save the values.
- 7 The profile that you create will appear on your PC screen. Select it and click **Connect**.  
Your PC will connect through your KP500.

**NOTE:** For more information on Bluetooth see page 116.

# Settings



Within this folder you can adapt your settings to make your KP500 personal to you.

**NOTE:** For information on call settings see page 28.




## Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the status summary bar on the top and touch the profile tab.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then choose .
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options available in the list, including your **Voice Ring tone** and **Volume, Message alerts** settings and more.

## Changing your screen settings

- 1 Touch  then choose .
- 2 Touch  and then choose from:

**Wallpaper** - Choose the theme for your standby screen.

**Top Menu** - Choose the style of the top menu.

**Dialing** - Adjust the number size and colour.

**Font** - Adjust the font style and size.

**Backlight** - Choose how long the backlight remains on for.

**NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

01

02

03

04

05

06

07

08

# Settings

**Brightness** - Adjust the screen brightness.

**Greeting message** - Choose on or off and fill in the greeting message.




**Start-up/Shut down** - Choose the theme for your start-up/shut down screen.

- 2 Touch **Save** to save your settings.

## Changing your phone settings

Enjoy the freedom of adapting how your KP500 works to your own style.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then choose .
- 2 Touch  then choose from the list below.

**Date and time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.

**Power save** - Choose to switch the factory set power saving settings **Off**, **Night only** and **Always on**.

**Languages** - Change the language of your KP500's display.

**Auto key lock** - Lock the keypad automatically in standby screen.

**Security** - Adjust your security settings, including PIN codes and handset lock.




**Memory manager** - See **Using memory manager** on page 115 for more information.

**Reset settings** - Reset all the settings to their factory definitions.

**Handset information** - View the technical information for your KP500.

## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Touch  then .  
Select .

## Network settings

**Select Network** - If you set to **Automatic**, KP500 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you set to **Manual** all the currently available networks are shown and you can select one of them for registration. If the registration of the network has failed, the network lists are listed again and you can select any other one for registration.

**NOTE:** When your handset loses the network in manual mode, the popup message to select the available network will be shown on the Idle screen.

01

02

03

04

05

06

07

08

## Settings

**Preferred lists** - If the network is searching automatically, you can add a preferred network to be connected to. The following options are available.

**Internet profiles** - This menu shows the Internet profiles. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Packet data conn.** - Choose when your device should be connected to network for packet data.




**USB connection mode** - Choose Data service and synchronise your KP500 using the LG PC Suite software to copy files from your phone. See page 102 for more information on synchronisation. If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is only available for music content.

**Streaming settings** - Your network operator has already saved this information. You may edit it if you'd like to make changes.

## Using memory manager

Your KP500 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by . Select  then **Memory Manager**.

**Handset common memory** - View the memory available on your KP500 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications and others.

**Handset reserved memory** - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

**SIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage settings** - Choose the location you prefer items to be saved to.

**TIP!** See page 14 for information on **Inserting a memory card**.

01

02

03

04

05

06

07

08

## Settings

### Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

#### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.  
Choose **Bluetooth**.
- 3 If you have already paired the Bluetooth device, your KP500 will not automatically search for other Bluetooth devices. If not, your KP500 will search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to and touch **Select**.





- 5 Your file will be sent.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

#### To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See Changing your Bluetooth settings on the right for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your Media Album.

## Changing your blueooth settings:

- 1 Touch  and choose .
- 2 Choose  then touch  and choose **Settings**.

Make your changes to:

**My device visibility** - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

**My device name** - Enter a name for your KP500.

**Supported services** - Choose how to use Bluetooth in association with different services. See **Using your phone as a modem** on page 109 or **Using a Bluetooth headset** on page 118.

**Remote SIM Mode** - Turn on or off.

**My address** - Show your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your KP500 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your KP500 will search for devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

01

02

03

04

05

06

07

08

# Settings

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your KP500 will automatically switch to Headset profile.

**TIP!** See page 29 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

## Accessories

These accessories were supplied with KP500.

### Charger



### Data cable and CD

Connect and synchronise your KP500 and PC.



### Battery



### User Guide

Learn more about your KP500.



### Stereo headset



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

### WARNING:

When the protection film is attached on touch window, touch sensitivity might be decreased.

01

02

03

04

05

06

07

08

## Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, GSM 850 and, PCS 1900 network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

### “LG Service Center”

#### by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd., Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Fri and Sat 2nd, 4th 08:00 - 17:00

Call center : 0-2878-5757

## Technical data

### General

Product name : KP500

System : GSM 900 / DCS 1800 / GSM 850 / PCS 1900

### Ambient Temperatures

Max : +55°C (discharging),  
+45°C (charging)

Min : -10°C

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900 Quad Band Terminal Equipment

Model Name

KP500, KP500Q, KP570, KP570Q

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1  
EN 60950-1 : 2001  
EN 50360/EN 50361 : 2001  
EN 301 511 V9.0.2  
EN 300 328 V 1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

1, September, 2008

  
Signature of representative

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information  
This mobile phone model KP500 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.990 W/kg (10g) and when worn on the body is 1.26 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

## Guidelines for safe and efficient use

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

### Efficient phone operation

#### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.

- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## **Glass Parts**

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

# Guidelines for safe and efficient use

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

## Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

Message	Possible causes	Possible Corrective measures
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly Battery empty Battery contacts dirty	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean contacts.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective measures</b>
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No mains voltage	Plug in to a different socket or check voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.



Digital Mobile

สำหรับส่งคืนบริษัท

# Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : ..... บัตรรับประกันเลขที่ : .....  
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): ..... เลขเครื่อง : .....  
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : .....  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : .....  
(อังกฤษ) : .....

วัน เดือน ปี เกิด : ..... เพศ : .....  
(Date of Birth) (Gender)

ที่อยู่ : .....  
(Address)

อาชีพ : ..... โทรศัพท์ : ..... E-mail : .....  
(Occupation) (Telephone No.)

ชื่อจากวัน : .....  
(Dealer's Name)



<http://itn.lge.com>

ศูนย์บริการข้อมูล

Customer Information Center: 0-2878-5757

1-800- LG LG LG  
5 4 5 4 5 4 โทรฟรี

**บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด**  
75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26 คลองตัน  
คลองเตย กรุงเทพฯ 10110  
ศูนย์บริการข้อมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

**LG Electronic (Thailand) CO., Ltd**  
75/81 Richmond Bldg. 22<sup>nd</sup> FL, Sukumvit 26,  
Klongton, Klongtoey Bangkok 10110  
Customer Information Center  
Tel. 0-2878-5757 Fax. 0-2466-0250



ใบอนุญาตเลขที่ ปน.(ต)/2117 ปณจ.ไพระโชนง  
ถ้าฝากส่งในประเทศไม่ต้องพินึกตราไปรษณียากร



**บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด**

75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26

แขวงคลองตัน เขตคลองเตย

กรุงเทพฯ 10110

## เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น  
(This warranty is valid only in Thailand)

- 1) บัตรรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใช้ข้อความสมบูรณ์เท่านั้น
- 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบ หรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่อง ผลิตวิธี บริษัทฯ อันเสื่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย
- 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.
- 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts.

## เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับแต่งตั้ง
- 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย
- 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้ ฟ้าผ่า, ไข่ระเบิด ไฟฟ้าลัดประเภทและอุบัติเหตุอื่น ๆ ที่มนุษย์ไม่สามารถควบคุมได้
- 1) If repair are not undertaken by LG Service Center or Authorize Service Center.
- 2) Damage to accessory due to misuse.
- 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control.

ศูนย์บริการตากสิน (สำนักงานใหญ่): เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงมกคโกล เขตธนบุรี กรุงเทพฯ 10600 โทร 0-2878-6757 แฟกซ์ 0-2466-0250  
ศูนย์บริการสุขุมวิท : เลขที่ 75/2 อาคารริชมอนด์ สุขุมวิท 26 แขวงคลองตัน เขตคลองเตย กรุงเทพฯ 10110 โทร 0-2204-8889 แฟกซ์ 0-2260-8729  
ศูนย์บริการเชียงใหม่: เลขที่ 250/5-6 ถ.เชียงใหม่ลำปาง ต.ป่าตัน อ.เมือง จ.เชียงใหม่ 50300 โทร 0-5321-5823 แฟกซ์ 0-5341-2231  
ศูนย์บริการพิษณุโลก: เลขที่ 210/9-11 ถ.มิตรภาพ ต.ในเมือง อ.เมือง จ.พิษณุโลก 65000 โทร 0-5528-0508 แฟกซ์ 0-5528-0509  
ศูนย์บริการพิจัยนา: เลขที่ 42/95-96 ม.9 ถ.สุขุมวิท ต.หนองเรือ อ.บางพลวง จ.ชัยภูมิ 20150 โทร 0-3848-8557 แฟกซ์ 0-3848-8578  
ศูนย์บริการนครราชสีมา: เลขที่ 551/29-31 ถ.มิตรภาพ ต.ในเมือง อ.เมือง จ.นครราชสีมา 30000 โทร 0-4424-7304 แฟกซ์ 0-4424-7305  
ศูนย์บริการหาดใหญ่: เลขที่ 291,291/1 ถ.นิตยภัต สงคราม 1 ต.หาดใหญ่ จ.สงขลา 90110 โทร 0-7423-1391 แฟกซ์ 0-7422-5476  
ศูนย์บริการอุบลราชธานี: เลขที่ 74/252 ถ.พูนผล ต.ตลาดเหนือ อ.เมือง จ.อุบลราชธานี 83000 โทร 0-7624-6535 แฟกซ์ 0-7624-6536  
ศูนย์บริการจตุรธาณี: เลขที่ 119/1-2 ม.14 ถ.รัตนโกสินทร์ ต.หมากแข้ง อ.เมือง จ.อุดรธานี 41000 โทร 0-4220-4757 แฟกซ์ 0-4232-2877



Digital Mobile

สำหรับส่งคืนบริษัท

## Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : ..... บัตรรับประกันเลขที่ : .....  
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน  
นับจากวันที่ซื้อ  
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): ..... เลขเครื่อง : .....  
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : .....  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : .....  
(อังกฤษ) : .....

วัน เดือน ปี เกิด : ..... เพศ : .....  
(Date of Birth) (Gender)

ที่อยู่ : .....  
(Address)

อาชีพ : ..... โทรศัพท์ : ..... E-mail : .....  
(Occupation) (Telephone No.)

ชื่อจากร้าน : .....  
(Dealer's Name)

ที่อยู่ร้าน : .....  
(Dealer's Address)

ประทับตราร้านค้า













