



繁體中文  
簡體中文  
ENGLISH

# GM310 使用手冊

GM310 使用手冊

LG Electronics Inc.

MMBB0338401 (1.0)

CE 0168  
[www.lgmobile.com](http://www.lgmobile.com)

Bluetooth QD ID B015098

# GM310 使用手冊 - 繁體中文

恭喜您購買了 LG 先進輕巧的 GM310 手機，本手機專為利用最新的數碼流動通訊科技而設計。

此手冊內的部份內容可能因應手機的軟件或你的服務供應商而跟你的手機有所不同。



# 目錄

安全及有效使用的指引.....6	通訊錄.....23
了解您的手機.....11	搜尋通訊錄.....23
安裝智能咭和電池.....13	新增通訊錄.....23
記憶咭.....15	通訊錄選項.....23
功能總覽.....16	建立群組.....24
桌面.....17	使用服務撥號號碼.....24
觸控板提示.....17	檢視本手機號碼.....24
狀態列.....18	建立名片.....25
使用多項工作功能.....18	變更通訊錄設定.....25
通話功能.....19	訊息.....26
撥打電話.....19	訊息.....26
透過通訊錄撥打電話.....19	發送訊息.....26
接聽來電和拒接來電.....19	輸入文字.....26
快速撥號.....19	英文字典模式(T9 模式).....27
檢視通話記錄.....20	ABC 模式.....27
使用來電轉接.....20	123 模式.....27
使用通話限制.....20	設定電子郵件.....27
變更通話設定.....21	透過新帳戶發送電子郵件.....27
通用設定.....21	擷取電子郵件.....28
	訊息資料夾.....28
	管理訊息.....28
	變更文字訊息設定.....29
	變更多媒體訊息設定.....30
	變更電子郵件設定.....30
	變更其他設定.....31

<b>相機</b> .....	<b>32</b>	<b>多媒體</b> .....	<b>43</b>
快速拍照 .....	32	使用 FM 收音機.....	43
拍攝照片後.....	32	搜尋電台 .....	43
使用快速設定 .....	32	重設所有頻道 .....	43
使用進階設定 .....	32	收聽電台 .....	43
調節亮度 .....	33	錄製廣播 .....	44
變更圖像大小 .....	34	使用語音備忘錄 .....	44
檢視已儲存照片 .....	34	錄製語音備忘錄 .....	44
<b>視像攝錄機</b> .....	<b>35</b>	發送錄音 .....	44
拍攝快速影片 .....	35	<b>我的檔案</b> .....	<b>45</b>
錄製影片後.....	35	圖像 .....	45
使用快速設定 .....	35	發送照片 .....	45
使用進階設定 .....	35	使用圖像 .....	45
觀看已儲存影片 .....	36	管理圖像 .....	45
<b>MP3 播放器</b> .....	<b>37</b>	刪除圖像 .....	46
MP3 播放器.....	37	移動或複製圖像 .....	46
將音樂傳送至手機 .....	39	標記或取消標記圖像 .....	46
播放歌曲 .....	39	檢查記憶體狀態 .....	46
播放音樂時使用選項 .....	40	聲音 .....	47
檢視播放列表 .....	40	使用聲音 .....	47
建立播放列表 .....	41	影片 .....	47
藉助 Music ID™ 搜尋歌曲資訊 .....	41	觀看影片 .....	47
		發送錄像片段 .....	47

# 目錄

遊戲及應用程式.....	48	<b>瀏覽器.....</b>	<b>55</b>
玩遊戲.....	48	存取網絡.....	55
使用遊戲選項功能表.....	48	Yahoo.....	55
Flash 內容.....	48	新增並存取書籤.....	55
其他.....	48	儲存網頁.....	55
我的記憶咭.....	48	存取已儲存的網頁.....	56
安裝 Java 遊戲及應用程式.....	48	檢視瀏覽器記錄.....	56
<b>遊戲及應用程式.....</b>	<b>50</b>	使用 RSS 讀取裝置.....	56
遊戲及應用程式.....	50	變更網頁瀏覽器設定.....	56
玩遊戲.....	50	<b>連接.....</b>	<b>57</b>
檢視應用程式.....	50	變更連接設定.....	57
變更網絡設定檔.....	50	變更您的藍芽設定.....	57
<b>記事簿與工具.....</b>	<b>51</b>	同其他藍芽裝置配對.....	57
新增事件至日曆.....	51	使用藍芽耳機.....	58
新增項目至待辦事項.....	51	使用藍芽發送和接收檔案.....	58
新增備忘錄.....	51	將手機用作數據機.....	59
保密備忘錄.....	52	將手機用作大容量儲存裝置.....	59
日期搜尋器.....	52	將手機與電腦同步.....	60
設定.....	52	在電腦上安裝 LG PC Suit... ..	60
快速選單.....	52	連接手機和電腦.....	60
設定鬧鐘.....	52	備份和還原手機資訊.....	60
使用計算機.....	53	檢視電腦上的手機檔案.....	61
使用秒錶.....	53	同步處理通訊錄.....	61
轉換單位.....	53		
新增城市至世界時間.....	54		

<b>連接</b> .....	<b>62</b>
同步訊息 .....	62
開始使用之前將音樂新增至 手機.....	62
<b>設定</b> .....	<b>63</b>
變更您的情景模式.....	63
使用飛航模式 .....	63
變更手機設定 .....	63
變更您的顯示設定.....	63
變更您的日期和時間 .....	64
變更安全性設定 .....	64
檢視記憶體狀態 .....	65
變更其他設定 .....	65
串流設定 .....	65
重設手機 .....	66
手機軟件更新 .....	66
<b>配件</b> .....	<b>67</b>
<b>網絡服務</b> .....	<b>68</b>
<b>技術資料</b> .....	<b>68</b>
<b>故障排解</b> .....	<b>70</b>
<b>GracenoGraceno® 使用者授權 合約</b> .....	<b>72</b>

# 安全及有效使用的指引

請讀取以下簡易的使用規則。  
違反這些準則可能會發生危險  
或觸犯法律。

## 射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。本手機型號 GM310 已為遵守無線電波暴露的應用安全要求而設計。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。

- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.479 W/kg (10g)，攜帶於身上時則為 1.52 W/kg (10g)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

## 產品護理及維修

### 警告！

**僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他種類可能使手機的認可或保養失效，並可能引致危險。**

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 請遠離電視、收音機或電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。

- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用咭或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。

## 有效手機操作

### 電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

# 安全及有效使用的指引

## 道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提耳機，請使用免提耳機。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子設備，例如立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

## 避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

## 玻璃部件

手機的部分部件採用玻璃製成。若手機墜落至堅固表面或受到硬物碰撞，玻璃會破碎。若玻璃破碎，則切勿觸碰或企圖移除玻璃。應停止使用手機，直到經由授權服務供應商更換玻璃才能再次使用。

## 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。

- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

## 在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

## 緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

## 電池資料及保護

- 充電前，您無需完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。

- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。

## 安全及有效使用的指引

- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

# 了解您的手機

## 主屏幕

## 左軟鍵/右軟鍵

執行顯示在屏幕底部的功能。

## 音樂控制鍵

- 播放音樂時：
  - ◀ 跳至上一首歌曲。
  - ▶ 跳至下一首歌曲。

**注意：**音樂控制鍵僅在音樂播放機功能表中亮燈，並代替導覽鍵中的左導覽鍵和右導覽鍵。

## 通話鍵


撥打電話號碼及接聽來電。

## 清除鍵

每按一下就刪除一個字元。



## 確認鍵

- 屏幕處於備用狀態時：直接轉到主功能表。  
( 圖示)
- 功能表中：選擇功能表選項並確認操作。
- 播放音樂時：播放並暫停歌曲。


## 導覽鍵

- 在備用模式中：
  - ▲ 快選功能表
  - ▼ 通訊錄列表
  - ▶ 訊息
  - ◀ 情況模式
- 功能表中：在功能表之間導覽。

## 關閉/電源鍵

結束或拒接通話。  
開啟/關閉手機。  
使用此功能表時將返回至桌面。


# 了解您的手機

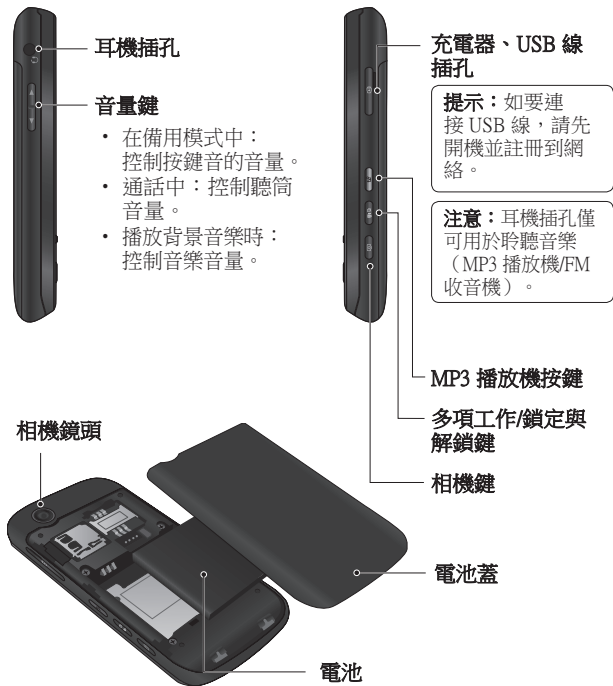

# 安裝智能咭和電池

## 1 取下電池蓋

推動手機電池蓋，並提起電池蓋並取下。

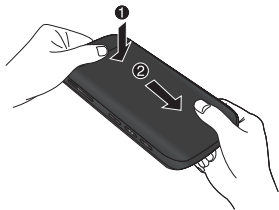

## 2 取下電池

抬起電池的底邊緣，從電池儲藏格中小心翼翼地取下電池。




**警告：**手機開機時，不要取下電池，因為這樣會損壞手機。

## 3 安裝智能咭

將智能咭滑入智能咭插槽。請確保智能咭上的金屬接觸區面向下方。要取出智能咭，請向反方向抽出。

**警告：**當手機處於使用或開啟狀態時，請勿更換或取出智能咭，否則可能會遺失當中的資料或損壞智能咭。

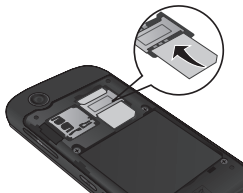

# 安裝智能咭和電池

## 4 安裝電池

先將電池頂部頂入電池格上方邊緣。請確保電池觸點對準手機觸點。將電池的底部壓入定位。



## 5 裝回電池蓋

向手機頂部滑入電池蓋，直到卡緊為止。

## 6 為手機充電

打開 GM310 側面的充電器插座蓋。插入充電器並插入電源插座。為您的 GM310 手機充電，直至屏幕上顯示「電池電量已滿」訊息。




# 記憶咭

## 安裝記憶咭

您可使用記憶咭擴展手機的可用記憶體空間。

**提示：**記憶咭是選購配件。

取下電池蓋。將記憶咭滑入插槽，直到卡緊為止。請確保金屬接觸區面向下。

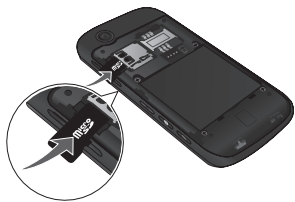



## 取出記憶咭

取下電池蓋，將記憶咭輕輕推進手機並快速釋放，從而小心將其取出。

## 格式化記憶咭

您的記憶咭可能已格式化了。如果記憶咭尚未格式化，您將需要在**使用之前**對其進行格式化。

- 1 從桌面上，按**功能表**  並選擇**設定**。
- 2 選擇**記憶體管理**並選擇**外置記憶體**。
- 3 按**格式化**並輸入密碼，預設密碼為 0000。您的記憶咭將被格式化並可隨時使用。
- 4 若要檢視 GM310 上新格式化的資料夾，請按**功能表**  並選擇**我的檔案**。選擇**我的記憶咭**。

 **警告：**格式化記憶咭時，所有內容均被清除。如果不想丟失記憶咭上的資料，請先進行備份。

# 功能總覽

## 遊戲及應用程式

1. 我的遊戲及應用程式
2. 設定

## 通話

1. 通話記錄
2. 通話時間
3. 數據用量
4. 通話費用
5. 來電轉駁
6. 通話限制
7. 固定撥號號碼
8. 來電等候
9. 通用設定

## 記事簿

1. 日曆
2. 待辦事項
3. 備忘錄
4. 保密備忘錄
5. 日期搜尋器
6. 設定

## 通訊錄

1. 新增
2. 搜尋
3. 快速撥號
4. 群組
5. 服務撥號號碼
6. 本手機號碼
7. 我的名片
8. 設定

## 訊息

1. 建立新訊息
2. 收件匣
3. 郵箱
4. 草稿
5. 寄件匣
6. 已發送項目
7. 我的資料夾
8. 常用範本
9. 情感圖示
0. 設定

## 多媒體

1. 相機
2. 視像攝錄機
3. FM 收音機
4. 語音備忘錄

## Yahoo

1. Yahoo! Go

## MP3 播放機

1. 全部曲目
2. MusicTea™
3. Mix&Match™
4. 我的播放列表
5. 演出者
6. 專輯
7. 類型
8. 隨機播放曲目
9. Music ID
0. 簡易檔案排序

## 工具

1. 快選功能表
2. 鬧鐘
3. 計算機
4. 秒錶
5. 單位轉換器
6. 世界時間
7. 智能咭服務  
(視乎不同網絡商)

## 瀏覽器

1. 主頁
2. 輸入網址
3. 書簽
4. RSS 讀取裝置
5. 儲存的網頁
6. 記錄
7. 設定

## 我的檔案

1. 我的圖像
2. 我的聲音
3. 我的影片
4. 遊戲及應用程式
5. Flash 內容
6. 其他
7. 我的記憶咭

## 設定

1. 情景模式
2. 手機
3. 屏幕
4. 連接
5. 日期及時間
6. 網絡
7. 互聯網設定
8. 存取點
9. 分組數據連線
0. 安全
- \*. 記憶體管理
- #. 串流播放設定
13. 重設設定

# 桌面

GM310 上配有一個觸控板。使用觸控鍵，您可決定主屏幕上顯示的內容。

- 進入選項功能表後，觸控板將提供四向箭頭鍵盤。點按箭頭，可在功能表中一次移動一個項目。

## 觸控板提示

- 點按觸控板時無需重按，只需要輕輕按中即可。
- 使用指尖點按所需的選項。小心不要按附近的任何其他鍵。
- 不要用護套或護蓋蓋住手機，因為一旦觸控板上蓋有任何東西，它將無法正常運作。
- 當滑蓋合上或屏幕燈熄滅後，為防止不慎對觸控鍵進行任何操作，將自動啟用觸控保護功能。（此時，即使按下觸控鍵也不會起作用。）若要停用觸控保護功能，請按住手機右側的解鎖鍵。



觸控板

# 桌面

## 狀態列

狀態列透過使用各種圖示來指明訊號強度、新訊息和電池壽命等情況，亦告訴您藍芽連接是否已啟用。

下表對最有可能在狀態列中看到的各種圖示的含義進行了解釋。

圖示	說明
	網絡訊號強度 (列數目將有所變化)
	無網絡訊號
	可使用 GPRS
	可使用 EDGE
	可使用 3G
	飛航模式已啟用
	通話線路已轉接
	漫遊服務
	Bluetooth® 已啟用
	已連接 WAP 服務
	可使用的多項工作
	鬧鐘已設定
	日程表
	新訊息

圖示	說明
	新語音訊息
	新電子郵件
	正在使用標準情景模式
	正在使用靜音情景模式
	正在使用戶外情景模式
	正在使用耳機情景模式
	電池電量
	電池已耗盡
	外置記憶體
	FM 收音機
	MP3 音樂播放中




## 使用多項工作功能

按多項工作鍵以開啟多項工作功能表。您可從此處檢視所有已執行的應用程式。透過使用左/右導覽鍵並選擇中心鍵，您還可以在無需結束或關閉應用程式的情況下進行存取。（類似相機和視像攝錄機等一些應用程式不可使用多項工作功能。）

當某個應用程式正在背景中使用時，則 會顯示於狀態列中。

# 通話功能



## 撥打電話

- 1 確保手機已開啟。
- 2 開啟滑蓋後您可使用鍵盤。  
若要刪除數字，請按 。
- 3 按  以開始通話。
- 4 若要結束通話，請按  或關閉滑蓋。

**提示！** 若要在撥打國際電話時輸入「+」，請按住 0。

## 透過通訊錄撥打電話

撥打通訊錄中儲存的號碼十分方便。

- 1 按**功能表**  開啟主功能表。選擇**通訊錄**，然後選擇**搜尋**。
- 2 使用鍵盤輸入要通話聯絡人的首個字母，然後選擇至該聯絡人。
- 3 按  以開始通話。

## 接聽來電和拒接來電


手機響鈴後，按接受。

手機正在響鈴時，按確定鍵至選項，您可按靜音使響鈴靜音。如果在開會時忘記將情景模式變更為靜音，此功能將十分有用。


按拒絕以便拒接來電。

## 快速撥號

您可為常撥聯絡人指定一個快速撥號號碼。

- 1 按**功能表**  開啟主功能表。選擇**通訊錄**，然後選擇**快速撥號**。
- 2 您的留言信箱預設為快速撥號 1，因此您無法變更此設定。使用導覽鍵並選擇**新增**或按硬鍵號碼以選擇任何其他號碼。
- 3 您的通訊錄將開啟。使用導覽鍵選擇要指定到此號碼的聯絡人，然後選擇。

# 通話功能

要撥打快速撥號號碼，請按住指定的號碼，直到聯絡人顯示在屏幕上。通話將自動開始且無需按 。

## 檢視通話記錄

按**功能表**  並選擇**通話**。選擇**通話記錄**。

**所有通話** - 檢視所有已撥、已接和未接來電的完整清單。

**未接來電** - 檢視所有未接來電的清單。

**撥出通話** - 檢視所有已撥出通話的清單。

**已接來電** - 檢視所有已接聽來電的清單。

**提示！** 從任何通話記錄中，選擇**選項**並選擇**刪除**以刪除所選項目。

## 使用來電轉接


- 1 按**功能表**  並選擇**通話**。
- 2 選擇**來電轉駁**。

- 3 選擇所有語音通話、線路繁忙時、無人接聽、無法接通時。
- 4 選擇啟動並選擇是否轉駁至留言中心或轉至其他號碼。
- 5 輸入您的轉駁號碼，或選擇**搜尋**瀏覽轉駁號碼的**通訊錄**。

**注意：**轉駁電話需要收費。請聯絡網絡供應商，了解詳情。

**提示！** 要關閉所有來電轉駁，請從**來電轉駁**功能表選擇**停用全部**。


## 使用通話限制

- 1 按**功能表**  並選擇**通話**。
- 2 選擇**通話限制**。
- 3 選擇下列任何一個：
  - 所有撥出通話**
  - 國際通話撥號**
  - 本地以外的國際撥號**
  - 所有來電**
  - 國際漫遊時來電**
  - 停用全部**

- 4 輸入通話限制密碼。請向您的網絡商查詢這項服務。

**提示！** 從**通話**功能表中選擇**固定撥號號碼**，以開啟並編譯可從此手機呼叫的號碼清單。您需要從您的網絡商處得到一個PIN2碼。啟用後，僅固定撥號清單中的號碼可從手機撥出。

## 變更通話設定

- 1 按**功能表**  並選擇**通話**。
- 2 您可從此處修改以下選項的設定：

**通話時間** - 檢視通話時間詳情，包括已接來電和撥出通話。

**數據用量** - 檢視所有已接收和已傳送數據量（千字節表示）。

**通話費用** - 檢視套用至最後通話或所有通話的費用。此服務取決於網絡，部份網絡商無法支援此項服務。

**來電轉駁** - 選擇是否轉駁您的通話。

**通話限制** - 選擇想要限制的通話。

**固定撥號號碼** - 選擇可從您的手機進行撥出的號碼清單。

**來電等候** - 有來電等候時，手機會提示您。

## 通用設定

**來電拒接** - 選擇**關閉**或**開啟**並選擇拒接來所有通話、通訊錄、群組、無名稱號碼（未儲存於通訊錄的號碼）無來電號碼。

**發送我的號碼** - 選擇撥出通話時，是否顯示您的號碼。（此功能僅在受網絡支援時才可用。）

**自動重撥** - 可讓您在撥打電話失敗時設定自動重撥功能。

**接聽模式** - 可讓您設定接聽方式。您可以選擇**按發送鍵**、**開啟滑蓋**或**按任何鍵**。

**分鐘提示** - 確定是否在通話過程中播放分鐘提示音。

## 通話功能


**藍芽接聽模式** - 選擇使用藍芽耳機時的接聽方式。選擇**免提**或**手機**。

**儲存新號碼** - 選擇此選項以便在結束通話時儲存尚未儲存於通訊錄中的號碼。

**滑蓋關閉設定** - 設定是否在合上滑蓋時結束通話。(結束通話/繼續通話)

# 通訊錄


## 搜尋通訊錄

- 1 按**功能表**  並選擇**通訊錄**，然後選擇**搜尋**。
- 2 使用鍵盤輸入要進行通話的聯絡人名稱。
- 3 選擇聯絡人及其不同的號碼，請使用導覽鍵。

或者，使用輕微更快捷的方法…

- 1 在桌面輸入您想要搜尋的號碼，然後選擇**選項**。
- 2 在選項功能表中，選擇**搜尋通訊錄**。

## 新增通訊錄

- 1 按**功能表**  並選擇**通訊錄**，然後選擇**新增**。
- 2 選擇將新通訊錄儲存於**手機**或**智能咭**。
- 3 在提供的欄位中，輸入所需資訊並選擇**完成**。


或者使用稍微快捷一點的方法…

- 1 輸入要儲存的號碼，然後按**選項**。

- 2 選擇**儲存號碼**，然後選擇**新增通訊錄**或**更新通訊錄**。
- 3 輸入相關資訊，然後選擇**完成**。

## 通訊錄選項

您可在檢視通訊錄時進行多項操作。以下是存取及使用選項功能表的方式：

- 1 按**功能表**  並選擇**通訊錄**，然後選擇**搜尋**。
- 2 選擇**選項**以開啟選項清單。在此處您可以：

**發送訊息** - 發送訊息給聯絡人。如果聯絡人具有電子郵件地址，選擇您是要發送**訊息**或**電子郵件**。

**發送名片** - 以名片方式向他人發送聯絡人的詳細資料。選擇以**文字訊息**、**多媒體訊息**、**電子郵件**或透過**藍芽**發送。

**撥打電話** - 直接給選定聯絡人撥打語音通話。

**新增通訊錄** - 新增聯絡人。

# 通訊錄

**編輯** - 變更任何聯絡人的詳細資料。

**新增至群組** - 新增聯絡人至某個群組。(只限存於手機電話)

**標記/取消標記** - 選擇是否標記或取消標記某個聯絡人。

**搜尋於** - 按號碼或群組搜尋聯絡人。


**儲存至智能咭** - 選擇要移動或複製至智能咭還是手機（視您起初儲存通訊錄的位置而定）。

**刪除** - 刪除聯絡人。確定後，請選擇**是**。

**文字輸入** - 您可以為聯絡人附加符號、輸入法模式、寫入語言及新增字詞至字典中。

**快速撥號** - 您可以為常撥聯絡人指定一個快速撥號號碼。

## 建立群組

- 1 按**功能表**  並選擇**通訊錄**。
- 2 選擇**群組**，然後選擇**選項**。
- 3 選擇**新增群組**。

4 為新群組輸入一個名稱。


5 按**完成**。

**注意：**如果刪除某個群組，指定給該群組的聯絡人將不會遺失。這些聯絡人仍保留在您的通訊錄中。

**提示！** 您可以透過顯示現有群組並選擇**選項**以進行編輯。選擇從通訊錄中**新增成員**至該群組、選擇**編輯群組**並指定**群組鈴聲**、**輸入名稱**該群組或**刪除**該群組。

## 使用服務撥號號碼

您可檢視由服務提供商指定的「服務撥號號碼」(SDN) 清單（如果受智能咭支援）。此類號碼包括緊急電話、電話號碼查詢和留言信箱號碼。

選擇服務號碼後，按  撥打服務電話。


## 檢視本手機號碼

從**通訊錄**功能表中選擇**本手機號碼**檢視您的號碼。

## 建立名片

您可以透過選擇**我的名片**，然後選擇**新增**來建立自己的名片。輸入您的姓名、號碼、電郵地址、圖像等。

## 變更通訊錄設定

- 1 按**功能表**  並選擇**通訊錄**。
- 2 選擇**設定**。您可從此處對以下設定進行調整：

**通訊錄列表設定** - 選擇檢視儲存於您的**手機及智能咭**中的通訊錄，還是**手機或智能咭**中的通訊錄。您亦可選擇首先顯示通訊錄的姓氏或名字，然後顯示通訊錄圖片。

**複製** - 在手機與智能咭之間進行聯絡人複製。選擇執行此操作的方式：依次序或全部。

**移動** - 此操作與**複製**操作一樣，但聯絡人僅會儲存於您所移動至的位置。如果您將某個聯絡人從智能咭移動至手機，它將從智能咭記憶體中刪除。

**透過藍芽傳送所有通訊錄** - 透過藍芽將通訊錄資訊發送到其他手機。

**備份通訊錄** - 您可將手機中的所有通訊錄數據以 vCard 形式儲存至外置記憶體。

**還原通訊錄** - 您可將外置記憶咭中的所有通訊錄數據以 vCard 形式還原至手機記憶體。

**清除通訊錄資料** - 刪除所有通訊錄。


**記憶體資訊** - 您可以查看手機或智能咭上還剩有多少記憶體空間。

# 訊息

## 訊息

GM310 包含與 SMS（文字訊息）、MMS（多媒體訊息）以及網絡服務訊息相關之功能。若要使用這些功能，請按**功能表**並選擇**訊息**。


## 發送訊息

- 1 按**功能表** ，選擇**訊息**，然後選擇**建立新訊息**。
- 2 選擇**訊息**以發送文字訊息或多媒體訊息。
- 3 將開啟新**訊息編輯器**。訊息編輯器將文字訊息或多媒體訊息集中在一個相互切換的模式中。訊息編輯器的預設設定為文字訊息模式。
- 4 使用鍵盤輸入訊息。請參閱右側的**輸入文字**，了解更多有關如何輸入文字的資訊。
- 5 選擇**選項**並選擇**附加**以新增**圖像、影片、聲音、符號、常用範本、情感圖示、名稱及號碼、新增投影片、標題或更多（名片/日程表/備忘錄/待辦事項/我的名片）**。

6 選擇**發送**。

7 從通訊錄清單中選擇某個聯絡人或輸入電話號碼。

8 選擇**發送**。


 **警告：**圖像、聲音、影片、新增投影片、標題、名片、日程表或我的名片將被新增至訊息編輯器，並被自動轉換為多媒體訊息模式，而您亦需為此付費。

## 輸入文字


使用手機鍵盤，您可輸入英數字元。例如，在通訊錄中儲存名稱、編寫訊息和在日曆中建立日程表，都需要輸入文字。

手機中提供以下可用的文字輸入方式：筆劃模式、注音模式、英文字典模式（T9 模式）、ABC 模式和 123 模式。

**注意：**部份欄位只可使用一種文字輸入模式（例如通訊錄欄位中的電話號碼）。

要在文字輸入欄位中開啟英文字典模式(T9 模式)，請選擇選項，選擇輸入法模式，然後選擇英文字典模式。透過按 #您可切換文字輸入模式。您會發現文字輸入模式指示符顯示在顯示屏右上角。要在文字輸入欄位中輸入符號，請按  鍵並選擇符號，然後選擇**確定**。

按 0 可在每個單字後加入空格。

要刪除某個字元，請按  鍵。

## 英文字典模式(T9 模式)

英文字典模式(T9 模式)使用內置字典，識別根據按按鍵順序寫入的單字。只需按與要輸入字母關聯的數字按鍵，且只要輸入所有字母，字典便可識別要輸入的單字。

**注意：**透過按選項並選擇寫入語言，您可選擇不同語言。

## ABC 模式


使用此模式時，按下標示所需字母的按鍵一次、兩次、三次或四次，直至顯示所需字母便成。

## 123 模式

只要按一次按鍵即可輸入一個數字。在 Abc 模式下，您亦可透過長按所需按鍵加入數字。


## 設定電子郵件

縱使出門在外，您亦可使用 GM310 上的電子郵件功能與他人保持聯絡。設定 POP3 或 IMAP4 電子郵件帳戶簡單方便。

- 1 按**功能表** ，選擇**訊息**，然後選擇**設定**。
- 2 選擇**電子郵件**並選擇**電子郵件帳戶**。
- 3 選擇**新增**，然後依照快顯指示並輸入所需資訊。

## 透過新帳戶發送電子郵件


若要發送/接收電子郵件，您必須設定一個電子郵件帳戶（詳情請見上文）。

- 1 按**功能表** ，選擇**訊息**，然後選擇**建立新訊息**。
- 2 選擇**電子郵件**，將開啟一個新電子郵件視窗。

# 訊息

- 3 寫上標題，然後按確定。
- 4 使用鍵盤輸入訊息。

## 擷取電子郵件

- 1 按**功能表**  並選擇**訊息**，然後選擇**郵箱**。
- 2 選擇要使用的帳戶。
- 3 選擇**擷取**，手機將會連接到電郵帳戶並擷取新訊息。

## 訊息資料夾

按**功能表**  並選擇**訊息**。  
GM310 手機上使用的資料夾結構可一目了然。

**建立新訊息** - 建立新的訊息。

**收件匣** - 您收到的所有訊息將置於**收件匣**中。您可從此處進行回覆、轉寄和更多操作。

**郵箱** - 您收到的所有郵件將置於**郵箱**中。

**草稿** - 若不夠時間完成編寫訊息，您可以將寫完的部分儲存於此。

**寄件匣** - 這裡是發送中的訊息之臨時存放資料夾。

**已發送項目** - 所有已發送訊息的備份被儲存於已發送項目資料夾中。

**我的資料夾** - 您可以將**收件匣**中的訊息或**已發送項目**移動到**我的資料夾**中。您還可以將**我的資料夾**中的這些訊息移動到原有訊息匣中。

**常用範本** - 一個已編寫好的有用訊息清單，可用於快速回覆。

**情感圖示** - 您可以新增、編輯並刪除情感圖示。您可在編寫訊息時插入喜愛的情感圖示。

## 管理訊息

- 1 按**功能表** ，選擇**訊息**，然後選擇**收件匣**。

- 2 選擇**選項**，然後選擇：

**回覆** - 回覆所選訊息。

**轉寄** - 將所選訊息發送給他人。

**撥打電話** - 向您的寄件者致電。

**儲存號碼** - 儲存訊息中包含的號碼。

**刪除** - 刪除所選訊息。

**建立新訊息** - 編寫新訊息或電子郵件，無論寄件者是誰。

**標記/取消標記** - 標記一則訊息或全部訊息。

**複製及移動** - 選擇將所選訊息複製或移動至智能咭或手機上。

**篩選** - 按所需訊息類型顯示訊息。


**訊息資訊** - 您可以檢查訊息類型、標題、寄件者及日期。

如果您看到**無足夠空間儲存智能咭訊息**，則應從收件匣中刪除部份訊息以釋放空間。如果您看到**無足夠空間儲存訊息**，則可刪除訊息或儲存的檔案以釋放更多空間。

**提示！** 收到訊息時，您可以透過使用**快速回覆**功能快速進行回覆。查看到訊息時，按**選項**並選擇**快速回覆**。如果您需要在開會時回覆訊息，此功能非常有用。

**提示！** 查看到訊息時，按**選項**並選擇**擷取**。您可以從所選訊息中擷取類似號碼、電郵地址或網址等資訊。

## 變更文字訊息設定

按**功能表** ，選擇**訊息**，然後選擇設定和文字訊息。您可對以下各項進行變更：

**文字訊息中心** - 為您的訊息中心輸入詳細資料。

**發送報告** - 選擇在訊息發送之後接收確認訊息。

**有效時期** - 選擇訊息儲存在訊息中心的時間。


**訊息類型** - 將您的文字轉換為**語音**、**傳真**、**X.400** 或電子郵件。

**字元編碼** - 選擇字元的編碼方式。這將影響到您的訊息大小，進而影響數據費用。

**發送長文字時設為** - 當在訊息欄位中輸入的文字長度超過 2 頁時，選擇是以多個文字訊息或多媒體訊息來發送訊息。

# 訊息

## 變更多媒體訊息設定

按**功能表** ，選擇**訊息**，然後選擇**設定**和**多媒體訊息**。您可對以下各項進行變更：

**接收模式** - 選擇自動或手動下載多媒體訊息，具體取決於您是本地還是漫遊網絡。

**發送報告** - 選擇是否要求或允許發送報告。

**閱讀回覆** - 選擇是否要求或允許閱讀回覆。

**重要性** - 選擇多媒體訊息的優先等級。

**有效時期** - 選擇訊息要在訊息中心保留多久。

**投影片播放時間** - 選擇投影片在屏幕上的顯示時間。

**建立模式** - 可讓您選擇受多媒體訊息支援的內容類型。

**發送時間** - 設定向收件者發送訊息的時間。多媒體訊息中心將根據發送時間發送訊息。

**多媒體訊息中心** - 可讓您設定網絡資訊，例如多媒體服務中心和互聯網設定，以發送多媒體訊息。

## 變更電子郵件設定

1 按**功能表** ，選擇**訊息**，然後選擇**設定**。

2 選擇**電子郵件**，然後調整以下設定：

**電子郵件帳戶** - 你可以設定電子郵件帳戶。

**允許回覆電郵** - 選擇允許發送「閱讀確認」訊息。

**要求回覆電郵** - 選擇是否請求讀取確認訊息。

**擷取時隔** - 選擇 GM310 手機查收新電子郵件訊息的頻率。

**擷取量** - 選擇任何一次擷取的電子郵件數量。

**轉寄及回覆時加入原始訊息** - 選擇是否包含原有訊息。

**包括附件** - 選擇是否包含原有附件。


**在漫遊中自動擷取** - 選擇是否在出國時自動擷取訊息。

**新電子郵件通知** - 選擇是否要獲得新電子郵件通知。

**簽名** - 建立電郵簽名並啟用此功能。

**重要性** - 選擇電子郵件訊息的優先等級。

## 變更其他設定

按**功能表** ，選擇**訊息**，然後選擇**設定**並選擇：



**留言信箱** - 新增留言信箱服務。聯絡網絡商，了解他們提供服務的更多詳情。

**服務訊息** - 選擇要接收還是阻止服務訊息。您亦可透過建立受信任的和不受信任的寄件者列表來設定您的訊息安全性。

**資訊服務** - 資訊訊息的選擇區域廣播、頻道和語言。

# 相機


## 快速拍照


- 1 輕按  開啟取景器。
- 2 水平握住手機，將鏡頭對準拍照對象。
- 3 按  進行拍照。


## 拍攝照片後


拍攝的相片將顯示於屏幕上。  
可使用以下選項：


**返回** - 返回到上一個功能表。

 **影集** - 檢視影集中已拍攝的圖片。

 **發送** - 以訊息、電子郵件或藍芽發送相片。

 **新增** - 直接拍攝另一張相片。當前相片將會被儲存。

 **使用方式** - 將剛剛拍攝的圖像設定為牆紙、通訊錄圖像或開機/關機屏幕。（通訊錄圖像僅能新增至手機而非智能咭上儲存的通訊錄。）

 **刪除** - 刪除剛剛拍攝的相片。取景器將再次出現。

**選項** - 您可以重新命名或編輯圖片檔。

## 使用快速設定

從取景器中，使用導覽鍵並選擇想要使用的選項。

**影集** - 選擇以查看影集中的其他圖像。

**影片** - 選擇以從相機切換到視像攝錄機模式。

**擷取** - 拍攝相片。

**亮度** - 設定圖像在相機取景器中的亮度。

**縮放** - 使用手機左側的音量鍵調整縮放。縮放功能僅在圖像大小設定為 640x480 或以下選項時可用。

## 使用進階設定

從取景器中，選擇**設定**開啟所有進階設定選項。使用導覽鍵導覽選項。

## <預覽>

**圖像大小** - 變更相片大小。

**色彩效果** - 選擇要套用於已拍攝相片的色調。

**白平衡** - 白平衡可確保照片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從**自動**、**白熱光**、**陽光**、**日光燈**或**陰天**中進行選擇。

**夜間模式** - 透過選擇**開啟**，您可在夜間獲得更好拍攝效果。

**計時器** - 自拍定時讓您設定按拍攝按鈕後的延遲時間。可供選擇的選項為：**3 秒**、**5 秒**或**10 秒**。適宜於拍攝也要包括您在內的群組相片。

**拍攝模式** - 選擇**標準**或**連環拍攝**。連環拍攝可讓您快速而連續地自動拍攝三張、六張或九張相片，特別適用於拍攝移動物體或體育賽事。

**圖像質量** - 控制圖像的質素。質量越細緻，相片便越清晰，但佔用的檔案空間會增大。這表示記憶體中儲存的相片會相應減少。

## <其他>

**記憶體使用裝置** - 選擇將相片儲存於手機記憶體或外置記憶體中。

**隱藏圖示** - 選擇自動或手動隱藏取景器側邊的圖示。

**快門聲** - 從三種不同的快門聲音中選擇一種。

**注意：**選擇新設定之後，請隨時按**選擇**以執行所作變更。設定功能表將自動關閉，為拍攝圖片作好準備。

## 調節亮度

對比度定義圖像在有光和黑暗中的區別。低對比度會將圖像顯示得較模糊，而高對比度會將圖像顯示得較清晰。

- 1 選擇快速設定中的**亮度**。
- 2 將對比度指示符沿列向 - 按，對比度將降低，獲得的圖像較模糊，向 + 按，對比度將升高，獲得的圖像較清晰。

# 相機

## 變更圖像大小

像素越高，檔案大小越大，從而佔據的記憶體空間便越多。若要使手機或記憶咭儲存更多圖片，請變更圖片像素，以縮小檔案大小。




- 1 從**設定**中選擇**圖像大小**。
- 2 從數字選項中選擇像素值：  
2048x1536、1600x1200、  
1280x960、640x480、  
320x240。

## 檢視已儲存照片

- 1 您可在相機模式中透過選擇**影集**存取已儲存的相片。影集將顯示於屏幕上。
- 2 顯示您想要檢視的相片，使其顯示於屏幕。
- 3 選擇此相片以便完全開啟。

# 視像攝錄機

## 拍攝快速影片


- 1 按住  開啟取景器。
- 2 將相機聚焦於您希望攝錄的事物上。
- 3 按一下  開始錄製。
- 4 **Rec** 將出現在取景器的底部。再次按  停止錄製。


## 錄製影片後


已錄製的影片會顯示在屏幕上。可使用以下選項：


**返回** - 返回到上一個功能表。

 **影集** - 按下以查看影集中的其他影片。當前影片將會被儲存。

 **播放** - 按下以播放剛剛錄製的影片。

 **新增** - 按下以直接錄製另外一段影片。當前影片將會被儲存。

 **發送** - 以訊息、電子郵件或藍芽發送相片。

 **刪除** - 刪除剛剛錄製的影片。取景器將再次出現。

**選項** - 您可重新命名。

## 使用快速設定

從取景器中，使用導覽鍵並選擇想要使用的選項。

**影集** - 選擇以查看影集中的其他影片。

**相機** - 選擇以從視像攝錄機切換到相機模式。

**錄製** - 錄製影片。

**亮度** - 設定視像攝錄機取景器的亮度。

**縮放** - 使用手機左側的音量鍵調整縮放。縮放功能僅在圖像大小設定為 640x480 或以下選項時可用。

## 使用進階設定

從取景器中，選擇**設定**開啟所有進階設定選項。使用導覽鍵導覽選項。

# 視像攝錄機

## <預覽>

**大小** - 變更影片大小。

**色彩效果** - 選擇要套用於已錄製影片的色調。

**白平衡** - 白平衡可確保相片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從**自動**、**白熱光**、**陽光**、**日光燈**或**陰天**中進行選擇。

**質素** - 控制影片的質素。

**長度** - 選擇錄製時間。選擇**訊息**或**標準**。

## <其他>

**記憶體使用裝置** - 選擇將影片儲存於手機記憶體或外置記憶體中。

**隱藏圖示** - 隱藏取景器側邊的圖示。

**語音** - 選擇**靜音**以錄製影片，而沒有聲音。

**注意**：選擇新設定之後，請隨時按**選擇**以執行所作變更。

## 觀看已儲存影片

- 1 您可在視像攝錄機模式中透過選擇**影集**存取已儲存的影片。相簿將顯示於屏幕上。
- 2 顯示您想要檢視的影片，使其顯示於屏幕。
- 3 選擇此影片以便完全開啟。

# MP3 播放器

## MP3 播放器

GM310 具有內置音樂播放機，這樣，您可播放所有喜愛的曲目。

### 注意：

- 使用音樂播放機之前，您需要將音樂檔案傳輸至手機上。
- 如果您使用**音樂同步**應用程式將播放列表（您整理到列表中的歌曲）傳輸到手機上，則亦可以瀏覽 **Music Tea**、**Mix & Match** 和 更多此類音樂播放列表中的歌曲。
- 音樂播放機支援下列轉碼器類型：MP3、WMA、AAC、M4A 和 RA。音樂播放機不一定能支援所有功能和檔案格式的變異。





音樂辨識技術及相關資料由 Gracenote® 提供。Gracenote 是音樂辨識技術和相關內容傳遞技術的業界標準。請前往 [www.gracenote.com](http://www.gracenote.com) 瞭解有關詳情。

Gracenote, Inc 提供的 CD 以及與音樂相關的資料，版權屬於 © 2000-2007 Gracenote。Gracenote 軟件版權，© 2000 -2007 Gracenote 版權所有。本產品和服務可能註冊有以下一項或多項美國專利：  
#7,228,280; #7,167,857;  
#6,983,289; #6,330,593;  
#6,304,523; #6,240,459;  
#6,230,207; #6,230,192;  
#6,161,132; #6,154,773;  
#6,061,680; #5,987,525

Gracenote 及 CDDB 是 Gracenote 公司在美國和/或其他國家的註冊商標或商標。Gracenote 標誌、標誌字型以及 “powered by Gracenote” 標誌是 Gracenote 的商標。

# MP3 播放器

若要存取音樂播放機，請按**功能表**  並選擇 **MP3 播放機**。或者，您可以透過輕按手機右側的音樂播放機鍵  來存取音樂播放機。您可從此處存取：

**正在播放** - 僅在播放音樂時出現。選擇此選項時，您可返回至正在播放音樂的播放機。

**全部曲目** - 包含手機上的所有歌曲。

**MusicTea™** - MusicTea 包含 9 個茶包，由不同風格的音樂檔案組成。每個茶包與一種音樂類型相配對。

**Mix&Match™** - Mix&Match™ 包含 6 大類別，可讓您在不同活動和場合中享受多姿多彩的播放列表內容。您可製作並管理播放列表，使其包含適合運動場合播放的歌曲或者與特定心境（比如浪漫）相配的歌曲。透過使用音樂同步應用程式的更多此類音樂功能。

**我的播放列表** - 包含您已建立的任何播放列表以及**最常播放**、**優良評等**、**更多此類音樂**和**播放列表**。

**演出者** - 可讓您檢視根據演唱者儲存的全部曲目。

**專輯** - 可讓您檢視根據影集儲存的全部曲目。

**類型** - 可讓您檢視根據類型儲存的全部曲目。

**隨機播放曲目** - 可讓您按照隨機順序播放全部歌曲。

**Music ID** - Music ID™ 應用程式採用機載咪高風分析歌曲範本，然後將其與遠端歌曲數據庫進行比較。一旦此應用程式完成分析歌曲範本之後，將為您提供歌曲名稱、演出者及影集資訊。

**簡易檔案排序** - 顯示所有音樂檔案資料夾。您可以從此處查看手機及相容記憶咭（若已插入）中可用的全部音樂檔案。

**提示！** 在欣賞類似更多此類音樂/Mix&Match™/MusicTea™等播放列表之前，您需要將 MP3 檔案從電腦傳輸至手機上。您可以使用 **Music Sync** 應用程式（可在 LG PC Suite 隨附的 CD 中找到）將新歌曲下載至 GM310 手機中。

這些歌曲將具有名為**更多此類音樂**的額外功能，讓您能夠以相似（以專輯標題或演出者，或歌曲曲調界定）的歌曲製作一鍵自動播放列表。這些特殊的播放列表被儲存於**更多此類音樂**下名為**播放列表**的資料夾中，或儲存於 **Mix&Match™/MusicTea™** 中。您可隨意聆聽這些播放列表。

## 將音樂傳送至手機

將音樂傳輸至手機最簡單的方法是透過藍芽或 USB 線。  
若要使用藍芽傳送音樂：

- 1 確保兩個裝置均開啟藍芽，且彼此可看見對方。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 發送檔案後，在手機上選擇是予以接受。
- 4 檔案將出現於**全部曲目**中。

## 播放歌曲

- 1 按**功能表**  並選擇 **MP3 播放機**。
- 2 選擇**全部曲目**，然後選擇您想要播放的歌曲。選擇 **▶**。
- 3 選擇 **⏸** 暫停歌曲。
- 4 選擇 **⏭** 跳至下一首歌曲。
- 5 選擇 **⏮** 跳至上一首歌曲。
- 6 選擇**返回**返回至**全部曲目**功能表。

**提示！** 要在收聽音樂時變更音量大小，請使用手機左側的音量鍵。

# MP3 播放器

**提示！** 如果您在播放音樂的同時按音樂播放機快捷鍵，則可使用背景音樂模式。在背景音樂（背景音樂）模式中，可在其他功能的同時播放音樂。您可以在音樂播放機屏幕上停止背景音樂。

## 播放音樂時使用選項

選擇**選項**，然後選擇：

**最小化** - 隱藏音樂播放機屏幕，這樣，您可在播放音樂的同時，繼續按正常方式使用手機。

**新增至播放列表** - 將當前曲目新增至播放列表。

**設為鈴聲** - 將當前曲目設為鈴聲。


**等級** - 選擇當前曲目並根據星級數量進行評級。

**資訊** - 您可檢視與正在聆聽的音樂檔案有關的資訊。

**音樂計時器** - 您可以設定手機在一段時間之後停止播放音樂。

**設定** - 您可以設定各種功能，例如隨機播放、重複、播放設定、列表/全屏播放器、視覺效果和相冊圖像大小。

## 檢視播放列表

- 1 按**功能表**  並選擇 **MP3 播放機**。
- 2 選擇**我的播放列表**，然後選擇：

**最常播放** - 顯示最常播放的 20 首曲目。

**最受歡迎** - 顯示評級最高的 20 首曲目。如果不存在任何等級曲目，則不顯示任何檔案。


**更多此類音樂** - 與 More Like This™ 功能有關的播放列表。

**播放列表** - 新增曲目至新播放列表，選擇想要曲目到列表。並可檢視進行的列表。

### 提示！更多此類音樂自動播放列表

更多此類音樂可讓您能夠以相似（以影集標題或演出者，或歌曲曲調界定）的歌曲製作一鍵自動播放列表。您可以隨意欣賞和管理這些播放列表。

## 建立播放列表

- 1 按**功能表**  並選擇 **MP3 播放機**。
- 2 選擇**我的播放列表**。
- 3 按**選項**並選擇**新增播放列表**，輸入播放列表名稱並按**儲存**。
- 4 將顯示新播放列表資料夾。透過選擇至所有您想要包含在播放列表中的全部歌曲並按  以選中這些歌曲；曲目名稱旁邊將出現一個勾號。如果無意中選擇了不想要的歌曲，請選中此歌曲並再次按  以取消勾選。
- 5 按**完成**儲存此播放列表。

## 藉助 Music ID™ 搜尋歌曲資訊

藉助 Music ID，您可以找到與想要瞭解之歌曲有關的資訊。從 Music ID 中選擇以下功能：

**TagMusic™** - 如果您聽到一首很喜歡的歌曲但不知道曲名，則可以選擇 TagMusic™ 功能並對來自外置音樂源的部分聲音進行錄製。完成錄製之後，將自動連接至 Music ID 辨識伺服器。一旦透過 Music ID 辨識服務確定此歌曲，您將收到與此歌曲有關的資訊。

**TagRadio** - TagRadio 功能有助於您搜尋在內置 FM 收音機中聽到的不明歌曲資訊。收聽 FM 收音機時，您可以選擇「錄製」功能錄製小段音樂並進行儲存。如果您已經有了廣播錄製檔案，則可將其發送至 Music ID 辨識伺服器。一旦透過 Music ID 辨識服務確定此歌曲，您將收到與此歌曲有關的資訊。

# MP3 播放器

**TagSong** - 透過 TagSong 功能，您可以在 MP3 檔案的 ID3 標籤上新增資訊。如果您將 MP3 檔案發送至 Music ID 辨識伺服器，您將收到與此 MP3 檔案有關的資訊，例如歌曲名稱、演出者、影集和類型等（如果有）。它可為您提供更多便利，以便您更好地管理和欣賞音樂收藏。

**Tag - 記錄** - 最近檢視的歌曲資訊記錄會顯示。（歌曲標題/演出者）

## 注意：

- 使用 **Music ID™**，必須網絡商網絡支援，而有可能因網絡商某些原因受到限制而未能使用。
  - 為獲得最佳效果，請於安靜環境下使用 **Music ID™**。
  - 連接至此服務並傳輸數據時，需另行收費。請向服務提供商諮詢資料費用。
  - 音樂將以 WAV 格式錄製並不會被儲存至手機上。
  - 如果無法辨識音樂，系統將詢問您是否重試。
- 如果您在收到結果之後選擇「儲存」選項，TagMusic/TagRadio 的搜尋結果將儲存於 Tag-記錄中。

## 注意：

- 因數碼權限管理 (DRM) 系統的保護，從互聯網下載或透過多媒體訊息方式接收到的某些媒體項目可能需要使用「購買權限」功能表進行存取。您可從擁有內容權限的網站獲取購買權限的密鑰。
- 音樂版權受國際公約及國內版權法的保護。需要取得授權或許才可以複寫或複製音樂。在部份國家，國家法禁止私人複製受版權保護的材料。請檢查適用國家關於使用此類材料的國家法律。

# 多媒體

## 使用 FM 收音機


GM310 具有 FM 收音機功能，這樣，您可在外出旅途中調諧至最愛電台，收聽節目。

**注意：**您需要插入耳機才可收聽收音機。將插頭插入耳機插孔。

## 搜尋電台

透過手動或自動搜尋電台節目，將其保留到手機中。這些節目將儲存至特定頻道編號，如此以來，您就不需要重新調諧。

### 自動調諧：

- 1 按**功能表**  並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 選擇**選項**並選擇**自動掃描**，然後選擇**是**。
- 3 手機將自動搜尋可用的電台，並將找到的電台分配至手機的某個頻道上。

### 手動調諧：


- 1 按**功能表**  並選擇**多媒體**，然後選擇**FM 收音機**。

- 2 要進入電台，您可使用導覽鍵搜尋頻率，或使用鍵盤輸入頻率，然後選擇**設定**。
- 3 選擇想要用來儲存電台的頻道號，並選擇**選擇**。

**注意：**您亦可編輯已儲存至頻道號中的電台。

**提示！** 如要改善收音機的接收效果，您可延長作為收音機天線的耳機線。

## 重設所有頻道

- 1 按**功能表**  並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 選擇**選項**並選擇**重設所有頻道**。選擇**是**確認重設。每個頻道將返回至開始 87.5Mhz 頻率。

## 收聽電台

- 1 按**功能表**  並選擇**多媒體**，然後選擇**FM 收音機**。
- 2 選擇要收聽電台的頻道號。

**注意：**您可以透過內置揚聲器收聽電台節目。按**選項**，選擇**透過揚聲器收聽**。

# 多媒體

## 錄製廣播

收聽 FM 收音機時，您可以選擇**錄製**功能錄製小段音樂並進行儲存。透過選擇**選項**和**前往廣播錄製**，您可收聽已儲存的所有廣播錄製。您亦可在**我的檔案 > 我的記憶咭 > 聲音 > 廣播錄製**資料夾中檢視已儲存的錄製。

### 注意：


- 若您尚未插入記憶咭，則無法選擇 FM 收音機功能表中的「錄製」選項。
- 請注意，如果內置記憶體空間不足（小於 10 MB），則無法錄音或儲存檔案。只有當內置記憶體和外置記憶體均具有足夠空間時，才可錄音。

**提示！** 如果您已將廣播錄製儲存至記憶咭中，則可以選擇將此錄音作為鈴聲。您還可以選擇想要使用的部分短片並製作新的鈴聲。選擇廣播錄製檔案，然後選擇**選項 > 檔案 > 編輯**。使用「剪下」功能並將檔案儲存至**我的檔案 > 我的聲音**資料夾。

## 使用語音備忘錄

使用**語音備忘錄**錄製語音備忘錄或其他聲音。

## 錄製語音備忘錄

- 1 按**功能表**  並選擇**多媒體**，然後選擇**語音備忘錄**。
- 2 按中心軟鍵開始錄影。
- 3 選擇**停止**結束錄影。
- 4 按**選項**，然後選擇**播放**以聆聽錄影。

**注意：**透過選擇**選項**和**轉至錄音記錄**，您可收聽已儲存的所有錄音記錄。

## 發送錄音

- 1 完成錄影之後，請選擇**選項**。
- 2 選擇**發送**並從**訊息、電子郵件或藍芽**中進行選擇。若選擇**訊息**或**電郵**，錄製會新增至訊息中，您可按正常方式編寫和發送。若選擇**藍芽**，則系統會提示您開啟藍芽。

# 我的檔案

您可將手機記憶體中的任何多媒體檔案儲存至**我的檔案**中，以便輕鬆存取所有圖片、聲音、影片和遊戲。您亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。

## 圖像


我的圖像包括圖片清單，其中有預載至手機的預設圖像、下載的圖像和透過手機相機拍攝的圖像。

## 發送照片

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**我的圖像**。
- 2 選擇想要發送的相片並按**選項**。
- 3 選擇**發送**並從**訊息**、**電子郵件**或**藍芽**中選擇。
- 4 若選擇**訊息**或**電子郵件**，則照片會附加至訊息中，您亦可正常編寫和發送訊息。若選擇**藍芽**，手機會提示您開啟藍芽，並搜尋要向其發送圖片的裝置。

## 使用圖像

您可選擇將圖像用作牆紙、開機/關機圖像或甚至將其用於識別來電者。

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**我的圖像**。
- 2 選擇圖像，然後選擇**選項**。
- 3 點按**使用方式**並選擇以下一項：


**牆紙** - 設定桌面牆紙。

**通訊錄圖像** - 給通訊錄清單中的特定聯絡人分配一個圖像，以便在其向您致電時顯示。

**開機** - 設定開機時顯示的圖像。


**關機** - 設定關機時顯示的圖像。


## 管理圖像

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**我的圖像**。
- 2 選擇**選項**，然後選擇**排序方式**。
- 3 從**日期**、**類型**或**名稱**中選擇。

# 我的檔案


## 刪除圖像

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**我的圖像**。
- 2 選擇想要刪除的圖像並按**選項**。
- 3 選擇**刪除**，然後選擇**是**予以確認。

**提示！** 若要快速刪除「我的檔案」中的某個檔案，您可透過顯示所需檔案，然後按  鍵。


## 移動或複製圖像

您可以在手機記憶體和記憶咭之間移動或複製圖像。若要釋放某記憶庫中的部份空間，或要確保圖像不會遺失，您便需要進行這項作業。

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**我的圖像**。
- 2 選擇圖像，然後按**選項**。
- 3 選擇**移動**或**複製**。

## 標記或取消標記圖像


若要同時發送、刪除、移動、複製或列印多個圖像，您首先要識別出它們，然後以勾號進行標記。

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**我的圖像**。
- 2 選擇**選項**，然後選擇**標記/取消標記**。
- 3 每個圖像的左上角均會出現一個方塊。如果選擇圖像，則勾號將出現在方塊中，予以標記。
- 4 如要取消標記某圖像，只要再次選擇該圖像，以便勾號從方塊中消失。
- 5 一旦標記所有適當圖像後，選擇**選項**之一，套用於所有圖像。

**注意：**如果記憶咭中儲存了多個圖像，則允許在下載時延遲。

## 檢查記憶體狀態

您可查看已使用的記憶體空間及所剩記憶體空間。


- 1 按**功能表**  並選擇**我的檔案**，然後選擇**我的圖像**。
- 2 選擇**選項**，然後選擇**記憶體資訊**。
- 3 選擇**手機記憶體**或**外置記憶體**。

**注意：**若您尚未插入記憶咭，則無法選擇**外置記憶體**選項。

## 聲音

**我的聲音**資料夾包含**預設聲音**和**錄音記錄**。


### 使用聲音

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**我的聲音**。
- 2 選擇**預設聲音**或**錄音記錄**。
- 3 選擇一種聲音，並按**播放**以收聽聲音。
- 4 選擇**選項**，然後選擇**使用方式**。
- 5 從鈴聲、訊息提示音、開機或關機中進行選擇。


## 影片

**我的影片**資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。

### 觀看影片

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**我的影片**。
- 2 選擇一段影片並按**播放**。

### 發送錄像片段

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**我的影片**。
- 2 選擇一段影片，然後選擇**選項**。
- 3 選擇**發送**並從**訊息**、**電子郵件**或**藍芽**中進行選擇。
- 4 若選擇**訊息**或**電子郵件**，則錄像片段會附加至訊息中，您亦可正常編寫和發送訊息。若選擇**藍芽**，手機會提示您開啟藍芽，並搜尋要向其發送影片的裝置。

**注意：**透過多媒體發送前，影片可能需要重新調整大小。部份影片太大，無法透過多媒體發送。


# 我的檔案

## 遊戲及應用程式

您可以將遊戲與應用程式下載到手機上，以使用其打發空閒時間。

如果您從網絡中下載遊戲，則需要在使用之前在手機上安裝已下載的遊戲。

## 玩遊戲

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**遊戲及應用程式**。
- 2 選擇**遊戲**功能表。
- 3 選擇一個遊戲並按**啟動**。

## 使用遊戲選項功能表

**遊戲**和**應用程式**資料夾提供以下選項：

**建立新資料夾** - 在遊戲與應用程式功能表中建立新資料夾。

**排序方式** - 按**日期**、**大小**或**名稱**來排序遊戲及應用程式。

**記憶體管理** - 檢視記憶體狀態。

## Flash 內容

**Flash 內容**資料夾包含各種預設及已下載的 Flash 內容。

## 其他

此**其他**資料夾用於儲存圖片、聲音、影片、遊戲或應用程式以外的檔案。

## 我的記憶咭


如果您購買選擇性的外置 microSD 記憶咭，則可管理更多的內容。

## 安裝 Java 遊戲及應用程式

如 Java 遊戲等所有基於 Java 的程式均可進行下載並執行於手機上，具體取決於服務供應商。您可使用藍芽、USB 大容量儲存或外置記憶體將 Java 程式檔案從相容電腦傳輸到手機記憶體中。Java 程式檔案的格式為 .jad 或 .jar。

若將 Java 程式檔案儲存在手機中，則在使用 Java 遊戲或應用程式前，您應先安裝檔案。

若要安裝 Java 遊戲及應用程式：

- 1 按**功能表**  並選擇**我的檔案**，然後選擇**其他或我的記憶咭**（若已插入外置記憶體）。
- 2 選擇要安裝的檔案（\*.jad 或 \*.jar），並按**安裝**。

**注意：**.jad 檔案應包含其自身的 .jar 檔案。

- 3 安裝完後，可在**遊戲或應用程式**功能表中檢視 Java 程式，您還可在此功能表中執行選擇、執行或刪除操作。

**提示！** 您亦可使用 WAP（無線應用程式協定）服務將 Java MIDlet 下載至您的手機。請注意，使用線上服務可能需要額外付費。


# 遊戲及應用程式

## 遊戲及應用程式

GM310 手機提供了預載遊戲，可讓您在休閒時娛樂。如果您選擇下載任何其他遊戲或應用程式，下載的遊戲或應用程式將儲存在此資料夾中。


**注意：**連接至此服務時，需另行收費。請向網路提供商諮詢資料費用。

## 玩遊戲

- 1 按**功能表**  並選擇**遊戲及應用程式**。
- 2 選擇**我的遊戲及應用程式**並選擇**遊戲**。
- 3 選擇想要開始的遊戲並選擇**啟動**。


## 檢視應用程式

使用**應用程式**功能表，您可管理安裝在手機上的 Java 應用程式。您亦可刪除已下載的應用程式。

- 1 按**功能表**  並選擇**遊戲及應用程式**。
- 2 選擇**我的遊戲及應用程式**並選擇**應用程式**。
- 3 檢視並管理擁有的任何應用程式。

## 變更網絡設定檔

若要下載遊戲，您可使用**設定**設定網絡連接值。


- 1 按**功能表**  並選擇**遊戲及應用程式**。
- 2 選擇**設定**。
- 3 在此處您可以：

**網絡設定** - 您可查看設定檔和新增設定檔。

**憑證清單** - 您可查看使用 Java 應用程式的憑證清單。


# 記事簿與工具

## 新增事件至日曆

- 1 按**功能表**  並選擇**記事簿**，然後選擇**日曆**。
- 2 選擇要將事件新增至的日期。使用導覽鍵至所需的日期，或選擇**選項**和**轉到日期**，以便選擇日期。
- 3 選擇新增並向下按，以輸入事件的開始時間。向下按動並輸入事件的結束時間。
- 4 輸入事件**標題**。使用鍵盤輸入字母和數字。
- 5 再次向下按，並選擇是否要為事件設定**鬧鐘**。向左或向右按，查看可用的選項。您可設定鬧鐘在事件的開始時間響鈴，或事件開始前設定的時間期間響鈴，以便提醒您事件即將發生。
- 6 再次向下按，選擇事件是**不重複**，或是**每天**、**每星期**、**每月**或**每年**重複。您還可以選擇**使用者設定**。如果事件重複，您亦可向下捲動，為事件何時將徹底停止輸入設定至期。


- 7 選擇**完成**，您的事件將儲存至日曆中。一個方形游標將標示已存日程表的日子。

## 新增項目至待辦事項

- 1 按**功能表**  並選擇**記事簿**。
- 2 選擇**待辦事項**並選擇**新增**。
- 3 為待辦事項項目設定日期，新增備註並選擇優先等級：**高**、**中**或**低**。
- 4 透過選擇**完成**，儲存待辦事項清單項目。

**提示！** 您可以透過選擇某個項目並按**選項**和**編輯**對其進行編輯。透過選擇**完成**，確認修改。

## 新增備忘錄

- 1 按**功能表**  並選擇**記事簿**，然後選擇**備忘錄**。
- 2 選擇**新增**並鍵入您的備忘錄。
- 3 選擇**儲存**。

# 記事簿與工具

- 4 下次開啟備忘錄應用程式時，備忘錄將會顯示在螢幕上。

## 保密備忘錄

您可編寫保密備忘錄以保護自己的私隱。您可輸入安全密碼以使用此功能表。

## 日期搜尋器

日期搜尋器是一種方便快捷的工具，有助於您計算特定天數後的日期。

## 設定

**日曆** - 您可設定檢視日曆的配置值。

**透過藍芽傳送所有行程表和待辦事項** - 您可以使用藍芽將日曆和/或待辦事項中的數據從一部手機發送至其他手機。

**備份日曆及待辦事項** - 您可在插入外置記憶咭時，建立已經儲存在手機中的日曆或待辦事項清單之備份檔案。

**恢復日曆和待辦事項** - 您可在插入外置記憶咭時，重設日曆或工作之備份檔案。


**記憶體資訊** - 您可檢視與日曆、待辦事項、備忘錄和保密備忘錄相關的可用記憶體資料。

**清除全部** - 您可刪除與日曆、工作、備忘錄和保密備忘錄相關的全部數據。

## 快速選單



您可指定要儲存到快選功能表中的功能。若將常用功能儲存在快選功能表中，則只需要按對應的按鍵即可快速使用。

## 設定鬧鐘


- 1 按**功能表**  並選擇工具，然後選擇鬧鐘。
- 2 按**選項**，然後選擇新增。
- 3 向下按，並輸入想要鬧鐘響鈴的時間。
- 4 選擇鬧鐘鬧鈴的重複類型：  
**不重複、每天、星期一至星期五、星期一至星期六、假日除外或選擇日子。**

- 5 向下按並選擇鬧鐘響鈴方式：**鈴聲、震動、鈴聲及震動或依據情景模式。**
- 6 向下按以選擇鬧鐘鈴聲。按編輯並從錄音記錄或預設聲音中選擇一種聲音。
- 7 向下按，並為鬧鐘輸入名稱，或使用建議的名稱。
- 8 最後，您可將延後間隔設定為 5、10、20、30 分鐘、1 小時或關閉。
- 9 選擇**完成**。


## 使用計算機

- 1 按**功能表**  並選擇工具，然後選擇計算機。
- 2 按數字鍵，輸入數字。
- 3 對於簡單的計算，請使用導覽鍵選擇所需功能 (+, -, ×, ÷)，然後選擇 =。
- 4 對於更複雜的計算，請選擇選項以選擇相應的指令。
- 5 選擇  清除屏幕，開始新的計算。

## 使用秒錶

- 1 按**功能表**  並選擇工具，然後選擇秒錶。
- 2 選擇開始以開始計時。
- 3 如果要記錄圈數，請選擇分段。最多可儲存 20 圈。
- 4 選擇停止以停止計時。
- 5 選擇恢復在上次停止的時刻處重新啟動秒錶，或選擇重新設定重新開始計時。


## 轉換單位

- 1 按**功能表**  並選擇工具，然後選擇單位轉換器。
- 2 選擇要轉換匯率、面積、長度、重量、溫度、體積還是速度。
- 3 左右按，選擇單位，然後向下按，輸入單位數量。
- 4 向下按至單位換算方塊，並選擇要轉換至的單位量度。轉換將自動顯示在以下的行中。

**注意：**對於貨幣轉換，您首先需要根據當前匯率設定匯率。

# 記事簿與工具

## 新增城市至世界時間


- 1 按**功能表**  並選擇工具，然後選擇世界時間。
- 2 若要找出特定城市的時間，請按選項並選擇新增城市。
- 3 向下按清單或輸入城市的首字母。您也可以選擇地圖並選擇一個城市。
- 4 按選擇。

**提示！** 如果您在國外，可透過依次選擇選項和更改時區，從世界時間變更到您的時區。如上所述選擇所需的城市。

# 瀏覽器


使用瀏覽器，您可隨時獲取最新新聞和天氣預報以及體育或交通資訊。另外，瀏覽器還可讓您下載到最新的音樂、鈴聲、待機圖片及遊戲。

## 存取網絡

- 1 按**功能表**  並選擇**瀏覽器**。
- 2 若要直接存取瀏覽器主頁，請選擇**主頁**。或者，選擇**輸入網址**並鍵入所需的網址，然後點按**開啟**。

**注意：**連線至此服務和下載內容，需另行收費。請向網絡供應商諮詢資料費用。


## Yahoo

您可以存取 Yahoo 流動互聯網服務。若要存取 Yahoo 服務，請按**功能表**  並選擇 **Yahoo**。

**注意：**某些國家或地區可能無法存取 Yahoo。具體取決於網絡服務。

## 新增並存取書簽

為了方便快捷地存取喜愛的網站，您可新增書簽並儲存網頁。

- 1 按**功能表**  並選擇**瀏覽器**。
- 2 選擇**書簽**。屏幕上會顯示一個書簽清單。
- 3 若要建立新資料夾，請選擇**選項**並選擇**建立新資料夾**。為書簽資料夾輸入名稱。
- 4 若要新增書簽，請選擇**選項**並按**新增**。依次輸入書簽標題和連結。
- 5 選擇**完成**。此時，書簽將顯示於書簽清單中。
- 6 若要存取書簽，只需要選擇到書簽，然後選擇**開啟**。


## 儲存網頁

- 1 按照以上所述操作，存取所需的網頁。
- 2 選擇**選項**並選擇**儲存項目**，然後選擇**儲存此網頁**。


## 瀏覽器

- 3 為網頁輸入名稱，這樣，您可方便進行識別。
- 4 選擇**儲存**。

### 存取已儲存的網頁

- 1 按**功能表**  並選擇**瀏覽器**。
- 2 選擇**儲存的網頁**。
- 3 選擇**開啟**，連接到已儲存的頁面。


### 檢視瀏覽器記錄

- 1 按**功能表**  並選擇**瀏覽器**，然後選擇**記錄**。
- 2 最近存取的網頁標題清單會顯示。
- 3 要存取這些網頁中的一個，只要選擇所需的網頁並按**開啟**即可。

### 使用 RSS 讀取裝置

RSS (Really Simple Syndication) 是網絡 Feed 格式成員之一，用於發布經常更新的內容，如 Blog 條目、新聞標題或 Podcast。RSS 文件也稱為 **feed**、**web feed** 或**頻道**，包含來自關聯網站的內容概要或完整文字。

### 變更網頁瀏覽器設定

- 1 按**功能表**  並選擇**瀏覽器**，然後選擇**設定**。
- 2 您可選擇編輯**網絡設定**、**外觀設定**、**快取記憶**、**Cookies**、**安全**或**重設設定**。
- 3 變更設定後，按**選擇**。

# 連接

## 變更連接設定


您的網絡提供商已對您的連接設定進行設定，以便您可立即享用新手機。若要變更任何設定，請使用此功能表。

按**功能表**  並選擇**設定**，然後選擇**連接**。您可從以下選項中選擇：

**藍芽** - 設定 GM310 手機，以便使用藍芽。您可調整是否向其他裝置顯示您的手機，或搜尋手機已配對的裝置。

**USB 連接模式** - 您可在手機上選擇 USB 連接模式以用於不同場合。

## 變更您的藍芽設定

- 1 按**功能表**  並選擇**設定**，然後選擇**連接**。
- 2 依次選擇**藍芽**和**設定**。對以下選項作出變更：

**顯示我的手機** - 設定為**可見**或**可見時間為 1 分鐘**，這樣，當其他裝置搜尋藍芽裝置時便可偵測到您的手機。如果您選擇**隱藏**，當其他裝置搜尋藍芽裝置時便無法偵測到您的手機。

**我的裝置名稱** - 您可命名或重新命名您的手機在其他裝置上顯示的名稱。僅當**顯示我的手機**設為**可見**時，您的手機名稱才能顯示在其他裝置上。

**支援的服務** - 您可檢視受此藍芽手機支援的裝置清單，如耳機和免提套件。

**我的位址** - 在此檢查您的藍芽位址。

**注意：**為提高安全，我們建議您在設定手機或與其他裝置配對時，將**可見性**設為**隱藏**。對於引入的連接，無論其他裝置是否已與手機配對，均可選擇接受或拒絕連接。

## 同其他藍芽裝置配對

透過將 GM310 手機與其他裝置配對，您可設定一個密碼保護連接。這意味著配對會更安全。

- 1 檢視藍芽是否為**開啟**和**可見**。您可在**設定**功能表中選擇**顯示我的手機**，然後選擇**可見**來變更裝置的可見性。
- 2 從**藍芽**中，選擇**開啟**並選擇**搜尋新裝置**。

## 連接

- 3 GM310 手機將搜尋裝置。完成搜尋後，將在屏幕上顯示**新增**和**更新**選項。
- 4 選擇要配對的裝置，然後選擇**新增**並輸入密碼，最後選擇**確定**。
- 5 然後，手機將連接到其他裝置，且您必須在此裝置上輸入相同的通行碼。
- 6 密碼保護藍芽連接已準備就緒。

## 使用藍芽耳機


- 1 檢視藍芽是否為**開啟**和**可見**。
- 2 遵循隨耳機附帶的說明，將手機置於配對模式中並配對裝置。
- 3 GM310 手機將自動連接至藍芽耳機並切換至耳機設定檔。

## 使用藍芽發送和接收檔案

藍芽是一種發送和接收檔案的好方法，因為不需要 USB 線，且連線方便快捷。您亦可連接藍芽到手機，以接聽來電。

開始使用藍芽共用檔案前，您需要將手機與另一個藍芽裝置進行配對。有關配對裝置的更多詳情，請參閱**同其他藍芽裝置配對**。

**要開啟藍芽，請執行以下操作：**

- 1 按**功能表**  並選擇**設定**。選擇**連接**然後選擇**藍芽**。
- 2 選擇**開啟**。
- 3 選擇**關閉**以關閉藍芽。

**發送檔案：**

- 1 開啟要發送的檔案，通常為照片、影片或音樂檔案。
- 2 選擇**選項**，然後選擇**發送**，最後選擇**藍芽**。
- 3 如果尚未啟用，選擇**是**開啟藍芽。
- 4 GM310 手機將自動在範圍內搜尋其他啟用了藍芽功能的裝置。
- 5 選擇要將檔案發送至的裝置並選擇**確定**。

## 接收檔案：


- 1 接收檔案前，必須將藍芽同時設定為**開啟**和**可見**。
- 2 系統顯示一則訊息，提示您接受來自寄件者的檔案。選擇**是**接收檔案。

**提示！** 留意進度列，確保檔案已發送。

**注意：** Bluetooth® 字標和徽標屬 Bluetooth SIG, Inc. 所有，且 LG Electronics 使用任何此類標記均獲得許可。其他商標和交易名稱為他們各自所有者的商標和交易名稱。

## 將手機用作數據機

只需插入 USB 線，然後使用手機快速連接至互聯網即可。

 **警告：** 首先，請確保選擇合理的費率！否則，您可能需要在下載大量數據時（如音樂或影片）支付高額費用。

- 1 在手機功能表**設定**中選擇**連接-USB連接模式-電腦互聯網**。

- 2 將 USB 線連接到手機和電腦。
- 3 請稍候，直至在電腦上開啟快顯視窗。然後選擇**開始**以便在電腦上安裝「透過手機」軟件（稱為「透過手機」）及其驅動程式，最後遵循屏幕上的指示進行操作。
- 4 現在，您可使用網絡瀏覽器。完成後，請按一下**中斷連接**。
- 5 下次需要連接互聯網的時候，只需要插入線纜，軟件將自動啟動，您即可開始使用。

## 將手機用作大容量儲存裝置

只有在您已插入記憶咭的情況下，手機方可用作大容量儲存裝置。

- 1 在手機功能表**設定**中選擇**連接-USB連接模式-大容量儲存**。
- 2 將 USB 線連接到手機和電腦。

## 連接

- 3 將手機連接到電腦。手機將讀取：以大容量儲存裝置連接…及以「已連接到大容量儲存模式」。  
傳送期間請勿中斷連線。
- 4 所有手機檔案將自動儲存至電腦硬碟上。
- 3 選擇執行安裝程式時使用的語言並按一下確定。
- 4 遵循屏幕上的說明，完成 LG PC Suite 安裝程式精靈。
- 5 安裝完成後，LG PC Suite 圖示將顯示於桌面上。

**注意：**大型儲存裝置僅備份儲存在記憶咭而不是手機記憶體上的內容。要傳輸手機記憶體的內容（例如，通訊錄），您需要使用電腦同步來進行同步。

### 將手機與電腦同步

您可將手機與電腦保持同步，從而確保所有重要詳情與日期相匹配，同時作為重要檔案備份，讓您完全放心。

### 在電腦上安裝 LG PC Suit

- 1 轉至 [www.lgmobile.com](http://www.lgmobile.com) 網站，選擇您所在的區域及國家或地區。
- 2 選擇**產品功能表**，然後選擇**手冊及軟件**並按一下**轉至手冊及軟件下載**部分。按一下**是**以顯示 LG PC Suite 安裝程式。

### 連接手機和電腦

- 1 在手機功能表**設定**中選擇**連接- USB連接模式-PC Suite**。
- 2 將 USB 線纜連接到手機和電腦。
- 3 連接兩下位於桌面上的 LG PC Suite 圖示。
- 4 依次按**連線精靈**和 **USB**。
- 5 按一下**下一步**，然後再次按一下**下一步**，最後選擇**完成**。手機和電腦現已連接。

### 備份和還原手機資訊

- 1 在手機功能表**設定**中選擇**連接- USB連接模式-PC Suite**。

- 2 將 USB 線纜連接到手機和電腦。
- 3 按一下「備份」圖示，並選擇**備份**或**還原**。
- 4 標記要備份或還原的內容。選擇要將資訊備份至的位置或還原自其資訊的位置。按一下確定。
- 5 資訊將會備份。

## 檢視電腦上的手機檔案

- 1 在手機功能表**設定**中選擇**連接-USB連接模式-PC Suite**。
- 2 將 USB 線纜連接到手機和電腦。
- 3 按一下**內容**圖示。
- 4 所有儲存至手機上的文件、flash 內容、圖像、聲音和影片將會顯示於 LG 手機資料夾的屏幕上。

**提示！** 在電腦上檢視手機的內容，有助您整理檔案、管理文件並刪除不再需要的內容。

## 同步處理通訊錄

- 1 在手機功能表**設定**中選擇**連接-USB連接模式-PC Suite**。
- 2 將 USB 線纜連接到手機和電腦。
- 3 按一下**通訊錄**圖示。  
現在，電腦匯入並顯示儲存至智能咭和手機的所有聯絡人。
- 4 選擇**至手機**。電腦會將聯絡人匯出至手機中。
- 5 按一下**檔案**並選擇**儲存**。現在，您可選擇要儲存聯絡人的位置。

**注意：**要備份儲存至智能咭的聯絡人，請按一下位於電腦屏幕左側的智能咭資料夾。在聯絡人上按滑鼠右鍵，並選擇「選擇全部」。再次在聯絡人上按滑鼠右鍵，並選擇「複製至手機記憶體」。現在按一下位於屏幕左側的手機資料夾，顯示所有號碼。

# 連接

## 同步訊息

- 1 在手機功能表**設定**中選擇**連接-USB連接模式-PC Suite**。
- 2 將 USB 線纜連接到手機和電腦。
- 3 按一下**訊息**圖示。
- 4 所有手機訊息將顯示於屏幕的資料夾中。
- 5 使用位於屏幕頂端的工具列以編輯和重新排列訊息。

## 開始使用之前將音樂新增至手機

若要將音樂從電腦傳輸至手機，您需要具備如下設定：

- Microsoft Windows XP 或 Vista。
- Windows Media Player 10 或更高版本
- USB 線
- MicroSD 咭（如果您想要將外置記憶體用作音樂儲存體。）

## 使用 Windows Media Player 傳輸音樂

- 1 在手機功能表**設定**中選擇**連接-USB連接模式-音樂同步**。
- 2 將 USB 線纜連接到手機和電腦。
- 3 當您嘗試連接手機與電腦時，手機將讀取：音樂同步...。然後顯示「中斷連接以停止音樂同步」。
- 4 電腦將提示您啟動首選音樂管理軟件。
- 5 選擇「Window Media Player」。
- 6 轉至**同步**標籤，然後拖動您想要從手機傳輸至「同步清單」窗格中的音樂。
- 7 按一下**開始同步**圖示。將開始傳輸過程。




**警告：**請勿在傳輸期間中斷手機連接。


**注意：**音樂同步功能僅可用於同步音樂內容。

# 設定


## 變更您的情景模式

- 1 按**功能表**  並選擇**設定**。
- 2 選擇**情景模式**，然後選擇您要編輯的情景模式。
- 3 選擇**選項**並選擇**編輯**。
- 4 您可在此變更所有鈴聲、鈴聲音量及提示選項。

## 使用飛航模式

若要開啟飛航模式，請按**功能表**  然後選擇**設定**和**情景模式**。選擇**飛航模式**予以啟用。在飛航模式中，您不可撥打電話、連接至互聯網或發送訊息。

## 變更手機設定


- 1 按**功能表**  並選擇**設定**。
- 2 選擇**手機**並從以下清單中選擇。
  - 自動按鍵鎖** - 選擇按鍵自動鎖定的持續時間。
  - 觸控板震動** - 將觸控板變更為震動設定。

**語言** - 變更 GM310 的顯示語言。

**電源節省** - 選擇將原廠設定省電設定切換為**關閉**、**僅夜間**或**常開**。

**資訊** - 檢視 GM310 的技術資訊。

## 變更您的顯示設定

- 1 按**功能表**  並選擇**設定**。
- 2 選擇**屏幕**並從以下選項中選擇：

**屏幕主題** - 選擇桌面或開機/關機屏幕的主題。

**功能表式樣** - 將功能表檢視變更為**列表式樣**或**格子式樣**。

**撥號** - 調整正在撥號時的字體式樣和大小。

**字體** - 調整字體大小。

**背光燈** - 選擇背光燈的維持時間。還可使用導覽鍵調整主屏幕亮度。

**提示！** 背景燈開啟時間越長，耗費的電量就越多，這樣，手機充電將更頻繁。

# 設定

**手機主題** - 快速變更屏幕的整體外觀。

**問候語訊息** - 選擇**開啟**之後，您可編寫歡迎訊息。每當您開機時，歡迎訊息都會顯示於屏幕上。

## 變更您的日期和時間

- 1 按**功能表**  並選擇**設定**。
- 2 選擇**日期及時間**，並從以下清單中選擇：

**時間** - 您可輸入當前時間。您可將時間格式設為 24 小時或 12 小時格式。您也可以選擇某個城市的時區。


**日期** - 您可輸入當前日期。您可設定日期格式（年.月.日、日.月.年、月.日.年）。

**自動更新 日期/時間** - 選擇**開啟**，手機將自動更新日期與時間。

**夏令時間** - 選擇是否啟用夏令時間功能。您可將所選本地城市的夏令時差設定為 1 小時或 2 小時。

## 變更安全性設定

變更安全性設定，保護 GM310 和手機中重要資訊的安全性。

- 1 按**功能表**  並選擇**設定**。
- 2 選擇**安全**並從以下清單中選擇：

**PIN 碼要求** - 選擇**開啟**手機時，需要輸入密碼。

**手機鎖** - 選擇一個安全密碼以便開機時、在智能咭更換時或**立即**鎖定您的手機。

**更改密碼** - 變更 PIN 碼（如果 PIN 碼要求被設為「**開啟**」將顯示此功能表項）、PIN2 碼、安全密碼或手機追蹤密碼。

### 注意：安全密碼

安全密碼可防範手機未被授權使用。預設安全密碼被設為「0000」，同時需要提供安全密碼方可刪除所有手機條目以及啟用重設設定功能表。同時，啟動或關閉手機鎖定功能以防未被授權的使用時亦需要輸入安全密碼。您可從**安全 > 更改密碼**中變更安全密碼預設設定。


**手機遺失追蹤** - 如果手機被盜，手機會向真正所有者配置的號碼發送文字訊息。若要啟用手機遺失追蹤功能，您需要將手機遺失追蹤設為開啟，並在手機遺失追蹤設定中設定名稱、號碼、主號碼及次要號碼。預設手機遺失追蹤碼為「0000」。

手機遺失追蹤文字訊息將包含被盜手機的IMEI、目前所在位置（根據區域廣播訊息確定）及目前正在使用此手機的使用者的電話號碼。

## 檢視記憶體狀態

GM310 手機具有三種可用記憶體：手機、智能咭和外置記憶咭（您可能需要另行購買記憶咭）。

您可以使用記憶體管理確定如何使用各記憶體，且查看可用的空間。

按**功能表**  並選擇**設定**，然後選擇**記憶體管理**。您將看到GM310中記憶體的目前狀態。如果您在手機中插入外置記憶體，亦可選擇**主要儲存裝置設定**，然後選擇項目的首選儲存位置。

## 變更其他設定

**網絡** - 您可使用此功能表設定**選擇網絡**和**網絡模式**設定。您還可新增連接至**首選列表**的首選網絡。

**互聯網設定** - 此功能表顯示互聯網設定檔。透過**選項**功能表，您可新增網絡設定、刪除或編輯這些設定。但是，您可能無法刪除或編輯預設設定。

**存取點** - 此功能表可顯示存取點清單。透過使用**選項**功能表，您可新增網絡設定、刪除或編輯這些設定。但是，您可能無法刪除或編輯預設設定。

**分組數據連線** - 若選擇可使用時功能表，手機在開機時會自動註冊GPRS網絡。若選擇需要時，手機會在連接到WAP或應用程式時建立GPRS連接。

## 串流設定

若要設定不同的網絡設定以播放串流內容，則可透過使用**設定**功能表中的**串流播放設定**來設定不同的網絡設定。

# 設定

## 重設手機

使用**設定**功能表中的**重設設定**將全部設定重新設定為原廠設定。您需要安全密碼，才能啟用此功能。

根據適用法例的最大容許程度，在更新過程中流失的任何資料及數據，製造商恕不負責。軟件更新有機會令個人資料刪除，為安全起見，建議您於進行更新前先將重要的資料備份。

## 手機軟件更新

**LG Mobile 網上手機軟件更新**  
**請瀏覽 [LGmobile.com](http://www.lgmobile.com) 以取得更多資訊及使用此功能**

路徑: <http://www.lgmobile.com> 選擇國家／地區 手冊及軟體

閣下不需親臨我們的服務中心就可以方便地在網上更新您的手機軟件至最新版本。由於更新手機軟件期間，需要用戶專注於整個更新過程，所以懇請閣下在確定繼續每一個步驟之前，檢查任何操作指示及註釋。在更新過程期間，若移除 USB 線或電池，有可能會嚴重地損毀您的手機。

# 配件

您的手機有多種配件可供選用，這些配件可能需要您另行購買。您可以根據您的個人通訊要求選擇這些選項。請向您的本地經銷商查詢供應情況。



旅行充電器



電池



USB 線/  
光碟



立體聲耳機

## 注意：

- 此配件清單並未列出所有配件。請向您的本地經銷商查詢您所在地區內出售的配件清單。
- 只可用原裝 LG 配件。
- 不使用原裝 LG 配件，保養可能失效。
- 某些配件可能會因應所在市場而有所不同或沒有出售。

## 網絡服務

本手冊所述之無線電話經認可適用於 GSM 850, E-GSM 900, DCS 1800, PCS 1900, W-CDMA 網絡。

手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

## 技術資料

### 一般

產品名稱：GM310

系統：GSM 850 / E-GSM 900 /  
DCS 1800 / PCS 1900 / W-CDMA

### 環境溫度

**最高：** +55°C (放電)  
+45°C (充電中)

**最低：** -10°C

# Declaration of Conformity



LG Electronics

## Suppliers Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

### Model Name

GM310

### Trade Name

LG

# CE 0168

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 v1.3.1, EN 301 489-17 v1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1  
EN 50360:2001, EN62209-1:2006  
EN 60950-1 : 2001  
EN 300 328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob@lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

16. March, 2009

Signature of representative

## 故障排解

本章列出了您在使用手機過程中可能會遇到的一些問題。部份問題可能需要諮詢服務供應商，而絕大部份的問題都可自行輕鬆解決。

訊息	可能原因	可用解決方法
智能咭錯誤	手機中無智能咭，或插入方式不正確。	請確保智能咭正確插入。
無網絡	訊號較弱位於 GSM 網絡服務範圍外。	舉高手機面向窗口或移到開闊的位置。諮詢服務供應商，瞭解服務區域地圖。
代碼不匹配	在變更安全密碼前，您必須再次輸入以確認新密碼。兩次輸入的密碼不匹配。	聯絡服務供應商。
無法設定功能	撥號錯誤新插入的智能咭已達通話費用上限	未獲得新網絡的使用授權。查看新的限制條款。聯絡服務供應商或使用 PIN 2 碼重設限制。

訊息	可能原因	可用解決方法
無法開機	按開/關鍵時間太快 電池已耗盡 電池觸片不潔淨	按開/關鍵至少兩秒鐘。 為電池充電。檢查屏幕充電指示器。 清潔觸片。
充電錯誤	電池完全無電 不在適當溫度範圍內 接觸問題 電源無電 充電器故障 使用不當充電器 電池故障	為電池充電。 確定室溫合適，稍候再充電。 檢查電源以及與手機的連接。 檢查電池觸片，必要時進行清潔。 插入到其他插座或檢查電壓。 如果充電器沒有反應，請更換充電器。 只可使用原廠 LG 配件。 更換電池。
手機失去網絡連接	訊號太弱	自動重新連接到其他服務供應商。
號碼不淮許	固定撥號功能已開啟。	檢查設定。

# Gracenote® 使用者授權合約

20061005 版

本應用程式或裝置含 Gracenote, Inc. (美國加州 Emeryville 市) 軟件 (以下簡稱 Gracenote)。透過 Gracenote 公司的軟件 (以下簡稱 Gracenote 軟件)，本應用程式可在網上從線上伺服器 (以下簡稱 Gracenote 伺服器) 進行光碟和/或檔案辨識並取得與音樂相關的資訊，其中包括名稱、演出者、曲目和歌名資訊 (以下簡稱 Gracenote 資料)，並使用其他功能。您可使用 Gracenote 資料，但條件是：只能透過本應用程式或裝置專設的功能進行使用。

您同意，您使用 Gracenote 資料、Gracenote 軟件和 Gracenote 伺服器僅為您個人用途，並非商業用途。您同意不將 Gracenote 軟件或任何 Gracenote 資料轉讓、複製、讓與或傳送給任何第三方。**您同意，除本文明確允許的功能外，您將不擅自使用或利用 Gracenote 資料、Gracenote 軟件或 Gracenote 伺服器。**

您同意，如果您違反這些限制規定，您的非專屬授權合約，即使用 Gracenote 資料、Gracenote 軟件和 Gracenote 伺服器的授權合約將就此終止。如果您的授權合約被終止，您同意立即停止使用任何和所有 Gracenote 資料、Gracenote 軟件和 Gracenote 伺服器。Gracenote 保留其在 Gracenote 資料、Gracenote 軟件以及 Gracenote 伺服器的所有權利，其中包括各項所有權。對於您所提供的資訊，Gracenote 在任何情況下都無義務向您支付任何款項。您同意，如果您違反本協定條款，Gracenote, Inc. 可依據本協定所賦予的權利，直接以其名義行使其權利。

為統計目的，Gracenote 服務使用獨特的識別碼跟蹤各項查詢。這種隨機指定的數字識別碼的目的，是使 Gracenote 服務能夠在不涉及您任何個人資訊的情況下統計查詢的次數。有關詳情，請見 Gracenote 服務網頁中的 Gracenote Privacy Policy (私隱權政策)。

Gracenote 軟件以及 Gracenote 資料的每一項，均以「現有狀態」特許您使用。對於來自 Gracenote 伺服器中的任何 Gracenote 資料的準確性，Gracenote 不做任何陳述，亦不承擔任何明示或默示擔保。Gracenote 有權（並保留此項權利）從 Gracenote 伺服器刪除資料，或依據 Gracenote 認為有充分理由之任何原因更改資料類別。Gracenote 不擔保 Gracenote 軟件或 Gracenote 伺服器無錯誤，亦不擔保 Gracenote 軟件或 Gracenote 伺服器的運作不出現中斷。Gracenote 無義務向您提供新強化的或附加的資料類型或類別（即使 Gracenote 將來可能會提供），並可自主隨時停止各項線上服務。

**Gracenote 不承擔任何明示或默示擔保，其中包括（但不限於）對銷路、某特定目的之適用性、所有權和不侵權之默示擔保。對於您使用 Gracenote 軟件或任何 Gracenote 伺服器是否能取得任何結果，Gracenote 不做任何擔保。在任何情況下，對於任何後果性損失或附帶損失，或任何利潤損失或收入損失，Gracenote 均不承擔賠償責任。**

© Gracenote 2006



# GM310 用户指南 - 简体中文

恭喜您购买此款功能先进、外观小巧的 GM310 手机，它采用了最新的数码移动通信技术，专注于为您提供便利的操作。

视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。



# 内容

关于安全有效使用手机的准则	6	创建群组	23
开始了解您的手机	10	使用服务号码	23
安装 USIM 卡和电池	12	查看本机号码	24
存储卡	14	创建名片	24
菜单地图	15	更改联系人设置	24
主屏	16	<b>信息</b>	<b>25</b>
触式键盘提示	16	信息	25
状态栏	16	发送信息	25
使用多任务功能	17	输入文本	25
呼叫	18	英文字典模式(T9 预测模式)	26
拨打电话	18	ABC 手动模式	26
从电话本拨打电话	18	123 模式	26
接听和拒绝电话	18	设置电子邮件	26
快速拨号	18	使用新帐户发送电子邮件	27
查看通话记录	19	检索电子邮件	27
使用呼叫转接	19	信息文件夹	27
使用呼叫限制	20	管理信息	28
更改呼叫设置	20	更改文本信息设置	28
常用设置	21	更改多媒体信息设置	29
电话本	22	更改电子邮件设置	29
正在搜索联系人	22	更改其它设置	30
添加新联系人	22	<b>相机</b>	<b>31</b>
联系人选项	22	快速拍照	31
		拍照后	31
		使用快速设置	31

使用高级设置 .....	32	收听收音机.....	43
调整亮度 .....	32	录制您的收音机.....	43
更改图像大小 .....	33	使用语音备忘录.....	43
查看保存的照片 .....	33	录制语音备忘录.....	43
<b>摄像机.....</b>	<b>34</b>	发送录音 .....	44
快速摄像 .....	34	<b>我的文档.....</b>	<b>45</b>
拍摄视频后.....	34	图像.....	45
使用快速设置 .....	34	发送照片 .....	45
使用高级设置 .....	34	使用图像 .....	45
观看保存的视频 .....	35	管理图像 .....	45
<b>MP3 播放机.....</b>	<b>36</b>	删除图像 .....	46
MP3 播放机.....	36	移动或复制图像.....	46
将音乐传输到手机 .....	38	标记或删除标记图像.....	46
播放歌曲 .....	38	查看内存状态 .....	47
播放音乐时使用选项 .....	39	声音 .....	47
查看播放列表 .....	39	使用声音 .....	47
.....	40	视频.....	47
创建播放列表 .....	40	观看视频 .....	47
使用 Music ID™ 搜索歌曲信息	40	发送视频 .....	47
.....	40	游戏和应用程序.....	48
<b>多媒体.....</b>	<b>42</b>	玩游戏.....	48
使用 FM 收音机.....	42	使用游戏选项菜单.....	48
搜索电台 .....	42	Flash 内容.....	48
重置所有频道 .....	42	其它 .....	48
		我的存储卡 .....	48
		安装 Java 游戏和应用程序.....	48

# 内容

<b>游戏和应用程序</b> .....	<b>50</b>	访问保存的网页 .....	56
游戏和应用程序 .....	50	查看浏览器历史记录 .....	56
玩游戏.....	50	使用 RSS 阅读器 .....	56
查看应用程序 .....	50	更改网络浏览器设置 .....	56
更改网络设定 .....	50	<b>连接</b> .....	<b>57</b>
<b>记事簿和工具</b> .....	<b>51</b>	更改连接设置 .....	57
将事件添加到日程表中 .....	51	更改蓝牙设置 .....	57
向任务列表添加项目 .....	51	与其它蓝牙设备配对 .....	58
添加备忘录.....	51	使用蓝牙耳机 .....	58
私人备忘录.....	52	使用蓝牙发送和接收文件..	58
日期计算器.....	52	将手机用作调制解调器.....	59
设置.....	52	将手机用作数据存储设备..	60
快速菜单 .....	52	将手机与电脑同步.....	60
设置闹钟 .....	52	在计算机上安装 LG PC 套件	
使用计算器.....	53	.....	60
使用秒表 .....	53	连接手机和电脑 .....	61
换算单位 .....	53	备份和恢复手机信息 .....	61
向世界时间添加城市 .....	54	在电脑上查看手机文件.....	61
<b>浏览器</b> .....	<b>55</b>	同步电话本.....	62
访问网页 .....	55	同步信息 .....	62
Yahoo.....	55	将音乐添加到手机开始之前	
添加并访问书签 .....	55	.....	62
保存页面 .....	55		

<b>设置</b> .....	64
更改情景模式 .....	64
使用飞行模式 .....	64
更改手机设置 .....	64
更改显示设置 .....	64
更改日期和时间 .....	65
更改安全性设置 .....	65
查看内存状态 .....	66
更改其它设置 .....	66
流媒体设置.....	67
重设手机 .....	67
手机软件升级 .....	67
<b>配件</b> .....	68
<b>网络服务</b> .....	69
<b>技术参数</b> .....	69
<b>故障排除</b> .....	71
<b>Gracenote® 最终用户许可协议</b> .....	73

# 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

## 暴露在射频能量之下

### 无线电波暴露和“特定吸收率”(SAR)信息

此款 GM310 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频段中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限

值为 2W/kg，平均值超过十(10)克薄纸。

- 由 DAS4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.479 W/kg（10克），戴在身体上时，其值为 1.52 W/kg（10 克）。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6W/kg，平均值超过一(1)克薄纸，此 SAR 数据适用于各个国家/地区的居民。

## 产品保养和维护

### 警告！

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。

- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应在通风条件好的位置对手机进行充电。
- 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

## 有效的手机操作

### 电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。

# 关于安全有效使用手机的准则

- 微弱的干扰可能会影响电视、收音机、个人计算机等。行车安全查阅有关在驾驶时使用手机的本地法律法规。
- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

## 防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

## 爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- 不要在加油站内使用手机。不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

## 在飞机上

无线装置可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得地面上使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向当地的服务提供商核准。

## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 请按制造商的说明处置用过的电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

# 开始了解您的手机

## 主屏

### 左软键/右软键

执行显示屏底部所示的功能。

### 音乐控制键

- 播放音乐时：  
■◀ 跳到上一首歌曲。  
▶■ 跳到下一首歌曲。

**备注：**音乐控制键仅在音乐播放器菜单中亮起，而不是导航键中的左右键。

### 通话键

拨打电话号码并接听来电。

### 清除键

每按一下删除一个字符。



## 确认键


- 屏幕处于待机模式时：直接转到主菜单(☰图标)。
- 在菜单中：选择菜单选项并确认操作。
- 在播放音乐时：播放和暂停歌曲。

## 导航键

- 在待机模式下：  
▲ 快速菜单  
▼ 联系人列表  
▶ 信息  
◀ 情景模式
- 在菜单中：在菜单间导航。

## 结束/电源键


挂断或拒接来电。开机/关机。使用菜单时返回主屏。

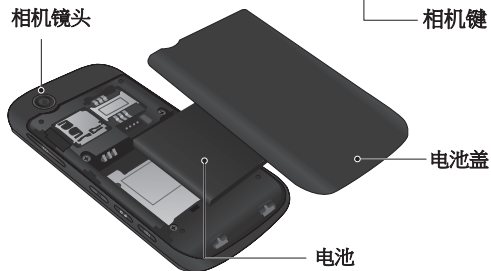

# 安装 USIM 卡和电池

## 1 卸下电池盖

推动手机电池盖，并提起电池盖。

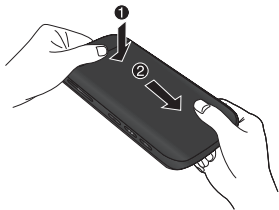

## 2 取出电池

抬起电池底边，小心将电池从电池室取出。




**警告：**手机开机时，不要取出电池，这可能会损坏手机。

## 3 安装 USIM 卡

将 USIM 卡滑进 USIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 USIM 卡，沿相反的方向轻推。

**警告：**不要在手机使用或打开过程中替换或取出 USIM 卡，否则，数据将丢失，存储卡会被损坏。

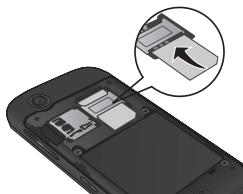

#### 4 安装电池

先将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底端，直至电池卡入到位。



#### 5 更换电池盖

将电池盖沿手机顶部滑动，直到卡入到位。

#### 6 充电

打开 GM310 侧面的充电器插槽盖。插入充电器并插入电流插座。

只要屏幕上显示“电池电量已满”信息，GM310 充电才完成。




# 存储卡

## 安装存储卡

使用存储卡，可以扩展手机的可用存储空间。

**提示：**存储卡是可选配件。

卸下电池盖。将存储卡滑入插槽，直到卡入到位。确保金色接触区域面朝下。

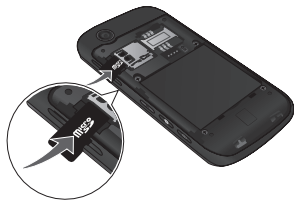


## 拔出存储卡

卸下电池盖，向手机内侧推动储存卡并快速释放，然后小心取出储存卡。

## 格式化存储卡

如果已格式化存储卡，您可以开始使用。如果您的存储卡尚未格式化，那么在开始使用之前，请先格式化。

- 1 从主屏上按**菜单** ，然后选择**设置**。
- 2 选择**内存管理器**，然后选择**外部存储器**。
- 3 按**格式**，然后输入密码，密码默认为 0000。存储卡完成格式化，现在，您可以使用了。
- 4 要在 GM310 上查看新格式化的文件夹，请按**菜单** ，然后选择**我的文档**。选择**外部存储器**。

 **警告！** 格式化卡时，所有内容将被擦除。如果不想失去存储卡中的数据，请先备份。

# 菜单地图

## 游戏和应用程序

1. 我的游戏和应用程序
2. 设置

## 呼叫

1. 通话记录
2. 通话时间
3. 数据用量
4. 通话费用
5. 呼叫转接
6. 呼叫限制
7. 固定拨号
8. 呼叫等待
9. 常用设置

## 记事簿

1. 日程表
2. 任务
3. 备忘录
4. 私人备忘录
5. 日期计算器
6. 设置

## 电话本

1. 新增
2. 搜索
3. 快速拨号
4. 群组
5. 服务号码
6. 本机号码
7. 我的名片
8. 设置

## 信息

1. 创建新消息
2. 收件箱
3. 邮箱
4. 草稿箱
5. 发件箱
6. 已发送
7. 我的文件夹
8. 模板
9. 图释
0. 设置

## 多媒体

1. 相机
2. 摄像机
3. 收音机
4. 语音备忘录

## Yahoo

1. Yahoo! Go

## MP3 播放器

1. 所有曲目
2. MusicTea™
3. Mix&Match™
4. My playlists
5. 艺术家
6. 专辑
7. 风格
8. 随机曲目
9. Music ID
0. Easy file sorting

## 工具

1. 快速菜单
2. 闹钟
3. 计算器
4. 秒表
5. 换算器
6. 世界时间
7. SIM 服务  
(视乎不同网络商)

## 浏览器

1. 主页
2. 输入地址
3. 书签
4. RSS 阅读器
5. 保存的网页
6. 历史记录
7. 设置

## 我的文档

1. 我的图像
2. 我的声音
3. 我的视频
4. 游戏和应用程序
5. Flash 内容
6. 其它
7. 外部存储器

## 设置

1. 情景模式
2. 手机
3. 显示
4. 连接
5. 日期和时间
6. 网络
7. 互联网设置
8. 存取点
9. 分组数据连接
0. 安全性
- \*. 内存管理器
- #. 流媒体设置
13. 恢复初始设定

# 主屏

GM310 配备了触式键盘。您可以确定使用轻触式按键时主屏幕上的显示内容。

## 触式键盘提示

- 无需大力按，触摸键盘非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到旁边的其它键。
- 不要使用手机套，使用金属套可能导致触式键盘不可用。
- 当滑盖关闭或屏幕指示灯关闭时，为了避免无意触碰到轻触式按键以执行任何操作，轻触保护功能将自动启用。（此情况下，即使按轻触式按键，它们也无法正常工作。）要解除“轻触保护”功能，长按手机右侧的解锁键。
- 进入选项菜单时，触式键盘会提供一个四向箭头盘。点触箭头一次，移过一个菜单项；或使用手指，以要移动的方向滑过触式键盘。



触式键盘

## 状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启用了蓝牙。

下表说明了您可能在状态栏中看到的不同图标的涵义。

图标	描述
	网络信号强度 (指示栏数不同)
	无网络信号
	GPRS 可用
	EDGE 可用
	3G 可用
	飞行模式已激活
	呼叫被转接
	正在漫游
	蓝牙已激活
	已连接 WAP 服务
	多任务可用
	闹钟已设置
	日程表
	新信息
	新语音信息
	新电子邮件
	正在使用“标准”情景模式
	正在使用“静音”情景模式

图标	描述
	正在使用“户外”情景模式
	正在使用“耳机”情景模式
	剩余电量
	电池电量空
	外部存储器
	FM 收音机
	正在播放 MP3 音乐




## 使用多任务功能

按多任务键以打开“多任务”菜单。在此，您可以查看正在运行的所有应用程序。您还可以使用左/右键访问这些应用程序，而不退出或关闭该应用程序。（某些应用程序不能使用多任务功能，例如相机和摄像机。）

如果后台中正在运行某个应用程序，状态栏中将显示

# 呼叫



## 拨打电话

- 1 确保手机已开机。
- 2 您可以打开滑盖，然后使用键盘。要删除数字，请按 。
- 3 按  开始通话。
- 4 要结束通话，请按 。

**提示！** 要输入 + 以拨打国际电话，请按住 0。

## 从电话本拨打电话

拨打在电话本中存有号码的联系人的电话非常方便。

- 1 按**菜单**  以打开主菜单。选择**电话本**，然后选择**搜索**。
- 2 使用键盘，输入您要呼叫的联系人的首字母，然后选择到所需联系人。
- 3 按  开始通话。

## 接听和拒绝电话


电话铃响起时，按接听。


电话响后，按**确定键**，按静音可静音。如果您在开会时忘记将情景模式更改为静音，这非常有帮助。

选择拒接以拒接来电。


## 快速拨号

您可以为常用联系人指定快速拨号号码。

- 1 按**菜单**  以打开主菜单。选择**电话本**，然后选择**快速拨号**。
- 2 语音邮件已预设为快速拨号 1，不能对此设置进行更改。使用导航键并选择**添加**，或通过按硬键数字来选择任何其它数字。
- 3 此时将打开您的电话本。使用导航键选择您要分配到该号码的联系人，然后选择。

要呼叫快速拨号号码，按住指定的数字，直到屏幕上显示该联系人。呼叫将自动开始，而不需要按 。

## 查看通话记录

按**菜单**  并选择**呼叫**。选择**通话记录**。

**所有通话** - 查看所有已拨电话、已接来电和未接来电的完整列表。


**未接来电** - 查看您没接到的所有电话的列表。

**拨出电话** - 查看所有已拨打的电话的列表。

**已接来电** - 查看打给您的所有电话的列表。

**提示！** 从任何通话记录中选择**选项**，然后选择**删除**以删除选定项。

## 使用呼叫转接


- 1 按**菜单**  并选择**呼叫**。
- 2 选择**呼叫转接**。
- 3 选择转接电话的情况：所有语音来电、正在通话时、无人接听时、网络或关机时转接。
- 4 选择**启动**，然后选择是要转接到语音邮件中心还是其他号码。
- 5 输入转接号码或选择**搜索**浏览**电话本**以查找转接号码。

**备注：**转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

**提示！** 要关闭所有通话转接，请从**呼叫转接**菜单中选择**全部停用**。


# 呼叫

## 使用呼叫限制

- 1 按**菜单**  并选择**呼叫**。
- 2 选择**呼叫限制**。
- 3 选择以下选项中的一项：
  - 所有拨出电话
  - 国际拨出电话
  - 国际漫游时拨打电话
  - 所有来电
  - 国际漫游时来电
  - 全部停用
- 4 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

**提示！** 从**呼叫**菜单中选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的PIN2码。启动后，仅可以使用手机拨打此号码列表中的号码。

## 更改呼叫设置

- 1 按**菜单**  并选择**呼叫**。
- 2 在此，您可以修改以下设置：
  - 通话时间** - 查看通话时长的详细信息，包括已接来电和拨出呼叫。
  - 数据用量** - 查看所有已接收和发送数据的字节数 (KB)。
  - 通话费用** - 查看“最后通话”或“所有通话”的相关费用。此服务取决于网络，某些运营商不支持此服务。
  - 呼叫转接** - 选择是否要转接呼叫。
  - 呼叫限制** - 选择要限制的呼叫。
  - 固定拨号** - 选择可从此手机拨出的号码列表。
  - 呼叫等待** - 有等待呼叫时会收到通知。

## 常用设置

**拒接来电** - 选择**打开**或**关闭**，选择拒接所有通话、电话本、群组、未知或无来电者显示。

**发送本机号码** - 选择当您呼叫对方时是否显示您的号码。（此服务取决于网络，某些运营商不支持此服务。）

**自动重拨** - 允许您在呼叫尝试失败时设置自动重拨功能。

**接听模式** - 允许您设置应答方式。您可以从**仅发送键**、**滑开**或**按任意键**中选择。

**分钟提示** - 确定在开机状态下是否每隔 1 分钟响 1 分钟的提示音。


**蓝牙接听模式** - 选择在使用蓝牙耳机时如何接听来电。选择**免提**或**手机**。

**保存新号码** - 选择此选项将保存在结束通话时不在您的电话本中的号码。

**滑盖关闭设置** - 设置关闭滑盖时是否结束通话。（结束通话/继续通话）

# 电话本


## 正在搜索联系人

- 1 按**菜单**  并选择**电话本**，然后选择**搜索**。
- 2 使用键盘输入您要呼叫的联系人姓名的第一个字母。
- 3 要在联系人及其不同电话号码间选择，请使用导航键。

或者，使用更快捷的方式…

- 1 在主屏上输入要搜索的号码，然后选择**选项**。
- 2 在选项菜单中选择**搜索联系人**。

## 添加新联系人


- 1 按**菜单**  并选择**电话本**，然后选择**新增**。
- 2 选择是将新联系人保存到**手机**还是**USIM卡**。
- 3 在提供的字段中输入资料，然后选择**完成**。

或者使用更快捷的方式：

- 1 输入要保存的号码，然后选择**选项**。
- 2 选择**保存号码**，然后选择**添加新名称**或**更新电话本**。
- 3 输入相关信息，然后选择**完成**。

## 联系人选项

查看联系人时，您可以执行多项操作。以下显示如何进入并使用“选项”菜单。

- 1 按**菜单**  并选择**电话本**，然后选择**搜索**。
- 2 选择**选项**以打开选项列表。在此，您可以：

**发送信息** - 向联系人发送信息。如果联系人有电子邮件地址，请选择是否要**发送信息**或**电子邮件**。

**发送名片** - 将联系人的详细信息作为名片发送给其他人。选择发送方式：作为**文本信息**、作为**多媒体信息**、通过**电子邮件**或**蓝牙**。

**呼叫** - 直接向您选择的联系人拨打语音电话。

**新增联系人** - 添加新联系人。

**编辑** - 更改联系人的任何详细信息。

**添加到群组** - 将联系人移动到群组。(只限存于手机电话)

**标记/取消标记** - 选择是否标记联系人或去除标记。

**查找方式** - 按**号码**或**群组**搜索联系人。


**保存到 USIM 卡** - 选择是移至还是复制到 USIM 卡或手机（取决于联系人的初始保存位置）。

**删除** - 删除联系人。只有在您确定时才选择**是**。

**文本输入** - 您可以插入、输入法、编辑语言或添加至 T9 字典。

**快速拨号** - 您可以为常用联系人指定快速拨号号码。

## 创建群组

- 1 按**菜单**  并选择**电话本**。
- 2 选择**群组**，然后选择**选项**。
- 3 选择**新增群组**。
- 4 输入新群组的名称。
- 5 按**完成**。


**备注：**如果您删除一个群组，分配至该群组的联系人不会被删除。他们将保留在您的电话本中。

**提示！** 您可以通过突出显示现有群组并选择**选项**以编辑它。选择以通过电话本向群组**添加成员**，选择**编辑群组**以及指定**群组铃声**、**重命名群组**或**删除群组**。

## 使用服务号码

您可以查看由您的服务提供商分配的服务号码 (SDN)（如果 USIM 卡支持）。此类号码包括紧急电话、查号台和语音邮件号码。

# 电话本

选择服务号码后，按  呼叫服务。


## 查看本机号码

在**电话本**菜单中选择**本机号码**可以查看您的号码。

## 创建名片

您可以通过选择**我的名片**和**添加**来创建自己的名片。输入姓名、号码、电子邮件、图像等等。

## 更改联系人设置

- 1 按**菜单**  并选择**电话本**。
- 2 选择**设置**。在此，您可以调整以下设置：

**联系人列表设置** - 选择要查看的联系人的保存位置：手机和 **USIM** 卡、手机、**USIM** 卡。您还可以选择先显示联系人的姓还是名，以及是否显示联系人图片。

**复制** - 将联系人从 **USIM** 卡复制到手机，或从手机复制到 **USIM** 卡。选择是逐个还是全部执行此操作。

**移动** - 其操作与复制相同，但联系人仅保存在移动目标位置。如果将联系人从 **USIM** 卡移动到手机，其将从 **USIM** 卡存储空间中删除。

**通过蓝牙发送所有联系人** - 通过蓝牙将所有联系人信息发送到其它手机。

**备份电话本** - 通过名片，您可以将手机中的所有电话本数据保存到外部存储器中。


**恢复电话本** - 通过名片，您可以将外部存储器中的所有电话本数据恢复到手机内存中。

**清除电话本** - 删除所有联系人。


**内存资料** - 您可以查看手机或 **USIM** 卡上的剩余存储空间。

# 信息

## 信息

GM310 包含与短信（短信服务）、多媒体信息（多媒体信息服务），以及网络服务消息相关的功能。要使用这些功能，请按**菜单**  并选择**信息**。

## 发送信息

- 1 按**菜单** ，选择**信息**，然后选择**创建新信息**。
- 2 选择**信息**以发送短信或多媒体信息。
- 3 此时将打开新信息编辑器。信息编辑器以一种的模式将短信和彩信组合在一起，可在短信模式和彩信模式间轻松切换。信息编辑器的默认设置为短信模式。
- 4 使用键盘输入信息。有关如何输入文本的详细信息，请参阅右边的**输入文本**。

- 5 选择**选项**，然后选择**插入**以添加**图像、视频、声音、符号、模板、图释、姓名与号码、添加新幻灯片、主题或更多（名片/日程表/备忘录/任务/我的名片）**。
- 6 选择**发送**。
- 7 从联系人列表中选择联系人或输入电话号码。
- 8 选择**发送**。


**警告：**图像、声音、视频、新幻灯片、主题、名片、日程表或我的名片已添加到信息编辑器，信息将自动转换成彩信模式，您需要支付相应费用。



## 输入文本


您可以使用手机键盘输入字母数字字符。例如，在电话本中存储姓名、写短信、在日程表中安排事件等，都需要输入文本。手机中可以使用以下文本输入法：笔划模式、拼音模式、英语字典模式(T9 模式)、Abc 模式和 123 模式。


# 信息

**备注：**某些字段可能只允许以一种文本输入模式输入（如联系人字段中的电话号码）。

要在文本输入字段中打开 英文字典模式，请选择选项，然后依次选择 输入法模式和英文字典模式。您可以通过按  在文本输入模式间切换。您会注意到，在显示屏右上角显示文本输入模式指示符。

要在文本输入字段中输入符号，请按 ，选择一个符号，然后选择确定 。

按  以空格结束每个单词。

要删除字符，请按 。

## 英文字典模式(T9 预测模式)

英文字典模式(T9 预测模式)使用内置字典，根据您按键的顺序识别您写入的内容。只需按与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。

**备注：**您可以通过按选项，然后选择编写语言选择不同的语言。

## ABC 手动模式


在此模式中,输入字母时,按标记着所需字母的键一次、两次、三次或更多,直到显示该字母。

## 123 模式

以每个数字一次击键的方式输入数字。在字母模式下,通过按住相应按键,也可以输入数字。


## 设置电子邮件

使用 GM310 中的电子邮件,您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件帐户非常快捷。


- 1 按菜单 ，选择**信息**，然后选择**设置**。
- 2 选择**电子邮件**，然后选择**电子邮件帐户**。
- 3 选择**添加**，然后按照说明输入所需的信息。

## 使用新帐户发送电子邮件


要发送/接收电子邮件，您应先设置电子邮件帐户（请参阅以上内容）。

- 1 按**菜单** ，选择**信息**，然后选择**创建新信息**。
- 2 选择**电子邮件**，此时将打开新电子邮件窗口。
- 3 写主题行，然后按确定。
- 4 使用键盘输入信息。

## 检索电子邮件

- 1 按**菜单** ，选择**信息**，然后选择**邮箱**。
- 2 选择您要使用的帐户。
- 3 选择**开启**，手机将连接到您的电子邮件帐户并检索新邮件。

## 信息文件夹

按**菜单**  并选择**信息**。  
GM310 上的文件夹结构无需进行说明。

**创建新信息** - 新建信息。

**收件箱** - 您接收到的所有信息将放置在**收件箱**中。在此，您可以进行回复、转发等操作。

**邮箱** - 所有收到的邮件将放置在**邮箱**中。

**草稿箱** - 如果您来不及写完一条信息，您可以将已写信息保存在此。

**发件箱** - 这是发送信息时使用的临时储存文件夹。

**已发送** - 您发送的所有信息的副本将放置在已发送文件夹中。


**我的文件夹** - 您可以将**收件箱**或**已发送**中的消息移至**我的文件夹**。此外，您还可以将**我的文件夹**中的这些消息移至初始信箱。

**模板** - 预先撰写的有用信息列表，用于快速回复。

**图释** - 您可以添加、编辑和删除图释。您可以在写信息时插入所需图释。

# 信息

## 管理信息

1 按**菜单** ，选择**信息**，然后选择**收件箱**。

2 选择**选项**，然后选择：

**回复** - 回复选定的信息。

**转发** - 将选定信息发送给其他人。

**呼叫电话** - 向发件人拨打电话。

**保存号码** - 保存信息的号码。

**删除** - 删除选定的信息。

**创建新信息** - 撰写新信息或电子邮件，不考虑发信人。

**标记/去除标记** - 标记某条信息或全部信息。

**复制并移动** - 选择将选定信息复制或移动到 USIM 卡或手机。

**过滤器** - 按所需的信息类型显示信息。

**信息资料** - 您可以检查消息的类型、主题、发件人和日期。


如果看到信息**无空间接收 USIM 卡信息**，您应从收件箱中删除一些信息，以获取内存。

如果看到信息**无空间接收信息**，您可以删除信息或保存的文件以腾出更多空间。

**提示！** 收到信息时，您可以使用**快速回复**功能快速回复。如果看到此信息，请按**选项**，然后选择**快速回复**。此选项有助于在会议时回复信息。

**提示！** 如果看到此信息，请按**选项**，然后选择**提取**。您可以从选定信息中提取信息，例如号码、电子邮件地址或网址。

## 更改文本信息设置

按**菜单** ，选择**信息**，然后选择**设置**和**文本信息**。您可以更改：

**文本信息中心** - 输入信息中心的详细信息。

**状态报告** - 选择可接收信息已发送确认信息。


**有效期** - 选择信息在信息中心中的最长保存时间。

**信息类型** - 将文本转换为**语音**、**传真**、**X.400** 或**电子邮件**。

**符号编码** - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

**将长文本另发送为** - 当您在信息字段中输入的文本超过 2 页时，请选择是以多条短信还是彩信方式发送信息。

## 更改多媒体信息设置

按**菜单** ，选择**信息**，然后选择**设置**和**多媒体信息**。您可以更改：

**检索模式** - 选择是自动还是手动下载多媒体信息，取决于您是在本地还是漫游。

**状态报告** - 选择以请求或允许发送报告。

**已读回执** - 选择以请求或允许已读回执。

**优先级** - 选择多媒体信息的优先级级别。

**有效期** - 选择信息在信息中心中的最常保存时间。


**幻灯片持续时间** - 选择幻灯片在屏幕上显示多长时间。

**创建模式** - 允许选择彩信支持的内容类型。

**发送时间** - 对发送给收件人的信息配置发送时间。多媒体信息中心将在到达发送时间后发送信息。

**网络设定** - 允许您配置网络信息（如 MMSC 和 Internet 网络设定），以发送多媒体信息。

## 更改电子邮件设置

- 1 按**菜单** ，选择**信息**，然后选择**设置**。
- 2 选择**电子邮件**，然后，您可以调整以下设置：

**电子邮件账户** - 您可以设置电子邮件帐户。

# 信息

**允许回复电子邮件** - 选择是否允许发送“读取确认”邮件。

**请求回复电子邮件** - 选择是否要请求读取确认邮件。

**检索间隔** - 选择 GM310 检查新电子邮件信息的频率。

**检索数量** - 选择一次要检索的电子邮件数目。

**转发或回复时包括消息** - 选择是否要包括原始邮件。

**包含附件** - 选择是否要包含原始附件。

**漫游时自动检索** - 选择在国际漫游时是否要自动检索信息。

**新电邮通知** - 选择在收到新电子邮件时是否需要提示。

**签名** - 创建电子邮件签名并打开此功能。

**优先级** - 选择电子邮件信息的优先级级别。

## 更改其它设置

按**菜单** ，选择**信息**，然后选择**设置**：



**语音邮件** - 添加新的语音邮件服务。有关其提供的服务的详细资料，请联系您的网络运营商。

**服务信息** - 选择是接收还是阻止服务信息。您也可以通过创建可信和不可信发件人列表来设置信息安全。

**小区服务** - 选择区域广播、频道和语言。

# 相机


## 快速拍照


- 1 轻按  打开取景器。
- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 按  拍照。


## 拍照后


拍好的照片将显示在屏幕上。  
可以使用以下选项：


**返回** - 返回至上一个菜单。

 **相册** - 查看“相册”中保存的您拍摄的照片。

 **发送** - 通过信息、电子邮件或蓝牙发送照片。

 **新建** - 立即拍摄其它照片。将保存您的当前照片。

 **用作** - 将刚刚拍摄的图像用作墙纸、联系人图像或开机或关机屏幕。（联系人图像仅可添加到手机（不是 USIM 卡）中保存的联系人中。）

 **删除** - 删除刚刚拍摄的照片。此时将出现取景器。

**选项** - 您可以重命名或编辑图像文件。

## 使用快速设置

从取景器使用导航键并选择要使用的选项。

**相册** - 选择此选项可以查看像册中的其它照片。

**视频** - 选择以从照相机切换到摄像机模式。

**拍摄** - 进行拍照。

**亮度** - 设置相机取景器中图像的亮度。

**缩放** - 使用手机左侧的音量键调节缩放。缩放功能仅在图像大小设为 640 x 480 或更低时可用。

# 相机

## 使用高级设置

从取景器中选择**设置**以打开所有高级设置选项。使用导航键在选项间导航。

### <其它>

**图像大小** - 更改照片大小。

**色彩效果** - 选择适用于您所拍摄的的照片的色调。

**白平衡** - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动**、**白炽灯**、**日光**、**荧光灯**或**阴天**中选择。

**夜间模式** - 选择**开**，在夜晚您可以拍摄出更好的照片。

**定时器** - 自拍器允许您设置按下拍摄按钮后的延迟。从**3秒**、**5秒**或**10秒**中选择。当您想在照片中占有一席时，此选项很有用！

**拍摄模式** - 在**标准**和**连拍**之间选择。连拍允许您快速地自动连续拍摄三、六、九张照片，对于拍摄移动中的物体或运动中的物体都非常有用。

**图像质量** - 控制图像的质量。质量越精细，照片将越清晰，同时，文件更大。这意味着存储器中保存的照片将越少。

### <其它>

**已用内存** - 选择是将照片保存到手机内存还是外部存储器。

**隐藏图标** - 自动或手动隐藏取景器侧面的图标。

**快门声音** - 从三种快门声音中选择一种。

**备注**：要应用所做的更改，请始终在选择新设置后按**选择**。设置菜单将自动关闭，您可以拍照了。

## 调整亮度

对比度定义图像的深浅差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。

- 1 在快速设置中选择**亮度**。
- 2 沿滚动条滑动对比度指示器，“-”对应对比度更低、更模糊的图像，“+”对应对比度更高、更清晰的图像。

## 更改图像大小

像素越高，文件越大，同时意味着将佔用更多内存。如果要在手机或存储卡中保存更多图片，请更改像素大小，使文件更小。




- 1 在**设置**中选择**图像大小**。
- 2 从数字选项中选择像素值：  
2048x1536、1600x1200、  
1280x960、640x480、  
320x240。

## 查看保存的照片

- 1 您可以在相机模式下通过选择**相册**来访问保存的照片。屏幕上将显示您的相册。
- 2 突出显示您要查看的照片，将其调到摄像册前方。
- 3 选择照片以完全打开。

# 摄像机


## 快速摄像


- 1 按住  以打开取景器。
- 2 将相机对准要录制的对象。
- 3 按住  一次，开始录制。
- 4 **REC** 将显示在取景器的底部。再次按 , 停止录制。


## 拍摄视频后


屏幕上将显示所拍摄视频的静态图像。可以使用以下选项：


**返回** - 返回至上一个菜单。

 **相册** - 按此按钮可以查看摄像册中的其它视频剪辑。将保存您的当前视频剪辑。

 **播放** - 按此选项可以播放已录制的视频。

 **新建** - 按此可以立即拍摄另一段视频。将保存您的当前视频。

 **发送** - 将视频作为信息、电子邮件发送，或通过蓝牙发送。

 **删除** - 删除刚刚录制的视频。此时将出现取景器。

**选项** - 可以重命名。

## 使用快速设置

从取景器使用导航键并选择要使用的选项。

**相册** - 选择此选项可以查看像册中的其它视频。

**相机** - 选择以从摄像机切换到相机模式。

**记录** - 允许您录制视频。

**亮度** - 设置摄像机取景器的亮度。

**缩放** - 使用手机左侧的音量键调节缩放。缩放功能仅在图像大小设为 640x480 或更低时可用。

## 使用高级设置

从取景器中选择**设置**以打开所有高级设置选项。使用导航键在选项间导航。

## <预览>

**大小** - 更改视频大小。

**色彩效果** - 选择适用于您所录制的视频的色调效果。

**白平衡** - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动**、**白炽灯**、**日光**、**荧光灯**或**阴天**中选择。

**质量** - 控制视频质量。

**长度** - 选择录音的长度。选择**信息**或**标准**。

## <其它>

**已用内存** - 选择是将视频保存到“**手机内存**”还是“**外部存储器**”。

**隐藏图标** - 隐藏取景器侧面的图标。

**语音** - 选择**静音**，录制视频而不录制声音。

**备注**：要应用所做的更改，请始终在选择新设置后按**选择**。

## 观看保存的视频

- 1 您可以在摄像机模式下通过选择**相册**来访问保存的视频。屏幕上将显示您的**摄像机**。
- 2 突出显示您要查看的视频，显示於屏幕上。
- 3 选择视频以完全打开。

# MP3 播放机

## MP3 播放机

GM310 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。

### 备注：


- 在使用音乐播放器之前，您需要将音乐文件传输到手机。
- 如果使用**音乐同步**应用程序将播放列表（组织成列表的歌曲）传输至您的手机，则您还可以浏览 **MusicTea**、**Mix&Match** 播放列表中的歌曲以及**更多类似音乐**。
- 音乐播放器支持以下编译器类型：MP3、WMA、AAC、M4A 和 RA。音乐播放器不一定支持这些文件格式的所有功能和变体。



音乐识别技术及相关数据由 Gracenote® 提供。Gracenote 是音乐识别技术和相关内容传递技术之业界标准。有关详情，请访问：[www.gracenote.com](http://www.gracenote.com)。

与 CD 和音乐相关的数据由 Gracenote, Inc. 提供；© 2006 Gracenote 版权所有。Gracenote 软件版权 © 2006 Gracenote。本产品和服务可能拥有下列一项或多项美国专利：#5,987,525; #6,061,680; #6,154,773, #6,161,132, #6,230,192, #6,230,207, #6,240,459, #6,330,593, #7,167,857 以及其他已获得的或正在申请的专利。有些服务的提供，属于 Open Globe, Inc. 授权许可范围，在此凭照使用，美国专利：#6,304,523

Gracenote 和 CDDB 是 Gracenote 的注册商标。Gracenote 标志、标志字体以及“Powered by Gracenote”标志是 Gracenote 的商标

要访问音乐播放器，按**菜单**  并选择 **MP3 播放器**。或者，您可以通过轻按手机右侧的音乐播放器键进入音乐播放器。在此，您可以选择：

**立即播放** - 仅在播放音乐时出现。选择此菜单时，您可以返回到正在运行的播放器。

**所有曲目** - 包含手机中的所有歌曲。

**MusicTea™** - MusicTea 包含 9 个 Tea Bag，这些 Tea Bag 由具有不同特性的音乐文件组成。每个 Tea Bag 与一个音乐流派相匹配。

**Mix&Match™** - Mix&Match™ 包含 6 个类别，这些类别使您可以根据活动和情况体验播放列表的多样性。您可以制作和管理练习过程中要收听歌曲的播放列表，或者具有某个特定情绪（例如浪漫）歌曲的播放列表。通过使用音乐同步的 More Like This™ 功能。

**My playlists (我的播放列表)** - 包含您所创建的任何播放列表以及**最常播放、最高评价、More like**

**this** 和 **On the go**。

**艺术家** - 允许您查看按艺术家排序的所有曲目。

**专辑** - 允许您查看按专辑排序的所有曲目。

**风格** - 允许您查看按风格排序的所有曲目。

**随机曲目** - 允许您随机播放所有歌曲。

**Music ID** - Music ID™ 是一项应用程序，它使用分析示例歌曲，然后将其与远程数据库中的歌曲进行比较。一旦应用程序完成对示例歌曲的分析，将为您提供歌曲的名称、艺术家和所选专辑。

**Easy file sorting (文件轻松排序)** - 显示所有音乐文件文件夹。在此，您可以查看手机和兼容的内存卡（如果已插入）中所有可用的音乐文件。

# MP3 播放机

**提示！** 在体验 **More Like This/Mix&Match™/MusicTea™** 等播放列表之前，您需要将 MP3 文件从您的电脑传输到您的手机设备。您可以使用 LG 电脑套件光碟中的 **音乐同步** 应用程序下载新歌曲到您的 GM310。

这些歌曲具有一项称为 **More Like This™** 的功能，该功能允许您生成一个一键式自动播放列表，它根据专辑名称或艺术家名称，或者音乐基调，将所有类似歌曲编辑在一起。这些特殊的播放列表保存在称为 **More Like This** 的文件夹的 **播放列表** 中，或者保存在 **Mix&Match™/MusicTea™** 中。您可以根据需要欣赏这些播放列表。






## 将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或 USB 线。

使用蓝牙传输音乐：

- 1 请确保双方设备都已打开蓝牙，对对方可见。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 文件发出后，您应选择是在您的手机上接受它。
- 4 文件将显示在**所有曲目**中。

## 播放歌曲

- 1 按**菜单** ，然后选择 **MP3 播放器**。
- 2 选择**所有曲目**，然后选择要播放的歌曲。选择 。
- 3 选择  暂停歌曲。
- 4 选择  跳到下一首歌曲。
- 5 选择  跳到上一首歌曲。
- 6 选择**返回**所有曲目菜单。

**提示！** 要在聆听音乐时更改音量，请使用手机左侧的音量键。

**提示！** 如果在播放音乐时按音乐播放器短按键，您可以使用 BGM 模式。在 BGM（背景音乐）模式中，您可以在使用其它功能时同时播放音乐。BGM 可以在音乐播放机屏幕上停止。

## 播放音乐时使用选项

选择**选项**，然后从下列内容中选择：

**最小化** - 隐藏音乐播放器屏幕，这样，在音乐播放时，您可以像往常一样使用手机。

**添加到播放列表** - 将当前曲目添加到播放列表。

**设为铃声** - 将当前曲目设为铃声。

**等级** - 选择当前曲目并用星数为其评级。

**资讯** - 您可以查看有关正在收听的音乐文件的详细资讯。

**音乐计时器** - 您可以将手机设置为在一段时间后停止播放音乐。

**设置** - 您可以设置不同的功能，例如随机播放、重复、音频效果、列表/全屏播放器、视觉效果和相册图像。

## 查看播放列表

1 按**菜单** ，然后选择 **MP3 播放器**。

2 选择**My playlists** (我的播放列表)并从以下选项中选择：

**最常播放** - 显示最常播放的 20 首曲目。

**最高评价** - 显示评价最高的 20 首曲目。如果不存在评级曲目，则不显示任何文件。

**More like this** - 与 More Like This™ 功能相关的播放列表。

**On the go** - 如果将曲目添加至“On the go”播放列表，请使用同步。

# MP3 播放机

## 提示！ More Like This™ 自动播放列表

More Like This™ 允许您组成一个自动播放列表，它根据专辑名称或艺术家名称，或者音乐基调，将所有类似歌曲编辑在一起。您可以根据需要欣赏并管理这些播放列表。

## 创建播放列表

- 1 按**菜单** ，然后选择 **MP3 播放器**。
- 2 选择 **My playlists** (我的播放列表)。
- 3 按**选项**，然后选择 **添加新的播放列表**，输入播放列表名称，然后按**保存**。
- 4 此时将显示新建播放列表文件夹。选择要包括在播放列表中的所有歌曲：选择这些歌曲，然后按 ；歌曲名称前面会显示一个勾号。如果意外添加了不需要的歌曲，请选择它并再次按  以取消勾选。
- 5 选择**完成**以保存播放列表。

## 使用 Music ID™ 搜索歌曲信息

使用 Music ID，您可以找到要了解的歌曲信息。选择 Music ID 的以下功能：

**TagMusic™** - 当您听到您喜欢但是不知道歌名的歌曲时，请选择 TagMusic™ 功能并从外部音乐源录制数秒钟音频。完成录音后，它会自动链接至 Music ID 识别服务器。一旦通过 Music ID 识别服务识别出歌曲，您会收到歌曲的相关信息。

**TagRadio** - TagRadio 功能可以帮助您找到在内置 FM 收音机上听到的未知歌曲的相关信息。在收听 FM 收音机时，可以选择“录音”来录制一小段音乐剪辑并将其保存。如果您有收音机录制文件，请选择文件并将其发送至 Music ID 识别服务器。一旦通过 Music ID 识别服务识别出歌曲，您会收到歌曲的相关信息。

**TagSong** - 您可以使用 TagSong 功能，在 MP3 文件的 ID3 标签中添加信息。如果将 MP3 文件发送至 Music ID 识别服务器，您会收到歌名、艺术家、专辑和流派等可用的 MP3 文件信息。它将为您带来很多益处，以便更好地管理和体验音乐集合。

**Tag History** - 此时将显示一个您最近查看过的歌曲信息记录。(Song titles/艺术家)

#### **备注：**

- 使用 Music ID™，必须网络商网络支持，而有可能因网络商某些原因受到限制而未能使用。
- 要获得最佳效果，请按安静的环境中使用 Music ID™ 功能。
- 连接此服务并传输数据时，可能会产生额外费用。查看服务提供商要求的数据付费。
- 音乐记录为 WAV 格式且不会保存在手机中。

- 如果无法识别音乐，将询问您是否重试。
- 如果在接受结果后选择“保存”选项，TagMusic/TagRadio 结果将保存在 Tag-history 中。

#### **备注：**

- 由于安装了数字版权管理 (DRM) 系统，您从互联网下载或通过多媒体信息接收的某些媒体内容可能包含一个“获取许可证”菜单，购买后方可访问。您可以从对内容具有所有权的网站获取购买版权的键。
- 音乐的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。请查看有关使用此材料的适用国家的国家立法。

# 多媒体

## 使用 FM 收音机


GM310 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

**备注：**要收听收音机，您需要插入耳机。将插头插入耳机接口。


## 搜索电台

您可以手动或自动微调电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。

### 自动微调：

- 1 按**菜单** ，选择**多媒体**，然后选择**收音机**。
- 2 选择**选项**，选择**自动扫描**，然后选择**是**。
- 3 自动查找可用的电台并分配给手机中的频道。


### 手动微调：

- 1 按**菜单** ，选择**多媒体**，然后选择**收音机**。
- 2 要进入电台，您可以使用导航键搜索，也可以使用键盘输入频率，然后选择**设置**。
- 3 选择您要保存电台的频道编号，然后选择**选择**。


**备注：**您也可以编辑保存在频道编号中的电台。

**提示！** 要提高接收质量，请伸展耳机线，它具有收音机天线的功能。

## 重置所有频道

- 1 按**菜单** ，选择**多媒体**，然后选择**收音机**。
- 2 选择**选项**，然后选择**重设所有频道**。选择**是**确认重新设置。每个频道的开始频率将返回为 87.5Mhz。

## 收听收音机

- 1 按**菜单** ，选择**多媒体**，然后选择**收音机**。
- 2 选择您要收听的电台的频道编号。

**备注：**您可以通过内置扬声器收听收音机。按**选项**，选择**通过扬声器收听**。

## 录制您的收音机

在收听收音机时，可以选择**录制**来录制一小段音乐剪辑并将其保存。选择**选项**，然后选择**转至收音机录音内容**以收听保存的所有收音机录音内容。您还可以查看**我的文档 > 外部存储卡 > 声音 > 收音机录音内容**文件夹中保存的录音。

**备注：**

- 如果您没有插入存储卡，则无法选择收音机菜单中的“录制”选项。


- 请注意，如果您的内部存储器没有足够空间（小于 10 MB），您将无法录制剪辑并保存文件。  
当您的内部存储器和外部存储器拥有足够空间时，您可以录制收音机剪辑。

**提示！** 如果已在存储卡中保存收音机录音内容，您可以选择剪辑，然后将其设置为铃声。您还可以选择要使用的剪辑部分，创建新的铃声。选择收音机录音文件，然后选择**选项 > 编辑**。使用“剪切”并将文件保存到**我的文档 > 我的声音**文件夹。

## 使用语音备忘录

使用**语音备忘录**录制语音备忘录或其它声音。

## 录制语音备忘录

- 1 按**菜单** ，选择**多媒体**，然后选择**语音备忘录**。
- 2 按中软键开始录音。

## 多媒体

- 3 选择**停止**结束录音。
- 4 按**选项**，然后选择**播放**收听录音。

**备注：**选择**选项**，然后选择**转至录音**以收听保存的所有语音备忘录。

## 发送录音

- 1 完成录音后，请选择**选项**。
- 2 选择**发送**并从**信息**、**电子邮件**或**蓝牙**中选择。如果选择**信息**或**电子邮件**，录音将被添加到信息中，您可以照常撰写或发送信息。如果选择**蓝牙**，手机可能提示您打开蓝牙。

# 我的文档

您可以将任意多媒体文件存储到**我的文档**的手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

## 图像


我的图像包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

## 发送照片

- 1 按**菜单** ，选择**我的文档**，然后选择**我的图像**。
- 2 选择要发送的照片，然后按**选项**。
- 3 选择**发送**并从**信息**、**电子邮件**或**蓝牙**中选择。
- 4 如果选择**信息**或**电子邮件**，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将图片发送至的设备。

## 使用图像

您可以选择图像以用作墙纸、开机/关机图像，甚至也可以用来识别来电。

- 1 按**菜单** ，选择**我的文档**，然后选择**我的图像**。
- 2 选择图像，然后选择**选项**。
- 3 选择**用作**并从以下选项中选择：


**墙纸** - 设为待机屏幕的墙纸。

**联系人图像** - 将图像分配给联系人列表中的某人，当其呼叫时，您的手机上会显示该图片。

**开机** - 设为开机时显示的图像。

**关机** - 设为关机时显示的图像。


## 管理图像


- 1 按**菜单** ，选择**我的文档**，然后选择**我的图像**。
- 2 选择**选项**，然后选择**排序方式**。

# 我的文档

- 3 从日期、类型或姓名中选择。


## 删除图像

- 1 按**菜单** ，选择**我的文档**，然后选择**我的图像**。
- 2 选择要删除的图像，然后按**选项**。
- 3 选择**删除**，然后选择**是**确认。

**提示！** 要快速删除我的文件中的任何文件，使用光标突出显示，然后按  键。

## 移动或复制图像


您可以在手机内存和存储卡之间移动或复制图像。您可能需要执行此操作以释放其中一个存储位置的存储空间，或保护图像不丢失。

- 1 按**菜单** ，选择**我的文档**，然后选择**我的图像**。
- 2 选择图像，然后按**选项**。

- 3 选择**移动**或**复制**。

## 标记或去除标记图像


如果您要一次移动、复制、发送或删除多张图像，首先，您需要通过打勾标记识别它们。

- 1 按**菜单** ，选择**我的文档**，然后选择**我的图像**。
- 2 选择**选项**，然后选择**标记/去除标记**。
- 3 每张图像左侧将出现一个框。如果选择了图像，框中会显示一个打勾标记以对其进行标记。
- 4 要去除标记图像，请再次选择图像以取消勾选。
- 5 标记完所有图像后，请选择选项之一以应用到所有图像。

**备注：**如果内存卡中保存了多张图像，载入时可能会有一定延迟。

## 查看内存状态

您可以查看已用存储空间和剩余存储空间。


- 1 按**菜单** ，选择**我的文档**，然后选择**我的图像**。
- 2 选择**选项**，然后选择**内存资料**。
- 3 选择**手机内存**或**外部存储器**。

**备注：**如果您没有插入存储卡，则无法选择**外部存储器**。

## 声音

**我的声音**文件夹包含**预设声音**和**录音**。

## 使用声音


- 1 按**菜单** ，选择**我的文档**，然后选择**我的声音**。
- 2 选择**预设声音**或**录音**。
- 3 选择一个声音，按**播放**试听。
- 4 选择**选项**，然后选择**用作**。

- 5 从**铃声**、**信息提示音**、**开机**或**关机**中选择。

## 视频

**我的视频**文件夹显示下载的视频以及手机中录制的视频列表。

## 观看视频

- 1 按**菜单** ，选择**我的文档**，然后选择**我的视频**。
- 2 选择视频，然后按**播放**。

## 发送视频

- 1 按**菜单** ，选择**我的文档**，然后选择**我的视频**。
- 2 选择视频，然后选择**选项**。
- 3 选择**发送**并从**信息**、**电子邮件**或**蓝牙**中选择。
- 4 如果选择**信息**或**电子邮件**，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将视频发送至的设备。

# 我的文档


**备注：**在通过多媒体信息发送视频前，可能需要调整其大小。某些视频可能太大，根本无法通过彩信发送。

## 游戏和应用程序

您可以将游戏和应用程序下载到手机中，在闲暇时为您带来乐趣。

如果从网络下载游戏，您需要先将下载的游戏安装在手机上后才能玩。

## 玩游戏

- 1 按**菜单** ，选择**我的文档**，然后选择**游戏和应用程序**。
- 2 选择**游戏**菜单。
- 3 选择一款游戏，然后按**启动**。

## 使用游戏选项菜单

在**游戏和应用程序**文件夹中，可使用以下选项：

**新建文件夹** - 在游戏和应用程序菜单下创建文件夹。

**排序方式** - 按**日期、大小或姓名**对游戏和应用程序排序。

**内存管理器** - **查看内存状态**。

## Flash 内容

**Flash 内容**文件夹包含所有预设和下载的 Flash 文件。

## 其它

**其它**文件夹用于存储非图片、声音、视频、游戏或应用程序文件。

## 我的存储卡


如果购买可选的外部 microSD 存储卡，则您可以管理更多内容。

## 安装 Java 游戏和应用程序

视服务提供商而定，所有基于 Java 的程序（如 Java 游戏）均可以下载到手机上并运行。使用蓝牙、USB 数据存储或外部存储器，您可以将 Java 程序文件从兼容的计算机传输到手机内存中。Java 程序文件的格式为 .jad 或 .jar。

如果您将 Java 程序文件保存在手机中，那么您应在使用 Java 游戏或应用程序之前先安装文件。

安装 Java 游戏和应用程序：

- 1 按**菜单** ，选择**我的文档**，然后选择**其它后外部存储器**（如果已插入外部存储器）。
- 2 选择您要安装的文件（\*.jad 或 \*.jar），然后按“安装”。

**备注：**.jad 文件应包含自己的 .jar 文件。

- 3 一旦安装，即可以在**游戏或应用程序**菜单中查看、选择、执行或删除 Java 程序。

**提示！** 您还可以使用 WAP（无线应用协议）服务在手机中下载 Java MIDlet。请注意，使用在线服务时可能会产生额外费用。


# 游戏和应用程序

## 游戏和应用程序

GM310 中预安装了多款游戏，供您在闲暇时娱乐。如果选择要下载其它游戏或应用程序，它们将保存到此文件夹中。


**备注：**连接此服务时，可能会产生额外费用。查看网络提供商要求的数据付费。

## 玩游戏

- 1 按**菜单** ，然后选择**游戏和应用程序**。
- 2 选择**我的游戏和应用程序**，然后选择**游戏**。
- 3 选择您要玩的游戏，然后选择**启动**。


## 查看应用程序

使用**应用程序**菜单，您可以管理安装在手机上的 Java 应用程序。您还可以删除下载的应用程序。

- 1 按**菜单** ，然后选择**游戏和应用程序**。
- 2 选择**我的游戏和应用程序**，然后选择**应用程序**。
- 3 查看并管理应用程序。

## 更改网络设定

要下载游戏，您可以使用**设置**设置连接网络的值。


- 1 按**菜单** ，然后选择**游戏和应用程序**。
- 2 选择**设置**。
- 3 在此，您可以：

**情景模式** - 您可以查看网络设定以及添加新的网络设定。

**证书列表** - 您可以查看使用 Java 应用程序的证书列表。

# 记事簿和工具


## 将事件添加到日程表中

- 1 按**菜单** ，选择**记事簿**，然后选择**日程表**。
- 2 选择您要添加事件的日期。您可以滚动到某日期或使用导航键选择它，还可以通过选择**选项**和**转到日期**输入具体日期。
- 3 选择**新增**，然后向按动输入事件开始时间。向下按输入并输入事件结束时间。
- 4 输入事件**主题**。使用键盘键入字母和数字。
- 5 再次向下按，选择是否要为事件设置**闹钟**。向左或向右按，查看可用选项。您可以将闹钟设为在事件开始时停止，或在事件开始前的特定时间期内停止，以提醒您该事件即将开始。
- 6 再次向下按，选择事件发生时间是否重复：**未重复**或**每天**、**每周**、**每月**或**每年**重复。此外，您也可以选择**用户设置**。如果事件为重复事件，您还可以向下按以输入

**截止日期**，事件将在该日期完全停止。


- 7 选择**完成**，您的事件将保存在日程表中。方形光标将会标记保存有事件的日期。

## 向任务列表添加项目

- 1 按**菜单** ，然后选择**记事簿**。
- 2 选择**任务**，然后选择**添加**。
- 3 为任务项设置日期、添加备注或选择优先级：**高**、**中**或**低**。
- 4 选择**完成**以保存任务列表项。

**提示！** 您可以通过选择项目对其进行编辑，按**选项**，然后按**编辑**。选择**保存**以确认您所做的修改。

## 添加备忘录

- 1 按**菜单** ，选择**记事簿**，然后选择**备忘录**。
- 2 选择**添加**，键入您的备忘录。

# 记事簿和工具

- 3 选择**保存**。
- 4 在您下一次打开备忘录应用程序时，屏幕上将显示此备忘录。

## 私人备忘录

您可以撰写私人备忘录以保护自己的隐私。您可以使用此菜单输入安全密码。

## 日期计算器

日期计算器是一款便捷的工具，有助于您计算特定天数后的日期。

## 设置

**日程表** - 您可以对配置进行设置以查看日程表。

**通过蓝牙发送所有日程表和任务** - 使用蓝牙，您可以将手机日程表和/或任务中的所有数据发送到其它手机。

**备份日历与任务** - 插入外部存储器时，您可以创建手机中保存的日程表或任务列表的备份文件。

**恢复日历与任务** - 插入外部存储器时，您可以恢复日程表或任务的备份文件。


**内存资料** - 您可以查看有关日程表、任务、备忘录和私人备忘录的可用内存的相关信息。

**全部清除** - 您可以删除与日程表、任务、备忘录和私人备忘录有关的所有数据。

## 快速菜单



您可以指定要保存在快速菜单中的功能。如果将经常使用的函数保存在快速菜单中，只需按相应的键即可使用这些功能。

## 设置闹钟


- 1 按**菜单** ，选择**工具**，然后选择**闹钟**。
- 2 按**选项**，然后选择**添加**。
- 3 向下按，输入所需闹钟时间。
- 4 选择重复类型以说明闹钟的响铃方式：未重复、每天、星期一 - 星期五、星期一 - 星期六、节假日除外或选择周日。

- 5 向下按，为闹钟选择响铃、振动、振动加响铃或根据情景模式。
- 6 向下按，选择闹钟提示音。按编辑，从录音或预设声音中选择声音。
- 7 向下按，为闹钟输入名称或保留建议的名称。
- 8 7 最后，您可以设置暂停间隔：5、10、20、30 分钟、1 小时或关。
- 9 选择**完成**。


## 使用计算器

- 1 按**菜单** ，选择**工具**，然后选择**计算器**。
- 2 按数字键输入数字。
- 3 对于简单计算，使用导航键选择您需要的函数 (+, -, ×, ÷)，然后选择 =。
- 4 对于更复杂的计算，请选择选项以选择命令。
- 5 选择  清除屏幕，开始新计算。

## 使用秒表

- 1 按**菜单** ，选择**工具**，然后选择**秒表**。
- 2 选择**开始**可启动计时器。
- 3 如果要记录时间，请选择**圈**。最多可保存 20 圈的时间。
- 4 选择**停止**结束计时器。
- 5 选择恢复从您停止的时间重新开始秒表，或选择重置返回到零。


## 换算单位

- 1 按**菜单** ，选择**工具**，然后选择**换算器**。
- 2 选择要换算的内容：货币、面积、长度、重量、温度、体积或速度。
- 3 左右按可以选择单位，然后向下按以选择单位量。
- 4 向下按到单位换算框，选择您要换算的测量单位。在下面的行中将自动显示换算值。

# 记事簿和工具

**备注：**对于货币换算，您需要首先根据当前汇率设置汇率。

## 向世界时间添加城市


- 1 按**菜单** ，选择**工具**，然后选择**世界时间**。
- 2 要查看特定城市的时间，按**选项**，然后选择添加城市。
- 3 向下按列表或输入城市的首字母。您也可以选择地图，然后，选择一个城市。
- 4 按**选择**。

**提示！** 如果出国，您可以通过选择**选项**，然后选择**更改时区**来更改世界时间的时区。如上所述，选择所需城市。

# 浏览器

轻松使用浏览器，您可以在需要时随时获取新闻、天气预报以及体育或交通信息。此外，您还可以使用浏览器下载最新音乐、铃声、墙纸和游戏。

## 访问网页

- 1 按**菜单** ，然后选择**浏览器**。
- 2 要直接访问浏览器主页，请选择**主页**。或者，选择**输入地址**并键入所需的网址，然后选择**开启**。

**备注：**连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。


## Yahoo

您可以访问 Yahoo Mobile 际网络服务。要访问 Yahoo 服务，请按**菜单** ，然后选择**Yahoo**。

**备注：**在某些国家/地区，您无法访问 Yahoo。具体取决于网络服务。

## 添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 按**菜单** ，然后选择**浏览器**。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要创建新文件夹，请选择**选项**，然后选择**新建文件夹**。输入书签文件夹的名称。
- 4 要添加一个新的书签，请选择**选项**，然后按**新增**。输入书签名称和网址。
- 5 选择**完成**。现在，您添加的书签将显示在书签列表中。
- 6 要访问书签，仅需滚动到书签，然后选择**开启**即可。


## 保存页面

- 1 如上所述，访问所需网页。
- 2 选择**选项**，然后选择**保存项目**，然后选择**保存此页面**。
- 3 为网页输入一个名称，便于您轻松识别。


# 浏览器

- 4 选择**保存**。

## 访问保存的网页

- 1 按**菜单** ，然后选择**浏览器**。
- 2 选择**保存的页面**。
- 3 选择**开启**以连接到保存的网页。


## 查看浏览器历史记录

- 1 按**菜单** ，选择**浏览器**，然后选择**历史记录**。
- 2 此时将显示一个您最近访问过网页的标题列表。
- 3 要访问其中一个网页，只需选择所需页面，按**开启**即可。

## 使用 RSS 阅读器

RSS（简易供稿）是一种网络订源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为**订源**、**网络订源**或**频道**，它包含相关网站的内容摘要或完整文本。


## 更改网络浏览器设置

- 1 按**菜单** ，选择**浏览器**，然后选择**设置**。
- 2 您可以选择编辑网络设置、外观设置、缓存、Cookies、安全性或恢复初始设定。
- 3 更改设置后，请按**选择**。

# 连接

## 更改连接设置


网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

按**菜单** ，选择**设置**，然后选择**连接**。选项包括：

**蓝牙** - 设置 GM310 以使用蓝牙。您可以调整对其它设备的可见性，或搜索您可以与之配对的设备。

**USB 连接模式** - 您可以在手机上选择用于多种用途的 USB 连接模式。

## 更改蓝牙设置

- 1 按**菜单** ，选择**设置**，然后选择**连接**。
- 2 依次选择**蓝牙**和**设置**。进行更改：

**我的设备可见性** - 设置**可见**或**可见 1 分钟**，这样其它设备在搜索蓝牙设备时可检测到您的手机。如果您选择**隐藏**，其它设备在搜索蓝牙设备时将无法检测到您的手机。

**我的手机名称** - 您可以对您的手机出现在其它设备上的名称进行命名或重命名。只有在**我的设备可见性**设置为**可见**时，您的手机名称才会显示在其它设备上。

**支持的服务** - 您可以查看设备列表，如启用了蓝牙的手机所支持的耳机和免提套件。

**我的地址** - 在此查看您的蓝牙地址。

**备注：**要增强安全性，建议您一旦签署设备或为设备配对，即将**可见性**设为**隐藏**。对于接入请求，无论对方是否与您的手机配对，您都可以选择接受或拒绝连接。

# 连接

## 与其它蓝牙设备配对

将您的 GM310 与其它设备配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否**打开且可见**。您可以在**设置**菜单中更改可见性：选择**我的设备可见性**，然后选择**可见**。
- 2 从**蓝牙**中，选择**打开**，然后选择**搜索新设备**。
- 3 GM310 将搜索设备。搜索完成时，屏幕上将显示**添加和刷新**。
- 4 选择您要与之配对的设备，选择**添加**，输入通行码，然后选择**确定**。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

## 使用蓝牙耳机


- 1 查看蓝牙是否**打开且可见**。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 GM310 将自动连接到您的蓝牙耳机并切换到耳机情景模式。

## 使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机接听电话。

开始使用蓝牙共享文件之前，您需要将您的手机与其它蓝牙设备配对。有关配对设备的详细资料，请参阅**与其它蓝牙设备配对**。

### 打开蓝牙：

- 1 按**菜单** ，然后选择**设置**。选择**连接**，然后选择**蓝牙**。
- 2 选择**打开**。
- 3 选择**关闭**以关闭蓝牙。

## 发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 依次选择**选项**、**发送**，然后选择**蓝牙**。
- 3 如果尚未启动，请选择**是**打开蓝牙。
- 4 GM310 将自动搜索范围内其它启用了蓝牙的设备。
- 5 选择您要向其发送文件的设备，然后选择**确定**。

## 接收文件：


- 1 要接收文件，您的蓝牙必须打开且可见。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。选择**是**以接收文件。

**提示！** 注意进度栏，确保文件已发送。

**备注：** Bluetooth® 字体标记及徽标由 Bluetooth SIG, Inc. 所有，LG Electronics 对此类标记的使用已得到授权。其它商标和产品名称是其各自所有者的商标。

## 将手机用作调制解调器

插入 USB 数据线，然后使用手机快速连接 Internet。

 **警告：** 首先确保您有合适的费率！ 否则如果下载大量数据（如音乐或视频），您可能产生高费用。

- 1 在手机菜单**设置**中选择**连接-USB 连接模式-PC Internet**。
- 2 将 USB 数据线连接到手机和电脑。
- 3 等到电脑上打开弹出菜单，选择**开始**在电脑上安装 Via the phone 软件（称为 Via the phone 及其驱动程序），然后按照屏幕说明执行操作。

## 连接

- 4 现在，您可以使用网络浏览器了。完成后，请单击**断开连接**。
- 5 下次要连接 Internet 时，插入数据线，软件将自动启动，您只需等待即可。

### 将手机用作数据存储设备

只有插入存储卡时，您的手机才可以用作数据存储设备。

- 1 在手机菜单**设置**中选择**连接-USB 连接模式-数据存储**。
- 2 将 USB 数据线连接到手机和电脑。
- 3 将手机连接到电脑。此时手机将显示：正作为数据存储连接…，随后将显示已以数据存储模式连接。  
传输期间不要断开连接。
- 4 所有手机文件将自动保存在电脑硬盘中。

**备注：**数据存储将仅备份保存在存储卡中的内容，而不备份手机内存中的内容。要传输手机内存中的内容（如，电话本），您需要使用“电脑同步”进行同步。

### 将手机与电脑同步

您可以使手机与电脑同步，以确保所有重要信息和日期匹配，同时做好备份。

### 在计算机上安装 LG PC 套件

- 1 转到 [www.lgmobile.com](http://www.lgmobile.com)，选择您所在区域，然后选择国家/地区。
- 2 选择**产品**菜单，选择**手册和软件**，然后单击**转到手册和软件下载**部分。单击**是**，此时将显示 LG PC 套件安装程序。
- 3 选择安装程序运行的语言，然后单击“确定”。
- 4 根据屏幕说明完成 LG PC 套件安装程序向导。

- 5 安装完成后，桌面上将显示 LG PC 套件图标。

## 连接手机和电脑

- 1 在手机菜单**设置**中选择**连接-USB 连接模式-PC Suite**(PC套件)。
- 2 将 USB 数据线连接到手机和电脑。
- 3 双击桌面上的 LG PC 套件图标。
- 4 单击**连接向导**，然后单击**USB**。
- 5 单击**下一步**，再单击**下一步**，最后单击**完成**。现在，手机与电脑已连接。

## 备份和恢复手机信息

- 1 将 USB 数据线连接到手机和电脑。
- 2 从手机的弹出菜单中选择 **PC Suite** (PC套件)。
- 3 单击备份图标，选择**备份**或**恢复**。

- 4 标记您要备份或恢复的内容。选择您要保存备份信息的位置，或恢复信息的位置。单击“确定”。
- 5 您的信息将备份。

## 在电脑上查看手机文件

- 1 在手机菜单**设置**中选择**连接-USB 连接模式-PC Suite**(PC套件)。
- 2 将 USB 数据线连接到手机和电脑。
- 3 单击**内容**图标。
- 4 手机中保存的所有文档、Flash 内容、图像、声音和视频将显示在“LG 手机”文件夹屏幕中。

**提示！** 在 PC 中查看手机内容有助于您排列文件、整理文档或删除不再需要的内容。

# 连接

## 同步电话本

- 1 在手机菜单**设置**中选择**连接-USB 连接模式-PC Suite**(PC套件)。
- 2 将 USB 数据线连接到手机和电脑。
- 3 单击**电话本**图标。  
电脑中将导入并显示 USIM 卡和手机中保存的所有联系人。
- 4 选择**至手机**。电脑将电话本导出到手机。
- 5 单击**文件**，然后选择**保存**。  
现在，您可以选择要保存电话本的位置。

**备注：**要备份保存在 USIM 卡中的电话本，请单击电脑屏幕左侧的“USIM 卡”文件夹。右键单击联系人，然后单击“全部选择”。再次右键单击联系人，选择“复制到手机内存”。现在，请单击屏幕左侧的手机文件夹，此时将显示您的所有号码。

## 同步信息

- 1 在手机菜单**设置**中选择**连接-USB 连接模式-PC Suite**(PC套件)。
- 2 将 USB 数据线连接到手机和电脑。
- 3 单击**信息**图标。
- 4 所有手机信息将显示在屏幕上的文件夹中。
- 5 使用屏幕顶部的工具栏编辑和排列信息。


## 将音乐添加到手机开始之前

要将音乐从电脑传输到手机，您需要以下设置：

- Microsoft Windows XP 或 Vista
- Windows Media Player 10 或更高版本
- USB 数据线
- MicroSD 卡（如果要将在外部存储器用作音乐存储位置。）

## 使用 Windows Media Player 传输音乐


- 1 在手机菜单**设置**中选择**连接-USB 连接模式-音乐同步**。
- 2 将 USB 数据线连接到手机和电脑。
- 3 尝试将手机连接到电脑时，手机将显示“音乐同步...”，然后显示“断开数据线连接以停止音乐同步。”。
- 4 电脑将提示您启动首选音乐管理软件。
- 5 选择 Window Media Player。
- 6 转到**同步**选项卡，然后将要传输的音乐拖动到手机中的“同步列表”窗格中。
- 7 单击**开始同步**图标。此步骤将开始传输流程。

 **警告：**文件传输过程中，请不要断开手机连接。


**备注：**音乐同步仅可用于音乐内容。

# 设置

## 更改情景模式

- 1 按**菜单**  并选择**设置**。
- 2 选择**情景模式**，然后选择您要编辑的情景模式。
- 3 选择**选项**，然后选择**编辑**。
- 4 您可以从这里更改所有铃声、其音量和提示选项。

## 使用飞行模式

要打开飞行模式，请按**菜单** ，然后选择**设置**和**情景模式**。选择**飞行模式**进行选择。飞行模式下不允许您拨打电话、连接网络或发送信息。

## 更改手机设置

- 1 按**菜单** ，然后选择**设置**。
- 2 选择**手机**，然后从列表中选择下列内容。

**自动键盘锁** - 选择键盘自动锁的时间。

**触式键盘振动** - 将触式键盘设置更改为振动。

**语言** - 更改 GM310 的显示语言。

**省电** - 选择**关**、**仅夜间**或**常开**以切换初始省电设置。

**资讯** - 查看 GM310 的技术信息。

## 更改显示设置

- 1 按**菜单** ，然后选择**设置**。
- 2 选择**显示**，然后选择：

**屏幕主题** - 选择主屏或开机/关机屏幕的主题。

**菜单样式** - 将菜单视图样式更改为**列表样式**或**网格式**。

**拨号** - 调整您键入电话号码时显示的字体样式。

**字体** - 调整字体大小。


**背景灯** - 选择背景灯持续时间。也可以使用导航键调节主屏幕亮度。

**提示！** 背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。

**手机方案** - 快速更改屏幕整体外观。

**问候语信息** - 选择开，您可以写欢迎辞。此信息将显示在开机屏幕上。

## 更改日期和时间

- 1 按**菜单** ，然后选择**设置**。
- 2 选择**日期和时间**，然后从以下列表中选择：

**时间** - 您可以输入当前时间。您可以将时间格式设为 24 小时制或 12 小时制。您可以选择一个城市作为当前时区。


**日期** - 您可以输入当前日期。您可以设定日期格式 (YYYY.MM.DD、DD.MM.YYYY、MM.DD.YYYY)。

**自动更新日期/时间** - 选择开，手机将自动更新日期和时间。

**夏令时** - 选择是否激活夏令时功能。您可以设置选定的当地城市的夏令时时差：1 小时或 2 小时。

## 更改安全性设置

更改安全性设置以保护 GM310 及重要信息。

- 1 按**菜单** ，然后选择**设置**。
- 2 选择**安全性**，然后从列表中选择下列内容：

**需要 PIN 码** - 选择开机时要请求的 PIN 码。

**手机锁** - 为以下选项选择安全码以锁定手机：**开机时**、**如果更换 USIM 卡**或**立即**。

**更改密码** - 更改 PIN 码（如果将 IPN 码请求设为“开”，将显示此菜单项）、PIN2 码、安全码或 ATMT 码。

### 备注：安全码

安全密码可防止他人未经允许使用您的手机。默认的安全密码设置为“0000”，删除所有电话记录及恢复初始设定菜单时需要安全密码。并且，开关话机锁功能以防止未经允许使用手机时，也需要安全密码。从**安全性 > 更改密码**中可以修改安全密码默认设置。

# 设置


**防盗手机追踪器** - 一旦被盗，手机将发送一条短信至真正的手机主人所配置的号码。要启动防盗手机追踪功能，您将需要将防盗手机追踪设置为开，并使用名称、主要号码和辅助号码来配置防盗追踪设置。预设防盗追踪密码为“0000”。

防盗手机追踪短信将包含有关被盗手机的相关信息：IMEI 号、目前使用该手机的人所在的位置（根据小区广播信息获取）和所用的号码。

## 查看内存状态

GM310 有三种可用存储器：手机、USIM 卡和外部存储卡（您可能需要单独购买存储卡）。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

按**菜单** ，然后依次选择**设置**、**内存管理器**。随后，您将看到 GM310 的当前内存状态。

如果在手机中插入外部存储卡，您也可以选择**主存储器设置**，然后选择项目的保存位置。

## 更改其它设置

**网络** - 使用此菜单，您可以设置**选择网络**或**网络模式**设置。此外，您还可以向**首选列表**添加要连接的可选网络。

**互联网设置文件** - 此菜单显示互联网设置文件。您可以使用**选项**菜单添加文件。但是，您不能删除或编辑预设配置。

**存取点** - 此菜单显示存取点列表。您可以使用**选项**菜单添加文件。但是，您不能删除或编辑预设配置。

**分组数据连接** - 如果选择“可用时”选项，手机将在开机时自动注册 GPRS 网络。如果选择“需要时”，GPRS 连接将仅在 WAP 或应用程序连接时建立。

## 流媒体设置

如果要设置不同的网络设置以播放流媒体内容，您可以使用**设置**菜单中的**流媒体设置**设置网络。

## 重设手机

使用**设置**中的**恢复初始设定**将所有设置重设为出厂设置。要启动此功能，您需要安全密码。

## 手机软件升级

### LG 手机软件网上更新

更多的功能和相关信息请查阅网站：[LGmobile.com](http://lgmobile.com)

**具体途径:** <http://www.lgmobile.com> - **选择地区 - 选择国家 - 手册&软件**

此功能能将您的手机软件升级到最新版本，网上操作更加便利，免去您拜访售后的麻烦。

手机软件更新时请留意整个更新过程，确保在更新过程的每一步都仔细阅读过说明和注意事项。

请注意不要在升级过程中拔掉 USB 线或电池，这会严重危害您的手机。

在升级过程中产生的数据丢失，厂商不负有任何责任，建议您把重要信息进行备份。

## 配件

有多种配件可用于您的手机，可单独购买。您可以根据个人的通信要求选择这些配件。关于配件的供应情况，请咨询本地经销商。



旅行充电器



电池



USB  
线/光碟



立体声耳机

### 备注：

- 此配件列表并不完整。请咨询您的当地经销商，获取您所在区域可用配件的完整列表。
- 务必使用原装 LG 配件。否则可能导致保修失效。
- 市场不同，部分配件可能有所不同或无法使用。

## 网络服务

本指南中描述的无线手机适用于 GSM 850、E-GSM 900、DCS 1800、PCS 1900 和 W-CDMA 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

## 技术参数

### 标准

**产品名称:** GM310

**系统:** GSM 850 / E-GSM 900 /  
DCS 1800 / PCS 1900 /  
W-CDMA

### 外部环境

**最高温度:** +55°C (放电),  
+45°C (充电)

**最低温度:** -10°C

# Declaration of Conformity



## Suppliers Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

### Model Name

GM310

### Trade Name

LG

# CE 0168

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 v1.3.1, EN 301 489-17 v1.2.1, EN 301 489-24 V1.3.1

EN 301 511 V9.0.2

EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1

EN 50360:2001, EN62209-1:2006

EN 60950-1 : 2001

EN 300 328 V1,7,1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Ballfour House, Churchfield Road, Wallon-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob@lge.com

Name

Issued Date

Seung-Hyoun, Ji / Director

16, March, 2009

  
Signature of representative

# 故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。对于某些问题,您可能需要致电服务提供商,但是大部分问题,您都可以执行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中无 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
无网络连接	信号弱 不在 GSM 网络中	移到靠近窗户或空旷地区的较高位置。 检查服务提供商覆盖图。
代码不匹配	要更改安全码,您需要在输入后再确认一次新的安全码。两次输入的代码不匹配。	请与提供商联系。
无法设置功能	服务提供商不支持或需要注册	请与提供商联系。
无法拨打电话	拨号错误 插入的新 SIM 卡达到尝试次数上限	新网络未获得授权。查看新的限制。与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按开/关键时间过短 电池电量空 电池触点脏	请按开/关键至少两秒钟。为电池充电。检查显示屏上的充电指示灯。 清洁触点。

## 故障排除

信息	可能原因	可行解决措施
充电错误	电池电量空 温度超出范围 触点问题 无电源电压 充电器故障 错误充电器 电池故障	为电池充电。 确保外部环境温度适当, 稍等片刻,然后重新充电。 检查电源,连接到手机。检 查电池触点,如果需要,请清洁。 插入其它插口,或检查电压。 如果充电器不发热,请替换。 请仅使用正品 LG 配件。 替换电池。
手机无网	信号太弱	将自动重新连接到其它服务 提供商。
不允许输入号码	已打开固定拨号功能。	检查设置。

# Gracenote® 最终用户许可协议

20061005 版

本应用程序或设备含 Gracenote, Inc. (美国加州 Emeryville 市) 软件 (以下简称 Gracenote)。透过 Gracenote 公司的软件 (以下简称 Gracenote 软件), 本应用程序可在网上从在线服务器或嵌入式数据库 (以下统称 Gracenote 服务器) 进行光盘和/或文件识别并取得与音乐相关的信息, 其中包括名称、艺术家/演出者、曲目和歌名信息 (以下简称 Gracenote 数据), 并使用其它功能。您可使用 Gracenote 数据, 但条件是: 只能通过本应用程序或设备专设的最终用户功能进行使用。您同意, 您使用 Gracenote 数据、Gracenote 软件和 Gracenote 服务器仅为您个人用途, 并非商业用途。您同意不将 Gracenote 软件或任何 Gracenote 数据转让、复制、让与或传送给任何第三方。您同意, 除本文明确允许的功能外, 您将不擅自使用或利用 Gracenote 数据、Gracenote 软件或 Gracenote 服务器。

您同意, 如果您违反这些限制规定, 您的非专属许可证, 即使用 Gracenote 数据、Gracenote 软件和 Gracenote 服务器的许可证将就此终止。如果您的许可证被终止, 您同意立即停止使用任何和所有 Gracenote 数据、Gracenote 软件和 Gracenote 服务器。Gracenote 保留其在 Gracenote 数据、Gracenote 软件以及 Gracenote 服务器的所有权利, 其中包括各项所有权。对于您所提供的信息, Gracenote 在任何情况下都无义务向您支付任何款项。您同意, 如果您违反本协议规定, Gracenote, Inc. 可依据本协议所赋予的权利, 直接以其名义行使其权利。为统计目的, Gracenote 服务使用独特的标识符跟踪各项查询。这种随机指定的数字标识符的目的, 是使 Gracenote 服务能够在不涉及您任何个人信息的情况下统计查询的次数。有关详情, 请见 Gracenote 服务网页中的 Gracenote Privacy Policy (隐私权政策)。

## Gracenote® 最终用户许可协议

Gracenote 软件以及 Gracenote 数据的每一项，均以“现有状态”特许您使用。对于来自 Gracenote 服务器中的任何 Gracenote 数据的准确性，Gracenote 不做任何陈述，亦不承担任何明示或默示担保。Gracenote 有权（并保留此项权利）从 Gracenote 服务器删除数据，或根据 Gracenote 认为有充分理由之任何原因更改数据类别。Gracenote 不担保 Gracenote 软件或 Gracenote 服务器无错误，亦不担保 Gracenote 软件或 Gracenote 服务器的运作不出现中断。Gracenote 无义务向您提供新强化的或附加的数据类型或类别（即使 Gracenote 将来可能会提供），并可自主随时停止各项服务。

Gracenote 不承担任何明示或默示担保，其中包括（但不限于）对销路、某特定目的之适用性、所有权和不侵权之默示担保。对于您使用 Gracenote 软件或任何 Gracenote 服务器是否能取得任何结果，Gracenote 不做任何担保。在任何情况下，对于任何后果性损失或附带损失，或任何利润损失或收入损失，Gracenote 均不承担赔偿责任。

© Gracenote 2006

# GM310 User Guide - English

Congratulations on your purchase of the advanced and compact GM310 phone by LG, designed to operate with the latest digital mobile communication technology.

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.



# Contents

<b>Guidelines for safe and efficient use</b> ..	<b>6</b>
<b>Getting to know your phone</b> .....	<b>11</b>
<b>Installing the USIM and battery</b> .....	<b>13</b>
<b>Memory card</b> .....	<b>15</b>
<b>Menu map</b> .....	<b>16</b>
<b>Your home screen</b> .....	<b>17</b>
Touchpad tips .....	17
The status bar .....	18
Using the Multitasking function.....	18
<b>Calls</b> .....	<b>19</b>
Making a call.....	19
Making a call from your contacts.....	19
Answering and rejecting a call.....	19
Speed dialling.....	19
Viewing your call logs.....	20
Using call divert .....	20
Using call barring.....	21
Changing the call settings .....	21
Common settings .....	22
<b>Contact</b> .....	<b>23</b>
Searching for a contact.....	23
Adding a new contact .....	23
Contact options .....	23
Creating a group.....	24
Using service dial numbers .....	24
Viewing your own number .....	25
Creating a business card.....	25
Changing your contact settings .....	25
<b>Messaging</b> .....	<b>26</b>
Messaging .....	26
Sending a message .....	26
Entering text.....	26
Text input mode using the keypad ..	27
Setting up your email .....	27
Sending an email using your new account.....	27
Retrieving your email .....	27
Message folders .....	28
Managing your messages .....	28
Changing your text message settings .....	29
Changing your multimedia message settings .....	30
Changing your email settings .....	30
Changing your other settings.....	31
<b>Camera</b> .....	<b>32</b>
Taking a quick photo.....	32
After you've taken your photo.....	32
Using the quick settings .....	32
Using the advanced settings.....	33

Adjusting the brightness.....	34	Using the Voice recorder .....	45
Changing the image size.....	34	Recording your voice memo .....	45
Viewing your saved photos.....	34	Sending a voice recording.....	45
<b>Video camera .....</b>	<b>35</b>	<b>My stuff .....</b>	<b>46</b>
Shooting a quick video.....	35	My Images .....	46
After you've shot your video .....	35	Sending a photo .....	46
Using the quick settings .....	35	Using an image .....	46
Using the advanced settings.....	36	Organising your images .....	47
Watching your saved videos.....	36	Deleting an image.....	47
<b>MP3 Player .....</b>	<b>37</b>	Moving or copying an image .....	47
MP3 Player.....	37	Marking and unmarking images .....	47
Transferring music onto your phone	39	Checking your memory status .....	48
Playing a song.....	39	My Sounds.....	48
Using options while playing music ...	40	Using a sound .....	48
Viewing your playlist .....	40	My Videos .....	48
Creating a playlist .....	41	Watching a video .....	48
Search for song information with Music		Sending a video clip.....	49
ID™ .....	41	Games and Applications.....	49
<b>Multimedia .....</b>	<b>43</b>	Playing a game.....	49
Using the FM radio.....	43	Using the games options menu .....	49
Searching for stations .....	43	Flash contents .....	50
Reset all channels.....	44	Others.....	50
Listening to the radio .....	44	My memory card .....	50
Recording your radio.....	44	Installing a Java game & application	50

# Contents

<b>Games &amp; Apps</b> .....	<b>51</b>	Saving a page.....	57
Games & Apps.....	51	Accessing a saved page.....	57
Playing a game.....	51	Viewing your browser history.....	57
Viewing applications .....	51	Using RSS reader.....	57
Changing the network profile.....	51	Changing the web browser settings.....	57
<b>Organiser &amp; Tools</b> .....	<b>52</b>	<b>Connectivity</b> .....	<b>58</b>
Adding an event to your calendar ....	52	Changing your connectivity settings.....	58
Adding an item to your to do list .....	52	Changing your Bluetooth settings ....	58
Adding a memo .....	53	Pairing with another Bluetooth device	.....
Secret memo.....	53	.....	59
Date finder .....	53	Using a Bluetooth headset.....	59
Settings.....	53	Sending and receiving your files using	Bluetooth.....
Quick menu.....	53	.....	59
Setting your alarm .....	54	Use your phone as a modem.....	60
Using your calculator .....	54	Use your phone as a mass storage	device .....
Using the stopwatch .....	54	.....	61
Converting a unit .....	55	Synchronise your phone with your PC	.....
Adding a city to your World time .....	55	.....	61
<b>Browser</b> .....	<b>56</b>	Installing LG PC Suite on your com-	puter .....
Accessing the web.....	56	.....	61
Yahoo.....	56	Connecting your phone and PC .....	62
Adding and accessing your bookmarks	.....	Backing up and restoring your phone's	information.....
.....	56	.....	62
		Viewing your phone files on your PC	62

Synchronising your contacts.....	63
Synchronising your messages.....	63
Adding music to your handset before you get started .....	64
Transferring music using Windows Media Player .....	64
<b>Settings .....</b>	<b>65</b>
Changing your profiles .....	65
Using flight mode.....	65
Changing your phone settings .....	65
Changing your display settings .....	65
Changing your date & time.....	66
Changing your security settings.....	66
Viewing memory status.....	67
Change your other settings .....	67
Streaming settings.....	68
Resetting your phone .....	68
Software Upgrade .....	69
<b>Accessories .....</b>	<b>70</b>
<b>Network service .....</b>	<b>71</b>
<b>Technical data .....</b>	<b>71</b>
<b>Trouble Shooting .....</b>	<b>73</b>
<b>Gracernote® End User License Agree- ment .....</b>	<b>75</b>

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information  
This mobile phone model GM310 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.479 W/kg (10g) and when worn on the body is 1.52 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.

# Guidelines for safe and efficient use

- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

### **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

### **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### **Potentially explosive atmospheres**

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### **In aircraft**

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

### **Children**

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### **Emergency calls**

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

# Guidelines for safe and efficient use

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Getting to know your phone

## Main screen

## Left soft key/ Right soft key

Performs the function indicated at the bottom of the display.

## Music Control key

- While playing music:
  - ⏮ Skip to the previous song.
  - ⏭ Skip to the next song.

**Note:** Music control keys only light in music player menu in stead of left and right key in navigation keys.

## Call key

Dials a phone number and answers incoming calls.

## Clear key

Deletes a character with each press.



## Confirm key

- When the screen is idle: Go to the main menu directly. (☐ icon)
- In menu: Selects menu options and confirms actions.
- While playing music: Play and pause the song.

## Navigation keys

- In standby mode:
  - ⬆ Quick menu
  - ☑ Contacts list
  - Messaging
  - ◀ Profiles
- In menu: Navigates between menus.

## End/Power key

Ends or rejects a call.  
Turns the phone on/off.  
Returns to the home screen when you use the menu.

# Getting to know your phone



Headset connector

Volume key

- When the screen is idle:  
Controls the volume of key tone.
- During a call: Controls the volume of the earpiece.
- When playing a BGM track:  
Controls the volume of music.



Charger, USB Cable,  
Speaker connector

**TIP:** To connect the USB cable, wait until the phone has powered up and has registered to the network.


**Note:** Speaker connector can be used for listening sounds (Music player/FM radio) only.

Music player key

Multitask /  
Lock & Unlock Key

Camera key

Camera lens

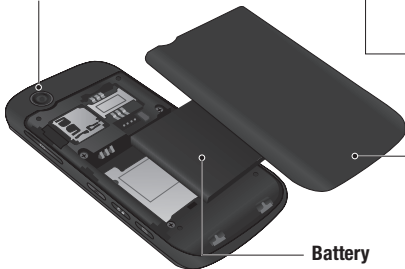


Battery cover

Battery

# Installing the USIM and battery

## 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.

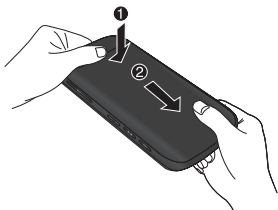

## 2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.




**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the reverse direction.

**WARNING:** Do not replace or remove the USIM card while your phone is being used or turned on, or data may be lost or the USIM card might be damaged.

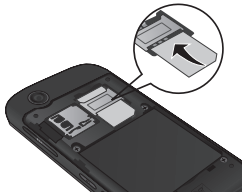

# Installing the USIM and battery

## 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



## 5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

## 6 Charging your phone

Pull open the cover of the charger socket on the side of your GM310. Insert the charger and plug into a mains electricity socket. Your GM310 will need to be charged until a message reading "Battery full" appears on screen.




# Memory card

## Installing a memory card

You can expand the memory available on your phone using a memory card.

**Note:** A memory card is an optional accessory.

Remove the battery cover. Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.

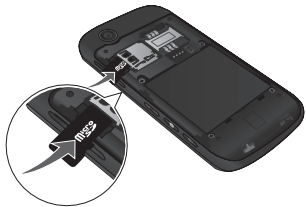




## Removing a memory card

Remove the battery cover and carefully remove the memory card by gently pushing it in to the phone and quickly releasing it.

## Formatting the memory card

Your memory card may already be formatted. If your memory card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen press **Menu**  then select **Settings**.
- 2 Choose **Memory manager** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your memory card will be formatted and ready to use.
- 4 To view the new formatted folders on your GM310 press **Menu**  and select **My stuff**. Choose **My memory card**.

 **WARNING!** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

# Menu map

## Games & Apps

1. My games & apps
2. Settings

## Calling

1. Call logs
2. Call durations
3. Data volume
4. Call costs
5. Call divert
6. Call barring
7. Fixed dial numbers
8. Call waiting
9. Common settings

## 30 Organiser

1. Calendar
2. To do
3. Memo
4. Secret memo
5. Date finder
6. Settings

## Contacts

1. Add new
2. Search
3. Speed dials
4. Groups
5. Service dial numbers
6. Own number
7. My business card
8. Settings

## Messaging

1. Create new message
2. Inbox
3. Mailbox
4. Drafts
5. Outbox
6. Sent items
7. My folders
8. Templates
9. Emoticons
0. Settings

## Multimedia

1. Camera
2. Video camera
3. FM radio
4. Voice recorder

## Yahoo

1. Yahoo! Go

## MP3 Player

1. All tracks
2. Music Tea™
3. Mix&Match™
4. My playlists
5. Artists
6. Albums
7. Genres
8. Shuffle tracks
9. Music ID
0. Easy file sorting

## Tools

1. Quick menu
  2. Alarms
  3. Calculator
  4. Stopwatch
  5. Converter
  6. World time
  7. SIM services\*
- \*This feature depends on SIM and the network services.

## Browser

1. Home
2. Enter address
3. Bookmarks
4. RSS reader
5. Saved pages
6. History
7. Settings

## My stuff

1. My images
2. My sounds
3. My videos
4. Games & apps
5. Flash contents
6. Others
7. My memory card

## Settings

1. Profiles
2. Phone
3. Screen
4. Connectivity
5. Date & Time
6. Network
7. Internet profiles
8. Access points
9. Packet data conn.
0. Security
- \*. Memory manager
- #. Streaming settings
13. Reset settings

## Your home screen

Your GM310 has a touchpad on the slide. You can determine what you see on the main screen using the touch keys.

### Touchpad tips

- There's no need to press too hard, the touchpad is sensitive enough to pick up on a light touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys around it.
- Don't cover the phone with a case or cover as the touchpad will not work with any material covering it.
- When the slide is closed or the screen light is off, to prevent indiscreet action of the touch keys, the touch protection function is automatically enabled. (In this case, the touch keys will not work even if they are pressed.) To disable touch protection, press and hold the lock key on the right hand side of the phone.

- When you enter an options menu, the touchpad will provide a four way arrow pad. Either touch the arrows to move through a menu one item at a time, or slide your finger across the touchpad in the direction you want to move.

















Touchpad












# Your home screen

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth connection is active.

The table below explains the meaning of icons you're likely to see in the status bar.


Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	GPRS available
	EDGE available
	3G available
	Flight mode is activated
	Calls are diverted
	Roaming service
	Bluetooth® is activated
	WAP service is connected
	Multitasking available
	An alarm is set
	Schedule
	New message

Icon	Description
	New voice message
	New Email
	Normal profile in use
	Silent profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty
	External memory
	FM radio
	MP3 music playing

## Using the Multitasking function




Press the multitasking key to open the multitasking menu.

From here you can view all the applications you have running. You can also access them by using left/right key and selecting the center key without exiting or closing the application. (Some applications such as camera and video camera can not use the multitasking function.)

When you have an application running in the background,  will appear in the status bar.

# Calls



## Making a call

- 1 Make sure your phone is on.
- 2 You can use the keypad after opening the slide. To delete a digit press .
- 3 Press  to begin the call.
- 4 To end the call, press  or slide the cover closed.

**TIP!** To enter + when making an international call, press and hold 0.

## Making a call from your contacts

It's easy to call anyone whose number you have stored in your contacts.

- 1 Press **Menu**  to open the main menu. Select **Contacts**, then select **Search**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the contact.
- 3 Press  to begin the call.

## Answering and rejecting a call


When your phone rings, press **Accept** to answer the call.

While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Select **Reject** in order to reject an incoming call.


## Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Menu**  to open the main menu. Select **Contacts**, then select **Speed dials**.
- 2 Your voicemail is preset to speed dial 1 and you cannot change this. Select any other number either by using the navigation keys and selecting **Add** or by pressing the hard key number.

# Calls

- 3 Your contacts will open. Select the contact you'd like to assign to that number using the navigation keys then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will begin automatically and there is no need to press .

## Viewing your call logs

Press **Menu**  and select **Calling**. Choose **Call logs**.

**All calls** - View a complete list of all your dialled, received and missed calls.


**Missed calls** - View a list of any calls you have missed.

**Dialled calls** - View a list of all the numbers you have called.

**Received calls** - View a list of all the numbers that have called you.

**TIP!** From any call log select **Options** and then **Delete to** delete selected items.


## Using call divert

- 1 Press **Menu**  and select **Calling**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer, when you are out of reach.
- 4 Choose **Activate** and select whether to divert to voice mail, or to other number.
- 5 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

**Note:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call divers, choose **Deactivate all** from the **Call divert** menu.

## Using call barring

- 1 Press **Menu**  and select **Calling**.
- 2 Select **Call barring**.
- 3 The following options are available:

**All outgoing**

**Outgoing international**

**Outgoing international calls  
except home country**

**All incoming**


**Incoming when abroad**

**Deactivate all**

- 4 Enter the call barring password.  
Please check with your network operator for this service.

**TIP!** Select **Fixed dial numbers** from the **Calling** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

## Changing the call settings

- 1 Press **Menu**  and select **Calling**.
- 2 From here you can amend the settings for:

**Call durations** - View details of how long you have spent on your calls both received and dialled.

**Data volume** - View the amount in kilobytes of all your received and sent data.

**Call costs** - View the charges applied to your last call or all calls. This service is network dependent, some operators are unable to support this.

**Call divert** - Choose whether to divert your calls.

**Call barring** - Select which calls you would like to be barred.

**Fixed dial numbers** - Choose a list of numbers that can be called from your phone.

**Call waiting** - Be alerted when you have a call waiting.

# Calls

## Common settings

**Call reject** - Select **Off** or **On** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.

**Send my number** - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)

**Auto redial** - Allows you to set the auto redial function when a call attempt has failed.

**Answer mode** - Allows you to set the answering method. You can choose from **Press send key**, **Slide up** or **Press any key**.

**Minute minder** - Determines whether to sound a tone every 1 minute when you are on the phone.


**BT answer mode** - Choose how to answer a call when using a Bluetooth headset. Select **Hands-free** or **Handset**.

**Save new number** - Selecting this option will save numbers that are not already in your contacts upon ending the call.

**Slide close setting** - choose what happens when you close the slide during a call. Choose from **End call** or **Continue call**.

# Contact


## Searching for a contact

- 1 Press **Menu**  and select **Contacts** then choose **Search**.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Or, using the slightly quicker method...

- 1 Enter the number you wish to search on the home screen and select **Options**.
- 2 Choose **Search contacts** in option menu.

## Adding a new contact


- 1 Press **Menu**  and select **Contacts** then choose **Add new**.
- 2 Choose whether to store your new contact on your **Handset** or **USIM** card.
- 3 Enter the information you want in the fields provided and select **Done**.

Or to use a slightly quicker method...

- 1 Enter the number you wish to store and press **Options**.
- 2 Choose **Save number**, and choose either **New contact** or **Update contact**.
- 3 Enter the relevant information and select **Done**.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu.

- 1 Press **Menu**  and select **Contacts** then choose **Search**.
- 2 Select **Options** to open the list of options. From here you can:

**Send message** - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

**Send business card** - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, **Email** or via **Bluetooth**.

# Contact

**Make call** - Directly make voice call to a contact you choose.

**Add new contact** - Add a new contact.

**Edit** - Change any of the contact's details.

**Add to group** - Add a contact to a group.

**Mark/Unmark** - Choose whether to mark a contact or unmark.

**Search by** - Search a contact by **Number** or **Group**.


**Save to USIM** - Choose to move or copy to the USIM card or phone (depending on where you originally saved the contact).

**Delete** - Delete the contact. Select **Yes** only if you are sure.

**Text input** - You can insert symbol a contact, change writing method or language and add a word to dictionary.

**Speed dials** - You can assign a frequently-called contact to a speed dial number.

## Creating a group


- 1 Press **Menu**  and select **Contacts**.
- 2 Select **Groups** and choose **Options**.
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Press **Done**.

**Note:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

**TIP!** You can edit an existing group by highlighting it and selecting **Options**. Choose to **Add member** to the group from your contacts, select **Edit group** and assign a **Group ringtone**, **Rename** the group or **Delete** the group.

## Using service dial numbers

You can view the list of Service Dial Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include emergency, directory enquiries and voicemail numbers. After selecting

a service number, press  to dial that service.

## Viewing your own number

Select **Own number** in the **Contacts** menu to view your number.

## Creating a business card

You can create your own business card by selecting **My business card**, then **Add**. Enter your name, number, email address, image and etc.

## Changing your contact settings

- 1 Press **Menu**  and select **Contacts**.
- 2 Select **Settings**. From here you can adjust the following settings:

**Contact list settings** - Choose whether to view contacts saved to both your **Handset & USIM**, **Handset only** or **USIM only**. You can also select to show the first name or last name of a contact first, and to show a contact picture.

**Copy** - Copy your contacts from your USIM card to your handset or

from your handset to your USIM card. Choose to do this one by one, or all together.

**Move** - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to. If you move a contact from the USIM card to the handset it will be deleted from the USIM card memory.

**Send all contacts via Bluetooth** - Send all contacts information to another handset by Bluetooth.

**Backup contacts** - You can save all the phonebook data in the handset to an external memory card by the form of vcard.

**Restore contacts** - You can restore all the phonebook data in an external memory card to the phone memory by the form of vcard.

**Clear contacts** - Delete all your contacts.


**Memory info.** - You can check how much memory you've got left on your handset or your USIM card.

# Messaging

## Messaging

Your GM310 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages. To use these functions, press **Menu**  and select **Messaging**.

## Sending a message


- 1 Press **Menu** , select **Messaging** and choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS in one intuitive mode that is easy to switch between. The default setting of the message editor is SMS mode.
- 4 Enter your message using the keypad. See **Entering text** on the right for more information on how to enter text.

- 5 Select **Options** and choose **Insert** to add an **Image, Video, Sound, Symbols, Template, Emoticon, Name & Number, New slide, Subject** or **More (Business card/Schedule/Memo/To do/My business card)**.

- 6 Choose **Send**.

- 7 Choose a contact from the list of contacts or enter the phone number.

- 8 Select **Send**.

 **WARNING:** Image, Sound, Video, New slide, Subject, Business card, Schedule or My business card is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

## Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the

calendar all require entering text. The following text input methods are available in the phone: T9 mode, Abc mode, and 123 mode.


**Note:** Some fields may allow only one text input mode (e.g. telephone number in contact fields).

### Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to T9 mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers.

### Setting up your email


You can stay in touch on the move using email on your GM310. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu**  , select **Messaging** and choose **Settings**.
- 2 Select **Email** and choose **Email accounts**.


- 3 Select **Add** and follow the pop up instruction and enter the information required.

### Sending an email using your new account

To send/receive an email, you should set up an email account (see above).

- 1 Press **Menu**  , select **Messaging** and choose **Create new message**.
- 2 Choose **Email** and a new email window will open.
- 3 Write a subject line then press OK.
- 4 Enter your message using the keypad.

### Retrieving your email

- 1 Press **Menu**  and select **Messaging** then choose **Mailbox**.
- 2 Select the account you want to use.
- 3 Choose **Retrieve** and the phone will connect to your email account and retrieve your new messages.

# Messaging

## Message folders

Press **Menu**  and select **Messaging**. The folder structure used on your GM310 should be self-explanatory.

**Create new message** - Create your new message.

**Inbox** - All the messages you receive are placed into your **Inbox**. From here you can reply, forward and more.

**Mailbox** - All the mails you receive are placed into your **Mailbox**.

**Drafts** - If you don't have time to finish writing a message, you can save what you have written so far in here.

**Outbox** - This is a temporary storage folder used while messages are being sent.


**Sent items** - Copies of all the messages you send are kept into your Sent folder.

**My folders** - You can move messages of **Inbox** or **Sent items** into **My folders**. Also you can move those messages of **My folders** into the original message box.

**Templates** - A list of pre written useful messages, useful for a quick reply.

**Emoticons** - You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

## Managing your messages

- 1 Press **Menu** , select **Messaging** and choose **Inbox**.
- 2 Select **Options** and then choose to:

**Reply** - Send a reply to the selected message.

**Forward** - Send the selected message on to another person.

**Make call** - Call the person who sent you the message.

**Save number** - Save the number of the message.

**Delete** - Delete the selected message.

**Create new message** - Write a new message or email regardless who sent you message.

**Mark/Unmark** - Mark a message or all.

**Copy&Move** - Choose to copy or move the selected message to the USIM card or phone.

**Filter** - Displays messages by desired message types.

**Message info** - You can check the of its type, subject, where it is from, and its date.

If you see the message **No space for USIM message**, you should delete some messages from your inbox to create space.

If you see the message **No space for messages**, you can delete either messages or saved files to create more space.

**TIP!** When you receive the message, you can reply quickly by using **Quick reply** function. While you see the message, press **Options** and select **Quick reply**. This is useful if you need to reply the message during a meeting.

**TIP!** While you see the message, press **Options** and select **Extract**. You can extract the information such as a number, email address or web address from the selected message.

## Changing your text message settings

Press **Menu** , select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

**Text message centre** - Enter the details for your message centre.

**Delivery report** - Choose to receive confirmation that your message have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.


# Messaging

**Message types** - Convert your text into **Voice, Fax, X.400** or **Email**.

**Character encoding** - Choose how your characters are encoded. This affects the size of your message and therefore data costs.

**Send long text as** - Choose whether to send your message as SMS or MMS when you enter a text longer than 2 pages in the message field.

## Changing your multimedia message settings

Press **Menu** , select **Messaging**, then choose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

**Delivery report** - Choose to request or allow a delivery report.

**Read reply** - Choose to request or allow a read reply.

**Priority** - Choose the priority level of your multimedia message.

**Validity period** - Choose how long your message is stored at the message centre.


**Slide duration** - Choose how long your slides appear on screen.

**Creation mode** - Allows you to select the contents type supported by MMS.

**Delivery time** - Configures the delivery time of message to the recipient. The multimedia message centre will deliver the message after the delivery time.

**Multi msg centre** - Allows you to configure network information such as the multimedia service center and the Internet profile, to send a multimedia message.

## Changing your email settings

- 1 Press **Menu** , select **Messaging** and choose **Settings**.
- 2 Select **Email** then you can adapt the following settings:

**Email accounts** - You can set up an email account.

**Allow reply email** - Choose to allow the sending of 'read confirmation' messages.

**Request reply email** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your GM310 checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at any one time.

**Include message in fwd & reply** - Choose whether or not to include the original message.

**Include attachment** - Choose whether or not to include the original attachment.

**Auto retrieval in roaming** - Choose whether or not to automatically retrieve your messages when abroad.

**New email notification** - Choose whether or not to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

## Changing your other settings

Press **Menu** , select **Messaging**, and choose **Settings** then:



**Voicemail** - Add a new voicemail service. Contact your network operator for more information on the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

**Info. service** - Choose the reception status, channels and language of your info messages.

# Camera


## Taking a quick photo

- 1 Press  to open the viewfinder.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press  to take a photo.

## After you've taken your photo


Your captured photo will appear on the screen. The following options are available:


**Back** - Go back to previous menu.

 **Album** - View the pictures you have taken in your album.

 **Send** - Send the photo as MMS, email or via Bluetooth.

 **New image** - Take another photo straight away. Your current photo will be saved.

 **Use as** - Set the image you have just taken as wallpaper, a contact image or in your start-up/shut down screen. (Contact image can only be added to contacts saved to your phone, not your USIM card.)

 **Delete** - Delete the photo you have just taken. The viewfinder will reappear.

**Options** - You can change the name of the image or edit the image file.

## Using the quick settings

From the viewfinder use navigation keys and select the options you would like to use.

**Album** - Choose to look at the other images in your album.

**Video** - Choose to switch from camera to video camera mode.

**Capture** - Allows you to take a picture.

**Brightness** - Set the brightness of the image in the viewfinder of the camera.

**Zoom** - Adjust the zoom using the volume key on the left side of your phone. The zoom function is only available when the image size is set to 640x480 or below.

## Using the advanced settings

From the viewfinder select **Settings** to open all the advanced settings options. Use the navigation key to navigate through the options.

### < Preview >

**Image size** - Change the size of the photo.

**Colour effect** - Choose a colour tone to apply to the photo you're taking.

**White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

**Night mode** - You can take better pictures at night by selecting **On**.

**Timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for a group photo that you want to be part of.

**Shot mode** - Choose from **Normal** or **Burst shot**. Burst shot lets you to take up to 3, 6, 9 shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

**Image quality** - Controls the quality of image. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

### < Others >

**Memory in use** - Choose whether to save your photos to the handset memory or to the external memory.

**Hide icons** - Hide the icons to the side of the viewfinder.

**Shutter sound** - Select one of three different shutter sounds.

**Note:** Always press **Select** after selecting a new setting to implement the changes you've made. The settings menu will automatically close, ready for you to take your picture.

# Camera

## Adjusting the brightness

Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Select **Brightness** in the quick settings.
- 2 Slide the contrast indicator along the bar, towards “-” for a lower contrast, hazier image or towards “+” for a higher contrast, sharper image.

## Changing the image size

The more pixels, the larger the file size, which in turn means they will take up more of your memory. If you want to fit more pictures on your phone or memory card you can alter the number of pixels to make the file size smaller.




- 1 Select **Image size** in **Settings**.
- 2 Select a pixel value from the numerical options: **2048x1536**, **1600x1200**, **1280x960**, **640x480**, **320x240**.

## Viewing your saved photos

- 1 You can access your saved photos from within the camera mode by selecting **Album**. Your album will appear on the screen.
- 2 Highlight the photo you want to view to bring it to the front of the album.
- 3 Select the photo to open it fully.

# Video camera

## Shooting a quick video

- 1 Press and hold  to open the viewfinder.
- 2 Focus the camera on what to record.
- 3 Press  once to start recording.
- 4 **Rec** will appear at the bottom of the viewfinder. Press  again to stop recording.

## After you've shot your video

A still image representing your captured video will appear on screen. The following options are available:

**Back** - Go back to previous menu.



**Album** - Press to look at the other video clips in your album. Your current video clip will be saved.



**Play** - Press to play the video you have just recorded.



**New video** - Press to shoot another video straight away. Your current video will be saved.



**Send** - Send the video as MMS, as an email or via Bluetooth.



**Delete** - Delete the video you have just recorded. The viewfinder will reappear.

**Options** - You can change the name of the video clip.

## Using the quick settings

From the viewfinder use navigation keys and select the options you would like to use.

**Album** - Choose to look at the other videos in your album.

**Camera** - Choose to switch from video camera to camera mode.

**Rec** - Allows you to record a video.

**Brightness** - Set the brightness in the viewfinder of the video camera.

**Zoom** - Adjust the zoom using the volume key on the left side of your phone. The zoom function is only available when the image size is set to 640x480 or below.

# Video camera

## Using the advanced settings

From the viewfinder select **Settings** to open all the advanced settings options. Use the navigation key to navigate through the options.

### < Preview >

**Size** - Change the size of the video.

**Color effect** - Choose an effect tone to apply to the video you're recording.

**White balance** - The white balance ensures that any white in your photos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

**Quality** - Controls the quality of video.

**Duration** - Choose **Normal** or limit your video to fit in an **Message**.

### < Others >

**Memory in use** - Choose whether to save your videos to the handset memory or to the external memory.

**Hide icons** - Hide the icons to the side of the viewfinder.

**Voice** - Choose **Mute** to record a video without sound.

**Note:** Always press **Select** after selecting a new setting to implement the changes you've made.

## Watching your saved videos

- 1 You can access your saved videos from within the video camera mode by selecting **Album**. Your album will appear on screen.
- 2 Highlight the video you want to view to bring it to the front of the album.
- 3 Select the video to open it fully.

# MP3 Player

## MP3 Player

Your GM310 has a built-in music player so you can play all your favourite music.

### Note:

- Before using music player, you will need to transfer music file onto your phone.
- If you transfer playlists (songs you've organized into lists) to your phone by using the **Music Sync** application, you can also browse for songs in playlists of **Music Tea™**, **Mix & Match™** and **More like this**.
- Music player supports codec types as follows: MP3, WMA, AAC, M4A, and RA. Music player does not necessarily support all features and variations of file formats.





Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, visit [www.gracenote.com](http://www.gracenote.com).

CD and music-related data from Gracenote, Inc., copyright © 2000-2007 Gracenote. Gracenote Software, copyright © 2000-2007 Gracenote. This product and service may practice one or more of the following U.S. Patents: #5,987,525; #6,061,680; #6,154,773; #6,161,132; #6,230,192; #6,230,207; #6,240,459; #6,304,523; #6,330,593; #7,167,857 and other patents issued or pending.

Gracenote and CDDB are registered trademarks of Gracenote. The Gracenote logo and logotype, and the "Powered by Gracenote" logo are trademarks of Gracenote.

## MP3 Player

To access the music player, press **Menu**  and select **MP3 Player**. Or, you can access the music player by lightly pressing the music player key  on the right hand side of the handset. From here you can access to:

**Now playing** - Only appears when music is playing. When you select this, you can go back to the on-going player.

**All tracks** - Contains all of the songs you have on your phone.

**MusicTea™** - MusicTea contains 9 tea bags which consists of music files with different characteristics. Each tea bag is matched with a music genre.

**Mix&Match™** - Mix&Match™ contains 6 categories which let you enjoy the variety of playlists according to the activities and situations. You can make and manage your playlist with songs to listen to while exercising, or playlist with songs for a particular mood such as romantic.

By using More Like This™ feature of Music Sync.

**My playlists** - Contains any playlists you have created as well as **Most played, Top rated, More like this and On the go**.

**Artists** - Allows you to view all tracks sorted by artist.

**Albums** - Allows you to view all tracks sorted by album.

**Genres** - Allows you to view all tracks sorted by genre.

**Shuffle tracks** - Allows you to play all of the songs in random order.

**Music ID** - Music ID™ is an application which uses the onboard microphone to analyze a song sample and then compare it to a remote database of songs. Once the application completes the analysis of the song sample, it provides you with the name of the song, artist and album.

**Easy file sorting** - Shows all of the music file folders. From here you can see all of the music file available in your phone and compatible memory card (if inserted).

**TIP!** Before enjoying the playlists such as **More Like This/Mix&Match™/MusicTea™**, you will need to transfer MP3 files from your PC to your device. You can download new songs to your GM310 using the **Music Sync** application in the bundled LG PC Suite CD.

Those songs get an additional feature called **More Like This™**, which allows you to generate one-press automatic playlists composed of similar songs, according to the title of the album or artist, or the mood of the music. These special playlists are saved in **Playlist** in a folder called **More Like This**, or saved in **Mix&Match™/MusicTea™**. You can enjoy these playlists as you like.





## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or sync cable.


To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you should to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All tracks**.

## Playing a song

- 1 Press **Menu**  and select **MP3 Player**.
- 2 Choose **All tracks** then select the song you want to play. Select .
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.

# MP3 Player

- 5 Select  to skip to the previous song.
- 6 Select Back to return to the All tracks menu.

**TIP!** To change the volume while listening to music, use the volume keys on the left hand side of your phone.

**TIP!** If you press the music player short key while playing music, you can use BGM mode. In BGM (Background Music) mode music can be played while other functions are being used. BGM can be stopped on the music player screen.

## Using options while playing music

Select **Options** and choose from:

**Minimize** - Hide the music player screen so that you can continue using your phone as normal while music is playing.

**Add to playlist** - Adds the current track to a playlist.

**Set as ringtone** - Set the current track as your ringtone.


**Rating** - Select and rate the current track by the number of stars.

**Information** - You can view information about the music file you are listening to.

**Music timer** - You can set your phone to stop playing music after a period of time.

**Settings** - You can set up various functions such as shuffle, repeat, audio effect, list/full screen player, visualization and album image.

## Viewing your playlist

- 1 Press **Menu**  and select **MP3 Player**.
- 2 Select **My Playlist** and choose from:

**Most played** - The mostly played 20 tracks are shown.

**Top rated** - The high rated 20 tracks are shown. If there is no rating track, no file is shown.

**More like this** - The playlist related with More Like This™ feature.

**On the go** - If you add the track to 'On the go' playlist, choose the track in the list of **All tracks**, press and hold OK key.

**TIP! More Like This™ Automatic Playlists**

More Like This™ allows you to generate one-press automatic playlists composed of similar songs, according to the title of the album or artist, or the mood of the music. You can enjoy and manage these playlists as you like.

## Creating a playlist

- 1 Press **Menu**  and select **MP3 Player**.
- 2 Choose **My Playlist**.
- 3 Press **Options** and select **Add new playlist**, enter the playlist name and press **Save**.
- 4 The new playlist folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and pressing ; a tick will show next to the track name. If you accidentally add a song you don't want, select it and press  again to untick it.

- 5 Press **Done** to store the playlist.

## Search for song information with Music ID™

With Music ID, you can find out information of song you want to know. Choose the following features of Music ID:

**TagMusic™** - When you hear a song you like but you don't know what it's called, select TagMusic™ feature and record a few second of the audio from an external music source. After complete the record, it automatically links to the Music ID recognition server. Once a song has been identified through Music ID recognition service, you will receive the relevant information of the song.

**TagRadio** - TagRadio is a feature that helps you find information about the unknown song you hear on the built-in FM radio. During listening to the FM radio, you can select 'Record' to record a short music clip and save it. If you have radio recording files, select file and send it to the Music ID recognition server. Once a song has been identified through Music ID recognition service, you will receive the relevant information of the song.

# MP3 Player

**TagSong** - With TagSong feature, you can add the information on ID3 tag of MP3 files you have. If you send the MP3 file to the Music ID recognition server, you will receive the information of MP3 file such as the name of a song, artist, album and genre, etc, if available. It will provide many benefits to you to better manage and enjoy your music collections.

**Tag History** - A list of Tag-history you have search and received will be displayed. (Song title/Artists)

## Note:

- If using the Music ID™ feature, it must need the OperatorNetwork support, it might not work if some network side not support by their own reason.
  - For best results, please use Music ID™ feature in a quiet environment.
  - An additional cost is incurred when connecting to the service and transmitting data. Check your data charges with your service provider.
  - The music record as a WAV format and not saved to your phone.
- If music identification is impossible, ask you whether to retry or not.
  - The results of TagMusic/TagRadio will be saved on Tag-history if you select 'Save' option after received the result.

## Note:

- As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Get License" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.
- Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

# Multimedia

## Using the FM radio

Your GM310 has an FM radio feature so you can tune into your favourite stations to listen on the move.

**Note:** You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector.


## Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning.

### To auto tune:

- 1 Press **Menu**  and select **Multimedia**, then choose **FM radio**.
- 2 Select **Option** and choose **Auto scan** then select **Yes**.
- 3 Available radio stations will be automatically found and allocated to a channel in your phone.

### To manually tune:


- 1 Press **Menu**  and select **Multimedia**, then choose **FM radio**.
- 2 To enter your station, you can use the navigation key to search or you can enter the frequency using the keypad, then select **Set**.
- 3 Select a channel number that you want to save a station to and choose **Select**.

**Note:** You can also edit the stations you have saved in a channel number.


**TIP!** To improve the reception extend the headset cord, which functions as the radio antenna.

# Multimedia

## Reset all channels

- 1 Press **Menu**  and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and select **Reset all channels**. Choose **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

## Listening to the radio

- 1 Press **Menu**  and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

**Note:** You can listen to the radio via built-in speaker. Press **Options**, select **Listen via speaker**.

## Recording your radio

During listening to the FM radio, you can select **Record** to record a short clip and save it. You can listen to all of the radio recordings you have saved by selecting **Options** and **Go to Radio recordings**. You can also view the saved recordings in the **My stuff > My memory card > Sounds > Radio recordings** folder.

### Note:

- If you do not have a memory card inserted, you will not be able to select Record option in FM Radio menu.
- Please note, if you do not have enough space in your internal memory (smaller than 10 MB), you can not record a clip and save file. You can record a radio clip when you have enough spaces in both internal memory and external memory.

**TIP!** If you have saved radio recordings in your memory card, you can select the clip and set it as a ringtone. You can also select the part of clip you want to use and create a new ringtone. Select a radio recording file and choose **Options > File > Edit**. Use Cut and save a file to **My stuff > My sounds** folder.

## Using the Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

### Recording your voice memo

- 1 Press **Menu**  and select **Multimedia**, then choose **Voice recorder**.
- 2 Press the center soft key to begin recording.
- 3 Choose **Stop** to end the recording.
- 4 Press **Options** and select **Play** to listen to the recording.

**Note:** You can listen to all of the voice recordings you have saved by selecting **Options** and **Go to Voice recordings**.

### Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send** and choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

# My stuff

You can store any multimedia files on your phone's memory in **My stuff** so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

## My Images

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

## Sending a photo

- 1 Press **Menu**  and select **My stuff** then choose **My images**.
- 2 Select the photo you want to send and press **Options**.
- 3 Select **Send** and choose from **Message**, **Email** or **Bluetooth**.

- 4 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

## Using an image


You can choose images to use as wallpapers, start up/shut down images or even to identify a caller.

- 1 Press **Menu**  and select **My stuff** then choose **My images**.
- 2 Select the image and choose **Options**.
- 3 Select **Use as** and choose from:  
**Wallpaper** - Set a wallpaper for the home screen.  
**Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.


**Start-up** - Set an image to appear when you switch the phone on.

**Shut down** - Set an image to appear when you switch the phone off.

## Organising your images

- 1 Press **Menu**  and select **My stuff**, then choose **My images**.
- 2 Select **Options** and choose **Sort by**.
- 3 Choose from **Date**, **Type** or **Name**.


## Deleting an image

- 1 Press **Menu**  and select **My stuff**, then **My images**.
- 2 Select the image you want to delete and press **Options**.
- 3 Select **Delete** and choose **Yes** to confirm.

**TIP!** To quickly delete any file in My files, highlight it with the cursor and press the  key.


## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Press **Menu**  and select **My stuff** then choose **My images**.
- 2 Select an image and press **Options**.
- 3 Select **Move** or **Copy**.

## Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.


- 1 Press **Menu**  and select **My stuff** then choose **My images**.
- 2 Select **Options** and choose **Mark/Unmark**.
- 3 A box will appear to the left of each image. If you select an image, a tick will appear in the box marking it.

## My stuff

- 4 To unmark an image, select the image again so that the tick disappears from the box.
- 5 Once you have marked all of the appropriate images, choose one of the options to apply to all of them.

### Checking your memory status

You can check to see how much of your memory you have used and how much you have remaining.

- 1 Press **Menu**  and select **My stuff**, then choose **My images**.
- 2 Select **Options** and choose **Memory info**.
- 3 Choose **Handset memory** or **External memory**.

**Note:** If you do not have a memory card inserted, you will not be able to select **External memory**.

### My Sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**.


### Using a sound

- 1 Press **Menu**  and select **My stuff**, then choose **My sounds**.
- 2 Select **Default sounds** or **Voice recordings**.
- 3 Select a sound and press **Play** to listen to it.
- 4 Select **Options** and choose **Use as**.
- 5 Choose from **Ringtone**, **Message tone**, **Start-up sound** or **Shut down sound**.


### My Videos

The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

### Watching a video

- 1 Press **Menu**  and select **My stuff** then choose **My videos**.
- 2 Select a video and press **Play**.

## Sending a video clip

- 1 Press **Menu**  and select **My stuff** then choose **My videos**.
- 2 Select a video and choose **Options**.
- 3 Select **Send** and choose from **Message, Email** or **Bluetooth**.
- 4 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.


**Note:** The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all.

## Games and Applications

You can download games and applications to your phone to keep you amused when you have time to spare.

If you download a game from the network, you will need to install the downloaded game in your phone before enjoying the game.

## Playing a game

- 1 Press **Menu**  and select **My stuff**, then choose **My games & apps**.
- 2 Select **Games** menu.
- 3 Select a game and press **Launch**.

## Using the games options menu

From the **Games** and **Applications** folders, the following options are available:

**Create new folder** - Create a folder within the games and applications menu.

**Sort by** - Sort the games and applications by **Date, Size** or **Name**.

**Memory manager** - View the memory status.

# My stuff

## Flash contents

The **Flash contents** folder contains all of your default and downloaded flash contents.

## Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications.

## My memory card


If you purchase an optional external microSD memory card, you can manage more content.

## Installing a Java game & application

Depending on the service provider, all Java based programs such as Java games can be downloaded and run on your phone. You can transfer Java program files from a compatible PC to the memory in your phone using the Bluetooth, USB mass storage or external memory. The Java program files are in .jad or .jar format.

If you save the Java program files in your phone, you should install the files before using a Java game or application first.

To install a Java game & application:

- 1 Press **Menu**  and select **My stuff**, then choose **Others** or **My memory card** (if external memory is inserted).
- 2 Select the file (\*.jad or \*.jar) you want to install and press Install.  
**Note:** The .jad file should contain its own .jar file.
- 3 Once installed, the Java program can be viewed in the **Games** or **Applications** menu where you can select, execute, or delete.

**TIP!** You can also download Java MIDlet in your phone by using the WAP (Wireless Application Protocol) services. Please note that additional costs may be incurred when using online services.


# Games & Apps

## Games & Apps

Your GM310 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.


**Note:** An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

## Playing a game

- 1 Press **Menu**  and select **Games & Apps**.
- 2 Select **My games & apps** and choose **Games**.
- 3 Choose the game you want to play and select **Launch**.


## Viewing applications

You can manage the Java applications installed in your phone by using the **Applications** menu. You can also delete downloaded applications.

- 1 Press **Menu**  and select **Games & Apps**.
- 2 Select **My games & apps** and choose **Applications**.
- 3 View and manage any applications you have.


## Changing the network profile

To download a game, you can set the value to connect to the network using **Settings**.

- 1 Press **Menu**  and select **Games & Apps**.
- 2 Select **Settings**.
- 3 From here you can:
  - Profiles** - You can see profile and add new profile.
  - Certificates list** - You can see the certification list for using Java application.


# Organiser & Tools

## Adding an event to your calendar

- 1 Press **Menu**  and select **Organiser**, then choose **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **Add new** and scroll down to enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Enter a **Subject** for the event. Use the keypad to type letters and numbers.
- 5 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.


- 6 Scroll down once more to select whether the event is occurring **Not repeated** or repeated at **Daily, Weekly, Monthly** or **Annually** intervals. Also you can choose **User setting**. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 7 Select **Done** and your event will be saved in the calendar. A square cursor will mark the days of any saved events.

## Adding an item to your to do list

- 1 Press **Menu**  and choose **Organiser**.
- 2 Select **To do** and select **Add**.
- 3 Set the date for the to do item, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your to do list item by selecting **Done**.

**TIP!** You can edit an item by selecting it, pressing **Options** and **Edit**. Confirm your amends by selecting **Save**.

## Adding a memo

- 1 Press **Menu**  and select **Organiser**, then **Memo**.
- 2 Select **Add** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on screen the next time you open the memo application.

## Secret memo

You can write the private memo to protect your privacy. You enter the security code to use this menu.

## Date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed.

## Settings

**Calendar** - You can set the configurations to view the calendar.

## Send all shedules & to do via

**Bluetooth** - You can send all the data in your calendar and/or to do list from your phone to other phones by using Bluetooth.

**Backup calendar & To do** - You can create the backup files of the calendar or to do list saved in the phone when you insert an external memory.

**Restore calendar & To do** - You can reset the backup files of calendar or tasks when you insert an external memory.

**Memory info.** - You can view the information of available memory regarding Calendar, Tasks, Memo and Secret memo.


**Clear all** - You can delete all data regarding Calendar, Tasks, Memo and Secret memo.

## Quick menu

You can specify functions to save in the **Quick menu**. If you save frequently used functions in the **Quick menu**, you can quickly use them by pressing the corresponding key.



# Organiser & Tools

## Setting your alarm

- 1 Press **Menu**  and select **Tools**, then choose **Alarms**.
- 2 Press **Options** and select **Add new**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Not repeated**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Except holiday**, or **Choose weekday**.
- 5 Scroll down and choose whether you would like the alarm to **Ring**, **Vibration**, **Ring&vibration** or **Follow profile**.
- 6 Scroll down to choose the alarm tone. Press **Menu**  and choose a sound from **Voice recordings** or **Default sounds**.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.

- 8 Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.
- 9 Select **Done**.

## Using your calculator


- 1 Press **Menu**  and select **Tools**, then choose **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷) using the navigation keys followed by =.
- 4 For more complex calculations, select **Options** to choose a command.
- 5 Select  to clear the screen and start a new calculation.

## Using the stopwatch

- 1 Press **Menu**  and select **Tools**, then choose **Stopwatch**.
- 2 Select **Start** to begin the timer.


- 3 Choose **Lap** if want to record a lap time. Up to 20 lap times can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

### Converting a unit

- 1 Press **Menu**  and select **Tools**, then choose **Converter**.
- 2 Choose whether you would like to convert **Currency**, **Surface**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 3 Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

**Note:** For **Currency** convert, you need to set **Rate** according to current exchange rate first.

### Adding a city to your World time


- 1 Press **Menu**  and select **Tools**, then choose **World time**.
- 2 To find out the time of specific city, press **Options** and select **Add city**.
- 3 Scroll down the list or enter the first letter of the city. Also you can select **Map** and choose a city.
- 4 Press **Select**.

**TIP!** If you are abroad, you can change your time zone from World time by selecting **Options**, followed by **Change current city**. Choose your required city as above.

# Browser

With a browser at the tip of your fingers, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

## Accessing the web

- 1 Press **Menu**  and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**.  
Alternatively, select **Enter address** and type in your desired URL, followed by **Open**.

**Note:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.


## Yahoo

You can access Yahoo Mobile Internet Service. To access Yahoo services, press **Menu**  and select **Yahoo**.

**Note:** You may be unable to access Yahoo in some countries. This is dependent on network services.

## Adding and accessing your bookmarks


For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Press **Menu**  and choose **Browser**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To create a new folder, select **Options** and choose **Create new folder**. Enter the name of your bookmark folder.
- 4 To add a new bookmark, select **Options** and press **Add new**. Enter a name for your bookmark followed by the URL.
- 5 Select **Done**. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark, simply scroll to it and select **Open**.


## Saving a page

- 1 Access your required webpage as described above.
- 2 Select **Options** and **Save items**, then choose **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Select **Save**.

## Accessing a saved page

- 1 Press **Menu**  and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select **Open** to connect to the saved page.


## Viewing your browser history

- 1 Press **Menu**  and choose **Browser**, then select **History**.
- 2 A list of web page titles you have accessed recently will be displayed.
- 3 To access one of these pages, simply select the required page and press **Open**.

## Using RSS reader

RSS (Really simply Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a **feed**, **web feed**, or **channel**, contains either a summary of content from an associated web site or the full text.

## Changing the web browser settings

- 1 Press **Menu**  and choose **Browser** then select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or **Reset Settings**.
- 3 Once you have changed your settings, press **Select**.

# Connectivity

## Changing your connectivity settings


Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone straightaway. If you want to change any settings, use this menu.

Press **Menu**  and select **Settings** then choose **Connectivity**. Your options are:

**Bluetooth** - Set up your GM310 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

**USB connection mode** - You can select the USB connection mode on your phone for several uses.

## Changing your Bluetooth settings

- 1 Press **Menu**  and select **Settings** then choose **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:

**My device visibility** - Set **Visible** or **Visible for 1 min** so that other devices can detect your phone when they are searching for a Bluetooth device. If you select **Hidden**, other devices will not be able to detect your phone when they are searching for a Bluetooth device.

**My device name** - You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when **My device visibility** is set to **Visible**.

**Supported services** - You can view the list of devices such as headsets and handsfree supported by Bluetooth enabled phone.

**My address** - Check your Bluetooth address here.

**Note:** To improve security, we recommend that once you have configured or paired with a device, **Visibility** be set to **Hidden**. For incoming connections, regardless of whether or not the other device has been paired with your phone, you can choose to accept or reject the connection.

## Pairing with another Bluetooth device

By pairing your GM310 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **Turn on** and **Visible**. You can change your visibility in the **Settings** menu, by selecting **My device visibility**, then **Visible**.
- 2 From **Bluetooth**, choose **Turn on** and select **Search new device**.
- 3 Your GM310 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Add** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **Turn on** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your GM310 will automatically connect to your Bluetooth headset and switch to headset profile.


## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device**.

# Connectivity

## To switch Bluetooth on:

- 1 Press **Menu**  and select **Settings**. Choose **Connectivity** then select **Bluetooth**.
- 2 Select **Turn on**.
- 3 Select **Turn off** to switch Bluetooth off.

## To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.
- 4 Your GM310 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **Send**.

## To receive a file:

- 1 To receive files, your Bluetooth must be both **Turn on** and **Visible**.

- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.


**Note:** The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

## Use your phone as a modem

Just plug in the USB cable, then use your phone to make a fast internet connection.



**WARNING:** First make sure you have a suitable tariff! Otherwise if you download large amounts of data – such as music or video – you may incur high charges.


- 1 Press **Menu**  and select **Settings**. Choose **Connectivity** then select **USB connection mode** and then **PC Internet**.

- 2 Connect the USB cable to your phone and your PC.
- 3 Wait until pop up open up on your PC and then select **Start** to install the Via the phone software, called Via the phone and its drivers on your PC, then follow the screen instructions.
- 4 You can now use your web browser. When you've finished, click **Disconnect**.
- 5 To connect to the internet the next time, just plug in the cable, the software will start automatically, and you'll be ready to go.
- 3 Connect your phone to your PC. Your phone will read: Connecting as Mass Storage. . . followed by "Connected as Mass Storage Mode". Do not disconnect during transfer.
- 4 All of your phone files will automatically be stored onto your PC hard drive.

**Note:** Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the contents of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

## Use your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Press **Menu**  and select **Settings**. Choose Connectivity then select USB connection mode and then Mass storage.
- 2 Connect the USB cable to your phone and your PC.

## Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.


## Installing LG PC Suite on your computer

- 1 Go to [www.lgmobile.com](http://www.lgmobile.com) and choose your region and then your country.

## Connectivity


- 2 Choose **Products** menu, select **Manual & Software** and click **Go to Manual & S/W download** section. Click **Yes** and LG PC Suite installer will then appear.
- 3 Select the language you would like the installer to run in and click OK.
- 4 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

### Connecting your phone and PC


- 1 Press **Menu**  and select **Settings**. Choose Connectivity then select USB connection mode and then PC Suite.
- 2 Connect the USB cable to your phone and your PC.
- 3 Double click on the LG PC Suite icon on your desktop.
- 4 Click on **Connection Wizard**, then **USB**.

- 5 Click on **Next**, then **Next** again, then choose **Finish**. Your phone and PC are now connected.

### Backing up and restoring your phone's information

- 1 Press **Menu**  and select **Settings**. Choose Connectivity then select USB connection mode and then PC Suite.
- 2 Connect the USB cable to your phone and your PC.
- 3 Click on the Backup icon, and select **Backup** or **Restore**.
- 4 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click OK.
- 5 Your information will be backed up.


### Viewing your phone files on your PC

- 1 Press **Menu**  and select **Settings**. Choose Connectivity then select USB connection mode and then PC Suite.

- 2 Connect the USB cable to your phone and your PC.
- 3 Click on the **Contents** icon.
- 4 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.


## Synchronising your contacts

- 1 Press **Menu**  and select **Settings**. Choose Connectivity then select USB connection mode and then PC Suite.
- 2 Connect the USB cable to your phone and your PC.
- 3 Click on the **Contacts** icon. Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Select **To Phone**. Your PC will export your contacts to your handset.

- 5 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

**Note:** To backup contacts saved to your USIM card, click on the USIM card folder on the left side of your PC screen. Right-click your contact then Select All. Right-click your contact again and select Copy to Phone Memory. Now click on the Handset folder on the left of your screen and all your numbers will be displayed.

## Synchronising your messages

- 1 Press **Menu**  and select **Settings**. Choose Connectivity then select USB connection mode and then PC Suite.
- 2 Connect the USB cable to your phone and your PC.
- 3 Click on the **Messages** icon.
- 4 All of your phone messages will be displayed in folders on your screen.
- 5 Use the tool bar at the top of your screen to edit and rearrange messages.


# Connectivity

## Adding music to your handset before you get started

To transfer music from your PC to your phone, you will need the following:

- Microsoft Windows XP or Vista.
- Windows Media Player 10 or above
- USB cable
- MicroSD card (If you wish to use external memory as the music storage.)

## Transferring music using Windows Media Player

- 1 Press **Menu**  and select **Settings**. Choose Connectivity then select USB connection mode and then Music sync.
- 2 Connect the USB cable to your phone and your PC.
- 3 When you try to connect handset on your PC, your handset will read: Music Sync... followed by “Disconnect cable to stop Music Sync.”

- 4 On the PC, you will be prompted to launch your preferred music management software.
- 5 Select the Window Media Player.
- 6 Go to the **Sync** tab, then drag and drop the music you wish to transfer to your handset into the ‘Sync List’ pane.
- 7 Click on **Start Sync** icon. This step begins the transfer process.




**WARNING:** Do not disconnect phone while the transfer is in progress.


**Note:** Music sync is available for only music contents.

# Settings


## Changing your profiles

- 1 Press **Menu**  and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit.
- 3 Select **Options** and choose **Edit**.
- 4 You can change all of the tones, its volumes and alert options from here.

## Using flight mode

To turn on flight mode,, press **Menu**  and then select **Settings** and **Profiles**. Select **Flight mode** to activate. Flight mode will not allow you to make calls, connect to the internet or send message.

## Changing your phone settings

- 1 Press **Menu**  and select **Settings**.
- 2 Select **Phone** and choose from the list below.  
**Auto key lock** - Choose a duration for locking the key automatically.

**Touchpad vibration** - Change the setting of touchpad to a vibration.

**Languages** - Change the language of for your GM310's display.

**Power save** - Choose to switch the factory set power saving settings **Off**, **Night only** or **Always on**.

**Information** - View the technical information for your GM310.

## Changing your display settings

- 1 Press **Menu**  and select **Settings**.
- 2 Select **Screen** and choose from:  
**Screen theme** - Choose the theme of your home screen or start-up/shut down screen.  
**Menu style** - Change the menu view from **List style** or **Grid style**.  
**Dialling** - Adjust the font style and size for when you are dialling a phone number.

# Settings

**Font** - Adjust the font size.


**Backlight** - Choose how long the backlight remains on. Also, use the navigation keys to adjust the main screen brightness.

**TIP!** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Handset theme** - Quickly change the whole look of your screen.

**Greeting message** - After selecting **On**, you can write a welcome message. The message will appear on screen whenever you start-up the phone.

## Changing your date & time

- 1 Press **Menu**  and select **Settings**.
- 2 Select **Date & Time** and choose from the list below:

**Time** - You can enter the current time. You can set the time format to either 24 hours or 12 hours. You can select a city as time zone.

**Date** - You can enter the current date. You can set the date format (YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY).

**Auto update date/time** - Select **On**, and the phone will automatically update the date and time.

**Daylight saving** - Select whether to activate the daylight saving function or not. You can set the summer time difference of selected home city for 1 hour or 2 hours.

## Changing your security settings

Change your security settings to keep your GM310 and the important information it holds protected.

- 1 Press **Menu**  and select **Settings**.

- 2 Select **Security** and choose from the list below:

**PIN code request** - Choose a PIN code to be requested when you turn your phone on.

**Handset lock** - Choose a security code to lock your phone **When switching on, If USIM changed or Immediate**.

**Change codes** - Change your **PIN code, PIN2 code or Security code**.

**Note: Security code**

The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorized use of the phone. The security code default setting can be modified from the **Security > Change codes**.

## Viewing memory status

Your GM310 has three memories available: the phone, the USIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Menu**  and select **Settings**, choose **Memory manager**. You will then see the current status of the memories in your GM310.

If you insert an external memory card in your phone, you can also select **Primary storage settings** then choose the default location you prefer items to be saved to.

## Change your other settings

**Network** - You can set **Select network** and **Network mode** settings using this menu. Also you can add a preferable network to be connected to **Preferred lists**.

# Settings

**Internet profiles** - This menu shows the Internet profiles. You can create new profiles, delete or edit them using the **Options** menu. However, you cannot delete or edit default configurations.

**Access points** - This menu shows the access points list. You can create new profiles, delete or edit them by using the **Options** menu. However, you cannot delete or edit default configurations.

**Packet Data Conn.** - If you select the 'When available' option, your phone is automatically registered to a GPRS network when you switch the phone on. If you select "When needed", the GPRS connection is established for the duration of a WAP or application connection.

## Streaming settings

If you want to set different network setting to play streaming content, you can set different network settings by using **Streaming settings** in **Settings** menu.

## Resetting your phone

Use **Reset settings** in **Settings** menu to reset all the settings to the factory definitions.

You need the security code to activate this function.

## **Software Upgrade**

### **LG Mobile Phone Software Upgrade Program**

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service center.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding.

Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone.

As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

## Accessories

There are a variety of accessories available for your mobile phone, which may be sold separately. You can select these options according to your personal communication requirements. Consult your local dealer for availability. (Items described below may be optional.)



**Charger**



**Battery**



**USB Data  
cable and CD**



**Stereo  
Headset**

**Note:**

- This list of accessories is not complete. Please consult your local dealer for a list of accessories available in your region.
- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Some accessories may be different or may not be available in every market.

## Network service

The wireless phone described in this guide is approved for use on the GSM 850, E-GSM 900, DCS 1800, PCS 1900 and W-CDMA networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

**Product name:** GM310

**System:** GSM 850 / E-GSM 900 /  
DCS 1800 / PCS 1900 /  
W-CDMA

### Ambient Temperatures

**Max :** +55°C (discharging)  
+45°C (charging)

**Min :** -10°C

# Declaration of Conformity



LG Electronics

## Suppliers Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

### Model Name

GM310

### Trade Name

LG

**CE 0168**

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 v1.3.1, EN 301 489-17 v1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1  
EN 50360:2001, EN62209-1:2006  
EN 60950-1 : 2001  
EN 300 328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Ballour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

16. March, 2009

Signature of representative

# Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective measures</b>
USIM error	There is no USIM card in the phone or you may have inserted it incorrectly.	Make sure that the USIM card is correctly inserted.
No connection to the network	Signal weak Outside mobile network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your service provider.
Function cannot be set	Not supported by service provider or registration required	Contact your service provider.
Calls not available	Dialling error New USIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN 2.

## Trouble Shooting

Message	Possible causes	Possible Corrective measures
Phone cannot be switched on	On/Off key pressed too briefly Battery empty Battery contacts dirty	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean contacts.
Charging error	Battery totally empty Temperature out of range Contact problem No mains voltage Charger defective Wrong charger Battery defective	Charge battery. Make sure the ambient temperature is right, wait for a while, and then charge again. Check power supply and connection to the phone. Check the battery contacts, clean them if necessary. Plug in to a different socket or check voltage. If the charger does not warm up, replace it. Only use original LG accessories. Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The fixed dial number function is on.	Check settings.

# Gracenote® End User License Agreement

This application or device contains software from Gracenote, Inc. of Emeryville, California (“Gracenote”). The software from Gracenote (the “Gracenote Software”) enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information (“Gracenote Data”) from online servers or embedded databases (collectively, “Gracenote Servers”) and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. **YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.**

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

# Gracenote® End User License Agreement

The Gracenote Software and each item of Gracenote Data are licensed to you “AS IS.” Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© Gracenote 2006



## Warranty Card 產品保用證

## Mobile Phone 手提電話

### 服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜

## Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



Welcome to contact for detailed information  
& Customer Care Centre address

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms  
and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品。請參閱保用證所列之產品保用條款。

**IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.  
Otherwise, this warranty will be voided.**

重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。

# Mobile Phone Warranty Policy

## 手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included) :
  - (i) Handset :12 months
  - (ii) Charger :6 months
  - (iii) Battery :6 months
  - (iv) Hand free earphone :3 months.
- (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
- (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories. etc.)
- (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
- (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
- (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
- (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer :
  - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alteration or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
  - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
  - (iii) The IMEI number sticker on this product has been erased or modified.
  - (iv) The content of warranty policy has been modified without authorization.
- (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
- (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
- (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
- (11) This warranty card is restricted within Hong Kong SAR only.

# Mobile Phone Warranty Policy


## 手提電話保用條款

- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
  - (i) 機身：12個月
  - (ii) 充電器：6個月
  - (iii) 電池：6個月
  - (iv) 免提耳機：3個月
- (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
- (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
- (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
- (5) 在保修期內維修更換后的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
- (6) 手機內存資料有可能因維修后遺失，請顧客要自行保存。
- (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
  - (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去、保修服務即無效。
  - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
  - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
  - (iv) 擅自修改本保用證的內容。
- (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失、或因天然災害、意外事件造成之損失概不負責。
- (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
- (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
- (11) 此保用證只適用於香港特別行政區範圍內。

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_



To:

LG Electronics HK Ltd.  
North Point Post Office Box No.54509  
香港北角郵政信箱54509號

## Limited Warranty

### 限期保用證

To provide our best after-sales service, please complete and return this warranty card to us.

您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下專有的售後服務。

## Customer Information

### 客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號



