



KM900 คู่มือการใช้

LG ELECTRONICS INC.

KM900 คู่มือการใช้

ไ ท ย
ENGLISH

CE 0168 ⓘ

P/N : MMB80333352 (1.1) G

Bluetooth QD ID B014945



ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ

KM900 คู่มือการใช้



ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น
KM900 ของ LG ที่ทันสมัยมีขนาดกะทัดรัด ออก
แบบให้ทำงานด้วยการใช้เทคโนโลยีการสื่อสาร
เคลื่อนที่แบบดิจิทัลใหม่ล่าสุด

การติดตั้ง	01
หน้าจอหลักของคุณ	02
การทำงานพื้นฐาน	03
เริ่มต้นงานสร้างสรรค์	04
เริ่มต้นการจัดการ	05
เว็บไซต์	06
ตั้งค่า	07
อุปกรณ์เสริม	08

สารบัญ

การติดตั้ง

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ ..8
ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ. 10
การใส่ซิมและแบตเตอรี่..... 11
การชาร์จโทรศัพท์ 13
การดหน่วยความจำ 14
แผนผังเมนู..... 16

หน้าจอหลักของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส 17
การปรับแต่งหน้าจอหลัก..... 18
ปุ่มด่วน 19
หน้าจอสัมผัส 20
การใช้งานฟังก์ชันมัลติทาสกิ้ง 24

การทำงานพื้นฐาน

การโทร 25
การโทรออกหรือการสนทนาทางวิดีโอ 25
การโทรออกโดยใช้รายชื่อ 25
การรับสายและการปฏิเสธสายเรียกเข้า 25
ตัวเลือกต่างๆ ระหว่างใช้สาย 26
การปรับระดับเสียงสายสนทนา 27
โทรด่วน 27
การใช้สายที่สอง 27
การบีต DTMF 28
การใช้การโอนสาย 29

การใช้การป้องกันการโทร 29
การเปลี่ยนการตั้งค่าการโทรทั่วไป ... 30
การเปลี่ยนการตั้งค่าการสนทนาทางวิดีโอ 31
รายชื่อ..... 32
การคนหารายชื่อ 32
การเพิ่มรายชื่อใหม่..... 32
การสร้างกลุ่ม 33
การเปลี่ยนการตั้งค่าของรายชื่อ 34
การดูข้อมูล..... 35
ข้อความ 36
ข้อความ 36
การส่งข้อความ 36
การป้อนข้อความ..... 37
ระบบช่วยสะกดคำ T9 37
การป้อนตัวอักษรด้วยตนเอง 37
การตั้งค่าอีเมล 38
การส่งอีเมลโดยใช้แอคเคาท์ใหม่ 39
การเปลี่ยนการตั้งค่าอีเมล 40
โฟลเดอร์ข้อความ 41
การใช้ข้อความอัตโนมัติ 41
การใช้โมติคอน 42
การเปลี่ยนการตั้งค่าข้อความตัวอักษร42
การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย 43
การเปลี่ยนการตั้งค่าอื่นๆ..... 44

เริ่มต้นงานสร้างสรรค์

กล้องถ่ายรูป.....	45
การถ่ายภาพตอน	45
เมื่อคุณถ่ายภาพแล้ว.....	46
ทำความเข้าใจกับช่องมองภาพ	47
การใช้แฟลช.....	48
การปรับการรับแสง	48
การถ่ายภาพต่อเนื่อง.....	49
การใช้การตั้งค่าขั้นสูง	49
การเปลี่ยนขนาดภาพ.....	51
การเลือกเอฟเฟกต์สี.....	52
การใช้กล้องภายใน.....	52
การดูรูปภาพที่บันทึกไว้.....	53
กล้องวิดีโอ.....	54
การถ่ายวิดีโอตอน	54
หลังการถ่ายวิดีโอ	55
ทำความเข้าใจกับช่องมองภาพ	56
การปรับการรับแสง	57
การใช้การตั้งค่าขั้นสูง	57
การเปลี่ยนขนาดของภาพวิดีโอ	58
การเลือกโทนสี.....	59
การใช้กล้องถ่ายวิดีโอตัวใน.....	59
การดูวิดีโอที่บันทึกไว้	60
การดูวิดีโอบนโทรศัพท์.....	60
รูปภาพและวิดีโอ	61
การดูรูปภาพและวิดีโอ.....	61

การใช้การซูมขณะดูวิดีโอ	61
หรือภาพถ่าย.....	61
การปรับระดับเสียงขณะดูวิดีโอ	61
การตั้งค่ารูปภาพเป็นพื้นหลัง.....	62
การแก้ไขรูปภาพ.....	62
การเพิ่มข้อความลงในรูปภาพ.....	64
การเพิ่มเอฟเฟกต์ลงในรูปภาพ	64
การครี้อุปรูปภาพ	64
การเน้นสีในรูปภาพ.....	65
การสลับสีในรูปภาพ.....	65
การแก้ไขวิดีโอ	66
การตัดความยาวของวิดีโอ.....	66
การรวมวิดีโอสองเรื่อง	66
การรวมรูปภาพเข้ากับวิดีโอ	67
การเพิ่มข้อความลงในวิดีโอ.....	67
การซ่อนรูปภาพ	68
การใส่ขวดแตร็กลงในวิดีโอ.....	69
การใส่เสียงสดลงในวิดีโอ	69
การเปลี่ยนความเร็วของวิดีโอ	70
การใส่เอฟเฟกต์การเลื่อนภาพ	70
มัลติมีเดีย	71
รูปภาพ	71
เมนูตัวเลือกภาพส่วนตัว.....	71
การส่งรูปภาพ.....	71
การใช้รูปภาพ.....	72
การพิมพ์ภาพ	72
การย้ายหรือคัดลอกรูปภาพ	73
การสร้างภาพสไลด์	73

สารบัญ

จีไอเน็ตก	73
การตรวจสอบสถานะหน่วยความจำ	73
เสียง	74
การใช้เสียง	74
วิดีโอ	74
การส่งวิดีโอคลิป์	75
เกมส์และแอปพลิเคชัน	75
การเล่นเกมส์	75
การใช้เมนูตัวเลือก	75
การติดตั้งเกมส์และ แอปพลิเคชัน Java	75
ใช้เมนู M-Toy	76
แฟลชคอนเทนท์	76
การดูไฟล์ SWF/ SVG	76
เอกสาร	76
การดูไฟล์	76
การโอนไฟล์ไปที่โทรศัพท์	76
อื่นๆ	77
การสร้างภาพยนตร์	77
เพลง	78
การโอนเพลงไปยังโทรศัพท์	78
การเล่นเพลง	79
การสร้างรายการเพลง	79
การลบรายการเพลง	80
การใช้วิทยุ	80
การคนหาสถานี	80
การรีเซ็ตสถานี	81
การฟังวิทยุ	81

การใช้ตัวส่ง FM เพื่อเล่นเพลง	82
-------------------------------	----

เริ่มต้นการจัดการ

สมุดบันทึก	83
การเพิ่มเหตุการณ์ลงในปฏิทิน	83
การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน	83
การเพิ่มรายการลงในสิ่งที่ต้องทำ	84
การใช้ตัวค้นหาวันที่	84
การตั้งเวลาการปลุก	85
การเพิ่มบันทึก	85
บันทึกเสียง	86
การบันทึกเสียงหรือเสียงพูด	86
การส่งรายการบันทึกเสียง	86
การใช้เครื่องคิดเลข	87
การแปลงหน่วย	87
การใช้นาฬิกาจับเวลา	87
การเพิ่มเมืองในเวลาทั่วโลก	88
PC ซิงค์	89
การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์	89
การเชื่อมต่อโทรศัพท์เข้ากับ คอมพิวเตอร์	90
การสำรองข้อมูลและการเรียกคืน ข้อมูลของโทรศัพท์	90
การดูไฟล์ในโทรศัพท์ บนคอมพิวเตอร์	90
การซิงโครไนซ์รายชื่อ	91
การซิงโครไนซ์ข้อความ	91

ซิงค์เพลง.....	91
การโอนเพลงโดยใช้ Windows Media Player	92
การใช้ iSync.....	92
ตัวแปลง DivX.....	93

เว็บไซต์

เบราว์เซอร์.....	94
การเข้าใช้เว็บไซต์.....	94
การเพิ่มและการใช้บุคมาร์ค	94
การใช้ RSS reader	95
การเข้าใช้เพจที่บันทึกไว้	95
การดูประวัติข้อมูลเบราว์เซอร์.....	95
การเปลี่ยนการตั้งค่าเว็บเบราว์เซอร์ ..	96
การใช้โทรศัพท์เป็นโมเด็ม	96
เข้าใช้งาน Google Maps	97

ตั้งค่า

การเปลี่ยนการตั้งค่าหน้าจอ.....	98
การปรับแต่งรูปแบบเสียงของคุณ	98
การเปลี่ยนการตั้งค่าโทรศัพท์	99
การเปลี่ยนการตั้งค่าสัมผัส	100
การเปลี่ยนการตั้งค่าการเชื่อมต่อ	100
การใช้ตัวจัดการหน่วยความจำ	102
การใช้โหมด Flight	103
การส่งและการรับไฟล์โดยใช้บลูทูธ .	103
การเปลี่ยนการตั้งค่าบลูทูธ	104
การจับคู่กับอุปกรณ์บลูทูธอื่น	105

การใช้ชุดหูฟังบลูทูธ.....	105
Wi-Fi	106
การอัปเดตซอฟต์แวร์.....	108

อุปกรณ์เสริม..... 109

บริการเครือข่าย 110

ข้อมูลทางเทคนิค 110

คำแนะนำ

คำแนะนำเพื่อความปลอดภัยและ การใช้งานอย่างมีประสิทธิภาพ.....	112
การแก้ปัญหา	118

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ปุ่มคล้ายสวิตช์แบบเดอรี

ช่องเสียบหูฟังสเตอริโอหรือ
แฮนด์ฟรี

ปุ่มเปิดปิดเครื่อง
เปิด/ปิดโทรศัพท์

หูฟัง

เซนเซอร์รับสัญญาณหน้าจอ


กล้องภายใน

ปุ่มวางสาย

- ปฏีเสธสายเรียกเข้า
- กดหนึ่งครั้งเพื่อกลับสู่หน้า
จอหลัก

ปุ่มมัลติทาสกิ้ง

ปุ่มโทรออก/รับสาย
เพื่อโทรออกและรับสายเรียกเข้า

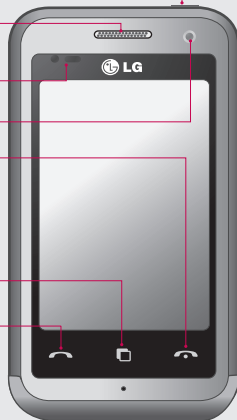

⚠ คำเตือน: การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการ
นั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสีย
หายได้ ห้ามติดฟิล์มป้องกันบนเซนเซอร์รับสัญญาณของ LCD
เนื่องจากอาจทำให้เซนเซอร์ทำงานผิดปกติได้



อุปกรณ์ชาร์จ สายเคเบิลขอมูล (สายเคเบิล USB)

เคล็ดลับ:

ก่อนการเชื่อมต่อสายเคเบิล USB ให้รอจนกระทั่งโทรศัพท์เปิดเครื่องและได้ลงทะเบียนกับเครือข่ายแล้ว



ปุ่มปรับระดับเสียง

- เมื่อหน้าจอไม่ใช้งาน: ระดับเสียงสัมผัส
- ระหว่างการใช้สาย: ระดับเสียงหูฟัง
- ขณะเล่นแทปรีค: ควบคุมระดับเสียง

ปุ่มกล้องถ่ายรูป

- ไปที่เมนูกล้องถ่ายรูปโดยกดปุ่มค้างไว้

01

02

03

04


05

06

07

08

ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ

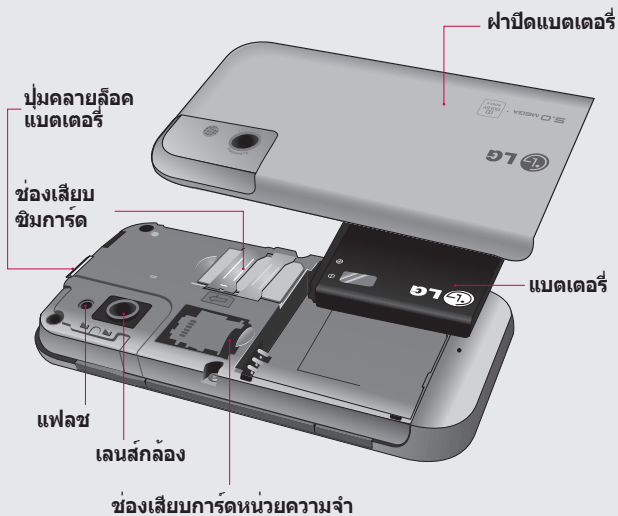

การใส่ซิมและแบตเตอรี่

1 ถอดฝาปิดแบตเตอรี่

กดปุ่มคล้ายล๊อคแบตเตอรี่ที่
ด้านบนของโทรศัพท์ที่ค้างไว้
แล้วดึงฝาปิดแบตเตอรี่ขึ้น



2 ถอดแบตเตอรี่ออก

จับที่ขอบด้านบนของแบตเตอรี่
และยกออกจากช่องใส่แบตเตอรี่



คำเตือน: ห้ามถอดแบตเตอรี่
ขณะที่เปิดโทรศัพท์อยู่ เนื่องจาก
อาจทำให้เครื่องเสียหายได้

คำเตือน: ห้ามถอดฝาปิด
แบตเตอรี่ขณะกำลังใช้งาน GPS,
Wi-Fi หรือบลูทูธ เสาอากาศถูกติด
ตั้งไว้ในฝาปิดแบตเตอรี่

01

02

03

04

05

06


07

08

การใส่ซิมและแบตเตอรี่


3 ใส่ซิมการ์ด

ใส่ซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง ในการถอดซิมการ์ด ให้ค่อยๆ ดึงซิมการ์ดออกมา

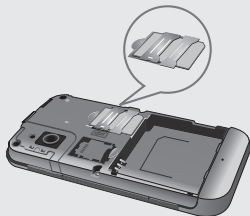

4 ใส่แบตเตอรี่


ใส่แบตเตอรี่โดยให้ด้านบนของแบตเตอรี่ลงไปทางด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วของโทรศัพท์ จากนั้น กดด้านล่างของแบตเตอรี่ให้แน่นเข้าที่

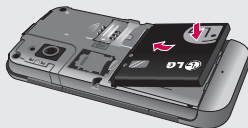

การชาร์จโทรศัพท์

เลื่อนฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านหลังของโทรศัพท์ KM900 เสียบอุปกรณ์ชาร์จ และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ คุณจะต้องชาร์จโทรศัพท์ KM900 จนกว่าข้อความ "แบตเตอรี่เต็มแล้ว" จะปรากฏขึ้นบนหน้าจอ

หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่
ไม่ต้องสนใจข้อความ "แบตเตอรี่เต็มแล้ว" ที่ปรากฏครั้งแรก และชาร์จแบตเตอรี่ทิ้งไว้ตลอดคืน (หรือไม่เกิน 14 ชั่วโมง)

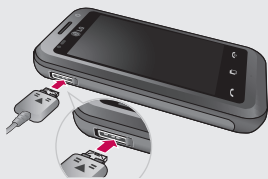

01

02

03

04

05

06

07

08

การใส่หน่วยความจำ





การใส่การ์ดหน่วยความจำ

คุณสามารถเพิ่มพื้นที่หน่วยความจำในโทรศัพท์ได้โดยใช้การ์ดหน่วยความจำ

หมายเหตุ: การ์ดหน่วยความจำเป็นอุปกรณ์เสริม

ใส่การ์ดหน่วยความจำเข้าไปในช่องเสียบที่ด้านบนให้แน่นเข้าที่ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

⚠ คำเตือน: ใส่การ์ดหน่วยความจำลงในช่องเสียบ มิฉะนั้นการต่ออาจเสียหายได้

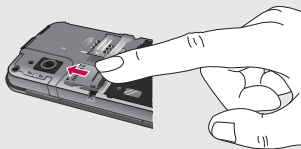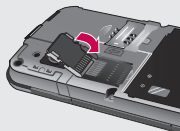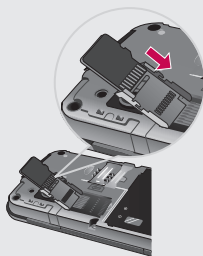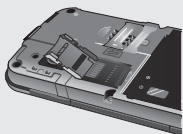


การฟอร์แมตการ์ด

หน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้ฟอร์แมต คุณจำเป็นต้องฟอร์แมตการ์ดหน่วยความจำก่อนคุณจึงจะสามารถเริ่มต้นใช้งานการถ่ายโอนข้อมูลได้


หมายเหตุ: ไฟล์ทุกไฟล์จะถูกลบออกในขณะที่ฟอร์แมต

- 1 จากหน้าจอหลักให้เลือก  และเลือก **ตั้งค่าโทรศัพท์** จากแท็บตั้งค่า
- 2 เลื่อนและแตะที่ **สถานะความจำ** จากนั้นเลื่อนและเลือก **หน่วยความจำการ์ด**
- 3 แตะที่ **ฟอร์แมต** แล้วยืนยันการเลือกของคุณ
- 4 ป้อนรหัสผ่าน หากมีการกำหนดไว้แล้ว การ์ดจะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน

หมายเหตุ: หากมีข้อมูลอยู่ในการ์ดหน่วยความจำของคุณ โครงสร้างไฟล์เดสก์ทอปจะแตกต่างกันไปจากเดิมภายหลังการฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก

การโอนรายชื่อ

ในการโอนรายชื่อจากซิมการ์ดไปยังโทรศัพท์:

- 1 จากแท็บการติดต่อ ให้เลื่อนไปที่ **รายชื่อ** แล้วเลือก  จากนั้นเลือก **เปลี่ยนที่ตั้ง**
- 2 แตะที่ **คัดลอกไปยังตัวเครื่อง**
- 3 เลือก **เลือกทั้งหมด** หรือเลือกทีละชื่อ แล้วแตะที่ **คัดลอกไปยังตัวเครื่อง**

01

02

03

04


05

06









07

08

แผนผังเมนู

แตะที่  ในหน้าจอหลักเพื่อเปิด **เมนูบนสุด** จากหน้าจอนี้ คุณสามารถเข้าใช้งานเมนูต่างๆ โดยการเลื่อนไปที่ไอคอน: **การติดต่อ**, **มัลติมีเดีย**, **ยูทิลิตี้** และ **ตั้งค่า**









การติดต่อ

-  รายชื่อ
-  ข้อมูลโทร
-  เบร้าวเซอร์
-  ข้อความ
-  อีเมล
-  โทรออก
-  โทรวิดีโอ
-  Google

มัลติมีเดีย

-  เพลง
-  กล้อง
-  กล้องวิดีโอ
-  คลังภาพ
-  ดาวน์โหลด
-  เกมส์
-  วิทยุ FM
-  สร้างหนังสือ

ยูทิลิตี้

-  ตั้งปลุก
-  ปฏิทิน
-  บันทึก
-  จับเวลา
-  บันทึกเสียง
-  คณิตเลข
-  เวลาโลก
-  เครื่องมือ

ตั้งค่า

-  โพรไฟล์
-  หน้าจอ
-  โทรศัพท์
-  บลูทูธ
-  WiFi
-  การโทร
-  เชื่อมต่อ
-  ข้อความ

หน้าจอหลักของคุณ

จากหน้าจอนี้คุณสามารถเข้าใช้งานตัวเลือกเมนูต่างๆ โทรออก ดูสถานะของโทรศัพท์ และอื่นๆ ได้อีกมากมาย

เคล็ดลับสำหรับหน้าจอสัมผัส

หน้าจอหลักเป็นที่ที่ดีเยี่ยมที่จะช่วยฝึกให้คุณเคยชินกับการใช้หน้าจอสัมผัส

ในการเลือกรายการ

ให้แตะที่กลางไอคอน

- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ
- เมื่อไฟหน้าจอดับลง ให้กดปุ่มเปิดปิดเครื่อง หรือกดปุ่มปลดล็อค/ล็อคบนหน้าจอสัมผัสค้างไว้เพื่อกลับไปหน้าจอหลัก

- เมื่อไม่มีการใช้งานโทรศัพท์ KM900 เครื่องจะกลับไปล็อคหน้าจอ

01

02

03

04

05

06


07

08

หน้าจอหลักของคุณ

การปรับแต่งหน้าจอหลัก

- 1 หน้าจอหลักขีดคั่น
- 2 หน้าจอหลัก Widget (ใช้งาน)
- 3 หน้าจอหลักรายชื่อ
- 4 หน้าจอหลักมีลติมีเดีย

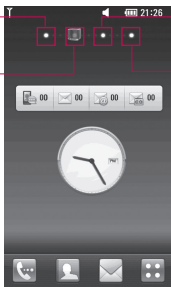

- **ทำความรู้จักกับ KM900 ของคุณ** - เมนูสำหรับผู้ใช้แบ่ง เป็นหน้าจอหลัก 4 ประเภท ในการสลับระหว่างหน้าจอหลักต่างๆ เพียงลากนิ้วบนหน้าจอจากซ้ายไปขวาหรือขวาไปซ้ายอย่างรวดเร็ว
- **การปรับแต่งหน้าจอหลัก** - สำหรับหน้าจอหลักแต่ละประเภท คุณสามารถเพิ่มและลบออบเจกต์ได้ โดยกดนิ้วลงบนหน้าจอแล้วค้างไว้ หรือหากเพิ่มออบเจกต์ไว้แล้ว ให้แตะที่ออบเจกต์ที่ต้องการแล้วค้างไว้



ปุ่มด่วน

ปุ่มด่วนบนหน้าจอหลักจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ใช้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



แตะเพื่อเปิดปุ่มหมายเลขแบบ
สัมผัสสำหรับใช้โทรออก ป้อน
หมายเลขโดยใช้ปุ่มกดปกติ
แล้วแตะที่ **สนทนา** หรือแตะ



ในการสนทนาทางวิดีโอกับ
หมายเลขนี้ ให้ป้อนหมายเลข
แล้วแตะที่ **สนทนาทางวิดีโอ**



แตะเพื่อเปิดรายชื่อ ในการค้น
หาหมายเลขที่คุณต้องการโทร:
ให้ป้อนชื่อโดยโดยใช้ปุ่มสัมผัส
คุณยังสามารถสร้างรายชื่อใหม่
และแก้ไขรายชื่อที่มีอยู่ได้



แตะเพื่อเข้าใช้เมนู **ข้อความ**
จากชั้นตอนนี้ คุณสามารถสร้าง
SMS ใหม่ได้



แตะเพื่อเปิดเมนูแบบเต็ม
โดยจะแบ่งเป็น 4 ประเภท

01

02

03

04

05

06

07

08

หน้าจอหลักของคุณ

หน้าจอสัมผัส

การควบคุมบนหน้าจอสัมผัสของ KM900 สามารถเปลี่ยนแปลงได้ขึ้นอยู่กับงานที่คุณกำลังทำ

การเปิดแอปพลิเคชัน

ในการเปิดแอปพลิเคชันใดก็ตาม เพียงแตะที่ไอคอนนั้น




การเลื่อนหา

ลากจากด้านหนึ่งไปยังอีกด้านหนึ่งเพื่อเลื่อน ในหน้าจอบางหน้าจอ เช่น เว็บเพจ คุณสามารถเลื่อนขึ้นหรือลงได้อีกด้วย



การซูมเข้าหรือออก
ขณะดูรูปภาพ เว็บเพจ
อีเมล หรือแผนที่
คุณสามารถซูมเข้าและออกได้ เลื่อน
นิ้วเข้าหากันหรือแยกออกจากกัน

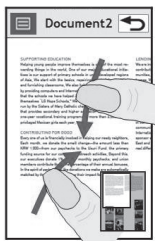

01

02

03

04

05

06

07

08

หน้าจอหลักของคุณ

การดูแถบสถานะ

แถบสถานะใช้ไอคอนที่แตกต่างกันเพื่อแสดงสถานะ เช่น ความแรงของสัญญาณ ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีการใช้งานบลูทูธหรือการเชื่อมต่อข้อมูลอยู่หรือไม่

ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	คำอธิบาย
	ไม่มีสัญญาณ
	2G
	3G
	EDGE
	HSDPA
	เปิด Wi-fi
	ชุดหูฟังแฮนด์ฟรีโมโนบลูทูธ
	ชุดหูฟังสเตอริโอโมโนบลูทูธ
	ชุดหูฟังสเตอริโอบลูทูธ
	ชุดหูฟังโมโนบลูทูธ

ไอคอน	คำอธิบาย
	เปิดบลูทูธ
	เครื่องพิมพ์ผ่านบลูทูธ
	ถ่ายโอนผ่านบลูทูธ
	การมองเห็นบลูทูธ
	ฟังเพลงผ่านบลูทูธ
	กำลังดาวน์โหลด
	การดาวน์โหลดเสร็จสมบูรณ์
	ยกเลิกการดาวน์โหลด
	ตัวเลือกระหว่างใช้สาย
	อินเตอร์เน็ต
	กำลังค้นหา
	การโอนสาย
	ปฏิเสธการรับสาย
	ระบบป้องกัน
	ชุดหูฟัง
	โหมดโหมด
	โรมมิ่ง
	ตั้งปลุก
	นัดหมาย (ปฏิทิน)

ไอคอน	คำอธิบาย
	มัลติทาสกิ้ง
	หยุดเพลง
	เล่นเพลง
	เล่นเพลงด้วยบรอดคาสต์ FM
	เล่นวิทยุ FM
	บรอดคาสต์ FM
	กำลังส่งอีเมลล์
	ได้รับอีเมลล์
	MMS
	กำลังส่ง MMS
	ได้รับ MMS
	กำลังส่ง SMS
	ข้อความเสียงใหม่
	ข้อความใหม่
	การส่งข้อความล้มเหลว
	อีเมลล์ใหม่
	ข้อความ Push
	โหมด Flight
	นอกอาคาร

ไอคอน	คำอธิบาย
	เงียบ
	เสียงเรียกเข้าที่ปรับแต่ง 1-10
	หน่วยความจำภายนอก
	สถานะแบตเตอรี่
	โปรเจคเตอร์/TV out

01

02

03

04

05

06


07

08

หน้าจอหลักของคุณ

การใช้งานฟังก์ชัน

มัลติทาสกิ้ง



แตะปุ่มมัลติทาสกิ้ง  เพื่อเปิดเมนูมัลติทาสกิ้ง จากเมนูนี้ คุณสามารถดูแอปพลิเคชันที่รันอยู่ และเขาใช้งานได้ด้วยการกดปุ่มเดียว




การโทร

เคล็ดลับ! กดปุ่มเปิดปิดเพื่อล๊อคหน้าจอสัมผัสเพื่อป้องกันการโทรออกโดยไม่ตั้งใจ



การโทรออกหรือการสนทนาทางวิดีโอ

- 1 แตะที่  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขบนปุ่มกดในการลบตัวเลข ให้กดปุ่มลบ
- 3 แตะปุ่ม  เพื่อโทรออก
- 4 ในการวางสาย ให้แตะปุ่ม 



เคล็ดลับ! ในการป้อนเครื่องหมาย + เพื่อโทรออกต่างประเทศ ให้แตะที่ * สองครั้ง หรือกด 0+ ค้างไว้

เคล็ดลับ! คุณสามารถบันทึกหมายเลข, ส่งข้อความ, ค้นหารายชื่อ โดยแตะที่ 

การโทรออกโดยใช้รายชื่อ

- 1 จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด รายชื่อ
- 2 เลื่อนดูรายชื่อหรือป้อนอักษรตัวแรกของรายชื่อที่คุณต้องการโทรโดยแตะที่ 
- 3 จากรายการ แตะที่รายชื่อที่คุณต้องการโทร และเลือกหมายเลขที่จะใช้หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข
- 4 แตะที่ สายสนทนา หรือ สนทนาทางวิดีโอ

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่ม  เพื่อรับสาย
กดปุ่ม  เพื่อปฏิเสธสายเรียกเข้า

01

02

03

04

05


06

07

08

การโทร

ตัวเลือกต่างๆ ระหว่างใช้สาย

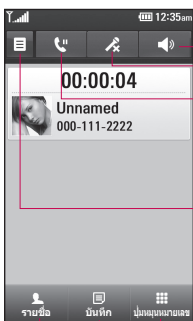

ลำโพง - แตะที่  เพื่อเปิดลำโพง

ปิดเสียง - แตะที่  เพื่อปิดไมโครโฟน ดังนั้นบุคคลที่กำลังคุยสายอยู่จะไม่ได้ยินเสียงคุณ

พัก - แตะที่  เพื่อพักสาย

ตัวเลือก - เลือกจากรายการตัวเลือกระหว่างใช้สาย รวมถึงการสร้างบันทึกใหม่ และไปที่ข้อความ ดังนั้นคุณสามารถตรวจสอบข้อความและเพิ่มรายชื่อระหว่างการโทรได้ นอกจากนี้ คุณยังสามารถวางสายได้โดยการแตะที่ วางสาย

 - แตะเพื่อเปิดปุ่มตัวเลขสำหรับการป้อนตัวเลข เช่น เมื่อโทรไปยังศูนย์บริการหรือการบริการโทรศัพท์อัตโนมัติอื่นๆ

 - เพิ่มบันทึกระหว่างการโทร



 - ค้นหารายชื่อระหว่างการโทร


การปรับระดับเสียง สายสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้สาย ให้ไข่มุมขึ้นและลงทางด้านขวาของโทรศัพท์

โทรด่วน



คุณสามารถกำหนดรายชื่อที่โทรออกบ่อยเป็นหมายเลขโทรด่วนได้

- 1 จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด **รายชื่อ**
- 2 แตะที่  แล้วเลือก **โทรด่วน**
- 3 ข้อความเสียงของคุณถูกตั้งค่าไว้ที่โทรด่วน 1 คุณจะเปลี่ยนไม่ได้ แตะที่หมายเลขอื่นๆ เพื่อกำหนดรายชื่อสำหรับโทรด่วน
- 4 รายชื่อของคุณจะเปิดขึ้น เลือกรายชื่อที่คุณต้องการกำหนดให้กับหมายเลขนั้น โดยการแตะที่หมายเลขโทรศัพท์หนึ่งครั้ง

ในการโทรหมายเลขด่วน ให้แตะที่  ในหน้าจอหลัก จากนั้นกดหมายเลขที่กำหนดค้างไว้จนกว่ารายชื่อจะปรากฏบนหน้าจอ เครื่องจะทำการ

โทรออกโดยอัตโนมัติ โดยไม่ต้องกดสายสนทนา

การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะ  แล้วเลือกหมายเลขที่คุณต้องการโทรออก
- 2 โทรโดยใช้หมายเลขหรือค้นหาจากรายชื่อของคุณ (โปรดดูรายละเอียดที่ **การโทรออก** ในหน้า 25)
- 3 แตะที่  เพื่อโทรออก
- 4 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทรสายสนทนาแรกจะล็อกและพักสายไว้
- 5 ในการวางสายใดสายหนึ่งหรือวางสายทั้งสองสาย กด **วางสาย**

01

02

03

04

05

06

07

08

การโทร




หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การปิด DTMF

DTMF ทำให้คุณสามารถใช้คำสั่งตัวเลขเพื่อนำเหตุการณ์ในการโทรอัตโนมัติ คำเริ่มต้นของ DTMF ตั้งไว้ที่ เปิดในการปิดการทำงานระหว่างใช้สาย (เช่น การกดตัวเลข) ให้แตะที่  และเลือก **ปิด DTMF**

การดับบันทึกการโทร

จากหน้าจอหลัก ให้แตะที่  จากนั้นแตะที่ **ข้อมูลการโทรล่าสุด** ในแท็บการติดต่อเลือกจากตัวเลือกต่อไปนี้:

ประวัติทั้งหมด -

ดูรายการสายที่โทรออก, ได้รับและไม่ได้รับ, เฉพาะสายสนทนา, สนทนาทางวิดีโอและข้อความ


สายไม่ได้รับ - ดูรายการสายที่คุณไม่ได้รับทั้งหมด

เฉพาะการโทร - ดูรายการสายที่คุณโทรออกและสายที่คุณไม่ได้รับทั้งหมด

เฉพาะข้อความ - ดูรายการหมายเลขทั้งหมดที่คุณได้รับหรือส่งข้อความตัวอักษรและข้อความมัลติมีเดีย


เฉพาะ VT-

ดูรายการสนทนาทางวิดีโอทั้งหมด

เคล็ดลับ! จากบันทึกการโทร ให้แตะที่  และ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

เคล็ดลับ! แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่, เวลา และระยะเวลาในการโทร

การใช้การโอนสาย


- 1 แตะที่  และเลือก **ตั้งค่าการโทร** ในแท็บตั้งค่า
- 2 แตะที่ **การโอนสาย** และเลือก **โทรด้วยเสียง** และ/หรือ **สนทนาทางวิดีโอ**
- 3 เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดต่อไม่ได้
- 4 แตะที่ **เปิดใช้** เพื่อเปิดใช้งาน
- 5 ป้อนหมายเลขที่ต้องการให้โอนสายไป

หมายเหตุ: การโอนสายจะมีค่าใช้จ่ายโปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

เคล็ดลับ!

ในการปิดการโอนสายทั้งหมด ให้เลือก **เลิกใช้ทั้งหมด** จากเมนู **การโอนสาย**

การใช้การป้องกันการโทร

- 1 แตะที่  และเลือก **ตั้งค่าการโทร** ในแท็บตั้งค่า
- 2 แตะที่ **ป้องกันการโทร** และเลือก **โทรด้วยเสียง** และ/หรือ **สนทนาทางวิดีโอ**
- 3 เลือกตัวเลือกใดตัวเลือกหนึ่ง หรือเลือกทั้ง 5 ตัวเลือกนี้: **โทรออกทั้งหมด**
สายโทรออกต่างประเทศ
สายโทรออกต่างประเทศ ยกเว้นประเทศแม่
สายเรียกเข้าทั้งหมด
สายเข้าเมื่ออยู่ต่างประเทศ

01

02

03

04

05

06

07

08

การโทร


- 4 ป้อนรหัสผ่านสำหรับป้องกันการโทร โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

เคล็ดลับ! เลือก

กำหนดเบอร์โทรออก

คุณต้องใส่รหัส PIN2ซึ่งได้จากผู้ให้บริการของคุณ เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

การเปลี่ยนการตั้งค่าการโทรทั่วไป

- 1 แตะที่  และเลือก **ตั้งค่าการโทร** ในแท็บตั้งค่า
- 2 แตะที่ **การตั้งค่าทั่วไป** ตัวเลือกนี้จะช่วยให้คุณเปลี่ยนแปลงการตั้งค่าต่อไปนี้:

ปฏิเสธการรับสาย -

เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** คุณสามารถแตะที่ **ปฏิเสธรายการ** เพื่อเลือกการโทรทั้งหมด รายชื่อหรือกลุ่มที่ระบุ หรือการโทรจากหมายเลขที่ไม่รู้จัก (เช่น หมายเลข

เลขที่ไม่อยู่ในรายชื่อของคุณ)

ส่งหมายเลขตัวเอง - เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่

โทรเข้าอัตโนมัติ -

เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

เดือนทุกนาที -


เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** ฟังเสียงเดือนทุกนาทีระหว่างการใช้สาย

โหมดตอบรับ BT - เลือก

แฮนด์ฟรี เพื่อให้สามารถรับสายได้โดยใช้ชุดหูฟังบลูทูธ หรือเลือก **ตัวเครื่อง** เพื่อรับสายโดยกดปุ่มบนตัวเครื่อง

บันทึกหมายเลขใหม่ - เลือก **เปิด** หรือ **ปิด** เพื่อบันทึกหมายเลขใหม่

การเปลี่ยนการตั้งค่าการสนทนาทางวิดีโอ

- 1 จากหน้าจอหลัก ให้แตะที่  และเลื่อนไปที่ **ตั้งค่าการโทร** ในแท็บตั้งค่า
- 2 แตะที่ **ตั้งค่าสนทนาวิดีโอ** และเลือกการตั้งค่าสำหรับการสนทนาทางวิดีโอของคุณ ตัดสินใจว่าจะใช้ภาพนิ่งหรือไม่ จากนั้นเลือกภาพนิ่งภาพ และ/หรือเปิดกระจกเพื่อใหม่มองเห็นตัวคุณเองบนหน้าจอเมื่อโทรแบบสนทนาทางวิดีโอ

01

02

03

04

05

06

07




08

รายชื่อ

การค้นหารายชื่อ

คุณสามารถค้นหารายชื่อได้ 2 วิธี:

จากหน้าจอหลัก

- 1 จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด **รายชื่อ** และที่  และป้อนชื่อโดยใช้ปุ่มกด
- 2 แตะที่ **สนทนาทางวิดีโอ** หรือ **สายสนทนา** หรือนุ่ม  เพื่อโทรออก



เคล็ดลับ!


คุณสามารถค้นหาตามกลุ่ม โดยแตะที่แท็บรายชื่อที่ด้านบนของหน้าจอ แล้วเลือก **กลุ่ม** ซึ่งจะเป็นการแสดงรายการกลุ่มทั้งหมดของคุณ

จากเมนูหลัก

- 1 แตะที่  จากนั้นแตะ **รายชื่อ** ในแท็บการติดต่อ
- 2 แตะที่  และ **ค้นหา**



การเพิ่มรายชื่อใหม่

- 1 จากหน้าจอหลัก แตะที่  จากนั้นเลือก  แล้วแตะปุ่ม **รายชื่อใหม่**
- 2 เลือกว่าจะบันทึกรายชื่อใน **ตัวเครื่อง** หรือ **USIM**
- 3 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะที่ **เพิ่มรูปภาพ**
- 4 ป้อนชื่อและนามสกุลของรายชื่อใหม่ คุณไม่จำเป็นต้องป้อนทั้งสองรายการ แต่คุณต้องป้อนอย่างน้อยหนึ่งรายการ
- 5 ป้อนหมายเลขที่แตกต่างกันได้สูงสุด 5 หมายเลข และระบุประเภทให้กับแต่ละหมายเลข โดยเลือกกระแหวง **เบอร์มือถือ**, **โฮม**, **ออฟฟิศ**, **เบอร์เพจเจอร์**, **แฟกซ์**, **VT** และ **ทั่วไป**
- 6 เพิ่มอีเมลแอดเดรส

- กำหนดรายชื่อให้กับกลุ่มหนึ่ง กลุ่มหรือมากกว่า เลือกกระหว่าง ไม่มีกลุ่ม, ครอบครัว, เพื่อน, เพื่อนร่วมงาน, โรงเรียน หรือ วิไอพี
- คุณสามารถเพิ่ม เสียงเรียกเข้า, โสมเพจ, ที่อยู่บ้าน, ชื่อบริษัท, ชื่องาน, ที่อยู่บริษัท, วันเกิด, วันครบรอบ และ บันทึกลับ
- แตะที่  เพื่อบันทึกรายชื่อ

เคล็ดลับ! คุณสามารถสร้างกลุ่มที่กำหนดเองสำหรับรายชื่อของคุณได้ โปรดดูที่ การสร้างกลุ่ม

การสร้างกลุ่ม

- จากหน้าจอหลัก ให้แตะที่  จากนั้นแตะที่ รายชื่อ ในแท็บการติดต่อ
 - แตะรายชื่อที่อยู่ด้านบนของหน้าจอ แล้วแตะที่ กลุ่ม แล้วเลือกกลุ่มใหม่
 - ป้อนชื่อสำหรับกลุ่มใหม่
 - แตะที่  เพื่อบันทึกกลุ่ม
- หมายเหตุ:** หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะหายไป แต่ยังคงอยู่ในรายชื่อ

เคล็ดลับ! คุณสามารถแก้ไขกลุ่มที่มีอยู่แล้วโดยแตะที่กลุ่มที่เลือกหนึ่งครั้ง เลือก ดูสมาชิก, แก้ไขกลุ่ม, ส่งข้อความ, ส่งนามบัตร หรือลบกลุ่ม

01

02

03

04

05

06


07

08

รายชื่อ

การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถเปลี่ยนแปลงการตั้งค่ารายชื่อให้เหมาะสมกับความต้องการของคุณได้

- 1 **แตะที่รายชื่อ** ในแท็บการติดต่อเลือก  แล้วเลื่อนไปที่ **การตั้งค่ารายชื่อ**
- 2 จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าต่อไปนี้:

ชื่อที่แสดง - เลือกว่าจะแสดงชื่อหรือนามสกุลของรายชื่อก่อนก็ได้


คัดลอก - คัดลอกรายชื่อจากซิมไปยังตัวเครื่องหรือจากตัวเครื่องไปยังซิม คุณสามารถคัดลอกทีละรายการหรือทั้งหมดในครั้งเดียว

ย้าย - ตัวเลือกนี้ทำงานในลักษณะเดียวกับคัดลอก แต่รายชื่อจะถูกจัดเก็บไว้ในที่ตั้งใหม่เท่านั้น ดังนั้นเมื่อคุณย้ายรายชื่อจากซิมไปยังตัวเครื่อง รายชื่อนั้นจะถูกลบออกจากหน่วยความจำซิม

ลบรายชื่อ - ลบรายชื่อของคุณทั้งหมด และที่ **ใช่** หากคุณต้องการลบรายชื่อของคุณทั้งหมด

ข้อมูลหน่วยความจำ - ดูข้อมูลความจุของหน่วยความจำ

การดูข้อมูล

- 1 แตะที่ **รายชื่อ** จากแท็บการติดต่อ
เลือก  แล้วแตะที่ **ข้อมูล**
- 2 จากขั้นตอนนี้ คุณสามารถดู
เบอร์บริการ, เบอร์ส่วนตัว,
ข้อมูลหน่วยความจำ
(พื้นที่หน่วยความจำคงเหลือ) และ
นามบัตร

เคล็ดลับ!

ในการเพิ่มนามบัตรของคุณเอง
ให้เลือก **นามบัตร** และป้อนรายละเอียดที่คุณต้องการสำหรับรายชื่อใดๆ แตะไอคอน **บันทึก**
เพื่อดำเนินการให้เสร็จสิ้น

01

02

03

04

05

06

07



08

ข้อความ


ข้อความ

โทรศัพท์ KM900 ของคุณได้รวม SMS, MMS ไว้ในเมนูที่ใช้งานง่ายเพียงเมนูเดียว

คุณสามารถเข้าสู่ศูนย์ข้อความได้ 2 วิธี ดังนี้:


- 1 จากหน้าจอหลัก แตะที่  หรือ  เลื่อนไปที่ **ข้อความ** ในแท็บการติดต่อ

การส่งข้อความ

- 1 แตะที่  แล้วแตะ **ข้อความ** เพื่อเปิดข้อความเปล่า
- 2 แตะที่ **ถึง** เพื่อป้อนหมายเลขของผู้รับ หรือเปิดรายชื่อ หรือสิ่งที่ประทับใจ คุณสามารถเพิ่มรายชื่อหลายรายการได้ เมื่อคุณดำเนินการเสร็จแล้ว ให้แตะที่กล่องข้อความด้านล่างเพื่อเริ่มเขียนข้อความ
- 3 หลังจากป้อนข้อความ คุณสามารถส่ง SMS โดยแตะปุ่มส่ง ที่ด้านบนของข้อความ

เคล็ดลับ!

การส่งข้อความให้กับผู้รับทุกๆ คนจะคิดค่าใช้จ่ายที่ 160 ตัวอักษรต่อหนึ่งข้อความตัวอักษร

- 4 แตะที่  แทรก เพื่อเพิ่ม SMS อัดโนมัติ, MMS อัดโนมัติ, อีโมติคอน, ชื่อและเบอร์, สไลด์ใหม่, เรื่อง หรือลายเซ็น

⚠ คำเตือน:


การจำกัดตัวอักษรที่ 160 ตัวอักษรอาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับวิธีการเข้ารหัส SMS

⚠ คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ หรือไฟล์เสียงลงใน SMS ข้อความดังกล่าวจะถูกแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

การป้อนข้อความ


ปุ่มกด

 และเพื่อเปิดระบบป้อนข้อความแบบช่วยสะกดคำ T9

 และเพื่อเปลี่ยนภาษาที่ใช้เขียน

 และเพื่อเปลี่ยนปุ่มกดระหว่างตัวเลข, สัญลักษณ์ และข้อความ

ใช้ 

เพื่อเลือกดูแป้นพิมพ์แบบต่างๆ
ในโหมดป้อนข้อความแต่ละโหมด
(เช่น ตัวพิมพ์ใหญ่ หรือตัวพิมพ์เล็ก)
ในการเว้นวรรค ให้แตะที่ 

ระบบช่วยสะกดคำ T9

ในโหมด T9 คุณจะเห็น 

โหมด T9 จะใช้พจนานุกรมภายในเครื่อง เพื่อรับรู้คำศัพท์ที่คุณเขียนตามลำดับการกดปุ่ม เพียงแตะที่ปุ่มตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณจะป้อน พจนานุกรมจะคาดคะเนได้ถึงคำศัพท์ที่คุณต้องการใช้

ตัวอย่างเช่น กด 8, 3, 5, 3, 7, 4, 6, 6 และ 3 เพื่อเขียนคำว่า 'telephone'

การป้อนตัวอักษรด้วยตนเอง

ในโหมด ABC คุณต้องแตะที่ปุ่มซ้ำๆ เพื่อป้อนตัวอักษร ตัวอย่างเช่น ในการเขียนคำว่า 'hello' ให้แตะ 4 สองครั้ง, 3 สองครั้ง, 5 สามครั้ง, 5 อีกสามครั้ง แล้วกด 6 สามครั้ง

01

02

03

04

05

06


07

08

ข้อความ

การตั้งค่าอีเมล

คุณสามารถติดต่อสื่อสารได้แม้ในขณะที่เดินทางโดยส่งอีเมลจาก KM900 ของคุณ ซึ่งสามารถตั้งค่าอีเมลแอดเดสส์แบบ POP3 หรือ IMAP4 ได้อย่างรวดเร็วและง่ายดาย

- 1 **แตะที่ **
จากหน้าจอหลักและเลื่อนไปที่ **อีเมล** ในแท็บการติดต่อ
- 2 **แตะที่ **เขียนอีเมล**** หากยังไม่ได้ตั้งค่าแอดเดสส์อีเมล ให้เริ่มต้นใช้งานที่วิชาการตั้งค่าอีเมล

เคล็ดลับ! หากได้ตั้งค่าแอดเดสส์อีเมลไว้แล้ว วิชาการจะไม่เปิดใช้อัตโนมัติ

- 3 **คุณสามารถปฏิบัติตามขั้นตอนของวิชาการเพื่อตั้งค่า:**

คุณสามารถแก้ไขการตั้งค่าแอดเดสส์ที่ระบุได้ใน **ตั้งค่า > ตั้งค่าข้อความ > อีเมล > แอดเดสส์** การตั้งค่าต่างๆ มีดังต่อไปนี้:

- ชื่อ** - ป้อนชื่อสำหรับแอดเดสส์
- ชื่อผู้ใช้** - ป้อนชื่อผู้ใช้ของแอดเดสส์
- รหัสผ่าน** - ป้อนรหัสผ่านของแอดเดสส์
- อีเมลแอดเดสส์** - ป้อนอีเมลแอดเดสส์ของแอดเดสส์
- อีเมลที่ตอบกลับ** - ป้อนอีเมลแอดเดสส์ 'ตอบกลับ'
- เซิร์ฟเวอร์เมลที่ส่งออก** - ป้อนแอดเดสส์เซิร์ฟเวอร์อีเมลขาออก
- เซิร์ฟเวอร์เมลขาเข้า** - ป้อนแอดเดสส์เซิร์ฟเวอร์อีเมลขาเข้า
- ขนาดการรับได้สูงสุด** - เลือกจำกัดขนาดอีเมล ไม่เกิน 1 MB
- ประเภทเมลบ็อกซ์** - ป้อนประเภทเมลบ็อกซ์ POP3 หรือ IMAP4
- บันทึกในเซิร์ฟเวอร์** - เลือกว่าจะบันทึกอีเมลไว้ในเซิร์ฟเวอร์หรือไม่
สำเนาจะถูกบันทึกเสมอสำหรับแอดเดสส์ IMAP4


บันทึกเมลที่ส่งไว้ใน -
เลือกว่าจะบันทึกอีเมลที่ส่ง (สำหรับ
เมลบ็อกซ์ IMAP4) ไว้ที่ใด
สำหรับเมลบ็อกซ์ POP3 อีเมลที่ส่ง
จะถูกบันทึกไว้ในตัวเครื่อง

ตัวเลือกการดาวน์โหลด - เลือก
วิธีที่คุณต้องการดาวน์โหลดอีเมล
เลือกระหว่างเฉพาะส่วนหัวหรือ
ทั้งหมดรวมทั้งเนื้อความสำหรับ
POP3 และเฉพาะส่วนหัว, ส่วนหัว
+ เนื้อความ, หรือทั้งหมดสำหรับ
IMAP4

จุดเชื่อมต่อ -
เลือกจุดเชื่อมต่ออินเทอร์เน็ต
ตั้งค่าขั้นสูง - เลือกว่าจะใช้การตั้ง
ค่าขั้นสูงหรือไม่

เมื่อตั้งค่าแอคเคาท์แล้ว แอคเคาท์นี้
จะปรากฏอยู่ในรายการแอคเคาท์ใน
โพลเดอริเมลล์

การส่งอีเมลโดยใช้ แอคเคาท์ใหม่

- 1 แตะที่  จากหน้าจอหลัก
และเลื่อนไปที่ **อีเมล** ในแท็บการ
ติดต่อเพื่อเปิดขอความเปล่า
- 2 ป้อนแอตเดรสผู้รับและเขียน
ขอความของคุณ คุณยังสามารถ
แนบภาพ, วิดีโอ, ไฟล์เสียง
และไฟล์ประเภทอื่นได้
- 3 แตะที่ **ส่งอีเมล**
เพื่อส่งอีเมลของคุณ

เคล็ดลับ!

ในระหว่างการเชื่อมต่อ Wi-Fi
จะมีการรับและส่งอีเมลผ่านทาง
Wi-Fi

01

02

03

04

05

06


07

08

ข้อความ

การเปลี่ยนการตั้งค่าอีเมล

คุณสามารถเปลี่ยนแปลงการตั้งค่าอีเมลตามความต้องการของคุณได้

- 1 แตะที่  จากหน้าจอหลัก แล้วเลื่อนไปที่ **ตั้งค่าข้อความ** ในแท็บตั้งค่า
- 2 เลือก **อีเมล**
- 3 คุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:

แอดเดสส์อีเมล -

จัดการแอดเดสส์อีเมลของคุณ

ตอบกลับอีเมลได้ - เลือกเพื่อให้ส่งข้อความตอบกลับเพื่อยืนยันว่าอีเมลถูกเปิดอ่านแล้วหรือไม่

รองขอการตอบกลับอีเมล - เลือกว่าต้องการขอความยืนยันการอ่านหรือไม่

รอบเวลาการเรียกดู -

เลือกความถี่ที่จะให้โทรศัพท์ KM900

ตรวจสอบข้อความอีเมลใหม่

ประกอบด้วยข้อความใน

การส่งต่อ & ตอบกลับ- เลือกเพื่อรวมข้อความต้นฉบับในการตอบกลับ

รวมสิ่งที่แนบ - เลือกเพื่อรวมสิ่งที่แนบต้นฉบับในการตอบกลับ

เรียกอัตโนมัติในการโรมมิ่ง -

เลือกว่าจะดึงข้อความโดยอัตโนมัติเมื่อคุณอยู่ต่างประเทศ (โรมมิ่ง) หรือไม่

ข้อมูลการแจ้งอีเมลใหม่ - เลือกว่าจะแจ้งเตือนอีเมลใหม่ด้วยข้อความบ๊อปอัปหรือไม่

ลายเซ็น -

สร้างลายเซ็นสำหรับอีเมล และเปิดคุณสมบัตินี้

โฟลเดอร์ข้อความ

คุณจะได้เข้าใจโครงสร้างโฟลเดอร์ในโทรศัพท์ KM900 ของคุณได้ทันทีเนื่องจากโฟลเดอร์ต่างๆ

มีโครงสร้างที่เข้าใจง่าย

หากคุณตั้งค่าแอคเคาท์อีเมล คุณสามารถสร้างโฟลเดอร์สำหรับแต่ละแอคเคาท์ได้

ถัดเข้า - ข้อความทั้งหมดที่ได้รับจะเก็บไว้ในถัดเข้าของคุณ จากหน้าจอนี้คุณสามารถดูและลบข้อความเหล่านั้นได้ พร้อมด้วยฟังก์ชันต่างๆ

ถัดออก - โฟลเดอร์นี้เป็นโฟลเดอร์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป

ส่ง - ข้อความที่คุณส่งจะเก็บไว้ในโฟลเดอร์นี้

ร่าง -

หากคุณยังเขียนข้อความไม่เสร็จ คุณสามารถบันทึกสิ่งที่คุณเขียนไว้ในโฟลเดอร์นี้ได้

Chat box - ข้อความที่แลกเปลี่ยนกับบุคคลอื่นผ่านทาง Messenger คุณสามารถบันทึกภาพและข้อความพร้อมกันได้

โฟลเดอร์ส่วนตัว - สร้างโฟลเดอร์เพื่อจัดเก็บข้อความ

การใช้ข้อความอัตโนมัติ

สร้างข้อความอัตโนมัติสำหรับข้อความ SMS และ MMS ที่คุณส่งบ่อยๆ มีข้อความอัตโนมัติอยู่ในโทรศัพท์ของคุณอยู่แล้ว ซึ่งคุณสามารถแก้ไขได้

- 1 เมื่อเขียนข้อความใหม่ คุณสามารถป้อน **ข้อความอัตโนมัติ** จาก แทรก ในเมนูตัวเลือก
- 2 เลือก **SMS อัตโนมัติ** หรือ **MMS อัตโนมัติ** คุณสามารถเพิ่ม, แก้ไข, ลบ หรือลบข้อความอัตโนมัติทั้งหมดได้ ในการแก้ไขข้อความ, เลือก, ปรับปรุง, แล้วแตะที่ **บันทึกข้อความอัตโนมัติ**

01

02

03

04

05

06

07

08

ข้อความ

การใช้อีโมติคอน

ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้อีโมติคอน มีอีโมติคอนที่ใช้กันทั่วไปในโทรศัพท์ของคุณอยู่แล้ว

- 1 เมื่อเขียนข้อความใหม่ คุณสามารถป้อน **อีโมติคอน** จาก **แทรก** ในเมนูตัวเลือก
- 2 คุณสามารถเพิ่มอีโมติคอนใหม่โดยแตะที่ **อีโมติคอนใหม่**

การเปลี่ยนการตั้งค่าข้อความตัวอักษร

การตั้งค่าข้อความของโทรศัพท์ KM900 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้นคุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนแปลงการตั้งค่านี้ได้ตามความต้องการของคุณ

เลื่อนไปที่ **ตั้งค่าข้อความ** ในแท็บตั้งค่า แล้วแตะที่ **ข้อความตัวอักษร** คุณสามารถเปลี่ยนการตั้งค่าได้ดังต่อไปนี้:

ศูนย์ข้อความตัวอักษร -

ป้อนรายละเอียดของศูนย์ข้อความ **รายงานผลการส่ง** - เลื่อนสวิตช์ไปทางซ้ายเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว

ช่วงที่มีผลใช้ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

ชนิดข้อความ -

แปลงข้อความตัวอักษรเป็น **เสียง**, **แฟกซ์**, **X.400** หรือ **อีเมล**

การเข้ารหัสตัวอักษร -

เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลกระทบต่อนามของข้อความและค่าบริการส่งข้อความของคุณ

การส่งข้อความยาว -

เลือกเพื่อส่งข้อความยาวเป็นหลาย SMS หรือเป็น MMS

การเปลี่ยนการตั้งค่าข้อความ มัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์
KM900 จะได้รับการกำหนด
ค่าไว้ล่วงหน้าแล้ว ดังนั้น
คุณสามารถส่งข้อความได้ทันที คุณ
สามารถเปลี่ยนแปลงการตั้งค่านี้ได้
ตามความต้องการของคุณ

ในแท็บ **ตั้งค่า** ให้เลือก
ตั้งค่าข้อความ และ
ข้อความมัลติมีเดีย คุณสามารถ
เปลี่ยนการตั้งค่าได้ดังต่อไปนี้:

โหมดการเรียกข้อมูล

- เลือก **เครือข่ายหลัก**
หรือ **เครือข่ายโรมมิ่ง**
หากคุณเลือกกำหนดเอง คุณจะ
ได้รับเฉพาะข้อความแจ้งเกี่ยวกับ MMS
เท่านั้น คุณสามารถตัดสินใจว่าจะ
ดาวน์โหลดแบบเต็มหรือไม่

หมายเหตุ: การดาวน์โหลด MMS
ขณะอยู่ในเครือข่ายโรมมิ่งอาจมีค่าใช้จ่ายเพิ่มเติม

รายงานผลการส่ง -
เลือกทำให้ส่งและ/หรือต้องการรายงาน
งานผลการส่งหรือไม่
อ่านข้อความตอบรับ
- เลือกทำให้มีและ/
หรือส่งการตอบกลับการอ่านหรือไม่
ระดับความสำคัญ -
เลือกระดับความสำคัญของ MMS
ช่วงที่มีผลใช้ - เลือกระยะเวลาที่จัด
เก็บข้อความไว้ในศูนย์ข้อความ
ระยะเวลาสไลด์ - เลือกระยะเวลาที่
จะให้สไลด์ปรากฏบนหน้าจอ
โหมดการสร้าง - จำกัด/ ค่าเดือน/
ว่างอยู่
เวลาส่ง - เลือกระยะเวลาในการรอ
ก่อนส่งข้อความ
ศูนย์ MMS -
ป้อนรายละเอียดของศูนย์ข้อความ

01

02

03

04

05

06

07


08

ข้อความ

การเปลี่ยนการตั้งค่าอื่นๆ

เลื่อนไปที่ **ตั้งค่าข้อความ**

ในแท็บตั้งค่า จากนั้น:

ข้อความเสียง -แตะที่ **โปรไฟล์ใหม่**
หรือ  เพื่อเพิ่มบริการข้อความ
เสียงใหม่ ติดต่อผู้ให้บริการเครือข่าย
ของคุณสำหรับข้อมูลเพิ่มเติมเกี่ยวกับ
บริการที่มีให้

ข้อความบริการ - เลือกว่าจะรับหรือ
บล็อกข้อความบริการ คุณยังสามารถ
กำหนดระดับความปลอดภัยของ
ข้อความได้โดยการสร้างรายการผู้ส่งที่
เชื่อถือได้และเชื่อถือไม่ได้

บริการข้อมูล - เลือกสถานะการรับ,
ภาษา และการตั้งค่าอื่นๆ

กล้องถ่ายรูป

การถ่ายภาพด้วย

- 1 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์ค้างไว้
- 2 ถือโทรศัพท์ในแนวนอน แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 3 กดปุ่มถ่ายภาพลงเบาๆ ช่องโฟกัสจะปรากฏขึ้นที่กลางหน้าจอช่องมองภาพ
- 4 จัดตำแหน่งโทรศัพท์เพื่อให้คุณสามารถมองเห็นวัตถุที่จะถ่ายภาพในช่องโฟกัส
- 5 เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 6 กดปุ่มถ่ายภาพค้างไว้

เคล็ดลับ! การติดตามหน้า

การติดตามหน้านี้ เป็นการตรวจจับและโฟกัสใบหน้าของมนุษย์โดยอัตโนมัติเพื่อช่วยให้คุณถ่ายภาพได้คมชัด

01

02

03

04

05

06


07

08

กล้องถ่ายรูป

เมื่อคุณถ่ายภาพแล้ว

ภาพที่ถ่ายจะปรากฏบนหน้าจอ
ชื่อภาพจะแสดงพร้อมด้วย 4
ไอคอนที่ด้านขวาของหน้าจอ

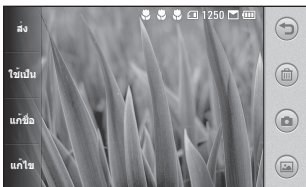

ส่ง และเพื่อส่งรูปภาพเป็น
**ข้อความ, อีเมล, บลูทูธ หรือ
Blogger** โปรดดูที่หน้า 36
สำหรับการส่งข้อความ และหน้า 103
สำหรับการส่งและการรับไฟล์โดยใช้
บลูทูธ

หมายเหตุ: การดาวน์โหลด MMS
ขณะอยู่ในเครือข่ายโรมมิ่งอาจมีค่าใช้จ่ายเพิ่มเติม

ใช้เป็น และเพื่อใช้ภาพนี้เป็นพื้นหลัง

แก้ไขชื่อ


และเพื่อแก้ไขชื่อของภาพที่เลือก

แก้ไข

และเพื่อแก้ไขภาพโดยใช้
เครื่องมือต่างๆ


 และเพื่อกลับไปเมนูก่อนหน้า

 และเพื่อลบภาพ

 และเพื่อถ่ายภาพอื่นทันที โดยที่
ภาพปัจจุบันของคุณจะได้รับการ
บันทึกไว้

 และเพื่อดูคลังภาพที่บันทึกไว้

ทำความรู้จักกับช่องมองภาพ

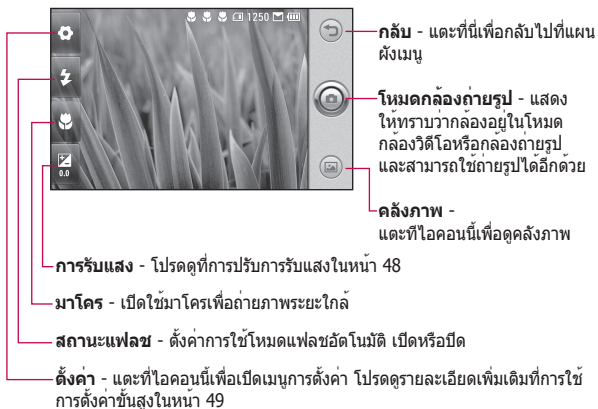

เคล็ดลับ! คุณสามารถปิดตัวเลือกชัตเตอร์เพื่อให้หน้าจอช่องมองภาพโล่งขึ้นได้ เพียงตะกี้ที่กึ่งกลางของช่องมองภาพหนึ่งครั้ง ในการเรียกใช้งานตัวเลือกใหม่ให้ตะกี้หน้าจออีกครั้ง

01

02

03

04

05

06


07

08

กล้องถ่ายรูป

การใช้แฟลช

ค่าเริ่มต้นของแฟลช คือ อัตโนมัติ แต่คุณสามารถตั้งค่าด้วยตัวเลือกอื่นได้

- 1 เลือก  จากด้านซ้ายของช่องมองภาพเพื่อเข้าสู่เมนูย่อยแฟลช
- 2 มีตัวเลือกแฟลชให้เลือก 3 ตัวเลือกคือ:

อัตโนมัติ - กล้องของคุณจะประเมินแสงที่มีเพื่อให้ได้ภาพที่ดีและใช้แฟลชเท่าที่จำเป็น




ปิดเสมอ - กล้องจะไม่ใช้แฟลชเลย ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการประหยัดพลังงานแบตเตอรี่

เปิดเสมอ - กล้องจะใช้แฟลชเสมอ


- 3 เมื่อคุณแตะที่ตัวเลือกที่คุณต้องการเมนูแฟลชจะปิดเองอัตโนมัติให้คุณสามารถถ่ายภาพได้ทันที
- 4 ไอคอนสถานะแฟลชในช่องมองภาพจะเปลี่ยนแปลง ทั้งนี้ขึ้นอยู่กับโหมดแฟลชใหม่

การปรับการรับแสง


การรับแสงเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืดในภาพภาพที่มีระดับความเข้มต่ำจะมีลักษณะมืด ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า

- 1 แตะที่  0.0
- 2 เลื่อนตัวบ่งชี้ความเข้มตามแถบไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงลดลงและมีสว่างขึ้นหรือไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงสูงขึ้นและคมชัดยิ่งขึ้น

การถ่ายภาพต่อเนื่อง

- 1 จากช่องมองภาพ ให้แตะที่  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมดและเลือก **ชัตตต่อเนื่อง**
- 2 จัดให้วัตถุอยู่ในช่องมองภาพ แล้วกดปุ่มถ่ายภาพเหมือนกับการถ่ายภาพปกติ
- 3 กล้องจะถ่ายภาพต่อเนื่อง ชัตต

การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะที่  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด คุณสามารถเปลี่ยนการตั้งค่ากล้องถ่ายรูปได้โดยเลื่อนปุ่มหมุน หลังจากเลือกตัวเลือก ให้แตะปุ่ม **ตกลง**

สลับไป - สำหรับการถ่ายภาพตนเอง ให้สลับเป็นกล้องภายในของ LG KM900 คุณสามารถสลับไปมาระหว่างโหมดกล้องถ่ายรูปและโหมดกล้องวิดีโอได้

ขนาดภาพ - เปลี่ยนขนาดของภาพถ่ายเพื่อประหยัดพื้นที่หน่วยความจำหรือถ่ายภาพที่มีขนาดเหมาะสมสำหรับรายชื่อ โปรดดูที่ **การเปลี่ยนขนาดภาพ** ในหน้า 51

เอฟเฟกต์สี - เลือกโทนสีเพื่อใช้กับรูปภาพใหม่ โปรดดูที่ **การเลือกเอฟเฟกต์สี** ในหน้า 52

ความสมดุลแสง - เลือกระหว่าง **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** และ **มิดครีม**

ตัวตั้งเวลา - ตัวตั้งเวลาทำให้คุณสามารถตั้งช่วงเวลาหน่วงหลังจากที่กดชัตเตอร์แล้ว ให้เลือก **ปิด**, **3 วินาที**, **5 วินาที** หรือ **10 วินาที** ซึ่งเป็นวิธีการที่ช่วยให้คุณถ่ายรูปตอนเองได้

01

02

03

04

05

06

07

08

กล้องถ่ายรูป

โหมดชัตเตอร์ - เลือกโหมดชัตเตอร์ต่อเนื่อง

ISO - ISO กำหนดความไวของเซนเซอร์แสงในกล้อง ISO ที่มากขึ้น ความไวของกล้องก็มากขึ้นเท่านั้น ซึ่งจะเป็นประโยชน์สำหรับสภาพแวดล้อมที่มีดีในขณะที่คุณไม่สามารถใช้แฟลชได้ เลือกค่า ISO จาก **อัตโนมัติ, 100, 200, 400 และ 800**

คุณภาพ - เลือกระหว่าง **ละเอียดมาก, ละเอียด และ ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของรูปภาพก็มากขึ้นเท่านั้น อย่างไรก็ตาม ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่งหมายความว่า你能จะจัดเก็บรูปภาพในหน่วยความจำได้น้อยลง

ความจำที่ใส่ - เลือกว่าจะบันทึกภาพถ่ายที่หน่วยความจำเครื่องหรือหน่วยความจำภายนอก

ช้อนไอคอน - เลือกช้อนไอคอน การตั้งค่ากล้องถ่ายรูปด้วยตนเองหรืออัตโนมัติ

การป้องกันภาพสั่นไหว - ช่วยให้คุณสามารถถ่ายภาพได้โดยกล้องไม่สั่น

อัตโนมัติ - เลือกวิธีการโฟกัสของกล้อง เลือกระหว่าง **สป็อต, กำหนดเอง และ การติดตามหน้า**

เสียงชัตเตอร์ - เลือกเสียงชัตเตอร์ เสียงใดเสียงหนึ่งจากสี่เสียง

มุมมองกริด - เลือกระหว่าง **ปิด, 2x2 กริด หรือ 3x3 กริด**

จีโอแท็ก - **เปิด/ ปิด**

รีเซ็ต - เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป


เคล็ดลับ!

เมื่อคุณออกจากกล้องถ่ายรูป การตั้งค่าทั้งหมดจะกลับสู่ค่าเริ่มต้น ยกเว้นขนาดภาพและคุณภาพของภาพ การตั้งค่าที่ไม่ใช่ค่าเริ่มต้นจะถูกรีเซ็ต เช่น โทนสีและ ISO ตรวจสอบค่าเหล่านี้ ก่อนที่คุณจะถ่ายภาพครั้งถัดไป

เคล็ดลับ! เมนูการตั้งค่าซ้อนทับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบด้านสีหรือคุณภาพของภาพ คุณจะเห็นดูตัวอย่างของภาพที่เปลี่ยนได้ที่ด้านหลังเมนูการตั้งค่า

การเปลี่ยนขนาดภาพ

จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งหมายถึงการใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บรูปภาพในโทรศัพท์ให้มากขึ้น คุณสามารถเปลี่ยนความละเอียดเพื่อให้ไฟล์มีขนาดเล็กลงได้

- 1 การใช้ช่องมองภาพ ให้แตะที่  ในมุมมองด้านบน
- 2 เลือก **ขนาดภาพ** จากเมนูดูตัวอย่าง
- 3 เลือกค่าพิกเซลจากตัวเลือกหกตัวเลือก (**5M: 2560x1920, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) หรือเลือกค่าพื้นที่หลังที่ตั้งไว้ล่วงหน้า

01

02

03

04

05


06

07

08

กล้องถ่ายรูป


การเลือกเอฟเฟกต์สี


- 1 การใช้ช่องมองภาพ ให้แตะที่  ในมุมขวามือ
- 2 เลือก **เอฟเฟกต์สี** จากเมนูตัวอย่าง
- 3 ตัวเลือกโทนสีมีห้าตัวเลือกดังนี้ : **ปิด, สีซีเปีย, โมโน, เนกาทีฟ, พิมพ์นูน**
- 4 เมื่อคุณเลือกแล้ว สามารถปิดเมนูโทนสีได้โดยการกดปุ่ม **ตกลง** ขณะนี้คุณพร้อมถ่ายภาพแล้ว

เคล็ดลับ! คุณสามารถเปลี่ยนรูปภาพที่ถ่ายไว้จากภาพสีให้เป็นภาพขาวดำหรือซีเปียได้ แต่คุณไม่สามารถเปลี่ยนรูปภาพที่ถ่ายไว้จากภาพขาวดำหรือซีเปียให้เป็นภาพสี

การใช้กล้องภายใน


โทรศัพท์ LG KM900 ของคุณมีกล้องถ่ายรูปตัวในขนาด 640x480 สำหรับการสนทนาทางวิดีโอและสำหรับการถ่ายภาพ

- 1 ในการสลับไปยังกล้องภายใน ให้แตะที่  แล้วเลือก **สลับไป-กล้องภายใน** จากเมนูตัวอย่าง
- 2 หลังจากผ่านไปสักครู่ คุณจะเห็นภาพตัวคุณเองอยู่ในช่องมองภาพในการถ่ายภาพ ให้กดปุ่มด้านข้างของโทรศัพท์ตามปกติ

เคล็ดลับ! กล้องภายในมีการตั้งค่าที่น้อยกว่าเนื่องจากไม่มีแฟลช และการปรับความไวคุณยังสามารถเปลี่ยนขนาดภาพ, ความสมดุลแสง และตั้งเวลาถ่ายภาพได้โดย  แบบเดียวกับที่ใช้กล้องหลัก

- 3 หลังจากที่คุณถ่ายภาพแล้ว เครื่องจะแสดงตัวเลือกทั้งหมดเหมือนกับ การถ่ายภาพด้วยกล้องหลัก
- 4 ในการกลับไปยังกล้องหลัก ให้แตะที่  แล้วเลือก กล้องภายนอก จากเมนูตัวอย่าง

การดูรูปถ่ายที่บันทึกไว้

- 1 คุณสามารถเข้าดูรูปถ่ายที่บันทึกไว้จากภายในโหมดกล้อง ถ่ายรูปได้ เพียงแตะที่  และคลังภาพของคุณจะปรากฏบนหน้าจอ

01

02

03

04

05




06

07

08

กล้องวิดีโอ

การถ่ายวิดีโอด้วย

- 1 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์ค้างไว้
- 2 จากนั้น แตะที่ touch  แล้วเลือก **สลับไป** ในช่องมองภาพในโหมดกล้องถ่ายรูปเพื่อสลับเป็นโหมดวิดีโอ หรือคุณสามารถเข้าสู่เมนูนี้ได้โดยตรงด้วยการกดปุ่ม **กล้องวิดีโอ**
- 3 ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 4 ถือโทรศัพท์ในแนวนอน แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 5 กดปุ่มถ่ายภาพหนึ่งครั้งเพื่อเริ่มการบันทึก
- 6 **บันทึก** จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพพร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ
- 7 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  แล้วเริ่มบันทึกต่อโดยเลือก 

- 8 แตะที่  บนหน้าจอเพื่อหยุดการบันทึก

หลังการถ่ายวิดีโอ

ภาพหนึ่งที่แสดงวิดีโอของคุณจะปรากฏขึ้นบนหน้าจอ ชื่อของวิดีโอจะแสดงที่ด้านล่างของหน้าจอ พร้อมทั้งไอคอนสี่ไอคอนทางด้านขวาของหน้าจอ



เลน และเพื่อเล่นวิดีโอ

ส่ง และเพื่อส่งรูปภาพเป็นข้อความ, อีเมล, บลูทูธ หรือ YouTube โปรดดูที่หน้า 36 สำหรับการส่งข้อความ และหน้า 103 สำหรับการส่งและการรับไฟล์โดยใช้บลูทูธ

หมายเหตุ: การดาวน์โหลด MMS ขณะอยู่ในเครือข่ายโรมมิ่งอาจมีค่าใช้จ่ายเพิ่มเติม

ใช้เป็น และเพื่อใช้ภาพนี้เป็นพื้นหลัง

แก้มือ

และเพื่อแก้ไขชื่อของภาพที่เลือก

แก้มือ

และเพื่อแก้ไขภาพด้วยเครื่องมือต่างๆ

- และเพื่อกลับไปเมนูก่อนหน้า
- และเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะที่ไอคอนของมองภาพจะปรากฏขึ้นอีกครั้ง
- และเพื่อถ่ายภาพวิดีโออื่นต่อทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้
- และเพื่อดูรูปภาพที่บันทึกไว้และคลังภาพวิดีโอ

01

02

03

04

05


06

07

08

กล้องวิดีโอ

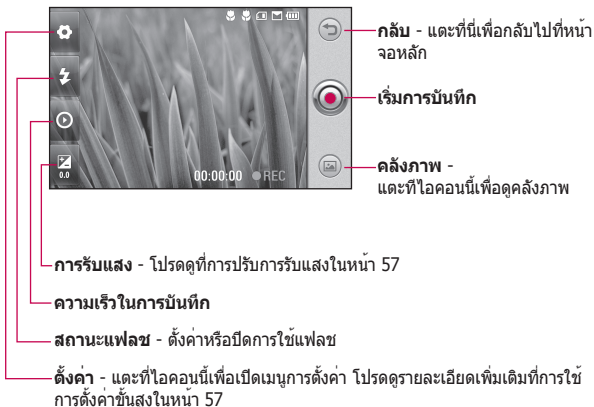


ทำความรู้จักกับช่องมองภาพ



เคล็ดลับ! คุณสามารถปิดตัวเลือกชัตเตอร์เพื่อให้น้ำจอกช่องมองภาพโล่งขึ้นได้ เพียงแตะที่กึ่งกลางของช่องมองภาพหนึ่งครั้ง ในการเรียกใช้งานตัวเลือกใหม่ ให้แตะที่หน้าจอกอีกครั้ง

การปรับการรับแสง

การรับแสงเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืดในภาพ ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมืด ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า

- 1 แตะที่  0.0
- 2 เลื่อนตัวบ่งชี้การรับแสงตามแถบไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงลดลงและมีสว่างมากขึ้น หรือไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงสูงขึ้นและคมชัดยิ่งขึ้น

การใช้การตั้งค่าขั้นสูง

ให้ใช้ช่องมองภาพ แล้วแตะที่ **ตั้งค่า** เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมดคุณสามารถปรับการตั้งค่ากล้องถ่ายรูปได้โดยเลื่อนปุ่มหมุน หลังจากเลือกตัวเลือก ให้แตะปุ่ม **ตกลง**

สลับไป -

สลับไปยังกล้องภายในของ LG KM900

เพื่อบันทึกวิดีโอของตัวเอง โปรดดูรายละเอียดเพิ่มเติมที่

การใช้กล้องถ่ายวิดีโอภายใน ในหน้า 59

ขนาดวิดีโอ - เปลี่ยนขนาดของวิดีโอเพื่อประหยัดพื้นที่

หน่วยความจำ โปรดดูที่

การเปลี่ยนขนาดของภาพวิดีโอ ในหน้า 58

โหมดถ่ายภาพ - เลือกกระหว่าง **อัตโนมัติ** หรือ **โหมดกลางคืน**

เอฟเฟกต์สี - เลือกโทนสีเพื่อ

ใช้กับรูปภาพมุมมองใหม่ โปรดดูที่

การเลือกโทนสี ในหน้า 59

ความสมดุลแสง - สมดุลแสงจะช่วยให้มั่นใจได้ว่าส่วนที่เป็นสีขาวที่ปรากฏในวิดีโอจะสวยสมจริง เพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน เลือกกระหว่าง **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** หรือ **มิดครีม**

01

02

03

04

05

06

07

08

กล้องวิดีโอ

คุณภาพของวิดีโอ - เลือกระหว่าง **ละเอียดมาก, ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของวิดีโอก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย หมายความว่า คุณสามารถจัดเก็บวิดีโอในหน่วยความจำของเครื่องได้น้อยลง

ระยะเวลา - ตั้งค่าจำกัดระยะเวลาสำหรับวิดีโอของคุณ เลือกระหว่าง **ปกติ** และ **MMS** เพื่อจำกัดขนาดวิดีโอให้สามารถส่งเป็น MMS ได้

เคล็ดลับ!

หากคุณเลือกระยะเวลาแบบ MMS การเลือกคุณภาพของภาพที่ต่ำลง จะช่วยให้คุณถ่ายภาพวิดีโอได้ยาวนานขึ้น

ความจำที่ใช้ - เลือกว่าจะบันทึกที่วิดีโอไว้ที่หน่วยความจำเครื่องหรือหน่วยความจำภายนอก

เสียง - เลือก ปิดเสียง เพื่อบันทึกวิดีโอโดยไม่มีเสียง


โฟกัสเสียง - เลือกโฟกัสเสียง: **ปิด/โฟกัสภายนอก/ โฟกัสภายใน**

ชอนไอคอน - เลือกว่าจะชอนไอคอนในเมนูกล้องถ่ายรูปโดยอัตโนมัติหรือกำหนดด้วยตนเอง

รีเซ็ท - รีเซ็ทการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด

การเปลี่ยนขนาดของภาพวิดีโอ

จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งหมายถึงการใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บวิดีโอไว้ในโทรศัพท์ให้มากขึ้น คุณสามารถเปลี่ยนความละเอียดเพื่อทำให้ไฟล์มีขนาดเล็กลงได้

- 1 การใช้ช่องมองภาพ ให้แตะที่  ในมุมขวาบน
- 2 เลือก **ขนาดวิดีโอ** จากเมนูดูตัวอย่าง
- 3 เลือกค่าพิกเซลจาก 4 ตัวเลือกดังนี้: **720x480(D1)** - ตัวเลือกหน้าจอกว้างที่มีคุณภาพสูงที่สุด **640x480** - VGA ขนาดมาตรฐาน

320x240 - ขนาดภาพเล็กลง
ขนาดไฟล์จึงเล็กลงด้วย ซึ่งเป็นวิธี
การที่ช่วยประหยัดพื้นที่หน่วยความ
จำ


176x144 - ขนาดภาพเล็กที่สุด
ขนาดไฟล์จึงเล็กที่สุดด้วย

- 4 แตะที่ปุ่ม **ตกลง**
เพื่อกลับไปที่ยังมองภาพ

เคล็ดลับ! ซอฟต์แวร์ตัดต่อที่ ยอดเยี่ยมบนโทรศัพท์ LG KM900 ของคุณ สามารถทำงานร่วมกับ วิดีโอทุกประเภท ยกเว้น 720x480 (D1) และ 640x480 อย่างบันทึกด้วยรูปแบบนี้ หากคุณต้องการตัดต่อวิดีโอของคุณ

เคล็ดลับ! โปรดดูข้อมูลเกี่ยวกับ ซอฟต์แวร์การแปลงรูปแบบวิดีโอ ได้จากแผ่นซีดีที่คุณได้รับมา พร้อมกัน KM900

การเลือกโทนสี

- 1 การใช้ช่องมองภาพ ให้แตะที่  ในมุมมอง ขาวบน
- 2 เลือก **เอฟเฟกต์สี** จากเมนูดูตัวอย่าง
- 3 โทนสีมีตัวเลือกทั้งหมด 6 ตัวเลือก ดังนี้ **ปิด, ซีเปีย, โมโน, เนกาทีฟ** หรือ **พิมพ์นูน**
- 4 ให้แตะที่โทนสีที่คุณต้องการใช้

เคล็ดลับ! คุณสามารถเปลี่ยนภาพ วิดีโอจากภาพสีเป็นภาพขาวดำ หรือซีเปียได้ แต่คุณไม่สามารถ เปลี่ยนจากภาพขาวดำหรือซีเปีย เป็นภาพสีได้

การใช้กล้องถ่ายวิดีโอในตัวใน

โทรศัพท์ LG KM900 ของคุณเมื่กล้องถ่ายรูปตัวในขนาด 320x240 สำหรับการสนทนาทาง วิดีโอและการบันทึกวิดีโอ

01

02

03

04



05

06

07

08


กล้องวิดีโอ

- 1 ในการสลับไปยังกล้องภายใน ให้แตะที่  แล้วเลือก **สลับไป** จากนั้นเลือก **กล้องภายใน** จากเมนูตัวอย่าง
- 2 หลังจากผ่านไปสักครู่ คุณจะเห็นภาพตัวคุณเองอยู่ในช่องมองภาพ ในการเริ่มบันทึกภาพ ให้กดปุ่มถ่ายภาพตามปกติ และกดอีกครั้งเพื่อหยุดการบันทึก
- 3 หลังจากที่คุณถ่ายภาพวิดีโอแล้ว เครื่องจะแสดงตัวเลือกทั้งหมด เหมือนกับการถ่ายวิดีโอด้วย กล้องหลัก
- 4 ในการกลับไปยังกล้องถ่ายรูปหลัก ให้แตะที่  แล้วแตะ **กล้องภายนอก**

เคล็ดลับ!

คุณยังสามารถเปลี่ยนขนาดภาพ, เอฟเฟกต์สี, ความสมดุลแสง และคุณภาพได้โดยแตะที่ **ตั้งค่า** แบบเดียวกับที่ใช้กล้องหลัก

การดูวิดีโอที่บันทึกไว้

- 1 ในช่องมองภาพ ให้แตะที่ 
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะที่วิดีโอหนึ่งครั้งเพื่อแสดงวิดีโอที่ด้านหน้าสุดของคลังภาพ วิดีโอที่เลือกจะเล่นอัตโนมัติ

การดูวิดีโอบนโทรทัศน์

เชื่อมต่อ KM900 เข้ากับโทรทัศน์ของคุณด้วยสายเคเบิลเอาต์พุตสำหรับโทรทัศน์


หมายเหตุ: สายเคเบิลเอาต์พุตสำหรับโทรทัศน์มีวางจำหน่ายแยกต่างหาก

เคล็ดลับ!

รูปแบบทั้งหมดยกเว้น 320x240 และ 176x144 สามารถทำงานร่วมกันได้กับเลนส์วิดีโอบนโทรทัศน์

รูปภาพและวิดีโอ


การดูรูปภาพและวิดีโอ

- 1 แตะที่  บนหน้าจอตลอดตัวอย่างในกล้องถ่ายรูป
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะที่วิดีโอหรือรูปภาพเพื่อเปิดทั้งไฟล์



เคล็ดลับ! กดปุ่มไปทางซ้ายหรือทางขวาเพื่อดูรูปภาพหรือวิดีโออื่น

เคล็ดลับ!

ในการลบรูปภาพหรือวิดีโอ ให้เปิดไฟล์นั้นๆ แล้วเลือก  แตะที่ **ใช่** เพื่อยืนยัน

การใช้การซูมขณะดูวิดีโอหรือภาพถ่าย

เมื่อดูรูปภาพหรือภาพวิดีโอ คุณสามารถซูมเข้าและซูมออกได้โดยการเลื่อนนิ้วเข้าหากันหรือแยกออกจากกัน

การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะที่กำลังเล่น ให้แตะที่แถบระดับเสียงที่ด้านล่างของหน้าจอหลังจากกดสัญลักษณ์ลำโพง หรือใช้ปุ่มระดับเสียงที่ด้านข้างของโทรศัพท์

01

02

03

04

05

06

07

08

รูปภาพและวิดีโอ

การตั้งค่ารูปภาพเป็นพื้นหลัง

- 1 แตะที่รูปภาพที่คุณต้องการตั้งค่าเป็นพื้นหลังเพื่อเปิด
- 2 แตะที่หน้าจอเพื่อเปิดเมนูตัวเลือก
- 3 แตะที่ **ใช้เป็น**
- 4 หน้าจอจะสลับไปเป็นโหมดแนวตั้ง คุณสามารถซูมเข้าและออก และขยายส่วนที่ครอบของรูปภาพได้ โดยใช้ภาพขนาดย่อที่ด้านล่างของหน้าจอ

การแก้ไขรูปภาพ

คุณสามารถใช้คุณสมบัติที่ยืดหยุ่นมากมายในการเปลี่ยนแปลงรูปภาพเพิ่มหรือทำให้รูปภาพมีชีวิตชีวาขึ้น

- 1 ให้เปิดรูปภาพที่คุณต้องการแก้ไขแล้วแตะที่ **แก้ไข** เพื่อแสดงตัวเลือก
- 2 แตะที่ไอคอนเพื่อปรับรูปภาพของคุณ:



กรอบรูปภาพของคุณ เลือกพื้นที่การครอบภาพแบบสี่เหลี่ยมหรือวงกลม แล้วเลื่อนนิ้วของคุณไปตามหน้าจอเพื่อเลือกพื้นที่



วาดลายเส้นบนรูปภาพของคุณด้วยมือ เลือกความหนาของเส้นจาก 4 ตัวเลือก

จากนั้นเลือกสีที่คุณต้องการใช้



การเพิ่มตัวหนังสือลงในรูปภาพ
โปรดดูที่

การเพิ่มข้อความลงในรูปภาพ
ในหน้า 64



ตกแต่งรูปภาพของคุณ
ด้วยสแตมป์ เลือกจากสแตมป์ต่างๆ
แล้วแตะบริเวณที่คุณต้องการวาง



ลบการแก้ไขที่คุณทำ
ไว้ในรูปภาพ คุณสามารถเลือก
ขนาดของยางลบที่คุณจะใช้ได้



และเพื่อกลับไปที่คุณภาพ

บันทึก บันทึกการเปลี่ยนแปลงที่
ทำไว้ในรูปภาพ เลือกเพื่อบันทึก
การเปลี่ยนแปลงเป็น **อัลบั้มที่มี**
หรือ **ไฟล์ใหม่** หากคุณเลือก
ไฟล์ใหม่ ให้ป้อนชื่อไฟล์

เลิกทำ

ลบการแก้ไขที่คุณทำ
ไว้ในรูปภาพ

รูปภาพ

และเพื่อเปิดตัวเลือก
เอฟเฟกต์เพิ่มเติม ได้แก่ หมุน
นอกจากนี้ ยังมีตัวเลือกการแก้ไขขั้น
สูงเพิ่มเติมอีก โปรดดูที่ การเน้นสี
และ การสลับสีในรูปภาพ ในหน้า
65

ฟิลเตอร์

และเพื่อใช้ตัวเลือกเอฟ
เฟกต์กับรูปภาพ

ปรับแต่ง

ซึ่งช่วยปรับการถ่ายภาพโดยใช้สี
ความสว่างและอื่นๆ โดยอัตโนมัติ

01

02

03

04

05

06

07


08



รูปภาพและวิดีโอ

การเพิ่มข้อความลงในรูปภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ **T**
- 2 เลือก **ตัวอักษร** เพื่อเพิ่มข้อความแบบไม่มีกรอบหรือเลือกรูปทรงลูกโป่งแสดงคำพูด
- 3 ป้อนข้อความโดยไข่มุกกดแล้วแตะที่ **บันทึก**
- 4 เลื่อนข้อความโดยแตะที่ข้อความแล้วเลื่อนไปยังบริเวณที่คุณต้องการ

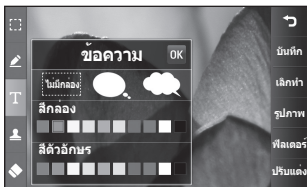

การเพิ่มเอฟเฟกต์ลงในรูปภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ **ฟิลเตอร์**
- 2 คุณสามารถใช้ตัวเลือกต่างๆ กับรูปภาพ
- 3 ในการเลือกทำเอฟเฟกต์ เพียงแตะที่ **เลิกทำ**

การครอบรูปภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ **📐**
- 2 เลือกรูปร่างที่คุณต้องการใช้เพื่อครอบรูปภาพ
- 3 ลากกรอบไปที่พื้นที่ที่คุณต้องการครอบ
- 4 เมื่อคุณเลือกเสร็จเรียบร้อยแล้ว ให้แตะที่ **บันทึก**

การเน้นสีในรูปภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ **รูปภาพ**
- 2 เลือก **เน้นสี**
- 3 เลือกส่วนหนึ่งส่วนใดของภาพ รอยเส้นจะปรากฏรอบสิ่งต่างๆ ในบริเวณนั้นที่มีสีเหมือนกัน หรือคล้ายคลึงกัน ตัวอย่างเช่น ผมหรือเสื้อ
- 4 ปรับความหนักเบาในการเน้นโดยแตะที่ **ความเข้ม** แล้วแตะปุ่ม '+' หรือ '-'
- 5 แตะที่ **ตกลง**
- 6 สีทั้งหมดจะหายไปจากรูปภาพ และหายไปจากบริเวณที่ทำเครื่องหมายสำหรับการเน้นสีไว้
- 7 เลือก **บันทึก** เพื่อบันทึกการเปลี่ยนแปลง

การสลบสีในรูปภาพ

- 1 จากหน้าจอแก้ไข ให้แตะที่ **รูปภาพ**
- 2 เลือก **เปลี่ยนสี**
- 3 เลือกส่วนหนึ่งส่วนใดของภาพ รอยเส้นจะปรากฏรอบสิ่งต่างๆ ในบริเวณนั้นที่มีสีเหมือนกัน หรือคล้ายคลึงกัน ตัวอย่างเช่น ผมหรือเสื้อ
- 4 เลือกสี
- 5 กด **ตกลง**
- 6 ส่วนของรูปภาพที่เลือกไว้สำหรับการเน้นสีจะเปลี่ยนเป็นสีที่เลือกไว้แทน
- 7 เลือก **บันทึก** เพื่อบันทึกการเปลี่ยนแปลง

01

02

03

04

05

06

07

08

รูปภาพและวิดีโอ

การแก้ไขวิดีโอ

คุณสมบัติการแก้ไขวิดีโอ
ได้กับวิดีโอประเภท MPEG4
ยกเว้นความละเอียด 720x480 (D1)
อย่างนั้นที่กด้วยรูปแบบนี้
หากคุณต้องการตัดต่อวิดีโอของคุณ

การตัดความยาวของวิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการตัดต่อ
แล้วแตะปุ่มตัวเลือก 
- 2 เลือก **แก้ไข** และเลือก **Trim/
Multi-trim**
- 3 แตะที่  และกำหนดจุดเริ่มต้น
และจุดสิ้นสุดใหม่โดยใช้ **Trim**
- 4 แตะที่ **ดูตัวอย่าง** เพื่อยืนยันว่าคุณพอใจ
ใจกับการตัดต่อใหม่
- 5 แตะที่ **บันทึก** หรือแตะที่  เพื่อกลับไปทีคลังภาพ
และยกเลิกการเปลี่ยนแปลง



การรวมวิดีโอสองเรื่อง

- 1 เปิดวิดีโอที่คุณต้องการตัดต่อ
แล้วแตะปุ่มตัวเลือก 
- 2 เลือก **แก้ไข** แล้วเลือก **Video
merge**
- 3 โฟลเดอร์ วิดีโอส่วนตัว จะเปิดขึ้น
เลือกวิดีโอที่คุณต้องการรวม
- 4 แตะและเลือกรูปภาพเพื่อย้ายรูป
ภาพไปยังตอนท้ายหรือตอนเริ่มต้น
ของวิดีโอ
- 5 แตะที่ **ดูตัวอย่าง** เพื่อเลือกวิธีการ
รวมวิดีโอเข้าด้วยกัน



- 6 กด **บันทึก** ตามด้วย **ไฟล์ใหม่** เพื่อบันทึกวิดีโอที่รวมใหม่ บันทึกทับไฟล์ที่มีอยู่แล้วหรือบันทึกเป็นไฟล์ใหม่
- 7 ทำซ้ำขั้นตอนเหล่านี้เพื่อรวมวิดีโอเรื่องอื่นๆ

การรวมรูปภาพเข้ากับวิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการตัดต่อ แล้วแตะปุ่มตัวเลือก
- 2 เลือก **แก้ไข** แล้วเลือก **Image merge**
- 3 โฟลเดอร์ ภาพส่วนตัว จะเปิดขึ้น เลือกรูปภาพที่คุณต้องการย้ายไปในวิดีโอ แล้วแตะที่ **เลือก**

- 4 แตะและเลือกรูปภาพเพื่อรวมเข้าที่ตอนท้ายหรือตอนเริ่มต้นของวิดีโอ
- 5 แตะที่ **ดูตัวอย่าง** เพื่อเลือกวิธีการรวมภาพและวิดีโอเข้าด้วยกัน
- 6 กด **บันทึก** จากนั้นเลือกว่าจะบันทึกทับไฟล์ที่มีอยู่แล้วหรือบันทึกเป็นไฟล์ใหม่
- 7 ทำซ้ำขั้นตอนเหล่านี้เพื่อรวมรูปภาพอื่นๆ

การเพิ่มข้อความลงในวิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการตัดต่อ แล้วแตะปุ่มตัวเลือก
- 2 เลือก **แก้ไข** แล้วเลือก **Text overlay**
- 3 แตะที่ แล้วพักการเล่นชั่วคราวเพื่อกำหนดจุดเริ่มต้นสำหรับการแสดงข้อความ
- 4 แตะที่ **เริ่ม** แล้วเลือกรูปแบบข้อความ ป้อนข้อความโดยใช้ปุ่มกด แล้วเลือก **ตกลง**

01

02

03

04

05


06

07

08

รูปภาพและวิดีโอ

- 5 และที่บริเวณหน้าจอที่คุณต้องการให้ข้อความปรากฏขึ้น แล้วแตะ **ตกลง**

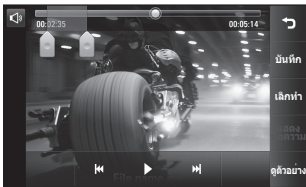

- 6 และที่ **บันทึก** บันทึกทับไฟล์ที่มีอยู่แล้วหรือบันทึกเป็นไฟล์ใหม่
- 7 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มข้อความอื่นๆ

การซ้อนรูปภาพ


- 1 เปิดวิดีโอที่คุณต้องการตัดต่อ แล้วแตะปุ่มตัวเลือก
- 2 เลือก **แก้ไข** แล้วเลือก **Image overlay**
- 3 โฟลเดอร์ ภาพส่วนตัว จะเปิดขึ้น เลือกรูปภาพที่คุณต้องการซ้อนบนวิดีโอ
- 4 และที่ แล้วพักการเล่นชั่วคราวเมื่อคุณต้องการให้รูปภาพแสดงขึ้น จากนั้นเลือก **ความทึบแสง** หลังจากแตะปุ่ม **เริ่ม**
- 5 และที่ **ตกลง** แล้วกด **หยุด** เมื่อการซ้อนรูปภาพควรสิ้นสุด
- 6 และที่บริเวณหน้าจอที่คุณต้องการให้ข้อความปรากฏขึ้น หากรูปภาพมีขนาดใหญ่เกินไป ภาพอาจซ้อนทับทั้งหน้าจอ ซึ่งอาจไม่ใช่เพียงบริเวณที่เลือก
- 7 และที่ **บันทึก** บันทึกทับไฟล์ที่มีอยู่แล้วหรือบันทึกเป็นไฟล์ใหม่
- 8 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มรูปภาพอื่นๆ

การใส่ขาวด์แทร็คลงในวิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการตัดต่อ แล้วแตะปุ่มตัวเลือก (☰)
- 2 เลือก **แก้ไข** แล้วเลือก **Audio dubbing**
- 3 โฟลเดอร์ เสียงส่วนตัว จะเปิดขึ้น เลือกแทร็คที่คุณต้องการเพิ่มในวิดีโอ
- 4 เสียงต้นฉบับในวิดีโอจะถูกลบออก
- 5 หากเสียงสั้นกว่าวิดีโอ ให้เลือกที่จะเล่น **ครั้งเดียว** หรือ **ซ้ำ**
- 6 บันทึกทับไฟล์ที่มีอยู่แล้วหรือบันทึกเป็นไฟล์ใหม่

การใส่เสียงสดลงในวิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการตัดต่อ แล้วแตะปุ่มตัวเลือก (☰)
- 2 เลือก **แก้ไข** แล้วเลือก **Live dubbing**
- 3 ตั้งค่าเสียงเป็นเสียงต้นฉบับหรือเสียงที่บันทึก

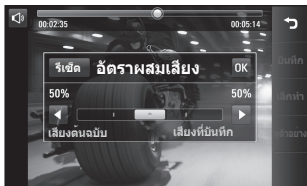

01

02

03

04

05

06

07

08


รูปภาพและวิดีโอ

การเปลี่ยนความเร็วของวิดีโอ


- 1 เปิดวิดีโอที่คุณต้องการตัดต่อ แล้วแตะปุ่มตัวเลือก 
- 2 เลือก **แก้ไข** แล้วเลือก **Time scaling**
- 3 เลือกตัวเลือกหนึ่งตัวเลือก ซึ่งสามารถแตกต่างกันได้ ขึ้นอยู่กับอัตราเฟรม
- 4 บันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่

การใส่เอฟเฟกต์

การเลื่อนภาพ

- 1 เปิดวิดีโอที่คุณต้องการตัดต่อ แล้วแตะปุ่มตัวเลือก 
- 2 เลือก **แก้ไข** แล้วเลือก **Dimming Effect**
- 3 วิดีโอของคุณจะมีการเฟดเข้าที่ตอนเริ่มต้นและเฟดออกที่ตอนจบ
- 4 บันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่

มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ ละเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ การใช้การ์ดหน่วยความจำทำให้คุณเพิ่มพื้นที่ในหน่วยความจำของโทรศัพท์ได้ ในการเข้าใช้งานเมนูมัลติมีเดีย ให้แตะที่  เลือก **เพิ่มข้อมูล** จากแท็บมัลติมีเดีย คุณสามารถเปิดรายการของไฟล์เดอที่รที่เก็บไฟล์มัลติมีเดียทั้งหมดได้

เคล็ดลับ!

ในการลบไฟล์ในแท็บข้อมูล ให้แตะที่  แล้ว **ลบ**

รูปภาพ

ภาพส่วนตัว

ประกอบด้วยรายการรูปภาพ รวมถึงภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

เมนูตัวเลือกภาพส่วนตัว

ตัวเลือกที่มีอยู่ใน **ภาพส่วนตัว**จะขึ้นอยู่กับประเภทรูปภาพที่คุณเลือก ตัวเลือกทั้งหมดจะใช้ได้กับภาพที่คุณถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์ ส่วนตัวเลือก **ตั้งรายการโปรด, เรียงตาม, ภาพสไลด์** และ **สถานะความจำ** จะมีใช้เฉพาะภาพเริ่มต้นเท่านั้น

การส่งรูปภาพ

- 1 เพียงเลือกรูปภาพที่ต้องการส่ง
- 2 แตะที่ **ส่ง** เลือกระหว่าง **ข้อความ, อีเมล, บลูทูธ** หรือ **Blogger**
- 3 หากคุณเลือก **ข้อความ** หรือ **อีเมล** รูปภาพจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** โทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งภาพไป

01

02

03

04

05

06



07

08

มัลติมีเดีย

การใช้รูปภาพ

คุณสามารถเลือกรูปภาพเพื่อใช้เป็นพื้นหลังและภาพพิกหน้าจอหรือใช้เพื่อระบุผู้โทรเข้าได้

- 1 แตะที่  แล้วเลือก **เพิ่มข้อมูล** จากแท็บมัลติมีเดีย
- 2 แตะที่ **ภาพส่วนตัว**
- 3 เลือกภาพแล้วแตะที่ 
- 4 แตะที่ **ใช้เป็น** แล้วเลือกระหว่าง:
 - พื้นหลัง** - เลือกภาพพื้นหลังสำหรับหน้าจอล็อคปุ่ม
 - รายชื่อ** - กำหนดภาพให้กับบุคคลในรายชื่อเพื่อให้ภาพนั้นปรากฏขึ้นเมื่อบุคคลนั้นโทรมา
 - ภาพเริ่มต้น** - กำหนดให้ภาพปรากฏขึ้นเมื่อเปิดเครื่อง
 - ภาพปิดเครื่อง** - กำหนดให้ภาพปรากฏขึ้นเมื่อปิดเครื่อง

ภาพสายโทรออก - กำหนดให้ภาพปรากฏขึ้นระหว่างการโทรออก



ภาพสายเรียกเข้า - กำหนดให้ภาพปรากฏขึ้นระหว่างมีสายเรียกเข้า

การพิมพ์ภาพ

- 1 แตะที่  แล้วเลือก **เพิ่มข้อมูล** จากแท็บมัลติมีเดีย
- 2 แตะที่ **ภาพส่วนตัว**
- 3 เลือกภาพแล้วแตะที่ 
- 4 แตะที่ **พิมพ์** จากนั้นเลือกระหว่าง **บลูทูธ** และ **PictBridge**



การย้ายหรือคัดลอกรูปภาพ

สามารถย้ายหรือคัดลอกภาพระหว่างหน่วยความจำของโทรศัพท์กับการจัดหน่วยความจำได้ เพื่อเป็นการเพิ่มพื้นที่ในหน่วยความจำใดหน่วยความจำหนึ่ง หรือเพื่อป้องกันภาพมีให้สูญหาย

- 1 และที่  แล้วเลือก **เพิ่มข้อมูล** จากแท็บมีลิตีมีเดีย
- 2 และที่ **ภาพส่วนตัว**
- 3 และที่ 
- 4 เลือก **ย้าย** หรือ **คัดลอก**

การสร้างภาพสไลด์

หากคุณต้องการดูภาพทั้งหมดบนโทรศัพท์ คุณสามารถสร้างภาพสไลด์เพื่อประหยัดเวลาในการเปิดและปิดภาพแต่ละภาพ



- 1 และที่  แล้วเลือก **เพิ่มข้อมูล** จากแท็บมีลิตีมีเดีย
- 2 และที่ **ภาพส่วนตัว**
- 3 และที่  แล้วเลือก **ภาพสไลด์**

จีโอแท็ก

เปิดกล้องถ่ายรูปและเฟลิดเฟลินไปกับความสามารถของบริการเกี่ยวกับตำแหน่งของโทรศัพท์ถ่ายภาพในที่ที่ต้องการและแท็กรูปภาพด้วยตำแหน่งที่ถ่ายภาพ หากคุณอัปโหลดรูปภาพที่แท็กไปยัง Blog ที่สนับสนุนจีโอแท็ก คุณจะเห็นรูปภาพนั้นแสดงบนแผนที่

การตรวจสอบสถานะหน่วยความจำ

คุณสามารถตรวจสอบจำนวนพื้นที่หน่วยความจำที่ใช้ไปและจำนวนที่เหลือ

- 1 และที่  แล้วเลือก **เพิ่มข้อมูล** จากแท็บมีลิตีมีเดีย
- 2 และที่ **ภาพส่วนตัว**
- 3 และที่  แล้วเลือก **สถานะความจำ**

01

02

03

04

05

06

07


08

มัลติมีเดีย

เสียง

โพลเดอร์ **เสียงส่วนตัว** ประกอบด้วยเสียงที่ดาวน์โหลด, **เสียงเริ่มต้น** และ **การบันทึกเสียง** จากขั้นตอนที่คุณสามารถจัดการ ส่ง หรือกำหนดเสียงเป็นเสียงเรียกเข้าได้


การใช้เสียง

- 1 แตะที่  แล้วเลือก **เพิ่มข้อมูล** จากแท็บมัลติมีเดีย
- 2 แตะที่ **เสียงส่วนตัว**
- 3 เลือก **เสียงเริ่มต้น** หรือ **ดาวน์โหลดเสียง**
- 4 ให้เลือกเสียง แล้วแตะไอคอนเล่นเสียงที่เลือกจะเริ่มเล่น
- 5 คุณสามารถใช้เสียงได้หลากหลายหลายหน้าที่โดยเลือกเมนู **ใช้เป็น**
- 6 เลือกระหว่าง **เสียงเรียกเข้า**, **เสียงเรียกเข้าแบบวิดีโอ** และ **เสียงข้อความ**

วิดีโอ

โพลเดอร์ **วิดีโอส่วนตัว** จะแสดงรายการวิดีโอที่คุณดาวน์โหลด หรือวิดีโอที่ได้บันทึกไว้ในโทรศัพท์


การดูวิดีโอ

- 1 แตะที่  แล้วเลือก **เพิ่มข้อมูล** ในแท็บมัลติมีเดีย
- 2 แตะที่ **วิดีโอส่วนตัว**
- 3 เลือกวิดีโอเพื่อเล่น

เคล็ดลับ! โทรศัพท์ KM900 สนับสนุนการเล่นวิดีโอทั้งรูปแบบ DivX และ Xvid เพื่อความหลากหลายของเนื้อหาที่ดียิ่งขึ้น โปรดดูรายละเอียดที่หน้า 93

หมายเหตุ: สายเคเบิลเอาต์พุตสำหรับโทรศัพท์มีวางจำหน่ายแยกต่างหาก


การส่งวิดีโอคลิป

- 1 เลือกวิดีโอ แล้วแตะที่ 
- 2 แตะที่ **ส่ง** แล้วเลือกกระหว่าง **ข้อความ**, **อีเมล**, **บลูทูธ** และ **YouTube**
- 3 หากคุณเลือก **ข้อความ** หรือ **อีเมล** วิดีโอคลิปจะแนบไปกับข้อความ ซึ่งคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** โทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งภาพไป

เกมส์และแอปพลิเคชัน

เพื่อความเพลิดเพลิน คุณสามารถดาวน์โหลดเกมส์และแอปพลิเคชันใหม่ลงในโทรศัพท์ได้

การเล่นเกมส์


- 1 แตะที่  แล้วเลือก **เพิ่มข้อมูล** ในแท็บมีลดีมีเดีย
- 2 แตะเมนู **เกมส์หรือแอปพลิเคชัน**
- 3 แตะปุ่ม **เริ่ม** เพื่อเริ่มต้นเกมส์หรือแอปพลิเคชัน

การใช้เมนูตัวเลือก

ภายในโพลเดอร์เกมส์และแอปพลิเคชัน จะมีตัวเลือกต่างๆ ดังต่อไปนี้:

- **โพลเดอร์ใหม่:** สร้างโพลเดอร์ภายในเกมส์หรือแอปพลิเคชัน
- **เรียงตาม:** เรียงลำดับเกมส์และแอปพลิเคชันตาม วันที่, ชื่อ, ขนาด หรือหน่วยความจำ
- **สถานะความจำ:** ดูสถานะหน่วยความจำของเครื่องหรือหน่วยความจำภายนอก

การติดตั้งเกมส์และแอปพลิเคชัน Java

- 1 แตะที่  แล้วเลือก **เพิ่มข้อมูล** ในแท็บมีลดีมีเดีย
- 2 หากคุณเสียบการ์ดหน่วยความจำใหม่ ให้แตะเมนู **หน่วยความจำภายนอก**
- 3 เลือกไฟล์(*.jad หรือ *.jar) ที่คุณต้องการติดตั้ง และแตะที่ **ติดตั้ง**

01

02

03

04

05

06

07

08

มัลติมีเดีย


ใช้เมนู M-Toy

เมนู M-Toy ประกอบด้วยแฟลชเกมส์ซึ่งใช้เช่นเซอร์การเคลื่อนไหวที่มีในตัว

แฟลชคอนเทนท์

โพลเดอร์แฟลชคอนเทนท์ประกอบด้วยไฟล์ SWF เริ่มต้นและที่ดาวน์โหลดทั้งหมด


การดูไฟล์ SWF/ SVG

- 1 แตะที่  แล้วเลือก **แฟ้มข้อมูล** จากแท็บมัลติมีเดีย
- 2 แตะที่ **แฟลชคอนเทนท์**
- 3 เลือกไฟล์ที่คุณต้องการดู

เอกสาร

สามารถใช้งานไฟล์ Excel, PowerPoint, Word, ข้อความ และ PDF ได้

การดูไฟล์

- 1 แตะที่  แล้วเลือก **แฟ้มข้อมูล** จากแท็บมัลติมีเดีย
- 2 แตะที่ **เอกสาร**
- 3 เลือกเอกสาร และแตะที่ **ดู**

การโอนไฟล์ไปที่โทรศัพท์

บลูทูธคือวิธีการที่ง่ายที่สุดในการโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ คุณยังสามารถใช้ LG PC Suite ผ่านทางสายเคเบิลสำหรับซิงโครไนซ์ได้ โปรดดูรายละเอียดในหน้า 89 ในการโอนไฟล์ (เช่น เพลง) โดยใช้บลูทูธ:


- 1 ตรวจสอบให้แน่ใจว่าโทรศัพท์คอมพิวเตอร์ได้เปิดบลูทูธแล้ว และอยู่ในระยะที่เชื่อมต่อกันได้
- 2 ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
- 3 เมื่อส่งไฟล์จากคอมพิวเตอร์แล้ว ต้องยอมรับไฟล์โดยแตะ **ใช้บนโทรศัพท์**
- 4 ไฟล์จะปรากฏอยู่ในโพลเดอร์ **เอกสาร** หรือ **อื่นๆ**

อื่นๆ

ไฟล์เดอร์ อื่นๆ

ใช้สำหรับจัดเก็บไฟล์ประเภทอื่นๆ ที่ไม่ใช่รูปภาพ เสียง วิดีโอ เกมส์ หรือแอปพลิเคชัน ซึ่งมีวิธีใช้เดียวกับไฟล์เดอร์ เอกสาร คุณจะพบว่าเมื่อคุณโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ ไฟล์เหล่านั้นจะปรากฏอยู่ใน อื่นๆ หากเป็นเช่นนั้น คุณสามารถย้ายไฟล์เหล่านั้นได้

การสร้างภาพยนตร์

- 1 **แตะที่  แล้วเลือก โปรแกรมสร้างภาพยนตร์** จากแท็บมัลติมีเดีย
- 2 **แตะที่ แทรก** เพื่อใส่รูปภาพ
- 3 **แตะที่แท็บ สไลด์** ด้านบนเพื่อเลือกสไลด์ภาพยนตร์
- 4 **แตะที่แท็บ เสียง** บนหน้าจอเพื่อเปลี่ยนเสียง เช่น สำหรับการบันทึกเสียง
- 5 **แตะที่ปุ่ม ดูตัวอย่าง** เพื่อดูผลลัพธ์
- 6 **แตะที่แท็บ ลำดับการเล่น** บนหน้าจอเพื่อเปลี่ยนแปลงลำดับ
- 7 **แตะที่แท็บ บันทึกใน** บนหน้าจอ เพื่อตำแหน่งที่จะบันทึกภาพยนตร์ แล้วแตะที่ **การใช้** เพื่อเลือกระหว่างการจัดเก็บกับ MMS
- 8 **ในการบันทึกภาพยนตร์ของคุณ** ใหญ่ด เลน แล้วแตะที่ **บันทึกภาพยนตร์**

01

02

03

04

05


06

07

08

มัลติมีเดีย

เพลง

โทรศัพท์ LG KM900 มีเครื่องเล่นเพลงภายในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ในการเข้าใช้งานเครื่องเล่นเพลงให้แตะที่  แล้วเลือก **เพลง** จากแท็บมัลติมีเดีย จากขั้นตอนนี้คุณสามารถเข้าใช้งานโพลเดอร์ต่าง ๆ ดังนี้:

ทุกแทร็ค - ประกอบด้วยเพลงทั้งหมดที่มีในโทรศัพท์

สิ่งที่ประทับใจ - ประกอบด้วยเพลงที่คุณบันทึกเป็นสิ่งที่ประทับใจ

ศิลปิน - เบลาสต์รายการเพลงที่เก็บไว้ตามศิลปิน

อัลบั้ม - เบลาสต์รายการเพลงที่เก็บไว้ตามอัลบั้ม

แนวเพลง - เบลาสต์รายการเพลงที่เก็บไว้ตามแนวเพลง

การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธหรือสายเคเบิลข้อมูล


คุณยังสามารถใช้ LG PC Suite ได้ โปรดดูรายละเอียดในหน้า 89 ในการโอนเพลงโดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และเชื่อมต่อกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์อื่น แล้วเลือกส่งไฟล์นั้นผ่านทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏขึ้นใน **เพลง > ทุกแทร็ค**

การเล่นเพลง





- 1 แตะที่  แล้วเลือก เพลง จากแท็บมัลติมีเดีย
- 2 แตะที่ **ทุกแทร็ค**
- 3 เลือกเพลงที่ต้องการเล่น แล้วแตะที่ 
- 4 แตะที่  เพื่อหยุดเล่นเพลงชั่วคราว
- 5 แตะที่  เพื่อข้ามไปยังเพลงถัดไป
- 6 แตะที่  ย้อนกลับไปเพลงก่อนหน้า
- 7 แตะที่  เพื่อกลับไปเมนูเพลง

เคล็ดลับ!

ในการเปลี่ยนระดับเสียงระหว่างฟังเพลง ให้แตะที่ 

การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณเองได้โดยการเลือกเพลงจากโพลเดอร์ **ทุกแทร็ค**

- 1 แตะที่  แล้วเลือก เพลง จากแท็บมัลติมีเดีย
- 2 แตะที่ไอคอนตัวเลือก 
- 3 แตะที่ **รายการเพลงใหม่** ป้อนชื่อรายการเพลงใหม่ แล้วแตะที่ 
- 4 โพลเดอร์ **ทุกแทร็ค** จะปรากฏขึ้น แตะที่เพลงทั้งหมดที่คุณต้องการใส่ไว้ในรายการเพลง ซึ่งจะมีเครื่องหมายปรากฏอยู่ข้างชื่อเพลงเหล่านั้น
- 5 แตะที่ **เพิ่มเพลง** ในการเล่นรายการเพลง ให้เลือกรายการเพลง และแตะที่ **เล่น** **หมายเหตุ:** ในการเพิ่มรายการเพลงอีกรายการ ให้แตะที่  จากนั้น รายการเพลงใหม่

01

02

03

04

05



06

07

08

มัลติมีเดีย

การลบรายการเพลง

- 1 แตะที่  แล้วเลือก เพลง จากแท็บมัลติมีเดีย
- 2 แตะที่ไอคอนตัวเลือก 
- 3 แตะที่ **ลบ** หรือ **ลบทั้งหมด** เพื่อลบรายการเพลงทั้งหมด

การใช้วิทยุ

โทรศัพท์ LG KM900 มีคุณสมบัติวิทยุ FM ที่ติดตั้งไว้ภายใน ดังนั้น คุณสามารถค้นหาสถานีที่คุณชื่นชอบและรับฟังวิทยุได้ตลอดเวลา

หมายเหตุ: คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุ



การค้นหาสถานี

คุณสามารถใช้โทรศัพท์ค้นหาสถานีวิทยุได้ โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ ซึ่งจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้นคุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก คุณสามารถจัดเก็บได้สูงสุด 30 สถานีในโทรศัพท์ของคุณ

ในการค้นหาสถานีอัตโนมัติ

- 1 แตะที่  แล้วเลือก วิทยุ FM จากแท็บมัลติมีเดีย
- 2 แตะที่ 


- 3 แตะที่ **สแกนอัตโนมัติ** และ ใช้สถานที่ที่พบจะถูกกำหนดไว้ในหมายเลขช่องสถานีในโทรศัพท์โดยอัตโนมัติ โดยการเลือก **ตั้งค่า**, **ข้าม** และ **หยุด**

หมายเหตุ: คุณสามารถค้นหาสถานีด้วยตนเองได้อีกด้วย โดยการไข่มุมหมุนที่แสดงขึ้นถัดจากความถี่วิทยุ

การรีเซ็ตสถานี

- 1 แตะที่  แล้วเลือก **วิทยุ FM** จากแท็บมัลติมีเดีย
- 2 แตะที่ 
- 3 เลือก **รีเซ็ต** เพื่อรีเซ็ตช่องสถานีปัจจุบัน หรือเลือก **รีเซ็ตทั้งหมด** เพื่อรีเซ็ตช่องสถานีทั้งหมด หากคุณรีเซ็ตทุกช่องสถานี แต่ละช่องจะกลับไปเริ่มต้นที่ความถี่ 87.5Mhz

การฟังวิทยุ

- 1 แตะที่  แล้วเลือก **วิทยุ FM** จากแท็บมัลติมีเดีย
- 2 แตะที่หมายเลขช่องของสถานีที่คุณต้องการฟัง

เคล็ดลับ! ในการเพิ่มประสิทธิภาพการรับสัญญาณวิทยุ ให้ยืดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ

คำเตือน! หากคุณเชื่อมต่อชุดหูฟังที่ไม่ได้ผลิตมาเพื่อใช้กับโทรศัพท์รุ่นนี้ การรับสัญญาณวิทยุอาจถูกคลื่นรบกวนได้

01

02

03

04

05

06

07

08

มัลติมีเดีย

การใช้ตัวส่ง FM เพื่อเล่นเพลง



โทรศัพท์ KM900

สามารถส่งสัญญาณความถี่
FM จากเครื่องเล่นเพลงใน
ขณะที่เล่นเพลงได้ ดังนั้น

คุณจึงสามารถฟังเพลงจากความถี่ FM
บนอุปกรณ์อื่นผ่านความถี่ FM


สมุดบันทึก

การเพิ่มเหตุการณ์ลงในปฏิทิน



- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **สมุดบันทึก** ในแท็บยูทิลิตี้ เลือก **ปฏิทิน**
- 2 เลือกวันที่ที่คุณต้องการเพิ่มเหตุการณ์
- 3 ให้แตะที่  และ **นัดหมายใหม่**
- 4 แตะที่ **ประเภท** จากนั้นเลือกระหว่าง **นัดหมาย**, **วันครบรอบ** หรือ **วันเกิด** ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่ม
- 5 สำหรับการนัดหมายและวันครบรอบ คุณสามารถป้อนเวลาและวันที่ที่เหตุการณ์สิ้นสุดลงในช่องเวลาและวันที่ด้านล่างทั้งสองช่องเวลาและวันที่ด้านล่าง
- 6 หากคุณต้องการใส่เรื่องหรือบันทึกลงในเหตุการณ์ของคุณ ให้แตะที่ **เรื่อง** แล้วป้อนรายละเอียด
- 7 เลือก **ตั้งนาฬิกาปลุก** ตั้งการเตือนสำหรับเหตุการณ์

หากคุณต้องการตั้งการเตือนซ้ำ ให้เลือก **ตั้งค่าซ้ำ**

- 8 แตะที่  เพื่อบันทึกเหตุการณ์ลงในปฏิทินวันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมายกรอบสี่เหลี่ยมสีกากับอยู่ และเสียงเตือนจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์ เพื่อให้คุณไม่พลาดกำหนดการต่างๆ

เคล็ดลับ! คุณสามารถป้อนวันหยุดลงในปฏิทินของคุณ แตะที่วันหยุดแต่ละวัน แล้วแตะที่  จากนั้นเลือก **ตั้งวันหยุด** วันเหล่านั้นจะถูกทำเครื่องหมายสีแดง

การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **สมุดบันทึก** ในแท็บยูทิลิตี้ เลือก **ตั้งค่า** ใน 
- 2 แตะที่ **มุมมองดีฟอลต์** แล้วเลือกปฏิทิน, สัปดาห์, ตาราง, รายการ หรืองานทั้งหมด

01

02

03

04

05

06




07

08

สมุดบันทึก

การเพิ่ม



รายการลงในสิ่งที่ต้องทำ

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **สมุดบันทึก** ในแท็บยูทิลิตี้
- 2 ให้เลือก  เลือก **งานใหม่** แล้วแตะที่ **บันทึก**
- 3 กำหนดวันที่ของงาน, เพิ่มบันทึก, แล้วเลือกลำดับความสำคัญ: **สูง, กลาง หรือ ต่ำ**
- 4 บันทึกงานโดยเลือกที่ 


เคล็ดลับ! คุณสามารถสำรองข้อมูลและซิงโครไนซ์ปฏิทินของคุณกับคอมพิวเตอร์ได้ โปรดดูที่ PC ซิงค์ในหน้า 89

การใช้ตัวค้นหาวันที่



ตัวค้นหาวันที่เป็นเครื่องมืออำนวยความสะดวกที่ช่วยให้คุณสามารถคำนวณวันที่ต้องการได้ เมื่อผ่านมาแล้วหลายวัน ตัวอย่างเช่น 60 วัน จากวันที่ 10.10.09 คือวันที่ 09.12.2009 จะช่วยให้คุณไม่พลาดวันที่ครบกำหนด

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **สมุดบันทึก** ในแท็บยูทิลิตี้
- 2 ให้เลือก  เลือก **ตัวค้นหาวันที่**
- 3 กำหนดวันที่ที่ต้องการในแท็บ **จาก**
- 4 ในแท็บ **หลัง** ให้กำหนดจำนวนวัน
- 5 **วันที่เป้าหมาย** จะปรากฏขึ้นด้านล่าง

การตั้งเวลาการปลุก

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **ตั้งปลุก** ในแท็บยูทิลิตี้
- 2 หากคุณต้องการใส่การตั้งปลุกใหม่ ให้แตะที่ **การปลุกใหม่** หากคุณต้องการกำหนดให้มีการปลุกอีกครั้งภายในหนึ่งชั่วโมง ให้แตะที่ **การปลุกด่วน**
- 3 กำหนดเวลาที่ต้องการให้ส่งเสียงปลุก
- 4 เลือกว่าคุณต้องการให้ปลุกซ้ำหรือไม่ ให้กำหนดประเภทการซ้ำ ไอคอนจะบ่งชี้วันที่คุณเลือก
- 5 เลือก **เสียง/ การสั่น** เพื่อเลือกประเภทของการปลุกที่คุณต้องการ
- 6 แตะที่ **เสียงกริ่งปลุก** เพื่อเลือกเสียงเตือน ในการฟังเสียง ให้แตะที่เสียง แล้วตามด้วย ▶
- 7 เพิ่มบันทึกในการปลุก

การเพิ่มบันทึก

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **บันทึก** ในแท็บยูทิลิตี้
- 2 แตะที่ **บันทึกใหม่**
- 3 ป้อนบันทึกของคุณ แล้วแตะที่ 

เคล็ดลับ! คุณสามารถแก้ไขบันทึกที่มีอยู่ได้ เลือกบันทึกที่คุณต้องการแก้ไข แล้วแตะที่ **แก้ไข** และป้อนข้อความที่คุณต้องการเปลี่ยนแปลง

01

02

03

04

05

06

07

08


สมุดบันทึก

บันทึกเสียง

ใช้เครื่องบันทึกเสียง เพื่อบันทึกเสียง
เดือนความจำหรือไฟล์เสียงอื่นๆ

การบันทึกเสียงหรือเสียงพูด

- 1 แตะที่ 
- 2 แตะที่ **บันทึกเสียง** ในแท็บยูทิลิตี้
- 3 แตะที่ **เล่น** เพื่อเริ่มต้นการบันทึก
- 4 แตะที่ **กลับ** เพื่อสิ้นสุดการบันทึก

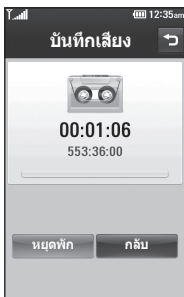



- 5 หากคุณต้องการบันทึกเสียงอีกครั้ง ให้แตะที่ **สร้าง**


การส่งรายการบันทึกเสียง

- 1 เมื่อคุณบันทึกเสียงเสร็จแล้ว คุณสามารถส่งคลิปเสียงได้ โดยแตะที่ **ส่ง**
- 2 เลือก **ข้อความ**, **อีเมล** หรือ **บลูทูธ** หากคุณเลือก **ข้อความ** หรือ **อีเมล** รายการที่บันทึกจะแนบไปกับข้อความซึ่งคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** โทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งการบันทึกเสียงไป

การใช้เครื่องคิดเลข


- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **เครื่องคิดเลข** ในแท็บยูทิลิตี้
- 2 ให้แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =
- 4 สำหรับการคำนวณแบบซับซ้อน ให้แตะที่  แล้วเลือกกระหว่าง **sin, cos, tan, deg, log, อื่นๆ**

การแปลงหน่วย

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **เครื่องมือ** ในแท็บยูทิลิตี้
- 2 เลือก **ตัวแปลงหน่วย**
- 3 เลือกว่าคุณจะแปลง **สกุลเงิน** พื้นที่ **ความยาว** **น้ำหนัก** **อุณหภูมิ** **ปริมาตร** หรือ **ความเร็ว**

- 4 จากนั้น ให้เลือกหน่วยและป้อนค่าที่คุณต้องการแปลง
- 5 ค่าผลลัพธ์ที่เกี่ยวข้องกันจะปรากฏขึ้นบนหน้าจอ

การใช้นาฬิกาจับเวลา

- 1 จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้**
- 2 เลือก **นาฬิกาจับเวลา**
- 3 แตะที่ **เริ่ม** เพื่อเริ่มจับเวลา
- 4 แตะที่ **รอบ** หากคุณต้องการบันทึกรอบเวลา
- 5 แตะที่ **หยุด** เพื่อหยุดตัวจับเวลา
- 6 แตะที่ **รีเซ็ต** เพื่อเริ่มจับเวลาอีกครั้ง

01

02

03

04

05



06

07

08

สมุดบันทึก

การเพิ่มเมืองในเวลาทั่วโลก


- 1 จากหน้าจอหลัก ให้เลือก  แล้วเลื่อนไปที่ **เวลาโลก** ในแท็บยูทิลิตี้
- 2 แตะที่ไอคอน  แล้วตามด้วย **เพิ่มเมือง** เริ่มพิมพ์ชื่อเมืองที่คุณต้องการและชื่อนั้นจะปรากฏที่หน้าจอ
- 3 แตะที่เมืองที่คุณเลือก ซึ่งจะเพิ่มเมืองนั้นลงในรายการเวลาโลกของคุณ

PC ซิงค์

คุณสามารถซิงโครไนซ์คอมพิวเตอร์กับโทรศัพท์ของคุณได้ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน รวมทั้งยังเป็นการสำรองข้อมูลช่วยให้คุณสบายใจได้

เคล็ดลับ! ในการดำเนินการนี้ คุณต้องติดตั้งแอปพลิเคชัน PC Suite ที่ใหม่มาใน CD-ROM หรือสามารถดาวน์โหลดได้จาก <http://update.lgmobile.com> (จาก www.lgmobile.com PRODUCTS > Manual & Software > Go to Manual & S/W Download Section)

การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

- 1 จากหน้าจอหลัก ให้แตะที่  จากนั้นเลื่อนไปที่ การเชื่อมต่อ ในแท็บตั้งค่า
- 2 แตะที่ โหมดการเชื่อมต่อ USB

- 3 เชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์ผ่านทางสายเคเบิล USB แล้วรอสักครู่
- 4 ข้อความคำแนะนำการติดตั้งจะปรากฏขึ้น

ข้อควรระวัง! หากคำแนะนำการติดตั้งไม่แสดงขึ้นบนคอมพิวเตอร์ โปรดตรวจสอบการตั้งค่า CD-ROM บน Windows

- 5 ใส่แผ่น CD ที่ใหม่หรือคลิกปุ่มดาวน์โหลดเพื่อดาวน์โหลดโปรแกรม LG PC Suite จากเว็บไซต์
- 6 คลิก LG PC Suite Installer ซึ่งจะปรากฏที่หน้าจอของคุณ

01

02

03

04

05

06

07

08

PC ซิงค์

การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

- 1 เลือกโหมด PC Suite ในเมนูการเชื่อมต่อ จากนั้นเชื่อมต่อสายเคเบิล USB ของโทรศัพท์เข้ากับคอมพิวเตอร์
- 2 LG PC Suite จะเปิดการใช้งานบนคอมพิวเตอร์ของคุณโดยอัตโนมัติ

ข้อควรระวัง! หาก LG PC Suite ไม่เปิดใช้งานโดยอัตโนมัติบนคอมพิวเตอร์ โปรดตรวจสอบการตั้งค่า CD-ROM ในคอมพิวเตอร์

- 3 โทรศัพท์และคอมพิวเตอร์ของคุณเชื่อมต่อกันเรียบร้อยแล้ว

การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **Backup** และเลือก **Backup** หรือ **Restore**
- 3 เลือกว่าจะสำรองข้อมูล

Contents Data และ/หรือ **Phonebook/Schedule/ToDo/Memo Data** เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือตำแหน่งที่ต้องการเรียกข้อมูลคืน คลิก **OK**

- 4 ระบบจะสำรองข้อมูลของคุณ

การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 ให้คลิกไอคอน **Manage Files**
- 3 เอกสารทั้งหมด, แฟลชคอนเทนต์, ภาพ, ไฟล์เสียง และวิดีโอ ซึ่งคุณบันทึกไว้ในโทรศัพท์ของคุณจะปรากฏบนหน้าจอในโฟลเดอร์ LG Phone

เคล็ดลับ! การดูเนื้อหาของโทรศัพท์บนคอมพิวเตอร์จะช่วยให้คุณสามารถจัดเรียงไฟล์จัดการเอกสาร และลบเนื้อหาที่คุณไม่ต้องการใช้อีกต่อไปได้

การซิงโครไนซ์รายชื่อ

- 1 เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
- 2 คลิกที่ไอคอน **Contacts**
- 3 เครื่องคอมพิวเตอร์ของคุณจะพิมพ์พอร์ตและแสดงรายชื่อทั้งหมดที่บันทึกไว้ในซิมการ์ดและโทรศัพท์
- 4 คลิกที่ **File** แล้วเลือก **Save** ขณะนี้ คุณสามารถเลือกตำแหน่งที่คุณต้องการบันทึกรายชื่อ

หมายเหตุ: ในการสำรองข้อมูลรายชื่อที่บันทึกไว้ในซิมการ์ดหลักที่ไฟล์เดสก์ท็อปทางด้านซ้ายมือของหน้าจอคอมพิวเตอร์ คลิกขวาที่รายชื่อ และเลือก **Select all**, แล้วเลือก **Copy** หรือ **Move to phone memory** คลิกขวาที่รายชื่อของคุณ แล้วเลือก **Copy to contact** จากนั้นคลิกที่ไฟล์เดอร์ **Handset** ทางด้านซ้ายมือของหน้าจอและหมายเหตุทั้งหมดจะปรากฏขึ้น

การซิงโครไนซ์ข้อความ

- 1 เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
- 2 คลิกที่ไอคอน Messages
- 3 ข้อความในคอมพิวเตอร์และโทรศัพท์ของคุณจะปรากฏขึ้นในไฟล์เดสก์ท็อปหน้าจอ
- 4 ใช้เครื่องมือด้านบนสุดของหน้าจอเพื่อแก้ไขและจัดเรียงข้อความ

ซิงค์เพลง

เมนูนี้ช่วยให้คุณสามารถเพิ่มเพลงลงในโทรศัพท์ KM900 ได้ ก่อนเริ่มการโอนเพลงจากคอมพิวเตอร์ของคุณไปยังโทรศัพท์ โปรดตรวจสอบให้แน่ใจว่า คอมพิวเตอร์ของคุณตั้งค่าและมีอุปกรณ์เสริมต่อไปนี้แล้ว:

- Microsoft Windows XP หรือ Vista
- Windows Media Player 10 หรือสูงกว่า
- สายเคเบิล USB

01

02

03

04

05

06

07

08

PC ซิงค์

การโอนเพลงโดยใช้ Windows Media Player

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ การเชื่อมต่อ
ในแท็บตั้งค่า
- 2 เลือก โหมดการเชื่อมต่อ USB แล้วเลือก ซิงค์เพลง
- 3 เชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 4 เมื่อคุณเชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์ ตัวเครื่องจะแสดงข้อความ: ซิงค์เพลง... แล้วตามด้วย **เชื่อมต่อ**
- 5 คอมพิวเตอร์จะแสดงข้อความให้คุณเริ่มต้นซอฟต์แวร์จัดการเพลงที่คุณต้องการ
- 6 เลือก Windows Media Player
- 7 ไปที่แท็บ Sync จากนั้นลากแล้ววางเพลงที่คุณต้องการโอนเพื่อโอนไปยังตัวเครื่องของคุณ ในหน้าต่าง **Sync List**
- 8 คลิกปุ่ม **Start Sync** ซึ่งเป็นการเริ่มขั้นตอนการโอนเพลง

⚠ คำเตือน
ห้ามตัดการเชื่อมต่อกับโทรศัพท์ในขณะที่โอนไฟล์

หมายเหตุ: ซิงค์เพลงใช้ได้เฉพาะกับข้อมูลเพลงเท่านั้น

การใช้ iSync

ติดตั้งไฟล์ติดตั้งปลั๊กอินของ iSync ซึ่งสนับสนุนการทำงานกับ Macintosh และ PC และเชื่อมต่อกับโทรศัพท์ผ่านทางบลูทูธหรือ USB

ในการซิงโครไนซ์กับเครื่องคอมพิวเตอร์ผ่านบลูทูธ ให้ตั้งค่าการจับคู่อุปกรณ์ระหว่าง Macintosh หรือ PC กับโทรศัพท์ หากคุณต้องการตั้งค่าผ่าน USB ให้เลือกเมนู iSync ในโหมดการเชื่อมต่อ USB

หมายเหตุ: เมื่อคุณเลือกใช้บลูทูธ คุณต้องเลือก **เปิด iSync** ในเมนูตัวเลือก

ตัวแปลง DivX

ติดตั้งตัวแปลง DivX ซึ่งมีให้มาในแผ่นซีดีเดียวกับซอฟต์แวร์ PC ซิงค์ DivX จะแปลงไฟล์มีเดียบนคอมพิวเตอร์ของคุณให้อยู่ในรูปแบบไฟล์ที่คุณสามารถอัปโหลดและเขาดูได้จากโทรศัพท์ของคุณ

เมื่อติดตั้งแล้ว ให้เลือก **DivX** จาก Program Files บนคอมพิวเตอร์ จากนั้นเลือก **DivX converter** แล้วตามด้วย Converter

ใช้ลูกศรในแอปพลิเคชันเพื่อเปลี่ยนรูปแบบการแปลงเป็น Mobile หากคุณคลิกขวาที่ช่องแอปพลิเคชันแล้วเลือก **Preferences** คุณจะจะสามารถเปลี่ยนตำแหน่งที่บันทึกไฟล์ที่แปลงแล้วได้

ลากแล้ววางไฟล์ลงในแอปพลิเคชันเพื่อการวิเคราะห์เริ่มต้น จากนั้นเลือก **Convert** เพื่อเริ่มกระบวนการ เมื่อกระบวนการเสร็จสมบูรณ์ ปุ่มอัป Conversion complete จะปรากฏขึ้น

01

02

03

04

05

06

07

08


เว็บไซต์

เบราว์เซอร์

เบราว์เซอร์

ช่วยให้คุณเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ไม่ว่าจะอยู่ที่ไหน หรือกำลังทำอะไร




การเข้าใช้เว็บไซต์

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **เบราว์เซอร์** ในแท็บการติดต่อ
- 2 ในการไปยังหน้าจอหลักของเบราว์เซอร์ ให้เลือก **โฮม** หรือ เลือก **ไปยัง URL** แล้วป้อน URL แล้วตามด้วย **เชื่อมต่อ**

หมายเหตุ: มีค่าใช้จ่ายในการเชื่อมต่อกับบริการเหล่านี้และการดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การเพิ่มและการใช้บุ๊กมาร์ค


เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุ๊กมาร์คและบันทึกเว็บเพจได้

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **เบราว์เซอร์** ในแท็บการติดต่อ
- 2 เลือก **บุ๊กมาร์ค** รายการบุ๊กมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ
- 3 ในการเพิ่มบุ๊กมาร์คใหม่ ให้เลือก  แล้วแตะที่ **บุ๊กมาร์คใหม่** ป้อนชื่อสำหรับบุ๊กมาร์คแล้วตามด้วย URL
- 4 แตะที่  บุ๊กมาร์คของคุณจะปรากฏขึ้นในรายการบุ๊กมาร์ค
- 5 ในการเข้าใช้งานบุ๊กมาร์ค เพียงแตะที่บุ๊กมาร์ค แล้วแตะที่ **เชื่อมต่อ** คุณจะเชื่อมต่อกับบุ๊กมาร์คของคุณ


การใช้ RSS reader

RSS (Really Simple Syndication) เป็นกลุ่มรูปแบบ Web Feed ที่ใช้เพื่อเผยแพร่เนื้อหาที่ได้รับการอัปเดตเป็นประจำ เช่น รายการใน Blog, หัวข้อข่าว หรือ Podcast เอกสาร RSS ที่เรียกว่า Feed, Web Feed หรือ Channel ประกอบไปด้วยการสรุปเนื้อหาหรือข้อความเต็มจากเว็บไซต์ที่เกี่ยวข้องของ RSS ช่วยให้ทุกคนสามารถติดตามความเคลื่อนไหวของเว็บไซต์ที่ตนชื่นชอบได้เสมอ ด้วยระบบอัตโนมัติที่สะดวกกว่าการเฝ้าดูด้วยตนเอง ผู้ใช้สมัครใช้บริการ Feed โดยป้อนลิงค์ของ Feed ลงใน Reader หรือคลิกที่ไอคอน RSS ในเบราว์เซอร์ที่เริ่มต้นขั้นตอนการสมัครใช้บริการ Reader จะตรวจดู Feed ที่ผู้ใช้สมัครใช้บริการเป็นประจำเพื่อค้นหาใหม่ และดาวน์โหลดการอัปเดตต่างๆ ที่พบ

การเข้าใช้เพจที่มันทีกไว้

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **เบราว์เซอร์** ในแท็บการติดต่อ
- 2 เลือก **เพจที่มันทีก**
- 3 เลือกเพจที่คุณต้องการดู แล้วเพจนั้นจะเปิดขึ้น

การดูประวัติข้อมูลเบราว์เซอร์

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **เบราว์เซอร์** ในแท็บการติดต่อ เลือก **ประวัติ**
- 2 เว็บเพจที่คุณเข้าใช้ล่าสุดจะปรากฏขึ้น ในการเข้าใช้งานเว็บเพจใดก็ตามจากเว็บเพจเหล่านี้ เพียงเลือกเว็บเพจนั้น

01

02

03

04

05


06

07

08

เว็บไซต์

การเปลี่ยนการตั้งค่า เว็บเบราว์เซอร์

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ การเชื่อมต่อ
ในแท็บตั้งค่า
- 2 เลือก การตั้งค่าเบราว์เซอร์
- 3 คุณสามารถแก้ไข โปรไฟล์
การตั้งค่าลักษณะ แดช/
คูกี้ ระบบป้องกัน หรือ
รีเซ็ตการตั้งค่า
- 4 คุณสามารถเปิดหรือปิด
การตั้งค่าเหล่านี้ได้ง่ายๆ
โดยการแตะที่ไอคอนสวิตช์

การใช้โทรศัพท์เป็นโมเด็ม

โทรศัพท์ KM900 ของคุณสามารถ
ใช้เป็นโมเด็มสำหรับคอมพิวเตอร์ได้
ช่วยให้คุณใช้งานอินเทอร์เน็ต
และส่งอีเมลได้ แม้ว่าคุณจะไม่มีการ
เชื่อมต่อด้วยสาย
คุณสามารถเชื่อมต่อผ่านสายเคเบิล
USB หรือบลูทูธ

การใช้สายเคเบิล USB:

- 1 ตรวจสอบให้แน่ใจว่าคุณได้ติดตั้ง
LG PC Suite
บนเครื่องคอมพิวเตอร์ของคุณแล้ว
- 2 เชื่อมต่อ KM900 เข้ากับคอมพิว
เตอร์ของคุณด้วยสายเคเบิล USB
แล้วเริ่มซอฟต์แวร์ LG PC Suite
- 3 คลิกที่ **Communication**
บนคอมพิวเตอร์ของคุณ
จากนั้นคลิกที่ **Settings** และเลือก
Modem
- 4 เลือก **LG Mobile USB Modem**
และเลือก **OK** จากนั้นโมเด็มจะ
ปรากฏขึ้นบนหน้าจอ
- 5 ให้คลิก Connect แล้วเครื่องคอม
พิวเตอร์ของคุณจะเชื่อมต่ออินเทอร์เน็ต
เน็ตผ่านโทรศัพท์ KM900 ของคุณ
หมายเหตุ: สำหรับข้อมูลเพิ่มเติม
เกี่ยวกับการซิงโครไนซ์โดยใช้ LG
PC Suite โปรดดูที่หน้า 89

การใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** ทั้งคอมพิวเตอร์และโทรศัพท์ KM900
- 2 จับคู่เครื่องคอมพิวเตอร์ของคุณและ KM900 ทั้งนี้ ต้องระบุรหัสผ่านสำหรับการเชื่อมต่อ
- 3 ใช้ **Connection wizard** ใน LG PC Suite เพื่อสร้างการเชื่อมต่อบลูทูธ
- 4 คลิกที่ **Communication** บนคอมพิวเตอร์ของคุณ จากนั้นคลิก **Setting**
- 5 คลิกที่ **Modem**
- 6 เลือก **Standard Modem over Bluetooth link** แล้วคลิก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
- 7 คลิก **Connect** จากนั้นคอมพิวเตอร์จะเชื่อมต่อผ่านโทรศัพท์ KM900 ของคุณ

หมายเหตุ: โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับบลูทูธได้ที่หน้า 103

การใช้งาน Google Maps

คุณสามารถใช้บริการนำทางของ Google ได้จากแท็บการติดต่อ เลือกเมนู Google Maps ใน Google เพื่อเริ่มแอปพลิเคชัน ตำแหน่ง GPS ของ KM900 จะถูกประมวลผล บริการนี้ช่วยให้คุณเดินทางไปที่ต่างๆ ได้ และเพื่อค้นหาเส้นทางโดยส่งแผนที่ไปปรากฏที่หน้าจอโทรศัพท์ของคุณ โปรดทราบว่าอาจมีค่าใช้จ่ายเพิ่มเติมเมื่อใช้บริการนี้

01

02

03

04

05

06

07


08

ตั้งค่า

ในโพลเดอร์นี้ คุณสามารถปรับการตั้งค่าเพื่อให้โทรศัพท์ KM900 ตอบสนองการทำงานในแบบของคุณได้

หมายเหตุ: โปรดดูข้อมูลเกี่ยวกับการตั้งค่าการโทรได้ที่หน้า 30

การเปลี่ยนการตั้งค่าหน้าจอ

1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **ตั้งค่าการแสดงผล** ในแท็บตั้งค่า

2 คุณสามารถเลือกเมนูตัวเลือกได้จาก:

ภาพหน้าจอ - เลือกภาพสำหรับการล็อค การเปิดหรือปิดโทรศัพท์ การโทรออก หรือการรับสาย

ลือคหน้าจอ - เลือกรูปแบบนาฬิกาในหน้าจอลือค

แบบอักษร - ปรับขนาดแบบอักษรและสไตล์

ไฟหน้าจอ - เลือกระยะเวลาการเปิดไฟหน้าจอ

หมายเหตุ: การเปิดไฟหน้าจอเป็นเวลานานจะทำให้สิ้นเปลือง

พลังงานแบตเตอรี่มากยิ่งขึ้น และคุณอาจจำเป็นต้องชาร์จโทรศัพท์ของคุณบ่อยยิ่งขึ้นด้วย

ความสว่างอัตโนมัติ - ปรับความสว่างของหน้าจอโดยอัตโนมัติ

ความสว่าง - ปรับความสว่างของหน้าจอ

การปรับแต่งโปรไฟล์เสียงของคุณ

คุณสามารถเปลี่ยนรูปแบบเสียงบนหน้าจอหลักของคุณได้อย่างรวดเร็วเพียงแตะที่ไอคอนสรุปลักษณะทางด้านบน แล้วแตะที่แท็บรูปแบบเสียง คุณสามารถใช้เมนูตั้งค่าในการปรับแต่งการตั้งค่ารูปแบบเสียงแต่ละรูปแบบได้

1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **โปรไฟล์** ในแท็บตั้งค่า


2 เลือกรูปแบบเสียงที่คุณต้องการแก้ไข: **ปกติ** **เงียบ** **นอกรถ** หรือ **โหมด Flight**

3 คุณจะสามารุเปลี่ยนตัวเลือกเสียงและการเตือนทั้งหมดที่มี

อยู่ในรายการได้ รวมทั้ง
เสียงเรียกเข้าแบบเสียง/
แบบวิดีโอ ระดับเสียง
แบบเตือนข้อความ และอื่นๆ

การเปลี่ยนการตั้งค่าโทรศัพท์

อิสระในการปรับการทำงานของโทรศัพท์ KM900 ในแบบที่คุณต้องการได้

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **ตั้งค่าโทรศัพท์** ในแท็บตั้งค่า
- 2 เลือกเมนูจากรายการด้านล่างนี้:
วันที่ & เวลา - ปรับการตั้งค่าวันที่และเวลาของคุณ หรือเลือกให้เครื่องอัปเดตเวลาอัตโนมัติขณะคุณเดินทางหรือสำหรับการปรับเวลาตามฤดูกาล
ประหยัดพลังงาน - เลือก **เปิด** หรือ **ปิด** การตั้งค่าประหยัดพลังงาน

ภาษา - เปลี่ยนภาษาบนจอแสดงผลโทรศัพท์ KM900 ของคุณ

ล็อคปุ่มอัตโนมัติ - ล็อคปุ่มกดอัตโนมัติในหน้าจอหลัก

ระบบป้องกัน - ปรับการตั้งค่าระบบป้องกัน ได้แก่ รหัส PIN และล็อคเครื่อง

การตั้งค่าสัมผัส - เปลี่ยนการตั้งค่าปุ่มสัมผัส

สถานะความจำ - โปรดดูข้อมูลเพิ่มเติมที่ **การใช้ตัวจัดการหน่วยความจำ** ในหน้า 102

รีเซ็ตการตั้งค่า - เรียกคืนการตั้งค่าทั้งหมดให้กลับเป็นค่าที่ตั้งจากโรงงาน (รหัสป้องกันคือ **0000**)

ข้อมูลเครื่อง - ดูข้อมูลทางด้านเทคนิคของโทรศัพท์ KM900

01

02

03

04

05


06

07

08

ตั้งค่า

การเปลี่ยนการตั้งค่าสัมผัส

จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **ตั้งค่าโทรศัพท์** ในแท็บตั้งค่า เลือก **การตั้งค่าสัมผัส** ในการรีเซ็ตปุ่มสัมผัส และทำให้ใช้งานได้ง่ายขึ้น เลือก

Touchpad calibration


และแตะที่เครื่องหมาย เมื่อคุณพอใจกับการตั้งค่าแล้ว ให้บันทึก

เลือก **เอฟเฟกต์ทัชสกรีน** เพื่อรีเซ็ตการตั้งค่าสัมผัสของ **พิมพ์เสียง** และ **สั้น**

การเปลี่ยนการตั้งค่า

การเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้นคุณจึงใช้โทรศัพท์ใหม่ของคุณได้ทันที ในการใช้เมนูนี้เพื่อเปลี่ยนการตั้งค่า

จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **การเชื่อมต่อ** ในแท็บตั้งค่า

เลือกเครือข่าย - โทรศัพท์ KM900 จะเชื่อมต่อกับเครือข่ายที่ต้องการได้โดยอัตโนมัติ

โปรไฟล์อินเทอร์เน็ต - ตั้งค่าโปรไฟล์เพื่อเชื่อมต่ออินเทอร์เน็ต

จุดเชื่อมต่อ - ผู้ให้บริการระบบได้บันทึกข้อมูลนี้แล้ว คุณสามารถเพิ่มจุดเชื่อมต่อใหม่โดยใช้เมนูนี้ได้

ประเภท GPS - เลือก **GPS** แบบช่วยเหลือ หรือ **สแตนด์อะโลน**

GPS

- เทคโนโลยี GPS ใช้ข้อมูลจากดาวเทียมที่โคจรรอบโลกเพื่อค้นหาตำแหน่ง
- เครื่องรับจะประเมินระยะทางไปถึงดาวเทียม GPS ตามระยะเวลาที่สัญญาณส่งมาถึงเครื่องรับ จากนั้นใช้ข้อมูลดังกล่าวเพื่อระบุตำแหน่ง
- ซึ่งอาจใช้เวลาตั้งแต่สองสามวินาทีไปจนถึงหลายนาที
- Assisted GPS (A-GPS) ในโทรศัพท์รุ่นนี้จะใช้รับข้อมูลช่วยเหลือด้านตำแหน่งผ่านการเชื่อมต่อข้อมูลแพ็คเกจ
- ข้อมูลช่วยเหลือจะได้รับจากเซิร์ฟเวอร์บริการของผู้ให้บริการเครือข่ายและเมื่อจำเป็นเท่านั้น

หมายเหตุ : บริการ GPS

มีความผิดพลาดที่ยอมรับได้ และไม่สามารถทำงานในอาคารหรือใต้ดินได้

โหมดการเชื่อมต่อ USB -

ซิงโครไนซ์โทรศัพท์ KM900 โดยใช้ซอฟต์แวร์ LG PC Suite เพื่อคัดลอกไฟล์จากโทรศัพท์ โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับการซิงโครไนซ์ที่หน้า 89

TV out - เลือก PAL หรือ

NTSC เชื่อมต่อโทรศัพท์ KM900 เข้ากับโทรทัศน์

การลงทะเบียน DivX VOD - ใช้เมนูนี้เพื่อสร้างรหัสการลงทะเบียน DivX VOD โปรดเยี่ยมชม <http://vod.divx.com> เพื่อลงทะเบียนและการสนับสนุนทางเทคนิค

การเชื่อมต่อข้อมูลแพ็คเกจ - ตั้งค่าการเชื่อมต่อข้อมูลแพ็คเกจ

การตั้งค่าเบราว์เซอร์ - ตั้งค่าที่เกี่ยวข้องกับเบราว์เซอร์

01

02

03

04

05

06

07

08


ตั้งค่า

การตั้งค่าสตรีมมิ่ง - ผู้ให้บริการระบบไดมอนด์ก็พร้อมแล้ว คุณสามารถแก้ไขให้สอดคล้องการเปลี่ยนแปลง

การตั้งค่า Java - ช่วยให้กำหนดโปรไฟล์สำหรับการเชื่อมต่อโดยโปรแกรม Java และดูใบรับรองได้

การใช้ตัวจัดการหน่วยความจำ

โทรศัพท์ KM900 ของคุณมีหน่วยความจำให้เลือกสามแบบ: โทรศัพท์ ซิมการ์ด และการ์ดหน่วยความจำภายนอก (คุณต้องซื้อแยกต่างหาก) คุณสามารถใช้ตัวจัดการหน่วยความจำในการกำหนดว่าในแต่ละหน่วยความจำใช้หน่วยความจำไปเท่าใด และดูว่ามีพื้นที่ว่างเหลือเท่าใด

จากหน้าจอหลัก ให้เลือก 
จากนั้นเลื่อนไปที่ **ตั้งค่าโทรศัพท์** ในแท็บตั้งค่า เลือก **สถานะความจำ**

ความจำเครื่อง - ดูหน่วยความจำที่มีในโทรศัพท์ KM900 สำหรับรูปภาพ, เสียง, วิดีโอ, แฟลช, MMS, อีเมล, แอปพลิเคชัน Java และอื่นๆ

หน่วยความจำมัลติมีเดียของเครื่อง - ดูหน่วยความจำสำหรับเนื้อหาที่มีเดีย เช่น ไฟล์สตรีมมิ่ง ภาพยนตร์ และเพลง

ความจำสำรอง - ดูหน่วยความจำที่มีในเครื่องสำหรับ SMS, รายชื่อ, ปฏิทิน, รายการสิ่งที่ต้องทำ, บันทึก, ตั้งปลุก, ข้อมูลการโทร, บุคมาร์ค และรายการเบ็ดเตล็ดอื่นๆ

หน่วยความจำ USIM - ดูหน่วยความจำที่มีในซิมการ์ด
หน่วยความจำการ์ด - ดูหน่วยความจำที่มีในการ์ดหน่วยความจำภายนอก (คุณต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

การใช้โหมด Flight

เปิดโหมด Flight โดยการเลือก  แล้วเลือก **ตั้งค่า** และที่ **รูปแบบเสียง** แล้วเลือก **โหมด Flight**


โหมด Flight

ป้องกันไม่ให้คุณโทรออก
เชื่อมต่ออินเทอร์เน็ต ส่งข้อความ
หรือใช้บลูทูธ

การส่งและการรับไฟล์โดย ใช้บลูทูธ

บลูทูธเป็นวิธีในการส่งและรับไฟล์ที่ดี
เนื่องจากไม่จำเป็นต้องต่อสายและสามารถ
เชื่อมต่อได้อย่างรวดเร็วและง่ายดาย
คุณยังสามารถเชื่อมต่อกับชุดหู
ฟังบลูทูธเพื่อโทรออกและรับสายได้

ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง
โดยทั่วไปจะเป็นไฟล์รูปภาพ, วิดีโอ
หรือเพลง
- 2 แตะที่  จากนั้นเลือก **ส่ง**
เลือก **บลูทูธ**
- 3 หากคุณจับคู่อุปกรณ์บลูทูธแล้ว
โทรศัพท์ KM900 จะไม่ค้นหา
อุปกรณ์บลูทูธอื่นโดยอัตโนมัติ
หากคุณยังไม่จับคู่อุปกรณ์บลูทูธ
โทรศัพท์ KM900
จะค้นหาอุปกรณ์อื่นๆ
ที่ใช้บลูทูธภายในรัศมี
- 4 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์
ไป แล้วแตะที่ **เลือก**
- 5 ไฟล์ของคุณจะถูกส่งออกไป

01

02

03

04

05

06

07

08



เคล็ดลับ! ตรวจสอบแถบแสดง
ความคืบหน้าเพื่อให้แน่ใจว่าไฟล์
ของคุณถูกส่งแล้ว

ตั้งค่า

ในการรับไฟล์:

- 1 ในการรับไฟล์ คุณต้องตั้งค่าบลูทูธเป็น **เปิด** โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับการ**เปลี่ยนการตั้งค่าบลูทูธ** ที่ด้านล่าง
- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และที่ **ใช่** เพื่อรับไฟล์
- 3 คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว และคุณสามารถเลือกเพื่อ **ดู** ไฟล์หรือ **ใช้** เป็นภาพพื้นหลังโดยทั่วไป ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมในแฟ้มข้อมูล

การเปลี่ยนการตั้งค่าบลูทูธ

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **บลูทูธ** ในแท็บตั้งค่า
- 2 และที่  ทำการเปลี่ยนแปลง:
 - ข้อมูลอุปกรณ์ของฉัน** - บ่อนชื่อโทรศัพท์ KM900 ของคุณ
 - การมองเห็นเครื่อง** - เลือกเป็นมองเห็นได้ **ซ่อน** หรือ **แสดง 1 นาที**
 - โหมดซิมระยะไกลเปิด** - เปิดใช้โหมดซิมระยะไกล
 - เปิด iSync** - เลือกเพื่อเปิดใช้ iSync
 - บริการที่รองรับ** - ดูตัวเลือกเพื่อใช้บลูทูธที่เกี่ยวข้องกับบริการอื่นๆ
 - ลบ** - เลือกเพื่อลบโปรไฟล์ที่เลือกไว้
 - ลบทั้งหมด** - เลือกเพื่อลบโปรไฟล์ทั้งหมด

การจับคู่กับอุปกรณ์บลูทูธอื่น

โดยการจับคู่โทรศัพท์ KM900 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้ ซึ่งทำให้การจับคู่อุปกรณ์มีความปลอดภัยมากขึ้น

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็นเปิด
คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้โดยใช้เมนู **ตั้งค่า**
- 2 แตะที่ **ค้นหา**
- 3 โทรศัพท์ KM900 จะค้นหาอุปกรณ์อื่นๆ ที่ใช้บลูทูธ เมื่อการค้นหาเสร็จสมบูรณ์ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ
- 4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่าน จากนั้นให้แตะที่ **ตกลง**
- 5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่น ซึ่งคุณจำเป็นต้องป้อนรหัสผ่านเดียวกัน
- 6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

การใช้ชุดหูฟังบลูทูธ

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็นเปิด
- 2 ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ
- 3 ชุดหูฟังจะสวิตช์ไปยังรูปแบบเสียงชุดหูฟังโดยอัตโนมัติ
- 4 แตะที่ **غامเสมอ** หรือ **อนุญาตโดยไม่غام**

เคล็ดลับ!

โปรดดูรายละเอียดเกี่ยวกับ **โหมดตอบรับ BT** ที่หน้า 28 เพื่อที่คุณจะสามารถควบคุมวิธีการรับสาย เมื่อมีการเชื่อมต่อชุดหูฟังบลูทูธ

01

02

03

04

05

06

07

08

Wi-Fi

Wireless Manager ช่วยให้คุณจัดการการเชื่อมต่ออินเทอร์เน็ตด้วย Wi-Fi (Wireless LAN) ในเครื่องของคุณ โดยให้โทรศัพท์เชื่อมต่อเครือข่ายไร้สายในท้องถิ่นหรือเข้าใช้อินเทอร์เน็ตแบบไร้สาย Wi-Fi เร็วกว่าและรัศมีครอบคลุมกว้างกว่าเทคโนโลยีไร้สายของบลูทูธ และสามารถใช้อีเมลและการเบร่าสอินเทอร์เน็ตอย่างรวดเร็ว

หมายเหตุ: โทรศัพท์ KM900 สนับสนุน WEP, การเข้ารหัส WPA-PSK/2 แต่ไม่สนับสนุน EAP, การเข้ารหัส WPS หากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณตั้งค่าการเข้ารหัสสำหรับการรักษาความปลอดภัยเครือข่ายไว้ ต้องป้อนรหัสในหน้าต่างป้อนอัปหากไม่ได้มีการตั้งค่าการเข้ารหัสไว้ หน้าต่างป้อนอัปนี้จะไม่ปรากฏขึ้น คุณสามารถขอรหัสจากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณ

1. วิธีการตั้งค่า Wi-Fi

1. แตะที่ Wi-Fi จากแท็บตั้งค่า แล้วเปิด Wi-Fi
2. ค้นหา AP (จุดเชื่อมต่อ)
 - ค้นหาว่าสามารถเชื่อมต่อกับ AP ได้บ้าง
3. เชื่อมต่อ AP
 - เชื่อมต่อ AP ที่ต้องการจากรายการค้นหา AP
 - หาก AP คือประเภทการรักษาความปลอดภัย WEP หรือ WPA-PSK/2 ให้ป้อนรหัสความปลอดภัย

2. การสนับสนุนโปรไฟล์เครือข่าย Wi-Fi

1. การสนับสนุนโปรไฟล์ Wi-Fi (การเชื่อมต่อกับ AP ที่ซับซ้อนหรือ AP ซ่อน)
 - 1) หาก AP ไม่ปรากฏในรายการค้นหา คุณสามารถเชื่อมต่อกับ AP นั้นได้โดยบันทึก AP นั้นเป็นโปรไฟล์

- 2) การบันทึก AP ที่ง่ายและเป็นโปรไฟล์ช่วยให้สะดวกในการบ่อนรหัสความปลอดภัยเมื่อเชื่อมต่อกับ AP ที่มีประเภทการรักษาความปลอดภัยดังกล่าว
 - 3) หาก AP นั้นไม่สนับสนุน DHCP คุณสามารถเชื่อมต่อกับ AP ได้โดยใช้ IP แอดเดรสคงที่
- 2 คำอธิบายฟิลด์แต่ละฟิลด์ในโปรไฟล์ Wi-Fi**
- 1) ชื่อเครือข่าย: SSID (ID)
 - 2) ประเภทการรักษาความปลอดภัย: สนับสนุน WEP, WPA-PSK/2
 - 3) รหัสความปลอดภัย: บันทึกรหัสความปลอดภัย
 - 4) การตั้งค่า IP/DNS: สามารถตั้งเป็นอัตโนมัติหรือคงที่ได้ขึ้นอยู่กับว่า AP สนับสนุน DHCP หรือไม่
สำหรับคงที่ ให้ป้อนค่าฟิลด์ของ IP แอดเดรส และเซิร์ฟเวอร์ DNS เพื่อใช้กับ IP แอดเดรสคงที่เมื่อมีการเชื่อมต่อ

- 3 การบันทึกโปรไฟล์ Wi-Fi**
- 1) เลือกเครือข่ายที่บันทึกไว้จากเมนูตัวเลือก จากนั้นเลือกเครือข่ายใหม่แล้วป้อนค่าในแต่ละฟิลด์
 - 2) คุณสามารถเลือกและบันทึกรายการค้นหา AP โดยเปิด Wi-Fi แล้วยีเฟรช (การค้นหา AP)
 - 3) หลังจากเชื่อมต่อ AP ด้วยประเภทการรักษาความปลอดภัยนี้แล้ว โปรไฟล์จะถูกบันทึกโดยอัตโนมัติ

3. การดู MAC แอดเดรส

การเชื่อมต่อกับเครือข่ายไร้สายบางเครือข่ายด้วยฟิลเตอร์ MAC คุณจำเป็นต้องป้อน MAC แอดเดรสของ KM900 ลงในเราเตอร์

- 1) แตะที่ Wi-Fi จากแท็บตั้งค่าแล้วเปิดเมนูตัวเลือก
- 2) เลือก MAC แอดเดรสของฉัน และสิ่งที่เลือกจะปรากฏขึ้น

01

02

03

04

05

06

07

08

การอัปเดตซอฟต์แวร์

ซอฟต์แวร์ Phone Software update

ซอฟต์แวร์อัปเดตโทรศัพท์มือถือ LG ในเว็บไซต์

สำหรับข้อมูลเพิ่มเติมและวิธีการใช้งานระบบนี้, กรุณาดูที่เว็บไซต์ LGmobile.com

ที่: <http://www.lgmobile.com>
- เลือกประเทศ - รายการสินค้า - รายการคู่มือและซอฟต์แวร์

รายการนี้จะทำให้คุณสามารถอัปเดตซอฟต์แวร์ของท่านเป็นเวอร์ชันล่าสุดได้อย่างง่ายดายผ่านระบบอินเทอร์เน็ตโดยไม่จำเป็นต้องเข้ารับบริการผ่านศูนย์บริการ. ผู้ใช้ซอฟต์แวร์การอัปเดตโทรศัพท์นี้ต้องตั้งใจและดูแลการทำงานของระบบตลอดกระบวนการทำงานของโปรแกรม, ดังนั้นจึงขอความกรุณาในการอ่านทำความเข้าใจทุกขั้นตอนการทำงานและทุกข้อความที่ปรากฏก่อนการเริ่มใช้งานโปรแกรม กรุณาพึงระวังเสมอว่า การถอดสาย USB หรือการถอดแบตเตอรี่ระหว่างการอัปเดตข้อมูลอาจก่อให้เกิดความ

เสียหายร้ายแรงกับเครื่องโทรศัพท์มือถือของท่าน.

ทั้งนี้ผู้ผลิตจะไม่รับผิดชอบกับการสูญหายของข้อมูลใดๆที่จะเกิดขึ้นระหว่างขั้นตอนการอัปเดต, ท่านควรจดหรือทำการสำรองข้อมูลสำคัญของท่านไว้ก่อนเพื่อความปลอดภัย.

อุปกรณ์เสริม

โทรศัพท์เคลื่อนที่รุ่นนี้มีอุปกรณ์เสริมหลากหลายให้คุณเลือกใช้ ซึ่งอุปกรณ์เสริมบางชิ้นอาจมีการแยกขาย เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการใช้งานส่วนตัวของคุณ โปรดสอบถามเกี่ยวกับอุปกรณ์เสริมที่มีจำหน่ายได้จากตัวแทนจำหน่ายในพื้นที่ของคุณ (รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อุปกรณ์ชาร์จ



สายเคเบิลข้อมูล
และซึดี

เชื่อมต่อและซิง
โครไนซ์โทรศัพท์
KM900
กับคอมพิวเตอร์



แบตเตอรี่



ชุดหูฟัง สเตอริโอ



คู่มือการใช้

เรียนรู้เพิ่มเติม
เกี่ยวกับโทรศัพท์
KM900 ของคุณ



01

02

03

04

05

06

07

08

หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

บริการเครือข่าย

โทรศัพท์ไร้สายที่อธิบายไว้ในคู่มือนี้ได้รับการรับรองให้ใช้ในระบบเครือข่าย GSM 900, DCS 1800, GSM 850, PCS 1900 และ W-CDMA

คุณสมบัติต่างๆ

ที่กล่าวถึงในคู่มือนี้เรียกว่า

บริการเสริมจากระบบเครือข่าย ซึ่งเป็นบริการพิเศษที่คุณขอเปิดใช้บริการได้จากผู้ให้บริการของคุณ ก่อนที่คุณจะสามารถใช้คุณสมบัติต่างๆ ของบริการเสริมจากระบบเครือข่ายเหล่านี้คุณต้องสมัครขอรับบริการผ่านทางผู้ให้บริการ และขอคำแนะนำในการใช้จากผู้ให้บริการด้วย

การลงทะเบียน Divx VOD

สร้างรหัสการลงทะเบียน DivX VOD

โปรดไปที่ <<http://vod.divx.com/>> เพื่อลงทะเบียนและการสนับสนุนทางเทคนิค

ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์: KM900

ระบบ: GSM 900 / DCS 1800 / GSM 850 / PCS 1900/ WCDMA

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ)
+45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

ศูนย์บริการ LG โดย บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน แขวงบวรคดี เขตธนบุรี กรุงเทพฯ 10600
วันและเวลาทำการ : จันทร์-ศุกร์, 08:00 - 17:40น.

Call center : 0-2878-5757

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

KM900

Trade Name

LG



Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.6.1 / EN 301 489-7 V1.3.1 / EN 301 489-9 V1.3.1 / EN 301 489-17 V1.2.1 /
EN 301 489-19 V1.2.1 / EN 301 489-24 V1.3.1
EN 60950-1: 2001
EN 50360 / EN 50361: 2001
EN 301 511 V9.0.2 / EN 301 908-1 V3.2.1 / EN 301 908-2 V3.2.1
EN 300 328 V1.7.1
EN 301 357-1 V1.4.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

8, January, 2009


Signature of representative

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น KM900 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคนโดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณ

แล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้ข้อมูล

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.602 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.646 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of

Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคเมื่อจำเป็นต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร

- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสัมผัสเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้แบตเตอรี่เคดิตหรือแบตเตอรี่โดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟังด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาต หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ

- มีสมาธิในการขับซี้ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับซี้ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สาย ซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรง เนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัสหรือพยายามดึงออก ให้หยุดใช้โทรศัพท์ทันทีจนกว่าจะส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างการระเบิดต่างๆ ใ้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

การระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่ายหรือระเบิดได้ในห้องโดยสารของรถซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ปิดโทรศัพท์มือถือของคุณหรือเปิดใช้งานโหมด Flight ก่อนขึ้นเครื่องบิน

- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และอุปกรณ์ชาร์จของ LG เท่านั้น

- อุปกรณ์ชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
 - รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
 - เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่
 - ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
 - อย่าให้อุปกรณ์ชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่นในห้องน้ำ
 - อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
 - หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
 - ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
 - หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
 - ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดของซิมการ์ด	ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือใส่ซิมการ์ดไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่มีการเชื่อมต่อกับเครือข่าย	สัญญาณอ่อน อยู่นอกพื้นที่เครือข่าย GSM	ไปที่บริเวณใกล้เคียงกับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการ
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสใหม่อีกครั้ง	ติดต่อผู้ให้บริการ
ตั้งค่าฟังก์ชันไม่ได้	ผู้ให้บริการไม่สนับสนุนหรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข มีการใส่ซิมการ์ดอันใหม่ถึงขีดจำกัดการโทรของคุณแล้ว	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งการจำกัดการโทรใหม่โดยรหัส PIN 2
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดไม่นานพอ แบตเตอรี่หมด ข้ามสัมผัสแบตเตอรี่สกปรก	กดปุ่มเปิด/ ปิดค้างไว้นานอย่างน้อยสองวินาที เสียบอุปกรณ์ชาร์จให้นานขึ้น ทำความสะอาดข้ามสัมผัสแบตเตอรี่

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดเกี่ยวกับการชาร์จ	แบตเตอรี่หมดโดยสิ้นเชิง อุณหภูมิสูงหรือต่ำเกินไป	ชาร์จแบตเตอรี่ ตรวจสอบให้แน่ใจว่าอยู่ในอุณหภูมิ แวดล้อมที่เหมาะสม รอสักครู่ จากนั้นชาร์จแบตเตอรี่อีกครั้ง
	มีปัญหาที่ขั้วสัมผัส	ตรวจสอบกระแสไฟฟ้าและ การเชื่อมต่อกับโทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่ และทำความสะอาดหากจำเป็น
	ไม่มีกระแสไฟฟ้า	เสียบปลั๊กเข้ากับเต้าเสียบอื่นหรือ ตรวจสอบแรงดันไฟฟ้า
	อุปกรณ์ชาร์จชำรุด	หากอุปกรณ์ชาร์จไม่ทำงาน ใหม่เปลี่ยนอุปกรณ์ชาร์จใหม่
	อุปกรณ์ชาร์จไม่ถูกต้อง	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น
	แบตเตอรี่ชำรุด	เปลี่ยนแบตเตอรี่
สัญญาณเครือข่าย ขาดหายไป	สัญญาณอ่อนเกินไป	การเชื่อมต่อกับผู้ให้บริการอื่นเป็น ไปโดยอัตโนมัติ
หมายเลขโทรศัพท์ใช้ โทรออกไม่ได้	กำลังใช้งานฟังก์ชันกำหนดหมาย เลขโทรออก	ตรวจสอบการตั้งค่า



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

This handset is not recommended for blind disability person due to touch screen keypad.

KM900 User Guide



Congratulations on your purchase of the advanced and compact KM900 phone by LG, designed to operate with the latest digital mobile communication technology.

Set up	01
Your home screen	02
The basics	03
Get creative	04
Get organised	05
The web	06
Settings	07
Accessories	08
Network Services	09
Technical data	10
Trouble shooting	11

Contents

Guidelines

Guidelines for safe and efficient use . 8

Set up

Getting to know your phone 14

Open view 16

Installing the USIM and battery 17

Charging your phone..... 19

Memory card 20

Menu map..... 22

Your home screen

Touch screen tips..... 23

Customising the home screen..... 24

Quick keys 25

Touch screen 26

Using the Multi-tasking function..... 30

The basics

Calls 31

Making a call or a video call..... 31

Calling your contacts 31

Answering and rejecting a call 31

In-call options 32

Adjusting call volume 33

Speed dialling 33

Making a second call..... 33

Turning off DTMF..... 34

Viewing your call logs..... 34

Using call divert 35

Using call barring 35

Changing the common call setting .. 36

Changing your video call settings..... 36

Contacts..... 37

Searching for a contact 37

Adding a new contact 37

Creating a group..... 38

Changing your contact settings..... 38

Viewing information 39

Messaging 40

Messaging..... 40

Sending a message..... 40

Entering text..... 41

T9 predictive 41

Abc manual 41

Setting up your email 42

Sending an email using your new

account 43

Changing your email settings..... 43

Message folders 44

Using templates..... 45

Using emoticons..... 45

Changing your text message

settings..... 45

Changing your multimedia message

settings..... 46

Changing your other settings..... 47

Get creative

Camera	48	Adjusting the volume when viewing a video	63
Taking a quick photo	48	Setting a photo as wallpaper	64
Once you've taken the photo	49	Editing your photos.....	64
Getting to know the viewfinder.....	50	Adding text to a photo.....	65
Using the flash.....	51	Adding an effect to a photo	66
Adjusting the exposure.....	51	Crop a photo	66
Using the advanced settings.....	52	Adding a colour accent to a photo	66
Changing the image size.....	54	Swapping the colours in a photo	67
Choosing a colour effect.....	54	Editing your videos.....	67
Using the inner camera.....	55	Trimming the length of your video...67	
Viewing your saved photos	55	Merging two videos together.....	68
Video camera	56	Merging a photo with a video	69
Shooting a quick video	56	Adding text to a video	69
After taking a video	57	Overlaying a photo.....	70
Getting to know the viewfinder.....	58	Adding a soundtrack to your video..70	
Adjusting the exposure.....	59	Adding live sound to your video	71
Using the advanced settings.....	59	Changing the speed of your video ...71	
Changing the video image size.....	60	Adding a dimming effect	71
Choosing a colour tone.....	61	Multimedia.....	72
Using the inner video camera.....	61	Pictures	72
Watching your saved videos	62	My images options menu.....	72
Watching your videos on TV.....	62	Sending a photo	72
Your photos and videos	63	Using an image	73
Viewing your photos and videos.....	63	Printing an image.....	73
Using zoom when viewing a video or photo	63	Moving or copying an image.....	73
		Creating a slide show	74
		Geo-tagging	74

Contents

Checking your memory status	74
Sounds	74
Using a sound	75
Videos	75
Sending a video clip	76
Games and Applications	76
Playing a game	76
Using the options menu	76
Installing a Java game and application	77
Enjoying M-Toy menu	77
Flash contents	77
Viewing an SWF/ SVG file	77
Documents	77
Viewing a file	77
Transferring a file to your phone	78
Others	78
Creating a movie	78
Music	79
Transferring music into your phone	79
Playing a song	80
Creating a playlist	80
Deleting a playlist	81
Using the radio	81
Searching for stations	81
Resetting channels	82
Listening to the radio	82
Using FM transmitter	82

Get organised

Organiser	84
Adding an event to your calendar	84
Changing your default calendar view	84
Adding an item to your To Do list	85
Using the date finder	85
Setting your alarm	86
Adding a memo	86
Voice recorder	87
Recording a sound or voice	87
Sending the voice recording	87
Using your calculator	87
Converting a unit	88
Using the stopwatch	88
Adding a city to your world clock	88
PC Sync	89
Installing the LG PC Suite on your computer	89
Connecting your phone and PC	89
Backing up and restoring your phone's information	90
Viewing your phone files on your PC	90
Synchronising your contacts	91
Synchronising your messages	91
Music Sync	91

Transferring music using Windows Media Player.....	92	Changing your Bluetooth settings.	104
Using iSync	92	Pairing with another Bluetooth device	105
DivX Converter	93	Using a Bluetooth headset.....	105
The web		Wi-Fi.....	106
Browser	94	Phone Software update	108
Accessing the web	94	Accessories	109
Adding and accessing your bookmarks	94	Network service	110
Using RSS reader.....	95	Technical data	110
Accessing a saved page	95	Trouble Shooting	112
Viewing your browser history	95		
Changing the web browser settings.....	96		
Using your phone as a modem	96		
Settings			
Changing your screen settings.....	98		
Personalising your profiles.....	98		
Changing your phone settings.....	99		
Changing your touch settings	100		
Changing your connectivity settings.....	100		
GPS	100		
Using memory manager.....	102		
Using flight mode.....	103		
Sending and receiving your files using Bluetooth	103		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information This mobile phone model KM900 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used

frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.602 W/kg (10g) and when worn on the body is 0.646 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

Guidelines for safe and efficient use

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.

- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Guidelines for safe and efficient use

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off or activate flight mode before boarding any aircraft.

- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Getting to know your phone

Handsfree or Stereo earphone connector

Power key

Long press (3sec) for Power ON / OFF.

Earpiece

Inner camera

Proximity Sensor



End key

- Rejects a call.
- Press once to return to the home screen.

Multitasking key

Call key

Dials a phone number and answers incoming calls.

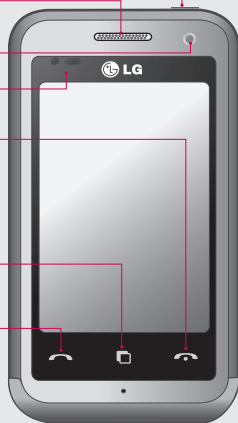

⚠ WARNING: Putting a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the protection film on proximity sensor of LCD. It can cause a malfunction of the sensor.



Charger, Data cable (USB cable)

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.



Volume keys

- **When the screen is idle:** volume of key tone.
- **During a call:** volume of the earpiece.
- **When playing a track:** controls volume continuously.

Camera key

- Go to camera preview directly by long pressing the key in the homescreen.

01

02

03

04

05

06

07


08

09

10

11

Open view

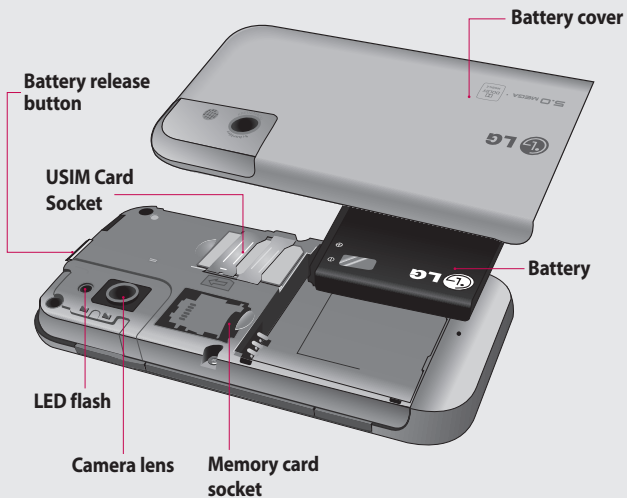

Installing the USIM and battery

1 Remove the battery cover

Press and hold down the battery release button on the top of the phone and lift off the battery cover.



2 Remove the battery

Hold the top edge of the battery and lift it away from the battery compartment.



⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

⚠ WARNING: Do not remove the battery cover when using GPS, Wi-Fi or Bluetooth. The antenna is mounted on the battery cover.

01

02

03

04

05

06

07

08

09


10

11

Installing the USIM and battery


3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the outwards

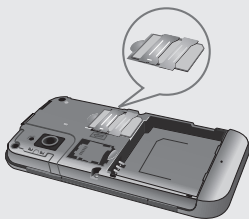

4 Install the battery


First insert the top edge of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.

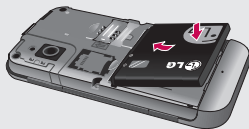

Charging your phone

Slide back the cover of the charger socket on the side of your KM900. Insert the charger and plug it into a mains electricity socket. Your KM900 must be charged until the “Battery full” message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery lifetime. Disregard the first “Battery full” message and keep the phone on charge overnight (or for up to 14 hours).

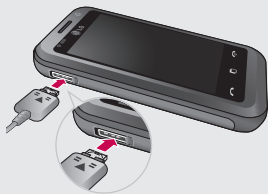

01

02

03

04

05

06

07

08

09

10

11

Memory card





Installing a memory card

You can expand the available memory space available on your phone by using a memory card. KM900 will support up to 32GB memory card .

NOTE: A memory card is an optional accessory.

Slide the memory card into the slot at the top, until it clicks into place. Make sure the gold contact area is facing downwards.


⚠ WARNING: Slide the memory card fully into the slot, otherwise, the card can be damaged.

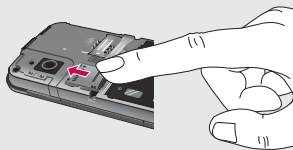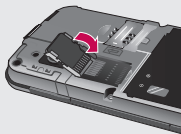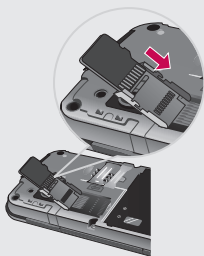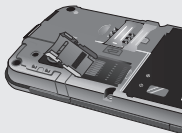

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.


NOTE: All files get deleted while formatting.

- 1 From the home screen select  and choose **Phone settings** from the Settings tab.
- 2 Scroll and touch **Memory manager** then scroll and select **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if there is one. The card will then be formatted and ready to use.

NOTE: If there is existing content on your memory card, the folder structure may be different after formatting since all files will have been deleted.

Transferring your contacts

To transfer your contacts from your USIM to your phone:

- 1 From the Communication tab, scroll through **Contacts** and select  **Change location**.
- 2 Touch **Copy to handset**.
- 3 Choose **Select all** or select names one by one and touch **Copy to handset**.

01

02

03

04

05

06

07


08

09









10

11









Menu map

Touch  in the home screen to open a **Top menu**. From here you can access further menus by scrolling through the icons: **Communication**, **Multimedia**, **Utilities** and **Settings**.



COMMUNICATION

-  Contacts
-  Recent history
-  Browser
-  Messaging
-  Email
-  Dialling
-  Video call
-  Google









MULTIMEDIA

-  Music
-  Camera
-  Video camera
-  Gallery
-  My stuff
-  Games & Apps
-  FM radio
-  Movie maker

UTILITIES

-  Alarms
-  Organiser
-  Memo
-  Stopwatch
-  Voice recorder
-  Calculator
-  World clock
-  Tools

SETTINGS

-  Profiles
-  Display settings
-  Phone settings
-  Bluetooth
-  Wi-Fi
-  Call settings
-  Connectivity
-  Message settings

Your home screen

From this screen you can access menu options, make a call, view the status of your phone and do many other things.

Touch screen tips

The home screen is also a great place to get used to using the touch screen.

To select an item, touch the centre of the icon.

- Do not to press too hard; the touchscreen is sensitive enough to pick up on a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- When the screen light is off, press the power key once then press and hold the "Press & hold to unlock" button on the touch screen to restore the home screen.
- Whenever your KM900 is not in use it will return to the lock screen.

TIP! When the screen light is off, press the power key once then press and hold the "Press & hold to unlock" button on the touch screen to restore the home screen.

01

02

03

04

05

06

07

08


09

10


11

Your home screen

Customising the home screen

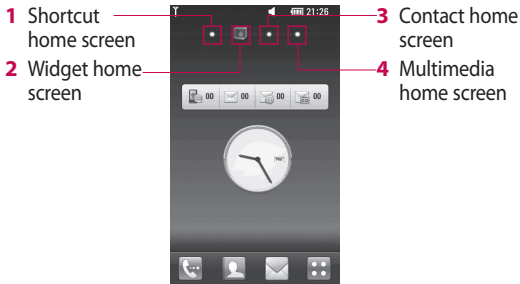


- **Get in touch with your KM900**
- The User Interface is based on four types of Homescreens. To swap between the home screens just wipe quickly over display from left to right or from right to left.
- **Home screen customisation** - For each type of home screen you are able to add and remove objects by pressing & holding your finger on the screen, or if already added touching and holding one of the objects.

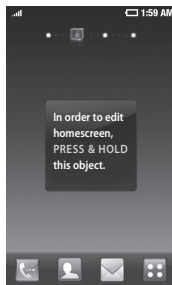


Quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use most.



Touch it to bring up the touch dialing pad, which lets you make a call. Enter the number with a normal key pad and touch **Voice call** or tap .

To place a video call to this number, touch  after entering the number.



Touch to access the **Messaging** menu. From here you can create a new SMS.



Touch to open your contacts. To search for the number you want to call: Enter the name of the contact using the touchpad. You can also create new contacts and edit existing ones.



Touch to open the full Top menu which is divided into four sub-menus.

01

02

03

04

05

06

07

08

09

10

11


Your home screen

Touch screen

The controls on the KM900 touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any Application simply touch its icon.

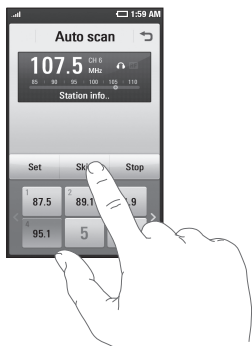

Your home screen


Scrolling

Drag from side to side to scroll. On some screens, such as web pages, you can also scroll up or down.



Zooming In or Out

When viewing photos, web pages, emails, or maps, you can zoom in and out. Pinch your fingers together or slide them apart.

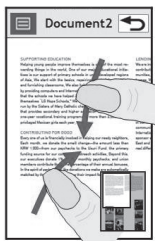

<Zoom in>



<Zoom out>

01

02

03

04

05

06

07

08

09

10











11




















Your home screen




















Viewing the status bar





The status bar uses different icons to show conditions such as signal strength, new messages and battery life as well as whether Bluetooth or GPRS are active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	No Service
	2G
	3G
	EDGE
	HSDPA
	WiFi is transmitting
	Bluetooth Mono hands free headset
	Bluetooth Mono Stereo headset
	Bluetooth Stereo headset
	Bluetooth Mono headset

Icon	Description
	Bluetooth on
	Bluetooth Transfer
	Bluetooth Visibility
	Bluetooth Music
	Downloading
	Downloading complete.
	Downloading cancelled.
	In-call option
	Internet
	Searching
	Call divert
	Call reject
	Security
	Headset
	HomeZone
	Roaming
	Alarm
	Schedule (Calendar)
	Multi-tasking

Icon	Description
	Music pause
	Music playing
	Music playing with FM broadcasting
	FM radio playing
	FM broadcasting
	Email being sent
	Email received
	MMS
	MMS sending
	Retrieving MMS
	SMS sending
	New voicemail
	New message
	Message sending has failed
	New email
	Push message
	Flight mode
	Outdoor
	Silent

Icon	Description
	Customised 1-10
	External memory
	Battery status
	Projector/TV out

01

02

03

04

05

06

07

08


09


10

11

Your home screen


Using the Multi-tasking function

Touch and hold the multitasking hard key  to open the **Multitasking** menu. From here you can view some applications that are running and access them with one touch.

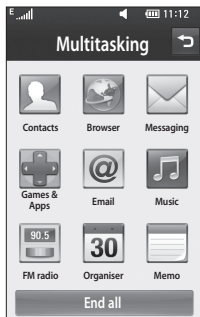




TIP! For the multitasking key in idle screen, the short press brings up cube and the long press brings up multitasking menu.



When the screen light is off, press the power key once then press and hold the "Press & hold to unlock" button on the touch screen to restore the home screen.

In any application, press the Multi-tasking key and select back  to return to the previous screen.


Calls

Making a call or a video call

- 1 Touch  to open the keypad.
- 2 Key in the number on the keypad.
To delete a digit, press the clear key.
- 3 Touch the  key to place the call.
- 4 To end the call, touch the  key.

TIP! To enter + for making international calls, touch  twice, or press and hold down .


TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.


TIP! You can **Send message**, **Save number** or **Search contacts** by tapping .

Calling your contacts

- 1 From the home screen touch  to open your **Contacts**.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching .
- 3 From the list, touch the contact you want to call and select the number to use if there is more than one for that contact.
- 4 Touch **Voice call** or **Video call**.

Answering and rejecting a call

When your phone rings press the  hard key to answer.

Press the  hard key to reject an incoming call.

01

02

03

04

05

06

07

08


09


10


11


Calls

In-call options

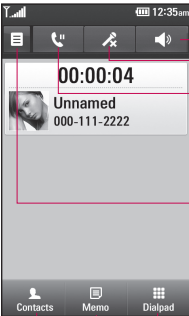

Speaker - Touch  to turn the speaker phone on.

Mute - Touch  to turn the microphone off so the person you are talking to cannot hear you.

Hold - Touch  to put a call on hold.

Options - Choose from a list of further in-call options, including Create new memo and Go to messages, so you can check your messages and add contacts during a call. You can also end the call from here by touching End call.

Dialpad - Touch to open a numerical keypad for navigating menus with numbered options, when dialling call centres or other automated telephone services.

Memo - Add a memo during a call.



Contacts - Search your contacts during a call.


Adjusting call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.

Speed dialling



You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen touch  to open your **Contacts**.
- 2 Touch  and select **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
- 4 Your contacts list will open. Select the contact you want to assign to that number by touching the phone number once.

To call a speed dial number, touch  on the home screen then press and hold the assigned number until the contact appears on the screen.

The call will initiate automatically, without having to touch **Voice call**.

Making a second call

- 1 During your initial call, touch  and select the number you want to call.
- 2 Call the number or search your contacts (see **Making a call** on page 31 for details).
- 3 Touch  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 To end one call touch the held call and press end. To end both calls select **End** then select all calls from the expanded menu.

01

02

03

04

05

06

07

08

09

10

11


Calls




NOTE: You will be charged for every call you make.

Turning off DTMF

DTMF lets you use numerical commands to navigate within automated calls. DTMF default is set to on.

To turn it off during a call (to make a note of a number) touch  and select **Disable DTMF**.

Viewing your call logs

From the home screen, touch , then touch **Recent history** in the Communication tab.

Choose from the following:


All history - View a complete list of all dialled, received and missed calls, voice calls only, video calls and messages.

Missed calls - View a list of all calls you have missed.

Calls only - View a list of all calls you have made and recieved.


Message only - View a list of all numbers that have received or sent the texts and multimedia messages.

VT only- View a list of all video calls.

TIP! From any call log touch  and **Delete all** to delete all the recorded items.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Using call divert

- 1 Touch  and choose **Call settings** in the Settings tab.
- 2 Touch **Call divert** and select **Voice call** and/or **Video call**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer, or when you cannot be reachable.
- 4 Enter the number to divert to.
- 5 Touch **Activate** to activate.

NOTE: Diverting calls will incur charges. Please contact your network operator for details.

TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch  and choose **Call settings** in the Settings tab.
- 2 Touch **Call barring** and select **Voice call** and/or **Video call**.
- 3 Choose any or all of the five options:
All outgoing
Outgoing international
Outgoing international calls except home country
All incoming
Incoming when abroad
- 4 Enter the call barring password. Please check with your network operator about this service.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code, available from your operator. Only numbers within the fixed dial list can be called from your phone.

01

02

03

04

05

06

07

08


09

10

11

Calls

Changing the common call setting

- 1 Touch  and choose **Call settings** in the Settings tab.
- 2 Touch **Common settings**. This lets you amend the following settings:

Call reject - Slide the switch left to highlight the Reject list. You can touch the text box to choose all calls, specific contacts or groups, or those from unregistered numbers (i.e. not in your contacts). Touch **Save** to change this setting.

Send my number - Choose whether to display your number on an outgoing call.


Auto redial - Slide the switch left for **On** or right for **Off**.

Minute minder - Slide the switch left to **On** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a the handset key to answer a call.

Save new number - Select **On** to save a new number.

Changing your video call settings




- 1 From the home screen, touch  and scroll through **Video call settings** in the Settings tab.
- 2 Select the settings for your video calls. Determine whether to use still image, then choose one, and/or switch the mirror on to see yourself on screen when making a video call.

Contacts

Searching for a contact



There are two ways to search for a contact:

From the home screen


- 1 From the home screen touch  to open your **Contacts**. Touch  and enter the contact name using the key pad.
- 2 Touch **Video call** or **Voice call** or the  key to place the call.

TIP! You can search by group by touching the Contacts tab on the top of the screen and selecting **Groups**. This will bring up a list of all your groups.

From the main menu

- 1 Touch , touch **Contacts** on the Communication tab.
- 2 Touch  and **Search**.

Adding a new contact

- 1 From the home screen touch  then touch **New contact** button.
- 2 Choose whether to save the contact to **Handset** or **USIM**.
- 3 If you want to add a picture to each contact, touch **Add picture**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter at least one.
- 5 Enter up to five different numbers and assign a type to each of them, choosing between **Mobile**, **Home**, **Office**, **Pager**, **Fax**, **VT** and **General**.
- 6 Add up to 2 email addresses.
- 7 Assign the contact to one or more groups, choosing between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.

01

02

03

04

05

06

07


08

09

10



11

Contacts

- 8 You can also add a **Ringtone, Homepage, Home address, Company name, Job title, Company address, Birthday, Anniversary** and a **Memo**.
- 9 Touch  to save the contact.

TIP! You can create customised groups for your contacts, see **Creating a group**.

Creating a group


- 1 From the home screen then touch  and touch **Contacts** in the Communication tab.
- 2 Touch **Groups** and select new group.
- 3 Enter a name for the new group.
- 4 Touch  to save the group.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.

TIP! You can edit an existing group by touching the selected group once. Choose to View members, Edit the group, Send message, Send businesscard or Delete group.

Changing your contact settings

You can adapt your contact settings to suit your own preferences.

- 1 Touch **Contacts** from the Communication tab, select  and scroll through **Contact settings**.
- 2 From here, you can adjust the following settings:
 - Display name** - Choose whether to display the first or last name of a contact first.
 - Copy** - Copy your contacts from your USIM to your handset, or vice versa. You can do this one contact at a time, or all at once.

Move - This works in the same way as Copy, but the contact will only remain in the new location. Therefore, once a contact is moved from the USIM to the handset it will be deleted from the USIM memory.

Clear contacts - Delete all your contacts. Touch **Yes** if you are sure you want to delete all your contacts.


Send all contacts via Bluetooth - Send all of your contacts to another device using Bluetooth.

Backup contacts - See **Backing up and restoring your phone's information** on page 90.

Restore contacts - See **Backing up and restoring your phone's information** on page 90.

Memory info. - View memory capacity information.

Viewing information

- 1 Touch **Contacts** from the Communication tab select  and touch **Information**.
- 2 From here you can view **Service dial numbers**, **Own numbers**, your **Memory info.** (memory space remaining) and **My business card**.

TIP! If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

01

02

03

04

05

06

07

08

09



10

11


Messaging


Messaging

Your KM900 combines SMS, MMS into one intuitive, easy to use menu. There are two ways of entering the messaging:


- 1 From the home screen, touch  or touch , then scroll through **Messaging** from Communication tab.


Sending a message

- 1 Touch  then **Write message** to open a blank message.
- 2 Touch **To** to enter the recipient's number, or touch the search icon to open your contacts or favourites. You can add multiple contacts. When you are finished, touch the message box below to start composing the message text.
- 3 After entering the text, you can send the SMS by touching the send button on top of the message.


- 4 Touch  **Insert** to add a text template, multimedia template, emoticon, name & number, new slide, subject or signature.


TIP! You will be charged per 160 character text message for each person that you send the message to.


 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.

Entering text

 Touch to turn on T9 predictive texting.


 You can change the writing language.

 Tap to change between the numbers, symbol and text keypads.

Use  to scroll through the different keyboards in each text entry mode (e.g., capital or lower case letters).

To enter a space touch .

T9 predictive

In T9 mode, you will see .

T9 mode uses a built-in dictionary to recognise your words based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6 and 3 to write 'telephone'.

Abc manual

In Abc mode you have to touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three more times, then 6 three times.

01

02

03

04

05

06

07

08

09

10

11

Messaging

Setting up your email

You can keep in touch on the move using your KM900 to email. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Touch  from the home screen, and scroll through **Email** on the Communication tab.
- 2 Touch **Write email**. If the email account is not set up, start the email set up wizard.

TIP! If an email account is already set up, the wizard is not activated automatically.

- 3 You can now follow the wizard for setting up:
 - Title** - Enter a name for this account.
 - Username** - Enter the account's username.
 - Password** - Enter the account's password.

Email address - Enter the account email address.

Reply email address - Enter the 'reply to' email address.

Outgoing mail server - Enter the outgoing email server address

Incoming mail server - Enter the incoming email server address

Maximum receive size - Select the size limit for your emails, up to the maximum of 1 MB.

Mailbox type - Enter mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails on the server. Copies are always saved for IMAP4 accounts.

Save sent mail into - Select where to save sent emails (when the mailbox type is IMAP4). When the mailbox type is POP3, sent mails are always saved to the handset.

Download option - Choose how you want to download emails. Choose between Header only or All including body for POP3, header only, header + body, or all for IMAP4.

Access point - Choose your Internet access point.

Advanced settings - Choose whether to use the advanced settings.


Once the account is set up, it will appear in the accounts list in your Email folder.

Sending an email using your new account

- 1 Touch **Email - Write email** in the Communication tab to open a new blank message.
- 2 Enter the recipient's address and write your message. You can also attach images, videos, audio files or other file types.
- 3 Touch **Send email** to send your email.

Changing your email settings

You can change your email settings based on your own preferences.

- 1 Touch  from the home screen, then scroll through **Messages settings** from the Settings tab.
- 2 Select **Email**.
- 3 You can alter the following settings:

Email accounts - Manage your email accounts.

01

02

03

04

05

06

07

08

09

10

11

Messaging

Allow reply email - Choose whether to allow read confirmation messages to be sent.

Request reply email - Choose whether to request read confirmation messages.

Retrieve interval - Select how often your KM900 checks for new email messages.

Include message in Fwd & Reply - Select to include the original message in your reply.

Include attachment - Select to include the original attachment in any reply.

Auto retrieval in Roaming - Choose whether to retrieve messages automatically when abroad (roaming).

New email noti. info - Choose whether to be alerted about a new e-mail without a pop-up message.

Signature - Create an email signature and switch this feature on.

Message folders

You will recognise the folder structure in your KM900, which is fairly self-explanatory. If you set up an email account, you can have folders for each account.

Inbox - All messages you receive are stored in your inbox. From here you can view them and delete them, among other functions.

Sent - Messages you send are stored in this folder.

Outbox - This is a temporary storage folder while messages are being sent.

Drafts - If you don't finish writing a message, you can save what you've done in this folder.

Threaded box - Messages (SMS) exchanged with another party via messenger. You can save the image and message (SMS) simultaneously.

My Folders - Create folders to store your messages.

Using templates

Create templates for the SMS and MMS messages you send most often. There are already some templates on the phone, which you can edit.

- 1 When writing new message, you can enter **Templates** from **Insert** in option menu.
- 2 Choose **Text templates** or **Multimedia templates**. You can add, edit, delete or delete all templates. To edit a message, select it, amend it, and touch **Save template**.

Using emoticons

Liven up your messages using emoticons. There are some commonly used emoticons already on your phone.

- 1 When writing new message, you can enter **Emoticons** from **Insert** in option menu.
- 2 You can add a new icons or delete one or all or emoticons.

Changing your text message settings

Your KM900 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

Scroll through **Message settings** from the Settings tab and touch **Text message**. You can change the following:

Text message centre - Enter the details of your message centre.

01

02

03

04

05

06

07

08

09

10

11

Messaging

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your messages into **Text, Voice, Fax, X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This impacts on the size of your messages and therefore on your data charges.

Send long text as - Choose to send long messages as Multiple SMS or MMS.

Changing your multimedia message settings

Your KM900 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

Touch **Settings** then select **Message settings** and **Multimedia message**. You can make change the following:

Retrieval mode - Select **Home** or **Roaming network**. If you then select Manual you will only receive notifications about MMS messages. You can then decide whether to download them in full.

Delivery report - Choose whether to allow and/or request a delivery report.

Read reply - Choose whether to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.


Slide duration - Choose how long slides appear on screen.

Delivery time - Choose how long to wait before a message is delivered.

Multimedia message center - Enter the details of your message centre.

Changing your other settings

Scroll through **Message settings** from the Settings tab then:

Voicemail - Touch **New profile** or  to add a new Voicemail service. Contact your network operator for more information about the service they provide.

Service message - Choose whether to receive or block service messages. You can also set message security levels by creating trusted and not trusted sender lists.

Info. service - Select your reception status, language and other settings.

01

02

03

04

05

06

07

08

09

10

11

Camera

Taking a quick photo


- 1** Press and hold down the Camera key on the right side of the phone.
- 2** Holding the phone horizontally, point the lens towards the subject you want to take a picture of.
- 3** Press the capture button lightly and a focus box will appear in the centre of the viewfinder screen.
- 4** Position the phone so you can see the photo subject in the focus box.
- 5** When the focus box turns green, the camera has focused on your subject.
- 6** Press the capture button and hold it down.

TIP! Face Tracking

This automatically detects and focuses on human faces to help you take clearer pictures.

Once you've taken the photo

Your captured photo will appear on the screen. The image name is shown with four icons on the right side.

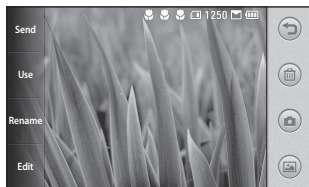


Send Touch to send the photo as a **Message, Email, Bluetooth** or **Blogger**. See page 40 for sending a message, and page 103 for sending and receiving your files using Bluetooth.


Use Touch to use the image as wallpaper.


Rename Touch to edit the name of the selected picture.

Edit Touch to edit the image using various tools.

 Touch to go back to previous menu.

 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to view a gallery of your saved photos.

01

02

03

04

05

06

07

08


09

10

11

Camera


Getting to know the viewfinder

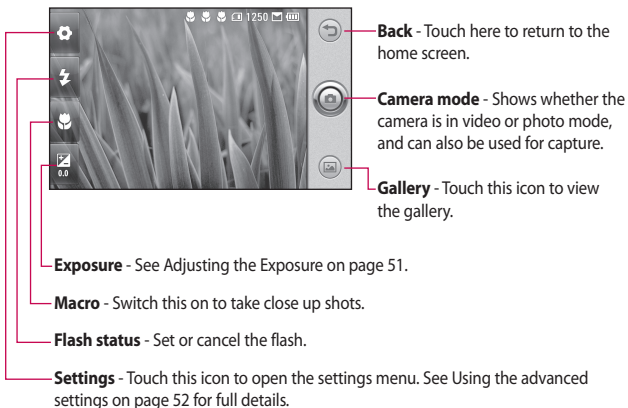

TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.




Using the flash

The default flash setting is auto, but there are other options.

- 1 Select  from the left side of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
Auto - Your camera will assess the light available for a good picture and use the flash as necessary.
Always off - The camera will never flash. This is useful if you want to save battery power.
Always on - The camera will always flash.
- 3 When you touch the option you want, the flash menu will automatically close, allowing you to take a picture immediately.
- 4 The flash status icon in the viewfinder will change based on the new flash mode.

Adjusting the exposure

The exposure defines the control of the amount of sunlight entering the image. A low contrast image will appear darker, whereas a high contrast image will appear much brighter.

- 1 Touch .
- 2 Slide the contrast indicator along the bar, towards  for a lower exposure, darker image or towards  for a higher exposure, brighter image.

01

02

03

04

05

06

07

08


09

10

11

Camera

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

You can change the camera setting by scrolling the wheel. After selecting the option, touch the **OK** button.

Switch to - For self portraits, switch to the LG KM900's inner camera. You can also switch between camera mode and video camera mode.

Image size - Change the photo size to save memory space or to take a picture of the correct size for a contact. See **Changing the image size** on page 54.

Colour Effect - Choose a colour tone to use on your new photo. See **Choosing a colour effect** on page 54.

White balance - Choose between Auto, Incandescent, Sunny, Fluorescent and Cloudy.

Timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds** or **10 seconds**. This is ideal if you want to be included in a photo.

Shot mode - Choose the shot mode and select either Normal or continuous shot.

ISO - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can't use the flash. Select the ISO value from **Auto**, **100**, **200**, **400** and **800**.

Image quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

Memory in use - Choose whether to save your photos to the Handset memory or the External memory.

Hide icons - Choose the icons of camera settings manually or automatically.

Image stabilization - Enables you to take a photo without the camera wobbling or shaking.

Auto focus - Select the way the camera will focus. Choose between **Spot**, **Manual** and **Face tracking**.

Shutter sound - Select one of the four shutter sounds.

Grid view - Choose between **Off**, **2X2 grid**, **3X3 grid**

Reset - Restore all the camera settings.

Geo-tagging - On/ Off

TIP! When you exit the camera all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example colour tone and ISO. Check them before you shoot your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu.

01

02

03

04

05

06

07

08

09


10

11

Camera

Changing the image size

The more pixels, the larger the file, which means the files take up more memory space. If you want to store more pictures on your phone, you can alter the number of pixels to make the files smaller.

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Image size** from the Preview menu.
- 3 Select a pixel value from the six options (**5M: 2560x1920, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) contacts, MMS or choose the predefined wallpaper size.


Choosing a colour effect


- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options: **Off, Sepia, Mono, Negative** or **Emboss**.
- 4 Once you've made your selection the colour tone menu can be closed by selecting the OK button. You are then ready to take a picture.


TIP! You can change a picture taken in colour to black and white or sepia after it's taken, but you cannot change a picture taken in black and white or sepia back to colour.

Using the inner camera


Your LG KM900 has an inner 640x480 camera for both video calls and taking photos.

- 1 To switch to the inner camera touch  then select **Switch to- Inner camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image, press the side button as normal.

TIP! The inner camera has fewer settings as it has no flash nor ISO. You can still alter the image size, colour effect, image quality, white balance and set the self-timer by touching  in the same way as when using the main camera.

- 3 After you've taken the photo you'll be offered all the same options as for an image taken with the main camera.
- 4 To return to the main camera touch  and then select **Outer Camera** from the Preview menu.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on screen.

01

02

03

04

05

06

07

08





09

10

11


Video camera

Shooting a quick video

- 1 Press and hold down the camera key on the right side of the phone.
 - 2 Then, touch  and then select **Switch to** in the view finder in camera mode to switch to video mode.
 - 3 The video camera's viewfinder will appear on the screen.
 - 4 Holding the phone horizontally, point the lens towards the video subject.
 - 5 Press the capture button once to start recording.
 - 6 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
 - 7 To pause the video touch,  and resume recording by selecting .
- 8 Touch  on the screen or press the capture button again to stop recording.

After taking a video

A still image representing your captured video will appear on the screen. The name of the video will be shown on the bottom of the screen, along with four icons on the right side.

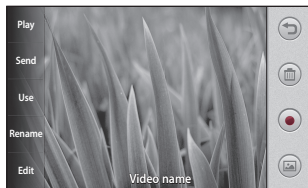


Play Touch to play the video.


Send Touch to send the photo as a **Message**, **Email** or **Bluetooth**. See page 40 for sending a message, and page 103 for sending and receiving files using Bluetooth.


Use Touch to use the image as wallpaper.


Rename Touch to edit the name of the selected picture.

Edit Touch to edit the image with various tools.

 Touch to return to the previous menu.

 Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view the saved videos and pictures gallery.

01

02

03

04

05

06

07

08


09

10

11

Video camera

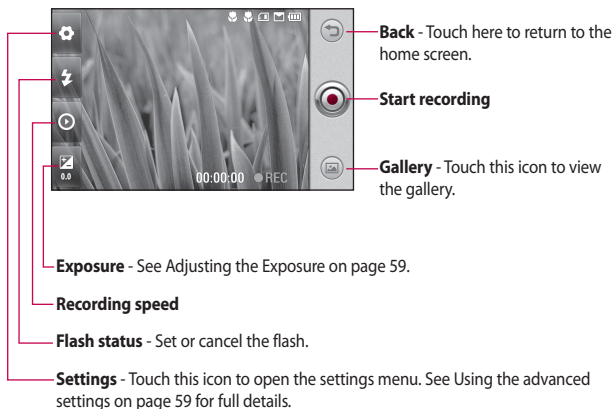


Getting to know the viewfinder



TIP! You can close all shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Adjusting the exposure

The exposure defines the difference between light and dark areas in an image. A low contrast image will appear darker, whereas a high contrast image will appear much brighter.

- 1 Touch .
- 2 Slide the contrast indicator along the bar, towards  for a lower exposure, darker image or towards  for a higher exposure, brighter image.

Using the advanced settings

Using the viewfinder, touch **Settings** to open all the advanced settings options.

You can adjust the video camera setting by scrolling the wheel. After selecting an option, touch the **OK** Button

Video size - Change the size of the video to save memory space. See **Changing the video image size** on page 60.

Colour Effect - Choose a colour tone to use on your new view. See **Choosing a colour tone** on page 61.

White balance - The white balance ensures any white in your video is realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

Video quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality, the sharper the video will be. The file size will increase as a result, meaning you'll be able to store fewer videos in the phone's memory.

01

02

03

04

05

06

07

08

09

10

11

Video camera

Duration - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS.

TIP! If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.

Memory in use - Choose whether to save your videos to the Handset memory or to the External memory.

Voice - Choose Mute to record a video without sound.

Sound focus - Choose the sound focus: **Off/ Outer focus/ Inner focus**


Hide icons - Select whether to hide the icons on the camera menu automatically or manually.

Reset - Reset all the video camera settings.

Switch to - Switch to your LG KM900's inner camera to record yourself on video. See **Using the inner video camera** on page 61 for details.

Changing the video image size


The more pixels, the larger the file size, which means the files take up more memory space. If you want to store more videos on your phone, you can alter the number of pixels to make the files smaller.

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select a pixel value from the four options:
720X480 (D1) - The highest - quality widescreen option.
640x480 - Standard sized VGA.

320x240 - Smaller video size, and therefore a smaller file size. This is ideal for saving memory space.


176x144 - Smallest video size and therefore the smallest file size.

- 4 Touch the OK button to return to the viewfinder.

 **WARNING:** The great editing software on your LG KM900 is compatible with all video types except 720X480 (D1) and 640x480. Don't record in this format if you plan to edit your video.


TIP! For video format conversion software, see the CD you received with your KM900.

Choosing a colour tone

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options, **Off, Sepia, Mono, Negative,** and **Emboss.**
- 4 Touch the colour tone you want to use.

Using the inner video camera

Your LG KM900 has an inner 320x240 camera for both video calls and recording videos.

- 1 To switch to the inner camera, touch  then select **Inner Camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, and press it again to stop recording.

01

02

03

04

05

06

07


08

09

10

11

Video camera


- 3 After you've shot the video you'll be offered all the options available for a video shot with using the main camera.
- 4 To return to the main camera touch  and then **Outer Camera**.

TIP! You can still alter the image size, colour effect, white balance and quality by touching **Settings** in the same way as when using the main camera.


Watching your videos on TV

Connect your KM900 to your TV using the TV output cable.

NOTE: The TV output cable is available for purchase separately.


 **WARNING:** All formats except 320x240 and 176x144 are compatible with watching on TV.

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch the video you want to view tap twice to bring it to the front of the gallery. It will automatically start to play.


Your photos and videos

Viewing your photos and videos

- 1 Touch  on your camera preview screen.
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo to open it fully.



TIP! Flick left or right to view other photos or videos.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.

Using zoom when viewing a video or photo

When viewing photos or videos, you can zoom in or out with pinching your fingers together or apart.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, touch the volume bar on the left side of the screen. Alternatively, use the volume keys on the side of the phone.

01

02

03

04

05

06

07

08

09

10

11

Your photos and videos

Setting a photo as wallpaper

- 1 Touch the photo you would like to set as wallpaper to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch **Use as**.
- 4 Select **Wallpaper**.

Editing your photos

There are loads of great things you can do to your photos to change them, add to them or liven them up a little.

- 1 Open the photo you'd like to edit and touch **Edit** to bring up the options.
- 2 Touch the icons to adapt your photo:



Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.



Draw something on your photo freehand. Select the thickness of the line from the four options and the colour you would like to use.



Put writing on the picture. See **Adding text to a photo** on page 65.



Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be.



Erase the editing you have added to the picture. You can choose the size of eraser that you use.



Touch to return to the gallery.

Save Save the changes you have made to the photos. Select to save the changes as an **Update**, or as a **New file**. If you select **New file** enter a file name.

Undo Erase the editing you have done to the photo.


Image Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo** on page 67.

Filter Touch to apply the effect options to a photo.

Adjustment It helps to adjust the picture taken using automatic colour, brightness etc.



Adding text to a photo

- 1 From the editing screen, touch .
- 2 Select **Text** to add unframed text or choose one of the speech bubble shapes.
- 3 Enter your text using the keypad and touch **OK**.
- 4 Move the text by touching it and sliding it to the place you'd like it to be.

01

02

03

04

05

06

07


08

09

10

11


Your photos and videos

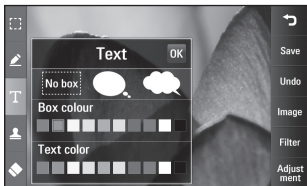

Adding an effect to a photo

- 1 From the editing screen, touch **Filter**.
- 2 Choose to apply any of the eighteen options to the photo.
- 3 To undo an effect simply touch **Undo**.

Crop a photo

- 1 From the editing screen touch .
- 2 Choose the shape you would like to use to crop the picture.
- 3 Drag the box over the area you would like to crop.
- 4 When you are happy with your selection, touch **Save**.

Adding a colour accent to a photo

- 1 From the editing screen, touch **Image**.
- 2 Choose **Colour accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or jumper.
- 4 Alter the intensity of the accenting by touching **Intensity** and then sliding the marker up or down the intensity bar.

- 5 Touch **OK**.
- 6 All colour will be changed.
- 7 Select **Save** to save the changes.

Swapping the colours in a photo

- 1 From the editing screen, touch **Image**.
- 2 Choose **Colour swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or jumper.
- 4 Select a colour.
- 5 Press **OK**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select **Save** to save the changes.

Editing your videos

The editing features are available for MPEG4 type except 720X480 (D1) resolution.

Do not record in 720X480 (D1) resolution format if you plan to edit your video.

Trimming the length of your video

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Trim/Multi trim**.
- 3 Touch  and mark the new start and end points using **Trim**.
- 4 Touch **Preview** to ensure that you are happy with the new cut.
- 5 Touch **Save** or, alternatively, touch  to return to the gallery and discard the changes.

01

02

03

04

05

06

07



08

09


10

11

Your photos and videos

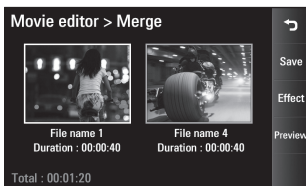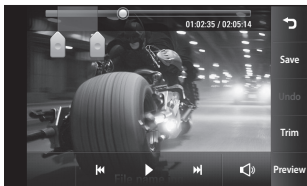


Merging two videos together


- 1 Open the video you'd like to edit, touch  option key.
- 2 Select **Edit** and choose **Video merge**.
- 3 The My videos folder will open. Choose the video you would like to merge.
- 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch **Preview** to choose how to merge the videos together.
- 6 Press **Save** followed by **Yes** to save the new merged video. Choose to save over the existing file or as a new file.
- 7 Repeat these steps to merge more videos.


Merging a photo with a video

- 1 Open the video you'd like to edit, touch  option key.
- 2 Select **Edit** and choose **Image merge**.
- 3 The My images folder will open. Choose the photo you would like to merge into your video.
- 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch **Preview** to choose how the photo and video merge together.
- 6 Press **Save** followed by **Yes**. Choose to save over the existing file or as a new file.
- 7 Repeat these steps to merge more photos.

Adding text to a video

- 1 Open the video you'd like to edit, touch  option key.

- 2 Select **Edit** and choose **Text overlay**.
- 3 Enter your text using the keypad and select **OK**.
- 4 Touch the area of the screen you'd like the text to appear in.
- 5 Touch  and pause playback for setting the start point for text appearance.

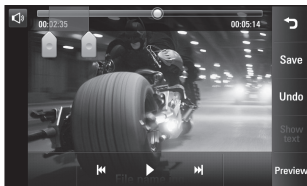

- 6 Touch **End** to mark when you'd like the text to disappear.
- 7 Touch **Save** followed by **Existing File** or **New File**. Choose to save over the existing file or as a new file.
- 8 Repeat these steps to add more text.

01

02

03

04

05

06

07

08

09

10

11

Your photos and videos

Overlaying a photo


- 1 Open the video you'd like to edit, touch  option key.
- 2 Select **Edit** and choose **Image overlay**.
- 3 The My images folder will open. Choose the photo you would like to overlay your video.
- 4 Touch  and pause when you want the picture to appear, then select Opacity after touching the Start button.
- 5 Touch the area of the screen you'd like the photo to appear in. If the photo is too big it will overlay the whole screen, not just the area selected.
- 6 Touch OK and then press End when the photo overlay shall be stopped.

- 7 Touch **Save**. Choose to save over the **Existing file** or as a **New file**.
- 8 Repeat these steps to add more photos.

Adding a soundtrack to your video


- 1 Open the video you'd like to edit, touch  option key.
- 2 Select **Edit** and choose **Audio dubbing**.
- 3 The My sounds folder will open. Choose the track you would like to add to your video.
- 4 The original audio of your video will be erased. Touch **Yes** to continue.
- 5 If the audio is shorter than the video choose whether to play **Once** or **Repeat** it.
- 6 Choose to save over the existing file or as a new file.

Adding live sound to your video


- 1 Open the video you'd like to edit, touch  option key.
- 2 Select **Edit** and choose **Live dubbing**.
- 3 Set the sound value of original sound or recording sound.



Changing the speed of your video

- 1 Open the video you'd like to edit, touch  option key.
- 2 Select **Edit** and choose **Time scaling**.
- 3 Select one of the three speed options. This option can be different depending on the frame rate.
- 4 Choose to save over the original file or as a new file.

Adding a dimming effect

- 1 Open the video you'd like to edit, touch  option key.
- 2 Select **Edit** and choose **Dimming Effect**.
- 3 Your video will now fade in at the start and fade out at the end.
- 4 Choose to save over the original file or as a new file.

01

02

03

04

05

06

07

08

09

10

11

Multimedia

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. To access the Multimedia menu, touch  select **My Stuff** from Multimedia Tab. You can open a list of folders storing all of your multimedia files.

Pictures

My images contains a list of pictures including default images pre-loaded onto your phone, images you have downloaded and those taken on your phone's camera.

My images options menu


The options which are available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Set favorites, Sort by, Slide show** and **Memory manager** options are available for default images.

Sending a photo

- 1 To send a photo just select the picture you want.
- 2 Touch **Send**. Choose from **Message, Email, Bluetooth**.
- 3 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, your phone will search for a device to send the picture to.

Using an image

You can choose images to use as a wallpaper, contact, picture, start up or shut down image or your outgoing or incoming call image.

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My images**.
- 3 Select an image and touch  .
- 4 Touch **Use as** and choose from:
Wallpaper - Set a wallpaper for the key lock screen.

Contacts - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.


Start up image - Set an image to appear when you switch the phone on.

Shut down image - Set an image to appear when you switch the phone off.

Outgoing call image - Set an image to appear during outgoing calls.



Incoming call image - Set an image to appear during incoming calls.

Printing an image

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My images**.
- 3 Select an image and touch  .
- 4 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

Moving or copying an image

An image can be moved or copied between the phone memory and the memory card. You may want to do this to clear some space in one of the memories, or to safeguard your images against being lost.

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My images**.
- 3 Touch  .
- 4 Select **Move** or **Copy**.

01

02

03

04

05

06

07

08

09



10

11

Multimedia

Creating a slide show

If you want to look at all of the images on your phone, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My images**.
- 3 Touch  then **Slide show**.

Geo-tagging



Turn on the camera and enjoy the capabilities of your phone's location-based services.

Take pictures wherever you are and tag them with the location.

If you upload tagged pictures to a blog which supports Geo-tagging, you can see the pictures with the map.

Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My images**.
- 3 Touch  then **Memory manager**.

Sounds

The **My sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**.

From here you can manage, send or set sounds as ringtones.


Using a sound

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My sounds**.
- 3 Select **Default sounds** or **Download sound**.
- 4 Select a sound.
- 5 You can use the sound by selecting **Use as** menu.
- 6 Choose from **Voice ringtone**, **Video ringtone** or **Message tone**.

Videos

The **My videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My videos**.
- 3 Select a video to play.

TIP! KM900 supports both DivX & Xvid video format playback to ensure greater content availability. Refer to page 93 for details.

01

02

03

04

05

06

07

08


09

10

11

Multimedia


Sending a video clip

- 1 Select a video and touch  .
- 2 Touch **Send** and choose from **Message, Email, Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message. If you choose **Bluetooth**, your phone will search for a device to send the video to.

Games and Applications

You can download new games and applications to your phone to keep you amused when you have time to spare.

Playing a game

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My games & apps** then you can select games or applications.

Using the options menu


Within Games and Application folders, the following options are available:

New folder: Create a folder within Games or Applications

Sort by: Sort the games and applications by Date, Name, Size or Memory

Memory manager: View the memory status handset or external memory.

Installing a Java game and application

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 If you want to install off of a memory card, insert the memory card, touch External Memory menu.
- 3 Select the file(*.jad or *.jar) you want to install and touch **Install**.


Enjoying M-Toy menu

M-Toy contains preloaded flash games which are using the integrated motion sensor.

Flash contents

The Flash contents folder contains all of your default and downloaded SWF files.


Viewing an SWF/ SVG file

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **Flash contents**.
- 3 Select the file you want to view.

Documents

It is possible to view Excel, Powerpoint, Word, Text and pdf files on the KM900.

Viewing a file

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **Documents**.
- 3 Select a document which you want to see.

01

02

03

04

05

06

07

08

09

10

11

Multimedia

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 89 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are connected to each other.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **My Images, My Sounds, My Videos, Documents** or **Others** folder.

Others


The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder. If this happens you can move them.

Creating a movie

- 1 Touch menu key  then select **Movie maker** from Multimedia Tab.
- 2 Touch **Insert** to add an image.
- 3 Touch the **Style** tab below the Insert option to choose a movie style.
- 4 Touch the **Sound** tab on the screen to change the sound, such as a voice recording.
- 5 Touch the **Preview** button to see the results.

- 6 Touch the **Play Order** tab on the screen to change the order.
- 7 Touch the **Save in** tab on the screen to choose where to save the movie, and touch the **Usage** tab to choose between keeping and MMS.
- 8 To save your movie, press play and then touch the **Save movie**.

Music

Your LG KM900 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then select **Music** from Multimedia Tab. From here you can access a number of folders:

All tracks - Contains all of the songs you have on your phone.

Favourites - Contains the songs you have saved as a favourite.

Artists - Browse your music collection by artist.

Albums - Browse your music collection by album.

Genres - Browse your music collection by genre.

Transferring music into your phone

The easiest way to transfer music into your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite, see page 89 for details. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent, accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

01

02

03

04

05

06

07

08

09

10

11

Multimedia

Playing a song

- 1 Touch menu key  then select **Music** from Multimedia Tab.
- 2 Touch **All tracks**.
- 3 Select the song you want to play and touch .
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the main menu screen.

TIP! To change the volume while listening to music, touch



Creating a playlist



You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch menu key  then select **Music** from Multimedia Tab.
- 2 Touch  option icon.
- 3 Touch **New playlist**, enter the playlist name and touch .
- 4 The All tracks folder will be displayed. Touch all of the songs that you would like to include in your playlist; a tick will show next to the selected track names.
- 5 Touch **Add songs**.

To play a playlist, select it and touch Play.

NOTE: To add a second playlist, touch  then **New playlist**.

Deleting a playlist

- 1 Touch menu key  then select **Music** from Multimedia Tab.
- 2 Touch option icon and select the play list you wish to delete.
- 3 Touch  option icon.
- 4 Touch remove all to delete all of the songs in the playlists, your empty playlist will be deleted when you go to all tracks.

Using the radio

Your LG KM900 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

NOTE: You will need to insert your headphones in order to listen to the radio.



Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. You can save stations to specific channel numbers so you don't have to keep re-tuning. You can store up to 30 channels on your phone.

01

02

03

04

05

06

07

08



09

10

11



Multimedia

Automatic tuning:

- 1 Touch menu key  then select **FM radio** from Multimedia Tab.
- 2 Touch  .
- 3 Touch **Auto scan** then **Yes**. For the stations found you will be given the options of **Set**, **Skip** or **Stop**. Select set to set the station to the next available channel. Select Skip to skip the station.
- 4 Select Stop to stop the auto scan.


NOTE: You can also manually tune into a station by using wheel displayed next to the radio frequency.

Resetting channels


- 1 Touch menu key  then select **FM radio** from Multimedia Tab.
- 2 Touch  .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. If you reset all of the channels, each

channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Touch  then **Multimedia**.
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

TIP! To improve radio reception, extend the headset cord, which functions as the radio aerial.

 **WARNING:** If you connect the headset not specifically made for the phone, the radio reception can be affected.

Using FM transmitter

KM900 can transmit music over a set FM frequency. You can tune a FM Radio to this frequency to listen to the music being played on your KM900.



From the Main menu select **Tools** >> **FM transmitter**. Here you can set the frequency at which you can broadcast your music.


Using the Tuning wheel scroll with your finger (sliding left and right) to select the desired frequency, or you can tap the frequency display and slide the selection wheels up and down to select the desired frequency.

To save a current frequency tap save current and select a slot to save to. You can have upto 3 saved frequencies.

To change between saved frequencies simply tap the desired frequency.

To begin transmitting tap **Transmit**, to stop transmitting tap **Stop transmitting**.

While you are transmitting, any music played through the music player (go to Main menu then Music) will be transmitted on the selected frequency, and not through the speaker on the KM900.

The FM transmitter can be accessed through the music player by selecting the , at the top left, and select FM transmitter.

01

02

03

04

05

06

07

08

09


10


11

Organiser



Adding an event to your calendar

- 1 From the home screen select  then scroll through **Organiser** in Utilities tab.
- 2 Select the date to which you want to add an event.
- 3 Touch  then **New schedule**.
- 4 Touch **Category** then choose between **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you want your event to begin.
- 5 For appointments and anniversaries, you can enter the time and date the event finishes in the lower time and date boxes.
- 6 If you would like to add a subject or note to your event, touch **Subject** and type in your note.
- 7 Select **Set alarm** to set an alert for the event. If you want to repeat the alarm, select **Set repeat**.




- 8 Touch  to save the event in the calendar. A coloured square cursor will mark all days that have saved events, and an alarm will sound at the event start time, to help you stay organised.

TIP! You can enter holidays in your calendar. Individually touch each day of the holiday, then touch  and select **Set holiday**. Each day will be marked in red.

Changing your default calendar view

- 1 From the home screen select  then scroll through **Organiser** in Utilities tab. Select **Settings** in .
- 2 Touch **Default view** and choose calendar, week, timetable, list or all tasks.

Adding an item to your To Do list


- 1 From the home screen select  then scroll through **Organiser** in Utilities tab.
- 2 Select **New task** in  and touch **Note**.
- 3 Set the date for the task, add notes, then select its priority level: **High, Medium** or **Low**.
- 4 Save the task by selecting .

TIP! You can back up and synchronise your calendar with your computer. See PC Sync on page 90.

Using the date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed. For example, 60 days from 10/10/2009 will be 09/12/2009.

This helps you keep track of deadlines.

- 1 From the home screen select  then scroll through **Organiser** in Utilities tab.
- 2 Select **Date finder**.
- 3 In the **From** tab set the required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

01

02

03

04

05

06

07

08



09

10

11



Organiser

Setting your alarm

- 1 From the home screen select  then scroll through **Alarms** in Utilities tab.
- 2 If you want add a new alarm, touch **New alarm**. If you want to set the alarm to sound again within one hour, touch **Quick alarm**.
- 3 Set the time you would like the alarm to ring and touch .
- 4 Choose whether you want the alarm to repeat and set, set the repeat type.
The icons indicate the weekday you select.
- 5 Select **Sound/ Vibration** to select the type of alarm you want.
- 6 After touching **More** icon, you can select **Alarm bell** and control **Volume, Vibration type**.
- 7 Select Snooze time or add a memo to the alarm.

- 8 Finally, you can set the snooze interval to 5, 10, 20 or 30 minutes or 1 hour, or turn it off.

Adding a memo


- 1 From the home screen select  then scroll through **Memo** in Utilities tab.
- 2 Touch **New memo**.
- 3 Type your memo, followed by .


TIP! You can edit an existing memo. Select the one you want to edit and type your changes.

Voice recorder

Use your voice recorder to record voice memos or other sounds.

Recording a sound or voice

- 1 From the home screen select  then scroll through **Voice recorder** in Utilities tab.
- 2 Touch **Rec.** to begin recording.
- 3 Touch **Stop** to end recording.

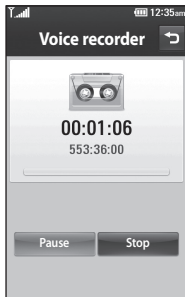



- 4 If you want to record the voice again, touch **New**.

Sending the voice recording

- 1 Once you have finished recording, touch **Send**.
- 2 Choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, your phone will search for a device to send the voice recording.

Using your calculator

- 1 From the home screen select , then scroll through **Calculator** in Utilities tab.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you require (+, -, x, ÷), followed by =.
- 4 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **deg**, **log** etc..

01

02

03

04

05

06

07

08


09

10


11

Organiser

Converting a unit

- 1 From the home screen select , then scroll through **Tools** in Utilities tab.
- 2 Select **Unit converter**.
- 3 Choose whether you want to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 Then select the unit and enter the value you would like to convert from.
- 5 The corresponding value will appear on the screen.

Using the stopwatch

- 1 From the home screen, select , then scroll through **Stopwatch**.
- 2 Touch **Start** to begin timing.
- 3 Touch **Lap** if you want to record a lap time.
- 4 Touch **Stop** to end the timer.

- 5 Touch **Continue** to restart the stopwatch from the time you stopped it at, or touch **Reset** to start the time again.

Adding a city to your world clock


- 1 From the home screen select .
- 2 Select **World clock** in Utilities tab.
- 3 Touch the  icon, followed by List. Start typing the name of the city you require, and it will be displayed at the top of the screen.
- 4 Touch the city to select it, and it will be added to your World time list.

PC Sync

You can synchronise your PC with your phone. This will ensure all your important details and dates match, and also act as a back up to help put your mind at ease.

TIP! To do this, you will need to install the application PC Suite provided on the CD-ROM or available as a download from <http://update.lgmobile.com>. (From www.lgmobile.com PRODUCTS > Manual & Software > Go to Manual & S/W Download Section)

Installing the LG PC Suite on your computer

- 1 From the home screen touch , then scroll through **Connectivity** in Settings tab.
- 2 Select **USB connection mode** and click **OK**.
- 3 Connect handset and PC via USB cable and wait for a while.

- 4 Installation guide message will be displayed.

Caution! If installation guide message is not displayed in your PC, please check your CD-ROM setting on Windows.

- 5 Insert the supplied CD or click download button to directly download LG PC Suite program from website.
- 6 Click on the LG PC Suite Installer which will appear on your screen.

Connecting your phone and PC

- 1 Select PC Suite mode in Connectivity menu and then connect the USB cable to your phone and your PC.
- 2 LG PC Suite will be automatically activated on your PC.

01

02

03

04

05

06

07

08

09

10

11

PC Sync

Caution! If LG PC Suite is not activated automatically in your PC, please check your CD-ROM setting on PC.

- 3 Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose whether to back up **Contents Data** and/or **Phonebook/Schedule/ToDo/Memo Data**. Select the location you want to back up the information to, or restore it from. Click **OK**.
- 4 Your information will be backed up.

Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Manage Files** icon.
- 3 All the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content you no longer need.

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your USIM card and handset.

NOTE: To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Right click on one of your contacts and choose **Select all**, then **Copy** or **Move to phone memory**.

Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect the phone to your PC.
- 2 Click on the Messages icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

Music Sync

This menu lets you add music to your KM900. Before you start to transfer music from your PC to your device, make sure your computer has the following set-up and accessory is at hand:

- Microsoft Windows XP or Vista
- Windows Media Player 10 or above
- USB cable

01

02

03

04

05

06

07

08


09

10

11

PC Sync

Transferring music using Windows Media Player

- 1 From the home screen select , then scroll through **Connectivity** in the Settings tab.
- 2 Select **USB connection mode** and choose **Music sync**.
- 3 Connect your handset and your PC using a compatible USB cable.
- 4 When you try to connect the handset on your PC, your handset will read: Music Sync... followed by **Connected**.
- 5 The PC will prompt you to launch your preferred music management software.
- 6 Select Window Media Player.
- 7 Go to the Sync Tab, then drag and drop the music you wish to transfer to your handset into the **Sync List** pane.
- 8 Click on **Start Sync** button. This starts the transfer process.

WARNING

Do not disconnect your phone during the transfer.

NOTE: Music Sync is available for only music contents.

Using iSync

Install the iSync plug-in install file, which is supported by Macintosh and PCs and the phone via Bluetooth or USB.

To synchronise via Bluetooth, set up a pair between the Macintosh or PC and the phone. If you want to set up via USB, select iSync menu in USB connection mode.

NOTE: When using Bluetooth, you have to select **iSync on** in option menu.

DivX Converter

Install the DivX converter, which is supplied on the same CD as the PC Sync software. DivX will convert media files on your PC to a format that enables you to upload and view them on your phone.

Once installed, select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select **Preferences**, you can change the location of where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** to start the process. When the process is complete, a Conversion complete pop up will be displayed.

01

02

03

04

05

06

07

08

09

10


11

The web

Browser

Browser gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 From the home screen select  then select **Browser** from the Communication tab.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.


- 1 From the home screen select  then select **Browser** from the Communication tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **Add new**. Enter a name for the bookmark followed by its URL.
- 4 Touch  Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark and then touch connect. You will be connected to your bookmark.

Using RSS reader


RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites in an automated way that is easier than checking manually.

The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Accessing a saved page

- 1 From the home screen select  then select **Browser** from the Communication tab.
- 2 Select **Saved pages**.
- 3 Select the page you would like to view and it will open.

Viewing your browser history

- 1 From the home screen select  then select **Browser** from the Communication tab. Select **History**.
- 2 The web page you have accessed recently will be displayed. To access any of these pages, simply select it.

01

02

03

04

05

06

07

08


09

10

11

The web

Changing the web browser settings

- 1 From the home screen select  then select **Connectivity** in the Settings tab.
- 2 Select **Browser settings**.
- 3 You can choose to edit **Profile, Appearance settings, Cache, Cookies, Security, or Reset settings**.
- 4 You can simply set these to on or off by touching the switch icon.

Using your phone as a modem

Your KM900 can double as a modem for your PC, giving you email and internet access even when you don't have any wired connection. You can do this via the USB cable or by Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KM900 and PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on the screen.
- 5 Click **Connect** and your PC will connect through your KM900.

NOTE: For more information on synchronising using the LG PC Suite see page 89.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KM900.
- 2 Pair your PC and KM900 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.

NOTE: For more information on Bluetooth see page 103.

01

02

03

04

05

06

07

08

09

10


11

Settings

Within this tab you can adapt your settings to make your KM900 personal to you.

NOTE: For information on call settings see page 36.

Changing your screen settings

- 1 From the home screen select  then scroll through **Display settings** in the Settings tab.
- 2 You can choose the option menu from:

Screen images - Choose an image for locking, switching on/off the phone, making or receiving a call.

Homescreens - Widget/ Contact/ Multimedia/ Shortcut

Lock screen - Choose the clock type of lock screen.

Font - Adjust the font size and style.

Backlight - Choose how long the backlight remains on for.


NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Auto brightness - Adjust the screen brightness. Select on or off, if you select off you need to manually set the screen brightness.

Personalising your profiles

You can quickly change your profile on the home screen. Simply touch the status summary icon on the top and touch the profile tab.


Using the Settings tab you can personalise each profile setting.

- 1 From the home screen select  then scroll through **Profiles** in the Settings tab.
- 2 Choose the profile you want to edit: Normal, Silent, Outdoor, Flight mode

- 3** You can then change all of the sounds and alert options available in the list, including your **Voice/Video ringtone** and **Volume, Message alerts** and more.

Changing your phone settings

Enjoy the freedom of adapting how your KM900 works to your own preferences.

- 1** From the home screen select  then scroll through **Phone settings** in the Settings tab.
- 2** You can choose the menu from the list below.

Date & Time - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.

Power save - Choose to switch the factory set power saving settings **On, Off**.

Languages - Change the language of your KM900's display.

Auto key lock - Lock the keypad automatically in home screen.

Security - Adjust your security settings, including PIN codes and handset lock. The default security code is 0000.

Touch settings - Change the setting of value of touchpad.

Memory manager - See **Using memory manager** on page 102 for more information.

Reset settings - Reset all the settings to their factory definitions.

Handset information - View the technical information for your KM900.

01

02

03

04

05

06

07

08


09

10

11

Settings

Changing your touch settings

From the home screen select  then scroll through **Phone settings**- Touch settings in the Settings tab.

Touch vibration - Change the type of vibration.

Vibration - Vibration 1/2/3

Vibration volume - Controls the strength of vibration.


Touch sound - Change the tone when touching the screen.

Sound - Sound 1/2/3

Volume - Controls the volume of tone.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

From the home screen select  then scroll through **Connectivity** in the Settings tab.

Network selection - Your KM900 connects automatically to your preferred network.

Internet profile - Set the profiles for connecting to the internet.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

GPS type - Choose either **Assisted GPS** or **Stand alone**.

GPS

GPS technology uses information from earth-orbiting satellites to find locations.

A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach them, then uses that information to identify its location.

This can take up to several minutes to find your location.

Stand Alone GPS Receiver – The technology that communicates to the GPS Satellites to determine current location.

A-GPS – This is assisted GPS which decreases the time to first fix (your location) using the network. Charges may apply, please contact your service provider for more details. To change your GPS setting go to Menu >> Connectivity >> GPS type and choose from Assisted GPS or Stand alone.

GPS Mapping Software – Software that accesses the information from the GPS Receiver and uses this to place you on a map. Maps are stored on a Server where all mapping information is streamed to the handset over a data connection (charges may apply). An example of this software is Google Maps. Note that this type of mapping

does not provide turn-by-turn voice navigation.

GPS Navigation Software – Software that accesses the information from the GPS Receiver and uses this to provide turn-by-turn voice navigation on a map.

There are two types of GPS Navigation Software:

- Maps stored on Handset/Memory Card where no Data connection is required. A third party may provide this solution.
- Maps stored on Server where all mapping information is streamed to the handset over a data connection (charges may apply). This has the benefit of the maps being regularly updated and can contain other useful information such as petrol prices, parking and weather information or details.

The KM900 has an A-GPS capable GPS Receiver and Google Maps is preloaded for your convenience.

01

02

03

04

05

06

07

08

09

10

11

Settings

Note : GPS is unable to work underground and may not work in buildings due to a weak signal.

USB connection mode -

Synchronise your KM900 using the LG PC Suite software to copy files from your phone. See page 89 for more information on synchronisation.

TV out - Choose **PAL** or **NTSC** for connecting your KM900 to a TV.

DivX VOD registration - This menu is for generating a DivX VOD registration code. Please visit <http://vod.divx.com> to register and for technical support.

Packet data conn. - Set the packet data connection. Choose between When available or When needed.


Browser setting - Edit your browser settings. The available options are Profiles, Appearance settings, Cache/Cookies, Security, Reset settings.

Streaming settings - Edit your streaming settings.

Java settings - View your certificates list or change your Java profile.

Using memory manager

Your KM900 has three available memories: the phone itself, the USIM Card and an external memory card (which you may need to purchase separately). You can use memory manager to determine how each memory is used and see how much space is available.

From the home screen select  then scroll through **Phone settings** in Settings tab. Select **Memory manager**.

Handset common memory 1/2 -

View the memory available on your KM900 for MMS, Email, Java applications and others.

Handset multimedia memory -

View the memory for multimedia contents such as streaming file,


movie, music pictures, sounds, video and flash.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

USIM memory - View the memory available on your USIM Card.

External memory - View the memory available on your external memory card (which you may need to purchase separately).


Using flight mode

Turn on flight mode by selecting  then **Settings**. Touch **Profiles** and choose **Flight mode**. Flight mode will not allow you to make calls, connect to the Internet, or send messages.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch  and choose **Send**. Choose **Bluetooth**.
- 3 If you have already paired the Bluetooth device, your KM900 will not automatically search for other Bluetooth devices. If not, your KM900 will search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

01

02

03

04

05

06

07

08

09

10

11



Settings

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files your Bluetooth must be both **On**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your My stuff.

Changing your Bluetooth settings

- 1 From the home screen select  then scroll through **Bluetooth** in Settings tab.
- 2 Touch .

Make your changes to:

My device information - Enter a name for your KM900.

My device visibility - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

Remote SIM mode on - Activate the remote SIM mode.

iSync on - Choose to activate on iSync.

Supported services - Choose how to use Bluetooth in association with different services.

Delete - Choose to delete the selected profile.

Delete all - Choose to delete all profiles.

Pairing with another Bluetooth device

By pairing your KM900 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On**.
You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your KM900 will search for Bluetooth devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 The headset will be automatically switched to Headset profile.
- 4 Touch **Ask always** or **Allow without ask**.

TIP! See page 36 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

01

02

03

04

05

06

07

08

09

10

11

Wi-Fi

Wireless Manager allows you to manage Wi-Fi Internet on your device. It allows the phone to connect to local wireless networks, or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology.

NOTE: KM900 supports WEP, WPA encryption not EAP, WPS encryption. If your Wi-Fi service provider or network administrator sets the encryption for network security, you should fill in the key in the pop-up window. If the encryption is not set, this pop-up window is not shown. You can obtain the key from your Wi-Fi service provider or network administrator.

1. How to set up Wi-Fi

- 1 Wi-Fi On
- 2 AP (Access Point) Search
 - Searches which AP is available to be connected.
- 3 AP Connect
 - Connects to the desired AP in the AP search list.
 - If the AP is WEP security type, enter the security key.

2. Wi-Fi network profile support

- 1 Wi-Fi profile support (how to connect to frequently used AP or Hidden AP)
 - 1) If the AP does not appear in the search list, it is possible to connect to it by saving it as a profile.
 - 2) By saving the frequently used AP as a profile, it is easier to enter the Security key when connecting to the AP that has

the Security type.

- 3) If the AP does not support the DHCP, it is possible to connect to the AP by using the static IP.
- 2** Description of each field in the Wi-Fi profile.
 - 1) Network name: SSID (ID)
 - 2) Security type: WEP, WPA support.
 - 3) Security key: saves the security key.
 - 4) IP/DNS setting: this allows you to set to Automatic or Static depending on whether the AP supports DHCP.
For Static, enter the field value of the IP address and DNS server to use with the static IP address when connecting.

3 How to save the Wi-Fi profile

- 1) Select Saved networks from the Options menu, then select **New network** and enter values into each field.
- 2) It is possible to select and save the AP search list by selecting **Wi-Fi On** and then **Refresh** (Searching AP).
- 3) After connecting to an AP with this Security type, the profile will be saved automatically.

01

02

03

04

05

06

07

08

09

10

11

Phone Software update

LG Mobile Phone Software upgrade in web site

For more information and using this function,

Please visit LGmobile.com site

**path: <http://www.lgmobile.com>
- select country – Products menu
- Manual & software menu**

This Feature allows you to upgrade your software to the latest version and conveniently on the internet without needing to visit our service center.

As the mobile phone software upgrade requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or battery during the upgrade may seriously damage you mobile phone.

As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are available for purchase for use with your KM900.

Charger



Data cable and CD



Connect and synchronise your KM900 and PC.

Battery



Stereo headset



User Guide

Learn more about your KM900.



01

02

03

04

05

06

07

08

09

10

11

NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Network service

The wireless phone described in this guide is approved for use on the E-GSM 900, DCS 1800, GSM 850, PCS 1900 and WCDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

DivX VOD registration

Generate a DivX VOD registration code.

Please visit <<http://vod.divx.com/>> for registration and technical support.

Technical data

General

Product name : KM900

System : E-GSM 900 / DCS 1800 /
GSM 850 / PCS 1900 /
WCDMA

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)

Min : -10°C

“LG Service Center”

by **LG Electronics (Thailand) Co. Ltd.**

72/127 Somdetprachaw Taksin Rd.,
Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Fri and Sat 2nd,
4th 08:00 - 17:00

Call center : 0-2878-5757

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

KM900

Trade Name

LG



Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.6.1 / EN 301 489-7 V1.3.1 / EN 301 489-9 V1.3.1 / EN 301 489-17 V1.2.1 /
EN 301 489-19 V1.2.1 / EN 301 489-24 V1.3.1
EN 60950-1: 2001
EN 50360 / EN 50361: 2001
EN 301 511 V9.0.2 / EN 301 908-1 V3.2.1 / EN 301 908-2 V3.2.1
EN 300 328 V1.7.1
EN 301 357-1 V1.4.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoum, Ji / Director

8, January, 2009


Signature of representative

Trouble Shooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough Battery empty Battery contacts dirty	Press the On/Off key down for at least two seconds. Keep charger attached for a longer time. Clean the contacts.

Message	Possible causes	Possible Solutions
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
Phone loses network	Battery defective	Replace battery.
	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.

01

02

03

04

05

06

07

08

09

10

11



ใบอนุญาตเลขที่ ปณ.(ต)/2117 ปณจ.ไพระโชนง
ถ้าฝากส่งในประเทศไม่ต้องพินึกตราไปรษณียากร



บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

75/81 อาคารริมนอนด์ ชั้น 22 สุขุมวิท 26

แขวงคลองตัน เขตคลองเตย

กรุงเทพฯ 10110



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : ปีได้รับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน
นับจากวันที่ซื้อ
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)

ที่อยู่ร้าน :
(Dealer's Address)

ประทับตราร้านค้า



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)



<http://th.lg.co>

ศูนย์บริการลูกค้า

Customer Information Center 0-2878-5757

1-800- LG LG LG
5 4 5 4 5 4 InCall

บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด
75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26 คลองตัน
คลองเตย กรุงเทพฯ 10110
ศูนย์บริการข้อมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

LG Electronic (Thailand) CO., Ltd
75/81 Richmond Bldg. 22nd FL, Sukumvit 26,
Klongton, Klongtoey Bangkok 10110
Customer Information Center
Tel. 0-2878-5757 Fax. 0-2466-0250

เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น

(This warranty is valid only in Thailand)

- 1) บัควARRANTY 1 ปี นับแต่วันที่ยื่นชื่อ หรือบัตรรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น
- 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบหรือความผิดพลาดในการผลิต โดยมีได้เกิดการการ ใช้เครื่องผิดวิธี บริษัทฯ อันดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย
- 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.
- 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts.

เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับการแต่งตั้ง
- 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นี้ชำรุดเสียหาย
- 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้, ฟ้าผ่า, ใช้น้ำกระแฉ่ำฟ้าผิดประเภทและอุบัติเหตุอื่น ๆ ที่มนุษย์ไม่สามารถควบคุมได้
- 1) If repair are not undertaken by LG Service Center or Authorize Service Center.
- 2) Damage to accessory due to misuse.
- 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control.

ศูนย์บริการสากล (สำนักงานใหญ่): เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงมุดคโล เขตธนบุรี กรุงเทพฯ 10600 โทร 0-2878-5757 แฟกซ์ 0-2466-0250
ศูนย์บริการภูมิภาค: เลขที่ 75/2 อาคารริชมอนด์ สุขุมวิท 26 แขวงคลองตัน เขตคลองเตย กรุงเทพฯ 10110 โทร 0-2204-8889 แฟกซ์ 0-2260-8729
ศูนย์บริการเชียงใหม่: เลขที่ 250/5-6 ถ.เชียงใหม่-ลำปาง ต.ป่าตัน อ.เมือง จ.เชียงใหม่ 50300 โทร 0-5321-5823 แฟกซ์ 0-5341-2231
ศูนย์บริการพิษณุโลก: เลขที่ 210/9-11 ถ.มิตรภาพ ต.ในเมือง อ.เมือง จ.พิษณุโลก 65000 โทร 0-5528-0508 แฟกซ์ 0-5528-0509
ศูนย์บริการพินาศ: เลขที่ 42/95-96 ม.9 ต.สุขุมวิท ต.หนองปรือ อ.บางละมุง จ.ชลบุรี 20150 โทร 0-3848-8557 แฟกซ์ 0-3848-8578
ศูนย์บริการนครราชสีมา: เลขที่ 551/29-31 ถ.มิตรภาพ ต.ในเมือง อ.เมือง จ.นครราชสีมา 30000 โทร 0-4424-7304 แฟกซ์ 0-4424-7305
ศูนย์บริการหาดใหญ่: เลขที่ 291,291/1 ถ.นิพัทธ์ สงครามนอ 1 ต.หาดใหญ่ จ.สงขลา 90110 โทร 0-7423-1391 แฟกซ์ 0-7422-5476
ศูนย์บริการภูเก็ต: เลขที่ 74/252 ถ.พหลโยธิน ต.ตลาดเหนือ อ.เมือง จ.ภูเก็ต 83000 โทร 0-7624-6535 แฟกซ์ 0-7624-6536
ศูนย์บริการอุตรดิตถ์: เลขที่ 119/1-2 ม.14 ต.บึงคย ต.หมากแข้ง อ.เมือง จ.อุตรดิตถ์ 41000 โทร 0-4220-4757 แฟกซ์ 0-4232-2877

