



繁體中文
簡體中文
ENGLISH

KM900 使用手冊

KM900 使用手冊

LG ELECTRONICS INC.

P/N : MMB0333314 (1.2) H

CE 0168 

Bluetooth QD ID B014945



此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而有所不同,並不會另行通知。

KM900 使用手冊



恭喜您買了這款先進輕巧的 LG KM900 手機，
本手機專為利用最新的數碼流動通訊科技而設計。

設定	01
桌面	02
基本功能	03
自製功能	04
管理功能	05
網絡功能	06
設定	07
配件	08

內容

設定

了解您的手機	8
手機背面	10
安裝智能喆和電池	11
手機充電	13
記憶喆	14
功能表總覽	16

桌面

觸控屏幕提示	17
自訂桌面	18
快捷鍵	19
觸控屏幕	20
使用多項工作功能	24

基本功能

通話功能	25
撥打電話或視像通話	25
從通訊錄中撥打電話	25
接聽來電和拒接來電	25
通話中選項	26
調整通話音量	27
快速撥號	27
撥打其他電話	27
關閉 DTMF	28

使用來電轉接	29
使用通話限制	29
變更一般通話設定	30
變更視像通話設定	31
通訊錄	32
搜尋通訊錄	32
新增通訊錄	32
建立群組	33
變更通訊錄設定	34
檢視資訊	35
訊息	36
訊息	36
發送訊息	36
輸入文字	37
T9 模式	37
Abc 模式	37
設定電子郵件	38
透過新帳戶發送電子郵件	39
變更電子郵件設定	40
訊息資料夾	41
使用範本	41
使用情感圖示	42
變更文字訊息設定	42
變更多媒體訊息設定	43
變更其他設定	44

自製功能

相機.....	45
快速拍照	45
拍照後	46
了解取景器	47
使用閃光燈	48
調整曝光	48
連環拍攝	49
使用進階設定	49
變更圖像大小	51
選擇色彩效果	52
使用內相機	52
檢視已儲存照片	53
視像攝錄機.....	54
拍攝快速影片	54
拍攝影片後	55
了解取景器	56
調整曝光	57
使用進階設定	57
變更影片圖像大小	58
選擇色調	59
使用內視像攝錄機	59
觀看已儲存影片	60
在電視上觀看影片	60

照片及影片.....	61
檢視照片及影片	61
檢視影片或照片時使用縮放功能	61
檢視影片時調節音量	61
將照片設定為待機圖片	62
編輯照片	62
在相片中加入文字	64
在相片中加入效果	64
剪裁相片	64
強化相片色彩	65
轉換相片中的色彩	65
編輯影片	66
裁剪影片長度	66
合併兩段影片	66
合併照片和影片	67
在影片中加入文字	67
覆蓋照片	68
在影片中加入原聲帶	69
在影片中新增現場配音	69
變更影片速度	70
新增變暗效果	70
多媒體.....	71
圖片	71
我的圖像選項功能表	71
發送照片	71

內容

使用圖像	72	播放歌曲	79
列印圖像	72	建立播放列表	79
移動或複製圖像	73	刪除播放列表	80
建立投影片播放	73	使用收音機	80
智能影像定位	73	搜尋電台	80
檢查記憶體狀態	73	重設頻道	81
聲音	74	收聽電台	81
使用聲音	74		
影片	74	管理功能	
發送錄像片段	75	記事簿	82
遊戲和應用程式	75	新增事件至日曆	82
玩遊戲	75	變更預設日曆檢視	82
使用選項功能表	75	新增項目至待辦事項清單	83
安裝 Java 遊戲及應用程式	75	使用日期搜尋器	83
使用 M-Toy 功能表	76	設定鬧鐘	84
Flash 內容	76	新增備忘錄	84
檢視 SWF/ SVG 檔案	76	語音備忘錄	85
文件	76	錄製聲音或語音	85
檢視檔案	76	發送錄音	85
傳送檔案到手機	76	使用計算機	86
其他	77	轉換單位	86
製作電影	77	使用秒錶	86
音樂	78	新增城市至世界時鐘	87
將音樂傳送至手機	78		

電腦同步.....	88
在電腦上安裝 LG PC Suit	88
連接手機和電腦.....	89
備份和還原手機資訊.....	89
檢視電腦上的手機檔案.....	89
同步處理通訊錄.....	90
同步訊息.....	90
音樂同步.....	90
使用 Windows Media Player	
傳輸音樂.....	91
使用 iSync.....	91
DivX 轉換器.....	92

網絡功能

瀏覽器.....	93
存取網絡.....	93
新增並存取書籤.....	93
使用 RSS 讀取裝置.....	94
存取已儲存的網頁.....	94
檢視瀏覽器記錄.....	94
變更網頁瀏覽器設定.....	95
將手機用作數據機.....	95
存取 Google 地圖.....	96

設定

變更屏幕設定.....	97
個人化情景模式.....	97
變更手機設定.....	98
更換觸控設定.....	99
變更連接設定.....	99
使用記憶體管理.....	101
使用飛航模式.....	102
使用藍芽收發檔案.....	102
變更您的藍芽設定.....	103
同其他藍芽裝置配對.....	104
使用藍芽耳機.....	104

Wi-Fi.....	105
------------	-----

軟件更新.....	107
-----------	-----

配件	108
-----------------	------------

網絡服務	109
-------------------	------------

技術數據	109
-------------------	------------

索引

安全及有效使用準則.....	111
故障排解.....	117

了解您的手機

電池蓋按鈕

免提或立體聲耳機插孔

電源鍵

開啟/關閉手機。

耳機

感應器

內鏡頭


結束鍵

- 拒接來電。
- 按一下可返回桌面。

多項工作鍵

通話鍵

撥打電號碼及接聽來電。

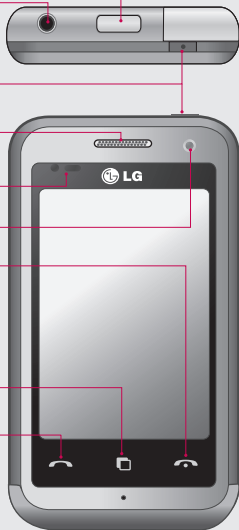

⚠ 警告：若將較重物體置於手機上或坐在手機上會損壞手機屏幕和觸控屏幕的功能。請勿將保護貼在屏幕的感應器上。否則會導致感應器出現故障。



充電器、數據線 (USB
線)

提示：連接 USB
線之前，請先開機
並確保連接到網
絡。



音量鍵

- 屏幕處於備用狀態時：按鍵音音量。
- 通話中：耳機音量。
- 播放曲目時：控制音量。

相機鍵

- 長按此鍵轉至相機。

01

02

03

04

05

06

07

08

手機背面



安裝智能咭和電池

1 取下電池蓋

按住手機頂部的電池蓋按鍵並提起電池蓋。



2 取下電池

提起電池邊緣，將電池從電池盒中取出。



警告： 手機開機時，不要取下電池，因為這樣會損壞手機。

警告： 請勿在使用 GPS、Wi-Fi 或藍芽的時候取下電池蓋。因為電池蓋上裝有天线。

01

02

03

04

05

06


07

08

安裝智能咭和電池

3 安裝智能咭

將智能咭滑入智能咭插槽。。請確保智能咭上的金屬接觸區面向下方。要取下智能咭，請向外輕輕推出。

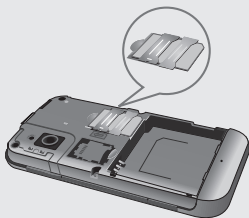

4 安裝電池


首先，請將電池頂部插入電池格上方邊緣。請確保電池觸點對準手機觸點。將電池的底部壓入到位。



手機充電

滑動 KM900 側面的充電器插孔蓋。插入充電器並插入電源插座。您必須為 KM900 手機充電，直至屏幕上顯示“電池電量已滿”訊息。

注意：首次充電時必須確保手機充滿電，以提高電池壽命。請忽略第一次充電時顯示的“電池電量已滿”訊息，並繼續為手機充電一個晚上（或 14 小時以上）。

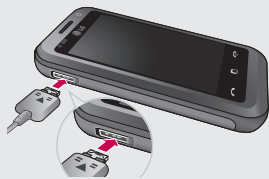

01

02

03

04

05

06

07

08

記憶咭





安裝記憶咭

您可以透過使用記憶咭來擴展手機的可用記憶體空間。

注意： 記憶咭是選購配件。

將記憶咭放入插槽，直到卡緊為止。請如圖指示。


⚠ 警告： 請將記憶咭滑入插槽中，以防損壞。

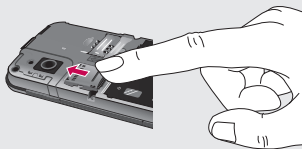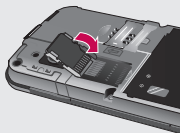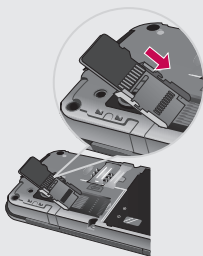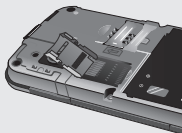

格式化記憶咭

您的記憶咭可能已格式化了。如果尚未格式化，則需要在使用記憶咭之前進行格式化。


注意：格式化時會刪除全部檔案。

- 1 從桌面選擇 ，然後從「設定」標籤中選擇**手機設定**。
- 2 捲動並點按**記憶體管理**，然後捲動並選擇**外置記憶體**。
- 3 點按**格式化**並確認您的選擇。
- 4 如果設定了密碼，請輸入密碼。記憶咭將被格式化並隨時可供使用。

注意：若記憶咭中包含內容，格式化記憶咭之後其中的資料夾結構會發生變化，因為全部檔案將被刪除。

複製通訊錄

將通訊錄從智能咭複製到手機：

- 1 從「通訊」標籤中，捲動至**通訊錄**並選擇 ，然後選擇**變更位置**。
- 2 點按**複製至手機記憶**。
- 3 選擇全部或依次序選擇名稱並點按**複製至手機記憶**。

01

02

03

04


05

06

07

08

功能表總覽

在桌面中點按 ，開啟**頂部功能表**。透過在**通訊**、**多媒體**、**實用工具**和**設定**之間選擇，您可在此存取下一級功能表。

通訊

-  通訊錄
-  最近記錄
-  瀏覽器
-  訊息
-  電子郵件
-  撥號
-  視像通話
-  Google

多媒體

-  音樂
-  相機
-  視像攝錄機
-  圖片集
-  我的檔案
-  遊戲及應用程式
-  FM 收音機
-  影片製作

實用工具

-  鬧鐘
-  記事簿
-  備忘錄
-  秒錶
-  語音備忘錄
-  計算機
-  世界時鐘
-  工具

設定

-  情景模式
-  顯示設定
-  手機設定
-  藍芽
-  Wi-Fi
-  通話設定
-  連接
-  訊息設定

桌面

您可以透過此屏幕存取各種功能表選項、撥打電話、檢視手機狀態及更多内容。

觸控屏幕提示

桌面亦是熟悉觸控屏幕的最佳位置。

要選擇某個項目，請點按圖示中央。

- 點按觸控屏幕時不需要重按，只需要輕輕按一下即可。
- 使用指尖點按所需的選項。小心不要按任何其他鍵。
- 當屏幕燈關閉時，輕按電源鍵再按住桌面的解鎖可返回鍵可返回桌面。
- 未使用 KM900 時，會返回到鎖定屏幕。

01

02

03

04

05

06


07

08

桌面

自訂桌面

- 1 捷徑主屏幕
- 2 Widget 主屏幕 (啟用)
- 3 通訊錄主屏幕
- 4 多媒體主屏幕

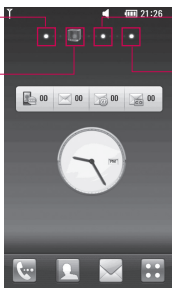


- **進入 KM900** - 用戶界面基於四種類型的桌面。要在不同桌面之間交換，只需在顯示屏上從左到右或從右到左快速點按。
- **設定最愛** - 您可以透過按住屏幕為各種類型的桌面新增或移除物件，若已新增物件，則可透過按住其中某個物件進行刪除。




快捷鍵

桌面上的快捷鍵提供簡單、單觸式操作存取最常用的功能。



點按以顯示觸控撥號盤，以撥打電話。使用標準按鍵輸入號碼，然後點按**語音通話**或點按 。

要向此號碼撥打視像通話，請在輸入號碼之後點按  標籤。



點按開啟通訊錄。若要搜尋撥號號碼：請使用觸控板輸入聯絡人名稱。您亦可以新增通訊錄或編輯現有通訊錄。



點按以存取**訊息**功能表。您可從此處建立訊息。



點按以開啟完整的「頂部」功能表，此功能表分為四個類別。

01

02

03

04

05

06

07

08

桌面

觸控屏幕

KM900 觸控屏幕上的控制會根據執行的任務動態變化。

開啟應用程式

要開啟任何應用程式，只需點按此應用程式的圖示。




捲動

左右拖動即可捲動。在一些屏幕（例如網頁）上，您還可以上下捲動。



縮放

檢視照片、網頁、電郵或地圖時，您可以進行縮放。在屏幕上將兩個手指靠攏或分開即可進行縮放。

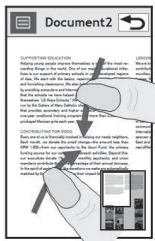

01

02

03

04

05

06

07

08

桌面

檢視狀態列



狀態列使用不同的圖式顯示各種狀況，例如訊號強度、新訊息和電池壽命，以及藍芽或數據連結是否啟用。

下表說明可能在狀態列中看到的圖示的含義。

圖示	說明
	無服務
	2G
	3G
	EDGE
	HSDPA
	Wi-Fi 已開啟
	藍芽訊息
	藍芽單聲道免提耳機
	藍芽單聲道立體聲耳機
	藍芽立體聲耳機
	藍芽單聲道耳機
	藍芽已開啟

圖示	說明
	藍芽打印機
	藍芽傳輸
	藍芽可見性
	藍芽音樂
	下載中
	下載完成。
	下載已取消。
	通話中選項
	互聯網
	正在搜尋
	來電轉駁
	拒接來電
	安全
	耳機
	本國時區
	漫遊
	鬧鐘
	日程表 (行事曆)
	多項工作

圖示	說明
	音樂已暫停
	音樂播放中
	FM 收音機播放中
	電子郵件已發送
	接收到電子郵件
	多媒體訊息
	多媒體訊息發送中
	接收到多媒體訊息
	短訊發送中
	新留言
	新訊息
	訊息發送失敗
	新電郵
	Push 訊息
	飛航模式
	戶外
	靜音
	自訂鈴聲 1-10
	外置記憶體

圖示	說明
	電池狀態
	電視輸出

01

02

03

04

05

06

07

08

桌面

使用多項工作功能

在執行應用程式時按住多項工作鍵

 以開啟多重任務列表。




在此可檢視到一般應用程式，有的正在執行中，並可透過點按選擇其他以進行操作。






通話功能

提示! 輕按一下電源鍵，觸控屏幕就會鎖定，以防不小心進行撥號


撥打電話或視像通話

- 1 點按  開啟按鍵。
- 2 在按鍵上輸入號碼。要刪除數字，請按清除鍵。
- 3 點按  鍵撥打電話。
- 4 要結束通話，請點按  鍵。


提示! 若要輸入「+」以撥打國際電話，請點按兩下 ，或按住 。

提示! 透過點按 ，您可儲存號碼、發送訊息，搜尋通訊錄。

從通訊錄中撥打電話

- 1 從桌面點按  開啟通訊錄。
- 2 在通訊錄中捲動或透過點按  輸入您要與其通話的聯絡人的名字。
- 3 從清單中，點按您要與其通話的聯絡人並選擇要撥打的號碼，如果此聯絡人存在多個電話。
- 4 點按 **語音通話** 或 **視像通話**。

接聽來電和拒接來電

手機響鈴後，按  硬鍵接聽來電。

按  硬鍵兩次拒絕來電。

01

02

03

04

05

06

07

08

通話功能

通話中選項



The screenshot shows an in-call screen with a timer at 00:00:04 and a contact named 'Unnamed' with the number 000-111-2222. The top navigation bar includes icons for menu, end call, mute, and speaker. The bottom navigation bar includes icons for call log, memo, and speed dial. Red lines connect these icons to their respective descriptions on the right.

揚聲器 - 點按  以開啟揚聲器。

靜音 - 點按  以關閉麥克風，這樣，通話對方就聽不到您的聲音。

保留 - 點按  以保留通話。

選項 - 從下一級通話選項清單中進行選擇，包括建立新備忘錄和轉至訊息，這樣您就可以在通話中查看訊息並新增通訊錄。您也可點按結束通話，從此處結束通話。

 - 點按以開啟數字按鍵並輸入數字，例如撥打緊急求救號碼或其他自動化電話服務。

 - 在通話期間新增備忘錄。


 - 在通話期間搜尋通訊錄。


調整通話音量

若要在通話中調節音量大小，請使用手機右側的上下按鈕。




快速撥號

您可為常撥聯絡人指定一個快速撥號號碼。

- 1 從桌面點按  開啟**通訊錄**。
- 2 點按  並選擇**快速撥號**。
- 3 您的語音信箱已經設定至快速撥號 1。您無法變更此設定。點按任何其他號碼，為其指定快速撥號聯絡人。
- 4 將開啟聯絡人清單。透過點按一下相應的電話號碼，選擇要指定給此號碼的聯絡人。

若要撥打快速撥號號碼，請從桌面點按 ，然後按住指定的號碼，直至聯絡人顯示在屏幕上。通話將自動啟動，無需點按**語音通話**。

撥打其他電話

- 1 初始通話中，點按  並選擇要通話的號碼。
- 2 撥號或搜尋通訊錄（詳情請參閱第 25 頁的**撥打電話**）。
- 3 按  連接通話。
- 4 兩個通話均將顯示於通話屏幕上。初始通話將被鎖定並保留。
- 5 要結束一個或兩個通話，按  **結束**。

01

02

03

04

05

06

07

08


通話功能



注意：您需為撥打的每個電話付費。

關閉 DTMF

透過 DTMF，您可以使用數字指令在自動化通話中進行導覽。DTMF 預設為開啟。

若要在通話期間關閉 DTMF（例如記下號碼），請點按  並選擇**停用 DTMF**。

檢視通話記錄

從桌面點按 ，然後點按「通訊」標籤中的最近記錄。

選擇以下選項：


所有通話記錄 - 檢視全部已撥通話、已接來電和未接來電、僅語音通話、視像通話和訊息的完整清單。

未接來電 - 檢視所有未接來電的清單。

所有記錄 - 檢視所有已接來電和未接來電的清單。


只限視像通話 - 檢視所有視像通話的清單。

只限通話 - 檢視所有通話的清單。

提示！ 從任何通話記錄點按  和**刪除全部**，刪除全部記錄項目。

提示！ 點按任何單個通話記錄項目，檢視通話的日期、時間和長度。


使用來電轉接

- 1 點按  並從「設定」標籤中選擇**通話設定**。
- 2 點按**來電轉駁**，並選擇**語音通話**和/或**視像通話**。
- 3 可選擇全部語音/視像通話、線路繁忙時、無人接聽時或無法接通時。
- 4 點按啟動予以啟用。
- 5 輸入要轉駁到的號碼。

注意：轉駁通話需要付費。請聯絡網絡商了解詳情。

提示！ 要關閉所有來電轉駁，請從**來電轉駁**功能表選擇**停用全部**。

使用通話限制

- 1 點按  並從「設定」標籤中選擇**通話設定**。
- 2 點按**通話限制**，並選擇**語音通話**和/或**視像通話**。
- 3 選擇以下五個選項的任何一個或全部：
所有撥出的通話
國際通話撥號
本地以外的國際撥號
所有來電
國際漫遊時來電
- 4 輸入通話限制密碼。請向您的網絡商查詢這項服務。

01

02

03

04

05

06


07

08

通話功能

提示! 選擇**固定撥號號碼**，開啟並編譯可從此手機撥出的號碼清單。需要使用 PIN2 碼，您可以向網絡商索取此 PIN2 碼。僅固定撥號清單內的號碼可從手機撥出。

變更一般通話設定

- 1 點按  並從「設定」標籤中選擇**通話設定**。
- 2 點按**通用設定**。您可透過此選項變更以下設定：

來電拒接 - 點按以開關。您可以點按**拒接列表**選擇所有通話、通訊錄、群組或無名稱記錄（即不在通訊錄中的號碼）中選擇。

發送我的號碼 - 選擇是否在撥出通話中顯示您的號碼。


自動重撥 - 點按以開關。

分鐘提示 - 點按以開關。這樣您便可在通話時聽到分鐘提示音。

藍芽接聽模式 - 選擇**免提**，可使用藍芽耳機接聽來電，或選擇**手機**，透過按手機上的按鍵接聽來電。

儲存新號碼 - 選擇**開啟**或**關閉**以儲存新號碼。

變更視像通話設定

- 1 從桌面點按 ，然後捲動至「設定」標籤中的 **通話設定**。
- 2 點按 **視像通話設定** 並從視像通話中選擇相應設定。決定是否使用私人圖像，選擇一個圖像並/或在視像通話撥號時開啟鏡像，以便在屏幕上看到您自己的圖像。

01

02

03

04

05

06

07




08

通訊錄

搜尋通訊錄



有兩種方法可搜尋通訊錄：

從桌面



- 1 從桌面點按  開啟**通訊錄**。
點按  並使用按鍵輸入聯絡人名稱。
- 2 點按**視像通話**或**語音通話**或  鍵進行通話。

提示！ 您可以透過點按屏幕頂端的「通訊錄」標籤並選擇**群組**來按群組搜尋。此操作將顯示所有群組清單。

從主功能表

- 1 點按 ，然後點按「通訊」標籤上的**通訊錄**。
- 2 點按  和**搜尋**。

新增通訊錄

- 1 從桌面點按 ，選擇 ，然後點按**新增通訊錄**按鍵。
- 2 選擇將通訊錄儲存到**手機**或**智能咭**。
- 3 若要為新聯絡人新增圖片，點按**新增圖片**。
- 4 輸入新聯絡人的名字和姓氏。您不必同時輸入名字和姓氏，但必須輸入其中一項。
- 5 最多輸入五個不同的號碼並為每個號碼指定一個類型，可在**手機、家庭、辦公室、傳呼機或傳真**之間選擇。
- 6 新增電郵地址。
- 7 將聯絡人指定給一個群組，從以下選項中選擇：**無群組、家庭、朋友、同事、學校或重要人士**。

8 您亦可新增鈴聲、主頁、住宅地址、公司名稱、職位、公司地址、生日、週年紀念和備忘錄。

9 點按  儲存通訊錄。

提示！ 您可以為通訊錄建立自訂群組。請參閱建立群組。

建立群組

1 從桌面點按 ，然後點按「通訊」標籤中的通訊錄。

2 點按屏幕頂端的「通訊錄」，然後點按群組並選擇新群組。

3 為新群組輸入一個名稱。

4 點按  儲存該群組。

注意：若要刪除某群組，指定給該群組的聯絡人將不會遺失。這些聯絡人仍保留在您的通訊錄中。

提示！ 您可以透過點按一下已選定的群組來編輯現有群組。選擇檢視成員、編輯群組、發送訊息、發送名片或刪除群組。

01

02

03

04

05

06


07

08

通訊錄

變更通訊錄設定

您可對通訊錄設定進行調整，以便符合您的個人偏好。


- 1 點按「通訊」標籤上的**通訊錄**，選擇  並捲動至**通訊錄設定**。
- 2 您可從此處對以下設定進行調整：
 - 顯示名稱** - 選擇是先顯示聯絡人的名字還是姓氏。
 - 複製全部** - 在智能咭和手機之間複製通訊錄。

移動全部 - 此操作與「複製」操作一樣，但聯絡人僅會儲存於新的位置。因此，如果您將一個聯絡人從智能咭移動至手機，它將從智能咭記憶體中刪除。

清除通訊錄資料 - 刪除您所有的聯絡人。若確定要刪除所有聯絡人，請點按**是**。

記憶體資訊 - 檢視通訊錄記憶體容量。

檢視資訊

- 1 點按「通訊」標籤中的**通訊錄**，選擇  並點按**資訊**。
- 2 您可在此檢視**服務撥號號碼**、**本手機號碼**、**記憶體資訊**（記憶體剩餘空間）和**我的名片**。

提示！ 若要新增個人名片，請選擇**我的名片**並輸入要為聯絡人提供的任何詳情。點按**儲存**圖示完成操作。

01

02

03

04

05

06

07

08

訊息


訊息

KM900 手機將短訊和多媒體訊息集合在一個的功能表中，使用起來方便簡單。


您可以透過以下兩種方法進入訊息中心：

- 1 從桌面點按  或 ，然後捲動至「通訊」標籤上的**訊息**。

發送訊息

- 1 點按 ，然後點按**編寫訊息**開啟一則空白訊息。
- 2 點按**收件者**以輸入收件者號碼，或開啟您的通訊錄或最愛。您可以新增多個聯絡人。完成後，點按以下訊息方塊開始編寫訊息文字。
- 3 輸入文字後，您可以透過點按訊息頂端的發送文字訊息按鍵發送。

提示！ 您將按收件者每則文字訊息 160 字元計費。

- 4 點按  附加新增文字範本、多媒體範本、情感圖示、名稱及號碼，新增投影片、標題或簽名。


警告： 160 字元限制可能因國家/地區而有所不同，具體情況視乎短訊的編碼方式。


警告： 若向短訊中新增了圖像、影片或聲音檔，它將自動轉換為多媒體訊息，而您亦需為此支付相應費用。


輸入文字

 點按開啟 T9 預測文字。


 點按變更寫入語言。

 點按以在數字、符號和文字
按鍵之間變換。

使用  捲動每種文字輸入模式
中的不同鍵盤類型（例如大寫或
小寫）。

若要輸入空格，請點按 。

T9 模式

在 T9 模式下，您將看到 。

T9 模式使用內置字典，根據按鍵
點按順序識別寫入的單字。只需
點按與要輸入字母關聯的數字按
鍵，字典便可預測要使用的單字。

例如，按 8、3、5、3、7、4、6、
6、3 可得到「telephone」。

Abc 模式

在 Abc 模式下，您必須重複點按
按鍵，才能輸入字母。例如，要
寫入「hello」，請點按 4 兩次、
3 兩次、5 三次、5 又三次，然後
按 6 三次。

01

02

03

04

05

06


07

08

訊息

設定電子郵件

縱使出門在外，您亦可使用 KM900 上的電子郵件功能與其他入保持聯絡。設定 POP3 或 IMAP4 電子郵件帳戶簡單方便。

- 1 從桌面點按 ，然後捲動至「通訊」標籤上的**電子郵件**。
- 2 點按**撰寫電郵**。如果尚未設定電子郵件帳戶，請開始電子郵件設定精靈。

提示! 如果已經設定電子郵件帳戶，將不會自動啟用電子郵件設定精靈。

- 3 現在，您可以遵循此精靈進行設定：
您還可以編輯**設定 > 訊息設定 > 電子郵件 > 電子郵件帳戶**中的特定帳戶設定。這些設定如下：

標題 - 為此帳戶輸入一個名稱。

用戶名稱 - 輸入帳戶的用戶名稱。

密碼 - 輸入帳戶的密碼。

我的名字 - 輸入您的名字

電子郵件地址 - 輸入帳戶電郵地址。

回覆電郵地址 - 輸入「回覆」的電郵地址。

外寄郵件伺服器 - 輸入外寄郵件伺服器位址。

內送郵件伺服器 - 輸入內送郵件伺服器位址。

最大接收大小 - 選擇電郵大小限制，最大大小為 1 MB。

電郵信箱類型 - 輸入郵箱類型，即 POP3 或 IMAP4。

儲存至伺服器 - 選擇是否將您的電郵儲存到伺服器。對於 IMAP4 帳戶，副本始終得以儲存。

儲存已發送的郵件至 - 選擇已發送郵件的儲存位置（針對 IMAP4 郵箱）。對於 POP3 郵箱，已發送郵件始終會儲存於手機上。


下載選項 - 選擇電郵下載方式。從以下選項中選擇：僅限標頭或全部（包括正文）（針對 POP3）；僅限標頭、標頭 + 正文或全部（針對 IMAP4）。

存取點 - 選擇您的互聯網存取點。

進階設定 - 選擇是否要使用進階設定。

完成帳戶設定后，該帳戶將出現在電子郵件資料夾的帳戶清單當中。

透過新帳戶發送電子郵件

- 1 從桌面點按 ，然後捲動至「通訊」標籤上的**電子郵件**以開啟一則新的空白訊息。
- 2 輸入收件者地址，然後編寫您的訊息。您還可以附加圖像、影片、聲音檔和其他檔案類型。
- 3 點按**發送電子郵件**發送電子郵件。

提示! 在啟用 Wi-Fi 連接期間，會透過 Wi-Fi 收發電子郵件。

01

02

03

04

05

06

07

08

訊息

變更電子郵件設定

您可根據個人偏好變更電子郵件設定。

1 從桌面點按 ，然後捲動至「設定」標籤中的**訊息設定**。

2 選擇**電子郵件**。

3 您可變更以下設定：

電子郵件帳戶 - 管理您的電子郵件帳戶。

允許回覆電郵 - 選擇是否允許發送讀取確認訊息。

請求回覆電郵 - 選擇是否請求讀取確認訊息。

擷取時隔 - 選擇 KM900 查收新電子郵件訊息的頻率。

轉寄與回覆時加入原始訊息 - 選擇是否在任何回覆中加入原始訊息。

包括附件 - 選擇是否在任何回覆中加入原始附件。

在漫遊時自動擷取 - 選擇是否在出國（漫遊）時自動擷取訊息。

新增電郵通告資訊 - 選擇是否透過快顯訊息獲得新電郵通知。

簽名 - 建立電郵簽名並啟用此功能。

訊息資料夾

您可輕鬆辨識用於 KM900 的資料夾結構。如果您設定了電子郵件帳戶，可以為每個帳戶設定資料夾。

收件匣 - 您收到的全部訊息都儲存於收件匣中。您可在此檢視並刪除訊息，以及執行其他功能。

寄件匣 - 這裡是發送中的訊息之臨時存放資料夾。

已發送 - 發送的訊息會儲存於此資料夾中。

草稿 - 如果您未能完成訊息編寫，可將寫完的部分儲存於此處。

線程方塊 - 訊息透過 Messenger 與另一方交換。您可以同時儲存圖像和訊息。

我的資料夾 - 建立資料夾，儲存您的訊息。

使用範本

為您最常發送的短訊及多媒體訊息建立範本。手機中已存有部分範本，您可對其進行編輯。

- 1 編寫新訊息時，您可以從選項功能表的附加中輸入範本。
- 2 選擇**文字範本**或**多媒體範本**。您可以新增、編輯、刪除或刪除全部範本。要編輯訊息，請選擇此訊息並進行修改，然後點按**儲存範本**。

01

02

03

04

05

06

07

08

訊息

使用情感圖示

情感圖示令您的訊息更添生氣。手機上已存有一些常用的表情圖示。

- 1 編寫新訊息時，您可以從選項功能表的附加中輸入情感圖示。
- 2 您可以透過點按**新表情圖示**新增表情圖示。

變更文字訊息設定

您的 KM900 已預先定義訊息設定，以便您可立即發送訊息。您可根據個人偏好變更這些設定。捲動至「設定」標籤上的**訊息設定**並點按**文字訊息**。您可變更以下設定：

文字訊息中心 - 輸入訊息中心的詳細資料。

發送報告 - 點按以開關以便在訊息發送後接收確認訊息。

有效時期 - 選擇訊息在訊息中心的儲存時間。

訊息類型 - 將您的文字轉換為**語音**、**傳真**、**X.400** 或**電子郵件**。

字元編碼 - 選擇字元的編碼方式。這將影響到您的訊息大小，進而影響數據費用。

發送長文字時設為 - 選擇以多個文字訊息或以多媒體訊息的方式發送長訊息。

變更多媒體訊息設定

您的 KM900 已預先定義訊息設定，以便您可立即發送訊息。您可根據個人偏好變更這些設定。

在**設定**標籤中，選擇**訊息設定**，然後選擇**多媒體訊息**。您可變更以下設定：

接收模式 - 選擇**本地網絡**或**漫遊網絡**。若您選擇「手動」，將只會收到有關多媒體訊息的通知。之後，您可以確定是否完整下載多媒體訊息。

注意：在漫遊時下載多媒體訊息可能會收取額外費用。

發送報告 - 選擇是否允許及/或請求發送報告。

閱讀回覆 - 選擇是否允許及/或發送閱讀回覆。

重要性 - 選擇多媒體訊息的優先等級。

有效時期 - 選擇訊息儲存在訊息中心的時間。

投影片播放時間 - 選擇投影片在屏幕上的顯示時間。

發送時間 - 選擇隔多久發送訊息。

多媒體訊息中心 - 輸入訊息中心的詳細資料。

01

02

03

04

05

06


07

08

訊息

變更其他設定

捲動至「設定」標籤上的**訊息設定**並執行以下操作：

留言信箱 - 點按**新增設定檔**或  新增語音信箱服務。聯絡網絡商，了解他們所提供的服務的更多詳情。

服務訊息 - 選擇要接收還是阻止服務訊息。您還可以透過建立受信任和不受信任寄件者列表來設定訊息安全級別。

資訊服務 - 選擇您的區域廣播、頻道及語言。

相機

快速拍照

- 1 按下手機右側的相機鍵。
- 2 水平握住手機，將鏡頭對準拍照對象。
- 3 輕按拍攝按鍵，對焦方塊會顯示在取景器屏幕的中央。
- 4 定位手機，以便您在對焦方塊中看到拍照的對象。
- 5 當對焦方塊變綠，則表示相機對焦完成。
- 6 按住拍攝按鍵。

提示！ 人面追蹤

此功能可自動偵測並對準人的面部，協助您拍攝較清晰的圖片。

01

02

03

04

05

06


07

08

相機

拍照後

您的拍攝照片會顯示在屏幕上。圖像名稱以及四個圖示會顯示在右側。

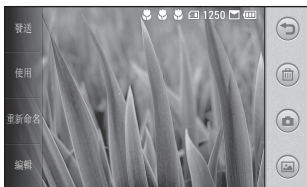


發送 點按以 **訊息、電子郵件、藍芽**或 **Blogger** 發送相片。請參閱第 36 頁了解如何發送訊息，並參閱第 102 頁了解如何使用藍芽發送和接收檔案。

注意： 在漫遊時下載多媒體訊息可能會收取額外費用。


使用 點按以將圖像用作牆紙。

重新命名 點按以編輯選定圖片的名稱。

編輯 點按以使用不同工具編輯圖像。


 點按返回至前一個功能表。

 點按刪除圖像。

 點按立即拍攝相片。當前相片將會被儲存。

 點按以檢視已儲存的相片集。

了解取景器

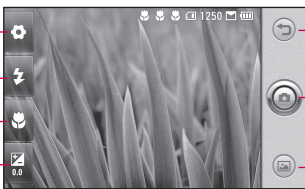

返回 - 點按此處以返回到功能表地圖。

相機模式 - 顯示相機處於相機模式，還可進行拍照。

圖片集 - 點按此圖示以檢視圖片集。

曝光 - 請參閱第 48 頁的「調整曝光」。

微距 - 開啟以便近距離拍照。

閃光燈狀態 - 將閃光燈模式設定為自動、永遠關閉或常開。

設定 - 點按此圖示，開啟設定功能表。請參閱第 49 頁的「使用進階設定」，了解詳情。

提示！ 您可以關閉所有捷徑選項，以獲取更清晰的取景器屏幕。只需要點按一下取景器中央。要再調校選項，請再按一下屏幕。

01

02

03

04

05

06


07

08

相機

使用閃光燈

預設閃光燈設定為自動，但還有其他選項。

1 從取景器左側選擇  以進入閃光燈子功能表。

2 存在以下三個閃光燈選項：

自動 - 相機會評估所需的光線，以便獲取較好的拍攝效果，並在必要時使用閃光燈。

永遠關閉 - 相機永遠不會使用閃光燈。此選項對於節省電力將十分有用。

常開 - 相機始終都會使用閃光燈。



3 點按想要的選項之後，閃光燈功能表將自動關閉，以便您立即拍照。

4 取景器中的閃光燈狀態圖示會隨著新的閃光燈模式變化。


調整曝光

曝光定義圖像在有光和黑暗部分中的區別。低對比度會將圖像顯示得較模糊，而高對比度會將圖像顯示得較清晰。

1 點按 。

2 將對比度指示符沿列向  滑動，曝光度將減低，獲得的圖像較模糊，向  滑動，曝光度將升高，獲得的圖像較清晰。

連環拍攝

- 1 從取景器中，點按  以開啟所有進階設定選項並選擇**連環拍攝**。
- 2 在取景器中定位對象並於要拍攝標準相片時，按拍攝按鈕。
- 3 相機將以快速連續的方式拍攝張照片。

使用進階設定

從取景器中，點按  以開啟所有進階設定選項。

您可以透過捲動滾輪變更相機設定。選擇所需選項後，請點按 OK 按鈕。

切換至 - 若要為自己拍照，請切換到 LG KM900 對內鏡頭。您也可以
在相機模式和視像攝錄機模式之間切換。

圖像大小 - 變更相片大小以節省記憶體空間或為通訊錄拍攝一張。合適大小的相片。請參閱第 51 頁的**變更圖像大小**。

色彩效果 - 選擇要在新相片中使用的色調。請參閱第 52 頁的**選擇色彩效果**。

白平衡 - 從**自動**、**白熱光**、**陽光**、**日光燈**或**陰天**中進行選擇。

01

02

03

04

05

06

07

08

相機

計時器 - 自拍時計讓您設定按拍攝按鍵後的延遲時間。可供選擇的選項為：**關閉**、**3 秒**、**5 秒**或**10 秒**。如果您想在拍照時讓自己一起留影，此功能十分有用。

拍攝模式 - 選擇連環拍攝模式。

ISO - ISO 等級決定相機閃光燈感應器的敏感度。ISO 越高，相機感光性越好。當您在光線較暗環境下拍照且無法使用閃光燈時，此功能非常有用。從以下選項中選擇 ISO 值：**自動**、**100**、**200**、**400**和**800**。

圖像質量 - 在**特細緻**、**細緻**及**標準**之間選擇。質素越細緻，相片越清晰。因此，相片佔用的檔案大小會增大，記憶體中儲存的相片數量就會相應減少。

記憶體使用裝置 - 選擇是將照片儲存至手機記憶體還是外置記憶體。

隱藏圖示 - 選擇手動或自動隱藏照相機設定圖示。

防手震 - 可讓您在相機穩定或減少震動的情況下拍照。

自動對焦 - 選擇相機對焦的方式。可對點、手動和人面追蹤之間選擇。

快門聲 - 從四種快門聲中選擇一種。

多格子檢視 - 可在**關閉**、**2x2 格子**或**3x3 格子**之間選擇。

智能影像定位 - **開啟/關閉**

重新設定 - 還原全部相機預設設定。

提示！ 結束相機時，所有設定將返回至預設情況。需要重新設定任何非預設設定，例如色調和 ISO。拍攝下一張照片前，需要進行檢查。

提示！ 設定功能表會加在取景器上，這樣，當變更圖像色彩或質素要素時，您將能夠在設定功能表後面查看到圖像變更後的預覽效果。

變更圖像大小

像素越高，檔案越大，從而佔據的記憶體空間便越多。若您想要在手機上儲存更多圖片，可以變更解像度來縮小檔案。

- 1 使用取景器，點按左上角的



- 2 從預覽功能表中選擇**圖像大小**。

- 3 選擇以下選項（5M：
2560x1920、3M：2048x1536、
2M：1600x1200、1M：
1280x960、640x480、320x240）
中選擇像素值或選擇其他大小。

01

02

03

04

05

06

07

08

相機


選擇色彩效果


- 1 使用取景器，點按左上角的 。
- 2 從預覽功能表中選擇**色彩效果**。
- 3 有五種選項：**關閉、深褐色、黑白、負片、浮雕**。
- 4 完成選擇後，可透過選擇「OK」關閉色調功能表。然後您就可以準備拍照了。


提示！ 您可將拍攝的彩色照片顏色變更為黑白，但您無法將黑白色照片變為彩色。

使用內相機


LG KM900 配備 640x480 對內相機，支援視像通話和拍照功能。

- 1 若要切換至對內相機，請點按 ，然後從預覽功能表中選擇**切換至對內鏡頭**。
- 2 幾秒鐘後，您將看到您自己顯示在取景器中。要拍攝圖像，請以標準方式按下側面的拍攝按鍵。

提示！ 由於對內鏡頭沒有閃光燈或感光性調整，因此其具有的設定較少。如同使用主相機一樣，透過點按 ，您亦可改變圖像大小、色彩效果、圖像質素、白平衡並設定計時器。

- 3 拍攝照片後，手機將提供同主相機拍攝照片時可用的所有相同選項。
- 4 若要返回至主相機，請點按 ，然後從預覽功能表中選擇**對外鏡頭**。

檢視已儲存照片

- 1 您可從相機模式存取已儲存的相片。只需點按 ，您的圖片集即會顯示在屏幕上。

01

02

03

04

05





06

07

08

視像攝錄機

拍攝快速影片

- 1 按下手機右側的相機鍵。
- 2 然後，在相機模式下的取景器中點按  並選擇**切換至**以切換到視像攝錄機。或者，您可以透過點按**視像攝錄機**直接進入此功能表。
- 3 視像攝錄機的取景器將顯示於屏幕上。
- 4 水平握住手機，將鏡頭對準拍攝對象。
- 5 按一下拍攝按鈕，開始錄製。
- 6 **Rec** 將出現在取景器底端，還有一個計時器顯示影片長度。
- 7 若要暫停影片，請點按  並透過選擇  恢復錄製。
- 8 點按屏幕上的  停止錄製。

拍攝影片後

將在屏幕上顯示一張靜態影片圖像。影片名稱將顯示於屏幕底端，同時還會在屏幕右側顯示四個圖示。



播放 點按以播放影片。

發送 點按以**訊息**、**電子郵件**、**藍芽**或**YouTube 發送**。請參閱第 36 頁了解如何發送訊息，並參閱第 102 頁了解如何使用藍芽發送和接收檔案。


注意：在漫遊時下載多媒體訊息可能會收取額外費用。


使用 設為鈴聲。


重新命名 點按以編輯選定圖片的名稱。

編輯 點按以使用不同工具編輯圖像。

 點按返回至前一個功能表。

 點按以刪除剛剛錄製的影片，透過點按**是**予以確定。取景器將再次出現。

 點按立即拍攝另一張影片。當前影片將會被儲存。

 點按以檢視儲存的影片和圖片集。

01

02

03

04

05

06

07

08

視像攝錄機




了解取景器



提示! 您可以關閉所有捷徑選項，以獲取更清晰的取景器屏幕。只需要點按一下取景器中央。要再調校選項，請再按一下屏幕。

調整曝光

曝光定義圖像在有光和黑暗部分中的區別。低對比度會將圖像顯示得較模糊，而高對比度會將圖像顯示得較清晰。

- 1 點按 。
- 2 將曝光指示符沿列向  滑動，曝光度將減低，獲得的圖像較模糊，向  滑動，對比度將升高，獲得的圖像較清晰。

使用進階設定

從取景器中，點按設定開啟所有進階設定選項。

您可以透過捲動滾輪調整視像攝錄機設定。選擇所需選項後，請點按OK。

切換至 - 切換到 LG KM900 對內鏡頭以錄製影片。請參閱第 59 頁的使用對內視像攝錄機，了解詳情。

影片大小 - 變更影片大小，以便節省記憶體空間。請參閱第 58 頁的變更影片圖像大小。

場景模式 - 從自動或夜間模式之間選擇。

色彩效果 - 選擇要在新檢視中使用的色調。請參閱第 59 頁的選擇色調。

白平衡 - 白平衡可確保影片中的任何白色部分顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從自動、白熱光、陽光、日光燈或陰天中進行選擇。

01

02

03

04

05

06

07

08

視像攝錄機

影片品質 - 在特細緻、細緻及標準之間選擇。質素越細緻，影片越清晰。因此，檔案大小會增加，意味著手機記憶體中儲存的影片將減少。

長度 - 為視像設定播放時間限制。從標準和多媒體訊息之間選擇，以限制透過多媒體訊息方式進行發送的最大大小。

提示! 若您選擇多媒體訊息持續時間，則可選擇低圖像品質，以錄製較長的影片。

記憶體使用裝置 - 選擇將影片儲存至手機記憶體或外置記憶體。

語音 - 選擇靜音以錄製影片，而沒有聲音。

聲音聚焦 - 選擇聲音聚焦：關閉/向外聚焦/向內聚焦

隱藏圖示 - 選擇是自動還是手動隱藏相機功能表上的圖示。

重新設定 - 重新設定所有視像攝錄機設定。

變更影片圖像大小

像素越高，檔案大小越大，從而佔據的記憶體空間便越多。若您想要在手機上儲存更多影片，可以變更影片解像度來縮小檔案。

- 1 使用取景器，點按左上角的 。
- 2 從預覽功能表中選擇**影片大小**。
- 3 從四個選項中選擇像素值：
720X480(D1) - 最高質素的闊屏幕選項。
640x480 - 標準大小的 VGA。

320x240 - 圖像大小較小，從而佔用的檔案空間較小。這非常有助於節省記憶體空間。


176x144 - 圖像大小最小，從而佔用的檔案空間也最小。

4 點按OK返回至取景器。

提示! LG KM900 上出色的編輯軟件兼容 720X480 (D1) 與 640x480 以外的所有影片類型。若要編輯影片，請勿採用此格式進行錄製。

提示! 對於影片格式轉換軟件，請參閱隨 KM900 提供的光碟。

選擇色調

- 1** 使用取景器，點按左上角的 。
- 2** 從預覽功能表中選擇**色彩效果**。
- 3** 有五種選項：**關閉、深褐色、黑白、負片或浮雕**。
- 4** 點按想要使用的色調。

使用內視像攝錄機

LG KM900 配備 320x240 對內相機，支援視像通話和影片錄製功能。

01

02

03

04



05

06

07


08

視像攝錄機

- 1 若要切換至對內鏡頭，請點按  並選擇**切換至**，然後從預覽功能表中選擇對內鏡頭。
- 2 幾秒鐘後，您將看到您自己顯示在取景器中。要開始錄製圖像，請按正常方式按一下拍攝按鈕，要停止錄製，請再按一下此按鈕。
- 3 影片錄製後，系統將提供同主相機錄製影片時可用的所有選項。
- 4 若要返回至主相機，請依次點按  和對外鏡頭。

提示！ 如同使用主相機一樣，透過點按**設定**，您亦可改變影片大小、色彩效果、白平衡和品質。

觀看已儲存影片

- 1 在取景器中，點按 。
- 2 圖片集將顯示於屏幕上。
- 3 點按一次影片，使其顯示於圖片集的最前端。再按播放。


在電視上觀看影片

使用電視輸出線將KM900 連接至電視。

注意： 電視輸出線需單獨購買。


照片及影片

檢視照片及影片

- 1 點按相機預覽屏幕上的 .
- 2 圖片集將顯示於屏幕上。
- 3 點按影片或相片，以完全開啟。



提示! 左右輕擊以檢視其他相片或影片。

提示! 要刪除相片或影片，請開啟並選擇 。點按 **是** 以確認。

檢視影片或照片時使用縮放功能

檢視照片或影片時，您可透過在屏幕上將兩個手指靠攏或分開進行縮放。

檢視影片時調節音量

要於播放時調整影片音量，請按擴音器符號並點按屏幕底端的音量控制。或者，使用手機側面的音量鍵。

注意! 影片播放檔案類型 avi 支援的最高解像度為 352 x 288 (CIF)

01

02

03

04

05

06

07

08

照片及影片

將照片設定為待機圖片

- 1 點按要將其設為牆紙的照片，予以開啟。
- 2 點按屏幕開啟選項功能表。
- 3 點按 **使用方式**。
- 4 屏幕將切換到人像模式。您可縮放圖片。

編輯照片

您可對相片執行多種變更操作、新增相片或保持原樣。

- 1 開啟您想要編輯的相片並點按此相片 **編輯** 以顯示相關選項。
- 2 點按圖示以修改相片：




裁剪相片。用指尖在屏幕上滑動以選擇區域。




用手在相片上進行繪製。從四個選項中選擇線條粗細以及想要使用的色彩。



在圖片上新增文字。請參閱第 64 頁的**在相片中加入文字**。

 使用印章裝飾相片。在不同的印章中進行選擇並在相片中點按要放置印章的位置。

 清除剛用手繪畫的內容。您可選擇使用的橡皮擦大小。

 點按以返回圖片集。


儲存 儲存對照片作出的變更。選擇將變更儲存為**更新現有檔案**或**新檔案**。選擇**新檔案**後，輸入檔案名稱。

復原 復原已新增至相片的編輯內容。

圖像 點按以開啟更多效果選項，包括**旋轉**。同時，存在更多的進階編輯選項。請參閱第65頁的**強化相片色彩**及**轉換相片中的色彩**。

篩選 點按以將效果選項套用至相片。

調整 此選項有助使用自動色彩和亮度等來調整拍攝的圖片。

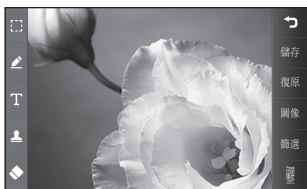

01

02

03

04

05

06

07

08

照片及影片

在相片中加入文字

- 1 從編輯觸控中點按 **T**。
- 2 選擇**文字**以新增無邊框文字，或者選擇其中一個語音氣泡形狀。
- 3 使用鍵盤輸入文字並點按**儲存**。
- 4 透過點按文字即可將其移動並滑動至所需位置。



在照片中加入效果

- 1 從編輯屏幕中，點按 **篩選**。
- 2 您可將任何一種選項套用至相片。
- 3 要復原效果，只需點按 **復原**。

剪裁相片

- 1 從編輯觸控中點按 **☐**。
- 2 選擇要用於剪裁圖片的形狀。
- 3 在要剪裁區域上拖動方塊。
- 4 完成選擇剪裁部分後，請點按 **儲存**。

強化相片色彩

- 1 從編輯屏幕中，點按 **圖像**。
- 2 選擇**色彩強化**。
- 3 選擇照片部份。輪廓線將包括顯示於此區域內一切顏色相近之部份，例如某人的頭髮或外衣。
- 4 透過點按 **強度**，然後點按「+」或「-」按鍵變更強化明暗度。
- 5 點按OK。
- 6 所有顏色將從相片中移除，以同為顏色強化標記的部份分離。
- 7 選取 **儲存** 以儲存變更。

轉換相片中的色彩

- 1 從編輯屏幕中，點按 **圖像**。
- 2 選擇**色彩轉換**。
- 3 選擇照片部份。輪廓線將包括顯示於此區域內一切顏色相近之部份。
例如，某人的頭髮或外衣。
- 4 選擇一種色彩。
- 5 按OK。
- 6 為色彩強化選定的照片部份將變更為選定的色彩轉換。
- 7 選取 **儲存** 以儲存變更。

01

02

03

04

05

06

07

08

照片及影片

編輯影片


影片編輯功能可用於除 720x480 (D1) 解像度以外的 MPEG4 類型影片。

若計劃編輯影片，則不要採用此格式來錄製。


注意：檔案能否編輯取決於其解像度。

裁剪影片長度

- 1 開啟您想要編輯的影片，點按  選項鍵。
- 2 選取 **編輯** 並選擇**裁剪/多重裁剪**。
- 3 點按  並使用 **裁剪** 設定新的開始點。
- 4 點按 **預覽** 確定您對新剪切的部份滿意。
- 5 點按 **儲存**，或者點按  返回放棄變更。

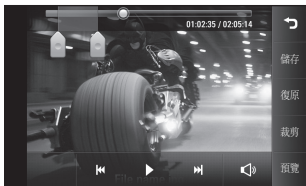


合併兩段影片

- 1 開啟您想要編輯的影片，點按  選項鍵。
- 2 選取 **編輯** 並選擇**影片合併**。
- 3 將開啟我的影片資料夾。選擇您要合併的影片。
- 4 點按並滑動相片，將其移動至影片的開頭或結尾。
- 5 點按**預覽**選擇如何合併影片。





- 按**儲存**，然後按**新檔案**儲存合併後的新影片。取代現有檔案或新檔案。
- 重複這些步驟，合併更多影片。

合併照片和影片

- 開啟您想要編輯的影片，點按  選項鍵。
- 選取 **編輯** 並選擇 **圖像合併**。
- 將開啟我的圖像資料夾。選擇要移動至影片中的相片並選擇。

- 點按並滑動照片，將其合併至影片的開頭或結尾。
- 點按**預覽**選擇如何合併相片和影片。
- 按**儲存**並選擇取代現有檔案或新檔案。
- 重複這些步驟，合併更多相片。

在影片中加入文字

- 開啟您想要編輯的影片，點按  選項鍵。
- 選取 **編輯** 並選擇**文字覆疊**。
- 點按  並暫停播放以設定文字出現的起始點。
- 點按「開始」並選擇文字樣式。使用按鍵輸入文字，並選擇OK。

01

02

03

04

05


06

07

08



照片及影片

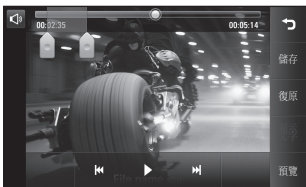- 1 點按想要顯示文字的屏幕區域並點按OK。



- 2 點按**儲存**。取代現有檔案或新檔案。
- 3 重複這些步驟，新增更多文字。


覆疊照片

- 1 開啟您想要編輯的影片，點按  選項鍵。
- 2 選取 **編輯** 並選擇**圖像覆疊**。
- 3 將開啟我的圖像資料夾。選擇要用於覆疊影片的相片。
- 4 點按  並在想要顯示圖片的位置暫停，然後點按「開始」按鈕並選擇「不透明」。
- 5 當相片覆疊停止後，點按**確定**並按**結束**。
- 6 點按想要顯示的屏幕區域。若相片太大，則會覆疊整個屏幕，而不只是所選區域。
- 7 點按**儲存**。取代現有檔案或新檔案。
- 8 重複這些步驟，新增更多相片。

在影片中加入原聲帶

- 1 開啟您想要編輯的影片，點按  選項鍵。
- 2 選取 **編輯** 並選擇**配音**。
- 3 將開啟我的聲音資料夾。選擇要新增至影片的曲目。
- 4 將清除影片的原始聲音曲目。
- 5 若聲音長度比影片短，則選擇是播放**一次**還是**重複**播放。
- 6 取代現有檔案或新檔案。

在影片中新增現場配音

- 1 開啟您想要編輯的影片，點按  選項鍵。
- 2 選取 **編輯** 並選擇現場配音。
- 3 將聲音值設定為原始聲音或錄音。



01

02

03

04

05


06

07


08

照片及影片

變更影片速度


- 1 開啟您想要編輯的影片，點按  選項鍵。
- 2 選取 **編輯** 並選擇**時間調整**。
- 3 選擇其中一種選項。這些選項會因速度不同而有所變化。
- 4 取代現有檔案或新檔案。


新增變暗效果

- 1 開啟您想要編輯的影片，點按  選項鍵。
- 2 選取 **編輯** 並選擇**變暗效果**。
- 3 現在，影片會在開始時淡入，在結束時淡出。
- 4 取代現有檔案或新檔案。

多媒體

您可將多媒體檔案儲存於手機記憶體中，以便輕鬆存取所有圖片、聲音、影片和遊戲。您亦可將檔案儲存至記憶咭中。使用記憶咭以便釋放手機記憶體空間。

要存取「多媒體」功能表，點按  並從「多媒體」標籤中選擇**我的檔案**。您可開啟儲存所有多媒體檔案的資料夾清單。

提示！ 若要刪除「我的檔案」中的任何檔案，請依次點按  和**刪除**。

圖片

我的圖像包括圖片清單，其中有預載至手機的預設圖像、已下載圖像和透過手機相機拍攝的圖像。

我的圖像選項功能表

我的圖像中的可用選項取決於選定的圖像類型。所有選項均可用於手機相機上拍攝的圖片，但僅**設定最愛、排序方式、播放投影片和記憶體管理**選項可用於預設圖像。

發送照片

- 1 若要發送相片，只需選擇想要發送的圖片。
- 2 點按**發送**。從**訊息、電子郵件、藍芽**或**Blogger**之間選擇。
- 3 若選擇**訊息**或**電子郵件**，您的相片會附加至訊息中，且您可按正常方式編寫和發送訊息。若選擇**藍芽**，手機將搜尋裝置以發送圖片。

01

02

03

04

05

06



07

08

多媒體

使用圖像

您可選擇將圖片用作牆紙或屏幕保護程式，或甚至將其用於識別來電者。

- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的圖像**。
- 3 選擇一個圖像並點按 。
- 4 點按**使用方式**並選擇以下一項：

牆紙 - 為按鍵鎖定屏幕設定牆紙。

通訊錄 - 給通訊錄清單中的某位聯絡人分配一個圖像，以便在其向您致電時顯示。

開機圖像 - 設定開機時所顯示的圖像。

關機圖像 - 設定關機時所顯示的圖像。

撥出通話圖像 - 設定撥出通話時所顯示的圖像。



來電圖像 - 設定來電期間顯示的圖像。

列印圖像

- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的圖像**。
- 3 選擇一個圖像並點按 。
- 4 點按**列印**，然後在**藍芽**和**PictBridge**之間選擇。



移動或複製圖像

您可在手機記憶體和記憶咭之間移動或複製圖像。您可能想透過此操作清除某個記憶體的部分空間，或保護圖像以防遺失。

- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的圖像**。
- 3 點按 。
- 4 選擇**移動**或**複製**。

建立投影片播放

若要查看手機上的所有圖像，則可建立播放投影片，這樣就省去逐一開啟、關閉圖像的麻煩。

- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的圖像**。
- 3 點按  和**播放投影片**。

智能影像定位



開啟相機並暢享手機定位服務功能。

隨地拍照並在照片上標記拍照位置。

若將帶有標籤的圖片上載到支持相片定位的 Blog 上，則可以看到圖片會顯示在一張地圖上。

檢查記憶體狀態

您可查看已使用的記憶體空間及所剩記憶體空間。

- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的圖像**。
- 3 點按 ，然後點按**記憶體管理**。

01

02

03

04

05

06

07

08

多媒體

聲音

我的聲音資料夾包含已下載的聲音、**預設聲音**和**錄音記錄**。您可從此處管理或發送聲音或將其設為鈴聲。


使用聲音

- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的聲音**。
- 3 選擇預設聲音或錄音記錄。
- 4 選擇一種聲音並點按播放圖示。將自動播放聲音。
- 5 您可透過選擇**使用方式**功能表將聲音用作各種音效。
- 6 從**話音鈴聲**、**視像鈴聲**和**訊息提示音**之間選擇。

影片

我的影片資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。

觀看影片

- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的影片**。
- 3 選擇一個影片進行播放。

提示! KM900 支援 DivX 及 Xvid 影片格式播放，以確保可用更多內容。詳情請參閱第 92 頁。

注意: 電視輸出線需單獨購買。


發送錄像片段

- 1 選擇影片並點按 。
- 2 點按**發送**，然後在**訊息**、**電子郵件**、**藍芽**和**YouTube**之間選擇。
- 3 若選擇**訊息**或**電子郵件**，則錄像片段會附加至訊息中，您亦可正常編寫和發送訊息。若選擇**藍芽**，手機將搜尋裝置以發送影片。

遊戲和應用程式

您可將新遊戲和應用程式下載至手機上以供消遣。

玩遊戲


- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**我的遊戲**或**應用**。
- 3 點按以啟動。

使用選項功能表

在應用程式資料夾內，以下選項可供選擇：

- **新資料夾**：在遊戲或應用程式內建立資料夾。
- **排序方式**：按日期、名稱、大小或記憶體來排序遊戲及應用程式
- **記憶體管理**：檢視手機或外置記憶體的記憶體狀態。

安裝 Java 遊戲及應用程式

- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 若插入新的記憶咭，請點按「外置記憶體」功能表。
- 3 選擇要安裝的檔案 (*.jad 或 *.jar) ，並點按**安裝**。

01

02

03

04

05

06

07

08

多媒體


使用 M-Toy 功能表

M-Toy 包含預載的 Flash 遊戲，這些遊戲使用整合式動作感應器。

Flash 內容

Flash 內容資料夾中包含您所有的預設及已下載 SWF 檔案。


檢視 SWF/ SVG 檔案

- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按 **Flash 內容**。
- 3 選擇您要檢視的檔案。

文件

可以是 Excel、PowerPoint、Word、文字和 pdf 檔案。

檢視檔案

- 1 點按  並從「多媒體」標籤中選擇**我的檔案**。
- 2 點按**文件**。
- 3 選擇一個文件以檢視。

傳送檔案到手機

藍芽可能是從電腦傳輸檔案到手機中最簡單的方法。您也可以透過 USB 線使用 LG PC Suite，詳細資訊請參閱第 88 頁。

要使用藍芽傳輸檔案（例如音樂）：

- 1 確定手機和電腦上的藍芽已開啟且位於彼此範圍內
- 2 使用電腦，透過藍芽發送檔案。
- 3 發送檔案後，透過點按手機上的**是**進行接收。
- 4 該檔案應出現於您的**文件**或**其他資料夾**中。

其他

其他資料夾用於儲存除圖片、聲音檔、影片、遊戲或應用程式以外的檔案。其使用方式與**文件**資料夾相同。您可能會發現，從電腦傳輸檔案至手機時，這些檔案將出現於**其他**資料夾中。

若發生這種情況，您可以將這些檔案移走。

製作電影

- 1 點按  並從「多媒體」標籤中選擇**影片製作**。
- 2 點按附加以新增圖像。
- 3 點按式樣標籤，選擇電影樣式。
- 4 點按屏幕上的**聲音**標籤以變更聲音，例如用於語音錄製。
- 5 點按**預覽**按鈕查看結果。
- 6 點按屏幕上的**播放順序**標籤變更順序。
- 7 點按屏幕上的儲存於標籤以選擇電影儲存位置，並點按**使用**標籤選擇用途。
- 8 要儲存電影，按播放然後點按**儲存電影**。

01

02

03

04

05


06

07

08

多媒體

音樂

LG KM900 具有內置的音樂播放機，這樣，您可播放所有最愛的曲目。要存取音樂播放機，點按  並從「多媒體」標籤中選擇**音樂**。您可從此處存取大量資料夾：

全部曲目 - 包含手機上儲存的所有歌曲。

我的最愛 - 包含儲存為最愛的全部歌曲。

演出者 - 按演出者瀏覽音樂收藏。


專輯 - 按專輯瀏覽音樂收藏。

類型 - 按類型瀏覽音樂收藏。

將音樂傳送至手機


將音樂傳送至手機的最簡單方式是透過藍芽或USB線。

您亦可使用 LG PC Suite，詳情請參閱第 88 頁。若要使用藍芽傳送音樂：

- 1 確保兩個裝置均開啟藍芽，且彼此相互連接。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 檔案發送後，您需要在手機上點按  予以接收。
- 4 檔案應顯示於**音樂 > 全部曲目**中。

播放歌曲

- 1 點按  並從「多媒體」標籤中選擇音樂。
- 2 點按**全部曲目**。
- 3 選擇要播放的歌曲並點按 。
- 4 點按  以暫停歌曲。
- 5 點按  以跳至下一首歌曲。
- 6 點按  以返回至上一首歌曲。
- 7 點按  返回至功能表。


提示！ 若要在收聽音樂時調節音量，請點按 。

建立播放列表

透過從**全部曲目**資料夾中選擇歌曲項目，從而建立自己的播放清單。

- 1 點按  並從「多媒體」標籤中選擇音樂。
- 2 點按  選項圖示。
- 3 點按**新播放列表**，輸入播放清單名稱並點按 。
- 4 全部曲目資料夾將會顯示。點按要納入播放列表的所有歌曲；將於對應的曲目名稱旁邊顯示一個勾號。
- 5 點按**新增歌曲**。

要播放播放列表，請選擇並點按播放。

注意：要新增第二個播放列表，請點按 ，然後點按「新增」播放列表。

01

02

03

04

05



06

07

08

多媒體

刪除播放列表

- 1 點按  並從「多媒體」標籤中選擇**音樂**。
- 2 點按  選項圖示。
- 3 點按**移除**或**移除全部**以刪除所有播放列表。

使用收音機

LG KM900 具有內置 FM 收音機功能，這樣，您可在外出旅途中調諧至最愛電台，收聽節目。


注意：您需要插入耳機才可收聽收音機。請將耳機插入耳機插孔。




搜尋電台

您可透過手動或自動搜尋電台頻道，調諧手機中的電台節目。這些節目將儲存至特定頻道編號，如此一來，您就不需要重新調諧。手機中最多可儲存 30 個頻道。



自動調諧

- 1 點按  並從「多媒體」標籤中選擇**FM 收音機**。


- 2 點按 。
- 3 點按**自動掃描**，然後點按**是**。
透過選擇**設定**、**略過**及**停止**，
將搜尋到的電台分配到手機的
頻道編號中。

注意：您還可以透過使用顯示於
收音機頻率旁邊的滾輪手動調
諧電台。

重設頻道

- 1 點按  並從「多媒體」標籤
中選擇 **FM 收音機**。
- 2 點按 。
- 3 選擇**重新設定**以重新設定目前
頻道，或選擇**重設全部頻道**以
重設所有頻道。若重新設定所
有頻道，每個頻道將返回到開
始的 87.5Mhz 頻率。

收聽電台

- 1 點按  並從「多媒體」標籤
中選擇 **FM 收音機**。
- 2 點按要進行收聽的電台的頻道
號碼。

提示！ 如要改善收音機的
接收效果，您可延長作為收音
機天線的耳機線。

警告！ 若將非配套耳機連
接至手機，電台接收效果會受
到干擾。

01

02

03

04

05

06


07


08

記事簿



新增事件至日曆

- 1 從桌面選擇 ，然後捲動至「實用工具」標籤中的**記事簿**。選擇**日曆**。
- 2 選擇要新增事件的日期。
- 3 點按 ，然後點按**新日程表**。
- 4 點按**類別**，然後從**約會、週年紀念或生日**之間選擇。檢查日期，並輸入事件開始時間。
- 5 對於約會和週年紀念日，請在下方的時間和日期方塊中輸入事件完成的時間和日期。
- 6 若要新增標題或備註至事件中，請點按**標題**，然後鍵入詳情。
- 7 選擇**設定鬧鐘**以設定事件提醒。若要重複鬧鐘，請選擇**設定重複**。




- 8 點按  以在日曆中儲存該事件。日曆中的方形將標記所有儲存了事件的日期，並將在事件開始時間響鬧，如定有鬧鐘。

提示！ 您可以在日曆中輸入假期。依次點按各個假日，然後點按  並選擇**設定假期**。每個假日都將標記為紅色。

變更預設日曆檢視

- 1 從桌面選擇 ，然後捲動至「實用工具」標籤中的**記事簿**。選擇  中的**設定**。
- 2 點按**預設檢視**並選擇日曆、星期、時間表、列表或所有工作。



新增項目至待辦事項清單

- 1 從桌面選擇 ，然後捲動至「實用工具」標籤中的**記事簿**。
- 2 選擇  和新增工作，並點按備註。
- 3 為工作設定日期，新增備註，並選擇重要性等級：**高**、**中等**或**低**。
- 4 選擇  以儲存工作。

提示！ 您可以備份並同電腦同步日曆。請參閱第 88 頁的「電腦同步」。

使用日期搜尋器

日期搜尋器是一種方便快捷的工具，有助於您計算特定天數後的日期。例如，自 09 年 10 月 10 日 60 天後的日期為 2009 年 12 月 09 日。此功能有助您對到期日進行跟蹤。

- 1 從桌面選擇 ，然後捲動至「實用工具」標籤中的**記事簿**。
- 2 選擇 ，然後選擇**日期搜尋器**。
- 3 在**由**標籤中設定所需日期。
- 4 在**之後**標籤中設定天數。
- 5 以下將顯示**預計日期**。

01

02

03

04

05


06

07



08

記事簿

設定鬧鐘

- 1 從桌面選擇 ，然後捲動至「實用工具」標籤中的**鬧鐘**。
- 2 若要新增鬧鐘，請點按**新鬧鐘**。若要設定鬧鐘於一小時內再次響鬧，請點按**快速鬧鐘**。
- 3 設定鬧鐘響鈴的時間。
- 4 選擇是否重複響鬧，設定重複與類型。
圖示指明您選擇的工作日。
- 5 選擇發聲/震動以選擇鬧鐘響鈴方式。
- 6 點按鬧鐘以選擇鬧鐘旋律或聲音。若要收聽聲音，請點按此聲音，然後點按播放。
- 7 新增鬧鐘備忘錄。

新增備忘錄


- 1 從桌面選擇 ，然後捲動至「實用工具」標籤中的**備忘錄**。
- 2 點按**新增備忘錄**。
- 3 鍵入備忘錄內容，然後點按 。

提示！ 您可以編輯現有備忘錄。選擇要編輯的備忘錄，點按**編輯**並輸入修改內容。

語音備忘錄

使用語音備忘錄錄製語音備忘錄或其他聲音檔。

錄製聲音或語音

- 1 點按 。
- 2 點按「實用工具」標籤中的**語音備忘錄**。
- 3 點按 **錄製** 開始錄製。
- 4 點按 **停止** 結束錄製。



- 5 若要重新錄製語音，請點按 **新增**。

發送錄音

- 1 完成錄製後，可透過點按**發送**發送聲音短片。
- 2 從**訊息**、**電子郵件**或**藍芽**中選擇。若選擇**訊息**或**電子郵件**，錄製會新增至訊息中，您可按正常方式編寫和發送。若選擇**藍芽**，手機將搜尋裝置以發送語音錄製。

01

02

03

04

05



06

07


08

記事簿

使用計算機

- 1 從桌面選擇 ，然後捲動至「實用工具」標籤中的**計算機**。
- 2 點按數字鍵以輸入數字。
- 3 對於簡單計算，請點按所需的**功能**（+、-、×、÷），然後按「=」。
- 4 對於較為複雜的計算，請點按  並從 **sin**、**cos**、**tan**、**deg**、**log** 等之間選擇。


轉換單位

- 1 從桌面選擇 ，然後捲動至「實用工具」標籤中的**工具**。
- 2 選擇**單位轉換器**。
- 3 選擇是否要轉換**匯率**、**面積**、**長度**、**重量**、**溫度**、**體積**或**速度**。



4 然後選擇單位並輸入要轉換的**值**。

5 對應值將顯示於**屏幕**上。

使用秒錶

- 1 從桌面選擇 ，然後點按**實用工具**。
- 2 選擇**秒錶**。
- 3 點按**開始**開始計時。
- 4 如果要記錄圈速，點按**分段**。
- 5 點按**停止**結束計時器。
- 6 點按**重新設定**重新開始計時。

新增城市至世界時鐘

- 1 從桌面選擇 ，然後捲動至「實用工具」標籤中的**世界時鐘**。
- 2 點按  圖示，然後點按**新增城市**。鍵入所需城市的名稱，該城市將顯示於屏幕上。
- 3 點按城市予以選中。該城市被新增至世界時間清單。

01

02

03

04

05

06

07

08

電腦同步

您可同步電腦和手機。此功能將確保所有重要詳情與日期相對，還可執行資料備份，讓您安心無憂。

提示！ 爲此，您需要安裝 CD-ROM 上提供的 PC Suite 應用程式，或從以下網站下載：
<http://update.lgmobile.com>。（
www.lgmobile.com 網站的「產品」>「手冊及軟件」>「轉至手冊及軟件下載部分」）

在電腦上安裝 LG PC Suit

- 1 從桌面點按 ，然後捲動至「設定」標籤中的**連接**。
 - 2 點按 USB 連接模式。
 - 3 使用 USB 線連接手機和電腦，並稍等片刻。
 - 4 將顯示安裝指引訊息。
- 注意！** 若電腦中沒有顯示安裝指引訊息，請檢查 Windows 上的 CD-ROM 設定。
- 5 插入提供的 CD 或按一下下載按鈕從網站直接下載 LG PC Suite 程式。
 - 6 按一下出現在屏幕上的 LG PC Suite 安裝程式。

連接手機和電腦

- 1 從「連接」功能表中選擇 PC Suite 模式，然後將 USB 線連接至手機和電腦。
- 2 電腦上的 LG PC Suite 將自動啟用。

注意! 若電腦中沒有自動啟用 LG PC Suite，請檢查電腦上的 CD-ROM 設定。

- 3 手機和電腦現已連接。

備份和還原手機資訊

- 1 如同以上所述，將手機連接到電腦。
- 2 按一下**備份**圖示，並選擇**備份**或**還原**。

- 3 選擇備份內容資料和/或電話簿/日程表/任務/備忘錄資料。選擇資訊備份或還原位置。按一下**確定**。
- 4 資訊將會備份。

檢視電腦上的手機檔案

- 1 如同以上所述，將手機連接到電腦。
- 2 按一下管理檔案圖示。
- 3 所有儲存於手機上的文件、Flash 內容、圖像、聲音檔和影片將顯示於屏幕上的 LG 手機資料夾中。

提示! 在電腦上檢視手機的內容，有助您整理檔案、管理文件並刪除不再需要的內容。

01

02

03

04

05

06

07

08

電腦同步

同步處理通訊錄

- 1 連接手機和電腦。
- 2 按一下通訊錄圖示。
- 3 現在，電腦將匯入並顯示儲存於智能咭和手機上的全部聯絡人。
- 4 按一下檔案並選擇儲存。現在，您可選擇聯絡人儲存位置。

注意：要備份儲存至智能咭中的通訊錄，請按一下位於電腦屏幕左側的智能咭資料夾。在其中一個通訊錄上按滑鼠右鍵，並選擇選擇全部，然後選擇**複製或移至手機記憶體**。

在聯絡人上按滑鼠右鍵，並選擇**複製至通訊錄**。現在，按一下位於屏幕左側的**手機**資料夾，將顯示所有號碼。

同步訊息

- 1 連接手機和電腦。
- 2 按一下聯絡人圖示。
- 3 所有手機訊息將顯示於屏幕的資料夾中。
- 4 使用位於屏幕頂端的工具列以整理訊息。

音樂同步

此功能表允許新增音樂至 KM900。開始將電腦上的音樂傳輸至裝置之前，請確定電腦具有如下設定和配件：

- Microsoft Windows XP 或 Vista
- Windows Media Player 10 或更高版本
- USB 線

使用 Windows Media Player 傳輸音樂

- 1 從桌面選擇 ，然後捲動至「設定」標籤中的**連接**。
- 2 選擇 USB 連接模式，然後選擇音樂同步。
- 3 使用相容 USB 線連接手機與電腦。
- 4 嘗試連接手機與電腦時，手機將顯示：音樂同步...並隨後顯示已連接。
- 5 電腦將提示您啟動首選音樂管理軟件。
- 6 選擇 Windows Media Player。
- 7 轉至「同步標籤」，然後將想要傳輸至手機的音樂拖放至同步清單控制板中。
- 8 按一下開始同步按鈕。將開始傳輸處理。

警告

傳輸過程中請勿中斷手機連接。

注意：音樂同步僅可用於音樂內容。

使用 iSync

安裝受 Mac 和 PC 電腦支援的 iSync 外掛程式安裝檔案，並透過藍芽或 USB 連接手機。

若要透過藍芽同步，請將 Mac 或 PC 電腦與手機進行配對。若要透過 USB 進行設定，請在 USB 連接模式中選擇 iSync 功能表。

注意：使用藍芽時，必須於選項功能表中選擇 **iSync 開啟**。

01

02

03

04

05

06

07

08

電腦同步

DivX 轉換器

安裝同電腦同步軟件相同光碟上提供的 DivX 轉換器。DivX 會將電腦上的媒體檔案轉換成某種格式，以便您在手機上進行上載和檢視。

安裝完成後，從電腦的「程式檔案」上選擇 **DivX**，然後依次選擇 **DivX 轉換器** 和轉換器。

使用應用程式中的箭頭，將轉換格式變更為「Mobile」。若在應用程式方塊上按一下滑鼠右鍵，並選擇 **偏好**，則您可變更儲存轉換檔案的位置。


將檔案拖放至應用程式中以進行初始分析。然後，選擇 **轉換** 開始轉換處理。完成處理后，將顯示一個轉換完成快顯視窗。

網絡功能

瀏覽器

瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、運動和娛樂資訊，並直接往手機中載入更多內容。而無論您身在何處，有何種需求，均能一一滿足您。

存取網絡

- 1 從桌面選擇 ，然後捲動至「通訊」標籤中的**瀏覽器**。
- 2 要直接跳至瀏覽器主頁，請選擇**主頁**。或者，選擇**輸入網址**並輸入網址，然後選擇**連接**。

注意：連接到這類服務並下載其中的內容將會產生額外收費。請向網絡供應商諮詢收費詳情。

新增並存取書籤

為了方便快捷存取喜愛的網站，您可新增書籤並儲存網頁。

- 1 從桌面選擇 ，然後捲動至「通訊」標籤中的**瀏覽器**。
- 2 選擇**書籤**。書籤清單顯示在屏幕上。
- 3 要新增書籤，請選擇 ，然後點按新增書籤。輸入書籤名稱及其網址。
- 4 點按 。此時，書籤將顯示於書籤清單中。
- 5 若要存取書籤，只需要點按書籤，然後連接。您將連接到該書籤。

01

02

03

04

05

06

07

08


網絡功能

使用 RSS 讀取裝置


RSS (Really Simple Syndication) 是網絡 Feed 格式成員之一，用於發布經常更新的內容，如 Blog 條目、新聞標題或天氣預報。RSS 文件也稱為 feed、web feed 或頻道，包含來自關聯網站的內容概要或完整文字。RSS 使得人們可以自動跟蹤其最愛網站的更新，這比手動查看要容易多了。

用戶可透過在讀取裝置中輸入 feed 連結或按一下啟動訂閱程序的瀏覽器中的 RSS 圖示，即可訂閱 feed 服務。讀取裝置會定期檢查用戶訂閱的 feeds，查看是否有新內容更新，並下載其發現的任何更新。


存取已儲存的網頁

- 1 從桌面選擇 ，然後捲動至「通訊」標籤中的**瀏覽器**。
- 2 選擇**儲存的網頁**。
- 3 選擇您要檢視的頁面，將開啟此頁面。

檢視瀏覽器記錄

- 1 從桌面選擇 ，然後捲動至「通訊」標籤中的**瀏覽器**。選擇**記錄**。
- 2 會顯示最近存取的網頁。若要存取其中的任何一個頁面，只需選擇該頁面。

變更網頁瀏覽器設定

- 1 從桌面選擇 ，然後捲動至「設定」標籤中的**連接**。
- 2 選擇**瀏覽器設定**。
- 3 您可以編輯**網絡設定**、**外觀設定**、**快取記憶**、**Cookies**、**安全**或**重設設定**。
- 4 透過點按切換圖示，您可將這些選項設定為**開啟**或**關閉**。

將手機用作數據機

KM900 手機可用作電腦數據機，以便您在無限連接的情況下亦能存取電子郵件和互聯網。您可透過 USB 線或藍芽執行此操作。

使用 USB 線：

- 1 確保 LG PC Suite 已安裝於電腦上。
 - 2 使用 USB 線連接 KM900 手機和電腦，並啟動 LG PC Suite 軟件。
 - 3 按一下電腦上的**通訊**。然後，按一下**設定**並選擇**數據機**。
 - 4 選擇**LG Mobile USB 數據機**並選擇**確定**。此時，它將顯示於屏幕上。
 - 5 按一下「**連接**」，您的電腦便可透過 KM900 手機連接。
- 注意：**有關使用 LG PC Suite 進行同步的詳情，請參閱第 88 頁。

01

02

03

04

05

06

07

08

網絡功能

使用藍芽：

- 1 確保藍芽已**開啟**，且**可見**電腦和 KM900 手機。
- 2 配對電腦和 KM900 手機，以便連接時需要密碼。
- 3 使用 LG PC 套件上的**連線精靈**，建立有效的藍芽連線。
- 4 按一下電腦上的**通訊**。然後按一下**設定**。
- 5 按一下**數據機**。
- 6 選擇以**藍芽連線的標準數據機**並按一下**確定**。此時，它將顯示於屏幕上。
- 7 按一下**連接**，您的電腦便可透過 KM900 手機連接。

注意：有關藍芽的更多資訊，請參閱第 102 頁。

存取 Google 地圖

您可使用「通訊」標籤中的 Google 瀏覽服務。選擇 Google 中的 Google 地圖功能表以啟動此應用程式。將對 KM900 提供的 GPS 位置進行處理。此服務有助您透過將地圖發送到手機顯示屏上來搜尋並找準方向。注意：使用此服務可能會收取額外費用。

設定

此資料夾可讓您調節設定，個人化您的 KM900 手機。

注意：有關通話設定的詳情，請參閱第 30 頁。

變更屏幕設定

1 從桌面選擇 ，然後捲動至「設定」標籤中的**顯示設定**。

2 您可以選擇以下選項功能表：

屏幕圖像 - 選擇圖像用於牆紙、開關手機、撥打或來電。

主屏幕 - Widget/通訊錄/多媒體/捷徑。

鎖定屏幕 - 選擇鎖定屏幕上的類型。

字體 - 調節字型大小和樣式。

背光燈 - 選擇背光燈的維持時間。

注意：背光燈的維持時間越長，電池耗電也就越多，手機充電次數也就越頻繁。

自動亮度 - 自動調節屏幕亮度。

亮度 - 調校屏幕的亮度。

個人化情景模式

您可在桌面上快速變更您的情景模式。只需要點按頂端的狀態摘要圖示，然後點按情景模式標籤。

使用設定功能表，您便可個人化每種情景模式設定。

1 從桌面選擇 ，然後捲動至「設定」標籤中的**情景模式**。

2 選擇您要編輯的情景模式：**標準**、**靜音**、**戶外**或**飛航模式**。

01

02

03

04

05

06

07


08

設定

- 3** 然後，您便可變更清單中的所有可用聲音和提示選項，包括**語音/視像鈴聲、音量、訊息提示**及其他。

變更手機設定

隨意調整 KM900 的設定，以便適合您的個人偏好。

- 1** 從桌面選擇 ，然後捲動至「設定」標籤中的**手機設定**。
- 2** 從以下清單中選擇一種功能表：

日期及時間 - 調節您的日期和時間設定，或選擇因應旅遊或夏令時間來自動更新時間。

省電模式 - 選擇切換省電設定值至**開啟**或**關閉**。

語言 - 變更 KM900 的顯示語言。

自動按鍵鎖 - 在桌面上自動鎖定按鍵。

安全 - 調節您的安全設定，包括 PIN 碼及手機鎖。

觸控設定 - 變更觸控板值設定。

記憶體管理 - 請參閱第 101 頁的**使用記憶體管理**，了解更多資訊。

重設設定 - 將所有設定還原至出廠預設值。

手機資訊 - 檢視 KM900 的技術訊息。

更換觸控設定

從桌面選擇 ，然後捲動至「設定」標籤中的**手機設定**。

觸控震動 - 點按開啟或關閉。

震動類型 - 可選擇震動類型 1/2/3。

震動級別 - 可選擇震動級別。

輕觸聲音 - 點按開啟或關閉。

聲音 - 可選擇聲音 1/2/3。

音量 - 可選擇音量。

變更連接設定

您的網絡商已對您的連接設定進行設定，以便您可立即享用新手機。要使用此功能表變更設定，請執行以下操作。

從桌面選擇 ，然後捲動至「設定」標籤中的**連接**。

網絡選擇 - 您的 KM900 手機將自動連接至首選網絡。

互聯網設定 - 設定互聯網連接的設定檔。

存取點 - 您的網絡商已經為您儲存此資訊。您可以使用此功能表來新增存取點。

GPS 種類 - 選擇輔助式GPS或獨立式。

01

02

03

04

05

06

07

08

設定

GPS

- GPS 技術使用地球軌道衛星提供的資訊，尋找位置。
- 接收器根據訊號抵達的時間，預計到 GPS 衛星的距離，然後使用此資訊確認其位置。
- 所花時間從幾秒鐘到幾分鐘不等。
- 此手機上的輔助 GPS (A-GPS) 用於透過分組數據連接，擷取位置輔助數據。
- 只有網絡供應商提供了輔助數據且需要時才能透過服務伺服器擷取。

注意：GPS 無法在建築物或地下工作。

USB 連接模式 - 使用 LG PC Suite 軟件同步您的 KM900，實現從手機中複製檔案。有關同步的詳情，請參閱第 88 頁。

電視輸出 - 連接 KM900 手機至 TV 時，請選擇 **PAL** 或 **NTSC**。

DivX VOD 註冊 - 此功能表用於產生 DivX VOD 註冊代碼。請造訪 <http://vod.divx.com> 進行註冊並獲取技術支援。

分組數據連線 - 設定分組數據連線。


瀏覽器設定 - 設定瀏覽器相關值。

串流播放設定 - 您的網絡商已經為您儲存此資訊。若要變更此設定，可對其進行編輯。

Java 設定 - 可讓您設定 Java 程式的連接情景模式，以及檢視認證。

使用記憶體管理

KM900 配備三種可用記憶體：手機、智能咭和外置記憶體（可能需要另行購買）。您可以使用記憶體管理確定如何使用各記憶體，且查看可用的空間。

從桌面選擇 ，然後捲動至「設定」標籤中的**手機設定**。選擇**記憶體管理**。

手機共用記憶體1/2 - 檢視 KM900 手機上可用於多媒體訊息、電子郵件、Java 應用程式和其他的記憶體。

手機多媒體記憶體 - 檢視可用於多媒體內容的記憶體，例如圖片、聲音、影片和Flash內容、文件或其他。

手機預留記憶體 - 檢視手機上可用於文字訊息、通訊錄、日曆、待辦事項、備忘錄、鬧鐘、最近的記錄、書籤及其他項目的記憶體。

智能咭記憶體 - 檢視智能咭上的可用記憶體。

外置記憶體 - 檢視外置記憶咭上的可用記憶體（可能需要另行購買）。

01

02

03

04

05

06

07

08

設定

使用飛航模式


透過依次選擇  和 **設定**，開啟飛航模式。點按 **情景模式**，然後選擇 **飛航模式**。

飛航模式下無法進行通話、連接互聯網、發送訊息或使用藍芽。

使用藍芽收發檔案

藍芽是一種收發檔案的好方法，因為不需要USB線，且連接方便快捷。您亦可連接到藍芽手機，以接聽來電。

發送檔案：

- 1 開啟要發送的檔案，通常為照片、影片或音樂檔案。
- 2 點按 ，然後選擇**發送**。選擇**藍芽**。
- 3 若您已配對藍芽裝置，KM900 將不會自動搜尋其他藍芽裝置。否則，KM900 手機將搜尋範圍內其他已啟用藍芽功能的裝置。
- 4 選擇要將檔案發送至的裝置並點按以選擇。
- 5 您的檔案將會送出。


提示！ 留意進度列，確定檔案已發送。

接收檔案：

- 1 要接收檔案，必須將藍芽設定為**開啟**。參閱以下的**變更您的藍芽設定**，了解更多詳情。
- 2 系統顯示一則訊息，提示您接受來自寄件者的檔案。點按**是**以接收檔案。
- 3 您可查看到檔案儲存位置並選擇檢視檔案。檔案通常儲存於「我的檔案」中的相關資料夾中。

變更您的藍芽設定

1 從桌面選擇 ，然後捲動至「設定」標籤中的**藍芽**。

2 點按 。

對以下選項作出變更：

我的裝置資訊 - 為 KM900 手機輸入名稱。

顯示我的手機 - 選擇**可見**或**隱藏**或**可見時間為一分鐘**。

遠端智能咕模式開啟 - 啟用遠端智能咕模式。

iSync 開啟 - 選擇啟用 iSync。

刪除 - 選擇刪除選定的情景模式。

刪除全部 - 選擇刪除全部情景模式。

支援的服務 - 請參閱與不同服務相關聯的藍芽使用選項。

01

02

03

04

05

06

07

08

設定

同其他藍芽裝置配對

透過將 KM900 手機與其他裝置配對，您可設定一個密碼保護連接。這將有助於使配對更為安全。

- 1 檢查藍芽是否為**開啟**。
您可在**設定**功能表中變更手機的可見狀態。
- 2 點按**搜尋**。
- 3 KM900 手機將搜尋裝置。完成搜尋後，**重新整理**將顯示在屏幕上。
- 4 選擇要配對的裝置並輸入密碼，然後點按**確定**。
- 5 然後，手機將連接到其他裝置，且您必須在此裝置上輸入相同的密碼。
- 6 密碼保護藍芽連接現已準備就緒。

使用藍芽耳機

- 1 檢查藍芽是否為**開啟**。
- 2 遵循隨耳機附帶的說明，將耳機置於配對模式中並配對裝置。
- 3 耳機將自動切換至「耳機」情景模式。
- 4 點按**每次必須問我或不需問就許可**。

提示! 請參閱第 30 頁，了解有關**藍芽接聽模式**的詳情，以便在連接藍芽耳機時，可以控制如何接聽通話。

Wi-Fi

「無線管理員」可用於根據裝置上的 Wi-Fi (無線 LAN) 管理互聯網連接。它容許手機連接本地無線網絡或無線存取互聯網。相對於藍芽無線技術, Wi-Fi 更快、範圍更廣, 且可用於快速收發電子郵件或瀏覽互聯網。

注意: KM900 手機支援 WEP、WPA-PSK/2 加密, 不支援 EAP、WPS 加密。如果 Wi-Fi 服務供應商或網絡管理員設定網絡安全性的加密, 您應在快顯視窗中填入對應密鑰。如果尚未設定加密, 則系統不會顯示此快顯視窗。您可透過 Wi-Fi 服務供應商或網絡管理員獲取此密鑰。

1. 如何設定 Wi-Fi

- 1 點按「設定」標籤中的 Wi-Fi 並開啟 Wi-Fi。
- 2 AP (存取點) 搜尋
 - 搜尋 Wi-Fi 可連接至的 AP。
- 3 AP 連接
 - 透過 AP 搜尋清單連接至所需的 AP。
 - 若 AP 的安全種類為 WEP 或 WPA-PSK/2, 請輸入安全密鑰。

2. Wi-Fi 網絡設定檔支援

- 1 Wi-Fi 設定檔支援 (如何連接至常用 AP 或隱藏 AP)
 - 1) 若 AP 未出現於搜尋清單中, 您可透過將其另存為設定檔進行連接。

01

02

03

04

05

06

07

08

Wi-Fi

- 2) 將常用 AP 儲存為設定檔，有助於在連接至該安全種類的 AP 時更容易地輸入安全密鑰。
 - 3) 若此 AP 不支援 DHCP，您可使用靜態 IP 位址連接至該 AP。
- 2** Wi-Fi 設定檔中各個欄位的說明。
- 1) 網絡名稱：SSID (ID)
 - 2) 安全種類：WEP、WPA-PSK/2 支援。
 - 3) 安全密鑰：儲存安全密鑰。
 - 4) IP/DNS 設定：可將此欄位設定為「自動」或「靜態」，具體取決於 AP 是否支援 DHCP。
對於「靜態」，請輸入 IP 位址欄位值，以及連接時隨靜態 IP 位址一起使用的 DNS 伺服器。

3 如何儲存 Wi-Fi 設定檔

- 1) 從「選項」功能表中選擇「已儲存網絡」，然後選擇新網絡並在各個欄位中輸入值。
- 2) 您可透過選擇開啟 Wi-Fi，然後選擇「重新整理」（搜尋 AP）來選擇並儲存 AP 搜尋清單。
- 3) 連接到此安全種類的 AP 後，將自動儲存設定檔。

3. 如何獲取 MAC 地址

為了使用 MAC 篩選功能設定某些無線網絡連接，您可能需要在路由器中輸入 KM900 手機的 MAC 地址。

- 1 點按「設定」標籤中的 Wi-Fi，然後開啟選項功能表。
- 2 選擇「我的 MAC 地址」，將顯示此地址。

軟件更新

軟件更新

LG 手機軟件更新程式

有關安裝和使用此程式的更多資訊，請瀏覽 <http://update.lgmobile.com>。

此功能可讓您在互聯網上快捷方便地將軟件更新到最新版本，而無需造訪我們的服務中心。

由於手機軟件更新程式在更新過程中需要用戶格外留意，因此，在繼續下一步操作之前，請務必仔細閱讀各步驟中顯示的任何說明和注意事項。請注意，在更新過程中移除 USB 線或電池可能會對手機造成嚴重損壞。由於製造商不會為更新過程中的數據損失承擔任何責任，建議您事先備份好任何重要數據，以策安全。

01

02

03

04

05

06

07

08

配件

您的手機配有各種配件，您可能需要對此單獨購買。您可以根據您的個人通訊要求選擇這些選項。請向您的本地經銷商查詢供應情況。（以下項目為可選配件。）

充電器



USB 線及光碟

連接並同步您的 KM900 和電腦。



電池



立體聲 耳機



使用手冊

更多了解
KM900。



注意：

- 只可用原裝 LG 配件。
- 不使用原裝 LG 配件，保養可能失效。
- 不同地區可能有不同的配件。

網絡服務

本手冊所述之無線手機經認可適用於 E-GSM 900、DCS 1800、GSM 850、PCS1900 及 W-CDMA 網絡。手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

DivX VOD 註冊

產生 DivX VOD 註冊碼。

請瀏覽 <<http://vod.divx.com/>>，進行註冊並獲得技術支援。

技術數據

一般

產品名稱：KM900

系統：E-GSM 900 / DCS 1800 /
GSM 850 / PCS 1900 / WCDMA

環境溫度

最高：+55° C (放電)，
+45° C (充電中)

最低：-10° C

01

02

03

04

05

06

07

08

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

KM900

Trade Name

LG



Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.6.1 / EN 301 489-7 V1.3.1 / EN 301 489-9 V1.3.1 / EN 301 489-17 V1.2.1 /
EN 301 489-19 V1.2.1 / EN 301 489-24 V1.3.1
EN 60950-1: 2001
EN 50360 / EN 50361: 2001
EN 301 511 V9.0.2 / EN 301 908-1 V3.2.1 / EN 301 908-2 V3.2.1
EN 300 328 V1.7.1
EN 301 357-1 V1.4.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director 8, January, 2009

Signature of representative

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

射頻能量暴露準則

無線電波暴露以及比吸收率 (SAR) 資訊。本手機型號 KM900 經設計符合無線電波暴露適用的安全要求。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。

- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.602 W/kg (10g)，攜帶於身上時的最高 SAR 值則為 0.646 W/kg (10g)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

安全及有效使用準則

產品護理及維修

警告

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 請遠離電視、收音機或電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。

- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。

有效手機操作

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。

安全及有效使用準則

- 如有免提聽筒套件，請使用免提聽筒套件。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子設備，例如立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

玻璃部件

手機的部分部件采用玻璃製成。若手機墜落至堅固表面或受到硬物碰撞，玻璃會破碎。若玻璃破碎，則切勿觸碰或企圖移除玻璃。應停止使用手機，直到經由授權服務供應商更換玻璃才能再次使用。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請關閉手機並啟用飛行模式。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無需完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。

安全及有效使用準則

- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

故障排解

本章列出了您在使用手機過程中可能會遇到的一些問題。有些問題需要您向服務供應商尋求支援，但多數問題可自己輕鬆解決。

訊息	可能原因	合理的解決方案
智能咭錯誤	手機中沒有智能咭，或者智能咭插入方式不正確。	請確保智能咭正確插入。
無網絡連接	訊號較弱 位于 GSM 網絡覆蓋範圍之外	將手機移至窗戶旁邊或空曠之地。 諮詢服務供應商，了解服務區域地圖。
代碼不匹配	要變更安全密碼，需要再次輸入新密碼進行確認。	聯絡服務供應商。
無法設定功能	服務供應商不支援此功能或功能需要註冊	聯絡服務供應商。
無法撥打電話	撥號錯誤 新插入的智能咭已達通話費用上限	未獲得新網絡的使用授權。查看新的限制條款。聯絡服務供應商或使用 PIN 2 碼重設限制。
無法開機	按下開啟/關閉鍵的時間不夠長 電池已耗盡 電池觸片不潔淨	按開啟/關閉至少兩秒鐘。 對手機進行更長時間的充電。 對觸片進行清潔。

故障排解

訊息	可能原因	合理的解決方案
充電錯誤	電池完全無電	為電池充電。
	不在適當溫度範圍內	確定室溫合適，稍候再充電。
	接觸問題	檢查電源及其與手機的連接。檢查電池觸片，必要時進行清潔。
	電源無電	插入到其他插座或檢查電壓。
	充電器故障	如果充電器沒有反應，請更換充電器。
手機失去網絡連接	使用不當充電器	只可使用原廠 LG 配件。
	電池故障	更換電池。
	訊號太弱	自動重新連接到其他服務供應商。
號碼不允許	固定撥號功能已開啟。	檢查設定。



视话机软件改良或不同服务提供商而定，本手册中的部分内容可能与您的手机有所不同，并不会另行通知。

KM900 用户指南



恭喜您购买此款功能先进、外观小巧的 LG
KM900 手机，它采用了最新的数碼移动通信技术，专注于为您提供便利的操作。

设置 01

主屏 02

基本功能 03

高级功能 04

管理功能 05

网络 06

设置 07

配件 08

内容

设置

开始了解您的手机.....	8
安装 SIM 卡和电池.....	10
存储卡.....	12

主屏

触摸屏提示.....	14
自定义主屏.....	15
快速键.....	16
触摸屏.....	17
使用多任务功能.....	21

基本功能

通话.....	22
拨打电话或视频电话.....	22
致电电话本中的联系人.....	22
接听和拒绝电话.....	22
通话选项.....	23
调节音量.....	24

单键拨号.....	24
拨打第二个电话.....	24
关闭 DTMF.....	25
使用呼叫转接.....	26
使用呼叫限制.....	26
更改常用通话设置.....	27
更改视频通话设置.....	27

信息.....	28
信息.....	28
发送信息.....	28
进入文本.....	29
T9 预测.....	29
Abc 手动.....	29
更改电子邮件设置.....	29
信息文件夹.....	30
使用模板.....	30
使用图释.....	31
更改文本信息设置.....	31
更改多媒体信息设置.....	32

高级功能

相机.....	33	多媒体.....	45
拍照后.....	33	图片.....	45
了解取景器.....	34	发送照片.....	45
使用闪光灯.....	35	使用图像.....	45
调节曝光.....	35	打印图像.....	46
使用高级设置.....	36	移动或复制图像.....	46
使用内置相机.....	38	创建幻灯片.....	46
摄像机.....	39	相片定位.....	47
拍摄视频后.....	39	查看内存状态.....	47
了解取景器.....	40	声音.....	47
调节曝光.....	41	使用声音.....	47
使用高级设置.....	41	视频.....	47
在电视上观看视频.....	42	发送视频剪辑.....	48
照片和视频.....	43	游戏和应用程序.....	48
查看视频或照片时使用缩放.....	43	玩游戏.....	48
观看视频时调节音量.....	43	使用 M-Toy 菜单.....	48
将照片设为墙纸.....	43	Flash 内容.....	48
编辑照片.....	43	查看 SWF/SVG 文件.....	48
		文档.....	49
		查看文件.....	49
		其它.....	49

内容

创建电影.....	49
音乐.....	50
播放歌曲.....	50
使用收音机.....	50
搜索电台.....	51
重设频道.....	51

管理功能

管理器.....	52
将事件添加到日历中.....	52
更改默认日历视图.....	52
向任务列表添加项目.....	53
使用日期计算器.....	53
设置闹钟.....	54
添加备忘录.....	54
语音备忘录.....	54
录制声音或语音.....	55
发送录音.....	55
使用计算器.....	55
换算单位.....	56

使用秒表.....	56
向世界时间添加城市.....	56

网络

浏览器.....	57
访问网页.....	57
添加并访问书签.....	57
使用 RSS 阅读器.....	58
访问已保存页面.....	58
查看浏览器历史记录.....	58
更改网络浏览器设置.....	59
将手机用作调制解调器.....	59
访问 Google 地图.....	60

设置

更改屏幕设置.....	61
更改情景模式.....	61
更改手机设置.....	62
更改触摸设置.....	62
更改连接设置.....	63
使用内存管理器.....	64

使用飞行模式	65
使用蓝牙发送和接收文件	65
更改蓝牙设置	66
与其它蓝牙设备配对	66
使用蓝牙耳机	67
Wi-Fi	68
软件更新	70
配件	71
网络服务	72
技术参数	72
准则	
关于安全有效使用手机的准则	74
故障诊断	80

开始了解您的手机

电池释放按钮

免提或立体声耳机连接器

电源键

开机/关机。

听筒

近程传感器

内置相机


结束键

- 拒接来电。
- 按一次返回主屏。

多任务键

通话键

拨打电话号码并接听来电。

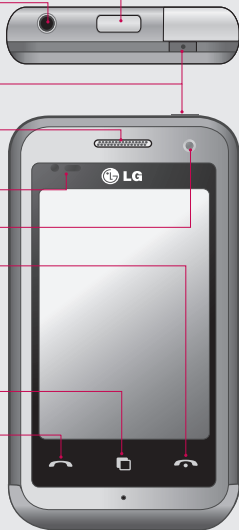

⚠ 警告：在手机上放置重物或坐在手机上可能会损坏手机的LCD屏幕及触摸屏的功能。不要在LCD的进程传感器上使用保护膜。这可能会影响传感器的感应度。



充电器, 数据线 (USB
数据线)

提示: 连接 USB
数据线之前, 请等
到手机开机并注册
网络。



音量键

- 屏幕处于待机模式时:
按键音音量。
- 在通话过程中: 耳机音
量调节。
- 播放曲目时: 连续控制
音量。

相机键

- 长按该键直接转到相机
菜单。

01

02

03

04

05

06

07

08

安装 SIM 卡和电池

1 卸下电池盖

按住手机顶部的电池释放按钮，将电池盖滑出。



2 取出电池

抬起电池顶端，小心将电池从电池室取出。




⚠ 警告：手机开机时，不要取出电池，这可能会损坏手机。

⚠ 警告：使用 GPS、Wi-Fi 或蓝牙时，不要打开电池盖。天线置于电池盖上。

3 安装 SIM 卡

将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 SIM 卡，请向外轻推即可。

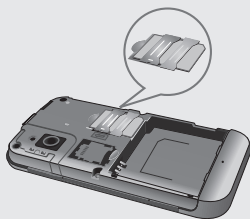


4 安装电池

先将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底部，直至电池卡入到位。



5 滑开 KM900 侧面的充电器连接装置盖。插入充电器并插入电流插座。只有屏幕上显示“电量已满”信息，KM900 充电才完成。

备注：第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。忽略第一次出现的“电量已满”信息，将手机电池充整整一个晚上（或最长 14 个小时）。

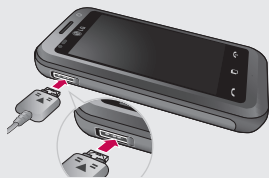

01

02

03

04

05

06

07

08

存储卡





安装存储卡

使用存储卡，可以扩展手机的可用存储空间。

备注：存储卡是可选配件。

将存储卡滑入插槽顶部，直到卡入到位。请如图指示。


⚠ 警告： 将存储卡滑入插槽，否则会损坏存储卡。

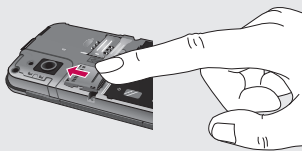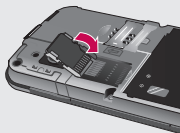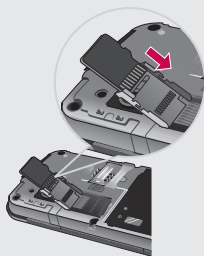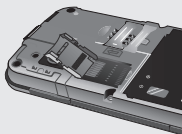

格式化存储卡

您的存储卡已格式化。如果没有，您需要在使用的先对其进行格式化。


备注：格式化将删除所有文件。

- 1 从主屏中，选择 ，然后从“设置”选项卡中选择**手机设置**。
- 2 滚动并点触存储管理器，然后滚动并选择外部存储器。
- 3 点触**格式化**，然后确认选择。
- 4 输入密码（如果已设置）。存储卡完成格式化，现在，您可以使用了。

备注：如果存储卡中包含内容，由于格式化后将删除所有文件，所以文件夹结构会有所不同。

传输电话本

将电话本从 SIM 卡传输到手机：

- 1 从“通信”选项卡滚动到**电话簿**，选择 ，然后选择**更改位置**。
- 2 点触**复制到手机**。
- 3 选择**全部标记**，或逐个选择姓名，然后点触**复制到手机**。

01

02

03

04

05

06

07

08

主屏

您可以通过此屏幕进入菜单选项、拨打电话、查看手机状态等。

触摸屏提示


您也可以在主屏上熟悉使用触摸屏。

要选择项目，请点触图标中心位置。

- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。
- 屏幕灯关闭后，按电源键或长按触摸屏上的解锁/锁定键可以返回主屏。
- 不使用 KM900 时，将返回锁定屏幕。

自定义主屏

- 1 快捷键主屏
- 2 小工具主屏 (活动)
- 3 电话本主屏
- 4 多媒体主屏

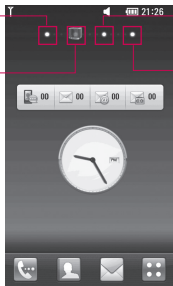

- **与 KM900 互动** - 用户界面基于四种不同类型的主屏提供。要在不同的主屏之间切换，从左到右或从右到左快速摩擦屏幕即可。
- **主屏自定义** - 对于每种类型的主屏，您可以通过长按屏幕添加和删除对象，若已添加，则可以长按其中的一个对象来执行添加和删除操作。



01

02

03

04

05

06

07


08

主屏

快速键

通过主屏上的快速键，您点触一次即可轻松进入经常使用的功能。



点触可打开触摸拨号键盘，以拨打电话。使用标准键盘输入数字，然后点触语音呼叫或轻触 。

要向此号码拨打视频电话，请在输入号码后点触**视频通话**。



点触可以打开电话本。要搜索您要呼叫的号码，请使用键盘输入联系人姓名。您也可以创建新的联系人以及编辑现有联系人。



点触可以进入**信息**选项菜单。在此，您可以创建新的短信。



点触可以打开完整顶层菜单，该菜单被划分为四个类别。

触摸屏

KM900 触摸屏上的控件会动态更改，具体取决于您执行的任务。

打开应用程序

要打开任何应用程序，轻触其图标即可。



滚动

来回拖动即可滚动。在主屏上，如访问网页时，您还可以上下滚动。



01

02

03

04

05

06


07

08

主屏

放大或缩小

查看照片、网页或地图时，您可以放大或缩小。收放五指。

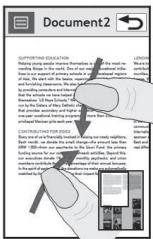

查看状态栏

状态栏使用不同的图标显示各种条件，如信号强度、新信息、剩余电量以及蓝牙或数据连接是否已激活。

下表说明了您可能在状态栏中看到的不同图标的涵义。

图标	说明
	无服务
	2G
	3G
	边缘
	HSDPA
	Wi-Fi 打开
	蓝牙信息
	蓝牙单声道免提耳机
	蓝牙单声道立体声耳机
	蓝牙立体声耳机
	蓝牙单声道耳机
	蓝牙打开
	通过蓝牙打印

图标	说明
	蓝牙传输
	蓝牙可见性
	蓝牙音乐
	正在下载
	下载完成。
	下载已取消。
	通话选项
	互联网
	正在搜索
	呼叫转接
	拒接来电
	安全性
	耳机
	所在时区
	正在漫游
	闹钟
	日程表 (日历)
	多项工作
	音乐已暂停

01

02

03

04







05

06

07


08

主屏

图标	说明
	正在播放音乐
	正在播放 FM 收音机
	正在发送电子邮件
	收到电子邮件
	彩信
	正在发送彩信
	收到彩信
	正在发送短信
	新语音邮件
	新信息
	信息发送失败
	新电子邮件
	Push 信息
	飞行模式
	户外
	静音

图标	说明
	自定义铃声 1-10
	外部存储器
	电池状态
	电视输出

使用多任务功能

点触多任务硬件  可打开**多任务**菜单。在此，您可以查看正在运行的多个应用程序并通过一次点触即可访问它们。



01

02

03

04

05

06




07



08


通话

提示! 轻按电源键锁定触摸屏，避免意外拨出电话。



拨打电话或视频电话

- 1 点触  以打开键盘。
- 2 在键盘上键入号码。要删除一个数字，请按清除键。
- 3 点触  键拨打电话。
- 4 要结束通话，请点触  键。


提示! 要输入+以拨打国际电话，请点触  两次，或长按 。

提示! 通过点触 ，您可以保存号码、发送信息、搜索电话簿。

致电电话本中的联系人


- 1 从主屏点触  以打开电话本。
- 2 在联系人列表间滚动，或点触  输入您要呼叫的联系人的首字母。
- 3 从列表点触您要呼叫的联系人，如果该联系人有多个号码，请选择您要使用的号码。
- 4 点触语音呼叫或视频通话。

接听和拒绝电话


电话铃响起时，按  硬键接听。

按  硬键两次拒接来电。

通话选项

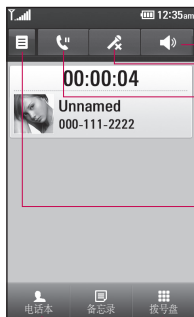


扬声器 - 点触  打开手机扬声器。

静音 - 点触  关闭麦克风，与您通话的对方将听不到您的声音。

保持 - 点触  保留通话。

选项 - 从列表中选择其它来电选项，包括“新建备忘录”和“转到信息”，以便您在通话过程中查看信息和电话本。您也可以通过点触结束通话来结束通话。

 - 点触可以打开数字键盘以键入数字，例如，呼叫呼叫中心或其它自动电话服务时。

 - 在通话过程中添加备忘录。

 - 在通话过程中搜索联系人。

01

02

03

04

05

06

07

08



通话


调节音量

要调节通话过程中的音量，请使用手机右侧的向上和向下按钮。




单键拨号

您可以为常用联系人指定快速拨号号码。

- 1 从主屏点触  以打开电话簿。
- 2 点触 ，选择**快速拨号**。
- 3 语音邮件已设为快速拨号 1。不能对此设置进行更改。点触任意其它号码，为其指定快速拨号联系人。
- 4 此时将打开联系人列表。点触要指定到该号码的联系人电话号码一次，以选择该联系人。

要拨打快速拨号号码，请从主屏点触 ，然后按住为其指定的号码，直到屏幕上显示该联系人。无需点触语音呼叫即自动拨出电话。

拨打第二个电话


- 1 在第一个通话过程中，点触 ，选择您要拨打的号码。
- 2 拨打号码或搜索联系人。
- 3 点触  以连接通话。
- 4 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 5 要结束其中一个通话或全部结束，请按 。



备注：您需要对每通电话付费。

关闭 DTMF

DTMF 允许您使用自动通话中的数字命令导航。DTMF 默认为打开。

要在通话过程中关闭它（记下某个电话号码），请点触 , 然后选择停用双音多频。”

查看通话记录

从主屏点触 , 然后点触“通信”选项卡中的近期记录。

从以下选项中选择：


所有记录 - 查看所有已拨电话、已接来电和未接来电的完整列表；仅限语音通话；视频通话和信息。

未接来电 - 查看您没接到的所有电话的列表。

仅限通话 - 查看所有您拨打及未接来电的列表。

仅限信息 - 查看您收到或发出文本和多媒体信息的号码。

仅限视像通话 - 查看所有视频通话的列表。

提示！ 从通话记录中点触  及**全部删除**以删除所有录制的项目。

提示！ 点触任意单个通话记录条目，以查看通话日期、时间和时长。

01

02

03

04

05


06

07

08

通话


使用呼叫转接

- 1 点触  并选择“设置”选项卡中的**通话设置**。
- 2 点触**呼叫转接**，然后选择**语音通话**和/或**视频通话**。
- 3 选择转接电话的情况：转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。
- 4 点触**启动**以启动。
- 5 输入要转接至的号码。

备注：转接呼叫将收取一定费用。有关详细信息，请联系您的网络运营商。


提示！ 要关闭所有通话转接，请从呼叫转接菜单中选择全部停用。

使用呼叫限制

- 1 点触  并选择“设置”选项卡中的**通话设置**。
- 2 点触**呼叫限制**，然后选择**语音通话**和/或**视频通话**。
- 3 选择以下五个选项中的一项或所有项：
 - 所有拨电**
 - 国际电话**
 - 主国以外的国际拨电**
 - 所有来电**
 - 国际漫游时来电**
- 4 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

提示！ 选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要提供 PIN2 码，此密码由运营商提供。仅可以使用手机拨打此号码列表中的号码。

更改常用通话设置

- 1 点触  并选择“设置”选项卡中的**通话设置**。
- 2 点触**共同设置**。此菜单允许您更改以下设置。

拒接来电 - 向左滑动开关以选择**开**。您可以点触**拒绝列表**选择所有通话、特定联系人或群组，或来自未注册号码的呼叫（即，不在您电话本中的联系人）。

发送本机号码 - 选择是否要在拨出电话时显示您的号码。


自动重拨 - 向左滑动开关为**开**，向右滑动开关为**关**。

分钟提示 - 向左滑动开关为**开**，在通话过程中每隔一分钟将听到提示音。

蓝牙接听模式 - 选择**免提**可使用蓝牙耳机接听来电，或选择**手机**按手机任意键接听来电。

保存新号码 - 选择**开**或**关**以保存新号码。

更改视频通话设置

- 1 从主屏中点触 ，然后滚动到“设置”选项卡下的**通话设置**。
- 2 点触**视频通话设置**，然后针对视频通话选择不同设置。确定是使用静态图像还是选择一个，以及/或者在进行视频通话时是否要打开镜像以在屏幕上看到自己。

01

02

03

04

05

06

07



08

信息


信息

KM900 将短信、彩信结合到一个直观易使用的菜单中。


有两种方式进入信息中心：

- 1 从主屏点触  或 ，然后滚动到“通信”选项卡下的**信息**。

发送信息

- 2 点触 ，然后点触新建信息打开空白信息。
- 3 点触**收件人**输入收件人号码，或打开电话本或收藏夹。您可以添加多个联系人。完成后，点触下面的信息框开始撰写信息文本。
- 4 输入文本后，您可以通过点触信息顶部的发送按钮发送短信。

提示！ 您将按每个收件人每条文本信息 160 个字符付费。

- 5 点触  插入添加文本模板、多媒体模板、表情符、姓名和号码、新幻灯片、主题或签名。

警告： 160 个字符的限制在不同国家/地区有所不同，具体取决于短信编码方式。


警告： 如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。


进入文本


键盘

 点触可以打开 T9 预测文本。


 点触以更改编写语言。

 点触以在数字、符号和文本键盘间切换。

使用  以各种文本输入模式（例如，大写字母或小写字母）在不同键盘间滚动。

要输入空格，请点触 。

T9 预测

在 T9 模式中，您将看到 。

T9 模式使用内置字典，根据您点触按键的顺序识别您写入的内容。只需点触与您要输入的数字键即可，随着您的键入内容，字典将预测您想要使用的单词。


例如，依次按 8、3、5、3、7、4、6、6 和 3 输入“telephone”。

Abc 手动

在 Abc 模式中，要输入字母，您必须重复点触按键。例如，要写入“hello”，需要点触两次 4、两次 3、三次 5，再点触三次 5，最后点触三次 6。

更改电子邮件设置

您可以根据个人需要更改电子邮件设置。

- 1 从主屏点触 ，然后滚动到“设置”选项卡下的**信息设置**。
- 2 选择**电子邮件**。
- 3 您可以调整以下设置：

电子邮件帐户 - 管理您的电子邮件帐户。

允许回复电子邮件 - 选择是否允许发送已读确认信息。

请求回复电子邮件 - 选择是否要请求读取确认邮件。

01

02

03

04

05

06

07

08

信息

读取间隔时间 - 选择 KM900 检查新电子邮件信息的频率。

转发或回复时包括信息 - 选择在回复时是否要包括原始邮件。

包含附件 - 选择在回复中是否包含原始附件。

漫游时自动检索 - 选择在国外（漫游）时是否自动检索邮件。

新电子邮件通知 - 选择收到新电子邮件时，是否以弹出信息的形式进行通知。

签名 - 创建电子邮件签名并打开此功能。

信息文件夹

您可以识别 KM900 中的文件夹结构，完全无需进行说明。如果设置电子邮件帐户，您可以为每个帐户设置不同文件夹。

收件箱 - 接收到的所有信息将放置在收件箱中。在此，您可以查看和删除信息，还提供一些其它功能。

发件箱 - 这是发送信息时的临时存储文件夹。

已发送 - 您发送的所有信息将放置在此文件夹。

草稿箱 - 如果您来不及写完一条信息，您可以将已写信息保存在此文件夹中。

线程框 - 通过 Messenger 与其它方交换的信息。您可以同时保存图像和信息。

我的文件夹 - 创建文件夹以存储信息。

使用模板

为您最常使用的短信和彩信创建模板。手机中已包含一些模板，您可以对其进行编辑。

- 1 写新信息时，您可以从选项菜单中的**插入**进入**模板**。
- 2 选择**文本模板**或**多媒体模板**。您可以添加、编辑、删除或删除所有模板。要编辑信息，

请选择并进行修改，然后点触模板。

使用图释

使用图释，使您的信息更具趣味性。手机中已有一些常用图释。

- 1 写新信息时，您可以从选项菜单中的**插入**进入**表情符**。
- 2 您可以通过点触**新图释**添加新图释。

更改文本信息设置

KM900 已预定义信息设置，因此，您可以立即发送信息。可以根据您的个人需要更改这些设置。滚动到“设置”选项卡下的**信息设置**，然后点触**文本信息**。您可以更改以下内容：

文本信息中心 - 输入信息中心的详细信息。

发送报告 - 向左滑动开关，在对方收到您发送的信息时接收确认。

有效期 - 选择信息在信息中心中的最长保存时间。

信息类型 - 将文本转换为**语音**、**传真**、**X.400** 或**电子邮件**。

字符编码 - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

将长文本另发送为 - 选择是以多条短信还是一条彩信发送长信息。

Microsoft Exchange 电子邮件

电子邮件地址 - 输入帐户的电子邮件地址。

服务器地址 - 输入帐户的服务器地址。

用户名 - 输入帐户的用户名。

密码 - 输入帐户密码。

域 - 输入域(任意)。

要同步的邮件日期 - 选时间同步邮件。

使用 SSL - 选择是否使用SSL

网络设定 - 选择网络设定。

01

02

03

04

05

06

07

08

信息

保存在“已发送”中 - 选择是否将电子邮件保存到服务器。

Push - 选择是否用Push电子邮件。

提示! 如开启WiFi, 电邮会以WiFi接收。

更改多媒体信息设置

KM900 已预定义信息设置, 因此, 您可以立即发送信息。可以根据您的个人需要更改这些设置。在**设置**选项卡中选择**信息设置**和**多媒体信息**。您可以更改以下内容:

读取模式 - 选择**本地网络**或**漫游网络**。如果选择“手动”, 您将仅接受有关彩信的通知。之后, 您可以决定是否要完整下载它们。

备注: 漫游时, 如果下载彩信将产生一定费用。

发送报告 - 选择是否允许请求发送报告。

已读回执 - 选择是否允许发送已读回执。

优先级 - 选择多媒体信息的优先级级别。

有效期 - 选择信息在信息中心中的最长保存时间。

幻灯片持续时间 - 选择幻灯片在屏幕上显示多长时间。


发送时间 - 选择信息发送前的等待时间。

多媒体信息中心 - 输入信息中心的详细信息。

相机

拍照后

拍好的照片将显示在屏幕上。图像名称将显示在右侧，同时还显示四个图标。

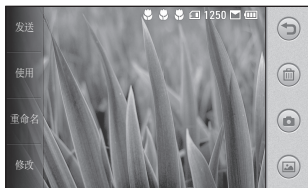

发送 点触可以 **信息、电子邮件、蓝牙或博客** 发送照片。有关发送信息的信息，请参阅，有关使用蓝牙发送和接收文件的信息，请参阅。

备注：漫游时，如果下载彩信将产生一定费用。


使用 点触以将图像用作墙。

重命名 点触以编辑选定图片的名称。

修改 点触各种工具以编辑图像。

 点触以返回上一个菜单。

 点触以删除图像。

 点触以立即拍摄其它照片。将保存您的当前照片。

 点触以查看保存的图片库。

01

02

03

04

05


06

07

08

相机


了解取景器

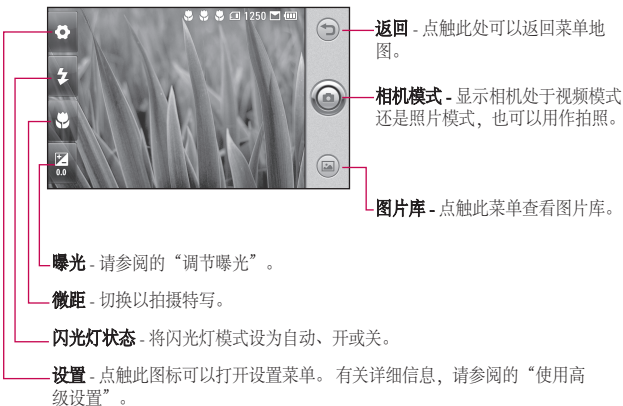

提示！ 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要调用选项，请再次点触屏幕。

使用闪光灯

默认闪光灯设置为“自动”，还提供了其它选项。

1 选择取景器左侧的  进入闪光灯子菜单。

2 有三个闪光灯选项：

自动 - 相机将自动评估拍摄好照片所需的光照条件，并在需要时使用闪光灯。

始终关闭 - 相机从不使用闪光灯。此选项有助于节省电池电量。

始终开 - 相机始终打开闪光灯。



3 点触所需选项时，闪光灯菜单将自动关闭，以便您立即拍照。

4 取景器中的闪光灯状态图标将根据您设置的新闪光灯模式而更改。

调节曝光

曝光定义图像的深浅区域差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。

1 点触 。

2 沿滚动条滑动对比度指示器， 对应对比度更低、更模糊的图像， 对应对比度更高、更清晰的图像。

01

02

03

04

05

06

07

08

相机

使用高级设置

从取景器中点触  以打开所有高级设置选项。

滚动转盘，您可以更改相机设置。选择选项后，点触**确定**按钮。

转换至 - 要自拍，请转换至 LG KU990 的内置相机。您还可以在相机模式和摄像机模式之间切换。

图像大小 - 更改照片大小以节约更多存储空间，或为联系人拍摄合适大小的图片。请参阅的**更改图像大小**。

色彩效果 - 选择要对新照片使用的色彩效果。请参阅的**选择色彩效果**。

白平衡 - 从以下选项中选择：**自动**、**白炽灯**、**日光**、**荧光灯**和**阴天**。

计时器 - 自拍器允许您设置按下拍摄按钮后的延迟。从**关**、**3秒**、**5秒**或**10秒**中选择。如果要为自己拍摄照片，此功能是理想之选。

拍摄模式 - 选择连拍模式。

ISO - ISO 确定相机的光照传感器的感光性。ISO 越高，相机感光性能越好。在您无法使用闪光灯而光线较差的条件下，此功能很有用。选择 ISO 值5：**自动**、**100**、**200**、**400**和**800**。

图像质量 - 在**超精细**、**精细**和**标准**之间选择。质量越精细，照片越清晰。同时文件更大，这意味着手机内存可保存的照片数更少。

已用存储器 - 选择是将照片保存到“手机内存”还是“外部存储器”。

隐藏图标 - 选择手动还是自动隐藏相机设置图标。

图像稳定器 - 您可以稳定相机以拍摄照片。

自动对焦 - 选择相机对焦方式。从以下选项选择：**单点测光**、**手动**和**人脸跟踪**。

快门声音 - 从四种快门声音中选择一种。

网格视图 - 从**关**、**2x2 网格**或**3x3 网格**中选择。

图像定位 - 开/关

重置 - 重置所有相机默认设置。

提示! 退出相机时，除图像大小和图像质量外，所有设置将恢复回默认设置。需要重置任何非默认设置，如色调和ISO。拍摄下一张照片之前，请先查看。

提示! 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量时，您将在设置菜单下预览到图像更改效果。

01

02

03

04

05

06



07


08

相机

使用内置相机

LG KM900 配备了 640x480 内置相机，可进行视频通话及拍照。

- 1 要切换到内置相机，请点触 ，然后从“预览”菜单中选择 **切换到 - 内置相机**。
- 2 几秒钟后，您将在取景器中看到您自己。要拍照，请像拍摄普通照片一样按下拍摄按钮。
- 3 拍照后，您可用的选项与使用主相机拍照后提供的选项一样。
- 4 要返回主相机，请点触 ，然后从“预览”菜单中选择 **外相机**。

提示! 内置相机下包含的设置较少，例如，它没有闪光灯或无法调节灵敏度。通过点触 ，您可以像使用主相机一样，改变图像大小、色彩效果、图像质量、白平衡并设置自拍。

摄像机

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。屏幕底部将显示视频名称，同时在右侧显示四个图标。



播放 点触以播放视频。

发送 点触可以**信息**、**电子邮件**、**蓝牙**或**YouTube**发送照片。有关发送信息的信息，有关使用蓝牙发送和接收文件的信息。


备注：漫游时，如果下载彩信将产生一定费用。


使用 点触以将图像用作墙纸。


重命名 点触以编辑选定图片的名称。

修改 点触各种工具以编辑图像。

 点触以返回上一个菜单。

 点触可以删除您刚拍摄的视频，点触**是**确认。此时将出现取景器。

 点触立即拍摄其它视频。将保存您的当前视频。

 点触以查看保存的视频和图片库。

01

02

03

04

05

06

07

08

摄像机




了解取景器



提示！ 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要调用选项，请再次点触屏幕。

调节曝光

曝光定义图像的深浅区域差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。

- 1 点触 。
- 2 沿滚动条滑动曝光指示器，
 对应曝光度更低、更模糊的图像，
 对应曝光度更高、更清晰的图像。

使用高级设置

从取景器中点触设置以打开所有高级设置选项。

滚动转盘，您可以调节摄像机设置。选择选项后，点触确定按钮。

切换到 - 切换到 LG KM900 的内置相机以为自己拍摄视频。有关详细信息，请参阅的使用内置摄像机。

视频大小 - 更改保存在存储空间中的视频大小。请参阅的更改视频图像大小。

场景模式 - 从自动或夜间模式选择。

色彩效果 - 选择要对新视图使用的色彩效果。请参阅的选择色调。

白平衡 - 白平衡确保视频中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从自动、白炽灯、日光、荧光灯或阴天中选择。

摄像机

视频质量 - 在超精细、精细和标准之间选择。质量越精细，视频越清晰。同时文件更大，这意味着手机内存可保存的视频数更少。

长度 - 设置视频的长度限制。从标准和彩信中选择，以限制彩信最大大小。

提示! 如果长度选择“彩信”，请尝试选择较低的图像质量以拍摄更长视频。

已用存储器 - 选择是将视频保存到“手机内存”还是“外部存储器”。

语音 - 选择“静音”，录制视频而不录制声音。

声音对焦 - 选择声音对焦：关/外部对焦/内部对焦

隐藏图标 - 选择是自动还是手动隐藏相机菜单上的图标。

重置 - 重置所有摄像机设置。

在电视上观看视频

使用 TV 输出数据线，将 KM900 连接到电视。

备注: TV 输出数据线需单独购买。

照片和视频

查看视频或照片时使用缩放

查看照片或视频时，您可以通过收放五指放大和缩小。

观看视频时调节音量

要在视频播放过程中调节音量，请按扬声器符号，然后点触屏幕底部的音量栏。或者，使用手机侧面的音量键。

将照片设为墙纸


- 1 点触您要设为墙纸的照片两次，以打开它。
- 2 点触屏幕可以打开选项菜单。
- 3 点触 **作为**。
- 4 屏幕将切换到肖像模式。您可放大及缩小图片。


注意! 影片播放档案类型 avi 支持的最高解像度为 352 x 288 (CIF)


编辑照片


您可以对照片执行多项操作以更改、添加或修饰。

- 1 打开您要编辑的照片，点触 **修改** 显示选项。
- 2 点触图标以调整照片：

 裁切照片。选择方形或圆形裁切区域，使用手指移过选定区域。

 徒手对照片进行绘制更改。从四个选项中选择线条粗细，然后选择要使用的颜色。

 在图片上添加书写内容。请参阅的**为照片添加文本**。

 使用标记修饰照片。从不同标记中选择，点触照片中您要放置标记的位置。

01

02

03

04


05

06

07

08

照片和视频

 清除刚用手绘画的内容。您可以选择要使用的橡皮擦大小。

 点触可以返回图片库。

保存 保存您对照片所做的更改。选择保存所做更改的方式：**更新现有**或**新文件**。如果选择**新文件**，请输入文件名。

撤消 擦除您对照片所做的编辑。

图像 点触可以打开更多效果选项，包括**旋转**。此外还有一些高级编辑选项。请参阅的**添加色调**和**交换照片中的颜色**。

过滤器 点触以对照片应用效果选项。


调整 此时将使用自动色彩、亮度等对所拍图片进行调整。




多媒体

您可以将任意多媒体文件储存到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。

您也可以将文件保存到存储卡中。使用存储卡，您可以释放手机内存的空间。

要访问多媒体菜单，请点触 ，然后从“多媒体”选项卡中选择**我的文档**。您可以打开保存所有多媒体文件的文件夹列表。

提示! 要删除“我的文档”中的文件，请点触 ，然后点触**删除**。

图片



我的图像包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

发送照片

- 1 要发送照片，选择所需图片即可。
- 2 点触**发送**。在以下选项中选择：**信息**、**电子邮件**、**蓝牙**或**博客**。
- 3 如果选择**信息**或**电子邮件**，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将搜索可接收图片的设备。

使用图像

您可以选择图像以用作墙纸和屏幕保护程序，或用来识别呼叫者。

- 1 点触 ，然后从“多媒体”选项卡中选择**我的文档**。
- 2 点触**我的图像**。
- 3 选择图像并点触 。
- 4 点触**作为**并从以下选项中选择：
墙纸 - 设为按键锁屏幕的墙纸。

01

02

03

04

05

06

07

08

多媒体

电话本 - 将图像分配给联系人列表中的某人，当其呼叫时，您的手机上会显示该图片。



开机图像 - 设为开机时显示的图像。

关机图像 - 设为关机时显示的图像。

拨电图像 - 设为在拨出电话时显示的图像。



来电图像 - 设为在来电时显示的图像。

打印图像

- 1 点触 ，然后从“多媒体”选项卡中选择**我的文档**。
- 2 点触**我的图像**。
- 3 选择图像并点触 。
- 4 点触**打印**，然后在**蓝牙**和**图片直接打印**之间选择。



移动或复制图像

可在手机内存和存储卡间移动或复制图像。想要节省其中某一个的存储空间或避免图像丢失时，您可能需要执行此操作。

- 1 点触 ，然后从“多媒体”选项卡中选择**我的文档**。
- 2 点触**我的图像**。
- 3 点触 。
- 4 选择**移动**或**复制**。

创建幻灯片

如果要在手机上查看图像，您可以创建一个幻灯片显示，这样，您无需对每张图像都执行打开和关闭操作。

- 1 点触 ，然后从“多媒体”选项卡中选择**我的文档**。
- 2 点触**我的图像**。
- 3 点触 ，然后点触**幻灯片显示**。

相片定位



打开相机，体验手机的定位服务功能。

拍照并添加所在位置以对其进行标记。

如果将标记过的图片上传到支持相片定位功能的博客，您可以在地图上看到此照片。

查看内存状态


您可以查看已用存储空间和剩余存储空间。

- 1 点触 ，然后从“多媒体”选项卡中选择**我的文档**。
- 2 点触**我的图像**。
- 3 点触 ，然后点触存储器管理器。

声音

我的声音文件夹包含“下载的声音”、**预设声音**和**录音**。在此，您可以管理或发送声音，或者将声音设为铃声。


使用声音

- 1 点触 ，然后从“多媒体”选项卡中选择**我的文档**。
- 2 点触**我的声音**。
- 3 选择预设声音或下载声音。
- 4 选择声音，然后点触播放图标。此时将开始自动播放。
- 5 您可以选择**作为**菜单，将声音用于不同提示音。
- 6 在**语音铃声**、**视频铃声**和**信息提示音**之间选择。

视频

我的视频文件夹显示已下载的视频以及手机中录制的视频列表。

观看视频

- 1 点触 ，然后从“多媒体”选项卡中选择**我的文档**。
- 2 点触**我的视频**。
- 3 选择要播放的视频

01

02

03

04

05

06

07

08

多媒体

提示! KM900 支持 DivX 和 Xvid 视频格式，可播放更多文件内容。有关详细信息。

备注: TV 输出数据线需单独购买。


发送视频剪辑

- 1 选择视频，然后点触 。
- 2 点触**发送**并从**信息**、**电子邮件**、**蓝牙**和**YouTube**中选择。
- 3 如果选择**信息**或**电子邮件**，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将搜索可接收视频的设备。您也可以通过 YouTube 发送信息。

游戏和应用程序

您可以将新游戏和应用程序下载到手机中以供娱乐。

玩游戏

- 1 点触 ，然后从“多媒体”选项卡中选择**我的文档**。
- 2 点触**游戏或应用程序**菜单。
- 3 点触启动按钮启动游戏或应用程序。


使用 M-Toy 菜单

M-Toy 包含预装的 Flash 游戏，这些游戏使用集成运动传感器。

Flash 内容

“Flash 内容”文件夹包含所有默认和下载的 SWF 文件。


查看 SWF/SVG 文件

- 1 点触 ，然后从“多媒体”选项卡中选择**我的文档**。
- 2 点触**Flash 内容**。
- 3 选择要查看的文件。

文档

可以是 Excel、PowerPoint、Word、文本和 PDF 文件。


查看文件

- 1 点触 ，然后从“多媒体”选项卡中选择**我的文档**。
- 2 点触**文档**。
- 3 选择文档，然后点触**查看**。

其它

其它文件夹用于存储非图片、音频文件、视频、游戏或应用程序文件。其使用方式与**文档**文件夹相同。当您从电脑传输文件到手机时，您可能发现文件保存在**其它**文件夹中。如果这样，您可以移动文件。

创建电影

- 1 点触 ，然后从“多媒体”选项卡中选择**影片编辑器**。
- 2 点触**插入**以添加图像。
- 3 点触顶部的**样式**选项卡，然后选择一种影片样式。
- 4 点触屏幕上的**声音**选项卡以更改声音（例如，录音）。
- 5 点触**预览**按钮以查看结果。
- 6 点触屏幕上的**播放顺序**选项卡以更改顺序。
- 7 点触屏幕上的**保存**选项卡选择是否要保存影片，然后点触**使用**选项卡选择是保存还是另存为彩信。
- 8 要保存影片，请按**播放**，然后点触**保存影片**。

01

02

03

04

05


06

07

08

多媒体

音乐

LG KM900 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要进入音乐播放器，请点触 ，然后从“多媒体”选项卡中选择**音乐**。您可以在此访问多个文件夹：

所有歌曲 - 包含手机中的所有歌曲。



收藏夹 - 包含您保存为收藏的所有歌曲。





歌手 - 按艺术家浏览音乐集合。


专辑 - 按专辑浏览音乐集合。

流派 - 按流派浏览音乐集合。

播放歌曲

- 1 点触 ，然后从“多媒体”选项卡中选择**音乐**。
- 2 点触**所有歌曲**。
- 3 选择您要播放的歌曲，然后点触 。

- 4 点触  暂停歌曲。
- 5 点触  以跳到下一首歌曲。
- 6 点触  以返回到上一首歌曲。
- 7 点触  返回到**音乐**菜单。

提示! 要在聆听音乐时更改音量，请点触 。

使用收音机

LG KM900 拥有内置 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。



备注: 要收听收音机，您需要附加耳机。将耳机插入耳机插槽。



搜索电台

您可以手动或自动微调收音机电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您可以在手机中最多保存 30 个频道。



自动微调

- 1 点触 ，然后从“多媒体”选项卡中选择 **FM 收音机**。
- 2 点触 。

- 3 点触 **自动扫描**，然后点触 **是**。
选择 **设置**、**跳过**和**停止**，可为找到的电台分配一个频道编号。

备注：您也可以使用电台频率旁显示的转盘手动调节电台。

重设频道

- 1 点触 ，然后从“多媒体”选项卡中选择 **FM 收音机**。
- 2 点触 。
- 3 选择 **重新设置频道**以重设当前频道，或选择“**重新设置所有频道？**”以重设所有频道。如果重设所有频道，每个频道将返回为初始频率 87.5Mhz。

01

02

03

04

05



06


07


08

管理器



将事件添加到日历中

- 1 从主屏选择 ，然后滚动到“实用工具”选项卡下的**管理器**。选择**日程表**。
- 2 选择要添加事件的日期。
- 3 点触 ，然后点触**新建日程**。
- 4 点触**类别**，然后从**约会、周年纪念或生日**中选择。查看日期并输入事件开始的时间。
- 5 对于约会和周年纪念，您可以在下面的时间和日期框中输入事件结束的时间和日期。
- 6 如果您要为事件添加主题或备注，请点触**主题**，然后键入详细信息。
- 7 选择**设置闹钟**，为事件设置闹钟。如果要重复闹钟，请选择**重复设定**。

- 8 点触 ，将事件保存在日历中。日历中带颜色的方框将标记所有已保存事件的日期，在事件开始时间会有闹钟提醒，以便您进行安排。

提示! 您可以在日历中输入假期。逐个点击每个假期，然后点触  并选择**设置假期**。设为假期的每天将标记为红色。

更改默认日历视图

- 1 从主屏选择 ，然后滚动到“实用工具”选项卡下的**管理器**。在  中选择**设置**。
- 2 点触**默认视图**，然后选择日历、周、时间表或所有任务。



向任务列表添加项目

- 1 从主屏选择 ，然后滚动到“实用工具”选项卡下的**管理器**。
- 2 选择  和**新任务**，然后点击**备注**。
- 3 为任务项设置日期、添加备注，然后为其选择优先级：**高、中或低**。
- 4 选择  以保存任务。

提示！ 您可以将日历备份在电脑上或与电脑同步。

使用日期计算器

日期计算器是一款便捷的工具，有助于您计算特定天数后的日期。例如，从 10.10.09 往后的 60 天将是 09.12.2009。此功能有助于您跟踪时间表。

- 1 从主屏选择 ，然后滚动到“实用工具”选项卡下的**管理器**。
- 2 选择 ，然后选择**日期搜索器**。
- 3 在**自选**卡中设置所需日期。
- 4 在**之后**选项卡中，设置天数。
- 5 此时会在下面显示**天**。

01

02

03

04

05



06

07



08

管理器

设置闹钟

- 1 从主屏选择 ，然后滚动到“实用工具”选项卡下的**闹钟**。
- 2 如果要添加新闹钟，请点触**新建闹钟**。如果要设置闹钟以在一个小时内再次提醒，请点触**快速闹钟**。
- 3 设置您希望闹钟响起的时间。
- 4 选择是否要重复闹钟，设置重复和类型。
图标指示您选择的工作日。
- 5 选择**声音/振动**以选择所需闹钟类型。
- 6 点触**闹铃**选择闹钟铃声或声音。要试听声音，请点触声音，然后点触 。
- 7 为闹钟添加备忘录。

添加备忘录


- 1 从主屏选择 ，然后滚动到“实用工具”选项卡下的**备忘录**。
- 2 点触**新备忘录**。
- 3 键入备忘录，然后点触 。

提示! 您可以编辑现有备忘录。选择要编辑的内容，点触**编辑**，然后键入更改内容。

语音备忘录

使用录音机录制语音备忘录或其它音频文件。

录制声音或语音

- 1 点触 。
- 2 点触“实用工具”选项卡中的录音机。
- 3 点触 **播放** 开始录音。
- 4 点触 **停止** 结束录音。



- 5 如果要重新录制语音，请点触 **新建**。

发送录音

- 1 录音完成后，您可以点触**发送**发送音频剪辑。
- 2 从**信息**、**电子邮件**或**蓝牙**中选择。如果选择**信息**或**电子邮件**，录音将被添加到信息中，您可以照常撰写或发送信息。如果选择**蓝牙**，手机将搜索可接收录音的设备。

使用计算器

- 1 从主屏选择 ，然后滚动到“实用工具”选项卡下的**计算器**。
- 2 点触数字键输入数字。
- 3 对于简单计算，点触您所需的函数(+, -, x 或 ÷)，然后点触=。
- 4 对于复杂计算，请点触 ，然后在 **sin**、**cos**、**tan**、**deg**、**log** 等函数间选择。

01

02

03

04

05

06

07

08

管理器


换算单位

- 1 从主屏选择 , 然后滚动到“实用工具”选项卡下的工具。
- 2 选择**单位换算器**。
- 3 选择要换算的内容：**币种、面积、长度、重量、温度、体积/容量或速度**。
- 4 然后，选择单位并输入要对其进行换算的值。
- 5 此时，屏幕上将显示相应的值。

使用秒表

- 1 从主屏选择 , 然后点触**实用工具**。
- 2 选择**秒表**。
- 3 点触**开始**开始计时。
- 4 如果您要记录时间，请点触**圈**。
- 5 点触**停止**结束计时器。
- 6 点触**重设**重新开始计时。

向世界时间添加城市


- 1 从主屏选择 , 然后滚动到“实用工具”选项卡中的**世界时钟**。
- 2 点触  图标，然后选择**添加城市**。键入所需城市的名称，屏幕上将显示该城市。
- 3 点触城市以选定。该城市将添加到您的世界时间列表。

网络

浏览器

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐和下载的缤纷世界，您可以快速、直接地通过手机访问。畅行无阻、精彩无限。

访问网页

- 1 从主屏选择 ，然后滚动到“通信”选项卡下的**浏览器**。
- 2 要进入浏览器主页，请选择**主页**。或者，选择**输入网址**后键入 URL，然后选择**连接**。

备注：连接这些服务以及下载内容会产生额外费用。查看网络提供商要求的数据付费。

添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 从主屏选择 ，然后滚动到“通信”选项卡下的**浏览器**。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要添加新书签，请选择 ，然后点触**新建书签**。输入书签名称及其 URL。
- 4 点触 。现在，您的书签将显示在书签列表中。
- 5 要访问书签，点触书签后点触“连接”即可。您将连接到书签。

01

02

03

04

05

06

07

08


网络

使用 RSS 阅读器


RSS（简易供稿）是一种网络订阅源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订阅源、网络订阅源或频道，它包含相关网站的内容摘要或完整文本。RSS 使人们可以以主动方式随时关注其感兴趣的网站，而无需手动查看。

用户订阅源的方式：将订阅源的链接输入阅读器，或单击浏览器中的 RSS 图标即可开始订阅流程。阅读器将定期检查用户订阅的源以查看新内容并下载找到的任何更新。


访问已保存页面

- 1 从主屏选择 ，然后滚动到“通信”选项卡下的**浏览器**。
- 2 选择**已保存页面**。
- 3 选择您要查看的页面，随后将打开该页面。

查看浏览器历史记录

- 1 从主屏选择 ，然后滚动到“通信”选项卡下的**浏览器**。选择**历史记录**。
- 2 此时将显示您最近访问过的网页。要访问这些页面，选择即可。

更改网络浏览器设置

- 1 从主屏选择 ，然后滚动到“设置”选项卡下的**连接**。
- 2 选择**浏览器设置**。
- 3 您可以编辑情景模式、外观设置、缓存/Cookie、安全性或恢复初始设置。
- 4 您可以轻松将这些设置设为开或关，点触图标即可。

将手机用作调制解调器

KM900 可以用作电脑调制解调器，无需有线连接即可访问电子邮件和互联网。您可以通过 USB 数据线或蓝牙执行此操作。

连接 USB 数据线：

- 1 确保电脑上已经安装了 LG PC 套件。
- 2 用 USB 电缆连接 KM900 和您的电脑并启动 LG PC 套件软件。
- 3 单击电脑上的**通信**。然后，单击**设置**并选择**调制解调器**。
- 4 选择 **LG Mobile USB 调制解调器**，然后选择**确定**。此时将在屏幕上打开。
- 5 单击“连接”，您的电脑将与 KM900 之间建立连接。

备注：有关使用 LG PC 套件同步的详细信息。

01

02

03

04

05

06

07

08

网络

使用蓝牙：

- 1 确保已**打开**蓝牙并在电脑和 KM900 上**可见**。
 - 2 配对电脑和 KM900，以便需要通行码才能建立连接。
 - 3 使用 LG PC 套件上的**连接向导**创建一个活动的蓝牙连接。
 - 4 单击电脑上的**通信**。然后，单击**设置**。
 - 5 单击**调制解调器**。
 - 6 选择 **Standard Modem over Bluetooth link**，然后单击**确定**。此时将在屏幕上打开。
 - 7 单击**连接**，您的电脑将与 KM900 之间建立连接。
- 备注：**有关蓝牙的详细信息。


访问 Google 地图

您可以使用“通信”选项卡下的 Google 导航服务。在 Google 中选择“Google 地图”菜单以启动此应用程序。GPS 将对您的 KM900 进行定位。此服务会为您在显示屏上提供地图，帮助您查找路线并到达目的地。请注意，使用此服务会产生额外费用。

设置


此文件夹允许您调整设置以对您的 KM900 实现个性化。

更改屏幕设置

- 1 从主屏选择 ，然后滚动到“设置”选项卡下的**显示设置**。
- 2 您可以选择以下选项菜单：
 - 屏幕图像** - 选择屏幕锁定时、开机或关机时，以及拨打或接听电话时的显示图像。
 - 锁定屏幕** - 选择屏幕锁定类型。
 - 字体** - 调节字体大小和样式。
 - 背景灯** - 选择背景灯持续时间。
 - 备注**：背景灯打开时间越长，耗用电量越多，您可以需要更频繁的对电池充电。
 - 自动亮度** - 自动调节屏幕亮度。
 - 亮度** - 调整屏幕亮度。

更改情景模式

您可以在主屏上快速更改情景模式。点触顶部的状态摘要图标，然后点触情景模式标签即可。使用设置菜单，您可以个性化每个情景模式设置。

- 1 从主屏选择 ，然后滚动到“设置”选项卡下的**情景模式**。
- 2 选择要编辑的情景模式：**标准**、**静音**、**户外**或**飞行模式**。
- 3 随后，您可以更改列表中可用的所有声音和提示选项，包括**语音/视频铃声**、**音量**、**信息提示音**等。

01

02

03

04

05

06


07

08

设置

更改手机设置

随意根据需要调整 KM900 设置。

1 从主屏选择 ，然后滚动到“设置”选项卡下的**手机设置**。

2 从以下列表中选择菜单：

日期和时间 - 调整日期和时间设置，或者，选择在旅行时或针对夏令时自动更新时间。

省电 - 选择**开**或**关**以开启或关闭初始的省电设置。

语言 - 更改 KM900 的显示语言。

自动键盘锁 - 在主屏下自动锁定键盘。

安全性 - 调整您的安全设置，包括 PIN 码和手机锁。

触摸设置 - 更改触摸键盘值的设置。

内存管理器 - 有关详细信息，请参阅的**使用内存管理器**。

重设设置 - 将所有设置重设为出厂默认值。

手机信息 - 查看 KM900 的技术参数。

更改触摸设置

从主屏选择 ，然后滚动到“设置”选项卡下的**手机设置**。

触摸振动 - 更改振动类型。

振动类型 - 可选择振动类型 1/2/3。

振动音量 - 控制振动力度。

触摸音 - 更改触摸屏幕时的提示音。

声音 - 可选择声音 1/2/3。

音量 - 控制音量。

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。使用此菜单可更改设置。

从主屏选择 ，然后滚动到“设置”选项卡下的**连接**。

网络选择 - KM900 将自动连接到首选网络。

互联网网络设定 - 设置连接到互联网的网络设定。

接入点 - 网络运营商已保存此信息。您可以使用此菜单添加新的接入点。

GPS 类型 - 选择**辅助 GPS**或**独立型 GPS**。

GPS

-GPS 技术使用地球轨道卫星传送的信息查找位置。

-接收器会根据信号到达 GPS 卫星的时间来估计距离，然后使用该信息确定位置。

-可能需要几秒甚至几分钟的时间。

-本机上的辅助 GPS (A-GPS) 用于提取分组数据连接的位置帮助数据。

-如果您的网络提供商提供，在需要时，可从“服务”服务器提取帮助数据。

01

02

03

04

05

06

07

08

备注：GPS 服务存在一定的误差，无法在建筑物内或地下使用。

USB 连接模式 - 使用 LG PC 套件软件同步 KM900 以复制手机中的文件。有关同步的详细信息。

设置

TV 输出 - 要将 KM900 连接到 TV，请选择 **PAL** 或 **NTSC**。

Divx VOD 注册 - 此菜单用于生成 DivX VOD 注册码。请访问 <http://vod.divx.com> 注册和获取技术支持。

分组数据连接 - 设置分组数据连接。

浏览器设置 - 设置与浏览器相关的值。

流媒体设置 - 网络运营商已保存此信息。如果要进行更改，可选择对其进行编辑。

Java 设置 - 允许您为通过 Java 程序进行的连接设置网络设定并查看证书。

使用内存管理器

KM900 有三个可用存储空间：手机本身、SIM 卡和外部存储卡（需单独购买）。您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

从主屏选择 ，然后滚动到“设置”选项卡下的**手机设置**。选择**内存管理器**。

手机公用内存 1/2 - 查看 KM900 中针对以下各项的可用内存：彩信、电子邮件、Java 应用程序、其它。


手机多媒体内存 - 查看多媒体内容的内存，如流媒体文件、电影和音乐、图片、声音、视频、Flash。

手机预留内存 - 查看手机目前针对以下各项的可用内存：短信、电话本、日历、任务列表、备忘录、闹钟、通话记录、书签及其它。

USIM 卡内存 - 查看 USIM 卡的可用内存。

外部存储器 - 查看外部存储卡的可用内存（需单独购买）。

使用飞行模式


通过依次选择  和 **设置** 打开飞行模式。点触 **情景模式**，然后选择 **飞行模式**。

飞行模式下，您无法拨打电话、连接互联网、发送信息或使用蓝牙。

使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 点触 ，然后选择 **发送**。选择 **蓝牙**。
- 3 如果已配对蓝牙设备，KM900 将不会自动搜索以配对其它蓝牙设备。否则，KM900 将搜索范围内其它启用了蓝牙的设备。
- 4 选择您要向其发送文件的设备，然后点触 **选择**。
- 5 您的文件将被发送。

提示！ 检查进度栏以确保文件已发送。

01

02

03

04

05

06

07



08

设置

接收文件：

- 1 要接收文件，必须将蓝牙设为**开**。有关详细信息，请参阅下面的**更改蓝牙设置**。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。点触**是**以接收文件。
- 3 您可以查看文件的保存位置，可以选择**查看文件**或**用作墙纸**。文件通常保存在“我的文档”中的相应文件夹。

更改蓝牙设置

- 1 从主屏选择 ，然后滚动到“设置”选项卡下的**蓝牙**。
- 2 点触 。
进行更改：
我的设备名称 - 为您的 KM900 输入一个名称。
我的设备可见性 - 选择**可见**、**隐藏**或**可见 1 分钟**。

远程 SIM 卡模式开 - 激活远程 SIM 卡模式。

iSync 开 - 选择激活 iSync。

删除 - 选择以删除选定模式。

全部删除 - 选择以删除所有模式。

支持的服务 - 选择在其它关联服务中如何使用蓝牙。

与其它蓝牙设备配对

将您的 KM900 与其它设备配对，您可以设置受通行码保护的连接。这样将保证配对安全。

- 1 检查**蓝牙**是否为**开**。
您可以使用**设置**菜单更改可见性。
- 2 点触**搜索**。
- 3 KM900 将搜索蓝牙设备。搜索完成时，屏幕上将显示**刷新**。
- 4 选择您要与之配对的设备，输入通行码，然后点触**确定**。

- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

使用蓝牙耳机

- 1 检查蓝牙是否为开。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 手机将自动切换到“耳机”情景模式。
- 4 点触**始终询问**或**允许而不询问**。

提示！ 有关**蓝牙接听模式**的详细信息，以便您可以控制接听来电的方式，以及何时连接蓝牙耳机。

01

02

03

04

05

06

07

08

Wi-Fi

文献管理器允许您根据设备上的 Wi-Fi (无线局域网) 管理互联网连接。它能允许手机连接本地无线网络, 或者无线访问互联网。Wi-Fi 比蓝牙无线技术速度更快且连接范围更广, 可用于快速收发电子邮件和浏览互联网。

备注: KM900 支持 WEP、WPA-PSK/2 加密, 不支持 EAP、WPS 加密。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密, 您应在弹出窗口中输入密钥。如果未设置加密, 不会显示此弹出窗口。您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

1. 如何设置 Wi-Fi

- 1 从“设置”选项卡下点触 Wi-Fi, 然后打开 Wi-Fi
- 2 AP (接入点) 搜索
 - 搜索可连接的 AP。
- 3 AP 连接
 - 从 AP 搜索列表连接到所需 AP。
 - 如果 AP 为安全类型 WEP 或 WPA-PSK/2, 请输入安全密钥。

2. Wi-Fi 网络模式支持

- 1 Wi-Fi 模式支持 (如何连接常用 AP 或隐藏的 AP)
 - 1) 如果 AP 未显示在搜索列表中, 您可以通过将其保存为模式来进行连接。

- 2) 将常用 AP 保存为模式，可在使用该安全类型连接 AP 时轻松输入安全密钥。
 - 3) 如果 AP 不支持 DHCP，您可以使用静态 IP 地址连接 AP。
- 2** 对 Wi-Fi 模式中各字段的描述
- 1) 网络名称：SSID (ID)
 - 2) 安全类型：WEP、WPA-PSK/2 支持
 - 3) 安全密钥：保存安全密钥。
 - 4) IP/DNS 设置：允许您根据 AP 是否支持 DHCP 来设为“自动”或“静态”。对于“静态”，请输入连接时使用的静态 IP 地址的 IP 地址和 DNS 服务器的字段值。

3 如何保存 Wi-Fi 模式

- 1) 从“选项”菜单中选择“已保存的网络”，然后选择“新建网络”，为每个字段输入值。
- 2) 通过选择“Wi-Fi 开”和“刷新”可选择并保存 AP 搜索列表（搜索 AP）。
- 3) 使用此安全类型连接到 AP 后，该模式将自动保存。

3. 如何获取 MAC 地址

要使用 MAC 筛选器在某些无线网络中建立连接，您需要在路由器中输入 KM900 的 MAC 地址。

- 1** 从“设置”选项卡中点击 Wi-Fi，然后打开选项菜单。
- 2** 选择“我的 MAC 地址”，此时将显示 MAC 地址。

01

02

03

04

05

06

07

08

软件更新

软件更新

LG 手机软件更新程序

有关安装和使用此程序的详细信息，请访问 [http:// update.lgmobile.com](http://update.lgmobile.com)。

使用此功能，无需访问服务中心，您即可快速方便地将软件更新到互联网上的最新版本。

由于手机软件更新程序要求您在更新过程中密切留意，请确保您在转到下一步时，查看每一个步骤中显示的所有说明和备注。请注意，在更新过程中移除 USB 数据线或取出电池将严重损坏您的手机。对于更新过程中造成的任何数据丢失，制造商不承担任何责任，为了安全起见，建议您先备份任何重要信息。

配件

有多种配件可用于您的手机，可单独购买。您可以根据个人的通信要求选择这些配件。关于配件的供应情况，请咨询本地经销商。（以下配件为可选配件。）

充电器



USB线和光碟

在 KM900 和电脑间建立连接并同步。



电池



立体声耳机



用户指南

了解更多关于 KM900 的信息。



01

02

03

04

05

06

07

08

备注:

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

网络服务

本指南中描述的无线手机适用于 GSM 900、DCS 1800、GSM 850、PCS 1900 和 W-CDMA 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

DivX VOD 注册

生成一个 DivX VOD 注册码。

请访问 <<http://vod.divx.com/>> 注册并获取技术支持。

技术参数

一般

产品名称: KM900

系统: GSM 900 / DCS 1800 / GSM 850 / PCS 1900/ WCDMA

外部环境

最高温度: +55° C (放电)、
+45° C (充电)

最低温度: -10° C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

KM900

Trade Name

LG



Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.6.1 / EN 301 489-7 V1.3.1 / EN 301 489-9 V1.3.1 / EN 301 489-17 V1.2.1 /
EN 301 489-19 V1.2.1 / EN 301 489-24 V1.3.1
EN 60950-1: 2001
EN 50360 / EN 50361: 2001
EN 301 511 V9.0.2 / EN 301 908-1 V3.2.1 / EN 301 908-2 V3.2.1
EN 300 328 V1.7.1
EN 301 357-1 V1.4.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

8, January, 2009


Signature of representative

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息。此款 KM900 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频段中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。

- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10 克重的人体组织吸收的能量平均值不超过 2W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.602 W/kg (10克)，戴在身体上时，其值为 0.646 W/kg (10克)。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过 1 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或电脑之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应在通风条件好的位置对手机进行充电。

关于安全有效使用手机的准则

- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，例如，胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、电脑等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。

- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的或便携式的无线设备阻挡气囊。否则，可能导致安全气囊失效，或由于不适当的个人行为造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

避免对您的听力造成伤害

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务供应商处更换玻璃。

关于安全有效使用手机的准则

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 请勿在加油点或化工厂附近使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 飞机飞行过程中，请关闭手机或激活飞行模式。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急呼叫

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。

- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

故障诊断

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可能的解决方案
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
无网络连接	信号弱 位于 GSM 网络覆盖区域以外	将手机移到窗边或开放的区域中。 检查服务提供商覆盖图。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。	请与服务提供商联系。
无法设置功能	服务提供商不支持或需要注册	请与服务提供商联系。
无法拨打电话	拨号错误 插入的新 SIM 卡达到尝试次数上限	新网络未获得授权。查看新的限制。与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按住/按键的时间不够 电池电量空 电池触点脏	请按住/按键至少两秒钟。 充电器使用时间过长。 清洁触点。

信息	可能原因	可能的解决方案
充电错误	电池电量空	为电池充电。
	温度超出范围	确保外部环境温度适当，稍等片刻，然后重新充电。
	触点问题	检查电源，连接到手机。检查电池触点，如果需要，请清洁。
	无电源电压	插入其它插口，或检查电压。
	充电器故障	如果充电器不发热，请替换。
	错误充电器	请仅使用原装 LG 配件。
	电池故障	替换电池。
手机无网络	信号太弱	将自动重新连接到其它服务提供商。
不允许输入号码	已打开固定拨号功能。	检查设置。



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KM900 User Guide



Congratulations on your purchase of the advanced and compact KM900 phone by LG, designed to operate with the latest digital mobile communication technology.

Set up	01
Your home screen	02
The basics	03
Get creative	04
Get organised	05
The web	06
Settings	07
Accessories	08

Contents

Set up

Getting to know your phone	8
Open view	10
Installing the SIM and battery	11
Charging your phone.....	13
Memory card.....	14
Menu map.....	16

Your home screen

Touch screen tips.....	17
Customising the home screen.....	18
Quick keys	19
Touch screen	20
Using the Multi - tasking function.....	24

The basics

Calls	25
Making a call or a video call.....	25
Calling your contacts	25
Answering and rejecting a call	25
In-call options	26
Adjusting call volume	27
Speed dialling	27
Making a second call.....	27
Turning off DTMF.....	28
Using call divert	29
Using call barring	29
Changing the common call setting ..	30
Changing your video call settings.....	31

Contacts.....	32
Searching for a contact	32
Adding a new contact	32
Creating a group.....	33
Changing your contact settings.....	34
Viewing information	35
Messaging.....	36
Messaging.....	36
Sending a message.....	36
Entering text.....	37
T9 predictive	37
Abc manual	37
Setting up your email	38
Sending an email using your new account	39
Changing your email settings.....	40
Message folders	41
Using templates.....	41
Using emoticons.....	42
Changing your text message settings.....	42
Changing your multimedia message settings.....	43
Changing your other settings.....	44

Get creative

Camera	45
Taking a quick photo	45
Once you've taken the photo	46

Getting to know the viewfinder.....	47	Adding text to a photo.....	64
Using the flash.....	48	Adding an effect to a photo.....	64
Adjusting the exposure.....	48	Cropping a photo.....	64
Taking a continuous shot.....	49	Adding a colour accent to a photo ..	65
Using the advanced settings.....	49	Swapping colours in a photo.....	65
Changing the image size.....	51	Editing your videos.....	66
Choosing a colour effect.....	52	Trimming the length of the video.....	66
Using the inner camera.....	52	Merging two videos.....	66
Viewing your saved photos.....	53	Merging a photo with a video.....	67
Video camera.....	54	Adding text to a video.....	67
Shooting a quick video.....	54	Overlaying a photo.....	68
After shooting a video.....	55	Adding a soundtrack to your video..	69
Getting to know the viewfinder.....	56	Adding live sound to your video.....	69
Adjusting the exposure.....	57	Changing the video speed.....	70
Using the advanced settings.....	57	Adding a dimming effect.....	70
Changing the video image size.....	58	Multimedia.....	71
Choosing a colour tone.....	59	Pictures.....	71
Using the inner video camera.....	59	My images options menu.....	71
Watching your saved videos.....	60	Sending a photo.....	71
Watching your videos on TV.....	60	Using an image.....	72
Your photos and videos.....	61	Printing an image.....	72
Viewing your photos and videos.....	61	Moving or copying an image.....	73
Using zoom when viewing a video or photo.....	61	Creating a slide show.....	73
Adjusting the volume when viewing a video.....	61	Geo-tagging.....	73
Setting a photo as wallpaper.....	62	Checking your memory status.....	73
Editing your photos.....	62	Sounds.....	74
		Using a sound.....	74
		Videos.....	74

Contents

Sending a video clip.....	75	Adding an item to your To Do list.....	83
Games and Applications	75	Using the date finder	83
Playing a game.....	75	Setting your alarm	84
Using the options menu	75	Adding a memo	84
Installing a Java game and application	75	Voice recorder.....	85
Use the M-Toy menu	76	Recording a sound or voice.....	85
Flash contents.....	76	Sending the voice recording.....	85
Viewing an SWF/ SVG file	76	Using your calculator.....	86
Documents	76	Converting a unit.....	86
Viewing a file.....	76	Using the stopwatch	86
Transferring a file to your phone	76	Adding a city to your world clock.....	87
Others	77	PC Suite.....	88
Creating a movie	77	Installing the LG PC Suite on your computer.....	88
Music.....	78	Connecting your phone and PC.....	89
Transferring music onto your phone	78	Backing up and restoring your phone's information.....	89
Playing a song	79	Viewing phone files on your PC	89
Creating a playlist.....	79	Synchronising your contacts.....	90
Deleting a playlist.....	80	Synchronising your messages	90
Using the radio.....	80	Music Sync	90
Searching for stations	80	Transferring music using Windows Media Player.....	91
Resetting channels	81	Using iSync	91
Listening to the radio.....	81	DivX Converter	92
Get organised		The web	
Organiser	82	Browser	93
Adding an event to your calendar	82	Accessing the web	93
Changing your default calendar view	82		

Adding and accessing bookmarks.....	93
Using the RSS reader.....	94
Accessing a saved page.....	94
Viewing your browser history.....	94
Changing web browser settings.....	95
Using your phone as a modem.....	95
Access to Google Maps.....	96

Settings

Changing your screen settings.....	97
Personalising your profiles.....	97
Changing your phone settings.....	98
Changing your touch settings.....	99
Changing your connectivity settings.....	99
Using memory manager.....	101
Using flight mode.....	102
Sending and receiving files using Bluetooth.....	102
Changing your Bluetooth settings.	103
Pairing with another Bluetooth device.....	104
Using a Bluetooth headset.....	104
Wi-Fi.....	105
Software Update.....	107

Accessories 108

Network service 109

Technical data..... 109

Guidelines

Guidelines for safe and efficient use.....	111
Trouble Shooting.....	117

Getting to know your phone

Battery release button

**Handsfree or Stereo
earphone connector**

Power key

Turns the phone on/off.

Earpiece

Proximity Sensor

Inner camera


End key

- Rejects a call.
- Press once to return to the home screen.

Multi-tasking key

Call key

Dials a phone number and answers incoming calls.

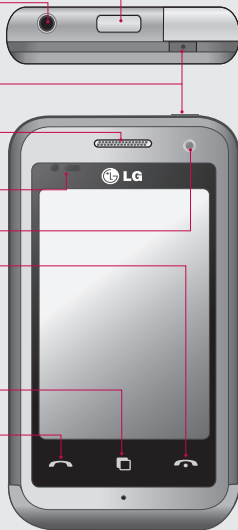

⚠ WARNING: Putting a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the protection film on proximity sensor of LCD. It can be caused the malfunction of sensor.



Charger, Data cable (USB cable)

TIP: Before connecting the USB cable, wait until the phone has powered up and has registered on the network.



Volume keys

- **When the screen is idle:** key tone volume.
- **During a call:** earpiece volume.
- **When playing a track:** controls volume continuously.

Camera key

- Go to the camera menu directly by pressing and holding the key.

01

02

03

04


05

06

07

08

Open view

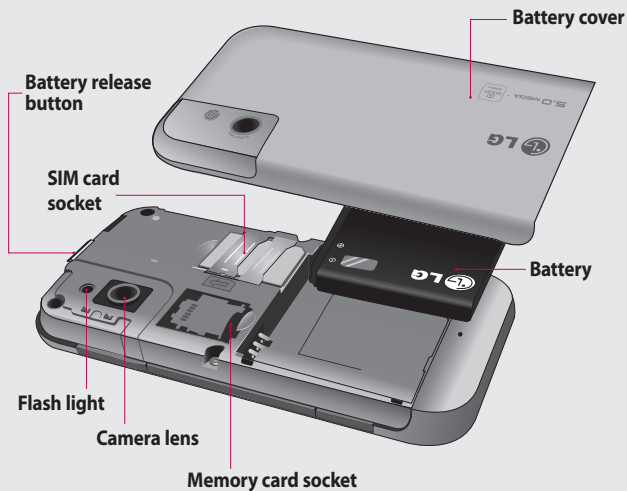

Installing the SIM and battery

1 Remove the battery cover

Press and hold down the battery release button on the top of the phone and lift off the battery cover.



2 Remove the battery

Hold the top edge of the battery and lift it away from the battery compartment.



⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

⚠ WARNING: Do not remove the battery cover when using GPS, Wi-Fi or Bluetooth. The antenna is mounted on the battery cover.

01

02

03

04

05

06


07

08

Installing the SIM and battery


3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards. To remove the SIM card, gently pull it outwards.

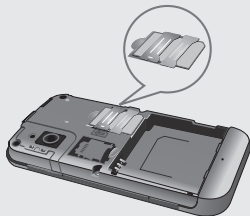

4 Install the battery


Insert the top of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.

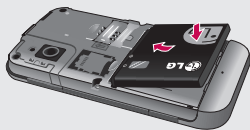

Charging your phone

Slide back the cover of the charger connector on the side of your KM900. Insert the charger and plug it into a mains electricity socket. Your KM900 must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight (or for up to 14 hours).

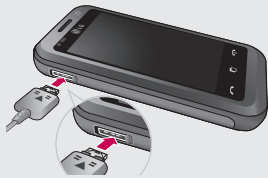

01

02

03

04

05

06

07

08


Memory card





Installing a memory card

You can expand the available memory space on your phone by using a memory card.

NOTE: A memory card is an optional accessory.

Slide the memory card into the slot at the top, until it clicks into place. Make sure the gold contact area is facing downwards.


 **WARNING:** Slide into the memory card to the slot, otherwise, the card can be damaged.

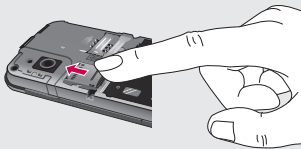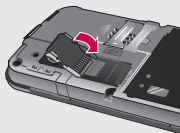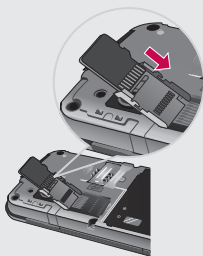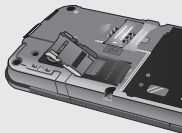

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.


NOTE: All files get deleted while formatting.

- 1 From the home screen select  and choose **Phone settings** from the Settings tab.
- 2 Scroll and touch **Memory manager** then scroll and select **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one has been set. The card will then be formatted and ready to use.

NOTE: If there is existing content on your memory card, the folder structure may be different after formatting since all files will have been deleted.

Transferring your contacts

To transfer your contacts from your SIM to your phone:

- 1 From the Communication tab, scroll to **Contacts** and select  then **Change location**.
- 2 Touch **Copy to Handset**.
- 3 Choose **Mark all** or select names one by one and touch **Copy to handset**.

01

02

03

04


05

06









07

08









Menu map

Touch  in the home screen to open a **Top menu**. From here you can access further menus by scrolling through the icons: **Communication**, **Multimedia**, **Utilities** and **Settings**.



COMMUNICATION

-  Contacts
-  Recent history
-  Browser
-  Messaging
-  Email
-  Dialling
-  Video call
-  Google









MULTIMEDIA

-  Music
-  Camera
-  Video camera
-  Gallery
-  My stuff
-  Games & Apps
-  FM radio
-  Movie maker

UTILITIES

-  Alarms
-  Organiser
-  Memo
-  Stopwatch
-  Voice recorder
-  Calculator
-  World clock
-  Tools

SETTINGS

-  Profiles
-  Display settings
-  Phone settings
-  Bluetooth
-  Wi-Fi
-  Call settings
-  Connectivity
-  Message settings

Your home screen

From this screen you can access menu options, make a call, view the status of your phone and much more.

Touch screen tips

The home screen is also a great place to get used to using the touch screen.

To select an item, touch the centre of the icon.

- Do not to press too hard; the touchscreen is sensitive enough to pick up on a light, firm touch.
 - Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
 - When the screen light is off, either press the power key slightly and hold down the Unlock/Lock key on the touch screen to return the home screen.
- Whenever your KM900 is not in use, it will return to the lock screen.

01

02

03

04

05


06

07


08

Your home screen

Customising the home screen

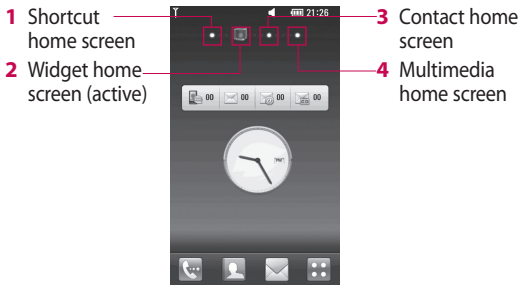


- **Get in touch with your KM900** - The User Interface is based on four types of Homescreens. To swap between the home screens just wipe quickly over display from left to right or from right to left.
- **Home screen customisation** - For each type of home screen you are able to add and remove objects by pressing & holding your finger on the screen, or if already added touching and holding one of the objects.

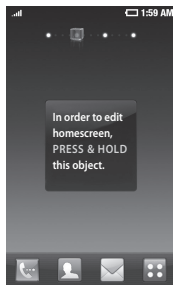


Quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad, which lets you make a call. Enter the number using the normal key pad and touch **Voice call** or tap .

To make a video call to this number, touch  after entering the number.



Touch to open your contacts. To search for the number you want to call: Enter the name of the contact using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** menu. From here you can create a new SMS.



Touch to open the full Top menu which is divided into four categories.

01

02

03

04

05

06

07

08

Your home screen

Touch screen

The controls on the KM900 touch screen change dynamically, depending on the task you are carrying out.

Opening Applications

To open any Application, simply touch its icon.




Scrolling

Drag from side to side to scroll. On some screens, such as web pages, you can also scroll up or down.



Zooming In or Out

When viewing photos, web pages, emails, or maps, you can zoom in and out. Pinch your fingers together or slide them apart.

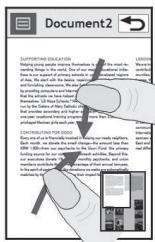

01

02

03

04

05

06

07











08




















Your home screen




















Viewing the status bar





The status bar uses different icons to show conditions such as signal strength, new messages and battery life as well as whether Bluetooth or data connections is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	No Service
	2G
	3G
	EDGE
	HSDPA
	Wi-fi is on
	Bluetooth Message
	Bluetooth Mono hands free headset
	Bluetooth Mono Stereo headset
	Bluetooth Stereo headset

Icon	Description
	Bluetooth Mono headset
	Bluetooth on
	Printer by Bluetooth
	Bluetooth Transfer
	Bluetooth Visibility
	Bluetooth Music
	Downloading
	Downloading complete.
	Downloading cancelled.
	In-call option
	Internet
	Searching
	Call divert
	Call reject
	Security
	Headset
	HomeZone
	Roaming
	Alarm

Icon	Description
	Schedule (Calendar)
	Multi-tasking
	Music paused
	Music playing
	FM radio playing
	Email being sent
	Email received
	MMS
	MMS sending
	MMS received
	SMS sending
	New voicemail
	New message
	Message sending has failed
	New email
	Push message
	Flight mode
	Outdoor
	Silent

Icon	Description
	Customised ringtones 1-10
	External memory
	Battery status
	Projector/TV out

01

02

03

04

05

06

07


08

Your home screen

Using the Multi - tasking function

Touch the multitasking hard key  to open the **Multitasking** menu.

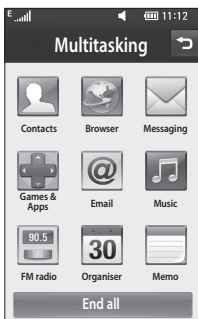


From here you can view some applications that are running and access them with one touch.






Calls

TIP! Press the power slightly key to lock the touchscreen to prevent calls being made by mistake.



Making a call or a video call

- 1 Touch  to open the keypad.
- 2 Type in the number on the keypad. To delete a digit, press the clear key.
- 3 Touch the  key to make the call.
- 4 To end the call, touch the  key.


TIP! To enter + in order to make international calls, touch  twice, or press and hold down .

TIP! You can **Save number**, **Send message**, **Search contacts** by tapping .

Calling your contacts

- 1 From the home screen touch  to open your **Contacts**.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching .
- 3 From the list, touch the contact you want to call and select the number to use if there is more than one for that contact.
- 4 Touch **Voice call** or **Video call**.

Answering and rejecting a call

When your phone rings, press the  hard key to answer.

Touch twice the  hard key to reject an incoming call.

01

02

03

04

05


06


07


08


Calls

In-call options

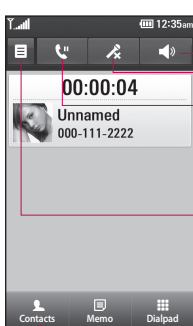


Speaker - Touch  to turn the speaker phone on.

Mute - Touch  to turn the microphone off so the person you are talking to cannot hear you.

Hold - Touch  to put a call on hold.

Options - Choose from a list of further in-call options, including creating new memo and going to messages, so you can check your messages and add contacts during a call. You can also end the call from here by touching End call.

 - Touch to open a numerical keypad for typing in numbers, e.g. when dialling call centres or other automated telephone services.

 - Add a memo during a call.



 - Search your contacts during a call.


Adjusting call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.




Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen touch  to open your **Contacts**.
- 2 Touch  and select **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
- 4 Your contacts list will open. Select the contact you want to assign to that number by touching the phone number once.

To call a speed dial number, touch  on the home screen then press and hold the assigned number until the contact appears on the screen. The call will initiate automatically, without having to touch **Voice call**.

Making a second call

- 1 During your initial call, touch  and select the number you want to call.
- 2 Call the number or search your contacts (see **Making a call** on page 25 for details).
- 3 Touch  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 To end one or both calls press .

01

02

03

04

05

06

07

08


Calls




NOTE: You will be charged for each call you make.

Turning off DTMF

DTMF lets you use numerical commands to navigate within automated calls. DTMF default is set to on.

To turn it off during a call (to make a note of a number) touch  and select **Disable DTMF**.

Viewing your call logs

From the home screen, touch , then touch **Recent history** in the Communication tab.

Choose from the following:


All history - View a complete list of all dialled, received and missed calls, voice calls only, video calls and messages.

Missed calls - View a list of all calls you have missed.

Calls only - View a list of all calls you have made and missed.


Messages only - View a list of all numbers that have received or sent texts and multimedia messages.

VT only - View a list of all video calls.

TIP! From any call log touch  and **Delete all** to delete all the recorded items.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Using call divert

- 1 Touch  and choose **Call settings** in the Settings tab.
- 2 Touch **Call divert** and select **Voice calls** and/or **Video calls**.
- 3 Choose whether to divert all call, when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Touch **Activate** to activate.
- 5 Enter the number to divert to.

NOTE: Diverting calls will incur charges. Please contact your network operator for details.

TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch  and choose **Call settings** in the Settings tab.
- 2 Touch **Call barring** and select **Voice calls** and/or **Video calls**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator about this service.

01

02

03

04

05

06


07

08

Calls

TIP! Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Changing the common call setting

- 1 Touch  and choose **Call settings** in the Settings tab.
- 2 Touch **Common settings**. This lets you change the following settings:
 - Call reject** - Slide the switch left for **ON**. You can touch the **Reject list** to choose all calls, specific contacts or groups or calls from unregistered numbers (i.e. not in your contacts).

Send my number - Choose whether to display your number on an outgoing call.


Auto redial - Slide the switch left for **ON** or right for **OFF**.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a handset key to answer a call.

Save new number - Select **ON** or **OFF** to save a new number.

Changing your video call settings

- 1 From the home screen, touch  and scroll to **Call settings** in the Settings tab.
- 2 Touch **Video call settings** and select the settings for your video calls. Decide whether to use still image, then select one and/or switch on the mirror to see yourself on screen when making a video call.

01

02

03

04

05

06

07




08

Contacts

Searching for a contact



There are two ways to search for a contact:

From the home screen



- 1 From the home screen, touch  to open your **Contacts**. Touch  and enter the contact name using the key pad.
- 2 Touch **Video call** or **Voice call** or the  key to place the call.

TIP! You can search by group by touching the Contacts tab at the top of the screen and selecting **Groups**. This will bring up a list of all your groups.

From the main menu

- 1 Touch , then touch **Contacts** on the Communication tab.
- 2 Touch  and **Search**.



Adding a new contact

- 1 From the home screen, touch  then select  and then touch **New contact** button.
- 2 Choose whether to save the contact to **Handset** or **USIM**.
- 3 If you want to add a picture to the new contact, touch **Add picture**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter at least one.
- 5 Enter up to five different numbers and assign a type to each of them, choosing between **Mobile**, **Home**, **Office**, **Pager**, **Fax**, **VT** and **General**.
- 6 Add an email address.

- 7 Assign the contact to one or more groups, choosing between **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also add a **Ringtone, Homepage, Home address, Company name, Job title, Company address, Birthday, Anniversary** and a **Memo**.
- 9 Touch  to save the contact.

TIP! You can create customised groups for your contacts. See **Creating a group**.

Creating a group

- 1 From the home screen, touch  and then touch **Contacts** in the Communication tab.
- 2 Touch **Contacts** on the top of the screen then touch **Groups** and select new group.
- 3 Enter a name for the new group.
- 4 Touch  to save the group.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.

TIP! You can edit an existing group by touching the selected group once. Choose View members, Edit the group, Send message, Send businesscard or Delete group.

01

02

03

04

05

06


07

08

Contacts

Changing your contact settings

You can adapt your contact settings to suit your own preferences.

- 1 Touch **Contacts** on the Communication tab, select  and scroll to **Contact settings**.
- 2 From here, you can adjust the following settings:
 - Display name** - Choose whether to display the first or last name of a contact first.
 - Copy** - Copy your contacts from your SIM to your handset, or vice versa.

Move - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the handset it will be deleted from the SIM memory.

Clear contacts - Delete all your contacts. Touch **Yes** if you are sure you want to delete all your contacts.

Memory info - View memory capacity information.

Viewing information

- 1 Touch **Contacts** from the Communication tab select  and touch **Information**.
- 2 From here you can view **Service dial numbers**, **Own numbers**, **Memory info**. (memory space remaining) and **My business card**.

TIP! To add your own business card, select **My business card** and enter your details as you would for any contact. Touch **Save** icon to finish.

01

02

03

04

05

06



07

08


Messaging

Messaging


Your KM900 combines SMS, MMS into one intuitive, easy-to-use menu. There are two ways of entering the messaging centre:


- 1 From the home screen, touch  or , then scroll to **Messaging** on the Communication tab.


Sending a message

- 1 Touch  then **Write message** to open a blank message.
- 2 Touch **To** to enter the recipient's number, or open your contacts or favourites. You can add multiple contacts. When you are finished, touch the message box below to start composing the message text.
- 3 After entering the text, you can send the SMS by touching the send button on top of the message.

TIP! You will be charged for a 160 character text message for every person you send the message to.


- 4 Touch  **Insert** to add a text template, multimedia templates, emoticon, name & number, new slide, subject or signature.


 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded.


 **WARNING:** If an image, video or audio file is added to an SMS it will be automatically converted to an MMS, and you will be charged accordingly.


Entering text

Keypad.

 Touch to turn on T9 predictive texting.


 Touch to change the writing language.

 Tap to change between the number, symbol and text keypads.

Use  to scroll through the different keyboards in each text entry mode (e.g. capital or lower case letters).

To enter a space touch .

T9 predictive

In T9 mode, you will see .

T9 mode uses a built-in dictionary to recognise your words based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6 and 3 to write 'telephone'.

Abc manual

In Abc mode you have to touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three more times, then 6 three times.

01

02

03

04

05

06


07

08

Messaging

Setting up your email

You can keep in touch on the move by using your KM900 to send emails. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Touch  from the home screen, and scroll to **Email** on the Communication tab.
- 2 Touch **Write email**. If the email account is not set up, start the email set up wizard.

TIP! If an email account is already set up, the wizard is not activated automatically.

- 3 You can now follow the wizard for setting up:
You can also edit specific account settings on **Settings > Message settings > Email > Email account**. They are the following:
Title - Enter a name for this account.

User name - Enter the account's username.

Password - Enter the account's password.

My name - Enter the nickname of user.

Email address - Enter the account email address.

Reply email address - Enter the 'reply to' email address.

Outgoing mail server - Enter the outgoing email server address

Incoming mail server - Enter the incoming email server address

Maximum receive size - Select the size limit for your emails, up to a maximum of 1 MB.

Mailbox type - Enter mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails on the server. Copies are always saved for IMAP4 accounts.

Save sent mail into - Select where to save sent emails (for IMAP4 mailboxes). For POP3 mailboxes, sent mails are always saved to the handset.


Download option - Choose how you want to download emails. Choose between Header only or All including attachment for POP3 and header only, header + body, or all for IMAP4.

Access point - Choose your Internet access point.

Advanced settings - Choose whether to use the advanced settings.

Once the account is set up, it will appear in the accounts list in your Email folder.

Sending an email using your new account

- 1 Touch  from the home screen, and scroll to **Email** on the Communication tab to open a new blank message.
- 2 Enter the recipient's address and write your message. You can also attach images, videos, audio files and other file types.
- 3 Touch **Send email** to send your email.

TIP! During an active Wi-Fi connection, emails are sent and received via Wi-Fi.

01

02

03

04

05

06


07

08

Messaging

Changing your email settings

You can change your email settings based on your own preferences.

- 1 Touch  from the home screen, then scroll to **Messages settings** on the Settings tab.
- 2 Select **Email**.
- 3 You can alter the following settings:

Email accounts - Manage your email accounts.

Allow reply email - Choose whether to allow read confirmation messages to be sent.

Request reply email - Choose whether to request read confirmation messages.

Retrieve interval - Select how often your KM900 checks for new email messages.

Include message in Fwd & Reply - Select to include the original message in any reply.

Include attachment - Select to include the original attachment in any reply.

Auto retrieval in Roaming - Choose whether to retrieve messages automatically when abroad (roaming).

New email noti. info - Choose whether to be alerted about a new e-mail with a pop-up message.

Signature - Create an email signature and switch this feature on.

Message folders

You will recognise the folder structure in your KM900, and it is fairly self-explanatory. If you set up an email account, you can have folders for each account.

Inbox - All messages you receive are stored in your inbox. From here you can view and delete them, among other functions.

Outbox - This is a temporary storage folder while messages are being sent.

Sent - Messages you sent are stored in this folder.

Drafts - If you don't finish writing a message, you can save what you've done in this folder.

Threaded box - Messages (SMS) exchanged with another party via messenger. You can save the image and message (SMS) simultaneously.

My Folders - Create folders to store your messages.

Using templates

Create templates for the SMS and MMS messages you send most often. There are already some templates on the phone, which you can edit.

- 1 When writing a new message, you can enter **Templates** from **Insert** in the options menu.
- 2 Choose **Text templates** or **Multimedia templates**. You can add, edit, delete or delete all templates. To edit a message, select it, amend it, and touch **Save template**.

01

02

03

04

05

06

07

08

Messaging

Using emoticons

Liven up your messages using emoticons. There are some commonly used emoticons already on your phone.

- 1 When writing a new message, you can enter **Emoticons** from **Insert** in the options menu.
- 2 You can add a new emoticon by touching **New emoticon**.

Changing your text message settings

Your KM900 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

Scroll to **Message settings** on the Settings tab and touch **Text message**. You can changes to the following:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Voice, Fax, X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This affects the size of your messages and therefore your data charges.

Send long text as - Choose to send long messages as multiple SMS or MMS.

Changing your multimedia message settings

Your KM900 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

In **Setting** tap select **Message settings** and **Multimedia message**.

You can make changes to the following:

Retrieval mode - Select **Home network** or **Roaming network**. If you then select **Manual**, you will only receive notifications about MMS messages. You can then decide whether or not to download them in full.

NOTE: Additional cost may occur when MMS are downloaded when roaming.

Delivery report - Choose whether to allow and/or request a delivery report.

Read reply - Choose whether to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long slides appear on screen.

Delivery time - Choose how long to wait before a message is delivered.

Multimedia message centre - Enter the details of your message centre.

01

02

03

04

05

06


07

08

Messaging

Changing your other settings

Scroll to **Message settings** on the Settings tab then:

Voicemail - Touch **New profile** or  to add a new Voicemail service. Contact your network operator for more information about the service they provide.

Service message - Choose whether to receive or block service messages. You can also set message security levels by creating trusted and not trusted sender lists.

Info. service - Choose your reception status, language and other settings.

Camera

Taking a quick photo

- 1** Press and hold down the camera key on the right side of the phone.
- 2** Holding the phone horizontally, point the lens towards the subject you want to take a picture of.
- 3** Press the capture button lightly and a focus box will appear in the centre of the viewfinder screen.
- 4** Position the phone so you can see the photo subject in the focus box.
- 5** When the focus box turns green, the camera has focused on your subject.
- 6** Press the capture button and hold it down.

TIP! Face Tracking

This automatically detects and focuses on human faces to help you take clearer pictures.

01

02

03

04

05

06


07

08

Camera

Once you've taken the photo

Your captured photo will appear on the screen. The image name is shown with four icons on the right-hand side.

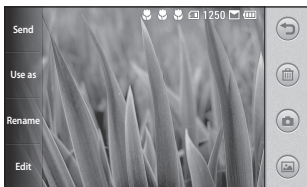


Send Touch to send the photo as a **Message, Email, Bluetooth** or **Blogger**. See page 36 for Sending a message, and page 102 for Sending and receiving your files using Bluetooth.

NOTE: Additional cost may occur when MMS are downloaded when roaming.


Use as Touch to use the image as wallpaper.


Rename Touch to edit the name of the selected picture.

Edit Touch to edit the image using various tools.


 Touch to return to the previous menu.

 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to view a gallery of your saved photos.

Getting to know the viewfinder

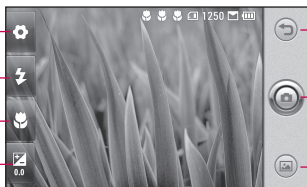

Back - Touch here to return to the menu map.

Camera mode - Shows whether the camera is in video or photo mode, and can also be used to take photos.

Gallery - Touch this icon to view the gallery.

Exposure - See Adjusting the Exposure on page 48.

Macro - Switch this on to take close up shots.

Flash status - Set flash light mode to automatic, on or off.

Settings - Touch this icon to open the settings menu. See Using the advanced settings on page 49 for details.

01

02

03

04

05

06

07


08

TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Camera




Using the flash

The default flash setting is auto, but there are other options.


- 1 Select  from the left side of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
 - Auto** - Your camera will assess the light available for a good picture and use the flash as necessary.
 - Always off** - The camera will never flash. This is useful if you want to save battery power.
 - Always on** - The camera will always flash.
- 3 When you touch the option you want, the flash menu will automatically close, allowing you to take a picture immediately.
- 4 The flash status icon in the viewfinder will change, based on the new flash mode.

Adjusting the exposure


The exposure defines the difference between light and dark areas in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch .
- 2 Slide the contrast indicator along the bar towards  for a lower exposure and hazier image or towards  for a higher exposure and a sharper image.

Taking a continuous shot

- 1 From the viewfinder, touch  to open all advanced settings options and select **Continuous shot**.
- 2 Position the subject in the viewfinder and press the capture button as if taking a normal photo.
- 3 The camera will take shots in quick succession.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the camera setting by scrolling the wheel. After selecting the option, touch the **OK** button.

Switch to - For self portraits, switch to the LG KM900's inner camera. You can also switch between camera mode and video camera mode.

Image size - Change the size of the photo to save memory space or to take an appropriately sized picture for a contact. See **Changing the image size** on page 51.

Colour effect - Choose a colour tone to use on your new photo. See **Choosing a colour effect** on page 52.

White balance - Choose between **Auto, Incandescent, Sunny, Fluorescent** and **Cloudy**.

Timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off, 3 seconds, 5 seconds** or **10 seconds**. This is ideal if you want to be included in a photo.

01

02

03

04

05

06

07

08

Camera

Shot mode - Choose the normal or continuous shot mode.

ISO - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can not use the flash. Select the ISO value from **Auto, 100, 200, 400** and **800**.

Image quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

Memory in use - Choose whether to save your photos to the Handset memory or the External memory.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.

Image stabilization - Enables you to take a photo without the camera wobbling or shaking.

Auto focus - Select the way the camera will focus. Choose between **Spot, Manual** and **Face tracking**.

Shutter sound - Select one of the four shutter sounds.

Grid view - Choose between **Off, 2x2 grid** or **3x3 grid**.

Geo-Tagging - On/ Off


Reset - Restore all camera default settings.

TIP! When you exit the camera all settings will return to their defaults, except image size and image quality. Any non-default settings will need to be reset, such as colour tone and ISO. Check these before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you will see a preview of the image change behind the settings menu.

Changing the image size

The more pixels, the larger the file, which means the files take up more memory space. If you want to store more pictures on your phone, you can change the resolution to make the files smaller.

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Image size** from the Preview menu.
- 3 Select a pixel value from the six options (**5M: 2560x1920, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) or choose the predefined wallpaper size.

01

02

03

04

05

06

07

08

Camera


Choosing a colour effect


- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Colour effect** from the Preview menu.
- 3 There are five colour tone options: **Off**, **Sepia**, **Mono**, **Negative**, **Emboss**.
- 4 Once you've made your selection, the colour tone menu can be closed by selecting the OK button. You are then ready to take a picture.

TIP! You can change a picture taken in colour to black and white or sepia, but you cannot change a picture taken in black and white or sepia to colour.


Using the inner camera

Your LG KM900 has an inner 640x480 camera for both video calls and taking photos.


- 1 To switch to the inner camera touch  then select **Switch to- Inner camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image, press the side button as normal.

TIP! The inner camera has fewer settings as it has no flash nor adjustable sensitivity. You can still alter the image size, colour effect, image quality, white balance and set the self-timer by touching  in the same way as when using the main camera.

3 After you've taken the photo you'll be offered all the same options as for an image taken with the main camera.

4 To return to the main camera touch  and then select **Outer Camera** from the Preview menu.

Viewing your saved photos

1 You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen.

01

02

03

04

05





06

07

08


Video camera

Shooting a quick video

- 1 Press and hold down the camera key on the right side of the phone.
 - 2 Then, touch  and then select **Switch to** in the view finder in camera mode to switch to video mode. Or, you can enter this menu directly by touching **Video camera**.
 - 3 The video camera's viewfinder will appear on the screen.
 - 4 Holding the phone horizontally, point the lens towards the subject of the video.
 - 5 Press the capture button once to start recording.
 - 6 **Rec** will appear at the bottom of the viewfinder with a timer showing the length of the video.
 - 7 To pause the video, touch  and resume recording by selecting .
- 8 Touch  on the screen to stop recording.

After shooting a video

A still image representing your video will appear on the screen. The name of the video will be shown on the bottom of the screen, along with four icons on the right-hand side.

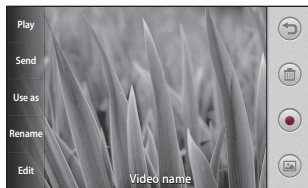

Play Touch to play the video.


Send Touch to send the photo as a **Message, Email, Bluetooth** or **YouTube**. See page 36 for Sending a message, and page 102 for Sending and receiving your files using Bluetooth.


NOTE: Additional cost may occur when MMS are downloaded when roaming.


Use as Touch to use the image as wallpaper.


Rename Touch to edit the name of the selected picture.

Edit Touch to edit the image with various tools.

 Touch to return to the previous menu.

 Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view the saved videos and pictures gallery.

01

02

03

04

05


06

07

08

Video camera

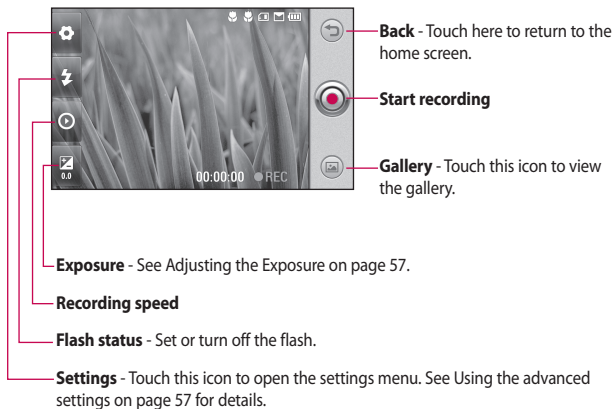


Getting to know the viewfinder



TIP! You can close all shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Adjusting the exposure

The exposure defines the difference between light and dark areas in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, towards  for a lower exposure and fuzzier image, or towards  for a higher contrast and sharper image.

Using the advanced settings

Using the viewfinder, touch **Settings** to open all the advanced settings options.

You can adjust the video camera setting by scrolling the wheel. After selecting the option, touch the **OK** button.

Switch to - Switch to your LG KM900's inner camera to record yourself on video. See **Using the inner video camera** on page 59 for details.

Video size - Change the size of the video to save memory space. See **Changing the video image size** on page 58.

Scene mode - Choose between **Auto** or **Night mode**.

Colour effect - Choose a colour tone to use on your new view. See **Choosing a colour tone** on page 59.

White balance - The white balance ensures any white parts of your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

01

02

03

04

05

06

07

08

Video camera

Video quality - Choose between **Super fine**, **Fine** and **Normal**.

The finer the quality, the sharper the video will be. The file size will increase as a result, meaning you'll be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS.

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

Memory in use - Choose whether to save your videos to the Handset memory or to the External memory.

Voice - Choose Mute to record a video without sound.


Sound focus - Choose the sound focus: **Off/ Outer focus/ Inner focus**

Hide icons - Select whether to hide the icons on the camera menu automatically or manually.

Reset - Reset all the video camera settings.

Changing the video image size

The more pixels, the larger the file size, which means the files take up more memory space. If you want to store more videos on your phone, you can change the video resolution to make the files smaller.

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select a pixel value from the four options:
 - 720X480(D1)** - The highest quality, widescreen option.
 - 640x480** - Standard sized VGA.

320x240 - Smaller image size, and therefore a smaller file size. This is ideal for saving memory space.


176x144 - Smallest image size and therefore the smallest file size.

- 4 Touch the OK button to return to the viewfinder.

TIP! The great editing software on your LG KM900 is compatible with all video types except 720X480 (D1) and 640x480. Don't record in this format if you plan to edit your video.


TIP! For video format conversion software, see the CD that came with your KM900.

Choosing a colour tone

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Colour effect** from the Preview menu.
- 3 There are six colour tone options, **Off, Sepia, Mono, Negative** or **Emboss**.
- 4 Touch the colour tone you want to use.

Using the inner video camera

Your LG KM900 has an inner 320x240 camera for both video calls and recording videos.

- 1 To switch to the inner camera, touch  then select **Switch to** then **Inner Camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, and press it again to stop recording.

01

02

03

04


05

06

07


08

Video camera

- 3 After you have shot the video, you'll be offered all the options available for a video shot using the main camera.
- 4 To return to the main camera touch  and then **Outer Camera**.

TIP! You can still alter the image size, colour effect, white balance and quality by touching **Settings** in the same way as when using the main camera.

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts to play automatically.


Watching your videos on TV

Connect your KM900 to your TV using the TV output cable.

NOTE: The TV output cable is available for purchase separately.


Your photos and videos

Viewing your photos and videos

- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.



TIP! Flick left or right to view other photos or videos.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.

Using zoom when viewing a video or photo

When viewing photos or videos, you can zoom in and out by pinching your fingers together or spreading them apart.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, touch the volume bar on the screen bottom after pressing the loudspeaker symbol. Alternatively, use the volume keys on the side of the phone.

TIP! Video file type avi support up to 352 x 288 (CIF)

01

02

03

04

05

06

07

08

Your photos and videos

Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch **Use as**.
- 4 The screen will switch to portrait mode. You can zoom in and out and move the cropped section of the picture using a thumbnail at the bottom of the screen.

Editing your photos

You can do lots of great things to your photos to change them, add to them or liven them up.

- 1 Open the photo you want to edit and touch **Edit** to show the options.
- 2 Touch the icons to alter your photo:




Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.





Draw something on your photo, freehand. Select the line thickness from the four options, then the colour you want to use.



Adding writing on a picture. See **Adding text to a photo** on page 64.

 Decorate your photo with stamps. Choose from the different stamps and touch your photo where you want to place them.

 Erase the editing you have done to the picture. You can choose the size of eraser you use.

 Touch to return to the gallery.


Save Save the changes you made to the photos. Select to save the changes as an **Update existing** or a **New file**. If you select **New file** enter a file name.

Undo Erase the editing you have done to the photo.

Image Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo** on page 65.

Filter Touch to apply the effect options to a photo.

Adjustment This helps to adjust a picture taken using automatic colour, brightness etc.

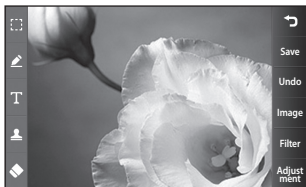

01

02

03

04

05


06

07

08



Your photos and videos

Adding text to a photo



- 1 From the editing screen, touch  .
- 2 Select **Text** to add unframed text or choose one of the speech bubble shapes.
- 3 Enter your text using the keypad and touch **Save**.
- 4 Move the text by touching it and sliding it to where you want it.



Adding an effect to a photo

- 1 From the editing screen, touch  .
- 2 You can apply any of the various options to the photo
- 3 To undo an effect simply touch  .

Cropping a photo

- 1 From the editing screen, touch  .
- 2 Choose the shape you want to use to crop the picture.
- 3 Drag the box over the area you want to crop.
- 4 When you are finished with your selection, touch  .

Adding a colour accent to a photo

- 1 From the editing screen, touch **Image**.
- 2 Choose **Colour Accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is the same or a similar colour, for example, a person's hair or jumper.
- 4 Alter the intensity of the accenting by touching **Intensity** and touch '+' or '-' button.
- 5 Touch **OK**.
- 6 All colour will be removed from the photo, apart from in the section marked for colour accenting.
- 7 Select **Save** to save the changes.

Swapping colours in a photo

- 1 From the editing screen, touch **Image**.
- 2 Choose **Colour swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is the same or a similar colour. For example, someone's hair or jumper.
- 4 Select a colour.
- 5 Press **OK**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select **Save** to save the changes.

01

02

03

04

05

06

07

08




Your photos and videos


Editing your videos

The video editing features are available for MPEG4 types except 720x480 (D1) resolution.


Don't record in these formats if you plan to edit your video.


Trimming the length of the video

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Trim/Multi trim**.
- 3 Touch  and set the new start and end points using **Trim**.
- 4 Touch **Preview** to confirm you are satisfied with the new cut.
- 5 Touch **Save** or, alternatively, touch  to return to the gallery and discard the changes.

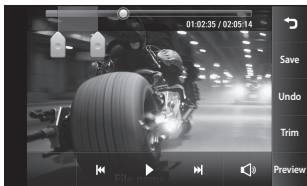


Merging two videos

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Video merge**.
- 3 The My videos folder will open. Choose the video you want to merge.
- 4 Touch and slide the photo to move it to the end or the beginning of the video.
- 5 Touch **Preview** to choose how to merge the videos together.

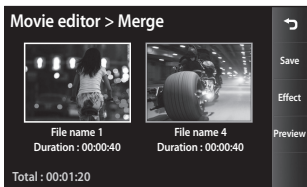



- 6 Press **Save** then **New file** to save the new merged video. Replace the existing file or save as a new file.
- 7 Repeat these steps to merge more videos.

Merging a photo with a video

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Image merge**.
- 3 The My images folder will open. Choose the photo you want to move into your video and touch **Select**.

- 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch **Preview** to choose how the photo and video merge together.
- 6 Press **Save** then choose to replace the existing file or save as a new file.
- 7 Repeat these steps to merge more photos.

Adding text to a video

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and select **Text overlay**.
- 3 Touch  and pause playback for setting the start point for text appearance.
- 4 Touch **Start** and choose the text styles. Enter your text using the keypad and select **OK**.

01

02

03

04

05


06

07

08



Your photos and videos

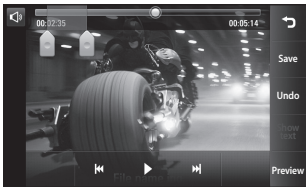- 5 Touch the area of the screen you want the text to appear and touch **OK**.



- 6 Touch **Save**. Replace the existing file or save as a new file.
- 7 Repeat these steps to add more text.


Overlaying a photo

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Image overlay**.
- 3 The My images folder will open. Choose the photo you want to overlay on your video.
- 4 Touch  and pause when you want the picture to appear, then select **Opacity** after touching the **Start** button.
- 5 Touch **OK** and then press **End** when the photo overlay shall be stopped.
- 6 Touch the area of the screen in which you want the text to appear. If the photo is too big it will overlay the whole screen, not just the selected area.
- 7 Touch **Save**. Replace the existing file or save as a new file.
- 8 Repeat these steps to add more photos.

Adding a soundtrack to your video

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Audio dubbing**.
- 3 The My sounds folder will open. Choose the track you want to add to your video.
- 4 The original audio track on your video will be erased.
- 5 If the audio is shorter than the video, choose whether to play it **Once** or **Repeat** it.
- 6 Replace the existing file or save as a new file.

Adding live sound to your video

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Live**.
- 3 Set the sound value to original sound or recording sound.



01

02

03

04

05


06

07


08

Your photos and videos

Changing the video speed

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Time scaling**.
- 3 Select one of the options. This can vary depending on the frame rate.
- 4 Replace the original file or save as a new file.


Adding a dimming effect

- 1 Open the video you want to edit, touch  option key.
- 2 Select **Edit** and choose **Dimming Effect**.
- 3 Your video will now fade in at the start and fade out at the end.
- 4 Replace the original file or save as a new file.

Multimedia

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

To access the Multimedia menu, touch  select **My stuff** from Multimedia tab. You can open a list of the folders that store all your multimedia files.

TIP! To delete any files in My stuff, touch  then **Delete**.

Pictures

My images contains a list of pictures including default images pre-loaded onto your phone, images you have downloaded and those taken on your phone's camera.

My images options menu

The options available to you in **My images** depend on the type of image you have selected. All options will be available for pictures you have taken on the phone's camera, but only the **Set favorites**, **Sort by**, **Slide show** and **Memory manager** options are available for default images.

Sending a photo

- 1 To send a photo just select picture you want.
- 2 Touch **Send**. Choose between **Message**, **Email**, **Bluetooth** or **Blogger**.
- 3 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, your phone will search for a device to send the picture to.

01

02

03

04

05

06



07

08

Multimedia

Using an image

You can choose images to use as wallpapers and screensavers, or even to identify a caller.

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **My images**.
- 3 Select an image and touch  .
- 4 Touch **Use as** and choose between:

Wallpaper - Set a wallpaper for the key lock screen.

Contacts - Allocate an image to a person in your contacts list, so the picture is displayed when they call you.



Start up image - Set an image to appear when you switch the phone on.

Shut down image - Set an image to appear when you switch the phone off.

Outgoing call image - Set an image to appear during outgoing calls.



Incoming call image - Set an image to appear during incoming calls.

Printing an image

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **My images**.
- 3 Select an image and touch  .
- 4 Touch **Print**, then choose between **Bluetooth** and **PictBridge**.


Moving or copying an image

An image can be moved or copied between the phone memory and the memory card. You may want to do this to clear some space in one of the memories, or to safeguard your images against loss.

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **My images**.
- 3 Touch .
- 4 Select **Move** or **Copy**.

Creating a slide show

If you want to view all the images on your phone, you can create a slide show to save you having to open and close each individual image.

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **My images**.
- 3 Touch  then **Slide show**.

Geo-tagging



Turn on the camera and enjoy the capabilities of your phone's location-based services.

Take pictures wherever you are and tag them with the location.

If you upload tagged pictures to a blog that supports Geo-tagging, you can see the pictures displayed on a map.

Checking your memory status

You can check to see how much memory space you have used and how much you have left.

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **My images**.
- 3 Touch  then **Memory manager**.

01

02

03

04

05

06

07

08

Multimedia

Sounds

The **My sounds** folder contains Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage or send sounds or set them as ringtones.


Using a sound

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **My sounds**.
- 3 Select **Default sounds** or **Download sound**.
- 4 Select a sound and touch the play icon. It will start to play.
- 5 You can use the sound for various tones by selecting the **Use as** menu.
- 6 Choose between **Voice ringtone**, **Video ringtone** and **Message tone**.

Videos

The **My videos** folder shows a list of videos you have downloaded or recorded on your phone.


Watching a video

- 1 Touch  then select **My stuff** on the Multimedia tab.
- 2 Touch **My videos**.
- 3 Select a video to play.

TIP! KM900 supports both DivX & Xvid video format playback to ensure greater content availability. Refer to page 92 for detail.

NOTE: The TV output cable is available for purchase separately.


Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose between **Message, Email, Bluetooth** and **YouTube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message, which you can write and send as normal. If you choose **Bluetooth**, your phone will search for a device to send the video to.

Games and Applications

You can download new games and applications to your phone to keep you enjoy.

Playing a game

- 1 Touch  then select **Games & Apps** on the Multimedia tab.
- 2 Touch **Games or Applications** menu.


- 3 Touch Launch button to launch a game or an application.

Using the options menu

Within Games and Application folders, the following options are available:

- **New folder:** Create a folder within Games or Applications
- **Sort by:** Sort the games and applications by Date, Name, Size or Memory
- **Memory manager:** View the memory status handset or external memory.

Installing a Java game and application

- 1 Touch  then select **My stuff** on the Multimedia tab.
- 2 If you insert new memory card, touch External Memory menu.
- 3 Select the file(*.jad or *.jar) you want to install and touch **Install**.

01

02

03

04

05

06

07

08

Multimedia


Use the M-Toy menu

M-Toy contains preloaded flash games which use the integrated motion sensor.

Flash contents

The Flash contents folder contains all of your default and downloaded SWF files.


Viewing an SWF/ SVG file

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **Flash contents**.
- 3 Select the file you want to view.

Documents

This is possible with your Excel, PowerPoint, Word, Text and pdf files.

Viewing a file

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **Documents**.
- 3 Select a document and touch **View**.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 88 for details.


To transfer files (e.g. music) using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are within range of each other
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent, accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.

Others

The **Others** folder is used to store files that are not pictures, audio files, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder. If this happens, you can move them.

Creating a movie

- 1 Touch  then select **Movie maker** from Multimedia tab.
- 2 Touch **Insert** to add an image.
- 3 Touch the **Style** tab on the top to choose a movie style.
- 4 Touch the **Sound** tab on the screen to change the sound, e.g. for a voice recording.

- 5 Touch the **Preview** button to see the results.
- 6 Touch the **Play Order** tab on the screen to change the order.
- 7 Touch the **Save in** tab on the screen to choose where to save the movie, and touch the **Usage** tab to choose between storing it and MMS.
- 8 To save your movie, press play and then touch **Save movie**.

01

02

03

04

05


06

07

08

Multimedia

Music

Your LG KM900 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch  then select **Music** from Multimedia Tab. From here, you can access a number of folders:

All tracks - Contains all the songs you have on your phone.

Favorites - Contains the songs you have saved as favourites.

Artists - Browse your music collection by artist.

Albums - Browse your music collection by album.

Genres - Browse your music collection by genre.

Transferring music onto your phone


The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

You can also use LG PC Suite, see page 88 for details. To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch  then select **Music** from the Multimedia tab.
- 2 Touch **All tracks**.
- 3 Select the song you want to play then touch .
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the previous song.
- 7 Touch  to return to the **Music** menu.


TIP! To change the volume while listening to music, touch .

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch  then select **Music** from the Multimedia tab.
- 2 Touch the  option icon.
- 3 Touch **New playlist**, enter the playlist name and touch .
- 4 The All tracks folder will be displayed. Touch all of the songs that you would like to include in your playlist; a tick will appear next to these track names.
- 5 Touch **Add songs**.

To play a playlist, select it and touch Play.

NOTE: To add a second playlist, touch  then New playlist.

01

02

03

04

05



06

07

08

Multimedia

Deleting a playlist

- 1 Touch  then select **Music** from the Multimedia tab.
- 2 Touch the  option icon.
- 3 Touch **Delete** or **Delete all** to delete all of the playlists.

Using the radio

Your LG KM900 has an built-in FM radio feature so you can tune into your favourite stations and listen on the move.



NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket.



Searching for stations

You can tune your phone to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You can store up to 30 channels on your phone.



To tune automatically

- 1 Touch  then select **FM radio** from Multimedia tab.
- 2 Touch .


- 3 Touch **Auto scan** then **Yes**. The stations found will be allocated to channel numbers in your phone by selecting **Set**, **Skip** and **Stop**.

NOTE: You can also manually tune to a station by using the wheel displayed next to the radio frequency.

Resetting channels

- 1 Touch  then select **FM radio** from Multimedia tab.
- 2 Touch .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. If you reset all of the channels, each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Touch  then select **FM radio** from Multimedia tab.
- 2 Touch the channel number of the station you would like to listen to.

TIP! To improve radio reception, extend the headset cord, which functions as the radio aerial.

Warning! If you connect the headset not specifically made for it to the phone, the radio reception can be interfered.

01

02

03

04

05

06


07


08

Organiser



Adding an event to your calendar

- 1 From the home screen select  then scroll to **Organiser** on the Utilities tab. Select **Calendar**.
- 2 Select the date to which you want to add an event.
- 3 Touch  then **New schedule**.
- 4 Touch **Category** then choose between **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you want your event to begin.
- 5 For appointments and anniversaries, you can enter the time and date the event finishes in the lower time and date boxes.
- 6 If you would like to add a subject or note to your event, touch **Subject** and type in the details.
- 7 Select **Set alarm** to set an alert for the event. If you want to repeat the alarm, select **Set repeat**.




- 8 Touch  to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events, and an alarm will sound at the event start time, to help you staying organised.

TIP! You can enter holidays in your calendar. Individually touch each day of the holiday, then touch  and select **Set holiday**. Each day will be marked in red.

Changing your default calendar view

- 1 From the home screen select  then scroll to **Organiser** on the Utilities tab. Select **Settings** in .
- 2 Touch **Default view** and choose Calendar, Week, Timetable, List or All tasks.



Adding an item to your To Do list

- 1 From the home screen select  then scroll to **Organiser** on the Utilities tab.
- 2 Select , select **New task** and touch **Note**.
- 3 Set the date for the task, add notes, then select its priority level: **High**, **Medium** or **Low**.
- 4 Save the task by selecting .

TIP! You can back up and synchronise your calendar with your computer. See PC Sync on page 88.

Using the date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed. For example, 60 days from 10.10.09 will be 09.12.2009. This helps you keeping track of deadlines.

- 1 From the home screen select  then scroll to **Organiser** on the Utilities tab.
- 2 Select , select **Date finder**.
- 3 Set the required date in the **From** tab.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

01

02

03

04

05



06

07



08

Organiser

Setting your alarm

- 1 From the home screen select  then scroll to **Alarms** on the Utilities tab.
- 2 If you want add a new alarm, touch **New alarm**. If you want to set the alarm to sound again within one hour, touch **Quick alarm**.
- 3 Set the time you would like the alarm to sound.
- 4 Choose whether you want the alarm to repeat, set the repeat and type.
The icons indicate the weekday you select.
- 5 Select **Sound/ Vibration** to select the type of alarm you want.
- 6 Touch **Alarm bell** for selecting the alert melody or sound. To listen to the sounds, touch the sound, followed by .
- 7 Add a memo to the alarm.

Adding a memo


- 1 From the home screen select  then scroll to **Memo** on the Utilities tab.
- 2 Touch **New memo**.
- 3 Type your memo, then touch .


TIP! You can edit an existing memo. Select the one to be edited , touch **Edit** and type in your changes.

Voice recorder

Use your voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 Touch .
- 2 Touch **Voice recorder** in Utilities tap.
- 3 Touch **Play** to begin recording.
- 4 Touch **Stop** to end recording.

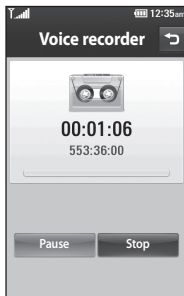

- 5 If you want to re-record the voice, touch **New**.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching **Send**.
- 2 Choose **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message which you can write and send it as normal. If you choose **Bluetooth**, your phone will search for a device to send the voice recording to.

01

02

03

04

05



06

07


08

Organiser

Using your calculator


- 1 From the home screen select , then scroll to **Calculator** on the Utilities tab.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you require (+, -, x or ÷), followed by =.
- 4 For more complex calculations, touch  and choose between **sin, cos, tan, deg, log, etc..**

Converting a unit



- 1 From the home screen select , then scroll to **Tools** on the Utilities tab.
- 2 Select **Unit converter**.
- 3 Choose whether you want to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.

- 4 Then select the unit and enter the value you would like to convert from.
- 5 The corresponding values then will appear on the screen.

Using the stopwatch

- 1 From the home screen, select , then touch **Utilities**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin timing.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Reset** to start the time again.

Adding a city to your world clock

- 1 From the home screen, select  and scroll to **World clock** in the Utilities tab.
- 2 Touch the  icon, followed by **Add city**. Start typing the name of the city you require, and it will be displayed on the screen.
- 3 Touch the city to select it. This will add it to your World time list.

01

02

03

04

05

06

07

08

PC Suite

You can synchronise your PC with your phone. This will ensure all your important details and dates match, and also act as a back up to help your mind at ease.


TIP! To do this, you will need to install the PC Suite application provided on the CD-ROM or available as a download from <http://update.lgmobile.com>. (From www.lgmobile.com PRODUCTS > Manual & Software > Go to Manual & S/W Download Section)

- 3 Connect handset and PC via USB cable and wait for a while.
- 4 Installation guide message will be displayed.

Caution! If installation guide message is not displayed in your PC, please check your CD-ROM setting on Windows.

- 5 Insert the supplied CD or click download button to directly download LG PC Suite program from website.
- 6 Click on the LG PC Suite Installer which will appear on your screen.

Installing the LG PC Suite on your computer

- 1 From the home screen touch , then scroll to **Connectivity** on the Settings tab.
- 2 Touch **USB connection mode**.

Connecting your phone and PC

- 1 Select PC Suite mode in Connectivity menu and then connect the USB cable to your phone and your PC.
- 2 LG PC Suite will be automatically activated on your PC.

Caution! If LG PC Suite is not activated automatically in your PC, please check your CD-ROM setting on PC.

- 3 Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose whether to back up **Contents Data** and/or

Phonebook/Schedule/ToDo/Memo Data. Select the location you want to back up the information to, or restore it from. Click **OK**.

- 4 Your information will be backed up.

Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Manage Files** icon.
- 3 All the documents, flash contents, images, audio files and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content you no longer need.

01

02

03

04

05

06

07

08

PC Suite

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Your PC will now import and display all the contacts saved on your SIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you want to save your contacts to.

NOTE: To back up contacts saved to your SIM card, click on the SIM card folder on the left side of the PC screen. Right click on one of your contacts and choose **Select all**, then **Copy** or **Move to phone memory**.

Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left side of the screen and all your numbers will be displayed.

Synchronising your messages


- 1 Connect the phone to your PC.
- 2 Click on the Messages icon.
- 3 All your phone messages will be displayed in folders on the screen.
- 4 Use the tool bar at the top of your screen to rearrange messages."

Music Sync

This menu allows to add music to KM900. Before you start to transfer music from your PC to your device, make sure your computer has the following set-up and accessory is at hand:

- Microsoft Windows XP or Vista
- Windows Media Player 10 or above
- USB cable

Transferring music using Windows Media Player

- 1 From the home screen select , then scroll to **Connectivity** on the Settings tab.
- 2 Select **USB connection mode** and choose **Music sync**.
- 3 Connect your handset and PC using a compatible USB cable.
- 4 When you try to connect the handset to your PC, your handset will read: Music Sync... followed by **Connected**.
- 5 The PC will prompt you to launch your preferred music management software.
- 6 Select Windows Media Player.
- 7 Go to the Sync Tab, then drag and drop the music you wish to transfer to your handset into the **Sync List** pane.
- 8 Click on **Start Sync** button. This starts the transfer process.

WARNING

Do not disconnect your phone during the transfer.

NOTE: Music Sync is only available for music contents.

Using iSync

Install the iSync plug-in install file which is supported by Macintosh and PCs and connect the phone via Bluetooth or USB.

To synchronise via Bluetooth, set up a pairing between the Macintosh or PC and the phone. If you want to set up via USB, select the iSync menu in USB connection mode.

NOTE: When using Bluetooth, you have to select **iSync on** in option menu.

01

02

03

04

05

06

07

08

PC Suite

DivX Converter

Install the DivX converter, which is supplied on the same CD as the PC Sync software. DivX will convert media files on your PC to a format that lets you upload them and view them on your phone.

Once installed select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select **Preferences**, you can change the location where the converted files are saved.


Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is complete, a Conversion complete pop up will be displayed.

The web

Browser

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 From the home screen select  then scroll to **Browser** on the Communication tab.
- 2 To go straight to the browser home page, select **Home**. Alternatively, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Adding and accessing bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the home screen select  then scroll to **Browser** on the Communication tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **New bookmark**. Enter a name for the bookmark followed by its URL.
- 4 Touch . Your Bookmark will now appear in the bookmark list.
- 5 To access the bookmark simply touch the bookmark then touch connect. You will be connected to the bookmark.

01

02

03

04

05

06

07

08


The web

Using the RSS reader


RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content, such as blog entries, news headlines or podcasts. An RSS document, called a feed, web feed or channel, contains either a summary of content from an associated website or its full text. RSS makes it possible for people to keep up-to-date with their favourite web sites in an automated way that is easier than checking manually.

The user subscribes to a feed by entering its link into the reader or by clicking an RSS icon in a browser that starts the subscription process. The reader checks the user's subscribed feeds regularly for new content and downloads any updates that it finds.


Accessing a saved page

- 1 From the home screen select  then scroll to **Browser** on the Communication tab.
- 2 Select **Saved pages**.
- 3 Select the page you want to view and it will open.

Viewing your browser history

- 1 From the home screen select  then scroll to **Browser** on the Communication tab. Select **History**.
- 2 The web pages you have accessed recently will be displayed. To access any of these pages, simply select it.

Changing web browser settings

- 1 From the home screen select  then scroll to **Connectivity** on the Settings tab.
- 2 Select **Browser settings**.
- 3 You can edit the **Profile**, **Appearance settings**, **Cache/Cookies**, **Security** or **Reset settings**.
- 4 You can simply set these on or off by touching the switch icon.

Using your phone as a modem

Your KM900 can be used as a modem for your PC, giving you email and internet access even when you don't have any wired connection. You can do this via the USB cable or by Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KM900 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on the screen.
- 5 Click **Connect** and your PC will connect via your KM900.

NOTE: For more information on synchronising using the LG PC Suite see page 88.

01

02

03

04

05

06

07

08

The web

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KM900.
- 2 Pair your PC and KM900 so that a passcode is required to connect them.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on the screen.
- 7 Click **Connect** and your PC will connect via your KM900.

NOTE: For more information on Bluetooth see page 102.

Access to Google Maps


You can use Google navigation services from the Communication tab. Select the Google Maps menu in Google to launch the application. The GPS position your KM900 is providing will be processed. This service helps you to get around and to find your way by delivering maps onto your display. Note that additional cost may occur when using this service.

Settings

This folder lets you adapt your settings to personalise your KM900.

NOTE: For information on call settings see page 30.

Changing your screen settings

- 1 From the home screen, select  then scroll to **Display settings** on the Settings tab.
- 2 You can choose the option menu from:

Screen images - Choose an image for locking, switching the phone on or off, or making or receiving a call.

NOTE: The setting will be reset if you select **Reset** menu.

Homescreens - Widget/ Contact/ Multimedia/ Shortcut

Lock screen - Choose the clock type on the lock screen.

Font - Adjust the font size and style.

Backlight - Choose how long the backlight stays on.

NOTE: The longer the backlight stays on, the more battery power it uses and you may need to recharge your phone more often.


Auto brightness - Adjust the screen brightness automatically.

Brightness - Adjust the screen brightness.

Personalising your profiles

You can quickly change your profile on the home screen. Just touch the status summary icon on the top, then touch the profile tab.

Using the settings menu, you can personalise each profile setting.

- 1 From the home screen select  then scroll to **Profiles** on the Settings tab.
- 2 Choose the profile you want to edit: **Normal**, **Silent**, **Outdoor** or **Flight mode**.

01

02

03

04

05

06

07


08

Settings

- 3** You can then change all sounds and alert options available in the list, including your **Voice/Video ringtone, Volume, Message alerts** and others.

Changing your phone settings

Use the freedom of adapting the KM900 to your own preferences.

- 1** From the home screen, select  then scroll to **Phone settings** on the Settings tab.
- 2** Select a menu from the list below:
- Date & Time** - Adjust your date and time settings or choose to auto update the time when travelling or for daylight saving.
- Power save** - Choose to switch the value power saving settings to **On** or **OFF**.

Languages - Change the language on your KM900's display.

Auto key lock - Lock the keypad automatically on the home screen.

Security - Adjust your security settings, including PIN codes and handset lock.


Touch settings - Change the touchpad value settings.

Memory manager - See **Using memory manager** on page 101 for more information.

Reset settings - Restores all settings to their factory defaults.

Handset information - View KM900 technical information.

Changing your touch settings

From the home screen select  then scroll to **Phone settings** on Settings tab.

Touch vibration - Change the type of vibration.

Vibration - Vibration 1/2/3

Vibration volume - Controls the strength of vibration.


Touch sound - Change the tone when touching the screen.

Sound - Sound 1/2/3

Volume - Controls the volume of tone.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can use your new phone immediately. To Use this menu to change your settings.

From the home screen select  then scroll to **Connectivity** on Settings tab.

Network selection - Your KM900 will connect automatically to your preferred network.

Internet profile - Set the profiles for connecting to the internet.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

GPS type - Choose **Assisted GPS** or **Stand alone**.

01

02

03

04

05

06

07

08

Settings

GPS

- GPS technology uses information from earth-orbiting satellites to find locations.
- A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach them, then uses that information to identify its location.
- This may take from a couple of seconds to several minutes.
- Assisted GPS (A-GPS) on this mobile is used to retrieve location assistance data over a packet data connection.
- The assistance data is only retrieved from the Service server when offered by your network provider and needed.

Note : GPS service has an error tolerance and it is unable to work in buildings or underground.

USB connection mode -

Synchronise your KM900 using the LG PC Suite software to copy files from your phone. See page 88 for more information on synchronisation.

TV out - Choose **PAL** or **NTSC** when connecting your KM900 to a TV.

DivX VOD registration - This menu is used to generate a DivX VOD registration code. Please visit <http://vod.divx.com> to register and for technical support.

Packet data conn. - Set the packet data connection.


Browser setting - Set the values related to the browser.

Streaming settings - Your network operator has already saved this information. You can edit it if you want to make changes.

Java settings - Allows you to set profiles for connections made by Java programs and to view certificates.

Using memory manager

Your KM900 has three available memories: the phone itself, the SIM Card and an external memory card (which you may need to purchase separately). You can use memory manager to determine how each memory is used and see how much space is available.

From the home screen select  then scroll to **Phone settings** on the Settings tab. Select **Memory Manager**.

Handset common memory 1/2

- View the memory available on your KM900 for MMS, Email, Java applications and others.

Handset multimedia memory

- View the memory for multimedia contents, such as streaming files, movies, music, pictures, sounds, video and flash.

Handset reserved memory

- View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memos, Alarms, Call history, Bookmarks and Miscellaneous items.

USIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (which you may need to purchase separately).

01

02

03

04

05


06

07

08

Settings

Using flight mode

Turn flight mode on by selecting  then **Settings**. Touch **Profiles** and select **Flight mode**.

Flight mode prevents you making calls, connecting to the Internet, sending messages or using Bluetooth.

Sending and receiving files using Bluetooth

Bluetooth is a great way to send and receive files as it uses no wires and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:



- 1 Open the file you want to send, which will be typically a photo, video or music file.
- 2 Touch  and choose **Send**. Select **Bluetooth**.
- 3 If you have already paired the Bluetooth device, your KM900 will not automatically search for other Bluetooth devices. If not, your KM900 will search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to and touch **Select**.
- 5 Your file will be sent.

TIP! Check the progress bar to make sure your file has been sent.

To receive a file:

- 1 To receive files your Bluetooth must be set to **On**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in My stuff.

Changing your Bluetooth settings

- 1 From the home screen select  then scroll to **Bluetooth** on the Settings tab.
 - 2 Touch .
- Make your changes to:
- My device information** - Enter a name for your KM900.

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

Remote SIM mode on - Activate the remote SIM mode.

iSync on - Choose to activate on iSync.

Delete - Choose to delete the selected profile.

Delete all - Choose to delete all profiles.

Supported services - See options to use Bluetooth in a ssociation with different services.

01

02

03

04

05

06

07

08

Settings

Pairing with another Bluetooth device

By pairing your KM900 with another device, you can set up a passcode-protected connection. This makes pairing more secure.

- 1 Check that your Bluetooth is **On**. You can change your visibility using the **Settings** menu.
- 2 Touch **Search**.
- 3 Your KM900 will search for Bluetooth devices. When the search is completed **Refresh** will appear on the screen.
- 4 Choose the device you want to pair with and enter a passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode-protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check that your Bluetooth is **On**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 The headset will be automatically switched to Headset profile.
- 4 Touch **Ask always** or **Allow without asking**.

TIP! See page 30 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

Wi-Fi

Wireless Manager allows you to manage Internet connections per Wi-Fi (Wireless LAN) on your device. It allows the phone to connect to local wireless networks, or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

NOTE: The KM900 supports WEP, WPA-PSK/2 encryption, and not EAP, WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

1. How to set up Wi-Fi

- 1 Touch Wi-Fi from the Settings tab and turn Wi-Fi on
- 2 AP (Access Point) Search
 - Searches which AP it can connect to.
- 3 AP Connect
 - Connects to the desired AP from the AP search list.
 - If the AP is security type WEP or WPA-PSK/2, enter the security key.

2. Wi-Fi network profile support

- 1 Wi-Fi profile support (how to connect to a frequently-used AP or Hidden AP)
 - 1) If the AP does not appear in the search list, you can connect to it by saving it as a profile.

01

02

03

04

05

06

07

08

Wi-Fi

- 2) Saving the frequently-used AP as a profile makes it easier to enter the Security key when connecting to an AP with that Security type.
- 3) If the AP does not support DHCP, you can connect to the AP using a static IP address.
- 2** Description of each field in the Wi-Fi profile.
 - 1) Network name: SSID (ID)
 - 2) Security type: WEP, WPA-PSK/2 support.
 - 3) Security key: saves the security key.
 - 4) IP/DNS setting: this allows you to set to Automatic or Static depending on whether the AP supports DHCP.
For Static, enter the field value of the IP address and DNS server to use with the static IP address when connecting.
- 3** How to save the Wi-Fi profile
 - 1) Select Saved networks from the Options menu, then select **New network** and enter values into each field.
 - 2) It is possible to select and save the AP search list by selecting **Wi-Fi On** and then **Refresh** (Searching AP).
 - 3) After connecting to an AP with this Security type, the profile will be saved automatically.

3. How to obtain MAC-address

For setting up a connection in some wireless networks with MAC filter you may need to enter the MAC address of your KM900 into the router.

- 1** Touch Wi-Fi from the settings tab, then open the options menu.
- 2** Select My MAC Address and it will be displayed.

Software Update

Software Update

LG Mobile Phone Software Update Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to update your software to the latest version quickly and conveniently over the Internet without needing to visit our service centre.

As the mobile phone software update program requires your full attention throughout the update process, please make sure you check all instructions and notes that appear at each step before moving on to the next step.

Please note that removing the USB data communication cable or batteries during the update may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data

during the update process, you are advised to back up any important information in advance for safekeeping.

01

02

03

04

05

06

07

08

Accessories

There are a variety of accessories available for your mobile phone, which may be sold separately. You can select these options according to your personal communication requirements. Consult your local dealer for availability. **(Items described below may be optional.)**

Charger



Data cable and CD

Connect and synchronise your KM900 and PC.



Battery



Stereo headset



User Guide

Learn more about your KM900.



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Network service

The wireless phone described in this guide is approved for use on E-GSM 900, DCS 1800, GSM 850, PCS 1900 and W-CDMA networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

DivX VOD registration

Generate a DivX VOD registration code.

Please visit <http://vod.divx.com/> for registration and technical support.

Technical data

General

Product name: KM900

System: E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900/WCDMA

Ambient Temperatures

Max: +55°C (discharging),
+45°C (charging)

Min: -10°C

01

02

03

04

05

06

07

08

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

KM900

Trade Name

LG



Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.6.1 / EN 301 489-7 V1.3.1 / EN 301 489-9 V1.3.1 / EN 301 489-17 V1.2.1 /
EN 301 489-19 V1.2.1 / EN 301 489-24 V1.3.1
EN 60950-1: 2001
EN 50360 / EN 50361: 2001
EN 301 511 V9.0.2 / EN 301 908-1 V3.2.1 / EN 301 908-2 V3.2.1
EN 300 328 V1.7.1
EN 301 357-1 V1.4.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director 8, January, 2009

Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model KM900 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.602 W/kg (10g) and when worn on the body is 0.646 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.

Guidelines for safe and efficient use

- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off or activate flight mode before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

Guidelines for safe and efficient use

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Trouble Shooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough Battery empty Battery contacts dirty	Press the On/Off key down for at least two seconds. Keep charger attached for a longer time. Clean the contacts.


Trouble Shooting

Message	Possible causes	Possible Solutions
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
Phone loses network	Battery defective	Replace battery.
	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.



Warranty Card
產品保用證

Mobile Phone
手提電話

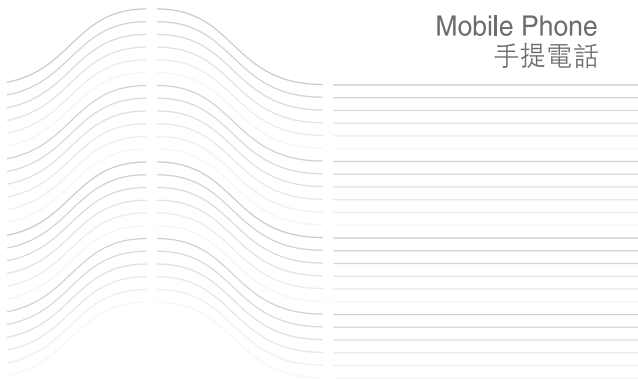

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



Welcome to contact for detailed information
& Customer Care Centre address

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.
Otherwise, this warranty will be voided.

重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。

Mobile Phone Warranty Policy

HK Area
香港地區

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 - (i) Handset :12 months
 - (ii) Charger :6 months
 - (iii) Battery :6 months
 - (iv) Hand free earphone :3 months.
- (2) Warranty is valid only for authorized product, parallel import and counterfeit product are invalid.
- (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories, etc.).
- (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
- (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
- (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
- (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alteration or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
- (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
- (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
- (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
- (11) This warranty card is restricted within Hong Kong SAR only.

- (1) 本公司為客戶提供保用期如下，只適用於香港購買之手機，並不包括香港促銷活動之贈品(由購買日起計)
 - (i) 機身: 12個月
 - (ii) 充電器: 6個月
 - (iii) 電池: 6個月
 - (iv) 免提耳機: 3個月
- (2) 保修服務只適用於原裝貨。水貨及冒牌貨均無效。
- (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
- (4) 用戶要求維修時，須將原裝手機、保用證及印有IMEI號之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效。客戶須遵行維修費用。
- (5) 在保用期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
- (6) 手機內存資料有可能因維修而遺失，請顧客自行保存。
- (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向本人量收所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改，或基於其他的維修貼紙遭受損壞、磨蝕、除去、保修服務無效。
 - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
- (8) 本公司將對任何使用、維修或運送時引致之系統損壞及資料遺失，或因天然災害、意外事件造成之損失概不負責。
- (9) 本保用證的發出及截止權均屬本公司所有，就不明的情況或個案，經調查後，本公司有權發出或終止本保用證。
- (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
- (11) 此保用證只適用於香港特別行政區範圍內。



服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜





To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號



Limited Warranty

限期保用證

To provide our best after-sales service, please complete and return this warranty card to us. 您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下尊有的售後服務。

Customer Information

客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號





