



繁體中文  
简体中文  
ENGLISH

使用手冊 GD880

使用手冊  
GD880

LG Electronics



CE 0168

P/N : MMBB0374248 (1.0) W

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B016192



此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。



## GD880 使用手冊

恭喜您購買了 LG 先進輕巧的 GD880 手機，本手機設計採用最新的數碼流動通訊科技。

# 內容

安全及有效使用準則.....	7	變更通用設定.....	23
瞭解您的手機.....	12	變更視像通話設定.....	24
手機背面.....	13	通話費用.....	24
安裝智能咭和電池.....	14	通話時間.....	24
手機充電.....	15	數據用量.....	24
記憶咭.....	16	<b>通訊錄.....</b>	<b>25</b>
使用觸控屏幕.....	17	搜尋通訊錄.....	25
觸控屏幕提示.....	17	新增聯絡人.....	25
控制觸控屏幕.....	17	建立群組.....	25
<b>桌面.....</b>	<b>18</b>	變更通訊錄設定.....	26
新增我的最愛功能表.....	18	檢視資訊.....	26
快捷鍵.....	19	從社交網絡匯入朋友.....	27
<b>通話功能.....</b>	<b>20</b>	<b>訊息.....</b>	<b>28</b>
撥打電話.....	20	訊息.....	28
透過通訊錄撥打電話.....	20	發送訊息.....	28
接聽來電和拒接來電.....	20	輸入文字.....	28
通話中選項.....	21	T9 模式.....	28
快速撥號.....	22	使用範本.....	28
撥打其他電話.....	22	使用情感圖示.....	28
檢視通話記錄.....	22	使用簽名.....	29
使用來電轉駁.....	22	變更文字訊息設定.....	29
使用通話限制.....	23		
使用致歉訊息.....	23		

# 內容

變更多媒體訊息設定 .....	29	將相片設為牆紙 .....	38
變更其他設定 .....	30	編輯相片 .....	39
設定電郵 .....	30	<b>多媒體</b> .....	<b>40</b>
Microsoft Exchange 電郵地址 .....	31	圖片 .....	40
擷取電郵 .....	31	發送相片 .....	40
使用新帳戶發送電郵 .....	31	使用圖像 .....	40
變更電郵設定 .....	31	列印圖像 .....	40
<b>相機</b> .....	<b>33</b>	移動或複製圖像 .....	40
瞭解取景器 .....	33	聲音 .....	41
快速拍照 .....	34	使用聲音 .....	41
拍照之後 .....	34	影片 .....	41
使用進階設定 .....	34	觀看影片 .....	41
<b>視像攝錄機</b> .....	<b>36</b>	發送錄像片段 .....	41
瞭解取景器 .....	36	Flash 內容 .....	41
快速製作影片 .....	37	文件 .....	41
製作影片之後 .....	37	其他內容 .....	41
使用進階設定 .....	37	遊戲 .....	42
<b>相片及影片</b> .....	<b>38</b>	玩遊戲 .....	42
檢視相片及影片 .....	38	將檔案傳送到手機 .....	42
從影片中擷取圖像 .....	38	音樂 .....	42
以投影片檢視照片 .....	38	將音樂傳送至手機 .....	43
		播放歌曲 .....	43
		FM 收音機 .....	43

<b>記事簿</b> .....	44	同步訊息.....	48
社交網絡服務 (SNS).....	44	將手機用作音樂同步裝置.....	48
Facebook.....	44	DivX 轉換器.....	48
Twitter.....	44	<b>On Screen Phone (OSP) 屏幕手機</b> ..50	
設定.....	44	在電腦上安裝 OSP.....	50
新增事件至日曆.....	44	啓動 OSP.....	50
新增項目至待辦事項.....	44	連接手機和電腦.....	50
新增備忘錄.....	45	中斷手機與電腦的連線.....	50
設定鬧鐘.....	45	控制手機.....	51
錄製聲音或語音.....	45	在手機和電腦之間傳送檔案.....	51
使用計算機.....	45	在手機上編輯檔案.....	51
轉換單位.....	46	使用 OSP 通知.....	51
新增世界時鐘城市.....	46	<b>網絡功能</b> .....	52
使用秒錶.....	46	存取網絡.....	52
LG 無線同步.....	46	新增並存取書籤.....	52
<b>電腦同步</b> .....	47	使用 RSS 閱讀器.....	52
在電腦上安裝 LG PC Suite.....	47	儲存網頁.....	53
連接手機和電腦.....	47	存取已儲存的網頁.....	53
備份與還原手機資訊.....	47	檢視手機記錄.....	53
在電腦上檢視手機檔案.....	47	將手機用作數據機.....	53
同步處理通訊錄.....	48		

# 內容

設定 .....	55
個人化情景模式.....	55
變更顯示設定.....	55
變更裝置設定.....	55
變更觸控設定.....	56
變更連接設定.....	56
使用記憶體管理程式.....	57
使用藍芽收發檔案.....	58
變更您的藍芽設定.....	58
同其他藍芽裝置配對.....	59
使用藍芽耳機.....	59
Wi-Fi.....	59
軟件升級.....	60
配件 .....	61
技術數據.....	62

# 安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

## 射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。本手機型號 GD880 已為遵守無線電波暴露的應用安全要求而設計。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 1.23 W/kg (10 克)，攜帶於身上時則為 1.10 W/kg (10 克)。

- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

## 產品護理及維修



### 警告

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 根據 LG 的政策，保養期內的維修可能會包括更換零件或主板，這些用於更換的零件或主板可能是新亦可能是返修的，但其功能與被更換的零件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。

# 安全及有效使用準則

- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體、濕氣或潮濕環境中
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。
- 切勿在高濕度（如泳池、溫室、日光浴室）或熱帶環境中使用手機或配件，這可能會對手機造成損壞和使保用失效。

## 有效手機操作

### 電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

## 道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提耳機，請使用免提耳機。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

## 避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

## 玻璃部件

手機的部分部件採用玻璃製成。若手機墜落至堅固表面或受到硬物碰撞，玻璃會破碎。若玻璃破碎，則切勿觸碰或企圖移除玻璃。應停止使用手機，直到經由授權服務供應商更換玻璃才能再次使用。

# 安全及有效使用準則

## 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

## 在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

## 緊急呼叫


緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

## 電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。


- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

# 瞭解您的手機

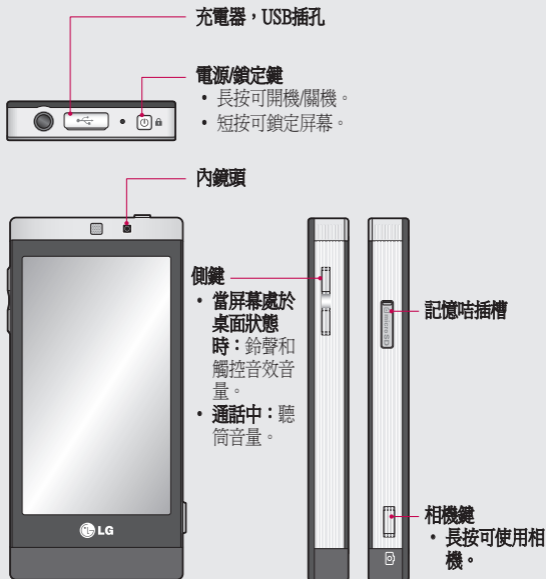

**⚠ 警告：** 將手機置於口袋中時，若將較重物體置於手機上或坐在手機上會損壞手機的LCD和觸控屏幕功能。

# 手機背面

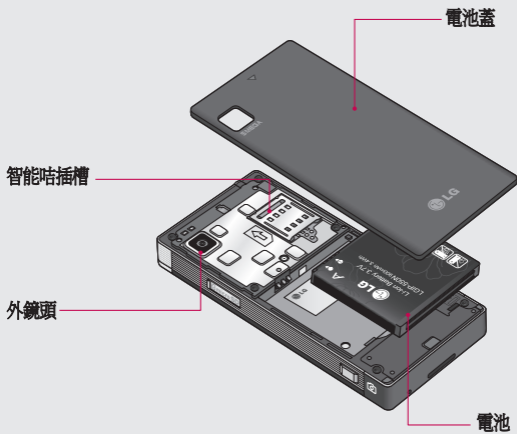

# 安裝智能咭和電池


## 1 取下電池蓋

滑動電池蓋並取下。



## 2 安裝智能咭

將智能咭插入智能咭插槽中，確保智能咭的金屬接觸面朝下。安裝智能咭之前，請確保取出手機電池。要取下智能咭，請輕輕推出。

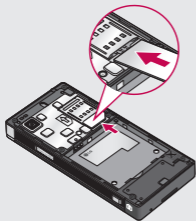


**⚠ 警告：**手機開機時，切勿取下電池，因為這可能會損壞手機。

## 3 安裝電池

首先，請將電池插入電池格上方邊緣。


請確保電池觸點對準手機觸點。按住電池，直到卡緊為止。

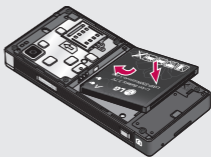

## 手機充電

連接旅行充電器和隨附的 USB 線。將 USB 線連接到手機並插入電源插座。您必須為 GD880 手機充電，直至屏幕上顯示「電池電量已滿」訊息。

**注意：**首次充電時必須確保手機充滿電，以提高電池壽命。忽略第一次充電時顯示的「電池電量已滿」訊息，並繼續為手機充電一個晚上。

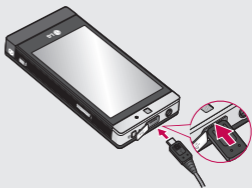



# 記憶咭

## 安裝記憶咭

您可使用記憶咭，擴展手機可使用的記憶體空間。


**注意：**記憶咭是選購配件。

- 1 向下滑動插槽保護蓋。
- 2 將記憶咭插入插槽中。請確保金屬接觸區面向下方。
- 3 向上滑動插槽保護蓋。

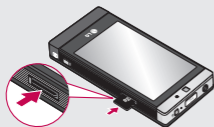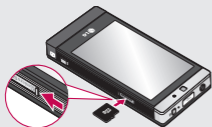

## 格式化記憶咭

您的記憶咭可能已格式化了。如果尚未格式化，則將需要在使用記憶咭之前進行格式化。

- 1 從桌面選擇 ，然後點按**裝置設定**。
- 2 點按**記憶體資訊**，並向下滑動以選擇**外置記憶體**。
- 3 點按**格式化**並確認您的選擇。
- 4 如果已設定密碼，請輸入密碼。將會格式化記憶咭並隨時可供使用。

# 使用觸控屏幕

## 觸控屏幕提示

- 要選擇某個項目，請點按圖示中央。
- 點按觸控屏幕時無需太大力。觸控屏幕非常敏感，輕輕按中即可。
- 使用指尖點按所需的選項。小心不要按任何其他鍵。
- 未使用 GD880 手機時，將返回到鎖定屏幕。

## 控制觸控屏幕

GD880 手機觸控屏幕上的控制視乎工作將會動態變更。

### 開啓應用程式

要開啓任何應用程式，只需點按此應用程式的圖示。



### 捲動

左右滑動即可捲動。  
在某些屏幕上（例如，通話記錄清單），您亦可上下捲動。

# 桌面

您可以從此處存取各種功能表選項、撥打電話、檢視手機狀態及更多内容。

## 新增我的最愛功能表

- 1 從桌面點按 。
- 2 如果您想要移除我的最愛功能表，點按圖示右上方的 。如果您想要新增我的最愛功能表至主功能表，點按屏幕的新增。



- 3 點按新增，您可以在 **Widget、書籤或捷徑** 中進行選擇（如果不想新增，則點按**取消**）。
- 4 透過點按功能表右側的星標記來選擇您想要新增的項目。當您返回到上一個屏幕時，將會在屏幕上顯示該功能表。
- 5 完成後，點按**確定**。



# 桌面

## 快捷鍵

桌面上的快捷鍵提供簡單、單觸式操作存取最常用的功能。



點按可顯示觸控撥號盤，以撥打電話。



點按可開啓**通訊錄**。要搜尋撥號的號碼，請使用觸控板在屏幕頂部的「搜尋」欄位中輸入聯絡人名稱。您亦可以新增通訊錄或編輯現有通訊錄等。






點按可存取**訊息**功能表。您可在此處編寫訊息，或檢視訊息資料夾。




點按可開啓完整的**主功能表**。

# 通話功能

## 撥打電話

- 1 從桌面點按  可開啓鍵盤。
- 2 使用鍵盤輸入號碼。
- 3 點按  開始通話，但如果您想要開始視像通話，點按  並選擇**視像通話撥號**。
- 4 要結束通話，請按屏幕底部的「結束」通話圖示。

**提示！** 要在撥打國際電話時輸入「+」，請按住 。

**提示！** 短按電源鍵鎖定觸控屏幕，以防不小心進行撥號。

## 透過通訊錄撥打電話

- 1 從桌面點按  可打開**通訊錄**。
- 2 點按屏幕頂部的「搜尋」欄位方塊，並使用鍵盤輸入要通話聯絡人的前幾個字母。
- 3 從篩選清單中，點按要通話聯絡人旁邊的「通話」圖示。如果該聯絡人存在多個號碼，將使用預設號碼。
- 4 或者，如果該聯絡人存在多個號碼，您也可以點按聯絡人名稱並選擇要使用的號碼。

## 接聽來電和拒接來電

手機響鈴後，點按**接聽**可接聽來電。

要靜音鈴聲，點按**靜音**。如果在開會時忘記將情景模式變更為靜音，此功能將十分有用。 點按**拒接**以拒絕接聽來電。


## 通話中選項



**選項** — 點按  以顯示更多通話中選項清單。

**揚聲器** — 點按  以開啓揚聲器。

**保留** — 點按  以保留通話。

點按  可開啓撥號面板進行其他電話，例如撥打緊急呼叫中心等電話服務。

點按  可在通話中新增備忘錄。

點按  可在通話中搜尋通訊錄。

**提示！** 要捲動選項清單或通訊錄清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單將會向上移動以便顯示更多項目。


# 通話功能


## 快速撥號

您可以為常撥聯絡人指定一個快速撥號號碼。

- 1 選擇**通訊錄**，然後點按  並選擇**快速撥號**。
- 2 您的留言信箱中心已設定為快速撥號 1。您無法變更此設定。點按任何其他號碼，為其指定快速撥號聯絡人。
- 3 將會開啓您的**通訊錄**清單。透過點按一下相應的電話號碼，選擇要指定給此號碼的聯絡人。要尋找某位聯絡人，請點按**搜尋**欄位方塊，然後輸入所需聯絡人名稱的首字母。

## 撥打其他電話

- 1 初始通話期間，點按**撥號面板**並選擇要通話的號碼。
- 2 點按**語音通話**以連接通話。
- 3 將會在通話屏幕上顯示兩個通話。並且，將會鎖定初始通話並保留來電者。
- 4 要在通話間變換，請點按  或按保留通話的號碼。

- 5 要結束通話，按  並選擇結束通話。

**注意：**您將需要為撥打的每個電話付費。

## 檢視通話記錄

點按**主功能表**中的**記錄**。

**提示！** 點按任何單個通話記錄項目，檢視撥號的日期、時間和持續時間。

## 使用來電轉駁

- 1 點按**主功能表**中的**通話設定**。
- 2 點按**來電轉駁**。
- 3 從**語音通話**和**視像通話**中選擇。您可以選擇所有語音/全部視像通話、線路繁忙時、無人接聽或無法接通時。
- 4 點按**啓動**。
- 5 選擇**至語音信箱中心**或**其他號碼**以輸入新的轉駁號碼。
- 6 輸入號碼完成後，點按**OK**。

**注意：**轉駁電話需要收費。請聯絡網絡供應商，瞭解詳情。

**提示！** 要關閉所有來電轉駁，請從**來電轉駁**功能表中選擇**停用全部**。

## 使用通話限制

- 1 點按**主功能表**中的**通話設定**。
- 2 點按**通話限制**。
- 3 從**語音通話**或**視像通話**中選擇。  
您可以透過點按**通話限制**功能表中的**停用全部來關閉所有通話限制**。
- 4 選擇下列五個選項中的任何一個：  
**全部撥出通話**  
**國際通話撥號**  
**本地以外的國際撥號**  
**所有來電**  
**國際漫遊時來電**  
點按**啓動**。
- 5 輸入通話限制密碼。請向您的網絡商查詢此項服務。


**提示！** 選擇**固定撥號號碼**，以**開啓**並**編輯**可從此手機撥出列表。

## 使用致歉訊息

在拒絕來電前，您可以使用「**致歉訊息**」發送一條訊息，以解釋您為何不能接聽來電。

## 變更通用設定

- 1 點按**主功能表**中的**通話設定**。
- 2 點按**通用設定**。您可從此處調整以下選項的設定：

**來電拒接** — 左右滑動以開關，顯示拒接列表。您可點按文字方塊選擇所有通話、通訊錄、群組、無名稱記錄、無來電號碼。點按可變更設定。

**發送我的號碼** — 選擇撥出通話時，是否顯示本機號碼。

**顯示 SNS 事件** — 選擇將是否顯示 SNS 事件。

**自動重撥** — 左右滑動以開關。

**分鐘提示** — 左右滑動以開關此功能，以便在通話時聽到分鐘提示音。

# 通話功能

**藍芽接聽模式** — 選擇**免提**可使用藍芽耳機接聽來電，或選擇**手機**可透過按手機上的按鍵接聽來電。

**儲存新號碼** — 選擇是否開啓**儲存新號碼**功能。左右滑動以開關。

**語音清晰度** — 選擇是否開啓**語音清晰度**功能。左右滑動以開關。

## 變更視像通話設定

1 點按**通話設定**。

2 點按**視像通話設定**。

您可從此處調整以下選項的設定：

**使用私人圖像** — 選擇是否為視像通話使用私人圖像。

**私人影像** — 選擇視像通話的圖像。

**鏡像** — 選擇是否使用鏡像效果。

## 通話費用

檢視套用到已撥號碼的費用（此項服務視網絡而定，部份網絡商不支援此功能）。

## 通話時間

檢視所有撥出、已接或所有撥出及已接電話的時間。



## 數據用量

檢視所有已接收或已傳送或全部的數據量。

# 通訊錄

## 搜尋通訊錄


有兩種方法可搜尋通訊錄：

- 1 從桌面點按 ，然後選擇**通訊錄**或從桌面點按 。
- 2 您可看到通訊錄清單。在「名稱」欄位鍵入通訊聯絡人的首字母，功能表將跳至該字母所在的清單區域。



**提示！** 點按「名稱」欄位時將顯示字母按鍵。

## 新增聯絡人

- 1 點按**通訊錄**並點按**新增**。
- 2 選擇是否將聯絡人儲存到**手機**或**智能咭**。
- 3 輸入名字和姓氏。
- 4 您最多可為每位聯絡人輸入最多五個不同的號碼。每條記錄均包含**手機**、**住宅**、**公司**、**傳呼機**和**傳真**。
- 5 新增電郵地址。

- 6 將聯絡人編入一個或多個群組。您最多可為每個聯絡人指定三個群組。從**沒有群組**、**家庭**、**同事**、**學校**和**重要人士**中選擇。
- 7 您亦可新增**鈴聲**、**主頁**、**住宅地址**、**公司名稱**、**職位**、**公司地址**、**生日**、**週年**和**備忘錄**。
- 8 點按  儲存聯絡人。

## 建立群組

- 1 點按**通訊錄**。點按通訊錄旁邊的箭頭，然後選擇**群組**。
- 2 點按**新增群組**，或點按  並選擇**新增群組**。
- 3 在**群組名稱**欄位輸入新增群組的名稱。您亦可為群組指定鈴聲。
- 4 點按 。

**注意：**若要刪除某群組，指定給該群組的聯絡人將不會刪除。他們仍將儲存在通訊錄中。

# 通訊錄

## 變更通訊錄設定

您可以調整通訊錄設定，使其符合您的個人喜好。

1 點按**通訊錄**，點按 ，向下捲動並選擇**通訊錄設定**。

2 您可從此處對以下設定進行調整：

**顯示按鍵** — 選擇將是否顯示按鍵。

**顯示名稱** — 選擇顯示名稱的次序。

**複製全部** — 將通訊錄從手機複製到智能咭或從智能咭複製到手機。

**移動全部** — 這和複製一樣，但聯絡人僅會儲存於您所移動至的位置。

**還原通訊錄** — 將通訊錄還原至記憶咭。


**清除通訊錄**資料 — 刪除您的所有通訊錄。如果確定要刪除通訊錄，請選擇**手機**或**智能咭**，然後點按**是**。

**記憶體資訊** — 檢視有關**手機**、**智能咭**和**智能咭電郵**的可用記憶體資訊。


**經藍芽傳送所有通訊錄** — 使用藍芽將所有通訊錄發送至其他裝置。如果選中此選項，系統將會提示您開啓藍芽。

**備份通訊錄** — 將通訊錄備份至記憶咭。

## 檢視資訊


1 點按**通訊錄**，點按 ，向下捲動並選擇**資訊**。

您可從此處檢視**服務撥號號碼**、**本機號碼**、**記憶體資訊**（顯示記憶體使用情況）和**我的個人檔案**。

**提示！** 要新增個人名片，請選擇**我的個人檔案**並輸入要為聯絡人提供通訊詳情。點按  以完成操作。

## 從社交網絡匯入朋友

您可以使用此功能表，從社交網絡（Twitter 或 Facebook）將朋友聯絡人新增至手機。

- 1 點按 。
- 2 選擇 **Twitter** 或 **Facebook**。
- 3 輸入您的電郵地址和密碼，然後按一下**登入**。
- 4 選擇要新增的聯絡人。
- 5 選擇**選項** -> 將設定檔儲存到聯絡人。


# 訊息

## 訊息

GD880 手機將文字訊息和多媒體訊息結合在一個易用的功能表中。

## 發送訊息


- 1 從桌面點按 ，然後點按**訊息**或從桌面點按 。
- 2 點按**編寫訊息**、和選擇**附加**以新增圖像、影片、聲音和情感圖示等。
- 3 點按**收件者**以輸入收件者號碼，或開啓您的通訊錄或我的最愛。您可以新增多個聯絡人。完成後，點按以下訊息方塊開始編寫訊息文字。
- 4 輸入文字後，您可以透過點按訊息頂部的**發送文字訊息/傳送 MMS**。

 **警告：**如果在文字訊息中新增圖像、影片或聲音，它將自動轉換成多媒體訊息並相應地進行收費。

## 輸入文字

點按  以開啓 T9 模式。

點按  以選擇寫入語言。

點按  以變更數字、符號和文字輸入。

功能鍵能使您在大寫和小寫輸入之間切換，或在鍵盤上以全屏模式編寫訊息等。

## T9 模式

T9 模式使用內置字典並按照按鍵點按順序來識別您所輸入的字詞。它會預測您所輸入的字詞並給出選擇建議。

## 使用範本

為您最常發送的文字訊息和多媒體訊息建立範本。手機中已存有部分範本，您可對其進行編輯。

## 使用情感圖示


情感圖示能使您的訊息更添生氣。手機上已存有一些常用的情感圖示。

您可以透過點按**新表情圖示**，以添加新的情感圖示。

## 使用簽名

爲您最常發送的文字訊息和多媒體訊息建立簽名。編寫新簽名時，您可以從選項功能表的附加->更多中輸入簽名。

## 變更文字訊息設定

點按**訊息**，點按  並選擇**設定**。選擇**文字訊息**。您可對下列各項進行變更：

**文字訊息中心** — 輸入訊息中心的詳情。

**發送報告** — 左右滑動以開關以便在訊息發送後接收確認訊息。

**有效時期** — 選擇訊息儲存在訊息中心的時間。

**訊息類型** — 將文字轉換成**文字**、**語音**、**傳真**、**X.400** 或**電子郵件**。

**字元編碼** — 選擇字元的編碼方式。這將會影響訊息的大小，進而影響資料費用。

**發送長文字時設爲** — 選擇以**多個文字訊息**或以**多媒體訊息**的方式發送訊息。

## 變更多媒體訊息設定

點按**訊息**。點按  並選擇**設定**，然後選擇**多媒體訊息**。您可對下列各項進行變更：

**接收模式** — 選擇**本地網絡**或**漫遊網絡**。如果選擇**手動**，將僅會收到多媒體訊息通知，然後您可以確定是否完整下載多媒體訊息。

**發送報告** — 選擇**要求**和/或**允許**發送報告。

**閱讀回覆** — 選擇**要求**和/或**允許**回覆。

**重要性** — 選擇多媒體訊息的重要性級別（**最低**、**正常**、**最高**）。

**有效時期** — 選擇訊息儲存在訊息中心的時間。

**投影片播放時間** — 選擇投影片在螢幕上的顯示時長。

**建立模式** — 選擇您的訊息模式（**已限制**、**警告**、**可用**）。

**發送時間** — 選擇隔多久發送訊息。

**多媒體訊息中心** — 從清單中選擇一個訊息中心或新增中心。

# 訊息

## 變更其他設定

點按**訊息**。點按  並選擇**設定**。

**視像留言信箱/留言信箱** — 點按**新增使用設定**，以新增視像留言信箱/語音信箱服務。請聯絡網絡商，瞭解他們所提供服務的更多詳情。

**服務訊息** — 選擇要接收還是阻止服務訊息。您亦可在**服務安全**選項中，透過建立信任和不受信任的寄件者列表來設定您的訊息安全性。

**儲存已傳送的訊息** — 選擇是否儲存已發送訊息。

**資訊服務** — 選擇是否開啓/關閉區域廣播並選擇頻道和語言。

**簽名** — 可新增、編輯或刪除簽名。

## 設定電郵

從桌面點按 ，向右捲動並點按**電子郵件**。

如果尚未設定電郵帳戶，點按**Microsoft Exchange**等。

如果您已在手機中設定電郵帳戶且想要新增電郵帳戶，點按**新帳戶**。

**電郵地址** — 輸入電郵的地址。

**密碼** — 輸入帳戶的密碼。

**郵箱類型** — 輸入郵箱的類型：**IMAP4**、**POP3** 或 **PUSH**。這些類型視乎服務供應商而定。

**使用者名稱** — 輸入帳戶的用戶名稱。

**內送郵件伺服器** — 輸入內送電郵伺服器的地址。

**外送郵件伺服器** — 輸入外送電郵伺服器的地址。

**SMTP 驗證** — 選擇外送郵件伺服器的安全性設定。

**帳戶名稱** — 帳戶將會顯示在電郵資料夾的帳戶清單中的方式。

完成帳戶設定後，該帳戶將會顯示在電郵資料夾的帳戶清單中。

## Microsoft Exchange 電郵地址

**電郵地址** — 輸入帳戶的電郵地址。

**伺服器地址** — 輸入電郵的伺服器地址。

**網域** — 輸入帳戶的網域。

**使用者名稱** — 輸入帳戶的用戶名稱。

**密碼** — 輸入帳戶的密碼。

**同步項目(Sync items)** — 選擇是否使用同步項目（**通訊錄**、**日程表**、**工作**）。

## 擷取電郵

您可以自動或手動檢查帳戶中的新電郵。要手動查收：

- 1 點按**電子郵件**。
- 2 點按要使用的帳戶。
- 3 選擇**擷取新電郵**。

## 使用新帳戶發送電郵

- 1 點按**編寫電郵**，將會開啓一個新電郵。
- 2 編寫完成訊息。
- 3 點按**發送電郵**，將會發送您的電郵。

## 變更電郵設定

- 1 點按**電子郵件**。
- 2 點按  並選擇**電子郵件設定**，然後便可變更下列設定：
  - 電子郵件帳戶** — 選擇電郵的帳戶。
  - 允許回覆電郵** — 選擇以允許發送讀取確認訊息。
  - 要求回覆電郵** — 選擇是否要求讀取確認訊息。
  - 轉寄及回覆時加入原始訊息** — 選擇回覆中是否包含原始訊息。
  - 包括附件** — 選擇是否在任何回覆中加入原始附件。
  - 漫遊時自動擷取** — 選擇當在國外（漫遊）時是否自動擷取訊息。

# 訊息

**新電子郵件通知** — 選擇是否要獲得新電郵的通知。

**簽名** — 可建立電郵的簽名。

**重要性** — 選擇電郵訊息的優先等級。

**最大接收大小** — 選擇最大的接收大小：100KB、200KB、300KB、500KB、1MB、2MB、2.2MB。

# 相機

## 瞭解取景器

**縮放** — 放大或縮小。您也可以透過按手機的側鍵進行放大或縮小。

**曝光** — 低對比度的圖像將顯示模糊，而高對比度的圖像則顯示清晰。



**返回**

**相機模式**

**影片模式** — 向下滑動此圖示可切換到影片模式。



**圖片集** — 此功能允許您在相機模式中存取已儲存的相片。輕輕一按，圖片集將會顯示在螢幕上。

**設定** — 點按此圖示可開啓設定功能表。請參閱**使用進階設定**。

**微距** — 開啓以便近距離拍照。

# 相機


## 快速拍照

- 1 按手機右側的  鍵。
- 2 當相機對準景物時，按屏幕右邊的  進行拍照。您也可以按手機側面的相機鍵。


**提示！** 要切換到相機模式或影片模式，向上/向下滑動取景器的相機或影片圖示。


## 拍照之後





拍攝的相片將顯示於屏幕上。圖像名稱將會顯示在屏幕的底部，同時還會在屏幕兩側顯示圖示。

 點按可經**訊息、電子郵件、藍芽**發送相片。

**注意：**在漫遊時下載多媒體訊息可能會收取額外費用。

 點按可將圖像用作不同用途。

 點按可使用不同工具來編輯圖像。

-  點按可返回取景器。
-  點按可刪除圖像。
-  點按可立即拍攝其他相片。將會儲存目前的相片。
-  點按可檢視已儲存的相片集。



## 使用進階設定

從取景器中，點按  可開啓全部進階設定。

**大小** — 變更相片大小以節省記憶體空間，或按照預設的正確大小拍攝通訊錄圖片。從七個數字選項中選擇像素值：**5M(2560x1920)**、**3M(2048x1536)**、**2M(1600x1200)**、**1M(1280x960)**、**桌面**、**VGA(640x480)**、**QVGA(320x240)**。

**場景模式** — 設定相機，根據環境調整。從**自動、夜間、風景、人像或運動**中進行選擇。

**ISO** — ISO 等級決定相機感光度。ISO 越高，相機感光性越好。當您在光線較暗的環境下進行拍照時此功能非常有用。可從**自動**、**ISO 800**、**ISO 400**、**ISO 200** 或 **ISO 100** 中選擇 ISO 值。

**白平衡** — 選擇**自動**、**白熱光**、**日光燈**、**陽光**或**陰天**。

**色彩效果** — 選擇要套用於已拍攝照片的色調。有六種色調選項可供選擇：**關閉**、**復古**、**單色**、**負片**、**曝光**和**藍色**。

**對焦** — 選擇相機對焦的方式。可從**自動對焦**、**手動對焦**或**表情追蹤**中進行選擇。

**自拍時計** — 自拍時計允許您設定在按下擷取按鈕拍照之前進行延遲。可選擇**關閉**、**3 秒**、**5 秒**或 **10 秒**。

**拍攝模式** — 可從 9 個選項中選擇拍攝模式。

**質素** — 在**特細緻**、**細緻**和**正常**之間進行選擇。質素越細緻，相片便越清晰，但佔用的檔案空間會增大。

**顯示拍攝影像** — 選擇在拍照後可使用選項來檢視圖片。

**快門聲** — 從三種快門聲中選擇一種聲音。

**格線畫面** — 可選擇**關閉**、**簡單十字**或**三等分**。

**智能影像定位** — 選擇是否開啓智能影像定位。


**重設設定** — 還原全部相機預設設定。

**記憶體** — 選擇將相片儲存於手機記憶體或外置記憶體中。

**轉換鏡頭** — 選擇使用背面相機或正面相機。

# 視像攝錄機

## 瞭解取景器

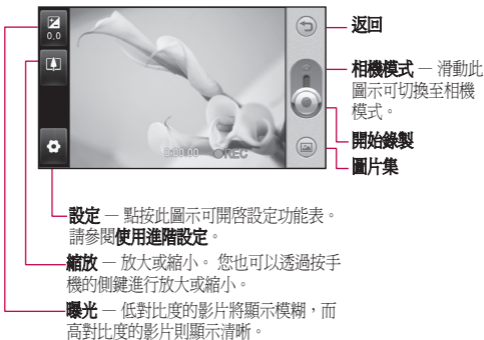

## 快速製作影片


- 1 長按手機右側的相機鍵。


**提示！** 要切換到相機模式或影片模式，向上/向下滑動取景器的相機或影片圖示。


- 2 水平握住手機，將鏡頭對準拍攝對象。
- 3 按一次手機上的相機鍵可開始錄製。或點按屏幕上的紅點 。
- 4 **REC** 將會顯示在取景器頂部，而底部的計時器則會顯示影片錄製的時間長度。
- 5 要暫停錄製影片，請按 ；要恢復錄製影片，請選擇 。
- 6 點按屏幕上的  或再次按手機上的相機鍵可停止錄製影片。

## 製作影片之後



將會在屏幕上顯示一張表示您所拍攝影片的靜態圖像。影片的名稱將會顯示在屏幕的底部。


 點按經 **訊息** 或 **電子郵件** 或 **藍芽** 發送影片。


 點按可將影片用作話音鈴聲或視像鈴聲。

 點按可播放影片。

 點按可返回到取景器。

 點按可刪除剛剛錄製的影片，透過點按  予以確定。將會再次顯示取景器。

點按  可立即拍攝其他影片。

 點按可檢視已儲存影片和圖片的圖片集。



## 使用進階設定

從取景器中，點按  可開啓全部進階設定。

請參閱相機的進階設定。

**影片大小** — 選擇影片的大小：  
**VGA(640x480)**、**QVGA(320x240)**、**QCIF(176x144)**。


**錄製模式** — 設定影片的播放時間限制：**正常**、**多媒體訊息**。

**聲音** — 選擇是否靜音（錄製影片，而沒有聲音）或取消靜音以錄製有聲音的影片。

**顯示錄製的影片** — 選擇在拍攝影片後可使用選項來檢視影片。

# 相片及影片

## 檢視相片及影片

- 1 捲動並點按**主功能表**中的**圖片集**或在相機預覽屏幕中點按。
- 2 圖片集將會顯示在屏幕上。
- 3 點按影片或相片可完全開啓。

**提示！** 左右滑動可檢視其他相片或影片。



## 從影片中擷取圖像

- 1 選擇要從其擷取圖像的影片。
- 2 點按屏幕的中央可顯示播放選項，然後點按以暫停想要轉換成圖像的畫框中的影片，並點按屏幕的左上角打開功能表。
- 3 選擇擷取。
- 4 圖像及其名稱將會顯示在屏幕上。
- 5 點按屏幕右上方的可返回到影片。
- 6 圖像將會儲存至**媒體集**資料夾並顯示在圖片集中。


**警告：** 如果未在手機上記錄多媒體檔案，部份功能將無法正常使用。

## 以投影片檢視照片


投影片放映模式將以投影片放映形式一次一張顯示圖片中的所有相片。無法以投影片放映形式檢視影片。

- 1 點按**圖片集**中的，然後捲動並選擇**播放投影片**。
- 2 將會開始投影片放映。
- 3 您可以在投影片放映時透過點按打開功能表，例如持續時間和轉換等。

## 將相片設為牆紙

- 1 點按**主功能表**中的**圖片集**。
- 2 點按想要設為牆紙的相片。
- 3 點按可打開功能表。
- 4 點按**設為**，然後點按**主屏幕畫面**。


## 編輯相片


1 從圖片集功能表中，選擇您想要編輯的相片，點按屏幕左上角的  打開功能表，然後選擇**編輯**。


2 點按圖示可修改相片：


 選擇區域。


 選擇工具：


 用手在相片上進行繪製。從四個選項中選擇線條粗細以及要使用的色彩。


 新增文字至圖片。您可以選擇文字方塊，以及方塊和文字的色彩。


 使用圖章裝飾相片。


 可以清除剛用手繪的內容。您可以選擇要使用的橡皮擦大小。


 點按可開啓更多效果選項，包括**旋轉**。

 點按可將色彩效果套用至相片。

 **調整** 此選項有助於使用亮度或對比度來調整拍攝的圖片。

 點按可返回圖片集。

 **儲存** 儲存您對手機所作的更改。您可以使用其他名稱儲存已編輯的相片。

 **復原** 在相片上清除您所作的編輯。

 **發送** 選擇經**訊息**、**電子郵件**或**藍芽**發送已編輯的圖片。





# 多媒體

您可將多媒體檔案儲存於手機記憶體中，以便輕鬆存取所有圖片、聲音、影片和遊戲。亦可將檔案儲存至記憶咭中。使用記憶咭可釋放手機記憶體空間。您可以在**主功能表**中的**我的檔案**中找到這些檔案。

## 圖片


**圖像**中包含各種圖片，其中包括預載到手機中的預設圖像、下載的圖像以及透過手機相機拍攝的圖像。

## 發送相片


- 1 從桌面點按 ，然後點按**我的檔案**並選擇**圖像**。選擇所需的圖片並點按 。
- 2 點按**發送方式**並從**訊息、電子郵件或藍芽**中進行選擇。

## 使用圖像

您可以選擇將圖像設為鎖定屏幕畫面，或用於識別來電者。

- 1 點按**主功能表**中的**我的檔案**，然後選擇**圖像**。選擇所需的圖片並點按 。
- 2 點按**設為**並選擇下列其中一項：  
**主屏幕圖像、鎖定屏幕圖像、聯絡人圖像、開機圖像、關機圖像、撥出通話圖像、來電圖像**


## 列印圖像

- 1 點按**我的檔案**並選擇**圖像**。選擇所需的圖片並點按 。
- 2 點按**列印**，然後在 **PictBridge** 和 **藍芽**之間進行選擇。

**提示！** 您可透過藍芽或連接至 PictBridge 兼容打印機進行列印。

## 移動或複製圖像

您可以在手機記憶體和記憶咭之間移動或複製圖像。您可透過此操作釋放某個記憶體組的空間或保留圖像。

- 1 點按**我的檔案**，選擇**圖像**並點按。
- 2 選擇**移動**或**複製**。
- 3 您可以透過連續點按該圖像來標記/取消標記它。標記要移動或複製的圖像並點按**複製/移動**。

## 聲音

**聲音**包含各種下載的聲音、預設聲音和錄音。您可從此處管理或發送聲音或將其設為鈴聲。

## 使用聲音

- 1 點按**主功能表**中的**我的檔案**，然後選擇**聲音**。
- 2 選擇所需的聲音。將會開始播放該聲音。


## 影片

**影片**會顯示各種下載的影片以及在手機上錄製的影片。

## 觀看影片

- 1 點按**主功能表**中的**我的檔案**，然後選擇**影片**。
- 2 選擇要播放的影片。

## 發送錄像片段

- 1 選擇影片。
- 2 點按，然後點按**發送方式**。可選擇**訊息**、**電子郵件**或**藍芽**。

## Flash 內容

Flash 內容資料夾包含所有下載的 SWF 和 SVG 檔案。

- 1 點按**主功能表**中的**我的檔案**，然後選擇**Flash 內容**。
- 2 選擇要檢視的檔案。

## 文件

從**文件**功能表中，您可以檢視所有文件檔案。您可在此處檢視 Excel、PowerPoint、Word、文字以及 Pdf 檔案。

## 其他內容

**其他內容**包含各種除圖片、聲音、影片、文件、遊戲或應用程式以外的任何其他檔案。

# 多媒體

## 遊戲

您可在手機上安裝新遊戲，以供閒時娛樂使用。

您也可以使用**主功能表**中的**遊戲及應用程式**功能表存取此選項。

## 玩遊戲

- 1 點按遊戲及應用程式。
- 2 選擇要啟動的遊戲。

## 將檔案傳送到手機

藍芽可能是將檔案從電腦傳輸到手機的最簡單方法。亦可透過USB線使用 LG 電腦端套件。

### 要使用藍芽進行傳送：

- 1 確保您的手機與電腦均已開啓藍芽，且對方已偵測到藍芽。
- 2 使用電腦透過藍芽發送檔案。
- 3 檔案發送後，您需要按**是**予以接受。
- 4 如果所傳送檔案為圖像檔案，則其應顯示在圖像資料夾中，如果為音樂檔案，則會顯示在聲音資料夾中。

## 音樂

LG GD880 手機配備內置音樂播放機，可讓您播放所有最愛的曲目。要存取音樂播放機，點按**音樂**。您可以從此處存取位於屏幕頂部的各種資料夾：

**注意：**音樂檔案的版權受國際條約和國家版權法的保護。需要取得授權或許可才可以複寫或複製音樂。在某些國家/地區，國家法禁止私人複製受版權保護的材料。在下載或複製檔案之前，請檢查適用國家/地區關於使用此類材料的國家法律。

**全部曲目** — 包含手機上的全部歌曲，預載的預設音樂除外。

**最愛** — 包含儲存為最愛的全部歌曲。

**演出者** — 按演出者瀏覽音樂收藏。

**專輯** — 按專輯瀏覽音樂收藏。

**類型** — 按類型瀏覽音樂收藏。

**播放列表** — 包含已建立的全部播放列表。





## 將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或USB線。

您亦可使用 LG 電腦端套件。要使用藍芽傳送：

- 1 確定兩台裝置上的藍芽功能均已開啓並且相互可見。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 當檔案準備就緒以供發送時，您應在手機上點按是予以接受。
- 4 檔案應顯示在**音樂 > 全部曲目**中。

## 播放歌曲

- 1 點按**音樂**。
- 2 選擇要播放的歌曲。當處於**靜音**模式時，將會顯示確認訊息。
- 3 點按  可暫停播放歌曲。
- 4 點按  可跳至下一首歌曲。
- 5 點按  可返回到上一首歌曲。
- 6 點按  可返回到**音樂**功能表。您可多次點按以返回至功能表。

## FM 收音機

LG GD880 手機具備 FM 音機功能，您可在外出旅途中調諧至最愛電台收聽節目。

- 1 捲動並點按**主功能表**中的**FM 收音機**。
- 2 調諧電台或調節音量（如需要）。

**注意：**您將需要插入耳機才可收聽收音機。將耳機插入充電器插孔旁邊的耳機插孔。


# 記事簿

## 社交網絡服務 (SNS)

社交網絡服務側重於建立和反映社交網絡，以及共用興趣和/或活動的人們之間的社會關係。

### Facebook

Facebook 是一個社交網絡網站。



- 1 從桌面點按 ，然後點按 Facebook。

### Twitter

Twitter 是免費的社交網絡和部落格服務。

- 1 從桌面點按 ，然後點按 Twitter。



## 設定

- 1 從桌面點按 ，然後點按 SNS 設定。
- 2 開啓社交網絡。如果您擁有與社交網絡相關的帳戶，將會顯示該帳戶。點按該帳戶，然後點按  匯入朋友 可將朋友通訊錄新增至手機。




- 3 如果您沒有相關的帳戶，點按**新帳戶**，然後**建立**您的帳戶。

**注意：**連接此服務將會產生額外的費用。請向網路供應商諮詢收費詳情。




## 新增事件至日曆

- 1 從桌面點按 ，然後點按**記事簿**。
- 2 選擇要將事件新增至的日期。
- 3 點按  並點按**新增日程表**，或只需點按屏幕底部的新增。



## 新增項目至待辦事項

- 1 從桌面點按 ，然後點按**主功能表**中的工作。
- 2 點按  並點按**新增工作**，或只需點按屏幕的新增工作。
- 3 設定工作的日期，新增備註，並選擇優先等級：**高**、**正常**或**低**。
- 4 可透過點按  來儲存工作。

## 新增備忘錄

- 1 從桌面點按 ，然後點按主功能表中的備忘錄。
- 2 點按 ，然後點按新增備忘錄。或只需點按屏幕的新增備忘錄。
- 3 輸入您的備忘錄內容，然後點按  儲存。
- 4 您的備忘錄將會顯示在備忘錄應用程式屏幕上。

## 設定鬧鐘

- 1 從桌面點按 ，然後點按鬧鐘。預設情況下，Widget鬧鐘將會顯示在清單中並且不可刪除。
- 2 點按 ，然後點按新增鬧鐘。或只需點按屏幕的新增鬧鐘。



**注意：**您最多可設定 11 個鬧鐘，包括Widget鬧鐘。

**提示！** 左右滑動以開關鬧鐘。

## 錄製聲音或語音

- 1 從桌面點按 ，然後點按主功能表中的語音備忘錄。
- 2 選擇要儲存錄製的位置：內置記憶體或外置記憶體。
- 3 選擇錄製模式：正常或多媒體訊息。
- 4 點按  可開始錄製。
- 5 點按  可暫停錄製。
- 6 點按  可結束錄製。
- 7 點按  可收聽錄製。
- 8 點按  可調節音量。

## 使用計算機



- 1 從桌面點按 ，然後點按主功能表中的其他工具。
- 2 選擇計算機。
- 3 使用鍵盤點按數字按鍵以輸入數字。
- 4 對於簡單計算，點按所需的功能 (+, -, x, ÷)，然後按 =。
- 5 對於較為複雜的計算，點按  並選擇 sin、cos、tan、log、ln、exp、sqrt、deg 或 rad 等。

# 記事簿


## 轉換單位

- 1 從桌面點按 ，然後點按**主功能表**中的**其他工具**。
- 2 選擇**單位轉換器**。
- 3 在屏幕頂部，選擇是否要轉換**匯率、面積、長度、重量、溫度、音量或速度**。
- 4 然後，您可選擇單位並輸入要轉換的值，然後輸入要轉換至的單位。
- 5 對應值將會顯示在屏幕上。

## 新增世界時鐘城市

- 1 從桌面點按 ，然後點按**主功能表**中的**其他工具**。
- 2 選擇**世界時鐘**。
- 3 點按  並選擇**新增城市**。或只需點按屏幕的新增**城市**。

## 使用秒錶

- 1 從桌面點按 ，然後點按**主功能表**中的**其他工具**。
- 2 選擇**秒錶**。
- 3 點按屏幕的**開始**以開始計時器。
- 4 如果要記錄圈速，點按**分段**。
- 5 點按**停止**結束計時器。

## LG 無線同步

使用此功能表，您可以將手機的 PIM 數據或其他內容與 LG 無線同步帳戶進行同步。

- 1 點按**主功能表**中的 LG 無線同步。
- 2 如果您沒有 LG 無線同步帳戶，請訪問 [www.lgairsync.com](http://www.lgairsync.com) 以建立您的帳戶。如果您有此帳戶，請輸入您的帳號和密碼。
- 3 如果想要同步您的 PIM 數據，則點按 PIM 同步。如果想要同步您的內容，則點按無線連結。
- 4 若點按 PIM 同步，選擇您想要同步的項目，然後點按立即同步。
- 5 若點按無線連結，選擇您想要同步的項目，然後點按立即同步。


# 電腦同步

您可將電腦和手機進行同步，以確保所有重要詳細資料和日期相匹配。您亦可備份檔案，以確保自己安心無憂。

## 在電腦上安裝 LG PC Suite

- 1 從桌面中點按 ，然後按一下**連接**。
- 2 選擇 **USB 連接模式**並點按**電腦端套件**。
- 3 使用 USB 線連接手機和電腦，然後稍等片刻。將會顯示安裝指引訊息。
- 4 按照屏幕上的說明完成 LG 電腦端套件安裝程式精靈。
- 5 安裝完成後，LG 電腦端套件圖示將會顯示在桌面上。

## 連接手機和電腦

- 1 從桌面中點按 ，然後按一下**連接**。
- 2 選擇 **USB 連接模式**。
- 3 點按**電腦端套件**。

- 4 使用 USB 線連接手機和電腦，然後稍等片刻。電腦端套件將自動執行。

## 備份與還原手機資訊

- 1 如上所述，將手機連接到電腦。
- 2 按一下**備份**圖示，並選擇**備份**或**還原**。
- 3 標記想要備份或還原的內容。選擇要將資訊備份至的位置或還原自其資訊的位置。按一下**開始**圖示。
- 4 將對您的資訊進行備份或還原。

## 在電腦上檢視手機檔案

- 1 如上所述，將手機連接到電腦。
- 2 按一下「管理相片」、「影片」或「音樂」圖示。
- 3 所有儲存在手機上的圖像及聲音檔將會顯示在屏幕上 LG 手機資料夾中。

**提示！** 在電腦上檢視手機中的內容，有助於您管理不再需要的檔案。

# 電腦同步

## 同步處理通訊錄

- 1 連接手機和電腦。
- 2 按一下**通訊錄**圖示。
- 3 按一下「同步通訊錄」按鈕，電腦現將會匯入並顯示已儲存在手機上的所有通訊錄。
- 4 按一下**功能表**並選擇**匯出**。現在，您可以選擇儲存通訊錄的目標位置。  
用滑鼠右鍵按一下通訊錄，然後按**全部選擇**。


## 同步訊息

- 1 連接手機和電腦。
- 2 按一下**訊息**圖示。
- 3 將會在螢幕資料夾中顯示全部手機訊息。

## 將手機用作音樂同步裝置

手機可用作音樂同步裝置，用來同步音樂檔案。

音樂同步可以透過 Windows Media Player 10/11 執行，並且支援手機記憶咭和外置記憶咭。

- 1 斷開電腦與手機的連接。
- 2 從桌面中點按 ，然後按一下**連接**。
- 3 選擇 **USB 連接模式**。
- 4 點按**音樂同步**。
- 5 連接手機和電腦。手機將顯示：**已連接**。

## DivX 轉換器

DivX 會將電腦上的媒體檔案轉換成您可在手機上上載和檢視的某種格式。

安裝完成後，從電腦的「程式檔案」中選擇 **DivX**，然後依次選擇 **DivX 轉換器**和轉換器。

使用應用程式中的箭頭，將轉換格式變更為「手機」。如果在應用程式方塊上按一下滑鼠右鍵，並選擇**偏好**，則您可變更儲存轉換檔案的位置。

將檔案拖放至應用程式中以進行初始分析。然後，選擇**轉換**開始轉換流程。流程完成後，將會顯示一個轉換完成快顯視窗。

*ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.*

*ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.*

Pat. 7,295,673

# On Screen Phone (OSP) 屏幕手機

使用 OSP 功能，您可以從電腦上查看您的手機屏幕。您可以就像在手機上一樣從電腦顯示器控制您的手機。

## 在電腦上安裝 OSP

當您在電腦上安裝 LG 電腦端套件時，將會自動安裝 OSP。

## 啓動 OSP

按一下電腦上的  或開始 > 程式 > LG OSP

## 連接手機和電腦

### 使用 USB 線進行連線

- 1 按一下「連線精靈」。
- 2 選擇「線纜連線」，然後按一下「下一步」。
- 3 使用 USB 線連接手機和電腦。
- 4 選擇「下一步」。
- 5 在電腦上輸入手機的密碼（預設值為「0000」）。

### 使用藍芽進行連線

- 1 確定藍芽已開啓並在電腦和 GD880 手機上均可見。
- 2 選擇「藍芽連線」，然後按一下「下一步」。
- 3 從已搜尋到的手機中選擇您的手機，然後按一下「下一步」。
- 4 在輸入上輸入 PIN 碼，然後按一下「下一步」。
- 5 按一下確認訊息中的「是」。
- 6 在手機上輸入 PIN 碼，然後按一下「確定」。
- 7 在電腦上輸入手機的密碼，然後按一下「確定」。

### 中斷手機與電腦的連線

如果您想要中斷手機與電腦的連線，按一下 



## 控制手機

您可以使用 OSP 來控制您的手機。如果使用滑鼠按一下 OSP 桌面上的功能表，則手機上的功能表就像在手機上選定功能表一樣運行。

例如，如果想要使用 OSP 發送訊息，按一下 OSP 主功能表「通訊」標籤中的資訊，然後按一下編寫訊息。

您可以透過按一下滑鼠或使用電腦鍵盤來輸入字元。

如果您想要使用滑鼠輸入字元，按一下要輸入的字元。

如果您想要使用鍵盤輸入字元，輸入鍵盤上的字元。

縮寫訊息完成後，按一下「發送多媒體訊息」。

## 在手機和電腦之間傳送檔案

### 將檔案從電腦傳送至手機

- 1 選擇想要從電腦傳送至手機的檔案，然後將該檔案拖放至 OSP 螢幕。

### 將檔案從手機傳送至電腦


- 1 從 OSP 屏幕娛樂標籤的媒體集中選擇想要傳送至電腦的檔案，然後按一下滑鼠右鍵並選擇儲存至電腦。

### 在手機上編輯檔案

- 1 從 OSP 屏幕娛樂標籤的媒體集中選擇想要編輯的檔案，然後按一下滑鼠右鍵並選擇編輯。
- 2 您可以使用關聯的應用程式來編輯檔案。
- 3 編輯檔案完成後，會將它傳送回至您的手機。

### 使用 OSP 通知

OSP 功能能為您提供關於手機事件（包括**鬧鐘**、**訊息**、**來電**等）資訊的快顯訊息。

- 1 選擇 OSP 屏幕中的 。
- 2 選擇「以快顯訊息提示我」

**注意：**使用 OSP 功能時，手機的反應可能會很慢。

# 網絡功能

## 存取網絡


- 1 點按**主功能表**中的**瀏覽器**。
- 2 要直接轉到瀏覽器主頁，請選擇**瀏覽器**。或選擇**輸入網址**並鍵入網址，然後點按屏幕左上角的**OK**。

**注意：**連線至此服務並下載內容時，會產生其他費用。請向網絡供應商諮詢收費詳情。

## 新增並存取書籤

爲了方便快捷地存取喜愛的網站，您可新增書籤並儲存網頁。


- 1 點按**主功能表**中的**瀏覽器**。
- 2 選擇**書籤**。書籤清單將會顯示在屏幕上。
- 3 要新增書籤，請點按**新增書籤**。在對應的欄位方塊中，輸入書籤標題和連結。

- 4 點按屏幕左上角的 。此時，書籤將會顯示在書籤清單中。
- 5 要存取書籤，只要點按書籤旁邊的「**連接**」圖示或點按書籤標題，然後點按**跳至**。您將連線到該網頁。

## 使用 RSS 閱讀器

RSS（簡易資訊聚合）是網絡 Feed 格式成員之一，用於發布經常更新的內容，如部落格條目、新聞標題或 Podcasts。RSS 文件也稱爲 Feed、Web Feed 或頻道，包含來自關聯網站的內容概要或完整文字。RSS 能使人們可以自動與最愛的網站保持連線。它比手動查看要方便很多。用戶可透過在閱讀器中輸入 Feed 連結或按一下啓動訂閱程序瀏覽器中的 RSS 圖示，即可訂閱 Feed 服務。閱讀器會定期檢查用戶訂閱的 Feed，查看是否有新內容更新，並下載其發現的任何更新。

## 儲存網頁

- 1 按照上述步驟，存取所需的網頁。
- 2 點按  並選擇**儲存此網頁**。
- 3 輸入網頁的名稱，便於輕鬆識別。
- 4 點按**儲存**。

## 存取已儲存的網頁

點按**瀏覽器**並選擇**已儲存的網頁**。  
您可在此處檢視已儲存的網頁。

## 檢視手機記錄

點按**瀏覽器**並選擇電話記錄。

## 將手機用作數據機

GD880 手機還具備電腦數據機的雙重功能，讓您即便在無法連接的情況下，亦可透過線纜存取電郵和網絡。您可以使用 USB 線或藍芽。

### 使用 USB 線：

- 1 確保已在電腦上安裝 LG 電腦端套件。

- 2 如前所述，使用 USB 線連接 GD880 手機和電腦，然後啟動 LG 電腦端套件軟件。
- 3 按一下電腦上的手電互聯網連接(工具)。然後，按一下新增並可連接至互聯網的設定檔並儲存相關值。
- 4 將會在電腦屏幕上顯示所建立的設定。選擇該設定檔並按一下連接。  
電腦將會連接至 GD880 手機。

### 使用藍芽：

- 1 確定藍芽已**開啓**並在電腦和 GD880 手機上均可見。
- 2 配對電腦和 GD880 手機，以便按需提供密碼進行連線。
- 3 使用 LG 電腦端套件上的**連線精靈**建立有效的藍芽連線。
- 4 按一下電腦上的**互聯網套件**。然後按一下**新增**按鈕。
- 5 選擇 **LG Mobile USB 數據機**並選擇**確定**。此時，它將顯示在螢幕上。


## 網絡功能

- 6 編寫可連接至互聯網的設定檔並儲存相關值。
- 7 建立的設定檔會顯示在電腦屏幕上。選擇該設定檔並按一下**連接**。  
電腦將會連接至 GD880 手機。

# 設定

## 個人化情景模式

您可使用設定功能表來個人化情景模式設定。

- 1 從桌面點按 ，然後點按 **情景模式**。
- 2 選擇想要編輯的情景模式。
- 3 然後，您可變更清單中的所有可用聲音和提示選項，包括**鈴聲**、**音量**、**訊息提示**設定及更多。

## 變更顯示設定

從桌面點按 ，然後點按 **顯示設定**。選擇想要編輯的屏幕設定。

**備註：**背光燈顯示的時間越長，耗用的電池電量越多。這可能會導致需要更加頻繁地充電。

## 變更裝置設定

您可隨意變更 GD880 手機的操作，以便適合您的個人喜好。

從桌面點按 ，然後點按**裝置設定**並從下列清單中進行選擇。

## 設定

**日期及時間** — 調整日期和時間設定，選擇是否自動更新時間或使用夏令時間選項。

**電源節省** — 左右滑動設定為省電設定或僅夜間模式。

**語言** — 可變更 GD880 手機的顯示語言。

**自動鎖定** — 在桌面上自動鎖定按鍵。您可以變更進行自動鎖定的時間。

**安全** — 調節您的安全設定，包括 PIN 碼及手機鎖。

**記憶體資訊** — 請參閱**使用記憶體管理程式**，瞭解更多資訊。

**主要儲存裝置設定** — 在手機和外置記憶體之間選擇項目的儲存位置。

**重設設定** — 將所有設定還原至出廠預設值。

**裝置資訊** — 可顯示裝置的資訊。您可以使用此功能表經網絡升級您的軟件。

**裝置指南** — 可顯示使用每個功能（桌面、Widget 下載、指示器、功能表、通訊錄、SNS、狀態指示、手繪捷徑解鎖）的方式

# 設定

## 變更觸控設定

您可以為觸控提示音啟用聲音或震動。

## 變更連接設定

您的連接設定已由網絡商設定，以便您可立即使用新手機。要變更連接設定，請使用此功能表：

從桌面點按 ，然後點按**連接**。

### 網絡選擇

**選擇網絡** — 如果選擇**自動**，則 GD880 手機將自動搜尋網絡並在網絡中註冊手機。推薦使用這種方式以便獲得最佳的服務和品質。

如果選擇**手動**，將顯示目前可用的全部網絡，您可選擇其中一個網絡進行註冊。

**網絡模式** — 在**選擇網絡**功能表中搜尋網絡時，您可設定一種網絡進行搜尋。

**首選列表** — 您可新增首選列表以便進行連接。如果自動搜尋網絡，只需從網絡清單中選擇一種網絡。如果不自動搜尋網絡，您可以手動新增網絡。

**互聯網設定** — 此功能表顯示**互聯網設定**。您無法刪除或編輯您所在國家/地區的預設設定。但是，您可以使用此功能表新增設定。

**存取點** — 網絡商已儲存此訊息。您可以使用此功能表新增存取點。

**伺服器同步** — 您可以從網絡商伺服器接發資訊。

**注意：**此項服務並不可用於所有國家/地區。有關詳情，請聯絡您的網絡商。

**本地網絡** — 您可以經**本地網絡**選擇並共用內容。請格外小心，以免泄露個人資料。

**GPS 類型** — 選擇 GPS 類型：**輔助式 GPS**、**獨立式**。

**USB 連接模式** - 從選項中選擇一種數據服務，並使用 LG 電腦端套件軟件同步 GD880 手機以便從手機中複製檔案。請參閱**電腦同步**，瞭解關於同步的更多資訊。如果**透過** Windows Media Player 使用音樂同步，請**選擇**此功能表中的音樂同步。**音樂同步**僅適用於音樂內容。

**DivX VOD 註冊** — 此功能表用於產生 DivX VOD 註冊代碼。請瀏覽 <http://vod.divx.com> 進行註冊並獲取技術支援。

**分組數據連線** - 選擇何時應為分組數據將裝置連接至網絡。

**瀏覽器設定** - 設定與瀏覽器相關的值（**網絡設定**、**外觀設定**、**快捷/Cookies**、**安全**）。

**串流播放設定** - 您的網絡商已經為您儲存此資訊。您可以使用此功能表新增設定。

**Java 設定** - 可讓您設定 Java 程式的連接情景模式以及檢視認證。

**數據漫遊** - 可讓您在漫遊區管理接收的多媒體/Widget/電郵/PIM/無線連結數據。

使用數據漫遊功能，您可以封鎖數據應用程式服務在漫遊區不播放收費的數據應用程式。

預設設定為關閉，且將會封鎖使用數據應用程式。啟用數據漫遊功能後，您可以下載或同步數據。

## 使用記憶體管理程式

GD880 手機配有三種可用的記憶體：手機、智能咭和外置記憶咭。

您可使用記憶體管理程式查看每個記憶體的已用空間和可用空間。

點按**裝置設定**，然後點按**記憶體資訊**。

**內置共用記憶體** - 檢視內置共同記憶體上的可用記憶體。

**內置多媒體記憶體** - 檢視內置多媒體記憶體上的可用記憶體。

**內置預留記憶體** - 檢視手機上可用於**文字訊息**、**通訊錄**、**日曆**、**待辦工作項目**、**備忘錄**、**鬧鐘**、**通話記錄**、**書籤**和其他的記憶體。

**智能咭記憶體** - 檢視智能咭上的可用記憶體。

**外置記憶體** - 檢視可用於外置記憶咭的記憶體（您可能需要另行購買記憶咭）。

# 設定

## 使用藍芽收發檔案

### 要發送檔案：

- 1 開啓要發送的檔案，通常為相片、影片或音樂檔案。
- 2 選擇**發送**方式。  
選擇**藍芽**。
- 3 如果已配對藍芽裝置，GD880 手機將不會自動搜尋其他**藍芽**裝置。如果尚未配對，GD880 手機將搜索範圍內其他已啓用**藍芽**的裝置。
- 4 選擇要將檔案發送至的裝置。
- 5 您的檔案將會被送出。

**提示！** 檢查進度列，確定檔案已發送。

### 要接收檔案：

- 1 要接收檔案，藍芽必須為**開啓**並**可見**。請參閱下文的**變更您的藍芽設定**，瞭解更多資訊。
- 2 系統將會顯示一則訊息，提示您接受來自寄件者的檔案。點按是以接收檔案。
- 3 您將查看到檔案的儲存位置。對於圖像檔案，您可以選擇**檢視**檔案或**轉至我的檔案**。通常將檔案儲存在**我的檔案**中的對應位置。

## 變更您的藍芽設定

點按**藍芽**並選擇。

### 對下列選項作出變更：

**我的裝置資訊** — 檢視您的裝置關於藍芽的資訊。

**我的裝置名稱** — 檢視您的裝置名稱。

**我的藍芽地址** — 檢視您的藍芽地址。

**受支援的服務** — 選擇如何結合使用藍芽和各種不同的服務。

**顯示我的手機** — 選擇**可見**、**隱藏**或**可見時間為 1 分鐘**。

**遠端智能咕模式開啓/關閉** — 開啓或關閉。

## 同其他藍芽裝置配對

透過配對 GD880 手機與其他裝置，您可設定一個受密碼保護的連接。

- 1 檢查藍芽是否**開啟**和**可見**。您可以透過點按  來變更您的可見性。
- 2 點按**新增裝置**。
- 3 GD880 手機將會搜尋裝置。搜尋完成後，**重新整理**圖示將會顯示在屏幕的左上角。
- 4 選擇您想要配對的裝置，並按一下確認訊息中的「是」。如果密碼與您正在嘗試配對裝置的密碼不符，則您可能需要輸入密碼。
- 5 點按**自選或時常允許**，然後配對裝置。

## 使用藍芽耳機

- 1 檢查藍芽是否**開啟**和**可見**。
- 2 遵循隨耳機附帶的說明，將耳機調至配對模式並配對裝置。
- 3 點按**始終詢問**或**始終允許**。GD880 手機將自動切換到手機情景模式。

## Wi-Fi

「無線裝置管理程式」可讓您使用裝置上的 Wi-Fi (無線 LAN) 管理互聯網連接。

它容許手機連接本地無線網絡或存取無線互聯網。相對於藍芽無線技術，Wi-Fi 速度更快且範圍更廣，並可用於快速收發電郵或瀏覽互聯網。

**注意：**GD880 支援 WEP 和 WPA-PSK/2 加密，但不支援 EAP 或 WPS 加密。如果 Wi-Fi 服務供應商或網絡管理員已設定網絡安全性的加密，則您應在快顯視窗中填入對應密鑰。

如果尚未設定加密，則系統將不會顯示此快顯視窗。您可透過 Wi-Fi 服務供應商或網絡管理員獲取此密鑰。

# 設定

## 軟件升級

### LG 行動手機軟件升級程式

有關安裝和使用本程式的更多資訊，請瀏覽 <http://www.lgmobile.com>

此功能可讓您在網上快捷方便地將軟件升級到最新版本，而無需到訪我們的服務中心。由於行動手機軟件升級程式在升級過程中需要用戶格外留意，因此，在繼續升級之前，請務必仔細閱讀各步驟中顯示的任何說明和注意事項。請注意，在升級過程中移除 USB 線或電池可能會對行動電話造成嚴重損壞。由於製造商不會為升級過程中的數據損失承擔任何責任，因此建議您事先備份好任何重要資料以策安全。

# 配件

以下配件隨 GD880 手機一起提供。

## 充電器



## USB 線



## 電池



## 立體聲 耳機



## 注意：

- 只可用原裝LG 配件。
- 不使用原裝LG 配件，保養可能失效。
- 配件在不同地區可能會有所不同，請向我們的地區服務公司或代理商瞭解更多詳情。

# 技術數據

## 一般資訊

產品名稱：GD880

系統：GSM 850 / E-GSM 900 /  
DCS 1800 / PCS 1900 / WCDMA

## 環境溫度

最高：+55°C (放電),  
+45°C (充電中)

最低：-10°C

# Declaration of Conformity



LG Electronics

## Supplier's Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

### Model Name

GD880

### Trade Name

LG

CE 0168 !

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2006  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Issued Date

Seung Hyoun, Ji / Director

09.Feb. 2010

Signature of representative





视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。



## GD880 用户手册

恭喜您购买此款功能先进、外观小巧的 LG GD880 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

# 目录

关于安全有效使用手机的准则 . . . . .	7	更改常用通话设置 . . . . .	23
开始了解您的手机 . . . . .	12	更改视频通话设置 . . . . .	24
打开视图 . . . . .	13	通话费用 . . . . .	24
安装 SIM 卡和电池 . . . . .	14	通话时间 . . . . .	24
充电 . . . . .	15	数据量 . . . . .	24
存储卡 . . . . .	16	<b>联系人 . . . . .</b>	<b>25</b>
使用触摸屏 . . . . .	17	正在搜索联系人 . . . . .	25
触摸屏提示 . . . . .	17	添加新联系人 . . . . .	25
控制触摸屏 . . . . .	17	创建群组 . . . . .	25
<b>主屏 . . . . .</b>	<b>18</b>	更改电话本设置 . . . . .	26
您可以向主菜单添加收藏菜单 . . . . .	18	查看信息 . . . . .	26
快速键 . . . . .	19	从社交网络导入好友 . . . . .	27
<b>通话 . . . . .</b>	<b>20</b>	<b>信息 . . . . .</b>	<b>28</b>
拨打电话 . . . . .	20	信息 . . . . .	28
从电话本拨打电话 . . . . .	20	发送信息 . . . . .	28
接听和拒接来电 . . . . .	20	输入文本 . . . . .	28
通话选项 . . . . .	21	T9 模式 . . . . .	28
快速拨号 . . . . .	22	使用模板 . . . . .	28
拨打第二个电话 . . . . .	22	使用图释 . . . . .	28
查看通话记录 . . . . .	22	使用签名 . . . . .	29
使用呼叫转接 . . . . .	22	更改文本信息设置 . . . . .	29
使用呼叫限制 . . . . .	23	更改多媒体信息设置 . . . . .	29
使用借口信息 . . . . .	23	更改其它设置 . . . . .	30
		设置您的电子邮件 . . . . .	30

# 目录

Microsoft Exchange		多媒体.....	40
电子邮件帐户.....	30	图片.....	40
读取电子邮件.....	31	发送照片.....	40
使用新帐户发送电子邮件.....	31	使用图像.....	40
更改电子邮件设置.....	31	打印图像.....	40
<b>相机.....</b>	<b>32</b>	移动或复制图像.....	40
了解取景器.....	32	声音.....	41
快速拍照.....	33	使用声音.....	41
拍照后.....	33	视频 .....	41
使用高级设置.....	33	观看视频.....	41
<b>摄像机.....</b>	<b>35</b>	发送视频剪辑.....	41
了解取景器.....	35	Flash 内容.....	41
快速录制视频.....	36	文档.....	41
拍摄视频后.....	36	其它内容.....	41
使用高级设置.....	37	游戏.....	41
<b>照片和视频.....</b>	<b>38</b>	玩游戏.....	41
查看照片和视频.....	38	将文件传输到手机.....	42
从视频中捕获图像.....	38	音乐.....	42
以幻灯片显示方式查看照片.....	38	将音乐传输到手机.....	42
将照片设为墙纸.....	38	播放歌曲.....	43
编辑照片.....	38	FM 收音机.....	43

管理器.....	44	OSP (On Screen Phone).....	49
SNS.....	44	在电脑上安装 OSP.....	49
Facebook.....	44	启动 OSP.....	49
Twitter.....	44	连接手机和电脑.....	49
设置.....	44	断开手机与电脑的连接.....	49
将事件添加到日程表中.....	44	控制手机.....	50
向任务列表添加项目.....	44	在手机和电脑之间传输文件....	50
添加备忘录.....	44	在手机上编辑文件.....	50
设置闹钟.....	45	使用 OSP 通知.....	50
录制声音或语音.....	45	网络.....	51
使用计算器.....	45	访问网页.....	51
换算单位.....	45	添加并访问书签.....	51
向世界时钟添加城市.....	46	使用 RSS 阅读器.....	51
使用秒表.....	46	保存页面.....	51
LG Air Sync.....	46	访问保存的网页.....	51
电脑同步.....	47	查看手机历史记录.....	52
在计算机上安装 LG PC 套件...	47	将手机用作调制解调器.....	52
连接手机和电脑.....	47	设置.....	53
备份并恢复手机上的信息....	47	个性化情景模式.....	53
在电脑上查看手机文件.....	47	更改显示设置.....	53
同步电话本.....	47	更改设备设置.....	53
同步信息 .....	48	更改触摸设置.....	53
将手机用作音乐同步设备.....	48	更改连接设置.....	54
DivX Converter.....	48	使用内存管理器.....	55

# 目录

使用蓝牙发送和接收文件.....	55
更改蓝牙设置.....	56
与其它蓝牙设备配对.....	56
使用蓝牙耳机.....	56
Wi-Fi.....	57
软件升级.....	57
配件.....	58
技术参数.....	59

# 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

## 暴露射频能量之下

无线电波暴露和“特定吸收率”(SAR)信息。此款 GD880 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员(无论年龄和健康状况)安全而设计的安全裕量。

- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会(ICNIRP)建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.23 W/kg (10 克)，戴在身体上时，其值为 1.10 W/kg (10 克)。

- 电气电子工程师协会(IEEE)建议的 SAR 上限值为 1.6 W/kg，平均值超过 1 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

## 产品保养和维护

### 警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 保修(由 LG 决定)可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。

# 关于安全有效使用手机的准则

- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能变热并引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

## 有效的手机操作

### 电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

## 行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

## 防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

## 爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

# 关于安全有效使用手机的准则

## 在飞机上

无线设备可能对飞机造成干扰。

- 飞机飞行过程中，请关闭手机或激活飞行模式。
- 未经机务人员允许，不得在地面上使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话


并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要诸如浴室之类的高湿环境中使用。


- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。 如果可能，请循环使用电池。 不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

# 开始了解您的手机

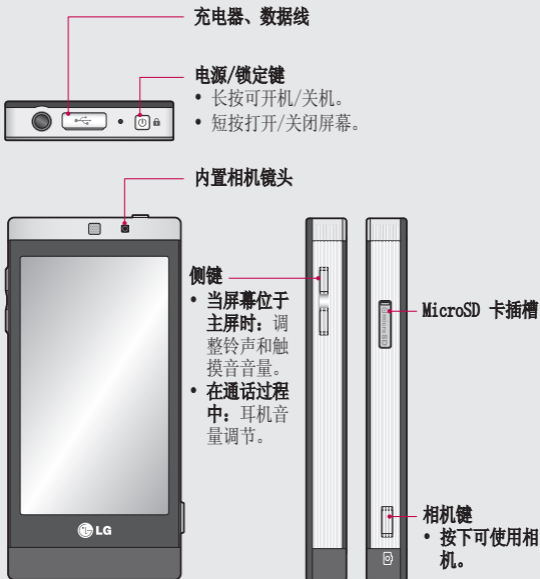

**警告：**在手机上放置重物或将手机卧放在口袋中可能会损坏手机的 LCD 屏幕及触摸屏的功能。

# 打开视图

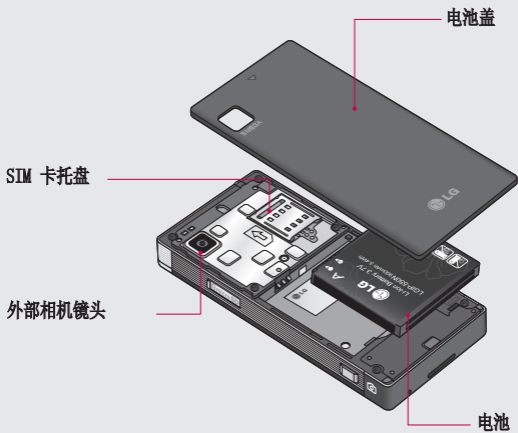

# 安装 SIM 卡和电池


## 1 卸下电池盖

将电池盖沿手机底部滑动，卸下电池盖。



## 2 安装 SIM 卡


将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。请确保先从手机中取出电池，然后再安装 SIM 卡。要取出 SIM 卡，请向外轻推即可。

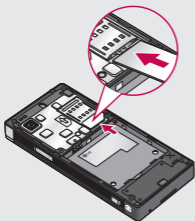

**⚠ 警告：**手机开机时，不要取出电池，这可能会损坏手机。

## 3 安装电池


先将电池右侧插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池左侧，直至电池卡入到位。

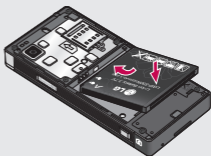

# 充电

连接旅行适配器（充电器）和随附的 USB 数据线。将 USB 数据线连接到手机，然后将其插入电源插座。只有屏幕上显示“电量已满”信息，GD880 充电才完成。

**备注：**第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。忽略第一次出现的“电量已满”信息，将手机电池充整整一个晚上。

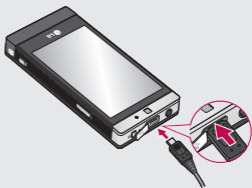



# 存储卡

## 安装存储卡

您可以使用 microSD 存储卡扩充手机的存储空间。


**备注：**存储卡是可选配件。

- 1 向下滑动插槽盖。
- 2 将 microSD 存储卡插入插槽。确保金色接触区域面朝下。
- 3 向上滑动插槽盖。

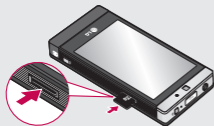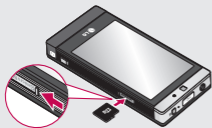

## 格式化存储卡

如果已格式化存储卡，您可以开始使用。如果没有，您需要先对其进行格式化才能使用。

- 1 从主屏选择 , 然后在**设备设置**。
- 2 点触**内存信息**，然后向下滚动选择**外部存储器**。
- 3 点触**格式化**，然后确认选择。
- 4 输入密码（如果已设置）。存储卡完成格式化，现在，您可以使用了。

# 使用触摸屏

## 触摸屏提示

- 要选择项目，请点触图标中心位置。
- 无需大力按。触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。
- GD880 未使用时将返回锁定屏幕。

## 控制触摸屏

GD880 触摸屏上的控件会动态更改，具体取决于您执行的任务。

### 打开应用程序

要打开任何应用程序，轻触其图标即可。

### 滚动



来回拖动即可滚动。

在主屏上，如访问通话记录列表时，您还可以上下滚动。

# 主屏

您可以通过此屏幕进入菜单选项、快速拨打电话、查看手机状态等。

## 您可以向主菜单添加收藏菜单

- 1 从主屏点触 。
- 2 如果要移除收藏菜单，请点触图标右上角的 。如果要向主菜单添加收藏菜单，请点触屏幕右下角的**添加**。



- 3 点触**添加**之后，您可以在**小工具**、**书签**或**快捷方式**之间选择。（如果不想添加，请点触**取消**）。
- 4 点触菜单右侧的星号，选择要添加的菜单。当您返回上一个屏幕时，该菜单将出现在屏幕上。
- 5 完成后，请点触**确定**。



# 主屏

## 快速键

通过主屏上的快速键，您点触一次即可轻松进入经常使用的功能。



点触可打开触摸拨号键盘，以拨打电话。



点触可以打开**电话本**。要搜索您要呼叫的号码，请使用触式键盘在屏幕顶部的“搜索”字段中输入联系人的姓名。您也可以创建新的联系人以及编辑现有联系人，等等。






点触可以进入**信息**菜单。在此，您可以创建新短信或彩信，或查看信息文件夹。




点触可以打开完整**顶层菜单**。

# 通话


## 拨打电话

- 1 从主屏点触  以打开键盘。
- 2 使用键盘键入号码。
- 3 点触  开始通话，而如果您要拨打视频电视，则点触 , 然后选择**拨打视频电话**。
- 4 要结束通话，请按屏幕底部的“结束通话”。

**提示!** 要输入 + 以拨打国际电话，请长按 。

**提示!** 按电源键锁定触摸屏，以免意外拨出电话。

## 从电话本拨打电话

- 1 从主屏点触  以打开**电话本**。
- 2 点触屏幕顶部的“搜索”字段框，然后使用键盘输入您要呼叫的联系人的前几个字母。
- 3 从过滤列表中点触您要呼叫的联系人旁边的通话图标。如果该联系人有多个号码，则拨打默认号码。
- 4 或者，您可以点触联系人姓名，如果该联系人有多个号码，请选择您要使用的号码。

## 接听和拒接来电

当有电话铃声响起时，点触**应答**可接听来电。

要关闭铃声，请点触**静音**。如果您在开会时忘记将情景模式更改为**静音**，这非常有帮助。点触**拒绝**可拒接来电。


## 通话选项





**选项** - 点触  以显示其它来电选项的列表。

**扬声器** - 点触  打开手机扬声器。

**保持** - 点触  保留通话。

点触  以打开数字键盘，拨打第二个电话。此功能还允许您在拨打自动电话服务（如呼叫中心）时使用数字编号导航菜单。

点触  以在通话过程中添加备忘录。


点触  以在通话过程中搜索联系人。

**提示！** 要在选项列表或联系人列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。


# 通话

## 快速拨号

您可以为常用联系人指定快速拨号号码。

- 1 点触**电话本**，然后点触  并选择**快速拨号**。
- 2 语音邮件已设为快速拨号 1。不能对此设置进行更改。点触任意其它号码，为其指定快速拨号联系人。
- 3 此时将打开您的**联系人**。点触要指定到该号码的联系人电话号码一次，以选择该联系人。要查找联系人，请点触**搜索**字段框，然后输入联系人姓名的第一个字母。

## 拨打第二个电话

- 1 在初始呼叫中，点触**拨号盘**并键入您要呼叫的号码。
- 2 点触**语音电话**以连接通话。
- 3 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 4 要在通话间更改，请点触  或按保持通话的号码。

- 5 要结束一个或两个通话，请按  并选择**结束**。

**备注：**您需要为每个通话各自付费。

## 查看通话记录

点触**记录**。

**提示！** 点触任意单个通话记录条目，以查看通话日期、时间和时长。

## 使用呼叫转接

- 1 在**主菜单**选项卡中点触**通话设置**。
- 2 点触**呼叫转接**。
- 3 在**语音通话**和**视频通话**之间选择。您可以选择转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。
- 4 点触**激活**。
- 5 选择**转至语音邮件中心**或**转至其它号码**以输入新的转接号码。
- 6 完成输入号码时，点触**确定**。

**备注：**转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

**提示！** 要关闭所有通话转接，请从**呼叫转接**菜单中选择**全部停用**。

## 使用呼叫限制


- 1 在**主菜单**选项卡中点触**通话设置**。
- 2 点触**呼叫限制**。
- 3 选择**语音通话**或**视频通话**。您可以从**呼叫限制**菜单中点触**全部停用**，关闭所有呼叫限制。
- 4 选择以下五个选项中的任一项：  
**所有拨出电话**  
**国际拨出电话**  
**国际漫游时拨打电话**  
**所有来电**  
**国际漫游时来电**  
点触**激活**。
- 5 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

**提示！** 从**主菜单**选项中选择**固定拨号**打开并汇集一个号码列表。

## 使用借口信息

在拒接来电之前，您可以使用“**借口信息**”来发送信息，解释您不能接听来电的原因。

## 更改常用通话设置

- 1 在**主菜单**选项卡中点触**通话设置**。
- 2 点触**常用设置**。在此，您可以修改以下设置：  
**拒接来电** - 向左滑动开关，突出显示**拒绝列表**。您可以点触文本框，从所有通话、来自特定联系人或群组的通话、未知号码（不在电话本中的号码）通话或禁显号码通话中进行选择。点触  更改设置。  
**发送我的号码** - 选择当您呼叫对方时是否显示您的号码。  
**显示 SNS 事件** - 选择是否显示 SNS 事件。  
**自动重拨** - 向左滑动开关为**开**，向右滑动开关为**关**。

# 通话

**分钟提示** - 向左滑动开关为**开**，在通话过程中每隔一分钟将听到提示音。

**蓝牙接听模式** - 选择**免提**可使用蓝牙耳机接听来电，或选择**手机**按手机上的任意键接听来电。

**保存新号码** - 选择是否打开**保存新号码**功能。向左滑动开关为**开**，向右滑动开关为**关**。

**语音清晰** - 选择是否打开**语音清晰**功能。向左滑动开关为**开**，向右滑动开关为**关**。

## 更改视频通话设置

1 点触**通话设置**。

2 点触**视频通话设置**。

在此，您可以修改以下设置：

**使用个人图像** - 选择是否将个人图像用于视频通话。

**个人图像** - 选择用于视频通话的图像。

**镜像** - 选择是否使用镜像。

## 通话费用

查看您拨打电话所产生的费用（此服务取决于网络，某些运营商不支持此服务）。

## 通话时间

查看所有拨出电话或接听电话时间，或同时查看。



## 数据量

查看所有已接收或已发送数据，或两者的字节数（KB）。

# 联系人

## 正在搜索联系人


有两种方式可搜索联系人：

- 1 从主屏幕中点触 ，选项卡中点触**电话本**，或从主屏幕中点触 。
- 2 您将看到一个联系人列表。在“姓名”字段中键入联系人姓名的首字母会使菜单跳转到列表的该字母区域。



**提示！** 当您点触“名称”字段时，将显示字母键盘。

## 添加新联系人

- 1 点触**电话本**，然后点触**新建**。
- 2 选择是将联系人保存到**手机**还是**SIM 卡**。
- 3 输入姓氏和名称。
- 4 对于同一个联系人，最多可以输入 5 个不同的号码。每个联系人下预设的条目包括：**手机**、**家庭**、**办公室**、**传呼机**和**传真**。
- 5 添加电子邮件地址。

- 6 将联系人分配到一个或多个群组。每个联系人最多可分配三个群组。从以下选项中选择：**无群组**、**家人**、**同事**、**同学**或**重要人士**。
- 7 您还可以添加**铃声**、**振动**、**主页**、**家庭地址**、**公司名称**、**职位**、**公司地址**、**生日**、**周年纪念**和**备忘录**。
- 8 点触  以保存联系人。

## 创建群组

- 1 点触**电话本**。点触联系人旁边的向下箭头，然后选择**群组**。
- 2 点触**新建群组**，或点触 ，然后选择**新建群组**。
- 3 在**群组名称**字段中，为新群组输入名称。您也可以为群组指定铃声。
- 4 点触 。

**备注：** 如果您删除一个群组，分配至该群组的联系人不会被删除。他们将保留在您的**电话本**中。

# 联系人

## 更改电话本设置

您可以调整电话本设置以满足您的个人需要。

1 点触**电话本**，点触 ，向下滚动并选择**电话本设置**。

2 在此，您可以调整以下设置：

**显示键盘** - 选择是否显示手机键盘。

**显示名称** - 选择名称的显示顺序。

**同步电话本** - 连接到服务器以同步电话本。

**全部复制** - 将电话本从手机复制到 SIM 卡，或从 SIM 卡复制到手机。您可以一次选择一个或一次选择全部。

**全部移动** - 其操作与复制相同，但联系人仅保存在其移动到的目标位置。

**恢复电话本** - 将电话本恢复至存储卡。

**清空电话本** - 删除所有联系人。如果确定要擦除电话本，请在**手机**和**SIM 卡**之间选择，然后点触**是**。

**内存信息** - 查看有关**手机**、**SIM 卡**和**SIM 邮件**可用存储空间的信息。


**通过蓝牙发送所有联系人** - 使用蓝牙，将所有联系人发送到其它设备或计算机。如果选择此选项，您会收到打开蓝牙的提示。

**备份电话本** - 将电话本备份至存储卡。

## 查看信息

1 点触**电话本**，点触 ，向下滚动并选择**信息**。

在此，您可以查看**服务号码**、**本机号码**、**内存信息**（显示内存使用情况）和**我的档案**。

**提示!** 要添加自己的名片，请选择**我的档案**，然后输入联系人的详细信息。点触  完成。

## 从社交网络导入好友

您可以使用此菜单将朋友的联系方式从社交网络（Twitter 或 Facebook）添加到您的手机中。

- 1 点触**电话本**，然后点触  并选择**导入好友来源**。
- 2 选择 **Twitter** 或 **Facebook**。
- 3 输入您的电子邮件和密码，然后单击**确定**。
- 4 选择您要添加的联系人。
- 5 选择**选项** -> 保存档案至电话簿。


# 信息

## 信息




GD880 将短信和彩信结合到一个直观易使用的菜单中。

## 发送信息

- 1 从主屏幕中点触 ，然后点触 **信息**，或从主屏幕中点触 。
- 2 点触 **写信息** ，然后选择 **插入** 以添加图像、视频、声音、图释等。
- 3 点触 **收件人** 输入收件人号码，或打开电话本或收藏夹。您可以添加多个联系人。完成后，点触下面的信息框开始撰写信息文本。
- 4 输入文本后，点触信息上面的 **发送短信/发送彩信** 可以发送信息。

 **警告：**如果在短信中添加图像、视频或声音，则短信将自动转换为彩信，您需要支付相应费用。

## 输入文本

- 点触  打开 T9 模式。
- 点触  选择编写语言。
- 点触  在数字、符号和文本输入间切换。

使用功能键可以在大小写输入之间更改，或者以全屏模式在键盘上写信息等等。

## T9 模式

T9 模式使用内置字典，根据您的点触按键的顺序识别您写入的内容。它预测您输入的内容，并且建议可选择项。

## 使用模板

为您最常使用的短信和彩信创建模板。手机中已包含一些模板，您可以对其进行编辑。


## 使用图释

使用图释，使您的信息更具趣味性。手机中已有一些常用图释。您可以通过点触 **新图释** 添加新图释。

## 使用签名

为您最常使用的短信和彩信创建签名。写新签名时，您可以从选项菜单中的“插入”->“更多”进入签名。

## 更改文本信息设置

点触**信息**，然后点触  并选择**设置**。选择**文本信息**。您可以更改：

**文本信息中心** - 输入信息中心的详细信息。

**状态报告** - 向左滑动开关，在对方收到您发送的信息时接收确认。

**有效期** - 选择信息在信息中心中的最长保存时间。

**信息类型** - 将文本转换为**文本、语音、传真、X.400** 或**电子邮件**。

**符号编码** - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

**将长文本另发送为** - 选择是以**多条短信**还是一条**彩信**发送长信息。

## 更改多媒体信息设置

点触**信息**。点触  并选择**设置**，然后选择**多媒体信息**。您可以更改：

**检索模式** - 选择**本地网络**或**漫游网络**。如果选择**手动**，那么您仅会收到彩信通知，您可以决定是否要完整下载该信息。

**发送报告** - 选择以请求和/或允许发送报告。

**已读回执** - 选择以请求和/或允许已读回执。

**优先级** - 选择彩信优先级别（**优先级：低、优先级：中或优先级：高**）。

**有效期** - 选择信息在信息中心中的最常保存时间。

**幻灯片持续时间** - 选择幻灯片在屏幕上显示多长时间。

**创建模式** - 选择信息模式（**受限、警告、不受限**）。

**发送时间** - 选择信息发送前的等待时间。

**多媒体信息中心** - 从列表中选择或添加新信息中心。

# 信息

## 更改其它设置

点触**信息**。点触 ，然后选择**设置**。

**视频邮件/语音邮件** - 点触**新配置文件**添加新的语音邮件/视频邮件服务。有关其提供的服务的详细资料，请联系您的网络运营商。

**服务信息** - 选择是接收还是阻止服务信息。您也可以通过在**服务安全性**选项中创建可信和不可信发件人列表来设置信息安全性。

**保存已发送信息** - 选择是否保存已发送信息。


**小区服务** - 选择是否打开/关闭小区广播，并选择您的频道和语言。

**签名** - 创建、编辑或删除**签名**。

## 设置您的电子邮件

从主屏幕点触 ，滚动到右侧，然后在点触**电子邮件**。

如果尚未设置电子邮件帐户，请点触 **Microsoft Exchange** 或其它。

如果您的手机已设置电子邮件帐户并且您需要添加新的电子邮件帐户，请点触  并选择**新建电子邮件帐户**。

**电子邮件地址** - 输入电子邮件地址。

**密码** - 输入帐户密码。

**邮箱类型** - 输入邮箱类型：**IMAP4**、**POP3** 或 **PUSH**。这些类型取决于服务提供商。

**用户名** - 输入帐户用户名。

**接收服务器** - 输入接收邮件服务器的地址。

**发送服务器** - 输入发出邮件服务器的地址。

**SMTP 认证** - 选择发送邮件服务器的安全设置。

**帐户名称** - 帐户在电子邮件文件夹的帐户列表中如何显示。

完成帐户设置后，帐户将显示在“电子邮件”文件夹的帐户列表中。

## Microsoft Exchange 电子邮件帐户

**电子邮件地址** - 输入帐户电子邮件地址。

**服务器地址** - 输入电子邮件服务器地址。

**域** - 输入帐户域。

**用户名** - 输入帐户用户名。

**密码** - 输入帐户密码。

**同步项** - 选择是否使用同步项（**电话本**、**日程表**和**任务**）。

## 读取电子邮件

您可以自动或手动查看帐户的新电子邮件。 手动查看：

- 1 点触**电子邮件**。
- 2 点触您要使用的帐户。
- 3 选择**读取新邮件**。

## 使用新帐户发送电子邮件

- 1 点触**新建电子邮件**，新电子邮件将打开。
- 2 撰写邮件。
- 3 点触**发送电子邮件**，您的电子邮件将被发送。

## 更改电子邮件设置

- 1 点触**电子邮件**。
- 2 点触  并选择**电子邮件设置**，然后可以更改以下设置：
  - 电子邮件帐户** - 选择电子邮件帐户
  - 允许回复电子邮件** - 选择是否允许发送读取确认邮件。
  - 请求回复电子邮件** - 选择是否要请求读取确认邮件。
  - 包括原始信息** - 选择在回复中是否包含原始信息。
  - 包含附件** - 选择在回复中是否包含原始附件。

**漫游时自动接收** - 选择在国外（漫游）时是否自动接收邮件。

**新电子邮件通知** - 选择在收到新电子邮件时是否需要提示。

**签名** - 创建电子邮件签名。

**优先级** - 选择电子邮件信息的优先级级别。

**最大接收大小** - 选择最大接收大小：**100KB、200KB、300KB、500KB、1MB、2MB、2.2MB**。

# 相机

## 了解取景器

**缩放** - 放大或缩小。按手机的侧键也可以放大或缩小。

**曝光** - 对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。



返回

相机模式



**视频模式** - 向下滑动此图标以切换到视频模式。

**图片库** - 这使您可以在相机模式下访问保存的照片。仅需点触，您的图片库就会出现在屏幕上。

**设置** - 点触此图标可以打开设置菜单。请参阅**使用高级设置**。

**微距** - 切换以拍摄特写。


## 快速拍照

- 1 按手机右侧的  键。
- 2 当相机对好焦后，点触屏幕中心右侧的  拍照，也可以用力按手机侧面的相机键。


**提示!** 要切换为相机模式或视频模式，请向上/向下滑动取景器右部中间的相机或视频图标。


## 拍照后

拍好的照片将显示在屏幕上。图像名称显示在屏幕的底部，并且右侧有四个图标。

 点触这些图标可以通过**信息**、**电子邮件**或**蓝牙**发送照片。


**备注:** 漫游时，如果下载彩信将产生一定费用。

 点触以将图像用于**墙纸**、**锁定屏幕**、**联系人**、**开机**、**关机**、**拨出电话**或**来电**屏幕。

 点触各种工具以编辑图像。

 点触可以返回取景器。

 点触可以删除图像。

 点触可以立即拍摄其它照片。将保存您的当前照片。

 点触可以查看保存的图像库。



## 使用高级设置

从取景器中点触  以打开所有高级设置选项。

**大小** - 更改保存在内存中的照片大小，或预设的拍摄照片的大小，使其大小适用于电话本。从以下七个数值选项中选择像素值：5M (2560x1920)、3M (2048x1536)、2M (1600x1200)、1M (1280x960)、墙纸、VGA (640x480)、QVGA (320x240)。

**场景模式** - 设置相机，使其适应环境。从自动、夜间、风景、肖像或运动中选择。

**ISO** - ISO 确定相机的光照传感器的感光性。ISO 越高，相机感光性能越好。在您无法使用闪光灯而光线较差的条件下，此功能很有用。从自动、ISO 800、ISO 400、ISO 200 或 ISO 100 中选择 ISO 值。

# 相机

**白平衡** - 从以下选项中选择：  
自动、白炽灯、荧光灯、日光或阴天。

**色彩效果** - 选择适用于您所拍摄的  
照片的色调。共有六种色调选  
项：关、棕褐色、单色、反色、曝  
光和蓝色。

**对焦** - 选择相机对焦方式。从  
自动对焦、手动对焦或人脸跟踪  
中选择。

**自拍器** - 使用自拍器，您可以设置  
拍照前按下拍摄按钮后的延迟。从  
关、3 秒、5 秒或 10 秒中选择。

**拍摄模式** - 从 9 种选项中选择拍  
摄模式。

**质量** - 在超精细、精细和标准之  
间选择。质量越精细，照片将越清  
晰，同时，文件更大。

**显示已拍照片** - 选择是否要在拍照  
后查看照片并提供选项。

**快门声音** - 从三种快门声音中选  
择一种。

**网格屏幕** - 从关、简单十字或三等  
分中选择。

**相片定位** - 选择是否打开照片的  
EXIF 信息以写入 GPS 信息。


**重设设置** - 重置所有相机设置。

**存储位置** - 选择是将照片保存到手  
机内存还是外部存储器。

**切换相机** - 选择是使用内置相机还  
是外相机。

# 摄像机

## 了解取景器

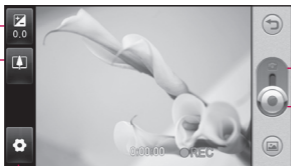

返回

相机模式 - 点触此图标切换到相机模式。

开始录制  
图片库

设置 - 点触此图标可以打开设置菜单。  
请参阅[使用高级设置](#)。

缩放 - 放大或缩小。按手机的侧键也可以放大或缩小。

曝光 - 对比度低的视频显示模糊，而对比度高的视频则显示更为清晰。

# 摄像机

## 快速录制视频

- 1 按手机右侧的相机键。

**提示!** 要切换为相机模式或视频模式，请向上/向下滑动取景器右部中间的相机或视频图标。

- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 按手机上的相机键一次即开始录制。或者点触屏幕上的红点 。
- 4 取景器底部将出现 **REC**，底部计时器显示视频长度。
- 5 要暂停视频，请点触 ，要恢复录制，请选择 。
- 6 点触屏幕上的  或再次按手机上的相机键以停止录制。

## 拍摄视频后

屏幕上将显示所拍摄视频的静态图像。视频的名称将显示在屏幕底部



点触以将视频作为**信息或电子邮件**，或通过**蓝牙**发送。



点触以将视频用作语音或视频铃声





点触以播放视频。



点触可以返回取景器。



点触可以删除您刚拍摄的视频，点触是确认。此时取景器将重新出现。

点触  可以立即拍摄另一段视频。



点触可以查看保存的视频库和图片库。



## 使用高级设置

从取景器中点触  以打开所有高级设置选项。

请参阅相机的高级设置。

**视频大小** - 选择视频大小：  
VGA (640x480)、QVGA (320x240)、  
QCIF (176x144)。


**录制模式** - 设置视频的长度限制：  
标准或彩信。

**音频** - 选择要静音（录制无声视频）还是取消静音以包括声音。

**显示已拍视频** - 选择是否要在录制视频后观看并提供选项。

# 照片和视频

## 查看照片和视频

- 1 滚动并点触**图片库**，或者在相机预览屏幕上点触 。
- 2 屏幕上将显示您的图像库。
- 3 点触视频或照片可以完全打开。

**提示！** 向左或向右轻弹以查看其它照片或视频。



## 从视频中捕获图像

- 1 选择您要从中拍摄图像的 video。
- 2 点触屏幕的中心以打开播放选项，然后点触  以在您要将其转换为图像的那一个画面上暂停视频，然后点触屏幕左上角，以打开  菜单。
- 3 点触屏幕左上角的 ，然后选择**抓取**。
- 4 屏幕上将显示图像以及图像的名称。
- 5 点触屏幕右上角的  以返回视频。
- 6 图像将保存在**媒体相册**文件夹，并显示在图片库中。


**警告：** 如果手机中没有录制多媒体文件，某些功能可能无法使用。

## 以幻灯片显示方式查看照片





幻灯片模式允许以幻灯片的形式一次性显示图片库中的所有照片。无法以幻灯片模式观看视频。

- 1 点触**图片库**中的 ，然后滚动并选择**幻灯片显示**。
- 2 开始幻灯片放映。
- 3 在幻灯片放映期间，点触  可以打开“时长”、“转换效果”等菜单。

## 将照片设为墙纸


- 1 点触**图片库**。
- 2 点触您要设为墙纸的照片。
- 3 点触  打开菜单。
- 4 点触**设置方式**，然后点触**主屏图像**。

## 编辑照片


- 1 从“图片库”菜单中，选择您要编辑的照片，点触屏幕左上角的  以打开菜单并选择**编辑**。
- 2 点触图标以调整照片：
  -  选择区域。
  -  选择工具：
    -  徒手对照片进行绘制更改。从四个选项中选择线条粗细，然后选择要使用的颜色。

**T** 给照片添加文本。您可以选择文本框以及文本框和文本的颜色。

 使用标记修饰照片。

 擦除您在照片上所作的绘图。您可以选择要使用的橡皮擦大小。

 点触可以打开更多效果选项，包括**旋转**。

 点触以对照片应用效果选项。

**调整** 此时将使用亮度或对比度对所拍图片进行调整。

 点触可以返回图片库。

**保存** 保存您对手机所做的更改。您可以用其它名称保存编辑后的照片。

**撤消** 擦除您对照片所作的编辑。

**发送** 选择将编辑后的照片作为**信息**、**电子邮件**发送，还是通过**蓝牙**发送。





# 多媒体

您可以将任意多媒体文件储存在手机内存中，从而轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡可释放手机内存的空间。您可以在**主菜单**选项卡的**我的文档**菜单中找到这些文件。

## 图片


**图像**包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

## 发送照片

- 1 从主屏点触 ，然后点触**我的文档**并选择**图像**。选择您要的照片，然后点触 。
- 2 点触**发送方式**并从**信息**、**电子邮件**或**蓝牙**中选择。

## 使用图像


您可以选择将图像用作墙纸、锁定屏幕图像或用来识别呼叫者。

- 1 在**主菜单**选项卡中点触**我的文档**，然后选择**图像**。选择您要的照片，然后点触 。

- 2 点触**设置方式**并从以下选项中选择：

**主屏图像**、**锁定屏幕图像**、**联系人图像**、**开机图像**、**关机图像**、**拨出电话图像**、**来电图像**


## 打印图像

- 1 在点触**我的文档**，然后选择**图像**。选择您要的照片，然后点触 。
- 2 点触**打印**，然后在 **PictBridge**和**蓝牙**之间选择。

**提示！** 您可以通过蓝牙或连接到图片打印机兼容的打印机打印。

## 移动或复制图像

您可以在手机内存和存储卡之间移动或复制图像。您可能需要执行此操作以释放其中一个存储位置的存储空间，或保护您的图像。

- 1 在**主菜单**选项卡中点触**我的文档**，选择**图像**，然后点触 。
- 2 选择**移动**或**复制**。
- 3 您可以依次点触图像以标记/取消标记。标记您要移动或复制的图像，然后点触**复制/移动**。

## 声音

**声音**包含一个声音列表，其中包括下载的声音、默认声音以及录音。在此，您可以管理或发送声音，或者将声音设为铃声。

## 使用声音

- 1 在**主菜单**选项卡中点触**我的文档**，然后选择**声音**。
- 2 选择所需的声音。它将开始播放。


## 视频

**视频**文件夹显示已下载的视频以及手机中录制的视频列表。

## 观看视频

- 1 在**主菜单**选项卡中点触**我的文档**，然后选择**视频**。
- 2 选择要播放的视频

## 发送视频剪辑

- 1 选择视频。
- 2 点触 ，然后点触**发送方式**。从**信息**、**电子邮件**或**蓝牙**中选择。

## Flash 内容

“Flash 内容”文件夹包含所有下载的 SWF 和 SVG 文件。

- 1 在**主菜单**选项卡中点触**我的文档**，然后选择**Flash 内容**。
- 2 选择要查看的文件。

## 文档

从**文档**菜单中，您可以查看所有文档文件。在此，您可以查看 Excel、PowerPoint、Word、文本和 PDF 文件。

## 其它内容

**其它内容**包含不属于图片、声音、视频、文档、游戏或应用程序的文件的列表。

## 游戏

您可以在手机上安装新的游戏，以便您在闲暇时候玩乐。

您也可以使用**娱乐**选项卡中的**游戏和应用程序**访问此功能。

## 玩游戏

- 1 在**主菜单**选项卡中点触**游戏和应用程序**。
- 2 选择要启动的游戏。

# 多媒体

## 将文件传输到手机

蓝牙是在电脑和手机间传输文件的最便捷方式。您可以通过同步数据线使用 LG PC 套件。

### 使用蓝牙传输：

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用电脑发送文件。
- 3 文件发出后，您必须点触是在您的手机上接受它。
- 4 如果文件是图像文件，则应出现在“影像”文件夹中；而如果是音乐文件，则应出现在“声音”文件夹中。

## 音乐

LG GD880 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要进入音乐播放器，请点触**音乐**。您可以从此处访问位于屏幕顶部的多个文件夹：

**备注：**音乐文件的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家关于使用此类材料的国家立法。

**所有曲目** - 包含手机上除预先加载的默认音乐以外的所有歌曲。

**收藏夹** - 包含您保存为收藏的所有歌曲。

**艺术家** - 按艺术家浏览音乐集合。

**专辑** - 按专辑浏览音乐集合。

**流派** - 按流派浏览音乐集合。

**播放列表** - 包含您创建的所有播放列表。

## 将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或同步数据线。

您也可以使用 LG PC 套件。使用蓝牙传输：

- 1 请确保双方设备都已打开蓝牙并且对对方可见。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 文件准备就绪可以发送后，您应点触是在手机上接受。
- 4 文件应显示在**音乐 > 所有曲目**中。

## 播放歌曲

- 1 点触**音乐**。
- 2 选择您要播放的歌曲。当手机处于**静音**模式时，将出现一则确认信息。
- 3 点触  以暂停歌曲。
- 4 点触  以跳到下一首歌曲。
- 5 点触  以返回到上一首歌曲。
- 6 点触  以返回到**音乐**菜单。  
点触多次可以返回到菜单。

## FM 收音机

LG GD880 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

- 1 滚动并点触**主菜单**选项卡中的**FM 收音机**。
- 2 调谐至某个电台，或在必要时调节音量。

**备注：**要收听收音机，您需要附加耳机。将其插到充电器接口旁的耳机插孔。

# 管理器

## SNS

一种社交网络服务，旨在构建或反映社交网络或人与人之间的社会关系，他们有着共同的兴趣和/或一起参加各种活动。

## Facebook

Facebook 是一个社交网站。


- 1 从主屏点触 ，然后点触 **Facebook**。

## Twitter

Twitter 是一种免费的社交网络和微型博客服务。



- 1 从主屏点触 ，然后点触 **Twitter**。

## 设置




- 1 从主屏点触 ，然后点触 **SNS 设置**。
- 2 打开社交网络。如果您有关于社交网络的帐户，该帐户将会显示。点触该帐户，然后点触 **导入朋友** 以将朋友的联系方式添加到您的手机。
- 3 如果没有帐户，请点触 **新建帐户**，然后创建您的帐户。

**备注：**连接此服务会产生额外费用。有关数据付费信息，请咨询网络提供商。



## 将事件添加到日程表中

- 1 从主屏点触 ，然后点触 **管理器**。
- 2 选择您要添加事件的日期。
- 3 点触 ，然后点触 **新建日程表**，或者直接点触屏幕底部的 **新建日程表**。

## 向任务列表添加项目



- 1 从主屏点触 ，然后在 **主菜单** 选项卡中点触 **任务**。
- 2 点触 ，然后点触 **新建任务**，或者直接点触屏幕顶部的 **新建任务**。
- 3 为任务项设置日期、添加备注或选择优先级：**高**、**标准**或**低**。
- 4 点触  保存您的任务。

## 添加备忘录

- 1 从主屏点触 ，然后在 **主菜单** 选项卡中点触 **备忘录**。
- 2 点触 ，然后点触 **新建备忘录**。或者直接按屏幕顶部的 **新建备忘录**。

- 3 键入您的备忘录，然后点触 **保存**。
- 4 您的备忘录将显示在屏幕上的备忘录应用程序中。

## 设置闹钟

- 1 从主屏点触 ，然后点触 **闹钟**。**小闹钟**应该默认显示在列表中，您不能删除它。
- 2 点触 ，然后点触 **新建闹钟**。或者直接按屏幕顶部的 **新建闹钟**。



**备注：**您最多可以设置 11 个闹钟，包括**小闹钟**。

**提示！** 向左滑动闹钟进行设置。


## 录制声音或语音

- 1 从主屏点触 ，然后在**主菜单**选项卡中点触**录音**。
- 2 选择保存录音的位置：**内部**或**外部**。
- 3 选择录音模式：**标准**或**彩信**。
- 4 点触  开始录音。
- 5 点触  暂停录音。
- 6 点触  结束录音。
- 7 点触  收听录音。
- 8 点触  调节音量。

## 使用计算器



- 1 从主屏点触 ，然后在**主菜单**选项卡中点触**其它工具**。
- 2 选择**计算器**。
- 3 点触键盘上的数字键以输入数字。
- 4 对于简单计算，点触您所需的函数 (+, -, x, ÷)，然后点触 =。
- 5 对于较复杂的计算，请点触  并从 **sin**、**cos**、**tan**、**log**、**ln**、**exp**、**sqrt**、**deg** 或 **rad** 等中选择。

## 换算单位


- 1 从主屏点触 ，然后在**主菜单**选项卡中点触**其它工具**。
- 2 选择**单位换算器**。
- 3 在屏幕顶部，选择是否要换算**货币**、**面积**、**长度**、**重量**、**温度**、**体积**或**速度**。
- 4 随后，您可以选择单位，输入要换算的初始值，然后选择要换算的目标单位。
- 5 屏幕上将显示相应的值。

# 管理器

## 向世界时钟添加城市

- 1 从主屏点触 ，然后在**主菜单**选项卡中点触**其它工具**。
- 2 选择**世界时钟**。
- 3 点触 ，然后点触**新建城市**。或者直接按屏幕顶部的**新建城市**。

## 使用秒表

- 1 从主屏点触 ，然后在**主菜单**选项卡中点触**其它工具**。
- 2 选择**秒表**。
- 3 点触屏幕底部的**开始**启动计时器。
- 4 如果您要记录时间，请点触**圈**。
- 5 点触**停止**结束计时器。

## LG Air Sync

使用此菜单，您可以将手机的 PIM 数据或其它内容与您的 LG Air Sync 帐户同步。

- 1 在**主菜单**选项卡中点触 LG Air Sync。
- 2 如果没有 LG Air Sync 帐户，请访问 [www.lgairsync.com](http://www.lgairsync.com) 以创建您的帐户。如果有帐户，请键入您的 ID 和密码。

- 3 如果要同步您的 PIM 数据，请点触“PIM 同步”。如果要同步您的内容，请点触“Link Air”。
- 4 如果是“PIM 同步”，请选择您要同步的项目，然后点触“立即同步”。
- 5 如果是“Link Air”，请选择您要同步的项目，然后点触“立即同步”。


# 电脑同步

您可以同步电脑和手机，以确保所有重要详情和日期匹配。您还可以对文件做好备份。

## 在计算机上安装 LG PC 套件

- 1 从主屏中点触 ，然后点触**连接**。
- 2 选择 **USB 连接模式**，然后点触 **PC 套件**。
- 3 通过 USB 数据线连接手机和电脑，等待片刻。此时将显示安装指南信息。
- 4 根据屏幕说明完成 LG PC 套件安装程序向导。
- 5 安装完成后，桌面上将显示 LG PC 套件图标。

## 连接手机和电脑

- 1 从主屏点触 ，然后点触**连接**。
- 2 选择 **USB 连接模式**。
- 3 点触 **PC 套件**。
- 4 通过 USB 数据线连接手机和电脑，等待片刻。PC 套件自动运行。

## 备份并恢复手机上的信息。

- 1 如上所述，将手机连接到电脑。
- 2 单击**备份**图标，选择**备份**或**恢复**。

- 3 标记您要备份或恢复的内容。选择您要保存备份信息的位置，或恢复信息的位置。单击**开始**图标。
- 4 将备份或保存您的信息。

## 在电脑上查看手机文件

- 1 如上所述，将手机连接到电脑。
- 2 单击管理照片、视频或音乐图标。
- 3 您在手机上保存的图像、音频和视频文件将显示在“LG 手机”文件夹屏幕中。

**提示!** 在电脑中查看手机内容有助于您整理不再需要的文件。

## 同步电话本

- 1 将手机连接到电脑。
- 2 单击**电话本**图标。
- 3 单击同步电话本按钮，您的电脑现在将导入并显示手机上保存的所有联系人。
- 4 单击**菜单**，然后选择**导出**。现在，您可以选择目标以及要保存电话本的位置。  
右键单击联系人，然后选择**全部选择**。

# 电脑同步


## 同步信息

- 1 将手机连接到电脑。
- 2 单击**信息**图标。
- 3 所有手机信息将显示在屏幕上的文件夹中。

## 将手机用作音乐同步设备

您的手机可以用作音乐同步设备，仅用于同步音乐文件。

使用 Windows Media Player 10/11 可执行音乐同步，同时支持手机内存和外部存储卡。

- 1 断开手机与电脑的连接。
- 2 从主屏点触 ，然后点触**连接**。
- 3 选择 **USB 连接模式**。
- 4 点触**音乐同步**。
- 5 将手机连接到电脑。手机将显示：**已连接**。

## DivX Converter

DivX 将电脑中的媒体文件转换为您可以上传到手机并可在手机中查看的文件格式。

安装后，请从电脑的程序文件中选择 **DivX**，然后，依次选择 **DivX Converter** 和 **Converter**。

使用应用程序中的箭头将转换格式更改为“手机”。如果右键单击应

用程序框，选择**首选项**，您可以更改保存转换文件的位置。

将文件拖动到应用程序中以进行初始分析。然后，选择**转换**以开始转换流程。此流程完成后，将显示“转换完成”弹出信息。

*ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.*

*ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.*

Pat. 7,295,673

# OSP (On Screen Phone)

使用 OSP 功能，您可以从电脑查看您的手机。您可以从电脑显示器控制手机，就像在手机上所做的一样。

## 在电脑上安装 OSP

在电脑上安装 LG PC 套件时，OSP 会自动安装

## 启动 OSP

在电脑上单击 ，或“开始”>“程序”>“LG OSP”

## 连接手机和电脑

### 通过 USB 数据线


- 1 单击“连接向导”。
- 2 选择“数据线连接”，然后单击“下一步”。
- 3 通过 USB 数据线连接手机和电脑。
- 4 选择“下一步”。
- 5 将手机密码输入电脑（默认值为“0000”）

### 通过蓝牙

- 1 确保已打开蓝牙并在电脑和手机上均可见。
- 2 选择“蓝牙连接”，然后单击“下一步”
- 3 在搜索到的手机中选择您的手机，然后单击“下一步”

- 4 将 PIN 码输入电脑，然后单击“下一步”。
- 5 在确认信息中单击“是”。
- 6 将 PIN 码输入到手机，然后单击“确定”。
- 7 将手机密码输入到电脑，然后单击“确定”。

## 断开手机与电脑的连接

如果要断开手机与电脑的连接，请单击 



# OSP (On Screen Phone)

## 控制手机

可以使用 OSP 控制手机。如果在 OSP 主屏中用鼠标单击某个菜单，该菜单将在手机中运行，就像您在手机上选择菜单一样。

例如，如果要使用 OSP 发送信息，请在 OSP 主菜单的“通信”选项卡中单击“信息”，然后单击“写信息”。

您可以通过鼠标单击或用电脑键盘输入字符。

如果要使用鼠标键入字符，请单击您要输入的字符。

如果要使用手机键盘，请在您的电脑键盘上键入字符。

写完信息后，单击“发送短信”。

## 在手机和电脑之间传输文件

### 将文件从电脑传输到手机

- 1 从电脑选择要传输的文件，然后将文件拖放到 OSP 屏幕。

### 将文件从手机传输到电脑


- 1 从 OSP 屏幕娱乐选项卡的媒体相册中选择要传输的文件，然后单击鼠标右键并选择保存到 PC。

## 在手机上编辑文件

- 1 从 OSP 屏幕娱乐选项卡的“媒体相册”中选择要编辑的文件，然后单击鼠标右键并选择“编辑”。
- 2 您可以使用关联的应用程序编辑文件。
- 3 完成编辑文件时，系统会将其传回您的手机。

## 使用 OSP 通知

OSP 功能提供弹出消息，以通知您有关手机事件：闹钟、信息、来电等等。

- 1 在 OSP 屏幕中选择 
- 2 选择“使用弹出信息提醒我”

**备注：**使用 OSP 功能时，手机的反应会变慢。

# 网络


## 访问网页

- 1 点触**浏览器**。
- 2 要进入浏览器主页，请选择**浏览器**。或选择**输入 URL** 并键入 URL，然后在屏幕的左上角选择**确定**。

**备注：**连接此服务并下载内容时，可能会产生额外费用。请咨询您的网络服务提供商以了解数据收费情况。

## 添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。


- 1 点触**浏览器**。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要添加新书签，请点触**新建书签**。在相应的字段框中输入书签名称和 URL。
- 4 在屏幕的左上角点触 。现在，您添加的书签将显示在书签列表中。
- 5 要访问书签，只需点触书签旁边的“连接”图标或点触书签标题，然后点触**开始**。您将连接到书签。

## 使用 RSS 阅读器

RSS（简易供稿）是一种网络订阅源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订阅源、网络订阅源或频道，它包含相关网站的内容摘要或完整文本。RSS 使人们可以以主动方式随时关注其感兴趣的网站。这相比手动查看这些网站要轻松很多。

用户订阅源的方式：将订阅源的链接输入阅读器，或单击浏览器中的 RSS 图标即可开始订阅流程。阅读器将定期检查用户订阅的源以查看新内容并下载找到的任何更新。

## 保存页面

- 1 如上所述，访问所需网页。
- 2 点触  并选择**保存此页面**。
- 3 为网页输入一个名称，便于您轻松识别。
- 4 点触**保存**。

## 访问保存的网页

在**实用工具**选项卡中点触**浏览器**，然后选择**已保存页面**。您可以在此查看已保存的页面。

# 网络

## 查看手机历史记录

在**实用工具**选项卡中点触**浏览器**，然后选择**手机历史记录**。

## 将手机用作调制解调器

GD880 可以同时用作电脑的调制解调器，使您在无法使用有线连接时仍可访问电子邮件和互联网。您可以使用 USB 数据线或蓝牙。

### 使用 USB 数据线：

- 1 确保 PC 上已经安装了 LG PC 套件。
- 2 用前面所示的 USB 数据线连接 GD880 和您的电脑并启动 LG PC 套件软件。
- 3 按一下电脑上的**手电互联网连接 (工具)**。然后，按一下**新增并可连接至互联网的设定档**并储存相关值。
- 4 将会在电脑屏幕上显示所建立的设定。选择该设定档并按一下**连接**。  
电脑将通过 GD880 连接。


### 使用蓝牙：

- 1 确保已**打开**蓝牙并在电脑和 GD880 上**均可见**。
- 2 配对电脑和 GD880，此时需要通过码才能建立连接。
- 3 使用 LG PC 套件上的**连接向导**创建一个活动的蓝牙连接。
- 4 单击电脑上的 **Internet Kit**。然后，单击**新建**按钮。
- 5 选择 **LG Mobile USB 调制解调器**，然后选择**确定**。此时将在屏幕上打开。
- 6 写入可连接到互联网的**配置**，然后保存值。
- 7 您创建的配置将显示在电脑屏幕上。选择并单击**连接**。  
电脑将通过 GD880 连接。

# 设置

## 个性化情景模式

使用设置菜单，您可以个性化每种情景模式。

- 1 从主屏点触 ，然后点触**情景模式**。
- 2 选择您要编辑的情景模式。
- 3 随后，您可以更改列表中可用的所有声音和提示选项，包括**铃声、音量、信息提示音**设置等。

## 更改显示设置

从主屏点触 ，然后点触**显示设置**。选择您要编辑的屏幕设置。

**备注：**背景灯打开时间越长，电池耗电量就越大。这可能导致需要更频繁地为手机充电。

## 更改设备设置

您可以根据自己的需要，随心所欲地对 GD880 进行调节。

从主屏点触 ，点触**设备设置**，然后从以下列表中选择。

### 设置

**日期和时间** - 调整日期和时间设置，或者选择自动更新时间或使用夏令时选项。

**省电** - 向左滑动开关，以便将省电设置设为打开/关闭或仅夜间。

**语言** - 更改 GD880 的显示语言。

**自动键盘锁** - 在主屏中自动锁定键盘。您可以选择自动锁定的时间。

**安全性** - 调整您的安全设置，包括 PIN 码和手机锁。

**内存信息** - 有关详细信息，请参阅**使用内存管理器**。

**主存储器设置** - 选择项目的首选保存位置是手机内存还是外部存储器。

**重置设置** - 将所有设置重设为出厂默认值。

**设备信息** - 显示设备信息。您可以使用此菜单通过网络升级您的软件。


**装置指南** - 可显示使用每个功能（桌面、Widget 下载、指示器、功能表、通讯录、SNS、状态指示、手绘捷径解锁）的方式。

## 更改触摸设置

您可以为触摸音激活声音或振动。

# 设置

## 更改连接设置

网络运营商已为您设置好连接设置，因此，您开机即可使用手机。要更改任意设置，请使用此菜单：从主屏点触 ，然后点触**连接**。

### 网络选择

**选择网络** - 如果设为**自动**，GD880 将自动搜索网络（自动、UMTS 2100 和 GSM、仅限 GSM 卡）并向网络注册手机。为了得到最佳的服务和质量，建议选择此设置。

如果选择**手动**，所有当前可用网络都会显示，您可以从中选择一个进行注册。

**网络模式** - 您可以在**选择网络**菜单中设置网络类型，以搜索何时搜索网络。

**首选列表** - 您可以添加要连接的首选网络。如果是自动搜索网络，则只需从网络列表选择一个。如果不是，则可以手动添加新网络。

**互联网网络设定** - 此菜单显示**互联网网络设定**。您可能无法删除或编辑对应于您的国家/地区的默认配置。但是您可以使用此菜单添加新的网络设定。

**接入点** - 网络运营商已保存此信息。您可以使用此菜单添加新的接入点。

**备份** - 您可以向运营商服务器发送信息，或者接收来自运营商服务器的信息。

**备注**：此服务并非适用于所有国家/地区。有关详细信息，请与您的服务提供商联系。

**本地网络** - 您可以通过**本地网络**选择和共享内容。请小心披露个人信息。

**GPS 类型** - 选择 GPS 类型：**辅助 GPS** 或**独立型**。

**DivX VOD 注册** - 此菜单用于生成 DivX VOD 注册码。请访问 <http://vod.divx.com> 注册和获取技术支持。

**USB 连接模式** - 从选项中选择一个数据服务并使用 LG PC 套件软件同步 GD880 以复制手机中的文件。有关同步的详细信息，请参阅**电脑同步**。如果通过 Windows Media Player 使用**音乐同步**，请在此菜单中选择**音乐同步**。**音乐同步**仅可用于音乐内容。

**分组数据连接** - 选择设备何时连接到网络以传输分组数据。

**浏览器设置** - 设置与浏览器相关的值（**网络设定、外观设置、缓存/Cookie、安全性或重设设置**）。

**流媒体设置** - 网络运营商已保存此信息。您可以使用此菜单添加新的网络设定。

**Java 设置** - 允许您为通过 Java 程序进行的连接设置网络设定并查看证书。

**数据漫游** - 允许您在漫游区域管理多媒体/小工具/电子邮件/PIM/Link Air 的数据接收情况。

使用数据漫游功能，您可以屏蔽数据应用服务，以免在漫游区域产生数据应用费用。

默认设置为关，任何使用数据的应用均被屏蔽。激活数据漫游功能时，您可以下载或同步数据。

## 使用内存管理器

GD880 有三种可用存储器：手机、SIM 卡和外部存储卡。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

在点触**设备设置**，然后点触**内存信息**。

**内部共用内存** - 查看内部共用内存中的可用存储空间。

**内部多媒体内存** - 查看内部多媒体内存中的可用存储空间。

**内部预留内存** - 查看手机目前针对以下各项的可用内存：短信、电话本、日历、任务列表、备忘录、闹钟、通话记录、书签及其它。

**USIM 卡内存** - 查看 USIM 卡的可用内存。

**外部存储器** - 查看外部存储卡的可用内存（您可能需要单独购买存储卡）。

## 使用蓝牙发送和接收文件

### 发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 选择**发送**。  
选择**蓝牙**。
- 3 如果已配对**蓝牙**设备，GD880 将不会自动搜索以配对其它**蓝牙**设备。否则，GD880 将搜索范围内其它启用了**蓝牙**的设备。
- 4 选择您要向其发送文件的设备。
- 5 您的文件将被发送。

**提示！** 检查进度栏以确保文件正在发送。

# 设置

## 接收文件：

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详细信息，请参阅下面的**更改蓝牙设置**。
- 2 **手机**会提示您一条信息，是否接收来自其他发件人的文件。点触**是**以接收文件。
- 3 您可以查看文件的保存位置。对于图像文件，您可以选择**查看文件**或**转至我的素材**。文件通常保存在**我的文档**中的相应文件夹。

## 更改蓝牙设置

点触**蓝牙**，然后选择 。

### 进行更改：

**我的设备信息** - 查看设备有关蓝牙的信息。

**我的设备可见性** - 选择**可见**、**隐藏**或**可见 1 分钟**。

**我的设备名称** - 查看您的设备名称。

**我的蓝牙地址** - 查看您的蓝牙地址。

**支持的服务** - 选择在其它关联服务中如何使用蓝牙。

**远程 SIM 卡模式开/关** - 打开或关闭。

## 与其它蓝牙设备配对

将您的 GD880 与其它设备配对，您可以设置受通行码保护的连接。

- 1 查看蓝牙是否为**开且可见**。您可以通过点触  更改您的可见性。
- 2 点触**新设备**。
- 3 GD880 将搜索设备。当搜索完成后，**刷新**图标将出现在屏幕的左上角。
- 4 选择您要配对的设备，然后在确认信息中单击“是”。如果密钥与您尝试配对的设备不匹配，您将需要输入通行码。
- 5 点触**始终询问**或**始终允许**，设备即会配对。

## 使用蓝牙耳机

- 1 查看蓝牙是否为**开且可见**。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 点触**始终询问**或**始终允许**。GD880 将自动切换到“耳机”情景模式。

## Wi-Fi

无线管理器允许您通过设备上的 Wi-Fi（无线局域网）管理互联网连接。

它能允许手机连接本地无线网络，或者无线访问互联网。Wi-Fi 比蓝牙无线技术速度更快且连接范围更广，可用于快速收发电子邮件和浏览互联网。

**备注：**GD880 支持 WEP 和 WPA-PSK/2 加密，但不支持 EAP 或 WPS 加密。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。

如果未设置加密，不会显示此弹出窗口。您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

## 软件升级

LG 手机软件升级计划

有关安装和使用此计划的详细信息，请访问 <http://www.lgmobile.com>

使用此功能，无需访问服务中心，您即可快速方便地将软件升级到 Internet 上的最新版本。由于手机软件升级计划要求用户注意升级过程的持续时间，因此，在继续执行操作之前，请留意每一个步骤中

出现的任何说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。对于升级过程中造成的任何数据丢失，制造商不承担任何责任，为了安全起见，建议您事先记录下任何重要信息。

# 配件

这些配件随 GD880 提供。

## 充电器



## 数据线



## 电池



## 立体声 耳机



## 备注：

- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

# 技术参数

## 标准

产品名称: GD880

System: GSM 850 / E-GSM 900 /  
DCS 1800 / PCS 1900 / WCDMA

## 外部环境

最高温度: +55° C (放电),  
+45° C (充电)

最低温度: -10° C

# Declaration of Conformity



## Supplier's Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

### Model Name

GD880

### Trade Name

LG

CE 0168 !

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2006  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Seung Hyoun, Ji / Director

Issued Date

09.Feb. 2010

Signature of representative



Some of the contents in this manual may differ from your phone depending on the phone software or your service provider.



## GD880 User Guide

Congratulations on your purchase of the advanced and compact GD880 phone by LG, designed to operate with the latest digital mobile communication technology.

# Contents

Guidelines for safe and efficient use....	7
Getting to know your phone .....	12
Open view .....	13
Installing the SIM and battery ....	14
Charging your phone.....	15
Memory card.....	16
Using your touch screen.....	17
Touch screen tips .....	17
Control the touch screen .....	17
Your home screen .....	18
You can add favourite menus to the main menu .....	18
Quick keys.....	19
Calls .....	20
Making a call.....	20
Making a call from your contacts...	20
Answering and rejecting a call.....	20
In-call options .....	21
Speed dialling .....	22
Making a second call .....	22
Viewing your call logs .....	22
Using call divert.....	22
Using call barring.....	23
Using Excuse message .....	23
Changing the common call setting .....	23
Changing the Video call settings ...	24
Call costs .....	24
Call durations .....	24
Data volume .....	24
Contacts.....	25
Searching for a contact.....	25
Adding a new contact.....	25
Creating a group .....	25
Changing your contact settings....	26
Viewing information.....	26
Importing friends from Social network.....	27
Messaging.....	28
Messaging .....	28
Sending a message .....	28
Entering text.....	28
T9 mode .....	28
Using templates .....	28
Using emoticons .....	28
Using signatures.....	29
Changing your text message settings.....	29

# Contents

Changing your multimedia message settings .....	29	Setting a photo as wallpaper.....	40
Changing your other settings .....	30	Editing your photos .....	41
Setting up your e-mail .....	30	<b>Multimedia.....</b>	<b>42</b>
Microsoft Exchange e-mail account.....	31	Pictures .....	42
Retrieving your e-mails.....	31	Sending a photo.....	42
Sending an e-mail using your new account.....	31	Using an image.....	42
Changing your e-mail settings.....	31	Printing an image .....	42
<b>Camera .....</b>	<b>33</b>	Moving or copying an image .....	42
Getting to know the viewfinder .....	33	Sounds .....	43
Taking a quick photo .....	34	Using a sound .....	43
After taking a photo.....	34	Videos .....	43
Using the advanced settings.....	35	Watching a video .....	43
<b>Video camera .....</b>	<b>37</b>	Sending a video clip .....	43
Getting to know the viewfinder .....	37	Flash contents.....	43
Making a quick video .....	38	Documents.....	43
After making a video .....	38	Other content.....	43
Using the advanced settings.....	39	Games .....	44
<b>Your photos and videos .....</b>	<b>40</b>	Playing a game .....	44
Viewing your photos and videos ...	40	Transferring a file to your phone....	44
Capturing an image from a video..	40	Music .....	44
Viewing your photos as a slide show .....	40	Transferring music to your phone .	45
		Playing a song.....	45
		FM Radio .....	45

<b>Organiser</b> .....	46	Synchronising your messages .....	51
SNS .....	46	Using your phone as a Music Sync device .....	51
Facebook.....	46	DivX Converter.....	51
Twitter.....	46	<b>OSP (On Screen Phone)</b> .....	53
Settings.....	46	Installing OSP on your computer... 53	
Adding an event to your calendar. 46		Starting OSP.....	53
Adding an item to your to do list... 46		Connecting your phone and PC.... 53	
Adding a memo.....	47	Disconnecting your phone from your PC .....	53
Setting your alarm.....	47	Controlling your phone.....	54
Recording a sound or voice.....	47	Transferring file between your phone and PC.....	54
Using your calculator.....	47	Editing file of your phone .....	54
Converting a unit.....	48	Using OSP Notification.....	54
Adding a city to your World clock.. 48		<b>The web</b> .....	55
Using the stopwatch .....	48	Accessing the web.....	55
LG Air Sync.....	48	Adding and accessing your bookmarks .....	55
<b>PC Sync</b> .....	50	Using RSS reader .....	55
Installing LG PC Suite on your computer .....	50	Saving a page .....	56
Connecting your phone and PC.....	50	Accessing a saved page .....	56
Backing up and restoring the information on your phone .....	50	Viewing your Mobile history.....	56
Viewing phone files on your PC.....	50	Using your phone as a modem.....	56
Synchronising your contacts .....	51		

# Contents

Settings .....	58
Personalising your profiles .....	58
Changing your Display settings .....	58
Changing your Device settings .....	58
Changing your touch settings .....	59
Changing your Connectivity settings .....	59
Using memory manager .....	61
Sending and receiving your files using Bluetooth .....	61
Changing your Bluetooth settings	62
Pairing with another Bluetooth device .....	62
Using a Bluetooth headset .....	62
Wi-Fi .....	63
Software Upgrade .....	63
Accessories .....	64
Technical data .....	65

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GD880 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.23 W/kg (10 g) and when worn on the body is 1.10 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

# Guidelines for safe and efficient use

- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

# Guidelines for safe and efficient use

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls



Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.


- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Getting to know your phone

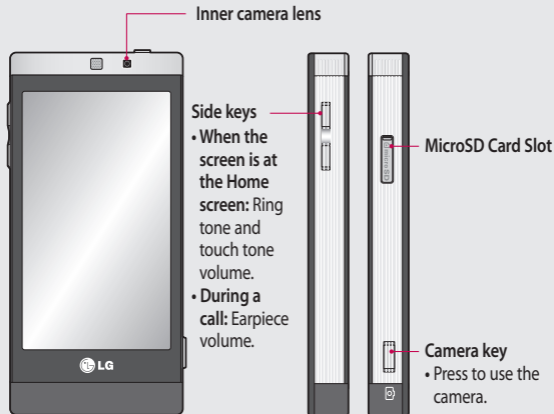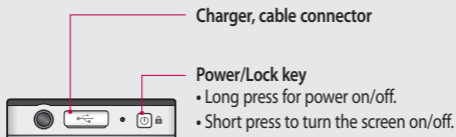

**⚠ WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

## Open view

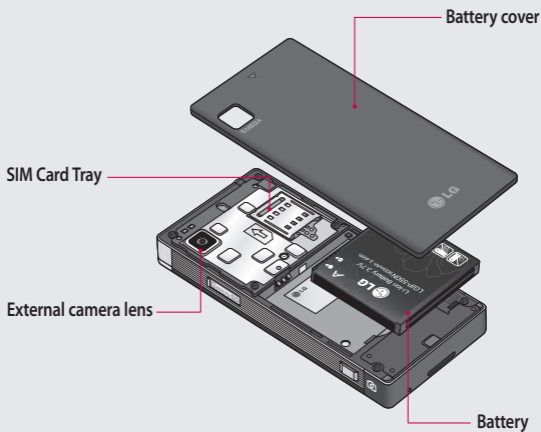

# Installing the SIM and battery


## 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and pull it away.



## 2 Install the SIM card


Slide the SIM card into the SIM card holder, making sure that the gold contact area on the card is facing down. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it out gently.

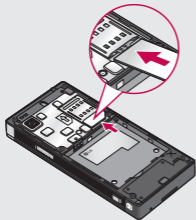

**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the battery


Insert the right side of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the left side of the battery down until it clicks into place.

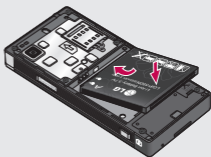

## Charging your phone

Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable to the phone and plug it into a power socket. Your GD880 must be charged until the "Battery full" message appears on the screen.

**NOTE:** The battery must be fully charged initially to improve battery life. Disregard the first "Battery full" message and keep the phone on charge overnight.

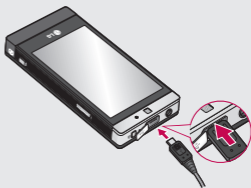



# Memory card

## Installing a memory card

You can expand your phone's memory by using a MicroSD memory card.


**NOTE:** A memory card is an optional accessory.

- 1 Slide the slot cover down.
- 2 Put the microSD card into the slot. Make sure the gold contact area is facing down.
- 3 Slide the slot cover up.

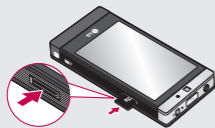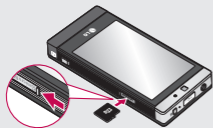

## Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can use it.

- 1 From the Home screen select , then **Device settings**.
- 2 Touch **Memory info** and scroll down to choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.

# Using your touch screen

## Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GD880 is not in use, it will return to the lock screen.

## Control the touch screen

The controls on the GD880 touch screen change dynamically depending on the task.

### Opening Applications

To open any application, simply touch its icon.



### Scrolling

Drag from side to side to scroll. On some screens, such as the call history list, you can also scroll up or down.

# Your home screen

From here you can access all the menu options, make a quick call, view the status of your phone and much more.

## You can add favourite menus to the main menu

- 1 Touch  from the home screen.
- 2 If you want to remove a favourite menu, touch  on the upper right of the icon. If you want to add favourite menus to the main menu, touch **Add** on the bottom right of the screen.



- 3 Once you touch **Add**, you can choose between **Widget**, **Bookmarks** or **Shortcut** (If you do not want to add, touch **Cancel**).
- 4 Select a menu you want to add by touching the Star mark on the right side of the menu. The menu will appear on the screen when you return to the previous screen.
- 5 When you are finished, touch **OK**.



# Your home screen

## Quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact into the Search field at the top of the screen using the touchpad. You can also create new contacts, edit existing ones, etc.






Touch to access the **Messaging** menu. From here you can create a new SMS or MMS or view your message folder.




Touch to open the full **Top menu**

# Calls


## Making a call

- 1 Touch  from the home screen to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call, but if you want to initiate a Video call, touch  then select **Make video call**.
- 4 To end the call, press End call on the bottom of the screen.

**TIP!** To enter + for making an international call, press and hold .

**TIP!** Press the power key to lock the touchscreen to prevent making calls by mistake.

## Making a call from your contacts

- 1 From the home screen touch  to open your **Contacts**.
- 2 Tap the Search field box on the top of the screen and use the keypad to enter the first few letters of the contact you want to call.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or you can touch the contact name and select the number to use if there is more than one for that contact.


## Answering and rejecting a call

When your phone rings, touch **Answer** to answer the call.

To mute the ringing, touch **Silent**.

This is useful if you have forgotten to change your profile to **Silent** for a meeting. Touch **Reject** to reject an incoming call.


## In-call options

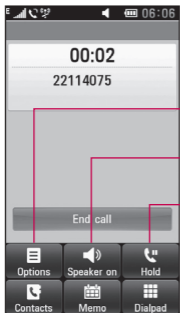



**Options** - Touch  to bring up a list of further in-call options.

**Speaker** - Touch  to turn the speaker phone on.

**Hold** - Touch  to put a call on hold.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.

Touch  to add memo during a call.


Touch  to search your contacts during a call.

**TIP!** To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.


# Calls


## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Phonebook** and touch  and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
- 3 Your **Contact** will open. Select the contact you want to assign to that number by touching the contact's phone number once. To find a contact, tap the **Search** field box and enter the first letter of the contact's name.

## Making a second call

- 1 During your initial call, touch **Dialpad** and type the number you want to call.
- 2 Touch **Voice call** to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.

- 5 To end one or both calls, press  and select **End**.

**NOTE:** You will be charged for each call you make.

## Viewing your call logs

Touch **Logs** in the **Main** menu.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

## Using call divert

- 1 Touch **Call settings** in the **Main** menu.
- 2 Touch **Call divert**.
- 3 Choose between **Voice calls** and **Video calls**. You can choose to divert all calls, calls when the line is busy, when there is no answer or when you cannot be reached.
- 4 Touch **Activate**.
- 5 Choose **To voicemail centre** or **To other number** to enter the new divert number.
- 6 Touch **OK** when you have finished entering the number.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

## Using call barring


- 1 Touch **Call settings** in the **Main menu**.
- 2 Touch **Call barring**.
- 3 Choose **Voice calls** or **Video calls**. You can turn off all call barring by touching **Deactivate all** from the **Call barring** menu.
- 4 Choose any of the five options:
  - All outgoing calls**
  - Outgoing international**
  - Outgoing international calls except home country**
  - All incoming**
  - Incoming when abroad**Touch **Activate**.
- 5 Enter the call barring password. Please check with your network operator about this service.

**TIP!** Select **Fixed dial numbers Main menu** to turn on and compile a list of numbers that can be called from your phone.

## Using Excuse message

Before you reject an incoming call, you can use “**Excuse messages**” to send a message to explain why you do not receive an incoming call.

## Changing the common call setting

- 1 Touch **Call settings** in the **Main menu**.
- 2 Touch **Common settings**. From here you can adjust the settings for:
  - Call reject** - Slide the switch to the left to highlight the **Reject list**. You can touch the text box to choose all calls, calls from specific contacts or groups, calls from unregistered numbers (those not in your contacts) or calls with no caller ID. Touch  to change the setting.

# Calls

**Send my number** - Choose whether your number will be displayed when you call someone.

**Show SNS events** - Choose whether SNS events will be displayed or not.

**Auto redial** - Slide the switch left for **ON** or right for **OFF**.

**Minute minder** - Slide the switch left to **ON** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset or select **Handset** to answer a call by pressing a key on the handset.

**Save new number** - Choose whether the **Save new number** function is **ON** or not. Slide the switch left for **ON** or right for **OFF**.

**Voice clarity** - Choose whether the **Voice clarity** function is **ON** or not. Slide the switch left for **ON** or right for **OFF**.

## Changing the Video call settings

1 Touch **Call settings**.

2 Touch **Video call settings**.

From here you can adjust the settings for:

**Use private image** - Choose whether to use a private image for video calls.

**Private image** - Choose an image for video calls.

**Mirror** - Choose whether to use Mirror.

## Call costs

View the charges applied to your dialled numbers (this service is network-dependent and some operators cannot support it).

## Call durations

View the duration of all your dialled or received calls or both.



## Data volume

View the amount in kilobytes of all received or sent data or both.

# Contacts

## Searching for a contact


There are two ways to search for a contact:

- 1 Touch  from the home screen and then touch **Phonebook** or touch  from the home screen.
- 2 You see a list of contacts. Typing the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.



**TIP!** The alphabetical keypad is displayed once you tap the Name field.

## Adding a new contact

- 1 Touch **Phonebook** and touch **New**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to 5 different numbers per contact. Each entry is preset for **Mobile**, **Home**, **Office**, **Pager**, and **Fax**.
- 5 Add an email address.

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Colleagues**, **School** and **VIP**.
- 7 You can also add a **Ringtone**, **Vibration**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Birthday**, **Anniversary** and **Memo**.
- 8 Touch  to save the contact.

## Creating a group


- 1 Touch **Phonebook**. Touch the down arrow beside **Contacts** and then select **Groups**.
- 2 Touch **New group** or touch  and select **New group**.
- 3 Enter a name for your new group in **Group name** field. You can also assign a ringtone to the group.
- 4 Touch .

**NOTE:** If you delete a group, the contacts assigned to that group will not be lost. They will remain in your **Phonebook**.

# Contacts

## Changing your contact settings

You can adapt your contact settings to suit your own preferences.

1 Touch **Phonebook**, touch , scroll down and select **Contact settings**.

2 From here, you can adjust the following settings:

**Show keypad** - Choose whether the Keypad is displayed.

**Display name** - Choose the display order of the name.

**Synchronise contact** - Connect to your server to synchronise your contacts.

**Copy all** - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time or all at once.

**Move all** - This works the same way as Copy, but the contacts will only be saved to the location you've moved them to.

**Restore contacts** - Restore contacts to the Memory Card.

**Clear contacts** - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to erase your contacts.

**Memory info** - View information about available memory regarding **Handset**, **USIM** and **USIM e-mail**.


**Send all contacts via Bluetooth** - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

**Backup contacts** - Backup contacts to the Memory Card.

## Viewing information


1 Touch **Phonebook**, touch , scroll down and select **Information**.

From here you can view your **Service dial numbers**, your **Own numbers**, your **Memory info** (showing your memory usage) and **My profile**.

**TIP!** To add your own business card, select **My profile** and enter your details as you would for any contact. Touch  to finish.

## Importing friends from social networks

You can add your friend contact from your social network (Twitter or Facebook) to your phone using this menu.




- 1 Touch **Phonebook**, then touch  and select **Import friends from**.
- 2 Select **Twitter** or **Facebook**.
- 3 Enter your E-mail and Password and click **OK**.
- 4 Select the contact you want to add.
- 5 Select **Option** -> Save profile to contacts.


# Messaging

## Messaging

Your GD880 combines SMS and MMS into one intuitive and easy-to-use menu.


### Sending a message


- 1 Touch  from the home screen and then touch **Messaging** or touch  from the home screen.
- 2 Touch **Write message**,  and select **Insert** to add an image, video, sound, emoticon, etc.
- 3 Touch **To** to enter the recipient's number or open your contacts or favourites. You can add multiple contacts. When you are finished, touch the message box below to start composing the message text.
- 4 After entering the text, you can send the message by touching **Send SMS/Send MMS** at the top of the message.

 **WARNING:** If an image, video or sound is added to an SMS, it will be automatically converted to an MMS and you will be charged accordingly.

## Entering text

Touch  to turn on T9 mode.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Function keys enable you to change between capital and lowercase input or write a message in a full screen on the keypad, etc.

## T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

## Using templates

Create templates for the SMS and MMS messages you send most often. There are already some templates on the phone, which you can edit.

## Using emoticons


Liven up your messages using emoticons. There are some commonly used emoticons already on your phone.

You can add a new emoticon by touching **New emoticon**.

## Using signatures

Create signatures for the SMS and MMS messages you send most often. When writing a new signature, you can enter Signature from Insert->More in option menu.

## Changing your text message settings

Touch **Messaging**, touch  and select **Settings**. Select **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages were delivered.


**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore the data charges.

**Send long text as** - Choose to send long messages as **Multiple SMS** or **MMS**.

## Changing your multimedia message settings

Touch **Messaging**. Touch  and select **Settings**, then select **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose between **Home network** or **Roaming network**. If you then choose **Manual**, you will receive only notifications of MMS and you can decide whether to download them in full.

**Delivery report** - Choose to request and/or allow a delivery report.

**Read reply** - Choose to request and/or allow a reply.

**Priority** - Choose the priority level of your MMS (**Low priority, Normal priority, High priority**).

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on the screen.


**Creation mode** - Choose your message mode (**Restricted, Warning, Free**).

# Messaging

**Delivery time** - Choose how long to wait before a message is delivered.

**Multimedia message centre** - Choose one from the list or add a new message centre.

## Changing your other settings

Touch **Messaging**. Touch  and select **Settings**.

**Videomail/Voicemail** - Touch **New profile** to add a new Videomail/Voicemail service. Contact your network operator for more information about the service they provide.


**Service message** - Choose to receive or block service messages. You can also set your message security by creating lists of trusted and non-trusted senders in the **Service security** option.

**Save sent message** - Choose whether to save sent messages.


**Info. service** - Choose whether to turn Cell broadcast on/off and select your channels and languages.

**Signatures** - Create, edit or delete **Signatures**.

## Setting up your e-mail

Touch  from the home screen, scroll to the right and then touch **E-mail**.

If the email account is not set up, touch **Microsoft Exchange, etc.**

If the email account is set up in your phone and you want to add a new email account, touch  and select **New e-mail account**.

**E-mail address** - Enter the email address.

**Password** - Enter the account password

**Mailbox type** - Enter the mailbox type: **IMAP4**, **POP3** or **PUSH**. These types depend on the service provider.

**User name** - Enter the account user name.

**Incoming server** - Enter the incoming email server address.

**Outgoing server** - Enter the outgoing email server address.

**SMTP authentication** - Choose security settings for the outgoing mail server.

**Account name** - How the account will appear in the list of accounts in your E-mail folder.

Once the account is set up, it will appear in the accounts list in your Email folder.

## Microsoft Exchange e-mail account

**E-mail address** – Enter the account email address.

**Server address** – Enter the email server address.

**Domain** – Enter the account domain.

**User name** - Enter the account user name.

**Password** - Enter the account password.

**Sync items** - Choose whether to use Sync items (**Contacts, Schedules, Tasks**).

## Retrieving your e-mails

You can automatically or manually check your account for new emails. To check manually:


- 1 Touch **E-mail**.
- 2 Touch the account you want to use.

- 3 Choose **Retrieve new**.

## Sending an e-mail using your new account

- 1 Touch **Write e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send e-mail** and your email will be sent.

## Changing your e-mail settings

- 1 Touch **E-mail** in the **Communications** tab.
- 2 Touch  and select **E-mail settings**, then you can change the following settings:

**E-mail account** - Select an email account

**Allow reply e-mail** - Choose to allow the sending of read confirmation messages.

**Request reply e-mail** - Choose whether to request read confirmation messages.

**Include original message** - Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

# Messaging

**Auto retrieval while...** - Choose whether to retrieve your messages automatically when abroad (roaming).

**New e-mail notification** - Choose whether to be alerted to new emails.

**Signature** - Create an email signature.

**Priority** - Choose the priority level of your email messages.

**Maximum receive size** - Select the maximum receive size: **100KB, 200KB, 300KB, 500KB, 1MB, 2MB, 2.2MB.**

# Camera

## Getting to know the viewfinder

**Zoom** - zoom in or zoom out. You can also zoom in or out by pressing the Side keys of the phone.

**Exposure** - A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.



**Back**

**Camera mode**

**Video mode** - Slide down this icon to switch to video mode.



**Gallery** - This enables you to access your saved photos from within the camera mode. Simply touch and your gallery will appear on the screen.

**Settings** - Touch this icon to open the settings menu. See **Using the advanced settings**.

**Macro** - Switch on take a close up shot

# Camera

## Taking a quick photo

- 1 Press the  key on the right side of the phone.
- 2 When the camera is focused on your subject, touch the  on the right-centre of the screen to take a photo. You can also press the Camera key on the side of the phone firmly.


**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.


## After taking a photo


Your captured photo will appear on the screen. The image name is shown on the bottom of the screen with four icons on the right side.

 Touch to send the photo as a **Message, E-mail, Bluetooth**.


**NOTE:** Additional cost may occur when MMS are downloaded when roaming.


 Touch to use the image as **Wallpaper, Lock screen, Contact, Start-up, Shut down, Outgoing call or Incoming call** screens.

 Touch to edit the image using various tools.

 Touch to return to the viewfinder.


 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to view a gallery of your saved photos.



## Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

**Size** - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the seven numerical options: **5M(2560x1920)**, **3M(2048x1536)**, **2M(1600x1200)**, **1M(1280x960)**, **Homescreen**, **VGA(640x480)**, **QVGA(320x240)**.

**Scene mode** - Set the camera to adjust to the environment. Choose from **Auto**, **Night**, **Landscape**, **Portrait** or **Sport**.

**ISO** - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can't use the flash. Select the ISO value from **Auto**, **ISO 800**, **ISO 400**, **ISO 200** or **ISO 100**.

**White balance** - Choose from **Auto**, **Incandescent**, **Fluorescent**, **Sunny** or **Cloudy**.

**Colour Effect** - Choose a colour tone to apply to the photo you're taking.

There are six colour tone options: **Off**, **Sepia**, **Monochrome**, **Negative**, **Solarize** and **Blue**.

**Focus** - Select the way the camera will focus. Choose from **Auto focus**, **Manual focus** or **Face tracking**.

**Self-timer** - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **Off**, **3 seconds**, **5 seconds** or **10 seconds**.

**Shot mode** - Choose the shot mode from 9 options.

**Quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a photo will be, but the file size will increase.

**Show captured image** - Choose to view the picture with options after taking a photo.

**Shutter sound** - Select one of the three shutter sounds.

**Grid screen** - Choose from **Off**, **Simple cross** or **Trisection**.

**Geo-Tagging** - Choose whether to switch on the EXIF information for the photo to write GPS information.

# Camera


**Reset settings** - Restore all camera settings.

**Memory** - Choose whether to save your photos to the Handset memory or to the External memory.

**Swap cam** - Choose whether to use the inner camera or the outer camera.

# Video camera

## Getting to know the viewfinder

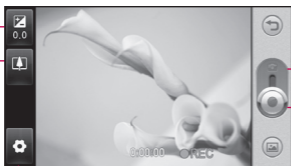

Back

Camera mode - Touch this icon to switch to camera mode.

Start recording

Gallery

**Settings** - Touch this icon to open the settings menu. See **Using the advanced settings**.

**Zoom** - zoom in or zoom out. You can also zoom in or out by pressing the Side keys of the phone.





**Exposure** - A low contrast video will appear foggy, whereas a high contrast video will appear much sharper.

# Video camera

## Making a quick video

- 1 Press the camera key on the right side of the phone.

**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens toward the subject of the video.
- 3 Press the camera key on the phone once to start recording. Or touch the red dot  on the screen.
- 4 **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the camera key on the phone again to stop recording.

## After making a video

A still image representing your captured video will appear on the screen. The name of the video will be shown on the bottom of the screen



Touch to send the video as a **Message or E-mail** or by **Bluetooth**.



Touch to use the video as a voice or video ringtone




Touch to play the video.



Touch to return to the viewfinder.



Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.


Touch  to shoot another video right away.



Touch to view a gallery of saved videos and images.



## Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Refer to the advanced settings for the Camera.

**Video size** - Select Video size: **VGA(640x480)**, **QVGA(320x240)**, **QCIF(176X144)**.


**Recording mode** - Set a duration limit for your video: **Normal**, **MMS**.

**Audio** - Choose whether to mute (record a video without sound) or to unmute to include the sound.

**Show recorded video** - Choose to view the video with options after taking a video.





# Your photos and videos

## Viewing your photos and videos


- 1 Scroll and touch **Gallery** in the **Main menu** or touch  on your camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

**TIP!** Flick left or right to view other photos or videos.

## Capturing an image from a video



- 1 Select the video you would like to capture an image from.
- 2 Touch the centre of the screen to bring up the play options, then touch  to pause the video on the frame you'd like to convert to an image and touch the upper left of the screen to open the  menu.
- 3 Touch  on the upper left of the screen and select **Capture**.
- 4 The image will appear on the screen, with its image name.
- 5 Touch  on the upper right of the screen to return to the video.

- 6 The image will be saved in your **Media album** folder and appear in the gallery.


 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

## Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos cannot be viewed as a slideshow.

- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.
- 3 You can open menus such as **Duration**, **Transition**, etc. by tapping  during the slide show.

## Setting a photo as wallpaper

- 1 Touch **Gallery** in the **Main menu**.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch  to open the menu.
- 4 Touch **Set as**, then **Home screen image**.

## Editing your photos

- 1 From the Gallery menu, choose the photo you'd like to edit, touch  on the upper left of the screen to open the menu and select **Edit**.
- 2 Touch the icons to alter your photo:



Select area.



Select a tool:



Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.



Adding texts to a picture. You can choose the text box and the colours of the box and text.



Decorate your photo with stamps.



Erase the drawings you made on the picture. You can choose the size of eraser to use.



Touch to open further effect options including **Rotate**.



Touch to apply the effect options to a photo.

**Adjustment** This helps to adjust a picture taken using Brightness or Contrast.



Touch to return to the gallery.



Save the changes you made to your phone. You can save the edited photo with another name.



Erase the editing you did on the photo.



Select to send the edited pictures as **Message, E-mail** or **Bluetooth**.





# Multimedia

You can store any multimedia files on your phone's memory to have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card frees space in your phone's memory. You can find these files in the **My stuff** menu in the **Main** menu.

## Pictures


**Images** contains a list of pictures including default images preloaded onto your phone, images downloaded by you and images taken on your phone's camera.

## Sending a photo


- 1 Touch  from the home screen, touch **My stuff** and select **Images**. Select the picture you want and touch .
- 2 Touch **Send Via** and choose **Message, E-mail, Bluetooth**.

## Using an image

You can choose images to use as wallpaper, for the lock screen and to identify callers.

- 1 Touch **My stuff** in the **Main** menu and select **Images**. Select the picture you want and touch .
- 2 Touch **Set as** and choose from: **Homescreen image, Lockscreen image, Contact image, Start up image, Shutdown image, Outgoing call image, Incoming call image**


## Printing an image

- 1 Touch **My stuff** and select **Image**. Select the picture you want and touch .
- 2 Touch **Print** then choose between **PictBridge** and **Bluetooth**.

**TIP!** You can print via Bluetooth or by connecting to a PictBridge compatible printer.

## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to free some space in one of the memory banks or to preserve your images.

- 1 Touch **My stuff** in the **Entertainment** tab, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark an image by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

## Sounds

**Sounds** contains a list of sounds including downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as ringtones.

### Using a sound

- 1 Touch **My stuff** in the **Main menu** and select **Sounds**.
- 2 Select a sound you want. It will begin to play.


## Videos

**Videos** shows a list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Touch **My stuff** in the **Main menu** and select **Videos**.
- 2 Select a video to play.

## Sending a video clip

- 1 Select a video.
- 2 Touch  and then touch **Send via**. Choose from **Message**, **E-mail** or **Bluetooth**.

## Flash contents

The **Flash contents** folder contains all downloaded SWF and SVG files.

- 1 Touch **My stuff** in the **Main menu** and select **Flash contents**.
- 2 Select the file you want to view.

## Documents

From the **Documents** menu, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

## Other content

**Other content** contains a list of files that are not pictures, sounds, videos, documents, games or applications.

# Multimedia

## Games

You can install new games on your phone to enjoy when you have spare time.

You can also access this using the **Games & Apps** menu in the **Main menu**.

## Playing a game

- 1 Touch **Games & Apps** in the **Entertainment** tab.
- 2 Choose a game to launch.

## Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your sync cable.

### To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.

- 4 The file should appear in your **Image** folder if it is an image file and in the **Sound** folder if it is a music file.

## Music

Your LG GD880 has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music**. From here, you can access a number of folders located at the top of the screen:

**NOTE:** The copyright of music files is protected by international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

**All tracks** - Contains all the songs you have on your phone except the preloaded default music.

**Favourite** - Contains the songs you saved as Favourites.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlist** - Contains all the playlists you have created.

## Transferring music to your phone

The easiest way to transfer music to your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent, you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Playing a song

- 1 Touch **Music**.
- 2 Select the song you want to play. The confirmation message appears when in **Silent** mode.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.
- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

## FM Radio

Your LG GD880 has an FM radio feature so you can tune in to your favourite stations to listen on the move.

- 1 Scroll and touch **FM radio** in the **Main menu**.
- 2 Tune in to a station or adjust the volume if desired.

**NOTE:** You will need to attach your headphones to listen to the radio. Insert them into the headphone socket next to the charger connector.

# Organiser

## SNS

A social network service focuses on building and reflecting a social network or social relationship among people who share interests and/or activities.


## Facebook

Facebook is a social networking website.


- 1 Touch  from the home screen and then touch **Facebook**.

## Twitter

Twitter is a free social networking and micro-blogging service.

- 1 Touch  from the home screen and then touch **Twitter**.



## Settings

- 1 Touch  from the home screen and then touch **SNS settings**.
- 2 Turn on Social networking. If you have an account related to social networking, the account is displayed. Touch the account, then touch **Import friends** to add your friend contact to your phone.



- 3 If you have no account, touch **New account**, then create your account.


**NOTE:** You will incur an extra cost by connecting to this service. Check the data charges with your network provider.

## Adding an event to your calendar




- 1 Touch  from the home screen and then touch **Organiser**.
- 2 Select the date you would like to add an event to.
- 3 Touch  and touch **New schedule** or simply touch **New schedule** at the bottom of the screen.

## Adding an item to your to do list



- 1 Touch  from the home screen and then touch **Tasks** in the **Main menu**.
- 2 Touch  and touch **New task** or simply touch **New task** at the top of the screen.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Normal** or **Low**.

- 4 Save your task by touching .

## Adding a memo

- 1 Touch  from the home screen and then touch **Memo** in the **Main menu**.
- 2 Touch  and then **New memo**. Or simply touch **New memo** at the top of the screen.
- 3 Type your memo and then touch .
- 4 Your memo will then appear on the screen in the memo application.


## Setting your alarm

- 1 Touch  from the home screen and then touch **Alarms**. **Widget alarm** should appear in the list as the default and you cannot delete it.
- 2 Touch  and then **New alarm**. Or simply touch **New alarm** at the top of the screen.


**NOTE:** You can set up to 11 alarms including **Widget alarm**.

**TIP!** Slide the alarm switch left to set it.


## Recording a sound or voice

- 1 Touch  from the home screen and then touch **Voice recorder** in the **Main menu**.
- 2 Choose where to save the recording: **Internal** or **External**.
- 3 Choose a recording mode: **Normal** or **MMS**.
- 4 Touch  to begin recording.
- 5 Touch  to pause recording.
- 6 Touch  to end recording.
- 7 Touch  to listen to your recording.
- 8 Touch  to adjust the volume.


## Using your calculator

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.



# Organiser

- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg**, **rad** etc.


## Converting a unit

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Unit converter**.
- 3 At the top of the screen, choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

## Adding a city to your World clock

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **World clock**.
- 3 Touch  and then **New city**. Or simply touch **New city** at the top of the screen.

## Using the stopwatch

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** at the bottom of the screen to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.

## LG Air Sync

Using this menu, you can synchronise your PIM data or other contents of your phone with your LG Air Sync account.


- 1 Touch **LG Air Sync** in the **Main menu**.
- 2 If you have no LG Air Sync account, please visit [www.lgairsync.com](http://www.lgairsync.com) to create your account. If you have an account, key in your ID and Password.
- 3 If you want to synchronise your PIM data, touch **PIM Sync**. If you want to synchronise your contents, touch **Link Air**.

- 4 In case of PIM Sync, select the items you want to synchronise, then touch Sync now.
- 5 In case of Link Air, select the items you want to synchronise, then touch Sync now.


# PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

## Installing LG PC Suite on your computer

- 1 From the home screen, touch  and touch **Connectivity**.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait a few moments. An installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

## Connecting your phone and PC

- 1 From the home screen, touch  and touch **Connectivity**.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait a few moments. PC Suite runs automatically.

## Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as described above.
- 2 Click on the **Backup** icon and select **Backup** or **Restore**.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to or restore information from. Click the **Start** icon.
- 4 Your information will be backed up or restored.

## Viewing phone files on your PC

- 1 Connect your phone to your PC as described above.
- 2 Click on the Manage Photos, Videos or music icon.
- 3 Images, audio files and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files you no longer need.

## Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Click Sync Contacts button your PC will now import and display all the contacts saved on your handset.
- 4 Click on **Menu** and select **Export**. You can now select the target where you want to save your contacts.


Right-click your contacts and then **Select All**.

## Synchronising your messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the screen.

## Using your phone as a Music Sync device

Your Phone can be used as a Music Sync device for Sync Music Files only. Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the home screen, touch  and touch **Connectivity**.
- 3 Select **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect the phone to your PC. Your phone will read: **Connected**.

## DivX Converter

DivX will convert media files on your PC to a format that lets you upload them and view them on your phone.

Once installed, select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select **Preferences**, you can change the

## PC Sync

location where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is complete a Conversion complete pop up will be displayed.

*ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.*

*ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.*

Pat. 7,295,673

# OSP (On Screen Phone)

Using the OSP feature, you can see your phone screen from your PC. You can control your phone from the PC Monitor just as you would on the phone.

## Installing OSP on your computer

When you install LG PC Suite on your computer, OSP is installed automatically

## Starting OSP

Click  on your computer or start> program> LG OSP

## Connecting your phone and PC

### By USB cable

- 1 Click 'Connection Wizard'.
- 2 Select 'Cable connection', then click Next.
- 3 Connect the handset and PC via USB cable.
- 4 Select Next.
- 5 Enter your phone password into the PC (default value is "0000")

### By Bluetooth

- 1 Ensure that Bluetooth is switched On and Visible for both your PC and your phone.

- 2 Select Bluetooth connection, then click Next
- 3 Select your phone among the searched phones, then click Next
- 4 Enter the PIN code into the PC, then click Next.
- 5 Click 'Yes' in the confirmation message.
- 6 Enter the PIN code into your phone, then click OK.
- 7 Enter your phone password into the PC, then click OK.

## Disconnecting your phone from your PC

If you want to disconnect your phone from your PC, click 



# OSP (On Screen Phone)

## Controlling your phone

You can control your phone using OSP. If you mouse-click a menu in the OSP main screen, the menu runs in your phone as if you had selected the menu on your phone.

For example, if you want to send a message using OSP, click Messaging in the Communication tab of the OSP main menu, then click Write message.

You can enter characters by mouse-clicking or using your PC keyboard.

If you want to use the mouse to key in characters, click the characters you want to enter.

If you want to use the keyboard, type in the characters on your keyboard.

Click Send SMS when you have finished writing the message.

## Transferring a file between your phone and PC

### Transfer a file from PC to Phone

- 1 Select the file you want to transfer from your PC, then drag and drop the file to the OSP Screen.

### Transfer a file from Phone to PC

- 1 Select the file you want to transfer from **Media album** in the **Entertainment** tab of the OSP screen, then click the right mouse button and select **Save to PC**.

### Editing a file on your phone

- 1 Select the file you want to edit from the Media album in the **Entertainment** tab of the OSP screen, then click the right mouse button and select Edit
- 2 You can edit the file using associated applications.
- 3 When you finish editing your file, it will be transmitted back to your phone.

### Using OSP Notification

The OSP feature gives you Popup messages with information about your phone events: **Alarm**, **Message**, **Incoming Call**, etc.

- 1 Select  in the OSP Screen
- 2 Select "Alerts me with Popup"

**NOTE:** When you use the OSP feature, your phone's reaction may be slow.

# The web

## Accessing the web


- 1 Touch **Browser** in the **Main menu**.
- 2 To go straight to the browser homepage, select **Browser**. Or select **Enter URL** and type in the URL, followed by **OK** in the upper left of the screen.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check with your network provider for data charges.

## Adding and accessing your bookmarks

For easy and fast access to your favourite web sites, you can add bookmarks and save web pages.

- 1 Touch **Browser** in the **Main menu**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **New bookmark**. Enter a name for your bookmark, followed by the URL in the corresponding field box.


- 4 Touch  on the upper left of the screen. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark, simply touch the Connect icon next to the bookmark or touch the bookmark title and then touch **Go**. You will be connected to your bookmark.

## Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

# The web

## Saving a page

- 1 Access your required web page as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the web page so you can easily recognise it.
- 4 Touch **Save**.

## Accessing a saved page

Touch **Browser** and select **Saved pages**. You can view the saved pages here.

## Viewing your Mobile history

Touch **Browser** and select **Mobile history**.

## Using your phone as a modem

Your GD880 can double as a modem for your PC, giving you email and internet access even when you can't connect by wire. You can use either the USB cable or Bluetooth.

### Using the USB cable:

- 1 Ensure that you have the LG PC Suite installed on your PC.
- 2 Connect your GD880 and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click **Internet Kit(Tools)** on your PC. Then click **New** button and select a profile that can connect to the Internet and save the values.
- 4 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GD880.

### Using Bluetooth:


- 1 Ensure that Bluetooth is switched **On** and **Visible** for both your PC and GD880.
- 2 Pair your PC and GD880 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **New button**.
- 5 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.

- 6 Write a profile that can connect to the Internet and save the values.
- 7 The profile that you create will appear on your PC screen. Select it and click **Connect**.  
Your PC will connect through your GD880.


# Settings

## Personalising your profiles

You can Personalise each profile setting using the settings menu.

- 1 Touch  from the home screen and then touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone, Volume, Message tone** settings and more.


## Changing your Display settings

Touch  from the home screen and then touch **Display settings**. Choose the screen setting you want to edit.

**NOTE:** The longer the backlight is on, the more battery power is used. This may result in your needing to charge your phone more often.

## Changing your Device settings

Enjoy the freedom of adapting the operation of your GD880 to your own style.

Touch  from the home screen, touch **Device settings** and then choose from the list below.

### Settings

**Date & Time** - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

**Power save** - Slide the switch left to set the power saving settings on/off or Night only.

**Languages** - Change the language of your GD880's display.

**Auto lock** - Lock the keypad automatically in the home screen. You can choose the time for the auto lock.

**Security** - Adjust your security settings including PIN codes and handset lock.

**Memory info** - See **Using memory manager** for more information.

**Primary storage settings** - Choose the location you prefer items to be saved between Handset memory and External memory.

**Reset settings** - Restores all settings to their factory defaults.

**Device information** - Shows the device information. You can upgrade your software via the Web using this menu.


**Device guide** - show how to use each functions ( Homescreen, Widget download, Indicator, Menu, Contacts, SNS, Browser, Lock screen gesture)

## Changing your touch settings

You can activate sound or vibration for your touch tone.

## Changing your Connectivity settings

Your Connectivity settings have already been set up by your network operator so you can enjoy your new phone immediately. To change any settings, use this menu:

Touch  from the home screen and then touch **Connectivity**.

## Network selection

**Select network** - If you select **Automatic**, the GD880 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

**Network mode** - You can set a type of network to search for when networks are searched in the **Select network** menu.

**Preferred lists** - You can add a preferred network to connect to. If the network is searched automatically, simply choose one from the network list. If not, you can add a new network manually.

**Internet profiles** - This menu shows the **Internet profiles**. You cannot delete or edit the default configurations for your country. However, you can add a new profile using this menu.

# Settings

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Back-up** -You can send your information to an operator server or receive information s from an operator server.

**NOTE:** This service is not available in all countries. Please contact your service provider for further information.

**Home network** -You can choose and share contents by **Home network**. Be careful about disclosing personal information.

**GPS type** - Select GPS type: **Assisted GPS, Stand alone**.

**DivX VOD registration** - This menu is used to generate a DivX VOD registration code. Please visit <http://vod.divx.com> to register and for technical support.

**USB connection mode** - Choose a data service from the options and synchronise your GD880 using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use **Music sync** with Windows Media

Player, select **Music sync** in this menu. **Music sync** is only available for music content.

**Packet data conn.** - Choose when your device should be connected to the network for packet data.

**Browser settings** - Set the values related to the browser (**Profiles, Appearance settings, Cache/Cookies, Security, Reset settings**).

**Streaming settings** - Your network operator has already saved this information. You can add a new profile using this menu.

**Java settings** - Allows you to set profiles for connections made by Java programs and to view certificates.

**Data roaming** - offers you to manage data reception of Multimedia/Widget/ Email/PIM/Link Air in roaming area.

Using Data roaming function, you can block data application service to not pay data application fee in roaming area.

The default settings is off and the use of data application will be blocked out. When you activate Data roaming function, you can download or synchronize data.

## Using memory manager

Your GD880 has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is being used and how much space is available.

Touch **Device settings**, then **Memory info**.

**Internal common memory** - View the memory available on internal common memory.

**Internal multimedia memory** - View the memory available on internal multimedia memory.

**Internal reserved memory** - View the memory available on your handset for **SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items**.

**USIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

## Sending and receiving your files using Bluetooth

**To send a file:**

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.  
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GD880 will not automatically search for other **Bluetooth** devices. If not, your GD880 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

**TIP!** Check the progress bar to make sure your file is sending.

**To receive a file:**


- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender.

# Settings

Touch **Yes** to receive the file.

- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Go to My stuff**. Files will usually be saved to the appropriate folder in **My stuff**.

## Changing your Bluetooth settings

Touch **Bluetooth** and select .

**Make your changes to:**

**My device information** - View your device information regarding Bluetooth.

**My device visibility** - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

**My device name** - View your device name.


**My Bluetooth address** - View your Bluetooth address.

**Supported services** - Select how to use Bluetooth in association with different services.

**Remote SIM Mode on/off** - Turn on or off.

## Pairing with another Bluetooth device

By pairing your GD880 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility by touching .
- 2 Touch **New device**.
- 3 Your GD880 will search for devices. When the search is completed, the **Refresh** icon will appear on the upper left side of the screen.
- 4 Choose the device you want to pair with and click 'Yes' in the confirmation message. You may need to enter the passcode if the passkey does not match with the device you are trying to pair.
- 5 Touch **Always ask** or **Always allow**, then the device is paired.

## Using a Bluetooth headset

- 1 Check that your Bluetooth is **ON** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.

- 3 Touch **Always ask** or **Always allow**. Your GD880 will automatically switch to Headset profile.

## Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

**NOTE:** The GD880 supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window.

If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

## Software Upgrade

### LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://www.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. The mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, so please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. The manufacturer takes no responsibility for loss of data during the upgrade process, so you are advised to note down any important information in advance for safekeeping.

# Accessories

These accessories are supplied with the GD880.

**Charger**



**Data cable**



**Battery**



**Stereo headset**



## NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

# Technical data

## General

Product name: GD880

System: GSM 850 / E-GSM 900 /  
DCS 1800 / PCS 1900 / WCDMA

## Ambient Temperatures

Max: +55°C (discharging),  
+45°C (charging)

Min: -10°C

# Declaration of Conformity



## Supplier's Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

### Model Name

GD880

### Trade Name

LG

CE 0168 !

## Applicable Standards Details

### R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2006  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Issued Date

Seung Hyoun, Ji / Director

09.Feb. 2010

Signature of representative



## Warranty Card 產品保用證

## Mobile Phone 手提電話

### 服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜

## Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



Welcome to contact for detailed information  
& Customer Care Centre address

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms  
and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.  
Otherwise, this warranty will be voided.

重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。

## Mobile Phone Warranty Policy

### 手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included) :
  - (i) Handset :12 months
  - (ii) Charger :6 months
  - (iii) Battery :6 months
  - (iv) Hand free earphone :3 months.
- (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
- (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories. etc.)
- (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
- (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
- (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
- (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer :
  - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
  - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
  - (iii) The IMEI number sticker on this product has been erased or modified.
  - (iv) The content of warranty policy has been modified without authorization.
- (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
- (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
- (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
- (11) This warranty card is restricted within Hong Kong SAR only.

## Mobile Phone Warranty Policy

### 手提電話保用條款

- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
  - (i) 機身: 12個月
  - (ii) 充電器: 6個月
  - (iii) 電池: 6個月
  - (iv) 免提耳機: 3個月
- (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
- (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
- (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
- (5) 在保修期內維修更換后的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
- (6) 手機內存資料有可能因維修后遺失，請顧客要自行保存。
- (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
  - (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去、保修服務即無效。
  - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
  - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
  - (iv) 擅自修改本保用證的內容。
- (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失、或因天然災害、意外事件造成之損失概不負責。
- (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
- (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
- (11) 此保用證只適用於香港特別行政區範圍內。

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_



To:

LG Electronics HK Ltd.  
North Point Post Office Box No.54509  
香港北角郵政信箱54509號

## Limited Warranty

### 限期保用證

To provide our best after-sales service, please complete and return this warranty card to us.

您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下尊有的售後服務。

## Customer Information

### 客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號







