



ไ ท ย  
ENGLISH

คู่มือการใช้  
LG-GS500v



CE0168

P/NO : MMBB0369518 (1.1) 

[www.lg.com](http://www.lg.com)

## โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ล่อกลิ้นแบบจากตลาดลักลอบนำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ

เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนังสือความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายังบริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ

ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และอุปกรณ์เสริมอื่นๆ.

ทันทีที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG

สามารถรันดีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่องมาจากขอบกพร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Bluetooth QD ID B016193

ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น GS500v ของ LG ซึ่งทันสมัยและมีขนาดกะทัดรัด ออกแบบให้ทำงานด้วยการใช้เทคโนโลยีการสื่อสารเคลื่อนที่แบบดิจิทัลใหม่ล่าสุด

ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์ หรือผู้ให้บริการของคุณ



คู่มือการใช้ GS500v

## สารบัญ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ .....	3	มัลติมีเดีย .....	24
เริ่มทำความรู้จักกับโทรศัพท์ของคุณ .....	8	สมุดบันทึก .....	27
การใส่ซิมและแบตเตอรี่ .....	9	PC Suite .....	30
การชาร์จโทรศัพท์ .....	10	เว็บไซต์ .....	32
การลดหน่วยความจำ .....	10	ตั้งค่า .....	33
การใช้หน้าจอสัมผัส .....	11	อุปกรณ์เสริม .....	37
หน้าจอหลักของคุณ .....	12	ข้อมูลทางเทคนิค .....	38
การโทร .....	14	การแก้ปัญหา .....	40
ข้อความ .....	17		
กล้องถ่ายรูป .....	21		
กล้องวิดีโอ .....	22		
รูปภาพและวิดีโอ .....	23		

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดปกติกฎหมาย

### การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น GS500v นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่อง

ความปลอดภัยในการใช้งานอื่นเกี่ยวกับกรรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทิ้งนี้เพื่อความปลอดภัย

- ของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ
- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุในหน่วยวัตต์ที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีกรรับรบกวนสูงสุดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้ขอยุ
  - แมวาระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับกรออกแบบให้อยู่ภายในข้อกำหนดกรรับพลังงานคลื่นความถี่วิทยุ
  - ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
  - ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ซึ่งทำการทดสอบโดย DASY4

ขณะถือแนบกับหูคือ 0.995 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.810 วัตต์/กก. (10 กรัม)

- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อกำหนด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

### การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

#### คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็น ต้องมีการตรวจซ่อม
- การซ่อมแซมภายนอกได้รับการรับประกันเป็นการตัดสิ้นใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนแปลงชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ใช้ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไวโนในที่ที่มีการสัมผัสเทียนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อมั้บังคับพิเศษห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไวโนในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น

- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแคะตongเส้าอากาศโดยไม่จำเป็น
- อย่าใช้โทรศัพท์หรืออุปกรณ์เสริมในบริเวณที่มีความชื้นสูง เช่น สระน้ำ เรือกระจกปลุกต้นไม้ เรือกระจกฝั่งแดด หรือสภาวะแวดล้อมร้อนชื้น เพราะอาจทำให้โทรศัพท์เสียหายและสิ้นสุดการรับประกัน

## การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

### อุปกรณ์การแพทย์และอิเล็กทรอนิกส์

- โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ
- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน โปรดปรึกษาแพทย์เพื่อตรวจสอบว่าโทรศัพท์ของคุณอาจรบกวนการทำงานของอุปกรณ์การแพทย์ของคุณหรือไม่
  - โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
  - ดังนั้น โทรศัพท์น วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

## เครื่องควบคุมจังหวะการเต้นของหัวใจ

ผู้ผลิตเครื่องควบคุมจังหวะการเต้นของหัวใจ แนะนำว่าควรรักษาระยะห่างระหว่างโทรศัพท์มือถือและเครื่องควบคุมจังหวะการเต้นของหัวใจอย่างน้อย 15 ซม. เพื่อหลีกเลี่ยงสัญญาณรบกวนที่อาจเกิดกับอุปกรณ์ดังกล่าว ให้คุณใช้โทรศัพท์ด้วยหูด้านที่อยู่ฝั่งตรงกันข้ามกับเครื่องควบคุมจังหวะการเต้นของหัวใจ และห้ามพกพาโทรศัพท์ไว้ในกระเป๋าเสื้อของคุณ

## โรงพยาบาล

ให้ปิดอุปกรณ์ไร้สายของคุณหากอยู่ในเขตห้ามใช้ เช่น เมื่ออยู่ในโรงพยาบาล คลินิก หรือสถานพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน

## ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสิทธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้อื่น ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเขาขางทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว

- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งอุปกรณ์รับสัญญาณวิทยุสื่อสารซึ่งขัดขวางการทำงานของอุปกรณ์ ซึ่งอาจทำให้คุณลำบากในการสื่อสาร หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของอุปกรณ์รับสัญญาณ
- หากคุณกำลังฟังเพลงขณะที่อยู่ข้างนอก โปรดตรวจสอบระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

## หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้นเราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

### ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตกอย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยศูนย์บริการที่ได้รับการแต่งตั้ง

### บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

### บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่ายหรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

### บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

### เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก




### การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

## ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ลดลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจลดลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้วโปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับการกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

# เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

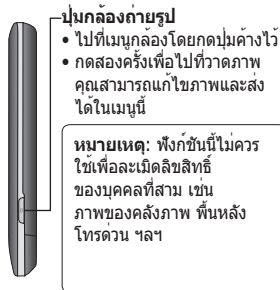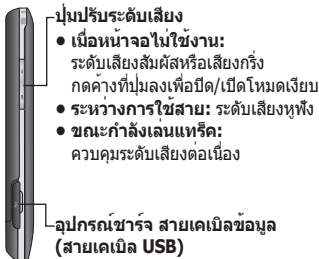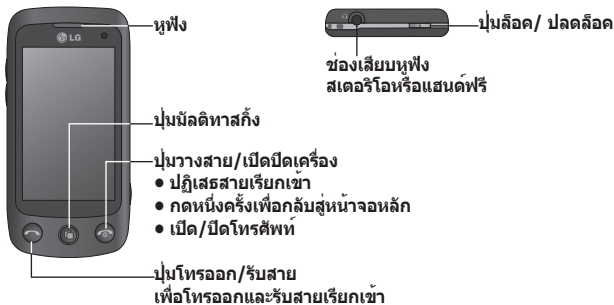


**คำเตือน:** การวางวัตถุที่มีน้ำหนักมาบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้

# การใส่ซิมและแบตเตอรี่

## 1. ถอดฝาปิดแบตเตอรี่และแบตเตอรี่ออก

เลื่อนฝาปิดแบตเตอรี่ลง  
แล้วดึงแบตเตอรี่ออกออกมา

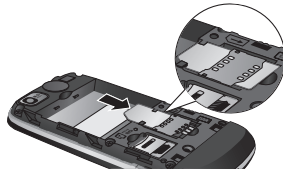


## 3. ใส่แบตเตอรี่

ใส่แบตเตอรี่โดยให้ด้านบนของแบตเตอรี่ลง  
ไปที่ด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบ  
ดูให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับ  
ขั้วของโทรศัพท์ จากนั้น กดตามกลางของแบต  
เตอรี่ให้แน่นเข้าที่

**คำเตือน:** ห้ามถอดแบตเตอรี่ขณะที่  
เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้  
เครื่องเสียหายได้

## 2. การใส่ USIM การ์ด

เลื่อน USIM การ์ดเข้าไปในช่องใส่ USIM  
การ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัส  
สีทองของการ์ดคว่ำลง ในการถอด USIM  
การ์ด ให้ค่อยๆ ดึงการ์ดออกมา

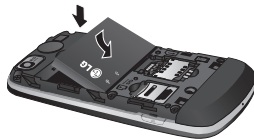

## การชาร์จโทรศัพท์

เลื่อนฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านหลังของโทรศัพท์ GS500v เสียบอุปกรณ์ชาร์จ และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ คุณจะต้องชาร์จโทรศัพท์ GS500v จนกว่าข้อความ "แบตเตอรี่เต็มแล้ว" จะปรากฏขึ้นบนหน้าจอ

**หมายเหตุ:** แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่ ไม่ควรสนใจข้อความ "แบตเตอรี่เต็มแล้ว" ที่ปรากฏครั้งแรก และชาร์จแบตเตอรี่ทิ้งไว้ตลอดคืน (หรือไม่เกิน 14 ชั่วโมง)





## การลดหน่วยความจำ

**การใส่การ์ดหน่วยความจำ**

คุณสามารถเพิ่มพื้นที่หน่วยความจำในโทรศัพท์ได้โดยการใช้การ์ดหน่วยความจำ  
**หมายเหตุ:** การ์ดหน่วยความจำเป็นอุปกรณ์เสริม

ใส่การ์ดหน่วยความจำเข้าไปในช่องเสียบที่ด้านบนให้แน่นเข้าที่ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

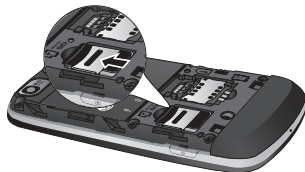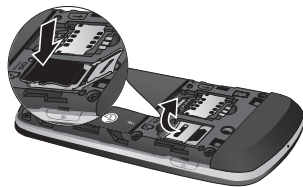

# การใช้หน้าจอสัมผัส

## เคล็ดลับสำหรับหน้าจอสัมผัส


- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ
- เมื่อไม่มีการใช้งานโทรศัพท์ GS500v เครื่องจะกลับไปล็อคหน้าจอ

## ควบคุมหน้าจอสัมผัส

การควบคุมบนหน้าจอสัมผัสของ GS500v สามารถเปลี่ยนแปลงได้ขึ้นอยู่กับงานที่คุณกำลังทำ


## การเปิดแอปพลิเคชัน

ในการเปิดแอปพลิเคชันใดก็ตาม เพียงแตะที่ไอคอนนั้น

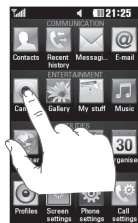

## การเลื่อนหา

ลากจากด้านหนึ่งไปยังอีกด้านหนึ่งเพื่อเลื่อน ในหน้าจอบางหน้าจอ เช่น รายการข้อมูลการโทร คุณสามารถเลื่อนขึ้นหรือลงได้อีกด้วย

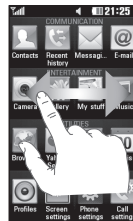

# หน้าจอหลักของคุณ


คุณสามารถลากและคลิกสิ่งที่คุณต้องการได้ในหน้าจอหลักทุกประเภท


ใช้งาน



**หน้าจอหลัก Widget -**  
เมื่อคุณแตะ  ที่ด้านล่างขวาของหน้าจอ พาเนล Widget สำหรับโทรศัพท์ที่มีมือถือจะปรากฏขึ้นเมื่อคุณลงทะเบียน Widget โดยการลาก Widget จะถูกสร้างขึ้นในจุดที่ถูกลาก

ใช้งาน

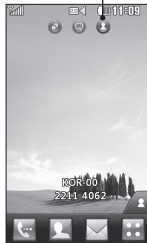

**หน้าจอหลักโทรด่วน -** เมื่อคุณแตะ  รายการโทรด่วนจะปรากฏขึ้น คุณสามารถโทรส่งข้อความ หรือแก้ไขรายชื่อได้โดยตรงในหน้าจอหลักนี้

ใช้งาน



**หน้าจอหลัก Livesquare -** ในหน้าจอ Livesquare คุณสามารถโทรและส่งข้อความไปยังหมายเลขที่กำหนดให้กับการ์ดคุณ ในการใช้การโทร การส่งข้อความ หรือรายชื่อ ให้เลือกการ์ดคุณ และเลือกไอคอน ปุ่มด้านที่คุณต้องการใช้  
คุณสามารถลากการ์ดคุณทั้งหมดได้ทีละหก และสามารถส่งข้อความพร้อมกันได้

ไอคอนปุ่มด่วน



**เคล็ดลับ!** เมนูสำหรับผู้ใช้งานเป็นหน้าจอหลัก 3 ประเภทในการสลับระหว่างหน้าจอหลักต่างๆ เพียงลากนิ้วบนหน้าจอจากซ้ายไปขวาหรือขวาไปซ้ายอย่างรวดเร็ว

## การใช้งานฟังก์ชันมัลติทาสกิ้ง

กดปุ่มมัลติทาสกิ้ง  เพื่อเปิดเมนูมัลติทาสกิ้ง จากเมนูนี้ คุณสามารถถอดแอปพลิเคชันที่รันอยู่ และเข้าใช้งานได้ด้วย การกดปุ่มเดียว





## การดูแถบสถานะ

ไอคอน	รายละเอียด
	มัลติทาสกิ้ง
	ความแรงของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป)
	ไม่มีสัญญาณเครือข่าย
	พลังงานแบตเตอรี่ที่เหลืออยู่
	แบตเตอรี่หมด
	ข้อความตัวอักษรใหม่
	ข้อความเสียงใหม่
	ข้อความในถาดเข้าเต็ม
	การส่งข้อความล้มเหลว
	การส่งข้อความมัลติมีเดียล้มเหลว
	ตั้งปลุกแล้ว
	ใช้งานรูปแบบเสียงที่ปรับแต่งเอง (หมายเลขในไอคอนอาจแตกต่างกัน)
	ใช้รูปแบบปกติอยู่
	ใช้รูปแบบนอกอาคารอยู่

ไอคอน	รายละเอียด
	ใช้รูปแบบเงียบอยู่
	ใช้ชุดหูฟังอยู่
	โอนสายเรียกเข้า
	ใช้ EDGE อยู่
	โรมมิ่ง
	เปิดใช้โหมด Flight
	ใช้งานบลูทูธ
	เล่น BGM
	หยุด BGM ชั่วคราว
	การ์ดหน่วยความจำเปิดใช้งาน
	<p>สำหรับอีเมล Push                      ขาเข้า</p> <p>ตรวจดูอีเมล Push:                      และที่ เกนส์&amp;แอปฯ                      ใน ความบันเทิง                      แล้วและที่                      แอปพลิเคชัน</p> <p>*ข้อควรระวัง:                      ผู้ใช้อาจไม่สามารถใช้อีเมล Push                      และเข้าใช้ WAP (หรือ MMS)                      พร้อมกันได้ ขึ้นอยู่กับพื้นที่หรือ                      ผู้ให้บริการซิม</p>


# การโทร

## การโทรออก


1. และ  เพื่อเปิดปุ่มกด
2. ป้อนหมายเลขโดยไข่มุกกด
3. และ  หรือ  เพื่อเริ่มการโทรออก
4. ในกาขวางสาย โห้กดปุ่ม  หรือ 

**เคล็ดลับ!** ในการป้อน +  
เพื่อโทรออกต่างประเทศ กด  ค้างไว้

**เคล็ดลับ!** กดปุ่มเปิดปิดเพื่อล๊อคหน้าจอล้มคัสเพื่อป้องกันกาโทรออกโดยไม่ตั้งใจ

**เคล็ดลับ!** และที่   
เพื่อโทรสนทนาทางวิดีโอ

## การโทรออกโดยใช้รายชื่อ


1. จากหน้าจอหลัก ให้แตะที่  เพื่อเปิดรายชื่อ
2. แตะที่กล่องฟิลดชื่อที่ด้านบนของหน้าจอ และป้อนตัวอักษรสองสามตัวแรกของรายชื่อที่ต้องการโทรโดยใช้ปุ่มกด
3. จาการายการที่ฟิลเดอร์นี้ ให้แตะที่ไอคอนโทร ถัดจากรายชื่อที่ต้องการโทร หมายเลขเริ่มต้นจะถูกใช้ในการโทร หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข
4. หรือ คุณอาจแตะที่ชื่อและเลือกหมายเลขที่จะใช้ หากรายชื่อนั้นมีหมายเลขมากกว่า

หนึ่งหมายเลข คุณอาจแตะที่  เพื่อโทรโดยใช้หมายเลขเริ่มต้นก็ได้

## การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น

ให้แตะที่ปุ่มสมารทเพื่อรับสาย





ในการปิดเสียงเรียกเข้า ให้เลื่อนฝาปิดขึ้น ซึ่งจะปลดล๊อคโทรศัพท์หากล๊อคคอยู่ จากนั้นแตะที่  วิธีนี้เป็นวิธีที่มีประโยชน์หากคุณเล็มเปลี่ยนรูปแบบเสียงเป็น เงียบเมื่ออยู่ในห้องประชุม และที่ ปฏิเสธเพื่อปฏิเสธสายเรียกเข้า

## โทรด่วน

คุณสามารถกำหนดรายชื่อที่โทรออกบ่อยเป็นหมายเลขโทรด่วนได้

1. เลือก รายชื่อ ในแท็บ การติดต่อ และเลือก โทรด่วน
2. ข้อความเสียงของคุณถูกตั้งค่าไว้ที่โทรด่วน 1 คุณจะไม่เปลี่ยนไม่ได้ และที่หมายเลขอื่น ๆ เพื่อกำหนดรายชื่อสำหรับโทรด่วน
3. รายชื่อ ของคุณจะเปิดขึ้น เลือกรายชื่อที่คุณต้องการกำหนดให้กับหมายเลขนั้น โดยการแตะที่หมายเลขโทรศัพท์หนึ่งครั้ง ในการคนหารายชื่อ ให้แตะที่กล่องฟิลดชื่อ และป้อนตัวอักษรแรกของชื่อที่ต้องการ

## การใช้สายที่สอง

1. ในระหว่างการโทรสายแรก ให้แตะที่  และพิมพ์หมายเลขที่คุณต้องการโทรออก
2. แตะที่  เพื่อโทรออก
3. สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล๊อคและพักสายคู่สนทนา
4. ในการสลับสาย ให้แตะที่  หรือกดหมายเลขที่พักสายไว้
5. ในการวางสายใดสายหนึ่ง หรือวางสายทั้งสองสาย ให้กด  และเลือก **วางสาย** แล้วตามด้วย **ทั้งหมด**, **พัก** หรือ **ใช้งาน**

**เคล็ดลับ!** แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่, เวลา และระยะเวลาในการโทร

**หมายเหตุ:** คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

## การดูบันทึกการโทร

แตะที่ **ข้อมูลการโทรล่าสุด** ใน **แท็บการติดต่อ**

**เคล็ดลับ!** แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่, เวลา และระยะเวลาในการโทร

## การใช้การโอนสาย

1. แตะที่ **ตั้งค่าการโทร** ใน **แท็บตั้งค่า**
  2. แตะที่ **การโอนสาย**
  3. เลือกว่าจะโอนสายเรียกเข้าทั้งหมด, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดตอไม่ได้
  4. ป้อนหมายเลขที่คุณต้องการโอนสาย
  5. แตะที่ **คำขอ** เพื่อเปิดใช้งาน
- หมายเหตุ:** คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

**เคล็ดลับ!** ในการปิดการโอนสายทั้งหมด ให้เลือก **เลิกใช้ทั้งหมด** จากเมนูการโอนสาย

## การใช้การป้องกันการโทร

1. แตะที่ **ตั้งค่าการโทร** ใน **แท็บตั้งค่า**
2. แตะที่ **ป้องกันการโทร**
3. เลือกตัวเลือกใดตัวเลือกหนึ่ง หรือเลือกทั้ง 6 ตัวเลือกนี้:  
**โทรออกทั้งหมด**  
**สายโทรออกต่างประเทศ**  
**สายโทรออกต่างประเทศ ยกเว้นประเทศแม่**  
**สายเข้าทั้งหมด**  
**สายเข้าเมื่ออยู่ต่างประเทศ**  
**เลิกใช้ทั้งหมด**

## การโทร

4. ป้อนรหัสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

**เคล็ดลับ!** เลือก กำหนดเบอร์โทรออก จากตัวเลือก ตั้งค่าการโทร เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรจากโทรศัพท์ของคุณ คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

### การเปลี่ยนการตั้งค่าการโทรทั่วไป

1. **แตะที่ ตั้งค่าการโทร** ในแท็บ **ตั้งค่า**
2. **เลื่อนแล้วแตะที่ การตั้งค่าทั่วไป** จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าของ:
  - ปฏิเสธการรับสาย** - เลื่อนสวิตช์ไปเพื่อเปิด เพื่อเลื่อนแถบไปที่ปฏิเสธรายการ คุณสามารถแตะที่กล่องข้อความเพื่อเลือกจากทุกสาย รายชื่อหรือกลุ่ม หรือจากหมายเลขที่ไม่ได้ลงทะเบียน (ไม่มีอยู่ในรายชื่อของคุณ) หรือไม่มีข้อมูลผู้โทร แตะที่ **บันทึก** เพื่อเปลี่ยนการตั้งค่า
  - ส่งหมายเลขตัวเอง** - เลือกว่าจะแสดงหมายเลขของคุณเมื่อคุณโทรออกหรือไม่

**โทรข้ามอัตโนมัติ** - เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

**เตือนทุกนาที่** -

เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** หรือเลื่อนสวิตช์ไปทางขวาเพื่อ **ปิด**

**โหมดตอบรับ BT** - เลือก **แฮนด์ฟรี** เพื่อให้สามารถรับสายได้ในระหว่างใช้งานชุดหูฟังบลูทูธ หรือเลือก **ตัวเครื่อง** เพื่อรับสายโดยกดปุ่มบนตัวเครื่อง

**บันทึกหมายเลขใหม่** - เลือก **ใช่** เพื่อบันทึกหมายเลขใหม่

### การเปลี่ยนการตั้งค่าสนทนาทางวิดีโอ

1. **แตะที่ ตั้งค่าการโทร** ในแท็บ **ตั้งค่า** เลื่อนและแตะที่

**ตั้งค่าสนทนาทางวิดีโอ**


**เลือกว่าจะใช้ภาพส่วนตัวหรือไม่** แล้วเลือกภาพส่วนตัวในโฟลด์ภาพและ **บันทึก** หากคุณต้องการดูตัวคุณเอง คุณสามารถเลือกเปิดกระจกได้


# ข้อความ

## ข้อความ

โทรศัพท์ GS500v ของคุณได้ผสมผสาน SMS และ MMS ไว้ในเครื่องเดียว และมีเมนูที่ใช้งาน

## การส่งข้อความ


1. แตะที่ **ข้อความ** ในแท็บ **การติดต่อ** และแตะที่ **ข้อความใหม่** เพื่อเริ่มเขียนข้อความใหม่
2. แตะที่ **แทรก** เพื่อเพิ่มภาพ วิดีโอ เสียง รูปแบบอัตโนมัติและอื่นๆ
3. แตะที่ **ผู้รับ** ที่ด้านล่างของหน้าจอเพื่อป้อนผู้รับ จากนั้นป้อนหมายเลขหรือแตะที่  เพื่อเลือกรายชื่อ คุณสามารถเพิ่มรายชื่อหลายรายการได้
4. แตะที่ **ส่งเมื่อพร้อม**


 **คำเตือน:** หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะต้องจ่ายค่าใช้นั้น

## การป้อนข้อความ

คุณสามารถป้อนข้อความได้ 5 วิธีดังนี้:  
**ปุ่มกด, คีย์บอร์ด, เขียนมือ-สกรีน, เขียนมือ-บ็อกซ์, เขียนมือ-ดับเบิลบ็อกซ์**

คุณสามารถเลือกวิธีป้อนข้อมูลได้โดยแตะที่  และ **วิธีป้อนข้อมูล**

แตะ **T9**  เพื่อเปิดโหมด T9 ไอคอนนี้จะแสดงเฉพาะเมื่อคุณเลือก **ปุ่มกด** เป็นวิธีป้อนข้อมูล

แตะที่  เพื่อเลือกภาษาเขียน

แตะที่  เพื่อเปลี่ยนระหว่างตัวเลข สัญลักษณ์ และการป้อนข้อความ

ใช้ปุ่ม **Shift** เพื่อเปลี่ยนระหว่างการป้อนตัวพิมพ์ใหญ่หรือพิมพ์เล็ก

## โหมด T9


โหมด T9 ใช้พจนานุกรมภายในเครื่อง เพื่อรับรู้คำศัพท์ที่คุณเขียนตามลำดับปุ่มที่แตะ ซึ่งจะคาดคะเนคำศัพท์ที่คุณป้อนและแนะนำคำศัพท์อื่นๆ

## การจดจำลายมือ

ในโหมดการจดจำลายมือ คุณจะเขียนบนหน้าจอและ GS500v ของคุณจะแปลงลายมือของคุณเป็นข้อความ เลือก **เขียนมือ-สกรีน** หรือ **เขียนมือ-บ็อกซ์** ตามมุมมองที่คุณต้องการ

# ข้อความ

## การตั้งค่าอีเมล

แต่ที่ **อีเมล** ในแท็บ การติดต่อ ถ้าไม่ได้ตั้งค่าอีเมลแอดเดส ให้เริ่มวิชาการ การตั้งค่าอีเมลและดำเนินการจนเสร็จสิ้น คุณสามารถตรวจสอบและแก้ไขการตั้งค่าได้ โดยเลือก  นอกจากนี้ คุณยังสามารถตรวจสอบการตั้งค่าเพิ่มเติมซึ่งมีข้อมูล โดยอัตโนมัติเมื่อคุณสร้างแอดเดส

## การดึงข้อมูลอีเมลของคุณ


คุณสามารถตรวจสอบอีเมลใหม่ในแอดเดสของคุณแบบอัตโนมัติหรือด้วยตนเองได้ ในการตรวจสอบด้วยตนเอง:

1. แต่ที่ **อีเมล** ในแท็บ การติดต่อ
2. แต่ที่แอดเดสที่คุณต้องการใช้

## การส่งอีเมลโดยใช้แอดเดสใหม่

1. แต่ที่ **อีเมลใหม่** และอีเมลใหม่จะเปิดขึ้น
2. ป้อนข้อความ
3. แต่ที่ **ส่ง** แล้วอีเมลจะถูกส่งออกไป

## การเปลี่ยนการตั้งค่าอีเมล

1. แต่ที่ **อีเมล** ในแท็บ การติดต่อ
2. แต่ที่  และเลือก การตั้งค่าอีเมล ซึ่งคุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:  
**แอดเดสอีเมล**  
**อีเมลที่ต้องการ**  
**ตอบกลับอีเมลได้** - เลือกเพื่อให้ส่ง

ข้อความยืนยันการอ่านได้

**ร้องขอการตอบกลับอีเมล** - เลือกว่าต้องการข้อความยืนยันการอ่านหรือไม่

**รวมเวลาการเรียกดู** -

เลือกความถี่ที่จะให้โทรศัพท์ GS500v ตรวจสอบข้อความอีเมลใหม่

**จำนวนที่รับ** - เลือกจำนวนอีเมลที่ดึงข้อมูลในหนึ่งครั้ง

**รวมข้อความในส่งต่อ & ตอบกลับ** - เลือกเพื่อรวมข้อความต้นฉบับในการตอบกลับ

**รวมสิ่งที่แนบ** - เลือกเพื่อรวมสิ่งที่แนบต้นฉบับในการตอบกลับ

**เรียกอัตโนมัติในการโรมนิง** - เลือกว่าจะดึงข้อความโดยอัตโนมัติเมื่อคุณอยู่ต่างประเทศ (โรมนิง) หรือไม่

**แจ้งเตือนอีเมลใหม่** - เลือกว่าจะแจ้งเตือนอีเมลใหม่หรือไม่

**ลายเซ็น** - เลือก เปิด คุณสมบัตินี้ และสร้างลายเซ็นอีเมล

**ระดับความสำคัญ** - เลือกระดับความสำคัญของข้อความอีเมล

**ขนาดการส่งเมล** - ตั้งค่าขนาดภาพที่ใหญ่ที่สุดที่สามารถส่งได้

**ตัวนับอีเมล** - ป้อนวันที่ที่ต้องการ คุณสามารถตรวจสอบอีเมลที่ส่งในระหว่างช่วงเวลานั้นได้

## โพลเดอ์ข้อความ

ในเมนูการส่งข้อความมี **โพลเดอ์**  
**กดเข้า** - ข้อความทั้งหมดที่คุณได้รับ  
จะอยู่ใน**กดเข้า**

**ร่าง** - หากคุณยังเขียนข้อความไม่เสร็จ  
คุณสามารถบันทึกสิ่งที่เขียนไว้ใน  
โพลเดอ์นี้ได้

**กดออก** - โพลเดอ์นี้เป็นโพลเดอ์จัดเก็บ  
แบบชั่วคราวขณะที่กำลังส่งข้อความออกไป

**รายการที่ส่ง** - ข้อความทั้งหมดที่คุณส่งจะ  
อยู่ในโพลเดอ์นี้

**โพลเดอ์ส่วนตัว** - สร้างโพลเดอ์เพื่อ  
จัดเก็บข้อความ

## การเปลี่ยนการตั้งค่าข้อความ มีลดีมีเดีย

แตะที่ **ข้อความ** ในแท็บ  
การติดต่อ เลื่อนและเลือก  
**ตั้งค่า** และ **ข้อความมีลดีมีเดีย**  
คุณสามารถเปลี่ยนแปลง:

**โหมดเรียกขานมุล** - เลือกระหว่าง  
**เครือข่ายหลัก** หรือ **เครือข่ายโรมนิง**  
หากคุณเลือก **กำหนดเอง**  
คุณจะได้รับเฉพาะข้อความแจ้ง MMS และ  
คุณสามารถตัดสินใจว่าจะดาวน์โหลดแบบ  
เต็มหรือไม่

**รายงานผลการส่ง** - เลือกเพื่อให้ส่งและ/  
หรือขอรายงานผลการส่ง

**อ่านข้อความตอบรับ**-  
เลือกเพื่อให้ส่งและ/  
หรือขอการตอบกลับ

**ระดับความสำคัญ** -  
เลือกระดับความสำคัญของ MMS

**อายุข้อความ** - **เลือกระยะเวลาที่จัดเก็บ  
ข้อความไว้ในศูนย์ข้อความ**

**ระยะเวลาสไลด์** - เลือกระยะเวลาที่จะให้  
สไลด์ปรากฏบนหน้าจอ

**โหมดการสร้าง**  
- เลือกโหมดข้อความ

**เวลาส่ง** - เลือกระยะเวลาในการรอก่อนส่ง  
ข้อความ

**ศูนย์ MMS** - เลือกหนึ่งศูนย์จากรายการ  
หรือเพิ่มศูนย์ข้อความใหม่

# ข้อความ

## บริการเครือข่ายสังคม (SNS)

โทรศัพท์ GS500v มี SNS ที่ให้คุณ สนุกสนานและจัดการเครือข่ายสังคมของคุณได้ แต่ที่เมนู **เครือข่ายสังคม** และเลือกไซต์ทางด้านล่าง: Facebook, Twitter และ Myspace

**เคล็ดลับ!** Facebook เป็นแอปพลิเคชันที่โหลดไวล่วงหน้าในโทรศัพท์และเขาใช้ได้ง่าย Twitter เป็นแอปพลิเคชัน Java ที่ใช้เทคโนโลยี Java แอปพลิเคชันอื่นๆ จะเข้าใช้บริการ WAP (Wireless Application Protocol)

**หมายเหตุ:** เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

## Facebook

**โคม:** ล็อกอิน จากนั้นคุณจะเห็นข้อมูลอัปเดตสถานะของเพื่อนๆ ของคุณ บ่อนความเห็นของคุณเกี่ยวกับสถานะใหม่และตรวจดูอื่นๆ คุณสามารถเขียนความเห็นได้โดยเลือกไอคอน +

**โปรไฟล์:** คุณสามารถเลือก กระดาน > อัปเดตสถานะ และเขียนสถานะปัจจุบันได้ ดูรายละเอียดข้อมูลและอัปโหลดภาพถ่ายโดยแตะที่ อัลบั้ม > อัปโหลดภาพถ่าย เลือกจาก ไปที่ภาพ หรือ ถ่ายภาพ แล้วบ่อนคำบรรยายให้กับภาพ

**เพื่อน:** คุณจะพบเพื่อนมากมายใน SNS และดูสถานะของพวกเขาได้ ค้นหาเพื่อนของคุณใน Facebook โดยการเลือกแท็บ ค้นหา




**ข้อความ:** คุณสามารถดูไฟล์เดือร์ถาดเขา/ส่ง และเขียนข้อความ SNS ได้

### เคล็ดลับ! การใช้ Facebook Feed Widget

คุณสามารถเพิ่ม Facebook Feed Widget บนหน้าจอหลักของคุณ ลาก Facebook Feed Widget จากถาด Widget และแตะที่ **ตกลง** คุณสามารถเข้าใช้แอปพลิเคชัน Facebook โดยตรงได้โดยแตะที่ Feed Widget

# กล้องถ่ายรูป

## การถ่ายภาพด้วย









1. กดปุ่ม  ที่ด้านขวาของโทรศัพท์
2. เมื่อกดปุ่มจับโฟกัสที่วัตถุแล้ว ให้แตะที่  ที่ตรงกลางด้านขวาของหน้าจอ เพื่อถ่ายภาพ คุณสามารถกดปุ่ม  ที่ด้านข้างโทรศัพท์ได้ด้วย

**เคล็ดลับ!** ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลื่อนไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางขวาของช่องมองภาพขึ้น/ลง



## ภายหลังการถ่ายรูป

ภาพที่ถ่ายจะปรากฏบนหน้าจอ ชื่อของภาพจะวิ่งที่ด้านล่างของหน้าจอ

-  แตะเพื่อส่งรูปภาพเป็น ข้อความ, อีเมล หรือ ผ่านทางบลูทูธ
-  แตะเพื่อตั้งค่าภาพหน้าจอหลัก
-  แตะเพื่อแก้ไขภาพ
-  แตะเพื่อแก้ไขชื่อภาพ
-  แตะเพื่อกลับไปทีเมื่อก่อนหน้า
-  แตะเพื่อลบภาพ
-  แตะเพื่อถ่ายภาพอื่นทันที โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้
-  แตะเพื่อคัดลอกภาพที่บันทึกไว้







# กล้องวิดีโอ

## การถ่ายวิดีโอด้วย









1. กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์เป็นเวลาสองสามวินาที

**เคล็ดลับ!** ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลื่อนไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางของหน้าจอขึ้น/ลง

2. ให้อิโธโทรศัพท์ในแนวนอนและหันไปทางสิ่งที่จะถ่าย
3. กดปุ่มกล้องถ่ายรูป  ที่โทรศัพท์หนึ่งครั้งเพื่อเริ่มการบันทึก หรือแตะที่จุดสีแดง 
4. ● **Rec** จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพและตัวตั้งเวลาทางด้านล่างเพื่อแสดงระยะเวลาของวิดีโอของคุณ
5. ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  แล้วเริ่มบันทึกต่อไปโดยเลือก 

6. แตะที่  บนหน้าจอหรือกด  ซ้ำอีกครั้งเพื่อหยุดการบันทึก


## หลังจากถ่ายวิดีโอ

-  แตะเพื่อเล่นวิดีโอ
-  แตะเพื่อส่งวิดีโอเป็นข้อความ หรือ อีเมล หรือทาง **บลูทูธ** หรือ **YouTube**
-  แตะเพื่อแก้ไขวิดีโอ
-  แตะเพื่อแก้ไขวิดีโอ
-  แตะเพื่อกลับไปเมนูก่อนหน้า
-  แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง
-  แตะเพื่อถ่ายภาพวิดีโออื่นต่อทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้
-  แตะเพื่อดูคลังภาพของวิดีโอและภาพที่บันทึกไว้



# รูปภาพและวิดีโอ


## การดูรูปภาพและวิดีโอ

1. แตะที่  บนหน้าจอดูตัวอย่างในกล้องถ่ายรูป
2. คลังภาพของคุณจะปรากฏบนหน้าจอ
3. แตะที่วิดีโอหรือรูปภาพเพื่อเปิดทั้งไฟล์

**เคล็ดลับ!** กดปุ่มไปทางซ้ายหรือทางขวาเพื่อดูรูปภาพหรือวิดีโออื่น

## การดูรูปภาพแบบภาพสไลด์


โหมดภาพสไลด์จะแสดงรูปภาพทั้งหมดในคลังภาพของคุณพร้อมกันเป็นภาพสไลด์วิดีโอที่สามารถดูเป็นแบบภาพสไลด์ได้

1. แตะที่  ใน **คลังภาพ** แล้วเลื่อนและเลือก **ภาพสไลด์**

2. ภาพสไลด์จะเริ่มค้น

ภายในภาพสไลด์มีตัวเลือกต่างๆ ดังนี้:

แตะที่  เพื่อย้อนกลับ



 แตะเพื่อหยุดภาพสไลด์ชั่วคราวที่ภาพใดภาพหนึ่ง

 แตะอีกครั้งเพื่อเริ่มเล่นต่อ


 แตะเพื่อแสดงสไลด์สุ่ม

 แตะเพื่อเพิ่มหรือลดความเร็วของภาพสไลด์

## การตั้งค่ารูปภาพเป็นพื้นหลัง



1. แตะที่ คลังภาพ ในแท็บ ความบันเทิง
2. แตะที่รูปภาพที่คุณต้องการตั้งค่าเป็นพื้นหลัง
3. แตะที่หน้าจอเพื่อเปิดเมนู
4. แตะ 
5. คุณสามารถเปลี่ยนขนาดของรูปภาพได้ด้วย 
6. เมื่อคุณพอใจกับรูปภาพนี้แล้ว ให้แตะที่ **ตั้งค่า**
7. เลือกจากตัวเลือกที่คุณต้องการเปลี่ยน: **ทั้งหมด, Widget, โทรด่วน**

## บัลติมิดีเดีย

คุณสามารถจัดเก็บไฟล์บัลติมิดีเดียลงในหน่วยความจำของโทรศัพท์มือถือ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ การใช้การ์ดหน่วยความจำทำให้คุณเพิ่มพื้นที่ในหน่วยความจำของโทรศัพท์ได้ในการเข้าใช้งานเมนูบัลติมิดีเดีย ใต้และที่  เลือก **พื้นที่ข้อมูล** จากแท็บ ความบันเทิง คุณสามารถเปิดรายการของไฟล์เดอริที่คุณเก็บไฟล์บัลติมิดีเดียทั้งหมดได้

### การใช้รูปภาพ

คุณสามารถเลือกรูปภาพเพื่อใช้เป็นพื้นหลังและภาพพิกหน้าจอ หรือใช้เพื่อระบุผู้โทรเข้าได้

1. และที่  แล้วเลือก **พื้นที่ข้อมูล** จากแท็บ ความบันเทิง
2. และที่ **ภาพ**
3. เลือกภาพแล้วและที่ 
4. และที่ **ใช้เป็น** แล้วเลือกกระหว่าง:

**พื้นหลัง** - เลือกภาพพื้นหลังสำหรับหน้าจอล็อคปุ่ม

#### ภาพรายชื่อ



กำหนดภาพให้กับบุคคลในรายชื่อ เพื่อให้ภาพนั้นปรากฏขึ้นเมื่อบุคคลนั้นโทรมา

**ภาพเปิดเครื่อง** - กำหนดให้ภาพปรากฏขึ้นเมื่อเปิดเครื่อง


**ภาพเปิดเครื่อง** - กำหนดให้ภาพปรากฏขึ้นเมื่อเปิดเครื่อง

### การย้ายหรือคัดลอกรูปภาพ


สามารถย้ายหรือคัดลอกภาพระหว่างหน่วยความจำของโทรศัพท์กับการตหน่วยความจำได้ เพื่อเป็นการเพิ่มพื้นที่ในหน่วยความจำโดยหน่วยความจำหนึ่งหรือเพื่อป้องกันภาพมิให้สูญหาย

1. และที่  แล้วเลือก **พื้นที่ข้อมูล** จากแท็บ ความบันเทิง
2. และที่ **ภาพของฉัน**
3. และที่ 
4. เลือก **ย้าย** หรือ **คัดลอก**

### การใช้เสียง

1. และที่  แล้วเลือก **พื้นที่ข้อมูล** จากแท็บ ความบันเทิง
2. และที่ **เสียง**
3. เลือก **เสียงเริ่มต้น** หรือ **ดาวน์โหลดเสียง**
4. ให้เลือกเสียง แล้วแตะไอคอนเล่นเสียงที่เลือกจะเริ่มเล่น
5. คุณสามารถใช้เสียงได้หลากหลายหน้าที่โดยเลือกเมนู **ใช้เป็น**
6. เลือกกระหว่าง **เสียงเรียกเข้าแบบเสียง** และ **เสียงข้อความ**

## เพลง

โทรศัพท์ LG GS500v มีเครื่องเล่นเพลงภายในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ ในการเข้าใช้งานเครื่องเล่นเพลงให้แตะที่  แล้วเลือก **เพลง** จากแท็บความบันเทิง จากนั้นตอนนี้ คุณสามารถเข้าใช้งานไฟล์เดอต่างๆ ดังนี้:

### เล่นล่าสุด

- เล่นเพลงที่คุณเล่นล่าสุด

**ทุกแทร็ค** - มีเพลงทั้งหมดที่คุณมีใน

โทรศัพท์ยกเว้นเพลงเริ่มต้นที่โหลดล่วงหน้า

**ศิลปิน** - เบราว์เซอร์รายการเพลงที่เก็บไว้ตาม

ศิลปิน

**อัลบั้ม** - เบราว์เซอร์รายการเพลงที่เก็บไว้ตาม

อัลบั้ม

**แนวเพลง** - เบราว์เซอร์รายการเพลงที่เก็บไว้

ตามแนวเพลง

**รายการ** - ประกอบด้วยรายการเพลงที่คุณ

สร้างไว้

**สร้างริงโทน** - คุณสามารถแก้ไขเพลงและ

บันทึกหากคุณต้องการตั้งค่าเป็นเสียงเรียกเข้า

ได้ ซึ่งอยู่ในเมนูโปรไฟล์ของการตั้งค่า

**สลับเปลี่ยนแทร็ค**

- เล่นแทร็คแบบสุ่มลำดับ

**หมายเหตุ:** ลิขสิทธิ์ของไฟล์เพลงจะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้รับสิทธิ์ในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีข้อห้ามในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์ โปรดตรวจสอบกฎหมายข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

## การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธ หรือสายเคเบิลข้อมูล

คุณยังสามารถใช้ LG PC Suite ได้

ในการโอนเพลงโดยใช้บลูทูธ:

1. ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และเชื่อมต่อกันแล้ว
2. เลือกไฟล์เพลงบนอุปกรณ์อื่น แล้วเลือกส่งไฟล์นั้นผ่านทางบลูทูธ
3. เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
4. ไฟล์จะปรากฏขึ้นใน **เพลง > ทุกแทร็ค**

## มัลติมีเดีย

### การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณได้โดยเลือกเพลงจากโฟลเดอร์ **รายการ**

1. แตะที่ **เพลง** ในแท็บ **ความบันเทิง**
2. แตะที่ **รายการ** จากนั้น **เพิ่มรายการเพลงใหม่**  
ป้อนชื่อรายการเพลง และแตะที่ **บันทึก**
3. โฟลเดอร์ **ทุกแทร็ค** จะแสดงทุกเพลงในโทรศัพท์ของคุณ แตะที่เพลงทั้งหมดที่คุณต้องการใส่ไว้ในรายการเพลง จะมีเครื่องหมายปรากฏอยู่ข้างชื่อเพลงเหล่านั้น
4. แตะที่ **เสร็จ**

### วิทยุ FM

โทรศัพท์ LG GS500v


ของคุณมีคุณสมบัติวิทยุ FM ดังนั้นคุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

**หมายเหตุ:** คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟัง (ช่องเสียบเดียวกับช่องเสียบอุปกรณ์ชาร์จ)

### การค้นหาสถานี

คุณสามารถใช้โทรศัพท์ค้นหาสถานีวิทยุได้โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านี้จะถูกบันทึกไว้ในหมายเลขช่องสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก คุณต้องต่อชุดหูฟังกับโทรศัพท์ก่อนเนื่องจากชุดหูฟังจะทำหน้าที่เป็นเสาอากาศวิทยุ

#### ในการปรับตั้งอัตโนมัติ:

1. เลื่อนแล้วแตะที่ **วิทยุ FM** ในแท็บ **ความบันเทิง** แล้วแตะที่ 
2. แตะที่ **สแกนอัตโนมัติ**  
ข้อความยืนยันจะปรากฏขึ้น เลือก **ใช่** เครื่องจะค้นหาสถานีวิทยุที่มีอยู่โดยอัตโนมัติ และกำหนดไว้ที่ช่องสถานีในโทรศัพท์


**หมายเหตุ:** คุณยังสามารถค้นหาสถานีด้วยตนเองได้ด้วยการใช้ ◀ และ ▶ แสดงที่ตรงกลางหน้าจอ หากคุณกด ◀ และ ▶ ค้างไว้ จะเป็นการค้นหาสถานีโดยอัตโนมัติ

### การรีเซ็ตสถานี

1. เลื่อนแล้วแตะที่ **วิทยุ FM** ในแท็บ **ความบันเทิง** แล้วแตะที่ 
2. เลือก **รีเซ็ตสถานี**  
เพื่อรีเซ็ตของสถานีปัจจุบัน หรือเลือก **รีเซ็ตทุกสถานี**  
เพื่อรีเซ็ตของสถานีทั้งหมด ของสถานีแต่ละช่องจะกลับไปความถี่เริ่มต้น 87.5MHz

## สมุดบันทึก


### การเพิ่มเหตุการณ์ลงในปฏิทิน

1. และที่ **สมุดบันทึก** ในแท็บ **ยูทิลิตี้** และเลือก **ปฏิทิน**
2. เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
3. และที่  แล้วแตะ **เพิ่มเหตุการณ์**
4. และที่ **ประเภท** แล้วเลือกจาก **นัดหมาย**, **วันครบรอบ** หรือ **วันเกิด**
5. ใส่ **หัวข้อ**
6. ตรวจสอบและป้อนวันที่และเวลาที่อยากให้อحداثนั้นเริ่มต้น สำหรับ **การนัดหมาย** และ **วันครบรอบ** ให้ป้อนเวลาและวันที่ที่เหตุการณ์สิ้นสุดในระยะเวลาและวันที่คำนวณทั้งสองช่อง ป้อนสถานที่หากเป็น **การนัดหมาย**
7. ตั้งค่า **เตือน** และ **ซ้ำ**
8. เลือก **บันทึก** และเหตุการณ์ของคุณจะบันทึกอยู่ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมายกรอกลีเหลี่ยมกำกับอยู่ และเสียงกริ่งจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์ เพื่อให้คุณไม่พลาดกำหนดต่างๆ

### การเพิ่มบันทึก

1. และที่ **บันทึก** ในแท็บ **ยูทิลิตี้**
2. และที่ **เพิ่มบันทึก**
3. ป้อน **บันทึก** ของคุณ แล้วแตะที่ **บันทึก**

### การตั้งเวลาการปลุก

1. และที่ **ตั้งปลุก** ในแท็บ **ยูทิลิตี้** การปลุก **Widget** จะปรากฏในรายการเป็นค่าเริ่มต้น และไม่สามารถลบออกได้
  2. และที่ **เพิ่มการปลุก**
  3. กำหนดเวลาที่ต้องการให้ส่งเสียงปลุกในกล่อง **เวลา**
  4. เลือกวิธีที่คุณต้องการให้ปลุกซ้ำในช่อง **ซ้ำ**
  5. เลือก **รูปแบบเสียงปลุก** เพื่อเลือกประเภทการเตือนที่ต้องการ
  6. เลือก **เสียงกริ่งปลุก** และเลือกเสียงจากโฟลเดอร์ในการฟังเสียง และที่เสียงแล้วตามด้วย 
  7. เพิ่มบันทึกสำหรับการตั้งปลุกในกล่อง **บันทึก**
  8. จากนั้นคุณสามารถกำหนดช่วงการเลื่อนปลุกเป็น 5, 10, 20 หรือ 30 นาที, 1 ชั่วโมง หรือปิด
  9. เมื่อคุณตั้งปลุกเสร็จแล้ว ให้แตะที่ **บันทึก**
- หมายเหตุ:** คุณสามารถตั้งปลุกได้ถึง 5 รายการรวม การปลุก Widget

เคล็ดลับ! เลื่อน เปิด/ปิด เพื่อตั้งปลุก

## สมุดบันทึก

### บันทึกเสียง

ใช้เครื่องบันทึกเสียง เพื่อบันทึกเสียงเตือน ความจำหรือไฟล์เสียงอื่นๆ

แตะที่ **บันทึกเสียง** ในแท็บ ยูทิลิตี้ แล้วเลือก  และ ตั้งค่า เพื่อเปลี่ยนการตั้งค่า:

**ระยะเวลา** – กำหนดระยะเวลาในการบันทึก เลือกจาก ไม่จำกัด, MMS หรือ 1 นาที


**คุณภาพ** – เลือกคุณภาพเสียง เลือกจาก ละเอียดมาก, ละเอียด หรือ ปกติ

**ความจำที่ใช้** – เลือกตำแหน่งที่จะบันทึกไฟล์เสียง เลือกระหว่างหน่วยความจำภายในและหน่วยความจำเครื่อง

### การบันทึกเสียงหรือเสียงพูด

1. แตะที่  เพื่อเริ่มบันทึก
2. แตะที่  เพื่อหยุดการบันทึก
3. แตะที่  เพื่อจบการบันทึก
4. แตะที่  เพื่อฟังรายการที่บันทึก



### การใช้เครื่องคิดเลข

1. แตะที่ **เครื่องมือ** ในแท็บ ยูทิลิตี้
2. เลือก **เครื่องคิดเลข**
3. แตะที่ปุ่มกดโดยใช้ปุ่มกดเพื่อป้อนหมายเลข
4. สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, ×, ÷) แล้วตามด้วย =
5. สำหรับการคำนวณแบบซับซ้อน ให้แตะที่  แล้วเลือกระหว่าง **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** หรือ **rad** และอื่นๆ

### การแปลงหน่วย

1. แตะที่ **เครื่องมือ** ในแท็บ ยูทิลิตี้
2. เลือก **ตัวแปลงหน่วย**
3. เลือกว่าคุณจะแปลง **สกุลเงิน**, **พื้นที่**, **ความยาว**, **น้ำหนัก**, **อุณหภูมิ**, **ปริมาตร** หรือ **ความเร็ว**
4. จากนั้น คุณสามารถเลือกหน่วย และป้อนค่าที่คุณต้องการแปลง แล้วตามด้วยหน่วยที่คุณต้องการแปลงเป็น

## การเพิ่มเมืองในเวลาทั่วโลก

1. แตะที่ **เครื่องมือ** ในแท็บ ยูทิลิตี้
2. เลือก **เวลาโลก**
3. แตะที่  แล้วตามด้วย **เมืองใหม่**
4. เลื่อนลูกโลก แตะที่จุดที่คุณต้องการและเลือกเมืองในแผนที่
5. หรือแตะที่  และพิมพ์ชื่อเมืองที่คุณต้องการในกล่องป้อนค้นหา

## การใช้นาฬิกาจับเวลา

1. แตะที่ **เครื่องมือ** ในแท็บ ยูทิลิตี้
2. เลือก **นาฬิกาจับเวลา**
3. แตะที่ **เริ่มต้น** ที่ด้านล่างของหน้าจอเพื่อเริ่มตั้งเวลา
4. แตะที่ **รอบ**  
หากคุณต้องการบันทึกรอบเวลา
5. แตะที่ **หยุด** เพื่อหยุดตัวจับเวลา
6. แตะที่ **ต่อ** เพื่อเริ่มต้นใหม่ หรือแตะที่ **รีเซ็ต** เพื่อเริ่มต้นเวลาอีกครั้ง

## วาดภาพ

กด  สองครั้งเพื่อถ่ายภาพปัจจุบัน


เมื่อ บันทึกอัตโนมัติ เป็น ปิด คุณสามารถแก้ไขภาพได้หลังจากถ่ายภาพ

**หมายเหตุ:** ฟังก์ชันนี้ไม่ควรใช้เพื่อละเมิดลิขสิทธิ์ของบุคคลที่สาม เช่น ภาพของคลังภาพพื้นหลัง โทรทัศน์ ฯลฯ

# PC Suite

คุณสามารถชิงโครในซ์คอมพิวเตอร์กับโทรศัพท์ของคุณได้ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน รวมทั้งยังเป็นการสำรองข้อมูลที่จะช่วยให้คุณสบายใจได้

## การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

1. จากหน้าจอหลัก ให้แตะที่  แล้วคลิกการเชื่อมต่อ
2. เลือก การต่อ USB และคลิก PC Suite
3. เชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์ผ่านทางสายเคเบิล USB แล้วรอสักครู่
4. ข้อความคำแนะนำการติดตั้งจะปรากฏขึ้น
5. ใส่ CD-ROM ที่หามาด้วยหรือคลิกปุ่มดาวน์โหลดเพื่อดาวน์โหลดโปรแกรม LG PC Suite โดยตรงจากอินเทอร์เน็ต
6. คลิกที่ไอคอน LG PC Suite Installer ซึ่งจะปรากฏที่หน้าจอของคุณ

## การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

1. เลือกโหมด PC Suite ในเมนูการเชื่อมต่อ จากนั้นเชื่อมต่อสายเคเบิล USB ของโทรศัพท์เข้ากับคอมพิวเตอร์
2. LG PC Suite จะเปิดการใช้งานบนคอมพิวเตอร์ของคุณโดยอัตโนมัติ
3. โทรศัพท์และคอมพิวเตอร์ของคุณเชื่อมต่อกันเรียบร้อยแล้ว

30 LG GS500v | คู่มือการใช้

## การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

1. เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
2. คลิกที่ไอคอน **Backup** แล้วเลือก **Backup** หรือ **Restore**
3. เลือกว่าจะสำรองข้อมูล **ข้อมูลเนื้อหา** และ/หรือ **สมุดโทรศัพท์/กำหนดการ/สิ่งที่ต้องทำ/ข้อมูลบันทึก** เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือตำแหน่งที่ต้องการเรียกข้อมูลคืน คลิก **OK**
4. ระบบจะสำรองข้อมูลของคุณ

## การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

1. เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
2. คลิกที่ไอคอน จัดการภาพถ่าย, วิดีโอ หรือเพลง
3. ภาพ, ไฟล์เสียง และวิดีโอ ซึ่งคุณบันทึกไว้ในโทรศัพท์ของคุณจะปรากฏบนหน้าจอในไฟล์เดอร์ โทรศัพท์ LG

**เคล็ดลับ!** การดูเนื้อหาในโทรศัพท์บนคอมพิวเตอร์ช่วยให้คุณจัดการไฟล์ต่างๆ ที่คุณไม่ต้องการใช้แล้วได้

## การซิงโครไนซ์รายชื่อ

1. เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
2. คลิกที่ไอคอน **Contacts**
3. คลิกที่ปุ่ม **ซิงค์ผู้ติดต่อ** คอมพิวเตอร์จะอิมพอร์ตและแสดงรายชื่อที่บันทึกไว้ในโทรศัพท์
4. คลิก **Menu** และเลือก **Export** ขณะนี้คุณสามารถเลือกตำแหน่งที่คุณต้องการบันทึกรายชื่อ

## การซิงโครไนซ์ข้อความ

1. เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
2. คลิกที่ไอคอนข้อความ
3. ข้อความทั้งหมดในโทรศัพท์จะปรากฏขึ้นในไฟล์เดสทอปหน้าจอ
4. ใช้แถบเครื่องมือด้านบนสุดของหน้าจอเพื่อแก้ไขและจัดเรียงข้อความ

## Music Sync

เมนูนี้ช่วยให้คุณเพิ่มเพลงลงในโทรศัพท์ GS500v ก่อนที่คุณจะเริ่มดาวน์โหลดเพลงจากคอมพิวเตอร์ไปยังโทรศัพท์ ให้ตรวจสอบว่าคอมพิวเตอร์มีการติดตั้งและอัปเดตเสริมต่อไปนี้:

- Microsoft Windows XP หรือ Vista
- Windows Media Player 10 หรือสูงกว่า

- สายเคเบิลข้อมูล USB
- การ์ด microSD (หากคุณต้องการใช้หน่วยความจำภายนอกเป็นที่เก็บเพลง)



### คำเตือน


ห้ามตัดการเชื่อมต่อกับโทรศัพท์ในขณะที่โอนไฟล์

## การโอนเพลงโดยใช้ Windows Media Player

1. จากหน้าจอหลัก ให้เลือก  **การเชื่อมต่อ** ในแท็บ **ตั้งค่า**
2. เลือก **โหมดการเชื่อมต่อ USB** แล้วเลือก **Music sync**
3. เชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์โดยใช้สายเคเบิล USB
4. เมื่อคุณเชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์ ตัวเครื่องจะแสดงข้อความว่า: "Music Sync" แล้วตามด้วย **เชื่อมต่อ**
5. คอมพิวเตอร์จะแสดงข้อความให้คุณเริ่มต้นซอฟต์แวร์จัดการเพลงที่คุณต้องการ
6. เลือก **Window Media Player**
7. ไปที่แท็บ **ซิงค์** จากนั้นลากแล้ววางเพลงที่คุณต้องการโอนในพาเนล **รายการซิงค์**
8. คลิกปุ่ม **เริ่มซิงค์** ซึ่งเป็นการเริ่มขั้นตอนการโอนเพลง

# เว็บไซต์

## การเข้าใช้เว็บไซต์

1. จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **เบราว์เซอร์** ในแท็บ ยูทิลิตี้
2. ในการไปยังหน้าจอหลักของเบราว์เซอร์ ให้เลือก **โฮม** หรือ **ไปยัง URL** แล้วป้อน URL แล้วตามด้วย **เชื่อมต่อ**

หมายเหตุ: มีค่าใช้จ่ายในการเชื่อมต่อกับบริการเหล่านี้และการดาวน์โหลดเนื้อหาโปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ


## การเพิ่มและการใช้บุคมาร์ค

เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุคมาร์คได้


1. แตะที่ **เบราว์เซอร์** ในแท็บ ยูทิลิตี้
2. เลือก บุคมาร์ค รายการบุคมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ
3. เพื่อเพิ่มบุคมาร์คใหม่ ให้แตะที่เพิ่มบุคมาร์ค ป้อนชื่อสำหรับบุคมาร์ค แล้วตามด้วยป้อน URL ในกล่องฟิลด์ที่ตรงกัน
4. แตะที่ **บันทึก** บุคมาร์คของคุณจะปรากฏขึ้นในรายการบุคมาร์ค

5. ในการเข้าใช้งานบุคมาร์ค เพียงแตะที่ไอคอนเชื่อมต่อถัดจากบุคมาร์ค หรือแตะที่ชื่อบุคมาร์คแล้วแตะที่ **เชื่อมต่อ** เครื่องจะเชื่อมต่อเข้ากับบุคมาร์คของคุณ

## การเข้าใช้เพจที่บันทึกไว้

1. จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **เบราว์เซอร์** ในแท็บ ยูทิลิตี้
2. เลือก **เพจที่บันทึกไว้**
3. เลือกเพจที่คุณต้องการดู แล้วเพจนั้นจะเปิดขึ้น

## การดูประวัติข้อมูลเบราว์เซอร์


จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **เบราว์เซอร์** ในแท็บ ยูทิลิตี้ เลือก **ประวัติ**

# ตั้งค่า

## การปรับแต่งรูปแบบเสียงของคุณ

คุณสามารถเปลี่ยนตัวเลือกเสียงและการเตือนทั้งหมดที่มีอยู่ในรายการได้ รวมทั้งการตั้งค่า เสียงเรียกเข้า และระดับเสียง, เสียงข้อความ และอื่นๆ


## การเปลี่ยนการตั้งค่าหน้าจอ

1. จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **ตั้งค่าจอ** ในแท็บ **ตั้งค่า**
2. คุณสามารถเลือกเมนูตัวเลือกได้จาก:
  - ธีมเครื่อง** - คุณสามารถเลือกคำหรือชาว (UI สไตลิ่งการดู)
  - พื้นหลัง** - หน้าจอหลัก Widget หรือหน้าจอหลักโทรคววนหรือล็อคหน้าจอ
  - Livesquare** - แตะที่ปุ่ม Livesquare guide เพื่อตรวจสอบการทำงาน
  - เมนูบนสุด** - เลือกสไตล์ของเมนูบนสุด
  - เลือกกระหว่าง Zigzag หรือการเลื่อนหรือที่ละหน้าจอ
  - ล๊อคหน้าจอ** - เลือกประเภทปลดล๊อคคีย์ในหน้าจอล็อค
  - การโทร** - ปรับสีตัวเลข
  - แบบอักษร**
    - ปรับขนาดแบบอักษรและสไตลิ่ง
  - ความสว่าง** - ปรับความสว่างของหน้าจอ
  - ข้อความต้อนรับ** - เลือก เปิด หรือ ปิด และป้อนข้อความต้อนรับในฟิลด์ข้อความตัวอักษร

**เปิดเครื่อง/ปิดเครื่อง** - เลือกซิมสำหรับหน้าจอการเปิดเครื่อง/การปิดเครื่อง

## การเปลี่ยนการตั้งค่าโทรศัพท์


อิสระในการปรับการทำงานของโทรศัพท์ GS500v ในแบบที่คุณต้องการได้

1. จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **ตั้งค่าโทรศัพท์** ในแท็บ **ตั้งค่า**
2. เลือกเมนูจากรายการด้านล่างนี้:
  - วันที่และเวลา** - ปรับการตั้งแต่วันที่และเวลาของคุณ หรือเลือกให้ เครื่องอัปเดตเวลาอัตโนมัติขณะคุณเดินทางหรือสำหรับการปรับเวลาตามฤดูกาล
  - ประหยัดพลังงาน** - เลือก เปิด หรือ ปิดการตั้งค่าประหยัดพลังงาน
  - ภาษา** - เปลี่ยนภาษาบนจอแสดงผลโทรศัพท์ GS500v ของคุณ
  - ปิดเสียงเคลื่อนไหว** - ตั้งค่าโทรศัพท์ GS500v ของคุณให้ปิดเสียงหรือเลื่อนโดยคว่ำเครื่องลงเมื่อได้มีเสียงเรียกเข้า
  - ล๊อคปุ่มอัตโนมัติ**
    - ล๊อคปุ่มกดอัตโนมัติในหน้าจอหลัก
  - ระบบป้องกัน** - ปรับการตั้งค่าระบบป้องกัน ได้แก่ รหัส PIN และล๊อคเครื่อง
  - ข้อมูลความจำ** - โปรดดูที่การใช้ตัวจัดการหน่วยความจำ

# ตั้งค่า

**รีเซ็ตการตั้งค่า** - เรียกคืนการตั้งค่าทั้งหมดให้กลับเป็นค่าที่ตั้งจากโรงงาน  
**ข้อมูลเครื่อง** - ดูข้อมูลทางด้านเทคนิคของโทรศัพท์ GS500v

## การเปลี่ยนการตั้งค่าสัมผัส

จากหน้าจอหลัก ให้เลือก   
จากนั้นเลื่อนไปที่ **ตั้งค่าโทรศัพท์** ในแท็บตั้งค่า

## การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้น คุณจึงสนุกกับโทรศัพท์ใหม่ของคุณได้ทันทีในการเปลี่ยนการตั้งค่าใดๆ ให้ใช้เมนูนี้: และ **การเชื่อมต่อ** ในแท็บ **ตั้งค่า**

### การตั้งค่าเครือข่าย

**เลือกเครือข่าย** - หากคุณเลือก อัตโนมัติ โทรศัพท์ GS500v จะค้นหาเครือข่ายและลงทะเบียนเครื่องในเครือข่ายโดยอัตโนมัติ ขอแนะนำให้ใช้เพื่อบริการและคุณภาพที่ดีที่สุด หากคุณเลือก กำหนดเอง เครือข่ายทั้งหมดที่มีอยู่ในขณะนั้นจะปรากฏขึ้น และคุณสามารถเลือกลงทะเบียนในเครือข่ายใดเครือข่ายหนึ่งได้

**รายการที่ต้องการ** - คุณสามารถเพิ่มเครือข่ายที่ต้องการเชื่อมต่อได้ ถ้าเครือข่ายกำลังค้นหาโดยอัตโนมัติ ให้เลือกหนึ่งเครือข่ายจากรายชื่อเครือข่าย หากไม่มี ให้เพิ่มเครือข่ายใหม่ที่กำหนดเอง

**โปรไฟล์อินเทอร์เน็ต** - เมนูนี้แสดงโปรไฟล์อินเทอร์เน็ต คุณไม่สามารถลบหรือแก้ไขการกำหนดค่าเริ่มต้นที่ขึ้นอยู่กับแต่ละประเทศ

**จุดเชื่อมต่อ** - ผู้ให้บริการระบบได้บันทึกข้อมูลนี้แล้ว คุณสามารถเพิ่มจุดเชื่อมต่อใหม่โดยใช้เมนูนี้ได้

**การเชื่อมต่อข้อมูลแพ็คเกจ** - เลือกว่าจะให้โทรศัพท์ของคุณเชื่อมต่อกับเครือข่ายข้อมูลแพ็คเกจเมื่อใด


**โหมดการเชื่อมต่อ USB** - เลือกเชื่อมต่อ PC Sync จากตัวเลือกและซิงโครไนซ์โทรศัพท์ GS500v โดยใช้ซอฟต์แวร์ LG PC Suite เพื่อตัดลอกจากโทรศัพท์ หากคุณใช้ ซิงค์เพลง กับ Windows Media Player ให้เลือก **ซิงค์เพลง** ในเมนูนี้ **ซิงค์เพลง** ใช้ได้เฉพาะกับข้อมูลเพลงเท่านั้น

**การตั้งค่า Java** - ช่วยให้คุณกำหนดโปรไฟล์สำหรับการเชื่อมต่อโดยโปรแกรม Java และดูไว้รับรองได้

**ตั้งค่าสตรีมมิ่ง** - ผู้ให้บริการระบบได้บันทึกข้อมูลนี้แล้ว คุณสามารถแก้ไขได้หากต้องการเปลี่ยนแปลง

## การใช้ตัวจัดการหน่วยความจำ

โทรศัพท์ GS500v ของคุณมีหน่วยความจำให้เลือกสามแบบ: โทรศัพท์ซิมการ์ด และการคหน่วยความจำภายนอก (คุณต้องซื้อแยกต่างหาก) คุณสามารถใช้ตัวจัดการหน่วยความจำในการกำหนดว่าในแต่ละหน่วยความจำให้หน่วยความจำไปเท่าใด และควรมีพื้นที่ว่างเหลือเท่าใด

จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **ตั้งค่าโทรศัพท์** ในแท็บตั้งค่า เลือก **ข้อมูลความจำ**

### ความจำเครื่อง -

ดูหน่วยความจำที่มีในโทรศัพท์ GS500v สำหรับรูปภาพ, เสียง, วิดีโอ, MMS, อีเมล, แอปพลิเคชัน Java และอื่นๆ

**ความจำสำรอง** - ดูหน่วยความจำที่มีในเครื่องสำหรับ SMS, รายชื่อ, ปฏิทิน, งาน, บันทึก, เดือน, ข้อมูลการโทร, บุคลากร และรายการเบ็ดเตล็ดอื่นๆ

**ความจำซิม** - ดูหน่วยความจำที่มีในซิมการ์ด

**ความจำการ์ด** - ดูหน่วยความจำที่มีในการ์ดหน่วยความจำภายนอก (คุณต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

**ตั้งค่าที่เก็บหลัก** - เลือกตำแหน่งที่คุณต้องการบันทึกรายการระหว่างความจำเครื่องและหน่วยความจำภายนอก

## การส่งและการรับไฟล์โดย ใช้บลูทูธ

### ในการส่งไฟล์:

1. เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ หรือเพลง
2. เลือก **ส่ง**  
เลือก **บลูทูธ**
3. หากคุณจับคู่อุปกรณ์ **บลูทูธ** แล้ว โทรศัพท์ GS500v จะไม่ค้นหาอุปกรณ์ **บลูทูธ** อื่นโดยอัตโนมัติ หากคุณยังไม่จับคู่อุปกรณ์บลูทูธ โทรศัพท์ GS500v จะค้นหาอุปกรณ์อื่นๆ ที่ใช้ **บลูทูธ** ภายในรัศมี
4. เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป
5. ไฟล์ของคุณจะถูกส่งออกไป


**เคล็ดลับ!** ตรวจสอบแถบแสดงความคิดเห็นเพื่อให้แน่ใจว่าไฟล์ของคุณถูกส่งแล้ว

# ตั้งค่า

## ในการรับไฟล์:

1. ในการรับไฟล์ คุณต้องตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** โปรดดูข้อมูลเพิ่มเติมที่ **การเปลี่ยนการตั้งค่าบลูทูธ** ด้านล่าง
2. เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และที่ ไซ้ เพื่อรับไฟล์
3. คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้วสำหรับไฟล์ภาพ คุณสามารถเลือก ดู ไฟล์หรือ ไซ้เป็นพื้นหลัง โดยทั่วไป ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมใน **พื้นที่ข้อมูล**

## การเปลี่ยนการตั้งค่าบลูทูธ:

แตะที่ **บลูทูธ** ในแท็บ **ตั้งค่า** และเลือก  และเลือก **ตั้งค่า**

## ทำการเปลี่ยนแปลง:

- การมองเห็นเครื่อง** - เลือกเป็นมองเห็นได้, ซ่อน หรือ แสดง 1 นาที
- ชื่อเครื่องของฉัน** - ป้อนชื่อโทรศัพท์ GS500v ของคุณ
- บริการที่รองรับ** - เลือกวิธีใช้บลูทูธร่วมกับบริการอื่นๆ
- โหมดซิงโครไนซ์** - เพื่อเปิดหรือปิด
- แอคเดรสส่วนตัว** - แสดงแอคเดรสบลูทูธ

## การจับคู่กับอุปกรณ์บลูทูธอื่น

ในการจับคู่โทรศัพท์ GS500v กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้

1. ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู **ตั้งค่า**
2. แตะที่ **ค้นหา**
3. โทรศัพท์ GS500v จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ
4. เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่าน จากนั้นให้แตะที่ **ตกลง**
5. โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นซึ่งคุณจำเป็นต้องป้อนรหัสผ่านเดียวกัน
6. การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

## การใช้ชุดหูฟังบลูทูธ

1. ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้**
2. ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ
3. แตะที่ **ถามก่อนทำการเชื่อมต่อ** หรือ **ใช่เชื่อมต่อเสมอ** และแตะที่ **ใช่** เพื่อเชื่อมต่อทันที โทรศัพท์ GS500v จะเปลี่ยนเป็นรูปแบบชุดหูฟังโดยอัตโนมัติ

# อุปกรณ์เสริม

โทรศัพท์มือถือรุ่นนี้มีอุปกรณ์เสริมหลากหลายให้คุณเลือกใช้ ซึ่งอุปกรณ์เสริมบางชิ้นอาจมีการแยกขาย คุณสามารถเลือกใช้อุปกรณ์เสริมเหล่านี้ตามลักษณะการใช้งานส่วนตัวของคุณ โปรดสอบถามเกี่ยวกับอุปกรณ์ที่มีวางจำหน่ายได้จากตัวแทนจำหน่ายในพื้นที่ของคุณ (รายการที่อธิบายด้านล่างนี้จะให้มาในกล่อง)

## อุปกรณ์ชาร์จ



สายเคเบิลข้อมูล  
เชื่อมต่อและซิง  
โครไนซ์ GS500v  
และคอมพิวเตอร์



## แบตเตอรี่



## ชุดหูฟังสเตอริโอ



## คู่มือการใช้



## หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

# ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์ : GS500v

ระบบ :

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 / WCDMA

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ)

+45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

Bluetooth QD ID B016193

**ศูนย์บริการ LG โดย บริษัท แอลจี  
อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด**  
ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน  
แขวงบคคโกล เขตธนบุรี กรุงเทพฯ  
10600

วันและเวลาทำการ : จันทร์-อาทิตย์,  
07:00 - 19:00น.

Call center : 0-2878-5757

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GSS00v

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.3.2/ EN 301 489-24 V1.4.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

08. Feb. 2010

LG Electronics Inc. – EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

  
Signature of representative

## การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหาบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาด USIM	ไม่ได้ใส่ USIM การ์ดในโทรศัพท์ หรือใส่ไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ USIM การ์ดอย่างถูกต้อง
ไม่มีการเชื่อมต่อกับเครือข่าย	สัญญาณอ่อน อยู่นอกพื้นที่เครือข่าย GSM	ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่าย
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสใหม่อีกครั้ง รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	ติดต่อศูนย์บริการ
ตั้งค่าฟังก์ชันไม่ได้	ผู้ให้บริการไม่สนับสนุน หรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข มีการใส่ USIM การ์ดใหม่ สิ่งขัดข้องการโทรของคุณแล้ว	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยรหัส PIN 2

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดไม่นานพอ แบตเตอรี่หมด ซั้วลัมผัสแบตเตอรี่สกปรก	กดปุ่มเปิด/ปิดค้างไว้อย่างน้อยสองวินาที เสียบอุปกรณ์ชาร์จให้แน่นขึ้น ทำความสะอาดซั้วลัมผัสแบตเตอรี่
ข้อผิดพลาดเกี่ยวกับการชาร์จ	แบตเตอรี่หมดโดยสิ้นเชิง อุณหภูมิสูงหรือต่ำเกินไป	ชาร์จแบตเตอรี่ ตรวจสอบให้แน่ใจว่าอยู่ในอุณหภูมิแวดล้อมที่เหมาะสม รอสักครู่จากนั้นชาร์จแบตเตอรี่อีกครั้ง
	มีปัญหาที่ซั้วลัมผัส	ตรวจสอบกระแสไฟฟ้าและการเชื่อมต่อกับโทรศัพท์ ตรวจสอบซั้วลัมผัสแบตเตอรี่และทำความสะอาดหากจำเป็น
	ไม่มีกระแสไฟฟ้า	เสียบปลั๊กเข้ากับเสียบอื่นหรือตรวจสอบแรงดันไฟฟ้า
	อุปกรณ์ชาร์จชำรุด	หากอุปกรณ์ชาร์จไม่ทำงาน ให้เปลี่ยนอุปกรณ์ชาร์จใหม่
	อุปกรณ์ชาร์จไม่ถูกต้อง	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น
	แบตเตอรี่ชำรุด	เปลี่ยนแบตเตอรี่
โทรศัพท์โทรออกไม่ได้	กำลังใช้งานฟังก์ชันกำหนดหมายเลขโทรออก	ตรวจสอบการตั้งค่า



# Congratulations on your purchase of the advanced and compact GS500v phone by LG, designed to operate with the latest digital mobile communication technology.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

## **Product Authentication program**

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

LG will bear the cost of one SMS for the product authentication program.

For promotion, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.



# GS500v User Guide

# Contents

Guidelines for safe and efficient use .....	3	Multimedia .....	23
Getting to know your phone .....	7	Organiser .....	26
Installing the SIM and battery .....	8	PC Suite .....	29
Charging your phone.....	9	The web .....	31
Memory card.....	9	Settings.....	32
Using your touch screen .....	10	Accessories .....	36
Your home screen .....	11	Technical data.....	37
Calls .....	13	Trouble shooting .....	39
Messaging.....	16		
Camera .....	20		
Video camera .....	21		
Your photos and videos .....	22		

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information This mobile phone model GS500v has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.995 W/kg (10g) and when worn on the body is 0.810 W/kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### **WARNING**

- Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
  - Keep away from electrical appliances such as TVs, radios, and personal computers.
  - The unit should be kept away from heat sources such as radiators or cookers.

## Guidelines for safe and efficient use

- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments; it may cause damage to the phone and invalidation of warranty.

### **Efficient phone operation Electronic and medical devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Please consult your doctor to determine if operation of your phone may interfere with the operation of your medical device.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

## Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service centre.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

# Guidelines for safe and efficient use

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls




Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.

- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Getting to know your phone

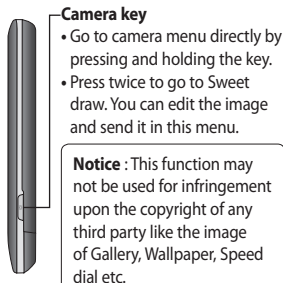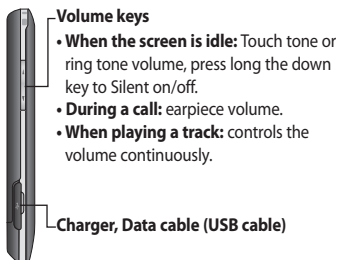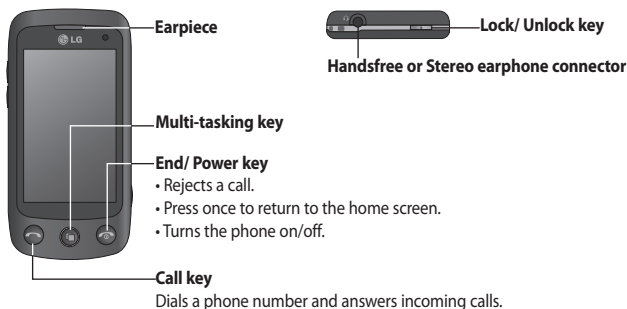


**WARNING:** Putting a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality.

# Installing the SIM and battery


## 1 Remove the battery cover and the battery

Slide up the battery cover and pull out the battery.

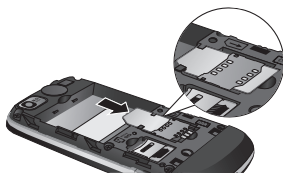


## 3 Install the battery

Insert the top of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.

 **WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 2 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure the gold contact area on the card is facing downwards. To remove the USIM card, gently pull it outwards.

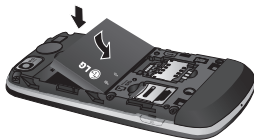

## Charging your phone Memory card

Slide back the cover of the charger connector on the side of your GS500v. Insert the charger and plug it into a mains electricity socket. Your GS500v must be charged until the "Battery full" message appears on the screen.

**NOTE:** The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight (or for up to 14 hours).





### Installing a memory card

You can expand the available memory space on your phone by using a memory card.

**NOTE:** A memory card is an optional accessory.

Slide the memory card into the slot at the top, until it clicks into place. Make sure the gold contact area is facing downwards.

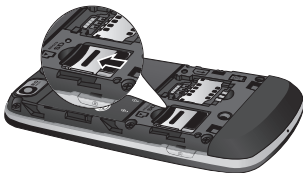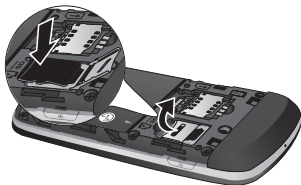

# Using your touch screen

## Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GS500v is not in use, it will return to the lock screen.

## Control the touch screen


The controls on the GS500v touch screen change dynamically depending on the task you are carrying out.

## Opening Applications

To open any application, simply touch its icon.

## Scrolling


Drag from side to side to scroll. On some screens, such as the call history list, you can also scroll up or down.

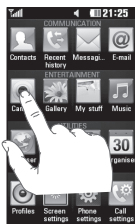

# Your home screen

You can drag and click what you need right away in all home screen types.


## Active

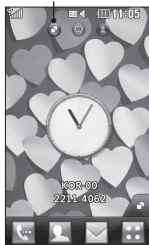


## Widget home screen -

When you touch  on the bottom right of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot where it was dropped.


## Active

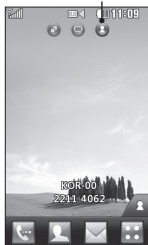

## Speed dial home

**screen** - When you touch , the speed dial list appears. You can call, send a message or edit the contact directly in this home screen.

## Active

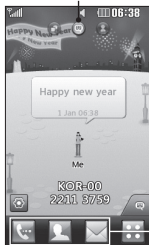


**Livesquare home screen** - On the Livesquare screen, You can easily make a call and send a message to the number allocated to an avatar. To use the call, messaging or contacts function, select an avatar and choose the **Quick key** icon you want to use.

You can drag all of the avatars by six and even send the message at once.














**TIP!** The User Interface is based on three types of Homescreen. To swap between the home screens just wipe quickly over the display from left to right, or from right to left.












# Your home screen

## Using the Multi - tasking function

Press the multitasking hard key  to open the **Multitasking** menu. From here you can view some applications that are running and access them with one touch.






## Viewing the status bar


Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed
	An alarm is set
	Customised Profile in use (The number in the icon will vary)
	Normal profile in use

Icon	Description
	Outdoor profile in use
	Silent profile in use
	Headset in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enabled for use
	<b>For incoming Push email</b> <b>Check Push email:</b> Touch <b>Games &amp; Applications</b> in the <b>Entertainment</b> and then touch <b>Applications</b> . <b>*Attention:</b> Depending on the region or SIM operator, user may not be able to use push e-mail and access WAP (or MMS) simultaneously.


# Calls

## Making a call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  or  to initiate the call.
- 4 To end the call, press the  or  key.


**TIP!** To enter + for making an international call, press and hold .

**TIP!** Press the power key to lock the touchscreen to prevent calls being made by mistake.

**TIP!** Touch  to make a video call.


## Making a call from your contacts

- 1 From the home screen touch  to open the Contacts.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more

than one for that contact to use. You can also touch  to initiate the call to the default number.

## Answering and rejecting a call

When your phone rings, touch the Smart key to answer the call.

To mute the ringing, slide up the cover. This will unlock the phone if it is locked, then tap . This is useful if you forgot to change your profile to Silent for a meeting. Touch **Reject** to reject an incoming call.





## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Contacts** in the COMMUNICATION tab and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your Contacts will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the Name field box and enter the first letter of the name of the contact required.

# Calls

## Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Touch  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

**NOTE:** You will be charged for each call you make.

## Viewing your call logs

Touch **Recent history** in the COMMUNICATION tab.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

## Using call divert

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all voice calls, when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Enter the number you want to divert to.
- 5 Touch **Request** to activate.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

## Using call barring

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call barring**.
- 3 Choose any or all of the five options:  
**All outgoing**  
**Outgoing international**  
**Outgoing international calls except home country**  
**All incoming**  
**Incoming when abroad**

- 4 Enter the call barring password. Please check with your network operator about this service.

**TIP!** Select **Fixed dial numbers** from the **Call settings** options to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

## Changing the common call setting

- 1 Touch **Call settings** in the SETTINGS tab.
- 2 Scroll and touch **Common settings**. From here you can adjust the settings for:
  - Call reject** - Slide the switch to ON to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.
  - Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Slide the switch left for **ON** or right for **OFF**.

**Minute minder** - Slide the switch left to **ON** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

**Save new number** - Select **Yes** to save a new number.

## Changing the video call setting

- 1 Touch **Call settings** in the SETTINGS tab.
- 2 Scroll and touch **Video call setting**. Select to use private picture or not and choose the private picture in the image files and save.

If you want to view yourself then you can choose Mirror on.

# Messaging

## Messaging

Your GS500v combines SMS and MMS into one intuitive and easy-to-use menu.

## Sending a message


- 1 Touch **Messaging** in the **COMMUNICATION** tab. And touch **New message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send when ready**.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.


## Entering text


There are five ways to enter text:

**Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.**

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

## T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

## Handwriting recognition

In Handwriting mode you simply write on the screen and your GS500v will convert your handwriting into your message. Select **Handwriting-Screen** or **Handwriting-Box** according to your preferred view.

## Setting up your email

Touch **E-mail** in the **COMMUNICATION** tab. If the email account is not set up, start the email set up wizard and finish it. You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

## Retrieving your emails


You can automatically or manually check your account for new emails. To check manually:

- 1 Touch **E-mail** in the **COMMUNICATION** tab.
- 2 Touch the account you want to use .

## Sending an email using your new account

- 1 Touch **New e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send** and your email will be sent.

## Changing your email settings

- 1 Touch **E-mail** in the **COMMUNICATION** tab.
- 2 Touch  and select **E-mail settings** and then you can adapt the following settings:

### **E-mail accounts**

#### **Preferred e-mail**

**Allow reply e-mail** - Choose to allow the sending of read confirmation messages.

**Request reply e-mail** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your GSS00v checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at any one time.

**Include message in Fwd. & Reply** - Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

**Auto retrieval in roaming** - Choose whether to retrieve your messages automatically when abroad (roaming).

# Messaging

**New e-mail notification** - Choose whether to be alerted to new emails.

**Signature** - Switch this feature **ON** and create an email signature.

**Priority** - Choose the priority level of your email messages.

**Mail sending size** - Set the maximum size of sending mail.

**E-mail counter** - Input the date you want. You can check emails you sent during that period.

## Message folders

There are five folders in Messaging menu.

**Inbox** - All the messages you receive are placed into your inbox.

**Drafts** - If you do not finish writing a message, you can save what you have done in this folder.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent items** - All the messages you have sent are placed in this folder.

**My folders** - Create folders to store your messages.

## Changing your multimedia message settings

Touch **Messaging** in the COMMUNICATION tab. Scroll and choose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to request and/or allow a delivery report.

**Read reply** - Choose to request and/or allow a reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on the screen.

**Creation mode** - Choose your message mode.

**Delivery time** - Choose how long to wait before a message is delivered.

**Multi msg centre** - Choose one from the list or add a new message centre.

## Social network services (SNS)

Your GS500v has SNS that lets you enjoy and manage your social network. Touch **Social network** menu and select the site as below: Facebook, Twitter and Myspace.

**TIP!** Facebook is a native application preloaded onto your phone, and easy to access. Twitter is a java application based on Java technology. Other applications access to the WAP(Wireless Application Protocol) services.

**NOTE:** An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

## Facebook

**Home:** Log in and you will see your friend's updated status. Input your comment about new status or check others. You can also write comments by selecting + icon.

**Profile:** You can select the Wall > Status updates and write the current status. See your info detail and upload the photo by touching Album > Upload Photo. Choose from Go to images or Take a picture, and then input some caption with images.

**Friends:** You can find many friends in SNS and view their status. Search your friends in facebook by selecting Search tap.

**Message:** You can see the Inbox/Sent folder, and write a SN message.

### **TIP! Using Facebook Feed Widget**




You can add the facebook feed widget to your home screen.

Drag the facebook feed widget from widget tray and touch **OK**.


You can also access the facebook application directly by touching up the feed widget.

# Camera

## Taking a quick photo





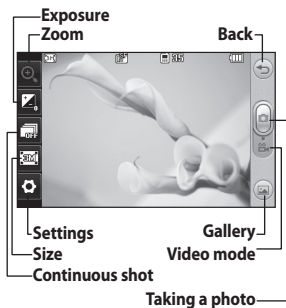



- 1 Press the  key on the right side of the phone.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo. You can also press the  key on the side of the phone firmly.

**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.



## After taking a photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen.

-  Touch to send the photo as a message, email, via Bluetooth or Blogger.
-  Touch to set a Home Screen, Contact, Startup, Shtdown image.
-  Touch to edit the photo.
-  Touch to rename the photo.
-  Touch to return to the previous menu.
-  Touch to delete the image.
-  Touch to take another photo immediately. Your current photo will be saved.
-  Touch to view a gallery of your saved photos.










# Video camera

## Making a quick video







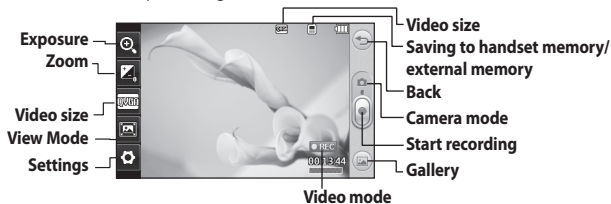

- 1 Press the camera key on the right side of the phone for a few seconds.

**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the camera key  on the phone once to start recording. Or touch the red dot .
- 4 **● Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the  a second time to stop recording.




## After making a video

-  Touch to play the video.
-  Touch to send the video as a **Message** or **Email** or by **Bluetooth** or **YouTube**.
-  Touch to edit the video.
-  Touch to rename the video.
-  Touch to return to the previous menu.
-  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to shoot another video immediately. Your current video will be saved.
-  Touch to view a gallery of saved videos and images.

# Your photos and videos

## Viewing your photos and videos

- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

**TIP!** Flick left or right to view other photos or videos.


## Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.


- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.


There are options within slideshows:

Touch  to go back.



 Touch to pause the slideshow on a particular photo.

 Touch again to resume playback.

 Touch to show random.

 Touch to increase or decrease the speed of the slideshow.

## Setting a photo as wallpaper

- 1 Touch Gallery in the ENTERTAINMENT tab.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch the screen to open the menu.
- 4 Touch .
- 5 You can change the size of the picture with .
- 6 When you are happy with the picture touch **Set**.
- 7 Choose from the options what you want to change: **All**, **Widget**, **Speed dial**.

# Multimedia

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory. To access the Multimedia menu, touch  select **My stuff** from ENTERTAINMENT tab. You can open a list of the folders that store all your multimedia files.



## Using an image

You can choose images to use as wallpapers and screensavers, or even to identify a caller.


- 1 Touch  then select **My stuff** from ENTERTAINMENT tab.
- 2 Touch **Images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose between:
  - Wallpaper** - Set a wallpaper for the key lock screen.
  - Contacts image** - Allocate an image to a person in your contacts list, so the picture is displayed when they call you.
  - Start up image** - Set an image to appear when you switch the phone on.
  - Shut down image** - Set an image to appear when you switch the phone off.

## Moving or copying an image

An image can be moved or copied between the phone memory and the memory card. You may want to do this to clear some space in one of the memories, or to safeguard your images against loss.

- 1 Touch  then select **My stuff** from ENTERTAINMENT tab.
- 2 Touch **My images**.
- 3 Touch .
- 4 Select **Move** or **Copy**.


## Using a sound

- 1 Touch  then select **My stuff** from ENTERTAINMENT tab.
- 2 Touch **Sounds**.
- 3 Select **Default sounds** or **Download sound**.
- 4 Select a sound and touch the play icon. It will start to play.
- 5 You can use the sound for various tones by selecting the **Use as** menu.
- 6 Choose between **Voice ringtone** and **Message tone**.

# Multimedia

## Music

Your LG GS500v has a built-in music player that lets you play all your favourite tracks.

To access the music player, touch  then select **Music** from ENTERTAINMENT tab. From here, you can access a number of folders:

**Recently played** - Plays the songs you have played recently.

**All tracks** - Contains all the songs you have on your phone except the pre-loaded default music.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains all the playlists you have created.

**Ringtone creator** - You can edit the song and save it if you want to set ringtone. It can be found in profile menu of settings.

**Shuffle tracks** - Play your tracks in a random order.

**NOTE:** The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

You can also use LG PC Suite. To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.
- 3 The All tracks folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 4 Touch **Done**.

## FM Radio

Your LG GS500v has an FM radio feature so you can tune into your favourite stations to listen on the move.


**NOTE:** You will need to attach your headphones to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

## Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't

have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

### To auto tune:

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.


**NOTE:** You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

## Resetting channels

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5MHz frequency.

# Organiser


## Adding an event to your calendar

- 1 Touch **Organiser** in the UTILITIES tab and select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
- 5 Enter **Note**.
- 6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

## Adding a memo

- 1 Touch **Memo** in the UTILITIES tab.
- 2 Touch **Add memo**.
- 3 Type your **memo**, then touch Save.

## Setting your alarm


- 1 Touch **Alarms** in the UTILITIES tab. **Widget alarm** should appear in the list as default and you can not delete it.
- 2 Touch **New alarm**.
- 3 Set the time you would like the alarm to sound in the **Time** field box.
- 4 Choose how you would like your alarm to repeat in the **Repeat** box.
- 5 Select **Alarm type** to select the type of alarm you want.
- 6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds, touch the sound, followed by .
- 7 Add a memo for the alarm in the **Memo** box.
- 8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or Snooze off.
- 9 Once you have set your alarm, touch **Save**.

**NOTE:** You can set up to 5 alarms including **Widget alarm**.

**TIP!** Slide the switch **ON/OFF** to the alarm to set it.

## Voice recorder

Use your voice recorder to record voice memos or other audio files.





Touch **Voice recorder** in the UTILITIES tab and select , then **Settings** to change Settings:

**Duration** – Set the recording duration. Choose from **No limit**, **MMS** or **1 minute**.


**Quality** – Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

**Memory in use** – Select where to save the audio files. Choose between External memory and Handset memory.

## Recording a sound or voice

- 1 Touch  to begin recording.
- 2 Touch  to pause recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.

## Using your calculator



- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.

## Converting a unit

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.

# Organiser


## Adding a city to your World clock

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **World clock**.
- 3 Touch the , followed by **New city**.
- 4 Scroll the globe, touch the area you want and choose the city on the map.
- 5 Or touch the  and type the name of the city you require in the search field box.

## Using the stopwatch

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Stopwatch**.
- 3 Touch **Start** on the bottom of the screen to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart or touch **Reset** to begin the time again.

## Sweet draw

Press  twice to capture the current image.


When **Auto Save** is Off, you can edit the image after capturing an image.

**Notice** : This function may not be used for infringement upon the copyright of any third party like the image of Gallery, Wallpaper, Speed dial etc.

## PC Suite

You can synchronise your PC with your phone. This will ensure all your important details and dates match, and also act as a back up to help put your mind at ease.

### Installing the LG PC Suite on your computer

- 1 From the home screen, touch  and then click **Connectivity** on the **SETTINGS** Tab.
- 2 Select **USB connection mode** and click **PC Suite**.
- 3 Connect handset and PC via USB cable and wait for a while.
- 4 Installation guide message will be displayed.
- 5 Insert the supplied CD-ROM or the click the download button to directly download the LG PC Suite program from the internet.
- 6 Click on the LG PC Suite Installer which will appear on your screen.

### Connecting your phone and PC

- 1 Select PC Suite mode in Connectivity menu and then connect the USB cable to your phone and your PC.
- 2 LG PC Suite will be automatically activated on your PC.

- 3 Your phone and PC are now connected.

### Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose whether to back up **Contents Data** and/or **Phonebook/Schedule/ToDo/Memo Data**. Select the location you want to back up the information to, or restore it from. Click **OK**.
- 4 Your information will be backed up.

### Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the Manage Photos, Videos or Music icon.
- 3 Images, audio files and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to manage files you no longer need.

### Synchronising your contacts

- 1 Connect the phone to your PC.

## PC Suite

- 2 Click on the **Contacts** icon.
- 3 Click **Sync Contacts** button your PC will now import and display all the contacts saved on your phone.
- 4 Click on **Menu** and select **Export**. You can now select where you want to save your contacts to.

### Synchronising the messages

- 1 Connect the phone to your PC.
- 2 Click on the Messages icon.
- 3 All your phone messages will be displayed in folders on the screen.
- 4 Use the toolbar at the top of the screen to edit and rearrange messages.

### Music Sync

This menu lets you add music to your GS500v. Before you start transferring music from your PC to your phone, make sure your computer has the following set-up and accessory is at hand:

- Microsoft Windows XP or Vista
- Windows Media Player 10 or above
- USB data cable
- microSD card (If you wish to use external memory as the music storage.)



#### WARNING

Do not disconnect your phone during the transfer.

### Transferring music using Windows Media Player

- 1 From the home screen select , **Connectivity** in the **Settings** tab.
- 2 Select **USB connection mode** and choose **Music sync**.
- 3 Connect your handset and PC using a compatible USB cable.
- 4 When you try to connect the handset to your PC, your handset will read: "Music Sync" followed by Connected.
- 5 The PC will prompt you to launch your preferred music management software.
- 6 Select Window Media Player.
- 7 Go to the Sync Tab, then drag and drop the music you wish to transfer into the **Sync List** panel.
- 8 Click on the **Start Sync** button. This starts the transfer process.




#### WARNING

Do not disconnect your phone during the transfer.

# The web

## Accessing the web

- 1 From the home screen select  then scroll to **Browser** on the UTILITIES tab.
- 2 To go straight to the browser home page, select **Home**. Alternatively, select **Enter address** and type in the URL, followed by **Connect**.

**NOTE:** You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.


## Adding and accessing bookmarks

For easy and fast access to your favourite websites, you can add bookmarks.


- 1 Touch **Browser** in the UTILITIES tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **Add bookmark**. Enter a name for your bookmark followed by the URL in the corresponding field box.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.

- 5 To access the bookmark simply touch the **Connect** icon next to the bookmark or touch the bookmark title and then touch **Connect**. You will be connected to your bookmark.

## Accessing a saved page

- 1 From the home screen select  then scroll to **Browser** on the UTILITIES tab.
- 2 Select **Saved pages**.
- 3 Select the page you want to view and it will open.

## Viewing your browser history

From the home screen select  then scroll to **Browser** on the UTILITIES tab. Select **History**.

# Settings

## Personalising your profiles

You can then change all the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message tone** settings and more.


## Changing your screen settings

- 1 From the home screen, select  then scroll to **Screen settings** on the SETTINGS tab.
- 2 You can choose the option menu from:
  - Handset theme** - You can choose Black or White(Cartoon styled UI).
  - Wallpaper** - Widget homescreen or Speed dial homescreen or Lock screen.
  - Livesquare** - Touch **Livesquare guide** to check its functions.
  - Top menu** - Choose the style of the top menu, choose **Zigzag** or **Scrolling** or **Screen by screen**.
  - Lock screen** - Choose the unlock type on the lock screen"
  - Dialling** - Adjust the number colour.
  - Font** - Adjust the font size and style.
  - Brightness** - Adjust the screen brightness.
  - Greeting message** - Choose ON or OFF and fill in the greeting message in the text field.

**Start-up/Shut down** - Choose the theme for your start-up/shut down screen.

## Changing your phone settings

Use the freedom of adapting the GS500v to your own preferences.

- 1 From the home screen, select  then scroll to **Phone settings** on the SETTINGS tab.
- 2 Select a menu from the list below:
  - Date & Time** - Adjust your date and time settings or choose to auto update the time when travelling or for daylight saving.
  - Power save** - Choose to switch the value power saving settings to **Off, Night only** or **Always on**.
  - Languages** - Change the language on your GS500v's display.
  - Motion silent** - Make the GS500v go into the mute or snooze settings by flipping it over when it is ringing.
  - Auto key lock** - Lock the keypad automatically on the home screen.
  - Security** - Adjust your security settings, including PIN code request, handset lock, Change codes and ATMT.
  - Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the


SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT code is "000000."

**Memory info** - See **Using memory manager**.

**Reset settings** - Restores all settings to their factory defaults.

**Handset information** - View GS500v technical information.

## Changing your touch settings

From the home screen select  then scroll to **Touch settings** on SETTINGS tab.

## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity** in the SETTINGS tab.

### Network settings

**Select network** - If you select Automatic, the GS500v automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select Manual, all the currently available networks are shown and you can select one of them for registration.

**Preferred lists** - You can add a preferred network to connect to. If the network is searching automatically, simply choose one from the network list and if not, add a new network manually.

**Internet profiles** - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Packet data conn.** - Choose when your device should be connected to network for packet data.

**USB connection mode** - Choose a Data service from the options and synchronise your GS500v using the LG PC Suite software to copy files from your phone.

If you use Music sync with Windows Media Player, select **Music sync** in this menu.

**Music sync** is only available for music content.


**Java settings** - Allows you to set profiles for connections made by Java programs and to view certificates.

# Settings

**Streaming settings** - Your network operator has already saved this information. You can edit it if you want to make changes.

## Using memory manager

Your GS500v has three available memories: the phone itself, the SIM Card and an external memory card (which you may need to purchase separately). You can use memory manager to determine how each memory is used and see how much space is available.

From the home screen select  then scroll to **Phone settings** on the SETTINGS tab. Select **Memory info**.

**Handset common memory** - View the memory available on your GS500v for Pictures, Sounds, Videos, MMS, Email, Java applications and others.

**Handset reserved memory** - View the memory available on your handset for SMS, Contacts, Calendar, Tasks, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

**SIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage setting** - Choose the location you prefer items to be saved to between Handset and External memory.

## Sending and receiving your files using Bluetooth

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.  
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GS500v will not automatically search for other **Bluetooth** devices. If not, your GS500v will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.


**TIP!** Check the progress bar to make sure your file is sent.

### To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.

- 2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in **My stuff**.

#### Changing your Bluetooth settings:

Touch **Bluetooth** in the SETTINGS tab. And select  and choose **Settings**.

#### Make your changes to:

**My device visibility** - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

**My device name** - Enter a name for your GS500v.

**Supported services** - Select how to use Bluetooth in association with different services.

**Remote SIM Mode** - Turn on or off.

**My address** - Show your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your GS500v and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and

**Visible**. You can change your visibility in the **Settings** menu.

- 2 Touch **Search**.
- 3 Your GS500v will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your GS500v will automatically switch to Headset profile.

# Accessories

There is a variety of accessories available for your mobile phone, which may be sold separately. You can select these optional items according to your personal communication requirements. Please consult your local dealer for availability. **(The items described below are supplied in the box)**

## Charger



## Data cable

To connect and synchronise your GS500v and PC.



## Battery



## Stereo headset



## User Guide



## NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

## Technical data

### **Ambient Temperatures**

**Max:** +55°C (discharging),  
+45°C (charging)

**Min:** -10°C

Bluetooth QD ID B016193

“LG Service Center”

by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd.,

Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Sun 07:00 - 19:00

Call center : 0-2878-5757

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GS500v

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.3.2/ EN 301 489-24 V1.4.1  
EN 300 328 V 1.7.1  
EN 60950-1 : 2001  
EN 50360:2001/EN62209-1:2006  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director 08. Feb. 2010

LG Electronics Inc. – EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

  
Signature of representative

## Trouble shooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Solutions</b>
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure the USIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the Network Operator coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	Contact your Service centre.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New USIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

## Trouble shooting

<b>Message</b>	<b>Possible causes</b>	<b>Possible Solutions</b>
Phone cannot be switched on	On/Off key not pressed long enough	Press the On/Off key down for at least two seconds.
	Battery empty	Keep charger attached for a longer time.
	Battery contacts dirty	Clean the contacts.
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger Battery defective	Only use original LG accessories. Replace battery.
Number not permitted	The Fixed dial number function is on.	Check settings.



Digital Mobile

สำหรับส่งคืนบริษัท

# Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : \_\_\_\_\_ บัตรรับประกันเลขที่ : \_\_\_\_\_  
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): \_\_\_\_\_ เลขเครื่อง : \_\_\_\_\_  
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : \_\_\_\_\_  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : \_\_\_\_\_  
(อังกฤษ) : \_\_\_\_\_

วัน เดือน ปี เกิด : \_\_\_\_\_ เพศ : \_\_\_\_\_  
(Date of Birth) (Gender)

ที่อยู่ : \_\_\_\_\_  
(Address)

อาชีพ : \_\_\_\_\_ โทรศัพท์ : \_\_\_\_\_ E-mail : \_\_\_\_\_  
(Occupation) (Telephone No.)

ชื่อจากร้าน : \_\_\_\_\_  
(Dealer's Name)

**ศูนย์บริการข้อมูล**

Customer Information Center 0-2878-5757 or

**1-800-**

**L G L G L G  
5 4 5 4 5 4**

**โทรฟรี**

[www.lge.co.th](http://www.lge.co.th)

**บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด**

75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26 คลองตัน

คลองเตย กรุงเทพฯ 10110

ศูนย์บริการข้อมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

**LG Electronic (Thailand) CO., Ltd**

75/81 Richmond Bldg, 22<sup>nd</sup> FL, Sukumvit 26,

Klongton, Klongtoey Bangkok 10110

Customer Information Center

Tel 0-2878-5757 Fax. 0-2466-0250

 **LG Electronics (Thailand)**

ใบอนุญาตเลขที่ ปน.(ต)/2117 ปณจ. พระโขนง  
ค้าฝากส่งในประเทศไม่ต้องหนักตราไปรษณียากร



## บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

72/127 ถนนสมเด็จพระเจ้าตากสิน  
แขวงบুদ্ধโล เขตธนบุรี  
กรุงเทพ 10600

## เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น

(This warranty is valid only in Thailand)

- 1) บัตรรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น
- 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.
- 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบหรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่องจักรวิธี บริษัทฯ ยินดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย
- 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts.

## เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับแต่งตั้ง
- 1) If repair are not undertaken by LG Service Center or Authorize Service Center.
- 2) การใช้ผลิตภัณฑ์ที่ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย
- 2) Damage to accessory due to misuse.
- 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้ ฟ้าผ่า, ใช้กระแสไฟฟ้าผิดประเภทและอุบัติเหตุอื่นๆที่มนุษย์ไม่สามารถควบคุมได้
- 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control.

ศูนย์บริการลูกค้า ( สำนักงานใหญ่ ) : เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงมกศโล เขตธนบุรี กรุงเทพฯ 10600

โทร : 0-2878-5757

แฟกซ์ : 0-2466-0250



Digital Mobile

สำหรับส่งคืนบริษัท

## Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : ..... บัตรรับประกันเลขที่ : .....  
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน  
นับจากวันที่ซื้อ  
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): ..... เลขเครื่อง : .....  
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : .....  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : .....  
(อังกฤษ) : .....

วัน เดือน ปี เกิด : ..... เพศ : .....  
(Date of Birth) (Gender)

ที่อยู่ : .....  
(Address)

อาชีพ : ..... โทรศัพท์ : ..... E-mail : .....  
(Occupation) (Telephone No.)

ชื่อจากร้าน : .....  
(Dealer's Name)

ที่อยู่ร้าน : .....  
(Dealer's Address)

ประทับตราร้านค้า



