



繁體中文  
簡體中文  
ENGLISH

GM360i 使用手冊

使用手冊  
GM360i

LG Electronics



P/N : MMBB0383432(1.0) **WR**

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B016583



此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。



## GM360i 使用手冊

恭喜您購買了 LG 先進輕巧的 GM360i 手機，它配合最新的數碼流動通訊科技而設計。

# 內容

了解您的手機.....	6	通訊錄.....	22
手機展開.....	7	搜尋聯絡人.....	22
安裝智能咭和電池.....	8	新增聯絡人.....	22
為手機充電.....	9	建立群組.....	22
記憶咭.....	10	變更聯絡人設定.....	23
使用觸控螢幕.....	11	檢視資訊.....	23
觸控螢幕提示.....	11	訊息.....	24
控制觸控螢幕.....	11	訊息.....	24
桌面.....	13	發送訊息.....	24
快捷鍵.....	14	輸入文字.....	24
狀態列.....	15	T9 模式.....	24
從狀態列變更狀態.....	16	手寫識別.....	24
使用多項工作功能.....	16	設定您的電子郵件.....	25
通話功能.....	17	擷取電子郵件.....	25
撥打電話.....	17	使用新帳戶發送電子郵件.....	25
透過通訊錄撥打電話.....	17	變更電子郵件設定.....	25
接聽來電和拒接來電.....	17	訊息資料夾.....	26
通話中選項.....	18	變更文字訊息設定.....	26
快速撥號.....	19	變更多媒體訊息設定.....	27
通話期間撥打第二個電話.....	19	變更其他設定.....	27
檢視通話記錄.....	19	社交網絡服務 (SNS).....	28
使用來電轉駁.....	20	Facebook.....	28
使用通話限制.....	20	Linkbook.....	29
變更一般通話設定.....	21		

# 內容

<b>相機</b> .....	<b>30</b>	影片 .....	40
瞭解取景器 .....	30	觀看影片 .....	40
快速拍照 .....	31	發送錄像片段 .....	41
拍照之後 .....	31	遊戲及應用程式 .....	41
使用進階設定 .....	31	玩遊戲 .....	41
		文件 .....	41
<b>視像攝錄機</b> .....	<b>33</b>	將檔案傳送到手機 .....	41
瞭解取景器 .....	33	其他 .....	41
快速製作影片 .....	34	音樂 .....	42
製作影片之後 .....	34	將音樂傳送至手機 .....	42
使用進階設定 .....	35	播放歌曲 .....	42
		建立播放清單 .....	43
<b>相片及影片</b> .....	<b>36</b>	FM 收音機 .....	43
檢視相片及影片 .....	36	搜尋電台 .....	43
從影片中擷取圖像 .....	36	重設頻道 .....	43
以幻燈片放映形式檢視相片 .....	36		
將相片設定為牆紙 .....	36	<b>記事簿</b> .....	<b>44</b>
編輯您的相片 .....	37	新增事件至日曆 .....	44
為相片加入效果 .....	37	在您的工作項目列表中新增項目 .....	44
		使用日期搜尋器 .....	44
<b>多媒體</b> .....	<b>39</b>	新增備忘錄 .....	45
圖片 .....	39	設定鬧鐘 .....	45
發送相片 .....	39	以繪圖面板新增備忘錄 .....	45
使用圖像 .....	39	記錄畫面 .....	46
列印圖像 .....	39	語音記錄器 .....	46
移動或複製檔案 .....	40	錄製聲音或語音 .....	46
聲音 .....	40	使用計算機 .....	46
使用聲音 .....	40		

轉換單位.....	47	使用記憶體管理.....	54
新增世界時鐘城市.....	47	變更連接設定.....	54
使用秒錶.....	47	使用藍芽發送和接收檔案.....	55
<b>電腦同步.....</b>	<b>48</b>	變更您的藍芽設定.....	55
在電腦上安裝 LG PC Suit.....	48	同其他藍芽裝置配對.....	56
連接手機和電腦.....	48	使用藍芽耳機.....	56
備份與還原手機資訊.....	48	Wi-Fi.....	56
在電腦上檢視手機檔案.....	48	軟件升級.....	57
同步處理通訊錄.....	49	<b>配件.....</b>	<b>58</b>
同步訊息.....	49	<b>技術數據.....</b>	<b>59</b>
將手機用作音樂同步裝置.....	49	<b>安全及有效使用準則.....</b>	<b>60</b>
<b>網絡功能.....</b>	<b>50</b>		
存取網絡.....	50		
新增並存取書籤.....	50		
使用 RSS 閱讀器.....	50		
儲存網頁.....	51		
存取已儲存的網頁.....	51		
檢視瀏覽器記錄.....	51		
變更網頁瀏覽器設定.....	51		
將手機用作數據機.....	51		
存取 Google.....	52		
<b>設定.....</b>	<b>53</b>		
個人化情景模式.....	53		
變更屏幕設定.....	53		
變更手機設定.....	53		

# 了解您的手機



**⚠ 警告：**手機置於口袋中時，若將較重物體置於手機上，或坐在手機上會損壞手機的 LCD 和觸控螢幕功能。

## 手機展開



側鍵


- 當屏幕處於桌面狀態時：鈴聲和觸控音量。
- 通話中：耳機音量。

相機鍵

- 按住該鍵可直接跳至相機功能表。



充電器、纜線

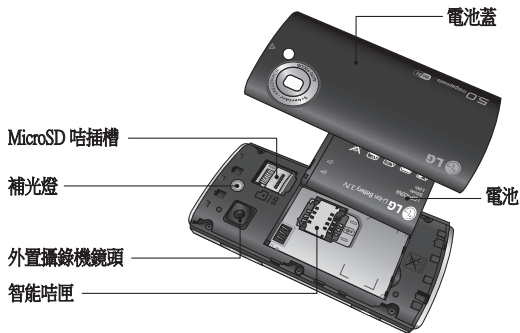

電池蓋

MicroSD 咭插槽

補光燈

外置攝錄機鏡頭

智能咭匣

電池

# 安裝智能咭和電池


## 1 取下電池蓋

向下滑動電池蓋並取下。



## 2 安裝智能咭

將智能咭滑入智能咭固定座中，確保智能咭的金屬接觸面朝下。安裝智能咭之前，請確保取出手機電池。輕輕向外拉動以取下智能咭。

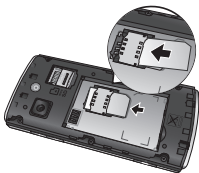

**警告：**請勿使用指甲取出電池。

**警告：**手機開機時，不要取下電池，因為這樣會損壞手機。

## 3 安裝電池

首先，請將電池左側插入電池格上方邊緣。

請確保電池觸點對準手機觸點。按住電池右側，直到卡緊為止。



## 為手機充電

移除 GM360i 手機側面的充電器插槽蓋，連接旅行充電器（充電器）和隨附的 USB 線。將 USB 線連接到手機並插入電源插座中。您的 GM360i 手機必須充電至屏幕上顯示「電池電量已滿」的訊息。

**備註：**第一次充電時必須將電池完全充電，以提高電池壽命。忽略第一次充電時顯示的「電池電量已滿」訊息，並繼續為手機充電一個晚上。



## 記憶咭

### 安裝記憶咭

使用 MicroSD 記憶咭，擴展手機的記憶體空間。

**注意：**記憶咭是選購配件。


- 1 打開在手機左側的 MicroSD 卡槽蓋。



- 2 將 MicroSD 咭滑下卡槽，直至壓入定位。並確保金屬接觸面朝下。

### 格式化記憶咭

您的記憶咭可能已格式化。如果尚未格式化，則需要在使用記憶咭之前進行格式化。

- 1 從桌面選擇 ，然後選擇「設定」標籤上的手機設定。
- 2 點按記憶體資訊，然後選擇外置記憶咭。
- 3 點按格式化並確認您的選擇。
- 4 如果已設定密碼，請輸入密碼。將會格式化記憶咭並隨時可供使用。

**注意：**若記憶咭中包含內容，格式化記憶咭之後其中的資料夾結構會發生變化，因為全部檔案將被刪除。

# 使用觸控螢幕

## 觸控螢幕提示

- 要選擇某個項目，請點按圖示中央。
- 點按觸控螢幕時無需太大力。觸控螢幕非常敏感，輕輕按中即可。
- 使用指尖點按所需的選項。請注意不要碰到其他按鍵。
- 不使用 GM360i 手機時，系統會返回鎖定屏幕。

## 控制觸控螢幕

GM360i 的觸控屏幕可隨您正執行的工作而改變控告方式。

## 開啟應用程式

要開啟任何應用程式，只需點按此應用程式的圖示。



## 捲動

左右拖動即可捲動。在某些螢幕上（例如，通話記錄清單），您亦可上下捲動。




# 使用觸控螢幕

## 鎖定螢幕筆觸

鎖定螢幕筆觸 - 將筆觸設為 9 種擴展的捷徑應用程式。當用戶在螢幕上執行筆觸時，鎖定螢幕上的筆觸允許用戶解鎖手機並直接執行應用程式。

要設定此功能，

- 1 選擇  - 螢幕設定 - 鎖定畫面筆觸

- 2 將從螢幕底部首選的筆觸拖放至想要指定給它們的應用程式。

**提示！** 繪製 ? 形狀，轉至鎖定螢幕中的鎖定螢幕筆觸功能。


**提示！** 此功能只能用於備用螢幕。





# 桌面

您可立即在所有桌面類型中拖動並點按所需內容。



**Widget 桌面** - 點按屏幕右下方的  時，手機介面控制板會出現。拖動 Widget 進行註冊時，將在放置 Widget 的位置建立 Widget。

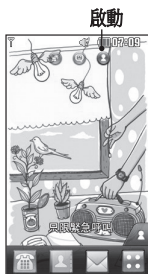

**快速撥號桌面** - 點按  時，快速撥號列表會出現。您可透過此桌面直接進行通話、發送訊息或編輯通訊錄。



**Livesquare 桌面** - 在 Livesquare 屏幕上，您可輕鬆地進行通話或者發送訊息至分配給替身的號碼。若要使用通話、訊息或通訊錄功能，請選擇替身並選擇想要使用的快速按鍵圖示。

**提示！** 用戶介面基於三種類型的桌面。若要在不同桌面之間切換，只需在顯示屏上從左到右或從右到左快速點按。

# 桌面

## 快捷鍵

桌面上的快捷鍵提供簡單、單觸式操作存取最常用的功能。



點按以顯示觸控撥號盤，以撥打電話。



點按可開啟通訊錄。若要搜尋撥號號碼，請使用觸控板在屏幕頂部輸入聯絡人名稱。您亦可以新增通訊錄或編輯現有通訊錄。



點按可存取訊息功能表。您可在此處建立新 SMS 或 MMS，或檢視訊息資料夾。



點按以開啟完整的上層功能表，此功能表分為四個類別。

## 狀態列


狀態列透過使用多種圖示，指明如訊號強度、新訊息和電池電量等情況，亦告訴您藍芽或 GPRS 是否已啟動。

下表解釋了狀態列中最有可能看到的圖示的含義。

圖示	說明
	多項工作
	網絡訊號強度（列數會有變化）
	無網絡訊號
	電池電量
	電池已耗盡
	新文字訊息
	新語音訊息
	訊息收件匣已滿
	發送訊息失敗
	多媒體訊息發送失敗
	鬧鐘已設定

圖示	說明
	正在使用自訂情景模式（圖示編號將會發生變化）
	正在使用標準情景模式
	正在使用戶外情景模式
	正在使用靜音情景模式
	耳機正在使用
	通話線路已轉接
	正在使用 EDGE
	漫遊
	飛航模式已開啟
	藍芽已啟動
	BGM 播放
	BGM 暫停
	記憶咭已啟用


## 桌面


圖示	說明
	<p>有新 Push email 檢查 Push email： 觸控娛樂中的遊戲及應用程式 後再選應用程式。</p> <p>* 注意：用戶可能不可以同時 使用 Push Email 及存取 WAP（ 或多媒體訊息），視乎不同地 區及智能咭網絡商而定。</p>

### 從狀態列變更狀態

點按狀態列中心位置以開啟狀態摘要。將顯示當前時間、網絡、服務 ID、電池、手機記憶體、外置記憶體、網絡設定、MP3 和藍芽狀態。您可在此處設定情景模式，播放/暫停 MP3 以及啟用/暫停藍芽功能。

### 使用多項工作功能


按多項工作硬鍵  開啟多項工作功能表。您可從此處檢視已執行的所有應用程式並透過點按操作進行存取。

當某些應用程式正在使用時 (例如，遊戲或 FM 廣播)，則  會顯示在狀態列中。

# 通話功能



## 撥打電話

- 1 點按  開啟鍵盤。
- 2 使用鍵盤輸入號碼。
- 3 點按  開始通話。
- 4 按  鍵完結通話。

**提示！** 要在撥打國際電話時輸入「+」，請按住 。



**提示！** 按住電源鍵鎖定觸控屏幕，以防不小心進行撥號。

## 透過通訊錄撥打電話

- 1 從桌面點按  以開啟通訊錄。
- 2 點按屏幕頂部的「名稱」欄位方塊，使用按鍵輸入想要撥打的聯絡人的前幾個字母。
- 3 從節選的列表中，點按想要撥打的聯絡人旁邊的「通話」圖示。如果該聯絡人存在多個號碼，將使用預設號碼。
- 4 如果聯絡人存在多個號碼，您也可以點按通訊錄名稱並選擇想要使用的號碼。您還可以點按  啟動與預設號碼的通話。


## 接聽來電和拒接來電

手機響鈴後，點按  按鍵接聽來電。

若要靜音鈴聲，請向上滑動滑蓋。如果手機已鎖定，此操作將解除鎖定手機，然後點按 。如果在開會時忘記將網絡設定變更為靜音，此功能將十分有用。點按  拒接來電。

# 通話功能

## 通話中選項

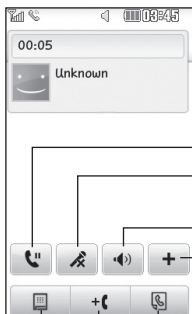


**保留** - 點按  以保留通話。


**靜音** - 點按  以關閉麥克風，這樣，通話對方就聽不到您的聲音。

**揚聲器** - 點按  以開啟揚聲器。

**選項** - 點按  以顯示更多通話中選項清單。

點按  可在通話時搜尋通訊錄。

點按  以新增另一個聯絡人至通話中。

點按  可開啟數字按鍵進行其他電話。此功能還允許您導覽具有編號選項的功能表，例如撥打緊急呼叫中心等自動化電話服務。

**提示！** 要捲動選項清單或通訊錄清單，請點按螢幕上顯示的最後一個項目並用指尖向上滑動螢幕。該清單將會向上移動以便顯示更多項目。

## 快速撥號

您可以為常撥聯絡人指定一個快速撥號號碼。

- 1 選擇「通訊」標籤上的通訊錄，然後選擇快速撥號。
- 2 您的語音信箱已設定為快速撥號 1。您無法變更此設定。點按任何其他號碼，為其指定快速撥號聯絡人。
- 3 將開啟通訊錄。透過點按相應的電話號碼，選擇要將其指定給此號碼的聯絡人。若要尋找某個聯絡人，請點按「名稱」欄位方塊，然後輸入所需聯絡人名稱的首字母。

## 通話期間撥打第二個電話

- 1 初始通話期間，點按  並鍵入撥號號碼。
- 2 點按  開始通話。
- 3 兩個通話均會在通話屏幕中顯示。並且，將會鎖定初始通話並保留來電者。
- 4 在兩個通話中轉換時，點按  或已保留電話的號碼。
- 5 若要結束其中一個或兩個通話，請按  並依次選擇結束、所有通話、保留或使用中通話。

**提示！** 點按任何單個通話記錄項目，檢視呼叫的日期、時間和持續時間。

**備註：** 您撥打的每一個通話均需收費。

## 檢視通話記錄

點按「通訊」標籤中的最近記錄。

**提示！** 點按任何單個通話記錄項目，檢視呼叫的日期、時間和持續時間。

# 通話功能

## 使用來電轉駁

- 1 點按「設定」標籤中的通話設定。
  - 2 點按來電轉駁。
  - 3 可選擇線路繁忙時、無人接聽、無法接通時，或所有語音通話。
  - 4 輸入想要轉駁到的號碼。
  - 5 點按要求啟動服務。
- 注意：**轉駁電話需要收費。請聯絡網絡供應商，瞭解詳情。

**提示！** 要關閉所有來電轉駁，請從來電轉駁功能表中選擇全部停用。

## 使用通話限制

- 1 點按「設定」標籤中的通話設定。
- 2 點按通話限制。
- 3 在六個選項中，選擇其中部份項目或所有項目：
  - 所有撥出通話**
  - 國際通話撥號**
  - 本地以外的國際撥號**
  - 所有來電**
  - 國際漫遊時來電**
  - 停用全部**
- 4 輸入通話限制密碼。請向您的網絡供應商了解此服務詳情。

**提示！** 從通話設定選項中選擇固定撥號號碼，開啟並編譯可從此手機呼叫的號碼列表。您需要從您的網絡商處得到一個 PIN2 碼。僅固定撥號清單中包含的號碼可從手機呼叫。

## 變更一般通話設定

- 1 點按「設定」標籤中的通話設定。
- 2 捲動並點按通用設定。您可從此處調整以下選項的設定：

**來電拒接** - 滑動開關至開啟以反白顯示拒接清單。您可點按文字框以選擇所有通話、通訊錄或群組、來自無名稱記錄號碼（不在通訊錄中的號碼）或無來電號碼的通話。點按儲存變更設定。

**發送我的號碼** - 選擇撥出通話時，是否顯示您的號碼。

**自動重撥** - 向左滑動開關為開啟，或向右為關閉。

**接聽模式** - 選擇是否使用發送鍵或任意鍵接聽來電。

**分鐘提示** - 向左滑動開關開啟此功能，以便在通話時聽到分鐘提示音。

**藍芽接聽模式** - 選擇免提聽筒，可使用藍芽耳機接聽來電，或選擇手機，便可透過按手機上的任一按鍵接聽來電。

**儲存新號碼** - 選擇是儲存新號碼。

# 通訊錄

## 搜尋聯絡人

有兩種方法可搜尋通訊錄內的聯絡人：

- 1 點按「通訊」標籤中的 通訊錄。
- 2 點按搜尋。
- 3 您可看到通訊錄列表。在「名稱」欄位鍵入聯絡人名稱的首字母，功能表將跳至該字母所在的列表區域。

**提示！** 點按「名稱」欄位時將顯示字母按鍵。

## 新增聯絡人


- 1 在「通訊」標籤中點按通訊錄，然後點按新增聯絡人。
- 2 選擇是否將聯絡人儲存到手機或智能咭。
- 3 輸入您的姓氏及名字。
- 4 您最多可為每個聯絡人輸入五個不同的號碼。每個項目已預設手機號碼、住宅號碼、辦公室號碼、傳呼機號碼及傳真號碼。
- 5 新增電郵地址。您最多可為每個聯絡人輸入兩個不同的電郵地址。

- 6 將聯絡人編入一個或多個群組。您最多可為每個聯絡人指定三個群組。您可以選擇無群組、家庭、朋友、同事、學校或重要人士。
- 7 您亦可新增鈴聲、生日、週年紀念、主頁、住宅地址、公司名稱、職位、公司地址、備忘錄及 Livecon。
- 8 點按儲存，儲存通訊錄資料。

**提示！** 選擇此圖示便能使用生日 widget 。

儲存在通訊錄的生日日期便會按時間順序，將該月份中即將來臨的生日日期顯示出來。此 widget 亦設有通話、訊息及電子郵件等功能，方便您與載有生日日期的聯絡人通訊。

## 建立群組

- 1 點按「通訊」標籤中的通訊錄。再點按群組。
- 2 點按新增群組或點按  後選擇新增群組。
- 3 為您的新群組輸入名稱。您亦可為群組指定鈴聲。
- 4 點按儲存。

**注意：**若要刪除某群組，指定給該群組的聯絡人將不會遺失。他們仍儲存在通訊錄中。

## 變更聯絡人設定

您可以按自己的喜好，調整通訊錄設定。

- 1 在「通訊」標籤中點按通訊錄，然後點按設定。
- 2 您可從此處對以下設定進行調整：

**通訊錄列表設定** - 更改通訊錄位置、名稱顯示及快速命令鍵設定。

**複製** - 將通訊錄從手機複製到智能咭或者從智能咭複製到手機。您可一次選擇一個或全部聯絡人。

**移動** - 此操作與「複製」一樣，但通訊錄僅儲存至移動的位置。

**經藍芽發送所有聯絡人** - 使用藍芽將所有聯絡人發送至其他裝置。如果選中此選項，系統將會提示您開啟藍芽。

**備份通訊錄** - 請參閱備份和還原手機資訊。

**還原通訊錄** - 請參閱備份和還原手機資訊。

**清除通訊錄資料** - 刪除您的所有通訊錄。如果確定要刪除通訊錄，請選擇手機或智能咭，然後點按是。

## 檢視資訊

- 1 在「通訊」標籤中點按通訊錄，然後點按資訊。
- 2 您可從此處檢視服務撥號號碼、本手機號碼、記憶體資訊。（顯示您的記憶體資料）及我的個人檔案。

**提示！** 要新增個人名片，在「通訊」標籤中點按通訊錄，然後點按資訊，選擇我的個人檔案並輸入要為聯絡人提供的任何詳情。點按儲存以完成操作。

**提示！** 透過 Facebook 的儲存通訊錄，您可以查看 Facebook 使用者的個人資訊及狀態，包括名稱、聯絡號碼、電子郵件及相片。使用者不能點按屏幕上的重新整理，以編輯及更新有關資訊。


更多關於在 Facebook 儲存通訊錄的資訊，請參閱第 29 頁的 Linkbook。


# 訊息

## 訊息

GM360i 將文字訊息和多媒體訊息結合在一個直觀易用的功能表中。

## 發送訊息

- 1 在「通訊」標籤中點按訊息。然後點按新訊息以開始編寫新訊息。
- 2 點按附加以新增圖像、影片、聲音、常用範本等。
- 3 點按屏幕底部的收件者以輸入收件者。然後，輸入號碼或點按  以選擇聯絡人。您還可新增多個聯絡人。
- 4 完成後，請點按發送。


 **警告：**如您新增圖像、影片或音頻檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

## 輸入文字


有五種方法輸入文字：

按鍵、鍵盤、手寫屏幕、手寫方塊、雙格區手寫輸入。

您可透過點按  和輸入法模式選擇輸入法模式。

點按  換成 T9 模式。僅當選擇按鍵作為輸入法模式時，才會顯示該圖示。

點按  以選擇寫入語言。

點按  以變更數字、符號和文字輸入。  
使用 Shift 鍵在大小寫輸入之間變更。

## T9 模式

T9 模式使用內置的字典，根據按鍵順序識別您寫入的單字。它會預測您正在輸入的字詞並顯示建議。

## 手寫識別

在手寫模式下，您只需要在屏幕上寫入要輸入的字，GM360i 手機即會將手寫內容轉換為訊息。選擇手寫屏幕或手寫方塊，視您的檢視偏好而定。

## 設定您的電子郵件

點按「通訊」標籤中的電郵。

如果尚未設定電子郵件帳戶，請啟動電子郵件設定精靈並完成設定。

您可透過選擇  檢查並編輯設定。您亦可查看建立帳戶時自動填充的其他設定。

## 擷取電子郵件


您可以自動或手動檢查帳戶中的新電郵。要手動檢查郵件：

- 1 點按「通訊」標籤中的電郵。
- 2 點按要使用的帳戶。
- 3 選擇收件匣
- 4 在選項功能表中，選擇擷取或同步以接收電子郵件。

## 使用新帳戶發送電子郵件

- 1 點按新電子郵件，將開啟一個新的電子郵件。
- 2 完成訊息編寫。
- 3 點按發送，您的電子郵件便會發出。

## 變更電子郵件設定

- 1 點按「通訊」標籤中的電郵。
- 2 點按  並選擇電子郵件設定，即可調整以下設定：

### 電子郵件帳戶

#### 優先電子郵件

**允許回覆電郵** - 選擇以允許發送讀取確認訊息。

**要求回覆電郵** - 選擇是否要求讀取確認訊息。

**擷取時隔** - 選擇 GM360i 查收新電子郵件訊息的頻率。

**擷取數量** - 選擇任何一次擷取的電子郵件數量。

**轉寄與回覆時加入原始訊息** - 選擇回覆中是否加入原始訊息。

**包括附件** - 選擇是否在任何回覆中加入原始附件。

**在漫遊時自動擷取** - 選擇漫遊時是否自動擷取訊息。

**新電子郵件通告** - 選擇收到新電郵時，會否有響鬧提示。

**簽名** - 開啟本功能並新增電子郵件簽名。

**重要性** - 選擇電郵的優先等級。

## 訊息

**最大發送大小** - 設定發送電子郵件的最高大小。

**電子郵件計數器** - 輸入需要的日期。您可檢查在此期間發送的電子郵件。

### 訊息資料夾

「訊息」功能表中共有五個資料夾。

**收件匣** - 收到的所有訊息將置於您的收件匣中。

**草稿** - 如果尚未完成訊息編寫，則可將已編寫的部份儲存於該資料夾中。

**寄件匣** - 這裡是發送中的訊息之臨時存放資料夾。

**已發送項目** - 所有已發送出去的訊息會置於此資料夾中。

**我的資料夾** - 建立資料夾以儲存訊息。

### 變更文字訊息設定

在「通訊」標籤中點按訊息，然後點按設定。選擇文字訊息。您可對以下各項進行變更：

**文字訊息中心** - 輸入訊息中心的詳細資料。

**發送報告** - 向左滑動開關，接收已發送訊息之確認訊息。

**有效時期** - 選擇訊息儲存在訊息中心的時間。

**訊息類型** - 將文字轉換成文字、語音、傳真、X.400 或電郵。

**字元編碼** - 選擇字元的編碼方式。這將影響到您的訊息大小，進而影響資料費用。

**發送長文字時設為** - 選擇將長文字作為多個文字訊息或多媒體訊息發送。

## 變更多媒體訊息設定

在「通訊」標籤中點按訊息。捲動並選擇設定，然後選擇多媒體訊息。您可對以下各項進行變更：

**接收模式** - 選擇本地網絡或漫遊網絡。如果選擇手動，將僅收到多媒體訊息通知，然後選擇是否進行完整下載。

**發送報告** - 選擇要求及允許報告。

**閱讀回覆** - 選擇要求及允許回覆。

**重要性** - 選擇多媒體的優先等級。

**有效時期** - 選擇訊息儲存在訊息中心的時間。

**投影片播放時間** - 選擇投影片預設在螢幕上顯示的時間。


**建立模式** - 選擇自由建立多媒體訊息或規舉地建立。

**發送時間** - 選擇隔多久發送訊息。

**多媒體訊息中心** - 選擇或新增一個多媒體訊息中心。

## 變更其他設定

在「通訊」標籤中點按訊息。然後點按設定。

**留言信箱** - 點按  新增留言信箱服務（只適用在沒有任何設定時）。請聯絡網絡商，瞭解他們所提供服務的更多詳情。

**服務訊息** - 選擇要接收還是阻止服務訊息。您亦可透過在服務安全選項中建立受信任和不受信任的寄件者列表來設定訊息安全。

**訊息計數器** - 選擇以設定訊息計數時段。

**資訊服務** - 選擇是否開啟/關閉區域廣播並選擇頻道和語言。

## 訊息

### 社交網絡服務 (SNS)

您的 GM360i 備有社交網絡服務，讓您享用及管理社交網絡。您可以更新自己的社交網絡狀態，也可檢視朋友的更新。

點按社交網絡功能表，選擇下列網站：Facebook、Twitter 或 Myspace。

**提示！** 您的電話已預載 Facebook 程式，方便存取。Twitter 是基於 Java 技術的一個 java 應用程式。其他可連接 WAP（無線應用通訊協定）服務的應用程式。

**注意：** SNS 功能是資料密集性應用程式。連接及使用網上服務可能需要額外付費。請向網路提供商查詢資料費用。

### Facebook

**首頁：**登入後便可檢視朋友的最新情況。輸入您的最新狀態或查看他人的近況。點按選項，選擇「重新整理」、「最新動態篩選」（狀態更新，相片）、「刪除」或「設定」。您亦點選「+」鍵，編寫回應。

**個人檔案：**選擇「留言板」>「狀態更新」，然後寫入現時情況。檢視自己的個人資料，然後點按「相片」>「上載相片」以上載相片。選擇前往「前往影像」或「拍照」，然後在圖像上鍵入相片說明文字。

**朋友：**您可以在社交網絡上找到很多朋友，檢視他們的狀態。選擇搜尋功能以搜尋您的朋友。

**訊息：**可以顯示您的所有社交網絡訊息。您可以檢視收件匣及寄件匣，亦可編寫社交網絡訊息。

**提示！** 您可使用 Facebook Feed Widget 將 facebook feed widget 加入至您的桌面。從 widget 界面中拖動 facebook feed widget，然後點按確定。

如果 facebook widget 已經位於主屏幕上，將會顯示在您的 SN 網站最新的 3 個 feed。也可以點按 feed widget，直接進入 facebook 應用程式。


在社交網絡(SNS)設定中，可以選擇開啟或關閉社交網絡功能(Social Networking)、登入及刪除（登出）選項。在自動連線功能表，可以選擇在特定時間中，自動開啟或關閉社交網絡功能。

## Linkbook

如已設定社交網絡為開啟，您可以將您的 Facebook 聯絡人的資料，例如名稱、電話號碼、電子郵件地址及相片，存至通訊錄上。利用 Facebook 上儲存至通訊錄鍵，記錄朋友的個人資料。您可檢視通訊錄，查看已儲存的資料。如已設定社交網絡為關閉，通訊錄上則不會出現社交網絡資料。

# 相機

## 瞭解取景器

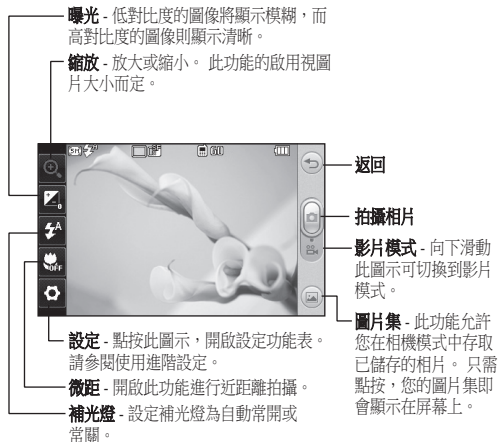

**提示！** 您可透過點按屏幕顯示相關選項。數秒後會自來水關閉。


## 快速拍照


- 1 按手機右側的  鍵。
- 2 當相機對準拍攝物時，按屏幕中心右邊的  進行拍照。您亦可按下電話側面的  鍵。

**提示！** 要切換到相機模式或影片模式，向上/向下滑動取景器中央的相機或影片圖示。


## 拍照之後


拍攝的相片將顯示於屏幕上。圖像的名稱會顯示在屏幕的底部。


 點按以將相片作為訊息、電子郵件或透過藍芽發送。

 點按以設定桌面圖像。

 點按以編輯相片。

 點按編輯選定圖片的名稱。

 點按以刪除剛剛拍攝的相片，點按是確認刪除。會顯示「已刪除」訊息。

 點按以移動至圖片集。



## 使用進階設定

從取景器中，點按  可開啟全部進階設定。

**拍攝模式** - 您可以選擇兩款拍攝模式。

**色彩效果** - 選擇色調，以應用於拍攝的相片。共有四種色調選項：關閉、黑白、負片或復古。

**白平衡** - 選擇自動、白熱光、陽光、日光燈或陰天。

**夜間模式** - 在黑暗環境中非常有用。

**自拍時計** - 自拍時計允許您設定在按下擷取按鈕拍照之前進行延遲。可供選擇的選項為：3 秒、5 秒或 10 秒。如果在拍合照時希望自己能一起留影，此功能將非常有用。

**質素** - 在特細緻、細緻及正常之間選擇。質量越細緻，相片便越清晰，但佔用的檔案空間會增大。這表示記憶體中儲存的相片會相應減少。

**對焦** - 設定相機對焦。

## 相機

**檢視模式** - 選擇全屏幕或完整圖像。  
全屏幕模式中，可能會配合屏幕大小適量裁剪圖像。

**選擇儲存** - 選擇將相片儲存至手機記憶體或外置記憶體。

**顯示拍攝圖像** - 選擇在拍照後可使用選項來檢視圖片。

**隱藏圖示** - 選擇手動或自動隱藏相機設定。


**快門聲** - 從三種快門聲中選擇一種聲音。

**格線畫面** - 選擇關閉、簡單十字或三等分。

**重設設定** - 重設所有相機設定。

# 視像攝錄機

## 瞭解取景器

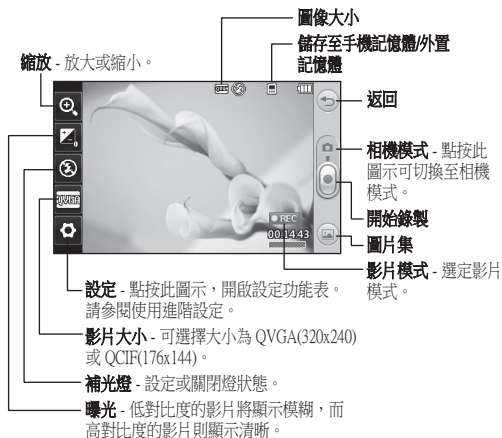

**提示！** 您可關閉全部捷徑選項，使取景器屏幕更潔淨。只需要點按一下取景器中央。要重新開啟選項，請再點按一下屏幕。

# 視像攝錄機

## 快速製作影片

- 1 按住手機右側的相機按鍵約幾秒鐘。

**提示！** 要切換到相機模式或影片模式，向上/向下滑動取景器中央的相機或影片圖示。

- 2 橫向握住手機，將鏡頭對準拍攝影片的對象。
- 3 按一次手機上的相機按鍵  以開始錄製。或者，按紅點 。
- 4 Rec 字樣將顯示於取景器底部，同時計時器會顯示影片錄製的長度。
- 5 若要暫停影片，請點按  並透過選擇  繼續。
- 6 點按屏幕上的  或再次按  以停止錄製。

## 製作影片之後

將在屏幕上顯示一張靜態影片圖像。影片名稱顯示在屏幕底部，同時會在屏幕左側和右側顯示七個圖示。

-  點按播放影片。
  -  點按以訊息或電子郵件或藍芽方式發送影片。
  -  點按以編輯影片。
  -  點按編輯選定圖片的名稱。
  -  點按以刪除剛剛錄製的影片，透過點按是予以確定。取景器將再次出現。
- 點按  以立即拍攝其他影片。
-  點按檢視已儲存影片和圖片的圖片集。



## 使用進階設定

從取景器中，點按設定以開啟全部進階設定選項。

**色彩效果** - 選擇新影片的色調。關閉、黑白、負片、復古。

**白平衡** - 白平衡可確保影片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從自動、白熱光、陽光、日光燈或陰天中進行選擇。

**質素** - 在特細緻、細緻及正常之間選擇。質素越細緻，影片越清晰，檔案大小也就越大。因此，手機記憶體儲存的影片數量也將更少。

**長度** - 設定影片的時間限制。選擇是否將影片作為多媒體訊息發送。

**提示！** 若您選擇多媒體訊息持續時間，則可選擇低圖像品質，以錄製較長的影片。

**選擇儲存** - 選擇將相片儲存至手機記憶體或外置記憶體。




**語音** - 選擇是否錄製帶有聲音的影片。

**隱藏圖示** - 選擇手動或自動隱藏相機設定。

**重設設定** - 重設所有視像攝錄機設定。

# 相片及影片

## 檢視相片及影片

- 1 點按「娛樂」標籤中的媒體匣。或者，點按相機預覽屏幕上的 。您可檢查圖片和影片。
- 2 您的圖片集會顯示於屏幕上。
- 3 點按該影片或相片以完全開啟。
- 4 點按  播放影片。若要暫停播放，請點按 。

**提示！** 左右翻閱以檢視其他相片或影片。


## 從影片中擷取圖像

- 1 選擇要從其擷取圖像的影片。
- 2 點按  暫停影片，可將該格影片轉換成圖像；再點按屏幕左上角，開啟  功能表。
- 3 從選項功能表中，選擇 。
- 4 圖像及其名稱將會顯示在螢幕上。
- 5 點按  回到影片。
- 6 影像會儲存在我的檔案資料夾並在圖片集出現。

**警告：** 若未在手機上記錄多媒體檔案，部份功能將無法正常使用。


## 以幻燈片放映形式檢視相片


播放投影片模式將以投影片放映形式一次一張顯示媒體匣中的所有相片。無法以幻燈片播放形式檢視影片。

- 1 點按圖片集中的 ，然後捲動並選擇播放投影片。
- 2 會開始放映投影片。


投影片放映中有多個選項：

點按  以返回。



 點按以將投影片暫停在特定相片位置。

 再次點按以恢復播放。


 點按以隨機顯示。

 點按以加快或減慢投影片播放速度。


## 將相片設定為牆紙


- 1 點按「娛樂」標籤中的媒體匣。
- 2 點按想要設為牆紙的相片。
- 3 點按桌面以開啟功能表。
- 4 點按 。
- 5 您可使用  變更圖片大小。
- 6 若對此圖片滿意，請點按設定。
- 7 從選項中選擇想要變更的內容：全部、Widget主屏幕、快速撥號主屏幕。

## 編輯您的相片


1 開啟想要編輯的相片，然後點按  以顯示選項。


2 點按圖示，編輯相片：

 在屏幕上移動手指以選擇修改區域。


 在相片上進行手繪。從四個選項中選擇線條粗細以及要使用的色彩。

 在圖片中新增文字。

 在相片中加蓋圖章。從不同的圖章和顏色中進行選擇，然後點按想要新增圖章和顏色的相片位置。


 清除繪製的一切內容。您亦可選擇擦除大小。

 點按以返回到圖片集。

 儲存對相片所做的變更。選擇以儲存對原始檔案的變更，或儲存為新檔案。如果選擇新檔案，請輸入檔案名稱。


 復原上一次效果或對相片做出的修改。

 點按以開啟「篩選」選項。

 您可調整所選的相片。



## 為相片加入效果

1 在編輯屏幕中，點按 。

2 選擇在相片中套用下列任意選項：

**自動美化** - 自動偵測圖像中的人物面部並使其變亮。


**暗角效果** - Lomo 相機效果。

**彩色負片** - 彩色負片效果。

**黑白** - 黑白色彩效果。

**復古** - 復古效果。

**模糊** - 模糊效果。

**光亮度** - 沿著列移動標記，以銳化相片焦點。點按確定鍵確定套用效果或選擇  以取消。

**馬賽克** - 點按以將模糊馬賽克效果應用於相片。

**油畫** - 油畫效果。

**素描** - 套用本效果，使相片看起來像一幅素描。

**浮雕** - 浮雕效果。

## 相片及影片

**鮮艷** - 使相片更清晰、更豔麗。

**月光** - 變更光線效果，使其看起來像月光。

**復古** - 使相片具古老的感覺。

**發光** - 光線效果。

**卡通** - 卡通效果。

**水彩** - 水彩效果。

- 3 要復原效果，只要點按復原  
←。

## 多媒體

您可將任意多媒體檔案儲存於手機記憶體中，以便輕鬆存取圖片、聲音、影片和遊戲。亦可將檔案儲存至記憶咭中。使用記憶咭可釋放手機記憶體空間。您可在「娛樂」標籤的我的檔案功能表中搜尋這些檔案。

### 圖片


圖像中包含各種圖片，其中包括預載到手機中的預設圖像、下載的圖像以及透過手機相機拍攝的圖像。

### 發送相片

- 1 點按「娛樂」標籤中的我的檔案，然後選擇圖像。選擇所需的圖片。
- 2 點按發送並從多媒體訊息、電子郵件及藍芽中選擇。

### 使用圖像

您可選擇將圖像作為牆紙和鎖定畫面使用，或者用來識別來電者。

- 1 點按「娛樂」標籤中的我的檔案，然後選擇圖像。選擇所需的圖片。然後點按 。
- 2 點按使用方式並從下列選項中選擇：  
**主屏幕牆面** - 設定主屏幕牆紙。


**鎖定屏幕畫面** - 設定鎖定屏幕牆紙。

**通訊錄圖像** - 為通訊錄的聯絡人設定相片，當聯絡人來電時將顯示該相片。

**開機圖像** - 設定開機時顯示的圖像。

**關機圖像** - 設定關機時顯示的圖像。

### 列印圖像


- 1 點按「娛樂」標籤中的我的檔案，然後選擇圖像。選擇所需的圖片。然後點按 。
- 2 點按列印，然後在藍芽和PictBridge 之間選擇。

**提示！** 您可透過藍芽或連接至PictBridge 兼容印表機進行列印。

## 多媒體

### 移動或複製檔案


您可以從手機記憶體及記憶咭中移動或複製檔案。您可透過此操作釋放某個記憶體組的空間，或者確保圖像不會丟失。

- 1 點按「娛樂」標籤中的我的檔案，選擇圖像並點按 。
- 2 選擇移動或複製。
- 3 透過連續點按圖像，您可標記/取消標記該圖像。標記要移動或複製的圖像並點按複製/移動。

### 聲音

聲音中包含各種下載的聲音、預設聲音和錄音記錄。您可在此處管理或發送聲音，或將聲音設為鈴聲。

### 使用聲音

- 1 點按「娛樂」標籤中的我的檔案，然後選擇聲音。
- 2 選擇想要播放的聲音。
- 3 播放器將會開始播放該聲音。
- 4 點按  及選擇使用成方式。
- 5 選擇鈴聲、訊息提示音、開機、關機。


### 影片

影片中顯示各種下載的影片以及在手機上錄製的影片。

### 觀看影片

- 1 點按「娛樂」標籤中的我的檔案，然後選擇「影片」。
- 2 選擇希望播放的影片。

## 發送錄像片段

- 1 選擇影片。
- 2 點按  後發送，並從訊息、電子郵件及藍芽中選擇。

## 遊戲及應用程式

您可在手機上安裝新遊戲和應用程式，以供閒時娛樂之用。

您亦可在「娛樂」標籤的遊戲及應用程式功能表中存取此選項。

## 玩遊戲

- 1 點按「娛樂」標籤中的遊戲及應用程式。
- 2 選擇遊戲，然後選擇想要啟動的遊戲。

## 文件

透過我的檔案中的文件功能表，您可檢視全部文件檔案。您可在此處檢視 Excel、PowerPoint、Word、文字以及 Pdf 檔案。

## 將檔案傳送到手機

藍芽可能是將檔案從電腦傳輸到手機的最簡單方法。您可以通過同步線，使用大容量儲存或 LG PC Suite。

### 要使用藍芽傳送：

- 1 確保您的手機與電腦均已開啟藍芽，且對方已偵測到藍芽。
- 2 使用電腦透過藍芽發送檔案。
- 3 檔案發送後，您需要按是予以接受。
- 4 預設情況下，檔案會顯示在我的資料夾中，即我的檔案中的第二個標籤。如果資料夾已滿，您亦可忽略此檔案。

## 其他

其他中包含各種除圖片、聲音、影片、文件、遊戲或應用程式以外的檔案。

# 多媒體

## 音樂

LG GM360i 配備內置音樂播放機，可讓您播放所有最愛曲目。若要存取音樂播放機，請點按「娛樂」標籤中的音樂。您可從此處存取多個資料夾：

**最近播放** - 播放最近播放過的歌曲。

**警告：**若未在手機上記錄多媒體檔案，部份功能將無法正常使用。需要取得授權或許可才可以複寫或複製音樂。在某些國家/地區，國家法禁止私人複製受版權保護的材料。在下載或複製檔案之前，請檢查適用國家/地區關於使用此類材料的國家法律。

**全部曲目** - 包含手機上的全部歌曲，預載的預設音樂除外。

**演出者** - 按演出者瀏覽音樂收藏。

**專輯** - 按專輯瀏覽音樂收藏。

**類型** - 按類型瀏覽音樂收藏。

**播放列表** - 包含已建立的全部播放列表。

**隨機播放曲目** - 按照隨機順序播放曲目。





## 將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或同步纜線。

您亦可使用 LG 電腦端套件。要使用藍芽傳送：

- 1 確定兩台裝置上的藍芽功能均已開啟並且相互可見。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 當檔案準備就緒以供發送時，您應在手機上點按是予以接受。
- 4 檔案應顯示在音樂 > 全部曲目中。

## 播放歌曲

- 1 點按「娛樂」標籤中的音樂。
- 2 選擇您希望播放的資料夾及歌曲。
- 3 點按  暫停播放歌曲。
- 4 點按  略過至下一首歌。
- 5 點按  以返回至上一首歌曲。
- 6 點按  以返回至音樂功能表。您可多次點按以返回至功能表。

## 建立播放清單

透過從播放列表資料夾中選擇一系列歌曲可建立自己的播放列表。

- 1 點按「娛樂」標籤中的音樂。
- 2 點按播放列表後按新增播放列表，輸入播放列表名稱後按儲存。
- 3 所有曲目資料夾將顯示手機中的所有歌曲。點按要納入播放清單的所有歌曲；記號將顯示於對應的曲目名稱旁。
- 4 點按完成。

## FM 收音機


LG GM360i 具有 FM 收音機功能，您可在外出旅途中調諧至最愛電台，收聽節目。





您必須插入耳機才能收聽電台。

## 搜尋電台


您可透過手動或自動搜尋電台，將手機調諧至收音機電台。電台將被儲存至指定頻道編號中，以防重複調諧。您必須首先將耳機插入手機中，將耳機作為天線使用。

自動調諧：

- 1 捲動並點按「娛樂」標籤中的 FM 收音機，然後點按 。
- 2 點按自動掃描。顯示一則確認訊息。選擇是，系統將自動搜尋電台並分配到手機頻道中。


**備註：**您亦可透過使用屏幕中央顯示的  和  手動調諧電台。若按住  和 ，則將自動搜尋電台。

## 重設頻道

- 1 捲動並點按「娛樂」標籤中的 FM 收音機，然後點按 。
- 2 選擇重設頻道以重新設定目前的頻道，或選擇重設所有頻道以重新設定所有頻道。每個頻道將返回至開始 87.5MHz 頻率。

# 記事簿

## 新增事件至日曆

- 1 點按「實用程式」標籤中的記事簿，然後選擇日曆。
- 2 選擇要將事件新增至的日期。
- 3 點按  後新增事件。
- 4 點按類別，然後從以下選項中選擇：約會、週年紀念或生日。
- 5 輸入標題。
- 6 查看並輸入事件的開始日期和時間。對於約會和週年紀念，在下方的兩個時間和日期方塊中輸入事件的結束時間和日期。如果是約會，請輸入約會地點。
- 7 設定鬧鐘及重複。
- 8 選擇儲存，則事件將儲存至日曆中。方形游標會標記已儲存事件的日期，且於事件開始時間會響鈴，以便您可以進行組織。

## 在您的工作項目列表中新增項目。

- 1 點按「實用程式」標籤中的記事簿。
- 2 選擇工作並點按新增工作。
- 3 為工作設定日期，備註，並選擇重要性：高、中或低。
- 4 點按儲存，儲存您的工作項目。

## 使用日期搜尋器

日期搜尋器是一款極為方便的工具，可幫助您計算特定天數之後的日期。例如，自 07 年 10 月 10 日 60 天後的日期為 2007 年 12 月 09 日。


- 1 點按「實用程式」標籤中的記事簿。
- 2 選擇日期搜尋器。
- 3 在由標籤中設定所需日期。
- 4 在之後標籤中設定天數。
- 5 以下將顯示預計日期。

## 新增備忘錄

- 1 點按「實用程式」標籤中的備忘錄。
- 2 點按新增備忘錄。
- 3 輸入您的備忘錄後點按儲存。
- 4 備忘錄將顯示在備忘錄應用程式屏幕上。

## 設定鬧鐘


- 1 點按「實用程式」標籤中的記事簿。預設情況下，界面鬧鐘將顯示在列表中並且不可刪除。
- 2 點按新增鬧鐘。
- 3 在時間欄位方塊中，設定響鬧時間。
- 4 在重複方塊中，選擇鬧鐘重複方式：不重複、每天、星期一~星期五、星期一~星期六、星期六至星期日、假日除外或選擇工作天。  
圖示表明所選的日期。

- 5 選擇鬧鐘類型以選擇鬧鐘的類型。
- 6 選擇鬧鈴並從資料夾中選擇一種聲音。若要聆聽聲音，請點按聲音，然後點按 。
- 7 在備忘錄方塊中新增鬧鐘備忘錄。
- 8 最後，您可以設定延後時隔：5、10、20、30 分鐘，1 小時或關閉。
- 9 一旦設定鬧鐘後，點按儲存。

**備註：**您最多可設定 5 個鬧鐘，包括界面鬧鐘。

**提示！** 滑動開關至開啟/關閉以設定鬧鐘。

## 以繪圖面板新增備忘錄

- 1 捲動並點按「實用程式」標籤中的繪圖面板。
- 2 點按新增繪圖。
- 3 在觸控螢幕 LCD 上編寫備忘錄，然後點按 。
- 4 點按是，備忘錄將顯示在繪圖面板應用程式屏幕上。

# 記事簿

## 記錄畫面



相機鍵

相機鍵設置在手機右側。按相機鍵兩下，便可截取桌面。截取的圖像將會儲存在圖片集及我的我的檔案內的圖像。

此功能可截取以下的屏幕圖像：


WAP、SNS、電子郵件編寫器及檢視屏幕、訊息編寫器及已接收的訊息等。



按相機鍵兩下，便可截取桌面。

## 語音記錄器

使用語音備忘錄錄製語音備忘錄或其他聲音檔。

點按「實用程式」標籤中的語音備忘錄並選擇 ，然後選擇設定以變更設定：

**長度** - 設定錄音長度。從下列選擇：無限制、多媒體訊息大小或1分鐘。

**質素** - 選擇音效質素。選擇特細緻、細緻或正常。


**記憶體使用裝置** - 選擇聲音檔的儲存目的地。選擇外置記憶體或手機記憶體。

## 錄製聲音或語音

- 1 點按  開始錄音。
- 2 點按  開始錄音。
- 3 點按  結束錄音。
- 4 點按  可收聽錄製。

## 使用計算機


- 1 點按「實用程式」標籤中的工具。
- 2 選擇計算機。
- 3 使用鍵盤點按數字按鍵以輸入數字。


- 4 簡單的計算，可先點按您需要的功能 (+, -, x, ÷) 後再選 =。
- 5 對於較為複雜的計算，點按  並選擇 sin、cos、tan、log、ln、exp、sqrt、deg 或 rad 等。

## 轉換單位

- 1 點按「實用程式」標籤中的工具。
- 2 選擇單位轉換器。
- 3 選擇想要換轉匯率、面積、長度、重量、溫度、體積或速度。
- 4 然後，您可選擇單位，輸入要轉換的值，然後輸入要轉換至的單位。
- 5 對應值將會顯示在螢幕上。

## 新增世界時鐘城市

- 1 點按「實用程式」標籤中的工具。
- 2 選擇世界時鐘。
- 3 點按 ，後再按新增城市。

- 4 捲動地圖，點按想要的區域並選擇城市。
- 5 或者，點按  並在搜尋欄位方塊中鍵入所需城市的名稱。


## 使用秒錶

- 1 點按「實用程式」標籤中的工具。
- 2 選擇秒錶。
- 3 點按屏幕底部的開始以開始計時器。
- 4 如果要記錄圈速，點按分段。
- 5 點按停止，停止計時器。
- 6 點按恢復以在停止的時刻處重新啟動秒錶，或點按重新設定重新開始計時。


## 電腦同步

您可同步電腦和手機，以確保所有重要詳細資料和日期相匹配。您亦可備份檔案，確保自己安心無憂。

### 在電腦上安裝 LG PC Suit

- 1 從桌面按 ，然後選擇「設定」標籤上的連接。
- 2 選擇 USB 連接模式並點按電腦端套件。
- 3 使用 USB 線連接手機和電腦，然後稍等片刻。將顯示安裝指引訊息。
- 4 按照屏幕上的說明完成 LG 電腦端套件安裝程式精靈。
- 5 安裝完成後，LG PC Suite 圖示將顯示於桌面上。

### 連接手機和電腦

- 1 從桌面按 ，然後選擇「設定」標籤上的連接。
- 2 選擇 USB 連接模式。
- 3 點按 PC Suite。
- 4 使用 USB 線連接手機和電腦，然後稍等片刻。電腦端套件將自動執行。

### 備份與還原手機資訊

- 1 如同以上所述，將手機連接到電腦。
- 2 在工具中按備份及還原。
- 3 標記想要備份或還原的內容。選擇要將資訊備份至的位置或還原自其資訊的位置。最後按一下備份或還原。
- 4 將對您的資訊進行備份或還原。

### 在電腦上檢視手機檔案

- 1 如同前文所述，將手機連接到電腦。
- 2 按相片圖示。
- 3 手機的相片會傳至電腦。按手機記憶體就會顯示相片。
- 4 按相片圖示。
- 5 手機的相片會傳至電腦。按手機記憶體就會顯示相片。

**提示！** 在電腦上檢視手機內容有助您管理檔案和文件並刪除不再需要的內容。

## 同步處理通訊錄

- 1 連接手機和電腦。
- 2 按通訊錄圖示。
- 3 電腦將載入並顯示儲存於手機的所有聯絡人。(按同步通訊錄就會載入手機的通訊錄)
- 4 按檔案鍵並選擇匯出。現在，您可選擇目標以及通訊錄儲存位置。


## 同步訊息

- 1 連接手機和電腦。
- 2 按訊息圖示。
- 3 將會在螢幕資料夾中顯示全部手機訊息。
- 4 按一下列標題，以按照寄件者、內容或已接來電日期重新排列訊息。

## 將手機用作音樂同步裝置

手機可用作音樂同步裝置，用來同步音樂檔案。

音樂同步可以透過 Windows Media Player 10或11 執行，並且支援手機記憶咭和外置記憶咭。

- 1 斷開電腦與手機的連接。
- 2 從桌面選擇 ，然後選擇「設定」標籤上的連接。
- 3 選擇 USB 連接模式。
- 4 點按音樂同步。
- 5 連接手機和電腦。手機將顯示：已連接。

# 網絡功能

## 存取網絡

- 1 點按「實用程式」標籤中的瀏覽器。
- 2 要直接跳至瀏覽器主頁，請選擇主頁。或者，選擇輸入網址並鍵入網址，然後選擇連接。

**注意：**連線至此服務並下載內容時，會產生其他費用。請向網路提供商查詢資料費用。

## 新增並存取書籤


為了方便快捷地存取喜愛的網站，您可新增書籤並儲存網頁。

- 1 點按「實用程式」標籤中的瀏覽器。
- 2 選擇書籤。書籤清單將會顯示在螢幕上。
- 3 要新增書籤，請點按新增書籤。在對應的欄位方塊中，輸入書籤名稱和網址。
- 4 點按儲存。此時，書籤將會顯示在書籤清單中。
- 5 若要存取書籤，只要點按書籤旁邊的「連接」圖示或點按書籤標題，然後點按連接。您將連線到該網頁。

## 使用 RSS 閱讀器

RSS（簡易資訊聚合）是網絡 Feed 格式成員之一，用於發布經常更新的內容，如部落格條目、新聞標題或 Podcasts。RSS 文件也稱為 feed、web feed 或頻道，包含來自關聯網站的內容概要或完整文字。RSS 能使人們可以自動與最愛的網站保持連線。它比手動查看要方便很多。用戶可透過在閱讀器中輸入 Feed 連結或按一下啟動訂閱程序瀏覽器中的 RSS 圖示，即可訂閱 Feed 服務。閱讀器會定期檢查用戶訂閱的 Feed，查看是否有新內容更新，並下載其發現的任何更新。

## 儲存網頁

- 1 按照以上所述操作，存取所需的網頁。
- 2 點按  並選擇儲存此網頁。
- 3 為網頁輸入名稱，這樣，您可方便進行識別。
- 4 點按儲存。

## 存取已儲存的網頁

點按「實用程式」標籤中的瀏覽器。然後選擇儲存的網頁。您可在此處檢視已儲存的網頁。

## 檢視瀏覽器記錄

點按「實用程式」標籤中的瀏覽器。然後選擇記錄。

## 變更網頁瀏覽器設定

點按「實用程式」標籤中的瀏覽器。然後選擇設定。

您可選擇網絡設定、外觀設定、快取記憶、Cookies 或安全。

## 將手機用作數據機

GM360i 還具備電腦數據機的雙重功能，讓您即使無法使用線纜連接的情況下，亦可透過線纜存取電子郵件和網絡。您可以使用 USB 線或藍芽。

### 使用 USB 線：

- 1 確保已在電腦上安裝 LG PC Suite。
- 2 如前文介紹般使用 USB 線連接 GM360i 手機和電腦，並啟動 LG PC Suite 軟件。
- 3 按一下電腦上的 InternetKit。然後按新增按鈕並選擇數據機。
- 4 編寫可連接至互聯網的設定檔並儲存相關值。
- 5 將會在電腦螢幕上顯示所建立的設定。選擇該設定檔並按一下連接。電腦將連接至 GM360i。

**備註：**了解有關使用 LG PC Suite 同步的更多資訊。

## 網絡功能

### 使用藍芽：

- 1 確定藍芽已開啟並在電腦和 GM360i 手機上均可見。
- 2 配對電腦和 GM360i 手機，以便按需提供密碼進行連線。
- 3 使用 LG 電腦端套件上的連線精靈建立有效的藍芽連線。
- 4 按一下電腦上的互聯網套件。然後按一下新增按鈕。
- 5 選擇 LG Mobile USB 數據機並選擇確定。此時，它將顯示在螢幕上。
- 6 編寫可連接至互聯網的設定檔並儲存相關值。
- 7 將會在電腦螢幕上顯示所建立的設定。選擇該設定檔並按一下連接。  
電腦將連接至 GM360i。

### 存取 Google

您可以在此手機使用 Google 服務。  
Google 為用戶提供搜尋服務。

# 設定

## 個人化情景模式

您可在桌面上快速變更情景模式。您可使用設定功能表個人化情景模式設定。

- 1 點按「設定」標籤中的情景模式。
- 2 選擇想要編輯的情景模式。
- 3 您可變更列表中的所有可用聲音和提示選項，包括鈴聲和音量、訊息提示音設定等。

## 變更屏幕設定

點按「設定」標籤中的屏幕設定。屏幕設定

**牆紙** - 選擇您的主屏幕或鎖定畫面的主題。

**Widget 首頁範本** - 選擇一個首頁範本。

**Livesquare** - 點按 Livesquare 指南，查閱 Livesquare 的功能。

**手機主題** - 選黑色或白色（卡通化用戶介面）

**上層功能表** - 選擇上層功能表式樣：曲折形、捲動或接續畫面。

**鎖定屏幕** - 選擇解鎖方式。

**鎖定畫面筆觸** - 選擇鎖定畫面筆觸。

**撥號** - 調整數字顏色。

**字體** - 調整字型大小。字型大小有四個選項：小、中、大及特大。

**備註：**背光燈顯示的時間越長，耗用的電池電量越多。這可能會導致需要更加頻繁地充電。

**亮度** - 調校屏幕的亮度。

**問候語訊息** - 選擇開啟或關閉，並在文字欄位輸入問候語訊息。

**開機/關機** - 為開機/關機屏幕選擇主題。

## 變更手機設定

按照個人偏好進行調整，體驗 GM360i 帶來的自由與舒適。

點按「設定」標籤，選擇手機設定後從下表選擇：

### 手機設定

**日期及時間** - 調整日期和時間：可以自動更新時間或使用夏令時間選項。

**電源節省** - 選擇切換原廠設定省電設定開啟、關閉或僅夜間模式。

**語言** - 變更 GM360i 的顯示語言。

# 設定

**自動鍵盤鎖** - 在主屏幕上自動鎖定按鍵。

**安全** - 調節您的安全設定，包括 PIN 碼及手機鎖。

**記憶體資訊** - 檢視正在使用記憶體管理，了解詳情。

**重設設定** - 重設至出廠設定。

**資訊** - 選擇說明，檢視 GM360i 的技術性資料。您可以在手機資訊更新軟件。

## 使用記憶體管理

GM360i 有三種可用的記憶體：手機、智能咭及外置記憶卡。

您可使用記憶體管理來查看每個記憶體的已用空間和可用空間。

點按「設定」標籤中的手機設定，然後點按記憶體資訊。

**手機共用記憶體** - 查看 GM360i 手機上可用於圖片、聲音、影片、多媒體訊息、電子郵件、Java 應用程式和其他的記憶體。

**手機預留記憶體** - 查看手機中尚可用於文字訊息、通訊錄、通訊錄、工作項目列表、備忘錄、鬧鐘、通話記錄、書籤及其他項目的記憶量。

**智能咭記憶體** - 檢視智能咭上的可用記憶體。

**外置記憶咭** - 檢視可用於外置記憶咭的記憶體（您可能需要另行購買記憶咭）。

**主要儲存裝置設定** - 在手機和外置記憶體之間選擇項目的儲存位置。

## 變更連接設定

您的連接設定已由網絡商設定，以便您立即使用新手機。若要變更連接設定，請使用此功能表：  
點按「設定」標籤中的連接。

## 網絡設定

**選擇網絡** - 若設定為自動，則 GM360i 會自動搜尋網絡，並在網絡上註冊手機。推薦使用這種方式以便獲得最佳的服務和品質。如果選擇手動，將顯示目前可用的全部網絡，您可選擇其中一個網絡進行註冊。

**首選列表** - 您可新增首選清單以便進行連接。如果網絡為自動搜尋，只需從網絡列表中選擇一個網絡，或者如果沒有搜尋到網絡，則需手動新增一個網絡。

**互聯網設定** - 此功能表顯示互聯網設定。您無法刪除或編輯預設設定，具體視您所在的國家或地區而定。

**存取點** - 網絡商已儲存此訊息。您可以使用此功能表新增存取點。

**分組數據連線** - 選擇何時應為分組資料將裝置連接至網絡。

**USB 連接模式** - 選擇資料服務並透過 LG PC Suite 軟件同步您的 GM360i，藉此複製您手機中的檔案。請參閱電腦同步，瞭解關於同步的更多資訊。

如果透過 Windows Media Player 使用音樂同步，請選擇此功能表中的音樂同步。音樂同步僅適用於音樂內容。

## 使用藍芽發送和接收檔案

### 要發送檔案：


- 1 開啟要發送的檔案，通常為相片、影片或音樂檔案。
- 2 選擇發送。  
選擇藍芽。
- 3 如果已配對藍芽裝置，GM360i 手機將不會自動搜尋其他藍芽裝置。如果尚未配對，GM360i 手機將搜尋範圍內其他已啟用藍芽的裝置。
- 4 選擇要將檔案發送到的裝置。
- 5 您的檔案將會被送出。

**提示** | 檢查進度列，確定檔案已發送。

### 要接收檔案：

- 1 若要接收檔案，藍芽必須開啟並可見。有關詳情，請參閱以下的變更藍芽設定。
- 2 系統將會顯示一則訊息，提示您接受來自寄件者的檔案。點按是以接收檔案。
- 3 您將查看到檔案的儲存位置。對於圖像檔，您可選擇檢視檔案或作為牆紙。檔案通常被儲存於我的檔案中的對應位置。

### 變更您的藍芽設定：

點按「設定」標籤中的藍芽。然後選擇  並選擇設定。

### 對下列選項作出變更：

**顯示我的手機** - 選擇可見、隱藏或可見時間為 1 分鐘。

**我的裝置名稱** - 輸入 GM360i 的名稱。

**支援的服務** - 根據不同服務選擇如何使用藍芽。

**遠端智能咭模式** - 開啟或關閉。

**我的位址** - 顯示您的藍芽地址。

# 設定

## 同其他藍芽裝置配對

透過配對 GM360i 和其他裝置，您可設定一個受密碼保護的連接。

- 1 檢查藍芽是否開啟並且可見。您可在設定功能表中變更您的可見狀態。
- 2 點按搜尋。
- 3 GM360i 將搜尋裝置。搜尋完成之後，會在屏幕上顯示重新整理。
- 4 選擇要配對的裝置並輸入密碼，然後點按確定。
- 5 然後，手機將連接到其他裝置，並且您必須在此裝置上輸入相同的密碼。
- 6 密碼保護藍芽連接已準備就緒。

## 使用藍芽耳機

- 1 檢查藍芽是否為開啟和可見。
- 2 遵循隨耳機附帶的說明，將耳機調至配對模式並配對裝置。
- 3 點按連線前詢問或永遠連線，點按是立即連接。GM360i 將自動切換到手機情景模式。

## Wi-Fi

可讓您根據裝置上的 Wi-Fi（無線 LAN）管理互聯網連接。

使手機能夠連接區域無線網絡，或以無線方式登入互聯網。

相對於藍芽無線技術，Wi-Fi 速度更快且範圍更廣，並可用於快速收發電郵或瀏覽互聯網。

**備註：**GM360i 支援 WEP 和 WPA 及 WPA2 加密，並不支援 EAP 及 WPS 加密。如您的 Wi-Fi 服務供應商或網絡管理員設定了加密，以保障網絡安全，請在「安全類型」輸入加密鑰匙。

如沒有設定加密，此欄則不會啟動，並會顯示「無」。您可從您的 Wi-Fi 服務供應商或網絡管理員取得加密鑰匙。

## 軟件升級


### LG 行動手機軟件升級程式

有關安裝和使用本程式的更多資訊，請瀏覽 <http://update.LGMobile.com>。有了這項功能，您無需親臨服務中心，就可將手機軟體更新為最新版本，十分方便快捷。手機軟體更新要求使用者密切注意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的指引和備註。請注意，在升級過程中移除 USB 數據傳輸線或電池可能會對行動電話造成嚴重損壞。由於製造商不會為升級過程中的數據損失承擔任何責任，建議您先備份好任何重要資料，以策安全。

## 配件

以下配件隨 GM360i 手機一起提供。

充電器



數據線



電池



立體聲  
耳機



### 備註：

- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保固可能失效。
- 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商瞭解更多詳情。

# 技術數據

## 一般資訊

產品名稱：GM360i

系統：GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900

## 環境溫度

最高：+55°C（放電），  
+45°C（充電）

最低：-10°C

# 安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

## 射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。本型號手機 GM360i 之設計符合適用的無線電波暴露安全要求。這些要求乃基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 無線電波暴露指引的度量單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 1.33 瓦/千克 (10 克)，攜帶於身上時則為 1.31 瓦/千克 (10 克)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

## 產品保護及維護

### 警告

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保固失效，並可能引致危險。

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手操作充電中的手機。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。

- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。

## 有效地操作手機

### 電子裝置

所有手機都可能因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

## 道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 如有免提聽筒套件，則請使用。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車設有安全氣袋，切勿讓已安裝的無線設備或手提無線設備阻擋氣袋。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人員傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

## 避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

# 安全及有效使用準則

## 玻璃部件

您的手機的某些部件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃部件。

## 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸環境

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用手機。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

## 在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

## 緊急通話

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

## 電池資訊及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 請只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。

- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。





此手册中的部份内容可能会因手机程序之改良或不同网络商提供的服务而令实际情况有所不同, 这并不会另行通知。



## GM360i 用户手册

恭喜您购买此款功能先进、外观小巧的  
GM360i 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

# 目录

开始了解您的手机.....	6	电话簿.....	21
打开视图.....	7	正在搜索联系人.....	21
安装 SIM 卡和电池.....	8	添加新联系人.....	21
充电.....	9	创建群组.....	22
存储卡.....	10	更改电话簿设置.....	22
使用触摸屏.....	11	查看文件信息.....	23
触摸屏提示.....	11	信息.....	24
控制触摸屏.....	11	信息.....	24
主屏.....	13	发送信息.....	24
快速键.....	14	输入文本.....	24
状态栏.....	15	T9 模式.....	24
从状态栏更改状态.....	16	手写识别.....	24
使用多任务功能.....	16	设置电子邮件.....	25
通话.....	17	检索电子邮件.....	25
拨打电话.....	17	使用新帐户发送电子邮件.....	25
从电话簿拨打电话.....	17	更改电子邮件设置.....	25
接听和拒接来电.....	17	信息文件夹.....	26
通话选项.....	18	更改文本信息设置.....	26
快速拨号.....	19	更改多媒体信息设置.....	27
拨打第二个电话.....	19	更改其它设置.....	27
查看通话记录.....	19	社交网络服务 (SNS).....	28
使用呼叫转接.....	20	Facebook.....	28
使用呼叫限制.....	20	Linkbook.....	29
更改常用通话设置.....	20		

# 目录

相机.....	30	视频.....	40
了解取景器.....	30	观看视频.....	40
快速拍照.....	31	发送视频剪辑.....	41
拍照后.....	31	游戏和应用程序.....	41
使用高级设置.....	32	玩游戏.....	41
录像机.....	33	文档.....	41
了解取景器.....	33	将文件传输到手机.....	41
快速录制视频.....	34	其它.....	41
拍摄视频后.....	34	音乐.....	42
使用高级设置.....	35	将音乐传输到手机.....	42
照片和视频.....	36	播放歌曲.....	42
查看照片和视频.....	36	创建播放列表.....	43
从视频中捕获图像.....	36	FM 收音机.....	43
以幻灯片显示方式查看照片.....	36	搜索电台.....	43
将照片设为墙纸.....	36	重置频道.....	43
编辑照片.....	37	管理器.....	44
为照片添加效果.....	37	将事件添加到日历中.....	44
多媒体.....	39	向任务列表添加项目.....	44
图片.....	39	使用日期计算器.....	44
发送照片.....	39	添加备忘录.....	45
使用图像.....	39	设置闹钟.....	45
打印图像.....	39	添加带绘图面板的备忘录.....	45
移动或复制文件.....	40	屏幕捕捉.....	46
声音.....	40	语音备忘录.....	46
使用声音.....	40	录制声音或语音.....	46
		使用计算器.....	46

换算单位.....	47	设置.....	53
向世界时钟添加城市.....	47	个性化情景模式.....	53
使用秒表.....	47	更改显示设置.....	53
电脑同步.....	48	更改手机设置.....	53
在计算机上安装 LG PC 套件... ..	48	使用内存管理器.....	54
连接手机和电脑.....	48	更改连接设置.....	54
备份并恢复手机上的信息.....	48	使用蓝牙发送和接收文件.....	55
在电脑上查看手机文件.....	48	更改蓝牙设置.....	55
同步电话本.....	49	与其它蓝牙设备配对.....	56
同步信息.....	49	使用蓝牙耳机.....	56
将手机用作音乐同步设备.....	49	Wi-Fi.....	56
网络.....	50	软件升级.....	57
访问网页.....	50	配件.....	58
添加并访问书签.....	50	技术参数.....	59
使用 RSS 阅读器.....	50	关于安全有效使用手机的准则... ..	60
保存页面.....	51		
访问保存的网页.....	51		
查看浏览器历史记录.....	51		
更改网络浏览器设置.....	51		
将手机用作调制解调器.....	51		
访问 Google.....	52		

# 开始了解您的手机



**⚠警告：** 在手机上放置重物或将手机卧放在口袋中可能会损坏手机的 LCD 屏幕及触摸屏的功能。

## 打开视图



### 侧键


- 当屏幕是在主屏时：调整铃声和按键音量。
- 在通话过程中：耳机音量调节。

### 相机键

- 长按该键直接转到相机菜单。



充电器、数据线

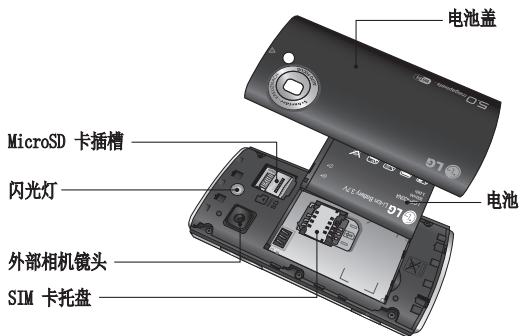

MicroSD 卡插槽

闪光灯

外部相机镜头

SIM 卡托盘

电池盖


电池


# 安装 SIM 卡和电池

## 1 卸下电池盖

将电池盖沿手机底部滑动，卸下电池盖。




 警告：不要使用指甲取出电池。

 警告：手机开机时，不要取出电池，这可能会损坏手机。

## 2 安装 SIM 卡

将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。请确保先从手机中取出电池，然后再安装 SIM 卡。要取出 SIM 卡，请向外轻推即可。

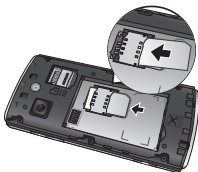

## 3 安装电池

先将电池左侧插入电池室顶部。请确保电池触点与手机端子对齐。向下按电池右侧直到卡入到位。



## 充电

掀开 GM360i 侧面的充电器插槽盖。连接旅行适配器（充电器）和随附的 USB 数据线。将 USB 数据线连接到手机，然后将其插入电源插座。只有屏幕上显示“电量已满”信息，GM360i 充电才完成。

**备注：**第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。忽略第一次出现的“电量已满”信息，将手机电池充整整一个晚上。



# 存储卡

## 安装存储卡

使用 MicroSD 存储卡，可以扩充手机的可用存储空间。

**提示：**存储卡是可选配件。


- 1 打开手机左侧边缘的 microSD 存储卡插槽盖。



- 2 将 microSD 存储卡滑入插槽顶部，直到卡入到位。确保金色接触区域面朝下。

## 格式化存储卡

如果已格式化存储卡，您可以开始使用。如果没有，您需要在使用的之前先对其进行格式化。

- 1 从主屏选择 ，然后选择“设置”选项卡中的手机设定。
- 2 点触存储器资料，然后选择外部存储器。
- 3 点触格式化，然后确认选择。
- 4 输入密码（如果已设置）。存储卡完成格式化，现在，您可以使用了。

**备注：**如果存储卡中包含内容，由于格式化后将删除所有文件，所以文件夹结构会有所不同。

# 使用触摸屏

## 触摸屏提示


- 要选择项目，请点触图标中心位置。
- 无需大力按。触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。
- LG GM360i 未使用时将返回锁定屏幕。

## 控制触摸屏

LG GM360i 触摸屏上的控件会动态更改，具体取决于您执行的任务。


## 打开应用程序

要打开任何应用程序，轻触其图标即可。

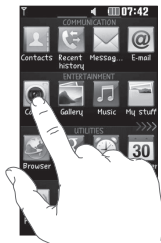

## 滚动

来回拖动即可滚动。在主屏上，如访问通话记录列表时，您还可以上下滚动。

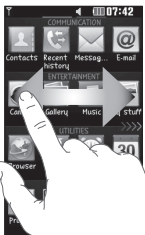


# 使用触摸屏

## 锁定屏幕手势

锁定屏幕手势 - 将手势设置到 9 个扩展快捷应用程序。锁定屏幕中的手势允许用户将手机解锁，并在屏幕上画出手势时直接执行此应用程序。

要设置此功能，

- 1 选择“ - 显示设置 - 锁定屏幕手势”。

- 2 从屏幕底部将首选手势拖放到要将其分配到的应用程序。

**提示!** 绘制? 形状以转到锁定屏幕中的“锁定屏幕手势”菜单。

**提示!** 此功能仅适用于待机屏幕中的键盘锁。




# 主屏

在所有主屏类型中，您都可以直接拖动和单击所需内容。


激活



**小工具主屏** - 当您点触屏幕右下方的  时，将出现手机小工具面板。当您通过拖动来注册小工具时，系统将在放下小工具的地点创建小工具。

激活



**快速拨号主屏** - 当您点触  时，将出现快速拨号列表。您可以直接在此主屏中呼叫、发送信息或编辑联系人。

激活



**Livesquare 主屏** - 在 Livesquare 屏幕上，您可以轻松地拨打电话以及向分配给卡通形象的号码发送信息。要使用通话、信息或电话本功能，请选择一个卡通形象，然后选择您要使用的快速键。

**提示！** 用户界面基于三种类型的主屏。要在不同的主屏之间切换，从左右或从右到左快速摩擦屏幕即可。

# 主屏

## 快速键

通过主屏上的快速键，您点触一次即可轻松进入经常使用的功能。



点触可打开触摸拨号键盘，以拨打电话。



点触可以打开电话簿。要搜索您要呼叫的号码，请使用触式键盘在屏幕顶部输入联系人的姓名。您也可以创建新的联系人以及编辑现有联系人。



点触可以进入信息菜单。在此，您可以创建新短信或多媒体信息，或查看信息收件箱。



点触可以打开完整顶层菜单，该菜单被划分为四个类别。

## 状态栏


状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启动了蓝牙或 GPRS。

下表说明了您最可能在状态栏中看到的不同图标的涵义。

图标	描述
	多任务
	网络信号强度（指示栏数不同）
	无网络信号
	剩余电量
	电池电量空
	新文本信息
	新语音信息
	收件箱已满
	信息发送失败
	多媒体信息发送失败
	闹钟已设置

图标	描述
	正在使用自定义情景模式（图标中的数字有所不同）
	正在使用“标准”情景模式
	正在使用“户外”情景模式
	正在使用“静音”情景模式
	正在使用耳机
	呼叫被转接
	正在使用 EDGE
	正在漫游
	飞行模式开
	蓝牙已启动
	播放 BGM
	暂停 BGM
	存储卡已启用


# 主屏

图标	描述
	<p>对于入站 Push 电子邮件检查 Push 电子邮件：点触娱乐中的游戏和应用程序，然后点触应用程序。</p> <p>*注意：用户可能不能同时使用 Push 电子邮件和访问 WAP（或多媒体信息），具体取决于所在区域或 SIM 运营商。</p>

## 从状态栏更改状态

点触状态栏的中心以打开状态摘要。它显示当前时间、网络、服务 ID、电池、手机内存、外部存储器、情景模式、MP3 及蓝牙状态。您可以在这里设置情景模式类型、播放/暂停 MP3 及激活/关闭蓝牙。




## 使用多任务功能


按多任务硬键  以打开多任务菜单。在此，您可以查看正在运行的所有应用程序并通过一次点触即可访问它们。

如果后台中正在运行某个应用程序（如，游戏或 FM 收音机），状态栏中将显示 .

# 通话



## 拨打电话

- 1 点触  以打开键盘。
- 2 使用键盘键入号码。
- 3 点触  以开始通话。
- 4 要结束通话，请按  键。

**提示!** 要输入 + 以拨打国际电话，请长按 。



**提示!** 按电源键锁定触摸屏，避免意外拨出电话。

## 从电话簿拨打电话

- 1 从主屏点触  以打开电话簿。
- 2 轻触屏幕顶部的“名称”字段框，然后使用键盘输入您要呼叫的联系人的前几个字母。
- 3 从过滤列表中点触您要呼叫的联系人的旁边的通话图标。如果该联系人有多个号码，则拨打默认号码。
- 4 或者，您可以点触联系人姓名，如果该联系人有多个号码可用，请选择您要使用的号码。您也可以点触  以启动对默认号码的呼叫。


## 接听和拒接来电

电话铃响起时，按  键可接听电话。

要静音，可向上滑手机滑盖。这将解锁已锁定的手机，然后轻触 。如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。点触  拒接来电。

# 通话

## 通话选项

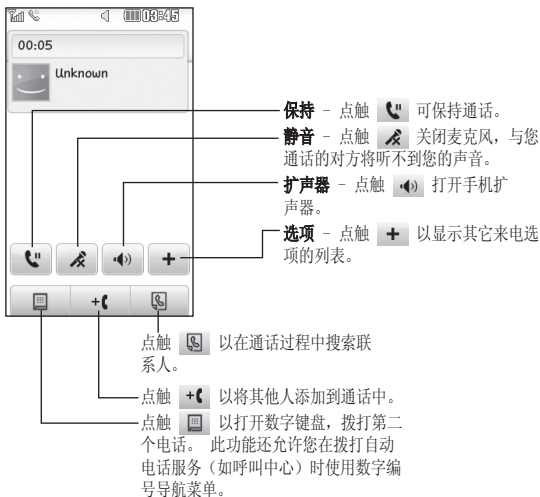



**提示!** 要在选项列表或联系人列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

## 快速拨号

您可以为常用联系人指定快速拨号号码。

- 1 在“通信”选项卡中选择电话簿，然后选择快速拨号。
- 2 语音邮件已设为快速拨号 1。不能对此设置进行更改。点触任意其它号码，为其指定快速拨号联系人。
- 3 此时将打开您的电话簿。点触要指定到该号码的联系人电话号码一次，以选择该联系人。要查找联系人，请点触“名称”字段框，输入所需联系人姓名的第一个字母。

## 拨打第二个电话

- 1 在初始呼叫中，点触  并键入您要呼叫的号码。
- 2 点触  以连接通话。
- 3 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 4 要在通话间更改，请点触或按保持通话的号码。
- 5 要结束一个呼叫或同时结束两个呼叫，请按 ，选择全部、已保留或启动，然后选择结束。

**提示！** 点触任意单个通话记录条目，以查看通话日期、时间和时长。

**备注：** 您需要为每个通话各自付费。

## 查看通话记录

点触“通信”选项卡中的近期记录。

**提示！** 点触任意单个通话记录条目，以查看通话日期、时间和时长。

# 通话

## 使用呼叫转接

- 1 点触“设置”选项卡中的通话设置。
- 2 点触呼叫转接。
- 3 选择转接电话的情况：转接所有语音来电、忙碌时、无人接听时，无网络或关机时。
- 4 输入您要转接至的电话号码。
- 5 点触请求以激活。

**备注：**转接通话会产生相应费用。有关详细信息，请联系您的网络运营商。

**提示！** 要关闭所有通话转接，请从呼叫转接菜单中选择全部停用。

## 使用呼叫限制

- 1 点触“设置”选项卡中的通话设置。
- 2 点触呼叫限制。
- 3 选择以下六个选项中的一项或所有项：

**所有拨电**

**国际拨出电话**

**主国以外的国际拨电**

**所有来电**

**国际漫游时来电**

## 全部停用

- 4 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

**提示！** 从通话设置项中选择固定拨号打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的PIN2 码。仅可以使用手机拨打此号码列表中的号码。

## 更改常用通话设置

- 1 点触“设置”选项卡中的通话设置。
- 2 滚动并点触常用设置。在此，您可以修改以下设置：

**拒接来电** - 将开关滑动到开以突出显示拒绝列表。您可以点触文本框，从所有通话、特定联系人或群组、未知号码（不在电话本中的号码）通话或禁显号码通话中进行选择。点触保存以更改设置。

**发送本机号码** - 选择当您呼叫对方时是否显示您的号码。

**自动重拨** - 向左滑动开关为开，向右滑动开关为关。

**接听模式** - 选择是使用发送键还是任意键接听电话。

**分钟提示** - 向左滑动开关为开，在通话过程中每隔一分钟将听到提示音。

**蓝牙接听模式** - 选择免提可使用蓝牙耳机接听来电，或选择手机按手机任意键接听来电。

**保存新号码** - 选择是以保存新号码。

## 电话簿

### 正在搜索联系人

有两种方式可搜索联系人：

- 1 点触“通信”选项卡中的电话簿。
- 2 点触搜索。
- 3 您将看到一个联系人列表。在“名称”字段中键入联系人姓名的首字母会使菜单跳转到列表的该字母区域。


**提示!** 当您点触“名称”字段时，将显示字母键盘。

### 添加联系人


- 1 点触“通信”选项卡中的电话簿，然后点触添加联系人。
- 2 选择是将联系人保存到手机还是 SIM 卡。
- 3 输入姓氏和名称。
- 4 对同一个联系人，您最多可以输入 5 个不同的号码。每个条目下的类型包括：手机、家庭、办公室、传呼机和传真。
- 5 添加电子邮件地址。每个联系人最多可输入两个不同的电子邮件地址。

# 电话簿

- 6 将联系人分配到一个或多个群组。每个联系人最多可分配三个群组。从以下选项选择：无群组、家人、朋友、同事、学校或重要人士。
- 7 您还可以添加铃声、生日、周年纪念、主页、家庭地址、公司名称、职位、公司地址、备忘录和角色。
- 8 点触保存以保存联系人。

**提示！** 选择  图标可以访问生日提醒小工具。通过获取“电话簿”中保存的生日，按时间先后顺序显示当月即将到来的生日。此工具还可方便您与具有生日的联系人进行通信，如通话、发送信息和电子邮件。

## 创建群组

- 1 点触“通信”选项卡中的电话簿。然后点触群组。
- 2 点触添加群组，或点触 ，然后选择添加群组。
- 3 输入新群组的名称。您也可以为群组指定铃声。
- 4 点触保存。

**备注：**如果您删除一个群组，分配至该群组的联系人不会被删除。他们将保留在您的电话本中。

## 更改电话簿设置

您可以调整您的电话簿设置，使电话簿符合您的需要。

- 1 点触“通信”选项卡中的电话簿，然后点触设置。
- 2 在此，您可以调整以下设置：
  - 联系人列表设置** - 调整电话簿位置、名称显示和快速命令键设置。
  - 复制** - 将电话簿从手机复制到SIM卡，或从SIM卡复制到手机。您可以一次选择一个或一次选择全部。
  - 移动** - 其操作与复制相同，但联系人仅保存在移动目标位置。
  - 通过蓝牙发送所有联系人** - 使用蓝牙，将所有联系人发送到其它蓝牙设备。如果选择此选项，您会收到打开蓝牙的提示。
  - 备份电话簿** - 请参阅备份并恢复手机上的信息。
  - 恢复电话簿** - 请参阅备份并恢复手机上的信息。

**清空电话本** - 删除所有联系人。  
如果确定要清空电话簿，请在手机和 SIM 之间选择，然后点触是。

## 查看文件信息

- 1 点触“通信”选项卡中的电话簿，然后点触文件信息。
- 2 在此，您可以查看服务号码、本机号码以及存储器资料（显示内存使用情况）和 我的模式。

**提示!** 要添加自己的名片，请选择我的模式，然后输入联系人的详细信息。点触保存完成。

**提示!** 使用 Facebook 上的“保存至联系人”，您可以查看 Facebook 用户的个人信息和状态，包括姓名、联系号码、电子邮件和照片。  
用户无权编辑那些信息，但是可以通过单击屏幕上的“刷新”更新信息。


请参阅 Linkbook 了解有关 Facebook 上的“保存至联系人”的更多信息。


# 信息

## 信息

LG GM360i 将短信和多媒体信息结合到一个直观易使用的菜单中。

## 发送信息


- 1 点触“通信”选项卡中的信息。然后，点触写信息开始写新短信。
- 2 点触插入添加图像、视频、声音、模板等。
- 3 点触屏幕底部的收件人以输入收件人。然后，输入号码或点触  选择一个联系人。您甚至可以添加多个联系人。
- 4 就绪后，请点触发送。


 **警告：**如果在短信中添加图像、视频或声音，则短信将自动转换为多媒体信息，您需要支付相应费用。

## 输入文本


有五种方式可输入文本：

电脑键盘、手写屏幕、手写箱、手写双屏。

通过点触  并点触输入法，您可以选择输入方法。

点触  以打开 T9 模式。只有当您选择键盘作为输入法时，才会显示此图标。

点触  选择编写语言。

点触  在数字、符号和文本输入间切换。  
使用 Shift 键在大小写输入之间切换。

## T9 模式

T9 模式使用内置字典，根据您点触按键的顺序识别您写入的内容。它预测您输入的内容，并且建议可选择项。


## 手写识别

在手写模式中，您只需在屏幕上书写内容，GM360i 即可将您的手写内容转换为信息。根据首选视图选择手写屏幕或手写箱。

## 设置电子邮件

点触“通信”选项卡中的电子邮件。

如果尚未设置电子邮件帐户，请启动并完成电子邮件设置向导。

通过选择 ，您可以检查和编辑设置。您还可以检查当您创建帐户时自动填写的其它设置。

## 检索电子邮件


您可以自动或手动查看帐户的新电子邮件。手动查看：

- 1 点触“通信”选项卡中的电子邮件。
- 2 点触您要使用的帐户。
- 3 选择收件箱。
- 4 要接收电子邮件，请选择“选项”菜单中的“检索”或“同步”。

## 使用新帐户发送电子邮件

- 1 点触新建电子邮件，新电子邮件将打开。
- 2 完成信息。
- 3 点触发送，您的电子邮件将被发送。

## 更改电子邮件设置

- 1 点触“通信”选项卡中的电子邮件。
- 2 点触  并选择电子邮件设置，然后可以调整以下设置：

### 电子邮件帐户

#### 首选电子邮件

**允许回复电子邮件** - 选择是否允许发送读取确认邮件。

**要求回复电子邮件** - 选择是否要请求读取确认邮件。

**读取间隔时间** - 选择 GM360i 检查新电子邮件信息的频率。

**读取数量** - 选择一次要检索的电子邮件数目。

**在转发和回复中包含信息** - 选择在回复时是否要包括原始邮件。

**包含附件** - 选择在回复中是否包含原始附件。

**漫游时自动读取** - 选择在国外（漫游）时是否自动检索邮件。

**新电子邮件通知** - 选择在收到新电子邮件时是否需要提示。

**签名** - 将此功能打开，然后创建电子邮件签名。

# 信息

**优先级** - 选择电子邮件信息的优先级级别。

**超出最大文件限制** - 设置发送邮件的最大大小。

**电子邮件计数器** - 输入您需要的日期。您可以检查在该期间内发送的电子邮件。

## 信息文件夹

“信息”菜单中有五个文件夹。

**收件箱** - 您接收到的所有信息将放置在收件箱中。

**草稿箱** - 如果您来不及写完一条信息，您可以将已写信息保存在此文件夹中。

**发件箱** - 这是发送信息时的临时存储文件夹。

**已发送项目** - 您所发送的所有信息将放置在此文件夹。

**我的文件夹** - 创建文件夹以存储信息。

## 更改文本信息设置

点触“通信”选项卡中的信息，然后点触设置。选择文本信息。您可以更改：

**文本信息中心** - 输入信息中心的详细信息。

**发送报告** - 向左滑动开关，在对方收到您发送的信息时接收确认。

**有效期** - 选择信息在信息中心中的最长保存时间。

**信息类型** - 将文本转换为文本、语音、传真、X.400 或电子邮件。

**字符编码** - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

**将长文本发送为** - 选择是以多条短信还是一条多媒体信息发送长信息。

## 更改多媒体信息设置

点触“通信”选项卡中的信息。滚动并选择设置和多媒体信息。您可以更改：

**读取模式** - 选择本地网络或漫游网络。如果选择手动，那么您仅会收到多媒体信息通知，随后，您可以决定是否要完整下载该信息。

**发送报告** - 选择以要求和/或允许发送报告。

**已读回复** - 选择以要求和/或允许已读回复。

**优先级** - 选择多媒体信息的优先级级别。

**有效期** - 选择信息在信息中心中的最长保存时间。

**幻灯片持续时间** - 选择幻灯片在默认情况下在屏幕上显示多长时间。

**创建模式** - 选择以创建“受限”“警告”或“未使用”多媒体信息。

**发送时间** - 选择信息发送前的等待时间。

**多媒体信息中心** - 选择或添加多媒体信息中心。

## 更改其它设置

点触“通信”选项卡中的信息。然后点触设置。

**语音邮件** - 点触  添加新增语音信箱。有关其提供的服务的详细资料，请联系您的网络运营商。

**服务信息** - 选择是接收还是阻止服务信息。您也可以通过在服务安全性选项中创建可信和不可信发件人列表来设置信息安全性。

**信息计数器** - 选择以设置对信息计数的期间。

**资料服务** - 选择是否打开/关闭小区广播，并选择您的频道和语言。

# 信息

## 社交网络服务 (SNS)

LG GM360i 带有 SNS，允许您体验并管理您的社交网络。您可以更新自己的 SN 位置状态和查看朋友的 SN 更新。

点触社交网络菜单并选择站点，如下所示：Facebook、Twitter 和 Myspace。

**提示!** Facebook 是一种预加载在您的手机上的本机应用程序，易于访问。Twitter 是一种基于 Java 技术的 Java 应用程序。其他应用程序可访问 WAP (无线应用协议) 服务。

**注意:** SNS 功能是一款数据密集型应用程序。连接并使用在线服务时可能要花费额外的费用。查看网络营运商要求的数据付费。

## Facebook

**主页:** 登录后您将看到朋友的状态更新。就新状态输入评论或查看他人状态。点触“选项”以选择“更新”、“新闻源过滤器(状态更新、照片)”、“删除”或“设置”。您也可以选择 + 图标来添加注释。

**配置文件:** 您可以选择“留言”>“状态更新”，然后写入当前状态。查看您的信息详情，然后点触“相册”>“上传照片”以上传照片。从“开始”中选择图像或“拍照”，然后为图像输入一些字幕。

**朋友:** 您可在 SNS 中查找很多朋友并查看其状态。选择“搜索”按钮以在 Facebook 中搜索您的朋友。

**信息:** 显示您的所有 SN 信息。您可以选择“收件箱/已发送”文件夹，并撰写 SN 信息。

**提示!** 使用 Facebook 源小工具 您可以将 Facebook 源小工具添加到主屏。从小工具托盘中拖动 Facebook 源小工具，然后点触确定。如果在主屏上注册了 Facebook 小工具，则它将显示您的 SN 站点中最新的 3 个源。您可以通过点触源小工具来直接访问 Facebook 应用程序。

SNS 设置中的选项包括：自动连接、删除和全部删除。通过在“自动连接”菜单中设置一人特定的时间段，可以自动打开/关闭 SNS。

## Linkbook

如果“SNS 模式”设置为“开”，您就可以将 Facebook 联系人的个人信息（如姓名、电话号码、电子邮件地址和照片）保存到电话簿中。使用 Facebook 上的“保存至联系人”按钮保存其个人信息。您可以在联系人视图中检查存储的信息。如果将“SNS 模式”设为“关”，则联系人列表中不显示 SNS 信息。


# 相机

## 了解取景器



**提示!** 您可以通过点触屏幕获取选项。几秒钟后，它们将自动关闭。


## 快速拍照

- 1 按手机右侧的  键。
- 2 当相机对好焦后，点触屏幕中心右侧的  拍照，也可以用力按手机侧面的 。

**提示!** 要切换为相机模式或视频模式，请向上/向下滑动取景器右侧中间的相机或视频图标。


## 拍照后


拍好的照片将显示在屏幕上。图像名称滚动显示在屏幕底部。

 点触可以传送信息、电子邮件或蓝牙方式发送照片。

 点触以设置主屏图像。

 点触以编辑照片。

 点触以编辑选定图片的名称。

 点触可以删除您拍摄的照片，然后点触是确认。将显示“已删除”信息。

 点触可以移动图片库。



# 相机

## 使用高级设置

从取景器中点触  以打开所有高级设置选项。

**拍摄模式** - 使您可以选择两种拍摄模式。

**色彩效果** - 选择适用于您所拍摄的照片的色调。有四个色调选项可供选择：关闭、黑白、反色或棕褐色。

**白平衡** - 从以下选项中选择：自动、白炽灯、晴、荧光灯或阴天。

**夜晚模式** - 在黑暗环境下非常有用。

**定时器** - 使用定时器，您可以设置拍照前按下拍摄按钮后的延迟。从 3 秒、5 秒或 10 秒中选择。如果照片中要包括您自己，定时器非常有用。

**质量** - 在超精细、精细和标准之间选择。质量越精细，照片将越清晰，同时，文件更大。这意味着存储器中保存的照片将越少。

**对焦** - 设置相机的焦点。

**查看模式** - 在“全屏”和“完整图像”之间选择。选择“全屏”，可能需要对图像进行剪裁以适应屏幕。

**选择存储位置** - 选择是将照片保存到手机内存还是外部存储器。

**显示已拍照片** - 选择是否要在拍照后查看照片并提供选项。

**隐藏图标** - 选择手动还是自动隐藏相机设置图标。


**快门声音** - 从三种快门声音中选择一种。

**网格屏幕** - 从关闭、简单十字或三等分中选择。

**恢复初始设置** - 重置所有相机设置。

# 录像机

## 了解取景器

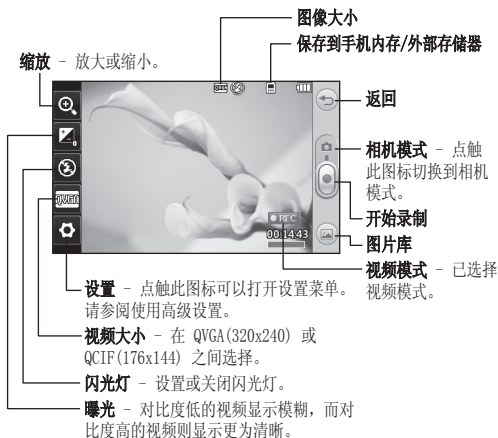







**提示!** 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要调用选项，请再次点触屏幕。

# 录像机

## 快速录制视频

- 1 按手机右侧的相机键持续几秒。


**提示!** 要切换为相机模式或视频模式，请向上/向下滑动取景器右部中间的相机或视频图标。

- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 在手机上按相机键  一次可以开始录制，或者点触红点 。
- 4 Rec 将显示在取景器底部，其中的计时器将显示视频长度。
- 5 要暂停视频，请点触 ，要恢复录制，请选择 。
- 6 点触屏幕上的  或再按  一次停止录制。

## 拍摄视频后

屏幕上将显示所拍摄视频的静态图像。视频名称在屏幕底部显示，左右侧将显示七个图标。

-  点触可以播放视频。
-  点触可以将视频作为信息或电子邮件，或通过蓝牙发送。
-  点触可以编辑视频。
-  点触以编辑选定图片的名称。
-  点触可以删除您刚拍摄的视频，点触是确认。此时将出现取景器。
- 点触  可以立即拍摄另一段视频。
-  点触可以查看保存的视频库和图片库。

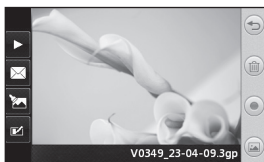

## 使用高级设置

从取景器中点触设置以打开所有高级设置选项。

**色彩效果** - 选择要对新视频使用的色彩效果。 关闭、黑白、反色、棕褐色。

**白平衡** - 白平衡确保视频中的白色显示真实。 要正确调整相机的白平衡，您需要确定光照条件。 从自动、白炽灯、晴、荧光灯或阴天中选择。

**质量** - 在超精细、精细和标准之间选择。 质量越精细，视频将越清晰，同时，文件更大。 因此手机内存中保存的视频将更少。

**时长** - 设置视频的长度限制。 选择是否将视频作为多媒体信息发送。

**提示!** 如果时长选择“多媒体信息”，请尝试选择较低的图像质量以拍摄更长视频。

**选择存储位置** - 选择是将视频保存到手机内存还是外部存储器。




**语音** - 选择是否录制带有声音的视频。

**隐藏图标** - 选择手动还是自动隐藏相机设置图标。

**恢复初始设置** - 重设所有录像机设置。





# 照片和视频

## 查看照片和视频

- 1 点触“娱乐”选项卡中的图片库。或点按相机预览屏幕上的 。您可以查看图片和视频。
- 2 屏幕上将显示您的图像库。
- 3 点触视频或照片可以完全打开。
- 4 要播放视频，请点触 。要暂停播放，请点触 。

**提示！** 向左或向右轻弹以查看其它照片或视频。



## 从视频中捕获图像





- 1 选择您要从中拍摄图像的视频。
- 2 点触  可将视频暂停在您要转换为图像的某个画面上，然后点触屏幕左上角以打开  菜单。
- 3 从选项菜单中选择 。
- 4 屏幕上将显示图像以及图像的名称。
- 5 点触  可以返回视频。
- 6 图像将保存在我的文档文件夹中，并显示在图片库中。

**警告！** 如果手机中没有录制多媒体文件，某些功能可能无法使用。



## 以幻灯片显示方式查看照片

幻灯片模式允许以幻灯片的形式一次性显示图片库中的所有照片。无法以幻灯片模式观看视频。


- 1 点触图片库中的 ，然后滚动并选择幻灯片显示。
- 2 开始幻灯片放映。  
幻灯片下有多个选项：  
点触  以返回。

-  点触可以在放映到特定照片时，暂停幻灯片放映。
-  再次点触可以恢复播放。
-  点触可以按随机顺序显示。
-  点触可以使幻灯片放映速度更快或更慢。


## 将照片设为墙纸


- 1 点触“娱乐”选项卡中的图片库。
- 2 点触您要设为墙纸的照片。
- 3 点触屏幕可以打开该菜单。
- 4 点触 。
- 5 您可以使用  更改图片大小。
- 6 对图片满意后，请点触设置。
- 7 从您要更改的选项中选择：全部、小工具主屏、快速拨号主屏。


## 编辑照片


1 打开您要编辑的照片，点触以显示选项。


2 点触图标以调整照片：

 使用手指划过屏幕以选定区域。


 徒手对照片进行绘制更改。从四个选项中选择线条粗细，然后选择要使用的颜色。


 向图片添加手写内容。

 使用标记修饰照片。从不同标记和颜色中选择，点触照片中您要放置标记的位置。


 擦除所画的内容。您也可以选择橡皮擦大小。

 点触可以返回图片库。

 保存您对照片所做的更改。选择是将更改保存在源文件中，还是另存为新文件。如果选择新文件，请输入文件名。


 撤消上一个效果，或您对照片所做的更多编辑。

 点触以打开过滤器选项。

 您可以修改所选照片。



## 为照片添加效果

1 从编辑屏幕点触.

2 选择为照片应用任何选项：

**面部修饰** - 自动检测图像中的面部，并突出显示。


**隧道效果** - 鱼眼相机效果。

**彩色负片** - 彩色负片效果。

**黑白** - 黑白效果。

**棕褐色** - 应用棕褐色效果。

**模糊** - 应用模糊效果。

**锐度** - 沿滚动条移动滑块，锐化照片对焦效果。选择确定图标以应用更改，或选择取消。

**马赛克** - 点触以为照片应用马赛克效果。

**油画** - 应用油画效果。

**素描** - 应用效果以使图片看上去像素描。

**浮雕** - 应用浮雕效果。

## 照片和视频

**逼真** - 应用清晰真实的效果。


**月光** - 使灯光看起来像月光。

**怀旧** - 应用老相片效果。

**明亮** - 应用光束效果。

**卡通** - 应用卡通效果。

**水彩** - 应用水彩效果。

- 3 要撤消效果，点触撤消  即可。

## 多媒体

您可以将任意多媒体文件储存到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡，您可以释放手机内存的空间。您可以在“娱乐”选项卡中的我的文档菜单中找到这些文件。

### 图片


图像包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

### 发送照片

- 1 点触“娱乐”选项卡中的我的文档，然后选择图像。选择需要的图片。
- 2 点触发送并从多媒体信息、电子邮件和蓝牙中选择。

### 使用图像

您可以选择图像以用作墙纸和屏幕保护程序，或用来识别呼叫者。


- 1 点触“娱乐”选项卡中的我的文档，然后选择图像。选择需要的图片。然后点触 。
- 2 点触用作并从以下选项中选择：
  - 主屏图像** - 设置主屏墙纸。
  - 锁定屏幕图像** - 设置锁定屏幕的墙纸。

**联系人图像** - 将图像分配给联系人列表中的某人，当其呼叫时，您的手机上会显示该图片。

**开机图像** - 设为开机时显示的图像。

**关机图像** - 设为关机时显示的图像。

### 打印图像


- 1 点触“娱乐”选项卡中的我的文档，然后选择图像。选择需要的图片。然后点触 。
- 2 点触打印，然后再蓝牙和图片打印机之间选择。

**提示！** 您可以通过蓝牙或连接到图片打印机兼容的打印机打印。

## 多媒体

### 移动或复制文件



您可以在手机内存和存储卡之间移动或复制文件。您可能需要执行此操作以释放其中一个存储位置的存储空间，或保护图像不丢失。

- 1 点触“娱乐”选项卡中的我的文档，选择图像，然后点触 。
- 2 选择移动或复制。
- 3 您可以依次点触图像以标记/取消标记。标记您要移动或复制的图像，然后点触复制/移动。

### 声音

声音包含一个声音列表，其中包括下载的声音、默认声音以及录音。在此，您可以管理或发送声音，或者将声音设为铃声。

### 使用声音

- 1 点触“娱乐”选项卡中的我的文档，然后选择声音。
- 2 选择您需要的声音，将出现一条确认信息。
- 3 点触是 。它将开始播放。
- 4 点触 ，然后选择用作。
- 5 从铃声、信息提示音、开机铃声和关机铃声中选择。


### 视频

视频文件夹显示已下载的视频以及手机中录制的视频列表。

### 观看视频

- 1 点触“娱乐”选项卡中的我的文档，然后选择视频。
- 2 选择要播放的视频。

## 发送视频剪辑

- 1 选择视频。
- 2 依次点触  和发送，然后从信息、电子邮件或蓝牙中选择。

## 游戏和应用程序

您可以在手机上安装新游戏和应用程序，以供您在闲暇时娱乐。

您也可以使用“娱乐”选项卡中的游戏和应用程序访问此功能。

## 玩游戏

- 1 点触“娱乐”选项卡中的游戏和应用程序。
- 2 选择游戏，然后选择要启动的游戏。

## 文档

从我的文档中的文档菜单中，您可以查看所有文档文件。在此，您可以查看 Excel、PowerPoint、Word、文本和 PDF 文件。

## 将文件传输到手机

蓝牙是在电脑和手机间传输文件的最便捷方式。您也可以使用大容量存储设备或通过同步数据线使用 LG PC 套件。

### 使用蓝牙传输：

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用电脑发送文件。
- 3 文件发出后，您必须通过点触是在您的手机上接受它。
- 4 默认情况下，该文件应出现在我的文档中的第二个选项卡即我的文件夹中。如果文件夹已满，您可能看不到该文件。

## 其它

其它包含不属于图片、声音、视频、文档、游戏或应用程序的文件的列表。

# 多媒体

## 音乐

LG GM360i 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要进入音乐播放器，请点触“娱乐”选项卡中的音乐。您可以在此访问多个文件夹：

**近期播放** - 播放您近期播放的歌曲。

**备注：**音乐文件的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家关于使用此类材料的国家立法。

**所有曲目** - 包含手机上除预先加载的默认音乐以外的所有歌曲。

**歌手** - 按歌手浏览音乐集合。

**专辑** - 按专辑浏览音乐集合。

**流派** - 按流派浏览音乐集合。

**播放列表** - 包含您创建的所有播放列表。

**随机播放曲目** - 以随机顺序播放您的曲目。





## 将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或同步数据线。

您也可以使用 LG PC 套件。使用蓝牙传输：

- 1 请确保双方设备都已打开蓝牙并且对对方可见。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 音乐文件准备就绪后可以发送，您应点触是在手机上接受。
- 4 音乐文件应显示在音乐 > 所有曲目中。

## 播放歌曲

- 1 点触“娱乐”选项卡中的音乐。
- 2 选择文件夹之一，然后选择您要播放的歌曲。
- 3 点触  暂停歌曲。
- 4 点触  跳到下一首歌曲。
- 5 点触  以返回到上一首歌曲。
- 6 点触  返回到音乐菜单。  
点触多次可以返回到菜单。

## 创建播放列表

您可以从播放列表文件夹中选择歌曲，以创建自己的播放列表。

- 1 点触“娱乐”选项卡中的音乐。
- 2 点触播放列表，然后点触添加新的播放列表，输入播放列表名称，然后点触保存。
- 3 所有曲目文件夹将显示手机中的所有歌曲。点触所有要包含在播放列表中的歌曲；这些曲目名称旁边将显示一个勾号。
- 4 点触完成。

## FM 收音机


LG GM360i 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

您必须连接耳机才能收听无线广播。

## 搜索电台


您可以手动或自动微调收音机电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您必须首先将耳机插入手机以将其用作天线。

### 自动微调：

- 1 滚动并点触“娱乐”选项卡中的 FM 收音机，然后点触 。
- 2 点触自动扫描。将出现一条确认信息。选择是，随后将自动查找电台并分配给手机中的频道。


**备注：**您还可以通过使用屏幕中心显示的 ◀ 和 ▶ 手动微调电台。如果按住 ◀ 和 ▶，将自动查找电台。

## 重设频道

- 1 滚动并点触“娱乐”选项卡中的 FM 收音机，然后点触 。
- 2 选择重置频道进行重设，或选择重置所有频道以重设所有频道。每个频道的开始频率将返回为 87.5MHz。

# 管理器

## 将事件添加到日历中

- 1 点触实用工具中的管理器，然后选择日程表。
- 2 选择您要添加事件的日期。
- 3 依次点触  和添加事件。
- 4 点触类别，然后从约会、周年纪念或生日中选择。
- 5 输入主题。
- 6 检查并输入您希望事件开始的日期和时间。对于约会和周年纪念，请在下面的“时间”和“日期”框中输入事件结束的时间和日期。如果是约会，则输入地点。
- 7 设置闹钟和重复。
- 8 选择保存，您的事件将保存在日程表中。方形光标标记已保存事件的日期，在事件开始时间会有闹钟提醒，以便您进行安排。

## 向任务列表添加项目

- 1 点触“实用工具”选项卡中的管理器。
- 2 选择任务，然后点触添加任务。
- 3 为任务项设置日期、添加备注或选择优先级：高、中或低。
- 4 选择保存以保存任务。

## 使用日期搜索器

日期搜索器是一款便捷的工具，有助于您计算特定天数后的日期。例如，2007 年 10 月 10 日后 60 天是 2007 年 12 月 9 日。


- 1 点触“实用工具”选项卡中的管理器。
- 2 选择日期搜索器。
- 3 在自选项卡中设置所需日期。
- 4 在之后选项卡中设置天数。
- 5 此时会在下面显示天。

## 添加备忘录

- 1 点触“实用工具”选项卡中的备忘录。
- 2 点触添加备忘录。
- 3 键入备忘录，然后点触“保存”。
- 4 您的备忘录将显示在屏幕上的备忘录应用程序中。

## 设置闹钟


- 1 点触“实用工具”选项卡中的闹钟。小闹钟应该默认显示在列表中，您不能删除它。
- 2 点触添加闹钟。
- 3 在时间字段框中设置您希望响闹钟的时间。
- 4 在重复框中选择您希望闹钟重复的方式：一次、每天、周一~周五、周一~周六、周六至周日、除假日外或选择日。图标会指示您选择的工作日。

- 5 选择闹钟类型设置所需的闹钟类型。
- 6 选择闹铃，然后从文件夹中选择一个声音。要听声音，请点触声音，然后点触 。
- 7 在备忘录框中为闹钟添加备忘录。
- 8 最后，您可以设置暂停间隔：5、10、20、30 分钟、1 小时或休眠关。
- 9 设置闹钟后，请点触保存。

**备注：**您最多可以设置 5 个闹钟，包括小闹钟。

**提示！** 将开关滑到开/关以设置闹钟。

## 添加带绘图面板的备忘录

- 1 滚动并点触“实用工具”选项卡中的绘图面板。
- 2 点触添加图画。
- 3 在触摸屏 LCD 上画下备忘录，然后点触 。
- 4 点触是，您的备忘录将显示在屏幕上的绘图面板应用程序中。

# 管理器

## 屏幕捕捉



相机键

相机键位于手机的右侧。按相机键两次，即可捕捉屏幕。捕捉的图像将保存在“图片库”以及“我的文档”的“图像”中。


此功能可捕捉以下屏幕：  
WAP、SNS、电子邮件编辑器及视图屏幕、信息编辑器及接收的信息，等等。



按相机键两次，即可捕捉屏幕。

## 语音备忘录

使用录音机录制语音备忘录或其它音频文件。

点触“实用工具”选项卡中的录音机，选择 ，然后点触设置以更改设置：

时长 - 设置录音长度。从无限制、多媒体信息 或 1 分钟中选择。

质量 - 选择声音质量。从超精细、精细或正常中选择。


存储位置 - 选择保存音频文件的位置。在外部存储器和手机内存之间选择。

## 录制声音或语音

- 1 点触  开始录音。
- 2 点触  暂停录音。
- 3 点触  结束录音。
- 4 点触  收听录音。

## 使用计算器


- 1 点触“实用工具”选项卡中的工具。
- 2 选择计算器。
- 3 点触键盘上的数字键以输入数字。


- 4 对于简单计算，点触您所需的函数 (+, -, x, ÷)，然后点触 =。
- 5 对于较复杂的计算，请点触  并从 sin、cos、tan、log、ln、exp、sqrt、deg 或 rad 等中选择。

## 换算单位

- 1 点触“实用工具”选项卡中的工具。
- 2 选择单位换算器。
- 3 选择要换算的内容：币种、面积、长度、重量、温度、体积或速度。
- 4 随后，您可以选择单位，输入要换算的初始值，然后选择要换算的目标单位。
- 5 屏幕上将显示相应的值。

## 向世界时钟添加城市

- 1 点触“实用工具”选项卡中的工具。
- 2 选择世界时钟。
- 3 点触 ，然后选择新城市。

- 4 滚动地球仪，然后点触所需区域，选择地图上的城市。
- 5 或点触 ，然后在搜索字段框中键入所需城市提名称。


## 使用秒表

- 1 点触“实用工具”选项卡中的工具。
- 2 选择秒表。
- 3 点触屏幕底部的开始启动计时器。
- 4 如果您要记录时间，请点触圈。
- 5 点触停止结束计时器。
- 6 点触恢复从您停止的时间重新开始秒表，或点触重置重新开始计时。


## 电脑同步

您可以同步电脑和手机，以确保所有重要详情和日期匹配。您还可以对文件做好备份。

### 在电脑上安装 LG PC suite

- 1 从主屏上按 ，然后选择“设置”选项卡中的连接。
- 2 选择 USB 连接模式，然后点触 PC suite。
- 3 通过 USB 数据线连接手机和电脑，等待片刻。此时将显示安装指南信息。
- 4 根据屏幕说明完成 LG PC suite 安装程序向导。
- 5 安装完成后，桌面上将显示 LG PC suite 图标。

### 连接手机和电脑

- 1 从主屏上按 ，然后选择“设置”选项卡中的连接。
- 2 选择 USB 连接模式。
- 3 点触 PC suite。
- 4 通过 USB 数据线连接手机和电脑，等待片刻。PC suite 自动运行。

### 备份并恢复手机上的信息。

- 1 如上所述，将手机连接到电脑。
- 2 单击“工具”中的备份与恢复。
- 3 标记您要备份或恢复的内容。选择您要保存备份信息的位置，或恢复信息的位置。单击开始图标。
- 4 将备份或保存您的信息。

### 在电脑上查看手机文件

- 1 如前所述，将手机连接到电脑。
- 2 单击照片图标。
- 3 手机图像文件将加载到电脑上。当您单击手机内存时，将会显示这些文件。
- 4 单击视频图标。
- 5 手机视频文件将加载到电脑上。当您单击手机内存时，将会显示这些文件。

**提示!** 在电脑中查看手机内容有助于您排列文件、整理文档或删除不再需要的内容。

## 同步电话簿

- 1 将手机连接到电脑。
- 2 单击电话本图标。
- 3 电脑中将导入并显示手机中保存的所有联系人。（单击“同步电话本”，电脑将会加载手机中的联系人）
- 4 单击文件，然后选择导出。现在，您可以选择目标以及要保存电话簿的位置。


## 同步信息

- 1 将手机连接到电脑。
- 2 单击信息图标。
- 3 所有手机信息将显示在屏幕上的文件夹中。
- 4 单击列的标题以重新排列信息，按发件人、内容和接收日期排序。

## 将手机用作音乐同步设备

您的手机可以用作音乐同步设备，仅用于同步音乐文件。

使用 Windows Media Player 10/11 可执行音乐同步，同时支持手机内存和外部存储卡。

- 1 断开手机与电脑的连接。
- 2 从主屏选择 ，然后选择“设置”选项卡下的连接。
- 3 选择 USB 连接模式。
- 4 点触音乐同步。
- 5 将手机连接到电脑。手机将显示：已连接。

# 网络

## 访问网页

- 1 点触“实用工具”选项卡中的浏览器。
- 2 要进入浏览器主页，请选择主页。或者，选择输入地址后键入 URL，然后选择连接。

**备注：**连接此服务并下载内容时，可能会产生额外费用。查看网络运营商要求的数据付费。

## 添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。


- 1 点触“实用工具”选项卡中的浏览器。
- 2 选择书签。此时屏幕上将出现一个书签列表。
- 3 要添加新书签，请点触添加书签。在相应的字段框中输入书签名称和 URL。
- 4 点触保存。现在，您添加的书签将显示在书签列表中。
- 5 要访问书签，只需点触书签旁边的“连接”图标或点触书签标题，然后点触连接。您将连接到书签。

## 使用 RSS 阅读器

RSS（简易供稿）是一种网络订阅源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订阅源、网络订阅源或频道，它包含相关网站的内容摘要或完整文本。RSS 使人们可以以主动方式随时关注其感兴趣的网站。这相比手动查看这些网站要轻松很多。

用户订阅源的方式：将订阅源的链接输入阅读器，或单击浏览器中的 RSS 图标即可开始订阅流程。阅读器将定期检查用户订阅的源以查看新内容并下载找到的任何更新。

## 保存页面

- 1 如上所述，访问所需网页。
- 2 点触  并选择保存此页面。
- 3 为网页输入一个名称，便于您轻松识别。
- 4 点触保存。

## 访问保存的网页

点触“实用工具”选项卡中的浏览器。然后选择已保存页面。您可以在此查看已保存的页面。

## 查看浏览器历史记录

点触“实用工具”选项卡中的浏览器。然后选择历史记录。

## 更改网络浏览器设置

点触“实用工具”选项卡中的浏览器。然后选择设置。

您可以选择编辑网络设置、外观设置、缓存、Cookie、安全性。

## 将手机用作调制解调器

LG GM360i 可以同时用作电脑的调制解调器，使您在无法使用有线连接时仍可访问电子邮件和互联网。您可以使用 USB 数据线或蓝牙。

### 使用 USB 数据线：

- 1 确保电脑上已经安装了 LG PC suite。
- 2 用前面所示的 USB 数据线连接 LG GM360i 和您的电脑并启动 LG PC suite 软件。
- 3 单击电脑上的 InternetKit。然后单击添加按钮并选择调制解调器。
- 4 写入可连接到互联网的配置，然后保存值。
- 5 您创建的配置将显示在电脑屏幕上。选择并单击连接。电脑将通过 LG GM360i 连接。

**备注：**有关使用 LG PC suite 同步的详细信息。

## 网络

### 使用蓝牙：

- 1 确保已打开蓝牙并且对和电脑 LG GM360i 上均可见。
- 2 配对电脑和 LG GM360i，此时需要通行码才能建立连接。
- 3 使用 LG PC suite 上的连接向导创建一个活动的蓝牙连接。
- 4 单击电脑上的 Internet Kit。然后，单击新建按钮。
- 5 选择 LG Mobile USB 调制解调器，然后选择确定。此时将在屏幕上打开。
- 6 写入可连接到互联网的配置，然后保存值。
- 7 您创建的配置将显示在电脑屏幕上。选择并单击连接。电脑将通过LG GM360i 连接。

### 访问 Google

使用此菜单，您可以使用 Google 服务。  
Google 服务为用户提供了使用 **Search** 的机会。

# 设置

## 个性化情景模式

您可以在主屏上快速更改情景模式。

使用设置菜单，您可以个性化每种情景模式。

- 1 点触“设置”选项卡中的情景模式。
- 2 选择您要编辑的情景模式。
- 3 随后，您可以更改列表中可用的所有声音和提示选项，包括铃声和音量、信息提示音设置等。

## 更改显示设置

点触“设置”选项卡中的显示设置。

### 显示设置

**墙纸** - 选择主屏或锁定屏幕的主题。

**小工具主页模板** - 选择主页模板。

**通讯广场** - 点触 通讯广场指南以检查其功能。

**手机方案** - 选择黑色或白色（卡通样式用户界面）。

**功能表样式** - 选择功能表样式的样式，蜿蜒、滚动或逐个屏幕。

**锁定屏幕** - 选择解锁方式。

**锁定屏幕手势** - 选择锁定屏幕中的手势类型。

**拨号** - 调整数字颜色。

**字体** - 调整字体大小。有四个选项：小、中、大和极大。

**备注：**背景灯打开时间越长，电池耗电量就越大。这可能导致需要更频繁地为手机充电。

**亮度** - 调整屏幕亮度。

**问候语信息** - 选择开或关，然后在文本字段中填写问候语信息。

**开机声音/关机声音** - 选择开机/关机屏幕的声音。

## 更改手机设置

您可以根据自己的需要，随心所欲地对 LG GM360i 进行调节。

点触“设置”选项卡中的手机设置，然后从以下列表中选择。

### 手机设定

**日期和时间** - 调整日期和时间设置，或者选择自动更新时间或使用夏令时选项。

**省电** - 选择始终开/关闭或仅限夜间以切换初始的省电设定。

## 设置

**语言** - 更改 LG GM360i 的显示语言。

**自动键盘锁** - 在主屏下自动锁定键盘。

**安全性** - 调整您的安全设置，包括 PIN 码和手机锁。

**存储器资料** - 有关详细信息，请参阅使用内存管理器。

**恢复初始设定** - 将所有设置重设为出厂默认值。

**文件信息** - 选择帮助以查看 LG GM360i 的技术信息。并且您可以通过手机信息升级软件。

### 使用内存管理器

LG GM360i 有三种可用存储器：手机、SIM 卡和外部存储卡。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

点触“设置”选项卡中的手机设定，然后点触存储器资料。

**手机公用存储器** - 查看 LG GM360i 中针对以下各项的可用内存：图片、声音、视频、多媒体信息、电子邮件、Java 应用程序、其它。

**手机预留存储器** - 查看手机目前针对以下各项的可用内存：短信、电话簿、日历、任务列表、备忘录、闹钟、通话记录、书签及其它。

**USIM 卡内存** - 查看 USIM 卡的可用内存。

**外部存储器** - 查看外部存储卡的可用内存（您可能需要单独购买存储卡）。

**主存储器设置** - 选择项目的首选保存位置是手机内存还是外部存储器。

### 更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。要更改任意设置，请使用此菜单：

点触“设置”选项卡中的连接。

网络设定

**选择网络** - 如果设为自动，LG GM360i 将自动搜索网络并向网络注册手机。为了得到最佳的服务和质量，建议选择此设置。如果选择手动，所有当前可用网络都会显示，您可以从中选择一个进行注册。

**首选列表** - 您可以添加要连接的首选网络。如果自动搜索网络，只需从网络列表中选择一，如果不是，则手动添加新网络。

**互联网配置文件** - 此菜单显示互联网网络设定。根据国家/地区不同,您可能无法删除或编辑默认配置。

**存取点** - 网络运营商已保存此信息。您可以使用此菜单添加新的存取点。

**分组数据连接** - 选择设备何时连接到网络以传输分组数据。

**USB 连接模式** - 从选项选择一个数据服务并使用 LG PC suite 套件软件同步 LG GM360i 以复制手机中的文件。有关同步的详细信息,请参阅电脑同步。

如果使用带 Windows Media Player 的音乐同步,请在此菜单中选择音乐同步。音乐同步仅可用于音乐内容。

## 使用蓝牙发送和接收文件

### 发送文件:

- 1 打开要发送的文件,通常是照片、视频或音乐文件。
- 2 选择发送。  
选择蓝牙。
- 3 如果已配对蓝牙设备, LG GM360i 将不会自动搜索以配对其它蓝牙设备。否则, LG GM360i 将搜索范围内其它启用了蓝牙的设备。


- 4 选择您要向其发送文件的设备。
- 5 您的文件将被发送。

**提示!** 检查进度栏以确保文件已发送。

### 接收文件:

- 1 要接收文件,您的蓝牙必须为开且可见。有关详细信息,请参阅下面的更改蓝牙设置。
- 2 手机会提示您一条信息,是否接收来自其他发件人的文件。点击是以接收文件。
- 3 您可以查看文件的保存位置。对于图像文件,您可以选择查看文件或用作墙纸。文件通常保存在我的文档中的相应文件夹。

### 更改蓝牙设置:

点触“设置”选项卡中的蓝牙。然后选择 , 再选择设置。

### 进行更改:

**我的设备可见性** - 选择可见、隐藏或可见 1 分钟。

**我的设备名称** - 为您的 LG GM360i 输入名称。

**支持的服务** - 选择在其它关联服务中如何使用蓝牙。

## 设置

**远程 USIM 卡模式** - 打开或关闭。

**我的地址** - 显示您的蓝牙地址。

### 与其它蓝牙设备配对

将您的 LG GM360i 与其它设备配对，您可以设置受通行码保护的连接。

- 1 查看蓝牙是否为开且可见。您可以在设置菜单中更改可见性。
- 2 点触搜索。
- 3 LG GM360i 将搜索设备。搜索完成时，屏幕上将显示刷新。
- 4 选择您要与之配对的设备，输入通行码，然后点触确定。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

### 使用蓝牙耳机

- 1 查看蓝牙是否为开且可见。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 点触连接前询问或始终连接，然后点触是立即连接。LG GM360i 将自动切换到“耳机”情景模式。

### Wi-Fi

文献管理器允许您根据设备上的 Wi-Fi（无线局域网）管理互联网连接。

它能允许手机连接本地无线网络，或者无线访问互联网。

Wi-Fi 比蓝牙无线技术速度更快且连接范围更广，可用于快速收发电子邮件和浏览互联网。

**备注：** LG GM360i 支持 WEP、WPA、WPA2 加密，不支持 EAP、WPS 加密。如果您的 Wi-Fi 服务运营商或网络管理员为网络安全设置了加密，您应在“安全类型”字段中输入密钥。如果未设置加密，此字段不会填入值“无”。您可以从您的 Wi-Fi 服务运营商或网络管理员处获得密钥。

## 软件升级


### LG 手机软件升级计划

有关安装和使用此计划的详细信息，请访问 [http:// update.lgmobile.com](http://update.lgmobile.com)。使用此功能，无需访问服务中心，您即可快速方便地将软件升级到 Internet 上的最新版本。由于手机软件升级计划要求用户注意升级过程的持续时间，因此，在继续执行操作之前，请留意每一个步骤中出现的任何说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。对于升级过程中造成的任何数据丢失，制造商不承担任何责任，为了安全起见，建议您事先记录下任何重要信息。

## 配件

这些配件随 GM360i 提供。

充电器



数据线



电池



立体声  
耳机



**备注：**

- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

# 技术参数

## 标准

产品名称: GM360i

系统: GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900

## 外部环境

**最高:** +55° C (放电)、  
+45° C (充电)

**最低温度:** -10° C

## 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

### 暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR)信息。此款 GM360i 手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则,其中包括为确保所有人员(无论年龄和健康状况)安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级,但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会(ICNIRP)建议的 SAR 上限值为:每 10g 重的人体组织吸收的能量平均值不超过 2W/kg。
- 由 DASy4 对该型号手机进行的测试,人耳能够承受的 SAR 最大值为 1.33 W/kg (10 克),戴在身体上时,其值为 1.31 W/kg (10 克)。

- 电气电子工程师协会(IEEE)建议的 SAR 上限值为:每 1 克重的人体组织吸收的能量平均值不超过 1.6W/kg,此 SAR 数据适用于各个国家/地区的居民。

### 产品保养和维护

#### 警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效,并可能造成危险。

- 不要拆解本手机。当需要维修时,请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机掉落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如,请勿在医院使用手机,因为它可能影响敏感的医疗装置。
- 手机充电时,请勿用湿手操作手机。这可能会导致电击或手机严重受损。

- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

## 有效的手机操作

### 电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。

- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

## 行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

# 关于安全有效使用手机的准则

## 防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

## 玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务提供商处更换玻璃。

## 爆炸区域

不要在正进行爆炸的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

## 在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务运营商核准。

## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。

- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。 如果可能，请循环使用电池。 不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。





Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



## GM360i User Guide

Congratulations on your purchase of the advanced and compact GM360i phone by LG, designed to operate with the latest digital mobile communication technology.

# Contents


Getting to know your phone .....	6	Changing the common call setting .....	20
Open view .....	7	Contacts.....	21
Installing the SIM and battery .....	8	Searching for a contact.....	21
Charging your phone.....	9	Adding a new contact.....	21
Memory card.....	10	Creating a group .....	22
Using your touch screen .....	11	Changing your contact settings.....	22
Touch screen tips .....	11	Viewing information.....	23
Control the touch screen .....	11	Messaging.....	24
Your home screen .....	13	Messaging.....	24
The quick keys.....	14	Sending a message .....	24
The status bar.....	15	Entering text.....	24
Changing your Status from		T9 mode .....	24
the status bar.....	16	Handwriting recognition .....	24
Using the Multi-tasking		Setting up your email.....	25
function.....	16	Retrieving your emails .....	25
Calls .....	17	Sending an email using your new	
Making a call.....	17	account.....	25
Making a call from your contacts..	17	Changing your email settings .....	25
Answering and rejecting a call.....	17	Message folders.....	26
In-call options .....	18	Changing your text message	
Speed dialling .....	19	settings.....	26
Making a second call .....	19	Changing your multimedia message	
Viewing your call logs .....	19	settings .....	27
Using call divert.....	20	Changing your other settings .....	27
Using call barring.....	20		

# Contents

Social network services (SNS) .....	28	Sending a photo.....	39
Social network services (SNS).....	28	Using an image.....	39
Facebook.....	28	Printing an image .....	39
Linkbook.....	29	Moving or copying a file.....	40
Camera .....	30	Sounds.....	40
Getting to know the viewfinder .....	30	Using a sound .....	40
Taking a quick photo .....	31	Videos .....	40
After taking a photo.....	31	Watching a video.....	40
Using the advanced settings .....	32	Sending a video clip .....	41
Video camera .....	33	Games & Apps .....	41
Getting to know the viewfinder .....	33	Playing a game .....	41
Making a quick video .....	34	Documents .....	41
After making a video .....	34	Transferring a file to your phone....	41
Using the advanced settings .....	35	Others .....	41
Your photos and videos .....	36	Music.....	42
Viewing your photos and videos ...	36	Transferring music onto your phone	
Capturing an image from a video..	36	.....	42
Viewing your photos as a slide show		Playing a song.....	42
.....	36	Creating a playlist .....	43
Setting a photo as wallpaper.....	37	FM Radio .....	43
Editing your photos .....	37	Searching for stations .....	43
Adding an effect to a photo.....	38	Resetting channels.....	43
Multimedia.....	39	Utilities .....	44
Pictures .....	39	Adding an event to your calendar.	44
		Adding an item to your task list .....	44
		Using date finder .....	44

Adding a memo.....	45	Using RSS reader .....	50
Setting your alarm.....	45	Saving a page.....	51
Adding a memo with the drawing Panel .....	45	Accessing a saved page .....	51
Screen Capture .....	46	Viewing your browser history .....	51
Voice recorder .....	46	Changing the web browser settings .....	51
Recording a sound or voice .....	46	Using your phone as a modem.....	51
Using your calculator.....	46	Access to Google.....	52
Converting a unit.....	47	Settings .....	53
Adding a city to your World clock..	47	Personalising your profiles .....	53
Using the stopwatch .....	47	Changing your screen settings .....	53
PC Sync.....	48	Changing your phone settings .....	54
Installing LG PC Suite on your computer .....	48	Using memory manager .....	54
Connecting your phone and PC.....	48	Changing your connectivity settings .....	55
Backing up and restoring the information on your phone .....	48	Sending and receiving your files using Bluetooth.....	56
Viewing phone files on your PC.....	48	Changing your Bluetooth settings:56	
Synchronising your contacts .....	49	Pairing with another Bluetooth device.....	57
Synchronising your messages.....	49	Using a Bluetooth headset .....	57
Using your phone as a Music Sync device .....	49	Wi-Fi.....	57
The web .....	50	Software Upgrade .....	58
Accessing the web .....	50	Accessories .....	59
Adding and accessing your bookmarks .....	50	Technical data.....	60
		Guidelines for safe and efficient use.	61

## Getting to know your phone

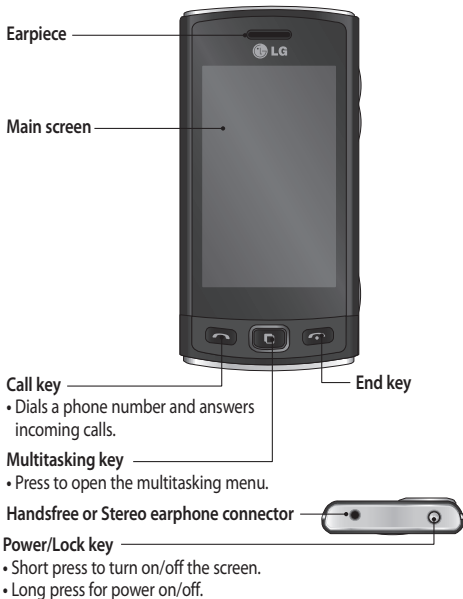

**⚠ WARNING:** Placing a heavy object on the phone or sitting on it can damage the phone's LCD and touch screen functionality.

## Open view



### Side keys


- When the screen is at the Home screen: Ring tone and Touch tone volume
- During a call: Earpiece volume.

### Camera key

- Go to the camera menu directly by pressing and holding the key.



### Charger, cable

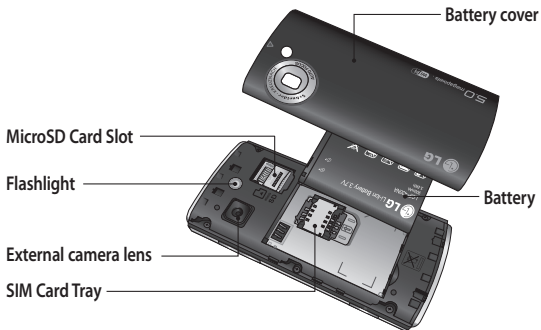

### Battery cover

### MicroSD Card Slot

### Flashlight

### External camera lens

### SIM Card Tray

### Battery

# Installing the SIM and battery

## 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.




**WARNING:** Do not use your fingernail to remove the battery.

**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 2 Install the SIM card

Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently outwards.

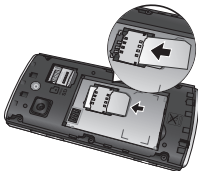

## 3 Install the battery

Insert the left side of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the right side of the battery until down it clicks into place.



## Charging your phone

Remove the charger socket cover on the side of your GM360i. Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable into the phone and plug it into a power socket. Your GM360i must be charged until the "Battery full" message appears on the screen.

**NOTE:** The battery must be fully charged initially to improve battery lifetime.



# Memory card

## Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

**NOTE:** A memory card is an optional accessory.


- 1 Open the microSD card slot cover on the left-hand edge of the phone.



- 2 Slide the microSD card into the slot until it clicks into place. Make sure the gold contact area is facing downwards.

## Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.

- 1 From the Home screen select , then **Phone settings** in **SETTINGS** tab.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.

**NOTE:** If there is existing content on your memory card, the folder structure may be different after formatting since all files will have been deleted.

# Using your touch screen

## Touch screen tips


- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GM360i is not in use, it will return to the lock screen.

## Control the touch screen

The controls on the GM360i touch screen change dynamically depending on the task you are carrying out.

## Opening Applications

To open any application, simply touch its icon.

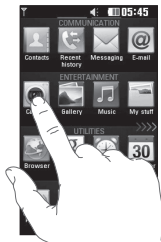

## Scrolling

Drag from side to side to scroll. On some screens, such as the call history list, you can also scroll up or down.



## Using your touch screen

### Lock screen gesture

Lock screen gesture - set a gesture to the 9 extended shortcut applications. Gesture in Lock screen allows users to unlock the phone and execute the applications directly as they draw a gesture on the screen.

To set up this feature,

- 1 Select  - Screen settings - Lock screen gesture

- 2 Drag & drop the preferred gesture from the bottom of the screen to the applications you want to assign them to.


**TIP!** Draw ? shape to go to Lock screen gesture menu in the lock screen.

**TIP!** This function is only available unlocked from Idle screen.



# Your home screen


You can drag and click what you need right away in all home screen types.

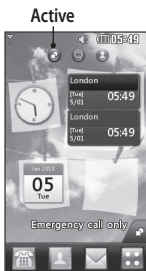

**Widget home screen** - When you touch  on the bottom right of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot where it was dropped.



**Speed dial home screen** - When you touch , the speed dial list appears. You can call, send a message, edit or delete the contact directly in this home screen.

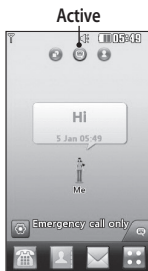

**Livesquare home screen** - On the Livesquare screen, You can easily make a call and send a message to the number allocated to an avatar. To use the call, messaging or contacts function, select an avatar and choose the **Quick key** icon you want to use.

**TIP!** The User Interface is based on three types of Homescreen. To swap between the home screens just wipe quickly over the display from left to right, or from right to left.

# Your home screen

## The quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** menu. From here you can create a new SMS or MMS, or view your message folder.



























Touch to open the full **Top menu** which is divided into four categories.

## The status bar



The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed
	An alarm is set

Icon	Description
	Customised Profile in use (The number in the icon will vary)
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enabled for use


## Your home screen


Icon	Description
	<p>For incoming Push email Check Push email: Touch <b>Games &amp; Applications</b> in the <b>Entertainment</b> and then touch <b>Applications</b>.</p> <p><b>*Attention:</b> Depending on the region or SIM operator, user may not be able to use push e-mail and access WAP (or MMS) simultaneously.</p>
	Wi-fi is on

### Changing your Status from the status bar

Touch the centre of the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3s, Wifi and Bluetooth status. Here you can set the Profile type, play/pause MP3s and activate/deactivate wifi and Bluetooth.




### Using the Multi-tasking function


Press the multi-tasking hard key  to open the Multitasking menu. From here you can view all the applications that are running and access them with one touch.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

# Calls



## Making a call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.
- 4 To end the call, press the  key.


**TIP!** To enter + for making an international call, press and hold .



**TIP!** Press the power key to lock the touchscreen to prevent calls being made by mistake.

## Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.


## Answering and rejecting a call

When your phone rings, touch the  key to answer the call.


To mute the ringing, slide up the cover. This will unlock the phone if it is locked, then tap . This is useful if you forgot to change your profile to Silent for a meeting. Touch  to reject an incoming call.


# Calls

## In-call options

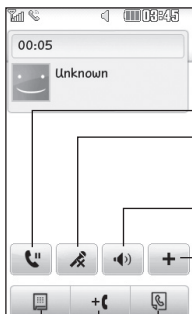



**Hold** - Touch  to put a call on hold.


**Mute** - Touch  to turn off the microphone so the person you are talking to cannot hear you.

**Speaker** - Touch  to turn the speaker phone on.

**Options** - Touch  to bring up a list of further in-call options.

Touch  to search your contacts during a call.

Touch  to add another person to the call.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.





**TIP!** To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.

## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Contacts** in the **COMMUNICATION** tab and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your **Contacts** will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the **Name** field box and enter the first letter of the name of the contact required.

## Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Touch  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls press  and select **End Calls** followed by **Active, Held** or **All calls**.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

**NOTE:** You will be charged for each call you make.

## Viewing your call logs

Touch **Recent history** in the **COMMUNICATION** tab.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

# Calls

## Using call divert

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all voice calls, when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Enter the number you want to divert to.
- 5 Touch **Request** to activate.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

## Using call barring

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call barring**.
- 3 Choose any or all of the Five options:
  - All outgoing**
  - Outgoing international**
  - Outgoing international calls except home country**

## All incoming

### Incoming when abroad

- 4 Enter the call barring password. Please check with your network operator about this service.
- 5 To turn off all call barrings, select **Deactivate all** from the **Call barring** menu.

**TIP!** Select **Fixed dial numbers** from the **Call settings** options to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

## Changing the common call setting

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Scroll and touch **Common settings**. From here you can adjust the settings for:
  - Call reject** - Slide the switch to **ON** to highlight the **Reject list**. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered

numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Slide the switch left for **ON** or right for **OFF**.

**Answer mode** - Choose whether to answer the phone using the send key or any key.

**Minute minder** - Slide the switch left to **ON** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

**Save new number** - Select **Yes** to save a new number.

## Contacts

### Searching for a contact

There are two ways to search for a contact:

- 1 Touch **Contacts** in the **COMMUNICATION** tab.
- 2 Touch **Search**.
- 3 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.


**TIP!** The alphabetical keypad is displayed once you tap the Name field.

### Adding a new contact


- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager**, **Fax** and **General**.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.

# Contacts

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Memo** and **Livecon**.
- 8 Touch **Save** to save the contact.

**TIP!** Birthday widget can be accessed by selecting the icon . It displays upcoming birthdays chronologically for the month by taking birthdays that are saved in Contacts. This widget also facilitates communication to a contact that has birthday by allowing features such as Call, Messaging and Email.

## Creating a group

- 1 Touch **Contacts** in the **COMMUNICATION** tab. And touch **Groups**.
- 2 Touch **Add group** or touch  and select **Add group**.
- 3 Enter a name for your new group. You can also assign a ringtone to the group.

- 4 Touch **Save**.

**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your **Contacts**.

## Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Settings**.

- 2 From here, you can adjust the following settings:

**Contact list settings** - Adjust the **Contacts location**, **Name display** and **Quick command key** settings.

**Copy** - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time, or all at once.

**Move** - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to.

### **Send all contacts via Bluetooth -**

Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

**Backup contacts** - See Backing up information on your phone.

**Restore contacts** - See restoring information on your phone.

**Clear contacts** - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to wipe your contacts.

**TIP!** Using Save to Contact on Facebook allows you to see personal information and status of Facebook user including name, contact number, email and photo.

User is not allowed to edit those information and can update the information by clicking refresh on the screen.

Please refer to Linkbook for more about Save to Contact on Facebook.

## **Viewing information**

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Information**.
- 2 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (showing your memory usage) and **My profile**.


**TIP!** To add your own business card, select **My profile** and enter your details as you would for any contact. Touch **Save** to finish.


# Messaging

## Messaging

Your GM360i combines SMS and MMS into one intuitive and easy-to-use menu.

### Sending a message


- 1 Touch **Messaging** in the **COMMUNICATION** tab. And touch **New message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.


### Entering text


There are five ways to enter text:

**Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.**

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input. Use **Shift** key to change between capital or lowercase input.

### T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.


### Handwriting recognition

In Handwriting mode you simply write on the screen and your GM360i will convert your handwriting into your message. Select **Handwriting-Screen** or **Handwriting-Box** according to your preferred view.

## Setting up your email

Touch **E-mail** in the **COMMUNICATION** tab.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

## Retrieving your emails


You can automatically or manually check your account for new emails. To check manually:

- 1 Touch **E-mail** in the **COMMUNICATION** tab.
- 2 Touch the account you want to use.
- 3 Select **Inbox**
- 4 To receive an E-mail, choose either **Retrieve** or **Synchronisation** in **Option** menu.

## Sending an email using your new account

- 1 Touch **New e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send** and your email will be sent.

## Changing your email settings

- 1 Touch **E-mail** in the **COMMUNICATION** tab.
- 2 Touch  and select **E-mail settings** and then you can adapt the following settings:

### **E-mail accounts** **Preferred e-mail**

**Allow reply e-mail** - Choose to allow the sending of read confirmation messages.

**Request reply e-mail** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your GM360i checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at any one time.

**Include message in Fwd. & Reply** - Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

**Auto retrieval in roaming** - Choose whether to retrieve your messages automatically when abroad (roaming).

# Messaging

**New e-mail notification** - Choose whether to be alerted to new emails.

**Signature** - Switch this feature **ON** and create an email signature.

**Priority** - Choose the priority level of your email messages.

**Maximum sending size** - Set the maximum size of sending mail.

**E-mail counter** - Input the date you want. You can check emails you sent during that period.

## Message folders

There are five folders in Messaging menu.

**Inbox** - All the messages you receive are placed into your inbox.

**Drafts** - If you do not finish writing a message, you can save what you have done in this folder.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent items** - All the messages you have sent are placed in this folder.

**My folders** - Create folders to store your messages.

## Changing your text message settings

Touch **Messaging** in the **COMMUNICATION** tab and touch **Settings**. Select **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long text as** - Choose to send long messages as **Multiple SMS** or as an **MMS**.

## Changing your multimedia message settings

Touch **Messaging** in the **COMMUNICATION** tab. Scroll and choose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose between **Home network** or **Roaming network**.

If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to request and/or allow delivery reports.

**Read reply** - Choose to request and/or allow read replies.

**Priority** - Choose the priority level of your multimedia message.

**Validity period** - Choose how long your messages are stored at the message centre.

**Slide duration** - Choose how long your slides appear on the screen by default.


**Creation mode** - Choose to create multimedia messages freely or restrictively.

**Delivery time** - Choose how long to wait before a message is delivered.

**Multi msg centre** - Choose or add a multimedia message centre.

## Changing your other settings

Touch **Messaging** in the **COMMUNICATION** tab. And touch **Settings**.

**Voicemail** - Touch  to add a new Voicemail service. Contact your network operator for more information about the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

**Message counter** - Choose to set period for counting messages.

**Info. service** - Choose whether to turn Cell broadcast on/off and select your channels and languages.

## Social Network Services (SNS)

### Social network services (SNS)

Your GM360i has SNS that lets you enjoy and manage your social network. You can update your own SN place status and view your friends' SN updates.

Touch **Social network** menu and select the site as below: Orkut, Facebook, Twitter, Picasa, Flickr and Myspace.

**TIP!** Facebook is a native application preloaded onto your phone, and easy to access. Twitter is a java application based on Java technology. Other applications access to the WAP(Wireless Application Protocol) services.

**NOTE:** SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

### Facebook

**Home:** Log in and you will see your friend's updated status. Input your comment about new status or check others. Touch Options to choose Refresh, News Feed filter(Status

updates, Photo), Delete or Settings. You can also write comments by selecting + icon.

**Profile:** You can select the Wall > Status updates and write the current status. See your info detail and upload the photo by touching Album > Upload Photo. Choose from Go to images or Take a picture, and then input some caption with images.

**Friends:** You can find many friends in SNS and view their status. Search your friends in facebook by selecting Search tap.

**Message:** It will show all your SN messages. You can see the Inbox/Sent folder, and write a SN message.

**TIP!** Using Facebook Feed Widget  
You can add the facebook feed widget to your home screen. Drag the facebook feed widget from widget tray and touch **OK**.  
If the facebook widget registered on home screen, it will show latest 3 feeds from your SN site. You can also access the facebook application directly by touching up the feed widget.


There are SNS on/off, SNS account login & Delete(logout) in SNS setting. And SNS can be on/off automatically by setting a certain period of time in Auto connection menu.

## **Linkbook**

If the SNS Mode is set to On, you can save the personal information of your Facebook contacts, such as name, phone number, email address, and photo, into Contacts. Use the Save to Contact button on Facebook to save their personal information. You can check the stored information in the Contact view. If the SNS Mode is set to off, SNS information is not displayed in Contacts list.




# Camera
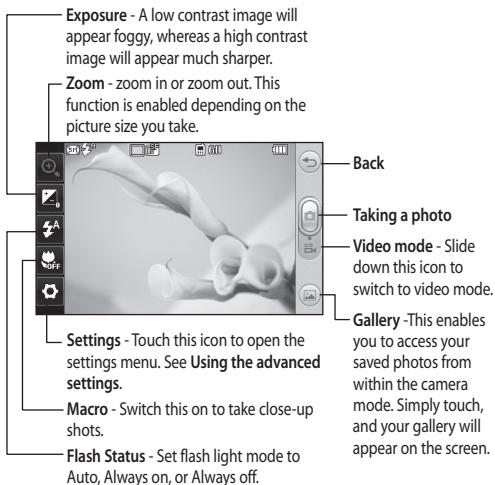
## Getting to know the viewfinder



**TIP!** You can bring up the options by tapping the screen. They automatically turn off after a few seconds.

## Taking a quick photo

- 1 Press the  key on the right side of the phone.
- 2 When the camera has focused on your subject, touch the  on the right-centre of the screen to take a photo. You can also press the  key on the side of the phone firmly.

**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

## After taking a photo


Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen.

-  Touch to send the photo as a message, email or via Bluetooth.
-  Touch to set a Home screen, contacts, startup or shutdown image.
-  Touch to edit the photo.
-  Touch to edit the name of the selected picture.
-  Touch to delete the photo you have just taken and confirm by touching **Yes**. The “Deleted” message appears.
-  Touch to move to your gallery.



## Camera

### Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

**Size** - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact.

Select a pixel value from the seven numerical options: **5M** (2560x1920), **3M** (2048x1536), **2M** (1600x1200), **1M** (1280x960), **VGA** (640x480), **WQVGA** (400x240), **QVGA** (320x240).

**Shot mode** - This enables you to select the two shooting modes.

**Colour Effect** - Choose a colour tone to apply to the photo you're taking. There are four colour tone options:

**Off, Black & White, Negative or Sepia.**

**White balance** - Choose from **Auto, Incandescent, Sunny, Fluorescent or Cloudy.**

**Night mode** - Useful to use in dark places.

**Self-timer** - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds, 5 seconds or 10 seconds.** Great for the

group photo you want to be part of.

**Quality** - Choose between **Super fine, Fine** and **Normal.** The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

**Focus** - Sets the focus of camera.

**View mode** - Choose between Full screen or Full image. In Full screen, the image may be cropped to fit the screen.

**Select storage** - Choose whether to save your photos to the Handset memory or to the External memory.

**Show captured image** - Choose to view the picture with options after taking a photo.

**Hide icons** - Choose the camera settings icons to be hidden manually or automatically.


**Shutter sound** - Select one of the three shutter sounds.

**Grid screen** - Choose from **Off, Simple cross** or **Trisection.**

**Reset settings** - Reset all the camera settings.

# Video camera

## Getting to know the viewfinder

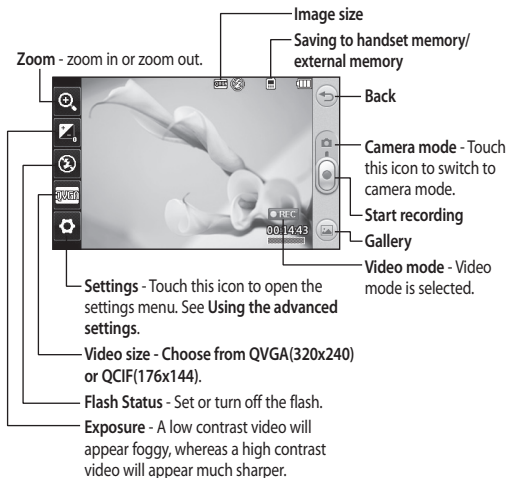







**TIP!** You can close all shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options, touch the screen again.

# Video camera

## Making a quick video








- 1 Press the camera key on the right side of the phone for a few seconds.

**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the camera key  on the phone once to start recording. Or touch the red dot .
- 4 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the  a second time to stop recording.

## After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with seven icons down the left and right sides .

-  Touch to play the video.
  -  Touch to send the video as a **Message or Email** or by **Bluetooth**.
  -  Touch to edit the video.
  -  Touch to edit the name of the selected picture.
  -  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.
- Touch  to shoot another video straight away.
-  Touch to view a gallery of saved videos and images.



## Using the advanced settings

From the viewfinder, touch **Settings** to open all the advanced settings options.

**Colour Effect** - Choose a colour tone to use on your new video. **Off, Black & White, Negative, Sepia.**

**White balance** - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy.**

**Quality** - Choose between **Super fine, Fine** and **Normal.** The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

**Duration** - Set a time limit for your video. Choose whether or not to send the video as an MMS.

**TIP!** If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

**Select storage** - Choose whether to save your videos to the Handset memory or to the External memory.

**Voice** - Choose whether or not to record a video with sound.

**Hide icons** - Choose the camera settings icons to be hidden manually or automatically.

**Reset settings** - Reset all the video camera settings.




# Your photos and videos


## Viewing your photos and videos


- 1 Touch **Gallery** in the ENTERTAINMENT tab. Or Touch  on your camera preview screen. You can check your pictures and videos.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.
- 4 To play the video touch . To pause playback touch .

**TIP!** Flick left or right to view other photos or videos.

## Capturing an image from a video


- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch the upper left side of the screen to open the  menu.
- 3 From the options menu select .
- 4 The image will appear on the screen, with its image name.

- 5 Touch  to return to the video.
- 6 The image will be saved in your **My stuff** folder and appear in the gallery.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.


## Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.


- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.


There are options within slideshows:

Touch  to go back.



 Touch to pause the slideshow on a particular photo.

 Touch again to resume playback.





 Touch to show random.


 Touch to increase or decrease the speed of the slideshow.


## Setting a photo as wallpaper

- 1 Touch **Gallery** in the ENTERTAINMENT tab.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch the screen to open the menu.
- 4 Touch .
- 5 You can change the size of the picture with .
- 6 When you are happy with the picture touch **Set**.
- 7 Choose from the options what you want to change: **All**, **Widget**, **Speed dial**.


## Editing your photos


- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to alter your photo:
  -  Move your finger across the screen to select the area.
  -  Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.
  -  Add writing to the picture.


 Decorate your photo with stamps. Choose from the different stamps and colours and touch your photo where you want to place them.


 Erase whatever you draw. You can also select the eraser size.

 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.

 Undo the last effect or edit you made to the photo.

 Touch to open the Filter options.

 You can adjust the selected photo.



## Your photos and videos

### Adding an effect to a photo

- 1 From the editing screen, touch



- 2 Choose to apply any of the options to the photo:

**Face beautify** - Automatically detect a face in the image and brighten it up.


**Tunnel effect** - Lomo camera effect.

**Colour negative** - Colour negative effect.

**Black and white** - Black and white colour effect.

**Sepia** - Give a Sepia effect.

**Blur** - Give a blurred effect.

**Sharpen** - Move the marker along the bar to sharpen the focus of the photo. Select **OK** icon to apply the changes or choose  to cancel.

**Mosaic blur** - Touch to apply a blurred mosaic effect to the photo.

**Oil painting** - Give an Oil painting effect.

**Sketch** - Apply an effect that makes the picture look like a sketch.

**Solarize** - Change the effect of exposure to the light.

**Emboss** - Give an Emboss effect.

**Vivid** - Give an effect of clearness and brilliance.

**Moonlight** - Change the light to look like moonlight.

**Antique** - Give an old-looking effect.

**Glow** - Give a light beam effect.

**Cartoon** - Give a cartoon effect.

**Water color** - Give a watercolour effect.

- 3 To undo an effect simply touch

**Undo** .

# Multimedia

You can store any multimedia files on your phone's memory so that you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free space in your phone's memory. You can find these files in the menu **My stuff** in the ENTERTAINMENT tab.

## Pictures

**Images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

## Sending a photo

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want.
- 2 Touch **Send** and choose from **Multimedia message**, **Email** and **Bluetooth**.

## Using an image

You can choose images to use as wallpapers and the lock screen or even to identify a caller.

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select

**Images**. Select the picture you want. And touch .

- 2 Touch **Use as** and choose from:

**Homescreen image** - Set a wallpaper for the home screen.

**Lock screen image** - Set a wallpaper for the lock screen.

**Contacts image** - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.

**Start up image** - Set an image to appear when you switch the phone on.

**Shut down image** - Set an image to appear when you switch the phone off.

## Printing an image


- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

**TIP!** You can print via bluetooth or by connecting to a PictBridge compatible printer.

# Multimedia

## Moving or copying a file


You can move or copy a file between the phone memory and the memory card. You might want to do this to either free some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch **My stuff** in the ENTERTAINMENT tab, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

## Sounds

The **Sounds** contains a list of sounds including the downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as a ringtone.

## Using a sound

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Sounds**.
- 2 Select a sound you wants to play.
- 3 Touch  and select **Use as**.

- 4 Choose from **Ringtone**, **Message tone**, **Start-up** and **Shut down**.

## Videos

The **Videos** shows a list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Videos**.
- 2 Select a video to play.

## Sending a video clip

- 1 Select a video.
- 2 Touch  then **Send** and choose from **Message**, **Email**, **Bluetooth**.

## Games & Apps

You can install new games and applications on your phone to keep you amused when you have spare time.

You can also access this using the menu **Games & Apps** in the ENTERTAINMENT tab.

## Playing a game

- 1 Touch **Games & Apps** in the ENTERTAINMENT tab.

- 2 Select **Games**, then choose a game to launch.

GM360i also comes with some preloaded applications.

**Opera Mini 5** - It is a Java application that can be accessed from the Games&Apps menu in your phone. Some of the salient features of this browser are Multiple Windows, Security, Touch zooming, Book Marks, History, Saved Pages, Speed Dial.

**NOTE:** To browse using Opera Mini 5, Data Connection is required.

**Push e-mail** - With a push email application, the client's mailbox is constantly updated with arriving email without user intervention.

**NOTE:** Make sure that Auto update is on before using Push E-mail.

## Documents

From the **Documents** menu in **My stuff**, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

## Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the Mass storage or LG PC Suite via your sync cable.

### To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your Corresponding folder.

## Others

The **Others** contains a list of the files which are not pictures, sounds, videos, documents, games or applications.

# Multimedia

## Music

Your LG GM360i has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music** in the ENTERTAINMENT tab. From here, you can access a number of folders:

**Recently played** - Plays the songs you have played recently.

**NOTE:** The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

**All tracks** - Contains all the songs you have on your phone except the pre-loaded default music.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains all the playlists you have created.

**Shuffle tracks** - Play your tracks in a random order.



## Transferring music onto your phone



The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Playing a song

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Select one of the folders and the song you want to play.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.

- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.
- 3 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 4 Touch **Done**.

## FM Radio


Your LG GM360i has an FM radio feature so you can tune into your favourite stations to listen on the move.





You must attach your headphones to listen to the radio.

## Searching for stations


You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

### To auto tune:

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.


**NOTE:** You can also manually tune into a station by using  and  displayed in the centre of the screen. If you press and hold  and , the stations will be automatically found.

## Resetting channels

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Choose **Reset channel** to reset the choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

## Utilities

### Adding an event to your calendar

- 1 Touch **Organiser** in the UTILITIES tab and select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
- 5 Enter **Subject**.
- 6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

### Adding an item to your task list

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Tasks** and touch **Add Task**.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

### Using date finder

**Date finder** is a handy tool to help you calculate what the date will be after a certain amount of days has passed.


- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Date finder**.
- 3 Set the required date in the **From** tab.
- 4 Set the number of days in the **After** tab.
- 5 The **Target date** will be shown below.

## Adding a memo

- 1 Touch **Memo** in the UTILITIES tab.
- 2 Touch **Add memo**.
- 3 Type your memo, then touch **Save**.
- 4 Your memo will then appear on the screen in the **Memo** application.

## Setting your alarm


- 1 Touch **Alarm** in the UTILITIES tab. **Widget alarm** should appear in the list as default and you can not delete it.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound in the **Time** field box.
- 4 Choose how you would like your alarm to repeat in the **Repeat box**: **Not repeated**, **Daily**, **Mon ~ Fri**, **Mon ~ Sat**, **Sat ~ Sun**, **Except holiday** or **Select day**.  
The icons then indicate the weekday you select.

- 5 Select **Alarm type** to select the type of alarm you want.
- 6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds, touch the sound, followed by .
- 7 Add a memo for the alarm in the **Memo** box.
- 8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

**NOTE:** You can set up to 5 alarms including **Widget alarm**.

**TIP!** Slide the switch **ON/OFF** to the alarm to set it.

## Adding a memo with the drawing Panel

- 1 Scroll and touch **Drawing Panel** in the UTILITIES tab.
- 2 Touch **Add drawing**.
- 3 Draw your memo on the touch screen LCD followed by .
- 4 Touch **Yes**, then your memo will appear on the screen in the **Drawing Panel** application.

# Utilities

## Screen Capture



The camera key is located on the right side of the phone. By pressing the Camera key twice, the screen can be captured. Captured image will be saved in Gallery as well as in Image in My Stuff.

This feature captures following screens:

WAP, SNS, Email composer & view screen, Message composer & Received messages etc.


Camera key



By pressing the Camera key twice, the screen can be captured.

## Voice recorder

Use your voice recorder to record voice memos or other audio files.





Touch **Voice recorder** in the UTILITIES tab and select , then **Settings** to change Settings:

**Duration** - Set the recording duration. Choose from **No limit**, **MMS** or **1 min**.

**Quality** - Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.


**Memory in use** - Select where to save the audio files. Choose between External memory and Handset memory.

## Recording a sound or voice

- 1 Touch  to begin recording.
- 2 Touch  to pause recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.

## Using your calculator

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.


- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.

### Converting a unit

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

### Adding a city to your World clock

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **World clock**.
- 3 Touch the , followed by **New city**.

- 4 Scroll the globe, touch the area you want and choose the city on the map.
- 5 Or touch the  and type the name of the city you require in the search field box.


### Using the stopwatch

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Stopwatch**.
- 3 Touch **Start** on the bottom of the screen to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.


## PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

### Installing LG PC Suite on your computer

- 1 From the Home screen press  and select **Connectivity** on the SETTINGS tab.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

### Connecting your phone and PC

- 1 From the Home screen press  and select **Connectivity** on the SETTINGS tab.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait for a while. PC Suite runs automatically.

### Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup & Restore** at the Tools.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to, or restore information from. Click **Backup/Restore** icon.
- 4 Your information will be backed up or restored.

### Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the **Photos** icon.
- 3 Phone image files will be loaded on the PC. When you click on the Phone Memory, they will be displayed.
- 4 Click on the **Videos** icon.

- 5 Phone video files will be loaded on the PC. When you click on the Phone Memory, they will be displayed.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content that you no longer need.

## Synchronising your contacts


- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your handset. (Click on Sync Contacts, then it will load contacts of phone)
- 4 Click on File and select **Export**. You can now select the target and where you want to save your contacts to.

## Synchronising your messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the screen.
- 4 Click the title of the columns to rearrange messages sorted by From, **Message** and **Date Received**.

## Using your phone as a Music Sync device

Your Phone can be used as a Music Sync device for Sync Music Files only. Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the Home screen select , then select **Connectivity** on the SETTINGS tab.
- 3 Select **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect the phone to your PC. Your phone will read: **Connected**.

# The web

## Accessing the web

- 1 Touch the **Browser** in UTILITIES tab.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.


- 1 Touch **Browser** in the UTILITIES tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **Add bookmark**. Enter a name for your bookmark followed by the URL in the corresponding field box.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.

- 5 To access the bookmark simply touch the **Connect** icon next to the bookmark or touch the bookmark title and then touch **Connect**. You will be connected to your bookmark.

## Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

## Saving a page

- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

## Accessing a saved page

Touch **Browser** in the UTILITIES tab. And select **Saved pages**. You can view the saved pages here.

## Viewing your browser history

Touch **Browser** in the UTILITIES tab. And select **History**.

## Changing the web browser settings

Touch **Browser** in the UTILITIES tab. And select **Settings**.

You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies** or **Security** settings.

## Using your phone as a modem

Your GM360i can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

### Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GM360i and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click **InternetKit** on your PC. Then click **Add** button and select **Modem**.
- 4 Write the Profile that can connect to the Internet and save the values.
- 5 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GM360i.

**NOTE:** For more information about synchronising using the LG PC Suite.

## The web

### Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and GM360i.
- 2 Pair your PC and GM360i so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **New** button.
- 5 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 6 Write the Profile that can connect to the Internet and save the values.
- 7 The profile that you create will appear on your PC screen. Select it and click **Connect**.  
Your PC will connect through your GM360i.

### Access to Google

You can use Google service using this menu.

Google service offers user a chance to use **Search**.

# Settings

## Personalising your profiles

You can quickly change your profile on the Home screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles** in the **SETTINGS** tab.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message tone** settings and more.

## Changing your screen settings

Touch **Screen settings** in **SETTINGS** tab.

### Screen settings

**Wallpaper** - Choose the theme for your home screen or lock screen.

**Widget home template** - Choose a home template.

**Livesquare** - Touch **Livesquare guide** to check its functions.

**Handset theme** - Choose black or white (Cartoon styled UI).

**Top menu** - Choose the style of the top menu, **Zigzag, Scrolling** or **Screen by screen**.

**Lock screen** - Choose the way of unlock.

**Lock screen gesture** - Choose the gesture type in a lock screen.

**Dialling** - Adjust the number colour.

**Font** - Adjust the font size. There are four options: **Small, Medium, Large** and **Very large**.

**NOTE:** The longer the backlight is on, the more battery power is used. This may result in your needing to charge your phone more often.

**Brightness** - Adjust the screen brightness.

**Greeting message** - Choose **ON** or **OFF** and fill in the greeting message in the text field.

**Start-up/Shut down** - Choose an image for your start-up/shut down screen.

# Settings

## Changing your phone settings

Enjoy the freedom of adapting how your GM360i works for your own style.

Touch **Phone settings** in the SETTINGS tab, then choose from the list below.

**Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the SMS to the pre-defined numbers configured by real owner.

ATMT SMS will contain information about the stolen phone IMEI, current location (captured as per Cell Broadcast message) & Phone number of the person who is using that handset.

To activate the ATMT feature, you will need to set ATMT 'ON', and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT code is "000000."

### Phone settings

**Date & Time** - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

**Power save** - Choose to switch the factory set power saving settings on/off or Night only.

**Languages** - Change the language of your GM360i's display.

**Auto keylock** - Lock the keypad automatically in the Home screen.

**Security** - Adjust your security settings, including PIN code request, handset lock, Change codes and ATMT.

**Memory info** - See **Using memory manager** for more information.

**Reset settings** - Restores all settings to their factory defaults.

**Information** - View the technical information for your GM360i. And you can upgrade software with **Handset information**.

## Using memory manager

Your GM360i has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is been used and see how much space is available.

Touch **Phone settings** in the SETTINGS tab, then **Memory info**.

**Handset common memory** - View the memory available on your GM360i for Pictures, Sounds, Videos, MMS, Email, Java applications and others.

**Handset reserved memory** - View the memory available on your handset for SMS, Contacts, Calendar, Task list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

**SIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage setting** - Choose the location you prefer items to be saved to between Handset and External memory.

## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity** in the **SETTINGS** tab.

## Network settings

**Select network** - If you select Automatic, the GM360i automatically searches for the network and registers the handset to the network. This is recommended for best service and quality. If you select Manual, all the currently available networks are shown and you can select one of them for registration.

**Preferred lists** - You can add a preferred network to connect to. If the network is searching automatically, simply choose one from the network list and if not, add a new network manually.

**Internet profiles** - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Packet data conn.** - Choose when your device should be connected to network for packet data.

# Settings

**Java settings** - Allows you to set profiles for connections made by Java programs and to view certificates.

**USB connection mode** - Choose a Data service from the options and synchronise your GM360i using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use Music sync with Windows Media Player, select **Music sync** in this menu. **Music sync** is only available for music content.

## Sending and receiving your files using Bluetooth

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.  
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GM360i will not automatically search for other **Bluetooth** devices. If not, your GM360i will search for other **Bluetooth** enabled devices within range.


- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

**TIP!** Check the progress bar to make sure your file is sent.

### To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in **My stuff**.

## Changing your Bluetooth settings:

Touch **Bluetooth** in the **SETTINGS** tab. And select  and choose **Settings**.

### Make your changes to:

**My device visibility** - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

**My device name** - Enter a name for your GM360i.

**Supported services** - Select how to use Bluetooth in association with different services.

**Remote SIM Mode** - Turn on or off.

**My address** - Show your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your GM360i and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GM360i will search for devices. When the search is completed, **Retry** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Touch **Ask** always or **Allow** without ask and touch **Yes** to **Connect now**. Your GM360i will automatically switch to **Headset profile**.

## Wi-Fi

Wireless Manager allows you to manage Internet connections per Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly.

Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

# Settings

**NOTE:** The GM360i supports WEP, WPA and WPA2 encryption, and not EAP, WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the "security type" field. If encryption is not set, this field will be inactive with the value "None". You can obtain the key from your Wi-Fi service provider or network administrator.

damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

## Software Upgrade


### LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>. This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously

# Accessories

These accessories are supplied with the GM360i.

Charger



Data cable



Battery



Stereo headset



## NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

# Technical data

## General

Product name : GM360i

System : GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900

## Ambient Temperatures

Max : +55°C (discharging),  
+45°C (charging)

Min : -10°C

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GM360i has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.33 W/kg (10 g) and when worn on the body is 1.31 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

### Product care and maintenance

#### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

## Guidelines for safe and efficient use

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

### Efficient phone operation

#### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Guidelines for safe and efficient use

### Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

### Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.

- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.



Warranty Card  
產品保用證

Mobile Phone  
手提電話

## Warranty Card 產品保用證

LG Customer Care Centre  
客戶維修服務中心

Welcome to contact for detailed information  
歡迎致電查詢詳細資料

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777  
E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com  
LG Website 瀏覽網站 : www.lg.com

If you want to receive an additional 3 months warranty, please complete warranty registration within 1 month after purchase at  
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>  
or (852) 3543 7777.

如欲享受額外3個月產品保養，請在購買產品後1個月內登入  
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>  
或致電(852) 3543 7777登記

### Privacy Statement

You are aware that any information supplied by you after purchase of our product will be retained by LG Electronics HK Ltd. and will not be released to third parties. You also authorize LG Electronics HK Ltd. to send you direct promotion materials. Please contact our Customer Service Hotline at (852) 3543 7777 if you wish to modify or erase your provided personal information.

### 私隱聲明

閣下在購買本公司產品後所提供的任何資料，將會由LG Electronics HK Ltd.保有，不會透露給予第三方，並授權本公司對閣下發出直接推廣通訊。如希望修改或刪除所提供的個人資料，可聯絡本公司客戶服務熱線(852) 3543 7777作出相關安排。

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

**IMPORTANT :** Please keep and present this warranty card and purchase invoice when services are rendered. Otherwise, this warranty will be voided.

**重要事項 :** 顧客請保留此保用證及購貨發票，並需在檢查/維修時出示，否則保用無效。

## Mobile Phone Warranty Policy

### 手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 

(i) Handset	: 12 months	(ii) Charger	: 6months
(iii) Battery	: 6months	(iv) Hand free earphone	: 3months
  - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
  - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories, etc.)
  - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
  - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
  - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
  - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
    - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alteration or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
    - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
    - (iii) The IMEI number sticker on this product has been erased or modified.
    - (iv) The content of warranty policy has been modified without authorization.
  - (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
  - (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
  - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
  - (11) This warranty card is restricted within Hong Kong SAR only.
  - (12) LG and its Authorized Service Centers reserve the right to use refurbished or reconditioned parts or whole products for the same or functionally equivalent model when conducting product repairs and replacement.
- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 

(i) 機身	: 12個月	(ii) 充電器	: 6個月
(iii) 電池	: 6個月	(iv) 免提耳機	: 3個月
  - (2) 保修服務只適用於原裝行貨；水貨及山寨貨均屬無效。
  - (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
  - (4) 用戶要求維修服務時，須同時備同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效。客戶須應付維修費用。
  - (5) 在保修期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
  - (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
  - (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客戶徵收所有的維修費用。
    - (i) 手機曾未經許可之維修、不適當的安裝、更改，或貼於其上的維修貼紙遭受損毀、撕毀、除去，保修服務即無效。
    - (ii) 手機曾被錯誤使用，錯誤處理，疏忽使用，直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴風或天災所造成的損壞。
    - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
    - (iv) 擅自修改本保用證的內容。
  - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害，意外事件造成之損失概不負責。
  - (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
  - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
  - (11) 此保用證只適用於香港特別行政區範圍內。
  - (12) 本公司及其授權之維修中心在維修或更換產品時，保留使用與產品或功能相同的部分或全部再生零件之權利。

## Service Commitment 服務承諾

LG's mission is to create value for customers. We are committed to improve the life of our customers by putting the customers first, and delivering the best possible pre and after sales services in the way they want.

為顧客創造價值乃LG一貫宗旨。我們致力提供最貼心的售前及售後服務，一切以顧客為先，希望為客戶帶來最優質的生活。





