



使用手冊 LG-E900

LG Electronics



繁體中文  
簡體中文  
ENGLISH

使用手冊

# LG-E900

本指南將幫助您開始使用您的手機。如果需要更多資訊，  
請瀏覽 [www.lg.com](http://www.lg.com)。

P/NO : MFL66983327 (1.1) H

[www.lg.com](http://www.lg.com)

Copyright ©2010 LG Electronics, Inc. 已保留一切權利。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。

版權所有 ©2010 LG Electronics, Inc. 保留所有權利。LG 和 LG 徽標是 LG 集團及其相關實體的註冊商標。

Copyright©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities.

Bluetooth QD ID B016767

# LG-E900 使用手冊 - 繁體中文



- 本指南將幫助您開始使用您的手機。  
如果需要更多資訊，請瀏覽 [www.lg.com](http://www.lg.com)。
- 此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。
- 由於使用觸控螢幕鍵盤，我們不建議視障人士使用此手機。
- Copyright ©2010 LG Electronics, Inc. 已保留一切權利。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均為其各自擁有者的財產。



恭喜您購買了 LG 先進輕巧的 LG-E900 手機，它配合最新的數碼流動通訊科技而設計。

## 版權和商標

此手機包含的所有技術和產品的權利均為其各自擁有者的財產：

- 本產品包括 Microsoft Corporation 的聯屬公司 MS 授權的軟件。 Microsoft 及含有 Microsoft 名稱的軟件乃 Microsoft Corporation 的註冊商標。在使用本產品之前，請參閱 Windows Phone 7 軟件協議的 Microsoft 軟件授權條款。有關權限和限制的資訊，請參閱本手冊的背面。
- Bluetooth® 乃 Bluetooth SIG, Inc. 的註冊商標。
- © 2010 Microsoft Corporation。保留一切權利。Microsoft、Internet Explorer® Mobile、Windows® Phone、Windows® Phone Marketplace、Xbox LIVE®、Zune® <Windows 及本手冊中提及的所有其他商標名稱和標誌按字母順

序列示> 均為 Microsoft 集團公司的商標。

## 內容

安全及有效使用準則.....	6	通訊.....	36
<b>裝配</b> .....	12	<b>手機</b> .....	36
了解您的手機.....	12	<b>電郵</b> .....	42
手機背面.....	13	<b>Facebook</b> .....	46
安裝智能咭和電池.....	14	<b>娛樂</b> .....	47
<b>導覽 Windows Phone</b> .....	17	<b>相機</b> .....	47
使用觸控螢幕.....	17	<b>圖片</b> .....	52
瞭解開始螢幕.....	20	<b>音樂和影片</b> .....	57
瞭解和導覽螢幕.....	20	<b>遊戲</b> .....	62
自訂開始螢幕.....	25	<b>FM 收音機</b> .....	63
存取應用程式.....	26	<b>實用程式</b> .....	65
瞭解應用程式列.....	26	設定鬧鐘.....	65
自訂 Windows Phone.....	29	使用計算機.....	65
輸入文字.....	31	新增事件至日曆.....	65
從 Marketplace 下載應用程式.....	32	Office.....	66
<b>開始使用</b> .....	33	<b>Windows 應用程式</b> .....	67
使用 Windows Live ID 登入.....	33	<b>地圖</b> .....	67
匯入通訊錄.....	34	<b>Marketplace</b> .....	68
保持同步.....	35	<b>Hotmail</b> .....	68

網絡功能.....	69
瀏覽器.....	69
連接.....	71
藍芽.....	71
Wi-Fi.....	72
Play To.....	74
設定.....	75
系統.....	75
應用程式.....	77
軟體更新.....	80
手機軟件更新.....	80
配件.....	81
FAQ (常見問題).....	83

## 安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

### 頻能量暴露準則

此裝置滿足無線電波暴露的國際準則。您的流動電話是一部無線電波收發器。其設計和製造不會超出由國際指引 (ICNIRP) 建議的無線電波頻率能量暴露限制。這些限制是綜合指引的一部份，並定出對一般人的 RF 能量接受水平。這些指引是經由獨立的科學機構通過對科學研究作定期和徹底的評估而制定的。這些指引包括為確保任何年齡和任何健康狀態人士安全而設的基本安全極限。

流動電話的暴露標準採用了一組名為比吸收率的測量數據，即 SAR。國際指引中所規定的 SAR 限制為 2.0 W/kg\*。對 SAR 的測試是通過在標準的操作位置使電話以最高認可功率水平在所有測試波段中傳輸訊號而進行的。儘管 SAR 是在最高認可功率水平下確定的，電話的實際 SAR 會遠遠

低於其實際值。這是因為電話的設計是為了在不同的功率水平下工作，以達到僅僅接通使用網絡所需的功率。在一般情況下，您離基站越近，電話的輸出功率就越低。在某款型號的電話上市之前，必須符合歐洲 R&TTE 指引中的標準。該指引包含保護使用者和任何其他個人健康和安全的的基本要求。

經測試，此手機在耳邊使用時的最高 SAR 值為 0.935 W/kg。

在將手機置於耳邊正常使用或使其距身體至少 1.5 厘米遠的情況下，此流動電話符合關於 RF 暴露的指引。如果隨身攜帶手機，所用的手機套或其他裝置中不可包含金屬物品，並應使手機與身體至少保持 1.5 厘米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，知

6 LG-E900 | 使用手冊

道傳輸完成為止。經測試，此手機佩戴在身上使用時的最高 SAR 值為 1.47 W/kg。

\* 公眾使用的流動電話 SAR 限制為 10 克人體組織上平均 2.0 瓦特/千克 (W/kg)。指引包括一個基本安全極限，用以向公眾提供額外的保護，並解決任何量度上的差異所帶來的問題。SAR 值會視乎國家報告要求及網絡波段而定。

如需其他地區的 SAR 資訊，請參閱 [www.lgmobile.com](http://www.lgmobile.com) 網頁中的產品資料。

## 產品保護及維護

### 警告

**請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。**

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保固期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能是新亦可能是返修的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。

- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手操作充電中的手機。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。

- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體、濕氣或潮濕環境中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。
- 切勿在高溫度（如泳池、溫室、日光浴室）或熱帶環境中使用手機或配件，這可能會對手機造成損壞和使保用失效。

## 有效地操作手機

### 電子和醫療裝置

所有手機都可能會因為受到干擾而影響效能。

請勿在未得到批准下在醫療儀器附近使用您的手機。請諮詢您的醫生確定操作手機是否可能會干擾醫療儀器的操作。

一些助聽器可能會受手機干擾。

手機可能會輕微干擾電視、收音機、個人電腦等。

### **心律調校器**

心律調校器製造商建議手機與心律調校器之間的距離至少應為 15 厘米，以避免對心律調校器造成潛在干擾。要做到這一點，請使用與心律調校器對側的耳朵進行通話，並且切勿將手機置於胸部口袋中。

### **醫院**

應醫院、診所或保健場所要求，請關閉您的無線裝置。這些要求的宗旨是防止對敏感的醫療設備可能造成干擾。

### **道路安全**

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車設有安全氣袋，切勿讓已安裝的無線設備或手提無線設備阻擋氣袋。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人員傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

## 避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

## 來自耳機的過度噪音和壓力可導致聽力損失。

### 玻璃部件

您的手機的某些部件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃部件。

### 爆破地區

- 請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸環境

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用手機。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

## 在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

## 緊急通話

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

## 電池資訊及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 請只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用，需重新充電。

- 請勿直接將充電器暴露於日光下或高溫度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

## 裝配

### 了解您的手機

耳機插孔

電源/鎖定鍵

- 長按以開機/關機。
- 短按以鎖定螢幕。

聽筒

感應器

ALS (感光器)

搜尋按鈕

開啟快速搜尋

開始按鈕

返回開始螢幕；啟動語音識別功能 (按住該按鈕)。

返回按鈕

返回上一個螢幕。

話筒



**警告：** 若將較重物體置於手機上，或坐在手機上會損壞手機的 LCD 和觸控螢幕功能。請勿用保護貼遮蓋 LCD 感應器，因為這可能導致感應器無法運轉。

### 音量鍵

- 螢幕處於備用狀態時：系統和鈴聲的音量。
- 通話中：聽筒音量。
- 播放曲目時：控制曲目音量。




### 充電器、USB線插孔

提示！在連接 USB 線之前，請先開機並在網絡上註冊。

### 相機鍵

- 按住相機鍵可直接跳至相機。


## 手機背面

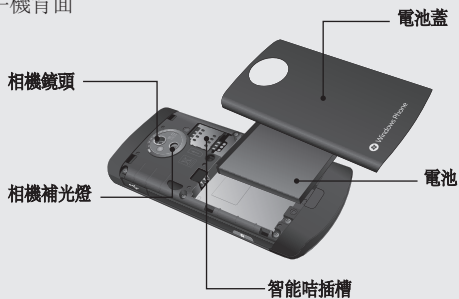

## 安裝智能咭和電池

### 1 取下電池蓋

如下圖所示，按電池蓋按鈕 (1)。從手機上取下電池蓋 (2)。

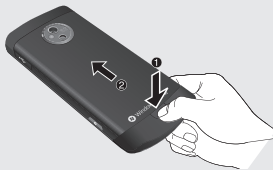

### 2 取下電池


提起電池底部，將其從電池格中取出。



**警告：**手機開機時，不要取下電池，因為這樣會損壞手機。

### 3 安裝智能咭

將智能咭放入智能咭插槽。確保智能咭的金屬接觸面向下。將智能咭插入插槽。

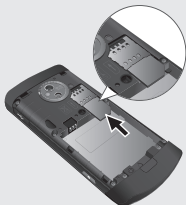

#### 4 安裝電池

首先，將電池頂部插入電池格上方邊緣。請確保電池觸點對準手機觸點。將電池的底部壓入到位。



#### 5 為手機充電


開啟 LG-E900 手機側面的充電器插孔蓋。將充電器連接器插入該連接埠，並將充電器連接至電源插座。





如果電池已完全放電，則手機無法開機，需要大約四至五分鐘後，才能達到足以啟動 TA 充電器的充電狀態。使用 USB 連接則需要大約 14 至 15 分鐘的充電時間。


如果電池電量過低，將會顯示電量過低的圖像，通知您需要充電。


**注意：首次充電時必須確保手機充滿電，以提高電池壽命。**

 **警告：** 請勿將充電器連接至未安裝電池的手機。充電之前，必須檢查是否已插入電池。

 **警告：** 手機充電時，不要取下電池或智能咭。

 **警告：** 若使用類型不當的電池，則有發生爆炸的危險。請根據製造商的指示來處理廢棄電池。

 **警告：** 如遇上雷暴天氣，請從電源和手機上拔除充電器，以防觸電或失火。

 **警告：** 請勿讓任何尖銳物與電池發生接觸。否則會導致火災風險。

## 導覽 Windows Phone

### 使用觸控螢幕

#### 觸控螢幕提示

手機的觸控螢幕可讓您輕鬆選擇項目或執行功能。瞭解有關使用觸控螢幕的基本操作。

#### 備註：

- 為避免刮花觸控螢幕，請不要讓尖銳物件與觸控螢幕接觸。
- 請勿讓觸控螢幕與其他電氣裝置發生接觸。靜電放電可能導致觸控螢幕發生故障。
- 請勿讓觸控螢幕沾到水。觸控螢幕在潮濕環境中或暴露於液體時可能發生故障。
- 為實現觸控螢幕的最佳使用效果，請在使用手機前取下保護套。
- 觸控螢幕的圖層可偵測到人體發出的微量電荷。

- 為實現最佳效能，請使用指尖點按觸控螢幕。觸控螢幕不會對使用尖銳物件（如尖筆或筆）點按作出反應。

#### 備註：

- 如果在指定時間內未使用手機，手機會鎖定觸控螢幕。若要開啟螢幕，請按 [Power (電源)] 按鈕。
- 您也可以調整背光燈時間或更改桌布。在開始螢幕上，轉至應用程式清單，然後選擇 **Settings (設定) > lock & wallpaper (鎖定和桌布)**。

## 觸控螢幕上的一般筆觸

對於大多數應用程式，一般筆觸可以用於移動和發出命令。若要輸入文字，請使用鍵盤。

以下筆觸可用於在 Windows Phone 7 中移動：

### 點按

點按指單一、快速地向點按螢幕。點按可用於執行命令（類似於在電腦上按 Enter）。



### 點按兩下

點按兩下指快速向下點按兩下螢幕上的相同地方。點按兩下可控制手機放大或縮小（如適用）。



### 點按並按住

若要點按並按住，請將手指按下並按住幾秒鐘。



### 滑動

滑動可用於向上和向下移動。

用手指按下並朝所需的方向移動。若要結束捲動，請提起手指。



## 翻閱

翻閱可用於橫向移動物件。

用手指按下並朝所需的方向移動。若要結束筆觸，請抬起手指。



## 縮放

縮放通常用於圖像的放大和縮小。

透過兩個手指向下按螢幕並使手指靠攏，可縮小。兩個手指分開以放大圖像。




## 瞭解開始螢幕

您可以透過此螢幕存取各種功能表選項、撥打電話、檢視手機狀態及更多內容。



## 瞭解和導覽螢幕

在您開啟手機後，開始螢幕是您體驗 Windows Phone 7 的開始。開始螢幕會顯示已固定的應用程式圖片。不論正在執行何種應用程式，按手機上的 [Start (開始)] 按鈕  始終會返回開始螢幕。

### 1 只需將手指左右或上下滑動便可檢視。

您也可自訂開始螢幕上的圖片，它們是您喜愛的功能表和應用程式的捷徑。

**備註：**如果在解鎖手機後處於備用顯示狀態，將手指向上滑動可查看開始螢幕並顯示應用程式圖片。

## 開始螢幕上的圖片

圖片是用於識別應用程式的捷徑。您可以將圖片放置在手機的開始螢幕。使用圖片通知功能的圖片，可讓您建立個人化“一覽”開始體驗。包括顯示天氣或您收到的電子郵件訊息。

開始螢幕始終會以縱向檢視顯示。

---

### 圖示 說明



撥打電話、快速存取最近來電者、您的最愛以及您的所有聯絡人。使用數字按鍵手動撥號。只需點按語音信箱圖示，即可按所需的任何順序聆聽所需的語音訊息。



點按便可存取 People(通訊錄清單)，這是電子郵件、聯絡人和其他資訊的整合通訊應用程式。



發送和接收文字訊息。對話會以即時聊天方式儲存，以便您可以查看已發送和已接收的訊息記錄。使用您拍攝的相片發送多媒體訊息。



Windows Phone 可與 Microsoft Live、Microsoft Outlook Web App 和許多常用的電子郵件系統搭配使用，其中包括 Hotmail、Yahoo! Mail、Google 及其他。將附加的相片和圖形儲存到您已儲存的圖片。



點按 Play To 可將影片、音樂和圖片從手機流入數碼生活網絡聯盟 (Digital Living Network Alliance, DLNA) 相容的播放裝置。

---

## 圖示 說明

---



透過 ScanSearch，您可以搜尋產品及街道、城市或國家的當地資訊。透過 ScanSearch，您可以檢視本地企業資訊，包括位置和聯絡人資訊。



在您的新 Windows Phone 中輸入事件。訂閱日曆。設定提示以提醒事件、約會和日期。另外，它們會與 Windows Live 上的日曆同步，反之亦然。



點按可存取 Internet Explorer。



存取 Xbox LIVE 以玩遊戲並邀請好友與您一起玩遊戲。下載新遊戲至手機。



檢視您使用新 Windows Phone 拍攝、在電子郵件或多媒體訊息中收到，或從電腦的 Zune 軟件同步的相片和影片。（僅限 Windows 操作系統）以人像或風景格式檢視相片和影片。放大相片以移近查看。發送附加相片的電子郵件或多媒體訊息。



透過連接電腦以與您的檔案同步，以播放裝置中儲存的音樂、影片和 Podcast。收聽 FM 收音機。



使用 Wi-Fi 或手機數據網絡連接，搜尋可購買或下載 Windows Phone 應用程式和音樂的 Application Store。在開始螢幕上下載和安裝應用程式。

---

**備註：**圖片的排列位置、名稱或設計可能會視乎設定狀態、區域、服務供應商、方案及 Windows Phone 軟件的版本而有所不同。

應用程式的功能和可用性會視乎您購買和使用 Windows Phone 所在的國家或地區而定。聯絡服務供應商，了解更多資訊。

## 檢視狀態列

狀態列使用不同圖示顯示手機資訊，例如訊號強度、新訊息、電池壽命及啟動中的藍芽。

下表解釋了狀態列中可能出現的圖示的含義。



[狀態列]

圖示	說明
	訊號強度
<b>H</b>	HSDPA
<b>3G</b>	3G
<b>G</b>	2G-GPRS
<b>E</b>	2G-EDGE
	來電轉接
	漫遊

圖示	說明
	無線網絡訊號強度
	藍芽狀態
	響鈴模式
	輸入狀態
	電池電量
<b>12:38</b>	系統時鐘


## 自訂開始螢幕



您可以自訂開始螢幕上的圖片格式。

您可以將所有圖示固定螢幕上，包括應用程式、網站、地圖位置及聯絡人。如果您將聯絡人固定在開始螢幕上，您從圖片可檢視所有Feed的更新。




若要設定圖示在螢幕上，請轉至應用程式清單，長按所需圖示，然後點按 **pin to start(固定)**。

- 如果要將圖片移至開始螢幕上的其他位置，請按住圖片，然後將它移至所需的位置。
- 若要移除圖片，請按住圖片，然後點按 。

## 導覽和設定應用程式

### 存取應用程式

若要存取 Windows Phone 的應用程式：

- 1 在開始螢幕上，點按箭頭  以存取應用程式清單。
- 2 請向下滑動以顯示更多圖片。
- 3 選擇應用程式。
- 4 按 **Back (返回)** 按鈕  以返回前一螢幕；按 **Start (開始)** 按鈕  以返回開始螢幕。



#### 備註：


- 您可以從應用程式清單中點按並按住應用程式圖示，以新增應用程式的捷徑。您可以將應用程式增加至開始螢幕上所需的位置。
- Windows Phone 具有內置移動感應器，可偵測到其方向。如果您在使用某些功能時旋轉手機，介面會自動切換為橫向檢視。

### 瞭解應用程式列

若要設定應用程式，您可以使用下方的應用程式列以及螢幕底部的應用程式列功能表。

例如，若要設定鬧鐘

- 1 在開始螢幕上，點按箭頭  以存取應用程式清單。
- 2 點按 **Alarms (鬧鐘)** .
- 3 點按應用程式列，以查看應用程式功能表或顯示帶文字提示的圖示按鈕。
- 4 選擇設定圖示按鈕。

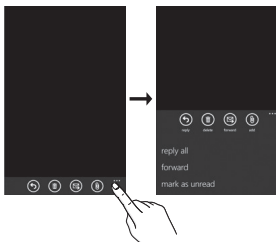

## 應用程式列

應用程式列提供一個檢視，如果您點按可見的一排小點或翻閱應用程式列，便會顯示帶文字提示的圖示按鈕。點按功能表區域外部或小點、使用返回按鈕或選擇功能表項目或應用程式列圖示，即可再次隱藏此檢視。

## 應用程式列功能表

應用程式列功能表是從應用程式列中存取特定任務的可選方式。透過點按應用程式列中可見的一排小點或翻閱應用程式列，即可存取應用程式列功能表。點按功能表區域外部或小點、使用返回按鈕或選擇功能表項目或應用程式列圖示，即可再次隱藏此檢視。

### 備註：

- 最多可顯示五個功能表項目。
- 如果沒有顯示功能表項目，則只會顯示圖示文字提示。
- 在您執行動作前，應用程式列功能表會保留在螢幕上。

## 應用程式列圖示

以下是一些常用的應用程式設定圖示。



新建



新增



減



檢查



關閉



取消



同步



重新整理



問號



感嘆號



返回



下一個



搜尋



刪除



儲存



資料夾



影片



相機



電子郵件



設定



我的最愛



新增至我的最愛



下載



上傳



分享



編輯



選項



播放



暫停



上一個/後退



下一個/快進

## 自訂 Windows Phone

自訂手機配合您的喜好，從而取得手機的更多資訊。

### 設定當前的時間和日期

- 1 在開始螢幕上，點按箭頭 ➞ 以轉至應用程式清單。
- 2 點按 **Settings (設定) > System (系統) > date & time (日期和時間)**。
- 3 啟動 **Set automatically (自動設定)** 列，並更改日期和時間以及其他選項。

### 開啟或關閉鈴聲和聲音

您可以調整鈴聲和聲音，如鈴聲、新文字訊息、新留言訊息和新電子郵件等。

- 1 在開始螢幕上，點按箭頭 ➞ 以轉至應用程式清單。
- 2 點按 **Settings (設定) > System (系統) > ringtones & sounds (鈴聲和聲音)**。

### 切換至靜音模式

您可以左右滑動 **Ringier (響鈴)** 狀態列，以開啟或關閉鈴聲。

### 調整鈴聲音量

按向上或向下音量鍵，以調整鈴聲音量。

### 選擇開始螢幕的桌布

- 1 在開始螢幕上，點按箭頭 ➞ 以轉至應用程式清單。
- 2 點按 **Settings (設定) > System (系統) > lock & wallpaper (鎖定桌布) > change wallpaper (更改桌布)**。
- 3 選擇圖像並儲存。  
您還可以更改螢幕超時和密碼。

#### 備註：

- 對於手機上提供的預設圖像或桌布的任何使用，LG 概不承擔任何責任。

## 調整顯示亮度

若要在設定功能表中調整亮度，

- 1 在開始螢幕上，點按箭頭 ➔ 以轉至應用程式清單。
- 2 點按 **Settings (設定)** > **System (系統)** > **brightness (亮度)**。
- 3 將 **Automatically adjust (自動調整)** 的滑塊拖動至 **Off (關閉)**，然後點按所需的亮度水平。

**備註：**顯示的亮度水平將影響手機電池電量消耗的速度。

## 鎖定智能咭

您可以透過啟動智能咭提供的 PIN 碼來鎖定手機。

- 1 在開始螢幕上，點按箭頭 ➔ 以轉至應用程式清單。
- 2 點按 **Settings (設定)**，並拖動至選擇 **application (應用程式)** > **phone (手機)**。
- 3 將 **SIM security (智能咭安全)** 滑動至 **On (開啟)**。
- 4 輸入您的 PIN 碼並選擇 **enter**。

### 備註：

- 啟用 PIN 鎖定後，您每次開啟手機時都必須輸入 PIN 碼。
- 如果您多次輸入不正確的 PIN 碼，您的智能咭將會鎖定。然後，您必須輸入 PIN 解鎖碼 (PUK) 以解鎖智能咭。

## 輸入文字

選擇鍵盤上的字元可輸入文字。

您無法輸入一些語言的文字。若要輸入文字，請檢查並選擇支援的寫入語言。(Settings (設定) > System (系統) > keyboard (鍵盤))



## 使用手機鍵盤輸入文字

- 1 點按輸入控制板圖示。
- 2 點按字元以輸入文字。

## 備註：

- 此手機具有多種輸入輔助功能，例如顯示在鍵盤上方的文字建議、自動校正及上下文特定鍵盤格式。  
(Settings (設定) > System (系統) > keyboard (鍵盤))
- Windows Phone 7 僅支援全字母格式，例如 QWERTY、AZERTY 和 QWERTZ。
- 使用 Shift 鍵可以輸入大寫字母。共有三種切換模式：On (開啟)、Off (關閉) 和 Caps Lock (大寫鎖定) (點按並按住)。
- 表情符號鍵可開啟表情符號選擇器。
- 點按並按住螢幕上的 a、i、e、u、o 便會顯示音調選擇器。

## 從 Marketplace 下載應用程式

Marketplace 可讓您輕鬆找到並取得音樂和應用程式（包括遊戲），以增強您的 Windows Phone 功能。

個別類別頁面已新增至應用程式、遊戲和音樂的網站。

- 在開始螢幕上，點按  以轉到應用程式清單，然後點按 **Marketplace** 。或者，點按開始螢幕上的 **Marketplace** 圖片。
- 按 **Search (搜尋)** 按鈕以搜尋應用程式，並再次點按搜尋字串以編輯和搜尋。
- 輸入所需的字串並點按，有關結果將顯示在相同頁面的下方。
- 點按**清單項目**以轉到正確的 Marketplace 頁面。

- 在瀏覽或搜尋應用程式時，您可以點按應用程式或遊戲，且應用程式的詳情頁面便會出現。
- 選擇要購買的項目，然後點按 **download (下載)**。



### 備註：


- 圖片、Podcast 和影片在 Marketplace 上不可用。
- 視乎您所在的地區而定，此功能可能無法使用。

## 開始使用

在您首次開啟手機時，系統將指引您完成基本設定。請按照螢幕上的指示啟動手機。

建議的步驟如下。

**選擇 LANGUAGE (語言) > WINDOWS PHONE SETTINGS (WINDOWS PHONE 設定) > TIME ZONE (時區)，然後使用您的 Windows Live ID 登入使用 Windows Live ID 登入**

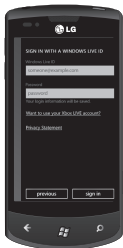

若要獲取應用程式、玩 Xbox LIVE 遊戲、使用 Zune Pass、將 Windows Live 資訊自動同步至網絡以及其他，您需要使用 Windows Live ID 登入。

Windows Live ID 是您用於登入 Xbox LIVE®、Zune®、Hotmail® 等服務的電子郵件地址。如果您無法記住電子郵件地址，您可以使用：

對於 Xbox LIVE：在 Xbox 360® 控制台，使用玩家標籤登入，然後按控制器上的 Guide (指引) 按鈕 (位於中間類似 Xbox 標誌)。在 Settings (設定) 中，按一下 **Account Management (帳戶管理) > Windows Live ID**。

對於 Zune：登入電腦上的 Zune 軟件。在您的設定檔相片上按滑鼠右鍵，並按一下 Switch user (切換使用者) 以查看您的 Windows Live ID。若要重設密碼或獲取提示，請轉到 <http://account.live.com/ResetPassword.aspx>。

如果您尚未使用 Windows Live ID 登入，則您起初在手機上無法執行多項任務（例如，獲取應用程式或玩 Xbox LIVE 遊戲）。

## 匯入通訊錄




在設定電子郵件或 Facebook 帳戶時，通訊錄會自動匯入至 People（通訊錄）。在您新增 Facebook 時，朋友的 Feed 會顯示在 People（通訊錄），朋友的相片會顯示在 Pictures（圖片），而您自己的 Feed 則會在 Me tile（我的圖片）中彈出。

若要設定 Facebook（或任何類型的電子郵件）帳戶：

- 1 在開始螢幕上，點按箭頭以轉至應用程式清單。
- 2 點按 Settings（設定）> email & accounts（電子郵件和帳戶）。

獲取舊手機中的通訊錄也相當簡便。將舊智能咭裝入新手機，然後轉至 Settings（設定）。選擇應用程式中 People（聯絡人），然後點按匯入智能咭通訊錄。

## 保持同步

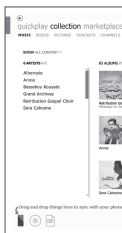






若要電腦中的音樂、影片、圖片和更新與手機同步（反之亦然），您將需要使用 Zune 軟件。

- 1 轉至 [windowsphone.com](http://windowsphone.com) 以安裝 Zune 軟件。
- 2 使用 USB 線將手機連接到電腦。
- 3 開啟 Zune 軟件，然後按照指示將您的音樂、影片、圖片等放入收藏。
- 4 按一下 collection（收藏），然後將要同步的所有內容拖動至左下方的手機圖示。

## 通訊 手機


### 撥打電話

- 1 點按 。
- 2 點按 。
- 3 在鍵盤上輸入號碼。  
若要刪除數字，請點按 。
- 4 點按  撥打電話。
- 5 若要結束通話，請點按 。

您也可以使用開始螢幕上的手機圖片撥打電話。您可以直撥號碼。

**提示！** 若要在撥打國際電話時輸入「+」，請點按並按住 [0+]。

### 從通訊錄中撥打電話

- 1 點按 People (通訊錄) 以開啟您的通訊錄。
- 2 在通訊錄中捲動或透過點按  輸入您要與其通話的聯絡人的首個字母。
- 3 在清單內點按您想致電的聯絡人，如該聯絡人有超過一個號碼，請選擇您要致電的號碼。

接聽來電和拒接來電

手機響鈴時，點按 **answer** 以接聽來電。  
點按 **ignore (拒接)** 標籤以拒接來電。

**提示！** 手機響鈴時，長按下音量鍵，以切換至靜音模式。

## 飛航模式（停用無線通訊）





一些場合可能需要關閉手機的無線通訊，請將手機設為 airplane mode（飛航模式）。

點按 **SETTINGS（設定） > airplane mode（飛航模式）**。設定功能表中，可變更 Wi-Fi 和藍芽的設定。

## 調整通話音量

若要在通話時調整通話音量，請按手機側的音量鍵。

## 通話期間撥打第二個電話

- 1 在原本的通話進行時點按 ，然後點按 。
- 2 撥打號碼或使用  或  搜尋通訊錄。
- 3 點按通話圖示以開始撥打電話。
- 4 兩個通話均會在通話屏幕中顯示。您的原來通話會被鎖定及保留。
- 5 點按螢幕頂部的 **PRESS TO SWAP**（按下以切換）以在兩個通話間切換。

- 6 若要結束使用中通話，請點按 **end call（結束通話）**。

如無使用中通話，保留通話將會結束。

**備註：** 您撥打的每一個通話均需收費。

## 檢視您的通話記錄

在開始螢幕上按  以檢視通話記錄。


您可檢視所有已撥、已接及未接來電的完整清單。

**提示！** 點按任何單個通話記錄項目，便可檢視該通話的日期和時間。

**提示！** 點按應用程式列標籤，然後點按 **delete all（刪除全部）** 以刪除所有記錄項目。

## 通話設定

您可設置手機的通話設定，例如來電轉接及您的服務供應商提供的其他特別功能。

- 1 在開始螢幕上，點按 。
- 2 點按通話記錄螢幕底部的應用程式列，然後開啟 **Call Settings (通話設定)** 功能表。
- 3 捲動並點按通話設定，選擇您要調整的選項。

**Vicemail number (語音信箱號碼)** - 編輯語音信箱號碼


**Show my caller ID to (對聯絡人顯示我的 ID)** - 選擇是否在撥出的電話中顯示您的電話號碼。

**international assist (國際協助)** - 在撥打國際電話或在國際漫遊撥號時，協助自動校正一些常見的錯誤。


## 搜尋通訊錄

有兩種方法可搜尋通訊錄內的聯絡人：

### 在開始螢幕上

- 1 在開始螢幕上，點按 **People (通訊錄)** 圖片以開啟通訊錄 (People)。
- 2 點按 , 使用鍵盤輸入該聯絡人姓名。

### 從應用程式功能表

- 1 在開始螢幕上，點按  以轉至應用程式功能表。
- 2 點按 People (通訊錄) 應用程式，然後選擇所需的設定檔。

## 新增通訊錄

- 1 在開始螢幕上，點按 People (通訊錄) 應用程式。
- 2 如果要新增聯絡人，請點按 。您可插入相片。
- 3 點按所需的項目，然後點按文字欄位以開啟觸控鍵盤。
- 4 點按 **Done (完成)** 圖示以儲存當前新增的資訊。
- 5 點按其他選項，然後輸入聯絡人的詳情。
- 6 點按儲存圖示，以儲存該聯絡人


### 提示！

- 點按應用程式列標籤，然後點按「delete (刪除)」以刪除剛儲存的該聯絡人。
- 當您長按聯絡人清單中的一個聯絡人時，便會顯示一個簡短功能表，您可以選擇固定以開始、編輯和刪除。

## 常用通訊錄





您可將常用的聯絡人分類為您的最愛。


### 將通訊錄新增至您的最愛 (固定至開始螢幕)

- 1 在開始螢幕上點按  以開啟設定檔通訊錄。
- 2 點按一個聯絡人以檢視詳情。
- 3 在應用程式功能表中點按 Pin to start (固定至開始)，然後常用的聯絡人便會顯示在開始螢幕。


訊息

## 發送文字訊息



- 1 在開始螢幕上，點按 **Messaging** (訊息)  > **New** (新建) 。
- 2 執行以下操作之一：
  - 在「To: (收件者:)」方塊中開始輸入聯絡人的姓名，然後在清單中點按聯絡人姓名。重複上述步驟以新增更多收件人，且其姓名會自動新增至「To: (收件者:)」方塊。
  - 在「To: (收件者:)」方塊中輸入聯絡人的手機號碼。
  - 點按 **Add** (新增) ，轉至通訊錄，然後點按該聯絡人。重複上述步驟以新增更多收件人，且其姓名會自動新增至「To: (收件者:)」方塊。
- 3 點按訊息方塊，輸入訊息，然後點按 **Send** (發送) 。

**備註：**如果要在訊息中附加檔案，請點按螢幕底部的 ，然後選擇所需的檔案。切記，您只能附加圖片。

## 回覆文字訊息

- 1 在開始螢幕上點按 **Messaging** (訊息)，然後點按您收到的文字訊息。
- 2 點按訊息方塊，輸入回覆，然後點按 **Send** (發送) 。


## 轉寄文字訊息

- 1 在開始螢幕上點按 **Messaging** (訊息) ，然後選擇轉寄之的文字訊息。
- 2 點按並按住訊息，然後點按 **Forward** (轉寄)。
- 3 在「To: (收件者:)」方塊中輸入聯絡人姓名、手機號碼或電子郵件地址。
- 4 點按訊息方塊，編輯所需的訊息，然後點按 **Send** (發送) 。

#### 備註:

- 您的網絡商可能收取訊息的額外費用。
- 文字訊息也稱為 SMS (短訊服務) 訊息, 最長不超過 160 個字元。
- 文字訊息超過 160 個字元, 則將會以多條訊息發送。
- 網絡商有時會發送您無法回覆或轉寄的文字訊息, 而訊息方塊會顯示為唯讀訊息。

#### 儲存文字訊息中的圖片

- 1 在開始螢幕上, 點按 **Messaging (訊息)** .
- 2 點按訊息。
- 3 點按並按住開啟的圖片, 然後點按 Save to phone (儲存至手機)。此時圖片便會儲存於手機的 Saved Pictures (已儲存圖片) 專輯。

#### 備註:

- 您的網絡商可能收取訊息的額外費用。
- 附加圖片的文字訊息也稱為 MMS (多媒體訊息服務) 訊息。
- 您收到的一些圖片可能受到數碼版權管理保護, 因此無法儲存至您的手機。但是, 此類圖片仍可設為您手機的牆紙。

## 電郵

### 設定電子郵件帳戶

無論是個人或工作相關的電子郵件，您均可以設定不同類型的電子郵件帳戶，以在 Windows Phone 手機上使用。視乎您在手機上設定的電子郵件帳戶而定，還可擷取帳戶中的其他項目（如通訊錄、日曆及其他）。

**備註：**若要在手機上設定電子郵件帳戶，您必須具備工作的手機數據或 Wi-Fi 連接。如需有關連接至 Wi-Fi 網絡的更多詳情，請參閱「連接至 Wi-Fi 網絡」。

### 設定 Windows Live 帳戶

在您首次設定手機時，需要使用 Windows Live ID 登入。如果您當時未使用 Windows Live ID 登入，或如果您擁有多個 Windows Live ID，您可以按以下步驟設定您的主要 Windows Live ID 或其他 Windows Live ID。

在開始螢幕上向左翻閱至應用程式清單，點按  **Settings (設定)**，然後點按 **Email & accounts (電子郵件和帳戶)**。


1 點按 **Add an account (新增帳戶) > Windows Live**，然後按照螢幕上的指示繼續。

#### 備註：

- 您設定的首個 Windows Live 帳戶無法從手機中刪除。
- 如果您在手機上設定其他 Windows Live ID，則這些帳戶中的相片不會與手機同步。
- 您可以在此建立 Hotmail 帳戶，並可將新電子郵件訊息從 Hotmail 擷取至您的收件匣。當您存取此 Hotmail 應用程式時，新電子郵件數目便會顯示在電子郵件圖片上。

## 設定 Microsoft Exchange 電子郵件帳戶

您可以按照以下步驟設定位於 Microsoft Exchange Server 上的電子郵件帳戶。（例如，您的工作電子郵件帳戶可能位於 Microsoft Exchange Server 上。）您也可以使用以下程序中的步驟設定使用 Exchange ActiveSync 的其他電子郵件帳戶，包括主控 Microsoft Exchange 電子郵件帳戶或 Outlook Web App 帳戶。

- 1 在開始螢幕上向左滑動至應用程式清單，點按  **Settings (設定)**，然後點按 **Email & accounts (電子郵件和帳戶)**。
- 2 點按 **Add an account (新增帳戶) > Outlook**。

## 設定互聯網服務供應商 (Internet Service Provider, ISP) 電子郵件帳戶

在設定電子郵件帳戶時，手機將嘗試自動查找電子郵件帳戶的正確設定。電子郵件帳戶可能為互聯網服務供應商 (Internet Service Provider, ISP) 電子郵件帳戶，或可能為其他供應商的其他 IMAP 或 POP 電子郵件帳戶。

- 1 在開始螢幕上向左滑動至應用程式清單，點按  **Settings (設定)**，然後點按 **Email & accounts (電子郵件和帳戶)**。
- 2 點按 **Add an account (新增帳戶) > Other account (其他帳戶)**。



當手機無法自動找到正確的電子郵件帳戶設定時，您需要事先瞭解以下設定清單。通常，您可以在供應商的網站上找到此資訊。

- 電子郵件帳戶類型 (POP 或 IMAP)


- 接收電子郵件伺服器地址
- 外寄 (SMTP) 電子郵件伺服器地址
- 伺服器授權設定
- 接收電子郵件的 SSL 要求
- 外寄電子郵件的 SSL 要求


### 發送電子郵件訊息

在手機上設定電子郵件帳戶後，您可以在該帳戶上發送或接收電子郵件。

- 1 在開始螢幕上，點按要存取的電子郵件帳戶（例如，Outlook、Google 或 Windows Live）。
- 2 點按 New (新建) .
- 3 執行以下操作之一：
  - 在「To: (收件者: )」文字框中點按 Add (新增) ，然後選擇聯絡人。
  - 點按「To: (收件者: )」文字框，然後開始輸入電子郵件地址。手機在您輸入時會提供建議。
  - 若要移除收件者，請點按收件者姓名或電子郵件地址，然後點按

Remove (移除)。



- 4 點按「Subject: (主題: )」文字框，然後輸入主題。
- 5 點按下方的「Subject: (主題: )」文字框，輸入電子郵件，然後點按 Send (發送) .

**備註：**您可以在發送電子郵件前點按  以附加圖片。

### 檢視電子郵件訊息

- 1 在開始螢幕上，點按要存取的電子郵件帳戶（例如，Outlook、Google 或 Windows Live）。
- 2 選擇電子郵件訊息。

#### 從訊息檢視中使用以下選項：


- 若要回覆或轉寄電子郵件，請點按 Respond (回覆) ，然後執行以下操作之一：
  - 若要刪除一封電子郵件，請點按該電子郵件以開啟，然後點按 Delete (刪除) .

- 若要刪除多封電子郵件，請點按要刪除的電子郵件的最左側。此時便會顯示一個核取方塊。點按所有要刪除電子郵件旁的核取方塊，然後點按 **Delete (刪除)**。

## 擷取電子郵件

您可自動或手動檢查帳戶內的新電子郵件。

### 要手動檢查郵件：

- 1 點按開始螢幕上的  以轉到應用程式清單，然後點按 Email (電子郵件) 應用程式。  
或者，您也可以點按開始螢幕上的 Email (電子郵件) 圖片，這是您要使用的帳戶，例如 Hotmail、gmail 等。
- 2 選擇同步，然後 Windows Phone 將會連接至您的電子郵件帳戶並擷取新訊息。


### 若要自動檢查：

- 1 Windows Phone 自動擷取電子郵件作為帳戶的設定。

- 2 您可以透過更改「download email from (下載電子郵件)」設定，以更改擷取 (同步) 的時段。(如需用有關詳情，請參閱下一個類別「更改電子郵件帳戶的設定」。)

## 更改電子郵件帳戶的設定

您可按個人喜好設定其他帳戶。

- 1 在開始螢幕上點按  以轉至應用程式清單，然後點按 Email (電子郵件) 應用程式。或者，您也可以點按開始螢幕上的 Email (郵件) 圖示。
- 2 點按螢幕底部的應用程式列，以開啟選項功能表，然後點按新增電子郵件帳戶。
- 3 選擇要新增的電子郵件。選項包括 Windows Live、Outlook、Yahoo! Mail、Google 和其他帳戶。
- 4 輸入您的電子郵件地址及密碼，它便會自動與您的新電子郵件帳戶同步。


您可按個人喜好更改這些設定。

- 1 點按螢幕底部的應用程式列，以開啟選項功能表，然後點按設定。
- 2 您可以點按「sync settings（同步設定）」或勾選/取消勾選「Always bcc myself（始終密件抄送給自己）」及「Use an email signature（使用電子郵件簽名）」，以更改詳情同步選項。

**備註：**

- 在「sync settings（同步設定）」中，您可以更改以下設定  
下載新內容：擷取內容的時段  
從內容下載電子郵件以同步（電子郵件、通訊錄、日曆）：啟用/停用內容及其他詳細的帳戶資訊。

### 刪除電子郵件帳戶

- 1 在開始螢幕上點按  以轉至應用程式清單。
- 2 點按 Settings（設定）並轉至 email & accounts（電子郵件和帳戶）。
- 3 點按並按住要刪除的帳戶，然後點按 Delete（刪除）。

## Facebook

### 設定 Facebook 帳戶

在手機上設定 Facebook 帳戶時，Facebook 資訊在手機中可用。然後，您可以在 People（通訊錄）、Pictures（圖片）和 Me card（我的咭）中存取 Facebook 資訊。

- 1 在開始螢幕上向左滑動至應用程式清單，點按 **Settings（設定） > Email & accounts（電子郵件和帳戶）**。
- 2 點按 **Add an account（新增帳戶） > Facebook**。

**備註：**

- 若要在手機上設定 Facebook 帳戶，您必須具備工作的手機數據或 Wi-Fi 連接。
- 您在手機上一次只能設定一個 Facebook 帳戶。如果您要新增其他帳戶，則需要先刪除手機上現有的帳戶。

## 娛樂 相機

在使用相機前，系統會詢問您是否要允許它使用您的位置。允許此選項便會將位置資訊新增至您的相片，以便您可以查看相片的拍攝地點。

### 拍攝相片

- 1 在開始螢幕上向左滑動至應用程式清單。
- 2 點按  **Camera (相機)**。  
或按住 Camera (相機) 鍵以啟動相機。
- 3 確保已選定相機模式 。垂直或橫向平穩握住手機。您可以放大或縮小  以移近或遠離拍攝對象。

**提示!** 點按右下角圖示以調整各種設定。

- 4 按 Camera (相機) 鍵拍攝相片。

- 5 相片會自動儲存在手機上的  
Camera Roll (相機膠捲) 專輯中。

您還可以選擇上載相片至網絡，包括自動分享您的 SkyDrive 或 Facebook 相片。

### 拍攝相片後

- 1 拍攝相片後，向右滑動以在相片檢視器中查看相片。

**提示!** 在相機檢視相片或影片，先轉到相機，然後向右滑動以查看幻燈片。手機橫向放置以使用風景檢視時，幻燈片可實現最佳效果。

- 2 點按並按住相片以檢視相片選項，例如新增相片為我的最愛、刪除相片、將相片設為桌布或將相片上載至 Messaging (訊息) 或 Play To。

## 錄製影片

- 1 在開始螢幕上向左滑動至應用程式清單。
- 2 點按  **Camera (相機)**。  
或按住 Camera (相機) 鍵以啟動相機。
- 3 確保已選定影片模式 。垂直或橫向平穩握住手機。
- 4 按 Camera (相機) 鍵以開啟或停止錄製。  
影片會自動儲存在手機上的 Camera Roll (相機膠捲) 專輯中。

## 拍攝影片後

- 1 錄製影片後，向右滑動，然後點按影片以在影片檢視器中播放。

代表該影片的靜態圖像會在螢幕上出現，且螢幕底部將顯示時間。

**備註：**如果您的 Windows Phone 配備 288 MB 或更大的 RAM，且您的手機已新增選項，則您可以錄製和播放高清影片 (1280x720 高清解像度)。如果您將手機連接至電腦並複製影片，則您可以 1280x720 全解像度播放高清影片。

### 提示!

- 如果您要在手機上觀看從網站中下載的影片，請將手機連接至電腦，並將影片同步至手機。您無法自動將影片下載至手機。
- 若要查找您在手機上拍攝的且已同步至電腦的影片，請開啟 Zune 軟件，然後按一下 **Collection (收藏) > Videos (影片)**。
- 如果您要刪除大量的相片或影片，或如果您要將相片或影片儲存至電腦，則您可以將手機連接至電腦，並使用 Zune 軟件執行此任務，從而節省時間。

## 將位置資訊新增至我的相片

如果您將位置 (GPS) 資訊加入您拍攝的相片中，則您在上載和分享相片後，他人可以看到此資訊。您將位置資訊加入相片後，您和您的朋友便可以使用 Bing 和 Windows Live Photo Gallery 在地圖上盡情檢視這些

相片，甚至可在網絡上搜尋類似的其他相片，因為位置已內嵌於相片的場景內。

- 1 在開始螢幕上向左滑動至應用程式清單，然後點按 Settings (設定) > Applications (應用程式) > Pictures + Camera (相片和相機)。
- 2 開啟在拍攝的相片中包括位置 (GPS) 資訊。

**備註:** 如果您在將相片上載至 Facebook 或 SkyDrive 時，要在相片中保留此資訊，請開啟在上載的相片上保留位置資訊。

## 瞭解相機模式

**相機/影片攝錄模式** - 點按相機及攝錄機圖示可在相機/影片攝錄模式之間切換

**縮放** - 放大或縮小。

**設定** - 點按圖示，開啟設定功能表。請參閱「使用進階設定」。可讓您設定智能拍攝、美肌拍攝及相片解像度等。

## 使用相片/影片智能設定

從取景器中，點按  可開啟全部設定。

您可以更改設定。

設定選項	功能
Intelligent Shot (智能拍攝)	Windows Phone 可根據拍攝對象和亮度自動設定快門速度及光圈，從而實現最佳拍攝效果。
Beauty Shot (美肌拍攝)	新型 Windows Phone 可自動設定對焦和色彩平衡，以表現自然的膚色。
Photo resolution (相片解像度)	像素越高，則檔案越大，這意味著檔案會佔用更多的記憶體空間。若您要在手機上儲存更多相片，可以減小像素來縮小檔案。
Brightness (亮度)	透過 Brightness(亮度)，您可以根據光線條件設定亮度。
White Balance (白平衡)	自動調整拍攝對象的顏色。視乎拍攝對象和光線條件而定，您可選擇自動。

設定選項	功能
Color effect (色彩效果)	在功能表上選擇所需的設定選項： <b>off (關閉)</b> 、 <b>sepia (復古)</b> 、 <b>mono (單色)</b> 、 <b>negative (負片)</b> 、 <b>solarise (曝光)</b>
Quality(質素)	在 <b>Super fine (特細緻)</b> 、 <b>Fine (細緻)</b> 及 <b>Normal (正常)</b> 之間選擇。質素愈細緻，相片便愈清晰。因此，相片佔用的檔案大小會增大，手機記憶體中儲存的相片數量就會相應減少。
Anti-shake(防震)	減少因震動或移動造成的模糊。
補光燈	透過補光燈功能，您可以設定內置補光燈以在光線較暗的環境下閃光。
Video Resolution (影片解像度)	像素越高，則檔案越大，這意味著檔案會佔用更多的記憶體空間。若您想要在手機上儲存更多影片，可以更改影片解像度來縮小檔案。
Restore to default (還原預設值)	重設功能表和拍攝選項。

**備註：** 在拍攝相片之前，您可以點按 Settings (設定) > Applications (應用程式) > pictures + camera (相片和相機) 以存取以下設定：GPS 和 SkyDrive。

## 圖片

瞭解如何檢視手機記憶體中儲存的相片及播放影片。對於影片，您只能檢視相機錄製的影片。

## 圖片中心

Pictures (圖片) 是您隨身攜帶的 Windows Phone 圖片數碼版本。顯示您使用手機上的相機所拍攝、從電子郵件或文字訊息中儲存、或從網絡或電腦中下載的所有圖片。



- Times Square 留言板。展示所有檢視中的本機相片。在您開啟手機每五次時，相片完美時刻的馬賽克效果便會更改。如果您在瀏覽

Pictures (圖片) 之前，使用 Zune 軟件同步手機，則在您進入 Pictures 時便會看到自己的相片。

- 最新動態。這是您的朋友和家人上載至 Windows Live 或 Facebook 的最新照片。
- 相片收藏。您可依據圖片集、日期或您的最愛檢視相片和影片。如果您將相片作為您的最愛新增至您的最愛，則可以固定在開始螢幕。
- 中心背景。點按中心內的任意位置以更改背景，或使用您的任意相片更改背景。更改背景的兩種方法都會更改開始螢幕上的 Pictures (相片) 圖片。
- Zune 軟件。使用 My Phone (我的手機) 同步檔案，以將相片從電腦移至手機上的專輯，反之亦然。

**備註：**在您首次轉至 Pictures (圖片) 時，您將在 Times Square 留言板的 7 資料夾中看到 8 張相片。若要在此處查看自己相片的馬賽克效果，您需要點按 7 資料夾以刪除該資料夾。Times Square 留言板現在將隨機從 Camera Roll (相機膠捲)

擷取相片，以及您從電腦或社交網站同步的專輯。

## 支援的檔案格式

類別	格式
圖像	擴展名：bmp、gif、jpg、png、tiff
影片	• 擴展名：mp4 • 編解碼器：MPEG4

**備註：**在透過 Zune 電腦用戶端分享相片檔案時，手機僅支援 JPG 檔案格式。

- 視乎手機的軟件而定，某些檔案格式可能不支援。
- 如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。

## 專輯

相片專輯是您如何管理手機、電腦和網絡上相片和影片的重要組成部分。瞭解可以新增和刪除專輯的位置將有

助於讓一切井然有序。

Zune 軟件會將圖片從您的手機專輯，即 Camera Roll（相機膠捲）、Saved Pictures（已儲存圖片）及 Received Pictures（收到的圖片）移至電腦的圖片庫。

**備註：**除檢視和刪除專輯外，所有其他專輯任務必須透過電腦上的 Zune 軟件才能完成。

## 檢視相片

- 1 在開始螢幕上，點按箭頭以轉到應用程式清單，然後點按 **Pictures（相片）**。  
或如果已在開始螢幕上固定為最愛圖片，則點按螢幕上的 **Pictures（相片）** 圖片。
- 2 在 Pictures（相片）中，捲動並轉至相片專輯（全部、日期、我的最愛），然後點按相片圖片以開啟和檢視。

在檢視相片時，請使用以下選項：

- 若要檢視更多相片，請左右滑動。
- 當您長按一張相片時，便會顯示一個簡短功能表，您可以選擇刪除、分享及新增至您的最愛。
- 若要放大或縮小，請用兩個手指點按螢幕，然後將手指分開（將手指靠攏即可縮放）。

## 播放影片

- 1 在 Pictures（相片）中，選擇並轉至相片專輯（全部、日期、我的最愛），然後點按影片圖片以開啟和檢視。
- 2 點按要檢視的影片圖片。
- 3 逆時針旋轉相片至風景檢視。
- 4 在螢幕控制播放。

## 分享相片

- 1 在開始螢幕上，點按 Pictures（相片）。
- 2 找到要分享的相片。無法上載預設的相片。

3 點按並按住相片，然後點按 **Share（分享）**。

4 選擇您要將相片分享或上載至網絡的方式--多媒體訊息或分享至 **SkyDrive**。

**備註：** SkyDrive 是 Windows Live 的一部分，是網絡上 (photos.live.com) 一項受密碼保護的服務，您可以在此免費儲存和分享不超過 25 GB 的文件及相片。使用您的 Windows Live ID 登入，且一切均已設定。

**提示！** 在您將相片從手機上載至 SkyDrive 後，您可以在電腦的 Windows Live Photo Gallery 內找到和編輯相片，而無需連接到網絡。您的電腦必須執行 Windows Vista 或 Windows 7。若要查看您是否已安裝 Windows Live Photo Gallery，請在電腦中按一下 Start（開始）按鈕 。在搜尋方塊中輸入相片集，然後在結果清單中按一下 Windows Live Photo Gallery。

## 圖片集中我的最愛

使用 Pictures (圖片) 中 Favourites(我的最愛), 可將您最愛的圖片放置在一個地方, 以便於檢視。您只能將 Favourites (我的最愛) 中的圖片固定至開始螢幕。

- 1 在開始螢幕上點按 **Pictures (相片)**, 然後查找圖片並點按以開啟圖片。
- 2 在相片檢視器中, 點按並按住相片, 然後點按 **Add to Favourites (新增至我的最愛)**。

**提示!** 是否要將網上專輯中的相片新增為我的最愛? 開啟相片, 點按相片, 然後點按 Save to phone (儲存至手機)。此時相片便會新增至 Saved Pictures (已儲存圖片) 資料夾 (在 Pictures (圖片) 中, 轉至 All (全部) > Saved Pictures (已儲存圖片))。找到相片, 然後按照上述步驟 2 將已儲存的圖片新增為我的最愛。

## 新增或刪除相片的說明文字

### 新增說明文字

您可以將說明文字新增至您上載至 Facebook 或 Windows Live 的相片中。

- 1 點按相片，然後點按 Share (分享)。
- 2 選擇要上載相片至的帳戶。
- 3 點按文字框，以輸入說明文字。您須在 4 秒鐘內開始輸入，否則相片將上載，而不含說明文字。
- 4 點按 Upload (上載)。

### 刪除說明文字

您必須在電腦上刪除說明文字，且只能刪除已上載相片的說明文字。

- 1 查找相片。
- 2 登入並按照 Facebook 或 Windows Live 提供的步驟刪除說明文字。

## 將位置資訊新增至我的相片

如果您將位置 (GPS) 資訊加入您拍攝的相片中，則您在上載和分享相片後，他人可以看到此資訊。您將位置資訊加入相片後，您和您的朋友便可以使用 Bing 和 Windows Live Photo Gallery 在地圖上檢視這些相片，甚至可在網絡上搜尋類似的相片，因為位置已內嵌於相片的場景內。

- 1 在開始螢幕上向左滑動至應用程式清單，然後點按 **Settings (設定) > Applications (應用程式) > Pictures + Camera (相片和相機)**。
- 2 開啟在拍攝的相片中包括位置 (GPS) 資訊。

**備註：**如果您在將相片上載至 Facebook 或 SkyDrive 時，要在相片中保留此資訊，請開啟在上載的相片上保留位置資訊。

## 音樂和影片

### Zune 軟件

將檔案與手機同步，以將音樂和影片從電腦移至手機，反之亦然。

### 從 Marketplace 獲取音樂、影片和 Podcast。

Zune Marketplace 是您的一站式商店，可提供音樂、影片及更多內容。部分內容可免費播放、下載或體驗。其他項目可供購買或租用。

有兩種方法可存取 Zune Marketplace：

### 下載或將音樂直接存於手機

- 1 在開始螢幕上，點按 **Music + Videos (音樂和影片)**。
- 2 選擇 Zune。
- 3 若要查找歌曲、專輯、演出者或播放清單，請執行以下操作之一：
  - 選擇瀏覽可用的類別，然後點按所需的項目。

- 按 Search (搜尋) 按鈕，輸入歌曲標題、專輯標題或演出者名稱，然後點按所需的項目。

- 4 按照指示將您的音樂、影片、圖片等放入收藏。

### 在電腦上下載音樂、Podcast、影片、電影和電視節目

- 1 轉至 [windowsphone.com](http://windowsphone.com) 以安裝 **Zune 軟件**。
- 2 使用 USB 線將手機連接到電腦。
- 3 開啟 Zune 軟件，然後按照指示將您的音樂、影片、圖片等放入收藏。  
如果您尚未登入，請按一下 Sign In (登入)。如果您擁有多個 Windows Live ID 帳戶，請輸入您在設定手機時使用的帳戶。
- 4 按一下 **collection (收藏)**，然後將要同步的所有內容拖動至左下方的手機圖示。

**備註：**並非所有項目均可供購買、租用、下載或流入。Zune Marketplace 對於某些地區或某些語言不可用。Zune Marketplace 內容因市場而異。若要瞭解有關如何使用 Zune Marketplace 的詳情，請轉到 Zune.net。

### 支援的檔案格式

類別	格式	從 Zune 軟件同步
聲音	擴展名: mp3 、 mp4、 m4a、 wma 編解碼器: MP3 、 AAC、 WMA	擴展名: mp3 、 mp4、 m4a、 wma 編解碼器: MP3 、 AAC、 WMA

類別	格式	從 Zune 軟件同步
影片	擴展名: 3gp、 3g2 、 mp4 、 m4v、 wmv 編解碼器: MPEG4 、 H263 、 H264 、 VC-1	擴展名: mp4、 m4v、 wmv 編解碼器: MPEG4 、 H.264、 VC-1

### 播放音樂、影片和 Podcast

Windows Phone 不僅僅是一部手機，還是一款絕佳的 Zune 音樂和影片播放器。

在網上搜尋或檢查電子郵件時聆聽音樂，在來往通勤時瞭解您最愛的 Podcast，或在乘坐下一航班時觀看電影。您無需隨身攜帶其他裝置。Windows Phone 可滿足您所有的娛樂需求。

- 1 在開始螢幕上，點按 **Music + Videos (音樂和影片)**。
- 2 翻閱至 **Zune**，然後點按 **Music (音樂)**、**Videos (影片)** 或 **Podcast**。
- 3 若要查找您要播放的項目，請執行以下操作之一：
  - 點按一個類別（例如演出者、專輯或歌曲），然後根據需要上下翻閱。
  - 若要搜尋 Zune Marketplace，請按 Search (搜尋) 按鈕，然後輸入歌曲標題、專輯標題或演出者名稱。  
(Zune Marketplace 對於某些國家或地區可能不可用。)
- 4 點按要播放的項目。  
如果您需要調整音量，請按手機側邊的量鍵。

#### 提示!

- 您可以迅速按照隨機順序播放所有音樂。選擇 Zune，然後點按 Play (播放)。此圖示 Music (音樂) 旁邊。
- 如果一個類別（例如歌曲或專輯）中含有大量項目，則可迅速跳轉至清單中的特定点，而無需執行大量捲動操作。例如，如果您位於歌曲清單的頂部（「a」部分），而您要播放以字母「s」開頭的歌曲。點按內含字母「a」的彩色方塊。在顯示的字母格線中，點按 S。

## 調整播放

- 1 在播放項目時，使用以下控件以調整播放（一些控件並不適用於所有媒體類型，如影片）。

點按此圖示	執行的任務
	音樂：點按專輯圖像，然後點按 Repeat（重複）以重複播放當前的播放清單。
	音樂：點按專輯圖像，然後點按 Shuffle（隨機）以按照隨機順序播放當前播放清單中的項目。
	評價可協助您管理音樂收藏：按評價排序歌曲、演出者或專輯，如果您需要更多的空間，您可以快速一覽要清除的內容。


點按此圖示	執行的任務
	音樂：點按以跳至當前歌曲的開頭或跳至播放清單中的下一首歌曲（此功能取決於您目前已播放的歌曲時間）。 影片和聲音 Podcast：點按以快退七秒。 全部：點按並按住以倒回當前項目。
	音樂：點按以跳至播放清單中的下一首歌曲。 影片和聲音 Podcast：點按以快進 30 秒。 全部：點按並按住以快進當前項目。
	點按以暫停播放。
	點按以播放。

#### 提示!

- 在播放歌曲或聲音 Podcast 時，您還可以左右滑動以跳至播放清單中的下一個和上一個項目。
- 在播放影片時，點按螢幕以顯示播放控件。按 Back (返回) 按鈕以返回 Music + Videos (音樂和影片)。
- 按向上或向下音量鍵，以顯示迷你播放控件。即使在螢幕鎖定時，此操作仍適用。

### 顯示當前播放清單

在播放音樂時，播放清單中緊接在後的數個項目會顯示在專輯圖像的下方。若要查看播放清單中的所有項目，請執行以下操作：

- 1 點按當前歌曲的名稱（在專輯圖像的下方）。
- 2 若要隱藏播放清單，請等待幾秒或按 Back (返回)  按鈕。

**提示!** 若要播放播放清單中的其他歌曲，請根據選擇，然後點按要播放的項目名稱。

### 顯示正在播放的項目

1 執行以下操作之一：

- 按向上或向下音量鍵。當前的歌曲名稱便會顯示在迷你播放控件的上方。即使在手機鎖定時，此操作仍適用。
- 在 Music + Videos (音樂和影片) 中，翻閱至 History (記錄)。

### 顯示歌曲的相關資訊

- 1 在 **Music + Videos (音樂和影片)** 中播放歌曲時，點按演出者名稱。
- 2 左右翻閱以查看相關資訊（可使用時），例如此演出者的其他專輯、專輯評論及演出者履歷。

## 遊戲

### 遊戲中心

從 Games (遊戲) 中，您不僅可以在手機上玩遊戲，還可以連接到電腦和 Xbox 主控台，增強您的遊戲體驗。

- Spotlight (聚焦)。研讀 Xbox LIVE 遊戲新聞、Xbox LIVE 團隊的提示和趨勢。
- Xbox LIVE Gamer Profile (Xbox LIVE 玩家設定檔)。查看您的設定檔以檢視最近玩過的遊戲、查看您的玩家卡片、更改帳戶資訊以及個人化您的替身。
- Requests (要求)。檢視邀請以便快速加入遊戲，在回合製遊戲中瞭解回合通知，或接受同伴的震動以進行下一步。
- Collection (收藏)。檢視一處所有的 Xbox LIVE 和手機上的其他遊戲。

## 玩遊戲

Xbox LIVE 可能在您所在區域無法使用。如果可用且您要玩遊戲，請使用現有的 Xbox LIVE 帳戶或設定一個帳戶。您需要在手機上安裝遊戲後，才能玩遊戲。

- 1 在開始螢幕上，點按 **Games (遊戲)**。
- 2 選擇 Collection (收藏)，然後點按您已購買的遊戲。如果您要玩 Xbox LIVE 遊戲，則需要登入 (或加入) Xbox LIVE。
- 3 如果您要查看是否收到遊戲邀請或回合通知，請向左滑動至 Requests (要求)。如果您要與朋友一起玩遊戲，但您手機上的遊戲不允許多個玩家，請翻閱至收藏的底部，然後點按 Get more games (獲取更多遊戲)，以查看您可以從 Marketplace 試用或購買的遊戲。

**備註：** Xbox LIVE 可能在您所在的國家或區域無法使用。



## FM 收音機

瞭解如何收聽 FM 收音機上的音樂和新聞。若要收聽 FM 收音機，您必須連接作為收音機天線的隨附耳機。

### 收聽電台節目



- 1 將隨附的耳機插入手機。（該耳機作為天線）。
- 2 在開始螢幕上，點按 **Music & Videos**（音樂和影片）。
- 3 選擇 Zune，然後點按 **Radio**（收音機）。
- 4 若要選擇電台節目，請執行以下操作之一：
  - 左右滑動以調整控制列。
  - 當您長按收音機上的調節控制盤時，便會顯示一個簡短功能表，您可以選擇固定至開始、設定、收音機模式：揚聲器。
  - 點按 Favourites（我的最愛） 以顯示您最愛的電台。

#### 提示 1

- 點按 Play（播放） 或 Pause（暫停） 以開始或停止收聽。
- 在螢幕鎖定時，按向上或向下音量鍵，以顯示迷你播放控件。您可以使用控件暫停或恢復收音機，或跳至下一個或上一個電台。

## 新增或移除最愛的電台

若要更快地調諧電台，請嘗試將一些電台新增為最愛的電台。

- 1 調諧電台。
- 2 執行以下操作之一：
  - 若要新增電台為我的最愛，請點按 Add Favourite (新增我的最愛) 。
  - 若要移除作為我的最愛的電台，請點按 Remove Favourite (移除我的最愛) .

**提示!** 若要顯示您最愛的電台，請點按 Favourites (我的最愛)。您還可以按住電台編號，以將您最愛的電台固定至開始螢幕。

## 在揚聲器與耳機模式之間切換

- 1 在播放電台節目時，請點按並按住電台編號。
- 2 點按 Radio mode: headset (收音機模式：耳機) 或 Radio mode: speaker (收音機模式：揚聲器)，以在兩個選項之間切換。


## 切換收音機地區

如果您出國旅遊，您可能需要切換收音機地區設定，以便在國外時收聽 FM 收音機。如果您更改此設定，切記在回國後切換回原始設定。

- 1 在播放電台節目時，請點按並按住電台編號。
- 2 點按 Settings (設定)。
- 3 在 Radio (收音機) 螢幕上點按 Region (地區) 方塊，然後點按所需收音機地區對應的名稱。

## 實用程式

### 設定鬧鐘

- 1 在開始螢幕上點按  以轉至應用程式清單，然後點按 **Alarms (鬧鐘)**  應用程式。
- 2 若要新增的鬧鐘，請點按底部選項功能表列上的 。您可啟動手機內的一些預設鬧鐘。
- 3 點按 Time (時間) 以設定您要鬧鐘響起的時間。
- 4 設定重複鬧鐘。  
圖示表明所選的工作日。
- 5 設定鬧鐘名稱。在完成鬧鐘設定後，點按頁面底部的 。



### 使用計算機

- 1 在開始螢幕上點按  以轉至應用程式清單，然後點按 **Calculator (計算機)**  應用程式。
- 2 點按數字按鈕以輸入數字。

- 3 對於簡單計算，點按所需的運算符號 (+、-、x 或 ÷)，然後按 =。

### 新增事件至日曆

- 1 在開始螢幕上點按  以轉至應用程式清單，然後點按 **Calendar (日曆)**  應用程式。
- 2 點按  以新增約會。
- 3 點按 Subject (主題) 以為約會指定標題。
- 4 點按 Location (地點) 以輸入約會地點。
- 5 點按 When (時間) 以選擇日期，然後選擇約會開始的時間。
- 6 點按 How long (時限) 以選擇約會持續的時間。
- 7 如果您要設定提醒、發生狀況及狀態，請點按更多詳情並選擇所需的選項。

- 8 如果您要加入出席人員，請點按新增聯絡人以選擇聯絡人。您還可以檢查是否為秘密約會並做筆記。
- 9 點按 **Save (儲存)**，將約會儲存至日曆。日曆中所有已儲存約會的日子將以彩色方格標記。
- 10 您可以要更改約會詳情或刪除約會。點按  以修改約會，或點按  以刪除約會。

## Office

您可管理並檢視文件檔案。支援的檔案類型為 doc、docx、txt、xls 和.xlsx。

- 1 在開始螢幕上點按  以轉至應用程式清單，然後點按 **Office**  應用程式。
- 2 若要建立備註，請點按新增備註 (new note) 並記錄資料。若要檢視您的所有備註，請點按 All (全部)。
- 3 若要檢視或編輯 Explore Excel、Explore Word、Explore PowerPoint 檔案，請翻閱至 Documents (文件)。
- 4 點按並按住任何檔案，便會出現發送、刪除及屬性選項。

## Windows 應用程式




- 1 首先，請建立一個 Windows 帳戶。  
輸入您的使用者名稱和密碼。
- 2 登入後，您的 Windows 帳戶中的通訊錄、電子郵件和日曆會自動與您的 Windows Phone 7 同步。

**提示!** 如果您在登入後更改 Windows Live ID 帳戶或刪除帳戶，請按照以下步驟操作：Applications (應用程式) > Settings (設定) > system (系統) > email & accounts (電子郵件和帳戶) > add an account (新增帳戶) > 點按並按住 Window Live ID 以同步或刪除。


## 地圖

檢查您現時的位置，並取得前往目的地的駕駛方向。Windows Phone 7 必須連接 Wi-Fi 或 3G/GPRS。

## 方向


點按 ，然後輸入出發地和目的地以獲取方向。此時將顯示如何從出發地前往目的地、距離等路線詳情以及所需時間。您還可以選擇有關步行  和駕車  的路線詳情。

## 我

點按  以搜尋您所處的位置。這實際上是您的手機所處的位置。您可以點按兩下或縮放螢幕以更精確地查看您所處的位置。

您還可以將它固定至開始螢幕，或透過訊息或 Hotmail 分享位置資訊。


## 搜尋

點按  並輸入您要查找的位置。此操作會將地圖移至位置。

**備註：**如果您透過向上翻閱並點按以開啟頁面底部的天線檢視，則可以搜尋天線位置。它甚至會描述附近的建築物和風景。

## Marketplace

Marketplace 設有多種有用的應用程式、音樂和遊戲供您下載。如果您從 Marketplace 安裝上述項目，這些項目便會顯示在應用程式清單中。

- 1 在開始螢幕上點按  以轉至應用程式清單，然後點按 **Marketplace** 應用程式。您也可以點按開始螢幕上的 **Marketplace** 圖片。
- 2 Marketplace 包括三類：應用程式、遊戲和音樂。選擇您要安裝或下載的一個類別。

## Hotmail

Hotmail 會在您首次設定手機時設置。視乎您的同步設定，手機的 Hotmail 會與您在網上的 Windows 帳戶自動同步。

收件匣對話清單是您預設的 Hotmail 檢視模式。


點按 Menu (功能表) 按鈕，然後點按 Refresh (重新整理) 以傳送或接收新電郵，並與您在網上的 Windows 帳戶同步。

## 網絡功能

### 瀏覽器

瀏覽器令您透過手機盡享快捷、全彩色的遊戲、音樂、新聞、體育、娛樂及更多，而無論您身在何處，有何種需求，均能一一滿足您。

### 存取網絡

- 1 在開始螢幕上點按  以轉至應用程式清單，然後點按 **Internet Explorer** 應用程式。您也可以點按開始螢幕上的 **Internet Explorer** 圖片。
- 2 您會前往網站。

**備註：**連接到這些服務和下載內容需繳交額外費用。請向服務供應商諮詢收費詳情。

### 使用選項

點按 Menu (功能表) 選項列以查找更多選項。

**forward (前進)** - 前進至已瀏覽的網頁。

**share Page (分享網頁)** - 以messaging 發送網頁連結。

**find on page (搜尋網頁)** - 顯示您要在網頁上搜尋的內容。

**pin to start (固定至開始)** - 將網頁固定至開始螢幕以便快速啟動。

**setting (設定)** - 設定以下選項

**Allow cookies on my phone (在手機上允許使用 cookies)**

**Let Bing suggest sites as I type (在我輸入時讓 Bing 建議網站)**

## Website preference (網站偏好)


Mobile version (手機版本)

Desktop version (桌面版本)

**delete history (刪除記錄)** - 刪除 Internet Explorer 中的所有臨時檔案、記錄、cookies 和儲存的密碼。

 **add (新增)** - 新增網頁至我的最愛

 **favourites (我的最愛)** - 存取/編輯最愛的網頁和記錄網頁。

 **tabs (標籤)** - 將標籤用作導覽器，以在各組網頁之間切換。

## 連接

### 藍芽

#### 開啟藍芽無線功能



- 1 在開始螢幕上，點按箭頭 ➔ 以轉至應用程式清單。
- 2 點按 **Settings (設定) > System (系統) > Bluetooth (藍芽)**。
- 3 若要開啟藍芽，請將狀態滑塊拖動至 **On (開啟)**。
- 4 開始搜尋藍芽裝置。
- 5 點按要配對的裝置。

#### 連接至藍芽耳機

配對後，您便可以根據需要連接至藍芽裝置。

- 如果藍芽關閉，請點按 Bluetooth (藍芽) 以開啟。在藍芽裝置清單中，點按清單中配對裝置的名稱。

#### 備註：

- 如果您隨後要關閉藍芽，請轉到 Settings (設定)，然後點按 Bluetooth (藍芽) 並滑動開關至 Off (關閉) 位置。
- 設定藍芽後，Windows Phone 7 便會在藍芽開啟時進行識別。
- Windows Phone 7 不支援在手機之間進行藍牙檔案傳輸的功能。有關藍牙的詳情，請查看 FAQ (常見問題)。

## Wi-Fi

瞭解如何使用手機的無線網絡功能，以啟動並連接至與 IEEE 802.11 b/g/n 標準相容的任何無線區域網絡 (WLAN)。您可以在存取點或無線熱點可用的任何地點，連接至互聯網或其他網絡裝置。此裝置採用非協調頻率，並適用於所有歐洲國家。在歐盟，WLAN 可在室內無限制地運作，但在法國則不能在室外運作。



## 連接至無線網絡

- 1 在開始螢幕上，點按箭頭 ➔ 以轉至應用程式清單。
- 2 點按 **Settings (設定) > System (系統) > Wi-Fi** 以連接至無線網絡。
- 3 將滑塊移至 **On (開啟)** 以開啟無線連接。在大多數情況下，您會看到安全和不安全的網絡。
- 4 點按要連接的網絡。
- 5 在下一個螢幕上，點按文字欄位。然後輸入您的使用者名稱或密碼。
- 6 點按 **Done (完成)** 以完成操作。

**備註：** 為避免意外連接至同名的不正確網絡，將會顯示此警告。如果您確定是正確的網絡，請點按 Connect (連接)。

## 編輯 Wi-Fi 連接

如果您需要更改無線網絡的設定，或沒有顯示網絡。

- 1 請返回 Wi-Fi Settings (Wi-Fi 設定) 螢幕以選擇要編輯的網絡，然後點按並按住要編輯的網絡。
- 2 點按 **Edit (編輯)** 以更改您的新 Windows Phone 收集的網絡。
- 3 如果您需要編輯使用者名稱和密碼，請完成網絡設定。
- 4 如果需要編輯Proxy 資訊，開啟 Proxy。
- 5 如果需要編輯網絡資訊，請填寫相關的欄位。您將需要從網絡管理員處獲取新的設定資訊。

## 備註：

- 向下滑動以查看其他選項。Windows Phone 7 在識別您的網絡時會自動輸入此資訊。
- 若要關閉無線網絡，請返回 Settings (設定) 螢幕，然後將 **Wi-Fi** 設為 **Off (關閉)**。
- 在重新開啟 Wi-Fi 後，手機將會記住網絡設定並自動連接。

## Play To


瞭解如何使用與數碼生活網絡聯盟 (Digital Living Network Alliance, DLNA) 服務相容的 Play To，此服務可使用家庭中的 DLNA DMR 裝置透過 Wi-Fi 播放手機中的內容。

在開啟之前，您必須先啟動 Wi-Fi 功能並新增 Wi-Fi 設定檔。

### 備註：

- 視乎裝置而定，一些檔案可能無法在與 DLNA-DMR 相容的裝置上播放。
- 視乎網絡連接和連接的 DLNA DMR 播放器而定，播放可能會進行緩沖。

## 在其他 DLNA-DMR 裝置上播放檔案

- 1 在開始螢幕上點按箭頭  以轉至應用程式清單，然後選擇 **Play To**。
- 2 點按通知列上的 **Device (裝置)** 圖示，然後選擇目標。裝置便會自動搜尋 DLNA DMR 裝置。
- 3 選擇媒體類別 > 檔案。
- 4 此時便會在所選播放器上開始播放。
- 5 使用手機上的圖示控制播放。

### 備註：

- 視乎網絡連接和連接的伺服器而定，播放可能會進行緩沖。
- 只有在 DLNA DMR 裝置開啟時，您才能搜尋裝置。

## 設定

在此功能表中，您可以個人化手機上的設定。在開始螢幕上點按

➔ 以轉至應用程式清單，然後點按 Settings (設定)。

## 系統

### 鈴聲和聲音

設定鈴聲和震動，並選擇鈴聲、新文字訊息、新留言訊息和新郵件的鈴聲。

設定播放約會提醒、按鍵、鎖定和解鎖以及所有其他通知的聲音。

### 主題

更改手機的背景和相片色彩以適合您喜好。

### 飛航模式

同時在手機的行動、Wi-Fi 和藍芽通訊之間切換。您還可以單獨在 Wi-Fi 與藍芽之間切換。

### Wi-Fi

開啟 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

Wi-Fi 設置 - 設定網絡通知，或新增 Wi-Fi 網絡

### 藍芽

搜尋和連接藍芽裝置。

### 電子郵件和帳戶

設定電子郵件、通訊錄、Facebook 及其他。

### 鎖定桌布

設定更改桌布和螢幕超時。

切換至設定密碼並建立 4 位數密碼。

### 位置

您之前啟用定位服務的應用程式現在可以存取您目前所處的位置。

## 流動網絡

設定數據連接和數據漫遊。  
切換至設定連接並選擇網絡。

## 日期及時間

設定日期、時間和時區

## 亮度

調節屏幕亮度。

## 鍵盤

設定鍵盤語言。您可以核選建議文字並顯示拼寫錯誤的字詞、校正拼寫錯誤的字詞、在選擇建議後插入空格、在按兩下空格鍵後插入句號以及句首字母大寫。

## 區域和語言

設定顯示語言、區域格式、短日期、長日期、一週的第一天、系統區域及瀏覽器和搜尋語言。

## 易用

設定 TTY/TDD 模式

## 語音

在手機鎖定時，設為播放聲音確認及使用語音。

## 查找手機

在 windowsphone.live.com 上查找手機、使手機響鈴、鎖定或清除手機

如果您的手機遺失，這將有助於您找到手機。轉到 windowsphone.live.com，然後使用您的 Windows live ID 和密碼登入。

## 手機更新

在發現新的更新時通知您。使用流動數據連接檢查更新。

## 關於

檢視法律資訊，檢查手機狀態和軟件版本。

重設手機。此操作會清除您的所有手機內容，包括您已購買和下載的應用程式。

## 意見

發送意見以說明改善 Windows Phone 的功能

## 應用程式

### 遊戲

連接至開啟/關閉 Xbox LIVE。

### Internet Explorer

檢查在手機上是否允許使用 cookies。

另外，您可以設定在輸入時是否讓 Bing 建議網站。

選擇網站喜好。

手機版本或桌面版本

### 刪除記錄

刪除 Internet Explorer 中的所有臨時檔案、記錄、cookies 和儲存的密碼。

### 地圖

開啟/關閉使用我的位置。

它會使用您的位置以提供更佳的本地搜尋結果。

### 刪除記錄

刪除手機中之前的地圖搜尋、固定和圖像數據。

### 訊息

開啟/關閉文字訊息發送確認。

### 音樂和影片

在 Zune 開啟/關閉時連接。

開啟以自動下載可增強 Zune 體驗的資訊。

### Office

#### 使用者名稱

輸入您的使用者資訊以在評論中識別您的身份，並有助於協助和文件追蹤。

#### SharePoint

- 資料儲存  
您可以清除 SharePoint 快取記憶，以在手機上建立空間。此操作會刪除所有臨時 SharePoint 檔案和記錄。

- **衝突**

SharePoint 可讓您選擇如何管理手機與伺服器上檔案之間的衝突。您可以選擇要解決衝突的方式。

- 通知我，我將手動解決衝突。
- 自動取代手機上的項目。

- **啟動選項**

檢查是否始終開啟 SharePoint 連結。

- **重設**

還原預設設定。

### **OneNote**

開啟/關閉自動同步。

開啟後，當您開啟網頁、儲存網頁或開啟區段時，便會自動同步記錄。

### **通訊錄**

匯入智能咭通訊錄將與網上 Windows Live 聯絡人清單同步。

- 按名字/姓氏排列清單。
- 按名字姓氏/姓氏名字顯示姓名。

### **手機**

設定語音信箱號碼。

對所有人/我的聯絡人顯示/不對任何人顯示我的呼叫者 ID

開啟/關閉來電轉接

開啟/關閉國際協助

開關/關閉智能咭安全

### **相片和相機**

設定以下選項。

開關/關閉允許相機按鈕喚醒手機。

開關/關閉在拍攝的相片中包括位置 (GPS) 資訊。

開關/關閉自動上載至 SkyDrive。

開關/關閉在上載的相片上保留位置資訊。

### **收音機**

設定地區選項。

北美/全世界/日本

## **搜尋**

開啟/關閉使用我的位置。

它會使用您的位置以提供最佳的本地搜尋結果。

檢查以在輸入時獲取 Bing 建議。

## **刪除記錄**

刪除手機之前輸入的搜尋詞彙。

## 軟體更新

### 手機軟件更新

Windows Phone 更新可將手機韌體更新至最新版本。Windows Phone 更新服務會自動提示手機進行 Windows Phone 更新，並透過使用者個人電腦上執行的 Zune 軟件在手機上安裝更新。請從 Zune 軟件轉至設定的「PHONE (手機)」功能表，並按一下「UPDATE (更新)」以檢查是否存在可用更新。

## 配件

本手機備有一系列分開發售的配件可供選用。您可根據您的通訊需要，選擇適用的配件。請向您當地的經銷商查詢供應情況。

### 充電器



### USB線

連接您的 LG-E900 和電腦。



### 電池



### 使用手冊

瞭解更多有關LG-E900的資訊。



### 立體聲耳機



### Microsoft SHG (使用指南)

本指南將幫助您開始使用您的 Windows Phone。



### 備註:

- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

環境溫度

最高: +55° C (放電),  
+45° C (充電)

最低: -10° C

## FAQ (常見問題)

在將您的手機送往維修或致電維修工程師之前，請檢查手機出現的問題有否已在本章節中有所說明。

類別	子類別	問題	解答
藍芽	藍芽耳機	無法透過遠端藍芽耳機聆聽音樂	<ul style="list-style-type: none"><li>* 請檢查您是否沒有將耳機連接到手機。</li><li>• 確保裝置已連接到立體聲耳機。</li><li>• 確保耳機支援您嘗試聆聽的音樂格式。</li><li>• 確保耳機與裝置之間的距離在 10 米以內，並且中間沒有牆壁或其他障礙物相隔。</li></ul>
藍芽	藍芽耳機	無法透過遠端藍芽耳機收聽影片聲音	不支援。如果想要收聽影片聲音，請使用耳機插孔而非藍芽耳機。
藍芽	受藍芽支援的設定檔	Windows Phone 7 支援哪些設定檔？	<ul style="list-style-type: none"><li>HFP (免提設定檔)</li><li>HSP (耳機設定檔)</li><li>A2DP (進階播音設定檔)</li><li>AVRCP (A/V 遠端控制設定檔)</li><li>- 音樂：僅支援 Play/Pause/Previous Song/Next Song</li><li>PBAP (電話簿存取設定檔)</li></ul>

類別	子類別	問題	解答
藍芽	藍芽連接	透過藍芽可以使用哪些功能?	可以使用「連接至立體聲/單聲道耳機」汽車套件。
藍芽	藍芽連接	可否在同步手機與電腦時使用互聯網? (當電腦連接至無線區域網絡時即可使用。)	不支援。
藍芽	通訊錄傳輸	可否透過藍芽將通訊錄數據傳輸至其他手機? 例如, 透過藍芽將其他手機上的通訊錄移動至手機上。	不支援。
藍芽	列印	可否使用藍芽或無線連接列印 MS office 文件 (MS word、excel、PDF 等)?	不支援。
數據	備份	如何將通訊錄從舊手機匯入至 Window Phone 7?	<ul style="list-style-type: none"> <li>將舊智能咭放入新手機中, 然後轉至 <b>Settings</b>。翻閱至應用程式, 點按 <b>people &gt; import SIM contacts</b>。</li> <li>您不可透過 Zune 完成此動作。</li> </ul>

類別	子類別	問題	解答
數據	同步	在 windows phone 7 與電腦之間同步數據時存在哪些限制?	在 Window Phone 7 中將使用「Zune」應用程式而非「Activesync」。 Zune 應用程式的限制是無法在同步時播放手機上的（音樂、影片與圖片）檔案。
數據	同步	如何在 Windows Vista 和 Win7 中實現手機與電腦同步?	使用 Microsoft 應用程式「Zune」，該程式可以從 MS 網站下載。
數據	網絡升級	在透過網絡升級時，是否會自動備份使用者數據?	Zune 支援整個 Flash 備份，但不支援單獨備份用戶數據。
其他	通話時間	通話時間是否根據手機型號採用不同計算方式（例如，2G/3G、CDMA ...）?	CDMA 型號：通話時間在您撥號並按下「Call」時開始計時。 2G/3G 型號：通話時間在接通電話時開始計時。
其他	電子郵件	從何處獲取 POP3 和 SMTP 伺服器設定?	請向電子郵件系統管理員尋求協助。
其他	Active X	Active X 是否受電腦支援?	不受支援。

類別	子類別	問題	解答
手機功能	電池	如何檢查電池完全充電?	屏幕頂部會顯示電池充電狀態。
手機功能	W&P 選項	可否在將電話號碼儲存至電話簿時使用 W (等候) 和 P (暫停) 選項?	是的, 可以。但只能在使用硬件鍵盤的情況下才會支援。使用螢幕小鍵盤時則不受支援。
手機功能	Office Mobile	可否在移動辦公室應用程式中編輯檔案?	只能讀取檔案。 <ul style="list-style-type: none"> <li>請注意, Microsoft Office Mobile 並非支援 Microsoft Office 2010 中的所有功能。如果文件包含不受 Office Mobile 支援的內容, 您仍然可以在手機上開啟此文件, 但不會顯示不受支援的內容。</li> </ul>
手機功能	鈴聲設定	如何設定鈴聲?	轉至 Application list, 然後點按 <b>Settings &gt; ringtone &amp; sounds</b> 以便設定鈴聲。您可以針對不同的人設定不同類型的提示和鈴聲。在 start 上, 點按 <b>People &gt;</b> 您想更改的聯絡人 <b>&gt; Edit &gt; Ringtones</b> 。

類別	子類別	問題	解答
手機功能	鈴聲設定	如何將我最愛的音樂用作鈴聲？	Marketplace 允許用戶輕鬆查找並獲取最愛的鈴聲，轉至 Application list 並點按 <b>Marketplace &gt; Music</b> 。瀏覽並選取您最愛的鈴聲。 請注意，Marketplace 可能無法在您所在的國家或地區使用。
手機功能	支援的語言	可否變更語言？	Windows Phone 7 支援 6 種不同的語言（德文、英文（英國/美國）、西班牙文、法文、意大利文）。若要變更設定，轉至並點按 <b>Settings &gt; region &amp; language &gt; Display language</b> 。
手機功能	聲音設定	如何設定系統聲音和鈴聲？	您可以使用音量鍵調節音樂、鈴聲和系統聲音。 • 轉至 <b>Settings &gt; ringtone &amp; sounds</b>
手機功能	時間設定	如何設定手機時間？	Applications list > <b>Settings &gt; date &amp; time &gt; Set automatically</b> slider to Off > Set the Time
手機功能	Youtube	可否從 Youtube 中檢視錄像片段？	使用 Marketplace YouTube 播放器即可檢視。 請注意，Marketplace YouTube 播放器可能無法在您所在的國家或地區使用。
手機功能	電池壽命	這款手機的通話時間有多長？	通話：360 分鐘（以 3G 手機為準）

類別	子類別	問題	解答
手機功能	相機	是否有任何選項用於在拍照之後立即進行儲存或清除?	照片會自動儲存。 透過翻閱至右側瀏覽至圖片檢視器。 點按並按住剛剛拍攝的照片。檢視可用的選項。(例如, 新增至最愛、刪除等)
手機功能	電郵	可否設定電子郵件節選?	使用「Search」按鈕可以設定電子郵件節選。
手機功能	電郵	可否在接收電子郵件時設定提示音?	[步驟] <b>Settings &gt; ringtones &amp; sounds &gt; New email &gt; Choose an item</b>
手機功能	瀏覽器設定	如何變更私隱和其他瀏覽器設定?	轉至 <b>Settings &gt; Applications &gt; Internet Explorer</b> 以刪除 Cookies。 此外, 您可以使用 <b>Settings &gt; system &gt; location</b> 關閉位置分享。
手機功能	鄰近感應器	如何在手機通話期間保持 LCD 屏幕亮起?	手機上的鄰近感應器專門用於在通話中預設關閉 LCD。
手機功能	智能咭鎖	可否使用其他供應商提供的智能咭?	請聯絡手機銷售店瞭解是否已啟動智能咭鎖。 如果沒有啟動智能咭鎖, 則可能因手機或網絡設定而無法使用特定功能或服務。

類別	子類別	問題	解答
手機功能	智能咭鎖	我的 Windows Phone 已啟動智能咭鎖，LG 可否在此情況下為我提供幫助？	智能咭鎖由銷售 Windows Phone 的網絡供應商決定。請聯絡網絡供應商或 Windows Phone 銷售店。
手機功能		是否支援 Adobe Flash (類似電腦瀏覽器)？	不支援。
手機功能		是否支援串流服務。	部份串流協定不受支援 (例如, RTSP)。是否支援 HTTP-Progressive 和 IIS SmoothStreaming 由您正在瀏覽的網站及使用的應用程式決定。
手機規格	頻帶	GSM 技術為四頻、三頻或雙頻? (例如 1900Mhz、900、1800、850)	支援四頻。
手機規格	手機規格	可否使用外部 GPS 裝置?	否。Windows Phone 7 裝置中包含一個內置 GPS 裝置。
Wi-Fi	Wi-Fi 簡單查詢	如何使用 Wi-Fi (無線網絡)?	您可以在存取點或無線熱點可用的任何地點, 連接至互聯網或其他網絡裝置。
Wi-Fi	Wi-Fi 簡單查詢	Wi-Fi 是否由網絡商提供?	不是。用戶可以透過 AP (接入點) 存取互聯網。

類別	子類別	問題	解答
恢復的方法	密碼丟失	忘記密碼時該怎麼辦？ 如果忘記，如何取得密碼？	請聯絡您的服務供應商。
恢復的方法	Factory Rest Web 更新	我想重設手機以改善效能，該怎麼辦？ 我想更新手機上執行的軟件，該怎麼辦？	<p>1. 出廠設定。 轉至並點按 Applications list &gt; <b>Settings</b> &gt; <b>about</b> &gt; <b>reset your phone</b>。 重設手機將清除所有私人內容（包括您購買和下載的應用程式）並恢復出廠設定。</p> <p>2. 請嘗試透過 Web 更新最新的軟件版本。Windows Phone Update 服務自動向手機提示 Windows Phone Updates，當您將手機連接至個人電腦時，將使用電腦上執行的 Zune 軟件來安裝更新。 如果您尚未安裝 Zune 軟件，請轉至 <a href="http://www.windowsphone.com">www.windowsphone.com</a> 進行安裝。</p> <p><b>警告！</b> 執行「出廠設定」時將清除所有數據。執行出廠設定和 Web 更新之前，客戶必須保留備份。</p>

類別	子類別	問題	解答
恢復的方法	出廠設定	當手機績效大不如以前時，該怎麼做？	<p>1. 出廠設定。 轉至並點按 Applications list &gt; <b>Settings</b> &gt; <b>about</b> &gt; <b>reset your phone</b>。</p> <p>重設手機將清除所有私人內容（包括您購買和下載的應用程式）並恢復出廠設定。</p> <p>2. 嘗試透過 Web 更新最新的軟件版本。Windows Phone Update 服務自動向手機提示 Windows Phone Updates，當您將手機連接至個人電腦時，將使用電腦上執行的 Zune 軟件來安裝更新。</p> <p>如果您尚未安裝 Zune 軟件，請轉至 <a href="http://www.windowsphone.com">www.windowsphone.com</a> 進行安裝。</p> <p><b>*注意</b> 一旦執行出廠設定和 Web 更新，將清除所有用戶數據。因此，客戶應事先執行備份。</p>



# LG-E900 用户指南 — 简体中文




- **该指南可帮助您学习使用手机。如果需要更多信息，请访问 [www.lg.com](http://www.lg.com)。**
- 本手册中的部分内容可能不适用于您的手机，具体视您手机的软件或服务提供商而定。
- 由于这款手机的键盘为触摸屏键盘，不推荐视障人士使用。
- 版权所有 ©2010 LG Electronics, Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。



恭喜您购买此款功能先进、外观小巧的 LG-E900 手机，它采用了最新的数字移动通信技术。

## 版权所有和商标

此设备中包含的所有技术和产品的所有权是其各自所有者的财产：

- 本产品包含  Windows Phone MS (Microsoft Corporation 的分支机构) 许可的软件。Microsoft 和具有 Microsoft 名称的软件是 Microsoft Corporation 的注册商标。使用该产品前，请参阅《Windows Phone 7 软件的 Microsoft 软件许可条款协议》，有关权利和限制的信息，请参阅该指南背面。
- Bluetooth<sup>(R)</sup> 是 Bluetooth SIG, Inc 的注册商标。
- © 2010 Microsoft Corporation。保留所有权利。Microsoft、Internet Explorer(R) Mobile、Windows(R) Phone、Windows(R) Phone Marketplace、Xbox LIVE(R)、Zune(R)、<按字母顺序列出材料中提及的 Windows 和所有其他商标名称和徽标> 是 Microsoft 集团的商标。

# 目录

关于安全有效使用手机的准则	6	通信	33
<b>组装</b>	11	手机	33
开始了解您的手机	11	信息	36
打开视图	12	电子邮件	37
安装 USIM 和电池	13	Facebook	41
<b>浏览您的 Windows 手机</b>	16	<b>娱乐</b>	42
使用触摸屏	16	相机	42
开始了解“开始”屏幕	19	图片	47
了解和浏览屏幕	19	Music & Videos	51
自定义“开始”屏幕	23	游戏	56
访问应用程序	24	FM 收音机	57
开始了解应用程序栏	24	<b>实用工具</b>	59
自定义 Windows Phone	27	设置闹钟	59
输入文本	29	使用计算器	59
从 Marketplace 下载应用程序	30	将事件添加到日历中	59
<b>使用入门</b>	31	Office	60
使用 Windows Live ID 登录	31		
导入联系人	32		
保持同步	32		

<b>Windows 应用程序</b> .....	<b>61</b>
地图 .....	61
Marketplace .....	62
Hotmail .....	62
<b>网络</b> .....	<b>63</b>
浏览器 .....	63
<b>连接</b> .....	<b>64</b>
蓝牙 .....	64
Wi-Fi .....	65
Play To .....	67
<b>设置</b> .....	<b>68</b>
系统 .....	68
应用程序 .....	70
<b>软件更新</b> .....	<b>73</b>
手机软件更新 .....	73
<b>配件</b> .....	<b>74</b>
<b>FAQ (常见问题)</b> .....	<b>76</b>

## 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

### 暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR)信息。此款 LG-E900 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频段中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2W/kg。

- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.935 W/kg (10 克)，戴在身体上时，其值为 1.47 W/kg (10 克)。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/Kg，平均值超过 1 克薄纸。

### 产品保养和维护

#### 警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡车车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。

- 不要将手机暴露在液体或潮湿环境中。
- 不要将手机和配件置于诸如水池、温室等高湿或高温环境中，否则，可能导致手机损坏、保修失效。

### **有效的手机操作 电子和医疗设备**

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。请咨询您的医生以确定手机的操作是否会干扰医疗设备的操作。
- 手机可能会干扰有些助听器。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

### **行车安全**

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果行驶条件需要，请在拨打或

接听电话之前将车辆驶离道路并停车。

- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 如果您的汽车配有安全气囊，请确保其未被手机或附件阻塞。在气囊展开时，如果受阻，可能无法正常展开或造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

### **防止损伤您的听力**

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

### **耳机声音和压力过度可能导致听觉受损。**

#### **玻璃部分**

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务中心处更换玻璃。

#### **爆破区域**

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

#### **易爆环境**

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

## 在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。

- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要置于诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。

- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要像处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

## 组装

### 开始了解您的手机

耳机插孔

电源/锁定键

- 长按（三秒）可以开/关机。
- 短按关闭屏幕。

听筒

近程传感器

ALS（环境光传感器）

搜索按钮

打开快速搜索


开始按钮

返回到“开始”屏幕；启动语音识别功能（按住）。

后退按钮

返回到上一屏幕。

话筒



**警告：**在手机上放置重物或坐在上面会损坏 LCD 和触摸屏功能。请勿在 LCD 的近程传感器上覆盖保护膜，这可导致传感器无法正常工作。

音量键

- 屏幕处于待机模式时：系统提示音和铃音音量。
- 在通话过程中：耳机音量。
- 播放曲目时：控制曲目音量。




充电器，数据线（USB 数据线端口）

提示！连接 USB 数据线之前，请等到手机开机并注册网络。

相机键

- 按相机键可直接转到相机预览屏幕。


## 打开视图

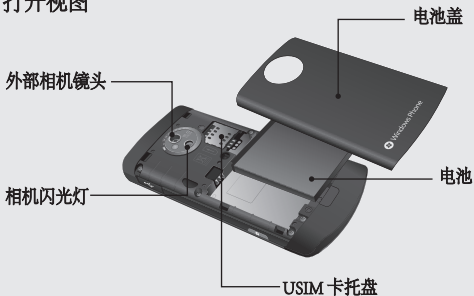

## 安装 USIM 和电池

### 1 卸下电池盖。

如下图所示按电池盖释放按钮 (1)。将电池盖从手机上取下 (2)。

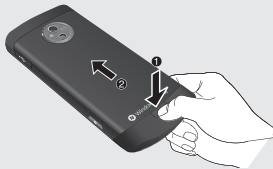

### 2 取出电池


使用底部的突出块，将电池从电池盒中取出。



**警告：**手机开机时，不要取出电池，这可能会损坏手机。

### 3 安装 USIM 卡

将 USIM 卡放入 USIM 卡弹夹中。确保卡的金色接触区域面朝手机。将 USIM 卡弹夹推回原位。

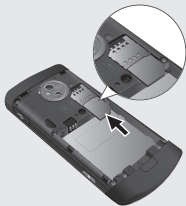

#### 4 安装电池

首先，将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底部，直至电池卡入到位。



如果电池已完全放电，则无法开机。使用 TA 充电器时，大约需要四到五分钟才能达到足以启动的充电状态。使用 USB 连接时，充电时间大约长 14-15 分钟。


如果电池电量极低，将会显示电量超低图，通知您延长充电时间。


**备注：**第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。


#### 5 充电


打开 LG-E900 侧面的充电器端口盖。将充电器连接器插入端口并将充电器插入电源插座。




 **警告：**手机未装入电池时，请不要连接充电器。充电前，必须检查是否已插入电池。

 **警告：**不要在为手机充电过程中取出电池或 USIM 卡。

 **警告：**替换电池类型不当时可能会有爆炸危险。请按制造商的说明处置用过的电池。

 **警告：**发生雷电时，请从电源和手机中拔掉充电器，以免遭电击或发生火灾。

 **警告：**请确保没有尖锐物体触电池触点。否则，可能会导致火灾。

## 浏览您的 Windows 手机 使用触摸屏

### 触摸屏提示

手机的触摸屏使您可以轻松选择项目或执行功能。了解使用触摸屏的基本操作。

#### 备注：

- 为避免刮伤触摸屏，请不要使用尖锐物体。
- 请不要让触摸屏接触其他电子设备。静电释放可导致触摸屏无法正常工作。
- 请不要让触摸屏接触水。在潮湿环境下或浸水时，触摸屏可能无法正常工作。
- 为优化触摸屏的使用，请在使用手机前揭掉屏幕保护膜。
- 触摸屏上具有一层可检测到人身释放的小电荷的感应层。
- 为取得最佳性能，请使用指尖轻触触摸屏。触摸屏对手写笔或钢笔等尖锐物体的点触无响应。

#### 备注：

- 如果在指定时间内未使用触摸屏，手机就会将其关闭。要打开屏幕，请按 [电源] 按钮。
- 您还可以调节背光时间或更换墙纸。在“开始”屏幕上，转到应用程序列表并选择 **Settings > lock & wallpaper**。

## 触摸屏上的通用手势

对于多数应用程序，可使用普通手势来浏览和发出命令。要键入文本，请使用屏上键盘或硬件键盘。

以下手势用于浏览 Windows Phone 7:

### 轻触

轻触是单次向下快速触摸屏幕的操作。轻触用于执行命令（类似于按 PC 上的 Enter 键）。轻触还可停止屏幕上的任何移动。



### 轻触两次

轻触两次是两次向下快速触摸同一屏幕位置的操作。轻触两次可使手机相应地放大或缩小。



### 点触并按住

要点触并按住，手指向下按并在点触位置保持几秒时间。



### 滚动

滚动用于上下移动对象。

按下手指并按所需方向移动。要结束滚动，抬起手指即可。内容将跟随移动。



## 轻弹

轻弹用于向侧边移动对象。

按下手指并按所需方向移动。要结束此手势，抬起手指即可。内容将跟随移动。



## 收放

收与放相互对立。这些手势通常用于放大和缩小地图。

“收”手势的原理是两个手指向下按屏幕并往一起收。这可放大内容，同时可使图像集中到两个指尖之间。对于“放”手势，是指两个手指背向分离以缩小图像。




## 开始了解“开始”屏幕

您可以通过此屏幕进入菜单选项、拨打电话、查看手机状态等。



## 了解和浏览屏幕

“开始”屏幕是您打开手机后体验 Windows Phone 7 的起点。“开始”屏幕显示应用程序图标，即您已嵌入并置于特殊位置以便快速启动的应用程序。无论正在运行哪个应用程序，只要按手机上的 [开始] 按钮 ，始终都可以返回到“开始”屏幕。

- 1 只需向左、向、上或下滑动手指即可查看这些应用程序。

您也可以自定义“开始”屏幕上的图标，即常用菜单和应用程序的快捷方式。

**备注：**若在手机解锁后的待机显示屏幕上向上轻滑手指，可以看到显示应用程序图标的“开始”屏幕。

## “开始”屏幕上的图标

图标是与应用程序或其内容关联的一种易于识别的图形快捷方式。您可将图标置于手机“开始”屏幕上的任何位置。

使用图标通知功能的图标可以更新图标图形或图标文本，或者增加一个计数器，使您可以创建“一目了然”的个性化“开始”屏幕。示例包括显示是否让您进入游戏、天气或者收到的电子邮件消息数量。

“开始”屏幕始终以肖像视图显示。

---

### 图标 描述

---



拨打电话，并可快速访问最近的来电者、收藏夹和所有联系人。使用数字键盘手动拨号。只需轻触语音邮件图标即可按您想要的任何顺序收听所需的语音信息。



点触此图标可访问“People”数据中心 — 电子邮件、信息、联系人和其他信息的集成通信应用程序。



发送和接收文本信息（短信）。以即时聊天模式保存对话，以便您可查看已发送和接收的历史信息。通过彩信发送拍摄的照片。



您的 Windows Phone 可与 Microsoft Exchange、Microsoft Outlook Web App 以及很多主流电子邮件系统配合使用，包括 Hotmail、Yahoo! Mail、Google 等等。将附加的相片和图形保存到您的“Saved Pictures”之中。



点触“Play To”可从手机向数字生活网络联盟 (DLNA) 兼容播放设备流传输视频、音乐和图片。



使用“ScanSearch”，您可搜索街道、城市或国家/地区的产品和本地资讯。ScanSearch 使您可以查看本地商业信息，包括位置和联系信息。

---

---

## 图标 描述



在您的新 Windows Phone 上输入事件。订阅日历。设置提示以提醒您相关事件、约会和时间表。此外，还可将数据同步到您的 Windows Live，反之亦然。



点触可访问 Internet Explorer。



访问 Xbox LIVE 以进入游戏或邀请好友与您对战。向手机下载新游戏。



查看您使用新 Windows Phone 拍摄、通过电子邮件或彩信接收，或者从计算机的 Zune 软件（仅限 Windows 操作系统）同步的相片和视频。以肖像或风景格式进行查看。放大相片以便近距离观看。发送附加相片的电子邮件或彩信。



通过连接到 PC 以同步您的文档，播放设备中存储的音乐、视频和播客。收听 FM 收音机。转到 Marketplace。



使用 Wi-Fi 或蜂窝数据网络连接搜索 Application Store 中您可购买和下载的 Windows Phone 应用程序和音乐。阅读评论或编写自己对收藏应用程序的评论。下载应用程序并在“开始”屏幕中安装。

**备注：**位置、名称或图标设计的排列视您的设置状态、区域、服务提供商、计划和 Windows Phone 软件版本而定。

应用程序的功能性和可用性取决于您购买和使用 Windows Phone 所在的国家 and 地区。有关详细信息，请联系您的服务提供商。

## 查看状态栏

状态栏使用不同的按钮显示手机信息，例如信号强度、新信息、电池使用寿命以及活动的蓝牙和数据连接。

下表说明了您可能在状态栏中看到的不同图标的涵义。



[状态栏]

图标	描述
	信号强度
	HSDPA
	3G
	2G-GPRS
	2G-EDGE
	呼叫转移
	正在漫游
	无线网络信号强度

图标	描述
	蓝牙状态
	铃声模式
	输入状态
	电池电量级别
	系统时钟


## 自定义“开始”屏幕



您可以自定义“开始”屏幕上图标 的布局。

您可在此屏幕上嵌入各类对象，包括应用程序、网站、地图位置乃至联系人。如果在“开始”屏幕上嵌入联系人，您可获得该联系人的所有主动更新——通过图标一目了然。




要将多数对象嵌入屏幕，点触并按住对象直到出现菜单，或者打开应用程序列表，然后轻触 **pin**。

- 如果您想删除“开始”屏幕上某处的图标，点触并按住该图标，然后将其移至所需位置。
- 要删除某个图标，点触并按住该图标，然后点触“unpin” 。

## 浏览和设置应用程序

### 访问应用程序

访问 Windows Phone 的应用程序：

- 1 在“开始”屏幕上，轻触箭头  访问应用程序列表。
- 2 向下滚动到所需图标（如果尚未显示）。
- 3 选择应用程序。
- 4 按**后退**按钮  返回到上一屏幕；按**开始**  按钮返回到“开始”屏幕。



#### 备注：


- 轻触并按住应用程序列表中的应用程序图标，您可添加应用程序的快捷方式。您可将应用程序移至“开始”屏幕上的所需位置。
- Windows Phone 内置一个可检测其方向的移动传感器。如果您在使用某些功能时旋转手机，界面将自动切换为风景视图。

## 开始了解应用程序栏

要设置应用程序，您可以使用下面的应用程序栏以及屏幕底部的应用程序栏菜单。

例如，设置闹钟

- 1 在“开始”屏幕上，轻触箭头  访问应用程序列表。
- 2 轻触 **Alarms** 。
- 3 轻触应用程序栏以查看应用程序菜单或显示带有文本提示的图标按钮。
- 4 选择您要设置的图标按钮或菜单。

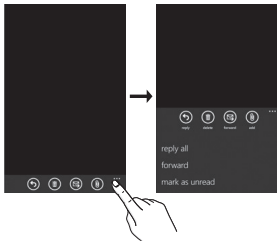

## 应用程序栏

应用程序栏提供一个视图，如果您轻触可视的圆点行或向上轻弹应用程序栏，该视图会显示带有文本提示的图标按钮以及可选的上下文菜单。通过轻触菜单区域外围或圆点、使用“后退”按钮或选择菜单项目或应用程序栏图标，可再次隐藏此视图。

## 应用程序栏菜单

应用程序栏菜单是从应用程序栏访问特定任务的一种可选方式。通过轻触应用程序栏中的可视圆点行或向上轻弹应用程序栏，可以访问应用程序栏菜单。通过轻触菜单区域外围或圆点、使用“后退”按钮或选择菜单项目或应用程序栏图标，可再次隐藏此视图。

### 备注：

- 最多可显示 5 个菜单项目。
- 如果未显示任何菜单项目，则只显示图标文本提示。
- 在执行操作之前，应用程序栏菜单将一直保留在屏幕上。

## 应用程序栏图标

下面是一些常用的应用程序设置图标。



新建



加



减



选择



关闭



取消



同步



刷新



问号



叹号



后退



前进



搜索



删除



保存



文件夹



视频



相机



电子邮件



设置



收藏夹



添加到收藏夹



下载



上传



共享



编辑



溢出圆点



播放



暂停



上一曲/快退




下一曲/快进

## 自定义 Windows Phone


根据自己的喜好自定义手机，以发挥其更大潜能。

### 设置当前时间和日期

- 1 在“开始”屏幕上，轻触箭头  以转到应用程序列表。
- 2 轻触 **Settings > System > date & time**。
- 3 轻弹 **Set automatically** 栏并更改日期和时间及其他选项。

### 打开或关闭铃声和声音

您可调节铃声和声音，如铃声、新文本信息、新语音邮件、新邮件等等。

- 1 在“开始”屏幕上，轻触箭头  以转到应用程序列表。
- 2 轻触 **Settings > System > ringtones & sounds**。


### 切换到静音模式

通过向左或向右轻弹 **Ringer** 状态栏，您可以打开或关闭静音模式。

### 调整铃声音量

向上或向下按“音量”键可调整铃声音量。

### 选择“开始”屏幕墙纸

- 1 在“开始”屏幕上，轻触箭头  以转到应用程序列表。
- 2 轻触 **Settings > System > lock & wallpaper > change wallpaper**。
- 3 选择图像并保存。  
您还可以更改屏幕超时时间和密码。


#### 备注：

- LG 对手机上提供的默认图像或墙纸的使用不承担任何责任。

## 调整显示屏的亮度

通过向左或向右滚动屏幕上的指示器，您可以快速调整显示亮度。


在设置菜单中调整亮度：

- 1 在“开始”屏幕上，轻触箭头  以转到应用程序列表。
- 2 轻触 **Settings > System > brightness**。
- 3 将 **Automatically adjust** 滑块拖到 **Off** 位置，并轻触所需的亮度级别。

**备注：**显示屏的亮度级别将影响手机消耗电池电量的速度。

## 锁定 SIM 卡

您可以通过激活 SIM 卡随附的 PIN 来锁定手机。

- 1 在“开始”屏幕上，轻触箭头  以转到应用程序列表。
- 2 轻触 **Settings** 并拖动以选择 **application > phone**。
- 3 将 **SIM security** 滑块拖到 **On** 位置。
- 4 输入 PIN 并选择 **enter**。

**备注：**

- 一旦启用 PIN 码锁，就必须在每次打开手机时输入 PIN。
- 如果多次输入错误的 PIN，SIM 卡将会锁定。在这种情况下，您必须输入 PIN 解锁密码 (PUK)，以解除 SIM 卡锁定。

## 输入文本

您可以通过选择虚拟键盘上的字符来输入文本。

您不能使用某些语言输入文本。要输入文本，请查看并从受支持的编写语言中进行选择。(Settings > System > keyboard)



## 使用 Phonepad 输入文本

- 1 轻触输入面板图标。
- 2 轻触字符以输入文本。

## 备注:

- 该手机特有协助打字功能，例如在键盘上方显示的文本建议、自动更正以及特定上下文键盘布局等。(Settings > System > keyboard)
- Windows Phone 7 仅支持全字母布局，例如 QWERTY、AZERTY 和 QWERTZ。
- Shift 键允许您键入大写字母。共有三种 Shift 模式：On、Off 和 Caps Lock（轻触并按住）。
- 图释键可用于显示图释选择器。
- 轻触并按住屏幕上的 a、i、e、u、o 后，可显示重音符选择器。


## 从 Marketplace 下载应用程序

Marketplace 可用于轻松查找和获取音乐与应用程序（包括游戏），从而增强 Windows Phone 的性能。

网站上已添加应用程序、游戏和音乐等单类别页面。

- 在“开始”屏幕上，轻触  以转到应用程序列表，然后轻触 **Marketplace** 。或者，轻触“开始”屏幕上的 **Marketplace** 图标。
- 按 **Search** 按钮搜索应用程序，并再次轻触搜索字符串以进行编辑和搜索。
- 键入所需字符串并轻触，结果将在下面（相同页面上）显示。
- 轻触 **list item** 以转到正确的 Marketplace 页面。

- 浏览或搜索应用程序时，轻触某个应用程序或游戏，即可显示应用程序的详细信息页面。
- 选择要购买的项目并轻触 **download**。

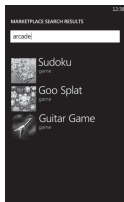

### 备注：

- Marketplace 上未提供图片、播客和视频。
- 此功能可能不可用，具体取决于您所在的地区。

## 使用入门

首次打开手机时，它将会指导您进行基本设置。请根据屏幕上的说明激活手机。

下面是建议的步骤。

**SELECT LANGUAGE > WINDOWS PHONE SETTINGS > TIME ZONE，并使用 Windows Live ID 登录**

### 使用 Windows Live ID 登录



要获取应用程序、进入 Xbox LIVE 游戏、使用 Zune Pass、自动向网站同步 Windows Live 信息等，则需要使用 Windows LIVE ID 登录。

Windows Live ID 是用于登录到 Xbox LIVE®、Zune®、Hotmail® 等服务的电子邮件地址。如果忘记了使用的电子邮件地址：

对于 Xbox LIVE：在您的 Xbox 360® 控制台上，使用您的 Gamertag 登录，然后，按控件（位于中央，看起来像 Xbox 徽标）上的“Guide”按钮。在 Settings 中，单击 **Account Management > Windows Live ID**。

对于 Zune：登录到 PC 上的 Zune 软件。右键单击情景模式图片并单击 Switch user 以查看 Windows Live ID。要重

置密码或获得提醒，请转到 <http://account.live.com/ResetPassword.aspx>。

如果尚未使用 Windows Live ID 登录，您则不能首先执行某些手机操作（例如获取应用程序或进入 Xbox LIVE 游戏）。

## 导入联系人



设置电子邮件或 Facebook 帐户时，您的联系人将自动导入到您的“People”数据中心的。添加 Facebook 时，您的朋友源会显示在“People”数据中心的，其照片将显示在您的“Pictures”数据中心的，而您的个人源将显示在“Me”图标中。

设置 Facebook (或任何类型电子邮件) 帐户：

- 1 轻触“开始”屏幕上的箭头以转到应用程序列表。
- 2 点触 Settings > email & accounts。

从旧手机中获取联系人同样非常轻松。将旧的 SIM 卡放入新手机，然后转到 Settings。轻弹 applications，轻触 people，然后轻触 import SIM contacts。

## 保持同步








要从电脑向手机同步音乐、视频、图片和更新（反之亦然），您需要 Zune 软件。

- 1 转到 windowsphone.com 安装 Zune 软件。
- 2 使用 USB 数据线，将手机连接到电脑。
- 3 打开 Zune 软件，然后按照说明将音乐、视频、图片等同步到集合中。
- 4 单击 collection，然后将要同步的所有内容拖动到左下方的手机图标中。

# 通信 手机


## 拨打电话

- 1 点触 .
- 2 轻触 .
- 3 在键盘上输入号码。  
要删除一个数字，请按 .
- 4 点触  **call** 以拨打电话。
- 5 要结束通话，请点触  **end call**。

您还可以使用“开始”屏幕上的手机图标拨打电话。您可以拨号呼叫。

**提示!** 要输入“+”来拨打国际电话，请点触并按住 [0+]。

## 呼叫联系人

- 1 点触 People 以打开电话本。
- 2 在联系人列表间滚动，或点触  输入您要呼叫的联系人的首字母。
- 3 在列表中，点触您要呼叫的联系人，如果该联系人有多个号码，则选择您要使用的号码。

## 接听和拒绝电话

当手机响铃时，请轻触接听键以接听电话。

轻触 **ignore** 选项卡可拒绝来电。

**提示!** 手机响铃时，如果要切换为静音铃声模式，请按左侧的音量调低按钮。

## 飞行模式 (禁用无线通信)



某些位置可能需要通过将手机置于飞行模式来关闭手机的无线连接。



轻触 **SETTINGS > flight mode**。此功能可同时切换手机的移动、Wi-Fi 和蓝牙通信。

## 调节音量

要在通话期间调节音量，请使用手机左侧的音量调高和调低按钮。


## 拨打第二个电话

- 1 在第一个通话过程中，点触 ，然后轻触 .

- 2 呼叫号码，或使用  或  搜索联系人。
- 3 点触通话图标以连接通话。
- 4 两个通话都会在通话屏幕上显示。第一个通话将会锁定并暂停。
- 5 点触屏幕顶部的 PRESS TO SWAP 以在通话之间切换。
- 6 要结束当前通话，请点触 **end call**。如果无当前通话，则将结束保持的通话。

**备注：**您需要对每通电话付费。

## 查看通话记录

在“开始”屏幕上，按  以查看通话记录。


查看所有已拨电话、已接来电和未接语音电话的完整列表。

**提示！** 点触任意单个通话记录条目可查看通话日期和时间。

**提示！** 轻触应用程序栏选项卡，然后点触 **delete all** 可删除所有记录项。

## 通话设置

您可以配置通话设置（例如呼叫转移）以及服务提供商提供的其他特殊功能。

- 1 在“开始”屏幕上，点触 。
- 2 轻触“通话记录”屏幕底部的应用程序栏，并打开 **Call Settings** 菜单。
- 3 滚动并轻触通话设置，然后选择要调整的选项。

**Voicemail number** — 编辑语音邮件号码

**Show my caller ID to** — 选择是否要在拨出电话时显示您的号码。


**international assist** — 帮助自动更正拨打国际电话或在海外拨打电话时的一些常见错误。

## 搜索联系人

有两种方式可搜索联系人：


### 在“开始”屏幕上

- 1 在“开始”屏幕上，点触 **People** 数据中心图标，以打开电话本（“People”数据中心）。


- 2 点触 ，使用键盘输入联系人姓名。

**提示!** 要搜索姓名的第一个字母，请点触屏幕顶部的“电话本”选项卡，然后选择“群组”。此时将显示所有群组的列表。

### 在应用程序菜单中

- 1 在“开始”屏幕上，点触  以转到应用程序菜单。
- 2 点触联系人应用程序并选择所需情景模式。

### 添加新联系人

- 1 在“开始”屏幕上，点触 People 应用程序。
- 2 如果要向新联系人添加图片，请点触 。  
您可以使用保存的图片或拍摄一张新图片。
- 3 点触所需项目并轻触文本字段以打开触摸键盘。
- 4 点触 **Done** 图标以保存当前添加的信息。

- 5 点触联系人信息类别，并输入有关联系人的详细信息。
- 6 点触保存图标以保存联系人


#### 提示!

- 轻触应用程序栏选项卡，然后点触“delete”以删除刚刚保存的联系人。
- 如果长按联系人列表中的联系人，则将显示快捷菜单，您可从中选择通过 pin to start、edit 和 delete。

### 常用联系人





您可以将经常呼叫的联系人归类为常用联系人。


#### 向常用联系人添加联系人（嵌入到“开始”屏幕）

- 1 在“开始”屏幕上，点触  以打开联系人个人资料。
- 2 点触联系人以查看详细信息。
- 3 点触应用程序菜单上的 Pin to start，常用联系人即可嵌入到“开始”屏幕。


## 信息

### 发送文本信息



- 1 在“开始”屏幕上，轻触 **Messaging**  > **New** .
- 2 执行以下操作之一：
  - 首先在“To:”框中输入联系人姓名，然后轻触列表中匹配的联系人姓名。重复添加更多收件人，其姓名将会自动添加在 To: 框中。
  - 在“To:”框中输入联系人的手机号码或其电子邮件地址。要输入其他收件人，请在每个收件人后面轻触 Enter。
  - 轻触 **Add** ，轻弹联系人，然后轻触它。重复添加更多收件人，其姓名将会自动添加在“To:”框中。
- 3 轻触信息框，键入信息，然后轻触 **Send** .

**备注：**如果要在输入信息时附加数据，请点触屏幕底部的  并选择所需文件。请务必记住您仅能附加图片。

### 回复文本信息

- 1 在“开始”屏幕上，轻触 **Messaging**，然后轻触包含已接收的文本信息的对话。
- 2 轻触信息框，键入回复的内容，然后轻触 **Send** .

### 转发文本信息

- 1 在“开始”屏幕上，轻触 **Messaging** ，然后轻触包含要转发的文本信息的对话。
- 2 轻触并按住信息，然后轻触 **Forward**。
- 3 在“To:”框中键入联系人姓名、手机号码或电子邮件地址。
- 4 轻触信息框，键入要发送的信息，然后轻触 **Send** .


#### 备注：

- 您的移动运营商可能会向您收取额外的文本信息费，此服务必须适用于您当前的手机计划。
- 文本信息也称为 SMS（短信息服务）信息，最大长度为 160 个字符。
- 如果文本信息长度大于 160 个字符，

它将通过额外的一条或多条信息进行发送。

- 有时移动运营商会发送您无法回复或转发的文本信息，且信息框提示为只读信息。

## 保存文本信息中的图片

- 1 在“开始”屏幕上，轻触 **Messaging** 。
- 2 轻触包含图片的对话，然后轻触该图片。
- 3 轻触并按住打开的图片，然后轻触 **Save to phone**。  
此图片保存在手机的“已存图片”相册中。

### 备注：

- 您的移动运营商可能会向您收取额外的文本信息费，此服务必须适用于您当前的手机计划。
- 包含附加图片的文本信息也称为 MMS（多媒体信息服务）信息。
- 您接收的某些图片可能受数字版权管理的保护，且无法保存到您的手机。但是，这些图片仍然可以设置为手机墙纸。

## 电子邮件

### 设置电子邮件帐户

无论是个人电子邮件还是与工作相关的电子邮件，您都可以通过设置不同类型的电子邮件帐户来将其用于 Windows Phone。根据您的手机上设置的电子邮件帐户，系统也将检索帐户的其他项目（例如联系人、日历等）。

**备注：**要在手机上设置电子邮件帐户，则必须具有工作蜂窝数据或 Wi-Fi 连接。有关连接 Wi-Fi 网络的详细信息，请参阅“连接 Wi-Fi 网络”。

### 设置 Windows Live 帐户

首次设置手机时，需要使用 Windows Live ID 登录。如果未在那时使用 Windows Live ID 登录，或者如果您具有多个 Windows Live ID，您则可以使用以下步骤设置主 Windows Live ID 或其他 Windows Live ID。

在“开始”屏幕上，向左轻弹应用程序列表，轻触  **Settings**，然后轻触 **Email & accounts**。

- 1 轻触 **Add an account > Windows Live** 并按屏幕上的说明执行操作。

**备注：**

- 不能从手机中删除您设置的第一个 Windows Live 帐户。
- 如果在手机上设置了其他 Windows Live ID，则这些其他帐户中的图片将不会同步到手机。
- 您可以在此处创建 Hotmail 帐户并从 Hotmail 到收件箱检索新电子邮件信息。访问此 Hotmail 应用程序时，新电子邮件的数目将显示在电子邮件图标中。

## 设置 Microsoft Exchange 电子邮件帐户

您可以使用以下步骤设置 Microsoft Exchange Server 上的电子邮件帐户。

(例如，正在使用的电子邮件帐户可能位于 Microsoft Exchange Server 上) 您还可以使用以下过程中的步骤设置使用 Exchange ActiveSync 的其他电子邮件帐户，包括 Microsoft Exchange 上的电子邮件帐户或 Outlook Web App 帐户。

- 1 在“开始”屏幕上，向左轻弹应用程序列表，轻触  **Settings**，然后轻触 **Email & accounts**。

- 2 轻触 **Add an account > Outlook**。

## 设置 Internet 服务提供商 (ISP) 的电子邮件帐户

设置电子邮件帐户时，手机将尝试自动查找电子邮件帐户的正确设置。电子邮件帐户可能是 Internet 服务提供商 (ISP) 提供的，或者它可能是其他提供商提供的其他 IMAP 或 POP 电子邮件帐户。

- 1 在“开始”屏幕上，向左轻弹应用程序列表，轻触  **Settings**，然后轻触 **Email & accounts**。

- 2 轻触 **Add an account > Other account**。



下面是无法自动找到正确的电子邮件帐户设置时您需要预先知道的设置列表。一般情况下，您可以在提供商的网站上找到此信息。

- 电子邮件帐户类型 (POP 或 IMAP)


- 接收邮件服务器地址
- 发出 (SMTP) 邮件服务器地址
- 服务器验证设置
- SSL 接收邮件要求
- SSL 发出邮件要求

## 发送电子邮件信息

在手机上设置电子邮件帐户后，您可以使用此帐户发送或接收电子邮件。

- 1 在“开始”屏幕上，轻触要访问的电子邮件帐户（例如 Outlook、Google 或 Windows Live）。
- 2 轻触 New 。
- 3 执行以下操作之一：
  - 在“To:”文本框中，轻触 Add ，然后选择联系人。
  - 轻触“To:”文本框，然后开始键入电子邮件地址。手机将根据键入的内容提供建议。
  - 要删除收件人，请轻触其姓名或电子邮件地址，然后轻触 Remove。

4 轻触“Subject:”文本框并键入主题。

5 在“Subject:”文本框下轻触，键入电子邮件，然后轻触 Send 。

**备注：**您可以在发送图片前通过轻触  来附加该图片。

## 查看电子邮件信息

- 1 在“开始”屏幕上，轻触要访问的电子邮件帐户（例如 Outlook、Google 或 Windows Live）。
- 2 选择电子邮件信息。


### 在信息视图中，使用以下选项：

- 要回复或转发电子邮件，请轻触 Respond ，并执行以下操作之一：
  - 要删除一封电子邮件，请轻触该电子邮件以将其打开，然后轻触 Delete 。
  - 要删除多封电子邮件，请轻触要删除的电子邮件的最左侧。此时将显示复选框。轻触要删除的每个电子邮件的复选框，然后轻触 Delete。

## 检索电子邮件

您可以自动或手动查看帐户的新电子邮件。

### 手动查看：


- 1 轻触“开始”屏幕上的  以转到应用程序列表，然后轻触电子邮件应用程序。  
或者，您还可以轻触“开始”屏幕上要使用帐户的电子邮件图标，例如 Hotmail、gmail 等。
- 2 选择同步后，Windows Phone 将连接到您的电子邮件帐户并检索新信息。

### 自动查看：

- 1 Windows 手机根据帐户设置自动检索电子邮件。
- 2 您可以通过更改“download email from”设置来更改检索（同步）周期。（有关详细信息，请参阅下一类别“更改电子邮件帐户的设置”。）

## 更改电子邮件帐户的设置

您可以根据个人需要设置其他帐户。

- 1 轻触“开始”屏幕上的  以转到应用程序列表，并轻触电子邮件应用程序。或者，您还可以轻触“开始”屏幕上的电子邮件图标。
- 2 点触屏幕底部的应用程序栏以打开选项菜单，并轻触 add email account。
- 3 选择要添加的电子邮件。有以下选项可供选择，例如 Windows Live、Outlook、Yahoo! Mail、Google 和其他帐户。
- 4 输入电子邮件地址和密码，然后将自动与新电子邮件帐户同步。

您可以根据个人需要更改设置。


- 1 点触屏幕底部的应用程序栏以打开选项菜单，并轻触 settings。
- 2 您可以通过轻触“sync settings”或选中/取消选中“Always bcc myself”和“Use an email signature”来更改详细信息同步选项。

#### 备注:

- 在“sync settings”中，您可以更改以下设置

下载新内容：检索内容的周期  
从要同步（电子邮件、联系人、日历）的内容中下载电子邮件：启用/禁用内容和其他详细的帐户信息。

#### 删除电子邮件帐户

- 轻触“开始”屏幕上的  以转到应用程序列表。
- 轻触 Settings 并转到 email & accounts。
- 点触并按住要删除的帐户，并轻触 delete。

#### Facebook

##### 设置 Facebook 帐户

在手机上设置 Facebook 帐户时，手机中将提供 Facebook 信息。然后您可以在“People”数据中心、“Pictures”数据中心和 Me 卡中访问 Facebook 信息。

- 在“开始”屏幕上，向左轻弹应用程序列表，轻触 **Settings > Email & accounts**。
- 轻触 **Add an account > Facebook**。




#### 备注:

- 要在手机上设置 Facebook 帐户，则必须具有工作蜂窝数据或 Wi-Fi 连接。
- 在手机上一次仅能设置一个 Facebook 帐户。如果要添加其他帐户，则需要先删除手机上的现有帐户。

## 娱乐 相机

使用相机前，系统将询问您是否允许相机使用您所处的位置。允许此选项后，位置信息将会添加到图片中，以便您可以看到图片的拍摄地点。

### 拍照

- 1 在“开始”屏幕上，向左轻弹应用程序列表。
- 2 轻触  Camera。  
或按住相机键以启动相机。
- 3 确保已选择相机模式 。使手机保持垂直或水平稳定。您可以放大或缩小  以拉近或拉远与拍摄对象的距离。

**提示!** 想要使用相机设置进行拍摄？请轻触以调整各种设置，包括闪光灯。

- 4 按相机键拍照。
- 5 图片将自动保存在手机的 Camera Roll 相册中。

您还可以选择向网站上传图片，包括将图片自动共享到 SkyDrive 或 Facebook。



### 拍照后

- 1 拍照后，向右轻弹以在图片查看器中查看该图片。

**提示!** 要在 filmstrip 视图中查看图片和视频？请转到相机，轻触图片或视频，将其收缩，就好像缩小它一样，然后向左或向右轻弹以查看 filmstrip。侧翻手机并使用 landscape 视图时，filmstrip 效果最好。

- 2 轻触并按住图片以查看图片选项，例如将其添加为收藏，将其删除，将其用作墙纸或将其上传到 Messaging 或 Play To。

## 录制视频

- 1 在“开始”屏幕上，向左轻弹应用程序列表。
- 2 轻触  **Camera**。  
或按住相机键以启动相机。
- 3 确保已选择视频模式 。使手机保持垂直或水平稳定。
- 4 按相机键以开始或停止录制。  
视频将自动保存在手机的 Camera Roll 相册中。

## 拍摄视频后

- 1 录制视频后，向右轻弹，然后轻触它以在视频查看器中播放。

屏幕上将显示所拍摄视频的静态图像，持续时间将显示在屏幕底部。

**备注：**如果您的 Windows Phone 具有 288 MB RAM 或更高配置，且已添加此选项，您则可以录制并播放 HD 视频（1280x720 高清晰分辨率）。如果将手机连接到计算机并将视频拷贝到该计算机中，您则可以使用全 1280x720 分辨率播放 HD 视频。

### 提示！

- 如果要观看从手机网站上下载的视频，请将手机连接到您的 PC 并将这些视频同步到手机。您不能将视频自动下载到您的手机。
- 要查找已同步到计算机的视频（手机拍摄），请打开 Zune 软件，然后单击 **Collection > Videos**。
- 如果具有大量要删除的图片或视频，或如果要将这些图片或视频保存到电脑中，您可以通过将手机连接到计算机并使用 Zune 软件执行此操作来节省时间。

## 将位置信息添加到“我的图片”

如果所拍摄的图片中包含位置 (GPS) 信息, 在您将其上传并共享后, 其他人便可看到此信息。如此一来, 您和您的朋友便可以使用 Bing 和 Windows Live Photo Gallery 在地图上开心查看这些图片, 甚至可以在网络中搜索与它一样的其他图片, 因为图片中的场景后面包含了位置信息。

- 1 在“开始”屏幕上, 向左轻弹应用程序列表, 并轻触 Settings > Applications > Pictures + Camera。
- 2 打开 Include location (GPS) info in pictures you take。

**备注:** 在向 Facebook 或 SkyDrive 上传图片时, 如果想要此信息保留在这些图片上, 请打开 Keep location info on upload pictures。

## 开始了解相机模式

**Camera/Video Record mode** — 轻触此图标可在相机/视频录制模式之间进行切换

**Zoom** — 放大或缩小。

**Settings** — 点触此图标可打开设置菜单。请参阅“使用高级设置”。允许您设置 Intelligent Shot、Beauty shot、ScanSearch、Photo Resolution 等。

## 使用照片/视频智能设置

从取景器中点触  以打开所有智能设置选项。

您可以通过滚动转盘来更改设置。

选择合适的选项后，轻触并设置相关设置。

设置选项	功能
Intelligent Shot	Windows Phone 可根据拍摄对象和亮度自动设置快门速度和孔径，从而使照片达到最佳效果。
Beauty Shot	新的 Windows Phone 可自动设置焦点和色彩平衡，以达到自然肤色的效果。
ScanSearch	您可以直接进入 ScanSearch 应用程序模式。
Photo resolution	像素越高，文件就越大，同时意味着该文件将占用更多内存。如果要在手机中存储更多图片，您可以降低像素以减小文件。
Brightness	Brightness 使您可以根据光线条件设置录制亮度。
White Balance	自动调整拍摄对象的颜色。您可以根据拍摄对象和光线条件采用自然色进行录制。
Colour effect	在菜单上选择所需的设置选项： <b>off</b> 、 <b>sepia</b> 、 <b>mono</b> 、 <b>negative</b> 、 <b>solarise</b>

设置选项	功能
Quality	在 <b>Super fine</b> 、 <b>Fine</b> 和 <b>Normal</b> 之间进行选择。质量越精细，照片越清晰。而文件也因此更大，这意味着手机内存可保存的图片数更少。
Anti-shake	减少因振动或移动而引起的模糊。
Flash	使用闪光灯功能，您可以设置内置闪光灯以在光线较暗的条件下闪光。
Video Resolution	像素越高，文件就越大，同时意味着该文件将占用更多内存。如果要在手机中存储更多视频，您可以更改其像素以减小文件。
Restore to default	重置菜单和拍摄选项。

**备注：**拍照之前，您可以轻触 **Settings > Applications > pictures & camera** 以访问以下设置：GPS、SkyDrive。

## 图片

学习查看照片和播放手机内存中保存的视频。对于视频，您仅能查看相机中录制的视频。

### “Pictures” 数据中心

“Pictures” 数据中心是 Windows Phone 的管理包中的数字版图片。展示了使用手机相机拍摄的所有图片、从电子邮件或文本信息保存的所有图片或从网络或 PC 下载的所有图片。



- Times Square 桌面。显示了 All 视图的本地图片。在您打开手机五次后，精彩时刻图片的马赛克将更改一次。如果在访问“Pictures”数

据中心之前使用 Zune 软件同步手机，您将会在到达此处时看到您的图片。

- 最新动态。这是您的朋友和家人上传到 Windows Live 或 Facebook 的最新图片。
- 图片集。您可以按相册、日期或收藏夹查看图片和视频。将图片添加为 Favourites 相册中的收藏后，您可以将此相册嵌入到“开始”屏幕。
- 数据中心背景。轻触数据中心中的任意位置可更改背景，或者可以让我们使用任何图片为您更改背景。更改背景后，“开始”屏幕上的图片图标也会更改。
- Zune 软件。使用 My Phone 同步文件以将图片从 PC 移动到手机上的相册，或从手机上的相册移动到 PC。

**备注：**首次进入“Pictures”数据中心时，您将在 Times Square 桌面上看到来自文件夹 7 的 8 张图片。要在此处查看个人图片的马赛克，则需要轻触文件夹 7 以将其删除。Times Square 桌面将立即

从 Camera Roll 以及从 PC 或社交网络站点同步的相册中随机获取文件。

## 受支持的文件格式

类型	格式
图像	扩展名: bmp、gif、jpg、png、tiff
视频	· 扩展名: mp4 · 编译码器: MPEG4

**备注:** 使用 Zune PC 客户端共享图片文件时手机仅支持 JPG 文件格式。

- 某些文件格式不受支持，具体取决于手机的软件。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。

## 专辑

图片相册是在手机、计算机和网络上管理图片和视频的一个重要方式。了解相册添加的目标位置和删除的源位置，有助于使一切保持在正常状态。

Zune 软件将手机相册 Camera

Roll、“已存图片”和“已收图片”中的图片置于计算机上的图片库中。

**备注:** 除查看和删除相册之外，所有其他的相册任务必须使用计算机上的 Zune 软件完成。

## 查看图片

- 1 在“开始”屏幕上，轻触箭头以转到应用程序列表，并轻触

### Pictures。

或者，如果 **Pictures** 图标已作为收藏图标嵌入“开始”屏幕，请轻触该图标。

- 2 在 Pictures 中，滚动并转到图片相册 (全部、日期、收藏) 并轻触照片图标以打开并查看。

查看照片时，请使用以下选项：

- 要查看更多照片，请向左或向右滚动。
- 如果长按图片，则将显示快捷菜单，您可选择 delete、share 和 add to favourites。
- 要放大或缩小，请用两个手指轻触屏幕并将两个手指分开（使两个手指靠近可将其放大）。

## 播放视频

- 1 在 Pictures 中，滚动并转到图片相册（全部、日期、收藏夹）并轻触视频图标以打开并查看。
- 2 轻触视频图标以进行查看。
- 3 逆时针旋转照片以切换到风景视图。
- 4 使用虚拟键控制播放。

## 共享图片

- 1 在“开始”屏幕上，轻触 Pictures。
- 2 查找要共享的图片。不能上传在线相册中的图片。
- 3 轻触并按住图片，然后轻触 **Share**。
- 4 选择要共享图片或向网络上上传图片的方式 — 文本或电子邮件信息，或共享到 **SkyDrive**。

**备注：**SkyDrive 是 Windows Live（网络 (photos.live.com) 上受密码保护的服务）的一部分，您可在其中免费存储多达 25 GB 的文档和图片。使用 Windows Live ID 登录后，便可以上传图片。

**提示！** 将图片从手机上传到 SkyDrive 后，您可以在计算机上的 Windows Live Photo Gallery 中查找并编辑这些图片，而无需连接到网络。您必须在计算机上运行 Windows Vista 或 Windows 7。要查看计算机上是否已安装 Windows Live Photo Gallery，请单击“开始”按钮 。在搜索框中，键入图片库，并在结果列表中单击 Windows Live Photo Gallery。

## 图片库中的收藏夹

使用“Pictures”数据中心上的 Favourites 相册的优点是：您可以将最感兴趣的图片放置在易于查看的位置。Favourites 中的图片也是唯一可嵌入到“开始”屏幕的图片（如果某些照片可使您在每次看到时都心情愉悦）。

- 1 在“开始”屏幕上，轻触 **Pictures**，查找图片并轻触以将其打开。
- 2 在图片查看器中，轻触并按住该图片，然后轻触 **Add to Favourites**。

**提示!** 要将在线相册中的图片添加为收藏? 请打开图片, 轻触它, 然后轻触 Save to phone。该图片将会添加到“已存图片”文件夹(在“Pictures”数据中心中, 转到 All > Saved Pictures)。查找该图片, 然后遵循上述步骤 2 将已存图片添加为收藏。

## 添加或删除图片的字幕

### 添加字幕

您可以向上传到 Facebook 或 Windows Live 的图片添加字幕。

- 1 轻触图片, 然后轻触 Share。
- 2 选择要向其中上传图片的帐户。
- 3 轻触文本框以输入字幕。您有 4 秒钟的准备键入时间, 否则图片将在无字幕的情况下完成上传。
- 4 轻触 Upload。

### 删除字幕

您必须在您的电脑上删除字幕, 并且您仅能删除已上传图片的字幕。

- 1 查找图片。

- 2 登录 Facebook 或 Windows Live, 并遵循它们提供的步骤删除字幕。

## 将位置信息添加到“我的图片”

如果所拍摄的图片中包含位置(GPS)信息, 在您将其上传并共享后, 其他人便可看到此信息。如此一来, 您和您的朋友便可以使用 Bing 和 Windows Live Photo Gallery 在地图上开心查看这些图片, 甚至可以在网络中搜索与它一样的其他图片, 因为图片中的场景后面包含了位置信息。

- 1 在“开始”屏幕上, 向左轻弹应用程序列表, 并轻触 **Settings > Applications > Pictures + Camera**。
- 2 打开 Include location (GPS) info in pictures you take。

**备注:** 在向 Facebook 或 SkyDrive 上传图片时, 如果想要此信息保留在这些图片上, 请打开 Keep location info on upload pictures。

## Music & Videos

### Zune 软件

使用 My Phone 同步文件，以将 PC 中的音乐和视频移动到手机中，或将手机中的音乐和视频移动到 PC 中。

### 从 Marketplace 获取音乐、视频和播客

Zune Marketplace 是音乐、播客、电影、视频、电视节目等的一站式服务点。一些内容可免费播放、下载或试用。另一些内容需要购买或租赁。

访问 Zune Marketplace 共有两种方式：

### 将音乐直接下载到手机或直接在手机中播放

- 1 在“开始”屏幕上，轻触 **Music & Videos**。
- 2 轻弹 Zune，然后轻触 **Marketplace**。
- 3 通过执行以下操作之一查找歌曲、专辑、艺术家或播放列表：

- 向左或向右轻弹，在可用类别中进行浏览，然后轻触所需项目。
  - 按搜索按钮，输入歌曲名称、专辑名称或艺术家姓名，然后轻触所需项目。
- 4 按照说明将音乐、视频、图片等同步到集合中。

### 在 PC 上下载音乐、播客、视频、电影和电视节目

- 1 转到 [windowsphone.com](http://windowsphone.com) 以安装 **Zune 软件**。
- 2 使用 USB 数据线，将手机连接到电脑。
- 3 打开 Zune 软件，然后按照说明将音乐、视频、图片等同步到集合中。  
如果未登录，请单击 Sign In。如果具有多个 Windows Live ID 帐户，请输入设置手机时使用的帐户。
- 4 单击 **collection**，然后将要同步的所有内容拖动到左下方的手机图标中。

**备注：**并非所有项目都可进行购买、租用、下载或播放。Zune Marketplace 并非在所有地区都可用，也并未提供所有语言版本。Zune Marketplace 的内容因市场而异。要了解有关使用 Zune Marketplace 的详细信息，请转到 [Zune.net](http://Zune.net)。

### 受支持的文件格式

类型	格式	从 Zune SW 同步
音频	扩展名：mp3、mp4、m4a、wma 编译码器：MP3、AAC、WMA	扩展名：mp3、mp4、m4a、wma 编译码器：MP3、AAC、WMA

类型	格式	从 Zune SW 同步
视频	扩展名：3gp、3g2、mp4、m4v、wmv 编译码器：MPEG4、H263、H264、VC-1	扩展名：mp4、m4v、wmv 编译码器：MPEG4、H.264、VC-1

## 播放音乐、视频和播客

Windows Phone 不仅仅是手机，它也是非常棒的 Zune 音乐和视频播放器。

上网或查看电子邮件时听音乐、上班途中观看喜欢的播客，或在飞机上欣赏电影。您无需携带其他设备。Windows Phone 可满足您所有的娱乐需求。

- 1 在“开始”屏幕上，轻触 **Music & Videos**。
- 2 轻弹 **Zune**，然后轻触 **Music、Videos 或 Podcasts**。
- 3 通过执行以下操作之一来查找要播放的项目：
  - 向左或向右轻弹，轻触某个类别（例如艺术家、专辑或歌曲），并根据需要向上或向下轻弹。
  - 要搜索 Zune Marketplace，请按搜索按钮，然后输入歌曲名称、专辑名称或艺术家姓名。（Zune Marketplace 可能在某些国家或地区无法使用。）

## 4 轻触要播放的项目。




如果需要调整音量，请按手机侧面的音量调高或音量调低按钮。





### 提示！

- 您可以以随机顺序快速播放所有音乐。轻弹 Zune，按后轻触 Play。此图标位于 Music 旁边。
- 如果您在某个类别（例如歌曲或专辑）中具有许多项目，则可以快速跳到列表中的特定点，而无需不停滚动。例如，假设您位于歌曲列表顶部（位于“a”部分），并且想要播放以字母“s”开头的歌曲。轻触包含字母“a”的带颜色的框。在显示的字母网格中，轻触 S。

## 调整播放

- 1 播放项目时，请使用以下控件来调整播放（某些控件不可用于所有媒体类型，例如视频）。

轻触此图标	执行此操作
	音乐：轻触专辑图像，然后轻触 Repeat 可重复播放当前播放列表。
	音乐：轻触专辑图像，然后轻触 Shuffle 可按随机顺序播放当前播放列表中的项目。
	评级可帮助您管理音乐集合：按评级对歌曲、艺术家或专辑进行分类，可在需要更多空间时便于您快速看到要删除的项目。


轻触此图标	执行此操作
	音乐：轻触可跳到当前歌曲的开头或跳到播放列表中的上一首歌曲（其功能取决于目前已播放的歌曲数目）。 视频和音频播客：轻触可跳到 7 分钟后。 全部：轻触并按住可后退到当前项目。
	音乐：轻触可跳到播放列表中的下一首歌曲。 视频和音频播客：轻触可跳到 30 分钟后。 全部：轻触并按住可快进到当前项目。
	轻触可暂停播放。
	轻触可播放。

#### 提示!

- 播放歌曲或音频播客时，您还可以通过向左或向右轻弹来跳到播放列表中的下一个和上一个项目。
- 播放视频时，轻触屏幕可显示播放控件。按后退按钮可返回到 Music & Videos。
- 按音量调高或音量调低按钮可显示迷你播放控件。即使在屏幕锁定时，它也可正常运行。

### 显示当前播放列表

播放音乐时，播放列表中接下来的项目将显示在专辑图像的下方。要查看播放列表中的所有项目，请执行以下操作：

- 1 轻触当前歌曲的名称（位于专辑图像的下方）。
- 2 要隐藏播放列表，请等待几秒钟或按后退  按钮。

**提示!** 要在播放列表中播放其他歌曲，请根据需要向上或向下轻弹，然后轻触要播放项目的名称。

### 显示正在播放的项目

1 执行以下操作之一：

- 按音量调高或音量调低按钮。当前播放歌曲的名称将显示在迷你播放控件的上方。即使手机锁定，它也可正常运行。
- 在 Music & Videos 中，轻弹 History。

### 显示歌曲的相关信息

- 1 播放歌曲时，请在 **Music & Videos** 中轻触艺术家的姓名。
- 2 向左或向右轻弹以查看信息（可用时），例如按该艺术家、专辑评论和艺术家传记分类的其他专辑。

## 游戏

### “Games”数据中心

通过“Games”数据中心，您不仅可以在手机上玩游戏，还可以连接到计算机和 Xbox 控制台并将游戏体验延伸到其中。

- Spotlight。研读 Xbox LIVE 团队的 Xbox LIVE 游戏新闻、提示和动向。
- Xbox LIVE Gamer Profile。在个人档案中，可查看最近玩的游戏和玩家卡、更改帐户信息，甚至个性化您的卡通形象。
- Requests。查看邀请以快速进入游戏，随时关注回合制游戏中的回合通知，或接受同伴的提醒执行下一步动作。
- Collection。查看手机的一个位置中所包含的全部 Xbox LIVE 和其他游戏。

## 玩游戏

Xbox LIVE 可能无法在您所在的区域使用。如果 Xbox LIVE 可用，并且您想要玩游戏，请使用现有 Xbox LIVE 帐户或设置一个帐户。在开始该游戏前，您需要先在手机上进行安装。

- 1 在“开始”屏幕上，轻触 **Games**。
- 2 向左轻弹 Collection，并轻触以打开已购买的游戏。如果要玩 Xbox LIVE 游戏，则需要登录到（或加入）Xbox LIVE。
- 3 如果要查看是否具有游戏邀请或回合通知，请向左轻弹 Requests。如果要和朋友一起玩游戏，但手机上没有允许多个玩家玩的任何游戏，请轻弹 collection 底部，并轻触 Get more games 以查看可尝试或可从 Marketplace 购买的游戏。

**备注：**Xbox LIVE 可能无法在您所在的国家 and 地区使用。

## FM 收音机

学习在 FM 收音机上听音乐和新闻。要收听 FM 收音机，则必须连接随附的耳机，它可以用作收音机天线。

### 收听电台

- 1 将随附的耳机插入到设备中。（它可同时用作天线）。
- 2 在“开始”屏幕上，轻触 **Music & Videos**。
- 3 轻弹 **Zune**，然后轻触 **Radio**。
- 4 要选择电台，请执行以下操作之一：
  - 向左或向右轻轻滑动以向上或向下调节转盘。
  - 如果长按收音机上的转盘，则将显示快捷菜单，您可以从中选择 pin to start、settings、radio mode:speaker。
  - 轻触 Favourites (★) 以显示您喜欢的电台。

#### 提示!

- 轻触 Play (▶) 或暂停 (⏸) 以开始或停止播放。
- 屏幕锁定后，按音量调高或音量调低按钮可显示迷你播放控件。您可以使用该控件暂停或恢复收音机，或跳到下一个或上一个电台。

## 添加或删除喜欢的电台

要更快地转到一些电台，请尝试将这些电台添加为收藏。

- 1 转到某个电台。
- 2 执行以下操作之一：
  - 要将电台添加为收藏，请轻触 Add Favourite (★)。
  - 要删除作为收藏的电台，请轻触 Remove Favourite (★)。

**提示！** 要显示您喜欢的电台，请轻触 Favourites。您还可以通过按住电台编号将您喜欢的电台嵌入到“开始”屏幕。

## 在扬声器和耳机模式之间进行切换

- 1 播放电台时，请轻触并按住电台编号。
- 2 轻触 Radio mode: headset 或 Radio mode: speaker 以在这两个选项之间进行切换。

## 切换收音机区域

如果在海外旅行，您可能需要切换收音机区域设置以在国外收听 FM 收音机。如果要更改此设置，请记得在回国后将其切换回原始设置。



- 1 播放电台时，请轻触并按住电台编号。
- 2 轻触 **设置**。
- 3 在“收音机”屏幕上轻触区域框，然后轻触所需收音机区域对应的名称。

## 实用工具

### 设置闹钟

- 1 轻触“开始”屏幕上的  以转到应用程序列表，并轻触 **Alarms**  应用程序。
- 2 如果要添加新闹钟，请轻触底部选项菜单栏上的 。有一些预设的闹钟，您可以激活它们。
- 3 点触 Time 以设置您希望闹钟响起的时间。
- 4 设置重复。  
该图标指示您选择的工作日。
- 5 选择喜欢的铃声和它的名称。完成闹钟设置后，请点触页面底部的 。



### 使用计算器

- 1 轻触“开始”屏幕上的  以转到应用程序列表，并轻触 **Calculator**  应用程序。
- 2 点触数字按钮以输入数字。

- 3 对于简单的计算，请点触所需的功能（+、-、x 或 ÷），然后点触 =。



### 将事件添加到日历中

- 1 轻触“开始”屏幕上的  以转到应用程序列表，并轻触 **Calendar**  应用程序。
- 2 点触  以制定新约会。
- 3 轻触 Subject 以制定约会的标题。
- 4 轻触 Location 以输入约会地点。
- 5 轻触 When 已选择日期，然后选择希望约会开始的时间。
- 6 轻触 How long 以选择约会持续的时间。
- 7 如果要设置提醒、发生的事件以及状态，请点触 more details 并选择所需的选项。

- 8 如果希望出席者添加约会，请轻触 add someone 以选择联系人。您还可以检查此约会是否为私人约会，并且做一些笔记。
  - 9 点触 **Save** 以在日历中保存该约会。日历中带颜色的方框将标记已保存约会的所有日期。
  - 10 您可能需要更改约会的详细信息，或将其删除。点触  以修改这些详细信息，或点触  以将其删除。
- 3 要查看或编辑 explore Excel、Explore Word、Explore PowerPoint 文件，请轻弹 Documents。
  - 4 点触并按住任意文件，此时将显示选项 send、delete、properties。

## Office

您可以管理和查看文档文件。受支持的文件类型包括 doc、docx、txt、xls 和.xlsx。

- 1 轻触“开始”屏幕上的  以转到应用程序列表，并轻触 **Office**  应用程序。
- 2 要创建一个备注，请轻触 new note 并跟踪在家、在学校或工作时的文档。  
要查看所有备注，请轻触 All。

## Windows 应用程序


- 1 首先，请设置 Windows 帐户。输入用户名和密码。
- 2 登录后，Windows 帐户中的联系人、电子邮件和日历将会自动与 Windows Phone 7 同步。

**提示!** 如果在登陆后更改 Windows Live ID 帐户，或将其删除，请遵循以下步骤：**Applications > Settings > system > email & accounts > add an account > 点触并按住要同步或删除的 Windows Live ID。**

### 地图


检查当前位置并接收目的地的方向指引。Windows Phone 7 必须连接到 Wi-Fi 或 3G/GPRS。

### me

轻触  以搜索您的位置。这实际上是手机的位置。您可以通过轻触两次或收放屏幕来更准确地查看您的位置。

你还可以将其嵌入到“开始”屏幕，或者通过信息或 hotmail 将其共享。

### 搜索

轻触  并输入要查找的位置。它将使地图移动到该地点。

**备注:** 如果通过向上轻弹并轻触鸟瞰图来在页面底部将其打开，您将可以搜索该鸟瞰图的位置。它甚至可描述附近的建筑物和风景。

## Marketplace

Marketplace 允许您下载有用的应用程序、音乐和游戏。如果从 Marketplace 安装这些应用程序、音乐和游戏，它们将显示在应用程序列表中。

- 1 轻触“开始”屏幕上的  以转到应用程序列表，并轻触 **Marketplace** 应用程序。您还可以轻触“开始”屏幕上的 **Marketplace** 图标。
- 2 Marketplace 具有三种类别 — 应用程序、游戏和音乐。选择要安装或下载的一种类别。

## Hotmail

在首次设置手机时对 Hotmail 进行配置。根据同步设置，手机上的 Hotmail 会自动与网络上的 Windows 帐户同步。


收件箱对话列表是您的默认 Hotmail 视图。

点触菜单键，然后点触 Refresh，以发送或接收新电子邮件并与网络上的 Windows 帐户同步电子邮件。

## 网络 浏览器

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐等更多内容的缤纷世界，您可以快速、直接地通过手机访问。畅行无阻、精彩无限。

### 访问网页

- 1 轻触“开始”屏幕上的  以转到应用程序列表，并轻触 **Internet Explorer** 应用程序。您还可以轻触“开始”屏幕上的 **Internet Explorer** 图标。

- 2 您将移动到网站。

**备注：**连接这些设备并下载内容时会产生额外费用。请查看服务提供商要求的数据付费。

### 使用选项

点触菜单选项栏以查找更多选项。

**forward** — 前进到访问页面。

**share Page** — 通过电子邮件或信息发送页面链接。

**find on page** — 突出显示要在页面上查找的对象。

**pin to start** — 将页面嵌入到“开始”屏幕以便快速启动。

**setting** — 设置以下选项

Allow cookies on my phone


Let Bing suggest sites as I type


**Website preference**


移动版

桌面版

**delete history** — 从 Internet Explorer 删除所有临时文件、历史记录、cookie 和保存的密码。

 **add** — 将页面添加到收藏夹

 **favourites** — 访问/编辑收藏页面和历史页面。

 **tabs** — 将选项卡用作导航以在几组页面之间进行切换。

## 连接 蓝牙

### 打开蓝牙无线功能



- 1 在“开始”屏幕上，轻触箭头  
➔ 以转到应用程序列表。
- 2 轻触 **Settings > System > Bluetooth**。
- 3 **要打开蓝牙，请将状态滑块拖动到 On 位置。**
- 4 开始搜索蓝牙设备。
- 5 轻触要与其配对的设备。

### 连接蓝牙耳机

配对后，您可以根据需要连接到蓝牙设备。

- 如果蓝牙关闭，请点触 Bluetooth 以将其打开。在蓝牙设备列表中，请点触列表上配对设备的名称。

#### 备注：


- 稍后如果要关闭蓝牙，请转到 Settings，然后轻触 Bluetooth 并将开关滑向左边的 Off 位置。
  - 蓝牙设置后，Windows Phone 7 会在蓝牙开启后识别它。
- Windows Phone 7 不支持在手机之间传输蓝牙文件。有关蓝牙的详细信息，请参阅 FAQ（常见问题）。

## Wi-Fi

学习使用手机的无线网络功能，以激活并连接到与 IEEE 802.11 b/g/n 标准兼容的任何无线局域网 (WLAN)。您可以在具有访问点或无线热点的任意位置连接 internet 或其他网络设备。您的设备使用非协调频率，并且专门用于所有欧洲国家。在欧盟室内使用 WLAN 不受限制，但在法国户外使用受限制。



## 连接无线网络

- 1 在“开始”屏幕上，轻触箭头  以转到应用程序列表。
- 2 轻触 **Settings > System > Wi-Fi** 以连接无线网络。
- 3 将滑块移动到 **On** 位置以打开无线连接。在大多数情况下，您将同时看到安全网络和未受保护的网路。
- 4 立即轻触要连接的网络。
- 5 在下一个屏幕上，轻触文本字段。然后键入用户名或密码。
- 6 轻触 **done** 完成。

**备注：**为了防止意外连接到具有相同名称的错误网络，系统将显示此警告。如果确定该网络是正确的网络，请轻触 connect。

## 编辑 Wi-Fi 连接

假设您需要更改无线网络的设置，或未显示网络。

- 1 返回到“Wi-Fi 设置”屏幕以选择要编辑的网络，然后轻触并按住要编辑的网络。
- 2 轻触 **edit** 以更新 Windows Phone 收集到的网络。
- 3 如果需要编辑用户名和密码，请执行网络设置。
- 4 如果需要添加或编辑代理信息，请在此处执行。轻触并按住以获取代理选项。
- 5 如果需要编辑网络信息，请在相应字段中键入。您需要从网络管理员处获取新的设置信息。

### 备注:

- 向下滚动以查看其他网络选项。Windows Phone 7 在识别您的网络后，将会自动输入此信息。
- 要关闭无线网络，请返回到“设置”屏幕，并将 **Wi-Fi** 设置为 **Off**。
- 再次打开 Wi-Fi 后，您的手机将会记住网络设置并自动连接。

## Play To


学习使用与数字生活网络联盟 (DLNA) 服务兼容的“Play To”功能，您可以使用启用了 DLNA DMR 的设备在家中通过 Wi-Fi 播放手机中的内容。

开始前，您必须先激活 Wi-Fi 功能并添加 Wi-Fi 模式。

### 备注：

- 与 DLNA-DMR 兼容的设备可能无法播放某些文件，具体取决于设备。
- 系统可能会缓冲播放，具体取决于网络连接和所连接的启用 DLNA DMR 的播放器。


## 在其他启用了 DLNA-DMR 的设备上播放文件

- 1 在“开始”屏幕上，轻触箭头  以转到应用程序列表并选择 **Play To**。
- 2 轻触导航栏上的 **Device** 图标并选择目标。您的设备会自动搜索启用了 DLNA DMR 的设备。
- 3 选择媒体类别>文件。
- 4 在选定播放器上开始播放。
- 5 使用手机上的图标控制播放。

### 备注：

- 系统可能会缓冲播放，具体取决于网络连接和所连接的服务器。
- 仅当打开启用了 DLNA DMR 的设备时，您才可以搜索它们。

## 设置

在此菜单中，您可以个性化手机上的设置。点触“开始”屏幕上的  以转到应用程序列表并轻触 settings。

## 系统

### ringtones & sounds

设置铃声和振动并选择铃声、新文本信息、新语音邮件、新邮件。

设置可播放约会提醒、按键音、锁定和解锁、所有其他通知的声音。

### theme

更改手机的背景和点彩，以配合今天、本周或所有月份的心情。

### flight mode

同时切换手机的移动、Wi-Fi 和蓝牙通信。您仍然可以单独切换 Wi-Fi 和蓝牙。

## Wi-Fi

打开 Wi-Fi 可连接到可用的 Wi-Fi 网络。

Wi-Fi 设置 — 设置网络通知或添加 Wi-Fi 网络

## Bluetooth

搜索并连接蓝牙设备。

## 电子邮件和帐户

设置电子邮件、联系人、Facebook 和其它。

## lock & wallpaper

设置可更改墙纸和屏幕超时时间。  
切换以设置密码并创建 4 位密码。

## location

您之前为其启用了位置服务的应用程序现在可以访问当前位置。

## **mobile network**

设置数据连接和数据漫游。  
切换以设置 3G 连接并选择网络。

## **date & time**

设置日期、时间和时区

## **brightness**

调整屏幕的亮度。

## **keyboard**

设置键盘语言。您可以选择建议文本并突出显示拼写错误的字、更正拼写错误的字、在选择建议后插入空格、在双击空格键后插入句点，以及使句子的首字母变为大写字母。

## **region & language**

设置显示语言、区域格式、短日期、长日期、一周的第一天、系统区域以及浏览器和搜索语言。

## **ease of access**

设置 TTY/TDD 模式

## **speech**

设置为在手机锁定时播放音频确认和使用语音。

## **find my phone**

在 [windowsphone.live.com](http://windowsphone.live.com) 上标记、呼叫、锁定或擦除您的手机

如果手机丢失，这可帮助您找到。转到 [windowsphone.live.com](http://windowsphone.live.com) 并使用 Windows live ID 和密码登录。

## **phone update**

在找到新更新时通知我。使用移动数据连接检查更新。

## **about**

查看法律信息，检查手机状态和软件版本。

重置手机。这将擦除所有个人内容，包括已购买和下载的应用程序。

## feedback

发送反馈可帮助完善 Windows Phone

## 应用程序

### games

打开/关闭“连接 Xbox LIVE”。

### Internet Explorer

检查您是否在手机上允许 cookie。您还可以设置是否允许 Bing 在您输入时建议站点。

选择网站首选项。

移动版本或桌面版本

### 删除历史记录

从 Internet Explorer 删除所有临时文件、历史记录、cookie 和保存的密码。

### maps

在打开/关闭 Use my location 之间切换。

它使用您的位置来向您提供更佳的本地搜索结果。

### 删除历史记录

从手机中删除上一个地图搜索、标针和图像数据。

### messaging

将 SMS 送达确认设置为开/关。

### music & videos

打开/关闭使用 Zune 连接

打开可自动下载增加 Zune 体验的信息。

### Office

#### username

输入用户信息，以在备注中标识自己并帮助协作和跟踪文档。

### SharePoint

- 数据存储

清除 SharePoint 缓存后，即可在手机中腾出空间。这将删除所有临时 SharePoint 文件和历史记录。

- 冲突

SharePoint 允许您选择如何管理手机上的文件和服务器上的文件之间的冲突。您可以选择解决冲突的方式。

- 通知我后，我将手动解决冲突。
- 自动替换手机上的项目。

- 启动选项

选定后可始终打开 SharePoint 链接。

- 重置

恢复默认设置。

### **OneNote**

在打开/关闭自动同步之间切换。

当您打开页面、保存页面或打开某个部分时，打开此选项可自动同步备注。

### **people**

Import SIM contacts 将与在线 Windows Live 联系人列表同步。

- 按名/姓对列表进行分类。
- 按名姓/姓、名显示姓名。

### **phone**

设置语音信箱号码。

向所有人/从不/向我的联系人显示我的本机号码

打开/关闭呼叫转移

打开/关闭国际帮助

打开/关闭 SIM 安全性

### **pictures & camera**

设置以下选项。

允许相机按钮唤醒手机，以使其打开/关闭。

打开/关闭“包含所拍摄图片中的位置 (GPS) 信息”

打开/关闭“自动上传到 SkyDrive”。

打开/关闭“在上传的图片上保留位置信息”。

### **radio**

设置区域选项。

北美洲/全球/日本

## **search**

在打开/关闭 Use my location 之间切换。

它使用您的位置来向您提供最佳的本地搜索结果。

选中可在键入时从 Bing 获取建议。

## **删除历史记录**

从手机中删除之前输入搜索项目。

## 软件更新

### 手机软件更新

Windows Phone Update 允许您将手机的固件更新到最新版本。Windows Phone Update 服务会在 Windows Phone 更新时自动向您的手机发送提示，手机将使用用户个人电脑上运行的 Zune 软件安装这些更新。请转到 Zune 软件设置的“PHONE”菜单，并单击“UPDATE”以检查可用更新。

## 配件

有多种配件可用于您的手机，这些配件可能要单独购买。请根据个人的通信要求选择这些配件。关于配件的供应情况，请咨询本地经销商。（以下配件为可选配件。）

### 充电器



### 数据线

连接 LG-E900 和 PC。



### 电池



### 用户指南

了解更多关于 LG-E900 的信息。



### 立体声耳机



### Microsoft SHG (入门指南)

帮助您了解 Windows Phone 的入门知识。



### 备注：

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

## 外部环境

最高温度: +55° C (放电) ,  
+45° C (充电)

最低温度: -10° C

## FAQ (常见问题)

在打电话获得服务或呼叫售后服务工程师之前，请检查遇到的手机问题是否在本节中已描述。

类别	子类别	问	答
蓝牙	蓝牙耳机	无法通过遥控蓝牙耳机收听音乐	<ul style="list-style-type: none"><li>* 请查看耳机是否已连接到手机。</li><li>• 确保您的设备已连接到立体声耳机。</li><li>• 确保耳机支持要尝试收听的音乐格式。</li><li>• 确保耳机和设备之间的距离不超过 10 米，且它们之间没有墙或其他障碍物隔离。</li></ul>
蓝牙	蓝牙耳机	无法通过遥控蓝牙耳机收听视频声音	不支持。如果要收听视频声音，请使用耳机插孔，而不是蓝牙耳机。
蓝牙	蓝牙支持的情景模式	Windows Phone 7 支持哪些情景模式？	<ul style="list-style-type: none"><li>HP (免提情景模式)</li><li>HSP (耳机情景模式)</li><li>A2DP (高级音频传送情景模式)</li><li>AVRCP (音频和视频遥控情景模式)</li><li>- 音乐: 仅支持播放/暂停/上一首歌曲/下一首歌曲</li><li>PBAP (电话本访问情景模式)</li></ul>

类别	子类别	问	答
蓝牙	蓝牙连接	通过蓝牙提供哪些功能?	可以连接到立体声/单声道耳机、车载套件。
蓝牙	蓝牙连接	当手机与 PC 进行同步时是否可以使用互联网? (在此情况下, PC 已与有线 LAN 连接)。	不支持。
蓝牙	联系人转移	是否有方法可以通过蓝牙将联系人数据转移到其它手机? 例如, 通过蓝牙将其它手机的联系人转移到手机。	不支持。
蓝牙	打印	是否可以使用蓝牙或无线方式打印 MS Office 文档 (MS Word、Excel、PDF 等) ?	不支持。

类别	子类别	问	答
数据	备份	如何将旧手机上的联系人导入到 Windows Phone 7?	<ul style="list-style-type: none"> <li>将旧的 SIM 卡放入新手机，然后转到 <b>Settings</b>。轻弹 <b>applications</b>，轻触 <b>people &gt; import SIM contacts</b>。</li> <li>不可通过 Zune 实现。</li> </ul>
数据	同步	Windows Phone 7 与 PC 进行数据同步时有哪些限制?	<p>Windows Phone 7 使用 “Zune” 应用程序，而不是 “Activesync”。</p> <p>Zune 的限制是：在进行同步时，无法在手机上播放（音乐、视频和图片）文件。</p>
数据	同步	如何在 Windows Vista 和 Win7 中将手机与 PC 进行同步?	使用 Microsoft 应用程序 “Zune”，您可以从 MS 网站下载该应用程序。
数据	网络更新	通过网络进行升级时，是否可以自动备份用户数据。	Zune 支持完整闪存备份，但不支持单独备份用户数据。
杂项	通话时间	是否根据型号（不包括 2G/3G、CDMA...）采用不同的方式计算通话时间	<p>CDMA 型号：从您拨号按 “call” 之时起计算通话时间。</p> <p>2G/3G 型号：从通话连接之时起计算通话时间。</p>
杂项	电子邮件	从何处可以获得 POP3 和 SMTP 服务器设置?	若需帮助，请咨询电子邮件系统管理员。

类别	子类别	问	答
杂项	Active X	是否与 PC 一样支持 Active X?	不支持。
手机功能	电池	如何确认电池是否已充满电?	电池充电状态显示在屏幕顶部。
手机功能	W&P 选项	在将手机号码保存到联系人时, 是否可以使用 W (等待) 和 P (暂停) 选项?	是的, 可以使用。但仅支持使用硬件键盘。不支持屏上键盘。
手机功能	Office Mobile	是否可以在手机的 Office 应用程序中编辑文件?	只能读取。 <ul style="list-style-type: none"> <li>请注意, Microsoft Office Mobile 并不支持 Microsoft Office 2010 中的所有功能。如果文档中有 Office Mobile 不支持的内容, 您仍可以在手机上打开此文档, 但不会显示不支持的内容。</li> </ul>
手机功能	铃声设置	如何设置铃声?	要设置铃声, 请转到应用程序列表, 然后轻触 <b>Settings &gt; ringtone &amp; sounds</b> 。 您可以为不同的联系人指定不同种类的提示和不同的铃声。 在“Start”上, 轻触 <b>People &gt; 要更改的联系人 &gt; Edit &gt; Ringtone</b> 。

类别	子类别	问	答
手机功能	铃声设置	如何将喜爱的音乐用作铃声？	Marketplace 可以使用户轻松找到并获取喜爱的铃声，请转到应用程序列表，然后轻触 <b>Marketplace &gt; Music</b> 。然后，浏览和选择喜欢的铃声。 请注意，在您所在的国家或地区可能无法使用 Marketplace。
手机功能	支持语言	是否可以更改语言？	Windows Phone 7 支持 6 种不同的语言，（德语、英语（英式/美式）、西班牙语、法语、意大利语）。如果要更改设置，请轻触 <b>Settings &gt; region &amp; language &gt; Display language</b> 。
手机功能	声音设置	如何设置系统声音和铃声？	您可以使用音量键调整音乐、铃声和系统声音。 • 转到 <b>Settings &gt; ringtone &amp; sounds</b>
手机功能	时间设置	如何在手机上设置时间？	应用程序列表 > <b>Settings &gt; date &amp; time</b> > 将 <b>Set automatically</b> 滑块设置为关 > 设置时间

类别	子类别	问	答
手机功能	Youtube	是否可以观看 Youtube 上的视频剪辑？	可以通过使用 Marketplace YouTube 播放器实现。 请注意，在您所在的国家或地区可能无法使用 Marketplace YouTube 播放器。
手机功能	电池使用寿命时间	本款手机的通话时间有多长？	通话时间：360 分钟（基于 3G）
手机功能	相机	是否有可以在拍照之后立即保存或清除图片的选项？	图片会自动保存。 通过向右轻弹导航到图片查看器。点触并保存所拍图片。查看可用选项。 (例如，添加到收藏夹、删除等)。
手机功能	电子邮件	是否可以设置电子邮件过滤？	电子邮件过滤可以通过使用“搜索”按钮实现。
手机功能	电子邮件	是否可以设置收到电子邮件时的提示音。	[步骤] <b>Settings &gt; ringtones &amp; sounds &gt; New email &gt;</b> 选择一项

类别	子类别	问	答
手机功能	浏览器设置	如何更改隐私和其他浏览器设置?	转到 <b>Settings &gt; applications &gt; Internet Explorer</b> 以删除 cookies。还可以使用 <b>Settings &gt; system &gt; location</b> 来关闭位置共享。
手机功能	近程传感器	在手机通话过程中, 如何使 LCD 屏幕保持打开?	手机上的近程传感器设计为在通话期间默认关闭 LCD。
手机功能	SIM 卡锁	是否可以使用不同运营商提供的 SIM 卡?	请联系出售手机的商店以查看 SIM 卡锁是否激活。 如果没有 SIM 卡锁, 某些功能或服务可能因手机或网络设置而不可用。
手机功能	SIM 卡锁	我的 Windows 手机有 SIM 卡锁, 在此情况下, LG 是否可提供帮助?	SIM 卡锁取决于出售 Windows 手机的网络运营商。请联系网络运营商或出售 Windows 手机的商店。
手机功能		是否支持 Adobe Flash (类似于 PC 浏览器)?	不支持。

类别	子类别	问	答
手机功能		是否支持流媒体服务？	不支持某些流媒体协议（如 RTSP）。支持 HTTP-Progressive 和 IIS SmoothStreaming，具体取决于您访问的网站和使用的应用程序。
手机规格	频段	是否支持 GSM 技术四频段、三频段或双频段？（例如：1900Mhz、900、1800、850）	支持四频段。
手机规格	手机规格	是否可以使用外置 GPS 设备？	否。Windows Phone 7 设备中已内置一个 GPS 装置。
Wi-Fi	Wi-Fi 简单查询	如何使用 Wi-Fi（无线网络）？	您可以在提供接入点或无线热点的任何地方连接到 Internet 或其他网络设备。
Wi-Fi	Wi-Fi 简单查询	运营商是否提供 Wi-Fi 服务？	否，不提供。用户可以通过 AP（接入点）访问 Internet。
恢复解决方案	密码缺失	当您忘记密码时，该怎么办？ 如果您忘记了密码，该如何获取？	请与服务提供商联系。

类别	子类别	问	答
恢复 解决 方案	恢复出厂 设置网络 更新	要重置手机以提高性能，我该如何操作？ 要更新手机上运行的软件以提高性能，我该如何操作？	<p>1. 恢复出厂设置。 轻触 Applications list &gt; <b>Settings</b> &gt; <b>about</b> &gt; <b>reset your phone</b>。</p> <p>重置手机将会清除所有个人内容（包括您购买和下载的应用程序），并将恢复出厂设置。</p> <p>2. 尝试通过网络更新最新的软件版本。Windows Phone Update 服务会自动提醒您的手机是否存在 Windows 手机更新，并且在您将手机与个人计算机连接时使用 PC 上运行的 Zune 软件来将更新安装到手机中。</p> <p>如果您尚未安装 Zune 软件，请访问 <a href="http://www.windowsphone.com">www.windowsphone.com</a> 进行安装。</p> <p><b>警告！</b></p> <p>执行“Factory Reset”操作后，所有用户数据将被擦除。客户必须在运行恢复出厂设置和网络更新之前备份数据。</p>

类别	子类别	问	答
恢复解决方案	恢复出厂设置	当性能比以前更低时，该如何操作？	<p>1. 恢复出厂设置。 轻触 Applications list &gt; <b>Settings</b> &gt; <b>about</b> &gt; <b>reset your phone</b>。</p> <p>重置您的手机将会清除所有个人内容（包括您购买和下载的应用程序），并恢复出厂设置。</p> <p>2. 尝试通过网络更新最新的软件版本。您的手机会在通过 Windows 手机更新服务自动进行 Windows 手机更新时收到提示，在您将手机与个人计算机连接时，通过使用该计算机上运行的 Zune 软件将更新安装在手机中。如果您尚未安装 Zune 软件，请访问 <a href="http://www.windowsphone.com">www.windowsphone.com</a> 进行安装。</p> <p><b>*注意</b> 如果恢复出厂设置和进行网络更新，所有用户数据将被擦除。因此，客户必须提前备份数据。</p>



# LG-E900 User Guide - English



- **This guide helps you to start using your phone. If you need more information, please visit [www.lg.com](http://www.lg.com).**
- Some of the contents of this manual may not apply to your phone, depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.



Congratulations on your purchase of the advanced and compact LG-E900 phone by LG, designed to operate with the latest digital mobile communications technology.

## Copyrights and trademarks

Rights to all technologies and products that comprise this device are the property of their respective owners:

- This product includes software  licensed from MS, an affiliate of the Microsoft Corporation. Microsoft and software bearing the Microsoft name are registered trademarks of the Microsoft Corporation. Before using this product, refer to the Microsoft software license terms for Windows Phone 7 software agreement. at the back of this guide for information about rights and restrictions.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc.
- © 2010 Microsoft Corporation. All rights reserved. Microsoft, Internet Explorer® Mobile, Windows® Phone, Windows® Phone Marketplace, Xbox

LIVE®, Zune®, <list Windows and all other trademarked names and logos that are referenced in the materials, in alphabetical order> are trademarks of the Microsoft group of companies.

# Contents

<b>Guidelines for safe and efficient use</b>	<b>6</b>	<b>Communicating</b>	<b>34</b>
<b>Assembling</b>	<b>11</b>	Phone	34
Getting to know your phone	11	Messaging	37
Open view	12	Email	39
Installing the USIM and battery	13	Facebook	43
<b>Navigating your Windows Phone</b>	<b>16</b>	<b>Entertainment</b>	<b>44</b>
Using the touch screen	16	Camera	44
Getting to know your Start screen	19	Pictures	49
Knowing and navigating the screen	19	Music & Videos	53
Customising the Start screen	24	Games	58
Accessing applications	25	FM Radio	59
Getting to know the application bar	25	<b>Utilities</b>	<b>61</b>
Customising your Windows Phone	28	Setting an alarm	61
Entering text	30	Using your calculator	61
Downloading applications from		Adding an event to your calendar	61
Marketplace	31	Office	62
<b>Getting Started</b>	<b>32</b>	<b>Windows applications</b>	<b>63</b>
Signing in with a Windows Live ID	32	Maps	63
Importing your contacts	33	Marketplace	64
Staying in Sync	33	Hotmail	64

<b>The Web</b> .....	<b>65</b>
Browser .....	65
<b>Connectivity</b> .....	<b>66</b>
Bluetooth .....	66
Wi-Fi .....	67
Play To .....	69
<b>Settings</b> .....	<b>70</b>
system .....	70
applications .....	72
<b>Software update</b> .....	<b>75</b>
Phone software update .....	75
<b>Accessories</b> .....	<b>76</b>
<b>FAQ</b> .....	<b>78</b>

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information  
This mobile phone model LG-E900 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.935 W/kg (10g) and when worn on the body is 1.47 W/Kg(10g).
- The SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over 1g of tissue.

### Product care and maintenance

#### WARNING

**Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.**

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments; it may cause damage to the phone and void the warranty.

## **Efficient phone operation**

### **Electronic and medical devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Please consult your doctor to determine if operation of your phone may interfere with the operation of your medical device.
- Mobile phones may interfere with some hearing aids.
- Minor interference may affect TVs, radios, PCs, etc.

### **Road safety**

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.

- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- If your vehicle is equipped with an airbag, ensure it is not obstructed by your mobile device or accessories. It may fail or cause a serious injury if obstructed when deployed.
- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

### **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

### **Excessive sound and pressure from earphones can causing hearing loss.**

### **Glass Parts**

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service centre.

### **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### **Potentially explosive atmospheres**

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### **In aircraft**

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

### **Children**

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### **Emergency calls**

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

### **Battery information and care**

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

## Assembling

### Getting to know your phone

#### Headset jack

#### Power/Lock key

- Long press (three seconds) to the power on/off.
- Short press to turn the screen off.

#### Earpiece

#### Proximity sensor

#### ALS(Ambient Light Sensor)

#### Search button

Open Quick Search


#### Start button

Return to the Start screen;  
Start the Voice Recognition function (press and hold).

#### Back button

Return to the previous screen.

#### Mouthpiece



#### WARNING:

Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the protective film on the proximity sensor of the LCD, as this can cause the sensor to malfunction.

### Volume keys

- **When the screen is idle:** volume of system tone & ring tone.
- **During a call:** earpiece volume.
- **When playing a track:** controls track volume.




### Charger, data cable (USB cable port)

**TIP!** Before connecting a USB cable, wait until the phone has powered up and been registered on the network.

### Camera key

- Go directly to camera preview by pressing the camera key.


## Open view

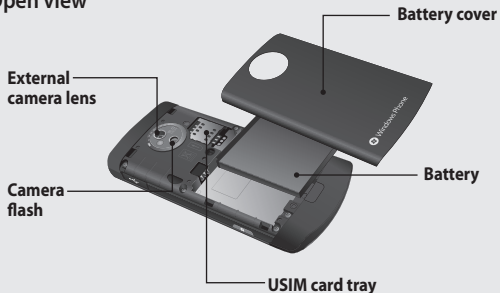

## Installing the USIM and battery

### 1 Remove the battery cover

Press the battery cover release button as shown in the image below (1). Lift the cover away from the phone (2).

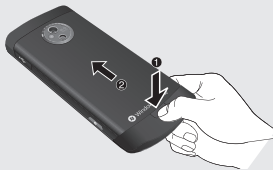

### 2 Remove the battery


Using the cut-out at the bottom, lift the battery out of its compartment.



**! WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

### 3 Install the USIM card

Put the USIM card into the USIM card holder. Make sure the gold-coloured contact area on the card is facing into the phone. Push the USIM card holder back.

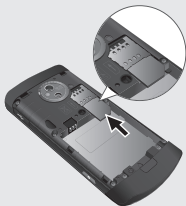

#### 4 Install the battery

First, insert the top of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.



#### 5 Charging your phone

Open the charger port cover on the side of your LG-E900. Insert the charger connector into the port and plug the charger into a mains electricity outlet.





You cannot switch on the phone if the battery is fully discharged. It takes approximately four to five minutes to reach a charge state sufficient for booting by TA charger.


It takes approximately 14-15 minutes longer to charge using a USB connection.


If the battery is critically low, the image for the critically low battery will appear to notify you to charge for longer.


**NOTE:** The battery must be fully charged initially to improve battery life.

 **WARNING:** Do not connect the charger to the phone without the battery being installed. You must check the battery is inserted before charging.

 **WARNING:** Make sure that no sharp items come into contact with the battery. This could pose a fire risk.

 **WARNING:** Do not remove the battery or USIM card while charging the phone.

 **WARNING:** There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries in accordance with the manufacturer's instructions.

 **WARNING:** Unplug the charger from the mains and phone during lightning storms to avoid electric shock or fire.

# Navigating your Windows Phone

## Using the touch screen

### Touch screen tips

Your phone's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.

#### NOTE:

- To avoid scratching the touch screen, do not use sharp objects.
  - Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
  - Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or if exposed to water.
  - For optimal use of the touch screen, remove the screen protection film before using your phone.
  - Your touch screen has a layer that detects small electrical charges emitted by the human body.
- For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches by sharp objects, such as a stylus or pen.

#### NOTE:

- Your phone turns off the touch screen when you do not use it for a specified period. To turn on the screen, press the [Power] button.
- You can also adjust the backlight time or change the wallpaper. On the Start screen, go to the application list and select **Settings > lock & wallpaper**.

## Universal gestures on your touch screen

For most applications, natural gestures can be used to move about and give commands. To type text, use the onscreen or the hardware keyboard.

The following gestures are used to move around for your Windows Phone 7:

### Tap

A tap is a single, quick downward touch on the screen. Tap is used to execute commands (like pressing Enter on a PC). Tapping also stops any movement on the screen.



### Double tap

A double tap is two quick downward touches on the screen in the same place. The double tap commands the phone to zoom in or out, as appropriate.



### Touch and hold

To touch and hold, the finger is pressed down and held there for a few seconds.



### Scroll

Scrolling is for moving objects upwards and downwards.

The finger is pressed down and moved in the desired direction. To end the scrolling, the finger is lifted up.



### **Flick**

Flicking is for moving objects sideways.

The finger is pressed down and moved in the desired direction. To end the gesture, the finger is lifted up.



### **Pinch and stretch**

Pinch and stretch are opposites of each other. These gestures are often used with maps to zoom in and out.

Pinching is achieved by pressing two fingers down on the screen and bringing them together. This zooms in on content, while centering the image between the finger tips. For stretching, the fingers are moved apart from each other to zoom out on an image.




## Getting to know your Start screen

From this screen you can access menu options, make a call, view the status of your phone and much more.



## Knowing and navigating the screen

Start screen is the beginning of the Windows Phone 7 experience for you after you power on your phone. The Start screen displays application tiles that you have pinned and placed in a position of your choice for quick launch. Pressing the [Start] Button  on the phone always returns you to the Start screen, no matter what application is running.

### 1 Simply swipe your finger to the left, right, up or down to view them.

You can also customise tiles on the Start screen, which are shortcuts to your favourite menus and applications.





**NOTES:** When you are in a standby display after unlocking the phone, swipe your finger upwards to see the Start screen displaying application tiles.



## Tiles on the Start screen

A tile is an easily recognisable visual shortcut for an application or its content. You can place tiles anywhere on the phone Start experience.

Tiles that use the tile notification feature can update the tile graphic or title text, or increment a counter, enabling you to create a personalised, “at a glance” Start experience. Examples include displaying if it is your turn in a game, the weather, or how many email messages you have received.

The Start screen is always presented in portrait view.

Icon	Description
	Make calls, with quick access to recent callers, favourites, and all your contacts. Dial manually using the numeric keypad. Just tap the voicemail icon to listen to voice message you want, in any order you like.
	Touch to access People hub, the integrated communication application for emails, messages, contacts and other information.
	Send and receive SMS text messages. Conversations are saved in an instant chat style, so you can see a history of messages you've sent and received. Send MMS messages with a picture you've taken.
	Your Windows Phone works with Microsoft Exchange, Microsoft Outlook Web App and many of the most popular email systems, including Hotmail, Yahoo! Mail, Google and others. Save attached photos and graphics to your Saved Pictures.

Icon	Description
	Touch Play To to stream videos, music, and pictures from your phone to Digital Living Network Alliance (DLNA) compatible playback devices.
	With ScanSearch, you can search product and local information for streets, cities, or countries. ScanSearch allows you to view local business information, including locations and contact information.
	Enter events on your new Windows Phone. Subscribe to calendars. Set alerts to remind you of events, appointments and deadlines. Plus, they get synced back to the calendar on your Windows Live and vice versa.
	Touch to access the Internet Explorer.
	Access to Xbox LIVE to play a game and invite a friend to play it with you. Download new games onto your phone.
	View photos and videos you've taken with your new Windows Phone, received in Email or MMS messages, or synced from your computer's Zune Software. (Windows OS only) View them in portrait or landscape format. Zoom in on photos for a closer look. Send an email or MMS messages with attached photos.
	Play musics, videos and podcasts stored in the device by connecting to your PC to synchronise your stuff. Listen to FM radio. Go to marketplace.

---

Icon	Description
------	-------------

---



Search the Application Store for your Windows Phone applications and musics you can purchase or download, using your Wi-Fi or cellular data network connection. Read reviews or write your own reviews for your favourite apps. Download and install the applications on your Start screen.

---

**NOTES:** The arranged location, name, or design of tiles may vary by your setting status, area, service provider, plan, and version of Windows Phone software. Application functionality and availability may vary depending on the country or region where you purchase and use your Windows Phone. Contact your service provider for more information.

## Viewing the status bar

The status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you're likely to see in the status bar.



[Status bar]

Icon	Description
	Signal strength
<b>H</b>	HSDPA
<b>3G</b>	3G
<b>G</b>	2G-GPRS
<b>E</b>	2G-EDGE
	Data connection
	Call forwarding
	Roaming


Icon	Description
	Wireless network signal strength
	Bluetooth status
	Ringer mode
	Input status
	Battery power level
	System clock

## Customising the Start screen



You can customise the layout of Tiles on the Start screen. You can pin all sorts of things to the screen, including apps, websites, map locations, and even contacts. If you pin a contact to the Start screen, you'll get all of that person's feed updates-right from the tile.




To pin more applications to Start open the application list, touch and hold the item then tap pin to start.

- If you'd like to move a tile somewhere else on the Start screen, tap and hold the tile, and then move it wherever you want.
- To remove a tile, touch and hold it, and tap unpin .

## Navigating and setting applications

### Accessing applications

To access your Windows Phone's applications:

- 1 On the Start screen, tap the arrow  to access the application list.
- 2 Scroll down to the tile if it isn't already visible.
- 3 Select an application.
- 4 Press the **Back** button  to return to the previous screen; Press the **Start**  button to return to the Start screen.



#### NOTES:


- You can add a shortcut to an application by tapping and holding the application icon from the application list. You can move the application to the location you want on the Start screen.
- Your Windows Phone has a built-in motion sensor that detects its orientation. If you rotate the phone while using some features, the interface will automatically switch to landscape view.

## Getting to know the application bar

To set an application, you can use the below application bar and application bar menu at the bottom of the screen.

For example, to set the Alarms

- 1 On the Start screen, tap the arrow  to access the application list.
- 2 Tap **Alarms** .
- 3 Tap the application bar to see the application menu or to display icon buttons with the text hints.
- 4 Select the icon button or menu that you want to set.

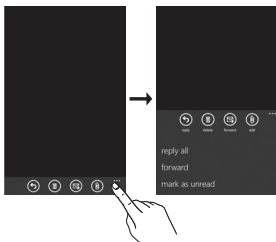

## Application bar

The Application bar provides a view that displays icon buttons with text hints and an optional context menu if you tap the visual row of dots or flicks up the Application bar. This view can be hidden again by tapping outside of the menu area or by tapping outside of the menu area or on the dots, using the back button, or selecting a menu item or Application bar icon.

## Application bar menu
































The Application bar menu is an optional way to access specific tasks from the Application bar. The Application bar menu can be accessed by tapping the visual row of dots in the Application bar or by flicking the Application bar up. This view can be hidden again by tapping outside of the menu area or on the dots, using the back button, or selecting a menu item or Application bar icon.

### NOTES:

- A maximum of five menu items can be displayed.
- If no menu items are displayed, only the icon text hints are displayed.
- The Application bar menu will remain on the screen until you perform an action.

## Application bar icons


The following are some of the application setting icons that are frequently used.

 new	 add	 minus	 check
 close	 cancel	 sync	 refresh
 question mark	 exclamation	 back	 next
 search	 delete	 save	 folder
 video	 camera	 e-mail	 settings
 favourites	 add to favourites	 download	 upload
 share	 edit	 overflow dots	
 play	 pause	 previous/rewind	 next/fast forward

## Customising your Windows Phone


Get more from your phone by customising it to match your preferences.

### Setting the current time and date

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > date & time**.
- 3 Flick the **Set automatically** bar and change the date and time and other options.

### Turning on or off the ringtone and sounds

You can adjust the Ringtone and sound like Ringtone, New text message, New voicemail, New email, and so on.

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > ringtones & sounds**.


### Switching to silent mode

You can switch the silent mode on or off by flicking the **Ringer** status bar left or right.

### Adjusting the volume of ringtones

Press the Volume key up or down to adjust the ringtone volume.

### Selecting a wallpaper for the Start screen

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > lock & wallpaper > change wallpaper**.
- 3 Select an image and save.  
You can also change the Screen time-out and password.


#### NOTE:

- LG is not responsible for any use of default images or wallpapers provided on your phone.

## Adjusting the brightness of the display

You can quickly adjust the display brightness by scrolling left or right on the indicator line of the screen.

To adjust the brightness in the setting menu,

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > brightness.**
- 3 Drag the slider for **Automatically adjust** to Off and tap the desired brightness level.

**NOTE:** The brightness level of the display will affect how quickly the phone consumes battery power.

## Locking your SIM card

You can lock your phone by activating the PIN supplied with your SIM card.

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings** and drag to select **application > phone.**
- 3 Drag the **SIM security** Slider to **On.**
- 4 Enter your PIN and select **enter.**

### NOTE:

- Once the PIN lock is enabled, you must enter the PIN each time you turn on the phone.
- If you enter an incorrect PIN too many times, your SIM card will be blocked. You must then enter a PIN unlock key (PUK) to unblock the SIM card.

## Entering text

You can enter text by selecting characters on the virtual keypad.

You cannot enter text in some languages. To enter text, please check out and select from the supported languages for writing. (**Settings > System > keyboard**)



## Entering text with the Phonepad

- 1 Tap the input panel icon.
- 2 Tap characters to enter your text.



## NOTES:

- The phone features several typing aids, such as text suggestions that appear above the keyboard, auto-correction, and context-specific keyboard layouts. (**Settings > System > keyboard**)
- Windows Phone 7 supports only full alphabet layouts, such as QWERTY, AZERTY, and QWERTZ.
- The shift key allows you to type capital letters. There are three shift modes: On, Off and Caps Lock (tap and hold).
- The emoticon key brings up the emoticons picker.
- Tapping and holding a, i, e, u, o on the screen displays an accent picker.


## Downloading applications from Marketplace

Marketplace lets you easily find and acquire music and applications (including games) to enhance your Windows phone.

Individual category pages have been added to the site for apps, games and music.

- On the Start screen, tap  to go to your App list and tap **Marketplace** . Or, tap the **Marketplace** tile from the Start screen.
- Press the **Search** button to search for apps and tap the search string again to edit and search.
- Type in the desired string and tap and the results are displayed below on the same page.
- Tap a **list item** to go to the correct Marketplace page.

- While browsing or searching for an app, you can tap on an application or game and the Details page for the app will appear.
- Select the item you want to buy and tap **download**.

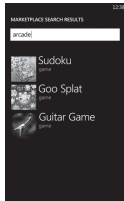

### NOTE:

- Pictures, podcasts, and videos are not available on Marketplace.
- This feature may not be available depending on your region.

## Getting Started

When you turn on your phone for the first time, you will be guided through essential settings. Please follow the instructions on the screen to activate your phone.

The following are the recommended steps.

**SELECT LANGUAGE > WINDOWS PHONE SETTINGS > TIME ZONE and sign in with your Windows Live ID**

### Signing in with a Windows Live ID



To get applications, play Xbox LIVE games, use a Zune Pass, automatically synchronise Windows Live information to the web and more, you need to sign in with a Windows LIVE ID.

Your Windows Live ID is the email address you use to sign in to services like Xbox LIVE®, Zune®, Hotmail®, and so on. If you can't remember the email address you use:

**For Xbox LIVE:** On your Xbox 360® console, sign in with your gamer tag, then press the Guide button on your controller (the one in the middle that looks like the Xbox logo). In Settings, click **Account Management > Windows Live ID**.

**For Zune:** Sign in to the Zune software on your PC. Right-click your profile picture and click Switch user to see your Windows Live ID. To reset your password or get a reminder,

go to <http://account.live.com/ResetPassword.aspx>.

If you haven't yet signed in with a Windows Live ID, there are a few things you won't be able to do on your phone at first (such as, get applications or play Xbox LIVE games).

## Importing your contacts




When you set up your email or Facebook account, your contacts are imported automatically into your People hub. And when you add Facebook, your friends' feeds appear in your People hub, their photos show up in your Pictures hub, and your own feeds pop up in your Me tile.

To set up a Facebook (or any kind of email) account:

- 1 Tap the arrow on the Start screen to go to your App list.
- 2 Tap Settings > email & accounts.

Getting your contacts from your old phone is also easy. Put your old SIM card into your new phone, and then go to Settings. Flick to applications, tap people, and then tap import SIM contacts.

## Staying in Sync

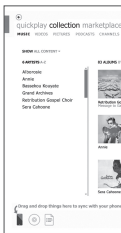






To sync your music, videos, pictures, and updates from your computer to your phone (or vice versa), you'll need the Zune software.

- 1 Go to [windowsphone.com](http://windowsphone.com) to install the Zune software.
- 2 Connect your phone to your computer using the USB cable.
- 3 Open the Zune software, and then follow the instructions to get your music, videos, pictures, and so on into your collection.
- 4 Click collection, and then drag everything you want to sync to the phone icon in the lower left.

## Communicating

### Phone


#### Making phone calls

- 1 Touch .
- 2 Tap .
- 3 Enter the number on the keypad. To delete a digit, touch .
- 4 Touch  to make a call.
- 5 To end a call, touch .

You can also place calls using the Phone tile on the Start screen. You can dial calls.

**TIP!** To enter “+” to make international calls, touch and hold down [0+].

#### Calling your contacts

- 1 Touch People to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching .
- 3 In the list, touch the contact you want to call, and then select the number to use if there is more than one for that contact.

#### Answering and rejecting a call

When your phone rings, tap the answer tab to answer.

Tap the **ignore** tab to reject an incoming call.

**TIP!** When the phone rings, Turn down the volume button on the left if you want to switch to silent ringer mode.

#### Flight mode (disable wireless communications)





Some locations may require you to turn off your phone's wireless connections by placing your phone in Flight mode.

Tap **SETTINGS > flight mode**. This features toggles your phone's mobile, Wi-Fi, and Bluetooth communications simultaneously.

#### Adjusting call volume


To adjust the volume during a call, use the volume up & down button on the left side of the phone.

## Making a second call

- 1 During your initial call, touch the  then tap add call .
- 2 Call the number, or search your contacts using the  or .
- 3 Touch the call icon to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch PRESS TO SWAP on the top of the screen to toggle between calls.
- 6 To end active calls, touch **end call**. If there is no active call, it will end the Hold call.

**NOTE:** You will be charged for each call you make.

## Viewing your call history

On the Start screen, press the  to view the Call log.


View a complete list of all dialed, received, and missed voice calls.

**TIP!** Touch any single call log entry to view the date, and time of the call.

**TIP!** Tap the Application bar tab, then touch **delete all** to delete all the recorded items.

## Call settings

You can configure phone call settings, such as call forwarding, and other special features offered by your service provider.

- 1 On the Start screen, touch .
- 2 Tap the Applications bar at the bottom of the call history screen and open the **Call Settings** menu.
- 3 Scroll and tap call settings and choose options that you want to adjust.

**Voicemail number** - Edits the voicemail number


**Show my caller ID to** - Choose whether to display your number on an outgoing call.

**international assist**- Helps to automatically correct some common mistakes while dialling internationally or dialling while abroad.

## Searching for a contact


There are two ways to search for a contact:

### On the Start screen

- 1 On the Start screen, touch the **People** hub tile to open your contacts (People hub).
- 2 Touch  and enter the contact name using the keypad.


**TIP!** To search for the initial of a name, touch the Contacts tab at the top of the screen and select Groups. This will display a list of all your groups.

### From the application menu

- 1 On the Start screen, touch  to go to the applications menu.
- 2 Touch the People application and select the desired profile.

## Adding a new contact

- 1 On the Start screen, touch the People application.

- 2 If you want to add a picture to the new contact, touch . You can use a saved picture or take a new one.
- 3 Touch the desired item and tap a text field to open the touch keyboard.
- 4 Touch the **Done** icon to save the current added information.
- 5 Touch a category of contact information and enter the details about your contact.
- 6 Touch the save icon to save the Contact

### TIP!

- Tap the Application bar tab, and then touch “delete” to delete the contact you just saved.
- When you long tap a contact in a people list, a short menu that you can choose to pin to start, edit and delete appears.

## Favourite Contacts



You can classify frequently called contacts as favourites.



### Adding a contact to your Favourites (Pin to the Start screen)


- 1 On the Start screen, touch  to open your profile contacts.
- 2 Touch a contact to view the details.
- 3 Touch **Pin to start** on the application menu, and then your favourite contact pins to Start screen.

## Messaging


### Sending a text message

- 1 On the Start screen, tap **Messaging**  > **New** .
- 2 Do one of the following:
  - Begin typing a person's name in the To: box, and then tap a matching contact name in the list. Repeat to add more recipients, and their names will be added automatically in the To: box.



- Enter the person's mobile phone number or their email address in the To: box. To enter additional recipients, tap Enter after each one.
- Tap **Add** , flick to a contact, and then tap it. Repeat to add more recipients, and their names will be added automatically in the To: box.
- 3 Tap the message box, type your message, and then tap **Send** .

**NOTES:** If you want to attach data on your messaging, touch  at the bottom of the screen and choose the desired file. Remember that you are able to attach pictures only.

### Replying to a text message

- 1 On the Start screen, tap **Messaging**, and then tap the conversation that has the text message you received.
- 2 Tap the message box, type your response, and then tap **Send** .

## Forwarding a text message


- 1 On the Start screen, tap **Messaging** , and then tap the conversation that has the text message you want to forward.
- 2 Tap and hold a message, and then tap **Forward**.
- 3 Type the person's name, mobile phone number, or email address in the To: box.
- 4 Tap the message box, type a message if you'd like, and then tap **Send** .

### NOTES:

- Your mobile operator might charge you extra for text messaging, and this service must be available with your current phone plan.
- Text messages are also called SMS (Short Message Service) messages and can be up to 160 characters long.
- If your text message is longer than 160 characters, it will be sent in one or more additional messages.
- Sometimes mobile operators will send a text message that you can't reply to

or forward, and the message box says Read-only message.

## Saving a picture from a text message

- 1 On the Start screen, tap **Messaging** .
- 2 Tap a conversation that has a picture, and then tap the picture.
- 3 Tap and hold the opened picture, and then tap Save to phone. The picture is saved in the Saved Pictures album on your phone.

### NOTES:

- Your mobile operator might charge you extra for text messaging, and this service must be available with your current phone plan.
- Text messages that have a picture attached are also called MMS (Multimedia Message Service) messages.
- Some pictures you receive might be protected using digital rights management and can't be saved to your phone. However, the picture can still be set as the wallpaper on your phone.

## Email

### Setting up an email account

Whether it's personal or work-related email, you can use it on your Windows Phone by setting up different types of email accounts. Depending on the email account you set up on your phone, other items from your account (such as contacts, calendar, and more) can be retrieved as well.

**NOTE:** To set up an email account on your phone, you must have a working cellular data or Wi-Fi connection. For more information about connecting to a Wi-Fi network, see [Connect to a Wi-Fi network](#).

### Setting up a Windows Live account

When you're first setting up your phone, you're asked to sign in with your Windows Live ID. If you didn't sign in with it at that time or if you have more than one Windows Live ID, you can use the steps below to set up your primary Windows Live ID or additional Windows Live IDs.

On the Start screen, flick left to the Apps list, tap  **Settings**, and then tap **Email & accounts**.

1 Tap **Add an account > Windows Live** and follow the instruction on the screen.

#### NOTES:

- The first Windows Live account that you set up can't be deleted from your phone.
- If you set up additional Windows Live IDs on your phone, photos in those additional accounts won't be synced to your phone.
- You can create a Hotmail account here and retrieve new email messages from Hotmail to your Inbox. When you access this Hotmail application, the number of new emails is displayed on the email tile.


## Setting up a Microsoft Exchange email account

You can use the following steps to set up an email account that is on a Microsoft Exchange Server. (For example, your email account at work might be on a Microsoft Exchange Server.) You can also use the steps in the following procedure to set up other email accounts that use Exchange ActiveSync—including a hosted Microsoft Exchange email account or an Outlook Web App account.

- 1 On the Start screen, flick left to the Apps list, tap  **Settings**, and then tap **Email & accounts**.
- 2 Tap **Add an account > Outlook**.

## Setting up an email account from an Internet Service Provider (ISP)

When you set up an email account, your phone will try to automatically find correct settings for your email account. The email account might be one that's through your Internet Service Provider (ISP), or it might be another IMAP or POP email account from another provider.

- 1 On the Start screen, flick left to the Apps list, tap  **Settings**, and then tap **Email & accounts**.
- 2 Tap **Add an account > Other account**.



The following is a list of settings that you'll need to know beforehand when the correct email account settings can't be found automatically. Generally, you can find this information on the provider's website.


- The email account type (POP or IMAP)


- The incoming email server address
- The outgoing (SMTP) email server address
- Server authentication settings
- SSL requirements for incoming email
- SSL requirements for outgoing email

## Sending an email message

After you set up an email account on your phone, you can send or receive emails on that account.

- 1 On the Start screen, tap the email account that you want to access (for example, Outlook, Google, or Windows Live).
- 2 Tap New .
- 3 Do one of the following:
  - In the To: text box, tap Add , and then choose a contact.
  - Tap in the To: text box, and then start typing an email address. Your phone will offer suggestions as you type.



- To remove a recipient, tap their name or email address, and then tap Remove.
- 4 Tap in the Subject: text box and type a subject.
  - 5 Tap below the Subject: text box, type your email, and then tap **Send** .

**NOTE:** You can attach pictures by tapping  before sending it.

## Viewing email messages

- 1 On the Start screen, tap the email account that you want to access (for example, Outlook, Google, or Windows Live).
- 2 Select an email message.

**From the message view, use the following options:**


- To reply to or forward an email, tap **Respond** , and do one of the following:
  - To delete one email, tap on the email to open it, and then tap **Delete** .

- To delete multiple emails, tap on the far left of an email you want to delete. A check box will appear. Tap the check box next to each email you want to delete, and then tap **Delete**.

### Retrieving your email

You can automatically or manually check your account for new email.

#### To check manually:

- 1 Tap  on the Start screen to go to your App list and tap Email application.  
Or, you can also tap the Email tile on Start screen, and which is the account you want to use, like Hotmail, gmail, and so on.
- 2 Choose synchronise and your Windows phone will then connect to your email account and retrieve your new messages.


#### To check automatically :

- 1 Windows phone retrieves emails automatically as the setting of the account.

- 2 You can change the period of retrieving(syncing) by changing "download email from" setting. (Please refer to the next category "Changing your email account's setting" for details.)

### Changing your email account's settings

You can set up additional accounts based on your own preferences.

- 1 Tap  on the Start screen to go to your App list and tap Email application. Or, you can also tap the Email tile on Start screen.
- 2 Touch the Application bar at the bottom of the screen to open the options menu, and tap add email account.
- 3 Choose the email you want to add. There are options such as Windows Live, Outlook, Yahoo! Mail, Google and other account.
- 4 Enter your email address and password, then it will automatically synchronise with your new email account.


You can change settings based on your own preferences.

- 1 Touch the Application bar at the bottom of the screen to open the options menu, and tap settings.
- 2 You can change detail sync options by tapping "sync settings" or checking/dischecking "Always bcc myself" and "Use an email signature".

**NOTES:**

- In "sync settings" you can change the settings below  
download new content : the period of retrieving contents  
download email from content to sync (email, contacts, calendar) : enable/disable the contents and other detailed account information.

### Deleting your email account

- 1 Tap  on the Start screen to go to your App list.
- 2 Tap Settings and go to email & accounts.
- 3 Touch and hold the account you want to delete and tap delete.

## Facebook

### Setting up a Facebook account

When you set up your Facebook account on your phone, Facebook info is available throughout your phone. You can then access Facebook info in the People hub, Pictures hub, and the Me card.

- 1 On the Start screen, flick left to the Apps list, tap **Settings > Email & accounts**.
- 2 Tap **Add an account > Facebook**.

**NOTES:**




- To set up your Facebook account on your phone, you must have a working cellular data or Wi-Fi connection.
- You can only have one Facebook account set up on your phone at a time. If you want to add a different account, you'll need to delete the existing one on your phone first.


## Entertainment

### Camera

Before using the camera, you will be asked whether you want to allow it to use your location. Allowing this option will add location info to your pictures, so you can see where they were taken.

#### Taking a picture

- 1 On the Start screen, flick left to the Apps list.
- 2 Tap  **Camera**.  
Or press and hold the Camera key to start the camera.
- 3 Make sure the camera mode  is selected. Hold the phone steady, either vertically or horizontally. You can zoom in or out  to get closer or further away from your subject.

**TIP!** Want to play with camera settings? Tap  to adjust various settings, including flash.

- 4 Press the Camera key to take a picture.
- 5 The picture is automatically saved in the Camera Roll album on your phone.

You can also choose to upload pictures to the Web, including automatically sharing your pictures to SkyDrive or Facebook.



#### Once you've taken the photo

- 1 After you take a picture, flick right to see it in the picture viewer.

**TIP!** Want to see your pictures and videos in filmstrip view? Go to the camera, tap a picture or video, pinch it as if to shrink it and then flick left or right to see the filmstrip. The filmstrip works best when you turn your phone sideways and use a in landscape view.

- 2 Tap and hold the picture to view picture options, such as adding it as a favourite, deleting it, using it as wallpaper, or uploading it to Messaging or Play To.

## Recording a video

- 1 On the Start screen, flick left to the Apps list.
- 2 Tap  **Camera**.  
Or press and hold the Camera key to start the camera.
- 3 Make sure the video mode  is selected. Hold the phone steady, either vertically or horizontally.
- 4 Press the Camera key to start or stop recording.  
The video is automatically saved in the Camera Roll album on your phone.

## After shooting a video

- 1 After you record a video, flick right, and then tap it to play it in the video viewer.

A still image representing your video will appear on the screen and the duration will be shown on the bottom of the screen.

**NOTE:** If your Windows Phone has 288 MB RAM or higher, and your phone has added the option, you can record and play HD video (1280x720 high-def resolution). If you connect your phone to your computer and copy the video to it, you can play HD video in its full 1280x720 resolution.

#### TIPS!

- If you want to watch videos downloaded from a website on your phone, connect your phone to your PC and sync them to your phone. You can't automatically download videos to your phone.
- To find a video you took on your phone that you synced to your computer, open the Zune software, then click **Collection > Videos**.
- If you have a lot of pictures or videos that you want to delete, or if you want to save them to your computer, you can save time by connecting your phone to your computer and using the Zune software to do the work for you.

### Adding location info to my pictures

If you include location (GPS) information in the pictures you take, the information can be seen by others after you upload and share them. Once you do, you and your friends can have fun viewing these pictures on a map

using Bing and Windows Live Photo Gallery, and even searching the Web for other pictures just like it because the location is embedded in your picture behind the scenes.

- 1 On the Start screen, flick left to the Apps list, and tap Settings > Applications > Pictures + Camera.
- 2 Turn on Include location (GPS) info in pictures you take.

**NOTE:** If you want this information to stay with your pictures when you upload them to Facebook or SkyDrive, turn on Keep location info on upload pictures.


### Getting to know the Camera mode

**Camera/Video Record mode** - Tap this icon to switch between Camera/Video Record modes

**Zoom** - Zoom in or zoom out.

**Settings** - Touch this icon to open the settings menu. See Using advanced settings. Allows you to set up Intelligent Shot, Beauty shot, ScanSearch, Photo Resolution, and so on.

## Using Photo/Video Smart Settings

From the viewfinder, touch  to open all smart settings options.

You can change the settings by scrolling the wheel.

After selecting the appropriate option, tap and set the related setting.

Setting Options	Function
Intelligent Shot	Your Windows Phone automatically sets the shutter speed and aperture according to the subject and brightness for the optimum photograph.
Beauty Shot	Your new Windows Phone automatically sets the focus and colour balance to express the natural skin tone.
ScanSearch	You can directly to the ScanSearch application mode.
Photo resolution	The more pixels, the larger the file, which means that files take up more memory space. If you want to store more pictures on your phone, you can reduce the number of megapixels to make the files smaller.
Brightness	Brightness enables you to set the recording brightness according the lighting conditions.
White Balance	Automatically adjusts the colour of the subject. You can record in natural colours depending on the subject and lighting conditions.

Setting Options	Function
Colour effect	Select the desired setting options on the menu: <b>off, sepia, mono, negative, solarise</b>
Quality	Choose between <b>Super fine, Fine, and Normal</b> . The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the phone's memory.
Anti-shake	Reduce blur caused by vibration or movement.
Flash	Using the Flash function, you can set the built-in flash to fire under low light conditions.
Video Resolution	The more pixels, the larger the file size, which means that files take up more memory space. If you want to store more videos on your phone, you can alter their resolution to make the files smaller.
Restore to default	Reset menus and shooting options.

**NOTE:** Before taking a photo, you can tap **Settings > Applications > pictures & camera** to access the following settings: GPS, SkyDrive.

## Pictures

Learn to view photos and play videos saved in your phone's memory. In case of videos, you are able to view the only video recorded in a camera.

### Pictures hub

The Pictures hub is your Windows Phone's digital version of those pictures in your wallet. Show off all the pictures you took with the camera on your phone, saved from emails or text messages, or downloaded from the Web or from your PC.



- Times Square wall. A showcase of local pictures from your All view. The mosaic of picture-perfect moments

changes every fifth time you turn on your phone. If you sync your phone using the Zune software before you visit the Pictures hub, you'll see your pictures here when you arrive.

- What's new? These are the latest pictures your friends and family uploaded to Windows Live or Facebook.
- Picture collection. You can view your pictures and videos by album, date, or favourites. When you add a picture as a favourite as part of your Favourites album, you can then pin that album to the Start screen.
- Hub background. Tap anywhere in the hub to change the background, or let us do it for you using any of your pictures. Either way, changing the background will also change the Pictures tile on the Start screen.
- Zune software. Sync files using My Phone to move pictures from your PC into albums on your phone and vice versa.

**NOTE:** When you go to the Pictures hub for the first time, you'll see 8 pictures from the 7 folder in the Times Square wall. To see a mosaic of your own pictures here, you need to tap the 7 folder to delete it. The Times Square wall will now randomly take pictures from your Camera Roll, as well as albums you sync from your PC or your social networking sites.

### Supported file formats

Type	Format
Image	Extension: bmp, gif, jpg, png, tiff
Video	• Extension: mp4 • Codec: MPEG4

**NOTE:** Phone only Supports JPG file format when sharing picture files using Zune PC client.

- Some file formats are not supported depending on the software of the phone.
- If the file size exceeds the available

memory, an error can occur when you open files.

### Albums

Picture albums are a big part of how you organise your pictures and videos on your phone, on your computer, and on the Web. Knowing where albums can be added to and deleted from will help keep everything in working order. The Zune software puts pictures from your phone albums—Camera Roll, Saved Pictures, and Received Pictures—into the Pictures library on your computer.

**NOTE:** With the exception of viewing and deleting albums, all other album tasks must be completed using the Zune software on your computer.

### Viewing a picture

- 1 On the Start screen, tap the arrow to go to your App list and tap **Pictures**. Or, tap the **Pictures** tile from the Start screen if it's pinned as a favourite tile on the screen.
- 2 In Pictures, scroll and go to picture albums (all, date, favourites) and tap a photo tile to open and view.

While viewing a photo, use the following options:

- To view more photos, scroll left or right.
- When you long tap a picture, a short menu that you can choose to delete, share, and add to favourites appears.
- To zoom in or out, tap the screen with two fingers and move them apart (move your fingers closer together to zoom it).

### Playing a video

- 1 In Pictures, scroll and go to picture albums (all, date, favourites) and tap a video tile to open and view.
- 2 Tap a video tile to view.
- 3 Rotate the phone anti-clockwise to landscape view.
- 4 Control playback with the virtual keys.

### Sharing pictures

- 1 On the Start screen, tap Pictures.
- 2 Find a picture you want to share. Pictures from online albums can't be

uploaded.

- 3 Tap and hold the picture, then tap **Share**.
- 4 Choose how you want to share or upload your picture to the web—text or email message, or sharing to **SkyDrive**.

**NOTE:** SkyDrive is part of Windows Live, a password-protected service on the Web (photos.live.com), where you can store and share documents and pictures up to 25 GB for free. Sign in with your Windows Live ID and you're all set.

**TIP!** After you upload your pictures to SkyDrive from your phone, you can find and edit them within Windows Live Photo Gallery on your computer without having to connect to the web. You must have a computer running Windows Vista or Windows 7. To see if you have Windows Live Photo Gallery installed, from your computer, click the Start button . In the search box, type photo gallery, and in the list of results, click Windows Live Photo Gallery.

## Favourites in the Pictures gallery

Using the Favourites album on your Pictures hub has the advantage of putting your most interesting pictures in one place for easy viewing. Pictures in Favourites are also the only ones you can pin to the Start screen (if you have certain pictures that make you happy every time you see them).

- 1 On the Start screen, tap **Pictures**, and find a picture and tap to open it.
- 2 In the picture viewer, tap and hold the picture, and then tap **Add to Favourites**.

**TIP!** Want to add a picture from an online album as a favourite? Open a picture, tap it, and then tap Save to phone. The picture will be added to the Saved Pictures folder (in the Pictures hub, go to All > Saved Pictures). Find the picture, and then follow Step 2 above to add a saved picture as a favourite.

## Adding or deleting a caption from a picture

### Adding a caption

You can add captions to pictures that you upload to Facebook or Windows Live.

- 1 Tap the picture, and then tap Share.
- 2 Choose an account to upload your picture to.
- 3 Tap the text box to type a caption. You have 4 seconds to start typing or the picture will be uploaded without a caption.
- 4 Tap Upload .

### Deleting a caption

You must be on your computer to delete a caption, and you can only delete a caption from a picture that you've uploaded.

- 1 Find your picture.
- 2 Sign in and follow the steps provided by Facebook or Windows Live to delete a caption.

## Adding location info to my pictures

When you include location (GPS) information in the pictures you take, the information can be seen by others after you upload and share them. Once you do, you and your friends can have fun viewing these pictures on a map using Bing and Windows Live Photo Gallery, and even searching the Web for other similar pictures, because the location is embedded in your picture behind the scene.

- 1 On the Start screen, flick left to the Apps list, and tap **Settings > Applications > Pictures + Camera**.
- 2 Turn on Include location (GPS) info in pictures you take.

**NOTE:** If you want this information to stay with your pictures when you upload them to Facebook or SkyDrive, turn on Keep location info on upload pictures.

## Music & Videos

### Zune software

Sync files with my phone to move music & videos from your PC into your phone and vice versa.

### Getting music, videos, and podcasts from Marketplace

Zune Marketplace is your one-stop shop for great music, podcasts, movies, videos, TV shows and more. Some things are free to play, download or sample. Other items are available to buy or rent.

There are two ways to access Zune Marketplace:

### Downloading or streaming music directly to your phone

- 1 On the Start screen, tap **Music & Videos**.
- 2 Flick to Zune, and then tap **Marketplace**.
- 3 Find a song, album, artist or playlist by doing one of the following:
  - Flick left or right, browse through

the available categories, then tap the desired item.

- Press the Search button , enter a song title, album title or artist name, then tap the desired item.
- 4 Follow the instructions to get your music, videos, pictures, and so on into your collection.

## Downloading music, podcasts, videos, movies, and TV shows on your PC

- 1 Go to **windowsphone.com** to install the **Zune software**.
- 2 Connect your phone to your computer using the USB cable.
- 3 Open the Zune software, then follow the instructions to get your music, videos, pictures, and so on into your collection.  
If you're not signed in, click Sign In. If you have multiple Windows Live ID accounts, enter the one you used when you set up your phone.
- 4 Click **collection**, and then drag everything you want to sync to the phone icon in the lower left.

**NOTE:** Not all items are available for purchase, rental, download or streaming. Zune Marketplace is not available in all locations or languages. Zune Marketplace content varies by market. To learn more about using Zune Marketplace, go to **Zune.net**.

## Supported file formats

Type	Format	Sync from Zune SW
Audio	Extension: mp3, mp4, m4a, wma Codec: MP3, AAC, WMA	Extension: mp3, mp4, m4a, wma Codec: MP3, AAC, WMA
Video	Extension: 3gp, 3g2, mp4, m4v, wmv Codec: MPEG4, H263, H264, VC-1	Extension: mp4, m4v, wmv Codec: MPEG4, H.264, VC-1

## Playing music, videos and podcasts

Your Windows Phone isn't just a phone, it's also a great Zune music and video player.

Listen to music while you surf the Web or check your email, catch up on your favourite podcasts while commuting, or enjoy a movie on your next flight. There's no need carry another device with you. Windows Phone has all your entertainment needs covered.

- 1 On the Start screen, tap **Music & Videos**.
- 2 Flick to **Zune**, and then tap **Music**, **Videos** or **Podcasts**.
- 3 Find the item you want to play by doing one of the following:
  - Flick left or right, tap a category (such as Artists, Albums, or Songs), and flick up or down as necessary.
  - To search Zune Marketplace, press the Search button, and then enter a song title, album title or artist name. (Zune Marketplace may not

be available in some countries or regions.)




- 4 Tap the item you want to play. If you need to adjust the volume, press the Volume Up or Volume Down buttons on the side of your phone.

### TIP!

- There's a quick way to play all your music in random order. Flick to Zune, and then tap Play. This icon is next to Music.
- If you have a lot of items in a category (such as Songs or Albums), there's a quick way to jump to a particular point in the list without a lot of scrolling. For example, let's say you're at the top of the Songs list (in the "a" section) and you want to play a song that starts with the letter "s". Tap the coloured box with the letter "a" in it. In the grid of letters that appears, tap S.

## Adjusting playback

- 1 When playing an item, use the following controls to adjust playback (some controls aren't available for all media types, such as videos).

Tap this	To do this
	Music: Tap the album image, and then tap Repeat to play the current playlist repeatedly.
	Music: Tap the album image, and then tap Shuffle to play the items in the current playlist in random order.
	Ratings can help you organize your music collection: Sorting songs, artists, or albums by rating gives you a quick look at which ones to get rid of if you need more space.


Tap this	To do this
	Music: Tap to skip to the beginning of the current song or to skip to the previous song in the playlist (the function depends on how much of the song you've played so far). Videos and audio podcasts: Tap to skip backward seven seconds. All: Tap and hold to rewind the current item.
	Music: Tap to skip to the next song in the playlist. Videos and audio podcasts: Tap to skip forward 30 seconds. All: Tap and hold to fast forward the current item.
	Tap to pause playback.
	Tap to play.

**TIP!**

- When playing songs or audio podcasts, you can also skip to the next and previous items in the playlist by flicking right or left.
- When playing videos, tap the screen to display the playback controls. Press the Back button to return to Music & Videos.
- Press the Volume Up or Volume Down buttons to show the mini playback controls. This works even when the screen is locked.

**Showing the current playlist**

When you're playing music, the next few items in the playlist are displayed beneath the album image. To see all items in the playlist, do the following:

- 1 Tap the name of the current song (beneath the album image).
- 2 To hide the playlist, wait a few seconds or press the Back  button.

**TIP!** To play a different song in the playlist, flick up or down as necessary, and then tap the name of the item you want to play.

**Showing what's playing now**

- 1 Do one of the following:
  - Press the Volume Up or Volume Down buttons. The name of the current song is shown above the mini playback controls. This works even if your phone is locked.
  - In Music & Videos, flick to History.

**Showing related info about a song**

- 1 In **Music & Videos**, when playing a song, tap the artist name.
- 2 Flick left or right to see information (when available), such as other albums by this artist, album reviews and artist biographies.

## Games

### Games hub

From the Games hub, you can play games not just on the phone; you can also connect to and extend your gaming experience to your computer and your Xbox console.

- **Spotlight.** Read up on Xbox LIVE game news, tips and trends from the Xbox LIVE team.
- **Xbox LIVE Gamer Profile.** Look at your profile to view recently played games, see your gamercard, change account information and even personalise your avatar.
- **Requests.** View invitations to quickly jump into game play, keep up with turn notifications in a turn-based game or accept a nudge from your buddy to make the next move.
- **Collection.** View all Xbox LIVE and other games that you have on your phone in one place.

### Playing a game

Xbox LIVE might not be available in your area. If it is available and you want to play games, use an existing Xbox LIVE account or set one up. You'll need to install the game on your phone before you can play it.

- 1** On the Start screen, tap **Games**.
- 2** Flick left to Collection and tap to open a game you've already purchased. If you want to play an Xbox LIVE game, you'll need to sign in to (or join) Xbox LIVE.
- 3** If you want to see whether you have a game invitation or a turn notification, flick left to Requests. If you want to play a game with a friend, but don't have any games on your phone that allow more than one player, flick to the bottom of your collection, then tap Get more games to see what you can try or buy from Marketplace.

**NOTE:** Xbox LIVE may not be available in your country or region.

## FM Radio

Learn to listen to music and news on FM radio. To listen to the FM radio, you must connect the supplied headset, which acts as the radio antenna.

### Listening to a station

- 1 Plug the supplied headset into the device. (this doubles as an antenna).**
- 2** On the Start screen, tap **Music & Videos**.
- 3** Flick to **Zune**, and then tap **Radio**.
- 4** To choose a station, do one of the following:
  - Swipe left or right to go up or down the dial.
  - When you long tap a dial on radio, a short menu that you can choose to pin to start, settings, radio mode: speaker appears.



- Tap Favourites (★) to show your favourite stations.

#### TIP!

- Tap Play (▶) or Pause (⏸) to start or stop play.
- When the screen is locked, press the Volume Up or Volume Down buttons to show the mini playback controls. You can use the controls to pause or resume the radio or to skip to the next or previous station.

## Adding or remove a favourite station

To tune into stations more quickly, try adding a few as favourites.

- 1 Tune in to a station.
- 2 Do one of the following:
  - To add the station as a favourite, tap Add Favourite .
  - To remove the station as a favourite, tap Remove Favourite .

**TIP!** To show your favourite stations, tap Favourites . You can also pin your favourite station to the Start screen by pressing and holding the station number.

## Switching between speaker and headset modes

- 1 While playing a station, tap and hold the station number.
- 2 Tap Radio mode: headset or Radio mode: speaker, to switch between the two options.




## Switching radio regions

If you travel internationally, you might need to switch the radio region setting to listen to FM radio when you're abroad. If you do change this setting, don't forget to switch it back to the original setting when you get home.



- 1 While playing a station, tap and hold the station number.
- 2 Tap **Settings**.
- 3 On the Radio screen, tap the Region box, and then tap the name that corresponds to your desired radio region.

## Utilities

### Setting an alarm




- 1 Tap  on the Start screen to go to your App list and tap the **Alarms**  application.
- 2 If you want to add a new alarm, tap  on the bottom option menu bar. There are preset alarms you can activate.
- 3 Touch Time to set the time you want the alarm to sound.
- 4 Set the repeat.  
The icons indicate the weekday you select.
- 5 Choose the sound you like and name on it. When the alarm setting is done, touch  at the bottom of the page.



### Using your calculator

- 1 Tap  on the Start screen to go to your App list and tap the **Calculator**  application.
- 2 Touch the number buttons to enter numbers.

- 3 For simple calculations, touch the function you want (+, -, x, or ÷), followed by =.



### Adding an event to your calendar

- 1 Tap  on the Start screen to go to your App list and tap the **Calendar**  application.
- 2 Touch  to make a new appointment.
- 3 Tap Subject to make a title for the appointment.
- 4 Tap Location to enter where it's happening.
- 5 Tap When to choose a date, and then choose the time you want the appointment to begin.
- 6 Tap How long to choose the time the appointment lasts.
- 7 If you would like to set reminder, occurs and status, touch more details and select the options you want.

- 8 If you want attendees to add the appointment, tap add someone to choose a contact. you can also check if it is private and make some notes.
- 9 Touch **Save** to save the appointment in the calendar. A coloured square in the calendar will mark all days that have saved appointments.
- 10 You might want to change the appointment details or delete them. Touch  to modify them or touch  to remove them.

## Office

You can manage and view document files. Supported file types are doc, docx, txt, xls and xlsx.

- 1 Tap  on the Start screen to go to your App list and tap the **Office**  application.
- 2 To create one note, tap new note and keep track of stuff at home, school, or work.  
To view all your notes, tap All.
- 3 To view or edit explore Excel, Explore Word, Explore PowerPoint files, flick to Documents.
- 4 Touch and hold any file, and the options send, delete, properties will appear.

## Windows applications


- 1 First, set up a Windows account. Enter your user name and password.
- 2 After signing in, the contacts, email, and calendar in your Windows account will automatically synchronise with your Windows Phone 7.

**TIP!** If you change your Windows Live ID account after signing in or delete it, follow the steps below:  
**Applications > Settings > system > email & accounts > add an account > Touch and hold Window Live ID to synchronise or delete.**

### Maps


Check your current location and receive directions to your destination. Your Windows Phone 7 must be connected to Wi-Fi or 3G/GPRS.

### me

Tap  to search for your location. This is actually where your phone is. You can see your location more accurately by double tapping or pinching and stretching the screen.

You can also pin it to the Start screen, or share it by messaging or hotmail.


### search

Tap  and enter the location you want to find out. It will move the map to the place.

**NOTE:** If you turn aerial view on at the bottom of the page by flicking upward and tapping it, you can search for the aerial location. It even describes nearby buildings and views.

## Marketplace

Marketplace lets you download useful applications, and music and games. If you install these from Marketplace, they appear in your App list.

- 1 Tap  on the Start screen to go to your App list and tap the **Marketplace** application. You can also tap the **Marketplace** tile on the Start screen.
- 2 Marketplace has three categories - apps, games and music. Select the one you want to install or download.

## Hotmail

Hotmail is configured when you first set up your phone. Depending on your synchronisation settings, Hotmail on your phone is automatically synchronised with your Windows account on the Web.

The inbox conversations list is your default Hotmail view.


Touch the Menu button, then touch Refresh to send or receive new emails and to synchronise your emails with your Windows account on the Web.

## The Web

### Browser

Browser gives you a fast, full colour world of games, music, news, sports, entertainment, and much more- right on your mobile phone. Wherever you are and whatever you're into.

### Accessing the Web

1 Tap  on the Start screen to go to your App list and tap the **Internet Explorer** application. You can also tap the **Internet Explorer** tile on the Start screen.

2 You will move to the website.

**NOTE:** Additional charges apply when connecting to these services and downloading content. Check data charges with your service provider.

### Using options

Touch the Menu options bar to find more options.

**forward** - Go forward to the visited page.

**share Page** - Send the page link by Email or Messaging.

**find on page** - Highlight the thing you want to find on a page.

**pin to start** - Pin the page to the Start screen for quick launch.

**setting** - Set the options below

**Allow cookies on my phone**


**Let Bing suggest sites as I type**

### Website preference


**Mobile version**

**Desktop version**

**delete history** - Delete all temporary files, history, cookies and saved passwords from Internet Explorer.

 **add** - Add the page to favourite

 **favourites** - Access a / Edit favourite pages and history pages.

 **tabs** - Use tabs as a navigator for switching between sets of pages.

## Connectivity

### Bluetooth

#### Turning on the Bluetooth wireless feature



- 1 On the Start screen, tap the arrow (→) to go to your App list.
- 2 Tap **Settings > System > Bluetooth**.
- 3 **To turn on Bluetooth, drag** the slider of the **status** to **On**.
- 4 Starts to search for Bluetooth devices.
- 5 Tap a device which you want to pair with.

#### Connecting to a Bluetooth headset

Once paired, you can connect to a Bluetooth device as needed.

- If Bluetooth is off, touch Bluetooth to turn it on. In the list of Bluetooth devices, touch the name for the paired device on the list.

#### NOTE:


- If you want to turn off your Bluetooth later, go to Settings, then tap Bluetooth and slide the toggle left to the Off position.
- Once Bluetooth has been set up, the Windows Phone 7 recognises it when it is turned on.
- Windows Phone 7 does not support the Bluetooth file transfer function between cell phones. For more information about Bluetooth, see FAQ.

## Wi-Fi

Learn to use your phone's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 b/g/n standards. You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available. Your device uses a non-harmonised frequency and is intended for use in all European countries. WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.



## Connecting to a wireless network

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings** > **System** > **Wi-Fi** to connect to a wireless network.
- 3 Move the slider to **On** to turn on wireless connections. In most cases you'll see both secure and unsecured networks.
- 4 Now tap the network you want to connect to.
- 5 On the next screen, tap the text fields. Then type your user name or password.
- 6 Tap **done** to finish.

**NOTE:** To guard against accidentally connecting to an incorrect network with the same name, this warning will appear. Tap connect if you're confident it is the correct network.

## Editing your Wi-Fi connection

Suppose you need to change the settings for a wireless network, or the network doesn't appear.

- 1 Go back to the Wi-Fi Settings screen to select the network to edit, and then tap and hold the network you want to edit.
- 2 Tap **edit** to change the collected by your new Windows Phone.
- 3 If you need to edit your user name and password, go through the network settings.
- 4 If you need to add or edit proxy information, do it here. Tap and hold to get proxy options.
- 5 If you need to edit the network information, type in the appropriate fields. You'll need to get the new settings information from your network administrator.

### NOTE:

- Scroll down to see other network options. This information should be automatically entered by Windows Phone 7 when it identifies your network.
- To turn off a wireless network, go back to the Settings screen, and set **Wi-Fi** to **Off**.
- When you turn Wi-Fi back on, your phone will remember the network settings and automatically connect.

## Play To


Learn to use Play To compatible with the Digital Living Network Alliance (DLNA) service that enables you to have contents in your phone play with DLNA DMR-enabled devices in your home over a Wi-Fi.

Before you start, you must first activate the Wi-Fi feature and add a Wi-Fi profile.

### NOTES:

- Some files may not play on devices compatible with DLNA-DMR depending on the devices.
- Playback may be buffered, depending on the network connection and the connected DLNA DMR-enabled players.


## Playing your files on another DLNA-DMR enabled device

- 1** On the Start screen, tap the arrow  to go to your App list and select **Play To**.
- 2** Tap **Device** icon on the notification bar and choose a target. Your device automatically searches for DLNA DMR-enabled devices.
- 3** Select a media category > a file.
- 4** Playback begins at the selected player.
- 5** Control playback using icons of your phone.

### NOTES:

- Playback may be buffered, depending on the network connection and the connected server.
- You can search DLNA DMR-enabled devices only if they are turned on.

## Settings

In this menu, you can personalise the settings on your phone. Touch  on the Start screen to go to app list and tap settings.

### system

#### ringtones & sounds

Set Ringer and Vibrate and choose Ringtone, New text message, New voicemail, New mail.

Set to play a sound for Appointment reminders, Key press, Lock and unlock, All other notifications.

#### theme

Change your phone's background and accent colour to suit your mood today, this week or all month.

#### flight mode

Toggle your phone's mobile, Wi-Fi, and Bluetooth communications simultaneously. You'll still be able to toggle Wi-Fi and Bluetooth separately.

### Wi-Fi

Turn on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Set network notification, or add a Wi-Fi network

### Bluetooth

Search and connect Bluetooth devices.

### email & accounts

Set up email, contacts, Facebook and others.

### lock & wallpaper

Set to change wallpaper and screen time-out.

Toggle to set password and create a 4-digit password.

### location

Applications for which you've previously enabled location services can now access your current location.

## **mobile network**

Set Data connection and Data roaming.

Toggle to set 3G connection and select Network.

## **date & time**

Set date, time, and time zone

## **brightness**

Adjust the brightness of the screen.

## **keyboard**

Set Keyboard languages. You can check to Suggest text and highlight misspelt words, Correct misspelt words, Insert a space after selecting a suggestion, Insert a full-stop after double-clicking the spacebar and Capitalise the first letter of a sentence.

## **region & language**

Set Display language, Region format, Short date, Long date, First day of week, System locale and Browser & search language.

## **ease of access**

Set TTY/TDD mode

## **speech**

Set to Play audio confirmations and Use Speech when the phone is locked.

## **find my phone**

Map, ring, lock or erase your phone at [windowsphone.live.com](http://windowsphone.live.com)

If you've lost your phone, this will help you find it. Go to [windowsphone.live.com](http://windowsphone.live.com) and sign in your Windows live ID and password.

## **phone update**

Notify you when new updates are found. Use your mobile data connection to check for updates.

## **about**

View legal information, and check the phone status and software version.

## **reset your phone**

Resetting your phone will erase all your personal content, including applications that you purchased and downloaded, and will restore the factory settings.

## feedback

Send feedback to help improve Windows Phone

## applications

### games

Connect to Xbox LIVE On/Off.

### Internet Explorer

Check whether you allow cookies on your phone or not. Also you can set if you let Bing suggest sites as you type. Choose website preference.

Mobile version or Desktop version

### delete history

Delete all temporary files, history, cookies and saved passwords from Internet Explorer.

### maps

Toggle Use my location On/Off.

It uses your location to provide you with better local search results.

### delete history

Delete previous map searches, pins and image data from your phone.

## messaging

Set SMS delivery confirmation On/Off.

## music & videos

Connect with Zune On/Off.

Turn on to automatically download information that enhances your Zune experience.

## Office

### username

Enter your user information to identify yourself in comments and to help with collaboration and document tracking.

### SharePoint

- data store  
You can create space on your phone by clearing the SharePoint cache. This will delete all temporary SharePoint files and history.
- conflicts  
SharePoint lets you choose how to manage conflicts between files on your phone and the server. You can choose the way you want to resolve conflicts.

- Notify me and I'll resolve the conflict manually.
- Automatically replace item on the phone.
- startup option
  - Check to always open SharePoint links.
- reset
  - Restore default settings.

### **OneNote**

Toggle Automatic synchronisation On/Off.

Turn on to automatically synchronise notes when you open a page, save a page or open a section.

### **people**

Import SIM contacts will be synced with your online Windows Live contact list.

- Sort list by First name / Last name.
- Display names by First Last / Last, First.

### **phone**

Set Voicemail number.

Show my caller ID to everyone / no one / my contacts

Call forwarding On/Off

International assist On/Off

SIM security On/Off

### **pictures & camera**

Set options below.

Allow the camera button to wake up the phone On/Off.

Include location (GPS) information in pictures you take On/Off.

Auto upload to SkyDrive On/Off.

Keep location information on uploaded pictures On/Off.

### **radio**

Set regional options.

North America / World / Japan

## **search**

Toggle Use my location On/Off.

It uses your location to provide you with better local search results.

Check to get suggestions from Bing as you type.

## **delete history**

Delete previously entered search terms from your phone.

## **Software update**

### **Phone software update**

Windows Phone Update enables you to update the firmware of your phone to the latest version. Your phone are alerted to Windows Phone Updates automatically by the Windows Phone Update service, and the updates are installed on the phone by using the Zune software running on the user's personal computer. Please go to 'PHONE' menu of settings from the Zune software and click 'UPDATE' to check for updates available.

## Accessories

There are a variety of accessories available for your mobile phone, which may be sold separately. Select these options according to your personal communication needs. Consult your local dealer for availability. (Items described below may be optional.)

### Charger



### Data cable

Connect your LG-E900 and PC.



### Battery



### User guide

Learn more about your LG-E900.



### Stereo headset



### Microsoft SHG (start here guide)

Help you get started with your Windows Phone.



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

**Ambient Temperatures**

**Max:** +55°C (discharging),  
+45°C (charging)

**Min:** -10°C

## FAQ

Please check to see if any problems you have encountered with the phone are described in this section before taking the phone in for a service or calling a service engineer.

Category	Sub-Category	Question	Answer
Bluetooth	Bluetooth Headset	You cannot listen to music on a remote Bluetooth headset	<p>* Check you do not have headphones connected to the phone.</p> <ul style="list-style-type: none"><li>• Ensure that your device is connected to the Stereo headset.</li><li>• Ensure that the music format you are trying to listen to is supported by the headset.</li><li>• Ensure that the distance between the headset and device is not more than 10 metres and that they are not separated by walls or other obstacles.</li></ul>
Bluetooth	Bluetooth Headset	You cannot listen to video sound on a remote Bluetooth headset	It's not supported. If you want to listen to video sound, please use the ear-jack instead of Bluetooth headset.
Bluetooth	Bluetooth supported Profile	Which profiles are supported for Windows Phone 7?	HFP (HandsFreeProfile) HSP (HeadSet Profile) A2DP(Advanced Audio Distribution Profile) AVRCP(A/V Remote Control Profile) - Music : only support Play/Pause/Previous Song/ Next Song PBAP(Phone Book Access Profile)

Category	Sub-Category	Question	Answer
Bluetooth	Bluetooth Connection	What are the functions available via Bluetooth?	Connecting to Stereo/Mono Headset, Car Kit is possible.
Bluetooth	Bluetooth Connection	Is it possible to use internet when synchronising between phone and pc? (In such case, where pc is connected with wired LAN).	It's not supported.
Bluetooth	Contact transmission	Is there any way to transfer the contacts data to other phone thru bluetooth? Ex) Contacts of other phone move to phone via BT.	It's not supported.
Bluetooth	Print	Can you print MS office document (MS word, excel, PDF, etc.) using BT or wireless?	It's not supported.
Data	Backup	How do you import contacts from your old phone to your Window Phone 7?	<ul style="list-style-type: none"> <li>Put your old SIM card into your new phone, then go to <b>Settings</b>. Flick to <b>applications</b>, tap <b>people &gt; import SIM contacts</b>.</li> <li>You cannot do this through Zune.</li> </ul>
Data	Synchronization	What are some limitations, when data synchronising between windows phone 7 and pc?	<p>In Window Phone 7, "Zune" application is used instead of "Activesync".</p> <p>The limitation of Zune is, while synchronizing, (music, video and picture) files can not be played on the phone.</p>

Category	Sub-Category	Question	Answer
Data	Synchronization	How do you synchronise between phone and pc under Windows Vista & Win7?	By using microsoft application "Zune" which can be downloaded from MS website.
Data	Web-Upgrade	Is it possible to backup the user data automatically when upgrading thru Web.	Zune supports whole flash backup, but does not support backup of user data seperately.
Misc.	Call Time	Is the Calling time calculated differently according to the model(Ex. 2G/3G, CDMA ...)	CDMA Model : Calling time is calculated from when you press "call" after dialling the number. 2G/3G Model : Calling time is calculated from when the call is connected.
Misc.	E-Mail	Where do you get POP3 & SMTP Server settings?	Please consult email system administrator for assistance.
Misc.	Active X	Is the Active X supported like PC?	No, it's not supported.
Phone Function	Battery	How do you check if battery is fully charged?	Battery charge status is displayed on top of the screen.
Phone Function	W&P option	Is it possible to use W(Wait) & P(Pause) option, when saving phone number to contacts?	Yes, it's possible. But it's supported using the hardware keyboard only. it's not supported for the on-screen keyboard.

Category	Sub-Category	Question	Answer
Phone Function	Office Mobile	Is it possible to edit files in office applications of mobile?	<p>It's only possible to read.</p> <ul style="list-style-type: none"> <li>• Please note that Microsoft Office Mobile doesn't support all the features that are found in Microsoft Office 2010.</li> </ul> <p>If a document has content that's not supported in Office Mobile, you can still open the document on your phone, but the unsupported content won't be displayed.</p>
Phone Function	Ring Tone Setting	How do I set the Ring Tone?	<p>Go to Application list and tap <b>Settings &gt; ringtone &amp; sounds</b> to set up the Ring Tone.</p> <p>There are different kinds of alerts and different ringtones you can assign to different people.</p> <p>On start, tap <b>People</b> &gt; the contact you want to change &gt; <b>Edit &gt; Ringtones</b>.</p>
Phone Function	Ring Tone Setting	How can I use my favourite music as a ringtone?	<p>Marketplace enables users to easily find &amp; acquire your favourite ringtone</p> <p>Go to Application list and tap <b>Marketplace &gt; Music</b>. And browse and choose your favourite ringtone.</p> <p>Please note that Marketplace may not be available in your country or region.</p>

Category	Sub-Category	Question	Answer
Phone Function	Supported Language	Is it possible to change the language?	Your Windows Phone 7 supports 6 different languages (Deutsch, English (United Kingdom/ United States), Español, Français, Italiano). If you want to change the settings, go to tap <b>Settings&gt; region &amp; language &gt; Display language</b> .
Phone Function	Sound Settings	How to setup the system sound and Ring sound?	You can adjust the music, ringtone and system sound with volume keys. • Go to " <b>Settings &gt; ringtone &amp; sounds</b> "
Phone Function	Time Setting	How do you set the time on the phone?	Applications list > <b>Settings &gt; date &amp; time &gt; Set automatically</b> slider to Off > Set the Time
Phone Function	Youtube	Is it possible to view video clips from Youtube?	This is possible via use of Marketplace YouTube player. Please note that Marketplace YouTube player may not be available in your country or region.
Phone Function	Battery Life Time	What is the talk time of this phone?	Calling : 360 min. (based on 3G)
Phone Function	camera	Is there any option to save or erase a picture, right after it's taken?	Picture is saved automatically. Navigate to Picture Viewer by flicking to the right. Touch and hold the picture taken. View available options. (eg. Adding to favourites, deleting etc).

Category	Sub-Category	Question	Answer
Phone Function	E-mail	Is it possible to set e-mail filtering?	E-Mail filtering is possible via use of "Search" button.
Phone Function	E-mail	Is it possible to set the alert sound when receiving e-mail?	[Steps] <b>Settings &gt; ringtones &amp; sounds &gt; New email &gt;</b> Choose an item
Phone Function	browser settings	How can I change privacy and other browser settings?	Go to <b>Settings &gt; applications &gt; Internet Explorer</b> to delete cookies. Also, you can turn off sharing your location using <b>Settings &gt; system &gt; location.</b>
Phone Function	Proximity Sensor	How do you keep the LCD screen on, during phone conversation?	Proximity sensor on the phone is designed to switch the LCD off by default whilst on a call.
Phone Function	SIM Lock	Is it possible to use SIM Card that's provided by different operator?	Please contact the store that sold you the phone to check if a SIM lock is active or not. If there is no SIM Lock, certain features or services might not be available due to phone or network settings.
Phone Function	SIM Lock	My Windows Phone has a SIM lock, can LG help me in this case?	SIM lock depends on the network operator that sold you the Windows Phone. Please contact the network operator or the store that sold you the Windows Phone.

Category	Sub-Category	Question	Answer
Phone Function		Is Adobe Flash supported (similar to PC browser)?	It's not supported.
Phone Function		Is Streaming service supported.	Some streaming protocols are not supported (e.g. RTSP). HTTP-Progressive and IIS SmoothStreaming is supported depending on the website you are visiting and the application you are using.
Phone Spec	Band	Is GSM technology Quadra band, tri band or dual band? (For example: 1900Mhz, 900, 1800, 850)	Quad band is supported.
Phone Spec	Phone Spec	Is it possible to use external GPS device?	No. There is a built-in GPS unit in your Windows Phone 7 device.
Wi-Fi	Wi-Fi Simple Inquiry	What can I do with Wi-Fi (wireless networking)?	You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.
Wi-Fi	Wi-Fi Simple Inquiry	Is Wi-Fi serviced by Operator?	No, it isn't. Users can access the internet thru AP (Access Point).
Recovery Solution	Password missing	What do you do, when you've forgotten your password? How do you obtain your password, if forgotten?	Contact your service provider.

Category	Sub-Category	Question	Answer
Recovery Solution	Factory Rest Web update	I want to reset my phone to improve performance, how do I do this? I want to update the software running on my phone to improve performance, how do I do this?	<p>1. Factory Reset. Go to tap Applications list &gt; <b>Settings &gt; about &gt; reset your phone.</b></p> <p>Resetting your phone will erase all your personal content, including applications that you purchased and downloaded, and will restore the factory settings.</p> <p>2. Try to update latest SW version via Web. Your phone are alerted to Windows Phone Updates automatically by the Windows Phone Update service, and the updates are installed on the phone by using the Zune software running on your personal computer, when you connect your phone with it.</p> <p>If you didn't install the Zune software yet, go to <b>www.windowsphone.com</b> to install.</p> <p><b>Warning!</b> By performing "Factory Reset", all user data will be ERASED. Customer <b>MUST</b> backup <b>PRIOR</b> to running factory reset &amp; Web update.</p>

Category	Sub-Category	Question	Answer
Recovery Solution	Factory Reset	How to do when the performance is much lower than before?	<p>1. Factory Reset. Go to tap Applications list &gt; <b>Settings &gt; about &gt; reset your phone.</b></p> <p>Resetting your phone will erase all your personal content, including applications that you purchased and downloaded, and will restore the factory settings.</p> <p>2. Try to update latest SW version via Web. Your phone are alerted to Windows Phone Updates automatically by the Windows Phone Update service, and the updates are installed on the phone by using the Zune software running on your personal computer, when you connect your phone with it.</p> <p>If you didn't install the Zune software yet, go to <b>www.windowsphone.com</b> to install.</p> <p><b>*Attention</b> In case of Factory Reset and Web update, all user data will be erased. hence, customer should have to back up them before.</p>















