



ไทย
ENGLISH



คู่มือการใช้
User Guide

GT540

ข้อมูลบางอย่างในคู่มือนี้อาจแตกต่างจากโทรศัพท์ของคุณ



CE0168

P/N : MFL67008330 (1.0)

www.lg.com

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดสีกอลบนำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งในขอความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ.

ทันทีที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Wi-Fi (WLAN)	อุปกรณ์นี้เหมาะสำหรับใช้ในประเทศในทวีปยุโรปทั้งหมด WLAN สามารถใช้งานได้ในประเทศสมาชิกสหภาพยุโรปโดยไม่จำกัดภายในอาคาร แต่ไม่สามารถใช้งานภายนอกได้ในประเทศฝรั่งเศส รัสเซีย และยูเครน
--------------	---

Bluetooth QD ID B016480



คู่มือการใช้ GT540

- ไทย

- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ
- ไม่แนะนำให้ผู้ที่มีความบกพร่องทางด้านสายตาใช้เครื่องรุ่นนี้ เนื่องจากมีปุ่มกดบนหน้าจอบนแบบสัมผัส
- Copyright ©2010 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้องของ เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google™, โลโก้ Google, Google Maps™, Google Mail™, YouTube™, Google Talk™, Android™ และ Android Market™ เป็นเครื่องหมายการค้าของ Google, Inc



ขอแสดงความยินดีที่คุณซื้อโทรศัพท์
เคลื่อนที่รุ่น GT540 ของ LG ซึ่งทันสมัยและมีขนาดกะทัดรัด ออกแบบให้
ทำงานด้วยการใช้เทคโนโลยีการสื่อสารเคลื่อนที่แบบดิจิทัลใหม่ล่าสุด

สารบัญ

คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ 6

ข้อความประกาศสำคัญ 12

1. หน่วยความจำโทรศัพท์ 12
2. การยืดอายุแบตเตอรี่ 12
3. การติดตั้ง OS โอปินซอร์ส 13
4. การใช้แบบปลดล็อค 14
5. การใช้โหมดปลอดภัยและ Hard Reset 14
6. การเชื่อมต่อกับเครือข่าย Wi-Fi. 15
7. การใช้การ์ด microSD 16
8. การเปิดและการสลับแอปพลิเคชัน 16
9. การเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ผ่าน USB 17
10. หน้าจอปลดล็อคเมื่อใช้การเชื่อมต่อข้อมูล 19
11. เมื่อกำหนดค่า 19

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ 20

- การใส่ซิมการ์ดและแบตเตอรี่ 22
- การชาร์จโทรศัพท์ 23
- การติดตั้งการตั้งค่าหน่วยความจำ 24
- การฟอร์แมตการตั้งค่าหน่วยความจำ ... 25

หน้าจอหลักของคุณ 26

- เคล็ดลับสำหรับหน้าจอสัมผัส 26
- Touch calibration 26
- ล็อคและปลดล็อคหน้าจอ 26
- การใช้หน้าจอหลัก 27
- เลือกหน้าจอหลักเริ่มต้นของคุณ .. 27

การเพิ่ม Widget
ในหน้าจอหลักของคุณ 28

การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด 29

แอปที่พิมพ์บนหน้าจอ 31

การไข่มุกและการป้องกันความปลอดภัย
ระบบช่วยสะกดคำ XT9 32

โหมด 123 32

การตั้งค่าแอคเคาท์ Google 33

การสร้างแอคเคาท์ Google 33

การใช้อินแอคเคาท์ Google
ของคุณ 33

การโทร 35

การโทรออก 35

การโทรออกโดยใช้รายชื่อ 35

การรับสายและการปฏิเสธสายเรียกเข้า 35

การปรับระดับเสียงสายสนทนา 36

ตั้งค่าการโทร 36

รายชื่อ 38

การค้นหารายชื่อ 38

การเพิ่มรายชื่อใหม่ 38

โทรด่วน 38

ข้อความ/อีเมล 40

ข้อความ 40

การส่งข้อความ 40

การเปลี่ยนการตั้งค่าข้อความของคุณ 41

การตั้งค่าอีเมล 42

การส่งอีเมลโดยใช้แอคเคาท์ใหม่ .. 43

สารบัญ

การเปลี่ยนการตั้งค่าของบัญชีอีเมล..	43
เครือข่ายสังคม	44
การเพิ่มแอคเคาท์ไปยังโทรศัพท์ของคุณ.....	44
กำลังดูและกำลังอัปเดตสถานะของคุณ	45
การลบแอคเคาท์ออกจากโทรศัพท์ของคุณ.....	45
กล้องถ่ายรูป.....	46
ทำความเข้าใจกับช่องมองภาพ.....	46
การใช้โหมดโฟกัส	47
การถ่ายภาพตอน	47
เมื่อคุณถ่ายภาพแล้ว.....	47
การใช้การตั้งค่าขั้นสูง	48
การดูรูปภาพที่บันทึกไว้.....	50
กล้องวิดีโอ	51
ทำความเข้าใจกับช่องมองภาพ.....	51
การถ่ายวิดีโอตอน	52
หลังการถ่ายวิดีโอ.....	52
การใช้การตั้งค่าขั้นสูง	52
การดูวิดีโอที่บันทึกไว้	53
รูปภาพและวิดีโอ	54
การแก้ไขรูปภาพ	54
การตัดความยาวของวิดีโอ	55
การเลือกรูปแบบการเปลี่ยนภาพ.....	55
การใช้ซิปไวด์เดิล.....	55
การเพิ่มเอฟเฟกต์การแก้ไข.....	56
การจับเฟรมภาพ.....	56
การเพิ่มเสียงอัดให้กับวิดีโอ	56
มัลติมีเดีย.....	57
เครื่องเล่นมีเดีย	57
โปรแกรมแก้ไขวิดีโอ	58
สตอริ่งบอร์ด.....	58
ตัดอัดโนมิตี.....	59
การเล่นเกมส์	59
การโอนไฟล์โดยใช้อุปกรณ์จัดเก็บข้อมูล USB	59
เพลง	60
การเล่นเพลง	60
การใช้วิทยุ	61
การค้นหาสถานี	61
การฟังวิทยุ.....	62
แอปพลิเคชันใน Google	63
Google Map	63
Android Market	64
Google Mail	64
Google Talk	64
ยูทิลิตี้.....	66
การตั้งเวลาการปลุก	66
การใช้เครื่องคิดเลข.....	66
การเพิ่มเหตุการณ์ลงในปฏิทิน	67
บันทึกเสียง	67
การบันทึกเสียงหรือเสียงพูด.....	67
Quickoffice	68
เว็บไซต์	69
การเข้าใช้เว็บ	69
การเปลี่ยนการตั้งค่าเว็บเบราว์เซอร์ ..	69

ตั้งค่า.....	70
การควบคุมไร้สาย	70
เสียงและการแสดง.....	71
การรักษาความปลอดภัยและตำแหน่ง	72
หลายรายการ.....	74
การซิงโครไนซ์ข้อมูล	74
ส่วนตัว	75
การ์ด SD และพื้นที่จัดเก็บของ	75
Wi-Fi	77
1. วิธีการตั้งค่า Wi-Fi	77
2. การสนับสนุนโปรไฟล์เครือข่าย	78
Wi-Fi.....	78
3. การดู MAC แอดเดรส	79
การอัปเดตซอฟต์แวร์.....	80
อัปเดตซอฟต์แวร์โทรศัพท์.....	80
DivX Mobile	80
อุปกรณ์เสริม	81
การแก้ปัญหา.....	83

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น GT540 นี้ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุขอ กำหนดนี้ในหลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบางแต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP)

คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม

- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 1.23 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.39 วัตต์/กก. (10 กรัม)

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้นการใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็น ต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้าเช่น โทรศัพท์วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟเนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดสายภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลายเช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไวบนพื้นผิวอ่อนนุ่ม
- ชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้แบตเตอรี่กรดหรือแบตเตอรี่โดยสารที่มีแก๊สแม่เหล็ก เพราะอาจทำ ความเสียหายต่อข้อมูลใน แก๊สแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหาย แก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศ โดยไม่จำเป็น

การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

- โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ
- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์ โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบางเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมาย และระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ขณะขับขี่ยานพาหนะในพื้นที่นั้น

- ห้ามใช้โทรศัพท์มือถือถือในขณะขับรถ
- ขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับขี่เข้าข้างทาง แล้วจอดรถก่อนโทรออก หรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น

- หากกรณของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

เสียงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลาานาน ดังนั้นเราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดเครื่องใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

หมายเหตุ:

เสียงและแรงดันที่มากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทกหากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าจะส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามขอห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ปิดโทรศัพท์มือถือของคุณหรือเปิดใช้งานโหมด Flight ก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้ รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด

- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะต้องเปลี่ยนก้อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้งหากไม่ได้ใช้เป็นเวลานาน เพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ ห้ามทิ้งในถังขยะครัวเรือน
- หากคุณต้องเปลี่ยนแบตเตอรี่โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเตาเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้ว เพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเฉลี่ย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

ข้อความประกาศสำคัญ

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับการบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์ และลบข้อมูลบางอย่าง เช่น แอปพลิเคชันหรือข้อความเพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การจัดการแอปพลิเคชัน

1. บนหน้าจอหลัก แตะแท็บแอปพลิเคชัน และเลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน**
2. เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง
3. แตะ **ยกเลิกการติดตั้ง** และแตะ **ตกลง** เพื่อยกเลิก

การติดตั้งแอปพลิเคชันที่คุณต้องการ

2. การยืดอายุแบตเตอรี่

คุณสามารถยืดอายุแบตเตอรี่ระหว่างการชาร์จแต่ละครั้งได้ โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณยังสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้

การยืดอายุแบตเตอรี่

- ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช้ หากคุณไม่ใช้ Wi-Fi, บลูทูธ หรือ GPS ให้ใช้แอปพลิเคชันตั้งค่าเพื่อปิด
- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง
- หากคุณไม่ต้องการ ให้ปิดการซิงค์อัตโนมัติของ Google Mail, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
- แอปพลิเคชันที่คุณดาวน์โหลดอาจลดอายุแบตเตอรี่ คุณอาจต้องการยกเลิกการติดตั้งแอปพลิเคชันและข้อมูลและการตั้งค่าจากโทรศัพท์

การตรวจสอบระดับประจุแบตเตอรี่

1. บนหน้าจอหลัก แตะแท็บแอปพลิเคชัน และเลือก **ตั้งค่า** > **เกี่ยวกับโทรศัพท์** > **สถานะ**
2. สถานะแบตเตอรี่ (กำลังชาร์จ, กำลังคายประจุ) และระดับ (เปอร์เซ็นต์เมื่อเทียบกับชาร์จเต็ม) จะแสดงที่ด้านบนของหน้าจอ

การตรวจสอบและควบคุมการใช้แบตเตอรี่

1. บนหน้าจอหลัก แตะแท็บแอปพลิเคชัน และเลือก **ตั้งค่า** > **เกี่ยวกับโทรศัพท์** > **การใช้แบตเตอรี่**
2. ด้านบนของหน้าจอจะแสดงเวลาที่ใช้แบตเตอรี่ระยะเวลาจากการเชื่อมต่อแหล่งไฟฟ้าครั้งสุดท้ายหรือเชื่อมต่อกลับแหล่งไฟฟ้าหรือไม่ ระยะเวลาที่คุณใช้งานไฟฟ้าจากแบตเตอรี่ หน้าจอจะแสดงรายการแอปพลิเคชันหรือบริการที่ใช้ไฟฟ้าจากแบตเตอรี่จากมากไปน้อย

3. การติดตั้ง OS โอเพ่นซอร์สโอเพ่นซอร์ส

หากคุณติดตั้ง OS โอเพ่นซอร์สในโทรศัพท์ของคุณ และไม่ใช้ OS จากผู้ผลิต อาจทำให้โทรศัพท์ของคุณทำงานผิดปกติได้



คำเตือน:

หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากของผู้ผลิต โทรศัพท์ของคุณจะไม่สามารถคุ้มครองตามการรับประกันอีกต่อไป



คำเตือน: เพื่อความปลอดภัยให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้เช่น Android Market เท่านั้นหากแอปพลิเคชันที่ติดตั้งอย่างไม่ถูกต้องอาจทำงานไม่ปกติหรือเกิดข้อผิดพลาดร้ายแรงคุณอาจต้องยกเลิกการติดตั้งแอปพลิเคชันและขอมูลและการตั้งค่าจากโทรศัพท์

ข้อความประกาศสำคัญ

4. การใช้แบบปลดล๊อค

ตั้งค่าแบบปลดล๊อคเพื่อป้องกันโทรศัพท์ เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล๊อคหน้าจอ



คำเตือน:

โปรดระวังเมื่อใช้ล๊อคแบบ สิ่งสำคัญคือคุณต้องจำแบบปลดล๊อคที่คุณตั้งไว้ได้ คุณจะไม่สามารถเขาใช้โทรศัพท์ของคุณได้หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง หลังจากพยายามปลดล๊อคแบบครบ 5 ครั้ง คุณสามารถแตะตัวเลือกลืมแบบ และใช้ข้อมูลแอดแคท Google เพื่อปลดล๊อคโทรศัพท์ได้

หากคุณไม่มีแอดแคท Google หรือคุณไม่สามารถสร้างแอดแคท Google ในโทรศัพท์ หรือคุณลืม คุณสามารถใช้ **Hard Reset**

5. การใช้โหมดปลอดภัย และ Hard Reset

การใช้โหมดปลอดภัย

* การแก้ไขจากสถานะผิดปกติของโทรศัพท์

1. ปิดโทรศัพท์และรีบูต ขณะที่โทรศัพท์กำลังเริ่มทำงาน ให้กดปุ่มหน้าหลักค้างไว้ระหว่างแสดงล๊อค Android

โทรศัพท์จะบูตไปจนถึงหน้าจอหลัก และแสดง "โหมดปลอดภัย" ในมุมล่างซ้าย

2. เลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน** และเลือก **แอปพลิเคชัน แลวเลือก ไอคอน ยกเลิกการติดตั้ง**

3. หลังจากยกเลิกการติดตั้งแอปพลิเคชัน ให้เปิดและรีบูตโทรศัพท์

* การใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)

หากไม่สามารถแก้ไขสภาวะเดิมได้ ให้ใช้ **Hard Reset** เพื่อตั้งค่าเริ่มต้นของโทรศัพท์ เมื่อโทรศัพท์เปิดและแสดงหน้าจอล๊อค ให้กดปุ่มเพิ่มระดับเสียง + หน้าหลัก + คณหาค้างไว้ (ห้าวินาที) เมื่อหน้าจอป้อปอัปปรากฏขึ้น ให้เลือก ตกลง เพื่อรีเซ็ตโทรศัพท์ โปรดทราบว่า

หลังจาก **Hard Reset** ข้อมูลทั้งหมดและแอปพลิเคชันในโทรศัพท์ที่จะถูกลบและไม่สามารถย้อนกลับได้



คำเตือน!

หากคุณทำการ **Hard Reset** แอปพลิเคชันและข้อมูลของผู้ใช้ทั้งหมดจะถูกลบ โปรดอย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำการ **Hard Reset**

6. การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในโทรศัพท์ คุณสามารถเข้าใช้จุดเชื่อมต่อไร้สาย หรือ "Hotspot" ได้ จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณเชื่อมต่อได้ทันที จุดอื่นๆ เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกันคุณต้องกำหนดค่าโทรศัพท์เพื่อให้สามารถเชื่อมต่อได้

ปิด Wi-Fi เมื่อคุณไม่ได้ใช้เพื่อยืดอายุแบตเตอรี่

การเปิด Wi-Fi และเชื่อมต่อเครือข่าย Wi-Fi

1. บนหน้าจอหลักแตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า > การควบคุมไร้สาย > ตั้งค่า Wi-Fi**
2. แตะ **Wi-Fi** เพื่อเปิดและเริ่มสแกนหากเครือข่าย Wi-Fi
 - รายการเครือข่าย Wi-Fi ที่มีอยู่จะปรากฏขึ้น เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ
3. แตะที่เครือข่ายเพื่อเชื่อมต่อ
 - หากเครือข่ายเป็นแบบเปิด คุณจะได้รับแจ้งให้ยืนยันว่าคุณต้องการเชื่อมต่อกับเครือข่ายโดยการแตะ **เชื่อมต่อ**
 - หากเครือข่ายมีการป้องกัน คุณจะได้รับแจ้งให้อนุรักษ์หรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)
4. แถบสถานะจะแสดงไอคอนที่ระบุสถานะ Wi-Fi

ข้อความประกาศสำคัญ

7. การใช้การ์ด microSD

รูปภาพ, ไฟล์เพลง และวิดีโอสามารถบันทึกในหน่วยความจำภายนอกเท่านั้น

ก่อนการใช้กล้องในตัว คุณต้องใส่การ์ดหน่วยความจำ microSD ในโทรศัพท์ก่อน

หากไม่ได้ใส่การ์ดหน่วยความจำ คุณจะไม่สามารถบันทึกภาพและวิดีโอที่ถ่ายได้

หมายเหตุ: แอปพลิเคชันสามารถบันทึกในหน่วยความจำภายในของโทรศัพท์เท่านั้น

คำเตือน!

อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ มิเช่นนั้น อาจทำให้การดู หน่วยความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการดหน่วยความจำอาจเสียหายในการถอดการดหน่วยในการถอดการดความจำอย่างปลอดภัย โปรดเลือก **แอปพลิเคชัน > ตั้งค่า > การด SD และพื้นที่จัดเก็บของโทรศัพท์ > ยกเลิกเชื่อมต่อการด SD**

8. การเปิดและการสลับแอปพลิเคชัน

มัลติทาสกิ้งเป็นเรื่องง่ายใน Android เนื่องจากแอปพลิเคชันที่เปิดจะทำงานแม้ว่าคุณจะเปิดแอปพลิเคชันอื่น โดยไม่จำเป็นต้องปิดแอปพลิเคชันก่อนเปิดแอปพลิเคชันอื่น การใช้และสลับ

ระหว่างแอปพลิเคชันที่เปิด Android จะจัดการแต่ละแอปพลิเคชัน การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช้ทรัพยากรโดยไม่จำเป็น

การหยุดแอปพลิเคชันที่คุณใช้

1. บนหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน**
2. เลื่อนไปยังแอปพลิเคชันที่ต้องการและแตะ **บังคับหยุด** เพื่อหยุดใช้งาน

9. การเชื่อมต่อโทรศัพท์ กับคอมพิวเตอร์ผ่าน USB

หมายเหตุ: การตั้งค่า **LG PC Suite** ในคอมพิวเตอร์
ของคุณ

ในการซิงโครไนซ์โทรศัพท์
ผ่านสาย USB กับคอมพิวเตอร์
ของคุณ คุณจะต้องติดตั้ง
โปรแกรม LG PC Suite
ในคอมพิวเตอร์ของคุณ
คุณสามารถดาวน์โหลดโปร
แกรมนี้ได้จากเว็บไซต์ LG
(<http://www.lg.com>) ไปที่
เว็บไซต์ LG สำหรับข้อมูลเพิ่มเติม
เกี่ยวกับการติดตั้งและใช้
โปรแกรม

LG PC SUITE

ให้คุณเชื่อมต่อโทรศัพท์มือถือ
กับคอมพิวเตอร์โดยใช้
สายการสื่อสารข้อมูล USB
เพื่อให้คุณสามารถใช้ฟังก์
ชันของโทรศัพท์มือถือบน
คอมพิวเตอร์ของคุณได้

ฟังก์ชันหลักของ LG PC Suite IV

- สร้าง แก้ไข และลบข้อมูล
ในโทรศัพท์ได้โดยสะดวก
- ซิงโครไนซ์ข้อมูลจากคอม
พิวเตอร์และโทรศัพท์
(รายชื่อ, ปฏิทิน/งาน)
- ถ่ายโอนไฟล์มัลติมีเดีย
(ภาพถ่าย, วิดีโอ, เพลง)
ได้สะดวกเพียงลากแล้ว
วางระหว่างคอมพิวเตอร์
และโทรศัพท์
- ถ่ายโอนข้อความจากโทร
ศัฟท์ไปยังคอมพิวเตอร์
- ใช้โทรศัพท์เป็นโมเด็ม
- อัปเดตซอฟต์แวร์โดยไม
สูญเสียข้อมูล

ข้อความประกาศสำคัญ

รายการที่ไม่รองรับ :

- เชื่อมต่อ PC Connection ผ่านบลูทูธ
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- E-mail
- Java Application

คู่มือสำหรับ PC Suite IV อยู่ในเมนู Help หลังจากติดตั้ง PC Suite IV.

ในการโอนไฟล์โดยใช้อุปกรณ์ USB:

1. ติดตั้งการ์ดหน่วยความจำ microSD ในโทรศัพท์ (อาจติดตั้งไว้ในโทรศัพท์ของคุณแล้ว)

2. ก่อนเชื่อมต่อสายข้อมูล USB ให้ตรวจสอบว่าเปิดใช้โหมดที่เก็บข้อมูลเท่านั้นในโทรศัพท์ของคุณแล้ว (ในเมนูแอปพลิเคชัน ให้เลือก ตั้งค่า > การดัดแปลง SD และพื้นที่จัดเก็บของโทรศัพท์ แล้วเลือกช่องที่เก็บข้อมูลเท่านั้น)
3. ใช้สาย USB ที่มาพร้อมกับโทรศัพท์เพื่อเชื่อมต่อกับพอร์ต USB ที่คอมพิวเตอร์ คุณจะได้รับการแจ้งว่าเชื่อมต่อ USB แล้ว
4. เปิดแถบการแจ้งเตือนและแตะเชื่อมต่อ USB แล้ว
5. แตะ **เชื่อมต่อ** เพื่อยืนยันว่าคุณต้องการถ่ายโอนไฟล์ระหว่างการดัดแปลง microSD ของโทรศัพท์และคอมพิวเตอร์

เมื่อโทรศัพท์เชื่อมต่อเป็นที่เก็บข้อมูล USB คุณจะได้รับการแจ้ง การดัดแปลง microSD ของโทรศัพท์จะเชื่อมต่อเป็นไดรฟ์ในคอมพิวเตอร์ คุณสามารถคัดลอกไฟล์ระหว่างการดัดแปลง microSD ได้

เคล็ดลับ!

ในการใช้การ์ด microSD ในโทรศัพท์อีกครั้ง คุณต้องเปิดแถบการแจ้งเตือนและแตะ "ปิดที่เก็บข้อมูล USB"

ระหว่างเวลานี้ คุณจะไม่สามารถเขาใช้การ์ด microSD จากโทรศัพท์ คุณจึงไม่สามารถใช้แอปพลิเคชันที่ใช้การ์ด microSD เช่น กล้อง คลังภาพ และเพลง

ในการเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ ให้ทำตามคำแนะนำในคอมพิวเตอร์เพื่อยกเลิกการเชื่อมต่อการ์ด microSD และเลิกเชื่อมต่ออุปกรณ์ USB อย่างถูกต้องเพื่อหลีกเลี่ยงการสูญเสียข้อมูลในการด

1. ยกเลิกการเชื่อมต่อการ์ด microSD ในคอมพิวเตอร์
2. เปิดแถบการแจ้งเตือน และแตะ **ปิดที่เก็บข้อมูล USB**
3. แตะ **ปิด** ในกล่องโต้ตอบที่เปิดขึ้น

10. หน้าจอปลดล็อคเมื่อใช้การเชื่อมต่อข้อมูล


หน้าจอจะดับลงหากไม่ได้แตะเป็นระยะเวลาหนึ่งเมื่อใช้การเชื่อมต่อข้อมูล ในการเปิดหน้าจอ LCD ให้แตะที่หน้าจอ

11. เมื่อนำจอค้าง

หากโทรศัพท์ไม่ตอบสนอง การป้อนข้อมูลของผู้ใช้ หรือหน้าจอค้าง: ถอดแบตเตอรี่ออก ใส่เข้าไปใหม่อีกครั้ง และเปิดโทรศัพท์

หากวิธีการนี้ไม่ได้ผล โปรดติดต่อศูนย์บริการ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หากต้องการเปิดโทรศัพท์ ให้กดปุ่ม เปิด/ปิดเครื่อง  ค้างไว้ 3 วินาที

หากต้องการปิดโทรศัพท์ ให้กดปุ่ม เปิด/ปิดเครื่อง  ค้างไว้ 3 วินาที แล้วแตะ ปิดเครื่อง

ปุ่มเมนู 

- เปิดเมนูแอปพลิเคชันและตรวจสอบตัวเลือกที่มี

ปุ่มส่ง 

- เพื่อโทรออกและรับสายเรียกเขา

ปุ่มหน้าหลัก 

- กลับไปยังหน้าจอหลัก



หูฟัง


ปุ่มย้อนกลับ 

- กลับไปยังหน้าจอก่อนหน้านี้

ปุ่มวางสาย/เปิดปิดเครื่อง / ล็อค 

- วางสายหรือปฏิเสธสายเรียกเขา
- เปิดหรือปิดเครื่องโดยกดปุ่มนี้ค้างไว้
- ปิดหน้าจอและล็อค

ไมโครโฟน

เคล็ดลับ: แตะปุ่ม เมนู  เมื่อคุณแตะแอปพลิเคชันเพื่อตรวจสอบว่ามีตัวเลือกอะไรบ้าง

เคล็ดลับ: หากโทรศัพท์ของคุณเกิดข้อผิดพลาดขึ้นจากการใช้งานหรือคุณไม่สามารถเปิดเครื่องได้ ให้ถอดแบตเตอรี่ ถัดตั้งเข้าไปใหม่และเปิดเครื่องหลังจากผ่านไป 5 วินาที

ปุ่มปรับระดับเสียง

- ในหน้าจอหลัก: ควบคุมระดับเสียงกริ่ง
- ระหว่างการใช้สาย: ควบคุมระดับเสียงหูฟัง
- ขณะเล่นแท็บเล็ต: ควบคุมระดับเสียงต่อเนื่อง



ช่องเสียบอุปกรณ์ชาร์จ, ช่องเสียบสายเคเบิล micro USB

ปุ่มค้นหา

- ค้นหาเว็บและเนื้อหาในโทรศัพท์

ปุ่มกล้องถ่ายรูป


- ไปที่เมนูกล้องถ่ายรูปโดยกดปุ่มค้างไว้

ช่องเสียบหูฟังสเตอริโอ

เลนส์กล้อง

ช่องเสียบการ์ดความจำ Micro SD

ช่องเสียบอุปกรณ์ชาร์จ, ช่องเสียบสายเคเบิล micro USB

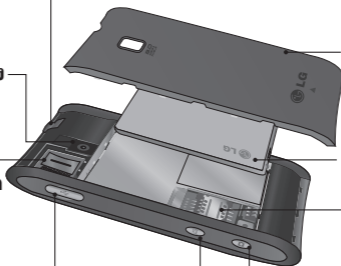

ฝาครอบด้านหลัง

แบตเตอรี่

ช่องเสียบซิมการ์ด

ปุ่มกล้องถ่ายรูป


ปุ่มค้นหา

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ


การใส่ซิมการ์ดและแบตเตอรี่

ก่อนที่จะเริ่มสำรวจโทรศัพท์เครื่องใหม่ของคุณ คุณจะต้องตั้งค่าโทรศัพท์ในการใส่ซิมการ์ดและแบตเตอรี่:


- 1 หันด้านหลังของโทรศัพท์เข้าหาคุณ ถอดฝาครอบด้านหลัง ในการถอดฝาครอบด้านหลัง กดนิ้วหัวแม่มือที่ด้านข้างของฝาครอบด้านหลังให้แน่น และเลื่อนฝาครอบด้านล่างเลนส์กล้อง

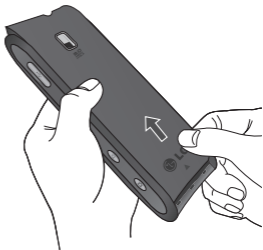

- 2 ใส่ซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการดคว่าง

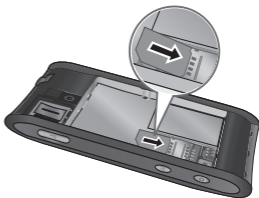

- 3** ใส่แบตเตอรี่ให้เข้าที่โดยวางหน้าสัมผัสสีทองบนโทรศัพท์ให้เป็นแนวเดียวกับแบตเตอรี่ แล้วค่อยๆ กดแบตเตอรี่จนกว่าแบตเตอรี่จะแน่นเข้าที่

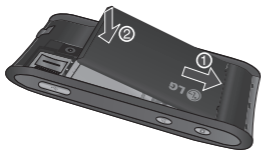


- 4** ปิดฝาครอบด้านหลังและเลื่อนลงให้เข้าที่จนกว่าจะได้ยินเสียงคลิกของตัวล็อก



หมายเหตุ! หากโทรศัพท์ของคุณไม่ได้เชื่อมต่อกับเครือข่ายเมื่อคุณใส่ซิมการ์ดและเปิดเครื่อง โปรดติดต่อผู้ให้บริการเพื่อขอรับรายละเอียดข้อจำกัดเชื่อมต่อ

การชาร์จโทรศัพท์

เลื่อนฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านข้างของโทรศัพท์ GT540 เสียบอุปกรณ์ชาร์จและเสียบปลั๊กไฟเข้ากับเตาเสียบไฟ คุณต้องชาร์จโทรศัพท์ GT540 จนกว่าจะเห็น 

หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่



เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



หมายเหตุ: โทรศัพท์ GT540 มีเสาอากาศภายใน โปรดใช้ความระมัดระวังเพื่อไม่ให้ขูดขีดหรือสร้างความเสียหายแก่บริเวณด้านหลังของโทรศัพท์ เนื่องจากจะทำให้สูญเสียประสิทธิภาพในการทำงาน

การติดตั้งการ์ดหน่วยความจำ


ในการจัดเก็บไฟล์มัลติมีเดียเพิ่มเติม เช่น ภาพที่ถ่ายโดยใช้กล้องภายในตัว คุณต้องใส่การ์ดหน่วยความจำในโทรศัพท์

ในการใส่การ์ดหน่วยความจำ:

- 1 ปิดโทรศัพท์ก่อนใส่หรือถอดการ์ดหน่วยความจำ ถอดฝาครอบด้านหลัง
- 2 เปิดฝาปิดช่องเสียบและใส่การ์ดหน่วยความจำในช่องเสียบ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

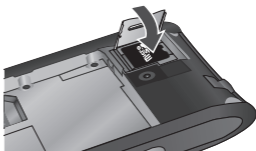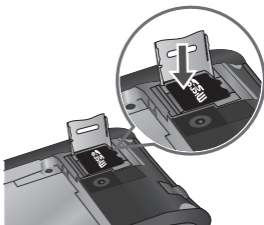

3 ปิดฝาปิดช่องเสียบ

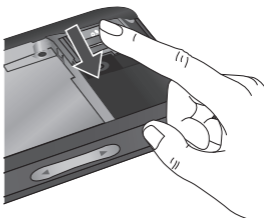

คำเตือน!

อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ มิเช่นนั้น อาจทำให้การ์ดหน่วยความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการ์ดหน่วยความจำอาจเสียหาย

การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้อฟอร์แมต คุณต้องฟอร์แมตการ์ดหน่วยความจำก่อนจึงจะสามารถใช้งานการ์ดได้

หมายเหตุ: ไฟล์ทั้งหมดในการดจะถูกลบออกเมื่อคุณฟอร์แมตการ์ด

- 1 บนหน้าจอหลัก แตะที่ **แอปพลิเคชัน** เพื่อเปิดเมนูแอปพลิเคชัน
- 2 เลื่อนแล้วแตะที่ **ตั้งค่า**
- 3 เลื่อนไปและแตะที่ **การ์ด SD** และพื้นที่จัดเก็บของ

โทรศัพท์ > ยกเลิกการเชื่อมต่อการ์ด SD

4 แตะ **ฟอร์แมต การ์ด SD**

5 แตะที่ **ฟอร์แมต การ์ด SD** แล้วยืนยันการเลือกของคุณ

6 หากคุณตั้งค่าล๊อคแบบให้ป้อนข้อมูลล๊อคแบบและเลือก **ฟอร์แมต** การ์ดจะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน

หมายเหตุ: หากมีข้อมูลอยู่ในการ์ดหน่วยความจำของคุณ โครงสร้างไฟล์เดออร์อาจจะแตกต่างกันไปจากเดิมภายหลังการฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก

เคล็ดลับ!

หากเชื่อมต่อการ์ดหน่วยความจำแล้ว คุณสามารถฟอร์แมตได้โดยมีขั้นตอนดังนี้

แตะ **แอปพลิเคชัน** > **ตั้งค่า** > **การ์ด SD** และพื้นที่จัดเก็บของโทรศัพท์ > **ฟอร์แมต การ์ด SD** แล้วเลือกยกเลิกการเชื่อมต่อ

หน้าจอล็อกของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่น ๆ

Touch calibration

การปรับเทียบหน้าจอของเครื่องทำได้โดยแตะกึ่งกลางของกากบาทตามตำแหน่งที่ปรากฏบนหน้าจอ วิธีนี้ทำให้มั่นใจว่าเมื่อคุณแตะบนหน้าจอรายการที่แตะจะทำงาน

หากโทรศัพท์ของคุณตอบสนองต่อการแตะบนหน้าจอไม่ถูกต้อง ทำตามขั้นตอนต่อไปเพื่อปรับเทียบอีกครั้ง

1. แตะ แอปพลิเคชัน > ตั้งค่า > เสียงและการแสดง > เลื่อนไปที่การตั้งค่าสัมผัส

2. แตะ **Touch calibration** และปฏิบัติตามคำแนะนำบนหน้าจอ

3. หลังจากปรับเทียบเสร็จเรียบร้อยแล้ว ให้เลือกกระหว่าง: **ตรวจสอบการปรับเทียบ** และ **บันทึกโดยไม่ตรวจสอบ** แล้วทำดำเนินการปรับเทียบให้เสร็จเรียบร้อยแล้ว

ล็อคและปลดล็อคหน้าจอ

เมื่อไม่มีการใช้งานโทรศัพท์ GT540 เครื่องจะกลับไปล็อคหน้าจอ หาก你不ใช้โทรศัพท์ชั่วคราว หน้าจอล็อกหรือหน้าจออื่นที่คุณกำลังดูจะเปลี่ยนเป็นหน้าจอล็อค จากนั้น หน้าจอจะมีดลงเพื่อประหยัดแบตเตอรี่ ในการทำให้โทรศัพท์ของคุณใช้งานได้ ให้กดปุ่ม **ส่ง**, **โฮม** หรือ **เปิดปิดเครื่อง** หน้าจอล็อคจะปรากฏ และที่ไอคอนล็อคและลากนิ้วไปทางขวาเพื่อปลดล็อคหน้าจอล็อค หน้าจอสุดท้ายที่คุณใช้จะเปิดขึ้น

หมายเหตุ: หากมีโปรแกรมกำลังเปิดใช้งานอยู่ในขณะที่คุณตั้งค่าแบบการล็อค โปรแกรมเหล่านั้นอาจจะยังคงทำงานอยู่ในโหมดล็อค ขอแนะนำให้ปิดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมดล็อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรเข้า/ออก, การเข้าใช้เว็บ และการสื่อสารข้อมูล)

เคล็ดลับ: การตั้งค่าแบบปลดล็อค

คุณสามารถวาดแบบปลดล็อคของคุณได้โดยการเชื่อมต่อสี่จุดหรือมากกว่าที่คุณตั้งค่าแบบไว้ หน้าจอของโทรศัพท์ของคุณจะถูกล็อคในการปลดล็อคโทรศัพท์ ใหวาดแบบตามที่คุณตั้งไวบนหน้าจอ

การใช้หน้าจอหลัก

เพียงเลื่อนนิ้วไปทางซ้ายหรือขวาเพื่อดู นอกจากนี้ คุณยังสามารถปรับแต่งพาดวิดเจ็ต ซึ่งเป็นปุ่มลัดไปยังแอปพลิเคชันและโฟลเดอร์ที่ใช้บ่อย

หมายเหตุ: ภาพหน้าจอบางภาพอาจแตกต่างกันตามผู้ให้บริการ

เลือกหน้าจอหลักเริ่มต้นของคุณ

เมนูสำหรับผู้ใช้งานแบ่งเป็นหน้าจอหลัก 2 ประเภท:
LG Home และ **Android Home**

คุณสามารถตั้งค่าหน้าจอหลักที่ใช้บ่อยเป็นค่าเริ่มต้น

หากคุณต้องการเปลี่ยนการตั้งค่าหน้าจอหลัก ให้เลือก **ตัวเลือกหน้าจอหลัก** จากเมนูแอปพลิเคชัน

- ในหน้าจอหลัก LG คุณสามารถดูปุ่มด่วนได้ที่ด้านล่างหน้าจอปุ่มด่วนจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ใช้บ่อยได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



แตะที่ไอคอน **โทรศัพท์** เพื่อ แสดงปุ่มหมายเลข แบบสัมผัสสำหรับใช้โทรออก

หน้าจอหลักของคุณ



แตะที่ไอคอน **ข้อความ** เพื่อเข้าเมนู **ข้อความ** คุณสามารถสร้าง **ข้อความ** ใหม่ได้อีก



แตะที่ **แอปพลิเคชัน** ด้านล่างหน้าจอ คุณสามารถดู **แอปพลิเคชัน** ที่ติดตั้งทั้งหมดได้ และเพื่อเลือกดู **แอปพลิเคชัน** ของคุณ

- ในหน้าจอ **หน้าหลัก** Android ให้แตะไอคอน **แอปพลิเคชัน** เพื่อเปิดเมนู **แอปพลิเคชัน** เปิดเมนู **แอปพลิเคชัน** เพียงแตะและเลื่อนหน้าจอขึ้นหรือ ลงเพื่อเลือกดู **แอปพลิเคชัน** เมื่อคุณเปิดและดูเมนู **แอปพลิเคชัน** คุณสามารถแตะไอคอน **หน้าหลัก** เพื่อกลับไปหน้าจอหลักได้

เคล็ดลับ!

แอปพลิเคชัน ที่มีประโยชน์ต่างๆ มีอยู่แล้วในการด **microSD** ที่อยู่ในเครื่อง ในการเปิด **แอปพลิเคชัน** ที่ต้องการ เพียงแตะที่ไอคอนจากรายการ **แอปพลิเคชัน**

หมายเหตุ: แอปพลิเคชันที่โหลดไว้วงหน้าอาจแตกต่างกันตาม **ซอฟต์แวร์** ของโทรศัพท์หรือผู้ให้บริการของคุณ

การเพิ่ม **Widget** ในหน้าจอหลักของคุณ

คุณสามารถปรับแต่งหน้าจอหลักของคุณโดยเพิ่ม **วิดเจ็ต** หรือ **โพลเดอร์** เพื่อให้ใช้โทรศัพท์ได้สะดวกยิ่งขึ้น ให้เพิ่ม **Widget** ที่ใช้อยู่ในหน้าจอหลัก


หมายเหตุ: LG Home และ **Android Home** มีฟังก์ชันนี้ในการเพิ่มไอคอนที่ต้องการในหน้าจอหลักของคุณ:


- 1 ในหน้าจอหลัก **แตะปุ่มเมนู** และเปิด **ตัวเลือก** แล้วเลือก **เพิ่ม**
- 2 ในเมนู **เพิ่ม** ในหน้าหลัก **แตะที่ประเภทรายการ** ที่คุณต้องการเพิ่ม
- 3 เช่น เลือก **โพลเดอร์** จากรายการแล้วแตะ
- 4 เลือก **รายชื่อที่มีหมายเลขโทรศัพท์** จากรายการแล้วแตะ

5 คุณจะเห็นไอคอนของโฟลเดอร์ใหม่บนหน้าจอหลัก ลากไปยังตำแหน่งที่ต้องการบนหน้าจอที่ต้องการ และการปล่อยนิ้วของคุณ

เคล็ดลับ: ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอหลัก ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่มในหน้าจอหลัก


ในการลบไอคอนแอปพลิเคชันจากหน้าจอหลัก:

1 แตะไอคอนนั้นค้างไว้ ไอคอน แอปพลิเคชัน จะเปลี่ยนเป็นไอคอนถึงขยะ 

2 ลากและดึงไอคอนแอปพลิเคชันไปยังไอคอนถึงขยะ 

การกลับไปแอพพลิเคชันที่เพิ่งใช้ล่าสุด

1 แตะปุ่มหน้าหลักค้างไว้ หน้าจอจะแสดงป๊อปอัพ โดยมีไอคอนของแอพพลิเคชันที่คุณเพิ่งใช้ล่าสุด

2 แตะที่ไอคอนเพื่อเปิดแอพพลิเคชัน หรือแตะปุ่ม **กลับ**  เพื่อกลับไปแอพพลิเคชันปัจจุบัน

แถบการแจ้ง

แถบการแจ้งอยู่ด้านบนสุด แตะค้างไว้ แล้วเลื่อนแถบการแจ้งลงด้วยนิ้ว

แถบการแจ้งลงด้วยนิ้วมือ หรือในหน้าจอหลัก แตะปุ่ม **เมนู** แล้วเลือก **การแจ้ง** ในหน้าจอนี้ คุณจะสามารถตรวจสอบสถานะ Wi-Fi และบลูทูธ ตลอดจนการแจ้งเตือนอื่นๆ


การดูแถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูลโทรศัพท์ เช่น ความแรงของสัญญาณ, ขอความใหม่, อายุแบตเตอรี่ และบลูทูธที่ใช้งานและการเชื่อมต่อข้อมูล

ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ



[แถบสถานะ]

ไอคอน	รายละเอียด
	ไม่มีซิมการ์ด

หน้าจอหลักของคุณ

ไอคอน	รายละเอียด
	ไม่มีสัญญาณ
	เชื่อมต่อกับเครือข่าย Wi-Fi
	ชุดหูฟังแบบใช้สาย
	โบนสาย
	พักสาย
	เปิดลำโพง
	ปิดโมโครโฟนโทรศัพท์
	สายไม่ได้รับ
	เปิดบลูทูธ
	เชื่อมต่อกับอุปกรณ์บลูทูธ
	ค่าเตือนระบบ
	ตั้งปลุก
	ข้อความเสียงใหม่

ไอคอน	รายละเอียด
	โหมดเครื่องบิน
	ปิดเสียงเรียกเข้า
	โหมดสั่น
	ไม่มีการ์ด SD
	ชาร์จแบตเตอรี่เต็มแล้ว
	กำลังชาร์จแบตเตอรี่
	ข้อมูลเข้า
	ข้อมูลออก
	ข้อมูลเข้าและออก
	โทรศัพท์เชื่อมต่อกับคอมพิวเตอร์ผ่านสาย USB
	กำลังดาวน์โหลดข้อมูล
	กำลังอัปโหลดข้อมูล

ไอคอน	รายละเอียด
	เปิด GPS
	กำลังรับข้อมูล ตำแหน่งจาก GPS
	2 การแจ้งเตือน ไม่ได้ดู
	กำลังใช้สาย
	กำลังซิงค์ข้อมูล
	ดาวน์โหลดเสร็จสิ้น
	Google Mail ใหม่
	ข้อความ Google Talk ใหม่
	ข้อความใหม่
	กำลังเล่นเพลง
	เหตุการณ์ที่จะ เกิดขึ้น

แป้นพิมพ์บนหน้าจอ

คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏบนหน้าจอโดยอัตโนมัติ เมื่อคุณจำเป็นต้องป้อนข้อความในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะที่ฟิลดข้อความที่คุณต้องการป้อนข้อความ

การใช้ปุ่มกดและการป้อนข้อความ





แตะเพื่อสลับระหว่างตัวพิมพ์เล็กและตัวพิมพ์ใหญ่และเพื่อป้อนตัวอักษรตัวพิมพ์ใหญ่ตัวอักษรถัดไปที่คุณพิมพ์จะเป็นตัวพิมพ์ใหญ่และสองครั้งเพื่อเปิดโหมดตัวพิมพ์ใหญ่วงกลมสีบนปุ่มจะบอกว่าคุณล็อคตัวพิมพ์ใหญ่ (สีเขียว) หรือสำหรับหนึ่งตัวอักษร (สีส้ม)





แตะเพื่อเว้นวรรค
แตะเพื่อเปิดหรือปิดระบบช่วยสะกดคำ XT9

หน้าจอหลักของคุณ

 แตะเพื่อดูเมนูตั้งค่า เลือกจาก ตั้งค่าโปรแกรมแก้ไข, ประเภทปุ่มกด, ภาษาที่ใช้เขียน, พจนานุกรมผู้ใช้ และ วิธีป้อนขอมูล

 แตะเพื่อซ่อนหรือแสดงแป้นพิมพ์บนหน้าจอ

 แตะเพื่อลบตัวอักษรก่อนหน้า

 123 @#*
แตะเพื่อสลับเป็นแป้นพิมพ์ตัวเลขและสัญลักษณ์

 แตะเพื่อขึ้นบรรทัดใหม่ในฟิลด์ข้อความ

ระบบช่วยสะกดคำ XT9

แป้นพิมพ์บนหน้าจอมีระบบช่วยสะกดคำเพื่อช่วยให้พิมพ์ได้อย่างรวดเร็วและถูกต้อง ระบบช่วยสะกดคำ XT9 ใช้พจนานุกรมในตัวเพื่อรับรู้คำตามลำดับปุ่มตัวเลขที่คุณแตะเพียงแตะที่ปุ่มตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณจะป้อน พจนานุกรมจะคาดคะเนได้ถึงคำศัพท์ที่คุณต้องการใช้

โหมด 123

โหมดนี้อินุญาตให้คุณป้อนเบอร์โทรศัพท์ในข้อความตัวอักษร (เช่น เบอร์โทรศัพท์) ได้รวดเร็วยิ่งขึ้น และปุ่มตัวเลขที่ต้องการก่อนที่จะเปลี่ยนเป็นโหมดป้อนข้อความที่เหมาะสมด้วยตนเอง

การตั้งค่าแอคเคาท์ Google

ครั้งแรกที่คุณเปิดแอปพลิเคชัน Google ในโทรศัพท์ของคุณจะต้องไขว่คว้าด้วยแอคเคาท์ Google ของคุณ หากคุณไม่มีแอคเคาท์ Google เครื่องจะขอให้คุณสร้างแอคเคาท์

การสร้างแอคเคาท์ Google

- 1 บนหน้าจอหลัก แตะแท็บแอปพลิเคชัน เพื่อเปิดเมนูแอปพลิเคชัน
- 2 แตะ **Google Mail** และแตะ **ถัดไป > สร้าง** เพื่อเริ่มวิธีการตั้งค่า Google Mail และตั้งค่า
- 3 แตะที่ฟิลด์ข้อความตัวอักษรเพื่อเปิดแป้นพิมพ์สัมผัส และป้อนชื่อและชื่อผู้ใช้แอคเคาท์ Google ของคุณ ขณะป้อนข้อความ คุณสามารถเลื่อนไปที่ฟิลด์ข้อความตัวอักษรถัดไปได้โดยแตะ **ถัดไป** บนแป้นพิมพ์
- 4 เมื่อคุณป้อนชื่อและชื่อผู้ใช้เสร็จแล้ว ให้แตะ **ถัดไป** โทรศัพท์ของคุณกำลังติดต่อกับเซิร์ฟเวอร์ Google

และกำลังตรวจสอบชื่อผู้ใช้นั้น

- 5 ป้อนและป้อนรหัสผ่านอีกครั้ง จากนั้น ปฏิบัติตามคำแนะนำและป้อนข้อมูลที่จำเป็นและไม่จำเป็นเกี่ยวกับแอคเคาท์ รอสักครู่เพื่อให้เซิร์ฟเวอร์สร้างแอคเคาท์ของคุณ

การใช้อินแอคเคาท์ Google ของคุณ

- 1 ป้อนอีเมลแอตเดรสและรหัสผ่านของคุณ จากนั้นแตะ **ลงชื่อเข้าใช้** รอสักครู่เพื่อใช้อิน
- 2 หลังจากใช้อิน คุณจะสามารถใช้ Google Mail และใช้บริการต่างๆ ของ Google บนโทรศัพท์ได้
- 3 เมื่อคุณตั้งค่าแอคเคาท์ Google บนโทรศัพท์ โทรศัพท์ของคุณจะซิงโครไนซ์กับแอคเคาท์ Google บนเว็บโดยอัตโนมัติ (ขึ้นอยู่กับวิธีการซิงโครไนซ์ของคุณ)

การตั้งค่าแอคเคาท์ Google

หลังจากไชน์อิน คุณสามารถใช้ Google Mail, Google Calendar, Android Market และ Google Map ได้ เช่นดาวน์โหลดแอปพลิเคชันจาก Android Market สารองข้อมูลการตั้งค่าของคุณในเซิร์ฟเวอร์ Google และใช้บริการอื่นๆ ของ Google บนโทรศัพท์ได้

ข้อความประกาศสำคัญ!

- บางแอปพลิเคชัน เช่นปฏิทินจะสามารถทำงานได้กับแอคเคาท์ Google แรกที่คุณเพิ่มเท่านั้น หากคุณต้องการใช้มากกว่าหนึ่งแอคเคาท์ Google ในโทรศัพท์ของคุณ โปรดตรวจสอบให้แน่ใจว่าคุณทำการไชน์อินด้วยแอคเคาท์ที่คุณต้องการใช้งานกับแอปพลิเคชันนั้นๆ ก่อนการใช้งานเมื่อคุณทำการไชน์อินรายชื่อ, ขอบความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บจะซิงโครไนซ์กับโทรศัพท์ของคุณหากคุณไม่ได้ไชน์อินแอคเคาท์ Google


ระหว่างการตั้งค่า คุณจะต้องไชน์อินหรือสร้างแอคเคาท์ Google ในครั้งแรกที่คุณเริ่มต้นแอปพลิเคชันที่ต้องใช้ เช่น Gmail หรือ Android Market

- หากคุณต้องการใช้คุณสมบัติสารองข้อมูลเพื่อเรียกคืนการตั้งค่าในโทรศัพท์เครื่องนี้ จากโทรศัพท์เครื่องอื่นที่ใช้ Android OS หรือใหม่กว่า คุณต้องไชน์อินแอคเคาท์ Google ในตอนนี้ระหว่างการตั้งค่า หากคุณรอให้การตั้งค่าเสร็จสมบูรณ์ การตั้งค่าจะไม่ถูกเรียกคืน
- หากคุณมีแอคเคาท์องค์กรของบริษัทหรือองค์กรอื่น แผนกไอทีของคุณอาจมีคำแนะนำพิเศษเกี่ยวกับวิธีไชน์อินแอคเคาท์

การโทร

การโทรออก

- 1 บนหน้าจอหลัก ให้กดปุ่มส่ง  และแตะไอคอนโทรศัพท์  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขบนปุ่มกดในการลบตัวเลข ให้แตะที่ไอคอน ลบ 
- 3 แตะที่ไอคอน โทร  เพื่อโทรออก
- 4 ในการวางสาย ให้แตะ วางสาย หรือกดปุ่ม วางสาย 



เคล็ดลับ! ในการป้อน “+” เพื่อโทรออกต่างประเทศ ให้แตะ  ค้างไว้


การโทรออกโดยใช้รายชื่อ


- 1 บนหน้าจอหลัก ให้แตะ แท็บ แอปพลิเคชัน เพื่อเปิดเมนูแอปพลิเคชัน แตะ รายชื่อ เพื่อเปิดรายชื่อ

- 2 เลื่อนดูรายชื่อหรือป้อนอักขระตัวแรกของรายชื่อที่คุณต้องการโทรโดยแตะที่ **คนหา**
- 3 ในรายการ ให้แตะที่รายชื่อที่คุณต้องการโทร แล้วเลือกหมายเลขที่จะใช้หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข

การรับสายและการปฏิเสธสายเรียกเขา

เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่มส่ง  เพื่อรับสาย คุณยังสามารถลากไอคอน โทร  ไปด้านขวาได้

กดปุ่ม วางสาย  เพื่อปฏิเสธสายเรียกเขา

เคล็ดลับ! เมื่อมีเสียงเรียกเขา แตะและเลื่อนไอคอนเจ็บบ  ไปทางซ้ายหากคุณต้องการสลับไปที่โหมดปิดเสียงเรียกเขา

การโทร

การปรับระดับเสียง สายสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้สาย ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงทางด้านซ้ายของโทรศัพท์

ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย สายเรียกซ้อน และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

- 1 บนหน้าจอหลัก
แตะแท็บ **แอปพลิเคชัน**
เพื่อเปิดเมนูแอปพลิเคชัน
- 2 เลื่อนแล้วแตะที่ **ตั้งค่า**
- 3 แตะ **ตั้งค่าการโทร**
และเลือกตัวเลือกที่คุณต้องการปรับ

< กำหนดเบอร์โทรออก >

เลือก กำหนดเบอร์โทรออก เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณต้องใช้รหัส PIN2 ซึ่งได้จากผู้ให้บริการของคุณ เฉพาะหมายเลขที่

อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

< ข้อความเสียง >

ตั้งค่าศูนย์ข้อความเสียงของคุณ

บริการข้อความเสียง - ให้คุณเลือกบริการข้อความเสียงของผู้ให้บริการหรือบริการอื่น เช่น Google Voice

ตั้งค่าข้อความเสียง - หากคุณใช้บริการข้อความเสียงของผู้ให้บริการ ตัวเลือกนี้จะให้คุณป้อนหมายเลขโทรศัพท์ที่ใช้ฟังและจัดการข้อความเสียงของคุณ

< ตั้งค่าการโทรอื่นๆ >

ข้อความขอโทษ - เมื่อคุณปฏิเสธสาย คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการตอบกลับข้อความในระหว่างการประชุม

การส่งต่อสาย - คุณสามารถกำหนดให้ส่งต่อสายเมื่อคุณใช้สาย ไม้รับสาย และอื่นๆ ได้

เลือกจาก **ส่งต่อเสมอ, ส่งต่อเมื่อไม่ว่าง, ส่งต่อเมื่อไม่รับสาย หรือส่งต่อเมื่อติดต่อไม่ได้**

ป้อนหมายเลขที่ต้องการให้ส่งต่อสาย

หมายเหตุ: การโอนสายจะมีค่าใช้จ่าย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

ป้องกันการโทร - เลือกเมื่อคุณต้องการป้องกันการโทรออก ป้อนรหัสผ่านสำหรับจำกัดการโทร

โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

ค่าโทร - ดูค่าใช้จ่ายการโทรของคุณบริการนี้ขึ้นอยู่กับเครือข่าย(ผู้ให้บริการบางรายไม่รองรับ ฟังก์ชันนี้)

เวลาโทร - ระยะเวลาการโทรทั้งหมด ได้แก่ ทุกสาย สายโทรออก สายที่ได้รับ และการโทรครั้งล่าสุด

ตั้งค่าการโทรเพิ่มเติม - ตัวเลือกนี้จะช่วยให้คุณเปลี่ยนแปลงการตั้งค่าต่อไปนี้:

ข้อมูลผู้โทร: เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่

สายเรียกซ้อน: หากเปิดใช้สายเรียกซ้อน คุณจะได้รับแจ้งสายเรียกเข้าขณะกำลังใช้สาย (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

สายโทรศัพท์ที่กำลังใช้: ให้คุณเลือกสายโทรศัพท์





รายชื่อ

คุณสามารถเพิ่มรายชื่อในโทรศัพท์และซิงโครไนซ์กับรายชื่อในแอคเคาท์ Google หรือแอคเคาท์อื่นที่สนับสนุนการซิงโครไนซ์รายชื่อ

การค้นหารายชื่อ

- 1 บนหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน เพื่อเปิดเมนูแอปพลิเคชัน แตะ รายชื่อ เพื่อเปิดรายชื่อ
- 2 แตะ ค้นหา และป้อนชื่อโดยไข่มุกกด

การเพิ่มรายชื่อใหม่

- 1 บนหน้าจอหลัก ให้กดปุ่มส่ง  และแตะโทรศัพท์  เพื่อเปิดปุ่มกดป้อนหมายเลขของรายชื่อใหม่ แล้วแตะปุ่มเมนู  แตะ เพิ่มในรายชื่อ และสร้างรายชื่อใหม่
- 2 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะ  คุณสามารถใช้รูปภาพที่บันทึกไว้ หรือถ่ายรูปใหม่

- 3 เลือกประเภทรายชื่อ และเลือกจาก โทรศัพท์, ซิม และ แอคเคาท์ Google


- 4 แตะที่ฟิลด์ข้อความเพื่อเปิดแป้นพิมพ์สัมผัสและป้อนชื่อใหม่

- 5 แตะที่ชนิดของข้อมูลรายชื่อ และป้อนรายละเอียดเกี่ยวกับรายชื่อ

- 6 แตะที่ เสร็จ เพื่อบันทึกรายชื่อ

โทรด่วน

คุณสามารถกำหนดรายชื่อที่โทรออกบ่อยเป็นหมายเลขโทรด่วนได้

- 1 ในรายการรายชื่อของคุณ ให้แตะปุ่ม เมนู  และเลือก อื่นๆ > โทรด่วน
- 2 ข้อความเสียงของคุณถูกตั้งค่าไว้ที่โทรด่วน 1 คุณจะเปลี่ยนไม่ได้
- 3 รายชื่อของคุณจะเปิดขึ้นเลือกรายชื่อที่คุณต้องการกำหนดให้กับหมายเลขนั้น โดยการแตะที่หมายเลขโทรศัพท์หนึ่งครั้ง

หมายเหตุ: ในการลบรายชื่อ
โทรศพนอกจากรายการ
ห้แตะที่รายชื่อที่กำหนดค้างไว้
เมื่อนาจอปอปปอัปปรากฏขึ้น
ให้แตะ ลบ แลวเลือก ตกลง


ข้อความ/อีเมล

ข้อความ

โทรศัพท์ GT540 ของคุณได้
ผสมผสาน SMS และ MMS
ไว้ในเมนูที่ใช้งาน
เพียงเมนูเดียว


การส่งข้อความ


- 1 บนหน้าจอหลัก ให้แตะ
แท็บ แอปพลิเคชัน
เพื่อเปิดเมนูแอปพลิเคชัน
แตะ ข้อความ และแตะ
ข้อความใหม่
เพื่อเปิดข้อความว่างเปล่า
- 2 ป้อนเบอร์โทรศัพท์ในฟิลด์
ถึง ขณะที่คุณป้อนหมายเลข
รายชื่อที่ตรงกันจะปรากฏขึ้น
คุณสามารถแตะผู้รับ
ที่แนะนำหรือป้อนเบอร์
โทรต่อ คุณสามารถเพิ่ม
รายชื่อหลายรายการได้
บันทึก: คุณจะต้องเสียค่า
ใช้จ่ายสำหรับข้อความตัว
อักษรในการส่งข้อความ
ให้กับผู้รับทุกคน
- 3 แตะกล่องข้อความด้านล่าง
เพื่อเริ่มต้นป้อนข้อความ

4 แตะปุ่ม 
เพื่อเปิดเมนูตัวเลือก
เลือกจาก เพิ่มเรื่อง, แนบ,
ส่ง, แทรกสโมลล์, ยกเลิก
และ เรดทั้งหมด

5 แตะที่  เพื่อส่งข้อความ

6 หน้าจอเปิดขึ้น
พร้อมมีชื่อตามด้วยข้อความ
การตอบกลับปรากฏบน
หน้าจอ ขณะที่คุณดูและ
ส่งข้อความเพิ่มเติม
เรดข้อความจะถูกสร้างขึ้น

 **คำเตือน:** การจำกัดตัว
อักษรที่ 160 ตัวอักษรอาจจะ
แตกต่างกัน
ไปในแต่ละประเทศขึ้นอยู่กับ
วิธีการเข้ารหัส SMS

 **คำเตือน:** หากมีการใส่
รูปภาพ, วิดีโอหรือไฟล์เสียง
ลงในข้อความ SMSข้อความ
ดังกล่าวจะถูกแปลงเป็นขอ
ความMMS โดยอัตโนมัติ
ซึ่งคุณจะต้องเสียค่าใช้จ่าย
ตามนั้น

หมายเหตุ: เมื่อคุณได้รับข้อความ SMS ในระหว่างการโทร จะไม่มีการแจ้งเตือน แต่คุณ จะเห็นว่า มีข้อความเข้านบนแถบ เครื่องหมาย

การเปลี่ยนการตั้งค่าข้อความของคุณ

การตั้งค่าข้อความของโทรศัพท์ GT540 จะได้รับการกำหนดค่าไวล่วงหน้าแล้ว ดังนั้นคุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนการตั้งค่าโดยอิงตามความต้องการของคุณแต่ละไอคอน **ข้อความ** บนหน้าจอหลัก จากนั้นแตะปุ่ม **เมนู** แตะที่ **ตั้งค่า**

< ตั้งค่าที่เก็บข้อมูล >

ลบข้อความเก่า - แตะเพื่อเลือกและให้โทรศัพท์ลบข้อความเก่าในเซตเมื่อถึงขีดจำกัดข้อความตัวอักษรหรือขีดจำกัดข้อความมัลติมีเดีย ไม่เลือกเพื่อเก็บข้อความทั้งหมดไว้

ขีดจำกัดข้อความตัวอักษร - แตะเพื่อตั้งจำนวนข้อความที่จะบันทึกต่อเซตของข้อความตัวอักษร

ขีดจำกัดข้อความมัลติมีเดีย - แตะเพื่อตั้งจำนวนข้อความที่จะบันทึกต่อเซตของข้อความมัลติมีเดีย

< การตั้งค่า SMS >

รายงานผลการส่ง - เปิดทำงานเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว

จัดการข้อความซิมการ์ด - จัดการข้อความที่จัดเก็บบนซิมการ์ดของคุณ

อายุข้อความ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

ศูนย์ข้อความมัลติมีเดีย - ป้อนรายละเอียดของศูนย์ข้อความของคุณ

< ตั้งค่า MMS >

รายงานผลการส่ง - เลือกเพื่อขอรายงานผลการส่ง

อนุญาตรายงานการส่ง - เลือกเพื่อให้ส่งข้อความยืนยันการส่งได้

ข้อความ/อีเมล

รายงานการอ่าน - เลือกเพื่อ
ขอรายงานการอ่านของแต่ละ
ข้อความที่คุณส่ง

อนุญาตรายงานการอ่าน -
เลือกเพื่อให้ส่งข้อความยืนยัน
การอ่านได้

เรียกดูอัตโนมัติ - เปิดทำงาน
เพื่อเรียกดูข้อความอัตโนมัติ

เรียกดูโรมมิ่งอัตโนมัติ -
เปิดทำงานเพื่อเรียกดูข้อความ
ขณะกำลังโรมมิ่ง

ตั้งค่าระดับความสำคัญ -
เลือกระดับความสำคัญของ
MMS

ช่วงที่มีผลใช้ - เลือกระยะเวลา
ที่จัดเก็บข้อความไว้ใน
ศูนย์ข้อความ

โหมดการสร้าง

จำกัด: ในโหมดนี้ MMS ของ
อุปกรณ์จะสร้างและส่งขอ
ความที่มีเนื้อหาของ Core MM
Content Domain

คำเตือน: ในโหมดนี้ MMS
ของอุปกรณ์จะแนะนำผู้ใช้ใน
การสร้างและส่งข้อความที่มี
เนื้อหาของ Core MM
Content Domain ภาแนแนว
ทางนี้มีให้ผ่านทางข้อความคำ

เตือน

วางอยู่: ในโหมดนี้ MMS
Client ยอมให้ผู้ใช้เพิ่มเนื้อหา
ใดๆ ลงในข้อความ

เรียกดูข้อความโฆษณา -
อนุญาตให้รับข้อความโฆษณา

< ข้อความบริการ >

เลือกที่จะ รับหรือบล็อกข้อ
ความบริการ

< ตั้งค่าการแจ้ง >

เปิดทำงาน เพื่อแสดงการแจ้ง
เตือนข้อความในแถบสถานะ
พร้อมเลือกเสียงเรียกเขาและ
เปิดทำงานการสั่นเพื่อเตือน
คุณว่ามี ข้อความใหม่

< บริการข้อมูล ตั้งค่าบริการ >

เลือกที่จะรับ, บล็อก, หรือดู
หรือแก้ไขของเพื่อรับ
ข้อความบริการ
(ข้อความรับขอมูล)
และเลือกภาษาของ
ข้อความบริการ

การตั้งค่าอีเมล

ติดต่อสื่อสารได้ตลอดเวลา
แม้ในขณะที่เดินทางโดยส่ง
อีเมลจาก GT540 ของคุณ
ซึ่งสามารถตั้งค่าอีเมลแอด

เคาท์แบบ POP3 หรือ IMAP4
ได้อย่างรวดเร็วและง่ายดาย

- 1 บนหน้าจอหลัก แตะที่ **แอปพลิเคชัน** แล้วแตะ **อีเมล** เพื่อป้อนรายชื่อของคุณ หรือคุณสามารถแตะ **อีเมล** บนหน้าจอหลักเพื่อการเข้าใช้โดยตรงได้อีกด้วย
- 2 หากยังไม่ได้ตั้งค่าอีเมล แอคเคาท์ ให้เริ่มต้นใช้งานที่ **ริชาร์ดการตั้งค่าอีเมล**

เคล็ดลับ! หากได้ตั้งค่าแอคเคาท์อีเมลไว้แล้ว ริชาร์ดจะไม่เปิดใช้อัตโนมัติ

การส่งอีเมลโดยใช้แอคเคาท์ใหม่

- 1 แตะ **ไอคอน อีเมล** บนหน้าจอหลัก และแตะที่ **เขียนข้อความ** เพื่อเปิดข้อความเปล่า
- 2 ป้อนแอดเดรสผู้รับ แล้วเขียนข้อความของคุณ คุณยังสามารถแนบภาพ, วิดีโอ, ไฟล์เสียง

และรูปแบบไฟล์เอกสารชนิดต่างๆ ได้

- 3 แตะที่ **ส่ง** เพื่อส่งข้อความ

เคล็ดลับ! ในระหว่างการเชื่อมต่อ Wi-Fi จะมีการรับและส่งอีเมลโดยใช้ Wi-Fi

การเปลี่ยนการตั้งค่าของบัญชีอีเมล

คุณสามารถเปลี่ยนแปลงการตั้งค่าอีเมลตามความต้องการของคุณได้

- 1 แตะ **ไอคอน อีเมล** บนหน้าจอหลัก และแตะ **บัญชีที่ต้องการ**
- 2 แตะ **เมนู** เพื่อเปิดเมนูตัวเลือก และแตะ **ตั้งค่า**
- 3 คุณสามารถปรับตัวเลือกต่อไปนี้: **การตั้งค่าแอคเคาท์, ตั้งค่าทั่วไป, ดาวน์โหลดตัวเลือก, และ ข้อความสแปม**

เครือข่ายสังคม

ด้วยโทรศัพท์ของคุณ คุณสามารถผลิตเพลลิ่งกับเครือข่ายสังคมและจัดไมโครบล็อกของคุณในชุมชนออนไลน์ได้ คุณสามารถอัปเดตสถานะปัจจุบันของคุณและดูการอัปเดตสถานะของเพื่อนได้ตามเวลาจริง

คุณสามารถเพิ่มแอคเคาท์ Facebook, หรือ Twitter บนโทรศัพท์ของคุณได้ หากคุณไม่มีแอคเคาท์ สามารถเยี่ยมชมเว็บไซต์เหล่านั้นได้เพื่อตั้งค่าแอคเคาท์

หมายเหตุ! เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การเพิ่มแอคเคาท์ไปยังโทรศัพท์ของคุณ

- 1 บนหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** เพื่อเปิดเมนูแอปพลิเคชัน
- 2 เลือกแอปพลิเคชัน SNS ที่คุณต้องการใช้

3 ป้อนอีเมลแอดเดรสและรหัสผ่านที่คุณตั้งคามาบนชุมชนของคุณ แล้วแตะ **ล็อกอิน**

4 คอยการตรวจสอบแอคเคาท์ของคุณ

5 หากคุณแตะชุมชนของคุณ คุณสามารถดูสถานะปัจจุบันของชุมชนได้

เคล็ดลับ! หากคุณเพิ่ม Widget เครือข่ายสังคมบนหน้าจอหลัก Widget จะแสดงสถานะเมื่อโทรศัพท์ของคุณอัปเดตจากเครือข่าย รับการอัปเดตของทุกคน, การประกาศและรูปภาพ – ทั้งหมดด้วยกันได้ตลอดเวลาและทันสมัยอยู่เสมอโดยไม่ต้องล็อกอินเข้าสู่แอปพลิเคชัน

คุณสามารถเข้าใช้ชุมชนโดยตรงได้โดยแตะที่ Widget

กำลังดูและกำลังอัปเดตสถานะของคุณ

- 1 เลือกชุมชนที่ต้องการแก้ไข
- 2 ขึ้น คุณสามารถดูสถานะปัจจุบันของชุมชนของคุณได้
- 3 คุณสามารถอัปเดตสถานะปัจจุบันด้วยความเห็นหรือการอัปโหลดรูปภาพได้

บันทึก: ทั้งนี้ขึ้นกับบริการเครือข่าย

เคล็ดลับ: คุณสามารถใช้ข้อมูลเกี่ยวกับเพื่อนได้ใน SNS เท่านั้น หรือขึงคข้อมูลทั้งหมดกับรายชื่อ

การลบแอคเคาท์ออกจากโทรศัพท์ของคุณ


- 1 เลือก แอปพลิเคชัน > ตั้งค่า > ตั้งค่าแอคเคาท์และขึงค
- 2 เลือกแอคเคาท์ที่คุณต้องการลบ แลแล้วแตะ ลบแอคเคาท์

กล้องถ่ายรูป

ทำความรู้จักกับช่องมองภาพ

ความสว่าง – ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เขวในภาพ เลื่อนตัววงซึ่งความสว่างบนแถบไปทาง “-” เพื่อให้ได้ภาพที่มีความสว่างน้อยลง หรือไปทาง “+” เพื่อให้ได้ภาพที่มีความสว่างมากขึ้น

ซูม – ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้

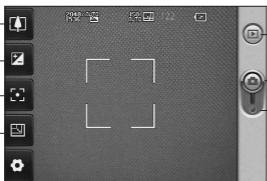

คลังภาพ – คุณสามารถเข้าดูรูปภาพที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูปเพียงแตะ และคลังภาพของคุณจะปรากฏบนหน้าจอ

การถ่ายภาพ

ตั้งค่า – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า โปรดดูที่ **การใช้การตั้งค่าขั้นสูง**

โหมดวิดีโอ – เลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ

ขนาดภาพ – แตะเพื่อตั้งค่าขนาด (พิกเซล) ของภาพที่ถ่าย เลือกค่าพิกเซลจากตัวเลือก: 3M (2048x1536), 2M (1600x1200), 1M (1280x960), VGA (640x480), QVGA (320x240)

ไฟแฟลช – แตะไอคอนนี้เพื่อเลือกเมนูตัวเลือก โปรดดูที่ **การใช้โหมดไฟแฟลช**

หมายเหตุ: คุณต้องใส่การ์ดหน่วยความจำก่อนเพื่อถ่ายภาพ หากไม่ได้ใส่การ์ดหน่วยความจำ คุณจะไม่สามารถบันทึกภาพที่ถ่ายได้

เคล็ดลับ! คุณสามารถปิดตัวเลือกปุ่มลัดเพื่อใหหน้าจอของมุมมองภาพโล่งขึ้นได้เพียงแตะที่กึ่งกลางของมุมมองภาพหนึ่งครั้ง ในการเรียกใช้งานตัวเลือกใหม่ให้แตะที่หน้าจออีกครั้ง

การใช้โหมดโฟกัส

คุณสามารถเลือกโหมดโฟกัสตามตัวเลือกต่อไปนี้;

โฟกัสอัตโนมัติ – ตั้งค่ากล้องถ่ายรูปให้โฟกัสโดยอัตโนมัติ

มาโคร – โหมดมาโครให้คุณถ่ายภาพระยะใกล้มาก หากคุณกำลังพยายามถ่ายภาพระยะใกล้แต่ของโฟกัสยังคงเป็นสีแดง ให้ลองเปิดโหมดมาโคร

การติดตามหน้า – หากคุณตั้งค่า Face tracking และถ่ายภาพ กล้องของคุณจะตรวจจับและโฟกัสที่ใบหน้าโดยอัตโนมัติ

หมายเหตุ: ไม่สนับสนุนการซูมในโหมดการติดตามหน้า

เลือกเอง – ตั้งค่ากล้องเพื่อเลือกโฟกัสเอง

การถ่ายภาพด่วน

- 1 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์ค้างไว้
- 2 ถือโทรศัพท์ในแนวนอนแล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 3 กดปุ่มถ่ายภาพลงเบาๆ ของโฟกัสจะปรากฏขึ้นที่กลางหน้าจอของมุมมองภาพ
- 4 จัดตำแหน่งโทรศัพท์เพื่อให้คุณสามารถมองเห็นวัตถุในช่องโฟกัส
- 5 เมื่อช่องโฟกัสเป็นสีเขียวแสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 6 กดปุ่มถ่ายภาพค้างไว้








เมื่อคุณถ่ายภาพแล้ว

ภาพที่ถ่ายจะปรากฏบนหน้าจอล

แบ่งปัน แตะเพื่อแบ่งปันรูปทาง **บลูทูธ, อีเมล, Google Mail, ข้อความ** หรือ **เครือข่ายสังคม**

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อโหลดข้อความ MMS ขณะโรมมิ่ง

กล้องถ่ายรูป

-  **ตั้งเป็น** แตะเพื่อใช้ภาพเป็นไอคอนรายชื่อหรือพื้นหลัง
-  **แก้ไขชื่อ** แตะเพื่อแก้ไขชื่อของภาพที่เลือก
-  **แก้ไข** แตะเพื่อแก้ไขภาพโดยใช้เครื่องมือต่างๆ
-  แตะเพื่อดูคลังภาพที่บันทึกไว้
-  แตะเพื่อลบภาพ
-  แตะเพื่อถ่ายภาพอื่นทันทีโดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้
-  แตะเพื่อกลับไปเมนูก่อนหน้า

การใช้การตั้งค่าขั้นสูง

ในช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด

คุณสามารถเปลี่ยนการตั้งค่ากล้องถ่ายรูปใดโดยเลื่อนปุ่มหมุน หลังจากเลือกตัวเลือก ให้แตะปุ่ม **กลับ** 

คุณภาพของภาพ – เลือกจาก **ละเอียดมาก**, **ละเอียด** และ **ปกติ**
คุณภาพที่ละเอียดมากขึ้นเท่า

ใด ความคมชัดของรูปภาพก็มากขึ้นเท่านั้น อย่างไรก็ตาม ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่งหมายความว่า คุณจะ สามารถจัดเก็บรูปภาพในหน่วยความจำได้น้อยลง

สมดุลแสง – เลือกจาก **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** และ **มิดครีမ်**

โหมดชัตเตอร์ – เลือกจาก **ปกติ**, **ชัตเตอร์ต่อเนื่อง**, **ถ่ายภาพสวยงาม**, **เฟรมชัตเตอร์**, **ถ่ายภาพพาโนรามา**, **ถ่ายภาพอาร์ต** และ **ถ่ายภาพยิ้ม**

ตัวตั้งเวลา – ตัวตั้งเวลาทำให้คุณสามารถตั้งช่วงเวลาหน่วงหลังจากที่กดชัตเตอร์แล้ว เลือก **ปิด**, **3 วินาที**, **5 วินาที** หรือ **10 วินาที** ซึ่งเป็นวิธีการที่ช่วยให้คุณถ่ายรูปตนเองได้

ISO – ISO กำหนดความไวของเซ็นเซอร์แสงในกล้อง ISO ที่มากขึ้น ความไวของกล้องก็มากขึ้นเท่านั้น ซึ่งจะเป็นประโยชน์สำหรับสภาพแวดล้อมที่มีมืดในขณะที่คุณไม่สามารถใช้แฟลช

ได้ เลือกจากค่า ISO ที่มีได้
แก่ **อัตโนมัติ, 100, 200**
และ **400**

โหมดถ่ายภาพ – เลือกจาก
อัตโนมัติ, รูปคน, ทิวทัศน์,
กีฬา, กลางคืน, และ
พระอาทิตย์ตก

เอฟเฟกต์สี – เลือกโทนสี
สำหรับรูปใหม่

เมื่อคุณเลือกแล้วให้ใช้ปุ่มกลับ
เพื่อปิดเมนูโทนสี ขณะนี้คุณ
พร้อมถ่ายภาพแล้ว

หมายเหตุ: คุณสามารถ
เปลี่ยนรูปภาพสีเป็นขาวดำหรือ
ซีเปียได้ แต่ไม่สามารถเปลี่ยน
รูป

ภาพขาวดำหรือซีเปียเป็นสีได้

ภาพที่ถ่าย – เลือกจาก **เปิด,**
พัก และ ปิด หากคุณเลือก
เปิด หลังจากถ่ายภาพ
หน้าจอจะแสดง 1 วินาที
และไปที่ดูตัวอย่างทันที

หน้าจอกริด – เลือกจาก **ปิด,**
2x2 หรือ 3x3

เสียงชัตเตอร์ – เลือกเสียง
ชัตเตอร์เสียงใดเสียงหนึ่งจาก
สี่เสียง

จีโอแท็ก – เปิดฟังก์ชันนี้เพื่อ
ใช้บริการตามพื้นที่ของโทร
ศัพท ภาพภายในที่ที่ต้องการ
และแท็กรูปภาพด้วยตำแหน่ง
ที่ถ่ายภาพ หากคุณอัปโหลด
รูปภาพที่แท็กไปยัง Blog ที่
สนับสนุนจีโอแท็กคุณจะได้เห็น
รูปภาพนั้นแสดงบนแผนที่

หมายเหตุ: ฟังก์ชันนี้จะใช้ได้
เมื่อเปิดใช้งาน GPS เท่านั้น

ซ่อนไอคอน – เลือกซ่อนไอ
คอนตั้งคากล้องถ่ายรูปเองหรือ
โดยอัตโนมัติ

การตรวจสอบการกะพริบตา
– เลือก **เปิด** เพื่อตรวจสอบ
การกะพริบตาหลังจากถ่ายภาพ


รีเซ็ต – เรียกคืนการตั้งค่าเริ่ม
ต้นของกล้องถ่ายรูป

เคล็ดลับ! เมื่อคุณออกจากกล้อง
การตั้งค่าทั้งหมดจะกลับสู่ค่าเริ่ม
ต้น ยกเว้นขนาดภาพและคุณภาพ
การตั้งค่าที่ไม่ใช่ค่าเริ่มต้นจะต้อง
ถูกรีเซ็ต เช่น โทนสีและ ISO ตรวจสอบ
ค่าเหล่านี้ ก่อนที่คุณจะถ่าย
ภาพครั้งถัดไป

กล้องถ่ายรูป

เคล็ดลับ! เมนูการตั้งค่าซ่อน
ทับบนของมองภาพ ดังนั้น
เมื่อคุณเปลี่ยนส่วนประกอบ
ด้านสีหรือคุณภาพของภาพ
คุณจะได้เห็นตัวอย่างของภาพ
ที่เปลี่ยนได้ที่ด้านหลังเมนู
การตั้งค่า

การดูรูปภาพที่บันทึกไว้

คุณสามารถเข้าดูรูปภาพที่
บันทึกไว้จากภายในโหมด
กล้องถ่ายรูปได้ เพียงแตะที่
 และคลังภาพของคุณ
จะปรากฏบนหน้าจอ

กล้องวิดีโอ

ทำความเข้าใจกับช่องมองภาพ

ความสว่าง – ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เขวในภาพ เลื่อนตัวบ่งชี้ความสว่างบนแถบไปทาง “-” เพื่อให้ได้ภาพที่มีความสว่างน้อยลง หรือไปทาง “+” เพื่อให้ได้ภาพที่มีความสว่างมากขึ้น

ซุม – ซุมเข้าหรือซุมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้ การเริ่มต้นบันทึกวิดีโอ คุณควรใช้ฟังก์ชันซุม คุณไม่สามารถควบคุมฟังก์ชันซุมระหว่างการบันทึกได้



คลังภาพ – คุณสามารถเข้าดูรูปภาพที่บันทึกไว้จากภายในโหมดกล้องวิดีโอ เพียงแตะ และคลังภาพของคุณจะปรากฏบนหน้าจอ

โหมดกล้องถ่ายรูป – เลื่อนไอคอนนี้ขึ้นเพื่อสลับไปยังโหมดกล้องถ่ายรูป
เริ่มการบันทึก


ตั้งค่า – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า โปรดดูที่การใช้การตั้งค่าขั้นสูง

ขนาดวิดีโอ – แตะเพื่อตั้งค่าขนาด (พิกเซล) ของวิดีโอที่บันทึก เลือกขนาดภาพวิดีโอจาก VGA (640x480), QVGA (320x240) หรือ QCIF (176x144)

โหมดถ่ายภาพ – ตั้งค่ากล้องถ่ายรูปเพื่อปรับให้เข้ากับสภาพแวดล้อม เลือกจาก **อัตโนมัติ**, **รูปคน**, **ทิวทัศน์**, **กีฬา**, **พระอาทิตย์ตก** และ **กลางคืน**.

กล้องวิดีโอ

การถ่ายวิดีโอ








- 1 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์ค้างไว้
- 2 จากนั้น สลับไปยัง 
- 3 ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 4 ให้ถือโทรศัพท์ในแนวนอนและหันไปทางสิ่งที่จะถ่าย
- 5 กดปุ่มถ่ายภาพหนึ่งครั้งเพื่อเริ่มการบันทึก
- 6 REC จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพพร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ
- 7 แตะที่  บนหน้าจอเพื่อหยุดการบันทึก

หลังการถ่ายวิดีโอ


ภาพนิ่งที่แสดงวิดีโอของคุณจะปรากฏขึ้นบนหน้าจอ


แบ่งปัน แตะเพื่อแบ่งปันวิดีโอทาง **บลูทูธ, อีเมล, Google Mail** หรือ **ข้อความ**

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อโหลดข้อความ MMS ขณะโรมมิ่ง

-  **เล่น** แตะเพื่อเล่นวิดีโอ
-  **แก้ไข** แตะเพื่อแก้ไขชื่อของวิดีโอที่เลือก
-  **แก้ไข** แตะเพื่อใช้วิดีโอเป็นพื้นหลัง
-  แตะเพื่อเข้าใช้เครื่องเล่นมีเดียและดูวิดีโอที่บันทึกไว้
-  แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง
-  แตะเพื่อถ่ายวิดีโออื่นต่อ โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้
-  แตะเพื่อกลับไปเมนูก่อนหน้า

การใช้การตั้งค่าขั้นสูง

ให้ใช้ช่องมองภาพ แล้วแตะที่  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด

ปรับการตั้งค่ากล้องถ่าย
รูปได้โดยเลื่อนปุ่มหมุน หลัง
จากเลือกตัวเลือก ให้แตะปุ่ม
กลับ 

เอฟเฟกต์สี – เลือกโทนสี
เพื่อใช้กับรูปภาพมุมมองใหม่

สมดุลแสง – ช่วยให้เห็นใจได้
ว่าส่วนที่เป็นสีขาวที่ปรากฏ
ในวิดีโอจะสวยสมจริง เพื่อให้
กล้องของคุณปรับความสมดุล
แสงได้อย่างถูกต้อง คุณอาจ
จำเป็นต้องกำหนดแสงก่อน
เลือกจาก **อัตโนมัติ**,
หลอดไฟ, **แสงอาทิตย์**,
ฟลูออเรสเซนต์ และ **มิดครีမ်**

ระยะเวลา – ตั้งค่าจำกัดระยะ
เวลาสำหรับวิดีโอของคุณ
เลือกระหว่าง **ปกติ** และ **MMS**
เพื่อจำกัดขนาดวิดีโอให้สา
มารถส่งเป็นข้อความ MMS ได้

เคล็ดลับ! เมื่อระยะเวลาแบบ
MMS คุณภาพของภาพจะถูก
ตั้งค่าเป็น QCIF และคุณสาม
ารถบันทึกวิดีโอได้นานขึ้น

การบันทึกเสียง –
เลือก **ปิดเสียง** เพื่อบันทึก
วิดีโอโดยไม่มีเสียง


ช้อนไอคอน – เลือกว่าจะ
ช้อนไอคอนในเมนูกล้องวิดีโอ
โดยอัตโนมัติหรือกำหนด
ด้วยตนเอง

วิดีโอที่บันทึก – เลือกจาก
เปิด, พัก และ ปิด
หากคุณเลือก **เปิด**
หลังจากบันทึกวิดีโอ
หน้าจอจะแสดง 1 วินาที
และไปที่ดูตัวอย่างทันที

รีเซ็ต – รีเซ็ตการตั้งค่ากล้อง
ถ่ายวิดีโอทั้งหมด

เคล็ดลับ! คุณสามารถเปลี่ยน
วิดีโอที่ถ่ายเป็นสีเป็นขาวดำ
หรือซีเปียได้ แต่ไม่สามารถ
เปลี่ยนวิดีโอขาวดำหรือซีเปีย
เป็นสีได้




การดูวิดีโอที่บันทึกไว้

- 1 ในช่องมองภาพ ให้แตะที่ 
- 2 คลังภาพของคุณจะปรากฏ
บนหน้าจอ
- 3 แตะที่วิดีโอหนึ่งครั้งเพื่อ
แสดงวิดีโอที่दानหนา
สุดของคลังภาพ วิดีโอ
ที่เลือกจะเล่นอัตโนมัติ

รูปภาพและวิดีโอ

การแก้ไขรูปภาพ

คุณสามารถใช้คุณสมบัติที่ยอดเยียมมากมายในการเปลี่ยนแปลงรูปภาพ เพิ่มหรือทำให้รูปภาพมีชีวิตชีวาขึ้น

- 1 เปิดภาพที่คุณต้องการแก้ไข แล้วแตะปุ่ม **เมนู**
- 2 แตะที่ **แก้ไข** เพื่อเปลี่ยนแปลงรูปภาพของคุณ:
 -  **หมุนและพลิก** – หมุนหรือพลิกรูปภาพเพื่อความสนุกสนานหรือเพื่อให้ดูสวยงามขึ้น
 -  **ครีอป** – ครีอปภาพของคุณ เลือกพื้นที่แบบสี่เหลี่ยมหรือวงกลมแล้วเลื่อนนิ้วของคุณไปตามหน้าจอเพื่อเลือกพื้นที่
 -  **ปรับ** – ช่วยให้คุณปรับรูปได้โดยใช้สี, ความสว่างอัตโนมัติ และอื่นๆ



เอฟเฟกต์ – แตะเพื่อใช้ตัวเลือกเอฟเฟกต์กับรูปภาพ



เฟรม – เพิ่มเฟรมให้กับรูปภาพ



ข้อความ – เพิ่มข้อความให้กับรูปภาพ



คลิปอาร์ต – เพิ่มคลิปอาร์ตให้กับรูปภาพ



กระดานวาด – วาดภาพลงบนภาพภายใต้ตัวอย่างอิสระ เลือกความหนาของเส้นจาก 4 ตัวเลือก จากนั้นเลือกสีที่คุณต้องการ



สแตมป์ – ตกแต่งรูปภาพของคุณด้วยสแตมป์ เลือกจากสแตมป์ต่างๆ ที่มีอยู่แล้วและที่รูปภาพในบริเวณที่คุณต้องการติดสแตมป์



ย่อขยาย – ย่อขยายรูปภาพ






บันทึกการเปลี่ยนแปลง ที่ทำไว้ในรูปภาพ





ลบการแก้ไขภาพถ่าย



การตัดความยาวของวิดีโอ

- 1 เลือก **แก้ไข** แล้วเลือก 
- 2 แตะที่  แล้วตั้งค่าจุดเริ่มต้นและจุดสิ้นสุดใหม่ แตะที่ **ตกลง** แล้วเลือก **ถัดไป**
- 3 แตะที่  เพื่อกลับไปที่คุณภาพ และยกเลิกการเปลี่ยนแปลง

การเลือกรูปแบบการเปลี่ยนภาพ


- 1 เลือกรูปแบบการเปลี่ยนภาพ จากนั้นแตะที่  เพื่อดูตัวอย่าง
- 2 แตะที่  แล้วลากแถบเพื่อปรับระยะเวลา
- 3 แตะ **ตกลง** เพื่อบันทึกการเปลี่ยน แตะที่ **ใช่เท่านั้น** เพื่อใช้การเปลี่ยนภาพที่เลือกในขณะนั้น เลือก **ใช่กับทั้งหมด** เพื่อใช้การเปลี่ยนภาพที่เลือกในขณะนั้นกับไฟล์วิดีโอทั้งหมดในสตอริบอर्ड

การใช้ซับไตเติ้ล

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข
- 2 เลือก **แก้ไข** แล้วเลือก  เพื่อเพิ่มซับไตเติ้ลให้กับวิดีโอ
- 3 แตะที่  แล้วหยุดการเล่นชั่วคราวเพื่อกำหนดจุดเริ่มต้นที่จะให้ข้อความปรากฏขึ้น
- 4 แตะที่ **เริ่ม** แล้วเลือกรูปแบบข้อความ ป้อนข้อความโดยใช้ปุ่มกด แล้วเลือก **เสร็จ**
- 5 แตะที่บริเวณหน้าจอที่คุณต้องการให้ข้อความปรากฏขึ้น แล้วแตะ **ตกลง**
- 6 บันทึกทับไฟล์ที่มีอยู่แล้วหรือบันทึกเป็นไฟล์ใหม่
- 7 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มข้อความอื่นๆ

รูปภาพและวิดีโอ

การเพิ่มเอฟเฟกต์ การแก้ไข




- 1 เปิดวิดีโอที่คุณต้องการแก้ไข
- 2 เลือก **แก้ไข** , แล้วเลือก 
- 3 เลือกเอฟเฟกต์ที่จะเพิ่มให้กับรูปภาพ

การจับเฟรมภาพ

จับภาพจากวิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข
- 2 เลือก **แก้ไข** , แล้วเลือก 
- 3 เล่นวิดีโอ แล้วแตะที่  เพื่อจับภาพหน้าจอที่คุณต้องการขณะเล่นวิดีโอ
- 4 เฟรมของภาพนั้นจะถูกบันทึกไว้ในโทรศัพท์เหมือนไฟล์ภาพนิ่ง

การเพิ่มเสียงอัดให้กับ วิดีโอ

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข
- 2 เลือก **แก้ไข** แล้วเลือก 
- 3 แตะที่  โพลเดอร์เสียงส่วนตัว จะเปิดขึ้น เลือกแทร็คที่คุณต้องการเพิ่มในวิดีโอ
- 4 เสียงต้นฉบับในวิดีโอจะถูกลบออก
- 5 หากเสียงสั้นกว่าวิดีโอ ให้เลือกว่าจะเล่น **ครั้งเดียว** หรือ **ซ้ำ**
- 6 บันทึกทับไฟล์ที่มีอยู่แล้วหรือบันทึกเป็นไฟล์ใหม่
- 7 หรือบันทึกเป็นไฟล์ใหม่และใส่การพากย์สด โดยแตะที่ 
- 8 แตะที่ **เสร็จ** เพื่อบันทึกเสียงอัดปัจจุบัน

มัลติมีเดีย


คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในการ์ดหน่วยความจำเพื่อเข้าถึงไฟล์รูปภาพและวิดีโอได้อย่างง่ายดาย

แต่ที่ **แอปพลิเคชัน** แล้วเลือก **คลังภาพ** คุณสามารถเปิดรายการของแถบแคตตาล็อกที่คุณเก็บไฟล์มัลติมีเดียทั้งหมดได้


หมายเหตุ: ตรวจสอบว่าได้ติดตั้งการ์ดหน่วยความจำลงในโทรศัพท์เพื่อบันทึกรูปภาพและเข้าใช้รูปภาพทั้งหมดของคุณ หากไม่มีการดหน่วยความจำ โทรศัพท์จะไม่แสดงรูปภาพหรือวิดีโอใดๆ

มีแถบแคตตาล็อกหกแถบดังที่แสดงด้านล่าง


ทั้งหมด  : แสดงรูปภาพและวิดีโอทั้งหมด


รายการโปรด  : ถ้าคุณแตะรูปภาพหรือวิดีโอค้างไว้ หนวดจอตู้เลือกจะปรากฏขึ้นเพื่อให้คุณแท็กรูปภาพนี้เป็นรายการโปรด แถบ **รายการโปรด** จะแสดงรูป

ภาพและวิดีโอที่เป็นรายการโปรดของคุณ

วิดีโอ  : แสดงวิดีโอทั้งหมดของคุณ

ภาพ  : แสดงภาพทั้งหมดของคุณ

วิดีโอ  : แสดงวิดีโอทั้งหมดของคุณ

การแท็ก  : เช่นเดียวกับแถบรายการโปรด คุณสามารถแท็กรูปภาพได้ แถบนี้จะแสดงรูปภาพและวิดีโอที่คุณแท็กไว้

เครื่องเล่นมีเดีย

โพลเดอร์ เครื่องเล่นมีเดีย แสดงรายการวิดีโอที่คุณดาวน์โหลดหรือบันทึกในโทรศัพท์ของคุณ

การดูวิดีโอ


- 1 เลือก **เครื่องเล่นมีเดีย** ในแท็บแอปพลิเคชัน
- 2 แต่ที่ **วิดีโอ** แล้วเลือกวิดีโอเพื่อเล่น

มัลติมีเดีย

เคล็ดลับ! โทรศัพท์ GT540 สนับสนุนการเล่นวิดีโอรูปแบบ DivX เพื่อความหลากหลายของเนื้อหาที่ดียิ่งขึ้น

แตะ เพลง แล้วเลือกเพลงเพื่อเล่น

โปรแกรมแก้ไขวิดีโอ

- 1 แตะที่ แอปพลิเคชัน แล้วเลือก โปรแกรมแก้ไขวิดีโอ 

สตอริบอร์ด


- 1  **อิมพอร์ตไฟล์** – เพิ่มไฟล์มีเดียให้กับสตอริบอร์ดคุณสามารถเพิ่มไฟล์มีเดียได้สูงสุด 32 ไฟล์
- 2  **ตั้งค่า BGM** – เพิ่มเพลงแบ็คกราวด์ให้กับสตอริบอร์ด หรือเปลี่ยนแปลงเสียง
- 3  **เพิ่มข้อความ** – เพิ่มกรอบข้อความให้กับสตอริบอร์ด
- 4  **โปรแกรมจัดการคลิป** – จัดการไฟล์มีเดียที่

เพิ่มไว้ ถ้าไม่มีไฟล์มีเดียใดๆ ถูกเพิ่มเข้ามาปุ่มนี้จะใช้งานไม่ได้

- 5  **ดูตัวอย่าง** – ดูตัวอย่างไฟล์วิดีโอที่คุณสร้าง


- 6  **บันทึก** – บันทึกไฟล์วิดีโอที่คุณสร้าง

คุณต้องแตะที่  ก่อนเพื่อแก้ไขวิดีโอ

 – แตะเพื่อเลือกไฟล์ทั้งหมด โดยมีจำนวนสูงสุด 32 ไฟล์


 – แตะเพื่อยกเลิกการเลือกไฟล์

25/32 – ตัวเลขนี้แสดงจำนวนไฟล์ที่เลือกไว้


 แตะเพื่อไปที่ขั้นตอนถัดไป

ภาพยนตร์เพลง

- 1 พลิกซ้ายและขวาเพื่อตรวจสอบรูปแบบต่างๆ สำหรับ **ภาพยนตร์เพลง** คุณสามารถเลือกได้เฉพาะรูปภาพเท่านั้น


 – กลับไปที่ หน้าจอโปรแกรมแก้ไขวิดีโอ

 – แสดงชื่อรูปแบบ และคำอธิบาย

 – ดูตัวอย่างรูปแบบ

 – แตะเพื่อเลือกรูปภาพ

2 หลังจากที่คุณเลือกรูปภาพ แตะที่  เพื่อไปยังขั้นตอนถัดไป

3 แตะที่  เพื่อเลือกรูปภาพทั้งหมด แล้วแตะ 

4 เลือกเพลงจากนั้นตั้งค่าเพลงนั้นเป็นเพลงแบ็คกราวด์

5 เพิ่มชื่อภาพยนตร์โดยใช้ปุ่มกดแล้วบันทึกค่า

6 แตะที่  เพื่อเล่นไฟล์วิดีโอที่สมบูรณ์

7 แตะที่  เพื่อบันทึกไฟล์วิดีโอที่คุณสร้างขึ้น

ตัดอัดโน้มนัด

มีสไลด์อัดโน้มนัดให้เลือก 3 แบบใดแก่: แนวตั้ง, แนวนอน, และวัตถุเคลื่อนไหว

1 แตะที่  แล้วเลือกวิดีโอไปที่ขั้นตอนถัดไป

2 แตะที่  เพื่อดูตัวอย่างไฟล์วิดีโอ

3 แตะที่  เพื่อบันทึกไฟล์

การเล่นเกมส์

1 โทรศัพท์ GT540 มีเกมส์ให้เล่นมากมาย คุณยังสามารถดาวน์โหลดเกมส์เพิ่มเติมได้จากตลาด

2 แตะปุ่ม เริ่ม เพื่อเริ่มต้นเกมส์หรือแอปพลิเคชัน

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อใช้บริการดาวน์โหลดเกมส์หรือแอปพลิเคชันที่ต้องเสียค่าใช้จ่าย

หมายเหตุ: คุณสามารถติดตั้งเกมส์และแอปพลิเคชัน Java ผ่านเว็บเท่านั้น

การโอนไฟล์โดยใช้อุปกรณ์จัดเก็บข้อมูล USB

ในการโอนไฟล์โดยใช้อุปกรณ์ USB:

1 เชื่อมต่อโทรศัพท์ GT540 เข้ากับคอมพิวเตอร์โดยใช้สายเคเบิล USB

มัลติมีเดีย

- 2 หากคุณไม่ได้ทำกา
รติดตั้งไดรเวอร์แพล็
ดฟอร์ม LG Android
ในคอมพิวเตอร์ของคุณ คุณต
องเปลี่ยนการตั้งค่าด้วยตัวเอง
เลือก ตั้งค่า > การด SD
และพื้นที่จัดเก็บของโทรศัพท์
> เปิดใช้ ที่เก็บข้อมูลเท่านั้น
- 3 แตะ เปิดที่เก็บข้อมูล USB
- 4 คุณสามารถดูเนื้อหาที่จัด
เก็บบนคอมพิวเตอร์ของคุณ
และโอนไฟล์

หมายเหตุ: คุณต้องติดตั้ง
การด SD ก่อน หากไม่มีการด
SD คุณจะไม่สามารถใช้ที่เก็บ
ข้อมูล USB ได้

หมายเหตุ:
หากคุณติดตั้งไดรเวอร์แพล็ดฟอร์ม
LG Android แล้ว
คุณเห็นป๊อปอัปที่มี
'เปิดที่เก็บข้อมูล USB' ทันที

หมายเหตุ: หลังจากการใช้ฟัง
กซันที่เก็บข้อมูล USB หากคุณเด
องการซิงโครไนซ์โทรศัพท์กับค
อมพิวเตอร์โดยใช้ LG PC Suite
ให้คุณแตะ ตั้งค่า > การด SD
และพื้นที่จัดเก็บของโทรศัพท์ แล้ว
แตะเครื่องหมายถูกเพื่อปิดโหมด
ที่เก็บข้อมูลเท่านั้น

เพลง

โทรศัพท์ GT540 มีเครื่องเล่น
เพลงภายในตัวที่ใหญ่คุณ
สามารถเล่นเพลงที่คุณชื่นชอบ
ทั้งหมดได้ ในการเข้าใช้งาน
เครื่องเล่น
เพลง ให้แตะที่ เพลง จากชั้น
ตอนนี้ คุณสามารถเขา


ศิลปิน – เบราส์ดูรายการเพลง
ที่เก็บไว้ตามศิลปิน




อัลบั้ม – เบราส์ดูรายการเพลง
ที่เก็บไว้ตามอัลบั้ม

เพลง – ประกอบด้วยเพลงทั้ง
หมดที่มีในโทรศัพท์

รายการ – ประกอบด้วย
รายการเพลงที่คุณสร้างไว้

การเล่นเพลง

- 1 บนหน้าจอหลัก แตะแท็บ
แอปพลิเคชัน แล้วเลือก
เพลง
- 2 แตะที่ เพลง
- 3 เลือกเพลงที่คุณต้องการ
เล่น
- 4 แตะ  เพื่อหยุดเล่น
เพลงชั่วคราว

- 5 แตะที่  เพื่อข้ามไปที่เพลงถัดไป
- 6 แตะที่  เพื่อย้อนไปยังช่วงแรกของเพลงนั้น แตะที่อีกครั้ง  เพื่อย้อนไปที่เพลงก่อนหน้า

หากต้องการเปลี่ยนระดับเสียงในขณะที่ฟังเพลง ให้ไขปุ่มปรับระดับเสียงขึ้นและลงที่อยู่ด้านข้างซ้ายของโทรศัพท์

หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลงจะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้สิทธิ์ในการทำซ้ำหรือคัดลอกเพลงในกฎหมายของบางประเทศมีข้อห้ามในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์โปรดตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

การใช้วิทยุ

โทรศัพท์ GT540 มีคุณสมบัติวิทยุ FM ในตัว ดังนั้นคุณสามารถค้นหาสถานีที่คุณชื่นชอบและรับฟังวิทยุได้ตลอดเวลา

การค้นหาสถานี

คุณสามารถใช้โทรศัพท์ของคุณค้นหาสถานีวิทยุได้ โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่ อีกคุณสามารถจัดเก็บได้สูงสุด 48 ของสถานีในโทรศัพท์ของคุณ

ในการค้นหาสถานีอัตโนมัติ

- 1 บนหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** แล้วเลือก **วิทยุ FM**
- 2 แตะที่ปุ่ม **เมนู**
- 3 แตะที่ **สแกนอัตโนมัติ** แล้วแตะที่ **ใช่** ระบุสถานีที่พบไว้ในหมายเลขของสถานีโดยเลือก **ตั้งค่า**, **ข้าม** หรือ **หยุด**

มัลติมีเดีย

หมายเหตุ: คุณสามารถค้นหาสถานีด้วยตนเองได้อีกด้วย โดยการใช้นุ่มหมุนที่แสดงขึ้น ถัดจากความถี่วิทยุ

การฟังวิทยุ

- 1 บนหน้าจอหลัก แตะแท็บ แอปพลิเคชัน แลวเลือก วิทยุ FM
- 2 แตะที่หมายเลขช่องของ สถานีที่คุณต้องการฟัง

เคล็ดลับ! ในการเพิ่มประสิทธิภาพการรับสัญญาณ วิทยุ หยอดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ

⚠ คำเตือน
หากคุณเชื่อมต่อชุดหูฟังที่ไม่ได้ผลิตมาเพื่อใช้รับสัญญาณวิทยุ การรับสัญญาณวิทยุอาจถูกคลื่นรบกวนได้

แอปพลิเคชันใน Google


- 1 ขั้นแรก ให้สร้างแอคเคาท์ Google ป้อนชื่อผู้ใช้และรหัสผ่าน
- 2 หลังจากเข้าสู่ระบบ รายชื่ออีเมล และปฏิทินในแอคเคาท์ Google จะซิงโครไนซ์กับโทรศัพท์ GT540 ของคุณโดยอัตโนมัติ


Google Map


ตรวจสอบสถานที่ปัจจุบันของคุณและสภาพการจราจร รวมทั้งรับข้อมูลทิศทางเพื่อไปยังปลายทางของคุณ โทรศัพท์ GT540 ต้องเชื่อมต่อกับ Wi-Fi หรือ 3G/GPRS

หมายเหตุ: Google แผนที่ ไม่ได้ให้บริการครอบคลุมทุกเมืองและทุกประเทศ


แตะปุ่ม  เมน  เพื่อใช้ตัวเลือก:


ค้นหา  - ป้อนสถานที่ที่คุณค้นหา

ทิศทาง  - ช่วยคุณค้นหาเส้นทางไปยังสถานที่ที่คุณป้อน และเพื่อป้อนข้อมูล เลือกจาก รายชื่อ, จุดบนแผนที่ หรือ ตำแหน่งปัจจุบันของฉัน

มุมมอง  - คุณสามารถสลับมุมมองจากการจราจร เป็น ดาวเทียม หรือ สภาพพื้นที่ ใด และ Latitude จากนั้นคุณจะได้เห็นที่ตั้งของบุคคลในรายชื่อของคุณตามแอคเคาท์ Google

ตำแหน่งของฉัน  - แสดงตำแหน่งปัจจุบันของคุณบนแผนที่

เข้าร่วม Latitude  - แบ่งปันที่ตั้งปัจจุบันของคุณกับเพื่อนๆ ที่คุณเลือก และ Google

อื่นๆ  - ล้างแผนที่ หรือค้นหารายการที่ติดตามและอื่นๆ

แอปพลิเคชันใน Google



หมายเหตุ: ขณะดู
มุมมองถนน ของสถานที่หนึ่ง
ให้แตะปุ่ม **เมนู**
แล้วแตะ **โหมดเข็มทิศ**
เพื่อเปิดโหมดเข็มทิศ

Android Market


ตลาด Android ช่วยให้คุณ
ดาวน์โหลดแอปพลิเคชันและ
เกมที่มีประโยชน์ ถ้าคุณติด
ตั้งแอปพลิเคชันและเกมจาก
ตลาด Android โปรแกรม
เหล่านั้นจะปรากฏในเมนูของ
GT540

คุณสามารถตรวจสอบแอป
พลิเคชันที่ดาวน์โหลดได้โดย
แตะแท็บ **ดาวน์โหลด**

คุณสามารถตรวจสอบความ
เห็นของคนอื่นเกี่ยวกับแอป
พลิเคชัน หรือคุณสามารถ
โพสต์ความเห็นของคุณได้

หมายเหตุ: เมื่อคุณต้องการ
สิ้นสุดเกมส ให้ใช้ปุ่ม
โฮม  หรือ **กลับ** 
คุณจะถูกส่งหน้าจอหลัก
หรือใช้ปุ่มเมนูของเกมส์

Google Mail

Google Mail ได้รับการกำหนด
ค่าเมื่อคุณตั้งค่าโทรศัพท์
เป็นครั้งแรก Google Mail
บนโทรศัพท์ของคุณจะซิง
โครไนซ์กับแอคเคาท์
Google Mail
ของคุณบนเว็บโดยอัตโนมัติ
ขึ้นอยู่กับที่ตั้งค่าการซิงโคร
ไนซ์ของคุณ รายการสนทนา
ในกล่องข้อความเขาจะเป็น
ค่าเริ่มต้นของมุมมอง
Google Mail ด้วยปุ่ม **เมนู**
 คุณสามารถเขียนอีเมล,
เพิ่มแอคเคาท์, ไปที่ฉลาก,
ค้นหา และ อื่นๆ


Google Talk


Google Talk เป็นโปรแกรม
ขอความโดดเด่นแบบทันทีของ
Google ซึ่งช่วยให้คุณติดต่อ
สื่อสารกับบุคคลอื่นที่ใช้
Google Talk เช่นกัน


แตะปุ่ม **เมนู**  และตรวจ
สอบตัวเลือกที่มี


เพื่อนทั้งหมด  - เข้าร่วม
กับเพื่อนทั้งหมดเพื่อสนทนา

เพิ่มเพื่อน  - ส่งคำเชิญ
เพื่อสนทนา

ค้นหา  - ค้นหาการ
สนทนาที่มีคำหรือประโยค
ที่คุณป้อน



ไชนต์เอาต์  - ไชนต์เอาต์
ออกจากการแชท เมื่อคุณแตะ
ไอคอน Talk จากหน้าจอหลัก
คุณจะใช้ไชนต์เอาต์โน้ตihak
คุณตั้งค่าใช้งานไชนต์เอาต์
ไชนต์เอาต์โน้ตihak

ตั้งค่า  - ปรับสัญลักษณ์
หรือการแจ้ง ฯลฯ


อื่นๆ  - จากที่นี่ คุณ
สามารถปิดการสนทนาทั้ง
หมด และตรวจสอบรายการ
เชิญและบล็อก

ยูทิลิตี้

การตั้งเวลาการปลุก

- 1 ในหน้าจอหลัก ให้แตะ แท็บ แอปพลิเคชัน และ เลือกนาฬิกา แอปพลิเคชันนาฬิกาจะ เปิดโดยมีวันที่และเวลา แสดงบนหน้าจอหลัก
- 2 หากคุณต้องการเพิ่มการปลุกใหม่ ให้แตะไอคอนการปลุก  ที่ด้านล่างของหน้าจอ นาฬิกา แตะการปลุกที่มีเพื่อเปลี่ยนเวลาและแอททริบิวต์อื่นๆ หรือแตะ เพิ่มการปลุก เพื่อเพิ่มใหม่
- 3 แตะเพื่อเปิดใช้การปลุก  แล้วกำหนดเวลาที่ต้องการให้ส่งเสียงปลุก หลังจากที่กำหนดเวลาแล้ว โทรศัพท์ GT540 จะแสดงเวลาที่เหลืออยู่ก่อนการส่งเสียงปลุก
- 4 ตั้งค่า ซ้ำ, เสียงเรียกเข้า หรือ สั่น และเพิ่ม จลาจล เพื่อตั้งชื่อการปลุก แตะ เสร็จ


หมายเหตุ:

ในการเปลี่ยนการตั้งค่าการปลุก ในหน้าจอ นาฬิกา ให้แตะปุ่ม เมนู  และแตะ ตั้งค่า

การใช้เครื่องคิดเลข

- 1 บนหน้าจอหลัก แตะแท็บ แอปพลิเคชัน แล้วเลือก เครื่องคิดเลข
- 2 ให้แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =
- 4 สำหรับการคำนวณที่ซับซ้อน แตะปุ่มเมนู แตะที่พาเนลขั้นสูง แล้วเลือก **sin, cos, tan, log** และอื่นๆ

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 บนหน้าจอหลัก แตะแท็บ แอปพลิเคชัน แล้วเลือกปฏิทิน
- 2 ขั้นแรก คุณต้องสร้างแอดเดสส์ Google เพื่อใช้ปฏิทิน
- 3 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
- 4 แตะปุ่ม **เมนู**  แล้วแตะเหตุการณ์ใหม่
- 5 แตะที่ **อะไร** แล้วป้อนชื่อเหตุการณ์ ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่ม ป้อนวันที่และเวลาที่สิ้นสุดเหตุการณ์นั้นในช่องวันที่และเวลาที่อยู่ถัดลงมา
- 6 แตะที่ **ที่ใด** แล้วป้อนสถานที่
- 7 หากคุณต้องการใส่บันทึกลงในเหตุการณ์ของคุณ ให้แตะที่ **คำอธิบาย** แล้วป้อนรายละเอียด



8 ถ้าคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้ตั้งค่า การทำซ้ำ และตั้งค่า เตือนความจำ ถ้าจำเป็น

9 แตะ **บันทึก** เพื่อบันทึกเหตุการณ์ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมายกรอบสีเหลี่ยมสีในปฏิทินกำกับอยู่ เสียงเตือนจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์เพื่อให้คุณไม่พลาดกำหนดการณ์ต่าง ๆ

บันทึกเสียง

ใช้ บันทึกเสียง เพื่อบันทึกเสียงเตือนความจำหรือไฟล์เสียงอื่นๆ

การบันทึกเสียงหรือเสียงพูด

- 1 บนหน้าจอหลัก แตะแท็บ แอปพลิเคชัน และเลือกบันทึกเสียง
- 2 แตะที่  เพื่อเริ่มบันทึก
- 3 แตะที่  เพื่อจบการบันทึก

ยุติคดี

- 4 **แตะปุ่ม เมนู และเลือก ตั้งเป็น** เพื่อตั้งค่าเป็นเสียงเรียกเข้า **โทรศัพท์**

หมายเหตุ: **แตะ ไปยังรายการ** เพื่อเขาใช้อัลบั้ม คุณสามารถฟังการบันทึกเสียงที่บันทึกไว้ได้

Quickoffice

Quickoffice ให้คุณอ่านเอกสาร แต่ไม่มีฟังก์ชันแก้ไข สนับสนุนไฟล์ PDF, ขอความ, Microsoft Word/Excel/PowerPoint

- 1 ในหน้าจอหลัก ให้แตะ **แท็บ แอปพลิเคชัน** และเลือก Quickoffice
- 2 เลือก **การลดหน่วยความจำ** คุณสามารถดูไฟล์และรายการไฟล์เดออร์ ถ้าคุณเลือก เอกสารล่าสุด ไฟล์ที่คุณเพิ่งดูจะปรากฏขึ้น

- 4 **เลือกไฟล์ แล้วแตะปุ่ม เมนู** เพื่อดูตัวเลือก **เปิด, ลงทะเบียน, อัปเดต, คุณสมบัติ** และเกี่ยวกับ นอกจากนี้ ยังอาจมีตัวเลือกเพิ่มเติมขึ้นอยู่กับประเภทไฟล์

PDF: ไปที่หน้า, พอดีกับเพจ, พอดีกับความกว้าง

DOC/TXT: ค้นหา

XLS: เวอร์คชีต เลือกมุมมองสรุป หรือมุมมองแบบเต็ม

เว็บไซต์

การเข้าใช้เว็บ

1 บนหน้าจอหลัก และแท็บ
แอปพลิเคชัน และเลือก
เบราว์เซอร์

2 คุณจะเข้าสู่เว็บไซต์

หมายเหตุ: คุณอาจต้องเสีย
ค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อ
บริการเหล่านี้และดาวน์โหลด
เนื้อหา โปรดสอบถามข้อมูล
การคิดค่าใช้จ่ายกับผู้ให้บริการ
เครือข่ายของคุณ

การเปลี่ยนการตั้งค่าเว็บ เบราว์เซอร์

แตะปุ่ม **เมนู** แล้วเลือก **ข้อมูล**
> **ตั้งค่า**

คุณสามารถเปลี่ยนแปลง
เลย์เอาต์ของเพจ
(เช่น ขนาดข้อความ,
การเข้ารหัสข้อความ),
เปลี่ยนแปลงโฮมเพจ,
จัดการแคช, คุกกี้
และการตั้งค่าความปลอดภัย
และอื่นๆ

ตั้งค่า

บนหน้าจอหลัก และแตะ

แอปพลิเคชัน แล้วเลื่อนและ
แตะ **ตั้งค่า**


การควบคุมไร้สาย

ในหน้าจอthis คุณสามารถจัดการ Wi-Fi และบลูทูธ คุณยังสามารถตั้งค่าเครือข่ายโทรศัพท์เคลื่อนที่ โหมดเครื่องบินได้

โหมดเครื่องบิน – หลังจากตั้งค่าโหมดเครื่องบิน การเชื่อมต่อเครือข่ายทั้งหมดจะใช้งานไม่ได้

Wi-Fi – แตะเพื่อเลือก: เปิด Wi-Fi เพื่อเชื่อมต่อเครือข่าย Wi-Fi ที่มีอยู่

ตั้งค่า Wi-Fi –

ตั้งค่าการแฉงผ่านเครือข่ายหรือเพิ่มเครือข่าย Wi-Fi หน้าจอตั้งค่า Wi-Fi ขึ้นสูงจะเขาใช้จากหน้าจอตั้งค่า Wi-Fi และปุ่มเมนู  และแตะขั้นสูง

แต่ในกรณีที่แอปพลิเคชันได้รับข้อมูลผ่านทาง Wi-Fi โทรศัพท์จะไมเปิด Wi-Fi แม้ว่าหน้าจอจะลือคอยู่ก็ตาม

บลูทูธ – แตะเพื่อเลือก: เปิดบลูทูธเพื่อเชื่อมต่อกับอุปกรณ์บลูทูธ

ตั้งค่าบลูทูธ –

ตั้งชื่ออุปกรณ์และค้นหาได้, สแกนหาอุปกรณ์อื่นๆ หรือตรวจสอบรายการอุปกรณ์บลูทูธที่คุณกำหนดคากอนหน้านี้ และที่ตรวจพบเมื่อโทรศัพท์สแกนหาอุปกรณ์บลูทูธครั้งล่าสุด

ตั้งค่า VPN –

แสดงรายการ Virtual Private Network (VPN) ที่คุณกำหนดคากอนหน้านี้ ให้คุณเพิ่ม VPN ประเภทต่างๆได้

เครือข่ายโทรศัพท์เคลื่อนที่ – เปิดเครือข่ายโทรศัพท์เคลื่อนที่

ตั้งค่าเครือข่ายโทรศัพท์เคลื่อนที่ – ตั้งค่าตัวเลือกสำหรับโรมมิ่งข้อมูล, โหมดเครือข่ายและผู้ให้บริการ, ชื่อจุดเชื่อมต่อ (APN) และอื่นๆ

เสียงและการแสดง

< ตั้งค่าเสียง >

โหมดเงียบ – ให้คุณปิดเสียงทั้งหมด (รวมถึงเสียงเรียกเข้าของการโทรและการแจ้ง) ยกเว้นเสียงจากเพลง วิดีโอ และการปลุกที่ตั้งไว้(คุณต้องปิดเสียงมีเดียและการปลุกในแอปพลิเคชันเหล่านั้น)

ระดับเสียงดังของโทรศัพท์ – ให้คุณตั้งระดับเสียงสายเรียกเข้าและการแจ้ง หากคุณไม่ได้เลือกตัวเลือกเพื่อใช้ระดับเสียงเดียวกันสำหรับการโทรและการแจ้ง คุณสามารถตั้งระดับเสียงแยกกันได้

ระดับเสียงมีเดีย – ให้คุณตั้งระดับเสียงเพลงและวิดีโอ

เสียงเรียกเข้าของโทรศัพท์ – ให้คุณตั้งค่าเสียงสายเรียกเข้าเริ่มต้นของคุณ

โทรศัพท์สั่น – ให้คุณตั้งค่าให้โทรศัพท์สั่นเมื่อคุณได้รับสายเรียกเข้า แยกจากการตั้งค่าเสียงเรียกเข้าและระดับเสียง

เสียงเรียกเข้าของการแจ้ง – ให้คุณตั้งค่าเสียงการแจ้งเริ่มต้นของคุณ

เสียงสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อไข่มกกดเพื่อหมุนหมายเลข

การเลือกเสียง – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อคุณแตะปุ่ม ไอคอน และรายการอื่นๆ บนหน้าจอที่ตอบสนองการสัมผัส

การโต้ตอบการสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์สั่นเล็กน้อยเมื่อคุณแตะปุ่ม เมนู, ปุ่ม กลับ และดำเนินการอื่นๆ

การแจ้งการรด SD – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อคุณได้รับการแจ้งการรด microSD

< ตั้งค่าการแสดงผล >

การวางแนว – ให้คุณตั้งค่าการวางแนวเพื่อสลับโหมดแนวนอนหรือโหมดแนวตั้งอัตโนมัติเมื่อคุณหมุนโทรศัพท์นอนหรือตั้ง

ตั้งค่า

แอนิเมชัน – ให้คุณตั้งค่าการเปลี่ยนแบบเคลื่อนไหวเมื่อเปลี่ยนจากหน้าจอหนึ่งไปยังอีกหน้าจอหนึ่ง

ความสว่าง –
ปรับความสว่างของหน้าจอ

ใหม่เอาต์หน้าจอ – ให้คุณปรับเวลาหน่วงก่อนที่หน้าจอจะปิดโดยอัตโนมัติเพื่อประสิทธิภาพของแบตเตอรี่สูงสุดให้ใช้ใหม่เอาต์ที่สั้นที่สุด

< การตั้งค่าสัมผัส >

'การปรับเทียบการสัมผัส – รีเซ็ตหน้าจอเพื่อให้ใช้งานง่ายขึ้น

การรักษาความปลอดภัยและตำแหน่ง

< ตำแหน่งของฉัน >

ใช้เครือข่ายไร้สาย – หากคุณเลือก ใช้เครือข่ายไร้สาย โทรศัพท์จะกำหนดตำแหน่งโดยประมาณจากการใช้เครือข่าย Wi-Fi และโทรศัพท์เคลื่อนที่

ใช้งานดาวเทียม GPS – หากคุณเลือก ใช้งานดาวเทียม GPS โทรศัพท์จะกำหนดตำแหน่งด้วยความแม่นยำระดับถนน

< แบบปลดล็อคหน้าจอ >

แบบปลดล็อคหน้าจอ – ตั้งค่าแบบปลดล็อคเพื่อรักษาความปลอดภัยโทรศัพท์ของคุณ เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ คุณสามารถตั้ง PIN หรือรหัสผ่าน แทน แบบหรือเวเนไวเป็น 'ไม่มี' ได้

ต้องการแบบ – ไม่เลือกเพื่อหยุดใช้แบบปลดล็อคเพื่อปลดล็อคหน้าจอ คุณต้องวาดแบบปัจจุบันเมื่อคุณยกเลิกการเลือกตัวเลือกนี้

ใช้แบบที่มองเห็นได้ – ให้คุณตั้งค่าแบบที่มองเห็นได้เมื่อปลดล็อคโทรศัพท์

ใช้การตอบสนองที่สัมผัสได้ – ให้คุณตั้งค่าให้โทรศัพท์สั่นเล็กน้อยขณะคุณแตะแต่ละจุดเมื่อคุณวาดแบบปลดล็อค

การล๊อคหน้าจอบนมือถือโดย ใช้ ล๊อคแบบ

- 1 ในครั้งแรกจะมีการแสดง บทช่วยสอนสั้นๆเกี่ยวกับการสร้างแบบปลดล๊อค
- 2 คุณจะได้รับแจ้งให้วาด และวาดซ้ำแบบของคุณ ในการครั้งต่อไปที่คุณเปิด โทรศัพท์หรือเรียกหน้าจอบนมือถือ คุณจะได้รับแจ้งให้วาด แบบปลดล๊อคเพื่อปลด ล๊อคหน้าจอ

< ล๊อคซิมการ์ด >

ล๊อคซิมการ์ด – ตั้งคาล๊อคซิมการ์ดหรือเปลี่ยน PIN ของซิมการ์ด

< รหัสผ่าน >

รหัสผ่าน – แสดงรหัสผ่านขณะที่คุณพิมพ์

< พื้นที่จัดเก็บรหัสเฉพาะ >

ใช้รหัสเฉพาะรักษาความปลอดภัย - เลือกเพื่อให้อุปกรณ์ของคุณเข้าใช้พื้นที่จัดเก็บที่เข้ารหัสของใบรับรองความปลอดภัยและรหัสผ่านที่เกี่ยวข้อง และรหัสเฉพาะอื่นๆ ในโทรศัพท์ของคุณต้องใช้พื้นที่จัดเก็บรหัสเฉพาะเพื่อสร้างการเชื่อมต่อ VPN และ Wi-Fi หากคุณไม่ได้ตั้งรหัสผ่านสำหรับพื้นที่จัดเก็บรหัสเฉพาะ การตั้งค่านี้จะใช้ไม่ได้

ติดตั้งจากการ์ด SD – ให้คุณติดตั้งใบรับรองที่เข้ารหัสจากการ์ด microSD

ตั้งค่ารหัสผ่าน – ให้คุณตั้งหรือเปลี่ยนรหัสผ่านสำหรับพื้นที่จัดเก็บรหัสเฉพาะที่ปลอดภัย รหัสผ่านของคุณต้องยาวอย่างน้อย 8 ตัวอักษร

ลบพื้นที่จัดเก็บ – ลบใบรับรองความปลอดภัยและรหัสเฉพาะที่เกี่ยวข้องของทั้งหมด และลบรหัสผ่านของพื้นที่จัดเก็บที่ปลอดภัย

ตั้งค่า

หลายรายการ

แหล่งที่มาที่ไม่รู้จัก – อนุญาตการติดตั้งแอปพลิเคชันที่คุณได้รับจากเว็บไซต์ อีเมล หรือแหล่งอื่นๆ นอกเหนือจาก Android Market



คำเตือน!

เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้อาวนโหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market เท่านั้น

จัดการแอปพลิเคชัน – จัดการและลบแอปพลิเคชันที่ติดตั้งแล้ว

บริการที่กำลังรัน – ให้คุณดูและควบคุมบริการและแอปพลิเคชันที่กำลังรันในขณะนี้ ตัวเลือกนี้จะแสดงการประมวลผลที่แต่ละบริการที่กำลังรันต้องการและจำนวนหน่วยความจำที่ใช้

การพัฒนา – ตั้งค่าตัวเลือกสำหรับการพัฒนาแอปพลิเคชัน เช่น ดีบั๊ก USB, ตื่นเสมอ, และ อนุญาตตำแหน่งจำลอง

การซิงโครไนซ์ข้อมูล

< ตั้งค่าซิงค์ทั่วไป >

ข้อมูลเบื้องหลัง – อนุญาตให้แอปพลิเคชันซิงโครไนซ์ข้อมูลอยู่เบื้องหลัง ไม่ว่าคุณจะทำสิ่งใดก็ตาม ข้อมูลอยู่หรือไม่ก็ตามการไม่เลือกการตั้งค่านี้สามารถประหยัดไฟแบตเตอรี่และลด (ไม่ใช่ทั้งหมด) การใช้ข้อมูล

ซิงค์อัตโนมัติ – อนุญาตให้แอปพลิเคชันซิงโครไนซ์ ส่งและรับข้อมูลตามกำหนดเวลาของตนเองได้

< จัดการแอคเคาท์ >

แสดงแอคเคาท์ Google ทั้งหมดและแอคเคาท์อื่นๆ ที่คุณเพิ่มในโทรศัพท์

หากคุณแตะที่แอคเคาท์ในหน้าจอนี้ หน้าจอแอคเคาท์จะเปิด

ส่วนตัว

< ที่ตั้ง >

แบ่งปันข้อมูลกับ Google –

ให้คุณเลือกเพื่อรวมตำแหน่งของคุณเมื่อใช้ Google Search และบริการอื่นๆ ของ Google

เมื่อคุณเลือกตัวเลือกนี้ คุณจะได้รับแจ้งว่าจะยินยอมให้ Google ใช้ตำแหน่งของคุณเมื่อให้บริการเหล่านี้หรือไม่

< ข้อมูลส่วนตัว >

รีเซ็ตข้อมูลจากโรงงาน – ลบข้อมูลส่วนตัวทั้งหมดออกจากพื้นที่การจัดเก็บภายในโทรศัพท์รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google, แอคเคาท์อื่นๆ, การขอมูลและการตั้งค่าระบบและแอปพลิเคชันและแอปพลิเคชันที่ดาวน์โหลดการรีเซ็ตโทรศัพท์จะไม่ลบการอัปเดตซอฟต์แวร์ระบบที่คุณดาวน์โหลดหรือไฟล์ในการ์ด microSD เช่น เพลง หรือรูปภาพหากคุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณเริ่มต้น Android ครั้งแรก

การ์ด SD และพื้นที่จัดเก็บของ โทรศัพท์

< โหมดการเชื่อมต่อ USB >

ที่เก็บข้อมูลเท่านั้น – คุณสามารถใช้เป็นอุปกรณ์เก็บข้อมูลได้ หากคุณมีการ์ดความจำคุณสามารถตั้งที่เก็บข้อมูลเท่านั้น เป็นการตั้งค่าเริ่มต้น

< การ์ด SD >

ตรวจสอบพื้นที่ทั้งหมดและพื้นที่ที่ใช้ได้ และหลีกเลี่ยงการเชื่อมต่อการ์ด SD เพื่อถอดการตอกอย่างปลอดภัย **ฟอร์แมตการ์ด SD** หากจำเป็นคุณต้องยกเลิกการเชื่อมต่อการ์ด microSD ก่อนจึงจะสามารถฟอร์แมตได้

< พื้นที่การจัดเก็บภายในโทรศัพท์ >

ตรวจสอบ **พื้นที่ที่ใช้ได้** แสดงจำนวนพื้นที่การจัดเก็บภายในโทรศัพท์ที่ใช้โดยระบบปฏิบัติการ, ส่วนประกอบ, แอปพลิเคชัน (รวมทั้งคุณดาวน์โหลด) และข้อมูลถาวรและชั่วคราว **ค้นหา**

คุณจะใช้การตั้งค่าการค้นหาเพื่อกำหนดค้นหา Google, กล้องค้นหา

ตั้งค่า

และข้อมูลในโทรศัพท์ที่คุณ
ต้องการรวมในการค้นหา

ภาษาและคีย์บอร์ด

ใช้การตั้งค่า ภาษาและแป้น
พิมพ์ เพื่อเลือกภาษาใน
โทรศัพท์ และสำหรับการ
กำหนดคีย์บอร์ดแป้นพิมพ์

การเข้าใช้งาน

คุณสามารถใช้การตั้งค่าการ
ช่วยสำหรับการเข้าถึงเพื่อ
กำหนดคีย์บอร์ดอื่นช่วยเหลือ
สำหรับการเข้าถึงที่คุณติดตั้ง
ในโทรศัพท์

การสังเคราะห์เสียงพูด

คุณสามารถใช้การตั้งค่า
แปลงข้อความเป็นเสียงพูด
เพื่อกำหนดคำตัวสังเคราะห์
แปลงข้อความเป็นเสียงพูด
ของ Android สำหรับ
แอปพลิเคชันที่ใช้งานนี้

วันที่และเวลา

เพื่อกำหนดวิธีการแสดงวันที่
คุณยังสามารถใช้เพื่อกำหนด
เวลาและโซนเวลาของคุณ
เกี่ยวกับโทรศัพท์

ดูข้อมูลทางกฎหมายและ
ตรวจสอบสถานะโทรศัพท์
และเวอร์ชันซอฟต์แวร์

Wi-Fi

ด้วย Wi-Fi คุณสามารถใช้การเข้าถึงอินเทอร์เน็ตความเร็วสูงภายในพื้นที่ครอบคลุมของจุดเชื่อมต่อไร้สาย (AP)

คุณสามารถสนุกสนานกับอินเทอร์เน็ตได้สายด้วย Wi-Fi โดยไม่มีค่าบริการเพิ่มเติม

หมายเหตุ:

- หมายเหตุ: หากคุณอยู่นอกพื้นที่ Wi-Fi และเลือกใช้บริการเชื่อมต่อ 3G อาจมีค่าใช้จ่ายเพิ่มเติม
- หากโทรศัพท์ของคุณเข้าสู่โหมดปิดถึงแม้ว่าจะมีการเชื่อมต่อ Wi-Fi การเชื่อมต่อ Wi-Fi จะถูกปิดโดยอัตโนมัติ ในกรณีนี้หากโทรศัพท์ของคุณสามารถเข้าใช้ 3G ได้ อาจจะทำให้การเชื่อมต่อไปยังเครือข่าย 3G โดยอัตโนมัติ และอาจมีค่าใช้จ่ายเพิ่มเติม
- โทรศัพท์ GT540 สนับสนุนการรักษาความปลอดภัย WEP และ WPA/WPA2-PSK หากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณตั้งค่าการเข้ารหัสสำหรับ

การรักษาความปลอดภัยเครือข่ายไว ต้องป้อนรหัสในหน้าต่างป๊อปอัป หากไม่ได้มีการตั้งค่าการเข้ารหัสไวหน้าต่างป๊อปอัปนี้จะไม่ปรากฏขึ้นคุณสามารถขอรหัสจากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณ

1. วิธีการตั้งค่า Wi-Fi

1 แตะ แอปพลิเคชัน > ตั้งค่า > การควบคุม ไร้สาย แล้วเปิด Wi-Fi

2 ค้นหา AP (จุดเชื่อมต่อ)
– ค้นหาว่าสามารถเชื่อมต่อ กับ AP ไตใดบาง

3 เชื่อมต่อ AP

– เชื่อมต่อ AP ที่ต้องการจากรายการ ค้นหา AP

– หาก AP คือประเภทการรักษา ความปลอดภัย WEP หรือ WPA/WPA2-PSK ให้ป้อนรหัสความปลอดภัย

Wi-Fi

2. การสนับสนุนโปรไฟล์ เครือข่าย Wi-Fi

1 การสนับสนุนโปรไฟล์ Wi-Fi (การเชื่อมต่อกับ AP ที่ใช้บ่อยหรือ AP ชอน)

1) หาก AP ไม่ปรากฏ
ในรายการค้นหา
คุณสามารถเชื่อมต่อกับ
AP นั้นได้โดยบันทึก AP
นั้นเป็นโปรไฟล์

2) การบันทึก AP ที่ใช้บ่อย
เป็นโปรไฟล์ช่วยให้
สะดวกในการป้อนรหัส
ความปลอดภัยเมื่อเชื่อม
ต่อกับ AP ที่มีประเภท
การรักษาความปลอดภัย
ดังกล่าว

3) หาก AP นั้นไม่สนับสนุน
DHCP คุณสามารถเชื่อม
ต่อกับ AP ได้โดยใช้ IP
แอดเดรสคงที่

2 คำอธิบายฟิลด์แต่ละฟิลด์ ในโปรไฟล์ Wi-Fi

1) ชื่อเครือข่าย: SSID (ID)

2) ประเภทการรักษาคว
ามปลอดภัย: สนับสนุน
WEP และ WPA/WPA2-
PSK

3) รหัสความปลอดภัย:
บันทึกรหัสความ
ปลอดภัย

4) การตั้งค่า IP/DNS:
สามารถตั้งเป็นอัตโนมัติ
หรือคงที่ใด ขึ้นอยู่กับว่า
AP สนับสนุน DHCP
หรือไม่สำหรับคงที่
ให้ป้อนค่าฟิลด์ของ IP
แอดเดรส และเซิร์ฟเวอร์
DNS เพื่อใช้กับ IP
แอดเดรสคงที่เมื่อมีการ
เชื่อมต่อ

3 การบันทึกโปรไฟล์ Wi-Fi


1) เลือกเมนูเพิ่มเครือข่าย
Wi-Fi
ที่ด้านล่างของเครือข่าย
Wi-Fi แล้วป้อน SSID
และประเภทการรักษา
ความปลอดภัย

2) หลังจากเชื่อมต่อ AP
ด้วยประเภทการรักษา
ความปลอดภัยนี้แล้ว
โปรไฟล์จะถูกบันทึก
โดยอัตโนมัติ

3. การดู MAC แอดเดรส

ในการเชื่อมต่อกับเครือข่ายไร้สายบางเครือข่ายด้วยพีซีเตอร์ MAC คุณจำเป็นต้องป้อน MAC แอดเดรสของ GT540 ลงในเราเตอร์

คุณสามารถค้นหา MAC แอดเดรสได้ในเมนูสำหรับผู้ใช้ต่อไปนี่:

แตะ แอปพลิเคชัน > ตั้งค่า > การควบคุมไร้สาย > ตั้งค่า Wi-Fi และแตะปุ่มเมนู  แล้วเลือก **ขั้นสูง** > **MAC แอดเดรส**

การอัปเดตซอฟต์แวร์

อัปเดตซอฟต์แวร์ โทรศัพท์

การอัปเดตซอฟต์แวร์
โทรศัพท์มือถือ LG จากอิน
เตอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่ <http://update.lgmobile.com> หรือ <http://www.lg.com/common/index.jsp> → เลือกประเทศ → บริการ

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันล่าสุดได้อย่างสะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดตอย่างระมัดระวัง โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่าการ์ดถอดสายข้อมูล USB หรือแบตเตอรี่ระหว่างการอัปเดตอาจทำให้โทรศัพท์มือถือชำรุดเสียหายได้

DivX Mobile

เกี่ยวกับ DIVX VIDEO: DivX[®] เป็นฟอร์แมตวิดีโอ ดิจิตอลสร้างโดย DivX, Inc. อุปกรณ์นี้ได้รับการรับรอง DivX Certified ซึ่งสามารถเล่นวิดีโอ DivX ได้ สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ www.divx.com

เกี่ยวกับ DIVX VIDEO-ON-DEMAND: อุปกรณ์ DivX Certified[®] นี้ต้องทำการลงทะเบียนเพื่อที่จะสามารถเล่นเนื้อหา DivX Video-on-Demand (VOD) ได้ ในการสร้างรหัสการลงทะเบียนให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ ไปที่ vod.divx.com โดยรหัสสนี้เพื่อทำการลงทะเบียนและเรียนรู้เพิ่มเติมอื่นๆ เกี่ยวกับ DivX VOD

DivX Certified
สำหรับเล่นวิดีโอ DivX[®]
ไม่เกิน 320x240

อุปกรณ์เสริม

โทรศัพท์เคลื่อนที่รุ่นนี้มีอุปกรณ์เสริมหลากหลายให้คุณเลือกใช้ ซึ่งอุปกรณ์เสริมบางชิ้นอาจมีการแยกขาย เลือกใช้อุปกรณ์เสริมเหล่านี้ตามความต้องการในการสื่อสารส่วนตัวของคุณ โปรดสอบถามเกี่ยวกับอุปกรณ์เสริมที่มีจำหน่ายได้จากตัวแทนจำหน่ายในพื้นที่ของคุณ (รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

**อุปกรณ์
ชาร์จ**



**สายเคเบิล
ข้อมูล**



เชื่อมต่อโทรศัพท์ GT540 ของคุณเข้ากับคอมพิวเตอร์

แบตเตอรี่



คู่มือการใช้



**ชุดหูฟัง
สเตอริโอ**



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

ฉนวนหุ้มแวล้อม

สูงสุด: +55°C (คายประจ), +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GT540

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2008
EN 60950-1 : 2006

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Welton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Doo Heang Lee / Director

30. Aug. 2010

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดของซิมการ์ด	ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือใส่ซิมการ์ดไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่มีการเชื่อมต่อกับเครือข่าย	สัญญาณอ่อนอยู่นอกพื้นที่เครือข่าย GSM	ย้ายตำแหน่งไปยังบริเวณที่ใกล้กับหน้าต่างมากขึ้นหรืออยู่ในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการ
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสใหม่อีกครั้ง	ติดต่อผู้ให้บริการ
ตั้งค่าฟังก์ชันไม่ได้	ผู้ให้บริการไม่สนับสนุน หรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการโทรออก มีการใส่ซิมการ์ดใหม่ ถึงขีดจำกัดการโทรของคุณแล้ว	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยรหัส PIN 2

การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ปิดเครื่องไม่ได้	กดปุ่มเปิด/ปิดไม่นานพอ	กดปุ่มเปิด/ปิดอย่างน้อยสองวินาที
	แบตเตอรี่หมด ตัวสัมผัสแบตเตอรี่สกปรก	เสียบอุปกรณ์ชาร์จให้นานขึ้น ทำความสะอาดตัวสัมผัสแบตเตอรี่
ข้อผิดพลาดเกี่ยวกับการชาร์จ	แบตเตอรี่หมดโดยสิ้นเชิง	ชาร์จแบตเตอรี่
	อุณหภูมิสูงหรือต่ำเกินไป	ตรวจสอบให้แน่ใจว่าอยู่ในอุณหภูมิแวดล้อมที่เหมาะสม รอสักครู่ จากนั้นชาร์จแบตเตอรี่อีกครั้ง
	มีปัญหาที่ตัวสัมผัส	ตรวจสอบกระแสไฟฟ้าและการเชื่อมต่อกับโทรศัพท์ ตรวจสอบตัวสัมผัสแบตเตอรี่และทำความสะอาดหากจำเป็น
	ไม่มีกระแสไฟฟ้า อุปกรณ์ชาร์จชำรุด อุปกรณ์ชาร์จไม่ถูกต้อง แบตเตอรี่ชำรุด	เสียบปลั๊กเข้ากับเต้าเสียบอื่นหรือตรวจสอบแรงดันไฟฟ้า หากอุปกรณ์ชาร์จไม่ทำงาน ให้เปลี่ยนอุปกรณ์ชาร์จใหม่ ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น เปลี่ยนแบตเตอรี่
สัญญาณเครือข่ายขาดหายไป	สัญญาณอ่อนเกินไป	การเชื่อมต่อกับผู้ให้บริการอื่นเป็นไปโดยอัตโนมัติ

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
โทรเบอร์ไม่ได้	กำลังใช้ฟังก์ชันกำหนดเบอร์โทรออก	ตรวจสอบการตั้งค่า

ศูนย์บริการ LG โดย บริษัท แอลจี อิเลคทรอนิคส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน
 เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน
 แขวงบุดคโกล เขตธนบุรี กรุงเทพฯ 10600
 วันและเวลาทำการ : จันทร์-อาทิตย์,
 07:00 - 19:00น.

Call center : 0-2878-5757



GT540 User Guide

- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Google Mail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.



Congratulations on your purchase of the advanced and compact GT540 phone by LG, designed to operate with the latest digital mobile communication technology.

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase. LG will bear the cost of one SMS for the product authentication program.

For promotion, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories. Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Contents

Guidelines for safe and efficient use	7
Important notice	13
1. Phone memory	13
2. Optimising your battery's life	13
3. Installing an open source OS	14
4. Using unlock pattern.....	15
5. Using safe mode and hard reset.....	15
6. Connecting to Wi-Fi networks	16
7. Using a microSD card.....	17
8. Opening and switching applications	17
9. Connecting your phone to a computer via USB	18
10. Unlock screen when using data connection	20
11. When screen freezes	20
Getting to know your phone .	21
Installing the SIM card and battery	23
Charging your phone.....	24
Installing the memory card ...	25
Formatting the memory card..	26
Your Home screen	27
Touch-screen tips	27
Touch calibration.....	27
Lock and unlock screen.....	28
Using your home screen	28
Select your default home screen	28
Adding widgets to your home screen.....	29
Getting back to a recently used application.....	30
Onscreen keyboard	32
Using the keypad & Entering text	32
XT9 predictive mode	33
123 Mode	33
Google Account Set-up	34
Creating your Google account	34
Signing in your Google account.....	34
Calls	36
Making a call	36
Calling your contacts	36
Answering and rejecting a call.....	36
Adjusting call volume	36

Contents

Making a second call	37	Camera	48
Viewing your call logs.....	37	Getting to know the	
Call settings.....	37	viewfinder.....	48
Contacts.....	40	Using the focus mode.....	49
Searching for a contact	40	Taking a quick photo	49
Adding a new contact.....	40	Once you've taken the photo..	50
Speed dialling	40	Using the advanced settings .	50
Favourite contacts.....	41	Viewing your saved photos ...	52
Messaging/E-mail.....	42	Video camera.....	53
Messaging.....	42	Getting to know the	
Sending a message.....	42	viewfinder.....	53
Changing your message		Shooting a quick video	54
settings	43	After shooting a video.....	54
Setting up your email	44	Using the advanced settings .	54
Sending an email using your		Watching your saved videos..	55
new account.....	45	Your photos and videos	56
Retrieving your email.....	45	Viewing your photos and	
Changing your email account's		videos	56
settings	45	Adjusting the volume when	
Social Networking	46	viewing a video	56
Adding your account to your		Setting a photo as wallpaper.	56
phone	46	Editing your photos	56
Viewing and updating your		Rotating your photo.....	57
status	46	Adding text to a photo	57
Removing accounts on your		Adding an effect to a photo...	58
phone	47	Cropping a photo	58
		Tuning your photo	58

Adding frames	58	Transferring files using USB	
Adding clipart	58	mass storage devices.....	66
Using the drawpad	59	Music.....	66
Adding stamps.....	59	Playing a song	67
Resizing	59	Using the radio	67
Editing your videos	59	Searching for stations	68
Trimming the length of the		Resetting channels.....	68
video	59	Listening to the radio.....	68
Selecting transition style.....	59	Google applications	69
Adding subtitles	60	Google Maps	69
Adding edit effects	60	Android Market	69
Grabbing a frame	60	Google Mail	70
Adding dubbing to your video..	61	Google Talk.....	70
Multimedia.....	62	Utilities.....	71
Timeline view.....	62	Setting your alarm.....	71
My images options menu.....	62	Using your calculator	71
Sending a photo.....	62	Adding an event to your	
Sending a video	63	calendar	71
Using an image.....	63	Changing your calendar view..	72
Creating a slideshow	63	Quickoffice	72
Checking your photo	63	Voice recorder	73
Media Player	64	Recording a sound or voice...73	
Video editor	64	Sending the voice recording..73	
Storyboard.....	64	The Web	74
Music movie	65	Browser.....	74
Auto cut	65	Accessing the web	74
Playing a game	65		

Contents

Using options.....	74	Software update	85
Adding and accessing bookmarks	75	Phone Software update	85
Changing the web browser settings	75	DivX Mobile	85
Settings	76	Accessories	86
Wireless & networks.....	76	Technical data.....	87
Sound & display.....	76	Troubleshooting	88
Location & security	78		
Applications.....	79		
Accounts & sync	80		
Privacy	80		
SD card & phone storage.....	81		
Search	81		
Language & keyboard	81		
Accessibility.....	81		
Text-to-speech.....	82		
Date & time	82		
About phone	82		
Wi-Fi	83		
1. How to set up Wi-Fi	83		
2. Wi-Fi network profile support	83		
3. How to obtain the MAC address	84		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GT540 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1 g of tissue.
- The highest SAR value for this model phone tested by DAS4 for use at the ear is 1.23 W/kg (10 g) and when worn on the body is 1.39 W/kg (10 g).

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers, and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances, such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources, such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Turn off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material, as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner, or alcohol).
- Do not charge the phone when it is on soft furnishings.
- Charge the phone in a well-ventilated area.

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object, as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronic devices

- All mobile phones may experience interference, which could affect performance.
- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones while driving in the area.

- Do not use a hand-held phone while driving.
- Pay full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle, such as car stereos and safety equipment.

Guidelines for safe and efficient use

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music while on the go, please make sure the volume is at a reasonable level so you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off while close to your ear. We also recommend that music and call volumes are set to reasonable levels.

NOTE! Excessive sound pressure from earphones can cause hearing loss.

Glass parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until an authorised service provider replaces the glass.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.

- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off, or activate flight mode before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts that may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available in all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

Guidelines for safe and efficient use

- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose of in household waste.
- If you must replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption by the charger.
- Actual battery life depends on network configuration, product settings, usage patterns, battery, and environmental conditions.

Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.

1. Phone memory

When available space on your phone memory is less than 10%, your phone can not receive a new message. You need to check your phone memory and delete some data such as applications or messages to make more memory available.

To manage the application

1. On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications**.
2. When all applications appear, scroll and select the application you want to uninstall.
3. Tap **Uninstall** and touch OK to uninstall application you desired.

2. Optimising your battery's life

You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Google Mail, calendar, contacts, and other applications.
- Some applications you've downloaded may cause your battery's life to be reduced.

Important notice

To check the battery charge level


1. On the home screen, touch **Applications** tab and select **Settings > About phone > Status**.
2. The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.


To monitor and control what uses the battery

1. On the home screen, touch **Applications** tab and select **Settings > About phone > Battery use**.
2. The top of the screen displays battery usage time. Either how long since last connected to a power source or, if connected to a power source, how long you were last running on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

3. Installing an open source OS

If you install an open source OS on your phone, and do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

 **WARNING:** If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

 **WARNING:** To protect your phone and personal data, download applications only from trusted sources, such as Android Market. If some applications are not properly installed on your phone, your phone may not work normally or a serious error can be occurred. You will need to uninstall those applications and all of its data and settings from the phone.

4. Using unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.

WARNING

Precautions to take when using the Pattern Lock

It is very important that you remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. After attempting the unlock pattern 5 times, you can touch the Forget Pattern Option and use your Google account information to unlock your phone.

If you do not have Google account, you don't create the Google account on the phone, or you forget it, you can use **Hard Reset**.

5. Using safe mode and hard reset

Using safe mode

*** To recover from malfunction state of your phone**

1. Turn off your phone and reboot. While your phone is powering back on, press and hold the **Home** key during Android Logo is displayed. Your phone will boot all the way to the main screen and display "safe mode" in lower left corner.
2. Select **Settings** > **Applications** > **Manage applications**, and choose the application then select an **Uninstall** icon.
3. After uninstalling the application, turn off and reboot your phone.

*** Using Hard Reset (Factory Reset)**

If it does not restore to the original condition, use **Hard Reset** to initialise your phone.

Important notice

When your phone turns on and the lock screen displays, press and hold the **Volume up + Home + Search** keys all at the same time (for five seconds).

When the pop up screen is shown, choose OK to reset your phone.

Please note, after you perform **Hard Reset**, all your data and applications on your phone will be erased and cannot be reversed.



WARNING:

If you perform **Hard Reset**, all user applications and user data will be deleted. Please remember to back up any important data before performing **Hard Reset**.

6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you access a wireless access point, or “hotspot.” Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

To turn Wi-Fi on and connect to a Wi-Fi network

1. On the home screen, touch **Applications** tab and select **Settings > Wireless & networks > Wi-Fi settings**.
2. Touch **Wi-Fi** to turn it on and begin scan for available Wi-Fi networks.
 - List of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.

3. Touch a network to connect to it.
 - If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)
4. The status bar displays icons that indicate Wi-Fi status.

7. Using a microSD card

Pictures, along with music and video files, can only be saved to external memory.

Before using the built-in camera, you need to insert a microSD memory card to your phone first.

Without inserting a memory card, you will not be able to save pictures and video you had taken.

NOTE: Applications can only be saved to the phone's internal memory.



WARNING:

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Applications > Settings > SD Card & phone storage > Unmount SD card**.

8. Opening and switching applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages

Important notice

each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

To stop the application you use

1. On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications**.
2. Scroll to the desire application and touch **Force stop** to stop using it.

9. Connecting your phone to a computer via USB

NOTE: Installing the LG PC suite on your PC

To synchronise your phone via USB cable with your PC, you need to install the LG PC suite program on your PC. You can download this program from the LG website (<http://www.lgapplication.com>). Go to <http://www.lgapplication.com> and select your region, country & language. Visit the LG website for more information on installing and using the program.

LG PC SUITE

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of the mobile phone on your PC.

Major Functions of the LG PC Suite IV

- Create, edit and delete phone data conveniently
- Synchronise data from a PC & phone (contacts, calendar/task)
- Transfer multimedia files (photo, video, music) conveniently with a simple drag & drop between a PC and phone
- Transfer the messages from a phone to a PC
- Use your phone as a Modem
- S/W update without losing your data

GT540 does not support:

- PC connection via Bluetooth
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- E-mail
- Java Application

User's guide for PC Suite IV is in Help menu after install PC Suite IV.

To transfer files using USB devices:

1. Install your microSD card on your phone. (It may already be inserted on your phone.)
2. Before connecting the USB data cable, make sure that the **Mass storage only** mode is enabled on your phone. (On the applications menu, choose **Settings > SD card & phone storage**, then select **Mass storage only** check box.)

3. Use the USB cable with your phone to connect the phone to a USB port on your computer. You receive a notification that the USB is connected.
4. Open the notification drawer and touch **USB connected**.
5. Touch **Mount** to confirm that you want to transfer files between your phone's microSD card and the computer.

When the phone is connected as USB storage, you receive a notification. Your phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

NOTE: When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

Important notice

TIP! To use a microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**.

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as camera, gallery and music functions.

To disconnect your phone from the computer, carefully follow your computer's instructions to disconnect USB devices correctly, to avoid losing information on the card.

1. Safely disconnect the USB device on your computer.
2. Open the notification drawer and touch **Turn off USB storage**.
3. Touch **Turn off** in the dialog that opens.

10. Unlock screen when using data connection


Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just touch it.

11. When screen freezes

If the phone does not respond to user input or the screen freezes: remove the battery, insert it again and power on the phone. If it still does not work, please contact to the service centre.

Getting to know your phone

To turn on the phone, press and hold the **Power** key for 3 seconds.
To turn off the phone, press the **Power** key for 3 seconds and touch **Power Off**.

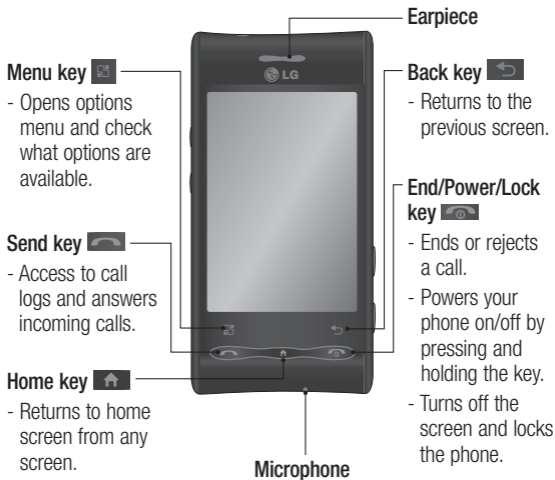

TIP! Touch the **Menu key** (Icon: Grid of four squares) whenever you tap an application to check what options are available.

TIP! If your phone has errors when you use it or you can not turn it on, remove battery, install it again and turn it on after 5 seconds.

Getting to know your phone

Volume keys

- On the home screen: controls ringer volume.
- During a call: controls your earpiece volume.
- When playing a track: controls volume.

Charger, micro USB cable connector

Search key

- Search the web and contents in your phone.

Camera key

- Go to the camera menu directly by pressing and holding the key.

Stereo earphone connector

Camera lens

microSD memory card slot

Back cover

Battery

SIM card slot

Charger, micro USB cable connector


Search key

Camera key

Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

- 1 With the back of the phone facing you, remove the back cover. To remove the back cover, firmly press your thumbs on either side of the back cover, and slide the cover below the camera lens.

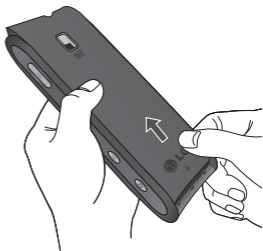


- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.



Getting to know your phone


- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery, then gently press the battery until it snaps into space.

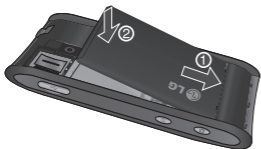

- 4 Replace the back cover of the phone and slide it down into place until the latch clicks.



Charging your phone

Slide back the cover of the charger connector on the side of your GT540. Insert the charger, and plug it into an electrical outlet. Your GT540 must be charged until you can see .

NOTE: The battery must be fully charged initially to improve battery lifetime.



NOTE: The GT540 has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance.


Installing the memory card

To store multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.



To insert a memory card:

NOTE: The GT540 supports up to a 32GB memory card.


- 1 Turn the phone off before inserting or removing the memory card. Remove the back cover.

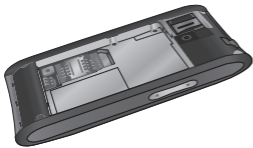

- 2 Open the slot protection and insert the memory card into the slot. Make sure the gold contact area is facing downwards.

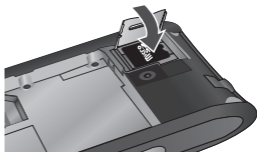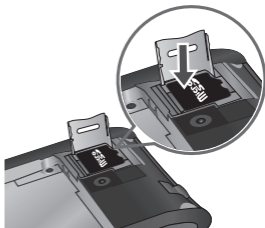

- 3 Close the slot protection.

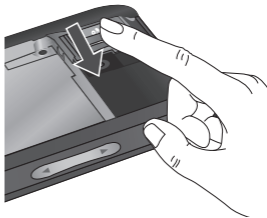

Getting to know your phone

WARNING!

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on the card are deleted when you format the card.

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Touch **Unmount SD Card**.
- 5 Touch **Format SD card**, then confirm your choice.

- 6 If you set the pattern lock, input the pattern lock and select **Erase Everything**. The card will then be formatted and ready to use.

NOTE: If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

TIP!

If your memory card is already Unmount, you can use the following step to format it. Touch **Applications > Settings > SD card & phone storage > Format SD Card**.

Your Home screen

Touch-screen tips

Here are some tips on how to navigate around your phone.

Touch - To choose a menu/option or open an application, touch it.

Touch and hold - To open an options menu or grab an object you want to move, touch and hold it.

Drag - To scroll through a list or move slowly, drag across the touch screen.

Flick - To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:

- To select an item, touch the centre of the icon.
- Do not to press too hard; the touch screen is sensitive enough to pick up a light, firm touch.

- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Touch calibration

Calibrating the device screen involves tapping the centre of a cross as it moves around the screen. This process ensures that when you tap the screen, the tapped item is activated.

If your phone does not accurately respond to screen taps, follow these steps to re-calibrate.

1. Tap **Applications > Settings > Sound & display**, and scroll to the **Touch settings**.
2. Touch **Touch calibration**, and follow the instructions on the screen.
3. After calibration is completed, choose between **Check calibration** and **Save without check**, then complete calibration.


Your Home screen

Lock and unlock screen

Whenever your GT540 is not in use, it will return to the lock screen. If you do not use the phone for a while, the home screen or other screen you are viewing, is replaced with the lock screen when the screen blacks out, to conserve the battery.

To wake up your phone, press the **Send, Home**, or **Power** key.

The lock screen will appear.

Touch the unlock icon  and drag your finger to the right to unlock your home screen. The last screen you were working on opens.

NOTE: If there are any programs running when you set the pattern, they may be still running in lock mode. It is recommended to exit all programs before entering the lock mode to avoid unnecessary charges. (e.g., phone call, web access and data communications)

TIP! Setting unlock pattern

You can draw your own unlock pattern by connecting four or more dots. If you set a pattern, the phone's screen is locked.

To unlock the phone, draw the pattern you set on the screen.

Using your home screen

Simply swipe your finger to the left or right to view them. You can also customise each panel with widgets, shortcuts which are shortcuts to your favourite applications, folders and wallpapers.

NOTE: Some screen images may be different depending on your phone provider.


Select your default home screen


The user interface is based on two types of home screens: **LG Home** and **Android Home**.


You can set your favourite home screen as the default.


If you want to change the default home settings, choose **Home selector** from the applications menu.


- In your LG home screen, you can view quick keys on the bottom of the screen. The quick keys provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** icon to bring up the touch-dialling pad to make a call.

 Touch the **Message** icon to access the messaging menu. Here, you can create a new message.

 Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications. Just touch to scroll through your applications.

- In your Android home screen, touch the **Applications** icon  to open the applications menu. Just touch and slide up

or down the screen to scroll through your applications. When you open and view the applications menu, you can touch **Home** icon  to return to the home screen.

To open the desire application, simply touch its icon from the applications list.


NOTE: Preloaded applications may be different depending on your phone's software or your service provider.

Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets, or folders to it. For more convenience using your phone, add your favourite widgets on the home screen.


NOTE: **LG Home** and **Android Home** provide this function. To add an desired icon to your home screen:

Your Home screen

- 1 On the home screen, touch the **Menu** key  and select **Add**.
- 2 On the **Add to Home** screen menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it.
- 4 Select **Contacts with phone numbers** from the list and tap it.
- 5 You will see a new folder's icon on the home screen. Drag it to the desired location on the desired panel and release your finger from the screen.



TIP! To add an application icon to home screen, touch and hold an application you want to add to home screen.

To remove an application icon from the home screen:


- 1 Touch and hold that icon. The **Applications** icon will be change as the **Trash** icon  .

- 2 Drag and drop an application icon to the **Trash** icon  .

Getting back to a recently used application

- 1 Touch and hold the **Home** key  . The screen will show you a pop up with icons of applications that you've used recently.
- 2 Touch an icon to open its application. Or, touch **Back** key  to return to the current application.

Notification drawer

The notification drawer runs across the top of your screen. Touch and hold, then slide the notification drawer down with your finger. Or, on the home screen, touch the **Menu** key  and select **Notifications**. Here, you can check Wi-Fi, Bluetooth, GPS status as well as other notifications.

Viewing the status bar

The status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you're likely to see in the status bar.



















[Status bar]

Icon	Description
	No SIM card
	No signal
	Connected to a Wi-Fi network
	Wired headset
	Call forward
	Call hold

Icon	Description
	Speakerphone is on
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	System warning
	Alarm is set
	New voicemail
	Airplane mode
	Ringer is silenced
	Vibrate mode
	No microSD card
	Battery fully charged
	Battery is charging
	Data in

Your Home screen

Icon	Description
	Data out
	Data in and out
	Phone is connected with PC via USB cable
	Downloading data
	Uploading data
	GPS is on
	Receiving location data from GPS
	2 more notifications not displayed
	Call in progress
	Data is syncing
	Download finished
	New Google Mail
	New Google talk message
	New message

Icon	Description
	Song is playing
	Upcoming event

Onscreen keyboard

You can also enter text using the onscreen keyboard. The onscreen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & Entering text



Tap to swap between lowercase and uppercase. Tap to enter an uppercase letter. The next letter you type will be uppercase. Tap twice to turn on caps lock. The coloured circle on the button tells you if uppercase is locked on (green) or if it is just on for one character (orange).



Tap to enter a space.



Tap to turn on or off XT9 predictive mode.



Tap to view the settings menu. Choose from **Editor settings, Keypad types, Handwriting settings, Writing language, User dictionary** and **Input method**.



Tap to hide or show the onscreen keyboard.



Tap to delete the previous character.



Tap to switch to the numeric and symbol keyboard.



Tap to create a new line in the message field.

XT9 predictive mode

The onscreen keyboard has predictive text to help you type quickly and accurately. XT9 predictive mode uses a built-in dictionary to recognise words based on the key number sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

123 Mode

This mode allows you to enter numbers in a text message (a telephone number, for example) more quickly. Touch the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.

Creating your Google account

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Tap **Google Mail** and tap **Next > Create** to start the Google Mail set up wizard.
- 3 Touch a text field to open the touch keyboard, and enter your name and username for your Google account. When you enter the text, you can move to the next text field by touching **Next** on the keyboard.

- 4 When you're finished to input name and username, tap **Next**. Your phone is communicating with Google servers and checking username availability.
- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

Signing in your Google account

- 1 Enter your e-mail address and password, then tap **Sign in**. Wait for signing in.
- 2 After sign in, you can use Google Mail and take advantages of Google services on your phone.

- 3 Once you have set up your Google account on your phone, your phone will be automatically synchronised with your Google account on the web. (It depends on your synchronisation settings.)

After sign in, you can use Google Mail, Google Calendar, Android Market and Google Map; download applications from Android Market; back up your settings to Google servers; and take advantage of other Google services on your phone.

IMPORTANT






- Some applications, such as Google Calendar, work only with the first Google account you add. If you plan to use more than one Google account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Google Mail, calendar events, and other information


from these applications and services on the web are synchronised with your phone. If you don't sign into a Google account during setup, you will be prompted to sign in or to create a Google account the first time you start an application that requires one, such as Google Mail or Android Market.

- If you want to use the backup feature to restore your settings to this phone from another phone that was running Android OS or later, you must sign into your Google account now, during setup. If you wait until after setup is complete, your settings will not be restored.
- If you have an enterprise account through your company or other organisation, your IT department may have special instructions on how to sign into that account.

Calls

Making a call

- 1 On the home screen, press the **Send** key  and touch the **Phone** icon  to open the keyboard.
- 2 Enter the number on the keyboard. To delete a digit, touch the **Clear** icon .
- 3 Touch the **Call** icon  to make a call.
- 4 To end a call, touch **End** or press the **End** key .



TIP! To enter “+” to make international calls, touch and hold down .


Calling your contacts


- 1 On the home screen, touch **Applications** tab to open the applications menu. Touch **Contacts** to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.

- 3 In the list, touch the contact you want to call, then select the number to use if there is more than one for that contact.

Answering and rejecting a call

When your phone rings, press the **Send** key  to answer. You can also drag the **Answer** icon  to the right.




Press the **End** key  to reject an incoming call.


TIP! When the phone rings, touch and slide the **Silent** icon  to the left if you want to switch to silent mode.



Adjusting call volume

To adjust the volume during a call, use volume up & down key on the left side of the phone.

Making a second call


- 1 During your initial call, touch .
- 2 Dial the number, or search your contacts to select the number you want to call.
- 3 Touch the **Call** icon  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch  to toggle between calls.

NOTE: You can touch  to make a conference call.

- 6 To end active call, Press **End** . To end all calls at the same time, touch the **Menu** key  and select **End all calls**.

NOTE: You will be charged for each call you make.

Viewing your call logs

On the home screen, press the **Send** key  to view **Call log**.

View a complete list of all dialed, received, and missed voice calls.

TIP! Touch any single call log entry to view the date, time, and duration of the call.

TIP! Touch the **Menu** key , then touch **Clear call log** to delete all the recorded items.

Call settings

You can configure phone call settings, such as call forwarding, call waiting, and other special features offered by your carrier.

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings**, and choose options that you want to adjust.

Calls

< Fixed Dialling Numbers >

Select **Fixed Dialling Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

< Voicemail >

Set up your voicemail number.

Voicemail service – Allows you to select your carrier's voicemail service or another service.

Voicemail settings – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

< Other call settings >

Excuse Messages – When you reject a call, you can send a message quickly by using this function. This is useful if you need to reply the message during a meeting.

Call forwarding – You can configure how your calls are forwarded when you're on the phone, when you don't answer, and so on. Choose from **Always forward**, **Forward when busy**, **Forward when unanswered**, or **Forward when unreachable**. Then enter the number to forward to.

NOTE: Diverting calls will incur charges. Please contact your network operator for details.

Call barring – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call costs – View the charges applied to your calls. (This service is network dependent; some operators do not support this function.)

Call duration – View the duration of all calls including all, dialed, received calls and the last call.

Additional settings – This lets you change the following settings:

Caller ID : Choose whether to display your number on an outgoing call.

Call waiting : If call waiting is activated, the handset will notify you of an incoming call while you are on a call. (Depends on your network provider.)

Select line : Allows to select line.


Contacts


You can add contacts on your phone and synchronise them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact

- 1 On the home screen, touch **Applications** tab to open the applications menu. Touch **Contacts** to open your contacts.
- 2 Touch **Search** and enter the contact name using the keypad.


Adding a new contact

- 1 On the home screen, press the **Send** key  and touch **Phone**  to open the keypad. Enter the new contact's number, then touch the **Menu** key , touch **Add to contacts** and then **Create new contact**.

- 2 If you want to add a picture to the new contact, touch . You can use a saved picture or take a new one.
- 3 Select the contact type and choose from **Phone**, **SIM** and your Google account.
- 4 Touch a text field to open the touch keyboard, and enter a new contact's name.
- 5 Touch a category of contact information and enter the details about your contact.
- 6 Touch **Done** to save the contact.

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 On the list of your contact, touch the **Menu** key  and select **More > Speed Dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.

3 Your contacts will open. Select the contact you want to assign to that number by touching their phone number once.

NOTE: To remove the speed dial contact from the list, touch and hold the assigned contact. When the pop up screen is shown, tap **Remove** then select **OK**.


2 Touch the **Favorites** tab and choose a contact to view its details.

3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.


Favourite contacts

You can classify frequently called contacts as favourites.

To add a contact to your favourites

- 1 On the home screen, touch  to open your contacts.
- 2 Touch a contact to view its details.
- 3 Touch the star to the right of the contact's name. The star turns gold.

To remove a contact from your favourites list

- 1 On the home screen, touch  to open your contacts.


Messaging/E-mail

Messaging

Your GT540 combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 On the home screen, touch **Applications** tab to open the applications menu. Touch **Messaging** and touch **New message** to open a blank message.
- 2 Enter a contact name in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient or continue entering the contact name. You can add multiple contacts.
NOTE: You will be charged for a text message for every person you send the message to.
- 3 Touch **Type to compose** to start entering your message.

- 4 Touch the **Menu** key  to open the options menu. Choose from **Add subject**, **Attach**, **Send**, **Insert smiley**, **Discard**, and **All threads**.
- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message after your name. Responses appear on the screen. As you view and send additional messages, a message thread is created.




WARNING: The 160-character limit may vary from country to country depending on how the SMS is coded.



WARNING: If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

Changing your message settings

Your GT540 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging** icon on the home screen, then touch the **Menu** key . Tap **Settings**.

< Storage settings >

Delete old messages – Touch to place a checkmark and allow the phone to delete older messages in a thread when the **Text message limit** or **Multimedia message limit** is reached.

Uncheck to keep all messages.

Text message limit – Touch to set the number of messages to save per thread of text messages.

Multimedia message limit – Touch to set the number of messages to save per thread of multimedia messages.

<Text message (SMS) settings>

Delivery reports – Activate to receive confirmation that your messages have been delivered.

Manage SIM card messages – Manage the messages stored on your SIM card.

Validity period – Choose how long your messages are stored in the message centre.

Text message centre – Enter the details of your message centre.

< Multimedia message (MMS) settings >

Delivery report – Choose to request a delivery report.

Delivery report allow – Choose to allow the sending of delivery confirmation message.

Read reports – Choose to request a read report for each message you send.

Read report allow – Choose to allow the sending of read confirmation message.

Auto-retrieve – Activate to retrieve messages automatically.

Messaging/E-mail

Roaming auto-retrieve – Activate to retrieve messages while roaming.

Set priority – Choose the priority level of your MMS.

Validity period – Choose how long your message is stored in the message centre.

Creation mode

Restricted: In this mode, the MMS Client device only creates and sends messages with content belonging to the Core MM Content Domain.

Warning: In this mode, the MMS Client device guides the user in creating and sending messages with content belonging to the Core MM Content Domain. This guidance is provided through warning dialogs.

Free: In this mode, the MMS Client allows the user to add any content to the message.

Receive advertisement – Allows receiving advertisement messages.

< Service message >

Choose whether to receive or block service messages.

< Notification settings >

Activate to display message notifications in the status bar. Also select a ringtone and activate vibrate to alert you of new messages.

< Info. Service settings >

Choose whether to receive, block, or view or edit channels to receive information service messages (cell broadcast messages). Also choose the languages of information service messages.

Setting up your email

Keep in touch while on the move by using your GT540 to send emails. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 On the home screen, touch **Applications** tab and tap **Email** to view the mail boxes

for each email account. Or, you can also touch **Email** on the home screen to access directly.

- 2 If the email account is not set up, start the email setup wizard.

TIP! If an email account is already set up, the wizard is not activated automatically.

Sending an email using your new account

- 1 Touch **Email** icon on the home screen, and then touch **Compose** icon to open a new blank message.
- 2 Enter the recipient's address, then write your message. You can also attach images, videos, audio files, and various document file formats.
- 3 Touch **Send** icon to send your email.

TIP! During an active Wi-Fi connection, emails are sent and received using Wi-Fi.

Retrieving your email


You can automatically or manually check your account for new email.

To check manually:

- 1 Touch **Email** icon on the home screen.
- 2 Then touch the account you want to use.
- 3 Choose **Refresh** and your GT540 will then connect to your email account and retrieve your new messages.

Changing your email account's settings

You can change your email settings based on your own preferences.

- 1 Touch **Email** icon on the home screen, and tap the desired account.
- 2 Touch the **Menu** key  to open the options menu, and tap **Settings**.
- 3 You can adjust the following options: **Account Setup**, **General Settings**, **Download Options**, and **Spam message**.

Social Networking

With your phone, you can enjoy the social networking and manage your micro-blog in on-line communities. You can update your current status and view your friends' status updates real-time.

If you don't have an account, you can visit their sites to set it up.

NOTE: An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Adding your account to your phone

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Choose any SNS application you want to use.
- 3 Enter your e-mail address and password that you set up on your community, then tap **Log in**.
- 4 Wait while your details are checked with your community.

- 5 If you tap your community, you can see the current status of your social community.

TIP! If you add a social networking widget on your home screen, the widget will show your status when your phone updates from the network.

You can also access the social community directly by touching up the widget.

Viewing and updating your status

- 1 Choose a community you want to access.
- 2 You can see the current status of your social community.
- 3 You can update your current status with comments or uploading photos.

NOTE: This is dependent on network services.

TIP! You can use information about friends only in SNS or sync all data to Contacts.

Removing accounts on your phone


- 1 Choose **Applications > Settings > Accounts & sync.**
- 2 Choose an account you want to delete, then touch **Remove account.**

Camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys.

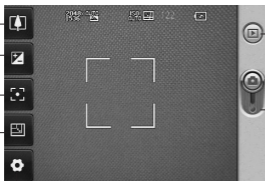

Gallery – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Taking a photo

Video mode – Slide down this icon to switch to video mode.

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Image size – Touch to set the size (in pixels) of the picture you take. Select a pixel value from the numerical options: 3M (2048x1536), 2M (1600x1200), 1M (1280x960), VGA (640x480), QVGA (320x240).

Focus – Touch this icon to select the options menu. See **Using the focus mode**.

NOTE: You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to save the picture you had taken.

TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Using the focus mode

You can select the focus mode as following options;

AF (Auto Focus) – Set the camera to focus automatically.

Macro – Macro mode allows you to take extreme close-ups. If you are trying to take a close-up shot but the focus box remains red, try turning the macro mode on.

Face tracking – If you set Face tracking and take a photo, your camera detects and focuses on human faces automatically.

NOTE: Zoom is not supported in Face tracking mode.

MF (Manual Focus) – Set the camera to focus manually.

Taking a quick photo

- 1 Press and hold the camera key on the right side of the phone.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Press the capture button lightly, and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the subject in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button and hold it down.

Camera

Once you've taken the photo

Your captured photo will appear on the screen.


Share Touch to share your photo as **Bluetooth, Email, Facebook for LG, Google Mail, Messaging, Picasa** or **Twitter for LG.**

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.


Set as Touch to use the image as **Contact icon** or **Wallpaper.**


Rename Touch to edit the name of the selected picture.

Edit Touch to edit the image using various tools.


 Touch to view a gallery of your saved photos.

 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to return to the previous menu.

Using the advanced settings

In the viewfinder, touch  to open all advanced options.


You can change the camera setting by scrolling the wheel. After selecting the option, touch the **Back** key .

Image quality – Choose from **Super Fine, Fine, and Normal.** The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

White balance – Choose from **Auto, Incandescent, Sunny, Fluorescent, and Cloudy.**


Shot mode – Choose from **Normal, Continuous shot, Beauty shot, Frame shot, Panorama shot, Art shot, and Smile shot.**

Timer – The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

ISO – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful under darker conditions when you cannot use the flash. Select from ISO values of **Auto**, **100**, **200**, and **400**.

Scene mode – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night**, and **Sunset**.

Color effect – Choose a colour tone for your new photo.

Once you've made your selection, use the **Back** key  to close the colour tone menu. You are then ready to take a picture.

NOTE: You can change a colour picture to black and white or sepia, but you cannot change a black-and-white or sepia picture to colour.

Captured image – Choose from **Hold**, **On**, and **Off**. If you select **Hold**, after taken picture screen is shown for 1 second, and it goes to the preview right away.

Grid screen – Choose from **Off**, **2x2**, or **3x3**.

Shutter sound – Select one of the four shutter sounds.

GEO-Tagging – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE: This function is only available when GPS is active.

Camera

Hide icons – Choose the camera setting icons to hide manually or automatically.


Blink detection – Turn this on to display a red box around the face that was blinking in the preview image screen.

Reset – Restore all camera default settings.

TIP! When you exit the camera, all settings will return to their defaults, except image size and image quality. Any nondefault settings must be reset, such as colour tone and ISO. Check these before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

Viewing your saved photos


- 1 You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen.

Video camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the Video. Slide the brightness indicator along the bar, towards “-” for a lower brightness Video, or towards “+” for a higher brightness Video.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys. Before starting record a video, you can use the zoom function. You can not control the zoom function during recording.

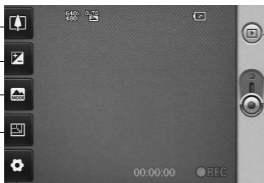

Gallery – This enables you to access your saved photos & Videos from within the video camera mode. Simply touch, and your gallery will appear on the screen.

Camera mode – Slide up this icon to switch to camera mode.

Start recording



Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Video size – Touch to set the size (in pixels) of the video you record. Choose your video image size from VGA (640x480), QVGA (320x240) or QCIF (176x144).

Scene mode – Set the camera to adjust to the environment. Choose from **Auto, Portrait, Landscape, Sports, Sunset and Night**.

Video camera

Shooting a quick video

- 1 Press and hold the camera key on the right side of the phone.
- 2 Then slide the capture button down position, the icon will change to .
- 3 The video camera's viewfinder will appear on the screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 REC will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 7 Touch  on the screen to stop recording.

After shooting a video

A still image representing your video will appear on the screen.


Share Touch to share your video as **Bluetooth**, **Email**, **Google Mail**, **Messaging** or **YouTube**.


NOTE: Additional charges may apply when MMS messages are downloaded while roaming.


Play Touch to play the video.


Rename Touch to edit the name of the selected video.

Edit Touch to enter editing mode on this video.


 Touch to access the media player and view the saved videos.


 Touch to delete the video you just made, and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video right away. Your current video will be saved.

 Touch to return to the previous menu.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options. Adjust the video camera setting

by scrolling the wheel. After selecting the option, touch the **Back** key .

Color effect – Choose a colour tone to use for your new view.

White balance – The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Duration – Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

TIP! When choosing MMS duration, the video quality will be set as QCIF and you can shoot longer videos.

Audio recording – Choose **Mute** to record a video without sound.


Hide icons – Select whether to hide the icons in the video camera menu automatically or manually.

Recorded video – Choose from **Hold**, **On**, and **Off**. If you select **Hold**, after recorded video screen is shown for 1 second, and it goes to the preview right away.

Reset – Reset all the video camera settings.


TIP! You can change a video shot in colour to black and white or sepia, but you cannot change a black-and-white or sepia video to colour.

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts to play automatically.

Your photos and videos

Viewing your photos and videos


- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

TIP! Flick left or right to view other photos or videos.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left side of the phone.


Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the **Menu** key .
- 3 Tap on more>set as>then select wallpaper>select the region in the photo which you

want to set>>then press “√” “mark below the image to set as wallpaper.

Editing your photos

You can do lots of great things to your photos to change them, add to them, or liven them up.

- 1 Open the photo you want to edit, then touch the **Menu** key .
- 2 Touch **Edit** to change your photo:



Rotate & Flip – Rotate or flip your photo for fun or a better view.



Crop – Crop your photo. Choose a square or circular crop area, then move your finger across the screen to select the area.



Tuning – This helps you adjust a picture using automatic colour, brightness, and so on.



Effect – Touch to apply the effect options to a photo.



Frame – Add frames to the photo.



Text – Add text to a picture.



Clipart – Add clipart to a photo.



Drawpad – Draw on your photo, freehand. Select the line thickness from the four options, then choose the colour you want.



Stamp – Decorate your photo with stamps. Choose from the different stamps, then touch your photo where you want to place them.



Resize – Resize your photo.








Save the changes you made to the photos.




Delete your photo edits.

Rotating your photo



- 1 On the editing screen, touch  .
- 2  Rotate 90° counterclockwise
- 3  Rotate 90° clockwise
- 3  Flip vertically
- 4  Flip horizontally

Adding text to a photo


- 1 On the editing screen, touch  .
- 2 Select the colour of the text, then choose one of the bubble shapes.
- 3 Enter your text using the keypad, then touch **OK**.
- 4 Move the text by touching it and sliding it to where you want it.

Your photos and videos


Adding an effect to a photo








- 1 On the editing screen, touch .
- 2 You can apply any of the various options to the photo.
- 3 To undo an effect, simply touch .

Cropping a photo





- 1 On the editing screen, touch .
- 2 Choose the shape you want to use to crop the picture.
- 3 Drag the box over the area you want to crop. Move the selected area by dragging.
- 4 When you are finished with your selection, touch Done icon in the right bottom of the image.

Tuning your photo

- 1 On the editing screen, touch . Use the tuning toolbar to adjust your photo's tuning as you like.




- 2  Choose to adjust the tuning settings automatically.
- 3  Choose to compare before and after tuning.
- 4  Adjust the brightness and contrast of the photo.
- 5  Adjust highlights and shadows.
- 6  Balance your photo's colour.
- 7  Adjust the saturation of your photo.
- 8  Adjust your photo's sharpness.
- 9  Denoise.

Adding frames




- 1 On the editing screen, touch .
- 2 Touch  or  to choose a frame.
- 3 Touch  to check the whole frame.

Adding clipart




- 1 Touch  on the editing screen.

- 2 Touch , then select clipart.
- 3 Adjust the size of the clipart.
- 4 Rotate clipart using  and .


Using the drawpad

- 1 Touch  on the editing screen.
- 2 Touch  to select the shape.
- 3 Also, set the colour and thickness.
- 4 You can delete the drawing you added using .

Adding stamps

- 1 Touch  on the editing screen.
- 2 Touch  to see which stamps are available and to select the stamp.
- 3 Touch the screen where you want to add the stamp to the photo.
- 4 Adjust the colour using .




Resizing

- 1 Touch  on the editing screen.
- 2 Scroll the bar to resize the photo.



Editing your videos

The video editing features are available for the MPEG-4 format.

Trimming the length of the video

- 1 Select **Edit**, then choose .
- 2 Touch . Then set the new start and end points. Touch **OK** and select **Next Icon**.
- 3 Touch  to return to the gallery and discard the changes.



Selecting transition style

- 1 Select a transition style, then touch  to preview it.
- 2 Touch  **2 sec**, then drag the bar to adjust the duration time

Your photos and videos


- 3 Touch **OK** to save the transition. Touch **Apply** to apply the currently selected transition. Choose **Apply To All** to apply the currently selected transition to all video files in the storyboard.

Adding subtitles

- 1 Open the video you want to edit.
- 2 Select **Edit**, then select  to add subtitles to the video.
- 3 Touch , then pause playback to set the start point for text appearance.
- 4 Touch **Start**, then choose the text style. Enter your text using the keypad, then select **Done**.
- 5 Touch the area of the screen where you want the text to appear, then touch **OK**.
- 6 Select right arrow icon then save. This file will be saved as new file.



- 7 Repeat these steps to add more text.

Adding edit effects

- 1 Open the video you want to edit.
- 2 Select **Edit**, then select .
- 3 Select an effect to add to the photo.

Grabbing a frame

Capture a picture from the video.

- 1 Open the video you want to edit.
- 2 Select **Edit**, then and select .
- 3 Play the video, then touch  to capture the screen you want while the video is playing.
- 4 The frame is saved to the phone as a still image file.

Adding dubbing to your video

- 1 Open the video you want to edit.
- 2 Select **Edit**, then choose .
- 3 Touch . The **My Sounds** folder will open. Choose the track you want to add to your video.
- 4 The original audio track on your video will be deleted.
- 5 select right arrow icon then save. This file will be saved as new file.
- 6 Or you can record a new file and insert live dubbing by touching .
- 7 Touch OK to save the current dubbing.

Multimedia

You can store multimedia files to a memory card to have easy access to all your image and video files.

Touch **Applications** tab, then select **Gallery**. You can open a list of catalogue bars that store all your multimedia files.

NOTE: Make sure you install a memory card into the phone to save photos and access all your pictures. Without a memory card, the phone will not display any photos or videos.

There are six catalogue bars as shown below.

All  : Displays all your pictures and videos.

Favorite  : If you touch and hold a photo or video, the option screen will appear allowing you to tag the photo as a favourite. This **Favorite** bar will show your favourite photos and videos.



Camera  : Displays all your photos.

Image  : Displays all your images.

Video  : Displays all your videos.

Tag  : Like the **Favorite** bar, you can tag photos. This bar displays your tagged photos and videos.

Timeline view

The GT540 **Gallery** provides a timeline view of your photos and videos. On the left side of the screen, the date you took your photos will be displayed, from oldest to newest. If you select a specific date, all the photos you took on that day will be grouped over a white background.

My images options menu

Select a photo, then touch and hold to see the available options.

Sending a photo

- 1 To send a photo, touch and hold the photo you want.

- 2 Select **Share**. Choose from **Bluetooth, Email, Facebook for LG, Google Mail, Messaging, Picasa** or **Twitter for LG**.
- 3 When you choose **Email, Google Mail** or **Messaging**, your photo will be attached to a message, then you write and send the message normally.

TIP! If you have a SNS account and set it up on your phone, you can share your photo to SNS community.

Sending a video

- 1 To send a video, touch and hold the video you want.
- 2 Select **Share**. Choose from **Bluetooth, Email, Google Mail, Messaging**, or **YouTube**.
- 3 When you choose **Email, Google Mail** or **Messaging**, your video will be attached to a message, then you write and send the message normally.

Using an image

Choose images to use as wallpaper or identify callers.

- 1 Touch and hold a photo, then select **Set as**.
- 2 Choose from **Contact icon** or **Wallpaper**.

Creating a slideshow

If you want to view all the images on your phone, you can create a slideshow so you don't have to open and close each image.

- 1 Touch and hold a photo, then select **Slideshow**.

Checking your photo

You can view a photo's detailed information, such as **Name, Date, Time, Resolution, Size, Type**, and **Tag**.

- 1 Touch and hold a photo, then select **Detail**.

Multimedia

Media Player

The **Media Player** folder displays a list of videos you downloaded to or recorded on your phone.

Watching a video

- 1 Select **Media Player** on the **Applications** tab.
- 2 Touch **Video** and select a video to play.







TIP! The GT540 supports DivX video playback to ensure greater content availability.

Touch **Music** and select a music to play.


Video editor


- 1 On the home screen, touch **Applications** tab and select **Video editor** .

Storyboard

- 1  **Import Files** – Add media files to the storyboard. You can add up to 32 media files.
- 2  **Set BGM** – Add background music to the storyboard, or change the sound.
- 3  **Preview** – Preview the video file you created.
- 4  **Save** – Save the video file you created.
- 5  **Add Text** – Add a text frame into storyboard.
- 6  **Clip Manager** – Manage the added media files. If no media files were added, the button is disabled.

You must touch  first to edit the video.

-  – Touch to select all the files, but the maximum is 32 files.


 – Touch to deselect all the files.


25/32 – This shows the selected file number.

 Touch to go to the next step.


Music movie


1 Flip left and right to check the various styles. For **Music movie**, you can select only photos.



 – Return to the **Video editor** screen.

 – Display the style name and description.

 – Preview the style.

 – Touch to select photos.

2 After you select photos, touch  to proceed to the next step.

3 Touch  to select all the photos, then touch .

4 Select the music, then set it as the background music.

5 Add movie title using the keypad, then save it.


6 Touch  to play the complete video file.


7 Touch  to save the video file you created.

Auto cut

There are three style templates:

Portrait, Landscape, and Motion object.

1 Touch , then select a video. Go to the next step.

2 Touch  to preview the video file.

3 Touch  to save the file.

Playing a game

1 You can download a range of games from the Android Market.

2 To Launch tap on the a game or an application.

NOTE: Additional charges may apply when using this service to download games or applications that are not free.

Multimedia

NOTE: Java game and application installation are only possible through the Web.

Transferring files using USB mass storage devices

To transfer files using USB devices:

- 1 Connect the GT540 to a PC using a USB cable.
- 2 If you didn't install LG Android Platform Driver on your PC, you need to change settings manually. Choose **Settings > SD card & phone storage > activate Mass storage only**.
- 3 Touch **Turn on USB storage**.
- 4 You can view the mass storage contents on your PC and transfer the files.

NOTE: You need to install your microSD card first. Without an microSD card, you cannot use USB mass storage.

NOTE: If you installed LG Android Platform Driver, you will see pop up with 'Turn on USB storage' immediately.

NOTE: After using USB mass storage function, if you want to synchronise your phone with your PC using the LG PC suite, you need to touch **Settings > SD card & phone storage**, then touch the checkmark to turn off **Mass storage only** mode.

Music

Your GT540 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch **Music**.





Artists – Browse your music collection by artist.

Albums – Browse your music collection by album.

Songs – Contains all the songs you have on your phone.

Playlists – Contains the playlists you created.

Playing a song

- 1 On the home screen, touch **Applications** tab and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the first part of the song. Touch  two times to go back to the previous song.

To change the volume while listening to music, press the up and down volume keys on the left side of the phone.

Touch and hold any song in the list. It will display **Play**, **Add to playlist**, **Delete**, and **Search** as options.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

Using the radio

Your GT540 has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

NOTE: You must attach your headphones to listen to the radio. Insert them into the headphone jack.


Multimedia

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning in.

You can store up to 48 channels on your phone.

To tune in automatically

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the **Menu** key .
- 3 Touch **Auto scan**, then touch **OK**.

NOTE: You can also manually tune in to a station using the wheel displayed next to the radio frequency.

Resetting channels

- 1 On the home screen, touch **Applications** tab and select **FM radio**.

- 2 Choose **Reset channel** to reset the current channel, or choose **Reset all channels** to reset all the channels.

Listening to the radio

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the channel number of the station you want to listen to.

TIP! To improve radio reception, extend the headset cord, which functions as the radio antenna.

WARNING

If you connect a headset not specifically made for radio reception, radio reception may be poor.

Google applications

- 1 First, set up a Google account. Enter your user name and password.
- 2 After signing in, your contacts, email, and calendar in your Google account will automatically synchronise with your GT540.



Google Maps


Check your current location and traffic and receive directions to your destination. The GT540 must be connected to Wi-Fi or 3G/GPRS.

NOTE: Google Maps does not cover all cities and countries.


Touch **Menu**  key to use options:


Search  – Enter the place you are looking for.


Directions  – This will let you find out the route of your entered place. Touch  to input the data. Choose from Contacts or Point on Map or My current location.

Layers  – You can switch view from Traffic to Satellite or Terrain. Tap Latitude then you will see the location of your contacts from Google account.

My Location  – Point your current location on the map.

Join Latitude  – Share your location with friends you choose and Google.

More  – Clear map or find Starred items and more.

NOTE: While viewing **Street View** for a location, touch the **Menu** key  then touch **Compass Mode** to turn compass mode on.




Android Market

Android Market lets you download useful applications and games. If you install applications and games from Android Market, they appear in the GT540 menu. You can check downloaded application by tapping Downloads tab.


Google applications


You can check other's comment regarding an application or you can post your comments.

- 1 Select a category from Apps and Games to browse its contents. It will show you Top paid, Top free and Just in.
- 2 Choose an application to install.

NOTE: When you want to finish the game, use the **Home**  or **Back** key . You will return to the home screen. Or use the **Menu** key  of the game.

Google Mail

Google Mail is configured when you first set up your phone. Depending on your synchronisation settings, Google Mail on your phone is automatically synchronised with your Google Mail account on the web. The inbox conversations list is your default Google Mail view. Touch the **Menu** key , then touch **Refresh** to send or receive new emails and to synchronise your emails with your Google Mail account on the web. With


Menu key , you can compose an email, **Add account**, **Go to labels**, **Search** and **More**.


Google Talk


Google Talk is Google's instant messaging program. It lets you communicate with other people who also use Google Talk.


Press the **Menu** key  and check available options.


 **All friends** – Join all friends to communicate.

 **Add friend** – Send invitation to chat.

 **Search** – It search any chat that contains your entered word or sentences.



Sign Out – If you want to sign out from chat then select menu key  then tap on more and select signout.


 **Settings** – Adjust indicator or notification. etc.

 **More** – From here, you can find options like close all chats, change settings, sign out and terms and policy.


Utilities

Setting your alarm

- 1 On the home screen, touch **Applications** tab and select **Clock**. The clock application opens with the date and time displayed on your home screen.
- 2 If you want to add a new alarm, touch the alarm icon  at the bottom of the **Clock** screen.
Touch an existing alarm to change its time and other attributes or touch **Add alarm** to add a new one.
- 3 Touch  to turn on the alarm, and set the time you want the alarm to sound. After you set the time, the GT540 will let you know how much time is left before the alarm sounds.
- 4 Set **Repeat**, **Ringtone** or **Vibrate** and add **Label** to name the alarm. Touch **Done**.

NOTE: To change alarm settings, on the **Clock** screen, touch the **Menu** key , and touch **Settings**.

Using your calculator

- 1 On the home screen, touch **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x, or ÷), followed by =.
- 4 For more complex calculations, touch the **Menu** key , touch the **Advanced panel**, then choose **sin**, **cos**, **tan**, **log**, and so on.


Adding an event to your calendar

- 1 On the home screen, touch **Applications** tab and select **Calendar**.
- 2 First, you must create a Google account to use Calendar.

Utilities

- 3 Select the date you want to add an event to.
- 4 Touch the **Menu** key , then touch **New event**.
- 5 Touch **What**, then enter the event name. Check the date and enter the time you want your event to begin. Enter the time and date the event finishes in the lower date and time boxes.
- 6 Also, touch **Where**, then enter the location.
- 7 If you would like to add a note to your event, touch **Description** and enter the details.
- 8 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 9 Touch **Done** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.


Changing your calendar view

- 1 On the home screen, touch **Applications** tab and select **Calendar**. Touch the **Menu** key .
- 2 Select the calendar view for a particular day, week, or month.

Quickoffice

Quickoffice allows you to read documents, but the edit function is not available. PDF, Text, Microsoft Word/Excel/PowerPoint files are supported.




- 1 On the home screen, touch **Applications** tab and select **Quickoffice**.
- 2 Choose **Memory card**. You can see the files and folder list. If you choose **Recent documents**, files you recently viewed will be displayed.

- 3 Choose a file, then touch the **Menu** key  to view the available options.

Voice recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 On the home screen, touch **Applications** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end recording.
- 4 Touch the **Menu** key  and select **Set as** to set as the **Phone ringtone** or **Notification ringtone**.

NOTE: Touch **Go to list** to access your album. You can listen to the saved recording.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching the **Menu** key  and **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Google Mail** and **Messaging**. When you select **Email**, **Google Mail** and **Messaging**, the voice recording will be added to the message that you write and send it normally.

The Web

Browser

Browser gives you a fast, full-colour world of games, music, news, sports, entertainment, and much more, right on your mobile phone. Wherever you are and whatever you're into.


Accessing the web

1 On the home screen, touch **Applications** tab and select **Browser**.

2 You will move to the website.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using options

Touch the **Menu** key  to view options.

 **New window** – Open a new window.

 **Bookmark** – Add/Show Bookmark, show Most Visited Site and History.

 **Window** – Show all your open windows.


 **Refresh** – Touch to refresh the web page.

 **More**

- **Add bookmark** – Set the current web page as a bookmark.
- **Find on page** – Marks all the letters you enter.
- **Select text** – Touch and select the lines you want to copy. You can paste it to any input box.
- **Page info** – Show page information.
- **Share page** – Send page by email, messaging or you social network community.
- **Downloads** – Show download history.
- **Setting** – Set browser settings.

Adding and accessing bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 On the home screen, touch **Applications** tab and select **Browser**.
- 2 Touch the **Menu** key  then select **More > Bookmarks**.
A list of your bookmarks will appear on the screen.
- 3 Select **Add Bookmarks**, then enter a name for the bookmark followed by its URL.
- 4 Touch **OK**. Your bookmark will now appear in the bookmark list.
- 5 To access the bookmark, simply touch the bookmark. You will be connected to the bookmarked page.

Changing the web browser settings

Touch the **Menu** key  then select **More > Settings**.

You can change the page layout (e.g., text size, text encoding), change the home page, manage cache, cookie, and security settings, and so on.

Settings


On the home screen, touch **Applications** tab then scroll and touch **Settings**.

Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. Also, you can set mobile networks, airplane mode.

Airplane mode – After setting Airplane mode, all wireless connections will be disabled.

Wi-Fi – Touch to checkmark: Turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Allows you to set up and manage wireless access points. Set network notification, or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Touch the **Menu** key  and touch **Advanced**.

Bluetooth – Touch to checkmark: Turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – Set device name & discoverable, scan for other devices. Or, check a list of Bluetooth devices that you've previously configured and those detected when the phone last scanned for Bluetooth devices.

VPN settings – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

Mobile network – Turn on mobile network.

Mobile network settings – Set options for data roaming, network mode & operators, access point names (APNs), and so on.

Sound & display

< **Sound settings** >

Silent mode – Allows you to silence all sounds (including call and notification ringtones) except the audio from music, videos, and any alarms you have set. (You must silence media and alarms in their own applications.)

Ringer volume – Allows you to set the incoming call and notification volume. If you uncheck the option to use the same volume for both calls and notifications, you can set both volumes separately.

Media volume – Allows you to set the volume for music and videos.

Phone ringtone – Allows you to set your default incoming call ringtone.

Phone vibrate – Allows you to set your phone to vibrate when you receive an incoming call, independent of your ringtone or volume settings.

Notification ringtone – Allows you to set your default notification ringtone.

Audible touch tones – Allows you to set the phone to play tones when using the dial keypad to dial numbers.

Audible selection – Allows you to set your phone to play a sound when you touch buttons, icons, and other onscreen items that react to your touch.

Haptic feedback – Allows you to set your phone to vibrate briefly when you touch the **Menu** key, **Back** key, and perform other actions.

SD card notifications – Allows you to set your phone to play a sound when you receive microSD card notifications.

< Display settings >

Orientation – Allows you to set the orientation to automatically switch to landscape mode or portrait mode when you turn the phone sideways or upright.

Animation – Allows you to set animated transitions when navigating from screen to screen.

Brightness – Adjust the brightness of the screen.

Screen timeout – Allows you to adjust the delay time before the screen automatically turns off. For the best battery performance, use the shortest convenient timeout.

Settings

< Touch settings >

Touch calibration – Reset your screen for ease of use.

Location & security

< My Location >

Use wireless networks – If you check **Use wireless networks**, your phone will determine your approximate location by using Wi-Fi and mobile networks.

Use GPS Satellites – If you check **Use GPS satellites**, your phone will determine your location to street-level accuracy.

< Screen unlock pattern >

Set unlock pattern – Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set PIN or Password instead of Pattern or leave it as None.

Require pattern – Uncheck to stop requiring an unlock pattern to unlock your screen. You must draw your current pattern when you uncheck this option.

Use visible pattern – Allows you to set the pattern to be visible when unlocking your phone.

Use tactile feedback – Allows you to set your phone to vibrate briefly as you touch each dot when you draw an unlock pattern.

To lock your screen by using the Pattern Lock

- 1 The first time you do this, a short tutorial about creating an unlock pattern appears.
- 2 You're prompted to draw and redraw your own pattern.

The next time you turn on your phone or wake up the screen, you're prompted to draw your unlock pattern to unlock the screen.

< SIM card lock >

Set up SIM card lock – Set up SIM card lock or change SIM PIN.

< Passwords >

Visible passwords – Select to show passwords as you type them or deselect to hide passwords as you type them.

< Credential storage >

Use secure credentials –

Checkmark to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the credential storage, this setting is dimmed.

Install from SD card – Allows you to install encrypted certificates from a microSD card.

Set password – Allows you to set or change the password for your secure credential storage. Your password must have at least 8 characters.

Clear storage – Deletes all secure certificates and related credentials and erases the secure storage's own password.

Applications

Unknown sources – Permits installation of applications that you obtain from websites, email, or other locations other than Android Market.

WARNING

To protect your phone and personal data, download applications only from trusted sources, such as Android Market.

Manage applications – Manage and remove installed applications.

Running services – Allows you to view and control currently running services and applications. This option displays what processes each running service needs and how much memory it is using.

Development – Allows you to set options for application development, such as **USB debugging**, **Stay awake**, and **Allow mock locations**.

Settings

Accounts & sync

< General sync settings >

Background data – Permits applications to synchronise data in the background, whether or not you are actively working in them. Unchecking this setting can save battery power and lowers (but does not eliminate) data use.

Auto-sync – Permits applications to synchronise, send, and receive data on their own schedule.

< Manage accounts >

List of all Google accounts and other accounts you've added to the phone.

If you touch an account in this screen, its account screen opens.

Privacy

< Location >

Use My Location – Allows you to include your position when using Google search and other Google services. When you checkmark this option, you're asked whether you consent to allowing Google to use your location when providing these services.

< Personal data >

Factory data reset – Erases all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application data and settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to reenter the same kind of information as when you first started Android.

SD card & phone storage

< USB connection mode >

Mass storage only – Your phone can be used as a mass storage device if you have a memory card inserted. You can set the **Mass storage only** as a default setting of USB connection mode.

< SD Card >

Check total space and available space. Touch **Unmount SD card** for safe removal. **Format SD card**, if you want to delete all data from the microSD card. You must unmount a microSD card before you can format it.

< Internal phone storage >

Check the **Available space**. Lists the amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

Search

You use the **Search** settings to configure Google search, Quick search box, and the data on the phone that you want to include in searches.

Language & keyboard

Use the **Language & keyboard** settings to select the language and region for the text on your phone and for configuring the onscreen keyboard, including words that you've added to its dictionary.

Accessibility

You use the **Accessibility** settings to configure any accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins to become selectable.

Settings

Text-to-speech

You use the Text-to-speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

NOTE: If you don't have speech synthesiser data installed, only the **Install voice data** setting is available.

Date & time

Use **Date & time** settings to set your references for how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

About phone

View legal information, and check phone status and software version.

Wi-Fi

With Wi-Fi, you can use highspeed Internet access within the coverage of the wireless access point (AP).

You can enjoy wireless Internet with Wi-Fi, without extra charges.

NOTE:

- If you are out of Wi-Fi area and choose 3G connection, additional charges may be applied.
- If your phone turns into sleep mode even when it is connected to Wi-Fi, the Wi-Fi connection will be disabled automatically. In this case, if your phone has access to 3G data, it may be connected to the 3G network automatically, and additional charges may be applied.)
- The GT540 supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You

can obtain the key from your Wi-Fi service provider or network administrator.

1. How to set up Wi-Fi

- 1 Touch **Application > Settings > Wireless & networks**, then turn **Wi-Fi** on.
- 2 AP (Access Point) Search
 - Searches for which AP it can connect to.
- 3 AP Connect
 - Connects to the desired AP from the AP search list.
 - If the AP is security type WEP or WPA/WPA2-PSK, enter the security key.

2. Wi-Fi network profile support

- 1 Wi-Fi profile support (how to connect to a frequently used AP or hidden AP)
 - 1) If the AP does not appear in the search list, you can connect to it by saving it as a profile.

Wi-Fi

- 2) Saving a frequently used AP as a profile makes it easier to enter the security key when connecting to an AP with that security type.
 - 3) If the AP does not support DHCP, you can connect to the AP using a static IP address.
- 2 Description of each field in the Wi-Fi profile.
- 1) Network Name: SSID (ID)
 - 2) Security Type: WEP and WPA/WPA2-PSK support.
 - 3) Security Key: Saves the security key.
 - 4) IP/DNS Setting: This allows you to set to Automatic or Static, depending on whether the AP supports DHCP.
For Static, enter the field value of the IP address and DNS server to use with the static IP address when connecting.

- 3 How to save the Wi-Fi profile
- 1) Select the Add Wi-Fi Network menu at the bottom of Wi-Fi Networks, then enter the SSID and Security Type.
 - 2) After connecting to an AP with this security type, the profile will be saved automatically.

3. How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your GT540 into the router.

You can find the MAC address in the following user interface:

Touch **Application > Settings > Wireless & networks > Wi-Fi settings**, and touch the **Menu** key then select **Advanced > MAC Address**.

Software update

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language → Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

DivX Mobile

ABOUT DIVX VIDEO: DivX[®] is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified[®] device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

DivX Certified to play DivX[®] video up to 320 x 240

Accessories

These accessories are available for use with the GT540.
(Items described below may be optional.)

Charger



Data cable

Connect your GT540 and PC.



Battery



User Guide

Learn more about your GT540.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GT540

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2006

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Doo Heung Lee / Director

30. Aug. 2010

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible causes	Possible Corrective Measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area. Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.

Message	Possible causes	Possible Corrective Measures
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted	Check for new restrictions.
Phone cannot be switched on	Prepaid Charge limit reached	Contact service provider or reset limit with PIN 2.
	On/Off key pressed long enough	Press the On/Off key down for at least two seconds.
	Battery is not charged	Keep charger attached for a longer time Clean the contacts.
Charging error	Battery contacts are dirty	Take out the battery and insert again.
	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective	If the charger does not warm up, replace it.
Number not permitted	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Number not permitted	The Fixed Dial Number function is on.	Check settings.

Troubleshooting

Message	Possible causes	Possible Corrective Measures
Impossible to receive/ send SMS & Picture	Memory Full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
SD Card not working	FAT 16 file system supported only	Check SD card file system via card reader Or format SD card using phone
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor. Make sure that the area around the proximity sensor is clean.
No Sound	Vibration or manner mode	Check the setting status of sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via WEB site.

“LG Service Center”

by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd.,

Bookalo, Thonburi, Bangkok 10600

LG Service Working day: Mon - Sun

07:00 - 19:00

Call center: 0-2878-5757



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : _____ บัตรรับประกันเลขที่ : _____
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): _____ เลขเครื่อง : _____
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : _____
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : _____
(อังกฤษ) : _____

วัน เดือน ปี เกิด : _____ เพศ : _____
(Date of Birth) (Gender)

ที่อยู่ : _____
(Address)

อาชีพ : _____ โทรศัพท์ : _____ E-mail : _____
(Occupation) (Telephone No.)

ชื่อจากร้าน : _____
(Dealer's Name)

ศูนย์บริการข้อมูล

Customer Information Center 0-2878-5757 or

1-800- **L G L G L G** โทรฟรี
5 4 5 4 5 4

www.lge.co.th

บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด
75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26 คลองตัน
คลองเตย กรุงเทพฯ 10110
ศูนย์บริการข้อมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

LG Electronic (Thailand) CO., Ltd
75/81 Richmond Bldg, 22nd FL, Sukumvit 26,
Klongton, Klongtoey Bangkok 10110
Customer Information Center
Tel. 0-2878-5757 Fax. 0-2466-0250

 **LG Electronics (Thailand)**

ใบอนุญาตเลขที่ ปณ.ต/2117 ปณจ. พระโขนง
ถ้าฝากส่งในประเทศไม่ต้องพนักตราไปรษณียากร



บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

72/127 ถนนสมเด็จพระเจ้าตากสิน
แขวงบুদ্ধโคโล เขตธนบุรี
กรุงเทพฯ 10600

เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น

(This warranty is valid only in Thailand)

- | | |
|--|---|
| 1) บัตรรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น | 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely. |
| 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบ หรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่อง คิววีซี บริษัทฯ ยินดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย | 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts. |

เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- | | |
|---|--|
| 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับการแต่งตั้ง | 1) If repair are not undertaken by LG Service Center or Authorize Service Center. |
| 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย | 2) Damage to accessory due to misuse. |
| 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ, ไฟไหม้, ฟ้าผ่า, ใช้กระแสไฟฟ้าผิดประเภทและอุบัติเหตุอื่น ๆ ที่มนุษย์ไม่สามารถควบคุมได้ | 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control. |

ศูนย์บริการคาลสิน (สำนักงานใหญ่) : เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงบुकคโล เขตธนบุรี กรุงเทพฯ 10600

โทร : 0-2878-5757

แฟกซ์ : 0-2466-0250



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : _____ บัตรรับประกันเลขที่ : _____
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน
นับจากวันที่ซื้อ
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): _____ เลขเครื่อง : _____
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : _____
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : _____
(อังกฤษ) : _____

วัน เดือน ปี เกิด : _____ เพศ : _____
(Date of Birth) (Gender)

ที่อยู่ : _____
(Address)

อาชีพ : _____ โทรศัพท์ : _____ E-mail : _____
(Occupation) (Telephone No.)

ชื่อจากร้าน : _____
(Dealer's Name)

ที่อยู่ร้าน : _____
(Dealer's Address)

ประทับตราร้านค้า

