



繁體中文  
简体中文  
ENGLISH



使用手冊  
用戶手冊  
User Guide

GT540



CE0168 Ⓢ

P/N : MFL67008337 (1.0) WR

[www.lg.com](http://www.lg.com)

<b>Wi-Fi (WLAN)</b>	此裝置適合用於所有歐洲國家。 在歐盟，WLAN 可在室內無限制地運作，但在法國、俄羅斯和烏克蘭則不能在室外運作。
<b>Wi-Fi (WLAN)</b>	此设备适于在所有欧洲国家使用。 在欧盟室内使用 WLAN 不受限制，但在法国、俄罗斯和乌克兰户外使用受限制。

Bluetooth QD ID B016480



# GT540 使用手冊

- 繁體中文

恭喜您購買了 LG 先進輕巧的 GT540 手機，它配合最新的數碼流動通訊科技而設計。

- 此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同，這並不會另行通知。
- 由於使用觸控螢幕鍵盤，我們不建議視障人士使用此手機。
- Copyright ©2010 LG Electronics, Inc. 已保留一切權利。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均為其各自擁有者的財產。
- Google™、Google 標誌、Google Maps™、Google Mail™、YouTube™、Google Talk™、Android™ 及 Android Market™ 均為 Google, Inc. 的商標。



# 目錄

安全及有效使用指南 .....	5	返回最近使用的應用程式 .....	21
重要通知 .....	9	屏幕鍵盤 .....	23
1. 手機記憶體 .....	9	使用鍵盤輸入文字 .....	23
2. 延長電池壽命 .....	9	<b>Google 帳戶設定 .....</b>	<b>24</b>
3. 安裝開放源碼的作業系統 .....	9	建立您的 Google 帳戶 .....	24
4. 使用解鎖圖案 .....	10	現有的 Google 帳戶, 登入您的 Google 帳戶 .....	24
5. 使用安全模式及硬性重設 使用安全模式 .....	10	<b>通話功能 .....</b>	<b>26</b>
6. 連接至 Wi-Fi 網絡 .....	11	撥打電話 .....	26
7. 使用 microSD 咭 .....	11	從通訊錄中撥打電話 .....	26
8. 開啟及切換應用程式 .....	12	接聽來電和拒接來電 .....	26
9. 透過 USB 連接手機至電腦 .....	12	通話設定 .....	26
10. 使用數據連接時請解鎖 屏幕 .....	13	<b>通訊錄 .....</b>	<b>28</b>
11. 在屏幕凍結時 .....	13	搜尋通訊錄 .....	28
<b>瞭解您的手機 .....</b>	<b>14</b>	新增聯絡人 .....	28
安裝智能咭 (SIM card) 及電池 .....	16	快速撥號 .....	28
為手機充電 .....	17	<b>訊息/電子郵件 .....</b>	<b>29</b>
安裝記憶咭 .....	17	訊息 .....	29
格式化記憶咭 (SD) .....	18	發送訊息 .....	29
<b>您的桌面 .....</b>	<b>19</b>	更改訊息設定 .....	29
觸控屏幕小秘訣 .....	19	設定您的電子郵件 .....	31
觸控校準 .....	19	使用新帳戶發送電子郵件 .....	31
鎖定及解鎖屏幕 .....	19	更改電子郵件帳戶設定 .....	31
使用您的桌面 .....	20	<b>相機 .....</b>	<b>32</b>
選擇您的預設桌面 .....	20	瞭解取景器 .....	32
在您的桌面上新增 widgets .....	20	使用對焦模式 .....	33
		快速拍照 .....	33
		拍攝相片後 .....	33

使用進階設定 .....	34	使用收音機 .....	44
檢視已儲存的相片 .....	35	搜尋電台 .....	44
<b>視像攝錄機 .....</b>	<b>36</b>	自動調頻 .....	44
瞭解取景器 .....	36	收聽電台 .....	44
拍攝快速影片 .....	37	<b>Google 應用程式.....</b>	<b>45</b>
拍攝影片後 .....	37	Google 地圖 .....	45
使用進階設定 .....	37	Android Market .....	45
觀看已儲存的影片 .....	38	Google Mail .....	45
<b>相片及影片 .....</b>	<b>39</b>	Google Talk .....	46
編輯您的相片 .....	39	<b>實用程式.....</b>	<b>47</b>
編輯您的影片 .....	39	設定鬧鐘 .....	47
修剪影片長度 .....	39	使用計算機 .....	47
選擇過渡樣式 .....	39	新增事件至日曆 .....	47
加入字幕 .....	40	語音記錄器 .....	48
加入編輯效果 .....	40	錄製聲音或語音 .....	48
擷取畫格 .....	40	Quickoffice .....	48
為影片加入配音 .....	40	<b>網絡功能.....</b>	<b>49</b>
<b>多媒體.....</b>	<b>41</b>	存取網絡 .....	49
媒體播放器 .....	41	變更網絡瀏覽器設定 .....	49
影片編輯器 .....	41	<b>設定 .....</b>	<b>50</b>
動畫情節 .....	41	無線控件 .....	50
音樂電影 .....	42	聲音與顯示 .....	50
自動剪輯 .....	42	安全與位置 .....	51
玩遊戲 .....	42	應用程式 .....	52
使用 USB 大容量儲存裝置			
傳送檔案 .....	43		
音樂 .....	43		
播放歌曲 .....	43		

# 目錄

數據同步 .....	53
私隱.....	53
SD 卡和手機儲存.....	53
搜尋.....	54
地區與文字 .....	54
協助工具 .....	54
語音合成 .....	54
日期和時間 .....	54
關於手機 .....	54
DivX VOD 註冊 .....	54
<b>Wi-Fi.....</b>	<b>55</b>
1. 如何設定 Wi-Fi .....	55
2. Wi-Fi 網絡設定檔支援..	55
3. 如何取得 MAC 位址 .....	56
<b>軟體更新.....</b>	<b>57</b>
手機軟體更新.....	57
DivX 手機.....	57
<b>配件.....</b>	<b>58</b>
<b>疑難排解.....</b>	<b>60</b>

# 安全及有效使用指南

請閱讀這些簡單的指引。如不遵循這些指引，則可能構成危險或違法。

## 射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。

本手機型號 GT540 之設計符合適用的無線電波暴露安全要求。這些要求乃基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 最大限制為平均 10 克組織 2 瓦/千克。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 瓦/千克 SAR 數據資訊。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 1.23 瓦/千克 (10 克)，攜帶於身上時則為 1.39 瓦/千克 (10 克)。

## 產品保護及維護

### 警告

只可使用經認可用於此特定手機型號的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保固失效，並可能引致危險。

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 使用手機時請遠離電視、收音機或個人電腦等電器產品。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手操作充電中的手機。這可能會引致觸電和造成手機嚴重損壞。

# 安全及有效使用指南

- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 請在通風良好的地方為手機充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，例如耳機。如非必要，請勿觸及天線。
- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

## 道路安全

請查閱您所在區域有關駕駛時使用手機的法律和法規。

- 駕駛時切勿使用手持手機。
- 請完全專注於駕駛。
- 如有免提聽筒套件，則請使用。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- 射頻能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車設有安全氣袋，切勿讓已安裝的無線設備或手提無線設備阻擋氣袋。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人員傷害。

## 有效地操作手機

### 電子裝置

- 所有手機均可能受訊號干擾，這可能會影響手機效能。

- 如您在外出時聆聽音樂，請將音量維持在合理水平，讓您依然能對周圍環境保持警覺。當您在馬路旁邊時，這一點尤其重要。

## 避免損害您的聽覺

如果長時間以較大音量收聽聲音，可能會對聽覺造成損害。因此，我們建議您不要在靠耳朵太近的地方開啟或關閉手機。我們亦建議將音樂及通話音量設定至合適水平。

**注意！** 來自耳機的過度噪音和壓力可導致聽力損失。

## 玻璃配件

您的手機的某些配件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃配件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃配件。

## 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸環境

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用手機。
- 請勿在使用手機及配件的同一車廂內運送或放置易燃氣體、液體或爆炸物。

## 在飛機上

無線裝置可導致飛機受到干擾。

- 請在登上任何飛機前關閉手機，或啟動手機的飛航模式。
- 未經機組人員批准，請勿在飛機上使用手機。

## 兒童

請將手機放在兒童無法接觸的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

# 安全及有效使用指南

## 緊急通話

某些流動網絡可能無法使用緊急通話。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

## 電池資訊及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
  - 請只使用 LG 電池及充電器。LG 充電器的設計可令電池發揮最長壽命。
  - 請勿拆解電池組或造成電池組短路。
  - 請保持電池組的金屬接點清潔。
  - 當電池不再提供可接受的效能，請更換電池。電池組在必須更換前可重新充電數百次。
  - 如果電池很久沒有使用，則需重新充電，以擴展其用量。
  - 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷的地方，此類場合可能會損害電池效能。
  - 若使用類型不當的電池，則有發生爆炸的危險。
  - 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿將電池當作家居廢物丟棄。
  - 如您必須更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
  - 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
  - 電池的實際壽命乃取決於網絡設定、產品設定、使用模式、電池及環境條件。

# 重要通知

在您將手機送往維修或致電服務人員前，請檢查您手機出現的問題有否在此部分描述。

## 1. 手機記憶體

當手機記憶體的可用空間少於10%，您的手機便不能再接收新訊息。您需要檢查您的手機記憶體，並刪除一些數據如應用程式或訊息，以騰出更多可用記憶。

### 要管理應用程式

1. 從桌面點按**應用程式**標籤，然後選擇**設定**>**應用程式**>**管理應用程式**。
2. 當所有應用程式出現後，捲動並選擇您想卸載的應用程式。
3. 點按解除安裝然後點按確定，以卸載該應用程式。

## 2. 延長電池壽命

您可關閉無須持續在背景運行的功能，便能延長兩次充電之間的電池壽命。您亦可監控應用程式及系統資源的電池電量消耗。

### 要延長您的電池壽命

- 關閉並非使用中的無線電通訊。不使用 Wi-Fi、藍牙或 GPS 時，請在設定中關閉這些應用程式。
- 調低屏幕亮度，並設定較短的屏幕超時。

- 不需使用時，關閉 Google Mail、日曆、通訊錄及其他應用程式的自動同步。
- 某些您下載的應用程式可能會損害您的電池壽命。您需要從手機卸載這些應用程式以及其所有的數據及設定。

### 要檢查電池充電量

1. 從桌面點按**應用程式**標籤，選擇**設定**>**關於手機**>**狀態**。
2. 電池的狀態（充電中、使用中）及電量（相對於完全充電的百分比）會在屏幕頂部顯示。


### 要監察及控制電池使用情況

1. 從桌面點按**應用程式**標籤，選擇**設定**>**關於手機**>**電池使用**。
2. 屏幕頂部會顯示電池使用時間：距離上一次連接至電源的時間，或（如已連接電源）上次使用電池電力的總時間。屏幕內容會列出使用電池電力的應用程式或服務，並根據耗用的電量由多至少排列。

## 3. 安裝開放源碼的作業系統

如果在手機上安裝開源作業系統，而不再使用製造商提供的作業系統，可能會導致您的手機出現故障。


# 重要通知

 **警告!** 如果您安裝及使用並非由製造商提供的作業系統，您的手機將不能再享受保固。

 **警告!** 要保護您的手機和個人資料，請只從受信任的來源下載應用程式，例如 Android Market。如某些應用程式並非正確地安裝至您的手機上，您的手機可能無法正常工作或出現嚴重錯誤。您需要從手機卸載這些應用程式以及其所有的數據及設定。

## 4. 使用解鎖圖案

設定解鎖圖案以保護您的手機。開啟一系列畫面，以指導您繪畫屏幕解鎖圖案。

 **警告!** 使用圖案鎖定的注意事項  
請記住您所設定的解鎖圖案，這是非常重要的。如果錯誤輸入圖案的次數達到 5 次，您將無法存取您的手機。當您嘗試輸入解鎖圖案 5 次仍不成功，您可點按忘記圖案選項，並使用您的 Google 帳戶資訊解鎖您的手機。

如您沒有 Google 帳戶，並非在手機上建立 Google 帳戶，或忘記帳戶資訊，您可使用**硬性重設**。

## 5. 使用安全模式及硬性重設 使用安全模式


**\* 要令手機從故障狀態中恢復**

1. 關閉並重啟您的手機。手機電源開啟後，在屏幕顯示 Android 記錄時按住主頁鍵。您的手機會一直啟動並進入桌面，左下角會顯示「安全模式」。
2. 選擇**設定>應用程式>管理應用程式**以選擇該應用程式，然後選擇解除安裝並點按確定，以卸載該應用程式。
3. 卸載應用程式後，關閉並重啟手機。

**\* 使用硬性重新設定（出廠設定）**

如無法還原至原來狀態，使用**硬性重新設定**以初始化您的手機。

當您的手機開啟並顯示鎖定屏幕時，同時按住音量向上 + 主頁 + 搜尋鍵並維持 5 秒。出現彈出畫面後，選擇確定以重新設定您的手機。請注意，在進行**硬性重新設定**後，您手機上的所有數據及應用程式會被刪除且無法還原。

 **警告!** 若進行硬性重新設定，所有用戶應用程式及用戶數據將被刪除。請記住先備份所有重要的數據，才進行**硬性重新設定**。

## 6. 連接至 Wi-Fi 網絡

要在您的手機上使用 Wi-Fi，您需要連接無線存取點，亦即「熱點」。一些存取點乃開放的存取點，您只需簡單連接便可。其他存取點乃隱藏或嵌入了其他保安功能，因此在連接前必須先設定您的手機。

要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

### 要開啟 Wi-Fi 並連接至 Wi-Fi 網絡

1. 從桌面點按**應用程式**標籤，並選擇**設定 > 無線控件 > Wi-Fi 設定**。
2. 點按 **Wi-Fi** 啟動，手機便會開始掃描可使用的 Wi-Fi 網絡。
  - 可使用的 Wi-Fi 網絡會以清單顯示。已加密的網絡旁邊會有一個鎖形圖示。
3. 點按一個網絡以開始連接。
  - 如該網絡為開放，手機會提示您點按**連接**，以確認您希望連接至該網絡。

- 如該網絡已加密，手機會提示您輸入密碼或其他憑證。（請向您的網絡管理員查詢詳情。）


4. 狀態列上的圖示會顯示 Wi-Fi 狀態。

## 7. 使用 microSD 咭

圖片、音樂及影片只能儲存到外置記憶體。

在使用內置相機前，您需要先將 micro SD 記憶咭插入手機。如沒有插入記憶咭，您將不能儲存已拍攝的相片及影片。

**備註：**應用程式只能儲存到手機的內置記憶體。

 **警告!** 手機開啟時，請勿插入或移除記憶咭。否則，您的記憶咭及手機可能會損壞，而記憶咭內儲存的數據亦可能毀損。要安全地移除記憶咭，請選擇**應用程式 > 設定 > SD 咭和手機儲存體 > 解除安裝 SD 咭**。

# 重要通知

## 8. 開啟及切換應用程式

您可輕易在 Android 上進行多重任務，即使您開啟另一應用程式，已開啟的應用程式依然會繼續運行。您無須在開啟另一應用程式前退出應用程式。您可使用及切換數個開啟中的應用程式。Android 會管理每一個應用程式，根據需要停止及啟動程式，確保閒置的應用程式不會耗用不必要的資源。

### 要停止使用中的應用程式

1. 從桌面點按**應用程式**標籤，然後選擇**設定>應用程式>管理應用程式**。
2. 捲動至該應用程式，點按**強制停止**以停止使用。

## 9. 透過 USB 連接手機至電腦

### 注意：正在安裝 LG PC suite 至您的電腦

要以 USB 數據線同步數據至您的電腦，您需在電腦上安裝 LG PC suite 程式。您可於 LG 網站下載此程式(<http://www.lg.com>)。瀏覽 LG 網站以獲取安裝和使用該程式的資訊。

## LG PC SUITE

LG PC Suite IV 是一種幫助您使用 USB 數據通訊線將手機連接到電腦的程式，從而讓您可在電腦上使用手機的功能。

### LG PC Suite IV 的主要功能

- 輕鬆快捷地建立、編輯和刪除手機資料
- 從電腦和手機同步數據（通訊錄、日曆/工作）
- 使用簡單的拖放動作，在電腦和手機之間傳輸多媒體檔案（相片、影片、音樂）
- 從手機傳送訊息到電腦
- 把手機用作數據機
- 在不會損失您的數據的情況下更新 S/W

### GT540 不支援：

- 透過藍芽來連接電腦
- LG Air Sync (Web Sync, R-Click)
- OSP（屏幕顯示電話）
- 日曆中的代辦事項
- 備忘錄
- 電子郵件
- Java 應用程式

安裝 PC Suite IV 後，便可在「說明」功能表中找到 PC Suite IV 用戶指南。

## 要使用 USB 裝置傳送檔案：

1. 安裝您的 microSD 記憶咭至您的手機。（有可能已插在您的手機中。）
2. 連接 USB 數據線前，請確保已於您的手機啟動僅限大容量儲存體模式。（在應用程式功能表，選擇設定 → SD 咭和手機儲存體，然後選擇僅限大容量儲存體核取方塊。）
3. 使用手機隨附的 USB 線，將手機連接至電腦的 USB 端口。您會收到 USB 已連接的通知。
4. 開啟通告欄，在程式進行欄點按「USB 已連接」。
5. 點按安裝以使手機內的 microSD 咭及電腦可互相傳送檔案。

當手機已連接為 USB 記憶體，您會收到通知。您手機上的 microSD 咭會作為磁碟安裝至您的電腦上。您現在便可將檔案複製至 microSD 咭。

### 提示！

要重新在手機上使用 microSD 咭，您需要開啟通告欄並點按「關閉 USB 儲存裝置」。

期間您無法在手機上存取 microSD 咭，因此您亦無法使用 microSD 咭的應用程式，例如相機、圖片集及音樂。

要令手機從電腦中斷連接，請小心地按照電腦的說明解除安裝 microSD 咭，並正確地中斷連接 USB 裝置，以免記憶咭上的資料流失。

1. 在您的電腦上解除安裝 microSD 咭。
2. 開啟通告欄，點按**關閉 USB 儲存體**。
3. 在開啟的對話方塊上點按**關閉**。

## 10. 使用數據連接時請解鎖屏幕


如在數據連接期間長時間不點按屏幕，您的屏幕會自行關掉。要重新開啟 LCD 屏幕，點按屏幕即可。

## 11. 在屏幕凍結時

如果手機不能回應用戶輸入或屏幕凍結：請取下電池，再次插入電池並開啟手機。


如果問題仍然存在，請聯絡服務中心。

# 瞭解您的手機

要開啟手機，請按住電源鍵  3 秒鐘。

要關閉手機，請按住電源鍵  3秒鐘並點按「關機」。



**提示!** 每當您點按應用程式以查看可使用的選項時，點按功能表鍵 。

**提示!** 如果您的手機在使用時發生錯誤或無法開啟，取下電池，並重新裝上電池，然後在 5 秒後開機。

## 音量鍵

- 在桌面上：控制鈴聲音量。
- 通話中：控制耳機音量。
- 播放曲目時：持續控制音量。

## 充電器、micro USB 線連接器

## 搜尋鍵

- 搜尋 Web 以及您手機中的內容。

## 相機鍵

- 按住該鍵可直接跳至相機功能表。

## 立體聲耳機連接器

## 相機鏡頭

## microSD 記憶卡插槽

## 充電器、micro USB 線連接器

## 電池蓋

## 電池

## 智能卡插槽

## 相機鍵


## 搜尋鍵

# 瞭解您的手機


## 安裝智能咭 (SIM card) 及電池

開始使用您的新手機前，您需要先設定手機。要插入智能咭及電池：


- 1 將手機背面朝上，移除電池蓋。要取下電池蓋，用拇指按壓電池蓋的任何一邊，然後將電池蓋向鏡頭下方滑動。

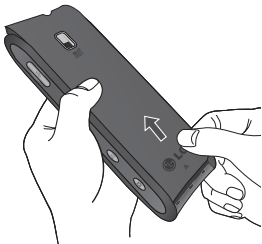

- 2 將智能咭滑入智能咭固定座中，確保智能咭的金屬接觸面朝下。

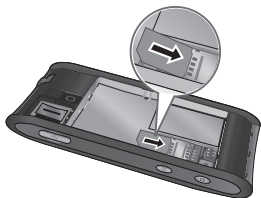

- 3 對準手機及電池的金屬接觸面插入電池，然後輕推電池，直至其完全卡進電池位置。

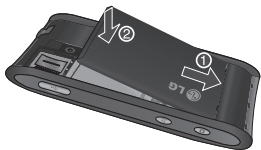

- 4 重新蓋上電池蓋，將其滑動直至聽到咔嗒聲。



**備註：**GT540 備有內置天線。請加倍小心，避免刮花或損壞此背面區域，否則會影響手機性能。

**注意！** 如您的手機在插入智能咭及開啟後沒有連接到網絡，請聯絡您的服務供應商，以取得存取點名稱的詳情。


## 安裝記憶咭

要儲存額外的多媒體檔案（例如使用內置相機拍攝的圖像），您必須安裝記憶咭至您的手機。


要安裝記憶咭：

- 1 插入或移除記憶咭前，請先關閉手機。取下電池蓋。

## 為手機充電



向後滑動 GT540 側邊的充電器連接器蓋。插入充電器，並將其連接至電源插座。您必須繼續為 GT540 充電，直至您看見 。

**備註：**第一次充電時必須將電池完全充電，以提高電池壽命。

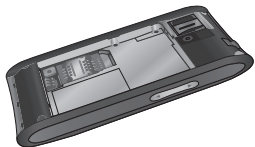


# 瞭解您的手機

- 2 開啟記憶咭槽保護蓋，將記憶咭插入咭槽，並確保金屬接觸面朝下。

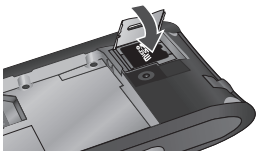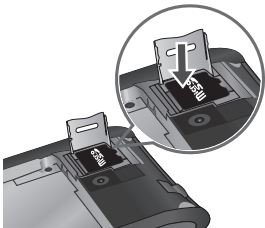

- 3 關上咭槽保護蓋。

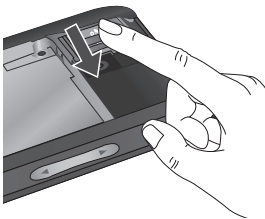

**警告！** 手機開啟時，請勿插入或移除記憶咭。否則，您的記憶咭及手機可能會損壞，而記憶咭內儲存的數據亦可能毀損。

## 格式化記憶咭 (SD)

您的記憶咭可能已格式化。如尚未格式化，您必須在使用前將其格式化。

**備註：** 格式化記憶咭時，咭內所有檔案會被刪除。

- 1 在桌面點按應用程式標籤，以開啟應用程式功能表。
- 2 捲動並點按設定。
- 3 捲動並點按「SD 卡和手機儲存裝置」>「解除安裝 SD 咭」。
- 4 點按「格式化SD卡」。
- 5 如您設定了圖案鎖定，輸入圖案鎖定然後選擇格式化。記憶咭將被格式化並且可使用。

**備註：** 如您的記憶咭包含其他內容，記憶咭格式化後的資料夾結構可能會改變，因為所有舊檔案經已刪除。

**提示！** 如已解除安裝記憶咭，您可循以下步驟進行格式化。點按**應用程式 > 設定 > SD 咭和手機儲存體 > 格式化 SD 咭**。

# 您的桌面

## 觸控屏幕小秘訣

- 要選擇一個項目，請點按圖示的正中心。
- 請勿過份用力按壓；只需輕力但確切地點按，觸控屏幕已能感應。
- 使用手指尖點按您需要的選項。請注意不要碰到其他按鍵。

## 觸控校準

要校準裝置的屏幕，您需要輕按屏幕上十字的交叉點，而該十字會在屏幕上游走。此過程確保您點按屏幕時，能夠啟動您點按的項目。

如果您的手機不能準確回應點按，請根據以下步驟重新校準。

- 1 點按**應用程式 > 設定 > 聲音及顯示**，並捲動至**觸控設定**。
- 2 點按**觸控校準**，並按照屏幕上的指示進行校準。
- 3 校準完成後，選擇**檢查校準**或**儲存而不檢查**，然後完成校準。

## 鎖定及解鎖屏幕

不使用 GT540 手機時，系統會返回鎖定屏幕。如果您有一段時間不使用手機，桌面或其他您正在瀏覽的畫面會被鎖定屏幕取代，然後會進入黑畫面，以節省電量。

要喚醒手機，按**發送、主頁**或**電源**鍵。鎖定屏幕會出現。要解鎖桌面，點按鎖定圖示並將手指向右拖動。您最後工作的畫面會開啟。

**備註：**如果您在設定圖案時正在執行任何應用程式，則這些應用程式可能仍在鎖定模式中執行。建議先結束所有程式，再進入鎖定模式，避免造成不必要的收費。（例如，通話、網絡獲取及數據通訊）

### 提示：設定解鎖圖案

您可以連接四個或以上的點以繪畫您專屬的解鎖圖案。如果您設定圖案，手機屏幕便會鎖定。要解除鎖定手機，請在屏幕上繪畫您所設定的圖案。

# 您的桌面

## 使用您的桌面

只需將手指左右滑動便可檢視。

您可使用 widgets 自訂每個控制板，它們是您喜愛的應用程式或資料夾的捷徑。

**備註：**視乎您的手機供應商而定，某些屏幕圖像可能有差異。

## 選擇您的預設桌面

用戶介面乃基於兩種類型的桌面：**LG 主頁**及 **Android 主頁**。

您可設定您喜愛的桌面類型作為預設值。

如您希望更改預設的桌面設定，選擇應用程式功能表中的主頁設定。

- 在您的 LG 桌面上，您可檢視屏幕下方的快速按鍵。快速按鍵提供簡易的存取方法，讓您一按即能使用您最常用的功能。



點按**手機**圖示開啟觸控撥號鍵盤，撥打電話。





點按**訊息**圖示，進入訊息功能表。您可在此建立新訊息。



點按屏幕底下的應用程式標籤。您便可檢視您安

裝的全部應用程式。點按以捲動檢視您的應用程式。

- 在您的 Android 桌面上，您可點按應用程式  圖示以開啟應用程式功能表。點按屏幕並向上或向下滑動，便能捲動並檢視您的應用程式。當您開啟並檢視應用程式功能表，您可以點按主頁圖示  以返回主頁。

**提示！**有用的應用程式已置入您的盒裝 microSD 咭內。若要開啟應用程式，只須於應用程式清單上點按其圖示即可。

**注意：**預載應用程式有可能會因應您手機的軟件及您的服務供應商而有所不同。

## 在您的桌面上新增 widgets

您可新增捷徑、widgets 或資料夾，以自訂您的桌面。將您喜愛的 widgets 添加到桌面上，您便可更方便地使用您的手機。

**備註：**LG 主頁及 Android 主頁均提供此功能。要新增所需的圖示至您的桌面：

- 1 在桌面上按**功能表**鍵開啟**選項**標籤，然後選擇**新增**。


- 2 在新增至主頁畫面功能表中，點按您要新增的項目類型。
- 3 例如，在清單中選擇資料夾並點按。
- 4 在清單中選擇具有手機號碼的通訊錄，然後點按。
- 5 您會在桌面上看到一個新的資料夾圖示。將其拖動至您想要的控制面板及位置，然後放開手指。

**提示：**要新增應用程式圖示至主頁，點按並按住您要新增至主頁的應用程式。

要從桌面移除應用程式圖示：

- 1 點按並按住該圖示。應用程式圖示會變為垃圾桶圖示 。
- 2 拖動並將應用程式圖示拉至垃圾桶圖示 。

## 返回最近使用的應用程式

- 1 點按並按住主頁鍵 。屏幕會彈出您最近使用過的應用程式的圖示。
- 2 點按圖示以開啟該應用程式，或者按**返回**鍵回到使用中的應用程式。

## 通告欄

通告欄顯示於屏幕的頂部。您可點按並向下滑動通告欄。或者，您可在桌面點按**功能表**鍵，並選擇**通知**。您可在此檢查 Wi-Fi 及藍牙狀態，及查看其他通知。

## 檢視狀態列

狀態列使用不同圖示顯示手機資訊，例如訊號強度、新訊息、電池壽命及啟動中的藍牙及數據連接。

下表解釋了狀態列中可能出現的圖示的含義。



### [狀態列]

圖示	說明
	沒有智能咭
	無訊號
	已連接至 Wi-Fi 網絡
	有線耳機
	來電轉接
	通話保留

# 您的桌面

圖示	說明
	揚聲器開啟
	電話話筒已靜音
	未接來電
	藍牙開啟
	藍牙已連接
	系統警告
	鬧鐘已設定
	新留言訊息
	飛航模式
	鈴聲靜音
	震動模式
	沒有 SD 卡
	電池已完全充電
	電池充電中
	數據輸入中
	數據輸出中

圖示	說明
	數據輸入及輸出
	手機已通過 USB 線纜連接至電腦
	數據下載
	數據上傳
	GPS 開啟
	從 GPS 接收位置數據
	2 更多通知未顯示
	正在通話
	正在同步數據
	下載完成
	新 Google Mail
	新 Google 語音訊息
	新訊息
	Song is playing
	Upcoming event

## 屏幕鍵盤

您也可以使用屏幕鍵盤輸入文字。當您需要輸入文字時，屏幕鍵盤會自動顯示在屏幕上。要想手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。



點按以刪除前一字母。



點按切換至數字符號鍵盤。



點按以在訊息欄新建一行。

## 使用鍵盤輸入文字



點按在大小寫間切換。點按以輸入一個大寫字母。您輸入的下一個字母將會是大寫字母。點按兩次開啟大寫鎖定。按鈕上彩色的圓圈將告知您大寫是否開啟（綠色）或只是開啟了一個字母的大寫輸入（橙色）。



點按以輸入一個空格。



點按開啟或關閉 XT9 預測模式。



點按檢視設定功能表。選擇編輯器設定，鍵盤配置，手寫設定，寫入語言，用戶字典和輸入法模式。



點按以隱藏或者顯示屏幕鍵盤。

# Google 帳戶設定

當您第一次在手機上開啟 Google 應用程式，您需要使用您現有的 Google 帳戶登入程式。如您沒有 Google 帳戶，手機會提示您建立帳戶。

## 建立您的 Google 帳戶

- 1 在桌面點按應用程式標籤，以開啟應用程式功能表。
- 2 點按 **Gmail**，然後點按 **Next>Create** 開始使用 Google Mail 設定精靈，以進行設定。
- 3 點按文字欄位以開啟觸控鍵盤，並輸入您的姓名及 Google 帳戶使用者名稱。輸入文字時，您可按鍵盤上的下一步移至下一個文字欄位。
- 4 完成輸入姓名及使用者名稱後，點按**下一頁** (Next)。您的手機會連接 Google 的伺服器，檢查使用者名稱是否可用。
- 5 輸入並重新輸入密碼。然後按照指示，輸入與帳戶有關的必填及可填資訊。請等待伺服器建立您的帳戶。

## 現有的 Google 帳戶, 登入您的 Google 帳戶

- 1 輸入您的電子郵件地址及密碼，然後點按登入 (Sign In)。等候直至登入完成。
- 2 登入後，您便可在手機上使用 Google Mail 及其他 Google 服務。
- 3 當您在手機上設定了 Google 帳戶，您的手機便會自動與您的 Google 帳戶在互聯網上同步。（視乎您的同步設定而定。）

登入後，您可使用 Google Mail、Google Calendar、Android Market 及 Google Map；從 Android Market 下載應用程式；備份您的設定至 Google 伺服器；以及在手機上享用其他 Google 服務。

### 重要通知！






- 某些應用程式，例如日曆，只能適用於您新增的首個 Google 帳戶。如果您打算在手機上使用多個 Google 帳戶，確保首先登入您希望使用這些應用程式的帳戶。當您登入時，您在網上的通訊錄、Gmail 訊息、日曆活動及這些應用程式和服務中的其他資訊將與您的手機同步。如


果您在設置時，沒有登入一個 Google 帳戶，則在您首次開始一個需要 Google 帳戶的應用程式時，您將被提示登入或新建一個 Google 帳戶，例如 Gmail 和 Android Market。

- 如果您希望使用備份功能在此手機上保存您在另一運行 Android OS 或更高版本的手機上的設定，您必須在設定時即登入您的 Google 帳戶。如果您等到設置完成之後，那麼您的設定將不會被保存。
- 如果您擁有一個您的公司或其他組織的企業帳戶，您的 IT 部會對如何登入這種帳戶給予特別指示。

# 通話功能

## 撥打電話



- 1 在主頁屏幕上，按發送鍵  和點按手機圖示以開啟鍵盤 。
- 2 在鍵盤上輸入號碼。要刪除一個數字，點按清除圖示 。
- 3 點按通話圖示  撥打電話。
- 4 要結束通話，則點按結束或按結束鍵 。

**提示！** 若要在撥打國際電話時輸入「+」，請點按並按住 。


## 從通訊錄中撥打電話

- 1 在桌面點按應用程式標籤，以開啟應用程式功能表。點按通訊錄以開啟您的通訊錄。
- 2 捲動聯絡人清單，或點按搜尋以輸入您想致電的聯絡人名稱的第一個字母。
- 3 在清單內點按您想致電的聯絡人，如該聯絡人有超過一個號碼，請選擇您要致電的號碼。

## 接聽來電和拒接來電

手機響鈴時，按發送  鍵接聽來電。您也可將應答圖示  向右拖動。

按結束  鍵拒絕接聽來電。

**提示！** 手機響起時，點按並將靜音圖示  向左滑動，以切換至靜音響鈴模式。

## 通話設定

您可設置手機的通話設定，例如來電轉接、來電等候及您的服務供應商提供的特別功能。

- 1 在桌面點按應用程式標籤，以開啟應用程式功能表。
- 2 捲動並點按設定。
- 3 點按通話設定，選擇您要調整的選項。

### < 固定撥號 >

選擇固定撥號號碼，以開啟並編輯一份可從您手機撥打的號碼清單。您需要使用 PIN 2 密碼，它可從您的網絡商取得。您的手機只能撥打固定撥號清單中包含的號碼。

## < 語音信箱 >

設定您的語言信箱號碼。

**語音信箱服務** - 允許您選擇您的服務供應商所提供的語音信箱服務或其他服務，例如 Google 語音信箱服務。

**語音信箱設定** - 如果您正在使用您的服務供應商所提供的語音信箱服務，此選項允許您輸入電話號碼用來接聽或者管理您的語音信箱。

## < 其他通話設定 >

**道歉訊息** - 當您拒接來電時，使用此功能您可以快速發送一條訊息。如果您需要在開會時回覆訊息，此功能非常有用。

**來電轉接** - 您可設置在通話中、不接聽來電等情況下轉駁通話的方式。您可選擇始終轉接、忙線時轉接、無回應時轉接或無網絡或關機時轉接。然後輸入要轉駁的號碼。

**備註**：轉駁通話需要收費。請聯絡網絡供應商瞭解詳情。

**通話限制** - 選擇您想要何時限制通話。輸入通話限制密碼。

請向您的網絡供應商了解此服務詳情。

**通話費用** - 檢視您的通話收費。(此服務視乎您的網絡而定；一些網絡供應商不支援此功能。)

**通話時間** - 檢視所有通話的持續時間，包括全部、已撥、已接來電及最後通話。

**GSM 通話設定** - 您可更改以下設定：

**呼叫者 ID**：選擇是否在撥出的電話中顯示您的電話號碼。

**來電等候**：如已啟動來電等候，當您在通話中接到來電，手機便會通知您。(這取決於您的網絡供應商。)

**選擇線路**：允許選擇線路。





# 通訊錄

您可在手機上新增通訊錄，並與您的 Google 帳戶或其他帳戶（須支援同步通訊錄）內的通訊錄同步。

## 搜尋通訊錄


- 1 在主頁點按應用程式標籤，以開啟應用程式功能表。點按通訊錄以開啟您的通訊錄。
- 2 點按**搜尋**，使用鍵盤輸入該聯絡人姓名。

## 新增聯絡人

- 1 在主頁屏幕上，按發送鍵  和點按手機圖示  以開啟鍵盤。新增通訊錄號碼，點按功能表鍵 ，點按新增至通訊錄，然後新建聯絡人。
- 2 如您希望為新聯絡人新增相片，點按 。您可使用已儲存的相片或拍攝新相片。
- 3 選擇通訊錄類型：手機、智能咭或您的 Google 帳戶。
- 4 點按一個文字欄位以開啟觸控鍵盤，然後輸入新聯絡人的名稱。
- 5 點按一個聯絡資訊類別，然後輸入聯絡人的詳情。
- 6 點按**完成**以儲存通訊錄。

## 快速撥號

您可以為常撥聯絡人指定一個快速撥號號碼。

- 1 在您的通訊錄列表中，點按功能表鍵  並選擇更多 >快速撥號。
- 2 您的語音信箱已設定為快速撥號 1。您無法變更此設定。點按任何其他號碼，為其指定快速撥號聯絡人。
- 3 您的通訊錄將開啟。透過點按相應的電話號碼，選擇要將其指定給此號碼的聯絡人。

**備註：**要想從該列表中移除快速撥號聯絡人，點按並按住指定聯絡人。出現彈出畫面後，點按刪除，然後選擇 **OK**。

# 訊息/電子郵件


## 訊息


GT540 將文字訊息和多媒體訊息結合在一個直觀易用的功能表中。


## 發送訊息

- 1 在主頁點按應用程式標籤，以開啟應用程式功能表。點按訊息，點按新訊息，以開啟一條空白訊息。
- 2 在**收件者**一欄中輸入手機號碼。當您輸入該電話號碼時，會顯示匹配的聯絡人。您可點按一個建議的收件者或繼續輸入電話號碼。您可新增數個聯絡人。

**備註：**如訊息有多個收件者，您需要為每一位收件者分別繳付文字訊息費用。

- 3 點按下方的訊息方塊以開始輸入訊息內容。
- 4 點按**功能表**  鍵以開啟選項功能表。您可選擇**新增主旨、附加、發送、插入表情圖示、取消、新增至通訊錄**等選項。
- 5 點按**發送**以發送訊息。
- 6 訊息畫面會開啟，訊息內容會顯示在您的名稱之下。屏幕會顯示回覆。當您檢視及發送更多訊息，便會建立一個訊息串連。

 **警告：**160 個字元的限制可能會視乎不同國家的文字訊息編碼方式而有所不同。

 **警告：**如您新增圖像、影片或音頻檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

**備註：**當您在通話期間收到短信，您將不會收到提示，但您可在指示列上看到。

## 更改訊息設定

GT540 已為您預先定義訊息設定，讓您可立即發送訊息。您可按偏好更改這些設定。

在桌面點按**訊息**圖示，然後點按**功能表**  鍵。點按**設定**。

### < 儲存設定 >

**刪除舊訊息** - 點按勾選，當達到文字訊息限制或多媒體訊息限制時，允許手機在一個線程中刪除舊訊息。不選保留所有訊息。

**文字訊息限制** - 點按設置每串連文字訊息的數量。

# 訊息/電子郵件

**多媒體訊息限制** - 點按設置每串連多媒體訊息的數量。

## < 文字訊息設定 >

**發送報告** - 啟動便可接收已發送訊息的確認。

**管理 SIM 卡訊息** - 管理儲存在您的智能咭上的訊息。

**有效期** - 選擇訊息儲存在訊息中心內的時限。

**文字訊息中心** - 輸入您的文字訊息中心詳情。

## < 多媒體訊息設定 >

**發送報告** - 選擇接收發送報告。

**允許發送報告** - 選擇允許發送投遞確認訊息。

**讀取報告** - 選擇以在發送每條訊息時要求接收讀取報告。

**允許發送報告** - 選擇允許發送閱讀確認訊息。

**自動擷取** - 啟動以自動重新接收訊息。

**漫遊時自動擷取** - 啟動以在漫遊時重新接收訊息。

**設定優先順序** - 選擇您的多媒體訊息的重要性程度。

**有效時期** - 選擇訊息儲存在訊息中心內的時限。

## 建立模式

**已限制**：在此模式下，多媒體訊息客戶端裝置只會建立及發送內容屬於核心多媒體訊息內容網域 (Core MM Content Domain) 的訊息。

**警告**：在此模式下，多媒體訊息客戶端裝置會引導用戶建立及發送內容屬於核心多媒體訊息內容網域的訊息。手機會以警告對話方塊提供引導。

**自由**：在此模式下，多媒體訊息客戶端允許客戶新增任何內容至訊息。

**接收廣告** - 允許接收廣告訊息。

## < 服務訊息 >

選擇接收或封鎖服務訊息。

## < 通知設定 >

啟動以在狀態列上顯示訊息通知。您亦可選擇一種鈴聲或啟動震動功能，以提示您收到新訊息。

## < 資訊服務設定 >

選擇接收、封鎖或檢視或編輯頻道，以接收資訊服務訊息（區域廣播訊息）。您亦可選擇資訊服務訊息語言。

## 設定您的電子郵件

使用 GT540 發送電子郵件，隨時隨地與重要人士保持聯繫。設定 POP3 或 IMAP4 電子郵件帳戶非常簡單方便。

- 1 在桌面點按**應用程式**標籤，然後點按**電子郵件**以開啟通訊錄。或者，您也可在桌面點按**電子郵件**以直接存取。
- 2 如未設定電子郵件帳戶，則會開啟電子郵件設定精靈。

**提示！** 如已設定電子郵件帳戶，則不會自動啟動精靈。

**提示！** 如 Wi-Fi 連接已啟動，則會使用 Wi-Fi 發送及接收電子郵件。

## 更改電子郵件帳戶設定

您可按偏好更改您的電子郵件設定。

- 1 點按桌面的**電子郵件**圖示，然後點按所需的帳戶。
- 2 點按**功能表**鍵以開啟選項功能表，然後點按**設定**。
- 3 您可調整一般帳戶、電郵等設定。

## 使用新帳戶發送電子郵件


- 1 在桌面點按**電子郵件**圖示，然後點按**編寫**以開啟新的空白訊息。
- 2 輸入收件者的電郵地址，然後編寫訊息。您亦可附加圖像、影片、音頻檔案及多種格式的文件檔案。
- 3 點按**發送**以發送電子郵件。

# 相機

## 瞭解取景器

**亮度** - 決定及控制進入圖像的光線量。您可滑動亮度指標：向「-」滑動使圖像較亮，或向「+」滑動使圖像較暗。

**變焦** - 拉近或拉遠鏡頭。您亦可使用側面的音量鍵進行變焦。

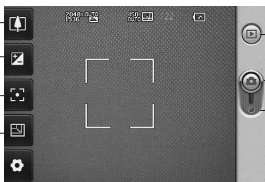

**圖片集** - 讓您在相機模式內存取您已儲存的相片。只需點按，您的圖片集即會顯示在屏幕上。

**拍攝照片**

**影片模式** - 將此圖示向下滑動，便能切換至影片模式。

**設定** - 點按此圖示 開啟設定功能表。請參閱**使用進階設定**。

**圖像大小** - 點按以設定所拍攝相片的大小（像素）。您可選擇以下的像素值：3 百萬 (2048x1536)、2 百萬 (1600x1200)、1 百萬 (1280x960)、VGA (640x480)、QVGA (320x240)。

**對焦** - 點按此圖示選擇選項功能表。請參閱**使用對焦模式**。

**備註：** 拍攝相片前，您必須先插入記憶咭。如沒有插入記憶咭，您將不能儲存已拍攝的相片。

**提示！** 您可關閉所有捷徑選項，獲得更清晰的取景器畫面。您只需點按一下取景器的正中心。要重新開啟選項，請再點按一下屏幕。

## 使用對焦模式

您可從以下選項選擇對焦模式；

**AF (自動對焦)** - 將相機設定為自動對焦。

**微距** - 微距模式讓您拍攝極近距離的物件。如果您正嘗試近距離拍攝但對焦方塊仍為紅色，請嘗試開啟微距模式。

**表情追蹤** - 如果您在拍照時設定人面追蹤，相機會自動偵測人臉並對焦。

**備註：**在表情追蹤模式下無法使用變焦。

**MF (手動對焦)** - 將相機設定為手動對焦。

## 快速拍照

- 1 按住手機右側的相機鍵。
- 2 橫向握住手機，將鏡頭對準拍攝的對象。
- 3 輕按拍攝按鈕，對焦方塊會顯示在取景器屏幕的中央。
- 4 定位手機，使您能在對焦方塊中看到拍照的對象。
- 5 當對焦方塊變為綠色，表示相機已成功對焦拍攝對象。
- 6 按下並按住拍攝按鈕。

## 拍攝相片後

您拍攝的相片會出現於屏幕上。

**分享** 點按便能以藍牙、Picasa、電子郵件、Gmail、訊息或 SNS 的方式共享相片。





**備註：**如在漫遊期間下載多媒體訊息，則可能需額外收費。

**設為** 點按可將圖像設為聯絡人圖示或者牆紙。

**重新命名** 點按以編輯所選擇相片的名稱。


**編輯** 點按以使用各種工具編輯圖像。

# 相機

-  點按以檢視已儲存的相片集。
-  點按以刪除圖像。
-  點按以立即拍攝新相片。您當前的相片會儲存在手機內。
-  點按以返回至前一個功能表。

## 使用進階設定

在取景器內點按  以開啟所有進階選項。

您可捲動轉輪以更改相機設定。選擇選項後，請點按返回鍵 。

**圖像品質** - 可選擇最細緻、細緻及標準。質素愈細緻，相片便愈清晰。然而，相片的大小亦會隨之增加，表示您可儲存在記憶體內的相片數量會減少。

**白平衡** - 選擇自動、白熱光、陽光、日光燈或陰天。


**拍攝模式** - 選擇標準、連環拍攝、人面優化、畫框拍攝、廣角、藝術照或一笑即拍。

**計時器** - 自動計時器讓您設定按下快門後的延遲拍攝時間。您可選擇關閉、3 秒、5 秒或 10 秒。此功能最適合自拍時使用。

**ISO** - ISO 等級決定相機感光器的敏感度。ISO 愈高，鏡頭對光線的敏感度越高。當您無法使用閃光燈時，它能使您在黑暗環境中拍攝得更清晰。您可選擇的 ISO 值為自動、100、200 及 400。

**場景模式** - 選擇自動、人像、風景、運動、夜間及黃昏。

**色彩效果** - 為下一張相片選擇色調。

選擇完成後，按返回鍵  關閉色調功能表。您現在便可拍攝相片。

**備註：**您可將彩色相片更改為黑白或底片色調，但您無法將黑白或底片色調的相片轉回彩色。

**顯示拍攝圖像** - 選擇開啟、保留及關閉。如您選擇開啟，剛拍攝的相片會在螢幕上顯示 1 秒，然後再次進入預覽模式。

**格線畫面** - 可選擇關閉、2x2 或 3x3。

**快門聲** - 有四種快門聲音可供選擇。

**智能影像定位** - 啟動以使用手機的定位服務。您可隨時隨地拍攝相片，並標籤相片拍攝的位置。如您將已標籤的相片上載至支援地理位置標記的網誌，您的相片便會在地圖上顯示。

**備註：**您需要開啟 GPS 才可使用此功能。

**隱藏圖示** - 選擇手動或自動隱藏相機設定圖示。


**眨眼偵測** - 選擇**開啟**便可在拍攝後檢查拍攝對象有否眨眼。

**重新設定** - 還原所有相機預設設定。

**提示！** 當您結束相機功能，除圖像大小及圖像質素外的所有設定將回到預設值。您需要重新設定所有非預設的設定，例如色調及 ISO。拍攝下一張相片前，請先檢查這些設定。

**提示！** 設定功能表乃疊於取景器上，因此當您更改圖像顏色或質素的設定，您會即時在設定功能表背後看見預覽圖像的變更。

## 檢視已儲存的相片


- 1 您可在相機模式內存取您已儲存的相片。只需點按 ，您的圖片集即會顯示在屏幕上。

# 視像攝錄機

## 瞭解取景器

**亮度** - 決定及控制進入圖像的光線量。您可滑動亮度指標：向「-」滑動使圖像較亮，或向「+」滑動使圖像較暗。

**變焦** - 拉近或拉遠鏡頭。您亦可使用側面的音量鍵進行變焦。開始錄製影片前，您可使用變焦功能。您無法在錄製途中調整焦距。

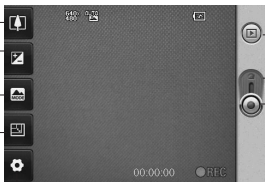

**圖片集** - 讓您在視像攝錄機模式內存取您已儲存的相片。只需點按，您的圖片集即會顯示在屏幕上。

**相機模式** - 將此圖示向上滑動，便能切換至相機模式。

**開始錄製**

**設定** - 點按此圖示開啟設定功能表。請參閱使用進階設定。

**影片大小** - 點按以設定所錄製影片的大小（像素）。您可選擇的影片圖像大小為 VGA (640x480)、QVGA (320x240) 或 QCIF (176x144)。

**場景模式** - 設定攝錄機以適應拍攝環境。您可選擇自動、人像、風景、運動、黃昏或夜間。

## 拍攝快速影片

- 1 按住手機右側的相機鍵。
- 2 然後切換至 。
- 3 視像攝錄機的取景器會在屏幕上顯示。
- 4 橫向握住手機，將鏡頭對準拍攝影片的對象。
- 5 按一下拍攝按鈕以開始攝錄。
- 6 REC 將顯示於取景器底部，同時計時器會顯示影片錄製的長度。
- 7 點按屏幕上的  以停止攝錄。

## 拍攝影片後

代表該影片的靜止圖像會在屏幕上出現。


**分享** 點按便能以藍牙、電子郵件、Gmail、YouTube 或訊息的方式共享影片。


**備註：**如在漫遊期間下載多媒體訊息，則可能需額外收費。


**播放** 點按以播放影片。


**重新命名** 點按以編輯所選擇影片的名稱。

**編輯** 點按以將影片設為牆紙。

 點按以啟動媒體播放器，檢視已儲存的影片。


 點按以刪除剛錄製的影片，並點按「是」確認。取景器會再次出現。

 點按以立即拍攝新影片。您當前的影片會儲存在手機內。

 點按以返回至前一個功能表。

## 使用進階設定

從取景器中點按  以開啟所有進階選項。

捲動轉輪以調整視像攝錄機設定。選擇選項後，請點按**返回** 。

**色彩效果** - 為影片選擇新色調。

**白平衡** - 白平衡確保您影片內的任何白色區域均為真實顏色。要使您的相機正確調整白平衡，您可能需要指定光線環境。您可選擇**自動、白熱光、陽光、日光燈或陰天**。

**長度** - 設定影片的最長錄製持續時間。您可選擇標準或多媒體訊息限制影片的大小，以透過多媒體訊息發送影片。

# 視像攝錄機

**提示！** 選擇多媒體訊息持續時間時，圖像質素會設定為 QCIF，讓您可錄製更長的影片。

**聲音錄製** - 選擇靜音以錄製無聲影片。


**隱藏圖示** - 選擇手動或自動隱藏視像攝錄機功能表內的圖示。

**錄製的影片** - 選擇開啟、保留及關閉。如您選擇**開啟**，剛拍攝的影片會在螢幕上顯示 1 秒，然後再次進入預覽模式。

**重新設定** - 還原所有視像攝錄機設定。

**提示！** 備註：您可將彩色影片更改為黑白或底片色調，但您無法將黑白或底片色調的相片轉回彩色。

## 觀看已儲存的影片

- 1 在取景器中點按 。
- 2 您的圖片集會顯示於螢幕上。
- 3 點按一下影片，將它帶到圖片集的前方。它會自動開始播放。

# 相片及影片

## 編輯您的相片

您可在相片上盡情發揮創意：改變相片、增加元素，或使它更生動有趣。

- 1 開啟您要編輯的相片，然後點按**功能表鍵** 。
- 2 點按編輯以改變您的相片



**旋轉及翻轉** - 旋轉或翻轉您的相片，增添相片趣味或更佳地展示相片。



**修剪** - 裁剪您的相片。選擇方形或圓形的裁剪區域，然後用手指在屏幕上劃出選擇區域。



**調校** - 使用自動色彩、亮度等調整相片。



**效果** - 點按以將效果選項套用於相片。



**畫框** - 新增畫框至相片。



**文字** - 新增文字至相片。



**剪貼畫** - 新增美工圖案至相片。



**畫板** - 在相片上自由繪畫。您可選擇四種不同粗幼的線條，然後選擇所需的顏色。



**印章** - 使用圖章裝飾相片。您可選擇不同的圖章，然後在相片上點按您想蓋上圖章的位置。



**重新調整大小** - 重新調整相片的大小。



儲存對相片作出的變更。






刪除對相片的編輯。



## 編輯您的影片

影片編輯功能適用於 MPEG-4 格式。

## 修剪影片長度

- 1 選擇 **編輯**，然後選擇 。
- 2 點按 ，然後設定新的開始及結束點。點按選擇，然後點按下一頁及儲存即可。
- 3 點按  回到圖片集並放棄更改。

## 選擇過渡樣式

- 1 選擇一個過渡樣式，然後點按  以預覽。
- 2 點按 ，然後拖動控制條以調整持續時間
- 3 點按**確定**以儲存過渡樣式。


# 相片及影片

點按**僅套用**以套用目前選擇的過渡樣式。選擇**全部套用**以套用目前選擇的過渡樣式至故事板內的所有影片檔案。

## 加入字幕



- 1 開啟您要編輯的影片。
- 2 選擇 **編輯**，然後選擇  以在影片中加入字幕。
- 3 點按 ，然後暫停播放以設定文字出現的開始點。
- 4 點按**開始**，然後選擇文字樣式。使用鍵盤輸入文字，然後選擇**完成**。
- 5 在屏幕上點按您希望文字出現的位置，然後點按選擇。
- 6 取代現有的檔案或另存為新檔案。
- 7 重複這些步驟以加入更多文字。

## 加入編輯效果

- 1 開啟您要編輯的影片。
- 2 選擇 **編輯**，然後選擇 。
- 3 選擇要新增至相片的效果。

## 擷取畫格

從影片截取圖像。

- 1 開啟您要編輯的影片。
- 2 選擇 **編輯**，然後選擇 。
- 3 播放影片，然後在播放期間點按  以截取您想要的畫面。
- 4 畫格會儲存為靜止圖像檔案至手機內。

## 為影片加入配音

- 1 開啟您要編輯的影片。
- 2 選擇 **編輯**，然後選擇 。
- 3 點按 ，會開啟**我的聲音**資料夾。選擇您想加入至影片的曲目。
- 4 影片原本的音軌將被刪除。
- 5 如音頻長度比影片短，選擇播放**一次**或**重複**。
- 6 取代現有的檔案或另存為新檔案。
- 7 您亦可錄製新檔案，點按  以附加現場配音。
- 8 點按**完成**以儲存目前配音。


# 多媒體


您可儲存多媒體檔案至記憶咭，輕易存取您所有的圖像及影片檔案。


點按應用程式標籤，然後選擇媒體匣。您可開啟目錄清單，裡面儲存了您所有的多媒體檔案。


**備註：**請確保您將記憶咭安裝到手機，以儲存相片和存取您全部的圖片。如沒有記憶咭，手機則無法顯示任何相片或影片。


共有以下六種目錄列。


**全部** ：顯示您所有的圖片及影片。

**我的最愛** ：如您點按並按住一張相片或一段影片，選項畫面便會出現，讓您將相片標籤為最愛。此最愛列會顯示您最愛的相片和影片。

**相機** ：顯示您所有的相片。

**圖像** ：顯示您所有的圖像。

**影片** ：顯示您所有的影片。

**標籤** ：您可一如最愛列般標籤相片。此列會顯示您已標籤的相片及影片。

## 媒體播放器

**媒體播放器**資料夾會顯示您已下載或錄製至手機的影片清單。

### 觀看影片

- 1 在應用程式標籤選擇**媒體播放器**。
- 2 點按**影片**並選擇要播放的影片。



**提示！** GT540 支援 DivX 影片播放，以播放更多種類的內容。

點按**音樂**並選擇要播放的音樂。





## 影片編輯器


- 1 點按**應用程式**標籤，然後選擇**影片編輯器** 。


## 動畫情節


- 1  **設定背景音樂** - 加入背景音樂至故事板或更改聲音。
- 2  **匯入檔案** - 加入媒體檔案至故事板。您可加入最多 32 個媒體檔案。

# 多媒體

- 3  **剪輯管理器** - 管理加入的媒體檔案。如沒有加入媒體檔案，則此按鈕不可用。
- 4  **預覽** - 預覽您所建立的影片檔案。
- 5  **儲存** - 儲存您所建立的影片檔案。
- 6  **新增文字** - 加入文字畫格至故事板。

要編輯影片，您必須先點按 。

 - 點按以選擇全部檔案，但最多為 32 個檔案。

 - 點按以取消選擇全部檔案。


25/32 - 顯示您已選擇的檔案數目。


 點按以跳至下一步驟。


## 音樂電影

- 1 左右翻動以查看各種樣式。在**音樂電影**中，您只可選擇相片。

 - 返回**影片編輯器**畫面。

 - 顯示樣式名稱和說明。

 - 預覽樣式。

 - 點按以選擇相片。


- 2 選擇相片後，點按  繼續下一步驟。

- 3 點按  選擇全部相片，然後點按 。

- 4 選擇音樂，然後將其設定為背景音樂。


- 5 使用鍵盤新增電影標題，然後儲存。


- 6 點按  以播放完整影片檔案。

- 7 點按  以儲存您建立的影片檔案。

## 自動剪輯

您可選擇三種樣式範本：人像、風景、動作對象。

- 1 點按 ，然後選擇影片。跳至下一步驟。

- 2 點按  以預覽影片檔案。

- 3 點按選擇以儲存檔案。

## 玩遊戲

- 1 GT540 提供多種遊戲。您可從 Market 下載更多遊戲。

- 2 點按啟動按鈕以啟動遊戲或應用程式。

**備註：**使用此服務下載非免費的遊戲或應用程式時可能需要額外收費。

**備註：**您只能透過網絡安裝 Java 遊戲及應用程式。

## 使用 USB 大容量儲存裝置傳送檔案

要使用 USB 裝置傳送檔案：

- 1 使用 USB 線連接 GT540 至電腦。
- 2 如果電腦上沒有安裝 LG Android 平台驅動程式，則需要手動更改設定。選擇**設定 > SD 咭和手機儲存體 > 僅啟僅限大容量儲存體**。
- 3 點按**開啟 USB 儲存體**。
- 4 您可於電腦檢視大容量儲存體的內容並傳送檔案。

**備註：**

- 您必須先安裝一個microSD 咭。如果不插入您的microSD 咭，您將無法使用 USB 大容量儲存。
- 如果您安裝 LG Android 平台驅動程式，您將會立即看到「開啟 USB 儲存體」的彈出畫面。
- 使用 USB 大容量儲存功能之後，若您想透過 LG PC Suite 同步您的手機和電腦，必須點按設定 > SD 咭和手機儲存體，然後點按勾選以關掉僅大容量儲存體模式。

## 音樂

GT540 具有內置音樂播放器，讓您播放所有您最愛的曲目。若要存取音樂播放器，請點按音樂。您可從此處存取多個資料夾：





**演出者** - 按特定演出者瀏覽音樂收藏。

**專輯** - 按特定專輯瀏覽音樂收藏。

**歌曲** - 包含儲存於手機內的全部歌曲。

**播放列表** - 包含由您建立的播放列表。

## 播放歌曲

- 1 在桌面點按**應用程式**標籤，然後選擇**音樂**。
- 2 點按**歌曲**。
- 3 選擇您要播放的歌曲。
- 4 點按  暫停播放歌曲。
- 5 點按  跳至下一首歌曲。
- 6 點按  返回歌曲的開首。點按兩次  返回上一首歌曲。

若要在聆聽音樂時調節音量，請按手機左側的向上及向下音量鍵。

# 多媒體

顯示播放、新增至播放清單、刪除和搜尋選項。

**備註：**音樂檔案的版權可能受國際公約和國內版權法保護。

因此，您或需要取得授權或許可，才可以複寫或複製音樂。

在某些國家，國內法律禁止私人複製受版權保護的材料。下載或複製檔案前，請先檢查有關國家關於使用這類材料的國內法律。

## 使用收音機

GT540 具有內置 FM 收音機，只要作出適當調校，就可以隨時隨地聆聽您最愛的電台。

## 搜尋電台

您可以使用手動或自動搜尋功能調校電台。搜尋到的電台隨即儲存到特定的頻道編號，這樣您就不用重新調頻。您最多可以將 48 個頻道儲存到手機。

## 自動調頻

- 1 在桌面點按**應用程式**標籤，然後選擇 **FM 收音機**。
- 2 點按**功能表**鍵。
- 3 點按**自動掃描**，然後點按**確定**。

**備註：**您亦可使用顯示在射頻旁的轉輪以手動方式調頻。

## 收聽電台

- 1 在桌面點按**應用程式**標籤，然後選擇 **FM 收音機**。
- 2 點按您要收聽的電台的頻道編號。

**提示！** 若要改善電台訊號接收，請伸展作為收音機天線的耳機電線。

### 警告

若連接的耳機並非為了接收電台訊號而特製，接收效果或會欠佳。

# Google 應用程式

- 1 首先，請建立一個 Google 帳戶。輸入您的使用者名稱和密碼。
- 2 登入後，您的 Google 帳戶中的通訊錄、電子郵件和日曆會自動與您的 GT540 同步。


## Google 地圖


檢查您現時的位置和交通，並取得前往目的地的駕駛方向。GT540 必須連接 Wi-Fi 或 3G/GPRS。


**備註：**Google 地圖並不覆蓋所有城市及國家。

點按功能表鍵  使用選項：


 **搜尋** - 輸入您要尋找的地點。

 **方向** - 此選項將讓您找出所輸入地點的路線。

 **圖層** - 您可以在交通、衛星或地形檢視之間轉換。點按緯度後，您將會看到您 Google 帳戶中通訊錄的位置。

 **我的位置** - 在地圖上指出您目前所處的位置。

 **加入 Google 定位** - 與您選擇的朋友及 Google 分享您的位置。

 **更多** - 清除地圖或尋找以星號標記的項目以及更多。

## Android Market

Android Market 設有多種有用的應用程式和遊戲供您下載。您從 Android Market 安裝的應用程式和遊戲可於 GT540 功能表中找到。

您可以通過點按下載標籤來檢視已下載的應用程式。

您可以檢視其他人對某個應用程式的評論，或者您可以發表您的評論。

- 1 選擇應用程式和遊戲中的一個類別，瀏覽其中內容。您將會看到最熱門付費程式、最熱門免費程式和最新程式。

## Google Mail

Google Mail 會在您首次設定手機時設置。視乎您的同步設定，手機的 Google Mail 會與您在網上的 Google 帳戶自動同步。收件匣對話清單是您預設的 Google Mail 檢視模式。


# Google 應用程式


## Google Talk


Google Talk 是 Google 的即時通訊程式，讓您與其他使用 Google Talk 的用戶通訊。


點按功能表鍵  并檢查可用選項。


 **所有朋友** - 加入所有朋友進行交流。

 **新增朋友** - 發送聊天邀請。

 **搜尋** - 搜尋包含您輸入的詞句的任何聊天內容。



 **登出** - 登出聊天。如果您設定了自動登入啟動，當您從主頁屏幕點按聊天圖示，您將會自動登入。


 **設定** - 調整指示或通告，等等。

 **更多** - 在這裡，您可以關閉全部聊天，檢查邀請和封鎖名單。


# 實用程式

## 設定鬧鐘

- 1 在主頁屏幕上，點按**應用程式**標籤並選擇**時鐘**。開啟**時鐘**應用程式，可以將日期和時間顯示在您的主頁屏幕上。
- 2 如果您想要新增一個鬧鐘，點按時鐘屏幕底部的鬧鐘圖示。點按一個現有鬧鐘，更改它的時間和其他屬性；或點按新增鬧鐘以新增一個新的鬧鐘。
- 3 點按 一下以啟動鬧鐘，設定您要鬧鐘響起的時間。設定時間後，GT540 會讓您知道距離鬧鐘響起還剩下多少時間。
- 4 設定重複、鈴聲或震動、並新增標籤為鬧鐘命名。點按完成。

**備註：**若要更改鬧鐘設定，在時鐘屏幕上，點按功能表鍵，然後點按設定。

## 使用計算機

- 1 在桌面點按**應用程式**標籤，然後選擇**計算機**。
- 2 點按數字鍵以輸入數字。
- 3 對於簡單計算，點按所需的運算符號（+、-、x 或 ÷），然後按 =。
- 4 對於複雜的計算，點按**功能表**鍵，然後點按**進階**控制板，再選擇 sin、cos、tan、log 等等。

## 新增事件至日曆

- 1 在桌面點按**應用程式**標籤，然後選擇**日曆**。
- 2 首先，您必須建立一個 Google 帳戶，才可使用日曆。
- 3 選擇您要新增事件的日期。
- 4 點按**功能表**鍵，然後點按**新事件**。
- 5 在主題欄位輸入事件名稱，並在往下的日期和時間欄位輸入事件開始和結束的日期和時間。
- 6 然後點按**地點**，輸入事件的地點。
- 7 若要新增備註至您的事件，點按**說明**，然後輸入詳情。




# 實用程式

- 8 若要設定重複，請設定重複頻率，如有需要亦可設定提醒。
- 9 點按**完成**，將事件儲存至日曆。日曆中所有已儲存事件的日子將以顏色方格標記。鬧鐘將於事件的開始時間響起，讓您安排得井井有條。

## 語音記錄器

使用語音記錄器錄製語音備忘錄或其他音頻檔案。


### 錄製聲音或語音

- 1 在桌面點按**應用程式**標籤，然後選擇**語音記錄器**。
- 2 點按  開始錄音。
- 3 點按  終止錄音。
- 4 點按功能表鍵  並選擇設定，將其設定為手機鈴聲或通知鈴聲。

**備註：**點按**轉至列表**存取您的專輯。您可聆聽已儲存的錄音。

## Quickoffice

Quickoffice 可以允許您讀取文件，但是編輯功能不可用。支持PDF、Text、Microsoft Word、Excel 和 PowerPoint 格式檔案。

- 1 在主頁屏幕上，點按**應用程式**標籤並選擇 **Quickoffice**。
- 2 若選擇最近的文件，就會顯示您最近檢視過的檔案。
- 3 選擇一個檔案，點按功能表鍵 ，檢視開啟、搜尋、屬性、更新、關於和幫助選項。不同的檔案類型會有額外的選項。

**PDF：**跳至頁面、符合頁面、符合寬度

**DOC/TXT：**搜尋

**XLS：**工作表 - 選擇摘要檢視或完整檢視。

# 網絡功能

## 存取網絡

- 1 在桌面點按**應用程式**標籤，然後選擇**瀏覽器**。
- 2 您會前往網站。

**備註：**連接到這些服務和下載內容需繳交額外費用。請向您的網絡供應商查詢數據費用。

## 變更網絡瀏覽器設定

點按**功能表**鍵 ，然後選擇**更多 > 設定**。

您可更改頁面格式（例如文字大小、文字編碼）、更改主頁、管理允許快取記憶、cookie 及安全設定等等。

# 設定


在桌面點按**應用程式**標籤，然後捲動，再點按**設定**。

## 無線控件

您可在這裡管理 Wi-Fi 和藍牙。此外，您亦可設定流動網絡和飛航模式。

**飛航模式** - 設定飛航模式後，所有無線連接均會停用。

**Wi-Fi** - 點按以勾選：啟動 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

**Wi-Fi 設定** - 設定網絡通知，或新增 Wi-Fi 網絡。從 Wi-Fi 設定屏幕訪問進階 Wi-Fi 設定屏幕。點按功能表鍵  並點按進階。

**藍芽** - 點按以勾選：啟動藍芽以連接至藍芽裝置。

**藍芽設定** - 設定裝置名稱及可找到的裝置，並掃描其他裝置。或者，檢查您以前配置的藍芽裝置列表，以及手機最近一次掃描藍芽裝置時所偵測到的藍芽裝置。

**VPN 設定** - 顯示您以前配置的虛擬專用網絡 (VPNs) 列表。允許您新增不同類型的 VPNs。

**流動網絡** - 啟動流動網絡。

**流動網絡設定** - 設定漫遊、網絡及 APN 選項。

## 聲音與顯示

### < 聲音設定 >

**靜音模式** - 允許您設定除了來自音樂和影片的音頻及您設定的鬧鐘外的所有聲音為靜音，包括電話和通知鈴聲。(您必須要通過媒體和鬧鐘自己的應用程式來使得它們靜音。)

**鈴聲音量** - 允許您設定來電和通知的音量。如果您沒有勾選電話和通知使用相同音量的選項，那麼您可以分別設定它們的音量。

**媒體音量** - 允許您設定音樂和影片的音量。

**手機鈴聲** - 允許您設定預設來電鈴聲。

**手機震動** - 允許您設定來電時手機震動，這與您的鈴聲或音量設定無關。

**通知鈴聲** - 允許您設定預設通知鈴聲。

**按鍵聲音** - 當您使用撥號鍵盤撥號時，允許您設定手機播放按鍵音。

**選擇操作音** - 當您點按按鈕、圖示或者其他對您的點按作出反應的屏幕上的項目時，允許您設定您的手機播放按鍵音。

**觸覺反饋** - 當您點按功能表鍵、返回鍵以及進行其他動作時，允許您設定手機輕微震動。

**SD 咭通知** - 當您接收 microSD 咭通知時，允許您設定手機發出聲音。

### < 觸控設定 >

**顯示方向** - 當您將手機橫向或直立放置時，允許您設定手機自動改變方向至風景或人像模式。

**動畫** - 當您在屏幕間導覽時，允許您設定動畫效果。

**亮度** - 調節屏幕亮度。

**螢幕逾時** - 允許您調整屏幕自動關閉前的延遲時間。為了使電池保持最好效能，請使用最短合宜超時。

### < 觸控設定 >

**觸控校準** - 重新設定畫面，方便您使用。

## 安全與位置

### < 我的位置 >

**使用無線網絡** - 如勾選使用無線網絡，手機會借助 Wi-Fi 和流動網絡確定您大概所處的位置。

**啟用 GPS 衛星** - 如勾選啟用 GPS 衛星，手機會確定您所處的位置，準確地找出您身處的街道。

### < 屏幕解鎖圖案 >

**設定解除鎖定圖案** - 設定解鎖圖案，加強手機保安。開啟一系列畫面，以指導您繪畫屏幕解鎖圖案。

您可以設定 PIN 或密碼，而不是解鎖圖案或者什麼都不設定。

**要求圖案** - 不勾選以終止要求輸入解鎖圖案來解鎖屏幕的設定。當您不勾選此選項時，您必須繪畫出當前解鎖圖案。

**使用可見圖案** - 當解鎖手機時，允許您設定解鎖圖案可見。

**使用圖示回應** - 繪製解鎖圖案時，允許您設定當您點按每一個點，手機會輕微震動。

# 設定

要使用圖案鎖定以鎖定螢幕

- 1 首次進行此步驟時，將會出現關於建立解鎖索圖的簡短教程。
- 2 系統會提示您繪畫和重繪您專屬的圖案。  
下一次當您開啟手機或喚醒螢幕時，系統會提示您繪製解鎖圖案，替螢幕解鎖。

## < 智能咭鎖定 >

**設定智能咭鎖定** - 設定 SIM 卡鎖定或更改 SIM 卡 PIN 碼。

## < 憑證儲存 >

**使用安全憑證** - 勾選後允許應用程式訪問您手機的安全證書、相關密碼以及其他憑證的加密儲存。您可以使用憑證儲存建立某些類型的 VPN 和 Wi-Fi 連接。如果您沒有為憑證儲存設定密碼，則該設定不可用。

**從 SD 卡安裝** - 允許您從 microSD 卡安裝加密證書。

**設定密碼** - 允許您為您的安全憑證儲存設定或更改密碼。您的密碼必須不少於8個字符。

**清除儲存** - 刪除所有安全證書、相關憑證，同時清除安全儲存自身的密碼。

## 應用程式

**未知的來源** - 除了 Android Market 的應用程式，允許安裝您從網站、電子郵件或其它地方得到的應用程式。

### 警告！

爲了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 Android Market。

**管理應用程式** - 管理並刪除已安裝的應用程式。

**正在運行的服務** - 允許您檢視及控制目前正在運行的服務和應用程式。該選項顯示每個正在運行的服務的進程及分別佔用的內存量。

**開發** - 設定應用程式開發選項，例如 **USB 偵錯**、**保持清醒**和**允許模擬位置**。

## 數據同步

### <一般同步設定>

**背景數據** - 允許應用程式在背景中同步數據，而不論您是否啟動它們。不勾選此設定會幫助節省電池電力，同時也會降低數據利用率。

**自動同步** - 允許應用程式在自己的平臺上同步，發送和接收數據。

### 帳戶管理 < Manage accounts >

您新增到此手機上的所有 Google 帳戶和其他帳戶的列表。

如果您點按該屏幕上的某一帳戶，則該帳戶的屏幕會開啟。

## 私隱

### <地點>

**與 Google 分享** - 當使用 Google 搜尋和其它 Google 服務時，允許您加入自己的位置。當您勾選此選項，系統會詢問您是否同意允許 Google 在提供這些服務時，使用您所處的位置。

## <個人資料>

**出廠數據重設** - 從內部手機儲存體刪除所有您的個人資料，包括您 Google 帳戶、其它帳戶、您的系統和應用程式數據和設定、以及任何您所下載的應用程式的訊息。重設手機並不會刪除任何您所下載的系統軟件更新，也不會刪除諸如音樂或相片等在您 microSD 上的檔案。如果您用此方法重設您的手機，您會被提示重新輸入您第一次啟動 Android 時所輸入的訊息。

## SD 卡和手機儲存

### <USB 連接模式>

**僅限大容量儲存體** - 如果您插入例如一張記憶咭，您的手機就可以當做一個大容量儲存體裝置來使用。您可以設定僅限大容量儲存體為一個 USB 連接模式下的預設定。

### <SD 卡>

檢查總空間和可用空間。點按取消掛接 SD 卡以安全移除。如有需要，可格式化 SD 卡。在您格式化一個 microSD 咭之前必須先解除安裝。

# 設定

## < 內部手機記憶體 >

檢查可用空間。操作系統、各組件、應用程式（包括您所下載的應用程式）及其永久和臨時數據所佔用的內部手機儲存量。

## 搜尋

您可使用搜尋設定以設置 Google 搜尋、快速搜尋方塊，以及您要搜尋的手機數據。

## 地區與文字

使用語言和鍵盤設定來選擇您手機文字的語言，包括您新增至字典的字詞，並配置您的屏幕鍵盤。

## 協助工具

您可使用可存取性設定，以設定任何已安裝到手機的可存取性外掛程式。

## 語音合成

您可使用文字轉語音設定設置 Android 文字轉語音合成器，以配合可善用這項功能的應用程式。

**備註：**如果您沒有安裝語音合成數據，那麼只有安裝語音數據項可設定。

## 日期和時間

使用日期和時間設定以設置您所希望的日期顯示方式的標準。您還可以使用這些設定來設置您自己的時間和時區，而不只是從流動網絡獲得當前時間。

## 關於手機

檢視法律資訊，檢查手機狀態和軟件版本。

## DivX VOD 註冊

產生 DivX VOD 註冊編碼。

若要註冊或尋求技術支援，請瀏覽 <http://vod.divx.com/>。

# Wi-Fi

使用 Wi-Fi，您可以在無線接入點 (AP) 範圍內高速訪問互聯網。

您可以使用 Wi-Fi 享用無線互聯網，而不會收取額外費用。

## 備註

- 如果您不在 Wi-Fi 範圍內，而選擇 3G 連接，則會收取額外費用。
- 如果在連接至 Wi-Fi 時，手機進入休眠模式，Wi-Fi 連接將會自動關閉。在此情況下，如果您的手機已存取 3G 數據，則可能會自動連接至 3G 網絡，並會收取額外費用。）
- GT540 支援 WEP 和 WPA/WPA2-PSK 安全體制。如果您的 Wi-Fi 服務供應商或網絡管理員設定了加密，以保障網絡安全，請在彈出視窗輸入加密鑰匙。如沒有設定加密，彈出視窗則不會出現。您可從您的 Wi-Fi 服務供應商或網絡管理員取得加密鑰匙。

## 1. 如何設定 Wi-Fi

- 1 點按**應用程式 > 設定 > 無線控件**，然後開啟 **Wi-Fi**。
- 2 存取點 (AP) 搜尋
  - 搜尋可連接的存取點。
- 3 存取點連接
  - 連接至存取點搜尋清單中所需的存取點。
  - 若存取點的安全類型為 WEP 或 WPA/WPA2-PSK，請輸入安全鑰匙。

## 2. Wi-Fi 網絡設定檔支援

- 1 Wi-Fi 設定檔支援（如何連接至經常使用的存取點或隱藏的存取點。）
  - 1) 若搜尋清單中沒有所需的存取點，您可透過將存取點儲存為設定檔與它連接。
  - 2) 若把常用存取點儲存為設定檔，連接至使用該個安全類型的存取點時，輸入安全鑰匙會更加方便。
  - 3) 若存取點不支援 DHCP，您可使用固定 IP 位址連接至存取點。

# Wi-Fi

## 2 Wi-Fi 設定檔中每個欄位的說明：

- 1) 網絡名稱：SSID (ID)
- 2) 安全類型：WEP 及 WPA/WPA2-PSK 支援。
- 3) 安全鑰匙：儲存安全鑰匙。
- 4) IP/DNS 設定：允許您設定為自動或固定，視乎存取點是否支援 DHCP 而定。  
若設定為固定，請輸入 IP 位址的欄位值以及連接時使用固定 IP 位址的 DNS 伺服器。


## 3 如何儲存 Wi-Fi 設定檔

- 1) 於 Wi-Fi 網絡下方選擇新增 Wi-Fi 網絡功能表，然後輸入 SSID 和安全類型。
- 2) 連接至使用這種安全類型的存取點後，設定檔將會自動儲存。

## 3. 如何取得 MAC 位址

若要在某些設有 MAC 過濾器  
的無線網絡建立連線，您需要  
把 GT540 手機的 MAC 位址輸  
入到路由器。

MAC 位址可於以下的使用者  
介面找到：

點按**應用程式 > 設定 > 無線  
控件 > Wi-Fi 設定**，點按功  
能表鍵 ，然後選擇**進階 >  
MAC 地址**。

# 軟體更新

## 手機軟體更新

### 從互聯網更新 LG 手機軟體

更多有關此功能的資訊，請瀏覽 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> → 選擇國家 → 支援。

有了這項功能，您無需親臨服務中心，就可透過互聯網將手機軟體更新為最新版本，十分方便。

手機軟體更新要求使用者密切注意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的指引和備註。請注意，更新期間若移除 USB 數據線或電池，有可能對手機造成嚴重損害。

## DivX 手機

關於 DIVX 影片：DivX® 數碼影片格式由 DivX, Inc 建立，是播放 DivX 影片的官方 DivX Certified 裝置。要取得詳情以及將檔案轉換為 DivX 影片的軟件工具，請瀏覽 [www.divx.com](http://www.divx.com)。

關於 DIVX VIDEO-ON-DEMAND：這個 DivX Certified® 裝置必須先註冊，才可播放 DivX Video-on-Demand (VOD) 內容。若要產生註冊編碼，請在裝置設定功能表找出 DivX VOD 部分。前往 [vod.divx.com](http://vod.divx.com)，以此編碼完成註冊過程，並瞭解更多有關 DivX VOD 的資訊。

**DivX Certified 最多可播放 320 x 240 的 DivX® 影片**

# 配件

本手機備有一系列分開發售的配件可供選用。您可根據您的通訊需要，選擇適用的配件。請向您當地的經銷商查詢供應情況。（下述配件並非必要。）

## 充電器



## 數據線

連接您的  
GT540 至電  
腦。



## 電池



## 使用手冊

瞭解有關  
GT540 的更多  
資訊。



## 立體聲耳機



## 備註：

- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保固可能失效。
- 配件可能會視乎不同地區而有所不同。

環境溫度

最高：+55°C（放電），+45°C（充電）

最低：-10°C

## Declaration of Conformity



LG Electronics

### Supplier Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GT540

Trade Name

LG

CE 0168 !

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1

EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1

EN 301 511 V9.0.2

EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

EN 300 328 V1.7.1

EN 60360:2001/EN62209-1:2006

EN 60950-1 : 2006

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Doo Heung Lee / Director

Issued Date

30. Aug. 2010

LG Electronics Logistics and Service B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

  
Signature of representative

# 疑難排解

本章會列出一些使用手機時可能遇上問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行解決。

訊息	可能起因	合理的修正措施
智能咭錯誤	手機內無智能咭，或不正確地插入智能咭。	確保已正確地插入智能咭。
無網絡連接/失去網絡	網絡範圍外 訊號弱 網絡商套用新服務	移近窗邊或移至空曠地方。檢查網絡供應商的覆蓋範圍。 檢查智能咭是否舊於 6 至 12 個月。 如果是這種情況，請前往網絡供應商的辦事處更換您的智能咭。
密碼不正確	要更改安全密碼，您需要再次輸入以確認新的安全密碼。 您所輸入的兩個密碼並不相符。	預設的手機密碼為 [0000]。如您忘記密碼，請聯絡您的服務供應商。
無法設定無任何應用程式	服務供應商不支援此功能，或需要註冊使用此功能	請聯絡您的服務供應商。

訊息	可能起因	合理的修正措施
無法撥打電話	撥號錯誤 新智能咭已插入 已達預付費用上限	新網絡未獲受權。 請檢查新的限制。  聯絡您的服務供應商，或使用 PIN 2 重設限額。
手機無法啟動	按下開啟/關閉鍵的時間太長。 電池並無充電 電池接觸面骯髒	按下開啟/關閉鍵至少兩秒。 替電池充電更長時間 清潔接觸面。 取出電池並重新插入。
充電錯誤	電池並無充電。 外界溫度太高或太低 接觸不良 無電壓 充電器故障 不正確的充電器；電池故障	替電池充電。 確保於正常溫度下為手機充電。 檢查充電器是否正常，以及是否正確地連接電源至手機。檢查電池接觸點，如有髒污則需清潔。 插入不同插座內。 如充電器沒有變暖，則需更換充電器。 請只使用原裝 LG 配件。 更換新電池。

訊息	可能起因	合理的修正措施
不允許撥打號碼	固定撥號號碼功能已開啟。	請檢查設定。
無法接收/發送文字訊息和圖片	記憶體已滿	刪除手機上的部份訊息
無法開啟檔案	不支援的檔案格式	檢查支援的檔案格式
SD 咭無法運作	只支援 FAT 16 檔案系統	透過讀咭器檢查 SD 咭檔案系統或使用手機將 SD 咭格式化
接收來電時，屏幕並無開啟。	距離感應器問題	如果您使用任何保護貼或保護套，檢查該等配件有否掩蓋距離感應器附近的範圍。確保距離感應器附近並無任何障礙物。
無聲音	震動或靜音模式	檢查聲音功能表的設定狀態，確保您並非使用震動或靜音模式。
掛線或凍結	軟件間歇性問題	取出電池並重新插入。 開啟手機。 透過 WEB 網站嘗試進行軟件更新。



# GT540 用户手册

## - 简体中文

恭喜您购买此款功能先进、外观小巧的 LG GT540 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

- 此手册中的部份内容可能会因手机程序之改良或不同网络商提供的服务而令实际情况有所不同,这并不会另行通知。
- 由于这款手机的键盘为触摸屏键盘，不推荐视障人士使用。
- 版权所有 ©2010 LG Electronics, Inc。保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Google 徽标、Google Maps™、Google Mail™、YouTube™、Google Talk™、Android™ 和 Android Market™ 是 Google, Inc 的商标。



# 目录

## 关于安全有效使用手机的准则.5

## 重要注意事项 ..... 10

1. 手机内存 ..... 10
2. 优化电池使用寿命 ..... 10
3. 安装开放源操作系统 ..... 10
4. 使用解锁图样 ..... 11
5. 使用安全模式和硬重置 ..... 11
6. 连接 Wi-Fi 网络 ..... 12
7. 使用 microSD 卡 ..... 12
8. 打开和切换应用程序 ..... 13
9. 通过 USB 将手机连接到计算机 ..... 13
10. 请使用数据连接解锁屏幕 ..... 14
11. 屏幕冻结时 ..... 14

## 开始了解您的手机 ..... 15

- 安装 SIM 卡和电池 ..... 17
- 充电 ..... 18
- 安装存储卡 ..... 18
- 格式化存储卡 ..... 19

## 主屏 ..... 20

- 触摸屏提示 ..... 20
- 触摸校准 ..... 20
- 锁定和解锁屏幕 ..... 20
- 使用主屏 ..... 21
- 选择默认主屏 ..... 21

- 将小工具添加到主屏 ..... 21
- 返回到最近使用的应用程序 ..... 22
- 屏上键盘 ..... 24
- 使用键盘并输入文本 ..... 24

## Google 帐户设置 ..... 25

- 创建 Google 帐户 ..... 25
- 登录 Google 帐户 ..... 25

## 通话 ..... 27

- 拨打电话 ..... 27
- 呼叫联系人 ..... 27
- 接听和拒接来电 ..... 27
- 调节音量 ..... 27
- 通话设置 ..... 27

## 联系人 ..... 29

- 正在搜索联系人 ..... 29
- 添加新联系人 ..... 29
- 快速拨号 ..... 29

## 信息/电子邮件 ..... 30

- 信息 ..... 30
- 发送信息 ..... 30
- 更改信息设置 ..... 30
- 设置电子邮件 ..... 32
- 使用新帐户发送电子邮件 ..... 32
- 更改电子邮件帐户的设置 ..... 32

<b>相机</b> .....	<b>33</b>	音乐电影 .....	43
了解取景器 .....	33	自动剪切 .....	43
使用对焦模式 .....	34	玩游戏.....	44
快速拍照 .....	34	使用 USB 批量存储设备传	
拍照后.....	34	输文件.....	44
使用高级设置.....	34	音乐.....	44
查看保存的照片 .....	36	播放歌曲 .....	44
<b>摄像机</b> .....	<b>37</b>	使用收音机 .....	45
了解取景器 .....	37	搜索电台 .....	45
快速摄像 .....	38	自动微调 .....	45
拍摄视频后 .....	38	收听收音机.....	45
使用高级设置.....	38	<b>Google 应用程序</b> .....	<b>46</b>
观看保存的视频.....	39	Google Maps.....	46
<b>照片和视频</b> .....	<b>40</b>	Android Market .....	46
编辑照片 .....	40	Google Mail .....	46
编辑视频 .....	40	Google Talk .....	47
剪辑视频长度 .....	40	<b>实用工具</b> .....	<b>48</b>
选择转换样式.....	40	设置闹钟 .....	48
添加子标题 .....	41	使用计算器 .....	48
添加编辑效果.....	41	将事件添加到日历中 .....	48
抓取帧图像 .....	41	语音备忘录 .....	49
向视频添加配音 .....	41	录制声音或语音.....	49
<b>多媒体</b> .....	<b>42</b>	Quickoffice .....	49
媒体播放器 .....	42	<b>网络</b> .....	<b>50</b>
视频编辑器 .....	42	访问网页 .....	50
故事板.....	43	更改网络浏览器设置 .....	50

# 目录

<b>设置</b> .....	<b>51</b>
无线控件 .....	51
声音和显示 .....	51
安全和位置 .....	52
应用程序 .....	53
数据同步 .....	53
隐私.....	54
存储卡和手机存储空间....	54
搜索.....	54
区域设置和文本 .....	54
可访问性 .....	54
语音合成 .....	54
日期和时间 .....	55
关于手机 .....	55
DivX VOD 注册 .....	55
<b>Wi-Fi</b> .....	<b>56</b>
1. 如何设置 Wi-Fi .....	56
2. Wi-Fi 网络模式支持 .....	56
3. 如何获取 MAC 地址 ....	57
<b>软件更新</b> .....	<b>58</b>
手机软件更新.....	58
DivX 移动 .....	58
<b>配件</b> .....	<b>59</b>
<b>故障排除</b> .....	<b>61</b>

# 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

## 暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR)信息。

此款 GT540 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10 g 重的人体组织吸收的能量平均值不超过 2W/kg。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为：每 1 克重的人体组织吸收的能量平均值不超过 1.6W/kg，此 SAR 数据适用于各个国家/地区的居民。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.23 W/kg (10 克)，戴在身体上时，其值为 1.39 W/Kg (10 克)。

## 产品保养和维护

### 警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。

# 关于安全有效使用手机的准则

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能变热并引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 在完全通风的位置为手机充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

## 有效的手机操作

### 电子设备

- 所有手机都可能受到干扰，这种干扰会对性能造成影响。
- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

## 行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。

- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

## 防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

**注意：** 耳机声音和压力过度可能导致听觉受损。

## 玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务供应商处更换玻璃。

## 爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

# 关于安全有效使用手机的准则

## 在飞机上

无线设备可能对飞机造成干扰。

- 飞机飞行过程中，请关闭手机或激活飞行模式。
- 未经机务人员允许，不得在地面上使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。

- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要在此类浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。

- 请按制造商的说明处置用过的电池。 如果可能，请循环使用电池。 不要将电池当作家用废物丢弃。
- 如果必须更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

# 重要注意事项

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

## 1. 手机内存

当手机内存的可用空间小于10%时，您的手机无法收到新信息。您需要检查手机内存并删除一些数据（如应用程序或信息），以有更多内存可用。

### 管理应用程序

1. 在主屏上，点触“应用程序”选项卡，然后选择**设置 > 应用程序 > 管理应用程序**。
2. 当所有应用程序显示时，请滚动并选择要卸载的应用程序。
3. 轻触**卸载**，然后点触“确定”以卸载所需应用程序。

## 2. 优化电池使用寿命

您可以通过禁用无需在后台持续运行的功能来延长电池的使用寿命。您也可以监控应用程序和系统资源如何节省电池电量。

### 延长电池使用寿命

- 关闭未使用的无线电通讯。如果不使用 Wi-Fi、蓝牙或 GPS，请使用“设置应用程序”将其关闭。

- 调低屏幕亮度，设置较短的屏幕超时。
- 如果不需要，请关闭 Google Mail、日历或电话本以及其他应用程序的自动同步。
- 您下载的一些应用程序可能会耗用电池电量。您需要从手机中卸载那些应用程序及其所有数据和设置。

### 检查电池电量水平

1. 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 关于手机 > 状态**。
2. 电池状态（充电、放电）和电量（完全充电的百分比）显示在屏幕顶部。

### 监视并控制使用电池的项目

1. 在主屏上，点触**应用程序**选项卡，然后选择“设置”>“关于手机”>“电池使用情况”。
2. 屏幕顶部显示电池使用时间。自上次连接到电源的时间，或者连接到电源后在电池电源上运行的时间。屏幕上列出了使用电池电源的应用程序或服务，从最大量到最小量。

## 3. 安装开放源操作系统

如果在手机上安装开放源操作系统，而不使用制造商提供的操作系统，则可能导致手机无法正常工作。

### **警告！**

如果安装并使用非制造商提供的操作系统，您的手机不再享受保修。

### **警告！**

要保护手机和个人数据，请仅从信任源（如 Android Market）下载应用程序。如果手机上的一些应用程序未正确安装，您的手机可能无法正常工作，甚至发生严重错误。您需要从手机中卸载那些应用程序及其所有数据和设置。

## 4. 使用解锁图样

设置保护手机的解锁图样。打开一组屏幕，它们可指导您绘制屏幕解锁图样。

### **警告！**

**使用图样锁定时应采取预防措施。**

请务必记住您设置的解锁图样。如果有 5 次使用不正确的图样，您将无法访问您的手机。尝试解锁图样 5 次后，您可以点触“忘记图样”选项，使用 Google 帐户解锁手机。

如果没有 Google 帐户、没有在手机上创建 Google 帐户或者忘记了帐户，您可以使用**硬重置**。

## 5. 使用安全模式和硬重置

### 使用安全模式

#### \* 从手机的故障状态恢复

1. 关闭手机并重新启动。手机重新开始时，请在 Android 徽标显示时按住主屏键。您的手机将完全启动到主屏幕，并在左下角显示“安全模式”。
2. 选择**设置 > 应用程序 > 管理应用程序**，选择应用程序，然后选择**卸载**图标。
3. 卸载应用程序后，请关闭然后重新启动手机。

#### \* 使用硬重置（出厂重置）

如果未恢复到原始条件，请使用**硬重置**初始化手机。当手机开机并且锁定屏幕显示时，请同时按住音量调高 + 主屏 + 搜索键 5 秒钟。当弹出屏幕显示时，请选择“确定”以重置手机。请注意，执行**硬重置**后，手机上的所有数据和应用程序将被清除，且无法恢复。

# 重要注意事项

## 警告！

如果执行硬重置，所有用户应用程序和用户数据将被删除。在执行硬重置之前，请记得备份任何重要数据。

## 6. 连接 Wi-Fi 网络

要在手机上使用 Wi-Fi，您可以访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或实施其他安全功能，因此您必须配置手机才能进行连接。

禁用不使用的 Wi-Fi，以延长电池使用寿命。

### 打开 Wi-Fi 并连接 Wi-Fi 网络

1. 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 无线控件 > Wi-Fi 设置**。
2. 点触 **Wi-Fi** 将其打开，开始扫描可用的 Wi-Fi 网络。
  - 将显示可用的 Wi-Fi 网络列表。锁图标表示受到安全保护的网路。
3. 点触某个网络进行连接。
  - 如果网络已打开，您会收到提示，要求您点触**连接**确认连接到该网络。

- 如果网络受到安全保护，您会收到提示，要求输入密码或其他凭据。（请咨询网络管理员获取详细信息。）

4. 状态栏显示了可指明 Wi-Fi 状态的图标。

## 7. 使用 microSD 卡

图片以及音乐和视频文件只能保存到外部存储器。

在使用内置相机之前，您需要先在手机中插入 micro SD 存储卡。

不插入存储卡，您将无法保存所拍摄的照片和视频。

**注意：**应用程序只能保存到手机的内部存储器。

## 警告！

请勿在手机开机时插入或取出存储卡。否则，可能损坏存储卡以及手机，并且存储卡上存储的数据也可能会损坏。要安全地取出存储卡，请选择“应用程序”>“设置”>“SD 卡和手机存储空间”>“取消安装 SD 卡”。

## 8. 打开和切换应用程序

Android 可轻松地运行多任务，因为即使您打开另一应用程序，当前打开的应用程序也会保持运行状态。打开其他应用程序之前无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

### 停止使用的应用程序

1. 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 应用程序 > 管理应用程序**。
2. 滚动到所需应用程序，然后点触**强制停止**以停止使用该应用程序。

## 9. 通过 USB 将手机连接到计算机

### 备注：在 PC 上安装 LG PC 套件

要通过 USB 数据线同步手机与 PC，您需要在 PC 上安装 LG PC 套件程序。您可以从 LG 网站 (<http://www.lg.com>) 下载此程序。有关安装和使用程序的更多信息，请访问 LG 网站。

## LG PC SUITE

LG PC Suite IV 是一种可帮助您使用 USB 数据通信电缆将手机连接到 PC，以便在 PC 上使用手机的功能的程序。

### LG PC Suite IV 的主要功能

- 方便地创建、编辑和删除手机数据
- 从 PC 或手机同步数据（电话本、日历/任务）
- 使用简单的拖放操作在 PC 和手机之间方便地传输多媒体文件（照片、视频和音乐）
- 将信息从手机传输到 PC
- 将手机用作调制解调器
- 软件更新而不丢失任何数据

### GT540 不支持：

- 通过蓝牙连接 PC
- LG Air Sync（Web Sync、右键单击）
- OSP (On Screen Phone)
- 日历中的待办事项
- 备忘录
- 电子邮件
- Java 应用程序

安装 PC Suite IV 后，“帮助”菜单中将提供 PC Suite IV 用户指南。

# 重要注意事项

## 使用 USB 设备传输文件：

1. 在手机上安装 microSD 存储卡。（存储卡可能已插入手机。）
2. 连接 USB 数据线之前，请确保手机已启用仅批量存储模式。（在应用程序菜单上选择设置 → SD 卡和手机内存，然后选择仅批量存储复选框。）
3. 使用手机附带的 USB 电缆将手机连接到计算机上的 USB 端口。您将收到一则通知，告知您 USB 已连接。
4. 打开通知抽屉，并点触“USB 已连接”。
5. 点触**安装**以确认在手机的 microSD 卡和计算机之间传输文件。

当手机作为 USB 存储器进行连接时，您会收到一则通知。您手机的 microSD 卡已安装为计算机的驱动器。现在，您可以将文件复制到 microSD 卡，也可以从 microSD 卡中复制文件。

### 提示！

要再次在手机上使用 microSD 卡，您需要打开通知抽屉，然后点触“关闭 USB 存储”。在此期间，无法从手机访问

microSD 卡，因此也不能使用依赖 microSD 卡的应用程序（如相机、图片库和音乐）。要断开手机与计算机的连接，请仔细按照计算机的说明卸下 microSD 卡，并正确地断开 USB 设备的连接，从而避免丢失卡上的信息。

1. 卸下计算机上的 microSD 卡。
2. 打开通知抽屉，并点触**关闭 USB 存储**。
3. 在打开的对话框中点触**关闭**。

## 10. 请使用数据连接解锁屏幕

使用数据连接时，如果您一段时间内未触摸屏幕，则屏幕将变黑。要打开 LCD 屏幕，点触即可。

## 11. 屏幕冻结时

如果手机对用户输入无响应或屏幕冻结：请取出电池、重新插入并开机。

如果这仍不起作用，请联系服务中心。

# 开始了解您的手机

要将手机开机，请按住电源键 3 秒。

要将手机关闭，请按住电源键  3 秒，然后点触关机。



**提示：**当您点触应用程序以检查可用选项时，请轻触菜单 。

**提示：**如果手机在使用时出错或无法开机，请取出电池、重新装入并在 5 秒后开机。

# 开始了解您的手机

## 音量键

- 在主屏上：控制铃声音量。
- 在通话过程中：控制听筒音量。
- 播放曲目时：连续控制音量。

充电器，微 USB 数据线接口

## 搜索键

- 在手机中搜索网络和内容。

## 相机键

- 长按该键直接转到相机菜单。

立体声耳机连接器

相机镜头

microSD 存储卡插槽

充电器，微 USB 数据线接口

搜索键

相机键

后盖

电池

SIM 卡插槽


## 安装 SIM 卡和电池

在开始浏览新手机之前，您要先进行设置。插入 SIM 卡和电池：


- 1 将手机背面朝上，卸下后盖。要卸下后盖，请用拇指用力按后盖两侧的任意一侧，然后滑动相机镜头下面的滑盖。



- 2 将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。

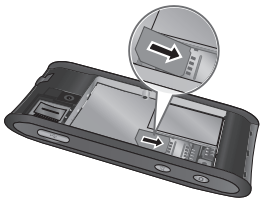


- 3 对齐手机和电池上的金色接触区域以插入电池，然后轻按电池，直至电池卡入到位。

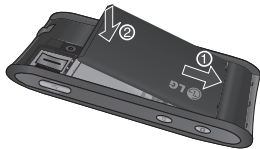

# 开始了解您的手机

- 4 盖上手机的后盖，并向下滑动后盖直至门锁卡入到位。

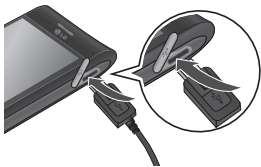

**备注：**GT540 有内置天线。请注意不要刮伤或损坏此背面区域，否则会导致性能损失。

## 安装存储卡

要使用内置相机存储其他多媒体文件（如拍摄的照片），您必须在手机中插入存储卡。

插入存储卡：


- 1 关闭手机，然后插入或取出存储卡。卸下后盖。

**注意！** 如果当您插入 SIM 卡打开手机时您的手机未连接到网络，请与服务运营商联系以获得其接入点名称详细信息。



## 充电

滑开 GT540 侧面的充电器连接器盖。插入充电器并插入电流插座。必须为 GT540 充电，直至看到 。


**备注：**第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。

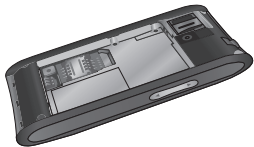

- 2 打开插槽保护，并将存储卡插入到插槽中。确保金色接触区域面朝下。

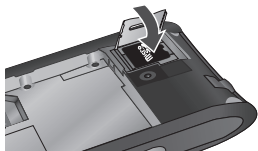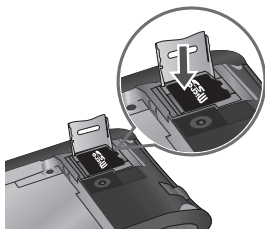

3 关闭插槽保护。

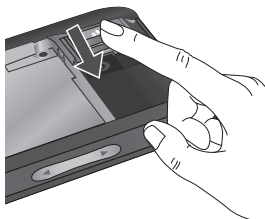

### **警告！**

请勿在手机开机时插入或取出存储卡。否则，可能损坏存储卡以及手机，并且存储卡上存储的数据也可能会损坏。

## 格式化存储卡

如果已格式化存储卡，您可以开始使用。如果没有，您必须先对其进行格式化才能使用。

**注意：**格式化卡时，卡上的所有文件将被删除。

- 1 在主屏上点触**应用程序**选项卡以打开应用程序菜单。
- 2 滚动并点触**设置**。
- 3 滚动并点触“存储卡和手机存储”>“取消安装存储卡”。
- 4 点触“格式化 SD 卡”。
- 5 如果设置了图样锁定，请输入图样锁定，然后选择**格式化**。存储卡完成格式化，现在，您可以使用了。

**备注：**如果存储卡中包含内容，由于格式化后将删除所有文件，所以文件夹结构会有所不同。

**提示！**如果已安装存储卡，您可以使用下列步骤格式化。点触“应用程序”>“设置”>“存储卡和手机存储”>“取消安装”，然后选择“格式化 SD 卡”。

# 主屏

## 触摸屏提示

- 要选择项目，请点触图标中心位置。
- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。

## 触摸校准

校准设备屏幕是指：当十字在屏幕中移动时，轻触十字的中心位置。此过程确保您轻触屏幕时，被点触的项被激活。如果手机不能正确响应屏幕轻触操作，请执行以下步骤重新校准。

1. 轻触**应用程序 > 设置 > 声音和显示**，然后滚动到**触摸设置**。
2. 点触**触摸校准**，然后按照屏幕上说明执行操作。
3. 校准完成后，从**检查校准和保存而不检查**中进行选择，然后完成校准。

## 锁定和解锁屏幕

GT540 未使用时将返回锁定屏幕。如果一段时间不使用手机，主屏幕或者您正在查看的其他屏幕将替换为锁定屏幕，然后屏幕将变黑以节省电池电量。

要唤醒手机，请按**发送**、**主屏**或**电源**键。锁定屏幕将会显示。点触锁定图标，向右移动手指可解锁主屏。您最后使用的屏幕将会打开。

**备注：**如果在您设置图样时有任何程序在运行，则它们仍可在锁定模式中运行。建议在进入锁定模式前退出所有程序以避免不必要的费用。（例如，打电话、web 访问和数据通信）

### 提示：设置解锁图案

您可以通过连接四个或更多个点来绘制自己的解锁图案。如果设置了图样，则手机的屏幕被锁定。要将手机解锁，请在屏幕上绘制您设置的图样。

## 使用主屏

向左或向右轻轻滑动手指以进行查看。

您也可以使用小工具自定义每个面板，即您喜爱的应用程序和文件夹的快捷方式。

**注意：**一些屏幕图像可能因手机提供商而不同。


## 选择默认主屏


用户界面基于两种类型的主屏：**LG 主屏**和**Android 主屏**。


您可以将您喜爱的主屏设置为默认主屏。

如果要更改默认主屏设置，请从应用程序菜单中选择 Home selector。

- 在 LG 主屏上，您可以查看屏幕底部的快速键。通过快速键，您点触一次即可轻松进入经常使用的功能。

 点触**手机**图标可打开触摸拨号键盘，以拨打电话。

 点触**信息**图标以访问信息菜单。  
在这里，您可以创建新信息。

 点触屏幕底部的应用程序选项卡。然后，您可以查看安装的所有应用程序。只需点触即可滚动浏览您的应用程序。

- 在 Android 主屏上，您可以点触**应用程序**  图标以打开应用程序菜单。点触并向上或向下滑动屏幕即可滚动浏览应用程序。打开和查看应用程序菜单时，点触“主屏”图标  可返回到主屏幕。

**提示！**您的随附 microSD 卡中已包含有用的应用程序。要打开所需应用程序，从应用程序列表中点触相应图标即可。

**备注：**根据手机软件或服务提供商的不同，预加载的应用程序将有所不同。

## 将小工具添加到主屏

您可以通过将快捷方式、小工具或文件夹添加到主屏来自定义主屏。为更方便地使用手机，请在主屏上添加您喜爱的小工具。

**注意：**LG 主屏和 Android 主屏提供了此功能。要将所需图标添加到主屏：



- 1 在主屏上，点触**菜单**键，打开**选项**选项卡，然后选择**添加**。

# 主屏


- 2 在**添加到主屏**菜单上，点触想要添加的项目类型。
- 3 例如，从列表中选择**文件夹**并轻触它。
- 4 从列表中选择**有电话号码的联系人**并轻触它。
- 5 您将在主屏上看到新文件夹的图标。将其拖动到所需面板的所需位置，然后在屏幕上松开手指。

**提示：**要将应用程序图标添加到主屏，请点触并按住要添加到主屏的应用程序。

从主屏中删除应用程序图标：

- 1 点触并按住该图标。**应用程序**图标将更改为**垃圾箱**图标 。
- 2 将某个应用程序图标拖曳到垃圾箱图标 。

## 返回到最近使用的应用程序

- 1 点触并按住主屏键 。屏幕将显示一个弹出窗口，其中列出了您最近使用的应用程序图标。
- 2 点触某个图标以打开其应用程序。或者，点触**返回键**以返回到当前应用程序。

## 通知抽屉

通知抽屉在屏幕顶部运行。请使用手指点触并滑动通知抽屉。或者，在主屏上点触**菜单**键，然后选择**通知**。在这里，您可以检查 Wi-Fi 和蓝牙状态以及其他通知。

## 查看状态栏

状态栏使用不同的按钮显示手机信息，例如信号强度、新信息、电池使用寿命以及活动的蓝牙和数据连接。

下表说明了您可能在状态栏中看到的不同图标的涵义。



[状态栏]

图标	描述
	无 SIM 卡
	无信号
	已连接到 Wi-Fi 网络
	有线耳机
	呼叫转移

图标	描述
	呼叫保持
	扬声器开启
	手机麦克风静音
	未接来电
	蓝牙打开
	蓝牙已连接
	系统警告
	已设置闹钟
	新语音邮件
	飞行模式
	铃声静音
	振动模式
	无 SD 卡
	电池已充满电

图标	描述
	电池正在充电
	数据传进
	数据传出
	数据传进和传出
	手机已通过 USB 电缆与 PC 连接
	正在下载数据
	正在上载数据
	GPS 打开
	正在从 GPS 接收位置数据
	还有两个通知未显示
	正在通话
	数据正在同步
	下载完成


# 主屏


图标	描述
	新 Google Mail
	新 Google Talk 信息
	新信息
	正在播放歌曲
	期事件


## 屏上键盘


您也可以使用屏上键盘输入文本。屏上键盘在您需要输入文本时自动在屏幕上显示。要手动显示键盘，只需点触要输入文本的文本字段。


## 使用键盘并输入文本

 轻触以切换大小写。轻触以输入大写字母。您键入的下一个字母将为大写。轻触两次以开启大写锁定。按钮上不同颜色的圆圈分别指示：大写锁定开启（绿色）或仅对一个字符开启（橙色）。


 轻触以输入空格。


 轻触以打开或关闭 XT9 预测模式。

 轻触以查看设置菜单。从“编辑器设置”、“键盘类型”、“编写语言”、“用户词典”或“输入法”中进行选择。

 轻触以隐藏或显示屏上键盘。

 轻触以删除上一字符。

 轻触以切换为数字和符号键盘。

 轻触以在信息字段新建一行。

# Google 帐户设置

当第一次在手机上打开 Google 应用程序时，您需要使用您现有的 Google 帐户登录。如果没有 Google 帐户，您会收到提示要求创建帐户。

## 创建 Google 帐户

- 1 在主屏上点触**应用程序**选项卡以打开应用程序菜单。
- 2 轻触 **Google Mail**，轻触**下一步 > 创建**以启动 Google Mail 设置向导，然后进行设置。
- 3 点触文本字段以打开触摸键盘，输入您的姓名和 Google 帐户的用户名。当输入文本时，您可以点触键盘上的**下一步**移动到下一文本字段。
- 4 当完成输入姓名和用户名时，请轻触**下一步**。您的手机正在与 Google 服务器通信，正在检查用户名可用性。
- 5 输入然后重新输入密码。然后按照说明输入有关帐户的必需和可选信息。请等待片刻，然后查看服务器是否创建了帐户。

## 登录 Google 帐户

- 1 输入您的电子邮件地址和密码，然后轻触**登录**。正在登录，请稍候。
- 2 登录后，您可以使用 Google Mail，并在手机上利用 Google 服务。
- 3 一旦在手机上设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步。（具体取决于您的同步设置。）

登录后，您可以使用 Google Mail、Google Calendar、Android Market 和 Google Map；从 Android Market 下载应用程序；将您的设置备份到 Google 服务器；以及在手机上使用其他 Google 服务。

### 重要注意事项！

- 诸如日历等一些应用程序只适用于您添加的第一个 Google 帐户。如果您计划手机使用不止一个 Google 帐户，请确保登录到您想先使用此类应用程序的帐户。登录后，您的联系人、Gmail 消息、日历事件和来自网络上这些应用程序和服务的其它信息将与您的手机同步。如果在安装期间未登录 Google






# Google 帐户设置


帐户，则在首次启动需要 Google 帐户的应用程序（如 Gmail 或 Android Market）时会提示您登录或创建一个 Google 帐户。

- 如果想使用备份功能从运行 Android 操作系统或更高版本的其他手机向您的手机恢复设置，则您现在必须在安装期间登录 Google 帐户。如果等到安装完成后再登录，则不会恢复您的设置。
- 如果您拥有公司或其他组织的企业帐户，则 IT 部门可能具有关于如何登录该帐户的特殊说明。

# 通话

## 拨打电话



- 1 在主屏幕上，按发送键  并点触手机图标  以打开键盘。
- 2 在键盘上输入号码。要删除一个数字，请点触清除按钮 。
- 3 点触**通话**图标  以拨打电话。
- 4 要结束通话，请点触结束或按结束键 。

**提示！** 要输入“+”以拨打国际电话，请点触并按住 。


## 呼叫联系人

- 1 在主屏上点触应用程序选项卡以打开应用程序菜单。点触联系人以打开电话本。
- 2 滚动浏览联系人列表，或点触**搜索**输入您要呼叫的联系人的首字母。
- 3 在列表中，点触您要呼叫的联系人，如果该联系人有多个号码，则选择您要使用的号码。

## 接听和拒接来电

电话响铃时，按**发送**  键接听。您也可将接听图标  拖动到右侧。

按**结束**  键拒接来电。

**提示！** 手机响铃时，如果要切换为静音铃声模式，请点触并向左滑动静音图标 。

## 调节音量

要在通话期间调节音量，请使用手机左侧的音量调高和调低按钮。

## 通话设置

您可以配置通话设置（例如呼叫转移、呼叫等待）以及运营商提供的其他特殊功能。

- 1 在主屏上点触**应用程序**选项卡以打开应用程序菜单。
- 2 滚动并点触**设置**。
- 3 轻触**通话设置**，然后选择要调整的选项。

### < 固定拨号 >

选择“固定拨号”可打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要提供 PIN 2 码，此密码由运营商

# 通话

提供。仅可以使用手机拨打此固定拨号列表中的号码。

## < 语音信箱 >

设置语音邮件号码。

**语音邮箱服务** - 允许您选择运营商的语音邮箱或其他服务，如 Google Voice。

**语音邮箱设置** - 如果当前在使用运营商的语音邮箱服务，此选项使您可以输入用于收听和管理语音邮箱的号码。

## < 其他通话设置 >

**借口信息** - 拒绝通话时，您可以使用此功能快速发送一条信息。此选项有助于在会议时回复信息。

**呼叫转接** - 您可以配置开机时如何转移呼叫、何时不应答等等。从以下选项中进行选择：所有来电转接、正在通话时转接、无人接听时转接或无网络或关机时转接。然后输入要转移至的号码。

**备注：**转接呼叫将收取一定费用。有关详细信息，请联系您的网络运营商。

**呼叫限制** - 选择何时限制呼叫。输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

**通话费用** - 查看通话的相关费用。(此服务取决于网络；某些运营商不支持此功能。)

**通话时间** - 查看所有通话的时间，包括“最后通话”、“所有通话”、“已拨电话”和“已接来电”。

**GSM通话设置** - 此菜单允许您更改以下设置：

**来电者信息** - 选择是否要在拨出电话时显示您的号码。

**呼叫等待** - 如果启用了呼叫等待功能，在通话过程中，手机将提醒您有来电。(取决于网络提供商。)

**线路选择：**允许您选择线路。





# 联系人

您可以在手机上添加联系人，并将其与 Google 帐户或其他支持同步联系人的帐户中的联系人同步。

## 正在搜索联系人

- 1 在主屏上，点触应用程序选项卡以打开应用程序菜单。点触联系人以打开电话本。
- 2 点触**搜索**，使用键盘输入联系人姓名。


## 添加新联系人

- 1 在主屏幕上，按发送键  并点触手机  以打开键盘。输入新联系人的号码，然后点触“菜单”键 、点触添加到电话本，然后创建新联系人。
- 2 如果您要为新联系人添加图片，请点触 。您可以使用保存的图片或拍摄一张新图片。
- 3 选择联系人类型并选择手机、SIM 或您的 Google 帐户。
- 4 点触文本字段以打开触摸键盘，输入新联系人的姓名。
- 5 点触联系人信息类别，并输入有关联系人的详细信息。

6 点触**完成**以保存联系人。

## 快速拨号

您可以为常用联系人指定快速拨号号码。

- 1 在联系人列表中，点触菜单键  并选择更多 > 快速拨号。
- 2 语音邮件已设为快速拨号 1。不能对此设置进行更改。点触任意其它号码，为其指定快速拨号联系人。
- 3 此时将打开您的电话本。点触要指定到该号码的联系人的电话号码一次，以选择该联系人。

**备注：**要从列表中删除快速拨号，请点触并按住指定的联系人。出现弹出屏幕时，轻触删除，然后选择确定。

# 信息/电子邮件

## 信息

GT540 将短信和彩信结合到一个直观易使用的菜单中。

## 发送信息

1 在主屏上，点触应用程序选项卡以打开应用程序菜单。依次点触信息和新信息以打开空白信息。

2 在**收件人**字段中输入手机号码。随着您输入电话号码，匹配的联系人将会显示。您可以点触建议的收件人或继续输入电话号码。您可以添加多个联系人。


**备注：**您将按每个收件人每条文本信息付费。


3 点触下面的信息框开始撰写信息。

4 点触菜单键打开选项菜单。从添加主题、附加、插入表情、退出和所有线程选择。

5 点触**发送**发送信息。

6 信息屏幕将会打开，您的信息显示在您的名称后面。屏幕上会显示回复。当您查看并发送附加信息时，将创建信息会话。

 **警告：**160 个字符的限制在不同国家/地区有所不同，具体取决于短信编码方式。

 **警告：**如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

**备注：**当您在通话期间收到短信时，不会出现提示，但是您会在指示栏中看到它。

## 更改信息设置

GT540 已预定义信息设置，因此，您可以立即发送信息。您可以根据喜好更改设置。

在主屏上点触**信息**图标，然后点触**菜单键** 。轻触**设置**。

### < 存储设置 >

**删除旧信息** - 点触以勾选，并允许手机在达到文本信息限制或多媒体信息限制删除会话中的旧信息。取消选择以保留所有信息。

**文本信息限制** - 点触以设置每个会话要保存的文本信息数。

**多媒体信息限制** - 点触以设置每个会话要保存的多媒体信息数。

### <短信设置>

**发送报告** - 激活可接收信息已发送确认信息。

**管理 SIM 卡信息** - 管理 SIM 卡上存储的信息。

**有效期** - 选择信息在信息中心中的最长保存时间。

**文本信息中心** - 输入信息中心的详细信息。

### <彩信设置>

**发送报告** - 选择以请求发送报告。

**允许发送报告** - 选择以允许发送送达确认信息。

**已读报告** - 选择以请求您发送的每条信息的阅读报告。

**自动检索** - 激活可自动检索信息。

**允许阅读报告** - 选择以允许发送阅读确认信息。

**漫游时自动检索** - 启动可在漫游时检索信息。

**设置优先级** - 选择彩信的优先级级别。

**有效期** - 选择信息在信息中心中的保存时间。

### 创建模式

**受限**：在这种模式下，彩信客户端设备只会创建并发送内容属于核心 MM 内容域的信息。

**警告**：在这种模式下，彩信客户端设备将引导用户创建并发送内容属于核心 MM 内容域的信息。此指南将通过警告对话框提供。

**免费**：在这种模式下，彩信客户端允许用户在信息中添加任何内容。

**接收广告** - 允许接收广告信息。

### <服务信息>

选择是接收还是阻止服务信息。

### <通知设置>

激活可在状态栏中显示信息通知。也可以选择一种铃声并激活振动，以便提醒您收到新信息。

### <信息服务设置>

选择接收、阻止还是查看或编辑频道以接收信息服务消息（小区广播信息）。也可选择信息服务消息的语言。

# 信息/电子邮件

## 设置电子邮件

使用 GT540 发送电子邮件，您可以随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件帐户非常快捷。

- 1 在主屏上点触应用程序选项卡，然后轻触电子邮件。或者，您也可以在主屏上点触电子邮件以直接访问。
- 2 如果尚未设置电子邮件帐户，请启动电子邮件设置向导。

**提示！** 如果已设置电子邮件帐户，则不会自动启动向导。

**提示！** 在 Wi-Fi 连接过程中，将使用 Wi-Fi 发送和接收电子邮件。

## 更改电子邮件帐户的设置

您可以根据个人需要更改电子邮件设置。

- 1 在主屏上点触**电子邮件**图标，然后轻触所需帐户。
- 2 点触**菜单**键打开选项菜单，然后轻触**设置**。
- 3 您可以调整一般帐户、电邮等设定。

## 使用新帐户发送电子邮件


- 1 在主屏上点触**电子邮件**图标，然后点触**撰写**打开新的空白信息。
- 2 输入收件人的地址，然后写信息。您还可以附加图像、视频、音频文件和各种文档文件格式。
- 3 点触**发送**发送电子邮件。

# 相机

## 了解取景器

**亮度** - 此选项定义并控制进入图像的光量。沿滚动条滑动亮度指示器，“-”对应亮度更低的图像，“+”对应亮度更高的图像。

**缩放** - 放大或缩小。或者，您可以使用侧音量键。

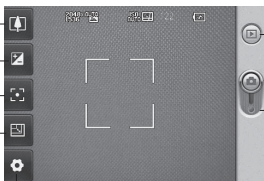

**图片库** - 这使您可以在相机模式下访问保存的照片。仅需点触，您的图片库就会出现在屏幕上。

**拍照**

**视频模式** - 向下滑动此图标以切换到视频模式。

**设置** - 点触此图标可以打开设置菜单。请参阅**使用高级设置**。

**图像大小** - 点触可设置所拍照片的尺寸（以像素为单位）。从数字选项中选择像素值：3M (2048x1536)、2M (1600x1200)、1M (1280x960)、VGA (640x480)、QVGA (320x240)

**对焦** - 点触此图标以选择选项菜单。请参阅**使用对焦模式**。

**备注：**您需要先插入存储卡，然后才能拍照。不插入存储卡，您将无法保存所拍摄的照片。

# 相机

**提示！** 您可以关闭所有快捷按键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要调用选项，请再次点触屏幕。

## 使用对焦模式

您可以从下列选项中选择对焦模式：

**AF** - 将相机设置为自动对焦。

**微距** - 微距允许您拍摄大特写。如果您正在尝试拍摄大特写，但是对焦框为红色，请尝试打开微距模式。

**脸部追踪** - 如果设置了人脸跟踪并拍照，您的相机将自动检测并对焦人脸。

**备注：**人脸跟踪模式不支持缩放。

**MF** - 将相机设置为自动对焦。

## 快速拍照

- 1 长按手机右侧的相机键。
- 2 水平拿稳手机，将镜头对准您要拍摄的物体。
- 3 轻按拍摄按钮，取景器屏幕的中间会出现一个对焦框。
- 4 调整手机位置，以便您能看到物体处于对焦框中。

5 对焦框变绿时，表示相机已对焦。

6 按拍摄按钮。

## 拍照后

拍好的照片将显示在屏幕上。


**传送** 点触可以通过**蓝牙**、**电子邮件**、**Google Mail**、**彩信**或**SNS**方式共享照片。

**备注：**漫游时如果下载了彩信，可能会额外收费。


**设为** 点触以将图像用作联系人图标或墙纸。


**重命名** 点触以编辑选定图片的名称。

**编辑** 点触各种工具以编辑图像。


 点触可以查看保存的图像库。


 点触可以删除图像。

 点触可以立即拍摄其它照片。将保存您的当前照片。

 点触以返回上一个菜单。

## 使用高级设置

在取景器中点触  以打开所有高级选项。

滚动转盘，您可以更改相机设置。选择选项后，点触返回键 。

**图像质量** - 从最细致、细致和正常中选择。质量越细致，照片越清晰。同时文件更大，这意味着手机内存可保存的照片数更少。

**白平衡** - 从以下选项中选择：自动、白热灯、阳光、日光灯和阴天。


**拍摄模式** - 从以下选项选择：正常、连拍、人面优化、相框拍摄、全景拍摄、艺术拍和人面追踪。

**计时器** - 自拍器允许您设置按下拍摄按钮后的延迟。从**关闭**、**3 秒**、**5 秒**或**10 秒**中选择。如果要为自己拍摄照片，此功能是理想之选。

**ISO** - ISO 确定相机的光照传感器的感光性。ISO 越高，相机感光性能越好。在您无法使用闪光灯而光线较差的条件下，此功能很有用。选择 ISO 值：**自动**、**100**、**200**和**400**。

**场景模式** - 从以下选项中选择：**自动**、**人像**、**风景**、**运动**、**夜间**和**日落**。

**色彩效果** - 选择新照片的色彩效果。

做出选择后，请使用返回键  关闭色调菜单。随后，您就可以拍照了。

**备注：**您可以将照片从彩色更改为黑白或怀旧，但是，您不可以将黑白或怀旧照片还原为彩色。

**显示拍摄影像** - 从以下选项选择：开启、保持和关闭。如果选择“开启”，已拍照片屏幕显示 1 秒后，将立即转到预览效果。

**网格屏幕** - 从**关闭**、**2x2**或**3x3**中选择。

**快门声音** - 从四种快门声音中选择一种。

**智能影响定位** - 激活以使用手机基于位置的服务。拍照并添加所在位置以对其进行标记。

# 相机

如果将标记过的图片上传到支持相片定位功能的博客，您可以在地图上看到此照片。

**备注：**此功能仅在激活了 GPS 时可用。

**隐藏图标** - 选择要手动或自动隐藏的相机设置图标。


**眨眼检测** - 选择**开**可在拍摄后检查闭眼。

**重置** - 恢复所有相机默认设置。

**提示！** 退出相机时，除图像大小和图像质量外，所有设置将恢复回默认设置。任何非默认设置必须重置，如色调和 ISO。拍摄下一张照片之前，请先查看。

**提示！** 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量元素时，您将在设置菜单下预览到图像更改效果。

## 查看保存的照片


- 1 您可以在相机模式下访问保存的照片。点触  即会在屏幕上显示图像库。

# 摄像机

## 了解取景器

**亮度** - 此选项定义并控制进入图像的光量。沿滚动条滑动亮度指示器，“-”对应亮度更低的图像，“+”对应亮度更高的图像。

**缩放** - 放大或缩小。或者，您可以使用侧音量键。在开始录制视频之前，您可以使用缩放功能。录制期间，不能控制缩放功能。

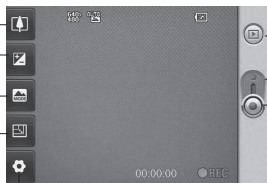

**图片库** - 这使您可以在摄像机模式下访问保存的照片。仅需点触，您的图片库就会出现在屏幕上。

**相机模式** - 向上滑动此图标以切换到相机模式。

**开始录制**

**设置** - 点触此图标可以打开设置菜单。请参阅使用高级设置。

**视频大小** - 点触可设置录制的视频的大小（以像素为单位）。选择视频大小：VGA (640x480)、QVGA (320x240) 或 QCIF (176x144)。

**场景模式** - 设置相机，使其适应环境。从自动、人像、风景、运动、日落和夜间中选择。

# 摄像机

## 快速摄像

- 1 长按手机右侧的相机键。
- 2 然后，切换至 。
- 3 屏幕上将显示摄像机的取景器。
- 4 水平放置相机，将镜头对准要拍摄的物体。
- 5 按拍摄按钮一次，开始录制。
- 6 REC 将显示在取景器底部，计时器将显示视频长度。
- 7 点触屏幕上的  停止录制。

## 拍摄视频后

屏幕上将显示所拍摄视频的静态图像。


**传送** 点触可以通过**蓝牙**、**电子邮件**、**Google Mail** 或**彩信**方式共享视频。


**备注：**漫游时如果下载了彩信，可能会额外收费。


**播放** 点触以播放视频。


**重命名** 点触以编辑选定视频的名称。

**编辑** 点触以将视频用作墙纸。

 点触以访问媒体播放器并查看保存的视频。

 点触以删除您刚拍摄的视频，点触“是”确认。此时将出现取景器。

 点触可以立即拍摄另一段视频。将保存您的当前视频。

 点触以返回上一个菜单。

## 使用高级设置

从取景器中点触  以打开所有高级选项。滚动转盘以调节摄像机设置。选择选项后，点触**返回键** 。

**色彩效果** - 选择要对新视图使用的色彩效果。

**白平衡** - 白平衡确保视频中的任何白色区域显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动**、**白热灯**、**阳光**、**荧光灯**或**阴天**中选择。

**长度** - 设置视频的长度限制。从**标准**和**彩信**中选择，以限制彩信最大大小。

**提示！** 选择彩信时长时，图像质量将设置为 QCIF，您可以拍摄更长视频。

**录音** - 选择**静音**以录制视频而不录制声音。


**隐藏图标** - 选择是自动还是手动隐藏摄像机菜单中的图标。

**录制的视频** - 从以下选项选择：开、保持和关。如果选择**开**，录制的视频屏幕显示 1 秒后，将立即转到预览效果。

**重置** - 重置所有摄像机设置。

**提示！** 您可以将拍摄的视频从彩色更改为黑白或怀旧，但是，您不可以将黑白或怀旧视频还原为彩色。

## 观看保存的视频

- 1 在取景器中，点触 。
- 2 屏幕上将显示您的图像库。
- 3 点触视频一次，将其调到图片屏幕的前方。将开始自动播放。

# 照片和视频

## 编辑照片

您可以对照片执行多项操作以更改、添加或修饰。

1 打开您要编辑的照片，然后点触**菜单键** 。

2 点触  以更改照片：



**旋转和翻转** - 旋转或翻转照片以获得趣味效果或更方便查看。



**裁切** - 裁切照片。选择方形或圆形裁切区域，然后使用手指移过选定区域。



**微调** - 这可帮助您使用自动色彩、亮度等调整图片。



**效果** - 点触以对照片应用效果选项。



**相框** - 为照片添加相框。



**文本** - 给照片添加文本。



**剪贴画** - 为照片添加剪贴画。



**画板** - 徒手对照片进行绘制更改。从四个选项中选择线条粗细，然后选择要使用的颜色。



**标记** - 使用标记修饰照片。从不同标记中选择，点触照片中您要放置标记的位置。



**调整大小** - 调整照片大小。



保存您对照片所做的更改。



删除照片编辑。


## 编辑视频


视频编辑功能适用于 MPEG-4 格式。

## 剪辑视频长度


1 选择 **编辑** ，然后选择




2 点触 。然后设置新的开始点和结束点。点触**确定**，然后选择**下一步**。

3 点触  返回图片库并放弃更改。



## 选择转换样式

1 选择一种转换样式，然后点触  以预览。


2 点触 ，然后拖动滚动栏调整持续时间

- 3 点触**确定**以保存转换。点触**应用**，仅应用当前选定的转换效果。选择**全部应用**将当前选定的转换效果应用到故事板中的所有视频文件。

## 添加子标题



- 1 打开要编辑的视频。
- 2 选择 **编辑**，然后选择  以向视频添加子标题。
- 3 点触 ，然后暂停播放以设置文字出现的起点。
- 4 点触**开始**，然后选择文本样式。使用键盘输入文本，然后点触**完成**。
- 5 点触您希望文字出现的区域，然后点触**确定**。
- 6 替换现有文件或另存为新文件。
- 7 重复这些步骤以添加更多文本。

## 添加编辑效果




- 1 打开要编辑的视频。
- 2 选择 **编辑**，然后选择 。
- 3 选择要添加到照片的效果。

## 抓取帧图像

从视频中捕捉图片。

- 1 打开要编辑的视频。
- 2 选择 **编辑**，然后选择 。
- 3 播放视频，在视频播放过程中点触  捕捉所需屏幕。
- 4 抓取的帧图像将作为静态图像文件保存在手机中。

## 向视频添加配音

- 1 打开要编辑的视频。
- 2 选择 **编辑**，然后选择 。
- 3 点触 。此时将打开**我的声音**文件夹。选择您要添加到视频的曲目。
- 4 视频中的原始音频曲目将被删除。
- 5 如果音频比视频短，请选择是播放**一次**还是**重复**播放。
- 6 替换现有文件或另存为新文件。
- 7 或者，您可以录制新文件，然后点触  插入实时配音。
- 8 点触**完成**保存当前配音。


# 多媒体


您可以将多媒体文件保存在存储卡中，以便轻松访问所有图像和视频文件。


点触**应用程序**选项卡，然后选择**图片库**。您可以打开存储所有多媒体文件的目录栏列表。


**备注：**请确保在手机上安装一个存储卡，以便保存照片和访问您的所有图片。没有内存卡，手机不会显示任何照片或视频。


如下所示，有六个目录栏。


**全部** ：显示所有图片和视频。

**收藏** ：如果点触并按住照片或视频，选项屏幕将会显示，允许您将照片标记为收藏。此**收藏**栏将显示您喜爱的照片和视频。

**相机** ：显示所有照片。

**图像** ：显示所有图片。

**视频** ：显示所有视频。

**标签** ：和收藏栏一样，您可以对照片进行标记。此栏将显示您标记的照片和视频。

## 媒体播放器

**媒体播放器**文件夹显示已下载的视频以及手机中录制的视频列表。


### 观看视频

- 1 选择“应用程序”选项卡上的**媒体播放器**。
- 2 点触**视频**，然后选择要播放的视频。

**提示！** GT540 支持 DivX 视频播放，可播放更多文件内容。

点触**音乐**，然后选择要播放的音乐。您可以播放歌曲、按**专辑**和**艺术家**对歌曲进行分类，或创建**播放列表**。


## 视频编辑器

- 1 在主屏上点触应用程序选项卡，然后选择视频编辑器 。

## 故事板


- 1  **设置 BGM** - 为故事板添加背景音乐或更改声音。
- 2  **导入文件** - 将媒体文件添加到故事板。您最多可以添加 32 个媒体文件。
- 3  **剪辑管理器** - 管理添加的媒体文件。如果未添加任何媒体文件，此按钮将被禁用。
- 4  **预览** - 预览您创建的视频文件。
- 5  **保存** - 保存您创建的视频文件。
- 6  **添加文本** - 将文本框添加到故事板中。

您必须先点触  以编辑视频。

 - 点触以选择所有文件，最多可选择 32 个文件。

 - 点触以取消选择所有文件。


25/32 - 这将显示选择的文件数。


 点触以转到下一步。


## 音乐电影

- 1 左右翻转以检查各种样式。对于**音乐影片**，您只能选择照片。

 - 返回**视频编辑器**屏幕。

 - 显示样式名称和描述。

 - 预览样式。


 - 点触以选择照片。

- 2 选择照片后，点触  继续到下一步。

- 3 点触  以选择所有照片，然后点触 。

- 4 选择音乐，将其设为背景音乐。


- 5 使用键盘添加影片标题并保存。

- 6 点触  以播放整个视频文件。

- 7 点触  以保存创建的视频文件。

## 自动剪切

有三种样式模板：**肖像**、**风景**和**运动对象**。

- 1 点触 ，然后选择视频。转到下一步。

- 2 点触  以预览视频文件。

- 3 点触  以保存文件。

# 多媒体

## 玩游戏

- 1 GT540 提供了许多游戏。  
您可以从 Market 上下载更多游戏。
- 2 点触启动按钮启动游戏或应用程序。

**备注：**使用此服务下载收费的游戏或应用程序时，可能会产生额外费用。

**备注：**Java 游戏和应用程序安装只能通过 Web 进行。

## 使用 USB 批量存储设备传输文件

使用 USB 设备传输文件：

- 1 使用 USB 电缆将 GT540 连接到电脑。
- 2 如果未在 PC 上安装 LG Android 平台驱动程序，则需要手动更改设置。选择**设置 > SD 卡和手机存储 > 激活仅批量存储**。
- 3 点触**打开 USB 存储**。
- 4 您可以在 PC 中查看批量存储内容，然后传输文件。

**备注：**

- 您需要选安装 microSD 卡。如果不插入 microSD 卡，则无法使用 USB 批量存储。

- 如果您安装了 LG Android 平台驱动程序，您随即会看到一则弹出信息“打开 USB 存储”。
- 使用 USB 批量存储功能后，如果您要使用 LG PC 套件在手机与 PC 间实现同步，则需要点触**设置 > SD 卡和手机存储**，然后点触复选标记以关闭仅批量存储模式。

## 音乐

GT540 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要访问音乐播放器，请点触“音乐”。

**艺术家** - 按艺术家浏览音乐集合。





**专辑** - 按专辑浏览音乐集合。

**歌曲** - 包括手机中的所有歌曲。

**播放列表** - 包含您创建的播放列表。

## 播放歌曲

- 1 在主屏上点触**应用程序**选项卡，然后选择**音乐**。
- 2 点触**歌曲**。
- 3 选择您要播放的歌曲。

- 4 点触  以暂停歌曲。
- 5 点触  以跳到下一首歌曲。
- 6 点触  以返回到歌曲的第一部分。再点触  以返回到上一首歌曲。

要在聆听音乐时更改音量，请按手机左侧的上下音量键。将会显示播放、添加到播放列表、删除和搜索选项。

**备注：**音乐文件的版权可能受国际条约和国家版权法保护。

因此，可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家关于使用此类材料的国家立法。

## 使用收音机


GT540 内置了 FM 收音机，因此您在路上也能转到喜爱的电台并收听无线广播。

## 搜索电台

您可以手动或自动微调收音机电台。搜索后，它们将保存为特定频道编号，这样，您就不

用重复进行微调。您可以在手机中最多保存 48 个频道。

## 自动微调

- 1 在主屏上点触 **应用程序** 选项卡，然后选择 **FM 收音机**。
- 2 点触 **菜单键** 。
- 3 点触 **自动扫描**，然后点触 **是**。

**备注：**您也可以使用电台频率旁显示的转盘手动调节电台。

## 收听收音机

- 1 在主屏上点触 **应用程序** 选项卡，然后选择 **FM 收音机**。
- 2 点触您要收听的电台的频道编号。

**提示！** 要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。

## 警告

如果连接的耳机不是专门面向收音机接收设计的，则收音机接收质量可能较差。

# Google 应用程序

- 1 首先设置 Google 帐户。输入用户名和密码。
- 2 登录后，您的 Google 帐户中的联系人、电子邮件和日历将自动与 GT540 同步。


## Google Maps


检查您当前的位置和交通并接收目的地的方向指引。GT540 必须连接到 Wi-Fi 或 3G/GPRS。

**备注：**Google Maps 并不覆盖所有城市和国家/地区。


点触菜单键  以使用以下选项：


**搜索**  - 输入您要寻找的位置。

**方向**  - 这将让您查找您输入位置的路线。

**层**  - 您可以将视图从交通切换到卫星或地面。轻触纬度，然后您将从 Google 帐户看到您的联系人的位置。

**我的位置**  - 在地图上指出您的当前位置。

**加入纬度**  - 与您选择的朋友和 Google 共享您的位置。

**更多**  - 清除地图或查找已加星标的项目和更多内容。

## Android Market

Android Market 允许您下载有用的应用程序和游戏。如果从 Android Market 安装应用程序和游戏，它们将显示在 GT540 菜单中。

如果发现应用程序与 GT540 不兼容，您可以发表相关评论或添加标志。

**备注：**当您完成游戏时，请使用**主屏键**或**返回键**。您将返回主屏。或者使用游戏的**菜单键**。

## Google Mail

在首次设置手机时对 Google Mail 进行配置。根据您的同步设置，手机上的 Google Mail 将自动与网络上的 Google 帐户同步。收件箱对话列表是您的默认 Google Mail 视图。


## Google Talk


Google Talk 是 Google 的即时消息程序。通过 Google Talk，您可以与同时也在使用它的其他人交谈。


点触菜单键  并选择可用选项。


**所有好友**  - 将所有朋友加入通信组。

**添加好友**  - 发送聊天邀请。

**搜索**  - 搜索包含您输入的单词或句子的聊天内容。



**注销**  - 从聊天中注销。如果您将自动登录设为启用，则在点触主屏中的交谈图标时，您将自动登录。


**设置**  - 调节指示器或通知等。

**更多**  - 您可从中关闭所有聊天并检查邀请和阻止名单。

# 实用工具

## 设置闹钟

- 1 在主屏上，点触应用程序选项卡并选择时钟。时钟应用程序打开后，主屏上将显示日期和时间。
- 2 如果要添加新闹钟，请点触时钟屏幕底部的闹钟图标 。点触现有闹钟以更改其时间和其他属性，或点触添加闹钟以添加新闹钟。
- 3 点触  以打开闹钟，然后设置您希望闹钟响起的时间。在设置时间后，GT540 将让您得知闹钟响铃之前的剩余时间。
- 4 设置重复、铃声或振动和添加标签以命名闹钟。点触完成。


**备注：**要更改闹钟设置，请在时钟屏幕上点触菜单键 ，然后点触设置。

## 使用计算器

- 1 在主屏上点触应用程序选项卡，然后选择计算器。
- 2 点触数字键输入数字。
- 3 对于简单的计算，请点触所需的功能（+、-、x 或 ÷），然后点触 =。

- 4 对于更复杂的计算，请点触菜单键，点触“高级”面板然后选择 sin、cos、tan、log 等等。




## 将事件添加到日历中

- 1 在主屏上点触应用程序选项卡，然后选择日历。
- 2 首先，您必须创建 Google 帐户才能使用日历。
- 3 选择您要添加事件的日期。
- 4 点触菜单键 ，然后点触新增事件。
- 5 点触内容，然后输入事件名称。查看日期并输入事件开始的时间。在下面的日期和时间框中输入完成事件的时间和日期。
- 6 也可以点触位置，然后输入位置。
- 7 如果您要为事件添加备注，请点触描述，然后输入详细信息。
- 8 如果要重复闹钟，请设置重复，必要时设置提醒。
- 9 点触保存以在日历中保存事件。日历中带颜色的方框将标记所有已保存事件的日期。在事件开始时间会有闹钟提醒，以便您进行安排。

## 语音备忘录

使用录音机录制语音备忘录或其它音频文件。


## 录制声音或语音

- 1 在主屏上点触**应用程序**选项卡，然后选择**语音备忘录**。
- 2 点触  开始录音。
- 3 点触  结束录音。
- 4 点触**菜单键**  并选择**设定**为，以设置为手机铃声或通知铃声。

**备注：**点触**转到列表**可访问相册。您可以收听保存的录音。

## Quickoffice

Quickoffice 允许您阅读文档，但编辑功能不可用。支持 PDF、文本、Microsoft Word/Excel/PowerPoint 文件。

- 1 在主屏上，点触**应用程序**选项卡并选择 Quickoffice。
- 2 如果选择**最近文档**，将会向您显示您最近查看的文件。
- 3 选择文件，然后点触**菜单键**  选择文件，然后点触**菜单键**

**PDF：**转到页面、适合页面、适合宽度

**DOC/TEXT：**搜索

**XLS：**工作表 - 在摘要视图或完整视图之间选择。

# 网络

## 访问网页

- 1 在主屏上点触**应用程序**选项卡，然后选择**浏览器**。
- 2 您将移动到网站。

**备注：**连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

## 更改网络浏览器设置

点触**菜单键** ，然后选择**更多 > 设置**。

您可以更改页面布局（例如文本大小、文本编码）、更改主页、管理缓存和 Cookie、安全设置等等。

# 设置


在主屏上点触**应用程序**选项卡，然后滚动并点触**设置**。

## 无线控件

在这里，您可以管理 Wi-Fi 和蓝牙。您也可以设置移动网络、飞行模式。

**飞行模式** - 在设置飞行模式之后，将禁用所有无线连接。

**Wi-Fi** - 点触以勾选：打开 Wi-Fi 已连接到可用的 Wi-Fi 网络。

**Wi-Fi 设置** - 设置网络通知或添加 Wi-Fi 网络。从 Wi-Fi 设置屏幕可访问高级 Wi-Fi 设置屏幕。点触菜单键  和“高级”。

**蓝牙** - 点触以勾选：打开蓝牙以连接蓝牙设备。

**蓝牙设置** - 设置设备名称和可发现，扫描其它设备。或者，检查您之前配置的蓝牙设备以及手机上次扫描蓝牙设备时检测到的那些设备的列表。

**VPN 设置** - 显示您之前配置的虚拟专用网 (VPN) 的列表。允许您添加不同类型的 VPN。

**移动网络** - 打开移动网络。

**移动网络设置** - 设置漫游、网络和 APN 的选项。

## 声音和显示

### < 声音设置 >

**静音模式** - 允许您将所有声音（包括通话和通知铃声）静音，音乐、视频和已设置的闹钟的声音除外。（若要使媒体和闹钟静音，您必须在各自的应用程序中操作。）

**响声音量** - 允许您设置来电和通知音量。如果取消选择为通话和通知使用相同音量的选项，则可分别设置各自的音量。

**媒体音量** - 允许您设置音乐和视频的音量。

**手机铃声** - 允许您设置默认来电铃声。

**手机振动** - 允许您将手机设置为在收到来电时振动，此设置与铃声或音量设置无关。

**通知铃声** - 允许您设置默认通知铃声。

**屏幕按键音** - 允许您将手机设置为在使用拨号盘拨号时播放音调。

**声音选择** - 允许您将手机设置为在点触按钮、图标和其他可响应点触的屏上项目时播放声音。

# 设置

**触觉反馈** - 允许您将手机设置为在点触菜单键、后退键和执行其他操作时短时振动。

**存储卡通知** - 允许您将手机设置为在收到 microSD 卡通知时播放声音。

## < 显示设置 >

**方向** - 允许您将方向设置为在侧翻或竖翻手机时自动切换为风景模式或肖像模式。

**动画** - 允许您将手机设置为在屏幕间导航时显示动画渐变。

**亮度** - 调整屏幕的亮度。

**待机时间** - 允许您调整屏幕自动关闭之前的延迟时间。为取得最佳电池性能，请使用最短的便利超时时间。

## < 触摸屏设置 >

**触摸屏校准** - 重置屏幕以方便使用。

## 安全和位置

### < 我的位置 >

**使用无线网络** - 如果选中“使用无线网络”，您的手机将使用 Wi-Fi 和移动网络确定您的大概位置。

**启用 GPS 卫星** - 如果选中“启用 GPS 卫星”，您的手机将确定您的位置并精确到街道级别。

### < 屏幕解锁图案 >

**屏幕解锁图样** - 设置解锁图样以保护您的手机。打开一组屏幕，它们可指导您绘制屏幕解锁图样。您可设置 PIN 或密码，而不要使用图案或保持其值为无。

**所需图案** - 取消选择此项，以禁用需要解锁图案来解锁屏幕。取消选择此选项时，您必须绘出当前的图案。

**使用可见的图案** - 允许您将图案设置为在解锁手机时可见。

**使用触觉反馈** - 允许您将手机设置为在绘制解锁图案过程中点触每个点时短时振动。

### 使用图样锁定锁定屏幕

- 1 第一次这样做时，将显示有关创建解锁图样的简短指南。
- 2 您会收到提示要求绘制并重新绘制您自己的图样。在您下一次打开手机或唤醒屏幕时，您会收到提示要求绘制解锁图样以解锁屏幕。

## < SIM 卡锁定 >

设置 SIM 卡锁定或更改 SIM PIN。

## < 凭证存储 >

**使用安全凭据** - 勾选此项以允许应用程序访问手机的加密存储安全证书和相关密码及其他凭据。您可使用凭据存储建立有些类型的 VPN 和 Wi-Fi 连接。如果未为凭据存储设置密码，则此设置不可用。

**从存储卡安装** - 允许您从 microSD 卡安装加密证书。

**设置密码** - 允许您为安全凭据存储设置或更改密码。密码最少为 8 个字符。

**清除存储** - 删除所有安全证书及相关凭据，同时擦除安装存储本身的密码。

## 应用程序

**未知源** - 允许安装您从网站、电子邮件或其他非 Android Market 位置获得的应用程序。

### 警告！

为保护您的手机和个人数据，请只从信任的来源（如 Android Market）下载应用程序。

**管理应用程序** - 管理和删除安装的应用程序。

**正在运行的服务** - 允许您查看和控制当前正在运行的服务和应用程序。此选项显示正在运行的各项服务需要的进程及占用的内存大小。

**开发** - 设置应用程序开发的选项，如 **USB 调试**、**保持清醒** 以及 **允许模拟位置**。

## 数据同步

### < 常规同步设置 >

**背景数据** - 允许应用程序在后台同步数据，无论您当前是否正在操作它们。取消选择此设置可节省电池电量并减少（而非消除）数据使用。

**自动同步** - 允许应用程序根据自己的计划同步、发送和接收数据。

### < 管理帐户 >

所有 Google 帐户及已添加到手机的其他帐户的列表。

如果点触此屏幕中的某个帐户，将会打开其帐户屏幕。

# 设置

## 隐私

### < 位置 >

**使用我的位置** - 允许您在使用 Google 搜索和其他 Google 服务时包括自己的位置。勾选此选项时，您将被询问在提供这些服务时是否允许 Google 使用您的位置。

### < 个人数据 >

**重置出厂数据** - 擦除手机内部存储中的所有数据，包括关于 Google 帐户、其他任何帐户、您的系统和应用程序数据及设置、下载的任何应用程序的信息。重置手机不会擦除您已下载的任何系统软件更新或 microSD 卡上的任何文件，如音乐或照片。如果以此方式重置手机，首次启动 Android 时，将提示您重新输入相同类型的信息。

## 存储卡和手机存储空间

### < USB 连接模式 >

**仅批量存储** - 插入存储卡时，您的手机可用作批量存储设备。您可将仅批量存储设置为 USB 连接模式的默认设置。

### < 存储卡 >

检查总空间和可用空间。点触移除存储卡以安全移除。必要时格式化存储卡。您必须先取消安装 microSD 卡，然后才能将其格式化。

### < 内部手机存储空间 >

检查可用空间。列出操作系统、其组件、应用程序（包括已下载的应用程序），以及其永久和临时数据使用的手机内部存储空间。

## 搜索

使用搜索设置可配置 Google 搜索、快速搜索框以及手机上您想要包括在搜索中的数据。

## 区域设置和文本

使用语言和键盘设置为手机上的文本以及屏上键盘配置选择语言和区域（包括已添加到词典中的文字）。

## 可访问性

使用可访问性可配置您在手机上安装的任何可访问性插件。

## 语音合成

使用语音设置为可利用 Android 语音合成器的应用程序对语言合成器进行配置。

**备注：**如果未安装语音合成器数据，则只有“安装语音数据”设置可用。

## **日期和时间**

使用日期和时间设置，以设置日期显示方式的参考。您还可以使用这些设置来设置自己的时间和时区，而非从移动网络获取当前时间。

## **关于手机**

查看法律信息，检查手机状态和软件版本。

## **DivX VOD 注册**

生成一个 DivX VOD 注册码。  
请访问 <http://vod.divx.com/> 注册并获取技术支持。

# Wi-Fi

使用 Wi-Fi，您可在无线接入点 (AP) 覆盖区内高速访问 Internet。

您可以通过 Wi-Fi 尽情享受无线 Internet 的便利性，而且无需额外付费。

## 备注：

- 如果不在 Wi-Fi 区并选择 3G 连接，则可能额外产生费用。
- 如果手机进入睡眠模式，则即使它连接到 Wi-Fi，Wi-Fi 连接也将自动被禁用。这种情况下，如果手机具有 3G 数据的访问权，则它可自动连接到 3G 网络，并且可能产生另外的费用。
- GT540 支持 WEP 和 WPA/WPA2-PSK 安全。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。如果未设置加密，不会显示此弹出窗口。您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

## 1. 如何设置 Wi-Fi

- 1 点触**应用程序>设置>无线控件**，然后打开 **Wi-Fi**。
- 2 AP（接入点）搜索
  - 搜索可连接的 AP。
- 3 AP 连接
  - 从 AP 搜索列表连接到所需 AP。
  - 如果 AP 为安全类型 WEP 或 WPA/WPA2-PSK，请输入安全密钥。

## 2. Wi-Fi 网络模式支持

- 1 Wi-Fi 模式支持（如何连接常用 AP 或隐藏的 AP）
  - 1) 如果 AP 未显示在搜索列表中，您可以通过将其保存为模式来进行连接。
  - 2) 将常用 AP 保存为模式，可在使用该安全类型连接 AP 时轻松输入安全密钥。
  - 3) 如果 AP 不支持 DHCP，您可以使用静态 IP 地址连接 AP。
- 2 对 Wi-Fi 模式中各字段的描述

- 1) 网络名称：SSID (ID)
- 2) 安全类型：WEP 和 WPA/WPA2-PSK 支持。
- 3) 安全密钥：保存安全密钥。
- 4) IP/DNS 设置：允许您根据 AP 是否支持 DHCP 来设为“自动”或“静态”。  
对于“静态”，请输入连接时使用的静态 IP 地址的 IP 地址和 DNS 服务器的字段值。

### 3 如何保存 Wi-Fi 模式

- 1) 选择“Wi-Fi 网络”底部的“添加 Wi-Fi 网络”菜单，然后输入 SSID 和安全类型。
- 2) 使用此安全类型连接到 AP 后，该模式将自动保存。

### 3. 如何获取 MAC 地址

要使用 MAC 筛选器在某些无线网络中建立连接，您需要在路由器中输入 GT540 的 MAC 地址。

您可以在下列用户界面中找到 MAC 地址：

点触**应用程序 > 设置 > 无线控件 > Wi-Fi 设置**，并点触菜单键，然后选择**高级 > MAC 地址**。

# 软件更新

## 手机软件更新

从互联网的 LG 手机软件更新有关使用此功能的详细信息，请访问 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> → 选择国家/地区 → 支持。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

## DivX 移动

关于 DIVX 视频：DivX® 是由 DivX, Inc. 开发的一种数码视频格式。是播放 DivX 视频的 DivX 官方认证设备。有关详细信息以及要获取将文件转换为 DivX 格式的工具，请访问 [www.divx.com](http://www.divx.com)。

关于 DIVX VIDEO-ON-DEMAND：要播放 DivX Video-on-Demand (VOD) 内容，必须先注册此 DivX Certified® 设备。要生成注册码，请在设备安装目录下找到 DivX VOD 部分。转到 [vod.divx.com](http://vod.divx.com)，使用此注册码完成注册流程，了解有关 DivX VOD 的详细信息。

**DivX 认证设备可播放最高为 320 x 240 的 DivX® 视频**

# 配件

有多种配件可用于您的手机，可单独购买。根据个人的通信要求选择这些配件。关于配件的供应情况，请咨询本地经销商。（以下配件为可选配件。）

## 充电器



## 数据线

连接 GT540 和电脑。



## 电池



## 用户手册

了解更多关于 GT540 的信息。



## 立体声耳机



## 备注：

- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

## 外部环境

最高温度：+55°C（放电）+45°C（充电）

最低温度：-10°C

## Declaration of Conformity



LG Electronics

### Suppliers Details

**Name**

LG Electronics Inc

**Address**

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

### Product Details

**Product Name**

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

**Model Name**

GT540

**Trade Name**

LG

CE 0168

### Applicable Standards Details

**R&TTE Directive 1999/5/EC**

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2006  
EN 60950-1 : 2006

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Doo Heung Lee / Director

Issued Date

30. Aug. 2010

LG Electronics Logistics and Service B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

  
Signature of representative

# 故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，超出 GSM 网络区域。 运营商应用了新服务	将手机移到窗边或开放的区域中。 检查网络运营商覆盖地图。 检查 SIM 卡使用时间是否超过 6~12 个月。 如果是，请到您的网络运营商营业点处更换 SIM 卡。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。 两次输入的代码不匹配。	默认代码为 [0000]。如果忘记代码，请联系您的服务提供商。
任何应用程序均无法设置	服务提供商不支持或需要注册	请与服务提供商联系。
无法拨打电话	拨号错误。 插入新 SIM 卡 达到预付费限制	新网络未获得授权。 查看新的限制。  与服务提供商联系或重新设置 PIN 2 的限制。

# 故障排除

信息	可能原因	可行解决措施
手机无法打开	按开/关键的时间不够 电池未充电 电池触点脏	请按开/关键至少两秒钟。 充电器使用时间过长。清洁触点 取出电池并重新插入。
充电错误	电池未充电。 外部温度太热或太冷 触点问题 无电压 充电器故障 错误的充电器 电池故障	为电池充电。 确保手机在正常温度下充电。 检查充电器以及到手机的连接。 检查电池触点，如果需要，请清洁。 插入不同的插座。 如果充电器不发热，请替换。 请仅使用原装 LG 配件。 替换电池。
不允许输入号码	已打开固定拨号功能。	检查设置。
无法接收/发送短信和图片	内存已满	删除手机中的部分信息。
文件无法打开	不受支持的文件格式	检查可支持的文件格式
存储卡不起作用	仅支持 FAT 16 文件格式	通过读卡器检查存储卡文件系统或使用手机格式化存储卡

信息	可能原因	可行解决措施
我收到来电时，屏幕未打开。	近程传感器问题	如果使用任何保护带或保护套，请检查其是否盖住近程传感器周围的区域。确保近程传感器周围的区域干净。
无声音	振动或静音模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	取出电池并插入电池。 打开手机。 尝试通过网站执行软件更新服务。





# GT540 User Guide

## - ENGLISH

Congratulations on your purchase of the advanced and compact GT540 phone by LG, designed to operate with the latest digital mobile communication technology.

- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Google Mail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.



# Contents

**Guidelines for safe and efficient use.....6**

**Important notice ..... 12**

1. Phone memory ..... 12
2. Optimising your battery's life ..... 12
3. Installing an open source OS ..... 13
4. Using unlock pattern..... 14
5. Using safe mode and hard reset ..... 14
6. Connecting to Wi-Fi networks ..... 15
7. Using a microSD card..... 16
8. Opening and switching applications ..... 16
9. Connecting your phone to a computer via USB..... 17
10. Unlock screen when using data connection ..... 19
11. When screen freezes ..... 19

**Getting to know your phone .20**

- Installing the SIM card and battery .....22
- Charging your phone.....23

Installing the memory card ...24

Formatting the memory card.25

**Your Home screen .....26**

Touch-screen tips .....26

Touch calibration.....26

Lock and unlock screen.....27

Select your default home screen .....27

Adding widgets to your home screen.....28

Getting back to a recently used application.....29

Onscreen keyboard .....31

Using the keypad & Entering text .....31

XT9 predictive mode .....32

123 Mode .....32

**Google Account Set-up .....33**

Creating your Google account33

Signing in your Google account.....33

**Calls.....35**

Making a call .....35

Calling your contacts.....35

Answering and rejecting a call .....35

Adjusting call volume .....	35	Viewing your saved photos ...	50
Making a second call .....	36	<b>Video camera.....</b>	<b>51</b>
Viewing your call logs.....	36	Getting to know the	
Call settings.....	36	viewfinder.....	51
<b>Contacts.....</b>	<b>39</b>	Shooting a quick video .....	52
Searching for a contact .....	39	After shooting a video.....	52
Adding a new contact.....	39	Using the advanced settings .	52
Speed dialling.....	39	Watching your saved videos..	53
Favourite contacts.....	40	<b>Your photos and videos .....</b>	<b>54</b>
<b>Messaging/E-mail.....</b>	<b>41</b>	Viewing your photos and	
Messaging.....	41	videos .....	54
Sending a message.....	41	Adjusting the volume when	
Changing your message		viewing a video .....	54
settings .....	42	Setting a photo as wallpaper.	54
Setting up your email .....	44	Editing your photos .....	54
Sending an email using your		Rotating your photo.....	55
new account.....	44	Adding text to a photo .....	55
Retrieving your email.....	44	Adding an effect to a photo...	56
Changing your email account's		Cropping a photo .....	56
settings .....	45	Tuning your photo .....	56
<b>Camera .....</b>	<b>46</b>	Adding frames .....	56
Getting to know the viewfinder.	46	Adding clipart .....	57
Using the focus mode.....	47	Using the drawpad .....	57
Taking a quick photo .....	47	Adding stamps.....	57
Once you've taken the photo.	48	Resizing .....	57
Using the advanced settings .	48	Editing your videos .....	57

# Contents

Trimming the length of the video.....	57
Selecting transition style.....	57
Adding subtitles.....	58
Adding edit effects.....	58
Grabbing a frame.....	58
Adding dubbing to your video.....	59
<b>Multimedia.....</b>	<b>60</b>
Timeline view.....	60
My images options menu.....	60
Sending a photo.....	60
Sending a video.....	61
Using an image.....	61
Creating a slideshow.....	61
Checking your photo.....	61
Media Player.....	62
Video editor.....	62
Storyboard.....	62
Music movie.....	63
Auto cut.....	63
Playing a game.....	63
Transferring files using USB mass storage devices.....	64
Music.....	64
Playing a song.....	65
Using the radio.....	65
Searching for stations.....	66
Resetting channels.....	66
Listening to the radio.....	66
<b>Google applications.....</b>	<b>67</b>
Google Maps.....	67
Android Market.....	67
Google Mail.....	68
Google Talk.....	68
<b>Utilities.....</b>	<b>69</b>
Setting your alarm.....	69
Using your calculator.....	69
Adding an event to your calendar.....	69
Changing your calendar view.....	70
Quickoffice.....	70
Voice recorder.....	71
Recording a sound or voice.....	71
Sending the voice recording.....	71
<b>The Web.....</b>	<b>72</b>
Browser.....	72
Accessing the web.....	72
Using options.....	72
Adding and accessing bookmarks.....	73
Changing the web browser settings.....	73

<b>Settings</b> .....	<b>74</b>	<b>Software update</b> .....	<b>83</b>
Wireless & networks.....	74	Phone Software update .....	83
Sound & display.....	74	DivX Mobile .....	83
Location & security .....	76	<b>Accessories</b> .....	<b>84</b>
Applications.....	77	<b>Technical data</b> .....	<b>85</b>
Accounts & sync .....	78	<b>Troubleshooting</b> .....	<b>86</b>
Privacy .....	78		
SD card & phone storage.....	79		
Search .....	79		
Language & keyboard .....	79		
Accessibility.....	79		
Text-to-speech.....	80		
Date & time .....	80		
About phone .....	80		
<b>Wi-Fi</b> .....	<b>81</b>		
1. How to set up Wi-Fi .....	81		
2. Wi-Fi network profile support.....	81		
3. How to obtain the MAC address .....	82		

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GT540 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1 g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.23 W/kg (10 g) and when worn on the body is 1.39 W/kg (10 g).

## Product care and maintenance

### **WARNING**

Only use batteries, chargers, and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances, such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources, such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Turn off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material, as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner, or alcohol).
- Do not charge the phone when it is on soft furnishings.
- Charge the phone in a well-ventilated area.

# Guidelines for safe and efficient use

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object, as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronic devices

- All mobile phones may experience interference, which could affect performance.
- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones while driving in the area.

- Do not use a hand-held phone while driving.
- Pay full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle, such as car stereos and safety equipment.

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music while on the go, please make sure the volume is at a reasonable level so you are aware of your surroundings. This is particularly important when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off while close to your ear. We also recommend that music and call volumes are set to reasonable levels.

**NOTE!** Excessive sound pressure from earphones can cause hearing loss.

## **Glass parts**

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until an authorised service provider replaces the glass.

## **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## **Potentially explosive atmospheres**

- Do not use the phone at a refueling point.

# Guidelines for safe and efficient use

- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off, or activate flight mode before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts that may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available in all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose of in household waste.
- If you must replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption by the charger.
- Actual battery life depends on network configuration, product settings, usage patterns, battery, and environmental conditions.

# Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.

## 1. Phone memory

When available space on your phone memory is less than 10%, your phone can not receive a new message. You need to check your phone memory and delete some data such as applications or messages to make more memory available.

### To manage the application

1. On the home screen, touch **Applications** tab and select **Settings> Applications> Manage applications**.
2. When all applications appear, scroll and select the application you want to uninstall.
3. Tap **Uninstall** and touch OK to uninstall application you desired.

## 2. Optimising your battery's life

You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

### To extend the life of your battery

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Google Mail, calendar, contacts, and other applications.
- Some applications you've downloaded may cause your battery's life to be reduced.

## To check the battery charge level


1. On the home screen, touch **Applications** tab and select **Settings> About phone> Status**.
2. The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.

## To monitor and control what uses the battery

1. On the home screen, touch **Applications** tab and select **Settings> About phone> Battery use**.
2. The top of the screen displays battery usage time. Either how long since last connected to a power source or, if connected to a power source, how long you were last running on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

## 3. Installing an open source OS

If you install an open source OS on your phone, and do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

 **WARNING:** If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

 **WARNING:** To protect your phone and personal data, download applications only from trusted sources, such as Android Market. If some applications are not properly installed on your phone, your phone may not work normally or a serious error can be occurred. You will need to uninstall those applications and all of its data and settings from the phone.

## Important notice

### 4. Using unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.



#### **WARNING**

##### **Precautions to take when using the Pattern Lock**

It is very important that you remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. After attempting the unlock pattern 5 times, you can touch the Forget Pattern Option and use your Google account information to unlock your phone.

If you do not have Google account, you don't create the Google account on the phone, or you forget it, you can use **Hard Reset**.

### 5. Using safe mode and hard reset

#### Using safe mode

##### **\* To recover from malfunction state of your phone**

1. Turn off your phone and reboot. While your phone is powering back on, press and hold the **Home** key during Android Logo is displayed. Your phone will boot all the way to the main screen and display "safe mode" in lower left corner.
  2. Select **Settings**>  
**Applications**>**Manage applications**, and choose the application then select an **Uninstall** icon.
  3. After uninstalling the application, turn off and reboot your phone.
- \* Using Hard Reset (Factory Reset)**  
If it does not restore to the original condition, use **Hard Reset** to initialise your phone.

When your phone turns on and the lock screen displays, press and hold the **Volume** up + **Home** + **Search** keys all at the same time (for five seconds). When the pop up screen is shown, choose OK to reset your phone.

Please note, after you perform **Hard Reset**, all your data and applications on your phone will be erased and cannot be reversed.



**WARNING:**

If you perform **Hard Reset**, all user applications and user data will be deleted. Please remember to back up any important data before performing **Hard Reset**.

## 6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you access a wireless access point, or “hotspot.” Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

### To turn Wi-Fi on and connect to a Wi-Fi network

1. On the home screen, touch **Applications** tab and select **Settings > Wireless & networks > Wi-Fi settings**.
2. Touch **Wi-Fi** to turn it on and begin scan for available Wi-Fi networks.
  - List of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.

## Important notice

3. Touch a network to connect to it.
  - If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
  - If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)
4. The status bar displays icons that indicate Wi-Fi status.

### 7. Using a microSD card

Pictures, along with music and video files, can only be saved to external memory.

Before using the built-in camera, you need to insert a microSD memory card to your phone first.

Without inserting a memory card, you will not be able to save pictures and video you had taken.

**NOTE:** Applications can only be saved to the phone's internal memory.

#### **WARNING:**

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Applications > Settings > SD Card & phone storage > Unmount SD card**.

### 8. Opening and switching applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages

each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

### **To stop the application you use**

1. On the home screen, touch **Applications** tab and select **Settings> Applications> Manage applications**.
2. Scroll to the desire application and touch **Force stop** to stop using it.

## **9. Connecting your phone to a computer via USB**

### **NOTE: Installing the LG PC suite on your PC**

To synchronise your phone via USB cable with your PC, you need to install the LG PC suite program on your PC. You can download this program from the LG website (<http://www.lgapplication.com>). Go to <http://www.lgapplication.com> and select your region, country & language. Visit the LG website for more information on installing and using the program.

### **LG PC SUITE**

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of the mobile phone on your PC.

#### **Major Functions of the LG PC Suite IV**

- Create, edit and delete phone data conveniently
- Synchronise data from a PC & phone (contacts, calendar/task)
- Transfer multimedia files (photo, video, music) conveniently with a simple drag & drop between a PC and phone
- Transfer the messages from a phone to a PC
- Use your phone as a Modem
- S/W update without losing your data

## Important notice

### GT540 does not support:

- PC connection via Bluetooth
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- E-mail
- Java Application

User's guide for PC Suite IV is in Help menu after install PC Suite IV.

### To transfer files using USB devices:

1. Install your microSD card on your phone. ( It may already be inserted on your phone.)
2. Before connecting the USB data cable, make sure that the **Mass storage only** mode is enabled on your phone. (On the applications menu, choose **Settings > SD card & phone storage**, then select **Mass storage only** check box.)

3. Use the USB cable with your phone to connect the phone to a USB port on your computer. You receive a notification that the USB is connected.
4. Open the notification drawer and touch **USB connected**.
5. Touch **Mount** to confirm that you want to transfer files between your phone's microSD card and the computer.

When the phone is connected as USB storage, you receive a notification. Your phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

**NOTE:** When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

**TIP!** To use a microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**.

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as camera, gallery and music functions.

To disconnect your phone from the computer, carefully follow your computer's instructions to disconnect USB devices correctly, to avoid losing information on the card.

1. Safely disconnect the USB device on your computer.
2. Open the notification drawer and touch **Turn off USB storage**.
3. Touch **Turn off** in the dialog that opens.

## 10. Unlock screen when using data connection


Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just touch it.

## 11. When screen freezes

If the phone does not respond to user input or the screen freezes: remove the battery, insert it again and power on the phone. If it still does not work, please contact to the service centre.

# Getting to know your phone

To turn on the phone, press and hold the **Power** key for 3 seconds.  
To turn off the phone, press the **Power** key for 3 seconds and touch **Power Off**.

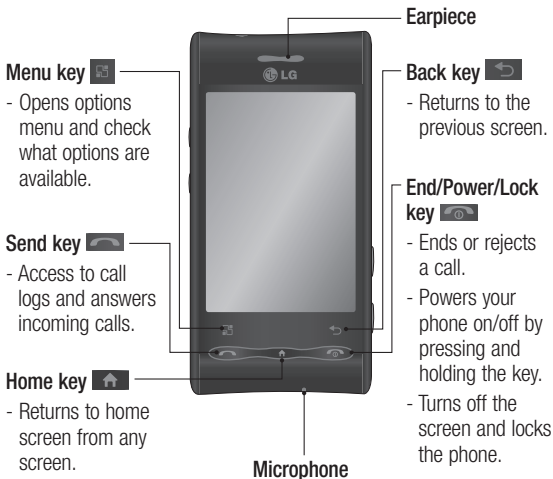

**TIP!** Touch the **Menu** key whenever you tap an application to check what options are available.

**TIP!** If your phone has errors when you use it or you can not turn it on, remove battery, install it again and turn it on after 5 seconds.

## Volume keys

- On the home screen: controls ringer volume.
- During a call: controls your earpiece volume.
- When playing a track: controls volume.



## Charger, micro USB cable connector



## Search key

- Search the web and contents in your phone.

## Camera key

- Go to the camera menu directly by pressing and holding the key.

## Stereo earphone connector

## Camera lens

## microSD memory card slot

## Charger, micro USB cable connector


## Search key

## Camera key

## Back cover

## Battery

## SIM card slot

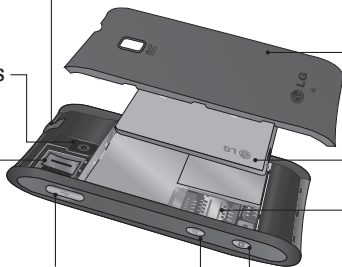

# Getting to know your phone


## Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1 With the back of the phone facing you, remove the back cover. To remove the back cover, firmly press your thumbs on either side of the back cover, and slide the cover below the camera lens.



- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.

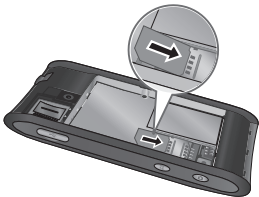


- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery, then gently press the battery until it snaps into space.

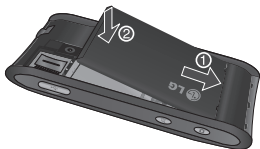

- 4 Replace the back cover of the phone and slide it down into place until the latch clicks.



## Charging your phone

Slide back the cover of the charger connector on the side of your GT540. Insert the charger, and plug it into an electrical outlet. Your GT540 must be charged until you can see .

**NOTE:** The battery must be fully charged initially to improve battery lifetime.



**NOTE:** The GT540 has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance.

# Getting to know your phone


## Installing the memory card

To store multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.



To insert a memory card:

**NOTE:** The GT540 supports upto a 32GB memory card.


- 1 Turn the phone off before inserting or removing the memory card. Remove the back cover.

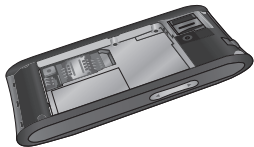

- 2 Open the slot protection and insert the memory card into the slot. Make sure the gold contact area is facing downwards.

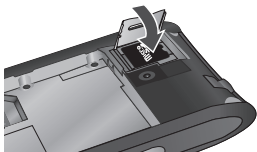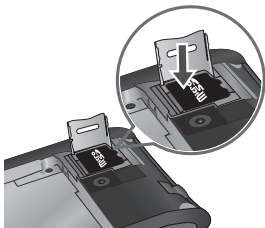

- 3 Close the slot protection.

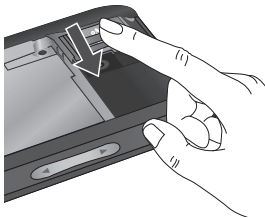

 **WARNING!**

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

## Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

**NOTE:** All files on the card are deleted when you format the card.

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Touch **Unmount SD Card**.
- 5 Touch **Format SD card**, then confirm your choice.

- 6 If you set the pattern lock, input the pattern lock and select **Erase Everything**. The card will then be formatted and ready to use.

**NOTE:** If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

### TIP!

If your memory card is already Unmount, you can use the following step to format it. Touch **Applications > Settings > SD card & phone storage > Format SD Card**.

# Your Home screen

## Touch-screen tips

Here are some tips on how to navigate around your phone.

**Touch** - To choose a menu/option or open an application, touch it.

**Touch and hold** - To open an options menu or grab an object you want to move, touch and hold it.

**Drag** - To scroll through a list or move slowly, drag across the touch screen.

**Flick** - To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

### NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

## Touch calibration

Calibrating the device screen involves tapping the centre of a cross as it moves around the screen. This process ensures that when you tap the screen, the tapped item is activated.

If your phone does not accurately respond to screen taps, follow these steps to re-calibrate.


- 1 Tap **Applications > Settings > Sound & display**, and scroll to the **Touch settings**.
- 2 Touch **Touch calibration**, and follow the instructions on the screen.
- 3 After calibration is completed, choose between **Check calibration** and **Save without check**, then complete calibration.

## Lock and unlock screen

Whenever your GT540 is not in use, it will return to the lock screen. If you do not use the phone for a while, the home screen or other screen you are viewing, is replaced with the lock screen when the screen blacks out, to conserve the battery.

To wake up your phone, press the **Send, Home**, or **Power** key.

The lock screen will appear.

Touch the unlock icon  and drag your finger to the right to unlock your home screen. The last screen you were working on opens.

**NOTE:** If there are any programs running when you set the pattern, they may be still running in lock mode. It is recommended to exit all programs before entering the lock mode to avoid unnecessary charges. (e.g., phone call, web access and data communications)

## TIP! Setting unlock pattern

You can draw your own unlock pattern by connecting four or more dots. If you set a pattern, the phone's screen is locked.

To unlock the phone, draw the pattern you set on the screen.

## Select your default home screen

The user interface is based on two types of home screens: **LG Home** and **Android Home**.

You can set your favourite home screen as the default.


If you want to change the default home settings, choose **Home selector** from the applications menu.


## Your Home screen

- In your LG home screen, you can view quick keys on the bottom of the screen. The quick keys provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** icon to bring up the touch-dialling pad to make a call.

 Touch the **Message** icon to access the messaging menu. Here, you can create a new message.

 Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications. Just touch to scroll through your applications.


- In your Android home screen, touch the **Applications** icon  to open the applications menu. Just touch and slide up or down the screen to scroll through your applications. When you open and view the applications menu, you can

touch **Home** icon  to return to the home screen.

## Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets, or folders to it. For more convenience using your phone, add your favourite widgets on the home screen.



**NOTE:** **LG Home** and **Android Home** provide this function. To add an desired icon to your home screen:

- 1 On the home screen, touch the **Menu** key  and select **Add**.
- 2 On the **Add to Home screen** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it.
- 4 Select **Contacts with phone numbers** from the list and tap it.


- 5 You will see a new folder's icon on the home screen. Drag it to the desired location on the desired panel and release your finger from the screen.


**TIP!** To add an application icon to home screen, touch and hold an application you want to add to home screen.

To remove an application icon from the home screen:


- 1 Touch and hold that icon. The **Applications** icon will be change as the **Trash** icon  .
- 2 Drag and drop an application icon to the **Trash** icon  .

## Getting back to a recently used application

- 1 Touch and hold the **Home** key  . The screen will show you a pop up with icons of applications that you've used recently.

- 2 Touch an icon to open its application. Or, touch **Back** key  to return to the current application.

## Notification drawer

The notification drawer runs across the top of your screen. Touch and hold, then slide the notification drawer down with your finger. Or, on the home screen, touch the **Menu** key  and select **Notifications**. Here, you can check Wi-Fi, Bluetooth, GPS status as well as other notifications.

## Viewing the status bar

The status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you're likely to see in the status bar.







# Your Home screen



[Status bar]

Icon	Description
	No SIM card
	No signal
	Connected to a Wi-Fi network
	Wired headset
	Call forward
	Call hold
	Speakerphone is on
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	System warning

Icon	Description
	Alarm is set
	New voicemail
	Airplane mode
	Ringer is silenced
	Vibrate mode
	No microSD card
	Battery fully charged
	Battery is charging
	Data in
	Data out
	Data in and out
	Phone is connected with PC via USB cable
	Downloading data
	Uploading data
	GPS is on

Icon	Description
	Receiving location data from GPS
	2 more notifications not displayed
	Call in progress
	Data is syncing
	Download finished
	New Google Mail
	New Google talk message
	New message
	Song is playing
	Upcoming event

## Onscreen keyboard

You can also enter text using the onscreen keyboard. The onscreen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

## Using the keypad & Entering text



Tap to swap between lowercase and uppercase. Tap to enter an uppercase letter. The next letter you type will be uppercase. Tap twice to turn on caps lock. The coloured circle on the button tells you if uppercase is locked on (green) or if it is just on for one character (orange).





Tap to enter a space.




Tap to turn on or off XT9 predictive mode.


## Your Home screen

 Tap to view the settings menu. Choose from **Editor settings, Keypad types, Handwriting settings, Writing language, User dictionary** and **Input method**.

 Tap to hide or show the onscreen keyboard.

 Tap to delete the previous character.

 Tap to switch to the numeric and symbol keyboard.

 Tap to create a new line in the message field.

## 123 Mode

This mode allows you to enter numbers in a text message (a telephone number, for example) more quickly. Touch the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

## XT9 predictive mode

The onscreen keyboard has predictive text to help you type quickly and accurately. XT9 predictive mode uses a built-in dictionary to recognise words based on the key number sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

# Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.

## Creating your Google account

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Tap **Googel Mail** and tap **Next > Create** to start the Google Mail set up wizard.
- 3 Touch a text field to open the touch keyboard, and enter your name and username for your Google account. When you entering the text, you can move to the next text field by touching **Next** on the keyboard.

- 4 When you're finished to input name and username, tap **Next**. Your phone is communicating with Google servers and checking username availability.
- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

## Signing in your Google account

- 1 Enter your e-mail address and password, then tap **Sign in**. Wait for signing in.
- 2 After sign in, you can use Google Mail and take advantages of Google services on your phone.

## Google Account Set-up

3 Once you have set up your Google account on your phone, your phone will be automatically synchronised with your Google account on the web. (It depends on your synchronisation settings.)

After sign in, you can use Google Mail, Google Calendar, Android Market and Google Map; download applications from Android Market; back up your settings to Google servers; and take advantage of other Google services on your phone.

### **IMPORTANT**






- Some applications, such as Google Calendar, work only with the first Google account you add. If you plan to use more than one Google account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Google Mail, calendar events, and other information


from these applications and services on the web are synchronised with your phone. If you don't sign into a Google account during setup, you will be prompted to sign in or to create a Google account the first time you start an application that requires one, such as Google Mail or Android Market.

- If you want to use the backup feature to restore your settings to this phone from another phone that was running Android OS or later, you must sign into your Google account now, during setup. If you wait until after setup is complete, your settings will not be restored.
- If you have an enterprise account through your company or other organisation, your IT department may have special instructions on how to sign into that account.

# Calls

## Making a call

- 1 On the home screen, press the **Send** key  and touch the **Phone** icon  to open the keyboard.
- 2 Enter the number on the keyboard. To delete a digit, touch the **Clear** icon .
- 3 Touch the **Call** icon  to make a call.
- 4 To end a call, touch **End** or press the **End** key .



**TIP!** To enter “+” to make international calls, touch and hold down .


## Calling your contacts


- 1 On the home screen, touch **Applications** tab to open the applications menu. Touch **Contacts** to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.

- 3 In the list, touch the contact you want to call, then select the number to use if there is more than one for that contact.

## Answering and rejecting a call

When your phone rings, press the **Send** key  to answer. You can also drag the **Answer** icon  to the right.

Press the **End** key  to reject an incoming call.




**TIP!** When the phone rings, touch and slide the **Silent** icon  to the left if you want to switch to silent mode.

## Adjusting call volume



To adjust the volume during a call, use volume up & down key on the left side of the phone.

# Calls

## Making a second call

- 1 During your initial call, touch .
- 2 Dial the number, or search your contacts to select the number you want to call.
- 3 Touch the **Call** icon  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch  to toggle between calls.

**NOTE:** You can touch  to make a conference call.

- 6 To end active call, Press **End** . To end all calls at the same time, touch the **Menu** key  and select **End all calls**.


**NOTE:** You will be charged for each call you make.

## Viewing your call logs

On the home screen, press the **Send** key  to view **Call log**.

View a complete list of all dialed, received, and missed voice calls.

**TIP!** Touch any single call log entry to view the date, time, and duration of the call.

**TIP!** Touch the **Menu** key , then touch **Clear call log** to delete all the recorded items.

## Call settings

You can configure phone call settings, such as call forwarding, call waiting, and other special features offered by your carrier.

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings**, and choose options that you want to adjust.

### < Fixed Dialing Numbers >

Select **Fixed Dialing Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

### < Voicemail >

Set up your voicemail number.

**Voicemail service** - Allows you to select your carrier's voicemail service or another service.

**Voicemail settings** - If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

### < Other call settings >

**Excuse Messages** - When you reject a call, you can send a message quickly by using this function. This is useful if you need to reply the message during a meeting.

**Call forwarding** – You can configure how your calls are forwarded when you're on the phone, when you don't answer, and so on. Choose from **Always forward**, **Forward when busy**, **Forward when unanswered**, or **Forward when unreachable**. Then enter the number to forward to.

**NOTE:** Diverting calls will incur charges. Please contact your network operator for details.

**Call barring** – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

**Call costs** – View the charges applied to your calls. (This service is network dependent; some operators do not support this function.)

**Call duration** – View the duration of all calls including all, dialed, received calls and the last call.

# Calls

**Additional settings** – This lets you change the following settings:

**Caller ID** : Choose whether to display your number on an outgoing call.

**Call waiting** : If call waiting is activated, the handset will notify you of an incoming call while you are on a call. (Depends on your network provider.)

**Select line** : Allows to select line.

# Contacts


You can add contacts on your phone and synchronise them with the contacts in your Google Account or other accounts that support syncing contacts.

## Searching for a contact

- 1 On the home screen, touch **Applications** tab to open the applications menu. Touch **Contacts** to open your contacts.
- 2 Touch **Search** and enter the contact name using the keypad.


## Adding a new contact

- 1 On the home screen, press the **Send** key  and touch **Phone**  to open the keypad. Enter the new contact's number, then touch the **Menu** key , touch **Add to contacts** and then **Create new contact**.

- 2 If you want to add a picture to the new contact, touch . You can use a saved picture or take a new one.
- 3 Select the contact type and choose from **Phone**, **SIM** and your Google account.
- 4 Touch a text field to open the touch keyboard, and enter a new contact's name.
- 5 Touch a category of contact information and enter the details about your contact.
- 6 Touch **Done** to save the contact.

## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 On the list of your contact, touch the **Menu** key  and select **More > Speed Dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.

# Contacts


3 Your contacts will open. Select the contact you want to assign to that number by touching their phone number once.

**NOTE:** To remove the speed dial contact from the list, touch and hold the assigned contact. When the pop up screen is shown, tap **Remove** then select **OK**.


## Favourite contacts

You can classify frequently called contacts as favourites.

### To add a contact to your favourites

- 1 On the home screen, touch  to open your contacts.
- 2 Touch a contact to view its details.
- 3 Touch the star to the right of the contact's name. The star turns gold.

### To remove a contact from your favourites list

- 1 On the home screen, touch  to open your contacts.

2 Touch the **Favorites** tab and choose a contact to view its details.

3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.


# Messaging/E-mail


## Messaging


Your GT540 combines SMS and MMS into one intuitive, easy-to-use menu.

### Sending a message

- 1 On the home screen, touch **Applications** tab to open the applications menu. Touch **Messaging** and touch **New message** to open a blank message.
- 2 Enter a contact name in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient or continue entering the contact name. You can add multiple contacts.  
**NOTE:** You will be charged for a text message for every person you send the message to.
- 3 Touch **Type to compose** to start entering your message.

- 4 Touch the **Menu** key  to open the options menu. Choose from **Add subject**, **Attach**, **Send**, **Insert smiley**, **Discard**, and **All threads**.
- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message after your name. Responses appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

# Messaging/E-mail

## Changing your message settings

Your GT540 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging** icon on the home screen, then touch the **Menu** key . Tap **Settings**.

### < Storage settings >

**Delete old messages** – Touch to place a checkmark and allow the phone to delete older messages in a thread when the **Text message limit** or **Multimedia message** limit is reached.

Uncheck to keep all messages.

**Text message limit** – Touch to set the number of messages to save per thread of text messages.

**Multimedia message limit** – Touch to set the number of messages to save per thread of multimedia messages.

### <Text message (SMS) settings>

**Delivery reports** – Activate to receive confirmation that your messages have been delivered.

**Manage SIM card messages** – Manage the messages stored on your SIM card.

**Validity period** – Choose how long your messages are stored in the message centre.

**Text message centre** – Enter the details of your message centre.

### <Multimedia message (MMS) settings>

**Delivery report** – Choose to request a delivery report.

**Delivery report allow** – Choose to allow the sending of delivery confirmation message.

**Read reports** – Choose to request a read report for each message you send.

**Read report allow** – Choose to allow the sending of read confirmation message.

**Auto-retrieve** – Activate to retrieve messages automatically.

**Roaming auto-retrieve** – Activate to retrieve messages while roaming.

**Set priority** – Choose the priority level of your MMS.

**Validity period** – Choose how long your message is stored in the message centre.

### **Creation mode**

**Restricted:** In this mode, the MMS Client device only creates and sends messages with content belonging to the Core MM Content Domain.

**Warning:** In this mode, the MMS Client device guides the user in creating and sending messages with content belonging to the Core MM Content Domain. This guidance is provided through warning dialogs.

**Free:** In this mode, the MMS Client allows the user to add any content to the message.

**Receive advertisement** – Allows receiving advertisement messages.

### **< Service message >**

Choose whether to receive or block service messages.

### **< Notification settings >**

Activate to display message notifications in the status bar. Also select a ringtone and activate vibrate to alert you of new messages.

### **< Info. Service settings >**

Choose whether to receive, block, or view or edit channels to receive information service messages (cell broadcast messages). Also choose the languages of information service messages.

# Messaging/E-mail

## Setting up your email

Keep in touch while on the move by using your GT540 to send emails. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 On the home screen, touch **Applications** tab and tap **Email** to view the mail boxes for each email account. Or, you can also touch **Email** on the home screen to access directly.
- 2 If the email account is not set up, start the email setup wizard.

**TIP!** If an email account is already set up, the wizard is not activated automatically.

## Sending an email using your new account

- 1 Touch **Email** icon on the home screen, and then touch **Compose** icon to open a new blank message.

- 2 Enter the recipient's address, then write your message. You can also attach images, videos, audio files, and various document file formats.
- 3 Touch **Send** icon to send your email.

**TIP!** During an active Wi-Fi connection, emails are sent and received using Wi-Fi.

## Retrieving your email


You can automatically or manually check your account for new email.

To check manually:

- 1 Touch **Email** icon on the home screen.
- 2 Then touch the account you want to use.
- 3 Choose **Refresh** and your GT540 will then connect to your email account and retrieve your new messages.

## Changing your email account's settings

You can change your email settings based on your own preferences.


- 1 Touch **Email** icon on the home screen, and tap the desired account.
- 2 Touch the **Menu** key  to open the options menu, and tap **Settings**.
- 3 You can adjust the following options: **Account Setup**, **General Settings**, **Download Options**, and **Spam message**.

# Camera

## Getting to know the viewfinder

**Brightness** – This defines and controls of the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

**Zoom** – Zoom in or zoom out. Alternatively you can use the side volume keys.

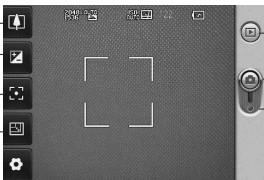

**Gallery** – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

**Taking a photo**

**Video mode** – Slide down this icon to switch to video mode.

**Settings** – Touch this icon to open the settings menu. See **Using the advanced settings**.

**Image size** – Touch to set the size (in pixels) of the picture you take. Select a pixel value from the numerical options: 3M (2048x1536), 2M (1600x1200), 1M (1280x960), VGA (640x480), QVGA (320x240).

**Focus** – Touch this icon to select the options menu. See **Using the focus mode**.

**NOTE:** You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to save the picture you had taken.

**TIP!** You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

## Using the focus mode

You can select the focus mode as following options;

**AF** (Auto Focus) – Set the camera to focus automatically.

**Macro** – Macro mode allows you to take extreme close-ups. If you are trying to take a close-up shot but the focus box remains red, try turning the macro mode on.

**Face tracking** – If you set Face tracking and take a photo, your camera detects and focuses on human faces automatically.

**NOTE:** Zoom is not supported in Face tracking mode.

**MF** (Manual Focus) – Set the camera to focus manually.

## Taking a quick photo

- 1 Press and hold the camera key on the right side of the phone.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Press the capture button lightly, and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the subject in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button and hold it down.

# Camera

## Once you've taken the photo

Your captured photo will appear on the screen.

**Share** Touch to share your photo as **Bluetooth**, **Email**, **Facebook for LG**, **Google Mail**, **Messaging**, **Picasa** or **Twitter for LG**.

**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.


**Set as** Touch to use the image as **Contact icon** or **Wallpaper**.


**Rename** Touch to edit the name of the selected picture.

**Edit** Touch to edit the image using various tools.

 Touch to view a gallery of your saved photos.


 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to return to the previous menu.

## Using the advanced settings

In the viewfinder, touch  to open all advanced options.

You can change the camera setting by scrolling the wheel. After selecting the option, touch the **Back** key .

**Image quality** – Choose from **Super Fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

**White balance** – Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.


**Shot mode** – Choose from **Normal**, **Continuous shot**, **Beauty shot**, **Frame shot**, **Panorama shot**, **Art shot**, and **Smile shot**.

**Timer** – The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

**ISO** – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful under darker conditions when you cannot use the flash. Select from ISO values of **Auto**, **100**, **200**, and **400**.

**Scene mode** – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night**, and **Sunset**.

**Color effect** – Choose a colour tone for your new photo.

Once you've made your selection, use the **Back** key  to close the colour tone menu. You are then ready to take a picture.

**NOTE:** You can change a colour picture to black and white or sepia, but you cannot change a black-and-white or sepia picture to colour.

**Captured image** – Choose from **Hold**, **On**, and **Off**. If you select **Hold**, after taken picture screen is shown for 1 second, and it goes to the preview right away.

**Grid screen** – Choose from **Off**, **2x2**, or **3x3**.

**Shutter sound** – Select one of the four shutter sounds.

**GEO-Tagging** – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

**NOTE:** This function is only available when GPS is active.

# Camera

**Hide icons** – Choose the camera setting icons to hide manually or automatically.


**Blink detection** – Turn this on to display a red box around the face that was blinking in the preview image screen.

**Reset** – Restore all camera default settings.

**TIP!** When you exit the camera, all settings will return to their defaults, except image size and image quality. Any nondefault settings must be reset, such as colour tone and ISO. Check these before you take your next photo.

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

## Viewing your saved photos


- 1 You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen.

# Video camera

## Getting to know the viewfinder

**Brightness** – This defines and controls of the amount of sunlight entering the Video. Slide the brightness indicator along the bar, towards “-” for a lower brightness Video, or towards “+” for a higher brightness Video.

**Zoom** – Zoom in or zoom out. Alternatively you can use the side volume keys. Before starting record a video, you can use the zoom function. You can not control the zoom function during recording.

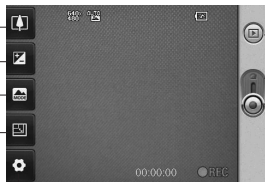

**Gallery** – This enables you to access your saved photos & Videos from within the video camera mode. Simply touch, and your gallery will appear on the screen.

**Camera mode** – Slide up this icon to switch to camera mode.

**Start recording**



**Settings** – Touch this icon to open the settings menu. See **Using the advanced settings**.

**Video size** – Touch to set the size (in pixels) of the video you record. Choose your video image size from VGA (640x480), QVGA (320x240) or QCIF (176x144).

**Scene mode** – Set the camera to adjust to the environment. Choose from **Auto, Portrait, Landscape, Sports, Sunset and Night**.

# Video camera

## Shooting a quick video

- 1 Press and hold the camera key on the right side of the phone.
- 2 Then slide the capture button down position, the icon will change to .
- 3 The video camera's viewfinder will appear on the screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 REC will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 7 Touch  on the screen to stop recording.

## After shooting a video

A still image representing your video will appear on the screen.


**Share** Touch to share your video as **Bluetooth**, **Email**, **Google Mail**, **Messaging** or **YouTube**.


**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.


**Play** Touch to play the video.


**Rename** Touch to edit the name of the selected video.

**Edit** Touch to enter editing mode on this video.


 Touch to access the media player and view the saved videos.


 Touch to delete the video you just made, and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video right away. Your current video will be saved.

 Touch to return to the previous menu.

## Using the advanced settings

Using the viewfinder, touch  to open all the advanced options. Adjust the video camera setting

by scrolling the wheel. After selecting the option, touch the **Back** key .

**Color effect** – Choose a colour tone to use for your new view.

**White balance** – The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

**Duration** – Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

**TIP!** When choosing MMS duration, the video quality will be set as QCIF and you can shoot longer videos.

**Audio recording** – Choose **Mute** to record a video without sound.


**Hide icons** – Select whether to hide the icons in the video camera menu automatically or manually.

**Recorded video** – Choose from **Hold**, **On**, and **Off**. If you select **Hold**, after recorded video screen is shown for 1 second, and it goes to the preview right away.

**Reset** – Reset all the video camera settings.


**TIP!** You can change a video shot in colour to black and white or sepia, but you cannot change a black-and-white or sepia video to colour.

## Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts to play automatically.

# Your photos and videos

## Viewing your photos and videos


- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

**TIP!** Flick left or right to view other photos or videos.

## Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left side of the phone.

## Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the **Menu** key .
- 3 Tap on more>set as>then select wallpaper>select the region in the photo which you


want to set>>then press “√” mark below the image to set as wallpaper.


## Editing your photos


You can do lots of great things to your photos to change them, add to them, or liven them up.

- 1 Open the photo you want to edit, then touch the **Menu** key .
- 2 Touch **Edit** to change your photo:

 **Rotate & Flip** – Rotate or flip your photo for fun or a better view.

 **Crop** – Crop your photo. Choose a square or circular crop area, then move your finger across the screen to select the area.

 **Tuning** – This helps you adjust a picture using automatic colour, brightness, and so on.

 **Effect** – Touch to apply the effect options to a photo.



**Frame** – Add frames to the photo.



**Text** – Add text to a picture.



**Clipart** – Add clipart to a photo.



**Drawpad** – Draw on your photo, freehand. Select the line thickness from the four options, then choose the colour you want.



**Stamp** – Decorate your photo with stamps. Choose from the different stamps, then touch your photo where you want to place them.



**Resize** – Resize your photo.








Save the changes you made to the photos.




Delete your photo edits.

## Rotating your photo



- 1 On the editing screen, touch  .
- 2  Rotate 90° counterclockwise
- 3  Rotate 90° clockwise
- 3  Flip vertically
- 4  Flip horizontally

## Adding text to a photo


- 1 On the editing screen, touch  .
- 2 Select the colour of the text, then choose one of the bubble shapes.
- 3 Enter your text using the keypad, then touch **OK**.
- 4 Move the text by touching it and sliding it to where you want it.

# Your photos and videos


## Adding an effect to a photo

- 1 On the editing screen, touch  .
- 2 You can apply any of the various options to the photo.
- 3 To undo an effect, simply touch  .

## Cropping a photo





- 1 On the editing screen, touch  .
- 2 Choose the shape you want to use to crop the picture.
- 3 Drag the box over the area you want to crop. Move the selected area by dragging.
- 4 When you are finished with your selection, touch Done icon in the right bottom of the image.

## Tuning your photo





- 1 On the editing screen, touch  . Use the tuning toolbar to adjust your photo's tuning as you like.

- 2  Choose to adjust the tuning settings automatically.
- 3  Choose to compare before and after tuning.
- 4  Adjust the brightness and contrast of the photo.
- 5  Adjust highlights and shadows.
- 6  Balance your photo's colour.
- 7  Adjust the saturation of your photo.
- 8  Adjust your photo's sharpness.
- 9  Denoise.

## Adding frames

- 1 On the editing screen, touch  .
- 2 Touch  or  to choose a frame.
- 3 Touch  to check the whole frame.




## Adding clipart

- 1 Touch  on the editing screen.
- 2 Touch , then select clipart.
- 3 Adjust the size of the clipart.
- 4 Rotate clipart using  and .


## Using the drawpad

- 1 Touch  on the editing screen.
- 2 Touch  to select the shape.
- 3 Also, set the colour and thickness.
- 4 You can delete the drawing you added using .

## Adding stamps

- 1 Touch  on the editing screen.
- 2 Touch  to see which stamps are available and to select the stamp.
- 3 Touch the screen where you want to add the stamp to the photo.
- 4 Adjust the colour using .




## Resizing

- 1 Touch  on the editing screen.
- 2 Scroll the bar to resize the photo.



## Editing your videos

The video editing features are available for the MPEG-4 format.

## Trimming the length of the video

- 1 Select **Edit**, then choose .
- 2 Touch . Then set the new start and end points. Touch **OK** and select **Next Icon**.
- 3 Touch  to return to the gallery and discard the changes.



## Selecting transition style

- 1 Select a transition style, then touch  to preview it.
- 2 Touch , then drag the bar to adjust the duration time

## Your photos and videos


- 3 Touch **OK** to save the transition. Touch **Apply** to apply the currently selected transition. Choose **Apply To All** to apply the currently selected transition to all video files in the storyboard.

### Adding subtitles

- 1 Open the video you want to edit.
- 2 Select **Edit**, then select  to add subtitles to the video.
- 3 Touch , then pause playback to set the start point for text appearance.
- 4 Touch **Start**, then choose the text style. Enter your text using the keypad, then select **Done**.
- 5 Touch the area of the screen where you want the text to appear, then touch **OK**.
- 6 select right arrow icon then save. This file will be saved as new file.



- 7 Repeat these steps to add more text.

### Adding edit effects

- 1 Open the video you want to edit.
- 2 Select **Edit**, then select .
- 3 Select an effect to add to the photo.

### Grabbing a frame

Capture a picture from the video.

- 1 Open the video you want to edit.
- 2 Select **Edit**, then and select .
- 3 Play the video, then touch  to capture the screen you want while the video is playing.
- 4 The frame is saved to the phone as a still image file.

## Adding dubbing to your video

- 1 Open the video you want to edit.
- 2 Select **Edit** , then choose  .
- 3 Touch  . The **My Sounds** folder will open. Choose the track you want to add to your video.
- 4 The original audio track on your video will be deleted.
- 5 select right arrow icon then save.This file will be saved as new file.
- 6 Or you can record a new file and insert live dubbing by touching  .
- 7 Touch OK to save the current dubbing.

# Multimedia

You can store multimedia files to a memory card to have easy access to all your image and video files.

Touch **Applications** tab, then select **Gallery**. You can open a list of catalogue bars that store all your multimedia files.

**NOTE:** Make sure you install a memory card into the phone to save photos and access all your pictures. Without a memory card, the phone will not display any photos or videos.

There are six catalogue bars as shown below.

**All**  : Displays all your pictures and videos.

**Favorite**  : If you touch and hold a photo or video, the option screen will appear allowing you to tag the photo as a favourite. This **Favorite** bar will show your favourite photos and videos.

**Camera**  : Displays all your photos.

**Image**  : Displays all your images.

**Video**  : Displays all your videos.

**Tag**  : Like the **Favorite** bar, you can tag photos. This bar displays your tagged photos and videos.

## Timeline view

The GT540 **Gallery** provides a timeline view of your photos and videos. On the left side of the screen, the date you took your photos will be displayed, from oldest to newest. If you select a specific date, all the photos you took on that day will be grouped over a white background.

## My images options menu

Select a photo, then touch and hold to see the available options.

## Sending a photo

- 1 To send a photo, touch and hold the photo you want.

- 2 Select **Share**. Choose from **Bluetooth, Email, Facebook for LG, Google Mail, Messaging, Picasa** or **Twitter for LG**.
- 3 When you choose **Email, Google Mail** or **Messaging**, your photo will be attached to a message, then you write and send the message normally.

**TIP!** If you have a SNS account and set it up on your phone, you can share your photo to SNS community.

## Sending a video

- 1 To send a video, touch and hold the video you want.
- 2 Select **Share**. Choose from **Bluetooth, Email, Google Mail, Messaging**, or **YouTube**.
- 3 When you choose **Email, Google Mail** or **Messaging**, your video will be attached to a message, then you write and send the message normally.

## Using an image

Choose images to use as wallpaper or identify callers.

- 1 Touch and hold a photo, then select **Set as**.
- 2 Choose from **Contact icon** or **Wallpaper**.

## Creating a slideshow

If you want to view all the images on your phone, you can create a slideshow so you don't have to open and close each image.

- 1 Touch and hold a photo, then select **Slideshow**.

## Checking your photo

You can view a photo's detailed information, such as **Name, Date, Time, Resolution, Size, Type**, and **Tag**.

- 1 Touch and hold a photo, then select **Detail**.

# Multimedia

## Media Player

The **Media Player** folder displays a list of videos you downloaded to or recorded on your phone.

### Watching a video

- 1 Select **Media Player** on the **Applications** tab.
- 2 Touch **Video** and select a video to play.

**TIP!** The GT540 supports DivX video playback to ensure greater content availability.

Touch **Music** and select a music to play.



## Video editor

- 1 On the home screen, touch **Applications** tab and select **Video editor** .

## Storyboard

- 1  **Import Files** – Add media files to the storyboard. You can add up to 32 media files.
- 2  **Set BGM** – Add background music to the storyboard, or change the sound.
- 3  **Preview** – Preview the video file you created.
- 4  **Save** – Save the video file you created.
- 5  **Add Text** – Add a text frame into storyboard.
- 6  **Clip Manager** – Manage the added media files. If no media files were added, the button is disabled.

You must touch  first to edit the video.

-  – Touch to select all the files, but the maximum is 32 files.
-  – Touch to deselect all the files.

25/32 – This shows the selected file number.

 Touch to go to the next step.


## Music movie


1 Flip left and right to check the various styles. For **Music movie**, you can select only photos.



 – Return to the **Video editor** screen.

 – Display the style name and description.

 – Preview the style.

 – Touch to select photos.

2 After you select photos, touch  to proceed to the next step.

3 Touch  to select all the photos, then touch .

4 Select the music, then set it as the background music.


5 Add movie title using the keypad, then save it.


6 Touch  to play the complete video file.

7 Touch  to save the video file you created.

## Auto cut

There are three style templates: **Portrait**, **Landscape**, and **Motion object**.

1 Touch , then select a video. Go to the next step.

2 Touch  to preview the video file.

3 Touch  to save the file.

## Playing a game

1 You can download a range of games from the Android Market.

2 To Launch tap on the a game or an application.

**NOTE:** Additional charges may apply when using this service to download games or applications that are not free.

# Multimedia

**NOTE:** Java game and application installation are only possible through the Web.

## Transferring files using USB mass storage devices

To transfer files using USB devices:

- 1 Connect the GT540 to a PC using a USB cable.
- 2 If you didn't install LG Android Platform Driver on your PC, you need to change settings manually. Choose **Settings > SD card & phone storage > activate Mass storage only.**
- 3 Touch **Turn on USB storage.**
- 4 You can view the mass storage contents on your PC and transfer the files.

**NOTE:** You need to install your microSD card first. Without an microSD card, you cannot use USB mass storage.

**NOTE:** If you installed LG Android Platform Driver, you will see pop up with 'Turn on USB storage' immediately.

**NOTE:** After using USB mass storage function, if you want to synchronise your phone with your PC using the LG PC suite, you need to touch **Settings > SD card & phone storage**, then touch the checkmark to turn off **Mass storage only** mode.

## Music

Your GT540 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch **Music**.





**Artists** – Browse your music collection by artist.

**Albums** – Browse your music collection by album.

**Songs** – Contains all the songs you have on your phone.

**Playlists** – Contains the playlists you created.

## Playing a song

- 1 On the home screen, touch **Applications** tab and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the first part of the song. Touch  two times to go back to the previous song.

To change the volume while listening to music, press the up and down volume keys on the left side of the phone.

Touch and hold any song in the list. It will display **Play**, **Add to playlist**, **Delete**, and **Search** as options.

**NOTE:** Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

## Using the radio

Your GT540 has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

**NOTE:** You must attach your headphones to listen to the radio. Insert them into the headphone jack.


# Multimedia

## Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning in.

You can store up to 48 channels on your phone.

To tune in automatically

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the **Menu** key .
- 3 Touch **Auto scan**, then touch **OK**.

**NOTE:** You can also manually tune in to a station using the wheel displayed next to the radio frequency.

## Resetting channels

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Choose **Reset channel** to reset the current channel, or choose **Reset all channels** to reset all the channels.

## Listening to the radio

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the channel number of the station you want to listen to.

**TIP!** To improve radio reception, extend the headset cord, which functions as the radio antenna.

### **WARNING**

If you connect a headset not specifically made for radio reception, radio reception may be poor.

# Google applications

- 1 First, set up a Google account. Enter your user name and password.
- 2 After signing in, your contacts, email, and calendar in your Google account will automatically synchronise with your GT540.


## Google Maps


Check your current location and traffic and receive directions to your destination. The GT540 must be connected to Wi-Fi or 3G/GPRS.

**NOTE:** Google Maps does not cover all cities and countries.


Touch **Menu**  key to use options:

 **Search** – Enter the place you are looking for.

 **Directions** – This will let you find out the route of your entered place.

 **Layers** – You can switch view from Traffic to Satellite or Terrain. Tap Latitude then you will see the location of your contacts from Google account.

 **My Location** – Point your current location on the map.

 **Join Latitude** – Share your location with friends you choose and Google.

 **More** – Clear map or find Starred items and more.

## Android Market




Android Market lets you download useful applications and games. If you install applications and games from Android Market, they appear in the GT540 menu.

You can check downloaded application by tapping Downloads tab.



You can check other's comment regarding an application or you can post your comments.

- 1 Select a category from Apps and Games to browse its contents. It will show you Top paid, Top free and Just in.
- 2 Choose an application to install.

# Google applications

**NOTE:** When you want to finish the game, use the **Home**  or **Back** key . You will return to the home screen. Or use the **Menu** key  of the game.

## Google Mail

Google Mail is configured when you first set up your phone. Depending on your synchronisation settings, Google Mail on your phone is automatically synchronised with your Google Mail account on the web. The inbox conversations list is your default Google Mail view. Touch the **Menu** key , then touch **Refresh** to send or receive new emails and to synchronise your emails with your Google Mail account on the web. With **Menu** key , you can compose an email, **Add account**, **Go to labels**, **Search** and **More**.


## Google Talk

Google Talk is Google's instant messaging program. It lets you communicate with other people who also use Google Talk.


Press the **Menu** key  and check available options.


 **All friends** – Join all friends to communicate.

 **Add friend** – Send invitation to chat.

 **Search** – It search any chat that contains your entered word or sentences.



**Sign Out** – If you want to sign out from chat then select menu key  then tap on more and select signout.


 **Settings** – Adjust indicator or notification. etc.

 **More** – From here, you can find options like close all chats, change settings, sign out and terms and policy.


# Utilities

## Setting your alarm

- 1 On the home screen, touch **Applications** tab and select **Clock**. The clock application opens with the date and time displayed on your home screen.
- 2 If you want to add a new alarm, touch the alarm icon  at the bottom of the **Clock** screen.  
Touch an existing alarm to change its time and other attributes or touch **Add alarm** to add a new one.
- 3 Touch  to turn on the alarm, and set the time you want the alarm to sound. After you set the time, the GT540 will let you know how much time is left before the alarm sounds.
- 4 Set **Repeat**, **Ringtone** or **Vibrate** and add **Label** to name the alarm. Touch **Done**.

**NOTE:** To change alarm settings, on the **Clock** screen, touch the **Menu** key , and touch **Settings**.

## Using your calculator

- 1 On the home screen, touch **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x, or ÷), followed by =.
- 4 For more complex calculations, touch the **Menu** key , touch the **Advanced panel**, then choose **sin**, **cos**, **tan**, **log**, and so on.


## Adding an event to your calendar

- 1 On the home screen, touch **Applications** tab and select **Calendar**.
- 2 First, you must create a Google account to use Calendar.

## Utilities


- 3 Select the date you want to add an event to.
- 4 Touch the **Menu** key , then touch **New event**.
- 5 Touch **What**, then enter the event name. Check the date and enter the time you want your event to begin. Enter the time and date the event finishes in the lower date and time boxes.
- 6 Also, touch **Where**, then enter the location.
- 7 If you would like to add a note to your event, touch **Description** and enter the details.
- 8 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 9 Touch **Done** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.

## Changing your calendar view

- 1 On the home screen, touch **Applications** tab and select **Calendar**. Touch the **Menu** key .
- 2 Select the calendar view for a particular day, week, or month.

## Quickoffice


Quickoffice allows you to read documents, but the edit function is not available. PDF, Text, Microsoft Word/Excel/PowerPoint files are supported.

- 1 On the home screen, touch **Applications** tab and select **Quickoffice**.
- 2 Choose **Memory card**. You can see the files and folder list. If you choose **Recent documents**, files you recently viewed will be displayed.
- 3 Choose a file, then touch the **Menu** key  to view the available options.

## Voice recorder

Use the voice recorder to record voice memos or other audio files.

### Recording a sound or voice

- 1 On the home screen, touch **Applications** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end recording.
- 4 Touch the **Menu** key  and select **Set as** to set as the **Phone ringtone** or **Notification ringtone**.

**NOTE:** Touch **Go to list** to access your album. You can listen to the saved recording.

## Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching the **Menu** key  and **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Google Mail** and **Messaging**. When you select **Email**, **Google Mail** and **Messaging**, the voice recording will be added to the message that you write and send it normally.

# The Web

## Browser

Browser gives you a fast, full-colour world of games, music, news, sports, entertainment, and much more, right on your mobile phone. Wherever you are and whatever you're into.


## Accessing the web

1 On the home screen, touch **Applications** tab and select **Browser**.

2 You will move to the website.

**NOTE:** Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

## Using options

Touch the **Menu** key  to view options.

 **New window** – Open a new window.

 **Bookmark** – Add/Show Bookmark, show Most Visited Site and History.

 **Window** – Show all your open windows.


 **Refresh** – Touch to refresh the web page.

 **More**

- **Add bookmark** – Set the current web page as a bookmark.
- **Find on page** – Marks all the letters you enter.
- **Select text** – Touch and select the lines you want to copy. You can paste it to any input box.
- **Page info** – Show page information.
- **Share page** – Send page by email, messaging or you social network community.
- **Downloads** – Show download history.
- **Setting** – Set browser settings.

## Adding and accessing bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 On the home screen, touch **Applications** tab and select **Browser**.
- 2 Touch the **Menu** key  then select **More > Bookmarks**.  
A list of your bookmarks will appear on the screen.
- 3 Select **Add Bookmarks**, then enter a name for the bookmark followed by its URL.
- 4 Touch **OK**. Your bookmark will now appear in the bookmark list.
- 5 To access the bookmark, simply touch the bookmark. You will be connected to the bookmarked page.

## Changing the web browser settings

Touch the **Menu** key  then select **More > Settings**.

You can change the page layout (e.g., text size, text encoding), change the home page, manage cache, cookie, and security settings, and so on.

# Settings


On the home screen, touch **Applications** tab then scroll and touch **Settings**.

## Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. Also, you can set mobile networks, airplane mode.

**Airplane mode** – After setting Airplane mode, all wireless connections will be disabled.

**Wi-Fi** – Touch to checkmark: Turns on Wi-Fi to connect to available Wi-Fi networks.

**Wi-Fi settings** – Allows you to set up and manage wireless access points. Set network notification, or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Touch the **Menu** key  and touch **Advanced**.

**Bluetooth** – Touch to checkmark: Turns on Bluetooth to connect to Bluetooth devices.

**Bluetooth settings** – Set device name & discoverable, scan for other devices. Or, check a list of Bluetooth devices that you've previously configured and those detected when the phone last scanned for Bluetooth devices.

**VPN settings** – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

**Mobile network** – Turn on mobile network.

**Mobile network settings** – Set options for data roaming, network mode & operators, access point names (APNs), and so on.

## Sound & display

< **Sound settings** >

**Silent mode** – Allows you to silence all sounds (including call and notification ringtones) except the audio from music, videos, and any alarms you have set. (You must silence media and alarms in their own applications.)

**Ringer volume** – Allows you to set the incoming call and notification volume. If you uncheck the option to use the same volume for both calls and notifications, you can set both volumes separately.

**Media volume** – Allows you to set the volume for music and videos.

**Phone ringtone** – Allows you to set your default incoming call ringtone.

**Phone vibrate** – Allows you to set your phone to vibrate when you receive an incoming call, independent of your ringtone or volume settings.

**Notification ringtone** – Allows you to set your default notification ringtone.

**Audible touch tones** – Allows you to set the phone to play tones when using the dial keypad to dial numbers.

**Audible selection** – Allows you to set your phone to play a sound when you touch buttons, icons, and other onscreen items that react to your touch.

**Haptic feedback** – Allows you to set your phone to vibrate briefly when you touch the **Menu** key, **Back** key, and perform other actions.

**SD card notifications** – Allows you to set your phone to play a sound when you receive microSD card notifications.

### < Display settings >

**Orientation** – Allows you to set the orientation to automatically switch to landscape mode or portrait mode when you turn the phone sideways or upright.

**Animation** – Allows you to set animated transitions when navigating from screen to screen.

**Brightness** – Adjust the brightness of the screen.

**Screen timeout** – Allows you to adjust the delay time before the screen automatically turns off. For the best battery performance, use the shortest convenient timeout.

# Settings

## < Touch settings >

**Touch calibration** – Reset your screen for ease of use.

## Location & security

### < My Location >

**Use wireless networks** – If you check **Use wireless networks**, your phone will determine your approximate location by using Wi-Fi and mobile networks.

**Use GPS Satellites** – If you check **Use GPS satellites**, your phone will determine your location to street-level accuracy.

### < Screen unlock pattern >

**Set unlock pattern** – Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set PIN or Password instead of Pattern or leave it as None.

**Require pattern** – Uncheck to stop requiring an unlock pattern to unlock your screen. You must draw your current pattern when you uncheck this option.

**Use visible pattern**— Allows you to set the pattern to be visible when unlocking your phone.

**Use tactile feedback** – Allows you to set your phone to vibrate briefly as you touch each dot when you draw an unlock pattern.

### To lock your screen by using the Pattern Lock

- 1 The first time you do this, a short tutorial about creating an unlock pattern appears.
- 2 You're prompted to draw and redraw your own pattern.

The next time you turn on your phone or wake up the screen, you're prompted to draw your unlock pattern to unlock the screen.

### < SIM card lock >

**Set up SIM card lock** – Set up SIM card lock or change SIM PIN.

## < Passwords >

**Visible passwords** – Select to show passwords as you type them or deselect to hide passwords as you type them.

## < Credential storage >

### **Use secure credentials** –

Checkmark to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the credential storage, this setting is dimmed.

**Install from SD card** – Allows you to install encrypted certificates from a microSD card.

**Set password** – Allows you to set or change the password for your secure credential storage. Your password must have at least 8 characters.

**Clear storage** – Deletes all secure certificates and related credentials and erases the secure storage's own password.

## Applications

**Unknown sources** – Permits installation of applications that you obtain from websites, email, or other locations other than Android Market.

### **WARNING**

To protect your phone and personal data, download applications only from trusted sources, such as Android Market.

**Manage applications** – Manage and remove installed applications.

**Running services** – Allows you to view and control currently running services and applications. This option displays what processes each running service needs and how much memory it is using.

**Development** – Allows you to set options for application development, such as **USB debugging**, **Stay awake**, and **Allow mock locations**.

# Settings

## Accounts & sync

### < General sync settings >

**Background data** – Permits applications to synchronise data in the background, whether or not you are actively working in them. Unchecking this setting can save battery power and lowers (but does not eliminate) data use.

**Auto-sync** – Permits applications to synchronise, send, and receive data on their own schedule.

### < Manage accounts >

List of all Google accounts and other accounts you've added to the phone.

If you touch an account in this screen, its account screen opens.

## Privacy

### < Location >

**Use My Location** – Allows you to include your position when using Google search and other Google services. When you checkmark this option, you're asked whether you consent to allowing Google to use your location when providing these services.

### < Personal data >

**Factory data reset** – Erases all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application data and settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to reenter the same kind of information as when you first started Android.

## SD card & phone storage

### < USB connection mode >

**Mass storage only** – Your phone can be used as a mass storage device if you have a memory card inserted. You can set the **Mass storage only** as a default setting of USB connection mode.

### < SD Card >

Check total space and available space. Touch **Unmount SD card** for safe removal. **Format SD card**, if you want to delete all data from the microSD card. You must unmount a microSD card before you can format it.

### < Internal phone storage >

Check the **Available space**. Lists the amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

## Search

You use the **Search** settings to configure Google search, Quick search box, and the data on the phone that you want to include in searches.

## Language & keyboard

Use the **Language & keyboard** settings to select the language and region for the text on your phone and for configuring the onscreen keyboard, including words that you've added to its dictionary.

## Accessibility

You use the **Accessibility** settings to configure any accessibility plug-ins you have installed on your phone.

**NOTE:** Requires additional plug-ins to become selectable.

# Settings

## Text-to-speech

You use the Text-to-speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

**NOTE:** If you don't have speech synthesiser data installed, only the **Install voice data** setting is available.

## Date & time

Use **Date & time** settings to set your references for how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

## About phone

View legal information, and check phone status and software version.

# Wi-Fi

With Wi-Fi, you can use highspeed Internet access within the coverage of the wireless access point (AP).

You can enjoy wireless Internet with Wi-Fi, without extra charges.

## NOTE:

- If you are out of Wi-Fi area and choose 3G connection, additional charges may be applied.
- If your phone turns into sleep mode even when it is connected to Wi-Fi, the Wi-Fi connection will be disabled automatically. In this case, if your phone has access to 3G data, it may be connected to the 3G network automatically, and additional charges may be applied.)
- The GT540 supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You

can obtain the key from your Wi-Fi service provider or network administrator.

## 1. How to set up Wi-Fi

- 1 Touch **Application > Settings > Wireless & networks**, then turn **Wi-Fi** on.
- 2 AP (Access Point) Search
  - Searches for which AP it can connect to.
- 3 AP Connect
  - Connects to the desired AP from the AP search list.
  - If the AP is security type WEP or WPA/WPA2-PSK, enter the security key.

## 2. Wi-Fi network profile support

- 1 Wi-Fi profile support (how to connect to a frequently used AP or hidden AP)
  - 1) If the AP does not appear in the search list, you can connect to it by saving it as a profile.

## Wi-Fi

- 2) Saving a frequently used AP as a profile makes it easier to enter the security key when connecting to an AP with that security type.
  - 3) If the AP does not support DHCP, you can connect to the AP using a static IP address.
- 2 Description of each field in the Wi-Fi profile.
- 1) Network Name: SSID (ID)
  - 2) Security Type: WEP and WPA/WPA2-PSK support.
  - 3) Security Key: Saves the security key.
  - 4) IP/DNS Setting: This allows you to set to Automatic or Static, depending on whether the AP supports DHCP.  
For Static, enter the field value of the IP address and DNS server to use with the static IP address when connecting.

- 3 How to save the Wi-Fi profile
- 1) Select the Add Wi-Fi Network menu at the bottom of Wi-Fi Networks, then enter the SSID and Security Type.
  - 2) After connecting to an AP with this security type, the profile will be saved automatically.

### 3. How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your GT540 into the router.

You can find the MAC address in the following user interface:

Touch **Application > Settings > Wireless & networks > Wi-Fi settings**, and touch the **Menu** key then select **Advanced > MAC Address**.

# Software update

## Phone Software update

### LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language → Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

## DivX Mobile

ABOUT DIVX VIDEO: DivX<sup>®</sup> is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified<sup>®</sup> device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.

**DivX Certified to play DivX<sup>®</sup> video up to 320 x 240**

# Accessories

These accessories are available for use with the GT540.  
(Items described below may be optional.)

## Charger



## Data cable

Connect your GT540 and PC.



## Battery



## User Guide

Learn more about your GT540.



## Stereo headset



## NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

# Technical data

## Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

## Declaration of Conformity



LG Electronics

### Suppliers Details

#### Name

LG Electronics Inc

#### Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

### Product Details

#### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

#### Model Name

GT540

#### Trade Name

LG

CE 0168 !

### Applicable Standards Details

#### R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2008  
EN 60950-1 : 2006

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Doo Heung Lee / Director

30. Aug. 2010

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

# Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible causes	Possible Corrective Measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area. Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective Measures</b>
Calls not available	Dialing error New SIM card inserted	New network not authorised. Check for new restrictions.
	Prepaid Charge limit reached	Contact service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed long enough	Press the On/Off key down for at least two seconds.
	Battery is not charged	Keep charger attached for a longer time Clean the contacts.
	Battery contacts are dirty	Take out the battery and insert again.
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger Battery defective	Only use original LG accessories. Replace battery.

# Troubleshooting

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective Measures</b>
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/send SMS & Picture	Memory Full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
SD Card not working	FAT 16 file system supported only	Check SD card file system via card reader Or format SD card using phone
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor. Make sure that the area around the proximity sensor is clean.
No Sound	Vibration or manner mode	Check the setting status of sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via WEB site.



# Warranty Card

## 產品保用證

Mobile Phone  
手提電話

# Warranty Card

## 產品保用證

LG Customer Care Centre  
客戶維修服務中心

Welcome to contact for detailed information  
歡迎致電查詢詳細資料

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777  
E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com  
LG Website 瀏覽網站 : www.lg.com

If you want to receive an additional 3 months warranty, please complete warranty registration within 1 month after purchase at  
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>  
or (852) 3543 7777.

如欲享受額外3個月產品保養，請在購買產品後1個月內登入  
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>  
或致電(852) 3543 7777登記

### Privacy Statement

You are aware that any information supplied by you after purchase of our product will be retained by LG Electronics HK Ltd. and will not be released to third parties. You also authorize LG Electronics HK Ltd. to send you direct promotion materials. Please contact our Customer Service Hotline at (852) 3543 7777 if you wish to modify or erase your provided personal information.

### 私隱聲明

閣下在購買本公司產品後所提供的任何資料，將會由LG Electronics HK Ltd.保有，不會透露給予第三方，並授權本公司對閣下發出直接推廣通訊。如希望修改或刪除所提供的個人資料，可聯絡本公司客戶服務熱線(852) 3543 7777作出相關安排。

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

**IMPORTANT :** Please keep and present this warranty card and purchase invoice when services are rendered. Otherwise, this warranty will be voided.

**重要事項 :** 顧客請保留此保用證及購貨發票，並需在檢查/維修時出示，否則保用無效。

## Mobile Phone Warranty Policy

### 手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
  - (i) Handset : 12 months
  - (ii) Charger : 6months
  - (iii) Battery : 6months
  - (iv) Hand free earphone : 3months
- (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
- (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (Including casing, key pad, display, antenna, and accessories, etc.)
- (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
- (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
- (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
- (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
  - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
  - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
  - (iii) The IMEI number sticker on this product has been erased or modified.
  - (iv) The content of warranty policy has been modified without authorization.
- (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
- (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
- (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
- (11) This warranty card is restricted within Hong Kong SAR only.
- (12) LG and its Authorized Service Centers reserve the right to use refurbished or reconditioned parts or whole products for the same or functionally equivalent model when conducting product repairs and replacement.

- (1) 本公司為客戶提供保用期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
  - (i) 機身 : 12個月
  - (ii) 充電器 : 6個月
  - (iii) 電池 : 6個月
  - (iv) 免提耳機 : 3個月
- (2) 保用服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
- (3) 此保用只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
- (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保用服務無效，客戶須繳付維修費用。
- (5) 在保用期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
- (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
- (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
  - (i) 手機曾作未許可之維修、不適當的安裝、更改，或貼於其上的維修貼紙遭受損毀、撕破、除去，保用服務即無效。
  - (ii) 手機曾被錯誤使用，錯誤處理，疏忽使用，直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
  - (iii) 手機上的IMEI號碼貼紙經修改或除去，保用服務即無效。
  - (iv) 擅自修改本保用證的內容。
- (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害，意外事件造成之損失概不負責。
- (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
- (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
- (11) 此保用證只適用於香港特別行政區範圍內。
- (12) 本公司及其授權之維修中心在維修或更換產品時，保留使用與產品或功能相同的部分或全部再生零件之權利。

## Service Commitment 服務承諾

LG's mission is to create value for customers. We are committed to improve the life of our customers by putting the customers first, and delivering the best possible pre and after sales services in the way they want.

為顧客創造價值乃LG一貫宗旨。我們致力提供最貼心的售前及售後服務，一切以顧客為先，希望為客戶帶來最優質的生活。











