



हिन्दी
ENGLISH



User Guide
GD350



CE0168

P/N : MMBB0366913 (1.2)

www.lg.com

Bluetooth QD ID B016112

GD350 उपयोगकर्ता निर्देशिका - हिन्दी

यह निर्देशिका आपकी आपके नए मोबाइल को समझने में मदद करेगी. यह आपको आपके फोन में दी गई सुविधाओं के बारे में उपयोगी जानकारी देता है.

इस निर्देशिका की कुछ सामग्री आपके फोन के सॉफ्टवेयर या आपके सेवा प्रदाता के आधार पर आपके फोन से अलग हो सकती है.



अपने फोन को जानें

मुख्य स्क्रीन

सॉफ्ट कुंजीयाँ

इनमें से प्रत्येक कुंजी उनके ठीक ऊपर दर्शाए गए पाठ द्वारा निर्देशित कार्य करती है।

ठीक कुंजी

मेनू विकल्प का चयन करता है और क्रियाओं को नियत करता है।

संगीत कुंजी

संगीत फंक्शन पर सीधे जाएँ।

कॉल कुंजी

इससे फोन नंबर डायल किए जाते हैं और आवक कॉल के उत्तर दिए जाते हैं।

नेविगेशन कुंजियाँ

फोन फंक्शंस पर त्वरित पहुँच के लिए उपयोग करें।

कैमरा कुंजी

सीधे कैमरा फंक्शन पर जाएँ।

समाप्त/पावर कुंजी

कॉल समाप्त या अस्वीकार करती है। फोन चालू/बंद करती है। जब आप मेनू का उपयोग करते हैं, तो मुख प्रष्ट स्क्रीन पर वापस आने के लिए।





हैडसेट / चार्जर
/ USB केबल
कनेक्टर



वॉल्यूम कुँजी
मेमोरी कार्ड स्लॉट

मेमोरी कार्ड स्थापित करना

मेमोरी कार्ड कवर उठाएँ और माइक्रो SD कार्ड का गोल्डन संपर्क क्षेत्र नीचे की ओर रखते हुए कार्ड डालें. मेमोरी कार्ड कवर इस तरह बंद करें कि वह क्लिक की आवाज करे. मेमोरी कार्ड निकालने के लिए, उसे चित्र में दिखाए गए के अनुसार धीरे से धकेलें.



नोट: स्मृति कार्ड एक वैकल्पिक उपकरण | साधन है.

मेमोरी कार्ड स्वरूपित करना

मुख पृष्ठ स्क्रीन से मेनू दबाएँ और सेटिंग्स का चयन करें. मेमोरी जानकारी चुनें, बाह्य मेमोरी का चयन करें और स्वरूपित करें दबाएँ, और सुरक्षा कोड डालें.

चेतावनी: आपके द्वारा अपना मेमोरी कार्ड स्वरूपित करने पर सभी सामग्री हट जाएगी. यदि आप अपने मेमोरी कार्ड का डेटा खोना नहीं चाहते हैं तो पहले उसका बैकअप लें.

सिम कार्ड स्थापित करना और बैटरी चार्ज करना

सिम कार्ड स्थापित करना

जब आप किसी सैल्यूलर नेटवर्क को सबस्क्राइब करते हैं, तो आपको आपके सबस्क्रिप्शन विवरणों, जैसे कि आपका PIN, कोई अन्य उपलब्ध वैकल्पिक सेवा और बहुत सी अन्य सेवाओं के साथ लोड एक SIM कार्ड प्रदान किया जाएगा.

महत्वपूर्ण!

› खरोंचों या मोड़ने से SIM कार्ड आसानी से खराब हो सकता है, इसलिए कार्ड को

रखते, डालते या निकालते समय सावधान रहें. सभी सिम कार्ड छोटे बच्चों की पहुँच से दूर रखें.

उदाहरण

- 1 बैटरी कवर खोलें
- 2 बैटरी निकालें
- 3 अपना सिम डालें
- 4 अपनी बैटरी डालें
- 5 बैटरी कवर बंद करें
- 6 अपनी बैटरी चार्ज करें



चेतावनी: फोन चालू होने पर बैटरी न निकालें, ऐसा करने से आपका फोन खराब हो सकता है.

मेनू मैप

1. संदेश

- 1.1 संदेश लिखें
- 1.2 इनबॉक्स
- 1.3 मेरा मेलबॉक्स
- 1.4 प्रारूप
- 1.5 आउटबॉक्स
- 1.6 प्रेषण आइटम्स
- 1.7 सहेजे गए आइटम
- 1.8 भावनाएं
- 1.9 संदेश अनुकूलन

2. संपर्क

- 2.1 नाम
- 2.2 सेटिंग्स
- 2.3 समूह
- 2.4 शीघ्र डायल्स
- 2.5 सेवा डायल नंबर
- 2.6 स्वयं का नंबर
- 2.7 मेरा व्यवसाय कार्ड

3. कॉल लॉग

- 3.1 कॉल लॉग
- 3.2 छूटे काल्स
- 3.3 प्राप्त काल्स
- 3.4 डायल किए गए नंबर
- 3.5 कॉल अवधि
- 3.6 पैकेट डेटा काउंटर
- 3.7 कॉल कीमत

4. सेटिंग्स

- 4.1 प्रोफाइल्स
- 4.2 प्रदर्शित करें
- 4.3 दिनांक और समय
- 4.4 संयोजकता
- 4.5 कॉल
- 4.6 फोन
- 4.7 नेटवर्क
- 4.8 इंटरनेट प्रोफाइले
- 4.9 एक्सेस पॉइंट्स
- 4.10 पैकेट डेटा कनेक्शन

4.11 सुरक्षा

- 4.12 स्मृति की जानकारी
- 4.13 फ़ैक्ट्री सेटिंग्स पुनर्स्थापित करें

5. गैलरी

- 5.1 मेरा मेमोरी कार्ड
- 5.2 मेरी छवियाँ
- 5.3 मेरी ध्वनि
- 5.4 मेरे वीडियो
- 5.5 मेरे खेल एवं अनुप्रयोग
- 5.6 अन्य

6. मीडियां

- 6.1 कैमरा
- 6.2 वीडियो
- 6.3 संगीत
- 6.4 FM रेडियो
- 6.5 वॉइस रिकॉर्डर
- 6.6 रिंगटोन बनाने वाला

मेनू मैप

7. आयोजक

- 7.1 अलार्म घड़ी
- 7.2 कैलेंडर
- 7.3 टू-डू सूची
- 7.4 नोट्स
- 7.5 गुप्त नोट्स
- 7.6 कैश बुक
- 7.7 BMI कैल्कुलेटर
- 7.8 कैल्कुलेटर
- 7.9 स्टॉपवॉच
- 7.10 तिथि खेजक
- 7.11 परिवर्तक
- 7.12 विश्व समय
- 7.13 के पास जाओ
- 7.14 SIM सेवाएँ
- 7.15 सेंटिग्स

8. सुविधायें



- 8.1 मेरे खेल एवं अनुप्रयोग
- 8.2 सेंटिग्स

9. वेब

- 9.1 होम
- 9.2 बुकमार्क
- 9.3 पिछला वेब पता
- 9.4 सेंटिग्स
- 9.5 पते पर जाएँ
- 9.6 सुरश्रित पृष्ठ

कॉल्स


कॉल करना

- 1 कीपैड का उपयोग करके नंबर लिखें। अंक हटाने के लिए, CLR दबाएँ।
- 2 कॉल शुरू करने के लिए  दबाएँ।
- 3 कॉल समाप्त करने के लिए  दबाएँ।


टिप! अंतर्राष्ट्रीय कॉल करते समय + दर्ज करने के लिए 0 दबाकर रखें।


टिप! कॉल के दौरान वॉल्यूम पर नियंत्रण रखने के लिए, वॉल्यूम कुँजी दबाएँ।

अपने संपर्कों से कॉल करना


- 1 मुख पृष्ठ स्क्रीन से नामों का चयन करें।
- 2 कीपैड का उपयोग करते हुए उस संपर्क का पहला अक्षर लिखें, जिसे आप कॉल करना चाहते हैं। उदाहरण के लिए, Office हेतु प्रथम अक्षर "O" का चयन करने के लिए तीन बार 6 दबाएँ।
- 3 विकल्पों से कॉल करें का चयन करें या कॉल शुरू करने के लिए  दबाएँ।


कॉल का उत्तर देना और अस्वीकार करना

आपके फोन के रिंग करने पर, कॉल का उत्तर देने के लिए  दबाएँ। अपने फोन को रिंग करते समय म्यूट करने के लिए, साधारण रूप से साइलेंट का चयन करें। यह तब उपयोगी है यदि आप एक मीटिंग के लिए अपनी प्रोफाइल को साइलेंट पर करना भूल गए हैं।

आवक कॉल अस्वीकार करने के लिए  दबाएँ या अस्वीकार करें का चयन करें।

स्पीकरफोन का उपयोग करना

कॉल के दौरान, आप  कुँजी दबाकर स्पीकरफोन सक्रिय कर सकते हैं और हैंड्स-फ्री में हैंडसेट का उपयोग कर सकते हैं।

यदि स्पीकरफोन सक्रिय हो, तो सामान्य हैंडसेट वार्तालाप मोड जारी रखने के लिए फिर से  दबाएँ।

स्पीड डायलिंग

मेनू दबाएँ और संपर्क का चयन करें फिर स्पीड डायल चुनें।

आप ऐसे संपर्क को स्पीड डायल नंबर असाइन कर सकते हैं, जिसे आप बार-बार कॉल करते हैं।

स्पीड डायल 1 आपके वॉइस मेल के लिए सेट किया जाता है और आप इसे परिवर्तित नहीं कर सकते हैं।

टिप! फोन बुक में LG मोबाइल ग्राहक सेवा के दो नंबर दिए गए हैं। आप LG ग्राहक सेवा ८ पर सीधे कॉल कर सकते हैं या LG ग्राहक सेवा ८ को क्षेत्र कोड के साथ संपादित करें और कॉल करें।

आपके कॉल लॉग्स देखना

मेनू दबाएँ और कॉल लॉग का चयन करें फिर कॉल लॉग चुनें।

यदि नेटवर्क, सेवा क्षेत्र के अंदर कॉलिंग लाइन आइडेंटिफिकेशन (CLI) का समर्थन करता है तो आप छूटे, प्राप्त और डायल किए गए कॉल्स के कॉल रिकॉर्ड की जाँच कर सकते हैं।

कॉल सेटिंग्स परिवर्तित करना

आप किसी कॉल के लिए संगत मेनू को सेट कर सकते हैं। मेनू दबाएँ, सेटिंग्स का चयन करें और कॉल चुनें।

कॉल अंतरण – अपने कॉल्स को डायवर्ट करना या न करना चुनें।

कॉल रोधन – जब आप कॉल्स रोधन करना चाहें, तब इसका चयन करें।

सीमित डायल नंबरस – उन नंबरस की सूची चुनें, जिसे आपके फोन से कॉल किया जा सके। आपको अपने ऑपरेटर से PIN2 कोड की आवश्यकता होगी। केवल फिक्स्ड डायल सूची में शामिल नंबरस को ही आपके फोन से कॉल किया जा सकता है।

कॉल प्रतीक्षा – किसी कॉल के प्रतीक्षा में होने पर संकेत प्राप्त करें। (आपके नेटवर्क प्रदाता पर निर्भर करता है।)

कॉल अस्वीकार करें – आप बंद या चालू का चयन करें और उन सभी कॉल्स को अस्वीकार करना चुनें, जो विशिष्ट समूहों, संपर्कों, अपंजीकृत नंबरस (जो आपके संपर्कों की सूची में नहीं हैं) या वे जो किसी कॉलर पक्ष के साथ नहीं हैं।

मेरा नंबर भेजें – चुनें कि किसी व्यक्ति को कॉल करने पर आपका नंबर प्रदर्शित हो या नहीं। (आपके नेटवर्क प्रदाता पर निर्भर करता है।)

स्वतरु रीडायल – जब कॉल करने का प्रयास विफल हो जाता है, तो आपको स्वतः रीडायल फंक्शन सेट करने की अनुमति देता है.

जवाब मोड – आपको जवाब विधि को सेट करने की अनुमति देता है. आप इनमें से चुन सकते हैं भेजें कुँजी दबाएँ, पिलप खोलें या कोई भी कुँजी दबाएँ .

निशुल्क कॉल टाइम ट्रैकर – चुनें कि आपके मुफ्त कॉल टाइम को दिखाएँ या नहीं.

मिनट माइंडर – निर्धारित करता है कि आपके फोन पर होने के समय सेट किए गए टाइम के अनुसार टोन की आवाज करे या नहीं.

BT जवाब मोड – चुनें कि ब्लूटूथ हेडसेट का उपयोग करते समय, कॉल का जवाब कैसे दें. सेट करें कि हैंड्स-फ्री या हैंडसेट.

नया नंबर सहेजें – हाँ या नहीं का चयन करें.

संपर्क

कोई संपर्क खोजना

- 1 मुख पृष्ठ स्क्रीन से नामों का चयन करें.
- 2 कीपैड का उपयोग करते हुए उस संपर्क का पहला अक्षर लिखें, जिसे आप कॉल करना चाहते हैं.
- 3 संपर्कों और उनके भिन्न नंबरों के अंतर्गत स्कॉल करने के लिए नेविगेशन कुंजियों का उपयोग करें.

नया संपर्क जोड़ना

- 1 मेनू दबाएँ और संपर्कों का चयन करें फिर नाम चुनें. विकल्प और नया संपर्क जोड़ें दबाएँ.
- 2 अपने नए संपर्क का प्रथम और अंतिम नाम दर्ज करें. आपको दोनों दर्ज नहीं करने हैं, लेकिन आपको एक या अन्य दर्ज करना आवश्यक है.
- 3 नंबर दर्ज करें और विकल्प का चयन करें फिर सहेजें चुनें.

नोट: यदि आप अधिक जानकारी जोड़ते हैं, तो विकल्प दबाएँ और विवरण जोड़ें चुनें फिर अपने इच्छित विकल्पों का चयन करें.

नोट: जब आप संपर्क के ई-मेल पते संग्रहीत कर रहे हों, तो कुँजी दबाएँ और प्रतीक @ का चयन करें फिर ठीक का चयन करें.

नोट: केलेन्डर से नया शेड्युल्ड संदेश का प्रयोग करके आप पेहले से ही तय किए गये समय पर पसंदिता संपर्क के संदेश भेज सकते है

किसी समूह में संपर्क जोड़ना

आप अपने संपर्कों को समूहों में सहेज सकते हैं, उदाहरण के लिए, अपने सळक्र्मियों और परिजनों को अलग-अलग समूह में रखते हुए. फोन में परिवार, मित्र, सळक्र्मी, विद्यालय और वीआईपी सहित कई समूह पहले से सेट हैं.

संदेश भेजना

आपके GD350 में SMS (शॉर्ट मैसेज सर्विस), MMS (मल्टीमीडिया मैसेज सर्विस), ई-मेल और साथ ही साथ नेटवर्क के सेवा संदेशों से संबंधित फंक्शंस हैं.

संदेश भेजना

- 1 मेनू दबाएँ, संदेश भेजना का चयन करें और संदेश लिखें चुनें.
- 2 SMS या MMS भेजने के लिए संदेश चुनें.
- 3 नया संदेश संपादक खुल जाएगा. संदेश संपादक पाठ संदेश और मल्टीमीडिया संदेशों को एक सहज और संपादक के बीच आसानी से सविच करने के लिए मिलता है. संदेश संपादक की डिफॉल्ट सेटिंग पाठ संदेश है.
- 4 फोन नंबर दर्ज करें या विकल्प दबाएँ और अपने संपर्कों की सूची से एक संपर्क जोड़ने के लिए भेजें का चयन करें. आप प्राप्तकर्ता जोड़ें का चयन करके, एकाधिक संपर्क भी जोड़ सकते हैं.

नोट: संदेश किसी समूह को भी भेजा जा सकता है. संदेश संपादित करें फिर भेजें दबाएँ और संपर्क समूह और फिर इच्छित समुह का चयन करें.

- 5 अपना संदेश दर्ज करें.

6 छवि, वीडियो क्लिप, ध्वनि क्लिप, डेड्यूल, व्यावसायिक कार्ड, नोट, पाठ फील्ड, करने के लिए या एक पाठ टेम्पलेट जोड़ने के लिए विकल्प का चयन करें और सममिलित करें, चुनें.

7 भेजें दबाएँ.

टिप! संदेश फील्ड में 1 पृष्ठ से अधिक लंबा पाठ दर्ज करने पर, आप अपना संदेश का प्रकार SMS या MMS के रूप में चयन कर सकते हैं. यदि आप भेजे जाने के लिए संदेश का प्रकार परिवर्तित करना चाहते हैं, तो मेनू > संदेश भेजना > संदेश सेटिंग्स > पाठ संदेश दबाएँ और लंबे पाठ के रूप में भेजें चुनें.

चेतावनी: छवि, वीडियो क्लिप, ध्वनि क्लिप, डेड्यूल, व्यावसायिक कार्ड, पाठ फील्ड या विषय को संदेश संपादक पर जोड़ें जाने पर, यह स्वचालित रूप से MMS मोड में कनवर्ट किया जाएगा और उसी के अनुसार चार्ज किया जाएगा.

पाठ दर्ज करना

आप फोन के कीपैड का उपयोग करते हुए अल्फान्यूमेरिक वर्ण दर्ज कर सकते हैं. फोन में निम्न पाठ इनपुट विधि उपलब्ध हैं: T9 मोड, इब मोड और 123 मोड.

नोट: कुछ फील्ड केवल एक पाठ इनपुट मोड की अनुमति देते हैं (जैसे पता पुस्तिका फील्ड में टेलीफोन नंबर).

T9 मोड

T9 मोड आपके द्वारा लिखे जा रहे शब्दों को पहचानने के लिए आपके द्वारा दबाई जा रही कुंजियों के क्रम के आधार पर अंतर्निहित शब्दकोश का उपयोग करता है. जिस अक्षर को आप दर्ज करना चाहते हैं, उससे संबंधित कुंजी दबाएँ और शब्दकोश सभी दर्ज किए अक्षरों को एकबार में पहचान लेगा.

T9 मोड का उपयोग करना

1 आप जब T9 भविष्य कहनेवाला मोड में हो तब [] से [] तक की कुंजी एक बार [*] दबाएँ अगर शब्द अभी भी गलत है पूरी तरह लिखने के बाद कुंजी दबाएँ सभी उपयुक्त शब्द देखने के लिए.

2 अगर वन्चीत शब्द शब्दकोश से गायब है तो हिन्दी मोड का उपयोग करके शब्द को शब्दकोश से जोड़े

शब्द हटाने के लिए साफ करें कुन्जी का प्रयो करे शब्द को अंतर के साथ समाप्त करने के लिए [] कुन्जी का उपयोग करे

123 मोड

प्रत्येक अंक के लिए एक बार कुन्जी दबाकर नंबर टाइप करें. आप अक्षर मोड में रहते हुए भी इच्छित कुन्जी को दबाए रखकर अंक डाल सकते हैं.

Abc मोड

इस मोड में आप अपने इच्छित अक्षर वाली कुन्जी को दबाकर अक्षर डाल सकते हैं, इसके लिए अक्षर दिखाई देने तक आपको एक, दो, तीन या चार बार कुन्जी दबाना पड़ सकता है.

अक्षर व अंक प्रविष्ट करने की तालिका

बटन	अक्षर/अंक (बटनों को इतनी बार दबाएँ)													
	1 बार	2 बार	3 बार	4 बार	5 बार	6 बार	7 बार	8 बार	9 बार	10 बार	11 बार	12 बार	13 बार	14 बार
1	~	.	:	^	1									
2	।	ि	ी	ु	ू	े	अ	आ	इ	ई	उ	ऊ	त्र	2
3	`	^	~	ो	ौ	ॉ	ए	ऐ	ँ	ओ	औ	ऑ	3	
4	क	ख	ग	घ	ङ	4	क	ख	ग					
5	च	छ	ज	झ	ञ	5	ज							
6	ट	ठ	ड	ढ	ण	6	ड	ढ						
7	त	थ	द	ध	न	7								
8	प	फ	ब	भ	म	8	फ							
9	य	र	ल	व	श	ष	स	ह	9					
0	-													

हिन्दी शब्द लिखने के उदाहरण

1) किताब

- क : - बटन 4 को 1 बार दबाएँ.
ि : - बटन 2 को 2 बार दबाएँ.
त : - बटन 7 को 1 बार दबाएँ.
ा : - बटन 2 को 1 बार दबाएँ.
ब : - बटन 8 को 3 बार दबाएँ.

2) क्षत्रिय

- क : - बटन 4 को 1 बार दबाएँ.
् : - बटन 1 को 4 बार दबाएँ.
ष : - बटन 9 को 6 बार दबाएँ.
त : - बटन 7 को 1 बार दबाएँ.
् : - बटन 1 को 4 बार दबाएँ.
र : - बटन 9 को 2 बार दबाएँ.
ि : - बटन 2 को 2 बार दबाएँ.
य : - बटन 9 को 1 बार दबाएँ.

3) ज्ञानी

- ज : - बटन 5 को 3 बार दबाएँ.
् : - बटन 1 को 4 बार दबाएँ.
अ : - बटन 5 को 5 बार दबाएँ.
ा : - बटन 2 को 1 बार दबाएँ.
न : - बटन 7 को 5 बार दबाएँ.
ी : - बटन 2 को 3 बार दबाएँ.

आपका ई-मेल सेट करना

आप गतिशील रहते हुए भी अपने GD350 पर ई-मेल का उपयोग करते हुए संपर्क में रह सकते हैं. POP3 या IMAP4 ई-मेल खाता सेट करना त्वरित और आसान है.

- 1 मेनू दबाएँ, संदेश भेजना का चयन करें और संदेश सेटिंग्स चुनें.
- 2 ई-मेल और फिर ई-मेल खातों का चयन करें.
- 3 जोड़ें दबाएँ और पॉप अप निर्देश का पालन करें और आवश्यक जानकारी दर्ज करें.

आपके नए खाते का उपयोग कर ई-मेल भेजना

ई-मेल भेजनेध्प्राप्त करने के लिए, आपको ई-मेल खाता सेट करना चाहिए.

- 1 मेनू का चयन करें, संदेश भेजना का चयन करें और संदेश बनाएँ चुनें.
- 2 ई-मेल चुनें और एक नया ई-मेल खुल जाएगा.
- 3 प्राप्तकर्ता का पता दर्ज करें और वि ाय लिखें.
- 4 अपना संदेश दर्ज करें.

- 5 छवि, वीडियो क्लिप, ध्वनि क्लिप, व्यावसायिक कार्ड, डोड्यूल या नोट जोड़ने के लिए सम्मिलित करें का चयन करें विकल्प दबाएँ.
- 6 भेजें दबाएँ और आपका ई-मेल भेज दिया जाएगा.

संदेश फोल्डर्स

मेनू दबाएँ, संदेश भेजना का चयन करें. आपके GD350 में उपयोग किया गया फोल्डर ढाँचा पर्याप्त रूप से स्व-व्याख्यात्मक है.

संदेश लिखें – आपको नया संदेश लिखने की अनुमति देता है.

इनबॉक्स – आपको प्राप्त सभी संदेश आपके इनबॉक्स में स्थित होते हैं. यहाँ से आप उत्तर दे सकते हैं, अग्रे ित कर सकते हैं और बहुत कुछ कर सकते हैं.

मेरा मेलबॉक्स – आपके सभी ई-मेल जो आप प्राप्त करते हैं, मेरे मेलबॉक्स में स्थित होते हैं.

प्रारूप – यदि किसी संदेश को पूर्ण लिखने के लिए आपके पास प्रयाप्त समय नहीं है, तो आप अभी तक लिखे गए संदेश को यहाँ सहेज सकते हैं.

आउटबॉक्स – जब संदेश भेजे जा रहे हों, तो यह एक अस्थायी संग्रहण फोल्डर होता है.

भेजे गए आइटम्स – आपके द्वारा भेजे गए सभी संदेशों की प्रतिलिपियाँ आपके भेजे गए आइटम्स में रखी जाती हैं.

सहेजे गए आइटम – आप अपने सहेजे गए संदेशों, पाठ टेम्पलेट्स और मल्टीमीडिया टेम्पलेट्स तक पहुँच प्राप्त कर सकते हैं.


भावनाएं – त्वरित उत्तर के लिए, उपयोगी इमोटिकॉन्स की एक सूची पहले ही से लिखी है. आप इमोटिकॉन्स को जोड़, संपादित और हटा सकते हैं. आप संदेश लिखते समय, अपनी प्राथमिकता के अनुसार इमोटिकॉन सम्मिलित कर सकते हैं.

संदेश सेटिंग्स – आपके संदेश सेटिंग्स पूर्वनिर्धारित हैं, ताकि आप तुरंत संदेश भेज सकें. यदि आप सेटिंग्स को परिवर्तित करना चाहें, तो आप सेटिंग्स विकल्प का उपयोग करते हुए यह कर सकते हैं.

कैमरा


अपने फोन में बने कैमरा मॉड्यूल का उपयोग करके, आप लोगों के चित्र ले सकते हैं. इसके अलावा, आप दूसरे लोगों को फोटो भेज सकते हैं और फोटो का वॉलपेपर के रूप में चयन कर सकते हैं.

तुरंत फोटो लेना

- 1 मेनू दबाएँ और मीडिया का चयन करें. व्यूफाइंडर खोलने के लिए कैमरा का चयन करें.
- 2 फोन को पकड़ कर और लेंस को फोटो के सब्जेक्ट पर पॉइंट करें.
- 3 फोटो लेने के लिए  कुँजी दबाएँ.

वीडियो कैमरा

तुरंत वीडियो लूट करना




- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर वीडियो चुनें.
- 2 कैमरा लेंस को वीडियो के सब्जेक्ट पर पॉइंट करें.
- 3 रिकॉर्डिंग प्रारंभ करने के लिए  कुँजी दबाएँ.
- 4 REC व्यूफाइंडर में प्रकट होगा और टाइमर आपके वीडियो की लंबाई दिखाएगा.

- 5 रिकॉर्डिंग रोकने के लिए रोकें का चयन करें.

संगीत

आपके GD350 में एक अंतर्निहित संगीत प्लेयर है, ताकि आप अपने सभी पसंदीदा संगीत चला सकें.

कोई गीत चलाना

- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर संगीत चुनें.
- 2 सभी ट्रैक चुनें फिर जिस गीत को आप चलाना चाहते हैं, उसका चयन करें.
- 3 गीत रोकने के लिए  का चयन करें.
- 4 अगले गीत पर जाने के लिए  का चयन करें.
- 5 पिछले गीत पर जाने के लिए  का चयन करें.
- 6 संगीत रोकने और संगीत प्लेयर मेनू में वापस जाने के लिए वापस जाएँ का चयन करें.

नोट: संगीत अंतर्राष्ट्रीय संधियों और राट्रीय कॉपीराइट कानून में कॉपीराइट द्वारा सुरक्षित है. संगीत को पुनरु बनाने या प्रतिलिपि बनाने के लिए अनुमति या एक लाइसेंस प्राप्त करना आवश्यक हो सकता है. कुछ देशों में राट्रीय कानून कॉपीराइट की गई सामग्रियों की निजी प्रतिलिपि बनाने से प्रतिबंधित करता है. कृपया इस प्रकार की सामग्री के उपयोग से संबंधित उचित देश के राट्रीय कानून को जाँच लें.

FM रेडियो

आपके GD350 FM में FM रेडियो सुविधा है, ताकि आप अपने पसंदीदा स्टेशन ट्यून कर सकें और चलते चलते उन्हें सुन सकें.

नोट: रेडियो सुनने के लिए आपको अपना हैडसेट जोड़ने की आवश्यकता होगी. रेडियो सुनने और रेडियो को अच्छा ग्रहण करने वाला बनाने के लिए, प्लग को हैडसेट कनेक्टर में सममिलित करें.

स्टेशन खोजना

1. मेनू दबाएँ और मीडिया का चयन करें, फिर FM रेडियो चुनें.
2. विकल्प चुनें और स्वरु स्कैन चुनें फिर हाँ का चयन करें. स्टेशन खोजने के लिए, आप बाएँ और दाएँ नेविगेशन कुँजियों का भी उपयोग कर सकते हैं.

रेडियो सुनना

1. मेनू दबाएँ और मीडिया का चयन करें, फिर FM रेडियो चुनें.
2. उस स्टेशन के चैनल नंबर का चयन करें, जिसे आप सुनना चाहते हैं.

टिप! आप अंतर्निहित स्पीकर द्वारा रेडियो सुन सकते हैं. विकल्प दबाएँ, स्पीकर द्वारा सुनें का चयन करें.

रेडियो से रिकॉर्ड करना

1. रेडियो सुनते समय (OK) कुँजी दबाएँ.
2. रिकॉर्डिंग समय आपके फोन पर प्रदर्शित होता है. यदि आप रिकॉर्डिंग रोकना चाहते हैं, तो (OK) कुँजी दबाएँ. रिकॉर्डिंग पूरी होने पर, रिकॉर्ड की गई सामग्री गैलेरी में उचउ फाइल के रूप में सहेजी जाएगी.

वॉइस रिकॉर्डर

वॉइस मेमो या अन्य ध्वनियाँ रिकॉर्ड करने के लिए अपने वॉइस रिकॉर्डर का उपयोग करें।

आपके वॉइस मेमो को रिकॉर्ड करना

- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर वॉइस रिकॉर्डर चुनें।
- 2 रिकॉर्डिंग प्रारंभ करने के लिए **OK** कुँजी दबाएँ।
- 3 रिकॉर्डिंग समाप्त करने के लिए **OK** कुँजी चुनें।
- 4 विकल्प दबाएँ और रिकॉर्डिंग सुनने के लिए चलाएँ का चयन करें।

रिंगटोन निर्माता

आपकी रिंगटोन आपकी रिंगटोन बनाना

- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर रिंगटोन निर्माता का चयन करें।
- 2 वह संगीत चुनें, जिसका उपयोग आप संगीत सूचियों में करना चाहेंगे और फिर **OK** कुँजी का चयन करें।

- 3 जब आप कोई संगीत चला रहे हों और उसे रिंगटोन की तरह उपयोग करना चाहें तो संगीत रिकॉर्डिंग शुरू करने के लिए काटें चुनें।
- 4 रोकने के लिए रोकें का चयन करें।
- 5 सहेजें का चयन करें और मूल फाइल या नई फाइल से चुनें। फिर सहेजें का चयन करें।

गैलेरी

आप अपने फोन की मेमोरी में किसी भी मीडिया फाइल का संग्रह कर सकते हैं, ताकि आपको आपकी सभी छवियों, ध्वनियों, वीडियो, अन्य और गेम्स के लिए आसानी से पहुँच हो। आप अपनी फाइलों को मेमोरी कार्ड में भी सहेज सकते हैं। मेमोरी कार्ड उपयोग करने का लाभ यह है कि आप अपने फोन की मेमोरी का स्थान खाली कर सकते हैं। आपकी सभी मल्टीमीडिया फाइलें गैलेरी में सहेजी जाएँगी। फोल्डर्स की सूची खोलने के लिए मेनू दबाएँ फिर गैलेरी का चयन करें।

अनुप्रयोग

आपके खाली समय में मनोरंजन के लिए, आपके GD350 में पहले से लोड किए गए गेम्स हैं। यदि आप कोई भी अतिरिक्त गेम या अनुप्रयोग डाउनलोडकरना चुनते हैं, तो वे इस फोल्डर में सहेजे जाएँगे। मेनू दबाएँ और अनुप्रयोग का चयन करें। मेरे गेम्स और अनुप्रयोग चुनें।

नोट: इस सेवा से कनेक्ट होने पर अतिरिक्त जुल्क लगाया जाता है। अपने नेटवर्क प्रदाता से अपना डेटा जुल्क जाँचें। GD350 में पहले से लोड अनुप्रयोग भी होते हैं।

• **RockeTalk - RockeTalk** एक सामाजिक नेटवर्किंग अनुप्रयोग है, जो आपको नए दोस्त खोजने और बनाने और परी पाठ और चित्र चौट के उपयोग से उनसे कनेक्ट रहने में सक्षम बनाता है। RockeTalk अनुप्रयोग में Yahoo, Google Talk, MSN, AIM और ICQ के संगत एकाधिक Instant Messenger (IM) चौट सुविधा भी शामिल होती है।

नोट: त्वबीमजंसा उपयोग के लिए निरुशुल्क है। RockeTalk एक डेटा (इंटरनेट) कनेक्शन का उपयोग करता है और उस पर ऑपरेटर डेटा लागत लागू

होगी। हम अनुशंसित करते हैं कि आप एक असीमित (समान दर) डेटा प्लान, का उपयोग करें, जिसे आप अपने ऑपरेटर से प्राप्त कर सकते हैं।

- **जस्ट किकेट:** एक ऐसा जावा अपलिकेशन है जो इस हैन्डसेट में मिल रहा है जिसमें हम ऑनलैन एक्सीस करके हम लैव मेचस देख सकते हैं
- **न्यूज हंट:** ये एक ऐसा अपलिकेशन है जिसे डिजाइन किया गया है ऑनलैन न्यूज पत्रिका पढ़ने के लिए और वो भी ऑनलैन

ऑर्गनाइजर

आपका अलार्म सेट करना

(मेनू > ऑर्गनाइजर > अलार्म घड़ी)

किसी निर्दिष्ट समय को याद रखने के लिए आप 5 अलार्म घड़ियाँ तक सेट कर सकते हैं।

कैलेंडर का उपयोग करना

(मेनू > ऑर्गनाइजर > कैलेंडर)

जब आप इस मेनू में आते हैं, तो एक कैलेंडर दिखाई देता है। वर्तमान दिनांक पर वर्गाकार कर्सर स्थित होता है। आप

नेविगेशन कुंजियों का उपयोग करके कर्सर को किसी अन्य तिथि पर ले जा सकते हैं।

आपकी करने के लिए सूची में आइटम जोड़ना (मेनू > ऑर्गनाइजर > करने के लिए सूची)

आप करने के लिए कार्यों को देख, संपादित और जोड़ सकते हैं।

नोट जोड़ना

(मेनू > ऑर्गनाइजर > नोट्स)

आप अपने स्वयं के नोट्स यहाँ पंजीकृत कर सकते हैं।

गुप्त नोट्स

(मेनू > ऑर्गनाइजर > गुप्त नोट्स)

आप अपना गोपनीयता की सुरक्षा के लिए व्यक्तिगत मेमो लिख सकते हैं। आप इस मेनू का उपयोग करने के लिए, सुरक्षा कोड दर्ज करें।

कैश पुस्तिका का उपयोग करना

(मेनू > ऑर्गनाइजर > कैश पुस्तिका)

कैश पुस्तिका एक सामान्य लेखा पुस्तिका है, जो कैश प्राप्तियों और भुगतानों की मूल जानकारी रिकॉर्ड करने के लिए उपयोग की जाती है। यह आपको आवक

मुद्रा रखने और भुगतान किए जाने वाले बिल का एक आसान तरीका प्रदान करता है।

आपके BMI का परिकलन करना

(मेनू > ऑर्गनाइजर > BMI कैल्क्यूलेटर)

BMI(बॉडी मास इंडेक्स) ऊँचाई और भार पर आधारित शरीर की चर्बी का माप है। आपके BMI का परिकलन करने के लिए, संपादन करें दबाएँ और लिंग चुनें, अपना भार और ऊँचाई दर्ज करें। फिर पूर्ण का चयन करें।

अपने कैल्क्यूलेटर का उपयोग करना

(मेनू > ऑर्गनाइजर > कैल्क्यूलेटर)

कैल्क्यूलेटर मूल अंकगणितीय फंक्शंस प्रदान करता हैरू जोड़ना, घटाना, गुणा, विभाजन और वैज्ञानिक अनुप्रयोग भी।

स्टॉपवॉच का उपयोग करना

(मेनू > ऑर्गनाइजर > स्टॉपवॉच)

यह विकल्प आपको स्टॉपवॉच फंक्शन के उपयोग की अनुमति देता है।

दिनांक ढूँढने वाला

(मेनू > ऑर्गनाइजर > दिनांक ढूँढने वाला)

दिनांक ढूँढने वाला एक हैंडी उपकरण है जो दिनों की एक निश्चित संख्या के बीतने के बाद कौन सा दिनांक होगा, यह परिकलित करने में आपकी मदद करता है।

इकाई कनवर्ट करना

(मेनू > ऑर्गनाइजर > कनवर्टर)

यह कई मापों को आपकी इच्छित इकाई में कनवर्ट करता है।

अपनी विश्व घड़ी में एक शाहर जोड़ना

(मेनू > ऑर्गनाइजर > विश्व घड़ी)

आप विश्व घड़ी की सूची में वह शाहर जोड़ सकते हैं, जिसकी आपको आवश्यकता है। आप पूरे विश्व के मुख्य

इन्हें का वर्तमान समय भी जाँच सकते हैं।

इस पर जाएँ

(मेनू > ऑर्गनाइजर > इस पर जाएँ)

आप जिस मेनू को खोज रहे हैं, वहाँ तक जाने में ये आपकी मदद करता है। आप आइटम को यहाँ जाएँ के रूप में सेट कर सकते हैं।

SIM सेवाएँ

(मेनू > ऑर्गनाइजर > SIM सेवाएँ)

यह सुविधा SIM और नेटवर्क सेवाओं पर निर्भर है। यदि SIM कार्ड SAT (अर्थात् सिम ऐप्लिकेशन टूलकिट) सेवाओं का समर्थन करता है, तो यह मेनू SIM कार्ड पर संग्रहीत ऑपरेटर विशिष्ट सेवा का नाम होगा।

वेब

वैप ब्राउजर तक पहुँच प्राप्त करना

आप वैप ब्राउजर लॉन्च कर सकते हैं और वेब सेटिंग्स पर सक्रिय प्रोफाइल के मुख पृष्ठ पर पहुँच सकते हैं। आप मैनुअल रूप से भी URL पता दर्ज कर सकते हैं और संबद्ध वैप पृष्ठ तक पहुँच सकते हैं।

1. मेनू दबाएँ और वेब का चयन करें।
2. ब्राउजर के मुख पृष्ठ पर सीधे पहुँच प्राप्त करने के लिए, मुख पृष्ठ का चयन करें। वैकल्पिक रूप से, इस पर जाएँ पते का चयन करें और अपने वांछित URL में लिखें।

नोट: इस सेवा से कनेक्ट होने और सामग्री डाउनलोड करने के लिए अतिरिक्त जुल्क लगाया जाता है। अपने नेटवर्क प्रदाता से अपना डेटा जुल्क जाँचें।

सेटिंग्स

अपने प्रोफाइल को व्यक्तिगत रूप देना (मेनू > सेटिंग्स > प्रोफाइल्स)

आप प्रत्येक प्रोफाइल सेटिंग को व्यक्तिगत बना सकते हैं। अपना इच्छित प्रोफाइल चुनें और विकल्प का चयन करें और संपादन करे चुनें।

फ्लाइट मोड का उपयोग करना (मेनू > सेटिंग्स > प्रोफाइल्स > फ्लाइट मोड)

फ्लाइट मोड चालू करने के लिए इस फंक्शन का उपयोग करें। फ्लाइट मोड चालू होने पर, आप कॉल नहीं कर सकेंगे, इंटरनेट से कनेक्ट नहीं हो सकेंगे, संदेश नहीं भेज सकेंगे।

अपनी प्रदर्शन सेटिंग्स परिवर्तित करना (मेनू > सेटिंग्स > प्रोफाइल्स)

आप फोन प्रदर्शन की सेटिंग्स परिवर्तित कर सकते हैं।

अपना दिनांक और समय परिवर्तित करना

(मेनू > सेटिंग्स > दिनांक और समय)

आप दिनांक और समय से संबंधित फंक्शन सेट कर सकते हैं।

अपनी कनेक्टिविटी सेटिंग्स परिवर्तित करना

आपकी कनेक्टिविटी सेटिंग्स आपके नेटवर्क ऑपरेटर द्वारा पहले ही सेट कर दी गई है, इसलिए आप सीधे ही अपने नए फोन का उपयोग शुरू कर सकते हैं। यदि आप कोई सेटिंग्स परिवर्तित करना चाहते हैं, तो इस मेनू का उपयोग करें। इस मेनू में आप नेटवर्क सेटिंग और डेटा पहुँच प्रोफाइल्स कॉन्फिगर कर सकते हैं।

मेनू दबाएँ और सेटिंग्स का चयन करें, फिर कनेक्टिविटी चुनें। आपके विकल्प इस प्रकार हैं:

ब्लूटूथ – अपने GD350 को ब्लूटूथ के उपयोग के लिए सेट करें। आप अपनी दृश्यता को अन्य डिवाइसेज पर अनुकूलित या अपने फोन से जुड़े डिवाइसेज से खोज सकते हैं।

USB कनेक्शन मोड – आप अपने फोन पर कई कार्यों के लिए USB कनेक्शन मोड का चयन कर सकते हैं।

- **मास संग्रहण:** इसका चयन करें और अपने कंप्यूटर से हैंडसेट को कनेक्ट करें और GD350 निकालने योग्य डिवाइस फोल्डर में फाइलों को खींचें और छोड़ें।

- **PC सूट:** इसका चयन करें और हैंडसेट को च्च सिंक मोड में अपने कंप्यूटर से कनेक्ट करें.
- **हमेशा पूछें:** प्रत्येक समय हैंडसेट को कंप्यूटर से कनेक्ट करने पर, इसका चयन करना, मोड का चयन करने के लिए एक विकल्प देगा.

नोट: USB द्रव्यमान संग्रहण फंक्शन का उपयोग करने के लिए, आपको अपने फोन में बाह्य मेमोरी कार्ड डालने की आवश्यकता होगी.

अपनी ब्लूटूथ सेटिंग्स परिवर्तित करना

- 1 मेनू दबाएँ बौर सेटिंग्स का चयन करें, फिर कनेक्टिविटी चुनें.
- 2 ब्लूटूथ चुनें और सेटिंग्स का चयन करें. इनमें अपने परिवर्तन करें:

मेरे फोन की दृश्यता – चुनें कि आपकी डिवाइस अन्यों के लिए दृश्यमान रहे, छुपी रहे या 1 मिनट के लिए दृश्यमान हो.

मेरे फोन का नाम – अपने LG GD350 के लिए नाम दर्ज करें.

समर्थित सेवाएँ – समर्थित सेवाएँ दिखाता है.

मेरा पता – अपना ब्लूटूथ पता देखें.

दूसरी ब्लूटूथ डिवाइस से जुड़ना

- 1 जाँचें कि आपका ब्लूटूथ चालू और दृश्यमान है. मेरे डिवाइस की दृश्यता, फिर दृश्यमान का चयन करके, आप ब्लूटूथ सेटिंग्स मेनू में अपनी दृश्यता परिवर्तित कर सकते हैं.
- 2 ब्लूटूथ मेनू से सक्रिय डिवाइस का चयन करें.
- 3 आपका **GD350** डिवाइसेज को खोजेगा. खोज पूर्ण होने पर स्क्रीन पर जोड़ें और ताजा करें प्रकट होंगे.
- 4 आप जुड़ने के लिए अपना इच्छित डिवाइस चुनें, फिर हैंडसेट आपके द्वारा हर बार कनेक्ट होने पर डिफॉल्ट रूप से पासकोड बनाता है.
- 5 फिर आपका फोन अन्य डिवाइस से कनेक्ट होगा.
- 6 अब आपका पासकोड रक्षित ब्लूटूथ कनेक्शन तैयार है.

आपके कंप्यूटर पर LG PC सूट स्थापित करना

- 1 www.lgmobile.com पर जाएँ और सबसे पहले अपना क्षेत्र और फिर अपना देश चुनें.
- 2 उत्पाद मेनू चुनें, मैन्युअल और सॉफ्टवेयर का चयन करें और डाउनलोड करने के लिए मैन्युअल और S/W डाउनलोड अनुभाग पर जाएँ पर क्लिक करें.
- 3 उस भाग का चयन करें, जिसमें आप चाहेंगे कि इंस्टॉलर चले और ठीक पर क्लिक करें.
- 4 LG PC सूट इंस्टॉलर विजार्ड पूर्ण करने के लिए स्क्रीन पर दिए गए निर्देशों का पालन करें.
- 5 एक बार स्थापना पूर्ण होने पर, आपके डेस्कटॉप पर LG PC सूट चिह्न प्रकट होगा.

अपनी अन्य सेटिंग्स परिवर्तित करना

नेटवर्क – इस मेनू का उपयोग कर नेटवर्क मोड सेटिंग्स का चयन करें. “आप पसंदीदा सूचियों से कनेक्ट रहने के लिए, पसंदीदा नेटवर्क को भी जोड़ सकते हैं”.

इंटरनेट प्रोफाइल – यह मेनू इंटरनेट प्रोफाइल्स दिखाता है. आप विकल्प मेनू का उपयोग करके नए प्रोफाइल्स बना सकते हैं, उन्हें हटा सकते हैं या संपादित कर सकते हैं. हालाँकि, आप डिफॉल्ट कॉन्फिगरेशन को हटा या संपादित नहीं कर सकते हैं.

पहुँच बिंदु – यह मेनू पहुँच बिंदु सूची दिखाता है. आप नए प्रोफाइल्स बना सकते हैं, विकल्प मेनू का उपयोग करके उन्हें हटा या संपादित कर सकते हैं. हालाँकि, आप डिफॉल्ट कॉन्फिगरेशन को हटा या संपादित नहीं कर सकते हैं.

पैकेट डेटा कनेक्शन. – यदि आप “जब उपलब्ध हो” का चयन करते हैं, तो आपका फोन चालू करते ही स्वचालित रूप से GPRS नेटवर्क से पंजीकृत हो जाता है. यदि आप “जब आवश्यकता हो” का चयन करते हैं, तो GPRS कनेक्शन WAP या अनुप्रयोग कनेक्शन की अवधि के लिए स्थापित होता है.

अपने फोन की सेटिंग्स परिवर्तित करना (मेने झ सेटिंग्स झ फोन)

आपका GD350 आपके स्वयं की ाली पर कैसे कार्य करता है यह अनुकूलित करने की आजादी का आनंद लें.

मेरी नेवि कुँजी – आप 4 नेविगेशन कुँजियों के आर्टकट्स परिवर्तित कर सकते हैं.

भा 11 – आप अपने फोन के प्रदर्शन पाठों के लिए भा 11 परिवर्तित कर सकते हैं. इस परिवर्तन से भा 11 इनपुट मोड भी प्रभावित होगा.

ऊर्जा बचत – ऊर्जा बचत सेटिंग्स को स्विच करने के लिए स्वतः, हमेशा चालू या बंद करना में से चुनें. यदि आप सेट करते हैं हमेशा चालू, तो आप बैटरी की ऊर्जा की बचत कर सकते हैं.

जानकारी – अपने GD350 की तकनीकी जानकारी देखें.

अपनी सुरक्षा सेटिंग्स परिवर्तित करना (मेनू झ सेटिंग्स झ सुरक्षा)

अपने GD350 और यह जिस महत्वपूर्ण जानकारी को संरक्षित रखता है, उसे बनाए रखने के लिए अपनी सुरक्षा सेटिंग्स परिवर्तित करें.

PIN कोड अनुरोध – अपने फोन के चालू होने पर अनुरोधित PIN कोड चुनें.

हैंडसेट लॉक – अपने हैंडसेट को लॉक करने के लिए चुनें.

यदि SIM परिवर्तित किया जाता है, तो लॉक करें – यदि आप इस विकल्प को सक्रिय करते हैं, तो SIM कार्ड परिवर्तित करते समय, आपका फोन एक सुरक्षा कोड का अनुरोध करेगा.

चोरी-विराधी मोबाइल ट्रैकर – हैंडसेट चोरी हो जाने पर, हैंडसेट वास्तविक स्वामी द्वारा कॉन्फिगर किए गए नंबर पर SMS भेजता है. ATMT सुविधा सक्रिय करने के लिए, आपको ATMT को चालू पर सेट करने की आवश्यकता होगी और नाम, प्राथमिक नंबर और द्वितीयक नंबर के साथ भेजे जाने वाले नंबर की सूची कॉन्फिगर करना होगी. डिफॉल्ट ATMT कोड "0000" है. ATMT SMS में चोरी हुए फोन IMEI के बारे में जानकारी वर्तमान स्थान (जो प्रति सेल ब्रॉडकास्ट संदेश के अनुसार कैचर किया गया) और उस हैंडसेट का उपयोग कर रहे व्यक्ति का नंबर होगा.

कोड्स परिवर्तित करना – अपना पिन कोड परिवर्तित करें (यदि PIN कोड का अनुरोध चालू सेट किया जाता है तो यह मेनू आइटम प्रकट होगा), PIN2 कोड, सुरक्षा कोड या चोरी-विराधी कोड.

अनुप्रयोग लॉक – लॉक करने के लिए सूची से मेनू चुनें.

मेमोरी की स्थिति देखना (मेनू **इ सेटिंग्स** **इ मेमोरी** की जानकारी)

प्रत्येक मेमोरी के उपयोग के तरीके निर्धारित करने और उपलब्ध स्थान देखने के लिए, आप मेमोरी प्रबंधक का उपयोग कर सकते हैं। सामान्य, आरक्षित, SIM और बाह्य मेमोरी और मेमोरी कार्ड डाले जाने पर प्राथमिक संग्रहण भी सेट करें।

अपने फोन को रीसेट करना (मेनू **इ सेटिंग्स** **इ फैक्ट्री सेटिंग्स** पुनरु स्थापित करें)

सभी सेटिंग्स को उनकी फैक्ट्री परिभाषाओं के अनुसार रीसेट करने के लिए फैक्ट्री सेटिंग्स पुनरुस्थापित करें का उपयोग करें। इस फंक्शन को सक्रिय करने के लिए आपको सुरक्षा कोड की आवश्यकता है। डिफॉल्ट सुरक्षा कोड "0000" पर सेट किया गया है।

सॉफ्टवेयर नवीनीकरण

LG मोबाइल फोन सॉफ्टवेयर नवीनीकरण प्रोग्राम

इस प्रोग्राम को स्थापित और उपयोग करने की अधिक जानकारी के लिए, कृपया <http://update.lgmobile.com> पर जाएँ। यह सुविधा आपको हमारे सेवा केंद्र पर जाए बिना आपके सॉफ्टवेयर को इंटरनेट पर जल्दी और आसानी से नवीनतम संस्करण में नवीनीकृत करने की अनुमति देता है। जैसा कि मोबाइल फोन सॉफ्टवेयर नवीनीकरण प्रोग्राम को नवीनीकरण प्रक्रिया के दौरान उपयोगकर्ता के पूर्ण ध्यान की आवश्यकता होती है, कृपया आगे बढ़ने से पहले प्रत्येक चरण पर प्रकट होने वाले कोई भी निर्देशों और नोट्स की जाँच करना सुनिश्चित करें। कृपया नोट करें कि नवीनीकरण के दौरान USB डेटा संचार केबल या बैटरी को निकालना आपके मोबाइल फोन को गंभीर रूप से क्षतिग्रस्त कर सकता है। जैसा कि निर्माता नवीनीकरण प्रक्रिया के दौरान डेटा हानि की जिम्मेदारी नहीं लेता है, आपको सुरक्षा के लिए कोई भी महत्वपूर्ण जानकारी एडवांस में नोट करने की सलाह दी जाती है।

सुरक्षित और प्रभावी उपयोग के दिशानिर्देश

कृपया ये आसान दिशानिर्देश पढ़ें। इन दिशानिर्देशों का पालन न करना खतरनाक या गैरकानूनी हो सकता है। अन्य विस्तृत जानकारी इस मैन्युअल में दी गई है।

रेडियो फ्रीक्वेंसी ऊर्जा के संपर्क में आना

रेडियो तरंगों से संपर्क और स्पेसिफिक अब्सॉर्प्शन रेट (SAR) की जानकारी।

आपके फोन मॉडल GD350 को रेडियो तरंगों के संपर्क में आने के लिए लागू सुरक्षा आवश्यकताओं के अनुरूप बनाया गया है। यह आवश्यकता वैज्ञानिक निर्देशों पर आधारित है जिसमें सभी आयु वर्ग और हर प्रकार के स्वास्थ्य के लोगों की सुरक्षा तय करने के लिए बनाए गए सेफटी मार्जिन शामिल हैं।

- रेडियो तरंग संपर्क दिशानिर्देश विशिष्ट अवशोषण दर, या W/Kg के रूप में पहचाने जाने वाली मापन इकाई का उपयोग करते हैं। एसएआर के परीक्षण, सभी उपयोग होने वाले फ्रीक्वेंसी बैंड्स में फोन के उच्चतम प्रमाणित क्षमता स्तर पर फोन संप्रेषण वाली मानकीकृत पद्धतियों का उपयोग करके किए जाते हैं।

- वैसे तो कई LG फोन मॉडल के W/Kg स्तर में भिन्नता हो सकती है, किंतु उन सभी को रेडियो तरंगों से संपर्क के लिए संबद्ध दिशानिर्देशों को पूरा करने के लिए बनाया गया है।
- नॉन-आयोनाइजिंग रेडिएशन प्रोटेक्शन (ICNIRP) के लिए अंतर्राष्ट्रीय आयोग द्वारा अनुशंसित एसएआर (SAR) सीमा 10 ग्राम टिश्यू पर औसतन $2 W/Kg$ होती है।
- इस फोन मॉडल के लिए DASY4 द्वारा परीक्षण किया गया उच्चतम एसएआर मान कान के पास $0.955 W/Kg (10g)$ और शरीर के पास $0.686 W/Kg (10g)$ है।
- देशों/ क्षेत्रों के निवासियों के लिए, जिन्होंने इंस्टीट्यूट ऑफ इलेक्ट्रिकल एंड इलेक्ट्रॉनिक्स इंजीनियर्स (IEEE) द्वारा अनुशंसित एसएआर (SAR) सीमा को स्वीकार किया है, एसएआर डेटा जानकारी एक (1) ग्राम टिश्यू पर औसतन $1 W/Kg$ होती है।

सुरक्षित और प्रभावी उपयोग के दिशानिर्देश

उत्पाद की देखभाल और रख-रखाव

चेतावनी

इस विशेष फोन मॉडल के साथ केवल बताई गई बैटरियाँ, चार्जर और सहायक उपकरण उपयोग करें। इनके किसी भी दूसरे प्रकार का उपयोग फोन पर लागू होने वाले अनुमोदन या वॉरंटी को अमान्य कर सकता है और खतरनाक हो सकता है।

- इस यूनिट को डिसअसेंबल न करें। सुधारने की आवश्यकता होने पर इसे योग्य सेवा तकनीशियन के पास ले जाएँ।
- बिजली के उपकरणों जैसे टीवी, रेडियो और पर्सनल कंप्यूटर से दूर रखें।
- यूनिट को गर्मी के स्रोतों जैसे रेडिएटर्स या कुकर से दूर रखना चाहिए।
- इसे गिराएँ नहीं।

- इसे मैकेनिकल कंपन या झटकों से बचाएँ।
- जिस स्थान पर विशेष नियम के तहत आवश्यक हो, तो वहाँ फोन बंद कर दें। उदाहरण के लिए, अपने फोन का अस्पतालों में उपयोग न करें, क्योंकि इससे संवेदनशील मेडिकल उपकरण प्रभावित हो सकते हैं।
- चार्ज होते समय फोन को गीले हाथों से न पकड़ें। इससे बिजली का झटका लग सकता है और आपके फोन को गंभीर रूप से क्षति हो सकती है।
- हैंडसेट को ज्वलनशील सामग्री के पास चार्ज न करें, क्योंकि हैंडसेट गर्म होकर आग का कारण बन सकता है।
- फोन को बाहर से साफ करने के लिए सूखे कपड़े का उपयोग करें। (बेंजीन, थीनर अथवा अल्कोहल जैसे विलायकों का उपयोग न करें।)
- फोन को मुलायम फर्नीचर पर चार्ज न करें।

सुरक्षित और प्रभावी उपयोग के दिशानिर्देश

- फ़ोन अच्छे हवादार क्षेत्र में चार्ज किया जाना चाहिए.
- इस यूनिट को अत्यधिक धुएँ या धूल में न रखें.
- फ़ोन को क्रेडिट कार्ड, फ़ोन या ट्रांसपोर्ट टिकट्स के पास न रखें; यह चुंबकीय पट्टियों की जानकारी को प्रभावित कर सकता है.
- स्क्रीन को नुकीली वस्तु से न बाँधें; अन्यथा यह फ़ोन को नुकसान पहुँचा सकता है.
- फ़ोन को तरल या नमी में न रखें.
- डियरफ़ोन जैसी सहायक वस्तुओं का उपयोग सावधानीपूर्वक करें. अनावश्यक रूप से एन्टीना न दबाएँ.

प्रभावी ढंग से फ़ोन का उपयोग इलेक्ट्रॉनिक्स डिवाइस

- बिना अनुमति के अपने मोबाइल फ़ोन का उपयोग मेडिकल उपकरण के पास न करें. फ़ोन को पेसमेकर के पास अर्थात अपनी शर्ट की ऊपरी जेब में न रखें.
- मोबाइल फ़ोन द्वारा कुछ श्रवण सुविधाएँ बाधित हो सकती हैं.

- छोटे व्यवधान टीवी, रेडियो, पीसी इत्यादि को प्रभावित कर सकते हैं.

सड़क सुरक्षा

जिन क्षेत्रों में आप गाड़ी चलाते हैं, वहाँ मोबाइल फ़ोन के उपयोग से संबंधित कानूनों और नियमों की जानकारी ले लें.

- गाड़ी चलाते समय हैंड-हेल्ड फ़ोन का उपयोग न करें.
- गाड़ी चलाने पर पूरा ध्यान दें.
- यदि उपलब्ध हो, तो हैंड्स-फ्री किट का उपयोग करें.
- यदि वाहन चलाते समय आवश्यक हो, तो कॉल करने या उत्तर देने से पहले वाहन को सड़क के किनारे लगाएँ.
- आरएफ ऊर्जा आपके वाहन के कुछ इलेक्ट्रॉनिक सिस्टम्स जैसे कार स्टीरियो और सुरक्षा उपकरण को प्रभावित कर सकती है.
- जब आपके वाहन में एयर बैग की सुविधा हो, तो लगे हुए या पोर्टेबल वायरलेस उपकरण स व्यवधान न डालें. यह अनुपयुक्त कार्य के कारण विफल हो सकता है अथवा गंभीर चोट पहुँचा सकता है.

सुरक्षित और प्रभावी उपयोग के दिशानिर्देश

- यदि आप यात्रा के समय संगीत सुन रहे हैं, तो कृपया सुनिश्चित करें कि वॉल्यूम उचित स्तर पर रहे जिससे आप अपने चारों ओर के वातावरण के प्रति सचेत रहें। यह तब विशेष रूप से जरूरी है जब आप रास्ते में हों।

अपने सुनने की क्षमता को नुकसान न पहुँचाएँ

यदि आप बहुत समय तक तेज ध्वनि सुनते हैं तो आपकी सुनने की क्षमता को क्षति पहुँच सकती है। इसलिए हम सलाह देते हैं कि आप अपना हैंडसेट कान के पास चालू या बंद न करें। हम इसकी भी सलाह देते हैं कि संगीत और कॉल वॉल्यूम उचित स्तर पर सेट हों।

विस्फोटक क्षेत्र

फ़ोन का उपयोग ऐसे स्थान पर न करें जहाँ विस्फोट हो रहे हों। प्रतिबंधों पर ध्यान दें और कानून व नियमों का पालन करें।

संभावित रूप से विस्फोट वाले वातावरण

- फ़ोन का उपयोग ईंधन भरने के स्थान पर न करें।
- ईंधन अथवा रसायनों के नजदीक इसका उपयोग न करें।
- ज्वलनशील गैस, तरल पदार्थ, अथवा विस्फोटकों को अपने वाहन में जहाँ आपका मोबाइल फ़ोन और सहायक वस्तुएँ रखी हैं, वहाँ न रखें।

एयरक्रॉफ़्ट में

वायरलेस डिवाइस से एयरक्रॉफ़्ट में बाधा उत्पन्न हो सकती है।

- किसी एयरक्रॉफ़्ट में जाने से पहले अपना मोबाइल फ़ोन बंद कर दें।
- क्रू की अनुमति के बिना इसे जमीन पर उपयोग न करें।

बच्चों

फ़ोन को बच्चों की पहुँच से दूर किसी सुरक्षित स्थान पर रखें। इसमें ऐसे कई भाग होते हैं, जिन्हें हटाने पर श्वासरोधन होने का खतरा हो सकता है।

सुरक्षित और प्रभावी उपयोग के दिशानिर्देश

आपातकालीन कॉल्स

आपातकालीन कॉल्स सभी मोबाइल नेटवर्क्स के तहत उपलब्ध नहीं हो सकते। इसलिए, आपको आपातकालीन कॉल्स के लिए केवल फ़ोन पर ही निर्भर नहीं रहना चाहिए। अपने स्थानीय सेवा प्रदाता से इसकी जानकारी लें।

बैटरी जानकारी और देखभाल

- बैटरी रिचार्ज करने के पहले आपको उसे पूरी तरह डिस्चार्ज करने की आवश्यकता नहीं है। अन्य बैटरी सिस्टम्स के विपरीत, ऐसा कोई प्रभाव नहीं है जिससे बैटरी के प्रदर्शन पर असर पड़ता है।
- केवल LG बैटरीज और चार्जर्स का उपयोग करें। LG के चार्जर्स बैटरी का जीवन बढ़ाने के लिए बने होते हैं।
- बैटरी पैक को अलग-अलग न करें या उसे शॉर्ट-सर्किट से बचाएँ।
- बैटरी पैक के धातु वाले हिस्सों को साफ रखें।
- बैटरी का प्रदर्शन अपेक्षाकृत न रहने पर उसे बदल दें। बैटरी पैक को सैकड़ों बार रिचार्ज किया जा सकता है, जब तक कि उसे बदलने की आवश्यकता न हो।

- यदि बैटरी को लंबे समय से उपयोग नहीं किया गया है तो उसकी क्षमता बढ़ाने के लिए उसे रिचार्ज करें।
- बैटरी चार्जर को सीधी धूप में न रखें या अधिक नमी वाली जगहों पर जैसे कि बाथरूम में इसका उपयोग न करें।
- बैटरी को गर्म या ठंडे स्थानों पर न रखें, इससे बैटरी के प्रदर्शन पर बुरा असर हो सकता है।
- यदि बैटरी को किसी गलत प्रकार की बैटरी से बदला जाता है तो विस्फोट का खतरा होता है।
- उपयोग की गई बैटरीज का निपटान निर्माता के निर्देशों के अनुसार ही करें। जब भी संभव हो इसे रीसायकल करें। इसे घरेलू कचरे की तरह न फेंकें।
- यदि आप बैटरी बदलना चाहते हैं तो सहायता के लिए इसे नजदीक के अधिकृत LG इलेक्ट्रॉनिक्स सेवा केन्द्र या डीलर के पास ले जाएँ।

सुरक्षित और प्रभावी उपयोग के दिशानिर्देश

- फ़ोन पूरी तरह चार्ज हो जाने पर चार्जर को वॉल सॉकेट से निकाल दें ताकि चार्जर के अनावश्यक ऊर्जा खपत को बचाया जा सके.
- बैटरी का वास्तविक जीवन नेटवर्क कॉन्फिगरेशन, उत्पाद सेटिंग्स, उपयोग प्रतिमान, बैटरी और वातावरण I की परिस्थितियों पर निर्भर करेगा.

परिवेश का तापमान

अधिकतम : +55°C (डिस्चार्जिंग)
+45°C (चार्जिंग)

न्यूनतम : -10°C

ब्लूटूथ QD ID B016112

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD350

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31-36-547-8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

12. Nov. 2009


Signature of representative

GD350 User Guide — English



This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Getting to know your phone



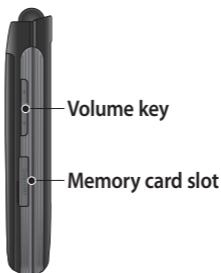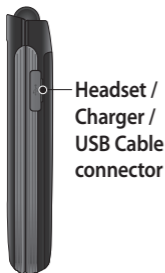

Installing a memory card

Lift the memory card cover and insert a micro SD card with the golden contact area facing downwards. Close the memory card cover so that it clicks shut.

To remove the memory card, gently push it as shown in the diagram.



Note: A memory card is an optional accessory.

Formatting the memory card

From your home screen, press **Menu** and select **Settings**. Choose **Memory Info**, select **External memory** and press **Format**, and insert security code.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

› The SIM card can be easily damaged by scratches or bending, so be careful when

handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert your battery
- 5 Close the battery cover
- 6 Charge your battery



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Menu map

1. Messaging

- 1.1 Create message
- 1.2 Inbox
- 1.3 My mailbox
- 1.4 Drafts
- 1.5 Outbox
- 1.6 Sent items
- 1.7 Saved items
- 1.8 Emoticons
- 1.9 Message settings

2. Contacts

- 2.1 Names
- 2.2 Settings
- 2.3 Groups
- 2.4 Speed dials
- 2.5 Service dial numbers
- 2.6 Own number
- 2.7 My business card

3. Call log

- 3.1 Call log
- 3.2 Missed calls
- 3.3 Received calls
- 3.4 Dialed numbers
- 3.5 Call duration
- 3.6 Packet data counter
- 3.7 Call costs

4. Settings

- 4.1 Profiles
- 4.2 Display
- 4.3 Date and time
- 4.4 Connectivity
- 4.5 Call
- 4.6 Phone
- 4.7 Network
- 4.8 Internet profiles
- 4.9 Access points
- 4.10 Packet data conn.

4.11 Security

- 4.12 Memory info.
- 4.13 Restore factory settings

5. Gallery

- 5.1 My memory card
- 5.2 My images
- 5.3 My sounds
- 5.4 My videos
- 5.5 My games & apps
- 5.6 Others

Menu map

6. Media

- 6.1 Camera
- 6.2 Video
- 6.3 Music
- 6.4 FM radio
- 6.5 Voice recorder
- 6.6 Ringtone creator

7. Organiser

- 7.1 Alarm clock
- 7.2 Calendar
- 7.3 To-do list
- 7.4 Notes
- 7.5 Secret notes
- 7.6 Cash Book
- 7.7 BMI Calculator
- 7.8 Calculator
- 7.9 Stopwatch
- 7.10 Date finder
- 7.11 Converter
- 7.12 World time
- 7.13 Go to
- 7.14 SIM Services
- 7.15 Settings

8. Applications



- 8.1 My games & apps
- 8.2 Settings

9. Web

- 9.1 Home
- 9.2 Bookmarks
- 9.3 Last web address
- 9.4 Settings
- 9.5 Go to address
- 9.6 Saved pages

Calls


Making a call

- 1 Key in the number using the keypad. To delete a digit press **CLR**.
- 2 Press  to initiate the call.
- 3 To end the call, press .


TIP! To enter + when making an international call, press and hold **0**.


TIP! To control the volume during a call, press volume key.

Making a call from your contacts


- 1 Select **Names** from the home screen.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for **Office**, Press **6** three times to select the first character, "O".
- 3 Select **Make call** from **Options** or press  to initiate the call.


Answering and rejecting a call

When your phone rings, press  to answer the call.

To mute your phone while it is ringing, simply select **Silent**. This is useful if you have forgotten to change your profile to **Silent** for a meeting. Press  or select **Reject** to reject the incoming call.

Using the speakerphone

During a call, you can activate speakerphone by pressing  key and you can use the handset in hands-free.

If the speakerphone is active, press  key again to resume normal handset conversation mode.

Speed dialling

Press **Menu** and select **Contacts**, then choose **Speed dials**.

You can assign a speed dial number to a contact you call frequently.

Speed dial 1 is set to your voice mail and you can not change it.

TIP! There are two LG Mobile customer care numbers provided in phone book. You can directly call the LG Customer Care I or edit LG Customer Care II with area code and make the call.

Viewing your call logs

Press **Menu** and select **Call log**, then choose **Call log**.

You can check the call record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call**.

Call divert - Choose whether to divert your calls.

Call barring - Select when you would like calls to be barred.

Fixed dial numbers - Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Call waiting - Be alerted when you have a call waiting. (Depends on your network provider.)

Call reject - Select **Off** or **On** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.

Send my number - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)

Auto redial - Allows you to set the auto redial function when a call attempt has failed.

Answer mode - Allows you to set the answering method. You can choose from **Press send key**, **Open flip** or **Press any key**.

Free Call Time Tracker - Choose whether to show your free call time or not.

Minute minder - Determines whether to sound a tone when you are on the phone as per the set time.

BT answer mode - Choose how to answer a call when using a Bluetooth headset. Set **Hands-free** or **Handset**.

Save new number - Choose **Yes** or **No**.

Contacts

Searching for a contact


- 1 Select **Names** from the home screen.
- 2 Using the keypad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Press **Menu** and select **Contacts** then choose **Names**. Press **Options** and **Add new contact**.

- 2 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 3 Enter the number and select **Options** then choose **Save**.

Note: If you add more information, press **Options** and choose **Add detail** then select options you want.

Note: When you are storing a contact's e-mail address, press  key and select a symbol @ then **OK**.

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family, Friends, Colleague, School** and **VIP** already set up on the phone.

Messaging

Your GD350 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), e-mail as well as the network's service messages.

Sending a message

- 1 Press **Menu**, select **Messaging**, and choose **Create message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. The message editor combines **Text message** and **Multimedia messages** into one intuitive and easy to switch between editor. The default setting of the message editor is text message.
- 4 Enter the phone number or press **Options** and select **Send** to add a contact from the list of your contacts.

You can even add multiple contacts by selecting **Add recipient**.

Note: Message can be sent to a group also. Edit the message then press send and select contact group and select the group you want.

You can send SMS to many users at a time. In To field , go to Send options and select Contacts, it will open the contacts list where in user can mark/unmark contacts for sending message. First 20 contacts marked will be chosen if Mark all is selected.

You can send SMS at predefined time to the particular contact by creating new scheduled SMS in Calendar menu. You can move messages from SIM memory to Phone memory & Vice Versa.

5 Enter your message.

6 Select **Options** and choose **Insert** to add an **Image**, **Video clip**, **Sound clip**,

Schedule, **Business card**, **Note**, **Text field**, **To do**, or a **Text template**.

7 Press **Send**.

TIP! You can select your message type as SMS or MMS when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, press **Menu > Messaging > Message settings > Text message**, and choose **Send long text as**.

WARNING: Image, Video clip, Sound clip, Schedule, Business card, Text field or Subject is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text




You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 mode, Abc mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 mode

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.


Using the T9 Mode

- 1 When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
 - If the word is still incorrect after typing completely, press the  key once or more to cycle through the other word options.

- If the desired word is missing from the word choices list, add it by using the Abc mode.

- 2 Enter the whole word before editing or deleting any keystrokes.

- To delete letters, press the CLR.

- Complete each word with a space by pressing the  key.

Abc mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Setting up your e-mail

You can stay in touch on the move using e-mail on your GD350. It's quick and simple to set up a POP3 or IMAP4 e-mail account.

- 1 Press **Menu**, select **Messaging**, and choose **Message Settings**.
- 2 Select **E-mail** then **E-mail accounts**.
- 3 Press **Add** and follow the pop up instruction and enter the information required.

Sending an e-mail using your new account

To send/receive an e-mail, you should set up an e-mail account.

- 1 Select **Menu**, select **Messaging** and choose **Create message**.
- 2 Choose **E-mail** and a new e-mail will open.

- 3 Enter the recipient's address and write a subject.
- 4 Enter your message.
- 5 Press **Options**, select **Insert** to add an **Image**, **Video clip**, **Sound clip**, **Business card**, **Schedule** or a **Note**.
- 6 Press **Send** and your e-mail will be sent.

Message folders

Press **Menu**, select **Messaging**. The folder structure used on your GD350 is fairly self explanatory.

Create message - Allows you to create new message.

Inbox - All the messages you receive are placed into your **Inbox**. From here you can reply, forward and more.

My mailbox - All your e-mails you receive are placed into **My mailbox**.

Drafts - If you don't have time to finish writing a message, you can save what you have written so far in here.

Outbox - This is a temporary storage folder used while messages are being sent.

Sent items - Copies of all the messages you send are kept into your **Sent items**.

Saved Items - You can access your **Saved messages**, **Text templates** and **Multimedia templates**.

Emoticons - A list of useful emoticons already written for a quick reply. You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

Message settings - Your message settings are pre-defined so that you can send messages immediately. If you would like to change the settings, you can do this using the settings options.

Camera


Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

Taking a quick photo

- 1 Press **Menu** and select **Media**. Select **Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.
- 3 Press **OK** key to take a photo.

Video camera




Shooting a quick video

- 1 Press **Menu** and select **Media**, then choose **Video**.
- 2 Point the camera lens towards the subject of the video.
- 3 Press  key to start recording.
- 4 REC will appear in the viewfinder and a timer will show the length of your video.
- 5 Select **Stop** to stop recording.

Music

Your GD350 has a built-in music player so you can play all your favourite music.

Playing a song

- 1 Press **Menu** and select **Media**, then choose **Music**.
- 2 Choose **All tracks** then select the song you want to play.
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select **Back** to stop the music and return to the music player menu.

Note: Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such materials.

FM radio

Your GD350 has an **FM radio** feature so you can tune into your favourite stations and listen on the move.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector in order to listen to the radio and keep the good radio reception.

Searching for stations

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select **Option** and choose **Auto scan** then select **Yes**. You can also use the left and right navigation keys to search for stations.

Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

TIP! You can listen to the radio via built-in speaker. Press **Options**, select **Listen via speaker**.

Recording the Radio

- 1 Press **OK** key during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press **OK** key. If recording is done, the recorded contents will be saved in **Gallery** as mp3 file.

Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Media**, then choose **Voice recorder**.
- 2 Press **OK** key to begin recording.
- 3 Choose **OK** key to end the recording.
- 4 Press **Options** and select **Play** to listen to the recording.

Ringtone creator

Creating your ringtone

- 1 Press **Menu** and select **Media**, then choose **Ringtone creator**.
- 2 Select the music what you would like to use in music lists, and then select **OK** key.
- 3 Select **Cut** when you want to start recoding music to use as a Ringtone while playing music.
- 4 Select **Stop** to stop.
- 5 Select **Save** and choose from **Original file** or **New file**. Then select **Save**.

Gallery

You can store any media files into your phone's memory so that you have easy access to all of your images, sounds, videos, others and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

Applications

Your GD350 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press **Menu** and select **Applications**. Choose **My games & apps**.

Note: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

GD350 also comes with preloaded applications.

- **RockeTalk** - RockeTalk is a social networking application to enable you to search and make new friends and stay connected with them using free text and picture chat. RockeTalk application also includes a multiple Instant Messenger (IM) chat feature compatible with Yahoo, Google Talk, MSN, AIM and ICQ.

Note: RocheTalk is free to use. RockeTalk uses a data (internet) connection, and operator data costs will apply. We recommend that you use an unlimited (flat rate) data plan, which you can get from your operator.

- **Just Cricket:** Just Cricket is a featured java application for mobile phone which provides online access for Flash simulation of live matches, Archive Matches etc...
- **News Hunt:** News Hunt is a unique mobile application designed to enable viewing and reading newspapers in the regional languages on the go.

Organiser

Setting your alarm (Menu > Organiser > Alarm clock)

You can set up to 5 alarm clocks to go off at a specified time.

Using the calendar (Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Adding an item to your to do list (Menu > Organiser > To-do list)

You can view, edit and add tasks to do.

Adding a note (Menu > Organiser > Notes)

You can register your own notes here.

Secret notes (Menu > Organiser > Secret notes)

You can write the private memo to protect your privacy. You enter the security code to use this menu.

Using cash book (Menu > Organiser > Cash Book)

Cash book is a simple accounting book that is used to record basic information about cash receipts and payments. It provides you an easy way of keeping up with how much money is coming in and what bills are getting paid.

Calculating your BMI (Menu > Organiser > BMI Calculator)

BMI(Body Mass Index) is a measure of body fat based on height and weight.

To calculate your BMI, press **Edit** and choose gender, enter your weight and height. Then select **Done**.

Using your calculator (Menu > Organiser > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication, division and Scientific applications also.

Using the stopwatch (Menu > Organiser > Stopwatch)

This option allows you to use the function of a stopwatch.

Date finder (Menu > Organiser > Date finder)

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed.

Converting a unit (Menu > Organiser > Converter)

This converts many measurements into a unit you want.

Adding a city to your world time (Menu > Organiser > World time)

You can add a required city to the list of world clock. You can also check the current time of major cities around the world.

Go to (Menu > Organiser > Go to)

It helps you to go to the menu you search for. You can set the item as Go to.

SIM services (Menu > Organiser > SIM services)

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Web

Accessing the wap browser

You can launch the wap browser and access the homepage of the activated profile on Web settings. You can also manually enter an URL address and access the associated wap page.

- 1 Press **Menu** and select **Web**.
- 2 To access the wap browser homepage directly, select **Home**. Alternately, select **Go to** address and type in your desired URL.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Settings

Personalising your profiles (Menu > Settings > Profiles)

You can personalise each profile setting. Choose the profile you want and select **Options** and choose **Edit**.

Using flight mode (Menu > Settings > Profiles > Flight mode)

Use this function to switch the flight mode on. You will not be able to make calls, connect to the Internet, send messages when flight mode is switched on.

Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

Changing your date & time (Menu > Settings > Date and time)

You can set functions relating to the date and time.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from switch on. If you want to change any settings, use this menu. You can configure the network setting and data access profiles in this menu.

Press **Menu** and select **Settings** then choose **Connectivity**. Your options are:

Bluetooth - Set up your GD350 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

USB connection mode - You can select the USB connection mode on your phone for several uses.

- **Mass storage:** Select this and connect the handset to your computer and drag and drop files to the GD350 removable device folder.
- **PC Suite:** Select this and connect the handset to your computer in PC Sync mode.
- **Always Ask:** Selecting this, will give an option, to select the mode, when handset is connected to the computer, every time.

Note: To use the USB mass storage function, you will need to insert an external memory card in your phone.

Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** then choose **Connectivity**.
- 2 Choose **Bluetooth** and select **Settings**.
Make your changes to:

My phone's visibility

- Choose whether to **Visible**, **Hidden** or **Visible for 1 min** your device to others.

My phone's name - Enter a name for your LG GD350.

Supported services - Shows what it supports.

My address - View your Bluetooth address.

Pairing with another Bluetooth device

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My phone's visibility**, then **Visible**.
- 2 Select **Active device** from the **Bluetooth** menu.
- 3 Your GD350 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, then handset create passcode by default everytime you connect.
- 5 Your phone will then connect to the other device.
- 6 Your passcode protected Bluetooth connection is now ready.

Installing LG PC Suite on your computer

- 1 Go to www.lgmobile.com and choose your region first and then your country.
- 2 Choose Support menu, select Manual & Software and click Go to Manual & S/W download section to download.
- 3 Select the language you would like the installer to run in and click OK.
- 4 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Changing your other settings

Network - Select network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.

Internet profile - This menu shows the Internet profiles. You can create new profiles, delete or edit them using the options menu. However, you cannot delete or edit default configurations.

Access points - This menu shows the access points list. You can create new profiles, delete or edit them by using the options menu. However, you cannot delete or edit default configurations.

Packet data conn. - If you select "When available", your phone is automatically registered to a GPRS network when you switch the phone on. If you select "When needed", the GPRS connection is established for the duration of a WAP or application connection.

Changing your phone settings (Menu > Settings > Phone)

Enjoy the freedom of adapting how your GD350 works for your own style.

My Navi Key - You can change the shortcuts of 4 navigation keys.

Language - You can change the language for the display texts in your phone. This change will also affect the language input mode.

Power save - Choose to switch the power save settings **Auto**, **Always on** or **Off**. If you set **Always on**, you can save the battery power.

Information - View the technical information for your GD350.

Changing your security settings (Menu > Settings > Security)

Change your security settings to keep your GD350 and the important information it holds protected.

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Handset lock - Choose to lock your handset.

Lock if SIM is changed - If you activate this option, your phone will request a security code when you change your SIM card.

Anti-theft mobile tracker

- When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the Sending number list with name, primary number and secondary number. Default ATMT code is "0000."

ATMT SMS will contain information about the stolen phone IMEI, current location (captured as per Cell Broadcast message) & number of the person who is using that handset.

Change codes - Change your **PIN code** (This menu item will appear if PIN code request is set to On), **PIN2 code**, **Security code** or **Anti-theft code**.

Application lock - Choose the menu to lock from the list.

Viewing memory status (Menu > Settings > Memory info.)

You can use the memory manager to determine how each memory is used and see how much space is available: common, reserved, SIM and external memory and also set the primary storage when the memory card is inserted.

Resetting your phone (Menu > Settings > Restore factory settings)

Use **Restore factory settings** to reset all the settings to their factory definitions. You need the security code to activate this function. The default security code is set to "0000".

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service center.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding.

Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone.

As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Guidelines for Safe and Efficient Use

Exposure to Radio Frequency Energy

Radio Wave Exposure and Specific Absorption Rate (SAR) Information


This GD350 mobile phone model has been designed to comply with the applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. SAR tests are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels for various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this phone model tested by DASY4 for use close to the ear is 0.955 W/kg (10 g), and when worn on the body is 0.686 W/kg (10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE),

Guidelines for Safe and Efficient Use (Continued)

which is 1.6 W/kg averaged over 1 g of tissue.

Product Care and Maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.

- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient Phone Operation

Electronic Devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might experience disturbance due to mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

Road Safety

Check the laws and regulations on the use of mobile phones in the areas where you drive.

- Do not use a hand-held phone while driving.
- Give your full attention to driving.

Guidelines for Safe and Efficient Use (Continued)

- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle, such as car stereos and safety equipment.
- If your vehicle is equipped with an airbag, do not obstruct it with installed or portable wireless equipment. This may cause the airbag to fail or cause serious injury due to improper performance.
- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid Damage to Your Hearing

Damage to your hearing can occur if you are exposed to loud sounds for long periods of time. We therefore recommend that you do not turn the handset on or off when it is close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting Area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

Potentially Explosive Atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In Aircraft

Wireless devices can cause interference to aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children.

It includes small parts which may cause a choking hazard if detached.

Emergency Calls

Emergency calls may not be available under all mobile networks. You should therefore never depend solely on the phone for emergency calls.

Check with your local service provider.

Battery Information and Care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

Guidelines for Safe and Efficient Use (Continued)

- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in places with high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose of batteries in the household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Ambient Temperatures

Max.: +55°C (discharging)
+45°C (charging)

Min.: -10°C

Bluetooth QD ID B016112

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD350

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31-36-547-8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

12. Nov. 2009


Signature of representative

LG Mobile



WARRANTY CARD

This LG handset and charger comes with a 12-month warranty from date of purchase or 15 months from manufacturing date of corresponding IMEI No. Of the unit whichever is earlier, against defect in material or workmanship. In case of a defect, LG Electronics India Pvt. Ltd. undertakes to get the set repaired free of charge through its authorised service centre (ASC) or service dealer subject to following conditions:

Terms and Conditions

1. This warranty is applicable to the first purchase and in no case it can be transferred or extended.
2. Repair of this product will be carried out on a carry in basis to the nearest ASC.
3. While the company will make every effort to carry out repairs at the earliest, it however is made explicitly clear that the company is under no obligation to do so in a specified period of time.
4. The company or its authorised ASC/ service dealer reserves the right to retain any parts of the component/s replaced at its discretion. In the event of a defect being noticed in the equipment during the warranty period.
5. This warranty entitles the purchaser to free of cost repairs of the unit within warranty period and does not entitle for replacement or refund of entire unit. Claims, if any, to this warranty shall in no case exceed the purchase price of the unit.
6. In case of any software upgradation of the phone, no warranty is provided on phone memory or phone book.
7. The warranty is void in case the serial no./ IMEI no. is tampered / disfigured or details in the warranty card are not properly filled up at the time of purchase.
8. This warranty is not valid for damages resulting due to negligence, mishandling, improper use, tampering, breakage, soaking, fire, unauthorised repair and failure due to network upgrades.
9. Batteries are covered under warranty for a period of 6 months from date of purchase or 9 months from date of corresponding IMEI no. of the unit whichever is earlier
10. Warranty does not cover accessories external to the equipment supplied by the dealer.
11. The Delhi / New Delhi courts shall have the jurisdiction to try any dispute and /or suits related to or arising out of this agreement.

Customer Information Center/ Call Center Number

For any query related to the after sales service and customer support please contact us at the numbers listed below.

LG 24 x 7 CALL CENTER OPERATIONS

1800-180-9999 (Toll Free) **5757554** (Send SMS)

www.lgindia.com
lgservice@lgindia.com

BRANCH ADDRESSES

S. No.	Branch	Branch Office Address	STD Code	Phone No.
1	Ahmedabad	LGEIL, 233-234, Platinum Plaza, Judges Bungalow Road, Bodakdev Road, Ahmedabad - 51	079	40040013 / 14
2	Asansol	LGEIL, Block-E, 1st Floor, P.C Chatterjee Market, Rambandhu Tala, GT Road (E) Asansol - 713303	0341	3292009 / 3292010
3	Aurangabad	LGEIL, 302 CIDCO No 3, Opp Hotel Ramgiri, Jalna Road, Aurangabad - 431003	0240	2474055 / 32095436 / 32095437 / 32095438
4	Bangalore	LGEIL, No. 914, 2nd Floor, Sri Venkateshwara Complex, Opp. IBB Petrol Bunk, 80th Road, 6th Block, Koramangala - Bangalore - 560095	080	41145145 / 41144750 / 41144751 / 301910754 / 301910753
5	Bhopal	13A Vignes Warehousing Corporation, Sector-G Govindpura Industrial Area J K Road Bhopal	0755	4062900 / 3092938 / 3959804
6	Bhubaneswar	LGEIL, Plot No. 02, 1st Flr., Bapuji Nagar, Bhubaneswar - 751009	0674	2531430 / 2534280 / 3966525 / 3966526
7	Chandigarh	LGEIL, SCO No. 142-143, 3rd Floor, Sector-34A Chandigarh. - 160002	0172	5087389 / 90 / 5089107 / 3256001 / 3256003
8	Chennai	LGEIL, AA11, 2nd Avenue, Fatima Tower, Anna Nagar West, Chennai - 600040	044	65510501 - 04
9	Cochin	LGEIL, 40/1270, Vasudeva Buildings, T.D. Road, Ernakulam Cochin - 682011	0484	2369743 / 2370444 / 2370484 / 4027444 / 4027555
10	Coimbatore	LGEIL, 250a, Sangapur Main Road, Kannappa Nagar, Coimbatore - 641027	0422	2332197 / 2332195 / 2332506 / 3094613 / 3094573
11	Dehradun	LGEIL, M- 22, Mobbewala, Tata Commercial Compound, Dehradun Saharapur Road, Dehradun	0135	2644213 / 283
12	Delhi	LGEIL, A-27, Mohan Co-operative, Industrial Estate, New Delhi	011	26991411 / 12 / 13
13	Ghaziabad	LGEIL, J-10, RDC Rajnagar Ghaziabad - 201001	0120	9811354152 / 3 / 64 / 65
14	Goa	LGEIL, Plot No-D-36D-4, Rego Baug, Alto Santicruz, Bambolim, Goa - 403	0832	3294955 / 3294956 / 3294759
15	Gurgaon	LGEIL, 101 Flr, A Block, Centre Point Bldg, Sushant Lok., PH-I, Gurgaon - 122001	0124	4047461 / 62 / 63 / 4272867 / 4047460
16	Guwahati	LGEIL, Shantiner Bhawan, C K Aggarwal Path, Chenikurthi, Guwahati - 781003	0361	2663895 / 2666958 / 2665983 / 2668984
17	Hubli	LGEIL, 603/18, Ravi Nagar Road, Behind Renuka Petrol Pump, Gokul Road, Hubli - 580030	0836	4250251 / 52 / 2337251 / 52
18	Hyderabad	LGEIL, 1st Floor, Survey No.54, Pulla Reddy Building, Vikarampuri Main Road Kharkhana, Secunderabad - 500004	040	27811732 / 33 / 34
19	Indore	LGEIL, 3rd flr., 304 Bansri Trade Centre, 58/15 M. G. Road, Indore - 452003	0731	4065523 / 24 / 40822157
20	Jaipur	LGEIL, B-71, Sahakar Marg, Lal Kothi Scheme, Jaipur - 302015	0141	5111118 / 5113028 / 5105392
21	Jalandhar	LGEIL, Village Khajuria, Near Hawaii Restaurant Jalandhar, Phagwara Highway, G T Road, Jalandhar	01824	502667 / 508025 / 502668
22	Jammu	LGEIL, Plot No. -52, Yard No. 6, Transport Nagar, Narwal, Jammu - 180006	0191	2477420 / 2477419 / 2474396 / 2474384
23	Jodhpur	LGEIL, 22(1-A)/21(2-B)/2, RIICO Heavy Industrial area, Jodhpur - 342003	0291	2742384 / 392
24	Kolkata	LGEIL, 1, Ho-Chi-Min-Sarani, 6th Floor, Metro Towers, Kolkata - 700071	033	22883250 / 51 / 52
25	Kundli	LGEIL, Sunshine Enterprises, Sundeer Cold Storage, Gt Karnal Road, Kundli - Sonapat	0130	2219201 / 02 / 03
26	Lucknow	LGEIL, B-537, Hari Kuri, Keshav Nagar, Sitapur Road Lucknow - 226020	0522	2757538 / 39 / 2759121
27	Ludhiana	LGEIL, Village Jhande, Near Badowal Railway Station, Opp ferozpur Road Ludhiana.	0161	2804413 / 19
28	Mumbai	LGEIL, Trade Star, 4th Floor, A Wing, J B Nagar, Andheri Kurla Road, Andheri (E) Mumbai - 400059	022	28352882 - 2887
29	Nagpur	LGEIL, Sa, Road No. 13, Behind Msrct Workshop, MIDC Hinga, Nagpur - 440016	0714	235120 / 235122
30	Patna	LGEIL, 2nd Floor, Ankit Chandra Deep Complex, Bander Bageecha, Near Samrat Hotel, Patna - 800001.	0612	3299156
31	Pune	LGEIL, 105/106, Premium Point, GM Road, Opp Modern High School, Ilford Floor, Shivaji Marg, Pune - 411005	020	66030100 / 732
32	Raipur	LGEIL, Nathani Compound, Shyam Nagar, Katora Talab, Raipur (C.G)	0771	4053171 / 4037470 / 4048745
33	Ranchi	LGEIL, 402, Commerce Tower, Opp. Gel Church Complex, Main Road, Ranchi	0651	3294026 / 2331815 / 3090426
34	Surat	LGEIL, 1001-1004, Ascon Plaza, IInd Flr, Anand Mahal Road, Behind Bhulka Bhavan School, Adajan, Surat - 395009	0261	2730982 / 83 / 84
35	Thane	LGEIL, Gal Shop No. - 206, 207, Sai Plaza, Sai Plaza, Above Vijay Sales Opp. Cine Wonder Mall, Ghodbunder Road, Thane(West) - 406007	022	25472633 / 2637
36	Varanasi	LGEIL, Pama Complex, DLW, Lahartara Road, Shivdasapur, Manduadih, Varanasi UP - 221002	0542	2373432 / 36 / 37
37	Vijaywada	LGEIL, Door No 32-21-7, Ratnamamba Street, Prajasakti Nagar, Vijaywada - 520010, Andhra Pradesh	0866	2497283 / 87
38	Warangal	LGEIL, HOUSE No. 1-8-598/1 FIRST FLOOR, BESIDE HDFC BANK NAKKALGUTTA, HANAMAKONDA-506001 (WARANGAL)	0870	2551453

Dealer name with Stamp Dealer address
IMEI No. Date of sale Serial no.

LG Electronics India Pvt. Ltd., Plot No. 51, Udyog Vihar Surajpur Kasna Road, Greater Noida, U.P.

CHOLAMANDALAM MS GENERAL INSURANCE CO. LTD.
2nd Floor, 9B, DLF Cyber City, Phase-III,
Gurgaon - 122002

TO

CHOLAMANDALAM MS GENERAL
INSURANCE CO. LTD.

DATE...../...../.....

2nd Floor, 9B, DLF Cyber City,
Phase-III, Gurgaon - 122002.
Haryana

Dear Sir,

RE: Loss of mobile phone no.:

MAKEMODEL

This is to inform that my mobile phone has been lost due to theft on

.....at.....FIR/DD entry has been lodged

with Police Station. I am enclosing the Claim

Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name

CLAIM FORM CUM CLAIM BILL

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No. Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft Time

Place of Theft

Details of Theft

FIR No./DD No. Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES NO

DATE

PLACE

SIGNATURE OF CUSTOMER

TERMS AND CONDITIONS:

POLICY COVERAGE

1. Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only. No other loss covered.
2. Offer applicable on all purchases made from 7th April 2010 to 6th April 2011 under Policy No. **PBG-00016391-000-00** Dated 07/04/2010
3. Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
4. Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%

CLAIM PROCESSING DOCUMENTS

In the event of handset loss, the buyer should follow the understated procedure:

- a) (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
- (ii) Block the SIM Card with your service provider within 3 days.
- (iii) Send information to the insurance company within 7 days of the loss.
- b) Documents required:
 - (i) Original Invoice & Cash Memo.
 - (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
 - (iii) Translation of vernacular documents in English/Hindi.
 - (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above.

Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.

Note: In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of Cholamandalam MS General Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to Cholamandalam MS General Insurance Co. Ltd. 2nd Floor, 9B, DLF Cyber City, Phase-III, Gurgaon - 122002. Tel. No. 1800-200-5544, Fax No. 0124-30051-99, e-mail id : customercare@cholams.murugappa.com



DISCHARGE VOUCHER

Received from Cholamandalam MS General Insurance Co. Ltd. under Policy No..... in full and final discharge of our claim, the sum of (in words) Rs.

Signature of Insured /Customer
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:

Customer Information Center

For any query related to the after sales service and customer support please contact us at below details



LG

24 x 7

CALL CENTER OPERATIONS



CALL

1800-180-9999

(Toll Free)



SMS

5757554

(Send SMS)



CLICK

www.lgindia.com

lgservice@lgindia.com

