



ไ
ท
ย
ENGLISH

คู่มือการใช้
GD880

คู่มือการใช้
GD880

LG Electronics



CE 0168

P/N : MMBB0374256 (1.0) W

www.lg.com

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ
ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของ
ทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์เทลออกเลียน
แบบจากตลาดลักลอบนำเขาสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้
รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ

เพื่อให้ แนใจ ว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG,
หนึ่งขอความปรอุมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG
โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ
ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจ
สอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการ
รับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม
เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ.
ทันทีที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง
คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์
จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า
จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพรองจาก
มาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานใน
การซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

LG will bear the cost of one SMS for the product authentication program.

For promotion, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Bluetooth QD ID B016192



ข้อมูลบางอย่างในคู่มือเล่มนี้อาจ
ไม่สามารถใช้ได้กับโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของ
โทรศัพท์หรือผู้ให้บริการของคุณ



คู่มือการใช้ **GD880**

ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น GD880
ของ LG ซึ่งทันสมัยและมีขนาดกะทัดรัดออกแบบให้
ทำงานด้วยการใช้เทคโนโลยีการสื่อสารเคลื่อนที่แบบ
ดิจิตอลใหม่ล่าสุด

สารบัญ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ.....	7	การใช้การโอนสาย.....	22
เริ่มทำความรู้จักกับโทรศัพท์ของคุณ.....	12	การใช้การป้องกันการโทร.....	23
ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ.....	13	การใช้ข้อความขอโทษ.....	23
การใส่ซิมและแบตเตอรี่.....	14	การเปลี่ยนการตั้งค่าการโทรทั่วไป.....	23
การชาร์จโทรศัพท์.....	15	การเปลี่ยนการตั้งค่าสนทนาทางวิดีโอ.....	24
การ์ดหน่วยความจำ.....	16	ค่าโทร.....	24
การใช้หน้าจอสัมผัส.....	17	เวลาในการโทร.....	24
เคล็ดลับสำหรับหน้าจอสัมผัส.....	17	ปริมาณข้อมูล.....	24
ควบคุมหน้าจอสัมผัส.....	17	รายชื่อ.....	25
หน้าจอหลักของคุณ.....	18	การค้นหารายชื่อ.....	25
คุณสามารถเพิ่มเมนูที่ประทับใจในเมนูหลักได้.....	18	การเพิ่มรายชื่อใหม่.....	25
ปุ่มด่วน.....	19	การสร้างกลุ่ม.....	25
การโทร.....	20	การเปลี่ยนการตั้งค่าของรายชื่อ.....	26
การโทรออก.....	20	การดูข้อมูล.....	26
การโทรออกโดยใช้รายชื่อ.....	20	การอิมพอร์ตเพื่อนจากเครือข่ายสังคม.....	27
การรับสายและการปฏิเสธสายเรียกเข้า.....	20	ข้อความ.....	28
ตัวเลือกต่างๆ ระหว่างใช้สาย.....	21	ข้อความ.....	28
โทรด่วน.....	22	การส่งข้อความ.....	28
การใช้สายที่สอง.....	22	การป้อนข้อความ.....	28
การดูบันทึกการโทร.....	22	โหมด T9.....	28
		การใช้อีโมติคอน.....	28
		การใช้ลายเซ็น.....	29
		การเปลี่ยนการตั้งค่าข้อความตัวอักษร.....	29

สารบัญ

การเปลี่ยนการตั้งค่าข้อความ		
มัลติมีเดีย	29	
การเปลี่ยนการตั้งค่าอื่นๆ	30	
การตั้งค่าอีเมล	30	
อีเมลแอดเดสส์แบบ Microsoft Exchange.....	31	
การตั้งอีเมลของคุณ	31	
การส่งอีเมลโดยใช้แอดเดสส์ใหม่	31	
การเปลี่ยนการตั้งค่าอีเมล	31	
กล้องถ่ายรูป	33	
ทำความเข้าใจกับช่องมองภาพ	33	
การถ่ายภาพด้วย	34	
ภายหลังการถ่ายรูป	34	
การใช้การตั้งค่าขั้นสูง	35	
กล้องวิดีโอ	37	
ทำความเข้าใจกับช่องมองภาพ	37	
การถ่ายวิดีโอด้วย	38	
หลังจากถ่ายวิดีโอ	38	
การใช้การตั้งค่าขั้นสูง	39	
รูปภาพและวิดีโอ	40	
การดูรูปภาพและวิดีโอ	40	
การบันทึกภาพจากวิดีโอ.....	40	
การดูรูปภาพแบบภาพสไลด์	40	
การตั้งค่ารูปภาพเป็นพื้นหลัง	40	
การแก้ไขรูปภาพ	41	
มัลติมีเดีย	42	
รูปภาพ	42	
การส่งรูปภาพ	42	
การใช้รูปภาพ.....	42	
การพิมพ์ภาพ	42	
การย้ายหรือคัดลอกรูปภาพ	42	
เสียง	43	
การใช้เสียง	43	
วิดีโอ	43	
การดูวิดีโอ	43	
การส่งวิดีโอคลิป.....	43	
แฟลชคอนเทนท์	43	
เอกสาร	43	
เนื้อหาอื่น.....	43	
เกมส์	44	
การเล่นเกมส์	44	
การโอนไฟล์ไปที่โทรศัพท์.....	44	
เพลง	44	
การโอนเพลงไปยังโทรศัพท์	45	
การเล่นเพลง	45	
วิทยุ FM	45	

ปฏิทิน46

SNS..... 46

Facebook..... 46

Twitter..... 46

ตั้งค่า 46

การเพิ่มเหตุการณ์ลงในปฏิทิน 46

การเพิ่มรายการลงในสิ่งที่ต้องทำ 46

การเพิ่มบันทึก..... 47

การตั้งเวลาการปลุก 47

ารบันทึกเสียงหรือเสียงพูด 47

การใช้เครื่องคิดเลข..... 47

การแปลงหน่วย 48

การเพิ่มเมืองในเวลาทั่วโลก 48

การใช้นาฬิกาจับเวลา 48

LG ซิงค์..... 48

PC ซิงค์.....50

การติดตั้ง LG PC Suite

ลงในคอมพิวเตอร์..... 50

การเชื่อมต่อโทรศัพท์เข้ากับ

คอมพิวเตอร์ 50

การสำรองข้อมูลและการเรียกคืน

ข้อมูลของโทรศัพท์..... 50

การดูไฟล์ในโทรศัพท์บน

คอมพิวเตอร์ 50

การซิงโครไนซ์รายชื่อ..... 51

การซิงโครไนซ์ข้อความ 51

การใช้โทรศัพท์เป็นอุปกรณ์

ซิงค์เพลง..... 51

ตัวแปลง DivX..... 51

OSP (On Screen Phone).....53

การติดตั้ง OSP ลงในคอมพิวเตอร์ 53

การเริ่มต้น OSP 53

การเชื่อมต่อโทรศัพท์เข้ากับ

คอมพิวเตอร์ 53

การยกเลิกการเชื่อมต่อโทรศัพท์

กับคอมพิวเตอร์ 53

การควบคุมโทรศัพท์..... 54

การโอนไฟล์ระหว่างโทรศัพท์และ

คอมพิวเตอร์ 54

การแก้ไขไฟล์ในโทรศัพท์ 54

การใช้การแจ้งของ OSP 54

เว็บไซต์.....55

การเข้าใช้เว็บไซต์..... 55

การเพิ่มและการใช้บุ๊กมาร์ค 55

การใช้ RSS reader 55

การบันทึกเพลง 56

การเข้าใช้เพลงที่บันทึกไว้ 56

การดูประวัติ 56

การใช้โทรศัพท์เป็นโมเด็ม 56

สารบัญ

ตั้งค่า58

การปรับแต่งรูปแบบเสียงของคุณ..58

การเปลี่ยนการตั้งค่าการแสดงผล .58

การเปลี่ยนการตั้งค่าโทรศัพท์.....58

การเปลี่ยนการตั้งค่าสัมผัส.....59

การเปลี่ยนการตั้งค่าการเชื่อมต่อ..59

การใช้ตัวจัดการหน่วยความจำ.....61

การส่งและการรับไฟล์โดยใช้บลูทูธ

.....61

การเปลี่ยนการตั้งค่าบลูทูธ.....62

การจับคู่กับอุปกรณ์บลูทูธอื่น.....62

การใช้ชุดหูฟังบลูทูธ.....62

Wi-Fi.....63

การอัปเดตซอฟต์แวร์.....63

อุปกรณ์เสริม.....64

ข้อมูลทางเทคนิค.....65

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำ เหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น GD880 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม

- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 1.23 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.10 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์ รุ่นนี้ เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิค ผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจซ่อม

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรทัศน์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรทัศน์ตก
- ไม่ควรนำเครื่องโทรทัศน์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรทัศน์ในบริเวณที่มีข้อบังคับพิเศษห้ามใช้ เช่น ห้ามใช้โทรทัศน์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรทัศน์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้เครื่องชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟไหม้ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้แบตเตอรี่หรือแบตเตอรี่โดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟังด้วยความระมัดระวัง อย่าตะแคงเส้าอากาศโดยไม่จำเป็น

การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์น วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ขณะขับขี่ยานพาหนะในพื้นที่นั้น

- ห้ามใช้โทรศัพท์มือถือถือในขณะขับรถ

- ขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับขี่ข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลมซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

หลีกเลี่ยงการทำลายความ สามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดเครื่องใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อกำหนดอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิด การระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ปิดโทรศัพท์มือถือของคุณหรือเปิดใช้งานโหมด Flight ก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องชาร์จแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายรอบครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ


- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ ห้ามทิ้งในถังขยะครัวเรือน
- หากคุณต้องเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุด เพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเตาเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้ว เพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเฉลี่ย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



⚠ คำเตือน: การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์ หรือการนั่งทับเมื่อใส่ไว้ในกระเป๋าอาจทำให้อจอ LCD ของโทรศัพท์ และการทำงานของหน้าจอสัมผัสเสียหายได้

ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ

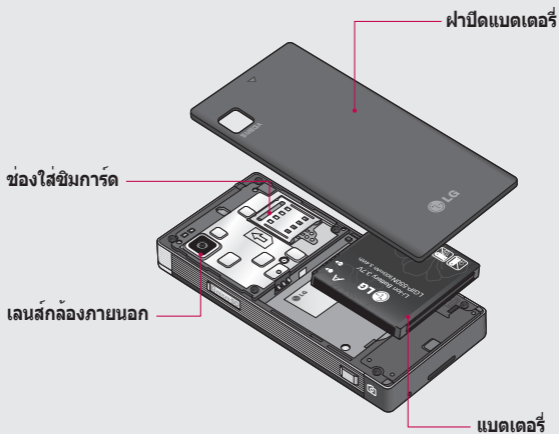

การใส่ซิมและแบตเตอรี่


1 ถอดฝาปิดแบตเตอรี่

เลื่อนฝาปิดแบตเตอรี่ไปทางด้านล่างของโทรศัพท์ และดึงฝาปิดแบตเตอรี่ออก



2 ใส่ซิมการ์ด


เลื่อนซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด ตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองบนการ์ดคว่ำลง ตรวจสอบว่าได้ถอดแบตเตอรี่ออกจากโทรศัพท์แล้ว ก่อนใส่ซิมการ์ด ในการถอดซิมการ์ดให้ค่อยๆ ดึงซิมการ์ดออก

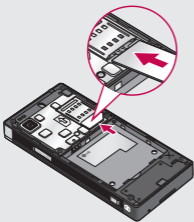

⚠ คำเตือน: ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

3 ใส่แบตเตอรี่


ใส่แบตเตอรี่โดยให้ด้านขวาของแบตเตอรี่ลงไปที่ด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วของโทรศัพท์ จากนั้น กดด้านซ้ายของแบตเตอรี่ให้แน่นเข้าที่

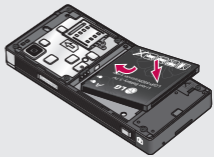

การชาร์จโทรศัพท์

เชื่อมต่ออะแดปเตอร์สำหรับชาร์จแบตเตอรี่ (เครื่องชาร์จ) และสายเคเบิล USB ที่มีไฟ เชื่อมต่อสาย USB กับโทรศัพท์และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ คุณจะต้องชาร์จโทรศัพท์ GD880 จนกว่าข้อความ "แบตเตอรี่เต็มแล้ว" จะปรากฏขึ้นบนหน้าจอ

หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่ ไม่ต้องสนใจข้อความ "แบตเตอรี่เต็มแล้ว" ที่ปรากฏครั้งแรก และชาร์จแบตเตอรี่ทิ้งไว้ตลอดคืน

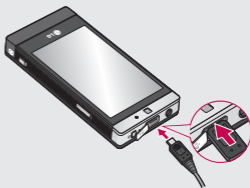



การัดหน่วยความจำ

การใส่การ์ดหน่วยความจำ

คุณสามารถขยายหน่วยความจำของโทรศัพท์ได้โดยใช้การ์ดหน่วยความจำ MicroSD


หมายเหตุ: การ์ดหน่วยความจำเป็นอุปกรณ์เสริม

1. เลื่อนฝาปิดช่องเสียบลง
 2. ใส่การ์ด microSD เข้าไปในช่องเสียบ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง
 3. เลื่อนฝาปิดช่องเสียบขึ้น
- โทรศัพท์ GD880 รองรับการ์ดหน่วยความจำสูงสุด 32GB

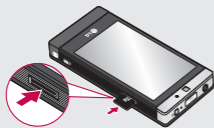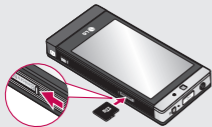

การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้ฟอร์แมต คุณจำเป็นต้องฟอร์แมตการ์ดหน่วยความจำก่อนคุณจึงจะสามารถใช้งานการัดได้

1. จากหน้าจอหลัก ให้เลือก  และ **ตั้งค่าโทรศัพท์**
2. แตะที่ **ข้อมูลความจำ** และเลื่อนลงเพื่อเลือก **หน่วยความจำภายนอก**
3. แตะที่ **ฟอร์แมต** และยืนยันการเลือกของคุณ
4. ใส่รหัสผ่าน หากมีการกำหนดไว้ การัดของคุณจะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน

การใช้หน้าจอสัมผัส

เคล็ดลับสำหรับหน้าจอสัมผัส

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ
- เมื่อไม่มีการใช้งานโทรศัพท์ GD880 เครื่องจะกลับไปล็อคหน้าจอ

ควบคุมหน้าจอสัมผัส

การควบคุมบนหน้าจอสัมผัสของ GD880 จะเปลี่ยนแปลงไปตามงาน

การเปิดแอปพลิเคชัน

ในการเปิดแอปพลิเคชันใดก็ตาม เพียงแตะที่ไอคอนนั้น

การเลื่อนหา

ลากจากด้านหนึ่งไปยังอีกด้านหนึ่งเพื่อเลื่อน




ในหน้าจอบางหน้าจอ เช่น

รายการข้อมูลการโทร คุณสามารถเลื่อนขึ้นหรือลงได้อีกด้วย




หน้าจอหลักของคุณ

จากที่นี่คุณสามารถเข้าใช้งานตัวเลือกเมนูต่างๆ โทรออกอย่างรวดเร็ว ดูสถานะของโทรศัพท์ และอื่นๆ ได้อีกมากมาย

คุณสามารถเพิ่มเมนูที่ประทับใจในเมนูหลักได้

1. แตะที่  จากหน้าจอหลัก
2. หากคุณต้องการลบเมนูที่ประทับใจ ให้แตะที่  ที่ด้านขวาบนของไอคอน หากต้องการเพิ่มเมนูที่ประทับใจในเมนูหลัก ให้แตะที่  ที่ด้านขวาล่างของหน้าจอ



3. เมื่อคุณแตะที่  ที่เพิ่ม คุณสามารถเลือกกระหว่าง Widget, มุมุมารค หรือ ปุ่มลัด (หากคุณไม่ต้องการเพิ่ม ให้แตะที่  ยกเลิก)
4. เลือกเมนูที่คุณต้องการเพิ่มโดยแตะที่เครื่องหมายดาวที่ด้านขวาของเมนู เมื่อบรรทุกบนหน้าจอเมื่อคุณกลับไปหน้าจอก่อนหน้านี้
5. เมื่อคุณดำเนินการเสร็จแล้ว ให้แตะที่  ตกลง



หน้าจอลักษณ์ของคุณ

ปุ่มด่วน

ปุ่มด่วนบนหน้าจอลักษณ์จะทำให้สามารถเข้าใช้งานฟังก์ชันที่ใช้บ่อยได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



แตะเพื่อเปิดปุ่มสัมผัสสำหรับใช้โทรออก



แตะเพื่อเปิด รายชื่อ ในการค้นหาหมายเลขที่คุณต้องการโทร ให้ป้อนชื่อในฟิลด์ค้นหาที่ด้านบนของหน้าจอโดยใช้ปุ่มสัมผัส คุณยังสามารถสร้างรายชื่อใหม่ แก้ไขรายชื่อที่มีอยู่ ฯลฯ






แตะเพื่อเข้าใช้เมนู ข้อความ คุณสามารถสร้าง SMS หรือ MMS ใหม่ หรือดูข้อความในโฟลเดอร์ข้อความได้




แตะเพื่อเปิด เมนุบนสุดแบบเต็ม

การโทร


การโทรออก

1. แตะที่  จากหน้าจอหลักเพื่อเปิดปุ่มกด
2. ป้อนหมายเลขโดยใช้ปุ่มกด
3. แตะที่  เพื่อเริ่มการโทร แต่หากคุณต้องการเริ่มการโทรวิดีโอ ให้แตะที่  แล้วเลือกต่อสายวิดีโอ
4. ในการวางสาย ให้กด วางสาย ที่ด้านล่างของหน้าจอ

เคล็ดลับ! ในการป้อน + เพื่อโทรออกต่างประเทศ กดปุ่ม  คางไว้

เคล็ดลับ! กดปุ่มเปิดปิดเพื่อล๊อคหน้าจอสัมผัสเพื่อป้องกันการโทรออกโดยไม่ได้ใจ

การโทรออกโดยใช้รายชื่อ


1. จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด รายชื่อ
2. แตะกล่องฟิลด์ ค้นหา ตามบนของหน้าจอ และใช้ปุ่มกด เพื่อป้อนตัวอักษรสองสามตัวแรกของรายชื่อที่คุณต้องการโทร
3. จากรายการที่ฟิลเตอร์นี้ ให้แตะที่ไอคอนโทร ถัดจากรายชื่อที่ต้องการโทรหมายเลขเริ่มต้นจะถูกใช้ในการโทรหากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข
4. หรือคุณอาจแตะที่ชื่อและเลือกหมายเลขที่จะใช้ หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้แตะ รับสาย เพื่อรับสาย

ในการปิดเสียงกริ่ง ให้แตะที่ เงียบ วิธีนี้เป็นวิธีที่มีประโยชน์ หากคุณลืมเปลี่ยนรูปแบบเป็น เงียบ เมื่ออยู่ในห้องประชุม แตะที่ ปฏิเสธ เพื่อปฏิเสธสายเรียกเข้า


ตัวเลือกต่างๆ ระหว่างใช้สาย

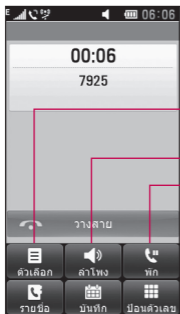

ตัวเลือก - แตะที่  เพื่อแสดงรายการตัวเลือกต่างๆ ระหว่างใช้สาย

ลำโพง - แตะที่  เพื่อเปิดลำโพง

พัก - แตะที่  เพื่อพักสาย

แตะที่  เพื่อเปิดปุ่มตัวเลขสำหรับการโทรสายที่สอง ฟังก์ชันนี้ให้คุณनावิเกตเมนูด้วยตัวเลือกหมายเลขเมื่อคุณโทรอัตโนมัติ เช่น ศูนย์บริการ

แตะที่  เพื่อเพิ่มบันทึกระหว่างการโทร


แตะที่  เพื่อค้นหารายชื่อระหว่างการโทร

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือกต่างๆ หรือรายชื่อ ให้แตะที่รายการสุดท้ายที่มองเห็นได้ แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นมาใหม่มองเห็นรายการอื่นๆ ได้


การโทร


โทรด่วน

คุณสามารถกำหนดรายชื่อที่โทรออกบอายเป็นหมายเลขโทรด่วนได้

1. เลือก **รายชื่อ** และแตะ  และเลือก **โทรด่วน**
2. ข้อความเสียงของคุณถูกตั้งค่าไว้ที่โทรด่วน 1 คุณจะเปลี่ยนไม่ได้ และที่หมายเลขอื่นๆ เพื่อกำหนดรายชื่อสำหรับโทรด่วน
3. รายชื่อ ของคุณจะเปิดขึ้น เลือกรายชื่อที่คุณต้องการ กำหนดให้กับหมายเลขนั้น โดยการแตะที่หมายเลขโทรศัพท์ของรายชื่อหนึ่งครั้ง ในการค้นหารายชื่อ ให้แตะที่กล่องฟิลด **ค้นหา** และป้อนตัวอักษรแรกของชื่อ

การใช้สายที่สอง

1. ในระหว่างการโทรสายแรก ให้แตะที่ปุ่มหมุนหมายเลข และพิมพ์หมายเลขที่คุณต้องการโทรออก
2. แตะที่ **โทรด้วยเสียง** เพื่อโทรออก
3. สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อกและพักสายคู่สนทนา
4. ในการสลับสาย ให้แตะที่  หรือกดหมายเลขที่พักสายไว้

5. ในการวางสายใดสายหนึ่งหรือวางสายทั้งสองสาย ให้กด  และเลือก **วางสาย**

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การดูบันทึกการโทร

แตะที่ **ข้อมูลโทร** ใน **เมนูหลัก**

เคล็ดลับ! แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่, เวลา และระยะเวลาในการโทร

การใช้การโอนสาย

1. แตะที่ **ตั้งค่าการโทร** ใน **เมนูหลัก**
2. แตะที่ **การโอนสาย**
3. เลือกระหว่าง **โทรด้วยเสียง** และ **โทรวิดีโอ** คุณสามารถเลือกที่จะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดต่อไม่ได้
4. แตะที่ **เปิดใช้**
5. เลือก **ถึงศูนย์ช่วยเหลือ** หรือ **หมายเลขอื่นๆ** เพื่อป้อนหมายเลขการโอนใหม่.
6. แตะที่ **ตกลง** เมื่อคุณป้อนหมายเลขเสร็จแล้ว

หมายเหตุ: คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

เคล็ดลับ!

ในการปิดการโอนสายทั้งหมด ให้เลือก **เลิกใช้ทั้งหมด** จากเมนู **การโอนสาย**

การใช้การป้องกันการโทร

1. แตะที่ **ตั้งค่าการโทร** ใน **เมนูหลัก**
2. แตะที่ **ป้องกันการโทร**
3. เลือก **โทรด้วยเสียง** หรือ **โทรวิดีโอ** คุณสามารถปิดการโอนสายทั้งหมดได้โดยแตะที่ **เลิกใช้ทั้งหมด** จากเมนู **ป้องกันการโทร**
4. เลือกตัวเลือกใดตัวเลือกหนึ่งจาก 5 ตัวเลือกนี้:

สายโทรออกทั้งหมด

สายโทรออกต่างประเทศ

สายโทรออกต่างประเทศ ยกเว้นประเทศแม่

สายเข้าทั้งหมด

สายเข้าเมื่ออยู่ต่างประเทศ

แตะที่ **เปิดใช้**

5. ป้อนรหัสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

เคล็ดลับ! เลือก


เมนูหลัก กำหนดเบอร์โทรออก เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้

การใช้ข้อความขอโทษ

ก่อนที่จะคุณจะปฏิเสธสายเรียกเข้า คุณสามารถใช้ **"ข้อความขอโทษ"** เพื่อส่งข้อความอธิบายว่าเหตุใดคุณจึงไม่รับสาย

การเปลี่ยนการตั้งค่าการโทรทั่วไป

1. แตะที่ **ตั้งค่าการโทร** ใน **เมนูหลัก**
2. แตะที่ **การตั้งค่าทั่วไป** จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าของ:

ปฏิเสธการรับสาย - เลื่อนสวิตช์ไปทางซ้ายเพื่อเลื่อนแถบสีไปที่ **ปฏิเสธรายการ** คุณสามารถแตะที่ **กล่องข้อความ** เพื่อเลือกจากทุกสายสายจากรายชื่อหรือกลุ่ม หรือสายจากหมายเลขที่ไม่ได้ลงทะเบียน (ไม่มีอยู่ในรายชื่อของคุณ) หรือสายที่ไม่มีข้อมูลผู้โทร แตะ  เพื่อเปลี่ยนการตั้งค่า

การโทร

ส่งหมายเลขตัวเอง - เลือกว่าจะแสดงหมายเลขของคุณเมื่อคุณโทรออกหรือไม่

แสดงกิจกรรม SNS - เลือกว่าจะแสดงกิจกรรม SNS หรือไม่

โทรข้ามอัตโนมัติ - เลื่อนสวิตช์ไปทางซ้าย

เพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

เตือนทุกนาที - เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** ฟังเสียงเตือนทุกนาทีระหว่างการใช้สาย

โหมดดอกรับ BT - เลือก **แฮนด์ฟรี** เพื่อให้สามารถรับสายได้ในระหว่างใช้งานชุดหูฟังบลูทูธ หรือเลือก **ตัวเครื่อง** เพื่อรับสายโดยกดปุ่มบนตัวเครื่อง

บันทึกเบอร์ใหม่ - เลือกว่าจะเปิดฟังก์ชัน **บันทึกเบอร์ใหม่** หรือไม่ เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

ความชัดของเสียง - เลือกว่าจะเปิดฟังก์ชัน

ความชัดของเสียง หรือไม่ เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

การเปลี่ยนการตั้งค่าสนทนาทางวิดีโอ

1. แตะที่ **ตั้งค่าการโทร**
2. แตะที่ **ตั้งค่าสนทนาทางวิดีโอ**

จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าของ:

ใช้ภาพส่วนตัว - เลือกว่าจะใช้ภาพส่วนตัวสำหรับการโทรวิดีโอหรือไม่

ภาพส่วนตัว - เลือกภาพสำหรับการโทรวิดีโอ

กระจก - เลือกว่าจะใช้กระจกหรือไม่

ค่าโทร

ดูค่าใช้จ่ายที่คิดตามที่คุณโทรออก (บริการนี้ขึ้นอยู่กับระบบเครือข่ายและผู้ให้บริการบางรายอาจไม่สนับสนุนบริการนี้)

เวลาในการโทร

ดูระยะเวลาทั้งหมดของสายที่โทรออกหรือสายที่ได้รับหรือทั้งสองอย่าง



ปริมาณข้อมูล

ดูจำนวนข้อมูลที่คุณได้รับและส่งทั้งหมดหรือทั้งสองอย่างเป็นกิโลไบต์

รายชื่อ

การค้นหารายชื่อ


คุณสามารถค้นหารายชื่อได้ 2 วิธี:

1. แตะที่  จากหน้าจอหลัก และแตะที่ **รายชื่อ** หรือแตะที่  จากหน้าจอหลัก
2. คุณจะเห็นรายชื่อ การพิมพ์ตัวอักษรแรกของชื่อในฟิลด์ชื่อจะทำให้เมนูขามไปที่พื้นที่ของรายชื่อตามตัวอักษรนั้น



เคล็ดลับ! ปุ่มกดตัวอักษรจะปรากฏขึ้นเมื่อคุณแตะที่ฟิลด์ชื่อ

การเพิ่มรายชื่อใหม่

1. แตะที่ **รายชื่อ** และแตะที่ **สร้าง**
2. เลือกว่าจะบันทึกรายชื่อไปยัง **ตัวเครื่อง** หรือ **SIM**
3. ป้อนชื่อและนามสกุล
4. คุณสามารถป้อนหมายเลขที่แตกต่างกันได้สูงสุด 5 หมายเลขต่อหนึ่งรายชื่อ แต่ละรายการจะมีค่าที่ตั้งล่วงหน้าสำหรับ **เบอร์มือถือ**, **เบอร์บ้าน**, **ออฟฟิศ**, **เพจเจอร์** และ **แฟกซ์**
5. เพิ่มอีเมลแอดเดรส

6. กำหนดรายชื่อให้กับกลุ่มหนึ่งกลุ่มหรือมากกว่า คุณสามารถกำหนดกลุ่มได้สูงสุด 3 กลุ่มต่อหนึ่งรายชื่อ เลือกระหว่าง **ไม่มีกลุ่ม**, **ครอบครัว**, **เพื่อนร่วมงาน**, **โรงเรียน** และ **VIP**
7. คุณสามารถเพิ่ม **เสียงเรียกเข้า**, **สั้น**, **โฮมเพจ**, **ที่อยู่บ้าน**, **ชื่อบริษัท**, **ชื่องาน**, **ที่อยู่บริษัท**, **วันเกิด**, **วันครบรอบ** และ **บันทึก**
8. แตะที่  เพื่อบันทึกรายชื่อ

การสร้างกลุ่ม


1. แตะที่ **รายชื่อ** และลูกศรลงข้างรายชื่อ และเลือก **กลุ่ม**
2. แตะที่ **กลุ่มใหม่** หรือแตะที่  และเลือก **กลุ่มใหม่**
3. ป้อนชื่อสำหรับกลุ่มใหม่ของคุณในฟิลด์ **ชื่อกลุ่ม** คุณสามารถกำหนดเสียงเรียกเข้าให้กับกลุ่มได้
4. แตะ 

หมายเหตุ: หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะไม่หายไป แต่ยังคงอยู่ใน **รายชื่อ**

รายชื่อ

การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถเปลี่ยนแปลงการตั้งค่ารายชื่อให้เหมาะสมกับความต้องการของคุณได้

1. แตะที่ **รายชื่อ** แตะที่  เลื่อนลงและเลือก **ตั้งค่ารายชื่อ**
2. จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าต่อไปนี้:

แสดงปุ่มกด - เลือกว่าจะแสดงปุ่มกดหรือไม่

ชื่อที่แสดง -

เลือกลำดับการแสดงของชื่อ

ซิงโครไนซ์รายชื่อ - เชื่อมต่อกับเซิร์ฟเวอร์ของคุณเพื่อซิงโครไนซ์รายชื่อ

คัดลอกทั้งหมด - คัดลอกรายชื่อจากตัวเครื่องไปยังซิม หรือจากซิมไปยังตัวเครื่องของคุณได้ คุณสามารถเลือกที่จะรายชื่อหรือทั้งหมดในครั้งเดียว

ย้ายทั้งหมด - ตัวเลือกนี้ทำงานในลักษณะเดียวกับ คัดลอก แต่จะบันทึกเฉพาะรายชื่อในตำแหน่งที่คุณย้ายไปเท่านั้น

เรียกคืนรายชื่อ - เรียกคืนรายชื่อไปยังการตั้งค่าหน่วยความจำ

ลบรายชื่อ - ลบรายชื่อของคุณทั้งหมดเลือกระหว่าง **ตัวเครื่อง** และ **ซิม** และแตะที่ **ใช่** หากคุณต้องการลบรายชื่อของคุณทั้งหมด

ข้อมูลความจำ - ดูข้อมูลเกี่ยวกับหน่วยความจำที่ใช้โดย **ตัวเครื่อง**, **USIM** และ **อีเมล USIM**


ส่งทุกรายชื่อผ่านบลูทูธ - ส่งรายชื่อทั้งหมดไปยังอุปกรณ์อื่นโดยใช่บลูทูธ เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ หากคุณเลือกตัวเลือกนี้

สำรองข้อมูลรายชื่อ - สำรองข้อมูลรายชื่อไปยังการตั้งค่าหน่วยความจำ

การดูข้อมูล

1. แตะที่ **รายชื่อ** แตะที่  เลื่อนลงและเลือก **ข้อมูล**

จากขั้นตอนนี้ คุณจะสามารถดู **เบอร์บริการพิเศษ**, **เบอร์ส่วนตัว**, **ข้อมูลความจำ** (แสดงหน่วยความจำที่ใช้) และ **โปรไฟล์ของฉัน**

เคล็ดลับ! ในการเพิ่มนามบัตรของคุณเอง ให้เลือก **โปรไฟล์ของฉัน** และป้อนรายละเอียดที่คุณต้องการสำหรับรายชื่อใดๆ แตะที่  เพื่อเสร็จสิ้น

การอิมพอร์ตเพื่อนจากเครือข่ายสังคม

คุณสามารถเพิ่มรายชื่อเพื่อนจากเครือข่ายสังคม (Twitter หรือ Facebook) ลงในโทรศัพท์ได้โดยใช้เมนูนี้




- 1.แตะที่ รายชื่อ และแตะที่  และเลือก อิมพอร์ตเพื่อนจาก
- 2.เลือก **Twitter** หรือ **Facebook**
- 3.ป้อนอีเมลและรหัสผ่านของคุณ และคลิก **ตกลง**
- 4.เลือกรายชื่อที่คุณต้องการเพิ่ม
- 5.เลือก 

ข้อความ

ข้อความ

โทรศัพท์ GD880 ของคุณได้ผสมผสาน SMS และ MMS ไว้ในเครื่องเดียว และมีเมนูที่ใช้งานง่าย




การส่งข้อความ

1. แตะที่  จากหน้าจอหลัก และแตะที่ **ข้อความ** หรือแตะที่  จากหน้าจอหลัก
2. แตะที่ **เขียนข้อความ**  และเลือก **แทรก** เพื่อเพิ่มภาพ, วิดีโอ, เสียง อีโมติคอน และอื่นๆ
3. แตะที่ **ถึง** เพื่อป้อนหมายเลขของ ผู้รับ หรือเปิดรายชื่อผู้รับ หรือสิ่งที่น่าสนใจ คุณสามารถเพิ่มรายชื่อหลายรายการได้ เมื่อคุณดำเนินการเสร็จแล้ว ให้แตะที่ **ตกลง** ขอความด้านล่างเพื่อเริ่มเขียนข้อความ
4. หลังจากป้อนข้อความ คุณสามารถส่งข้อความได้โดยแตะที่ **ส่ง SMS/ส่ง MMS** ที่ด้านบนของข้อความ

คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะแปลงเป็น MMS โดยอัตโนมัติ

การป้อนข้อความ

และ  เพื่อเปิดโหมด T9 และที่  เพื่อเลือกภาษาเขียน และที่  เพื่อเปลี่ยนระหว่างตัวเลข สัญลักษณ์ และการป้อนข้อความ ปุ่มฟังก์ชันช่วยให้คุณเปลี่ยนระหว่างการป้อนตัวพิมพ์ใหญ่และตัวพิมพ์เล็ก หรือเขียนข้อความแบบเต็มหน้าจอบนปุ่มกด

โหมด T9

โหมด T9 ใช้พจนานุกรมภายในเครื่องเพื่อรับรู้คำศัพท์ที่คุณเขียนตามลำดับปุ่มที่แตะ ซึ่งจะคาดคะเนคำศัพท์ที่คุณป้อน และแนะนำคำศัพท์อื่นๆ

การใช้ข้อความอัตโนมัติ

สร้างข้อความอัตโนมัติสำหรับข้อความ SMS และ MMS ที่คุณส่งบ่อยๆ มีข้อความอัตโนมัติอยู่ในโทรศัพท์ของคุณอยู่แล้ว ซึ่งคุณสามารถแก้ไขได้

การใช้อีโมติคอน

ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้อีโมติคอน มีอีโมติคอนที่ใช้กันทั่วไปในโทรศัพท์ของคุณอยู่แล้ว

คุณสามารถเพิ่มอีโมติคอนใหม่โดยแตะที่ **อีโมติคอนใหม่**

การใช้ลายเซ็น

สร้างลายเซ็นสำหรับข้อความ SMS และ MMS ที่คุณส่งบ่อยๆ เมื่อเขียนลายเซ็นใหม่ คุณสามารถป้อนลายเซ็นจาก แทรก->ข้อมูล ในเมนูตัวเลือก

การเปลี่ยนการตั้งค่าข้อความตัวอักษร

แตะที่ **ข้อความ** แตะที่  และเลือก **ตั้งค่า** เลือก **ข้อความตัวอักษร** คุณสามารถเปลี่ยนแปลง:

ศูนย์ข้อความตัวอักษร - ป้อนรายละเอียดของศูนย์ข้อความ

รายงานผลการส่ง - เลื่อนสวิตช์ไปทางซ้ายเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว

อายุข้อความ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ


ชนิดข้อความ -

แปลงข้อความตัวอักษรเป็น **ตัวอักษร**, **เสียง**, **แฟกซ์**, **X.400** หรือ **อีเมล**

การเข้ารหัสตัวอักษร - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความและค่าบริการส่งข้อความของคุณ

การส่งข้อความยาว - เลือกเพื่อส่งข้อความยาว เป็นหลาย **SMS** หรือ **MMS**

การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

แตะที่ **ข้อความ** แตะที่  และเลือก **ตั้งค่า** แล้วเลือก **ข้อความมัลติมีเดีย** คุณสามารถเปลี่ยนแปลง:

โหมดเรียกข้อมูล - เลือกระหว่าง **เครือข่ายหลัก** หรือ **เครือข่ายโรมมิ่ง** หากคุณเลือก **กำหนดเอง** คุณจะได้รับความเฉพาะข้อความแจ้ง MMS และคุณสามารถตัดสินใจว่าจะดาวน์โหลดแบบเต็มหรือไม่

รายงานผลการส่ง

- เลือกเพื่อให้ส่งและ/หรือขอรายงานผลการส่ง

อ่านข้อความตอบรับ-

เลือกเพื่อให้ส่งและ/หรือขอการตอบกลับ

ระดับความสำคัญ -

เลือกระดับความสำคัญของ MMS (**ความสำคัญต่ำ**, **ความสำคัญปกติ**, **ความสำคัญสูง**).

อายุข้อความ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

ระยะเวลาสไลด์ - เลือกระยะเวลาที่จะให้สไลด์ปรากฏบนหน้าจอ

โหมดการสร้าง - เลือกโหมดข้อความของคุณ (**จำกัด**, **คำเตือน**, **วางอยู่**)

ข้อความ

เวลาส่ง - เลือกระยะเวลาในการรอ
ก่อนส่งข้อความ

ศูนย์ MMS - เลือกหนึ่งศูนย์จากราย
การหรือเพิ่มศูนย์ข้อความใหม่

การเปลี่ยนการตั้งค่าอื่นๆ

แตะที่ **ข้อความ** แตะที่  และเลือก
ตั้งค่า

วิดีโออีเมล/ข้อความเสียง - แตะที่
โปรไฟล์ใหม่ เพื่อเพิ่มบริการวิดีโออีเมล/
ข้อความเสียงใหม่ ติดต่อผู้ให้บริการ
เครือข่ายของคุณสำหรับข้อมูลเพิ่มเติม
เกี่ยวกับบริการที่มีให้

ข้อความบริการ - เลือกเพื่อรับหรือ
บล็อกข้อความบริการ คุณยังสามารถ
กำหนดความปลอดภัยของข้อความได้
โดยการสร้างรายการผู้ส่งที่เชื่อถือได้
และเชื่อถือไม่ได้ในตัวเลือก


ความปลอดภัย


บันทึกข้อความที่ส่ง - เลือกว่าจะบัน
ทึกข้อความที่ส่งหรือไม่

บริการข้อมูล - เลือกว่าจะเปิด/ปิด
ข้อความจากระบบและเลือกของ
สัญญาณและภาษา

ลายเซ็น - สร้าง แก้วไข หรือลบ
ลายเซ็น

การตั้งค่าอีเมล

แตะที่  จากหน้าจอหลัก
เลื่อนไปทางขวาและแตะที่ **อีเมล**
หากยังไม่ได้ตั้งค่าอีเมลแอดเดสส์
ให้แตะที่ **Microsoft Exchange,**
 ฯลฯ

หากตั้งค่าอีเมลแอดเดสส์ใน
โทรศัพท์แล้ว และคุณต้องการเพิ่ม
อีเมลแอดเดสส์ใหม่ ให้แตะที่ 
และเลือก **อีเมลแอดเดสส์ใหม่**

อีเมลแอดเดสส์ - ป้อนอีเมลแอดเดสส์
รหัสผ่าน - ป้อนรหัสผ่านของแอดเดสส์
ประเภทเมลบ็อกซ์ -

ป้อนประเภทเมลบ็อกซ์: **IMAP4,**
POP3 หรือ **PUSH** ประเภท
เหล่านี้ขึ้นอยู่กับผู้ให้บริการ

ชื่อผู้ใช้ - ป้อนชื่อผู้ใช้ของแอดเดสส์
เซิร์ฟเวอร์เข้า - ป้อนแอดเดสส์
เซิร์ฟเวอร์อีเมลเข้า

เซิร์ฟเวอร์ขาออก - ป้อนแอดเดสส์
เซิร์ฟเวอร์อีเมลขาออก

ตรวจสอบสิทธิ์ SMTP - เลือกการ
ตั้งค่าความปลอดภัยของเซิร์ฟเวอร์
เมลขาออก

ข้อบัญญัติ - วิธีการแสดงแอดเดสในรายการของแอดเดสในโฟลเดอร์อีเมลของคุณ

เมื่อตั้งค่าแอดเดสแล้ว แอดเดสนี้จะปรากฏอยู่ในรายการแอดเดสในโฟลเดอร์อีเมล

อีเมลแอดเดสแบบ Microsoft Exchange

อีเมลแอดเดส - ป้อนอีเมลแอดเดสของแอดเดส

แอดเดสเซิร์ฟเวอร์ - ป้อนแอดเดสเซิร์ฟเวอร์อีเมล

โดเมน - ป้อนโดเมนของแอดเดส

ชื่อผู้ใช้ - ป้อนชื่อผู้ใช้ของแอดเดส

รหัสผ่าน - ป้อนรหัสผ่านของแอดเดส

รายการที่ซิงค์ - เลือกว่าจะใช้รายการที่ซิงค์หรือไม่ (รายชื่อ, ตารางนัดหมาย, งาน)

การตั้งอีเมลของคุณ

คุณสามารถตรวจสอบอีเมลใหม่ในแอดเดสของคุณแบบอัตโนมัติหรือด้วยตนเองได้ ในการตรวจสอบด้วยตนเอง:


1. แตะที่ **อีเมล**
2. แตะที่แอดเดสที่คุณต้องการใช้

3. เลือก เรียกดูข้อมูลใหม่

การส่งอีเมลโดยใช้แอดเดสใหม่

1. แตะที่ **เขียนอีเมล** และอีเมลใหม่จะเปิดขึ้น
2. ป้อนข้อความ
3. แตะที่ **ส่งอีเมล** แล้วอีเมลจะถูกส่งออกไป

การเปลี่ยนการตั้งค่าอีเมล

1. แตะที่ **อีเมล** ในแท็บ **การสื่อสาร**
2. แตะที่  และเลือก **ตั้งค่าอีเมล** แล้วคุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:

อีเมลแอดเดส -

เลือกอีเมลแอดเดส

ตอบกลับอีเมลได้ - เลือกเพื่อให้ส่งข้อความยืนยันการอ่านได้

ร้องขอการตอบกลับอีเมล - เลือกว่าต้องการข้อความยืนยันการอ่านหรือไม่

รวมข้อความต้นฉบับ - เลือกเพื่อรวมข้อความต้นฉบับในการตอบกลับ

รวมสิ่งที่แนบ - เลือกเพื่อรวมสิ่งที่แนบต้นฉบับในการตอบกลับ

ดึงข้อมูลอัตโนมัติขณะ... - เลือกว่าจะดึงข้อความโดยอัตโนมัติเมื่อคุณอยู่ต่างประเทศ (โรมมิ่ง) หรือไม่

แจ้งเตือนอีเมลใหม่ - เลือกว่าจะแจ้ง

ข้อความ

เตือนอีเมลใหม่หรือไม่

ลายเซ็น - สร้างลายเซ็นสำหรับอีเมล

ระดับความสำคัญ - เลือกระดับความสำคัญ
สำคัญของข้อความอีเมล

ขนาดการรับสูงสุด -

เลือกขนาดการรับสูงสุด: **100KB,**
200KB, 300KB, 500KB, 1MB,
2MB, 2.2MB

กล้องถ่ายรูป

ทำความรู้จักกับช่องมองภาพ

ซูม - ซูมเข้าหรือซูมออก คุณยังสามารถซูมเข้าหรือซูมออกได้โดยกดปุ่มข้างโทรศัพท์

การรับแสง - ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมืด ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า



ย้อนกลับ

โหมดกล้องถ่ายรูป

โหมดวิดีโอ - เลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ



คลังภาพ - คุณสามารถเข้าสู่รูปภาพที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูป เพียงแตะและคลังภาพของคุณจะปรากฏบนหน้าจอ

ตั้งค่า - แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า โปรดดูที่การใช้การตั้งค่าขั้นสูง

มาโคร - เปิดเพื่อถ่ายภาพระยะใกล้

กล้องถ่ายรูป


การถ่ายภาพด่วน

1. กดปุ่ม  ที่ด้านขวาของโทรศัพท์
2. เมื่อกดปุ่มจับโฟกัสที่วัตถุแล้ว ให้แตะที่  ที่ตรงกลางด้านขวาของหน้าจอเพื่อถ่ายภาพ คุณสามารถกดปุ่ม กล้องถ่ายรูป ที่ด้านข้างโทรศัพท์ได้ด้วย


เคล็ดลับ! ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลื่อนไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางขวาของช่องมองภาพขึ้น/ลง

ภายหลังการถ่ายรูป

ภาพที่ถ่ายจะปรากฏบนหน้าจอ ชื่อภาพจะแสดงที่ด้านล่างของหน้าจอ พร้อมทั้งไอคอนสื่อไอคอนทางด้านขวาของหน้าจอ

 และเพื่อส่งรูปภาพเป็น ข้อความ, อีเมล, บลูทูธ


หมายเหตุ: การดาวน์โหลด MMS ขณะอยู่ในเครือข่ายโรมมิ่งอาจมีค่าใช้จ่ายเพิ่มเติม

 และเพื่อใช้ภาพนี้เป็น ภาพพื้นหลัง, หน้าจอล็อค, รายชื่อ, เปิดเครื่อง, ปิดเครื่อง, สายโทรออก หรือ สายเรียกเข้า

 และเพื่อแก้ไขภาพโดยใช้เครื่องมือต่าง ๆ

 และเพื่อกลับไปที่ย่อมองภาพ

 และเพื่อลบภาพ

 และเพื่อถ่ายภาพอื่นทันที โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้

 และเพื่อดูคลังภาพที่บันทึกไว้



การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

ขนาด - เปลี่ยนขนาดของภาพเพื่อบันทึกในพื้นที่หน่วยความจำหรือถ่ายภาพแบบที่กำหนดขนาดไว้ถูกต้องสำหรับรายชื่อ เลือกค่าพิกเซลจาก 7 ตัวเลือกดังนี้: **5M(2560x1920)**, **3M(2048x1536)**, **2M(1600x1200)**, **1M(1280x960)**, หน้าจอหลัก, **VGA(640x480)**, **QVGA(320x240)**

โหมดภาพ - ตั้งค่ากล้องถ่ายรูปเพื่อปรับให้เข้ากับสภาพแวดล้อม เลือกจาก **อัตโนมัติ**, **กลางคืน**, **ทิวทัศน์**, **รูปคน** หรือ **กีฬา**

ISO - ISO กำหนดความไวของเซ็นเซอร์แสงในกล้อง ISO ที่มากขึ้น ความไวของกล้องก็มากขึ้นเท่านั้น ซึ่งจะเป็นประโยชน์สำหรับสภาพแวดล้อมที่มีดิมในขณะที่คุณไม่สามารถใช้แฟลชได้ เลือกค่า ISO จาก **อัตโนมัติ**, **ISO 800**, **ISO 400**, **ISO 200** หรือ **ISO 100**

ความสมดุลแสง - เลือกจาก **อัตโนมัติ**, **หลอดไฟ**, **ฟลูออเรสเซนต์**, **แสงอาทิตย์** หรือ **มิดครีမ်**

เอฟเฟกต์สี - เลือกโทนสีเพื่อใช้กับภาพที่คุณถ่าย โทนนีมีตัวเลือกทั้งหมด 6 ตัวเลือก: **ปิด**, **สีซีเปีย**, **ขาวดำ**, **เนกาทีฟ**, **โซลาไลซ์** และ **น้ำเงิน**

โฟกัส - เลือกวิธีการโฟกัสของกล้อง เลือกจาก **อัตโนมัติ**, **ปรับเอง** หรือ **การติดตามหน้า**

ตั้งเวลาถ่ายภาพ - ตั้งตั้งเวลาทำให้คุณสามารถตั้งช่วงเวลาหน่วงหลังจากที่กดปุ่มถ่ายภาพ เลือกจาก **ปิด**, **3 วินาที**, **5 วินาที** หรือ **10 วินาที**

โหมดชัตเตอร์ - เลือกโหมดชัตเตอร์จาก 9 ตัวเลือก

คุณภาพ - เลือกระหว่าง **ละเอียดมาก**, **ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของภาพถ่ายก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย

แสดงภาพที่ถ่าย - เลือกเพื่อดูภาพด้วยตัวเลือกต่างๆ หลังจากถ่ายภาพ

เสียงชัตเตอร์ - เลือกเสียงชัตเตอร์ เสียงใดเสียงหนึ่งจากสามเสียง

หน้าจอกิริติ - เลือกจาก **ปิด**, **4 ส่วน** หรือ **9 ส่วน**

จีโอแท็ก - เลือกว่าจะเปิดข้อมูล EXIF สำหรับรูปภาพเพื่อเขียนข้อมูล GPS หรือไม่

กล้องถ่ายรูป


รีเซตการตั้งค่า - เรียกคืนการตั้งค่ากล้องทั้งหมด

หน่วยความจำ - เลือกว่าจะบันทึกรูปภาพที่หน่วยความจำเครื่องหรือที่หน่วยความจำภายนอก

สลับกล้อง - เลือกว่าจะใช้กล้องด้านในหรือกล้องด้านนอก

กล้องวิดีโอ

ทำความรู้จักกับช่องมองภาพ

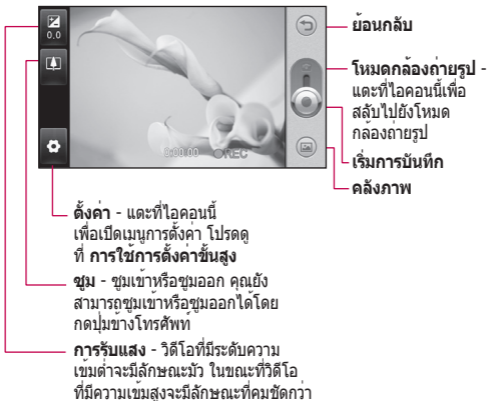





กล้องวิดีโอ

การถ่ายวิดีโอด้วย


1. กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์


เคล็ดลับ! ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลื่อนไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางขวาของช่องมองภาพขึ้น/ลง

2. ให้ถือโทรศัพท์ในแนวนอนและหันไปทางสิ่งที่จะถ่าย
3. กดปุ่มกล้องถ่ายรูปที่โทรศัพท์หนึ่งครั้งเพื่อเริ่มการบันทึกหรือแตะที่จุดสีแดง  บนหน้าจอ
4. **REC** จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพและตัวตั้งเวลาทางด้านล่างเพื่อแสดงระยะเวลาของวิดีโอของคุณ
5. ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  แล้วเริ่มบันทึกต่อโดยเลือก 
6. แตะที่  บนหน้าจอหรือกดปุ่มกล้องถ่ายรูปที่โทรศัพท์อีกครั้งเพื่อหยุดการบันทึก


หลังจากถ่ายวิดีโอ


ภาพนิ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ ชื่อของวิดีโอจะแสดงที่ด้านล่างของหน้าจอ


 และเพื่อส่งวิดีโอเป็นข้อความหรืออีเมล หรือทางบลูทูธ


 และเพื่อใช้วิดีโอเป็นเสียงเรียกเข้าแบบเสียงหรือแบบวิดีโอ

 และเพื่อเล่นวิดีโอ

 และเพื่อกลับไปที่ยังมองภาพ


 และเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้และยืนยันโดยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

แตะที่  เพื่อถ่ายวิดีโออื่นต่อ

 และเพื่อดูคลังภาพของวิดีโอและภาพที่บันทึกไว้



การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด โปรดดูที่การตั้งค่าขั้นสูงของกล้องถ่ายรูป

ขนาดวิดีโอ - เลือกขนาดวิดีโอ:
VGA(640x480),
QVGA(320x240),
QCIF(176x144)


โหมดการบันทึก - ตั้งค่าจำกัดระยะเวลาสำหรับวิดีโอ: **ปกติ, MMS**

เสียง - เลือกว่าจะปิดเสียง (บันทึกวิดีโอโดยไม่มีเสียง) หรือเปิดเสียงเพื่อบันทึกเสียงด้วย

แสดงวิดีโอที่บันทึก - เลือกเพื่อดูวิดีโอด้วยตัวเลือกต่างๆ หลังจากถ่ายวิดีโอ




รูปภาพและวิดีโอ


การดูรูปภาพและวิดีโอ

1. เลื่อนและแตะที่ **คลังภาพ** ใน **เมนูหลัก** หรือแตะที่  ในหน้าจอตัดตัวอย่างของกล้องถ่ายรูป
2. คลังภาพของคุณจะปรากฏบนหน้าจอ
3. แตะที่วิดีโอหรือรูปภาพเพื่อเปิดทั้งไฟล์

เคล็ดลับ! กดปุ่มไปทางซ้ายหรือทางขวาเพื่อดูรูปหรือวิดีโออื่น

การบันทึกภาพจากวิดีโอ

1. เลือกวิดีโอที่คุณต้องการบันทึกภาพมา
2. แตะที่กลางหน้าจอเพื่อเรียกตัวเลือกการเล่น แล้วแตะที่  เพื่อหยุดวิดีโอชั่วคราวที่เฟรมที่คุณต้องการแปลงเป็นภาพ และแตะที่ด้านซ้ายบนของหน้าจอเพื่อเปิดเมนู 
3. แตะที่  ที่ด้านซ้ายบนของหน้าจอ และเลือก **ถ่ายภาพ**
4. ภาพจะปรากฏบนหน้าจอพร้อมกับชื่อภาพ



5. แตะที่  ที่ด้านซ้ายบนของหน้าจอเพื่อกลับไปวิดีโอ
6. ภาพจะถูกบันทึกในโฟลเดอร์ **อัลบั้มมีเดีย** และปรากฏในคลังภาพ

คำเตือน:


บางฟังก์ชันอาจทำงานไม่ถูกต้องหากไม่ได้บันทึกไฟล์มีเดียมีเดียด้วยโทรศัพท์

การดูรูปภาพแบบภาพสไลด์

โหมดภาพสไลด์จะแสดงรูปภาพทั้งหมดในคลังภาพของคุณพร้อมกันเป็นภาพสไลด์ วิดีโอไม่สามารถดูเป็นแบบภาพสไลด์ได้


1. แตะที่  ใน **คลังภาพ** แล้วเลื่อนและเลือก **ภาพสไลด์**
2. ภาพสไลด์จะเริ่มต้น
3. คุณสามารถเปิดเมนู เช่น เวลา, การเปลี่ยน, ฯลฯ ได้โดยการแตะ  ระหว่างแสดงภาพสไลด์

การตั้งค่ารูปภาพเป็นพื้นหลัง

1. แตะที่ **คลังภาพ** ใน **เมนูหลัก**
2. แตะที่รูปภาพที่คุณต้องการตั้งค่าเป็นพื้นหลัง
3. แตะที่  เพื่อเปิดเมนู

4. แตะที่ **ตั้งเป็น** และ **ภาพหน้าจอหลัก**

การแก้ไขรูปภาพ

1. จากเมนูคลังภาพ ให้เลือกรูปภาพที่คุณต้องการแก้ไข แตะที่  ที่ด้านซ้ายบนของหน้าจอเพื่อเปิดเมนู และเลือก **แก้ไข**
2. แตะที่ไอคอนเพื่อปรับรูปภาพของคุณ:



เลือกพื้นที่



เลือกเครื่องมือ:



วาดลายเส้นบนรูปภาพของคุณด้วยมือ เลือกความหนาของเส้นจาก 4 ตัวเลือก จากนั้นเลือกสีที่คุณต้องการใช้

T การเพิ่มข้อความในรูปภาพ คุณสามารถเลือกกล่องข้อความและสีของกล่องและข้อความได้



ตกแต่งรูปภาพของคุณด้วยสแตมป์



ลบการวาดที่คุณทำไว้ในรูปภาพ คุณสามารถเลือกขนาดของยางลบที่จะใช้ได้



แตะเพื่อเปิดตัวเลือกเอฟเฟกต์เพิ่มเติม เช่น หมุน



แตะเพื่อใช้ตัวเลือกเอฟเฟกต์กับรูปภาพ

ปรับแต่ง

ซึ่งช่วยปรับการถ่ายภาพโดยใช้ความสว่างหรือความเปรียบต่าง



แตะเพื่อกลับไปที่คลังภาพ

บันทึก

บันทึกการเปลี่ยนแปลงที่คุณทำไว้ในโทรศัพท์ คุณสามารถบันทึกรูปภาพที่แก้ไขด้วยชื่ออื่นได้

เลิกทำ

ลบการแก้ไขที่คุณทำไว้ในรูปภาพ

ส่ง

เลือกเพื่อส่งรูปภาพที่แก้ไขเป็น **ข้อความ**, **อีเมล** หรือ **บลูทูธ**





มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์เพื่อเขาใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ การใช้การ์ดหน่วยความจำจะเพิ่มพื้นที่ในหน่วยความจำของโทรศัพท์ได้ คุณสามารถค้นหาไฟล์เหล่านี้ในเมนู **แฟ้มข้อมูล** ใน **เมนูหลัก**

รูปภาพ


ภาพ ประกอบด้วยรายการรูปภาพ รวมถึงภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

การส่งรูปภาพ


1. แตะที่  จากหน้าจอหลัก แตะที่ **แฟ้มข้อมูล** และเลือก **ภาพ** เลือกรูปภาพที่คุณต้องการ และแตะที่ 
2. แตะที่ **ส่งทาง** และเลือก **ข้อความ**, **อีเมล**, **บลูทูธ**

การใช้รูปภาพ

คุณสามารถเลือกภาพเพื่อใช้เป็นพื้นหลัง สำหรับหน้าจอล็อค และเพื่อระบุผู้โทรเขาได้

1. แตะที่ **แฟ้มข้อมูล** ใน **เมนูหลัก** และเลือก **ภาพ** เลือกรูปภาพที่คุณต้องการ และแตะที่ 
2. แตะที่ **ตั้งเป็น** และเลือกจาก: **ภาพหน้าจอหลัก**, **ภาพล็อคหน้าจอ**, **ภาพรายชื่อ**, **ภาพเริ่มต้น**, **ภาพปิดเครื่อง**, **ภาพสายโทรออก**, **ภาพสายเรียกเขา**

การพิมพ์ภาพ


1. แตะที่ **แฟ้มข้อมูล** และเลือก **ภาพ** เลือกรูปภาพที่คุณต้องการ และแตะที่ 
2. แตะที่ **พิมพ์** แล้วเลือกกระหว่าง **PictBridge** และ **บลูทูธ**

เคล็ดลับ!

คุณสามารถพิมพ์ผ่านบลูทูธ หรือโดยเชื่อมต่อกับเครื่องพิมพ์ที่ใช้ร่วมกับ PictBridge ได้

การย้ายหรือคัดลอกรูปภาพ

คุณสามารถย้ายหรือคัดลอกรูปภาพระหว่างหน่วยความจำของโทรศัพท์กับการ์ดหน่วยความจำได้ เพื่อเป็นการเพิ่มพื้นที่หน่วยความจำในหน่วยความจำ หรือเพื่อรักษาภาพไว้

1. แตะที่ **แฟ้มข้อมูล** ในแท็บ **ความบันเทิง** เลือก **ภาพ** และแตะที่ 
2. เลือก **ย้าย** หรือ **คัดลอก**
3. คุณสามารถเลือก/ไม่เลือกภาพได้โดยแตะที่ภาพ เลือกภาพที่คุณต้องการย้ายหรือคัดลอกและแตะที่ **คัดลอก/ย้าย**

เสียง

เสียง ประกอบด้วยรายการเสียง ได้แก่ เสียงที่ดาวน์โหลด, เสียงเริ่มต้น และเสียงบันทึก จากขั้นตอนนี้ คุณสามารถจัดการ ส่ง หรือกำหนดเสียงเป็นเสียงเรียกเขาได้

การใช้เสียง

1. แตะที่ **แฟ้มข้อมูล** ใน **เมนูหลัก** และเลือก **เสียง**
2. เลือกเสียงที่คุณที่ต้องการ ซึ่งจะเริ่มเล่น


วิดีโอ

วิดีโอ แสดงรายชื่อวิดีโอที่ดาวน์โหลดและวิดีโอที่คุณบันทึกไว้ในโทรศัพท์ของคุณ

การดูวิดีโอ

1. แตะที่ **แฟ้มข้อมูล** ใน **เมนูหลัก** และเลือก **วิดีโอ**
2. เลือกวิดีโอเพื่อเล่น

การส่งวิดีโอคลิป

1. เลือกวิดีโอ
2. แตะที่  และแตะที่ **ส่งทาง** เลือกจาก **ข้อความ**, **อีเมล** หรือ **บลูทูธ**

แฟลชคอนเทนท์

โพลเดอร์ไฟล์แฟลชจะเก็บไฟล์ SWF และ SVG ทั้งหมดที่ดาวน์โหลด

1. แตะที่ **แฟ้มข้อมูล** ใน **เมนูหลัก** และเลือก **แฟลชคอนเทนท์**
2. เลือกไฟล์ที่คุณต้องการดู

เอกสาร

จากเมนู เอกสาร คุณสามารถดูไฟล์เอกสารทั้งหมดได้ จากขั้นตอนนี้ คุณจะสามารดูไฟล์ Excel, Powerpoint, Word, ข้อความ และ PDF ได้

เนื้อหาอื่น

เนื้อหาอื่น ประกอบด้วยรายการไฟล์ที่ไม่ใช่รูปภาพ เสียง วิดีโอ เอกสาร เกมส์ หรือแอปพลิเคชัน

มัลติมีเดีย

เกมส์

คุณสามารถติดตั้งเกมส์ใหม่ๆ บนโทรศัพท์ของคุณ เพื่อความเพลิดเพลินในยามว่าง

คุณสามารถเข้าใช้งานได้โดยใช้เมนู **เกมส์&แอปฯ** ใน **เมนูหลัก**

การเล่นเกมส์

1. แดะที **เกมส์&แอปฯ** ในแท็บ **ความบันเทิง**
2. เลือกที่เกมส์เพื่อเริ่มเล่น

การโอนไฟล์ไปที่โทรศัพท์

บลูทูธคือวิธีการที่ง่ายที่สุดในการโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ คุณยังสามารถใช้ LG PC Suite ผ่านทางสายสำหรับซิงค์ของคุณ

ในการโอนไฟล์โดยใช้บลูทูธ:

1. ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธที่โทรศัพท์และคอมพิวเตอร์ และทั้งคู่ต่างมองเห็นกันแล้ว
2. ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
3. เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแดะที **ใช่**
4. ไฟล์ควรปรากฏในโพลเดอร์ **ภาพ** หากเป็นไฟล์ภาพ และในโพลเดอร์ **เสียง** หากเป็นไฟล์เพลง

เพลง

โทรศัพท์ LG GD880 ของคุณมีเครื่องเล่นเพลงในตัว เพื่อให้คุณเล่นเพลงที่คุณชอบทั้งหมด ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะที่ **เพลง** จากขั้นตอนนี้

คุณสามารถเข้าใช้งานโพลเดอร์ที่อยู่ด้านบนของหน้าจอ:

หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลงได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้รับสิทธิ์ในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีข้อยกเว้นในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์โปรดตรวจสอบกฎขอมั้บังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

ทุกแทร็ค - มีเพลงทั้งหมดที่คุณมีในโทรศัพท์ทุกวงเพลงเริ่มต้นที่โหลดล่วงหน้า

สิ่งที่ประทับใจ - ประกอบด้วยเพลงที่คุณบันทึกเป็นสิ่งที่ประทับใจ

ศิลปิน - รายการเพลงที่เก็บไว้ตามศิลปิน

อัลบั้ม - รายการเพลงที่เก็บไว้ตามอัลบั้ม

แนวเพลง - รายการเพลงที่เก็บไว้ตามแนวเพลง

รายการเพลง - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธ หรือสายสำหรับซิงโครไนซ์ คุณยังสามารถใช้ LG PC Suite ได้ในการโอนไฟล์โดยใช่บลูทูธ:

1. ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และเชื่อมต่อกันแล้ว
2. เลือกไฟล์เพลงบนอุปกรณ์ แล้วเลือกเพื่อส่งทางบลูทูธ
3. เมื่อไฟล์พร้อมที่จะส่งแล้ว คุณยอมรับไฟล์ที่โทรศัพท์โดยแตะที่ **ใช่**
4. ไฟล์จะปรากฏขึ้นใน **เพลง > ทุกแทร็ค**

การเล่นเพลง

1. แตะที่ **เพลง**
2. เลือกเพลงที่คุณต้องการเล่น ข้อความยืนยันจะปรากฏขึ้นในโหมด **เจียบ**
3. แตะ **II** เพื่อหยุดเล่นเพลงชั่วคราว
4. แตะที่ **▶▶** เพื่อข้ามไปที่เพลงถัดไป
5. แตะที่ **◀◀** เพื่อย้อนไปที่เพลงก่อนหน้า
6. แตะที่ **↶** เพื่อกลับไปยังเมนู **เพลง** คุณอาจแตะมากกว่าหนึ่งครั้งเพื่อกลับไปที่เมนู

วิทยุ FM

โทรศัพท์ LG GD880 ของคุณมีคุณสมบัติวิทยุ FM ดังนั้นคุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

1. เลื่อนแล้วแตะที่ **วิทยุ FM** ใน **เมนูหลัก**
2. ค้นหาสถานีหรือปรับระดับเสียงตามต้องการ

หมายเหตุ: คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟังถัดจากช่องเสียบเครื่องชาร์จ

ปฏิทิน

SNS

บริการเครือข่ายสังคมที่เน้นการสร้างและสะท้อนเครือข่ายสังคมหรือความสัมพันธ์ทางสังคมของบุคคลที่มีความสนใจและ/หรือกิจกรรมร่วมกัน

Facebook

Facebook เป็นเว็บไซต์เครือข่ายสังคม


1. แตะที่  จากหน้าจอหลัก และแตะที่ Facebook

Twitter

Twitter เป็นบริการเครือข่ายสังคมและไมโครบล็อกฟรี



1. แตะที่  จากหน้าจอหลัก และแตะที่ Twitter

ตั้งค่า




1. แตะที่  จากหน้าจอหลัก และแตะที่ ตั้งค่า SNS
2. เปิดเครือข่ายสังคม หากคุณมีแอคเคาท์ที่เกี่ยวข้องกับเครือข่ายสังคมแอคเคาท์ดังกล่าวจะปรากฏขึ้น แตะที่แอคเคาท์ แล้วแตะที่ **Import friends** เพื่อเพิ่มรายชื่อเพื่อนลงในโทรศัพท์
3. หากคุณไม่มีแอคเคาท์ ให้แตะที่ **บัญชีใหม่** แล้วสร้างแอคเคาท์ของคุณ

หมายเหตุ: มีค่าใช้จ่ายในการเชื่อมต่อกับบริการเหล่านี้ โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ



การเพิ่มเหตุการณ์ลงในปฏิทิน

1. แตะที่  จากหน้าจอหลัก และแตะที่ ปฏิทิน
2. เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
3. แตะที่  และแตะที่ **นัดหมายใหม่** หรือเพียงแคแตะที่ **นัดหมายใหม่** ที่ด้านล่างของหน้าจอ



การเพิ่มรายการลงในสิ่งที่ต้องทำ

1. แตะที่  จากหน้าจอหลัก และแตะที่ งาน ใน เมนูหลัก
2. แตะที่  และแตะที่ งานใหม่ หรือเพียงแคแตะที่ งานใหม่ ที่ด้านบนของหน้าจอ
3. ตั้งค่าวันที่สำหรับงาน เพิ่มบันทึก และเลือกระดับความสำคัญ: สูง, ปกติ หรือ ต่ำ
4. บันทึกงานโดยแตะที่ 

การเพิ่มบันทึก

1. แตะที่  จากหน้าจอหลัก และแตะที่ **บันทึก** ใน **เมนูหลัก**
2. แตะที่  และ **บันทึกใหม่** หรือเพียงแค่แตะที่ **บันทึกใหม่** ที่ด้านบนของหน้าจอ
3. พิมพ์ **บันทึก** และแตะที่ **บันทึก**
4. **บันทึก** จะปรากฏในหน้าจอในแอปพลิเคชัน **บันทึก**







การตั้งเวลาการปลุก

1. แตะที่  จากหน้าจอหลัก และแตะที่ **ตั้งปลุก** การปลุก **Widget** ควบคุมปรากฏในรายการเป็นค่าเริ่มต้น และคุณไม่สามารถลบออกได้
2. แตะที่  และ **เพิ่มการปลุก** หรือเพียงแค่แตะที่ **เพิ่มการปลุก** ที่ด้านบนของหน้าจอ


หมายเหตุ: คุณสามารถตั้งปลุกได้ถึง 11 รายการ รวมถึง **การปลุก Widget**

เคล็ดลับ! เลื่อนสวิตช์ตั้งปลุกไปทางซ้ายเพื่อตั้งปลุก


การบันทึกเสียงหรือเสียงพูด

1. แตะที่  จากหน้าจอหลัก และแตะที่ **บันทึกเสียง** ใน **เมนูหลัก**
2. เลือกตำแหน่งที่จะบันทึกการบันทึกเสียง: **ภายใน** หรือ **ภายนอก**
3. เลือกโหมดการบันทึก: **ปกติ** หรือ **MMS**
4. แตะที่  เพื่อเริ่มบันทึก
5. แตะที่  เพื่อหยุดการบันทึก
6. แตะที่  เพื่อจบการบันทึก
7. แตะที่  เพื่อฟังรายการที่บันทึก
8. แตะที่  เพื่อปรับระดับเสียง


การใช้เครื่องคิดเลข

1. แตะที่  จากหน้าจอหลัก และแตะที่ **เครื่องมือ** ใน **เมนูหลัก**
2. เลือก **เครื่องคิดเลข**
3. แตะที่ปุ่มกดโดยใช้ปุ่มกดเพื่อป้อนหมายเลข
4. สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, ×, ÷) แล้วตามด้วย =



ปฏิทิน

- สำหรับการคำนวณแบบซับซ้อน
ให้แตะที่  แล้วเลือกกระบวน **sin**,
cos, **tan**, **log**, **ln**, **exp**, **sqrt**,
deg, **rad** ฯลฯ


การแปลงหน่วย

- แตะที่  จากหน้าจอหลัก
และแตะที่ **เครื่องมือ** ใน **เมนูหลัก**
- เลือก **ตัวแปลงหน่วย**
- ที่ด้านบนของหน้าจอ
เลือกว่าคุณต้องการแปลง **สกุลเงิน**,
พื้นที่, **ความยาว**, **น้ำหนัก**,
อุณหภูมิ, **ปริมาตร** หรือ **ความเร็ว**
- จากนั้น คุณสามารถเลือกหน่วย
และป้อนค่าที่คุณต้องการแปลง
แล้วตามด้วยหน่วยที่คุณต้องการ
แปลงเป็น
- ค่าผลลัพธ์ที่เกี่ยวข้องกันจะปรากฏ
ขึ้นบนหน้าจอ

การเพิ่มเมืองในเวลาทั่วโลก

- แตะที่  จากหน้าจอหลัก
และแตะที่ **เครื่องมือ** ใน **เมนูหลัก**
- เลือก **เวลาโลก**
- แตะที่  และ **เมืองใหม่**
หรือเพียงแคแตะที่ **เมืองใหม่**
ที่ด้านบนของหน้าจอ

การใช้นาฬิกาจับเวลา

- แตะที่  จากหน้าจอหลัก
และแตะที่ **เครื่องมือ** ใน **เมนูหลัก**
- เลือก **นาฬิกาจับเวลา**
- แตะที่ **เริ่ม** ที่ด้านล่างของหน้าจอ
เพื่อเริ่มตัวตั้งเวลา
- แตะที่ **รอบ** หากคุณต้องการ
บันทึกกรอบเวลา
- แตะที่ **หยุด** เพื่อหยุดตัวจับเวลา

LG ซิงค์

โดยการใช้เมนูนี้ คุณสามารถซิงโครไนซ์ข้อมูล PIM หรือเนื้อหาอื่นของโทรศัพท์กับแอคเคาท์ LG ซิงค์ได้


- แตะที่ **LG ซิงค์** ใน **เมนูหลัก**
- หากคุณไม่มีแอคเคาท์ LG ซิงค์
โปรดไปที่ www.lgairsync.com เพื่อสร้างแอคเคาท์ของคุณ
หากคุณมีแอคเคาท์ ให้พิมพ์ ID
และรหัสผ่านของคุณ
- หากคุณต้องการซิงโครไนซ์ข้อมูล PIM ให้แตะที่ **การซิงค์ PIM**
หากต้องการซิงโครไนซ์เนื้อหา
ให้แตะที่ **เชื่อมต่อผ่านเครือข่าย**

4. ในกรณีของการซิงค์ PIM ให้เลือกรายการที่คุณต้องการซิงโครไนซ์ แล้วแตะที่ ซิงค์ทันที
5. ในกรณีของเชื่อมต่อผ่านเครือข่าย ให้เลือกรายการที่คุณต้องการซิงโครไนซ์ แล้วแตะที่ ซิงค์ทันที


PC ซิงค์

คุณสามารถซิงโครไนซ์คอมพิวเตอร์กับโทรศัพท์ของคุณ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน และยังสามารถสำรองข้อมูลไฟล์ที่ช่วยให้คุณสบายใจได้

การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

1. จากหน้าจอหลัก ให้แตะที่  และแตะที่ การเชื่อมต่อ
2. เลือก โหมดเชื่อมต่อ USB และแตะที่ **PC Suite**
3. เชื่อมต่อตัวเครื่องและคอมพิวเตอร์โดยใช้สาย USB และรอสักครู่ ขอความคำแนะนำการติดตั้งจะปรากฏขึ้น
4. ปฏิบัติตามคำแนะนำบนหน้าจอ เพื่อให้ริชาร์ด LG PC Suite Installer เสร็จสมบูรณ์
5. เมื่อติดตั้งเสร็จเรียบร้อยแล้ว ไอคอน LG PC Suite จะปรากฏขึ้นบนเดสก์ท็อป

การเชื่อมต่อโทรศัพท์เข้ากับ คอมพิวเตอร์

1. จากหน้าจอหลัก ให้แตะที่  และแตะที่ การเชื่อมต่อ
2. เลือก โหมดการเชื่อมต่อ **USB**
3. แตะที่ **PC Suite**

4. เชื่อมต่อตัวเครื่องและคอมพิวเตอร์โดยใช้สาย USB และรอสักครู่ PC Suite จะทำงานโดยอัตโนมัติ

การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

1. เชื่อมต่อโทรศัพท์กับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
2. คลิกไอคอน **Backup** และเลือก **Backup** หรือ **Restore**
3. ทำเครื่องหมายที่เนื้อหาที่คุณต้องการสำรองหรือเรียกคืน เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือเรียกคืนข้อมูล คลิกไอคอน **Start**
4. ข้อมูลของคุณจะได้รับการสำรองหรือเรียกคืน

การดูไฟล์ในโทรศัพท์บน คอมพิวเตอร์

1. เชื่อมต่อโทรศัพท์กับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
2. คลิกที่ไอคอน Manage Photos, Videos หรือ Music
3. ภาพ, ไฟล์เสียง และวิดีโอ ซึ่งคุณบันทึกไว้ในโทรศัพท์ของคุณจะปรากฏบนหน้าจอในโฟลเดอร์โทรศัพท์ LG

เคล็ดลับ! การดูเนื้อหาในโทรศัพท์บนคอมพิวเตอร์ช่วยให้คุณสามารถไฟล์ต่างๆที่คุณไม่ต้องการใช้แล้วได้

การซิงโครไนซ์รายชื่อ


1. เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
2. คลิกที่ไอคอน **Contacts**
3. คลิกที่ปุ่ม Sync Contacts คอมพิวเตอร์จะอิมพอร์ตและแสดงรายชื่อที่บันทึกไว้ในตัวเครื่อง
4. คลิก Menu และเลือก Export ขณะนี้ คุณสามารถเลือกเป้าหมายที่คุณต้องการบันทึกรายชื่อคลิกขวาที่รายชื่อของคุณ แล้วเลือก **Select All**

การซิงโครไนซ์ข้อความ

1. เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
2. คลิกที่ไอคอน **Messages**
3. ข้อความทั้งหมดในโทรศัพท์จะปรากฏขึ้นในไฟล์เดสทอปหน้าจอ

การใช้โทรศัพท์เป็นอุปกรณ์ซิงค์เพลง

คุณสามารถใช้โทรศัพท์เป็นอุปกรณ์ซิงค์เพลงในการซิงค์ไฟล์เพลงเท่านั้น คุณสามารถซิงค์เพลงได้โดยใช้ Windows Media Player 10/11 และสนับสนุนทั้งหน่วยความจำเครื่องและหน่วยความจำภายนอก

1. เลิกการเชื่อมต่อเครื่องโทรศัพท์ของคุณออกจากเครื่องคอมพิวเตอร์
2. จากหน้าจอหลัก ให้แตะที่  และแตะที่ **การเชื่อมต่อ**
3. เลือก โหมดการเชื่อมต่อ USB
4. แตะที่ ซิงค์เพลง
5. เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ โทรศัพท์ของคุณจะแสดงข้อความ: เชื่อมต่อ

ตัวแปลง DivX

DivX จะแปลงไฟล์มีเดียบนคอมพิวเตอร์ของคุณให้อยู่ในรูปแบบไฟล์ที่คุณสามารถอัปโหลดและเช่าดูได้จากโทรศัพท์ของคุณ

เมื่อติดตั้งแล้ว ให้เลือก **DivX** จากแฟ้มโปรแกรม บนคอมพิวเตอร์ และ **ตัวแปลง DivX** แล้วตามด้วย ตัวแปลงใช้ลูกศรในแอปพลิเคชันเพื่อเปลี่ยนรูปแบบการแปลงเป็น มือถือหากคุณคลิกขวาที่ช่องแอปพลิเคชัน แล้วเลือก

PC ซิงค์

การตั้งค่า คุณสามารถเปลี่ยนตำแหน่งที่บันทึกไฟล์ที่แปลงแล้วได้ ลากแล้ววางไฟล์ลงในแอปพลิเคชันเพื่อการวิเคราะห์เริ่มต้น จากนั้นเลือก **แปลง** เพื่อเริ่มกระบวนการ เมื่อกระบวนการเสร็จสมบูรณ์ ป๊อปอัพ Conversion complete จะปรากฏขึ้น

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Pat. 7,295,673

OSP (On Screen Phone)

โดยการใช้คุณสมบัติ OSP คุณสามารถดูหน้าจอโทรศัพท์จากคอมพิวเตอร์ได้ คุณสามารถควบคุมโทรศัพท์จากหน้าจอคอมพิวเตอร์ได้เช่นเดียวกับที่โทรศัพท์

การติดตั้ง OSP

ลงในคอมพิวเตอร์

เมื่อคุณติดตั้ง LG PC Suite ลงในคอมพิวเตอร์ OSP จะถูกติดตั้งโดยอัตโนมัติ

การเริ่มต้น OSP

คลิก  บนคอมพิวเตอร์ หรือ
start> program> LG OSP

การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

ผ่านสายเคเบิล


1. คลิก 'ริชาร์ทการเชื่อมต่อ'
2. เลือก 'การเชื่อมต่อผ่านสายเคเบิล' แล้วคลิก ถัดไป
3. เชื่อมต่อตัวเครื่องและคอมพิวเตอร์ผ่านสายเคเบิล USB
4. เลือก ถัดไป
5. ป้อนรหัสผ่านโทรศัพท์ในคอมพิวเตอร์ (ค่าเริ่มต้นคือ "0000")

ผ่านบลูทูธ

1. ตรวจสอบให้แน่ใจว่าได้ตั้งค่าบลูทูธเป็น เปิด และ มองเห็นได้ทั้งคอมพิวเตอร์และโทรศัพท์

2. เลือกการเชื่อมต่อบลูทูธ แล้วคลิก ถัดไป
3. เลือกโทรศัพท์จากโทรศัพท์ที่ค้นหาแล้วคลิก ถัดไป
4. ป้อนรหัส PIN ในคอมพิวเตอร์ แล้วคลิก ถัดไป
5. คลิก 'ใช่' ในข้อความยืนยัน
6. ป้อนรหัส PIN ในโทรศัพท์ แล้วคลิก ตกลง
7. ป้อนรหัสผ่านโทรศัพท์ในคอมพิวเตอร์ แล้วคลิก ตกลง

การยกเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์

หากคุณต้องการยกเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ ให้คลิก 



OSP (On Screen Phone)

การควบคุมโทรศัพท์

คุณสามารถควบคุมโทรศัพท์โดยใช้ **OSP** ได้ หากคุณใช้เมาส์คลิกที่เมนูในหน้าจอหลักของ **OSP** เมนูจะทำงานในโทรศัพท์เหมือนกับที่คุณเลือกเมนูในโทรศัพท์

ตัวอย่างเช่น หากคุณต้องการส่งข้อความโดยใช้ **OSP** ให้คลิกข้อความในแท็บการติดต่อของเมนูหลัก **OSP** แล้วคลิก เขียนข้อความ

คุณสามารถป้อนตัวอักษรโดยใช้เมาส์คลิกหรือคีย์บอร์ดของคอมพิวเตอร์ได้

หากคุณต้องการใช้เมาส์เพื่อพิมพ์ตัวอักษร ให้คลิกที่ตัวอักษรที่คุณต้องการป้อน

หากคุณต้องการใช้คีย์บอร์ด ให้พิมพ์ตัวอักษรบนคีย์บอร์ด

คลิก ส่ง SMS เมื่อคุณเขียนข้อความเสร็จแล้ว

การโอนไฟล์ระหว่างโทรศัพท์และคอมพิวเตอร์

ส่งไฟล์จากคอมพิวเตอร์ไปยังโทรศัพท์

1. เลือกไฟล์ที่คุณต้องการส่งจากคอมพิวเตอร์ แล้วลากและวางไฟล์ในหน้าจอ **OSP**

ส่งไฟล์จากโทรศัพท์ไปยังคอมพิวเตอร์

1. เลือกไฟล์ที่คุณต้องการส่งจาก อัลบั้มมีเดีย ในแท็บความบันเทิง ของหน้าจอ **OSP** แล้วคลิกปุ่มเมาส์ขวา และเลือกบันทึกในคอมพิวเตอร์

การแก้ไขไฟล์ในโทรศัพท์

1. เลือกไฟล์ที่คุณต้องการแก้ไขจากอัลบั้มมีเดียในแท็บความบันเทิง ของหน้าจอ **OSP** แล้วคลิกปุ่มเมาส์ขวา และเลือกแก้ไข
2. คุณสามารถแก้ไขไฟล์โดยใช้แอปพลิเคชันที่เกี่ยวข้องของได้
3. เมื่อคุณแก้ไขไฟล์เสร็จแล้ว ไฟล์จะถูกส่งกลับไปโทรศัพท์

การใช้การแจ้งของ OSP

คุณสมบัตินี้ **OSP** จะแสดงข้อความป๊อปอัพพร้อมข้อมูลเกี่ยวกับการแจ้งเตือนของโทรศัพท์: ตั้งปลุก, ข้อความ, สายเรียกเขา, ฯลฯ

1. เลือก  ในหน้าจอ **OSP**
2. เลือก "เตือนฉันด้วยป๊อปอัพ"

หมายเหตุ: เมื่อคุณใช้คุณสมบัตินี้ **OSP** การตอบสนองของโทรศัพท์อาจช้าลง

เว็บไซต์

การเข้าใช้เว็บไซต์


1. แตะที่ **เบรราวเซอร์** ใน **เมนูหลัก**
2. ในการไปยังโฮมเพจของเบรราวเซอร์ ให้เลือก **เบรราวเซอร์** หรือเลือก **ป้อน URL** และพิมพ์ URL ตามด้วย **ตกลง** ที่ด้านซ้ายบนของหน้าจอ

หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามผู้ให้บริการเครือข่ายของคุณ สำหรับค่าใช้จ่าย

การเพิ่มและการใช้บุ๊กมาร์ค

เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุ๊กมาร์คและบันทึกเว็บเพจได้

1. แตะที่ **เบรราวเซอร์** ใน **เมนูหลัก**
2. เลือก **บุ๊กมาร์ค** รายการบุ๊กมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ
3. ในการเพิ่มบุ๊กมาร์คใหม่ ให้แตะที่ **บุ๊กมาร์คใหม่** ป้อนชื่อสำหรับบุ๊กมาร์ค แล้วตามด้วยป้อน URL ในกล่องฟิลด์ที่ตรงกัน


4. แตะที่  ที่ด้านซ้ายบนของหน้าจอ บุคมาร์คของคุณจะปรากฏขึ้นในรายการบุ๊กมาร์ค
5. ในการเข้าใช้งานบุ๊กมาร์ค เพียงแตะที่ไอคอนเชื่อมต่อถัดจากบุ๊กมาร์ค หรือแตะที่ชื่อบุ๊กมาร์คแล้วแตะที่ **ดำเนินการ** เครื่องจะเชื่อมต่อเข้ากับบุ๊กมาร์คของคุณ

การใช้ RSS reader

RSS (Really Simple Syndication) เป็นกลุ่กรูปแบบ Web Feed ที่ใช้เพื่อเผยแพร่เนื้อหาที่ได้รับการอัปเดตเป็นประจำ เช่น รายการใน Blog, หัวข้อข่าว หรือ Podcast เอกสาร RSS ที่เรียกว่า Feed, Web Feed หรือ Channel จะมีสรุปเนื้อหาหรือข้อความเต็มจากเว็บที่เกี่ยวข้องของ RSS ช่วยให้ทุกคนสามารถติดตามความเคลื่อนไหวของเว็บไซต์ที่ตนชื่นชอบได้เสมอ ด้วยระบบอัตโนมัติที่สะดวกกว่าการเฝ้าดูด้วยตนเอง ผู้ใช้สมัครใช้บริการ Feed โดยป้อนลิงค์ของ Feed ลงใน Reader หรือคลิกที่ไอคอน RSS ในเบรราวเซอร์ที่เปิดขึ้นตอนการสมัครใช้บริการ Reader จะตรวจดู Feed ที่ผู้ใช้สมัครใช้บริการเป็นประจำเพื่อดูเนื้อหาใหม่ และดาวน์โหลดการอัปเดตต่างๆ ที่พบ

เว็บไซต์

การบันทึกเพจ

1. เข้าถึงเว็บเพจที่ต้องการตามที่อธิบายไว้ข้างต้น
2. แตะที่  แล้วเลือก บันทึกเพจนี้
3. ป้อนชื่อสำหรับเว็บเพจเพื่อให้ง่ายต่อการจดจำ
4. แตะที่ บันทึก

การเข้าใช้เพจที่บันทึกไว้

แตะที่ เบราวเซอร์ และเลือก เพจที่บันทึก คุณสามารถดูเพจที่บันทึกได้ที่นี่

การดูประวัติ

แตะที่ เบราวเซอร์ และเลือก ประวัติ

การใช้โทรศัพท์เป็นโมเด็ม

GD880 ของคุณสามารถทำหน้าที่เป็นโมเด็มของเครื่องคอมพิวเตอร์ได้ จึงทำให้คุณสามารถส่งอีเมลและเข้าถึงอินเทอร์เน็ตได้ แม้ในเวลาที่คุณไม่ได้เชื่อมต่อโดยใช้สาย โดยคุณสามารถใช้สาย USB หรือบลูทูธก็ได้

การใช้สายเคเบิล USB:

1. ตรวจสอบให้แน่ใจว่าคุณได้ติดตั้ง LG PC Suite บนเครื่องคอมพิวเตอร์ของคุณแล้ว

2. เชื่อมต่อ GD880 เข้ากับคอมพิวเตอร์ของคุณด้วยสาย USB ตามวิธีข้างต้น แล้วเริ่มซอฟต์แวร์ LG PC Suite
3. คลิก **Internet Kit** บนเครื่องคอมพิวเตอร์ แล้วคลิกปุ่ม **New** และเลือก **Modem**
4. เลือก **LG Mobile USB Modem** และเลือก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
5. เขียนโปรไฟล์ที่สามารถเชื่อมต่อกับอินเทอร์เน็ต และบันทึกค่า
6. โปรไฟล์ที่คุณสร้างจะปรากฏขึ้นในหน้าจอคอมพิวเตอร์ เลือกและคลิก Connect คอมพิวเตอร์จะเชื่อมต่อผ่านโทรศัพท์ GD880 ของคุณ

การใส่บลูทูธ:

1. ตรวจสอบให้แน่ใจว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** ทั้งคอมพิวเตอร์และโทรศัพท์ GD880
2. จับคู่เครื่องคอมพิวเตอร์ของคุณและโทรศัพท์ GD880 เพื่อให้ต่อระบบรหัสผ่านสำหรับการเชื่อมต่อ
3. ใช้ **Connection wizard** ใน LG PC Suite เพื่อสร้างการเชื่อมต่อบลูทูธ
4. คลิก **Internet Kit** บนเครื่องคอมพิวเตอร์ จากนั้นคลิกปุ่ม **New**

5. เลือก LG Mobile USB Modem และเลือก ตกลง จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
6. เขียนโปรไฟล์ที่สามารถเชื่อมต่อกับอินเทอร์เน็ต และบันทึกค่า
7. โปรไฟล์ที่คุณสร้างจะปรากฏขึ้นในหน้าจอคอมพิวเตอร์ เลือกและคลิก Connect คอมพิวเตอร์จะเชื่อมต่อผ่านโทรศัพท์ GD880 ของคุณ

ตั้งค่า

การปรับแต่งรูปแบบเสียงของคุณ

คุณสามารถกำหนดการตั้งค่าโปรไฟล์แต่ละโปรไฟล์โดยใช้เมนูตั้งค่า

1. แตะที่ **☰** จากหน้าจอหลัก และแตะที่ **โปรไฟล์**
2. เลือกรูปแบบเสียงที่คุณต้องการแก้ไข
3. คุณจะสามารเปลี่ยนตัวเลือกเสียงและการเตือนทั้งหมดที่มีอยู่ในรายการได้ รวมทั้งการตั้งค่าเสียงเรียกเข้า, ระดับเสียง, เสียงข้อความ และอื่นๆ

การเปลี่ยนการตั้งค่าการแสดงผล

แตะที่ **☰** จากหน้าจอหลัก และแตะที่ **ตั้งค่าจอ** เลือกการตั้งค่าหน้าจอที่คุณต้องการแก้ไข

หมายเหตุ: การเปิดไฟหน้าจอเป็นเวลานานจะทำให้สิ้นเปลืองพลังงานแบตเตอรี่มากยิ่งขึ้น ซึ่งอาจส่งผลให้จำเป็นต้องชาร์จโทรศัพท์บ่อยครั้งมากขึ้น

การเปลี่ยนการตั้งค่าโทรศัพท์

เพลิดเพลีนกับอิสระในการปรับการทำงานของโทรศัพท์ GD880 ในแบบที่คุณต้องการได้ และที่ **☰** จากหน้าจอหลัก แตะที่ **ตั้งค่าโทรศัพท์** แล้วเลือกจากรายการทางด้านล่าง

วันที่ & เวลา - ปรับการตั้งค่าวันที่และเวลาของคุณ หรือเลือกอัปเดตเวลาอัตโนมัติหรือใช้ตัวเลือกการปรับเวลาตามฤดูกาล

ประหยัดไฟ - เลื่อนสวิตช์ไปทางซ้ายเพื่อเปิด/ปิดการตั้งค่าประหยัดไฟหรือกลางคืนเท่านั้น

ภาษา - เปลี่ยนภาษาบนจอแสดงผลโทรศัพท์ GD880 ของคุณ

ล็อคอัตโนมัติ - ล็อคปุ่มกดอัตโนมัติในหน้าจอหลัก คุณสามารถเลือกเวลาสำหรับล็อคอัตโนมัติได้

ระบบป้องกัน - ปรับการตั้งค่าระบบป้องกัน ได้แก่ รหัส PIN และล๊อคเครื่อง

ข้อมูลความจำ - ดู การใช้ตัวจัดการหน่วยความจำ สำหรับข้อมูลเพิ่มเติม

ตั้งค่าที่เก็บหลัก - เลือกตำแหน่งที่คุณต้องการบันทึกรายการระหว่างความจำเครื่อง และหน่วยความจำภายนอก

รีเซ็ตการตั้งค่า - เรียกคืนการตั้งค่าทั้งหมดให้กลับเป็นค่าที่ตั้งจากโรงงาน

ข้อมูลอุปกรณ์ - แสดงข้อมูลอุปกรณ์ คุณสามารถอัปเดตซอฟต์แวร์ผ่านทางเว็บได้โดยใช้เมนูนี้

คู่มืออุปกรณ์ - แสดงวิธีการใช้แต่ละฟังก์ชัน (หน้าจอหลัก, ดาวน์โหลด Widget, สัญลักษณ์, เมนู, รายชื่อ, SNS, เบราวเซอร์, ลากเส้นลีดหน้าจอ)

การเปลี่ยนการตั้งค่าสัมผัส

คุณสามารถเปิดใช้งานเสียงหรือสั่นสำหรับแบบเสียง

การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้น คุณจึงสนุกกับโทรศัพท์ใหม่ของคุณได้ทันที ในการเปลี่ยนการตั้งค่าใดๆ ให้ใช้เมนูนี้:

แตะที่  จากหน้าจอหลัก และแตะที่ การเชื่อมต่อ

เลือกเครือข่าย

เลือกเครือข่าย - หากคุณเลือกอัตโนมัติ โทรศัพท์ GD880 จะค้นหาเครือข่ายและลงทะเบียนเครื่องในเครือข่ายโดยอัตโนมัติ ขอแนะนำให้ใช้เพื่อบริการและคุณภาพที่ดีที่สุด

หากคุณเลือก กำหนดเอง เครือข่ายทั้งหมดที่มีอยู่ในขณะนั้นจะปรากฏขึ้น และคุณสามารถเลือกลงทะเบียนในเครือข่ายใดเครือข่ายหนึ่งได้

โหมดเครือข่าย - คุณสามารถตั้งค่าประเภทเครือข่ายที่จะค้นหา เมื่อค้นหาเครือข่ายในเมนู **เลือกเครือข่าย**

รายการที่ต้องการ - คุณสามารถเพิ่มเครือข่ายที่ต้องการเชื่อมต่อได้ หากค้นหาเครือข่ายโดยอัตโนมัติ ให้เลือกหนึ่งเครือข่ายจากรายชื่อเครือข่าย หากไม่มี คุณสามารถเพิ่มเครือข่ายใหม่ได้ด้วยตนเอง

โปรไฟล์อินเตอร์เน็ต - เมนูนี้แสดง **โปรไฟล์อินเตอร์เน็ต** คุณไม่สามารถลบหรือแก้ไขการกำหนดค่าเริ่มต้นสำหรับประเทศของคุณได้ อย่างไรก็ตาม คุณสามารถเพิ่มโปรไฟล์ใหม่ได้โดยใช้เมนูนี้

ตั้งค่า

จุดเชื่อมต่อ - ผู้ให้บริการระบบได้บันทึกข้อมูลนี้แล้ว คุณสามารถเพิ่มจุดเชื่อมต่อใหม่โดยใช้เมนูนี้ได้

สำรองข้อมูล - คุณสามารถส่งข้อมูลของคุณไปยังเซิร์ฟเวอร์ของผู้ให้บริการหรือรับข้อมูลจากเซิร์ฟเวอร์ของผู้ให้บริการใด

หมายเหตุ: บริการนี้อาจไม่มีในบางประเทศ สำหรับข้อมูลเพิ่มเติม โปรดติดต่อผู้ให้บริการระบบของคุณ

เครือข่ายหลัก - คุณสามารถเลือกและแบ่งปันเนื้อหาผ่าน **เครือข่ายหลัก** ได้ โปรดระมัดระวังในการเปิดเผยข้อมูลส่วนตัว

ประเภท GPS - เลือกประเภท GPS: **GPS แบบช่วยเหลือ, สแตนด์อะโลน การลงทะเบียน DivX VOD** - ใช้เมนูนี้เพื่อสร้างรหัสการลงทะเบียน DivX VOD โปรดเยี่ยมชม <http://vod.divx.com> เพื่อลงทะเบียนและการสนับสนุนทางเทคนิค

โหมดการเชื่อมต่อ USB - เลือกบริการข้อมูลจากตัวเลือกและ **ซิงโครไนซ์** โทรศัพท์ GD880 โดยใช้ซอฟต์แวร์ LG PC Suite เพื่อคัดลอกไฟล์จากโทรศัพท์ ดูที่ PC ซิงค์สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการซิงโครไนซ์ หากคุณใช้ ซิงค์เพลงกับ Windows Media Player ให้เลือกซิงค์เพลง ในเมนูนี้ **ซิงค์เพลง** ใช้ได้

เฉพาะกับข้อมูลเพลงเท่านั้น **การเชื่อมต่อข้อมูลแพ็คเกจ** - เลือกว่าจะให้โทรศัพท์ของคุณเชื่อมต่อกับเครือข่ายข้อมูลแพ็คเกจเมื่อใด **ตั้งค่าเบราว์เซอร์** - ตั้งค่าที่เกี่ยวข้องกับเบราว์เซอร์ (โปรไฟล์, การตั้งค่าลักษณะ, แคช / คูกี้, ระบบป้องกัน, รีเซ็ตการตั้งค่า)

ตั้งค่าสตรีมมิ่ง - ผู้ให้บริการระบบได้บันทึกข้อมูลนี้แล้ว คุณสามารถเพิ่มโปรไฟล์ใหม่ได้โดยใช้เมนูนี้

ตั้งค่า Java - ช่วยให้กำหนดโปรไฟล์สำหรับการเชื่อมต่อโดยโปรแกรม Java และดูไบรรับรองได้

โรมมิ่งข้อมูล - ให้คุณจัดการการรับข้อมูลของมัลติมีเดีย/Widget/อีเมล/PIM/เชื่อมต่อผ่านเครือข่ายในพื้นที่โรมมิ่งโดยใช้ฟังก์ชันโรมมิ่งข้อมูล คุณสามารถใช้บริการแอปพลิเคชันข้อมูลเพื่อลดค่าใช้จ่ายของแอปพลิเคชันข้อมูลในพื้นที่โรมมิ่ง

การตั้งค่าเริ่มต้นคือปิด และการใช้แอปพลิเคชันข้อมูลจะถูกบล็อก เมื่อคุณเปิดใช้งานฟังก์ชันโรมมิ่งข้อมูล คุณสามารถดาวน์โหลดหรือซิงโครไนซ์ข้อมูลได้

การใช้ตัวจัดการหน่วย ความจำ

โทรศัพท์ GD880 มีหน่วยความจำให้
เลือกสามแบบ: โทรศัพท์, ซิมการ์ด
และหน่วยความจำภายนอก

คุณสามารถใช้ตัวจัดการหน่วยความ
จำเพื่อดูว่าในแต่ละหน่วยความจำใช้
หน่วยความจำไปเท่าใด และมีพื้นที่ว่าง
เหลือเท่าใด

และที่ **ตั้งค่าโทรศัพท์** และ
ข้อมูลความจำ

ความจำเครื่องทั่วไป - ดูหน่วยความ
จำที่ใช้ได้ในหน่วยความจำเครื่องทั่วไป

หน่วยความจำมัลติมีเดียภายใน -
ดูหน่วยความจำที่ใช้ได้ในหน่วย
ความจำมัลติมีเดียภายใน

ความจำเครื่องสำรอง - ดูหน่วย
ความจำที่ใช้ได้ในตัวเครื่องสำหรับ
SMS, รายชื่อ, ปฏิทิน,
รายการสิ่งที่ต้องทำ, บันทึกลับ,
ตั้งปลุก, ข้อมูลการโทร, บุคมาาร์ค
และรายการเบ็ดเตล็ด

หน่วยความจำ USIM -

ดูหน่วยความจำที่มีในซิมการ์ด

ความจำการ์ด - ดูหน่วยความจำที่มี
ในการ์ดหน่วยความจำภายนอก
(คุณต้องซื้อการ์ดหน่วยความจำแยก
ต่างหาก)

การส่งและการรับไฟล์โดย ใช้บลูทูธ

ในการส่งไฟล์:

1. เปิดไฟล์ที่คุณต้องการส่ง โดย
ทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ
หรือเพลง
2. เลือก **ส่ง**
เลือก **บลูทูธ**
3. หากคุณจับคู่อุปกรณ์บลูทูธแล้ว
โทรศัพท์ GD880 จะไม่ค้นหา
อุปกรณ์บลูทูธอื่นโดยอ
ัตโนมัติน หากคุณยังไม่จับค
อุปกรณ์บลูทูธ โทรศัพท์ GD880
จะค้นหาอุปกรณ์อื่นๆ
ที่ใช้บลูทูธภายในรัศมี
4. เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์
ไป
5. ไฟล์ของคุณจะถูกส่งออกไป

เคล็ดลับ! ตรวจสอบแถบแสดง
ความคืบหน้าเพื่อให้แน่ใจว่ากำลัง
ส่งไฟล์ของคุณ

ในการรับไฟล์:

1. ในการรับไฟล์คุณต้องตั้งค่า
บลูทูธเป็น **เปิด** และ **มองเห็นได้**
โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับ
การเปลี่ยนการตั้งค่าบลูทูธ
ที่ด้านล่าง

ตั้งค่า

2. เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และที่ **ใช่** เพื่อรับไฟล์
3. คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว สำหรับไฟล์ภาพ คุณสามารถเลือก ดู ไฟล์หรือไปยังแฟ้มข้อมูล โดยทั่วไป ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมใน แฟ้มข้อมูล

การเปลี่ยนการตั้งค่าบลูทูธ

แตะที่ **บลูทูธ** และเลือก 

ทำการเปลี่ยนแปลง:

ข้อมูลอุปกรณ์ของฉัน - ดูข้อมูลอุปกรณ์เกี่ยวกับบลูทูธ

การมองเห็นเครื่อง - เลือกเป็นมองเห็นได้, ซ่อน หรือ แสดง 1 นาที

ชื่อเครื่องของฉัน - ดูชื่ออุปกรณ์


แอตเดรสบลูทูธ - ดูแอตเดรสบลูทูธ

บริการที่รองรับ - เลือกวิธีใช้บลูทูธร่วมกับบริการอื่นๆ

โหมดซิมระยะไกลเปิด/ปิด - เปิดหรือปิด

การจับคู่กับอุปกรณ์บลูทูธอื่น

ในการจับคู่โทรศัพท์ GD880 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้

1. ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการมองเห็นได้โดยแตะที่ 
2. แตะที่ **อุปกรณ์ใหม่**
3. โทรศัพท์ GD880 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ ไอคอนรีเฟรช จะปรากฏขึ้นที่ด้านซ้ายบนของหน้าจอ
4. เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วยและคลิก **ใช่** ในข้อความยืนยัน คุณอาจต้องป้อนรหัสผ่านหากรหัสผ่านไม่ตรงกับอุปกรณ์ที่คุณพยายามจับคู่
5. แตะที่ **ถามเสมอ** หรือ **อนุญาตเสมอ** จากนั้นอุปกรณ์จะจับคู่

การใช้ชุดหูฟังบลูทูธ

1. ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้**
2. ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ

3. แตะที่ **ถามเสมอ** หรือ **อนุญาตเสมอ** โทรศัพท์ GD880 จะเปลี่ยนเป็นรูปแบบชุดหูฟังโดยอัตโนมัติ

Wi-Fi

ตัวจัดการไร้สายช่วยให้คุณจัดการการเชื่อมต่ออินเทอร์เน็ตผ่านทาง Wi-Fi (Wireless LAN) ในเครื่องของคุณ โดยให้โทรศัพท์ที่เชื่อมต่อเครือข่ายไร้สายในท้องถิ่นหรือเข้าใช้อินเทอร์เน็ตแบบไร้สาย Wi-Fi เร็วกว่าและรัศมีครอบคลุมกว้างกว่าเทคโนโลยีไร้สายของบลูทูธ และสามารถส่งอีเมลและการเบรอสอินเทอร์เน็ตอย่างรวดเร็ว

หมายเหตุ: โทรศัพท์ GD880 สนับสนุนการเข้ารหัส WEP และ WPA-PSK/2 แต่ไม่สนับสนุนการเข้ารหัส EAP หรือ WPS หากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณตั้งค่าการเข้ารหัสสำหรับการรักษาความปลอดภัยเครือข่ายไว้ ต้องป้อนรหัสในหน้าต่างป๊อปอัพ

หากไม่ได้มีการตั้งค่าการเข้ารหัสไว้ หน้าต่างป๊อปอัพนี้จะไม่ปรากฏขึ้น คุณสามารถขอรหัสจากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณ

การอัปเดตซอฟต์แวร์ โปรแกรมอัปเดตซอฟต์แวร์ โทรศัพท์มือถือ LG


สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการติดตั้งและการใช้โปรแกรมนี้ โปรดไปที่ <http://www.lgmobile.com>

คุณสมบัตินี้ให้คุณอัปเดตซอฟต์แวร์ของคุณเป็นเวอร์ชันล่าสุดได้อย่างรวดเร็วและสะดวกบนอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการของเรา โปรแกรมอัปเดตซอฟต์แวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการระหว่างกระบวนการอัปเดต โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่า การถอดสายการสื่อสารข้อมูล USB หรือแบตเตอรี่ระหว่างการอัปเดตอาจทำให้โทรศัพท์ชำรุดเสียหายได้ ผู้ผลิตจะไม่รับผิดชอบการสูญเสียข้อมูลระหว่างกระบวนการอัปเดต คุณควรจัดข้อมูลสำคัญเก็บไว้ก่อน

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ GD880

อุปกรณ์ชาร์จ



สายเคเบิลข้อมูล
และซีดี



แบตเตอรี่



ชุดหูฟังสเตอริโอ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์ที่สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเรา
ในกรณีที่มีข้อสอบถามเพิ่มเติม

ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์: GD880

ระบบ:

GSM 850/900/1800/1900, HSDPA
7.2 Mbps/HSUPA 2.0Mbps, UMTS
900/2100, 850/2100, 850/1900

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ),
+45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

ศูนย์บริการ LG โดย บริษัท แอลจีอีเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน
72/127 ถ.สมเด็จพระเจ้าตากสิน
แขวงบคคโกล เขตธนบุรี
กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ -อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757

Declaration of Conformity



Supplier's Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GD880

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Seung Hyoun, Ji / Director

Issued Date

09.Feb. 2010

Signature of representative



Some of the contents in this manual may differ from your phone depending on the phone software or your service provider.



GD880 User Guide

Congratulations on your purchase of the advanced and compact GD880 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Guidelines for safe and efficient use....	7
Getting to know your phone.....	12
Open view.....	13
Installing the SIM and battery....	14
Charging your phone.....	15
Memory card.....	16
Using your touch screen.....	17
Touch screen tips.....	17
Control the touch screen.....	17
Your home screen.....	18
You can register favourite menus to main menu.....	18
Quick keys.....	19
Calls.....	20
Making a call.....	20
Making a call from your contacts...	20
Answering and rejecting a call.....	20
In-call options.....	21
Speed dialling.....	22
Making a second call.....	22
Viewing your call logs.....	22
Using call divert.....	22
Using call barring.....	23
Using Excuse message.....	23
Changing the common call setting.....	23
Changing the Video call settings ...	24
Call costs.....	24
Call durations.....	24
Data volume.....	24
Contacts.....	25
Searching for a contact.....	25
Adding a new contact.....	25
Creating a group.....	25
Changing your contact settings....	26
Viewing information.....	26
Importing friends from Social network.....	27
Messaging.....	28
Messaging.....	28
Sending a message.....	28
Entering text.....	28
T9 mode.....	28
Using templates.....	28
Using emoticons.....	28
Using signatures.....	29
Changing your text message settings.....	29

Contents

Changing your multimedia message settings	29	Setting a photo as wallpaper.....	40
Changing your other settings	30	Editing your photos	41
Setting up your e-mail	30	Multimedia.....	42
Microsoft Exchange e-mail account.....	31	Pictures	42
Retrieving your e-mails.....	31	Sending a photo.....	42
Sending an e-mail using your new account.....	31	Using an image.....	42
Changing your e-mail settings.....	31	Printing an image	42
Camera	33	Moving or copying an image	42
Getting to know the viewfinder	33	Sounds	43
Taking a quick photo	34	Using a sound	43
After taking a photo.....	34	Videos	43
Using the advanced settings.....	35	Watching a video	43
Video camera	37	Sending a video clip	43
Getting to know the viewfinder	37	Flash contents.....	43
Making a quick video	38	Documents.....	43
After making a video	38	Other content.....	43
Using the advanced settings.....	39	Games	44
Your photos and videos	40	Playing a game	44
Viewing your photos and videos ...	40	Transferring a file to your phone....	44
Capturing an image from a video..	40	Music	44
Viewing your photos as a slide show	40	Transferring music onto your phone.....	45
		Playing a song.....	45
		FM Radio	45

Organiser	46	Synchronising your messages	51
SNS	46	Using your phone as a Music Sync device	51
Facebook.....	46	DivX Converter.....	51
Twitter.....	46	OSP (On Screen Phone)	53
Settings.....	46	Installing OSP on your computer... 53	
Adding an event to your calendar. 46		Starting OSP.....	53
Adding an item to your to do list... 46		Connecting your phone and PC.... 53	
Adding a memo.....	47	Disconnecting your phone from your PC	53
Setting your alarm.....	47	Controlling your phone.....	54
Recording a sound or voice.....	47	Transferring file between your phone and PC.....	54
Using your calculator.....	47	Editing file of your phone	54
Converting a unit.....	48	Using OSP Notification.....	54
Adding a city to your World clock.. 48		The web	55
Using the stopwatch	48	Accessing the web.....	55
LG 3 way sync	48	Adding and accessing your bookmarks	55
PC Sync	50	Using RSS reader	55
Installing LG PC Suite on your computer	50	Saving a page	56
Connecting your phone and PC.....	50	Accessing a saved page	56
Backing up and restoring the information on your phone	50	Viewing your Mobile history.....	56
Viewing phone files on your PC.....	50	Using your phone as a modem.....	56
Synchronising your contacts	51		

Contents

Settings	58
Personalising your profiles	58
Changing your Display settings	58
Changing your Device settings	58
Changing your touch settings	59
Changing your Connectivity settings	59
Using memory manager	61
Sending and receiving your files using Bluetooth	61
Changing your Bluetooth settings	62
Pairing with another Bluetooth device	62
Using a Bluetooth headset	62
Wi-Fi	63
Software Upgrade	63
Accessories	64
Technical data	65

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GD880 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.23 W/kg (10 g) and when worn on the body is 1.10 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

Guidelines for safe and efficient use

- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Guidelines for safe and efficient use

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls



Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.


- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone

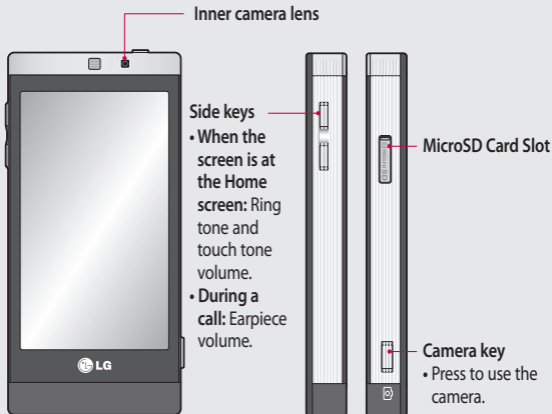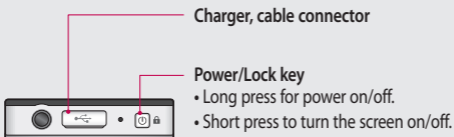

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Open view

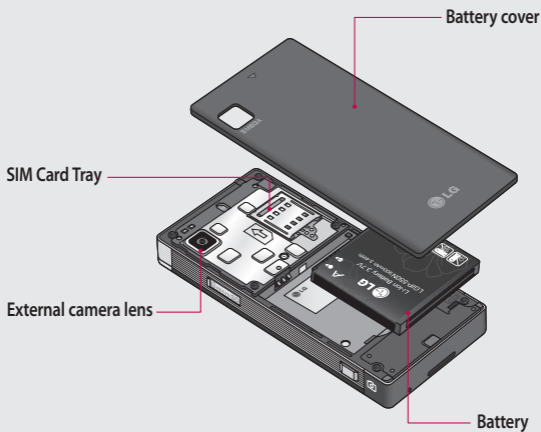

Installing the SIM and battery


1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and pull it away.



2 Install the SIM card

Slide the SIM card into the SIM card holder, making sure that the gold contact area on the card is facing down. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it out gently.

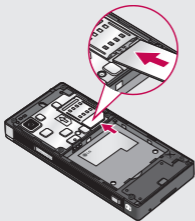


⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the battery

Insert the right side of the battery into the top edge of the battery compartment first.


Ensure that the battery contacts align with the phone's terminals. Press the left side of the battery down until it clicks into place.

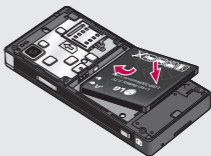

Charging your phone

Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable to the phone and plug it into a power socket. Your GD880 must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery life. Disregard the first "Battery full" message and keep the phone on charge overnight.

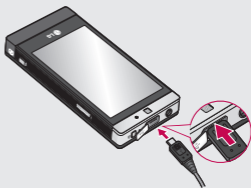

Memory card

Installing a memory card

You can expand your phone's memory by using a MicroSD memory card.


NOTE: A memory card is an optional accessory.



1. Slide the slot cover down.
2. Put the microSD card into the slot. Make sure the gold contact area is facing down
3. Slide the slot cover up.

The GD880 will support up to an 32GB memory card.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can use it.

1. From the Home screen select , then **Device settings**.
2. Touch **Memory info** and scroll down to choose **External memory**.
3. Touch **Format** and then confirm your choice.
4. Enter the password, if one is set. Your card will then be formatted and ready to use.

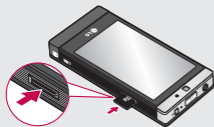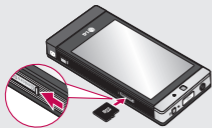

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GD880 is not in use, it will return to the lock screen.

Control the touch screen

The controls on the GD880 touch screen change dynamically depending on the task.

Opening Applications

To open any application, simply touch its icon.



Scrolling

Drag from side to side to scroll. On some screens, such as the call history list, you can also scroll up or down.

Your home screen


From here you can access all the menu options, make a quick call, view the status of your phone and much more.

You can add favourite menus to the main menu

1. Touch  from the home screen.
2. If you want to remove a favourite menu, touch  on the upper right of the icon. If you want to add favourite menus to the main menu, touch **Add** on the bottom right of the screen.



3. Once you touch **Add**, you can choose between **Widget**, **Bookmarks** or **Shortcut** (If you do not want to add, touch **Cancel**).
4. Select a menu you want to add by touching the Star mark on the right side of the menu. The menu will appear on the screen when you return to the previous screen.
5. When you are finished, touch **OK**.

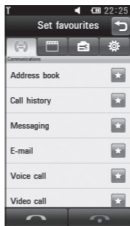

Your home screen

Quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact into the Search field at the top of the screen using the touchpad. You can also create new contacts, edit existing ones, etc.






Touch to access the **Messaging** menu. From here you can create a new SMS or MMS or view your message folder.




Touch to open the full **Top menu**

Calls


Making a call

1. Touch  from the home screen to open the keypad.
2. Key in the number using the keypad.
3. Touch  to initiate the call, but if you want to initiate a Video call, touch  then select **Make video call**.
4. To end the call, press End call on the bottom of the screen.

TIP! To enter + for making an international call, press and hold .

TIP! Press the power key to lock the touchscreen to prevent making calls by mistake.

Making a call from your contacts

1. From the home screen touch  to open your **Contacts**.
2. Tap the Search field box on the top of the screen and use the keypad to enter the first few letters of the contact you want to call.
3. From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
4. Or you can touch the contact name and select the number to use if there is more than one for that contact.


Answering and rejecting a call

When your phone rings, touch **Answer** to answer the call.

To mute the ringing, touch **Silent**.

This is useful if you have forgotten to change your profile to **Silent** for a meeting. Touch **Reject** to reject an incoming call.


In-call options

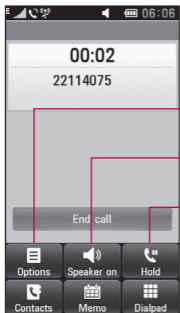



Options - Touch  to bring up a list of further in-call options.

Speaker - Touch  to turn the speaker phone on.

Hold - Touch  to put a call on hold.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.

Touch  to add memo during a call.


Touch  to search your contacts during a call.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.


Calls


Speed dialling

You can assign a frequently-called contact to a speed dial number.

1. Select **Phonebook** and touch  and select **Speed dials**.
2. Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
3. Your **Contact** will open. Select the contact you want to assign to that number by touching the contact's phone number once. To find a contact, tap the **Search** field box and enter the first letter of the contact's name.

Making a second call

1. During your initial call, touch **Dialpad** and type the number you want to call.
2. Touch **Voice call** to connect the call.
3. Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
4. To change between the calls, touch  or press the number of the held call.

5. To end one or both calls, press  and select **End**.

NOTE: You will be charged for each call you make.

Viewing your call logs

Touch **Logs** in the **Main** menu.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Using call divert

1. Touch **Call settings** in the **Main** menu.
2. Touch **Call divert**.
3. Choose between **Voice calls** and **Video calls**. You can choose to divert all calls, calls when the line is busy, when there is no answer or when you cannot be reached.
4. Touch **Activate**.
5. Choose **To voicemail centre** or **To other number** to enter the new divert number.
6. Touch **OK** when you have finished entering the number.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

Using call barring


1. Touch **Call settings** in the **Main menu**.
2. Touch **Call barring**.
3. Choose **Voice calls** or **Video calls**.
You can turn off all call barring by touching **Deactivate all** from the **Call barring** menu.
4. Choose any of the five options:
All outgoing calls
Outgoing international
Outgoing international calls except home country
All incoming
Incoming when abroad
Touch **Activate**.
5. Enter the call barring password.
Please check with your network operator about this service.

TIP! Select **Fixed dial numbers Main menu** to turn on and compile a list of numbers that can be called from your phone.

Using Excuse message

Before you reject an incoming call, you can use “**Excuse messages**” to send a message to explain why you do not receive an incoming call.

Changing the common call setting

1. Touch **Call settings** in the **Main menu**.
2. Touch **Common settings**. From here you can adjust the settings for:
Call reject - Slide the switch to the left to highlight the **Reject list**. You can touch the text box to choose all calls, calls from specific contacts or groups, calls from unregistered numbers (those not in your contacts) or calls with no caller ID. Touch  to change the setting.

Calls

Send my number - Choose whether your number will be displayed when you call someone.

Show SNS events - Choose whether SNS events will be displayed or not.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset or select **Handset** to answer a call by pressing a key on the handset.

Save new number - Choose whether the **Save new number** function is **ON** or not. Slide the switch left for **ON** or right for **OFF**.

Voice clarity - Choose whether the **Voice clarity** function is **ON** or not. Slide the switch left for **ON** or right for **OFF**.

Changing the Video call settings

1. Touch **Call settings**.
2. Touch **Video call settings**.

From here you can adjust the settings for:

Use private image - Choose whether to use a private image for video calls.

Private image - Choose an image for video calls.

Mirror - Choose whether to use Mirror.

Call costs

View the charges applied to your dialled numbers (this service is network-dependent and some operators cannot support it).

Call durations

View the duration of all your dialled or received calls or both.



Data volume

View the amount in kilobytes of all received or sent data or both.

Contacts

Searching for a contact


There are two ways to search for a contact:

1. Touch  from the home screen and then touch **Phonebook** or touch  from the home screen.
2. You see a list of contacts. Typing the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.



TIP! The alphabetical keypad is displayed once you tap the Name field.

Adding a new contact

1. Touch **Phonebook** and touch **New**.
2. Choose whether to save the contact to your **Handset** or **SIM**.
3. Enter your first and last name.
4. You can enter up to 5 different numbers per contact. Each entry is preset for **Mobile**, **Home**, **Office**, **Pager**, and **Fax**.
5. Add an email address.

6. Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Colleagues**, **School** and **VIP**.
7. You can also add a **Ringtone**, **Vibration**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Birthday**, **Anniversary** and **Memo**.
8. Touch  to save the contact.

Creating a group


1. Touch **Phonebook**. Touch the down arrow beside **Contacts** and then select **Groups**.
2. Touch **New group** or touch  and select **New group**.
3. Enter a name for your new group in **Group name** field. You can also assign a ringtone to the group.
4. Touch .

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your **Phonebook**.

Contacts

Changing your contact settings

You can adapt your contact settings to suit your own preferences.

1. Touch **Phonebook**, touch  , scroll down and select **Contact settings**.

2. From here, you can adjust the following settings:

Show keypad - Choose whether the Keypad is displayed.

Display name - Choose the display order of the name.

Synchronise contact - Connect to your server to synchronise your contacts.

Copy all - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time or all at once.

Move all - This works the same way as Copy, but the contacts will only be saved to the location you've moved them to.

Restore contacts - Restore contacts to the Memory Card.

Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to erase your contacts.

Memory info - View information about available memory regarding **Handset**, **USIM** and **USIM e-mail**.


Send all contacts via Bluetooth - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - Backup contacts to the Memory Card.

Viewing information



1. Touch **Phonebook**, touch  , scroll down and select **Information**.

From here you can view your **Service dial numbers**, your **Own numbers**, your **Memory info** (showing your memory usage) and **My profile**.

TIP! To add your own business card, select **My profile** and enter your details as you would for any contact. Touch  to finish.

Importing friends from social networks

You can add your friend contact from your social network (Twitter or Facebook) to your phone using this menu.




1. Touch **Phonebook**, then touch  and select **Import friends from**.
2. Select **Twitter** or **Facebook**.
3. Enter your E-mail and Password and click **OK**.
4. Select the contact you want to add.
5. Select .


Messaging

Messaging

Your GD880 combines SMS and MMS into one intuitive and easy-to-use menu.


Sending a message


1. Touch  from the home screen and then touch **Messaging** or touch  from the home screen.
2. Touch **Write message**,  and select **Insert** to add an image, video, sound, emoticon, etc.
3. Touch **To** to enter the recipient's number or open your contacts or favourites. You can add multiple contacts. When you are finished, touch the message box below to start composing the message text.
4. After entering the text, you can send the message by touching **Send SMS/Send MMS** at the top of the message.

 **WARNING:** If an image, video or sound is added to an SMS, it will be automatically converted to an MMS and you will be charged accordingly.

Entering text

Touch  to turn on T9 mode.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Function keys enable you to change between capital and lowercase input or write a message in a full screen on the keypad, etc.

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Using templates

Create templates for the SMS and MMS messages you send most often. There are already some templates on the phone, which you can edit.

Using emoticons


Liven up your messages using emoticons. There are some commonly used emoticons already on your phone.

You can add a new emoticon by touching **New emoticon**.

Using signatures

Create signatures for the SMS and MMS messages you send most often. When writing a new signature, you can enter Signature from Insert->More in option menu.

Changing your text message settings

Touch **Messaging**, touch  and select **Settings**. Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages were delivered.


Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore the data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or **MMS**.

Changing your multimedia message settings

Touch **Messaging**. Touch  and select **Settings**, then select **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual**, you will receive only notifications of MMS and you can decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read reply - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS (**Low priority, Normal priority, High priority**).

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.


Creation mode - Choose your message mode (**Restricted, Warning, Free**).

Messaging

Delivery time - Choose how long to wait before a message is delivered.

Multimedia message centre - Choose one from the list or add a new message centre.

Changing your other settings

Touch **Messaging**. Touch  and select **Settings**.

Videomail/Voicemail - Touch **New profile** to add a new Videomail/Voicemail service. Contact your network operator for more information about the service they provide.


Service message - Choose to receive or block service messages. You can also set your message security by creating lists of trusted and non-trusted senders in the **Service security** option.

Save sent message - Choose whether to save sent messages.


Info. service - Choose whether to turn Cell broadcast on/off and select your channels and languages.

Signatures - Create, edit or delete **Signatures**.

Setting up your e-mail

Touch  from the home screen, scroll to the right and then touch **E-mail**.

If the email account is not set up, touch **Microsoft Exchange, etc.**

If the email account is set up in your phone and you want to add a new email account, touch  and select **New e-mail account**.

E-mail address - Enter the email address.

Password - Enter the account password

Mailbox type - Enter the mailbox type: **IMAP4**, **POP3** or **PUSH**. These types depend on the service provider.

User name - Enter the account user name.

Incoming server - Enter the incoming email server address.

Outgoing server - Enter the outgoing email server address.

SMTP authentication - Choose security settings for the outgoing mail server.

Account name - How the account will appear in the list of accounts in your E-mail folder.

Once the account is set up, it will appear in the accounts list in your Email folder.

Microsoft Exchange e-mail account

E-mail address – Enter the account email address.

Server address – Enter the email server address.

Domain – Enter the account domain.

User name - Enter the account user name.

Password - Enter the account password.

Sync items - Choose whether to use Sync items (**Contacts, Schedules, Tasks**).

Retrieving your e-mails

You can automatically or manually check your account for new emails. To check manually:


1. Touch **E-mail**.
2. Touch the account you want to use.

3. Choose **Retrieve new**.

Sending an e-mail using your new account

1. Touch **Write e-mail** and a new email will open.
2. Complete the message.
3. Touch **Send e-mail** and your email will be sent.

Changing your e-mail settings

1. Touch **E-mail** in the **Communications** tab.
2. Touch  and select **E-mail settings**, then you can change the following settings:

E-mail account - Select an email account

Allow reply e-mail - Choose to allow the sending of read confirmation messages.

Request reply e-mail - Choose whether to request read confirmation messages.

Include original message - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Messaging

Auto retrieval while... - Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification - Choose whether to be alerted to new emails.

Signature - Create an email signature.

Priority - Choose the priority level of your email messages.

Maximum receive size - Select the maximum receive size: **100KB, 200KB, 300KB, 500KB, 1MB, 2MB, 2.2MB.**

Camera

Getting to know the viewfinder

Zoom - zoom in or zoom out. You can also zoom in or out by pressing the Side keys of the phone.

Exposure - A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.



Back

Camera mode

Video mode - Slide down this icon to switch to video mode.



Gallery - This enables you to access your saved photos from within the camera mode. Simply touch and your gallery will appear on the screen.

Settings - Touch this icon to open the settings menu. See **Using the advanced settings**.

Macro - Switch on take a close up shot

Camera

Taking a quick photo

1. Press the  key on the right side of the phone.
2. When the camera is focused on your subject, touch the  on the right-centre of the screen to take a photo. You can also press the Camera key on the side of the phone firmly.


TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.


After taking a photo


Your captured photo will appear on the screen. The image name is shown on the bottom of the screen with four icons on the right side.

 Touch to send the photo as a **Message, E-mail, Bluetooth.**


NOTE: Additional cost may occur when MMS are downloaded when roaming.


 Touch to use the image as **Wallpaper, Lock screen, Contact, Start-up, Shut down, Outgoing call or Incoming call** screens.

 Touch to edit the image using various tools.

 Touch to return to the viewfinder.


 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to view a gallery of your saved photos.



Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Size - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the seven numerical options: **5M(2560x1920)**, **3M(2048x1536)**, **2M(1600x1200)**, **1M(1280x960)**, **Homescreen**, **VGA(640x480)**, **QVGA(320x240)**.

Scene mode - Set the camera to adjust to the environment. Choose from **Auto**, **Night**, **Landscape**, **Portrait** or **Sport**.

ISO - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can't use the flash. Select the ISO value from **Auto**, **ISO 800**, **ISO 400**, **ISO 200** or **ISO 100**.

White balance - Choose from **Auto**, **Incandescent**, **Fluorescent**, **Sunny** or **Cloudy**.

Colour Effect - Choose a colour tone to apply to the photo you're taking.

There are six colour tone options: **Off**, **Sepia**, **Monochrome**, **Negative**, **Solarize** and **Blue**.

Focus - Select the way the camera will focus. Choose from **Auto focus**, **Manual focus** or **Face tracking**.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **Off**, **3 seconds**, **5 seconds** or **10 seconds**.

Shot mode - Choose the shot mode from 9 options.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a photo will be, but the file size will increase.

Show captured image - Choose to view the picture with options after taking a photo.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from **Off**, **Simple cross** or **Trisection**.

Geo-Tagging - Choose whether to switch on the EXIF information for the photo to write GPS information.

Camera


Reset settings - Restore all camera settings.

Memory - Choose whether to save your photos to the Handset memory or to the External memory.

Swap cam - Choose whether to use the inner camera or the outer camera.

Video camera

Getting to know the viewfinder

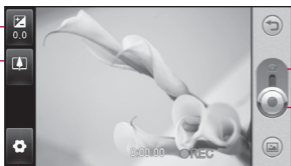

Back

Camera mode - Touch this icon to switch to camera mode.

Start recording

Gallery

Settings - Touch this icon to open the settings menu. See **Using the advanced settings**.

Zoom - zoom in or zoom out. You can also zoom in or out by pressing the Side keys of the phone.





Exposure - A low contrast video will appear foggy, whereas a high contrast video will appear much sharper.

Video camera

Making a quick video

1. Press the camera key on the right side of the phone.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

2. Holding the phone horizontally, point the lens toward the subject of the video.
3. Press the camera key on the phone once to start recording. Or touch the red dot  on the screen.
4. **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
5. To pause the video, touch  and resume by selecting .
6. Touch  on screen or press the camera key on the phone again to stop recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video will be shown on the bottom of the screen



Touch to send the video as a **Message or E-mail** or by **Bluetooth**.



Touch to use the video as a voice or video ringtone




Touch to play the video.



Touch to return to the viewfinder.



Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.


Touch  to shoot another video right away.



Touch to view a gallery of saved videos and images.



Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Refer to the advanced settings for the Camera.

Video size - Select Video size: **VGA(640x480)**, **QVGA(320x240)**, **QCIF(176X144)**.


Recording mode - Set a duration limit for your video: **Normal**, **MMS**.

Audio - Choose whether to mute (record a video without sound) or to unmute to include the sound.

Show recorded video - Choose to view the video with options after taking a video.





Your photos and videos

Viewing your photos and videos


1. Scroll and touch **Gallery** in the **Main menu** or touch  on your camera preview screen.
2. Your gallery will appear on the screen.
3. Touch the video or photo to open it fully.

TIP! Flick left or right to view other photos or videos.

Capturing an image from a video



1. Select the video you would like to capture an image from.
2. Touch the centre of the screen to bring up the play options, then touch  to pause the video on the frame you'd like to convert to an image and touch the upper left of the screen to open the  menu.
3. Touch  on the upper left of the screen and select **Capture**.
4. The image will appear on the screen, with its image name.
5. Touch  on the upper right of the screen to return to the video.

6. The image will be saved in your **Media album** folder and appear in the gallery.


 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos cannot be viewed as a slideshow.

1. Touch  in the **Gallery**, then scroll and select **Slide show**.
2. The slideshow will begin.
3. You can open menus such as **Duration**, **Transition**, etc. by tapping  during the slide show.

Setting a photo as wallpaper

1. Touch **Gallery** in the **Main menu**.
2. Touch the photo you would like to set as wallpaper.
3. Touch  to open the menu.
4. Touch **Set as**, then **Home screen image**.

Editing your photos

1. From the Gallery menu, choose the photo you'd like to edit, touch  on the upper left of the screen to open the menu and select **Edit**.
2. Touch the icons to alter your photo:



Select area.



Select a tool:



Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.



Adding texts to a picture. You can choose the text box and the colours of the box and text.



Decorate your photo with stamps.



Erase the drawings you made on the picture. You can choose the size of eraser to use.



Touch to open further effect options including **Rotate**.



Touch to apply the effect options to a photo.

Adjustment This helps to adjust a picture taken using Brightness or Contrast.



Touch to return to the gallery.



Save Save the changes you made to your phone. You can save the edited photo with another name.



Undo Erase the editing you did on the photo.



Send Select to send the edited pictures as **Message, E-mail** or **Bluetooth**.





Multimedia

You can store any multimedia files on your phone's memory to have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card frees space in your phone's memory. You can find these files in the **My stuff** menu in the **Main** menu.

Pictures


Images contains a list of pictures including default images preloaded onto your phone, images downloaded by you and images taken on your phone's camera.

Sending a photo


1. Touch  from the home screen, touch **My stuff** and select **Images**. Select the picture you want and touch .
2. Touch **Send Via** and choose **Message, E-mail, Bluetooth**.

Using an image

You can choose images to use as wallpaper, for the lock screen and to identify callers.

1. Touch **My stuff** in the **Main** menu and select **Images**. Select the picture you want and touch .
2. Touch **Set as** and choose from: **Homescreen image, Lockscreen image, Contact image, Start up image, Shutdown image, Outgoing call image, Incoming call image**


Printing an image

1. Touch **My stuff** and select **Image**. Select the picture you want and touch .
2. Touch **Print** then choose between **PictBridge** and **Bluetooth**.

TIP! You can print via Bluetooth or by connecting to a PictBridge compatible printer.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to free some space in one of the memory banks or to preserve your images.

1. Touch **My stuff** in the **Entertainment** tab, select **Images** and touch .
2. Select **Move** or **Copy**.
3. You can mark/unmark an image by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

Sounds

Sounds contains a list of sounds including downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as ringtones.

Using a sound

1. Touch **My stuff** in the **Main menu** and select **Sounds**.
2. Select a sound you want. It will begin to play.


Videos

Videos shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

1. Touch **My stuff** in the **Main menu** and select **Videos**.
2. Select a video to play.

Sending a video clip

1. Select a video.
2. Touch  and then touch **Send via**. Choose from **Message**, **E-mail** or **Bluetooth**.

Flash contents

The **Flash contents** folder contains all downloaded SWF and SVG files.

1. Touch **My stuff** in the **Main menu** and select **Flash contents**.
2. Select the file you want to view.

Documents

From the **Documents** menu, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

Other content

Other content contains a list of files that are not pictures, sounds, videos, documents, games or applications.

Multimedia

Games

You can install new games on your phone to enjoy when you have spare time.

You can also access this using the **Games & Apps** menu in the **Main menu**.

Playing a game

1. Touch **Games & Apps** in the **Entertainment** tab.
2. Choose a game to launch.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your sync cable.

To transfer using Bluetooth:

1. Make sure your phone and computer have Bluetooth switched on and are visible to one another.
2. Use your computer to send the file via Bluetooth.
3. When the file is sent you will have to accept it on your phone by touching **Yes**.

4. The file should appear in your **Image** folder if it is an image file and in the **Sound** folder if it is a music file.

Music

Your LG GD880 has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music**. From here, you can access a number of folders located at the top of the screen:

NOTE: The copyright of music files is protected by international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

All tracks - Contains all the songs you have on your phone except the preloaded default music.

Favourite - Contains the songs you saved as Favourites.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlist - Contains all the playlists you have created.





Transferring music to your phone

The easiest way to transfer music to your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

1. Make sure both devices have Bluetooth switched on and can see each other.
2. Select the music file on the other device and choose to send it via Bluetooth.
3. When the file is ready to be sent, you should accept it on your phone by touching **Yes**.
4. The file should appear in **Music > All tracks**.

Playing a song

1. Touch **Music**.
2. Select the song you want to play. The confirmation message appears when in **Silent** mode.
3. Touch  to pause the song.
4. Touch  to skip to the next song.
5. Touch  to go back to the previous song.
6. Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

FM Radio

Your LG GD880 has an FM radio feature so you can tune in to your favourite stations to listen on the move.

1. Scroll and touch **FM radio** in the **Main menu**.
2. Tune in to a station or adjust the volume if desired.

NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket next to the charger connector.

Organiser

SNS

A social network service focuses on building and reflecting a social network or social relationship among people who share interests and/or activities.

Facebook

Facebook is a social networking website.


1. Touch  from the home screen and then touch **Facebook**.

Twitter

Twitter is a free social networking and micro-blogging service.

1. Touch  from the home screen and then touch **Twitter**.



Settings

1. Touch  from the home screen and then touch **SNS settings**.
2. Turn on Social networking. If you have an account related to social networking, the account is displayed. Touch the account, then touch **Import friends** to add your friend contact to your phone.



3. If you have no account, touch **New account**, then create your account.


NOTE: You will incur an extra cost by connecting to this service. Check the data charges with your network provider.

Adding an event to your calendar




1. Touch  from the home screen and then touch **Organiser**.
2. Select the date you would like to add an event to.
3. Touch  and touch **New schedule** or simply touch **New schedule** at the bottom of the screen.

Adding an item to your to do list



1. Touch  from the home screen and then touch **Tasks** in the **Main menu**.
2. Touch  and touch **New task** or simply touch **New task** at the top of the screen.
3. Set the date for the task, add notes and select a priority level: **High**, **Normal** or **Low**.

4. Save your task by touching .

Adding a memo

1. Touch  from the home screen and then touch **Memo** in the **Main menu**.
2. Touch  and then **New memo**. Or simply touch **New memo** at the top of the screen.
3. Type your memo and then touch  **Save**.
4. Your memo will then appear on the screen in the memo application.







Setting your alarm

1. Touch  from the home screen and then touch **Alarms**. **Widget alarm** should appear in the list as the default and you cannot delete it.
2. Touch  and then **New alarm**. Or simply touch **New alarm** at the top of the screen.


NOTE: You can set up to 11 alarms including **Widget alarm**.

TIP! Slide the alarm switch left to set it.


Recording a sound or voice

1. Touch  from the home screen and then touch **Voice recorder** in the **Main menu**.
2. Choose where to save the recording: **Internal** or **External**.
3. Choose a recording mode: **Normal** or **MMS**.
4. Touch  to begin recording.
5. Touch  to pause recording.
6. Touch  to end recording.
7. Touch  to listen to your recording.
8. Touch  to adjust the volume.


Using your calculator

1. Touch  from the home screen and then touch **Other tools** in the **Main menu**.
2. Select **Calculator**.
3. Touch the numeric keys using the keypad to input numbers.
4. For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.



Organiser

5. For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg**, **rad** etc.


Converting a unit

1. Touch  from the home screen and then touch **Other tools** in the **Main menu**.
2. Select **Unit converter**.
3. At the top of the screen, choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
4. You can then select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
5. The corresponding value will appear on the screen.

Adding a city to your World clock

1. Touch  from the home screen and then touch **Other tools** in the **Main menu**.
2. Select **World clock**.
3. Touch  and then **New city**. Or simply touch **New city** at the top of the screen.

Using the stopwatch

1. Touch  from the home screen and then touch **Other tools** in the **Main menu**.
2. Select **Stopwatch**.
3. Touch **Start** at the bottom of the screen to begin the timer.
4. Touch **Lap** if you want to record a lap time.
5. Touch **Stop** to end the timer.

LG Air Sync

Using this menu, you can synchronise your PIM data or other contents of your phone with your LG Air Sync account.


1. Touch **LG Air Sync** in the **Main menu**.
2. If you have no LG Air Sync account, please visit www.lgairsync.com to create your account. If you have an account, key in your ID and Password.
3. If you want to synchronise your PIM data, touch **PIM Sync**. If you want to synchronise your contents, touch **Link Air**.

4. In case of PIM Sync, select the items you want to synchronise, then touch Sync now.
5. In case of Link Air, select the items you want to synchronise, then touch Sync now.


PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing LG PC Suite on your computer

1. From the home screen, touch  and touch **Connectivity**.
2. Select **USB connection mode** and touch **PC Suite**.
3. Connect the handset and PC via USB cable and wait a few moments. An installation guide message will be displayed.
4. Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
5. Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

1. From the home screen, touch  and touch **Connectivity**.
2. Select **USB connection mode**.
3. Touch **PC Suite**.

4. Connect the handset and PC via USB cable and wait a few moments. PC Suite runs automatically.

Backing up and restoring the information on your phone

1. Connect your phone to your PC as described above.
2. Click on the **Backup** icon and select **Backup** or **Restore**.
3. Mark the content you would like to backup or restore. Select the location you would like to backup information to or restore information from. Click the **Start** icon.
4. Your information will be backed up or restored.

Viewing phone files on your PC

1. Connect your phone to your PC as described above.
2. Click on the Manage Photos, Videos or music icon.
3. Images, audio files and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files you no longer need.

Synchronising your contacts

1. Connect the phone to your PC.
2. Click on the **Contacts** icon.
3. Click Sync Contacts button your PC will now import and display all the contacts saved on your handset.
4. Click on **Menu** and select **Export**. You can now select the target where you want to save your contacts.


Right-click your contacts and then **Select All**.

Synchronising your messages

1. Connect the phone to your PC.
2. Click on the **Messages** icon.
3. All your phone messages will be displayed in folders on the screen.

Using your phone as a Music Sync device

Your Phone can be used as a Music Sync device for Sync Music Files only. Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.

1. Disconnect your phone from your PC.
2. From the home screen, touch  and touch **Connectivity**.
3. Select **USB connection mode**.
4. Touch **Music sync**.
5. Connect the phone to your PC. Your phone will read: **Connected**.

DivX Converter

DivX will convert media files on your PC to a format that lets you upload them and view them on your phone.

Once installed, select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select **Preferences**, you can change the

PC Sync

location where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is complete a Conversion complete pop up will be displayed.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Pat. 7,295,673

OSP (On Screen Phone)

Using the OSP feature, you can see your phone screen from your PC. You can control your phone from the PC Monitor just as you would on the phone.

Installing OSP on your computer

When you install LG PC Suite on your computer, OSP is installed automatically

Starting OSP

Click  on your computer or start> program> LG OSP

Connecting your phone and PC

By USB cable

1. Click 'Connection Wizard'.
2. Select 'Cable connection', then click Next.
3. Connect the handset and PC via USB cable.
4. Select Next.
5. Enter your phone password into the PC (default value is "0000")

By Bluetooth

1. Ensure that Bluetooth is switched On and Visible for both your PC and your phone.

2. Select Bluetooth connection, then click Next
3. Select your phone among the searched phones, then click Next
4. Enter the PIN code into the PC, then click Next.
5. Click 'Yes' in the confirmation message.
6. Enter the PIN code into your phone, then click OK.
7. Enter your phone password into the PC, then click OK.

Disconnecting your phone from your PC

If you want to disconnect your phone from your PC, click 



OSP (On Screen Phone)

Controlling your phone

You can control your phone using OSP. If you mouse-click a menu in the OSP main screen, the menu runs in your phone as if you had selected the menu on your phone.

For example, if you want to send a message using OSP, click Messaging in the Communication tab of the OSP main menu, then click Write message.

You can enter characters by mouse-clicking or using your PC keyboard.

If you want to use the mouse to key in characters, click the characters you want to enter.

If you want to use the keyboard, type in the characters on your keyboard.

Click Send SMS when you have finished writing the message.

Transferring a file between your phone and PC

Transfer a file from PC to Phone

1. Select the file you want to transfer from your PC, then drag and drop the file to the OSP Screen.

Transfer a file from Phone to PC

1. Select the file you want to transfer from **Media album** in the **Entertainment** tab of the OSP screen, then click the right mouse button and select **Save to PC**.

Editing a file on your phone

1. Select the file you want to edit from the Media album in the **Entertainment** tab of the OSP screen, then click the right mouse button and select Edit
2. You can edit the file using associated applications.
3. When you finish editing your file, it will be transmitted back to your phone.

Using OSP Notification

The OSP feature gives you Popup messages with information about your phone events: **Alarm**, **Message**, **Incoming Call**, etc.

1. Select  in the OSP Screen
2. Select "**Alerts me with Popup**"

NOTE: When you use the OSP feature, your phone's reaction may be slow.

The web


Accessing the web

1. Touch **Browser** in the **Main menu**.
2. To go straight to the browser homepage, select **Browser**. Or select **Enter URL** and type in the URL, followed by **OK** in the upper left of the screen.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check with your network provider for data charges.

Adding and accessing your bookmarks

For easy and fast access to your favourite web sites, you can add bookmarks and save web pages.


1. Touch **Browser** in the **Main menu**.
2. Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
3. To add a new bookmark, touch **New bookmark**. Enter a name for your bookmark, followed by the URL in the corresponding field box.
4. Touch  on the upper left of the screen. Your Bookmark will now appear in the list of bookmarks.
5. To access the bookmark, simply touch the Connect icon next to the bookmark or touch the bookmark title and then touch **Go**. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

The web

Saving a page

1. Access your required web page as described above.
2. Touch  and select **Save this page**.
3. Enter a name for the web page so you can easily recognise it.
4. Touch **Save**.

Accessing a saved page

Touch **Browser** and select **Saved pages**. You can view the saved pages here.

Viewing your Mobile history

Touch **Browser** and select **Mobile history**.

Using your phone as a modem

Your GD880 can double as a modem for your PC, giving you email and internet access even when you can't connect by wire. You can use either the USB cable or Bluetooth.

Using the USB cable:

1. Ensure that you have the LG PC Suite installed on your PC.
2. Connect your GD880 and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
3. Click **Internet Kit** on your PC. Then click **New button** and select **Modem**.
4. Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
5. Write a profile that can connect to the Internet and save the values.
6. The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GD880.

Using Bluetooth:


1. Ensure that Bluetooth is switched **On** and **Visible** for both your PC and GD880.
2. Pair your PC and GD880 so that a passcode is required for connection.
3. Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
4. Click **Internet Kit** on your PC. Then click **New button**.

5. Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
6. Write a profile that can connect to the Internet and save the values.
7. The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GD880.


Settings

Personalising your profiles

You can Personalise each profile setting using the settings menu.

1. Touch  from the home screen and then touch **Profiles**.
2. Choose the profile you want to edit.
3. You can then change all the sounds and alert options available in the list, including your **Ringtone, Volume, Message tone** settings and more.


Changing your Display settings

Touch  from the home screen and then touch **Display settings**. Choose the screen setting you want to edit.

NOTE: The longer the backlight is on, the more battery power is used. This may result in your needing to charge your phone more often.

Changing your Device settings

Enjoy the freedom of adapting the operation of your GD880 to your own style.

Touch  from the home screen, touch **Device settings** and then choose from the list below.

Settings

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Slide the switch left to set the power saving settings on/off or Night only.

Languages - Change the language of your GD880's display.

Auto lock - Lock the keypad automatically in the home screen. You can choose the time for the auto lock.

Security - Adjust your security settings including PIN codes and handset lock.

Memory info - See **Using memory manager** for more information.

Primary storage settings - Choose the location you prefer items to be saved between Handset memory and External memory.

Reset settings - Restores all settings to their factory defaults.

Device information - Shows the device information. You can upgrade your software via the Web using this menu.


Device guide - show how to use each functions (Homescreen, Widget download, Indicator, Menu, Contacts, SNS, Browser, Lock screen gesture)

Changing your touch settings

You can activate sound or vibration for your touch tone.

Changing your Connectivity settings

Your Connectivity settings have already been set up by your network operator so you can enjoy your new phone immediately. To change any settings, use this menu:

Touch  from the home screen and then touch **Connectivity**.

Network selection

Select network - If you select **Automatic**, the GD880 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

Network mode - You can set a type of network to search for when networks are searched in the **Select network** menu.

Preferred lists - You can add a preferred network to connect to. If the network is searched automatically, simply choose one from the network list. If not, you can add a new network manually.

Internet profiles - This menu shows the **Internet profiles**. You cannot delete or edit the default configurations for your country. However, you can add a new profile using this menu.

Settings

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Back-up -You can send your information to an operator server or receive information s from an operator server.

NOTE: This service is not available in all countries. Please contact your service provider for further information.

Home network -You can choose and share contents by **Home network**. Be careful about disclosing personal information.

GPS type - Select GPS type: **Assisted GPS, Stand alone**.

DivX VOD registration - This menu is used to generate a DivX VOD registration code. Please visit <http://vod.divx.com> to register and for technical support.

USB connection mode - Choose a data service from the options and synchronise your GD880 using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use **Music sync** with Windows Media

Player, select **Music sync** in this menu. **Music sync** is only available for music content.

Packet data conn. - Choose when your device should be connected to the network for packet data.

Browser settings - Set the values related to the browser (**Profiles, Appearance settings, Cache/Cookies, Security, Reset settings**).

Streaming settings - Your network operator has already saved this information. You can add a new profile using this menu.

Java settings - Allows you to set profiles for connections made by Java programs and to view certificates.

Data roaming - offers you to manage data reception of Multimedia/Widget/ Email/PIM/Link Air in roaming area.

Using Data roaming function, you can block data application service to not pay data application fee in roaming area.

The default settings is off and the use of data application will be blocked out. When you activate Data roaming function, you can download or synchronize data.

Using memory manager

Your GD880 has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is being used and how much space is available.

Touch **Device settings**, then **Memory info**.

Internal common memory - View the memory available on internal common memory.

Internal multimedia memory - View the memory available on internal multimedia memory.

Internal reserved memory - View the memory available on your handset for **SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items**.

USIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Sending and receiving your files using Bluetooth

To send a file:

1. Open the file you want to send, typically this will be a photo, video or music file.
2. Choose **Send**.
Choose **Bluetooth**.
3. If you have already paired the **Bluetooth** device, your GD880 will not automatically search for other **Bluetooth** devices. If not, your GD880 will search for other **Bluetooth** enabled devices within range.
4. Choose the device you want to send the file to.
5. Your file will be sent.

TIP! Check the progress bar to make sure your file is sending.

To receive a file:


1. To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
2. A message will prompt you to accept the file from the sender.

Settings

Touch **Yes** to receive the file.

3. You will see where the file has been saved. For image files, you can choose to **View** the file or **Go to My stuff**. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings

Touch **Bluetooth** and select .

Make your changes to:

My device information - View your device information regarding Bluetooth.

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

My device name - View your device name.


My Bluetooth address - View your Bluetooth address.

Supported services - Select how to use Bluetooth in association with different services.

Remote SIM Mode on/off - Turn on or off.

Pairing with another Bluetooth device

By pairing your GD880 and another device, you can set up a passcode protected connection.

1. Check that your Bluetooth is **ON** and **Visible**. You can change your visibility by touching .
2. Touch **New device**.
3. Your GD880 will search for devices. When the search is completed, the **Refresh** icon will appear on the upper left side of the screen.
4. Choose the device you want to pair with and click 'Yes' in the confirmation message. You may need to enter the passcode if the passkey does not match with the device you are trying to pair.
5. Touch **Always ask** or **Always allow**, then the device is paired.

Using a Bluetooth headset

1. Check that your Bluetooth is **ON** and **Visible**.
2. Follow the instructions that came with your headset to put it in pairing mode and pair your devices.

3. Touch **Always ask** or **Always allow**. Your GD880 will automatically switch to Headset profile.

Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

NOTE: The GD880 supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window.

If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software Upgrade

LG Mobile Phone Software Upgrade Program


For more information on installing and using this program, please visit <http://www.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. The mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, so please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. The manufacturer takes no responsibility for loss of data during the upgrade process, so you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are supplied with the GD880.

Charger



**Data cable
and CD**



Battery



**Stereo
headset**



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

General

Product name: GD880

System:

GSM 850/900/1800/1900, HSDPA

7.2 Mbps/HSUPA 2.0Mbps, UMTS

900/2100, 850/2100, 850/1900

Ambient Temperatures

Max: +55°C (discharging),

+45°C (charging)

Min: -10°C

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.;

Bookala, Thonburi, Bangkok 10600

Working day : Mon - Sun

07:00 - 19:00

Call center : 0-2878-5757

Declaration of Conformity



Supplier's Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GD880

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Issued Date

Seung Hyoun, Ji / Director

09.Feb. 2010

Signature of representative

 **LG Electronics (Thailand)**

ใบอนุญาตเลขที่ ปน.(ค)/2117 ปณจ. พระโขนง
ถ้าฝากส่งในประเทศไม่ต้องพนักตราไปรษณียากร

 บริการธุรกิจตอบรับ

บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

72/127 ถนนสมเด็จพระเจ้าตากสิน
แขวงนาคโคโล เขตธนบุรี
กรุงเทพฯ 10600



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

กรุณาส่งคืนบริษัทภายใน 7 วัน
นับจากวันที่ซื้อ
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
[][][][][][][][][][][][][][][][] (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)

ที่อยู่ร้าน :
(Dealer's Address)

ประทับตราร้านค้า



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)

ศูนย์บริการข้อมูล

Customer Information Center 0-2878-5757 or

1-800-

LG L G L G
5 4 5 4 5 4

โทรฟรี

www.lge.co.th

บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด
75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26 คลองตัน
คลองเตย กรุงเทพฯ 10110
ศูนย์บริการอมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

LG Electronic (Thailand) CO., Ltd
75/81 Richmond Bldg, 22nd FL, Sukumvit 26,
Klongton, Klongtoey Bangkok 10110
Customer Information Center
Tel. 0-2878-5757 Fax. 0-2466-0250

เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น

(This warranty is valid only in Thailand)

- | | |
|--|---|
| 1) บัตรรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น | 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely. |
| 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบ หรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่องจักรวิวิธี บริษัทฯ ยินดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย | 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts. |

เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- | | |
|---|--|
| 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับการแต่งตั้ง | 1) If repair are not undertaken by LG Service Center or Authorize Service Center. |
| 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย | 2) Damage to accessory due to misuse. |
| 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้ ฟ้าผ่า, ใช้กระแสไฟฟ้าผิดประเภทและอุบัติเหตุอื่น ๆ ที่มนุษย์ไม่สามารถควบคุมได้ | 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control. |

ศูนย์บริการลูกค้า (สำนักงานใหญ่) : เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงบुकคไล เขตธนบุรี กรุงเทพฯ 10600

โทร : 0-2878-5757

แฟกซ์ : 0-2466-0250