



GT505 คู่มือการใช้

LG ELECTRONICS INC.

GT505 คู่มือการใช้

ไทย  
ENGLISH



CE 0168

P/N : MMBB0343045 (1.1) H

## โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบนำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้ใช้บริการทางด้านการประกันสินค้าอย่างเป็นทางการ เพื่อให้ แน่ใจ ว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งในขอความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ. ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

## Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program. To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product'. The customer shall bear the cost of one SMS for the product authentication program. In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Bluetooth QD ID B015339



ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ

## คู่มือการใช้ GT505





ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น  
GT505 ของ LG ที่ทันสมัยมีขนาดกะทัดรัด  
ออกแบบให้ทำงานด้วยการใช้เทคโนโลยีการ  
สื่อสารเคลื่อนที่แบบดิจิทัลใหม่ล่าสุด

# สารบัญ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ.....8

ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ .....10

การใส่ USIM และแบตเตอรี่...11

การ์ดหน่วยความจำ .....14

แผนผังเมนู.....16

หน้าจอหลักของคุณ .....17

เคล็ดลับสำหรับหน้าจอสัมผัส.....17

ปุ่มด้าน .....18

แถบสถานะ.....19

การเปลี่ยนสถานะจากแถบสถานะ .20

การใช้ฟังก์ชันการทำงาน  
หลายอย่าง .....20

การโทร .....21

การโทรออกหรือการสนทนาทาง

วิดีโอ.....21

การโทรออกโดยใช้รายชื่อ.....21

การรับสายและการปฏิเสธสายเรียก

เข้า .....21

ตัวเลือกต่างๆ ระหว่างใช้สาย .....22

การปรับระดับเสียงสนทนา.....23

โทรด่วน.....23

การใช้สายที่สอง.....23

การปิด DTMF .....24

การดูบันทึกการโทร .....24

การใช้การโอนสาย .....25

การใช้การป้องกันการโทร .....25

การเปลี่ยนการตั้งค่าการโทรทั่วไป

.....26

การเปลี่ยนการตั้งค่าการสนทนาทาง

วิดีโอ.....27

รายชื่อ.....28

การค้นหารายชื่อ .....28

การเพิ่มรายชื่อใหม่.....28

การสร้างกลุ่ม .....29

การเปลี่ยนการตั้งค่าของรายชื่อ ....29

ข้อความ .....31

ข้อความ.....31

การส่งข้อความ .....31

การป้อนข้อความ.....32

ระบบช่วยสะกดคำ T9 .....32

การป้อนตัวอักษรด้วยตนเอง .....32

การตั้งค่าอีเมล.....33

การส่งอีเมลโดยใช้แอคเคาท์ใหม่

.....35

การเปลี่ยนการตั้งค่าอีเมล .....35

โฟลเดอร์ข้อความ .....	36	การใช้การตั้งค่าขั้นสูง .....	51
การใช้ข้อความอัตโนมัติ.....	37	การเปลี่ยนขนาดของภาพวิดีโอ .....	53
การใช้ไอโมติคอน.....	37	การเลือกโทนสี.....	53
การเปลี่ยนการตั้งค่าข้อความ		การใช้กล้องถ่ายวิดีโอตัวใน .....	54
ตัวอักษร.....	37	การดูวิดีโอที่บันทึกไว้.....	54
การเปลี่ยนการตั้งค่าข้อความมัลติ		<b>รูปภาพและวิดีโอ .....</b>	<b>55</b>
มีเดีย .....	38	การดูรูปภาพและวิดีโอ.....	55
การเปลี่ยนการตั้งค่าอื่นๆ.....	39	การใช้การซูมขณะดูรูปภาพ .....	55
<b>กล้อง .....</b>	<b>40</b>	การปรับระดับเสียงขณะดูวิดีโอ .....	55
การถ่ายภาพด่วน.....	40	การตั้งค่ารูปภาพเป็นพื้นหลัง.....	55
เมื่อคุณถ่ายภาพแล้ว .....	41	การแก้ไขรูปภาพ.....	56
ทำความเข้าใจกับช่องมองภาพ .....	42	การเพิ่มข้อความลงในรูปภาพ.....	57
การใช้แฟลช .....	43	การเพิ่มเอฟเฟกต์ลงในรูปภาพ .....	57
การปรับการรับแสง .....	43	การครีอูปรูปภาพ .....	57
การถ่ายภาพต่อเนื่อง.....	44	การเน้นสีในรูปภาพ.....	58
การใช้การตั้งค่าขั้นสูง .....	44	การสลับสีในรูปภาพ.....	58
การเปลี่ยนขนาดภาพ .....	46	<b>มัลติมีเดีย .....</b>	<b>59</b>
การเลือกเอฟเฟกต์สี .....	46	รูปภาพ .....	59
การใช้กล้องภายใน.....	47	เมนูตัวเลือกภาพส่วนตัว.....	59
การดูรูปภาพที่บันทึกไว้ .....	47	การส่งรูปภาพ.....	59
<b>กล้องวิดีโอ.....</b>	<b>48</b>	การใช้รูปภาพ.....	60
การถ่ายวิดีโอด้วย.....	48	การแก้ไขภาพของคุณ .....	60
หลังการถ่ายวิดีโอ .....	49	การย้ายหรือคัดลอกรูปภาพ .....	61
ทำความเข้าใจกับช่องมองภาพ .....	50	การสร้างภาพสไลด์.....	61
การปรับการรับแสง .....	51	เสียง .....	61

# สารบัญ

การใช้เสียง.....	62	การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน	71
วิดีโอ.....	62	.....	71
การใช้ตัวเลือกขณะหยุดวิดีโอ		การเพิ่มรายการลงในสิ่งที่ต้องทำ..	71
ชั่วคราว.....	62	การแบ่งปันงานที่ต้องทำ .....	71
การส่งวิดีโอคลิป.....	63	การใช้ตัวค้นหาวันที่ .....	72
เกมส์และแอปพลิเคชัน.....	63	การตั้งเวลาการปลุก.....	72
การเล่นเกมส์.....	63	การเพิ่มบันทึก .....	73
การใช้เมนูตัวเลือกของเกมส์.....	63	บันทึกเสียง.....	73
แฟลชคอนเทนท์.....	63	การบันทึกเสียงหรือเสียงพูด .....	74
การดูไฟล์ SWF/SVG.....	64	การส่งรายการบันทึกเสียง .....	74
เอกสาร.....	64	การใช้เครื่องคิดเลข .....	74
การดูไฟล์.....	64	การแปลงหน่วย.....	75
การโอนไฟล์ไปที่โทรศัพท์.....	64	การใช้นาฬิกาจับเวลา.....	75
อื่นๆ .....	65	การใส่ชื่อเมืองลงในเวลาทั่วโลก... ..	76
การสร้างภาพยนตร์.....	65	เพื่อนจ้อกจ้ก .....	76
เพลง.....	66		
การโอนเพลงไปยังโทรศัพท์.....	66	<b>PC ซิงค์.....</b>	<b>77</b>
การเล่นเพลง.....	67	การติดตั้ง LG PC Suite	
การสร้างรายการเพลง .....	67	ลงในคอมพิวเตอร์ .....	77
การลบรายการเพลง.....	68	การเชื่อมต่อโทรศัพท์เข้ากับ	
การใช้วิทยุ.....	68	คอมพิวเตอร์.....	78
การค้นหาสถานี.....	68	การสำรองข้อมูลและการเรียกคืน	
การรีเซ็ตสถานี.....	69	ข้อมูลของโทรศัพท์ .....	78
การฟังวิทยุ .....	69	การดูไฟล์ในโทรศัพท์บนคอม	
		พิวเตอร์ .....	78
		การซิงโครไนซ์รายชื่อ .....	79
		การซิงโครไนซ์ข้อความ.....	79

## สมุดบันทึก ..... 70

การเพิ่มเหตุการณ์ลงในปฏิทิน..... 70

การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล.....	80	การจับคู่กับอุปกรณ์บลูทูธอื่น .....	93
		การใช้ชุดหูฟังบลูทูธ .....	93
<b>เว็บไซต์.....</b>	<b>81</b>	<b>Wi-Fi .....</b>	<b>94</b>
การใช้โทรศัพท์เป็นโมเด็ม .....	81	<b>ซอฟต์แวร์ Phone Software update .....</b>	<b>96</b>
อินเทอร์เน็ต .....	82	<b>อุปกรณ์เสริม .....</b>	<b>97</b>
การเข้าใช้เว็บไซต์ .....	82	<b>บริการเครือข่าย .....</b>	<b>98</b>
การเพิ่มและการใช้บุ๊กมาร์ค .....	83	<b>ข้อมูลทางเทคนิค .....</b>	<b>98</b>
การใช้ RSS reader .....	83	<b>คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ .....</b>	<b>100</b>
การบันทึกเพลง .....	84	<b>การแก้ปัญหา .....</b>	<b>106</b>
การเข้าใช้เพลงที่บันทึกไว้ .....	84		
การดูประวัติข้อมูลเบราว์เซอร์.....	84		
การเปลี่ยนการตั้งค่าเว็บเบราว์เซอร์ .....	85		
<b>ตั้งค่า .....</b>	<b>86</b>		
การเปลี่ยนการตั้งค่าหน้าจอ .....	86		
การปรับแต่งรูปแบบเสียงของคุณ .....	87		
การเปลี่ยนการตั้งค่าโทรศัพท์ .....	87		
การเปลี่ยนการตั้งค่าสัมผัส .....	88		
การเปลี่ยนการตั้งค่าการเชื่อมต่อ .....	88		
การใช้ตัวจัดการหน่วยความจำ.....	90		
การใช้โหมด Flight.....	91		
การส่งและการรับไฟล์โดยใช้บลูทูธ .....	91		

# เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

เลนส์กล้องถ่ายรูปในตัว

ปุ่มวางสาย/เปิดปิดเครื่อง

วางสายหรือปฏิเสธสายเรียกเข้า  
เปิด/ปิดโทรศัพท์  
กดหนึ่งครั้งเพื่อกลับสู่หน้า  
จอหลัก

ปุ่มการทำงานหลายงาน

ปุ่มโทรออก/รับสาย

เพื่อโทรออกและรับสายเรียกเข้า



**⚠ คำเตือน:** การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับเมื่อใส่ไว้ในกระเป๋ากางเกงอาจทำให้จอ LCD ของโทรศัพท์ และการทำงานของหน้าจอสัมผัสเสียหายได้



ช่องเสียบการ์ด  
หน่วยความจำ  
**Micro SD**



ช่องเสียบอุปกรณ์ชาร์จ,  
สายเคเบิล, แสนด์ฟรี

**เคล็ดลับ!** ในการเชื่อมต่อสาย  
USB ให้รอจนโทรศัพท์เปิด  
เครื่องและลงทะเบีย่นกับ  
เครือข่ายแล้ว

**ปุ่มด้านข้าง**

- **เมื่อนำจอไม่ใช้งาน:**  
ปรับระดับเสียงปุ่ม
- **ระหว่างการใช้สาย:**  
ปรับระดับเสียงลำโพง
- **ขณะเล่นแทร์ริค BGM:**  
ควบคุมระดับเสียงต่อเนื่อง

**ปุ่มล็อค/ปลดล็อค**

**ปุ่มถ่ายภาพ**

# ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ



# การใส่ USIM และแบตเตอรี่

## 1. ถอดฝาปิดแบตเตอรี่

กดปุ่มคลายล๊อคแบตเตอรี่ที่  
ด้านบนของโทรศัพท์ค้างไว้  
แล้วดึงฝาปิดแบตเตอรี่ขึ้น



**คำเตือน:** อย่าใช้เล็บในการ  
ถอดแบตเตอรี่ออก

**คำเตือน:** ห้ามถอดแบตเตอรี่  
ขณะที่เปิดโทรศัพท์อยู่ เนื่องจาก  
อาจทำให้เครื่องเสียหายได้

## 2. ถอดแบตเตอรี่ออก

กดด้านบนของแบตเตอรี่และ  
ยกแบตเตอรี่ออกจากช่องใส่  
แบตเตอรี่



# การใส่ USIM และแบตเตอรี่

## 3. การใส่ USIM การ์ด

เลื่อน USIM การ์ดเข้าไปในช่องใส่ USIM การ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง ในการถอด USIM การ์ดให้ค่อยๆ ดึงการออกมาในทิศทางตรงข้ามกับตอนใส่



## 4. ใส่แบตเตอรี่

ใส่แบตเตอรี่ โดยให้ด้านบนของแบตเตอรี่สอดลงไปที่ด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วในโทรศัพท์ จากนั้น กดด้านล่างของแบตเตอรี่ให้แน่นเข้าที่



## 5. การชาร์จโทรศัพท์

เปิดฝาปิดช่องเสียบอุปกรณ์ชาร์จ  
ที่ด้านหลังของโทรศัพท์ GT505  
ออก เสียบอุปกรณ์ชาร์จ และเสียบ  
ปลั๊กไฟเข้ากับเต้าเสียบไฟ คุณจะ  
ต้องชาร์จโทรศัพท์ GT505  
จนกว่าจะปรากฏข้อความว่า  
"แบตเตอรี่เต็มแล้ว" บนหน้าจอ



# การัดหน่วยความจำ

## การใส่การ์ดหน่วยความจำ

คุณสามารถเพิ่มพื้นที่หน่วยความจำบนโทรศัพท์ได้โดยการใช้การ์ดหน่วยความจำ

**หมายเหตุ:** การ์ดหน่วยความจำเป็นอุปกรณ์เสริม


1. เปิดฝาปิดการ์ดหน่วยความจำ
2. ใส่การ์ดหน่วยความจำเข้าไปในช่องเสียบที่ด้านบนให้แน่นเข้าที่โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง



3. ปิดฝาปิดการ์ดหน่วยความจำ

## การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากการ์ดยังไม่ได้อฟอร์แมตคุณต้องทำการฟอร์แมตก่อนจึงจะสามารถเริ่มใช้งานได้



1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ตั้งค่า** และเลือก **ตั้งค่าโทรศัพท์**
2. แตะที่ **ตัวจัดการหน่วยความจำ** แล้วเลือก **หน่วยความจำนอก**
3. แตะที่ **ฟอร์แมต** แล้วยืนยันการเลือกของคุณ
4. ใส่รหัสผ่าน หากมีการกำหนดไว้ จากนั้นการตของคุณจะได้รับการฟอร์แมต และพร้อมสำหรับการใช้งาน

**เคล็ดลับ!** ในการเปลี่ยนแปลงทางที่จัดเก็บเริ่มต้น ให้เปิดตัวจัดการหน่วยความจำ จากเมนูตั้งค่าโทรศัพท์ แล้วเลือกการตั้งค่าที่เก็บหลัก

**หมายเหตุ:** หากการัดหน่วยความจำของคุณมีข้อมูลอยู่ใน ข้อมูลต่างๆ จะถูกกำหนดให้อยู่ในโฟลเดอร์ที่ถูกต้องโดยอัตโนมัติ ตัวอย่างเช่น วิดีโอจะเก็บไว้ในโฟลเดอร์วิดีโอส่วนตัว

## การโอนรายชื่อ

ในการโอนรายชื่อจาก USIM ไปยังโทรศัพท์:

1. จากแท็บการติดต่อ ให้เลือก **สมุดแอดเดรส** และที่ 
2. เลือก **ตำแหน่งที่จัดเก็บ** และเลือก **คัดลอกไป USIM** หรือ **ย้ายไปที่ USIM**
3. เลือกที่ละเอียดแล้วแตะที่ **คัดลอก** หรือ 

# แผนผังเมนู

แตะที่  ในหน้าจอหลักเพื่อเปิด **เมนูบนสุด** จากขั้นตอนนี้ คุณสามารถเข้าใช้เมนูต่างๆ ได้ดังนี้: การติดต่อ, ความบันเทิง, ยูทิลิตี้ และ **ตั้งค่า**



## การติดต่อ

รายชื่อ  
ข้อมูลการโทร  
ขอความ  
อีเมล  
โทรออก  
โทรวิดีโอ



## ความบันเทิง

กล้องถ่ายรูป  
คลังภาพ  
เพิ่มข้อมูล  
เพลง  
Muvoo Studio  
เกมส์&แอปฯ  
วิทยุ FM



## ยูทิลิตี้

เบราว์เซอร์  
นาฬิกา  
Google  
เดือน  
สมุดบันทึก  
บันทึก  
บันทึกเสียง  
เครื่องมือ



## ตั้งค่า

โปรไฟล์  
หน้าจอ  
ตั้งค่าโทรศัพท์  
บลูทูธ  
Wi-Fi  
ตั้งค่าการโทร  
การตั้งค่าสัมผัส  
การเชื่อมต่อ

# หน้าจอหลักของคุณ

จากหน้าจอนี้คุณสามารถเข้าใช้งานตัวเลือกต่างๆ โทรออก ดูสถานะของโทรศัพท์ และอื่นๆ ได้อีกมากมาย

## เคล็ดลับสำหรับหน้าจอสัมผัส

หน้าจอหลักเป็นที่ที่ดียิ่งๆ ที่จะช่วยฝึกให้คุณเคยชินกับการใช้หน้าจอสัมผัส

ในการเลือกรายการให้แตะที่กลางไอคอน


- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ
- เมื่อไฟหน้าจอดับลง ให้กดปุ่มเปิดปิดเครื่อง หรือกดปุ่มปลดล็อคบนหน้าจอสัมผัสค้างไว้เพื่อกลับไปยังหน้าจอหลัก
- เมื่อไม่มีการใช้งานโทรศัพท์ GT505 เครื่องจะกลับไปล็อคหน้าจอตามค่าเริ่มต้น

# หน้าจอหลักของคุณ

## ปุ่มด่วน

ปุ่มด่วนบนหน้าจอหลักจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ใช้บ่อยได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



แตะเพื่อเปิดปุ่มสัมผัสสำหรับใช้โทรออก ป้อนหมายเลขเหมือนกับการใช้ปุ่มกดทั่วไปแล้วแตะที่ **การโทร** หรือกดปุ่ม 

ในการเริ่มการสนทนาทางวิดีโอด้วยหมายเลข ให้กด

 หลังจากป้อนหมายเลขแล้ว และเลือก **ต่อสายวิดีโอ**



แตะเพื่อเปิดรายชื่อในการค้นหาหมายเลขที่คุณต้องการโทร ให้ป้อนชื่อโดยโดยใช้ปุ่มสัมผัส คุณยังสามารถสร้างรายชื่อใหม่และแก้ไขรายชื่อที่มีอยู่ได้



แตะเพื่อเข้าใช้เมนูตัวเลือกข้อความ จากชั้นตอนนี้คุณสามารถสร้าง SMS ใหม่ได้



แตะเพื่อเปิดเมนูบนสุดแบบเต็ม โดยจะแยกออกเป็นเมนูย่อย 4 เมนูย่อย แตะที่แท็บแนวตั้งเพื่อดูตัวเลือกต่างๆ

## แถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูล เช่น ระดับความแรงของสัญญาณ, ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีการใช้งานบลูทูธ หรือ GPRS อยู่หรือไม่ ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ


ไอคอน	คำอธิบาย
	มัลติทาสกิ้ง
	ความแรงของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป)
	ไม่มีสัญญาณเครือข่าย
	พลังงานแบตเตอรี่ที่เหลืออยู่
	แบตเตอรี่หมด
	ข้อความตัวอักษรใหม่
	ข้อความเสียงใหม่

ไอคอน	คำอธิบาย
	ข้อความในถาดเข้าเต็ม
	การส่งข้อความล้มเหลว
	ตั้งปลุกแล้ว
	ใช้รูปแบบปกติอยู่
	ใช้รูปแบบนอกอาคารอยู่
	ใช้รูปแบบเงียบอยู่
	ใช้รูปแบบชุดหูฟังอยู่
	โอนสายเรียกเข้า
	ใช้ EDGE อยู่
	โรมมิ่ง
	เปิดใช้โหมด Flight
	ใช้งานบลูทูธ
	เปิด Wi-Fi
	เล่น BGM
	หยุด BGM ชั่วคราว

# หน้าจอหลักของคุณ

## การเปลี่ยนสถานะจากแถบสถานะ

แตะที่ไอคอนแสดงสถานะปัจจุบัน ซึ่งแสดงการตั้งค่าปัจจุบันในแถบสถานะเพื่อเปิดสรุปสถานะ โดยจะแสดงเวลาปัจจุบัน, เครือข่าย, SVC ID, แบตเตอรี่, หน่วยความจำเครื่อง, หน่วยความจำการ์ด, รูปแบบเสียง, MP3, บลูทูธ และสถานะ Wi-Fi คุณสามารถกำหนดประเภทรูปแบบเสียงเล่น/หยุดชั่วคราว MP3 และเปิด/ปิดการทำงานบลูทูธและ Wi-Fi

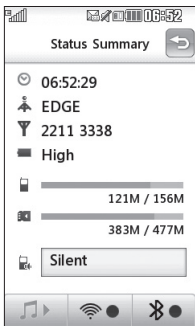

## การใช้ฟังก์ชันการทำงานหลายอย่าง

กดปุ่มมัลติทาสกิ้งเพื่อเปิดเมนูมัลติทาสกิ้ง จากเมนูนี้ คุณสามารถดูแอปพลิเคชันทั้งหมดที่รันอยู่ และเข้าใช้งานได้ด้วยการกดปุ่มเดียว




จากแอปพลิเคชันต่างๆ ให้กดปุ่มมัลติทาสกิ้ง และเลือกหน้าจอหลักเพื่อกลับเข้าสู่หน้าจอหลัก โดยไม่ต้องออกจากหรือปิดแอปพลิเคชันนั้น


เมื่อคุณกำลังรันแอปพลิเคชันไว้ที่พื้นหลัง (เช่น เกมส์ หรือวิทยุ FM) ไอคอน จะปรากฏขึ้นในแถบสถานะ

เมื่อคุณกดปุ่มนี้จากหน้าจอหลัก คุณสามารถดูเมนูปุ่มลัดสำหรับฟังก์ชันที่ใช้กันทั่วไป


# การโทร

## การโทรออกหรือการสนทนาทางวิดีโอ


1. แตะที่  เพื่อเปิดปุ่มกด
2. ป้อนหมายเลขโดยใช้ปุ่มกดในการลบตัวเลข ให้กดปุ่มลบ
3. กดปุ่ม  เพื่อเริ่มการโทรออก
4. ในการวางสาย ให้กดปุ่ม 

**เคล็ดลับ!** ในการป้อน + เพื่อโทรออกต่างประเทศ ให้แตะที่  สองครั้ง

**เคล็ดลับ!** กดปุ่มล็อค/ปลดล็อคเพื่อล็อคทัชสกรีน เพื่อป้องกันการโทรออกโดยไม่ตั้งใจ



**เคล็ดลับ!** คุณสามารถต่อสายวิดีโอ, ส่งข้อความ, บันทึกหมายเลข หรือค้นหารายชื่อ โดยการแตะที่ 

## การโทรออกโดยใช้รายชื่อ

1. จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด รายชื่อ
2. แตะที่ ชื่อ และป้อนตัวอักษร 2-3 ตัวแรกของรายชื่อที่คุณต้องการโทรหา
3. จากรายการที่ฟีดเดอร์นี้ ให้แตะที่รายชื่อที่ต้องการโทรหา แล้วเลือกหมายเลขที่จะใช้ หากมีการบันทึกไว้มากกว่าหนึ่งหมายเลข
4. แตะที่ การโทร


## การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่ม  เพื่อรับสาย

แตะที่  เพื่อปิดเสียงกริ่ง วิธีนี้เป็นวิธีที่ดี หากคุณลืมเปลี่ยนรูปแบบเป็น เงียบ เมื่ออยู่ในห้องประชุม กดปุ่ม  เพื่อปฏิเสธสายเรียกเข้า

# การโทร


## ตัวเลือกต่างๆ ระหว่างใช้สาย

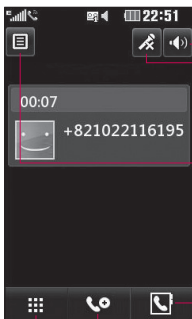


ลำโพง - แตะที่  เพื่อเปิดลำโพง

ปิดเสียง - แตะที่  เพื่อปิดไมโครโฟน  
ดังนั้นบุคคลที่กำลังคุยสายอยู่จะไม่ได้ยินเสียงคุณ

ตัวเลือก - เลือกจากรายการตัวเลือกต่างๆ ระหว่างใช้สาย รวมถึง สร้างบันทึกใหม่ และ ไปที่ข้อความ ดังนั้น คุณสามารถตรวจสอบข้อความและเพิ่มรายชื่อระหว่างโทรออกได้ นอกจากนี้ คุณยังสามารถวางสายได้โดยการแตะที่ วางสาย

 - เลือกเพื่อค้นหารายชื่อระหว่างการ  
ใช้สาย

 - เลือกเพื่อเพิ่มบุคคลอื่นในการ  
สนทนา

 - แตะเพื่อเปิดปุ่มตัวเลขสำหรับการ  
นาวิเกตเมนูด้วยตัวเลือกแบบตัวเลข  
ตัวอย่างเช่น การโทรไปยังศูนย์บริการหรือ  
การบริการทางโทรศัพท์อัตโนมัติต่างๆ



**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือกต่างๆ หรือรายชื่อ ให้แตะที่รายการสุดท้ายที่มองเห็นได้ แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

## การปรับระดับเสียงสนทนา

หากต้องการปรับระดับเสียงระหว่างการ  
การใช้สาย ให้ใช้ปุ่มขึ้นและลงทาง  
ด้านขวาของโทรศัพท์

## โทรด่วน





คุณสามารถกำหนดรายชื่อที่โทรออก  
บ่อยเป็นหมายเลขโทรด่วนได้

1. จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด รายชื่อ
2. แตะที่  แล้วเลือก **โทรด่วน**
3. ข้อความเสียงของคุณถูกตั้งค่าไว้  
ที่โทรด่วน 1 แตะที่หมายเลขอื่นๆ  
เพื่อกำหนดรายชื่อสำหรับโทรด่วน
4. รายชื่อของคุณจะเปิดขึ้น เลือกรายชื่อ  
ที่คุณต้องการกำหนดให้กับ  
หมายเลขนั้น โดยการแตะที่หมายเลข  
โทรศัพท์หนึ่งครั้ง

ในการโทรออกหมายเลขโทรด่วน  
ให้แตะที่  จากหน้าจอหลัก จากนั้นกดหมายเลขที่กำหนดค้างไว้จนกว่ารายชื่อจะปรากฏขึ้นบนหน้าจอ

เครื่องจะทำการโทรออกโดยอัตโนมัติ  
โดยไม่ต้องกด **โทร**

## การใช้สายที่สอง

1. ในระหว่างการโทรสายแรก ให้แตะที่  แล้วเลือกหมายเลข  
ที่คุณต้องการโทรออก
2. หมายเลขโทรออกหรือค้นหา  
รายชื่อ
3. กด  เพื่อต่อสาย
4. สายสนทนาทั้งสองสายจะแสดงอยู่  
ในหน้าจอการโทร สายสนทนาแรก  
จะล็อคและปักสายคู่สนทนา
5. ในการสลับสาย ให้แตะที่   
และเลือก **สลับสาย** หรือกดหมายเลข  
ที่ปักสายไว้
6. ในการวางสายใดสายหนึ่ง  
หรือวางสายทั้งสองสาย ให้กด  
 และเลือก **วางสาย**  
แล้วตามด้วย **ทั้งหมด, ปัก หรือ**  
**ใช้งาน**

# การโทร

**เคล็ดลับ!** คุณสามารถรวมสายเข้าด้วยกันได้โดยการแตะที่ “ไอคอนรวม” แล้วเลือก **รวม** ควรตรวจสอบว่าผู้ให้บริการเครือข่ายสนับสนุนการประชุมสายนี้


**หมายเหตุ:** คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

## การปิด DTMF

DTMF ทำให้คุณสามารถใช้คำสั่งตัวเลขในการนำเมนูภายในการโทรอัตโนมัติได้ โดย DTMF จะเปิดตามค่าเริ่มต้น

ในการปิดการทำงานระหว่างใช้สาย (เช่น การกดตัวเลข) ให้แตะที่  และเลือก **ปิด DTMF**

## การดูบันทึกการโทร

แตะที่  และเลือก **การติดต่อ** และแตะที่ **ข้อมูลการโทร** เลือกเพื่อดู:

**ทุกสาย** - รายการที่โทรออก, ได้รับ และไม่ได้รับทั้งหมด


**สายโทรออก** - รายการหมายเลขที่คุณโทรออกทั้งหมด

**สายที่ได้รับ** - รายการหมายเลขที่โทรเข้ามาหาคุณทั้งหมด

**สายไม่ได้รับ** - รายการสายที่คุณไม่ได้รับทั้งหมด

**เคล็ดลับ!** จากบันทึกการโทร ให้แตะที่  และ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

## การใช้การโอนสาย


1. แตะที่  เลือก **ตั้งค่า** แล้วเลือก **ตั้งค่าการโทร**
2. แตะที่ **โอนสาย** และเลือก **สนทนาทางวิดีโอ** หรือเลือก **โทรด้วยเสียง**
3. เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดต่อไม่ได้
4. บอกรหัสหมายเลขที่คุณต้องการให้โอนสายไป
5. แตะที่ **คำขอ** เพื่อเปิดใช้งาน

หมายเหตุ: คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

### **เคล็ดลับ!**

ในการปิดการโอนสายทั้งหมด ให้เลือก **เลิกใช้ทั้งหมด** จากเมนูการโอนสาย

## การใช้การป้องกันการโทร

1. แตะที่  เลือก **ตั้งค่า** แล้วเลือก **ตั้งค่าการโทร**
2. แตะที่ **ป้องกันการโทร** และเลือก **สนทนาทางวิดีโอ** หรือเลือก **โทรด้วยเสียง**
3. เลือกตัวเลือกใดตัวเลือกหนึ่ง หรือเลือกทั้ง 5 ตัวเลือกนี้:  
**โทรออกทั้งหมด**  
**สายโทรออกต่างประเทศ**  
**สายโทรออกต่างประเทศ ยกเว้นประเทศแม่**  
**สายเรียกเข้าทั้งหมด**  
**สายเข้าเมื่ออยู่ต่างประเทศ**
4. บอกรหัสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการระบบเครือข่ายของคุณเกี่ยวกับบริการนี้


# การโทร

**เคล็ดลับ!** เลือก

**กำหนดเบอร์โทรออก**

เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

## การเปลี่ยนการตั้งค่าการโทรทั่วไป

1. แตะที่  เลือก **ตั้งค่า** แล้วเลือก **ตั้งค่าการโทร**
2. แตะที่ **การตั้งค่าทั่วไป**  
จากหน้าจอนี้ คุณสามารถแก้ไขการตั้งค่าของ:
  - ปฏิเสธการรับสาย** - เลื่อนสวิตช์ไปทางซ้ายเพื่อเลื่อนแถบไปที่ปฏิเสธรายการ คุณสามารถแตะที่กล่องข้อความเพื่อเลือกจากทุกสาย รายชื่อ หรือกลุ่มที่ระบุไว้หรือจากหมายเลขที่ไม่รู้จัก (ไม่มีอยู่ในรายชื่อของคุณ) แตะที่ **บันทึก** เพื่อเปลี่ยนการตั้งค่า

**ส่งเบอร์หมายเลขตัวเอง** - เลือกว่าจะแสดงหมายเลขของคุณเมื่อคุณโทรออกหรือไม่

**โทรซ้ำอัตโนมัติ** - เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

**โทรหมดตอบรับ** - เลือกว่าจะรับสายโดยใช้ปุ่ม **ส่ง** หรือปุ่ม **โทร**


**เตือนทุกนาที** - เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** ฟังเสียงเตือนทุกนาทีระหว่างการใช้สาย

**โทรหมดตอบรับ BT** - เลือก **แฮนด์ฟรี** เพื่อให้สามารถรับสายได้ในระหว่างใช้งานชุดหูฟังบลูทูธหรือเลือก **ตัวเครื่อง** เพื่อรับสายโดยกดปุ่มบนตัวเครื่อง

**บันทึกหมายเลขใหม่** - เลือก **ใช่** เพื่อบันทึกหมายเลขใหม่

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

## การเปลี่ยนการตั้งค่าการ สนทนาทางวิดีโอ



1. แตะที่  เลือก **ตั้งค่าการโทร**  
และเลือก **ตั้งค่าสนทนาวิดีโอ**
2. เลือกการตั้งค่าสำหรับการสนทนา  
ทางวิดีโอ เลือกว่าจะใช้รูปส่วนตัว  
แล้วเลือกรูป หรือเปิดกระจกเพื่อ  
ใหม่มองเห็นตัวคุณเองบนหน้าจอ  
เมื่อโทรแบบสนทนาทางวิดีโอ

# รายชื่อ

## การค้นหารายชื่อ

คุณสามารถค้นหารายชื่อได้ 2 วิธี:

### จากหน้าจอหลัก

1. จากหน้าจอหลัก ให้แตะที่  เพื่อเปิดรายชื่อ แตะที่ ชื่อ และ ป้อนชื่อของรายชื่อโดยใช้ปุ่มกด
2. แตะที่ **โทร** หรือปุ่ม  เพื่อเริ่มการโทรออก


### จากเมนูหลัก

1. แตะที่  เลือก การติดต่อ
2. แตะที่ รายชื่อ และ ค้นหา

**เคล็ดลับ!** ปุ่มกดตัวอักษรจะปรากฏขึ้นเมื่อคุณแตะที่ ชื่อ



**เคล็ดลับ!** ในการเลื่อนดูรายชื่อ ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

## การเพิ่มรายชื่อใหม่


1. จากหน้าจอหลัก ให้แตะที่  แล้วเลือก สร้างรายชื่อใหม่
2. ป้อนชื่อและนามสกุลของรายชื่อติดต่อใหม่ คุณไม่จำเป็นต้องป้อนทั้งสองรายการ แต่คุณต้องป้อนรายการใดรายการหนึ่ง
3. ป้อนหมายเลขที่ต่างกันสูงสุด 5 หมายเลข แล้วระบุประเภทให้กับแต่ละหมายเลข โดยเลือกจาก เบอร์มือถือ, โสม, ออฟิศ, เบอร์เพจเจอร์, แฟกซ์, VT และทั่วไป
4. เพิ่มอีเมลแอดเดรส
5. กำหนดรายชื่อให้กับกลุ่มอย่างน้อยหนึ่งกลุ่ม เลือกจาก ไม่มีกลุ่ม, ครอบครัว, เพื่อน, เพื่อนร่วมงาน, โรงเรียน หรือ วีไอพี

6. คุณยังสามารถเพิ่มเสียงเรียกเข้า, วันเกิด, โสมเพจ, ที่อยู่บ้าน, ชื่อบริษัท, ชื่องาน, ที่อยู่ บริษัท และบันทึก
7. แตะที่ บันทึก เพื่อบันทึกรายชื่อ

## การสร้างกลุ่ม

1. จากหน้าจอหลัก ให้แตะที่  และเลือกแท็บ การติดต่อ แตะที่ รายชื่อ และเลือก กลุ่ม
2. แตะที่ 
3. เลือก สร้างกลุ่มใหม่
4. ป้อนชื่อสำหรับกลุ่มใหม่ของคุณ
5. แตะที่ บันทึก


**หมายเหตุ:** หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะหายไป แต่ยังคงอยู่ในรายชื่อ

**เคล็ดลับ!** คุณสามารถแก้ไขกลุ่มที่มีอยู่ได้โดยการเลื่อนแถบไปที่กลุ่มที่ต้องการ แล้วแตะที่ 

## การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถปรับการตั้งค่ารายชื่อเพื่อให้เหมาะกับรายชื่อในแบบที่คุณต้องการได้

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

1. จากแท็บการโทร & ข้อความ ให้แตะที่ รายชื่อ และแตะที่  เลือก ตั้งค่า
2. จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าต่อไปนี้:

**การตั้งค่ารายชื่อ** - คุณยังสามารถเลือกว่าจะแสดงชื่อหรือนามสกุลของรายชื่อขึ้นก่อนก็ได้ คุณสามารถแสดง ต่อสายสนทนา, ต่อสายวิดีโอ หรือ ส่งข้อความด้วยปุ่มคำสั่งด่วนได้

# รายชื่อ

**ซิงโครไนซ์** - เชื่อมต่อไปยังเซิร์ฟเวอร์ของคุณ เพื่อซิงโครไนซ์รายชื่อต่างๆ โปรดดูที่ **การซิงโครไนซ์รายชื่อ**

**เอ็กซ์พอร์ตรายชื่อ** - คือการสำรองรายชื่อทั้งหมดไปยังหน่วยความจำการ์ด

**อิมพอร์ตรายชื่อ** - ตัวเลือกนี้จะเป็นการเรียกคืนรายชื่อจากหน่วยความจำการ์ดที่เราได้ทำการสำรองข้อมูลไว้

**ส่งทุกรายชื่อผ่าน Bluetooth** - ส่งรายชื่อทั้งหมดไปยังอุปกรณ์อื่นโดยใช้บลูทูธ เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธหากคุณเลือกตัวเลือกนี้

**ลบรายชื่อ** - ลบรายชื่อของคุณทั้งหมด และที่ **ใช้** หากคุณต้องการล้างรายชื่อของคุณ

# ข้อความ

## ข้อความ


โทรศัพท์ GT505

ของคุณได้ผสมผสาน SMS, MMS และอีเมลไว้ในเครื่องเดียว และเมนูที่ใช้งานง่าย


คุณสามารถเข้าสู่ศูนย์ข้อความได้ 2 วิธี ดังนี้:


1. จากหน้าจอหลัก ให้แตะที่  หรือแตะที่  แล้วเลือก **การติดต่อ** และเลือก **ข้อความ**

## การส่งข้อความ

1. แตะที่  แล้วแตะ **ข้อความใหม่** เพื่อเปิดข้อความว่างเปล่า
2. จากขั้นตอนนี้ คุณสามารถเลือก **ข้อความ** เพื่อส่ง SMS หรือ MMS
3. แตะที่ **แทรก** เพื่อเพิ่มภาพ, วิดีโอ, เสียง, สไลด์ใหม่, หัวเรื่อง หรืออื่นๆ (นามบัตร, ปฏิทิน, บันทึก, งาน หรือนามบัตรส่วนตัว)

4. แตะที่ **ผู้รับ** เพื่อป้อนหมายเลขของผู้รับ หรือแตะที่ไอคอนการค้นหาเพื่อเปิดรายชื่อ คุณสามารถเพิ่มรายชื่อหลายรายการได้ เมื่อคุณดำเนินการเสร็จแล้ว ให้แตะที่ **ส่ง**

 **คำเตือน:** การส่งข้อความให้กับผู้รับแต่ละรายจะคิดค่าใช้จ่ายที่ 160 ตัวอักษรต่อหนึ่งข้อความตัวอักษร

 **คำเตือน:** หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะถูกแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

# ข้อความ


## การป้อนข้อความ


คุณสามารถป้อนข้อความได้ 5

วิธีดังนี้:


ปุ่มกด, คีย์บอร์ด, เขียนมือ-สกรีน,  
เขียนมือ-บ็อกซ์, เขียนมือ-ดับเบิล  
บ็อกซ์

แตะที่หน้าจอหนึ่งครั้ง  
แป้นพิมพ์จะปรากฏขึ้น

 และเพื่อเปิดระบบป้อนข้อความ  
แบบช่วยสะกดคำ T9

 คุณสามารถเปลี่ยนภาษาที่ใช้  
เขียนได้

 และเพื่อเปลี่ยนระหว่างปุ่มกด  
ตัวเลข, สัญลักษณ์ และข้อความ

ใช้  เพื่อเลื่อนดูประเภทแป้นพิมพ์  
แบบต่างๆ ในโหมดป้อนข้อความแต่  
ละโหมด (ตัวอย่างเช่น ตัวพิมพ์ใหญ่  
หรือตัวพิมพ์เล็ก)

ในการเว้นวรรค ให้แตะที่ 

## ระบบช่วยสะกดคำ T9

ในโหมด T9 สัญลักษณ์ 

จะปรากฏขึ้น

โหมด T9 จะใช้พจนานุกรมภายใน  
เครื่อง เพื่อรับรู้คำศัพท์ที่คุณเขียน  
ตามลำดับการกดปุ่ม เพียงแตะที่ปุ่ม  
ตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณจะ  
ป้อน พจนานุกรมจะคาดคะเนได้ถึงคำ  
ศัพท์ที่คุณต้องการใช้

ตัวอย่างเช่น กด 8, 3, 5, 3, 7, 4, 6,  
6, 3 เพื่อเขียนคำว่า 'telephone'



## การป้อนตัวอักษรด้วยตนเอง

ในโหมดการป้อนตัวอักษรด้วย  
ตนเอง คุณต้องแตะที่ปุ่มซ้ำๆ  
เพื่อป้อนตัวอักษร ตัวอย่างเช่น  
ในการเขียนคำว่า 'hello' ให้แตะ  
4 สองครั้ง, 3 สองครั้ง, 5 สามครั้ง,  
5 สามครั้ง อีกครั้งหนึ่ง แล้ว  
6 สามครั้ง

## การตั้งค่าอีเมล

คุณสามารถติดต่อสื่อสารระหว่างการเดินทางได้โดยใช้อีเมลบนโทรศัพท์ GT505 ซึ่งคุณสามารถกำหนดอีเมลแอดเดสแบบ POP3 หรือ IMAP4 ได้อย่างรวดเร็วและง่ายดาย

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

1. แตะที่  จากหน้าจอหลักและแตะที่ **อีเมล**
2. แตะที่ 
3. แตะที่ **เพิ่มแอดเดส**
4. คุณสามารถเลือกวิธีการทำงานของแอดเดสได้ดังนี้  
**ชื่อ** - บัญชีสำหรับแอดเดสที่นี่  
**ชื่อของฉัน** - บัญชีของคุณ  
**ชื่อผู้ใช้** - บัญชีผู้ใช้ของแอดเดส

**รหัสผ่าน** - บัญชีรหัสผ่านของแอดเดส

**อีเมลแอดเดส** - บัญชีอีเมลแอดเดสของแอดเดส

**อีเมลที่ตอบกลับ** - บัญชีอีเมลแอดเดส 'ตอบกลับ'

**เซิร์ฟเวอร์เมลที่ส่งออก** - บัญชีแอดเดสเซิร์ฟเวอร์อีเมลขาออก

**เซิร์ฟเวอร์เมลขาเข้า** - บัญชีแอดเดสเซิร์ฟเวอร์อีเมลขาเข้า

**ขนาดการรับสูงสุด** - เลือกขนาดที่จำกัดไว้ของอีเมล ขนาดการรับสูงสุดคือ 2MB

**ประเภทเมลบ็อกซ์** - บัญชีประเภทเมลบ็อกซ์ POP3 หรือ IMAP4

**บันทึกในเซิร์ฟเวอร์** - เลือกว่าจะบันทึกอีเมลไว้ในเซิร์ฟเวอร์หรือไม่ เครื่องจะบันทึกสำเนาของแอดเดสแบบ IMAP4 ไว้เสมอ

# ข้อความ

**บันทึกเมลที่ส่งใน** - เลือกว่าจะบันทึกอีเมลที่ส่ง (เมื่อตั้งค่าประเภทเมลบอกซ์เป็น IMAP4) หรือไม่ เมื่อประเภทเมลบอกซ์เป็น POP3 เมลที่ส่งจะถูกบันทึกไว้ในตัวเครื่อง

**รับเฉพาะรายการใหม่** - เลือกว่าจะไม่สนใจอีเมลที่ดาวน์โหลดแล้วก่อนหน้านี้หรือไม่

**จุดเชื่อมต่อ** - เลือกจุดเชื่อมต่ออินเทอร์เน็ต

**ตัวเลือกการดาวน์โหลด** - เลือกวิธีดาวน์โหลดอีเมล เลือกจากเฉพาะส่วนหัวหรือทั้งหมดรวมเนื้อความสำหรับ POP3, เฉพาะส่วนหัว, ส่วนหัว + เนื้อความหรือทั้งหมดสำหรับ IMAP4

**ดาวน์โหลดอัตโนมัติ** - เลือกว่าจะดึงอีเมลใหม่โดยอัตโนมัติหรือไม่

**ตั้งค่าขั้นสูง** - เลือกว่าจะใช้การตั้งค่าขั้นสูงหรือไม่

**หมายเลขพอร์ต SMTP** - โดยทั่วไป หมายเลขนี้ คือ 25

**SMTP TLS/SSL** - เลือกว่าจะใช้ TLS/SSL สำหรับเซิร์ฟเวอร์ขาออกหรือไม่

**พอร์ตเซิร์ฟเวอร์ขาเข้า** - โดยทั่วไป หมายเลขนี้ คือ 110 สำหรับแอคเคาท์แบบ POP3 และ 143 สำหรับแอคเคาท์แบบ IMAP4

**TLS/SSL ขาเข้า** - เลือกว่าจะใช้ TLS/SSL สำหรับเซิร์ฟเวอร์ขาเข้าหรือไม่

**ตรวจสอบสิทธิ์ SMTP** - เลือกการตั้งค่าความปลอดภัยของเซิร์ฟเวอร์เมลขาออก

**ชื่อผู้ใช้ SMTP** - ป้อนชื่อผู้ใช้ SMTP

**รหัสผ่าน SMTP** - ป้อนรหัสผ่าน SMTP

**ล็อกอิน APOP** - เลือกเพื่อเปิดใช้งานล็อกอินเพื่อความปลอดภัย APOP สำหรับแอคเคาท์แบบ POP3 สำหรับแอคเคาท์แบบ IMAP4 จะตั้งค่าเป็นปิดการใช้งานเสมอ

ในตอนนี้ คุณสามารถกำหนดค่าให้กับแอดเดสส์ที่เรียบร้อยแล้ว ซึ่งแอดเดสส์นี้จะปรากฏอยู่ในรายการแอดเดสส์ในโฟลเดอร์ อีเมล

## การส่งอีเมลโดยใช้แอดเดสส์ใหม่

1. แตะที่ **อีเมล** ในเมนูการโทร & ข้อความเพื่อเปิดอีเมลเปล่าใหม่
2. คุณสามารถป้อนแอดเดสส์ผู้รับและเขียนข้อความของคุณได้นอกจากนี้ คุณยังสามารถแนบภาพ วิดีโอ เสียง หรือไฟล์ประเภทอื่นได้
3. แตะที่ **ส่ง** แล้วอีเมลจะถูกส่งออกไป


### เคล็ดลับ!

คุณสามารถอัปโหลดเอกสาร Word, Excel, PowerPoint และ PDF ไปที่โทรศัพท์ GT505 เพื่อให้คุณสามารถตรวจดูเอกสารระหว่างเดินทางได้

## การเปลี่ยนการตั้งค่าอีเมล

คุณสามารถเปลี่ยนแปลงการตั้งค่าอีเมลให้เป็นในแบบที่คุณต้องการได้

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอลงไป รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

1. แตะที่  จากหน้าจอหลัก และเลือก **อีเมล** และ **ตั้งค่าข้อความ**
2. คุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:
  - แอดเดสส์อีเมล** - จัดการแอดเดสส์อีเมลของคุณ
  - ตอบกลับอีเมลได้** - เลือกเพื่อให้อัปโหลดข้อความยืนยันการอ่านได้
  - ร้องขอการตอบกลับอีเมล** - เลือกว่าต้องการข้อความยืนยันการอ่านหรือไม่

# ข้อความ

- รอบเวลาการเรียกดู** - เลือกความถี่ที่จะให้โทรศัพท์ GT505 ตรวจสอบข้อความอีเมลใหม่
- จำนวนที่รับ** - เลือกจำนวนอีเมลที่ดึงข้อมูลในหนึ่งครั้ง
- รวมข้อความต้นฉบับ** - เลือกเพื่อรวมข้อความต้นฉบับในการตอบกลับ
- รวมสิ่งที่แนบ** - เลือกเพื่อรวมสิ่งที่แนบต้นฉบับในการตอบกลับ
- เรียกอัตโนมัติในการโรมมิ่ง** - เลือกว่าจะดึงข้อความโดยอัตโนมัติเมื่อคุณอยู่ต่างประเทศ (โรมมิ่ง) หรือไม่
- การแจ้งเตือนอีเมลใหม่** - เลือกว่าจะแจ้งเตือนอีเมลใหม่หรือไม่
- ลายเซ็น** - สร้างลายเซ็นสำหรับอีเมล และเปิดคุณสมบัตินี้
- ระดับความสำคัญ** - เลือกระดับความสำคัญของข้อความอีเมล
- ขนาดเมลที่ส่ง** - เลือกขนาดของอีเมลที่คุณจะส่ง

## โฟลเดอร์ข้อความ

- คุณจะได้รับถึงโครงสร้างโฟลเดอร์ที่ใช้ในโทรศัพท์ GT505 ได้ เนื่องจากโฟลเดอร์ต่างๆ มีโครงสร้างที่เข้าใจง่าย
- ข้อความใหม่** - เปิดข้อความเปล่าใหม่
- ถาดเข้า** - ข้อความทั้งหมดที่คุณได้รับจะอยู่ในถาดเข้า จากเมนูนี้คุณสามารถ ลบ และดำเนินการอื่นๆ ได้ โปรดดูรายละเอียดเพิ่มเติมที่ **การจัดการข้อความ** ด้านล่างนี้
- ร่าง** - หากคุณยังเขียนข้อความไม่เสร็จ คุณสามารถบันทึกสิ่งที่คุณเขียนไว้ที่นี่ได้
- ถาดออก** - โฟลเดอร์นี้เป็นโฟลเดอร์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป
- รายการที่ส่ง** - ข้อความที่คุณส่งจะอยู่ในโฟลเดอร์นี้
- โฟลเดอร์ส่วนตัว** - สร้างโฟลเดอร์เพื่อจัดเก็บข้อความ



**ข้อความอัตโนมัติ** - ใช้รายการข้อความตัวอักษรและมัลติมีเดียอัตโนมัติที่ใช้กันทั่วไป

**อีโมติคอน** - เพิ่มและแทรกอีโมติคอนสำหรับข้อความของคุณ

**ตั้งค่า** - เปลี่ยนแปลงการตั้งค่าของข้อความตัวอักษรและมัลติมีเดีย



## การใช้ข้อความอัตโนมัติ

สร้างข้อความอัตโนมัติสำหรับข้อความ SMS และ MMS ที่คุณส่งบ่อยๆ คุณจะพบว่ามีข้อความอัตโนมัติบางข้อความในโทรศัพท์ของคุณแล้ว ซึ่งคุณสามารถแก้ไขข้อความเหล่านั้นได้หากต้องการ

1. แตะที่  แล้วเลือก **ข้อความอัตโนมัติ**
2. เลือก **SMS อัตโนมัติ** หรือ **MMS อัตโนมัติ** คุณสามารถแตะที่  เพื่อ **เพิ่มข้อความอัตโนมัติ, ลบ หรือ ลบทั้งหมด** สำหรับข้อความอัตโนมัติ ในการแก้ไขข้อความ ให้เลือกข้อความ ทำการแก้ไขแล้วแตะที่ **บันทึก**

## การใช้อีโมติคอน

ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้อีโมติคอน คุณจะพบว่ามีอีโมติคอนที่ใช้กันทั่วไปในโทรศัพท์ของคุณแล้ว

1. แตะที่  และเลือก **อีโมติคอน**
2. แตะที่  เพื่อ **เพิ่มอีโมติคอน, ลบ หรือ ลบทั้งหมด** สำหรับอีโมติคอน

## การเปลี่ยนการตั้งค่าข้อความตัวอักษร

การตั้งค่าข้อความของโทรศัพท์ GT505 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันทีที่คุณสามารถเปลี่ยนแปลงการตั้งค่านี้ได้ในรูปแบบที่คุณต้องการ

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

# ข้อความ

แตะที่  แล้วเลือก **ตั้งค่า**

และ **ข้อความตัวอักษร**

คุณสามารถเปลี่ยนแปลง:

**ศูนย์ข้อความตัวอักษร** - ป้อนรายละเอียดของศูนย์ข้อความ

**รายงานผลการส่ง** - เลื่อนสวิตช์ไปทางซ้ายเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว

**ช่วงที่มีผลใช้** - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

**ชนิดข้อความ** - แปลงข้อความตัวอักษรเป็น เสียง, แฟกซ์, X.400 หรือ อีเมล

**การเข้ารหัสตัวอักษร** - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความและบริการส่งข้อความของคุณ

**การส่งข้อความยาว** - เลือกเพื่อส่งข้อความยาวเป็นหลาย SMS หรือเป็น MMS

## การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ GT505 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนแปลงการตั้งค่านี้ได้ในรูปแบบที่คุณต้องการ

แตะที่  แล้วเลือก **ตั้งค่า**

และ **ข้อความมัลติมีเดีย**

คุณสามารถเปลี่ยนแปลง:

**โหมดการเรียกข้อมูล** - เลือก **เครือข่ายหลัก** หรือ

**เครือข่ายโรมมิ่ง** หากคุณเลือกกำหนดเอง คุณจะได้รับเฉพาะข้อความแจ้ง MMS และคุณสามารถตัดสินใจว่าจะดาวน์โหลดแบบเต็มหรือไม่

**รายงานผลการส่ง** - เลือกเพื่อให้ส่งหรือต้องการรายงานผลการส่ง

**อ่านข้อความตอบรับ** - เลือกเพื่อให้มีหรือส่งการตอบกลับการอ่าน

**ระดับความสำคัญ** - เลือกระดับความสำคัญของ MMS

**ช่วงที่มีผลใช้** - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ


**ระยะเวลาสไลด์** - เลือกระยะเวลาที่จะให้สไลด์ปรากฏบนหน้าจอ


**เวลาส่ง** - เลือกระยะเวลาก่อนส่งแต่ละข้อความ

**ศูนย์ MMS** - ป้อนรายละเอียดของศูนย์ข้อความ

## การเปลี่ยนการตั้งค่าอื่นๆ

แตะที่  เลือก **ตั้งค่า** แล้ว:

**วิดีโอเมล** - แตะที่  เพื่อเพิ่มบริการวิดีโอเมลใหม่ ติดต่อที่ผู้ให้บริการระบบเครือข่ายของคุณสำหรับข้อมูลเพิ่มเติมเกี่ยวกับบริการที่มีให้


**ข้อความเสียง** - แตะที่  เพื่อเพิ่มบริการข้อความเสียงใหม่ ติดต่อที่ผู้ให้บริการระบบเครือข่ายของคุณสำหรับข้อมูลเพิ่มเติมเกี่ยวกับบริการที่มีให้

**ข้อความบริการ** - เลือกเพื่อรับหรือบล็อกข้อความบริการ คุณยังสามารถกำหนดความปลอดภัยของข้อความได้โดยการสร้างรายการผู้ส่งที่เชื่อถือได้และเชื่อถือไม่ได้

**บริการข้อมูล** - เลือกสถานะการรับ, ภาษา และการตั้งค่าอื่นๆ

# กล้อง


## การถ่ายภาพด่วน

1. กดปุ่ม  ที่ด้านขวาของโทรศัพท์
2. ให้ถือโทรศัพท์ในแนวนอน และหันเลนส์ไปทางสิ่งที่ต้องการถ่าย
3. กดปุ่มถ่ายภาพลงเล็กน้อย ช่องโฟกัสจะปรากฏขึ้นที่กึ่งกลางของหน้าจอช่องมองภาพ
4. จัดตำแหน่งโทรศัพท์เพื่อให้คุณสามารถมองเห็นสิ่งที่ถ่ายในช่องโฟกัส
5. เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
6. กดปุ่มถ่ายภาพลงจนสุด


## เมื่อคุณถ่ายภาพแล้ว

ภาพที่ถ่ายจะปรากฏบนหน้าจอ  
ชื่อภาพจะแสดงพร้อมด้วย 4  
ไอคอนที่ด้านขวาของหน้าจอ



 และเพื่อส่งรูปภาพเป็น  
ข้อความ, อีเมล หรือ บลูทูธ  
โปรดดูที่ การส่งข้อความ และ การส่ง  
และการรับไฟล์โดยใช้บลูทูธ

**หมายเหตุ:** การดาวน์โหลด MMS  
ขณะอยู่ในเครือข่ายโรมมิ่งอาจมีค่าใช้จ่ายเพิ่มเติม


 และเพื่อใช้ภาพนี้เป็นพื้นหลัง

 และเพื่อแก้ไขชื่อของภาพที่  
เลือก

 และเพื่อแก้ไขภาพโดยใช้เครื่องมือ  
มือต่างๆ

 และเพื่อกลับไปเมนูก่อนหน้า


 และเพื่อลบภาพ

 และเพื่อถ่ายภาพอื่นทันที โดย  
ที่ภาพปัจจุบันของคุณจะได้รับการ  
บันทึกไว้

 และเพื่อดูคลังภาพที่บันทึกไว้

# กล้อง

## ทำความรู้จักกับช่องมองภาพ

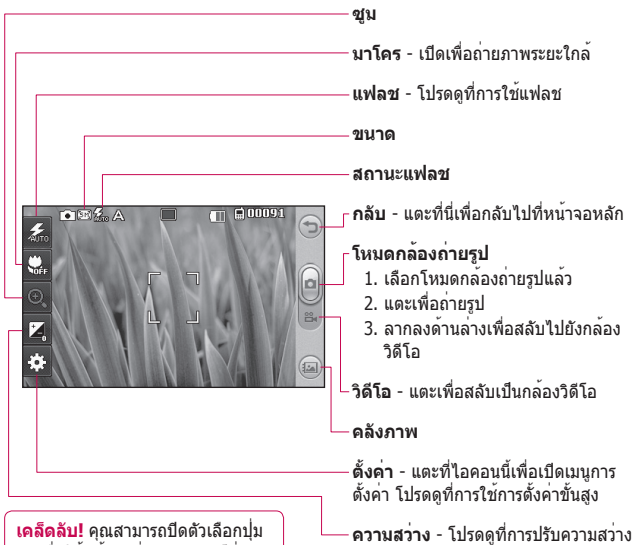

## การใช้แฟลช

ค่าเริ่มต้นของแฟลช คือ อัตโนมัต แต่คุณสามารถตั้งค่าด้วยตัวเลือกอื่นได้

1. เลือก  จากด้านซ้ายของช่องมองภาพเพื่อเข้าสู่เมนูย่อยแฟลช

2. มีตัวเลือกแฟลชให้เลือก 3

ตัวเลือก คือ:

**อัตโนมัติ** - กล้องของคุณจะประเมินแสงที่มีเพื่อให้ได้ภาพที่ดีและใช้แฟลชเท่าที่จำเป็น

**ปิดเสมอ** - กล้องจะไม่ใช้แฟลชเลย ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการประหยัดพลังงานแบตเตอรี่

**เปิดเสมอ** - กล้องจะใช้แฟลชเสมอ



3. เมื่อคุณแตะที่ตัวเลือกที่คุณต้องการ เมนูแฟลชจะปิดเองอัตโนมัติให้คุณสามารถถ่ายภาพได้ทันที

4. ไอคอนสถานะแฟลชในช่องมองภาพจะเปลี่ยนแปลง ทั้งนี้ ขึ้นอยู่กับโหมดแฟลชใหม่

## การปรับการรับแสง


การรับแสงเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืดในภาพภาพที่มีระดับความเข้มต่ำจะมีลักษณะมัว ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า

1. แตะที่ 


2. เลื่อนตัวบ่งชี้ความเข้มตามแถบไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงลดลงและมัวมากขึ้น หรือไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงสูงขึ้นและคมชัดยิ่งขึ้น

# กล้อง

## การถ่ายภาพต่อเนื่อง

1. จากช่องมองภาพ ให้แตะที่  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด และเลือก **โหมดชัตเตอร์** แล้วเลือก **ชัตเตอร์ต่อเนื่อง**
2. จัดให้วัตถุอยู่ในช่องมองภาพ แล้วกดปุ่มถ่ายภาพเหมือนกับการถ่ายภาพปกติ
3. กล้องจะถ่ายภาพต่อเนื่องอย่างรวดเร็ว

## การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะที่  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด หลังจากเลือกตัวเลือก ให้แตะปุ่ม **ตกลง**

**สลับกล้อง** - สำหรับการถ่ายภาพตนเอง ให้สลับเป็นกล้องถ่ายรูปตัวในของ LG GT505

**ขนาดภาพ** - เปลี่ยนขนาดของภาพถ่ายเพื่อประหยัดพื้นที่หน่วยความจำหรือถ่ายภาพที่มีขนาดเหมาะสมสำหรับรายชื่อ โปรดดูที่

### การเปลี่ยนขนาดภาพ

**โหมดถ่ายภาพ** - ตั้งค่ากล้องถ่ายรูปเพื่อปรับให้เข้ากับสภาพแวดล้อม เลือกจาก **อัตโนมัติ**, **กลางคืน**, **รูปคน**, **วิวทัศน์**, **ชายหาด**, **กีฬา** และ **ปาร์ตี้**

**เอฟเฟกต์สี** - เลือกโทนสีเพื่อใช้กับรูปภาพใหม่ โปรดดูที่

### การเลือกเอฟเฟกต์สี

**ความสมดุลแสง** - เลือกระหว่าง **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** และ **มิดครีม**

**ตัวตั้งเวลา** - ตัวตั้งเวลาทำให้คุณสามารถตั้งช่วงเวลาหน่วงหลังจากที่กดชัตเตอร์แล้ว ให้เลือก **ปิด**, **3 วินาที**, **5 วินาที** หรือ **10 วินาที** ซึ่งเป็นวิธีการที่ช่วยให้คุณถ่ายรูปตนเองได้

**โหมดชัตเตอร์** - เลือกโหมดชัตเตอร์ปกติหรือถ่ายภาพต่อเนื่อง

**คุณภาพ** - เลือกระหว่าง  
**ละเอียดมาก, ละเอียด และ ปกติ**  
คุณภาพที่ละเอียดมากขึ้นเท่าใด  
ความคมชัดของรูปภาพก็มากขึ้น  
เท่านั้น อย่างไรก็ตาม ขนาดไฟล์จะ  
เพิ่มตามไปด้วย ซึ่งหมายความว่า  
คุณสามารถจัดเก็บรูปภาพในหน่วย  
ความจำได้น้อยลง

**โฟกัสอัตโนมัติ** - เลือกวิธีการโฟกัส  
ของกล้อง เลือกจาก อัตโนมัติ,  
กำหนดเอง

**ดูตัวอย่างสไลด์** - เลือกดูตัวอย่าง  
สไลด์

**ความจำที่ใช้** - เลือกว่าจะบันทึก  
ภาพถ่ายที่หน่วยความจำเครื่อง  
หรือหน่วยความจำภายนอก

**ชอนไอคอน** - เลือกชอนไอคอนการ  
ตั้งค่ากล้องถ่ายรูปด้วยตนเองหรือ  
อัตโนมัติ

**ลดการสั่น** - ช่วยให้คุณสามารถถ่าย  
ภาพได้โดยกล้องไม่สั่น

**แสดงภาพที่ถ่าย** - เลือกว่าจะแสดง  
ภาพที่ถ่ายหลังจากถ่ายภาพหรือไม่

**เสียงชัตเตอร์** - เลือกเสียงชัตเตอร์  
เสียงใดเสียงหนึ่งจากสี่เสียง

**จีโอแท็ก** - เปิด/ปิด

**รีเซ็ต** - เรียกคืนการตั้งค่าเริ่มต้นของ  
กล้องถ่ายรูป


**เคล็ดลับ!** เมื่อคุณออกจากกล้อง  
ถ่ายรูป การตั้งค่าทั้งหมดจะกลับสู่  
ค่าเริ่มต้น ยกเว้นขนาดภาพและ  
คุณภาพของภาพ การตั้งค่าที่ไม่  
ใช่ค่าเริ่มต้นจะถูกรีเซ็ต เช่น โทน  
สีตรวจสอบค่าเหล่านี้ ก่อนที่คุณจะ  
ถ่ายภาพครั้งถัดไป

# กล้อง

**เคล็ดลับ!** เมนูการตั้งค่าซ้อนทับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบด้านสีหรือคุณภาพของภาพ คุณจะเห็นตัวอย่างของภาพที่เปลี่ยนได้ที่ด้านหลังเมนูการตั้งค่า


## การเปลี่ยนขนาดภาพ

จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งหมายถึงการใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บรูปภาพในโทรศัพท์ให้มากขึ้น คุณสามารถเปลี่ยนความละเอียดเพื่อทำให้ไฟล์มีขนาดเล็กลงได้

1. การใช้ช่องมองภาพ ให้แตะที่  ในมุมมอง
2. เลือก **ขนาดภาพ** จากเมนูตัวอย่าง

1. เลือกค่าพิกเซลจากตัวเลือกหกตัวเลือก (**5M: 2592x1944, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) หรือเลือกค่าพื้นหลังที่ตั้งไว้ล่วงหน้า


## การเลือกเอฟเฟกต์สี


1. การใช้ช่องมองภาพ ให้แตะที่  ในมุมมอง
2. เลือก เอฟเฟกต์สี จากเมนูตัวอย่าง
3. มีตัวเลือกโทนสี
4. เมื่อคุณเลือกแล้ว สามารถปิดเมนูโทนสีได้โดยการกดปุ่ม ดกลอง ขณะนี้คุณพร้อมถ่ายภาพแล้ว


**เคล็ดลับ!** คุณสามารถเปลี่ยนรูปภาพที่ถ่ายไว้จากภาพสีให้เป็นภาพขาวดำหรือซีเปียได้ แต่คุณไม่สามารถเปลี่ยนรูปภาพที่ถ่ายไว้จากภาพขาวดำหรือซีเปียให้เป็นภาพสี

## การใช้กล้องภายใน


โทรศัพท์ LG GT505 ของคุณมีกล้องถ่ายรูปตัวในขนาด 640x480 สำหรับการสนทนาทางวิดีโอและสำหรับการถ่ายภาพ

1. ในการสลับไปยังกล้องถ่ายรูปตัวใน ให้แตะที่  แล้วเลือก **สลับกล้อง** จากเมนูตัวเลือกอย่าง
2. หลังจากผ่านไปสักครู่ คุณจะเห็นภาพตัวคุณเองอยู่ในช่องมองภาพในการถ่ายภาพ ให้กดปุ่มด้านข้างของโทรศัพท์ตามปกติ

**เคล็ดลับ!** กล้องภายในมีการตั้งค่าที่น้อยกว่าเนื่องจากไม่มีแฟลช และการปรับความไว คุณยังสามารถเปลี่ยนขนาดภาพ, เอฟเฟกต์สี, คุณภาพของภาพ, ความสมดุลแสง และตั้งเวลาถ่ายภาพได้โดยแตะที่  แบบเดียวกับที่ใช้กล้องหลัก





1. หลังจากที่คุณถ่ายภาพแล้ว เครื่องจะแสดงตัวเลือกทั้งหมดเหมือนกับการถ่ายภาพด้วยกล้องหลัก
2. ในการกลับไปยังกล้องหลัก ให้แตะที่  แล้วเลือก **สลับกล้อง** จากเมนูตัวเลือกอย่างภาพ

## การดูรูปภาพที่บันทึกไว้

1. คุณสามารถเข้าดูรูปภาพที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูปได้ เพียงแตะที่  และคลังภาพของคุณจะปรากฏบนหน้าจอ

# กล้องวิดีโอ


## การถ่ายวิดีโอ

1. กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์ค้างไว้
2. หรือแตะที่  ในช่องมองภาพในโหมดกล้องถ่ายรูปเพื่อสลับเป็นโหมดวิดีโอ
3. ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
4. ให้ถือโทรศัพท์ในแนวนอนและหันไปทางสิ่งที่จะถ่าย
5. กดปุ่มถ่ายภาพหนึ่งครั้งเพื่อเริ่มการบันทึก
6. **Rec** จะปรากฏขึ้นที่ด้านบนของช่องมองภาพ และตัวตั้งเวลาทางด้านล่างเพื่อแสดงระยะเวลาของวิดีโอของคุณ
7. ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  และเริ่มบันทึกต่อโดยเลือก 
8. แตะที่  บนหน้าจอ หรือกดปุ่มถ่ายภาพซ้ำอีกครั้งเพื่อหยุดการบันทึก

## หลังการถ่ายวิดีโอ

ภาพนิ่งที่แสดงวิดีโอของคุณจะปรากฏขึ้นบนหน้าจอ ชื่อของวิดีโอจะแสดงที่ด้านล่างของหน้าจอ พร้อมทั้งไอคอนสี่ไอคอนทางด้านขวาของหน้าจอ

 **แตะเพื่อเล่นวิดีโอ**


 **แตะเพื่อส่งรูปภาพเป็นข้อความ, อีเมล หรือ บลูทูธ**  
โปรดดูที่ การส่งข้อความ และการส่งและการรับไฟล์โดยใช้บลูทูธ


**หมายเหตุ:** การดาวน์โหลด MMS ขณะอยู่ในเครือข่ายโรมมิ่งอาจมีค่าใช้จ่ายเพิ่มเติม


 **แตะเพื่อใช้ภาพนี้เป็นพื้นหลัง**

 **แตะเพื่อแก้ไขชื่อของภาพที่เลือก**

 **แตะเพื่อกลับไปเมนูก่อนหน้า**


 **แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะที่ **ใช่** ของมองภาพจะปรากฏขึ้นอีกครั้ง**

 **แตะเพื่อถ่ายภาพวิดีโออื่นต่อทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้**

 **แตะเพื่อดुरुรูปภาพที่บันทึกไว้และคลังภาพวิดีโอ**




# กล้องวิดีโอ
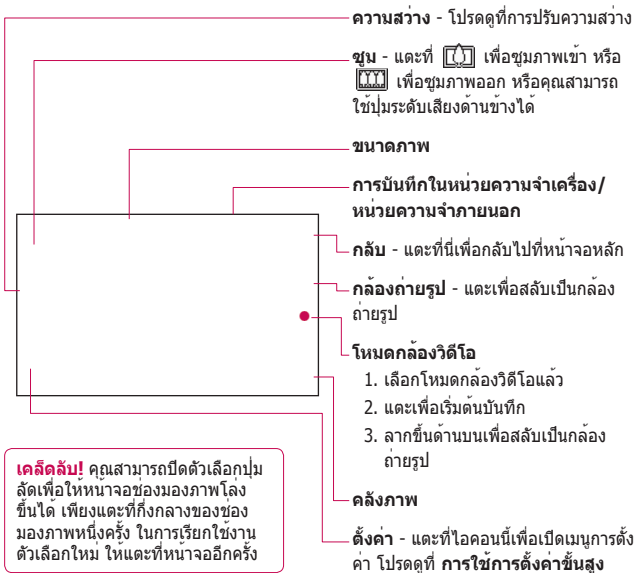
## ทำความรู้จักกับช่องมองภาพ



## การปรับการรับแสง

การรับแสงเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืดในภาพ ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมืด ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า

1. แตะที่ 
2. เลื่อนตัวบ่งชี้การรับแสงตามแถบไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงลดลงและมืดมากขึ้น หรือไปทางด้าน  เพื่อให้ได้ภาพที่มีการรับแสงสูงขึ้นและคมชัดยิ่งขึ้น

## การใช้การตั้งค่าขั้นสูง

ให้ใช้ช่องมองภาพ แล้วแตะที่ **ตั้งค่า** เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด หลังจากเลือกตัวเลือก ให้แตะปุ่ม **ตกลง**

**สลับกล้อง** - สลับไปยังกล้องภายในของ LG GT505 เพื่อบันทึกวิดีโอของตัวเอง โปรดดูที่ **การใช้กล้องถ่ายวิดีโอตัวใน**

**ขนาดวิดีโอ** - เปลี่ยนขนาดของวิดีโอเพื่อประหยัดพื้นที่หน่วยความจำ โปรดดูที่ **การเปลี่ยนขนาดของภาพวิดีโอ**

**โหมดถ่ายภาพ** - เลือกระหว่าง **อัตโนมัติ** หรือ **โหมดกลางคืน**

**เอฟเฟกต์สี** - เลือกโทนสีเพื่อใช้กับรูปภาพมุมมองใหม่ โปรดดูที่ **การเลือกโทนสี**

# กล้องวิดีโอ

**ความสมดุลแสง** - สมดุลแสงจะช่วยให้มั่นใจได้ว่าส่วนที่เป็นสีขาวที่ปรากฏในวิดีโอจะสวยสมจริง เพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน เลือกระหว่าง **อัตโนมัติ, หลอดไฟ, แสงอาทิตย์, ฟลูออเรสเซนต์** หรือ **มิดครีม**

**คุณภาพของวิดีโอ** - เลือกระหว่าง **ละเอียดมาก, ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของวิดีโอก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่งหมายความว่า คุณจะสามารถจัดเก็บวิดีโอในหน่วยความจำของเครื่องได้น้อยลง

**ระยะเวลา** - ตั้งค่าจำกัดระยะเวลาสำหรับวิดีโอของคุณ เลือกระหว่าง **ปกติ** และ **MMS** เพื่อจำกัดขนาดวิดีโอให้สามารถส่งเป็น MMS ได้

## เคล็ดลับ!

หากคุณเลือกระยะเวลาแบบ MMS การเลือกคุณภาพของภาพที่ต่ำลง จะช่วยให้คุณถ่ายภาพวิดีโอได้ยาวนานขึ้น

**ความจำที่ใช้** - เลือกว่าจะบันทึกวิดีโอไว้ที่หน่วยความจำเครื่องหรือหน่วยความจำภายนอก

**เสียง** - เลือก ปิดเสียง เพื่อบันทึกวิดีโอโดยไม่มีเสียง


**ชอนไอคอน** - เลือกว่าจะชอนไอคอนในเมนูกล้องถ่ายรูปโดยอัตโนมัติหรือกำหนดด้วยตนเอง

**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด

## การเปลี่ยนขนาดของภาพ วิดีโอ

จำนวนพิกเซลยิ่งมากขึ้นเท่าใด  
ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น  
ซึ่งหมายถึงการใช้เนื้อที่หน่วยความ  
จำมากขึ้น

หากคุณต้องการเก็บวิดีโอไว้ในโพร  
ดักท์ให้มากขึ้น คุณสามารถเปลี่ยน  
ความละเอียดเพื่อทำให้ไฟล์มีขนาด  
เล็กลงได้

1. การใช้ช่องมองภาพ ให้แตะที่  ในมุมซ้าย
2. เลือก **ขนาดวิดีโอ** จากเมนูดู  
ตัวอย่าง
3. เลือกค่าพิกเซลจากตัวเลือกต่อ  
ไปนี้:


**320x240** - ขนาดภาพเล็กของ  
ขนาดไฟล์จึงเล็กลงด้วย ซึ่งเป็นวิธี  
การที่ช่วยประหยัดพื้นที่หน่วย  
ความจำ

**176x144** - ขนาดภาพเล็กที่สุด  
ขนาดไฟล์จึงเล็กที่สุดด้วย

4. แตะที่ไอคอนย้อนกลับเพื่อกลับไป  
ที่ช่องมองภาพ

**เคล็ดลับ!** โปรดดูข้อมูลเกี่ยวกับ  
ซอฟต์แวร์การแปลงรูปแบบวิดีโอ  
ได้จากแผ่นซีดีที่คุณได้รับมา  
พร้อมกับ GT505

## การเลือกโทนสี



1. การใช้ช่องมองภาพ ให้แตะที่  ในมุมซ้าย
2. เลือก **เอฟเฟกต์สี**  
จากเมนูดูตัวอย่าง
3. โทนสีมีตัวเลือกทั้งหมด 6 ตัวเลือก
4. ให้แตะที่โทนสีที่คุณต้องการใช้

**เคล็ดลับ!** คุณสามารถเปลี่ยน  
ภาพวิดีโอจากภาพสีเป็นภาพขาว  
ดำหรือซีเปียได้ แต่คุณไม่สามารถ  
เปลี่ยนจากภาพขาวดำหรือ  
ซีเปียเป็นภาพสีได้

# กล้องวิดีโอ


## การใช้กล้องถ่ายวิดีโอตัวใน

โทรศัพท์ LG GT505 ของคุณมีกล้องถ่ายรูปตัวในขนาด 320x240 สำหรับการสนทนาทางวิดีโอและสำหรับการบันทึกวิดีโอ

1. ในการสลับไปยังกล้องถ่ายรูปตัวใน แตะที่  แล้วเลือก **สลับกล้อง**
2. หลังจากผ่านไปสักครู่ คุณจะเห็นภาพตัวคุณเองอยู่ในช่องมองภาพในการเริ่มบันทึกภาพ ให้กดปุ่มถ่ายภาพตามปกติ และกดอีกครั้งเพื่อหยุดการบันทึก
3. หลังจากที่ถ่ายภาพวิดีโอแล้ว เครื่องจะแสดงตัวเลือกทั้งหมด เหมือนกับการถ่ายวิดีโอด้วยกล้องหลัก
4. ในการกลับไปยังกล้องถ่ายรูปหลัก ให้แตะที่  แล้วแตะ **สลับกล้อง**


**เคล็ดลับ!** คุณยังสามารถเปลี่ยนขนาดภาพ, เอฟเฟกต์สี, ความสมดุลแสง และคุณภาพได้โดยแตะที่ **ตั้งค่า** แบบเดียวกับที่ใช้กล้องหลัก

## การดูวิดีโอที่บันทึกไว้

1. ในช่องมองภาพ ให้แตะที่ 
2. คลังภาพของคุณจะปรากฏบนหน้าจอ
3. แตะที่วิดีโอหนึ่งครั้งเพื่อแสดงวิดีโอที่ด้านหน้าสุดของคลังภาพ วิดีโอที่เลือกจะเล่นอัตโนมัติ


# รูปภาพและวิดีโอ

## การดูรูปภาพและวิดีโอ

1. แตะที่  บนหน้าจอดูตัวอย่างในกล้องถ่ายรูป
2. คลังภาพของคุณจะปรากฏบนหน้าจอ
3. แตะที่วิดีโอหรือรูปภาพเพื่อเปิดทั้งไฟล์

**เคล็ดลับ!** กดปุ่มไปทางซ้ายหรือทางขวาเพื่อดูรูปภาพหรือวิดีโออื่น

### **เคล็ดลับ!**

ในการลบรูปภาพหรือวิดีโอ ให้เปิดไฟล์นั้นๆ แล้วเลือก  แตะที่ **ใช่** เพื่อยืนยัน

## การใช้การซูมขณะดูรูปภาพ

เมื่อดูรูปภาพ คุณสามารถซูมเข้าและซูมออกได้

## การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะที่กำลังเล่น ให้แตะที่แถบระดับเสียงที่ด้านล่างของหน้าจอหลังจากกดสัญลักษณ์ลำโพง หรือใช้ปุ่มระดับเสียงที่ด้านข้างของโทรศัพท์

## การตั้งค่ารูปภาพเป็นพื้นหลัง

1. แตะที่รูปภาพที่คุณต้องการตั้งค่าเป็นพื้นหลังเพื่อเปิด
2. แตะที่หน้าจอเพื่อเปิดเมนูตัวเลือก
3. แตะที่เมนูหน้าจอหลัก
4. คุณสามารถซูมเข้าและออกและย้ายส่วนที่ครอบของรูปภาพได้โดยใช้ภาพขนาดย่อที่ด้านล่างของหน้าจอ

# รูปภาพและวิดีโอ

## การแก้ไขรูปภาพ

คุณสามารถใช้คุณสมบัติที่ยอดเยียมมากมายในการเปลี่ยนแปลงรูปภาพ เพิ่มหรือทำให้รูปภาพมีชีวิตชีวาขึ้น

1. ให้เปิดรูปภาพที่คุณต้องการแก้ไข แล้วแตะที่  เพื่อแสดงตัวเลือก

2. แตะที่ไอคอนเพื่อปรับรูปภาพของคุณ:



กรอบรูปภาพของคุณ เลือกพื้นที่การครอบภาพแบบสี่เหลี่ยมหรือวงกลม แล้วเลื่อนนิ้วของคุณไปตามหน้าจอเพื่อเลือกพื้นที่



วาดลายเส้นบนรูปภาพของคุณด้วยมือ เลือกความหนาของเส้นจาก 4 ตัวเลือก จากนั้นเลือกสีที่คุณต้องการใช้



การเพิ่มตัวหนังสือลงบนรูปภาพ โปรดดูที่ การเพิ่มข้อความลงในรูปภาพ



ตกแต่งรูปภาพของคุณด้วยสแตมป์ เลือกจากสแตมป์ต่างๆ แล้วแตะบริเวณที่คุณต้องการวาง



ลบการแก้ไขที่คุณทำไว้ในรูปภาพ คุณสามารถเลือกขนาดของยางลบที่คุณจะใช้ได้



แตะเพื่อกลับไปที่คุณภาพ



บันทึกการเปลี่ยนแปลงที่ทำไว้ในรูปภาพ เลือกเพื่อบันทึกการเปลี่ยนแปลงเป็น **อัลบั้ม** ใหม่ หรือ **ไฟล์ใหม่** หากคุณเลือก **ไฟล์ใหม่** ให้ป้อนชื่อไฟล์




ลบการแก้ไขที่คุณทำไว้ในรูปภาพ



แตะเพื่อเปิดตัวเลือกเอฟเฟกต์เพิ่มเติม ได้แก่ หมุน นอก จากนั้น ยังมีตัวเลือกการแก้ไขขั้นสูงเพิ่มเติมอีก โปรดดูที่ การเน้นสี และ การสลับสีในรูปภาพ




แตะเพื่อใช้ตัวเลือกเอฟเฟกต์กับรูปภาพ



 ซึ่งช่วยปรับการถ่ายภาพ  
โดยใช้สี ความสว่างและอื่นๆ  
โดยอัตโนมัติ





## การเพิ่มข้อความลงในรูปภาพ

1. จากหน้าจอแก้ไข ให้แตะที่ 
2. เลือก **ตัวอักษร** เพื่อเพิ่มข้อความแบบไม่มีกรอบหรือเลือกรูปทรงลูกโป่งแสดงคำพูด
3. บั่นข้อความโดยใช้ปุ่มกดแล้วแตะที่ **บันทึก**
4. เลื่อนข้อความโดยแตะที่ข้อความแล้วเลื่อนไปยังบริเวณที่คุณต้องการ

## การเพิ่มเอฟเฟกต์ลงในรูปภาพ




1. จากหน้าจอแก้ไข ให้แตะที่ 
2. คุณสามารถใช้ตัวเลือกต่างๆ กับรูปภาพ
3. ในการเลือกทำเอฟเฟกต์เพียงแค่แตะที่ 

## การครอบรูปภาพ



1. จากหน้าจอแก้ไข ให้แตะที่ 
2. เลือกรูปร่างที่คุณต้องการใช้เพื่อครอบรูปภาพ
3. ลากกรอบไปที่พื้นที่ที่คุณต้องการครอบ
4. เมื่อคุณเลือกเสร็จเรียบร้อยแล้ว ให้แตะที่ 

# รูปภาพและวิดีโอ

## การเน้นสีในรูปภาพ


1. จากหน้าจอแก้ไข ให้แตะที่ 
2. เลือก **เน้นสี**
3. เลือกส่วนหนึ่งส่วนใดของภาพ รอยเส้นจะปรากฏรอบสิ่งต่างๆ ในบริเวณนั้นที่มีสีเหมือนกัน หรือคล้ายคลึงกัน ตัวอย่างเช่น ผมหรือเสื้อ
4. ปรับความหนักเบาในการเน้นโดยแตะที่  และเลื่อนเครื่องหมายในแถบความหนักเบาขึ้นหรือลง
5. แตะที่ **ตกลง**
6. สีทั้งหมดจะหายไปจากรูปภาพ และหายไปจากบริเวณที่ทำเครื่องหมายสำหรับการเน้นสีไว้
7. เลือก  เพื่อบันทึกการเปลี่ยนแปลง

## การสลับสีในรูปภาพ

1. จากหน้าจอแก้ไข ให้แตะที่ 
2. เลือก **เปลี่ยนสี**
3. เลือกส่วนหนึ่งส่วนใดของภาพ รอยเส้นจะปรากฏรอบสิ่งต่างๆ ในบริเวณนั้นที่มีสีเหมือนกัน หรือคล้ายคลึงกัน ตัวอย่างเช่น ผมหรือเสื้อ
4. เลือกสี
5. กด **ตกลง**
6. ส่วนของภาพถ่ายที่เลือกไว้สำหรับการเน้นสีจะเปลี่ยนเป็นสีที่เลือกไว้แทน
7. เลือก  เพื่อบันทึกการเปลี่ยนแปลง

# มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์

ในการเข้าใช้งานเมนูมัลติมีเดีย ให้แตะที่  แล้วเลือก **ความบันเทิง** แตะที่ **เพิ่มข้อมูล** เพื่อเปิดรายการโพลเดอร์ที่จัดเก็บไฟล์มัลติมีเดียทั้งหมด

## รูปภาพ


### ภาพส่วนตัว

ประกอบด้วยรายการรูปภาพ รวมถึงภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

## เมนูตัวเลือกภาพส่วนตัว

ตัวเลือกที่มีอยู่ใน **ภาพส่วนตัว** จะขึ้นอยู่กับประเภทรูปภาพที่คุณเลือก ตัวเลือกทั้งหมดจะใช้ได้กับภาพที่คุณถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์ ส่วนตัวเลือก **ใช้เป็น**, **พิมพ์**, **เรียงตาม** และ **สถานะความจำ** จะมีสำหรับภาพเริ่มต้นเท่านั้น

## การส่งรูปภาพ



1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **เมนูส่วนตัว** แล้วเลือก **ภาพของฉัน**
3. เลือกรูปภาพที่คุณต้องการส่ง และแตะที่ **ส่ง** เลือกจาก **ข้อความ**, **อีเมล** หรือ **บลูทูธ**

## มัลติมีเดีย

4. หากคุณเลือก **ข้อความ** หรือ **อีเมล** รูปภาพจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **Bluetooth** เครื่องจะแสดงข้อความให้คุณเปิด Bluetooth และโทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งภาพไป

### การใช้รูปภาพ

คุณสามารถเลือกรูปภาพเพื่อใช้เป็นพื้นหลังและภาพพิกหน้าจอ หรือใช้เพื่อระบุผู้โทรเข้าได้

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **เมนูส่วนตัว** แล้วเลือก **ภาพของฉัน**
3. เลือกภาพแล้วแตะที่ 

4. แตะที่ **ใช้เป็น** แล้วเลือกจาก:
  - ธำนาจอ** - กำหนดพื้นหลังสำหรับหน้าจอหลัก
  - ภาพรายชื่อ** - กำหนดภาพให้กับบุคคลใดบุคคลหนึ่งในรายชื่อ เพื่อให้ภาพนั้นปรากฏขึ้นเมื่อบุคคลนั้นโทรมา



### การแก้ไขภาพของคุณ

ภาพที่มีแสงน้อยสามารถปรับได้โดยไม่ให้คุณภาพของรูปภาพลดลง

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **เมนูส่วนตัว** แล้วเลือก **ภาพของฉัน**
3. เลือกภาพ และแตะที่  แล้วแตะที่ **Smart Light**
4. แสงจะเปลี่ยนโดยอัตโนมัติ และคุณจะมีตัวเลือกในการบันทึกภาพใหม่



## การย้ายหรือคัดลอกรูปภาพ

คุณสามารถย้ายหรือคัดลอกรูปภาพระหว่างหน่วยความจำของโทรศัพท์กับการ์ดหน่วยความจำได้ เพื่อเป็นการเพิ่มพื้นที่หน่วยความจำในหน่วยความจำใดหน่วยความจำหนึ่ง หรือเพื่อป้องกันภาพมิให้สูญหาย

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **เมนูส่วนตัว** แล้วเลือก **ภาพของฉัน**
3. แตะที่  แล้วเลือก **ย้าย หรือ คัดลอก**
4. เลือกภาพ
5. เลือก **ย้าย หรือ คัดลอก**

## การสร้างภาพสไลด์

หากคุณต้องการดูภาพทั้งหมดบนโทรศัพท์ คุณสามารถสร้างภาพสไลด์เพื่อประหยัดเวลาในการเปิดและปิดภาพแต่ละภาพ



1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **เมนูส่วนตัว** แล้วเลือก **ภาพของฉัน**
3. แตะที่  แล้วเลือก **ภาพสไลด์**

## เสียง

โพลเดอร์ เสียงส่วนตัว ประกอบด้วยเสียงที่ดาวนโโหลด, เสียงเริ่มต้น และ การบันทึกเสียง จากขั้นตอนนี้ คุณสามารถจัดการ ส่ง หรือกำหนดเสียงเป็นเสียงเรียกเข้าได้

# มัลติมีเดีย


## การใช้เสียง

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **แฟ้มข้อมูล** แล้วแตะ **เสียงส่วนตัว**
3. เลือก **เสียงเริ่มต้น** หรือ **การบันทึกเสียง**
4. เลือกเสียงและเสียงจะเริ่มเล่น
5. แตะที่  และเลือก **ใช้เป็น**
6. เลือกจาก **เสียงเรียกเข้าแบบเสียง, เสียงเรียกเข้าแบบวิดีโอ, เสียงข้อความ, การเปิดเครื่อง หรือ การปิดเครื่อง**

## วิดีโอ

โฟลเดอร์ **วิดีโอส่วนตัว** จะแสดงรายการวิดีโอที่ดาวน์โหลด และวิดีโอที่ได้นับบันทึกไว้ในโทรศัพท์

## การดูวิดีโอ

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **แฟ้มข้อมูล** แล้วแตะ **วิดีโอส่วนตัว**
3. เลือกวิดีโอเพื่อเล่น

## การใช้ตัวเลือกขณะหยุดวิดีโอชั่วคราว

แตะที่  ขณะที่อยู่ในโหมดหยุดชั่วคราว และเลือกจาก:


**ส่ง** - ส่งวิดีโอในข้อความ, อีเมล หรือผ่านบลูทูธ

**ลบ** - ลบวิดีโอ

**ใช้เป็น** - ทำให้ตั้งค่าเสียงเรียกเข้าแบบเสียงหรือเสียงเรียกเข้าแบบวิดีโอได้ (ซึ่งสามารถจำกัดตามขนาดเฟรมวิดีโอได้)

**ข้อมูลไฟล์** - ดูรายละเอียดของชื่อขนาด วันที่ เวลา ประเภท ระยะเวลา ขนาด ป้องกันไฟล์ และลิขสิทธิ์


## การส่งวิดีโอคลิป

1. เลือกวิดีโอ แล้วแตะที่ 
2. แตะที่ **ส่ง** และเลือกจาก **ข้อความ, อีเมล, บลูทูธ**
3. หากคุณเลือก **ข้อความ** หรือ **อีเมล** วิดีโอคลิปจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ และโทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งวิดีโอไปให้

## เกมส์และแอปพลิเคชัน

คุณสามารถดาวน์โหลดเกมส์และแอปพลิเคชันใหม่ในโทรศัพท์ได้ เพื่อช่วยให้คุณสามารถเพลิดเพลินในยามว่าง

## การเล่นเกมส์

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **เกมส์&แอปฯ** แล้วแตะ **เกมส์**
3. เลือกและแตะที่เกมส์เพื่อเริ่มเล่น

## การใช้เมนูตัวเลือกของเกมส์

จากโพลเดอร์เกมส์&แอปฯ จะมีตัวเลือกต่างๆ ต่อไปนี้:


**เรียงตาม** - เรียงลำดับเกมส์และแอปพลิเคชันตาม **วันที่, ขนาด** หรือ **ชื่อข้อมูลไฟล์** - ดูข้อมูลเกมส์

## แฟลชคอนเทนท์

โพลเดอร์ข้อมูล Flash ประกอบด้วยไฟล์ SWF เริ่มต้นและที่ดาวน์โหลดทั้งหมด

# มัลติมีเดีย


## การดูไฟล์ SWF/SVG

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **แฟ้มข้อมูล** แล้วแตะ **แฟลชคอนเทนต์**
3. เลือกไฟล์ที่คุณต้องการดู

## เอกสาร

จากเอกสารในแฟ้มข้อมูล คุณสามารถดูไฟล์เอกสารทั้งหมดได้จากชั้นตอนนี้ คุณจะสามารดูไฟล์ Excel, Powerpoint, Word และ pdf ได้

## การดูไฟล์

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **แฟ้มข้อมูล** แล้วเลือก **เอกสาร**
3. เลือกเอกสาร และแตะที่ **ดู**

## การโอนไฟล์ไปที่โทรศัพท์



บลูทูธ คือวิธีการที่ง่ายที่สุดในการโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ คุณยังสามารถใช้ LG PC Suite ผ่านทางสายสำหรับซิงโครไนซ์ของคุณ

ในการโอนไฟล์โดยใช้บลูทูธ:





1. ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธที่โทรศัพท์และคอมพิวเตอร์ และทั้งคู่ต่างมองเห็นกันแล้ว
2. ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
3. เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
4. ไฟล์จะปรากฏอยู่ในโฟลเดอร์ **เอกสาร** หรือ **อื่นๆ**

## อื่นๆ

โฟลเดอร์ **อื่นๆ** ใช้สำหรับจัดเก็บไฟล์ประเภทอื่นๆ ที่ไม่ใช่รูปภาพ เสียง วิดีโอ เกมส์ หรือแอปพลิเคชัน ซึ่งมีวิธีใช้เดียวกับโฟลเดอร์ **เอกสาร** คุณจะพบว่าเมื่อคุณโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ ไฟล์เหล่านั้นจะปรากฏอยู่ในโฟลเดอร์ **อื่นๆ** มากกว่าจะปรากฏในโฟลเดอร์ **เอกสาร** หากเป็นเช่นนั้น คุณสามารถย้ายไฟล์เหล่านั้นได้ในการย้ายไฟล์จากโฟลเดอร์ **อื่นๆ** ไปที่โฟลเดอร์ **เอกสาร**:

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **แฟ้มข้อมูล** แล้วเลือก **อื่นๆ**
3. แตะที่ **ย้าย** แล้วแตะที่ **ย้าย** อีกครั้ง
4. เลือกไฟล์ แล้วแตะที่ 

## การสร้างภาพยนตร์

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **Muvee Studio**
3. แตะที่  เพื่อใส่รูปภาพ แตะที่ภาพที่ต้องการ แล้วเลือก **แทรก**
4. แตะที่แท็บสไลด์ทางด้านบนเพื่อเลือกสไลด์ภาพยนตร์
5. แตะที่แท็บเสียงทางด้านล่างของหน้าจอเพื่อเปลี่ยนเสียง เช่น ไฟล์ mp3
6. แตะที่ปุ่ม **เล่น** เพื่อดูภาพยนตร์ที่คุณสร้าง
7. แตะที่  แล้วแตะ **ลำดับการเล่น** เพื่อเปลี่ยนลำดับ
8. แตะที่  แล้วแตะ **บันทึกโลก** เพื่อเลือกตำแหน่งที่จะบันทึกภาพยนตร์ และแตะที่ **ระยะเวลา** เพื่อเลือกระหว่าง **ใช้บันทึก** และ **ใช้ส่ง**

# มัลติมีเดีย

9. ในการบันทึกภาพยนตร์ ให้กดปุ่มเล่น แล้วแตะที่ไอคอนบันทึกที่มุมซ้าย

## เพลง

LG GT505 มีเครื่องเล่นเพลงภายในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้

ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะที่  แล้วเลือก

### ความบันเทิง และ เพลง

จากขั้นตอนนี้ คุณสามารถเข้าใช้งานโพลเดออร์ต่างๆ ดังนี้:

**เล่นล่าสุด** - คุณสามารถฟังเพลงทั้งหมดที่คุณเล่นล่าสุดได้

**ทุกแทร็ค** - ประกอบด้วยเพลงทั้งหมดที่มีในโทรศัพท์

**ศิลปิน** - เบลาส์ดูรายการเพลงที่เก็บไว้ตามศิลปิน

**อัลบั้ม** - เบลาส์ดูรายการเพลงที่เก็บไว้ตามอัลบั้ม

**แนวเพลง** - เบลาส์ดูรายการเพลงที่เก็บไว้ตามแนวเพลง

**รายการ** - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

**สับเปลี่ยนแทร็ค** - คุณสามารถฟังเพลงโดยให้เครื่องสุ่มเล่นได้





## การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธหรือสายสำหรับซิงโครไนซ์

คุณยังสามารถใช้ LG PC Suite ได้ในการโอนไฟล์โดยใช้บลูทูธ:


1. ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และต่างมองเห็นกันแล้ว
2. เลือกไฟล์เพลงบนอุปกรณ์ แล้วเลือกเพื่อส่งทางบลูทูธ
3. เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
4. ไฟล์จะปรากฏขึ้นใน **เพลง > ทุกแทร็ค**

## การเล่นเพลง

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **เพลง** และ **ทุกแทร็ค**
3. เลือกเพลงที่ต้องการเล่น และแตะที่ **เล่น**
4. แตะที่ **||** เพื่อหยุดเล่นเพลงชั่วคราว
5. แตะที่  เพื่อข้ามไปยังเพลงถัดไป
6. แตะที่  เพื่อข้ามไปยังเพลงก่อนหน้า
7. แตะที่  เพื่อกลับไปเมนูเพลง

## การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณเองได้โดยการเลือกเพลงจาก **โพลเดอร์ ทุกแทร็ค**

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **เพลง** และ **รายการ**
3. แตะที่ **รายการเพลงใหม่** แล้วใส่ชื่อรายการเพลง และแตะที่ **บันทึก**
4. โพลเดอร์ทุกแทร็คจะปรากฏขึ้น แตะที่เพลงทั้งหมดที่คุณต้องการใส่ไว้ในรายการเพลง จะมีเครื่องหมายปรากฏอยู่ข้างชื่อเพลงเหล่านั้น
5. แตะที่ **เสร็จ**


ในการเล่นรายการเพลง

ให้เลือกรายการเพลง และแตะที่ **เล่น**

**หมายเหตุ:** ในการเพิ่มรายการเพลง อีกรายการ ให้แตะที่  จากนั้น รายการเพลงใหม่

# มัลติมีเดีย

## การลบรายการเพลง

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **เพลง** และ **รายการ**
3. แตะที่ **||** แล้วเลือก **ลบ** หรือ **ลบทั้งหมด** เพื่อลบรายการเพลงทั้งหมด

## การใช้วิทยุ

LG GT505 มีคุณสมบัติวิทยุ FM ดังนั้น คุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

**หมายเหตุ:** คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟัง (ช่องเสียบเดียวกับช่องเสียบอุปกรณ์ชาร์จ)

## การค้นหาสถานี



คุณสามารถตั้งสถานีวิทยุไว้ในโทรศัพท์ได้ โดยการค้นหาด้วยตนเองหรือโดยอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก

### ในการปรับตั้งอัตโนมัติ:


1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **วิทยุ FM** และ 
3. แตะที่ **สแกนอัตโนมัติ** และ **ใช้** สถานีที่พบจะถูกกำหนดไว้ในหมายเลขของสถานีในโทรศัพท์โดยอัตโนมัติ

**หมายเหตุ:** คุณยังสามารถค้นหาสถานีด้วยตนเองได้โดยใช้ และปุ่มหมุนที่แสดงอยู่ถัดจากความถี่วิทยุ

## การรีเซ็ตสถานี

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **วิทยุ FM** และ 
3. เลือก **รีเซ็ต** เพื่อรีเซ็ตของสถานีปัจจุบัน หรือเลือก **รีเซ็ตทั้งหมด** เพื่อรีเซ็ตของสถานีทั้งหมด



## การฟังวิทยุ

1. แตะที่  แล้วเลือก **ความบันเทิง**
2. แตะที่ **วิทยุ FM** แล้วแตะที่หมายเลขของสถานีที่คุณต้องการฟัง


**เคล็ดลับ!** ในการเพิ่มประสิทธิภาพการรับสัญญาณวิทยุ ให้ยึดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ

# สมุดบันทึก


## การเพิ่มเหตุการณ์ลงในปฏิทิน

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **ปฏิทิน**
2. เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
3. แตะที่  แล้วแตะ **เพิ่มเหตุการณ์**
4. แตะที่ **ประเภท** แล้วเลือกจาก **นัดหมาย**, **วันครบรอบ** หรือ **วันเกิด** ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่ม
5. สำหรับการนัดหมายและวันครบรอบ ให้ป้อนเวลาและวันที่ที่เหตุการณ์สิ้นสุดในช่องเวลาและวันที่ด้านล่างทั้งสองช่อง


6. หากคุณต้องการใส่หัวเรื่อง หรือบันทึกในเหตุการณ์ของคุณ ให้แตะที่ **บันทึก** แล้วพิมพ์ในบันทึกของคุณ
7. ตั้งค่า **เตือน** และ **ซ้ำ**
8. เลือก **บันทึก** และเหตุการณ์ของคุณจะบันทึกอยู่ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมายรอบสี่เหลี่ยมสีกำกับอยู่ และเสียงกริ่งจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์ เพื่อให้คุณไม่พลาดกำหนดต่างๆ

**เคล็ดลับ!** คุณสามารถกำหนดวันหยุดในปฏิทินได้ แตะที่วันแต่ละวันที่เป็นวันหยุดของคุณ แล้วแตะที่  และเลือก **ตั้งวันหยุด** วันเหล่านั้นจะมีเงาสีเขียวแสดงอยู่



## การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **สมุดบันทึก** เลือก **ตั้งค่า**
2. แตะที่ **ปฏิทิน** และเลือก **มุมมองเดือน** หรือ **มุมมองสัปดาห์**
3. **ตั้งค่า** **สัปดาห์เริ่มต้นเมื่อ**
4. แตะที่ **บันทึก** เพื่อยืนยันการเลือกของคุณ

## การเพิ่มรายการลงในสิ่งที่ต้องทำ

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **สมุดบันทึก**
2. เลือก **สิ่งที่ต้องทำ** และแตะที่ **เพิ่มสิ่งที่ต้องทำ**
3. กำหนดวันที่ของงาน เพิ่มบันทึก และเลือกลำดับความสำคัญ: **สูง**, **กลาง** หรือ **ต่ำ**
4. บันทึกงานโดยเลือก **บันทึก**

## การแบ่งปันงานที่ต้องทำ


1. จากหน้าจอหลัก ให้เลือก  แล้วเลือก **ยูทิลิตี้** และเลือก **สมุดบันทึก** เลือก **สิ่งที่ต้องทำ**
2. เลือกงานที่คุณต้องการแบ่งปัน แล้วแตะที่ 
3. เลือก **ส่ง** คุณสามารถเลือกแบ่งปันรายการที่ต้องทำเป็น **ข้อความตัวอักษร**, **ข้อความแจ้งเตือน**, **อีเมล** หรือ **บลูทูธ**

**เคล็ดลับ!** คุณสามารถสำรองข้อมูลและซิงโครไนซ์ปฏิทินของคุณกับคอมพิวเตอร์ได้



# สมุดบันทึก

## การใช้ตัวค้นหาวันที่

ตัวค้นหาวันที่เป็นเครื่องมืออำนวยความสะดวกที่ช่วยให้คุณสามารถคำนวณวันหลังจากที่ผ่านไปมาแล้วหลายวันได้ ตัวอย่างเช่น 60 วันจากวันที่ 10.10.07 คือวันที่ 09.12.2007 ซึ่งเหมาะสำหรับการรอกอยวันที่ครบกำหนด

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **สมุดบันทึก**
2. เลือก **ตัวค้นหาวันที่**
3. ในแท็บ **จาก** ให้กำหนดวันที่ต้องการ
4. ในแท็บ **หลัง** ให้กำหนดจำนวนวัน
5. **วันที่เป้าหมาย** จะปรากฏขึ้นด้านล่าง


## การตั้งเวลาการปลุก

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **ตั้งปลุก**
2. แตะที่ **เพิ่มการปลุก**
3. กำหนดเวลาที่ต้องการให้ส่งเสียงปลุก แล้วแตะที่ **บันทึก**
4. เลือกว่าคุณต้องการให้ส่งเสียงปลุกซ้ำ ทุกวัน, จันทร์ - ศุกร์, จันทร์ - เสาร์, เสาร์ - อาทิตย์, ยกเว้นวันหยุด หรือ เลือกวันใดคอนจะบ่งชี้วันที่คุณเลือก
5. เลือก **เสียงปลุก** เพื่อเลือกประเภทการปลุก
6. แตะที่ **เสียงกริ่งปลุก** แล้วเลือกเสียงกริ่ง ในการฟังเสียง ให้แตะที่ 
7. เพิ่มบันทึกสำหรับการปลุก

8. สุดท้าย คุณสามารถกำหนดรอบเวลาในการเลื่อนปลุกเป็น 5, 10, 20, 30 นาที, 1 ชั่วโมง หรือ ปิด
9. เมื่อคุณตั้งปลุกเสร็จแล้ว ให้แตะที่ **บันทึก**
10. ในการเปิดการปลุก คุณสามารถเลือกเลื่อนหรือหยุดได้

**เคล็ดลับ!** แตะที่ไอคอน เปิด/ปิดทางด้านขวาของการตั้งปลุก



## การเพิ่มบันทึก

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **สมุดบันทึก** เลือก **บันทึก**
2. แตะที่ **เพิ่มบันทึก**
3. พิมพ์บันทึก แล้วตามด้วย **บันทึก**
4. บันทึกของคุณจะปรากฏขึ้นบนหน้าจอ เมื่อคุณเปิดแอปพลิเคชัน **บันทึก** ในครั้งถัดไป

**เคล็ดลับ!** คุณสามารถแก้ไขบันทึกที่มีอยู่ได้ เลือกบันทึกที่ต้องการแก้ไข แล้วพิมพ์การเปลี่ยนแปลงของคุณ

## บันทึกเสียง

ใช้ เครื่องบันทึกเสียง เพื่อบันทึกเสียงเตือนความจำหรือเสียงอื่นๆ

1. แตะที่  แล้วเลือก **ยูทิลิตี้**
2. แตะที่ **บันทึกเสียง** แล้วเลือก  จากนั้นเลือกจาก:




**ตั้งค่า > ระยะเวลา** - กำหนดระยะเวลาในการบันทึก เลือกจาก **MMS, 1 นาที** หรือ **ไม่จำกัด**

**ตั้งค่า > คุณภาพ** - เลือกคุณภาพของเสียง เลือกจาก **ละเอียดมาก, ละเอียด** หรือ **ปกติ**

**ไปที่เสียง** - เปิดโพลเดอ์การบันทึกเสียงใน **เสียงส่วนตัว**


# สมุดบันทึก


## การบันทึกเสียงหรือเสียงพูด

1. แตะที่  แล้วเลือก **ยูทิลิตี้**
2. แตะที่ **บันทึกเสียง**
3. แตะที่  เพื่อเริ่มบันทึก
4. แตะที่  เพื่อจบการบันทึก
5. แตะที่  เพื่อฟังรายการที่บันทึก





## การส่งรายการบันทึกเสียง


1. เมื่อคุณบันทึกเสียงเสร็จแล้ว ให้แตะที่ 
2. แตะที่ **ส่ง** แล้วเลือกจาก **ข้อความ**, **อีเมล** หรือ **บลูทูธ** หากคุณเลือก **ข้อความ** หรือ **อีเมล** รายการที่บันทึกจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ

หมายเหตุ: หลังจากที่บันทึกเสียงเสร็จแล้ว ให้แตะที่  แล้วเลือก **ส่ง**, **ไฟล์**, **ลบ**, **ใช้เป็น** (เพื่อใช้เป็นเสียงเรียกเข้า), **ตั้งค่า** หรือ **ไปที่เสียง**


## การใช้เครื่องคิดเลข

1. จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **เครื่องมือ**
2. เลือก **เครื่องคิดเลข**
3. แตะที่ปุ่มตัวเลขเพื่อป้อนตัวเลข
4. สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x, ÷), แล้วตามด้วย =
5. สำหรับการคำนวณแบบซับซ้อน ให้แตะที่  และเลือกจาก **sin**, **cos**, **tan**, **deg**, **sec**, **csc**, **cot**, **rad**, **log**, **ln** หรือ **exp**

## การแปลงหน่วย



1. จากหน้าจอแสดงแดตช์บาย ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **เครื่องมือ**
2. เลือก **ตัวแปลงหน่วย**
3. เลือกว่าคุณจะแปลง **สกุลเงิน, พื้นที่, ความยาว, น้ำหนัก, อุณหภูมิ, ปริมาตร หรือ ความเร็ว**
4. จากนั้น คุณสามารถเลือกหน่วยและป้อนค่าที่คุณต้องการแปลงแล้วตามด้วยหน่วยที่คุณต้องการแปลงเป็น
5. ค่าผลลัพธ์ที่เกี่ยวข้องจะปรากฏขึ้นบนหน้าจอ

## การใช้นาฬิกาจับเวลา

1. จากหน้าจอแสดงแดตช์บาย ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **เครื่องมือ**
2. เลือก **นาฬิกาจับเวลา**
3. แตะที่ **เริ่ม** เพื่อเริ่มต้นตัวจับเวลา
4. แตะที่ **รอบ** หากคุณต้องการบันทึกกรอบเวลา
5. แตะที่ **หยุด** เพื่อหยุดตัวจับเวลา
6. แตะที่ **ต่อ** เพื่อเริ่มนาฬิกาจับเวลาใหม่ต่อจากเวลาที่หยุดไว้ **รีเซ็ต** เพื่อเริ่มต้นเวลาใหม่อีกครั้ง



# สมุดบันทึก


## การใส่ชื่อเมืองลงในเวลาทั่วโลก


1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **เครื่องมือ**
2. เลือก **เวลาโลก**
3. แตะที่ไอคอน  แล้วตามด้วย **เพิ่มเมือง** เริ่มพิมพ์ชื่อเมืองที่คุณต้องการและชื่อนั้นจะแสดงที่หน้าจอ
4. แตะที่เมืองเพื่อเลือก และเพิ่มในรายการเวลาทั่วโลก


## เพื่อนจ็อกกิ้ง


เมื่อเดิน, วิ่ง หรือจ็อกกิ้ง GT505 จะแสดงข้อมูลระดับวินาทีของระยะทางและเวลา และเก็บบันทึกการออกกำลังกายของคุณโดยใช้เทคโนโลยี GPS ขั้นสูง

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **เครื่องมือ**
2. เลือก **เพื่อนจ็อกกิ้ง**
3. แตะที่ << >> เพื่อตั้งระยะทางหรือเวลาของการจ็อกกิ้ง
4. คุณสามารถเปิดหรือปิดเสียงบี๊พได้
5. เมื่อเชื่อมต่อ GPS ปุ่มเริ่มจะสว่างขึ้น แตะที่  เพื่อเริ่ม

 - ปุ่มรีเซ็ต

 - ปุ่มเริ่ม

 - ปุ่มพัก

 - ปุ่มหยุด

เสียงบี๊พ - เสียงบี๊พของโทรศัพท์ตามช่วงระยะทางหรือรอบระยะเวลาช่วยคุณติดตามโดยไม่ต้องคอยดูหน้าจอ

# PC ซิงค์

## غامโหมดเสมอ

หากคุณตั้งค่า "غامโหมดเสมอ" เป็นค่าเริ่มต้น โทรศัพท์จะแสดงข้อความให้คุณเลือกประเภทของโหมด การเชื่อมต่อ USB ทุกครั้งที่คุณเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ผ่านสายเคเบิลข้อมูล หากคุณไม่ใช่ "غامโหมดเสมอ" โหมดการเชื่อมต่อจะเป็นโหมดที่คุณตั้งค่าด้วยตนเองในเมนู - ตั้งค่า - การเชื่อมต่อ - โหมด USB และโหมดของตัวเลือกที่เก็บข้อมูล, **PC Suite** หรือ **ซิงค์เพลง**

คุณสามารถซิงค์โครนซ์คอมพิวเตอร์กับโทรศัพท์ของคุณ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน รวมทั้งยังเป็นการสำรองข้อมูลไฟล์ที่ช่วยให้คุณสบายใจได้

## การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

1. จากหน้าจอหลัก ให้กดและเลือก **การเชื่อมต่อ**
2. เลือกโหมด **การเชื่อมต่อ USB** และคลิก **ตกลง**
3. ใส่แผ่นซีดีที่ให้มาด้วยในเครื่องคอมพิวเตอร์ คลิก LG PC Suite Installer ซึ่งจะปรากฏที่หน้าจอของคุณ
4. เลือกภาษาที่ต้องการใช้ในการติดตั้ง แล้วคลิกที่ **OK**
5. ปฏิบัติตามคำแนะนำบนหน้าจอ เพื่อให้ริชาร์ด LG PC Suite Installer เสร็จสมบูรณ์
6. เมื่อติดตั้งเสร็จเรียบร้อยแล้ว ไอคอน LG PC Suite จะปรากฏขึ้นบนเดสก์ท็อป

# PC ซิงค์

## การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

1. เชื่อมสาย USB ที่โทรศัพท์และคอมพิวเตอร์ของคุณ
2. ดับเบิลคลิกที่ไอคอน **LG PC Suite** บนเดสก์ทอปของคุณ
3. คลิกที่ **Connection Wizard** แล้วคลิก **USB**
4. คลิกที่ **Next** แล้วคลิก **Next** อีกครั้ง จากนั้นคลิก **Finish** โทรศัพท์และคอมพิวเตอร์ของคุณเชื่อมต่อกันเรียบร้อยแล้ว

## การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

1. เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
2. คลิกที่ไอคอน **Backup** แล้วเลือก **Backup** หรือ **Restore**

3. เลือกสำรองข้อมูล **Contents Data** หรือ **Phonebook/Schedule/ToDo/Memo Data** เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือเรียกคืนข้อมูล คลิก **OK**
4. ระบบจะสำรองข้อมูลของคุณ

## การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

1. เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
2. ให้คลิกไอคอน **Manage Files**
3. เอกสารทั้งหมด, แฟลชคอนเทนท์, ภาพ, เสียง และวิดีโอ ซึ่งคุณบันทึกไว้ในโทรศัพท์ของคุณจะปรากฏบนหน้าจอในโฟลเดอร์ **LG Phone**

**เคล็ดลับ!** การดูเนื้อหาของโทรศัพท์บนเครื่องคอมพิวเตอร์จะช่วยให้คุณสามารถจัดเรียงไฟล์จัดการเอกสาร และลบเนื้อหาที่คุณไม่ต้องการใช้อีกต่อไปได้

## การซิงโครไนซ์รายชื่อ

1. ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี
2. คลิกที่ไอคอน **Manage Contacts**
3. เครื่องคอมพิวเตอร์ของคุณจะอิมพอร์ตและแสดงรายชื่อทั้งหมดที่บันทึกไว้ในการ์ด USIM และโทรศัพท์
4. คลิกที่ **File** แล้วเลือก **Save** จากนั้น คุณสามารถเลือกตำแหน่งที่คุณต้องการบันทึกรายชื่อ

**หมายเหตุ:** ในการสำรองข้อมูลรายชื่อที่บันทึกไว้ใน USIM การคลิกที่โฟลเดอร์ซิมการ์ดทางด้านซ้ายมือของหน้าจอคอมพิวเตอร์ คลิกขวาที่รายชื่อและเลือก **Select all**, แล้วเลือก **Copy** หรือ **Move to phone memory** คลิกขวาที่รายชื่อของคุณแล้วเลือก **Copy to contact** จากนั้นคลิกที่โฟลเดอร์ **Handset** ทางด้านซ้ายมือของหน้าจอและหมายเลขทั้งหมดจะปรากฏขึ้น


## การซิงโครไนซ์ข้อความ

1. ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี
2. คลิกที่ไอคอน **Messages**
3. ข้อความในเครื่องคอมพิวเตอร์และโทรศัพท์ของคุณจะปรากฏขึ้นในโฟลเดอร์บนหน้าจอ
4. ใช้แถบเครื่องมือของหน้าจอเพื่อแก้ไขและจัดเรียงข้อความ

# PC ซิงค์

## การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล

โทรศัพท์ของคุณสามารถใช้เป็นอุปกรณ์เก็บข้อมูลได้ หากคุณมีการตั้งค่าหน่วยความจำติดตั้งไว้

1. เลิกการเชื่อมต่อเครื่องโทรศัพท์ของคุณออกจากคอมพิวเตอร์
2. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ตั้งค่า** และเลือก **ตั้งค่าโทรศัพท์**
3. เลือก **การเชื่อมต่อ** แล้วเลือกโหมด **การเชื่อมต่อ USB**
4. แตะที่ **ที่เก็บข้อมูล**
5. ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี โทรศัพท์ของคุณจะแสดงข้อความ: **ที่เก็บข้อมูล** และ **เชื่อมต่อ** อ้ายยกเลิกการเชื่อมต่อระหว่างการถ่ายโอนข้อมูล

6. โฟลเดอร์ดีสก์แบบถอดออกได้จะเปิดขึ้นโดยอัตโนมัติบนคอมพิวเตอร์ของคุณ 2 ไดรฟ์หากคุณมีการตั้งค่าหน่วยความจำสำรอง ซึ่งจะแสดงโฟลเดอร์ทั้งหมดในโทรศัพท์หรือการตั้งค่าหน่วยความจำของคุณ

**หมายเหตุ:** คุณต้องถอดสายเชื่อมต่อของโทรศัพท์ออกจากคอมพิวเตอร์ของคุณเพื่อเริ่มใช้ที่เก็บข้อมูล

**หมายเหตุ:** ที่เก็บข้อมูลจะสำรองข้อมูลเนื้อหาที่บันทึกไว้ในการตั้งค่าหน่วยความจำเท่านั้น โดยไม่บันทึกในหน่วยความจำเครื่อง ในการถ่ายโอนเนื้อหาของหน่วยความจำเครื่อง (เช่น รายชื่อ) คุณจำเป็นต้องซิงโครไนซ์โดยใช้ PC Sync

# เว็บไซต์

## การใช้โทรศัพท์เป็นโมเด็ม

GT505 ของคุณสามารถทำหน้าที่เป็นโมเด็มของเครื่องคอมพิวเตอร์ได้ จึงทำให้คุณสามารถส่งอีเมลและเข้าถึงอินเทอร์เน็ตได้ แม้ในเวลาที่คุณไม่ได้เชื่อมต่อโดยใช้สาย โดยคุณสามารถใช้สาย USB หรือบลูทูธก็ได้

## การใช้สายเคเบิล USB:

1. ตรวจสอบให้แน่ใจว่าคุณได้ติดตั้ง LG PC Suite บนเครื่องคอมพิวเตอร์ของคุณแล้ว
2. เชื่อมต่อ GT505 เข้ากับคอมพิวเตอร์ของคุณด้วยสายเคเบิล USB แล้วเริ่มซอฟต์แวร์ LG PC Suite
3. คลิกที่ **Communication** บนคอมพิวเตอร์ของคุณ จากนั้นคลิกที่ **Settings** และเลือก **Modem**

4. เลือก **LG Mobile USB Modem** และเลือก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
5. คลิกที่ **Connect** และเครื่องคอมพิวเตอร์ของคุณจะเชื่อมต่ออินเทอร์เน็ตผ่านโทรศัพท์ GT505 ของคุณ

## การใช้บลูทูธ:

1. ตรวจสอบให้แน่ใจว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** ทั้งคอมพิวเตอร์และโทรศัพท์ GT505
2. จับคู่เครื่องคอมพิวเตอร์ของคุณและ GT505 เพื่อให้ต้องระบุรหัสผ่านสำหรับการเชื่อมต่อ
3. ใช้ **Connection wizard** ใน LG PC Suite เพื่อสร้างการเชื่อมต่อบลูทูธ
4. คลิกที่ **Communication** บนคอมพิวเตอร์ของคุณ จากนั้นคลิก **Setting**


# เว็บไซต์

5. คลิกที่ **Modem**
6. เลือก **Standard Modem over Bluetooth link** แล้วคลิก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
7. คลิกที่ **Connect** และเครื่องคอมพิวเตอร์ของคุณจะเชื่อมต่ออินเทอร์เน็ตผ่านโทรศัพท์ GT505 ของคุณ

## อินเทอร์เน็ต

อินเทอร์เน็ต ช่วยให้คุณเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ไม่ว่าจะอยู่ที่ไหน หรือกำลังทำอะไร



## การเข้าใช้เว็บไซต์

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ ยูทิลิตี้ และเลือก **อินเทอร์เน็ต**
2. ในการเข้าถึงโฮมเพจของเบราว์เซอร์โดยตรง ให้เลือก **โฮม** หรือเลือก **ไปยัง URL** จากนั้นพิมพ์ URL ที่คุณต้องการ แล้วเลือก **เชื่อมต่อ**

หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

## การเพิ่มและการใช้บุ๊กมาร์ค

เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุ๊กมาร์คและบันทึกเว็บเพจได้


1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ **ยูทิลิตี้** และเลือก **อินเทอร์เน็ต**
2. เลือก **บุ๊กมาร์ค** รายการบุ๊กมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ
3. ในการเพิ่มบุ๊กมาร์คใหม่ ให้เลือก  แล้วแตะที่ **เพิ่มบุ๊กมาร์ค** ป้อนชื่อสำหรับบุ๊กมาร์ค แล้วตามด้วยป้อน URL
4. แตะที่ **บันทึก** บัญชีของคุณจะปรากฏขึ้นในรายการบุ๊กมาร์ค
5. ในการเข้าใช้งานบุ๊กมาร์ค เพียงแตะที่บุ๊กมาร์ค แล้วแตะที่ **เชื่อมต่อ** เครื่องจะเชื่อมต่อเข้ากับบุ๊กมาร์คของคุณ

## การใช้ RSS reader

RSS (Really Simple Syndication) เป็นกลุ่มรูปแบบ Web Feed ที่ใช้เพื่อเผยแพร่เนื้อหาที่ได้รับการอัปเดตเป็นประจำ เช่น รายการใน Blog, หัวข้อข่าว หรือ Podcast เอกสาร RSS ที่เรียกว่า Feed, Web Feed หรือ Channel จะมีสรุปเนื้อหาหรือข้อความเต็มจากเว็บที่เกี่ยวข้อง RSS ช่วยให้ทุกคนสามารถติดตามความเคลื่อนไหวของเว็บไซต์ที่ตนชื่นชอบด้วยระบบอัตโนมัติที่สะดวกกว่าการเฝ้าดูด้วยตนเอง ผู้ใช้สมัครใช้บริการ Feed โดยป้อนลิงค์ของ Feed ลงใน Reader หรือคลิกที่ไอคอน RSS ในเบราว์เซอร์ที่เปิดขั้นตอนการสมัครใช้บริการ Reader จะตรวจดู Feed ที่ผู้ใช้สมัครใช้บริการเป็นประจำเพื่อดูเนื้อหาใหม่ และดาวน์โหลดการอัปเดตต่างๆ ที่พบ


# เว็บไซต์

## การบันทึกเพจ


1. เข้าถึงเว็บเพจตามที่อธิบายไว้ข้างต้น
2. แตะที่  แล้วเลือกบันทึกเพจนี้
3. ป้อนชื่อสำหรับเว็บเพจเพื่อให้ง่ายต่อการจดจำ
4. แตะที่ บันทึก

**เคล็ดลับ!** เมนูนี้จะช่วยให้คุณสามารถแก้ไขชื่อของเพจที่คุณบันทึกไว้ ป้องกันหรือไม่ป้องกันบันทึกเดือนความจำบนหน้าจอ รวมถึงลบเพจที่บันทึกไว้ได้


## การเข้าใช้เพจที่บันทึกไว้

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ ยูทิลิตี้ และเลือก อินเทอร์เน็ต
2. เลือก บันทึกเพจ
3. เลือกเพจที่คุณต้องการดูและเพจจะเปิดขึ้น

## การดูประวัติข้อมูลเบราว์เซอร์

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ ยูทิลิตี้ และเลือก อินเทอร์เน็ต เลือก ประวัติ
2. เว็บเพจที่คุณเข้าใช้ล่าสุดจะปรากฏขึ้น ในการเข้าใช้เพจใดเพจหนึ่ง ให้เลือกรายการที่ต้องการ


## การเปลี่ยนการตั้งค่าเว็บ เบราว์เซอร์

1. จากหน้าจอหลัก ให้เลือก  แล้วแตะที่ ยูทิลิตี้ และเลือก อินเทอร์เน็ต เลือก ตั้งค่า
2. คุณสามารถเลือกแก้ไข โปรไฟล์, การตั้งค่าลักษณะ, แดช, คุกกี้, ระบบป้องกัน หรือ รีเซ็ตการตั้งค่า
3. คุณสามารถเปิดหรือปิดการตั้งค่าเหล่านี้ได้ง่ายๆ โดยการแตะที่ไอคอนสวิตช์

# ตั้งค่า

ภายในโพลเดอร์นี้ คุณสามารถปรับการตั้งค่าเพื่อให้โทรศัพท์ GT505 ดอบสนองการทำงานในแบบของคุณได้

## การเปลี่ยนการตั้งค่าหน้าจอ

- แตะที่  แล้วเลือก **ตั้งค่า**
- แตะที่ **ตั้งค่าการแสดงผล** แล้วเลือกจาก:
  - พื้นหลัง** - เลือกธีมสำหรับหน้าจอหลัก
  - โทรออก** - ปรับขนาดตัวเลขและสี
  - แบบอักษร** - ปรับขนาดแบบอักษร
  - ไฟหน้าจอ** - เลือกระยะเวลาการทำงานของไฟหน้าจอ

**หมายเหตุ:** การเปิดแบ็คไลท์เป็นเวลานานจะทำให้สิ้นเปลืองพลังงานแบตเตอรี่มากยิ่งขึ้น และคุณอาจจำเป็นต้องชาร์จโทรศัพท์ของคุณบ่อยยิ่งขึ้นด้วย

## ความสว่าง -

ปรับความสว่างของหน้าจอ

**ธีมเครื่อง** - เปลี่ยนรูปโฉมทั้งหน้าจอของคุณได้อย่างรวดเร็ว


**ข้อความต้อนรับ** - เลือกเปิดหรือปิด และป้อนข้อความต้อนรับเลือกภาพสำหรับ **สายเรียกเข้า**, **สายโทรออก**, **การเปิดเครื่อง** และ **การปิดเครื่อง**

- แตะที่ **บันทึก** เพื่อบันทึกการตั้งค่า

## การปรับแต่งโปรไฟล์ ของคุณ

คุณสามารถเปลี่ยนรูปแบบเสียงบนหน้าจอหลักของคุณได้อย่างรวดเร็วเพียงแตะที่ไอคอนสรุปสถานะ แล้วแตะที่แท็บรูปแบบเสียง


คุณสามารถใช้เมนูการตั้งค่าในการปรับแต่งการตั้งค่ารูปแบบแต่ละรายการได้

1. กด  แล้วเลือก **ตั้งค่า**
2. แตะที่ **โปรไฟล์** และเลือกรูปแบบที่คุณต้องการแก้ไข
3. จากนั้น คุณจะสามารเปลี่ยนตัวเลือกเสียง และการเตือนทั้งหมดที่มีอยู่ในรายการได้ รวมทั้ง **เสียงเรียกเข้าแบบเสียง/แบบวิดีโอ และ ระดับเสียง, แบบเสียงข้อความ และอื่นๆ**

## การเปลี่ยนการตั้งค่า โทรศัพท์

เพลิดเพลินกับอิสระในการปรับการทำงานของโทรศัพท์ GT505 ในแบบที่คุณต้องการได้

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

1. แตะที่  แล้วเลือก **ตั้งค่า**
2. แตะที่ **ตั้งค่าโทรศัพท์** แล้วเลือกจากรายการทางด้านล่าง  
**วันที่ & เวลา** - ปรับการตั้งค่าวันที่และเวลาของคุณ หรือเลือกให้เครื่องอัปเดตเวลาอัตโนมัติเมื่อคุณเดินทางหรือสำหรับการปรับเวลาตามฤดูกาล

# ตั้งค่า

**ประหยัดพลังงาน** - เลือก **เปิด** และ **ปิด** การตั้งค่าประหยัดพลังงานที่ตั้งมาจากโรงงาน

**ภาษา** - เปลี่ยนภาษาบนจอแสดงผลของ GT505 ของคุณ

**ล๊อคปุ่มอัตโนมัติ** - ล๊อคปุ่มกดอัตโนมัติในหน้าจอหลัก

**ระบบป้องกัน** - ปรับการตั้งค่าระบบป้องกัน ได้แก่ รหัส PIN และล๊อคเครื่อง (รหัสป้องกันคือ 0000)

**การเชื่อมต่อ** - โปรดดูที่เพจถัดไป

**สถานะความจำ** - โปรดดูที่

**การใช้ตัวจัดการหน่วยความจำ**

**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่าทั้งหมดเป็นค่าที่ตั้งมาจากโรงงาน

**ข้อมูล** - ดูข้อมูลทางด้านเทคนิคของโทรศัพท์ GT505

## การเปลี่ยนการตั้งค่าสัมผัส

แตะที่  แล้วเลือก **ตั้งค่า**

เลือก **การตั้งค่าสัมผัส**

ในการรีเซ็ตปุ่มสัมผัส

และทำให้ใช้งานง่ายขึ้น เลือก

### Touchpad calibration


และแตะที่เครื่องหมาย บันทึกการตั้งค่าเมื่อคุณพอใจแล้ว

เลือก **เอฟเฟกต์ทัชสกรีน**

เพื่อรีเซ็ต **ประเภท**, **โทน** และ **สี** ของการสัมผัส

## การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้นคุณจึงสามารถเพลิดเพลินกับโทรศัพท์ใหม่ของคุณได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่าให้ใช้เมนูนี้

แตะที่  แล้วเลือก **ตั้งค่า**  
แตะที่ **ตั้งค่าโทรศัพท์** แล้วแตะ  
**การเชื่อมต่อ**

**ตั้งค่าเครือข่าย** - โทรศัพท์ GT505  
จะเชื่อมต่อกับเครือข่ายที่ต้องการได้  
โดยอัตโนมัติ ในการเปลี่ยนการตั้งค่า  
เหล่านี้ ให้ใช้ตัวเลือกนี้

**โปรไฟล์อินเทอร์เน็ต** - ตั้งค่าโปร  
ไฟล์เพื่อเชื่อมต่ออินเทอร์เน็ต

**จุดเชื่อมต่อ** - ผู้ให้บริการระบบได้บัน  
ทึกรายชื่อนี้แล้ว คุณสามารถเพิ่มจุด  
เชื่อมต่อใหม่โดยใช้เมนูนี้ได้

**ประเภท GPS** - เลือก **GPS**  
**แบบช่วยเหลือ** หรือ **สแตนด์อะโลน**

## GPS

- เทคโนโลยี GPS ใช้ข้อมูลจากดาวเทียมที่โคจรรอบโลกเพื่อคนหาตำแหน่ง
- เครื่องรับจะประมาณระยะทางไปถึงดาวเทียม GPS ตามระยะเวลาที่สัญญาณมาเครื่องรับ จากนั้นใช้ข้อมูลดังกล่าวเพื่อระบุตำแหน่ง
- ซึ่งอาจใช้เวลาตั้งแต่สองสามวินาทีไปจนถึงหลายนาที
- Assisted GPS (A-GPS) ในโทรศัพท์รุ่นนี้จะใช้รับข้อมูลช่วยเหลือด้านตำแหน่งผ่านการเชื่อมต่อข้อมูลแพคเกจ
- ข้อมูลช่วยเหลือจะได้รับจากเซิร์ฟเวอร์บริการเฉพาะเมื่อจำเป็นเท่านั้น
- ถ่ายภาพจากสถานที่ที่คุณอยู่และแก้ไขรูปภาพด้วยข้อมูลเกี่ยวกับตำแหน่งของคุณ

**หมายเหตุ:** บริการ GPS มีความผิดพลาดที่ยอมรับได้ และไม่สามารถทำงานในอาคารหรือใต้ดินได้

# ตั้งค่า

**โหมดการเชื่อมต่อ USB** - ซิงโครไนซ์โทรศัพท์ GT505 โดยใช้ซอฟต์แวร์ LG PC Suite เพื่อคัดลอกไฟล์จากโทรศัพท์ หากคุณใช้ซิงค์เพลงกับ Windows Media Player ให้เลือกซิงค์เพลงในเมนูนี้ ซิงค์เพลงใช้ได้เฉพาะกับข้อมูลเพลงเท่านั้น หากคุณต้องการซิงโครไนซ์กับหน่วยความจำภายนอก คุณสามารถใช้ 'หน่วยความจำภายนอก' เป็นที่เก็บหลัก หากคุณต้องการซิงโครไนซ์กับหน่วยความจำภายใน คุณสามารถใช้ 'หน่วยความจำภายใน' เป็นที่เก็บหลัก


**บริการ Synch** - ฟังก์ชันการซิงค์เซิร์ฟเวอร์จะซิงโครไนซ์ข้อมูลในโทรศัพท์กับข้อมูลในเซิร์ฟเวอร์ เช่น ข้อมูลที่อยู่ของรายชื่อ รายการนัดหมาย รายการสิ่งที่ต้องทำ และรายการบันทึกโดยผ่านเครือข่ายไร้สาย

**การตั้งค่าสตรีมมิ่ง** - ผู้ให้บริการระบบไดมัมที่กข้อมูลนี้แล้ว คุณสามารถแก้ไขได้หากต้องการ

**การตั้งค่า Java** - ใช้ตั้งค่าโปรไฟล์

## การใช้ตัวจัดการหน่วยความจำ

GT505 ของคุณมีหน่วยความจำให้เลือกสามแบบ: โทรศัพท์, USIM การ์ด และการ์ดหน่วยความจำภายนอก (คุณอาจต้องซื้อการ์ดหน่วยความจำแยกต่างหาก) คุณสามารถใช้ตัวจัดการหน่วยความจำในการกำหนดว่าในแต่ละหน่วยความจำใช้หน่วยความจำไปเท่าใด และดูว่ามีพื้นที่ว่างเหลือเท่าใด

แตะที่  แล้วตามด้วย **ตั้งค่า** เลือก **ตั้งค่าโทรศัพท์** แล้วเลือก **สถานะความจำ**

**ความจำเครื่อง** - ดูหน่วยความจำที่มีในโทรศัพท์ GT505 สำหรับรูปภาพ, เสียง, วิดีโอ, แฟลช, MMS, อีเมล, แอปพลิเคชัน Java และอื่นๆ

**ความจำสำรอง** - ดูหน่วยความจำที่มีในเครื่องสำหรับ SMS, รายชื่อ, ปฏิทิน, สิ่งที่ต้องทำ, บันทึก, เตือน, ข้อมูลการโทร, บุคมาเรค และรายการเบ็ดเตล็ดอื่นๆ

**ความจำ USIM** - ดูหน่วยความจำที่มีใน USIM การ์ด

**หน่วยความจำการ์ด** - ดูหน่วยความจำที่มีในการ์ดหน่วยความจำภายนอก (คุณต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

**การตั้งค่าที่เก็บหลัก** - เลือกตำแหน่งในการบันทึกรายการที่ต้องการ


## การใช้โหมด Flight

เปิดโหมด Flight โดยการเลือก  แล้วเลือก **ตั้งค่า** และที่ **โปรไฟล์** และเลือก **โหมด Flight** ในโหมด Flight คุณจะไม่สามารถโทรออก เชื่อมต่ออินเทอร์เน็ต ส่งข้อความ หรือใช้ Bluetooth ได้

## การส่งและการรับไฟล์โดยใช้บลูทูธ

บลูทูธเป็นวิธีในการส่งและรับไฟล์ที่ดีโดยไม่จำเป็นต้องต่อสาย ซึ่งสามารถเชื่อมต่อได้อย่างรวดเร็วและง่ายดาย คุณยังสามารถเชื่อมต่อกับชุดหูฟังบลูทูธเพื่อโทรออกและรับสายได้

### ในการส่งไฟล์:

1. เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ หรือเพลง
2. แตะที่  จากนั้นเลือก **ส่ง** เลือก **บลูทูธ**
3. แตะที่ **ใช่** เพื่อเปิดบลูทูธ
4. หากคุณจับคู่อุปกรณ์บลูทูธแล้ว โทรศัพท์ GT505 จะไม่ค้นหาอุปกรณ์บลูทูธอื่นโดยอัตโนมัติ หากคุณยังไม่จับคู่อุปกรณ์บลูทูธ โทรศัพท์ GT505 จะค้นหาอุปกรณ์อื่นๆ ที่ใช้บลูทูธภายในรัศมี
5. เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป แล้วแตะที่ **เลือก**
6. ไฟล์ของคุณจะถูกส่งออกไป


# ตั้งค่า

**เคล็ดลับ!** คอยเฝ้าดูแถบแสดง  
ความคืบหน้าเพื่อให้แน่ใจว่าไฟล์  
ของคุณถูกส่งแล้ว

## ในการรับไฟล์:

1. ในการรับไฟล์ คุณต้องตั้งค่า Bluetooth เป็น **เปิด** และ **มองเห็นได้** โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับ **การเปลี่ยนการตั้งค่าบลูทูธ** ที่ด้านล่าง
2. เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และที่ **ใช่** เพื่อรับไฟล์
3. คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว และคุณสามารถเลือกเพื่อดูไฟล์หรือ **ใช่** เป็นภาพพื้นหลังได้ โดยทั่วไป ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมในแฟ้มข้อมูล

## การเปลี่ยนการตั้งค่าบลูทูธ:

- 1.แตะที่  และเลือก **ตั้งค่า**
- 2.เลือก **บลูทูธ** แล้วแตะที่  และเลือก **ตั้งค่า**

ทำการเปลี่ยนแปลง:

**การมองเห็นเครื่อง** - เลือกว่าจะมองเห็นได้ หรือ **ซ่อน** หรือ **แสดง 1 นาที**

**ชื่อเครื่องของฉัน** -

ป้อนชื่อโทรศัพท์ GT505 ของคุณ  
**บริการที่รองรับ** - แสดงฟังก์ชันบลูทูธทั้งหมดที่โทรศัพท์ของคุณสนับสนุน

**แอดเดรสส่วนตัว** - แสดงแอดเดรสบลูทูธ

## การจับคู่กับอุปกรณ์บลูทูธอื่น

โดยการจับคู่โทรศัพท์ GT505 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้ ซึ่งหมายความว่าอุปกรณ์ที่จับคู่ด้วยก็จะปลอดภัยมากขึ้น

1. ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู **ตั้งค่า**
2. แตะที่ **ค้นหา**
3. โทรศัพท์ GT505 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ
4. เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่าน จากนั้นให้แตะที่ **ตกลง**
5. โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นซึ่งคุณควรป้อนรหัสผ่านเดียวกัน
6. การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

## การใช้ชุดหูฟังบลูทูธ

1. ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้**
2. ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ
3. แตะที่ **ถามเสมอ** หรือ **อนุญาตโดยไม่ถาม** และแตะที่ **ใช่** เพื่อเชื่อมต่อทันที โทรศัพท์ GT505 จะสลับเป็นรูปแบบชุดหูฟังโดยอัตโนมัติ

# Wi-Fi

## Wireless Manager

ให้คุณจัดการการเชื่อมต่อ Wi-Fi Internet และ Bluetooth ในเครื่องของคุณ โดยให้โทรศัพท์เชื่อมต่อเครือข่ายไร้สายในท้องถิ่นหรือเข้าใช้อินเทอร์เน็ตแบบไร้สาย Wi-Fi เร็วกว่าและมีช่วงกว้างกว่าเทคโนโลยีไร้สาย Bluetooth

## หมายเหตุ: GT505

สนับสนุนการเข้ารหัส WEP, WPA-PSK/2 ไม่ใช่การเข้ารหัส EAP ถ้าผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณตั้งค่าการเข้ารหัสสำหรับการรักษาความปลอดภัยไว้ คุณต้องป้อนรหัสในหน้าต่างป๊อปอัพ หากไม่ได้มีการตั้งค่าการเข้ารหัสไว้ หน้าต่างป๊อปอัพนี้จะไม่ปรากฏขึ้น หากคุณไม่ทราบรหัส คุณต้องขอรหัสจากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณ

## 1. วิธีการตั้งค่า Wi-Fi

1. เปิด Wi-Fi
2. ค้นหา AP (จุดเชื่อมต่อ)
  - ค้นหาว่า AP ไດใช้เชื่อมต่อได้บ้าง
3. เชื่อมต่อ AP
  - เชื่อมต่อ AP ที่ต้องการในรายการค้นหา AP
  - หาก AP คือประเภทการรักษาความปลอดภัย WEP หรือ WPA-PSK/2 ให้ป้อนรหัสความปลอดภัย

## 2. การสนับสนุนโปรไฟล์เครือข่าย Wi-Fi

1. การสนับสนุนโปรไฟล์ Wi-Fi (การเชื่อมต่อกับ AP ที่ใช้บ่อยหรือ AP ชอน)
  - 1) หาก AP ไม่ปรากฏในรายการค้นหา อาจเชื่อมต่อกับ AP นั้นได้โดยบันทึก AP นั้นเป็นโปรไฟล์

- 2) การบันทึก AP ที่ใช้บ่อยเป็นโปรไฟล์ช่วยให้สะดวกในการบ่อนรหัสความปลอดภัยเมื่อเชื่อมต่อกับ AP ที่มีประเภทการรักษาความปลอดภัยดังกล่าว
  - 3) หาก AP นั้นไม่สนับสนุน DHCP อาจเชื่อมต่อกับ AP ได้โดยใช้ IP คงที่
2. คำอธิบายฟิลด์แต่ละฟิลด์ในโปรไฟล์ Wi-Fi
    - 1) ชื่อเครือข่าย: SSID (ID)
    - 2) ประเภทการรักษาความปลอดภัย: สนับสนุน WEP, WPA-PSK/2
    - 3) รหัสความปลอดภัย:  
บันทึกรหัสความปลอดภัย
    - 4) การตั้งค่า IP/DNS: ใช้สำหรับตั้งเป็นไดนามิกหรือคงที่ได้ขึ้นอยู่กับ การสนับสนุน DHCP ของ AP หากคุณตั้งค่าเป็นคงที่ ให้ป้อนค่าฟิลด์ของ IP แอดเดรส และเซิร์ฟเวอร์ DNS เพื่อเชื่อมต่อกับ IP คงที่เมื่อพยายามเชื่อมต่อ
3. การบันทึกโปรไฟล์ Wi-Fi
    - 1) เลือกเครือข่ายที่บันทึกไว้จากเมนูตัวเลือกจากนั้นเลือกเพิ่มเครือข่ายแล้วป้อนค่าในแต่ละฟิลด์
    - 2) คุณสามารถเลือกและบันทึกรายการค้นหา AP หลังจากเลือกเปิด Wi-Fi แล้วเลือกรีเฟรช (การค้นหา AP)
    - 3) หลังจากเชื่อมต่อ AP และป้อน Y/N ช่วยให้บันทึกโปรไฟล์ได้

# ซอฟต์แวร์ Phone Software update

## ซอฟต์แวร์ Phone Software update

ซอฟต์แวร์อัปเดตโทรศัพท์มือถือ LG ในเว็บไซต์

สำหรับข้อมูลเพิ่มเติมและวิธีการใช้งานระบบนี้, กรุณาดูที่เว็บไซต์ LGmobile.com

ที่: <http://www.lgmobile.com>

- เลือกลงประเทศ – รายการสินค้า
- รายการคู่มือและซอฟต์แวร์

รายการนี้จะทำให้คุณสามารถอัปเดตซอฟต์แวร์ของท่านเป็นเวอร์ชันล่าสุดได้อย่างง่ายดายผ่านระบบอินเทอร์เน็ตโดยไม่จำเป็นต้องเข้ารับบริการผ่านศูนย์บริการ. ผู้ใช้ซอฟต์แวร์อัปเดตโทรศัพท์นี้ต้องตั้งใจและดูแลการทำงานของระบบตลอดกระบวนการทำงานของโปรแกรม, ดังนั้นจึงขอความกรุณาในการอ่านทำความเข้าใจทุกขั้นตอนการทำงานและทุกข้อความที่ปรากฏก่อนการเริ่มใช้งานโปรแกรม

กรุณาพึงระวังเสมอว่า การถอดสาย USB หรือการถอดแบตเตอรี่ระหว่างการอัปเดตข้อมูลอาจก่อให้เกิดความเสียหายร้ายแรงกับเครื่องโทรศัพท์มือถือของท่าน.

ทั้งนี้ผู้ผลิตจะไม่รับผิดชอบกับการสูญหายของข้อมูลใดๆที่จะเกิดขึ้นระหว่างขั้นตอนการอัปเดต, ท่านควรจดหรือทำการสำรองข้อมูลสำคัญของท่านไว้ก่อนเพื่อความปลอดภัย

# อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ GT505 ของคุณ

อุปกรณ์ชาร์จ



สายเคเบิล  
ข้อมูลและซิงค์  
เชื่อมต่อและซิงค์  
โครโนซ์โทร  
ศัพท์ GT505  
กับคอมพิวเตอร์



แบตเตอรี่



ชุดหูฟังสเตอริโอ



คู่มือการใช้  
เรียนรู้เพิ่มเติม  
เกี่ยวกับโทรศัพท์  
GT505 ของคุณ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

## บริการเครือข่าย

โทรศัพท์ไร้สายที่อธิบายไว้ในคู่มือนี้ได้รับการรับรองให้ใช้ในระบบเครือข่าย GSM และ W-CDMA

คุณสมบัติต่างๆ ที่กล่าวถึงในคู่มือนี้เรียกว่า บริการเสริมจากระบบเครือข่าย ซึ่งเป็นบริการพิเศษที่คุณขอเปิดใช้บริการได้จากผู้ให้บริการของคุณ ก่อนที่คุณจะสามารถใช้คุณสมบัติต่างๆ ของบริการเสริมจากระบบเครือข่ายเหล่านี้ คุณต้องสมัครขอรับบริการผ่านทางผู้ให้บริการ และขอคำแนะนำในการใช้จากผู้ให้บริการด้วย

## ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์ : GT505

ระบบ : GSM / W-CDMA

อุณหภูมิแวดล้อม

สูงสุด : + 50 °C (คายประจุ),  
+ 45 °C (ขณะชาร์จ)

ต่ำสุด : - 10 °C (คายประจุ),  
0 °C (ขณะชาร์จ)

ศูนย์บริการ LG โดย บริษัท แอลจี อิเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน  
แขวงบุนดอโล เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์-ศุกร์,  
08:00 - 17:40น.

Call center : 0-2878-5757

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM / W-CDMA Terminal Equipment

Model Name

GT505

Trade Name

LG

CE 0168 !

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2006  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

13. May, 2009

Signature of representative

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

## การรับพลังงานคลื่นความถี่วิทยุ

### ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น GT505 นี้ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.941 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.17 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

## การดูแลและการบำรุงรักษา เครื่องโทรศัพท์

### คำเตือน

#### ใช้แบตเตอรี่

อุปกรณ์ชาร์จแบตเตอรี่  
และอุปกรณ์เสริมที่ผ่านการรับ  
รองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นอาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์อื่น วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือ เตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก

- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือ แอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- อย่าวางโทรศัพท์ใกล้บัตรเครดิตรหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

## การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

### อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น

- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

## ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น

- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

## หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลาานาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

## ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกระแทก หากส่วนที่เป็นแก้วนี้แตกอย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าจะส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

## บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

## บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

## บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

## เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปปาก

## การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

## ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด

- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับ การกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

# การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหายางประการ แต่คุณสามารถแก้ไขปัญหาคที่คุณพบบางอย่างได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดของซิมการ์ด	ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือคุณอาจใส่ซิมการ์ดไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่ได้เชื่อมต่อกับระบบเครือข่าย	สัญญาณอ่อน อยู่นอกพื้นที่บริการของระบบเครือข่าย GSM	ย้ายไปบริเวณที่ใกล้หน้าต่าง หรือที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการ
รหัสไม่ตรงกัน	เมื่อคุณต้องการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสนั้นอีกครั้ง รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	ติดต่อผู้ให้บริการ
ตั้งค่าฟังก์ชันไม่ได้	ผู้ให้บริการไม่สนับสนุนหรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข มีการใส่ซิมการ์ดอันใหม่ถึงขีดจำกัดการโทรของคุณแล้ว	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยรหัส PIN 2

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดเครื่องเบาเกินไป แบตเตอรี่หมด ข้อลัมผัสแบตเตอรี่สกปรก	กดปุ่มเปิด/ปิดเป็นเวลาอย่างน้อยสองวินาที ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์แสดงการชาร์จบนหน้าจอ ทำความสะอาดข้อลัมผัส
ข้อผิดพลาดเกี่ยวกับการชาร์จ	แบตเตอรี่หมดโดยสิ้นเชิง อุณหภูมิสูงหรือต่ำเกินไป มีปัญหาที่ข้อลัมผัส ไม่มีกระแสไฟฟ้า อุปกรณ์ชาร์จชำรุด อุปกรณ์ชาร์จไม่ถูกต้อง แบตเตอรี่ชำรุด	ชาร์จแบตเตอรี่ ตรวจสอบให้แน่ใจว่าอยู่ในอุณหภูมิแวดล้อมที่เหมาะสม รอสักครู่ จากนั้นชาร์จแบตเตอรี่อีกครั้ง ตรวจสอบกระแสไฟฟ้าและการเชื่อมต่อกับโทรศัพท์ ตรวจสอบข้อลัมผัสแบตเตอรี่ ทำความสะอาดหากจำเป็น เสียบปลั๊กเข้ากับเต้าเสียบอื่นหรือตรวจสอบกระแสไฟฟ้า หากอุปกรณ์ชาร์จไม่ทำงาน ให้เปลี่ยนอุปกรณ์ชาร์จใหม่ ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น เปลี่ยนแบตเตอรี่
สัญญาณเครือข่ายขาดหายไป	สัญญาณอ่อนเกินไป	การเชื่อมต่อกับผู้ให้บริการอื่น เป็นไปได้โดยอัตโนมัติ
หมายเลขโทรศัพท์ใช้โทรออกไม่ได้	กำลังใช้งานฟังก์ชันกำหนดหมายเลขโทรออก	ตรวจสอบการตั้งค่า





Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



## GT505 User Guide

Congratulations on your purchase of the advanced and compact GT505 phone by LG, designed to operate with the latest digital mobile communication technology.

# Contents

Getting to know your phone ...	8	Speed dialling .....	23
Open view .....	10	Making a second call .....	23
Installing the USIM and battery .....	11	Turning off DTMF .....	24
Memory card .....	14	Viewing your call logs .....	24
Menu map .....	16	Using call divert .....	25
Your home screen .....	17	Using call barring .....	25
Touch screen tips .....	17	Changing the common call setting .....	26
The quick keys .....	18	Changing your video call settings .....	27
The status bar .....	19	<b>Contacts .....</b>	<b>28</b>
Changing your status from the status bar .....	20	Searching for a contact .....	28
Using the Multitasking function	20	Adding a new contact .....	28
<b>Calls .....</b>	<b>21</b>	Creating a group .....	29
Making a call or video call .....	21	Changing your contact settings	29
Making a call from your contacts .....	21	<b>Messaging .....</b>	<b>31</b>
Answering and rejecting a call..	21	Messaging .....	31
In-call options .....	22	Sending a message .....	31
Adjusting the call volume .....	23	Entering text .....	32
		T9 predictive .....	32
		Abc manual .....	32

# Contents

Setting up your email.....	33	Using the inner camera .....	47
Sending an email using your new account.....	35	Viewing your saved photos.....	47
Changing your email settings ...	35	<b>Video camera .....</b>	<b>48</b>
Message folders.....	36	Shooting a quick video.....	48
Using templates .....	37	After shooting a video .....	49
Using emoticons .....	37	Getting to know the viewfinder.....	50
Changing your text message settings.....	37	Adjusting the exposure .....	51
Changing your multimedia message settings .....	38	Using the advanced settings .....	51
Changing your other settings ...	39	Changing the video image size .....	53
<b>Camera .....</b>	<b>40</b>	Choosing a colour tone .....	53
Taking a quick photo .....	40	Using the inner video camera ...	54
Once you've taken the photo ....	41	Watching your saved videos.....	54
Getting to know the viewfinder .....	42	<b>Your photos and videos .....</b>	<b>55</b>
Using the flash .....	43	Viewing your photos and videos.....	55
Adjusting the exposure .....	43	Using zoom when viewing a photo.....	55
Taking a continuous shot.....	44	Adjusting the volume when viewing a video .....	55
Using the advanced settings .....	44	Setting a photo as wallpaper ....	55
Changing the image size .....	46		
Choosing a colour effect .....	46		

Editing your photos .....	56	Playing a game .....	64
Adding text to a photo .....	57	Using the games options menu .....	64
Adding an effect to a photo.....	58	Flash contents.....	64
Cropping a photo .....	58	Viewing an SWF/SVG file.....	65
Adding a colour accent to a photo .....	58	Documents.....	65
Swapping colours in a photo ....	59	Viewing a file .....	65
<b>Multimedia .....</b>	<b>60</b>	Transferring a file to your phone.....	65
Pictures .....	60	Others .....	66
My images options menu .....	60	Creating a movie .....	66
Sending a photo.....	60	Music .....	67
Using an image.....	61	Transferring music onto your phone.....	67
Marking up your images .....	61	Playing a song.....	68
Moving or copying an image ....	62	Creating a playlist .....	68
Creating a slide show .....	62	Deleting a playlist.....	69
Sounds.....	62	Using the radio .....	69
Using a sound .....	63	Searching for stations.....	69
Videos.....	63	Resetting channels.....	70
Using options while video is paused .....	63	Listening to the radio .....	70
Sending a video clip .....	64		
Games and Applications .....	64		

# Contents

<b>Organiser .....</b>	<b>71</b>	<b>PC Sync.....</b>	<b>78</b>
Adding an event to your calendar.....	71	Installing LG PC Suite on your computer .....	78
Changing your default calendar view.....	72	Connecting your phone and PC.....	79
Adding an item to your To do list .....	72	Backing up and restoring your phone's information.....	79
Sharing a To do task.....	72	Viewing your phone files on your PC .....	79
Using date finder .....	73	Synchronising your contacts.....	80
Setting your alarm.....	73	Synchronising your messages... ..	80
Adding a memo.....	74	Using your phone as a mass storage device.....	81
Voice recorder .....	74	<b>The web .....</b>	<b>82</b>
Recording a sound or voice .....	75	Browser.....	82
Sending the voice recording .....	75	Accessing the web.....	82
Using your calculator.....	75	Adding and accessing your bookmarks .....	82
Converting a unit .....	76	Using RSS reader .....	83
Using the stopwatch.....	76	Saving a page.....	83
Adding a city to your world time.....	77	Accessing a saved page.....	83
Jogging Buddy.....	77		

Viewing your browser history ...	84	Accessories .....	97
Changing the web browser settings .....	84	Network service .....	98
Using your phone as a modem.	84	Technical data .....	98
<b>Settings .....</b>	<b>86</b>	Guidelines for safe and efficient use .....	100
Changing your screen settings .	86	Trouble Shooting.....	106
Personalising your profiles .....	87		
Changing your phone settings .	87		
Changing your touch settings .	88		
Changing your connectivity settings .....	88		
Using memory manager .....	90		
Using flight mode .....	91		
Sending and receiving your files using Bluetooth.....	91		
Pairing with another Bluetooth device.....	93		
Using a Bluetooth headset .....	93		
<b>Wi-Fi.....</b>	<b>94</b>		
<b>Phone Software update .....</b>	<b>96</b>		

# Getting to know your phone

## Inner camera lens



## End/Power key

Ends or rejects a call.  
Turns the phone on/off.  
Press once to return to  
the home screen.

## Multitasking key

## Call key

Dials a phone number and  
answers incoming calls.



**WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.



**Micro SD memory card socket**



**Charger, Cable, Handsfree connector**

**TIP!** To connect the USB cable, wait until the phone has powered up and has registered to the network.

**Side keys**

- **When the screen is idle:** volume of key tone.
- **During a call:** volume of the earpiece.
- **When playing a BGM track:** controls volume continuously.

**Lock/Unlock key**

**Capture button**

## Open view



# Installing the USIM and battery

## 1. Remove the battery cover

Press and hold down the battery release button at the top of the phone and lift off the battery cover.



**⚠ WARNING:** Do not use your fingernail when removing the battery.

**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 2. Remove the battery

Hold the top edge of the battery and lift it from the battery compartment.



# Installing the USIM and battery

## 3. Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the opposite direction.



## 4. Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



## 5. **Charging your phone**

Slide back the cover of the charger socket on the side of your GT505. Insert the charger and plug into a mains electricity socket. Your GT505 will need to be charged until a message reading "Battery full" appears on screen.



# Memory card

## Installing a memory card

You can expand the memory space available on your phone using a memory card.

**NOTE:** A memory card is an optional accessory.


1. Open the memory card cover.
2. Slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold contact area is facing downwards.



3. Close the memory card cover.

## Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.



1. From the home screen select  then touch **Settings** and choose **Phone settings**.
2. Touch **Memory manager** then chose **External memory**.
3. Touch **Format** and then confirm your choice.
4. Enter the password, if one is set, and your card will be formatted and ready to use.

**TIP!** To change your default storage destination, open Memory manager from the Phone settings menu and select Primary storage settings.

**NOTE:** If your memory card has existing content on, it will automatically be filed in the correct folder, for example, videos will be stored in the My Videos folder.

## Transferring your contacts

To transfer your contacts from your USIM to your phone:

1. From the Communication tab, select **Contacts** Touch .
2. Select **Storage location** and select **Copy to USIM** or **Move to USIM**.
3. Choose names one by one and touch **Copy** or .

# Menu map

Touch  in the home screen to open a **Top menu**. From here you can access further menus: **Communication**, **Entertainment**, **Utilities** and **Settings**.



## Communication

- Contacts
- Recent history
- Messaging
- Email
- Dialling
- Video call



## Entertainment

- Camera
- Video camera
- Gallery
- My stuff
- Music
- Muvee Studio
- Games&apps
- FM radio



## Utilities

- Browser
- Navigation
- Google
- Alarm
- Organiser
- Memo
- Voice recorder
- Tools



## Settings

- Profiles
- Screen settings
- Phone settings
- Bluetooth
- Wi-Fi
- Call settings
- Touch settings
- Connectivity

# Your home screen

From this screen you can access options, make a call, view the status of your phone and much more.

## Touch screen tips

The home screen is also a great place to get used to using the touch screen.

To select an item, touch the centre of the icon.

- Do not to press too hard; the touchscreen is sensitive enough to pick up on a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- When the screen light is off, either press the Unlock/Lock key on the right hand side or hold down the Unlock key on the touch screen to return the home screen.


- Whenever your GT505 is not in use, it will return to the lock screen as default.


# Your home screen

## The quick keys

The quick keys on your home screen provide easy, one-touch access to your most used functions.



Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Call** or press the  hard key.

To initiate a video call with the number, press  after inputting the number and choose **Make Video call**.



Touch to open your contacts. To search for the number you want to call, enter the name of the contact using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the Messaging options menu. From here you can create a new SMS.

























Touch to open the full Top menu which is separated into four sub-menus. Touch the vertical tabs to view further options.

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.


Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	An alarm is set
	Normal profile in use

Icon	Description
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	Wi-Fi on
	BGM play
	BGM pause

# Your home screen

## Changing your status from the status bar


Touch the current status icon that represents your current setting in the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3, Bluetooth and Wi-Fi status. You can set Profile type, play/pause MP3 and activate/deactivate Bluetooth and Wi-Fi.

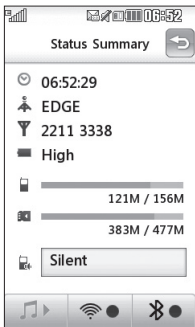

## Using the Multitasking function

Press the multitasking hard key to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.




From any application, press the Multitasking key and select Home screen to return to the home screen without exiting or closing the application.


When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

When you press this key from the home screen, you can view a short cut menu to some commonly used functions.

# Calls

## Making a call or video call


1. Touch  to open the keypad.
2. Key in the number using the keypad. To delete a digit press the clear key.
3. Touch the  hard key to initiate the call.
4. To end the call press the  hard key.

**TIP!** To enter + for making an international call, touch  twice.


**TIP!** Press the lock/unlock button to lock the touchscreen to prevent calls being made by mistake.



**TIP!** You can **Make video call**, **Send message**, **Save number** or **Search contacts** by tapping .

## Making a call from your contacts

1. From the home screen touch  to open Contacts.
2. Touch Name and enter the first few letters of the contact you would like to call.
3. From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
4. Touch **Call**.


## Answering and rejecting a call


When your phone rings press the  hard key to answer the call.


Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting. Press the  hard key to reject an incoming call.

# Calls


## In-call options

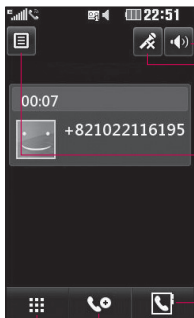



**Speaker** - Touch  to turn on the speaker phone.

**Mute** - Touch  to turn off the microphone so the person you are talking to cannot hear you.

**Options** - Choose from a list of further in-call options, including Create new memo and Go to messages, so you can check your messages and add contacts during a call. You can also end the call from here by touching End call.

 - Choose to search your contacts during a call.

 - Choose to add another person to the call.

 - Touch to open a numerical keypad for navigating menus with numbered options. For example, when dialling call centres or other automated telephone services.



**TIP!** To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.


## Adjusting the call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.

## Speed dialling





You can assign a frequently-called contact to a speed dial number.

1. From the home screen touch  to open Contacts.
2. Touch  and choose **Speed dials**.
3. Your voicemail is already set to speed dial 1. Touch any other number to assign it a speed dial contact.
4. Your contacts will open. Select the contact you'd like to assign to that number by touching the phone number once.

To call a speed dial number, touch  from the home screen then press and hold the assigned number until the contact appears on screen.

The call will initiate automatically, there's no need to press **Call**.

## Making a second call

1. During your initial call, touch  and select the number you want to call.
2. Dial the number or search your contacts.
3. Press  to connect the call.
4. Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
5. To change between the calls, touch  and choose **Swap call** or press the number of the held call.
6. To end one or both calls press  and select **End Call** followed by **All**, **Held** or **Active**.


# Calls

**TIP!** You can combine your calls by touching "Join icon" then **Join**. Check that your network provider supports conference calling.

**NOTE:** You will be charged for each call you make.

## Turning off DTMF

DTMF allows you to use numerical commands to navigate menus within automated calls. DTMF is switched on as default.

To turn it off during a call (to make a note of a number for example) touch  and select DTMF off.

## Viewing your call logs

Touch  and select

**Communication** and tap **Recent history**.


Choose to view:

**All calls** - View a complete list of all dialled, received and missed calls.


**Dialled calls** - View a list of all the numbers you have called.

**Received calls** - View a list of all the numbers that have called you.

**Missed calls** - View a list of all the calls you have missed.

**TIP!** From any call log touch  and **Delete all** to delete all the recorded items.

## Using call divert

1. Touch , select **Settings** and choose **Call settings**.
2. Touch **Call divert** and choose **Video calls** and/or **Voice calls**.
3. Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
4. Input the number you'd like to divert to.
5. Touch **Request** to activate.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.


## Using call barring

1. Touch , select **Settings** and choose **Call settings**.
2. Touch **Call barring** and choose **Video calls** and/or **Voice calls**.
3. Choose any or all of the five options:
  - All outgoing**
  - Outgoing international**
  - Outgoing international calls except home country**
  - All incoming**
  - Incoming when abroad**
4. Enter the call barring password. Please check with your network operator for this service.

# Calls

**TIP!** Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

## Changing the common call setting

1. Touch , select **Settings** and choose **Call settings**.
2. Touch **Common settings**. From here you can amend the settings for:

**Call reject** - Slide the switch left to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts). Touch **Save** to change the setting.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Slide the switch left for **On** or right for **Off**.

**Answer mode** - Choose whether to answer the phone using the send key or any key.


**Minute minder** - Slide the switch left to **On** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

**Save new number** - Select **Yes** to save a new number.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

## Changing your video call settings



1. Touch , select **Call settings** and choose **Video call settings**.
2. Choose the settings for your video calling. Determine whether to Use private image and select one, and/or switch on the mirror to see yourself on screen when making a video call.

# Contacts

## Searching for a contact

There are two ways to search for a contact:

### From the home screen

1. From the home screen touch  to open Contacts. Touch Name and enter the name of the contact using the key pad.
2. Touch **Call** or the  hard key to initiate the call.


### From the main menu

1. Touch , select **Communication**.
2. Touch **Contacts** and **Search**.



**TIP!** The alphabetical keypad is displayed once you tap Name.

**TIP!** To scroll through your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.


## Adding a new contact

1. From the home screen touch  then select **Create new contact**.
2. Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
3. Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**.
4. Add an email addresses.
5. Assign the contact to one or more groups. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
6. You can also add a **Ringtone, Birthday, Homepage, Home address, Company name, Job title, Company address** and a **Memo**.
7. Touch **Save** to save the contact.

## Creating a group

1. From the home screen touch  and select the **Communication** tab. Touch **Contacts** and select **Groups**.
2. Touch .
3. Select **Create new group**.
4. Enter a name for your new group.
5. Touch **Save**.


**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

**TIP!** You can edit an existing group by highlighting it and touching .

## Changing your contact settings

You can adapt your contact settings so that your Contacts suits your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

1. From the Communication tab touch **Contacts** and touch . Select **Settings**.

2. From here you can adjust the following settings:

**Contact list settings** - You can also choose to show the first name or last name of a contact first. You can display with quick command key among Make voice call, Make video call or Send a message.

# Contacts

## **Synchronise contacts** -

Connect to your server to synchronise your contacts. See **Synchronising your contacts**.

**Export contacts** - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

**Import contacts** - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So, if you move a contact from the USIM to the handset it will be deleted from the USIM memory.

## **Send all contacts via**

**Bluetooth** - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.



**Clear contacts** - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your contacts.

# Messaging


## Messaging

Your GT505 combines SMS, MMS and email into one intuitive and easy to use menu.


There are two ways to enter the messaging centre:


1. From the home screen, touch  or touch , then select **Communication** and choose **Messaging**.

## Sending a message

1. Touch  then **New message** to open a blank message.
2. From here you can choose **Message** to send an SMS or MMS.
3. Touch Insert to add an image, video, sound, New slide, Subject or More (Business card, Schedule, Memo, To do or My business card).

4. Touch **Recipient** to enter the recipient's number, or touch the search icon to open your contacts. You can add multiple contacts. When you are finished, touch **Send**.

 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.


# Messaging


## Entering text


There are five ways to enter text:


Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.

Tap the screen once, then the keyboard shows up.

 Touch to turn on T9 predictive text.


 You can change the writing languages.

 Tap to change between the numbers, symbols and texts keypads.

Use  to scroll through the different keyboard types in each text entry mode (for example, capitals or lowercase).

To enter a space touch .

## T9 predictive

In T9 mode you will see .

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.



## Abc manual

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

## Setting up your email

You can stay in touch on the move using email on your GT505. It's quick and simple to set up a POP3 or IMAP4 email account.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

1. Touch  from the home screen, and touch **Email**.
2. Touch .
3. Touch **Add account**.
4. You can now choose how your account works:

**Account name** - Enter a name for this account.

**My name** - Enter your name.

**Username** - Enter the account's username.

**Password** - Enter the account's password.

**Email address** - Enter the account email address.

**Reply email address** - Enter the 'reply to' email address.

**Outgoing mail server** - Enter the outgoing email server address.

**Incoming mail server** - Enter the incoming email server address.

**Maximum receive size** - Choose the size limit of your emails, the maximum is 2MB.

**Mailbox type** - Enter the mailbox type, POP3 or IMAP4.

**Save to server** - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

# Messaging

**Save sent mail into** - Select whether to save sent emails (when the mailbox type is set to IMAP4). When the mailbox type is POP3, sent mails are always saved into handset.

**Retrieve only new** - Choose whether to discard emails already downloaded previously.

**Access point** - Choose your Internet access point.

**Download option** - Choose the way to download emails. Choose from Header only or All including body for POP3, header only, header + body, or all for IMAP4.

**Auto retrieve** - Choose whether to retrieve your new emails automatically.

**Advanced settings** - Choose whether to use the advanced settings.

**SMTP port number** - Normally, this will be 25.

**SMTP TLS/SSL** - Choose whether to use TLS/SSL for outgoing server.

**Incoming server port** - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

**Incoming TLS/SSL** - Choose whether to use TLS/SSL for incoming server.

**SMTP authentication** - Choose the security settings for the outgoing mail server.

**SMTP Username** - Enter the SMTP username.

**SMTP Password** - Enter the SMTP password.

**APOP secure login** - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.

## Sending an email using your new account


1. Touch **New Email** to open a new blank email.
2. You can enter the recipient's address and write your message. You can also attach images, videos, sounds or other file types.
3. Touch **Send** and your email will be sent.

**TIP!** You can upload Word, Excel, PowerPoint and PDF documents to your GT505 so you can review them on the move.

## Changing your email settings

You can change your email settings according to your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

1. Touch  from the home screen, and choose Email and from , select settings.
2. You can adapt the following settings:
  - Email accounts** - Manage your email accounts.
  - Allow reply Email** - Choose to allow the sending of read confirmation messages.
  - Request reply Email** - Choose whether to request read confirmation messages.

# Messaging

**Retrieve interval** - Choose how often your GT505 checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at one time.

**Include message original** - Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

**Auto retrieval in Roaming** - Choose whether to retrieve your messages automatically when abroad (roaming).

**New email notification** - Choose whether to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

**Mail sending size** - Choose sending size of your email messages.

## Message folders

You'll recognise the folder structure used on your GT505, which is fairly self-explanatory.

**New message** - Open a new blank message.

**Inbox** - All the messages you receive are placed into your inbox. From here you can view, delete and more, see **Managing your messages** below for details.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent items** - Messages you send are placed in this folder.

**My Folders** - Create folders to store your messages.



**Templates** - Use a list of commonly used text and multimedia message templates.

**Emoticons** - Add and insert emoticons for your messages.

**Settings** - Change the settings for your text and multimedia messages.



## Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

1. Touch  then choose **Templates**.
2. Choose **Text templates** or **Multimedia templates**. You can then touch  to **Add template**, **Delete** or **Delete all** templates. To edit a message just select it, make your changes and touch **Save**.

## Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.


1. Touch  then choose **Emoticons**.
2. Touch  to, **Add emoticon**, **Delete** or **Delete all** emoticons.

## Changing your text message settings

Your GT505 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

# Messaging

Touch  then choose **Settings** and **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.


**Message types** - Convert your text into **Voice, Fax, X.400** or **Email**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long text as** - Choose to send long messages as Multiple SMS or as MMS.

## Changing your multimedia message settings

Your GT505 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch  then choose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose **Home** or **Roaming network**. If you then choose Manual you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read reply** - Choose to allow and/or send a read reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.


**Slide duration** - Choose how long your slides appear on screen.


**Delivery time** - Choose how long before a message is delivered.

**Multi msg centre** - Enter the details of your message centre.

## Changing your other settings

Touch , choose **Settings** then:

**Videomail** - Touch  to add a new Videomail service. Contact your network operator for more information on the service they provide.


**Voicemail** - Touch  to add a new Voicemail service. Contact your network operator for more information on the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

**Info. service** - Choose your reception status, language and other settings.


# Camera


## Taking a quick photo

1. Press the  key on the right side of the phone.
2. Holding the phone horizontally, point the lens towards the subject of the photo.
3. Slightly press the capture button, a focus box will appear in the centre of the viewfinder screen.
4. Position the phone so you can see the subject of your photo in the focus box.
5. When the focus box turns green, the camera has focused on your subject.
6. Press the capture button fully.


## Once you've taken the photo


Your captured photo will appear on the screen. The image name is shown with four icons on the right-hand side.

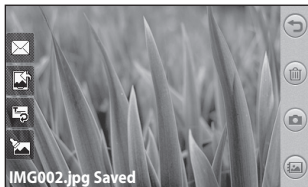



 Touch to send the photo as a **Message, Email** or **Bluetooth**. See Sending a message and Sending and receiving your files using Bluetooth.

**NOTE:** Additional cost may occur when MMS are downloaded when roaming.


 Touch to use the image as wallpaper.


 Touch to edit the name of the selected picture.

 Touch to edit the image using various tools.

 Touch to return to the previous menu.


 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to view a gallery of your saved photos.


# Camera

## Getting to know the viewfinder

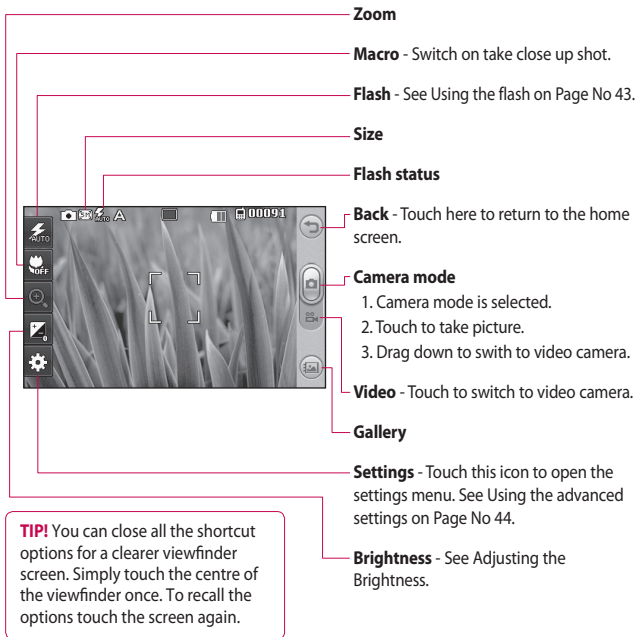




## Using the flash

The default flash setting is auto, but there are other options.

1. Select  from the left side of the viewfinder to enter the flash sub-menu.
2. There are three flash options:
  - Auto** - Your camera will assess the light available for a good picture and use the flash as necessary.
  - Always off** - The camera will never flash. This is useful if you want to save battery power.
  - Always on** - The camera will always flash.
3. When you touch the option you want, the flash menu will automatically close, allowing you to take a picture immediately.
4. The flash status icon in the viewfinder will change, based on the new flash mode.


## Adjusting the exposure

The exposure defines the difference between light and dark areas in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.


1. Touch .
2. Slide the contrast indicator along the bar towards  for a lower exposure and hazier image or towards  for a higher exposure and a sharper image.

# Camera

## Taking a continuous shot

1. From the viewfinder, touch  to open all advanced settings options and select **Shot mode** and then **Continuous shot**.
2. Position the subject in the viewfinder and press the capture button as if taking a normal photo.
3. The camera will take shots in quick succession.

## Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. After selecting the option, touch the **OK** button.

**Swap cam** - For self portraits, switch to the LG GT505's inner camera.

**Image size** - Change the size of the photo to save memory space or to take an appropriately sized picture for a contact. See Changing the image size on page 46.

**Scene mode** - Set the camera to adjust to the environment. Choose from Auto, Night, Portrait, Landscape, Beach, Sport and Party.

**Colour effect** - Choose a colour tone to use on your new photo. See **Choosing a colour effect**.

**White balance** - Choose between **Auto, Incandescent, Sunny, Fluorescent** and **Cloudy**.

**Timer** - The self-timer allows you to set a delay after the shutter is pressed. Select **Off, 3 seconds, 5 seconds** or **10 seconds**. This is ideal if you want to be included in a photo.

**Shot mode** - Choose the normal or continuous shot mode or Frame shot.

**Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

**Auto focus** - Select the way the camera will focus. Choose from Auto, Manual.

**Preview style** - Choose the preview style.

**Memory in use** - Choose whether to save your photos to the Handset memory or the External memory.

**Hide icons** - Choose the camera settings icons to be hidden manually or automatically.

**Shake reduction** - Enables you to take a photo without the camera wobbling or shaking.

**Show captured image** - Select show the image or not after taking a photo.

**Shutter sound** - Select one of the four shutter sounds.

**Geo-Tagging - On/Off**

**Reset** - Restore all camera default settings.


**TIP!** When you exit the camera all settings will return to their defaults, except image size and image quality. Any non-default settings will need to be reset, such as colour tone. Check these before you take your next photo.

# Camera

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you will see a preview of the image change behind the settings menu.


## Changing the image size

The more pixels, the larger the file, which means the files take up more memory space. If you want to store more pictures on your phone, you can change the resolution to make the files smaller.

1. Using the viewfinder, touch  in the left corner.
2. Select **Image size** from the Preview menu.

3. Select a pixel value from the six options (5M: 2592x1944, 3M:2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480,320x240) or choose the predefined wallpaper or contact size.


## Choosing a colour effect


1. Using the viewfinder, touch  in the left corner.
2. Select **Colour effect** from the Preview menu.
3. There are colour tone options.
4. Once you've made your selection, the colour tone menu can be closed by selecting the OK button. You are then ready to take a picture.


**TIP!** You can change a picture taken in colour to black and white or sepia, but you cannot change a picture taken in black and white or sepia to colour.

## Using the inner camera


Your LG GT505 has an inner 640x480 camera for both video calls and taking photos.

1. To switch to the inner camera touch  then select **Swap cam** from the Preview menu.
2. After a few seconds you'll see yourself in the viewfinder. To capture the image, press the side button as normal.

**TIP!** The inner camera has fewer settings as it has no flash nor adjustable sensitivity. You can still alter the image size, colour effect, image quality, white balance and set the self-timer by touching  in the same way as when using the main camera.





3. After you've taken the photo you'll be offered all the same options as for an image taken with the main camera.
4. To return to the main camera touch  and then select **Swap cam** from the Preview menu.

## Viewing your saved photos

1. You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen.


# Video camera


## Shooting a quick video

1. Press and hold the camera key on the right side of the phone.
2. Alternatively, touch  in the view finder in camera mode to switch to video mode.
3. The video camera's viewfinder will appear on screen.
4. Holding the phone horizontally, point the lens towards the subject of the video.
5. Press the capture button once to start recording.
6. **Rec** will appear at the top of the viewfinder and a timer at the bottom showing the length of your video.
7. To pause the video touch  and resume by selecting .
8. Touch  on the screen or press the capture button a second time to stop recording.


## After shooting a video


A still image representing your video will appear on the screen. The name of the video will be shown on the bottom of the screen, along with four icons on the right-hand side.


 Touch to play the video.


 Touch to send the photo as a **Message, Email or Bluetooth**. See Sending a message, and Sending and receiving your files using Bluetooth.


**NOTE:** Additional cost may occur when MMS are downloaded when roaming.


 Touch to use the Video as Voice ringtone or Video ringtone.

 Touch to edit the name of the selected video.

 Touch to return to the previous menu.


 Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view the saved videos and pictures gallery.

# Video camera

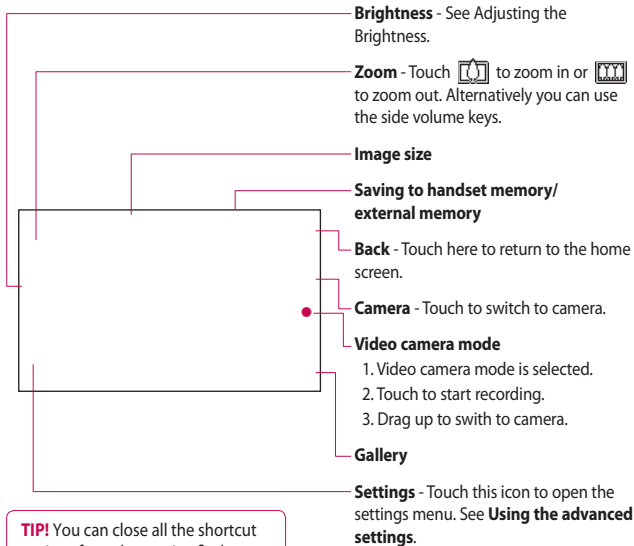


## Getting to know the viewfinder



**TIP!** You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

## Adjusting the exposure

The exposure defines the difference between light and dark areas in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

1. Touch .
2. Slide the exposure indicator along the bar, towards  for a lower exposure and fuzzier image, or towards  for a higher contrast and sharper image.

## Using the advanced settings

Using the viewfinder, touch **Settings** to open all the advanced settings options. After selecting the option, touch the **OK** button.

**Swap cam** - Switch to your LG GT505's inner camera to record yourself on video. See **Using the inner video camera**.

**Video size** -Change the size of the video to save memory space. See Changing the video image size on page 53.

**Scene mode** - Choose from Auto , Night , Portrait, Landscape, Beach, Sport and Party.

**Colour effect** - Choose a colour tone to use on your new view. See Choosing a colour tone on page 53.

# Video camera

**White balance** - The white balance ensures any white parts of your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

**Video quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the video will be. The file size will increase as a result, meaning you'll be able to store fewer videos in the phone's memory.

**Duration** - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS.

**TIP!** If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

**Memory in use** - Choose whether to save your videos to the Handset memory or to the External memory.


**Voice** - Choose Mute to record a video without sound.

**Hide icons** - Select whether to hide the icons on the camera menu automatically or manually.

**Reset settings** - Reset all the video camera settings.

## Changing the video image size


The more pixels, the larger the file size, which means the files take up more memory space. If you want to store more videos on your phone, you can change the video resolution to make the files smaller.

1. Using the viewfinder, touch  in the left corner.
2. Select **Video size** from the Preview menu.
3. Select a pixel value from options:  
**320x240** - Smaller image size, and therefore a smaller file size. This is ideal for saving memory space.  
**176x144** - Smallest image size and therefore the smallest file size.

4. Touch the back icon to return to the viewfinder.

**TIP!** For video format conversion software, see the CD that came with your GT505.

## Choosing a colour tone



1. Using the viewfinder, touch  in the left corner.
2. Select **Colour effect** from the Preview menu.
3. There are six colour tone options.
4. Touch the colour tone you want to use.

**TIP!** You can change a video shot in colour to black and white or sepia, but you cannot change a video shot in black and white or sepia to colour.

# Video camera


## Using the inner video camera

Your LG GT505 has an inner 320x240 camera for both video calls and recording videos.

1. To switch to the inner camera, touch  then select **Swap cam**.
2. After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, and press it again to stop recording.
3. After you have shot the video, you'll be offered all the options available for a video shot using the main camera.
4. To return to the main camera touch  and then **Swap cam**.


**TIP!** You can still alter the image size, colour effect, white balance and quality by touching **Settings** in the same way as when using the main camera.

## Watching your saved videos


1. In the viewfinder, touch .
2. Your gallery will appear on the screen.
3. Touch a video once to bring it to the front of the gallery. It starts to play automatically.

# Your photos and videos

## Viewing your photos and videos

1. Touch  on the camera preview screen.
2. Your gallery will appear on the screen.
3. Touch the video or photo to open it fully.

**TIP!** Flick left or right to view other photos or videos.

**TIP!** To delete a photo or video, open it and select . Touch **Yes** to confirm.

## Using zoom when viewing a photo

When viewing photos, you can zoom in and out.

## Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, touch the volume bar on the screen bottom after pressing the loudspeaker symbol. Alternatively, use the volume keys on the side of the phone.


## Setting a photo as wallpaper


1. Touch the photo you want to set as wallpaper to open it.
2. Touch the screen to open the options menu.
3. Touch homescreen menu.
4. You can zoom in and out and move the cropped section of the picture using a thumbnail at the bottom of the screen.


# Your photos and videos


## Editing your photos


You can do lots of great things to your photos to change them, add to them or liven them up.


1. Open the photo you want to edit and touch  to show the options.
2. Touch the icons to alter your photo:


 Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.

 Draw something on your photo, freehand. Select the line thickness from the four options, then the colour you want to use.


 Adding writing on a picture. See Adding text to a photo on page 57.


 Decorate your photo with stamps. Choose from the different stamps and touch your photo where you want to place them.


 Erase the editing you have done to the picture. You can choose the size of eraser you use.


 Touch to return to the gallery.

 Save the changes you made to the photos. Select to save the changes as an **Update existing** or a **New file**. If you select **New file** enter a file name.


 Erase the editing you have done to the photo.

 Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo** on page 58.

 Touch to apply the effect options to a photo.

 This helps to adjust a picture taken using automatic colour, brightness etc.



## Adding text to a photo

1. From the editing screen, touch  .
2. Select **Text** to add unframed text or choose one of the speech bubble shapes.
3. Enter your text using the keypad and touch **Save**.
4. Move the text by touching it and sliding it to where you want it.





# Your photos and videos




## Adding an effect to a photo

1. From the editing screen, touch .
2. You can apply any of the various options to the photo.
3. To undo an effect simply touch .



## Cropping a photo

1. From the editing screen, touch .
2. Choose the shape you want to use to crop the picture.
3. Drag the box over the area you want to crop.
4. When you are finished with your selection, touch .

## Adding a colour accent to a photo

1. From the editing screen, touch .
2. Choose **Colour Accent**.
3. Select part of the photo.  
A traced line will appear around everything in that area which is the same or a similar colour, for example, a person's hair or jumper.
4. Alter the intensity of the accenting by touching  and then sliding the marker up or down the intensity bar.
5. Touch **OK**.
6. All colour will be removed from the photo, apart from in the section marked for colour accenting.
7. Select  to save the changes.

## Swapping colours in a photo

1. From the editing screen, touch .
2. Choose **Colour swapping**.
3. Select part of the photo.  
A traced line will appear around everything in that area which is the same or a similar colour.  
For example, someone's hair or jumper.
4. Select a colour.
5. Press **OK**.
6. The part of the photo selected for colour accenting will change to the selected colour.
7. Select  to save the changes.

# Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then **Entertainment**. Touch **My stuff** to open a list of folders storing all of your multimedia files.


## Pictures

**Images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

## My images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera.



## Sending a photo

1. Touch  then **Entertainment**.
2. Touch **My stuff** then **Images**.
3. Select the picture you want to send, and touch **Send**. Choose from **Message**, **Email** or **Bluetooth**.

4. If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

## Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

1. Touch  then **Entertainment**.
2. Touch **My stuff** then **Images**.
3. Select an image and touch .
4. Touch **Use as** and choose from:
  - Home screen** - Set a wallpaper for the home screen.
  - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

**Incoming call** - Set an image to appear during incoming calls.

**Outgoing call** - Set an image to appear during outgoing calls.

**Switch on** - Set an image to appear when you switch the phone on.

**Switch off** - Set an image to appear when you switch the phone off.

## Marking up your images



A low- light photo can be adjusted without lowering the quality of the picture.

1. Touch  then **Entertainment**.
2. Touch **My stuff** then **Images**.
3. Select an image and touch  then touch **Smart Light**.
4. The light will automatically be changed, and you will have an option to save the new image.

# Multimedia



## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

1. Touch  then **Entertainment**.
2. Touch **My stuff** then **Images**.
3. Touch  then select **Move** or **Copy**.
4. Select an image.
5. Select **Move** or **Copy**.

## Creating a slide show



If you want to look at all of the images on your phone, you can create a slide show to save you from having to open and close each individual image.

1. Touch  then **Entertainment**.
2. Touch **My stuff** then **Images**.
3. Touch  then **Slide show**.

## Sounds

The **Sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.


## Using a sound

1. Touch  then **Entertainment**.
2. Touch **My stuff** then **Sounds**.
3. Select a sound and it will begin to play.
4. Touch  and select **Use as**.
5. Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up** or **Shut down**.


## Videos

The **Videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

### Watching a video

1. Touch  then **Entertainment**.
2. Touch **My stuff** then **Videos**.
3. Select a video to play.

## Using options while video is paused

Touch  while in pause mode and choose from:

**Send** - Send the video in a message, email or via Bluetooth.


**Delete** - Delete the video.

**Use as** - Enables to set Voice ringtone or Video ringtone. (This can be limited by Video frame size.)

**File info.** - View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.

# Multimedia


## Sending a video clip

1. Select a video and touch .
2. Touch **Send** and choose from **Message, Email, Bluetooth**.
3. If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

## Games and Applications

You can download new games and applications to your phone to keep you amused when you have time to spare.

## Playing a game

1. Touch  then **Entertainment**.
2. Touch **Games & apps**, then **Games**.
3. Choose and touch a game to launch.

## Using the games options menu

From the Games & apps folder, the following options are available:


**Sort by** - Sort the games and applications by **Date, Size** or **Name**.

**File info.** - View the game information.

## Flash contents

The Flash contents folder contains all of your default and downloaded SWF files.


## Viewing an SWF/SVG file

1. Touch  then **Entertainment**.
2. Touch **My stuff** then **Flash contents**.
3. Select the file to view.

## Documents

From Documents in My stuff, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files.

## Viewing a file

1. Touch  then **Entertainment**.
2. Touch **My stuff** then **Documents**.
3. Select a document and touch **View**.

## Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable.

To transfer using Bluetooth:



1. Make sure your phone and computer have Bluetooth switched on and are visible to one another.
2. Use your computer to send the file via Bluetooth.
3. When the file is sent you will have to accept it on your phone by touching **Yes**.
4. The file should appear in your **Documents** or **Others** folder.

# Multimedia





## Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.


To move a file from Others to Documents:

1. Touch  then **Entertainment**.
2. Touch **My stuff** then **Others**.
3. Touch  select move, and mark the files.
4. Touch **Move** and choose the destination folder from the list by touching the icon.

## Creating a movie

1. Touch  then **Entertainment**.
2. Touch **Muvee Studio**.
3. Touch  to add an image. Touch the images you want to include then select **Insert**.
4. Touch the style tab across the top to choose a movie style.
5. Touch the sound tab at the bottom of the screen to change the sound, such as a mp3 file.
6. Touch the **Play** button to see what you've created.
7. Touch  then **Play Order** to change the order.
8. Touch  then **Save Location** to choose where to save the movie, and touch **Usage** to choose between **For Keeping** and **For MMS**.
9. To save your movie, press play and then touch the save icon in the bottom.

## Music

Your LG GT505 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then **Entertainment** and **Music**. From here you can access a number of folders:

**Recently played** - You can listen all of the songs you have played recently.

**All tracks** - Contains all of the songs you have on your phone.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains any playlists you have created.

**Shuffle tracks** - You can listen to the music randomly.

## Transferring music onto your phone






The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. You can also use LG PC Suite.

To transfer using Bluetooth:

1. Make sure both devices have Bluetooth switched on and are visible to one another.
2. Select the music file on the other device and choose to send it via Bluetooth.
3. When the file is sent you will have to accept it on your phone by touching **Yes**.
4. The file should appear in **Music > All tracks**.


# Multimedia

## Playing a song


1. Touch  then **Entertainment**.
2. Touch **Music**, then **All tracks**.
3. Select the song you want to play and touch **Play**.
4. Touch  to pause the song.
5. Touch  to skip to the next song.
6. Touch  to skip to the previous song.
7. Touch  to return to the **Music** menu.

## Creating a playlist



You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

1. Touch  then **Entertainment**.
2. Touch **Music**, then **Playlists**.
3. Touch **New playlist**, enter the playlist name and touch **Save**.
4. The All tracks folder will show. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
5. Touch **Done**.

To play a playlist, select it and touch Play.

**NOTE:** To add a second playlist, touch  then New playlist.

## Deleting a playlist

1. Touch  then **Entertainment**.
2. Touch **Music**, then **Playlists**.
3. Touch  then **Delete** or **Delete all** to delete all of the playlists.

## Using the radio



Your LG GT505 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

**NOTE:** You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

## Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning.

### To auto tune:

1. Touch  then **Entertainment**.
2. Touch **FM radio** then .
3. Touch **Auto scan** then **Yes**. The stations found will automatically be allocated to channel numbers in your phone.


**NOTE:** You can also manually tune into a station by using wheel displayed next to the radio frequency.

# Multimedia

## Resetting channels

1. Touch  then **Entertainment**.
2. Touch **FM radio** then .
3. Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels.



## Listening to the radio


1. Touch  then **Entertainment**.
2. Touch **FM radio** then touch the channel number of the station you would like to listen to.

**TIP!** To improve the radio reception, extend the headset cord, which functions as the radio antenna.

# Organiser


## Adding an event to your calendar

1. From the home screen select  then touch **Utilities** and choose **Organiser**. Select **Calendar**.
2. Select the date you would like to add an event to.
3. Touch  then **Add event**.
4. Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you would like your event to begin.
5. For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
6. If you would like to add a subject or a note to your event, touch **Note** and type in your note.
7. Set **Alarm** and **Repeat**.
8. Select **Save** and your event will be saved in the calendar. A square colour cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.


**TIP!** You can set a holiday in your calendar. Touch each day you are on holiday one at time, then touch  and select **Set holiday**. Each day will be shaded red.

# Organiser

## Changing your default calendar view



1. From the home screen select  then touch **Utilities** and choose **Organiser**. Select **Settings**.
2. Touch **Calendar** and choose either **Month view** or **Week view**.
3. Set **week starts on**.
4. Press **Save** to confirm your choice.

## Adding an item to your To do list

1. From the home screen select  then touch **Utilities** and choose **Organiser**.
2. Select **To do** and touch **Add to do**.

3. Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
4. Save your task by selecting **Save**.

## Sharing a To do task


1. From the home screen select , then **Utilities** and choose **Organiser**. Select **To do**.
2. Select the task you would like to share, then touch .
3. Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg.**, **Email** or **Bluetooth**.

**TIP!** You can back up and synchronise your calendar with your computer.



## Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

This is great for keeping tabs on deadlines.

1. From the home screen select  then touch **Utilities** and choose **Organiser**.
2. Select **Date finder**.
3. In the **From** tab set your required date.
4. In the **After** tab set the number of days.
5. The **Target date** will be shown below.

## Setting your alarm

1. From the home screen select  then touch **Utilities** and choose **Alarms**.
2. Touch **Add alarm**.
3. Set the time you would like the alarm to sound and touch **Save**.
4. Choose whether you would like your alarm to repeat Daily, Mon - Fri, Mon - Sat, Sat - Sun, Except holiday or Choose weekday. The icons indicate the weekday you select.
5. Select **Alarm type** to select a type for your alarm.
6. Touch **Alarm bell** then select bell. To listen to sounds touch the sound, followed by .
7. Add a memo for the alarm.


# Organiser

8. Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.
9. Once you have set your alarm, touch **Save**.
10. To power off the alarm, you can choose snooze or stop.

**NOTE:** You can set up to 5 alarms.

**TIP!** Touch on/off icon on the right hand side of the alarm.



## Adding a memo

1. From the home screen select  then touch **Utilities** and choose **Memo**.
2. Touch **Add memo**.
3. Type your memo, followed by **Save**.
4. Your memo will appear on screen next time you open the **Memo** application.

**TIP!** You can edit an existing memo. Select the one you want to edit and type your changes.

## Voice recorder

Use your voice recorder to record voice memos or other sounds.





1. Touch  then **Utilities**.
2. Touch **Voice recorder** then  and choose from:

**Settings > Duration** - Set the recording duration. Choose from **MMS, 1 min** or **No limit**.

**Settings > Quality** - Select the sound quality. Choose from Super Fine, Fine or Normal.


**Go to sounds** - Open the Voice recordings folder in **My sounds**.


## Recording a sound or voice

1. Touch  then **Utilities**.
2. Touch **Voice recorder**.
3. Touch  to begin recording.
4. Touch  to end recording.
5. Touch  to listen to your recording.





## Sending the voice recording

1. Once you have finished recording, touch .
2. Touch **Send** and choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose Bluetooth, you will be prompted to turn Bluetooth on.


**NOTE:** After you have finished recording, touch  and choose **Send, Files, Delete, Use as** (to use the recording as your ringtone), **Settings** or **Go to sounds**.

## Using your calculator


1. From the home screen select , then touch **Utilities** and choose **Tools**.
2. Select **Calculator**.
3. Touch the numeric keys to input numbers.
4. For simple calculations, touch the function you require (+, -, x, ÷), followed by =.
5. For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **deg**, **sec**, **csc**, **cot**, **rad**, **log**, **ln** or **exp**.

# Organiser

## Converting a unit

1. From the home screen select , then touch **Utilities** and choose **Tools**.
2. Select **Converter**.
3. Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
4. You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
5. The corresponding value will appear on the screen.

## Using the stopwatch



1. From the home screen select , then touch **Utilities** and choose **Tools**.
2. Select **Stopwatch**.
3. Touch **Start** to begin the timer.
4. Touch **Lap** if you want to record a lap time.
5. Touch **Stop** to end the timer.
6. Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

## Adding a city to your world time

1. From the home screen select  then touch **Utilities** and choose **Tools**.
2. Select **World clock**.
3. Touch the  icon, followed by **Add city**. Start typing the name of the city you require and it will show the screen.
4. Touch the city to select it, and it will be added to your World time list.

## Jogging Buddy

Whether walking, running or jogging, GT505 provides up-to-the-second information including distance and time, and keeps an exercise log for you using advanced GPS technology.

1. From the home screen select  then touch **Utilities** and choose **Tools**.
2. Select **Jogging buddy**.
3. Touch << >> to a set Distance or Time for your jog.
4. You can switch Regular beep on or off.
5. Once GPS is connected, the start button will light up. Touch  to start.

 - Reset button

 - Start button

 - Pause button

 - Stop button

Regular beep - The phone beeps at distance or time intervals to help you keep track without having to keep looking at the screen.

# PC Sync

## Always ask mode

If you set the “Ask always mode” as default, the phone will always prompt you to select a type of USB connection mode each time you connect the phone to a PC via the data cable. If you disable the “Ask always mode”, the connection mode will be the one you have manually set in Menu - Settings - Connectivity - USB Mode and one of the options **Mass storage, PC suite** or **Music sync**.

You can synchronise your PC with your phone to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

## Installing LG PC Suite on your computer

1. From the home screen press and choose **Connectivity**.
2. Select **USB connection** mode and click **OK**.
3. Insert the supplied CD into your PC. Click on the LG PC Suite Installer which will appear on your screen.
4. Select the language you would like the installer to run in and click **OK**.
5. Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
6. Once installation is complete, the LG PC Suite icon will appear on your desktop.

## Connecting your phone and PC

1. Connect the USB cable to your phone and your PC.
2. Double click on the **LG PC Suite** icon on your desktop.
3. Click on **Connection Wizard**, then **USB**.
4. Click on **Next**, then **Next** again, then **Finish**. Your phone and PC are now connected.

## Backing up and restoring your phone's information

1. Connect your phone to your PC as outlined above.
2. Click on the **Backup** icon, and select **Backup** or **Restore**.

3. Choose to back up **Contents Data** and/or **Phonebook/Schedule/ToDo/Memo Data**. Select the location you would like to backup information to, or restore information from. Click **OK**.
4. Your information will be backed up.

## Viewing your phone files on your PC

1. Connect your phone to your PC as outlined above.
2. Click on the **Manage Files** icon.
3. All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

# PC Sync

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

## Synchronising your contacts

1. Connect your phone to your PC.
2. Click on the **Manage Contacts** icon.
3. Your PC will now import and display all contacts saved to your USIM card and handset.
4. Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

**NOTE:** To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Right click on one of your contacts and choose **Select all**, then **Copy** or **Move to phone memory**.

Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

## Synchronising your messages

1. Connect your phone to your PC.
2. Click on the **Messages** icon.
3. All of your PC and phone messages will be displayed in folders on your screen.
4. Use the tool bar of your screen to edit and rearrange messages.

## Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

1. Disconnect your phone from your PC.
2. From the home screen select , then touch **Settings**.
3. Select **Connectivity**, then **USB connection** mode.
4. Touch **Mass storage**.
5. Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.

6. A removable disk folder will open automatically on your computer, two if you have a memory card inserted, showing all the folders on your phone or memory card.

**NOTE:** Your phone must be unplugged from your PC to initiate Mass Storage.


**NOTE:** Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the content of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

# The web

## Browser

**Browser** gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.



## Accessing the web

1. From the home screen select , then touch **Utilities** and choose **Browser**.
2. To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Adding and accessing your bookmarks


For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

1. From the home screen select , then touch **Utilities** and choose **Browser**.
2. Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
3. To add a new bookmark, select  and touch **Add bookmark**. Enter a name for your bookmark followed by the URL.
4. Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
5. To access the bookmark simply touch the bookmark and then touch connect. You will be connected to your bookmark.

## Using RSS reader


RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites in an automated manner that is easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

## Saving a page

1. Access a webpage as described above.
2. Touch  and select **Save this page**.
3. Enter a name for the webpage so you can easily recognise it.
4. Touch **Save**.


**TIP!** This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

## Accessing a saved page


1. From the home screen select  then touch **Utilities** and choose **Browser**.
2. Select **Saved pages**.
3. Select the page you would like to view and it will open.

# The web

## Viewing your browser history

1. From the home screen select  then touch **Utilities** and choose **Browser**. Select **History**.
2. The web page you have accessed recently will be displayed. To access one of these pages, simply select the item required.

## Changing the web browser settings

1. From the home screen select  then touch **Utilities** and choose **Browser**. Select **Settings**.
2. You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **security**, or **Reset Settings**.
3. You can simply set these to on or off by touching the switch icon.

## Using your phone as a modem

Your GT505 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

### Using the USB cable:

1. Ensure you have the LG PC Suite installed on your PC.
2. Connect your GT505 and your PC using the USB cable and launch the LG PC Suite software.
3. Click **Communication** on your PC. Then click **Settings** and select **Modem**.
4. Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
5. Click **Connect** and your PC will connect through your GT505.


## Using Bluetooth:

1. Ensure Bluetooth is switched **On** and **Visible** for both your PC and GT505.
2. Pair your PC and GT505 so that a passcode is required for connection.
3. Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
4. Click **Communication** on your PC. Then click **Setting**.
5. Click **Modem**.
6. Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
7. Click **Connect** and your PC will connect through your GT505.

# Settings

Within this folder you can adapt your settings to make your GT505 personal to you.

## Changing your screen settings

1. Touch  then choose **Settings**.
2. Touch **Screen settings** and then choose from:

**Wallpaper** - Choose the theme for your home screen.

**Dialling** - Adjust the number size and colour.

**Font** - Adjust the font size.

**Backlight** - Choose how long the backlight remains on for.

**NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Brightness** - Adjust the screen brightness.

**Handset Theme** - Quickly change the whole look of your screen.

**Greeting message** - Choose on or off and fill in the greeting message.


Choose an image for **Incoming calls**, **Outgoing calls**, **Start-up** and **Shut-down**.

3. Touch **Save** to save your settings.

## Personalising your profiles

You can quickly change your profile on the home screen. Simply touch the status summary icon and touch the profile tab.


Using the settings menu you can personalise each profile setting.

1. Press  and then choose **Settings**.
2. Touch **Profiles** and then choose the profile you want to edit.
3. You can then change all of the sounds and alert options available in the list, including your **Voice/Video ringtone** and **Volume, Message alerts** and more.

## Changing your phone settings

Enjoy the freedom of adapting how your GT505 works to your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

1. Touch  then choose **Settings**.
2. Touch **Phone settings** then choose from the list below.
  - Date & Time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.
  - Power save** - Choose to switch the factory set power saving settings **On** and **Off**.

# Settings

**Languages** - Change the language of your GT505's display.

**Auto key lock** - Lock the keypad automatically in home screen.


**Security** - Adjust your security settings, including PIN codes and handset lock. The default security code is 0000.

**Memory manager** - See **Using memory manager**.

**Reset settings** - Reset all the settings to their factory definitions.

**Information** - View the technical information and phone guide for your GT505.


## Changing your touch settings

Touch  then **Settings**. Choose **Touch settings**. To reset the touchpad and make it easier to use, select **Touchpad calibration** and touch the crosses. Save the settings when you are happy with them.

Select **Touchscreen effect** to reset touch **Type, Tone** and **Vibration**.

## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Touch  then **Settings**. Touch **Connectivity**.

**Network settings** - Your GT505 connects automatically to your preferred network. To change these settings use this option.

**Internet profile** - Set the profiles for connecting to the internet.

**Access point** - Your network operator has already saved this information. You can add new access points using this menu.

**GPS type** - Choose either **Assisted GPS** or **Stand alone**.

## GPS

- GPS technology uses information from earth-orbiting satellites to find locations.
- A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach it, then uses that information to identify its location.
- It may take from a couple of seconds to several minutes.
- Assisted GPS(A-GPS ) on this mobile is used to retrieve location assistance data over packet data connection.
- The assistance data is retrieved from the Service server only when you needed.
- Take pictures of where you are and have the pictures tagged with information about your location.

# Settings

**NOTE:** GPS service has an error tolerance and it is unable to work in buildings or underground.

## **USB connection mode** -

Synchronise your GT505 using the LG PC Suite software to copy files from your phone.

If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is available for only music contents. If you want to synchronize with external memory, you can use 'External memory' as Primary storage. If you want to synchronise with internal memory, you can use 'Internal memory' as Primary storage.

**Synch Service** - The Server sync function synchronises the data in a phone and the data on a server such as contact address information, schedule items, to do items and memo items via a wireless network.

**Streaming settings** - Your network operator has already saved this information. You may edit it if you'd like to make changes.

**Java settings** - Allows you to set Profiles.

## **Using memory manager**

Your GT505 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately). You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by **Settings**.

Select **Phone settings** then

**Memory Manager**.

**Handset common memory** - View the memory available on your GT505 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications and others.


**Handset reserved memory** - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

**USIM memory** - View the memory available on your USIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage settings** - Choose the location you prefer items to be saved to.


## Using flight mode

Turn on flight mode by selecting  then **Settings**. Touch **Profiles** and choose **Flight mode**. Flight mode will not allow you to make calls, connect to the Internet, send messages or use Bluetooth.

## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

### To send a file:

1. Open the file you want to send, typically this will be a photo, video or music file.
2. Touch  and choose **Send**. Choose **Bluetooth**.
3. Touch **Yes** to turn Bluetooth on.
4. If you have already paired the Bluetooth device, your GT505 will not automatically search for other Bluetooth devices. If not, your GT505 will search for other Bluetooth enabled devices within range.
5. Choose the device you want to send the file to and touch **Select**.
6. Your file will be sent.



# Settings

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

## To receive a file:

1. To receive files your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
2. A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
3. You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your My stuff.

## Changing your bluebooth settings:

1. Touch  and choose **Settings**.
2. Choose **Bluetooth** then touch  and choose **Settings**.

Make your changes to:

**My device visibility** - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

**My device name** - Enter a name for your GT505.

**Supported services** - Show all Bluetooth functions supported by your phone.

**My address** - Show your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your GT505 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

1. Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
2. Touch **Search**.
3. Your GT505 will search for devices. When the search is completed **Refresh** will appear on screen.
4. Choose the device you want to pair with and enter a passcode, then touch **OK**.
5. Your phone will then connect to the other device, on which you should enter the same passcode.
6. Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

1. Check your Bluetooth is **On** and **Visible**.
2. Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
3. Touch **Ask always** or **Allow without ask** and touch **Yes** to Connect now Your GT505 will automatically switch to Headset profile.

# Wi-Fi

Wireless Manager allows you to manage Wi-Fi Internet and Bluetooth connections on your device. It allows the phone to connect local wireless networks, or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology.

**NOTE:** GT505 supports WEP, WPA-PSK/2 encryption not EAP encryption. If your Wi-Fi service provider or network administrator sets the encryption for network security, you should fill in the key in the pop-up window. If the encryption is not set, this pop-up window is not shown. If you don't know the key, you need to ask for it from your Wi-Fi service provider or network administrator.

## 1. How to set up Wi-Fi

1. Wi-Fi On
2. AP (Access Point) Search
  - Searches which AP is available to be connected.
3. AP Connect
  - Connects to the desired AP in the AP search list.
  - If the AP is WEP or WPA-PSK/2 security type, enter the security key.

## 2. Wi-Fi network profile support

1. Wi-Fi profile support (how to connect to frequently used AP or Hidden AP)
  - 1) If the AP does not appear in the search list, it is possible to connect to it by saving it as a profile.

- 2) By saving the frequently used AP as a profile, it is easier to enter the Security key when connecting to the AP that has the Security type.
  - 3) If the AP does not support the DHCP, it is possible to connect to the AP by using the static IP.
2. Description of each field in the Wi-Fi profile
- 1) Network name: SSID (ID)
  - 2) Security type: WEP, WPA-PSK/2 support.
  - 3) Security key: saves the security key.
  - 4) IP/DNS setting: this allows you to set Dynamic or Static depending on the DHCP support of the AP.  
If you set Static, enter the field value of the IP Address and DNS server to connect to the static IP when attempting to connect.
3. How to save the Wi-Fi profile
- 1) Select Saved networks from the Options menu, then select Add networks and enter values into each field.
  - 2) It is possible to select and save the AP search list after selecting Wi-Fi On and then selecting Refresh (Searching AP).
  - 3) After connecting to the AP the Y/N popup will enable you to save the profile.

# Phone Software update

## LG Mobile Phone Software upgrade in web site

For more information and using this function,

Please visit LGmobile.com site

**path: <http://www.lgmobile.com>  
– select country – Products menu  
– Manual & software menu**

This Feature allows you to upgrade your software to the latest version and conveniently on the internet without needing to visit our service center.

As the mobile phone software upgrade requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or battery during the upgrade may seriously damage you mobile phone.

As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

# Accessories

These accessories were supplied with GT505.

## Charger



## Data cable and CD

Connect and synchronise your GT505 and PC.



## Battery



## Stereo headset



## User Guide

Learn more about your GT505.



## NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

## Network service

The wireless phone described in this guide is approved for use on the GSM and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

Product name : GT505

System : GSM / W-CDMA

### Ambient Temperatures

Max : + 50 °C (discharging),  
+ 45 °C (charging)

Min : - 10 °C (discharging),  
0 °C (charging)

### LG Service Center

by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd.,  
Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Fri 08:00 - 17:40

Call center : 0-2878-5757

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM / W-CDMA Terminal Equipment

Model Name

GT505

Trade Name

LG

CE 0168 !

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2006  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

13. May, 2009

Signature of representative

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GT505 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.941 W/kg (10g) and when worn on the body is 1.17 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/ kg averaged over 1g of tissue.

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

# Guidelines for safe and efficient use

- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## **Glass Parts**

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

## **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## **Potentially explosive atmospheres**

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.

# Guidelines for safe and efficient use

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective measures</b>
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective measures</b>
Phone cannot be switched on	On/Off key pressed too briefly	Press On/Off key for at least two seconds.
	Battery empty	Charge battery. Check charging indicator in the display.
	Battery contacts dirty	Clean contacts.
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No mains voltage	Plug in to a different socket or check voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger Battery defective	Only use original LG accessories. Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.



Digital Mobile

สำหรับส่งคืนบริษัท

# Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : \_\_\_\_\_ บัตรรับประกันเลขที่ : \_\_\_\_\_  
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): \_\_\_\_\_ เลขเครื่อง : \_\_\_\_\_  
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : \_\_\_\_\_  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : \_\_\_\_\_  
(อังกฤษ) : \_\_\_\_\_

วัน เดือน ปี เกิด : \_\_\_\_\_ เพศ : \_\_\_\_\_  
(Date of Birth) (Gender)

ที่อยู่ : \_\_\_\_\_  
(Address)

อาชีพ : \_\_\_\_\_ โทรศัพท์ : \_\_\_\_\_ E-mail : \_\_\_\_\_  
(Occupation) (Telephone No.)

ชื่อจากร้าน : \_\_\_\_\_  
(Dealer's Name)

**ศูนย์บริการข้อมูล**

Customer Information Center 0-2878-5757 or

1-800-

**L G L G L G**  
**5 4 5 4 5 4**

โทรฟรี

[www.lge.co.th](http://www.lge.co.th)

บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด  
75/81 อาคารริมนอนด ชั้น 22 สุขุมวิท 26 คลองตัน  
คลองเตย กรุงเทพฯ 10110  
ศูนย์บริการข้อมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

**LG Electronic (Thailand) CO., Ltd**  
75/81 Richmond Bldg, 22<sup>nd</sup> FL, Sukumvit 26,  
Klongton, Klongtoey Bangkok 10110  
Customer Information Center  
Tel, 0-2878-5757 Fax, 0-2466-0250

 **LG Electronics (Thailand)**

ใบอนุญาตเลขที่ ปณ.ต/2117 ปณจ. พระโขนง  
ถ้าฝากส่งในประเทศไม่ต้องหนักตราไปรษณียากร



**บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด**

72/127 ถนนสมเด็จพระเจ้าตากสิน  
แขวงบুদ্ধโคโล เขตธนบุรี  
กรุงเทพ 10600

## เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น

(This warranty is valid only in Thailand)

- |  |   |
|--|---|
| 1) บัตรรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น   | 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.  |
| 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบ หรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่อง ผิดวิธี บริษัทฯ ยินดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย | 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts. |

## เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- |   |  |
|---|--|
| 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับการแต่งตั้ง                                       | 1) If repair are not undertaken by LG Service Center or Authorize Service Center.                      |
| 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย  | 2) Damage to accessory due to misuse.  |
| 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ, ไฟไหม้, ฟ้าผ่า, ใช้กระแสไฟฟ้าผิดประเภทและอุบัติเหตุอื่นๆที่มนุษย์ไม่สามารถควบคุมได้ | 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control. |

ศูนย์บริการคาสิน (สำนักงานใหญ่) : เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงบุคคโล เขตธนบุรี กรุงเทพฯ 10600

โทร : 0-2878-5757

แฟกซ์ : 0-2466-0250











