

عربي
ENGLISH



ENGLISH
عربي

دليل مستخدم GT350i

دليل مستخدم
GT350i

P/NO : MMBB0379237 (1.0)

LG Electronics

USER GUIDE
GT350i

P/NO : MMBB0379237 (1.0)



CE 0168 !

www.lg.com



CE 0168 !

www.lg.com

Bluetooth QD ID B016447



قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موافق الخدمة.

لا يوصى بهذا الهاتف للذين يعانون من فقدان النظر لأنّ لوحة المفاتيح هي عبارة عن شاشة لمس.

دليل مستخدم GT350i

تهانينا لشرائك هاتف GT350i المتقدم والصغير من LG،
والمصمّم للعمل مع التكنولوجيا الرقمية الأحدث لاتصالات
الهواتف المحمولة.

المحتويات

26.....	الأسماء	6.....	إرشادات لاستخدام آمن و فعال
26.....	البحث عن جهة اتصال	10.....	التعرّف على الهاتف الخاص بك
26.....	إضافة جهة اتصال جديدة	11.....	نظرة على الهاتف وهو مفتوح
26.....	إنشاء مجموعة	13.....	تثبيت بطاقة SIM و البطارية
27.....	تغيير إعدادات الأسماء	14.....	شحن الهاتف
28.....	الرسائل	15.....	بطاقة الذاكرة
28.....	إرسال رسالة	16.....	إستخدام شاشة اللمس
28.....	إدخال النص	16.....	تلميحات شاشة اللمس
28.....	وضع T9	16.....	التحكم بشاشة اللمس
29.....	إعداد البريد الإلكتروني	17.....	الشاشة الرئيسية الخاصة بك
29.....	استرداد رسائل البريد الإلكتروني	18.....	المفاتيح السريعة
29.....	إرسال بريد إلكتروني باستخدام حسابك الجديد	19.....	شريط الحالة
29.....	تغيير إعدادات البريد الإلكتروني	20.....	تغيير الحالة من شريط الحالة
30.....	حافظات الرسائل	20.....	استخدام وظيفة المهام المتعددة
30.....	تغيير إعدادات الرسائل النصية	21.....	المكالمات
31.....	تغيير إعدادات رسائل الوسائط المتعددة	21.....	إجراء مكالمات
31.....	تغيير الإعدادات الأخرى	21.....	إجراء مكالمات من الأسماء
32.....	الكاميرا	21.....	الرد على مكالمات ورفضها
32.....	التعرّف على محدّد المنظر	22.....	خيارات أثناء المكالمات
33.....	التقاط صورة سريعة	23.....	الاتصال السريع
33.....	بعد النقاط الصورة	23.....	إجراء مكالمات ثانية
34.....	استخدام الإعدادات المتقدمة	24.....	استخدام تحويل المكالمات
		24.....	استخدام حظر المكالمات
		25.....	تغيير إعداد المكالمات العام

المحتويات

43.....إنشاء قائمة تشغيل	35.....كاميرا الفيديو
44.....راديو FM	35.....التعرف على محدّد المنظر
44.....البحث عن محطات	36.....إنشاء فيديو سريع
44.....إعادة تعيين القنوات	36.....بعد إنشاء الفيديو
45.....المنسّق	37.....استخدام الإعدادات المتقدمة
45.....إضافة حدث إلى التقويم	38.....الصور و مقاطع الفيديو
45.....إضافة عنصر إلى قائمة المهام	38.....عرض الصور وملفات الفيديو
45.....استخدام الباحث عن التاريخ	38.....النقاط صورة من فيديو
46.....إضافة مذكرة	38.....مشاهدة الصور كعرض شرائح
46.....ضبط المنبّه	39.....تعيين صورة خلفية الشاشة
46.....إضافة مدينة إلى ساعتك العالمية	39.....تعديل الصور
46.....مسجّل الصوت	40.....الوسائط المتعددة
47.....تسجيل ملف صوتي أو صوت	40.....الصور
47.....استخدام الحاسبة	40.....إرسال صورة
48.....مزمنة الكمبيوتر الشخصي	40.....استخدام صورة
48.....تثبيت LG PC Suite على الكمبيوتر	40.....طباعة صورة
48.....توصيل الهاتف والكمبيوتر	41.....نقل صورة أو نسخها
نسخ احتياطي للمعلومات على الهاتف	41.....أصوات
48.....واستعادتها	41.....استخدام صوت
48.....عرض ملفات الهاتف على الكمبيوتر	41.....ملفات الفيديو
49.....مزمنة الأسماء	41.....مشاهدة فيديو
49.....مزمنة الرسائل	41.....إرسال فيديو كليب
50.....المتصفح	41.....نقل ملف إلى هاتفك
50.....الوصول إلى موقع ويب	42.....أخرى
50.....استخدام قارئ RSS	42.....الموسيقى
50.....استخدام الهاتف كمودم	43.....نقل الموسيقى إلى الهاتف
	43.....تشغيل أغنية

52.....	الإعدادات
52.....	تخصيص الأوضاع
52.....	تغيير إعدادات الشاشة
52.....	تغيير إعدادات الهاتف
53.....	تغيير إعدادات التوصيل
53.....	استخدام إدارة الذاكرة
54.....	إرسال الملفات واستلامها باستخدام بلوتوث
54.....	تغيير إعدادات بلوتوث
54.....	الاقتران بجهاز بلوتوث آخر
55.....	استخدام سماعة رأس بلوتوث
55.....	Wi-Fi
56.....	تحديث البرنامج
57.....	الملحقات
58.....	بيانات تقنية

إرشادات لاستخدام آمن و فعال

- معلومات بيانات SAR للمقيمين في بلدان/
مناطق تبني حد SAR الموصى به من قبل
معهد المهندسين الكهربائيين والإلكترونيين
(IEEE) هو 1.6 واط/كغ كمتوسط لكل جرام
واحد (1) من النسيج.

العناية بالمنتج وصيانته



تحذير

استخدم فقط البطاريات. والشواحن.
والملاحقات الموافق على استخدامها مع طراز
الهاتف المعين هذا. إن استخدام أي أنواع أخرى
قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق
على الهاتف المحمول. وقد يكون خطيراً.

- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة
إلى تقني صيانة مؤهل عندما تكون بحاجة إلى
تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة
الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة
الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة
مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرض هذه الوحدة للاهتزاز الميكانيكي أو
الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث
القوانين الخاصة تطالبك بذلك، على سبيل
المثال، لا تستخدم الهاتف في المستشفيات إذ
قد يؤثر على المعدات الطبية الحساسة.

يرجى قراءة هذه الإرشادات البسيطة، عدم التقيد
بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

التعرض لطاقة التردد اللاسلكي

معلومات حول التعرض للموجات اللاسلكية
ومعدل الامتصاص المحدد (SAR). لقد تم تصميم
طراز الهاتف المحمول GT350i هذا بحيث يفي
بمتطلبات السلامة القابلة للتطبيق المتعلقة
بالتعرض للموجات اللاسلكية. وتستند هذه
المتطلبات إلى إرشادات علمية تتضمن هوامش
سلامة مصممة لضمان السلامة لكل الأشخاص.
دون أخذ العمر والصحة بعين الاعتبار.

- تستخدم إرشادات التعرض للموجات اللاسلكية
وحدة قياس معروفة بمعدل الامتصاص المحدد.
أو SAR. وتجري اختبارات SAR باستخدام
أساليب قياسية فيما ينفذ الهاتف عملية
الإرسال بأعلى مستوى طاقة مسموح به في كل
نطاقات التردد التي تم اختبارها.
- وعلى الرغم من وجود اختلافات بين مستويات
SAR لمختلف طرازات هاتف LG. فهي كلها
مصممة بحيث نفي بالإرشادات المتعلقة
بالتعرض للموجات اللاسلكية.
- حد SAR الذي توصي به اللجنة الدولية للحماية
من الإشعاع غير المؤين (ICNIRP) هو 2 واط/
كجم وهو حد مقسم على نحو مناسب إلى
10 جرامات من النسيج.
- قيمة SAR الأكثر ارتفاعاً لطراز الهاتف هذا
والتي تم اختبارها من قبل DASY4 للاستخدام
في الأذن هي 0.540 واط/كجم (10 جرام) وعند
حملة على الجسم تكون هذه القيمة 0.568
واط/كجم (10 جرام).

- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك، تجنّب وضع الهاتف على أجهزة إعداد النبض مثلاً، في الجيب على مستوى الصدر.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة، فقد يبطئ ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.

- لا تمسك الهاتف بيدتين رطبتين فيما يكون شحنه جارٍ، فقد يتسبّب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبززين أو التينر أو الكحول).
- لا نشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوئة جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر، لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

تشغيل فعال للهاتف

الأجهزة الإلكترونية

قد تعرّض كل الهواتف المحمولة للتشويش، ما قد يؤثر على أدائها.

إرشادات لاستخدام آمن و فعال

في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قبل طاقم الطائرة.

الأطفال

- ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ

- قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافة. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ. راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى. ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.

- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

تجنب إلحاق الضرر بسمعك

- قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك. ونوصي بالتالي بالأتيقون بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.

القطع الزجاجية

- بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية. في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته. توقف عن استخدام الجهاز المحمول إلى أن يتم استبداله من قبل موفر خدمة معتمد.

مناطق التفجير

- لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود. واتبع الأنظمة أو القوانين.

مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا نحم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلص منها كمهملات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة، وإعدادات المنتج، والنقوش المستخدمة، والبطارية والأوضاع البيئية.

التعرّف على الهاتف الخاص بك




نظرة على الهاتف وهو مفتوح



⚠ تحذير: قد يؤدي وضع شيء ثقيل الوزن على الهاتف أو الجلوس عليه عند وجوده في جيبك إلى إلحاق ضرر بوظيفة شاشة LCD وشاشة اللمس.

نظرة على الهاتف وهو مفتوح

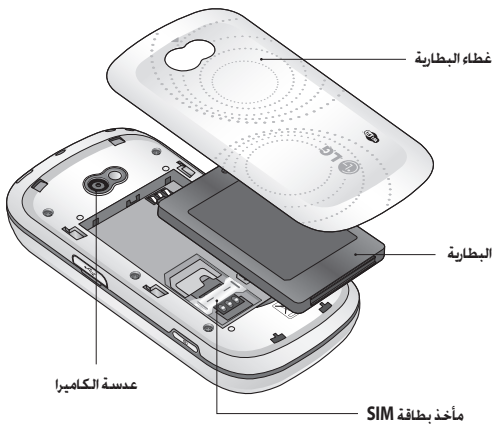

تثبيت بطاقة SIM و البطارية

⚠ تحذير: لا تستخدم أطرافك لإخراج البطارية.

⚠ تحذير: لا تقم بإزالة البطارية عندما يكون الهاتف قيد التشغيل، إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

1 نزع غطاء البطارية


حرك غطاء البطارية نحو أسفل الهاتف وبعيداً عنه.



3 تركيب البطارية


قم أولاً بإدخال الجهة العليا للبطارية في الحافة العليا لحجرة البطارية.

تأكد من محاذاة ملامسات البطارية مع أطراف توصيل الهاتف، اضغط جهة البطارية السفلى إلى الأسفل حتى تستقر في مكانها.

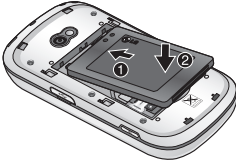

2 تثبيت بطاقة SIM

قم بتمرير بطاقة SIM إلى داخل حاملها وتأكد من كون ناحية الموصلات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. احرص على إزالة البطارية من الهاتف قبل تثبيت بطاقة SIM. لإزالة بطاقة SIM، اسحبها بلطف في الاتجاه المعاكس.

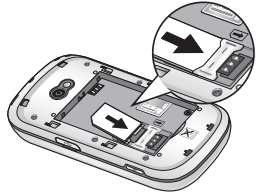

شحن الهاتف

قم بإزالة غطاء مقبس الشاحن الموجود على جانب GT350i. قم بتوصيل مهبط السفر (الشاحن) وكبل USB المضمن. قم بتوصيل كبل USB في الهاتف وقم بتوصيله بمقبس الكهرباء. يجب أن يتم شحن الهاتف GT350i حتى تظهر على الشاشة رسالة تشير إلى أن "البطارية ممتلئة".

ملاحظة: يجب أن يتم شحن البطارية بالكامل أولاً لتحسين فترة عمل البطارية. تجاهل رسالة "البطارية الممتلئة" الأولى واترك الهاتف في الشحن ليلاً.



بطاقة الذاكرة

تركيب بطاقة ذاكرة

يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة MicroSD.

ملاحظة: بطاقة الذاكرة هي ملحق اختياري.

- 1 افتح غطاء فتحة بطاقة الذاكرة الموجود على حافة الهاتف اليسرى.



- 2 حرّك بطاقة الذاكرة إلى داخل الفتحة. حتى تستقر في مكانها. تأكد من كون ناحية الملامسات الذهبية موجهة نحو الأسفل.

تنسيق بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهيأة أصلاً. إذا لم تكن مهيأة، ستحتاج إلى تهيئتها قبل البدء باستخدامها.

- 1 في الشاشة الرئيسية حدّد  . ثم إعدادات الهاتف في علامة التبويب الإعدادات.

- 2 المس معلومات الذاكرة ثم اختر الذاكرة الخارجية.

- 3 المس تهيئة ثم أكد خيارك.

- 4 أدخل كلمة المرور إذا كان قد تم تعيين واحدة. ستنتم تهيئة البطاقة وتصبح جاهزة للاستخدام.

ملاحظة: إذا تضمنت بطاقة الذاكرة محتوى موجوداً، فقد تختلف بنية الحافظة بعد التهيئة بما أنه تم حذف كل الملفات.

إستخدام شاشة اللمس

التمرير

قم بالسحب من جهة إلى جهة للتمرير.
في بعض الشاشات، مثل المحفوظات الأخيرة،
يمكنك أيضاً التمرير إلى الأعلى أو الأسفل.



تلميحات شاشة اللمس

- لتحديد عنصر اللمس وسط الرمز.
- لا حاجة إلى الضغط بقوة، فشاشة اللمس حساسة بشكل كافٍ يتيح لها التعرف على لمسة خفيفة ولكن ثابتة.
- استخدم رأس إصبعك لللمس الخيار المطلوب، احتسرس من عدم لمس أي مفاتيح أخرى.
- عندما لا يكون الهاتف GT350i قيد الاستخدام، يعود إلى شاشة القفل.

التحكم بشاشة اللمس

تتغير مفاتيح التحكم في شاشة لمس الهاتف GT350i بسرعة، وهذا يتوقف على المهمة التي تقوم بها.

فتح التطبيقات

افتح أي تطبيق. اللمس الرمز.




الشاشة الرئيسية الخاصة بك

يمكنك أن تقوم بسحب وإفلات ما تحتاج إليه فوراً في كل أنواع الشاشات الرئيسية.

نشط

شاشة الاتصال
السريع الرئيسية
يمكنك الاتصال أو
إرسال رسالة أو تعديل
جهة اتصال مباشرة
في الشاشة الرئيسية.
عند لمس ، تظهر
قائمة الاتصال السريع
ويمكنك سحب
الاتصالات السريعة إلى
الشاشة.

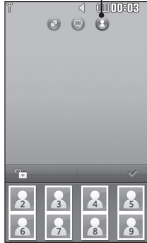

نشط

شاشة عنصر
واجهة المستخدم
الرئيسية
عند لمس  في
الجانب الأيمن
السفلي من الشاشة،
تظهر لوحة عنصر
واجهة الاستخدام
النقال. عند تحديد
عنصر واجهة
الاستخدام وسحب
إلى الشاشة، يظهر



عنصر واجهة الاستخدام على الشاشة الرئيسية
مكان إسقاطه.

نشط

تلميح! تعتمد واجهة المستخدم على
ثلاثة أنواع شاشات رئيسية، للتبديل بين
الشاشات الرئيسية قم باللمس بسرعة فوق
الشاشة من اليمين إلى اليسار أو من اليسار
إلى اليمين.

شاشة
Livesquare
الرئيسية
على شاشة
Livesquare

يمكنك بسهولة إجراء
مكالمة وإرسال رسالة
إلى الرقم المخصص
لصورة رمزية.

لاستخدام وظائف
المكالمات أو الرسائل
أو الأسماء، حدّد صورة

رمزية واختر رمز المفاتيح السريع الذي تريد استخدامه.



الشاشة الرئيسية الخاصة بك

المفاتيح السريعة

توفر المفاتيح السريعة الموجودة على الشاشة الرئيسية وصولاً سهلاً بمجرد لمسة واحدة إلى أكثر الوظائف استخداماً.

المس لفتح الأسماء. للبحث عن الرقم الذي تريد الاتصال به. أدخل اسم جهة الاتصال في أعلى الشاشة مستخدماً لوحة اللمس. يمكنك إنشاء جهات اتصال جديدة وتعديل الأسماء الموجودة.



المس لإحضار لوحة الطلب بواسطة اللمس لإجراء مكالمة.



المس لفتح القائمة العلوية الكاملة التي تنفصل إلى أربع فئات.



المس للوصول إلى قائمة الرسائل. من هنا يمكنك إنشاء رسالة SMS أو MMS جديدة. أو عرض حافظة الرسائل.



شريط الحالة

يستخدم شريط الحالة رموزاً مختلفة للإشارة إلى أمور مثل قوة الإشارة والرسائل الجديدة وفترة عمل البطارية. وكذلك لإعلامك ما إذا كان بلوتوث أو GPRS نشطاً.

يفسر الجدول التالي معنى الرموز التي قد تشاهدها على شريط الحالة.

الرمز	الوصف
	تم تعيين منبه
	الوضع المخصص قيد الاستخدام (يختلف الرقم الموجود في الرمز)
	الوضع عادي قيد الاستخدام
	الوضع خارجي قيد الاستخدام
	الوضع صامت قيد الاستخدام
	سماعة الرأس قيد الاستخدام
	المكالمات محوالة
	التجوال
	وضع الرحلات الجوية قيد التشغيل
	بلوتوث نشط
	تشغيل الموسيقى الخلفية BGM
	إيقاف مؤقت للموسيقى الخلفية BGM
	تم تمكين بطاقة الذاكرة للاستخدام

الرمز	الوصف
	تعدد المهام
	قوة إشارة الشبكة (يختلف عدد الأشرطة)
	EDGE قيد الاستخدام
	إشارة الشبكة غير متوفرة
	فترة العمل المتبقية للبطارية
	البطارية فارغة
	رسالة نصية جديدة
	رسالة صوتية جديدة
	صندوق الوارد للرسائل ممتلئ
	فشل إرسال الرسالة
	فشل إرسال رسالة الوسائط المتعددة
	رسائل البريد الإلكتروني غير المقروءة في صندوق البريد الوارد
	فشل الإرسال

الشاشة الرئيسية الخاصة بك

استخدام وظيفة المهام المتعددة

اضغط مفتاح المشغل الخاص بالمهام المتعددة لبرهة قصيرة  لفتح قائمة المهام المتعددة. من علامة تبويب التطبيق قيد التشغيل يمكنك عرض كل التطبيقات الجارية تشغيلها والوصول إليها. يمكنك تشغيل وتعديل تطبيقاتك المفضلة من علامة التبويب التطبيقات المفضلة.

عند وجود تطبيق يجري تشغيله في الخلفية (لعبة أو راديو FM مثلاً). يظهر  في شريط الحالة.

تغيير الحالة من شريط الحالة

المس وسط شريط الحالة لفتح ملخص الحالة. يعرض الوقت الحالي والشبكة ومعرّف SVC والبطارية وذاكرة الهاتف والذاكرة الخارجية والوضع MP3 وحالة بلوتوث. ويمكنك هنا تعيين نوع الوضع. وتشغيل / إيقاف تشغيل MP3s مؤقتاً. وتنشيط / إلغاء تنشيط بلوتوث.



شريط الحالة

المكالمات

إجراء مكالمة

- 1 على الشاشة الرئيسية المس  لفتح الأسماء.
- 2 اضغط خانة حقل الاسم في أعلى الشاشة وأدخل الأحرف القليلة الأولى من جهة الاتصال التي تريد الاتصال بها باستخدام لوحة المفاتيح.
- 3 في القائمة التي تمت تصفيتها. المس رمز المكالمة إلى جانب جهة الاتصال التي تريد الاتصال بها. تستخدم المكالمة الرقم الافتراضي إذا كان هناك أكثر من رقم لجهة الاتصال هذه.
- 4 أو يمكنك لمس اسم جهة الاتصال وتحديد الرقم الذي تريد استخدامه إذا كان هناك أكثر من رقم واحد لاستخدامه لجهة الاتصال هذه. يمكنك أيضاً لمس  لبدء الاتصال بالرقم الافتراضي.

الرد على مكالمة ورفضها

عند رنين الهاتف. المس المفتاح الذكي للإجابة على المكالمة.

لكنم صوت الرنين. قم بالتمرير إلى أعلى شاشة القفل. يؤدي ذلك إلى إلغاء قفل الهاتف إذا كان مقفلاً. ثم المس . يُعتبر هذا الأمر مفيداً إذا كنت قد نسيت تغيير وضع الهاتف إلى صامت أثناء حضور اجتماع. المس رفض لرفض مكالمة واردة.


- 1 المس  لفتح لوحة المفاتيح.
- 2 أدخل الرقم باستخدام لوحة المفاتيح.
- 3 المس  لبدء المكالمة.
- 4 لإنهاء المكالمة. اضغط على المفتاح الذكي.

تلميح! لإدخال الرمز + بهدف إجراء مكالمة دولية. اضغط باستمرار  0+ .

تلميح! اضغط على مفتاح التشغيل لإيقاف شاشة اللمس وذلك لمنع إجراء مكالمات عن طريق الخطأ.

المكالمات

خيارات أثناء المكالمة

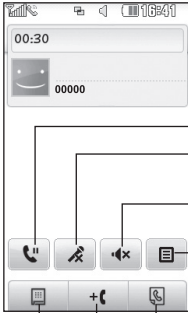

انتظار - المس "📞" لوضع المكالمة قيد الانتظار.

كتم - المس "🔇" لإيقاف تشغيل الميكروفون بحيث لا يتمكن الشخص الذي تتكلم معه من سماعك.

مكبر الصوت - المس "🔊" لإيقاف تشغيل مكبر الصوت.

الخيارات - المس "☰" لإحضار قائمة بالمزيد من خيارات أثناء المكالمة.

المس "📞" للبحث عن الأسماء أثناء إجراء مكالمة.

المس "➕" لإضافة شخص آخر إلى المكالمة.

المس "☎️" لفتح لوحة مفاتيح رقمية لإجراء مكالمة ثانية. تسمح لك هذه الوظيفة أيضاً بالتنقل عبر القوائم مع خيارات مرقمة عند طلب خدمات هاتف ثابتة مثل مراكز الاتصال.

تلميح! للتمرير عبر قائمة خيارات أو قائمة جهات اتصال. المس العنصر الأخير المرئي وقم بتمرير إصبعك إلى أعلى الشاشة، فتتحرك القائمة نحو الأعلى وتحصل على المزيد من العناصر المرئية.

الاتصال السريع

يمكنك تعيين جهة اتصال تطلبها بشكل متكرر إلى رقم اتصال سريع.

1 حدد الأسماء في علامة التبويب الاتصال

والمس  وحدد الاتصالات السريعة.

2 يتم مسبقاً تعيين بريدك الصوتي إلى رقم الاتصال السريع 1. ولا يمكنك تغييره. المس أي رقم آخر لتعيينه كجهة اتصال سريع.

3 تفتح الأسماء. حدّد جهة الاتصال التي تريد

تعيينها إلى ذلك الرقم وذلك بلمس رقم الهاتف الخاص بها مرة واحدة. للعثور على جهة اتصال. اضغط مربع حقل الاسم وأدخل الحرف الأول من اسم جهة الاتصال المطلوبة.

إجراء مكالمة ثانية

1 أثناء المكالمة الأولى. المس  واكتب الرقم الذي تريد الاتصال به.

2 المس  لتوصيل المكالمة.

3 يتم عرض المكالمتين معاً على شاشة المكالمة. ويتم إقفال المكالمة الأولية وبوضع المتصل في حالة الانتظار.

4 للتبديل بين المكالمات. المس  أو اضغط على رقم المكالمة قيد الانتظار.

5 لإنهاء إحدى المكالمتين أو كلاهما اضغط على  ثم حدّد إنهاء يتبعها الكل أو قيد الانتظار أو نشط.

تلميح! المس أي إدخال لسجل مكالمة واحدة لعرض تاريخ المكالمة. ووقتها ومدتها.

ملاحظة: سيفرض عليك رسم مقابل كل مكالمة تجريها.

المكالمات

استخدام تحويل المكالمات

1 المس إعدادات المكالمات في علامة التبويب إعدادات.

2 المس تحويل المكالمات.

3 اختر ما إذا كنت تريد تحويل المكالمات

الصوتية عندما يكون الخط مشغولاً أو عند عدم الرد أو عندما لا يكون الاتصال بك ممكناً.

4 أدخل الرقم الذي تريد أن يتم تحويل المكالمات إليه.

5 المس طلب للتنشيط.

ملاحظة: يتم فرض رسوم على تحويل المكالمات. يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.

تلميح! لإيقاف تشغيل كل عمليات تحويل المكالمات، حدّد إلغاء تنشيط الكل من قائمة تحويل المكالمات.

استخدام حظر المكالمات

1 المس إعدادات المكالمات في علامة التبويب إعدادات.

2 المس حظر المكالمات.

3 اختر أحد الخيارات الستة أو كلها:

كل الصادرة

المكالمات الدولية الصادرة

المكالمات الدولية الصادرة باستثناء المحلية

كل الواردة

الواردة عند السفر

إلغاء تنشيط الكل

4 أدخل كلمة مرور حظر المكالمات. يرجى التحقق من توفر هذه الخدمة مع مشغل الشبكة.

تلميح! حدّد أرقام الاتصال الثابتة من خيارات إعدادات المكالمات لتنشغيل وجميع قائمة بالأرقام التي يمكن الاتصال بها من الهاتف. ستحتاج إلى الحصول على رمز PIN2 من المشغل. وحدها الأرقام المضمّنة في قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها من هاتفك.

تغيير إعدادات المكالمات العام

1 لمس إعدادات المكالمات في علامة التبويب إعدادات.

2 قم بالتمرير واللمس الإعدادات العامة. من هنا يمكنك تعديل إعدادات الخيارات التالية:

رفض المكالمة - مرر المفتاح إلى التشغيل لتحديد قائمة الرفض. يمكنك لمس مربع النص للاختيار من كل المكالمات أو الأسماء أو المجموعات المحددة أو من الأرقام غير المسجلة (غير المضمنة في الأسماء) أو من دون معرف المتصل. لمس حفظ لتغيير الضبط.

إرسال رقمي - اختر ما إذا كنت ترغب في أن يظهر رقمك عند اتصالك بأحدهم.

معاودة الاتصال التلقائي - مرر المفتاح إلى اليسار

للتشغيل أو إلى اليمين لـ إيقاف التشغيل.

وضع الرد - اختر ما إذا كنت تريد الرد على الهاتف باستخدام المفتاح الذكي أو أي مفتاح.

منبه الدقائق - مرر المفتاح إلى اليسار لبدء التشغيل لسماع نغمة كل دقيقة خلال فترة المكالمة.

وضع الرد بلوتوث - حدّد لا يدوي لتتمكن من الرد على مكالمة باستخدام سماعة رأس بلوتوث. أو حدّد هاتف للضغط على مفتاح موجود على الهاتف للرد على مكالمة. حفظ رقم جديد - حدّد نعم لحفظ رقم جديد.

البحث عن جهة اتصال

- 1 المس الأسماء في علامة التبويب الاتصال.
- 2 تظهر قائمة بالأسماء، وعندما تكتب الحرف الأول من اسم جهة الاتصال في حقل الاسم، تظهر قائمة بالجهات التي تبدأ بهذا الحرف.

تلميح! يتم عرض لوحة المفاتيح الأبجدية حالما تقوم بضغط حقل الاسم.

أو المس  على الشاشة الرئيسية.

إضافة جهة اتصال جديدة

- 1 المس الأسماء في علامة التبويب الاتصال والمس إنشاء جهة اتصال جديدة.
- 2 اختر ما إذا كنت تريد حفظ جهة الاتصال في الهاتف أو SIM.
- 3 أدخل الاسمين الأول والأخير.
- 4 يمكنك أن تدخل حتى خمسة أرقام مختلفة لجهة اتصال واحدة، يتميز كل إدخال بنوع معين مسبقاً خاص بـ **المحمول والمنزل** و**المكتب** و**جهاز الاستدعاء** و**الفاكس**.
- 5 إضافة عنواني بريد إلكتروني، يمكنك إدخال حتى عنواني بريد إلكتروني مختلفين لجهة الاتصال الواحدة.

6 قم بتعيين جهة الاتصال إلى مجموعة أو أكثر، يمكنك تعيين أكثر من ثلاث مجموعات لجهة اتصال واحدة، اختر بين بلا مجموعة أو العائلة أو الأصدقاء أو الزملاء أو المدرسة أو المهتمون جداً.

7 كما يمكنك إضافة نغمة رنين و عيد ميلاد ذكرى و صفحة رئيسية و عنوان منزل و اسم شركة و مهنة و عنوان شركة و مذكرة و Livecon.

8 المس حفظ لحفظ جهة الاتصال.

إنشاء مجموعة

- 1 المس الأسماء في علامة التبويب الاتصال والمس المجموعات.
- 2  المس إنشاء مجموعة جديدة أو المس وحدد إنشاء مجموعة جديدة.
- 3 أدخل اسماً للمجموعة الجديدة، يمكنك أيضاً أن تحدد نغمة رنين خاصة بالمجموعة.
- 4 المس حفظ.

ملاحظة: إذا قمت بحذف مجموعة، فلن تفقد الأسماء التي كان قد تم تعيينها إلى تلك المجموعة، ستبقى موجودة في الأسماء.

تغيير إعدادات الأسماء

يمكنك تكييف إعدادات الأسماء بحيث تناسب
الأسماء لديك مع تفضيلاتك.

1 المس الأسماء في علامة التبويب الاتصال
. ثم المس الإعدادات.

2 من هنا يمكنك ضبط الإعدادات التالية:

إعدادات قائمة الأسماء - ضبط سطوع موقع
الأسماء، اسم العرض وإعدادات مفتاح الأمر
السريع.

إرسال كل الأسماء عبر بلوتوث - أرسل كل
الأسماء إلى جهاز آخر باستخدام بلوتوث.
ستتم مطالبتك ببدء تشغيل بلوتوث إذا قمت
بتحديد هذا الخيار.

نسخ احتياطي للأسماء - يقوم بإجراء نسخ
احتياطي للأسماء لديك على الذاكرة الخارجية.
يتطلب هذا الخيار ذاكرة خارجية.

استعادة الأسماء - يقوم باستعادة الأسماء
لديك من الذاكرة الخارجية. يتطلب هذا الخيار
ذاكرة خارجية.

مسح الأسماء - قم بحذف كل الأسماء
المتوفرة لديك. اختر بين الهاتف و SIM والمس
نعم إذا كنت تريد بالتأكيد مسح الأسماء.

الرسائل

الرسائل

يجمع الهاتف GT350i ميزات إرسال رسائل SMS و MMS في قائمة واحدة بديهية وسهلة الاستخدام.

إرسال رسالة

- 1 المس للرسائل في علامة التبويب الاتصال. والمس رسالة جديدة لبدء إعداد رسالة جديدة.
- 2 المس لإدخال إضافة صورة أو فيديو أو صوت أو نموذج وهكذا دواليك.
- 3 المس المستلم في أسفل الشاشة لإدخال المستلمين. ثم أدخل الرقم أو المس 🔍 لتحديد جهة اتصال. كما يمكنك إضافة جهات اتصال عديدة.
- 4 المس إرسال عندما تصبح جاهزاً.

⚠️ تحذير: إذا تمت إضافة صورة أو فيديو أو صوت إلى رسالة SMS فسيتم تحويلها تلقائياً إلى MMS وسيُفرض رسم عليك وفقاً لذلك.

إدخال النص

هناك طريقتان لإدخال النص:

لوحة المفاتيح الرقمية التي تعمل باللمس و Qwerty.

المس لتشغيل وضع T9 .

يستخدم هذا الوضع عندما تعمل لوحة المفاتيح كأسلوب إدخال فقط.

المس 🌐 لاختيار لغة الكتابة.

المس 123 @# للتبديل بين الأرقام والرموز وإدخال النص.

استخدم مفتاح Shift للتبديل بين إدخال الأحرف الكبيرة أو الصغيرة.

وضع T9

يستخدم وضع T9 قاموساً مضمناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسل المفاتيح التي لمستها. يقوم بتوقع الكلمة التي تقوم بإدخالها ويقترح كلمات بديلة.

إعداد البريد الإلكتروني

المس البريد الإلكتروني في علامة التبويب
الاتصال.

إذا لم يتم تعيين حساب البريد الإلكتروني، فابدأ
بتعيين معالج البريد الإلكتروني وإنهائه.

يمكنك التحقق من الإعدادات وتعديلها بتحديد
. كما يمكنك التحقق من الإعدادات الإضافية
التي تمت تعبئتها تلقائياً عندما أنشأت الحساب.

استرداد رسائل البريد الإلكتروني

يمكنك أن تتحقق من وجود رسائل بريد إلكتروني
جديدة في حسابك تلقائياً أو يدوياً. للتحقق يدوياً:

1 المس البريد الإلكتروني في علامة التبويب
الاتصال.

2 المس الحساب الذي تريد استخدامه.

3 المس صندوق الوارد.

4 المس  وحدد استرداد أو مزامنة.

إرسال بريد إلكتروني باستخدام حسابك الجديد

1 المس بريد إلكتروني جديد فيفتح بريد
إلكتروني جديد.

2 أكمل الرسالة.

3 المس إرسال فيتم إرسال البريد الإلكتروني.

تغيير إعدادات البريد الإلكتروني

1 المس البريد الإلكتروني في علامة التبويب
الاتصال.

2 المس  وحدد إعدادات البريد الإلكتروني
ثم يمكنك تكييف الإعدادات التالية:

حسابات البريد الإلكتروني - قم بإعداد حساب
البريد الإلكتروني.

البريد الإلكتروني المفضل - حدد حساب
البريد الإلكتروني الذي تريد استخدامه.

السماح بالرد على البريد الإلكتروني - اختر
السماح بإرسال رسائل تأكيد القراءة.

طلب الرد على البريد الإلكتروني - اختر ما إذا
كان يجب طلب رسائل تأكيد القراءة.

الفواصل الزمنية للاسترداد - اختر مدى تكرار
قيام GT350i بالتحقق من وجود رسائل بريد
إلكتروني جديدة.

عدد الرسائل لاستردادها - اختر عدد رسائل
البريد الإلكتروني التي تود استردادها في
آن واحد.

تضمين الرسالة في إعادة التوجيه والرد -
اختر تضمين الرسالة الأصلية في ردك.

تضمين المرفق - اختر تضمين المرفق الأصلي
في أي رد.

الرسائل

العناصر المرسلّة - يتم وضع كل الرسائل التي أرسلتها في هذه الحافظة.

حافظاتي - إنشاء حافظات لتخزين رسائلك.

تغيير إعدادات الرسائل النصية

المس الرسائل في علامة التبويب الاتصال والمس الإعدادات. حدّد رسالة نصية. يمكنك إدخال تغييرات على:

مركز الرسائل النصية - أدخل تفاصيل مركز الرسائل.

تقارير استلام - مرر المفتاح إلى اليسار لاستلام تأكيد بأنه تم تسليم رسائلك.

مدة الصلاحية - اختر فترة تخزين رسائلك في مركز الرسائل.

أنواع الرسائل - حوّل نصك إلى نص أو صوت أو فاكس **X.400** أو بريد إلكتروني.

ترميز الحروف - اختر طريقة ترميز الحروف. ويؤثر هذا الأمر على حجم رسائلك وبالتالي على رسوم البيانات.

إرسال نص طويل كـ - اختر إرسال رسالة طويلة كرسائل **SMS** متعددة أو **MMS**.

استرداد تلقائي أثناء التجوال - اختر ما إذا كنت ترغب في استرداد رسائلك تلقائياً أثناء تواجدك في الخارج (التجوال).

إعلام بريد إلكتروني جديد - اختر ما إذا كان يجب تنبيهك عند وصول رسائل بريد إلكتروني جديدة.

التوقيع - اختر التوقيع الذي تريد تعيينه للبريد الإلكتروني ورسائل **MMS**. يمكنك تسجيل توقيع واحد أو أكثر.

الأولوية - اختر مستوى الأولوية لرسائل البريد الإلكتروني.

حجم البريد المرسل - قم بتعيين الحد الأقصى لحجم البريد الإلكتروني الذي ترسله.

عداد البريد الإلكتروني - أدخل التاريخ الذي تريده. يمكن التحقق من رسائل البريد الإلكتروني التي أرسلتها خلال تلك الفترة.

حافظات الرسائل

هناك خمس حافظات في قائمة الرسائل.

صندوق الوارد - توضع في صندوق الوارد كل الرسائل التي تستلمها.

المسودات - إذا لم تكن قد انتهيت من كتابة رسالة، يمكن حفظ ما قمت به في هذه الحافظة.

صندوق الصادر - عبارة عن حافظة لحفظ الرسائل مؤقتاً فيما يكون إرسالها جارٍ.

تغيير إعدادات رسائل الوسائط المتعددة

المس الرسائل في علامة التبويب الاتصال. قم بالتمرير واختر الإعدادات و رسالة الوسائط المتعددة. يمكنك إدخال تغييرات على:

وضع الاسترداد - اختر بين الشبكة المحلية أو شبكة التجوال. إذا اخترت يدوي فستلقى إعلام برسائل MMS فقط ويمكنك حينئذ أن تقرر ما إذا كنت ترغب في تنزيلها بشكل كامل.

تقرير الاستلام - اختر السماح بتقرير الاستلام و/أو طلبه.

قراءة الرد - اختر طلب قراءة الرد أو السماح بها. الأولوية - اختر مستوى أولوية رسائل MMS.

مدة الصلاحية - اختر فترة حفظ رسالتك في مركز الرسائل.

مدة الشريحة - اختر المدة التي تظهر خلالها الشرائح على الشاشة.

وضع الإنشاء - اختر وضع الرسائل.

وقت الاستلام - اختيار المدة قبل تسليم كل رسالة.

مركز الرسائل المتعددة - اختر رسالة من القائمة أو قم بإضافة مركز رسالة جديد.

تغيير الإعدادات الأخرى

المس الرسائل في علامة التبويب الاتصال. والمس الإعدادات.

رسالة الخدمة - اختيار استلام أو حظر رسائل الخدمة. كما يمكنك تعيين حماية الرسالة وذلك بإنشاء قوائم بالمرسلين الموثوق بهم وغير الموثوق بهم في الخيار أمان الخدمة.

عداد الرسائل - اختر تعيين فترة وقت محدّدة لعدّ الرسائل.

خدمة المعلومات - اختر ما إذا كنت تريد تشغيل/إيقاف تشغيل البث الخلوي وحدد القنوات واللغات.

الكاميرا

التعرّف على محدّد المنظر



تلميح! يمكنك إحصار الخيارات بالضغط على الشاشة، وهي تتوقف عن التشغيل تلقائياً بعد بضع ثوانٍ.


التقاط صورة سريعة

- 1 اضغط مطوّلًا على المفتاح  في الجانب الأيمن من الهاتف.
- 2 عندما تركز الكاميرا على موضوع الصورة، المس  الموجود في وسط الجانب الأيسر من الشاشة لالتقاط صورة. كما يمكنك الضغط على مفتاح  الموجود في جانب الهاتف بقوة.

تلميح! للتبديل إلى وضع الكاميرا أو وضع الفيديو، ادفع رمز الكاميرا أو الفيديو إلى الأعلى/الأسفل في الوسط الأيسر من محدّد المنظر.

بعد التقاط الصورة

- تظهر الصورة الملتقطة على الشاشة. ويظهر اسم الصورة عبر أسفل الشاشة.
-  المس لإرسال الصورة كرسالة، أو بريد إلكتروني أو عبر بلوتوث.
-  المس لتعيين شاشة رئيسية، أو صورة جهات اتصال أو صورة بدء التشغيل أو صورة إيقاف التشغيل.
-  المس لتعديل الصورة.
-  المس لتعديل اسم الصورة التي تم التقاطها.
-  المس لحذف الصورة التي التقطتها للتو وأكد بلمس نعم. تظهر الرسالة "محذوفة".
-  المس لفتح الاستوديو.

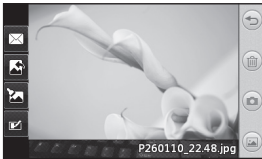

استخدام الإعدادات المتقدمة

من محدّد المنظر.  لفتح كل خيارات الإعدادات المتقدمة.

تأثير الألوان - اختر درجة اللون التي تريد تطبيقها على الصورة التي تلتقطها. هناك أربعة خيارات لدرجة اللون: إيقاف ، أبيض و أسود ، صورة سلبية أو بنى داجن

توازن اللون الأبيض - اختر من ضمن تلقائي . مشمس ، فلورسنت أو غائم.

وضع الليل - يعتبر استخدامه مفيداً في الأماكن الداكنة.

المؤقت الذاتي - يسمح لك المؤقت الذاتي بتعيين فترة تأخير قبل التقاط الكاميرا الصورة. بعد الضغط على زر الالتقاط، اختر من ضمن 3 ثوانٍ، أو 5 ثوانٍ أو 10 ثوانٍ. يعتبر هذا الأمر جيداً لصورة المجموعة التي تريد أن تكون جزءاً منها.

الجودة - اختر من ضمن دقيق جداً ، ودقيق وعادي. بقدر ما تكون الجودة دقيقة بقدر ما تكون الصورة واضحة المعالم ولكن حجم الملف سيكون أكبر. أي أنك ستتمكن من تخزين عدد أقل من الصور في الذاكرة.

وضع العرض - اختر بين ملئ الشاشة أو صورة كاملة. قد يتم اقتصاص الصورة في وضع ملئ الشاشة للاحتواء ضمن الشاشة.

تحديد موقع التخزين - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو في الذاكرة الخارجية.

إظهار الصورة الملتقطة - اختر عرض الصورة مع خيارات بعد التقاط صورة.

إخفاء رموز - اختر رموز إعدادات الكاميرا لإخفائها يدوياً أو تلقائياً.

صوت الغالق - حدّد خياراً من ضمن خيارات صوت الغالق الثلاثة.

شاشة الشبكة - اختر من ضمن إيقاف التشغيل تقاطع بسيط أو ثلاثية الأقسام.

إعادة تعيين الإعدادات - إعادة تعيين كل إعدادات الكاميرا.

كاميرا الفيديو

التعرّف على محدّد المنظر



تلميح! يمكنك إغلاق كل خيارات القائمة المختصرة للحصول على شاشة أوضح لمحدّد المنظر. ما عليك إلا لمس وسط محدّد المنظر مرة واحدة. لاستدعاء الخيارات. المس الشاشة مرة أخرى.

كاميرا الفيديو

إنشاء فيديو سريع

- 1 اضغط مطولاً على مفتاح الكاميرا في الجانب الأيمن من الهاتف لبضع ثوانٍ.

تلميح! للتبديل إلى وضع الكاميرا أو وضع الفيديو، ادفع رمز الكاميرا أو الفيديو إلى الأعلى/الأسفل في الوسط الأيسر من محدّد المنظر.

- 2 مع حمل الهاتف أفقياً، صوّب العدسة باتجاه موضوع الفيديو.

- 3 اضغط مفتاح الكاميرا  في الهاتف مرة واحدة لبدء التسجيل. أو المس النقطة الحمراء .

- 4 يظهر **Rec** في أسفل محدّد المنظر ويظهر مؤقتاً في الأسفل لعرض طول الفيديو.

- 5 لإيقاف الفيديو مؤقتاً المس  وللاستئناف حدد .

- 6 المس  على الشاشة أو اضغط على  مرة ثانية لإيقاف التسجيل.

بعد إنشاء الفيديو

ستظهر على الشاشة صورةً ثابتةً تمثل الفيديو الملتقط. ويمتد اسم الفيديو عبر أسفل الشاشة مع سبعة رموز في الجانبين الأيمن والأيسر في الأسفل.

المس لتشغيل الفيديو. 

المس لإرسال الفيديو كرسالة أو بريد إلكتروني أو عبر بلوتوث. 

المس لتعديل الفيديو. 

المس لتعديل اسم الصورة المحددة. 

المس لحذف الفيديو الذي قمت بالتقاطه لتؤكد وأكّد بلمس نعم. يظهر محدّد المنظر من جديد. 

المس لالتقاط فيديو آخر على الفور. 

المس لعرض استوديو الصور وملفات الفيديو المحفوظة. 



استخدام الإعدادات المتقدمة

في محدد المنظر المس الإعدادات لفتح كل خيارات الإعدادات المتقدمة.

تأثير اللون - اختر درجة اللون لاستخدامها على الفيديو الجديد. لا لون أو أسود وأبيض أو سالب أو بني داكن.

توازن اللون الأبيض - يضمن توازن الأبيض ظهور أي لون أبيض في الفيديو كواقعي. لكي تضبط الكاميرا بشكل صحيح توازن اللون الأبيض. قد تحتاج إلى تحديد شروط الإضاءة. اختر من ضمن تلقائي. متوهج. مشمس. فلورسنت أو غائم.

الجودة - اختر من ضمن دقيق جداً، ودقيق وعادي. بقدر ما تكون الجودة دقيقة بقدر ما يكون الفيديو واضح المعالم ولكن حجم الملف سيكون أكبر. ونتيجة لذلك، سيكون عدد ملفات الفيديو التي يمكنك تخزينها في ذاكرة الهاتف أقل.

المدة - قم بتعيين مدة زمنية للفيديو. اختر ما إذا كنت تريد إرسال الفيديو كرسالة MMS.

تلميح! إذا اخترت مدة MMS، فإن اختيار جودة أقل للصورة سيمكّنك من التقاط مقطع فيديو أطول.

تحديد موقع التخزين - اختر ما إذا كنت تريد حفظ ملفات الفيديو في ذاكرة الهاتف أو في الذاكرة الخارجية.

الصوت - اختر ما إذا كنت تريد تسجيل فيديو مع صوت.

إخفاء رموز - اختر رموز إعدادات الكاميرا لإخفائها يدوياً أو تلقائياً.

إعادة تعيين الإعدادات - قم بإعادة تعيين إعدادات كاميرا الفيديو كافة.

الصور و مقاطع الفيديو

عرض الصور وملفات الفيديو

1 **المس** الاستوديو في علامة التبويب ترفيه، أو **المس** على شاشة المعاينة الخاصة بالكاميرا. يمكنك التحقق من الصور وملفات الفيديو.

2 يظهر الاستوديو على الشاشة.

3 **المس** الفيديو أو الصورة لفتحهما كلياً.

4 لتشغيل الفيديو **المس** . لإيقاف التشغيل مؤقتاً **المس** .

تلميح! انقر إلى اليمين أو إلى اليسار لعرض صور أخرى أو ملفات فيديو أخرى.

التقاط صورة من فيديو

1 حدّد الفيديو الذي تريد التقاط صورة منه.

2 **المس** لإيقاف الفيديو مؤقتاً على الإطار الذي تريد تحويله إلى صورة والمس جانب الشاشة الأيمن العلوي لفتح قائمة .

3 من قائمة الخيارات حدّد .

4 تظهر الصورة على الشاشة مع الاسم المعين لها.

5 **المس** للعودة إلى الفيديو.

6 تُحفظ الصورة في حافظة أشياءي وتظهر في الاستوديو.

⚠ تحذير: قد لا تعمل بعض الوظائف بشكل صحيح إذا لم يكن ملف الوسائط المتعددة مسجلاً في الهاتف.

مشاهدة الصور كعرض شرائح

يُظهر عرض الشرائح كل الصور الموجودة في الاستوديو كل صورة على حدة كعرض شرائح. ولا يمكن عرض مقاطع الفيديو كعرض شرائح.

1 **المس** في الاستوديو، ثم قم بالتمرير وحدّد عرض الشرائح.

2 يبدأ عرض الشرائح.

المس لإيقاف عرض الشرائح مؤقتاً على صورة معينة:

المس للعودة.

المس لإيقاف عرض الشرائح مؤقتاً على صورة معينة.

المس مجدداً لاستئناف التشغيل.

المس لعرض عشوائي.

المس لزيادة سرعة عرض الشرائح أو إنقاص سرعته.

تعيين صورة كخلفية الشاشة

- 1 امسح ما ترسمه. كما يمكنك اختيار حجم الممحاة.
- 2 المس للعودة إلى الاستوديو.
- 3 حفظ التغييرات التي أدخلتها على الصور. حدّد لحفظ التغييرات فوق الملف الأصلي. أو كملف جديد. إذا حدّدت ملف جديد. فأدخل اسم ملف.
- 4 التراجع عن التأثير الأخير أو التعديل الذي أدخلته على الصورة.
- 5 المس لفتح خيارات عامل النصفية.
- 6 يمكنك ضبط الصورة المحددة.



- 1 المس الاستوديو في علامة التبويب ترفيه.
- 2 المس الصورة التي ترغب في تعيينها كخلفية الشاشة لفتحها.
- 3 المس الشاشة لفتح القائمة.
- 4 المس .
- 5 يمكنك تغيير حجم الصورة بواسطة .
- 6 إذا كانت الصورة توافق متطلباتك، فالمس تعيين.
- 7 اختر من ضمن الخيارات ما ترغب في تغييره: الكل . عنصر واجهة الاستخدام أو الاتصال السريع.

تعديل الصور

- 1 افتح الصورة التي ترغب في تعديلها والمس لإحضار لوحة الخيارات.
- 2 المس الرموز لتعديل صورتك: حرّك إصبعك عبر الشاشة لتحديد المنطقة.
- 3 ارسم شيئاً على الشكل الحر لصورتك. حدّد سماكة الخط من ضمن الخيارات الأربعة واللون الذي تود استخدامه.
- 4 أضف كتابة إلى الصورة.
- 5 قم بتزيين صورتك بواسطة الطوابع.
- 6 اختر من ضمن مختلف الطوابع والألوان المتوفرة والمس الصورة حيثما ترغب في وضع هذه الطوابع.

الوسائط المتعددة

يمكنك تخزين أي ملفات وسائط متعددة في ذاكرة الهاتف بحيث يتوفر لديك الوصول السهل إلى كل الصور والأصوات وملفات الفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. يتيح لك استخدام بطاقة ذاكرة تحرير مساحة على ذاكرة الهاتف. يمكنك العثور على هذه الملفات في القائمة **أشياءني** في علامة التبويب **ترفيه**.

الصور

تحتوي **الصور** على قائمة بالصور بما فيها الصور الافتراضية التي تم تحميلها مسبقاً إلى هاتفك. وصوراً قمت أنت بتنزيلها وصوراً تم التقاطها بكاميرا الهاتف.

إرسال صورة

- 1 **المس أشياءني** في علامة التبويب **ترفيه** وحدد **الصور**. حدّد الصورة التي تريدها.
- 2 **المس إرسال** واختر من ضمن رسالة وسائط متعددة أو بريد إلكتروني أو بلوتوث.

استخدام صورة

يمكنك اختيار الصور لاستخدامها كخلفيات للشاشة وكشاشات قفل أو حتى لتعرف المتصل.

- 1 **المس أشياءني** في علامة التبويب **ترفيه** وحدد **الصور**. حدّد الصورة التي تريدها.  **المس**

- 2 **المس استخدام كـ** واختر من ضمن:

صورة الشاشة الرئيسية - تعيين خلفية للشاشة الرئيسية.

صورة إقفال الشاشة - تعيين خلفية شاشة لشاشة القفل.

صور الأسماء - قم بتعيين صورة إلى شخص معين في قائمة الأسماء المتوفرة لديك بحيث تظهر صورته عند اتصاله بك.

صورة بدء التشغيل - تعيين صورة بحيث تظهر عند تشغيل الهاتف.

صورة إيقاف التشغيل - قم بتعيين صورة بحيث تظهر عند إيقاف تشغيل الهاتف.

طباعة صورة

- 1 **المس أشياءني** في علامة التبويب **ترفيه** وحدد **الصور**. حدّد الصورة التي تريدها.  **المس**
- 2 **المس طباعة عبر بلوتوث**.

نقل صورة أو نسخها

يمكنك نقل صورة أو نسخها بين ذاكرة الهاتف وبطاقة الذاكرة. ويمكنك القيام بذلك إما لتحرير بعض المساحة في إحدى وحدات الذاكرة أو لمنع فقدان الصور.

- 1 المس أشياءني في علامة التبويب ترفيه وحدد صور والمس .
- 2 حدد نقل أو نسخ.
- 3 يمكنك تحديد/إلغاء تحديد الصور بواسطة الضغط عليها بالتتابع. حدد الصورة التي تريد أن تنقلها أو تنسخها والمس نقل أو نسخ.

أصوات

تحتوي الأصوات على لائحة أصوات بما فيها تلك التي تم تنزيلها والافتراضية والتسجيلات الصوتية. من هنا يمكنك إدارة الأصوات أو إرسالها أو تعيينها كنفحات رنين.

استخدام صوت

- 1 المس أشياءني في علامة التبويب ترفيه وحدد أصوات.
- 2 حدد صوتاً تريده. يبدأ التشغيل.
- 3 المس  وحدد استخدام كـ.
- 4 اختر من ضمن نغمة رنين و نغمة رسالة و بدء التشغيل و إيقاف التشغيل.

ملفات الفيديو

تعرض ملفات الفيديو قائمة بملفات الفيديو التي تم تنزيلها إلى هاتفك أو تسجيلها عليه.

مشاهدة فيديو

- 1 المس أشياءني في علامة التبويب ترفيه وحدد ملفات الفيديو.
- 2 حدد فيديو ليتم تشغيله.

إرسال فيديو كليب

- 1 حدّد فيديو.
- 2 المس  لإرسال الفيديو كرسالة أو بريد إلكتروني أو من خلال بلوتوث.

نقل ملف إلى هاتفك

تُعتبر تقنية بلوتوث الطريقة الأسهل على الأرجح لنقل ملف من الكمبيوتر إلى هاتفك. كما يمكنك استخدام LG PC Suite عبر كبل المزامنة.

الوسائط المتعددة

للنقل باستخدام بلوتوث:

الموسيقى

يكون مشغل الموسيقى مضمّنًا في الهاتف LG GT350i بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك، للوصول إلى مشغل الموسيقى. المس الموسيقى في علامة التبويب ترفيه. من هنا يمكنك الوصول إلى عدد من الحافظات:

ملاحظة: يمكن أن تكون حقوق النشر للملفات الموسيقي محمية بموجب المعاهدات الدولية وقوانين حقوق النشر الوطنية. ولهذا، فقد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. يمنع القانون الوطني في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر، قبل تحميل أو نسخ الملف. يُرجى التحقق من القانون الوطني للبلد المعني والمتعلق باستخدام مثل هذه المواد.

- 1 تأكد من تشغيل بلوتوث على الهاتف والكمبيوتر ومن كونهما مرئيين لبعضهما بعض.
- 2 استخدم الكمبيوتر لإرسال الملف عبر بلوتوث.
- 3 عندما يُرسل الملف إليك سيترتب عليك قبوله على الهاتف وذلك بلمس نعم.
- 4 يجب أن يظهر الملف في حافظتي بشكل افتراضي. وعلامة التبويب الثانية في أشياءي. يمكنك معاينة الملف إذا كانت الحافظة ممتلئة.

أخرى

تحتوي الأخرى على قائمة ملفات ليست عبارة عن صور أو أصوات أو ملفات فيديو أو مستندات أو ألعاب أو تطبيقات.

تم تشغيلها مؤخرًا - يقوم بتشغيل الأغاني التي قمت بتشغيلها مؤخرًا.

كل المسارات - يحتوي على كل الأغاني الموجودة على هاتفك باستثناء الموسيقى الافتراضية التي تم تحميلها مسبقًا.

الفنانون - الاستعراض عبر مجموعتك الموسيقية حسب الفنان.

الألبومات - الاستعراض عبر مجموعتك الموسيقية حسب الألبوم.

الأنواع - الاستعراض عبر مجموعتك الموسيقية حسب النوع.

قوائم التشغيل - تحتوي على كل قوائم التشغيل التي قمت بإنشائها.

مزج المسارات - شغل المسارات بترتيب عشوائي.

نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر بلوتوث أو كبل المزامنة.

يمكن أيضاً استخدام LG PC Suite. لنقل باستخدام بلوتوث:

1 تأكد من إيقاف تشغيل بلوتوث في الجهازين ومن كونهما مرئيين لبعضهما البعض.

2 حدّد ملف الموسيقى على الجهاز الآخر واختر إرساله عبر بلوتوث.

3 عندما يصبح الملف جاهزاً للإرسال، يجب أن تقبله على هاتفك بالضغط على نعم.

4 يجب أن يظهر الملف في الموسيقى < كل المسارات.

تشغيل أغنية

1 المس الموسيقى في علامة التبويب ترفيه.

2 حدّد إحدى الحافظات والأغنية التي تريد تشغيلها.

3 المس  لإيقاف الأغنية مؤقتاً.

4 المس  للتجاوز إلى الأغنية التالية.

5 المس  للعودة إلى الأغنية السابقة.

6 المس  للعودة إلى قائمة الموسيقى. يمكن للمس أكثر من مرة واحدة للعودة إلى القائمة.

إنشاء قائمة تشغيل

يمكنك إنشاء قوائم التشغيل الخاصة بك وذلك بإنشاء مجموعة مختارة من الأغاني من حافظة قوائم التشغيل.

1 المس الموسيقى في علامة التبويب ترفيه.

2 المس قوائم التشغيل ثم إضافة قائمة تشغيل جديدة وأدخل اسم قائمة التشغيل والمس حفظ.

3 تعرض حافظة كل المسارات كل الأغاني الموجودة على هاتفك. المس كل الأغاني التي تريد تضمينها في قائمة التشغيل. فتظهر علامة إلى جانب اسم كل أغنية.

4 المس تم.

الوسائط المتعددة

راديو FM

تتوفر في الهاتف LG GT350i ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة للاستماع إليها أثناء التنقل.

ملاحظة: ستحتاج إلى توصيل سماعات الرأس بالهاتف للاستماع إلى الراديو. أدخل سماعات الرأس في المأخذ المخصص لها (هذا المأخذ هو نفسه المأخذ الذي تقوم بتوصيل الشاحن فيه).

البحث عن محطات

يمكنك ضبط محطات الراديو في هاتفك وذلك بالبحث عنها إما يدوياً أو تلقائياً. وسيتتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن نعود بحاجة إلى إعادة ضبطها. عليك أولاً توصيل سماعة الرأس بالهاتف إذ إنها تعمل كهوائي.

للضبط تلقائياً:

1 قم بالتمرير والمس راديو FM في علامة التبويب ترفيه ثم .

2 المس **التفحص التلقائي**. تظهر رسالة تأكيد. **حدد نعم**. فيتم تلقائياً العثور على المحطات وتخصيصها إلى قناة في هاتفك.

ملاحظة: يمكنك أيضاً ضبط إحدى المحطات يدوياً باستخدام  والذي  يظهر في وسط الشاشة. إذا ضغطت باستمرار  و ، فسيتم العثور على المحطات تلقائياً.

إعادة تعيين القنوات

1 قم بالتمرير والمس راديو FM في علامة التبويب ترفيه ثم .

2 اختر **إعادة تعيين القناة** لإعادة تعيين القناة الحالية أو اختر **إعادة تعيين كل القنوات** لإعادة تعيين كل القنوات. تعود كل قناة إلى معدل التردد 87.5 ميغاهرتز.

المنسّق

إضافة حدث إلى التقويم

1 المس المنسّق في علامة التبويب أدوات المساعدة وحدّد التقويم.

2 حدّد التاريخ الذي تريد إضافة حدث إليه.

3 المس  ثم إضافة حدث.

4 المس فئة ثم اختر من ضمن موعد أو ذكرى أو عيد ميلاد.

5 أدخل الموضوع.

6 تحقق من التاريخ والوقت وأدخل الوقت الذي تريد أن يبدأ عنده الحدث. بالنسبة إلى الموعد ومناسبة الذكرى السنوية أدخل تاريخ ووقت انتهاء الحدث في المربعين السفليين للتاريخ والوقت. أدخل الموقع إذا كان موعداً.

7 عين منه وتكرار.

8 حدّد حفظ فيتم حفظ الحدث في التقويم.

يقوم رأس مؤشر مربع الشكل بتحديد اليوم الذي تم حفظ أية أحداث فيه وسيرن جرس في وقت البدء المعيّن للحدث. بحيث يمكنك أن تحافظ على تنظيم أوقاتك.

إضافة عنصر إلى قائمة المهام

1 المس المنسّق في علامة التبويب أدوات المساعدة.

2 حدد المهام والمس إضافة مهام.

3 عين تاريخ المهمة. وأضف ملاحظات وحدّد مستوى للأولوية: عالية أو متوسطة أو منخفضة.

4 قم بحفظ المهمة عبر تحديد حفظ.

استخدام الباحث عن التاريخ

الباحث عن التاريخ هو أداة سهلة تساعدك على احتساب تاريخ الأيام القليلة المقبلة. مثلاً بعد 60 يوماً من التاريخ 10.10.07 سيكون التاريخ 09.12.2007.

1 المس المنسّق في علامة التبويب أدوات المساعدة.

2 حدّد الباحث عن التاريخ.

3 قم بتعيين التاريخ المطلوب في علامة التبويب من.

4 حدّد عدد الأيام في علامة التبويب بعد.

5 يظهر التاريخ الهدف أدناه.

المنسّق

إضافة مذكرة

- 1 المس المذكرة في علامة التبويب أدوات المساعدة.
- 2 المس إضافة مذكرة.
- 3 اكتب المذكرة ثم المس حفظ.
- 4 ستظهر المذكرة على الشاشة في تطبيق المذكرة.

ضبط المنبه

- 1 المس المنبهات في علامة التبويب أدوات المساعدة. يجب أن يظهر منه عنصر واجهة الاستخدام في القائمة كافتراضي ولا يمكنك حذفه.
- 2 المس إضافة منبه.
- 3 عيّن الوقت الذي تريد أن يبدأ فيه المنبه بالرنين في خانة حقل الوقت.
- 4 اختر كيفية تكرار المنبه في خانة حقل تكرار: غير متكرر، يومياً، الاثنين ~ الجمعة، الاثنين ~ السبت، السبت ~ الأحد. باستثناء أيام العطل أو اختر يوماً.
- 5 تشير الرموز إلى يوم الأسبوع الذي اخترته.
- 5 حدّد نوع المنبه لتحديد نوع المنبه المطلوب.
- 6 اختر جرس المنبه وحدّد صوتاً من الحافظة.
- للاستماع إلى الأصوات، المس الصوت، يليه .
- 7 أضف مذكرة للمنبه في صندوق المذكرة.

8 أخيراً، يمكنك تعيين الفاصل الزمني للانتظار إلى 5 أو 10 أو 20 أو 30 دقيقة أو 1 ساعة أو إيقاف التشغيل.

9 بعد انتهائك من تعيين المنبه، المس حفظ. ملاحظة: يمكنك إعداد 5 تنبيهات كحد أقصى بما في ذلك منبه عنصر واجهة الاستخدام.

تلميح! قم بتمرير مفتاح التشغيل/إيقاف التشغيل الخاص بالمنبه لتعيينه.

إضافة مدينة إلى ساعتك العالمية

- 1 المس الساعة العالمية في علامة تبويب أدوات مساعدة.
- 2 المس ، يتبعه إضافة مدينة.
- 3 قم بتمرير الكرة الأرضية، المس المنطقة التي تريد واختار المدينة على الخريطة.
- 4 أو المس  واكتب اسم المدينة المطلوبة في مربع حقل البحث.

مسجّل الصوت

- استخدم مسجّل الصوت لتسجيل مذكرات صوتية أو ملفات صوت أخرى.
- المس مسجّل الصوت في علامة التبويب أدوات مساعدة وحدد ، ثم الإعدادات لتغيير الإعدادات:
- المدة - تعيين مدة التسجيل. اختر من ضمن بلا تحديد أو MMS أو 1 دقيقة.
- الجودة - حدد جودة الصوت. اختر من ضمن دقيق جداً أو دقيق أو عادي.

ذاكرة مستخدمة - حدد المكان الذي تريد حفظ ملفات الصوت فيه. اختر من ضمن الذاكرة الخارجية أو ذاكرة الهاتف.

تسجيل ملف صوتي أو صوت

- 1 المس  لبدء التسجيل.
- 2 المس  لإيقاف التسجيل مؤقتاً.
- 3 المس  لإنهاء التسجيل.
- 4 المس  للاستماع إلى تسجيلك.

استخدام الحاسبة

- 1 المس الأذونات في علامة التبويب أدوات المساعدة.
- 2 حدّد الحاسبة.
- 3 المس المفاتيح الرقمية باستخدام لوحة المفاتيح لإدخال الأرقام.
- 4 بالنسبة إلى العمليات الحسابية البسيطة، المس الوظيفة المطلوبة (+, -, ×, ÷). يتبعها =.
- 5 بالنسبة إلى الحسابات الأكثر تعقيداً، المس  واختر من ضمن sin أو cos أو tan أو log أو ln أو exp أو sqrt أو deg أو rad إلخ.

مزمنة الكمبيوتر الشخصي

نسخ احتياطي للمعلومات على الهاتف واستعادتها

1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه أعلاه.

2 انقر فوق نسخ احتياطي واستعادة في الجانب السفلي الأيمن من رمز أداة PC suite. وحدد نسخ احتياطي أو استعادة.

3 حدّد المحتوى الذي ترغب في إجراء نسخ احتياطي له أو استعادته. حدّد الموقع حيث تريد إجراء نسخ احتياطي للمعلومات أو استعادة المعلومات منه. انقر لبدء النسخ الاحتياطي أو بدء الاستعادة.

4 سيتم إجراء نسخ احتياطي للمعلومات أو استعادتها.

عرض ملفات الهاتف على الكمبيوتر

1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه سابقًا.

2 انقر فوق الرموز التي تريد إدارتها. يمكنك عرض كل الملفات في الهاتف من خلال تحديد كل فئة.

تلميح! يساعدك عرض محتويات الهاتف على الكمبيوتر على ترتيب الملفات، وتنظيم المستندات وإزالة المحتوى الذي لم تعد بحاجة إليه.

يمكنك مزمنة الكمبيوتر مع الهاتف للتأكد من تطابق كافة التفاصيل والتواريخ الهامة. كما يمكنك إجراء نسخة احتياطية لملفاتك للاطمئنان.

تثبيت LG PC Suite على الكمبيوتر

1 في الشاشة الرئيسية اضغط  وحدّد إمكانية الاتصال في علامة التبويب الإعدادات.

2 حدّد وضع اتصال USB والمس PC Suite.

3 قم بتوصيل الهاتف والكمبيوتر عبر كبل USB وانتظر لبرهة. تظهر رسالة دليل التثبيت.

4 اتبع الإرشادات التي تظهر على الشاشة لإكمال معالج مثبت LG PC Suite.

5 عند اكتمال عملية التثبيت. يظهر رمز LG PC Suite على سطح المكتب.

توصيل الهاتف والكمبيوتر

1 في الشاشة الرئيسية اضغط  وحدّد إمكانية الاتصال في علامة التبويب الإعدادات.

2 حدّد وضع اتصال USB.

3 المس PC Suite.

4 قم بتوصيل الهاتف والكمبيوتر عبر كبل USB وانتظر لبرهة. يعمل PC Suite بشكل تلقائي.

مزامنة الأسماء

- 1 توصيل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز الأسماء.
- 3 انقر فوق زر مزامنة الأسماء فيقوم الكمبيوتر الآن باسترداد وعرض كل الأسماء المحفوظة في الهاتف.
- 4 انقر فوق القائمة وحدد تصدير. يمكنك الآن تحديد الموقع حيث تريد حفظ الأسماء.

مزامنة الرسائل

- 1 توصيل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز الرسائل.
- 3 تظهر كل رسائل الكمبيوتر والهاتف في حافظات على الشاشة.
- 4 استخدم شريط الأدوات في أعلى الشاشة لتعديل الرسائل وإعادة ترتيبها.

تحذير لا تقم بفصل الهاتف أثناء النقل.

المتصفح

وباستطاعة المستخدم أن يشترك في قناة عبر إدخال ارتباط القناة في القارئ، أو بالنقر فوق رمز RSS في متصفح يبدأ عملية الاشتراك. ويتحقق القارئ من القنوات التي اشترك فيها المستخدم بشكل دوري بحثاً عن محتوى جديد. ويقوم بتنزيل أي تحديثات يعثر عليها.

استخدام الهاتف كمودم

بإمكان وظيفة الهاتف GT350i أن تكون مضاعفةً إذ باستطاعته أن يعمل كمودم للكمبيوتر. ما يوفر لك الوصول إلى البريد الإلكتروني وإنترنت حتى عندما لا يكون باستطاعتك الاتصال باستخدام الأسلاك. ويمكنك استخدام إما كبل USB أو بلوتوث.

استخدام كبل USB:

- 1 تأكد من تثبيت LG PC Suite على الكمبيوتر.
- 2 قم بتوصيل الهاتف GT350i والكمبيوتر باستخدام كبل USB كما تم توضيحه سابقاً وابدأ بتشغيل البرنامج LG PC Suite.
- 3 انقر فوق مجموعة إنترنت على الكمبيوتر. ثم انقر فوق زر جديد وحدد مودم.
- 4 اكتب الوضع الذي يجعلك تتصل بالإنترنت واحفظ القيم.
- 5 سيظهر الوضع الذي أنشأته على شاشة الكمبيوتر. حدده وانقر فوق اتصال. سيتصل الكمبيوتر من خلال GT350i.

المتصفح يمنحك عالماً سريعاً وكاملاً من الألعاب والموسيقى والأخبار والرياضة والترفيه وغيرها. مباشرة إلى هاتفك المحمول. أينما كنت وأياً كانت اهتماماتك.

الوصول إلى موقع ويب

1 المس المتصفح في علامة التبويب أدوات مساعدة.

2 للانتقال مباشرة إلى الصفحة الرئيسية للمستعرض. حدد الصفحة الرئيسية. كطريقة بديلة. حدد إدخال عنوان واكتب عنوان URL. يتبعه اتصال.

ملاحظة: يتم فرض رسم إضافي عند الاتصال بهذه الخدمة وتنزيل المحتوى. للحصول على تفاصيل تتعلق بالرسوم المفروض على البيانات، اتصل بموفر الشبكة.

استخدام قارئ RSS

إنّ RSS أو توزيع المحتوى والتطبيقات عبارة عن مجموعة من أشكال تغذية المتصفح يتم استخدامها لنشر محتوى يتكرر تحديثه مثل إدخال المدونات أو عناوين الأخبار أو البث الصوتي على المتصفح podcasts. ويحتوي مستند RSS والذي يسمى تغذية أو تغذية المتصفح أو قناة على ملخص محتوى من موقع المتصفح مرتبط أو على النص الكامل. ويفضل تغذية RSS سيتمكن الأشخاص من الاحتفاظ بمواقعهم المفضلة على المتصفح بشكل تلقائي. هذه الطريقة أسهل من التحقق من تلك المواقع يدوياً.

استخدام بلوتوث:

- 1 تأكد من كَونِ بلوتوث في وضع التشغيل ومن كونه مرئيًا بالنسبة إلى الكمبيوتر والهاتف GT350i.
- 2 قم بإقران الكمبيوتر و GT350i بحيث يكون رمز المرور مطلوبًا للاتصال.
- 3 استخدم معالج الاتصال على LG PC Suite لإنشاء اتصال بلوتوث نشط.
- 4 انقر فوق مجموعة إنترنت على الكمبيوتر. ثم انقر فوق زر جديد.
- 5 اكتب الوضع الذي يجعلك تتصل بالإنترنت واحفظ القيم.
- 6 سيظهر الوضع الذي أنشأته على شاشة الكمبيوتر. حدّده وانقر فوق اتصال. سيتصل الكمبيوتر من خلال GT350i.

الإعدادات

تخصيص الأوضاع

يمكنك أن تقوم بسرعة بتغيير نمطك على الشاشة الرئيسية.

يمكنك تخصيص إعدادات الوضع باستخدام قائمة الإعدادات.

1 المس الأنماط في علامة التبويب الإعدادات.

2 اختر الوضع الذي تريد تعديله.

3 يمكنك حينئذٍ تغيير كل خيارات الأصوات والتنبيهات المتوفرة في القائمة. بما فيها إعدادات نغمة الرنين ومستوى الصوت، ونغمة الرسالة وغيرها.

تغيير إعدادات الشاشة

المس إعدادات الشاشة علامة التبويب الإعدادات.

إعدادات الشاشة

الخلفية - اختر صورة الخلفية لشاشة عنصر واجهة المستخدم الرئيسية أو شاشة الاتصال السريع الرئيسية أو شاشة القفل.

نموذج شاشة عنصر واجهة المستخدم الرئيسية - اختر نموذج شاشة عنصر واجهة المستخدم الرئيسية.

Livesquare - المس دليل Livesquare للتحقق من وظائفه. يمكنك أيضاً تنظيم الإعدادات التالية:

live square - خلفية Liveplace

Livecon - للإنسان أو الحيوان

إعادة التعيين اليومية - تشغيل/إيقاف تشغيل المحفوظات - تحديد  بلغي محفوظات Livesquare

القائمة العلوية - اختر وضع القائمة العلوية. اختر الخطوط المتعرجة أو التمرير أو شاشة تلو الأخرى.

شاشة القفل - اختر وضع شاشة القفل.

الطلب - اختر وضع شاشة الطلب وقم بضبط وضع الخط لشاشة الطلب فقط.

الخط - اختر حجم الخط ونمطه.

السطوع - قم بضبط سطوع الشاشة.

رسالة الترحيب - اختر تشغيل أو إيقاف التشغيل وإملاً رسالة الترحيب في حقل النص.

بدء التشغيل/إيقاف التشغيل - اختر سمة شاشة بدء التشغيل/إيقاف التشغيل.

تغيير إعدادات الهاتف

استمتع بحرية تكييف كيفية عمل GT350i مع أسلوبك الخاص.

المس إعدادات الهاتف في علامة التبويب الإعدادات ثم اختر من القائمة أدناه.

إعدادات الهاتف

التاريخ والوقت - اضبط ضبط التاريخ والوقت أو اختر تحديث الوقت تلقائياً أو استخدام خيار التوقيت الصيفي.

توفير الطاقة - اختر تشغيل أو إيقاف تشغيل إعدادات توفير الطاقة التي تم تعيينها في الشركة أو الليل فقط.

اللغات - قم بتغيير لغة عرض GT350i.

إقفال لوحة المفاتيح تلقائياً - قم بإقفال لوحة المفاتيح تلقائياً في الشاشة الرئيسية.

الحماية - اضبط إعدادات الحماية، وهذا يشمل رموز PIN وقفل الهاتف.

معلومات الذاكرة - انظر استخدام إدارة الذاكرة للحصول على مزيد من المعلومات. إعادة تعيين الإعدادات - يسمح هذا الخيار باستعادة كل الإعدادات إلى الافتراضية.

معلومات - حدد تعليمات لعرض معلومات GT350i التقنية. يمكنك أيضاً ترقية البرنامج مع معلومات الهاتف.

تغيير إعدادات التوصيل

تم مسبقاً إعداد إعدادات إمكانية الاتصال بواسطة مشغل الشبكة. بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد فوراً. لتغيير هذه الإعدادات. استخدم هذه القائمة: المس إمكانية الاتصال في علامة التبويب الإعدادات.

إعدادات الشبكة

تحديد شبكة - إذا قمت بتحديد تلقائي. ف يبحث GT350i تلقائياً عن الشبكة ويقوم بتسجيل الهاتف على الشبكة. ننصح بهذا الأمر للحصول على خدمة وجود أفضل. إذا جدد يهوي. فتظهر كل الشبكات المتوفرة حالياً ويمكنك تحديد شبكة لتسجيلها.

القوائم المفضلة - يمكنك إضافة شبكة مفضلة للاتصال بها. إذا كانت الشبكة تجري بحثاً تلقائياً. اختر شبكة من قائمة الشبكات أو قم بإضافة شبكة جديدة يدوياً.

أوضاع إنترنت - تعرض هذه القائمة أوضاع إنترنت. لا يمكنك حذف أو تعديل التكوينات الافتراضية وهذا يتوقف على متغيرات البلدان.

نقاط وصول - قام مشغل الشبكة بحفظ هذه المعلومات مسبقاً. يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

اتصال بيانات الرزمة - اختر الوقت الذي تريد أن يتصل فيه هاتفك بشبكة حزم البيانات.

وضع اتصال USB - اختر خدمة بيانات من الخيارات وقم بمزامنة GT350i باستخدام البرنامج LG PC Suite لنسخ ملفات من الهاتف. انظر مزامنة الكمبيوتر الشخصي للحصول على مزيد من المعلومات حول المزامنة.

إذا كنت تستخدم مزامنة الموسيقى مع Windows Media Player. حدد مزامنة الموسيقى في هذه القائمة. مزامنة الموسيقى متوفرة لمحتويات الموسيقى.

استخدام إدارة الذاكرة

تتوفر في GT350i ثلاثة أنواع من الذاكرة: الهاتف. وبطاقة SIM وبطاقة ذاكرة خارجية.

ويمكنك استخدام إدارة الذاكرة لمعرفة طريقة استخدام كل نوع من أنواع الذاكرة والمساحة المتوفرة في كل منها.

المس إعدادات الهاتف في علامة التبويب الإعدادات. ثم معلومات الذاكرة.

الذاكرة العامة للهاتف - عرض الذاكرة المتوفرة في GT350i للصور والأصوات وملفات الفيديو و MMS والبريد الإلكتروني وتطبيقات Java وغير ذلك.

الإعدادات

لاستلام ملف:

- 1 لتلقي ملفات. يجب أن يكون بلوتوث في وضع التشغيل و مرثيا. راجع تغيير إعدادات الـ بلوتوث أدناه للحصول على مزيد من المعلومات.
- 2 تظهر رسالة تطالبك بقبول الملف من المرسل. المس نعم لاستلام الملف.
- 3 ستشاهد الموقع الذي تم حفظ الملف فيه. بالنسبة إلى ملفات الصور، يمكنك اختبار عرض الملف أو الاستخدام كخلفية شاشة. يتم حفظ الملفات عادةً في الحافظة المناسبة في أئميائي.

تغيير إعدادات بلوتوث:

- المس بلوتوث في علامة التبويب الإعدادات، وحدّد  واختر الإعدادات.
- أدخل تغييراتك على:

- إمكانية رؤية جهاز - اختر أن يكون الجهاز مرثيا، أو مخفيا أو مرثيا لـ 1 دقيقة.
- اسم الجهاز - أدخل اسمًا لـ GT350i.
- الخدمات المعتمدة - اختر الطريقة التي تريدها لاستخدام بلوتوث مع مختلف الخدمات.
- وضع SIM عن بُعد - تشغيل أو إيقاف تشغيل.
- عنواني - عرض عنوان بلوتوث.

الاقتان بجهاز بلوتوث آخر

عند إجراء اقتان لهاتف GT350i بجهاز آخر، يمكنك إعداد اتصال محمي بمرمز مرور.

ذاكرة الهاتف المحجوزة - عرض الذاكرة المتوفرة

في الهاتف لرسائل SMS والأسماء والتقويم وقائمة المهام والمذكرة والمنيّه ومحفوظات المكالمت والإشارات المرجعية وعناصر متفرقة.

ذاكرة SIM - عرض الذاكرة المتوفرة في بطاقة SIM.

الذاكرة الخارجية - عرض الذاكرة المتوفرة في بطاقة الذاكرة الخارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

ضبط التخزين الأساسي - اختر الموقع الذي تفضل حفظ العناصر فيه بين الهاتف والذاكرة الخارجية.

إرسال الملفات واستلامها باستخدام

بلوتوث

لإرسال ملف:

- 1 افتح الملف الذي تريد إرساله. وهو عادةً عبارة عن صورة أو فيديو أو ملف موسيقى.
- 2 اختر إرسال.
- 3 اختر بلوتوث.
- 4 إذا قمت مسبقاً بإقتران جهاز بلوتوث، فلن يقوم GT350i بالبحث تلقائياً عن أجهزة بلوتوث أخرى. في حال تعدّد ذلك، سيبحث GT350i عن أجهزة بلوتوث أخرى ضمن النطاق.
- 5 اختر الجهاز الذي تريد إرسال الملف إليه.
- 6 سيتم إرسال ملفك.

تلميح! خُفّق من شريط التقدم للتأكد من إرسال الملف.

Wi-Fi

يتيح لك مدير التشغيل اللاسلكي إدارة اتصالات إنترنت عبر Wi-Fi (شبكة LAN اللاسلكية) على جهازك.

يتيح للهاتف الاتصال بالشبكات اللاسلكية المحلية، أو الوصول إلى إنترنت لاسلكياً. Wi-Fi أسرع وذات نطاق أوسع من تقنية Bluetooth اللاسلكية. وبالتالي يمكن استخدامه لإرسال رسائل بريد إلكتروني سريعاً ولاستعراض إنترنت. ملاحظة: GT350i يدعم WEP، تشفير WPA-PSK/2، وليس EAP، أو تشفير WPS. إذا قام مووفر خدمة Wi-Fi أو مسؤول الشبكة بتعيين التشفير لحماية الشبكة، فعليك ملء المفتاح في الإطار المنبثق.

إذا لم يتم تعيين التشفير، فلن يظهر الإطار المنبثق هذا. يمكنك الحصول على المفتاح من مووفر خدمة Wi-Fi لديك أو من مسؤول الشبكة.

- 1 تأكد من كون بلوتوث في وضع التشغيل و مرئياً. يمكنك تغيير الرؤية في قائمة الإعدادات.
- 2 المس بحث.
- 3 يبحث الهاتف GT350i عن الأجهزة. عند اكتمال عملية البحث، يظهر تجديد على الشاشة.
- 4 اختر الجهاز الذي تريد الاقتران به وأدخل رمز المرور. ثم المس موافق.
- 5 يتصل هاتفك حينئذٍ بالجهاز الآخر. حيث عليك إدخال رمز المرور نفسه.
- 6 لقد أصبح اتصال بلوتوث المحمي برمز مرور آمناً الآن.

استخدام سماعة رأس بلوتوث

- 1 تحقق من كون بلوتوث في وضع التشغيل و مرئياً.
- 2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.
- 3 المس السؤال قبل الاتصال أو الاتصال دوماً والمس نعم للاتصال الآن. يقوم الهاتف GT350i بالتبديل تلقائياً إلى وضع سماعة الرأس.

تحديث البرنامج

تحديث البرنامج

برنامج تحديث برنامج الهاتف المحمول من LG

لمزيد من المعلومات حول تثبيت هذا البرنامج واستخدامه، يرجى زيارة موقع <http://update.lgmobile.com>.
تتيح لك هذه الميزة ترقية برنامجك إلى الإصدار الأخير بسرعة وبشكل مريح على إنترنت من دون الحاجة إلى زيارة مركز الخدمة الخاص بنا. بما أن برنامج ترقية برنامج الهاتف المحمول يتطلب انتباه المستخدم الكامل لمدة عملية الترقية، يرجى التحقق من التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. تجدر الملاحظة إلى أن إزالة كبل اتصال بيانات USB أو البطاريات أثناء التحديث قد يتسبب بإلحاق ضرر بالغ بهاتفك المحمول، وبما أن جهة التصنيع لا تتحمل أي مسؤولية تجاه خسارة بيانات أثناء عملية التحديث، ننصحك بتدوين أي معلومات مهمة لتوخي الأمان.

الملحقات

يمكن استخدام هذه الملحقات مع الهاتف GT350i.



كبل البيانات



الشاحن



مضغوط



البطارية



سماعة
رأس
استيريو

ملاحظة:

- استخدم ملحقات LG الأصلية دائماً.
- يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى؛ يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.

بيانات تقنية

درجات الحرارة المحيطة

الحد الأقصى : +55 درجة مئوية (تفريغ).

+45 درجة مئوية (شحن)

الحد الأدنى : -10 درجات مئوية

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 /GSM 900/ DCS 1800/ PCS 1900 Quad Band Terminal Equipment

Model Name

GT350i

Trade Name

LG

CE0168!

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1/ EN 301 489-07 V1.3.1/ EN 301 489-17 V1.3.2

EN 60950-1 : 2001

EN 50360: 2001/ EN 62209-1: 2006

EN 300 328 V1.7.1

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, J / Director

20.Apr. 2010

Signature of representative

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

This handset is not recommended for blind disability person due to touch screen keypad.



GT350i User Guide

Congratulations on your purchase of the advanced and compact GT350i phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Guidelines for safe and efficient use	6	Using call barring.....	25
Getting to know your phone.....	11	Fixed dial number	25
Open view	12	Excuse message.....	26
Installing the SIM and battery.....	14	Call costs	26
Charging your phone.....	15	Call durations	26
Memory card	16	Data volume	26
Using your touch screen.....	17	Changing the common call setting.....	26
Touch screen tips	17	Contacts	27
Control the touch screen	17	Searching for a contact.....	27
Your home screen.....	18	Adding a new contact.....	27
The quick keys.....	19	Creating a group	27
The status bar	20	Changing your contact settings.....	28
Changing your Status from the status bar.....	21	Messaging.....	29
Using the Multi-tasking function.....	21	Sending a message	29
Calls	22	Entering text.....	29
Making a call.....	22	T9 mode	29
Making a call from your contacts.....	22	Setting up your email.....	30
Answering and rejecting a call.....	22	Retrieving your emails	30
In-call options	23	Sending an email using your new account.....	30
Speed dialing	24	Changing your email settings.....	30
Making a second call	24	Message folders.....	31
Using call divert.....	25	Changing your text message settings	31
Call waiting.....	25	Changing your multimedia message settings	32

Contents

Changing your other settings	32	Watching a video	42
Camera.....	33	Sending a video clip	42
Getting to know the viewfinder	33	Transferring a file to your phone....	42
Taking a quick photo	34	Others	43
After taking a photo.....	34	Music	43
Using the advanced settings	35	Transferring music onto your phone.....	44
Video camera.....	36	Playing a song	44
Getting to know the viewfinder	36	Creating a playlist	44
Making a quick video	37	FM Radio	45
After making a video	37	Searching for stations	45
Using the advanced settings	38	Resetting channels.....	45
Your photos and videos.....	39	Organiser.....	46
Viewing your photos and videos ...	39	Adding an event to your calendar..	46
Capturing an image from a video..	39	Adding an item to task list.....	46
Viewing your photos as a slide show	39	Using date finder	46
Setting a photo as wallpaper.....	40	Adding a memo.....	47
Editing your photos	40	Setting your alarm.....	47
Multimedia.....	41	Adding a city to your World clock..	47
Pictures	41	Voice recorder	48
Sending a photo.....	41	Recording a sound or voice	48
Using an image.....	41	Using your calculator	48
Printing an image	41	PC Sync	49
Moving or copying an image	42	Installing LG PC Suite on your computer	49
Sounds	42	Connecting your phone and PC.....	49
Using a sound	42	Backing up and restoring the information on your phone	49
Videos	42		

Viewing phone files on your PC.....	49
Synchronising your contacts	50
Synchronising the messages	50
The web	51
Accessing the web	51
Using RSS reader	51
Using your phone as a modem.....	51
Settings	53
Personalising your profiles	53
Changing your screen settings	53
Changing your phone settings	53
Changing your connectivity settings.....	54
Using memory manager	55
Sending and receiving your files using Bluetooth.....	55
Changing your Bluetooth settings:.....	56
Pairing with another Bluetooth device	56
Using a Bluetooth headset	57
Wi-Fi	57
Software Upgrade	58
Accessories.....	59
Technical data	60

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GT350i has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.540 W/kg (10 g) and when worn on the body is 0.568 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.

Guidelines for safe and efficient use

- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle with your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.


Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

Guidelines for safe and efficient use

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone

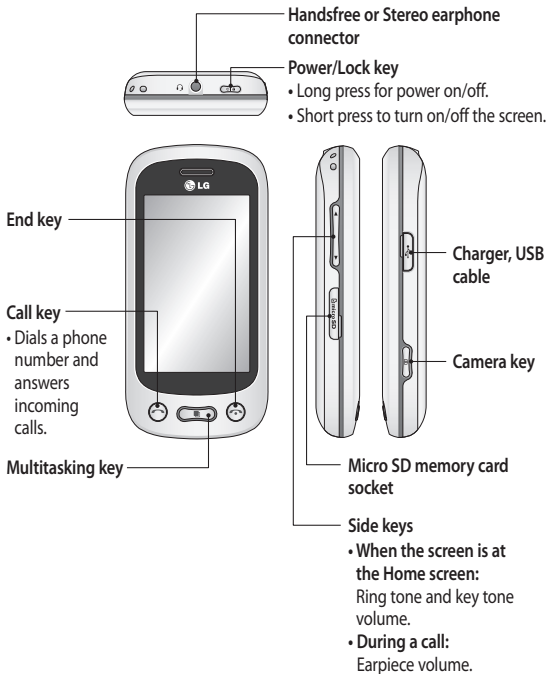

Open view



Change the text input mode
(capital/ small)

SMS

Alpha numeric keys

Symbol key

- Enters symbolic character

Space key

Use to enter a space when editing.

Social Network

Internet Full Browsing

Push E-mail


Instant Messenger

Enter key

Clear key

- Clears a character each time it is pressed. Hold the key down to clear all input.

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

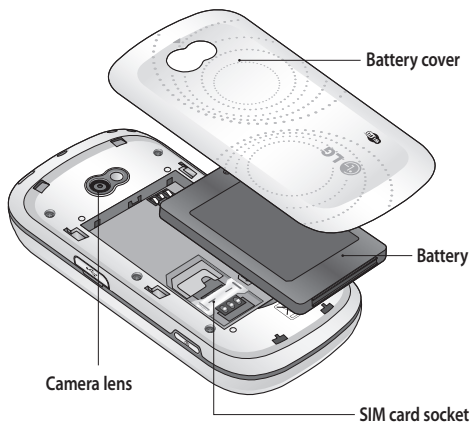

Installing the SIM and battery

1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.




⚠ WARNING: Do not use your fingernail to remove the battery.

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

2 Install the SIM card


Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it gently outwards.

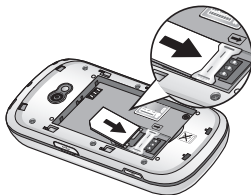

3 Install the battery

Insert the top of the battery into the top edge of the battery compartment first.

Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery until down it clicks into place.

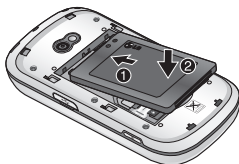

Charging your phone

Remove the charger socket cover on the side of your GT350i. Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable into the phone and plug it into a power socket. Your GT350i must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight.



Memory card

Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

NOTE: A memory card is an optional accessory.

- 1 Open the memory card slot cover on the left-hand edge of the phone.



- 2 Slide the memory card into the slot until it clicks into place. Make sure the gold contact area is facing downwards.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.

- 1 From the Home screen select , then **Phone settings** in **SETTINGS** tab.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.

NOTE: If there is existing content on your memory card, the folder structure may be different after formatting since all files would have been deleted.

Using your touch screen

Touch screen tips


- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GT350i is not in use, it will return to the lock screen.

Control the touch screen

The controls on the GT350i touch screen change dynamically depending on the task you are carrying out.

Opening Applications


To open any application, simply touch its icon.

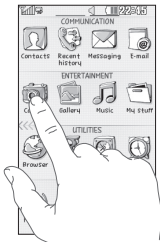

Scrolling

Drag from side to side to scroll.

On some screens, such as the Recent History, you can also scroll up or down.

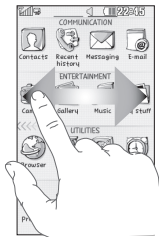

Your home screen

You can drag and click what you need right away in all home screen types.

Active




Widget home screen

When you touch  on the bottom right of the screen, the mobile widget panel appears. When you select widget and dragging it onto the screen, the

widget will appear on the home screen in the spot where it was dropped.

Active

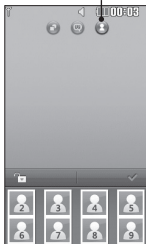

Speed dial home screen

You can call, send a message or edit the contact directly in this home screen. When you touch , the speed dial list appears, and you can drag your speed dials

onto the screen.

Active



Livesquare home screen

On the Livesquare screen, You can easily make a call and send a message to the number allocated to an avatar. To use the call,

messaging or contacts function, select an avatar and choose the **Quick key** icon you want to use.

TIP! The User Interface is based on three types of Homescreen. To swap between the home screens just wipe quickly over the display from left to right, or from right to left.

The quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** menu. From here you can create a new SMS or MMS, or view your message folder.



Touch to open the full **Top menu** which is divided into four categories.

Your home screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.


Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	EDGE in use
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed
	Unread Emails in mail inbox

Icon	Description
	Send failed
	An alarm is set
	Customised Profile in use (The number in the icon will vary)
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset in use
	Calls are diverted
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enabled for use

Changing your Status from the status bar

Touch the centre of the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3s and Bluetooth status. Here you can set the Profile type, play/pause MP3s and activate/deactivate Bluetooth.

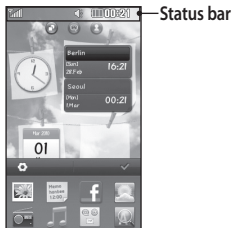

Using the Multi-tasking function

Short press the multi-tasking hard key  to open the Multitasking menu. From the Running App. tab you can view all the applications that are running and access them. You can launch and edit your Favourite applications from the Favourite Apps. tab.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

Calls

Making a call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.
- 4 To end the call, press the End key.

TIP! To enter + for making an international call, press and hold .

TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts


- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 You can also touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

Answering and rejecting a call

When your phone rings, touch the Send key to answer the call.

To mute the ringing, unlock the phone if it is locked, then tap . This is useful if you forgot to change your profile to Silent for a meeting. Touch **Reject** to reject an incoming call.

In-call options

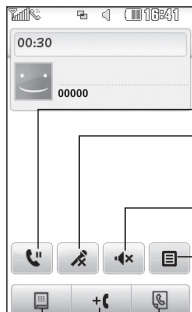

Hold - Touch  to put a call on hold.

Mute - Touch  to turn off the microphone so the person you are talking to cannot hear you.

Speaker - Touch  to turn the speaker phone off.

Options - Touch  to bring up a list of further in-call options.

Touch  to search your contacts during a call.

Touch  to add another person to the call.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.

Calls

Speed dialing

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Contacts** in the COMMUNICATION tab and touch  and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your **Contacts** will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the Name field box and enter the first letter of the name of the contact required.

Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Touch  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

TIP! Touch any single call log entry to view the date, time and duration of the call.

NOTE: You will be charged for each call you make.

Using call divert

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all voice calls, when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Enter the number you want to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

Call waiting

Be alerted when you have a call waiting. (Depends on your network provider.)

Using call barring

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call barring**.

- 3 Choose any or all of the six options:

All outgoing
Outgoing international
Outgoing international calls except home country
All incoming
Incoming when abroad
Deactivate all

- 4 Enter the call barring password. Please check with your network operator about this service.

TIP! Select **Fixed dial numbers** from the **Call settings** options to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Fixed dial number

Choose a list of numbers that can be called from your phone. You'll need your PUK2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Calls

Excuse message

Before you reject an incoming call, you can use “**Excuse messages**” to send a message to explain why you do not receive an incoming call.

Call costs

View the charges applied to your dialled numbers (this service is network-dependent and some operators cannot support it).

Call durations

View the duration of all your dialled or received calls or both.

Data volume

View the amount in kilobytes of all received or sent data or both.

Changing the common call setting

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Scroll and touch **Common settings**. From here you can adjust the settings for:

Call reject - Slide the switch to **ON** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or

groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Answer mode - Choose whether to answer the phone using the send key or any key.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

Contacts

Searching for a contact

- 1 Touch **Contacts** in the **COMMUNICATION** tab.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the **Name** field will jump the menu to that alphabetical area of the list.

TIP! The alphabetical keypad is displayed once you tap the **Name** field.

Or touch  from the home screen.

Adding a new contact

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Create new contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to six different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager**, **Fax** and **General**.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.

- 6 Assign the contact to one or more groups. You can assign up to six groups per contact. Choose between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Memo** and **Livecon**.
- 8 Touch **Save** to save the contact.

Creating a group

- 1 Touch **Contacts** in the **COMMUNICATION** tab. And touch **Groups**.
- 2 Touch **Create new group** or touch  and select **Create new group**.
- 3 Enter a name for your new group. You can also assign a ringtone to the group.
- 4 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your **Contacts**.

Contacts

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch , then touch **Settings**.
- 2 From here, you can adjust the following settings:
 - Contact list settings** - Adjust the **Contacts location**, **Name display** and **Quick command key** settings.
 - Send all contacts via Bluetooth**
 - Send all of your contacts to another device using Bluetooth.
 - Backup contacts** - Performs a backup your contacts on to the external memory. This option requires external memory.
 - Restore contacts** - Restores your contacts from the external memory. This option requires external memory.

Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to wipe your contacts.

Messaging

Messaging

Your GT350i combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messaging** in the **COMMUNICATION** tab. And touch **New message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send when ready**.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering text

There are two ways to enter text:

Touch keypad and Qwerty.

Touch to turn on  mode.

This mode is only used when you have Keypad as the input method.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Messaging

Setting up your email

Touch **E-mail** in the **COMMUNICATION** tab.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

Retrieving your emails

You can automatically or manually check your account for new emails. To check manually:

- 1 Touch **E-mail** in the **COMMUNICATION** tab.
- 2 Touch the account you want to use.
- 3 Touch **Inbox**.
- 4 Touch  and select **Retrieve or Synchronisation**.

Sending an email using your new account

- 1 Touch **New e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send** and your email will be sent.

Changing your email settings

- 1 Touch **E-mail** in the **COMMUNICATION** tab.
- 2 Touch  and select **E-mail settings** and then you can adapt the following settings:

E-mail accounts - Set up the Email account.

Preferred e-mail - Select the email account you want to use.

Allow reply e-mail - Choose to allow the sending of read confirmation messages.

Request reply e-mail - Choose whether to request read confirmation messages.

Retrieve interval - Choose how often your GT350i checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Include message in Fwd. & Reply - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in roaming - Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification - Choose whether to be alerted to new emails.

Signature - Choose the signature for E-mail and MMS you want to set. You can register one or more of signatures.

Priority - Choose the priority level of your email messages.

Mail sending size - Set the maximum size of sending mail.

E-mail counter - Input the date you want. You can check emails you sent during that period.

Message folders

There are five folders in Messaging menu.

Inbox - All the messages you receive are placed into your inbox.

Drafts - If you do not finish writing a message, you can save what you have done in this folder.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you have sent are placed in this folder.

My folders - Create folders to store your messages.

Changing your text message settings

Touch **Messaging** in the **COMMUNICATION** tab and touch **Settings**. Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or **MMS**.

Messaging

Changing your multimedia message settings

Touch **Messaging** in the **COMMUNICATION** tab. Scroll and choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read reply - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Creation mode - Choose your message mode.

Delivery time - Choose how long to wait before a message is delivered.

Multi msg centre - Choose one from the list or add a new message centre.

Changing your other settings

Touch **Messaging** in the **COMMUNICATION** tab. And touch **Settings**.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

Message counter - Choose to set period for counting messages.

Info. service - Choose whether to turn Cell broadcast on/off and select your channels and languages.

Camera

Getting to know the viewfinder

Exposure - This defines the difference between light and dark in an image.

Zoom - zoom in or zoom out. This function is enabled depending on the picture size you take.



Back

Taking a photo

Video mode - Slide down this icon to switch to video mode.

Gallery - This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Settings - Touch this icon to open the settings menu. See **Using the advanced settings**.

Size - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the five numerical options: 2M (1600x1200), 1M (1280x960), VGA (640x480), Home screen (WQVGA), QVGA (320x240).

Continuous shot - This enables you to take 3/6/9 shots automatically in very quick succession.

TIP! You can bring up the options by tapping the screen. They automatically turn off after a few seconds.

Camera

Taking a quick photo

- 1 Long press the  key on the right side of the phone.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo. You can also press the  key on the side of the phone firmly.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen.

 Touch to send the photo as a message, email or via Bluetooth.


 Touch to set a Home screen, Contacts image, Startup image or Shutdown image.

 Touch to edit the photo.

 Touch to edit the name of the captured picture.

 Touch to delete the photo you have just taken and confirm by touching **Yes**. The “Deleted” message appears.

 Touch to open your gallery.

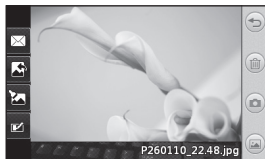

Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Color Effect - Choose a color tone to apply to the photo you're taking. There are four color tone options: **Off**, **Black & White**, **Negative** or **Sepia**.

White balance - Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

Night mode - Useful to use in dark places.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for the group photo you want to be part of.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

View mode - Choose between Full screen or Full image. In Full screen, the image may be cropped to fit the screen.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Show captured image - Choose to view the picture with options after taking a photo.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.


Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from **Off**, **Simple cross** or **Trisection**.

Reset settings - Reset all the camera settings.

Video camera

Getting to know the viewfinder

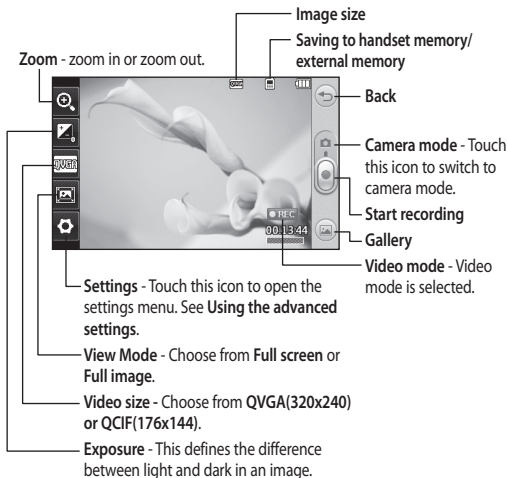

TIP! You can close all shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options, touch the screen again.

Making a quick video

- 1 Long press the camera key on the right side of the phone for a few seconds.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the camera key  on the phone once to start recording. Or touch the red dot .
- 4 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the  a second time to stop recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with seven icons down the left and right sides.

-  Touch to play the video.
-  Touch to send the video as a **Message or Email** or by **Bluetooth**.
-  Touch to edit the video.
-  Touch to edit the name of the selected picture.
-  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to shoot another video straight away.
-  Touch to view a gallery of saved videos and images.



Video camera

Using the advanced settings

From the viewfinder, touch **Settings** to open all the advanced settings options.

Color Effect - Choose a color tone to use on your new video. **Off, Black & White, Negative, Sepia.**

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

Quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a time limit for your video. Choose whether or not to send the video as an MMS.

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Voice - Choose whether or not to record a video with sound.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.

Reset settings - Reset all the video camera settings.

Your photos and videos

Viewing your photos and videos

- 1 Touch **Gallery** in the ENTERTAINMENT tab. Or Touch  on your camera preview screen. You can check your pictures and videos.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.
- 4 To play the video touch . To pause playback touch .

TIP! Flick left or right to view other photos or videos.

Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch the upper left side of the screen to open the  menu.
- 3 From the options menu select .
- 4 The image will appear on the screen, with its image name.

- 5 Touch  to return to the video.
- 6 The image will be saved in your **My stuff** folder and appear in the gallery.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos cannot be viewed as a slideshow.

- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
 - 2 The slideshow will begin.
- There are options within slideshows:
- Touch  to go back.
-  Touch to pause the slideshow on a particular photo.
-  Touch again to resume playback.
-  Touch to show random.
-  Touch to increase or decrease the speed of the slideshow.

Your photos and videos

Setting a photo as wallpaper

- 1 Touch **Gallery** in the ENTERTAINMENT tab.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch .
- 4 You can change the size of the picture with .
- 5 When you are happy with the picture touch **Set**.
- 6 Choose from the options what you want to change: **All**, **Widget homescreen**, **Speed dial homescreen**.

Editing your photos

- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to alter your photo:

 Move your finger across the screen to select the area.

 Draw something on your photo freehand. Select the line thickness from the four options, then the color you want to use.

 Add writing to the picture.

 Decorate your photo with stamps. Choose from the different stamps and colors and touch your photo where you want to place them.

 Erase whatever you draw. You can also select the eraser size.

 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.

 Undo the last effect or edit you made to the photo.

 Touch to open the Filter options.

 You can adjust the selected photo.



Multimedia

You can store any multimedia files on your phone's memory so that you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free space in your phone's memory. You can find these files in the menu **My stuff** in the ENTERTAINMENT tab.

Pictures

Images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Sending a photo

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want.
- 2 Touch **Send** and choose from **Multimedia message**, **Email**, **Bluetooth**.

Using an image

You can choose images to use as wallpapers and the lock screen or even to identify a caller.

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Use as** and choose from:
 - Homescreen image** - Set a wallpaper for the home screen.
 - Lock screen image** - Set a wallpaper for the lock screen.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.
 - Start up image** - Set an image to appear when you switch the phone on.
 - Shut down image** - Set an image to appear when you switch the phone off.

Printing an image

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Print via Bluetooth**.

Multimedia

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch **My stuff** in the ENTERTAINMENT tab, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Move** or **Copy**.

Sounds

The **Sounds** contains a list of sounds including the downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as a ringtone.

Using a sound

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Sounds**.
- 2 Select a sound you want. It will begin to play.

- 3 Touch  and select **Use as**.
- 4 Choose from **Ringtone**, **Message tone**, **Start-up** and **Shut down**.

Videos

The **Videos** shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Videos**.
- 2 Select a video to play.

Sending a video clip

- 1 Select a video.
- 2 Touch  to send the video as a **Message** or **Email** or by **Bluetooth**.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your Bluetooth enabled device to your phone. You can also use the LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and Bluetooth enabled device have Bluetooth switched on and are visible to one another.
- 2 Use your Bluetooth enabled device to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **My folder** as a default (the second tab in **My stuff**). You may overlook the file if the folder is full.

Others

The **Others** contains a list of the files which are not pictures, sounds, videos, documents, games or applications.

Music

Your LG GT350i has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music** in the ENTERTAINMENT tab. From here, you can access a number of folders:

NOTE: The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

Recently played - Plays the songs you have played recently.

All tracks - Contains all the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Multimedia

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Select one of the folders and the song you want to play.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.
- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.
- 3 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick mark will be shown for the selected items.
- 4 Touch **Done**.

FM Radio

Your LG GT350i has an FM radio feature so you can tune into your favourite stations to listen on the move.

NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket.

Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

Resetting channels

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Organiser

Adding an event to your calendar

- 1 Touch **Organiser** in the UTILITIES tab and select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
- 5 Enter **Subject**.
- 6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

Adding an item to task list

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Tasks** and touch **Add tasks**.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Date finder**.
- 3 Set the required date in the **From** tab.
- 4 Set the number of days in the **After** tab.
- 5 The **Target date** will be shown below.

Adding a memo

- 1 Touch **Memo** in the UTILITIES tab.
- 2 Touch **Add memo**.
- 3 Type your **memo**, then touch **Save**.
- 4 Your **memo** will then appear on the screen in the **Memo** application.

Setting your alarm

- 1 Touch **Alarms** in the UTILITIES tab. **Widget alarm** should appear in the list as default and you can not delete it.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound in the **Time** field box.
- 4 Choose how you would like your alarm to repeat in the **Repeat** box: **Not repeated**, **Daily**, **Mon ~ Fri**, **Mon ~ Sat**, **Sat ~ Sun**, **Except holiday** or **Select day**.
The icons then indicate the weekday you select.
- 5 Select **Alarm type** to select the type of alarm you want.
- 6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds touch the .

- 7 Add a memo for the alarm in the **Memo** box.
- 8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

NOTE: You can set up to 5 alarms including **Widget alarm**.

TIP! Slide the switch **ON/OFF** to the alarm to set it.

Adding a city to your World clock

- 1 Touch **World clock** in the UTILITIES tab.
- 2 Touch the , followed by **New city**.
- 3 Touch the  and type the name of the city you require in the search field box. To make it easier, Scroll the globe, touch the area you want and choose the city on the map.

Organiser

Voice recorder

Use your voice recorder to record voice or other audio files.

Touch **Voice recorder** in the UTILITIES tab and select , then **Settings** to change Settings:

Duration - Set the recording duration. Choose from **No limit**, **MMS** or **1 min**.

Quality - Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

Memory in use - Select where to save the audio files. Choose between External memory and Handset memory.

Recording a sound or voice

- 1 Touch  to begin recording.
- 2 Touch  to pause recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.

Using your calculator

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.

PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait for a while. PC Suite runs automatically.

Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Back & Restore** at the right-bottom of PC Suite tool. icon, and select **Backup** or **Restore**.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to, or restore information from. Click to start a backup or began to recover.
- 4 Your information will be backed up or restored.

Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the icons which you want to manage . You can view all the files in your phone by selecting each category.

PC Sync

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content that you no longer need.

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Click **Sync Contacts** button your PC will now import and display all the contacts saved on your handset.
- 4 Click on **Menu** and select **Export**. You can now select where you want to save your contacts to.

Synchronising the messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your PC and phone messages will be displayed in folders on the screen.
- 4 Use the toolbar at the top of the screen to edit and rearrange messages.

WARNING Do not disconnect your phone during the transfer.

The web

Browser gives you a fast, full color world of games, music, news, sport, entertainment and lots more, straight to your mobile phone. Wherever you are and whatever you like.

Accessing the web

- 1 Touch the **Browser** in UTILITIES tab.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web

sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Using your phone as a modem

Your GT350i can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GT350i and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click on option Internet Connection using your phone then Add.

The web

- 4 Write the Profile that can connect to the Internet and save the values.
- 5 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GT350i.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and GT350i.
- 2 Pair your PC and GT350i so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click on option Internet Connection using your phone then Add.
- 5 Write the Profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GT350i.

Settings

Personalising your profiles

You can quickly change your profile on the Home screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles** in the **SETTINGS** tab.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message tone** settings and more.

Changing your screen settings

Touch **Screen settings** in **SETTINGS** tab.

Screen settings

Wallpaper - Choose the background image for your Widget homescreen, Speed dial homescreen or Lock screen.

Widget home template - Choose the template for your Widget home screen.

Livesquare - Touch Livesquare guide to check its functions. You can also adjust the following settings:

Liveplace - live square background

Livecon - Human or animal

Daily reset - on/off

History - selecting  deletes you Livesquare history

Top menu - Choose the style of the top menu, choose either **Zigzag**, **Scrolling** or **Screen by screen**.

Lock screen - Choose the style of Lock screen.

Dialling - Choose the style of dialling screen and adjust the font style only for your dialling screen.

Font - Choose the font size and style.

Brightness - Adjust the screen brightness.

Greeting message - Choose **ON** or **OFF** and fill in the greeting message in the text field.

Start-up/Shut down - Choose the theme for your start-up/shut down screen.

Changing your phone settings

Enjoy the freedom of adapting how your GT350i works for your own style.

Touch **Phone settings** in the **SETTINGS** tab, then choose from the list below.

Settings

Phone settings

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Choose to switch the factory set power saving settings on/off or Night only.

Languages - Change the language of your GT350i's display.

Auto keylock - Lock the keypad automatically in the Home screen.

Security - Adjust your security settings, including PIN codes and handset lock.

Change codes - change your security code, PIN code, PIN2 code or ATMT code.

Anti Theft Mobile Tracker: When the handset is stolen, handset sends the SMS to the numbers configured by real Owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT Code is "000000."

Memory info - See **Using memory manager** for more information.

Reset settings - Restores all settings to their factory defaults.

Handset Information - You can upgrade the Software (details are given in Software upgrade via web)

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity** in the SETTINGS tab.

Network settings

Select network - If you select **Automatic**, the GT350i automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

Preferred lists - You can add a preferred network to connect to. If the network is searching

automatically, simply choose one from the network list and if not, add a new network manually.

Internet profiles - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

USB connection mode - Choose a Data service from the options and synchronise your GT350i using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation.

Using memory manager

Your GT350i has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is been used and see how much space is available.

Touch **Phone settings** in the **SETTINGS** tab, then **Memory info**.

Handset common memory - View the memory available on your GT350i for Pictures, Sounds, Videos, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, Task list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

SIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - Choose the location you prefer items to be saved to between Handset and External memory.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GT350i

Settings

will not automatically search for other **Bluetooth** devices. If not, your GT350i will search for other **Bluetooth** enabled devices within range.

- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

TIP! Check the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings:

Touch **Bluetooth** in the **SETTINGS** tab. And select  and choose **Settings**.

Make your changes to:

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your GT350i.

Supported services - Select how to use Bluetooth in association with different services.

Remote SIM Mode - Turn on or off.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your GT350i and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GT350i will search for devices. When the search is completed, **Refresh** will appear on screen.

- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your GT350i will automatically switch to Headset profile.

Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

NOTE: The GT350i supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software Upgrade

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>. This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are available for use with the GT350i.

Charger



Data cable



Battery



CD



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeuuido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 /GSM 900/ DCS 1800/ PCS 1900 Quad Band Terminal Equipment

Model Name

GT350i

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1/ EN 301 489-07 V1.3.1/ EN 301 489-17 V1.3.2

EN 60950-1 : 2001

EN 50360: 2001/ EN 62209-1: 2006

EN 300 328 V1.7.1

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-ThamesSurrey - KT12 2TD , United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above
mentioned standards and Directives

Name

Seung Hyoum, Ji / Director

Issued Date

20.Apr. 2010

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

