



عربي
ENGLISH

ENGLISH
عربي



CE0168 !

www.lg.com

دليل مستخدم

GT540

P/N : MMBB0381607(1.0) WR

USER GUIDE

GT540

P/N : MMBB0381607(1.0) WR



CE0168 !

www.lg.com

Bluetooth QD ID B016480



GT540 User Guide

- ENGLISH

- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset has a touch screen keypad and is not recommended for people with impaired vision.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Google Mail™, YouTube™, Google Talk™ and Android™ are trademarks of Google, Inc.




Congratulations on your purchase of the advanced and compact GT540 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Guidelines for safe and efficient use	6	Adding widgets to your home screen.....	25
Important notice	10	Getting back to a recently used application	25
1. Phone memory	10	Google Account Set-up	27
2. Optimising Battery Life	10	Creating your Google account..	27
3. Installing an Open Source OS ..	11	Signing in your Google account..	27
4. Using Unlock pattern	11	Calls	28
5. Using Safe Mode and Hard Reset	11	Making a call.....	28
6. Connecting to Wi-Fi networks	12	Calling your contacts.....	28
7. Using a microSD card.....	13	Answering and rejecting a call ..	28
8. Opening and Switching Applications.....	13	Adjusting call volume	28
9. Connecting your phone to a computer via USB	13	Call settings	28
Getting to know your phone ...	15	Contacts	30
Installing the SIM card and battery	17	Searching for a contact.....	30
Charging your phone.....	18	Adding a new contact	30
Installing the memory card	19	Messaging/E-mail	31
Formatting the memory card ...	19	Messaging	31
Your Home screen	21	Sending a message	31
Touch-screen tips	21	Entering text.....	31
Touch calibration	21	T9 mode	32
Lock and unlock screen	21	Abc mode.....	32
Using your home screen.....	21	123 Mode	32
Select your default home screen	21	Setting up your email	32
LG Home	22	Sending an email using your new account.....	32
Android Home	24	Changing your email account's settings	33
		Changing your message settings.....	33

Contents

Social Networking	35	Multimedia	45
Social Networking	35	Media Player	45
Adding your account to your phone	35	Video editor	45
Viewing and updating your status	35	Storyboard	45
Removing accounts on your phone	35	Music Movie	46
Camera	36	Auto cut	46
Getting to know the viewfinder .	36	Playing a game.....	46
Using the focus mode	37	Transferring files using USB mass storage devices	47
Taking a quick photo	37	Music.....	47
Once you've taken the photo ...	37	Playing a song	47
Using the advanced settings....	38	Using the radio	48
Viewing your saved photos	39	Searching for stations	48
Video camera	40	Listening to the radio	48
Getting to know the viewfinder .	40	Quickoffice	48
Shooting a quick video	41	Google applications	49
After shooting a video	41	Google Maps	49
Using the advanced settings....	41	Google Mail	49
Watching your saved videos	42	Google Talk.....	49
Your photos and videos	43	SlideME Application Manager (SAM)	50
Editing your photos	43	Discover Applications	50
Editing your videos.....	43	View Application Details	50
Trimming the length of the video.....	43	Download Free Applications.....	50
Selecting transition style.....	43	Purchase Applications	50
Adding subtitles.....	44	SD Card	51
Adding edit effects.....	44	Refresh Catalog.....	51
Grabbing a frame.....	44	Storage Locker	51
Adding dubbing to your video ..	44	Utilities	52
		Setting your alarm	52
		Using your calculator.....	52

Adding an event to your calendar.....	52
Voice recorder	53
Recording a sound or voice	53
The Web.....	54
Accessing the Web	54
Using the Web tool bar	54
Changing Web browser settings.....	54
Settings	55
Wireless controls	55
Sound settings.....	55
Display settings	55
Touch settings	55
Data synchronization	56
Security & location	56
To lock your screen by using the Pattern Lock.....	56
Applications.....	56
SD card & phone storage	57
Date and time.....	57
Locale and text	57
Search	57
Accessibility	57
Speech synthesis.....	57
About phone.....	57
DivX VOD registration	57
Wi-Fi	58
1. How to set up Wi-Fi	58
2. Wi-Fi network profile support	58
3. How to obtain the MAC address	59
Software update	60
Phone Software update	60
DivX Mobile 	60
Accessories	61
Troubleshooting	63

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model GT540 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.23 W/kg (10 g) and when worn on the body is 1.39 W/Kg (10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1 g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers, and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances, such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources, such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.

- Turn off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material, as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner, or alcohol).
- Do not charge the phone when it is on soft furnishings.
- Charge the phone in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object, as it may damage the phone.

- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronic devices

- All mobile phones may experience interference, which could affect performance.
- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.

Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones while driving in the area.

- Do not use a hand-held phone while driving.
- Pay full attention to driving.
- Use a hands-free kit, if available.

Guidelines for safe and efficient use

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle, such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music while on the go, please make sure the volume is at a reasonable level so you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off while close to your ear. We also recommend that music and call volumes are set to reasonable levels.

Glass parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until an authorised service provider replaces the glass.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off, or activate flight mode before boarding any aircraft.

- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts that may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available in all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose of in household waste.
- If you must replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption by the charger.
- Actual battery life depends on network configuration, product settings, usage patterns, battery, and environmental conditions.

Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.

1. Phone memory

When available space on your phone memory is less than 10% , your phone can not receive the new message. You need to check your phone memory and delete some data such as applications or messages to make more memory available.

To manage the application

1. On the home screen, touch **Applications** tab and select **Settings> Applications> Manage applications**.
2. When all applications appear, scroll and select the application you want to uninstall.
3. Tap **Uninstall** and touch OK to uninstall application you desired.

2. Optimising Battery Life

You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, use the Settings application to turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- If you don't need them, turn off automatic syncing for Google Mail, Calendar, Contacts, and other applications.
- Some applications you've downloaded may cause your battery's life. You will need to uninstall those applications and all of its data and settings from the phone.

To check the battery charge level

1. On the home screen, touch **Applications** tab and select **Settings> About phone> Status**.
2. The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.

To monitor and control what uses the battery

1. On the home screen, touch **Applications** tab and select **Settings> About phone> Battery use**.
2. The top of the screen displays battery usage time. Either how long since last connected to a

power source or, if connected to a power source, how long you were last running on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

3. Installing an Open Source OS

If you install an open source OS on your phone, and do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

WARNING!

If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

WARNING!

To protect your phone and personal data, download applications only from trusted sources. If some applications are not properly installed on your phone, your phone may not work normally or a serious error can be occurred. You will need to uninstall those applications and all of its data and settings from the phone.

4. Using Unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.

WARNING!

Precautions to take when using the Pattern Lock

It is very important that you remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. After attempting the unlock pattern 5 times, you can touch the Forget Pattern Option and use your Google account information to unlock your phone.

If you do not have Google account, you don't create the Google account on the phone, or you forget it, you can use **Hard Reset**.

5. Using Safe Mode and Hard Reset

Using Safe mode

*** To recover from malfunction state of your phone**

1. Turn off your phone and reboot. While your phone is powering back on, press and hold the Home key during Android Logo is displayed.

Important notice

Your phone will boot all the way to the main screen and display "safe mode" in lower left corner.

2. Select **Settings**>
Applications>**Manage applications**, and choose the application then select an **Uninstall** icon.
3. After uninstalling the application, turn off and reboot your phone.

* Using Hard Reset (Factory Reset)

If it does not restore to the original condition, use **Hard Reset** to initialise your phone.

When your phone turns on and the lock screen displays, press and hold the volume up + Home + Search keys all at the same time (for five seconds). When the pop up screen is shown, choose OK to reset your phone.

Please note, after you perform **Hard Reset**, all your data and applications on your phone will be erased and cannot be reversed.

WARNING!

If you perform Hard Reset, all user applications and user data will be deleted. Please remember to back up any important data before performing **Hard Reset**.

6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you access a wireless access point, or "hotspot." Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

To turn Wi-Fi on and connect to a Wi-Fi network

1. On the home screen, touch **Applications** tab and select **Settings**> **Wireless controls**> **Wi-Fi settings**.
2. Touch **Wi-Fi** to turn it on and begin scan for available Wi-Fi networks.
 - List of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
3. Touch a network to connect to it.
 - If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)

4. The Status bar displays icons that indicate Wi-Fi status.

7. Using a microSD card

Pictures, along with Music and Video files, can only be saved to external memory.

Before using the built-in camera, you need to insert a micro SD memory card to your phone first.

Without inserting a memory card, you will not be able to save pictures and video you had taken.

NOTE: Applications can only be saved to the phone's internal memory.

WARNING!

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Home Screen > Applications > Settings > SD Card&phone storage > Unmount SD card.**

8. Opening and Switching Applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

To stop the application you use

1. On the home screen, touch **Applications** tab and select **Settings> Applications> Manage applications.**
2. Scroll to the desire application and touch **Force stop** to stop using it.

9. Connecting your phone to a computer via USB

NOTE: You need LG PC Suite to use GT540 via USB cable with PC.

Important notice

GT540 does not support:

- PC Connection via Bluetooth
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- E-mail
- Java Application

User's guide for PC Suite IV is in Help menu after install PC Suite IV.

1. Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You receive a notification that the USB is connected.
2. Open the Notification drawer and touch USB connected.
3. Touch **Mount** to confirm that you want to transfer files between your phone's microSD card and the computer.

When the phone is connected as USB storage, you receive a notification. Your phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

NOTE: Unlock screen when using data connection

Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just touch it.

Tip!

To use a microSD card on your phone again, you need to open the Notification drawer and touch "Turn off USB storage".

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer, carefully follow your computer's instructions to unmount the microSD card and disconnect USB devices correctly, to avoid losing information on the card.

1. Unmount the microSD card on your computer.
2. Open the Notification drawer and touch **Turn off USB storage**.
3. Touch **Turn off** in the dialog that opens.

Getting to know your phone

Menu key

- Opens options menu and check what options are available.

Send key

- Access to call logs or answers incoming calls.

Home key

- Returns to home screen from any screen.



Earpiece

Back key

- Returns to the previous screen.

End/Power/Lock key

- Ends or rejects a call.
- Power ON / OFF Your phone by pressing and holding the key.
- Turns off the screen and locks.

Microphone

Getting to know your phone

Volume keys

- On the home screen: controls ringer volume.
- During a call: controls your earpiece volume.
- When playing a track: controls volume continuously.



Charger, micro USB cable connector

Search key 

- Search the web and contents in your phone.

Camera key 

- Go to the camera menu directly by pressing and holding the key.

Stereo earphone connector

Camera lens

microSD memory card slot

Charger, micro USB cable connector


Back cover

Battery

SIM card slot

Camera key


Search key

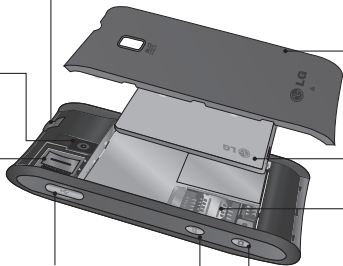


Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

- 1 With the back of the phone facing you, remove the back cover. To remove the back cover, firmly press your thumbs on either side of the back cover, and slide the cover up.

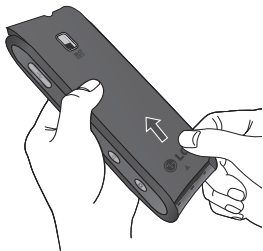


- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.

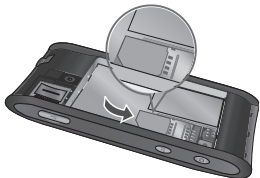

Getting to know your phone

- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery, then gently press the battery until it snaps into space.

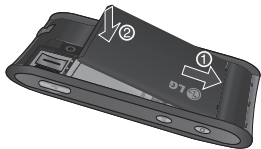


- 4 Replace the back cover of the phone and slide it down into place until the latch clicks.



NOTE! If your phone does not connect to a network when you insert a SIM card and turn it on, please contact your service carrier to obtain the details of its access point name.

Charging your phone

Slide back the cover of the charger connector on the side of your GT540. Insert the charger, and plug it into an electrical outlet. Your GT540 must be charged until you can see .

NOTE: The battery must be fully charged initially to improve battery lifetime.




NOTE: The GT540 has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance.

Installing the memory card


To store additional multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.

To insert a memory card:

- 1 Turn the phone off before inserting or removing the memory card.
Remove the back cover.
- 2 Open the slot protection and insert the memory card into the slot.
Make sure the gold contact area is facing downwards.

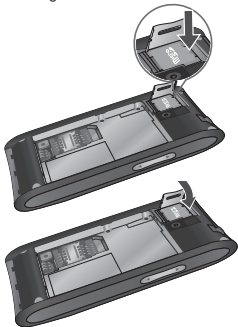

- 3 Close the slot protection.

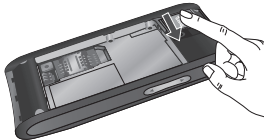

WARNING!

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on the card are deleted when you format the card.

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Unmount SD Card.

Getting to know your phone

- 5 Touch **Format SD card**, then confirm your choice.
- 6 If you set the pattern lock, input the pattern lock and select **Erase Everything**. The card will then be formatted and ready to use.

NOTE: If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

Tip!

If your memory card is already Unmount, you can use the following step to format it.

Touch **Applications > Settings > SD card & phone storage > Format SD Card**.

Your Home screen

Touch-screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Touch calibration

Calibrating the device screen involves tapping the centre of a cross as it moves around the screen. This process ensures that when you tap the screen, the tapped item is activated.

If your phone does not accurately respond to screen taps, follow these steps to re-calibrate.

1. Tap **Application > Settings > Sound & display**, and scroll to the **Touch settings**.
2. Touch **Touch calibration**, and follow the instructions on the screen.
3. After calibration is completed, choose between **Check calibration** and **Save without check**, then complete Calibration.

Lock and unlock screen

Whenever your GT540 is not in use, it will return to the lock screen.

If you do not use the phone for a while, the home screen or other screen you are viewing, is replaced with the lock screen and then the screen darkens, to conserve the battery. To wake up your phone, press **Send**, **Home**, or **Power**. The lock screen will appear and drag your finger to the right to unlock your home screen. The last screen you were working on opens.

Using your home screen

Touch the **Applications** tab  at the bottom of the screen.

You can then view all your installed applications.

NOTE: Some screen images may be different depending on your phone provider.

Select your default home screen

The user interface is based on two types of home screens: **LG Home** and **Android Home**.

You can set your favourite home screen as the default.


If you want to change the default home settings, choose Home selector from the applications menu.

Your Home screen

LG Home

Simply swipe your finger to the left or right to view them.

You can also customise each panel with widgets, shortcuts, folders, wallpapers, which are shortcuts to your favourite applications, folders and wallpapers.

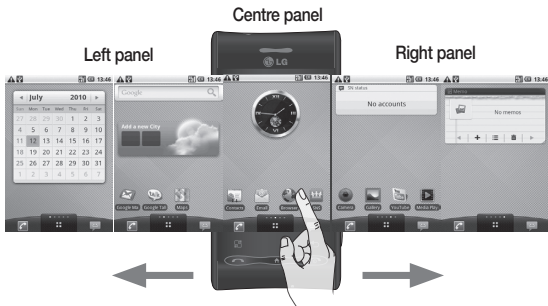

Tip!

Small dots at the application tab on the bottom of the screen indicate which panel you're viewing.

In your LG home screen, you can view quick keys on the bottom of the screen. The quick keys provide easy, one-touch access to the functions you use the most.



Touch the **Phone** icon to bring up the touch-dialling pad to make a call.


Touch the **Message** icon to access the messaging menu. Here, you can create a new message.

Touch the **Applications** icon to open the applications menu. Just touch and slide up or down the screen to scroll through your applications.

Your Home screen

Android Home

Simply swipe your finger to the left or right to view them. You can also customise each panel with widgets, shortcuts, folders, wallpapers, which are shortcuts to your favourite applications, folders and wallpapers.

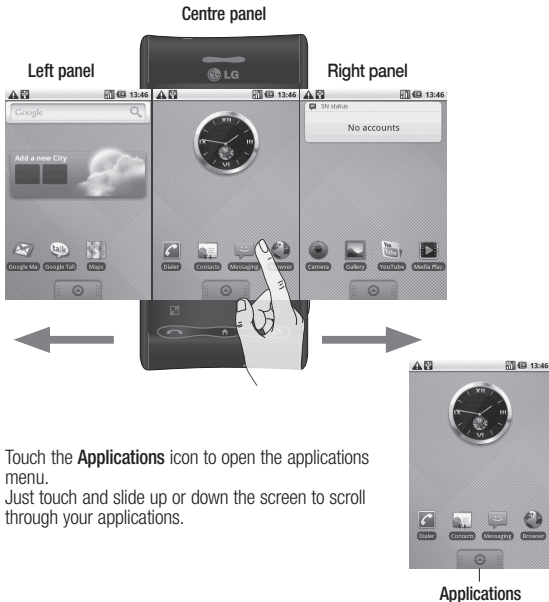

Touch the **Applications** icon to open the applications menu. Just touch and slide up or down the screen to scroll through your applications.

Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets, folders or Wallpapers to it. For more convenience using your phone, add your favourite widgets on the home screen.

NOTE: LG Home and Android Home provide this function. To add an desired icon to your home screen:

- 1 On the home screen, touch Menu key and select Add.
- 2 On the **Add to Home screen** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it.
- 4 Select **Contacts with phone numbers** from the list and tap it.
- 5 You will see a new folder's icon on the home screen. Drag it to the desired locations on the desired panel and release your finger from the screen.

To remove an application icon from the home screen:

- 1 Touch and hold that icon. The **Applications** icon will be change as the **Trash** icon.
- 2 Drag and draw an application icon to the Trash icon.

Getting back to a recently used application

- 1 Touch and hold the **Home** key. The screen will show you a pop up with icons of applications that you've used recently.
- 2 Touch an icon to open its application. Or, touch **Back** key to return to the current application.

Notification drawer


The notification drawer runs across the top of your screen. Touch and slide the notification drawer down with your finger. Or, on the home screen, touch **Menu** key and select **Notifications**. Here, you can check Sound, Wi-Fi, Bluetooth, GPS status as well as other notifications.

Viewing the status bar

The status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you're likely to see in the status bar.

Your Home screen



[Status bar]


Icon	Description
	No SIM card
	No signal
	Wi-Fi is on and connected to an AP
	Wired headset
	Call forward
	Call hold
	Speakerphone
	Call mute
	Missed call
	Bluetooth on
	Bluetooth connected
	System warning
	Alarm
	New voicemail

Icon	Description
	Flight mode
	Silent
	Vibrate
	No SD card
	Battery fully charged
	Battery is charging
	Data in
	Data out
	Data in and out
	USB to PC
	Download
	Upload
	GPS is acquiring
	GPS is on
	Service message
	Setting message

Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.

Creating your Google account

- 1 On the home screen, touch **Applications** tab  to open the applications menu.
- 2 Tap **Google Mail**, and tap **Next>Create** to start the Google Mail set up wizard then set it up.
- 3 Touch a text field to open the touch keyboard, and enter your name and username for your Google account. When you enter the text, you can move to the next text field by touching **Next** on the keyboard.
- 4 When you're finished to input name and username, tap **Next**. Your phone is communicating with Google servers and checking username availability.
- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait to see the server create your account.




Signing in your Google account


- 1 Enter your e-mail address and password, then tap **Sign in**. Wait for signing in.
- 2 After sign in, you can use Google Mail and take advantages of Google services on your phone.
- 3 Once you have set up your Google account on your phone, your phone will be automatically synchronised with your Google account on the web. (It depends on your synchronization settings.)

After sign in, you can use Google Mail, Google Calendar, and Google Map download applications from Market; back up your settings to Google servers; and take advantage of other Google services on your phone.


Calls

Making a call


- 1 Touch  to open the keypad.
- 2 Enter the number on the keypad. To delete a digit, touch the **Clear** icon .
- 3 Touch the **Call** icon  to make a call.
- 4 To end a call, touch **End**.


TIP! To enter “+” to make international calls, touch and hold down .

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call, then select the number to use if there is more than one for that contact.

Answering and rejecting a call

When your phone rings, press the **Send** key to answer. You can also drag the **Call** icon  to the right. Press the **End** key to reject an incoming call.

TIP! When the phone rings, touch and slide the silent icon  to the left if you want to switch to silent ringer mode.

Adjusting call volume

To adjust the volume during a call, use volume up & down key on the left side of the phone.

Call settings

You can configure phone call settings, such as call forwarding, call waiting, and other special features offered by your carrier.

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings**, and choose options that you want to adjust.

Fixed Dialling Numbers – Select Fixed Dialling Numbers to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Voicemail – Set up your voicemail number.

Call forwarding – You can configure how your calls are forwarded when you're on the phone, when you don't answer, and so on. Choose from **Always forward**, **Forward when busy**, **Forward when unanswered**, or **Forward when unreachable**. Then enter the number to forward to.

NOTE: Diverting calls will incur charges. Please contact your network operator for details.

Call barring – Select when you would like calls to be barred. Enter the call barring password.

Please check with your network operator about this service.

Call costs – View the charges applied to your calls. This service is network dependent; some operators do not support this function.

Call duration – View the duration of all calls including all, dialed, received calls and the last call.

Additional call settings – This lets you change the following settings:

Caller ID : Choose whether to display your number on an outgoing call.

Call Waiting : If call waiting is activated, the handset will notify you of an incoming call while you are on a call.

Select line : Allows to select line.

Contacts

You can add contacts on your phone and synchronise them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact

There are two ways to search for a contact:

On the Home screen

- 1 On the home screen, touch **Contacts** to open your contacts.
- 2 Touch **Search** and enter the contact name using the keypad.

TIP! To search by group, touch the **Contacts** tab at the top of the screen and select **Groups**. This will display a list of all your groups.

From the main menu

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Touch **Settings**, and select **Search**.

Adding a new contact

- 1 On the home screen, touch **Contacts** then touch **New contact**.
- 2 If you want to add a picture to the new contact, touch . You can use a saved picture or take a new one.
- 3 Touch a text field to open the touch keyboard, and enter a new contact's name.
- 4 Select the contact type by tapping **Phone** tab and choose from **Phone**, **SIM** and **Google**.
- 5 Touch a category of contact information and enter the details about your contact.
- 6 Touch **Done** to save the contact.

Messaging/E-mail

Messaging


Your GT540 combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Touch **Messaging** icon on the home screen, and touch **New message** to open a blank message.
- 2 Enter a mobile phone number in the **To** field. As you enter the phone number, matching contacts appear. You can touch a suggested recipient or continue entering the phone number. You can add multiple contacts.

NOTE: You will be charged for a text message for every person you send the message to.

- 3 Touch the message box below to start entering your message.
- 4 Touch the **Menu** key to open the options menu. Choose from **Add Subject, Attach, Send, Insert Smiley, Discard, All threads,** and **Add to Contacts.**
- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message after your name. Responses appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.


NOTE: When you get an SMS message during a call, there is no alert, but you will see it on the indicator bar.


Entering text

Keypad



Messaging/E-mail

 Touch to turn on T9 predictive text.

 Tap to change between the number, symbol, and text keypads.

Touch and hold  to view the **Editor Settings, Keypad types, Writing Language, Input Method, and User Dictionary.**

Use  to scroll through the different keyboards in each text entry mode (e.g., uppercase or lowercase letters).

To enter a space, touch .

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Abc mode

This mode allows you to enter letters by touching the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode

This mode allows you to enter numbers in a text message (a telephone number, for example) more quickly. Touch the keys

corresponding to the required digits before manually switching back to the appropriate text entry mode.

Setting up your email

Keep in touch while on the move by using your GT540 to send emails. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 On the home screen, touch **Applications** tab and tap **Email** to open your contacts. Or, you can also touch **Email** on the home screen to access directly.
- 2 If the email account is not set up, start the email setup wizard.

TIP! If an email account is already set up, the wizard is not activated automatically.

Note: Make sure that Automatic is selected in Date and Time setting for Push E-mail functionality.

Sending an email using your new account

- 1 Touch **Email** icon on the home screen, and then touch **Compose icon** to open a new blank message.
- 2 Enter the recipient's address, then write your message. You can also

attach images, videos, audio files, and various document file formats.

- 3 Touch **Send icon** to send your email.

TIP! During an active Wi-Fi connection, emails are sent and received using Wi-Fi.

Changing your email account's settings

You can change your email settings based on your own preferences.

- 1 Touch **Email icon** on the home screen, and tap the desired account.
- 2 Touch the **Menu** key to open the options menu, and tap **Settings**.
- 3 You can adjust the following options: **Account Setup, General Settings, Download Options,** and **Spam message**.

Changing your message settings

Your GT540 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging icon** on the home screen, then touch the **Menu** key. Tap **Settings**.

< SMS settings >

Delivery reports – Activate to receive confirmation that your messages have been delivered.

Manage SIM Card Messages – Manage the messages stored on your SIM card.

Validity period – Choose how long your messages are stored in the message center.

Text message center – Enter the details of your message center.

< MMS settings >

Delivery report – Choose to request a delivery report.

Read report – Choose to request a read report for each message you send.

Auto-retrieve – Activate to retrieve messages automatically.

Roaming auto-retrieve – Activate to retrieve messages while roaming.

Set priority – Choose the priority level of your MMS.

Validity period – Choose how long your message is stored in the message center.

Creation mode

Restricted: In this mode, the MMS Client device only creates and sends messages with content belonging to the Core MM Content Domain.

Messaging/E-mail

**WARNING!**

In this mode, the MMS Client device guides the user in creating and sending messages with content belonging to the Core MM Content Domain. This guidance is provided through warning dialogs.

Free: In this mode, the MMS Client allows the user to add any content to the message.

Receive advertisement –

Allows receiving advertisement messages.

< **Other settings** >

Service message – Choose whether to receive or block service messages.

Notification settings – Activate to display message notifications in the status bar. Also select a ringtone and activate vibrate to alert you of new messages.

Info. Service settings – Choose whether to receive, block, or view or edit channels to receive information service messages (cell broadcast messages). Also choose the languages of information service messages.

Social Networking

Social Networking

With your phone, you can enjoy the social networking and manage your micro-blog in on-line communities. You can update your current status and view your friends' status updates real-time.

You can add your Facebook, Twitter or Bebo accounts to your phone. If you don't have an account, you can visit their sites to set it up.

NOTE! An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Adding your account to your phone

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **SNS**.
- 3 Touch **Add account** to add a social networking account.
- 4 Select the kind of account to add.
- 5 Enter your e-mail address and password that you set up on your community, then tap **Log in**.
- 6 Wait for checking your account.
- 7 Check your community is turned **ON**. If you tap your community, you can see the current status of your social community.

TIP! If you add a social networking widget on your home screen, the widget will be show your status when your phone updates from the network. Without logging in to an application, get everyone's updates, posts and photos – all together, all the time, and always up to date.

You can also access the social community directly by touching up the widget.

Viewing and updating your status

- 1 Choose a community you want to access.
- 2 The community home will be appear. You can see the current status of your social community.
- 3 If you want to update your status, tap Status and write the current status, then touch Share.

Note: This is dependent on network services.

Removing accounts on your phone


- 1 In the list of SN (Social Networking) manager, touch **Menu** key and touch **Remove account**.
- 2 Choose and check a community you want to delete your account, then tap **Remove account**.
- 3 Tap **OK** to confirm.

Camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys.

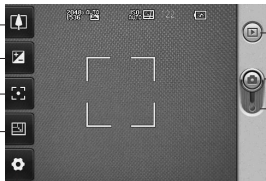

Gallery – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Taking a photo

Video mode – Slide down this icon to switch to video mode.

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Image size – Touch to set the size (in pixels) of the picture you take. Select a pixel value from the numerical options: 3M (2048x1536), 2M (1600x1200), 1M (1280x960), VGA (640x480), QVGA (320x240).

Focus – Touch this icon to select the options menu. See **Using the focus mode**.

Note: You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to save the picture you had taken.

TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Using the focus mode

You can select the focus mode as following options;

Auto Focus – Set the camera to focus automatically.

Macro – Macro mode allows you to take extreme close-ups. If you are trying to take a close-up shot but the focus box remains red, try turning the macro mode on.

Face tracking – If you set Face tracking and take a photo, your camera detects and focuses on human faces automatically.

After saving a photo in your Gallery, you can give a new nickname to someone in the photo by touching and holding the face. It will be placed on the People bar in your Gallery. You can also connect to Contacts to match the photo with the contact.

NOTE: Zoom is not supported in Face tracking mode.

Manual Focus(MF) – Set the camera to focus manually.

Taking a quick photo

- 1 Press and hold the camera key on the right side of the phone.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Press the capture button lightly, and a focus box will appear in the center of the viewfinder screen.
- 4 Position the phone so you can see the subject in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button and hold it down.

Once you've taken the photo

Your captured photo will appear on the screen.

Share Touch to share your photo as **Bluetooth, Email, Google Mail, Messaging, Picasa** or **SNS**.


NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Set as Touch to use the image as **Contact icon, Lock screen** or **Wallpaper**.


Camera


Rename Touch to edit the name of the selected picture.

Edit Touch to edit the image using various tools.

 Touch to view a gallery of your saved photos.

 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to return to the previous menu.

Using the advanced settings

In the viewfinder, touch  to open all advanced options.

You can change the camera setting by scrolling the wheel. After selecting the option, touch the Back key.

Image quality – Choose from **Super Fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

White balance – Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Shot mode – Choose from **Normal**, **Continuous shot**, **Beauty shot**, **Frame shot**, **Panorama shot**, **Art shot**, and **Smile shot**.

Timer – The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

ISO – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful under darker conditions when you cannot use the flash. Select from ISO values of **Auto**, **100**, **200**, and **400**.

Scene mode – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night**, and **Sunset**.

Color effect – Choose a colour tone for your new photo.

Once you've made your selection, use the Back key to close the colour tone menu. You are then ready to take a picture.

NOTE: You can change a colour picture to black and white or sepia, but you cannot change a black-and-white or sepia picture to colour.

Captured image – Choose from **On**, **Hold**, and **Off**. If you select On, after taken picture screen is shown for 1 second, and it goes to the preview right away.

Grid screen – Choose from **Off**, **2x2**, or **3x3**.

Shutter sound – Select one of the four shutter sounds.

GEO-Tagging – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE: This function is only available when GPS is active.

Hide icons – Choose the camera setting icons to hide manually or automatically.


Blink detection – Choose **On** to check the closed eyes at the after capture.

Reset – Restore all camera default settings.

TIP! When you exit the camera, all settings will return to their defaults, except image size and image quality. Any nondefault settings must be reset, such as colour tone and ISO. Check these before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

Viewing your saved photos


- 1 You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen.

Video camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the Video. Slide the brightness indicator along the bar, towards “-” for a lower brightness Video, or towards “+” for a higher brightness Video.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys. Before starting record a video, you can use the zoom function. You can not control the zoom function during recording.

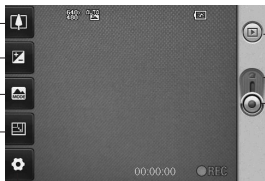

Gallery – This enables you to access your saved photos & Videos from within the video camera mode. Simply touch, and your gallery will appear on the screen.

Camera mode – Slide up this icon to switch to camera mode.



Start recording

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Video size – Touch to set the size (in pixels) of the video you record. Choose your video image size from VGA (640x480), QVGA (320x240) or QCIF (176x144).

Scene mode – Set the camera to adjust to the environment. Choose from **Auto, Portrait, Landscape, Sports, Sunset** and **Night**.

Shooting a quick video

- 1 Press and hold the camera key on the right side of the phone.
- 2 Then, switch to .
- 3 The video camera's viewfinder will appear on the screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 REC will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 7 Touch  on the screen to stop recording.

After shooting a video

A still image representing your video will appear on the screen.

Share Touch to share your video as **Bluetooth, Email, Google Mail, MMS** or **YouTube**.


NOTE: Additional charges may apply when MMS messages are downloaded while roaming.


Play Touch to play the video.


Rename Touch to edit the name of the selected video.

Edit Touch to use the video as wallpaper.

 Touch to access the media player and view the saved videos.

 Touch to delete the video you just made, and confirm by touching Yes. The viewfinder will reappear.

 Touch to shoot another video right away. Your current video will be saved.

 Touch to return to the previous menu.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

Adjust the video camera setting by scrolling the wheel. After selecting the option, touch the **Back** key.

Colour effect – Choose a colour tone to use for your new view.

White balance – The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent**, and **Cloudy**.

Duration – Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

Video camera

TIP! When choosing MMS duration, the Video quality will be set as QCIF and you can shoot longer videos.

Audio recording – Choose **Mute** to record a video without sound.


Hide icons – Select whether to hide the icons in the video camera menu automatically or manually.

Recorded video – Choose from **On**, **Hold**, and **Off**. If you select **On**, after recorded video screen is shown for 1 second, and it goes to the preview right away.

Reset – Reset all the video camera settings.

TIP! You can change a video shot in colour to black and white or sepia, but you cannot change a black-and-white or sepia video to colour.

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts to play automatically.

Your photos and videos

Editing your photos

You can do lots of great things to your photos to change them, add to them, or liven them up.

- 1 Open the photo you want to edit, then touch the **Menu** key.
- 2 Touch **Edit** to change your photo:



Rotate & Flip – Rotate or flip your photo for fun or a better view.



Crop – Crop your photo. Choose a square or circular crop area, then move your finger across the screen to select the area.



Tuning – This helps you adjust a picture using automatic colour, brightness, and so on.



Effect – Touch to apply the effect options to a photo.



Frame – Add frames to the photo.



Text – Add text to a picture.



Clipart – Add clipart to a photo.



Drawpad – Draw on your photo, freehand. Select the line thickness from the four options, then choose the colour you want.



Stamp – Decorate your photo with stamps. Choose from the different stamps, then touch your photo where you want to place them.



Resize – Resize your photo.



Save the changes you made to the photos.



Delete your photo edits.

Editing your videos

The video editing features are available for the MPEG-4 format.

Trimming the length of the video

- 1 Select **Edit**, then choose .
- 2 Touch . Then set the new start and end points. Touch **OK** and select **Next Icon**.
- 3 Touch to return to the gallery and discard the changes.



Selecting transition style

- 1 Select a transition style, then touch to preview it.
- 2 Touch 2 sec, then drag the bar to adjust the duration time


Your photos and videos

- 3 Touch **OK** to save the transition. Touch **Apply** to apply the currently selected transition. Choose **Apply To All** to apply the currently selected transition to all video files in the storyboard.

Adding subtitles



- 1 Open the video you want to edit.
- 2 Select **Edit**, then select  to add subtitles to the video.
- 3 Touch , then pause playback to set the start point for text appearance.
- 4 Touch **Start**, then choose the text style. Enter your text using the keypad, then select **Done**.
- 5 Touch the area of the screen where you want the text to appear, then touch **OK**.
- 6 Replace the existing file, or save as a new file.
- 7 Repeat these steps to add more text.

Adding edit effects




- 1 Open the video you want to edit.
- 2 Select **Edit**, then select .
- 3 Select an effect to add to the photo.

Grabbing a frame

Capture a picture from the video.

- 1 Open the video you want to edit.
- 2 Select **Edit**, then and select .
- 3 Play the video, then touch  to capture the screen you want while the video is playing.
- 4 The frame is saved to the phone as a still image file.

Adding dubbing to your video

- 1 Open the video you want to edit.
- 2 Select **Edit**, then choose .
- 3 Touch . The **My Sounds** folder will open. Choose the track you want to add to your video.
- 4 The original audio track on your video will be deleted.
- 5 If the audio is shorter than the video, choose whether to play it **Once** or to **Repeat** it.
- 6 Replace the existing file, or save as a new file.
- 7 Or you can record a new file and insert live dubbing by touching .
- 8 Touch **OK** to save the current dubbing.

Multimedia


You can store multimedia files to a memory card to have easy access to all your image and video files.

Touch **Applications** tab, then select **Gallery**. You can open a list of catalogue bars that store all your multimedia files.

NOTE: Make sure you install a memory card into the phone to save photos and access all your pictures. Without a memory card, the phone will not display any photos or videos.

There are seven catalogue bars as shown below.


All : Displays all your pictures and videos.

Favourite : If you touch and hold a photo or video, the option screen will appear allowing you to tag the photo as a favourite. This **Favourite** bar will show your favourite photos and videos.

Camera : Displays all your photos.

Image : Displays all your images.

Video : Displays all your videos.

Tag : Like the Favourite bar, you can tag photos. This bar displays your tagged photos and videos.

People : From camera, if you set **Focus > Face tracking** and take a photo, it will be placed on the **People**

bar. You can give a new nickname to someone in the photo. Or connect to **Contacts** to match the photo with the contact.

Media Player

The **Media Player** folder displays a list of videos you downloaded to or recorded on your phone.


Watching a video

- 1 Select **Media Player** on the Applications tab.
- 2 Touch **Video** and select a video to play.

TIP! The GT540 supports DivX video playback to ensure greater content availability.

Touch **Music** and select a music to play. You can play songs, categorise songs by **Album** and **Artist**, or create a **Playlist**.

Video editor

- 1 On the home screen, touch **Applications** tab and select **Video editor** .


Storyboard

- 1  **Set BGM** – Add background music to the storyboard, or change the sound.

Multimedia


- 2  **Import Files** – Add media files to the storyboard. You can add up to 32 media files.
- 3  **Clip Manager** – Manage the added media files. If no media files were added, the button is disabled.
- 4  **Preview** – Preview the video file you created.
- 5  **Save** – Save the video file you created.
- 6  **Add Text** – Add a text frame into storyboard.

You must touch  first to edit the video.

 – Touch to select all the files, but the maximum is 32 files.


 – Touch to deselect all the files.


25/32 – This shows the selected file number.

 Touch to go to the next step.


Music Movie

- 1 Flip left and right to check the various styles. For **Music Movie**, you can select only photos.

 – Return to the **Video editor** screen.

 – Display the style name and description.

 – Preview the style.




 – Touch to select photos.

- 2 After you select photos, touch  to proceed to the next step.
- 3 Touch  to select all the photos, then touch .
- 4 Select the music, then set it as the background music.
- 5 Add movie title using the keypad, then save it.
- 6 Touch  to play the complete video file.
- 7 Touch  to save the video file you created.

Auto cut

There are three style templates:

Portrait, Landscape, and Motion objects.

- 1 Touch , then select a video. Go to the next step.
- 2 Touch  to preview the video file.
- 3 Touch  to save the file.

Playing a game

- 1 You can download more games from Market.
- 2 To Launch tap on the a game or an application.

NOTE: Additional charges may apply when using this service to download games or applications that are not free.

NOTE: Java game and application installation are only possible through the Web.

Transferring files using USB mass storage devices

To transfer files using USB devices:

- 1 Connect the GT540 to a PC using a USB cable.
- 2 Choose **Settings > SD Card & Phone Storage > Activate Mass Storage Only**.
- 3 In the status bar, drag the USB icon.
- 4 Choose **USB Connected and Mount**.
- 5 You can view the mass storage contents on your PC and transfer the files.

NOTE: You need to install and SD card first. Without an SD card, you cannot use USB mass storage.

Music

Your GT540 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch Music. From here, you can access a number of folders:



Artists – Browse your music collection by artist.

Albums – Browse your music collection by album.

Songs – Contains all the songs you have on your phone.

Playlists – Contains the playlists you created.

Playing a song

- 1 On the home screen, touch **Applications** tab and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the first part of the song. Touch again  to go back to the previous song.

To change the volume while listening to music, press the up and down volume keys on the left side of the phone.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

Multimedia

Using the radio

Your GT540 has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning in.

You can store up to 48 channels on your phone.

To tune in automatically

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the **Menu** key.
- 3 Touch **Auto Scan**, then touch **Ok**. Assign the stations found to channel numbers by selecting **Set**, **Skip**, or **Stop**.

NOTE: You can also manually tune in to a station using the wheel displayed next to the radio frequency.

Listening to the radio

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the channel number of the station you want to listen to.

TIP! To improve radio reception, extend the headset cord, which functions as the radio antenna.

WARNING

If you connect a headset not specifically made for radio reception, radio reception may be poor.

Quickoffice

You can manage and view document files. The supported file types are PDF, DOC, TXT, XLS, and ZIP.

- 1 Choose Memory Card. You can see the files and folder list.
- 2 If you choose Recent Documents, files you recently viewed will be displayed.
- 3 Touch and hold any file, and the options Rename, Properties, and Delete will appear.
- 4 Choose a file, then touch the Menu key to view the Open, Register, Update, Properties, and About options. There are additional options, depending on the file type.
PDF: Go To Page, Fit Page, Fit Width
DOC/TXT: Search
XLS: Worksheet – Choose Summary View or Full View.

Google applications

- 1 First, set up a Google account. Enter your user name and password.
- 2 After signing in, your contacts, email, and calendar in your Google account will automatically synchronise with your GT540.

Tip! If you change your Google account after signing in, or you want to log out, please use the below step: **Applications > Settings > Applications > Manage applications > Google Apps > Clear data.**

Google Maps

Check your current location and traffic and receive directions to your destination. The GT540 must be connected to Wi-Fi or 3G/GPRS.

NOTE: Google Maps does not cover all cities and countries.

NOTE: While viewing **Street View** for a location, Touch the **Menu** key then touch **Compass Mode** to turn compass mode on.

Google Mail

Google Mail is configured when you first set up your phone. Depending on your synchronization settings, Google Mail on your phone is automatically synchronised with your Google account on the web. The inbox conversations list is your default Google Mail view.

Google Talk



Google Talk is Google's instant messaging program. It lets you communicate with other people who also use Google Talk.

SlideME Application Manager (SAM)

SAM allows you to download and purchase Android applications from the SlideME Market to your phone.

Discover Applications

You can discover applications in several ways:

Search: Press  from category view then . Enter a keyword to have SAM search the catalog of applications from SlideME and display the results.

Top Applications: Press  from category view then  to have SAM list the Top Applications.

Latest: Press  from category view then  to have SAM list the latest available applications in the SlideME catalog.

View Application Details

Once you view the application details screen, you will be able to see the in the top section, 'publishers name', 'date', 'rating', and 'category' the application belongs to.

When there is a camera button , you can press to playback a preview video of the application.

Compatibility: Some applications may not be compatible with your device. When visiting an application and selecting 'Compatibility' button, you will notice either that all checks passed in green text, or a warnings in red text. The 'Compatibility' button may disappear as you scroll down. Scroll back to the top to see button again. It is your decision if you wish to pursue downloading or you can check with website first and post the question under the application section to confirm with publisher. Refunds can be arranged by contacting SlideME support.

Download Free Applications



Select an application to download. Once download commences, slide down the top notification menu and click to install. Install will commence and once complete, click 'Done'.

Purchase Applications




You will require to visit <http://slideme.org> website to register a payment method first, before you can purchase any applications from within SAM. Login to SlideME.org website, click

on 'Billing & Payments', and 'Add a payment method'. If you added a credit/debit card, you will first need to verify your card. To purchase applications from within SAM, you will be prompted to login from within SAM when attempting to download a non-free application. Once download commences, slide down the top notification menu and click to install. Install will commence and once complete, click 'Done'.


SD Card

SAM provides a function to install applications that have been only stored on your SD card. Select  → 

Refresh Catalog

As a SAM user, you may require to refresh the catalog. Select  →  → 


Storage Locker

Storage Locker  allows you to view and re-download applications you have already purchased with status 'Completed' (as seen from web site) from SlideME.

Important: You will not be charged again for already purchased applications with status 'Completed' as seen from your web account.

Utilities

Setting your alarm

- 1 On the home screen, touch **Applications** tab and select **Alarm Clock**.
- 2 If you want to add a new alarm, touch **New Alarm**. There are preset alarms you can activate.
- 3 Touch to checkmark to turn on the alarm, and set the time you want the alarm to sound. After you set the time, the GT540 will let you know how much time is left before the alarm sounds.
- 4 Choose a ringtone, and turn on **Vibrate**, if you want. Set the repeat.
The icons indicate the weekday you select.
- 5 Choose **Label** to name the alarm.
- 6 When the alarm sounds, you can snooze it for 10 minutes or dismiss it.
- 7 Touch , then return to the first alarm screen.
- 8 Touch and hold the clock on the screen, and different types of clocks will be displayed. Choose one of them.
- 9 You can delete all the alarms by touching the **Menu** key and choose **Delete alarm**.

Using your calculator

- 1 On the home screen, touch **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x, or ÷), followed by =.
- 4 For more complex calculations, touch the **Menu** key, touch the **Advanced panel**, then choose **sin**, **cos**, **tan**, **log**, and so on.

Adding an event to your calendar



- 1 On the home screen, touch **Applications** tab and select **Calendar**.
- 2 First, you must create a Google account to use Calendar.
- 3 Select the date you want to add an event to.
- 4 Touch the **Menu** key, then touch **New event**.
- 5 Touch **What**, then enter the event name. Check the date and enter the time you want your event to begin. Enter the time and date the event finishes in the lower date and time boxes.

- 6 Also, touch **Where**, then enter the location.
- 7 If you would like to add a note to your event, touch **Description** and enter the details.
- 8 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 9 Touch **Done** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.

Voice recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 On the home screen, touch **Applications** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end recording.
- 4 Touch the **Menu** key and select **Set as** to set as the **Phone** ringtone.

NOTE: Touch **Go to list** to access your album. You can listen to the saved recording.

The Web







Accessing the Web

- 1 On the home screen, touch **Applications** tab and select **Browser**.
- 2 You will move to the website.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using the Web tool bar

Touch  to open the toolbar.

- 1 Touch  to refresh the web page.
- 2 Touch  to go forward one page.
- 3 Touch  to go backward one page.
- 4 Touch  to add bookmark.
- 5 Touch  to open another website in a new window.
- 6 Touch  to change the browser settings.

Changing Web browser settings

Touch the **Menu** key then select **More > Settings**.

You can change the page layout (e.g., text size, text encoding), change the home page, manage cache, cookie, and security settings, and so on.

Settings

On the home screen, touch **Applications** tab then scroll and touch **Settings**.

Wireless controls

Here, you can manage Wi-Fi and Bluetooth. Also, you can set mobile networks, airplane mode.

Wi-Fi – Touch to checkmark: Turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Set network notification, or add a Wi-Fi network.

Bluetooth – Touch to checkmark: Turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – Set device name & discoverable, scan for other devices.

Mobile network – Turn on mobile network.

Mobile network settings – Set options for roaming, network, and APNs.

Airplane mode – After setting Airplane mode, all wireless connections will be disabled.

Sound settings

Silent mode – Turn on to silence all sounds, except media & alarms.

Ringer volume – Set volume for incoming calls and other notifications.

Media volume – Set volume for music and videos.

Phone ringtone – Set default ringtone.

Phone vibrate – Set to vibrate for incoming calls.

Notification ringtone – Set default notification ringtone.

Audible touch tones – Set to sound when you use the keypad.

Audible selection – Set to sound when you make a screen selection.

Vibration feedback – Set to use vibration feedback.

SD Card notifications – Disable SD card notification sounds.

Display settings

Orientation – Set to switch orientation automatically when you rotate the phone.

Animation – Set to display an animation when you open or close windows.

Brightness – Adjust the brightness of the screen.

Screen timeout – Set the time for screen timeout.

Touch settings

Touch calibration – Reset your screen for ease of use.

Settings

Data synchronization

Select which applications are synchronised.

Security & location

My location

Checkmark to include your position when using

Google search and other Google services. When you check this option, you're asked whether you consent to allowing Google to use your location when providing these services.

Use wireless networks – If you check Use wireless networks, your phone will be determine your approximate location by using Wi-Fi and mobile networks.

Enable GPS Satellites – If you check Enable GPS satellites, your phone will be determine your location to street-level accuracy.

Share with Google – If you check Share with Google, your phone will be check your current location when you use Google search.

Screen unlock pattern – Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.

SIM card lock – Set up SIM card lock or change SIM PIN.

Passwords – Displays the password while you type.

Credential storage

To lock your screen by using the Pattern Lock

- 1 On the home screen, touch **Applications** tab and select **Settings**.
- 2 Touch **Security & location**, and select **Set unlock pattern**.
- 3 The first time you do this, a short tutorial about creating an unlock pattern appears.
- 4 You're prompted to draw and redraw your own pattern. The next time you turn on your phone or wake up the screen, you're prompted to draw your unlock pattern to unlock the screen.

Applications

You can manage applications and set up quick launch shortcuts.

Unknown Sources – Default setting to install non-Market applications.

Manage Applications – Manage and remove installed applications.

Development – Set options for application development, such as **USB Debugging**, **Stay Awake**, and **Allow Mock Locations**.

SD card & phone storage

SD Card – Check total space and available space. Touch **Unmount SD card** for safe removal. **Format the SD card**, if necessary.

Internal phone storage – Check the **Available space**. Choose **Factory Data Reset** if you want to delete all data from the phone.

Date and time

Set date, time, time zone, and formats.

Locale and text

Set local language and region, text input, and autocorrect options.

Search

You use the Search settings to configure Google search, Quick Search Box, and the data on the phone that you want to include in searches.

Accessibility

You use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

Speech synthesis

You use the Text-to-Speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

About phone

View legal information, and check phone status and software version.

DivX VOD registration

Generate a DivX VOD registration code.

Please visit <http://vod.divx.com/> for registration and technical support.

Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

NOTE: The GT540 supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

1. How to set up Wi-Fi

- 1 Touch **Wireless** controls on the **Settings** tab, then turn **Wi-Fi** on.
- 2 AP (Access Point) Search
 - Searches for which AP it can connect to.
- 3 AP Connect
 - Connects to the desired AP from the AP search list.
 - If the AP is security type WEP or WPA/WPA2-PSK, enter the security key.

2. Wi-Fi network profile support

- 1 Wi-Fi profile support (how to connect to a frequently used AP or hidden AP)
 - 1) If the AP does not appear in the search list, you can connect to it by saving it as a profile.
 - 2) Saving a frequently used AP as a profile makes it easier to enter the security key when connecting to an AP with that security type.
 - 3) If the AP does not support DHCP, you can connect to the AP using a static IP address.
- 2 Description of each field in the Wi-Fi profile.
 - 1) Network Name: SSID (ID)
 - 2) Security Type: WEP and WPA/WPA2-PSK support.
 - 3) Security Key: Saves the security key.
 - 4) IP/DNS Setting: This allows you to set to Automatic or Static, depending on whether the AP supports DHCP. For Static, enter the field value of the IP address and DNS server to use with the static IP address when connecting.

3 How to save the Wi-Fi profile

- 1) Select the Add Wi-Fi Network menu at the bottom of Wi-Fi Networks, then enter the SSID and Security Type.
- 2) After connecting to an AP with this security type, the profile will be saved automatically.

3. How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your GT540 into the router.

You can find the MAC address in the following user interface:

Settings > Wireless controls > Wi-Fi settings > Menu > Advanced > MAC Address

Software update

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country → Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service center.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

DivX Mobile

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

DivX Certified to play DivX® video up to 320 x 240

Accessories

There are a variety of accessories available for your mobile phone, which may be sold separately. Select these options according to your personal communication needs. Consult your local dealer for availability. (Items described below may be optional.)

Charger



Data cable

Connect your GT540 and PC.



Battery



User Guide

Learn more about your GT540.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GT540

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Seung Hyoun, Ji / Director

Issued Date

16.Mar. 2010

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible causes	Possible solutions
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection	Signal weak. Outside GSM network area.	Move closer to a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you must confirm the new code by entering it again.	Contact your service provider.
Function cannot be set	Not supported by service provider, or registration required.	Contact your service provider.
Calls not available	Dialling error New SIM card inserted, charge limit reached	New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN 2.

Troubleshooting

Message	Possible causes	Possible solutions
Phone cannot be turned on.	On/Off key not pressed long enough.	Press the On/Off key for at least two seconds.
	Battery empty.	Keep charger attached for a longer time.
	Battery contacts dirty.	Clean the contacts.
Charging error	Battery totally empty.	Charge battery.
	Temperature out of range.	Make sure the ambient temperature is right, wait a few moments, then charge again.
	Contact problem.	Check the power supply and connection to the phone. Check the battery contacts, and clean them if necessary.
	No outlet voltage.	Plug in to a different outlet, or check the voltage.
	Charger defective.	If the charger does not warm up, replace it.
	Wrong charger.	Only use original LG accessories.
Phone loses network	Battery defective.	Replace battery.
	Signal too weak.	Reconnection to another service provider is automatic.
Number not permitted	The Fixed Dial Number function is on.	Check settings.

استكشاف الأخطاء وإصلاحها

الرسالة	الأسباب المحتملة	حلول ممكنة
يتعذر تشغيل الهاتف.	لم يتم الضغط على مفتاح التشغيل/ إيقاف التشغيل بما يكفي. البطارية فارغة. ملامسات البطارية متسخة.	اضغط على مفتاح التشغيل/ إيقاف التشغيل لثانيتين على الأقل. اترك الشاحن متصلاً لفترة أطول. قم بتنظيف ملامسات البطارية.
خطأ في الشحن	البطارية فارغة بالكامل. درجة الحرارة خارج النطاق. مشكلة في الاتصال. لا فولتية للمأخذ الكهربائي. خلل في الشاحن. الشاحن غير مناسب. خلل في البطارية.	اشحن البطارية. تأكد من أن درجة الحرارة المحيطة جيدة وانتظر قليلاً ثم حاول الشحن مرة أخرى. تحقق من وحدة التزويد بالطاقة والاتصال بالهاتف. دقق في ملامسات البطارية. و قم بتنظيفها إذا اقتضى الأمر. قم بالتوصيل بمقبس آخر أو دقق في الفولتية. إذا لم يسخن الشاحن. فقم باستبداله. استخدم ملحقات LG الأصلية فقط. استبدل البطارية.
الهاتف ينقطع عن الشبكة	الإشارة ضعيفة جداً.	إعادة الاتصال بموفر خدمة آخر تتم تلقائياً.
الرقم غير مسموح به	وظيفة رقم الاتصال المحدد قيد التشغيل.	تحقق من الإعدادات.

استكشاف الأخطاء وإصلاحها

يسرد هذا الفصل بعض المشاكل التي قد تصادفها أثناء استخدام الهاتف. بعض المشاكل تتطلب منك الاتصال بموفر الخدمة. ولكن معظم المشاكل تكون سهلةً ويمكنك تصحيحها بنفسك.

الرسالة	الأسباب المحتملة	حلول ممكنة
خطأ SIM	لا يوجد بطاقة SIM في الهاتف أو ربما قمت بإدخالها بشكل غير صحيح.	تأكد من إدخال بطاقة SIM بالطريقة الصحيحة.
لا يوجد اتصال بالشبكة	الإشارة ضعيفة. خارج شبكة GSM.	توجه قرب النافذة أو إلى منطقة مكشوفة. تحقق من خريطة التغطية التي يزودك بها موفر الخدمة.
الرموز غير مطابقة	لتغيير رمز الحماية. عليك تأكيد الرمز الجديد وذلك بإدخاله مرة أخرى.	اتصل بموفر الخدمة لديك.
يتعدّر ضبط الوظيفة	غير معتمد من قبل موفر الخدمة أو التسجيل مطلوب.	اتصل بموفر الخدمة لديك.
المكالمات غير متوفرة	خطأ في الطلب تم إدراج بطاقة SIM جديدة. تم بلوغ الحد الخاص برسوم المكالمات	شبكة جديدة غير مصرّح لها. تحقق من القيود الجديدة. اتصل بموفر الخدمة أو أعد تعيين الحد بواسطة PIN 2.

درجات الحرارة المحيطة
الحد الأقصى: +55 درجة مئوية (تفريغ). +45 درجة مئوية (شحن)
الحد الأدنى: -10 درجات مئوية

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GT540

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

16.Mar. 2010

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

الملحقات

تتوفر مجموعة متنوعة من الملحقات التي تناسب هاتفك المحمول. ويمكن شراؤها بشكل منفصل. قم بتحديد هذه الخيارات وفقاً لمتطلبات اتصالاتك الشخصية. استشر البائع المحلي للتحقق من إمكانية التوفر. (قد تكون العناصر المذكورة أدناه اختيارية.)



كبل البيانات
قم بتوصيل
الجهاز GT540
والكمبيوتر.



الشاحن



دليل المستخدم
اعرف المزيد حول
GT540.



البطارية



**سماعة
رأس
استيريو**

ملاحظة:

- استخدم ملحقات LG الأصلية دائماً.
- يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة إلى أخرى.

تحديث البرنامج

تحديث برنامج الهاتف

تحديث برنامج الهاتف المحمول LG من إنترنت

لمزيد من المعلومات حول استخدام هذه الوظيفة، تفضل بزيارة <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → حدد الدولة → الدعم.

تسمح لك هذه الميزة بتحديث برنامج الهاتف الثابت لأحدث إصدار بسهولة من إنترنت من دون الحاجة إلى زيارة مركز الخدمة.

بما أن تحديث برنامج الهاتف المحمول الثابت يتطلب انتباه المستخدم الكامل لمدة عملية التحديث، يرجى التحقق من كل التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. تجدر الملاحظة إلى أن إزالة كبل بيانات USB أو البطارية أثناء الترقية قد يتسبب بإلحاق ضرر بالغ بهاتفك المحمول.



DivX Mobile

حول فيديو DivX®: عبارة عن تهيئة فيديو رقمية أنشأتها شركة DivX, Inc. هذا جهاز رسمي من DivX مسموح به وهو يشغل فيديو DivX. يرجى زيارة الموقع www.divx.com للحصول على مزيد من المعلومات وعلى أدوات البرامج لتحويل ملفاتك إلى ملفات فيديو بتنسيق DivX.

حول DivX فيديو عند الطلب: يجب تسجيل جهاز DivX® المسموح به هذا مع DivX ليتمكن من تشغيل محتويات DivX فيديو عند الطلب (VOD). لإنشاء

رمز التسجيل. حدّد موقع قسم DivX VOD في قائمة إعداد الجهاز. اذهب إلى موقع vod.divx.com بواسطة هذا الرمز لإكمال عملية التسجيل ومعرفة المزيد حول VOD DivX.

إن DivX معتمد لتشغيل فيديو DivX® بحجم 240 × 320.

3 كيفية حفظ وضع Wi-Fi

- (1) حدد القائمة إضافة شبكة Wi-Fi أسفل شبكات Wi-Fi، ثم أدخل SSID ونوع الحماية.
- (2) بعد التوصيل إلى نقطة الوصول مع نوع الحماية هذا، سيتم حفظ ملف التعريف تلقائيًا.

3. كيف تحصل على عنوان MAC

لإعداد اتصال في بعض الشبكات اللاسلكية المزودة بعوامل تصفية MAC، فقد يتوجب عليك إدخال عنوان MAC للهاتف GT540 إلى جهاز التوجيه. يمكنك الحصول على عنوان MAC في واجهة المستخدم التالية:

الإعدادات < عناصر التحكم اللاسلكية
< إعدادات Wi-Fi < القائمة < متقدم <
عنوان MAC

2. دعم وضع شبكة Wi-Fi

- 1 دعم وضع Wi-Fi (كيفية الاتصال بنقطة وصول AP شائعة الاستخدام أو نقطة وصول AP مخفية)
 - (1) إذا لم تظهر نقطة الوصول في قائمة البحث، فيمكنك توصيلها عبر حفظها كوضع.

(2) يؤدي حفظ نقطة وصول AP

شائعة الاستخدام كوضع إلى تسهيل إدخال مفتاح الحماية عند الاتصال بنقطة وصول AP من نوع الحماية هذا.

- (3) إذا لم تكن نقطة الوصول تعتمد DHCP، يمكنك الاتصال بنقطة الوصول مستخدماً عنوان IP ثابت.

2 وصف كل حقل في وضع Wi-Fi.

- (1) اسم الشبكة: SSID (معرّف)
- (2) نوع إعدادات الحماية: دعم WEP و WPA/WPA2-PSK.

(3) مفتاح الحماية: يحفظ مفتاح الحماية.

- (4) إعداد IP/DNS: يُمكنك هذا من ضبط الهاتف إلى "تلقائي" أو "ثابت". بناءً على ما إذا كان AP يدعم DHCP. بالنسبة إلى ثابت، أدخل قيمة حقل عنوان IP وخادم DNS للاستخدام مع عنوان IP ثابت عند الاتصال.

يسمح لك مدير التشغيل اللاسلكي بإدارة اتصالات إنترنت لـ Wi-Fi الخاص بهاتفك (شبكة LAN لاسلكية). يتيح للهاتف الاتصال بالشبكات اللاسلكية المحلية، أو الوصول إلى إنترنت لاسلكياً. Wi-Fi أسرع وذات نطاق أوسع من تقنية بلوتوث اللاسلكية، وهو يوفر إرسال البريد الإلكتروني واستعراض الإنترنت بشكل سريع.

ملاحظة: يدعم GT540 حماية WEP و WPA/WPA2-PSK. إذا قام موفر خدمة Wi-Fi أو مسؤول الشبكة بتعيين التشفير لحماية الشبكة، فعليك ملئ المفتاح في الإطار المنبثق. إذا لم يتم تعيين التشفير، فلن يظهر الإطار المنبثق هذا. يمكنك الحصول على المفتاح من موفر خدمة Wi-Fi لديك أو من مسؤول الشبكة.

1. كيفية إعداد Wi-Fi

1 المس عناصر التحكم اللاسلكية في علامة تبويب الإعدادات، ثم قم بتشغيل Wi-Fi.

2 البحث عن نقطة وصول (AP)

– يبحث عن نقطة وصول AP التي يمكنه الاتصال بها.

3 اتصال AP

- الاتصال بنقطة الوصول المطلوبة من قائمة البحث عن نقطة وصول.
- إذا كانت نقطة وصول AP هي من نوع الحماية WEP أو WPA/WPA2-PSK، أدخل مفتاح الحماية.

بطاقة SD وتخزين الهاتف

بطاقة SD – التحقق من إجمالي المساحة والمساحة المتوفرة. المس عدم تركيب بطاقة SD لإزالتها بشكل آمن. تنسيق بطاقة SD إذا دعت الحاجة.

تخزين الهاتف الداخلي – التحقق من المساحة المتوفرة. اختر إعادة تعيين بيانات المصنع إذا أردت حذف كل البيانات من الهاتف.

التاريخ والوقت

تعيين التاريخ والوقت والمنطقة الزمنية والتنسيقات.

الموقع والنص

تعيين اللغة المحلية والمنطقة. وإدخال النص. وخيارات التصحيح التلقائي.

بحث

تستخدم إعدادات البحث لتكوين بحث Google. وصندوق البحث السريع. وبيانات الهاتف التي تريد تضمينها في الأبحاث.

إمكانية الوصول

تستخدم إعدادات إمكانية الوصول لتكوين أي وظائف إضافية خاصة بإمكانية الوصول قمت تثبيتها على هاتفك.

تركيب الكلام

تستخدم إعدادات النص إلى الكلام لتكوين جهاز تركيب النص إلى الكلام Android. للتطبيقات التي يمكنها الاستفادة منها.

حول الهاتف

قم بعرض المعلومات القانونية وتحقق من حالة الهاتف وإصدار البرنامج.

تسجيل DivX VOD

إنشاء رمز تسجيل DivX VOD. قم بزيارة <http://vod.divx.com> للتسجيل والحصول على الدعم الفني.

الحماية والموقع

موقعي - ضع علامة اختيار لشمّل موقعك عند استخدام

بحث Google وخدمات Google الأخرى. عندما تضع علامة على هذا الخيار، يتم سؤالك إذا كنت توافق على السماح لـ Google باستخدام موقعك عند توفير هذه الخدمات.

استخدام الشبكات اللاسلكية - إذا قمت بوضع علامة على استخدام الشبكات اللاسلكية، سيحدد الهاتف موقعك التقريبي باستخدام شبكة Wi-Fi وشبكة الهواتف المحمولة.

تمكين أرقام GPS الاصطناعية - إذا قمت بوضع علامة على تمكين أرقام GPS الاصطناعية، سيحدد الهاتف موقعك بدقة تصل إلى مستوى الشارع.

المشاركة مع Google - إذا قمت بوضع علامة على المشاركة مع Google، سيتحقق الهاتف من موقعك الحالي عندما تستخدم بحث Google.

وضع إلغاء قفل الشاشة - تعيين وضع إلغاء القفل لتأمين الهاتف. يؤدي إلى فتح شاشات ترشدك أثناء رسم وضع إلغاء قفل الشاشة.

إفقال بطاقة SIM - إعداد إفقال بطاقة SIM أو تغيير رمز PIN الخاص ببطاقة SIM.

كلمات المرور - عرض كلمة المرور أثناء الكتابة.

مخزن بيانات الاعتماد

لتأمين شاشتك باستخدام وضع القفل

1 على الشاشة الرئيسية، المس علامة تبويب التطبيقات وحدد الإعدادات.

2 المس الحماية والموقع. وحدد تعيين وضع إلغاء القفل.

3 في المرة الأولى التي تقوم بذلك، سيتم عرض برنامج تعليمي قصير حول إنشاء وضع إلغاء القفل.

4 ستتم مطالبتك برسم نمطك الخاص وإعادة رسمه.

في المرة التالية التي تقوم فيها بتشغيل هاتفك أو تنشيط الشاشة،

ستتم مطالبتك برسم وضع إلغاء القفل الخاص بك لإلغاء قفل الشاشة.

تطبيقات

يمكنك إدارة التطبيقات وإعداد اختصارات التشغيل السريع.

مصادر غير معروفة - الضبط الافتراضي لتثبيت التطبيقات من خارج المتجر.

إدارة التطبيقات -

إدارة التطبيقات المثبتة وإزالتها.

التطوير - تعيين الخيارات لتطوير

التطبيقات، مثل تصحيح USB، و الإفقاء

على النشاط، و السماح بالمواقع الوهمية.

الإعدادات

مستوى صوت الوسائط - تعيين مستوى الصوت للموسيقى وملفات الفيديو.

نغمة رنين الهاتف - تعيين نغمة الرنين الافتراضية.

اهتزاز الهاتف - تعيين للاهتزاز للمكالمات الواردة.

نغمة رنين للإعلام - تعيين نغمة رنين الإعلام الافتراضية.

نغمات لمس مسموعة - تعيين لإصدار صوت عند استخدام لوحة المفاتيح.

تحديد مسموع - تعيين لإصدار صوت عندما تجري تحديداً على الشاشة.

تعليق الاهتزاز - تعيين لاستخدام تعليق الاهتزاز.

إشعارات بطاقة SD - تعطيل أصوات إشعارات بطاقة SD.

إعدادات الشاشة

اتجاه - تعيين لتبديل الاتجاه تلقائياً عند تدوير الهاتف.

حركة - تعيين لعرض حركة عندما تفتح نوافذ أو تقوم بإغلاقها.

السطوع - ضبط سطوع الشاشة.

مهلة الشاشة - تعيين الوقت لمهلة الشاشة.

إعدادات اللمس

معايرة اللمس - إعادة تعيين شاشتك لتسهيل استخدامها.

مزامنة البيانات

تحديد التطبيقات المتزامنة.

على الشاشة الرئيسية. المس علامة تويوب التطبيقات ثم قم بالتمرير والمس الإعدادات.

عناصر التحكم اللاسلكية

تستطيع هنا إدارة Wi-Fi و بلوتوث. كما تستطيع تعيين شبكات الهاتف المحمول. وضع الرحلات الجوية.

Wi-Fi - المس لوضع علامة اختيار: يقوم بتشغيل Wi-Fi للاتصال بشبكات Wi-Fi المتوفرة.

إعدادات Wi-Fi - تقوم بتعيين إعلام الشبكة، أو بإضافة شبكة Wi-Fi.

بلوتوث - المس لوضع علامة اختيار: يقوم بتشغيل بلوتوث للاتصال بأجهزة بلوتوث.

إعدادات بلوتوث - تقوم بتعيين اسم الجهاز وتجعله قابلاً للكشف. وتحقق من الأجهزة الأخرى.

شبكة الهواتف المحمولة - تقوم بتشغيل شبكة الهواتف المحمولة.

إعدادات شبكة الهواتف المحمولة - تقوم بتعيين الخيارات للتجوال، والشبكة، ونقطة الوصول.

وضع الرحلات الجوية - بعد ضبط وضع الرحلات الجوية، سيتم تعطيل كل الاتصالات اللاسلكية.

إعدادات الصوت

الوضع الصامت - إيقاف تشغيل كل الأصوات، باستثناء الوسائط والمنبهات.

مستوى صوت الرنين - تعيين مستوى الصوت للمكالمات الواردة والإعلامات الأخرى.

للتصفح

المتصفح

- 1 على الشاشة الرئيسية، المس علامة تبويب التطبيقات وحدد المتصفح.
- 2 سنتقل إلى موقع ويب.
ملاحظة: يتم فرض رسوم إضافية عند الاتصال بهذه الخدمات وتنزيل المحتوى. اتصل بموفر الشبكة للتحقق من رسوم البيانات.

استخدام شريط أداة ويب

- المس** ◀ لفتح شريط الأدوات.
- 1 المس ↻ لتحديث صفحة ويب.
 - 2 المس ▷ للتقدم صفحة واحدة.
 - 3 المس ◀ للتراجع صفحة واحدة.
 - 4 المس + لإضافة إشارة مرجعية.
 - 5 المس 📄 لفتح موقع ويب آخر في إطار جديد.
 - 6 المس ⚙ لتغيير إعدادات تبويب.

تغيير إعدادات مستعرض ويب

المس مفتاح القائمة ثم حدد المزيد < الإعدادات.

يمكنك تغيير تخطيط الصفحة (مثل حجم النص، وترميز النص). وتغيير الصفحة الرئيسية، وإدارة ذاكرة التخزين المؤقت، وملفات تعريف الارتباط، إعدادات الحماية، إلخ.

3 المس باستمرار أي ملف. فيعرض لك الخيارات إعادة التسمية، وخصائص وحذف.

4 اختر ملفاً واضغط على مفتاح القائمة لفتح الخيارات فتح. وتسجيل. وتحديث. وخصائص. وحول. وفق نوع الملف. هناك خيارات إضافية.

انتقال إلى الصفحة، احتواء: pdf

الصفحة، احتواء العرض

بحث: doc/txt

ورقة عمل - اختر من ضمن: xls

عرض ملخص وطريقة العرض الكاملة.

9 المس **حفظ** لحفظ الحدث في التقويم. سيقوم مربع ملون في التقويم بتحديد كل الأيام التي تم حفظ أحداث فيها. سيبدأ منبه بالرنين عند حلول وقت بدء الحدث لمساعدتك على البقاء منظماً.


مسجل الصوت

استخدم مسجل الصوت لتسجيل مذكرات صوتية أو ملفات صوتية أخرى.

تسجيل ملف صوتي أو صوت

1 على الشاشة الرئيسية، المس علامة تبويب **التطبيقات** وحدد **مسجل الصوت**.

2 المس  لبدء التسجيل.

3 المس  لإنهاء التسجيل.

4 المس مفتاح **القائمة** وحدد **تعيين كـ** لتعيينه كنغمة رنين **الهاتف**.

ملاحظة: المس **انتقل إلى القائمة** للوصول إلى ألبومك. يمكنك الاستماع إلى التسجيل الذي تم حفظه.

Quickoffice

يمكنك إدارة ملفات المستندات واستعراضها.


و doc و txt و pdf الملفات المتوفرة هي xls و zip.

1 اختر بطاقة الذاكرة. يمكنك رؤية قائمة الملفات والحافظات.

2 إذا اخترت المستندات الحديثة، فستعرض لك الملفات التي قمت بعرضها مؤخراً.

أدوات مساعدة

ضبط المنبه

- 1 على الشاشة الرئيسية، المس علامة تبويب **التطبيقات** وحدد **منبه جديد**.
- 2 إذا أردت إضافة منبه جديد، المس **إضافة منبه**. تتوفر منبهات مضبوطة مسبقاً يمكنك تنشيطها.
- 3 المس لتشغيل المنبه. وقم بتعيين الوقت الذي تريد فيه أن يبدأ المنبه بالرنين. بعد تعيين الوقت، سيسمح لك GT540 بمعرفة الوقت المتبقي قبل أن يبدأ المنبه بالرنين.
- 4 اختر نغمة رنين، وقم بتشغيل **الامتزاز** إذا أردت. قم بإعداد التكرار. تشير الرموز إلى يوم الأسبوع الذي اخترته.
- 5 اختر **تسمية** لتسمية المنبه.
- 6 عندما يبدأ المنبه بالرنين، يمكنك تأجيله لعشر دقائق أو رفضه.
- 7 المس . ثم عد إلى شاشة المنبه الأول.
- 8 المس باستمرار الساعة على الشاشة. وسيتم عرض أنواع مختلفة من الساعات. اختر واحدة منها.
- 9 يمكنك حذف كل المنبهات من خلال لمس مفتاح **القائمة** واختيار **حذف المنبه**.

استخدام الحاسبة

- 1 على الشاشة الرئيسية، المس علامة تبويب **التطبيقات** وحدد **الحاسبة**.
- 2 المس مفاتيح الأرقام لإدخال الأرقام.
- 3 بالنسبة إلى الحسابات البسيطة، المس الوظيفة التي تريدها (+، -، أو *، /) يليها =.
- 4 بالنسبة إلى الحسابات الأكثر تعقيداً، المس مفتاح **القائمة**، والمس لوحة **الخيارات المتقدمة**. ثم اختر **جيب الزاوية** و**جيب تمام** و**ظل الزاوية** و**اللوغارتم**، وغيرها.

إضافة حدث إلى التقويم

- 1 على الشاشة الرئيسية، المس علامة تبويب **التطبيقات** وحدد **التقويم**.
- 2 عليك أولاً إنشاء حساب Google لاستخدام التقويم.
- 3 حدد التاريخ الذي تريد إضافة حدث إليه.
- 4 المس مفتاح **القائمة**، ثم المس **حدث جديد**.
- 5 المس **ما هو**، ثم أدخل اسم الحدث. تحقق من التاريخ وأدخل الوقت الذي تريد أن يبدأ عنده الحدث. أدخل وقت انتهاء الحدث وتاريخه في المربعين السفليين للتاريخ والوقت.
- 6 المس أيضاً **أين**، ثم أدخل الموقع.
- 7 إذا أردت إضافة ملاحظة إلى حدثك، المس **الوصف** وأدخل التفاصيل.
- 8 إذا أردت تكرار المنبه، قم بتعيين **التكرار** و **التذكيرات** إذا دعت الحاجة.

بطاقة SD

يوفر SAM وظيفة لتثبيت التطبيقات التي تم تخزينها فقط على بطاقة الذاكرة الرقمية المؤمنة SD. اختر قائمة 'بطاقة SD'.

تحديث قائمة التطبيقات

كمستخدم SAM، قد تحتاج إلى تحديث قائمة التطبيقات. اختر قائمة 'مساعدة' < قائمة > تحديث القائمة.

خزانة التخزين

تسمح لك خزانة التخزين بعرض و إعادة تحميل تطبيقات قد إشتريتها بالفعل بشرط أن تكون مكتملة التنزيل (كما يرى في الموقع) من خلال SlideME.

هام: لن يتم مطالبتك بإعادة دفع رسوم تطبيق قد إشتريته مسبقا إذا كان وضع التنزيل 'مكتمل' (كما يرى من حسابك على شبكة الإنترنت).

مدير التطبيقات (SAM)SlideME

كنت ترغب في مواصلة تحميله أو التحقق من الموقع أولاً وقم بتعيين السؤال في الجزء الخاص بالتطبيق للتصديق مع الناشر. يمكن تنسيق المستندات بالإنصال بمساعدة SlideME.

تحميل تطبيقات مجانية

قم بتحديد تطبيق لتحميله. بمجرد بدء التحميل، قم بتمرير قائمة الإشعارات العلوية لأسفل وانقر للتثبيت. سوف يبدأ التثبيت و بمجرد إكتماله، انقر 'تم'.

شراء تطبيقات

سوف نحتاج لزيارة الموقع الإلكتروني <http://slideme.org> لتسجيل طريقة الدفع أولاً. قبل أن تتمكن من شراء أية تطبيقات من خلال SAM.

قم بالدخول على الموقع الإلكتروني slideme.org، انقر على 'الفواتير و المدفوعات' ثم 'إضافة أسلوب الدفع'. إذا قمت بإضافة بطاقة إئتمان/مدين، سوف نحتاج التحقق من بطاقتك أولاً. لشراء تطبيقات من خلال SAM، ستتم مطالبتك بتسجيل الدخول عبر SAM عند محاولة تنزيل تطبيق غير مجاني. بمجرد بدء التحميل، قم بتمرير قائمة الإشعارات العلوية لأسفل وانقر للتثبيت. سوف يبدأ التثبيت و بمجرد إكتماله، انقر 'تم'.

يسمح لك SAM بتحميل و شراء تطبيقات Android من سوق SlideME إلى هاتفك.

إكتشاف التطبيقات

يمكنك إكتشاف التطبيقات بعدة طرق:

البحث: اضغط 'بحث' من فئة العرض. أدخل كلمة البحث الرئيسية لبحث قائمة تطبيقات SAM من SlideME وعرض النتائج.

صفوة التطبيقات: اضغط 'قائمة' من فئة العرض. ثم 'صفوة التطبيقات' للحصول على قائمة SAM لصفوة التطبيقات.

الأحدث: اضغط 'قائمة' من فئة العرض. ثم 'الأحدث' للحصول على قائمة SAM لأحدث التطبيقات المتوفرة في قائمة SlideME.

عرض تفاصيل التطبيق

بمجرد عرض شاشة تفاصيل التطبيق، سوف تتمكن من رؤية 'أسماء الناشرين'، 'التاريخ'، 'التصنيف' و 'الفئة' التي ينتمي إليها التطبيق في الجزء العلوي من الشاشة.

عندما يكون هناك زر الكاميرا يمكنك الضغط عليه لعرض فيديو معانية للتطبيق.

التوافق: قد تكون بعض التطبيقات غير متوافقة مع الجهاز. عند زيارة تطبيق واختيار زر 'التوافق'، ستلاحظ إما أن جميع الفحوصات الصادرة في نص أخضر، أو تحذيرات في نص أحمر. قد يختفي زر 'التوافق' إذا إنتقلت لأسفل. انتقل إلى أعلى لرؤية الزر مرة أخرى. هذا قرارك إذا

تطبيقات Google

Google Mail

يتم تكوين Google Mail عندما تقوم بإعداد هاتفك. وفقاً لإعدادات المزامنة. يتم مزامنة Google Mail على هاتفك تلقائياً مع حساب Google الخاص بك على المتصفح. وتكون قائمة محادثات صندوق الوارد هي عرض Google Mail الافتراضي.

Google Talk

Google Talk هو برنامج الرسائل الفورية من Google. يسمح لك بالاتصال بأشخاص آخرين يستخدمون أيضاً Google Talk.

- 1 قم أولاً بإعداد حساب Google. أدخل اسم المستخدم وكلمة المرور.
- 2 بعد تسجيل الدخول. سيتم مزامنة الأسماء. والبريد الإلكتروني. والتقويم في حساب Google الخاص بك تلقائياً مع GT540.

تلميح! إذا قمت بتغيير حساب Google الخاص بك بعد تسجيل الدخول. أو إذا أردت تسجيل الخروج. يرجى اتباع الخطوة أدناه:
التطبيقات > الإعدادات > التطبيقات > إدارة التطبيقات > تطبيقات Google > مسح البيانات.

خرائط Google

تحقق من موقعك الحالي وحركة المرور واحصل على التوجيهات للوصول إلى وجهتك. يجب أن يتم توصيل GT540 بـ Wi-Fi أو 3G/GPRS.

ملاحظة: لا تغطي خرائط Google كل المدن والبلدان.

ملاحظة: أثناء عرض الشارع بحثاً عن موقع. المس مفتاح القائمة ثم المس وضع البوصلة لتشغيل وضع البوصلة.

البحث عن محطات

يمكنك ضبط محطات الراديو وذلك بالبحث عنها يدوياً أو تلقائياً. وسيتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن تعود بحاجة إلى إعادة ضبطها. ويمكنك حفظ ما يصل إلى 48 قناة في هاتفك.

للضبط تلقائياً

1 على الشاشة الرئيسية، المس علامة تبويب **التطبيقات** وحدد **راديو FM**.

2 المس مفتاح القائمة.

3 المس **تفحص تلقائياً**، ثم **نعم**. قم بتعيين أرقام قناة للمحطات التي يتم العثور عليها من خلال تحديد **تعيين** **تخطي**، أو **إيقاف**.

ملاحظة: يمكنك أيضاً ضبط محطة يدوياً باستخدام العجلة المعروضة إلى جانب تردد الراديو.

الاستماع إلى الراديو

1 على الشاشة الرئيسية، المس علامة تبويب **التطبيقات** وحدد **راديو FM**.

2 حدد رقم القناة للمحطة التي تريد الاستماع إليها.

تلميح! لتحسين استقبال الراديو، قم بتمديد سلك سماعة الرأس الذي يعمل كهوائي الراديو.



إذا قمت بتوصيل مجموعة رأس لم تصنع خصيصاً من أجل استقبال الراديو، فقد يكون استقبال الراديو ضعيفاً.

نقل ملفات عبر أجهزة USB ذات التخزين الكبير السعة

لنقل ملفات عبر أجهزة USB:

1 صل GT540 بكمبيوتر شخصي باستخدام كبل USB.

2 اختر الإعدادات < بطاقة SD وتخزين الهاتف > تنشيط وسيلة تخزين ذات سعة كبيرة فقط.

3 في شريط الحالة، اسحب رمز USB.

4 اختر تركيب وتوصيل USB.

5 يمكنك عرض محتويات وسيلة تخزين ذات سعة كبيرة على جهاز الكمبيوتر الشخصي ونقل الملفات.

ملاحظة: عليك تثبيت بطاقة SD أولاً من دون بطاقة SD. لا يمكنك استخدام جهاز USB ذات التخزين الكبير السعة.

الموسيقى

يكون مشغل الموسيقى مضمناً في الهاتف GT540 بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك، للوصول إلى مشغل الموسيقى. المس الموسيقى. من هنا يمكنك الوصول إلى عدد من الحافظات:

الفنانون: الاستعراض عبر مجموعتك الموسيقية حسب الفنان.

الألبومات: الاستعراض عبر مجموعتك الموسيقية حسب الألبوم.

الأغاني - يحتوي على كل الأغاني المتوفرة في هاتفك.


قوائم التشغيل - تحتوي على كل قوائم التشغيل التي قمت بإنشائها.


تشغيل أغنية

1 على الشاشة الرئيسية، المس تبويب التطبيقات وحدد **موسيقى**.

2 المس **أغاني**.

3 حدد الأغنية التي تريد تشغيلها.

4 المس  لإيقاف الأغنية مؤقتاً.

5 المس  للتجاوز إلى الأغنية التالية.

6 المس  للعودة إلى الجزء الأول من الأغنية. المس  للعودة إلى الأغنية السابقة.

لتغيير مستوى الصوت أثناء الاستماع إلى الموسيقى، اضغط على مفاتيح مستوى الصوت لأعلى ولأسفل في الجانب الأيسر من الهاتف.

ملاحظة: يمكن أن تكون حقوق النشر


لملفات الموسيقى محمية بموجب المعاهدات الدولية وقوانين حقوق النشر الوطنية.



ولهذا، فقد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها.

تمنع القوانين الوطنية في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر. قبل تحميل أو نسخ الملف، يرجى التحقق من القوانين الوطنية للبلد ذات الصلة والمتعلق باستخدام مثل هذه المواد.

استخدام الراديو


تتوفر في جهاز GT540 ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة والاستماع إليها أثناء التنقل.


2 بعد تحديد الصور، المس  للانتقال إلى الخطوة التالية.

3 المس  لتحديد كل الصور، ثم المس .

4 حدد الموسيقى، ثم عيّن كموسيقى الخلفية.


5 قم بإضافة عنوان فيلم باستخدام لوحة المفاتيح، ثم احفظه.


6 المس  لتشغيل ملف الفيديو الكامل.


7 المس  لحفظ الفيديو الذي قمت بإنشائه.

قص ثلقائي

هناك ثلاثة أنماط من النماذج: **عمودي** و**أفقي**، و**كائنات الحركة**.

1 المس ، ثم حدد فيديو. انتقل إلى الخطوة التالية.

2 المس  لمعاينة ملف الفيديو.

3 المس  لحفظ الملف.


تشغيل لعبة

1 يوقر GT540 عدداً من الألعاب. يمكنك تنزيل المزيد من الألعاب من السوق.


2 المس زر التشغيل لتشغيل لعبة أو تطبيق.


ملاحظة: قد يتم تطبيق مصاريف إضافية عند استخدام هذه الخدمة لتنزيل الألعاب أو التطبيقات غير المجانية.


ملاحظة: يمكن تثبيت لعبة جافا وتطبيقها فقط من خلال الشبكة.


2  **استيراد ملفات** - إضافة ملفات الوسائط إلى لوحة العمل.


يمكنك إضافة إلى حد 32 ملف وسائط.


3  **مدير المقطع** - إدارة ملفات الوسائط التي تمت إضافتها. إذا لم تتم إضافة ملفات وسائط، فسيتم تعطيل الزر.

4  **المعاينة** - معاينة ملف الفيديو الذي قمت بإنشائه.


5  **حفظ** - حفظ ملف الفيديو الذي قمت بإنشائه.


6  **إضافة نص** - قم بإضافة نص إلى لوحة العمل.

عليك لمس  أولاً لتعديل الفيديو.

 - المس لتحديد كل الملفات، لكن

العدد الأقصى هو 32 ملفاً.


 - المس لإلغاء تحديد كل الملفات. 25/32 - يُظهر هذا عدد الملفات المحدد.


 المس للانتقال إلى الخطوة التالية.


فيلم موسيقي

1 قم بالتقليب إلى اليمين واليسار للتحقق من الأنماط المتنوعة.

بالنسبة إلى **فيلم موسيقي**، يمكنك تحديد صور فقط.


 - العودة إلى **شاشة** معدّل الفيديو.

 - اعرض اسم النمط ووصفه.

 - معاينة النمط.

 - المس الصور المحددة.

الوسائط المتعددة

الأشخاص : من الكاميرا، إذا قمت بتعيين تركيز < تتبع الوجه والتقاط صورة. سيتم وضعها على شريط الأشخاص. يمكنك إعطاء كنية جديدة إلى شخص في الصورة. أو اتصل بـ **الأسماء** لمطابقة الصورة مع إسم.

مشغل الوسائط

يعرض حافظة **مشغل الوسائط** قائمة بملفات الفيديو التي قمت بتنزيلها إلى هاتفك أو تسجيلها عليه.

مشاهدة فيديو



1 حدد **مشغل الوسائط** على توبوب التطبيقات.

2 المس **الفيديو** وحدد فيديو لتشغيله.

تلميح! يدعم GT540 تشغيل ملفات فيديو بتنسيق DivX لضمان توفر أكبر للمحتوى.

المس **الموسيقى** وحدد موسيقى لتشغيلها. يمكنك تشغيل أغان. أو تصنيف أغان حسب **الألبوم** و**الفنان**. أو إنشاء قائمة تشغيل.

معدّل الفيديو

1 المس ، ثم حدد معدّل الفيديو .

لوحة العمل


1  **تعين BGM** – إضافة موسيقى الخلفية إلى لوحة العمل. أو تغيير الصوت.


يمكنك تخزين ملفات الوسائط المتعددة في بطاقة الذاكرة بحيث يتوفر لديك وصول سهل إلى كل ملفات الصور والفيديو.

المس توبوب التطبيقات. ثم حدد **المعرض**. يمكنك فتح قائمة من أشرطة الكناالوج التي تحفظ كل ملفات الوسائط المتعددة.


ملاحظة: تأكد من تركيب بطاقة ذاكرة في الهاتف لحفظ الصور والوصول إلى كل الصور. بدون بطاقة ذاكرة. لن يعرض الهاتف أي صور أو ملفات فيديو.

هناك خمسة أشرطة كنالوج كما هو مبين أدناه.


كل : يعرض كل الصور وملفات الفيديو.

المفضلة : إذا قمت ولفترة طويلة بلمس صورة أو فيديو، ستظهر شاشة الخيارات تسمح لك بوضع علامة على الصور كمفضلة. سيظهر شريط **المفضلة** هذا ملفات الصور والفيديو المفضلة لديك.




الفيديو : يعرض كافة ملفات الفيديو.

وضع علامة : كما في شريط المفضلة، يمكنك وضع علامات على الصور. يعرض هذا الشريط ملفات الصور والفيديو التي تم وضع علامات عليها.

الصور ومقاطع الفيديو

- 3 شغّل الفيديو. ثم المس  لالتقاط الشاشة التي تريدها أثناء تشغيل الفيديو.
- 4 تم حفظ الإطار في الهاتف كملف صورة ثابتة.

إضافة مؤثرات صوتية إلى الفيديو


- 1 افتح الفيديو الذي تريد تعديله.
- 2 تحديد **تعديل** . ثم اختر  .
- 3 المس  . ستفتح حافظة أصواتي. اختر المسار الذي تريد إضافته إلى الفيديو.
- 4 سيتم حذف مسار الصوت الأصلي من الفيديو.
- 5 إذا كان الصوت أقصر من الفيديو فاختر ما إذا كنت ترغب في تشغيله مرة واحدة أو تكراره.
- 6 قم باستبدال الملف الموجود. أو احفظه كملف جديد.
- 7 أو يمكنك تسجيل ملف جديد وإدراج مؤثرات صوتية حية من خلال لمس  .
- 8 المس ثم لحفظ المؤثرات الصوتية الحالية.

- 3 المس موافق لحفظ الانتقال. المس التطبيق فقط لتطبيق الانتقال المحدد حالياً. اختر تطبيق علي الكل لتطبيق الانتقال المحدد حالياً على كافة ملفات الفيديو في لوحة العمل.


إضافة نص

- 1 افتح الفيديو الذي تريد تعديله.
- 2 تحديد **تعديل** . ثم حدد  لإضافة نص إلى الفيديو.
- 3 المس  . ثم أوقف التشغيل مؤقتاً لتعيين نقطة البدء لمظهر النص.
- 4 المس بدء. ثم اختر وضع النص. أدخل النص باستخدام لوحة المفاتيح ثم المس تم.
- 5 المس ناحية الشاشة التي تريد ظهور النص فيها ثم المس موافق.
- 6 قم باستبدال الملف الموجود. أو احفظه كملف جديد.
- 7 كرر هذه الخطوات لإضافة المزيد من النص.

إضافة تعديل التأثيرات

- 1 افتح الفيديو الذي تريد تعديله.
- 2 تحديد **تعديل** . ثم حدد  .
- 3 حدد تأثيراً لإضافته إلى الصورة.

الإمساك بإطار

- التقط صورة من الفيديو.
- 1 افتح الفيديو الذي تريد تعديله.
 - 2 تحديد **تعديل** . ثم حدد  .

الصور ومقاطع الفيديو

تعديل الصور

هناك الكثير من الأشياء الرائعة التي يمكنك تطبيقها على صورك لتغييرها، أو الإضافة إليها، أو إضفاء الحيوية إليها.

1 افتح الصورة التي ترغب في تعديلها. ثم المس مفتاح القائمة.

2 المس **تعديل** لتغيير صورتك:

تدوير وتقليب - قم بتدوير وتقليب صورتك للتسلية أو لعرض أفضل.

اقتصاص - اقتصاص الصورة.

اختر منطقة اقتصاص مربعة أو دائرية ثم حرّك إصبعك عبر الشاشة لتحديد المنطقة.

ضبط - هذا يساعدك على ضبط صورة باستخدام لون تلقائي، وسطوع تلقائي، إلخ.

تأثير - المس لتطبيق خيارات التأثير على صورة.

الإطار - إضافة إطارات إلى الصورة.

النص - إضافة نص إلى صورة.

قصاص فنية - إضافة قصاصة فنية إلى صورة.

لوحة الرسم - ارسم على الشكل الحر لصورتك. حدد سماكة الخط من ضمن الخيارات الأربعة ومن ثم اللون الذي تود استخدامه.

طباع - قم بتزيين صورتك

بواسطة الطوابيع. اختر من ضمن مختلف الطوابيع المتوفرة ثم المس الصورة حيثما تريد وضع هذه الطوابيع.

تغيير الحجم - تغيير حجم الصورة.

احفظ التغييرات التي أدخلتها على الصور.


إلغاء التعديل الذي أضفته إلى الصورة.


تعديل ملفات الفيديو

توفر ميزات تعديل الفيديو لتنسيق MPEG-4.


تشذيب طول الفيديو


1 تحديد **تعديل**. ثم اختر .

2 المس . ثم عَيّن نقطتي البدء والإنهاء الجديتين. المس **موافق** وحدد التالي.

3 المس  للعودة إلى المعرض وتجاهل التغييرات.

تحديد وضع الانتقال

1 حدد وضع الانتقال. ثم المس  لمعاينته.

2 المس . ثم اسحب الشريط لضبط المدة الزمنية.

كاميرا الفيديو

مسجل الصوت – اختر كتم الصوت

لتسجيل فيديو بدون صوت.

إخفاء الرموز – حدد إما إخفاء الرموز في قائمة كاميرا الفيديو تلقائيًا أو يدويًا.


الفيديو المسجل – اختر بين تشغيل.

وتعليق، وإيقاف، في حالة تحديد **تشغيل**. بعد عرض شاشة الفيديو المسجل لمدة 1 ثانية، ستذهب إلى المعاينة فورًا.

إعادة التعيين: قم بإعادة تعيين كافة إعدادات كاميرا الفيديو.

تلميح! يمكنك تغيير فيديو التقاطه بالألوان إلى الأسود والأبيض أو البني الداكن، ولكن لن يمكنك تغيير فيديو الأسود والأبيض أو البني الداكن إلى فيديو بالألوان.

مشاهدة ملفات الفيديو المحفوظة

- 1 في محدد المنظر، المس .
- 2 يظهر الأستوديو على الشاشة.
- 3 المس مقطع فيديو مرة واحدة لإحضاره إلى مقدمة الأستوديو. فسوف يبدأ التشغيل تلقائيًا.

التقاط فيديو سريع

- 1 اضغط باستمرار على مفتاح الكاميرا الموجود في الجانب الأيمن من الهاتف.
- 2 ثم، انتقل إلى .
- 3 سيظهر محدد المنظر في كاميرا الفيديو على الشاشة.
- 4 مع حمل الهاتف أفقياً. صوّب العدسة باتجاه موضوع الفيديو.
- 5 اضغط على زر الالتقاط مرةً واحدةً لبدء التسجيل.
- 6 سيظهر REC في أسفل محدد المنظر مع مؤقت يظهر طول الفيديو.
- 7 المس  على الشاشة لإيقاف التسجيل.

بعد التقاط فيديو

تظهر على الشاشة صورةً ثابتةً تمثل الفيديو.

مشاركة

المس لمشاركة مقاطع الفيديو لديك عبر **بلوتوث** أو البريد الإلكتروني أو **Google Mail** أو رسالة وسائط.

ملاحظة: قد يتم فرض رسوم إضافية عند تنزيل رسائل الوسائط أثناء التجوال.


تشغيل


المس لتشغيل الفيديو. المس لتحرير الاسم والفيديو المحدد.


إعادة التسمية

تعديل

المس لتعديل الفيديو. حيث يمكنك تشذيب طول الفيديو. إضافة مؤثرات صوتية أو إضافة تأثيرات.

 المس للوصول إلى مشغل الوسائط وعرض مقاطع الفيديو المحفوظة.

 المس لحذف الفيديو الذي قمت بالتقاطه لتوّك. وأكد ذلك بلمس نعم. يظهر محدد المنظر من جديد.

 المس لالتقاط فيديو آخر على الفور. وسيتم حفظ الفيديو الحالي.

 المس للعودة إلى القائمة السابقة.

استخدام الإعدادات المتقدمة

باستخدام محدد المنظر. المس **الإعدادات** لفتح كل الخيارات المتقدمة. اضبط إعداد كاميرا الفيديو بتدوير البكرة. بعد تحديد الخيار. المس **مفتاح رجوع**.

تأثير الألوان - اختر درجة اللون لاستخدامها مع العرض الجديد لديك.

توازن اللون الأبيض - يضمن توازن اللون الأبيض ظهور أي مناطق بيضاء في الفيديو بصورة واقعية. لتمكين الكاميرا من ضبط توازن اللون الأبيض بطريقة صحيحة. قد تحتاج إلى تحديد شروط الإضاءة. اختر بين **تلقائي متوهج و مشمس. وفلورسنت وغائم**.

المدة - قم بتعيين حد لمدة الفيديو. اختر بين **عادي ورسالة وسائط** لتقييد الحجم الأقصى لإرسال الفيديو كرسالة وسائط.


تلميح! عند اختيار مدة رسالة الوسائط المتعددة. فسوف يتم تعيين جودة الصورة إلى QCIF وستتمكن من التقاط مقاطع فيديو أطول.

كاميرا الفيديو

التعرف على محدّد المنظر

السطوع – يعمل هذا الخيار على تحديد مقدار ضوء الشمس الداخِل للصورة والتحكم فيه. قم بتمرير مؤشر السطوع على طول الشريط باتجاه علامة "-" للحصول على صورة أقل سطوعًا أو باتجاه علامة "+" للحصول على صورة أكثر سطوعًا.

التكبير/التصغير – تكبير أو تصغير. كطريقة بديلة يمكنك استخدام مفاتيح مستوى الصوت الجانبية. قبل البدء في تسجيل فيديو، يمكنك استخدام وظيفة التكبير/التصغير. لا يمكنك التحكم في وظيفة التكبير/التصغير أثناء التسجيل.

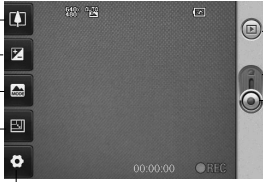

المعرض – يمكنك هذا من الوصول إلى الصور المحفوظة من داخل وضع كاميرا الفيديو. ما عليك سوى لمس. وسيظهر الاستوديو على الشاشة.

وضع الكاميرا – حرك هذا الرمز لأعلى للانتقال إلى وضع الكاميرا.

بدء التسجيل

الإعدادات – المس هذا الرمز لفتح قائمة الإعدادات. انظر استخدام الإعدادات المتقدمة.

حجم الفيديو – المس لتعيين الحجم (بالبكسل) للفيديو الذي تقوم بتسجيله. اختر حجم صورة الفيديو (320x240 QVGA), (640x480 VGA) أو (176x144 QCIF).

وضع المشهد – تعيين الكاميرا بحيث تتناسب مع بيئة الاستخدام. اختر من بين تلقائي، وعمودي، وأفق، ورياضة وغروب الشمس وليل.

تحديد المعالم - نشط هذا الخيار لاستخدام الخدمات المعتمدة على موقع هاتفك . التقط صورا حيثما كنت وضع علامات عليها حول الموقع. في حالة تحميل صور تم وضع علامات عليها إلى مدونة تدعم تحديد المعالم، يمكنك رؤية الصور المعروضة على إحدى الخرائط.

ملاحظة: تتوافر هذه الوظيفة فقط عندما تكون ميزة GPS نشطة.

إخفاء رموز - اختر إخفاء رموز ضبط الكاميرا يدويًا أو تلقائيًا.


الكشف عن طرفه العين - اختر تشغيل لمراجعة الأعين المغلقة بعد التقاط.

إعادة تعيين - لاستعادة كل الإعدادات الافتراضية.

تلميح! عند الخروج من الكاميرا، ستعود كل الإعدادات إلى الوضع الافتراضي فيما عدا حجم الصورة وجودة الصورة. يجب إعادة تعيين كل الإعدادات غير الافتراضية كدرجة اللون وISO. تحقق من ذلك قبل التقاط الصورة التالية.

تلميح! تقع قائمة الإعدادات فوق محدد المنظر. لذا عند القيام بتغيير عناصر ألوان الصورة أو جودتها، ستتمكن من مشاهدة تغييرات الصورة في المعاينة خلف قائمة الإعدادات.

عرض الصور المحفوظة

1 يمكنك الوصول إلى الصور المحفوظة من ضمن وضع الكاميرا. ما عليك سوى لمس  وسيظهر الأستوديو على الشاشة.



المس لعرض معرض من الصور المحفوظة.



المس لحذف الصورة.



المس لالتقاط صورة أخرى على الفور.



المس للعودة إلى القائمة السابقة.

ISO – يحدد تصنيف ISO حساسية جهاز استشعار الضوء في الكاميرا. بقدر ما تكون قيمة ISO عالية، بقدر ما تكون الكاميرا حساسة. يعتبر هذا الأمر مفيداً في الحالات الداكنة عندما لا يكون استخدام الفلاش ممكناً. حدد من بين قيم **ISO Auto** و **100** و **200** و **400**.

وضع المشهد – اختر من بين **تلقائي وعمودي وأفقى ورياضة وليلي وغروب الشمس**.

تأثير الألوان – اختر درجة اللون للصورة الجديدة.

بمجرد تحديد اختيارك، استخدم مفتاح "رجوع" لإغلاق قائمة درجة اللون. وتصبح حينئذٍ جاهزاً لالتقاط صورة.


ملاحظة: يمكنك تغيير الصورة الملونة إلى صورة باللون الأسود والأبيض أو البنّي الداكن ولكن لا يمكنك تغيير صورة باللون الأسود والأبيض أو البنّي الداكن إلى صورة ملونة.

الصورة الملتقطة – اختر من بين تشغيل وتعليق وإيقاف التشغيل. في حالة تحديد تشغيل، تظهر الشاشة بعد التقاط الصورة لمدة ثانية واحدة، ثم تنتقل إلى المعاينة على الفور.

شاشة الشبكة – اختر من ضمن **إيقاف التشغيل** أو **2x2** أو **3x3**.

صوت الغالق – حدد واحد من أصوات الغالق الأربعة.

استخدام الإعدادات المتقدمة

من محدد المنظر. المس  لفتح كافة الخيارات المتقدمة.

يمكنك تغيير ضبط الكاميرا عبر تمرير العجلة. بعد تحديد الخيار، المس مفتاح رجوع.

جودة الصورة – اختر من ضمن دقيقة

جداً ودقيقة وعادية. بقدر ما تكون الجودة دقيقة بقدر ما تكون الصورة واضحة. إلا أن حجم الملف سيزداد مما يعني أنك ستكون قادراً على تخزين صورٍ أقل في الذاكرة.

توازن اللون الأبيض – اختر من بين **تلقائي ومتوهج ومشمس وفلورسنت وغائم**.

وضع اللقطة – اختر من بين عادية ولقطة مستمرة ولقطة تجميلية ولقطة بإطار ولقطة بانوراما ولقطة فنية ولقطة ابتسام.

المؤقت – يسمح لك المؤقت الذاتي بتعيين فترة تأخير بعد ضغط الغالق. اختر بين **إيقاف التشغيل** أو **3 ثوان** أو **5 ثوان** أو **10 ثوان**. هذا خيار مثالي إن أردت تضمين نفسك في الصورة.

تلميح! يمكنك إغلاق كل خيارات القائمة المختصرة للحصول على شاشة أوضح لمحدد المنظر. ما عليك إلا لمس وسط محدد المنظر مرة واحدة. لاستدعاء الخيارات، المس الشاشة مرة أخرى.

استخدام وضع التركيز

يمكنك تحديد وضع التركيز كأحد الخيارات التالية:

تركيز تلقائي – يعمل على ضبط الكاميرا على التركيز تلقائيًا.

الماكرو – يسمح لك وضع الماكرو بالتقاط صور قريبة جدًا. إذا حاولت أخذ لقطة عن قرب ولكن صندوق البؤرة بقي أحمر اللون، فحاول تشغيل وضع الماكرو.

تتبع الوجه – إذا قمت بضبط تتبع الوجه والتقاط صورة، فسوف تعمل الكاميرا على اكتشاف الأوجه البشرية والتركيز عليها تلقائيًا.

بعد حفظ إحدى الصور في المعرض، يمكنك تحديد اسم مستعار لأحد الأشخاص في الصورة عن طريق لمس الوجه مع الاستمرار. وسوف يظهر هذا الاسم في شريط الأفراد الموجود بالمعرض. كما يمكنك أيضًا الوصول إلى خيار الأسماء لمطابقة الصورة مع إسم.

ملاحظة: لا يدعم وضع تتبع الوجه التكبير/التصغير.

يدوي – يعمل هذا الخيار على ضبط الكاميرا لتقوم بالتركيز يدويًا.

التقاط صورة سريعة

- 1 اضغط باستمرار على مفتاح الكاميرا الموجود في الجانب الأيمن من الهاتف.
- 2 أمسك بالهاتف بشكل أفقي مع توجيه العدسة تجاه الهدف المطلوب تصويره.
- 3 اضغط على زر الالتقاط برفق وسوف يظهر صندوق البؤرة في منتصف شاشة محدد المنظر.
- 4 وجه الهاتف بحيث يمكنك رؤية الهدف في صندوق البؤرة.
- 5 عندما يتحوّل لون صندوق البؤرة إلى أخضر، فهذا يعني أن الكاميرا تركز على موضوع الصورة.
- 6 اضغط باستمرار على زر الالتقاط.

بمجرد التقاط الصورة

تظهر الصورة الملتقطة على الشاشة.

مشاركة المس هذا الزر لمشاركة الصور عبر بلوتوث أو البريد الإلكتروني أو Google Mail أو رسائل الوسائط المتعددة أو SNS.

ملاحظة: قد تتم إضافة رسوم إضافية عند تنزيل رسائل الوسائط المتعددة (MMS) أثناء التجوال.

تحديد ك المس هذا الزر لاستخدام الصورة كرمز جهة اتصال أو شاشة قفل أو خلفية.

إعادة التسمية المس لتعديل اسم الصورة المحددة.


تعديل المس لتعديل الصورة مستخدمًا أدوات مختلفة.

الكاميرا

التعرف على محدّد المنظر

السطوع – يعمل هذا الخيار على تحديد مقدار ضوء الشمس الداخل للصورة والتحكم فيه. قم بتمرير مؤشر السطوع على طول الشريط باتجاه علامة "-" للحصول على صورة أقل سطوعًا أو باتجاه علامة "+" للحصول على صورة أكثر سطوعًا.

تكبير/تصغير – يستخدم هذا الخيار للتكبير أو التصغير. كطريقة بديلة يمكنك استخدام مفاتيح مستوى الصوت الجانبية.

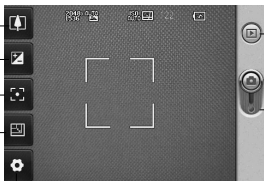

المعرض – يعمل هذا الزر على تمكينك من الوصول إلى الصور المحفوظة في وضع الكاميرا. ما عليك سوى لمس وسيظهر الاستوديو على الشاشة.

التقاط صورة

وضع الفيديو – قم بتمرير هذا الرمز لأسفل للتبديل إلى وضع الفيديو.

الإعدادات – المس هذا الرمز لفتح قائمة الإعدادات. انظر استخدام الإعدادات المتقدمة.

حجم الصورة – المس هذا الرمز لتعيين حجم الصورة الملتقطة (بالبكسل). حدد قيمة البكسل من الخيارات العديدة: (3M (2048 × 1536 أو (2M (1600 × 1200 أو (1M (1280 × 960 أو (VGA (640 × 480 أو (QVGA (320 × 240).

التركيز – المس هذا الرمز لتحديد قائمة الخيارات. راجع استخدام وضع التركيز.

ملاحظة: تحتاج لإدخال بطاقة ذاكرة أولاً لالتقاط صورة. من دون إدخال بطاقة ذاكرة، لن تتمكن من حفظ الصورة التي التقطتها.

عرض وتحديث حالتك

- 1 اختر مجتمعاً تريد الوصول إليه.
- 2 ستظهر صفحة المجتمع الرئيسية. يمكنك رؤية حالة المجتمع الاجتماعي الحالية.
- 3 إذا أردت تحديث حالتك، اضغط على الحالة واكتب الحالة الحالية، ثم المس مشاركة.

ملاحظة: هذا يتوقف على خدمات الشبكة.

حذف حسابات من هاتفك

- 1 في لائحة مدير SN (الشبكات الاجتماعية)، المس مفتاح القائمة والمس حذف حساب.
- 2 اختر وتحقق من المجتمع الذي تريده لحذف حسابك، ثم اضغط على حذف حساب.
- 3 اضغط على موافق للتأكيد.

> إعدادات أخرى <

رسالة الخدمة - اختر ما إذا كنت تريد استلام أو حظر رسائل الخدمة.

إعدادات الإعلام - تنشيط لعرض إعلانات الرسائل في شريط الحالة. حدد أيضاً نغمة رنين وقم بتنشيط الاهتزاز لتنبيهك بوصول رسائل جديدة.

معلومات إعدادات الخدمة - اختر ما إذا كنت تريد حظر أو عرض أو تعديل القنوات لاستلام رسائل خدمة المعلومات (رسائل البث الخلوي). اختر أيضاً لغات رسائل خدمة المعلومات.

الشبكات الاجتماعية

بواسطة هاتفك. يمكنك التمتع بالشبكات الاجتماعية وإدارة مدونتك الصغيرة في مجتمعات على الإنترنت. يمكنك تحديث حالتك الحالية وعرض تحديثات حالات أصدقائك الفعلية.

يمكنك إضافة حسابات Facebook، أو Twitter، أو Bebo إلى هاتفك. إذا لم يكن لديك حساب، يمكنك زيارة مواقعها الخاصة لإعداده.

ملاحظة! قد تفرض تكاليف إضافية عند الاتصال بخدمات على الإنترنت واستخدامها. للحصول على تفاصيل تتعلق بالرسوم المفروضة على البيانات، اتصل بموفر الشبكة.

إضافة حسابك إلى هاتفك

1 على الشاشة الرئيسية، المس تبويب **التطبيقات** لفتح قائمة التطبيقات.

2 قم بالتمرير والمس **SNS**.

3 المس **إضافة حساب** لإضافة حساب شبكة اجتماعية.

4 حدد نوع الحساب الذي تريد إضافته.

5 أدخل عنوان بريدك الإلكتروني وكلمة المرور للذات أعدتهما على مجتمعك، ثم اضغط على **تسجيل الدخول**.

6 انتظر حتى يتم التحقق من حسابك.

7 تأكد من أن مجتمعك في وضع

التشفيل. في حال ضغطت على مجتمعك، يمكنك مشاهدة حالة مجتمعك الاجتماعي الحالية.

تلميح! إذا قمت بإضافة عنصر واجهة استخدام الشبكات الاجتماعية على الشاشة الرئيسية الخاصة بك، سيظهر عنصر واجهة الاستخدام حالتك عندما يستلم هاتفك التحديثات من الشبكة. من دون تسجيل الدخول إلى تطبيق، احصل على تحديثات وعمليات نشر صور الكل. كلها معاً وكل الوقت ومحدثة دائماً.

يمكنك أيضاً الوصول إلى المجتمع الاجتماعي من خلال لمس عنصر واجهة الاستخدام.

تغيير إعدادات حساب البريد الإلكتروني

يمكنك تغيير إعدادات البريد الإلكتروني وفق تفضيلاتك الخاصة.

1 المس رمز بريد إلكتروني في الشاشة الرئيسية. ثم اضغط على الحساب المطلوب.

2 المس مفتاح القائمة لفتح قائمة الخيارات. واضغط على الإعدادات.

3 يمكنك ضبط الخيارات التالية: إعداد الحساب الإعدادات العامة وخيارات التنزيل ورسالة عشوائية.

تغيير إعدادات الرسائل

لقد تم تعريف إعدادات الرسائل بهاتف GT540 مسبقاً لذا يمكنك إرسال الرسائل على الفور. يمكنك تغيير الإعدادات وفقاً لتفضيلاتك.

المس رمز الرسائل بالشاشة الرئيسية. ثم المس مفتاح القائمة. اضغط على الإعدادات.

< إعدادات الرسائل النصية SMS >

تقرير الاستلام - قم بتنشيط هذا الخيار لاستلام إعلام يخبرك بأنه تم استلام رسائلتك.

إدارة رسائل بطاقة SIM -

يعمل على إدارة الرسائل المحفوظة ببطاقة SIM.

مدة الصلاحية - لاختيار فترة بقاء الرسائل محفوظة في مركز الرسائل.

مركز الرسائل النصية - أدخل تفاصيل مركز الرسائل الخاص بك.

< إعدادات رسائل الوسائط المتعددة MMS >

تقرير الاستلام - اختر هذا الخيار لطلب تقرير الاستلام.

تقرير القراءة - اختر هذا الخيار لطلب تقرير قراءة لكل رسالة يتم إرسالها.

استرداد تلقائي - قم بتنشيط هذا الخيار لاسترداد الرسائل تلقائياً.

استرداد تلقائي أثناء التجوال - التنشيط لاسترداد الرسائل أثناء التجوال.

تعيين الأولوية - اختر مستوى الأولوية لرسائل الوسائط المتعددة MMS.

مدة الصلاحية - اختر فترة تخزين رسالتك في مركز الرسائل.

وضع الإنشاء

مفيد: في هذا الوضع. يعمل جهاز عميل MMS فقط على إنشاء رسائل وإرسالها مع محتوى ينتمي إلى مجال محتوى الوسائط المتعددة الأساسي.

تحذير: في هذا الوضع. يعمل جهاز عميل MMS على إرشاد المستخدم لإنشاء الرسائل وإرسالها مع محتوى ينتمي إلى مجال محتوى الوسائط المتعددة الأساسي. يتوفر هذا الإرشاد من خلال مبيعات حوار التحذير.

حرة: في هذا الوضع. يسمح عميل MMS للمستخدم بإضافة أي محتوى إلى الرسالة.

استلام إعلان - يسمح باستلام رسائل إعلانية.


الرسائل/البريد الإلكتروني

XT9 المس لبدء تشغيل نص T9 التنبؤي.

123 @#* اضغط للتبديل بين لوحات مفاتيح الأرقام والرموز والنص.

المس مع الاستمرار  لعرض إعدادات المحرر ولغة الكتابة وأسلوب الإدخال وقاموس المستخدم.

استخدم **Shift** للتمرير عبر مختلف لوحات المفاتيح في كل وضع من أوضاع إدخال النص (مثلاً. الأحرف الكبيرة أو الأحرف الصغيرة).

إدخال مسافة. المس 

وضع T9

يستخدم وضع T9 قاموساً مضميناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسل المفاتيح التي لمستها. يقوم بتوقع الكلمة التي تقوم بإدخالها ويقترح كلمات بديلة.

وضع Abc

يسمح لك هذا الوضع بإدخال الأحرف وذلك بلمس المفتاح الموجود عليه الحرف المطلوب مرة واحدة أو مرتين أو ثلاث أو أربع مرات حتى يظهر الحرف.

وضع 123

يسمح لك هذا الوضع بإدخال الأرقام في رسالة نصية (رقم الهاتف على سبيل المثال) بشكل أسرع. المس المفاتيح المطابقة للأرقام المطلوبة قبل العودة يدوياً إلى وضع إدخال النص المناسب.

إعداد البريد الإلكتروني

ابق على اتصال أثناء التنقل باستخدام هاتف GT540 لإرسال بريد إلكتروني. فعملية إعداد حساب بريد إلكتروني POP3 أو IMAP4 تعتبر عملية بسيطة وسهلة.

1 من الشاشة الرئيسية. المس علامة المتصفح التطبيقات واضغط على بريد إلكتروني لفتح الأسماء. أو يمكنك أيضاً لمس بريد إلكتروني من الشاشة الرئيسية للوصول بشكل مباشر.

2 إذا لم يكن حساب البريد الإلكتروني قد تم تعيينه، فأبدأ معالج إعداد البريد الإلكتروني.

تلميح! في حال تم إعداد حساب بريد إلكتروني مسبقاً، لم يتم تنشيط المعالج تلقائياً.

إرسال بريد إلكتروني باستخدام حسابك الجديد

1 المس رمز بريد إلكتروني من الشاشة الرئيسية. ثم المس إعداد لفتح رسالة جديدة فارغة.

2 أدخل عنوان المستلم. ثم اكتب الرسالة. يمكنك أيضاً إرفاق الصور ومقاطع الفيديو وملفات الصوت وملفات مستندات ذات تنسيقات عديدة.

3 المس إرسال لإرسال البريد الإلكتروني.

تلميح! أثناء مكالمة اتصال Wi-Fi نشطة، يتم إرسال رسائل البريد الإلكتروني واستلامها باستخدام Wi-Fi.

الرسائل/البريد الإلكتروني

الرسائل

يجمع هاتف GT540 ميزات إرسال الرسائل القصيرة SMS ورسائل الوسائط المتعددة MMS في قائمة واحدة ببديهية سهلة الاستخدام.

إرسال رسالة

1 المس رمز الرسائل في الشاشة الرئيسية والمس رسالة جديدة لفتح رسالة فارغة.

2 أدخل رقم هاتف المحمول في حقل إلى. بمجرد إدخال رقم الهاتف. تظهر الأسماء المطابقة. يمكنك لمس المستلم المقترح أو الاستمرار في إدخال رقم الهاتف. يمكنك إضافة جهات اتصال عديدة.

ملاحظة: سيتم فرض رسوم الرسالة النصية لكل شخص ترسل رسالة إليه.

3 المس مربع الرسائل أدناه لبدء إدخال الرسالة.

4 المس مفتاح القائمة لفتح قائمة الخيارات. اختر من بين إضافة موضوع أو إرفاق أو إرسال أو إدراج وجه ضاحك أو حذف مؤشر الترابط أو كل المحادثات أو إضافة على الأسماء.

5 المس إرسال لإرسال الرسالة.

6 تفتح شاشة الرسائل متضمنة الرسالة بعد اسمك. كما تظهر الردود على الشاشة. عند مشاهدة وإرسال رسائل إضافية. يتم إنشاء سلسلة الرسائل.

تحذير: قد يختلف الحد الذي هو 160 حرفاً من بلد إلى آخر رسالة نصية SMS.

تحذير: إذا تم إضافة صورة، أو ملف فيديو أو ملف صوتي إلى رسالة نصية SMS. فسيتم تحويلها تلقائياً إلى رسالة وسائط متعددة MMS.. وسيفرض رسم عليك وفقاً لذلك.

ملاحظة: عند تلقي رسالة قصيرة SMS أثناء وجود مكالمة. فلن يصدر تنبيهاً ولكنك سترى التنبيه بالمكالمة في شريط المؤشر.

إدخال النص لوحة المفاتيح



الأسماء

يمكنك إضافة الأسماء إلى الهاتف ومزامنتها مع الأسماء الموجودة في حساب Google أو الحسابات الأخرى التي تدعم مزامنة الأسماء.

البحث عن جهة اتصال

هناك طريقتان للبحث عن جهة اتصال:

من الشاشة الرئيسية



- 1 من الشاشة الرئيسية، المس **الأسماء** لفتح الأسماء الخاصة بك.
- 2 المس **بحث** وأدخل إسم باستخدام لوحة المفاتيح.

تلميح! للبحث بالمجموعة، المس علامة المتصفح **الأسماء** في الجزء العلوي من الشاشة وحدد **المجموعات**، وسوف يعرض هذا قائمة بالمجموعات الخاصة بك.

في القائمة الرئيسية

- 1 على الشاشة الرئيسية، المس علامة تبويب **التطبيقات** لفتح قائمة التطبيقات.
- 2 المس **الإعدادات** وحدد **بحث**.

إضافة جهة اتصال جديدة

- 1 من الشاشة الرئيسية، المس ، ثم المس **جهة اتصال**.
- 2 إذا أردت إضافة صورة إلى إسم الجديدة، المس . يمكنك استخدام صورة محفوظة أو التقاط واحدة جديدة.
- 3 المس **حقل النص** لفتح لوحة المفاتيح التي تعمل باللمس وأدخل إسم جديد.
- 4 حدد نوع إسم بالضغط على علامة المتصفح **الهاتف** واختر من بين **الهاتف** و **SIM** و **Google**.
- 5 المس فئة معلومات إسم وأدخل تفاصيل إسم.
- 6 المس **تم** لحفظ إسم.

إعادة توجيه المكالمات - يمكنك تكوين كيفية إعادة توجيه المكالمات عند استخدام الهاتف. عند عدم الرد وهكذا. اختر من ضمن **إعادة التوجيه دائماً، إعادة التوجيه عند الانشغال، إعادة التوجيه عند عدم الرد أو إعادة التوجيه عند تعذر الوصول.** ثم أدخل الرقم لإعادة التوجيه إليه.

ملاحظة: يؤدي تحويل المكالمات إلى فرض رسوم. يرجى الاتصال بـمشغل الشبكة للحصول على تفاصيل.

حظر المكالمات - حدد متى ترغب في حظر المكالمات. أدخل كلمة مرور حظر المكالمات.

يرجى التحقق من توفر هذه الخدمة مع مشغل الشبكة.

تكاليف المكالمات - عرض الرسوم التي تم تطبيقها على مكالماتك. تعتمد هذه الخدمة على الشبكة: هذه الوظيفة غير معتمدة من قبل بعض المشغلات.

مدة المكالمة - عرض مدة كل المكالمات بما في ذلك كل المكالمات الصادرة والمستلمة والمكالمة الأخيرة.

إعدادات إضافية للمكالمة - يسمح لك هذا الخيار بتغيير الإعدادات التالية:

هوية المتصل : يسمح لك هذا الخيار بتحديد عرض رقمك في المكالمات الصادرة.


انتظار المكالمات : في حالة تنشيط انتظار المكالمات، سيعلمك الهاتف بوجود مكالمات واردة أثناء استلام مكالماتك.

اختيار الخط : يسمح لك هذا الخيار بتحديد خط.

المكالمات

إجراء مكالمة

- 1 المس  لفتح لوحة المفاتيح.
- 2 أدخل الرقم الموجود على لوحة المفاتيح. لحذف رقم، المس رمز المسح .
- 3 المس رمز الاتصال  لإجراء مكالمة.
- 4 لإنهاء مكالمة، المس إنهاء مكالمة.

تلميح عندما يصدر الهاتف رنينًا، المس رمز صامتة  مع الاستمرار في اللمس بخفة بإصبعك اليسار، إذا رغبت في الانتقال إلى وضع الرنين الصامت.

ضبط مستوى صوت المكالمة

لضبط مستوى الصوت أثناء مكالمة، استخدم مفتاحي رفع وخفض مستوى الصوت الموجودين على الجانب الأيسر من الهاتف.


إعدادات المكالمات

يمكنك تكوين إعدادات المكالمات، مثل إعادة التوجيه وانتظار المكالمات وميزات أخرى يقدمها الناقل.


- 1 على الشاشة الرئيسية، المس علامة تبويب التطبيقات لفتح قائمة التطبيقات.
- 2 قم بالتمرير والمس الإعدادات.
- 3 اضغط على إعدادات المكالمات، واختر الخيارات التي تريد ضبطها.

أرقام الاتصال الثابتة - حدد أرقام الاتصال الثابتة لتشغيل وتجميع قائمة بالأرقام التي يمكن الاتصال بها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 الذي يوفره المشغل، وحدها الأرقام المضمنة في قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها من هاتفك.


البريد الصوتي - إعداد رقم البريد الصوتي.

تلميح لإدخال علامة "+" لإجراء المكالمات الدولية، المس مع الضغط لأسفل على .

الاتصال بالأسماء

- 1 المس  لفتح الأسماء.
- 2 قم بالتمرير عبر قائمة الأسماء أو أدخل الحرف (الأحرف) الأول (الأولى) من إسم التي تريد الاتصال بها بلمس البحث.
- 3 المس إسم التي تريد الاتصال بها في القائمة، ثم حدد الرقم الذي تريد استخدامه إذا توفر أكثر من رقم واحد لجهة الاتصال هذه.

الرد على مكالمة ورفضها

عند رنين الهاتف، اضغط على مفتاح الإرسال للرد. يمكنك أيضاً سحب رمز الاتصال  إلى الجانب الأيمن. اضغط على مفتاح إنهاء لرفض مكالمة واردة.

إعداد حساب Google

عند فتح تطبيق Google للمرة الأولى على الهاتف، سيطلب منك تسجيل الدخول بحساب Google الموجود والخاص بك. سيطلب منك إنشاء حساب Google إذا لم يكن لديك حساباً.

إنشاء حساب Google

1 على الشاشة الرئيسية، المس علامة تبويب **التطبيقات** لفتح قائمة التطبيقات.

2 اضغط على **Google Mail**، واضغط على **التالي** لإنشاء لبدء تشغيل معالج إعدادات Google Mail ثم قم بإعداده.

3 المس حقل نص لفتح لوحة المفاتيح التي تعمل باللمس. وادخل اسمك واسم المستخدم الخاص بحساب Google. أثناء إدخال نص، يمكنك الانتقال إلى حقل النص التالي من خلال لمس **التالي** على لوحة المفاتيح.

4 بعد الانتهاء من إدخال الاسم واسم المستخدم، اضغط على **التالي**. الهاتف على اتصال بخوادم Google ويعمل على التحقق من توفر اسم المستخدم.

5 أدخل كلمة المرور وقم بإعادة إدخالها. ثم اتبع الإرشادات وأدخل معلومات الحساب المطلوبة والاختيارية. انتظر لرؤية الخادم يقوم بإنشاء حسابك.

تسجيل الدخول إلى حساب Google

1 أدخل عنوان البريد الإلكتروني وكلمة المرور، ثم اضغط على **تسجيل الدخول**. انتظر لتسجيل الدخول.

2 بعد تسجيل الدخول، يمكنك استخدام Google Mail والاستفادة من خدمات Google على الهاتف.

3 ما إن تقوم بإعداد حساب Google على الهاتف، ستتم تلقائياً مزامنة الهاتف مع حساب Google على تبويب. (يتوقف ذلك على إعدادات المزامنة.)

بعد تسجيل الدخول، يمكنك استخدام Google و Google Map وتنزيل تطبيقات من Market وإجراء نسخ احتياطي لإعدادات خوادم Google والاستفادة من خدمات Google الأخرى على الهاتف.

الشاشة الرئيسية الخاصة بك

الوصف	الرمز
اهتزاز	
لا توجد بطاقة SD	
البطارية مشحونة بشكل كامل	
جاري شحن البطارية	
البيانات الواردة	
البيانات الصادرة	
البيانات الواردة والصادرة	
USB إلى جهاز الكمبيوتر الشخصي	
تنزيل	
تحميل	
يعمل GPS على التقاط	
GPS مشغّل	
رسالة الخدمة	
إعداد الرسالة	

الوصف	الرمز
Wi-Fi قيد التشغيل ومتصل بنقطة وصول	
سماعة رأس سلكية	
إعادة توجيه المكالمة	
المكالمة قيد الانتظار	
مكبر الصوت	
كتم صوت المكالمة	
مكالمات لم يرد عليها	
تشغيل بلوتوث	
بلوتوث متصل	
تحذير النظام	
المنبه	
بريد صوتي جديد	
وضع الرحلات الجوية	
صامت	

إضافة عناصر واجهة استخدام إلى الشاشة الرئيسية

يمكنك تخصيص الشاشة الرئيسية من خلال إضافة اختصارات، أو عناصر واجهة استخدام أو حافظات، للشعور بمزيد من الراحة عند استخدام الهاتف. قم بإضافة عناصر واجهة الاستخدام المفضلة إلى الشاشة الرئيسية.

ملاحظة: توفر صفحة LG الرئيسية و صفحة Android الرئيسية هذه الوظيفة. إضافة عنصر مطلوب إلى الشاشة الرئيسية:

1 على الشاشة الرئيسية، المس مفتاح القائمة وافتح علامة المتصفح الخيارات. ثم حدد إضافة.

2 في قائمة إضافة إلى الشاشة الرئيسية، المس نوع العنصر الذي تريد إضافته.

3 مثلاً، حدد الحافظات من القائمة واضغط عليها.

4 حدد الأسماء مع أرقام الهاتف من القائمة واضغط عليها.

5 سترى رمز حافظة جديدة على الشاشة الرئيسية، اسحبه إلى المواقع المطلوبة على اللوحة المطلوبة وحرر اصبعك عن الشاشة.

لإزالة رمز تطبيق من الشاشة الرئيسية:

1 المس هذا الرمز واضغط عليه. سيتغير رمز التطبيقات إلى رمز المهمات.

2 اسحب رمز تطبيق وارمه في رمز المهمات.

العودة إلى تطبيق تم استخدامه مؤخراً

1 المس مفتاح الشاشة الرئيسية واضغط عليه. ستظهر الشاشة إطاراً منبثقاً مع رموز تطبيقات استخدمتها مؤخراً.

2 المس رمزاً لفتح التطبيق الخاص به. أو المس مفتاح الرجوع للرجوع إلى التطبيق الحالي.

درج الإشعارات

يتم تشغيل درج الإشعارات في أعلى الشاشة، المس درج الإشعارات ومرره نحو الأسفل بإصبعك. أو المس مفتاح القائمة في الشاشة الرئيسية. وحدد الإشعارات. يمكنك هنا التحقق من حالة Wi-Fi و بلوتوث بالإضافة إلى إشعارات أخرى.

عرض شريط الحالة

يستخدم شريط الحالة عدة رموز لعرض معلومات الهاتف، مثل قوة الإرسال والرسائل الجديدة وفترة عمل البطارية واتصالات بلوتوث والبيانات النشطة. يفسر الجدول التالي معنى الرموز التي من المحتمل أن تشاهدها على شريط الحالة.



[شريط الحالة]


الوصف	الرمز
لا يوجد بطاقة SIM	
لا يوجد إشارة	

الشاشة الرئيسية الخاصة بك

صفحة Android الرئيسية

اضغط بإصبعك إلى اليسار أو اليمين لعرضها. ويمكنك تخصيص كل لوحة مع عناصر واجهة الاستخدام، وتكون اختصارات للتطبيقات والحافظات المفضلة لديك.

اللوحة الوسطى

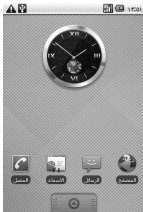

متعددة

المس رمز **التطبيقات** لفتح قائمة التطبيقات.
المس وادفع لأعلى أو لأسفل الشاشة للتمرير عبر التطبيقات.

في شاشة LG الرئيسية يمكنك عرض مفاتيح سريعة في أسفل الشاشة. توفر المفاتيح السريعة وصولاً سهلاً ويلمسة واحدة إلى الوظائف الأكثر استخداماً.



المس رمز الهاتف لإظهار لوحة الاتصال باللمس لإجراء مكالمة.

المس رمز الرسالة للوصول إلى قائمة الرسائل. هنا يمكنك إنشاء رسالة جديدة.

المس رمز التطبيقات لفتح قائمة التطبيقات. المس وادفع لأعلى أو لأسفل الشاشة للتمرير عبر التطبيقات.

الشاشة الرئيسية الخاصة بك

صفحة LG الرئيسية

اضغط بإصبعك إلى اليسار أو اليمين لعرضها. ويمكنك تخصيص كل لوحة مع عناصر واجهة الاستخدام، وتكون اختصارات للتطبيقات والحافظات المفضلة لديك.



تلميح!

تشير النقاط الصغيرة في علامة المتصفح التطبيق في أسفل الشاشة إلى اللوحة التي تقوم بعرضها.

الشاشة الرئيسية الخاصة بك

تلميحَات شاشة اللمس

- لتحديد عنصر اللمس وسط الرمز.
- لا حاجة إلى الضغط بقوة؛ فشاشة اللمس حساسة بشكل كافٍ يتيح لها التعرف على لمسة خفيفة وثابتة.
- استخدم رأس إصبعك لللمس الخيار المطلوب. احترس من عدم لمس أي مفاتيح أخرى.

معايرة اللمس

تشمل معايرة شاشة الجهاز الضغط في وسط علامة التقاطع أثناء تحركها حول الشاشة، يضمن هذا الإجراء تنشيط العنصر الذي يتم الضغط عليه في الشاشة.

في حال لم يتجاوب الهاتف بدقة مع الضغط على الشاشة، اتبع هذه الخطوات لإعادة المعايرة.

1. اضغط على التطبيقات < الإعدادات < الصوت والشاشة. وقم بالتمرير إلى إعدادات اللمس.

2. اللمس معايرة اللمس. واتبع الإرشادات التي تظهر على الشاشة.

3. بعد اكتمال المعايرة، اختر من ضمن التحقق من المعايرة و حفظ من دون التحقق، ثم أكمل المعايرة.


شاشة القفل وإلغاء القفل

عندما لا يكون الهاتف GT540 قيد الاستخدام، يعود إلى شاشة القفل.

إذا لم تستخدم الهاتف لفترة معينة، يتم استبدال الشاشة الرئيسية أو الشاشة الأخرى التي تقوم بعرضها بشاشة القفل ثم تصبح الشاشة داكنة لتوفير طاقة البطارية. لتنشيط الهاتف، اضغط على **إرسال أو الشاشة الرئيسية أو التشغيل.**

عندما تظهر شاشة القفل، قم بتمرير إصبعك إلى الجانب الأيمن لإلغاء قفل الشاشة الرئيسية. تفتح الشاشة الأخيرة التي كنت تستخدمها.

استخدام الشاشة الرئيسية

المس علامة المتصفح التطبيقات  في أسفل الشاشة.

يمكنك عرض كل التطبيقات التي قمت بتثبيتها.

ملاحظة: قد تختلف بعض صور الشاشات وهذا يتوقف على موفر خدمة الهاتف.

تحديد الشاشة الرئيسية الافتراضية

تعتمد واجهة المستخدم على شاشتين رئيسيتين: **صفحة LG الرئيسية و صفحة Android الرئيسية.**

يمكنك تعيين الشاشة الرئيسية المفضلة كالشاشة الافتراضية.

إذا أردت تغيير إعدادات الشاشة الافتراضية، اختر **محدد الشاشة الرئيسية** من قائمة التطبيقات.

التعرّف على الهاتف الخاص بك


5 إذا قمت بضبط وضع القفل. أدخل وضع القفل وحدد **تنسيق**. سيُتم تهيئة البطاقة وتصبح جاهزة للاستخدام.

ملاحظة: إذا توفر محتوى على بطاقة الذاكرة، قد تكون بنية الحافظة مختلفة بعد التنسيق نظرا لحذف كل الملفات.

تلميح

إذا سبق أن كانت بطاقة الذاكرة مثبتة، فيمكنك اتباع الخطوات التالية لتنسيقها.
المس التطبيقات < الضبط > تخزين بطاقة SD والهاتف < تنسيق بطاقة SD > ثم حدد عدم تركيب.

3 أغلق غطاء حماية الفتحة.

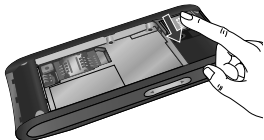

⚠️ تحذير

لا تقم بإدراج بطاقة الذاكرة أو إخراجها عندما يكون الهاتف في وضع التشغيل، وإلا فقد يلحق الضرر ببطاقة الذاكرة والهاتف. وقد تلتف البيانات المحزنة في بطاقة الذاكرة.

تنسيق بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهيأة أصلاً. إذا لم يتم تنسيق بطاقة الذاكرة، فعليك تنسيقها قبل أن تبدأ باستخدامها.

ملاحظة: يتم حذف كل الملفات الموجودة على البطاقة عندما تقوم بتنسيق البطاقة.

1 على الشاشة الرئيسية، المس علامة المتصفح **التطبيقات** لفتح قائمة التطبيقات.

2 قم بالتمرير والمس الإعدادات.

3 قم بالتمرير إلى والمس تخزين الهاتف وبطاقة SD < تنسيق بطاقة SD.

4 المس **تنسيق بطاقة SD**، ثم قم بتأكيد خيارك.

ملاحظة: الهاتف GT540 مزود بهوائي داخلي. احرص على عدم خدش أو تلف هذا الجانب الخلفي. إذ قد يؤدي ذلك إلى توقف الجهاز عن التشغيل.

تثبيت بطاقة الذاكرة

لتخزين ملفات وسائط متعددة إضافية مثل الصور الملتقطة من خلال كاميرا مدمجة. يجب أن تقوم بإدخال بطاقة ذاكرة إلى الهاتف.

لإدخال بطاقة الذاكرة:

1 قم بإيقاف تشغيل الهاتف قبل إدخال بطاقة الذاكرة أو إزالتها. انزع الغطاء الخلفي.

2 افتح غطاء حماية الفتحة وأدخل بطاقة الذاكرة في الفتحة. تأكد من كون ناحية الملامسات الذهبية موجهة نحو الأسفل.




التعرّف على الهاتف الخاص بك


ملاحظة! في حال لم يتصل الهاتف بشبكة عند إدراج بطاقة SIM وتشغيله، يرجى الاتصال بموفر الخدمة للحصول على تفاصيل اسم نقطة الوصول.

3 أدخل البطاقة في مكانها من خلال محاذاة الملامسات الذهبية الموجودة على الهاتف مع البطارية ثم اضغط بلطف على البطارية حتى تستقر في مكانها.


شحن الهاتف

حرّك إلى الخلف غطاء موصل الشاحن الموجود على جانب الهاتف GT540. أدخل الشاحن، وقم بتوصيله بمأخذ كهربائي. يجب شحن GT540 إلى أن ترى .

ملاحظة: يجب شحن البطارية بالكامل أولاً لتحسين فترة عمل البطارية.

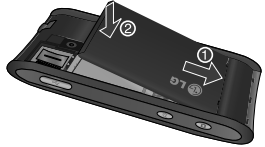


4 استبدل الغطاء الخلفي من الهاتف وقم بتمريره نحو الأسفل في مكانه حتى سماع صوت طقطقة تثبت المزلاج.

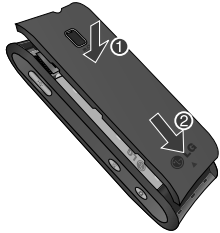


تركيب بطاقة SIM والبطارية

قبل البدء باستكشاف الهاتف الجديد، يجب أن تقوم بإعداده. لإدراج بطاقة SIM والبطارية:

1 مع الإمساك بجهة الهاتف الخلفية باتجاهك، قم بإزالة الغطاء الخلفي. لإزالة الغطاء الخلفي، اضغط بقوة بأصابعك على أي جانب للغطاء الخلفي و↓قم بتمرير الغطاء إلى أسفل عدسة الكاميرا.

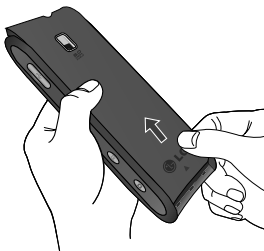

2 أدخل بطاقة SIM داخل حامل بطاقة SIM. تأكد من كون ناحية الملامسات الذهبية الموجودة على البطاقة موجهة نحو الأسفل.

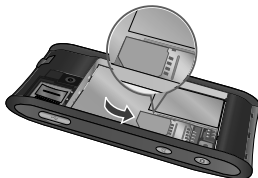

التعرّف على الهاتف الخاص بك

مفاتيح مستوى الصوت

- على الشاشة الرئيسية:
تتحكم بمستوى صوت الرنين.
- أثناء مكالمة: يتحكم بمستوى صوت سماعة الأذن.
- عند تشغيل مسار: تحكم بمستوى الصوت باستمرار.

الشاحن، موصل كبل USB الصغير

مفتاح البحث

- ابحث عن المتصفح
والمحتويات في الهاتف.

مفتاح الكاميرا

- انتقل مباشرة إلى قائمة
الكاميرا عبر الضغط باستمرار
على المفتاح.

موصل سماعة الأذن استيريو

عدسة الكاميرا

فتحة بطاقة الذاكرة microSD

الشاحن، موصل كبل USB الصغير

الغطاء الخلفي

البطارية

فتحة بطاقة SIM

مفتاح الكاميرا

مفتاح البحث

التعرّف على الهاتف الخاص بك

سماعة الأذن

مفتاح القائمة

- يقوم بفتح قائمة التطبيق والتحقق من الخيارات المتوفرة.

مفتاح الرجوع

- يعود إلى الشاشة السابقة.

مفتاح الإرسال

- يقوم بطلب رقم هاتف والإجابة على المكالمات الواردة.

مفتاح الإنهاء/التشغيل / الإيقاف

- يقوم بإنهاء مكالمة أو رفضها.
- يعمل على تشغيل/ إيقاف تشغيل الهاتف بالضغط على المفتاح باستمرار.
- يعمل على إيقاف تشغيل الشاشة وإيقافها.

مفتاح الشاشة الرئيسية

- يعود إلى الشاشة الرئيسية من أي شاشة.

الميكروفون

ملاحظات هامة

ملاحظة: قم بإلغاء قفل الشاشة عند استخدام اتصال البيانات

سوف تصبح الشاشة مظلمة إذا لم يتم لمسها لفترة من الوقت عند استخدام اتصال البيانات. لتشغيل شاشة LCD، ما عليك إلا لمسها.

تلميحاً

لاستخدام بطاقة microSD بالهاتف مرة أخرى، ستحتاج لفتح نافذة الإعلام ولمس "إيقاف تشغيل تخزين USB".

في هذه الأثناء، لا يمكنك الوصول لبطاقة microSD من هاتفك. ولذا لا يمكنك استخدام التطبيقات التي تعتمد على بطاقة microSD كالكاميرا والمعرض والموسيقى.

لفصل الهاتف عن الكمبيوتر، اتبع بعناية الإرشادات التي تظهر على الكمبيوتر لإلغاء تثبيت بطاقة microSD وفصل أجهزة USB بشكل صحيح لتفادي فقدان البيانات الموجودة على البطاقة.

1. قم بإلغاء تثبيت بطاقة microSD من الكمبيوتر.

2. قم بفتح نافذة الإعلام ولمس إيقاف تشغيل تخزين USB.

3. قم بلمس إيقاف في مربع الحوار الذي يفتح.

ملاحظة: يمكن فقط حفظ التطبيقات على ذاكرة الهاتف الداخلية.

خبراً

لا تقم بإدراج بطاقة الذاكرة أو إخراجها عندما يكون الهاتف في وضع التشغيل. وإلا فقد يلحق الضرر بطاقة الذاكرة والهاتف. وقد تلتف البيانات المخزنة في بطاقة الذاكرة. لإخراج بطاقة الذاكرة بطريقة آمنة، يرجى تحديد الإعدادات < تخزين الهاتف وبطاقة SD > إلغاء تثبيت بطاقة SD.

8. فتح وتغيير التطبيقات

يُعد القيام بمهام متعددة أمراً سهلاً مع Android لأن التطبيقات المفتوحة تظل قيد التشغيل حتى في حالة فتح تطبيق آخر. لا توجد حاجة للخروج من التطبيق قبل فتح آخر. يمكنك استخدام العديد من التطبيقات المفتوحة والتنقل بينها. حيث يقوم برنامج Android بإدارة كل تطبيق وإيقافه وتشغيله عند الحاجة وذلك للتأكد من أن التطبيقات الخاملة لا تستهلك موارد بشكل غير ضروري.

إيقاف استخدام التطبيق الذي تستخدمه

1. من الشاشة الرئيسية، المس علامة تبويب **تطبيقات** وحدد **الإعدادات** < **التطبيقات** < إدارة التطبيقات.
2. قم بالتمرير إلى التطبيق المطلوب والمس **إنهاء** لإيقاف استخدامه.

9. توصيل الهاتف بالكمبيوتر عبر USB

ملاحظة: أنت بحاجة إلى برنامج PC Suite <http://www.lgmobile.com> لاستخدام هاتف GT540 مع الكمبيوتر عبر كبل USB.

لا يدعم GT540 الآتي:

- الإتصال بالكمبيوتر عبر بلوتوث.
- المزامنة عبر LG Air Sync (مزامنة المتصفح، R-Click، وعلى شاشة الهاتف (OSP))
- المهام، المذكرة و البريد الإلكتروني في التقويم
- تطبيقات جافا

دليل مستخدم PC Suite IV متوفر في قائمة المساعدة بعد تثبيت PC Suite IV.

1. استخدم كبل USB الذي يأتي مع الهاتف لتوصيل الهاتف بمنفذ USB الموجود بالكمبيوتر. وسوف تتلقى إعلاماً بأنه تم توصيل الجهاز عبر USB
 2. افتح نافذة الإعلام والمس جهاز USB الذي تم توصيله.
 3. المس **تثبيت** لتأكيد رغبتك في نقل الملفات بين بطاقة microSD بالهاتف والكمبيوتر.
- عند توصيل الهاتف كوحدة تخزين USB، سوف تتلقى إعلاماً بذلك. لقد تم تثبيت بطاقة microSD الخاصة بالهاتف كأحد محركات الأقراص بالكمبيوتر. يمكنك الآن نسخ الملفات من بطاقة microSD.

ملاحظات هامة

1. من الشاشة الرئيسية، المس علامة تبويب **التطبيقات** وحدد **الإعدادات** > **عنصر التحكم اللاسلكية** > **إعدادات Wi-Fi**.
2. المس **Wi-Fi** لتشغيله وبدء البحث عن شبكات Wi-Fi المتاحة.
 - يتم عرض قائمة بشبكات Wi-Fi المتاحة. كما تتم الإشارة إلى الشبكات المؤمنة برمز القفل.
3. المس إحدى الشبكات للاتصال بها.
 - إذا كانت الشبكة مفتوحة، ستتم مطالبتك بتأكيد رغبتك في الاتصال بهذه الشبكة عن طريق لمس **اتصال**.
 - إذا كانت الشبكة مؤمنة، فستتم مطالبتك بإدخال كلمة مرور أو بيانات اعتماد أخرى. (راجع **مسؤول الشبكة** للتعرف على التفاصيل.)
4. يعرض شريط الحالة رموز تشير إلى حالة Wi-Fi.

7. استخدام بطاقة microSD

- يمكن حفظ الصور بالإضافة إلى ملفات الموسيقى والفيديو على ذاكرة خارجية فقط.
- قبل استخدام الكاميرا المدمجة، ستحتاج إلى إدخال بطاقة ذاكرة micro SD إلى هاتفك أولاً.
- بدون إدخال بطاقة ذاكرة، لن تتمكن من حفظ الصور ومقاطع الفيديو التي قمت بتسجيلها.

3. بعد إلغاء تثبيت التطبيق، قم بإيقاف تشغيل الهاتف وإعادة التمهيد.

* استخدام إعادة ضبط الإعدادات (إعدادات الشركة المصنعة)

في حالة عدم رجوعه إلى الحالة الأصلية، استخدم **إعادة ضبط الإعدادات** لهيئة الهاتف. عند تشغيل الهاتف وظهور شاشة القفل، اضغط مع الاستمرار على مفاتيح رفع مستوى الصوت + الشاشة الرئيسية + بحث في نفس الوقت (لمدة خمس ثوانٍ). عند ظهور الشاشة المنبثقة، اختر موافق لإعادة تعيين الهاتف. يرجى ملاحظة أنه بعد تنفيذ **إعادة ضبط الإعدادات**، سيتم مسح كل البيانات والتطبيقات من هاتفك ولن يمكن استعادتها.

تحذيراً

في حالة تنفيذ إعادة ضبط الإعدادات، سيتم حذف كل تطبيقات المستخدم وبيانات المستخدم. يرجى تذكر الاحتفاظ بأي معلومات هامة قبل تنفيذ **إعادة ضبط الإعدادات**.

6. التوصليل بشبكات Wi-Fi

بفضل استخدام تقنية Wi-Fi بهاتفك، يمكنك الوصول إلى نقطة وصول لاسلكية أو "نقطة فعالة"، تكون بعض نقاط الوصول مفتوحة ويمكنك ببساطة الاتصال بها. في حين تكون بعض النقاط الأخرى مخفية أو تطبق ميزات أمان. لذا يلزمك تكوين الهاتف حتى يمكنه الاتصال بها.

أوقف تشغيل ميزة Wi-Fi عند عدم استخدامها وذلك لإطالة عمر البطارية.

لتشغيل ميزة Wi-Fi والاتصال بشبكة Wi-Fi

2. يعرض الجزء العلوي من الشاشة وقت استخدام البطارية. سواء الفترة التي مرت منذ آخر توصيل لها بمصدر طاقة أو إذا تم توصيلها بمصدر طاقة. فما هي الفترة التي مرت على استخدام طاقة البطارية. يعرض الجزء الرئيسي بالشاشة التطبيقات والخدمات التي تستخدم طاقة البطارية بدلاً من ما يستهلك أكبر قدر من الطاقة وصولاً إلى ما يستهلك أقل قدر من الطاقة.

3. تثبيت برنامج Open Source OS

إذا قمت بتثبيت برنامج Open Source OS على هاتفك. ولم تستخدم البرنامج الذي توفره الجهة المصنعة. فقد لا يعمل الهاتف بشكل صحيح.

تحذير: في حالة استخدام برنامج يختلف عن الذي توفره الجهة المصنعة، فسوف تبطل كفاءة الهاتف.

تحذير: لحماية الهاتف والبيانات الشخصية، قم بتنزيل التطبيقات من المصادر الموثوق بها فقط. على سبيل المثال من Market. في حالة عدم تثبيت بعض التطبيقات بالهاتف بشكل سليم، قد لا يعمل الهاتف بشكل طبيعي أو قد يحدث خطأ جسيم. ستكون بحاجة إلى إلغاء تثبيت هذه التطبيقات وكل بياناتها وإعداداتها من الهاتف.

4. استخدام وضع إلغاء القفل

قم بضبط وضع إلغاء القفل لتأمين الهاتف. حيث يتم فتح مجموعة من الشاشات ترشدك عن طريق رسم شاشة وضع إلغاء القفل.

تحذير: ينبغي أخذ الاحتياطات اللازمة عند استخدام وضع القفل

من الهام تذكر وضع إلغاء القفل الذي قمت بتعيينه. لن تتمكن من الوصول إلى الهاتف إذا استخدمت نمطاً غير صحيح 5 مرات. بعد محاولة استخدام وضع إلغاء القفل 5 مرات، يمكنك لمس خيار نسيان النمط واستخدام معلومات حساب Google الخاص بك لإلغاء قفل الهاتف.

إذا لم يكن لديك حساب Google، أو لم تقم بإنشاء حساب Google بهاتفك أو نسيته، يمكنك عندئذ استخدام إعادة ضبط الإعدادات.

5. استخدام الوضع الآمن إعادة ضبط الإعدادات

استخدام الوضع الآمن

* لاستعادة الهاتف من حالة التعطل

1. قم بإيقاف تشغيل الهاتف. ثم إعادة التمهيد. أثناء رجوع الهاتف لحالة التشغيل، اضغط مع الاستمرار على مفتاح الشاشة الرئيسية أثناء عرض سجل Android. سيقوم الهاتف بالتمهيد بكامل الخطوات إلى الشاشة الرئيسية ويعرض الوضع الآمن " في الزاوية اليمنى السفلى.

2. حدد الإعدادات > التطبيقات > إدارة

التطبيقات، ثم اختر التطبيق وحدد رمز إلغاء التثبيت.

ملاحظات هامة

يرجى التحقق لمعرفة ما إذا كان قد تم وصف أي مشكلة من المشاكل التي تواجهها مع هاتفك في هذا القسم قبل نقل الهاتف إلى الصيانة أو قبل الاتصال بممثل الصيانة.

1. ذاكرة الهاتف

عندما تكون المساحة المتاحة على ذاكرة الهاتف أقل من 10%، فإن الهاتف لن يستطيع استقبال رسالة جديدة. لذا تحتاج إلى التحقق من ذاكرة الهاتف وحذف بعض البيانات مثل التطبيقات أو الرسائل لإتاحة المزيد من الذاكرة.

الإدارة التطبيق

1. من الشاشة الرئيسية، المس علامة تبويب تطبيقات وحدد الإعدادات < التطبيقات > إدارة التطبيقات.
2. عندما تظهر جميع التطبيقات، قم بالتمرير وحدد التطبيق الذي تريد إلغاء تثبيته.
3. انتقل لعلامة تبويب إلغاء والمس "موافق" أو إلغاء التطبيق المطلوب.

2. تحسين فترة عمر البطارية

يمكنك تمديد عمر البطارية بين مرات الشحن عن طريق إيقاف الميزات التي تحتاج إلى تشغيلها بصورة مستمرة في الخلفية. يمكنك أيضًا مراقبة كيفية استهلاك التطبيقات وموارد النظام لطاقة البطارية.

تمديد عمر البطارية

- قم بإيقاف تشغيل الاتصالات اللاسلكية التي لا تستخدمها. إذا كنت لا تستخدم Wi-Fi، أو بلوتوث، أو GPS، فاستخدم إعدادات التطبيق لإيقاف تشغيلها.
- قلل سطوع الشاشة واضبط مهلة أقصر للشاشة.
- قم بإيقاف المزامنة الآلية لتطبيقات Google Mail، والتقويم، والأسماء والتطبيقات الأخرى.
- قد تؤثر بعض التطبيقات التي قمت بتنزيلها على عمر البطارية. ستكون بحاجة إلى إلغاء تثبيت هذه التطبيقات وكل بياناتها وإعداداتها من الهاتف.

للتحقق من مستوى شحن البطارية

1. على الشاشة الرئيسية، المس علامة تبويب التطبيقات وحدد الإعدادات < حول الهاتف > الحالة.
2. يتم عرض حالة البطارية (جار الشحن، التفريغ) والمستوى (مثل النسبة المئوية لاكتمال الشحن) في أعلى الشاشة.

لمراقبة ما يستخدم البطارية والتحكم فيه

1. على الشاشة الرئيسية، المس علامة تبويب "التطبيقات" وحدد الإعدادات < حول الهاتف > استخدام البطارية.

- معلومات حول البطارية والعناية بها
- لتست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى، ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فنشواحن LG مصممة لإطالة فترة عمر البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة، فقد يؤدي ذلك إلى تراجع أداء البطارية.
- قد تتعرض لخطر الانفجار إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلص منها في المهملات المنزلية.
- إذا كان استبدال البطارية ضرورياً، فقم بأخذها إلى أقرب فرع صيانة LG Electronics أو وكيل معتمد من LG Electronics للحصول على المساعدة.
- افصل دائماً الشاحن عن مأخذ الحائط بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- يتوقف عمر البطارية الفعلي على تكوين الشبكة وإعدادات المنتج ونمط الاستخدام ونوع البطارية والأوضاع البيئية.

إرشادات لاستخدام أمن و فعال

- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة. فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من ضبط الصوت على مستوى معقول بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملحاً خصوصاً بالقرب من الطرقات.

في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف الخلوي، أو قم بتنشيط وضع الطيران قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قبل طاقم الطائرة.

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتسبب الاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن جميع شبكات الهاتف المحمول. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ؛ راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

تجنب إلحاق الضرر بسمعك

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك. وبناء عليه فنحن نوصي بالألا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي أيضاً بضغط مستوى صوت معقول للموسيقى والمكالمات.

القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية. في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته. توقف عن استخدام الجهاز المحمول إلى أن يتم استبدال الزجاج من قبل موفر خدمة معتمد.

مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود، واتبع الأنظمة أو القوانين.

تشغيل فعّال للهاتف

الأجهزة الإلكترونية

• قد تتعرّض كل الهواتف الخلوية للتشويش، مما قد يؤثر على أدائها.

• لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. تجنّب وضع الهاتف على أجهزة ضبط النبض، مثلاً، في الجيب على مستوى الصدر.

• قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.

• قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.

السلامة على الطرقات

• تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف الخلوية أثناء القيادة في المنطقة.

• لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.

• عليك دوماً تركيز كامل الانتباه على القيادة.

• استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.

• توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.

• قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل أجهزة الاستريو ومعدات السلامة.

• أوقف تشغيل الهاتف في أية منطقة حيثما يلزمك ذلك اتباعاً للوائح خاصة. على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.

• لا تمسك الهاتف بيدين رطبتين فيما يكون شحنه جار. فقد يتسبّب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.

• يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال فقد يسخن الهاتف مما قد ينطوي على خطر اندلاع حريق.

• استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو مرقق القوام أو الكحول).

• لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.

• اشحن الهاتف في منطقة ذات تهوية جيدة.

• لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.

• لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.

• لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

• لا تعرّض الهاتف للسوائل أو الرطوبة. استخدم الملحقات مثل سماعات الأذن بحذر. لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

إرشادات لاستخدام آمن و فعال

- معلومات بيانات SAR للمقيمين في بلدان/مناطق تبني حد SAR الموصى به من قِبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) وهو 1.6 واط/كجم كمتوسط لكل جرام واحد (1) من النسيج.

العناية بالمنتج وصيانه



تحذير

استخدم البطاريات والشواحن والملحقات المعتمدة للاستخدام مع طراز الهاتف المعين هذا فقط. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق على الهاتف المحمول. وقد يكون خطيرا.

- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والرايو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل أجهزة السخانات أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.

يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمرا خطرا أو غير قانوني.

التعرّض لطاقة التردد اللاسلكي

معلومات حول التعرّض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR)

لقد تم تصميم طراز الهاتف الخليوي GT540 هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق والمتعلقة بالتعرّض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.

- وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرّض للموجات اللاسلكية.
- إن حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين (ICNIRP) هو 2 واط/كجم، وهو حد مقسّم على نحو متناسب على ما بزن 10 جرامات من النسيج.
- تبلغ أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختياره بواسطة DASy4 للاستخدام على الأذن 1.23 واط/كيلوجرام (10 جرام) وعند الحمل على الجسد تبلغ 1.39 واط/كيلوجرام (10 جرام).

55..... الإعدادات

55..... عناصر التحكم اللاسلكية

55..... إعدادات الصوت

55..... إعدادات الشاشة

55..... مزامنة البيانات

56..... الحماية والموقع

لتأمين شاشتك باستخدام وضع القفل

56.....

56..... تطبيقات

57..... بطاقة SD وتخزين الهاتف

57..... التاريخ والوقت

57..... الموقع والنص

57..... بحث

57..... إمكانية الوصول

57..... تركيب الكلام

57..... حول الهاتف

57..... تسجيل DivX VOD

58..... Wi-Fi

58..... 1. كيفية إعداد Wi-Fi

58..... 2. دعم وضع شبكة Wi-Fi

59.. 3. كيف تحصل على عنوان MAC

60..... تحديث البرنامج

60..... تحديث برنامج الهاتف

60.....  DivX Mobile

61..... الملحقات

63..... استكشاف الأخطاء وإصلاحها

نقل ملفات عبر أجهزة USB ذات	36	الكاميرا.....
47.....التخزين الكبير السعة	36	التعرّف على محدّد المنظر.....
47.....الموسيقى	37	استخدام وضع التركيز.....
47.....تشغيل أغنية	37	التقاط صورة سريعة.....
47.....استخدام الراديو	37	بمجرد التقاط الصورة.....
48.....البحث عن محطات	38	استخدام الإعدادات المتقدمة.....
48.....الاستماع إلى الراديو.....	39	عرض الصور المحفوظة.....
49.....تطبيقات Google	40	كاميرا الفيديو.....
49.....خرائط Google	40	التعرّف على محدّد المنظر.....
49.....Google Mail	41	التقاط فيديو سريع.....
49.....Google Talk	41	بعد التقاط فيديو.....
50.....(SAM)SlideME مدير التطبيقات	41	استخدام الإعدادات المتقدمة.....
50.....إكتشف التطبيقات	42	مشاهدة ملفات الفيديو المحفوظة.....
50.....تحميل تطبيقات مجانية	43	الصور و مقاطع الفيديو.....
50.....شراء تطبيقات	43	تعديل الصور.....
51.....بطاقة SD	43	تعديل ملفات الفيديو.....
51.....تحديث قائمة التطبيقات	43	تشذيب طول الفيديو.....
51.....خزانة التخزين	43	تحديد وضع الانتقال.....
52.....أدوات مساعدة	44	إضافة نص.....
52.....ضبط المنبه	44	إضافة تعديل التأثيرات.....
52.....استخدام الحاسبة	44	الإمساك بإطار.....
52.....إضافة حدث إلى التقويم	44	إضافة مؤثرات صوتية إلى الفيديو.....
53.....مسجّل الصوت	45	الوسائط المتعددة.....
53.....تسجيل ملف صوتي أو صوت	45	مشغل الوسائط
53.....Quickoffice	45	معدّل الفيديو.....
54.....المتصفح	45	لوحة العمل.....
54.....تغيير إعدادات المتصفح	46	فيلم موسيقي.....
54.....استخدام شريط أداة ويب	46	قص تلقائي.....
54.....تغيير إعدادات مستعرض ويب	46	تشغيل لعبة.....

المحتويات

27.....إعداد حساب Google	6..... إرشادات لاستخدام آمن و فعال
27..... إنشاء حساب Google	10..... ملاحظات هامة
27..... تسجيل الدخول إلى حساب Google	1. ذاكرة الهاتف
28..... الكلمات	2. تحسين فترة عمر البطارية
28..... الاتصال بالأسماء	3. تثبيت برنامج Open Source OS
28..... الرد على مكالمة ورفضها	4. استخدام وضع إلغاء القفل
28..... ضبط مستوى صوت المكالمة	5. استخدام الوضع الآمن إعادة ضبط الإعدادات
28..... إعدادات الكلمات	6. التوصيل بشبكات Wi-Fi
30..... الأسماء	7. استخدام بطاقة microSD
30..... البحث عن جهة اتصال	8. فتح وتغيير التطبيقات
30..... إضافة جهة اتصال جديدة	9. توصيل الهاتف بالكمبيوتر عبر USB
31..... الرسائل/البريد الإلكتروني	13.....
31..... الرسائل	15..... التعرف على الهاتف الخاص بك
31..... إرسال رسالة	17..... تركيب بطاقة SIM والبطارية
31..... إدخال النص	18..... شحن الهاتف
32..... وضع T9	19..... تثبيت بطاقة الذاكرة
32..... وضع Abc	19..... تنسيق بطاقة الذاكرة
32..... وضع 123	21..... الشاشة الرئيسية الخاصة بك
32..... إعداد البريد الإلكتروني	21..... تلميح شاشة اللمس
إرسال بريد إلكتروني باستخدام	21..... معايرة اللمس
32..... حسابك الجديد	21..... شاشة القفل وإلغاء القفل
تغيير إعدادات حساب البريد الإلكتروني	21..... استخدام الشاشة الرئيسية
33.....	تحديد الشاشة الرئيسية الافتراضية
33..... تغيير إعدادات الرسائل	21.....
33..... وضع الإنشاء	22..... صفحة LG الرئيسية
34..... الشبكات الاجتماعية	24..... صفحة Android الرئيسية
34..... إضافة حسابك إلى هاتفك	إضافة عناصر واجهة استخدام إلى
35..... عرض وتحديث حالتك	25..... الشاشة الرئيسية
35..... حذف حسابات من هاتفك	العودة إلى تطبيق تم استخدامه مؤخراً
	25.....

تهانينا لشرائك الهاتف المتقدم والصغير الحجم
GT540 من LG، والمصمّم للعمل مع تقنية
الاتصال الرقمي الأحدث للهواتف المحمولة.



دليل مستخدم GT540

- عربي

- قد لا تنطبق بعض محتويات هذا الدليل على هاتفك وهذا يتوقف على برنامج الهاتف أو موفر الخدمة لديك.
- هذا الجهاز غير مخصص للمكفوفين نظراً للوحة المفاتيح التي تعمل باللمس.
- Copyright ©2010 LG Electronics, Inc جميع الحقوق محفوظة. LG وشعار LG هما علامتان تجاريتان مسجلتان لمجموعة LG Group والكيانات التابعة. كل العلامات التجارية الأخرى تعود إلى مالكيها.
- Google™ وشعار Google و Google™ و Google Maps™ و Google Mail™ و YouTube™ و Google Talk™ و Android™ و هي علامات تجارية لـ Google, Inc.

